

















Safety Instructions

Proline Promag 53

HART, PROFIBUS DP/PA, FOUNDATION Fieldbus, MODBUS RS485 Division 1

Ex documentation



Safety instructions for electrical apparatus for explosion-hazardous areas according to FACTORY MUTUAL standards \to Page 3



Safety instructions for electrical apparatus for explosion-hazardous areas according to CANADIAN STANDARDS ASSOCIATION \to Page 15




Examples for markings according to FM and CSA:



Temperature Class

remperature olass										
Maximum surface temperature										
T1	T1 842 °F									
T2	572 °F	300 °C								
T2A	536 °F	280 °C								
T2B	500 °F	260 °C								
T2C	446 °F	230 °C								
T2D	419 °F	215 °C								
Т3	392 °F	200 °C								
T3A	356 °F	180 °C								
ТЗВ	329 °F	165 °C								
T3C	320 °F	160 °C								
T4	275 °F	135 °C								
T4A	248 °F	120 °C								
T5	212 °F	100 °C								
T6	185 °F	85 °C								

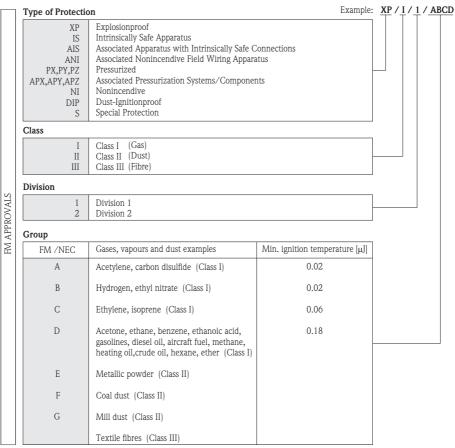



Temperature Class

0111	Maximum surface temperature									
T1	450 °C	842 °F								
T2	300 °C	572 °F								
T2A	280 °C	536 °F								
T2B	260 °C	500 °F								
T2C	230 °C	446 °F								
T2D	215 °C	419 °F								
Т3	200 °C	392 °F								
T3A	180 °C	356 °F								
ТЗВ	165 °C	329 °F								
T3C	160 °C	320 °F								
T4	135 °C	275 °F								
T4A	120 °C	248 °F								
T5	100 °C	212 °F								
T6	85 °C	185 °F								

Canadian Standards Association

Class		Example: C	Class I, Division 1, Group ABCD
III II	Class I (Gas) Class II (Dust) Class III (Fibre)		
Division			
1 2	Division 1 Division 2]
Group			
CSC /NEC	Gases, vapours and dust examples	Min. ignition temperature $[\mu J]$	
A	Acetylene, carbon disulfide (Class I)	0.02	
В	Hydrogen, ethyl nitrate (Class I)	0.02	
С	Ethylene, isoprene (Class I)	0.06	
D	Acetone, ethane, benzene (Class I)	0.18	
Е	Metallic powder (Class II)		
F	Coal dust (Class II)		
G	Mill dust (Class II)		
	Textile fibres (Class III)		
Type of Protection	on		
Associated Nonin	ratus with Intrinsically Safe Connections ncendive Field Wiring Apparatus urization Systems/Components		

A0005630



















Safety Instructions

Proline Promag 53

HART, PROFIBUS DP/PA, FOUNDATION Fieldbus, MODBUS RS485 Division 1

← Ex documentation

This document is an integral part of the following Operating Instructions:

- BA047D, Proline Promag 53 HART
- BA053D, Proline Promag 53 PROFIBUS DP/PA
- BA051D, Proline Promag 53 FOUNDATION Fieldbus BA117D, Proline Promag 53 MODBUS RS485

Table of Contents FM

Special conditions	4
General warnings	∠
Approvals	∠
Description of measuring system	5
Nameplate	5
Type code	6
Temperature table compact version	7
Design of measuring system	7
Cable entries	7
Cable specification	7
Potential equalization	7
Electrical connection	8
Terminal assignment and connection data, power supply	9
Terminal assignment and connection data for signal circuits (intrinsically safe circuits)	9
Terminal assignment and connection data for signal circuits (non-intrinsically safe circuits)	11
Service adapter	12
Device fuse	12
Technical Data	13
Control Descriptor	1.0





Special conditions

- Install per National Electrical Code ANSI/NFPA 70.
- Control room equipment shall not use or generate more than 250 V rms.
- The device must be integrated into the potential equalization system.
- For terminals No. 20 to No. 27 of the transmitter, only devices with ratings $U_m \le 250 \text{ V}$ and $I_m \le 500 \text{ mA}$ are allowed to be connected (does not apply to intrinsically safe circuits).
- The specified temperature class in conjunction with the ambient temperature and the medium temperature must be in compliance with the tables on Page 7.
- It is not permissible to connect the service adapter whilst the atmosphere is considered to be explosive.
- Use of the devices is restricted to mediums against which the process-wetted materials are adequately resistant.
- Transmitter enclosure is factory sealed for use in Class I, Div. 1, Groups A, B, C, D.



ullet Use supply wires suitable for 9 °F above ambient temperature, but at least for 176 °F.

General warnings

- Installation, connection to the electricity supply, commissioning and maintenance of the devices must be carried out by qualified specialists trained to work on Ex-rated devices.
- Compliance with national regulations relating to the installation of devices in potentially explosive atmospheres is mandatory, if such regulations exist.
- Open the device only when it is de-energized (and after a delay of at least 10 minutes following shutdown
 of the power supply).
- The housing of the Ex-rated transmitter can be turned in 90° steps. Whereas the non-Ex version has a bayonet adapter, however, the Ex version has a thread. Recesses for centering the worm screw are provided to prevent inadvertent movement of the transmitter housing.

 It is permissible to turn the transmitter housing through a maximum of 180° during operation (in either direction), without compromising explosion protection. After turning the housing the worm screw must be tightened again.
- The screw cap has to be removed before the local display can be turned, and this must be done with the device de-energized (and after a delay of at least 10 minutes following shutdown of the power supply).

Approvals

General

The system meets the fundamental health and safety requirements for the design and construction of devices and protective systems intended for use in potentially explosive atmospheres in accordance with the National Electrical Code.

No. / approval type

J.I. 3002554

Notified body

FM: Factory Mutual Research

Identification

The identification of the system contains the following specifications:

- XP-IS-DIP / I, II, III / 1 / ABCDEFG / T5-T1
- XP-IS / I / 1 / IÍC / T5-T1



Description of measuring system

The measuring system consists of a compact version: transmitters and sensors form a mechanical unit.

Nameplate

The nameplates, which are mounted in a clearly visible position on the transmitter and sensor, contain all of the relevant information about the measuring system.

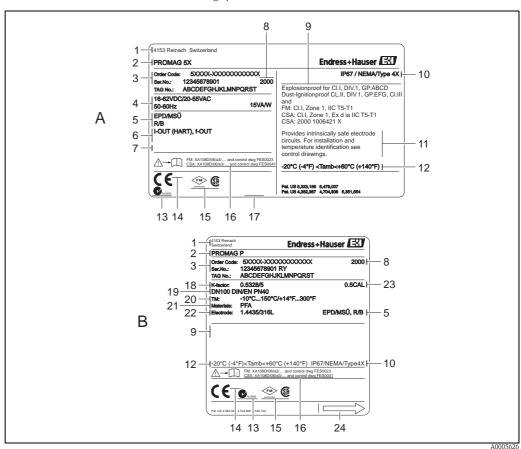



Fig. 1: Example for nameplates of a transmitter and of a sensor

- A Transmitter nameplate
- B Sensor nameplate
- 1 Manufacturer / Certificate recipient
- 2 Transmitter or sensor type
- 3 Order code and serial number
- 4 Power supply, frequency and power consumption
- 5 Additional specifications, e.g. EPD = empty pipe detection, RB = reference electrode, etc. (only if present)
- 6 Available inputs/outputs
- 7 Space for additional information on special products
- 8 Year of manufacture
- 9 Space for additional information
- 10 Type of protection
- 11 Space for notes, e.g. delays, etc. (only if necessary)
- 12 Ambient temperature range
- 13 C-Tick symbol
- 14 Space for notified body for quality assurance monitoring
- 15 Label of notified body: Factory Mutual Research
- 16 Associated Ex documentation
- 17 Space for other approval specifications and certificates, e.g. PROFIBUS, etc. (only if present)
- 18 Calibration factor/zero point
- 19 Nominal diameter/nominal pressure
- 20 Fluid temperature range
- 21 Lining material
- 22 Measuring electrode material
- 23 Calibration tolerance
- 24 Direction of flow



Type code

The type code describes the exact design and the equipment of the measuring system. It can be read on the nameplate of the transmitter and sensor and is structured as follows:

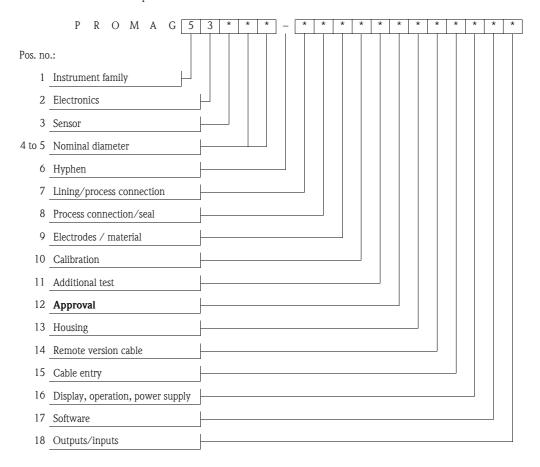

Transmitter approval (Pos. no. 12 in the type code)

	*	Approval
Ī		XP-IS-DIP / I, II, III / 1 / ABCDEFG / T5-T1
		XP-IS / I / 1 / IIC / T5-T1



Temperature table compact version

Max. medium temperature [°F] for T3B-T5 in relation to the ambient temperature T_a

	DN	T _a	T5 (212 °F)	T4A (248 °F)	T4 (275 °F)	T3C (320 °F)	T2 (572 °F)	T1 (842 °F)
Promag 5*W**-******	1" to 12" ¹⁾	+122 °F	122	140	140	140	140	140
110IIIag 5 VV -	2" to 12" ²⁾	+122 1	122	176	176	176	176	176

¹⁾ with polyurethane lining; 2) with hard-rubber lining

	DN	Ta	T5 (212 °F)	T4A (248 °F)	T4 (275 °F)	T3C (320 °F)	T2 (572 °F)	T1 (842 °F)
	1" to 8" ¹⁾	+104 °F	122	230	266	302	302	302
	½" to 12" ²⁾	T104 I	122	230	200	266	266	266
	1" to 8" ¹⁾ 1/2" to 12" ²⁾	+113 °F	122	230	266	266	266	266
	1" to 8" ¹⁾ 1/2" to 12" ²⁾	+122 °F	122	230	230	230	230	230


¹⁾ with PFA lining; 2) with PTFE lining

	DN	Ta	T5 (212 °F)	T4A (248 °F)	T4 (275 °F)	T3C (320 °F)	T3B (329 °F)	T2 (572 °F)	T1 (842 °F)
Promag 5*H**_********		+104 °F	122	230	266	302	302	302	302
	1/12" to 4"	+113 °F	122	230	266	266	266	266	266
		+122 °F	122	230	230	230	230	230	230

Note!

- At the specified medium temperatures, the equipment is not subjected to temperatures impermissible for the temperature class in question.
- The minimum permitted ambient temperature is -4 °F.
- A version for a minimum permitted ambient temperature of -40 °F is optionally available.

Design of measuring system

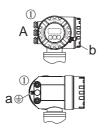

A0005620

Fig. 2: Design of the measuring system, compact/remote version

- A Transmitter housing
- a Screw terminal for connecting to the potential equalization
- b Connection compartment cover
- ① see following chapter "Cable entries"

Cable entries

1 Cable entries for transmitter terminal compartment (XP version) power supply/communication cable. Choice of thread for cable entry: $\frac{1}{2}$ NPT.

Make sure that the XP cable glands/entries are secured to prevent working loose.

Cable specification

You can find information about the cable specification in the associated Operating Instructions.

Potential equalization

The transmitter (compact and remote version) must be safely integrated into the potential equalization via the screw terminal on the outside of the transmitter housing. Alternatively, the transmitter of the compact version as of serial number 4Axxxxxx000 can be integrated into the potential equalization via the pipeline as long as the pipeline provides a ground connection conforming to regulations.

Note!

Further information about potential equalization, screening and grounding can be found in the associated Operating Instructions.



Potential equalization for fieldbus versions, when both sides of the screen are grounded

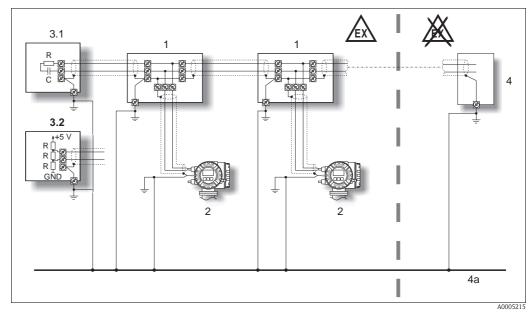


Fig. 3: Example for connecting potential equalization lines

- 1 Distributor/T-Box
- 2 Bus devices for potentially explosive atmospheres
- 3.1 Bus termination PROFIBUS PA or FOUNDATION Fieldbus
- 3.2 Bus termination PROFIBUS DP or MODBUS RS485
- 4 Bus power supply unit or automation system
- 4a Potential equalization line is fed out into the safe area


Note!

The length of the spurs is to consider.

Electrical connection

Connection compartment

Transmitter housing compact/remote version (terminal assignment, connection data \rightarrow Page 9 ff.)

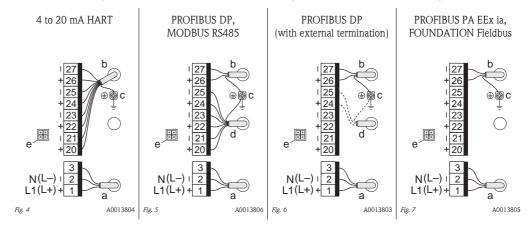

- a Power supply cable (terminal assignment and connection data \rightarrow Page 9)
- b Signal cable (terminal assignment and connection data \rightarrow Page 9 ff.)
- c Ground terminal
- d PROFIBUS DP resp. MODBUS RS485 versions:
 - -N, P, O, V, T (Fig. 5): Signal cable (terminal assignment and connection data $\rightarrow Page 9 ff$.)
 - J (Fig. 6): Power supply cable for external termination (optional); terminal 24: +5 V / 25: DGND

e Service adapter (see also Page 12)



Terminal assignment and connection data, power supply

Terminal assignment and connection data

all transmitters	1 L (+)	1 L (+) 2 N (-)					
Designation		Supply voltage (see nameplate)					
Functional values	AC: U = 20 to 55 V,	AC: $U = 85$ to 260 V or AC: $U = 20$ to 55 V, DC: $U = 16$ to 62 V Power consumption: 15 VA / 15 W					
Intrinsically safe circuit	sically safe circuit no						
U _m	260	260 V AC					

Terminal assignment and connection data for signal circuits (intrinsically safe circuits)

Note!

The following tables contain values/specifications, which are dependent on the type code (type of measuring device). Please compare the following type code to the one shown on the nameplate of your measuring device. A graphic representation of the electrical connections can be found on Page 8.

Terminal assignment of transmitter 53***-*******F

T		Terminal no. (inputs/outputs)									
Transmitter	20 (+)	21 (-)	22 (+)	23 (-)	24 (+) 25 (-)		26 (+)	27 (-)			
Assignment							PRO	FIBUS PA			
	-	-	-	-	-	-	PA +	PA -			
Electric circuit	-	-	-	_	-	-		Ex ia			
Safety-related values	-	-	-	-	-	-	$\begin{array}{c} U_i \\ I_i \\ P_i \\ L_i \\ C_i \\ \text{FISCO} \end{array}$	30 V DC 500 mA 5.5 W ≤ 10 µH ≤ 5 nF Field Device			
Functional values	-		-	-		_		galvanically isolated, U_{Bus} 9 to 32 V DC I_{Bus} 11 mA IEC 61158-2 (MBP)			

T		Terminal no. (inputs/outputs)											
Transmitter	20 (+)	21 (-)	22 (+)	23 (-)	24 (+)	25 (-)	26 (+)	27(-)					
Assignment							FOUNDA	ATION Fieldbus					
	-	_		_		_	FF +	FF –					
Electric circuit	-	_				-		Ex ia					
Safety-related values	-	-				-	$\begin{array}{c} U_i \\ I_i \\ P_i \\ L_i \\ C_i \\ \text{FISCO} \end{array}$	30 V DC 500 mA 5.5 W ≤ 10 µH ≤ 5 nF Field Device					
Functional values	-	-		_		-	galvanically i U _{Bus} I _{Bus} IEC 61158-2	9 to 32 V DC 12 mA					



Terminal assignment of transmitter 53***-*********

T		Terminal no. (inputs/outputs)											
Transmitter	20 (+)	21 (-)	22 (+)	23 (-)	24 (+)	25 (-)	26 (+)	27 (-)					
Assignment		_	-		Pulse/frequency output, passive			output HART, active					
Electric circuit	-	-	-	-		Ex ia		Ex ia					
Safety-related values	-	-	-	-	U _i I _i P _i L _i IIC C _i IIC	30 V DC 300 mA 600 mW 0 6 nF	$\begin{array}{c} U_{o} \\ I_{o} \\ P_{o} \\ L_{o} \\ C_{o} \\ U_{i} \\ I_{i} \\ P_{i} \\ L_{i} \\ C_{i} \end{array}$	21.8 V DC 90 mA 490 mW 4.1 mH 150 nF 30 V DC ¹⁾ 10 mA ¹⁾ 0.3 W ¹⁾ 0 6 nF					
Functional values		-	-	_	galvanically isolated, passive: 30 V DC / 250 mA Open Collector Full scale frequency 2 to 5000 Hz galvanically isolated active: 0/4 to 20 m $R_L < 400 \ \Omega$ $R_L \ HART \ge 250 \ \Omega$		20 mA						

¹⁾ The interconnection must be assessed according to the valid construction provisions.

Terminal assignment of transmitter 53***-********T

Transmitter	Terminal no. (inputs/outputs)								
Transmitter	20 (+)	21 (-)	22 (+)	23 (-)	24 (+)	25 (-)	26 (+)	27 (-)	
Assignment	_		_			quency output, passive	Current output HART, passive		
Electric circuit	-	-		_	Ex ia Ex ia			Ex ia	
Safety-related values	-	-		-	U _i I _i P _i L _i IIC C _i IIC	30 V DC 300 mA 600 mW 0 6 nF	U _i I _i P _i L _i IIC C _i IIC	30 V DC 100 mA 1.25 W negligible 6 nF	
Functional values	-	-	-	_	Open Collect	DC / 250 mA	galvanically is passive: 4 to voltage drop $R_L < [(V_{supply})]$	20 mA	



Terminal assignment and connection data for signal circuits (non-intrinsically safe circuits)

Note!

The following tables contain values/specifications, which are dependent on the type code (type of measuring device). Please compare the following type code to the one shown on the nameplate of your measuring device. A graphic representation of the electrical connections can be found on Page 8.

Terminal assignment

T	Terminal no. (inputs/outputs)								
Transmitter	20 (+) 21 (-)	22 (+) 23 (-)	24 (+) 25 (-)	26 (+) 27 (-)					
Non-convertible con	nmunication boards (fixed	d assignment)							
53***-**A	_	_	Pulse/frequency output	Current output HART					
53***-**B	Relay output 2	Relay output 1	Pulse/frequency output	Current output HART					
53***-**I	_	_	External termination	PROFIBUS DP *					
55)	_	_	+5 V DGND	В А					
53***-**K	_	_	_	FOUNDATION Fieldbus					
				FF + FF -					
53***-**Q	_	_	Status input	MODBUS RS485 *					
33 d			Status input	B A					
Convertible commun	nication boards	T							
53***-**C	Relay output 2	Relay output 1	Pulse/frequency output	Current output HART					
53***-**D	Status input	Relay output	Pulse/frequency output	Current output HART					
53***-**L	Status input	Relay output 2	Relay output 1	Current output HART					
53***-**M	Status input	Pulse/frequency output	frequency output Pulse/frequency output						
53***-**N	Current output	Pulse/frequency output	Status input	MODBUS RS485					
				PROFIBUS DP *					
53***-**P	Current output	Pulse/frequency output	Status input	В А					
52+++ + +W	D 1 0	D 1 1	C	PROFIBUS DP *					
53***-**V	Relay output 2	Relay output 1	Status input	В А					
53***-**2	Relay output	Current output	Pulse/frequency output	Current output HART					
53***- **4	Current input	Relay output	Pulse/frequency output	Current output HART					
53***-**5	Status input	Current input	Pulse/frequency output	Current output HART					
53***-**7	Relay output 2	Relay output 1	Status input	MODBUS RS485 7 B A					
	1	I							

Safety-related and functional values of signal circuits $ightarrow \ Page \ 12$

^{*} PROFIBUS DP, MODBUS RS485:

⁻ terminal 26 $(+) \rightarrow B (RxD/TxD-P)$

⁻ terminal 27 (−) \rightarrow A (RxD/TxD-N)



Safety-related and functional values of signal circuits

Signal circuits	Functional values	Safety-related values			
Current output HART	galvanically isolated, active/passive can be selected: active: $0/4$ to 20 mA $R_L < 700 \Omega$, R_L HART $\geq 250 \Omega$ passive: 4 to 20 mA $V_S = 18$ to 30 V DC, $R_i \geq 150 \Omega$	intrinsically safe U_m I_m	= no = 250 V = 500 mA		
Current output	galvanically isolated, active/passive can be selected: active: $0/4$ to 20 mA $R_L < 700 \Omega$ passive: 4 to 20 mA $V_s = 18$ to 30 V DC, $R_i \ge 150 \Omega$				
Pulse/frequency output	galvanically isolated, active/passive can be selected: active: 24 V DC / 25 mA (max. 250 mA during 20 ms) $R_L > 100 \Omega$ passive: 30 V DC / 250 mA Open Collector				
	Full scale frequency 2 to 10000 Hz $(f_{max} = 12500 \text{ Hz})$				
Status output	galvanically isolated, Open Collector max. 30 V AC / 250 mA				
Relay output	galvanically isolated, max. 30 V AC / 500 mA max. 60 V DC / 100 mA				
Current input	galvanically isolated, active/passive can be selected: • active: 4 to 20 mA, $R_i \le 150 \Omega$ $U_{out} = 24 \text{ V DC}$, short-circuit proof				
	• passive: 0/4 to 20 mA, R_i < 150 Ω U_{max} = 30 V DC				
Status input (53***_**D, L, M)	galvanically isolated, 3 to 30 V DC , $R_i=5~\text{k}\Omega$				
Status input (53***_**N, P, Q, V, 7)	galvanically isolated, independent of polarity 3 to 30 V DC , $R_i=3\ k\Omega$				
PROFIBUS DP	galvanically isolated, RS485 as per Standard EIA/TIA-485				
FOUNDATION Fieldbus	galvanically isolated, $U_{Bus} = 9$ to 32 V DC $I_{Bus} = 12$ mA IEC 61158-2 (MBP)				
MODBUS RS485	galvanically isolated, RS485 as per Standard EIA/TIA-485				

Service adapter

The service adapter is only used for connecting service interfaces approved by Endress+Hauser.

It is not permissible to connect the service adapter whilst the atmosphere is considered to be explosive.

Device fuse

⚠ Warning!

Use only fuses of the following types; the fuses are installed on the power supply board:

- Voltage 20 to 55 V AC / 16 to 62 V DC:
 Fuse 2.0 A slow-blow, disconnect capacity 1500 A (Schurter, 0001.2503 or Wickmann, Standard Type 181 2.0 A)
- Voltage 85 to 260 V AC: Fuse 0.8 A slow-blow, disconnect capacity 1500 A (Schurter, 0001.2507 or Wickmann, Standard Type 181 0.8 A)



Technical Data

Dimensions

Please refer to the respective Technical Information for these dimensions:

- Promag 50W, 53W → TI046D
 Promag 50P, 53P → TI047D
 Promag 50H, 53H → TI048D

Weight

The weight of the EEx $\,\mathrm{d}$ version is approx. 4.4 lbs greater than that of the standard version.

Control Drawings

Endress+Hauser Reinach hereby declares that the product is in conformity with the requirements of the FACTORY MUTUAL standard.

Note!

The "Documentation/Important Information" folder provided with the measuring device contains a CD-ROM with all the Control Drawings.





















Safety Instructions

Proline Promag 53

HART, PROFIBUS DP/PA, FOUNDATION Fieldbus, MODBUS RS485 Division 1

® Ex documentation

This document is an integral part of the following Operating Instructions:

- BA047D, Proline Promag 53 HART
- BA053D, Proline Promag 53 PROFIBUS DP/PA
- BA051D, Proline Promag 53 FOUNDATION Fieldbus BA117D, Proline Promag 53 MODBUS RS485

Table of Contents CSA

Special conditions	16
General warnings	16
Approvals	1 <i>6</i>
Description of measuring system	17
Nameplate	17
Type code	18
Temperature table compact version	19
Design of measuring system	19
Cable entries	19
Cable specification	19
Potential equalization	19
Electrical connection	20
Terminal assignment and connection data, power supply	21
Terminal assignment and connection data for signal circuits (intrinsically safe circuits)	21
Terminal assignment and connection data for signal circuits (non-intrinsically safe circuits)	23
Service adapter	24
Device fuse	24
Technical Data	25
Control Drawings	25





Special conditions

- Install per Canadian Electrical Code.
- Control room equipment shall not use or generate more than 250 V rms.
- The device must be integrated into the potential equalization system.
- For terminals No. 20 to No. 27 of the transmitter, only devices with ratings $U_m \le 250 \text{ V}$ and $I_m \le 500 \text{ mA}$ are allowed to be connected (does not apply to intrinsically safe circuits).
- The specified temperature class in conjunction with the ambient temperature and the medium temperature must be in compliance with the tables on Page 19.
- It is not permissible to connect the service adapter whilst the atmosphere is considered to be explosive.
- Use of the devices is restricted to mediums against which the process-wetted materials are adequately resistant.
- Transmitter enclosure is factory sealed for use in Class I, Div. 1, Groups B, C, D.



■ Use supply wires suitable for 5 °C above ambient temperature, but at least for 80 °C.

General warnings

- Installation, connection to the electricity supply, commissioning and maintenance of the devices must be carried out by qualified specialists trained to work on Ex-rated devices.
- Compliance with national regulations relating to the installation of devices in potentially explosive atmospheres is mandatory, if such regulations exist.
- Open the device only when it is de-energized (and after a delay of at least 10 minutes following shutdown
 of the power supply).
- The housing of the Ex-rated transmitter can be turned in 90° steps. Whereas the non-Ex version has a bayonet adapter, however, the Ex version has a thread. Recesses for centering the worm screw are provided to prevent inadvertent movement of the transmitter housing.

 It is permissible to turn the transmitter housing through a maximum of 180° during operation (in either direction), without compromising explosion protection. After turning the housing the worm screw must be tightened again.
- The screw cap has to be removed before the local display can be turned, and this must be done with the device de-energized (and after a delay of at least 10 minutes following shutdown of the power supply).

Approvals

General

The system meets the fundamental health and safety requirements for the design and construction of devices and protective systems intended for use in potentially explosive atmospheres in accordance with the Canadian Electrical Code.

Certification number

160686-1006421

Inspection body

CSA: Canadian Standard Association

Identification

The identification of the system contains the following specifications:

- Class I, Groups ABCD
- Class I, Zone 1, Group IIC
- Class II, Groups EFG
- Class IIÍ



Description of measuring system

The measuring system consists of a compact version: transmitters and sensors form a mechanical unit.

Nameplate

The nameplates, which are mounted in a clearly visible position on the transmitter and sensor, contain all of the relevant information about the measuring system.

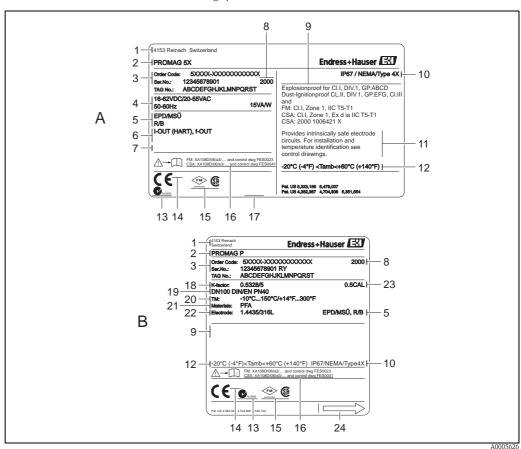



Fig. 1: Example for nameplates of a transmitter and of a sensor

- A Transmitter nameplate
- B Sensor nameplate
- 1 Manufacturer / Certificate recipient
- 2 Transmitter or sensor type
- 3 Order code and serial number
- 4 Power supply, frequency and power consumption
- 5 Additional specifications, e.g. EPD = empty pipe detection, RB = reference electrode, etc. (only if present)
- 6 Available inputs/outputs
- 7 Space for additional information on special products
- 8 Year of manufacture
- 9 Space for additional information
- 10 Type of protection
- 11 Space for notes, e.g. delays, etc. (only if necessary)
- 12 Ambient temperature range
- 13 C-Tick symbol
- 14 Space for notified body for quality assurance monitoring
- 15 Label of notified body: Canadian Standards Association
- 16 Associated Ex documentation
- 17 Space for other approval specifications and certificates, e.g. PROFIBUS, etc. (only if present)
- 18 Calibration factor/zero point
- 19 Nominal diameter/nominal pressure
- 20 Fluid temperature range
- 21 Lining material
- 22 Measuring electrode material
- 23 Calibration tolerance
- 24 Direction of flow



Type code

The type code describes the exact design and the equipment of the measuring system. It can be read on the nameplate of the transmitter and sensor and is structured as follows:

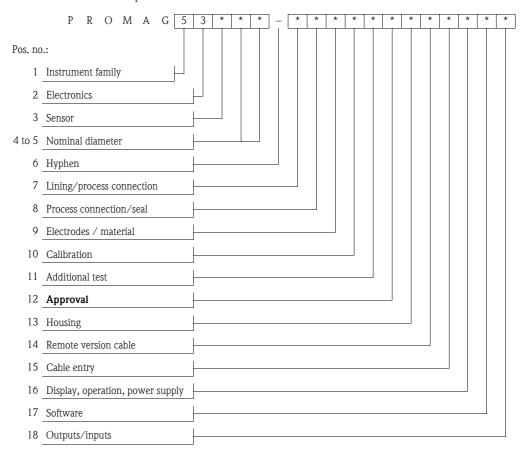

Transmitter approval (Pos. no. 12 in the type code)

*	Approval
N	Explosionproof and Dust-Ignitionproof for:
	Class I, Groups ABCDClass I, Zone 1, Group IIC
	■ Class II, Groups EFG ■ Class III
	- Guo II



Temperature table compact version

Max. medium temperature [$^{\circ}$ C] for T3B-T5 in relation to the ambient temperature T_a

	DN	T _a	T5 (100 °C)	T4A (120 °C)	T4 (135 °C)	T3C (160 °C)	T2 (300 °C)	T1 (450 °C)
Promag 5*W**_******	25 to 300 ¹⁾	+50 °C	50	60	60	60	60	60
110mag 5 W -	50 to 300 ²⁾	+30 C	50	80	80	80	80	80

¹⁾ with polyurethane lining; 2) with hard-rubber lining

	DN	Ta	T5 (100 °C)	T4A (120 °C)	T4 (135 °C)	T3C (160 °C)	T2 (300 °C)	T1 (450 °C)
	25 to 200 ¹⁾	+40 °C	50	110	130	150	150	150
	15 to 300 ²⁾	+40 C	30	110	150	130	130	130
Promag 5*P**_******	25 to 200 ¹⁾	+45 °C	50	110	130	130	130	130
Tromag 5 T -	15 to 300 ²⁾	T43 C	30	110	130	130	130	130
	25 to 200 ¹⁾	+50 °C	50	110	110	110	110	110
	15 to 300 ²⁾	+30 C	30	110	110	110	110	110


¹⁾ with PFA lining; 2) with PTFE lining

	DN	Ta	T5 (100 °C)	T4A (120 °C)	T4 (135 °C)	T3C (160 °C)	T3B (165 °C)	T2 (300 °C)	T1 (450 °C)
Promag 5*H**-******* 2 to		+40 °C	50	110	130	150	150	150	150
	2 to 100	+45 °C	50	110	130	130	130	130	130
		+50 °C	50	110	110	110	110	110	110

Note!

- At the specified medium temperatures, the equipment is not subjected to temperatures impermissible for the temperature class in question.
- The minimum permitted ambient temperature is -20 °C.
- A version for a minimum permitted ambient temperature of -40 °C is optionally available.

Design of measuring system

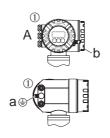

A0005620

Fig. 2: Design of the measuring system, compact/remote version

- A Transmitter housing
- a Screw terminal for connecting to the potential equalization
- b Connection compartment cover
- ① see following chapter "Cable entries"

Cable entries

1 Cable entries for transmitter terminal compartment (XP version) power supply/communication cable. Choice of thread for cable entry: $\frac{1}{2}$ " NPT.

Make sure that the XP cable glands/entries are secured to prevent working loose and that the seals are installed immediately adjacent to the housing, if required (Class I, Div. 1, Group A).

Cable specification

You can find information about the cable specification in the associated Operating Instructions.

Potential equalization

The transmitter (compact and remote version) must be safely integrated into the potential equalization via the screw terminal on the outside of the transmitter housing. Alternatively, the transmitter of the compact version as of serial number 4Axxxxxx000 can be integrated into the potential equalization via the pipeline as long as the pipeline provides a ground connection conforming to regulations.

Note 🇠

Further information about potential equalization, screening and grounding can be found in the associated Operating Instructions.



Potential equalization for fieldbus versions, when both sides of the screen are grounded

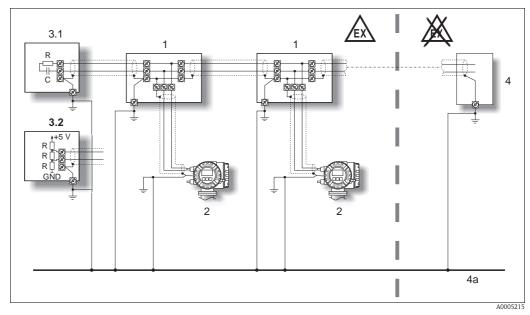


Fig. 3: Example for connecting potential equalization lines

- 1 Distributor/T-Box
- 2 Bus devices for potentially explosive atmospheres
- 3.1 Bus termination PROFIBUS PA
- 3.2 Bus termination PROFIBUS DP
- 4 Bus power supply unit or automation system
- 4a Potential equalization line is fed out into the safe area


Note!

The length of the spurs is to consider.

Electrical connection

Connection compartment

Transmitter housing compact/remote version (terminal assignment, connection data \rightarrow Page 21 ff.)

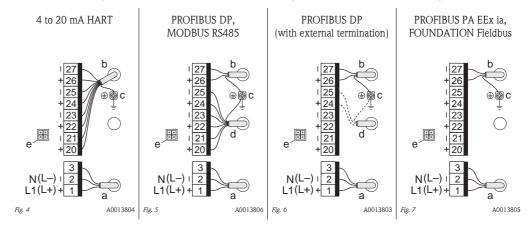

- a Power supply cable (terminal assignment and connection data ightarrow Page 21)
- b Signal cable (terminal assignment and connection data \rightarrow Page 21 ff.)
- c Ground terminal
- d PROFIBUS DP resp. MODBUS RS485 versions:
 - -N, P, O, V, T (Fig. 5): Signal cable (terminal assignment and connection data $\rightarrow Page 21 \text{ ff.}$)
 - J (Fig. 6): Power supply cable for external termination (optional); terminal 24: +5 V / 25: DGND
- e Service adapter (see also Page 24)



Terminal assignment and connection data, power supply

Terminal assignment and connection data

all transmitters	1 L (+)	2 N (-)	3		
Designation	Supply (see nat	Protective earth			
Functional values	AC: U = 20 to 55 V,	AC: $U = 85$ to 260 V or AC: $U = 20$ to 55 V, DC: $U = 16$ to 62 V Power consumption: 15 VA / 15 W			
Intrinsically safe circuit	r	10			
U _m	260	260 V AC			

Terminal assignment and connection data for signal circuits (intrinsically safe circuits)

Note!

The following tables contain values/specifications, which are dependent on the type code (type of measuring device). Please compare the following type code to the one shown on the nameplate of your measuring device. A graphic representation of the electrical connections can be found on Page 20.

Terminal assignment of transmitter 53***-*******F

T		Terminal no. (inputs/outputs)									
Transmitter	20 (+)	21 (-)	22 (+)	23 (-)	24 (+) 25 (-)		26 (+)	27 (-)			
Assignment							PRO	FIBUS PA			
	-	-	-	-	-	-	PA +	PA -			
Electric circuit	-	-	-	_	-	-		Ex ia			
Safety-related values	-	-		-		-		30 V DC 500 mA 5.5 W ≤ 10 µH ≤ 5 nF Field Device			
Functional values	-	-	-	-	-	-	galvanically is U_{Bus} I_{Bus} IEC 61158-2	9 to 32 V DC 11 mA			

Transmitter		Terminal no. (inputs/outputs)										
Transmuer	20 (+) 21 (-) 22 (+) 23 (-) 24 (+) 25 (-)				27(-)							
Assignment				FOUNDA	TION Fieldbus							
	_	_	_	FF +	FF –							
Electric circuit	-	-	_		Ex ia							
Safety-related values	-	-	-	$\begin{array}{c} U_i \\ I_i \\ P_i \\ L_i \\ C_i \\ \text{FISCO} \end{array}$	30 V DC 500 mA 5.5 W ≤ 10 µH ≤ 5 nF Field Device							
Functional values	-	-	-	galvanically is U_{Bus} I_{Bus} IEC 61158-2	9 to 32 V DC 12 mA							



Terminal assignment of transmitter 53***-*********S

22 (+) 23 (-)	Pulse/free	25 (–)	26 (+)	27 (-)
_		guency output.		<u> </u>
	P	Pulse/frequency output, passive		output HART, active
_		Ex ia		Ex ia
-	U _i I _i P _i L _i IIC C _i IIC	30 V DC 300 mA 600 mW 0 6 nF	$\begin{array}{c} U_{o} \\ I_{o} \\ P_{o} \\ L_{o} \\ C_{o} \\ U_{i} \\ I_{i} \\ P_{i} \\ L_{i} \\ C_{i} \end{array}$	21.8 V DC 90 mA 490 mW 4.1 mH 150 nF 30 V DC ¹⁾ 10 mA ¹⁾ 0.3 W ¹⁾ 0 6 nF
-	passive: 30 V Open Collecto Full scale freq Hz	DC / 250 mA or quency 2 to 5000	galvanically isolated, active: 0/4 to 20 mA $R_L < 400~\Omega$ R_L HART $\geq 250~\Omega$	
_	ed according to t	passive: 30 V Open Collect Full scale fred Hz	- galvanically isolated, passive: 30 V DC / 250 mA Open Collector Full scale frequency 2 to 5000 Hz ed according to the valid construction provisions.	$\begin{array}{c} C_i \\ - & \text{galvanically isolated,} \\ \text{passive: } 30 \text{ V DC } / 250 \text{ mA} \\ \text{Open Collector} \\ \text{Full scale frequency 2 to 5000} \\ \text{Hz} \end{array} \begin{array}{c} C_i \\ \text{galvanically is} \\ \text{active: } 0/4 \text{ to} \\ \text{R}_L < 400 \ \Omega \\ \text{R}_L \text{ HART } \geq 20 \end{array}$

Terminal assignment of transmitter 53***-********T

Transmitter	Terminal no. (inputs/outputs)							
	20 (+)	21 (-)	22 (+)	23 (-)	24 (+)	25 (-)	26 (+)	27 (-)
Assignment	-	_	-	_		quency output, passive		output HART, bassive
Electric circuit	-	-	-	-		Ex ia		Ex ia
Safety-related values	-	-	-	-	U _i I _i P _i L _i IIC C _i IIC	30 V DC 300 mA 600 mW 0 6 nF	U _i I _i P _i L _i IIC C _i IIC	30 V DC 100 mA 1.25 W negligible 6 nF
Functional values	-	-	-	_	galvanically isolated, passive: 30 V DC / 250 mA Open Collector Full scale frequency 2 to 5000 Hz		galvanically isolated, passive: 4 to 20 mA voltage drop \leq 9 V $R_L < [(V_{supply} - 9 \text{ V}) \div 25 \text{ mA}]$	



Terminal assignment and connection data for signal circuits (non-intrinsically safe circuits)

Note!

The following tables contain values/specifications, which are dependent on the type code (type of measuring device). Please compare the following type code to the one shown on the nameplate of your measuring device. A graphic representation of the electrical connections can be found on Page 20.

Terminal assignment

T	Terminal no. (inputs/outputs)										
Transmitter	20 (+) 21 (-)	22 (+) 23 (-)	24 (+) 25 (-)	26 (+) 27 (-)							
Non-convertible con	Non-convertible communication boards (fixed assignment)										
53***-**A	-	_	Pulse/frequency output	Current output HART							
53***-**B	Relay output 2	Relay output 1	Pulse/frequency output	Current output HART							
53***-**I	_	_	External termination	PROFIBUS DP *							
55)	_	_	+5 V DGND	В А							
53***-**K	3***_**K –		_	FOUNDATION Fieldbus							
				FF + FF -							
53***-**Q	_	_	Status input	MODBUS RS485 *							
33 u			Status input	В А							
Convertible commun	nication boards										
53***-**C	Relay output 2	Relay output 1	Pulse/frequency output	Current output HART							
53***-**D	Status input	Relay output	Pulse/frequency output	Current output HART							
53***-**L	Status input	Relay output 2	Relay output 1	Current output HART							
53***-**M	Status input	Pulse/frequency output	Pulse/frequency output	Current output HART							
53***-**N	Current output	Pulse/frequency output	Status input	MODBUS RS485 * B A							
53***-**P	Current output	Pulse/frequency output	Status input	PROFIBUS DP * B A							
53***-**V	Relay output 2	Relay output 1	Status input	PROFIBUS DP *							
53***-**2	Relay output	Current output	Pulse/frequency output	Current output HART							
53***- **4	Current input	Relay output	Pulse/frequency output	Current output HART							
53***-**5	Status input	Current input	Pulse/frequency output	Current output HART							
53***-**7	Relay output 2	Relay output 1	Status input	MODBUS RS485 * B A							

Safety-related and functional values of signal circuits → Page 24

^{*} PROFIBUS DP, MODBUS RS485:

⁻ terminal 26 $(+) \rightarrow B (RxD/TxD-P)$

⁻ terminal 27 $(-) \rightarrow A (RxD/TxD-N)$



Safety-related and functional values of signal circuits

Signal circuits	Functional values	Safety-related values		
Current output HART	galvanically isolated, active/passive can be selected: active: $0/4$ to 20 mA $R_L < 700 \Omega$, R_L HART $\geq 250 \Omega$ passive: 4 to 20 mA $V_s = 18$ to 30 V DC, $R_i \geq 150 \Omega$	intrinsically safe U _m I _m	= no = 250 V = 500 mA	
Current output	galvanically isolated, active/passive can be selected: • active: $0/4$ to 20 mA $R_L < 700 \Omega$ • passive: 4 to 20 mA $V_s = 18$ to 30 V DC, $R_i \ge 150 \Omega$			
Pulse/frequency output	galvanically isolated, active/passive can be selected: ■ active: 24 V DC / 25 mA (max. 250 mA during 20 ms) R _L > 100 Ω ■ passive: 30 V DC / 250 mA Open Collector Full scale frequency 2 to 10000 Hz (f _{max} = 12500 Hz)			
Status output	galvanically isolated, Open Collector max. 30 V AC / 250 mA			
Relay output	galvanically isolated, max. 30 V AC / 500 mA max. 60 V DC / 100 mA			
Current input	galvanically isolated, active/passive can be selected: • active: 4 to 20 mA, $R_i \le 150 \Omega$ $U_{out} = 24 \text{ V DC}$, short-circuit proof			
	\blacksquare passive: 0/4 to 20 mA, $R_i <$ 150 Ω $U_{max} =$ 30 V DC			
Status input (53***_**D, L, M)	galvanically isolated, 3 to 30 V DC $R_i = 5 \; k\Omega \label{eq:Ri}$			
Status input (53***-**N, P, Q, V, 7)	galvanically isolated, independent of polarity 3 to 30 V DC $R_i = 3 \; k\Omega$			
PROFIBUS DP	galvanically isolated, RS485 as per Standard EIA/TIA-485			
FOUNDATION Fieldbus	galvanically isolated, $U_{Bus} = 9$ to 32 V DC $I_{Bus} = 12$ mA IEC 61158-2 (MBP)			
MODBUS RS485	galvanically isolated, RS485 as per Standard EIA/TIA-485			

Service adapter

The service adapter is only used for connecting service interfaces approved by Endress+Hauser.

⚠ Warning!

It is not permissible to connect the service adapter whilst the atmosphere is considered to be explosive.

Device fuse

⚠ Warning!

Use only fuses of the following types; the fuses are installed on the power supply board:

- Voltage 20 to 55 V AC / 16 to 62 V DC:
 Fuse 2.0 A slow-blow, disconnect capacity 1500 A (Schurter, 0001.2503 or Wickmann, Standard Type 181 2.0 A)
- Voltage 85 to 260 V AC: Fuse 0.8 A slow-blow, disconnect capacity 1500 A (Schurter, 0001.2507 or Wickmann, Standard Type 181 0.8 A)



Technical Data

Dimensions

Please refer to the respective Technical Information for these dimensions:

- Promag 50W, 53W → TI046D
 Promag 50P, 53P → TI047D
 Promag 50H, 53H → TI048D

Weight

The weight of the EEx ${\tt d}$ version is approx. 2 kg greater than that of the standard version.

Control Drawings

Endress+Hauser Reinach hereby declares that the product is in conformity with the requirements of the CANADIAN STANDARDS ASSOCIATION.

Note!

The "Documentation/Important Information" folder provided with the measuring device contains a CD-ROM with all the Control Drawings.



www.endress.com/worldwide



People for Process Automation