# Safety Instructions **RID16**

ATEX, IECEx: Ex ia IIC T6...T4 Gb

Safety instructions for electrical apparatus in explosion-hazardous areas







RID16 XA00099R

### RID16

#### Table of contents

About this document	4
Associated documentation	4
Supplementary documentation	4
Manufacturer´s certificates	5
Manufacturer address	5
Safety instructions:	5
Safety instructions: Installation	6
Safety instructions: Specific conditions of use	6
Temperature tables	6
Electrical connection data	6

XA00099R RID16


### About this document



This document has been translated into several languages. Legally determined is solely the English source text.

The document translated into EU languages is available:

- In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Manuals and Datasheets -> Type: Ex Safety Instruction (XA) -> Text Search: ...
- In the Device Viewer: www.endress.com -> Product tools -> Access device specific information -> Check device features

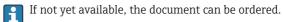

### Associated documentation

This document is an integral part of the following Operating Instructions:

- Operating instructions: BA00284R, BA01268K
- Brief operating instructions: KA00283R, KA01157K
- Technical information: TI00146R

### Supplementary documentation

Explosion-protection brochure: CP00021Z/11

The Explosion-protection brochure is available:

- In the download area of the Endress+Hauser website:
  www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP000217.
- On the CD for devices with CD-based documentation

RID16 XA00099R

### Manufacturer's certificates

#### IECEx certificate

Certificate number: IECEx KEM 10.0021X

Affixing the certificate number certifies conformity with the following standards (depending on the device version)

■ IEC 60079-0:2017 ■ IEC 60079-11:2012


#### ATEX certificate

Certificate number: KEMA 10ATEX0092 X

### Manufacturer address

Endress+Hauser Wetzer GmbH + Co. KG Obere Wank 1 87484 Nesselwang, Germany

## Safety instructions:

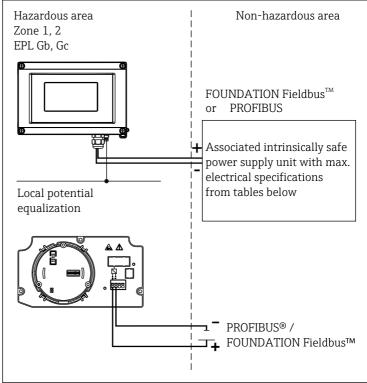

A0050410

 $\blacksquare$  1 Installation of the field indicator

XA00099R RID16

#### Safety instructions: Installation

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- The type of protection changes as follows when the devices are connected to certified intrinsically safe circuits of Category ib: Ex ib IIC.
- The temperature transmitter must be installed so, that even in the event of rare incidents, an ignition source due to impact or friction between the enclosure and iron/steel is excluded.
- The circuits of indicator are isolated from its enclosure in conformance with EN/IEC 60079-11 chapter 6.3.13.

Safety instructions: Specific conditions of use When the enclosure is provided with an non-conductive coating, electrostatic charges on the equipment enclosure shall be avoided. For more details see safety instructions.

### Temperature tables

Туре	Temperature class	Ambient temperature
RID16	Т6	-40 °C ≤ Ta ≤ +55 °C
	T5	-40 °C ≤ Ta ≤ +70 °C
	T4	-40 °C ≤ Ta ≤ +80 °C

## Electrical connection data

Туре	Electrical data	ı		
RID16 PROFIBUS® PA	Power supply			
RID16 FOUNDATION Fieldbus™	1 '	$Ui \leq 17.5 \; V_{DC}$	or	$Ui \leq 24 \; V_{DC}$
	and -)	$Ii \leq 500 \; mA$		$Ii \leq 250 \; mA$
		Pi ≤ 5.32 W		$Pi \le 1.2 \text{ W}$
		Ci ≤ 5 nF		
1		$Li \leq 10~\mu H$		
	Applicable for connection to a Fieldbus system according to FISCO-model.			

Category T		Type of protection (ATEX, IECEx)	Туре	
	II2G	Ex ia IIC T6T4 Gb	RID16	



www.addresses.endress.com