

Safety Instructions

Deltabar PMD75B, PMD78B

ATEX, IECEx: Ex ia IIIC Txxx°C Da/Db
Ex ia IIIC Txxx°C Db



Deltabar PMD75B, PMD78B

Table of contents

Associated documentation 4

Supplementary documentation 4

Certificates and declarations 4

Manufacturer address 5

Other standards 5

Extended order code 5

Safety instructions: General 8

Safety instructions: Specific conditions of use 8

Safety instructions: Installation 9

Temperature tables 11

Connection data 13

Associated documentation

All documentation is available on the Internet:
www.endress.com/Deviceviewer
(enter the serial number from the nameplate).



If not yet available, a translation into EU languages can be ordered.

To commission the device, please observe the Operating Instructions pertaining to the device:

PMD75B
BA02014P, TI01511P

PMD78B
BA02015P, TI01512P

Supplementary documentation

Explosion protection brochure: CP00021Z

The explosion protection brochure is available on the Internet:
www.endress.com/Downloads

Certificates and declarations**EU Declaration of Conformity**

Declaration Number:
EU_01087

The EU Declaration of Conformity is available on the Internet:
www.endress.com/Downloads

EU type-examination certificate

Certificate number:
SEV 20ATEX0387 X

List of applied standards: See EU Declaration of Conformity.

IEC Declaration of Conformity

Certificate number:
IECEX SEV 20.0009 X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- IEC 60079-0 : 2017
- IEC 60079-11 : 2023
- IEC TS 60079-47 : 2021

Manufacturer address	Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany Address of the manufacturing plant: See nameplate.
Other standards	Among other things, the following standards shall be observed in their current version for proper installation: ■ IEC/EN 60079-14: "Explosive atmospheres - Part 14: Electrical installations design, selection and erection" ■ EN 1127-1: "Explosive atmospheres - Explosion prevention and protection - Part 1: Basic concepts and methodology"
Extended order code	The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

PMD7xB – ***** + A*B*C*D*E*F*G*..

(Device (Basic (Optional
type) specifications specifications)

* = Placeholder
At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Deltabar

-  The following specifications reproduce an extract from the product structure and are used to assign:
- This documentation to the device (using the extended order code on the nameplate).
 - The device options cited in the document.

Device type
PMD75B, PMD78B

Basic specifications

Position 1, 2 (Approval)		
Selected option		Description
PMD75B PMD78B	BH	ATEX II 1/2 D Ex ia IIIC Txxx°C Da/Db
		ATEX II 2 D Ex ia IIIC Txxx°C Db
		IECEX Ex ia IIIC Txxx°C Da/Db
		IECEX Ex ia IIIC Txxx°C Db

Position 3, 4 (Output)		
Selected option		Description
PMD75B PMD78B	BA	2-wire, 4-20 mA HART
	BB	2-wire, 4-20 mA HART, switch output ¹⁾
	BC	2-wire, 4-20 mA HART + 4 to 20 mA analog ¹⁾
	DA	2-wire, PROFIBUS PA
	FA	PROFINET over Ethernet-APL, 10Mbit/s

1) Only in connection with Position 6 = J, K, M

Position 5 (Display, Operation)		
Selected option		Description
PMD75B PMD78B	M	Prepared for display FHX50B + Gland M20
	N	Prepared for display FHX50B + Thread NPT1/2
	O	Prepared for display FHX50B + Thread M20

Position 6 (Housing, Material)		
Selected option		Description
PMD75B	B	Single compartment; Alu, coated
PMD75B	J	Dual compartment; Alu, coated
PMD78B	K	Dual compartment; 316L
	M	Dual compartment L-shape; Alu, coated

Position 7 (Electrical Connection)		
Selected option		Description
PMD75B	B	Gland M20, brass nickel plated, IP66/68 NEMA Type 4X/6P
PMD78B	C	Gland M20, 316L, IP66/68 NEMA Type 4X/6P
	F	Thread M20, IP66/68 NEMA Type 4X/6P
	G	Thread G1/2, IP66/68 NEMA Type 4X/6P
	H	Thread NPT1/2, IP66/68 NEMA Type 4X/6P

Optional specifications

ID Nx, Ox (Accessory Mounted)		
Selected option		Description
PMD75B	NA	Overvoltage protection ¹⁾
PMD78B		

1) Only in connection with Position 6 = J, K, M

ID Px, Rx (Accessory Enclosed)		
Selected option		Description
PMD75B	PA	Weather protection cover, 316L ¹⁾
PMD78B		

1) Only in connection with Position 6 = J, K, M

Safety instructions: General

- The device is intended to be used in explosive atmospheres as defined in the scope of IEC 60079-0 or equivalent national standards. If no potentially explosive atmospheres are present or if additional protective measures have been taken: The device may be operated according to the manufacturer's specifications.
- Devices suitable for zone separation (marked Ga/Gb or Da/Db) are always suitable for installation in the less critical zone (Gb or Db). Due to space limitations the corresponding marking maybe not indicated on the nameplate.
- Comply with the installation and safety instructions in the Operating Instructions.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Avoid electrostatic charging:
 - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ...)
 - Of isolated capacities (e.g. isolated metallic plates)
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.

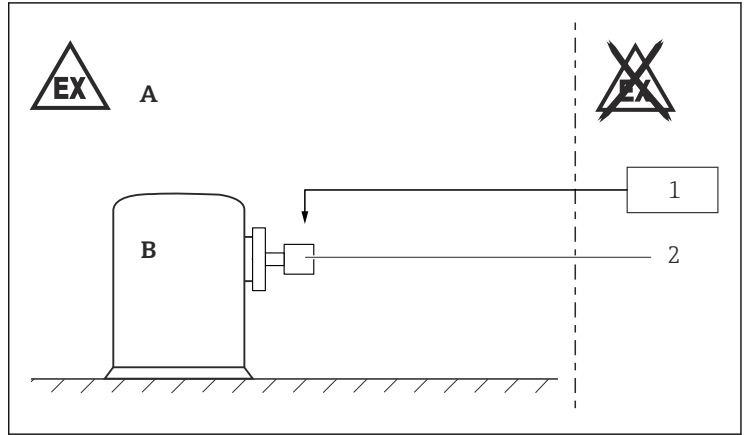 
Safety instructions: Specific conditions of use

- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
 - Observe the danger of electrostatic charging and discharge.
 - Do not install in the vicinity of processes (≤ 0.5 m) generating strong electrostatic charges.
- Avoid sparks caused by impact and friction.

Optional specification, ID Px, Rx = PA

Connect the weather protection cover to the local potential equalization.

Safety instructions: Installation



A0041997

- A Zone 21, Electronic
 B Zone 20 or Zone 21, Process
 1 Associated intrinsically safe power supply units
 2 PMD75B, PMD78B

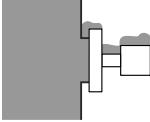 
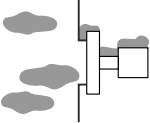 
- After aligning (rotating) the enclosure, retighten the fixing screw.
- Continuous service temperature of the connecting cable: $\geq T_a + 20\text{ K}$.
- Perform the following to achieve the degree of protection IP66/67:
 - Screw the cover tight.
 - Mount the cable entry correctly.
- Seal unused entry glands with suitable sealing plugs that correspond to the type of protection.
- Supplied cable glands and metallic sealing plugs comply with the requirements of type of protection marked on the nameplate.
- The plastic sealing plug is used only as transport protection.
- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.
- Observe the maximum process conditions according to the manufacturer's Operating Instructions.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.

Basic specification, Position 5 = N

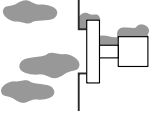 
Observe the requirements according to IEC/EN 60079-14 for conduit systems and the wiring- and installation instructions of the suitable Safety Instructions (XA). In addition, observe national regulations and standards for conduit systems.

Permitted ambient conditions

Ex ia IIIC Txxx°C Da/Db

Process Zone 20		Enclosure Zone 21
Continuous dust submersion		Dust accumulation or temporary explosive dust atmosphere
Continuous explosive dust atmosphere and deposits		Dust accumulation or temporary explosive dust atmosphere

Ex ia IIIC Txxx°C Db

Process Zone 21		Enclosure Zone 21
Continuous dust deposits or temporary explosive dust atmosphere		Dust accumulation or temporary explosive dust atmosphere

Intrinsic safety

- The device is only suitable for connection to certified, intrinsically safe equipment with explosion protection Ex ia / Ex ib.
- The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least 500 V_{rms}.

Optional specification, ID Nx, Ox = NA

The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least 290 V_{rms}.

Potential equalization

Integrate the device into the local potential equalization.

Temperature
tables



- The specified surface temperature takes into account all direct heat influences from process heat and self-heating at the enclosure.
- Surface temperatures at the process side maybe higher and must be considered by the user (e.g. at high temperature process connections).
- The T-marking is based on the process temperature of the compact designs.
- The specified ambient and process temperature ranges exclusively refer to the explosion protection and must not be exceeded. Operationally permitted ambient temperature ranges can be restricted depending on the version: See Operating Instructions.
- Do not exceed the max. ambient temperature at the enclosure.
- The process temperatures refer to the temperature at the separation membrane.

For detailed information see Technical Information.



Protection type of enclosure: IP66/67

Device Type PMD75B

Ex ia IIC T₂₀₀ 100 °C Da/Db

Ex ia IIC T_L 100 °C Db

Maximum surface temperature	Process temperature T _p (process)	Ambient temperature T _a (ambient)	
		Basic specification, Position 3, 4 =	
		BA, DA, FA	BB, BC
T100 °C	+60 °C	Basic specification, Position 6 =	
		B, J	J
		-40 to +65 °C	-40 to +60 °C
	+85 °C	-40 to +60 °C	-40 to +55 °C
	+100 °C	-40 to +60 °C	-40 to +55 °C

- Specific conditions of use:
- The surface temperature is
 - for equipment protection level (EPL) Da: T_{200} 100 °C (with 200 mm dust deposit)
 - and equipment protection level (EPL) Db: T_L 100 °C (with dust accumulation T_L)
 - The surface temperature is for equipment protection level (EPL) Db: T_L 100 °C (with dust accumulation T_L)

 T_L marking:
The assigned surface temperature without dust layer is the same.

Device Type PMD78B

Ex ia IIIC T_{200} 100 °C Da/Db
Ex ia IIIC T_L 100 °C Db

Maximum surface temperature	Process temperature T_p (process)	Ambient temperature T_a (ambient)	
		Basic specification, Position 3, 4 = BA, DA, FA	
		BB, BC	
T100 °C		Basic specification, Position 6 = B, J	
		J	
		-40 to +70 °C	-40 to +70 °C
		-40 to +70 °C	-40 to +70 °C
		-40 to +70 °C	-40 to +70 °C
		-40 to +70 °C	-40 to +70 °C
		-40 to +70 °C	-40 to +70 °C

- Specific conditions of use:
- The surface temperature is
 - for equipment protection level (EPL) Da: T_{200} 100 °C (with 200 mm dust deposit)
 - and equipment protection level (EPL) Db: T_L 100 °C (with dust accumulation T_L)
 - The surface temperature is for equipment protection level (EPL) Db: T_L 100 °C (with dust accumulation T_L)

 T_L marking:
The assigned surface temperature without dust layer is the same.

Connection data

Basic specification, Position 3, 4 = BA, BB, BC

Power supply	
Channel 1 $U_i \leq 30\text{ V}_{DC}$ $I_i \leq 300\text{ mA}$ $P_i \leq 1\text{ W}$ $C_i \leq 10\text{ nF}$ $L_i = 0$	Channel 2 (only BB, BC) $U_i \leq 30\text{ V}_{DC}$ $I_i \leq 300\text{ mA}$ $P_i \leq 1\text{ W}$ $C_i \leq 10\text{ nF}$ $L_i = 0$

Basic specification, Position 3, 4 = DA

Power supply	
FISCO $U_i \leq 17.5\text{ V}_{DC}$ $I_i \leq 380\text{ mA}$ $P_i \leq 5.32\text{ W}$ $C_i \leq 5\text{ nF}$ $L_i = 0$	Entity $U_i \leq 24\text{ V}_{DC}$ $I_i \leq 300\text{ mA}$ $P_i \leq 1.2\text{ W}$ $C_i \leq 5\text{ nF}$ $L_i = 0$

Basic specification, Position 3, 4 = FA

Power supply	
2-WISE $U_i \leq 17.5\text{ V}_{DC}$ $I_i \leq 380\text{ mA}$ $P_i \leq 5.32\text{ W}$ $C_i \leq 5\text{ nF}$ $L_i = 0$	Entity $U_i \leq 17.5\text{ V}_{DC}$ $I_i \leq 300\text{ mA}$ $P_i \leq 1.2\text{ W}$ $C_i \leq 5\text{ nF}$ $L_i = 0$

In connection with: *Basic specification, Position 5 = M, N, O*
Installation according to the specifications of FHX50B.

 Only the type of protection suitable for the device shall be connected!

Cable entry: Connection compartment

Cable gland: *Basic specification, Position 7 = B*

Thread	Clamping range	Material	Sealing insert	O-ring
M20x1,5	ø 8 to 10.5 mm	Ms, nickel-plated	Silicone	EPDM (ø 17x2)

Cable gland: *Basic specification, Position 7 = C*

Thread	Clamping range	Material	Sealing insert	O-ring
M20x1,5	ø 7 to 12 mm	1.4404	NBR	EPDM (ø 17x2)

-  The tightening torque refers to cable glands installed by the manufacturer:
 - Recommended: 3.5 Nm
 - Maximum: 10 Nm
 - This value may be different depending on the type of cable. However, the maximum value must not be exceeded.
- Only suitable for fixed installation. The operator must pay attention to a suitable strain relief of the cable.
- To maintain the ingress protection of the enclosure: Install the enclosure cover, cable glands and blind plugs correctly.



71627895

www.addresses.endress.com
