


# Field Device Configurator (FDC) – Fact Sheet

## For F2060 (OTMT36) IO-Link temperature transmitter




### Download of the FDC Tool via [endress.com](https://www.endress.com)

Enter "FDC" in the search bar  
Select "Downloads"  
Click on "Download"

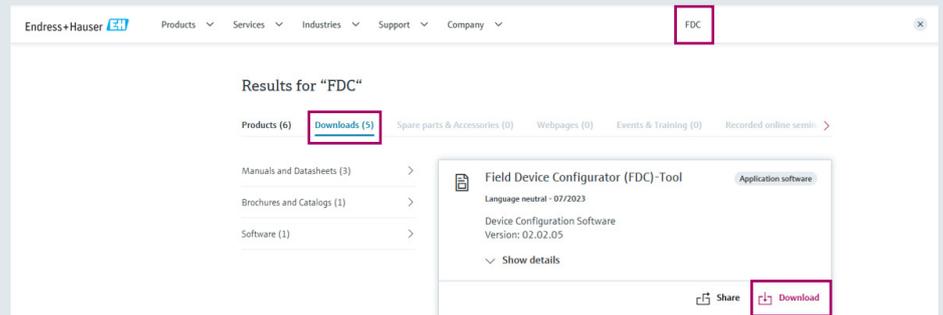

### Parametrization via Field Device Configurator (FDC)


Select „Manual Connection“

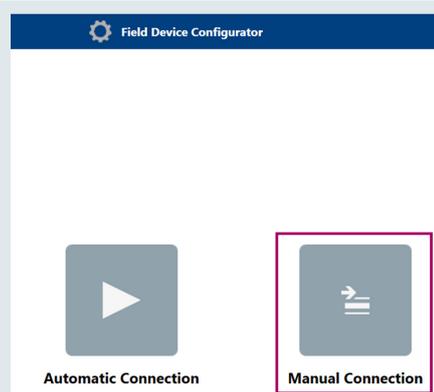

**Info:** An IODD is not required in FDC, the tool itself can communicate directly with the device via an IO-Link communication device (e.g. SFP20)

Select IO-Link and make sure that an IO-Link communication device (e.g. SFP20) is connected

Select Baud rate "Automatic"  
Click the "Play" button

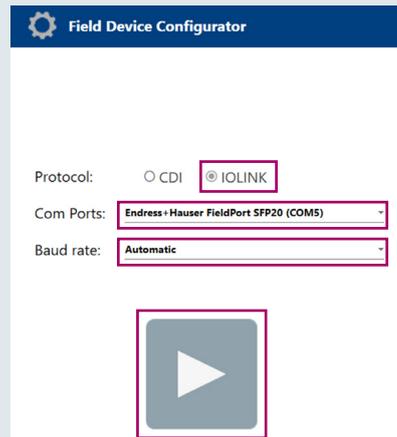

The F2060 temperature transmitter is now ready for parameterization in the usual display format of the Field Device Configurator

Select "Logout" to get back on the home screen of the Field Device Configurator

