

Safety Instructions

Micropilot FMR30B

ATEX, IECEx: Ex ia IIC T4 Ga
Ex ia IIIB T135 °C Da



Micropilot FMR30B

Table of contents

About this document 4

Associated documentation 4

Supplementary documentation 4

Certificates and declarations 4

Manufacturer address 5

Other standards 5

Extended order code 5

Safety instructions: General 7

Safety instructions: Specific conditions of use 7

Safety instructions: Installation 8

Temperature tables 9

Connection data 10

About this document

The document number of these Safety Instructions (XA) must match the information on the nameplate.

Associated documentation

All documentation is available on the Internet:

www.endress.com/Deviceviewer

(enter the serial number from the nameplate).



If not yet available, a translation into EU languages can be ordered.

To commission the device, please observe the Operating Instructions pertaining to the device:

BA02373F

Supplementary documentation

Explosion protection brochure: CP00021Z

The explosion protection brochure is available on the Internet:

www.endress.com/Downloads

Certificates and declarations**EU Declaration of Conformity**

Declaration Number:

EU_01230

The EU Declaration of Conformity is available on the Internet:

www.endress.com/Downloads

EU type-examination certificate

Certificate number:

FM 25 ATEX0018 X

List of applied standards: See EU Declaration of Conformity.

IEC Declaration of Conformity

Certificate number:

IECEx FMG 25.0025 X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- IEC 60079-0 : 2017
- IEC 60079-11 : 2023

**Manufacturer
address**

Endress+Hauser SE+Co. KG
 Hauptstraße 1
 79689 Maulburg, Germany
 Address of the manufacturing plant: See nameplate.

Other standards

Among other things, the following standards shall be observed in their current version for proper installation:

- IEC/EN 60079-14: "Explosive atmospheres - Part 14: Electrical installations design, selection and erection"
- EN 1127-1: "Explosive atmospheres - Explosion prevention and protection - Part 1: Basic concepts and methodology"

**Extended
order code**

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

FMR30B	–	*****	+	A*B*C*D*E*F*G*..
<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available.


The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Micropilot

-  The following specifications reproduce an extract from the product structure and are used to assign:
- This documentation to the device (using the extended order code on the nameplate).
 - The device options cited in the document.

Device type

FMR30B

Basic specifications

Position 1, 2 (Approval)		
Selected option		Description
FMR30B	BA	ATEX II 1 G Ex ia IIC T4...T1 Ga IECEx Ex ia IIC T4...T1 Ga
	BK	ATEX II 1 D Ex ia IIIB T135 °C Da IECEx Ex ia IIIB T135 °C Da

Position 3, 4 (Output)		
Selected option		Description
FMR30B	BA	2-wire, 4-20 mA HART

Optional specifications

No options specific to hazardous locations are available.

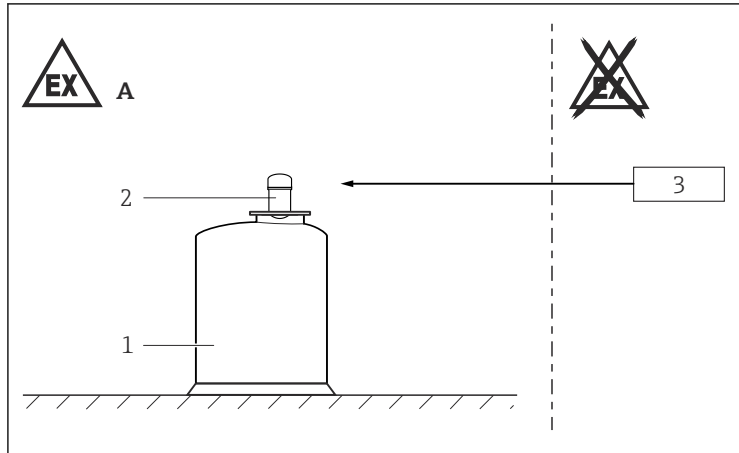
**Safety
instructions:
General**

- The device is intended to be used in explosive atmospheres as defined in the scope of IEC 60079-0 or equivalent national standards. If no potentially explosive atmospheres are present or if additional protective measures have been taken: The device may be operated according to the manufacturer's specifications.
- Comply with the installation and safety instructions in the Operating Instructions.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Avoid electrostatic charging:
 - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ...)
 - Of isolated capacities (e.g. isolated metallic plates)
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.

**Safety
instructions:
Specific
conditions of use**

- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
 - Observe the danger of electrostatic charging and discharge.
 - Do not install in the vicinity of processes (≤ 0.5 m) generating strong electrostatic charges.
- Avoid sparks caused by impact and friction.
- In the case of process connections made of polymeric material or with polymeric coatings, avoid electrostatic charging of the plastic surfaces.
- The process connection of the device must be installed in such a way that guarantees a sufficiently tight joint (IP66/67).
- It is essential for the device to use a power supply that is galvanically isolated from earth.
- When using an intrinsically safe barrier, the barrier must be connected to the same earth as the device.

Safety instructions: Installation



A Zone 0, Zone 20

1 Tank; Zone 0, Zone 20

2 Micropilot FMR30B

3 Associated intrinsically safe power supply units

- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.
- Observe the maximum process conditions according to the manufacturer's Operating Instructions.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.
- Plugs must meet the IP66/67 protection rating.
- Perform the following to achieve the degree of protection IP66/67:
 - Select a suitable cable / connector.
 - Mount the cable / connector correctly.
- Supplied cables / connectors comply with the requirements of the type of protection marked on the nameplate.

Application in gas

Continuous service temperature of the connecting cable:

$$\geq T_a + 10 \text{ K}$$

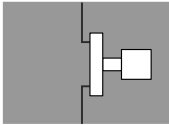
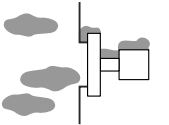
Application in dust

Continuous service temperature of the connecting cable:

$$\geq T_a + 25 \text{ K}$$

Permitted ambient conditions

Ex ia IIIB T135 °C Da


Process Zone 20		Enclosure Zone 20
Continuous dust submersion		Continuous dust submersion
Continuous explosive dust atmosphere and deposits		Continuous explosive dust atmosphere and deposits

Intrinsic safety

The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least 500 V_{rms}.


Temperature tables

Ex ia IIC T4...T1 Ga


- 
- The specified ambient and process temperature ranges exclusively refer to the explosion protection and must not be exceeded. Operationally permitted ambient temperature ranges can be restricted depending on the version: See Operating Instructions.
 - Do not exceed the max. ambient temperature at the enclosure.

Ambient and process temperature range
-40 °C ≤ T _p ≤ +70 °C

Ex ia IIIB T135 °C Da

- 
- The specified surface temperature takes into account all direct heat influences from process heat and self-heating at the enclosure.
 - The specified ambient and process temperature ranges exclusively refer to the explosion protection and must not be exceeded. Operationally permitted ambient temperature ranges can be restricted depending on the version: See Operating Instructions.
 - Do not exceed the max. ambient temperature at the enclosure.

For detailed information see Technical Information.

 Protection type of enclosure: IP66/67

Maximum surface temperature
135 °C

Input parameters			Maximum permitted ambient or process temperature
650 mW	28.9 V	22.5 mA	-40 to 48 °C
594 mW	26.4 V	22.5 mA	-40 to 52 °C
540 mW	24.0 V	22.5 mA	-40 to 55 °C

Connection data

Ex ia IIC

Power supply
$U_i \leq 30\text{ V}_{DC}$ $I_i \leq 100\text{ mA}$ $P_i \leq 700\text{ mW}$ $C_i = 18\text{ nF}$ $L_i = 0$ Cable capacitance $C_c = 200\text{ pF}$ Cable inductance $L_c = 1\text{ }\mu\text{H/m}$

Ex ia IIIB

Power supply
$U_i \leq 30\text{ V}_{DC}$ $I_i \leq 100\text{ mA}$ $P_i \leq 650\text{ mW}$ $C_i = 18\text{ nF}$ $L_i = 0$ Cable capacitance $C_c = 200\text{ pF}$ Cable inductance $L_c = 1\text{ }\mu\text{H/m}$



71694047

www.addresses.endress.com
