# Safety Instructions Micropilot FMR43

II 1 G Ex ia IIC T4 Ga II 3 G Ex ic IIC T4 Gc







## **Micropilot FMR43**


#### Table of contents

About this document	. 4
Associated documentation	. 4
Supplementary documentation	4
Certificates and declarations	. 4
Manufacturer address	. 5
Other standards	. 5
Extended order code	5
Safety instructions: General	. 7
Safety instructions: Specific conditions of use	. 8
Safety instructions: Installation	. 9
Temperature tables	10
Connection data	11

# About this document

i

The document number of these Safety Instructions (XA) must match the information on the nameplate.

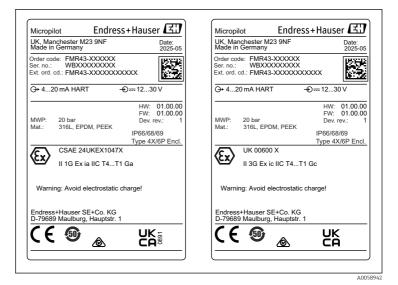

Associated documentation	All documentation is available on the Internet: www.endress.com/Deviceviewer (enter the serial number from the nameplate).					
	To commission the device, please observe the Operating Instructions pertaining to the device:					
	BA02310F					
Supplementary documentation	Explosion protection brochure: CP00021Z					
documentation	The explosion protection brochure is available on the Internet: www.endress.com/Downloads					
Certificates and declarations	UK Declaration of Conformity					
	Declaration Number:					
	• Ex ia: UK_00597					
	• Ex ic: UK_00600					

	The UK Declaration of Conformity is available: In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Declaration -> Type: UKCA Declaration -> Product Code:								
	UKCA type-examination certificate								
	Certificate number: • Ex ia: CSAE 24UKEX1047X • Ex ic: UK 00600 X List of applied standards: See UK Declaration of Conformity.								
Manufacturer address	Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany Address of the manufacturing plant: See nameplate.								
Other standards	<ul> <li>Among other things, the following standards shall be observed in their current version for proper installation:</li> <li>IEC/EN 60079-14: "Explosive atmospheres - Part 14: Electrical installations design, selection and erection"</li> <li>EN 1127-1: "Explosive atmospheres - Explosion prevention and protection - Part 1: Basic concepts and methodology"</li> </ul>								
Extended order code	The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.								
	Structure of the extended order code								
	FMR43 – ********* + A*B*C*D*E*F*G*								
	(Device (Basic (Optional type) specifications) specifications)								
	<ul> <li>* = Placeholder At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.</li> </ul>								

#### Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

#### Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

#### Extended order code: Micropilot



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type FMR43

Basic specifications

Position 1, 2	Position 1, 2 (Approval)						
Selected opti	ion	Description					
FMR43	UA	UK II 1 G Ex ia IIC T4T1 Ga					
	UU	UK II 3 G Ex ic IIC T4T1 Gc					

Position 3, 4	+ (Output)	
Selected opt	ion	Description
FMR43 BA		2-wire, 4-20 mA HART

Position 10-12 (Process Connection)								
Selected o	ption		Description					
FMR43	VGJ		MNPT1/2, 316L, flush mount					
	VHJ		MNPT3/4, 316L, flush mount					
	VLJ		MNPT1-1/2, 316L, flush mount					
	WJJ		G1/2, 316L, flush mount					
	WKJ		G3/4, 316L, flush mount					
	WLJ		G1, 316L, flush mount					
	WNJ		G1-1/2, 316L, flush mount					
	X2J		M24, 316L, install > accessory, process adapter					
	3CK		Tri-Clamp ISO2852 DN38 (1-1/2"), PTFE>316L, NA-CONNECT compatible					
	3EK		Tri-Clamp ISO2852 DN51 (2"), PTFE>316L, NA-CONNECT compatible					
	5DK		NEUMO BioControl D50 PN16, PEEK>316L					
	9YY	(VJJ)	MNPT1, 316L, flush mount					
		(3FK)	Tri-Clamp ISO2852 DN76.1 (3"), PTFE>316L, NA-CONNECT compatible					
		(3HK)	Tri-Clamp ISO2852 DN101.6 (4"), PTFE>316L, NA-CONNECT compatible					
		(5AK)	NEUMO BioControl D25 PN16, PEEK>316L					
		(5FK)	NEUMO BioControl D80 PN16, PEEK>316L					

#### **Optional specifications**

No options specific to hazardous locations are available.

#### Safety instructions: General

- The device is intended to be used in explosive atmospheres as defined in the scope of EN IEC 60079-0 or equivalent national standards. If no potentially explosive atmospheres are present or if additional protective measures have been taken: The device may be operated according to the manufacturer's specifications.
- Comply with the installation and safety instructions in the Operating Instructions.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations

- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Avoid electrostatic charging:
  - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ...)
  - Of isolated capacities (e.g. isolated metallic plates)
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.

#### Safety instructions: Specific conditions of use

- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
  - Observe the danger of electrostatic charging and discharge.
  - Do not install in the vicinity of processes (≤ 0.5 m) generating strong electrostatic charges.
- Avoid sparks caused by impact and friction.
- In the case of process connections made of polymeric material or with polymeric coatings, avoid electrostatic charging of the plastic surfaces.
- The process connection of the device must be installed in such a way that guarantees a sufficiently tight joint (IP66/67).
- It is essential for the device to use a power supply that is galvanically isolated from earth.
- When using an intrinsically safe barrier, the barrier must be connected to the same earth as the device.
- Refer to the temperature tables for various ambient and process temperature ranges.

#### Electrostatics


Basic specification, Position 10-12 = 3CK, 5AK

- When used in gas applications, the sensor must be used in conjunction with a metallic frame provided by the user. This can be a metal tank wall, a metal nozzle or a pipe.
- If there is no risk of dangerous electrostatic charging of the plastic surfaces, the sensor can be used without restrictions.

Basic specification, Position 10-12 = 3EK, 3FK, 3HK, 5DK, 5FK

- The sensor must not be used in applications with explosive gases.
- If there is no risk of dangerous electrostatic charging of the plastic surfaces, the sensor can be used without restrictions.

#### Safety instructions: Installation

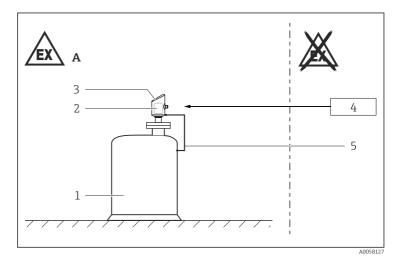

- A Basic specification, Position 1, 2 = UA: Zone 0 Basic specification, Position 1, 2 = UU: Zone 2
- 1 Tank; Basic specification, Position 1, 2 = UA: Zone 0 Basic specification, Position 1, 2 = UU: Zone 2
- 2 Electronic insert
- 3 Enclosure
- 4 Associated intrinsically safe power supply units
- 5 Local earthing
- Continuous service temperature of the connecting cable:  $\geq T_a+20$  K.
- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.
- Observe the maximum process conditions according to the manufacturer's Operating Instructions.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.
- Perform the following to achieve the degree of protection IP66/68:
  - Select a suitable cable / connector.
  - Mount the cable / connector correctly.
- Supplied cables / connectors comply with the requirements of the type of protection marked on the nameplate.

#### Intrinsic safety

The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least 500  $V_{\rm rms}$ .

#### Potential equalization

- Integrate the device into the local potential equalization.
- If not earthed directly via the process connection, provide separate earthing.

#### Temperature tables

- The specified ambient and process temperature ranges exclusively refer to the explosion protection and must not be exceeded. Operationally permitted ambient temperature ranges can be restricted depending on the version: See Operating Instructions.
  - Do not exceed the max. ambient temperature at the enclosure.

#### **Description notes**

ň


Unless otherwise indicated, the positions always refer to the basic specification.

1st column: Temperature classes T4 (135 °C) to T1 (450 °C)

Column P1 to P5: Position (temperature value) on the axes of the derating

- T<sub>a</sub>: Ambient temperature in °C
- T<sub>p</sub>: Process temperature in °C

#### Example diagrams of possible deratings

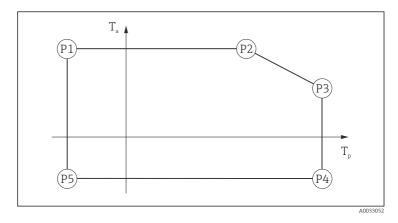

	P1		P2		Р3		P4		Р5	
	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	Tp	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>
T4	-40	70	70	70	135	47	135	-40	-40	-40
T3T1	-40	70	70	70	150	40	150	-40	-40	-40

#### Basic specification, Position 10-12 = VGJ, WJJ, X2J, 3xK, 5DK, 5FK

#### Basic specification, Position 10-12 = VHJ, VJJ, VLJ, WKJ, WLJ, WNJ, 5AK

	P1		P2		Р3		P4		Р5	
	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	Tp	Ta	T <sub>p</sub>	Ta	Tp	T <sub>a</sub>
T4T1	-40	70	70	70	130	40	130	-40	-40	-40

#### **Connection data**



71707393

### www.addresses.endress.com

