
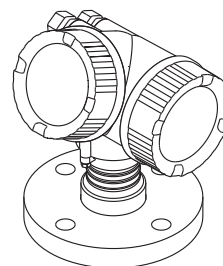



Operating Instructions

Micropilot FMR51, FMR52

PROFIBUS PA

Free space radar

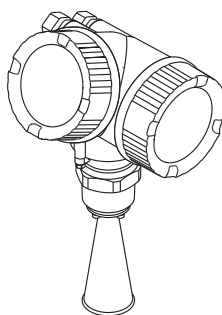

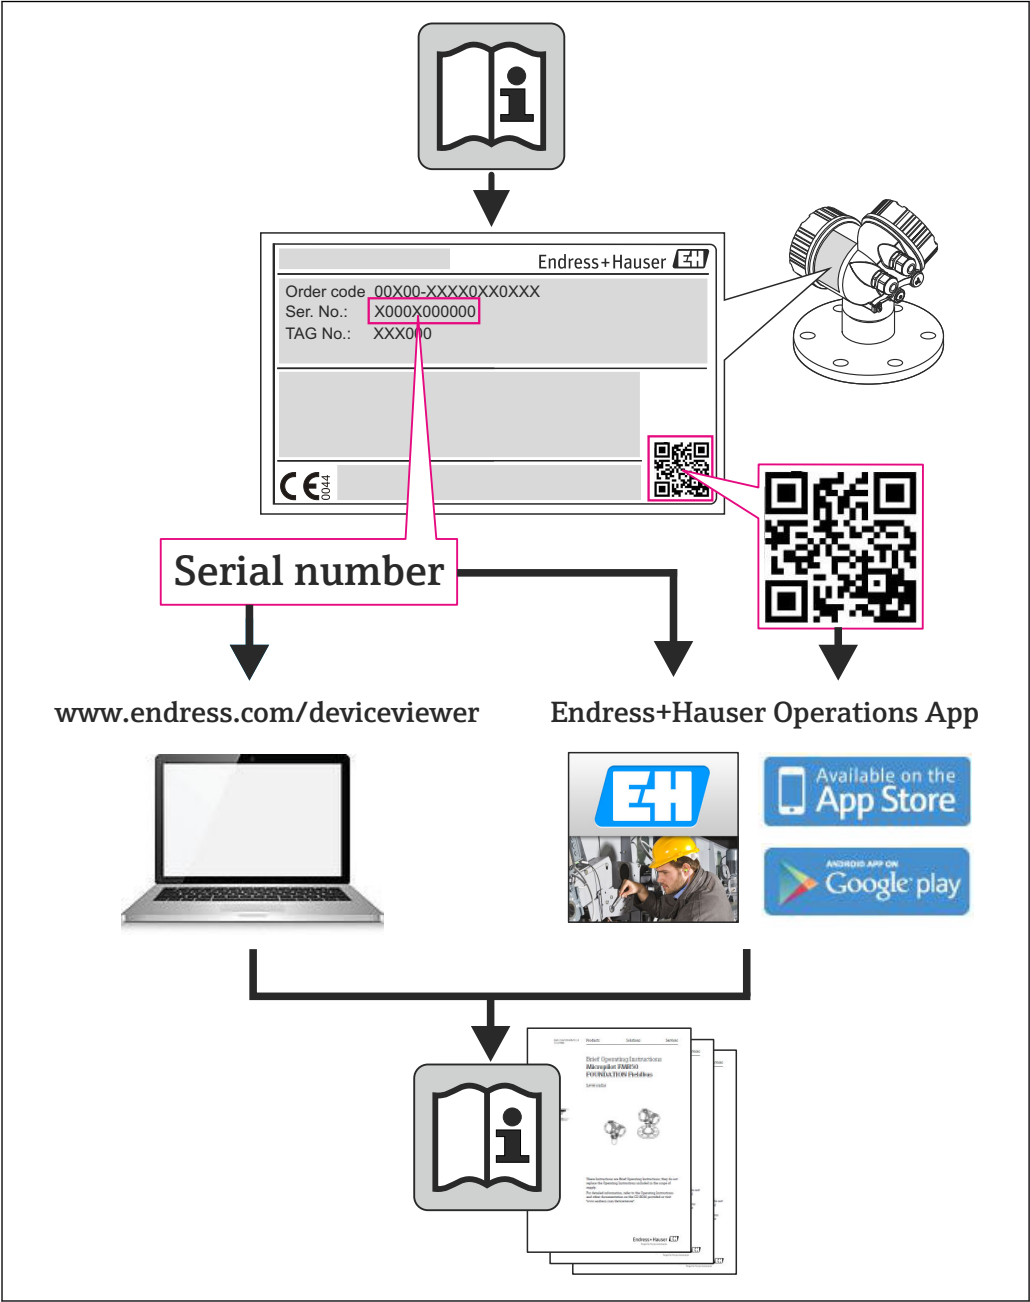

A0023555

Table of contents

1	Important document information	5		
1.1	Document function	5		
1.2	Symbols	5		
1.2.1	Safety symbols	5		
1.2.2	Electrical symbols	5		
1.2.3	Tool symbols	5		
1.2.4	Symbols for certain types of information	6		
1.2.5	Symbols in graphics	6		
1.2.6	Symbols at the device	7		
1.3	Additional documentation	7		
1.3.1	Safety Instructions (XA)	7		
2	Basic safety instructions	11		
2.1	Requirements for the personnel	11		
2.2	Designated use	11		
2.3	Workplace safety	12		
2.4	Operational safety	12		
2.5	Product safety	12		
3	Product description	13		
3.1	Product design	13		
3.1.1	Micropilot FMR51	13		
3.1.2	Micropilot FMR52	13		
3.1.3	Electronics housing	14		
3.2	Registered trademarks	15		
4	Incoming acceptance and product identification	16		
4.1	Incoming acceptance	16		
4.2	Product identification	16		
4.2.1	Nameplate	17		
5	Storage, Transport	18		
5.1	Storage conditions	18		
5.2	Transport product to the measuring point	18		
6	Installation	19		
6.1	Installation conditions	19		
6.1.1	Mounting position	19		
6.1.2	Vessel installations	20		
6.1.3	Reduction of interference echoes	20		
6.1.4	Measurement in a plastic vessel	21		
6.1.5	Optimization options	21		
6.1.6	Beam angle	22		
6.2	Measuring conditions	23		
6.3	Mounting cladded flanges	24		
6.4	Installation in vessel (free space)	25		
6.4.1	Horn antenna (FMR51)	25		
6.4.2	Mesurement from the outside through plastic walls (FMR50/FMR51)	27		
6.4.3	Horn antenna, flush mount (FMR52)	28		
6.5	Installation in stilling well	29		
6.5.1	Recommendations for the stilling well	29		
6.5.2	Examples for the construction of stilling wells	30		
6.6	Installation in bypass	31		
6.6.1	Recommendations for the bypass pipe	31		
6.6.2	Example for the construction of a bypass	32		
6.7	Vessels with heat insulation	33		
6.8	Turning the transmitter housing	33		
6.9	Turning the display module	34		
6.10	Post-installation check	34		
7	Electrical connection	35		
7.1	Connection conditions	35		
7.1.1	Terminal assignment	35		
7.1.2	Cable specification	36		
7.1.3	Device plug connectors	37		
7.1.4	Supply voltage	38		
7.1.5	Overvoltage protection	38		
7.2	Connecting the device	39		
7.2.1	Pluggable spring-force terminals	40		
7.3	Post-connection check	40		
8	Operation options	42		
8.1	Overview	42		
8.1.1	Local operation	42		
8.1.2	Operation with remote display and operating module FHX50	42		
8.1.3	Remote operation	43		
8.2	Structure and function of the operating menu	44		
8.2.1	Structure of the operating menu	44		
8.2.2	User roles and related access authorization	45		
8.2.3	Write protection via access code	46		
8.2.4	Disabling write protection via access code	47		
8.2.5	Deactivation of the write protection via access code	47		
8.2.6	Write protection via write protection switch	48		
8.2.7	Enabling and disabling the keypad lock	50		
8.3	Display and operating module	51		
8.3.1	Display appearance	51		
8.3.2	Operating elements	54		

8.3.3	Entering numbers and text	55	13.4	Disposal	80
8.3.4	Opening the context menu	57			
8.3.5	Envelope curve on the display and operating module	58			
9	Integration into a PROFIBUS network	59	14	Accessories	81
9.1	Overview of the device database files (GSD) ..	59	14.1	Device-specific accessories	81
9.2	Set device address	59	14.1.1	Weather protection cover	81
9.2.1	Hardware addressing	59	14.1.2	Remote display FHX50	82
9.2.2	Software addressing	59	14.1.3	Horn protection for horn antenna ...	83
10	Commissioning via operating menu	61	14.1.4	Overvoltage protection	84
10.1	Installation and function check	61	14.1.5	Gas-tight feedthrough	84
10.2	Setting the operating language	61	14.2	Communication-specific accessories	85
10.3	Configuration of a level measurement	62	14.3	Service-specific accessories	85
10.4	Recording the reference curve	64	14.4	System components	85
10.5	Configuration of the on-site display	65			
10.5.1	Factory settings of the on-site display	65	15	Operating menu	86
10.5.2	Adjustment of the on-site display ...	65	15.1	Overview of the operating menu (display module)	86
10.6	Configuration management	66	15.2	Overview of the operating menu (operating tool)	93
10.7	Protection of the settings against unauthorized changes	67	15.3	"Setup" menu	100
11	Diagnostics and troubleshooting ...	68	15.3.1	"Mapping" wizard	108
11.1	General trouble shooting	68	15.3.2	"Analog input 1 to 6" submenu	110
11.1.1	General errors	68	15.3.3	"Advanced setup" submenu	112
11.1.2	Parametrization errors	68	15.4	"Diagnostics" menu	152
11.2	Diagnostic information on local display	70	15.4.1	"Diagnostic list" submenu	154
11.2.1	Diagnostic message	70	15.4.2	"Event logbook" submenu	155
11.2.2	Calling up remedial measures	72	15.4.3	"Device information" submenu	156
11.3	Diagnostic event in the operating tool	73	15.4.4	"Measured values" submenu	158
11.4	Diagnostic list	73	15.4.5	"Analog input 1 to 6" submenu	160
11.5	Overview of diagnostic events	74	15.4.6	"Data logging" submenu	162
11.6	Event logbook	75	15.4.7	"Simulation" submenu	165
11.6.1	Event history	75	15.4.8	"Device check" submenu	169
11.6.2	Filtering the event logbook	76			
11.6.3	Overview of information events	76	Index	171	
11.7	Firmware history	77			
12	Maintenance	78			
12.1	Exterior cleaning	78			
12.2	Replacing seals	78			
13	Repairs	79			
13.1	General information on repairs	79			
13.1.1	Repair concept	79			
13.1.2	Repairs to Ex-approved devices	79			
13.1.3	Replacement of an electronics module	79			
13.1.4	Replacement of a device	79			
13.2	Spare parts	80			
13.3	Return	80			

1 Important document information

1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols

1.2.1 Safety symbols


Symbol	Meaning
	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols

Symbol	Meaning	Symbol	Meaning
	Direct current		Alternating current
	Direct current and alternating current		Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.		Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.

1.2.3 Tool symbols

Symbol	Meaning
 A0013442	Torx screwdriver
 A0011220	Flat blade screwdriver

 Symbol	Meaning
 A0011219	Cross-head screwdriver
 A0011221	Allen key
 A0011222	Hexagon wrench

1.2.4 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Series of steps
	Result of a sequence of actions
	Help in the event of a problem
	Visual inspection

1.2.5 Symbols in graphics

Symbol	Meaning
1, 2, 3 ...	Item numbers
	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections
	Hazardous area Indicates a hazardous area.
	Safe area (non-hazardous area) Indicates the non-hazardous area.

1.2.6 Symbols at the device

Symbol	Meaning
	Safety instructions Observe the safety instructions contained in the associated Operating Instructions.
	Temperature resistance of the connection cables Specifies the minimum value of the temperature resistance of the connection cables.

1.3 Additional documentation

Document	Purpose and content of the document
Technical Information TI01040F (FMR51, FMR52)	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions KA01129F (FMR51/FMR52, PROFIBUS PA)	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Description of Device Parameters GP01018F (FMR5x, PROFIBUS PA)	Reference for your parameters The document provides a detailed explanation of each individual parameter in the operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

1.3.1 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

Feature 010	Approval	Available for	Feature 020 "Power Supply; Output"				
			A ¹⁾	B ²⁾	C ³⁾	E ⁴⁾ /G ⁵⁾	K ⁶⁾ /L ⁷⁾
BA	ATEX: II 1 G Ex ia IIC T6-T1 Ga	■ FMR51 ■ FMR52	XA00677F	XA01224F	XA001225	XA00685F	-
BB	ATEX: II 1/2 G Ex ia IIC T6-T1 Ga/Gb	■ FMR51 ■ FMR52	XA00677F	XA01224F	XA001225	XA00685F	-
BC	ATEX: II 1/2 G Ex d [ia] IIC T6-T1 Ga/Gb	■ FMR51 ■ FMR52	XA00680F	XA00680F	XA01232F	XA00688F	XA01233F
BD	ATEX: II 1/2/3 G Ex ic [ia Ga] IIC T6-T1 Ga/Gb/Gc	■ FMR51 ■ FMR52	XA00678F	XA01226F	XA01227F	XA00686F	XA01228F
BG	ATEX: II 3 G Ex nA IIC T6-T1 Gc	■ FMR51 ■ FMR52	XA00679F	XA01229F	XA01230F	XA00687F	XA01231F
BH	ATEX: II 3 G Ex ic IIC T6-T1 Gc	■ FMR51 ■ FMR52	XA00679F	XA01229F	XA01230F	XA00687F	XA01231F
BL	ATEX: II 1/2/3 G Ex nA [ia Ga] IIC T6-T1 Ga/Gb/Gc	■ FMR51 ■ FMR52	XA00678F	XA01226F	XA01227F	XA00686F	XA01228F

Feature 010	Approval	Available for	Feature 020 "Power Supply; Output"				
			A ¹⁾	B ²⁾	C ³⁾	E ⁴⁾ /G ⁵⁾	K ⁶⁾ /L ⁷⁾
B2	ATEX: II 1/2 G Ex ia IIC T6-T1 Ga/Gb ATEX: II 1/2 D Ex ia IIIC Txx°C Da/Db	■ FMR51 ■ FMR52	XA00683F	XA00683F	XA01235F	XA00691F	-
B3	ATEX: II 1/2 G Ex d [ia] IIC T6-T1 Ga/Gb ATEX: II 1/2 D Ex ta IIIC Txx°C Da/Db	■ FMR51 ■ FMR52	XA00684F	XA00684F	XA00684F	XA00692F	XA01236F
B4	ATEX:II 1/2 G Ex ia IIC T6-T1 Ga/Gb ATEX: II 1/2 G Ex d [ia] IIC T6-T1 Ga/Gb	■ FMR51 ■ FMR52	XA00681F	XA00681F	XA01234F	XA00689F	-
CD	CSA C/US DIP Cl.II,III Div.1 Gr.E-G	FMR51	XA01113F	XA01113F	XA01113F	XA01115F	XA01113F
C2	CSA C/US IS Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex ia	■ FMR51 ■ FMR52	XA01112F	XA01112F	XA01112F	XA01114F	-
C3	CSA C/US XP Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex d	■ FMR51 ■ FMR52	XA01113F	XA01113F	XA01113F	XA01115F	XA01113F
FB	FM IS Cl.I,II,III Div.1 Gr.A-G, AEx ia, NI Cl.1 Div.2	■ FMR51 ■ FMR52	XA01116F	XA01116F	XA01116F	XA01118F	-
FD	FM XP Cl.I,II,III Div.1 Gr.A-G, AEx d, NI Cl.1 Div.2	■ FMR51 ■ FMR52	XA01117F	XA01117F	XA01117F	XA01119F	XA01117F
FE	FM DIP Cl.II,III Div.1 Gr.E-G	FMR51	XA01117F	XA01117F	XA01117F	XA01119F	XA01117F
IA	IECEX: Ex ia IIC T6-T1 Ga	■ FMR51 ■ FMR52	XA00677F	XA01224F	XA001225	XA00685F	-
IB	IECEX: Ex ia IIC T6-T1 Ga/Gb	■ FMR51 ■ FMR52	XA00677F	XA01224F	XA001225	XA00685F	-
IC	IECEX: Ex d [ia] IIC T6-T1 Ga/Gb	■ FMR51 ■ FMR52	XA00680F	XA00680F	XA01232F	XA00688F	XA01233F
ID	IECEX: Ex ic [ia Ga] IIC T6-T1 Ga/Gb/Gc	■ FMR51 ■ FMR52	XA00678F	XA01226F	XA01227F	XA00686F	XA01228F
IG	IECEX: Ex nA IIC T6-T1 Gc	■ FMR51 ■ FMR52	XA00679F	XA01229F	XA01230F	XA00687F	XA01231F
IH	IECEX: Ex ic IIC T6-T1 Gc	■ FMR51 ■ FMR52	XA00679F	XA01229F	XA01230F	XA00687F	XA01231F
IL	IECEX: Ex nA [ia Ga] IIC T6-T1 Ga/Gb/Gc	■ FMR51 ■ FMR52	XA00678F	XA01226F	XA01227F	XA00686F	XA01228F
I2	IECEX: Ex ia IIC T6-T1 Ga/Gb IECEX: Ex ia IIIC Txx°C Da/Db	■ FMR51 ■ FMR52	XA00683F	XA00683F	XA01235F	XA00691F	-
I3	IECEX: Ex d [ia] IIC T6-T1 Ga/Gb IECEX: Ex ta IIIC Txx°C Da/Db	■ FMR51 ■ FMR52	XA00684F	XA00684F	XA00684F	XA00692F	XA01236F
I4	IECEX: Ex ia IIC T6-T1 Ga/Gb IECEX: Ex d [ia] IIC T6-T1 Ga/Gb	■ FMR51 ■ FMR52	XA00681F	XA00681F	XA01234F	XA00689F	-
KA	KC Ex ia IIC T6 Ga	■ FMR51 ■ FMR52	XA01045F	XA01045F	XA01045F	XA01047F	-
KB	KC Ex ia IIC T6 Ga/Gb	■ FMR51 ■ FMR52	XA01045F	XA01045F	XA01045F	XA01047F	-
KC	KC Ex d[ia] IIC T6	■ FMR51 ■ FMR52	XA01046F	XA01046F	XA01046F	XA01048F	XA01046F
MA	INMETRO: Ex ia IIC T6 Ga	■ FMR51 ■ FMR52	XA01286F	XA01287F	XA01288F	XA01296F	-
MC	INMETRO: Ex d[ia] IIC T6 Ga/Gb	■ FMR51 ■ FMR52	XA01292F	XA01292F	XA01293F	XA01298F	XA01294F
MH	INMETRO: Ex ic IIC T6 Gc	■ FMR51 ■ FMR52	XA01289F	XA01290F	XA01291F	XA01297F	-
NA	NEPSI Ex ia IIC T6 Ga	■ FMR51 ■ FMR52	XA01199F	XA01199F	XA01199F	XA01208F	-

Feature 010	Approval	Available for	Feature 020 "Power Supply; Output"				
			A ¹⁾	B ²⁾	C ³⁾	E ^{4)/G⁵⁾}	K ^{6)/L⁷⁾}
NB	NEPSI Ex ia IIC T6 Ga/Gb	- FMR51 - FMR52	XA01199F	XA01199F	XA01199F	XA01208F	-
NC	NEPSI Ex d[ia] IIC T6 Ga/Gb	- FMR51 - FMR52	XA01202F	XA01202F	XA01202F	XA01211F	XA01202F
NG	NEPSI Ex nA II T6 Gc	- FMR51 - FMR52	XA01201F	XA01201F	XA01201F	XA01210F	XA01201F
NH	NEPSI Ex ic IIC T6 Gc	- FMR51 - FMR52	XA01201F	XA01201F	XA01201F	XA01210F	XA01201F
N2	NEPSI Ex ia IIC T6 Ga/Gb, Ex iaD 20/21 T85...90°C	- FMR51 - FMR52	XA01205F	XA01205F	XA01205F	XA01214F	-
N3	NEPSI Ex d[ia] IIC T6 Ga/Gb, DIP A20/21 T85...90°C IP66	- FMR51 - FMR52	XA01206F	XA01206F	XA01206F	XA01215F	XA01206F
8A	FM/CSA IS+XP CL,I,II,III Div.1 Gr.A-G	- FMR51 - FMR52	- XA01112F - XA01113F - XA01116F - XA01117F	- XA01112F - XA01113F - XA01116F - XA01117F	- XA01112F - XA01113F - XA01116F - XA01117F	- XA01114F - XA01115F - XA01118F - XA01119F	-

1) 2-wire; 4-20mA HART

2) 2-wire; 4-20mA HART, switch output

3) 2-wire; 4-20mA HART, 4-20mA

4) 2-wire; FOUNDATION Fieldbus, switch output

5) 2-wire; PROFIBUS PA, switch output

6) 4-wire 90-253VAC; 4-20mA HART

7) 4-wire 10.4-48VDC; 4-20mA HART



For certified devices the relevant Safety Instructions (XA) are indicated on the nameplate.

If the device is prepared for the remote display FHX50 (product structure: feature 030: Display, Operation", option L or M), the Ex marking of some certificates changes according to the following table¹⁾:

Feature 010 ("Approval")	Feature 030 ("Display, Operation")	Ex marking
BE	L or M	ATEX II 1D Ex ta [ia] IIIC T ₅₀₀ °C Da
BF	L or M	ATEX II 1/2 D Ex ta [ia Db] IIIC Txx °C Da/Db
BG	L or M	ATEX II 3G Ex nA [ia Ga] IIC T6 Gc
BH	L or M	ATEX II 3G Ex ic [ia Ga] IIC T6 Gc
B3	L or M	ATEX II 1/2G Ex d [ia] IIC T6 Ga/Gb, ATEX II 1/2D Ex ta [ia Db] IIIC Txx °C Da/Db
IE	L or M	IECEX Ex ta [ia] IIIC T500 °C Da
IF	L or M	IECEX ta [ia Db] IIIC Txx °C Da/Db
IG	L or M	IECEX Ex nA [ia Ga] IIC T6 Gc
IH	L or M	IECEX Ex ic [ia Ga] IIC T6 Gc
I3	L or M	IECEX Ex d [ia] IIC T6 Ga/Gb, IECEX Ex ta [ia Db] IIIC Txx °C Da/Db
MH	L or M	Ex ic [ia Ga] IIC T6 Gc
NG	L or M	NEPSI Ex nA [ia Ga] IIC T6-T1 Gc

1) The marking of certificates not mentioned in this table are not affected by the FHX50.

Feature 010 ("Approval")	Feature 030 ("Display, Operation")	Ex marking
NH	L or M	NEPSI Ex ic [ia Ga] IIC T6-T1 Gc
N3	L or M	NEPSI Ex d [ia] IIC T6-T1 Ga/Gb, DIP A20/21 [ia D] TA, Txx°C IP6X

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task
- ▶ Are authorized by the plant owner/operator
- ▶ Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- ▶ Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- ▶ Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- ▶ Following the instructions in these Operating Instructions

2.2 Designated use

Application and measured materials

The measuring device described in these Operating Instructions is intended for the continuous, contactless level measurement of liquids, pastes and sludge. The device can also be freely mounted outside closed metal vessels because of its operating frequency of about 26 GHz, a maximum radiated pulsed power of 5.7 mW and an average power output of 0.015 mW (for the version with advanced dynamics: maximum pulse power: 23.3 mW; average power: 0.076 mW). Operation is completely harmless to humans and animals.

Observing the limit values specified in the "Technical data" and listed in the Operating Instructions and supplementary documentation, the measuring device may be used for the following measurements only:

- ▶ Measured process variables: level, distance, signal strength
- ▶ Calculated process variables: Volume or mass in arbitrarily shaped vessels; flow through measuring weirs or flumes (calculated from the level by the linearization functionality)

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Use the measuring device only for measured materials against which the process-wetted materials are adequately resistant.
- ▶ Observe the limit values in "Technical data".

Incorrect use

The manufacturer is not liable for damage caused by improper or non-designated use.

Verification for borderline cases:

- ▶ For special measured materials and cleaning agents, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of wetted materials, but does not accept any warranty or liability.

Residual risk

The electronics housing and its built-in components such as display module, main electronics module and I/O electronics module may heat to 80 °C (176 °F) during operation through heat transfer from the process as well as power dissipation within the electronics. During operation the sensor may assume a temperature near the temperature of the measured material.

Danger of burns due to heated surfaces!

- ▶ For high process temperatures: Install protection against contact in order to prevent burns.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from the manufacturer only.

Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection, pressure vessel safety):

- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these Instructions.

2.5 Product safety


This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which they are safe to operate.

It meets general safety standards and legal requirements. It also complies with the EC directives listed in the device-specific EC Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

3 Product description

3.1 Product design

3.1.1 Micropilot FMR51

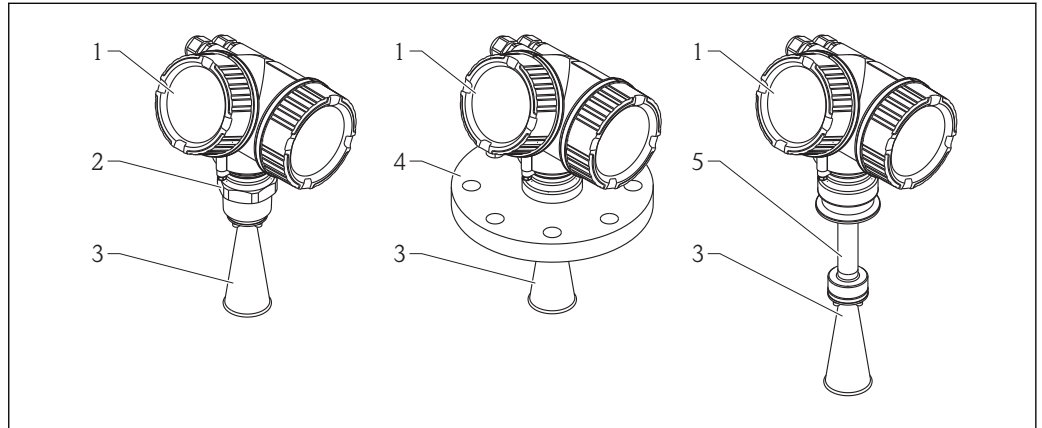


A0016818

 1 Design of the Micropilot FMR51 (26 GHz)

- 1 Electronics housing
- 2 Process connection (Thread)
- 3 Horn antenna
- 4 Flange
- 5 Antenna extension

3.1.2 Micropilot FMR52

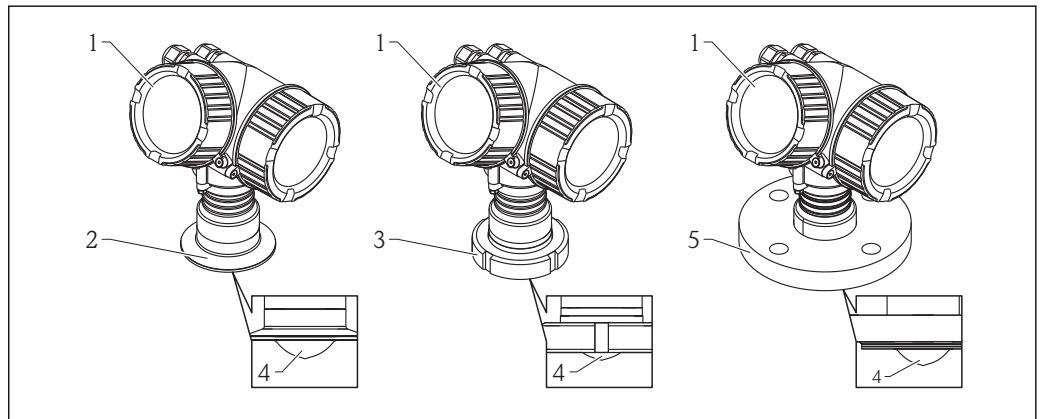


A0016788

 2 Design of the Micropilot FMR52 (26 GHz)

- 1 Electronics housing
- 2 Tri-Clamp process connection
- 3 Dairy coupling
- 4 PTFE cladding
- 5 Flange

3.1.3 Electronics housing

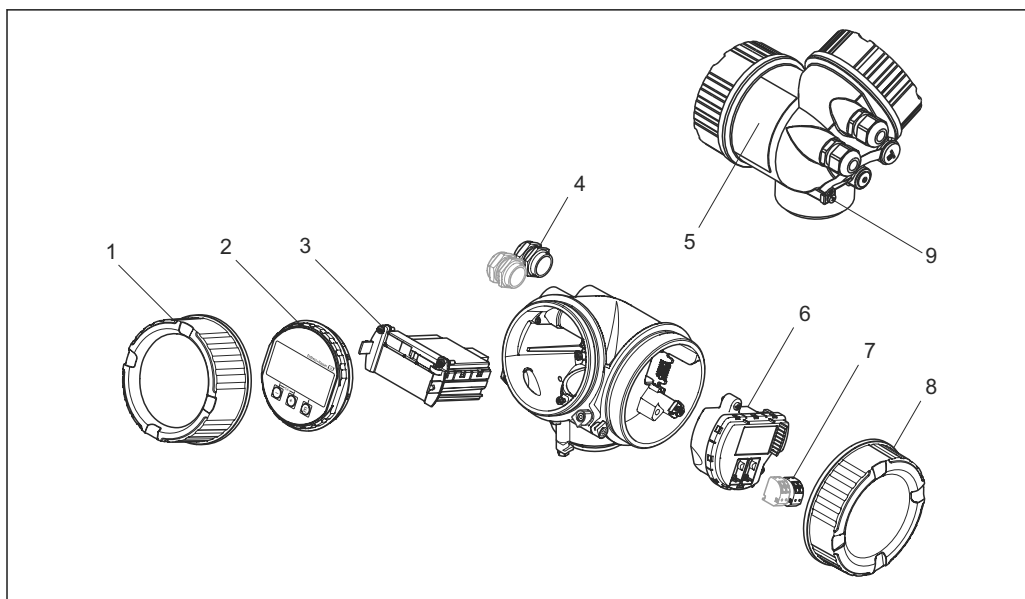

A0012422

 3 Design of the electronics housing

- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands (1 or 2, depending on instrument version)
- 5 Nameplate
- 6 I/O electronics module
- 7 Terminals (pluggable spring terminals)
- 8 Connection compartment cover
- 9 Grounding terminal

3.2 Registered trademarks

PROFIBUS®

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

KALREZ®, VITON®

Registered trademark of DuPont Performance Elastomers L.L.C., Wilmington, USA

TEFLON®


Registered trademark of E.I. DuPont de Nemours & Co., Wilmington, USA

TRI CLAMP®


Registered trademark of Alfa Laval Inc., Kenosha, USA

4 Incoming acceptance and product identification



4.1 Incoming acceptance

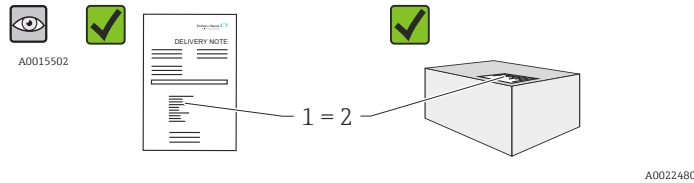


Are the order codes on the delivery note (1) and the product sticker (2) identical?

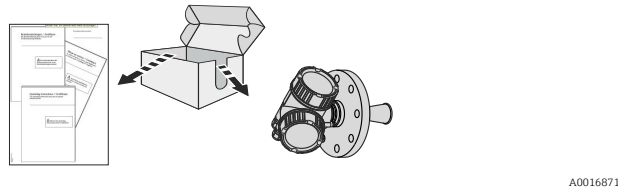

Are the goods undamaged?

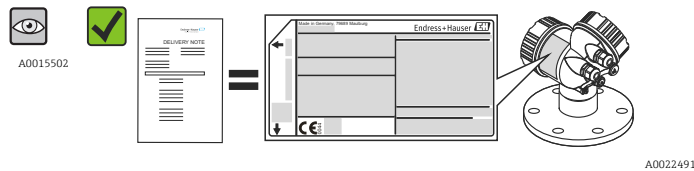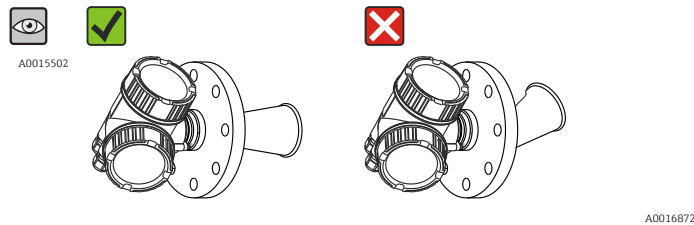

Do the nameplate data match the ordering information on the delivery note?

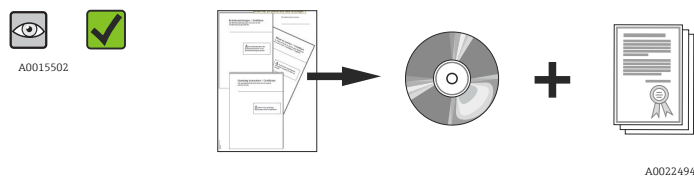

Is the DVD with the operating tool present?
If required (see nameplate): Are the Safety Instructions (XA) present?



If one of these conditions is not satisfied, contact your Endress+Hauser Sales Center.

4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Extended order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

4.2.1 Nameplate

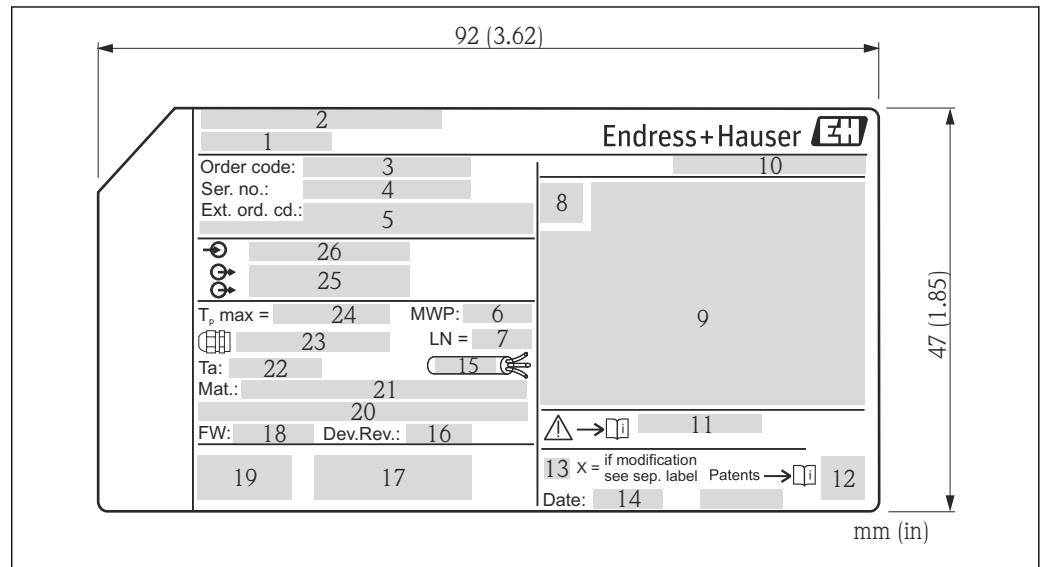

A0019444

4 Nameplate of the Micropilot

- 1 Device name
- 2 Address of manufacturer
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Process pressure
- 7 Antenna length (only for FMR51 with antenna extension)
- 8 Certificate symbol
- 9 Certificate and approval relevant data
- 10 Degree of protection: e.g. IP, NEMA
- 11 Document number of the Safety Instructions: e.g. XA, ZD, ZE
- 12 Data Matrix Code
- 13 Modification mark
- 14 Manufacturing date: year-month
- 15 Temperature resistance of the cable
- 16 Geräterevision (Dev.Rev.)
- 17 Additional information about the device version (certificates, approvals, communication): e.g. SIL, PROFIBUS
- 18 Firmware version (FW)
- 19 CE mark, C-Tick
- 20 Profibus PA: Profi-Version; FOUNDATION Fieldbus: Device ID
- 21 Material in contact with process
- 22 Permitted ambient temperature (T_a)
- 23 Size of the thread of the cable glands
- 24 Maximum process temperature
- 25 Signal outputs
- 26 Operating voltage

i Only 33 digits of the extended order code can be indicated on the nameplate. If the extended order code exceeds 33 digits, the rest will not be shown. However, the complete extended order code can be viewed in the operating menu of the device:
Extended order code 1 to 3 parameter

5 Storage, Transport

5.1 Storage conditions

- Permitted storage temperature: -40 to +80 °C (-40 to +176 °F)
- Use the original packaging.


5.2 Transport product to the measuring point

NOTICE

Housing or antenna horn may be damaged or break away.

Risk of injury!

- ▶ Transport the measuring device to the measuring point in its original packaging or at the process connection.
- ▶ Do not fasten lifting devices (hoisting slings, lifting eyes etc.) at the housing or the antenna horn but at the process connection. Take into account the mass center of the device in order to avoid unintended tilting.
- ▶ Comply with the safety instructions, transport conditions for devices over 18kg (39.6lbs) (IEC61010).

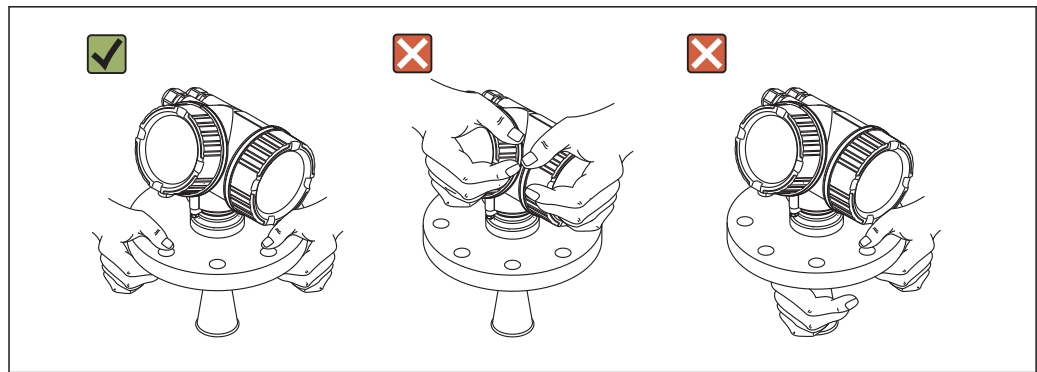


A0016875

6 Installation


6.1 Installation conditions

6.1.1 Mounting position

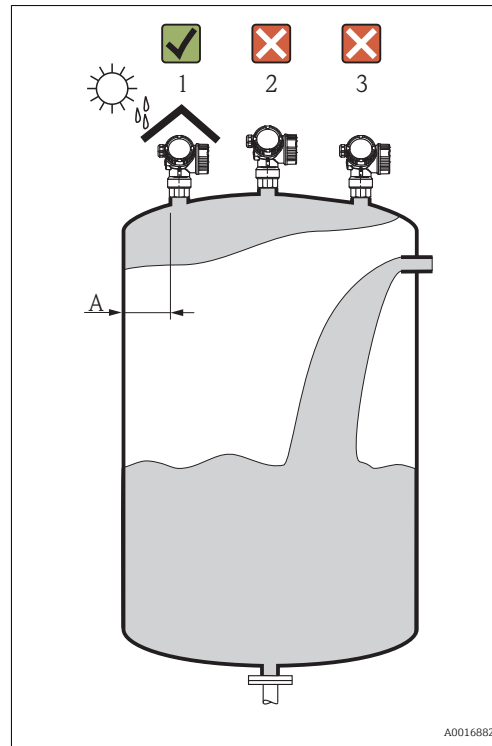


- Recommended distance **A** from wall to outer edge of nozzle: $\sim 1/6$ of tank diameter. Nevertheless the device should not be installed closer than 15 cm (5.91 in) to the tank wall.
- Not in the center (2), as interference can cause signal loss.
- Not above the fill stream (3).
- It is recommended to use a weather protection cover (1) in order to protect the device from direct sun or rain.

6.1.2 Vessel installations

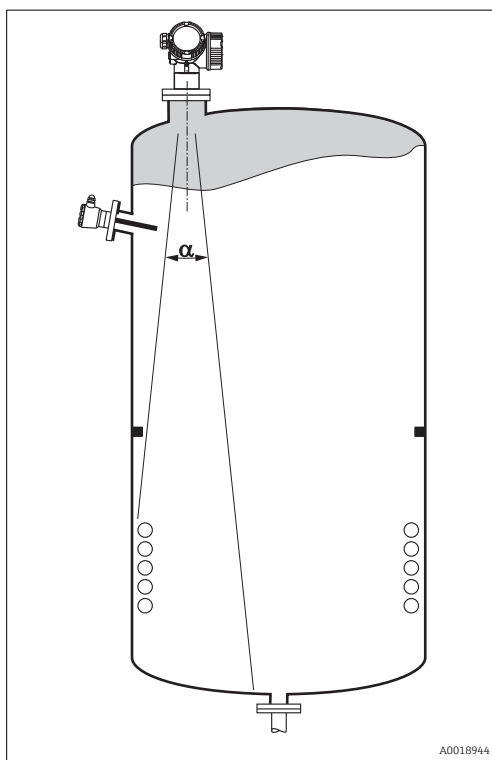

Avoid any installations (point level switches, temperature sensors, braces, vacuum rings, heating coils, baffles etc.) inside the signal beam. Take into account the beam angle $\rightarrow$ 22.


6.1.3 Reduction of interference echoes

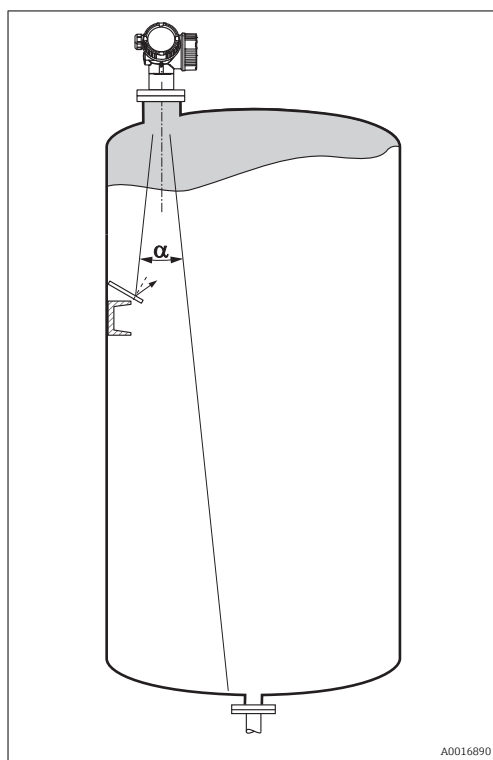

Metallic screens mounted at a slope spread the radar signal and can, therefore, reduce interference echoes.

6.1.4 Measurement in a plastic vessel

If the outer wall of the vessel is made of a non-conductive material (e.g. GRP), microwaves can also be reflected off interfering installations outside the signal beam (e.g. metallic pipes (1), ladders (2), grates (3), ...). Therefore, there should be no such interfering installations in the signal beam. Please contact Endress+Hauser for further information.

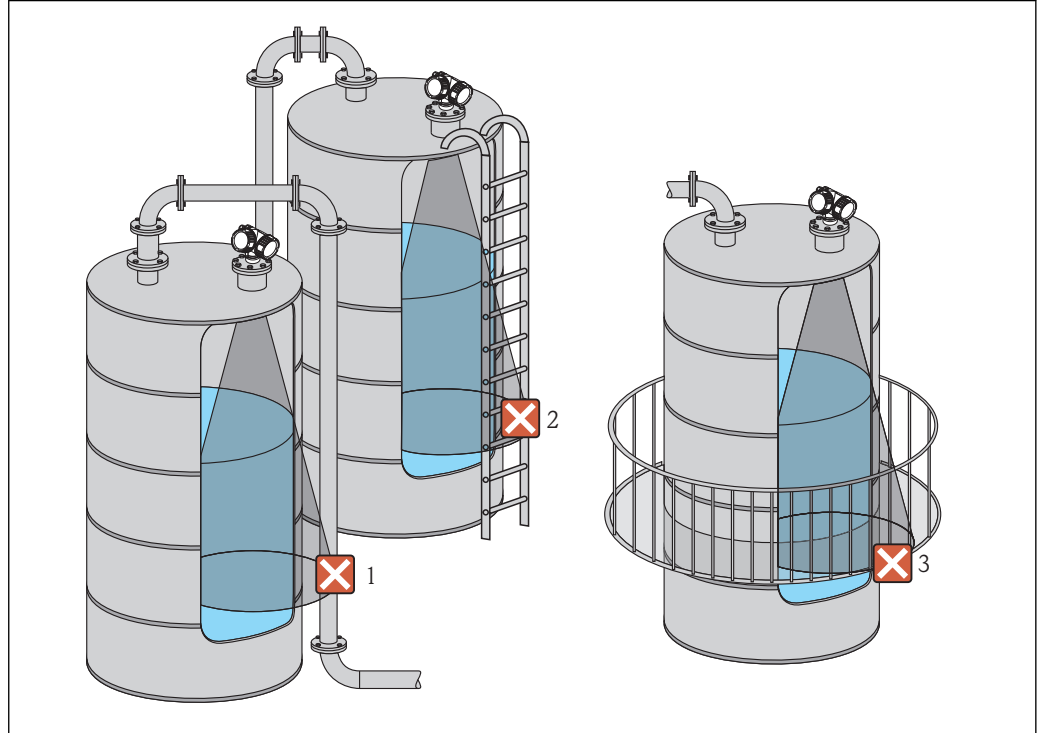


A0017123

6.1.5 Optimization options

- Antenna size
The bigger the antenna, the smaller the beam angle α and the fewer interference echoes
→ 22.
- Mapping
The measurement can be optimized by means of electronic suppression of interference echoes.
See the **Confirm distance** parameter (→ 105) for details.
- Antenna alignment
Take into account the marker on the flange or threaded connection → 25
→ 28.
- Stilling well
A stilling well can be applied to avoid interferences → 29.
- Metallic screens mounted at a slope
They spread the radar signals and can, therefore, reduce interference echoes.

6.1.6 Beam angle

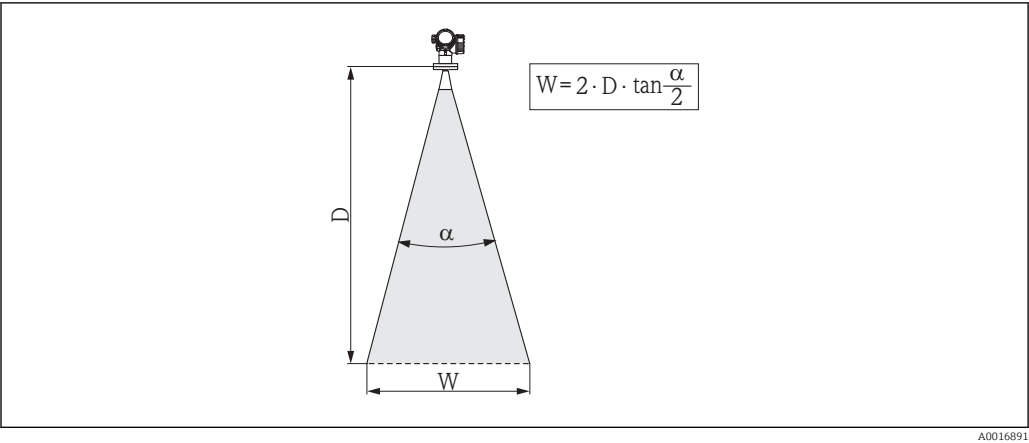

5 Relationship between beam angle α , distance D and beamwidth diameter W

The beam angle is defined as the angle α where the energy density of the radar waves reaches half the value of the maximum energy density (3-dB-width). Microwaves are also emitted outside the signal beam and can be reflected off interfering installations.

Beam diameter **W** as a function of beam angle α and measuring distance **D**:

FMR51				
Antenna size	40 mm (1½ in)	50 mm (2 in)	80 mm (3 in)	100 mm (4 in)
Beam angle α	23°	18°	10°	8°
Measuring distance (D)	Beamwidth diameter W			
3 m (9.8 ft)	1.22 m (4 ft)	0.95 m (3.1 ft)	0.53 m (1.7 ft)	0.42 m (1.4 ft)
6 m (20 ft)	2.44 m (8 ft)	1.9 m (6.2 ft)	1.05 m (3.4 ft)	0.84 m (2.8 ft)
9 m (30 ft)	3.66 m (12 ft)	2.85 m (9.4 ft)	1.58 m (5.2 ft)	1.26 m (4.1 ft)
12 m (39 ft)	4.88 m (16 ft)	3.80 m (12 ft)	2.1 m (6.9 ft)	1.68 m (5.5 ft)
15 m (49 ft)	6.1 m (20 ft)	4.75 m (16 ft)	2.63 m (8.6 ft)	2.10 m (6.9 ft)
20 m (66 ft)	8.14 m (27 ft)	6.34 m (21 ft)	3.50 m (11 ft)	2.80 m (9.2 ft)
25 m (82 ft)	10.17 m (33 ft)	7.92 m (26 ft)	4.37 m (14 ft)	3.50 m (11 ft)
30 m (98 ft)	-	9.50 m (31 ft)	5.25 m (17 ft)	4.20 m (14 ft)
35 m (115 ft)	-	11.09 m (36 ft)	6.12 m (20 ft)	4.89 m (16 ft)
40 m (131 ft)	-	12.67 m (42 ft)	7.00 m (23 ft)	5.59 m (18 ft)
45 m (148 ft)	-	-	7.87 m (26 ft)	6.29 m (21 ft)
60 m (197 ft)	-	-	10.50 m (34 ft)	8.39 m (28 ft)
70 m (230 ft)	-	-	-	9.79 m (32 ft)

FMR52		
Antenna size	50 mm (2 in)	80 mm (3 in)
Beam angle α	18°	10°
Measuring distance (D)	Beamwidth diameter W	
3 m (9.8 ft)	0.95 m (3.1 ft)	0.53 m (1.7 ft)
6 m (20 ft)	1.9 m (6.2 ft)	1.05 m (3.4 ft)
9 m (30 ft)	2.85 m (9.4 ft)	1.58 m (5.2 ft)
12 m (39 ft)	3.80 m (12 ft)	2.1 m (6.9 ft)
15 m (49 ft)	4.75 m (16 ft)	2.63 m (8.6 ft)
20 m (66 ft)	6.34 m (21 ft)	3.50 m (11 ft)
25 m (82 ft)	7.92 m (26 ft)	4.37 m (14 ft)
30 m (98 ft)	9.50 m (31 ft)	5.25 m (17 ft)
35 m (115 ft)	11.09 m (36 ft)	6.12 m (20 ft)
40 m (131 ft)	12.67 m (42 ft)	7.00 m (23 ft)
45 m (148 ft)	-	7.87 m (26 ft)
60 m (197 ft)	-	10.50 m (34 ft)


6.2 Measuring conditions

- In case of **boiling surfaces**, **bubbling** or tendency for **foaming** use FMR53 or FMR54. Depending on its consistence, foam can either absorb microwaves or reflect them off the foam surface. Measurement is possible under certain conditions. For FMR50, FMR51 and FMR52, the additional option "Advanced dynamics" is recommended in these cases (feature 540: "Application Package", option EM).
- In case of heavy **steam development** or **condensate**, the maximum measuring range of FMR50, FMR51 and FMR52 may decrease depending on density, temperature and composition of the steam → use FMR53 or FMR54.
- For the measurement of absorbing gases such as **ammonia NH₃** or some **fluorocarbons**²⁾, please use Levelflex or Micropilot FMR54 in a stilling well.
- The measuring range begins, where the beam hits the tank bottom. Particularly with dish bottoms or conical outlets the level cannot be detected below this point.
- For stilling well applications, the zero should be positioned at the end of the tube, as the electromagnetic waves do not propagate completely outside the tube. It must be taken into account that the accuracy may be reduced in the area **C**. In order to guarantee the required accuracy in these cases, it is recommended to position the zero-point at a distance **C** above the end of the tube (see figure).
- In case of media with a low dielectric constant ($\epsilon_r = 1.5$ to 4)³⁾ the tank bottom can be visible through the medium at low levels (low height **C**). Reduced accuracy has to be expected in this range. If this is not acceptable, we recommend positioning the zero point at a distance **C** (see figure) above the tank bottom in these applications.
- In principle it is possible to measure up to the tip of the antenna with FMR51, FMR53 and FMR54. However, due to considerations regarding corrosion and build-up, the end of the measuring range should not be chosen any closer than **A** (see figure) to the tip of the antenna.

2) Affected compounds are e.g. R134a, R227, Dymel 152a.

3) Dielectric constants of important media commonly used in various industries are summarized in the DC manual (CP01076F) and in the Endress+Hauser "DC Values App" (available for Android and iOS).

- When using FMR54 with planar antenna, especially for media with low dielectric constants, the end of the measuring range should not be closer than **A: 1 m (3.28 ft)** to the flange.
- The smallest possible measuring range **B** depends on the antenna version (see figure).
- The tank height should be at least **H** (see table).

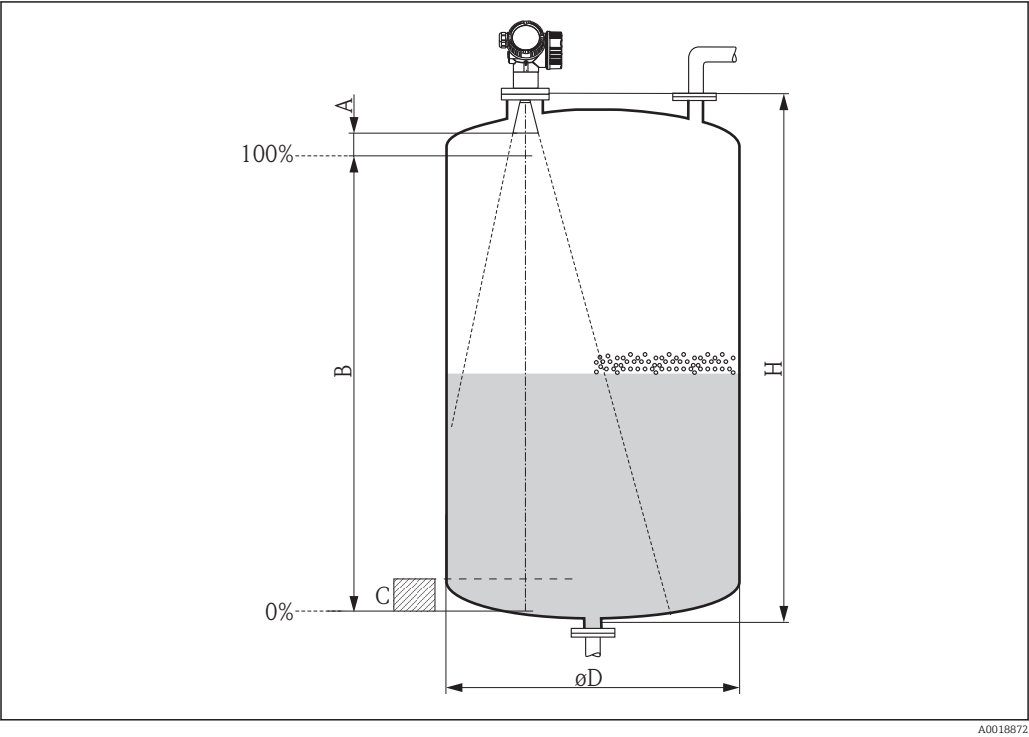

Device	A [mm (in)]	B [m (ft)]	C [mm (in)]	H [m (ft)]
FMR51	50(1.97)	> 0.2 (0.7)	50 to 250 (1.97 to 9.84)	> 0.3 (1.0)
FMR52	200(7.87)			

6.3 Mounting cladded flanges

- i** ■ Use flange screws according to the number of flange holes.
- Tighten the screws with the required torque (see table).
- Retighten the screws after 24 hours or after the first temperature cycle.
- Depending on process pressure and process temperature check and retighten the screws at regular intervals.

Flange size	Number of screws	Recommended torque [Nm]	
		minimum	maximum
EN			
DN50/PN16	4	45	65
DN80/PN16	8	40	55
DN100/PN16	8	40	60
DN150/PN16	8	75	115
ASME			
2"/150lbs	4	40	55
3"/150lbs	4	65	95
4"/150lbs	8	45	70


Flange size	Number of screws	Recommended torque [Nm]	
		minimum	maximum
6"/150lbs	8	85	125
JIS			
10K 50A	4	40	60
10K 80A	8	25	35
10K 100A	8	35	55
10K 100A	8	75	115

6.4 Installation in vessel (free space)

6.4.1 Horn antenna (FMR51)

Alignment

- Align the antenna vertically to the product surface.
The maximum range may be reduced if the horn antenna is not vertically aligned.
- A marking at the flange (somewhere between the flange holes) or the boss enables alignment of the antenna. This marking must be aligned towards the tank wall as well as possible.

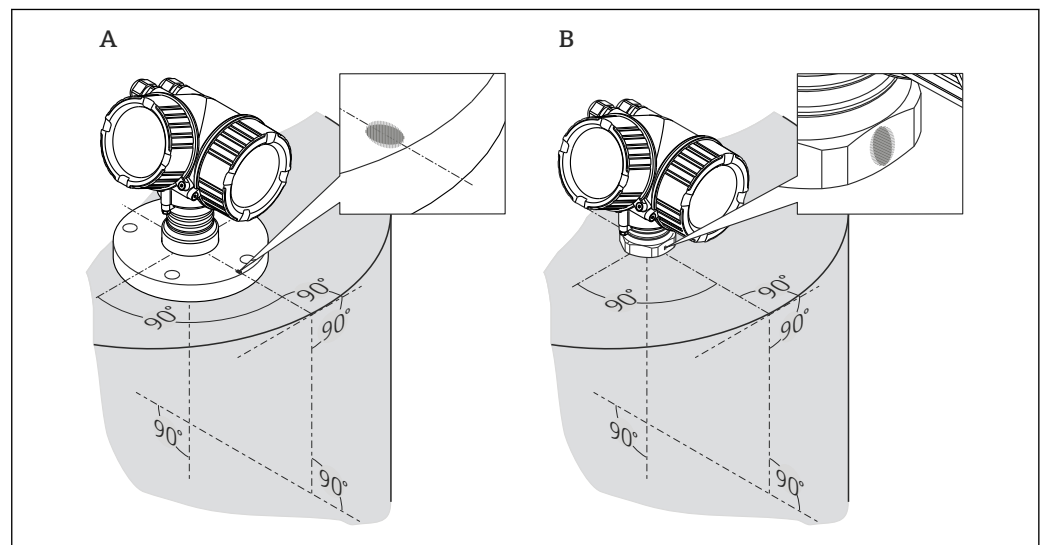


A0018974

i Depending on the device version the marking may be a circle or two short parallel lines.

Nozzle mounting

For optimum measurement, the tip of the antenna should extend below the nozzle. Depending on the antenna size this is achieved by the following maximum nozzle heights:

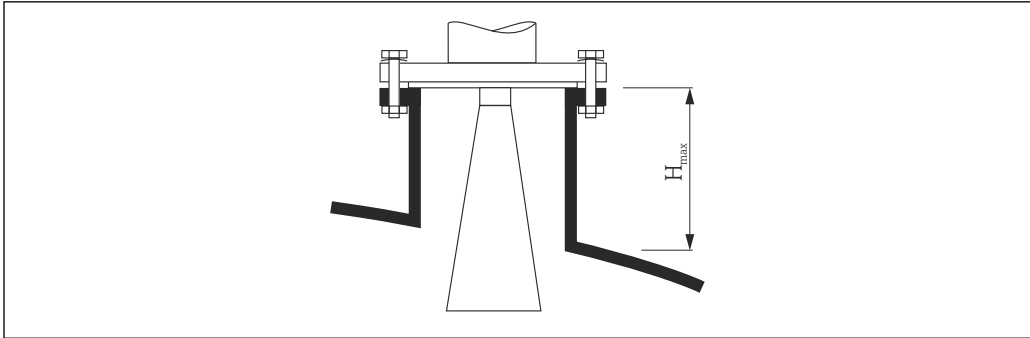

A0016820


6 Nozzle height for horn antenna (FMR51)

Antenna ¹⁾	Maximum nozzle height H_{max}
BA: Horn 40mm/1-1/2"	85 mm (3.35 in)
BB: Horn 50mm/2"	115 mm (4.53 in)
BC: Horn 80mm/3"	210 mm (8.27 in)
BD Horn 100mm/4"	280 mm (11.0 in)

1) Feature 070 of the product structure

Conditions for longer nozzles

If the medium has good reflective properties, higher nozzles can be accepted. In this case the maximum nozzle height, H_{max} , is dependent on the nozzle diameter, D :

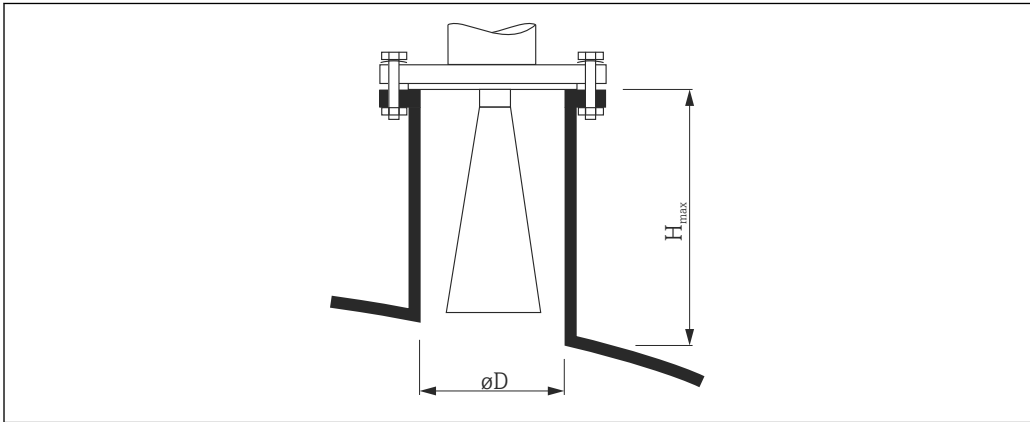

A0023611

Nozzle diameter D	Maximum nozzle height H_{max}	Recommended antenna ¹⁾
40 mm (1.5 in)	100 mm (3.9 in)	BA: Horn 40mm/1-1/2"
50 mm (2 in)	150 mm (5.9 in)	BB: Horn 50mm/2"
80 mm (3 in)	250 mm (9.8 in)	BC: Horn 80mm/3"

Nozzle diameter D	Maximum nozzle height H_{max}	Recommended antenna ¹⁾
100 mm (4 in)	500 mm (19.7 in)	BD: Horn 100mm/4"
150 mm (6 in)	800 mm (31.5 in)	BD: Horn 100mm/4"

1) Feature 070 of the product structure

-  If the antenna doesn't extend below the nozzle, observe the following:
- The nozzle end must be smooth and free of burrs. If possible its edge should be rounded.
 - An interference echo suppression must be performed.
 - Please contact Endress+Hauser for applications with higher nozzles than those indicated in the table.
-  ■ For mounting in high nozzles the device is available in a version with an antenna extension of up to 1000 mm (39.4 in) ⁴⁾
- The antenna extension may cause interference echoes in the near range. In this case it may occur that the maximum measurable level is reduced.

Threaded connection

-  For devices with a threaded connection it may be necessary - depending on the antenna size - to unmount the horn before fastening the device and to mount it again afterwards.
- Tighten with the hexagonal nut only.
 - Tool : 55 mm hexagonal wrench
 - Maximum permissible torque: 60 Nm (44 lbf ft)

6.4.2 Measurement from the outside through plastic walls (FMR50/FMR51)

- Dielectric constant of the medium: $\epsilon_r > 10$
- If possible, use an antenna 100 mm (4 in).
- The distance from the lower edge of the antenna to the tank ceiling should be about 100 mm (4 in).
- If possible, avoid mounting locations where condensation or build-up might occur.
- In case of outdoor mounting, the space between antenna and vessel has to be protected from the elements.
- Do not mount any potential reflectors (e.g. pipes) outside the tank in the signal beam.

Suitable thickness of the tank ceiling:

Penetrated material	PE	PTFE	PP	Perspex
DK / ϵ_r	2.3	2.1	2.3	3.1
Optimum thickness ¹⁾	3.8 mm (0.15 in)	4.0 mm (0.16 in)	3.8 mm (0.15 in)	3.3 mm (0.13 in)


1) Other possible values for the thickness are multiples of the values listed (e.g. for PE: 7,6 mm (0.3 in), 11,4 mm (0.45 in))

4) Feature 610 "Accessory mounted" of the product structure.

6.4.3 Horn antenna, flush mount (FMR52)


Alignment

- Align the antenna vertically to the product surface.
The maximum range may be reduced if the horn antenna is not vertically aligned.
- A marking at the flange (somewhere between the flange holes) or the boss enables alignment of the antenna. This marking must be aligned towards the tank wall as well as possible.

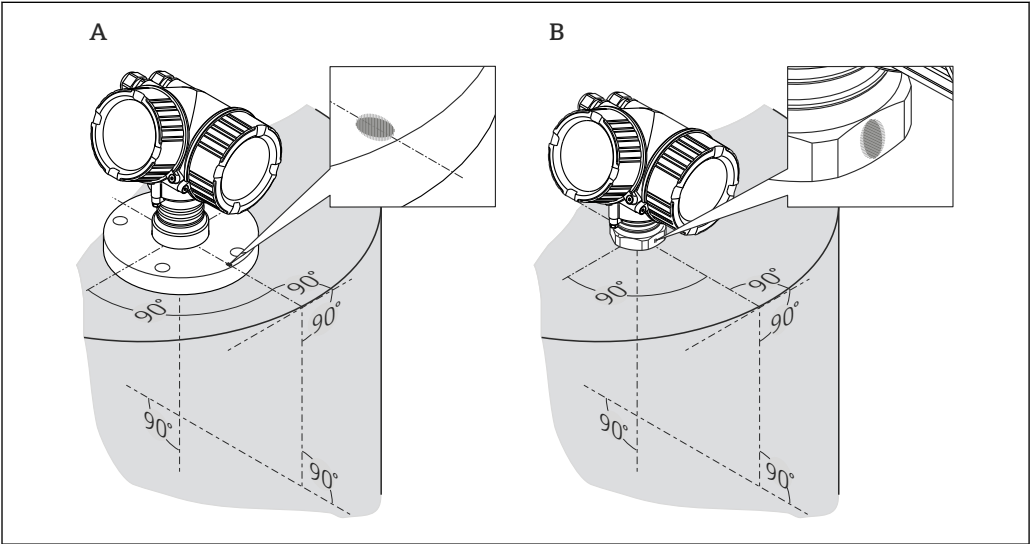

i Depending on the device version the marking may be a circle or two short parallel lines.

Nozzle mounting

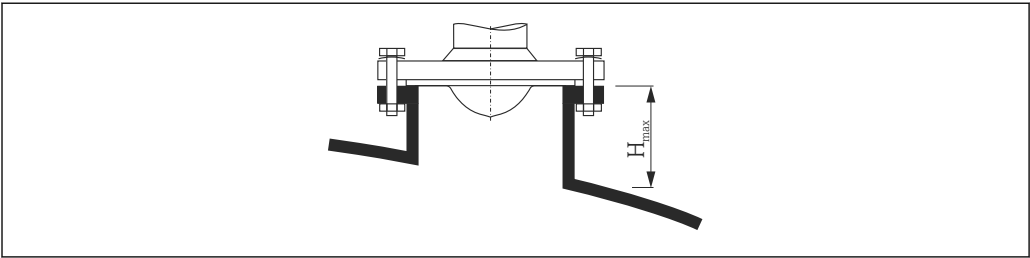

7 Nozzle height for horn antenna, flush mount (FMR52)


Antenna ¹⁾	Maximum nozzle height H_{max}
BO: Horn 50mm/2"	500 mm (19.7 in)
BP: Horn 80mm/3"	500 mm (19.7 in)

1) Feature 070 of the product structure

i Please contact Endress+Hauser for applications with higher nozzle.

- i** ■ For flanges with PTFE cladding: Observe the notes on the mounting of cladded flanges → 24.
- Usually, the PTFE flange cladding also serves as a seal between the nozzle and the device flange.

6.5 Installation in stilling well

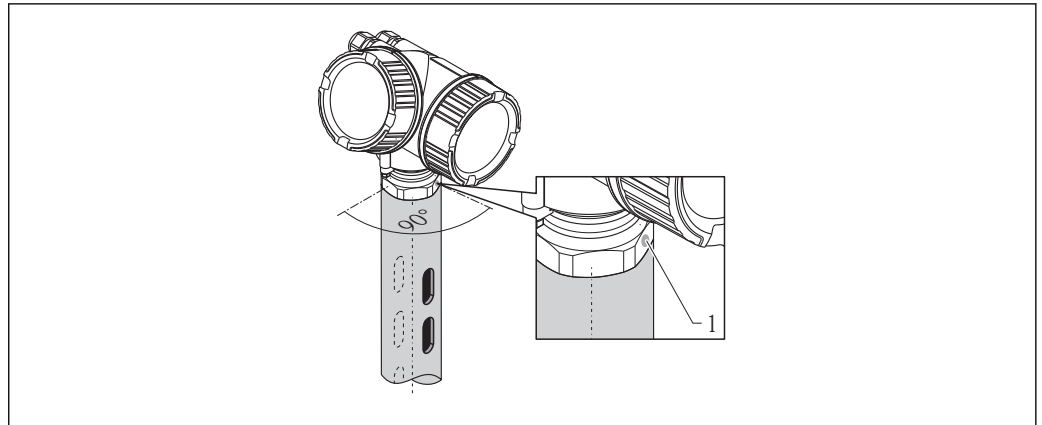

A0016841

8 Installation in stilling well


1 Marking for antenna alignment

- For horn antenna: Align the marking towards the slots of the stilling well.
- Measurements can be performed through an open full bore ball valve without any problems.
- After mounting, the housing can be turned 350° in order to facilitate access to the display and the terminal compartment → 33.

6.5.1 Recommendations for the stilling well


- Metal (no enamel coating; plastic on request).
- Constant diameter.
- Diameter of stilling well not larger than antenna diameter.
- Diameter difference between horn antenna and inner diameter of the stilling well as small as possible.
- Weld seam as smooth as possible and on the same axis as the slots.
- Slots offset 180° (not 90°).
- Slot width or diameter of holes max. 1/10 of pipe diameter, de-burred. Length and number do not have any influence on the measurement.
- Select horn antenna as big as possible. For intermediate sizes (e.g. 180 mm (7 in)) select next larger antenna and adapt it mechanically (for horn antennas)
- At any transition (i.e. when using a ball valve or mending pipe segments), no gap may be left exceeding 1 mm (0.04 in).
- The stilling well must be smooth on the inside (average roughness $R_z \leq 6.3 \mu\text{m}$ (248 μin)). Use extruded or parallel welded metal pipe. An extension of the pipe is possible with welded flanges or pipe sleeves. Flange and pipe have to be properly aligned at the inside.
- Do not weld through the pipe wall. The inside of the stilling well must remain smooth. In case of unintentional welding through the pipe, the weld seam and any unevenness on the inside need to be carefully removed and smoothened. Otherwise, strong interference echoes will be generated and material build-up will be promoted.
- In the case of smaller nominal widths flanges must be welded to the pipe such that they allow for a correct orientation (marker aligned toward slots).

6.5.2 Examples for the construction of stilling wells

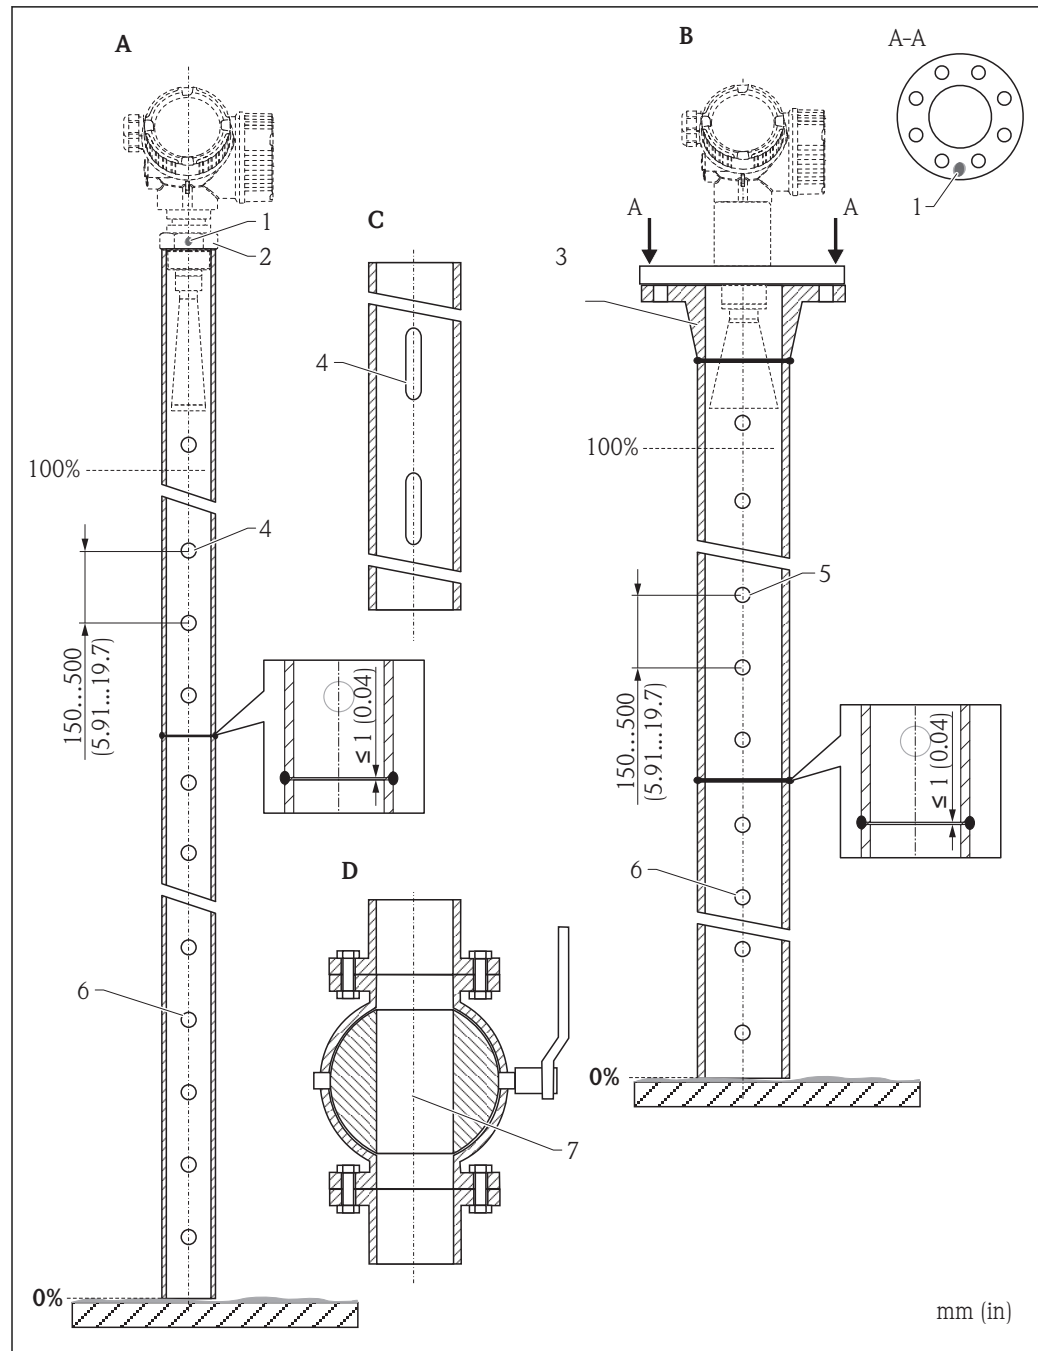

A0019009

6.6 Installation in bypass

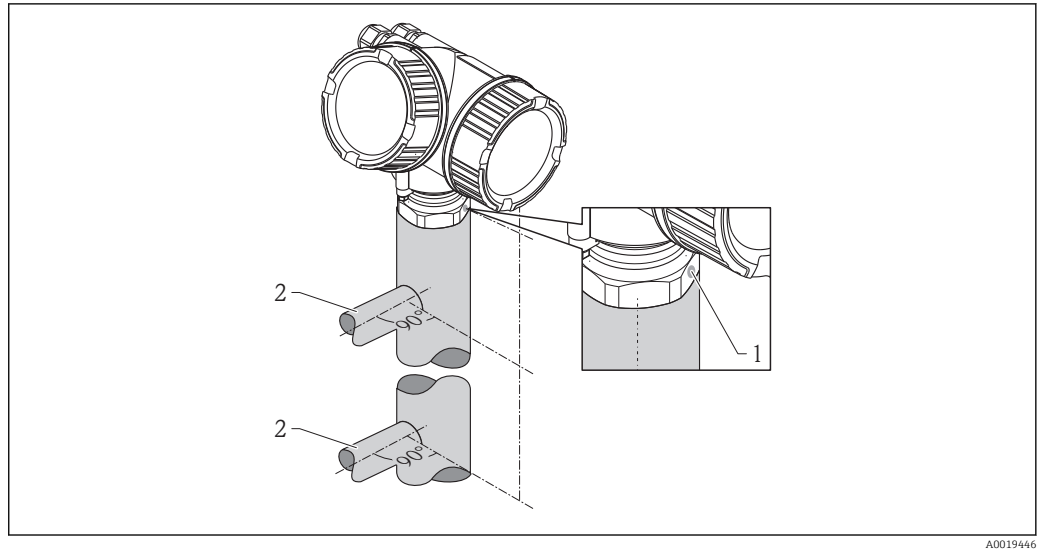

A0019446

9 Installation in bypass


- 1 Marking for antenna alignment
2 Tank connectors

- Align the marker perpendicular (90°) to the tank connectors.
- Measurements can be performed through an open full bore ball valve without any problems.
- After mounting, the housing can be turned 350° in order to facilitate access to the display and the terminal compartment → 33.

6.6.1 Recommendations for the bypass pipe


- Metal (no plastic or enamel coating).
- Constant diameter.
- Select horn antenna as big as possible. For intermediate sizes (e.g. 95 mm (3.5 in)) select next larger antenna and adapt it mechanically (for horn antennas).
- Diameter difference between horn antenna and inner diameter of the bypass as small as possible.
- At any transition (i.e. when using a ball valve or mending pipe segments), no gap may be created exceeding 1 mm (0.04 in).
- In the area of the tank connections (~ ±20 cm (7.87 in)) a reduced accuracy of the measurement has to be expected.

6.6.2 Example for the construction of a bypass

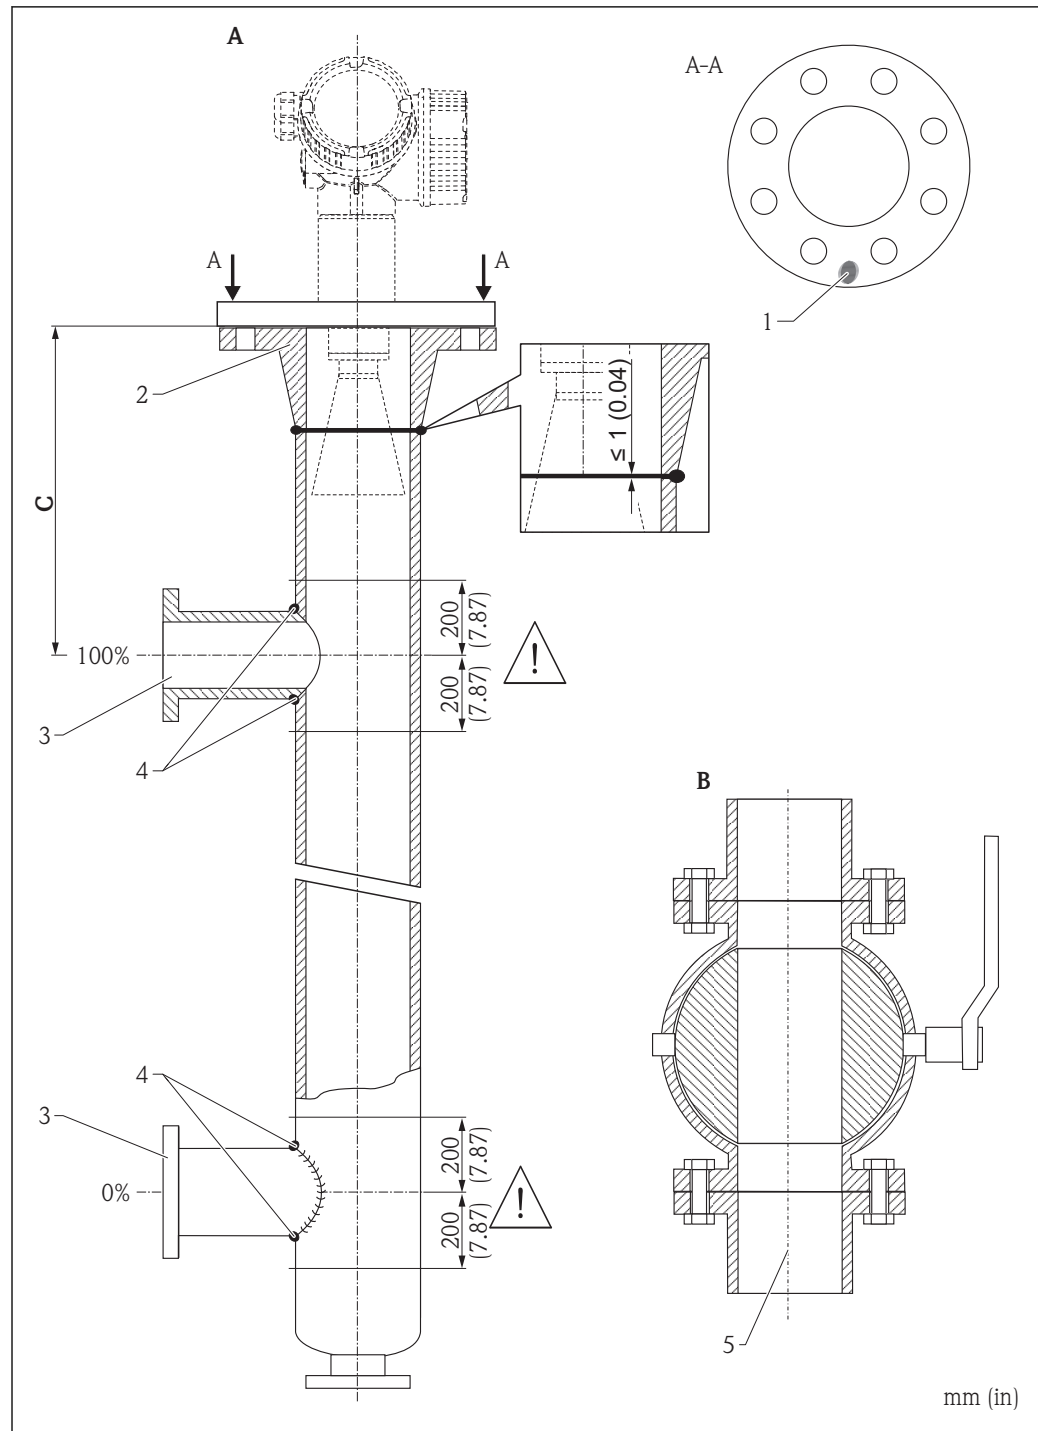

- A Micropilot FMR50/FMR51/FMR52/FMR54: Horn 80mm(3")
 B Full bore ball valve
 C Minimum distance to upper connection pipe: 400 mm (15,7 in)
 1 Marking for axial alignment
 2 e.g. welding neck flange DIN2633
 3 Diameter of the connection pipes as small as possible
 4 Do not weld through the pipe wall; the inside of the bypass must remain smooth.
 5 Diameter of opening of ball valve must always be equivalent to pipe diameter. Avoid edges and constrictions.


6.7 Vessels with heat insulation

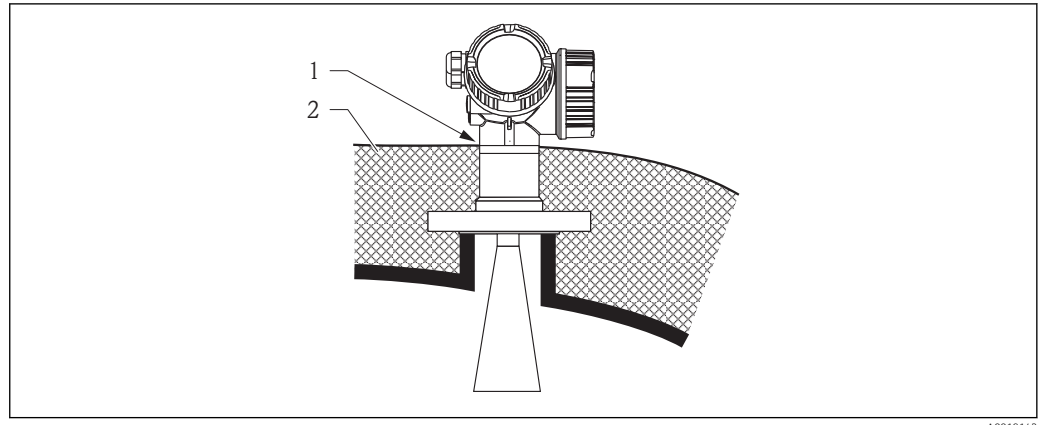

If process temperatures are high, the device must be included in normal tank insulation to prevent the electronics heating up as a result of heat radiation or convection. The insulation may not exceed beyond the neck of the housing.


6.8 Turning the transmitter housing

To provide easier access to the connection compartment or display module, the transmitter housing can be turned:

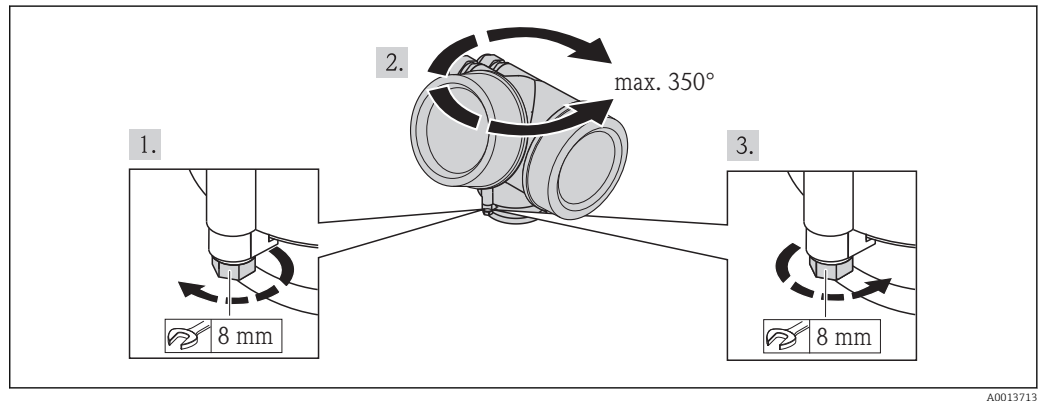

1. Unscrew the securing screw using an open-ended wrench.
2. Rotate the housing in the desired direction.
3. Tighten the securing screw (1,5 Nm for plastics housing; 2,5 Nm for aluminium or stainless steel housing).

6.9 Turning the display module

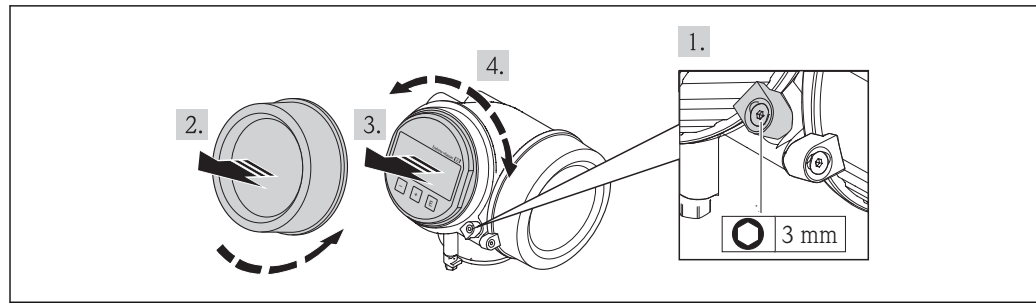

A0013905

1. If present: Loosen the screw of the securing clamp of the electronics compartment cover using an Allen key and turn the clamp 90° counterclockwise.
2. Unscrew cover of the electronics compartment from the transmitter housing.
3. Pull out the display module with a gentle rotation movement.
4. Rotate the display module into the desired position: Max. $8 \times 45^\circ$ in each direction.
5. Feed the spiral cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.
6. Screw the cover of the electronics compartment firmly back onto the transmitter housing.
7. Tighten the securing clamp again using the Allen key (Torque: 2.5 Nm).

6.10 Post-installation check


☐	Is the device undamaged (visual inspection)?
☐	Does the device conform to the measuring point specifications? For example: ■ Process temperature ■ Process pressure (refer to the chapter on "Material load curves" of the "Technical Information" document) ■ Ambient temperature range ■ Measuring range
☐	Are the measuring point identification and labeling correct (visual inspection)?
☐	Is the device adequately protected from precipitation and direct sunlight?
☐	Are the securing screw and securing clamp tightened securely?

7 Electrical connection

7.1 Connection conditions

7.1.1 Terminal assignment



PROFIBUS PA / FOUNDATION Fieldbus

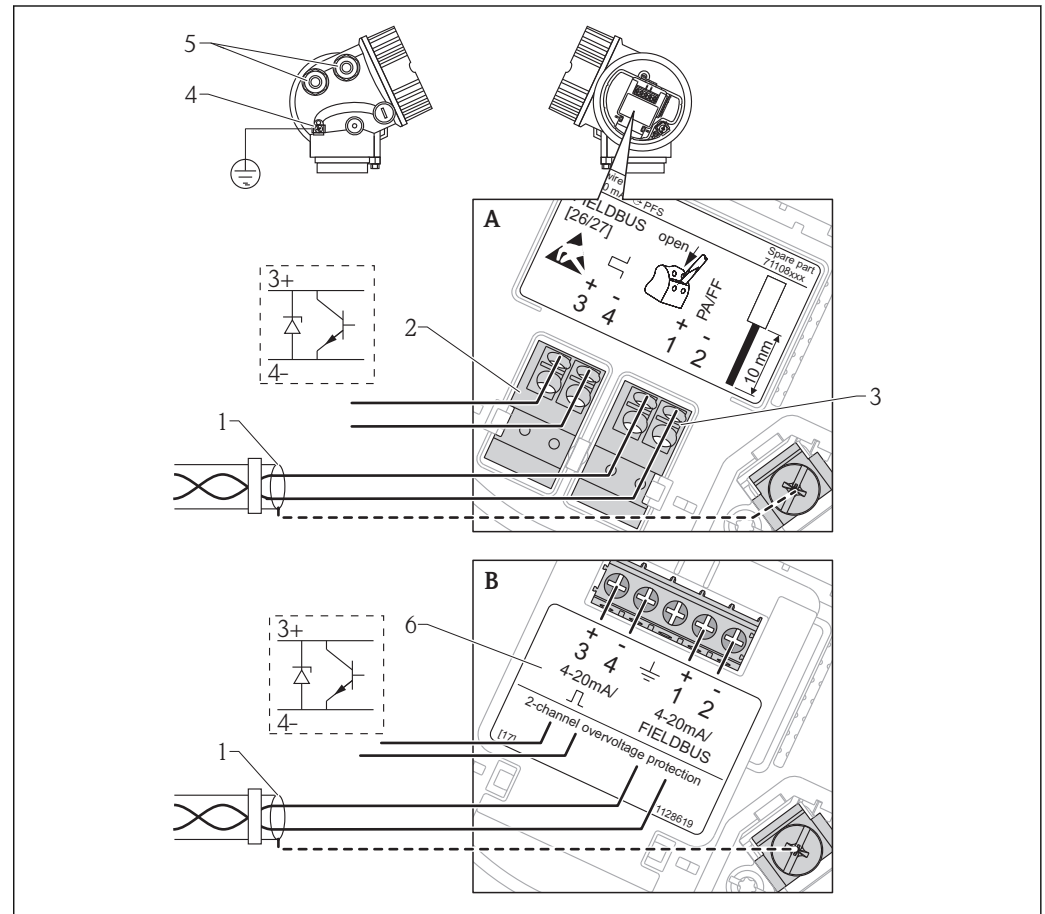

10 Terminal assignment PROFIBUS PA / FOUNDATION Fieldbus

- A Without integrated overvoltage protection
- B With integrated overvoltage protection
- 1 Cable screen: Observe cable specifications
- 2 Switch output (open collector): Terminals 3 and 4
- 3 PROFIBUS PA / FOUNDATION Fieldbus: Terminals 1 and 2
- 4 Terminal for potential equalization line
- 5 Cable entries
- 6 Overvoltage protection module

Connection examples for the switch output

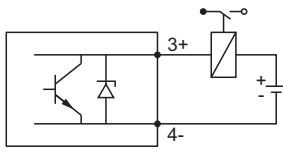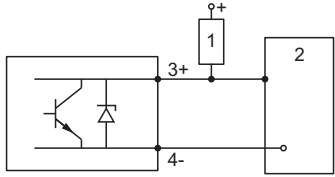 11 Connection of a relay A0015909 Suitable relays (examples): ■ Solid-state relay: Phoenix Contact OV-24DC/480AC/5 with mounting rail connector UMK-1 OM-R/AMS ■ Electromechanical relay: Phoenix Contact PLC-RSC-12DC/21	 12 Connection of a digital input A0015910 1 Pull-up resistor 2 Digital input
---	---

i For optimum interference immunity we recommend to connect an external resistor (internal resistance of the relay or Pull-up resistor) of $< 1\,000\ \Omega$.

7.1.2 Cable specification

- Minimum cross-section: See the "Terminal" specification in the Technical Information for the device.
- For ambient temperature $T_U \geq 60\ ^\circ\text{C}$ ($140\ ^\circ\text{F}$): use cable for temperature $T_U + 20\ \text{K}$.

PROFIBUS


Use a twisted, screened two-wire cable, preferably cable type A.

i For further information on the cable specifications, see Operating Instructions BA00034S "Guidelines for planning and commissioning PROFIBUS DP/PA", PNO Guideline 2.092 "PROFIBUS PA User and Installation Guideline" and IEC61158-2 (MBP).


7.1.3 Device plug connectors

 For the versions with fieldbus plug connector (M12 or 7/8"), the signal line can be connected without opening the housing.

Pin assignment of the M12 plug connector

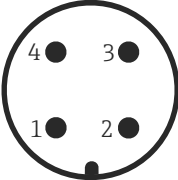 A0011175	Pin	Meaning
	1	Signal +
	2	not connected
	3	Signal -
	4	Ground

Pin assignment of the 7/8" plug connector

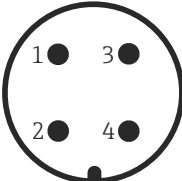 A0011176	Pin	Meaning
	1	Signal -
	2	Signal +
	3	Not connected
	4	Screen

7.1.4 Supply voltage

PROFIBUS PA, FOUNDATION Fieldbus

"Power supply; Output" ¹⁾	"Approval" ²⁾	Terminal voltage
E: 2-wire; FOUNDATION Fieldbus, switch output G: 2-wire; PROFIBUS PA, switch output	■ Non-Ex ■ Ex nA ■ Ex nA(ia) ■ Ex ic ■ Ex ic(ia) ■ Ex d(ia) / XP ■ Ex ta / DIP ■ CSA GP	9 to 32 V ³⁾
	■ Ex ia / IS ■ Ex ia + Ex d(ia) / IS + XP	9 to 30 V ³⁾

- 1) Feature 020 of the product structure
 2) Feature 010 of the product structure
 3) Input voltages up to 35 V will not spoil the device.

Polarity sensitive	No
FISCO/FNICO compliant according to IEC 60079-27	Yes

7.1.5 Overvoltage protection

If the measuring device is used for level measurement in flammable liquids which requires the use of overvoltage protection according to DIN EN 60079-14, standard for test procedures 60060-1 (10 kA, pulse 8/20 µs), overvoltage protection has to be ensured by an integrated or external overvoltage protection module.

Integrated overvoltage protection

An integrated overvoltage protection module is available for 2-wire HART as well as PROFIBUS PA and FOUNDATION Fieldbus devices.

Product structure: Feature 610 "Accessory mounted", option NA "Overvoltage protection".

Technical data	
Resistance per channel	2 * 0.5 Ω max
Threshold DC voltage	400 to 700 V
Threshold impulse voltage	< 800 V
Capacitance at 1 MHz	< 1.5 pF
Nominal arrest impulse voltage (8/20 µs)	10 kA

External overvoltage protection

HAW562 or HAW569 from Endress+Hauser are suited as external overvoltage protection.



For detailed information please refer to the following documents:

- HAW562: TI01012K
- HAW569: TI01013K

7.2 Connecting the device


⚠ WARNING

Explosion hazard!

- ▶ Comply with the relevant national standards.
- ▶ Observe the specifications in the Safety Instructions (XA).
- ▶ Only use the specified cable glands.
- ▶ Check whether the supply voltage matches the specifications on the nameplate.
- ▶ Before connecting the device: Switch the supply voltage off.
- ▶ Before switching on the supply voltage: Connect the potential bonding line to the exterior ground terminal.

Required tools and accessories:


- For instruments with safety pin for the lid: AF 3 Allen key
- Wire stripping pliers
- When using stranded wires: Wire end sleeves.

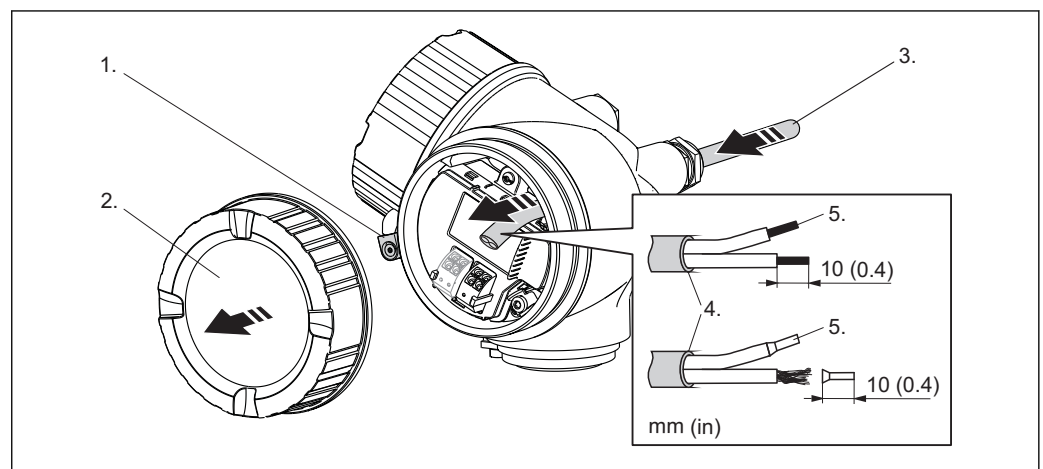

A0012619

1. Loosen the screw of the securing clamp of the connection compartment cover and turn the clamp 90° counterclockwise.
2. Unscrew the connection compartment cover.
3. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable.
5. Strip the cable ends 10 mm (0.4 in). For stranded cables, also attach wire end ferrules.
6. Firmly tighten the cable glands.

7.

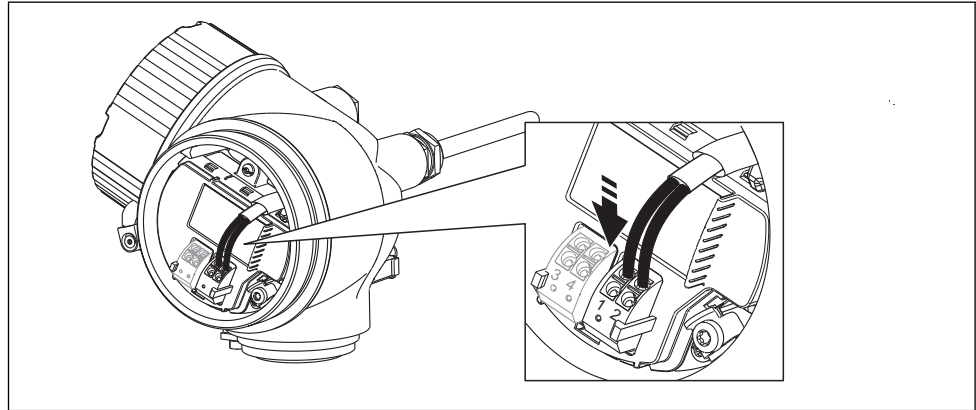


Connect the cable in accordance with the terminal assignment → 35.

8. When using screened cable: Connect the cable screen to the ground terminal.
9. Screw the cover onto the connection compartment.
10. For instruments with safety pin for the lid: Adjust the safety pin so that its edge is over the edge of the display lid. Tighten the safety pin.

7.2.1 Pluggable spring-force terminals

Instruments without integrated overvoltage protection have pluggable spring-force terminals. Rigid conductors or flexible conductors with cable sleeve can directly be inserted and are contacted automatically.

To remove cables from the terminal: Press on the groove between the terminals using a flat-tip screwdriver ≤ 3 mm (0.12 inch) while pulling the cables out of the terminals.

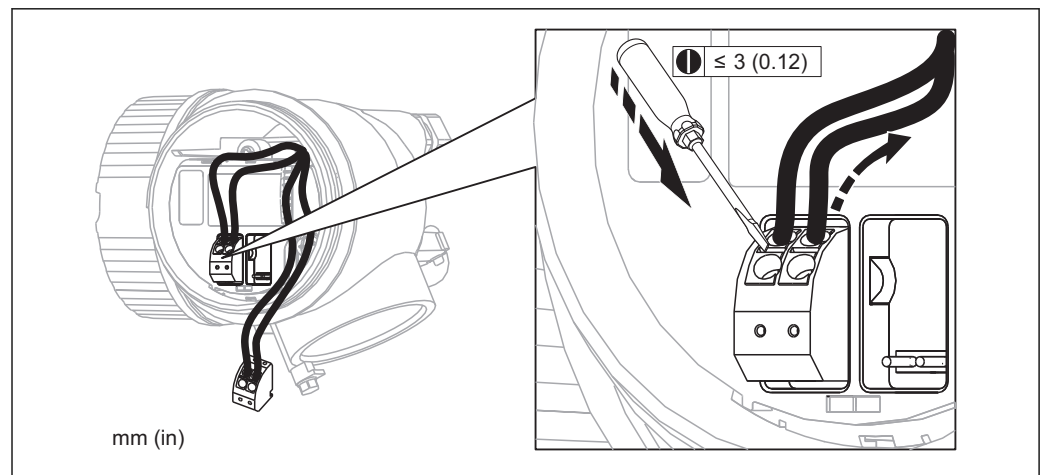

7.3 Post-connection check



☐	Are cables or the device undamaged (visual inspection)?
☐	Do the cables comply with the requirements?
☐	Do the cables have adequate strain relief?
☐	Are all cable glands installed, firmly tightened and correctly sealed?
☐	Does the supply voltage match the specifications on the transmitter nameplate?
☐	Is the terminal assignment correct → 35?

☐	If required: Is the protective earth connected correctly ?
☐	If supply voltage is present: Is the device ready for operation and do values appear on the display module?
☐	Are all housing covers installed and firmly tightened?
☐	Is the securing clamp tightened correctly?


8 Operation options

8.1 Overview

8.1.1 Local operation

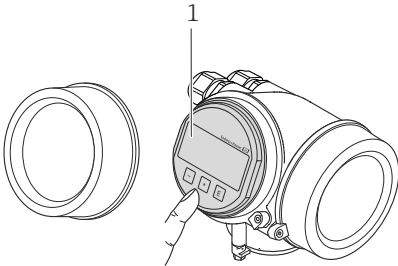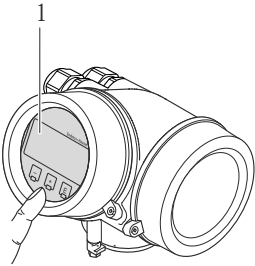Order code for "Display; Operation", option C "SD02"	Order code for "Display; Operation", option E "SD03"
 <i>1 Operation with pushbuttons</i>	 <i>1 Operation with touch control</i>


8.1.2 Operation with remote display and operating module FHX50

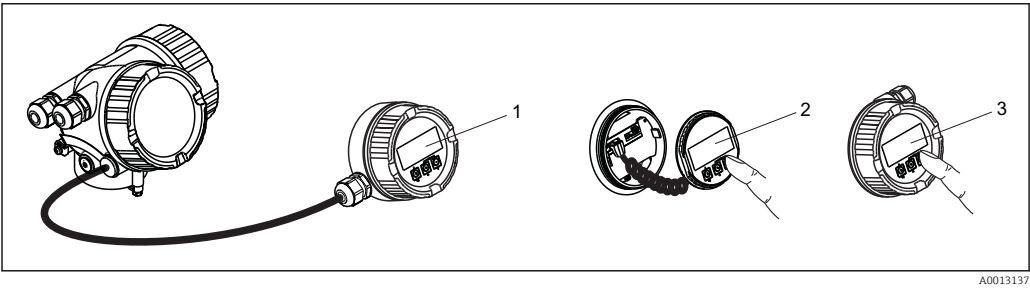

- 13 FHX50 operating options
- 1 Housing of the remote display and operating module FHX50
 - 2 Display and operating module SD02, push buttons; cover must be removed
 - 3 Display and operating module SD03, optical keys; can be operated through the glass of the cover

8.1.3 Remote operation


Via PROFIBUS PA protocol

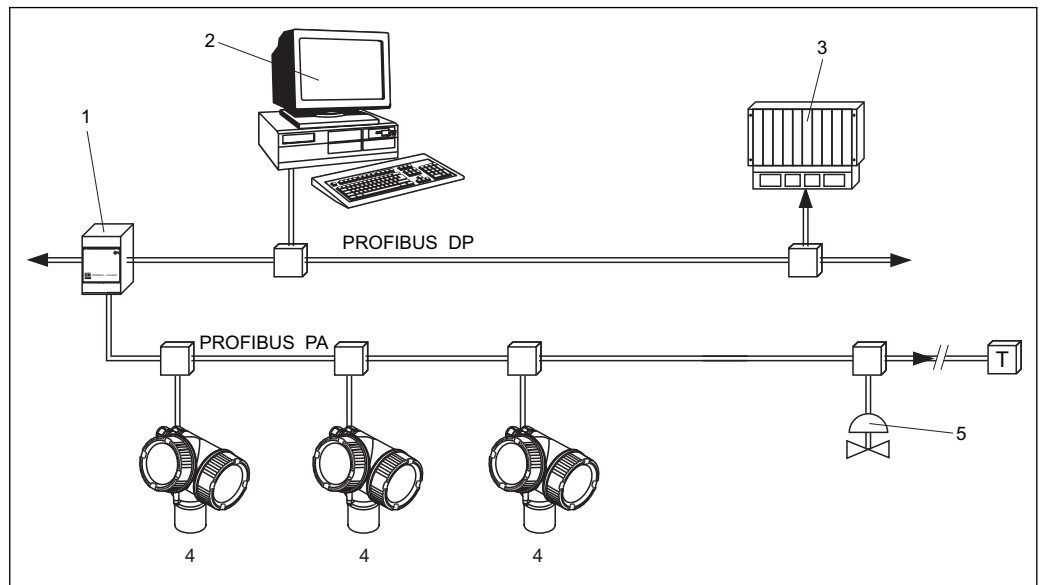

A0015775

- 1 Segment coupler
- 2 Computer with Profiboard/Proficard and operating tool (e.g. FieldCare)
- 3 PLC (Programmable Logic Controller)
- 4 Transmitter
- 5 Additional functions (valves etc.)

Via service interface (CDI)

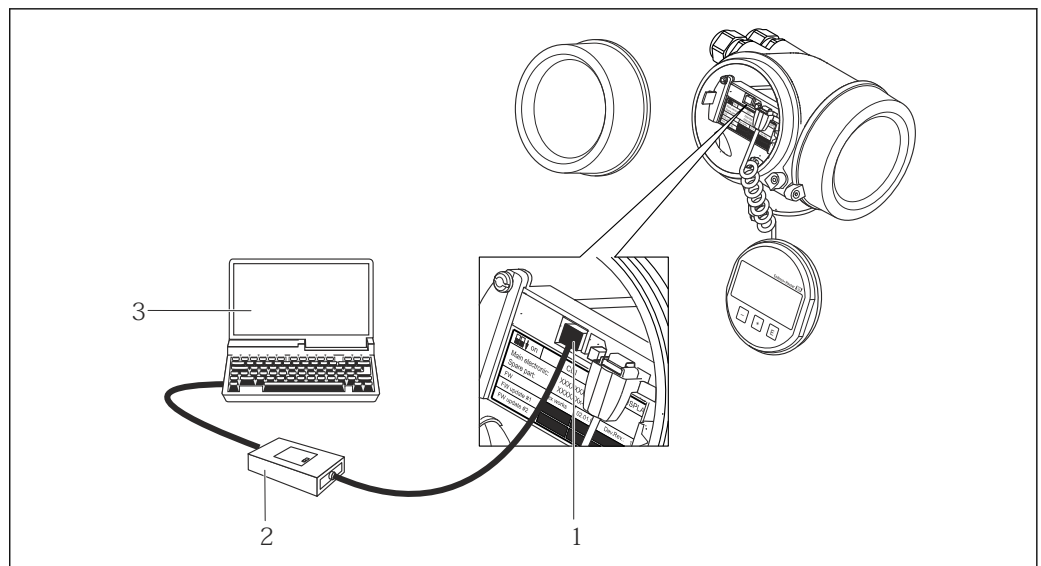

A0014019

- 1 Service interface (CDI) of the measuring device (= Endress+Hauser Common Data Interface)
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

Menu	Submenu / parameter	Meaning
	Language ¹⁾	Defines the operating language of the on-site display.
Setup	Parameter 1 ... Parameter N	When all these parameters have been assigned appropriate values, the measured should be completely configured in a standard application.
	Advanced setup	Contains further submenus and parameters: ■ to adapt the device to special measuring conditions. ■ to process the measured value (scaling, linearization). ■ to configure the signal output.
Diagnostics	Diagnostic list	Contains up to 5 currently active error messages.
	Event logbook ²⁾	Contains the last 20 messages (which are no longer active).
	Device information	Contains information needed to identify the device.
	Measured values	Contains all current measured values.
	Data logging	Contains the history of the individual measuring values.
	Simulation	Used to simulate measured values or output values.
	Device check	Contains all parameters needed to check the measurement capability of the device.
Expert ³⁾ Contains all parameters of the device (including those which are already contained in one of the above submenus). This menu is organized according to the function blocks of the device. The parameter of the Expert menu are described in: GP01018F (PROFIBUS PA)	System	Contains all general device parameters which do not affect the measurement or the communication interface.
	Sensor	Contains all parameters needed to configure the measurement.
	Output	Contains all parameters needed to configure the switch output (PFS).
	Communication	Contains all parameters needed to configure the digital communication interface.
	Diagnostics	Contains all parameters needed to detect and analyze operational errors.

- 1) In case of operation via operating tools (e.g. FieldCare), the "Language" parameter is located at "Setup → Advanced setup → Display"
- 2) only available with local operation
- 3) On entering the "Expert" menu, an access code is always requested. If a customer specific access code has not been defined, "0000" has to be entered.

8.2.2 User roles and related access authorization

The two user roles **Operator** and **Maintenance** have different write access to the parameters if a device-specific access code has been defined. This protects the device configuration via the local display from unauthorized access →  46.

Access authorization to parameters

User role	Read access		Write access	
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	✓	✓	✓	--
Maintenance	✓	✓	✓	✓

If an incorrect access code is entered, the user obtains the access rights of the **Operator** role.

 The user role with which the user is currently logged on is indicated by the **Access status display** parameter (for display operation) or **Access status tooling** parameter (for tool operation).

8.2.3 Write protection via access code

Using the device-specific access code, the parameters for the measuring device configuration are write-protected and their values can no longer be changed via local operation.

Define access code via local display

1. Navigate to: "Setup" menu → Advanced setup → Administration → Define access code → Define access code
2. Define a max. 4-digit numeric code as an access code.
3. Repeat the same code in **Confirm access code** parameter.
 - ↳ The -symbol appears in front of all write-protected parameters.

Define access code via operating tool (e.g. FieldCare)

1. Navigate to: "Setup" menu → Advanced setup → Administration → Define access code
2. Define a max. 4-digit numeric code as an access code.
 - ↳ Write protection is active.

Parameters that can always be changed

The write protection does not include certain parameters that do not affect the measurement. Despite the defined access code, they can always be modified, even if the other parameters are locked.

If no key is pressed for 10 minutes in the navigation and editing mode, the device automatically locks the write-protected parameters. If the user goes from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after 60 s.

-  ■ If write access is activated via access code, it can be also be deactivated only via the access code →  47.
- In the "Description of Device Parameters" documents, each write-protected parameter is identified with the -symbol.

8.2.4 Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a device-specific access code and its value cannot be changed at the moment using the local display →  46.

The locking of the write access via local operation can be disabled by entering the device-specific access code.

1. After you press , the input prompt for the access code appears.
2. Enter the access code.
 - ↳ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

8.2.5 Deactivation of the write protection via access code

Via local display

1. Navigate to "Setup" menu → Advanced setup → Administration → Define access code → Define access code
2. Enter **0000**.
3. Repeat **0000** in **Confirm access code** parameter.
 - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

Via operating tool (e.g. FieldCare)


1. Navigate to "Setup" menu → Advanced setup → Administration → Define access code
2. Enter **0000**.
 - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

8.2.6 Write protection via write protection switch

Unlike write protection via a user-specific access code, this allows write access to the entire operating menu - other than the **"Contrast display" parameter** - to be locked.


The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via PROFIBUS PA protocol

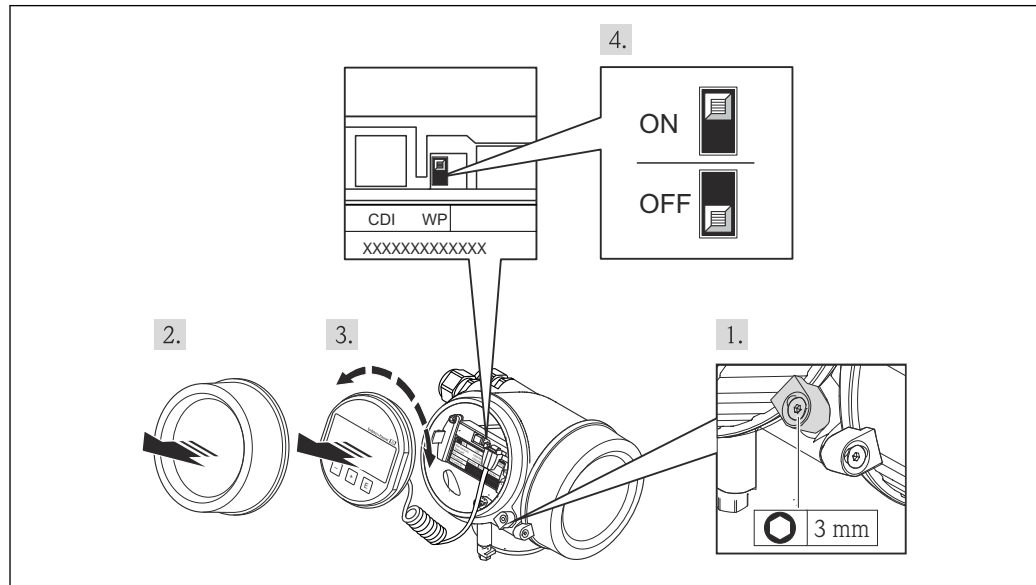


A0026157

1. Loosen the securing clamp.
2. Unscrew the housing cover.
3. Pull out the display module with a gentle rotation movement. To make it easier to access the lock switch, attach the display module to the edge of the electronics compartment.
 - ↳ Display module is attached to the edge of the electronics compartment.

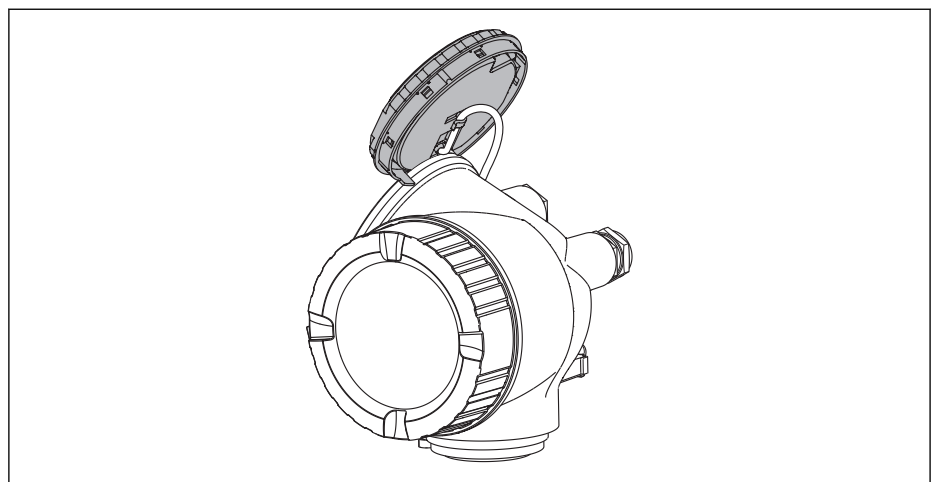

A0013909

4. Installing the lock switch (WP) on the main electronics module in the **ON** position enables the hardware write protection. Installing the lock switch (WP) on the main electronics module in the **OFF** position (factory setting) disables the hardware write protection.
 - ↳ If the hardware write protection is enabled: The **Hardware locked** option is displayed in the **Locking status** parameter. In addition to this, the -symbol appears in the header of the measured value display and in the navigation view in front of the parameters.

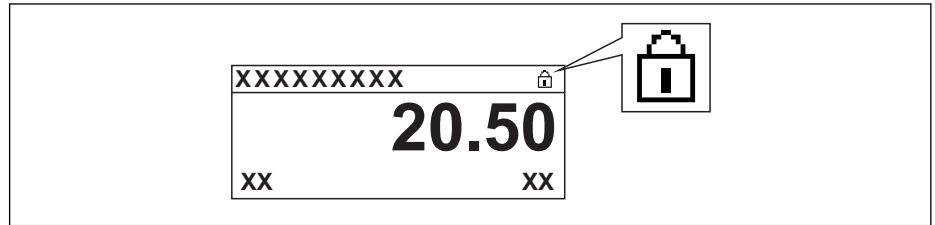

A0015870

If the hardware write protection is disabled: No option is displayed in the **Locking status** parameter. The -symbol disappears in the header of the measured value display and in the navigation view in front of the parameters.

5. Feed the spiral cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Screw the electronics compartment cover closed and tighten the securing clamp.

8.2.7 Enabling and disabling the keypad lock

The keypad lock allows to disable access to the entire operating menu via local operation. Thus navigating through the operating menu or modifying the values of individual parameters is no longer possible. Only the measured values on the measured value display can be read off.

The keylock is enabled and disabled via a context menu.

Enabling the keylock



For the SD03 display:

The keylock is automatically activated:

- If the device has not been operated via the display for > 1 minute.
- After a restart of the device.

To activate the keylock manually:

1. The device is in the measured value display.
Press for at least 2 seconds.
↳ A context menu appears.
2. Select **Keylock on** from the context menu.
↳ The keylock is enabled.




When attempting to access the operating menu while the keylock is enabled, the **Keylock on** message appears.

Disabling the keylock

1. The keylock is enabled.
Press for at least 2 seconds.
↳ A context menu appears.
2. Select **Keylock off** from the context menu.
↳ The keylock is disabled.

8.3 Display and operating module

8.3.1 Display appearance

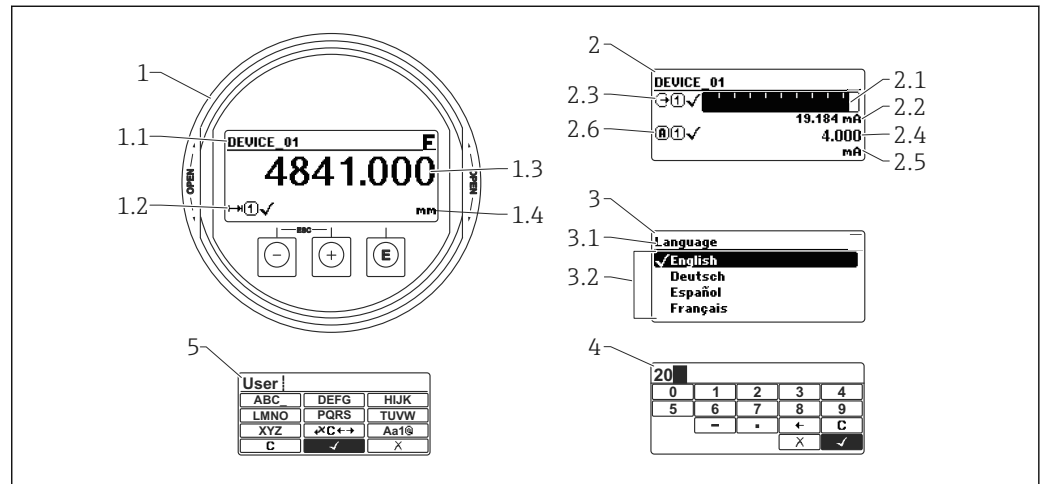

A0012635

14 Appearance of the display and operation module for on-site operation

- 1 Measured value display (1 value max. size)
- 1.1 Header containing tag and error symbol (if an error is active)
- 1.2 Measured value symbols
- 1.3 Measured value
- 1.4 Unit
- 2 Measured value display (1 bargraph + 1 value)
- 2.1 Bargraph for measured value 1
- 2.2 Measured value 1 (including unit)
- 2.3 Measured value symbols for measured value 1
- 2.4 Measured value 2
- 2.5 Unit for measured value 2
- 2.6 Measured value symbols for measured value 2
- 3 Representation of a parameter (here: a parameter with selection list)
- 3.1 Header containing parameter name and error symbol (if an error is active)
- 3.2 Selection list; ☒ marks the current parameter value.
- 4 Input matrix for numbers
- 5 Input matrix for alphanumeric and special characters

Display symbols for the submenus

Symbol	Meaning
 A0011975	Display/operation Is displayed: - in the main menu next to the selection "Display/operation" - in the header, if you are in the "Display/operation" menu
 A0011974	Setup Is displayed: - in the main menu next to the selection "Setup" - in the header, if you are in the "Setup" menu
 A0011976	Expert Is displayed: - in the main menu next to the selection "Expert" - in the header, if you are in the "Expert" menu
 A0011977	Diagnostics Is displayed: - in the main menu next to the selection "Diagnostics" - in the header, if you are in the "Diagnostics" menu

Status signals

F A0013956	"Failure" A device error is present. The measured value is no longer valid.
C A0013959	"Function check" The device is in service mode (e.g. during a simulation).
S A0013958	"Out of specification" The device is operated: - Outside of its technical specifications (e.g. during startup or a cleaning) - Outside of the configuration carried out by the user (e.g. level outside configured span)
M A0013957	"Maintenance required" Maintenance is required. The measured value is still valid.

Display symbols for the locking state

Symbol	Meaning
 A0011978	Display parameter Marks display-only parameters which can not be edited.
 A0011979	Device locked - In front of a parameter name: The device is locked via software and/or hardware. - In the header of the measured value screen: The device is locked via hardware.

Measured value symbols

Symbol	Meaning
Measured values	
 A0011995	Level
 A0011996	Distance
 A0011998	Current output
 A0011999	Measured current
 A0012106	Terminal voltage
 A0012104	Temperature of the electronics or the sensor
Measuring channels	
 A0012000	Measuring channel 1
 A0012107	Measuring channel 2
Status of the measured value	
 A0012102	Status "Alarm" The measurement is interrupted. The output assumes the defined alarm value. A diagnostic message is generated.
 A0012103	Status "Warning" The device continues measuring. A diagnostic message is generated.

8.3.2 Operating elements

Key	Meaning
 A0013969	Minus key <i>For menu, submenu</i> Moves the selection bar upwards in a picklist. <i>For text and numeric editor</i> In the input mask, moves the selection bar to the left (backwards).
 A0013970	Plus key <i>For menu, submenu</i> Moves the selection bar downwards in a picklist. <i>For text and numeric editor</i> In the input mask, moves the selection bar to the right (forwards).
 A0013952	Enter key <i>For measured value display</i> - Pressing the key briefly opens the operating menu. - Pressing the key for 2 s opens the context menu. <i>For menu, submenu</i> - Pressing the key briefly Opens the selected menu, submenu or parameter. - Pressing the key for 2 s for parameter: If present, opens the help text for the function of the parameter. <i>For text and numeric editor</i> - Pressing the key briefly - Opens the selected group. - Carries out the selected action. - Pressing the key for 2 s confirms the edited parameter value.
 A0013971	Escape key combination (press keys simultaneously) <i>For menu, submenu</i> - Pressing the key briefly - Exits the current menu level and takes you to the next higher level. - If help text is open, closes the help text of the parameter. - Pressing the key for 2 s returns you to the measured value display ("home position"). <i>For text and numeric editor</i> Closes the text or numeric editor without applying changes.
 A0013953	Minus/Enter key combination (press and hold down the keys simultaneously) Reduces the contrast (brighter setting).
 A0013954	Plus/Enter key combination (press and hold down the keys simultaneously) Increases the contrast (darker setting).
 A0013955	Minus/Plus/Enter key combination (press and hold down the keys simultaneously) <i>For measured value display</i> Enables or disables the keypad lock.

8.3.3 Entering numbers and text

1

20

2

3

4

5

6

7

8

9

-

.

←

C

X

✓

4

-

+

E

A0013941

1

User

2

ABC

DEFG

HIJK

LMNO

PQRS

TUVW

XYZ

↔C↔

Aa1@

C

✓

X

4

-

+

E

A0013999

1 Editing view

2 Display area of the entered values

3 Input mask

4 Operating elements

Input mask

The following input symbols are available in the input mask of the numeric and text editor:

Numeric editor symbols

Symbol	Meaning
0 ... 9 A0013998	Selection of numbers from 0 to 9.
. A0016619	Inserts decimal separator at the input position.
- A0016620	Inserts minus sign at the input position.
✓ A0013985	Confirms selection.
← A0016621	Moves the input position one position to the left.
X A0013986	Exits the input without applying the changes.
C A0014040	Clears all entered characters.

Text editor symbols

Symbol	Meaning
ABC ... XYZ A0013997	Selection of letters from A to Z
Aa1@ A0013981	Toggle - Between upper-case and lower-case letters - For entering numbers - For entering special characters

 A0013985	Confirms selection.
 A0013987	Switches to the selection of the correction tools.
 A0013986	Exits the input without applying the changes.
 A0014040	Clears all entered characters.
Correction symbols under 	
 A0013989	Clears all entered characters.
 A0013991	Moves the input position one position to the right.
 A0013990	Moves the input position one position to the left.
 A0013988	Deletes one character immediately to the left of the input position.

8.3.4 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Conf. backup disp.
- Simulation

Calling up and closing the context menu

The user is in the operational display.

1. Press  for 2 s.
 - ↳ The context menu opens.

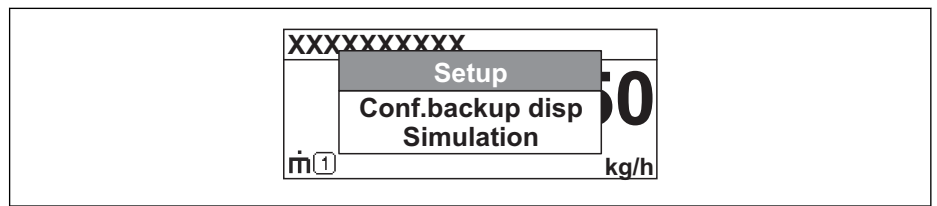

A0014003-EN


2. Press  +  simultaneously.
 - ↳ The context menu is closed and the operational display appears.

Calling up the menu via the context menu

1. Open the context menu.
2. Press  to navigate to the desired menu.
3. Press  to confirm the selection.
 - ↳ The selected menu opens.

8.3.5 Envelope curve on the display and operating module

In order to assess the measuring signal, the envelope curve and - if a mapping has been recorded - the mapping curve can be displayed:

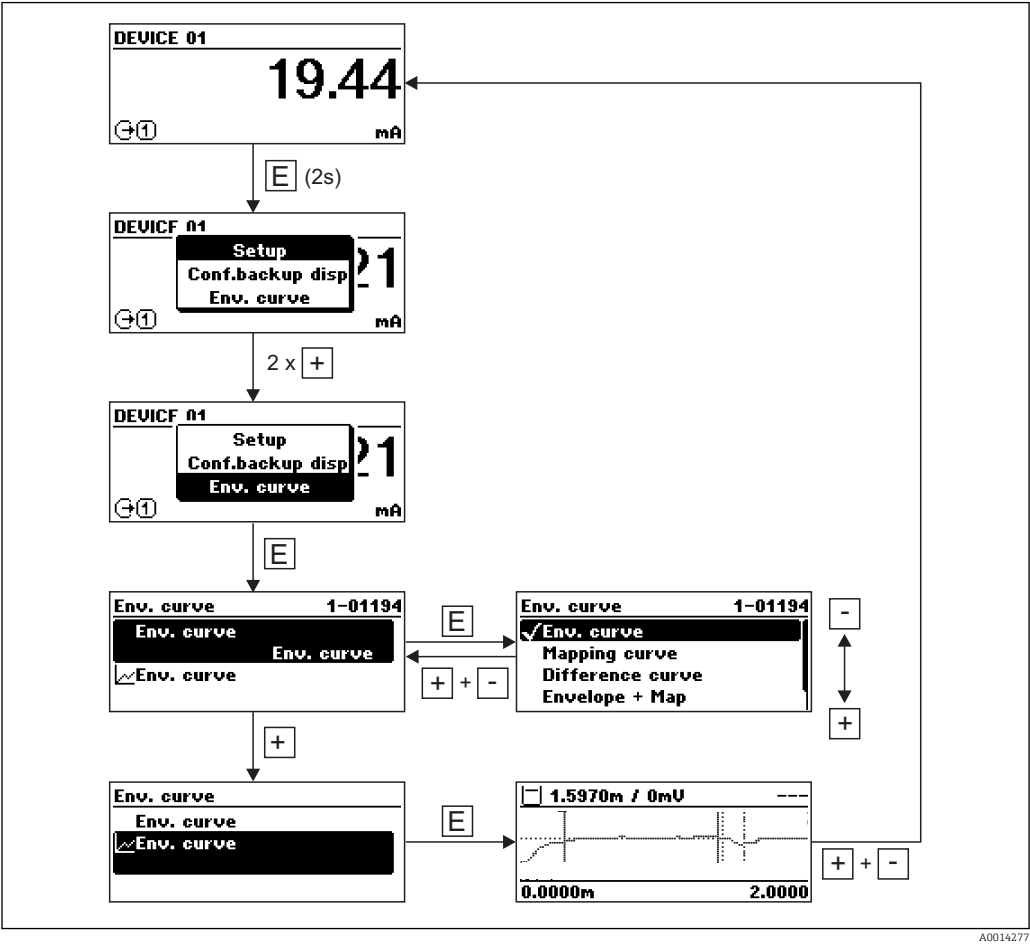


9 Integration into a PROFIBUS network

9.1 Overview of the device database files (GSD)

Manufacturer ID	17 (0x11)
Ident number	0x1559
Profile version	3.02
GSD file	Information and files under:
GSD file version	▪ www.endress.com ▪ www.profibus.org

9.2 Set device address

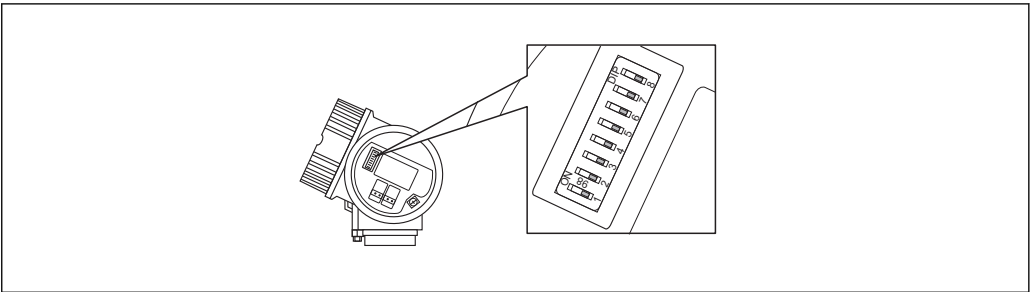


15 Address switches in terminal compartment

9.2.1 Hardware addressing

1. Set switch 8 to "OFF".
2. Define the address with switches 1 to 7 according to the table below.

The address change becomes effective after 10 seconds. The device restarts automatically.


Switch	1	2	3	4	5	6	7
Value in position "ON"	1	2	4	8	16	32	64
Value in position "OFF"	0	0	0	0	0	0	0

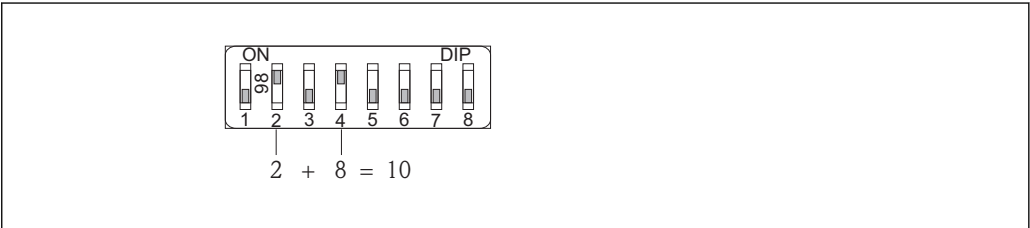

16 Example of hardware addressing: switch 8 is in position "OFF"; switches 1 to 7 define the address.

9.2.2 Software addressing

1. Set switch 8 to "ON".
2. The device restarts automatically. The address remains the same as before (factory setting: 126).
3. Set the required address via the operating menu: "Setup" menu → Device address

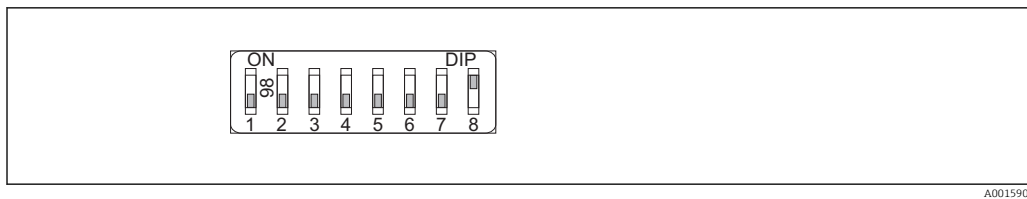

A0015903

- 17 Example of software addressing; switch 8 is in position "ON"; the address is defined in the operating menu (Setup → Device address)

10 Commissioning via operating menu


10.1 Installation and function check

Make sure that all final checks have been completed before you start up your measuring point:

- Checklist "Post-installation check" → 34
- Checklist "Post-connection check" → 40

10.2 Setting the operating language


Factory setting: English or ordered local language

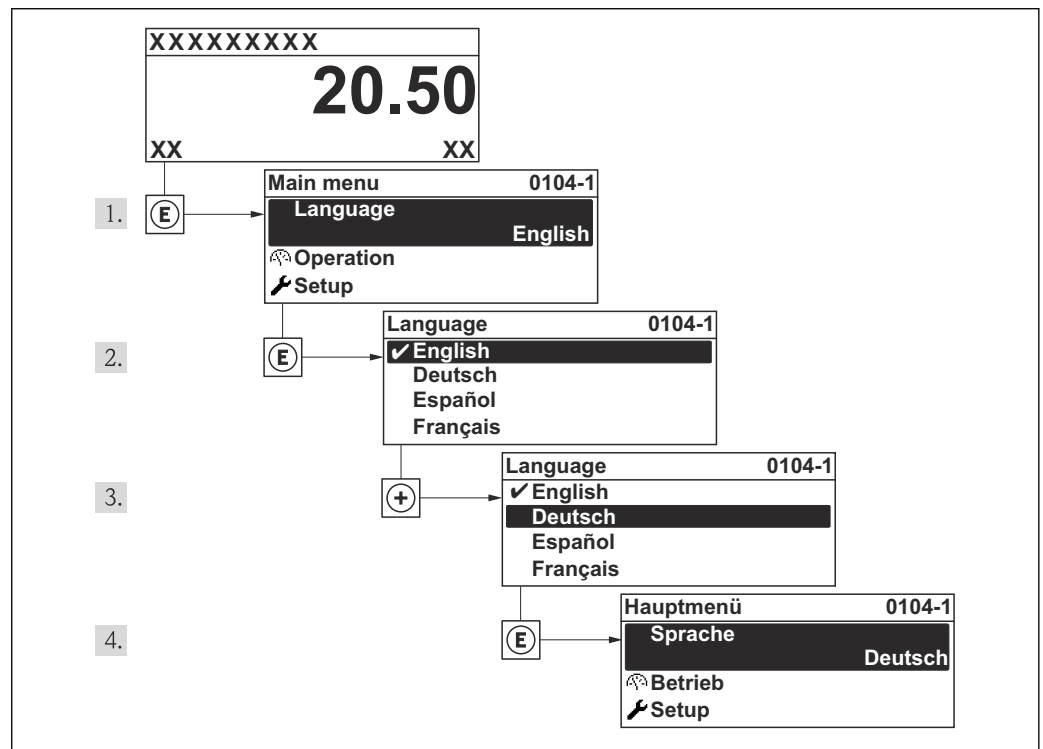

18 Using the example of the local display

A0013996

10.3 Configuration of a level measurement

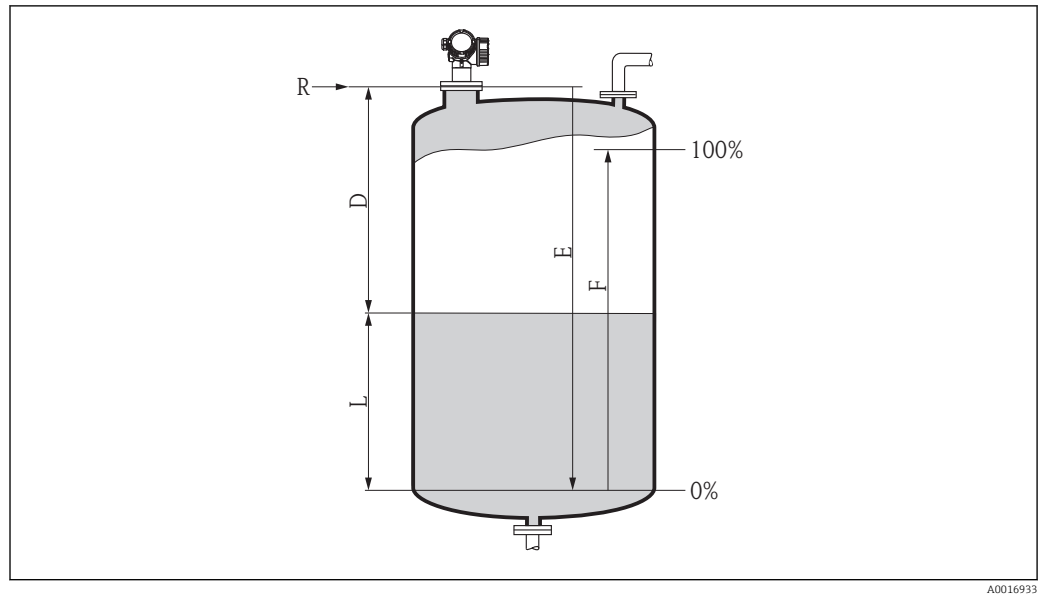

19 Configuration parameters for level measurements in liquids

- R Reference point of the measurement
D Distance
L Level
E Empty calibration (= zero)
F Full calibration (= span)

1. Navigate to: "Setup" menu → Device tag
↳ Enter tag for measuring point.
2. Navigate to: "Setup" menu → Device address
↳ Enter bus address of the device (only in case of software addressing).
3. Navigate to: "Setup" menu → Distance unit
↳ Select distance unit.
4. Navigate to: "Setup" menu → Tank type
↳ Select tank type.
5. For **Tank type** parameter = Bypass / pipe:
Navigate to: "Setup" menu → Tube diameter
↳ Enter the diameter of the stilling well or bypass.
6. Navigate to: "Setup" menu → Medium group
↳ Specify medium group: (**Water based (DC >= 4)** or **Others**)
7. Navigate to: "Setup" menu → Empty calibration
↳ Enter empty distance E (Distance from reference point R to the 0% level) ⁵⁾.
8. Navigate to: "Setup" menu → Full calibration
↳ Enter full distance F (Distance from the 0% to the 100% level).
9. Navigate to: "Setup" menu → Level
↳ Indicates the measured level L.
10. Navigate to: "Setup" menu → Distance
↳ Indicates the measured distance from the reference point R to the level L.

5) If, for example, the measuring range covers only an upper part of the tank ($E \ll \text{tank height}$), it is mandatory to enter the actual tank height into the "Setup → Advanced Setup → Level → Tank/silo height" parameter.

11. Navigate to: "Setup" menu → Signal quality
 - ↳ Indicates the quality of the evaluated level echo.
 12. When operating via local display:
Navigate to: "Setup" menu → Mapping → Confirm distance
 - ↳ Compare distance indicated on the display to real distance in order to start the recording of an interference echo map.
 13. When operating via operating tool:
Navigate to: "Setup" menu → Confirm distance
 - ↳ Compare distance indicated on the display to real distance in order to start the recording of an interference echo map.
 14. Navigate to: "Setup" menu → Advanced setup → Level → Level unit
 - ↳ Select level unit: %, m, mm, ft, in (Factory setting: %)
-  The response time of the device is preset by the **Tank type** parameter (→  101). More detailed settings are possible in the **Advanced setup** submenu.

10.4 Recording the reference curve

After the configuration of the measurement it is recommended to record the current envelope curve as a reference curve. The reference curve can be used later on in the process for diagnostic purposes. To record the reference curve use the **Save reference curve** parameter.

Navigation in the menu

"Expert" menu → Diagnostics → Envelope diagnostics → Save reference curve

Meaning of the options

- No
No action
- Yes
The current envelope curve is saved as reference curve.

 In devices which have been delivered with software version 01.00.zz, this submenu is only visible for the "Service" user role.

 The reference curve can only be displayed in the envelope curve diagram of FieldCare after it has been loaded from the device into FieldCare. This is performed by the "Load Reference Curve" function in FieldCare.



 20 The "Load Reference Curve" function

10.5 Configuration of the on-site display

10.5.1 Factory settings of the on-site display

Parameter	Factory setting
Format display	1 value, max. size
Value 1 display	Level linearized
Value 2 display	None
Value 3 display	None
Value 4 display	None

10.5.2 Adjustment of the on-site display

The on-site display can be adjusted in the following submenu:
Setup → Advanced setup → Display

10.6 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration. You can do so using the **Configuration management** parameter and its options.

Navigation path in the operating menu

"Setup" menu → Advanced setup → Configuration backup display → Configuration management

Meaning of the options

- **Cancel**

No action is executed and the user exits the parameter.

- **Execute backup**

A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device. The backup copy comprises the transmitter and sensor data of the device.

- **Restore**

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device. The backup copy comprises the transmitter and sensor data of the device.

- **Duplicate**

The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:

Medium type

- **Compare**

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter.

- **Clear backup data**

The backup copy of the device configuration is deleted from the display module of the device.

 While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

 If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset →  149 will not restore the original status.

In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

10.7 Protection of the settings against unauthorized changes

There are two ways to protect the settings against unauthorized changes:

- Via parameter settings (software locking) →  46
- Via locking switch (hardware locking) →  48

11 Diagnostics and troubleshooting

11.1 General trouble shooting

11.1.1 General errors

Error	Possible cause	Remedial action
Device does not respond.	Supply voltage not connected.	Connect the correct voltage.
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.
Values on the display invisible	Contrast setting is too weak or too strong.	■ Increase contrast by pressing  and  simultaneously. ■ Decrease contrast by pressing  and  simultaneously.
	The plug of the display cable is not connected correctly.	Connect the plug correctly.
	Display is defective.	Replace display.
"Communication error" is indicated on the display when starting the device or connecting the display	Electromagnetic interference	Check grounding of the device.
	Broken display cable or display plug.	Exchange display.
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer and change it if necessary.
Device measures incorrectly.	Parametrization error	Check and adjust parameterization.

11.1.2 Parametrization errors


Error	Possible cause	Remdy
Measured value incorrect	If measured distance ("Setup" menu → Distance) matches the real distance: Calibration error	■ Check and adjust Empty calibration parameter (→  102) if necessary. ■ Check and adjust Full calibration parameter (→  103) if necessary. ■ Check and adjust linearization if necessary (Linearization submenu (→  120)).
	For measurements in bypasses / stilling well: ■ Wrong tank type ■ Wrong tube diameter	■ Select Tank type (→  101) = Bypass / pipe. ■ Enter correct diameter in Tube diameter parameter (→  101).
	Enter correct diameter in	Enter correct value in Level correction parameter (→  117).
	If measured distance (Setup → Distance) does not match the real distance: Interference echo	Carry out tank mapping (Confirm distance parameter (→  105)).
No change of measured value on filling / emptying	Interference echo from installations, nozzle or build-up on the antenna.	■ Carry out tank mapping (Confirm distance parameter (→  105)). ■ If necessary, clean antenna ■ If necessary, select better mounting position

Error	Possible cause	Remdy
If the surface is not calm (e.g. filling, emptying, agitator running), the measured value jumps sporadically to a higher level	Signal is weakened by the rough surface - the interference echoes are sometimes stronger.	- Carry out tank mapping (Confirm distance parameter (→ 105)). - Select Tank type (→ 101) = Process vessel with agitator. - Increase integration time ("Expert" menu → Sensor → Distance → Integration time) - Optimize orientation of the antenna - If necessary, select a better mounting position and/or larger antenna.
During filling/emptying the measured value jumps downwards	Multiple echoes	- Check Tank type parameter (→ 101). - If possible, do not select central installation position. - If appropriate, use a stilling well.
Error message F941 or S941 "Echo lost"	Level echo is too weak.	- Check Medium group parameter (→ 101). - If necessary, select a more detailed setting in Medium property parameter (→ 114). - Optimize alignment of antenna - If necessary, select a better installation position and/or larger antenna.
	Level echo suppressed.	Delete mapping and record it again.
Device displays a level when the tank is empty.	Interference echo	Carry out mapping over entire measuring range when the tank is empty (Confirm distance parameter (→ 105)).
Wrong slope of the level in the entire measuring range	Wrong tank type selected.	Set Tank type parameter (→ 101) correctly.

11.2 Diagnostic information on local display

11.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the measured value display.

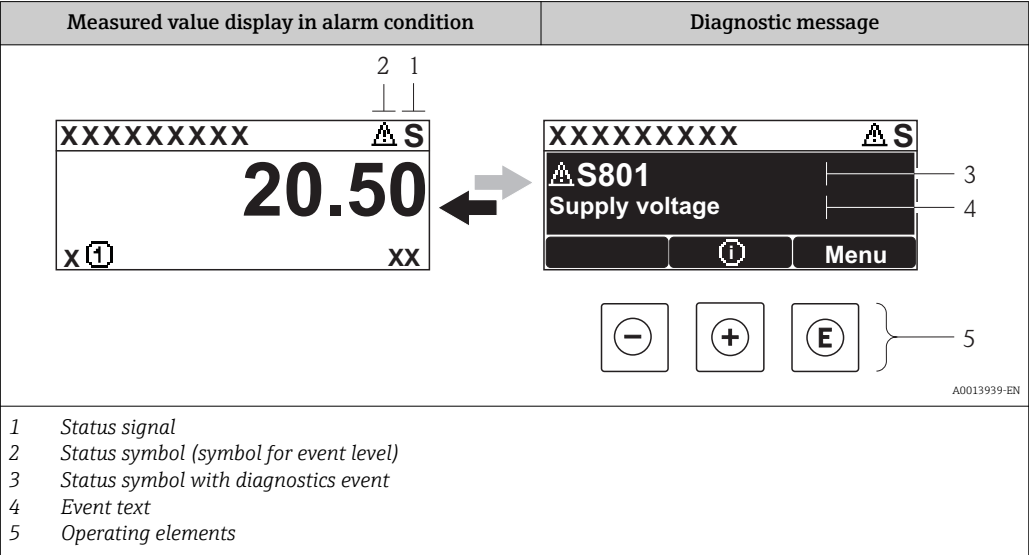

Status signals


F A0013956	"Failure" A device error is present. The measured value is no longer valid.
C A0013959	"Function check" The device is in service mode (e.g. during a simulation).
S A0013958	"Out of specification" The device is operated: Outside of its technical specifications (e.g. during startup or a cleaning) Outside of the configuration carried out by the user (e.g. level outside configured span)
M A0013957	"Maintenance required" Maintenance is required. The measured value is still valid.

Status symbol (symbol for event level)

 A0013961	"Alarm" status The measurement is interrupted. The signal outputs take on the defined alarm condition. A diagnostic message is generated.
 A0013962	"Warning" status The device continues to measure. A diagnostic message is generated.

Diagnostics event and event text

The fault can be identified using the diagnostics event. The event text helps you by providing information about the fault. In addition, the corresponding symbol is displayed before the diagnostics event.

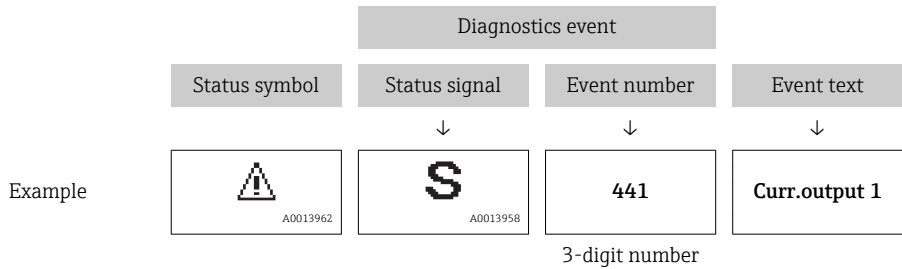


If two or more diagnostic messages are pending simultaneously, only the message with the highest priority is shown. Additional pending diagnostic messages can be shown in **Diagnostic list** submenu (→ ⓘ 154).

-  Past diagnostic messages that are no longer pending are shown as follows:
- On the local display:
 - in **Event logbook** submenu (→ ⓘ 155)
 - In FieldCare:
 - via the "Event List /HistoROM" function.

Operating elements

Operating functions in menu, submenu	
 A0013970	Plus key Opens the message about the remedial measures.
 A0013952	Enter key Opens the operating menu.

11.2.2 Calling up remedial measures

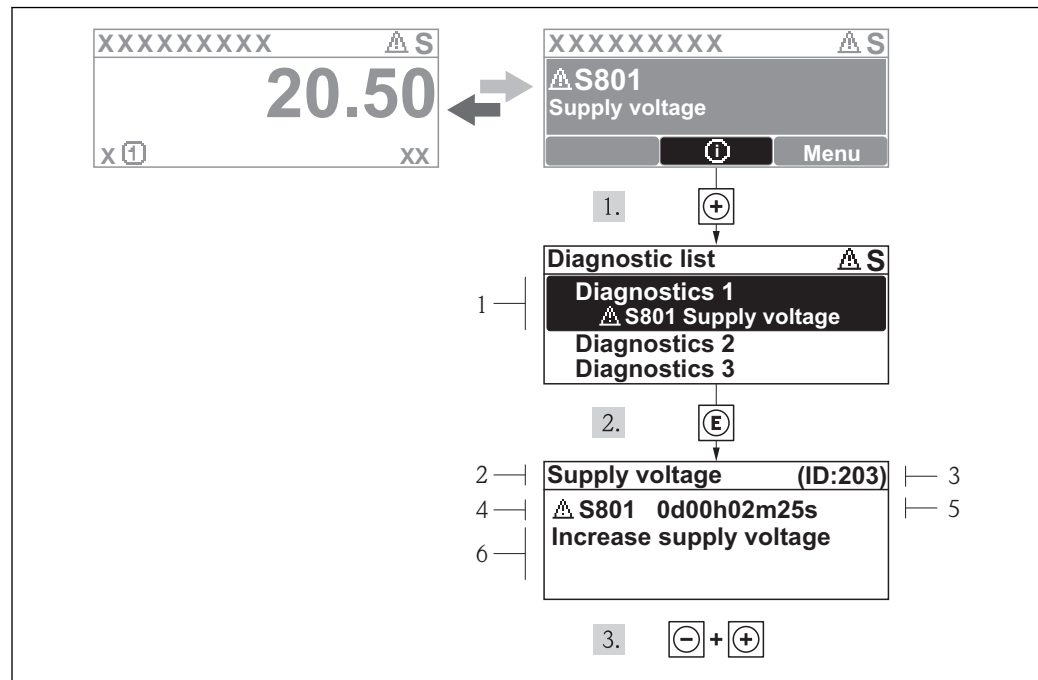

A0013940-EN

21 Message for remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

1. Press $\boxed{+}$ (ⓘ symbol).
 ↳ **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with $\boxed{+}$ or $\boxed{-}$ and press $\boxed{E}$.
 ↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press $\boxed{-}$ + $\boxed{+}$ simultaneously.
 ↳ The message for the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in **Diagnostic list** submenu or in **Previous diagnostics**.

1. Press $\boxed{E}$.
 ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press $\boxed{-}$ + $\boxed{+}$ simultaneously.
 ↳ The message for the remedial measures closes.

11.3 Diagnostic event in the operating tool

If a diagnostic event is present in the device, the status signal appears in the top left status in the operating tool along with the corresponding symbol for event level in accordance with NAMUR NE 107:

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)

Calling up remedial measures

1. Navigate to the **Diagnostics** menu.
 - ↳ In the **Actual diagnostics** parameter, the diagnostic event is shown with event text.
2. On the right in the display range, hover the cursor over the **Actual diagnostics** parameter.
 - ↳ A tool tip with remedial measures for the diagnostic event appears.

11.4 Diagnostic list

In the Diagnostic list submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

Navigation path

"Diagnostics" menu → Diagnostic list

Calling up and closing the remedial measures

1. Press .
- ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  +  simultaneously.
- ↳ The message about the remedial measures closes.

11.5 Overview of diagnostic events

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of electronic				
242	Software incompatible	1. Check software 2. Flash or change main electronics module	F	Alarm
252	Modules incompatible	1. Check electronic modules 2. Change I/O or main electronic module	F	Alarm
261	Electronic modules	1. Restart device 2. Check electronic modules 3. Change I/O Modul or main electronics	F	Alarm
262	Module connection	1. Check module connections 2. Change electronic modules	F	Alarm
270	Main electronic failure	Change main electronic module	F	Alarm
271	Main electronic failure	1. Restart device 2. Change main electronic module	F	Alarm
272	Main electronic failure	1. Restart device 2. Contact service	F	Alarm
273	Main electronic failure	1. Emergency operation via display 2. Change main electronics	F	Alarm
275	I/O module failure	Change I/O module	F	Alarm
276	I/O module failure	1. Restart device 2. Change I/O module	F	Alarm
282	Data storage	1. Restart device 2. Contact service	F	Alarm
283	Memory content	1. Transfer data or reset device 2. Contact service	F	Alarm
311	Electronic failure	1. Transfer data or reset device 2. Contact service	F	Alarm
311	Electronic failure	Maintenance required! 1. Do not perform reset 2. Contact service	M	Warning
Diagnostic of configuration				
410	Data transfer	1. Check connection 2. Retry data transfer	F	Alarm
411	Up-/download active	Up-/download active, please wait	C	Warning
412	Processing Download	Download active, please wait	C	Warning
435	Linearization	Check linearization table	F	Alarm
437	Configuration incompatible	1. Restart device 2. Contact service	F	Alarm
438	Dataset	1. Check data set file 2. Check device configuration 3. Up- and download new configuration	M	Warning
482	Block in OOS	Set Block in AUTO mode	F	Alarm
484	Simulation failure mode	Deactivate simulation	C	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
485	Simulation measured value	Deactivate simulation	C	Warning
494	Switch output simulation	Deactivate simulation switch output	C	Warning
495	Simulation diagnostic event	Deactivate simulation	C	Warning
497	Simulation block output	Deactivate simulation	C	Warning
585	Simulation distance	Deactivate simulation	C	Warning
586	Record map	Recording of mapping please wait	C	Warning
Diagnostic of process				
801	Energy too low	Increase supply voltage	S	Warning
825	Operating temperature	1. Check ambient temperature 2. Check process temperature	S	Warning
825	Operating temperature	1. Check ambient temperature 2. Check process temperature	F	Alarm
921	Change of reference	1. Check reference configuration 2. Check pressure 3. Check sensor	S	Warning
941	Echo lost	Check parameter 'DC value'	F	Alarm ¹⁾
942	In safety distance	1. Check level 2. Check safety distance 3. Reset self holding	S	Alarm ¹⁾
943	In blocking distance	Reduced accuracy Check level	S	Warning
950	Advanced diagnostic 1 to 2 occurred	Maintain your diagnostic event	M	Warning ¹⁾

1) Diagnostic status is changeable.

11.6 Event logbook

11.6.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Event list** submenu ⁶⁾.

Navigation path

Diagnostics → Event logbook → Event list

A maximum of 100 event messages can be displayed in chronological order.

The event history includes entries for:

- Diagnostic events
- Information events

6) This submenu is only available for operation via local display. In the case of operation via FieldCare, the event list can be displayed with the "Event List / HistoROM" functionality of FieldCare.

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
 - : Event has occurred
 - : Event has ended
- Information event
 - : Event has occurred

Calling up and closing the remedial measures

1. Press .
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  +  simultaneously.
 - ↳ The message about the remedial measures closes.

11.6.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Event list** submenu angezeigt werden.

Navigation path

"Diagnostics" menu → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information

11.6.3 Overview of information events

Info number	Info name
I1000	----- (Device ok)
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	Trend data deleted
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1154	Reset terminal voltage min/max
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared

Info number	Info name
I1256	Display: access status changed
I1264	Safety sequence aborted
I1335	Firmware changed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished

11.7 Firmware history

Date	Firmware version	Modifications	Documentation (FMR51/FMR52, PROFIBUS PA)		
			Operating Instructions	Description of Parameters	Technical Information
04.2013	01.00.zz	Original software	BA01125F/00/EN/01.13	GP01018F/00/EN/01.13	TI01040F/00/EN/02.13
03.2015	01.01.zz	- Support of SD03 - additional languages - HistoROM functionality enhanced - Improvements and bugfixes	BA01125F/00/DE/02.14	GP01018F/00/DE/02.14	TI01040F/00/DE/05.14



The firmware version can explicitly be ordered via the product structure. In this way it is possible to ensure compatibility of the firmware version with an existing or planned system integration.

12 Maintenance

The measuring device requires no special maintenance.

12.1 Exterior cleaning

When exterior-cleaning the device, always use cleaning agents that do not attack the surface of the housing and the seals.

12.2 Replacing seals

The process seals of the sensors (at the process connection) must be replaced periodically, particularly if molded seals (aseptic construction) are used. The period between changes depends on the frequency of cleaning cycles and on the temperature of the measured substance and the cleaning temperature.

13 Repairs

13.1 General information on repairs

13.1.1 Repair concept

The Endress+Hauser repair concept assumes that the devices have a modular design and that repairs can be done by the Endress+Hauser service or specially trained customers.

Spare parts are contained in suitable kits. They contain the related replacement instructions.

For more information on service and spare parts, contact the Service Department at Endress+Hauser.

13.1.2 Repairs to Ex-approved devices

When carrying out repairs to Ex-approved devices, please note the following:

- Repairs to Ex-approved devices may only be carried out by trained personnel or by the Endress+Hauser Service.
- Comply with the prevailing standards, national Ex-area regulations, safety instructions (XA) and certificates.
- Only use original spare parts from Endress+Hauser.
- When ordering a spare part, please note the device designation on the nameplate. Only replace parts with identical parts.
- Carry out repairs according to the instructions. On completion of repairs, carry out the specified routine test on the device.
- Only Endress+Hauser Service may convert a certified device into a different certified variant.
- Document all repair work and conversions.

13.1.3 Replacement of an electronics module

If an electronics module has been replaced, it is not necessary to perform a new basic setup as the calibration parameters are stored in the HistoROM which is located in the housing. However, after exchanging the main electronics module it may be necessary to record a new mapping (interference echo suppression).

13.1.4 Replacement of a device


After a complete device or electronic module has been replaced, the parameters can be downloaded into the instrument again in one of the following ways:

- Via the display module
Condition: The configuration of the old device has been saved in the display module
→  146.
- Via FieldCare
Condition: The configuration of the old device has been saved to the computer via FieldCare.

You can continue to measure without carrying out a new setup. Only a linearization and a tank map (interference echo suppression) have to be recorded again.

13.2 Spare parts

- A few interchangeable measuring device components are identified by a spare part nameplate. This contains information about the spare part.
- The connection compartment cover of the device contains a spare part nameplate that includes the following information:
 - A list of the most important spare parts for the measuring device, including their ordering information.
 - The URL for the *W@M Device Viewer* (www.endress.com/deviceviewer):
There, all spare parts for the measuring device are listed, including the order code, and can be ordered. If available, the corresponding Installation Instructions can also be downloaded there.

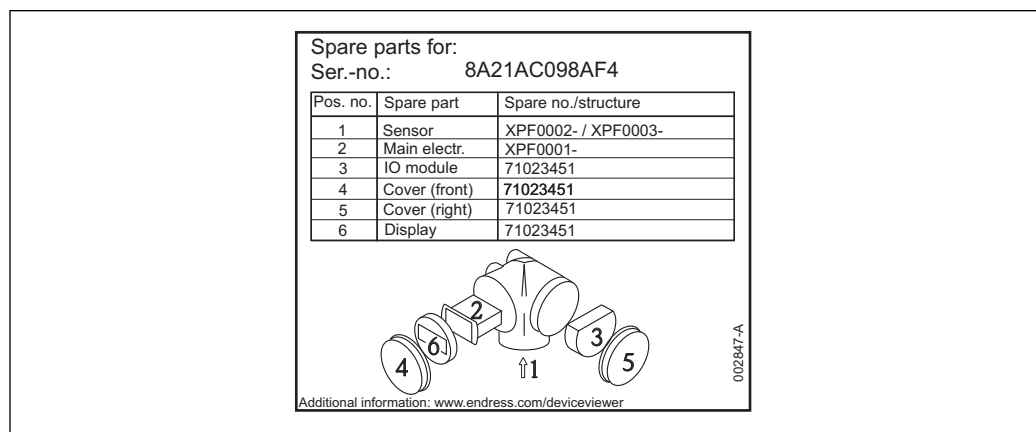

22 Example for spare part nameplate in connection compartment cover

- i** Measuring device serial number:
 - Is located on the device and spare part nameplate.
 - Can be read out via the "Serial number" parameter in the "Device information" submenu.

13.3 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <http://www.endress.com/support/return-material>

13.4 Disposal


Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.


14 Accessories

14.1 Device-specific accessories


14.1.1 Weather protection cover

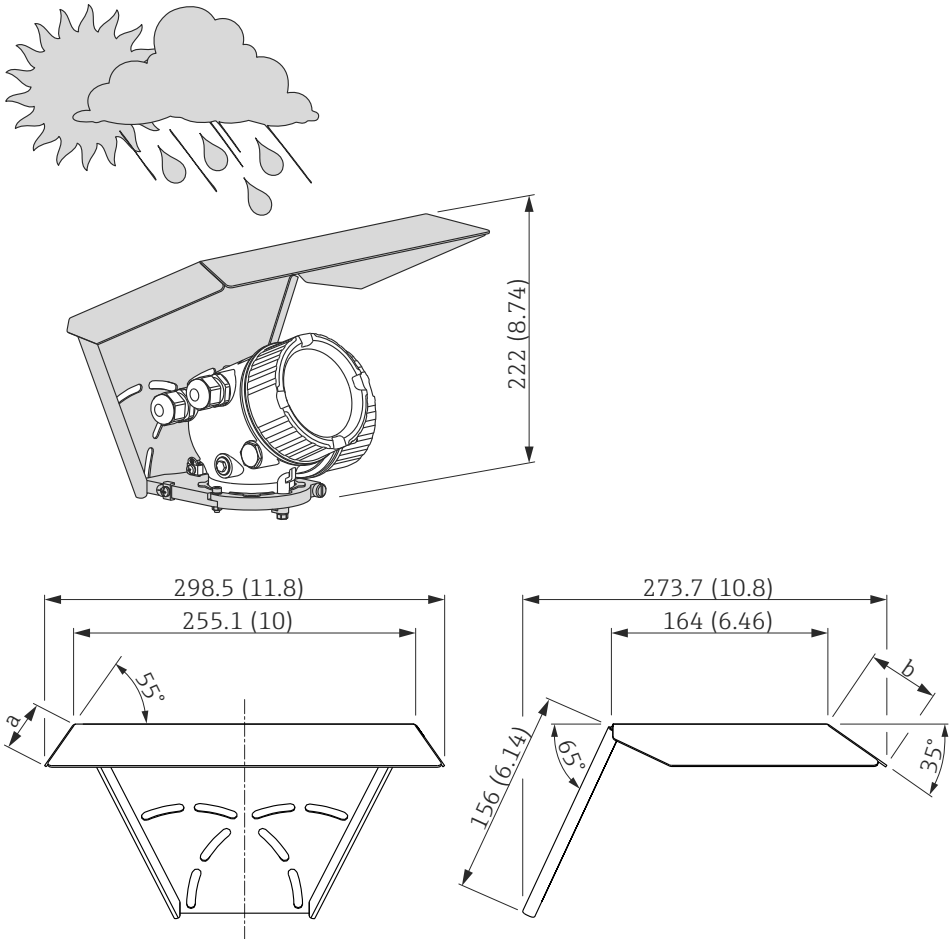Accessory	Description
Weather protection cover	 The diagram illustrates the weather protection cover for the Micropilot FMR51 and FMR52. It includes a perspective view of the cover installed on the device, showing its height of 222 mm (8.74 in). Below this, two detailed cross-sectional views are provided. The left cross-section shows the cover's width with dimensions 298.5 mm (11.8 in) for the top flange and 255.1 mm (10 in) for the main body, with a 55° angle. The right cross-section shows the cover's depth with dimensions 273.7 mm (10.8 in) for the top flange and 164 mm (6.46 in) for the main body, with a 65° angle. A 35° angle is also indicated for the bottom flange. The cover is labeled with 'a' and 'b' for specific dimensions. A0015466 23 Weather protection cover; Dimensions: mm (in) a 37,8 mm (1,5 in) b 54 mm (2,1 in)  The weather protection cover can be ordered together with the device (product structure, feature 620 "Accessory Enclosed", option PB "Weather Protection Cover"). Alternatively, it can be separately ordered as an accessory; order code 71162242. A0015472

14.1.2 Remote display FHX50

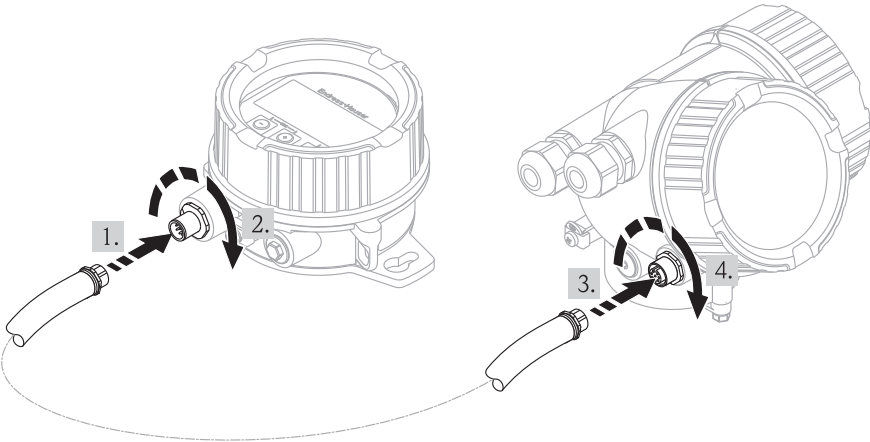Accessory	Description
Remote display FHX50	 A0019128 - Material: - Plastics PBT 316L - Ingress protection: IP68 / NEMA 6P and IP66 / NEMA 4x - Suitable for the display modules: - SD02 (push buttons) - SD03 (touch control) - Connection cable: - Cable with M12 plug; supplied with the FHX50; up to 30 m (98 ft) - Customer supplied standard cable; up to 60 m (196 ft) - Ambient temperature: -40 to 80 °C (-40 to 176 °F) i If the remote display is to be used, the device must be ordered in the version "Prepared for display FHX50" (feature 030, option L or M). For the FHX50, on the other hand, the option A: "Prepared for display FHX50" has to be selected in feature 050: "Option Measurement Device". i If a device has not been ordered in the version "Prepared for display FHX50", but is nevertheless to be equipped with an FHX50, it is essential to select the option B: "Not prepared for display FHX50" in feature 050: "Option Measurement Device" of the FHX50. In this case, a retrofit kit, needed to prepare the device for the remote display, is supplied together with the FHX50. i For transmitters with approval, application of the FHX50 may be restricted. A device may only be retrofitted with the FHX50 if option L or M ("Prepared for FHX50") is quoted under <i>Basic specifications</i>, position 4 "Display, operation" in the associated Safety Instructions (XA). In addition to this, observe the Safety Instructions (XA) of the FHX50. i Do not retrofit transmitters with: - approval for use in areas with combustible dusts (Dust-Ex approval) - type of protection Ex nA i For details refer to the document SD01007F.

14.1.3 Horn protection for horn antenna

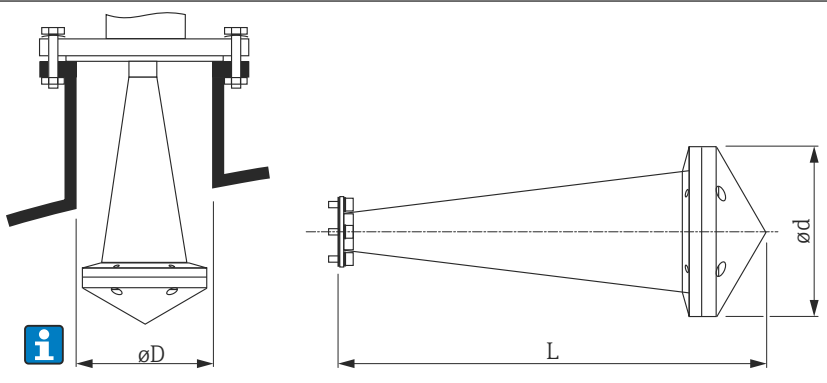Accessory	Description
Horn protection for 80 mm (3 in) or 100 mm (4 in) horn antenna	 For details please refer to the Mounting Instructions SD01084F. Process conditions ■ Maximum vessel pressure: 0.5 bar (7.252 psi) ■ Maximum process temperature: 130 °C (266 °F)  Danger of explosion Avoid electrostatic charging of the horn protection.

A0019143

Horn protection FMR51

Antenna ¹⁾	Accessory mounted ²⁾	Order code of horn protection	Dimensions		
			Ød	L	ØD
BC: Horn 80mm/3"	■ OU: ... mm antenna extension ■ OV: ... inch antenna extension	71105890	96 mm (3.78 in)	203 mm (8 in)	≥ DN100
	any other version	71105890	96 mm (3.78 in)	238 mm (9.4 in)	≥ DN100
BD: Horn 100mm/4"	■ OU: ... mm antenna extension ■ OV: ... inch antenna extension	71105889	116 mm (4.57 in)	267 mm (10.5 in)	≥ DN150
	any other version	71105889	116 mm (4.57 in)	302 mm (11.9 in)	≥ DN150


1) Feature 070 of the product structure

2) Feature 610 of the product structure



The horn protection can also be ordered together with the device. Product structure: Feature 610 "Accessory Mounted", option OW "Horn protection, PTFE".

14.1.4 Overvoltage protection

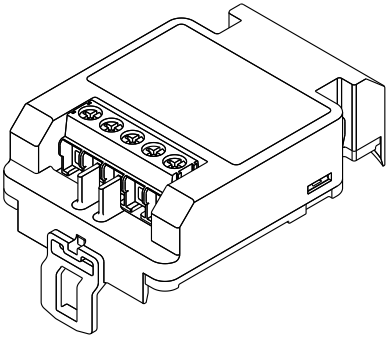Accessory	Description
Overvoltage protection for 2-wire-devices OVP10 (1 channel) OVP20 (2 channel)	 A0021734 Technical data ■ Resistance per channel: 2 * 0.5 Ω_{max} ■ Threshold DC voltage: 400 to 700 V ■ Threshold impulse voltage: < 800 V ■ Capacitance at 1 MHz: < 1.5 pF ■ Nominal arrest impulse voltage (8/20 μs): 10 kA ■ Suited for wire cross-sections: 0.2 to 2.5 mm² (24 to 14 AWG) i Ordering with device The overvoltage protection module is preferably ordered with the device. See product structure, feature 610 "Accessory mounted", option NA "Overvoltage protection". Separate ordering of the module is only necessary if a device is to be retrofitted with the overvoltage protection. i Order code for retrofitting ■ For 1-channel devices (feature 020, option A) OVP10: 71128617 ■ For 2-channel devices (feature 020, option B, C, E or G) OVP20 : 71128619 Housing lid for retrofitting In order to keep the necessary safety distances, the housing lid needs to be replaced if the device is retrofitted with the overvoltage protection. Depending on the housing type, the order code of the suitable lid is as follows: ■ GT18 housing: Lid 71185516 ■ GT19 housing: Lid 71185518 ■ GT20 housing: Lid 71185516 i Restrictions for retrofitting Depending on the approval of the transmitter the usage of the OVP module may be restricted. A device may only be retrofitted with an OVP module if the option NA (overvoltage protection) is quoted under <i>Optional Specifications</i> in the Safety Instructions (XA) pertaining to the device. i For details refer to SD01090F.

14.1.5 Gas-tight feedthrough

Accessory	Description
Gas-tight feedthrough	Chemically inert glass feedthrough; prevents migration of gases into the electronics housing. To be ordered with the device: product structure, feature 610 "Accessory Mounted", option NC "Gas-tight feedthrough"

14.2 Communication-specific accessories

Accessory	Description
Commubox FXA291	Connects Endress+Hauser field devices with CDI interface (= Endress+Hauser Common Data Interface) to the USB interface of a computer. Order code: 51516983  For details refer to Technical Information TI00405C

14.3 Service-specific accessories

Accessory	Description
FieldCare	Endress+Hauser's FDT-based Plant Asset Management tool. Helps to configure and maintain all field devices of your plant. By supplying status information it also supports the diagnosis of the devices.  For details refer to Operating Instructions BA00027S and BA00059S.

14.4 System components

Accessory	Description
Graphic Data Manager Memograph M	The graphic data manager Memograph M provides information on all the relevant process variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on an SD card or USB stick.  For details refer to Technical Information TI00133R and Operating Instructions BA00247R

15 Operating menu

15.1 Overview of the operating menu (display module)

Navigation  Operating menu

Language	→  139
 Setup	→  100
Device tag	→  100
Device address	→  100
Distance unit	→  100
Tank type	→  101
Tube diameter	→  101
Medium group	→  101
Empty calibration	→  102
Full calibration	→  103
Level	→  103
Distance	→  104
Signal quality	→  104
▶ Mapping	→  108
Confirm distance	→  108
Mapping end point	→  108
Record map	→  108
Distance	→  108
Prepare recording map	→  108

► Analog inputs	
► Analog input 1 to 6	→ 110
Channel	→ 110
PV filter time	→ 110
Fail safe type	→ 111
Fail safe value	→ 111
► Advanced setup	→ 112
Locking status	→ 112
Access status display	→ 113
Enter access code	→ 113
► Level	→ 114
Medium type	→ 114
Medium property	→ 114
Max. filling speed liquid	→ 115
Max. draining speed liquid	→ 115
Advanced process conditions	→ 115
Level unit	→ 116
Blocking distance	→ 117
Level correction	→ 117
Tank/silo height	→ 117
► Linearization	→ 120
Linearization type	→ 122
Unit after linearization	→ 123
Free text	→ 124
Maximum value	→ 125

Diameter	→  125
Intermediate height	→  125
Table mode	→  126
► Edit table	
Level	→  127
Customer value	→  128
Activate table	→  128
► Safety settings	→  129
Output echo lost	→  129
Value echo lost	→  129
Ramp at echo lost	→  130
Blocking distance	→  117
► WHG confirmation	→  132
► Deactivate WHG	→  133
Reset write protection	→  133
Code incorrect	→  133
► Switch output	→  134
Switch output function	→  134
Assign status	→  134
Assign limit	→  135
Assign diagnostic behavior	→  135
Switch-on value	→  135
Switch-on delay	→  137
Switch-off value	→  137
Switch-off delay	→  137

Failure mode	→  138
Switch status	→  138
Invert output signal	→  138
► Display	→  139
Language	→  139
Format display	→  139
Value 1 to 4 display	→  141
Decimal places 1 to 4	→  141
Display interval	→  142
Display damping	→  142
Header	→  142
Header text	→  143
Separator	→  143
Number format	→  143
Decimal places menu	→  144
Backlight	→  144
Contrast display	→  145
► Configuration backup display	→  146
Operating time	→  146
Last backup	→  146

Configuration management	→  146
Comparison result	→  147
► Administration	→  149
► Define access code	→  151
Define access code	→  151
Confirm access code	→  151
Device reset	→  149
 Diagnostics	→  152
Actual diagnostics	→  152
Previous diagnostics	→  152
Operating time from restart	→  153
Operating time	→  146
► Diagnostic list	→  154
Diagnostics 1 to 5	→  154
► Event logbook	→  155
Filter options	→  155
► Event list	→  155
► Device information	→  156
Device tag	→  156
Serial number	→  156
Firmware version	→  156
Device name	→  156
Order code	→  157
Extended order code 1 to 3	→  157

Status PROFIBUS Master Config	→ 157
PROFIBUS ident number	→ 157
► Measured values	→ 158
Distance	→ 104
Level linearized	→ 124
Terminal voltage 1	→ 158
Switch status	→ 138
Electronic temperature	→ 159
► Analog inputs	
► Analog input 1 to 6	→ 160
Channel	→ 110
Out value	→ 160
Out status	→ 161
Out status HEX	→ 161
► Data logging	→ 162
Assign channel 1 to 4	→ 162
Logging interval	→ 162
Clear logging data	→ 163
► Display channel 1 to 4	→ 164
► Simulation	→ 166
Assign measurement variable	→ 167
Value process variable	→ 167
Switch output simulation	→ 167
Switch status	→ 168
Simulation device alarm	→ 168

	Diagnostic event category	
	Simulation diagnostic event	
	Simulation diagnostic event	
► Device check		→ 169
	Start device check	→ 169
	Result device check	→ 169
	Last check time	→ 169
	Level signal	→ 170

15.2 Overview of the operating menu (operating tool)

Navigation  Operating menu

 Setup	→  100
Device tag	→  100
Device address	→  100
Distance unit	→  100
Tank type	→  101
Tube diameter	→  101
Medium group	→  101
Empty calibration	→  102
Full calibration	→  103
Level	→  103
Distance	→  104
Signal quality	→  104
Confirm distance	→  105
Present mapping	→  106
Mapping end point	→  106
Record map	→  107
► Analog inputs	
► Analog input 1 to 6	→  110
Channel	→  110
PV filter time	→  110

Fail safe type	→  111
Fail safe value	→  111
► Advanced setup	→  112
Locking status	→  112
Access status tooling	→  112
Access status display	→  113
► Level	→  114
Medium type	→  114
Medium property	→  114
Max. filling speed liquid	→  115
Max. draining speed liquid	→  115
Advanced process conditions	→  115
Level unit	→  116
Blocking distance	→  117
Level correction	→  117
Tank/silo height	→  117
► Linearization	→  120
Linearization type	→  122
Unit after linearization	→  123
Free text	→  124
Level linearized	→  124
Maximum value	→  125
Diameter	→  125
Intermediate height	→  125
Table mode	→  126

Table number	→  127
Level	→  127
Level	→  128
Customer value	→  128
Activate table	→  128
► Safety settings	→  129
Output echo lost	→  129
Value echo lost	→  129
Ramp at echo lost	→  130
Blocking distance	→  117
► WHG confirmation	→  132
► Deactivate WHG	→  133
Reset write protection	→  133
Code incorrect	→  133
► Switch output	→  134
Switch output function	→  134
Assign status	→  134
Assign limit	→  135
Assign diagnostic behavior	→  135
Switch-on value	→  135
Switch-on delay	→  137
Switch-off value	→  137
Switch-off delay	→  137
Failure mode	→  138

Switch status	→  138
Invert output signal	→  138
► Display	→  139
Language	→  139
Format display	→  139
Value 1 to 4 display	→  141
Decimal places 1 to 4	→  141
Display interval	→  142
Display damping	→  142
Header	→  142
Header text	→  143
Separator	→  143
Number format	→  143
Decimal places menu	→  144
Backlight	→  144
Contrast display	→  145
► Configuration backup display	→  146
Operating time	→  146
Last backup	→  146
Configuration management	→  146

Backup state	→ 147
Comparison result	→ 147
► Administration	→ 149
Define access code	→ 151
Device reset	→ 149
🔍 Diagnostics	→ 152
Actual diagnostics	→ 152
Timestamp	→ 152
Previous diagnostics	→ 152
Timestamp	→ 153
Operating time from restart	→ 153
Operating time	→ 146
► Diagnostic list	→ 154
Diagnostics 1 to 5	→ 154
Timestamp 1 to 5	→ 154
► Device information	→ 156
Device tag	→ 156
Serial number	→ 156
Firmware version	→ 156
Device name	→ 156
Order code	→ 157
Extended order code 1 to 3	→ 157
Status PROFIBUS Master Config	→ 157
PROFIBUS ident number	→ 157

► Measured values	→ 158
Distance	→ 104
Level linearized	→ 124
Terminal voltage 1	→ 158
Switch status	→ 138
Electronic temperature	→ 159
► Analog inputs	
► Analog input 1 to 6	→ 160
Channel	→ 110
Out value	→ 160
Out status	→ 161
Out status HEX	→ 161
► Data logging	→ 162
Assign channel 1 to 4	→ 162
Logging interval	→ 162
Clear logging data	→ 163
► Simulation	→ 166
Assign measurement variable	→ 167
Value process variable	→ 167
Switch output simulation	→ 167
Switch status	→ 168
Simulation device alarm	→ 168

Simulation diagnostic event	
Simulation diagnostic event	
► Device check	→ 169
Start device check	→ 169
Result device check	→ 169
Last check time	→ 169
Level signal	→ 170

15.3 "Setup" menu

- 
-  : Marks the navigation path to the parameter via the display and operating module.
 -  : Marks the navigation path to the parameter via an operating tool (e.g. FieldCare).
 -  : Marks parameters which can be locked via the software locking →  46.

Navigation   Setup

Device tag

Navigation	  Setup → Device tag
Description	Enter tag for measuring point.
User entry	Up to 32 alphanumerical characters
Factory setting	FMR5x

Device address

Navigation	  Setup → Device address
Description	▪ for Address mode = Software: Enter bus address. ▪ for Address mode = Hardware: Displays bus address.
User entry	0 to 126
Factory setting	126

Distance unit

Navigation	  Setup → Distance unit
Description	Select distance unit.
Selection	<i>SI units</i> ▪ mm ▪ m <i>US units</i> ▪ ft ▪ in
Factory setting	m

Tank type



Navigation	  Setup → Tank type
Prerequisite	Medium type (→  114) = Liquid
Description	Select tank type.
Selection	■ Bypass / pipe ■ Stilling well ■ Workbench test ■ Open channel ■ Sphere ■ Storage vessel ■ Process vessel standard ■ Process vessel with agitator ■ Wave guide antenna
Factory setting	Depending on the antenna
Additional information	Depending on the antenna some of the options mentioned above may not be available or there may be additional options.

Tube diameter



Navigation	  Setup → Tube diameter
Prerequisite	Tank type (→  101) = Bypass / pipe
Description	Specify diameter of bypass or stilling well.
User entry	0 to 9.999 m
Factory setting	0 m

Medium group



Navigation	  Setup → Medium group
Prerequisite	Medium type (→  114) = Liquid
Description	Select medium group.
Selection	■ Others ■ Water based (DC >= 4)
Factory setting	Others

Additional information

This parameter roughly specifies the dielectric constant (DC) of the medium. For a more detailed definition of the DC use the **Medium property** parameter (→  114).

The **Medium group** parameter presets the **Medium property** parameter (→  114) as follows:

Medium group	Medium property (→  114)
Others	Unknown
Water based (DC >= 4)	DC 4 ... 7

-  The **Medium property** parameter can be changed at a later point of time. However, when doing so, the **Medium group** parameter retains its value. Only the **Medium property** parameter is relevant for the signal evaluation.
-  The measuring range may be reduced for small dielectric constants. For details refer to the Technical Information (TI) of the respective device.

Empty calibration

Navigation   Setup → Empty calibr.

Description

Specify the distance E between the process connection and the minimum level (0%). This defines the starting point of the measuring range.


User entry

Depending on the antenna

Factory setting

Depending on the antenna

Additional information

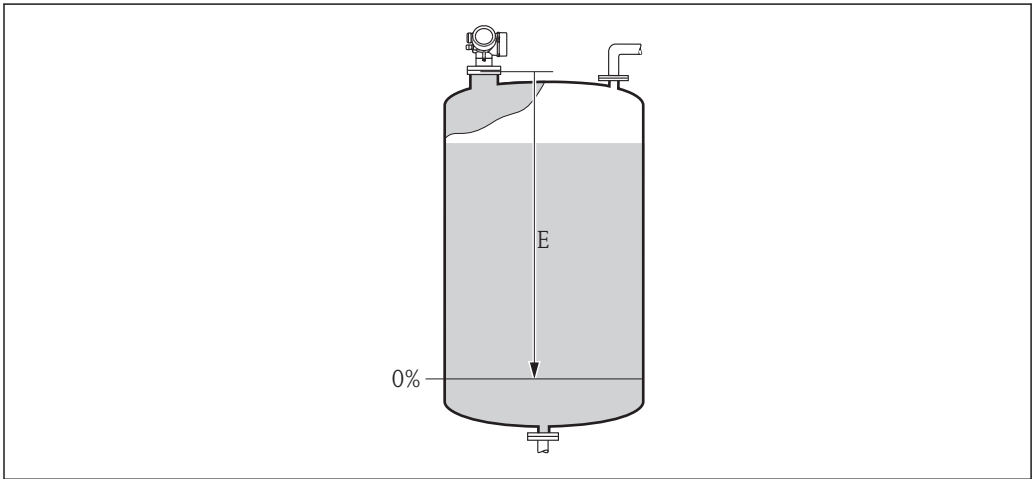

A0019486

 24 Empty calibration (E) for level measurements in liquids

-  The measuring range starts at the point at which the radar beam hits the tank or silo bottom. In the case of dished boiler ends or conical outlets levels below this point can not be measured.

Full calibration



Navigation

  Setup → Full calibr.

Description

Specify the distance F between the minimum level (0%) and the maximum level (100%).


User entry

Depending on the antenna

Factory setting

Depending on the antenna

Additional information

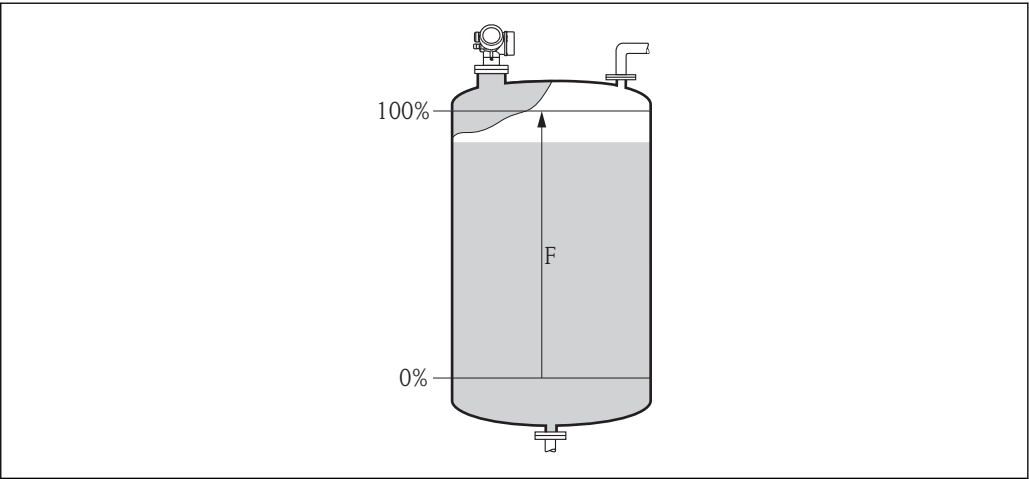

A0019487

 25 Full calibration (F) for level measurements in liquids

Level


Navigation

  Setup → Level

Description

Displays measured level L (before linearization).

Additional information

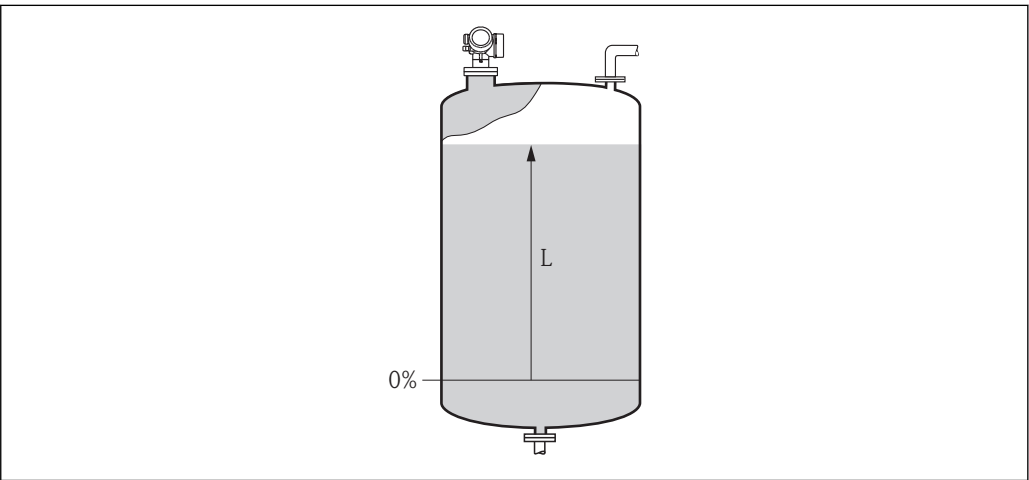

A0019482

 26 Level in case of liquid measurements




The unit is defined in the **Level unit** parameter (→  116).

Distance

Navigation
 Setup → Distance
Description

Displays the measured distance D between the reference point (lower edge of the flange or threaded connection) and the level.

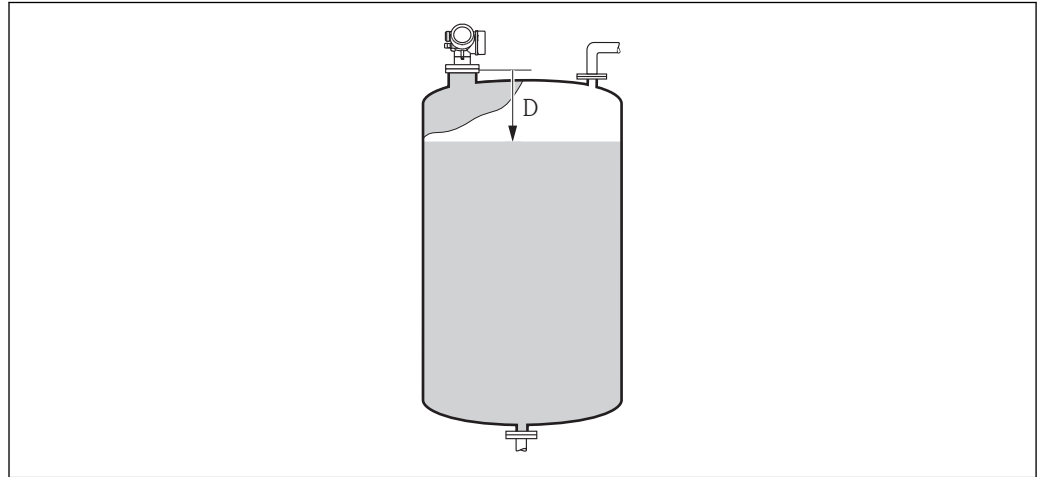Additional information

A0019483

 27 Distance for liquid measurements

 The unit is defined in the **Distance unit** parameter (→  100).

Signal quality

Navigation
 Setup → Signal quality
Description

Displays the signal quality of the level echo.

Additional information**Meaning of the display options**

- **Strong**
The evaluated echo exceeds the threshold by at least 10 dB.
- **Medium**
The evaluated echo exceeds the threshold by at least 5 dB.
- **Weak**
The evaluated echo exceeds the threshold by less than 5 dB.
- **No signal**
The device does not find a usable echo.

The signal quality indicated in this parameter always refers to the currently evaluated echo: either the level echo or the tank bottom echo. To differentiate between these two, the quality of the tank bottom echo is always displayed in brackets.

 In case of a lost echo (**Signal quality = No signal**) the device generates the following error message:

- F941, for **Output echo lost** (→  129) = **Alarm**.
- S941, if another option has been selected in **Output echo lost** (→  129).

Confirm distance	
Navigation	Setup → Confirm distance
Description	Specify, whether the measured distance matches the real distance. Depending on the selection the device automatically sets the range of mapping.
Selection	■ Manual map ■ Distance ok ■ Distance unknown ■ Distance too small ⁷⁾ ■ Distance too big ⁷⁾ ■ Tank empty ■ Factory map
Factory setting	Distance unknown
Additional information	Meaning of the options ■ Manual map To be selected if the range of mapping is to be defined manually in the Mapping end point parameter (→ 106). In this case it is not necessary to confirm the distance. ■ Distance ok To be selected if the measured distance matches the actual distance. The device performs a mapping. ■ Distance unknown To be selected if the actual distance is unknown. A mapping can not be performed in this case. ■ Distance too small To be selected if the measured distance is smaller than the actual distance. The device searches for the next echo and returns to the Confirm distance parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting Distance ok.

⁷⁾ Visibility depends on order options or device settings

■ **Distance too big**⁸⁾

To be selected if the measured distance exceeds the actual distance. The device adjusts the signal evaluation and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.

■ **Tank empty**

To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range as defined by the **Tank/silo height** parameter (→  117). By default, **Tank/silo height** = **Empty calibration**.

Take into account that in case of conical outlets, for example, a measurement is only possible up to the point at which the radar hits the bottom of the tank or silo. If the **Tank empty** option is used, **Empty calibration** (→  102) and **Tank/silo height** may not reach below this point as otherwise the empty signal is suppressed.

■ **Factory map**

To be selected if the present mapping curve (if one exists) is to be deleted. The device returns to the **Confirm distance** parameter and a new mapping can be recorded.



When operating via the display module, the measured distance is displayed together with this parameter for reference purposes.



If the teaching procedure with the **Distance too small** option or the **Distance too big** option is quit before the distance has been confirmed, a map is **not** recorded and the teaching procedure is reset after 60 s.

Present mapping

Navigation



Setup → Present mapping

Description

Indicates up to which distance a mapping has already been recorded.

Mapping end point



Navigation



Setup → Map. end point

Prerequisite

Confirm distance (→  105) = **Manual map** or **Distance too small**

Description

Specify new end of the mapping.

User entry

0.1 to 999 999.9 m

Factory setting

0.1 m

Additional information

This parameter defines up to which distance the new mapping is to be recorded. The distance is measured from the reference point, i.e. from the lower edge of the mounting flange or the threaded connection.



For reference purposes the **Present mapping** parameter (→  106) is displayed together with this parameter. It indicates up to which distance a mapping has already been recorded.

8) Only available for "Expert → Sensor → Echo tracking → **Evaluation mode** parameter" = "Short time history" or "Long time history"

Record map	
Navigation	Setup → Record map
Prerequisite	Confirm distance (→ 105) = Manual map or Distance too small
Description	Start recording of the map.
Selection	■ No ■ Record map ■ Overlay map ■ Factory map ■ Delete partial map
Factory setting	No
Additional information	Meaning of the options ■ No The map is not recorded. ■ Record map The map is recorded. After the recording is completed, the new measured distance and the new mapping range appear on the display. When operating via the local display, these values must be confirmed by pressing . ■ Overlay map The new mapping curve is generated by overlaying the old and the current envelope curves. ■ Factory map The factory map stored in the ROM of the device is used. ■ Delete partial map The mapping curve is deleted up to Mapping end point (→ 106).

15.3.1 "Mapping" wizard

-  The **Mapping** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the mapping are located directly in the **Setup** menu (→  100).
-  In the **Mapping** wizard two parameters are displayed simultaneously on the display module at any one time. The upper parameter can be edited, whereas the lower parameter is displayed for reference purposes only.

Navigation  Setup → Mapping

Confirm distance

Navigation  Setup → Mapping → Confirm distance

Description →  105

Mapping end point

Navigation  Setup → Mapping → Map. end point

Description →  106

Record map

Navigation  Setup → Mapping → Record map

Description →  107

Distance

Navigation  Setup → Mapping → Distance

Description →  104

Prepare recording map

Navigation  Setup → Mapping → Prepare rec. map

Description Indicates the progress of the recording of the map.

User interface

- Init. recording
- In progress
- Finished

15.3.2 "Analog input 1 to 6" submenu

 There is an **Analog input** submenu for each AI block of the device. The AI block is used to configure the measured value transmission to the bus.

Only the most basic properties of the AI blocks can be configured in this submenu. For a detailed configuration of the AI blocks refer to Expert → Analog inputs → Analog input 1 to 6.

Navigation  Expert → Analog inputs → Analog input 1 to 6

Channel

Navigation  Expert → Analog inputs → Analog input 1 to 6 → Channel

Description Standard parameter **CHANNEL** of the Analog Input Block according to the PROFIBUS Profile.

- Selection
- Level linearized
 - Distance
 - Terminal voltage
 - Electronic temperature
 - Absolute echo amplitude
 - Relative echo amplitude
 - Sensor debug
 - Analog output adv. diagnostics 1
 - Analog output adv. diagnostics 2

Factory setting Level linearized

Additional information Allocates a measured value to the AI block.

PV filter time

Navigation  Expert → Analog inputs → Analog input 1 to 6 → PV filter time

Description Standard parameter **PV_FTIME** of the Analog Input Block according to the PROFIBUS profile.

User entry Positive floating-point number

Factory setting 0

Additional information This parameter defines the damping constant τ (in seconds) for the output of the Analog Input Block.

Fail safe type


Navigation	Expert → Analog inputs → Analog input 1 to 6 → Fail safe type
Description	Standard parameter FSAFE_TYPE of the Analog Input Block according to the PROFIBUS profile.
Selection	■ Fail safe value ■ Fallback value ■ Off
Factory setting	Off
Additional information	Meaning of the options This parameter specifies the output value of the Analog Input block in the event of an error. ■ Fail safe value The output value in the event of an error is defined in the Fail safe value parameter (→ 111). ■ Fallback value The last output value that was valid before the error occurred is retained. ■ Off The output value follows the current measured value. The status is set to BAD.

Fail safe value


Navigation	Expert → Analog inputs → Analog input 1 to 6 → Fail safe value
Prerequisite	Fail safe type (→ 111) = Fail safe value
Description	Standard parameter FSAFE_VALUE of the Analog Input Block according to the PROFIBUS profile.
User entry	Signed floating-point number
Factory setting	0
Additional information	This parameter defines the output value of the Analog Input Block in case of an error.

15.3.3 "Advanced setup" submenu

Navigation  Setup → Advanced setup

Locking status

Navigation	  Setup → Advanced setup → Locking status
Description	Indicates the write protection with the highest priority that is currently active.
User interface	■ Hardware locked ■ SIL locked ■ WHG locked ■ Temporarily locked
Additional information	Meaning and priorities of the types of write protection ■ Hardware locked (priority 1) The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters. ■ SIL locked (priority 2) The SIL mode is activated. Writing access to the relevant parameters is denied. ■ WHG locked (priority 3) The WHG mode is activated. Writing access to the relevant parameters is denied. ■ Temporarily locked (priority 4) Write access to the parameters is temporarily locked on account of internal processes in progress in the device (e.g. data upload/download, reset etc.). The parameters can be modified as soon as the processes are complete.  On the display module, the -symbol appears in front of parameters that cannot be modified since they are write-protected.

Access status tooling

Navigation	 Setup → Advanced setup → Access stat.tool
Description	Indicates access authorization to parameters via operating tool (e.g. FieldCare).
User interface	■ Operator ■ Maintenance ■ Service
Additional information	 The access authorization can be changed via the Enter access code parameter (→  113).  If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the Locking status parameter (→  112).

Access status display

Navigation	 Setup → Advanced setup → Access stat.disp
Prerequisite	The device has a local display.
Description	Indicates access authorization to parameters via local display.
User interface	■ Operator ■ Maintenance ■ Service
Additional information	 If a  symbol appears in front of a parameter, the parameter cannot be changed via the local display with the current access authorization.  The access authorization can be changed via the Enter access code parameter (→  113).  If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the Locking status parameter (→  112).

Enter access code

Navigation	  Setup → Advanced setup → Ent. access code
Description	Enter access code to disable write protection of parameters.
User entry	0 to 9999
Additional information	■ For local operation, the customer-specific access code, which has been defined in the Define access code parameter (→  149), has to be entered. ■ If an incorrect access code is entered, the user retains his current access authorization. ■ The write protection affects all parameters marked with the -symbol in this document. On the local display, the -symbol in front of a parameter indicates that the parameter is write-protected. ■ If no key is pressed for 10 min, or the user switches from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after another 60 s.  Please contact your Endress+Hauser Sales Center if you lose your access code.

"Level" submenu

Navigation  Setup → Advanced setup → Level

Medium type

Navigation	 Setup → Advanced setup → Level → Medium type
Description	Specify type of medium.
User interface	■ Liquid ■ Solid
Factory setting	FMR50, FMR51, FMR52, FMR53, FMR54: Liquid
Additional information	 This parameter determines the value of several other parameters and strongly influences the complete signal evaluation. Therefore, it is strongly recommended not to change the factory setting.

Medium property



Navigation	 Setup → Advanced setup → Level → Medium property
Description	Specify relative dielectric constant ϵ_r of the medium.
Selection	■ Unknown ■ DC 1.4 ... 1.6 ■ DC 1.6 ... 1.9 ■ DC 1.9 ... 2.5 ■ DC 2.5 ... 4 ■ DC 4 ... 7 ■ DC 7 ... 15 ■ DC > 15
Factory setting	Dependent on Medium type (→  114) and Medium group (→  101).

Additional information *Dependency on "Medium type" and "Medium group"*

Medium type (→  114)	Medium group (→  101)	Medium property
Solid		Unknown
Liquid	Water based (DC >= 4)	DC 4 ... 7
	Others	Unknown

 For dielectric constants (DC values) of many media commonly used in various industries refer to:

- the Endress+Hauser DC manual (CP01076F)
- the Endress+Hauser "DC Values App" (available for Android and iOS)

Max. filling speed liquid



Navigation	 Setup → Advanced setup → Level → Max. fill liquid
Prerequisite	Medium type (→  114) = Liquid
Description	Select expected maximum filling speed.
Selection	■ Slow < 1cm (0,4in) /min ■ Medium < 10cm (4in) /min ■ Standard < 1m (40in) /min ■ Fast < 2m (80in) /min ■ Very fast > 2m (80in) /min ■ No filter / test
Factory setting	Depending on the Tank type parameter (→  101)
Additional information	Max. filling speed liquid is preset by Tank type (→  101). It can, however, be adjusted to the process in the vessel at any time. If Tank type (→  101) is changed again at a later point of time, it may be necessary to repeat the fine adjustment.

Max. draining speed liquid



Navigation	 Setup → Advanced setup → Level → Max drain liquid
Prerequisite	Medium type (→  114) = Liquid
Description	Select expected maximum draining speed.
Selection	■ Slow < 1cm (0,4in) /min ■ Medium < 10cm (4in) /min ■ Standard < 1m (40in) /min ■ Fast < 2m (80in) /min ■ Very fast > 2m (80in) /min ■ No filter / test
Factory setting	Depending on the Tank type parameter (→  101)
Additional information	Max. draining speed liquid (→  115) is preset by Tank type (→  101). It can, however, be adjusted to the process in the vessel at any time. If Tank type (→  101) is changed again at a later point of time, it may be necessary to repeat the fine adjustment.

Advanced process conditions




Navigation	 Setup → Advanced setup → Level → Adv. conditions
Description	Specify additional process conditions (if required).

Selection	■ Foam (>5cm/0,16ft) ■ Changing DC values ■ Small tanks (< 1m/3ft)
Factory setting	None
Additional information	"Foam (>5cm/0,16ft)" option This option makes sure that no tank history is used which has been recorded while foam was present at the surface and thus is no reliable map of the tank property. To achieve this, the setting Evaluation mode = Long time history is deactivated.  The Foam (>5cm/0,16ft) option is only available for liquid applications (FMR50, FMR51, FMR52, FMR53, FMR54). "Changing DC values" option A tank history which has been recorded with Evaluation mode = Long time history is only valid for a fixed dielectric constant. The Changing DC values option disables the setting Evaluation mode = Long time history and thus avoids wrong measuring values in the case of a changing dielectric constant.  The Changing DC values option is only available for liquid applications (FMR50, FMR51, FMR52, FMR53, FMR54). "Small tanks (< 1m/3ft)" option This option provides a simple possibility to reduce the echo width of the sensor module. This enables an improved detection of superimposed echos - especially in the near field. Internally, all paramters related to the echo width are adjusted by this option.  The Small tanks (< 1m/3ft) option is only available for liquid measurements with 26 GHz HF module (FMR50, FMR51, FMR52).

Level unit		
Navigation	  Setup → Advanced setup → Level → Level unit	
Description	Select level unit.	
Selection	SI units ■ % ■ m ■ mm	US units ■ ft ■ in
Factory setting	%	
Additional information	The level unit may differ from the distance unit defined in the Distance unit parameter (→  100): ■ The unit defined in the Distance unit parameter is used for the basic calibration (Empty calibration (→  102) and Full calibration (→  103)). ■ The unit defined in the Level unit parameter is used to display the (nonlinearized) level.	

Blocking distance

Navigation	 Setup → Advanced setup → Level → Blocking dist.
Description	Specify blocking distance BD.
User entry	0 to 200 m
Factory setting	■ FMR50, FMR51, FMR53, FMR54: antenna length ■ FMR52: antenna length + 200 mm (7.9 in)
Additional information	No echos are evaluated within the blocking distance BD. Therefore, BD can be used to suppress interference echos in the vicinity of the antenna.

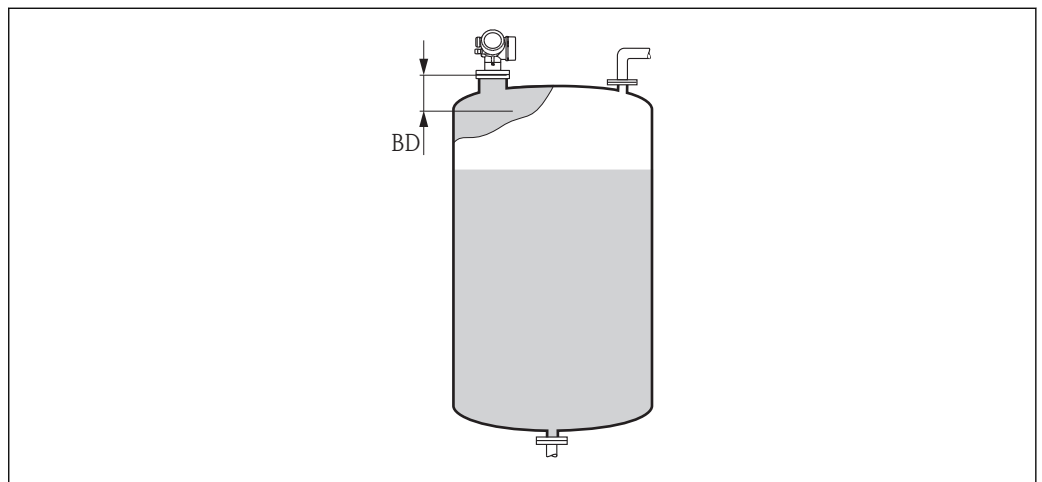

A0019492

 28 Blocking distance (BD) for liquid measurements

Level correction

Navigation	 Setup → Advanced setup → Level → Level correction
Description	Specify level correction (if required).
User entry	-200 000.0 to 200 000.0 %
Factory setting	0.0 %
Additional information	The value specified in this parameter is added to the measured level (before linearization).


Tank/silo height

Navigation	 Setup → Advanced setup → Level → Tank/silo height
Description	Specify total height of the tank or silo as measured from the process connection.

User entry -999.9999 to 999.9999 m

Factory setting **Empty calibration** (→  102)

Additional information If the parametrized measuring range (**Empty calibration** (→  102)) differs significantly from the tank or silo height, it is recommended to enter the tank or silo height. Example: Continuous level monitoring in the upper third of a tank or silo.

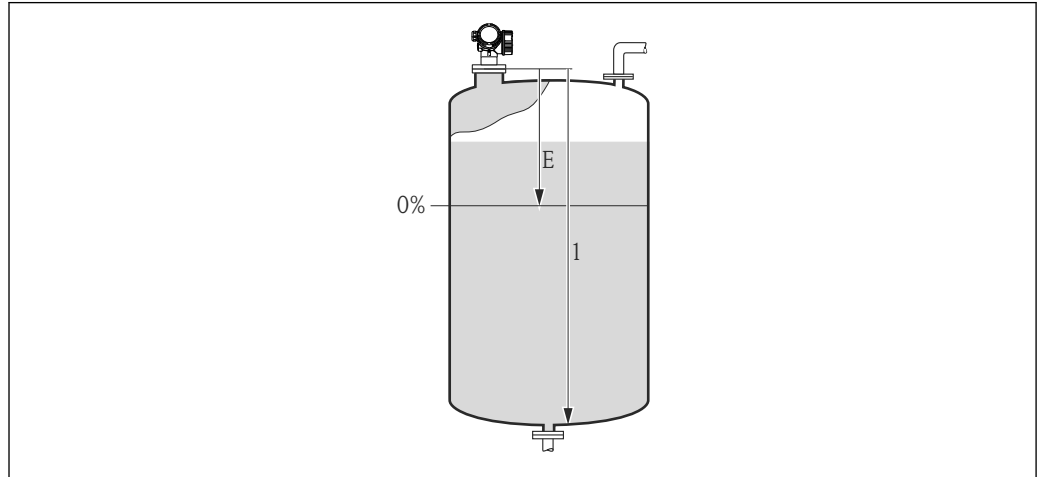


A0019867

 29 "Tank/silo height" parameter (→  117) for measurements in liquids

E Empty calibration (→  102)

1 Tank/silo height (→  117)

 For tanks with conical outlet, **Tank/silo height** should not be changed as in this type of applications **Empty calibration** (→  102) is usually **not** << the tank or silo height.

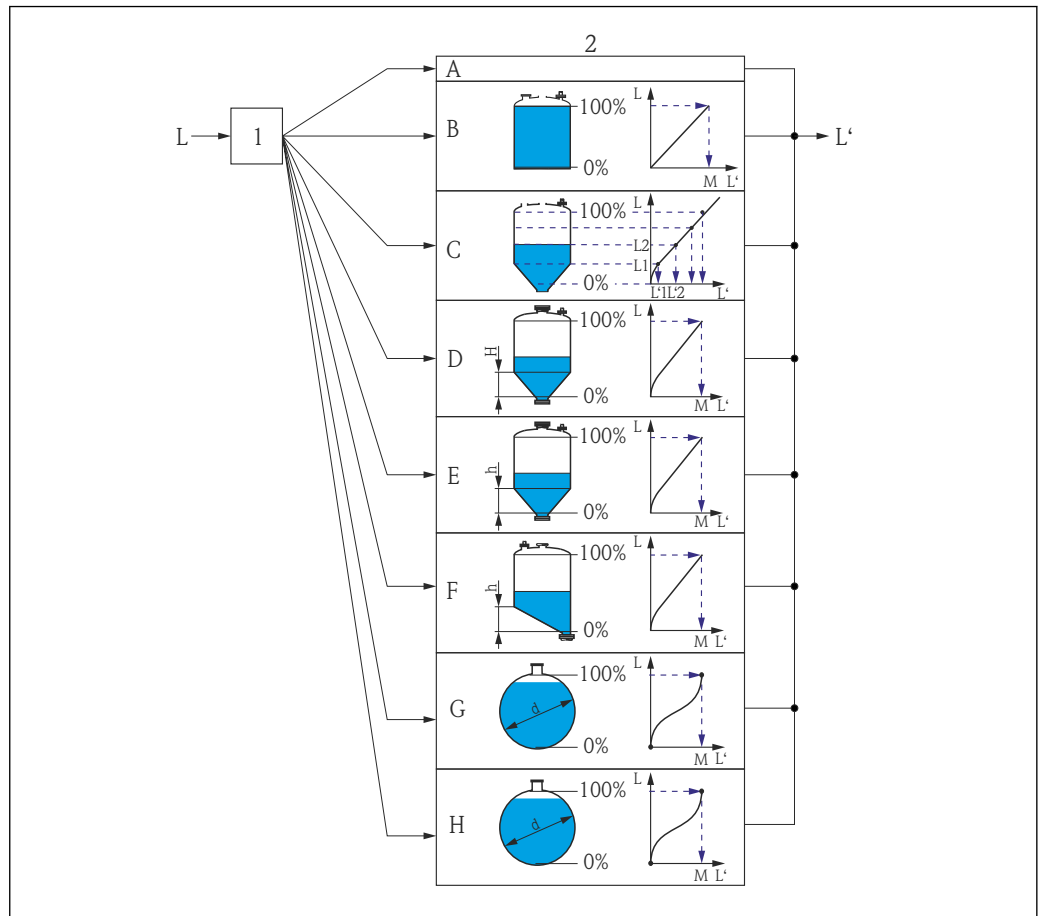"Linearization" submenu

A0019648

30 Linearization: Transformation of the level and (if relevant) the interface height into a volume or weight; the transformation is dependent on the shape of the vessel.

1 Selection of linearization type and unit

2 Configuration of the linearization

A Linearization type (→ 122) = None

B Linearization type (→ 122) = Linear

C Linearization type (→ 122) = Table

D Linearization type (→ 122) = Pyramid bottom

E Linearization type (→ 122) = Conical bottom

F Linearization type (→ 122) = Angled bottom

G Linearization type (→ 122) = Horizontal cylinder

H Linearization type (→ 122) = Sphere

L Level before linearization (measured in distance units)

L' Level linearized (→ 124) (corresponds to volume or weight)

M Maximum value (→ 125)

d Diameter (→ 125)

h Intermediate height (→ 125)

Structure of the submenu on the display module

Navigation  Setup → Advanced setup → Linearization

► Linearization		
Linearization type		→  122
Unit after linearization		→  123
Free text		→  124
Maximum value		→  125
Diameter		→  125
Intermediate height		→  125
Table mode		→  126
► Edit table		
	Level	→  127
	Customer value	→  128
Activate table		→  128

Structure of the submenu in an operating tool (e.g. FieldCare)

Navigation  Setup → Advanced setup → Linearization

► Linearization		
Linearization type	→ 	122
Unit after linearization	→ 	123
Free text	→ 	124
Level linearized	→ 	124
Maximum value	→ 	125
Diameter	→ 	125
Intermediate height	→ 	125
Table mode	→ 	126
Table number	→ 	127
Level	→ 	127
Level	→ 	128
Customer value	→ 	128
Activate table	→ 	128

Description of parameters

Navigation  Setup → Advanced setup → Linearization

Linearization type




Navigation  Setup → Advanced setup → Linearization → Lineariz. type

Description Select linearization type.

- Selection
- None
 - Linear
 - Table
 - Pyramid bottom
 - Conical bottom
 - Angled bottom
 - Horizontal cylinder
 - Sphere

Factory setting None

Additional information

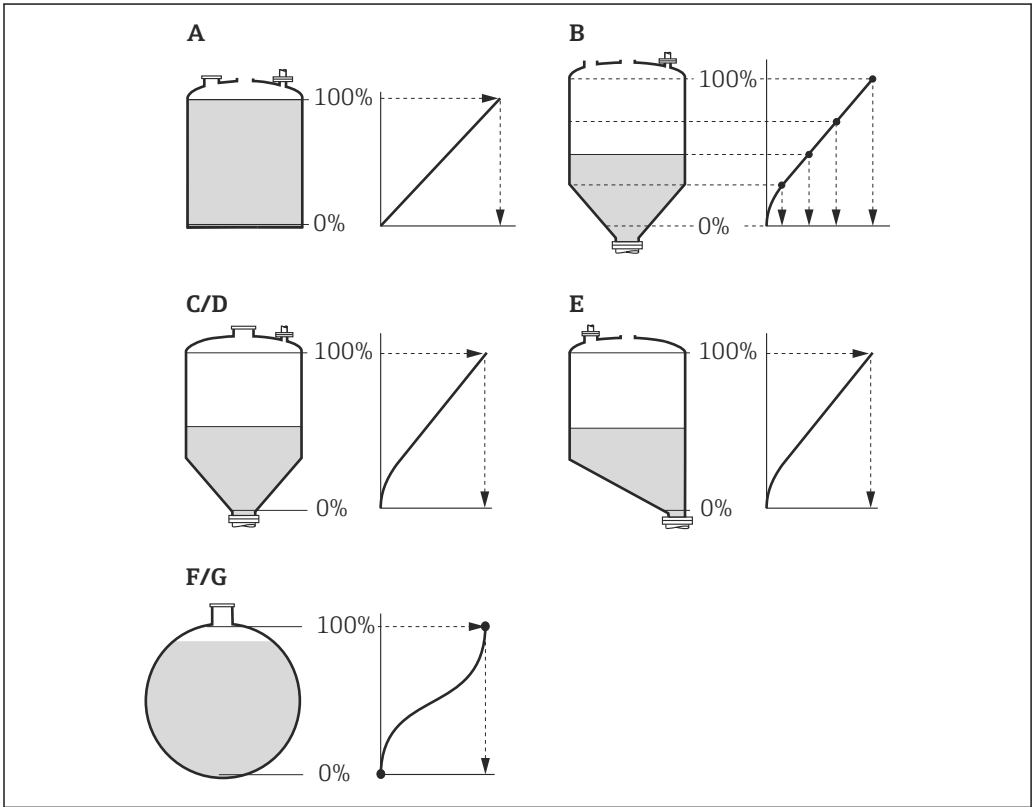

A0021476

 31 Linearization types

- A None
- B Table
- C Pyramid bottom
- D Conical bottom
- E Angled bottom
- F Sphere
- G Horizontal cylinder

Meaning of the options**■ None**

The level is transmitted in the level unit without linearization.

■ Linear

The output value (volume/weight) is directly proportional to the level L. This is valid, for example, for vertical cylinders. The following additional parameters have to be specified:

- **Unit after linearization** (→  123)
- **Maximum value** (→  125): Maximum volume or weight

■ Table

The relationship between the measured level L and the output value (volume/weight) is given by a linearization table consisting of up to 32 pairs of values "level - volume" or "level - weight", respectively. The following additional parameters have to be specified:

- **Unit after linearization** (→  123)
- **Table mode** (→  126)
- For each table point: **Level** (→  127)
- For each table point: **Customer value** (→  128)
- **Activate table** (→  128)

■ Pyramid bottom

The output value corresponds to the volume or weight in a silo with pyramid bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  123)
- **Maximum value** (→  125): Maximum volume or weight
- **Intermediate height** (→  125): The height of the pyramid

■ Conical bottom

The output value corresponds to the volume or weight in a tank with conical bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  123)
- **Maximum value** (→  125): Maximum volume or weight
- **Intermediate height** (→  125): The height of the conical part of the tank

■ Angled bottom

The output value corresponds to the volume or weight in a silo with an angled bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  123)
- **Maximum value** (→  125): Maximum volume or weight
- **Intermediate height** (→  125): Height of the angled bottom

■ Horizontal cylinder

The output value corresponds to the volume or weight in a horizontal cylinder. The following additional parameters have to be specified:

- **Unit after linearization** (→  123)
- **Maximum value** (→  125): Maximum volume or weight
- **Diameter** (→  125)

■ Sphere

The output value corresponds to the volume or weight in a spherical tank. The following additional parameters have to be specified:

- **Unit after linearization** (→  123)
- **Maximum value** (→  125): Maximum volume or weight
- **Diameter** (→  125)

Unit after linearization**Navigation**

  Setup → Advanced setup → Linearization → Unit lineariz.

Prerequisite

Linearization type (→  122) ≠ None

Description

Select unit of the linearized value.

Selection	SI units ■ STon ■ t ■ kg ■ cm³ ■ dm³ ■ m³ ■ hl ■ l ■ % Custom-specific units Free text
-----------	---

US units

■

lb

■

UsGal

■

ft³

Imperial units

impGal

Maximum value

Navigation	 Setup → Advanced setup → Linearization → Maximum value
Prerequisite	Linearization type (→  122) has one of the following values: ■ Linear ■ Pyramid bottom ■ Conical bottom ■ Angled bottom ■ Horizontal cylinder ■ Sphere
Description	Specify the maximum content of the vessel (100%) measured in the units after linearization.
User entry	-50 000.0 to 50 000.0 %
Factory setting	100.0 %


Diameter

Navigation	 Setup → Advanced setup → Linearization → Diameter
Prerequisite	Linearization type (→  122) has one of the following values: ■ Horizontal cylinder ■ Sphere
Description	Specify tank diameter.
User entry	0 to 9 999.999 m
Factory setting	2 m
Additional information	The unit is defined in the Distance unit parameter (→  100).

Intermediate height

Navigation	 Setup → Advanced setup → Linearization → Intermed. height
Prerequisite	Linearization type (→  122) has one of the following values: ■ Pyramid bottom ■ Conical bottom ■ Angled bottom
Description	Specify intermediate height H.
User entry	0 to 200 m
Factory setting	0 m

Additional information

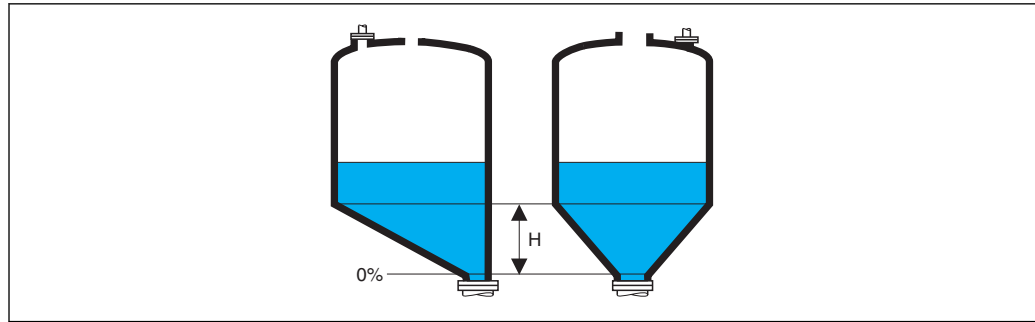

A0013264

H Intermediate height

The unit is defined in the **Distance unit** parameter (→ 100).

Table mode



Navigation

Setup → Advanced setup → Linearization → Table mode

Prerequisite

Linearization type (→ 122) = Table

Description

Select editing mode of the linearization table.

Selection

- Manual
- Semiautomatic⁹⁾
- Clear table
- Sort table

Factory setting

Manual

Additional information

Meaning of the options

- **Manual**
The level and the associated linearized value are entered manually for each linearization point.
- **Semiautomatic**
The level is measured by the device for each linearization point. The associated linearized value is entered manually.
- **Clear table**
Deletes the existing linearization table.
- **Sort table**
Rearranges the linearization points into an ascending order.

9) Visibility depends on order options or device settings

Conditions the linearization table must meet:

- The table may consist of up to 32 pairs of values "Level - Linearized Value".
- The table must be monotonic (monotonically increasing or decreasing).
- The first linearization point must refer to the minimum level.
- The last linearization point must refer to the maximum level.

 Before entering a linearization table, the values for **Empty calibration** (→  102) and **Full calibration** (→  103) must be set correctly.

If values of the table need to be changed after the full or empty calibration have been changed, a correct evaluation is only ensured if the existing table is deleted and the complete table is entered again. To do so delete the existing table (**Table mode** (→  126) = **Clear table**). Then enter a new table.

How to enter the table

- Via FieldCare

The table points can be entered via the **Table number** (→  127), **Level** (→  127) and **Customer value** (→  128) parameters. As an alternative, the graphic table editor may be used: Device Operation → Device Functions → Additional Functions → Linearization (Online/Offline)

- Via local display

Select the **Edit table** submenu to call up the graphic table editor. The table is displayed and can be edited line by line.

 The factory setting for the level unit is "%". If you want to enter the linearization table in physical units, you must select the appropriate unit in the **Level unit** parameter (→  116) beforehand.

Table number 	
Navigation	 Setup → Advanced setup → Linearization → Table number
Prerequisite	Linearization type (→  122) = Table
Description	Select table point you are going to enter or change.
User entry	1 to 32
Factory setting	1
Level (Manual) 	
Navigation	 Setup → Advanced setup → Linearization → Level
Prerequisite	■ Linearization type (→  122) = Table ■ Table mode (→  126) = Manual
Description	Enter level value of the table point (value before linearization).
User entry	Signed floating-point number

Factory setting 0 %

Level (Semiautomatic)

Navigation  Setup → Advanced setup → Linearization → Level

Prerequisite

- **Linearization type** (→  122) = **Table**
- **Table mode** (→  126) = **Semiautomatic**

Description Displays measured level (value before linearization). This value is transmitted to the table.

Customer value

Navigation  Setup → Advanced setup → Linearization → Customer value

Prerequisite **Linearization type** (→  122) = **Table**

Description Enter linearized value for the table point.

User entry Signed floating-point number

Factory setting 0 %

Activate table

Navigation   Setup → Advanced setup → Linearization → Activate table

Prerequisite **Linearization type** (→  122) = **Table**

Description Activate (enable) or deactivate (disable) the linearization table.

Selection

- **Disable**
- **Enable**

Factory setting Disable

Additional information

Meaning of the options

- **Disable**
The measured level is not linearized.
If **Linearization type** (→  122) = **Table** at the same time, the device issues error message F435.
- **Enable**
The measured level is linearized according to the table.

 When editing the table, the **Activate table** parameter is automatically reset to **Disable** and must be reset to **Enable** after the table has been entered.

"Safety settings" submenu

Navigation  Setup → Advanced setup → Safety sett.

Output echo lost

Navigation	 Setup → Advanced setup → Safety sett. → Output echo lost
Description	Define the behavior of the output signal in case of a lost echo.
Selection	■ Last valid value ■ Ramp at echo lost ■ Value echo lost ■ Alarm
Factory setting	Last valid value
Additional information	Meaning of the options ■ Last valid value The last valid value is kept in the case of a lost echo. ■ Ramp at echo lost In the case of a lost echo the output value is continuously shifted towards 0% or 100%. The slope of the ramp is defined in the Ramp at echo lost parameter (→  130). ■ Value echo lost In the case of a lost echo the output assumes the value defined in the Value echo lost parameter (→  129). ■ Alarm In the case of a lost echo the device generates an alarm; see the Failure mode parameter

Value echo lost

Navigation	 Setup → Advanced setup → Safety sett. → Value echo lost
Prerequisite	Output echo lost (→  129) = Value echo lost
Description	Define output value in case of a lost echo.
User entry	0 to 200 000.0 %
Factory setting	0.0 %
Additional information	Use the unit which has been defined for the measured value output: ■ without linearization: Level unit (→  116) ■ with linearization: Unit after linearization (→  123)

Ramp at echo lost



Navigation

Setup → Advanced setup → Safety sett. → Ramp echo lost

Prerequisite

Output echo lost (→ 129) = Ramp at echo lost

Description

Define the slope of the ramp in the case of a lost echo.


User entry

Signed floating-point number

Factory setting

0.0 %/min

Additional information

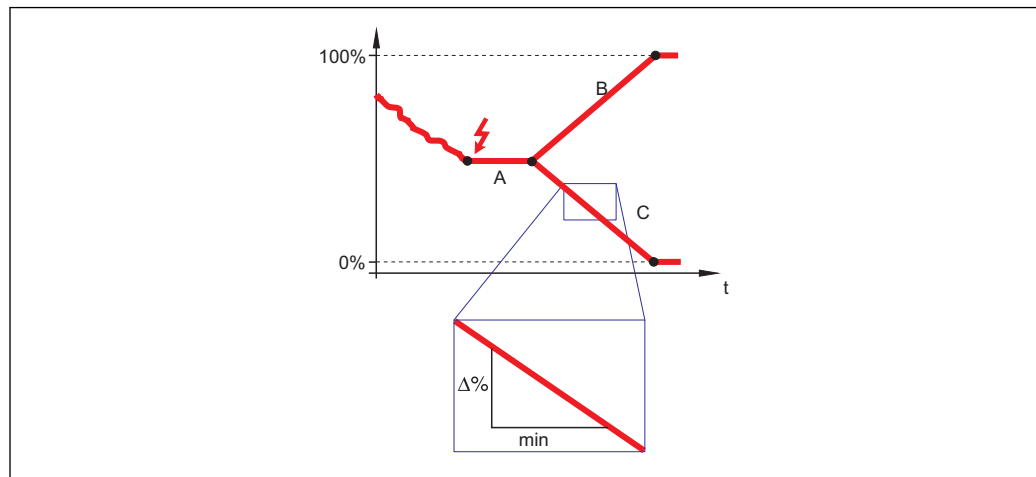

A0013269

- A Delay time echo lost
 B Ramp at echo lost (→ 130) (positive value)
 C Ramp at echo lost (→ 130) (negative value)

- The unit for the slope of the ramp is "percentage of the measuring range per minute" (%/min).
- For a negative slope of the ramp: The measured value is continuously decreased until it reaches 0%.
- For a positive slope of the ramp: The measured value is continuously increased until it reaches 100%.

Blocking distance



Navigation

Setup → Advanced setup → Safety sett. → Blocking dist.

Description

Specify blocking distance BD.

User entry


0 to 200 m

Factory setting

- FMR50, FMR51, FMR53, FMR54: antenna length
- FMR52: antenna length + 200 mm (7.9 in)

Additional information

No echos are evaluated within the blocking distance BD. Therefore, BD can be used to suppress interference echos in the vicinity of the antenna.

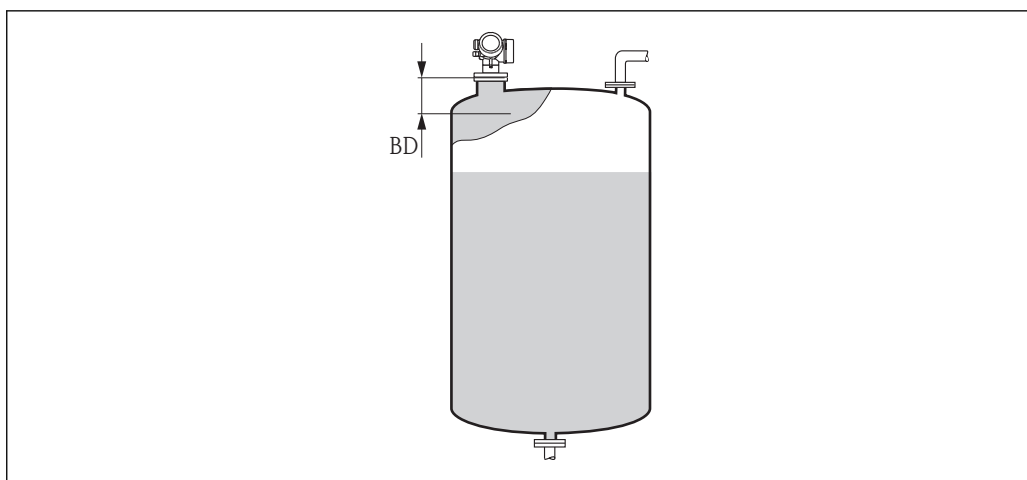

A0019492

32 Blocking distance (BD) for liquid measurements

"WHG confirmation" wizard

The **WHG confirmation** wizard is only available for devices with WHG approval (Feature 590: "Additional Approval", option LC: "WHG overfill prevention") which are currently not in the WHG-locked state.

The **WHG confirmation** wizard is used to lock the device according to WHG. For details refer to the "Functional Safety Manual" of the respective device, which describes the locking procedure and the parameters of the sequence.

Navigation



Setup → Advanced setup → WHG confirmation

"Deactivate WHG" wizard

Navigation  Setup → Advanced setup → Deactivate WHG

Reset write protection

Navigation	 Setup → Advanced setup → Deactivate WHG → Res. write prot.
Description	Enter unlocking code.
User entry	0 to 65 535
Factory setting	0

Code incorrect

Navigation	 Setup → Advanced setup → Deactivate WHG → Code incorrect
Description	Indicates that a wrong unlocking code has been entered. Select procedure.
Selection	■ Reenter code ■ Abort sequence
Factory setting	Reenter code

"Switch output" submenu

Navigation  Setup → Advanced setup → Switch output

Switch output function**Navigation**

 Setup → Advanced setup → Switch output → Switch out funct

Description

Select function for switch output.

Selection

- Off
- On
- Diagnostic behavior
- Limit
- Digital Output

Factory setting

Off

Additional information**Meaning of the options**

- **Off**
The output is always open (non-conductive).
- **On**
The output is always closed (conductive).
- **Diagnostic behavior**
The output is normally closed and is only opened if a diagnostic event is present. The **Assign diagnostic behavior** parameter (→  135) determines for which type of event the output is opened.
- **Limit**
The output is normally closed and is only opened if a measured variable exceeds or falls below a defined limit. The limit values are defined by the following parameters:
 - **Assign limit** (→  135)
 - **Switch-on value** (→  135)
 - **Switch-off value** (→  137)
- **Digital Output**
The switching state of the output tracks the output value of a DI function block. The function block is selected in the **Assign status** parameter (→  134).



The **Off** and **On** options can be used to simulate the switch output.

Assign status**Navigation**

 Setup → Advanced setup → Switch output → Assign status

Prerequisite

Switch output function (→  134) = **Digital Output**

Description

Select device status for switch output.

Selection

- Off
- Digital output AD 1
- Digital output AD 2
- Digital output 1

- Digital output 2
- Digital output 3
- Digital output 4

Factory setting Off

Additional information The **Digital output AD 1** and **Digital output AD 2** options refer to the Advanced Diagnostic Blocks. A switch signal generated in these blocks can be transmitted via the switch output.

Assign limit

Navigation   Setup → Advanced setup → Switch output → Assign limit

Prerequisite **Switch output function** (→  134) = **Limit**

Description Select process variable for limit monitoring.

Selection

- Off
- Level linearized
- Distance
- Terminal voltage
- Electronic temperature
- Relative echo amplitude
- Area of incoupling

Factory setting Off

Assign diagnostic behavior

Navigation   Setup → Advanced setup → Switch output → Assign diag. beh

Prerequisite **Switch output function** (→  134) = **Diagnostic behavior**

Description Select diagnostic behavior for switch output.

Selection

- Alarm
- Alarm or warning
- Warning


Factory setting Alarm

Switch-on value

Navigation   Setup → Advanced setup → Switch output → Switch-on value

Prerequisite **Switch output function** (→  134) = **Limit**

Description	Enter measured value for the switch-on point.
User entry	Signed floating-point number
Factory setting	0
Additional information	The switching behavior depends on the relative position of the Switch-on value and Switch-off value parameters: Switch-on value > Switch-off value – The output is closed if the measured value is larger than Switch-on value. – The output is opened if the measured value is smaller than Switch-off value.

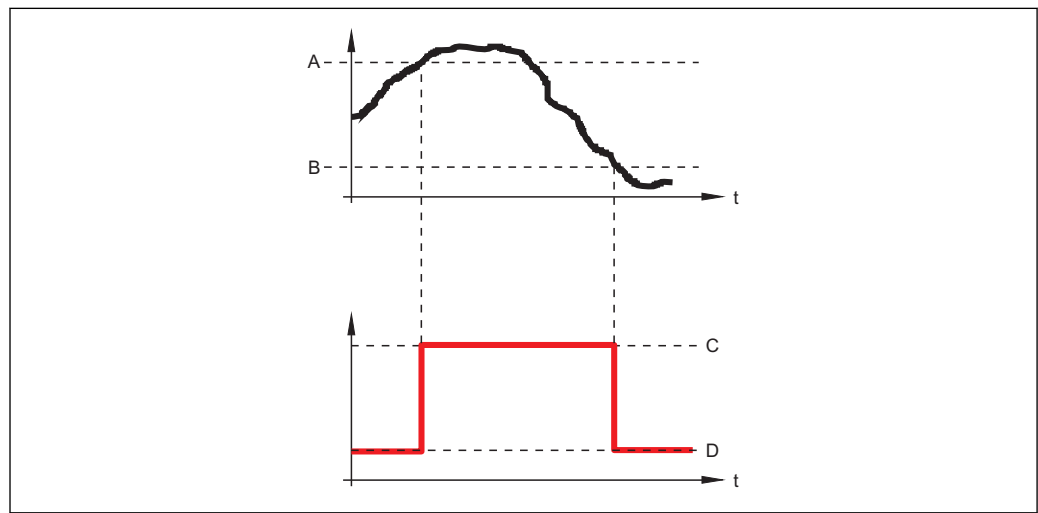


A0015585

- A Switch-on value
 B Switch-off value
 C Output closed (conductive)
 D Output opened (non-conductive)

Switch-on value < Switch-off value

- The output is closed if the measured value is smaller than **Switch-on value**.
- The output is opened if the measured value is larger than **Switch-off value**.

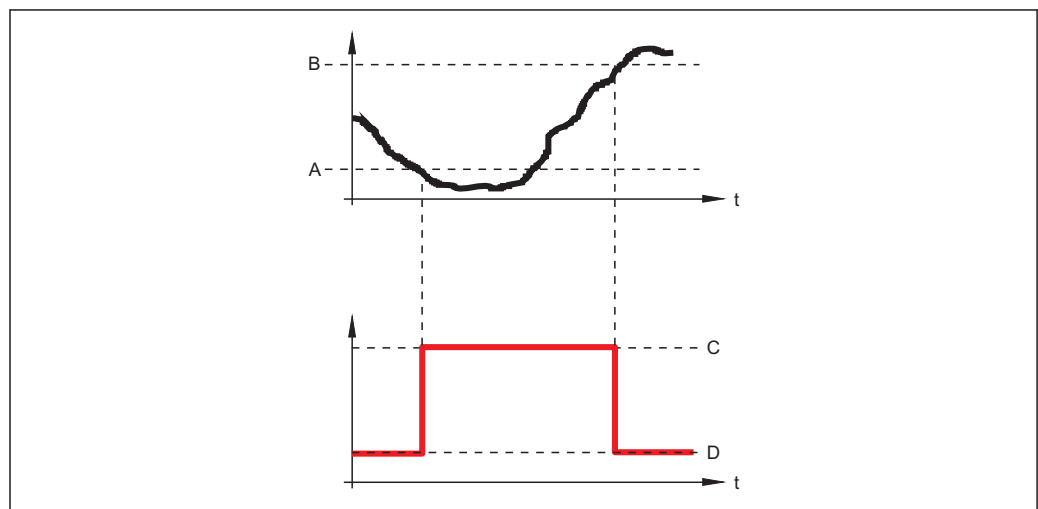

A0015586

- A Switch-on value
 B Switch-off value
 C Output closed (conductive)
 D Output opened (non-conductive)

Switch-on delay



Navigation	  Setup → Advanced setup → Switch output → Switch-on delay
Prerequisite	▪ Switch output function (→  134) = Limit ▪ Assign limit (→  135) ≠ Off
Description	Define switch-on delay.
User entry	0.0 to 100.0 s
Factory setting	0.0 s

Switch-off value



Navigation	  Setup → Advanced setup → Switch output → Switch-off value
Prerequisite	Switch output function (→  134) = Limit
Description	Enter measured value for the switch-off point.
User entry	Signed floating-point number
Factory setting	0
Additional information	The switching behavior depends on the relative position of the Switch-on value and Switch-off value parameters; description: see the Switch-on value parameter (→  135).

Switch-off delay



Navigation	  Setup → Advanced setup → Switch output → Switch-off delay
Prerequisite	▪ Switch output function (→  134) = Limit ▪ Assign limit (→  135) ≠ Off
Description	Define switch-off delay.
User entry	0.0 to 100.0 s
Factory setting	0.0 s

Failure mode



Navigation	 Setup → Advanced setup → Switch output → Failure mode
Description	Define output behavior in alarm condition.
Selection	■ Actual status ■ Open ■ Closed
Factory setting	Open

Switch status

Navigation	 Setup → Advanced setup → Switch output → Switch status
Description	Displays the current state of the switch output.

Invert output signal



Navigation	 Setup → Advanced setup → Switch output → Invert outp.sig.
Description	Specify whether the output signal is to be inverted.
Selection	■ No ■ Yes
Factory setting	No
Additional information	Meaning of the options ■ No The behavior of the switch output is as described above. ■ Yes The states Open and Closed are inverted as compared to the description above.

"Display" submenu

The **Display** submenu is only visible if a display module is connected to the device.

Navigation



Setup → Advanced setup → Display

Language

Navigation

Setup → Advanced setup → Display → Language

Description

Set display language.

Selection

- English
- Deutsch ¹⁰⁾
- Français ¹⁰⁾
- Español ¹⁰⁾
- Italiano ¹⁰⁾
- Nederlands ¹⁰⁾
- Portuguesa ¹⁰⁾
- Polski ¹⁰⁾
- русский язык (Russian) ¹⁰⁾
- Svenska ¹⁰⁾
- Türkçe ¹⁰⁾
- 中文 (Chinese) ¹⁰⁾
- 日本語 (Japanese) ¹⁰⁾
- 한국어 (Korean) ¹⁰⁾
- العربية (Arabic) ¹⁰⁾
- Bahasa Indonesia ¹⁰⁾
- ภาษาไทย (Thai) ¹⁰⁾
- tiếng Việt (Vietnamese) ¹⁰⁾
- čeština (Czech) ¹⁰⁾

Factory setting

The additional language selected in feature 500 of the product structure.
If no additional language has been selected: **English**

Additional information

The **English** option can be selected in every device. One additional operating language can be selected in the product structure when ordering a device (feature 500 "Additional Operation Language") and will be selectable in the **Language** parameter.

Format display

Navigation

Setup → Advanced setup → Display → Format display

Description

Select how measured values are shown on the display.

¹⁰⁾ Visibility depends on order options or device settings

Selection

- 1 value, max. size
- 1 bargraph + 1 value
- 2 values
- 1 value large + 2 values
- 4 values

Factory setting


1 value, max. size

Additional information




A0019963

33 "Format display" = "1 value, max. size"

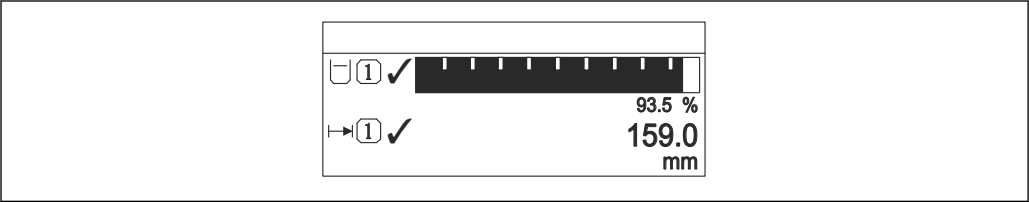


A0019964

34 "Format display" = "1 bargraph + 1 value"

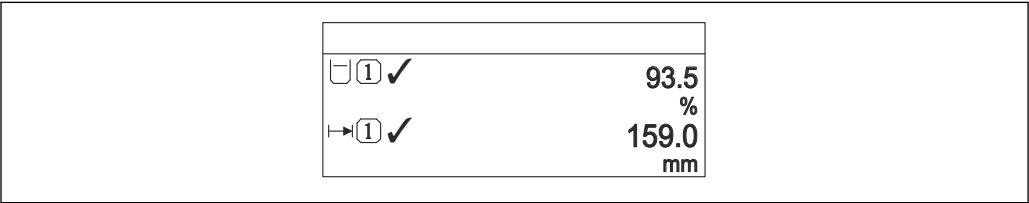


A0019965

35 "Format display" = "2 values"

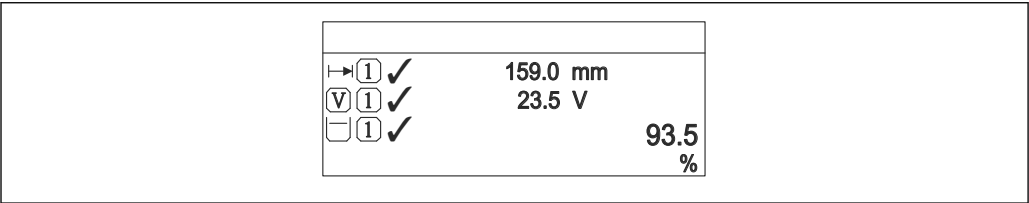

A0019966

36 "Format display" = "1 value large + 2 values"

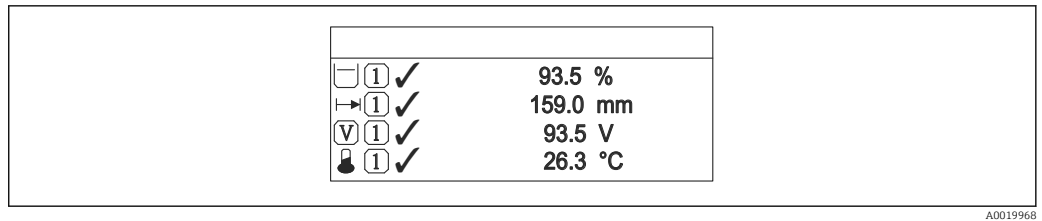

A0019968

37 "Format display" = "4 values"

- The **Value 1 to 4 display** → 141 parameters specify which measured values are shown on the display and in which order.
- If more measured values are specified than the current display mode permits, the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter (→ 142).

Value 1 to 4 display

Navigation Setup → Advanced setup → Display → Value 1 display

Description Select the measured value that is shown on the local display.

Selection

- None ¹¹⁾
- Level linearized
- Distance
- Current output 1 ¹²⁾
- Measured current
- Current output 2
- Terminal voltage
- Electronic temperature
- Absolute echo amplitude
- Relative echo amplitude
- Analog output adv. diagnostics 1
- Analog output adv. diagnostics 2
- Area of incoupling

Factory setting

- Value 1 display: Level linearized
- Value 2 display: None
- Value 3 display: None
- Value 4 display: None

Decimal places 1 to 4

Navigation Setup → Advanced setup → Display → Decimal places 1

Description Select the number of decimal places for the display value.

11) can not be selected for the 'Value 1 display' parameter.

12) "Visibility depends on order options or device settings"

Selection	■ X ■ X.X ■ X.XX ■ X.XXX ■ X.XXXX
Factory setting	x.xx
Additional information	The setting does not affect the measuring or computational accuracy of the device.

Display interval

Navigation	  Setup → Advanced setup → Display → Display interval
Description	Set time measured values are shown on display if display alternates between values.
User entry	1 to 10 s
Factory setting	5 s
Additional information	This parameter is only relevant if the number of selected measuring values exceeds the number of values the selected display format can display simultaneously.

Display damping




Navigation	  Setup → Advanced setup → Display → Display damping
Description	Define display reaction time to fluctuations in the measured value.
User entry	0.0 to 999.9 s
Factory setting	0.0 s

Header



Navigation	  Setup → Advanced setup → Display → Header
Description	Select header contents on local display.
Selection	■ Device tag ■ Free text
Factory setting	Device tag

Additional information

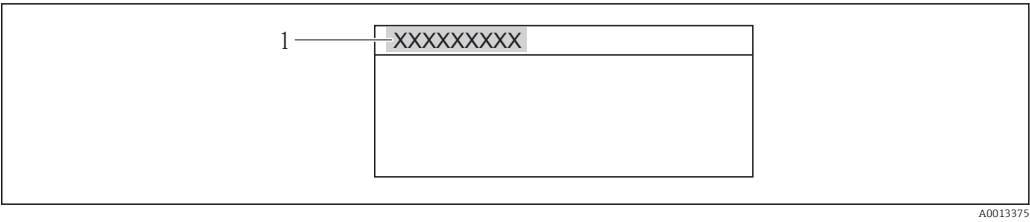

A0013375

1 Position of the header text on the display

Meaning of the options

- **Device tag**
Is defined in the **Device tag** parameter.
- **Free text**
Is defined in the **Header text** parameter (→ 143).

Header text

Navigation	  Setup → Advanced setup → Display → Header text
Prerequisite	Header (→ 142) = Free text
Description	Enter display header text.
Factory setting	-----
Additional information	The number of characters which can be displayed depends on the characters used.

Separator

Navigation	  Setup → Advanced setup → Display → Separator
Description	Select decimal separator for displaying numerical values.
Selection	■ . ■ ,
Factory setting	.

Number format

Navigation	  Setup → Advanced setup → Display → Number format
Description	Choose number format for the display.
Selection	■ Decimal ■ ft-in-1/16"

Factory setting	Decimal
Additional information	The ft-in-1/16" option is only valid for distance units.

Decimal places menu

Navigation	  Setup → Advanced setup → Display → Dec. places menu
Description	Select number of decimal places for the representation of numbers within the operating menu.
Selection	■ X ■ X.X ■ X.XX ■ X.XXX ■ X.XXXX
Factory setting	X.XXXX
Additional information	■ Is only valid for numbers in the operating menu (e.g. Empty calibration, Full calibration), but not for the measured value display. The number of decimal places for the measured value display is defined in the Decimal places 1 to 4 →  141 parameters. ■ The setting does not affect the accuracy of the measurement or the calculations.

Backlight

Navigation	  Setup → Advanced setup → Display → Backlight
Prerequisite	The device has the SD03 local display (with optical keys).
Description	Switch the local display backlight on and off.
Selection	■ Disable ■ Enable
Factory setting	Disable
Additional information	Meaning of the options ■ Disable Switches the backlight off. ■ Enable Switches the backlight on.  Regardless of the setting in this parameter the backlight may be automatically switched off by the device if the supply voltage is too low.

Contrast display

Navigation	  Setup → Advanced setup → Display → Contrast display
Description	Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle).
User entry	20 to 80 %
Factory setting	Dependent on the display.
Additional information	 Setting the contrast via push-buttons: ■ Darker: press the  and  buttons simultaneously. ■ Brighter: press the  and  buttons simultaneously.

"Configuration backup display" submenu

 This submenu is only visible if a display module is connected to the device.

The configuration of the device can be saved to the display module at a certain point of time (backup). The saved configuration can be restored to the device if required, e.g. in order to bring the device back into a defined state. The configuration can also be transferred to a different device of the same type using the display module.

Navigation  Setup → Advanced setup → Conf.backup disp

Operating time

Navigation	 Setup → Advanced setup → Conf.backup disp → Operating time
Description	Indicates how long the device has been in operation.
User interface	Days (d), hours (h), minutes (m), seconds (s)
Additional information	<i>Maximum time</i> 9 999 d (≈ 27 years)

Last backup

Navigation	 Setup → Advanced setup → Conf.backup disp → Last backup
Description	Indicates when the last data backup was saved to the display module.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Configuration management



Navigation	 Setup → Advanced setup → Conf.backup disp → Config. managem.
Description	Select action for managing the device data in the display module.
Selection	■ Cancel ■ Execute backup ■ Restore ■ Duplicate ■ Compare ■ Clear backup data
Factory setting	Cancel

Additional information**Meaning of the options**■ **Cancel**

No action is executed and the user exits the parameter.

■ **Execute backup**

A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device.

■ **Restore**

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device.

■ **Duplicate**

The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:

Medium type

■ **Compare**

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter (→  147).

■ **Clear backup data**

The backup copy of the device configuration is deleted from the display module of the device.



While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.



If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset will not restore the original status.

In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

Backup state

Navigation

 Setup → Advanced setup → Conf.backup disp → Backup state

Description

Displays which backup action is currently in progress.

Comparison result

Navigation

  Setup → Advanced setup → Conf.backup disp → Compar. result

Description

Displays the comparison result between the device and the display.

Additional information**Meaning of the display options****■ Settings identical**

The current device configuration of the HistoROM is identical to the backup copy in the display module.

■ Settings not identical

The current device configuration of the HistoROM is not identical to the backup copy in the display module.

■ No backup available

There is no backup copy of the device configuration of the HistoROM in the display module.

■ Backup settings corrupt

The current device configuration of the HistoROM is corrupt or not compatible with the backup copy in the display module.

■ Check not done

The device configuration of the HistoROM has not yet been compared to the backup copy in the display module.

■ Dataset incompatible

The data sets are incompatible and can not be compared.



To start the comparison, set **Configuration management** (→  146) = **Compare**.



If the transmitter configuration has been duplicated from a different device by **Configuration management** (→  146) = **Duplicate**, the new device configuration in the HistoROM is only partially identical to the configuration stored in the display module: Sensor specific properties (e.g. the mapping curve) are not duplicated. Thus, the result of the comparison will be **Settings not identical**.

"Administration" submenu

Navigation  Setup → Advanced setup → Administration

Define access code

Navigation	 Setup → Advanced setup → Administration → Def. access code
Description	Define release code for write access to parameters.
User entry	0 to 9999
Factory setting	0
Additional information	 If the factory setting is not changed or 0 is defined as the access code, the parameters are not write-protected and the configuration data of the device can then always be modified. The user is logged on in the <i>Maintenance</i> role.  The write protection affects all parameters marked with the  symbol in this document. On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.  Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the Enter access code parameter (→  113).  Please contact your Endress+Hauser Sales Center if you lose your access code.  For display operation: The new access code is only valid after it has been confirmed in the Confirm access code parameter (→  151).

Device reset

Navigation	 Setup → Advanced setup → Administration → Device reset
Description	Select to which state the device is to be reset.
Selection	■ Cancel ■ To factory defaults ■ To delivery settings ■ Of customer settings ■ To transducer defaults ■ Restart device
Factory setting	Cancel

Additional information**Meaning of the options****■ Cancel**

No action

■ To factory defaults

All parameters are reset to the order-code specific factory setting.

■ To delivery settings

All parameters are reset to the delivery setting. The delivery setting may differ from the factory default if customer specific settings have been ordered.

This option is only visible if customer specific settings have been ordered.

■ Of customer settings

All customer parameters are reset to their factory setting. Service parameters, however, remain unchanged.

■ To transducer defaults

Every measurement-related parameter is reset to its factory setting. Service parameters and communication-related parameters, however, remain unchanged.

■ Restart device

The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

"Define access code" wizard

 The **Define access code** wizard is only available when operating via the local display. When operating via an operating tool, the **Define access code** parameter is located directly in the **Administration** submenu. The **Confirm access code** parameter is not available for operation via operating tool.

Navigation  Setup → Advanced setup → Administration → Def. access code

Define access code 	
Navigation	 Setup → Advanced setup → Administration → Def. access code → Def. access code
Description	→  149
Confirm access code 	
Navigation	 Setup → Advanced setup → Administration → Def. access code → Confirm code
Description	Confirm the entered access code.
User entry	0 to 9999
Factory setting	0

15.4 "Diagnostics" menu

Navigation  Diagnostics

Actual diagnostics

Navigation	 Diagnostics → Actual diagnos.
Description	Displays current diagnostic message.
Additional information	The display consists of: ▪ Symbol for event behavior ▪ Code for diagnostic behavior ▪ Operating time of occurrence ▪ Event text  If several messages are active at the same time, the messages with the highest priority is displayed.  Information on what is causing the message, and remedy measures, can be viewed via the ⓘ symbol on the display.

Timestamp

Navigation	 Diagnostics → Timestamp
Description	Displays timestamp for the Actual diagnostics parameter (→  152).
User interface	Days (d), hours (h), minutes (m), seconds (s)

Previous diagnostics

Navigation	 Diagnostics → Prev.diagnostics
Description	Displays the last diagnostic message which has been active before the current message.
Additional information	The display consists of: ▪ Symbol for event behavior ▪ Code for diagnostic behavior ▪ Operating time of occurrence ▪ Event text  The condition displayed may still apply. Information on what is causing the message, and remedy measures, can be viewed via the ⓘ symbol on the display.

Timestamp

Navigation	 Diagnostics → Timestamp
Description	Displays timestamp for the Previous diagnostics parameter (→  152).
User interface	Days (d), hours (h), minutes (m), seconds (s)

Operating time from restart

Navigation	  Diagnostics → Time fr. restart
Description	Displays the time the device has been in operation since the last device restart.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Operating time

Navigation	  Diagnostics → Operating time
Description	Indicates how long the device has been in operation.
User interface	Days (d), hours (h), minutes (m), seconds (s)
Additional information	<i>Maximum time</i> 9 999 d (≈ 27 years)

15.4.1 "Diagnostic list" submenu

Navigation  Diagnostics → Diagnostic list

Diagnostics 1 to 5

Navigation	 Diagnostics → Diagnostic list → Diagnostics 1 to 5
Description	Display the current diagnostics messages with the highest to fifth-highest priority.
Additional information	The display consists of: ■ Symbol for event behavior ■ Code for diagnostic behavior ■ Operating time of occurrence ■ Event text

Timestamp 1 to 5

Navigation	 Diagnostics → Diagnostic list → Timestamp
Description	Displays timestamp for the Diagnostics 1 to 5 parameter (→  154).
User interface	Days (d), hours (h), minutes (m), seconds (s)

15.4.2 "Event logbook" submenu

 The **Event logbook** submenu is only available when operating via the local display. When operating via FieldCare, the event list can be displayed in the FieldCare function "Event List / HistoROM".

Navigation  Diagnostics → Event logbook

Filter options

Navigation	 Diagnostics → Event logbook → Filter options
Description	Select category (status signal) whose event messages are displayed in the events list.
Selection	■ All ■ Failure (F) ■ Function check (C) ■ Out of specification (S) ■ Maintenance required (M) ■ Information (I)
Factory setting	All
Additional information	 ■ This parameter is only used for operation via the local display. ■ The status signals are categorized according to NAMUR NE 107.

"Event list" submenu

The **Event list** submenu displays the history of past events of the category selected in the **Filter options** parameter (→  155). A maximum of 20 events are displayed in chronological order. If the advanced HistoROM functionality has been activated in the device, the event list may comprise up to 100 entries.

The following symbols indicate whether an event has occurred or has ended:

- : Event has occurred
- : Event has ended

 Information on what is causing the message, and remedy instructions, can be viewed via the -button.

Display format

- For event messages in category I: information event, event text, "recording event" symbol and time the event occurred
- For event messages in category F, M, C, S (status signal): diagnostics event, event text, "recording event" symbol and time the event occurred

Navigation  Diagnostics → Event logbook → Event list

15.4.3 "Device information" submenu

Navigation  Diagnostics → Device info

Device tag

Navigation  Diagnostics → Device info → Device tag

Description Enter the name for the measuring point.

Factory setting FMR5x

Serial number

Navigation  Diagnostics → Device info → Serial number

Description Displays serial number of the device.

Additional information  **Uses of the serial number**

- To identify the device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the device using the Device Viewer:
www.endress.com/deviceviewer

 The serial number is also indicated on the nameplate.

Firmware version

Navigation  Diagnostics → Device info → Firmware version

Description Indicates the installed Firmware version.

User interface xx.yy.zz

Additional information  For firmware versions differing only in the last two digits ("zz") there is no difference concerning functionality or operation.

Device name

Navigation  Diagnostics → Device info → Device name

Description Displays device name.

Order code

Navigation	  Diagnostics → Device info → Order code
Description	Displays order code of the device.
Additional information	The order code is generated from the extended order code, which defines all device features of the product structure. In contrast, the device features can not be read directly from the order code.

Extended order code 1 to 3

Navigation	  Diagnostics → Device info → Ext. order cd. 1 to 3
Description	Displays the three parts of the extended order code.
Additional information	The extended order code indicates the version of all the features of the product structure and thus uniquely identifies the device.

Status PROFIBUS Master Config

Navigation	  Diagnostics → Device info → Stat Master Conf
Description	Indicates whether the cyclic data exchange with the master is currently active.
User interface	■ Active ■ Not active

PROFIBUS ident number

Navigation	  Diagnostics → Device info → Ident number
Description	Indicates the ident number of the device.
Additional information	The Ident number selector parameter can be used to define which ident number is used.

15.4.4 "Measured values" submenu


Navigation   Diagnostics → Measured val.

Distance

Navigation   Diagnostics → Measured val. → Distance

Description Displays the measured distance D between the reference point (lower edge of the flange or threaded connection) and the level.

Additional information

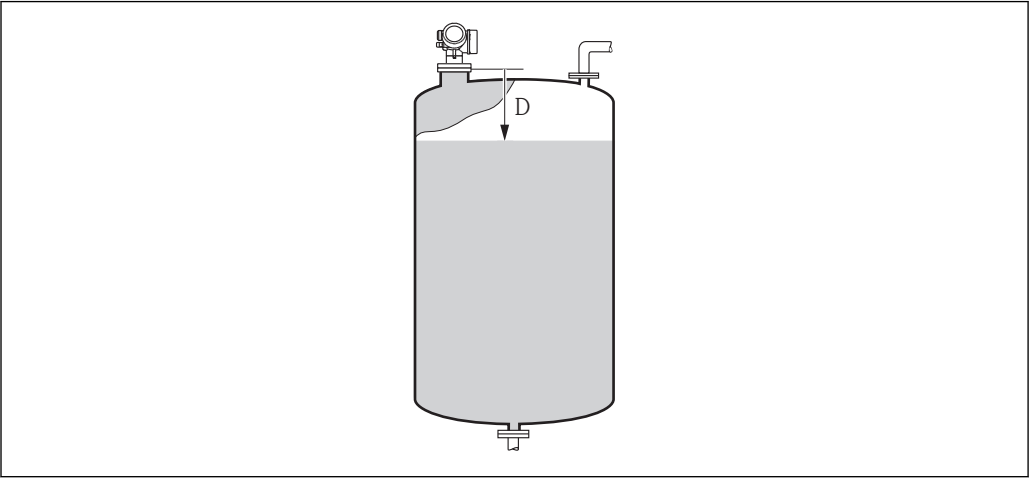

A0019483

 38 Distance for liquid measurements

 The unit is defined in the **Distance unit** parameter (→  100).

Level linearized

Navigation   Diagnostics → Measured val. → Level linearized

Description Displays linearized level.

Additional information  The unit is defined by the **Unit after linearization** parameter →  123.

Terminal voltage 1

Navigation   Diagnostics → Measured val. → Terminal volt. 1

Description Displays terminal voltage at the current output.

Switch status

Navigation	  Diagnostics → Measured val. → Switch status
Description	Displays the current state of the switch output.

Electronic temperature

Navigation	  Diagnostics → Measured val. → Electronic temp.
Description	Displays the current temperature of the electronics.
Additional information	The unit is defined in the Temperature unit parameter.

15.4.5 "Analog input 1 to 6" submenu

 There is an **Analog input** submenu for each Analog Input Block of the device. Only the most important parameters of the respective block are available at this position of the operating menu. For a complete list of the block parameters refer to: Diagnostics → Analog inputs → Analog input 1 to 6

Navigation  Diagnostics → Analog inputs → Analog input 1 to 6

Channel

Navigation	 Diagnostics → Analog inputs → Analog input 1 to 6 → Channel
Description	Standard parameter CHANNEL of the Analog Input Block according to the PROFIBUS Profile.
Selection	■ Level linearized ■ Distance ■ Terminal voltage ■ Electronic temperature ■ Absolute echo amplitude ■ Relative echo amplitude ■ Sensor debug ■ Analog output adv. diagnostics 1 ■ Analog output adv. diagnostics 2
Factory setting	Level linearized
Additional information	Allocates a measured value to the AI block.

Out value

Navigation	 Diagnostics → Analog inputs → Analog input 1 to 6 → Out value
Description	Element Value of the standard parameter OUT in the Analog Input Block according to the PROFIBUS Profile.
User entry	Signed floating-point number
Factory setting	0
Additional information	■ For Mode block actual = Man: Enter the output value of the Analog Input Block. ■ Else: Displays the output value of the Analog Input Block.

Out status

Navigation	  Diagnostics → Analog inputs → Analog input 1 to 6 → Out status
Description	Element Status of the standard parameter OUT in the Analog Input Block according to the PROFIBUS Profile.
User interface	■ Good ■ Uncertain ■ Bad
Additional information	Only the two quality bits are evaluated in this parameter.

Out status HEX

Navigation	  Diagnostics → Analog inputs → Analog input 1 to 6 → Out status HEX
Description	Element Status of the standard parameter OUT in the Analog Input Block according to the PROFIBUS Profile.
User entry	0 to 255
Factory setting	128
Additional information	The complete status byte is displayed in the form of a two-digit hexadecimal number in this parameter.

15.4.6 "Data logging" submenu

 The **Data logging** submenu is only available if the advanced functionality of the HistoROM has been activated in the device.

Navigation  Diagnostics → Data logging

Assign channel 1 to 4

Navigation	 Diagnostics → Data logging → Assign chan. 1 to 4
Description	Allocate a process variable to the respective data logging channel.
Selection	■ Off ■ Level linearized ■ Distance ■ Terminal voltage ■ Electronic temperature ■ Absolute echo amplitude ■ Relative echo amplitude ■ Area of incoupling ■ Analog output adv. diagnostics 1 ■ Analog output adv. diagnostics 2
Factory setting	Off
Additional information	A total of 500 measured values can be logged. This means: ■ 500 data points if 1 logging channel is used ■ 250 data points if 2 logging channels are used ■ 166 data points if 3 logging channels are used ■ 125 data points if 4 logging channels are used If the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 500, 250, 166 or 125 measured values are always in the log (ring memory principle).  The logged data are deleted if a new option is selected in this parameter.

Logging interval

Navigation	 Diagnostics → Data logging → Logging interval
Description	Define logging interval $t_{\log}$.
User entry	1.0 to 3 600.0 s
Factory setting	30.0 s
Additional information	This parameter defines the interval between the individual data points in the data log, and thus the maximum loggable process time $T_{\log}$:

- If 1 logging channel is used: $T_{\log} = 500 \cdot t_{\log}$
- If 2 logging channels are used: $T_{\log} = 250 \cdot t_{\log}$
- If 3 logging channels are used: $T_{\log} = 166 \cdot t_{\log}$
- If 4 logging channels are used: $T_{\log} = 125 \cdot t_{\log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of $T_{\log}$ always remains in the memory (ring memory principle).



The logged data are deleted if this parameter is changed.

Example

When using 1 logging channel

- $T_{\log} = 500 \cdot 1 \text{ s} = 500 \text{ s} \approx 8.5 \text{ min}$
- $T_{\log} = 500 \cdot 10 \text{ s} = 5\,000 \text{ s} \approx 1.5 \text{ h}$
- $T_{\log} = 500 \cdot 80 \text{ s} = 40\,000 \text{ s} \approx 11 \text{ h}$
- $T_{\log} = 500 \cdot 3\,600 \text{ s} = 1\,800\,000 \text{ s} \approx 20 \text{ d}$

Clear logging data



Navigation

Diagnostics → Data logging → Clear logging

Description

Initiate a deletion of the complete logging memory.

Selection

- Cancel
- Clear data


Factory setting

Cancel

"Display channel 1 to 4" submenu

i The **Display channel 1 to 4** submenus are only available for operation via the local display. When operating via FieldCare, the logging diagram can be displayed in the FieldCare function "Event List / HistoROM" .

The **Display channel 1 to 4** submenus invoke a diagram of the logging history of the respective channel.

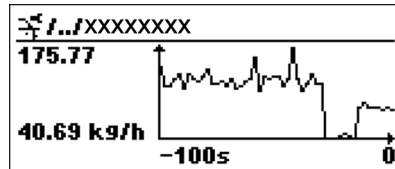

- x-axis: depending on the number of selected channels, 250 to 1000 measured values of a process variable are displayed.
- y-axis: covers the approximate measured value span and constantly adapts this to the measurement.

i To return to the operating menu, press $\oplus$ and $\square$ simultaneously.

Navigation

 Diagnostics → Data logging → Displ.channel 1 to 4

15.4.7 "Simulation" submenu

The **Simulation** submenu is used to simulate specific measuring values or other conditions. This helps to check the correct configuration of the device and connected control units.

Conditions which can be simulated

Condition to be simulated	Associated parameters
Specific value of a process variable	▪ Assign measurement variable (→  167) ▪ Value process variable (→  167)
Specific state of the switch output	▪ Switch output simulation (→  167) ▪ Switch status (→  168)
Existence of an alarm	Simulation device alarm (→  168)

Structure of the submenu

Navigation  Expert → Diagnostics → Simulation

► Simulation		
Assign measurement variable	→	 167
Value process variable	→	 167
Switch output simulation	→	 167
Switch status	→	 168
Simulation device alarm	→	 168

Description of parameters

Navigation  Expert → Diagnostics → Simulation

Assign measurement variable

Navigation	 Expert → Diagnostics → Simulation → Assign meas.var.
Description	Select process variable to be simulated.
Selection	■ Off ■ Level ■ Level linearized
Factory setting	Off
Additional information	■ The value of the variable to be simulated is defined in the Value process variable parameter (→  167). ■ If Assign measurement variable ≠ Off, a simulation is active. This is indicated by a diagnostic message of the <i>Function check (C)</i> category.

Value process variable

Navigation	 Expert → Diagnostics → Simulation → Value proc. var.
Prerequisite	Assign measurement variable (→  167) ≠ Off
Description	Specify value of the process value being simulated.
User entry	Signed floating-point number
Factory setting	0
Additional information	Downstream measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.

Switch output simulation

Navigation	 Expert → Diagnostics → Simulation → Switch sim.
Description	Switch the simulation of the switch output on or off.
Selection	■ Off ■ On
Factory setting	Off

Switch status

Navigation	 Expert → Diagnostics → Simulation → Switch status
Prerequisite	Switch output simulation (→  167) = On
Description	Define the switch state to be simulated.
Selection	▪ Open ▪ Closed
Factory setting	Open
Additional information	The switch status assumes the value defined in this parameter. This helps to check correct operation of connected control units.

Simulation device alarm

Navigation	 Expert → Diagnostics → Simulation → Sim. alarm
Description	Switch alarm simulation on or off.
Selection	▪ Off ▪ On
Factory setting	Off
Additional information	When selecting the On option, the device generates an alarm. This helps to check the correct output behavior of the device in the case of an alarm. An active simulation is indicated by the diagnostic message  C484 Simulation failure mode.

15.4.8 "Device check" submenu

Navigation   Diagnostics → Device check

Start device check

Navigation	  Diagnostics → Device check → Start dev. check
Description	Start a device check.
Selection	■ No ■ Yes
Factory setting	No
Additional information	In the case of a lost echo a device check can not be performed.

Result device check

Navigation	  Diagnostics → Device check → Result dev.check
Description	Displays the result of the device check.
Additional information	Meaning of the display options ■ Installation ok Measurement possible without restrictions. ■ Accuracy reduced A measurement is possible. However, the measuring accuracy may be reduced due to the signal amplitudes. ■ Measurement capability reduced A measurement is currently possible. However, there is the risk of an echo loss. Check the mounting position of the device and the dielectric constant of the medium. ■ Check not done No device check has been performed.

Last check time

Navigation	  Diagnostics → Device check → Last check time
Description	Displays the operating time at which the last device check has been performed.

Level signal

Navigation	  Diagnostics → Device check → Level signal
Prerequisite	Device check has been performed.
Description	Displays result of the device check for the level signal.
User interface	▪ Check not done ▪ Check not OK ▪ Check OK
Additional information	For Level signal = Check not OK : Check the mounting position of the device and the dielectric constant of the medium.

Index

A

Access authorization to parameters	
Read access	45
Write access	45
Access code	45
Incorrect input	45
Access status display (Parameter)	113
Access status tooling (Parameter)	112
Accessories	
Communication specific	85
Device specific	81
Service specific	85
Activate table (Parameter)	128
Actual diagnostics (Parameter)	152
Administration (Submenu)	149
Advanced process conditions (Parameter)	115
Advanced setup (Submenu)	112
Analog input 1 to 6 (Submenu)	110, 160
Application	11
Residual risk	11
Assign channel 1 to 4 (Parameter)	162
Assign diagnostic behavior (Parameter)	135
Assign limit (Parameter)	135
Assign measurement variable (Parameter)	167
Assign status (Parameter)	134

B

Backlight (Parameter)	144
Backup state (Parameter)	147
Blocking distance (Parameter)	117, 130

C

CE mark	12
Channel (Parameter)	110, 160
Cleaning	78
Clear logging data (Parameter)	163
Code incorrect (Parameter)	133
Comparison result (Parameter)	147
Configuration backup display (Submenu)	146
Configuration management (Parameter)	146
Configuration of a level measurement	62
Confirm access code (Parameter)	151
Confirm distance (Parameter)	105, 108
Context menu	57
Contrast display (Parameter)	145
Customer value (Parameter)	128

D

Data logging (Submenu)	162
Deactivate WHG (Wizard)	133
Decimal places 1 (Parameter)	141
Decimal places menu (Parameter)	144
Declaration of Conformity	12
Define access code	46
Define access code (Parameter)	149, 151
Define access code (Wizard)	151

Designated use	11
Device address (Parameter)	100
Device check (Submenu)	169
Device information (Submenu)	156
Device name (Parameter)	156
Device replacement	79
Device reset (Parameter)	149
Device tag (Parameter)	100, 156
Diagnostic event	
In the operating tool	73
Diagnostic events	70
Diagnostic list	73
Diagnostic list (Submenu)	154
Diagnostic message	70
Diagnostics	
Symbols	70
Diagnostics (Menu)	152
Diagnostics 1 to 5 (Parameter)	154
Diagnostics event	71
Diameter (Parameter)	125
DIP switch	
see Write protection switch	
Display (Submenu)	139
Display and operating module FHX50	42
Display channel 1 to 4 (Submenu)	164
Display damping (Parameter)	142
Display interval (Parameter)	142
Display module	51
Display symbols for submenus	52
Display symbols for the locking state	52
Disposal	80
Distance (Parameter)	104, 108, 158
Distance unit (Parameter)	100
Document	
Function	5
Document function	5

E

Electrical connection	
Commubox FXA291	43
Operating tools	
Via service interface (CDI)	43
Electronic temperature (Parameter)	159
Electronics housing	
Design	14
Turning	
see Turning the transmitter housing	
Empty calibration (Parameter)	102
Enter access code (Parameter)	113
Envelope curve display	58
Event history	75
Event level	
Explanation	70
Symbols	70
Event list (Submenu)	155
Event logbook (Submenu)	155

Event text	71
Events list	75
Extended order code 1 to 3 (Parameter)	157
Exterior cleaning	78

F

Fail safe type (Parameter)	111
Fail safe value (Parameter)	111
Failure mode (Parameter)	138
FHX50	42
Filter options (Parameter)	155
Filtering the event logbook	76
Firmware version (Parameter)	156
Format display (Parameter)	139
Free text (Parameter)	124
Full calibration (Parameter)	103

H

Hardware write protection	48
Header (Parameter)	142
Header text (Parameter)	143
Housing	
Design	14

I

Input mask	55
Intermediate height (Parameter)	125
Invert output signal (Parameter)	138

K

Keypad lock	
Disabling	50
Switch-on	50

L

Language (Parameter)	139
Last backup (Parameter)	146
Last check time (Parameter)	169
Level (Parameter)	103, 127, 128
Level (Submenu)	114
Level correction (Parameter)	117
Level linearized (Parameter)	124, 158
Level measurement configuration	62
Level signal (Parameter)	170
Level unit (Parameter)	116
Linearization (Submenu)	120, 121, 122
Linearization type (Parameter)	122
Local display	42
see Diagnostics message	
see In alarm condition	
Locking status (Parameter)	112
Logging interval (Parameter)	162

M

Maintenance	78
Manage device configuration	66
Mapping (Wizard)	108
Mapping end point (Parameter)	106, 108
Max. draining speed liquid (Parameter)	115
Max. filling speed liquid (Parameter)	115

Maximum value (Parameter)	125
Measured materials	11
Measured value symbols	53
Measured values (Submenu)	158
Medium group (Parameter)	101
Medium property (Parameter)	114
Medium type (Parameter)	114
Menu	
Diagnostics	152
Setup	100

N

Number format (Parameter)	143
---------------------------------	-----

O

Operating elements	
Diagnostics message	71
Operating module	51
Operating time (Parameter)	146, 153
Operating time from restart (Parameter)	153
Operational safety	12
Order code (Parameter)	157
Out status (Parameter)	161
Out status HEX (Parameter)	161
Out value (Parameter)	160
Output echo lost (Parameter)	129
Overvoltage protection	
General information	38

P

Prepare recording map (Parameter)	108
Present mapping (Parameter)	106
Previous diagnostics (Parameter)	152
Product safety	12
PROFIBUS ident number (Parameter)	157
PV filter time (Parameter)	110

R

Ramp at echo lost (Parameter)	130
Read access	45
Record map (Parameter)	107, 108
Registered trademarks	15
Remedial measures	
Calling up	72
Closing	72
Remote operation	43
Repair concept	79
Replacing a device	79
Requirements for personnel	11
Reset write protection (Parameter)	133
Result device check (Parameter)	169
Return	80

S

Safety instructions	
Basic	11
Safety Instructions (XA)	7
Safety settings (Submenu)	129
Separator (Parameter)	143
Serial number (Parameter)	156

- Setting the operating language 61
- Settings
 - Manage device configuration 66
 - Operating language 61
- Setup (Menu) 100
- Signal quality (Parameter) 104
- Simulation (Submenu) 166, 167
- Simulation device alarm (Parameter) 168
- Spare parts 80
 - Nameplate 80
- Start device check (Parameter) 169
- Status PROFIBUS Master Config (Parameter) 157
- Status signals 52, 70
- Störungsbehebung 68
- Submenu
 - Administration 149
 - Advanced setup 112
 - Analog input 1 to 6 110, 160
 - Configuration backup display 146
 - Data logging 162
 - Device check 169
 - Device information 156
 - Diagnostic list 154
 - Display 139
 - Display channel 1 to 4 164
 - Event list 155
 - Event logbook 155
 - Events list 75
 - Level 114
 - Linearization 120, 121, 122
 - Measured values 158
 - Safety settings 129
 - Simulation 166, 167
 - Switch output 134
- Switch output (Submenu) 134
- Switch output function (Parameter) 134
- Switch output simulation (Parameter) 167
- Switch status (Parameter) 138, 159, 168
- Switch-off delay (Parameter) 137
- Switch-off value (Parameter) 137
- Switch-on delay (Parameter) 137
- Switch-on value (Parameter) 135
- Symbols
 - For correction 55
 - In the text and numeric editor 55
- System components 85
- T**
 - Table mode (Parameter) 126
 - Table number (Parameter) 127
 - Tank type (Parameter) 101
 - Tank/silo height (Parameter) 117
 - Terminal voltage 1 (Parameter) 158
 - Timestamp (Parameter) 152, 153, 154
 - Transmitter
 - Turning the display module 34
 - Turning the housing 33
 - Transmitter housing
 - Turning 33
 - Tube diameter (Parameter) 101
 - Turning the display module 34
- U**
 - Unit after linearization (Parameter) 123
- V**
 - Value 1 display (Parameter) 141
 - Value echo lost (Parameter) 129
 - Value process variable (Parameter) 167
- W**
 - W@M Device Viewer 80
 - WHG confirmation (Wizard) 132
 - Wizard
 - Deactivate WHG 133
 - Define access code 151
 - Mapping 108
 - WHG confirmation 132
 - Workplace safety 12
 - Write access 45
 - Write protection
 - Via access code 46
 - Via write protection switch 48
 - Write protection switch 48



www.addresses.endress.com
