

Installation Instructions

UNI slip-on flange

DN 100/100 (4"), 80 mm antenna,

DN 150/150 (6"), 100 mm antenna,

DN 150/150 (6"), 80 mm antenna


Micropilot FMR20, FMR50, FMR56



1 Intended use

- A defective unit can only be replaced with a functioning unit of the same type.
- Use only original parts from Endress+Hauser.
- In the W@M Device Viewer, check if the spare part is suitable for the existing device.

 In some devices, an overview of spare parts is provided inside the device. If the spare part set is listed in the overview, it is not necessary to check the Device Viewer.

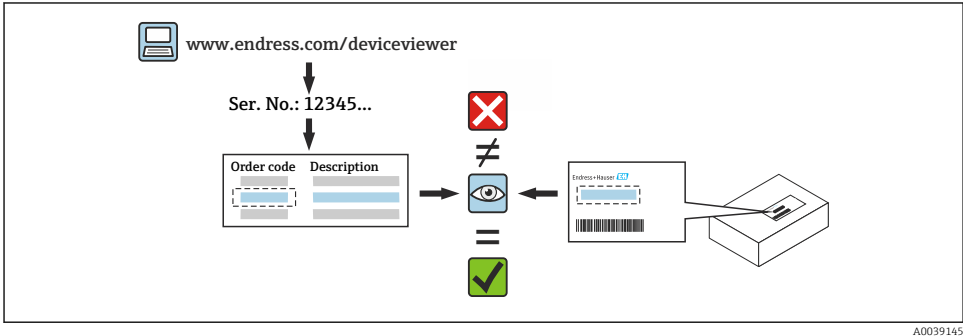

2 Personnel authorized to carry out repairs

Technical staff must comply with the following requirements for repair, mounting, electrical installation and commissioning of the devices:

- Be trained in instrument safety.
- Be familiar with the individual operating conditions of the devices.
- In the case of Ex-certified devices, they must also be trained in explosion protection.

 Technical staff carrying out work are responsible for ensuring that the work is carried out safely and to the required quality standard. They must also guarantee the safety of the device following repair.

3 Safety instructions

- Observe the Operating Instructions for the device.
- Comply with national regulations governing mounting, electrical installation, commissioning, maintenance and repair procedures.
- For devices intended for use in hazardous locations, please observe the instructions in the Ex documentation (XA).
- In the case of devices in safety-related applications in accordance with IEC 61508 or IEC 61511: Commission in accordance with Operating Instructions after repair.
- Before removing the device: set the process to a safe state and purge the pipe of dangerous process substances.

- Risk of burns from hot surfaces! Before commencing work: allow the system and device to cool down to a touchable temperature.
- Risk of damaging electronic components! Ensure that the working environment is protected against electrostatic discharge.
- Modifications to the device are not permitted.
- Observe the instructions for transporting and returning the device outlined in the Operating Instructions.



For information on service and spare parts, contact your Endress+Hauser sales center.

4 Tool list



5 Removal

5.1 Information on the UNI slip-on flange


DN 100/100 (4"), 80 mm antenna: Micropilot FMR20, FMR50, FMR56

DN 150/150 (6"), 100 mm antenna: Micropilot FMR50, FMR56


DN 150/150 (6"), 80 mm antenna: Micropilot FMR20, FMR50, FMR56

5.2 Removing the UNI slip-on flange with adapter ring


Removal is the same for all devices. In this example: Micropilot FMR20.

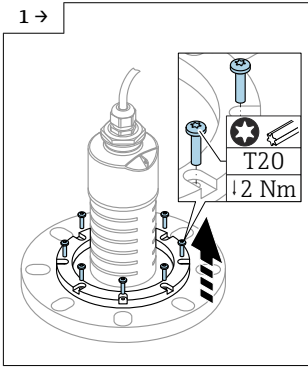

A0059525

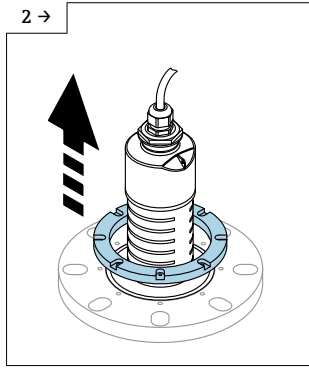


A0059526

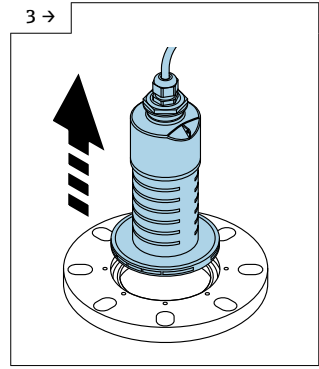

A0059926

- Pay attention to the tightening torque during installation.

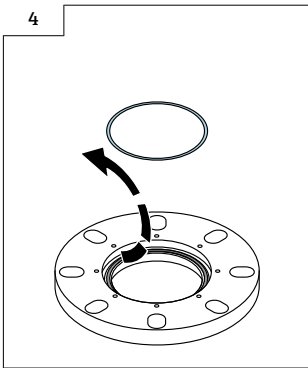

A0059527

6 Installation


6.1 General installation instructions

Installation is performed by following the removal procedure in reverse order.

6.2 Special installation instructions

6.2.1 UNI slip-on flange with adapter ring

Pay attention to the alignment of the flange!

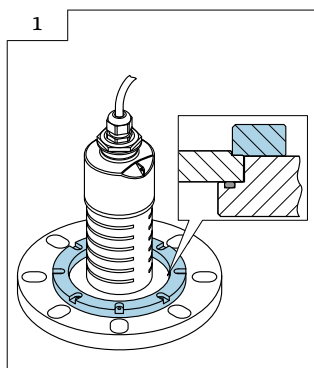

A0060274

► In this example: FMR20



71723670

www.addresses.endress.com
