

Safety Instructions

Micropilot FMR43

ATEX, IECEx: Ex ia IIC T4 Ga
Ex ic IIC T4 Gc




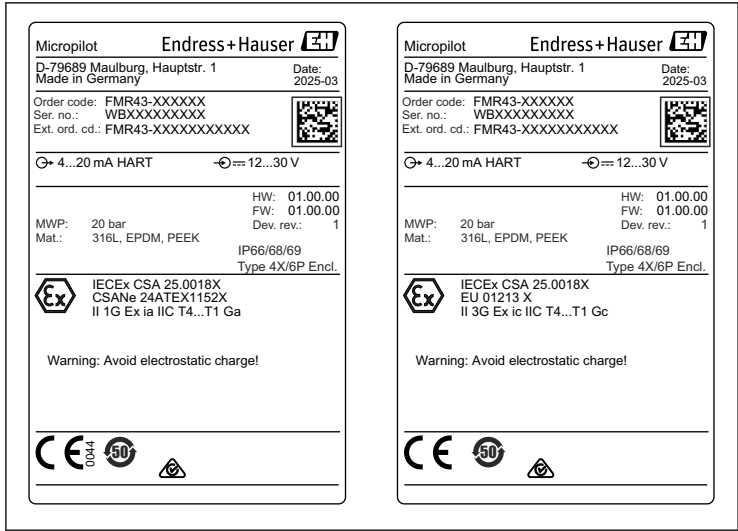
Micropilot FMR43

Table of contents

About this document	4
Associated documentation	4
Supplementary documentation	4
Certificates and declarations	4
Manufacturer address	5
Other standards	5
Extended order code	5
Safety instructions: General	8
Safety instructions: Specific conditions of use	8
Safety instructions: Installation	9
Temperature tables	10
Connection data	11

About this document

 The document number of these Safety Instructions (XA) must match the information on the nameplate.



A0058167

Associated documentation

All documentation is available on the Internet:
www.endress.com/Deviceviewer
 (enter the serial number from the nameplate).

 If not yet available, a translation into EU languages can be ordered.

To commission the device, please observe the Operating Instructions pertaining to the device:
 BA02310F

Supplementary documentation

Explosion protection brochure: CP00021Z
 The explosion protection brochure is available on the Internet:
www.endress.com/Downloads

Certificates and declarations

EU Declaration of Conformity

Declaration Number:

- Ex ia: EU_01214
- Ex ic: EU_01213

The EU Declaration of Conformity is available on the Internet:
www.endress.com/Downloads

EU type-examination certificate

Certificate number:

- Ex ia: CSANe 24ATEX1152X
- Ex ic: EU 01213 X

List of applied standards: See EU Declaration of Conformity.

IEC Declaration of Conformity

Certificate number:

IECEX CSA 25.0018X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- IEC 60079-0 : 2017
- IEC 60079-11 : 2023

Manufacturer address

Endress+Hauser SE+Co. KG
Hauptstraße 1
79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

Other standards

Among other things, the following standards shall be observed in their current version for proper installation:

- IEC/EN 60079-14: "Explosive atmospheres - Part 14: Electrical installations design, selection and erection"
- EN 1127-1: "Explosive atmospheres - Explosion prevention and protection - Part 1: Basic concepts and methodology"

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

FMR43	-	*****	+	A*B*C*D*E*F*G*..
<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available.

The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Micropilot



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type

FMR43

Basic specifications

Position 1, 2 (Approval)		
Selected option		Description
FMR43	BA	ATEX II 1 G Ex ia IIC T4...T1 Ga IECEX Ex ia IIC T4...T1 Ga
	BU	ATEX II 3 G Ex ic IIC T4...T1 Gc IECEX Ex ic IIC T4...T1 Gc

Position 3, 4 (Output)		
Selected option		Description
FMR43	BA	2-wire, 4-20 mA HART

Position 10-12 (Process Connection)		
Selected option		Description
FMR43	VGJ	MNPT1/2, 316L, flush mount
	VHJ	MNPT3/4, 316L, flush mount
	VLJ	MNPT1-1/2, 316L, flush mount
	WJJ	G1/2, 316L, flush mount
	WKJ	G3/4, 316L, flush mount
	WLJ	G1, 316L, flush mount
	WNJ	G1-1/2, 316L, flush mount
	X2J	M24, 316L, install > accessory, process adapter
	3CK	Tri-Clamp ISO2852 DN38 (1-1/2"), PTFE>316L, NA-CONNECT compatible
	3EK	Tri-Clamp ISO2852 DN51 (2"), PTFE>316L, NA-CONNECT compatible
	5DK	NEUMO BioControl D50 PN16, PEEK>316L
	9YY (VJJ)	MNPT1, 316L, flush mount
	(3FK)	Tri-Clamp ISO2852 DN76.1 (3"), PTFE>316L, NA-CONNECT compatible
	(3HK)	Tri-Clamp ISO2852 DN101.6 (4"), PTFE>316L, NA-CONNECT compatible
	(5AK)	NEUMO BioControl D25 PN16, PEEK>316L
	(5FK)	NEUMO BioControl D80 PN16, PEEK>316L

Optional specifications

No options specific to hazardous locations are available.

**Safety
instructions:
General**

- The device is intended to be used in explosive atmospheres as defined in the scope of IEC 60079-0 or equivalent national standards. If no potentially explosive atmospheres are present or if additional protective measures have been taken: The device may be operated according to the manufacturer's specifications.
- Comply with the installation and safety instructions in the Operating Instructions.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Avoid electrostatic charging:
 - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ...)
 - Of isolated capacities (e.g. isolated metallic plates)
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.

**Safety
instructions:
Specific
conditions of use**

- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
 - Observe the danger of electrostatic charging and discharge.
 - Do not install in the vicinity of processes (≤ 0.5 m) generating strong electrostatic charges.
- Avoid sparks caused by impact and friction.
- In the case of process connections made of polymeric material or with polymeric coatings, avoid electrostatic charging of the plastic surfaces.
- The process connection of the device must be installed in such a way that guarantees a sufficiently tight joint (IP66/67).

- It is essential for the device to use a power supply that is galvanically isolated from earth.
- When using an intrinsically safe barrier, the barrier must be connected to the same earth as the device.
- Refer to the temperature tables for various ambient and process temperature ranges.

Electrostatics


Basic specification, Position 10-12 = 3CK, 5AK

- When used in gas applications, the sensor must be used in conjunction with a metallic frame provided by the user. This can be a metal tank wall, a metal nozzle or a pipe.
- If there is no risk of dangerous electrostatic charging of the plastic surfaces, the sensor can be used without restrictions.

Basic specification, Position 10-12 = 3EK, 3FK, 3HK, 5DK, 5FK

- The sensor must not be used in applications with explosive gases.
- If there is no risk of dangerous electrostatic charging of the plastic surfaces, the sensor can be used without restrictions.

Safety instructions: Installation

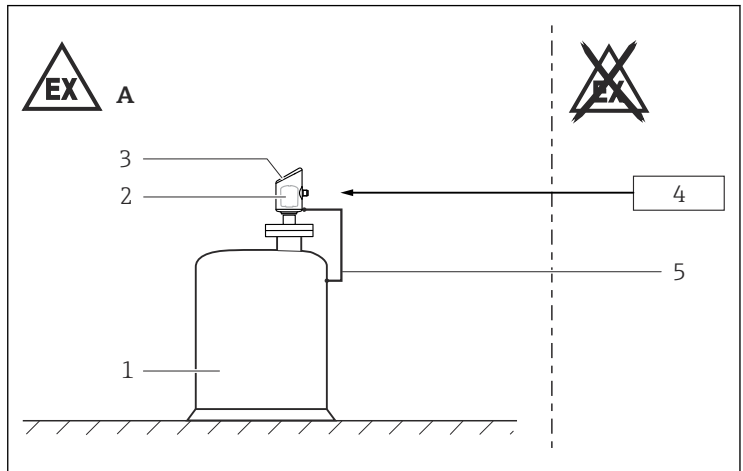

A0058127

- A *Basic specification, Position 1, 2 = BA: Zone 0*
Basic specification, Position 1, 2 = BU: Zone 2
- 1 *Tank;*
Basic specification, Position 1, 2 = BA: Zone 0
Basic specification, Position 1, 2 = BU: Zone 2
- 2 *Electronic insert*
- 3 *Enclosure*
- 4 *Associated intrinsically safe power supply units*
- 5 *Local earthing*

- Continuous service temperature of the connecting cable: $\geq T_a + 20 \text{ K}$.
- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.
- Observe the maximum process conditions according to the manufacturer's Operating Instructions.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.
- Perform the following to achieve the degree of protection IP66/68:
 - Select a suitable cable / connector.
 - Mount the cable / connector correctly.
- Supplied cables / connectors comply with the requirements of the type of protection marked on the nameplate.

Intrinsic safety

The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least $500 V_{\text{rms}}$.

Potential equalization

- Integrate the device into the local potential equalization.
- If not earthed directly via the process connection, provide separate earthing.

Temperature tables



- The specified ambient and process temperature ranges exclusively refer to the explosion protection and must not be exceeded. Operationally permitted ambient temperature ranges can be restricted depending on the version: See Operating Instructions.
- Do not exceed the max. ambient temperature at the enclosure.

Description notes




Unless otherwise indicated, the positions always refer to the basic specification.

1st column: Temperature classes T4 (135 °C) to T1 (450 °C)

Column P1 to P5: Position (temperature value) on the axes of the derating

- T_a : Ambient temperature in °C
- T_p : Process temperature in °C

Example diagrams of possible deratings

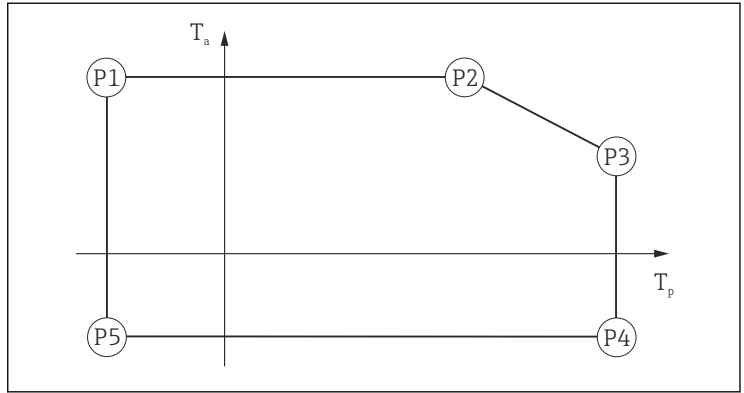

A0033052

Basic specification, Position 10-12 = VGJ, WJJ, X2J, 3xK, 5DK, 5FK

	P1		P2		P3		P4		P5	
	T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a
T4	-40	70	70	70	135	47	135	-40	-40	-40
T3...T1	-40	70	70	70	150	40	150	-40	-40	-40

Basic specification, Position 10-12 = VHJ, VJJ, VLJ, WKJ, WLJ, WNJ, 5AK

	P1		P2		P3		P4		P5	
	T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a
T4...T1	-40	70	70	70	130	40	130	-40	-40	-40

Connection data

Entity parameter
U _i ≤ 30 V _{DC}
I _i ≤ 100 mA
P _i ≤ 700 mW
C _i = 15 nF
L _i = 0.69 mH



71676170

www.addresses.endress.com
