

Operating Instructions

Data manager

ORSG35

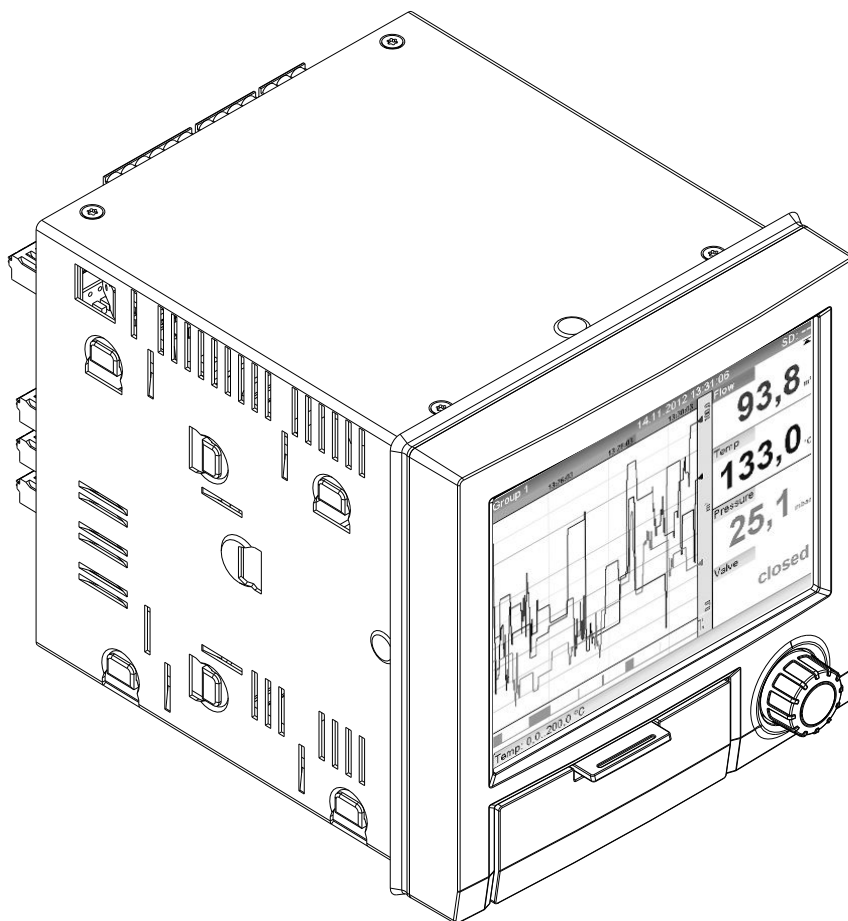


Table of contents

1	About this document	4		
1.1	Document function	4		
1.2	Symbols	4		
1.2.1	Safety symbols	4		
1.2.2	Electrical symbols	4		
1.2.3	Symbols for certain types of information	4		
1.2.4	Symbols in graphics	5		
1.3	Supplementary documentation	5		
1.4	Change history	6		
1.5	Registered trademarks	6		
2	Basic safety instructions	6		
2.1	Requirements for the personnel	7		
2.2	Intended use	7		
2.2.1	Product liability	7		
2.3	Workplace safety	7		
2.4	Operational safety	7		
2.5	Product safety	8		
2.6	Safety information for desktop version (option)	8		
2.7	IT security	8		
3	Product description	8		
3.1	Product design	8		
4	Incoming acceptance and product identification	8		
4.1	Incoming acceptance	8		
4.1.1	Scope of delivery	9		
4.2	Product identification	9		
4.2.1	Nameplate	9		
4.2.2	Name and address of manufacturer	9		
4.3	Storage and transport	10		
5	Installation	10		
5.1	Installation requirements	10		
5.1.1	Installation dimensions	10		
5.2	Installing the measuring instrument	10		
5.3	Post-installation check	11		
6	Electrical connection	12		
6.1	Connecting requirements	12		
6.2	Special connection instructions	12		
6.2.1	Cable specifications	12		
6.3	Connecting the device	13		
6.3.1	Terminal assignment on the rear of the device	13		
6.3.2	Supply voltage	14		
6.3.3	Relays	14		
6.3.4	Digital inputs, auxiliary voltage output	14		
6.3.5	Analog inputs	15		
6.3.6	Connection example: Auxiliary voltage output as transmitter power supply for 2-wire sensors	16		
6.3.7	Connection example: Auxiliary voltage output as transmitter power supply for 4-wire sensors	17		
6.3.8	Option: RS232/RS485 interface (rear of device)	17		
6.3.9	Ethernet connection (rear of device)	18		
6.3.10	Option: Ethernet Modbus TCP slave	19		
6.3.11	Option: Modbus RTU slave	19		
6.3.12	Connections at front of device	19		
6.4	Post-connection check	20		
7	Operating options	21		
7.1	Overview of operating options	21		
7.2	Structure and function of the operating menu	21		
7.2.1	Operating menu for operators and maintenance personnel	22		
7.2.2	Operating menu for experts	23		
7.2.3	Submenus and users	23		
7.3	Measured value display and operating elements	25		
7.4	Display representation of symbols used in operation	26		
7.4.1	Symbols in operating menus	27		
7.4.2	Symbols in the event logbook	27		
7.5	Entering text and numbers (virtual keyboard)	27		
7.6	Channel color assignment	28		
7.7	Access to operating menu via local display	28		
7.8	Device access via operating tools	28		
7.8.1	Analysis software (SQL database support)	28		
7.8.2	Web server	29		
7.8.3	OPC server (optional)	29		
8	System integration	29		
8.1	Integrating the measuring instrument into the system	29		
8.1.1	General information	29		
8.1.2	Ethernet	29		
8.1.3	Web server with "Ethernet over USB" function	30		
8.1.4	Modbus RTU/TCP slave	31		
9	Commissioning	32		
9.1	Function check	32		
9.2	Switching on the measuring instrument	32		
9.3	Configuring the operating language	32		

9.4	Configuring the measuring instrument (Setup menu)	32	10.16	WebDAV client	54
9.4.1	Step-by-step: to the first measured value	33	10.16.1	Access to the WebDAV server via HTTP (HTML)	54
9.4.2	Step-by-step: setting or deleting the limit values	33	11	Diagnostics and troubleshooting . . .	54
9.4.3	Device setup	33	11.1	General troubleshooting	55
9.4.4	Setup via SD card or USB stick	34	11.2	Troubleshooting	55
9.4.5	Setup via web server	34	11.2.1	Device error/alarm relay	55
9.5	Advanced settings (Expert menu)	35	11.3	Diagnostic information on the local display . . .	55
9.6	Configuration management	36	11.4	Pending, current diagnostic messages	60
9.7	Simulation	36	11.5	Diagnostic list	60
9.8	Access protection and security concept	37	11.6	Event logbook	60
9.9	HTTPS web server setup	38	11.7	Device information	60
10	Operation	39	11.8	Diagnostics of measured values	60
10.1	Displaying and modifying current Ethernet settings	39	11.9	Diagnostics of outputs	60
10.2	Reading off the device locking status	39	11.10	Simulation	60
10.3	Reading off measured values (display devices)	40	11.10.1	E-mail test	61
10.4	Web server	40	11.10.2	Testing the WebDAV client	61
10.4.1	Access to the web server via HTTP (HTML)	41	11.10.3	Testing time synchronization/SNTP . .	61
10.4.2	Access to the web server via XML . . .	41	11.10.4	Relay test	61
10.4.3	Setup, operation and service via the web server	42	11.11	Initializing the modem	61
10.4.4	Remote control via the web server . .	46	11.12	Resetting the measuring instrument	61
10.5	Data analysis and visualization using analysis software	46	11.13	Clear memory	62
10.5.1	Structure/layout of a CSV file	47	11.14	Reset analysis	62
10.5.2	Importing UTF-8-encoded CSV files into spreadsheets	48	11.15	Updating the device software ("firmware") . . .	62
10.6	Changing group	48	12	Maintenance	62
10.7	Locking operation	48	12.1	Cleaning	62
10.8	Logging in/logging out	48	12.1.1	Cleaning of surfaces not in contact with the medium	62
10.9	SD card/USB stick	48	13	Repair	63
10.9.1	Operating principle of SD card and USB stick	48	13.1	General notes	63
10.9.2	Functions relating to the SD card or USB stick	49	13.2	Spare parts	63
10.9.3	Notes on e-mail encryption	50	13.3	Return	63
10.9.4	Notes on WebDAV encryption	50	13.4	Disposal	63
10.9.5	SSL certificates	51	13.4.1	IT security	63
10.10	Show data logging	52	13.4.2	Removing the measuring instrument	63
10.10.1	Historical data: Change group	52	13.4.3	Disposing of the measuring instrument	63
10.10.2	Historical data: scroll speed	52	14	Accessories	63
10.10.3	Historical data: Time scaling	52	14.1	Device-specific accessories	64
10.10.4	Historical data: Time range displayed	52	14.2	Instructions for enabling a software option . .	65
10.10.5	Historical data: Screenshot	53	15	Appendix	66
10.10.6	Historical data: Change the display mode	53	15.1	Operating items in the "Expert" menu	66
10.11	Signal analysis	53	15.1.1	"System" submenu	66
10.12	Search in trace	53	15.1.2	"Inputs" submenu	85
10.13	Changing the display mode	53	15.1.3	"Outputs" submenu	108
10.14	Adjusting the brightness of the display	54	15.1.4	"Communication" submenu	109
10.15	Limit values	54	15.1.5	"Application" submenu	124
			15.1.6	"Diagnostics" submenu	154

1 About this document

1.1 Document function

These Operating Instructions contain all the information required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to installation, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.

1.2 Symbols

1.2.1 Safety symbols

DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

WARNING

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

CAUTION

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol alerts you to a potentially harmful situation. Failure to avoid this situation can result in damage to the product or something in its vicinity.

1.2.2 Electrical symbols

Symbol	Meaning
	Direct current
	Alternating current
	Direct current and alternating current
	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective earth (PE) Ground terminals that must be connected to ground prior to establishing any other connections. The ground terminals are located on the interior and exterior of the device: ■ Interior ground terminal: protective earth is connected to the mains supply. ■ Exterior ground terminal: device is connected to the plant grounding system.

1.2.3 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.

Symbol	Meaning
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Notice or individual step to be observed
	Series of steps
	Result of a step
	Help in the event of a problem
	Visual inspection

1.2.4 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3,...	Item numbers		Series of steps
A, B, C, ...	Views	A-A, B-B, C-C, ...	Sections
	Hazardous area		Safe area (non-hazardous area)

1.3 Supplementary documentation

The following document types are available depending on the product configuration:

Document type	Purpose and content of the document
Brief Operating Instructions (KA)	Guide that takes you quickly to the 1st measured value The Operating Instructions contain all the essential information about the product from incoming acceptance to initial commissioning.
Operating Instructions (BA)	Reference The Operating Instructions contain the information that is required in the various phases of the life cycle of the product: From product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.
Description of Device Parameters (GP)	Reference for parameters The document contains detailed explanations of readable or configurable parameters in the product. The description is aimed at those who work with the product over its entire life cycle and perform specific configurations.
Safety Instructions (XA)	Safety Instructions for electrical equipment in hazardous areas are supplied with the product depending on the approval. They are an integral part of the Operating Instructions.  The nameplate indicates the Safety Instructions (XA) that are relevant to the product.
Supplementary device-dependent documentation (SD/FY)	Always comply strictly with the instructions in the relevant supplementary documentation. The supplementary documentation is an integral part of the product documentation.

1.4 Change history

Device software Version/date	Software changes	Analysis software version	Version of OPC server	Operating Instructions
V01.00.00/07.2013	Original software	V01.01.02.10 and higher	V5.00.02.04 and higher	BA012090/01.13
V01.01.00/02.2014	E-mail via SSL; extended functionality	V01.02.00.08 and higher	V5.00.02.04 and higher	BA012090/02.14
V02.00.00/08.2015	Extended functionality	V01.03.00.00 and higher	V5.00.03.00 and higher	BA012090/03.15
V02.01.00/04.2016	Extended functionality/bug fixes	V01.03.01.00 and higher	V5.00.03.00 and higher	BA012090/04.16
V02.01.05/11.2016	Extended functionality/bug fixes	V01.03.01.01 and higher	V5.00.03.00 and higher	BA012090/05.16
V02.02.00/11.2017	Ethernet function via USB	V01.04.00 and higher	V5.00.04.00 and higher	BA012090/06.17
V02.04.00/09.2018	Web server extension	V01.04.02 and higher	V5.00.04.01 and higher	BA012090/07.18
V02.04.05/08.2021	Support for HTTPS server; bug fixes	V01.04.02 and higher	V5.00.04.01 and higher	BA012090/08.21
V02.04.09/05.2025	Bug fixes	V01.04.02 and higher	V5.00.04.01 and higher	BA012090/07.25

1.5 Registered trademarks

Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

Microsoft®

Registered trademark of Microsoft Corporation, Redmond, Washington, USA

Google Chrome™ browser

Registered trademark of Google LLC in Mountain View, California, USA

Internet Explorer®

Registered trademark of Microsoft Corporation

Microsoft Edge™

Registered trademark of Microsoft Corporation

Excel™

Registered trademark of Microsoft Corporation

Mozilla Firefox®

Registered trademark of the Mozilla Foundation

Opera®

Registered trademark of Opera Software ASA.

2 Basic safety instructions

The reliable and safe operation of the device is only ensured if the user reads these Operating Instructions and complies with the safety instructions they contain.

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Intended use

 The device is designed for installation in a panel and must only be operated in an installed state.

The device is intended for the electronic capture, display, recording, analysis, remote transmission and archiving of analog and digital input signals in non-hazardous areas.

2.2.1 Product liability

The manufacturer does not accept any responsibility for damage that results from non-designated use and from failure to comply with the instructions in this manual.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

2.4 Operational safety

Damage to the device!

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for the interference-free operation of the device.

Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers!

- ▶ If modifications are nevertheless required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability:

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to the repair of an electrical device.
- ▶ Use only original spare parts and accessories.

2.5 Product safety

This state-of-the-art device is designed and tested in accordance with good engineering practice to meet operational safety standards. It left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU declaration of conformity. The manufacturer confirms this by affixing the CE mark.

2.6 Safety information for desktop version (option)

- The mains plug should only be inserted into a socket with a ground contact.
- The protective effect may not be suspended by an extension cable without a protective ground.
- Relay outputs: $U(\text{max}) = 30 V_{\text{eff}}(\text{AC})/60 V(\text{DC})$

2.7 IT security

The manufacturer only provides a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

3 Product description

3.1 Product design

This device is best suited for the electronic acquisition, display, recording, analysis, remote transmission and archiving of analog and digital input signals.

The device is intended for installation in a panel or cabinet. Operation in a desktop or field housing is possible as an option.

4 Incoming acceptance and product identification

4.1 Incoming acceptance

On receipt of the delivery:

1. Check the packaging for damage.
 - ↳ Report all damage immediately to the manufacturer.
Do not install damaged components.
2. Check the scope of delivery using the delivery note.
3. Compare the data on the nameplate with the order specifications on the delivery note.

4. Check the technical documentation and all other necessary documents, e.g. certificates, to ensure they are complete.



If one of the conditions is not satisfied, contact the manufacturer.

4.1.1 Scope of delivery

The scope of delivery of the device comprises:

- Device (with terminals, according to order)
- Panel-mounted device: 2 screw fastening clips
- USB cable
- Optional: industrial grade SD card (card is located in the SD slot behind the flap on the front of the device)
- Analysis software (Essential, Demo or Professional version, depending on order)
- Delivery note
- Multilingual Brief Operating Instructions as hard copy

4.2 Product identification

The device can be identified in the following ways:

- Nameplate specifications
- Extended order code with breakdown of the device features on the delivery note

4.2.1 Nameplate

Do you have the correct device?

The nameplate provides you with the following information on the device:

- Manufacturer identification, device designation
- Order code
- Extended order code
- Serial number
- Tag name (TAG) (optional)
- Technical values such as supply voltage, current consumption, ambient temperature, communication-specific data (optional)
- Degree of protection
- Approvals with symbols
- Reference to Safety Instructions (XA) (optional)

- Compare the information on the nameplate with the order.

4.2.2 Name and address of manufacturer

Name of manufacturer:	Endress+Hauser Wetzer GmbH + Co. KG
Address of manufacturer:	Obere Wank 1, D-87484 Nesselwang or www.endress.com

4.3 Storage and transport

Note the following points:

The permitted storage temperature is -20 to $+60$ °C (-4 to $+140$ °F)

 Pack the device for storage and transportation in such a way that it is reliably protected against impact and external influences. The original packaging offers the best protection.

Avoid the following environmental influences during storage:

- Direct sunlight
- Proximity to hot objects
- Mechanical vibration
- Aggressive media

5 Installation

5.1 Installation requirements

NOTICE

Overheating due to buildup of heat in the device

- Always ensure adequate cooling of the device to prevent heat accumulation.

The device is designed for use in a panel in non-hazardous areas.


- Ambient temperature range: -10 to $+50$ °C (14 to 122 °F)
- Climate class as per IEC 60654-1: Class B2
- Degree of protection at front: IP65 (NEMA Type 4x encl.)
- Degree of protection at rear: IP20

5.1.1 Installation dimensions

- Installation depth: approx. 158 mm (6.22 in) for device incl. terminals and fastening clips
- Panel cutout: 138 to 139 mm (5.43 to 5.47 in) x 138 to 139 mm (5.43 to 5.47 in)
- Panel thickness: 2 to 40 mm (0.08 to 1.58 in)
- Angle of vision: from the midpoint axis of the display, 75° to the left and right, 65° above and below
- A minimum distance of 15 mm (0.59 in) between the devices must be observed if aligning the devices in the Y direction (vertically above one another). A minimum distance of 10 mm (0.39 in) between the devices must be observed if aligning the devices in the X direction (horizontally beside one another).
- Securing to DIN 43 834

5.2 Installing the measuring instrument

 Mounting tool: A screwdriver is required for installation in the panel.

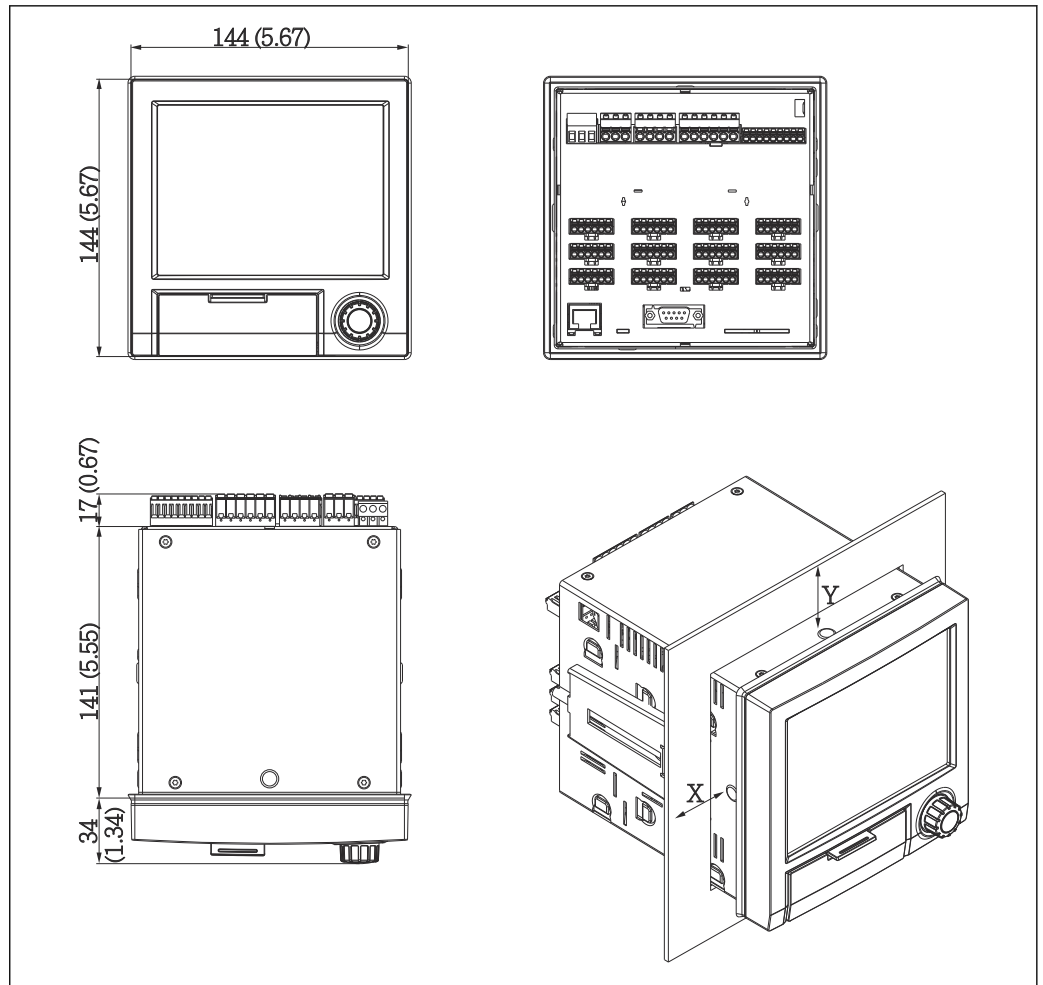

A0019301

1 Panel mounting and dimensions in mm (inch)

1. Push the device through the panel cutout from the front. To avoid heat buildup, maintain a distance of > 15 mm (>0.59 in) from walls and other devices.
2. Hold the device level and hook the fastening clips into the openings (1 x left, 1 x right).
3. Evenly tighten the screws on the fastening clip using a screwdriver to guarantee a secure seal to the panel (torque 100 Ncm).

5.3 Post-installation check

- Is the sealing ring undamaged?
- Does the seal run all around the housing collar?
- Are the threaded rods properly tightened?
- Is the device fixed firmly in the center of the panel cutout?

6 Electrical connection

6.1 Connecting requirements

WARNING

Danger! Electric voltage

- ▶ The entire connection of the device must take place while the device is de-energized.
- ▶ The mixed connection of safety extra-low voltage and dangerous contact voltage at the relays is **not** permitted.
- ▶ Apart from the relays and the supply voltage, only energy-limited circuits according to IEC/EN 61010-1 may be connected.

Danger if protective ground is disconnected

- ▶ The protective ground connection must be established before all other connections.

NOTICE

Cable heat load

- ▶ Use suitable cables for temperatures that are 5 °C (9 °F) above the ambient temperature.

Incorrect supply voltage can damage the device or cause malfunctions

- ▶ Before commissioning the device, make sure that the supply voltage matches the voltage specifications on the nameplate.

Check emergency shutdown for device

- ▶ Provide suitable switch or circuit breaker in building installation. This switch must be provided close to the device and marked as a circuit breaker.

Protect the device from overload

- ▶ An overload protection unit (rated current = 10 A) is required for the power cable.

Incorrect wiring may result in the device being destroyed

- ▶ Note terminal designation on the rear of the device.

Energy-rich transients in the case of long signal cables

- ▶ Connect a suitable overvoltage protection system in series upstream.

6.2 Special connection instructions

6.2.1 Cable specifications

Cable specification, spring terminals

All connections on the rear of the device are designed as pluggable screw or spring terminal blocks with reverse polarity protection. The spring terminals are unlocked with a slotted screwdriver (size 0).

Note the following when connecting:

- Wire cross-section, auxiliary voltage output, digital I/O and analog I/O: max. 1.5 mm² (14 AWG) (spring terminals)
- Wire cross-section, mains: max. 2.5 mm² (13 AWG) (screw terminals)
- Wire cross-section, relays: max. 2.5 mm² (13 AWG) (spring terminals)
- Stripping length: 10 mm (0.39 in)



No ferrules must be used when connecting flexible wires to spring terminals.

Shielding and grounding

Optimum electromagnetic compatibility (EMC) can only be guaranteed if the system components and the cables - both sensor and communication cables - are shielded and the shielding forms as complete a cover as possible. A shielded cable must be used for sensor cables that are longer than 30 m (100 ft). A shield coverage of 90% is ideal. Make sure that the communication cables and sensor cables do not cross when routing them. Connect the shielding as often as possible to the reference ground to ensure optimum EMC protection for the different communication protocols and the connected sensors.

To comply with requirements, three different types of shielding are possible:

- Shielding at both ends
- Shielding at one end on the supply side with capacitance termination at the device
- Shielding at one end on the feed side


The best results are achieved in installations with shielding at one end on the supply side (without capacitance termination at the device). Appropriate internal device wiring measures must be taken to allow unrestricted operation when EMC interference is present. These measures have been taken into account for this device. Operation in the event of disturbance variables as per NAMUR NE21 is thus guaranteed.

Observe national installation requirements and guidelines during installation. Where there are large differences in potential between the individual grounding points, only one point of the shielding is connected directly with the reference ground.

 If the shielding of the cable is grounded at more than one point in systems without potential matching, mains frequency equalizing currents can occur. These can damage the signal cable and significantly impact signal transmission. In such cases, the shield of the signal cable should be grounded on one side only and must not be connected to the ground terminal of the housing. The unconnected shield must be insulated.

6.3 Connecting the device


6.3.1 Terminal assignment on the rear of the device

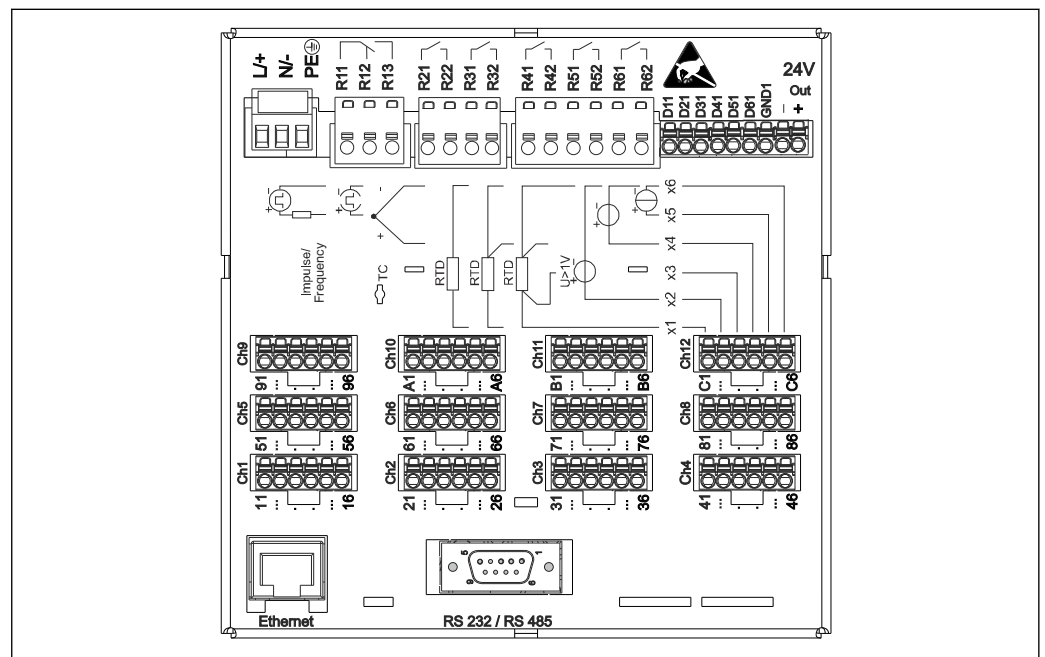


 2 Terminals on the rear of the device

A0019304

6.3.2 Supply voltage

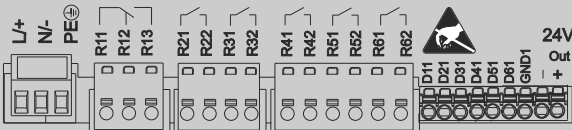
Power unit type	Terminal		
	 A0019103		
100 to 230 V _{AC}	L+	N-	PE
	Phase L	Zero conductor N	Ground
24 V AC/DC	L+	N-	PE
	Phase L or +	Zero conductor N or -	Ground

6.3.3 Relays

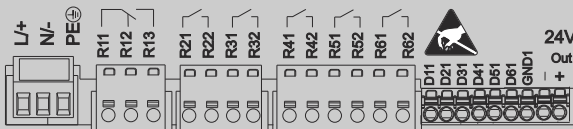Type	Terminal (max. 250 V, 3 A)				
	 A0019103				
Alarm relay 1	R11	R12	R13		
	Change-over contact	Normally closed contact (NC) ¹⁾	Normally open contact (NO) ²⁾		
Relays 2 to 6				Rx1	Rx2
				Switching contact	Normally open contact (NO ²⁾)


1) NC = normally closed (breaker)
2) NO = normally open (maker)

6.3.4 Digital inputs, auxiliary voltage output

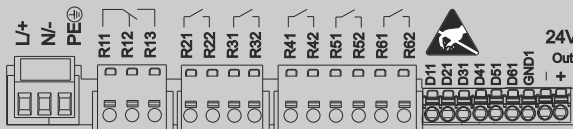Type	Terminal			
	 A0019103			
Digital inputs 1 to 6	D11 to D61	GND1		
	Digital input 1 to 6 (+)	Ground (-) for digital inputs 1 to 6		
Auxiliary voltage output, not stabilized, max. 250 mA			24 V Out -	24 V Out +
			- Ground	+ 24 V (±15%)


6.3.5 Analog inputs

 The first digit (x) of the two-digit terminal number corresponds to the associated channel:

Type	Terminal					
	Chx  A0019303					
	x1	x2	x3	x4	x5	x6
Current/pulse/frequency input ¹⁾					(+)	(-)
Voltage > 1 V		(+)				(-)
Voltage ≤ 1 V				(+)		(-)
Resistance thermometer RTD (2-wire)	(A)					(B)
Resistance thermometer RTD (3-wire)	(A)			b (sense)		(B)
Resistance thermometer RTD (4-wire)	(A)		a (sense)	b (sense)		(B)
Thermocouples TC				(+)		(-)

1) If a universal input is used as a frequency or pulse input and the voltage is > 2.5 V, a series resistor must be used in series connection with the voltage source. Example: 1.2 kΩ series resistor at 24 V


6.3.6 Connection example: Auxiliary voltage output as transmitter power supply for 2-wire sensors

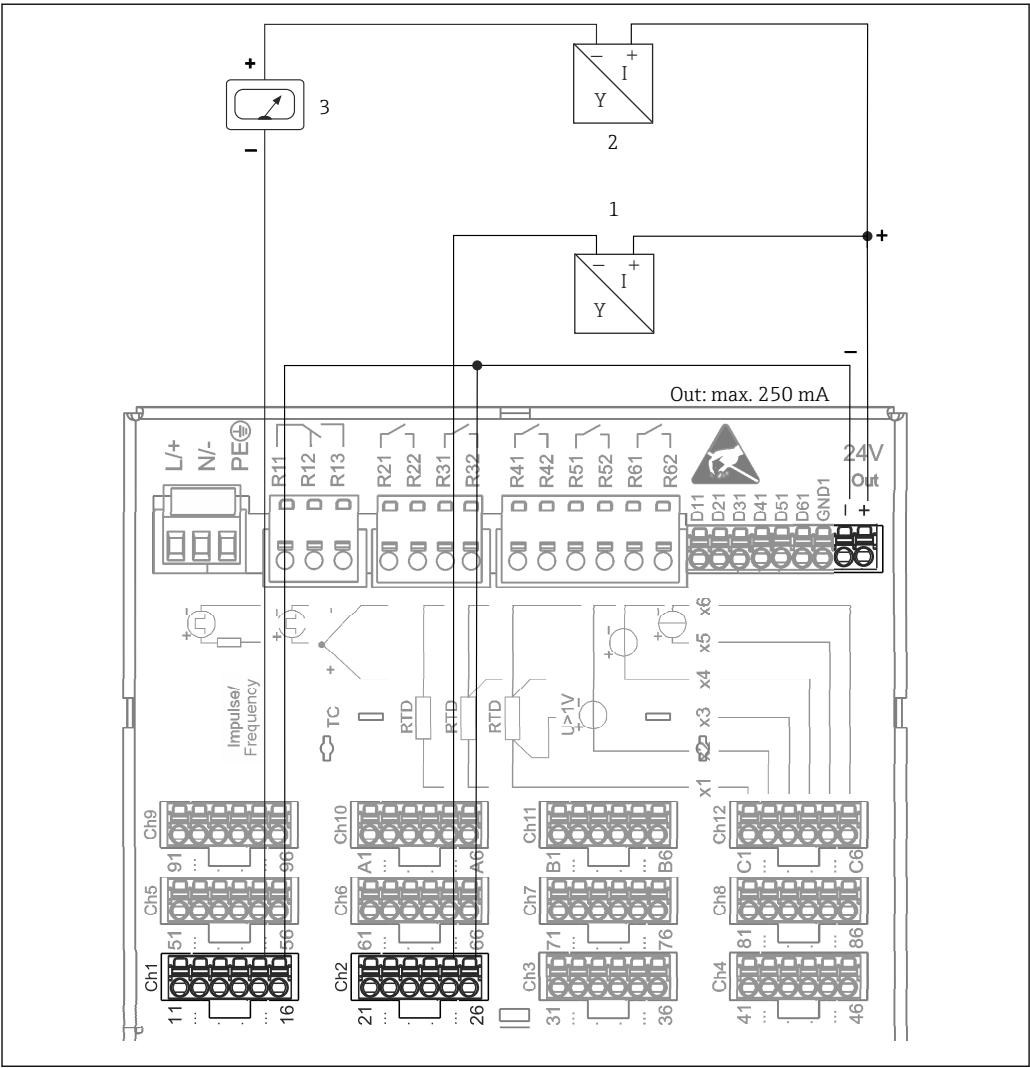

3 Connection of the auxiliary voltage output when using as a transmitter power supply for 2-wire sensors in the current measuring range. (When connecting channel CH3-12, see pin assignment CH1-2.)

- 1 Sensor 1
- 2 Sensor 2
- 3 External indicator (optional)

6.3.7 Connection example: Auxiliary voltage output as transmitter power supply for 4-wire sensors

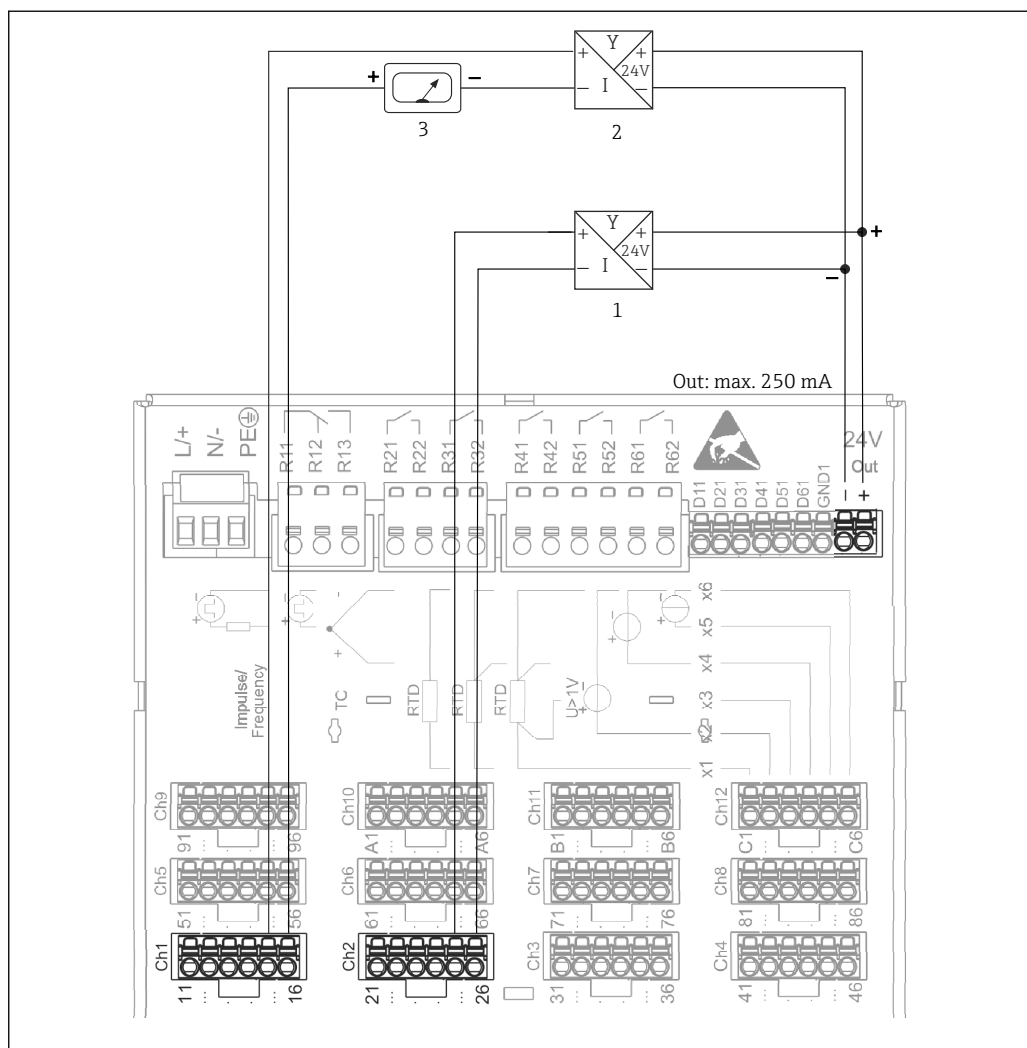


4 Connection of the auxiliary voltage output when using as a transmitter power supply for 4-wire sensors in the current measuring range. (When connecting channel CH3-12, see pin assignment CH1-2.)

- 1 Sensor 1
- 2 Sensor 2
- 3 External indicator (optional)

6.3.8 Option: RS232/RS485 interface (rear of device)

i Use shielded signal cables for serial interfaces.

A combined RS232/RS485 connection is available on a shielded SUB D9 socket at the rear of the device. This can be used for data transfer and to connect a modem. For communication via modem, we recommend an industrial modem with a watchdog function.

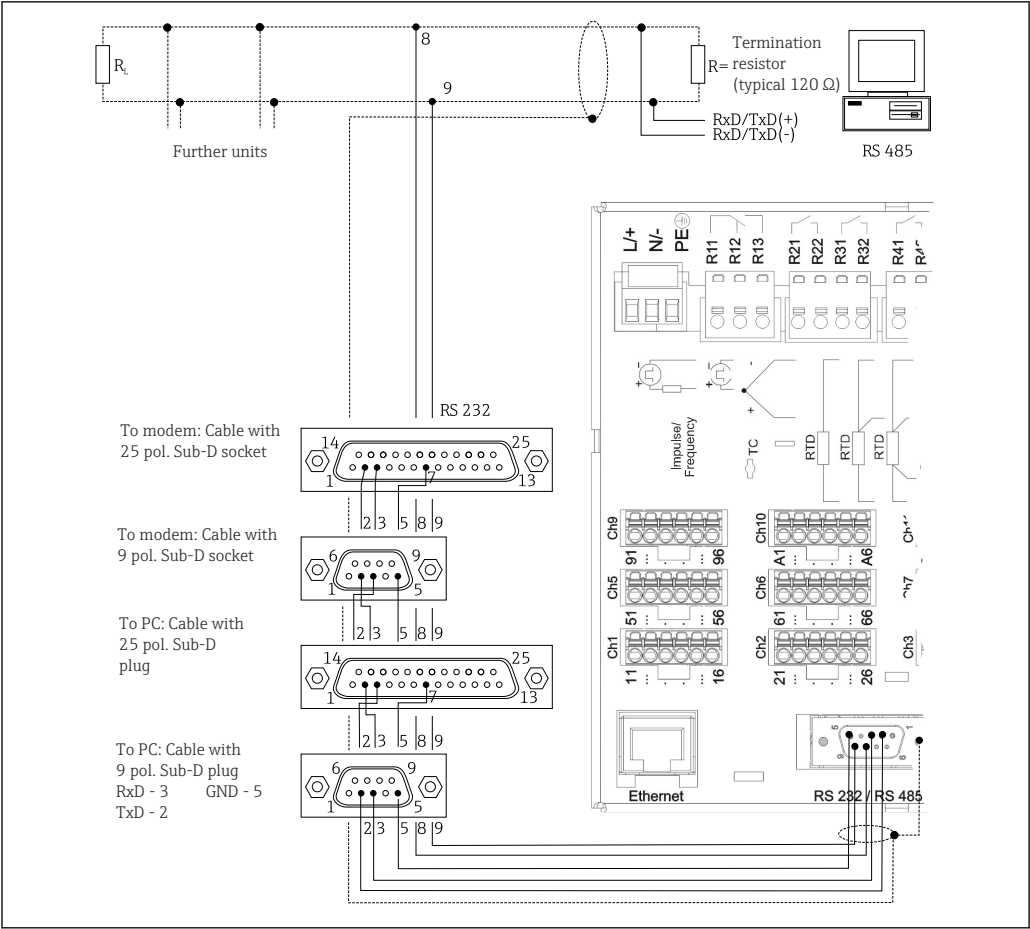

A0019305-EN

Type	Pin of the SUB-D9 socket								
	1	2	3	4	5	6	7	8	9
RS232 assignment		TxD (data output)	RxD (data input)		GND				
RS485 assignment					GND			RxD/TxD -	RxD/TxD +
Unoccupied connections should be left empty. Maximum cable length: RS232: 2 m (6.6 ft) RS485: 1 000 m (3 280 ft)									

 Only one interface can be used at any one time (RS232 or RS485).

6.3.9 Ethernet connection (rear of device)

The Ethernet interface can be used to integrate the device into a PC network (TCP/IP Ethernet) via a hub or switch. A standard patch cable (e.g., CAT5E) can be used for the connection. Using DHCP, the device can be fully integrated into an existing network without the need for additional configuration. The device can be accessed from every PC in the network.

- Standard: 10/100 Base T/TX (IEEE 802.3)
- Socket: RJ-45
- Max. cable length: 100 m
- Galvanic isolation

Meaning of the LEDs

Beneath the Ethernet connection (see rear of device) there are two light emitting diodes which indicate the status of the Ethernet interface.

- Yellow LED: link signal; is lit when the device is connected to a network. If this LED is not lit, communication is not possible.
- Green LED: Tx/Rx; flashes irregularly if the device is transmitting or receiving data.

6.3.10 Option: Ethernet Modbus TCP slave


The Modbus TCP interface is used to connect to higher-ranking SCADA systems (Modbus master) to transmit all measured values and process values. Up to 12 analog inputs and 6 digital inputs can be transmitted via Modbus and stored in the device. The Modbus TCP interface is physically identical to the Ethernet interface.

6.3.11 Option: Modbus RTU slave

The Modbus RTU (RS485) interface is galvanically isolated and is used to connect to higher-level systems to transmit all measured values and process values. Up to 12 analog inputs and 6 digital inputs can be transmitted via Modbus and stored in the device. Connection is via the combined RS232/RS485 interface.

 Modbus TCP and Modbus RTU cannot be used at the same time.

6.3.12 Connections at front of device

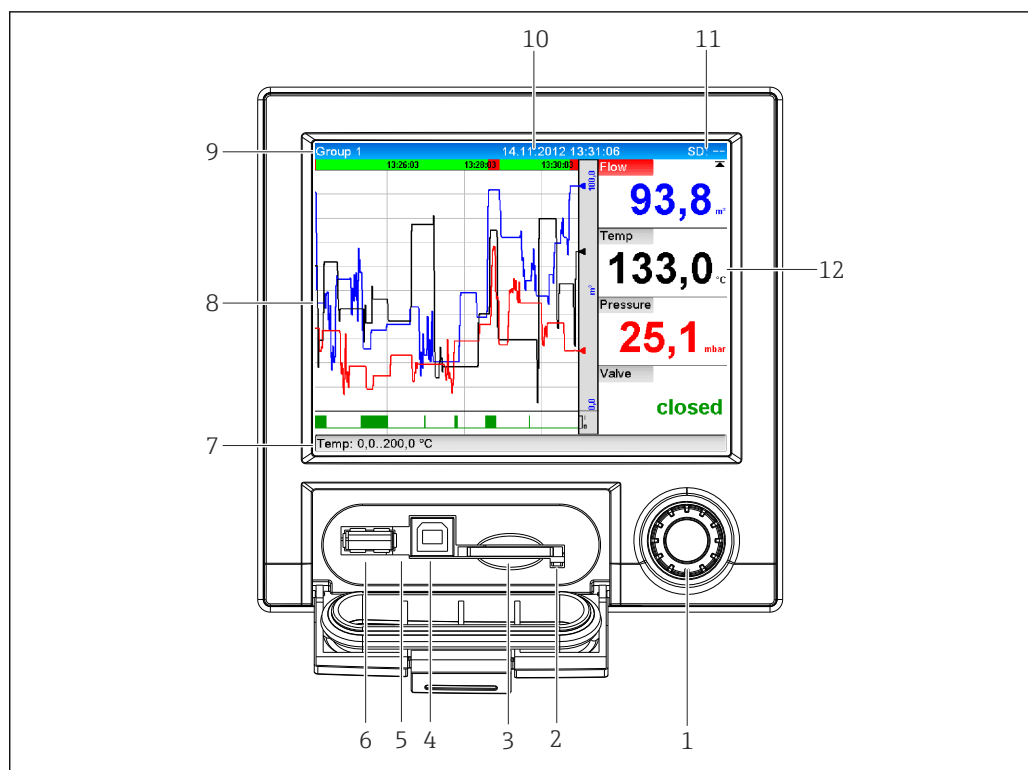

 5 Front of device with open flap

- 1 Navigator
- 2 LED at SD slot. Orange LED flashes when the device is writing to or reading from the SD card.
- 3 Slot for SD card
- 4 USB-B socket "Function", e.g., to connect to PC or laptop
- 5 Green LED lit: power supply present
- 6 USB-A socket "Host", e.g., for USB memory stick or external keyboard
- 7-12 For a description of the display formats, see the "Operation options" section

USB connection type A (host)

A USB 2.0 port is available on a shielded USB-A socket at the front of the device. A USB stick can be connected to this interface as a storage medium. An external keyboard or USB hub may also be connected.

USB connection type B (function)

A USB 2.0 port is available on a shielded USB-B socket at the front of the device. This can be used to connect the device to a laptop for communication. →  30



USB-2.0 is compatible with USB-1.1 and USB-3.0, i.e., communication is possible.

Information on USB devices*Requirements with regard to an external USB hub*

The USB devices are detected by the "plug-and-play" function. If several devices of the same type are connected, only the USB device that was connected first is available. Settings for the USB devices are made in the setup. A maximum of 8 external USB devices (incl. USB hub) can be connected if they do not exceed the maximum load of 500 mA. If overloaded, the corresponding USB devices are automatically disabled.

Requirements with regard to the USB stick

There is no guarantee that all manufacturers' USB sticks will function faultlessly. An industrial grade SD card is recommended to ensure the reliable recording of data.

→  63



The USB stick must be formatted to FAT/FAT32. NTFS format is not readable. The system supports only USB sticks with max. 32 GB.



Do not connect the USB stick to the device via a USB hub. Interference from other USB devices may result in data loss.

Requirements with regard to an external USB keyboard

The system only supports keyboards which can be addressed using generic drivers (HID keyboard - Human Interface Device). Special buttons are not supported (e.g., the Windows button). Users can only enter characters that are available in the input character set of the device. All unsupported characters are rejected. It is not possible to connect a wireless keyboard. The following keyboard layouts are supported: DE, CH, FR, USA, USA International, UK, IT. See setting under "Setup -> Advanced setup -> System -> Keyboard layout".

Requirements with regard to the SD card

Industrial grade SD-HC cards with max. 32 GB are supported.



Use only the industrial grade SD cards described in the "Accessories" section of the Operating Instructions. These have been tested by the manufacturer and are guaranteed to function correctly in the device. →  63



The SD card must be formatted to FAT/FAT32. NTFS format is not readable.

6.4 Post-connection check

Device condition and specifications	Notes
Are cables or the device damaged?	Visual inspection
Electrical connection	Notes
Does the supply voltage match the information on the nameplate?	-

Are all terminals firmly engaged in their correct slot?	-
Are the mounted cables strain-relieved?	-
Are the power supply and signal cables correctly connected?	See connection diagram and rear of device.

7 Operating options

7.1 Overview of operating options


The device can be operated directly on site with the navigator and USB keyboard/mouse or via interfaces (serial, USB, Ethernet) and operating tools (web server).

7.2 Structure and function of the operating menu




The layout and structure of the operating menu can differ slightly in parts on the web server.

7.2.1 Operating menu for operators and maintenance personnel

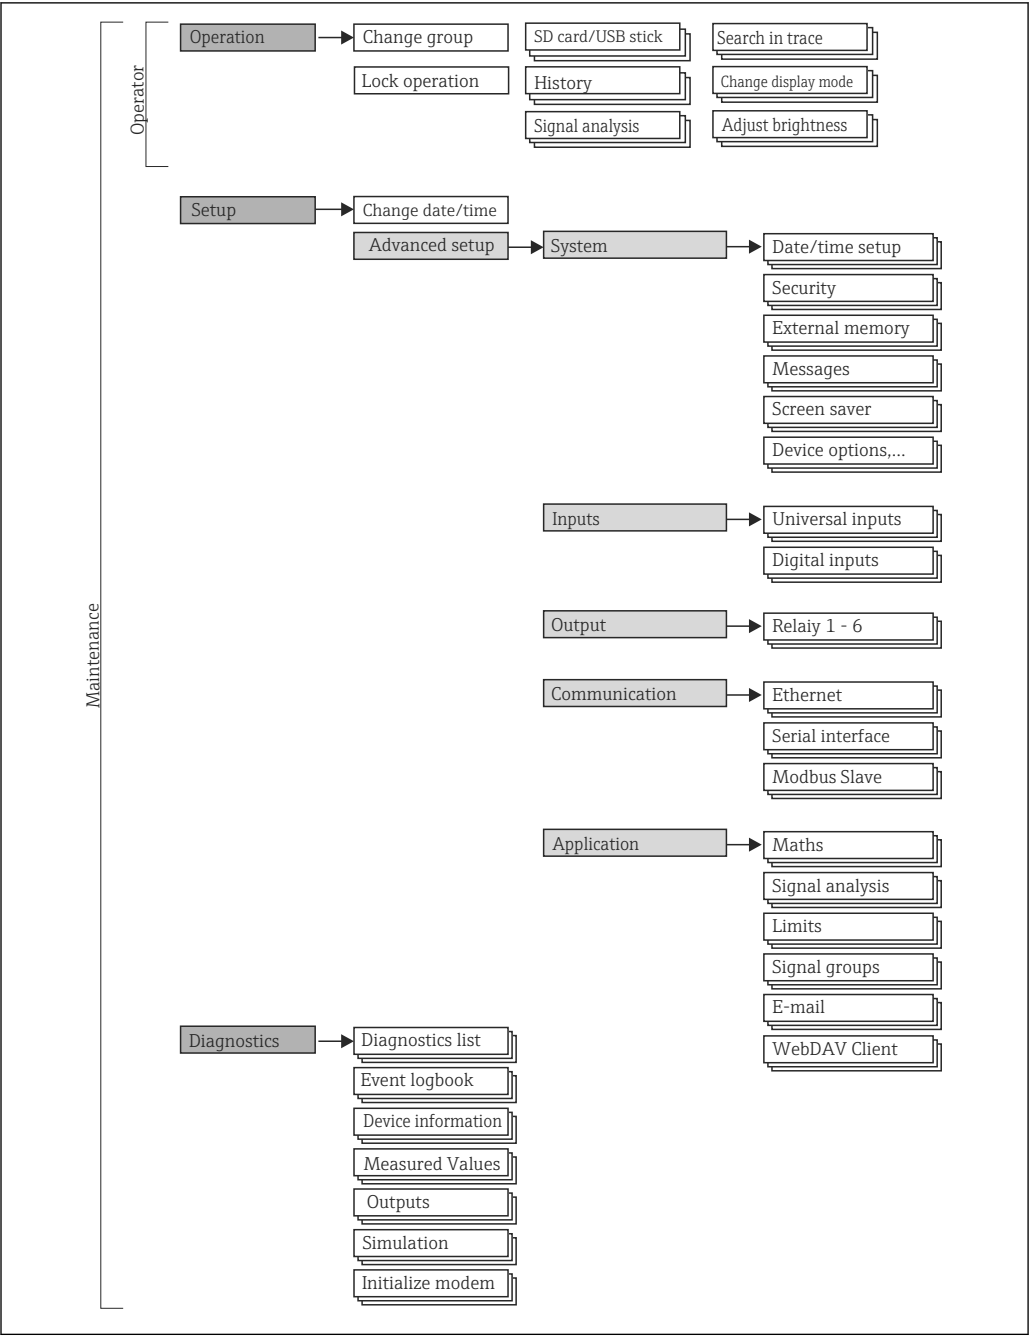

A0019594-EN

7.2.2 Operating menu for experts

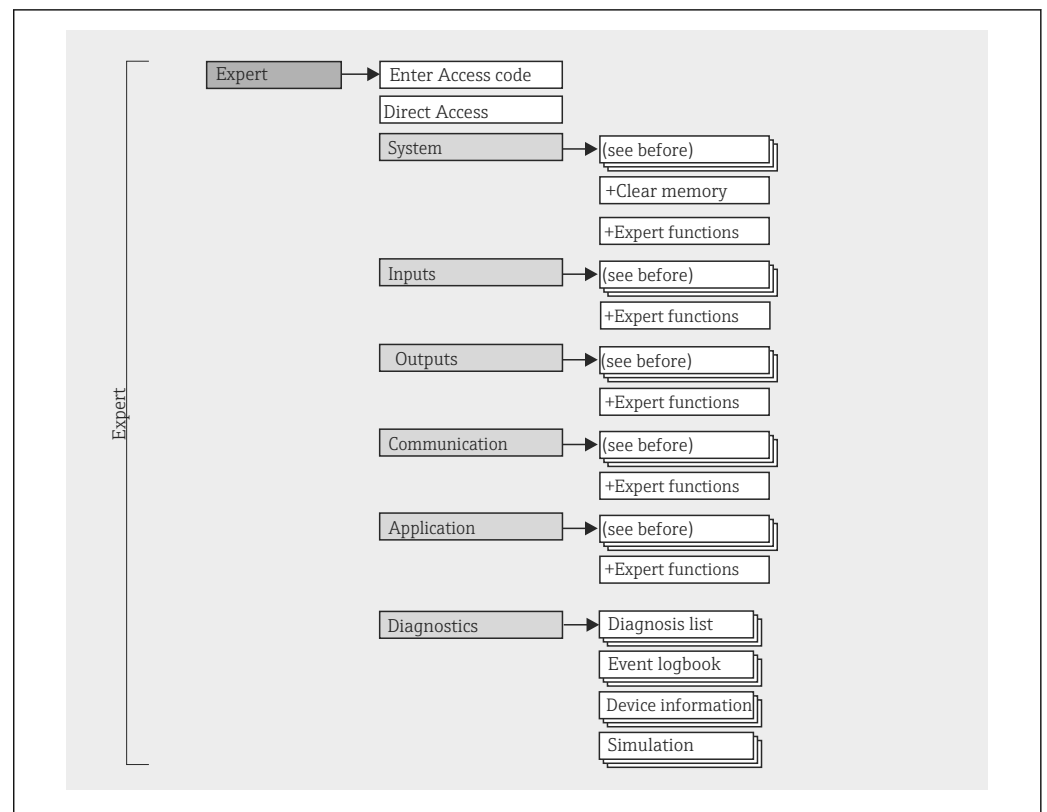

A0019596-EN


7.2.3 Submenus and users

Certain parts of the menu are assigned to certain user roles. Each user role corresponds to typical tasks within the life cycle of the device.

User role	Typical tasks	Menu	Content/meaning
Operator	Tasks during operation: ■ Configuration of the display. ■ Reading measured values.	"Operation"	Contains all the parameters that are required in ongoing operation: configuration of the measured value display (displayed values, display format, etc.).
Maintenance	Commissioning: ■ Configuration of the measurement. ■ Configuration of data processing.	"Setup"	Contains all of the parameters for commissioning: ■ Change date/time ■ "Advanced setup" submenu Contains additional submenus and parameters: ■ System: Basic settings required for operating the device. ■ Inputs: Settings for analog and digital inputs. ■ Outputs: Settings required only if outputs (e.g., relays) are to be used. ■ Communication: Settings required if the USB, RS232, RS485 or Ethernet interface of the device is used (PC operation, serial data read-out, modem operation, etc.). ■ Application: Various application-specific settings (e.g., group settings, limit values etc.). Once values have been set for these parameters, the measurement should usually be fully configured.

User role	Typical tasks	Menu	Content/meaning
	Troubleshooting: ■ Diagnosing and eliminating process errors. ■ Interpretation of device error messages and correcting associated errors.	"Diagnostics"	Contains all parameters for detecting and analyzing errors: ■ Diagnostic list All diagnostic messages are listed in chronological order. ■ Event logbook Events, such as limit value violations and power failures are listed in chronological order. ■ Device information Displays important device information (e.g., serial number, firmware version, device options for hardware and software, memory information, etc.). ■ Measured values Displays the current measured values of the device. ■ Outputs Displays the current status of the outputs, e.g., switch status of relay outputs. ■ Simulation Various functions/signals can be simulated for test purposes here. Note: In Simulation mode, normal recording of the measured values is interrupted and the intervention is logged in the event logbook. ■ Initialize modem Initializes the modem connected to the serial interface (for automatic call answering).
Expert	Tasks that require detailed knowledge of the device's functionality: ■ Commissioning measurements under difficult conditions. ■ Optimal adaptation of the measurement to difficult conditions. ■ Detailed configuration of the communication interface. ■ Error diagnostics in difficult cases.	"Expert"	Contains all the parameters of the device (including those already contained in one of the other menus). The expert menu is protected by a code. Factory setting: 0000. This menu is structured according to the function blocks of the device: ■ "System" submenu Contains all higher-level device parameters that do not affect measurement or measured value communication. ■ "Inputs" submenu Contains all parameters for configuring the analog and digital inputs. ■ "Output" submenu Contains all parameters for configuring the outputs (e.g., relays). ■ "Communication" submenu Contains all parameters for configuring the communication interfaces. ■ "Application" submenu Contains all the parameters for configuring the application-specific settings (e.g., group settings, limit values etc.). ■ "Diagnostics" submenu Contains all parameters needed to detect and analyze operational errors.

7.3 Measured value display and operating elements

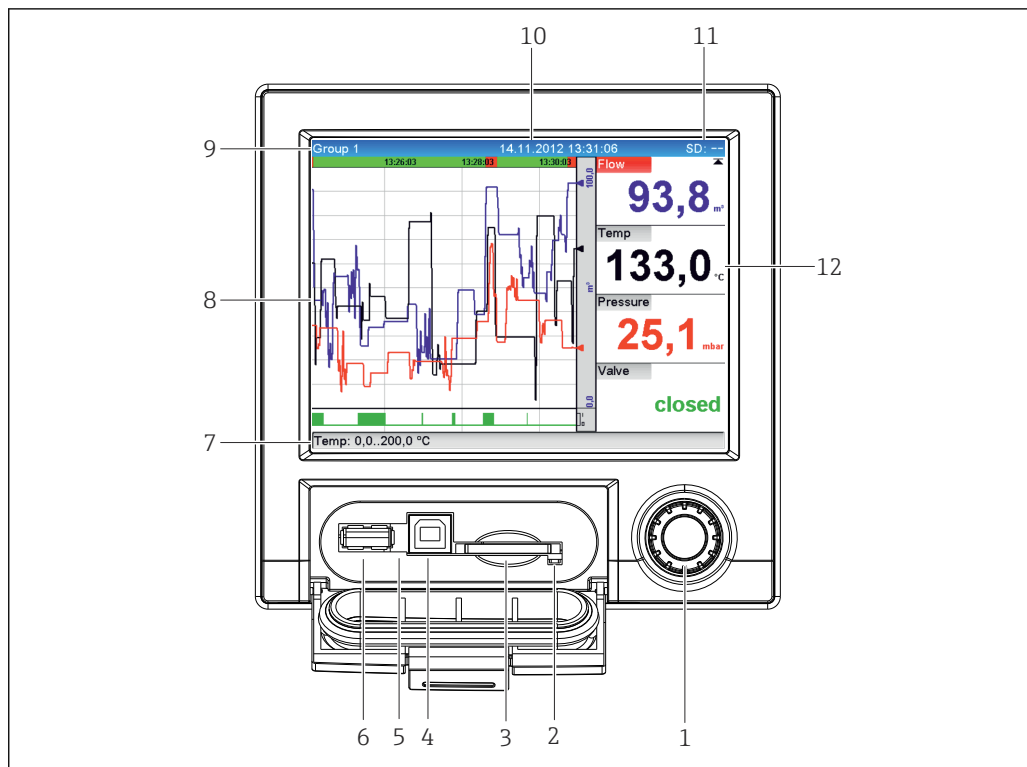

A0047011

6 Front of device with open flap

Item no.	Operating function (display mode = display of measured values) (Setup mode = operation in the Setup menu)
1	"Navigator": Jog/shuttle dial for operating with additional press/hold function. In display mode: turn the dial to switch between the various signal groups. Press the dial to display the main menu. In setup mode or in a selection menu: Turn the dial anticlockwise to move the bar or the cursor up or to the left, changes the parameter. Turning clockwise moves the bar or cursor down or clockwise, changes parameter. Press briefly (<2 sec.) = Select highlighted function, parameter change starts (ENTER key). i Access online help: Press and hold navigator (>3 sec.) to show information on the selected function. To quit the menu immediately, press and hold "Back" (>3 sec.) in the navigator. The device switches to display mode.
2	LED at SD slot. Orange LED lit when the device is accessing the SD card. Do not remove the SD card if the LED is lit! Risk of data loss!
3	Slot for SD card
4	USB-B socket "Function", e.g., to connect to a PC or laptop
5	Green LED lit: power supply present
6	USB-A socket "Host", e.g., for USB memory stick or external keyboard
7	In display mode: alternating status display (e.g., set zoom range) of the analog or digital inputs in the appropriate color of the channel. In setup mode: different information can be displayed here depending on the display type.
8	In display mode: window for measured value display (e.g., curve display). In setup mode: displays the operating menu

Item no.	Operating function (display mode = display of measured values) (Setup mode = operation in the Setup menu)
9	In display mode: current group name, type of analysis In setup mode: name of the current operating item (dialog title)
10	In display mode: displays current date/time In setup mode: --
11	In display mode: alternating display indicating the percentage space on the SD card or USB stick that has already been used. Status symbols are also displayed in alternation with the memory information (see the following table). In setup mode: the current "direct access" operating code is displayed
12	In display mode: the current measured values are displayed and, in the event of an error/alarm condition, the status is displayed. In the case of counters, the type of counter is displayed as a symbol (see the following table).  If a measuring point has limit value status, the corresponding channel identifier is highlighted in red (quick detection of limit value violations). During a limit value violation and device operation, the acquisition of measured values continues uninterrupted.

7.4 Display representation of symbols used in operation

Item no.	Function	Description
8, 12	Symbols for counters:	
	$\Sigma 1$	Intermediate analysis/external analysis
	ΣD	Daily analysis
	ΣM	Monthly analysis
	ΣY	Annual analysis
	Σ	Totalizer
8, 12	Channel-related symbols:	
		Violation of lower limit value
		Violation of upper limit value or limit value on counter
		Violation of upper and lower limit values at the same time
	S	"Out of specification" e.g., input signal too high/low
	F	Error message "Failure detected" An operating error has occurred. The measured value is no longer valid (e.g., a channel not displayed in the current group is defective).
	M	"Maintenance required" Maintenance is required. The measured value remains valid.
11	-----	Error, measured value not displayed. Possible causes: Sensor / input error, line break, invalid value, input signal too high/low
	Symbol for status signals:	
		"Device locked" Setup is locked via a control input. Disable setup lock via a control input.
	S	"Out of specification" The device is being operated outside its technical specifications (e.g., during startup or cleaning processes).
	C	"Function check" The device is in Service mode.

Item no.	Function	Description
	M	"Maintenance required" Maintenance is required. The measured value remains valid.
	F	Error message "Failure detected" An operating error has occurred. The measured value is no longer valid (e.g., a channel not displayed in the current group is defective).
		"External communication" The device is communicating externally (e.g., via Modbus).
	SIM	"Simulation" Simulation is active.
7		"Historical data" Historical data are currently shown on screen.

7.4.1 Symbols in operating menus

	Symbol for setup
	Symbol for diagnostics
	Symbol for expert setup
	Back The function "Back" appears at the end of each menu/submenu. Press "Back" briefly to go up one level in the menu structure.  Press and hold "Back" (>3 sec.) to quit the menu immediately. The device switches to display mode.

7.4.2 Symbols in the event logbook

	Setup changes
①	Power on
⏻	Power off
☒	Limit value on
☐	Limit value off
1	Digital on (on/off message)
0	Digital off (on/off message)
	Service
	Texts saved/comments added
OK	Acknowledging message
	Back
▶	Continue searching

7.5 Entering text and numbers (virtual keyboard)

A virtual keyboard is available for entering text and numbers. This is opened automatically if needed. The appropriate character is selected by turning and pressing the navigator.

The following characters are available for entering customized text:

0-9 a-z A-Z = + - * / \ ² ³ ¼ ½ ¾ () [] < > { } I ? ! ` " ' ^ % ° . , : _ μ & # \$ € @ \$ £ ¥ ~

←	Jump one position to the left. If this symbol is selected, the cursor jumps one position to the left.
→	Jump one position to the right. If this symbol is selected, the cursor jumps one position to the right.
←x	Delete backwards. If this symbol is selected, the character to the left of the cursor position is deleted.
x→	Delete forwards. If this symbol is selected, the character to the right of the cursor position is deleted.
	Delete all. If this symbol is selected, the entire entry is deleted.
	Reject entry. If this symbol is selected, the entry is rejected and you quit editing mode. The previously set text remains.
	Accept entry. If this symbol is selected, the entry is applied at the position specified by the user, and you quit editing mode.

7.6 Channel color assignment

Channel color assignment is performed in the main menu under "**Setup -> Advanced setup -> Application -> Signal groups -> Group x**". 8 predefined colors are available per group and can be assigned to the desired channels.

7.7 Access to operating menu via local display

Using the "Navigator" (jog/shuttle dial with additional press/hold function), all settings can be made directly on site at the device.

7.8 Device access via operating tools

7.8.1 Analysis software (SQL database support)

The PC analysis software offers external, centralized data management with visualization for recorded data. The analysis software enables the complete archiving of all measuring point data, e.g., measured values, diagnostic events and protocols. The analysis software stores data in an SQL database. The database can be operated locally or in a network (client/server). Access is via RS232/RS485, USB or Ethernet interface (network).

Function scope:

- Export of saved data (measured values, analyses, event logbook)
- Visualization and processing of saved data (measured values, analyses, event logbook)
- Safe archiving of exported data in an SQL database

The following versions of the software are available:

- Essential version (free, with limited functionalities)
- Professional version (see Accessories →  64)
- Demo version (time-limited Professional version)



An "Essential" version of the analysis software is supplied with the device.



For details, see the Operating Instructions for the FDM analysis software.

7.8.2 Web server

A web server is integrated into the device. This makes the current measured values of the device available in real time. Access is via an Ethernet interface from a PC in the network via the standard browser. The installation of additional software is not required. Alternatively, the web server can be operated via the USB-B interface in a point-to-point connection (Ethernet over USB) using a standard USB cable. →  30

The web server offers the following functionality:

- Display of current and historical data and measured value curves via a standard web browser →  39
- Easy configuration without additional installed software →  32
- Remote access to device and diagnostic information

7.8.3 OPC server (optional)

The OPC server makes it possible to access data on the device. These data are made available to OPC clients in real time. The OPC server meets the requirements of the OPC specifications regarding the supply of data to an OPC client. Access is via RS232/RS485, USB or Ethernet interface (network). Communication takes place using automatic device detection; the operator does not need to make any additional settings. The OPC server enables the flexible and powerful exchange of data and is easy and convenient to use.

The following instantaneous values can be provided:

- Analog channels
- Digital channels
- Mathematics
- Totalizer

8 System integration

8.1 Integrating the measuring instrument into the system

8.1.1 General information

The device has (optional) fieldbus interfaces for exporting process values. Measured values and statuses can also be transmitted to the device via fieldbus.

Note: Counters cannot be transferred.

Depending on the bus system, alarms and faults occurring during data transmission are displayed (e.g., status byte).

The process values are transmitted in the same units that are used to display the values on the device.

8.1.2 Ethernet

Setup → **Advanced setup** → **Communication** → **Ethernet**

The IP address can be entered manually (fixed IP address) or assigned automatically using DHCP.

The port for data communication is preset to 8000. The port can be changed in the **Expert** → **Communication** → **Ethernet** menu.

The following functions are implemented:

- Data communication with PC software (analysis software, OPC server)
- Web server

The following connections are possible at the same time:

- 1x Port 8000 (OPC server or analysis software)
- 1x Port 8002 (OPC server only)
- 4x Modbus slave TCP
- 5x Web server

 Ports can be changed.

As soon as the maximum number of connections has been reached, new connection attempts are blocked until an existing connection has been terminated.

8.1.3 Web server with "Ethernet over USB" function

To provide easy and efficient access via web server for operation, setup and commissioning, the USB-B interface can be switched to the "Ethernet over USB" mode. Ethernet communication is established here via the USB interface. This has the advantage that the Ethernet interface in the case of commissioning laptops, for example, does not need to be reconfigured (IP address, ports, etc.). Instead, a standard USB cable can be used to establish a point-to-point connection. The web server itself retains its complete range of functionality.

Important information:

- Do not connect several devices via USB to a laptop/PC at the same time.
- The PC should not be connected to the device via USB and to the network via Ethernet/RJ45 at the same time if the network uses the same address range as the device.
- Driver software (EH ECM device) must be installed on the PC.
- The "Ethernet over USB" mode is not a gateway, i.e., the Ethernet/RJ45 and USB networks are separate from each other (no two-way access).
- The USB cable should be disconnected from the device for at least 10 s before being reconnected (prevention of errors due to response time of system).
- It takes at least 10 s before the USB driver is activated by Windows and communication with the device is possible.
- Initialization of the USB interface takes place when the PC and device are connected via a USB cable.

Supported services/functions

The following services/functions are provided via the USB interface:

- Web server
- CDI TCP (port 8000)
- WebDAV server

All other services/functions are available only by Ethernet via RJ45.

Driver installation at PC end

To use the web server via USB, a driver must be installed once at the PC end.

1. Contact the supplier for the download file for the driver.
2. Execute the "setup.exe" and follow the instructions.

The necessary drivers are installed.

Changing the USB-B mode to "Ethernet over USB" (panel version)

Communication can be established only if the device has been configured accordingly.

1. Supply power to the device, restart and wait for start screen.
2. Open dropdown menu under **"Setup → Advanced setup → Communication → Function USB-B"**.

3. "Always USB" option: USB-B is always set to Standard USB.
4. "Always Ethernet over USB" option: Ethernet over USB is always set.
5. "As per user entry" option: A prompt for the mode (option) appears once a USB cable is plugged in.

The device is now ready to establish a connection.

Establishing communication

1. Using a standard USB cable, connect the device at the USB-B interface to any of the PC's USB interfaces.
2. With "Always Ethernet over USB" function: The web server can be started immediately.
3. With "As per user prompt" function: Once the USB cable has been plugged into the device, the "Select USB function" dropdown menu appears. Then select "Ethernet over USB" on the device. The device returns the IP address.
4. Open the browser, enter <http://192.168.1.212> and follow the instructions from section → 40

The device is now ready to communicate with the web server.

 The IP address of the web server via USB is set permanently to <http://192.168.1.212>

 If the USB cable is already connected to a PC when the device starts up, there is no prompt even if the "As per user entry" option is selected. Instead, the previously selected functionality is used.

8.1.4 Modbus RTU/TCP slave

The device can be connected to a Modbus system via RS485 or Ethernet interface. The general settings for the Ethernet connection are made in the **Setup → Advanced setup → Communication → Ethernet** menu. Modbus communication is configured in the **Setup → Advanced setup → Communication → Modbus Slave** menu.

Up to 12 analog inputs and 6 digital inputs can be transmitted via Modbus and stored in the device.

Menu item	RTU (RS485)	Ethernet
Device address:	1 to 247	IP address manual or automatic
Baud rate:	9600/19200/38400/57600/115200	-
Parity:	Even/Odd/None	-
Stop bits:	1/2	-
Port:	-	502

Transfer of values

The actual Modbus TCP protocol is located between layer 5 to 6 in the ISO/OSI model.

To transfer a value, 3 registers of 2 bytes each (2-byte status + 4-byte float) or 5 registers of 2 bytes each (2-byte status + 8-byte double) are used.

 For more information on Modbus, see the supplementary documentation.

9 Commissioning

9.1 Function check

Perform the following checks prior to commissioning:

- "Post-installation check" checklist →  11.
- "Post-connection check" checklist →  20.

9.2 Switching on the measuring instrument

After the operating voltage is applied, the green LED lights up and the device is ready for operation.

If you are commissioning the device for the first time, program the setup as described in the following sections of the Operating Instructions.

If you are commissioning a device that is already configured or preset, the device starts measuring immediately as defined in the settings. The values of the channels currently activated are shown on the display.

 Remove the protective film from the display as this would otherwise affect the readability of the display.

9.3 Configuring the operating language

Factory setting: English or ordered local language

Calling the main menu, configuring the operating language:

1. Press the navigator.
2. The main menu appears on the display with the "Sprache/Language" option.
3. To change the set language: Press the navigator, turn the navigator to select the desired language and press the navigator to apply the change.
4. Use "Back" or "ESC" to quit the main menu.

The operating language has been changed.

 The function  "Back" appears at the end of each menu/submenu.

Press "Back" briefly to go up one level in the menu structure.

To quit the menu immediately and return to the measured value display, press and hold "Back" (>3 sec.). The changes made are accepted and saved.

9.4 Configuring the measuring instrument (Setup menu)

Access to the setup is enabled when the device leaves the factory and can be locked in various ways, e.g., by entering a 4-digit access code or via role-based password protection.

When locked, basic settings can be checked but not changed. The device can also be put into operation and configured via the PC.

Device configuration options:

- Setup directly at the device (panel-mounted device only)
- Setup via SD card or USB stick by transferring the parameters stored on it
- Setup via web server using Ethernet or Ethernet over USB

9.4.1 Step-by-step: to the first measured value

Procedure and necessary settings:

1. Check the date/time in the main menu under **"Setup"** and set it if necessary.
2. Configure settings for the interfaces and communication in the main menu under **"Setup -> Advanced setup -> Communication"**.
3. Create universal or digital inputs in the main menu under **"Setup -> Advanced setup -> Inputs -> Universal inputs/Digital inputs"**: Add input: select **"Universal input x"** or **"Digital input x"** with which the input signal should be detected. Then select and configure the new input that has been created.
4. Activate relays or analog outputs (optional) in the main menu under **"Setup -> Advanced setup -> Outputs"**.
5. Assign activated inputs to a group in the main menu under **"Setup -> Advanced setup -> Application -> Signal groups -> Group x"**.
6. Use "Back" or "ESC" to quit the menu. The changes made are accepted and saved.

The device is in the measured value display mode and displays the measured values.

9.4.2 Step-by-step: setting or deleting the limit values

Procedure for setting limit values:

1. Open the limit values in the main menu under **"Setup -> Advanced setup -> Application -> Limits"**.
2. Add a limit value: select **"Yes"**.
3. Select and configure **"Limit value x"**.
4. Use "Back" or "ESC" to quit the menu. The changes made are accepted and saved.

The device is in the measured value display mode and displays the measured values.

Procedure for deleting limit values:

1. Open the limit values in the main menu under **"Setup -> Advanced setup -> Application -> Limits"**.
2. Delete a limit value: select **"Yes"**.
3. Select the limit value to be deleted from the list.
4. Use "Back" or "ESC" to quit the menu. The changes made are accepted and saved.

The device is in the measured value display mode and displays the measured values.

9.4.3 Device setup

You can open the main menu by pressing the navigator during operation. Turn the navigator to navigate through the available menus. When the desired menu is displayed, press the navigator to open the menu.

In the **"Setup"** menu and in the **"Advanced setup"** submenu, you will find the **most important** settings for the device:

Parameter	Possible settings	Description
Change date/time	UTC time zone dd.mm.yyyy hh:mm:ss	Change the date and time.
Advanced setup		Advanced settings for the device, such as system settings, inputs, outputs, communication, application etc.

Parameter	Possible settings	Description
System		Basic settings that are needed to operate the device (e.g., date/time, security, memory management, messages, etc.)
Inputs		Settings for the analog and digital inputs.
Outputs		Settings only required if outputs (e.g., relays or analog outputs) are to be used.
Communication		Settings required if the USB, RS232/RS485 or Ethernet interface of the device is to be used (PC operation, serial data export, modem operation, etc.).  The different interfaces (USB, RS232/RS485, Ethernet) can be operated in parallel. However, simultaneous use of the RS232 and RS485 interface is not possible.
Application		Various application-specific settings (e.g., group settings, limit values etc.).

 For a detailed overview of all the operating parameters, please refer to the Appendix of the Operating Instructions. →  66

9.4.4 Setup via SD card or USB stick

An existing device configuration ("Setup data" *.DEH) from another data manager can be uploaded directly to the device.

Import new setup directly at the device: The function used to load the setup data can be found in the main menu under **"Operation -> SD card (or USB stick) -> Load setup -> Select directory -> Next"**.

9.4.5 Setup via web server

To configure the device via the web server, connect the device to a PC via Ethernet (or Ethernet over USB).

Observe instructions and communication settings for Ethernet (or Ethernet over USB) and web server at →  29.

 To configure the device via a web server, you must have Administrator or Service access. ID and password administration is performed in the main menu under **"Setup -> Advanced setup -> Communication -> Ethernet -> Configuration Web server -> Authentication"**.

ID default value: admin; Password: admin

Note: Change the password during commissioning.

Establishing a connection and setup

Procedure for setting up a connection:

1. Connect the PC to the device via Ethernet (or Ethernet over USB).
2. Start the browser on the PC; enter the IP address: `http://<IP address>` to open the web server for the device. Note: Leading zeros in IP addresses must not be entered (e.g., enter 192.168.1.11 instead of 192.168.001.011).
3. Enter ID and password, and confirm each by clicking "OK" (see also the "Web server" section of the Operating Instructions →  40).
4. The web server shows the instantaneous value display of the device. In the web server taskbar, click **"Menu -> Setup -> Advanced setup"**.
5. Start parameter configuration.

Continue with device configuration in accordance with the Operating Instructions for the device. The complete Setup menu, i.e., all of the parameters listed in the Operating Instructions, can also be found on the web server. After configuration, accept the setup with **"Save settings"**.



Procedure to establish a direct connection via Ethernet (point-to-point connection):
→ 39

NOTICE

Undefined switching of outputs and relays

- ▶ When configuring using a web server, the device may adopt undefined states. This may result in the undefined switching of outputs and relays.



An existing device configuration ("Setup data" *.DEH) can be uploaded directly to the device via the web server.

Procedure for uploading a new setup via the web server:

1. Make the connection to the device with the web server → 34.
2. Click **"Data management -> Import device settings"** in the web server taskbar.
3. Select the setup file and press **"OK"** to confirm.
4. The file is transferred, checked and accepted.
5. Once the device settings are accepted, information to this effect is displayed in the web server.

9.5 Advanced settings (Expert menu)

You can open the main menu by pressing the navigator during operation. Turn the navigator to navigate to the **"Expert"** menu. Press the navigator to open the menu.



The Expert menu is protected by the code **"0000"**. If an access code is set up under **"Setup -> Advanced setup -> System -> Security -> Protected by -> Access code"**, this must be entered here.

The **"Expert"** menu contains **all** of the device settings:

Parameter	Possible settings	Description
Direct access	000000-000	Direct access to parameters (fast access)
System		Basic settings that are needed to operate the device (e.g., date/time, security, memory management, messages, etc.)
Inputs		Settings for the analog and digital inputs.
Outputs		Settings only required if outputs (e.g., relays or analog outputs) are to be used.
Communication		Settings required if the USB, RS232/RS485 or Ethernet interface of the device is to be used (PC operation, serial data export, modem operation, etc.). The different interfaces (USB, RS232/RS485, Ethernet) can be operated in parallel. However, simultaneous use of the RS232 and RS485 interface is not possible.

Parameter	Possible settings	Description
Application		Define various application-specific settings (e.g., group settings, limit values etc.).
Diagnostics		Device information and service functions for a quick device check.

 A detailed overview of all the operating parameters is provided in the appendix at the end of the Operating Instructions. →  66

9.6 Configuration management

 You can save the setup data ("Configuration") to an SD card or a USB stick, and save them to a PC drive via the web server. This allows additional devices to be configured very easily using the same settings.

Save setup: The function used to save the setup files can be found in the main menu under "Operation -> SD card (or USB stick) -> Save setup".

CAUTION

If the SD card or USB stick is removed directly:

Risk of data loss on SD card or USB stick

- To remove the SD card or the USB stick, always select "**Operation -> SD card (or USB stick) -> Remove safely**" in the main menu.

Procedure for saving a setup via the web server:

1. Make the connection to the device with the web server. →  34
2. Click "**Data management -> Save device settings**" in the web server taskbar.
3. Select the setup file.
4. Transfer the file.
5. Verify and accept.
6. Once the device settings are accepted, information to this effect is displayed in the web server.

 The function for saving the setup data must be enabled at the device for the web server under "**Setup -> Advanced setup -> Communication -> Ethernet -> Configuration Web server; Setup -> Yes**".

9.7 Simulation

Various functions/signals can be simulated for test purposes here.

NOTICE

Selecting simulation: Simulation of the relays and the WebDAV client can be found in the main menu under "**Diagnostics -> Simulation**". The simulation of the measured values can be found in the main menu under "**Expert -> Diagnostics -> Simulation**". Only the simulated values are recorded during simulation. The simulation is recorded in the event logbook.

- Do not start simulation if measured value recording must not be interrupted.

9.8 Access protection and security concept

To protect the setup from unauthorized access following commissioning, there are many options to ensure access protection to the setup settings and the user entries. Access and authorizations can be configured and assigned passwords.

 The user of the device is responsible for access protection and the security concept. In addition to the device functions listed, user policies and procedures, in particular, must also be applied (e.g., password allocation, password sharing, physical access barriers, etc.).

The following protection options and functionalities are available:

- Protection per control input
- Protection via access code
- Protection via user roles

Overview of access protection and security concept

Access protection	User	Setup changes	Description
Open access	-	Permitted	No protection, not recommended, all setup and system settings are accessible.
Control input	-	Permitted	Access protection via digital input (e.g., via key switch), all setup and system settings are accessible if input actuated.
Access code	-	Permitted	Access protection via access code, access authorization (distribution of access code) must be defined via (in-house) regulations and securely controlled. All setup and system settings can be accessed after entering the access code.
Password-protected user roles			Protection levels and access authorization can be defined via 3 levels of access (user roles). Access authorization (distribution of passwords) must be defined via (in-house) regulations and securely controlled.
	Administrator	Permitted	Access protection via administrator password, all setup and system settings can be accessed after entering the password.
	Service	Permitted	Access protection via service password, all setup and system settings can be accessed after entering the password, advanced functions (e.g., preset) are possible in the service mode
	Operator	Locked	All setup and system settings are locked, access to device information and display values after entering the password.

In order to change any parameter, the correct code must first be entered or the device must be unlocked using the control input.

Setup lock via control input: The settings for the control input can be found in the main menu under **"Setup -> Advanced setup -> Inputs -> Digital inputs -> Digital input X -> Function: Control input; Action: Lock setup"**.

 It is preferable to lock the setup using a control input.

Setting up an access code: The settings for the access code can be found in the main menu under **"Setup -> Advanced setup -> System -> Security -> Protected by -> Access code"**. Factory setting: "open access", i.e. can be changed at any time.

 Make a note of the code and store in a safe place.

Setting up user roles: The settings for the user roles (operator, admin and service) are provided in the main menu under **"Setup -> Advanced setup -> System -> Security ->**

Protected by -> User roles" . Factory setting: "open access", i.e. can be changed at any time.

-  Change the passwords during commissioning.
 - Make a note of the code and store in a safe place.

9.9 HTTPS web server setup

To operate the HTTPS web server, an X.509 certificate and a suitable private key must be installed on the device. For security reasons, installation is via a USB stick only.

-  The certificate that is preinstalled on the device when delivered from the factory should not be used.

-  Server certificates cannot be installed via the "USB stick/import SSL certificates" function!

Requirements

Private key:

- X.509 PEM file (Base64 encoded)
- RSA key with max. 2048 bit
- May not be password-protected

Certificate:

- X.509 file (Base64 encoded PEM or binary DER format)
- V3 incl. extension required
- Signed by a certification authority (CA) or sub-certification authorities (recommended), or self-signed

Certificate and private key can be created or converted using openssl (<https://www.openssl.org>) for example. Contact the IT administrator to create the corresponding data.

Installation:

1. Copy the private key onto a USB stick into the root directory. File name: **key.pem**.
2. Copy the certificate onto a USB stick into the root directory. File name: **cert.pem** or **cert.der**.
3. Connect the USB stick to the device. The private key and the certificate are installed automatically. The installation is logged in the event logbook.
4. Remove the USB stick using the **"Safe removal"** function.

Notes:

- Restart the device so the browser uses the new certificate.
- Delete the private key from the USB stick following installation.
- Keep the private key in a safe place.
- Use the private key and the certificate for one device only.
- To prevent unauthorized use, it is possible to disable the USB A port on the device. In this way, an attacker cannot replace the certificate or the private key ("Denial of Service"). Install a perimeter guard to prevent access to the device.

Checking certificates

Check the certificate via **"Main menu -> Diagnostics -> Device information -> SSL certificates"**. Select the **"Server certificate"** point under the certificate.

-  Replace the certificate in good time before it expires. The device will display a diagnostic message 14 days before the certificate expires.

Uninstalling certificates and the private key

Check the certificate via **"Main menu -> Diagnostics -> Device information -> SSL certificates"**. Select the **"Server certificate"** point under the certificate. Delete the certificate.



In this case, the preinstalled certificate is reused.

Using self-signed certificates



Self-signed certificates must be stored in the PC's certificate memory under "Trusted Root Certification Authorities" so that the browser does not display a warning.

Alternatively, an exception can be saved in the browser.

10 Operation

The "Operation" menu is geared towards the tasks and activities of the operator. It contains all the parameters that are needed in ongoing operation. Historical values and analyses, for example, can be displayed in the "Operation" menu and display settings can be made. Any settings made for the local display have no effect on the measurement section or the configured device parameters, however.

The device's simple operating concept and the integrated help function enables you to perform operation for many applications without the need for hard-copy operating instructions.

10.1 Displaying and modifying current Ethernet settings

To establish communication with the device via Ethernet, the following settings must be known and modified where necessary:

Display IP/MAC address (only if DHCP is enabled): For the device's IP and MAC address, see the main menu under **"Diagnostics -> Device information -> Ethernet"**.

Display/change Ethernet settings: For the device's Ethernet settings, see the main menu under **"Setup -> Advanced setup -> Communication -> Ethernet"**.

Procedure to establish a direct connection via Ethernet (point-to-point connection):

1. Configure the PC (depends on operating system): e.g., IP address: 192.168.1.1; subnet mask: 255.255.255.0; gateway: 192.168.1.1
2. Disable DHCP on the device.
3. Specify the communication settings on the device: e.g., IP address: 192.168.1.2; subnet mask: 255.255.255.0; gateway: 192.168.1.1



A crossover cable is not required.


10.2 Reading off the device locking status

If setup is locked via a control input, a padlock symbol  appears on the top right of the screen. The setup must first be unlocked via the control input before device parameters can be edited.

Setup lock via control input: For the settings for the control input, see the main menu under **"Setup -> Advanced setup -> Inputs -> Digital inputs -> Digital input X -> Function: Control input; Action: Lock setup"**.

If setup is locked via the access code, all the operating parameters can be displayed, and can also be edited as soon as the access code is entered.

10.3 Reading off measured values (display devices)

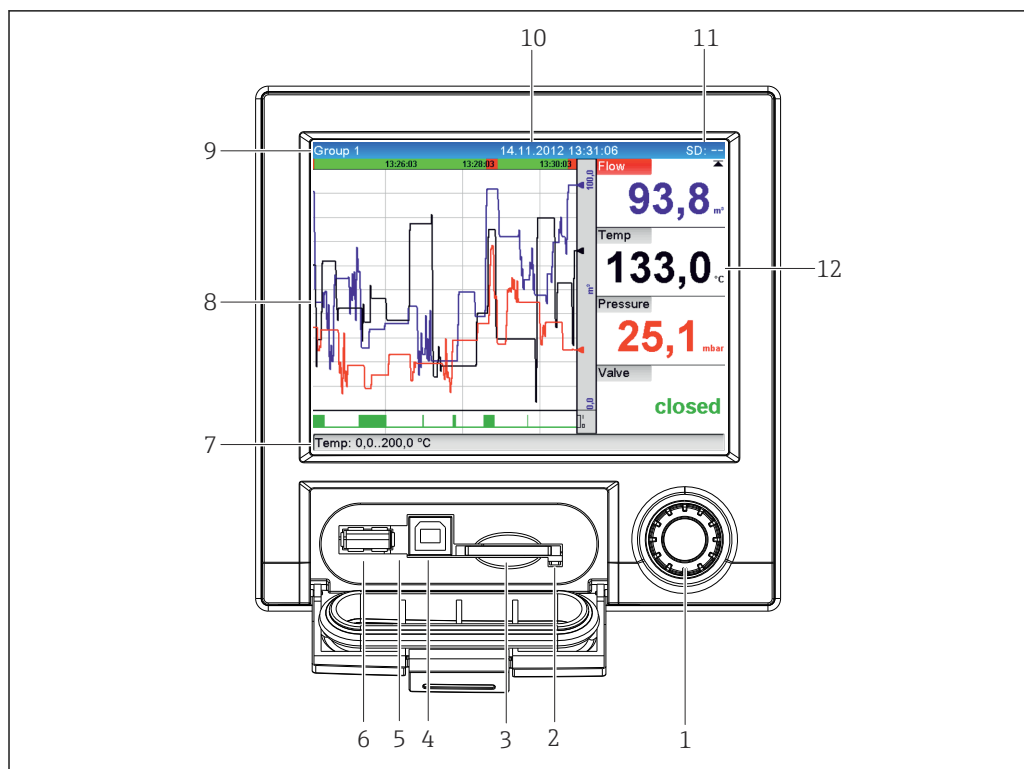

A0047011

7 Front of device with open flap

- 1 Navigator: press briefly to open the main menu and confirm messages (=Enter); press for longer to open the online help
- 2 Orange LED for read/write access to the SD card
- 3 Slot for SD card
- 4 USB-B socket "Function"
- 5 Green LED lit: power supply present
- 6 USB-A socket "Host"
- 7 Status bar
- 8 Area for measured value display (e.g., curve display)
- 9 Header: group name, analysis type
- 10 Header: current date/time
- 11 Header: alternating display indicating the percentage space on the SD card or USB stick that has already been used. Status symbols are also displayed in alternation with the memory information.
- 12 Display of current measured values and the status in the event of an error/alarm condition. In the case of counters, the type of counter is displayed as a symbol.

An overview of all the symbols and icons is provided in the "Operation options" section. → 26

If a measuring point has limit value status, the corresponding channel identifier is highlighted in red (quick detection of limit value violations). During a limit value violation and device operation, the acquisition of measured values continues uninterrupted.

Information on how to rectify a problem if an error occurs is provided in the "Troubleshooting" section. → 54

10.4 Web server

The device features an integrated web server, which enables access via Ethernet (or Ethernet over USB). The web server is used for convenient device commissioning and configuration and to visualize measured values. Access is possible from any access point when the device is connected to an Ethernet network. An appropriate IT infrastructure,

security measures etc. must be implemented in accordance with the requirements of the plant. Point-to-point access via web server and Ethernet via USB is particularly well-suited for service purposes.

Activation of the web server in the menu **Setup** → **Advanced setup** → **Communication** → **Ethernet** → **Web server** → **Yes** or menu **Expert** → **Communication** → **Ethernet** → **Web server** → **Yes**

The web server port is preset to 80. The port can be changed in the **Expert** → **Communication** → **Ethernet** menu.

 If the network is protected by a firewall, the port may need to be activated.

The following web browsers are supported:

- MS Internet Explorer 11 and higher
- MS Edge
- Mozilla Firefox 52.1.0 and higher
- Opera 12.x and higher
- Google Chrome 66 and higher

 A minimum resolution of 1920x1080 (full HD) is recommended.

In order to use the full functionality of the web server, it is recommended that the latest version of the browser is used. To access the device via a web server, you must have Administrator, Service or Operator authentication →  37

 The web server is not optimized for visualization on smartphones.

When delivered, the following default values are set for the user roles in the device and web server:

- ID: admin; password: admin
- ID: service; password: service
- ID: operator; password: operator

 Note: Passwords should be changed during commissioning!

The ID and password can be changed in the main menu under **"Setup -> Advanced setup -> Communication -> Ethernet -> Configuration Web server -> Authentication"**.

10.4.1 Access to the web server via HTTP (HTML)

When using an Internet browser, it is enough to enter the address **http://<IP address>** to display the information as HTML in the browser.

 Note: Leading zeros in IP addresses must not be entered (e.g., enter 192.168.1.11 instead of 192.168.001.011).

As in the case of the display, you can alternate between the display groups in the web server. The measured values are automatically updated. In addition to the measured values, status and limit value flags are displayed.

10.4.2 Access to the web server via XML

XML format is available in addition to HTML format and contains all measured values of a group. This can be integrated into additional systems as the user wishes.

The XML file is available in ISO-8859-1 (Latin-1) coding at **http://<IP address>/values.xml** (alternative: **http://<IP address>/xml**). However, some special characters,

such as the Euro symbol, cannot be displayed in this file. Texts, such as digital status, are not transmitted.

 **Note:** Leading zeros in IP addresses must not be entered (e.g., enter 192.168.1.11 instead of 192.168.001.011).

 The decimal separator is always displayed as a period in the XML file. All times are given in UTC. The time difference in minutes is noted in the following entry.

The structure of the channel values for the XML file is explained as follows:

```
<device      id="AI01IV" tag="Channel 1" type="INTRN">
    <v1>50.0</v1>
    <u1>%</u1>
    <vtime>20130506-140903</vtime>
    <vstslv1>0</vstslv1>
    <hlsts1>L</hlsts1>
    <param><min>0.0</min><max>100.0</max><hh></hh><hi></hi><lo></lo><ll></ll></
    param>
    <tag>Channel 1</tag>
    <man>Manufacturer</man>
</device>
```


Tag	Description
device id	Unique ID of measuring point
tag	Channel identifier
type	Data type (INTRN, MODBUS)
v1	Measured value of channel as a decimal value
u1	Unit of measured value
vtime	Date and time
vstslv1	Error level 0 = OK, 1 = warning, 2 = error
hlsts1	Limit value status H = upper limit value, L = lower limit value, LH = upper and lower limit value violation
param min max hh hi lo ll	Parameter (optional) Lower zoom Upper zoom Upper alarm limit Upper warning limit Lower warning limit Lower alarm limit
MAN	Manufacturer

10.4.3 Setup, operation and service via the web server

Establishing a connection to the web server:

- 1. Connect the PC to the device via Ethernet (or Ethernet over USB)
- 2. Start the browser on the PC
- 3. Enter the device's IP address in the browser **http://<ip address>**
- 4. Log in with the ID and password

The startup screen of the web server appears.

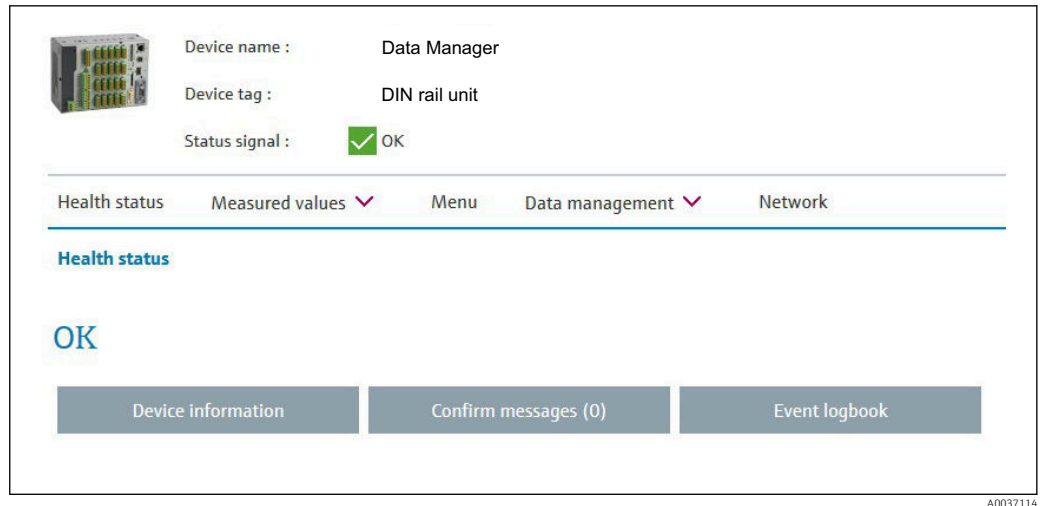

General information regarding the **Device name**, **Device tag** and **Status signal** is displayed in the top section of the web server. The following functions can be accessed in the middle of the screen:

Health status – Measured values – Menu – Data management – Network.

Clicking the functions calls up the following submenus. The submenus are closed by selecting "Cancel" or by clicking "Back" several times.

Health status (advanced device status)

Function	Description
Device information	Advanced device status, Ethernet settings, hardware configuration, device options, memory information, SSL certificate
Confirm messages	Submenu to confirm system messages
Event logbook	Submenu for the event logbook

Measured values (choice of measured value display)

Function	Description
Instantaneous values	Measured values are displayed as numerical instantaneous values, the signal groups can be selected as tabs here
Instantaneous values as curves	The measured values are displayed as curves
History	Displays a history of the measured values

Menu

The menu structure displayed in the web server corresponds largely to the menu structure in the device

Data management

Update functions and parameters relating to the firmware, load/save setup, save setup as RTF, import SSL certificates

Network

Displays the Ethernet parameters (IP address, subnet mask, gateway, domain)

Displays the current measured values and history data

Under **Measured values** a selection window appears for **Instantaneous values – Instantaneous values as curves – History**. Click to display the corresponding display function.

 Current measured values can also be called up via the web server without logging in with the address **http://<IP address>/iv**. Device configuration is **not** possible in this case, however.

Note: The browser must support HTML5.

Optional command parameters:


- Syntax: `http://<ip address>/iv?group=<x>&refresh=<y>`
- `group=<x>` where `x = 1 to 4`
- `refresh=<y>` where `y = 3 to 3600` in seconds

Note: Pay attention to lower and upper case if using an optional parameter.

This function can be disabled in the setup. If this function is disabled, the option to export instantaneous values to XML is also disabled for security reasons.

Instantaneous values


The current measured values are displayed in numerical format. Clicking the tabs displays the signal groups defined in the setup.

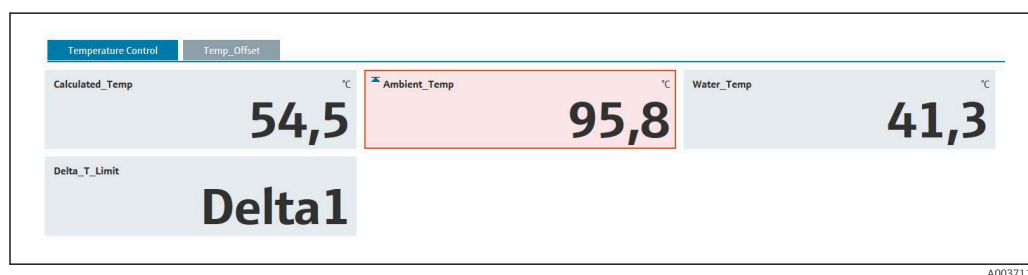

A0037118

Instantaneous values as curves

The current measured values are displayed as a curve and numerically over the time axis. The refresh rate can be set in a selection window. The display mode can be set to full screen. Clicking the tabs displays the signal groups defined in the setup.

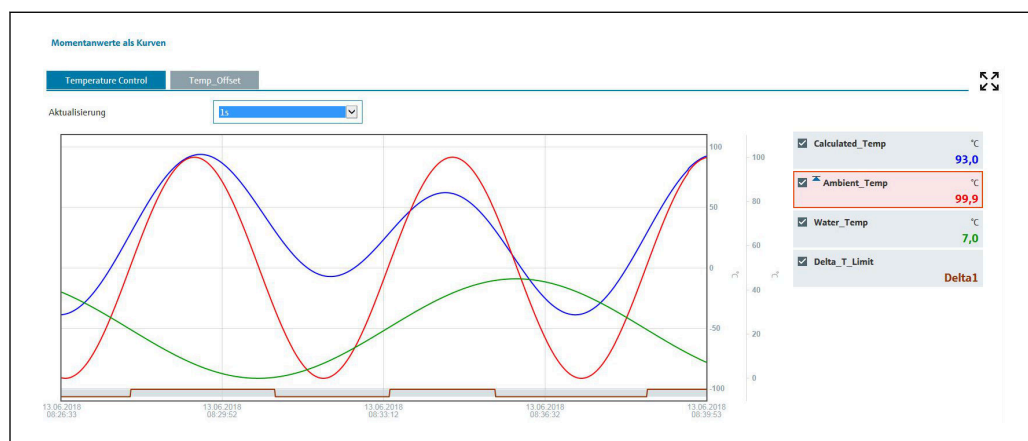


A0037117

Display functions

If the cursor is moved over one of the curves, the instantaneous value of the current point in the curve is displayed with the timestamp and unit. Channels can be displayed and hidden using the channel checkboxes in the legend.

History (logged measured values)

Clicking the **History** button loads the data previously logged. This may take a few seconds depending on the data connection (USB, Ethernet, WLAN) and the number of measuring channels. The data for each channel is loaded to display the content of one screen. The logged (history) measured values are displayed as a curve and numerically over the time axis. The display mode can be set to full screen. Clicking the tabs displays the signal groups defined in the setup.

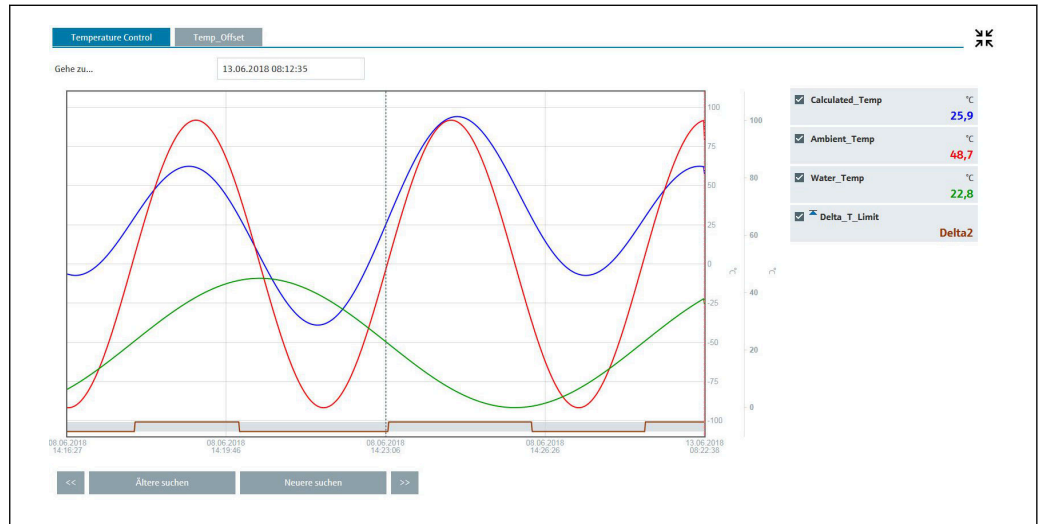

Display functions

If the cursor is moved over one of the curves, the instantaneous value of the current point in the curve is displayed with the timestamp and unit. Channels can be displayed and hidden using the channel checkboxes in the legend.

Moving the dashed cursor line along the time axis updates the numerical display of the measured values accordingly (on right).


Go to ...: Enter a point in time. The history is reloaded. If you enter a time for which no measured values are available, the next possible time where measured values are available is displayed.

Search older: The information displayed moves half a screen to the left (displays older measured values). Press the << button to move the information one entire screen to the left (older measured values).

Search newer: The information displayed moves half a screen to the right (displays more recent measured values). Press the >> button to shift the information one entire screen to the right (more recent measured values).



Note: If no measured values were recorded for a certain range of time (e.g., as there was no power supply), this is indicated by a symbol at the top of the window. The curves jump accordingly.

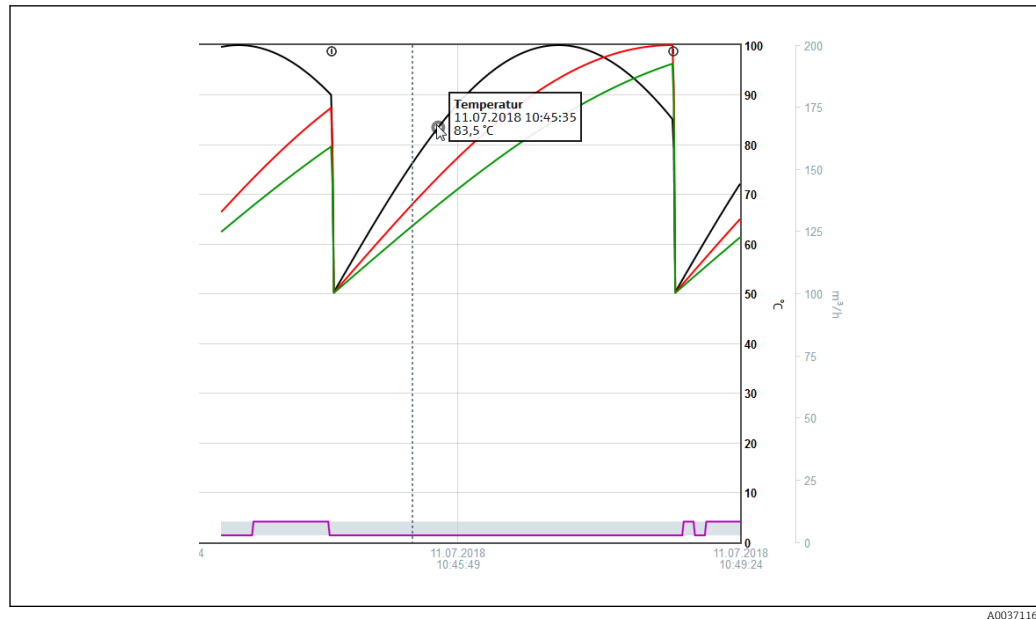

10.4.4 Remote control via the web server

The device can be remote-controlled via the web server. In the web server, the remote control function can be found under **"Measured values -> Remote control"**. Here the display shown corresponds directly to the device display. The device is operated using buttons below this display. The interval for refreshing the display can be set in the **"Refresh"** menu.

Enabling remote control on the device:

1. In the menu **Setup -> Advanced setup -> Communication -> Ethernet -> Configuration Web server -> Remote control**, select **"Yes"** or under
2. **Expert -> Communication -> Ethernet -> Configuration Web server -> Remote control**, select **"Yes"**.

10.5 Data analysis and visualization using analysis software

The analysis software offers centralized data management with visualization for recorded data.

This enables the data of a measuring point to be fully archived, e.g.:

- Measured values
- Diagnostic events
- Protocols

The analysis software stores data in an SQL database. The database can be operated locally or in a network (client/server). A free version of the PostgreSQL database can be enabled during installation of the analysis software.



For details, see the Operating Instructions for the FDM analysis software

10.5.1 Structure/layout of a CSV file

The CSV files are comprised as follows:

File name (=serial number + file number + configuration number + date and start time + data type)	Description	Coding
H4000504428 0000000279 0000000185 2013-11-07 11-18-00 GROUP01.csv	Contains all the measured values of the group from the starting time indicated in the file name. An individual CSV file is created for each group.	ANSI
H4000504428 0000000279 0000000185 2013-11-07 11-30-00 ANALYSIS01.csv	Contains the signal analyses of the active channels from the starting time indicated in the file name. An individual CSV file is created for every analysis (01 - 04).	ANSI
H4000504428 0000000279 2013-11-07 11-18-34 EVENTS.csv	Contains the event logbook from the starting time indicated in the file name.	Unicode UTF-8 (see the notes in the following section)

Meaning of the values under "Status" and "Limit" when analyzing a group:

Status of the channel:

- 0: OK
- 1: Cable open circuit
- 2: Input signal too high
- 3: Input signal too low
- 4: Invalid measured value
- 6: Error value, i.e. not the calculated value (for mathematics if an input variable is invalid)
- 7: Sensor/input error
- 9: Value uncertain
- Bit 8: Not assigned
- Bit 9: Alarm storage
- Bit 10..13: Not assigned
- Bit 14: Use error value
- Bit 15: Not assigned

General status:

- 1: High speed storage is active
- 2: Additional hour for summer/normal time changeover

Note: A combination of 1 and 2 is also possible.

Status of the limit value ("Limit"):

- 0: OK, no limit value has been violated
- Bit 0: Lower limit value
- Bit 1: Upper limit value
- Bit 2: Increasing gradient
- Bit 4: Decreasing gradient

Note: A combination is also possible.

10.5.2 Importing UTF-8-encoded CSV files into spreadsheets

You might encounter problems displaying information if importing UTF-8-encoded CSV files directly into more recent versions of MS Excel™ (2007 and higher).

Importing CSV data from the event logbook ("Events") into MS Excel™ (version 2007 and higher):

1. In the menu, select **"Data -> Get external data - From text"**
2. MS Office 365 and higher: In the menu select **"Data -> From text/CSV"**
3. Select the CSV file
4. Follow the instructions in the wizard
5. Select file origin **"Unicode UTF-8"**

10.6 Changing group

The group to be displayed can be changed in the main menu under **"Operation -> Change group"**. Alternatively, the group can also be changed by turning the navigator.

 Only the **active** groups are displayed here. The settings for this can be made in the main menu under **"Setup -> Advanced setup -> Application -> Signal groups -> Group x"**.

10.7 Locking operation

Local operation can be blocked in the main menu under **"Operation -> Lock operation"** to prevent unintended or incorrect operation (e.g., when cleaning the device).

 The device is unlocked by pressing the navigator or the OK operating key for 3 s. When using an external keyboard, the device is unlocked with the key combination "Ctrl-Alt-Del".

10.8 Logging in/logging out

Log onto the device or log off the user currently logged on.

 Only for role-based access protection →  37

10.9 SD card/USB stick

10.9.1 Operating principle of SD card and USB stick

Without affecting the internal memory, data packets are copied block by block (min. 1 x daily, midnight) to the SD card. Once a new SD card is inserted, the device starts saving the data automatically after 5 minutes. The use of a USB stick is only recommended if certain data ranges should be copied.

The USB stick is **not** used for the continuous storage of measured values, i.e. it is **not** updated automatically.

Data are saved in two different folders on the storage media depending on the storage method:

- All data are copied cyclically to the **rec_data_<Device name>** folder if a data packet is complete or the function **"Update"** is activated under **"Operation -> SD card/USB stick -> Update"**.
- The data for the selected time range that was selected under **"Operation -> SD card / USB stick -> Save measured value"** are copied to the **rng_data_<device name>** folder. Copying these data does not affect the storage of the data in the **rec_data_<device name>** folder.



- Only use new, formatted SD cards that are recommended by the manufacturer (see "Accessories" → 64).
- During normal operation, the used memory space on the SD card or USB stick is displayed on the top right of the display ("SD: xx%" or "USB: xx%"). Dashes "-" on this display mean that no SD card is inserted.
- The SD card must not be write-protected.
- Prior to removing the external data carrier, select **"Operation -> SD card/USB stick -> Update"**. The current data block is closed and saved to the external data carrier. This ensures that all the current data (up until the last save) is included on the data carrier.
- Depending on the device configuration (see **"Setup -> Advanced setup -> System -> Ext. memory -> Warning at"**), an acknowledgeable message on the display notifies the user that the external data carrier has to be changed before the data carrier is 100% full.
- The device keeps track of which data have already been copied onto the SD card or USB stick. If the data carrier is not changed in time or if no SD card is inserted, the new external data carrier is filled with the missing data from the internal memory - insofar as the data are still in the memory. As measured value acquisition/recording is assigned the highest priority, it may take several minutes in this case for the data to be copied from the internal memory to the SD card or USB stick.

10.9.2 Functions relating to the SD card or USB stick

For functions to save measured data and device settings on a removable medium, see the main menu under **"Operation -> SD card / USB stick"** (only if an SD card or USB stick is provided).

Remove safely:

All internal access is terminated to ensure safe removal of the storage medium from the device. A message is displayed when the storage media can be removed. If the SD card is not removed, the device automatically starts to save data to the storage medium again after 5 minutes.



Only remove the data storage medium using this function; otherwise, data may be lost!

Update:

Measurement data not yet saved on the storage medium are now saved. This may take a moment. Measured value acquisition is running in parallel and has top priority.



Data from several devices can be saved onto one storage medium.

▪ Save measured values:

A user-definable time range can be saved on the data storage medium.

▪ Load setup:

Loads device settings (setup) from the storage medium onto the device.

▪ Save setup:

All device settings (setup) are saved onto the storage medium. They can be archived or used for other devices.

- **Save setup as RTF:**

Saves the setup on the storage medium in a readable format as an RTF file (rich text format).

The RTF file can be opened and formatted using suitable word processing software (e.g., MS Word), making it easy to print.

- **Screenshot:**

Save the current measured value display as a bitmap on the SD card or USB stick.

- **Update firmware:**

Loads new firmware onto the device. Only visible if a firmware file is provided on the SD card or USB stick.



Caution: The device will restart. Save the setup and measured values beforehand on the SD card or USB stick.

Import SSL certificate:

Uploads an SSL certificate (X.509) to the device. Certificates are needed so that an SSL connection can be established in order to send encrypted e-mails, for instance. Certificates are available from your network administrator or provider. The following are supported: DER, CER and CRT (binary or Base64-encoded).

Only visible if an SSL certificate is provided on the SD card or USB stick.

10.9.3 Notes on e-mail encryption

In addition to sending unencrypted e-mails, it is also possible to send encrypted e-mails via SSL (TLS). To do so, you can choose either of two ways:

- **By SMTPS:** fully encrypted via port 465.

The complete connection runs over TLS. The port is 465 by default but this value can be changed in the Setup.

- **Via port 25 or 587 using STARTTLS.**

With this method the device first establishes a plain SMTP connection via port 25 and continues this connection following agreement and switchover to encryption.

The required process can be selected as follows: **"Setup -> Advanced setup -> Application -> E-mail -> Server requires SSL"** or under **"Expert -> Application -> E-mail -> Server requires SSL"**.

TLS V1.0 (=SSL 3.1), V1.1 and V1.2 are supported. Older standards are not supported. The encryption method is automatically agreed with the counterparty.

A certificate must be installed in order to be able to send encrypted e-mails. These certificates can be obtained from your e-mail service provider. The following file formats are supported:

- *.CER: DER- or Base64-encoded certificate
- *.CRT: DER- or Base64-encoded certificate
- *.DER: DER-encoded certificate



The file name of the certificate may only contain the following characters: a-z, A-Z, 0-9, +, -, _, #, (,), !

To establish an SSL connection, the device automatically selects the certificate that best suits the counterparty from all the installed certificates. An error message is displayed if the device does not have any of the required certificates.



When e-mail encryption is enabled, no e-mails can be sent if a valid certificate is not available or if the certificate has expired.

10.9.4 Notes on WebDAV encryption

In addition to sending unencrypted data to the WebDAV server, it is also possible to send encrypted data via SSL (TLS). All data are sent in encrypted format via the SSL port of the external WebDAV server.

The complete connection runs over TLS. The port is 80 by default but this value can be changed in the Setup. The procedure to be used can be selected as follows: **"Setup ->**

Advanced setup -> Application -> WebDAV Client -> Enable -> Yes (SSL)" or under "Expert -> Application -> WebDAV Client -> Enable -> Yes (SSL)".

TLS V1.0 (=SSL 3.1), V1.1 and V1.2 are supported. Older standards are not supported. The encryption method is automatically agreed with the counterparty.

A certificate must be installed in order to be able to send encrypted data. These certificates can be obtained from your WebDAV server service provider. The following file formats are supported:

- *.CER: DER- or Base64-encoded certificate
- *.CRT: DER- or Base64-encoded certificate
- *.DER: DER-encoded certificate

 The file name of the certificate may only contain the following characters: a-z, A-Z, 0-9, +, -, _, #, (,), !

To establish an SSL connection, the device automatically selects the certificate that best suits the counterparty from all the installed certificates. An error message is displayed if the device does not have any of the required certificates.

 When WebDAV client encryption is enabled, no data can be sent if a valid certificate is not available or if the certificate has expired.

10.9.5 SSL certificates

Importing an SSL certificate

Installing a certificate via SD card or USB stick:

1. Copy a certificate on a PC to an SD card or USB stick
2. Insert the SD card or USB stick into the device
3. In the main menu, select **"Operation -> SD card (or USB stick) -> Import SSL certificate"**
4. Select the required certificate from the list and follow the dialog on the display.

Installing a certificate via the web server:

1. On the web server, select **"Data management --> Import SSL certificate"**
2. Select the file
3. Start the process by clicking **OK**

 Up to 3 certificates can be installed simultaneously.

Verifying the installed SSL certificates

The installed certificates can be verified in the main menu under **"Diagnostics -> Device information -> SSL certificates"**. The parameter list displays the most important certificate information, such as the key identifier, organization, and validity period.

 Not all fields are completed on all the certificates. This is because the parties issuing the certificates do not make all the information available.

Deleting an SSL certificate

In the main menu select the certificate to be deleted under **"Diagnostics -> Device information -> SSL certificate -> Certificate"** and select **"Yes"** under **"Delete certificate"**.

Period of validity of certificates

Certificates are valid for a defined period (valid from ... to ...). The device checks the certificate validity once a day or each time the device is rebooted. 14 days before the

certificate expires the device notifies the user daily (by e-mail, screen display, entry in event logbook) that the certificate will expire shortly.

If the certificate has expired the alarm relay switches (if activated) and a message is displayed on the screen. An entry is also made in the event logbook. If a certificate is deleted all errors related to this certificate are reset.

10.10 Show data logging

You can scroll through the saved measured values in the main menu under **"Operation -> History"**. Turn the navigator clockwise or counterclockwise to scroll back and forth between the measured value curves. Press the navigator to configure other settings for historical data (e.g., change the scroll speed, time scaling or display mode) and end display of historical data.



The gray header on the screen and the  symbol in the status bar indicate that historical values are being displayed. In the instantaneous value display the color of the header is blue.

10.10.1 Historical data: Change group

It is possible to change the group to be displayed in the historical data under **"Operation -> Change group"** in the data history.

10.10.2 Historical data: scroll speed

Specify how fast the display should scroll when the navigator is turned.

It is possible to change the scroll speed in the historical data under **"Operation -> Scroll speed"** in the data history.

The scroll speed can also be set via the soft key with the arrow symbol < or >. The speed can be changed from < (slow) to <<<< (fast) by pressing the soft key repeatedly.

10.10.3 Historical data: Time scaling

It is possible to scale the displayed time range in the historical data under **"Operation -> Time scaling"** in the data history.



Notes:

- "1:1" option: Every measured value is displayed.
- "1:n" option: Only every nth measured value is displayed (increases the displayed time range).
- No interpolation is performed, nor is the mean value determined.
- If the value for "n" is large, this can result in extended loading times.
- Time scaling does not affect the process for storing the measured value.
- The time range displayed per screen for the currently set time scaling is also displayed in the menu.

10.10.4 Historical data: Time range displayed

The displayed time range is shown in the historical data under **"Operation -> Time range displayed"** in the data history. This tells the user which time range is displayed per screen in the standard memory cycle.



If the alarm cycle differs from the standard memory cycle, this is not taken into consideration.

10.10.5 Historical data: Screenshot

The current measured value display can be saved as a bitmap to an SD card or USB stick in the historical data under **"Operation -> Screenshot"**.

10.10.6 Historical data: Change the display mode

It is possible to change the display mode of the active group in the historical data under **"Operation -> Change display mode"** in the data history.

The following display modes are possible: Curve, Curve in ranges, Waterfall, Waterfall in ranges.



The various display modes have no influence on the signal recording.

10.11 Signal analysis

The analyses saved in the device are displayed in the main menu under **"Operation -> Signal analysis"**.

- **Actual intermediate analysis:**

The current (i.e. not yet completed) intermediate analysis can be displayed here.

- **Actual day:**

The current (i.e. not yet completed) daily analysis can be displayed here.

- **Actual month:**

The current (i.e. not yet completed) monthly analysis can be displayed here.

- **Actual year:**

The current (i.e. not yet completed) annual analysis can be displayed here.

- **Search:**

Search and display of analyses. Select which analyses the system should search for/display: Intermediate analysis, Daily analysis, Monthly analysis, Annual analysis.

10.12 Search in trace

In the main menu, the internal memory can be searched for events or times under **"Operation -> Search in trace"**.

Search for events: The event logbook forms the basis for searches for events. To make it easier to search for specific events (e.g., setup changes), you can use the search filter to select and search for the desired events. In the standard all events are shown. In the event list displayed, it is possible to select an event and go directly to this point in the history (if still in the memory).

Search for time: When searching for a time in the past, the user can enter a date and a time to specify when the system should start displaying historical data. Once the date/time have been entered and confirmed, the display goes to the selected time in the active group.

10.13 Changing the display mode

The display mode of the active group can be changed in the main menu under **"Operation -> Change display mode"**.

The following display modes are possible: Curve, Curve in ranges, Waterfall, Waterfall in ranges, Bargraph and Digital display.



The various display modes have no influence on the signal recording.

10.14 Adjusting the brightness of the display

You can adjust the brightness of the display in the main menu under **"Operation -> Adjust brightness"**:

Parameter	Possible settings	Description
Adjust brightness	0-100 Default: 80	Sets the brightness of the display

10.15 Limit values

It is possible to change the limit values during operation in the main menu under **"Operation -> Limits"**.

 This function must be enabled beforehand in the main menu under **"Expert -> Application -> Limits -> Change limits: outside of setup also"**.

Detailed description of the limit values: →  137

10.16 WebDAV client

The function of the WebDAV client is to transmit recorded data automatically to a connected WebDAV server (e.g., NAS drive). The recorded data are sent to the connected WebDAV server cyclically every 15 minutes. The generated files correspond to the files that are automatically saved to the SD card.

The client is configured via **"Setup -> Advanced setup -> Application -> WebDAV Client"**. The settings under **"Setup -> Advanced setup -> System -> External memory"** are also used, with the exception of the settings for the SD card (Memory build-up, Warning and Relays). The memory is regarded as a stack memory.

Detailed description of the parameters: →  153

 Note: With the WebDAV client, the data are transmitted to the WebDAV server in accordance with the selection made in the .CSV or "Protected format".

10.16.1 Access to the WebDAV server via HTTP (HTML)

Address entry in browser: **http://<ip-address>/webdav**

The data are updated cyclically every 15 minutes. The data are automatically updated each time a user logs in.

 Note: Leading zeros in IP addresses must not be entered (e.g., enter 192.168.1.11 instead of 192.168.001.011).

 Administrator or service authentication is required. ID and password administration is performed in the main menu under **"Setup -> Advanced setup -> Communication -> Ethernet -> Configuration Web server -> Authentication"**.

ID default value: admin; Password: admin

Note: The password must be changed during commissioning.

Note: For devices with a stainless steel front and touchscreen, the data are always made available in "Protected format" via the WebDAV server.

11 Diagnostics and troubleshooting

The following section contains an overview of possible causes of errors to provide initial assistance during troubleshooting.

11.1 General troubleshooting

WARNING

Danger! Electric voltage

- Do not operate the device in an open condition for error diagnosis!

Display	Cause	Remedy
No measured value display; no LED lit	No supply voltage connected	Check supply voltage of device.
	Supply voltage is applied; device or power unit is defective	Replace the power unit or device.
Diagnostic message is displayed	For a list of diagnostic messages, see the next section.	

 **Dead pixels:** Dead pixels refer to pixels on LCD and TFT displays that are defective due to the technology or manufacturing techniques used. The TFT display used can have up to 10 dead pixels (Class III as per ISO 13406-2). These dead pixels do not entitle the user to a warranty claim.

11.2 Troubleshooting

The Diagnostics menu is used for the analysis of the device functions and offers comprehensive assistance during troubleshooting. Always proceed as follows to locate the cause of device errors or alarms.

General troubleshooting procedure

1. Open diagnostic list: lists the 30 most recent diagnostic messages. This can be used to determine which errors are currently present and whether an error has repeatedly occurred.
2. Diagnosis of current measured values: Verify the input signals by displaying the current or scaled measuring ranges. To verify calculations, call up calculated auxiliary variables if necessary.
3. Most errors can be rectified by performing steps 1 and 2. If the error persists follow the troubleshooting instructions in the following sections.
4. If this does not rectify the problem, contact the Service Department. Any time you contact the Service Department please always have the diagnostic number and the information in the main menu under **"Diagnostics -> Device information"** (program name, serial number etc.) to hand.

11.2.1 Device error/alarm relay

One relay can be used as an alarm relay. The selected output/relay switches if the device detects a system error (e.g., hardware defect) or a malfunction (e.g., cable open circuit). The alarm relay is assigned in the main menu under **"Setup -> Advanced setup -> System -> Fault switching -> Relay x"**. **Factory setting: Relay 1.**

This "alarm relay" switches if "F"-type or "S"-type errors occur, i.e. "M"-type or "C"-type errors do not switch the alarm relay.

11.3 Diagnostic information on the local display

The diagnostic message consists of a diagnostic code and event text.

The diagnostic code consists of the status signal as per NAMUR NE 107 and the event number.

Status signal (letter in front of event number)

- **F = Failure.** A malfunction has been detected.

The measured value of the affected channel is no longer reliable. The cause of the malfunction is to be found in the measuring point. If a controller is connected, it should be switched to manual mode. This status signal can be assigned to an alarm relay in the advanced setup.

- **M = Maintenance required.** Action must be taken as soon as possible.

The device still measures correctly. Immediate measures are not necessary. Proper maintenance efforts may prevent a possible malfunction in the future.

- **S = Out of specification.** The measuring point is being operated outside specifications. Operation is still possible. There is the risk of increased wear, a shorter operating life or less accurate measurements. The cause of the problem is to be found outside the measuring point.

- **C = Function check.** The device is in Service mode.

Diagnostic code	Event text	Description	Remedial action
F100	Sensor/input error!	Sensor/input error	Check connections and parameters.
F101	Cable open circuit	Cable open circuit	Check connections.
F105	Invalid value!	Measured value is invalid (when calculating --> NAN)	Check connections and process variables.
F201	Device fault	Device error	Contact the Service Department.
F261	Error: RAM	No access to RAM	Contact the Service Department.
F261	Error: Flash	No access to flash	Contact the Service Department.
F261	Error: SRAM	No access to SRAM	Contact the Service Department.
F261	Analog card x is out of order!	Hardware defect detected	Contact the Service Department, replace card.
F261	Power supply out of order!	Hardware defect detected	Contact the Service Department, replace power unit.
M284	Firmware update	Firmware has been updated	No action required. Message can be acknowledged.
M290	The internal flash memory has reached the end of its lifetime. Please replace the device.	The internal flash memory is defective	Replace device.
F301	Error: Cannot load setup	Setup defective	Switch the device off and then on again, re-configure, contact the Service Team.
M302	Setup restored from backup	Setup has been loaded from backup	Check setup.
F303	Error: Device data	Device data defective	Contact the Service Department.
M304	Backup: Device data	Device data defective. However, it was possible to continue working with the backup data	Check settings (serial number).
F307	Error: Customer preset value defective	Customer preset value defective	
F309	Error: Date/time is not set	Invalid date/time (e.g., internal battery is empty)	Device was switched off too long. The date/time must be set again. Battery needs to be replaced (contact the Service Team).
F310	Error: Cannot save setup	The setup could not be saved	Contact the Service Department.
F311	Error: Device data	The device data could not be saved	Contact the Service Department.
F312	Error: Calibration data defective	The calibration data could not be saved	Contact the Service Department.
F312	Analog card x is not calibrated!	Analog card x is not calibrated. The device works with default values, the measured values may be inaccurate under certain circumstances.	Contact the Service Department.
M313	SRAM has been defragmented	SRAM was defragmented after firmware update	No action required. Message can be acknowledged.

Diagnostic code	Event text	Description	Remedial action
F314	Error: Option code	Activation code is no longer correct (incorrect serial number/program name). Option has been switched off and setup preset has been performed.	Enter new code.
M315	No IP address could be obtained from the DHCP server!	No IP address could be obtained from the DHCP server	Check the network cable.
M316	Invalid MAC address!	No or incorrect MAC address	Contact the Service Department.
M317	Battery voltage < 2.5 V. Replace the battery!		Battery needs to be replaced (contact the Service Team).
F348	Firmware cannot be updated: ■ Checksum incorrect ■ Firmware incompatible!	Firmware update has been aborted because the firmware file is damaged or is not compatible with this device	Contact the Service Department.
M350	Measured value acquisition interrupted for calibration/ service work. Measured value acquisition restarted.	Measured value acquisition was interrupted/ reactivated for service/maintenance purposes Causes include: ■ Calibration of inputs/outputs ■ Firmware update	No action required. Message can be acknowledged.
M351	The device will restart.	The device is rebooting Causes include: ■ Following a firmware update ■ Change to device options	No action required. Message can be acknowledged.
F431	Error: Calibration	Calibration data missing	Contact the Service Department.
M502	Device is locked!	Device is locked. The message appears when an attempt is made to update the firmware, for example	Check lock per digital channel.
F510	Setup was corrected	The device has detected that the configuration is no longer correct. All the parameters affected have been reset to the factory default settings. Possible causes: ■ Input cards have been removed or replaced by another type ■ An input card is no longer working correctly A firmware update has caused compatibility problems. Note: This error message appears each time the device is restarted until at least one change has been made to the configuration.	Check the configuration of the device. If hardware has been replaced, no other action is needed (recommendation: change the operating language so that the error message no longer appears after the next restart).
M520	SMTP: Name could not be resolved (DNS)! SNTP: Name could not be resolved (DNS)!	Problem with name resolution (DNS) SMTP: e-mail SNTP: time synchronization	Check the corresponding settings.
M528	Setup is not compatible with this firmware	An attempt was made to load a setup which is not compatible with this firmware (e.g., another device type)	Check whether the correct file has been selected.
M530	Cannot copy setup.	An error occurred when a setup was loaded from an SD card or USB stick An error occurred when a setup was saved to an SD card or USB stick	Replace the SD card or USB stick. Setup file defective?
S901	Input signal too low	Input signal too low	Check connections and parameters. Check connected sensor/transmitter.
S902	Input signal too high	Input signal too high	Check connections and parameters. Check connected sensor/transmitter.
M905	Set point x	Set point x has been violated	Note: Diagnostic number only occurs if e-mails are sent.

Diagnostic code	Event text	Description	Remedial action
M906	End limit value x	Set point x no longer violated	Note: Diagnostic number only occurs if e-mails are sent.
F910	This software is not enabled for this device.	The current firmware is not enabled for this hardware	Contact the Service Department.
M920	Too many messages that need to be acknowledged!	There are too many messages that need to be acknowledged. Another message could not be added.	Acknowledge messages.
M921	SD card x% full.	External memory is full	Replace SD card.
M922	No cyclic measurement transfer	The instantaneous values were not read out for a set time	
M922	No cyclic transfer	The device was not read out via fieldbus for a configurable time	Check the communication of the fieldbus. Check PLC.
M924	Error accessing SD card! Error accessing USB stick! SD card is not or wrong formatted! USB stick is not or wrong formatted!	Impossible to access the removable data medium. Causes include: Memory is larger than 32 GB Invalid format (only FAT or FAT32 are permitted)	Check/replace removable data medium.
M925	SD card is write-protected!	SD card is write-protected	Remove write protection.
M927	Insufficient space free on data storage medium!	An attempt was made to save to the SD card or USB stick (setup, screenshot, etc.), but not enough free memory space is available.	Use other SD card/USB stick. Delete files that are no longer needed from the SD card / USB stick.
M927	Insufficient space free on data storage medium!	An attempt was made to save to the WebDAV server but not enough free memory space is available.	Use other WebDAV server. Delete files that are no longer needed from the WebDAV server.
F929	File is damaged!	The file that should be loaded is damaged/invalid (e.g., wrong checksum). This message can occur in connection with the following actions, for instance: ▪ Loading setup from SD card/USB stick ▪ Firmware update	Create file again, use other storage medium.
M940	E-mail could not be sent! (x)	E-mail could not be sent Optional: Error code (x) from server: e.g.: ▪ 451: Requested action aborted: local processing error ▪ 554: Transaction failed. Possible reason: e-mail was not sent as suspected of being SPAM ▪ 1: No free buffer ▪ 2: No receiver specified	Check settings/network connection ▪ 451: Try again ▪ 554: Use other e-mail provider
M941	No connection to the e-mail server!	A connection to the e-mail server could not be established because ▪ The entered connection data are incorrect ▪ The connection is lost	Check settings/network connection.
M942	SMTP: Fault occurred (x).	An error occurred when sending an e-mail x= error code: 0: SMTP was switched off when the mail was being sent 3: TCP/IP connection was denied 4: TCP/IP connection error 5: SMTP server denied 6: Error during authentication 7: Connection unexpectedly lost 8: Server responded with error code 9: Timeout 10: Internal protocol error	Check settings/network connection.
M944	SMTP: authentication failed!		Check settings/network connection.

Diagnostic code	Event text	Description	Remedial action
M945	SNTP: Time was not synchronized!	Time could not be synchronized via SNTP Possible reasons: ■ SNTP server temporarily unavailable ■ Settings not correct	■ Check settings. ■ Check whether the error occurs often. If it does, choose another time server.
M945	SNTP server 1 not responding. Try server 2.	Time could not be synchronized via SNTP Possible reasons: ■ SNTP server temporarily unavailable ■ Settings not correct	■ Check settings. ■ Check whether the error occurs often. If it does, choose another time server.
M946	Screenshot could not be saved (x)!	Screenshot could not be created Possible causes (x): 0: Error when writing 1: Insufficient free space 2: Bitmap could not be created 3: SD card/USB stick not available or not yet ready	Check/replace the SD card or USB stick.
M947	Modem could not be initialized! Check the cable and modem.	The connected modem could not be initialized by the device	Check the cable and modem.
M950	Cannot load SSL certificate.	Cannot load SSL certificate. Cause: ■ Invalid file format ■ File is damaged	■ Use a certificate with a valid file format. ■ Import certificate to device again.
F951	SSL certificate '...' has expired!	Certificates have an expiry date, i.e. they must be renewed from time to time	Install a new certificate.
M952	SSL certificate '...' expires on ...!	The device warns the user shortly before the certificate expires	Install a new certificate.
M953	x certificates have already been installed. Delete certificates that are no longer required.	The device can manage max. 3 X.509 certificates	Delete a certificate that is already installed and no longer required.
M954	SSL certificate not found: key ID = ...	Unable to establish SSL connection as a suitable certificate is not installed	Install a suitable certificate.
M955	SSL connection denied!		
M980	No connection to the WebDAV server	A connection to the WebDAV server could not be established because the entered connection data are incorrect or the connection has been interrupted	Check settings/network connection.
M981	WebDAV: authentication failed!		Check settings.
M982	WebDAV: directory or file could not be created!	Configured directory path not available.	Create a directory manually in the WebDAV server
M983	WebDAV: Fault	An unassigned error has occurred. The error is displayed in English.	
M984	No Ethernet connection.	The device is not connected by an Ethernet cable	Establish cable connection.
M985	The test cannot be carried out because data are currently being copied by WebDAV.		Repeat later.
M988	Server certificate cannot be loaded. Invalid format.	The file must be Base64-encoded Format: X.509 certificate V3 incl. extension	Create the certificate again according to the specifications.
M989	Private key cannot be loaded. Invalid size/format.	The file must be Base64-encoded. Only RSA keys with max. 2048 bits are supported.	Create the certificate again according to the specifications.
M990	Server certificate cannot be installed.	General error. Unable to read or write to file.	Check the files on the USB stick and create again if necessary. If the error persists, contact the Service Department.

11.4 Pending, current diagnostic messages

The diagnostic message that is currently active, the last diagnostic message and the last device restart are displayed in the main menu under **"Diagnostics -> Actual diagnostics"**, **"Diagnostics -> Last diagnostics"** and under **"Diagnostics -> Last restart"**.

11.5 Diagnostic list

The last 30 diagnostic messages are displayed in the main menu under **"Diagnostics -> Diagnosis list"** (messages with Fxxx, Sxxx or Mxxx-type error numbers).

The diagnostic list is designed as a ring memory. When the memory is full, the oldest messages are automatically overwritten without generating a message.

The following information is saved:

- Diagnostic number
- Error text
- Date/time

11.6 Event logbook

Events such as limit value violations and power failures are displayed in chronological order in the event logbook. It can be found in the main menu under **"Diagnostics -> Event logbook"**. Individual events can be selected and details displayed.

11.7 Device information

Important device information such as serial number, firmware version, device name, device options, memory information, SSL certificates etc. are displayed in the main menu under **"Diagnostics -> Device information"**.



For further information open the online help on the device.

11.8 Diagnostics of measured values

Displays the current measured values in the main menu under **"Diagnostics -> Measured values"**. The input signals can be verified here by displaying the scaled and calculated values. To verify calculations, call up calculated auxiliary variables.

11.9 Diagnostics of outputs

Displays the current states of the outputs (relays 1-6) in the main menu under **"Diagnostics -> Outputs"**.

11.10 Simulation

Various functions/signals can be simulated for test purposes here.

NOTICE

Invoke simulation: for the simulation of the relays, see the main menu under "Diagnostics -> Simulation". For the simulation of the measured values, see the main menu under "Expert -> Diagnostics -> Simulation".

Only the simulated values are recorded during simulation. The simulation is recorded in the event logbook.

- Do not start simulation if measured value recording must not be interrupted!

11.10.1 E-mail test

A test mail can be sent to the selected recipient in the main menu under **"Diagnostics -> Simulation -> E-mail"**.

 At least one e-mail address must be set beforehand.

11.10.2 Testing the WebDAV client

A test file can be sent to the selected WebDAV server in the main menu under **"Diagnostics -> Simulation -> WebDAV Client"**.

 The settings for the WebDAV server to be addressed must be set beforehand under **"Setup -> Advanced setup -> Application -> WebDAV Client"**.

11.10.3 Testing time synchronization/SNTP

Time synchronization (SNTP setting) can be tested in the main menu under **"Diagnostics -> Simulation -> SNTP"**.

 SNTP must be enabled beforehand in the main menu under **"Setup -> Advanced setup -> System -> Date/time set-up -> SNTP"**.

Note: The test can take some time.

11.10.4 Relay test

The relay selected under **"Diagnostics -> Simulation -> Relay x"** can be switched manually in the main menu.

11.11 Initializing the modem

Initializes the modem connected (to automatically answer calls). The modem must support the complete AT command syntax.

- 
 - Set the baud rate in the main menu under **"Setup -> Advanced setup -> Communication -> Serial interface"** and select **"RS232"** as the interface type.
 - Connect the modem to the RS232 interface of the device. Only use the modem cable, which is available as an accessory, for this purpose.

 A GSM modem can only be initialized if a SIM card is inserted and the PIN is entered or the prompt to enter the PIN has been disabled.

11.12 Resetting the measuring instrument

The device can be reset to the as-delivered state with a PRESET. This function should only be performed by a service technician.

The function can be found in the main menu under **"Expert -> System -> PRESET"**

 PRESET is only visible under "Expert" once the service code has been entered.

Procedure for resetting the measuring instrument

The PRESET returns all parameters to the factory default setup! The internal memory content is deleted!

- ▶ Save the setup and measured values on the USB stick or SD card. Then perform a PRESET.
 - ↳ The device is reset to the factory default settings.

11.13 Clear memory

-  Clear internal memory after commissioning so that the analysis software does not contain any unnecessary data.

11.14 Reset analysis

-  The analyses should be reset after commissioning so that the analysis software does not contain any unnecessary data.

11.15 Updating the device software ("firmware")

Update the device software ("firmware") via USB stick, SD card or web server.

-  The function to update the firmware via the web server must be enabled under **"Expert -> Communication -> Ethernet -> Configuration Web server"**.

There are two ways to update the firmware:

- In the main menu under **"Operation -> SD card or USB stick -> Update firmware"**
- In the web server under **"Data management -> Update firmware"**

-  Make sure that the setup and measured values are saved beforehand on the USB stick/SD card.

Only a service technician should update the device software ("firmware").

After the firmware update, the device restarts.

If an older firmware version (< V2.04.00) is installed on the device, the internal memory must be cleared under **"Expert -> System"**.

12 Maintenance

No special maintenance work is required for the device.

12.1 Cleaning

12.1.1 Cleaning of surfaces not in contact with the medium

- Recommendation: Use a lint-free cloth that is either dry or slightly dampened using water.
- Do not use any sharp objects or aggressive cleaning agents that corrode the surfaces (e.g. displays, housing) and seals.
- Do not use high-pressure steam.
- Observe the degree of protection of the device.

-  The cleaning agent used must be compatible with the materials of the device configuration. Do not use cleaning agents with concentrated mineral acids, bases or organic solvents.

13 Repair

13.1 General notes

The device has a modular design and repairs can be carried out by the customer's electrotechnical personnel. For more information on service and spare parts, contact the supplier.

13.2 Spare parts

 Contact the supplier where necessary.

13.3 Return

The requirements for safe device return can vary depending on the device type and national legislation.

1. Ask your supplier for information on returning the device.
2. If returning the device, pack the device in such a way that it is reliably protected against impact and external influences. The original packaging offers the best protection.

13.4 Disposal

13.4.1 IT security

Observe the following instructions before disposal:

1. Delete the data
2. Reset the device

13.4.2 Removing the measuring instrument

1. Switch off the device
2. Carry out the mounting and connection steps from the "Installing the measuring instrument" and "Connecting the measuring instrument" sections in reverse order. Observe the safety instructions.

13.4.3 Disposing of the measuring instrument


 



 If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

14 Accessories

Various accessories are available for the device, and can be ordered with the device or at a later stage. Detailed information on the relevant order code is available from the supplier.

14.1 Device-specific accessories

Description
"Industrial Grade" SD card, industry standard, 1GB
Analysis software with SQL database support (1 x workstation license, Professional version on DVD)
OPC server software (full version on CD)

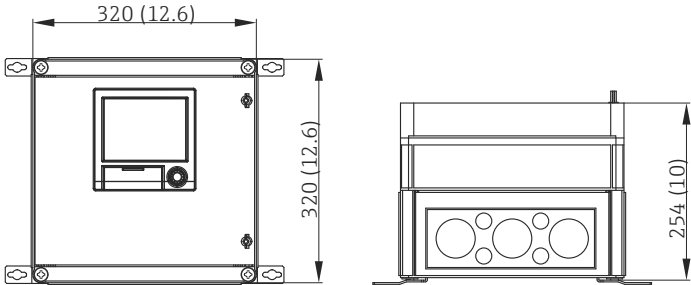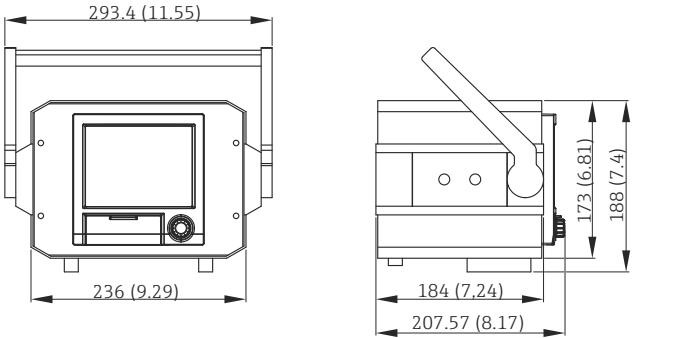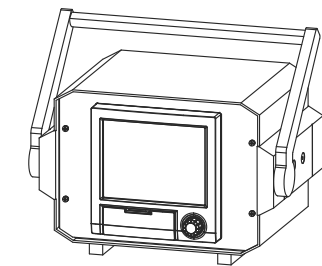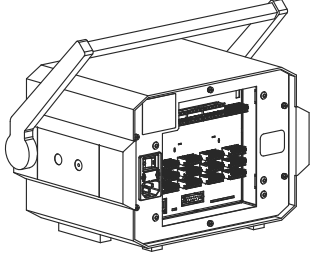Description
Accessories for RXU10 data manager
Designation: Cable set RS232 for connection to PC or modem USB - RS232 converter Cable USB-A - USB-B, 1.8 m (5.9 ft)
Field housing IP65 (for panel-mounted device)  
Desktop housing (for panel-mounted device), cable with Schuko plug Desktop housing (for panel-mounted device), cable with US plug Desktop housing (for panel-mounted device), cable with Swiss plug   

14.2 Instructions for enabling a software option

Various device options can be enabled via an activation code. Available options can be ordered as an accessory and can be ordered separately. →  63. Once you place your order, you will receive instructions on how to activate the option and a code which must be entered under **"Main menu -> Expert -> System -> Device options -> Activation code"**.

15 Appendix

15.1 Operating items in the "Expert" menu

The parameter groups for the Expert setup contain all the parameters of the operating menus: System, Input and Output Setup, Communication, Application, Diagnostics as well as other parameters that are reserved for experts only.

 For most settings, the "Setup" or "Expert" menu must be quit before the settings are adopted. However, settings such as the date/time are accepted immediately.

Direct access	
Navigation	 Expert → Direct access
Description	Direct access to active operating items (rapid access). Entering the direct access code takes you directly to the desired operating parameter. The direct access code is displayed in the Setup menu on the top right of the display (e.g., 00000-000).
Text entry	(e.g., 00000-000)

15.1.1 “System” submenu

Basic settings that are needed to operate the device (e.g., date, time, etc.)

Language	
Navigation	 Expert → System → Language Direct access code: 010000-000
Description	Select the operating language of the device
Options	German, English, Spanish, French, Italian, Dutch, Polish, Portuguese, Russian, Swedish, Czech, Japanese, Chinese (Simplified), Chinese (Traditional)
Factory setting	English or preset to customer's preferred language

Device tag	
Navigation	 Expert → System → Device tag Direct access code: 000031-000
Description	Individual device tag
User entry	Text entry (max. 32 characters)
Factory setting	Unit 1

Temperature unit

Navigation	 Expert → System → Temp. unit Direct access code: 100001-000
Description	Selection of temperature unit. All directly connected thermocouples or resistance thermometers (RTD) are displayed in the preset engineering units.
Options	°C, °F, K
Factory setting	°C

Decimal separator

Navigation	 Expert → System → Decimal separator Direct access code: 100003-000
Description	Select the decimal separator to be used when displaying numbers.
Options	Comma, point
Factory setting	Comma

Fault switching

Navigation	 Expert → System → Fault switching Direct access code: 100002-000
Description	The selected output/relay switches if the device detects a system error (e.g., hardware defect) or a malfunction (e.g., cable open circuit).
Options	Not used, Relay x All the available relays are displayed.
Factory setting	Relay 1

Keyboard layout

Navigation	 Expert → System → Keyboard layout Direct access code: 100020/000
Description	Select keyboard layout. Only relevant if external keyboard is used.

Options	Germany, Switzerland, France, USA, USA International, UK, Italy
----------------	---

Factory setting	Germany
------------------------	---------

Swap mouse buttons

Navigation	 Expert → System → Swap mouse buttons Direct access code: 100050/000
-------------------	--

Description	Swap function of left and right mouse button.
--------------------	---

Options	No, Yes
----------------	---------

Factory setting	No
------------------------	----

Paper size

Navigation	 Expert → System → Paper size Direct access code: 540004/000
-------------------	---

Description	Select the paper size of the printer connected to the PC.
--------------------	---

Options	DIN A4, US Letter
----------------	-------------------

Factory setting	DIN A4
------------------------	--------

Lock operation

Navigation	 Expert → System → Lock operation Direct access code: 100060/000
-------------------	--

Description	Local operation is locked in cases of inactivity once the set time has elapsed to prevent inadvertent operation (e.g., when cleaning the device). The device is unlocked by pressing the navigator or the OK operating key for 3 s. When using an external keyboard, the device is unlocked with the key combination "Ctrl-Alt-Del".
--------------------	--

Options	Never, After 2 (5, 10, 15) minutes
----------------	------------------------------------

Factory setting	After 5 minutes
------------------------	-----------------

PRESET

Navigation	 Expert → System → PRESET Direct access code: 000044-000
Description	Caution: Resets all the parameters to the factory settings!  Only visible/editable if the service code has been entered.
Options	No, Factory reset, Customer setting

Clear memory

Navigation	 Expert → System → Clear memory Direct access code: 059000-000
Description	Clear internal memory
Options	No, Yes

Confirm deletion

Navigation	 Expert → System → Confirm deletion Direct access code: 059001-000
Description	Confirm that you want to clear the memory.
Options	No, Yes
Factory setting	No

"Date/time setup" (submenu)

Navigation	 Expert → System → Date/time setup
Description	Contains settings for date/time.

Date format

Navigation	 Expert → System → Date/time setup → Date format Direct access code: 110000-000
Description	Select the format in which the date should be displayed.
Options	DD.MM.YYYY, MM/DD/YYYY, YYYY-MM-DD

Factory setting	DD.MM.YYYY
------------------------	------------

Time format

Navigation	 Expert → System → Date/time setup → Time format Direct access code: 110001-000
-------------------	---

Description	Select the format in which the date should be displayed .
--------------------	--

Options	24 hour, 12 hour AM/PM
----------------	------------------------

Factory setting	24 hour
------------------------	---------

"Date/time" submenu

Navigation	 Expert → System → Date/time setup → Date/time
-------------------	---

Description	Contains parameters for setting the date/time.
--------------------	--

UTC time zone

Navigation	 Expert → System → Date/time setup → Date/time → UTC time zone Direct access code: 120000-000
-------------------	---

Description	Display of the current UTC time zone is on (UTC = universal time coordinated).
--------------------	--

Current date/time

Navigation	 Expert → System → Date/time setup → Date/time → Current date/time Direct access code: 120003-000
-------------------	---

Description	Displays the current date and the current time.
--------------------	---

"Change date/time" submenu

Description	Contains parameters for changing the date/time.
--------------------	---

Navigation	 Expert → System → Date/time setup → Change date/time
-------------------	--

UTC time zone	
Navigation	 Expert → System → Date/time setup → Date/time → Change date/time → UTC time zone Direct access code: 120010-000
Description	Set your UTC time zone (UTC = universal time coordinated).
Options	-12:00, -11:00: Samoa, -10:00: Hawaii, -09:30: Marquesas, -09:00: Alaska, -08:00: LA, -07:00: Denver, -06:00: Chicago, -05:00: New York, -04:00: Caracas, -03:30: St.John's, -03:00: Brasilia, -02:00: Atlantic, -01:00: Azores, +00:00: London, +01:00: Berlin, +02:00: Cairo, +03:00: Moscow, +03:30: Tehran, +04:00: Abu Dhabi, +04:30: Kabul, +05:00: Islamabad, +05:30: New Delhi, +05:45: Kathmandu, +06:00: Dhaka, +06:30: Pyinmana, +07:00: Bangkok, +08:00: Peking, +08:45, +09:00: Tokyo, +09:30: Adelaide, +10:00: Canberra, +10:30: Lord-Howe, +11:00:Solom.Isl., +11:30: Norfolk, +12:00: Auckland, +12:45: Chatham, +13:00, +14:00
Date/time	
Navigation	 Expert → System → Date/time setup → Date/time → Change date/time → Date/time Direct access code: 120013-000
Description	Set the current date and time for the device.
User entry	Date/time in set format
"NT/ST changeover" submenu	
Navigation	 Expert → System → Date/time setup → NT/ST changeover
Description	Contains settings for normal time/summer time changeover.
NT/ST changeover	
Navigation	 Expert → System → Date/time setup → NT/ST changeover → NT/ST changeover Direct access code: 110002-000
Description	Function for summer/normal time changeover. Automatic: Changes to the local regional regulations; Manual: Changeover times can be set in the following addresses; Off: No changeover times required.
Options	Off, Manual, Automatic
Factory setting	Automatic

NT/ST region

Navigation	 Expert → System → Date/time setup → NT/ST changeover → NT/ST region Direct access code: 110003-000
Description	Selects the regional settings for summer/normal time changeover. Only visible if NT/ST changeover = Automatic.
Options	Europe, USA
Factory setting	Europe

Begin summer time

Occurrence

Navigation	 Expert → System → Date/time setup → NT/ST changeover → Occurrence Direct access code: 110005-000
Description	Day, when in the spring a change from normal to summer time occurs. Visible for NT/ST changeover = Automatic or Manual. Only editable if NT/ST changeover = Manual.
Options	1., 2., 3., 4., Last
Factory setting	Last

Day

Navigation	 Expert → System → Date/time setup → NT/ST changeover → Day Direct access code: 110006-000
Description	Day, when in the spring a change from normal to summer time occurs. Visible for NT/ST changeover = Automatic or Manual. Only editable if NT/ST changeover = Manual.
Options	Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, Saturday
Factory setting	Sunday

Month

Navigation	 Expert → System → Date/time setup → NT/ST changeover → Month Direct access code: 110007-000
Description	Month, when in the spring a change from normal to summer time occurs. Visible for NT/ST changeover = Automatic or Manual. Only editable if NT/ST changeover = Manual.
Options	January, February, March, April, May, June, July, August, September, October, November, December
Factory setting	March

Date

Navigation	 Expert → System → Date/time setup → NT/ST changeover → Date Direct access code: 110008-000
Description	Date next spring when a change from normal to summer time occurs. Only visible if NT/ST changeover = Automatic or Manual. Cannot be edited.

Time

Navigation	 Expert → System → Date/time setup → NT/ST changeover → Time Direct access code: 110009-000
Description	Time at which the changeover from normal time to summer time is forwarded by one hour (format: hh:mm). Visible for NT/ST changeover = Automatic or Manual. Only editable if NT/ST changeover = Manual.
User entry	Time in set time format
Factory setting	02:00

End summer time

Occurrence

Navigation	 Expert → System → Date/time setup → NT/ST changeover → Occurrence Direct access code: 110011-000
Description	Day, when in the autumn a change from summer to normal time occurs. Visible for NT/ST changeover = Automatic or Manual. Only editable if NT/ST changeover = Manual.

Options	1., 2., 3., 4., Last
Factory setting	Last

Day

Navigation	 Expert → System → Date/time setup → NT/ST changeover → Day Direct access code: 110012-000
Description	Day, when in the autumn a change from summer to normal time occurs. Visible for NT/ST changeover = Automatic or Manual. Only editable if NT/ST changeover = Manual.
Options	Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, Saturday
Factory setting	Sunday

Month

Navigation	 Expert → System → Date/time setup → NT/ST changeover → Month Direct access code: 110013-000
Description	Month, when in the autumn a change from summer to normal time occurs. Visible for NT/ST changeover = Automatic or Manual. Only editable if NT/ST changeover = Manual.
Options	January, February, March, April, May, June, July, August, September, October, November, December
Factory setting	October

Date

Navigation	 Expert → System → Date/time setup → NT/ST changeover → Date Direct access code: 110014-000
Description	Date next autumn when summer time changes back to normal time. Only visible if NT/ST changeover = Automatic or Manual. Cannot be edited.

Time

Navigation	 Expert → System → Date/time setup → NT/ST changeover → Time Direct access code: 110015-000
Description	Time at which the changeover from summer time to normal time is turned back by one hour (in the set time format). Visible for NT/ST changeover = Automatic or Manual. Only editable if NT/ST changeover = Manual.
User entry	Time in set time format
Factory setting	02:00

"SNTP" submenu

Navigation	 Expert → System → Date/time setup → SNTP
Description	Contains settings for time synchronization using the Simple Network Time Protocol (SNTP).

SNTP

Navigation	 Expert → System → Date/time setup → SNTP Direct access code: 110020-000
Description	If switched on, time synchronization is carried out via SNTP once a day. Note: Only possible via Ethernet. Port 123 must be open in the firewall. The user/network administrator is responsible for the accuracy of the time server.
Options	No, Yes
Factory setting	No

SNTP server 1

Navigation	 Expert → System → Date/time setup → SNTP server → SNTP server 1 Direct access code: 110021-000
Description	Please specify the address of the time server (or the IP address). Note: The DNS server must be configured (see Communication/Ethernet). Your administrator can provide the address where necessary.
User entry	Text field

SNTP server 2

Navigation

Expert → System → Date/time setup → SNTP server → SNTP server 2
 Direct access code: 110025-000

Description

Shows the IP address of the time server if it was automatically allocated via DHCP. Non-editable display text.



An attempt is always made to synchronize the time via SNTP server 1 first (provided it is configured)
 DHCP must be switched on (see Communication/Ethernet).
 DHCP server: Option 42

"Security" submenu**Navigation**

Expert → System → Security

Description

Contains settings that protect the device against unauthorized operation and configuration.

Protected by**Navigation**

Expert → System → Security → Protected by
 Direct access code: 100006-000

Description

Configure how the device should be protected.

Options

Open access, Access code, User roles

Factory setting

Open access

Access code**Navigation**

Expert → System → Security → Access code
 Direct access code: 100000-000

Description

This code can be used to protect the setup from unauthorized access. In order to change any parameter, the correct code must be entered. Factory setting is "0", this means changes can be done at any time.
 Hint: Make a note of the code and store in a safe place.
 Only visible if "Protected by" = "Access code"

User entry

4-digit number

Factory setting

0

Set point code

Navigation	 Expert → System → Security → Set point code Direct access code: 100030-000
Description	If the unit is protected by an access code a set point code can also be defined. The user can change the limit values once the set point code is entered. All other operating positions remain locked, however. Only visible if an activation code has been defined. Factory default: "0" means that alarm limit values can only be changed by entering the access code.  Alarm set point code and access code should not be identical!
User entry	4-digit number
Factory setting	0

Lock hardware

Navigation	 Expert → System → Security → Lock hardware Direct access code: 100099-000
Description	Device functions/interfaces that are not used can be switched off for security reasons.  Fieldbus systems may also be affected in the case of Ethernet or the serial interface. Follow the operating instructions.
Options	Panel version: Ethernet (all ports/services), USB-A socket front, USB-A socket back, USB-B socket front, serial interface, SD card
Factory setting	No lock

"Authentication" submenu

Navigation	 Expert → System → Security → Authentication
Description	Define a password for the relevant user role. This password allows access to device settings and functions depending on the user role in question. Only visible if "Protected by" = "User roles"

Operator ID: operator Password

Navigation	 Expert → System → Security → Authentication → Password Direct access code: 470105/000
Description	Enter the password for the user account.

Options	Text entry max. 12 characters
Factory setting	operator

Administrator
ID: admin
Password

Navigation	 Expert → System → Security → Authentication → Password Direct access code: 470102/000
Description	Enter the password for the user account.
Options	Text entry max. 12 characters
Factory setting	admin

Service
ID: service
Password

Navigation	 Expert → System → Security → Authentication → Password Direct access code: 470101/000
Description	Enter the password for the user account.
Options	Text entry max. 12 characters
Factory setting	service

"External memory" submenu

Navigation	 Expert → System → External memory
Description	Settings for the external data carrier, amongst other things which data is to be stored in which format on the external data carrier.

Save as

Navigation	 Expert → System → External memory → Save as Direct access code: 140000-000
------------	---

Description	"Protected format": All data is stored in a manipulation-protected encrypted format. This data can only be visualized by the PC analysis software. "Open format": Data is stored in a CSV format, this can be opened by a number of different programs (Attention: no manipulation protection).
Options	Protected format, Open format (*.csv)
Factory setting	Protected format

SD card

Memory build-up

Navigation	 Expert → System → External memory → Memory build-up Direct access code: 140001-000
Description	"Stack memory": No more data can be stored once the data carrier is full. "Ring memory": Once the data carrier is full, the oldest data is deleted so that new data can be stored (First in first out (FIFO)).  The "Ring memory" setting refers only to the automatic storage of measured values. Manual save functions ("Operation -> SD card -> Update/Save measured values") are not affected.
Options	Stack memory, Ring memory (FIFO)  "Ring memory" can be selected only if "Save as" is set to "Protected format" (and not "CSV").
Factory setting	Stack memory

Warning at

Navigation	 Expert → System → External memory → Warning at Direct access code: 140005-000
Description	Issues a warning before the data carrier is x% full. A warning is indicated on the device and this is also stored in the event buffer. A relay can also be switched.  Only for external SD card (does not apply to USB stick)!
User entry	0 to 99%
Factory setting	90

Switches relay

Navigation	 Expert → System → External memory → Switches relay Direct access code: 140006-000
Description	When the warning "Data carrier full" is displayed, a relay can also be switched on.
Options	Not used, Relay x All the available relays are displayed.
Factory setting	Not used

CSV settings

 Also configurable if "Protected format" is set.

Separator for CSV

Navigation	 Expert → System → External memory → Separator for CSV Direct access code: 140002-000
Description	Specify the separator used in the application (e.g., in Excel: semicolon).
Options	Comma, Semicolon
Factory setting	Semicolon

Date/time

Navigation	 Expert → System → External memory → Date/time Direct access code: 140003-000
Description	Select if the date and time should be stored in one column or two separate columns when data is saved in CSV format.
Options	One column, Separate columns
Factory setting	Separate columns

Operational time

Navigation	 Expert → System → External memory → Operational time Direct access code: 140004-000
Description	Select the format in which operating times will be stored/displayed.
Options	0 seconds, 0.0000 hours, 0.00000 days, 0000h00:00
Factory setting	0000h00:00

"Messages" submenu

Navigation	 Expert → System → Messages
Description	Contains settings for displaying/acknowledging messages. Examples of messages include: messages triggered by limit values; messages triggered by a digital input; error messages; etc.

Acknowledging messages

Navigation	 Expert → System → Messages → Acknowledging messages Direct access code: 100040-000
Description	The time the message is acknowledged can be saved in the event logbook.
Options	Do not save, Save
Factory setting	Do not save

Switches relay

Navigation	 Expert → System → Messages → Switches relay Direct access code: 100042-000
Description	A relay can be switched as soon as a message that has to be confirmed is displayed (e.g., on/off event, device errors etc.). The relay adopts the initial status as soon as all messages have been confirmed.
Options	Not used, Relay x All the available relays are displayed.
Factory setting	Not used

"Screensaver" submenu

Navigation	 Expert → System → Screensaver
-------------------	---

Description	To increase the life span of the LCD, the rear illumination can be switched off (= screensaver).
--------------------	--

Screensaver

Navigation	 Expert → System → Screensaver → Screensaver Direct access code: 160000-000
-------------------	---

Description	"Switched off": LCD is always switched on "Switch on for x min.": Display goes dark after x minutes. All other functions remain in operation. Press an operating key: Illumination is switched back on. "Switched daily": Enter time span.
--------------------	--

Options	Switched off, On after 10 min, On after 30 min, On after 60 min, Switched daily, Control input
----------------	--

Factory setting	Switched off This setting has no effect if the screensaver is controlled by a digital input.
------------------------	---

ON daily from

Navigation	 Expert → System → Screensaver → ON daily from Direct access code: 160001-000
-------------------	---

Description	Set time (hh:mm) as of when the screensaver should be switched on (e.g., shift end time).  The screensaver is switched off as soon as the device is operated via on-site operation. After 1 min of inactivity, it switches back on automatically. Only visible if screensaver = Switched daily
--------------------	---

User entry	Time (hh:mm)
-------------------	--------------

Factory setting	20:00
------------------------	-------

OFF daily from

Navigation	 Expert → System → Screensaver → OFF daily from Direct access code: 160002-000
-------------------	--

Description	Set time (hh:mm) as of when the screensaver should be switched off (e.g., shift start time). Only visible if screensaver = Switched daily
--------------------	--

User entry	Time (hh:mm)
-------------------	--------------

Factory setting	07:00
------------------------	-------

Alarm response

Navigation	 Expert → System → Screensaver → Alarm response Direct access code: 160003-000
Description	"Off on alarm": If limit value violations occur or "Maintenance required (Mxxx)" or "Function check (Cxxx)" is active, the screensaver will be automatically deactivated. "Always on": If limit value violations occur, or "Maintenance required (Mxxx)" or "Function check (Cxxx)" is active, the screensaver will not be deactivated.  Active messages that require acknowledgment, as well as "Failure (Fxxx)" or "Out of specification (Sxxx)" events, deactivate the screensaver always.
Options	Off on alarm, Always on
Factory setting	Off on alarm

"Device options" submenu

Navigation	 Expert → System → Device options
Description	Hardware and software options of the device.

Activation code

Navigation	 Expert → System → Device options → Activation code Direct access code: 000057-000
Description	In the input field provided, enter a valid activation code to enable additional device options. The options that can be retrofitted can be found under "spare parts" Note: When an activation code is entered, the device is restarted in order to enable the new option.  ▪ The activation code entered is not displayed, i.e. this parameter is always empty following a restart. ▪ Pay attention to case-sensitivity.
User entry	Text

Slot 1

Navigation	 Expert → System → Device options → Slot 1 Direct access code: 990000-000
-------------------	---

Description	Shows hardware/software options. Cannot be edited.  The assignment can be specified in the PC operating software for offline configuration.
--------------------	--

Options	Not assigned, Universal inputs
----------------	--------------------------------

Slot 2

Navigation	 Expert → System → Device options → Slot 2 Direct access code: 990001-000
-------------------	---

Description	Shows hardware/software options. Cannot be edited.  The assignment can be specified in the PC operating software for offline configuration.
--------------------	--

Options	Not assigned, Universal inputs
----------------	--------------------------------

Slot 3

Navigation	 Expert → System → Device options → Slot 3 Direct access code: 990002-000
-------------------	---

Description	Shows hardware/software options. Cannot be edited.  The assignment can be specified in the PC operating software for offline configuration.
--------------------	--

Options	Not assigned, Universal inputs
----------------	--------------------------------

Communication

Navigation	 Expert → System → Device options → Communication Direct access code: 990006-000
-------------------	--

Description	Shows hardware/software options. Cannot be edited.
--------------------	---

Options	USB + Ethernet, USB + Ethernet + RS232/485
----------------	--

Fieldbus

Navigation	 Expert → System → Device options → Fieldbus Direct access code: 990005-000
-------------------	---

Description	Shows hardware/software options. Cannot be edited.
--------------------	---

Options	Not available, Modbus Slave
----------------	-----------------------------

Application

Navigation	 Expert → System → Device options → Application Direct access code: 990007-000
-------------------	--

Description	Shows hardware/software options. Cannot be edited.
--------------------	---

Options	Standard, Maths
----------------	-----------------

15.1.2 "Inputs" submenu

Settings for the analog and digital inputs.

"Universal inputs" submenu

Navigation	 Expert → System → Inputs → Universal inputs
-------------------	---

Description	Settings for the connected measuring points.
--------------------	--

Add input

Navigation	 Expert → System → Inputs → Universal inputs → Add input Direct access code: 222000/000
-------------------	---

Description	Addition of an input that must be switched on and configured according to the input signal.
--------------------	---

Options	No, Universal input x
----------------	-----------------------

Factory setting	No
------------------------	----

Delete input

Navigation	 Expert → System → Inputs → Universal inputs → Delete input Direct access code: 222001/000
-------------------	--

Description	Delete an input configuration.
--------------------	--------------------------------

Options No, Universal input x

Factory setting No

"Universal input x" submenu

Navigation  Expert → System → Inputs → Universal inputs → Universal input x

Description View or change settings for the selected channel.

 x = place holder for selected universal input

Signal

Navigation  Expert → Inputs → Universal inputs → Universal input x → Signal
Direct access code: 220000-0xx
Examples: Universal input 1: 220000-000; Universal input 12: 220000-011

Description Select the connected signal type (current, voltage, etc.) from the list. The channel remains deactivated if no signal type is selected (factory setting).

Options Switched off, Current, Voltage, Resistance thermometer, Thermocouple, Pulse counter, Frequency input, Modbus Slave (option)

Factory setting Switched off

Range

Navigation  Expert → Inputs → Universal inputs → Universal input x → Range
Direct access code: 220001-0xx
Examples: Universal input 1: 220001-000; Universal input 12: 220001-011

Description Select the input range or the connected resistance thermometer/thermocouple. The terminal assignment is specified in the operating manual or on the rear of the unit. Only visible if signal ≠ Switched off

Options	Switched off Current: 4-20 mA, 0-20 mA, 0-5 mA, 0-20 mA squared, 4-20 mA squared, ± 20 mA Voltage: 0-1 V, 0-10 V, 0-5 V, 1-5 V, ± 150 mV, ± 1 V, ± 10 V, ± 30 V, 0-1 V squared, 0-10 V squared, 1-5 V squared Resistance thermometer: Pt100 (IEC), Pt100 (JIS), Pt100 (GOST), Pt500 (IEC), Pt500 (JIS), Pt1000 (IEC), Pt1000 (JIS), Pt46 (GOST), Pt50 (GOST), Cu50 (GOST, $\alpha=4260$), Cu50 (GOST, $\alpha=4280$), Cu53 (GOST, $\alpha=4280$), Cu100 (GOST, $\alpha=4280$) Thermocouple: Type A (W5Re-W20Re), type B (Pt30Rh-Pt6Rh), type C (W5Re-W26Re), type D (W3Re-W25Re), type J (Fe-CuNi), type K (NiCr-Ni), type L (Fe-CuNi), type L (NiCr-CuNi, GOST), type N (NiCrSi-NiSi), type R (Pt13Rh-Pt), type S (Pt10Rh-Pt), type T (Cu-CuNi) Pulse counter Frequency input Modbus (option)
----------------	---

Factory setting	Switched off
------------------------	--------------

Connection

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Connection Direct access code: 220002-0xx Examples: Universal input 1: 220002-000; Universal input 12: 220002-011
-------------------	--

Description	Specify whether the connected resistance thermometer is operated using 2-, 3- or 4-wire technology. Only visible if signal = Resistance thermometer
--------------------	---

Options	2-wire, 3-wire, 4-wire
----------------	------------------------

Factory setting	4-wire
------------------------	--------

Channel ident.

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Channel ident. Direct access code: 220003-0xx Examples: Universal input 1: 220003-000; Universal input 12: 220003-011
-------------------	--

Description	Name of the measuring point connected to this input. Only visible if signal $\neq$ Switched off
--------------------	--

User entry	Text (16 characters)
-------------------	----------------------

Factory setting	Channel x
------------------------	-----------

Plot type

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Plot type Direct access code: 220016-0xx Examples: Universal input 1: 220016-000; Universal input 12: 220016-011
-------------------	---

Description	The analog inputs are scanned in a 100 ms cycle. Depending on the store cycle, the selected data is determined, saved, and displayed based on the scanned values.
--------------------	---

Options	Instantaneous value, Average, Minimum value, Maximum value, Minimum + Maximum, Counter, Current value + Counter
----------------	---

Factory setting	Average
------------------------	---------

Time base

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Time base Direct access code: 220025-0xx Examples: Universal input 1: 220025-000; Universal input 12: 220025-011
-------------------	---

Description	An instantaneous value can be determined from the counter reading with the aid of the time base, such as input liters, time base = second → instantaneous value = liters/second. Only visible if signal = "Pulse counter" and plot type = "Current value + Counter"
--------------------	---

Options	Second (s), Minute (min), Hour (h), Day (d)
----------------	---

Factory setting	Second (s)
------------------------	------------

Engineering unit

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Engineering unit Direct access code: 220004-0xx Examples: Universal input 1: 220004-000; Universal input 12: 220004-011
-------------------	--

Description	Specify the technical (physical) unit for the measuring point connected to this input. Only visible if signal ≠ Switched off
--------------------	--

User entry	Text (6 characters)
-------------------	---------------------

Unit/dimension counter

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Unit/dimension counter Direct access code: 220024-00x Examples: Universal input 1: 220024-000; Universal input 12: 220024-011
-------------------	--

Description	Technical unit of the count input, e.g., liter, m ³ , etc. Only visible if signal = "Pulse counter" and plot type = "Current value + Counter"
--------------------	--

User entry Text (max. 6 characters)

Pulse counter

Navigation  Expert → Inputs → Universal inputs → Universal input x → Pulse counter
Direct access code: 220017-0xx
Examples: Universal input 1: 220017-000; Universal input 12: 220017-011

Description Specify whether the pulse counter is a fast or slow (up to max. 25 Hz) counter. When recording the number of relay switching operations, select the 25 Hz setting to ensure correct counting.
Only visible if signal = Pulse counter

Options Up to 13kHz, Up to 25Hz

Factory setting Up to 13kHz

Pulse value

Navigation  Expert → Inputs → Universal inputs → Universal input x → Pulse value
Direct access code: 220010-0xx
Examples: Universal input 1: 220010-000; Universal input 12: 220010-011

Description Factor, that when multiplied by the input signal results in the required physical value.
Example: 1 pulse equals 5 m³ -> enter a "5" here.
Only visible if signal = Pulse counter

User entry Number, max. 8 digits

Factory setting 1

Decimal point

Navigation  Expert → Inputs → Universal inputs → Universal input x → Decimal point
Direct access code: 220005-0xx
Examples: Universal input 1: 220005-000; Universal input 12: 220005-011

Description Number of places after decimal point for the display.
Only visible if signal ≠ Switched off

Options None, One (X.Y), Two (X.YY), Three (X.YYY), Four (X.YYYY), Five (X.YYYYY)

Factory setting One (X.Y)

Lower frequency

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Lower frequency Direct access code: 220018-0xx Examples: Universal input 1: 220018-000; Universal input 12: 220018-011
Description	Configure the lower frequency that corresponds to the start of the measuring range. Only visible if signal = Frequency input
User entry	0 to 12500 (Hz)
Factory setting	5.0 (Hz)

Range start

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Range start Direct access code: 220006-0xx Examples: Universal input 1: 220006-000; Universal input 12: 220006-011
Description	Transmitters convert the physical measured variable to standardized signals. Enter the start of the measuring range.  ▪ The start and end of the measuring range may not be identical. ▪ The start of the measuring range can also be greater than the end (e.g., for deep wells). ▪ The parameter can be defined independently of the number of decimal places configured for the measured value as these are only taken into consideration for the display.
User entry	Number (max. 8 digits)
Factory setting	0 (Depends on the input signal selected)

Upper frequency

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Upper frequency Direct access code: 220019-0xx Examples: Universal input 1: 220019-000; Universal input 12: 220019-011
Description	Configure the upper frequency that corresponds to the upper range limit. Only visible if signal = Frequency input
User entry	0 to 12500 (Hz)
Factory setting	1000.0 (Hz)

Meas. range end

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Meas. range end Direct access code: 220007-0xx Examples: Universal input 1: 220007-000; Universal input 12: 220007-011
Description	Transmitters convert the physical measured variable to standardized signals. Enter the end of the measuring range.  ▪ The start and end of the measuring range may not be identical. ▪ The end of the measuring range can also be smaller than the start (e.g., for deep wells). ▪ The parameter can be defined independently of the number of decimal places configured for the measured value as these are only taken into consideration for the display.
User entry	Number (max. 8 digits)
Factory setting	100 (Depends on the input signal selected)

Zoom start

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Zoom start Direct access code: 220011-0xx Examples: Universal input 1: 220011-000; Universal input 12: 220011-011
Description	If the whole value range is not used, enter the lower value of the required range. The zoom only affects the display and has no influence on data storage.  ▪ The zoom can also be set outside the measuring range. The only restriction is that the start and end of the zoom may not be identical. ▪ If the signal/range is changed, the zoom is corrected if it no longer fits the measuring range. ▪ The zoom start can also be larger than the zoom end. The device will automatically rotate the values on the display.
User entry	Number (max. 8 digits)
Factory setting	0 (Depends on the input signal selected)

Zoom end

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Zoom end Direct access code: 220012-0xx Examples: Universal input 1: 220012-000; Universal input 12: 220012-011
-------------------	--

Description	Like "Zoom start". Enter the upper value of the required range in the input box provided.  ■ The zoom can also be set outside the measuring range. The only restriction is that the start and end of the zoom may not be identical. ■ If the signal/range is changed, the zoom is corrected if it no longer fits the measuring range. ■ The zoom end can also be smaller than the zoom start. The device will automatically rotate the values on the display.
User entry	Number (max. 8 digits)
Factory setting	100 (Depends on the input signal selected)

Damping

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Damping Direct access code: 220008-0xx Examples: Universal input 1: 220008-000; Universal input 12: 220008-011
Description	The more unwanted interference there is on the measurement signal the higher the value that should be entered here. Result: Fast changes will be damped/suppressed. Only visible if signal = Current, Voltage, Resistance thermometer or Thermocouple
User entry	0 to 999.9 s
Factory setting	Current, voltage: 0.0 s Resistance thermometer, thermocouple: 0.2 s

Comparison point

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Comparison point Direct access code: 220013-0xx Examples: Universal input 1: 220013-000; Universal input 12: 220013-011
Description	Internal: Compensation of the voltage error by measuring the terminal temperature. External: Compensation of the voltage error by using an external controlled comparison measurement point. Only visible if signal = Thermocouple
Options	Internal, External
Factory setting	Internal

Comparison temp.

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Comparison temp. Direct access code: 220014-0xx Examples: Universal input 1: 220014-000; Universal input 12: 220014-011
Description	Settings for the external comparison temperature (only when connecting thermocouples). Only visible if comparison point = External
User entry	0 to 9999999 (Depends on the temperature unit selected)
Factory setting	0 (Depends on the temperature unit selected)

Totalizer

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Totalizer Direct access code: 220015-0xx Examples: Universal input 1: 220015-000; Universal input 12: 220015-011
Description	Initial setting for the totalizer. Useful when continuing measurements recorded to date with an (electro)-mechanical counter. Only visible if signal = Pulse counter
User entry	Number (max. 15 digits)
Factory setting	0

"Meas.val. corrct." submenu

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Meas.val. corrct.
Description	Determining the correction values to balance measurement tolerances. Proceed as follows: ■ Measure the current value at the lower measuring range. ■ Measure the current value at the upper measuring range. ■ Enter the lower and upper target and actual values in each case.

Offset

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Meas.val. corrct. → Offset Direct access code: 220050-0xx Examples: Universal input 1: 220050-000; Universal input 12: 220050-011
Description	The set value is added to the actual measured input signal for further use (display, storage, set point monitoring). Only visible if signal = Resistance thermometer or Thermocouple
User entry	Number (max. 8 digits)

Factory setting 0

Correction RPT

Navigation  Expert → Inputs → Universal inputs → Universal input x → Meas.val. corrct. → Correction RPT
Direct access code: 220057-0xx
Examples: Universal input 1: 220057-000; Universal input 12: 220057-011

Description Rear panel temperature correction value for this analog input (only required for thermocouples).
 Only visible/editable if the service code has been entered.

User entry Number (max. 8 digits)

Factory setting -3.0 for slot 1+2
-3.2 for slot 3

Range start

Target value

Navigation  Expert → Inputs → Universal inputs → Universal input x → Meas.val. corrct. → Target value
Direct access code: 220052-0xx
Examples: Universal input 1: 220052-000; Universal input 12: 220052-011

Description Enter the lower set point (example: measuring range 0 to 100 °C: 0 °C).
Only visible if signal = Current or Voltage

User entry Number (max. 8 digits)

Factory setting 0

Actual value

Navigation  Expert → Inputs → Universal inputs → Universal input x → Meas.val. corrct. → Actual value
Direct access code: 220053-0xx
Examples: Universal input 1: 220053-000; Universal input 12: 220053-011

Description	Enter the lower value actually measured (example: measuring range 0 to 100 °C: 0.5 °C measured). Only visible if signal = Current or Voltage
--------------------	---

User entry	Number (max. 8 digits)
-------------------	------------------------

Factory setting	0
------------------------	---

Meas. range end

Target value

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Meas.val. corrct. → Target value Direct access code: 220055-0xx Examples: Universal input 1: 220055-000; Universal input 12: 220055-011
-------------------	--

Description	Enter the upper set point (example: measuring range 0 to 100 °C: 100 °C). Only visible if signal = Current or Voltage
--------------------	--

User entry	Number (max. 8 digits)
-------------------	------------------------

Factory setting	100
------------------------	-----

Actual value

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Meas.val. corrct. → Actual value Direct access code: 220056-0xx Examples: Universal input 1: 220056-000; Universal input 12: 220056-011
-------------------	--

Description	Enter the upper value actually measured (example: measuring range 0 to 100 °C: 100.5 °C measured). Only visible if signal = Current or Voltage
--------------------	---

User entry	Number (max. 8 digits)
-------------------	------------------------

Factory setting	100
------------------------	-----

"Totalization" submenu

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Totalization
-------------------	---

Description	Settings are only required if this analog measuring point is to be used for totalization (e.g., for flow calculation).
--------------------	--

Totalization

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Totalization → Totalization Direct access code: 220030-0xx Examples: Universal input 1: 220030-000; Universal input 12: 220030-011
Description	By totalizing the analog signal (e.g., flow rate in m ³ /h), quantities (in m ³) can be calculated.
Options	No, Yes
Factory setting	No

Totalization base

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Totalization → Totalization base Direct access code: 220031-0xx Examples: Universal input 1: 220031-000; Universal input 12: 220031-011
Description	Select the required time base. Example: ml/s -> time base seconds (s); m ³ /h -> time base hours (h). Only visible if totalization = Yes
Options	Second (s), Minute (min), Hour (h), Day (d)
Factory setting	Second (s)

Unit

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Totalization → Unit Direct access code: 220032-0xx Examples: Universal input 1: 220032-000; Universal input 12: 220032-011
Description	Enter the unit for the quantity calculated by totalization (e.g., "m ³ "). Only visible if totalization = Yes
User entry	Text (max. 6 characters)

Low flow cut off

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Totalization → Low flow cut off Direct access code: 220033-0xx Examples: Universal input 1: 220033-000; Universal input 12: 220033-011
Description	If the volume flow recorded is below the set value, these quantities are not added to the counter. If the input is scaled from 0 to y, or if the pulse input is used, all values that are smaller than the set value are not recorded. If the input is scaled from -x to +y, all values around the zero point (i.e., also negative values) are not recorded. Only visible if totalization = Yes
User entry	Number (max. 8 digits)
Factory setting	0

Calc. factor

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Totalization → Calc. factor Direct access code: 220034-0xx Examples: Universal input 1: 220034-000; Universal input 12: 220034-011
Description	Factor for calculating the integrated value (e.g., the transmitter delivers l/s → totalization base = second → engineering unit required is m ³ → enter factor 0.001) Only visible if totalization = Yes
User entry	Number (max. 8 digits)
Factory setting	1.0

Totalizer

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Totalization → Totalizer Direct access code: 220035-0xx Examples: Universal input 1: 220035-000; Universal input 12: 220035-011
Description	Initial setting for the totalizer. Useful when continuing measurements recorded to date with an (electro)-mechanical counter. Only visible if totalization = Yes
User entry	Number (max. 15 digits)
Factory setting	0

"Fault mode" submenu



In the event of an error the alarm relay is switched if so configured → 67

Navigation

Expert → Inputs → Universal inputs → Universal input x → Fault mode

Description

Contains settings that define how this channel responds under fault conditions (e.g., cable open circuit, overrange).

NAMUR NE 43

Navigation

Expert → Inputs → Universal inputs → Universal input x → Fault mode → NAMUR NE 43
 Direct access code: 220060-0xx
 Examples: Universal input 1: 220060-000; Universal input 12: 220060-011

Description

Activate/deactivate the 4–20mA loop monitoring as per NAMUR recommendation NE 43. The following error ranges apply when NAMUR NE 43 is switched on:
 ≤ 3.8 mA: under range
 ≥ 20.5 mA: overrange
 ≤ 3.6 mA or ≥ 21.0 mA: sensor error
 ≤ 2 mA: cable open circuit
 Only visible if signal = "Current" and range = "4-20 mA" or "4-20 mA squared".

Options

Off, On

Factory setting

On

Cable open circuit

Navigation

Expert → Inputs → Universal inputs → Universal input x → Fault mode → Cable open circuit
 Direct access code: 220060-0xx
 Examples: Universal input 1: 220060-000; Universal input 12: 220060-011

Description

Cable open circuit detection
 Only visible if signal = "Voltage" and range = "1-5 V" or "1-5 V squared".

Options

Off, On

Factory setting

On

Lower error value

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Fault mode → Lower error value Direct access code: 220065-0xx Examples: Universal input 1: 220065-000; Universal input 12: 220065-011
Description	When NE 43 is switched off, defines the value that must be undershot for the device to output an error. Only visible if signal = "Current", range = "4-20 mA" and NAMUR NE 43 = "Off"
User entry	Number (max. 8 digits); 0 to 4 mA
Factory setting	3.9mA

Upper error value

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Fault mode → Upper error value Direct access code: 220066-0xx Examples: Universal input 1: 220066-000; Universal input 12: 220066-011
Description	When NE 43 is switched off, defines the value that must be exceeded for the device to output an error. Only visible if signal = "Current", range = "4-20 mA" and NAMUR NE 43 = "Off"
User entry	Number (max. 8 digits); 20 to 22mA
Factory setting	20.8mA

Time delay

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Fault mode → Time delay Direct access code: 220064-0xx Examples: Universal input 1: 220064-000; Universal input 12: 220064-011
Description	The device does not respond (e.g., with the switching of a relay) to a cable open circuit/ underrange/overrange until this state has been active for the preset time as a minimum. Only visible if NAMUR NE 43 = On
User entry	0 to 99 s
Factory setting	0s

On error

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Fault mode → On error Direct access code: 220061-0xx Examples: Universal input 1: 220061-000; Universal input 12: 220061-011
Description	Configure which value the device should continue working with (for calculations) if the measured value is not valid (e.g., cable open circuit).  In the event of an error value, all the dependent calculations are flagged accordingly as "error value". Counters are not flagged, however!
Options	Invalid calculation, Error value
Factory setting	Invalid calculation

Error value

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Fault mode → Error value Direct access code: 220062-0xx Examples: Universal input 1: 220062-000; Universal input 12: 220062-011
Description	The device continues calculating with this value in the event of an error. Only visible if on error = Error value
User entry	Number (max. 8 digits)
Factory setting	0

Save event

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Fault mode → Save event Direct access code: 220063-0xx Examples: Universal input 1: 220063-000; Universal input 12: 220063-011
Description	Stores a message in the event logbook when a fault occurs.
Options	No, Yes
Factory setting	No

Copy settings

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Copy settings Direct access code: 220200-0xx Examples: Universal input 1: 220200-000; Universal input 12: 220200-011
Description	Copies settings from actual channel to selected channel.

Options	Switched off, Universal input x Users can choose from all the available universal inputs.
Factory setting	Switched off

"Digital inputs -> Digital input x" submenu

Navigation	 Expert → Inputs → Digital inputs → Digital input x
Description	Settings only required if digital inputs (e.g., events) are to be used.  x = place holder for selected digital input

Add input

Navigation	 Expert → System → Digital inputs → Add input Direct access code: 252000/000
Description	Addition of a digital input that must be configured according to the function.
Options	No, Digital input x
Factory setting	No

Delete input

Navigation	 Expert → System → Digital inputs → Delete input Direct access code: 252001/000
Description	Delete an input configuration.
Options	No, Digital input x
Factory setting	No

Function

Navigation	 Expert → Inputs → Digital inputs → Digital input x → Function Direct access code: 250000-00x Examples: Digital input 1: 250000-000; Digital input 6: 250000-005
-------------------	---

Description	Select the required function. Digital inputs are High active; this means the described effect is achieved by a high input. Low = -3 to +5 V High = +12 to +30 V
--------------------	---

Options	Switched off, Control input, On/off event, Pulse counter, Operational time, Event +operation time, Quantity from time, Modbus Slave (option)
----------------	--

Factory setting	Switched off
------------------------	--------------

Function

Navigation	 Expert → Inputs → Digital inputs → Digital input x → Function Direct access code: 250014-00x Examples: Digital input 1: 250014-000; Digital input 6: 250014-005
-------------------	---

Description	Specifies how the data from the fieldbus is interpreted/processed. Only visible if function = Modbus Slave
--------------------	---

Options	Switched off, Control input, On/off event, Pulse counter, Operational time, Event +operation time, Quantity from time
----------------	---

Factory setting	Switched off
------------------------	--------------

Channel ident.

Navigation	 Expert → Inputs → Digital inputs → Digital input x → Channel ident. Direct access code: 250001-00x Examples: Digital input 1: 250001-000; Digital input 6: 250001-005
-------------------	---

Description	Measuring point name (e.g., "Pump") or description of the function performed with this input (e.g., "Fault message"). Only visible if function ≠ Switched off
--------------------	--

User entry	Text (max. 16 characters)
-------------------	---------------------------

Factory setting	Digital x
------------------------	-----------

Engineering unit

Navigation	 Expert → Inputs → Digital inputs → Digital input x → Engineering unit Direct access code: 250002-00x Examples: Digital input 1: 250002-000; Digital input 6: 250002-005
-------------------	---

Description	Technical unit of the count input, e.g., liter, m ³ , etc. Only visible if function = Pulse counter or Quantity from time
--------------------	---

User entry Text (max. 6 characters)

Decimal point

Navigation  Expert → Inputs → Digital inputs → Digital input x → Decimal point
Direct access code: 250004-00x
Examples: Digital input 1: 250004-000; Digital input 6: 250004-005

Description Number of places after decimal point for the display.
Only visible if function = Pulse counter or Quantity from time

Options None, One (X.Y), Two (X.YY), Three (X.YYY), Four (X.YYYY), Five (X.YYYYY)

Factory setting One (X.Y)

Input factor in

Navigation  Expert → Inputs → Digital inputs → Digital input x → Input factor in
Direct access code: 250019-00x
Examples: Digital input 1: 250019-000; Digital input 6: 250019-005

Description Defines if the set up factor is respective to 1 second or 1 hour.
Only visible if function = Quantity from time

Options Seconds, Hours

Factory setting Seconds

Pulse value

Navigation  Expert → Inputs → Digital inputs → Digital input x → Pulse value
Direct access code: 250005-00x
Examples: Digital input 1: 250005-000; Digital input 6: 250005-005

Description Factor, that when multiplied by the input signal results in the required physical value.
Examples:
1 pulse equals 5 m³-> enter "5" here.
Only visible if function = Pulse counter

User entry Number (max. 8 digits)

Factory setting 1

1 second= / 1 hour= (depends on the setting in "Input factor in")

Navigation	 Expert → Inputs → Digital inputs → Digital input x → 1 second= / 1 hour= Direct access code: 250005-00x Examples: Digital input 1: 250005-000; Digital input 6: 250005-005
Description	Factor, that when multiplied by the operating time results in the required physical value. Examples: 1 second equals 8 l -> enter "8" here. Only visible if function = Quantity from time
User entry	Number (max. 8 digits)
Factory setting	1

Time delay

Navigation	 Expert → Inputs → Digital inputs → Digital input x → Time delay Direct access code: 250017-00x Examples: Digital input 1: 250017-000; Digital input 6: 250017-005
Description	The high signal must be active for at least the preset time before the device changes the channel from low to high. The change from high to low is always immediate. Only visible if function = Control input, On/off event, Event+operation time
User entry	0 to 99 999 s
Factory setting	0

Action

Navigation	 Expert → Inputs → Digital inputs → Digital input x → Action Direct access code: 250003-00x Examples: Digital input 1: 250003-000; Digital input 6: 250003-005
-------------------	---

Description	Set up the function of the control input. Only visible if function = Control input
--------------------	---

Action	Description
Start/stop recording	The device only saves data as long as a high signal is present
Screensaver on	Switches backlighting/display off, low = off, high = on
Lock setup	The user can only change the setup if a low signal is present
Time synchronization	If a high signal is applied, the device rounds the system time up or down (only for Low→ High change): 0 to 29 → round down; 30 to 59 → round up

Action	Description
Set point monitoring on/off	The entire set point monitoring function of the device can be switched on (for "High") or switched off (for "Low").
Block keyboard/navigator	The device can only be operated if a low signal is present. Otherwise, all key activation and navigator actions are discarded.
Start/stop analysis 1	Starts/ends the external analysis (the analysis only runs as long as the signal is high). Measured value acquisition for the graphic display continues.

Options Switched off, Start/stop recording, Screensaver on, Lock setup, Time synchronization, Set point monitoring on/off, Block keyboard/navigator, Start/stop analysis 1

Factory setting Switched off

Switches relay

Navigation  Expert → Inputs → Digital inputs → Digital input x → Switches relay
Direct access code: 250006-00x
Examples: Digital input 1: 250006-000; Digital input 6: 250006-005

Description Switches the corresponding relay when the digital input is low or high. Follow the connection instructions in the user manual!
Only visible if function = Control input, On/off event, Event+operation time

Options Not used, Relay x
All the available relays are displayed.

Factory setting Not used

Description 'H'

Navigation  Expert → Inputs → Digital inputs → Digital input x → Description 'H'
Direct access code: 250007-00x
Examples: Digital input 1: 250007-000; Digital input 6: 250007-005

Description Condition description when the digital input is active. This text is shown on the display and saved to memory.
Only visible if function = Control input, On/off event, Event+operation time

User entry Text (max. 6 characters)

Factory setting On

Description 'L'

Navigation	 Expert → Inputs → Digital inputs → Digital input x → Description 'L' Direct access code: 250008-00x Examples: Digital input 1: 250008-000; Digital input 6: 250008-005
Description	Condition description when the digital input is not active. This text is shown on the display and saved to memory. Only visible if function = Control input, On/off event, Event+operation time
User entry	Text (max. 6 characters)
Factory setting	Off

Save event

Navigation	 Expert → Inputs → Digital inputs → Digital input x → Save event Direct access code: 250009-00x Examples: Digital input 1: 250009-000; Digital input 6: 250009-005
Description	Determines whether the condition change from low to high or high to low is stored in the event logbook.  Requires higher memory capacity. Only visible if function = Control input, On/off event, Event+operation time
Options	No, Yes, only "On" message
Factory setting	Yes

Event message

Navigation	 Expert → Inputs → Digital inputs → Digital input x → Event message Direct access code: 250018-00x Examples: Digital input 1: 250018-000; Digital input 6: 250018-005
Description	"Do not acknowledge": No message is shown if the digital input switches. "Acknowledge": A message window is shown on the screen which has to be acknowledged by operating a push button. Only visible if function = Control input, On/off event, Event+operation time
Options	Do not acknowledge, Acknowledge
Factory setting	Do not acknowledge

Event text L->H

Navigation	 Expert → Inputs → Digital inputs → Digital input x → Event text L->H Direct access code: 250010-00x Examples: Digital input 1: 250010-000; Digital input 6: 250010-005
Description	Description of condition change from low to high. Event text is stored (e.g., start filling).  If no event text has been configured, the device automatically generates an event text (factory setting), e.g., Digital 1 L->H. Only visible if function = Control input, On/off event, Event+operation time
User entry	Text (max. 22 characters)

Event text H->L

Navigation	 Expert → Inputs → Digital inputs → Digital input x → Event text H->L Direct access code: 250011-00x Examples: Digital input 1: 250011-000; Digital input 6: 250011-005
Description	Description of condition change from high to low. Event text is stored (e.g., stop filling).  If no event text has been configured, the device automatically generates an event text (factory setting), e.g., Digital 1 H->L. Only visible if function = Control input, On/off event, Event+operation time
User entry	Text (max. 22 characters)

Record duration

Navigation	 Expert → Inputs → Digital inputs → Digital input x → Record duration Direct access code: 250012-00x Examples: Digital input 1: 250012-000; Digital input 6: 250012-005
Description	The duration between "On" and "Off" can be recorded. The duration is appended to the "Off" event text (<hhhh>h<mm>:<ss>). Power failure times do not affect the duration. If the digital channel was "on" before the power failure and is still "on" after the power failure, the duration continues. Only visible if function = Control input, On/off event, Event+operation time
Options	No, Yes
Factory setting	No

Totalizer

Navigation	 Expert → Inputs → Digital inputs → Digital input x → Totalizer Direct access code: 250013-00x Examples: Digital input 1: 250013-000; Digital input 6: 250013-005
-------------------	--

Description	Initial setting for the totalizer. Useful when continuing measurements recorded to date with an (electro)-mechanical counter. Only visible if function = Pulse counter, Operational time, Event+operation time or Quantity from time
User entry	Number (max. 15 digits)
Factory setting	0

Copy settings

Navigation	 Expert → Inputs → Digital inputs → Digital input x → Copy settings Direct access code: 250200-00x Examples: Digital input 1: 250200-000; Digital input 6: 250200-005
Description	Copies settings from actual channel to selected channel.
Options	No, Digital input x Users can choose from all the available digital inputs.
Factory setting	No

15.1.3 "Outputs" submenu

Settings only required if outputs (e.g., relays) are to be used.

"Relay x" submenu

Navigation	 Expert → Outputs → Relay x
Description	Contains settings for the selected relay  x = place holder for selected relay

Operating mode

Navigation	 Expert → Outputs → Relay x → Operating mode Direct access code: 330000-00x Examples: Relay 1:330000-000; Relay 6: 330000-005
Description	Relay function: NC contact: The relay is closed in its quiescent state (maximum safety). NO contact: The relay is open in its quiescent state.
Options	NO contact, NC contact
Factory setting	NO contact

Identifier	
Navigation	 Expert → Outputs → Relay x → Identifier Direct access code: 330001-00x Examples: Relay 1:330001-000; Relay 6: 330001-005
Description	User-configurable relay identifier.
User entry	Text (max. 16 characters)
Factory setting	Relay x

15.1.4 “Communication” submenu

Settings required if the USB, RS232, RS485 or Ethernet interface of the device is used (PC operation, serial data read-out, modem operation, etc.).

 The various interfaces can be operated in parallel.

Timeout cycl. readout	
Navigation	 Expert → Communication → Timeout Direct access code: 150200-000
Description	Monitors whether measured values are read out cyclically via OPC or Fieldbus. Timeout is modifiable between 1 and 99 seconds. 0 seconds means that the functionality is inactivated.
User entry	0 to 99 s
Factory setting	0 s

Switches	
Navigation	 Expert → Communication → Switches Direct access code: 150201-000
Description	After the given timeout the dedicated relay/OC is active while no readout of actual measured values are in process.
Options	Not used, Relay x All the available relays are displayed.
Factory setting	Not used

Timeout fieldbus

Navigation	 Expert → Communication → Timeout fieldbus Direct access code: 150210-000
Description	Time within which measured values must be received via fieldbus (otherwise, an error will be set). Not relevant if only measured values are read out.
User entry	1 to 99 s
Factory setting	10 s

Function USB-B

Navigation	 Expert → Communication → Function USB-B Direct access code: 012001-000
Description	Determines the operating mode of the USB interface if a cable is connected to the device.
Options	Always USB Always Ethernet over USB By user input
Factory setting	Always USB

"Ethernet" submenu

Navigation	 Expert → Communication → Ethernet
Description	Contains settings required when using the device's Ethernet interface.

MAC address

Navigation	 Expert → Communication → Ethernet → MAC address Direct access code: 150000-000
Description	Displays the MAC address

DHCP

Navigation	 Expert → Communication → Ethernet → DHCP Direct access code: 150002-000
-------------------	--

Description	The device can get its Ethernet settings through DHCP. Caution: The settings determined are not displayed until after setup acceptance!  Note: The unit always gets the same IP address if the leasing time is set long enough on the DHCP server. The PC software needs the IP address determined to establish a connection!
Options	No, Yes
Factory setting	Yes

IP address

Navigation	 Expert → Communication → Ethernet → IP address Direct access code: 150003-000
Description	Enter the IP address for the device. This is assigned by the network administrator. Contact your administrator if you have any questions Can only be edited if DHCP = No
User entry	IP address
Factory setting	000.000.000.000

Subnetmask

Navigation	 Expert → Communication → Ethernet → Subnetmask Direct access code: 150004-000
Description	Enter the subnetmask (provided by the network administrator). Can only be edited if DHCP = No
User entry	IP address
Factory setting	255.255.255.000

Gateway

Navigation	 Expert → Communication → Ethernet → Gateway Direct access code: 150005-000
Description	Enter the gateway (provided by the network administrator). Can only be edited if DHCP = No
User entry	IP address

Factory setting 000.000.000.000

Domain Name System (DNS)

Navigation  Expert → Communication → Ethernet → Domain Name System (DNS)
Direct access code: 150009-000

Description Enter the IP address of a DNS server (provided by the network administrator).
Needed if you wish to use the name of the email server (e.g., smtp.example.org) instead of the IP address, for example, to send emails
Can only be edited if DHCP = No

User entry IP address

Factory setting 000.000.000.000

Disable port

Navigation  Expert → Communication → Ethernet → Disable port
Direct access code: 150020-000

Description Ports that are not needed can be switched off for security reasons.
CDI is the protocol that the configuration software/analysis software uses to communicate with the device.
 All other ports (SNTP, SMTP, web server) are automatically disabled if the function is switched off.

Options CDI, OPC, Modbus Slave
F

Factory setting ---- (no port disabled)

Port

Navigation  Expert → Communication → Ethernet → Port
Direct access code: 150001-000

Description The system communicates with the PC software through this communication port.
 If the network is protected by a firewall, this port may have to be enabled. In this case, contact the network administrator.

User entry Number (max. 5 digits)

Factory setting 8000

OPC port

Navigation	 Expert → Communication → Ethernet → OPC port Direct access code: 150010-000
Description	Values can be read via OPC server using this communication port.  If the network is protected by a firewall, this port may have to be enabled. In this case, contact the network administrator.
User entry	Number (max. 5 digits)
Factory setting	8002

Web server

Navigation	 Expert → Communication → Ethernet → Web server Direct access code: 470000-000
Description	Enable or disable the web server function. The instantaneous values can only be displayed using an Internet browser when the web server is activated.  It is only possible to connect to the web server via the Ethernet interface!
Options	No (web server is off), Yes (web server is active)
Factory setting	Yes

"Configuration Web server" submenu

Navigation	 Expert → Communication → Ethernet → Configuration Web server
Description	Configure the web server or specify which functionality should be possible via the web server. Only visible if web server = Yes.  Instantaneous value display is always possible once the web server is switched on.

Port

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Port Direct access code: 470003-000
Description	The web server communicates through this communication port.  If the network is protected by a firewall, this port may have to be enabled. In this case, contact the network administrator.

User entry Number (max. 5 digits)

Factory setting 80

Setup

Navigation  Expert → Communication → Ethernet → Configuration Web server → Setup
Direct access code: 470001-000

Description The device can be configured via the web server.
For security reasons it is advisable to switch off configuration via the web server after commissioning.
Contact the network administrator for questions related to IT security.

Options No, Yes

Factory setting Yes

Firmware update

Navigation  Expert → Communication → Ethernet → Configuration Web server → Firmware update
Direct access code: 470002-000

Description Firmware can be updated via the web server.

Options No, Yes

Factory setting No

Remote control

Navigation  Expert → Communication → Ethernet → Configuration Web server → Remote control
Direct access code: 470004-000

Description The device can be remote-controlled via the web server.

Options No, Yes

Factory setting No

WebDAV server

Navigation	 Expert → Communication → Ethernet → Configuration Web server → WebDAV server Direct access code: 470006-000
Description	The SD card can be read out via the WebDAV client.
Options	No, Yes
Factory setting	No

Meas. val. without login

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Meas. val. without login Direct access code: 470009-000
Description	Allow access to current measured values without logging in. URL: http:\\<ip>\liv
Options	Yes, No
Factory setting	Yes

"Authentication" submenu

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Authentication
-------------------	---

Description Set the passwords for the different users who can access the device via the web server.

	Operator	Admin	Service
Measured value display	Yes	Yes	Yes
Display instrument health status	Yes	Yes	Yes
Configuration	No	Yes	Yes
Configuration incl. service parameter	No	No	Yes
Update firmware	No	Yes	Yes
WebDAV	Yes	Yes	Yes

 Change the following passwords during commissioning.

Operator

ID

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Authentication → ID Direct access code: 470104-000
-------------------	---

Description	ID required in order to access the device. Pay attention to case-sensitivity. Cannot be edited.
--------------------	--

Factory setting	operator
------------------------	----------

Password

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Authentication → Password Direct access code: 470105-000
-------------------	---

Description	Enter the password for this user account. Pay attention to case-sensitivity.
--------------------	---

User entry	Text (max. 12 characters)
-------------------	---------------------------

Factory setting	operator
------------------------	----------

Administrator

ID

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Authentication → ID Direct access code: 470101-000
-------------------	---

Description	ID required in order to access the device. Pay attention to case-sensitivity. Cannot be edited.
--------------------	--

Factory setting	admin
------------------------	-------

Password

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Authentication → Password Direct access code: 470102-000
-------------------	---

Description	Enter the password for this user account. Pay attention to case-sensitivity.
--------------------	---

User entry Text (max. 12 characters)

Factory setting admin

Service

ID

Navigation  Expert → Communication → Ethernet → Configuration Web server → Authentication → ID
Direct access code: 470107-000

Description ID required in order to access the device. Pay attention to case-sensitivity
Cannot be edited.

Factory setting service

Password

Navigation  Expert → Communication → Ethernet → Configuration Web server → Authentication → Password
Direct access code: 470108-000

Description Enter the password for this user account.
Pay attention to case-sensitivity.

User entry Text (max. 12 characters)

Factory setting service

"Timeouts" submenu

Navigation  Expert → Communication → Ethernet → Configuration Web server → Timeouts

Description Timeouts for the web server. Only change settings if slow network connections are causing transmission problems.

 The settings are only adopted if the browser has been restarted or a new tab opened.
Caution: Settings should only be changed by experts.

Connection quality

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Timeouts → Connection quality Direct access code: 470200-000
Description	Configuration of typical timeout values for the web server connection.  The default values can be changed if necessary.
Options	Please select, Local network (LAN/WLAN), Wireless/mobile (fast connect.), Wireless/mobile (slow connect)
Factory setting	Please select

Get timeout

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Timeouts → Get timeout Direct access code: 470201-000
Description	Maximum time to load a new page before the browser ends the connection.
User entry	5 to 999 s
Factory setting	25

Set timeout

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Timeouts → Set timeout Direct access code: 470202-000
Description	Maximum time to write a value or execute an action before the browser ends the connection.
User entry	5 to 999 s
Factory setting	5

Put timeout

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Timeouts → Put timeout Direct access code: 470203-000
Description	Maximum time to transmit files to or from the device before the browser ends the connection.

User entry 5 to 999 s

Factory setting 240

Ping interval

Navigation  Expert → Communication → Ethernet → Configuration Web server → Timeouts → Ping interval
Direct access code: 470204-000

Description Interval in which the browser checks device reachability.
 The check is switched off if 0 s is set. This is for diagnostic purposes only and should not be set!

User entry 0 to 999 s

Factory setting 10

Ping timeout

Navigation  Expert → Communication → Ethernet → Configuration Web server → Timeouts → Ping timeout
Direct access code: 470205-000

Description Time in which the device must respond before the browser ends the connection.

User entry 5 to 99 s

Factory setting 15

Ping retry

Navigation  Expert → Communication → Ethernet → Configuration Web server → Timeouts → Ping retry
Direct access code: 470206-000

Description Number of retries if the device does not respond.

User entry 0 to 5

Factory setting 0

Poll timeout

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Timeouts → Poll timeout Direct access code: 470207-000
Description	Maximum permitted time to refresh the website.
User entry	5 to 99 s
Factory setting	5

"Serial interface" submenu

Navigation	 Expert → Communication → Serial interface
Description	Contains the settings required if you are using the RS232 or RS485 interface of the device.

Type

Navigation	 Expert → Communication → Serial interface → Type Direct access code: 150100-000
Description	Configure how the serial interface is used. Pay attention to the terminal assignment.
Options	RS232, RS485, Debug (only for service purposes)
Factory setting	RS232

Protocol

Navigation	 Expert → Communication → Serial interface → Protocol Direct access code: 150105-000
Description	Define the serial interface protocol. Note: The device automatically disables incompatible settings.
Options	PC software, Modbus Slave (only if type = RS485)
Factory setting	PC software

Baud rate

Navigation	 Expert → Communication → Serial interface → Baud rate Direct access code: 150101-000
-------------------	---

Description	Transmission speed ("Baud rate") - must be the same as the settings for the PC software.
Options	9600, 19200, 38400, 57600, 115200
Factory setting	19200

Parity

Navigation	 Expert → Communication → Serial interface → Parity Direct access code: 150103-000
Description	Parity Only visible if protocol ≠ PC software
Options	None, Even, Odd
Factory setting	None

Stop bits

Navigation	 Expert → Communication → Serial interface → Stop bits Direct access code: 150104-000
Description	Stop bits Only visible if protocol ≠ PC software
Options	1, 2
Factory setting	1

Device address

Navigation	 Expert → Communication → Serial interface → Device address Direct access code: 150102-000
Description	Every device operated using RS232/RS485 must have an individual address (00-30). Only visible if type = RS485
User entry	0 to 30
Factory setting	0

"Modbus Slave" submenu (option)

Navigation	 Expert → Communication → Modbus Slave
Description	Configure the Modbus settings for the device.  Detailed descriptions of this device option can be found in the associated documentation.

Modbus

Navigation	 Expert → Communication → Modbus Slave → Modbus Direct access code: 480000-000
Description	Specify the physical interface to be used.
Options	Not used, RS485, Ethernet
Factory setting	Not used

Device address

Navigation	 Expert → Communication → Modbus Slave → Device address Direct access code: 480001-000
Description	Enter the device address at which this device can be accessed on the bus. Only visible if Modbus = RS485
User entry	1 to 247
Factory setting	1

Port

Navigation	 Expert → Communication → Modbus Slave → Port Direct access code: 480004-000
Description	Port via which the Modbus protocol can be activated. Only visible if Modbus = Ethernet
User entry	Number (max. 5 digits)
Factory setting	502

"Serial interface" submenu

Navigation	 Expert → Communication → Modbus Slave → Serial interface
-------------------	--

Description	Contains settings for the serial interface. Only visible if Modbus = RS485
--------------------	---

Baud rate

Navigation	 Expert → Communication → Modbus Slave → Serial interface → Baud rate Direct access code: 150101-000
-------------------	--

Description	Transmission speed ("Baud rate") - must be the same as the settings for the PC software. Only visible if Modbus = RS485
--------------------	--

Options	9600, 19200, 38400, 57600, 115200
----------------	-----------------------------------

Factory setting	19200
------------------------	-------

Parity

Navigation	 Expert → Communication → Modbus Slave → Serial interface → Parity Direct access code: 150103-000
-------------------	--

Description	Parity Only visible if Modbus = RS485
--------------------	--

Options	None, Even, Odd
----------------	-----------------

Factory setting	None
------------------------	------

Stop bits

Navigation	 Expert → Communication → Modbus Slave → Serial interface → Stop bits Direct access code: 150104-000
-------------------	--

Description	Parity Only visible if Modbus = RS485 and parity = None
--------------------	--

Options	1, 2
----------------	------

Factory setting	1
------------------------	---

15.1.5 "Application" submenu

Define various application-specific settings (e.g., group settings, limit values etc.).

"Maths - Maths x" submenu

Navigation  Expert → Application → Maths → Maths x

Description Configuration of the mathematics channels.
 x = place holder for selected mathematics channel

Function

Navigation  Expert → Application → Maths → Maths x → Function
Direct access code: 400000-000
Examples: Maths 1: 400000-000; Maths 4: 400000-003

Description Switch mathematics channel on or off.

Options Switched off, Formula editor

Factory setting Switched off

Channel ident.

Navigation  Expert → Application → Maths → Maths x → Channel ident.
Direct access code: 400001-000
Examples: Maths 1: 400001-000; Maths 4: 400001-003

Description Measuring point name (e.g., "Pump") or description of the function performed with this input (e.g., "Fault message").

User entry Text (max. 16 characters)

Factory setting Maths x

Formula

Navigation  Expert → Application → Maths → Maths x → Formula
Direct access code: 400002-000
Examples: Maths 1: 400002-000; Maths 4: 400002-003

Description	Enter the desired calculation formula. Analog, digital or already active mathematics channels can be used. Description of formula editor →  130 Only visible if function = Formula editor
User entry	Formula
The result is	
Navigation	 Expert → Application → Maths → Maths x → The result is Direct access code: 400003-000 Examples: Maths 1: 400003-000; Maths 4: 400003-003
Description	Configure which data type the calculation returns. This setting affects how the channel saves and is displayed. If you add 2 analog channels, for example, the result is an "instantaneous value". Instantaneous value: If, for example, two analog channels are added ($AI(1;1)+AI(1;2)$), the result is an instantaneous value. State: The state/status of an individual analog input can be output as the result. A relay can also be actuated as a result. Counter: If, for example, two counters from digital inputs are added ($DI(3;1)+DI(3;5)$), the result is a counter. Operating time from status: The status (logical "1" or "0") of one or more digital inputs that are connected by addition can be analyzed. If the result of the calculation is not equal to 0, the counter for the operating time starts. The time is increased by 0.1 s every 100 ms. Operating time from total: If several digital inputs that are configured as "operational time" are added together, the result is the total of all the individual operating times. Control input: The function corresponds to a digital input that has been configured as a control input.
Options	Instantaneous value, State, Counter, Operating time from status, Operating time from total, Control input
Factory setting	Instantaneous value
Plot type	
Navigation	 Expert → Application → Maths → Maths x → Plot type Direct access code: 400015-000 Examples: Maths 1: 400015-000; Maths 4: 400015-003
Description	The mathematics channels are recalculated every 100 ms. Depending on the save cycle, the selected data is determined/saved from the calculated values.
Options	Instantaneous value, Average, Minimum value, Maximum value, Minimum + Maximum, Counter, Current value + Counter
Factory setting	Average

Engineering unit

Navigation  Expert → Application → Maths → Maths x → Engineering unit
 Direct access code: 400004-000
 Examples: Maths 1: 400004-000; Maths 4: 400004-003

Description Unit of the calculated value.
 Only visible if the result is = Instantaneous value or Counter

User entry Text (max. 6 characters)

Decimal point

Navigation  Expert → Application → Maths → Maths x → Decimal point
 Direct access code: 400005-000
 Examples: Maths 1: 400005-000; Maths 4: 400005-003

Description Number of places after decimal point for the display.
 Only visible if function = Formula editor and the result is = Instantaneous value or Counter

Options None, One (X.Y), Two (X.YY), Three (X.YYY), Four (X.YYYY), Five (X.YYYYY)

Factory setting One (X.Y)

Action

Navigation  Expert → Application → Maths → Maths x → Action
 Direct access code: 400006-000
 Examples: Maths 1: 400006-000; Maths 4: 400006-003

Description Set up the function of the control input.
 Only visible if the result is = Control input

Action	Description
Start/stop recording	The device only saves data as long as a high signal is present
Screensaver on	Switches backlighting/display off, low = off, high = on
Lock setup	The user can only change the setup if a low signal is present
Time synchronization	If a high signal is applied, the device rounds the system time up/down (only for Low→ High change): 0 to 29 → round down; 30 to 59 → round up
Set point monitoring on/off	The entire set point monitoring function of the device can be switched on (for "High") or switched off (for "Low").
Block keyboard/navigator	The device can only be operated if a low signal is present. Otherwise, all key activation and navigator actions are discarded.
Start/stop analysis 1	Starts/ends the external analysis (the analysis only runs as long as the signal is high). Measured value acquisition for the graphic display continues.

Options	Switched off, Start/stop recording, Screensaver on, Lock setup, Time synchronization, Set point monitoring on/off, Block keyboard/navigator, Start/stop analysis 1
----------------	--

Factory setting	Switched off
------------------------	--------------

Switches relay

Navigation	 Expert → Application → Maths → Maths x → Switches relay Direct access code: 400007-000 Examples: Maths 1: 400007-000; Maths 4: 400007-003
-------------------	---

Description	Switches the relevant relay when the digital input is low/high. Only visible if the result is = Control input or State
--------------------	---

Options	Not used, Relay x All the available relays are displayed.
----------------	--

Factory setting	Not used
------------------------	----------

Description 'H'

Navigation	 Expert → Application → Maths → Maths x → Description 'H' Direct access code: 400008-00x Examples: Maths 1: 400008-000; Maths 4: 400008-003
-------------------	--

Description	Condition description when the digital input is active. This text is shown on the display and saved to memory. Only visible if the result is = Control input or State
--------------------	--

User entry	Text (max. 6 characters)
-------------------	--------------------------

Factory setting	On
------------------------	----

Description 'L'

Navigation	 Expert → Application → Maths → Maths x → Description 'L' Direct access code: 400009-00x Examples: Maths 1: 400009-000; Maths 4: 400009-003
-------------------	--

Description	Condition description when the digital input is not active. This text is shown on the display and saved to memory. Only visible if the result is = Control input or State
--------------------	--

User entry	Text (max. 6 characters)
-------------------	--------------------------

Factory setting	Off
------------------------	-----

Save event	
Navigation	 Expert → Application → Maths → Maths x → Save event Direct access code: 400010-00x Examples: Maths 1: 400010-000; Maths 4: 400010-003
Description	Determines whether the condition change from low to high or high to low is stored in the event logbook.  Requires higher memory capacity. Only visible if the result is = Control input or State
Options	No, Yes, only "On" message
Factory setting	Yes
Event message	
Navigation	 Expert → Application → Maths → Maths x → Event message Direct access code: 400018-00x Examples: Maths 1: 400018-000; Maths 4: 400018-003
Description	"Do not acknowledge": No message is shown if the state of the mathematics channel changes. "Acknowledge": A message window is shown on the screen which has to be acknowledged by operating a push button. Only visible if the result is = Control input or State
Options	Do not acknowledge, Acknowledge
Factory setting	Do not acknowledge
Event text L->H	
Navigation	 Expert → Application → Maths → Maths x → Event text L->H Direct access code: 400011-00x Examples: Maths 1: 400011-000; Maths 4: 400011-003
Description	Description of condition change from low to high. Event text is stored (e.g., start filling). Only visible if the result is = Control input or State
User entry	Text (max. 22 characters)

Event text H->L

Navigation	 Expert → Application → Maths → Maths x → Event text H->L Direct access code: 400012-00x Examples: Maths 1: 400012-000; Maths 4: 400012-003
Description	Description of condition change from high to low. Event text is stored (e.g., stop filling). Only visible if the result is = Control input or State
User entry	Text (max. 22 characters)

Record duration

Navigation	 Expert → Application → Maths → Maths x → Record duration Direct access code: 400013-00x Examples: Maths 1: 400013-000; Maths 4: 400013-003
Description	The duration between "On" and "Off" can be recorded. The duration is appended to the "Off" event text (<hhhh>h<mm>:<ss>). Power failure times do not affect the duration. If the digital channel was "on" before the power failure and is still "on" after the power failure, the duration continues. Only visible if the result is = Control input or State
Options	No, Yes
Factory setting	No

Zoom start

Navigation	 Expert → Application → Maths → Maths x → Zoom start Direct access code: 400016-00x Examples: Maths 1: 400016-000; Maths 4: 400016-003
Description	If the whole value range is not used, you can configure the lower value of the required range here. The zoom has no effect on saving. Only visible if the result is = Instantaneous value
User entry	Number (max. 8 digits)
Factory setting	0

Zoom end

Navigation	 Expert → Application → Maths → Maths x → Zoom end Direct access code: 400017-00x Examples: Maths 1: 400017-000; Maths 4: 400017-003
Description	Like "Zoom start". Enter the upper value of the required range. Only visible if the result is = Instantaneous value
User entry	Number (max. 8 digits)
Factory setting	100

Totalizer

Navigation	 Expert → Application → Maths → Maths x → Totalizer Direct access code: 400014-00x Examples: Maths 1: 400014-000; Maths 4: 400014-003
Description	Initial setting for the totalizer. Useful when continuing measurements recorded to date with an (electro)-mechanical counter. Only visible if the result is = Counter, Operating time from status or Operating time from total
User entry	Number (max. 15 digits)
Factory setting	0

Formula editor

Enter the desired calculation formula.

Analog, digital or already active mathematics channels can be used.

Formula editor

Navigation	 Expert → Application → Maths → Maths x → Formula Direct access code: 400002-000  x = place holder for selected mathematics channel  A text field with the formula currently used appears. If the field is empty a formula has not yet been defined for the mathematics channel.
Description	Individual channels can be mathematically linked and calculated with functions. The mathematics channels calculated in this way are treated as "real" channels, regardless of whether they are connected conventionally or via fieldbus. Enter the desired calculation formula. Analog and digital channels can be used, as can mathematics channels that are already active. A formula with up to 200 characters can be created using this editor. If the formula is finished, click OK to close the editor and accept the formula entered. The common entry and arithmetic operators and inputs are described in detail in the following sections.

Inputs

Inputs are described in the formula using the following syntax:

Input type (signal type; channel number)

Type of input	Description
AI	Analog inputs
DI	Digital inputs
MI	Mathematics inputs

Signal type	Description
1	Instantaneous value (measured value)
2	State
3	Counter/operating time
5	Validity: The validity of an analog channel or a mathematics channel is relayed. The relayed value of the function is 0 in the event of: ■ Cable open circuit ■ Invalid measured value ■ Sensor error ■ Input signal too high/low ■ Error value The relayed value of the function is 1 in the event of: Measured value OK, even if the limit value is breached
6	Delta count
7 to 10	Analysis 1 to 4
11	Totalizer
12	Duration

 Not all signal types are available for each input type. These depend on the respective device options.

Channel number:

Analog channel 1 = 1, analog channel 2 = 2, digital channel 1 = 1, ...

Examples:

DI(2;4)	State of digital channel 4
AI(1;1)	Instantaneous value of analog channel 1

Status of a limit value:

LMT (type, limit number)

Type	Description
1	"Instantaneous value": Currently set limit value
2	"State": The function returns the status of a limit value The result is 1 if the limit value is violated. The result is 0 if ■ The limit value is not violated ■ The limit value is not switched on ■ Limit value monitoring is switched off (e.g., per control input)

Examples:

LMT (1;1)	Instantaneous value of limit value 1
LMT (2;3)	State of limit value 3

Priority of operators/functions

The formula is processed based on universally applicable mathematics rules:

- Parentheses first
- Exponents before multiplication or division
- Multiplication or division before addition or subtraction
- Calculate from left to right

Operators

Arithmetic operators:

Operator	Function
+	Addition
-	Subtraction negative sign
*	Multiplication
/	Division

Decimal separator

Both the decimal point and the decimal comma can be used in the formula editor.
Thousand separators are not supported.

Check whether formula is valid or malfunctions

A formula is invalid if:

- The channels used are not switched on or are in the wrong operating mode (is not verified during formula entry as the channel could be switched on subsequently)
- It contains invalid characters/formulas/functions/operators
- Syntax errors (e.g., wrong number of parameters) occur in the formulas
- There are incorrect parentheses in the formula (number of open parentheses unequal to number of closed parentheses)
- Division is by zero
- A channel refers to itself (infinite recursion)

Invalid formulas are deactivated when the setup is accepted or the device is started.

Undetectable errors: wherever possible, errors in the formula are reported immediately during input. However, given the possible complexity of the formula entered (e.g., nested formulas), it is not possible to detect every error.

"Totalization" submenu

Navigation

 Expert → Application → Maths → Maths x → Totalization

Description

Settings only needed if the calculated value (e.g., for quantity calculation) should be integrated. Analysis time frames, see "Signal analysis".

Totalization

Navigation	 Expert → Application → Maths → Maths x → Totalization → Totalization Direct access code: 400050-00x Examples: Maths 1: 400050-000; Maths 4: 400050-003
Description	Totalization allows the volume (in m ³) to be calculated from an analog signal (e.g., flow rate in m ³ /h).
Options	No, Yes
Factory setting	No

Totalization base

Navigation	 Expert → Application → Maths → Maths x → Totalization → Totalization base Direct access code: 400051-00x Examples: Maths 1: 400051-000; Maths 4: 400051-003
Description	Select the required time base. Example: ml/s -> time base seconds (s); m ³ /h -> time base hours (h). Only visible if totalization = Yes
Options	Second (s), Minute (min), Hour (h), Day (d)
Factory setting	Second (s)

Unit

Navigation	 Expert → Application → Maths → Maths x → Totalization → Unit Direct access code: 400052-00x Examples: Maths 1: 400052-000; Maths 4: 400052-003
Description	Enter the unit for the quantity calculated by totalization (e.g., "m ³ "). Only visible if totalization = Yes
User entry	Text (max. 6 characters)

Low flow cut off

Navigation	 Expert → Application → Maths → Maths x → Totalization → Low flow cut off Direct access code: 400053-00x Examples: Maths 1: 400053-000; Maths 4: 400053-003
-------------------	--

Description	If the volume flow recorded is below the set value, these quantities are not added to the counter. If the input is scaled from 0 to y, or if the pulse input is used, all values that are smaller than the set value are not recorded. If the input is scaled from -x to +y, all values around the zero point (i.e., also negative values) are not recorded. Only visible if totalization = Yes
--------------------	---

User entry	Number (max. 8 digits)
-------------------	------------------------

Factory setting	0
------------------------	---

Calc. factor

Navigation	 Expert → Application → Maths → Maths x → Totalization → Calc. factor Direct access code: 400054-00x Examples: Maths 1: 400054-000; Maths 4: 400054-003
-------------------	--

Description	Factor for calculating the integrated value (e.g., the transmitter delivers l/s -> totalization base = second -> engineering unit required is m³ --> enter factor 0.001) Only visible if totalization = Yes
--------------------	---

User entry	Number (max. 8 digits)
-------------------	------------------------

Factory setting	1.0
------------------------	-----

Totalizer

Navigation	 Expert → Application → Maths → Maths x → Totalization → Totalizer Direct access code: 400055-00x Examples: Maths 1: 400055-000; Maths 4: 400055-003
-------------------	---

Description	Initial setting for the totalizer. Useful when continuing measurements recorded to date with an (electro)-mechanical counter. Only visible if totalization = Yes
--------------------	--

User entry	Number (max. 15 digits)
-------------------	-------------------------

Factory setting	0
------------------------	---

"Fault mode" submenu

Navigation	 Expert → Application → Maths → Maths x → Fault mode
-------------------	---

Description	Contains settings that define how this channel is to react under fault conditions (e.g., if an input channel has a cable open circuit or there is division by 0).
--------------------	---

On error

Navigation	 Expert → Application → Maths → Maths x → Fault mode → On error Direct access code: 400060-00x Examples: Maths 1: 400060-000; Maths 4: 400060-003
Description	Configure which value the device should continue working with (for calculations) if the measured value is not valid (e.g., cable open circuit).
Options	Invalid calculation, Error value
Factory setting	Invalid calculation

Error value

Navigation	 Expert → Application → Maths → Maths x → Fault mode → Error value Direct access code: 400061-00x Examples: Maths 1: 400061-000; Maths 4: 400061-003
Description	The device continues calculating with this value in the event of an error. Only visible if on error = Error value
User entry	Number (max. 8 digits)
Factory setting	0

Copy settings

Navigation	 Expert → Application → Maths → Maths x → Copy settings Direct access code: 400200-00x Examples: Maths 1: 400200-000; Maths 4: 400200-003
Description	Copies settings from actual channel to selected channel.
Options	No, In maths. channel x Users can choose from all the available maths channels.
Factory setting	No

"Signal analysis" submenu

Navigation	 Expert → Application → Signal analysis
Description	Contains settings for signal analysis (saving).

Analysis x

Navigation	 Expert → Application → Signal analysis → Analysis x Direct access code: 44000x-000 Examples: Analysis 1: 440000-000; Analysis 4: 440003-000
Description	For the set timeframe, determines the minimum, maximum and average values, quantities and operating times.  If the "Controlled externally" option is to be used, a digital input or a maths channel must be set to "Function = Control input" and "Action = Start/stop analysis x". Only analysis 1 can be configured; analyses 2-4 are permanently set to daily analysis, monthly analysis and annual analysis
Options	Switched off, Controlled externally, 1min, 2min, 3min, 4min, 5min, 10min, 15min, 30min, 1h, 2h, 3h, 4h, 6h, 8h, 12h
Factory setting	Switched off

Synchron. time

Navigation	 Expert → Application → Signal analysis → Synchron. time Direct access code: 440004-000
Description	Time for completing the signal analysis. If, for example, 07:00 is entered, then the daily analysis will run from 07:00 on one day until 07:00 on the following day.
User entry	Time
Factory setting	00:00

Reset to zero

Navigation	 Expert → Application → Signal analysis → Reset to zero Direct access code: 440007-000
Description	Reset analysis. Note: Should only be executed after the device has adopted the setup.
Options	Please select, Analysis x, Totalizer, All
Factory setting	Please select

Reset channel

Navigation	 Expert → Application → Signal analysis → Reset channel Direct access code: 440010-000
Description	Reset analysis of a single channel. Note: Should only be executed after the device has adopted the setup.
Options	Please select, Universal input x, Digital input x, Maths x, Set point x, Relay x All active inputs are available for selection.
Factory setting	Please select

"Limits" submenu

Navigation	 Expert → Application → Limits
Description	Limit values can monitor the measured values. In the event of an alarm violation relays can be switched, for example.

Add limit value

Navigation	 Expert → Application → Limits → Add limit value Direct access code: 450300-000
Description	Add a new limit value.
Options	No, Yes
Factory setting	No

Delete limit value

Navigation	 Expert → Application → Limits → Delete limit value Direct access code: 450301-000
Description	Delete a limit value from the list.
Options	No, limit value x
Factory setting	No

"Limit x" submenu

Navigation	 Expert → Application → Limits → Limit x
-------------------	---

Description View or change the settings for the selected limit value.

 x = place holder for selected limit value

Channel/value

Navigation  Expert → Application → Limits → Limit x → Channel/value
Direct access code: 450000-0xx
Examples: Limit 1: 450000-000; Limit 30: 450000-029

Description Select which input/calculated value the limit value refers to.

Options Switched off, Universal input x, Digital input x, Maths x

Factory setting Switched off


Type

Navigation  Expert → Application → Limits → Limit x → Type
Direct access code: 450001-0xx
Examples: Limit 1: 450001-000; Limit 30: 450001-029



Description Type of limit value (depends on the input variable).

Options Switched off, Upper set point, Lower set point, Analysis x

Description of the individual set point types

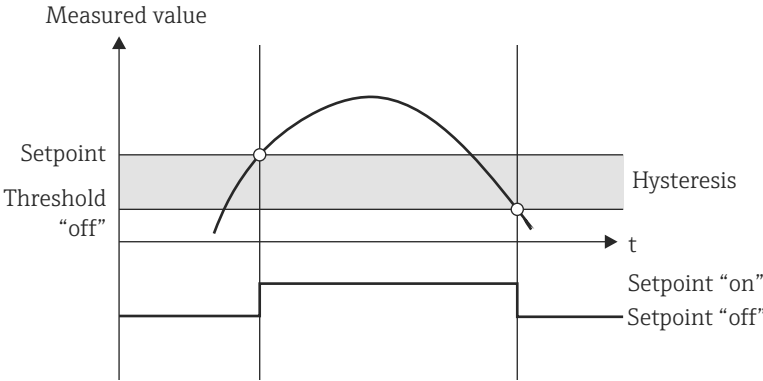Set point type/function	Description
Hysteresis	For every set point, the switch point can be controlled via a hysteresis. The hysteresis is set as an absolute value (only positive values) in the unit of the respective channel (e.g., upper set point = 100 m, hysteresis = 1 m: set point on = 100 m, set point off = 99 m)
Upper set point	The limit value is active if the value exceeds the configured value. The limit value is switched off if the limit value, including hysteresis, is undershot. 

A0010187-EN

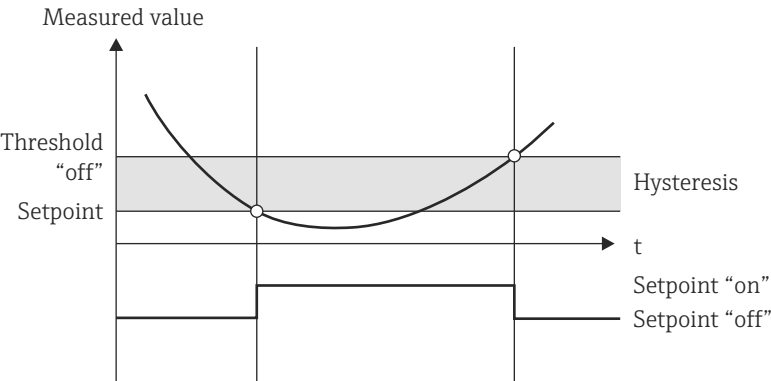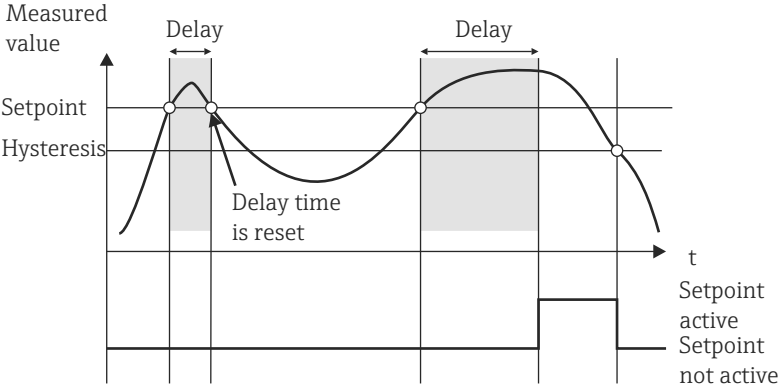Set point type/function	Description
Lower set point	The limit is active if the value drops below the configured value. The limit value is switched off if the limit value, including hysteresis, is exceeded.  A0010186-EN
Special case: Hysteresis and delay for one limit value	In the special case where the hysteresis and limit value delay are activated, a limit value is switched according to the following principle. If the hysteresis and the limit value delay are activated, the delay becomes active when a limit value is exceeded and measures the time since the start of limit value overshoot. If the measured value falls below the limit value, the delay is reset. This also occurs if the measured value falls below the limit value, but continues to be higher than the set hysteresis value. When the limit value is exceeded again, the time delay becomes active again and starts measuring from 0.  A0010193-EN

Factory setting

Switched off

Identifier	
Navigation	 Expert → Application → Limits → Limit x → Identifier Direct access code: 450015-0xx Examples: Limit 1: 450015-000; Limit 30: 450015-029
Description	Name of the limit for identification purposes.
User entry	Text (max. 16 characters)
Factory setting	Limit x

Set point

Navigation	 Expert → Application → Limits → Limit x → Set point Direct access code: 450003-0xx Examples: Limit 1: 450003-000; Limit 30: 450003-029
Description	Limit value in the set process unit, e.g., in °C, m³/h
User entry	Number (max. 10 digits)
Factory setting	0

Hysteresis (abs.)

Navigation	 Expert → Application → Limits → Limit x → Hysteresis (abs.) Direct access code: 450004-0xx Examples: Limit 1: 450004-000; Limit 30: 450004-029
Description	The alarm condition is only canceled when the signal has changed into the normal operation range by the preset value.
User entry	Number (max. 8 digits)
Factory setting	0

Time delay

Navigation	 Expert → Application → Limits → Limit x → Time delay Direct access code: 450005-0xx Examples: Limit 1: 450005-000; Limit 30: 450005-029
Description	In order to be interpreted as a limit value, the signal must exceed or undercut the preset value by at least the configured time.
User entry	0 to 99999 s
Factory setting	0 s

Switches

Navigation	 Expert → Application → Limits → Limit x → Switches Direct access code: 450006-0xx Examples: Limit 1: 450006-000; Limit 30: 450006-029
-------------------	---

Description	Switches the appropriate output in the limit value state.
Options	Not used, Relay x
Factory setting	Not used

LV messages

Navigation	 Expert → Application → Limits → Limit x → LV messages Direct access code: 450007-0xx Examples: Limit 1: 450007-000; Limit 30: 450007-029
Description	"Do not acknowledge": Alarm condition is signaled by highlighting the tag name in red (no message is output). "Acknowledge": In the event of an alarm, a message is also displayed. This message then has to be acknowledged.
Options	Do not acknowledge, Acknowledge
Factory setting	Do not acknowledge

Save event

Navigation	 Expert → Application → Limits → Limit x → Save event Direct access code: 450008-0xx Examples: Limit 1: 450008-000; Limit 30: 450008-029
Description	Stores a message in the event logbook on limit value violation.
Options	No, Yes, only "On" message
Factory setting	Yes

Event text LV on

Navigation	 Expert → Application → Limits → Limit x → Event text LV on Direct access code: 450009-0xx Examples: Limit 1: 450009-000; Limit 30: 450009-029
Description	This text (including date and time) is shown on the display and stored in the event logbook. Only available if "LV messages" is set to "Acknowledge" or "Save event" is set to "Yes". If no text is entered, the device generates its own text (e.g., Analog 1 > 100%).
User entry	Text (max. 22 characters)

Event text LV off

Navigation	 Expert → Application → Limits → Limit x → Event text LV off Direct access code: 450010-0xx Examples: Limit 1: 450010-000; Limit 30: 450010-029
Description	The same as "Event text LV on", but on return from alarm to normal condition.
User entry	Text (max. 22 characters)

Record duration of LV on

Navigation	 Expert → Application → Limits → Limit x → Record duration of LV on Direct access code: 450011-0xx Examples: Limit 1: 450011-000; Limit 30: 450011-029
Description	The duration of a limit value violation can be recorded. The duration is appended to the "Event text LV off" (format: <hhhh>h<mm>:<ss>). Power failure times do not affect the duration. If the set point was violated before the power failure and is still violated after the power failure, the duration continues.
Options	No, Yes
Factory setting	No

Save cycle

Navigation	 Expert → Application → Limits → Limit x → Save cycle Direct access code: 450012-0xx Examples: Limit 1: 450012-000; Limit 30: 450012-029
Description	Normal: Save in normal store cycle. Alarm cycle: Fast storage during an alarm violation, e.g., every second. Caution: Requires higher memory capacity!  ▪ The save cycle is set under signal groups . ▪ In the event of an alarm violation, all the groups are saved in the alarm cycle.
Options	Normal, Alarm cycle
Factory setting	Normal

Draw help line

Navigation	 Expert → Application → Limits → Limit x → Draw help line Direct access code: 450013-0xx Examples: Limit 1: 450013-000; Limit 30: 450013-029
Description	The user can configure whether this set point should be displayed in the graphic as a help line (in the color of the channel). Note: 4 lines can be shown per channel in a single group.
Options	No, Yes
Factory setting	No

Copy settings

Navigation	 Expert → Application → Limits → Limit x → Copy settings Direct access code: 450200-0xx Examples: Limit 1: 450200-000; Limit 30: 450200-029
Description	Copies settings from actual channel to selected channel.
Options	No, in limit x (all the limit values are displayed)
Factory setting	No

"Signal groups" submenu

Navigation	 Expert → Application → Signal groups
Description	Group the analog, digital and/or mathematics channels such that you can call up important information during operation (e.g., temperatures, signals in plant unit 1)  Maximum 8 channels per group!

"Group x" submenu

Navigation	 Expert → Application → Signal groups → Group x
Description	 x = place holder for selected group General settings for displaying the measured value and saving data.

Identifier

Navigation	 Expert → Application → Signal groups → Group x → Identifier Direct access code: 460000-0xx Examples: Group 1: 460000-000; Group 4: 460000-003
-------------------	---

Description Enter a name for these groups

User entry Text (max. 20 characters)

Factory setting Group x

Save cycle

Navigation  Expert → Application → Signal groups → Group x → Save cycle
Direct access code: 460001-0xx
Examples: Group 1: 460001-000; Group 4: 460001-003

Description Configure the save cycle with which this group should be saved in normal conditions (see also set point / save cycle).

 The save cycle is independent of the measured value display (see Operating Instructions).

Options Off, 1s, 2s, 3s, 4s, 5s, 10s, 15s, 20s, 30s, 1min, 2min, 3min, 4min, 5min, 10min, 15min, 30min, 1h

Factory setting 1min

Alarm cycle

Navigation  Expert → Application → Signal groups → Group x → Alarm cycle
Direct access code: 460002-0xx
Examples: Group 1: 460002-000; Group 4: 460002-003

Description Configure the save cycle with which this group should be saved in an alarm condition (limit value violation).
Caution: Requires higher memory capacity

Options Off, 1s, 2s, 3s, 4s, 5s, 10s, 15s, 20s, 30s, 1min, 2min, 3min, 4min, 5min, 10min, 15min, 30min, 1h

Factory setting 1min

Display blue

Navigation  Expert → Application → Signal groups → Group x → Display blue
Direct access code: 460003-00x
Examples: Group 1: 460003-000; Group 4: 460003-003

Description Choose which input/calculated variable is to be displayed in this group.

Options Switched off, Universal input x, Digital input x, Maths x

Factory setting Switched off

Display

Navigation  Expert → Application → Signal groups → Group x → Display
 Direct access code: 460004-00x
 Examples: Group 1: 460004-000; Group 4: 460004-003

Description Select which data from the selected channel should be displayed.
 If the "Everything" option is selected, the device switches cyclically between the various values of the channel (instantaneous value, analysis 1 etc.)

Options Instantaneous value/state, Analysis x, Totalizer, Everything

Factory setting Instantaneous value/state

Display black

Navigation  Expert → Application → Signal groups → Group x → Display black
 Direct access code: 460005-00x
 Examples: Group 1: 460005-000; Group 4: 460005-003

Description Choose which input/calculated variable is to be displayed in this group.

Options Switched off, Universal input x, Digital input x, Maths x

Factory setting Switched off

Display

Navigation  Expert → Application → Signal groups → Group x → Display
 Direct access code: 460006-0xx
 Examples: Group 1: 460006-000; Group 4: 460006-003

Description Select which data from the selected channel should be displayed.

Options Instantaneous value/state, Analysis x, Totalizer, Everything

Factory setting Instantaneous value/state

Display red

Navigation	 Expert → Application → Signal groups → Group x → Display red Direct access code: 460007-00x Examples: Group 1: 460007-000; Group 4: 460007-003
Description	Choose which input/calculated variable is to be displayed in this group.
Options	Switched off, Universal input x, Digital input x, Maths x
Factory setting	Switched off

Display

Navigation	 Expert → Application → Signal groups → Group x → Display Direct access code: 460008-0xx Examples: Group 1: 460008-000; Group 4: 460008-003
Description	Select which data from the selected channel should be displayed.
Options	Instantaneous value/state, Analysis x, Totalizer, Everything
Factory setting	Instantaneous value/state

Display green

Navigation	 Expert → Application → Signal groups → Group x → Display green Direct access code: 460009-00x Examples: Group 1: 460009-000; Group 4: 460009-003
Description	Choose which input/calculated variable is to be displayed in this group.
Options	Switched off, Universal input x, Digital input x, Maths x
Factory setting	Switched off

Display

Navigation	 Expert → Application → Signal groups → Group x → Display Direct access code: 460010-0xx Examples: Group 1: 460010-000; Group 4: 460010-003
Description	Select which data from the selected channel should be displayed.
Options	Instantaneous value/state, Analysis x, Totalizer, Everything
Factory setting	Instantaneous value/state

Display violet

Navigation	 Expert → Application → Signal groups → Group x → Display violet Direct access code: 460011-00x Examples: Group 1: 460011-000; Group 4: 460011-003
Description	Choose which input/calculated variable is to be displayed in this group.
Options	Switched off, Universal input x, Digital input x, Maths x
Factory setting	Switched off

Display

Navigation	 Expert → Application → Signal groups → Group x → Display Direct access code: 460012-0xx Examples: Group 1: 460012-000; Group 4: 460012-003
Description	Select which data from the selected channel should be displayed.
Options	Instantaneous value/state, Analysis x, Totalizer, Everything
Factory setting	Instantaneous value/state

Display orange

Navigation	 Expert → Application → Signal groups → Group x → Display orange Direct access code: 460013-00x Examples: Group 1: 460013-000; Group 4: 460013-003
Description	Choose which input/calculated variable is to be displayed in this group.
Options	Switched off, Universal input x, Digital input x, Maths x
Factory setting	Switched off

Display

Navigation	 Expert → Application → Signal groups → Group x → Display Direct access code: 460014-0xx Examples: Group 1: 460014-000; Group 4: 460014-003
Description	Select which data from the selected channel should be displayed.

Options	Instantaneous value/state, Analysis x, Totalizer, Everything
----------------	--

Factory setting	Instantaneous value/state
------------------------	---------------------------

Display cyan

Navigation	 Expert → Application → Signal groups → Group x → Display cyan Direct access code: 460015-00x Examples: Group 1: 460015-000; Group 4: 460015-003
-------------------	---

Description	Choose which input/calculated variable is to be displayed in this group.
--------------------	--

Options	Switched off, Universal input x, Digital input x, Maths x
----------------	---

Factory setting	Switched off
------------------------	--------------

Display

Navigation	 Expert → Application → Signal groups → Group x → Display Direct access code: 460016-0xx Examples: Group 1: 460016-000; Group 4: 460016-003
-------------------	--

Description	Select which data from the selected channel should be displayed.
--------------------	--

Options	Instantaneous value/state, Analysis x, Totalizer, Everything
----------------	--

Factory setting	Instantaneous value/state
------------------------	---------------------------

Display brown

Navigation	 Expert → Application → Signal groups → Group x → Display brown Direct access code: 460017-00x Examples: Group 1: 460017-000; Group 4: 460017-003
-------------------	--

Description	Choose which input/calculated variable is to be displayed in this group.
--------------------	--

Options	Switched off, Universal input x, Digital input x, Maths x
----------------	---

Factory setting	Switched off
------------------------	--------------

Display

Navigation	 Expert → Application → Signal groups → Group x → Display Direct access code: 460018-0xx Examples: Group 1: 460018-000; Group 4: 460018-003
Description	Select which data from the selected channel should be displayed.
Options	Instantaneous value/state, Analysis x, Totalizer, Everything
Factory setting	Instantaneous value/state

Grid divisions

Navigation	 Expert → Application → Signal groups → Group x → Grid divisions Direct access code: 460019-0xx Examples: Group 1: 460019-000; Group 4: 460019-003
Description	Indicates the number of lines ("amplitude grid") that should be displayed. Example: display of 0 to 100%: select 10 divisions, display 0 to 14pH: select 14 divisions.
Options	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20
Factory setting	10

Zoom

Navigation	 Expert → Application → Signal groups → Group x → Zoom Direct access code: 460028-0xx Examples: Group 1: 460028-000; Group 4: 460028-003
Description	Defines the zoom that is shown in "Curves" or "Waterfall" display mode. This setting does not affect other display modes (e.g., Curves in range, Bargraph, etc.).
Options	Do not display, Scroll display, Display blue, Display black, Display red, Display green, Display violet, Display orange, Display cyan, Display brown
Factory setting	Do not display

"E-mail" submenu

Navigation	 Expert → Application → E-mail  In the case of the "Telealarm" option under Expert → Application → Telealarm → General → Setup e-mail
Description	Contains settings that are required if alarms are to be sent by e-mail.  Test the e-mail settings under Diagnostics → Simulation → E-mail.

SMTP host		
Navigation		Expert → Application → E-mail → SMTP host Direct access code: 510062-000
Description		Enter the SMTP host here. If necessary, contact your network administrator or e-mail provider.
User entry		Text (max. 40 characters)
Server requires SSL		
Navigation		Expert → Application → E-mail → Server requires SSL Direct access code: 510061-000
Description		Specify whether the e-mail server requires a secure connection (SSL). STARTTLS: Runs on the same TCP port as unencrypted SMTP (port 25 or 587). SMTPS: Completely encrypted with own TCP port (465). If necessary, contact your network administrator or e-mail provider.
Options		No, Yes (SMTPS), Yes (STARTTLS)
Factory setting		No
Port		
Navigation		Expert → Application → E-mail → Port Direct access code: 510063-000
Description		Enter the SMTP host here. If necessary, contact your network administrator or e-mail provider.
User entry		Number (max. 4 digits)
Factory setting		25
Sender		
Navigation		Expert → Application → E-mail → Sender Direct access code: 510064-000

Description Enter the e-mail address of the device here (appears as the sender of the e-mail). If necessary, contact your network administrator or e-mail provider.

 If a valid e-mail address is not configured this might cause e-mail transmission problems, depending on the particular provider.

User entry Text (max. 60 characters)

User name

Navigation  Expert → Application → E-mail → User name
Direct access code: 510066-000

Description Specify the user name of the e-mail account. If necessary, contact your network administrator or e-mail provider.

User entry Text (max. 60 characters)

Password

Navigation  Expert → Application → E-mail → Password
Direct access code: 510067-000

Description Enter the password for authentication. If necessary, contact your network administrator or e-mail provider.

User entry Text (max. 22 characters)

"E-mail addresses" submenu

Navigation  Expert → Application → E-mail → E-mail addresses

Description Enter all the e-mail addresses to which a message should be sent in the event of an alarm.

 Assignment to the alarms is performed later on.

E-mail address x

Navigation  Expert → Application → E-mail → E-mail addresses → E-mail address x
Direct access code:
E-mail address 1: 510080-000
to
E-mail address 5: 510084-000

Description Enter an e-mail address to which a message should be sent.



Assignment to the alarms is performed later on.

User entry Text (max. 60 characters)

"Limit value violations" submenu

Navigation Expert → Application → E-mail → Limit value violations

Description Specify who should receive e-mails when limit value violations occur (both on and off messages).



Only for limit values where "Save event" is set to "Yes".

Recipient x

Navigation Expert → Application → E-mail → Limit value violations → Recipient x
Direct access code:
Recipient 1: 510110-000; Recipient 2: 510111-000

Description Select who should receive the e-mail.

Options Not used, E-mail address x

Factory setting Not used

"On/off messages" submenu

Navigation Expert → Application → E-mail → On/off messages

Description Specify who should receive e-mails when "on"/"off" events occur (for digital inputs or maths channels).



Only for inputs where "Save event" is set to "Yes".

Recipient x

Navigation Expert → Application → E-mail → On/off messages → Recipient x
Direct access code:
Recipient 1: 510115-000; Recipient 2: 510116-000

Description Select who should receive the e-mail.

Options Not used, E-mail address x

Factory setting Not used

"Errors (Fxxx/Sxxx)" submenu

Navigation  Expert → Application → E-mail → Errors (Fxxx/Sxxx)

Description Specify who should receive e-mails when errors occur (Fxxx and Sxxx messages).

Recipient x

Navigation  Expert → Application → E-mail → Errors → Recipient x
Direct access code:
Recipient 1: 510120-000; Recipient 2: 510121-000

Description Select who should receive the e-mail.

Options Not used, E-mail address x

Factory setting Not used

"Maintenance required" (submenu)

Navigation  Expert → Application → E-mail → Maintenance required

Description Specify who should receive e-mails when maintenance is required (Mxxx messages).

Recipient x

Navigation  Expert → Application → E-mail → Maintenance required → Recipient x
Direct access code:
Recipient 1: 510130-000; Recipient 2: 510131-000

Description Select who should receive the e-mail.

Options Not used, E-mail address x

Factory setting Not used

"WebDAV Client" submenu

Navigation  Expert → Application → WebDAV Client

Description

All recorded data is transferred to an external WebDAV server (e.g., NAS). The format can be specified or selected via **"Setup → Advanced setup → System → External memory -> Save as"**.

Parameter	Description	Direct access code
Enable	Switch WebDAV Client functionality on/off. When active, the device copies the saved measured values automatically to the configured server.  Only possible using the Ethernet interface! Options: No, Yes, Yes (SSL) Factory setting: No	472000-000
IP address	Enter the IP address of the WebDAV server.  A DNS name can also be used. User entry: IP address Factory setting: 0.0.0.0	472001-000
Port	This communication port is used to communicate with the WebDAV Server.  If the network is protected by a firewall, this port may have to be enabled. In this case, contact the network administrator. User entry: Numbers (max. 5 digits) Factory setting: 80	472002-000
User name	Input of the user name that can access the WebDAV server. User entry: Text (max. 20 characters)	472004-000
Password	Password for accessing the WebDAV server. User entry: Text (max. 20 characters)	472007-000
Directory	Enter the directory in which the data should be saved. User entry: Text (max. 120 characters)	472005-000
Save as	"Protected format": All data is stored in a manipulation-protected encrypted format. This data can only be visualized by the PC analysis software. "Open format": Data is stored in a CSV format, this can be opened by a number of different programs (Attention: no manipulation protection). Options: Protected format, Open format (*.csv) Factory setting: Protected format	472010-000

 Test the WebDAV client settings under **"Diagnostics → Simulation → WebDAV client"**.

15.1.6 "Diagnostics" submenu

Device information and service functions for a quick device check.

 Only some of the diagnostic functions are available under Expert → Diagnostics! For other functions, see the Main menu → Diagnostics

Actual diagnostics

Navigation

 Expert → Diagnostics → Actual diagnostics
Direct access code: 050000-000

Description

Displays the current diagnostic message.

Last diagnostics

Navigation  Expert → Diagnostics → Last diagnostics
Direct access code: 050005-000

Description Displays the last diagnostic message.

Last restart

Navigation  Expert → Diagnostics → Last restart
Direct access code: 050010-000

Description Information as to when the device was last restarted (e.g., due to a power failure).

"Event logbook" submenu

Navigation  Expert → Diagnostics → Event logbook

Description Events such as a limit value violation and power failure are listed in the correct time sequence.

"Device information" submenu

Navigation  Expert → Diagnostics → Device information

Description Displays important device information.

Device tag

Navigation  Expert → Diagnostics → Device information → Device tag
Direct access code: 000031-000

Description Individual device tag name/unit identifier (max. 32 characters).

Serial number

Navigation  Expert → Diagnostics → Device information → Serial number
Direct access code: 000027-000

Description Individual serial number of the device. Provide these details when ordering spare parts or asking any questions about the unit.

Order code

Navigation

Expert → Diagnostics → Device information → Order code
Direct access code: 000029-000

Description

Displays the order code.

The order code indicates the attribute of all the features of the product structure for the device and thus uniquely identifies the device. It can also be found on the nameplate.

**Useful applications of the order code**

- To order an identical replacement device.
- To check the ordered device features using the delivery note.

Firmware version

Navigation

Expert → Diagnostics → Device information → Firmware version
Direct access code: 000026-000

Description

Displays the installed firmware version of the device. Please specify these details if you have any questions about the device.

ENP version

Navigation

Expert → Diagnostics → Device information → ENP version
Direct access code: 000032-000

Description

Displays the version of the electronic nameplate. Please specify these details if you have any questions about the device.

ENP device name

Navigation

Expert → Diagnostics → Device information → ENP device name
Direct access code: 000020-000

Description

Displays the ENP device name (electronic name plate). Please specify these details if you have any questions about the device.

Device name

Navigation

Expert → Diagnostics → Device information → Device name
Direct access code: 000021-000

Description

Displays the device name. Please specify these details if you have any questions about the device.

Manufacturer ID

Navigation

Expert → Diagnostics → Device information → Manufacturer ID
Direct access code: 000022-000

Description

Displays the manufacturer ID. Please specify these details if you have any questions about the device.

Manufacturer name

Navigation

Expert → Diagnostics → Device information → Manufacturer name
Direct access code: 000023-000

Description

Displays the manufacturer name. Please specify these details if you have any questions about the device.

Firmware

Navigation

Expert → Diagnostics → Device information → Firmware
Direct access code: 009998-000

Description

Displays the installed firmware of the device. Please specify these details if you have any questions about the device.

"Simulation" submenu

Navigation

Expert → Diagnostics → Simulation

Description

Settings for simulation mode.

Operating mode

Navigation

Expert → Diagnostics → Simulation → Operating mode
Direct access code: 010010-000

Description	Normal operation: Unit plots the signals from the connected measurement points. Simulation: Instead of operating with the real measurement points the signals are simulated (using the actual settings).
Options	Normal operation, Simulation
Factory setting	Normal operation



71762110