# Brief Operating Instructions NAR300 system

Oil leak detector float sensor



These Instructions are Brief Operating Instructions; they are not a substitute for the Operating Instructions pertaining to the device.

Detailed information about the device can be found in the Operating Instructions and the other documentation: Available for all device versions via:

- Internet: www.endress.com/deviceviewer
- Smart phone/tablet: Endress+Hauser Operations App



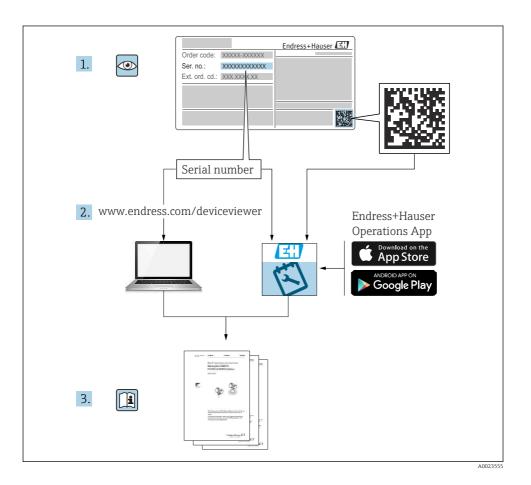


Table of contents

# Table of contents

1	Document information	. 4
1.1	Symbols	. 4
1.2	Additional documentation	6
2	Safety-related basic instructions	. 7
2.1	Basic safety instructions	
2.2	Intended use	7
2.3	Workplace safety	. 7
2.4	Operational safety	
2.5	Product safety	8
3	Product description	. 9
3.1	Product design	
J.1	110ddcc dcsigii	. ,
4	Incoming acceptance and product identification	10
4.1	Incoming acceptance	10
4.2	Product identification	. 10
4.3	Manufacturer address	
4.4	Storage and transport	17
5	Installation	18
5.1	Mounting the NAR300 system	
5.2	Adjustment	
٥.۵	ragusancii:	20
6	Electrical connection	28
6.1	NRR261-4/A/B/C wiring	28
6.2	NRR262-4/A/B/C wiring	
6.3	NRR261-5 wiring	
6.4	Wiring diagram	
6.5	Alarm activation principle	36

Document information NAR300 system

# 1 Document information

### 1.1 Symbols

#### 1.1.1 Safety symbols

#### A DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

#### **WARNING**

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

#### **A** CAUTION

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in minor or medium injury.

#### NOTICE

This symbol alerts you to a potentially harmful situation. Failure to avoid this situation can result in damage to the product or something in its vicinity.

#### 1.1.2 Electrical symbols

Symbol	Meaning		
===	Direct current		
~	Alternating current		
$\overline{}$	Direct and alternating current		
≐	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.		
	Protective earth (PE) Ground terminals that must be connected to ground prior to establishing any other connections.		
	The ground terminals are located on the interior and exterior of the device:  Interior ground terminal: protective earth is connected to the mains supply.  Exterior ground terminal: device is connected to the plant grounding system.		

#### 1.1.3 Tool symbols



Phillips head screwdriver



Flat blade screwdriver



Torx screwdriver

NAR300 system Document information



Allen key



Open-ended wrench

#### 1.1.4 Symbols for certain types of information and graphics

#### **✓** Permitted

Procedures, processes or actions that are permitted

#### **✓ ✓** Preferred

Procedures, processes or actions that are preferred

#### **Forbidden**

Procedures, processes or actions that are forbidden

Tip

Indicates additional information



Reference to documentation



Reference to graphic



Notice or individual step to be observed

1., 2., 3.

Series of steps



Result of a step



Visual inspection



Operation via operating tool

Write-protected parameter

1, 2, 3, ...

Item numbers

A, B, C, ...

Views

# $\triangle \rightarrow \square$ Safety instructions

Observe the safety instructions contained in the associated Operating Instructions

# 

Specifies the minimum value of the temperature resistance of the connection cables  $\frac{1}{2}$ 

Document information NAR300 system

#### 1.2 Additional documentation

The following documentation types are available in the Downloads area of the Endress +Hauser website (www.endress.com/downloads):



For an overview of the scope of the associated Technical Documentation, refer to the following:

W@M Device Viewer (www.endress.com/deviceviewer): Enter the serial number on the nameplate.

#### 1.2.1 Technical Information (TI)

#### Planning aid

This document contains all technical data related to the device, as well as an overview of accessories and other products that can be ordered for the device.

#### 1.2.2 Brief Operating Instructions (KA)

#### Instructions for using the system for the first time

The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

#### 1.2.3 Operating Instructions (BA)

Operating Instructions contain all the information required for all stages in the device life cycle (from product identification, incoming acceptance, storage, mounting, connection, operation, and setting to troubleshooting, maintenance, and disposal).

#### 1.2.4 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.



The nameplate indicates the Safety Instructions (XA) that are relevant to the device.

# 2 Safety-related basic instructions

# 2.1 Basic safety instructions

#### 2.1.1 Requirements for the personnel

The personnel must fulfill the following requirements for its tasks:

- Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ► Are authorized by the plant owner/operator.
- ► Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ► Follow instructions and comply with basic conditions.

#### 2.2 Intended use

#### Applications and measured materials

Equipment intended for use in hazardous locations, sanitary applications, or high-risk applications due to process pressure have the corresponding label attached to their nameplates.

To ensure that the device remains in proper condition for the operation time:

- ▶ Only use the device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ► Check the nameplate to ensure that the ordered equipment has the correct specifications for the certification-related area (example: explosion proof, safety of pressure vessels).
- ▶ If the device is not operated at an atmospheric temperature, compliance with the relevant basic conditions specified in the relevant device documentation is absolutely essential.
- Provide permanent protection for the equipment against corrosion caused by environmental effects
- ▶ Do not exceed the limit values in "Technical Information."

The manufacturer is not liable for damage caused by improper or non-designated use.

# 2.3 Workplace safety

For work on and with the device:

▶ Wear the required personal protective equipment according to local/national regulations.

# 2.4 Operational safety

Risk of injury!

- ▶ Operate the device only if it is in proper technical condition, free from errors and faults.
- ► The operator is responsible for interference-free operation of the device.

#### Hazardous area

To eliminate danger to persons or the facility when the device is used in the hazardous area (e.g. explosion protection):

- ► Check the nameplate to verify if the device ordered can be put to its intended use in the hazardous area.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these instructions.

# 2.5 Product safety

This device was designed in accordance with GEP (Good Engineering Practice) to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets the general safety standards and legal requirements.

#### 2.5.1 CE mark

This measuring system meets the legal requirements of the applicable EU Directive. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser affixes the CE mark to this equipment as a sign of guarantee that this equipment has successfully passed testing.

NAR300 system Product description

# 3 Product description

The NAR300 system is designed to be installed in a pit within an oil retaining dike, a plant, or a sump pit near a pump yard, where it can provide the ultimate in leak detection function for oils, such as petrochemicals and vegetable oils. The system utilizes two different detection principles, conductivity and tuning fork, to monitor detection status individually. With a two-stage alarm logic process, it has an extremely low false alarm rate, and this ensures the safety of the tank yard with an accurate yet simple device configuration.

#### **NOTICE**


#### TIIS specifications

These Operating Instructions are not intended for products with TIIS specifications.

► If you are using a product with TIIS specifications, download and refer to KA01577G/33/JA/01.22-00 or an earlier version from our website (www.endress.com/downloads).

# 3.1 Product design

The NAR300 system is configured in combination with mainly the following products.

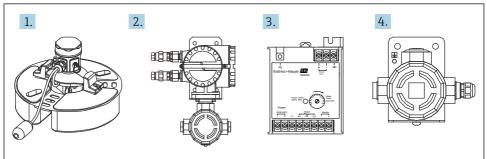

A0047557

- 1 Product design
- 1 Float sensor NAR300
- 2 Ex d [ia] converter NRR261
- 3 Ex [ia] converter NRR262
- 4 Ex [ia] sensor I/F Ex box

# 4 Incoming acceptance and product identification

# 4.1 Incoming acceptance

Upon receipt of the goods, check the following:


- Are the order codes on the delivery note and the product label identical?
- Are the goods undamaged?
- Do the nameplate data match the ordering information on the delivery note?
- If required (see nameplate): Are the Safety Instructions (XA) enclosed?
- If one or more of these conditions are not satisfied, contact your Endress+Hauser Sales Center or distributor.

#### 4.2 Product identification

The following options are available for identification of the device:

- Nameplate specifications
- Extended order code on the delivery note (including details of the device specification codes)
- Entering the serial number from the nameplate in W@M Device Viewer (www.endress.com/deviceviewer) will display all the information about the device.
- Note that the information on a nameplate may be changed without notice when credentials and certificates are updated.


#### 4.2.1 Nameplate

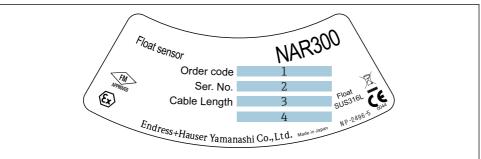

4000071

#### ■ 2 NAR300 model nameplate


- 1 Order code
- 2 Serial number
- 3 Cable length (order code 040)
- 4 Explosion-proof performance

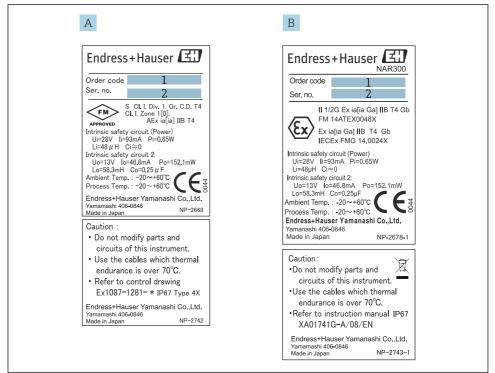

A0039861

#### ■ 3 Nameplate for NAR300

- A NAR300 nameplate for FM
- B NAR300 nameplate for ATEX / IECEx
- 1 Order code
- 2 Serial number

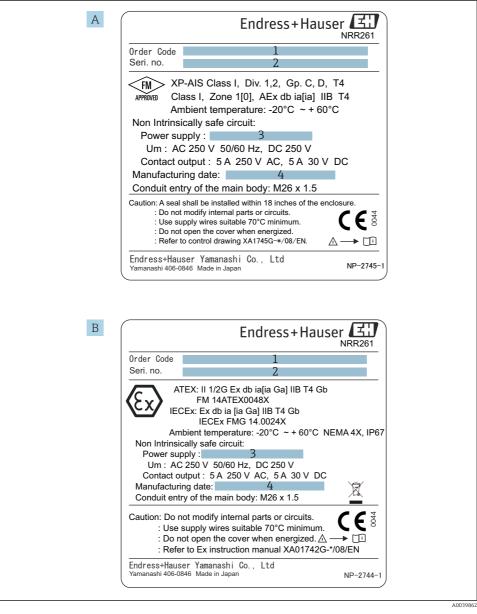


A0039862

#### ₩ 4 Nameplate for NRR261


- Α NRR261 nameplate for FM (NAR300 integrated type)
- В NRR261 nameplate for ATEX / IECEx (NAR300 integrated type)
- Order code

- 2 Serial number
- 3 Power supply voltage
- 4 Manufacturing date



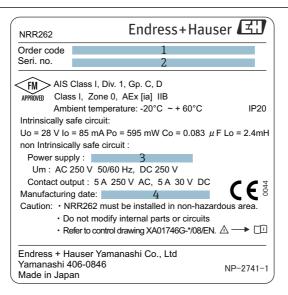




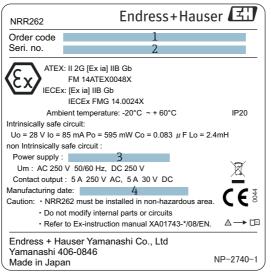

A0039864

#### ■ 5 Nameplate for NRR262


- A NRR262 nameplate for FM
- B NRR262 nameplate for ATEX / IECEx
- 1 Order code
- 2 Serial number
- 3 Power supply voltage
- 4 Manufacturing date

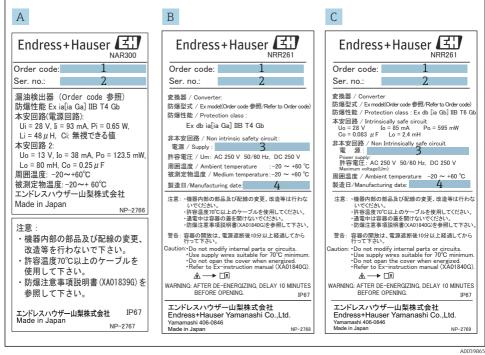

Δ0039865

#### ₩ 6 NAR300/NRR261 nameplates

- NAR300 nameplate for IPN Ex Α
- В NRR261 nameplate for JPN Ex (NAR300 integrated type)
- C NRR261 nameplate for JPN Ex (NAR300 separate type)
- 1 Order code
- 2 Serial number
- 3 Power supply voltage
- Manufacturing date

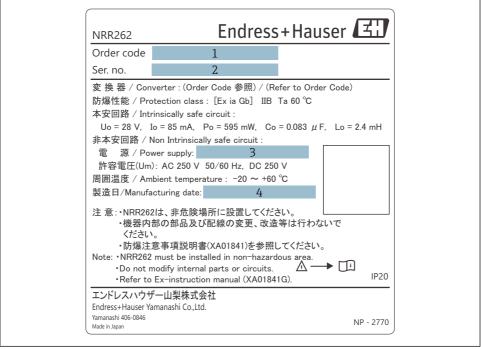

A0039866

#### ■ 7 NRR262 nameplate for JPN Ex

- 1 Order code
- 2 Serial number
- 3 Power supply voltage
- 4 Manufacturing date

# 4.3 Manufacturer address

Endress+Hauser Yamanashi Co., Ltd.

406-0846

862-1 Mitsukunugi, Sakaigawa-cho, Fuefuki-shi, Yamanashi

# 4.4 Storage and transport

#### 4.4.1 Transport

#### NOTICE

The housing may become damaged or dislodged.

Risk of injury

- ► When transporting the device to the measuring point, either use the device's original packaging or hold by the process connector.
- ► Secure a hoisting device (such as a hoisting ring or a lifting eye bolt) to the process connector, not to the housing. Pay attention to the device's center of gravity to prevent unexpected tilting.
- ► Comply with the safety precautions and transportation conditions for devices that weigh 18 kg (39.6 lbs) or more (IEC61010).

Installation NAR300 system

# 5 Installation


# 5.1 Mounting the NAR300 system

#### 5.1.1 Handling precautions

№ 8

Handling the NAR300

When transporting NAR300, be sure to hold the float with both hands. Avoid holding the parts as shown in the diagram below, and do not lift by the top of the float sensor. In addition, do not rotate the housing. Doing so may cause device failure.

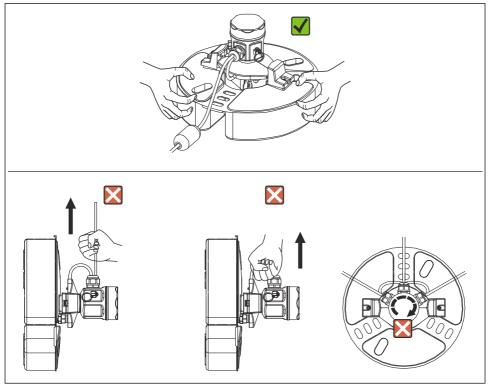


A0039878

NAR300 system Installation

#### 5.1.2 Mounting the float guide

If you ordered a device that is equipped with a float guide, install the float horizontally. Remove any debris or stones so that the float sensor can land horizontally.

The float guide is  $2\,000$  mm (78.74 in) in size. If a length shorter than  $2\,000$  mm (78.74 in) is required for use, cut it to size. If a float guide longer than  $2\,000$  mm (78.74 in) is required, contact your nearest Endress+Hauser service center or distributor.

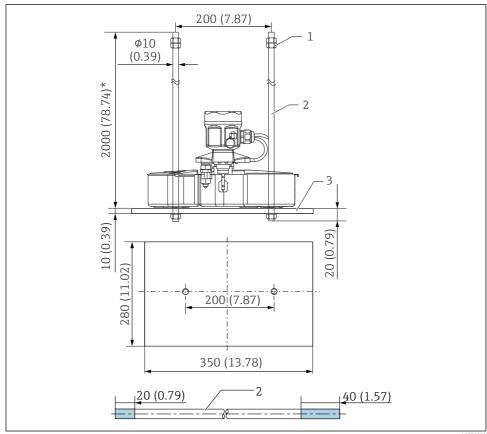

A0039879

- 9 NAR300, float guide. Unit of measurement mm (in)
- 1 Nut (M10)
- 2 Float guide
- 3 Weight
- The 20 mm (0.73 in) and 40 mm (1.57 in) of the float guide in the diagram indicate the lengths of thread grooves.

Installation NAR300 system


#### 5.1.3 NRR261-4xx (integrated type) cable mounting

#### Mounting procedure

- 1. Remove the intrinsically safe terminal box cover [5] and the circuit board guard [4].
- 2. Pass the float sensor cable [2] through the cable gland [1] and the cable entry of the intrinsically safe terminal box.
- 3. Connect the cable to the terminal block (refer to "Electrical connection").
- 4. Tighten the main unit of the cable gland and the seal nut.
  - → Tightening torque (main unit, seal nut): approx. 1.96 N·m (20 kgf·cm)
- 5. Secure the cable in place with the cable holder [3].
- 6. Replace the circuit board quard and close the cover of the intrinsically safe terminal box.

This completes the mounting procedure.

NAR300 system Installation

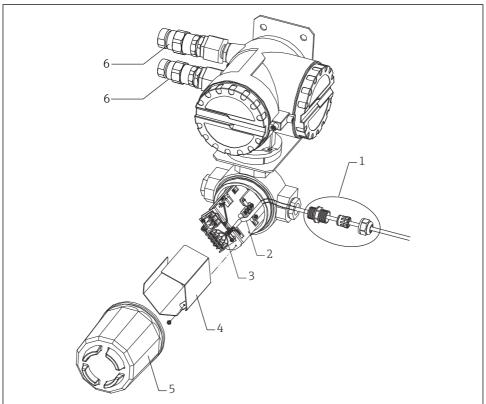

A0039881

#### ■ 10 NRR261-4xx cable mounting

- 1 Cable gland (waterproof connection)
- 2 Float sensor cable
- 3 Cable holder
- 4 Circuit board guard
- 5 Intrinsically safe terminal box cover
- 6 Cable gland (Ex d) (supplied with JPN Ex specifications only)

Since the cable gland [1] shown in the diagram is not supplied with products that do not have JPN Ex specifications, a waterproof cable gland that is IP67 or higher must be procured separately.

Installation NAR300 system


#### 5.1.4 NAR300-x5xxxx and sensor I/F Ex box cable mounting

#### Mounting procedure

- 1. Remove the intrinsically safe terminal box cover [5] and the circuit board quard [4].
- 2. Pass the float sensor cable [2] through the cable gland [1] and the cable entry of the intrinsically safe terminal box.
- 3. Connect the cable to the terminal block (refer to "Electrical connection").
- 4. Tighten the main unit of the cable gland [1] and the seal nut.
  - └ Tightening torque (main unit, seal nut): approx. 1.96 N·m (20 kgf·cm)
- 5. Pass the NRR262/NRR261 connecting cable through the cable entry of the terminal box, and connect it to the terminal block.
- 6. Secure the cable in place with a cable holder [3].
- 7. Replace the circuit board quard and close the cover of the intrinsically safe terminal box.

This completes the mounting procedure.


NAR300 system Installation

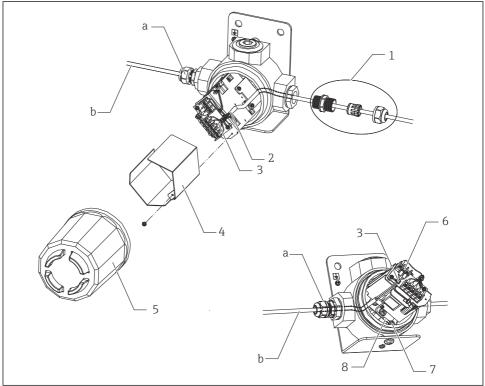

VUU3088.

■ 11 NAR300-x5xxxx and sensor I/F Ex box cable mounting

 - a Cable gland
- *b* Shielded cable for NRR261/262 (must be procured separately)
- 1 Cable gland (waterproof connection)
- 2 Float sensor cable
- 3 Cable holder
- 4 Circuit board quard
- 5 Intrinsically safe terminal box cover
- 6 Screw (M3) for shielded cable
- 7 Screw (M5)
- 8 Shielded cable gland



Installation NAR300 system


#### 5.1.5 NRR261-5xx cable mounting

#### Mounting procedure

- 1. Remove the intrinsically safe terminal box cover [4] and the terminal block cover [3].
- 2. Pass the float sensor cable [2] through the cable gland [1] and the cable entry of the intrinsically safe terminal box.
- 3. Connect the cable to the terminal block (refer to "Electrical connection").
- 4. Mount the cable gland [1] according to the operating instructions.
- 5. Secure the cable in place with the cable holder.
- **6.** Replace the terminal block cover and close the cover of the intrinsically safe terminal box.

This completes the mounting procedure.

NAR300 system Installation

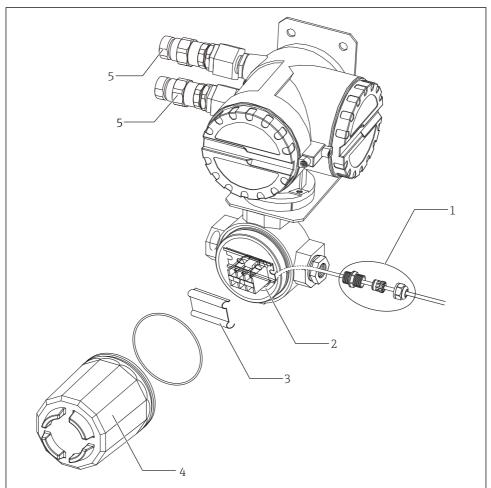

A0039883

#### ■ 12 NRR261-5xx cable mounting

- 1 Cable gland (waterproof connection)
- 2 Float sensor cable
- 3 Terminal block cover
- 4 Intrinsically safe terminal box cover
- 5 Cable gland (Ex d) (supplied with JPN Ex specifications only)

Since the cable gland [1] shown in the diagram is not supplied with products that do not have JPN Ex specifications, a waterproof cable gland that is IP67 or higher must be procured separately.

Installation NAR300 system

# 5.2 Adjustment

#### 5.2.1 Verification of detection sensitivity with actual liquid

# Verification of detection sensitivity when the lower layer is water and the upper layer is oil

If the electrode tip is pulled out of the lower layer of water due to increased oil layer thickness, water may cling onto the electrode tip like an icicle even if the electrode tip is in oil. This may raise the detection sensitivity point by 1 to 2 mm. When an accurate sensitivity check is required, apply a small amount of neutral detergent to the electrode tip to keep water from clinging to the electrode.

Verification of oil layer thickness with a transparent container

Exercise caution as a reading error may occur due to the liquid's surface tension, liquid adhesion to the container wall, and for other reasons.


#### 5.2.2 Adjustment of alarm output

Only the delay operation time (ON delay) setting of the alarm output relay can be adjusted on the converter. Time can be set using the delay trimmer. In NRR261, the delay trimmer can be found by turning off the power and opening the main unit's cover. In NRR262, the delay trimmer is found on the case surface. Match the setting to the necessary delay time in units of seconds. Delayed activation is used to prevent a false alarm by recognizing an alarm condition that continues over a certain period of time as an alarm while not outputting an alarm when the alarm condition stops within the delay time setting. This can be set up to a maximum of 15 seconds for SIL specifications.



- A response delay time in the detection circuit of approximately 6 seconds is always added to the delay time of the delay trimmer.
  - Open the NRR261 main unit cover after the power has been turned off for at least 10 minutes.

NAR300 system Installation

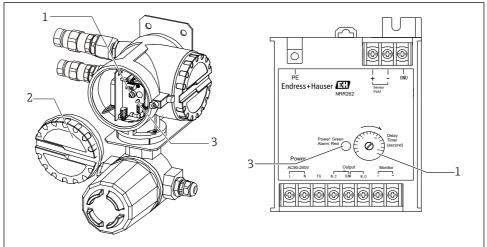

A0039891


# ■ 13 Alarm output relay

- 1 Delay trimmer
- 2 Cover
- 3 LED power (green) / alarm (red)

Electrical connection NAR300 system

# 6 Electrical connection

# 6.1 NRR261-4/A/B/C wiring

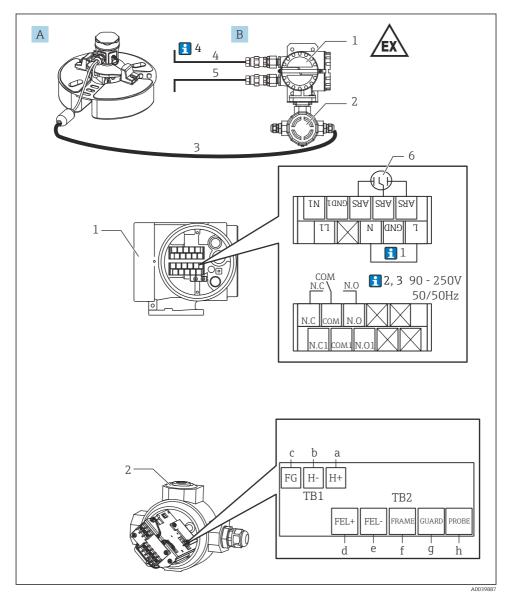


■ 14 Wiring of Ex d [ia] converter NRR261-4/A/B/C

NAR300 system Electrical connection

- A Float sensor NAR300-x1xxxx
- *B* Ex d [ia] converter NRR261 (integrated type)
- a Blue 1 (already wired upon delivery), screw (M3)
- b Blue 2 (already wired upon delivery), screw (M3)
- c Green, screw (M3)
- d Red, screw (M3)
- e Blue 3. screw (M3)
- f Yellow, screw (M3)
- *g* Black, screw (M3)
- h White, screw (M3)
- 1 Ex d terminal
- 2 Ex [ia] terminal
- 3 Using an Ex [ia]-dedicated connection cable (6 to 30 m (19.69 to 98.43 ft): included with the product depending on the option code)
- 4 Power supply: AC/DC
- 5 Alarm output: alarm/PLC/DCS, etc.
- 6 Power supply arrester (installed)
- $\square$  Below, the numbers correspond to the description in the diagram.
- 1. GND between "L" and "N" of NRR261 is connected when an AC cable with FG is used.
- 2. When using a 22 to 26  $V_{DC}$  power supply, the terminal number "L" becomes positive (+) and "N" becomes negative (-).
- 3. To maintain Ex [ia] performance, ensure that the power supply voltage does not exceed  $250\,V_{AC}50/60$  Hz during normal times and  $250\,V_{DC}$  during emergencies.
- 4. Cable (3) for connecting NAR300 and NRR261 is included with NAR300. Alarm output cable (4) from NRR261 and power supply cable (5) to NRR261 are not included and must be procured by the customer. For more details on connection cables, refer to "Process conditions."

Electrical connection NAR300 system

# 6.2 NRR262-4/A/B/C wiring

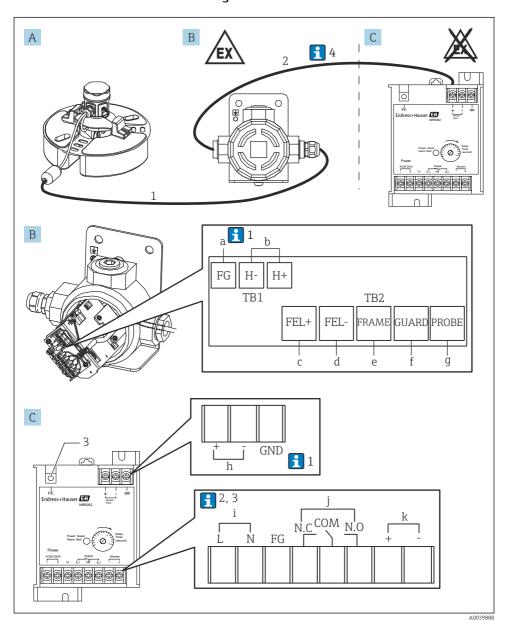


■ 15 Wiring of Ex [ia] converter NRR262-4/A/B/C

NAR300 system Electrical connection

- A Float sensor NAR300-x5xxxx (sensor I/F Ex box is also included in the code)
- B Sensor I/F Ex box
- C Ex [ia] converter NRR262
- a Green, screw (M3) (see Note 1 below)
- b Output to NRR262, screw (M3)
- c Red, screw (M3)
- d Blue. screw (M3)
- e Yellow, screw (M3)
- f Black, screw (M3)
- *g* White, screw (M3)
- h Input from sensor I/F Ex box, screw (M3)
- i Power supply: AC/DC, screw (M3)
- *j* Alarm output, screw (M3)
- *k Checking monitor output, screw (M3)*
- 1 Using an Ex [ia]-dedicated connection cable (6 to 30 m (19.69 to 98.43 ft): included with the product depending on the option code)
- 2 Cable for sensor I/F Ex box and NRR262 (must be procured by the customer)
- *For protective grounding, screw (M4)*
- Below, the numbers correspond to the description in the diagram.
- 1. Normally, only the FG of a sensor I/F Ex box is connected to the cable's shielded wire; however, depending on the installation environment, either the GND of NRR262 alone or both the FG of the sensor I/F Ex box and the GND of NRR262 are connected.
- 2. When using a 22 to 26  $V_{DC}$  power supply, the terminal number "L" becomes positive (+) and "N" becomes negative (-).
- 3. To maintain Ex [ia] performance, ensure that the power supply voltage does not exceed  $250 \, V_{AC} 50/60 \, Hz$  during normal times and  $250 \, V_{DC}$  during emergencies..
- 4. While cable (1) for connecting NAR300 and sensor I/F Ex box is included with the device, cable (2) for connecting sensor I/F Ex box and NRR262 is not included with the device and must be procured by the customer. For more details on connection cables, refer to "Process conditions."

Electrical connection NAR300 system

# 6.3 NRR261-5 wiring

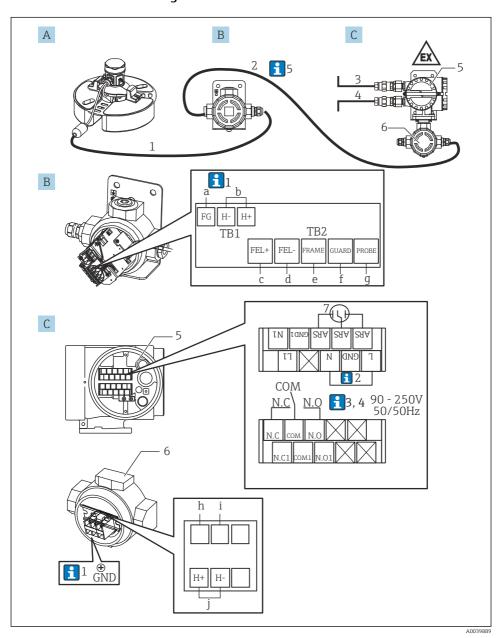


■ 16 Wiring of Ex d [ia] converter NRR261-5

NAR300 system Electrical connection

- A Float sensor NAR300-x5xxxx (sensor I/F Ex box is also included in the code)
- B Sensor I/F Ex box
- C Ex d [ia] converter NRR261 (separate type)
- a Green, screw (M3) (see Note 1 below)
- b Output to NRR261-3/5xx, screw (M3)
- c Red, screw (M3)
- d Blue 1. screw (M3)
- e Yellow, screw (M3)
- f Black, screw (M3)
- *g* White, screw (M3)
- h Blue 2, screw (M4) (already wired upon delivery)
- i Blue 3, screw (M4) (already wired upon delivery)
- *j* Input from sensor I/F Ex box, screw (M4)
- 1 Using an Ex [ia]-dedicated connection cable (6 to 30 m (19.69 to 98.43 ft): included with the product depending on the option code)
- 2 Cable for sensor I/F Ex box and NRR261 (must be procured by the customer)
- 3 Power supply: AC/DC
- 4 Alarm output: alarm/PLC/DCS, etc.
- 5 Ex d terminal
- 6 Intrinsically safe terminal
- 7 Power supply arrester (installed), screw (M3)
- $\square$  Below, the numbers correspond to the description in the diagram.
- 1. Normally, only the FG of a sensor I/F Ex box is connected to the cable's shielded wire; however, depending on the installation environment, either the GND of NRR261 alone or both the FG of the sensor I/F Ex box and the GND of NRR261 are connected.
- 2. GND between "L" and "N" of NRR261 is connected when an AC cable with FG is used.
- 3. When using a 22 to 26  $V_{DC}$  power supply, the terminal number "L" becomes positive (+) and "N" becomes negative (-).
- 4. To maintain Ex [ia] performance, ensure that the power supply voltage does not exceed 250  $V_{AC}$ 50/60 Hz during normal times and 250  $V_{DC}$  during emergencies.
- 5. Cable (1) for connecting NAR300 and sensor I/F Ex box is included with NAR300. Cable (2) for connecting sensor I/F Ex box and NRR262, alarm out cable (3) from NRR261, and power supply cable (4) for NRR261 are not included and must be procured by the customer. For more details on connection cables, refer to "Process conditions."

Electrical connection NAR300 system

# 6.4 Wiring diagram

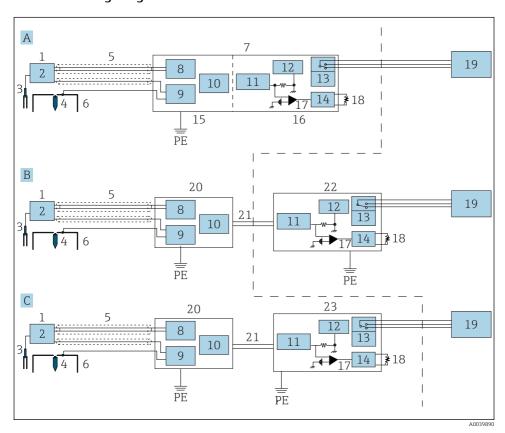

#### ■ 17 Wiring diagram

- A Explosion proof-type converter system (integrated type)
- *B Intrinsically safe-type converter system (separate type)*
- *C Intrinsically safe, explosion proof-type converter (separate type)*
- *PE Protective earth (protective grounding)*
- 1 Float sensor NAR300
- 2 Tuning fork drive unit
- 3 Tuning fork
- 4 Conductivity detection electrode (sensor)
- 5 Dedicated cable
- 6 Conductivity detection electrode (float)
- 7 Converter NRR261 (integrated type)
- 8 Liquid detection circuit
- 9 Conductivity detection circuit
- 10 Current output circuit
- 11 Safety barrier
- 12 Power supply circuit

NAR300 system Electrical connection

- 13 Relay
- 14 Delay circuit
- 15 Ex [ia] circuit
- 16 Ex d circuit
- 17 Current detection
- 18 Delay trimmer
- 19 Alarm
- 20 Sensor I/F Ex box
- 21 Current signal
- 22 Converter NRR262
- 23 Converter NRR261 (separate type)

Electrical connection NAR300 system

# 6.5 Alarm activation principle

An oil leak detection signal detected by NAR300 float sensor is converted into an electric current signal inside the converter or sensor I/F Ex box. The signal is then connected to the current detection circuit through the intrinsically safe safety barrier inside the converter. In the current detection circuit, the presence or absence of an oil leak alarm signal is determined based on the size of the current value, and the alarm out relay is turned ON/OFF through the operation delay circuit. The alarm delay circuit is equipped with a trimmer that can be used to set the delay time. Fail-safe operation is also available for relay contact point output, which is explained in the following "Alarm output operation table."

#### Alarm output operation table

NRR261/NRR262 terminals		Between NC and COM	Between NO and COM
State	Non-alarm	Open contact point	Closed contact point
	Oil leak alarm	Closed contact point	Open contact point
	Power OFF		
	Frozen liquid		

NAR300 current value				
Non-alarm	12 mA			
Oil leak alarm	16 mA			
Other trouble	< 10 mA or 14 mA <			







www.addresses.endress.com