Valid as of version 01.00.zz (Device firmware) Products Solutions

Solutions Services

Operating Instructions Proline Prowirl D 200

Vortex flowmeter PROFINET over Ethernet-APL







- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser sales organization will supply you with current information and updates to this manual.

Table of contents

l l.1	About this document		6.2	Installing the device	25
1.2	Symbols	6		6.2.3 Installing the sensor	
	1.2.3 Communication-specific symbols			6.2.5 Turning the transmitter housing 6.2.6 Turning the display module	27
	1.2.5 Symbols for certain types of information		6.3	Post-mounting check	
l.3 l.4	_	8	7 7.1	Electrical connection	29
			7.1	Connecting requirements	29
2	Safety instructions			7.2.1 Required tools	
2.1 2.2	Requirements for the personnel	9		7.2.3 Connecting cable for remote version . 7.2.4 Terminal assignment	29
2.3	Workplace safety			7.2.4 Terminal assignment	
2.4 2.5	Operational safety	LO LO		7.2.6 Shielding and grounding	31
2.6	IT security			7.2.7 Requirements for the supply unit7.2.8 Preparing the measuring instrument .	
2.7	Device-specific IT security		7.3	7.2.8 Preparing the measuring instrument. Connecting the device	33
	2.7.1 Protecting access via hardware write	l 1		7.3.1 Connecting the compact version	
	protection		7.	7.3.2 Connecting the remote version	34
	2.7.3 Access via fieldbus		7.4	Potential equalization	39 39
			7.5	Ensuring the degree of protection	
3	Product description 1	.2	7.6	Post-connection check	40
3.1	Product design	12	8	Operation options	41
Ŧ	Incoming acceptance and product		8.1	Overview of operation options	41
		.3	8.2	Structure and function of the operating menu	42
4.1	Incoming acceptance			8.2.1 Structure of the operating menu	42
4.2	Product identification			8.2.2 Operating philosophy	43
	4.2.2 Symbols on the device		8.3	Access to operating menu via local display 8.3.1 Operational display	44
				1 1	
5	Storage and transport 1	.7		8.3.3 Editing view	47
5.1	Storage conditions			8.3.4 Operating elements	
5.2	Transporting the product	L7		8.3.5 Opening the context menu8.3.6 Navigating and selecting from list	50
	5.2.1 Measuring devices without lifting lugs	L7		8.3.7 Calling the parameter directly	51
	<u> </u>	18		8.3.8 Calling up help text	52
	5.2.3 Transporting with a fork lift			8.3.9 Changing the parameters8.3.10 User roles and related access	53
5.3	Packaging disposal	L8		authorization	54
5	Installation	9		8.3.11 Disabling write protection via access	
5				code	54
5.1	1	l9 l9		8.3.12 Enabling and disabling the keypad lock	55
	6.1.2 Environmental and process	- /	8.4	Access to the operating menu via the	,,
		22		operating tool	55
				8.4.1 Connecting the operating tool	56

	8.4.2 FieldCare		12	Diagnostics and troubleshooting	127
	8.4.3 DeviceCare 8.4.4 SIMATIC PDM	58 59	12.1	General troubleshooting	. 127
	8.4.4 SIMATIC PDIVI		12.2	Diagnostic information via light emitting	
0	Creaton intogration	60		diodes	
9	System integration			12.2.1 Transmitter	
9.1	Overview of device descripti		12.3	Diagnostic information on local display	
		a for the device 60		12.3.1 Diagnostic message	
		60	10 (12.3.2 Calling up remedial measures	132
9.2	Device master file (GSD)		12.4	Diagnostic information in the web browser	
	9.2.1 File name of the ma			12.4.1 Diagnostic options	
	*	ter file (GSD) 61	12.5	12.4.2 Calling up remedy information	133
	9.2.2 File name of the PA		12.5	Diagnostic information in FieldCare or	133
. .		61		DeviceCare	
9.3	Cyclic data transmission			12.5.2 Calling up remedy information	. 133 134
	9.3.1 Overview of the mo9.3.2 Description of the n		12.6	Adapting the diagnostic behavior	
	1		12.0	12.6.1 Available diagnostic behaviors	
	J			12.6.2 Displaying the measured value	. 1))
9.4	9.3.4 Factory setting System redundancy S2			status	135
7.4	System redundancy 32		12.7	Overview of diagnostic information	
		5 1	12.7	12.7.1 Diagnostic of sensor	136
10	Commissioning			12.7.2 Diagnostic of electronic	
10.1	Post-mounting and post-cor	nnection check 71		12.7.3 Diagnostic of configuration	152
10.2	Switching on the measuring	g device 71		12.7.4 Diagnostic of process	
10.3	Setting the operating langua			12.7.5 Operating conditions for displaying	100
10.4	Configuring the device	71		the following diagnostics	
	10.4.1 Displaying the com	munication		information	168
	interface	72		12.7.6 Emergency mode in event of	
	10.4.2 Setting the system	units 74		temperature compensation	168
	10.4.3 Selecting and setting	ig the medium 78	12.8	Pending diagnostic events	168
	10.4.4 Configuration of the		12.9	Diagnostics list	169
	10.4.5 Configuring the low		12.10	Event logbook	170
	10.4.6 Advanced settings.			12.10.1 Reading out the event logbook	. 170
10.5	Simulation			12.10.2 Filtering the event logbook	170
10.6	Protecting settings from una			12.10.3 Overview of information events	171
	10.6.1 Write protection via		12.11	Resetting the device	. 172
	10.6.2 Write protection via			12.11.1 Function scope of the "Device reset"	
		109		parameter	. 172
10.7	Application-specific commis	-	12.12	Device information	172
	10.7.1 Steam application.		12.13	Firmware history	174
	10.7.2 Liquid application.				
	10.7.4 Galaxietien of the co		13	Maintenance	175
	10.7.4 Calculation of the m		13.1	Maintenance tasks	175
	variables	115	15.1	13.1.1 Exterior cleaning	
				13.1.2 Interior cleaning	
11	Operation	119		13.1.3 Replacing seals	
11.1	Reading off the device locking	ng status 119	13.2	Measuring and test equipment	
11.2	Adjusting the operating land	_	13.3	Endress+Hauser services	
11.3	Configuring the display		15.5	Eliaress Tradser services	1,7
11.4	Reading off measured value	s 119	1.6	Danain	176
	11.4.1 Process variables		14	Repair	
	11.4.2 Totalizer	122	14.1	General notes	
11.5	Adapting the measuring dev	vice to the process		14.1.1 Repair and conversion concept	
	conditions			14.1.2 Notes for repair and conversion	176
11.6	Displaying the measured val	lue history 123	14.2	Spare parts	176
			14.3	Endress+Hauser services	177
			14.4	Return	. 177

14.5	Disposal	177
	14.5.1 Removing the measuring device	177
	14.5.2 Disposing of the measuring device	178
15	Accessories	179
15.1	Device-specific accessories	179
	15.1.1 For the transmitter	179
	15.1.2 For the sensor	180
15.2	Service-specific accessories	180
15.3	System components	180
16	Technical data	181
16.1	Application	181
16.2	Function and system design	181
16.3	Input	181
16.4	Output	188
16.5	Power supply	190
16.6	Performance characteristics	192
16.7	Installation	194
16.8	Environment	195
16.9	Process	196
	Mechanical construction	197
	Operability	203 204
	Certificates and approvals	204
	Accessories	206
	Documentation	207
Index		209

1 About this document

1.1 Document function

These Operating Instructions contain all the information required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to installation, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.

1.2 Symbols

1.2.1 Safety symbols

⚠ DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

WARNING

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

↑ CALITION

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol alerts you to a potentially harmful situation. Failure to avoid this situation can result in damage to the product or something in its vicinity.

1.2.2 Electrical symbols

Symbol	Meaning
===	Direct current
~	Alternating current
$\overline{\sim}$	Direct current and alternating current
=	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Potential equalization connection (PE: Protective earth) Ground terminals that must be connected to ground prior to establishing any other connections.
	 The ground terminals are located on the interior and exterior of the device: Interior ground terminal: potential equalization connection is connected to the supply network. Exterior ground terminal: device is connected to the plant grounding system.

1.2.3 Communication-specific symbols

Symbol	Meaning
ि	Wireless Local Area Network (WLAN) Communication via a wireless, local network.
*	Bluetooth Wireless data transmission between devices over a short distance via radio technology.

1.2.4 Tool symbols

Symbol	Meaning
Flat-blade screwdriver	
06	Allen key
Ó	Open-end wrench

1.2.5 Symbols for certain types of information

Symbol	Meaning
✓	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
	Reference to documentation
A=	Reference to page
	Reference to graphic
•	Notice or individual step to be observed
1., 2., 3	Series of steps
L	Result of a step
?	Help in the event of a problem
	Visual inspection

1.2.6 Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections
EX	Hazardous area
×	Safe area (non-hazardous area)
≋➡	Flow direction

1.3 **Documentation**

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

The following document types are available in the Downloads area of the Endress+Hauser website (www.endress.com/downloads), depending on the device version:

Document type	Purpose and content of the document
Technical Information (TI)	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions (KA)	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Operating Instructions (BA)	Your reference document The Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.
Description of Device Parameters (GP)	Reference for your parameters The document provides a detailed explanation of each individual parameter. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.
Safety instructions (XA)	Depending on the approval, safety instructions for electrical equipment in hazardous areas are also supplied with the device. These are an integral part of the Operating Instructions. The nameplate indicates which Safety Instructions (XA) apply to
	The nameplate indicates which Safety Instructions (XA) apply to the device.
Supplementary device-dependent documentation (SD/FY)	Always comply strictly with the instructions in the relevant supplementary documentation. The supplementary documentation is a constituent part of the device documentation.

1.4 Registered trademarks

Ethernet-APL™

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

KALREZ®, VITON®

Registered trademarks of DuPont Performance Elastomers L.L.C., Wilmington, DE USA

Registered trademark of Garlock Sealing Technologies, Palmyar, NY, USA

2 Safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ► Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ► Are authorized by the plant owner/operator.
- ► Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ► Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Intended use

Application and media

The measuring instrument described in this manual is intended only for the flow measurement of liquids, gases and vapors.

Depending on the version ordered, the measuring instrument can also be used to measure potentially explosive ¹⁾, flammable, toxid and oxidizing media.

Measuring instruments for use in hazardous areas, in hygienic applications, or where there is an increased risk due to pressure, are specially labeled on the nameplate.

To ensure that the measuring instrument is in perfect condition during operation:

- ▶ Only use the measuring instrument in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Using the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ► Use the measuring instrument only for media to which the process-wetted materials are sufficiently resistant.
- ▶ Keep within the specified pressure and temperature range.
- ► Keep within the specified ambient temperature range.
- ► Protect the measuring instrument permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

▲ WARNING

Danger of breakage due to corrosive or abrasive fluids and ambient conditions!

- ▶ Verify the compatibility of the process fluid with the sensor material.
- lacktriangle Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Keep within the specified pressure and temperature range.

¹⁾ Not applicable for IO-Link measuring instruments

NOTICE

Verification for borderline cases:

► For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks

A CAUTION

Risk of hot or cold burns! The use of media and electronics with high or low temperatures can produce hot or cold surfaces on the device.

► Mount suitable touch protection.

2.3 Workplace safety

When working on and with the device:

▶ Wear the required personal protective equipment as per national regulations.

2.4 Operational safety

Damage to the device!

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for the interference-free operation of the device.

Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers!

▶ If modifications are nevertheless required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability:

- ► Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to the repair of an electrical device.
- ▶ Use only original spare parts and accessories.

2.5 Product safety

This state-of-the-art device is designed and tested in accordance with good engineering practice to meet operational safety standards. It left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU declaration of conformity. The manufacturer confirms this by affixing the CE mark.

2.6 IT security

The manufacturer warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.

2.7 Device-specific IT security

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater inoperation safety if used correctly. The following list provides an overview of the most important functions:

2.7.1 Protecting access via hardware write protection

Write access to the parameters of the device via the local display or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the main electronics module). When hardware write protection is enabled, only read access to the parameters is possible.

2.7.2 Protecting access via a password

A password can be used to protect against write access to the device parameters.

This controls write access to the device parameters via the local display or other operating tools (e.g. FieldCare, DeviceCare) and, in terms of functionality, corresponds to hardware write protection. If the CDI service interface is used, read access is only possible by first entering the password.

User-specific access code

Write access to the device parameters via the local display or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code ($\rightarrow \triangleq 108$).

When the device is delivered, the device does not have an access code and is equivalent to 0000 (open).

General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning for safety reasons.
- Follow the general rules for generating a secure password when defining and managing the access code and network key.
- The user is responsible for the management and careful handling of the access code and network key.
- For information on configuring the access code or on what to do if you lose the password, for example, see "Write protection via access code" → 🖺 108.

2.7.3 Access via fieldbus

When communicating via fieldbus, access to the device parameters can be restricted to *"Read only"* access. The option can be changed in the **Fieldbus writing access** parameter.

This does not affect cyclic measured value transmission to the higher-order system, which is always guaranteed.


3 Product description

The device consists of a transmitter and a sensor.

Two device versions are available:

- Compact version transmitter and sensor form a mechanical unit.
- Remote version transmitter and sensor are mounted in separate locations.

3.1 Product design

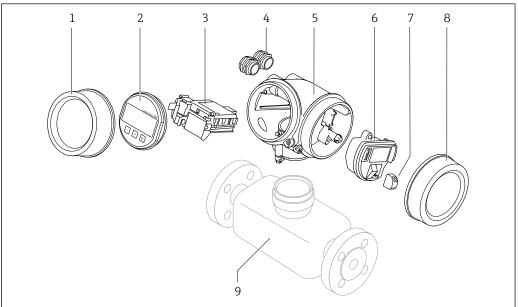

A004882

- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands
- 5 Transmitter housing (incl. HistoROM)
- 6 I/O electronics module
- 7 Terminals (plug-in spring terminals)
- 8 Connection compartment cover
- 9 Sensor

4 Incoming acceptance and product identification

4.1 Incoming acceptance

On receipt of the delivery:

- 1. Check the packaging for damage.
 - Report all damage immediately to the manufacturer. Do not install damaged components.
- 2. Check the scope of delivery using the delivery note.
- 3. Compare the data on the nameplate with the order specifications on the delivery note.
- 4. Check the technical documentation and all other necessary documents, e.g. certificates, to ensure they are complete.
- If one of the conditions is not satisfied, contact the manufacturer.

4.2 Product identification

The device can be identified in the following ways:


- Nameplate
- Order code with details of the device features on the delivery note
- Enter the serial numbers from the nameplates in the *Device Viewer* (www.endress.com/deviceviewer): all the information about the device is displayed.
- Enter the serial numbers from the nameplates into the *Endress+Hauser Operations app* or scan the DataMatrix code on the nameplate with the *Endress+Hauser Operations app*: all the information about the device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The "Additional standard device documentation" and "Supplementary device-dependent documentation" sections
- The Device Viewer: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations app*: Enter the serial number from the nameplate or scan the DataMatrix code on the nameplate.

4.2.1 Sensor nameplate


Order code for "Housing" option B "GT18 dual compartment, 316L, compact" and option K "GT18 dual compartment, 316L, remote" $\,$

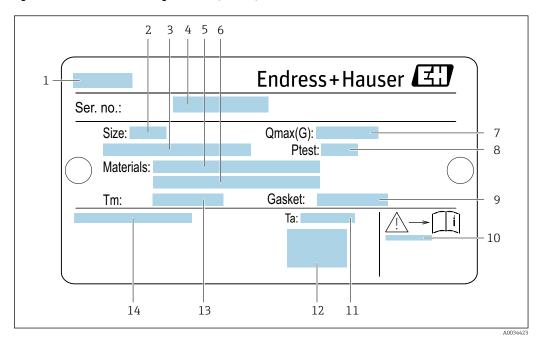

■ 1 Example of a sensor nameplate

- 1 Name of sensor
- 2 Nominal diameter of sensor
- 3 Flange nominal diameter/nominal pressure
- 4 Serial number (Ser. no.)
- 5 Measuring tube material
- 6 Measuring tube material
- 7 Maximum permitted volume flow (gas/steam): $Q_{max} \rightarrow \square$ 182
- 8 Test pressure of the sensor: OPL
- 9 Seal materia
- 10 Document number of safety-related supplementary documentation \rightarrow $\stackrel{\triangle}{=}$ 207
- 11 Ambient temperature range
- 12 CE mark
- 13 Medium temperature range
- 14 Degree of protection


Order code for "Housing" option C "GT20 dual compartment, aluminum, coated, compact"

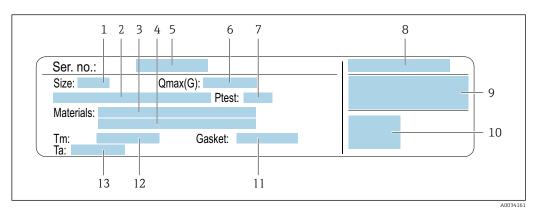

■ 2 Example of a sensor nameplate

- 1 Nominal diameter of sensor
- 2 Flange nominal diameter/nominal pressure
- 3 Measuring tube material
- 4 Measuring tube material
- 5 Serial number (Ser. no.)
- 6 Maximal permitted volume flow (gas/steam)
- 7 Test pressure of the sensor
- 8 Degree of protection
- Approval information for explosion protection and Pressure Equipment Directive → 207
- 10 CE mark
- 11 Seal material
- 12 Medium temperature range
- 13 Ambient temperature range

Order code for "Housing" option J "GT20 dual compartment, aluminum, coated, remote"

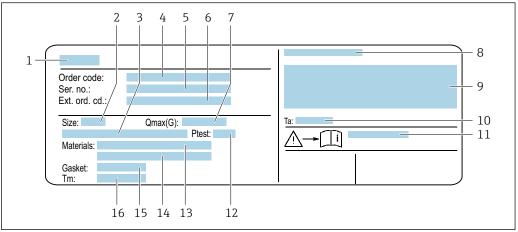

A00341

■ 3 Example of a sensor nameplate

- 1 Name of sensor
- 2 Nominal diameter of sensor
- 3 Flange nominal diameter/nominal pressure
- 4 Order code
- 5 Serial number (Ser. no.)
- 6 Extended order code (ext. ord. cd.)
- 7 Maximal permitted volume flow (qas/steam)
- 8 Degree of protection
- Approval information for explosion protection and Pressure Equipment Directive
- 10 Ambient temperature range
- 11 Document number of safety-related supplementary documentation → 🖺 207
- 12 Test pressure of the sensor
- 13 Measuring tube material
- 14 Measuring tube material
- 15 Seal material
- 16 Medium temperature range

i

Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approvalrelated specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

4.2.2 Symbols on the device

Symbol	Meaning
\triangle	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury. Please consult the documentation for the measuring instrument to discover the type of potential danger and measures to avoid it.
<u> </u>	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal that must be connected to the ground prior to establishing any other connections.

5 Storage and transport

5.1 Storage conditions


Observe the following notes for storage:

- ► Store in the original packaging to ensure protection from shock.
- ▶ Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- ▶ Protect from direct sunlight. Avoid unacceptably high surface temperatures.
- ► Store in a dry and dust-free place.
- ▶ Do not store outdoors.

Storage temperature: -50 to +80 °C (-58 to +176 °F)

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

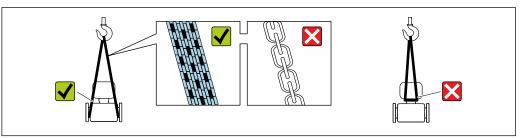

A002925

Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

A WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ▶ Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

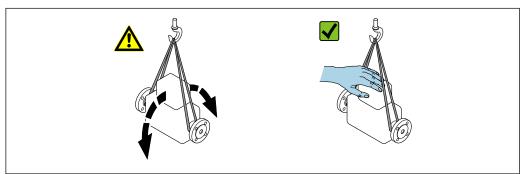

A0029214

5.2.2 Measuring devices with lifting lugs

A CAUTION

Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ► The device must always be secured at two lifting lugs at least.

5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:


- Outer packaging of device
 Stretch wrap made of polymer in accordance with EU Directive 2002/95/EC (RoHS)
- Packaging
 - Wood crate treated in accordance with ISPM 15 standard, confirmed by IPPC logo
 - Cardboard box in accordance with European packaging guideline 94/62/EC, recyclability confirmed by Resy symbol
- Transport material and fastening fixtures
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Filler material Paper pads

6 Installation

6.1 Installation requirements

6.1.1 Installation position

Mounting location

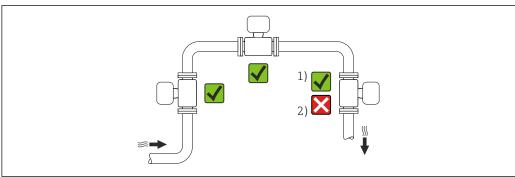

A0042128

- I Installation suitable for gases and steam
- 2 Installation not suitable for liquids

Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

Vortex meters require a fully developed flow profile as a prerequisite for correct volume flow measurement. Therefore, please note the following:

Orientation		Recommendation		
		Compact version	Remote version	
A	Vertical orientation (liquids)	A0015591	1)	
A	Vertical orientation (dry gases)	A0015591		₩ ₩
В	Horizontal orientation, transmitter head up	A0015589	√ √ ²⁾	


	Orientation	Recommendation		
			Compact version	Remote version
С	Horizontal orientation, transmitter head down	A0015590	√ √ ³⁾	
D	Horizontal orientation, transmitter head at side	A0015592		

- In the case of liquids, there should be upward flow in vertical pipes to avoid partial pipe filling (Fig. A). Disruption in flow measurement!
- In the case of hot media (e.g. steam or medium temperature (TM) \geq 200 °C (392 °F): orientation C or D In the case of very cold media (e.g. liquid nitrogen): orientation B or D 2)
- 3)

Inlet and outlet runs

To attain the specified level of accuracy of the measuring instrument, the inlet and outlet runs mentioned below must be maintained at the very minimum.

20

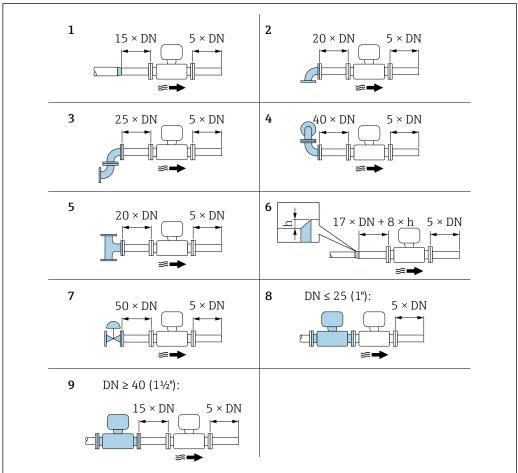

A00191

- 4 Minimum inlet and outlet runs with various flow obstructions
- h Difference in expansion
- 1 Reduction by one nominal diameter size
- 2 Single elbow (90° elbow)
- 3 Double elbow ($2 \times 90^{\circ}$ elbows, opposite)
- 4 Double elbow 3D ($2 \times 90^{\circ}$ elbows, opposite, not on one plane)
- 5 T-piece
- 6 Extension
- 7 Control valve
- 8 Two measuring instruments in a row where DN \leq 25 (1"): directly flange on flange
- 7 Two measuring instruments in a row where DN \geq 40 (1½"): for spacing, see graphic

 


- If there are several flow disturbances present, the longest specified inlet run must be maintained.
- If the required inlet runs cannot be observed, it is possible to install a specially designed flow conditioner $\rightarrow ext{ } ext{ }$

Flow conditioner

If the inlet runs cannot be observed, the use of a flow conditioner is recommended.

The flow conditioner is fitted between two pipe flanges and centered by the mounting bolts. Generally this reduces the inlet run needed to $10 \times DN$ with full measurement accuracy.



1 Flow conditioner

The pressure loss for flow conditioners is calculated as follows:

 $\Delta p \text{ [mbar]} = 0.0085 \cdot \rho \text{ [kg/m}^3] \cdot v^2 \text{ [m/s]}$

Example for steam	
p = 10 bar abs.	
$t = 240 \text{ °C} \rightarrow \rho = 4.39 \text{ kg/m}^3$	
v = 40 m/s	
$\Delta p = 0.0085 \cdot 4.39 \cdot 40^{2} = 5$	9.7 mbar

Example for H ₂ O condensate (80 °C)
$\rho = 965 \text{ kg/m}^3$
v = 2.5 m/s
$\Delta p = 0.0085 \cdot 965 \cdot 2.5^2 = 51.3 \text{ mbar}$

 $\boldsymbol{\rho}$: density of the process medium


v: average flow velocity

abs. = absolute

For the dimensions of the flow conditioner, see the "Technical Information" document, "Mechanical construction" section

Outlet runs when installing external devices

If installing an external device, observe the specified distance.

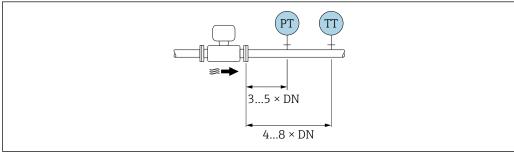

A001920

PT Pressure

TT Temperature device

Installation dimensions

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

6.1.2 Environmental and process requirements

Ambient temperature range

Compact version

Measuring instrument	Non-hazardous area:	-40 to +80 °C (-40 to +176 °F)
Ex i, Ex nA, Ex ec:		−40 to +70 °C (−40 to +158 °F)

	Ex d, XP:	-40 to +60 °C (-40 to +140 °F)	
	Ex d, Ex ia:	-40 to +60 °C (-40 to +140 °F)	
Local display		-40 to +70 °C (-40 to +158 °F) ¹⁾	

1) At temperatures below -20 °C (-4 °F), depending on the physical characteristics involved, it may no longer be possible to read the liquid crystal display.

Remote version

Transmitter	Non-hazardous area:	-40 to +80 °C (-40 to +176 °F)	
	Ex i, Ex nA, Ex ec:	-40 to +80 °C (-40 to +176 °F)	
	Ex d:	-40 to +60 °C (-40 to +140 °F)	
	Ex d, Ex ia:	-40 to +60 °C (-40 to +140 °F)	
Sensor	Non-hazardous area:	-40 to +85 °C (−40 to +185 °F)	
	Ex i, Ex nA, Ex ec:	-40 to +85 °C (−40 to +185 °F)	
	Ex d:	-40 to +85 °C (−40 to +185 °F)	
	Ex d, Ex ia:	-40 to +85 °C (−40 to +185 °F)	
Local display		-40 to +70 °C (-40 to +158 °F) ¹⁾	


- 1) At temperatures < -20 °C (-4 °F), depending on the physical characteristics involved, it may no longer be possible to read the liquid crystal display.
- ► If operating outdoors:

 Avoid direct sunlight, particularly in warm climatic regions.

Thermal insulation

For optimum temperature measurement and mass calculation, heat transfer at the sensor must be avoided for some fluids. This can be ensured by installing thermal insulation. A wide range of materials can be used for the required insulation.

The maximum insulation height permitted is illustrated in the diagram:

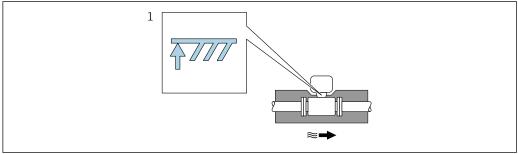

A00192

- Maximum insulation height
- ▶ When insulating, ensure that a sufficiently large area of the housing support remains exposed.

The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.

NOTICE


Electronics overheating on account of thermal insulation!

- ▶ Observe the maximum permitted insulation height of the transmitter neck so that the transmitter head and/or the connection housing of the remote version is completely free.
- ▶ Observe information on the permissible temperature ranges .
- Note that a certain orientation might be required, depending on the fluid temperature.

Installation for delta heat measurements

The second temperature measurement is taken using a separate temperature sensor. The measuring instrument reads in this value via a communication interface.

- In the case of saturated steam delta heat measurements, the measuring instrument must be installed on the steam side.
- In the case of water delta heat measurements, the device can be installed on the cold or warm side.

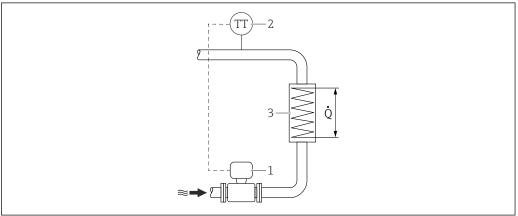

A00192

- \blacksquare 5 Layout for delta heat measurement of saturated steam and water
- 1 Measuring instrument
- 2 Temperature sensor
- 3 Heat exchanger
- Q Heat flow

Installation in steam systems

The device has been tested for dynamic pressure surges of up to 300 bar (4350 psi) by condensation-induced water hammer (CIWH). Despite the robust and reinforced design, the following best practice recommendations for steam applications apply to prevent damage from condensation-induced water hammer.

 
- 1. Ensure sufficient and constant condensate drainage from the pipes by using correctly dimensioned and well-maintained steam traps. These are generally installed every 30 to 50 m (100 to 165 in) in horizontal pipes or at ground points.
- 2. The steam lines must have an adequate gradient of at least 1% in the direction of the steam flow to ensure that the condensate is directed to the steam traps at the drain points
- 3. If the system is shut down, they must be drained completely.
- 4. Avoid pipe configurations that cause accumulations of standing water.
- 5. Slowly increase the static pressure and steam flow rate when starting up the system.
- 6. Make sure steam does not come into contact with significantly cooler condensate.

Protective cover

A protective cover is available as an accessory for the device. It is used to protect against direct sunlight, precipitation and ice.

When installing the protective cover, a minimum upward clearance must be maintained: 222 mm (8.74 in)

The protective cover can be ordered via the product structure together with the device: Order code for "Accessories enclosed" option PB "Protective cover"



6.2 Installing the device

6.2.1 Required tools

For transmitter

- For turning the transmitter housing: Open-ended wrench8 mm
- For opening the securing clamps: Allen key3 mm

For sensor

For flanges and other process connections: Use a suitable mounting tool.

6.2.2 Preparing the measuring device


- 1. Remove all remaining transport packaging.
- 2. Remove any protective covers or protective caps present from the sensor.
- 3. Remove stick-on label on the electronics compartment cover.

6.2.3 Installing the sensor

A WARNING

Danger due to improper process sealing!

- ► Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ▶ Ensure that the seals are clean and undamaged.
- ► Secure the seals correctly.
- 1. Ensure that the direction of the arrow on the sensor matches the flow direction of the medium.
- 2. To ensure compliance with device specifications, install the measuring instrument between the pipe flanges in a way that it is centered in the measurement section.
- 3. Install the measuring instrument or turn the transmitter housing so that the cable entries do not point upwards.

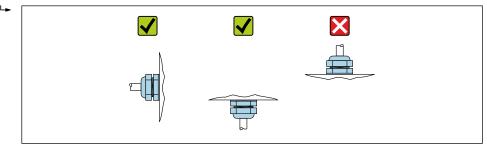


A002926

Mounting set for disc (wafer version)

The centering rings supplied are used to mount and center the wafer-style devices.

A mounting set comprises:

- Tie rods
- Seals
- Nuts
- Washers

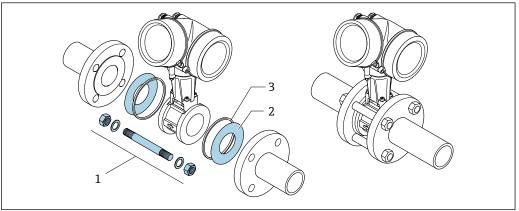

A001987

- 6 Mounting set for wafer version
- 1 Nut, washer, tie rod
- 2 Seal
- 3 Centering ring (is supplied with the measuring instrument)

6.2.4 Installing the transmitter of the remote version

A CAUTION

Ambient temperature too high!

Danger of electronics overheating and housing deformation.

- ▶ Do not exceed the permitted maximum ambient temperature.
- ► If operating outdoors: Avoid direct sunlight and exposure to weathering, particularly in warm climatic regions.

A CAUTION


Excessive force can damage the housing!

► Avoid excessive mechanical stress.


The transmitter of the remote version can be mounted in the following ways:

- Wall mounting
- Pipe mounting

Wall mounting

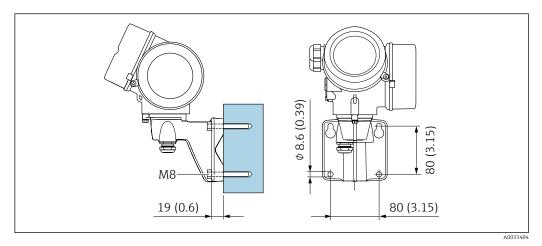


Pipe mounting

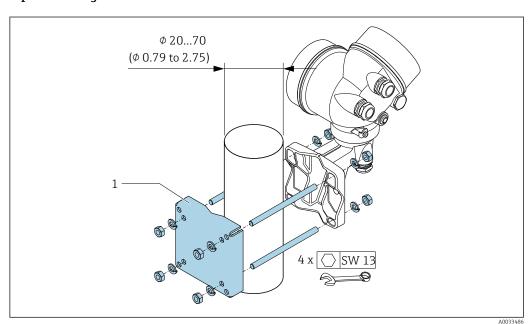

■ 8 mm (in)

6.2.5 Turning the transmitter housing

To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

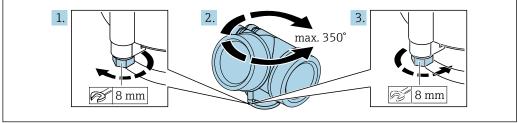


A0032242

- 1. Loosen the securing screw.
- 2. Turn the housing to the desired position.

3. Firmly tighten the securing screw.

6.2.6 Turning the display module

The display module can be turned to optimize display readability and operability.

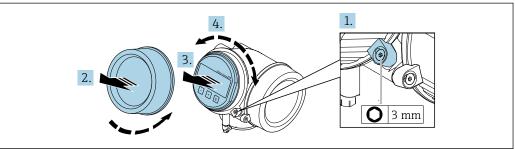

A003223

- 1. Loosen the securing clamp of the electronics compartment cover using an Allen key.
- 2. Unscrew cover of the electronics compartment from the transmitter housing.
- 3. Optional: pull out the display module with a gentle rotational movement.
- 4. Turn the display module to the desired position: Max. $8 \times 45^{\circ}$ in each direction.
- 5. Without display module pulled out:
 Allow display module to engage at desired position.
- 6. With display module pulled out:

 Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.
- 7. Reassemble the transmitter in the reverse order.

6.3 Post-mounting check

Is the device undamaged (visual inspection)?	
Does the measuring instrument correspond to the measuring point specifications? For example: Process temperature → ■ 196 Process pressure (refer to the section on "Pressure/temperature ratings" in the "Technical Information" document) Ambient temperature Measuring range → ■ 182	
Has the correct orientation been selected for the sensor → 🗎 19? • According to sensor type • As per medium temperature • As per medium properties (outgassing, with entrained solids)	
Does the arrow on the sensor match the direction of flow of the medium $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
Is the tag name and labeling correct (visual inspection)?	
Is the device sufficiently protected from precipitation and direct sunlight?	
Are the securing screw and securing clamp tightened securely?	
Has the maximum permitted insulation height been observed?	

7 Electrical connection

7.1 Electrical safety

In accordance with applicable national regulations.

7.2 Connecting requirements

7.2.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: Crimper for wire end ferrule
- For removing cables from terminal: Flat blade screwdriver ≤ 3 mm (0.12 in)

7.2.2 Requirements for connection cable

The connecting cables provided by the customer must fulfill the following requirements.

Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

Signal cable

Pulse/frequency/switch output

Standard installation cable is sufficient.

Ethernet-APL

Shielded twisted-pair cable. Cable type A is recommended.



See https://www.profibus.com Ethernet-APL White Paper "

Cable diameter

- Cable glands supplied:
 M20 × 1.5 with cable Φ 6 to 12 mm (0.24 to 0.47 in)
- Plug-in spring terminals for device version without integrated overvoltage protection: wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)

7.2.3 Connecting cable for remote version

Connecting cable (standard)

Standard cable	$2\times2\times0.5~\text{mm}^2$ (22 AWG) PVC cable with common shield (2 pairs, pair-stranded) $^{1)}$
Flame resistance	According to DIN EN 60332-1-2
Oil resistance	According to DIN EN 60811-2-1
Shielding	Galvanized copper-braid, opt. density approx. 85 %

Cable length	5 m (15 ft), 10 m (30 ft), 20 m (60 ft), 30 m (90 ft)
Continuous operating temperature	When mounted in a fixed position: -50 to $+105$ °C (-58 to $+221$ °F); when cable can move freely: -25 to $+105$ °C (-13 to $+221$ °F)

 UV radiation may cause damage to the outer jacket of the cable. Protect the cable from exposure to sun as much as possible.


Connecting cable (armored)

Cable, armored	$2\times2\times0.34~mm^2$ (22 AWG) PVC cable with common shield (2 pairs, pairstranded) and additional steel-wire braided sheath $^{1)}$	
Flame resistance	According to DIN EN 60332-1-2	
Oil resistance	According to DIN EN 60811-2-1	
Shielding	Galvanized copper-braid, opt. density approx. 85%	
Strain relief and reinforcement	Steel-wire braid, galvanized	
Cable length	10 m (30 ft), 20 m (60 ft), 30 m (90 ft)	
Continuous operating temperature	When mounted in a fixed position: -50 to $+105$ °C (-58 to $+221$ °F); when cable can move freely: -25 to $+105$ °C (-13 to $+221$ °F)	

1) UV radiation may cause damage to the outer jacket of the cable. Protect the cable from exposure to sun as much as possible.

7.2.4 Terminal assignment

Transmitter

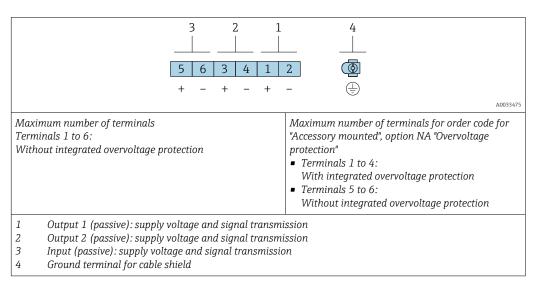

Order code for "Output"	Terminal numbers	
	Output 1	
	1 (+)	2 (-)
Option S ¹⁾	PROFINET over Ethernet-APL	

1) \qquad PROFINET over Ethernet-APL with integrated reverse polarity protection.

Pin Assignment Coding Plug/socket 1 APL signal -Α Socket 2 APL signal + 3 Cable shield1 Not used 4 Cable shield Metal plug housing ¹If a cable shield is used

7.2.5 Pin assignment of device plug

7.2.6 Shielding and grounding

Optimal electromagnetic compatibility (EMC) of the fieldbus system can be guaranteed only if the system components and, in particular, the lines are shielded and the shield forms as complete a cover as possible.

- 1. To ensure optimal EMC protection, connect the shield to the reference ground as often as possible.
- 2. For reasons concerning explosion protection, it is recommended that grounding be dispensed with.

To comply with both requirements, there are basically three different types of shielding in the fieldbus system:

- Shielding at both ends
- Shielding at one end on the feed side with capacitance termination at the field device
- Shielding at one end on the feed side

Experience shows that the best results with regard to EMC are achieved in most cases in installations with one-sided shielding on the feed side (without capacitance termination at the field device). Appropriate measures with regard to input wiring must be taken to allow unrestricted operation when EMC interference is present. These measures have been taken into account for this device. Operation in the event of disturbance variables as per NAMUR NE21 is thus guaranteed.


- 1. Observe national installation requirements and guidelines during installation.
- 2. Where there are large differences in potential between the individual grounding points,
 - connect only one point of the shielding directly to the reference ground.
- 3. In systems without potential equalization, the cable shielding of fieldbus systems should be grounded on one side only, for example at the fieldbus supply unit or at safety barriers.

NOTICE

In systems without potential matching, the multiple grounding of the cable shield causes mains frequency equalizing currents!

Damage to the bus cable shield.

- ▶ Only ground the bus cable shield to either the local ground or the protective ground at one end.
- ▶ Insulate the shield that is not connected.

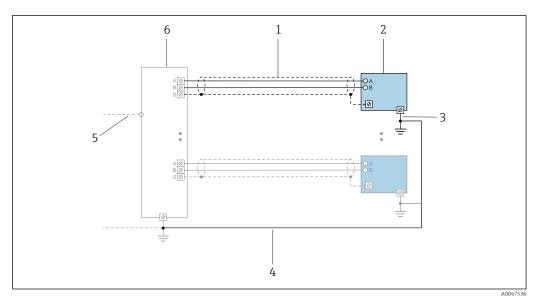

■ 9 Connection example for PROFINET over Ethernet-APL

- Cable shield
- 2 Measuring instrument
- 3 Local grounding
- 4 Potential equalization
- 5 Trunk or TCP
- 6 Field switch

7.2.7 Requirements for the supply unit

Supply voltage

Transmitter

The following supply voltage values apply for the outputs available:

Supply voltage for a compact version

Order code for "Output; input"	Minimum Terminal voltage	Maximum Terminal voltage
Option S : PROFINET over Ethernet-APL	≥ DC 9 V	■ Non-Ex: DC 30 V ■ Ex: DC max. 15 V

Transient overvoltage: Up to overvoltage category I

7.2.8 Preparing the measuring instrument

Carry out the steps in the following order:

- 1. Mount the sensor and transmitter.
- 2. Sensor connection housing: Connect connecting cable.
- 3. Transmitter: Connect connecting cable.
- 4. Transmitter: Connect cable for supply voltage.

NOTICE

Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

- ▶ Use suitable cable glands corresponding to the degree of protection.
- 1. Remove dummy plug if present.

32

- 2. If the measuring device is supplied without cable glands:
 Provide suitable cable gland for corresponding connecting cable.
- 3. If the measuring device is supplied with cable glands:

 Observe requirements for connecting cables →

 29.

7.3 Connecting the device

NOTICE

An incorrect connection compromises electrical safety!

- ▶ Only properly trained specialist staff may perform electrical connection work.
- ▶ Observe applicable federal/national installation codes and regulations.
- ► Comply with local workplace safety regulations.
- ► Always connect the protective ground cable ⊕ before connecting additional cables.
- ► When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.
- ► The power unit must be safety-approved (e.g. SELV/PELV protection class II limited power).


7.3.1 Connecting the compact version

Connecting the transmitter

The connection of the transmitter depends on the following order code: "Electrical connection":

- Option A, B, C, D: terminals
- Option I: device plug

Connection via terminals

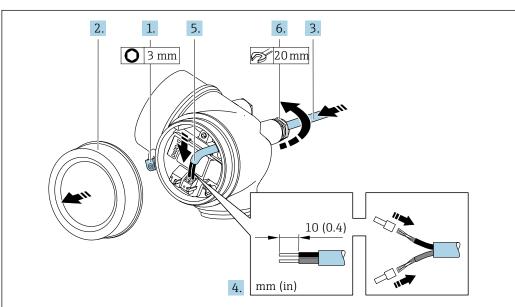

A0048825

- 1. Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 4. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
- 5. Connect cable in accordance with terminal assignment.

6. **WARNING**


Housing degree of protection may be voided due to insufficient sealing of the housing.

▶ Screw in the screw without using any lubricant. The threads on the cover are coated with a dry lubricant.

Firmly tighten the cable glands.


7. Reassemble the transmitter in the reverse order.

Connection via device plug

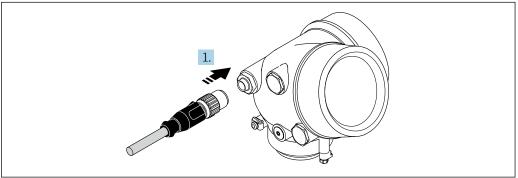

▶ Plug in the device plug and tighten firmly.

Removing a cable

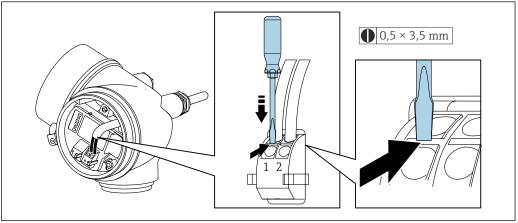

To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes while simultaneously pulling the cable end out of the terminal.

7.3.2 Connecting the remote version

MARNING

Risk of damaging electronic components!

- Connect the sensor and transmitter to the same potential equalization.
- Only connect the sensor to a transmitter with the same serial number.

The following sequence of steps is recommended:

- 1. Mount the sensor and transmitter.
- 2. Connect the.

- 3. Connect the transmitter.
- How the connecting cable is connected in the transmitter housing depends on the measuring instrument approval and the version of the connecting cable used.

In the following versions, only terminals can be used for connection in the transmitter housing:


- Order code for "Electrical connection", option B, C, D, 6
- Certain approvals: Ex nA, Ex ec, Ex tb and Division 1
- Use of reinforced connecting cable

In the following versions, an M12 device connector is used for connection in the transmitter housing:

- All other approvals
- Use of connecting cable (standard)


Terminals are always used to connect the connecting cable in the sensor connection housing (tightening torques for screws for cable strain relief: 1.2 to 1.7 Nm).

Connecting the sensor connection housing

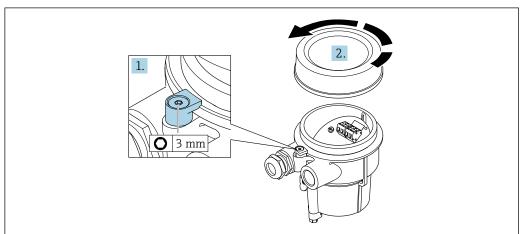

A003416

- 1. Loosen the securing clamp.
- 2. Unscrew the housing cover.

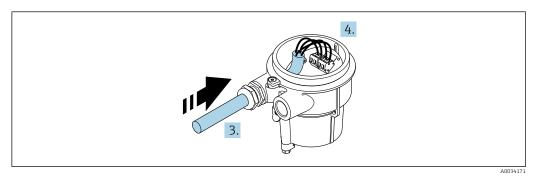

■ 10 Sample graphic

Connecting cable (standard, reinforced)

3. Guide the connecting cable through the cable entry and into the connection housing (if using a connecting cable without an M12 device plug, use the shorter stripped end of the connecting cable).

- 4. Wire the connecting cable:
 - ► Terminal 1 = brown cable

Terminal 2 = white cable

Terminal 3 = yellow cable

Terminal 4 = green cable

5. Connect the cable shield via the cable strain relief.

- 6. Tighten the screws for the cable strain relief using a torque in the range of 1.2 to 1.7 Nm.
- 7. Reverse the removal procedure to reassemble the connection housing.

Connecting cable (option "mass pressure-/temperature-compensated")

- 3. Guide the connecting cable through the cable entry and into the connection housing (if using a connecting cable without an M12 device plug, use the shorter stripped end of the connecting cable).
- 4. Wire the connecting cable:
 - ► Terminal 1 = brown cable

Terminal 2 =white cable

Terminal 3 = green cable

Terminal 4 = red cable

Terminal 5 = black cable


Terminal 6 = yellow cable

Terminal 7 = blue cable

- 5. Connect the cable shield via the cable strain relief.
- 6. Tighten the screws for the cable strain relief using a torque in the range of 1.2 to 1.7 Nm.
- 7. Reverse the removal procedure to reassemble the connection housing.

Connecting the transmitter


Connecting transmitter via plug

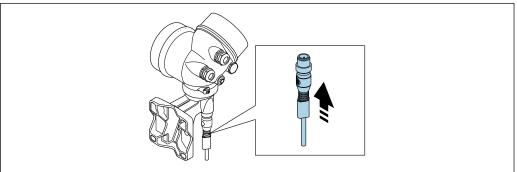


A0034172

► Connect the plug.

Connecting transmitter via terminals

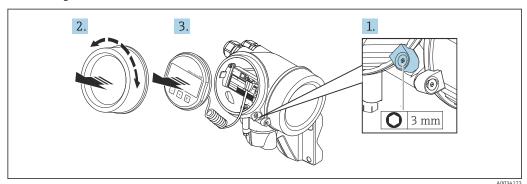


- 1. Loosen the securing clamp of the electronics compartment cover.
- 2. Unscrew the electronics compartment cover.
- 3. Pull out the display module with a gentle rotational movement. To make it easier to access the lock switch, attach the display module to the edge of the electronics compartment.

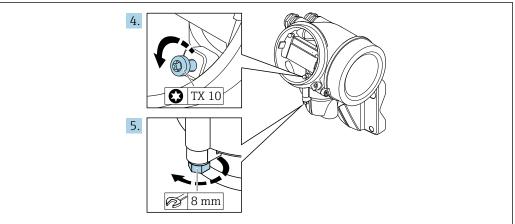

A003417

- 4. Loosen the locking screw of the transmitter housing.
- 5. Loosen the securing clamp of the transmitter housing.

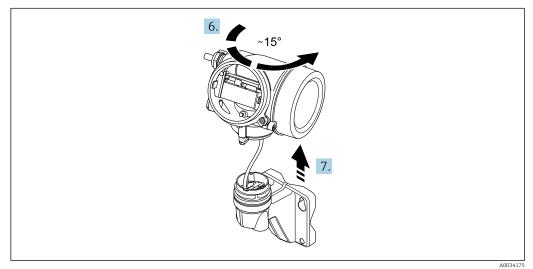


- 🖪 11 Sample graphic
- 6. Turn the transmitter housing to the right until it reaches the marking.

7. NOTICE


The connection board of the wall housing is connected to the electronics board of the transmitter via a signal cable!

▶ Pay attention to the signal cable when lifting the transmitter housing!

Lift the transmitter housing.

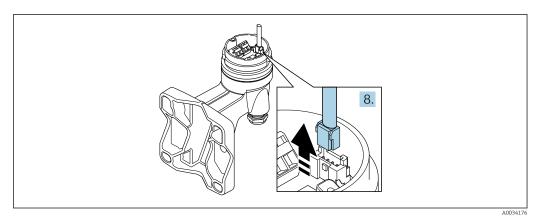

■ 12 Sample graphic

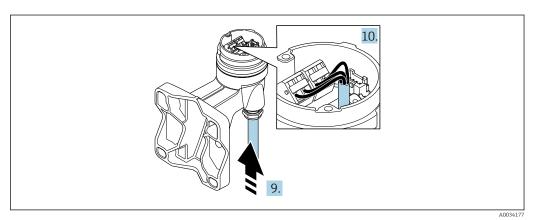

■ 13 Sample graphic

Connecting cable (standard, reinforced)

- 8. Disconnect the signal cable from the connection board of the wall housing . by pressing in the locking clip on the connector. Remove the transmitter housing.
- 9. Guide the connecting cable through the cable entry and into the connection housing (if using a connecting cable without an M12 device plug, use the shorter stripped end of the connecting cable).
- 10. Wire the connecting cable:
 - ► Terminal 1 = brown cable
 - Terminal 2 = white cable
 - Terminal 3 = yellow cable
 - Terminal 4 = green cable
- 11. Connect the cable shield via the cable strain relief.
- 12. Tighten the screws for the cable strain relief using a torque in the range of 1.2 to 1.7 Nm.
- 13. Reverse the removal procedure to reassemble the transmitter housing.

Connecting cable (option "mass pressure-/temperature-compensated")

- 8. Disconnect both signal cables from the connection board of the wall housing. by pressing in the locking clip on the connector. Remove the transmitter housing.
- 9. Guide the connecting cable through the cable entry and into the connection housing (if using a connecting cable without an M12 device plug, use the shorter stripped end of the connecting cable).
- 10. Wire the connecting cable:
 - ► Terminal 1 = brown cable
 - Terminal 2 =white cable
 - Terminal 3 = green cable
 - Terminal 4 = red cable
 - Terminal 5 = black cable
 - Terminal 6 = yellow cable
 - Terminal 7 = blue cable
- 11. Connect the cable shield via the cable strain relief.
- 12. Tighten the screws for the cable strain relief using a torque in the range of 1.2 to 1.7 Nm.
- 13. Reverse the removal procedure to reassemble the transmitter housing.

7.4 Potential equalization

7.4.1 Requirements

For potential equalization:

- Pay attention to in-house grounding concepts
- Take account of operating conditions, such as the pipe material and grounding
- Connect the medium, sensor and transmitter to the same electric potential
- Use a ground cable with a minimum cross-section of 6 mm² (10 AWG) and a cable lug for potential equalization connections


7.5 Ensuring the degree of protection

The measuring instrument fulfills all the requirements for the degree of protection IP66/67, Type 4X enclosure.

To guarantee the degree of protection IP66/67, Type 4X enclosure, carry out the following steps after the electrical connection:

- 1. Check that the housing seals are clean and fitted correctly.
- 2. Dry, clean or replace the seals if necessary.
- 3. Tighten all housing screws and screw covers.
- 4. Firmly tighten the cable glands.
- 5. To ensure that moisture does not enter the cable entry:

 Route the cable so that it loops down before the cable entry ("water trap").

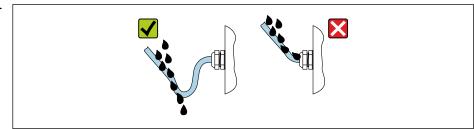

A0029278


6. The cable glands supplied do not ensure housing protection when not in use. They must therefore be replaced by dummy plugs corresponding to the housing protection.

7.6 Post-connection check

Are the device and cable undamaged (visual inspection)?	
Do the cables used comply with the requirements $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
Are the mounted cables strain relieved?	
Are all cable glands installed, securely tightened and leak-tight? Cable run with "water trap" $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
Depending on the device version: are all the device plugs firmly tightened $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
Only for remote version: Is the sensor connected to the right transmitter? Check the serial number on the nameplate of the sensor and transmitter.	
Does the supply voltage match the specifications on the transmitter nameplate ?	
Is the terminal assignment correct ?	
If supply voltage is present, do values appear on the display module?	
Are all housing covers installed and firmly tightened?	
Is the securing clamp securely tightened?	
Have the screws for the cable strain relief been tightened using the correct tightening torque → 1 34?	

Operation options 8

8.1 Overview of operation options

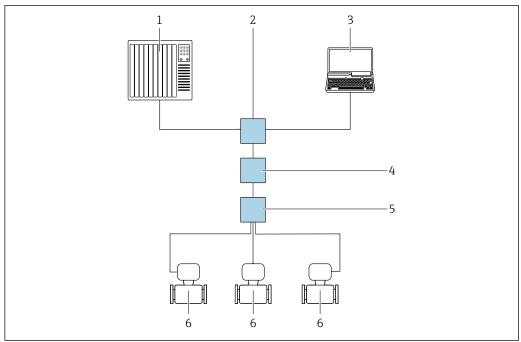


- Automation system, e.g. Simatic S7 (Siemens)
- Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- Computer with Web browser for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with PROFINET COM DTM "CDI Communication TCP/IP"
- APL power switch (optional)
- APL field switch
- Measuring instrument

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

For an overview of the operating menu for experts: see the "Description of Device Parameters" document supplied with the device

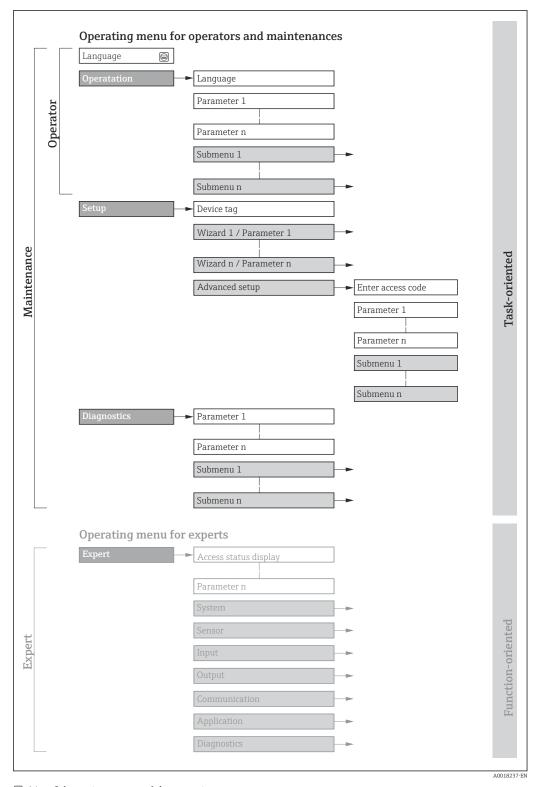

 \blacksquare 14 Schematic structure of the operating menu


8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (e.g. operator, maintenance etc.). Each user role contains typical tasks within the device life cycle.

Menu/pa	arameter	User role and tasks	Content/meaning
Language	Task- oriented	Role "Operator", "Maintenance" Tasks during operation: Configuration of the operational display Reading measured values	 Defining the operating language Resetting and controlling totalizers
Operation	on		 Configuration of the operational display (e.g. display format, display contrast) Resetting and controlling totalizers
Setup	Setup	"Maintenance" role Commissioning: Configuration of the measurement Configuration of the inputs and outputs	Wizards for fast commissioning: Configuring the system units Definition of the medium Configuration of the current input Configuring the outputs Configuration of the operational display Definition of output conditioning Configuring the low flow cut off
			Advanced setup For more customized configuration of the measurement (adaptation to special measuring conditions) Configuration of totalizers Administration (define access code, reset measuring device)
Diagnostics	CS	"Maintenance" role Troubleshooting: Diagnostics and elimination of process and device errors Measured value simulation	Contains all parameters for error detection and analyzing process and device errors: Diagnostic list Contains up to 5 currently pending diagnostic messages. Event logbook Contains event messages that have occurred. Device information Contains information for identifying the device Measured values Contains all current measured values. Data logging submenu with the "Extended HistoROM" order option Storage and visualization of measured values Heartbeat Technology Verification of device functionality on request and documentation of verification results Simulation Used to simulate measured values or output values.
Expert	Function- oriented	Tasks that require detailed knowledge of the function of the device: Commissioning measurements under difficult conditions Optimal adaptation of the measurement to difficult conditions Detailed configuration of the communication interface Error diagnostics in difficult cases	Contains all of the device parameters and allows direct access to these by means of an access code. The structure of this menu is based on the function blocks of the device: System Contains all higher-level device parameters that do not affect measurement or measured value communication Sensor Configuration of the measurement. Communication Configuration of the digital communication interface Application Configuration of the functions that go beyond the actual measurement (e.g. totalizer) Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.

8.3 Access to operating menu via local display

8.3.1 Operational display

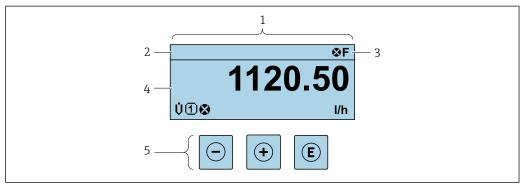

A002934

- 1 Operational display
- 2 Tag name
- 3 Status area
- 4 Display area for measured values (up to 4 lines)
- 5 *Operating elements* $\rightarrow \triangle 49$

Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 🗎 130
 - **F**: Failure
 - **C**: Function check
 - **S**: Out of specification
 - M: Maintenance required
- Diagnostic behavior → 🖺 131
 - 🐼: Alarm
 - <u>M</u>: Warning
- 🛱: Locking (the device is locked via the hardware)
- +: Communication (communication via remote operation is active)

Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

Measured variables

Symbol	Meaning
Ü	Volume flow

The number and display format of the measured variables can be configured via the **Format display** parameter ($\rightarrow \triangleq 104$).

Totalizer

Symbol	Meaning
Σ	Totalizer The measurement channel number indicates which of the three totalizers is displayed.

Measurement channel numbers


Symbol	Meaning
	Measurement channel 1 to 4
114	The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. Totalizer 1 to 3).

Diagnostic behavior

Symbol	Meaning
8	Alarm Measurement is interrupted. Signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated. For local display with touch control: the background lighting changes to red.
Δ	 Warning Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable.


8.3.2 Navigation view

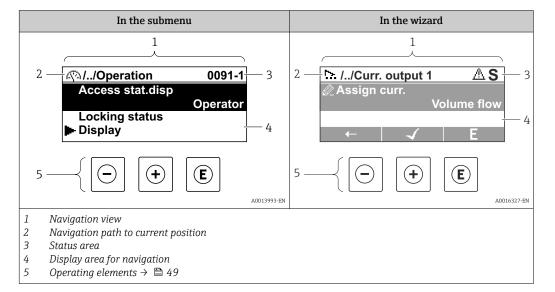

Navigation path

The navigation path to the current position is displayed at the top left in the navigation view and consists of the following elements:

 - The display symbol for the menu/submenu (►) or the wizard (►).
- An omission symbol (/ ../) for operating menu levels in between.
- Name of the current submenu, wizard or parameter



Status area

The following appears in the status area of the navigation view in the top right corner:

- In the submenu
 - The direct access code to the parameter (e.g., 0022-1)
 - If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard

If a diagnostic event is present, the diagnostic behavior and status signal

Display area

Menus

Symbol	Meaning
P	Operation Is displayed: In the menu next to the "Operation" selection At the left in the navigation path in the Operation menu

۶	Setup Is displayed: In the menu next to the "Setup" selection At the left in the navigation path in the Setup menu
્ય	Diagnosis Is displayed: ■ In the menu next to the "Diagnostics" selection ■ At the left in the navigation path in the Diagnostics menu
₹.	Expert Is displayed: In the menu next to the "Expert" selection At the left in the navigation path in the Expert menu

Submenus, wizards, parameters

Symbol	Meaning
•	Submenu
55.	Wizards
Ø.	Parameters within a wizard No display symbol exists for parameters in submenus.


Locking procedure

Symbol	Meaning
û	Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked. By a user-specific access code By the hardware write protection switch

Wizards

Symbol	Meaning
-	Switches to the previous parameter.
√	Confirms the parameter value and switches to the next parameter.
Е	Opens the editing view of the parameter.

Editing view 8.3.3

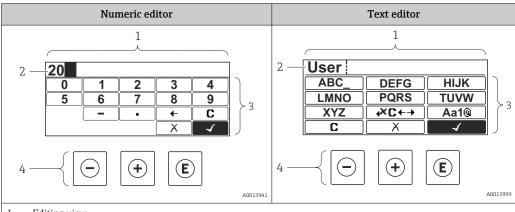

- Editing view
- Display area of the entered values
- 1 2 3 4 Input mask
- *Operating elements* $\rightarrow \implies 49$

Input screen

The following input symbols are available in the input mask of the numeric and text editor:

Numeric editor

Symbol	Meaning
0	Selection of numbers from 0 to 9
9	
·	Inserts a decimal separator at the cursor position.
_	Inserts a minus sign at the cursor position.
4	Confirms the selection.
+	Moves the input position one position to the left.
X	Exits the input without applying the changes.
С	Clears all entered characters.

Text editor

Symbol	Meaning
(Aa1@)	Toggle Between upper-case and lower-case letters For entering numbers For entering special characters
ABC_ XYZ	Selection of letters from A to Z.
abc _ xyz	Selection of letters from a to z.
····^ ~&	Selection of special characters.
4	Confirms the selection.
€XC←→	Switches to the selection of the correction tools.
X	Exits the input without applying the changes.
С	Clears all entered characters.

$Text\ correction\ under\ \checkmark \leftarrow \rightarrow$

Symbol	Meaning
C	Clears all entered characters.

\rightarrow	Moves the input position one position to the right.
€	Moves the input position one position to the left.
₹ X	Deletes one character immediately to the left of the input position.

8.3.4 Operating elements

Operating key	Meaning
	Minus key
	In menu, submenu Moves the selection bar upwards in a picklist
	In wizards Goes to previous parameter
	In the text and numeric editor In the input screen, moves the selection bar to the left (backwards)
	Plus key
	In menu, submenu Moves the selection bar downwards in a picklist
(+)	In wizards Goes to the next parameter
	In the text and numeric editor In the input screen, moves the selection bar to the right (forwards)
	Enter key
	In the operational display Pressing the key for 2 s opens the context menu.
	In menu, submenuPressing the key briefly:
	 Opens the selected menu, submenu or parameter. Starts the wizard.
	 If help text is open, closes the help text of the parameter.
E	Pressing the key for 2 s in a parameter:If present, opens the help text for the function of the parameter.
	In wizards Opens the editing view of the parameter and confirms the parameter value
	In the text and numeric editor
	Pressing the key briefly:Opens the selected group.
	 Carries out the selected action. Pressing the key for 2 s confirms the edited parameter value.
	Escape key combination (press keys simultaneously)
	In menu, submenu
	Pressing the key briefly:Exits the current menu level and takes you to the next higher level.
	 If help text is open, closes the help text of the parameter.
	 Pressing the key for 2 s returns you to the operational display ("home position"). In wizards
	Exits the wizard and takes you to the next higher level
	In the text and numeric editor Closes the text or numeric editor without applying changes.
(+) + (E)	Plus/Enter key combination (press and hold down the keys simultaneously)
	Increases the contrast (darker setting).
	Minus/Plus/Enter key combination (press the keys simultaneously)
	In the operational display Enables or disables the keypad lock (only SD02 display module).

8.3.5 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Configuration backup display
- Simulation

Calling up and closing the context menu

The user is in the operational display.

- 1. Press the \Box and \Box keys for longer than 3 seconds.
 - ► The context menu opens.

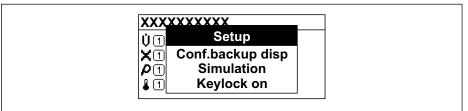

A0034284-F

- 2. Press \Box + \pm simultaneously.
 - The context menu is closed and the operational display appears.

Calling up the menu via the context menu

- 1. Open the context menu.
- 2. Press ± to navigate to the desired menu.
- 3. Press 🗉 to confirm the selection.
 - ► The selected menu opens.


50

8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

For an explanation of the navigation view with symbols and operating elements $\Rightarrow \triangleq 46$

Example: Setting the number of displayed measured values to "2 values"

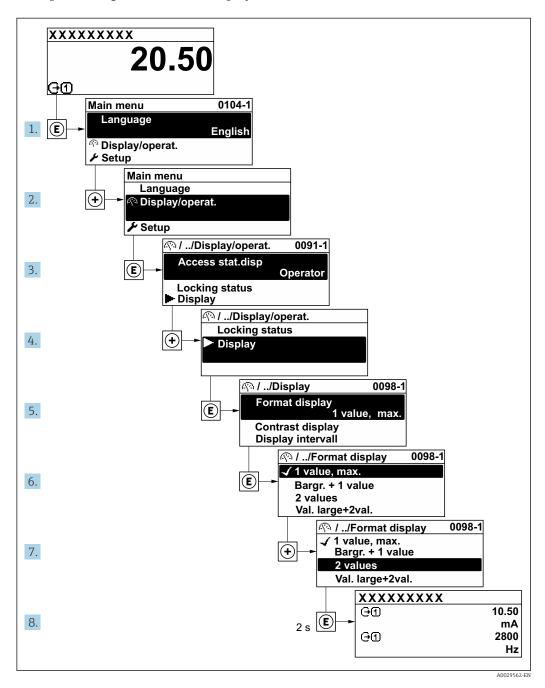


8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

Navigation path

Expert → Direct access

The direct access code consists of a 5-digit number (at maximum) and the channel number, which identifies the channel of a process variable: e.g. 00914-2. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

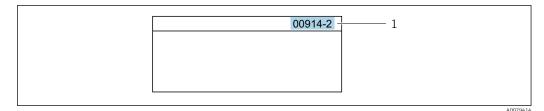

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered. Example: Enter "914" instead of "00914"
- If no channel number is entered, channel 1 is opened automatically.
 Example: Enter 00914 → Assign process variable parameter
- If a different channel is opened: Enter the direct access code with the corresponding channel number.

Example: Enter **00914-2** → **Assign process variable** parameter

For the direct access codes of the individual parameters, see the "Description of Device Parameters" document for the device

 
8.3.8 Calling up help text

Help text is available for some parameters and can be called up from the navigation view. The help text provides a brief explanation of the parameter function and thereby supports swift and safe commissioning.

Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

- 1. Press E for 2 s.
 - ► The help text for the selected parameter opens.




A0014002-EN

- 15 Example: Help text for parameter "Enter access code"
- 2. Press \Box + \pm simultaneously.
 - ► The help text is closed.

8.3.9 Changing the parameters

For a description of the editing view - consisting of the text editor and numeric editor - with symbols $\rightarrow \triangleq 47$, for a description of the operating elements $\rightarrow \triangleq 49$

Example: Changing the tag name in the "Tag description" parameter from 001-FT-101 to 001-FT-102

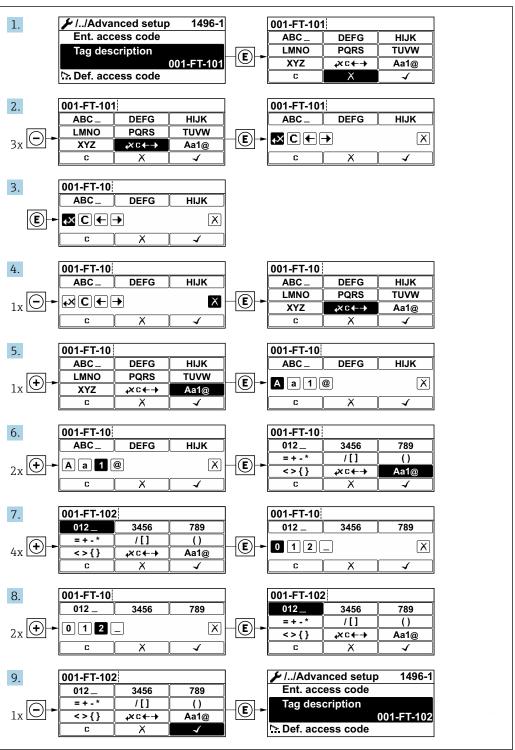

A0029563-E

A message is displayed if the value entered is outside the permitted value range.

Ent. access code
Invalid or out of range input
value
Min:0
Max:9999

A0014049-EN

8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access.

Defining access authorization for user roles

An access code is not yet defined when the device is delivered from the factory. Access authorization (read and write access) to the device is not restricted and corresponds to the "Maintenance" user role.

- ▶ Define the access code.
 - The "Operator" user role is redefined in addition to the "Maintenance" user role. Access authorization differs for the two user roles.

Access authorization to parameters: "Maintenance" user role

Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	V	V
After an access code has been defined.	V	✓ 1)

1) The user only has write access after entering the access code.

Access authorization to parameters: "Operator" user role

Access code status	Read access	Write access
After an access code has been defined.	V	_ 1)

- Despite the defined access code, certain parameters can always be modified and thus are excluded from the write protection as they do not affect the measurement: write protection via access code
- The user role with which the user is currently logged on is indicated by the **Access** status display parameter. Navigation path: Operation → Access status display

8.3.11 Disabling write protection via access code

If the @-symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using local operation $\rightarrow @$ 108.

Parameter write protection via local operation can be disabled by entering the user-specific access code in the **Enter access code** parameter ($\rightarrow \bowtie 84$) via the respective access option.

- 1. After you press **E**, the input prompt for the access code appears.
- 2. Enter the access code.
 - The \(\mathbb{O}\)-symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

8.3.12 Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock

- For the SD03 display only
 - The keypad lock is switched on automatically:
 - If the device has not been operated via the display for > 1 minute.
 - Each time the device is restarted.

To activate the keylock manually:

- 1. The device is in the measured value display.
 - Press the \Box and \Box keys for 3 seconds.
 - ► A context menu appears.
- 2. In the context menu select the **Keylock on** option.
 - └ The keypad lock is switched on.
- If the user attempts to access the operating menu while the keypad lock is active, the **Keylock on** message appears.

Switching off the keypad lock


- ► The keypad lock is switched on. Press the □ and □ keys for 3 seconds.
 - ► The keypad lock is switched off.

8.4 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

8.4.1 Connecting the operating tool

Via APL network

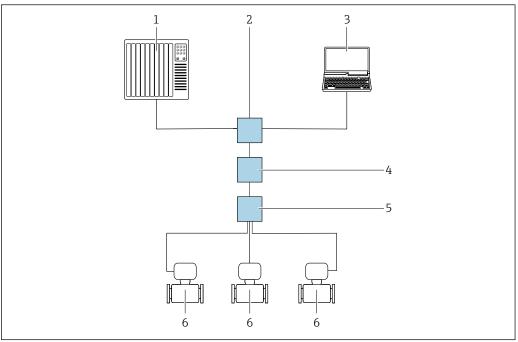


■ 16 Options for remote operation via APL network

- Automation system, e.g. Simatic S7 (Siemens)
- Ethernet switch, e.g. Scalance X204 (Siemens)
- Computer with Web browser (e.g. Internet Explorer) for access to integrated Web server or computer with an operating tool (e.g. FieldCare, DeviceCare with PROFINET COM DTM or SIMATIC PDM with FDI Package)
- APL power switch (optional) APL field switch
- Measuring instrument

56

Via service interface (CDI)

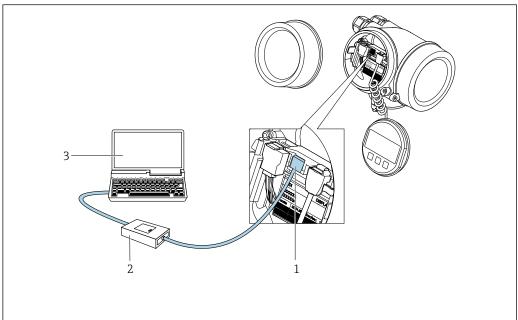

.....

- Service interface (CDI = Endress+Hauser Common Data Interface) of the measuring instrument
- 2 Commubox FXA291
- 3 Computer with operating tool (e.g. FieldCare or DeviceCare) and (CDI) DeviceDTM

8.4.2 FieldCare

Function range

FDT-based (Field Device Technology) plant asset management tool from Endress+Hauser. It can configure all smart field units in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

CDI service interface \rightarrow \blacksquare 57

Typical functions:

- Transmitter parameter configuration
- Loading and saving of device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook




- Operating Instructions BA00027S
 - Operating Instructions BA00059S

Establishing a connection

- 1. Start FieldCare and launch the project.
- 2. In the network: Add a device.
 - ► The **Add device** window opens.
- 3. Select the **CDI Communication TCP/IP** option from the list and press **OK** to confirm.
- 4. Right-click **CDI Communication TCP/IP** and select the **Add device** option in the context menu that opens.

- 5. Select the desired device from the list and press **OK** to confirm.
 - ► The CDI Communication TCP/IP (Configuration) window opens.
- 6. Enter the device address in the **IP address** field: 192.168.1.212 and press **Enter** to confirm.
- 7. Establish the online connection to the device.
- Operating Instructions BA00027S
 - Operating Instructions BA00059S

User interface

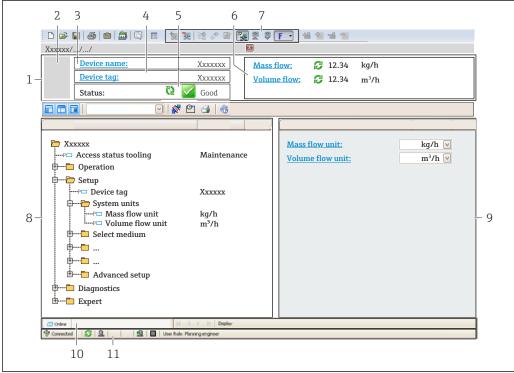

A0021051-EN

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Tag name
- 5 Status area with status signal $\rightarrow \blacksquare 133$
- 6 Display area for current measured values
- 7 Editing toolbar with additional functions such as save/load, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Work area
- 10 Action area
- 11 Status area

8.4.3 DeviceCare

Function range

Tool for connecting and configuring Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.

Innovation brochure INO1047S

Source for device description files $\rightarrow \triangleq 60$

8.4.4 **SIMATIC PDM**

Function range

Standardized, vendor-independent program from Siemens for the operation, configuration, maintenance and diagnosis of intelligent field devices via the PROFINET protocol.



Source for device description files $\rightarrow \triangleq 60$

9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

Firmware version	01.00.zz	 On the title page of the manual On the transmitter nameplate Firmware version parameter Diagnostics → Device information → Firmware version
Manufacturer	17	Manufacturer Expert → Communication → Physical block → Manufacturer
Device ID	0xA438	-
Device type ID	Prowirl 200	Device type
Device revision	1	-
PROFINET over Ethernet-APL version	2.43	Version of the PROFINET specification

For an overview of the various firmware versions for the device $\rightarrow \triangleq 174$

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via APL port	Sources for obtaining device descriptions
FieldCare	 www.endress.com → Downloads area USB stick (contact Endress+Hauser) DVD (contact Endress+Hauser)
DeviceCare	 www.endress.com → Downloads area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser)
SIMATIC PDM (Siemens)	www.endress.com → Downloads area

9.2 Device master file (GSD)

In order to integrate field devices into a bus system, the PROFIBUS system needs a description of the device parameters, such as output data, input data, data format and data volume.

These data are available in the device master file (GSD) which is provided to the automation system when the communication system is commissioned. In addition device bit maps, which appear as icons in the network structure, can also be integrated.

The device master file (GSD) is in XML format, and the file is created in the GSDML description markup language.

With the PA Profile 4.02 device master file (GSD) it is possible to exchange field devices made by different manufacturers without having to reconfigure.

Two different device master files (GSD) can be used: Manufacturer-specific GSD and PA Profile GSD.

9.2.1 File name of the manufacturer-specific device master file (GSD)

Example of the name of a device master file:

GSDML-V2.43-EH-PROWIRL_200_APL_yyyymmdd.xml

GSDML	Description language	
V2.43	Version of the PROFINET specification	
ЕН	Endress+Hauser	
200_APL	Transmitter	
yyyymmdd	Date of issue (yyyy: year, mm: month, dd: day)	
.xml	File name extension (XML file)	

9.2.2 File name of the PA Profile device master file (GSD)

Example of the name of a PA Profile device master file:

GSDML-V2.43-PA_Profile_V4.02-B330-FLOW_VORTEX-yyyymmdd.xml

GSDML	Description language	
V2.43	Version of the PROFINET specification	
PA_Profile_V4.02	Version of the PA Profile specification	
B330	PA Profile device identification	
FLOW	Product line	
VORTEX	Flow measuring principle	
yyyymmdd	Date of issue (yyyy: year, mm: month, dd: day)	
.xml	File name extension (XML file)	

API	Supported modules	Slot	Input and output variables
	Analog input	1	Volume flow
0x9700	Analog input	2	Vortex frequency
0.2700	Totalizer	3	Totalizer value: volume/volume Totalizer Control

Where to acquire the manufacturer-specific GSD:

Manufacturer-specific GSD: www.endress.com → Downloads section	
	https://www.profibus.com/products/gsd-files/gsd-library-profile-for-process-control-devices-version-40 \rightarrow Downloads section

9.3 Cyclic data transmission

9.3.1 Overview of the modules

The following graphic shows which modules are available to the device for cyclic data transfer. Cyclic data transfer is performed with an automation system.

Manufacturer-specific GSD:

	Measuring device		Sub-slot	Direction	Control
API	Modules	Slot	Sub-slot	Data flow	system
	Analog Input 1 (Volume flow)	1	1	→	
	Analog Input 2 (Vortex frequency)	2	1	→	
	Analog Input 3	20	1	→	
	Analog Input 4	21	1	→	
	Totalizer 1 (Volume)	3	1	→ ←	
	Totalizer 2	70	1	→ ←	
0x9700	Totalizer 3	71	1	→ ←	PROFINET
	Binary Input 1 (Heartbeat)	80	1	→	
	Binary Input 2	81	1	→	
	Analog Output 1 (Pressure)	160	1	+	
	Analog Output 2 (Density)	161	1	←	
	Analog Output 3 (Temperature)	162	1	+	
	Binary Output 1 (Heartbeat)	210	1	+	
	Binary Output 2	211	1	+	

9.3.2 Description of the modules

The data structure is described from the perspective of the automation system:

- Input data: Are sent from the measuring device to the automation system.
- Output data: Are sent from the automation system to the measuring device.

Analog Input module

Transmit input variables from the measuring device to the automation system.

Analog Input modules cyclically transmit the selected input variables, including the status, from the measuring device to the automation system. The input variable is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Selection: input variable

Slot	Sub-slot	Input variables
1	1	Volume flow
2	1	Vortex frequency
2021	1	 Mass flow Volume flow Density Temperature Pressure Specific volume Degree of overheating Electronics temperature Vortex frequency Vortex bow Vortex amplitude Calculated saturated steam pressure Steam quality Total mass flow Condensate mass flow Energy flow Heat flow difference Reynolds number Flow velocity Corrected volume flow

Data structure

Output data of Analog Output

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status 1)

1) Status coding $\rightarrow \triangleq 69$

Binary input module

Transmit binary input variables from the measuring device to the automation system.

Binary input variables are used by the measuring device to transmit the state of device functions to the automation system.

Binary Input modules cyclically transmit discrete input variables, including the status, from the measuring device to the automation system. The discrete input variable is depicted in the first byte. The second byte contains standardized status information pertaining to the input variable.

Selection: device function, binary input, slot 80

Slot	Sub-slot	Bit	Device function	Status (meaning)
		0	Verification was not performed.	O (device function not active)
			The device has failed the verification.	■ 1 (device function active)
00	1	2	Currently performing verification.	
80	1	3	Verification ended.	
		4	The device has failed the verification.	
		5	Verification carried out successfully.	

Slot	Sub-slot	Bit	Device function	Status (meaning)
		6	Verification was not performed.	
		7	Reserved	

Selection: device function, binary input, slot 81

Slot	Sub-slot	Bit	Device function	Status (meaning)
		0	Reserved	0 (device function not active)
		1	Low flow cut off	1 (device function active)
		2	Reserved	
81	1	3	Reserved	
01	1	4	Reserved	
		5	Reserved	
		6	Reserved	
		7	Reserved	

Data structure

Input data of Binary Input

Byte 1	Byte 2
Binary Input	Status 1)

1) Status coding \rightarrow \bigcirc 69

Volume module

Transmit the volume counter value from the measuring device to the automation system.

The Volume module cyclically transmits the volume, including the status, from the measuring device to the automation system. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Selection: input variable

Slot	Sub-slot	Input variables
3	1	Volume

Data structure

Volume input data

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	Measured value: floating point number (IEEE 754)			

Status coding →
 69

Volume Totalizer Control module

Transmit the volume counter value from the measuring device to the automation system.

The Volume Totalizer Control module cyclically transmits the volume, including the status, from the measuring device to the automation system. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Selection: input variable

Slot	Sub-slot	Input variables
3	1	Volume

Data structure

Volume Totalizer Control input data

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	Measured value: floating point number (IEEE 754)			

1) Status coding $\rightarrow \triangleq 69$

Selection: output variable

Transmit the control value from the automation system to the measuring device.

Slot	Sub-slot	Value	Input variable
	3 1	1	Reset to "0"
2		2	Preset value
)		3	Stop
		4	Totalize

Data structure

Volume Totalizer Control output data

Byte 1	
Control variable	

Totalizer module

Transmit totalizer value from the measuring device to the automation system.

The Totalizer module cyclically transmits a selected totalizer value, including the status, from the measuring device to the automation system. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Selection: input variable

Slot	Sub-slot	Input variable
70 to 71	1	 Mass flow Volume flow Corrected volume flow Total mass flow ¹⁾ Condensate mass flow ¹⁾ Energy flow ¹⁾ Heat flow difference ¹⁾

Only available with application package

Data structure

Totalizer input data

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	Measured value: floating		EEE 754)	Status 1)

Status coding →
 69

Totalizer Control module

Transmit totalizer value from the measuring device to the automation system.

The Totalizer Control module cyclically transmits a selected totalizer value, including the status, from the measuring device to the automation system. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Selection: input variable

Slot	Sub-slot	Input variable
70 to 71	1	 Mass flow Volume flow Corrected volume flow Total mass flow ¹⁾ Condensate mass flow ¹⁾ Energy flow ¹⁾ Heat flow difference ¹⁾

1) Only available with application package

Data structure

Totalizer Control input data

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	Measured value: floating point number		EEE 754)	Status 1)

1) Status coding → 🖺 69

Selection: output variable

Transmit the control value from the automation system to the measuring device.

Slot	Sub-slot	Value	Input variable
70 to 71		1	Reset to "0"
	1	2	Preset value
	1	3	Stop
		4	Totalize

Data structure

Totalizer Control output data

Byte 1
Control variable

Analog Output module

Transmit a compensation value from the automation system to the measuring device.

Analog Output modules cyclically transmit compensation values, including the status and associated unit, from the automation system to the measuring device. The compensation value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the compensation value.

Assigned compensation values



The selection is made via: Expert \rightarrow Sensor \rightarrow External compensation

Slot	Sub-slot	Compensation value
160		Pressure
161	1	Density
162		Temperature

Data structure

Output data of Analog Output

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	Measured value: floating		EE 754)	Status 1)

1) Status coding $\rightarrow \triangleq 69$

Failsafe mode

A failsafe mode can be defined for using the compensation values.

If the status is GOOD or UNCERTAIN, the compensation values transmitted by the automation system are used. If the status is BAD, the failsafe mode is activated for the use of the compensation values.

Parameters are available per compensation value to define the fails afe mode: Expert \rightarrow Sensor \rightarrow External compensation

Fail safe type parameter

- Fail safe value option: The value defined in the Fail safe value parameter is used.
- Fallback value option: The last valid value is used.
- Off option: The failsafe mode is disabled.

Fail safe value parameter

Use this parameter to enter the compensation value which is used if the Fail safe value option is selected in the Fail safe type parameter.

Binary output module

Transmit binary output values from the automation system to the measuring device.

Binary output values are used by the automation system to enable and disable device functions.

Binary output values cyclically transmit discrete output values, including the status, from the automation system to the measuring device. The discrete output values are transmitted in the first byte. The second byte contains standardised status information pertaining to the output value.

Selection: device function, binary output, slot 210

Slot	Sub-slot	Bit	Device function	Status (meaning)
		0	Start the verification.	A change of status from 0 to 1
		1	Reserved	starts the Heartbeat Verification 1)
		2	Reserved	
210	1	3	Reserved	
210	1	4	Reserved	
		5	Reserved	
		6	Reserved	
		7	Reserved	

1) Only available with the Heartbeat application package

Selection: device function, binary output, slot 211

Slot	Sub-slot	Bit	Device function	Status (meaning)
		0	Flow override	O (disable device function)
		1	Reserved	■ 1 (enable device function)
		2	Reserved	
211	1	3	Reserved	
211	1	4	Reserved	
		5	Reserved	
		6	Reserved	
		7	Reserved	

Data structure

Binary Output input data

Byte 1	Byte 2
Binary Output	Status 1) 2)

- 1) Status coding $\rightarrow \triangleq 69$
- 2) If the status is BAD, the control variable is not adopted.

9.3.3 Status coding

Status	Coding (hex)	Meaning	
BAD - Maintenance alarm	0x24 to 0x27	A measured value is not available because a device error has occurred.	
BAD - Process related	0x28 to 0x2B	A measured value is not available because the process conditions are not within the device's technical specification limits.	
BAD - Function check	0x3C to 0x03F	A function check is active (e.g. cleaning or calibration)	
UNCERTAIN - Initial value	0x4F to 0x4F	A predefined value is output until a correct measured value is available again or corrective measures have been performed that change this status.	
UNCERTAIN - Maintenance demanded	0x68 to 0x6B	Signs of wear and tear have been detected on the measuring instrument. Short-term maintenance is needed to ensure that the measuring instrument remains operational. The measured value might be invalid. The use of the measured value depends on the application.	
UNCERTAIN - Process related	0x78 to 0x7B	The process conditions are not within the device's technical specification limits. This could have a negative impact on the quality and accuracy of the measured value. The use of the measured value depends on the application.	
GOOD - OK	0x80 to 0x83	No error has been diagnosed.	
GOOD - Maintenance required	0xA4 to 0xA7	The measured value is valid. Maintenance of the device due in the near future.	
GOOD - Maintenance demanded	0xA8 to 0xAB	The measured value is valid. It is highly advisable to service the device in the near future.	
GOOD - Function check	0xBC to 0XBF	The measured value is valid. The measuring instrument is performing an internal function check. The function check does not have any noticeable effect on the process.	

9.3.4 Factory setting


The slots are already assigned in the automation system for initial commissioning.

Assigned slots

Slot	Factory setting
1	Volume flow
2	Vortex frequency
3	Volume
20 to 21	-
70 to 71	-
80 to 81	-
160 to 162	_
210 to 211	-

9.4 System redundancy S2

A redundant layout with two automation systems is necessary for processes that are in continuous operation. If one system fails the second system guarantees continued, uninterrupted operation. The measuring device supports S2 system redundancy and can communicate with both automation systems simultaneously.

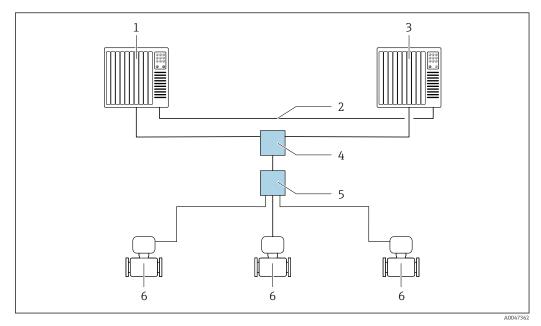

■ 17 Example of the layout of a redundant system (S2): star topology

- 1 Automation system 1
- 2 Synchronization of automation systems
- 3 Automation system 2
- 4 Industrial Ethernet Managed Switch
- 5 APL field switch
- 6 Measuring device

All the devices in the network must support S2 system redundancy.

10 Commissioning

10.1 Post-mounting and post-connection check

Before commissioning the device:


- ▶ Make sure that the post-installation and post-connection checks have been performed successfully.
- Checklist for "Post-installation" check → 🗎 28
- Checklist for "Post-connection" check → 🗎 40

10.2 Switching on the measuring device

- ▶ Switch on the device upon successful completion of the post-mounting and postconnection check.
 - ► After a successful startup, the local display switches automatically from the startup display to the operational display.
- If nothing appears on the local display or if a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting" $\rightarrow \square$ 127.

10.3 Setting the operating language

Factory setting: English or ordered local language

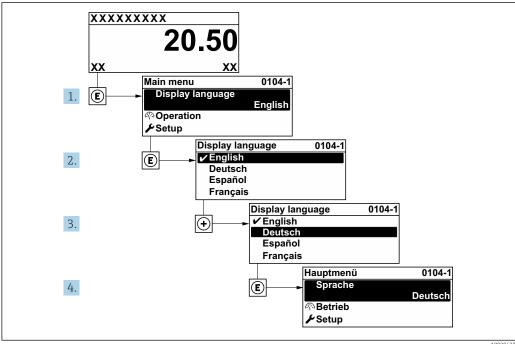


■ 18 Taking the example of the local display

10.4 Configuring the device

The **Setup** menu with its quided wizards contains all the parameters needed for standard operation.

Endress+Hauser 71


A0029420

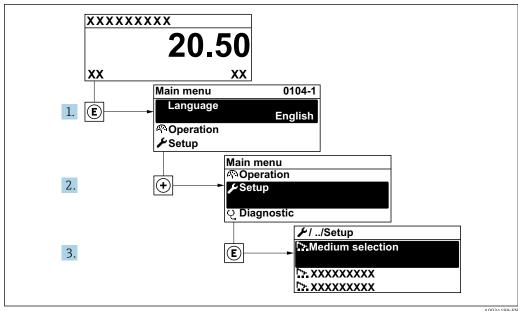

Navigation to the "Setup" menuusing the example of the local display

Navigation

"Setup" menu

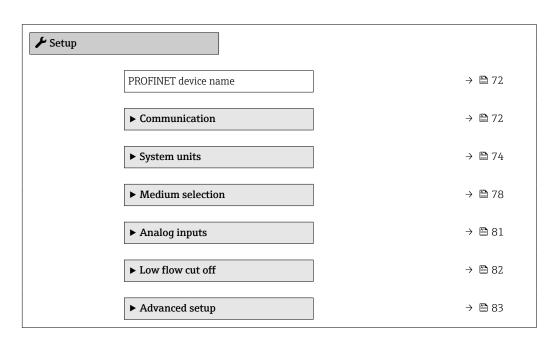

Parameter overview with brief description


Parameter	Description	User interface	Factory setting
PROFINET device name	Name of the measuring point.	Max. 32 characters such as letters and numbers.	

Displaying the communication interface 10.4.1

The Communication submenu shows all the current parameter settings for selecting and configuring the communication interface.

Navigation


"Setup" menu → Communication

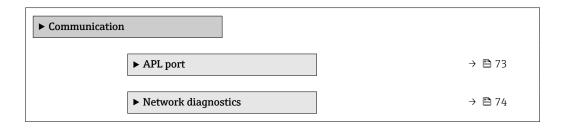

"APL port" submenu

Navigation

"Setup" menu \rightarrow Communication \rightarrow APL port

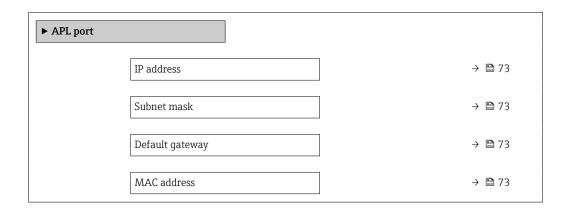


Parameter overview with brief description

Parameter	Description	User entry / User interface	Factory setting
IP address	Enter the IP address of the measuring device.	4 octet: 0 to 255 (in the particular octet)	0.0.0.0
Subnet mask	Displays the subnet mask.	4 octet: 0 to 255 (in the particular octet)	255.255.255.0
Default gateway	Displays the default gateway.	4 octet: 0 to 255 (in the particular octet)	0.0.0.0
MAC address	Displays the MAC address of the measuring device. MAC = Media Access Control	Unique 12-digit character string comprising letters and numbers, e.g.: 00:07:05:10:01:5F	Each measuring device is given an individual address.

"Network diagnostics" submenu

Navigation

"Setup" menu \rightarrow Communication \rightarrow Network diagnostics

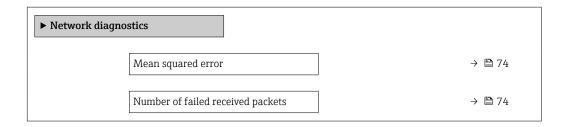

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Mean squared error	Provides an indication of the link signal quality.	Signed floating-point number	0 dB
Number of failed received packets	Shows the number of failed received packets.	0 to 65 535	0


10.4.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

The number of submenus and parameters can vary depending on the device version. Certain submenus and parameters in these submenus are not described in the Operating Instructions. Instead a description is provided in the Special Documentation for the device ("Supplementary documentation").

Navigation

"Setup" menu \rightarrow System units

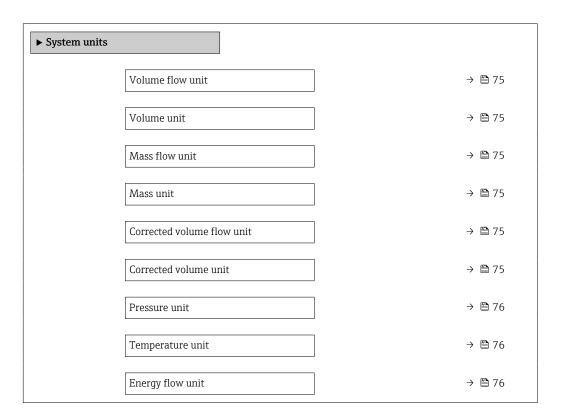

Energy unit	→ 🖺 76
Calorific value unit	→ 🖺 76
Calorific value unit	→ 🖺 76
Velocity unit	→ 🖺 77
Density unit	→ 🖺 77
Specific volume unit	→ 🖺 77
Dynamic viscosity unit	→ 🗎 77
Length unit	→ 🖺 77

Parameter	Prerequisite	Description	Selection	Factory setting
Volume flow unit	-	Select volume flow unit. Effect The selected unit applies to: Output Low flow cut off Simulation process variable	Unit choose list	Country-specific: m³/h ft³/min
Volume unit	-	Select volume unit.	Unit choose list	Country-specific: m³ ft³
Mass flow unit	-	Select mass flow unit. Effect The selected unit applies to: Output Low flow cut off Simulation process variable	Unit choose list	Country-specific: kg/h lb/min
Mass unit	-	Select mass unit.	Unit choose list	Country-specific: kg lb
Corrected volume flow unit	_	Select corrected volume flow unit. Effect The selected unit applies to: Corrected volume flow parameter	Unit choose list	Country-specific: Nm³/h Sft³/h
Corrected volume unit	-	Select corrected volume unit.	Unit choose list	Country-specific: Nm³ Sft³

Parameter	Prerequisite	Description	Selection	Factory setting
Pressure unit	With order code for "Sensor version": "Mass (integrated temperature measurement)" option	Select process pressure unit. Effect The unit is taken from: Calculated saturated steam pressure Atmospheric pressure Maximum value Fixed process pressure Pressure Reference pressure	Unit choose list	Country-specific: • bar • psi
Temperature unit	-	Select temperature unit. Effect The selected unit applies to: Temperature Maximum value Minimum value Maximum value Maximum value Minimum value Minimum value Minimum value Minimum value Reference combustion temperature Reference temperature Reference temperature Saturation temperature	Unit choose list	Country-specific: ■ °C ■ °F
Energy flow unit	With order code for "Sensor version": "Mass (integrated temperature measurement)" option	Select energy flow unit. Result The selected unit applies to: Heat flow difference parameter Energy flow parameter	Unit choose list	Depends on country: • kW • Btu/h
Energy unit	With order code for "Sensor version": "Mass (integrated temperature measurement)" option	Select energy unit.	Unit choose list	Depends on country: • kWh • Btu
Calorific value unit	The following conditions are met: Order code for "Sensor version", "Mass (integrated temperature measurement)" option The Gross calorific value volume option or Net calorific value volume option is selected in the Calorific value type parameter.	Select calorific value unit. Result The selected unit applies to: Reference gross calorific value	Unit choose list	Depends on country: • kJ/Nm³ • Btu/Sft³
Calorific value unit (Mass)	The following conditions are met: Order code for "Sensor version", "Mass (integrated temperature measurement)" option The Gross calorific value mass option or Net calorific value mass option is selected in the Calorific value type parameter.	Select calorific value unit.	Unit choose list	Depends on country: kJ/kg Btu/lb

Parameter	Prerequisite	Description	Selection	Factory setting
Velocity unit	-	Select velocity unit. Result The selected unit applies to: Flow velocity Maximum value	Unit choose list	Depends on country: m/s ft/s
Density unit	-	Select density unit. Effect The selected unit applies to: Output Simulation process variable	Unit choose list	Country-specific: • kg/m³ • lb/ft³
Specific volume unit	With order code for "Sensor version": "Mass (integrated temperature measurement)" option	Select the unit for the specific volume. Result The selected unit applies to: Specific volume	Unit choose list	Depends on country: m³/kg ft³/lb
Dynamic viscosity unit	-	Select dynamic viscosity unit. Result The selected unit applies to: Dynamic viscosity parameter (gases) Dynamic viscosity parameter (liquids)	Unit choose list	Pa s
Length unit	-	Select length unit for nominal diameter.	• m • mm • ft • in	mm

10.4.3 Selecting and setting the medium

The $Medium\ selection$ wizard systematically guides the user through all the parameters that must be configured in order to select and set the medium.

Navigation

"Setup" menu \rightarrow Medium selection

► Medium s	selection	
	Select medium	→ 🖺 78
	Select gas type	→ 🗎 78
	Gas type	→ 🗎 79
	Relative humidity	→ 🖺 79
	Liquid type	→ 🖺 79
	Steam calculation mode	→ 🖺 79
	Steam quality	→ 🖺 80
	Steam quality value	→ 🖺 80
	Enthalpy calculation	→ 🖺 80
	Density calculation	→ 🖺 80
	Enthalpy type	→ 🖺 80

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Select medium	-	Select medium type.	Steam	Steam
Select gas type	The following conditions are met: Order code for "Sensor version", Option "Mass (integrated temperature measurement)" The Gas option is selected in the Select medium parameter parameter.	Select measured gas type.	 Single gas * Gas mixture * Air * Natural gas * User-specific gas 	User-specific gas

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Gas type	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Single gas option is selected.	Select measured gas type.	 Hydrogen H2 Helium He Neon Ne Argon Ar Krypton Kr Xenon Xe Nitrogen N2 Oxygen O2 Chlorine Cl2 Ammonia NH3 Carbon monoxide CO Carbon dioxide CO2 Sulfur dioxide SO2 Hydrogen sulfide H2S Hydrogen chloride HCI Methane CH4 Ethane C2H6 Propane C3H8 Butane C4H10 Ethylene C2H4 Vinyl chloride C2H3Cl 	Methane CH4
Relative humidity	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Air option is selected.	Enter humidity content of air in %.	0 to 100 %	0 %
Liquid type	The following conditions are met: Order code for "Sensor version", Option "Mass (integrated temperature measurement)" The Liquid option is selected in the Select medium parameter parameter.	Select measured liquid type.	 Water LPG (Liquefied Petroleum Gas) User-specific liquid 	Water
Steam calculation mode	The Steam option is selected in the Select medium parameter parameter.	Select calculation mode of steam: based on saturated steam (T-compensated) or automatic detection (p-/T-compensated).	Saturated steam (T-compensated) Automatic (p-/T-compensated)	Saturated steam (T-compensated)

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Steam quality	The following conditions are met: Order code for "Application package": Option ES "Wet steam detection" Option EU "Wet steam measurement" The Steam option is selected in the Select medium parameter parameter. The software options currently enabled are displayed in the Software option overview parameter.	Select compensation mode for steam quality. For detailed information on setting the parameter in steam applications, see the Special Documentation for the Wet Steam Detection and Wet Steam Measurement application package → ■ 207	 Fixed value Calculated value 	Fixed value
Steam quality value	The following conditions are met: The Steam option is selected in the Select medium parameter parameter. The Fixed value option is selected in the Steam quality parameter parameter.	Enter fixed value for steam quality. For detailed information on setting the parameter in steam applications, see the Special Documentation for the Wet Steam Detection and Wet Steam Measurement application package → 207	0 to 100 %	100 %
Enthalpy calculation	The following conditions are met: Order code for "Sensor version", Option "Mass (integrated temperature measurement)" In the Select medium parameter, the Gas option is selected and in the Select gas type parameter, the Natural gas option is selected.	Select the norm the enthalpy calculation is based on.	■ AGA5 ■ ISO 6976	AGA5
Density calculation	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Natural gas option is selected.	Select the norm the density calculation is based on.	 AGA Nx19 ISO 12213-2 ISO 12213-3 	AGA Nx19
Enthalpy type	The following conditions are met: In the Select gas type parameter, the User-specific gas option is selected. Or In the Liquid type parameter, the User-specific liquid option is selected.	Define which kind of enthalpy is used.	HeatCalorific value	Heat

^{*} Visibility depends on order options or device settings

10.4.4 Configuration of the Analog Inputs

The **Analog inputs** submenu guides the user systematically to the individual **Analog input 1 to n** submenu. From here you get to the parameters of the individual analog input.

Navigation


"Setup" menu \rightarrow Analog inputs



"Analog inputs" submenu

Navigation

"Setup" menu → Analog inputs → Volume flow

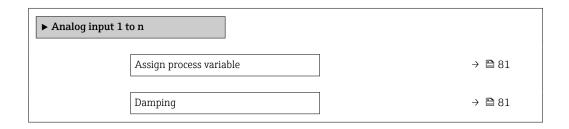

Parameter overview with brief description

Parameter	Description	User interface / User entry	Factory setting
Parent class		0 to 255	60
Assign process variable	Select a process variable.	Mass flow Volume flow Density Temperature Pressure Specific volume Degrees of superheat Electronics temperature Vortex frequency Vortex kurtosis Vortex amplitude Calculated saturated steam pressure Steam quality Total mass flow Condensate mass flow Energy flow Heat flow difference Reynolds number Flow velocity Corrected volume flow	Volume flow
Damping	Enter time constant for input damping (PT1 element). Damping reduces the effect of fluctuations in the measured value on the output signal.	Positive floating-point number	1.0 s

10.4.5 Configuring the low flow cut off

The **Low flow cut off** wizard systematically guides the user through all the parameters that must be set to configure low flow cut off.

The measuring signal must have a certain minimum signal amplitude so that the signals can be evaluated without any errors. Using the nominal diameter, the corresponding flow can also be derived from this amplitude.


The minimum signal amplitude depends on the setting for the sensitivity of the DSC sensor, the steam quality \mathbf{x} and the force of the vibrations present \mathbf{a} .

The value mf corresponds to the lowest measurable flow velocity without vibration (no wet steam) for a density of 1 kg/m³ (0.0624 lbm/ft³).

The value **mf** can be set in the range of 20 to 6 m/s (6 to 1.8 ft/s) (factory setting 12 m/s (3.7 ft/s)) with the **Sensitivity** parameter (value range 1 to 9, factory setting 5).

Navigation

"Setup" menu \rightarrow Low flow cut off

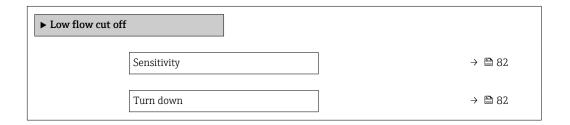


Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Sensitivity	Adjust sensitivity of the device in the lower flow range. Lower sensitivity leads to more robustness against external interference.	1 to 9	5
	The parameter determines the level of sensitivity at the lower end of the measuring range (start of measuring range). Low values can improve the robustness of the device with regard to external influences. The start of measuring range is then set to a higher value. The smallest specified measuring range is when sensitivity is at a maximum.		
Turn down	Adjust the turn down. Lower turn down increases the minimum measureable flow frequency.	50 to 100 %	100 %
	The measuring range can be limited with this parameter, if necessary. The upper end of the measuring range is not affected. The start of the low end of the measuring range can be changed to a higher flow value, making it possible to cut off low flows, for example.		

10.4.6 Advanced settings

The **Advanced setup** submenu with its submenus contains parameters for specific settings.

Navigation to the "Advanced setup" submenu

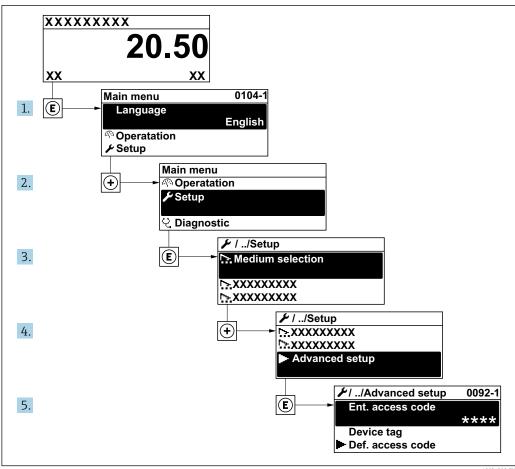



A0034208-EN

The number of submenus and parameters can vary depending on the device version. Certain submenus and parameters in these submenus are not described in the Operating Instructions. Instead a description is provided in the Special Documentation for the device ("Supplementary documentation").

Navigation

"Setup" menu → Advanced setup

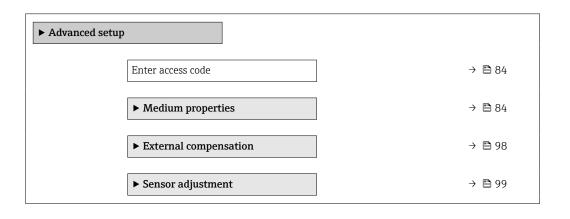

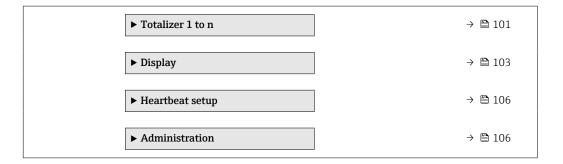

Parameter	Description	User entry
Enter access code	Enter access code to disable write protection of parameters.	Max. 16-digit character string comprising numbers, letters and special characters

Setting the medium properties

In the **Medium properties** submenu the reference values for the measuring application can be set.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Medium properties

► Medium prop	erties	
	Enthalpy type	→ 🖺 85
	Calorific value type	→ 🖺 85
	Reference combustion temperature	→ 🖺 85
	Reference density	→ 🗎 85
	Reference gross calorific value	→ 🖺 85
	Reference pressure	→ 🖺 86
	Reference temperature	→ 🖺 86
	Reference Z-factor	→ 🖺 86
	Linear expansion coefficient	→ 🖺 86
	Relative density	→ 🖺 86
	Specific heat capacity	→ 🖺 86
	Calorific value	→ 🖺 87
	Z-factor	→ 🖺 87

Dynamic viscosity	→ 🖺 87
Dynamic viscosity	→ 🖺 87
► Gas composition	→ 🖺 87

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Enthalpy type	The following conditions are met: In the Select gas type parameter, the User-specific gas option is selected. Or In the Liquid type parameter, the User-specific liquid option is selected.	Define which kind of enthalpy is used.	HeatCalorific value	Heat
Calorific value type	The Calorific value type parameter is visible.	Select calculation based on gross calorific value or net calorific value.	Gross calorific value volume Net calorific value volume Gross calorific value mass Net calorific value mass	Gross calorific value mass
Reference combustion temperature	The Reference combustion temperature parameter is visible.	Enter reference combustion temperature to calculate the natural gas energy value. Dependency The unit is taken from the Temperature unit parameter	−200 to 450 °C	20°C
Reference density	The following conditions are met: In the Select gas type parameter, the User-specific gas option is selected. Or In the Liquid type parameter, the Water option or User-specific liquid option is selected.	Enter fixed value for reference density. Dependency The unit is taken from the Density unit parameter	0.01 to 15 000 kg/m ³	1000 kg/m³
Reference gross calorific value	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Natural gas option is selected. In the Density calculation parameter, the ISO 12213-3 option is selected.	Enter reference gross calorific value of the natural gas. Dependency The unit is taken from the Calorific value unit parameter	Positive floating- point number	50 000 kJ/Nm³

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Reference pressure	The following conditions are met: Order code for "Sensor version", Option "Mass (integrated temperature measurement)" The Gas option is selected in the Select medium parameter parameter.	Enter reference pressure for the calulation of the reference density. Dependency The unit is taken from the Pressure unit parameter.	0 to 250 bar	1.01325 bar
Reference temperature	The following conditions are met: In the Select medium parameter, the Gas option is selected. Or In the Select medium parameter, the Liquid option is selected.	Enter reference temperature for calculating the reference density. Dependency The unit is taken from: Temperature unit parameter	−200 to 450 °C	0°C
Reference Z-factor	In the Select gas type parameter, the User-specific gas option is selected.	Enter real gas constant Z for gas under reference conditions.	0.1 to 2	1
Linear expansion coefficient	The following conditions are met: The Liquid option is selected in the Select medium parameter. The User-specific liquid option is selected in the Liquid type parameter.	Enter linear, medium-specific expansion coefficient for calculating the reference density.	1.0 · 10 ⁻⁶ to 2.0 · 10 ⁻³	2.06 · 10-4
Relative density	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Natural gas option is selected. In the Density calculation parameter, the ISO 12213-3 option is selected.	Enter a relative density of the natural gas.	0.55 to 0.9	0.664
Specific heat capacity	The following conditions are met: Selected medium: In the Select gas type parameter, the Userspecific gas option is selected. Or In the Liquid type parameter, the Userspecific liquid option is selected. In the Enthalpy type parameter, the Heat option is selected.	Enter the specific heat capacity of the medium. Dependency The unit is taken from the Specific heat capacity unit parameter	0 to 50 kJ/(kgK)	4.187 kJ/(kgK)

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Calorific value	The following conditions are met: Selected medium: In the Select gas type parameter, the Userspecific gas option is selected. Or In the Liquid type parameter, the Userspecific liquid option is selected. In the Enthalpy type parameter, the Calorific value option is selected. In the Calorific value type parameter, the Gross calorific value volume option or Gross calorific value mass option is selected.	Enter gross calorific value to calculate the energy flow.	Positive floating- point number	50 000 kJ/kg
Z-factor	In the Select gas type parameter, the User-specific gas option is selected.	Enter real gas constant Z for gas under operation conditions.	0.1 to 2.0	1
Dynamic viscosity (Gases)	The following conditions are met: Order code for "Sensor version", Option "Volume" or Option "Volume high temperature" The Gas option or the Steam option is selected in the Select medium parameter. or The User-specific gas option is selected in the Select gas type parameter.	Enter fixed value for dynamic viscosity for a gas/steam. Dependency The unit is taken from the Dynamic viscosity unit parameter.	Positive floating- point number	0.015 с₽
Dynamic viscosity (Liquids)	The following conditions are met: Order code for "Sensor version", Option "Volume" or Option "Volume high temperature" The Liquid option is selected in the Select medium parameter parameter. or The User-specific liquid option is selected in the Liquid type parameter.	Enter fixed value for dynamic viscosity for a liquid. Dependency The unit is taken from the Dynamic viscosity unit parameter.	Positive floating- point number	1 cP

$Configuring\ the\ gas\ composition$

In the ${\bf Gas\ composition}$ submenu the gas composition for the measuring application can be set.

 $\begin{tabular}{ll} \textbf{Navigation} \\ \begin{tabular}{ll} \textbf{"Setup" menu} \to \textbf{Advanced setup} \to \textbf{Medium properties} \to \textbf{Gas composition} \\ \end{tabular}$

► Gas compositi	on	
	Gas mixture	→ 🖺 90
	Mol% Ar	→ 🖺 91
	Mol% C2H3Cl	→ 🖺 91
	Mol% C2H4	→ 🖺 91
	Mo1% C2H6	→ 🖺 91
	Mol% C3H8	→ 🖺 92
	Mol% CH4	→ 🖺 92
	Mol% Cl2	→ 🖺 92
	Mol% CO	→ 🖺 92
	Mol% CO2	→ 🖺 93
	Mol% H2	→ 🖺 93
	Mol% H2O	→ 🖺 93
	Mol% H2S	→ 🖺 93
	Mol% HCl	→ 🖺 94
	Mol% He	→ 🖺 94
	Mol% i-C4H10	→ 🖺 94
	Mol% i-C5H12	→ 🖺 94
	Mol% Kr	→ 🖺 94
	Mol% N2	→ 🖺 95
	Mol% n-C10H22	→ 🖺 95
	Mol% n-C4H10	→ 🖺 95
	Mol% n-C5H12	→ 🖺 95

Mol% n-C6H14	=	→ 🖺 96
Mol% n-C7H16	-	→ 🖺 96
Mol% n-C8H18	-	→ 🗎 96
Mol% n-C9H20	·	→ 🖺 96
Mol% Ne	- -	→ 🖺 96
Mol% NH3	=	→ 🖺 97
Mol% O2	=	→ 🖺 97
Mol% SO2	=	→ 🖺 97
Mol% Xe	=	→ 🖺 97
Mol% other gas	=	→ 🗎 98

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Gas type	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Single gas option is selected.	Select measured gas type.	 Hydrogen H2 Helium He Neon Ne Argon Ar Krypton Kr Xenon Xe Nitrogen N2 Oxygen O2 Chlorine Cl2 Ammonia NH3 Carbon monoxide CO Carbon dioxide CO2 Sulfur dioxide SO2 Hydrogen sulfide H2S Hydrogen chloride HCI Methane CH4 Ethane C2H6 Propane C3H8 Butane C4H10 Ethylene C2H4 Vinyl chloride C2H3Cl 	Methane CH4
Gas mixture	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected.	Select measured gas mixture.	■ Air ■ Hydrogen H2 ■ Helium He ■ Neon Ne ■ Argon Ar ■ Krypton Kr ■ Xenon Xe ■ Nitrogen N2 ■ Oxygen O2 ■ Chlorine Cl2 ■ Ammonia NH3 ■ Carbon monoxide CO ■ Carbon dioxide CO2 ■ Sulfur dioxide SO2 ■ Hydrogen sulfide H2S ■ Hydrogen chloride HCl ■ Methane CH4 ■ Propane C3H8 ■ Ethane C2H6 ■ Butane C4H10 ■ Ethylene C2H4 ■ Vinyl chloride C2H3Cl ■ Water ■ Other	Methane CH4

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Mol% Ar	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Argon Ar option is selected. Or In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the ISO 12213-2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% C2H3Cl	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected. In the Gas mixture parameter, the Vinyl chloride C2H3Cl option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% C2H4	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected. In the Gas mixture parameter, the Ethylene C2H4 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% C2H6	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Ethane C2H6 option is selected. Or In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the ISO 12213-2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Mol% C3H8	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Propane C3H8 option is selected. Or In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the ISO 12213-2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% CH4	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Methane CH4 option is selected. Or In the Select gas type parameter, the Natural gas option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	100 %
Mol% Cl2	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected. In the Gas mixture parameter, the Chlorine C12 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% CO	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Carbon monoxide CO option is selected. Or In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the ISO 12213-2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Mol% CO2	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Carbon dioxide CO2 option is selected. Or In the Select gas type parameter, the Natural gas option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% H2	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Hydrogen H2 option is selected. Or In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the AGA Nx19 option is not selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% H2O	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Natural gas option is selected. In the Density calculation parameter, the ISO 12213-2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% H2S	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Hydrogen sulfide H2S option is selected. Or In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the ISO 12213-2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Mol% HCl	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected. In the Gas mixture parameter, the Hydrogen chloride HCl option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% He	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Helium He option is selected. Or In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the ISO 12213-2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% i-C4H10	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Natural gas option is selected. In the Density calculation parameter, the ISO 12213-2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% i-C5H12	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Natural gas option is selected. In the Density calculation parameter, the ISO 12213-2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% Kr	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected. In the Gas mixture parameter, the Krypton Kr option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Mol% N2	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Nitrogen N2 option is selected. Or In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the AGA Nx19 option or the ISO 12213- 2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% n-C10H22	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Natural gas option is selected. In the Density calculation parameter, the ISO 12213-2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% n-C4H10	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Butane C4H10 option is selected. Or In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the ISO 12213- 2 option is selected. Or In the Select medium parameter, the Liquid option is selected and in the Liquid type parameter, the Liquid type parameter, the Liquid type parameter, the LPG option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% n-C5H12	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Natural gas option is selected. In the Density calculation parameter, the ISO 12213-2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Mol% n-C6H14	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Natural gas option is selected. In the Density calculation parameter, the ISO 12213-2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% n-C7H16	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Natural gas option is selected. In the Density calculation parameter, the ISO 12213-2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	O %
Mol% n-C8H18	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Natural gas option is selected. In the Density calculation parameter, the ISO 12213-2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% n-C9H2O	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Natural gas option is selected. In the Density calculation parameter, the ISO 12213-2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% Ne	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected. In the Gas mixture parameter, the Neon Ne option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Mol% NH3	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected. In the Gas mixture parameter, the Ammonia NH3 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% O2	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Oxygen O2 option is selected. Or In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the ISO 12213-2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% SO2	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected. In the Gas mixture parameter, the Sulfur dioxide SO2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% Xe	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected. In the Gas mixture parameter, the Xenon Xe option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Mol% other gas	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Gas mixture option is selected. In the Gas mixture parameter, the Other option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Relative humidity	The following conditions are met: In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Air option is selected.	Enter humidity content of air in %.	0 to 100 %	0 %

Performing external compensation

The **External compensation** submenu contains parameters which can be used to enter external or fixed values. These values are used for internal calculations.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow External compensation

► External compensation	
External value	→ 🖺 99
Atmospheric pressure	→ 🖺 99
Delta heat calculation	→ 🖺 99
Fixed density	→ 🖺 99
Fixed density	→ 🖺 99
Fixed temperature	→ 🖺 99
2nd temperature delta heat	→ 🖺 99
Fixed process pressure	→ 🖺 99

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
External value	With order code for "Sensor version": "Mass (integrated temperature measurement)" option	Assign variable from external device to process variable. For detailed information on the calculation of the measured variables with steam:	OffPressureGauge pressureDensity2nd temperature delta heat	Off
Atmospheric pressure	In the External value parameter, the Gauge pressure option is selected.	Enter atmospheric pressure value to be used for pressure correction. Dependency The unit is taken from the Pressure unit parameter	0 to 250 bar	1.01325 bar
Delta heat calculation	The Delta heat calculation parameter is visible.	Calculates the transferred heat of a heat exchanger (= delta heat).	OffDevice on cold sideDevice on warm side	Device on warm side
Fixed density	With order code for "Sensor version": Option "Volume" or Option "Volume high temperature"	Enter fixed value for medium density. Dependency The unit is taken from the Density unit parameter.	0.01 to 15 000 kg/m ³	1000 kg/m ³
Fixed density	With order code for "Sensor version": Option "Volume" or Option "Volume high temperature"	Enter fixed value for medium density. Dependency The unit is taken from the Density unit parameter.	0.01 to 15 000 kg/m ³	5 kg/m³
Fixed temperature	-	Enter a fixed value for process temperature. Dependency The unit is taken from the Temperature unit parameter	−200 to 450 °C	20 °C
2nd temperature delta heat	The 2nd temperature delta heat parameter is visible.	Enter 2nd temperature value to calculate the delta heat. Dependency The unit is taken from the Temperature unit parameter	-200 to 450 °C	20°C
Fixed process pressure	The following conditions are met: Order code for "Sensor version", Option "Mass flow (integrated temperature measurement)" In the External value parameter (→ 🖺 99) the Pressure option is not selected.	Enter fixed value for process pressure. Dependency The unit is taken from the Pressure unit parameter. For detailed information on the calculation of the measured variables with steam:	0 to 250 bar abs.	0 bar abs.

Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

 $\begin{tabular}{ll} \textbf{Navigation} \\ \begin{tabular}{ll} \textbf{"Setup" menu} & \rightarrow \textbf{Advanced setup} & \rightarrow \textbf{Sensor adjustment} \\ \end{tabular}$

► Sensor adjustment	
Inlet configuration	→ 🖺 100
Inlet run	→ 🖺 100
Mating pipe diameter	→ 🖺 100
Installation factor	→ 🖺 100

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Inlet configuration	The inlet run correction feature: Is a standard feature and can only be used in the Prowirl F 200. Can be used for the following pressure ratings and nominal diameters: DN 15 to 150 (NPS 1 to 6) EN (DIN) ASME B16.5, Sch. 40/80 JIS B2220	Select inlet configuration.	 Off Single elbow Double elbow Double elbow 3D Reduction 	Off
Inlet run	The inlet run correction feature: Is a standard feature and can only be used in the Prowirl F 200. Can be used for the following pressure ratings and nominal diameters: DN 15 to 150 (NPS 1 to 6) EN (DIN) ASME B16.5, Sch. 40/80 JIS B2220	Enter length of the available straight inlet run. Dependency The unit is taken from: Length unit parameter	0 to 20 m	0 m
Mating pipe diameter	-	Enter diameter of mating pipe to enable diameter mismatch correction. Detailed information on diameter mismatch correction: → 🖺 101 Dependency The unit is taken from the Length unit parameter.	0 to 1 m (0 to 3 ft) Input value = 0: Diameter mismatch correction is disabled.	Country-specific: • 0 m • 0 ft
Installation factor	-	Enter factor to compensate the mounting-related measurement error.	Positive floating- point number	1.0

Diameter mismatch correction



The measuring device is calibrated according to the ordered process connection. This calibration takes account of the edge at the transition from the mating pipe to the process connection. If the mating pipe used deviates from the ordered process connection, a diameter mismatch correction can compensate for the effects. The difference between the internal diameter of the ordered process connection and the internal diameter of the mating pipe used must be taken into consideration.

The measuring device can correct shifts in the calibration factor which are caused, for example, by a diameter mismatch between the device flange (e.g. ASME B16.5/Sch. 80, DN 50 (2")) and the mating pipe (e.g. ASME B16.5/Sch. 40, DN 50 (2")). Only apply diameter mismatch correction within the following limit values (listed below) for which test measurements have also been performed.

Disc (wafer flange):

- DN 15 ($\frac{1}{2}$ "): ±15 % of the internal diameter
- DN 25 (1"): ±12 % of the internal diameter
- DN 40 (1½"): ± 9 % of the internal diameter
- DN \geq 50 (2"): \pm 8 % of the internal diameter

If the standard internal diameter of the ordered process connection differs from the internal diameter of the mating pipe, an additional measuring uncertainty of approx. 2 % o.r. must be expected.

Example

Influence of the diameter mismatch without using the correction function:


- Mating pipe DN 100 (4"), Schedule 80
- Device flange DN 100 (4"), Schedule 40
- This installation position results in a diameter mismatch of 5 mm (0.2 in). If the correction function is not used, an additional measuring uncertainty of approx. 2 % o.r. must be expected.
- If the basic conditions are met and the feature is enabled, the additional measuring uncertainty is 1 % o.r.

Configuring the totalizer

In the "Totalizer 1 to n" submenu, you can configure the specific totalizer.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Totalizer 1 to n

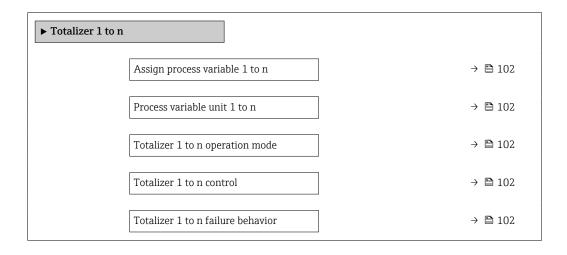

Parameter	Description	Selection	Factory setting
Assign process variable 1 to n	Select process variable for totalizer.	 Mass flow Volume flow Corrected volume flow Total mass flow* Condensate mass flow* Energy flow* Heat flow difference* 	Volume flow
Process variable unit 1 to n	Select the unit for the process variable of the totalizer.	Unit choose list	m³
Totalizer 1 to n operation mode	Select totalizer operation mode, e.g. only totalize forward flow or only totalize reverse flow.	NetForwardReverse	Forward
Totalizer 1 to n control	Operate the totalizer.	 Reset + hold Preset + hold Hold Totalize 	Totalize
Totalizer 1 to n failure behavior	Select totalizer behavior in the event of a device alarm.	HoldContinueLast valid value + continue	Continue

 $^{^{\}star}$ Visibility depends on order options or device settings

102

Carrying out additional display configurations

In the ${f Display}$ submenu you can set all the parameters associated with the configuration of the local display.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Display

► Display		
	Format display	→ 🖺 104
	Value 1 display	→ 🖺 104
	0% bargraph value 1	→ 🖺 104
	100% bargraph value 1	→ 🗎 104
	Decimal places 1	→ 🖺 104
	Value 2 display	→ 🖺 104
	Decimal places 2	→ 🖺 104
	Value 3 display	→ 🖺 104
	0% bargraph value 3	→ 🖺 105
	100% bargraph value 3	→ 🖺 105
	Decimal places 3	→ 🖺 105
	Value 4 display	→ 🖺 105
	Decimal places 4	→ 🖺 105
	Display language	→ 🖺 105
	Display interval	→ 🖺 105
	Display damping	→ 🗎 105
	Header	→ 🗎 105
	Header text	→ 🖺 105
	Separator	→ 🖺 105
	Backlight	→ 🖺 105

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	 1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values 	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Flow velocity ■ Temperature ■ Vortex frequency ■ Vortex kurtosis ■ Vortex amplitude ■ Calculated saturated steam pressure ■ Total mass flow ■ Condensate mass flow ■ Energy flow ■ Heat flow difference ■ Reynolds number ■ Density ■ Pressure ■ Specific volume ■ Degrees of superheat ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: Om³/h Oft³/h
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the Value 1 display parameter.	Select the number of decimal places for the display value.	• X • X.X • X.XX • X.XXX	x.xx
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→ 🖺 104)	None
Decimal places 2	A measured value is specified in the Value 2 display parameter.	Select the number of decimal places for the display value.	• x • x.x • x.xx • x.xxx • x.xxx	x.xx
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→ 🖺 104)	None

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: 0 m³/h 0 ft³/h
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 3	A measured value is specified in the Value 3 display parameter.	Select the number of decimal places for the display value.	• X • X.X • X.XX • X.XXX	x.xx
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→ 104)	None
Decimal places 4	A measured value is specified in the Value 4 display parameter.	Select the number of decimal places for the display value.	• X • X.X • X.XX • X.XXX	x.xx
Display language	A local display is provided.	Set display language.	 English Deutsch Français Español Italiano Nederlands* Portuguesa Polski pусский язык (Russian) Svenska* Türkçe 中文 (Chinese) 日本語 (Japanese)* 한국어 (Korean)* tiếng Việt (Vietnamese)* čeština (Czech)* 	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	5.0 s
Header	A local display is provided.	Select header contents on local display.	Device tagFree text	Device tag
Header text	The Free text option is selected in the Header parameter.	Enter display header text.	Max. 12 characters, such as letters, numbers or special characters (e.g. @, %, /)	
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	• . (point) • , (comma)	. (point)
Backlight	Order code for "Display; operation", option E "SD03 4- line, illum.; touch control + data backup function"	Switch the local display backlight on and off.	DisableEnable	Disable

 $^{^{\}star}$ Visibility depends on order options or device settings

Performing Heartbeat basic setup

Heartbeat setup submenu guides the user systematically through all the parameters that can be used for the Heartbeat basic setup.



The wizard only appears if the device has the Heartbeat Verification +Monitoring application package.

Navigation


"Setup" menu → Advanced setup → Heartbeat setup



"Heartbeat base settings" submenu

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Heartbeat setup \rightarrow Heartbeat base settings

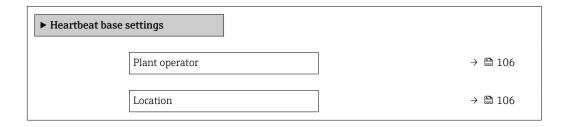

Parameter overview with brief description


Parameter	Description	User entry
Plant operator	1 1	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)
Location		Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)

Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration

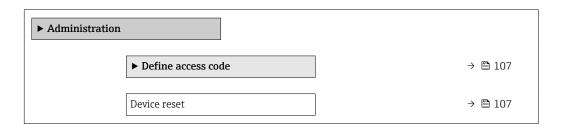


Parameter	Description	Selection	Factory setting
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	CancelTo delivery settingsRestart device	Cancel

"Define access code" wizard

Complete this wizard to specify an access code for the Maintenance role.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration \rightarrow Define access code \rightarrow Define access code

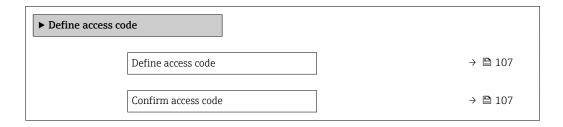

Parameter overview with brief description


Parameter	Description	User entry
Define access code	Restrict write-access to parameters to protect the configuration of the device against unintentional changes.	Max. 16-digit character string comprising numbers, letters and special characters
Confirm access code	Confirm the entered access code.	Max. 16-digit character string comprising numbers, letters and special characters

10.5 Simulation

Via the **Simulation** submenu, it is possible to simulate various process variables in the process and the device alarm mode and verify downstream signal chains (switching valves or closed-control loops). The simulation can be performed without a real measurement (no flow of medium through the device).

Navigation

"Diagnostics" menu \rightarrow Simulation

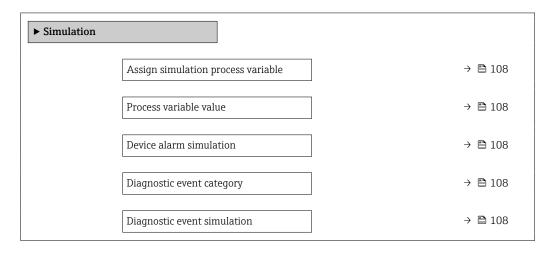

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign simulation process variable	-	Select a process variable for the simulation process that is activated.	■ Off ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Flow velocity ■ Temperature ■ Calculated saturated steam pressure ■ Total mass flow ■ Condensate mass flow ■ Energy flow ■ Heat flow difference ■ Reynolds number	Off
Process variable value	A process variable is selected in the Assign simulation process variable parameter (→ 🖺 108).	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Device alarm simulation	-	Switch the device alarm on and off.	Off On	Off
Diagnostic event category	-	Select a diagnostic event category.	SensorElectronicsConfigurationProcess	Process
Diagnostic event simulation	-	Select a diagnostic event to simulate this event.	Off Diagnostic event picklist (depends on the category selected)	Off

Visibility depends on order options or device settings

10.6 Protecting settings from unauthorized access

The following options exist for protecting the configuration of the measuring device from unintentional modification after commissioning:

- Write protection via access code
- Write protection via write protection switch
- Write protection via keypad lock

10.6.1 Write protection via access code

The effects of the user-specific access code are as follows:

- Via local operation, the parameters for the measuring device configuration are write-protected and their values can no longer be changed.
- Device access is protected via the Web browser, as are the parameters for the measuring device configuration.


Defining the access code via the local display

- 1. Navigate to the **Enter access code** parameter.
- 2. Maximum of 16-digit character string comprising numbers, letters and special characters as the access code.

- 3. Enter the access code again in the to confirm.
 - ► The 🗈 symbol appears in front of all write-protected parameters.
- \blacksquare Disabling parameter write protection via access code \rightarrow \blacksquare 54.
 - If the access code is lost: Resetting the access code.
 - The user role with which the user is currently logged in is displayed in **Access status display** parameter.
 - Navigation path: Operation → Access status display
- The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view.
- The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.

Parameters which can always be modified via the local display

Certain parameters that do not affect the measurement are excepted from parameter write protection via the local display. Despite the user-specific access code, they can always be modified, even if the other parameters are locked.

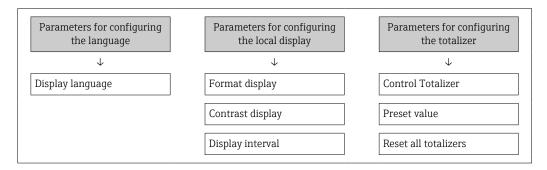


10.6.2 Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows the user to lock write access to the entire operating menu - apart from the **"Contrast display" parameter**.


The parameter values are now read only and cannot be edited any more (exception "Contrast display" parameter):

- Via local display
- Via PROFINET protocol
- 1. Loosen the securing clamp.
- 2. Unscrew the electronics compartment cover.

- 3. Pull out the display module with a gentle rotational movement. To make it easier to access the write protection switch, attach the display module to the edge of the electronics compartment.
 - └ Display module is attached to the edge of the electronics compartment.

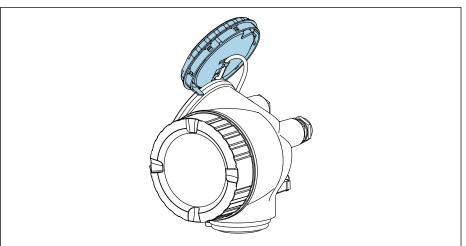

- 4. Setting the write protection switch (WP) on the main electronics module to the **ON** position enables hardware write protection. Setting the write protection switch (WP) on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.
 - └ If the hardware write protection is enabled: The **Hardware locked** option is displayed in the **Locking status** parameter . In addition to this, the ${\color{orange} \, {\color{orange} \, {\color{o} \, {\color{orange} \, {\color{o} \, } } \, {\color{orange} \, \, {\color{orange} \, \, } \, }} }}}}}}}}}}}}}}}}} } } } }}}} }}}}$ appears in the header of the measured value display and in the navigation view in front of the parameters.

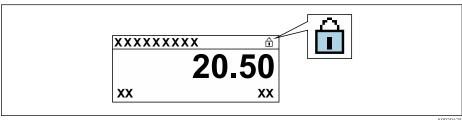

If hardware write protection is disabled: No option is displayed in the **Locking status** parameter . On the local display, the 🖹 symbol disappears from in front of the parameters in the header of the operational display and in the navigation

- 5. Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
- 6. Reassemble the transmitter in the reverse order.

10.7 Application-specific commissioning

10.7.1 Steam application

Select medium

Navigation:

Setup \rightarrow Medium selection

1. Open the **Medium selection** wizard.

- 2. In the **Select medium** parameter, select the **Steam** option.
- 3. When pressure measured value is read in ²⁾:
 In the **Steam calculation mode** parameter, select the **Automatic (p-/T-compensated)** option.
- 4. If pressure measured value is not read in: In the Steam calculation mode parameter, select the Saturated steam (T-compensated) option.
- 5. In the **Steam quality value** parameter, enter the steam quality present in the pipe.
 - ► Measuring instrument uses this value to calculate the mass flow of the steam.

10.7.2 Liquid application

User-specific liquid, e.g. heat carrier oil

Select medium

Navigation:

Setup → Medium selection

- 1. Call up the **Medium selection** wizard.
- 2. In the **Select medium** parameter, select the **Liquid** option.
- 3. In the **Liquid type** parameter, select the **User-specific liquid** option.
- 4. In the **Enthalpy type** parameter, select the **Heat** option.
 - ► Heat option: Non-flammable liquid that serves as a heat carrier.Calorific value option: Flammable liquid whose combustion energy is calculated.

Configuring fluid properties

Navigation:

Setup \rightarrow Advanced setup \rightarrow Medium properties

- 5. Call up the **Medium properties** submenu.
- 6. In the **Reference density** parameter, enter the reference density of the fluid.
- 7. In the **Reference temperature** parameter, enter the fluid temperature associated with the reference density.
- 8. In the **Linear expansion coefficient** parameter, enter the expansion coefficient of the fluid.
- 9. In the **Specific heat capacity** parameter, enter the heat capacity of the fluid.
- 10. In the **Dynamic viscosity** parameter, enter the viscosity of the fluid.

10.7.3 Gas applications

- For accurate mass or corrected volume measurement, it is recommended to use the pressure-/temperature-compensated sensor version. If this sensor version is not available, read in the pressure via the . If neither of these two options is possible, the pressure can also be entered as a fixed value in the **Fixed process pressure** parameter.
- Flow computer available only with the order code for "Sensor version", option "mass" (integrated temperature measurement)" or option "mass (integrated pressure/temperature measurement)".

²⁾ Pressure read in via PROFINET over Ethernet-APL

Single gas

Combustion gas, e.g. methane CH₄

Select medium

Navigation:

Setup → Medium selection

- 1. Call up the **Medium selection** wizard.
- 2. In the **Select medium** parameter, select the **Gas** option.
- 3. In the **Select gas type** parameter, select the **Single gas** option.
- 4. In the **Gas type** parameter, select the **Methane CH4** option.

Configuring medium properties

Navigation:

Setup → Advanced setup → Medium properties

- 5. Open the **Medium properties** submenu.
- 6. In the **Reference combustion temperature** parameter, enter the reference combustion temperature of the medium.

Configuring medium properties

Navigation:

Setup → Advanced setup → Medium properties

- 7. Open the **Medium properties** submenu.
- 8. In the **Reference combustion temperature** parameter, enter the reference combustion temperature of the medium.

Gas mixture

Forming gas for steel mills and rolling mills, e. g. N_2/H_2

Select medium

Navigation:

Setup → Medium selection

- 1. Call up the **Medium selection** wizard.
- 2. In the **Select medium** parameter, select the **Gas** option.
- 3. In the **Select gas type** parameter, select the **Gas mixture** option.

Configuring gas composition

Navigation:

Setup \rightarrow Advanced setup \rightarrow Medium properties \rightarrow Gas composition

- 4. Call up the **Gas composition** submenu.
- 5. In the **Gas mixture** parameter, select the **Hydrogen H2** option and the **Nitrogen N2** option.
- 6. In the **Mol% H2** parameter, enter the quantity of hydrogen.
- 7. In the Mol% N2 parameter, enter the quantity of nitrogen.
 - → All quantities must add up to 100 %. The density is determined according to NEL 40.

Configuring optional fluid properties for output of corrected volume flow

Navigation:

Setup → Advanced setup → Medium properties

- 8. Call up the **Medium properties** submenu.
- 9. In the **Reference pressure** parameter, enter the reference pressure of the fluid.
- **10.** In the **Reference temperature** parameter, enter the reference temperature of the fluid.

Air

Select medium

Navigation:

Setup → Medium selection

- 1. Call up the **Medium selection** wizard.
- 2. In the **Select medium** parameter ($\rightarrow \stackrel{\triangle}{=} 78$), select the **Gas** option.
- 3. In the **Select gas type** parameter ($\rightarrow \Box$ 78), select the **Air** option.
 - ► The density is determined according to NEL 40.
- 4. Enter the value in the **Relative humidity** parameter ($\rightarrow \triangleq 79$).
 - The relative humidity is entered as a %. The relative humidity is converted internally to absolute humidity and is then factored into the density calculation according to NEL 40.
- 5. In the **Fixed process pressure** parameter ($\rightarrow \implies$ 99), enter the value of the process pressure present.

Configuring fluid properties

Navigation:

Setup \rightarrow Advanced setup \rightarrow Medium properties

- 6. Call up the **Medium properties** submenu.
- 7. In the **Reference pressure** parameter ($\rightarrow \implies$ 86) enter the reference pressure for calculating the reference density.
 - Pressure that is used as a static reference for combustion. This makes it possible to compare combustion processes at different pressures.
- 8. In the **Reference temperature** parameter (→ 🗎 86) enter the temperate for calculating the reference density.
- Endress+Hauser recommends the use of active pressure compensation. This fully rules out the risk of measured errors due to pressure variations and incorrect entries .

Natural gas

Select medium

Navigation:

Setup → Medium selection

- 1. Call up the **Medium selection** wizard.
- 2. In the **Select medium** parameter ($\rightarrow \equiv 78$), select the **Gas** option.
- 3. In the **Select gas type** parameter ($\rightarrow \equiv 78$), select the **Natural gas** option.
- 4. In the **Fixed process pressure** parameter ($\Rightarrow \implies 99$), enter the value of the process pressure present.

- 5. In the **Enthalpy calculation** parameter ($\rightarrow \triangleq 80$), select one of the following options:
 - → AGA5
 ISO 6976 option (contains GPA 2172)
- 6. In the **Density calculation** parameter ($\rightarrow \triangleq 80$), select one of the following options.
 - → AGA Nx19

ISO 12213- 2 option (contains AGA8-DC92)
ISO 12213- 3 option (contains SGERG-88, AGA8 Gross Method 1)

Configuring fluid properties

Navigation:

Setup \rightarrow Advanced setup \rightarrow Medium properties

- 7. Call up the **Medium properties** submenu.
- 8. In the **Calorific value type** parameter, select one of the options.
- 9. n the **Reference gross calorific value** parameter, enter the reference gross calorific value of the natural gas.
- 10. In the **Reference pressure** parameter ($\rightarrow \triangleq 86$) enter the reference pressure for calculating the reference density.
 - Pressure that is used as a static reference for combustion. This makes it possible to compare combustion processes at different pressures.
- 11. In the **Reference temperature** parameter ($\Rightarrow \triangleq 86$) enter the temperate for calculating the reference density.
- 12. In the **Relative density** parameter, enter the relative density of the natural gas.
- Endress+Hauser recommends the use of active pressure compensation. This fully rules out the risk of measured errors due to pressure variations and incorrect entries .

Ideal gas

The unit "corrected volume flow" is often used to measure industrial gas mixtures, in particular natural gas. To do so, the calculated mass flow is divided by a reference density. To calculate the mass flow, knowledge of the exact composition of the gas is essential. In practice, however, this information is often not available (e. g. as it varies over time). In this case, it can be useful to regard the gas as an ideal gas. This means that only the operating temperature and operating pressure variables as well as the reference temperature and reference pressure variables are needed to calculate the corrected volume flow. The error resulting from this assumption (typically 1 to 5 %) is often considerably smaller than the error caused by inaccurate composition data. This method should not be used for condensing gases (e. g. saturated steam).

Select medium

Navigation:

Setup → Medium selection

- 1. Call up the **Medium selection** wizard.
- 2. In the **Select medium** parameter, select the **Gas** option.
- 3. In the **Select gas type** parameter, select the **User-specific gas** option.
- 4. For non-flammable gas:
 In the **Enthalpy type** parameter, select the **Heat** option.

Configuring fluid properties

Navigation:

Setup \rightarrow Advanced setup \rightarrow Medium properties

- 5. Call up the **Medium properties** submenu.
- 6. In the **Reference density** parameter, enter the reference density of the fluid.
- 7. In the **Reference pressure** parameter, enter the reference pressure of the fluid.
- 8. In the **Reference temperature** parameter, enter the fluid temperature associated with the reference density.
- 9. In the **Reference Z-factor** parameter, enter the value **1**.
- 10. If specific heat capacity is to be measured:

 In the **Specific heat capacity** parameter, enter the heat capacity of the fluid.
- 11. In the **Z-factor** parameter, enter the value **1**.
- 12. In the **Dynamic viscosity** parameter, enter the viscosity of the fluid under operating conditions.

10.7.4 Calculation of the measured variables

A flow computer can be found in the electronics of the measuring device with order code for "Sensor version", option "mass (integrated temperature measurement)". This computer can calculate the following secondary measured variables directly from the primary measured variables recorded using the pressure value (entered or external) and/or temperature value (measured or entered).

Mass flow and corrected volume flow

Medium	Fluid	Standards	Explanation	
Steam 1)	Water vapor	IAPWS-IF97/ ASME	 For integrated temperature measurement For fixed process pressure, pressure measured directly at the meter body or if the pressure is read in via 	
	Single gas	NEL40	For fixed process pressure, pressure measured directly at the mete body or if the pressure is read in via	
	Gas mixture	NEL40		
	Air	NEL40		
	Natural gas ISO 12213-2		 Contains AGA8-DC92 For fixed process pressure, pressure measured directly at the meter body or if the pressure is read in via 	
Gas		AGA NX-19	For fixed process pressure, pressure measured directly at the meter body or if the pressure is read in via	
		ISO 12213-3	 Contains SGERG-88, AGA8 Gross Method 1 For fixed process pressure, pressure measured directly at the meter body or if the pressure is read in via 	
	Other gases	Linear equation	 Ideal gases For fixed process pressure, pressure measured directly at the meter body or if the pressure is read in via 	
	Water	IAPWS-IF97/ ASME	-	
Liquids	Liquefied gas	Tables	Propane and butane mixture	
	Other liquid	Linear equation	Ideal liquids	

Mass flow calculation

Volume flow × operating density

- Operating density for saturated steam, water and other liquids: depends on the temperature
- Operating density for superheated steam and all other gases: depends on the temperature and process pressure

Corrected volume flow calculation

(Volume flow × operating density)/reference density

- Operating density for water and other liquids: depends on the temperature
- Operating density for all other gases: depends on the temperature and process pressure

Energy flow

Medium	Fluid	Standards	Explanation	Heat/energy option
Steam 1)	-	IAPWS- IF97/ASME	For fixed process pressure or if the pressure is read in via	
	Single gas	ISO 6976	 Contains GPA 2172 For fixed process pressure or if the pressure is read in via 	
Gas	Gas mixture	ISO 6976	 Contains GPA 2172 For fixed process pressure or if the pressure is read in via 	Heat Gross calorific value ²⁾ in relation to mass
	Air	NEL40	For fixed process pressure or if the pressure is read in via	Net calorific value ³⁾ in relation to mass Gross calorific value ²⁾ in relation to corrected volume Net calorific value ³⁾ in relation to corrected
	Natural gas	ISO 6976	 Contains GPA 2172 For fixed process pressure or if the pressure is read in via 	volume
		AGA 5	-	
	Water	IAPWS- IF97/ASME	-	
Liquids	Liquefied gas	ISO 6976	Contains GPA 2172	
	Other liquid	Linear equation	_	

- 2) Gross calorific value: combustion energy + condensation energy of the flue gas (gross calorific value > net calorific value)
- 3) Net calorific value: only combustion energy

Mass flow and energy flow calculation

Steam is calculated based on the following factors:

- Fully compensated calculation of density using the "pressure" and "temperature" measured variables
- Calculation based on overheated steam until saturation point is reached
 Configuration of diagnostic behavior of the △S871 Near steam saturation limit
 diagnostic messageAssign behavior of diagnostic no. 871 parameter set to Off option
 (factory setting) as standard →
 □ 136

Optional configuration of diagnostic behavior to the **Alarm** option or **Warning** option option.

At 2 K above saturation, activation of the \triangle **S871 Near steam saturation limit** diagnostic message.

- The smaller of the following two pressure values is always used to calculate the density:
 - Pressure measured directly at meter body or pressure read in via
 - Saturated steam pressure, which is derived from the saturated steam line (IAPWS-IF97/ASME)

Calculated value

The unit calculates the mass flow, heat flow, energy flow, density and specific enthalpy from the measured volume flow and the measured temperature and/or the pressure based on international standard IAPWS-IF97/ASME.

Formulae for calculation:

- Mass flow: $\dot{m} = \dot{v} \cdot \rho$ (T, p)
- Heat flow: $\dot{Q} = \dot{v} \cdot \rho (T, p) \cdot h_D (T, p)$

 \dot{m} = Mass flow

Q = Heat flow

 \dot{v} = Volume flow (measured)

 h_D = Specific enthalpy

T = Process temperature (measured)

p = Process pressure

 $\rho = Density^{3}$

Pre-programmed gases

The following gases are pre-programmed in the flow computer:

Hydrogen ¹⁾	Helium 4	Neon	Argon
Krypton	Xenon	Nitrogen	Oxygen
Chlorine	Ammonia	Carbon monoxide 1)	Carbon dioxide
Sulfur dioxide	Hydrogen sulfide 1)	Hydrogen chloride	Methane 1)
Ethane ¹⁾	Propane ¹⁾	Butane 1)	Ethylene (ethene) 1)
Vinyl chloride	Mixtures of up to 8 component	s of these gases ¹⁾	

The energy flow is calculated as per ISO 6976 (contains GPA 2172) or AGA5 - in relation to the net calorific value or gross calorific value.

³⁾ From steam data as per IAPWS-IF97 (ASME), for the measured temperature and the specified pressure

Energy flow calculation

Volume flow × operating density × specific enthalpy

- Operating density for saturated steam and water: depends on the temperature
- Operating density for superheated steam, natural gas ISO 6976 (contains GPA 2172), natural gasAGA5: depends on the temperature and pressure

Heat flow difference

- Between saturated steam upstream from a heat exchanger and condensate downstream from the heat exchanger (second temperature read in via) in accordance with IAPWS-IF97/ASME
- Between warm and cold water (second temperature read in via) in accordance with IAPWS-IF97/ASME

Vapor pressure and steam temperature

The measuring device can perform the following in saturated steam measurements between the feed line and return line of any heating liquid (second temperature read in via and Cp value entered:

- Calculation of saturation pressure of steam from the measured temperature and output in accordance with IAPWS-IF97/ASME
- Calculation of saturation temperature of steam from the preset pressure and output in accordance with IAPWS-IF97/ASME

11 **Operation**

11.1 Reading off the device locking status

Device active write protection: Locking status parameter

Operation → Locking status

Function scope of the "Locking status" parameter

Options	Description
None	The access authorization displayed in the Access status display parameter applies → 🖺 54. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters (e.g. via local display or operating tool) $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset, etc.). Once the internal processing has been completed, the parameters can be changed once again.

11.2 Adjusting the operating language

Petailed information:

- ullet To configure the operating language ightarrow~ riangleq 71
- For information on the operating languages supported by the measuring device → 🖺 203

11.3 Configuring the display

Detailed information:


- On the basic settings for the local display
- On the advanced settings for the local display $\rightarrow \triangleq 103$

Reading off measured values 11.4

With the **Measured values** submenu, it is possible to read all the measured values.

Navigation

"Diagnostics" menu → Measured values → Process variables

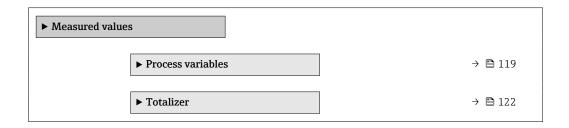

Process variables 11.4.1

The Process variables submenu contains all the parameters needed to display the current measured values for each process variable.

 $\begin{tabular}{ll} \textbf{Navigation} \\ \begin{tabular}{ll} \textbf{"Diagnostics" menu} \rightarrow \textbf{Measured values} \rightarrow \textbf{Process variables} \\ \end{tabular}$

► Process variables	
Volume flow	→ 🖺 121
Corrected volume flow	→ 🖺 121
Mass flow	→ 🖺 121
Flow velocity	→ 🖺 121
Temperature	→ 🖺 121
Vortex frequency	→ 🖺 121
Vortex kurtosis	→ 🖺 121
Vortex amplitude	→ 🗎 121
Calculated saturated steam pre-	ssure → 🖺 121
Steam quality	→ 🖺 121
Total mass flow	→ 🖺 121
Condensate mass flow	→ 🖺 121
Energy flow	→ 🖺 121
Heat flow difference	→ 🖺 121
Reynolds number	→ 🖺 121
Density	→ 🖺 121
	→ 🖺 122
Specific volume	
Pressure	→ 🖺 122
Compressibility factor	→ 🖺 122
Degrees of superheat	→ 🖺 122

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface	Factory setting
Volume flow	-	Displays the volume flow currently measured. Dependency The unit is taken from the Volume flow unit parameter	Signed floating-point number	-
Corrected volume flow	-	Displays the corrected volume flow currently calculated. Dependency The unit is taken from the Corrected volume flow unit parameter	Signed floating-point number	-
Mass flow	-	Displays the mass flow currently measured. Dependency The unit is taken from the Mass flow unit parameter	Signed floating-point number	-
Flow velocity	_	Shows the flow velocity currently calculated.	Signed floating-point number	1 m/s
Temperature	-	Displays the temperature currently measured. Dependency The unit is taken from the Temperature unit parameter	Signed floating-point number	-
Vortex frequency	-	Shows the vortex frequency registered by the DSC sensor in the measuring tube.	Measuring range depending on the nominal diameter: 0.1 to 3 100 Hz	-
Vortex kurtosis	-	Shows the statistical variable kurtosis, which serves to assess the signal quality (no unit).	0 to 10	-
Vortex amplitude	-	Shows the average vortex amplitude (no unit).	0 to 1	-
Calculated saturated steam pressure	_	Shows the saturated steam pressure currently calculated.	Signed floating-point number	1E-05 bar
Steam quality	-	Shows the current steam quality.	Signed floating-point number	1 %
Total mass flow	-	Shows the total mass flow (steam and condensate) currently calculated.	Signed floating-point number	3 599.9999999971 kg/l
Condensate mass flow	-	Shows the condensate mass flow currently calculated.	Signed floating-point number	3 599.99999999971 kg/l
Energy flow	-	Shows the energy flow currently calculated.	Signed floating-point number	0.001 kW
Heat flow difference	-	Shows the heat flow difference currently calculated.	Signed floating-point number	0.001 kW
Reynolds number	-	Shows the Reynolds number currently calculated.	Signed floating-point number	1
Density	With order code for "Sensor version": Option "Mass (integrated temperature measurement)"	Displays the density currently measured. Dependency The unit is taken from the Density unit parameter.	Positive floating- point number	-


Parameter	Prerequisite	Description	User interface	Factory setting
Specific volume	With order code for "Sensor version": Option "Mass (integrated temperature measurement)"	Displays the current value for the specific volume. Dependency The unit is taken from the Specific volume unit parameter.	Positive floating- point number	-
Pressure	One of the following conditions is met: Order code for "Sensor version", Option "Mass (integrated temperature measurement)" or The Pressure option is selected in the External value parameter.	Displays the current process pressure. Dependency The unit is taken from the Pressure unit parameter.	0 to 250 bar	-
Compressibility factor	The following conditions are met: Order code for "Sensor version" Option "Mass (integrated temperature measurement)" The Gas option or the Steam option is selected in the Select medium parameter.	Displays the compressibility factor currently calculated.	0 to 2	-
Degrees of superheat	In the Select medium parameter, the Steam option is selected.	Displays the degree of superheating currently calculated.	0 to 500 K	-

11.4.2 Totalizer

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Totalizer

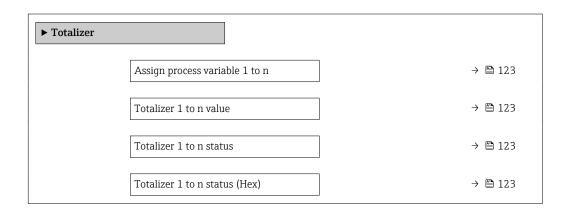

Parameter overview with brief description

Parameter	Description	Selection / User interface	Factory setting
Assign process variable 1 to n	Select process variable for totalizer.	 Mass flow Volume flow Corrected volume flow Total mass flow* Condensate mass flow* Energy flow* Heat flow difference* 	Volume flow
Totalizer 1 to n value	Shows the totalizer value reported to the controller for further processing.	Signed floating-point number	0 m ³
Totalizer 1 to n status	Shows the status of the totalizer value reported to the controller for further processing ('Good', 'Uncertain', 'Bad').	GoodUncertainBad	Good
Totalizer 1 to n status (Hex)	Shows the status of the totalizer value reported to the controller for further processing (Hex).	0 to 255	128

Visibility depends on order options or device settings

11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu (\rightarrow \blacksquare 71)
- Advanced settings using the Advanced setup submenu (\rightarrow 🖺 83)

 
11.6 Displaying the measured value history

The **Extended HistoROM** application package must be enabled in the device (order option) for the **Data logging** submenu to appear. This contains all the parameters for the measured value history.

Data logging is also available via:
Plant Asset Management Tool FieldCare → 🖺 57.

Function scope

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Displays the measured value trend for each logging channel in the form of a chart



A003435

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.
- If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

 $\begin{array}{l} \textbf{Navigation} \\ \text{"Diagnostics" menu} \rightarrow \text{Data logging} \end{array}$

▶ Data logging	
Assign channel 1	→ 🖺 125
Assign channel 2	→ 🖺 125
Assign channel 3	→ 🖺 125
Assign channel 4	→ 🖺 125
Logging interval	→ 🖺 125
Clear logging data	→ 🖺 125
Data logging	→ 🖺 126
Logging delay	→ 🖺 126
Data logging control	→ 🖺 126
Data logging status	→ 🖺 126
Entire logging duration	→ 🖺 126

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign channel 1	The Extended HistoROM application package is available.	Assign process variable to logging channel.	Off Volume flow Corrected volume flow Mass flow Flow velocity Temperature Vortex frequency Calculated saturated steam pressure Steam quality Total mass flow Condensate mass flow Energy flow Heat flow difference Reynolds number Density Pressure Specific volume Degrees of superheat Electronics temperature	Off
Assign channel 2	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see Assign channel 1 parameter (→ 125)	Off
Assign channel 3	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see Assign channel 1 parameter (→ 🖺 125)	Off
Assign channel 4	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see Assign channel 1 parameter (→ 🖺 125)	Off
Logging interval	The Extended HistoROM application package is available.	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	1.0 to 3 600.0 s	1.0 s
Clear logging data	The Extended HistoROM application package is available.	Clear the entire logging data.	CancelClear data	Cancel

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Data logging	-	Select the type of data logging.	OverwritingNot overwriting	Overwriting
Logging delay	In the Data logging parameter, the Not overwriting option is selected.	Enter the time delay for measured value logging.	0 to 999 h	0 h
Data logging control	In the Data logging parameter, the Not overwriting option is selected.	Start and stop measured value logging.	NoneDelete + startStop	None
Data logging status	In the Data logging parameter, the Not overwriting option is selected.	Displays the measured value logging status.	DoneDelay activeActiveStopped	Done
Entire logging duration	In the Data logging parameter, the Not overwriting option is selected.	Displays the total logging duration.	Positive floating- point number	0 s

^{*} Visibility depends on order options or device settings

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For local display

Error	Possible causes	Remedial action	
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.	
Local display dark and no output signals	Supply voltage does not match the voltage specified on the nameplate.	Apply the correct supply voltage $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
Local display dark and no output signals	Supply voltage has incorrect polarity.	Reverse polarity of supply voltage.	
Local display dark and no output signals	No contact between connecting cables and terminals.	Ensure electrical contact between the cable and the terminal.	
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly.	Check terminals.	
Local display dark and no output signals	■ I/O electronics module is defective.	Order spare part → 🖺 176.	
Local display dark and output signals in failure current	Sensor short-circuit, electronics module short-circuit	1. Contact service organization.	
Local display cannot be read, but signal output is within the valid range	Display is set too bright or too dark.	■ Set the display brighter by simultaneously pressing	
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part → 🖺 176.	
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures → 🖺 136	
Text on local display appears in a language that cannot be understood.	The selected operating language cannot be understood.	1. Press □ + ⊕ for 2 s ("home position"). 2. Press □. 3. Configure the required language in the Display language parameter (→ □ 105).	
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	 Check the cable and the connector between the main electronics module and display module. Order spare part → ■ 176. 	

For output signals

Error	Possible causes	Remedial action
Signal output outside the valid range	Main electronics module is defective.	Order spare part → 🖺 176.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Parameter configuration error	Check and adjust parameter configuration.
Device measures incorrectly.	Configuration error or device is operated outside the application.	Check and correct parameter configuration. Observe limit values specified in the "Technical Data".

For access

Fault	Possible causes	Remedial action
Write access to parameters is not possible.	Hardware write protection is enabled.	Set the write protection switch on the main electronics module to the OFF position → 🗎 109.
Write access to parameters is not possible.	Current user role has limited access authorization.	1. Check user role → 🗎 54. 2. Enter correct customer-specific access code → 🖺 54.
Connection via service interface is not possible.	The USB port on the PC is incorrectly configured.The driver is not installed correctly.	Refer to the documentation on Commubox FXA291: Technical Information TI00405C
Web browser frozen and operation no longer possible	Data transfer is active.	Wait until data transfer or current action is finished.
	Connection lost	 Check cable connection and power supply. Refresh the web browser and restart if necessary.
Display of web browser content is difficult to read or incomplete.	Web browser version used is not optimal.	 Use correct web browser version . Empty the web browser cache. Restart the web browser.
	Unsuitable view settings.	Change the font size/display ratio of the Web browser.
Incomplete or no display of content in the web browser	 JavaScript is not enabled. JavaScript cannot be enabled.	Enable JavaScript.


For system integration

Error	Possible causes	Remedy
The PROFINET device name is not displayed correctly and contains coding.	A device name containing one or more underscores has been specified via the automation system.	Specify a correct device name (without underscores) via the automation system.

12.2 Diagnostic information via light emitting diodes

12.2.1 Transmitter

Different LEDs in the transmitter provide information on the device status.

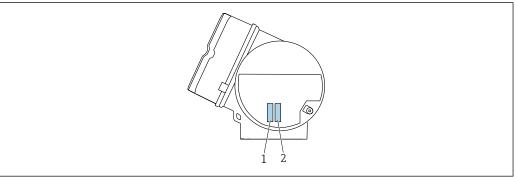

A005083


LED		Color	Meaning
1	Device status/module	Off	Firmware error/no supply voltage
	status (normal operation)	Green	Device status is ok.

LED		Color	Meaning
		Flashing green	Device is not configured.
		Flashing red	A diagnostic event with "Warning" diagnostic behavior has occurred.
		Red	A diagnostic event with "Alarm" diagnostic behavior has occurred.
		Flashing red/green	The device restarts/self-test.
2	Flashing/network status	Green	Cyclic data exchange is active.
		Flashing green	Following request from automation system: Flash frequency: 1 Hz (flash functionality: 500 ms on, 500 ms off)
			If no "Name of Station" is defined, the LED flashes at 4 Hz. Display: no "Name of Station" available.
		Red	IP address is available but there is no connection to the automation system
		Flashing red	Cyclic data exchange was active but the connection was disconnected: Flash frequency: 3 Hz

12.3 Diagnostic information on local display

12.3.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring instrument are displayed as a diagnostic message in alternation with the operational display.

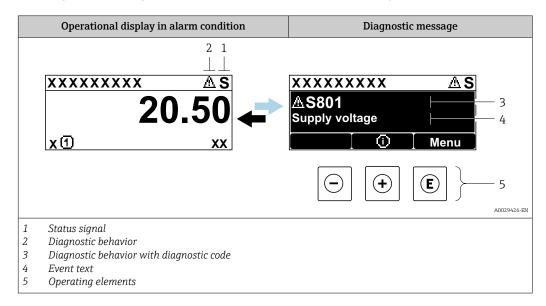

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

- Other diagnostic events that have occurred can be displayed in the **Diagnostics** menu:
 - Via parameter \rightarrow 🗎 168
 - Via submenus \rightarrow 🖺 169

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

- The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:
 - F = Failure
 - C = Function Check
 - S = Out of Specification
 - M = Maintenance Required

Symbol	Meaning	
F	Failure A device error has occurred. The measured value is no longer valid.	
С	Function check The device is in the service mode (e.g. during a simulation).	
S	Out of specification The device is being operated: Outside its technical specification limits (e.g. outside the process temperature range)	
М	Maintenance required Maintenance is required. The measured value remains valid.	

Diagnostic behavior

Symbol	Meaning
Alarm Measurement is interrupted. Signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated. For local display with touch control: the background lighting changes to red.	
\triangle	 Warning Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.


Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

Operating elements

Operating key	Meaning
	Plus key
(+)	In menu, submenu Opens the message about the remedial measures.
	Enter key
E	In menu, submenu Opens the operating menu.

12.3.2 Calling up remedial measures

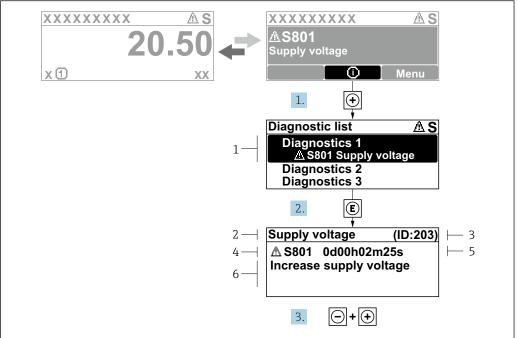

A0029431-EN

- 20 Message for remedial actions
- 1 Diagnostic information
- 2 Event text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operating time of occurrence
- 6 Remedial actions
- 1. The user is in the diagnostic message.

Press ± (① symbol).

- The **Diagnostic list** submenu opens.
- 2. Select the desired diagnostic event with \pm or \Box and press \Box .
 - └ The message about the remedial measures opens.
- 3. Press \Box + \pm simultaneously.
 - ► The message about the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or **Previous diagnostics** parameter.

- 1. Press E.
 - ► The message for the remedial measures for the selected diagnostic event opens.
- 2. Press \Box + \pm simultaneously.
 - ► The message for the remedial measures closes.

12.4 Diagnostic information in the web browser

12.4.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

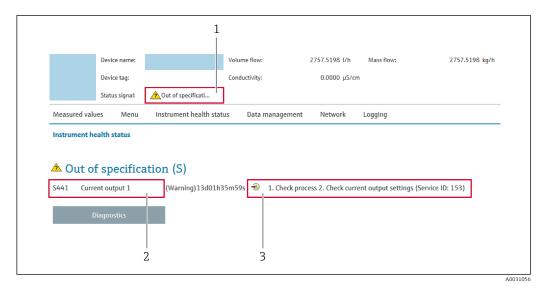

- 1 Status area with status signal
- 2 Diagnostic information
- 3 Remedial measures with service ID
- In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

 - Via submenu → 🗎 169

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning	
8	Failure A device error has occurred. The measured value is no longer valid.	
V	Function check The device is in service mode (e.g. during a simulation).	
<u>^</u> ?	Out of specification The device is being operated: Outside its technical specification limits (e.g. outside the process temperature range)	
\oints	Maintenance required Maintenance is required. The measured value remains valid.	

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.


12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

12.5 Diagnostic information in FieldCare or DeviceCare

12.5.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

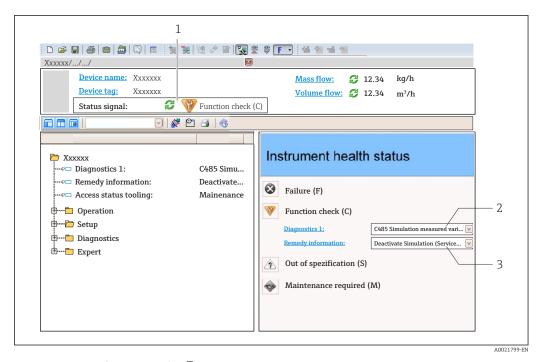

- 1 Status area with status signal $\rightarrow \implies 130$
- 2 Diagnostic information $\rightarrow \implies 131$
- 3 Remedial actions with service ID
- In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:
 - Via parameter \rightarrow 🗎 168
 - Via submenu $\rightarrow \implies 169$

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

12.5.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
- Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu
 Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

- 1. Call up the desired parameter.
- 2. On the right in the working area, mouse over the parameter.
 - A tool tip with remedy information for the diagnostic event appears.

12.6 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

Expert \rightarrow System \rightarrow Diagnostic handling \rightarrow Diagnostic behavior


12.6.1 Available diagnostic behaviors

The following diagnostic behaviors can be assigned:

Diagnostic behavior	Description
Alarm	The device stops measurement. The totalizers assume the defined alarm condition. A diagnostic message is generated. For local display with touch control: the background lighting changes to red.
Warning	The device continues to measure. Measured value output via PROFINET and totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is only displayed in the Event logbook submenu (Event list submenu) and is not displayed in alternating sequence with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

12.6.2 Displaying the measured value status

If modules with input data (e.g. Analog Input module, Discrete Input module, Totalizer module, Heartbeat module) are configured for cyclic data transmission, the measured value status is coded as per PROFINET PA Profile 4 Specification and transmitted along with the measured value to the PROFINET Controller via the status byte. The status byte is split into three segments: Quality, Quality Substatus and Limits.

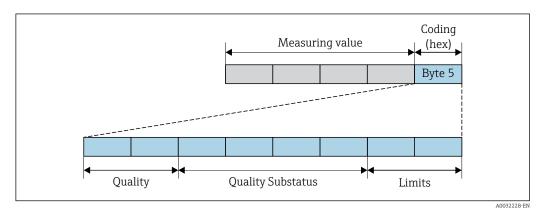

■ 21 Structure of the status byte

The contents of the status byte depends on the configured failure mode in the individual function block. Depending on which failure mode has been configured, status information in accordance with PROFINET PA Profile Specification 4 is transmitted to the the PROFINET over Ethernet-APL controller via the status byte status information. The two bits for the limits always have the value 0.

Supported status information

Status	Coding (hex)
BAD - Maintenance alarm	0x24 to 0x27
BAD - Process related	0x28 to 0x2B
BAD - Function check	0x3C to 0x3F
UNCERTAIN - Initial value	0x4C to 0x4F
UNCERTAIN - Maintenance demanded	0x68 to 0x6B
UNCERTAIN - Process related	0x78 to 0x7B
GOOD - OK	0x80 to 0x83
GOOD - Maintenance required	0xA4 to 0xA7

Status	Coding (hex)
GOOD - Maintenance demanded	0xA8 to 0xAB
GOOD - Function check	0xBC to 0xBF

12.7 Overview of diagnostic information

- The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.
- In the case of some items of diagnostic information, the diagnostic behavior can be changed. Adapting the diagnostic information

12.7.1 Diagnostic of sensor

	Diagnosti	information	Remedy instructions	Influenced measured
No.	Short text			variables
004	Sensor defective		1. Check plug connections	Vortex amplitude
			Replace pre-amplifier Replace DSC sensor	 Calculated saturated steam pressure
	Quality	Good		Density
	Quality substatus	Ok		• Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flow Flourise legitime
	Status signal	F		Flow velocityHeat flow difference
	Diagnostic behavior	Alarm		 Neat now difference Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	s	hort text		variables
022	722 Temperature sensor defective		1. Check plug connections	Vortex amplitude
			Replace pre-amplifier Replace DSC sensor	 Calculated saturated steam pressure
	Quality	Good		DensityElectronics temperature
	Quality substatus	Ok		option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		 Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

¹⁾ Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnos	tic information	Remedy instructions	Influenced measured
No.	o. Short text			variables
046			1. Check plug connections	Vortex amplitude
	Management reminded attacks		2. Replace pre-amplifier 3. Replace DSC sensor	 Calculated saturated steam pressure
	Quality	Good		DensityElectronics temperature
	Quality substatus	Ok		option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	S		 Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

Diagnostic information		Remedy instructions	Influenced measured
S	hort text		variables
Sensor connection faulty		1. Check plug connections	Vortex amplitude
		2. Replace pre-amplifier 3. Replace DSC sensor	 Calculated saturated steam pressure
Quality	Good		• Density
Quality substatus	Ok		 Electronics temperature option
Coding (hex)	0x80 to 0x83		■ Energy flow
Status signal	F		Flow velocityHeat flow difference
	Alarm		Vortex kurtosisMass flow
Plagifostic behavior Planin		 Total mass flow 	
			 Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency
	Sensor connection faulty Measured variable status Quality Quality substatus	Short text Sensor connection faulty Measured variable status Quality Good Quality substatus Ok Coding (hex) 0x80 to 0x83 Status signal F	Sensor connection faulty Measured variable status Quality Good Quality substatus Coding (hex) Status signal Status Signal 1. Check plug connections 2. Replace pre-amplifier 3. Replace DSC sensor

	Diagnostic information		Remedy instructions	Influenced measured
No.	Short text			variables
082	Data storage inconsistent		Check module connections	Vortex amplitude Calculated activities
	Measured variable status			 Calculated saturated steam pressure
	Quality	Good		DensityElectronics temperature
	Quality substatus	Ok		option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		 Heat flow difference
	Diagnostic behavior	Alarm		Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	. Short text			variables
083	Memory content inconsistent		1. Restart device	Vortex amplitude
	Measured variable status		2. Restore S-DAT data 3. Replace sensor	 Calculated saturated steam pressure
	Quality	Good	•	Density
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		 Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic	information	Remedy instructions	Influenced measured
No.	No. Short text			variables
114	Sensor leaky Measured variable status		Change DSC sensor	Vortex amplitudeCalculated saturated
	Quality Quality substatus	Good Ok		steam pressure Density Electronics temperature option
	Coding (hex) Status signal	0x80 to 0x83		Energy flowFlow velocityHeat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	o. Short text			variables
122	Temperature sensor defective		1. Check plug connections	Vortex amplitude
	Measured variable status [from the factory] 1)		Replace pre-amplifier Replace DSC sensor	 Calculated saturated steam pressure
	Quality	Good	•	Density
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	M		Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

¹⁾ Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic information		Remedy instructions	Influenced measured
No.	Short text			variables
170	Pressure cell connection defect	rive	1. Check plug connections	Vortex amplitude
	Measured variable status		2. Replace pressure cell	 Calculated saturated steam pressure
	Quality	Good		DensityElectronics temperature
	Quality substatus	Ok		option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		 Heat flow difference
	Diagnostic behavior	Alarm		Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	. Short text			variables
171	Ambient temperature too low		Increase ambient temperature	Vortex amplitude
	Measured variable status			 Calculated saturated steam pressure
	Quality	Good		Density Floatrania town and the control of
	Quality substatus	Ok		• Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	S		 Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagno	ostic information	Remedy instructions	Influenced measured
No.	o. Short text			variables
172	Ambient temperature too high Measured variable status		Reduce ambient temperature	Vortex amplitudeCalculated saturated
	Quality Quality substatus	Good Ok		steam pressure Density Electronics temperature option
	Coding (hex) Status signal	0x80 to 0x83		 Energy flow Flow velocity Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	Short text			variables
173	Pressure cell range exceeded		1. Check process conditions	Vortex amplitude
	Measured variable status		2. Adapt process pressure	 Calculated saturated steam pressure
	Quality	Good		Density Floatronics tomporature
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	S		Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

Diagnostic information		Remedy instructions	Influenced measured	
No.	Short text			variables
174	Pressure cell electronics defective		Replace pressure cell	Vortex amplitude
	Measured variable status			 Calculated saturated steam pressure
	Quality	Good		Density
	Quality substatus	Ok		• Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		Heat flow difference
	Diagnostic behavior	Alarm		Vortex kurtosisMass flowTotal mass flowPressure
				 Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

Diagnostic information		Remedy instructions	Influenced measured	
No.	Short text			variables
175	Pressure cell deactivated Measured variable status		Enable pressure cell	Vortex amplitude
				 Calculated saturated steam pressure
	Quality	Good		Density
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	M		Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

12.7.2 Diagnostic of electronic

Diagnostic information		Remedy instructions	Influenced measured	
No.	o. Short text			variables
201	Electronics faulty		Restart device Replace electronics	Vortex amplitude
	Measured variable status			 Calculated saturated steam pressure
	Quality	Good		Density
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		 Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

Diagnostic information		Remedy instructions	Influenced measured	
No.	S	hort text		variables
242	42 Firmware incompatible Measured variable status		Check firmware version Flash or replace main electronic module	Vortex amplitude
				 Calculated saturated steam pressure
	Quality	Good		Density
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flow
	Status signal	F		Flow velocityHeat flow difference
	Diagnostic behavior	Alarm		Vortex kurtosisMass flow
				 Total mass flow
				PressureReynolds numberSpecific volume
				Corrected volume flowSteam quality
				 Degrees of superheat
				Volume flowVortex frequency

Diagnostic information		Remedy instructions	Influenced measured	
No.	SI	hort text		variables
262	Module connection interrupted		Check or replace connection cable between sensor electronic module (ISEM) and main electronics	Vortex amplitude
	Measured variable status			 Calculated saturated steam pressure
	Quality	Good	electronics	DensityElectronics temperature
	Quality substatus	Ok		option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

Diagnostic information		Remedy instructions	Influenced measured	
No.	S	hort text		variables
270	0 Main electronics defective		1. Restart device	Vortex amplitude
	Measured variable status		2. Replace main electronic module	 Calculated saturated steam pressure
	Quality	Good		Density
	Quality substatus	Ok		• Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		 Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	Short text			variables
271	Main electronics faulty		1. Restart device	Vortex amplitude
	Measured variable status		2. Replace main electronic module	 Calculated saturated steam pressure
	Quality	Good		DensityElectronics temperature
	Quality substatus	Ok		option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		 Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	Short text		variables
272	Main electronics faulty		Restart device	Vortex amplitude
	Measured variable status			 Calculated saturated steam pressure
	Quality	Good		Density
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		■ Energy flow
	Status signal	F		Flow velocityHeat flow difference
	Diagnostic behavior	Alarm		Vortex kurtosisMass flow
				 Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	o. Short text			variables
273	Main electronics defective	Pay attention to display emergency	Vortex amplitude	
	Measured variable status		operation 2. Replace main electronics	 Calculated saturated steam pressure
	Quality	Good		DensityElectronics temperature
	Quality substatus	Ok		option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		 Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	s	hort text		variables
275	I/O module defective		Change I/O module	Vortex amplitude
	Measured variable status			 Calculated saturated steam pressure
	Quality	Good		Density
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	o. Short text			variables
276	I/O module faulty		1. Restart device	Vortex amplitude
	Measured variable status		2. Change I/O module	 Calculated saturated steam pressure
	Quality	Good		DensityElectronics temperature
	Quality substatus	Ok		option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		Heat flow difference Waster least asia.
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	s	hort text		variables
277	Electronics defective		1. Replace pre-amplifier	Vortex amplitude
	Measured variable status		2. Replace main electronic module	 Calculated saturated steam pressure
	Quality	Good		Density
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		 Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured	
No.	S	hort text		variables	
282	Data storage inconsistent		Restart device	Vortex amplitude	
	Measured variable status			 Calculated saturated steam pressure 	
	Quality	Good		Density Floatronics tomporature	
	Quality substatus	Ok		• Electronics temperature option	
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity	
	Status signal	tus signal F	F		 Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency 	

	Diagnostic information		Remedy instructions	Influenced measured
No.	s	hort text		variables
283	Memory content inconsistent		Restart device	Vortex amplitude
	Measured variable status			 Calculated saturated steam pressure
	Quality	Good		Density
	Quality substatus	Ok		• Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	. Short text			variables
302	Device verification active		Device verification active, please wait.	Vortex amplitude Calculated saturated
	Measured variable status			steam pressure
	Quality	Good		DensityElectronics temperature
	Quality substatus	Function check		option
	Coding (hex)	0xBC to 0xBF		Energy flowFlow velocity
	Status signal	С		 Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	Si	hort text		variables
311	Electronics failure		Maintenance required!	Vortex amplitude
	Measured variable status Do not reset device	Do not reset device	 Calculated saturated steam pressure 	
	Quality	Good		• Density
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	M		 Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	Jo. Short text			variables
350	Pre-amplifier defective		Replace pre-amplifier	Vortex amplitude Calculated saturated
	Measured variable status [from the factory] 1)			steam pressure
	Quality	Good		DensityElectronics temperature
	Quality substatus	Ok		option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		 Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic	information	Remedy instructions	Influenced measured
No.	S	Short text		variables
351	Pre-amplifier defective		Replace pre-amplifier	Vortex amplitude Calculated saturated
	Measured variable status			steam pressure
	Quality	Good		Density
C	Quality substatus	Ok		Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		 Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	Short text			variables
370	Pre-amplifier defective		1. Check plug connections	Vortex amplitude
	Measured variable status		2. Check cabel connection of remote version	 Calculated saturated steam pressure
	Quality	Quality Good 3. Replace pre-amplifier or main electronic module	DensityElectronics temperature	
	Quality substatus	Ok	inodule	option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		 Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
371	Temperature sensor defective		1. Check plug connections	Vortex amplitude
	Measured variable status [fro	om the factory] 1)	Replace pre-amplifier Replace DSC sensor	 Calculated saturated steam pressure
	Quality	Good	•	Density
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	nal M	 Heat flow difference 	
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

¹⁾ Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.7.3 Diagnostic of configuration

	Diagnostic information		Remedy instructions	Influenced measured
No.	. Short text			variables
410	Data transfer failed		1. Retry data transfer	Vortex amplitude
	Measured variable status		2. Check connection	 Calculated saturated steam pressure
	Quality	Good		Density Floatronics tomporature
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		 Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic	information	Remedy instructions	Influenced measured
No.	Short text			variables
412	Processing download		Download active, please wait	Vortex amplitudeCalculated saturated
	Measured variable status Quality Quality	Good		steam pressure Density Electronics temperature option Energy flow Flow velocity
	Quality substatus Coding (hex)	0x80 to 0x83		
	Status signal Diagnostic behavior	C Warning		 Heat flow difference Vortex kurtosis Mass flow Total mass flow
				 Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	No. Short text			variables
437	Configuration incompatible		1. Update firmware	Vortex amplitude
	Measured variable status		2. Execute factory reset	 Calculated saturated steam pressure
	Quality	Good		DensityElectronics temperature
	Quality substatus	Ok		option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		Heat flow difference Venter lumbers
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	Si	hort text		variables
438	Dataset different		1. Check dataset file	Vortex amplitude
	Measured variable status		Check device parameterization Download new device parameterization	 Calculated saturated steam pressure
	Quality	Good		• Density
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	M		 Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables
453	Flow override active		Deactivate flow override	Vortex amplitudeCalculated saturated
	Measured variable status			steam pressure
	Quality	Good		DensityElectronics temperature
	Quality substatus	Ok		option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	С		Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	s	hort text		variables
482	Block in OOS		Set Block in AUTO mode	Vortex amplitude
	Measured variable status			 Calculated saturated steam pressure
	Quality	Good		Density
	Quality substatus	Ok		• Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	F		 Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	o. Short text			variables
484	Failure mode simulation a	ctive	Deactivate simulation	Vortex amplitude Calculated saturated
	Measured variable status			steam pressure
	Quality	Good		DensityElectronics temperature
	Quality substatus	Ok		option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	C		 Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	s	hort text		variables
485	Process variable simulation ac	tive	Deactivate simulation	Vortex amplitude
	Measured variable status			 Calculated saturated steam pressure
	Quality	Good		Density
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	С		Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
495	Diagnostic event simulation ac	tive	Deactivate simulation	_
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	С		
	Diagnostic behavior	Warning		

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables
497	497 Block output simulation active		Deactivate simulation	Vortex amplitudeCalculated saturated
	Measured variable status Quality Quality substatus Coding (hex) Status signal Diagnostic behavior	Good Ok Ox80 to 0x83 C Warning		steam pressure Density Electronics temperature option Energy flow Flow velocity Heat flow difference Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat
				 Steam quality

	Diagnostic information		Remedy instructions	Influenced measured
No.	s	hort text		variables
538	Flow computer configuration i	ncorrect	Check input value (pressure, temperature)	Vortex amplitude
	Measured variable status			 Calculated saturated steam pressure
	Quality	Good		Density Floatronics tomporature
	Quality substatus	Ok		• Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	S		Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
539	Flow computer configuration is	ncorrect	1. Check input value (pressure,	Vortex amplitude Calculated activities
	Measured variable status		temperature) 2. Check allowed values of the medium	 Calculated saturated steam pressure
	Quality	Good	properties	DensityElectronics temperature
	Quality substatus	Ok		option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	S		 Heat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
540	Flow computer configuration i	ncorrect	Check entered reference value using the	Vortex amplitude
	Measured variable status Quality Good document Operating Instructions	 Calculated saturated steam pressure 		
		Density		
	Quality substatus	Quality substatus Ok	 Electronics temperature option 	
Coding (hex) 0x80 to 0x8	0x80 to 0x83		Energy flowFlow velocity	
	Status signal S Diagnostic behavior Warning		 Heat flow difference 	
			Vortex kurtosisMass flow	
				Total mass flowPressure
				Reynolds numberSpecific volume
				Corrected volume flowSteam quality
				 Degrees of superheat
				Volume flowVortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	Short text			variables
570	Inverted delta heat		Check configuration of mounting location	Vortex amplitude
	Measured variable status		(parameter Installation direction)	 Calculated saturated steam pressure
	Quality	Bad		DensityElectronics temperature
	Quality substatus Function check		option	
	Coding (hex)	0x3C to 0x3F		Energy flowFlow velocity
	tatus signal F	 Heat flow difference 		
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure
				 Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

12.7.4 Diagnostic of process

	Diagnostic information		Remedy instructions	Influenced measured
No.	Si	hort text		variables
828	Ambient temperature too low		Increase ambient temperature of pre-	Vortex amplitude
	Measured variable status [from the factory] 1)		amplifier	 Calculated saturated steam pressure
	Quality	Good		Density Electronics to many anatoms
	Quality substatus Ok		• Electronics temperature option	
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	S		Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

¹⁾ Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic information		Remedy instructions	Influenced measured
No.	o. Short text			variables
829	1 3		Reduce ambient temperature of pre-	Vortex amplitudeCalculated saturated
	Measured variable status [from the factory] 1)		amplifier	steam pressure
	Quality	Good		Density
	Quality substatus	Ok		• Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	S		 Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
832	Electronics temperature too hi	gh	Reduce ambient temperature	Vortex amplitude
	Measured variable status [fro	om the factory] ¹⁾		 Calculated saturated steam pressure
	Quality	Good		Density
	Quality substatus	Ok		• Electronics temperature option
	Coding (hex)	0x80 to 0x83		■ Energy flow
	Status signal	S		Flow velocityHeat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic information		Remedy instructions	Influenced measured
No.	o. Short text			variables
833	Electronics temperature too lo		Increase ambient temperature	Vortex amplitudeCalculated saturated
	Measured variable status [fr	om the factory] 1)		steam pressure
	Quality	Good		Density
	Quality substatus	Ok		• Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	S		 Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	. Short text			variables
834	1 3		Reduce process temperature	Vortex amplitudeCalculated saturated
Quality Quality Coding	Measured variable status [fr	Good		steam pressure Density Electronics temperature
	Quality substatus Coding (hex)	Ok 0x80 to 0x83		option • Energy flow
	Status signal	S		Flow velocityHeat flow differenceVortex kurtosis
	Diagnostic behavior	Warning		 Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

¹⁾ Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic information		Remedy instructions	Influenced measured
No.	Short text			variables
835	5 Process temperature too low		Increase process temperature	Vortex amplitudeCalculated saturated
	Measured variable status [from the factory] 1)			steam pressure
	Quality	Good		Density Floatmania town and the second sec
	Quality substatus	Ok		Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	S		 Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.		Short text		variables
841	Operating range		Reduce flow velocity	Vortex amplitude
	Measured variable status [from the factory] ¹⁾		 Calculated saturated steam pressure
	Quality	Good		Density
	Quality substatus	Ok		• Electronics temperature option
	Coding (hex)	0x80 to 0x83		■ Energy flow
	Status signal	S		Flow velocityHeat flow difference
	Diagnostic behavior	Warning		Vortex kurtosisMass flow
				 Total mass flow
				PressureReynolds number
				Specific volumeCorrected volume flow
				Steam quality Degrees of superheat
				Degrees of superheatVolume flow
				 Vortex frequency

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic information		Remedy instructions	Influenced measured variables
No.	Jo. Short text			variables
842	Process value below limit		1. Decrease process value	Vortex amplitude
	Measured variable status		Check application Check sensor	 Calculated saturated steam pressure
	Quality	Good		 Density
	Quality substatus	Ok		• Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	S		 Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow
				Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	Short text			variables
844	Process value out of specificat	ion	Reduce flow velocity	Vortex amplitude
	Measured variable status [fr	om the factory] 1)		 Calculated saturated steam pressure
	Quality	Good		Density
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		■ Energy flow
	Status signal	S		Flow velocityHeat flow difference
	Diagnostic behavior	Warning		Vortex kurtosisMass flow
				 Total mass flow
				Pressure Poynolds number
				Reynolds numberSpecific volume
				Corrected volume flow
				Steam quality
				Degrees of superheatVolume flow
				Volume flow Vortex frequency

¹⁾ Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

162

	Diagnostic information		Remedy instructions	Influenced measured
No.		Short text		variables
870	Measuring inaccuracy increased		1. Check process	Vortex amplitude
	Measured variable status [from the factory] 1)		2. Increase flow volume	 Calculated saturated steam pressure
	Quality	Good		Density
	Quality substatus	Ok		• Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	S		Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	s	hort text		variables
871	Near steam saturation limit		Check process conditions	Vortex amplitude
	Measured variable status [from the factory] 1)		 Calculated saturated steam pressure 	
	Quality	Good		Density
	Quality substatus	Ok		• Electronics temperature option
	Coding (hex)	0x80 to 0x83		■ Energy flow
	Status signal	S		Flow velocityHeat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnos	tic information	Remedy instructions	Influenced measured
No.		Short text		variables
872	Wet steam detected		1. Check process	Vortex amplitude
	Measured variable status [from the factory] 1)		2. Check plant	 Calculated saturated steam pressure
	Quality	Good		Density Floatronics tomporature
	Quality substatus	Ok		• Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	S		 Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

Diagnostic information		Remedy instructions	Influenced measured	
No.		Short text		variables
873	Water detected Measured variable status [from the factory] 1)		Check process (water in piping)	Vortex amplitudeCalculated saturated
	Quality Quality substatus	Good Ok		steam pressure Density Electronics temperature option
	Coding (hex) Status signal	0x80 to 0x83		Energy flowFlow velocityHeat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

¹⁾ Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic information		Remedy instructions	Influenced measured
No.	o. Short text			variables
874	1		Check pressure, temperature	Vortex amplitude
			2. Check flow velocity 3. Check for flow fluctuation	 Calculated saturated steam pressure
	Quality	Good		DensityElectronics temperature
	Quality substatus	Ok		option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	S		 Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	s	hort text		variables
882	Measured variable status		1. Check input signal parameterization	Vortex amplitude
			Check external device Check process conditions	 Calculated saturated steam pressure
	Quality	Bad		Density
	Quality substatus	Maintenance alarm		 Electronics temperature option
	Coding (hex)	0x24 to 0x27		■ Energy flow
	Status signal	F		Flow velocityHeat flow difference
	Diagnostic behavior	Alarm		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	o. Short text			variables
945	Sensor range exceeded		Check immediately process conditions	Vortex amplitude
	Measured variable status [from the factory] 1)		(pressure-temperature rating)	 Calculated saturated steam pressure
	Quality	Good		DensityElectronics temperature
	Quality substatus	Ok		option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	S		Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	s	hort text		variables
946	Vibration detected		Check installation	Vortex amplitude Calculated saturated
	Measured variable status			steam pressure
	Quality	Good		Density
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	S		 Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	No. Short text			variables
947	Vibration exceeded		Check installation	Vortex amplitude Calculated saturated
	Measured variable status [from the factory] 1)			steam pressure
	Quality	Good		Density
	Quality substatus	Ok		Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	S		 Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
948	Signal quality bad		1. Check process conditions: wet gas,	Vortex amplitude
	Measured variable status		pulsation 2. Check installation: vibration	 Calculated saturated steam pressure
	Quality	Good		Density Floatronics tomporature
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		Energy flowFlow velocity
	Status signal	S		 Heat flow difference
	Diagnostic behavior	Warning		 Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

	Diagnostic	information	Remedy instructions	Influenced measured variables
No.	S	hort text		variables
972	Degrees of superheat limit exc	eeded	1. Controll process conditions	Vortex amplitude
	Measured variable status [from the factory] 1)		Install pressure transmitter or enter correct fixed pressure value	 Calculated saturated steam pressure
	Quality	Good		Density
	Quality substatus	Ok		 Electronics temperature option
	Coding (hex)	0x80 to 0x83		■ Energy flow
	Status signal	S		Flow velocityHeat flow difference
	Diagnostic behavior	Warning		 Neat flow unference Vortex kurtosis Mass flow Total mass flow Pressure Reynolds number Specific volume Corrected volume flow Steam quality Degrees of superheat Volume flow Vortex frequency

12.7.5 Operating conditions for displaying the following diagnostics information

- Operating conditions for displaying the following diagnostics information:
 - **871 Near steam saturation limit** diagnostic message: The process temperature is less than 2K from the saturated steam line.
 - Diagnostics information 872: The measured steam quality has dropped below the configured limit value for the steam quality (limit value: Expert → System → Diagnostic handling → Diagnostic limits → Steam quality limit).
 - Diagnostics information 873: The process temperature is ≤ 0 °C.
 - Diagnostics information 972: The degree of superheat has exceeded the configured limit value (limit value: Expert → System → Diagnostic handling → Diagnostic limits → Degrees of superheat limit).

12.7.6 Emergency mode in event of temperature compensation

- ► Change temperature measurement: PT1+PT2 to the **PT1** option, **PT2** option or the **Off** option.
 - If the **Off** option is selected, the measuring device calculates by using the fixed process pressure.


12.8 Pending diagnostic events

The Diagnostics menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

- To call up the measures to rectify a diagnostic event:
 - Via local display $\rightarrow = 132$
 - Via "FieldCare" operating tool → 🖺 134

Navigation

"Diagnostics" menu

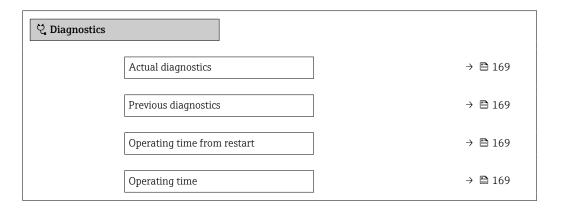

Parameter overview with brief description


Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occured diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
		If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	-	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	-	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

12.9 Diagnostics list

Up to 5 currently pending diagnostic events can be displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path

  ${\tt Diagnostics} \rightarrow {\tt Diagnostic} \ {\tt list}$



Using the example of the local display

To call up the measures to rectify a diagnostic event:

- Via local display → 🖺 132
- Via "FieldCare" operating tool → 🖺 134
- Via "DeviceCare" operating tool →

 134

 
12.10 Event logbook

12.10.1 Reading out the event logbook

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

Navigation path

Diagnostics menu → **Event logbook** submenu → Events list



A0014008-E

■ 23 Using the example of the local display

- A maximum of 20 event messages can be displayed in chronological order.
- If the **Extended HistoROM** application package (order option) is enabled in the device, the event list can contain up to 100 entries.

The event history includes entries for:

- Diagnostic events → 🖺 136
- Information events → 🖺 171

In addition to the operating time when the event occurred, each event is also assigned a symbol that indicates whether the event has occurred or is finished:

- Diagnostics event
 - • : Occurrence of the event
 - 🕒: End of the event
- Information event
 - €: Occurrence of the event
- To call up the measures to rectify a diagnostic event:
 - Via local display →

 132
 - Via "FieldCare" operating tool → 🖺 134
- For filtering the displayed event messages $\rightarrow = 170$

12.10.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

Navigation path

Diagnostics \rightarrow Event logbook \rightarrow Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.10.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
I1000	(Device ok)
I1079	Sensor changed
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	HistoROM backup deleted
I1110	Write protection switch changed
I1137	Electronics changed
I1151	History reset
I1155	Reset electronics temperature
I1156	Memory error trend
I1157	Memory error event list
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1227	Sensor emergency mode activated
I1228	Sensor emergency mode failed
I1256	Display: access status changed
I1335	Firmware changed
I1361	Web server: login failed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1444	Device verification passed
I1445	Device verification failed
I1459	I/O module verification failed
I1461	Sensor verification failed
I1512	Download started
I1513	Download finished
I1514	Upload started

Info number	Info name
I1515	Upload finished
I1552	Failed: Main electronic verification
I1553	Failed: Pre-amplifier verification
I1622	Calibration changed
I1624	All totalizers reset
I1625	Write protection activated
I1626	Write protection deactivated
I1627	Web server: login successful
I1629	CDI: login successful
I1631	Web server access changed
I1634	Reset to factory settings
I1635	Reset to delivery settings
I1649	Hardware write protection activated
I1650	Hardware write protection deactivated

12.11 Resetting the device

The entire device configuration or some of the configuration can be reset to a defined state with the **Device reset** parameter ($\Rightarrow \triangleq 107$).

12.11.1 Function scope of the "Device reset" parameter

Options	Description	
Cancel	No action is executed and the user exits the parameter.	
To factory defaults	Every parameter is reset to the factory setting.	
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to the customer-specific value. All other parameters are reset to the factory setting. This option is not visible if no customer-specific settings have been ordered.	
Restart device	The restart resets every parameter with data stored in volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.	

12.12 Device information

The **Device information** submenu contains all parameters that display different information for device identification.

Navigation

"Diagnostics" menu \rightarrow Device information

► Device information	
Device tag	→ 🖺 173
Serial number	→ 🖺 173

Firmware version	→ 🖺 173
Device name	→ 🖺 173
Order code	→ 🖺 173
Extended order code 1	→ 🖺 173
Extended order code 2	→ 🗎 173
Extended order code 3	→ 🖺 174
ENP version	→ 🗎 174

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Device tag	Shows name of measuring point.	Character string comprising numbers, letters and special characters	- none -
Serial number	Shows the serial number of the measuring device.	Max. 11-digit character string comprising letters and numbers.	-
Firmware version	Shows the device firmware version installed.	Character string in the format xx.yy.zz	-
Device name	Shows the name of the transmitter. The name can be found on the nameplate of the transmitter.	Character string comprising numbers, letters and special characters	-
Device name	Shows the name of the transmitter. The name can be found on the nameplate of the transmitter.	Character string comprising numbers, letters and special characters	Prowirl200APL
Order code	Shows the device order code. The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks (e.g. /).	-
Extended order code 1	Shows the 1st part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
Extended order code 2	Shows the 2nd part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-

Parameter	Description	User interface	Factory setting
Extended order code 3	Shows the 3rd part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	_
ENP version	Shows the version of the electronic nameplate (ENP).	Character string	2.02.00

12.13 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
04.2025	01.00.zz	Option 70 -	No change in firmware	Operating Instructions	BA02133D/06/EN/02.25
2023	01.00.zz	Option 70-	Original firmware	Operating Instructions	BA02133D/06/EN/01.21

- It is possible to flash the firmware to the current version or an existing previous version via the service interface.
- For the compatibility of the firmware version with the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.
- The manufacturer's information is available:
 - \blacksquare In the Download Area of the Endress+Hauser Web site: www.endress.com \to Downloads
 - Specify the following details:
 - Product root: e.g. 7F2C
 The product root is the first part of the order code: see the nameplate on the device.
 - Text search: Manufacturer's information
 - Media type: Documentation Technical Documentation

13 Maintenance

13.1 Maintenance tasks

No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

13.1.2 Interior cleaning

NOTICE

The use of unsuitable equipment or cleaning liquids can damage the transducer.

▶ Do not use pigs to clean the pipe.

13.1.3 Replacing seals

Replacing sensor seals

NOTICE

Seals in contact with fluid must always be replaced!

▶ Only Endress+Hauser sensor seals may be used: replacement seals

Replacing housing seals

NOTICE

When using the device in a dusty atmosphere:

- only use the associated Endress+Hauser housing seals.
- 1. Replace defect seals only with original seals from Endress+Hauser.
- 2. The housing seals must be clean and undamaged when inserted into their grooves.
- 3. Dry, clean or replace the seals if necessary.

13.2 Measuring and test equipment

Endress+Hauser offers a variety of measuring and testing equipment, such as Netilion or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment: $\rightarrow \implies 180$

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repair

14.1 General notes

14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

14.1.2 Notes for repair and conversion

For repair and conversion of a measuring device, observe the following notes:


- ▶ Use only original Endress+Hauser spare parts.
- ► Carry out the repair according to the Installation Instructions.
- ▶ Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ▶ Document all repairs and conversions and enter the details in Netilion Analytics.

14.2 Spare parts

Some interchangeable measuring device components are listed on an overview sign in the connection compartment cover.

The spare part overview sign contains the following information:

- A list of the most important spare parts for the measuring device, including their ordering information.
- The URL to the *Device Viewer* (www.endress.com/deviceviewer):
 All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

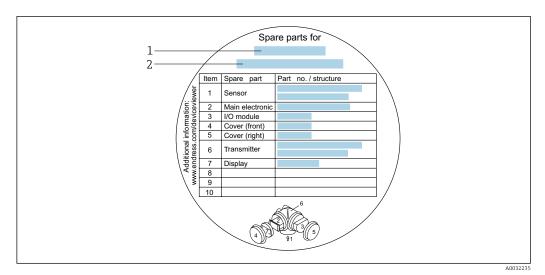

■ 24 Example for "Spare part overview sign" in connection compartment cover

- 1 Measuring device name
- 2 Measuring device serial number
- Measuring device serial number:
 - Is located on the device nameplate and the spare part overview sign.
 - Can be read out via the Serial number parameter (→

 173) in the Device information submenu.

14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

Your Endress+Hauser Sales Center can provide detailed information on the services.

14.4 Return

The requirements for safe device return can vary depending on the device type and national legislation.

- 1. Refer to the web page for information: https://www.endress.com/support/return-material
 - ► Select the region.
- 2. If returning the device, pack the device in such a way that it is reliably protected against impact and external influences. The original packaging offers the best protection.

14.5 Disposal

If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

14.5.1 Removing the measuring device

1. Switch off the device.

A WARNING

Danger to persons from process conditions!

- ▶ Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive media.
- 2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

14.5.2 Disposing of the measuring device

A WARNING

Danger to personnel and environment from fluids that are hazardous to health.

► Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- ▶ Observe valid federal/national regulations.
- ► Ensure proper separation and reuse of the device components.

15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress +Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Device-specific accessories

15.1.1 For the transmitter

Accessories	Description
Prowirl 200 transmitter	Transmitter for replacement or storage. Use the order code to define the following specifications: Approvals Output, input Display/operation Housing Software Installation Instructions EA01056D (Order number: 7X2CXX)
Domoto dianlay	THYEO housing for accommodating a display module
Remote display FHX50	FHX50 housing for accommodating a display module . FHX50 housing suitable for: SD02 display module (push buttons) SD03 display module (touch control) Length of connecting cable: up to max. 60 m (196 ft) (cable lengths available for order: 5 m (16 ft), 10 m (32 ft), 20 m (65 ft), 30 m (98 ft))
	The measuring instrument can be ordered with the FHX50 housing and a display module. The following options must be selected in the separate order codes: Order code for measuring instrument, feature 030: Option L or M "Prepared for FHX50 display" Order code for FHX50 housing, feature 050 (device version): Option A "Prepared for FHX50 display" Order code for FHX50 housing, depends on the desired display module in feature 020 (display, operation): Option C: for an SD02 display module (push buttons) Option E: for an SD03 display module (touch control)
	The FHX50 housing can also be ordered as a retrofit kit. The measuring instrument display module is used in the FHX50 housing. The following options must be selected in the order code for the FHX50 housing: Feature 050 (measuring instrument version): option B "Not prepared for FHX50 display" Feature 020 (display, operation): option A "None, existing displayed used" Special Documentation SD01007F (Order number: FHX50)
Overvoltage protection for 2-wire devices	The use of an external overvoltage protection, e.g. HAW 569, is recommended.
Protective cover	The protective cover is used to protect against direct sunlight, precipitation and ice. It can be ordered together with the device via the product structure: Order code for "Accessories enclosed" option PB "Protective cover" Special Documentation SD00333F (Order number: 71162242)
Transmitter holder (pipe mounting)	To secure the remote version to the pipe DN 20 to 80 (3/4 to 3") Order code for "Accessory enclosed", option PM

15.1.2 For the sensor

Accessories	Description
Mounting set	Mounting set for disc (wafer version) comprising: Tie rods Seals Nuts Washers Installation Instructions EA00075D (Order number: DK7D)
Flow conditioner	Is used to shorten the necessary inlet run. (Order number: DK7ST) Dimensions of flow conditioner

15.2 Service-specific accessories

Accessories	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring instruments: Choice of measuring instruments for industrial requirements Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy. Graphic display of the calculation results Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.
	Applicator is available: Via the Internet: https://portal.endress.com/webapp/applicator
Netilion	lloT ecosystem: Unlock knowledge With the Netilion IIoT ecosystem,Endress+Hauser allows you to optimize your plant performance, digitize workflows, share knowledge, and enhance collaboration. Drawing upon decades of experience in process automation, Endress+Hauser offers the process industry an IIoT ecosystem designed to effortlessly extract insights from data. These insights allow process optimization, leading to increased plant availability, efficiency, and reliability - ultimately resulting in a more profitable plant. www.netilion.endress.com
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all intelligent field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition. Operating Instructions BA00027S and BA00059S
DeviceCare	Tool to connect and configure Endress+Hauser field devices. Innovation brochure IN01047S

15.3 System components

Accessories	Description
Memograph M graphic data manager	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick. Technical Information TI00133R Operating Instructions BA00247R

16 Technical data

16.1 Application

The measuring device is intended for the flow measurement of liquids, gas and steam.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

16.2 Function and system design

Measuring principle

Vortex meters work on the principle of the Karman vortex street.

Measuring system

The device consists of a transmitter and a sensor.

Two device versions are available:

- Compact version transmitter and sensor form a mechanical unit.
- Remote version transmitter and sensor are mounted in separate locations.

For information on the structure of the measuring instrument $\rightarrow \implies 12$

16.3 Input

Measured variable

Direct measured variables

Order code for "Sensor version; DSC sensor; measuring tube"		
Option Description Measured variable		Measured variable
AA	Volume; 316L; 316L	Volume flow
BA Volume high-temperature; 316L; 316L		

Order code for "Sensor version; DSC sensor; measuring tube"		
Option	Description	Measured variable
CA	Mass; 316L; 316L (integrated temperature measurement)	Volume flowTemperature

Calculated measured variables

Order code for "Sensor version; DSC sensor; measuring tube"		
Option	Description	Measured variable
AA	Volume; 316L; 316L	Under constant process conditions:
BA	Volume high-temperature; 316L; 316L	 Mass flow ¹⁾ Corrected volume flow
		The totalized values for: Volume flow Mass flow Corrected volume flow

A fixed density must be entered for calculating the mass flow (Setup menu → Advanced setup submenu → External compensation submenu → Fixed density parameter).

Order code for "Sensor version; DSC sensor; measuring tube"		
Option	Description	Measured variable
CA	Mass; 316L; 316L (integrated temperature measurement)	 Corrected volume flow Mass flow Calculated saturated steam pressure Energy flow Heat flow difference Specific volume Degrees of superheat

Order cod	Order code for "Sensor version; DSC sensor; measuring tube"		
Option	Description	Measured variable	
AA	Volume; 316L; 316L	Under constant process conditions:	
AB	Volume; Alloy C22; 316L	 Mass flow ¹⁾ Corrected volume flow 	
AC	Volume; Alloy C22; Alloy C22	The totalized values for:	
BA	Volume high-temperature; 316L; 316L	■ Volume flow ■ Mass flow	
BB	Volume high-temperature; Alloy C22; 316L	Corrected volume flow	

A fixed density must be entered for calculating the mass flow (Setup menu → Advanced setup submenu → External compensation submenu → Fixed density parameter).

Order co	Order code for "Sensor version; DSC sensor; measuring tube"	
Option	Description	Measured variable
CA	Mass; 316L; 316L (integrated temperature measurement)	Corrected volume flow
СВ	Mass; Alloy C22; 316L (integrated temperature measurement)	Mass flowCalculated saturated steam pressureEnergy flow
CC	Mass; Alloy C22; Alloy C22 (integrated temperature measurement)	Heat flow differenceSpecific volumeDegrees of superheat
DA	Mass steam; 316L; 316L (integrated pressure/temperature measurement)	- Degrees of supernear
DB	Mass gas/liquid; 316L; 316L (integrated pressure/temperature measurement)	

Measuring range

The measuring range is dependent on the nominal diameter, the fluid and environmental influences.

The following specified values are the largest possible flow measuring ranges (Q_{min} to Q_{max}) for each nominal diameter. Depending on the fluid properties and environmental influences, the measuring range may be subject to additional restrictions. Additional restrictions apply to both the lower range value and the upper range value.

Flow measuring ranges in SI units


DN [mm]	Liquids [m³/h]	Gas/steam [m³/h]
15	0.06 to 4.9	0.3 to 25
25	0.18 to 15	0.9 to 125
40	0.45 to 37	2.3 to 308
50	0.75 to 62	3.8 to 821
80	1.7 to 138	8.5 to 1843

DN [mm]	Liquids [m³/h]	Gas/steam [m³/h]
100	2.9 to 239	15 to 3 192
150	6.7 to 545	33 to 7262

Flow measuring ranges in US units

DN	Liquids	Gas/steam
[in]	[ft³/min]	[ft³/min]
1/2	0.035 to 2.9	0.18 to 15
1	0.11 to 8.8	0.54 to 74
1½	0.27 to 22	1.3 to 181
2	0.44 to 36	2.2 to 483
3	1 to 81	5 to 1085
4	1.7 to 140	8.7 to 1879
6	3.9 to 320	20 to 4272

Flow velocity

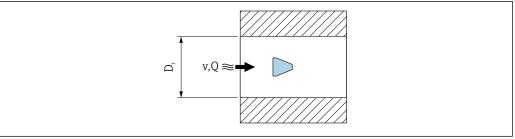

A0033469

- D_i Internal diameter of measuring tube (corresponds to dimension K)
- v Velocity in mating pipe
- Q Flow

The internal diameter of measuring tube $D_{\rm i}$ is denoted in the dimensions as dimension K.

$$v [m/s] = \frac{4 \cdot Q [m^{3}/h]}{\pi \cdot D_{i} [m]^{2}} \cdot \frac{1}{3600 [s/h]}$$
$$v [ft/s] = \frac{4 \cdot Q [ft^{3}/min]}{\pi \cdot D_{i} [ft]^{2}} \cdot \frac{1}{60 [s/min]}$$

A003430

Lower range value

Reynolds number

A restriction applies to the lower range value due to the turbulent flow profile, which only occurs with Reynolds numbers greater than 5 000. The Reynolds number is dimensionless and indicates the ratio of the inertia force of a fluid to its viscous force when flowing and is used as a characteristic variable for pipe flows. In the case of pipe flows with Reynolds

numbers less than 5 000, periodic vortices are no longer generated and flow rate measurement is no longer possible.

The Reynolds number is calculated as follows:

$$Re = \frac{4 \cdot Q \left[m^3/s\right] \cdot \rho \left[kg/m^3\right]}{\pi \cdot D_i \left[m\right] \cdot \mu \left[Pa \cdot s\right]}$$

$$Re \, = \, \frac{4 \cdot Q \, \left[ft^3/s\right] \cdot \rho \, \left[lbm/ft^3\right]}{\pi \cdot D_i \, \left[ft\right] \cdot \mu \, \left[lbf \cdot s/ft^2\right]}$$

A003429

Re Reynolds number

Q Flow

 D_i Internal diameter of measuring tube (corresponds to dimension K)

μ Dynamic viscosity

ρ Density

The Reynolds number 5 000, together with the density and viscosity of the fluid and the nominal diameter, is used to calculate the corresponding flow rate.

$$Q_{Re-5000} [m^{3}/h] = \frac{5000 \cdot \pi \cdot D_{i} [m] \cdot \mu [Pa \cdot s]}{4 \cdot \rho [kg/m^{3}]} \cdot 3600 [s/h]$$

$$Q_{\text{Re-5000}}\left[ft^3/h\right] = \frac{5000 \cdot \pi \cdot D_{_i}\left[ft\right] \cdot \mu\left[lbf \cdot s/ft^2\right]}{4 \cdot \rho\left[lbm/ft^3\right]} \cdot 60 \; [s/min]$$

A0034302

 $Q_{Re=5000}$ Flow rate is dependent on the Reynolds number

 D_i Internal diameter of measuring tube (corresponds to dimension K)

μ Dynamic viscosity

ρ Density

Minimum measurable flow velocity based on signal amplitude

The measuring signal must have a certain minimum signal amplitude so that the signals can be evaluated without any errors. Using the nominal diameter, the corresponding flow can also be derived from this amplitude.

The minimum signal amplitude depends on the setting for the sensitivity of the DSC sensor, the steam quality \mathbf{x} and the force of the vibrations present \mathbf{a} .

The value \mathbf{mf} corresponds to the lowest measurable flow velocity without vibration (no wet steam) for a density of 1 kg/m³ (0.0624 lbm/ft³).

The value \mathbf{mf} can be set in the range of 20 to 6 m/s (6 to 1.8 ft/s) (factory setting 12 m/s (3.7 ft/s)) with the **Sensitivity** parameter (value range 1 to 9, factory setting 5).

$$v_{\text{AmpMin}} [\text{m/s}] = \max \begin{cases} \frac{\text{mf } [\text{m/s}]}{x^2 \cdot \sqrt{\frac{\rho [\text{kg/m}^3]}{1 [\text{kg/m}^3]}}} \\ \frac{\sqrt{50[\text{m}] \cdot \text{a} [\text{m/s}^2]}}{x^2} \end{cases}$$

$$v_{\text{AmpMin}} [\text{ft/s}] = \max \begin{cases} \frac{\text{mf } [\text{ft/s}]}{x^2 \cdot \sqrt{\frac{\rho [\text{lbm/ft}^3]}{0.0624 [\text{lbm/ft}^3]}}} \\ \frac{\sqrt{164[\text{ft}] \cdot \text{a} [\text{ft/s}^2]}}{x^2} \end{cases}$$

Minimum measurable flow velocity based on signal amplitude

Sensitivity mf χ Steam quality Density ρ

Minimum measurable flow rate based on signal amplitude

$$Q_{\text{AmpMin}}\left[m^3/h\right] = \frac{v_{\text{AmpMin}}\left[m/s\right] \cdot \pi \cdot (D_i\left[m\right])^2}{4} \cdot 3600 \left[s/h\right]$$

$$Q_{\text{AmpMin}}\left[ft^3/min\right] = \frac{v_{\text{AmpMin}}\left[ft/s\right] \cdot \pi \cdot (D_i\left[ft\right])^2}{4} \cdot 60 \left[s/min\right]$$

A0034304

 Q_{AmpMin} Minimum measurable flow rate based on signal amplitude

Minimum measurable flow velocity based on signal amplitude v_{AmpMin}

Internal diameter of measuring tube (corresponds to dimension K) D_i

Density ρ

Effective lower range value

The effective lower range value Q_{Low} is determined using the largest of the three values Q_{min} , $Q_{Re = 5000}$ and Q_{AmpMin} .

$$\begin{split} Q_{\text{Low}} \left[m^3 / h \right] &= max \; \left\{ \begin{array}{c} Q_{\text{min}} \left[m^3 / h \right] \\ Q_{\text{Re-5000}} \left[m^3 / h \right] \\ Q_{\text{AmpMin}} \left[m^3 / h \right] \\ \\ Q_{\text{Low}} \left[ft^3 / min \right] &= max \; \left\{ \begin{array}{c} Q_{\text{min}} \left[ft^3 / min \right] \\ Q_{\text{Re-5000}} \left[ft^3 / min \right] \\ Q_{\text{AmpMin}} \left[ft^3 / min \right] \end{array} \right. \end{split}$$

A0034313

 Q_{Low} Effective lower range value Q_{min} Minimum measurable flow rate

 $Q_{Re=5000}$ Flow rate is dependent on the Reynolds number

 Q_{AmpMin} Minimum measurable flow rate based on signal amplitude

The Applicator is available for calculation purposes.

Upper range value

Maximum measurable flow rate based on signal amplitude

The measuring signal amplitude must be below a certain limit value to ensure that the signals can be evaluated without error. This results in a maximum permitted flow rate Q_{AmpMax} .

$$Q_{\text{AmpMax}} \left[m^3 / h \right] = \frac{\text{URV} \left[m / s \right] \cdot \pi \cdot D_i \left[m \right]^2}{4 \cdot \sqrt{\frac{\rho \left[kg / m^3 \right]}{1 \left[kg / m^3 \right]}}} \cdot 3600 \left[s / h \right]$$

$$Q_{\text{\tiny AmpMax}}\left[ft^3/min\right] = \frac{URV\left[ft/s\right] \cdot \pi \cdot D_{_i}\left[ft\right]^2}{4 \cdot \sqrt{\frac{\rho\left[lbm/ft^3\right]}{0.0624\left[lbm/ft^3\right]}}} \cdot 60\left[s/min\right]$$

A003431

 Q_{AmpMax} Maximum measurable flow rate based on signal amplitude

 D_i Internal diameter of measuring tube (corresponds to dimension K)

ρ Density

URV Limit value for determining the maximum flow rate:

- DN 15 to 40: URV = 350
- DN 50 to 300: URV = 600
- NPS ½ to 1½: URV = 1148
- NPS 2 to 12: URV = 1969

Restricted upper range value is dependent on Mach number

For gas applications, an additional restriction applies to the upper range value with regard to the Mach number in the measuring instrument, which must be less than 0.3. The Mach number Ma describes the ratio of the flow velocity v to the sound velocity c in the fluid.

$$Ma = \frac{v [m/s]}{c [m/s]}$$

$$Ma = \frac{v [ft/s]}{c [ft/s]}$$

A0034321

Ma Mach number

v Flow velocity

c Speed of sound

The corresponding flow rate can be derived using the nominal diameter.

$$Q_{_{Ma=0.3}}\left[m^{3}/h\right] = \frac{0.3 \cdot c \left[m/s\right] \cdot \pi \cdot D_{_{i}}\left[m\right]^{2}}{4} \cdot 3600 \left[s/h\right]$$

$$Q_{Ma=0.3} [ft^{3}/min] = \frac{0.3 \cdot c [ft/s] \cdot \pi \cdot D_{_{i}} [ft]^{2}}{4} \cdot 60 [s/min]$$

 $Q_{Ma=0.3}$ Restricted upper range value is dependent on Mach number

С Speed of sound

 D_i *Internal diameter of measuring tube (corresponds to dimension K)*

Density

Effective upper range value

The effective upper range value Q_{High} is determined using the smallest of the three values Q_{max} , Q_{AmpMax} and $Q_{Ma=0.3}$.

$$\begin{split} Q_{\text{High}}\left[m^{3}/h\right] &= min \; \begin{cases} &Q_{\text{max}}\left[m^{3}/h\right] \\ &Q_{\text{AmpMax}}\left[m^{3}/h\right] \\ &Q_{\text{Ma}=0.3}\left[m^{3}/h\right] \end{cases} \\ \\ Q_{\text{High}}\left[ft^{3}/\text{min}\right] &= min \; \begin{cases} &Q_{\text{max}}\left[ft^{3}/\text{min}\right] \\ &Q_{\text{AmpMax}}\left[ft^{3}/\text{min}\right] \\ &Q_{\text{Ma}=0.3}\left[ft^{3}/\text{min}\right] \end{cases} \end{split}$$

Effective upper range value Q_{High}

 Q_{max} Maximum measurable flow rate

Maximum measurable flow rate based on signal amplitude

Restricted upper range value is dependent on Mach number

For liquids, the occurrence of cavitation may also restrict the upper range value.



The Applicator is available for calculation purposes.

Operable flow range

The value, which is typically up to 49: 1, may vary depending on the operating conditions (ratio between upper range value and lower range value)

Input signal

External measured values

To increase the measurement accuracy of certain measured variables or to calculate the corrected volume flow, the automation system can continuously write different measured values to the measuring instrument:

- Operating pressure to increase measurement accuracy (Endress+Hauser recommends the use of a pressure measuring instrument for absolute pressure, e.g. Cerabar M or Cerabar S)
- Medium temperature to increase measurement accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow



- Various pressure measuring devices can be ordered as accessories from Endress+Hauser.
- If using pressure measuring devices, pay attention to outlet runs when installing external devices → ≅ 22.

If the device does not have temperature compensation, it is recommended that external pressure measurement values be read in so that the following measured variables can be calculated:

- Energy flow
- Mass flow
- Corrected volume flow

Digital communication

The measured values are written from the automation system to the measuring instrument via PROFINET.

16.4 Output

Output signal

PROFINET over Ethernet-APL

Device use	Device connection to an APL field switch The device may only be operated according to the following APL port classifications: If used in hazardous areas: SLAA or SLAC 1) If used in non-hazardous areas: SLAX Connection values of APL field switch (corresponds to APL port classification SPCC or SPAA):
	 Maximum input voltage: 15 V_{DC} Minimum output values: 0.54 W Device connection to an SPE switch
	If used in non-hazardous areas: suitable SPE switch SPE switch prerequisite:
	 Support of 10BASE-T1L standard Support of PoDL power class 10, 11 or 12 Detection of SPE field devices without integrated PoDL module
	Connection values of SPE switch: • Maximum input voltage: 30 V _{DC} • Minimum output values: 1.85 W
PROFINET	According to IEC 61158 and IEC 61784
Ethernet-APL	According to IEEE 802.3cg, APL port profile specification v1.0, galvanically isolated
Data transfer	10 Mbit/s Full-duplex
Current consumption	Transmitter
	Max. 55.56 mA

Permitted supply voltage	 Ex: 9 to 15 V Non-Ex: 9 to 30 V
Network connection	With integrated reverse polarity protection

For more information on using the device in the hazardous area, see the Ex-specific Safety Instructions

Signal on alarm

Depending on the interface, failure information is displayed as follows:

PROFINET over Ethernet-APL

Device diagnostics	Diagnostics according to PROFINET PA Profile 4.02
--------------------	---

Local display

Plain text display	With information on cause and remedial measures	
Backlight	Additionally for device version with SD03 local display: red lighting indicates a device error.	



Status signal as per NAMUR recommendation NE 107

Interface/protocol

- Via digital communication: PROFINET over Ethernet-APL
- Via service interface Endress+Hauser Common Data Interface (CDI)

Plain text display	With information on cause and remedial measures
--------------------	---

Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes
	The following information is displayed depending on the device version: Supply voltage active Data transmission active Network available Connection established PROFINET blinking feature
	Diagnostic information via light emitting diodes $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $

Low flow cut off	The switch points for lo	The switch points for low flow cut off are preset and can be configured.		
Galvanic isolation	All inputs and outputs a	are galvanically isolated from one another.		
Protocol-specific data	Protocol	Application layer protocol for decentral device periphery and distributed automation, Version 2.43		
	Communication type	Ethernet Advanced Physical Layer 10BASE-T1L		
	Conformance Class	Conformance Class B (PA)		

Netload Class	PROFINET Netload Robustness Class 2 10 Mbit/s	
Data transfer	10 Mbit/s Full-duplex	
Cycle times	64 ms	
Polarity	Automatic correction of crossed "APL signal +" and "APL signal -" signal lines	
Media Redundancy Protocol (MRP)	Not possible (point-to-point connection to APL field switch)	
System redundancy support	System redundancy S2 (2 AR with 1 NAP)	
Device profile	PROFINET PA profile 4.02 (Application interface identifier API: 0x9700)	
Manufacturer ID	17	
Device type ID	0xA438	
Device description files (GSD, DTM, FDI)	Information and files available at: ■ www.endress.com → Downloads area ■ www.profibus.com	
Supported connections	 2x AR (IO Controller AR) 2x AR (IO Supervisor Device AR connection allowed) 	
Configuration options for measuring instrument	 Asset management software (FieldCare, DeviceCare, Field Xpert) Integrated Web server via Web browser and IP address Device master file (GSD), can be read out via the integrated Web server of the measuring instrument. Onsite operation 	
Configuration of the device name	 DCP protocol Asset management software (FieldCare, DeviceCare, Field Xpert) Integrated web server 	
Supported functions	 Identification & Maintenance, simple device identifier via: Control system Nameplate Measured value status The process variables are communicated with a measured value status Blinking feature via the local display for simple device identification and assignment Device operation via asset management software (e.g. FieldCare, DeviceCare, SIMATIC PDM with FDI package) 	
System integration	Information regarding system integration . Cyclic data transmission Overview and description of the modules Status coding Factory setting	

16.5 Power supply

Available device plugs	→ 🖺 31
Terminal assignment	→ 🗎 30

Supply voltage **Transmitter**

The following supply voltage values apply for the outputs available:

Supply voltage for a compact version

Order code for "Output; input"	Minimum Terminal voltage	Maximum Terminal voltage
Option S : PROFINET over Ethernet-AP	L ≥ DC 9 V	Non-Ex: DC 30 V Ex: DC max. 15 V

🊹 Transient overvoltage: Up to overvoltage category I

Power consumption

Transmitter

Maximum power consumption
Operation with output 1: Ex: 833 mW Non-Ex: 1.5 W

Current consumption

20 to 55.56 mA

Power supply failure

- Totalizers stop at the last value measured.
- Depending on the device version, the configuration is retained in the device memory or in the pluggable data memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

Electrical connection

→ 🖺 33

Potential equalization

→ 🖺 39

Terminals

For device version without integrated overvoltage protection: plug-in spring terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)

Cable entries



The type of cable entry available depends on the specific device version.

Cable gland (not for Ex d)

 $M20 \times 1.5$

Thread for cable entry

- NPT ½"
- G ½"
- M20 × 1.5

Cable specification

→ 🖺 29

Overvoltage protection

The use of an external overvoltage protection, e.g. HAW 569, is recommended.

16.6 Performance characteristics


Reference operating conditions

- Error limits following ISO/DIN 11631
- +20 to +30 °C (+68 to +86 °F)
- 2 to 4 bar (29 to 58 psi)
- Calibration system traceable to national standards
- Calibration with the process connection corresponding to the particular standard

Maximum measurement error

Base accuracy

o.r. = of reading

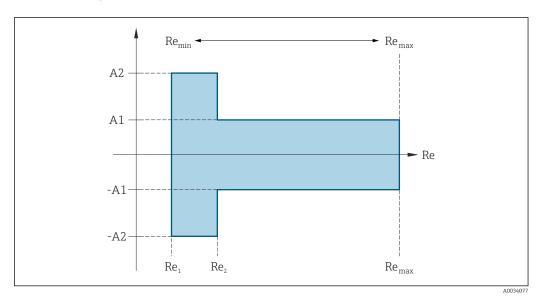

Volume flow

Medium type		Incompressible	Compressible 1)
Reynolds number range Measurement error		Standard	Standard
Re ₁ to Re ₂	A2	< 10 %	< 10 %
Re ₂ to Re _{max}	A1	< 0.75 %	< 1.0 %

1) Accuracy specifications valid up to 75 m/s (246 ft/s)

Temperature

- Saturated steam and liquids at room temperature if T > 100 $^{\circ}$ C (212 $^{\circ}$ F) applies: < 1 $^{\circ}$ C (1.8 $^{\circ}$ F)
- Gas: < 1 % o.r. [K]

Rise time 50 % (stirred under water, following IEC 60751): 8 s

Mass flow saturated steam

Process pressure [bar abs.]	Flow velocity [m/s (ft/s)]	Reynolds number range	Measurement error	Standard
> 4.76	20 to 50 (66 to 164)	Re ₂ to Re _{max}	A1	< 1.7 %
> 3.62	10 to 70 (33 to 230)	Re ₂ to Re _{max}	A1	< 2 %

Mass flow of superheated steam/gases 4) 5)

Process pressure [bar abs. (psi abs.)]	Reynolds number range	Measurement error	Standard 1)
< 40 (580)	Re ₂ to Re _{max}	A1	< 1.7 %
< 120 (1740)	Re ₂ to Re _{max}	A1	< 2.6 %

 The use of a Cerabar S is required for the measurement errors listed in the following section. The measurement error used to calculate the error in the measured pressure is 0.15 %.

Water mass flow

Reynolds number range	Measurement error	Standard
$Re = Re_2$	A1	< 0.85 %
Re ₁ to Re ₂	A2	< 10 %

Mass flow (user-specific liquids)

To specify the system accuracy, Endress+Hauser requires information about the type of liquid and its operating temperature or information in table form about the dependency between the liquid density and the temperature.

Example

- Acetone is to be measured at fluid temperatures from +70 to +90 °C (+158 to +194 °F).
- For this purpose, the **Reference temperature** parameter (7703) (here 80 °C (176 °F)), **Reference density** parameter (7700) (here 720.00 kg/m³) and **Linear expansion coefficient** parameter (7621) (here 18.0298 × 10⁻⁴ 1/°C) must be entered in the transmitter.
- The overall system uncertainty, which is less than 0.9 % for the example above, is comprised of the following measurement uncertainties: uncertainty of volume flow measurement, uncertainty of temperature measurement, uncertainty of the density-temperature correlation used (including the resulting uncertainty of density).

Mass flow (other media)

Depends on the selected fluid and the pressure value, which is specified in the parameters. Individual error analysis must be performed.

Accuracy of outputs

The outputs have the following base accuracy specifications.

Pulse/frequency output

o.r. = of reading

⁴⁾ Single gas, gas mixture, air: NEL40; natural gas: ISO 12213-2 contains AGA8-DC92, AGA NX-19, ISO 12213-3 contains SGERG-88 and AGA8 Gross Method 1

⁵⁾ The measuring instrument is calibrated with water and has been verified under pressure on gas calibration rigs.


Accuracy	Max. ±100 ppm o.r.
riccuracy	With ±100 ppin on

Repeatability

o.r. = of reading

$$r = \left\{ \frac{100 \cdot D_i^3}{V} \right\}^{1/2} \% \text{ o.r.}$$

A0042121-FN

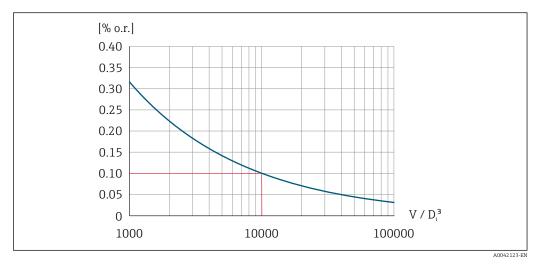

■ 25 Repeatability = 0.1 % o.r. with a measured volume $[m^3]$ of $V = 10000 \cdot D_i^3$

The repeatability can be improved if the measured volume is increased. Repeatability is not a device characteristic but a statistical variable that is dependent on the boundary conditions indicated.

Response time

If all the configurable functions for filter times (flow damping, display damping, current output time constant, frequency output time constant, status output time constant) are set to 0, in the event of vortex frequencies of 10 Hz and higher a response time of $max(T_v, 100 \text{ ms})$ can be expected.

In the event of measuring frequencies < 10 Hz, the response time is > 100 ms and can be up to 10 s. T_{ν} is the average vortex period duration of the flowing fluid.

Influence of ambient temperature

Pulse/frequency output

o.r. = of reading

Temperature coefficient	Max. ±100 ppm o.r.
-------------------------	--------------------

16.7 Installation

Installation requirements

→ 🖺 19

16.8 Environment

Ambient temperature range

Temperature tables



Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.



For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Storage temperature

All components apart from the display modules:

 $-50 \text{ to } +80 \degree \text{C} (-58 \text{ to } +176 \degree \text{F})$

Display modules

 $-40 \text{ to } +80 \,^{\circ}\text{C} \, (-40 \text{ to } +176 \,^{\circ}\text{F})$

Remote display FHX50:

 $-40 \text{ to } +80 ^{\circ}\text{C} (-40 \text{ to } +176 ^{\circ}\text{F})$

Relative humidity

The device is suitable for use in outdoor and indoor areas with a relative humidity of 5 to 95%.

Climate class

DIN EN 60068-2-38 (test Z/AD)

Degree of protection

Transmitter

- Standard: IP66/67, Type 4X enclosure, suitable for pollution degree 4
- When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2
- Display module: IP20, Type 1 enclosure, suitable for pollution degree 2

Sensor

IP66/67, Type 4X enclosure, suitable for pollution degree 4

Vibration-resistance and shock resistance

Vibration sinusoidal, in accordance with IEC 60068-2-6

Order code for "Housing", option B "GT18 dual compartment, 316L, compact"

- 2 to 8.4 Hz, 3.5 mm peak
- 8.4 to 500 Hz, 1 g peak

Order code for "Housing", option C "GT20 dual compartment, alu, coated, compact" or option J "GT20 dual compartment, alu, coated, remote" or option K "GT18 dual compartment, 316L, remote"

- 2 to 8.4 Hz, 7.5 mm peak
- 8.4 to 500 Hz, 2 g peak

Vibration broad-band random, according to IEC 60068-2-64

Order code for "Housing", option B "GT18 dual compartment, 316L, compact"

- 10 to 200 Hz, 0.003 g²/Hz
- 200 to 500 Hz, 0.001 q²/Hz
- Total: 0.93 g rms

Order code for "Housing", option C "GT20 dual compartment, alu, coated, compact" or option J "GT20 dual compartment, alu, coated, remote" or option K "GT18 dual compartment, 316L, remote")

- 10 to 200 Hz, $0.01 \, q^2/Hz$
- 200 to 500 Hz, 0.003 q²/Hz
- Total: 1.67 g rms

Half-sine shocks according to IEC 60068-2-27

- Order code for "Housing", option B "GT18 dual compartment, 316L, compact" 6 ms 30 q
- Order code for "Housing", option C "GT20 dual compartment, alu, coated, compact" or option J "GT20 dual compartment, alu, coated, remote" or option K "GT18 dual compartment, 316L, remote") 6 ms 50 q

Rough handling shocks according to IEC 60068-2-31

Electromagnetic compatibility (EMC)



Details are provided in the Declaration of Conformity.



This unit is not intended for use in residential environments and cannot guarantee adequate protection of the radio reception in such environments.

16.9 **Process**

Medium temperature range

DSC sensor 1)

Order code for "Sensor version; DSC sensor; measuring tube"		
Option	Option Description Medium temperature range	
AA	Volume; 316L; 316L	-40 to +260 °C (-40 to +500 °F), stainless steel
BA	Volume high-temperature; 316L; 316L	−200 to +400 °C (−328 to +750 °F), stainless steel
CA	Mass; 316L; 316L	-200 to $+400$ °C (-328 to $+750$ °F), stainless steel

1) Capacitance sensor

Seals

Order code for '	Order code for "DSC sensor seal"		
Option Description Medium temperature range		Medium temperature range	
A	Graphite	−200 to +400 °C (−328 to +752 °F)	
В	Viton	−15 to +175 °C (+5 to +347 °F)	
С	Gylon	-200 to +260 °C (-328 to +500 °F)	
D	Kalrez	−20 to +275 °C (−4 to +527 °F)	

Pressure-temperature ratings

For an overview of the pressure-temperature ratings for the process connections, see the Technical Information

Nominal pressure of sensor

The following overpressure resistance values apply to the sensor shaft in the event of a membrane rupture:

Sensor version; DSC sensor; measuring tube	Overpressure, sensor shaft in [bar a]
Volume	200
Volume high-temperature	200
Mass (integrated temperature measurement)	200

Pressure loss

For a precise calculation, use the Applicator $\rightarrow \implies 180$.

Vibrations

16.10 Mechanical construction

Design, dimensions



For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

Weight

Compact version

Weight data:

- Including the transmitter:
 - Order code for "Housing", option C "GT20, two-chamber, aluminum, coated, compact"
 1.8 kg (4.0 lb):
 - Order code for "Housing", option B "GT18 two-chamber, 316L, compact"4.5 kg (9.9 lb):
- Excluding packaging material

Weight in SI units

DN	Weight [kg]	
[mm]	Order code for "Housing", option C "GT20 two-chamber, aluminum, coated, compact" ¹⁾	Order code for "Housing", option B "GT18 two-chamber, 316L, compact" ¹⁾
15	3.1	5.8
25	3.3	6.0
40	3.9	6.6
50	4.2	6.9
80	5.6	8.3
100	6.6	9.3
150	9.1	11.8

¹⁾ For high-temperature/low-temperature version: values + 0.2 kg

Weight in US units

DN	Weight [lbs]	
[in]	Order code for "Housing", option C "GT20 two-chamber, aluminum, coated, compact" 1)	Order code for "Housing", option B "GT18 two-chamber, 316L, compact" ¹⁾
1/2	6.9	12.9
1	7.4	13.3

DN	Weight [lbs]	
[in]	Order code for "Housing", option C "GT20 two-chamber, aluminum, coated, compact" ¹⁾	Order code for "Housing", option B "GT18 two-chamber, 316L, compact" ¹⁾
11/2	8.7	14.6
2	9.4	15.3
3	12.4	18.4
4	14.6	20.6
6	20.2	26.1

1) For high-temperature/low-temperature version: values +0.4 lbs

Transmitter remote version

Wall-mount housing

Dependent on the material of wall-mount housing:

- Order code for "Housing" option J "GT20 two-chamber, aluminum, coated, remote"2.4 kg (5.2 lb):
- Order code for "Housing", option K "GT18 two-chamber, 316L, remote" 6.0 kg (13.2 lb):

Sensor remote version

Weight data:

- Including sensor connection housing:
 - Order code for "Housing" option J "GT20 two-chamber, aluminum, coated, remote" 0.8 kg (1.8 lb):
 - Order code for "Housing", option K "GT18 two-chamber, 316L, remote"2.0 kg (4.4 lb):
- Excluding the connecting cable
- Excluding packaging material

Weight in SI units

DN	Weight [kg]	
[mm]	sensor connection housing Order code for "Housing", option J "GT20 two-chamber, aluminum, coated, remote" ¹⁾	sensor connection housing Order code for "Housing", option K "GT18 two-chamber, 316L, remote" ¹⁾
15	2.1	3.3
25	2.3	3.5
40	2.9	4.1
50	3.2	4.4
80	4.6	5.8
100	5.6	6.8
150	8.1	9.3

1) For high-temperature/low-temperature version: values + 0.2 kg

Weight in US units

DN	Weight [lbs]	
[in]	sensor connection housing Order code for "Housing", option J "GT20 two-chamber, aluminum, coated, remote" ¹⁾	sensor connection housing Order code for "Housing", option K "GT18 two-chamber, 316L, remote" ¹⁾
1/2	4.5	7.3
1	5.0	7.8

DN		
[in]	sensor connection housing Order code for "Housing", option J "GT20 two-chamber, aluminum, coated, remote" ¹⁾	sensor connection housing Order code for "Housing", option K "GT18 two-chamber, 316L, remote" ¹⁾
1½	6.3	9.1
2	7.0	9.7
3	10.0	12.8
4	12.3	15.0
6	17.3	20.5

1) For high-temperature/low-temperature version: values +0.4 lbs

Accessories

Flow conditioner

Weight in SI units

DN ¹⁾ [mm]	Pressure rating	Weight [kg]
15	PN 10 to 40	0.04
25	PN 10 to 40	0.1
40	PN 10 to 40	0.3
50	PN 10 to 40	0.5
80	PN 10 to 40	1.4
100	PN10 to 40	2.4
150	PN 10/16 PN 25/40	6.3 7.8

1) EN (DIN)

DN ¹⁾ [mm]	Pressure rating	Weight [kg]
15	Class 150 Class 300	0.03 0.04
25	Class 150 Class 300	0.1
40	Class 150 Class 300	0.3
50	Class 150 Class 300	0.5
80	Class 150 Class 300	1.2 1.4
100	Class 150 Class 300	2.7
150	Class 150 Class 300	6.3 7.8

1) ASME

DN ¹⁾ [mm]	Pressure rating	Weight [kg]
15	20K	0.06
25	20K	0.1
40	20K	0.3
50	10K 20K	0.5
80	10K 20K	1.1
100	10K 20K	1.80
150	10K 20K	4.5 5.5

1) JIS

Weight in US units

DN ¹⁾ [in]	Pressure rating	Weight [lbs]
1/2	Class 150 Class 300	0.07 0.09
1	Class 150 Class 300	0.3
1½	Class 150 Class 300	0.7
2	Class 150 Class 300	1.1
3	Class 150 Class 300	2.6 3.1
4	Class 150 Class 300	6.0
6	Class 150 Class 300	14.0 16.0

1) ASME

Materials Transmitter housing


Compact version

- Order code for "Housing", option B "GT18 two-chamber, 316L, compact": Stainless steel, CF3M
- Order code for "Housing", option C "GT20, two-chamber, aluminum, coated, compact": Aluminum, AlSi10Mg, coated
- Window material: glass

Remote version

- Order code for "Housing" option J "GT20 two-chamber, aluminum, coated, remote": Aluminum, AlSi10Mg, coated
- Order code for "Housing", option K "GT18 two-chamber, 316L, remote": For maximum corrosion resistance: Stainless steel, CF3M
- Window material: glass

Cable entries/cable glands

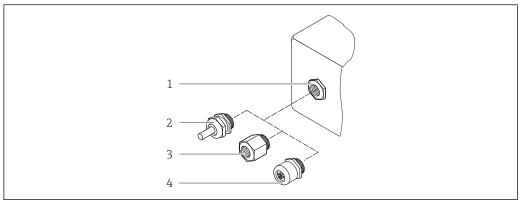

A0028352

■ 26 Possible cable entries/cable glands

- 1 Internal thread M20 \times 1.5
- 2 Cable gland $M20 \times 1.5$
- 3 Adapter for cable entry with internal thread G ½" or NPT ½"
- 4 Device plug

Order code for "Housing", option B "GT18 dual compartment, 316L, compact" option K "GT18 dual compartment, 316L, remote" $^{\circ}$

Cable entry/cable gland	Type of protection	Material
Cable gland M20 × 1.5	 Non-hazardous area Ex ia Ex ic Ex nA, Ex ec Ex tb 	Stainless steel ,1.4404
Adapter for cable entry with internal thread G ½"	Non-hazardous area and hazardous area (except for XP)	Stainless steel, 1.4404 (316L)
Adapter for cable entry with internal thread NPT ½"	Non-hazardous area and hazardous area	

Order code for "Housing": option C "GT20 dual compartment, aluminum, coated, compact", option J "GT20 dual compartment, aluminum, coated remote"

Cable entry/cable gland	Type of protection	Material
Cable gland M20 × 1.5	Non-hazardous areaEx iaEx ic	Plastic
	Adapter for cable entry with internal thread G ½"	Nickel-plated brass
Adapter for cable entry with internal thread NPT ½"	Non-hazardous area and hazardous area (except for XP)	Nickel-plated brass
Thread NPT ½" via adapter	Non-hazardous area and hazardous area	

Connecting cable for remote version

- Standard cable: PVC cable with copper shield
- Reinforced cable: PVC cable with copper shield and additional steel wire braided jacket

Sensor connection housing

The material of the sensor connection housing is dependent on the material selected for the transmitter housing.

- Order code for "Housing" option J "GT20 two-chamber, aluminum, coated, remote":
 Coated aluminum AlSi10Mg
- Order code for "Housing", option K "GT18 two-chamber, 316L, remote": Stainless cast steel, 1.4408 (CF3M)
 Compliant with:
 - NACE MR0175
 - NACE MR0103

Measuring tubes

DN 15 to 150 (½ to 6"), pressure ratingsPN 10/16/25/40, Class 150/300 , and JIS 10K/20K

- Stainless cast steel, CF3M/1.4408
- Complies with:
 - NACE MR0175-2003
 - NACE MR0103-2003

DSC sensor

Order code for "Sensor version; DSC sensor; measuring tube", option AA, BA, CA

Pressure ratings PN 10/16/25/40, Class 150/300, as well as JIS 10K/20K:

Parts in contact with medium (marked as "wet" on the DSC sensor flange):

- Stainless steel 1.4404 and 316 and 316L
- Compliant with:
 - NACE MR0175/ISO 15156-2015
 - NACE MR0103/ISO 17945-2015

Parts not in contact with medium:

Stainless steel 1.4301 (304)

Seals

- Graphite
- Sigraflex foil ZTM (BAM-certified for oxygen applications)
- FPM (VitonTM)
- Kalrez 6375TM
- Gylon 3504TM (BAM-certified for oxygen applications)

Housing support

Stainless steel, 1.4408 (CF3M)

Screws for DSC sensor

- Order code for "Sensor version", option AA "Stainless steel, A4-80 according to ISO 3506-1 (316)"
- Order code for "Sensor version", option BA, CA Stainless steel, A2 as per ISO 3506-1 (304)

Accessories

Protective cover

Stainless steel, 1.4404 (316L)

Flow conditioner

- Stainless steel, multiple certifications, 1.4404 (316, 316L)
- Compliant with:
 - NACE MR0175-2003
 - NACE MR0103-2003

16.11 Operability

Languages


Can be operated in the following languages:

- Via local display:
 English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Swedish,
 Turkish, Chinese, Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech
- Via "FieldCare" operating tool:
 English, German, French, Spanish, Italian, Chinese, Japanese

Onsite operation

Via display module

Two display modules are available:

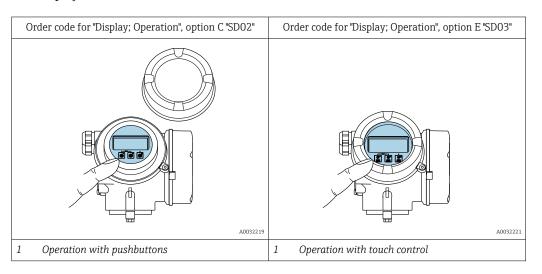

Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured


Operating elements

- lacksquare Operation with 3 push buttons with open housing: lacksquare, lacksquare
- External operation via touch control (3 optical keys) without opening the housing: ±, □, ■
- Operating elements also accessible in the various zones of the hazardous area

Additional functionality

- Data backup function
 The device configuration can be saved in the display module.
- Data comparison function
 The device configuration saved in the display module can be compared to the current device configuration.
- Data transfer function
 The transmitter configuration can be transmitted to another device using the display module.

Via remote display FHX50

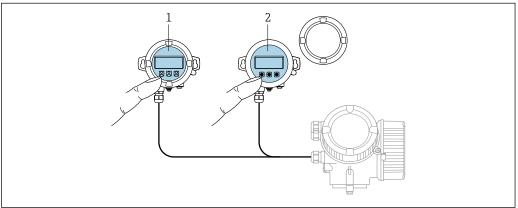

A00322

- **■** 27 FHX50 operating options
- 1 SD02 display and operating module, push buttons: cover must be opened for operation
- 2 SD03 display and operating module, optical buttons: operation possible through cover glass

Display and operating elements

The display and operating elements correspond to those of the display module.

Remote operation

→ 🖺 56

Service interface

→ 🖺 57

16.12 Certificates and approvals

Current certificates and approvals for the product are available at www.endress.com on the relevant product page:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select **Downloads**.

CE mark

The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

UKCA marking

The device meets the legal requirements of the applicable UK regulations (Statutory Instruments). These are listed in the UKCA Declaration of Conformity along with the designated standards. By selecting the order option for UKCA marking, Endress+Hauser confirms a successful evaluation and testing of the device by affixing the UKCA mark.

Contact address Endress+Hauser UK:

Endress+Hauser Ltd.

Floats Road

Manchester M23 9NF United Kingdom www.uk.endress.com

RCM marking

The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

Ex-approval

The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.

PROFINET over Ethernet-APL certification

PROFINET interface

The measuring instrument is certified and registered by the PROFIBUS Nutzerorganisation e.V. (PNO). The measuring system meets all the requirements of the following specifications:

- Certified according to:
 - Test specification for PROFINET devices
 - PROFINET PA Profile 4.02
 - PROFINET Netload Robustness Class 2 10 Mbit/s
 - APL conformance test
- The device can also be operated with certified devices of other manufacturers (interoperability)
- The device supports PROFINET S2 system redundancy.

Pressure Equipment Directive

- With the marking
 - a) PED/G1/x (x = category) or
 - b) PESR/G1/x (x = category)

on the sensor nameplate, Endress+Hauser confirms compliance with the "Essential Safety Requirements" $\,$

- a) specified in Annex I of the Pressure Equipment Directive 2014/68/EU or
- b) Schedule 2 of Statutory Instruments 2016 No. 1105.
- Devices not bearing this marking (without PED or PESR) are designed and manufactured according to sound engineering practice. They meet the requirements of
 - a) Art. 4 Para. 3 of the Pressure Equipment Directive 2014/68/EU or
 - b) Part 1, Para. 8 of Statutory Instruments 2016 No. 1105.

The scope of application is indicated

- a) in diagrams 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU or
- b) Schedule 3, Para. 2 of Statutory Instruments 2016 No. 1105.

Experience

The Prowirl 200 measuring system is the successor model of the Prowirl 72 and Prowirl 73.

External standards and guidelines

■ EN 60529

Degrees of protection provided by enclosure (IP code)

■ DIN ISO 13359

Measurement of conductive liquid flow in closed conduits - Flanged-type electromagnetic flowmeters - Overall length

■ ISO 12764:2017

Measurement of fluid flow in closed conduits – Flow rate measurement by means of vortex shedding flowmeters inserted in circular cross-section conduits running full

■ EN 61010-1

Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements

■ EN 61326-1/-2-3

EMC requirements for electrical equipment for measurement, control and laboratory use

■ NAMUR NE 21

Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment

■ NAMUR NE 32

Data retention in the event of a power failure in field and control instruments with microprocessors

■ NAMUR NE 43

Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.

■ NAMUR NE 53

Software of field devices and signal-processing devices with digital electronics

■ NAMUR NE 105

Specifications for integrating fieldbus devices in engineering tools for field devices

■ NAMUR NE 107

Self-monitoring and diagnosis of field devices

■ NAMUR NE 131

Requirements for field devices for standard applications

■ ETSI EN 300 328

Guidelines for 2.4 GHz radio components.

■ EN 301489

Electromagnetic compatibility and radio spectrum matters (ERM).

16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.



Detailed information on the application packages: Special Documentation →

208

16.14 Accessories



Overview of accessories available to order $\rightarrow \triangleq 179$

16.15 Documentation



For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

Standard Documentation

Brief Operating Instructions

Brief Operating Instructions for the sensor

Measuring device	Documentation code
Prowirl D 200	KA01322D

Brief Operating Instructions for the transmitter

Measuring instrument	Documentation code
Prowirl 200	KA01545D

Technical Information

Measuring device	Documentation code
Prowirl D 200	TIO1332D

Description of Device Parameters

Measuring instrument	Documentation code
Prowirl 200	GP01170D

Supplementary devicedependent documentation

Safety instructions

Contents	Documentation code
ATEX/IECEx Ex d	XA01635D
ATEX/IECEx Ex ia	XA01636D
ATEX/IECEx Ex ec, Ex ic	XA01637D
_C CSA _{US} XP	XA01638D
_C CSA _{US} IS	XA01639D
EAC Ex d	XA01684D
EAC Ex ia	XA01782D
EAC Ex ec, Ex ic	XA01685D
INMETRO Ex d	XA01642D
INMETRO Ex ia	XA01640D
INMETRO Ex ec, Ex ic	XA01641D
JPN Ex d	XA01766D
NEPSI Ex d	XA01643D
NEPSI Ex ia	XA01644D
NEPSI Ex ec, Ex ic	XA01645D

Contents	Documentation code
UKEX Ex d	XA02630D
UKEX Ex ia	XA02631D
UKEX Ex ec, Ex ic	XA02632D

Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Heartbeat Technology	SD02759D
Web server	SD02834D
Protective cover	SD00333F

Installation Instructions

Contents	Note
Installation instructions for spare part sets and accessories	 Access the overview of all the available spare part sets via <i>Device Viewer</i> → □ 176 Accessories available for order with Installation Instructions → □ 179

Index

A	D
Access authorization to parameters	Date of manufacture
Read access	Declaration of Conformity
Write access	Defining the access code
Access code	Degree of protection
Incorrect input	Design
Adapting the diagnostic behavior	Measuring device
Ambient conditions	Device
Ambient temperature	Configuring
Storage temperature	Device components
Vibration resistance and shock resistance 195	Device description files 60
Ambient temperature	Device locking, status
Influence	Device master file
Ambient temperature range	GSD
Analog Output module 67	Device name
Application	Sensor
Applicator	Device repair
Approvals	Device revision 60
	Device type ID 60
В	Device Viewer
Binary input module 63	DeviceCare
Binary output module 67	Device description file 60
C	Diagnostic behavior
C	Explanation
Cable entries	Symbols
Technical data	Diagnostic information
Cable entry	Design, description
Degree of protection	DeviceCare
CE mark	FieldCare
Certificates	Light emitting diodes
Checklist Post composition should	Local display
Post-connection check	Overview
Post-mounting check	Remedial measures
Cleaning Enterior cleaning	Web browser
Exterior cleaning	Diagnostic message
Interior cleaning	Diagnostics
Replacing housing seals	Symbols
	Diagnostics list
Replacing sensor seals	DIP switch
Commissioning	see Write protection switch
Advanced settings	Direct access
Configuring the device	Disabling write protection
Connecting the device	Display
Connection	Current diagnostic event
see Electrical connection	Previous diagnostic event
Connection cable	see Local display
Connection preparations	Display area
Connection tools	For operational display
Context menu	In the navigation view
Calling up 50	Display values
Closing	For locking status
Explanation	Displaying the measured value history
Current consumption	Disposal
Cyclic data transmission 61	Document
Syeme data transmission	Function
	Symbols 6

Document function	Incoming acceptance
E	Ambient temperature
Electrical connection	Inlet runs
Commubox FXA291 57	Input
Degree of protection	Input screen
Measuring instrument 29	Inspection
Operating tools	Connection
Via APL network	
Via Air Effetwork	Installation
RSLogix 5000	Received goods
	Installation
Electromagnetic compatibility	Installation dimensions
Enabling write protection	Installation requirements
Enabling/disabling the keypad lock	Inlet and outlet runs
Endress+Hauser services	Mounting set
Maintenance	Orientation
Repair	Thermal insulation 23
Error messages	Intended use
see Diagnostic messages	Interior cleaning
Event logbook	T
Events list	L
Ex-approval	Languages, operation options 203
Experience	Line recorder
Extended order code	Local display
Sensor	Editing view 47
Exterior cleaning	Navigation view
_	see Diagnostic message
F	see In alarm condition
Field of application	see Operational display
Residual risks	Low flow cut off
FieldCare	
Device description file 60	M
Establishing a connection 57	Main electronics module
Function	Maintenance tasks
User interface	Manufacturer ID 60
Filtering the event logbook	Materials
Firmware	Maximum measurement error
Release date	Measured values
Version	Measured
Firmware history	Measured variables
Flow direction	Calculated
Function range	see Process variables
SIMATIC PDM	Measuring and test equipment 175
Functions	Measuring device
see Parameters	Conversion
	Design
G	Disposal
Galvanic isolation	Preparing for mounting
	Removing
H	Repairs
Hardware write protection	Switching on
Help text	Measuring instrument
Calling up	Installing the sensor
Closing	Preparing for electrical connection
Explanation	Measuring principle
-	Measuring range
I	Measuring system
I/O electronics module	Medium temperature range
Identifying the measuring instrument 13	iviculani temperature range

Menu	P
Diagnostics	Packaging disposal
Setup	Parameter settings
Menus	Administration (Submenu) 106
For device configuration	Advanced setup (Submenu) 83
For specific settings	APL port (Submenu)
Module	Data logging (Submenu)
Analog output	Define access code (Wizard) 107
Binary input	Device information (Submenu) 172
Binary output	Diagnostics (Menu)
Totalizer	Display (Submenu)
Totalizer	External compensation (Submenu) 98
Totalizer Control	Gas composition (Submenu) 87
Volume	Heartbeat base settings (Submenu) 106
Volume Totalizer Control	Low flow cut off (Wizard) 82
Mounting dimensions	Medium properties (Submenu) 84
see Installation dimensions	Medium selection (Wizard) 78
Mounting location	Network diagnostics (Submenu) 74
Mounting preparations	Process variables (Submenu)
Mounting requirements	Sensor adjustment (Submenu) 99
Installation dimensions	Setup (Menu)
Mounting location	Simulation (Submenu)
Mounting set	System units (Submenu)
Mounting tools	Totalizer (Submenu)
N	Totalizer 1 to n (Submenu)
Nameplate	Volume flow (Submenu)
Sensor	Parameters
Navigation path (navigation view)	Changing
Navigation view	Entering a value
In the submenu	Performance characteristics
In the wizard	Post-connection check
Netilion	Post-connection check (checklist)
Nominal pressure	Post-installation check
Sensor	Post-mounting check (checklist)
Numeric editor 47	Potential equalization
Traineric cuitor	Power consumption
0	Power supply failure
Onsite display	Pressure Equipment Directive
Operable flow range	Pressure loss
Operating elements	Process conditions
Operating keys	Medium temperature
see Operating elements	Pressure loss
Operating menu	Product safety
Menus, submenus 42	PROFINET over Ethernet-APL certification 205
Structure	Protecting parameter settings
Submenus and user roles 43	Frotecting parameter settings 100
Operating philosophy	R
Operation	RCM marking
Operation options	Read access
Operational display	Reading off measured values
Operational safety	Recalibration
Order code	Reference operating conditions
Orientation (vertical, horizontal)	Registered trademarks
Outlet runs	Remedial actions
Output signal	Calling up
Output variables	Closing
	Remote operation
	•

Remote version	Data logging
Connecting the connecting cable 34	Device information
Repair	Display
Notes	Events list
Repair of a device	External compensation
Repeatability	Gas composition
Replacement	Heartbeat base settings 106
Device components	Heartbeat setup
Replacing seals	Medium properties
Requirements for personnel	Network diagnostics
Response time	Overview
Return	Process variables
	Sensor adjustment
S	Simulation
Safety	System units
Sensor	Totalizer
Installing	Totalizer 1 to n
Serial number	Volume flow
Setting the operating language 71	Supply unit
Settings	Requirements
Adapting the measuring device to the process	Supply voltage
conditions	Symbols
Administration	For communication
Advanced display configurations 103	For correction
Analog Input	For diagnostic behavior
Communication interface	For locking
External compensation	For measured variable
Gas composition	For measurement channel number
Low flow cut off 82	For menus
Medium	For parameters
Medium properties	For status signal
Operating language	For submenu
Resetting the device	For wizards
Sensor adjustment	In the status area of the local display
Simulation	In the text and numeric editor
System units	System design
Totalizer	Measuring system
Signal on alarm	see Measuring device design
SIMATIC PDM	System integration 60
Function	System redundancy S2
Software release 60	System redundancy 52 · · · · · · · · · · · · · · · · · ·
Spare part	T
Spare parts	Technical data, overview
Standards and guidelines 206	Temperature range
Status area	Storage temperature
For operational display	Terminal assignment
In the navigation view	Terminals
Status signals	Text editor
Storage conditions	Thermal insulation
Storage temperature	Tool
Storage temperature range	Transporting
Structure	Tool tip
Operating menu 42	see Help text
Submenu	Tools
Administration	Electrical connection
Advanced setup	Installation
Analog inputs	Totalizer
APL port	Assign process variable
Communication	
Communication	Configuring

Totalizer Control module	
Transmitter	
Connecting the signal cables	33
Turning the display module	
Turning the housing	
Transporting the measuring instrument	
Troubleshooting	
General	127
Turning the display module	28
Turning the electronics housing	
see Turning the transmitter housing	
Turning the transmitter housing	27
TT	
U	205
UKCA marking	405
Use of measuring device	0
Borderline cases	
Incorrect use	. 9
Use of measuring instrument see Intended use	
User roles	/12
USEI TOTES	4)
V	
Version data for the device	60
Vibration resistance and shock resistance	195
Volume module	64
Volume Totalizer Control module	64
W	
W@M Device Viewer	12
Weight	כב
Compact version	
	197
	197
	199
Sensor remote version	LJJ
	198
US units	
Transport (notes)	
Wizard	1,
	107
Low flow cut off	
Medium selection	
Workplace safety	
Write access	
Write protection	- 1
Via access code	108
Via write protection switch	
Write protection switch	



www.addresses.endress.com