



Operating Instructions

Micropilot FMR56, FMR57

FOUNDATION Fieldbus

Free space radar

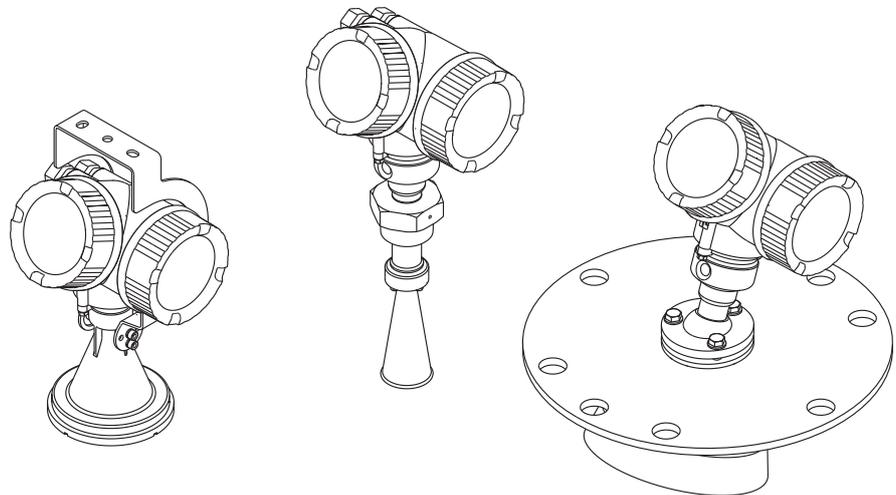

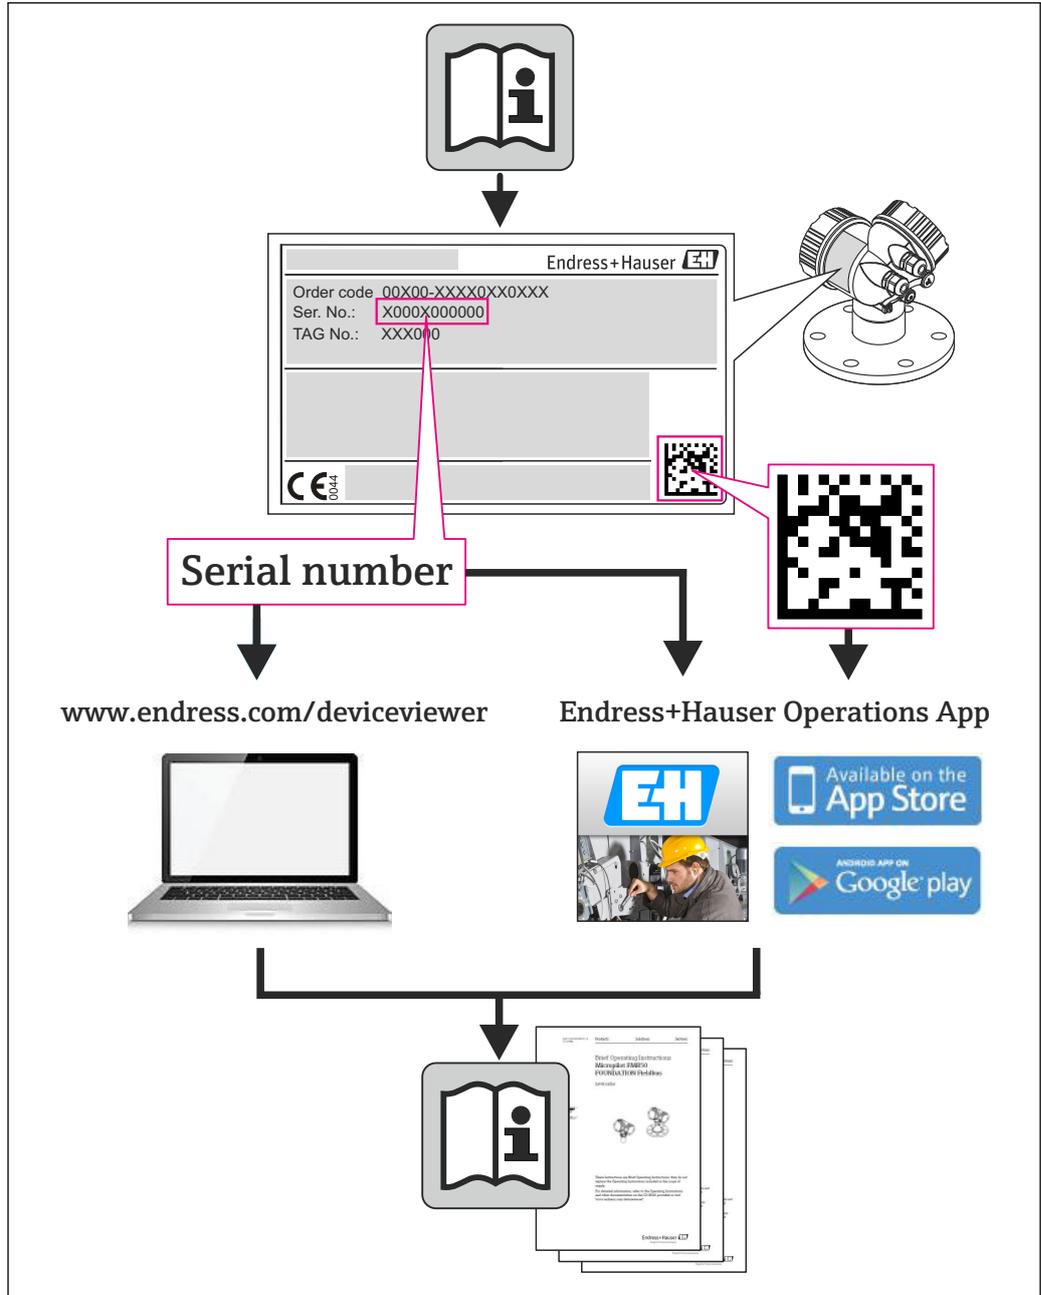

A0023555

Table of contents

1	Important document information	6		
1.1	Document function	6		
1.2	Symbols	6		
1.2.1	Safety symbols	6		
1.2.2	Electrical symbols	6		
1.2.3	Tool symbols	6		
1.2.4	Symbols for certain types of information	7		
1.2.5	Symbols in graphics	7		
1.2.6	Symbols at the device	8		
1.3	Additional documentation	8		
1.3.1	Safety Instructions (XA)	8		
2	Basic safety instructions	12		
2.1	Requirements for the personnel	12		
2.2	Designated use	12		
2.3	Workplace safety	13		
2.4	Operational safety	13		
2.5	Product safety	13		
3	Product description	14		
3.1	Product design	14		
3.1.1	Micropilot FMR56	14		
3.1.2	Micropilot FMR57	14		
3.1.3	Electronics housing	15		
3.2	Registered trademarks	16		
4	Incoming acceptance and product identification	17		
4.1	Incoming acceptance	17		
4.2	Product identification	17		
4.2.1	Nameplate	18		
5	Storage, Transport	19		
5.1	Storage conditions	19		
5.2	Transport product to the measuring point	19		
6	Installation	20		
6.1	Installation conditions	20		
6.1.1	Mounting position	20		
6.1.2	Vessel installations	21		
6.1.3	Reduction of interference echoes	22		
6.1.4	Measurement in a plastic vessel	22		
6.1.5	Optimization options	23		
6.1.6	Beam angle	24		
6.2	Measuring conditions	25		
6.3	Installation in vessel (free space)	26		
6.3.1	Horn antenna with slip-on flange (FMR56)	26		
6.3.2	Horn antenna with mounting bracket (FMR56)	28		
6.3.3	Horn antenna (FMR57)	28		
6.3.4	Parabolic antenna (FMR57)	29		
6.3.5	Alignment device for FMR57	32		
6.3.6	Integrated air purge connection for FMR57	33		
6.4	Vessels with heat insulation	33		
6.5	Turning the transmitter housing	34		
6.6	Turning the display module	34		
6.7	Post-installation check	35		
7	Electrical connection	36		
7.1	Connection conditions	36		
7.1.1	Terminal assignment	36		
7.1.2	Cable specification	37		
7.1.3	Device plug connectors	38		
7.1.4	Supply voltage	39		
7.1.5	Overvoltage protection	39		
7.2	Connecting the device	40		
7.2.1	Pluggable spring-force terminals	41		
7.3	Post-connection check	41		
8	Operation options	43		
8.1	Overview	43		
8.1.1	Local operation	43		
8.1.2	Operation with remote display and operating module FHX50	43		
8.1.3	Remote operation	44		
8.2	Structure and function of the operating menu	46		
8.2.1	Structure of the operating menu	46		
8.2.2	User roles and related access authorization	47		
8.2.3	Write protection via access code	48		
8.2.4	Disabling write protection via access code	49		
8.2.5	Deactivation of the write protection via access code	49		
8.2.6	Write protection via write protection switch	50		
8.2.7	Enabling and disabling the keypad lock	52		
8.3	Display and operating module	53		
8.3.1	Display appearance	53		
8.3.2	Operating elements	56		
8.3.3	Entering numbers and text	57		
8.3.4	Opening the context menu	59		
8.3.5	Envelope curve on the display and operating module	60		
9	Integration into a FOUNDATION Fieldbus network	61		
9.1	Device Description (DD)	61		

9.2	Integration into the FOUNDATION Fieldbus network	61	11.8	Configuration of the event behavior according to the FOUNDATION Fieldbus specification FF912	86
9.3	Device identification and addressing	61	11.8.1	Groups of events	87
9.4	Block model	63	11.8.2	Allocation parameters	89
9.4.1	Blocks of the device software	63	11.8.3	Configurable area	92
9.4.2	Block configuration when device is delivered	64	11.8.4	Transmission of the event messages to the bus	93
9.5	Assignment of the measured values (CHANNEL) in an AI Block	64	11.9	Protection of the settings against unauthorized changes	93
9.6	Index tables of Endress+Hauser parameters	64	12	Diagnostics and troubleshooting	94
9.6.1	Setup Transducer Block	65	12.1	General trouble shooting	94
9.6.2	Advanced Setup Transducer Block	65	12.1.1	General errors	94
9.6.3	Display Transducer Block	66	12.1.2	Parametrization errors	94
9.6.4	Diagnostic Transducer Block	67	12.2	Diagnostic information on local display	96
9.6.5	Expert Configuration Transducer Block	68	12.2.1	Diagnostic message	96
9.6.6	Expert Information Transducer Block	70	12.2.2	Calling up remedial measures	98
9.6.7	Service Sensor Transducer Block	70	12.3	Diagnostic event in the operating tool	99
9.6.8	Service Information Transducer Block	71	12.4	Diagnostic messages in the DIAGNOSTIC Transducer Block (TRDDIAG)	99
9.6.9	Advanced Diagnostics Transducer Block	71	12.5	Diagnostic list	99
9.7	Methods	72	12.6	Overview of diagnostic events	100
10	Commissioning via operating menu	73	12.7	Event logbook	101
10.1	Installation and function check	73	12.7.1	Event history	101
10.2	Setting the operating language	73	12.7.2	Filtering the event logbook	102
10.3	Configuration of a level measurement	74	12.7.3	Overview of information events	102
10.4	Recording the reference curve	76	12.8	Firmware history	103
10.5	Configuration of the on-site display	77	13	Maintenance	104
10.5.1	Factory settings of the on-site display	77	13.1	Exterior cleaning	104
10.5.2	Adjustment of the on-site display	77	13.2	Replacing seals	104
10.6	Configuration management	78	14	Repairs	105
10.7	Protection of the settings against unauthorized changes	79	14.1	General information on repairs	105
11	Commissioning (block-based operation)	80	14.1.1	Repair concept	105
11.1	Function check	80	14.1.2	Repairs to Ex-approved devices	105
11.2	Block configuration	80	14.1.3	Replacement of an electronics module	105
11.2.1	Preparatory steps	80	14.1.4	Replacement of a device	105
11.2.2	Configuring the Resource Block	80	14.2	Spare parts	106
11.2.3	Configuring the Transducer Blocks	80	14.3	Return	106
11.2.4	Configuring the Analog Input Blocks	81	14.4	Disposal	106
11.2.5	Additional configuration	81	15	Accessories	107
11.3	Scaling of the measured value in an AI Block	81	15.1	Device-specific accessories	107
11.4	Language selection	82	15.1.1	Weather protection cover	107
11.5	Configuration of a level measurement	83	15.1.2	Variable flange seal for FMR50/FMR56	108
11.6	Configuration of the on-site display	84	15.1.3	Mounting bracket for wall or ceiling mounting of FMR50/FMR56	109
11.6.1	Factory settings of the on-site display for level measurements	84	15.1.4	Remote display FHX50	110
11.7	Configuration management	84	15.1.5	Horn protection for horn antenna	111
			15.1.6	Overvoltage protection	112
			15.2	Communication-specific accessories	113
			15.3	Service-specific accessories	113

15.4	System components	113
16	Operating menu	114
16.1	Overview of the operating menu (display module)	114
16.2	Overview of the operating menu (operating tool)	120
16.3	"Setup" menu	126
16.3.1	"Mapping" wizard	133
16.3.2	"Analog input 1 to 5" submenu	134
16.3.3	"Advanced setup" submenu	136
16.4	"Diagnostics" menu	174
16.4.1	"Diagnostic list" submenu	176
16.4.2	"Event logbook" submenu	177
16.4.3	"Device information" submenu	178
16.4.4	"Measured values" submenu	180
16.4.5	"Analog input 1 to 5" submenu	181
16.4.6	"Data logging" submenu	183
16.4.7	"Simulation" submenu	186
16.4.8	"Device check" submenu	191
Index		193

1 Important document information

1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols

1.2.1 Safety symbols


Symbol	Meaning
	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols

Symbol	Meaning	Symbol	Meaning
	Direct current		Alternating current
	Direct current and alternating current		Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.		Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.

1.2.3 Tool symbols

Symbol	Meaning
 A0013442	Torx screwdriver
 A0011220	Flat blade screwdriver

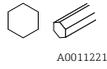Symbol	Meaning
 A0011219	Cross-head screwdriver
 A0011221	Allen key
 A0011222	Hexagon wrench

1.2.4 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Series of steps
	Result of a sequence of actions
	Help in the event of a problem
	Visual inspection

1.2.5 Symbols in graphics

Symbol	Meaning
1, 2, 3 ...	Item numbers
	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections
	Hazardous area Indicates a hazardous area.
	Safe area (non-hazardous area) Indicates the non-hazardous area.

1.2.6 Symbols at the device

Symbol	Meaning
	Safety instructions Observe the safety instructions contained in the associated Operating Instructions.
	Temperature resistance of the connection cables Specifies the minimum value of the temperature resistance of the connection cables.

1.3 Additional documentation

Document	Purpose and content of the document
Technical Information TI01042F (FMR56, FMR57)	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions KA01127F (FMR56/FMR57, FOUNDATION Fieldbus)	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Description of Device Parameters GPO1017F (FMR5x, FOUNDATION Fieldbus)	Reference for your parameters The document provides a detailed explanation of each individual parameter in the operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

1.3.1 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

Feature 010	Approval	Available for	Feature 020 "Power Supply; Output"				
			A ¹⁾	B ²⁾	C ³⁾	E ⁴⁾ /G ⁵⁾	K ⁶⁾ /L ⁷⁾
BA	ATEX: II 1 G Ex ia IIC T6-T1 Ga	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00677F	XA01224F	XA001225	XA00685F	-
BB	ATEX: II 1/2 G Ex ia IIC T6-T1 Ga/Gb	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00677F	XA01224F	XA001225	XA00685F	-
BC	ATEX: II 1/2 G Ex d [ia] IIC T6-T1 Ga/Gb	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00680F	XA00680F	XA01232F	XA00688F	XA01233F
BD	ATEX: II 1/2/3 G Ex ic [ia Ga] IIC T6-T1 Ga/Gb/Gc	FMR57	XA00678F	XA01226F	XA01227F	XA00686F	XA01228F
BE	ATEX: II 1 D Ex ta IIIC T ₅₀₀ xx°C Da	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00682F	XA00682F	XA00682F	XA00690F	XA00682F
BF	ATEX: II 1/2 D Ex ta IIIC Txx°C Da/Db	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00682F	XA00682F	XA00682F	XA00690F	XA00682F
BG	ATEX: II 3 G Ex nA IIC T6-T1 Gc	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00679F	XA01229F	XA01230F	XA00687F	XA01231F

Feature 010	Approval	Available for	Feature 020 "Power Supply; Output"				
			A ¹⁾	B ²⁾	C ³⁾	E ^{4)/G⁵⁾}	K ^{6)/L⁷⁾}
BH	ATEX: II 3 G Ex ic IIC T6-T1 Gc	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00679F	XA01229F	XA01230F	XA00687F	XA01231F
BL	ATEX: II 1/2/3 G Ex nA [ia Ga] IIC T6-T1 Ga/Gb/Gc	FMR57	XA00678F	XA01226F	XA01227F	XA00686F	XA01228F
B2	ATEX: II 1/2 G Ex ia IIC T6-T1 Ga/Gb ATEX: II 1/2 D Ex ia IIIC Txx°C Da/Db	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00683F	XA00683F	XA01235F	XA00691F	-
B3	ATEX: II 1/2 G Ex d [ia] IIC T6-T1 Ga/Gb ATEX: II 1/2 D Ex ta IIIC Txx°C Da/Db	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00684F	XA00684F	XA00684F	XA00692F	XA01236F
CD	CSA C/US DIP Cl.I,II,III Div.1 Gr.E-G	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01113F	XA01113F	XA01113F	XA01115F	XA01113F
C2	CSA C/US IS Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex ia	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01112F	XA01112F	XA01112F	XA01114F	-
C3	CSA C/US XP Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex d	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01113F	XA01113F	XA01113F	XA01115F	XA01113F
FA	FM IS Cl.I Div.1 Gr.A-D	FMR56	XA01116F	XA01116F	XA01116F	XA01118F	-
FB	FM IS Cl.I,II,III Div.1 Gr.A-G, AEx ia, NI Cl.1 Div.2	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01116F	XA01116F	XA01116F	XA01118F	-
FC	FM XP Cl.I Div.1 Gr.A-D	FMR56	XA01117F	XA01117F	XA01117F	XA01119F	XA01117F
FD	FM XP Cl.I,II,III Div.1 Gr.A-G, AEx d, NI Cl.1 Div.2	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01117F	XA01117F	XA01117F	XA01119F	XA01117F
FE	FM DIP Cl.I,II,III Div.1 Gr.E-G	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01117F	XA01117F	XA01117F	XA01119F	XA01117F
IA	IECEEx: Ex ia IIC T6-T1 Ga	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00677F	XA01224F	XA001225	XA00685F	-
IB	IECEEx: Ex ia IIC T6-T1 Ga/Gb	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00677F	XA01224F	XA001225	XA00685F	-
IC	IECEEx: Ex d [ia] IIC T6-T1 Ga/Gb	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00680F	XA00680F	XA01232F	XA00688F	XA01233F
ID	IECEEx: Ex ic [ia Ga] IIC T6-T1 Ga/Gb/Gc	FMR57	XA00678F	XA01226F	XA01227F	XA00686F	XA01228F
IE	IECEEx: Ex ta IIIC T ₅₀₀ xx°C Da	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00682F	XA00682F	XA00682F	XA00690F	XA00682F
IF	IECEEx: Ex ta IIIC Txx°C Da/Db	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00682F	XA00682F	XA00682F	XA00690F	XA00682F
IG	IECEEx: Ex nA IIC T6-T1 Gc	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00679F	XA01229F	XA01230F	XA00687F	XA01231F
IH	IECEEx: Ex ic IIC T6-T1 Gc	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00679F	XA01229F	XA01230F	XA00687F	XA01231F
IL	IECEEx: Ex nA [ia Ga] IIC T6-T1 Ga/Gb/Gc	FMR57	XA00678F	XA01226F	XA01227F	XA00686F	XA01228F
I2	IECEEx: Ex ia IIC T6-T1 Ga/Gb IECEEx: Ex ia IIIC Txx°C Da/Db	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00683F	XA00683F	XA01235F	XA00691F	-
I3	IECEEx: Ex d [ia] IIC T6-T1 Ga/Gb IEXEx: Ex ta IIIC Txx°C Da/Db	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA00684F	XA00684F	XA00684F	XA00692F	XA01236F
KA	KC Ex ia IIC T6 Ga	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01045F	XA01045F	XA01045F	XA01047F	-
KB	KC Ex ia IIC T6 Ga/Gb	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01045F	XA01045F	XA01045F	XA01047F	-
KC	KC Ex d[ia] IIC T6	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01046F	XA01046F	XA01046F	XA01048F	XA01046F
MA	INMETRO: Ex ia IIC T6 Ga	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01286F	XA01287F	XA01288F	XA01296F	-

Feature 010	Approval	Available for	Feature 020 "Power Supply; Output"				
			A ¹⁾	B ²⁾	C ³⁾	E ⁴⁾ /G ⁵⁾	K ⁶⁾ /L ⁷⁾
ME	INMETRO: Ex t IIC Da	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01295F	XA01295F	XA01295F	XA01299F	XA01295F
MH	INMETRO: Ex ic IIC T6 Gc	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01289F	XA01290F	XA01291F	XA01297F	-
NA	NEPSI Ex ia IIC T6 Ga	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01199F	XA01199F	XA01199F	XA01208F	-
NB	NEPSI Ex ia IIC T6 Ga/Gb	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01199F	XA01199F	XA01199F	XA01208F	-
NC	NEPSI Ex d[ia] IIC T6 Ga/Gb	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01202F	XA01202F	XA01202F	XA01211F	XA01202F
NF	NEPSI DIP A20/21 T85...90oC IP66	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01204F	XA01204F	XA01204F	XA01213F	XA01204F
NG	NEPSI Ex nA II T6 Gc	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01201F	XA01201F	XA01201F	XA01210F	XA01201F
NH	NEPSI Ex ic IIC T6 Gc	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01201F	XA01201F	XA01201F	XA01210F	XA01201F
N2	NEPSI Ex ia IIC T6 Ga/Gb, Ex iaD 20/21 T85...90oC	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01205F	XA01205F	XA01205F	XA01214F	-
N3	NEPSI Ex d[ia] IIC T6 Ga/Gb, DIP A20/21 T85...90oC IP66	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	XA01206F	XA01206F	XA01206F	XA01215F	XA01206F
8A	FM/CSA IS+XP Cl.I,II,III Div.1 Gr.A-G	<ul style="list-style-type: none"> ▪ FMR56 ▪ FMR57 	<ul style="list-style-type: none"> ▪ XA01112F ▪ XA01113F ▪ XA01116F ▪ XA01117F 	<ul style="list-style-type: none"> ▪ XA01112F ▪ XA01113F ▪ XA01116F ▪ XA01117F 	<ul style="list-style-type: none"> ▪ XA01112F ▪ XA01113F ▪ XA01116F ▪ XA01117F 	<ul style="list-style-type: none"> ▪ XA01114F ▪ XA01115F ▪ XA01118F ▪ XA01119F 	-

- 1) 2-wire; 4-20mA HART
- 2) 2-wire; 4-20mA HART, switch output
- 3) 2-wire; 4-20mA HART, 4-20mA
- 4) 2-wire; FOUNDATION Fieldbus, switch output
- 5) 2-wire; PROFIBUS PA, switch output
- 6) 4-wire 90-253VAC; 4-20mA HART
- 7) 4-wire 10.4-48VDC; 4-20mA HART

 For certified devices the relevant Safety Instructions (XA) are indicated on the nameplate.

If the device is prepared for the remote display FHX50 (product structure: feature 030: Display, Operation", option L or M), the Ex marking of some certificates changes according to the following table¹⁾:

Feature 010 ("Approval")	Feature 030 ("Display, Operation")	Ex marking
BE	L or M	ATEX II 1D Ex ta [ia] IIC T ₅₀₀ xx°C Da
BF	L or M	ATEX II 1/2 D Ex ta [ia Db] IIC Txx°C Da/Db
BG	L or M	ATEX II 3G Ex nA [ia Ga] IIC T6 Gc
BH	L or M	ATEX II 3G Ex ic [ia Ga] IIC T6 Gc
B3	L or M	ATEX II 1/2G Ex d [ia] IIC T6 Ga/Gb, ATEX II 1/2D Ex ta [ia Db] IIC Txx°C Da/Db
IE	L or M	IECEX Ex ta [ia] IIC T500 xx°C Da
IF	L or M	IECEX ta [ia Db] IIC Txx°C Da/Db

1) The marking of certificates not mentioned in this table are not affected by the FHX50.

Feature 010 ("Approval")	Feature 030 ("Display, Operation")	Ex marking
IG	L or M	IECEEx Ex nA [ia Ga] IIC T6 Gc
IH	L or M	IECEEx Ex ic [ia Ga] IIC T6 Gc
I3	L or M	IECEEx Ex d [ia] IIC T6 Ga/Gb, IECEEx Ex ta [ia Db] IIIC Txx°C Da/Db
ME	L or M	Ex ta [ia] IIIC T ₅₀₀ xx°C Da
MH	L or M	Ex ic [ia Ga] IIC T6 Gc
NF	L or M	NEPSI DIP A20/21 [ia D] TA, Txx°C IP6X
NG	L or M	NEPSI Ex nA [ia Ga] IIC T6-T1 Gc
NH	L or M	NEPSI Ex ic [ia Ga] IIC T6-T1 Gc
N3	L or M	NEPSI Ex d [ia] IIC T6-T1 Ga/Gb, DIP A20/21 [ia D] TA, Txx°C IP6X

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task
- ▶ Are authorized by the plant owner/operator
- ▶ Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- ▶ Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- ▶ Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- ▶ Following the instructions in these Operating Instructions

2.2 Designated use

Application and measured materials

The measuring device described in these Operating Instructions is intended for the continuous, contactless level measurement of mainly bulk solids. The device can also be freely mounted outside closed metal vessels (e.g. above basins, open channels or open piles) because of its operating frequency of about 26 GHz, a maximum radiated pulsed power of 23.3 mW and an average power output of 0.076 mW. Operation is completely harmless to humans and animals.

Observing the limit values specified in the "Technical data" and listed in the Operating Instructions and supplementary documentation, the measuring device may be used for the following measurements only:

- ▶ Measured process variables: level, distance, signal strength
- ▶ Calculated process variables: Volume or mass in arbitrarily shaped vessels; flow through measuring weirs or flumes (calculated from the level by the linearization functionality)

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Use the measuring device only for measured materials against which the process-wetted materials are adequately resistant.
- ▶ Observe the limit values in "Technical data".

Incorrect use

The manufacturer is not liable for damage caused by improper or non-designated use.

Verification for borderline cases:

- ▶ For special measured materials and cleaning agents, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of wetted materials, but does not accept any warranty or liability.

Residual risk

The electronics housing and its built-in components such as display module, main electronics module and I/O electronics module may heat to 80 °C (176 °F) during operation through heat transfer from the process as well as power dissipation within the electronics. During operation the sensor may assume a temperature near the temperature of the measured material.

Danger of burns due to heated surfaces!

- ▶ For high process temperatures: Install protection against contact in order to prevent burns.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from the manufacturer only.

Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection, pressure vessel safety):

- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these Instructions.

2.5 Product safety


This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which they are safe to operate.

It meets general safety standards and legal requirements. It also complies with the EC directives listed in the device-specific EC Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

3 Product description

3.1 Product design

3.1.1 Micropilot FMR56

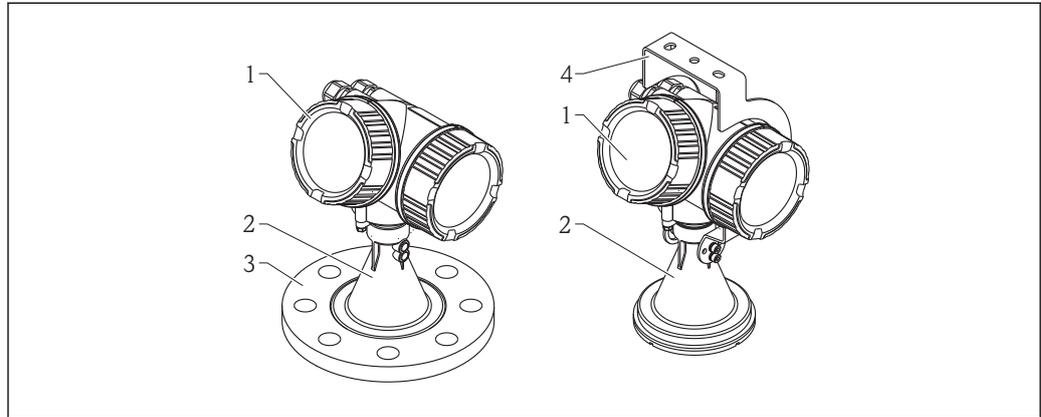


A0016791

1 Design of the Micropilot FMR56 (26 GHz)

- 1 Electronics housing
- 2 Horn 80mm/100 mm (3in/4in), PP clad
- 3 Flange
- 4 Mounting bracket

3.1.2 Micropilot FMR57

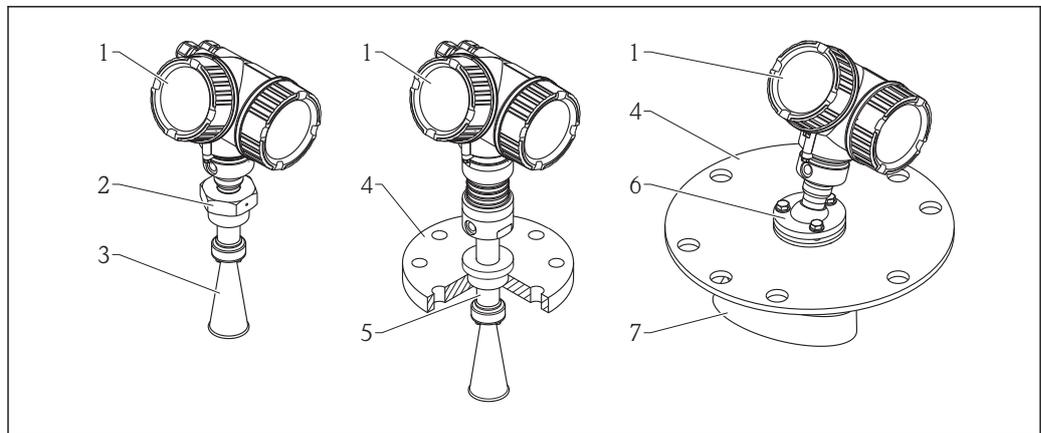


A0016807

2 Design of the Micropilot FMR57 (26 GHz)

- 1 Electronics housing
- 2 Process connection (Thread)
- 3 Horn antenna
- 4 Flange
- 5 Antenna extension
- 6 Alignment device
- 7 Parabolic antenna

3.1.3 Electronics housing

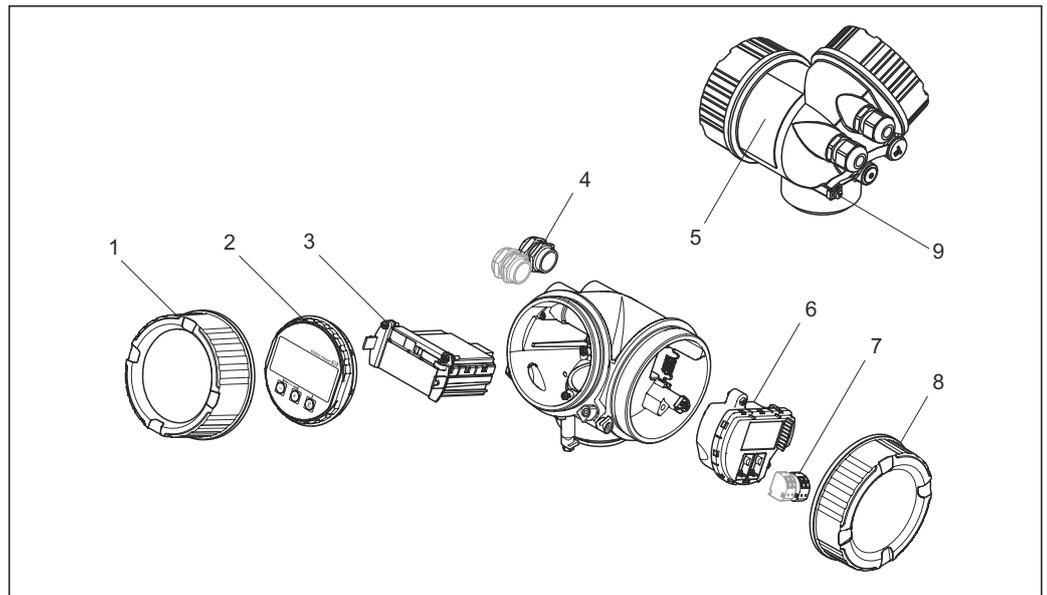

A0012422

3 Design of the electronics housing

- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands (1 or 2, depending on instrument version)
- 5 Nameplate
- 6 I/O electronics module
- 7 Terminals (pluggable spring terminals)
- 8 Connection compartment cover
- 9 Grounding terminal

3.2 Registered trademarks

FOUNDATION™ Fieldbus

Registered trademark of the Fieldbus Foundation, Austin, Texas, USA

KALREZ®, VITON®

Registered trademark of DuPont Performance Elastomers L.L.C., Wilmington, USA

TEFLON®


Registered trademark of E.I. DuPont de Nemours & Co., Wilmington, USA

TRI CLAMP®

Registered trademark of Alfa Laval Inc., Kenosha, USA


4 Incoming acceptance and product identification

4.1 Incoming acceptance

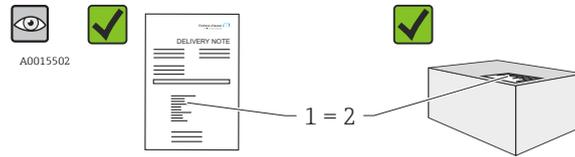


A0022480

Are the order codes on the delivery note (1) and the product sticker (2) identical?

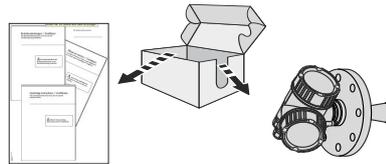


A0016871

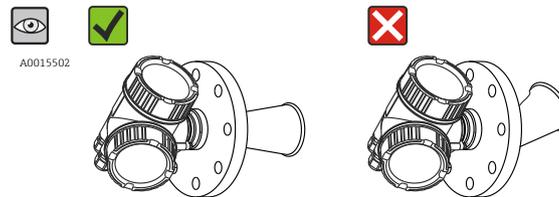

A0016872

Are the goods undamaged?

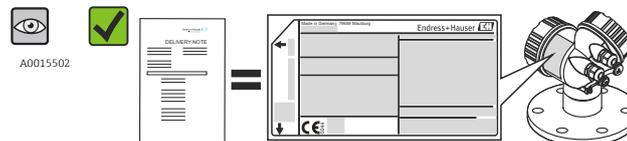

A0022491

Do the nameplate data match the ordering information on the delivery note?



A0022494

Is the DVD with the operating tool present?
If required (see nameplate): Are the Safety Instructions (XA) present?

 If one of these conditions is not satisfied, contact your Endress+Hauser Sales Center.

4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Extended order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

4.2.1 Nameplate

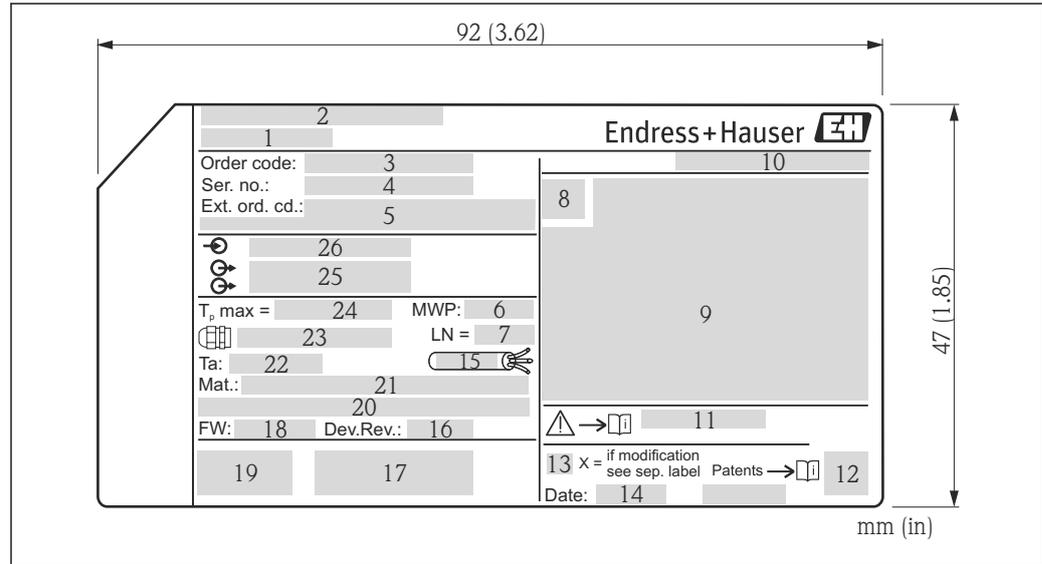

A0019444

4 Nameplate of the Micropilot

- 1 Device name
- 2 Address of manufacturer
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Process pressure
- 7 Antenna length (only for FMR51 with antenna extension)
- 8 Certificate symbol
- 9 Certificate and approval relevant data
- 10 Degree of protection: e.g. IP, NEMA
- 11 Document number of the Safety Instructions: e.g. XA, ZD, ZE
- 12 Data Matrix Code
- 13 Modification mark
- 14 Manufacturing date: year-month
- 15 Temperature resistance of the cable
- 16 Gerätrevision (Dev.Rev.)
- 17 Additional information about the device version (certificates, approvals, communication): e.g. SIL, PROFIBUS
- 18 Firmware version (FW)
- 19 CE mark, C-Tick
- 20 Profibus PA: Profil-Version; FOUNDATION Fieldbus: Device ID
- 21 Material in contact with process
- 22 Permitted ambient temperature (T_a)
- 23 Size of the thread of the cable glands
- 24 Maximum process temperature
- 25 Signal outputs
- 26 Operating voltage

i Only 33 digits of the extended order code can be indicated on the nameplate. If the extended order code exceeds 33 digits, the rest will not be shown. However, the complete extended order code can be viewed in the operating menu of the device:
Extended order code 1 to 3 parameter

5 Storage, Transport

5.1 Storage conditions

- Permitted storage temperature: -40 to +80 °C (-40 to +176 °F)
- Use the original packaging.


5.2 Transport product to the measuring point

NOTICE

Housing or antenna horn may be damaged or break away.

Risk of injury!

- ▶ Transport the measuring device to the measuring point in its original packaging or at the process connection.
- ▶ Do not fasten lifting devices (hoisting slings, lifting eyes etc.) at the housing or the antenna horn but at the process connection. Take into account the mass center of the device in order to avoid unintended tilting.
- ▶ Comply with the safety instructions, transport conditions for devices over 18kg (39.6lbs) (IEC61010).

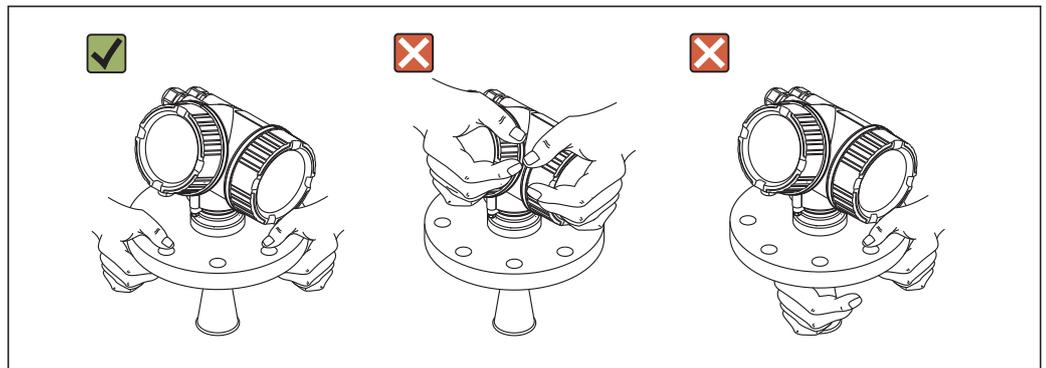


A0016875

6 Installation


6.1 Installation conditions

6.1.1 Mounting position

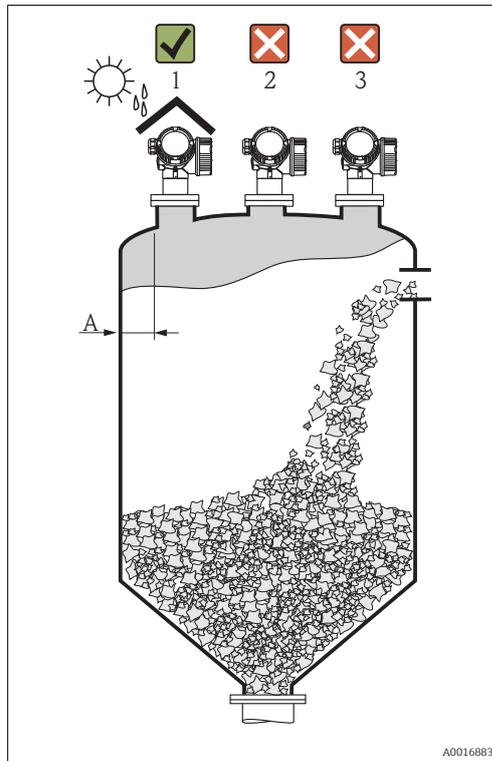


- Recommended distance **A** from wall to outer edge of nozzle: $\sim 1/6$ of vessel diameter. Nevertheless the device should not be installed closer than 20 cm (7.87 in) to the vessel wall. If the wall of the vessel is not smooth (corrugated metal, welding seams, irregularities etc.) the distance from the wall should be kept as large as possible. If necessary, use an alignment device to prevent interference reflections from the wall → [32](#).
- Not in the center (2), as interference can cause signal loss.
- Not above the fill stream (3).
- It is recommended to use a weather protection cover (1) in order to protect the device from direct sun or rain.
- In extremely dusty applications, the integrated air purge connection can prevent clogging of the antenna → [33](#).

6.1.2 Vessel installations

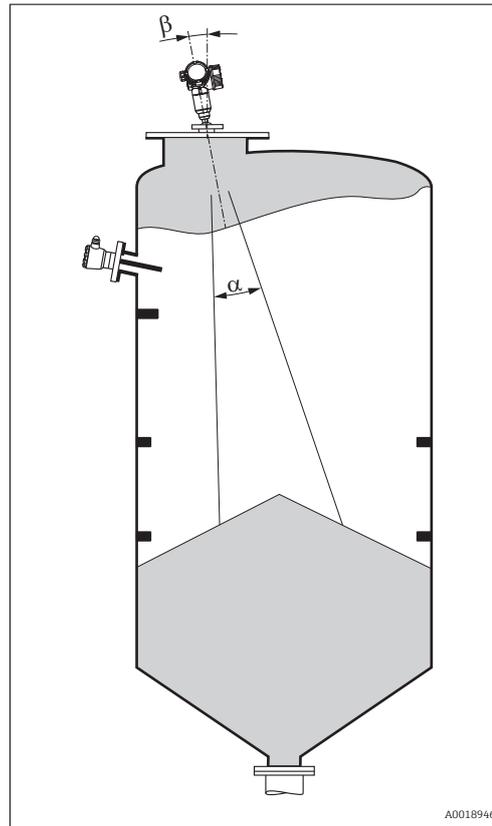

Avoid any installations (limit switches, temperature sensors, braces etc.) inside the signal beam. Take into account the beam angle →  24.


6.1.3 Reduction of interference echoes

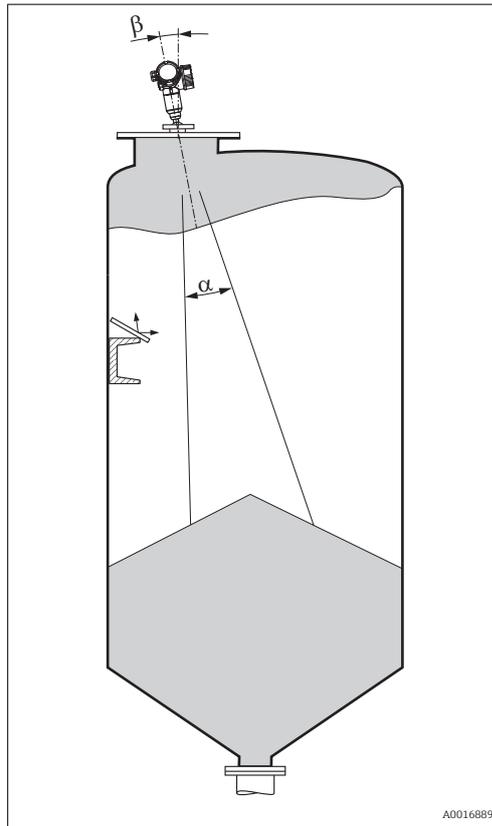

Metallic screens mounted at a slope spread the radar signal and can, therefore, reduce interference echoes.

6.1.4 Measurement in a plastic vessel

If the outer wall of the vessel is made of a non-conductive material (e.g. GRP), microwaves can also be reflected off interfering installations outside the signal beam (e.g. metallic pipes (1), ladders (2), grates (3), ...). Therefore, there should be no such interfering installations in the signal beam. Please contact Endress+Hauser for further information.

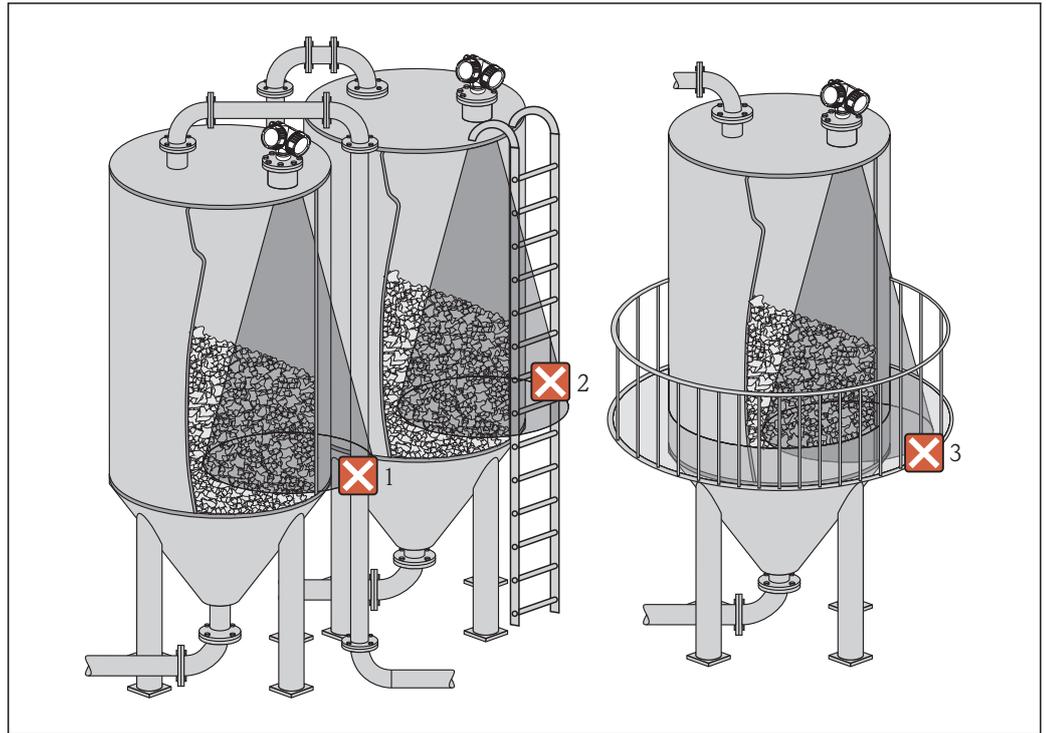


A0017125

6.1.5 Optimization options

- **Antenna size**
The bigger the antenna, the smaller the beam angle α and the fewer interference echoes
→ 24.
- **Mapping**
The measurement can be optimized by means of electronic suppression of interference echoes.
See the **Confirm distance** parameter (→ 130) for details.
- **Antenna alignment**
Take into account the marker on the flange or threaded connection → 26.
- **Metallic screens mounted at a slope**
They spread the radar signals and can, therefore, reduce interference echoes.
- **Variable flange seal (FMR56)**
Using the variable flange seal, the device can be aligned in the direction of the product surface. For details refer to Operating Instructions BA01048F, chapter "Accessories".
- **Alignment device for FMR57**
In FMR57 with alignment device, the sensor can be optimally aimed within the vessel and thus interference echoes can be avoided. The maximum angle β is $\pm 15^\circ$.
In particular, sensor alignment serves to:
 - prevent interference reflections
 - extend the maximum possible measuring range in conical outlets

6.1.6 Beam angle

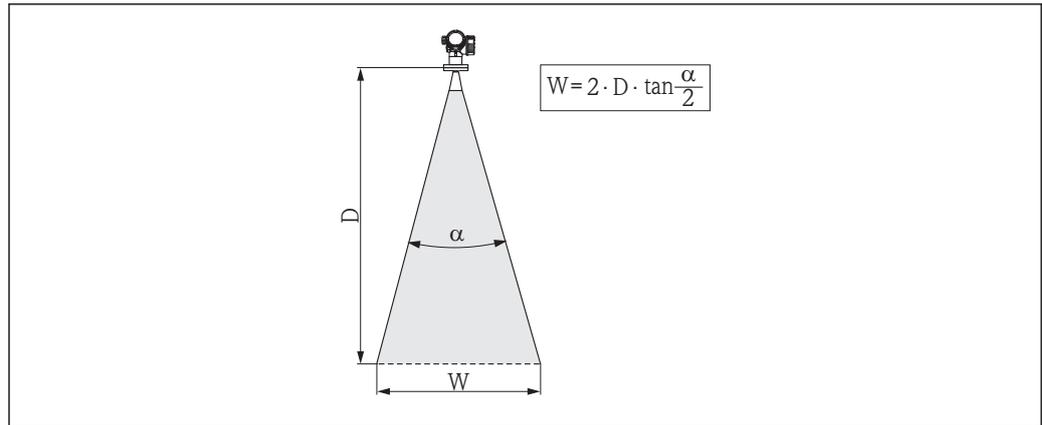

A0016891

5 Relationship between beam angle α , distance D and beamwidth diameter W

The beam angle is defined as the angle α where the energy density of the radar waves reaches half the value of the maximum energy density (3-dB-width). Microwaves are also emitted outside the signal beam and can be reflected off interfering installations.

Beam diameter W as a function of beam angle α and measuring distance D :

FMR56		
Antenna size	80 mm (3 in)	100 mm (4 in)
Beam angle α	10°	8°
Measuring distance (D)	Beamwidth diameter (W)	
3 m (9.8 ft)	0.53 m (1.7 ft)	0.42 m (1.4 ft)
6 m (20 ft)	1.05 m (3.4 ft)	0.84 m (2.8 ft)
9 m (30 ft)	1.58 m (5.2 ft)	1.26 m (4.1 ft)
12 m (39 ft)	2.1 m (6.9 ft)	1.68 m (5.5 ft)
15 m (49 ft)	2.63 m (8.6 ft)	2.10 m (6.9 ft)
20 m (66 ft)	3.50 m (11 ft)	2.80 m (9.2 ft)
25 m (82 ft)	4.37 m (14 ft)	3.50 m (11 ft)
30 m (98 ft)	5.25 m (17 ft)	4.20 m (14 ft)


FMR57 - Horn antenna		
Antenna size	80 mm (3 in)	100 mm (4 in)
Beam angle α	10°	8°
Measuring distance (D)	Beamwidth diameter W	
5 m (16 ft)	0.87 m (2.9 ft)	0.7 m (2.3 ft)
10 m (33 ft)	1.75 m (5.7 ft)	1.4 m (4.6 ft)
15 m (49 ft)	2.62 m (8.6 ft)	2.1 m (6.9 ft)
20 m (66 ft)	3.50 m (11 ft)	2.80 m (9.2 ft)
30 m (98 ft)	5.25 m (17 ft)	4.20 m (14 ft)
40 m (131 ft)	7.00 m (23 ft)	5.59 m (18 ft)
50 m (164 ft)	8.75 m (29 ft)	6.99 m (23 ft)

FMR57 - Parabolic antenna		
Antenna size	200 mm (8 in)	250 mm (10 in)
Beam angle α	4°	3,5°
Measuring distance (D)	Beamwidth diameter W	
5 m (16 ft)	0.35 m (1.1 ft)	0.30 m (1 ft)
10 m (33 ft)	0.70 m (2.3 ft)	0.61 m (2 ft)
15 m (49 ft)	1.05 m (3.4 ft)	0.92 m (3 ft)
20 m (66 ft)	1.40 m (4.6 ft)	1.22 m (4 ft)
30 m (98 ft)	2.10 m (6.9 ft)	1.83 m (6 ft)
40 m (131 ft)	2.79 m (9.2 ft)	2.44 m (8 ft)
50 m (164 ft)	3.50 m (11 ft)	3.06 m (10 ft)
60 m (197 ft)	4.19 m (14 ft)	3.70 m (12 ft)
70 m (230 ft)	4.90 m (16 ft)	4.28 m (14 ft)

6.2 Measuring conditions

- The measuring range begins, where the beam hits the bottom. Particularly with conical outlets the level cannot be detected below this point. The maximum measuring range can be increased in such applications by using an alignment device →  32.
- In case of media with a low dielectric constant ($\epsilon_r = 1.5$ to 2.5)²⁾, the bottom can be visible through the medium at low levels. In order to guarantee the required accuracy in these cases, it is recommended to position the zero-point at a distance **C** above the bottom (see figure).
- In principle it is possible to measure up to the tip of the antenna with Micropilot. However, due to considerations regarding abrasion and build-up and depending on the orientation of the product surface (angle of repose), the end of the measuring range should be at a distance of **A** (see figure) from the tip of the antenna. If required, and if some conditions (high DC value, flat angle of repose) are met, shorter distances can be achieved.

2) Dielectric constants of important media commonly used in various industries are summarized in the DC manual (CP01076F) and in the Endress+Hauser "DC Values App" (available for Android and iOS).

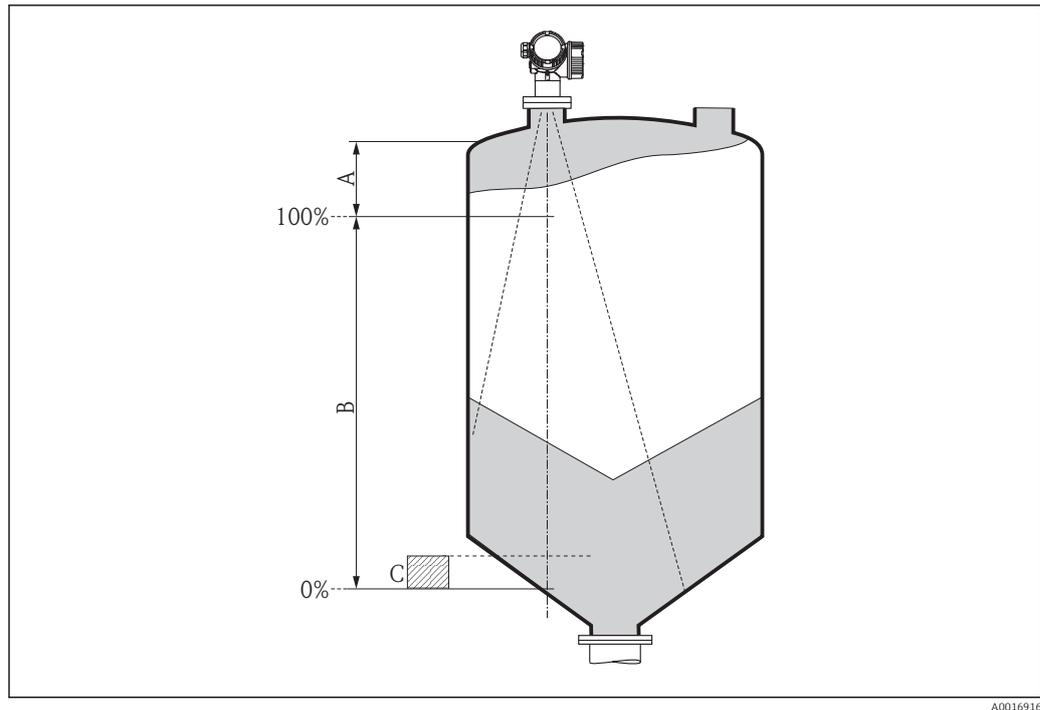

Device	A [mm (in)]	C [mm (in)]
FMR56	400(15.7)	50 to 150(1.97 to 5.91)
FMR57		


6.3 Installation in vessel (free space)

6.3.1 Horn antenna with slip-on flange (FMR56)

Alignment

i When using the Micropilot with a slip-on flange in explosion-hazardous areas, strictly observe all specifications in the relevant Safety Instructions (XA).


- Align the antenna vertically to the product surface.
Optionally, a variable flange seal, which is available as an accessory, can be used for alignment (see Technical Information BA01048F, chapter "Accessories").
- A marking at the boss enables alignment of the antenna. This marking must be aligned towards the tank wall as well as possible.

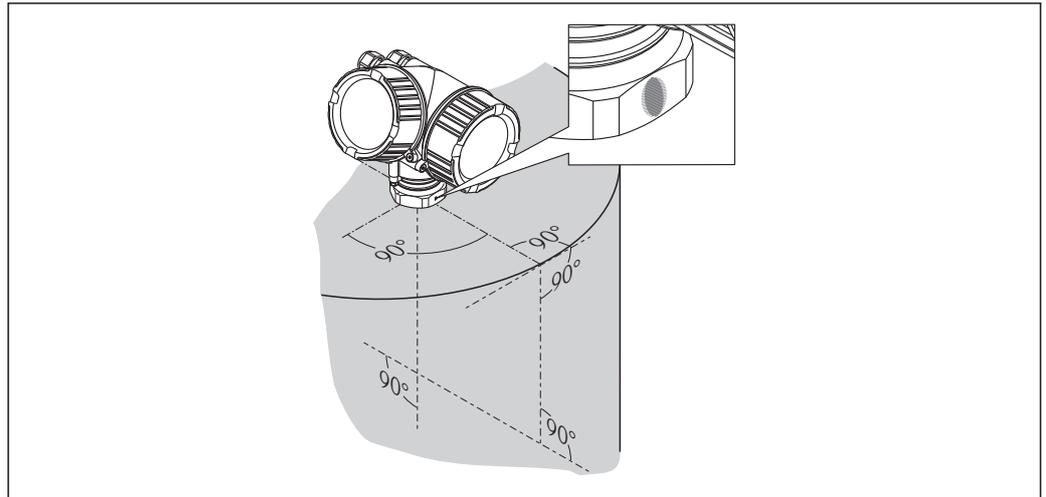

A0019434

i Depending on the device version the marking may be a circle or two short parallel lines.

Nozzle mounting

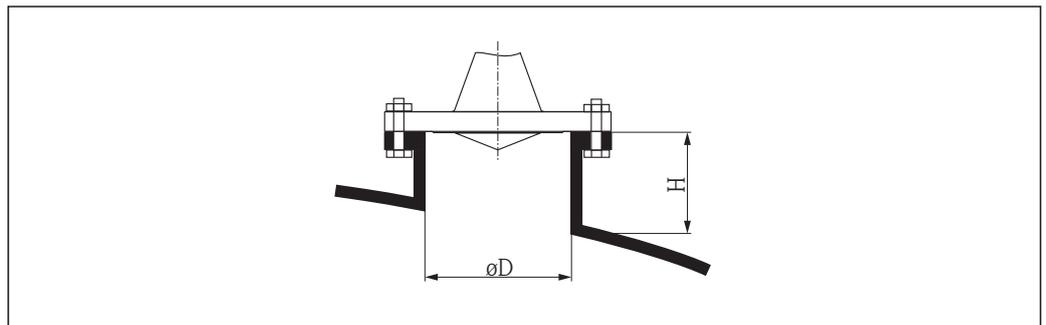


A0016868

6 Nozzle height and diameter for horn antenna with slip-on flange

Nozzle diameter D	Maximum nozzle height H_{max}
80 mm (3 in)	300 mm (11.8 in)
100 mm (4 in)	400 mm (15.8 in)
150 mm (6 in)	500 mm (19.7 in)

6.3.2 Horn antenna with mounting bracket (FMR56)

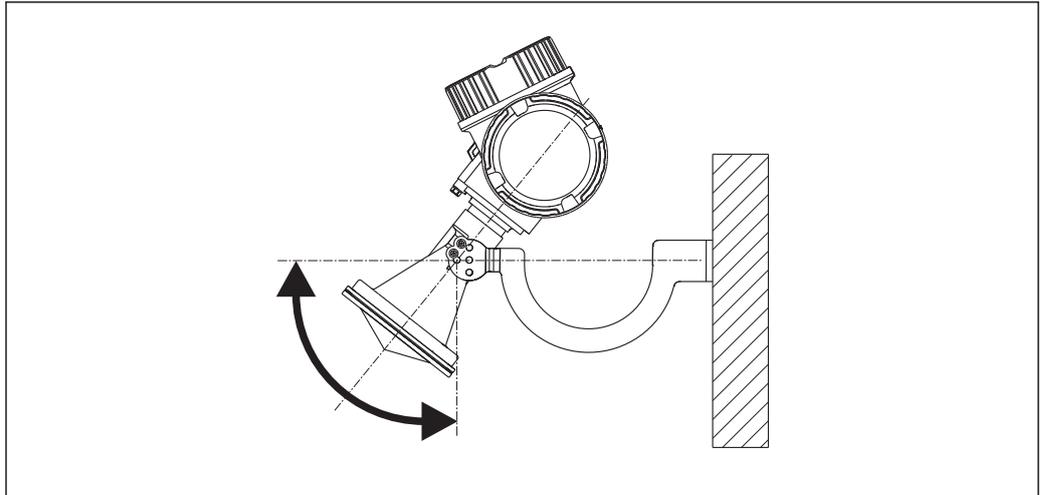

A0016865

 7 Installation of the horn antenna with mounting bracket

Align the antenna vertically to the product surface using the mounting bracket.

NOTICE

The mounting bracket has no conductive connection to the transmitter housing.


Danger of electrostatic charge

- ▶ Connect the mounting bracket to the local potential equalization system.

6.3.3 Horn antenna (FMR57)

Alignment

- Ideally, the horn antenna should be installed vertically. To avoid interference reflections or for optimum alignment within the vessel, the Micropilot with optional alignment device can be inclined by 15° in all directions →  32.
- A marking at the boss enables alignment of the antenna. This marking must be aligned towards the tank wall as well as possible.

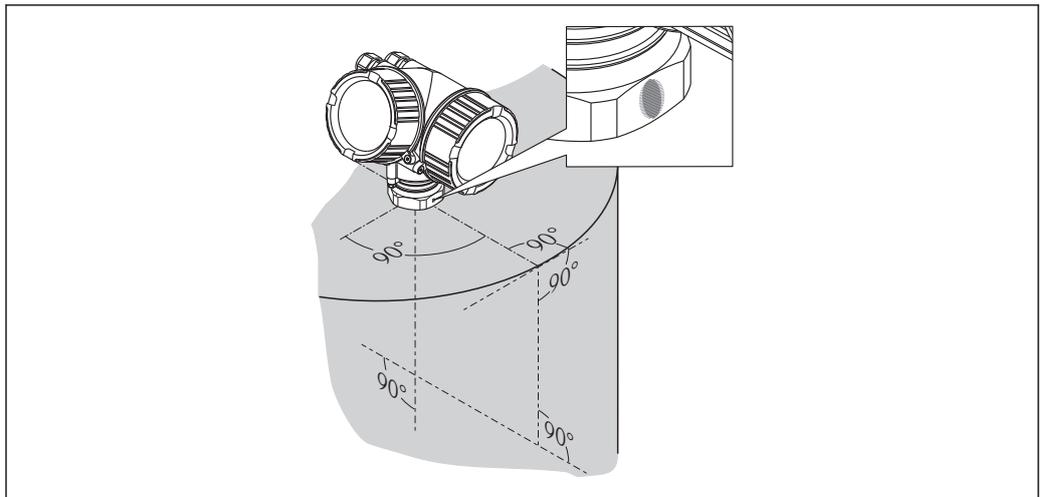


A0019434

-  Depending on the device version the marking may be a circle or two short parallel lines.

Nozzle mounting

The horn antenna should protrude from the nozzle. If this is not possible for mechanical reasons, larger nozzle heights can be accepted.

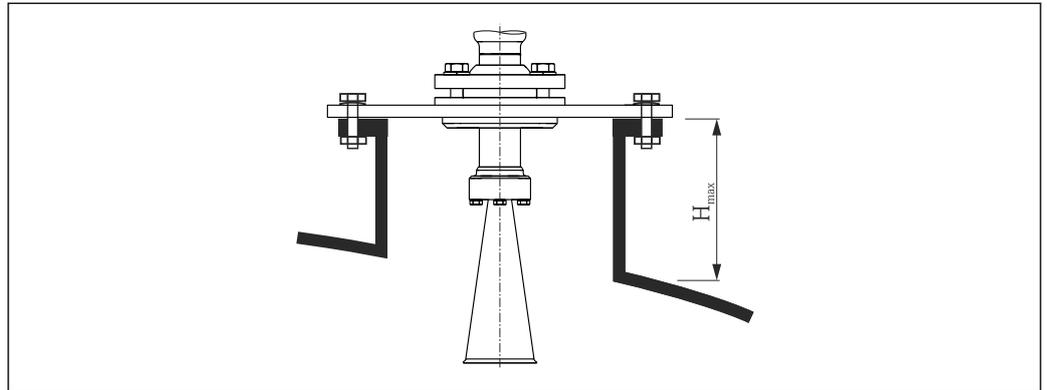

A0016825

 8 Nozzle height for the horn antenna (FMR57)

Antenna ¹⁾	Maximum nozzle height H_{max} ²⁾
BC: Horn 80mm/3"	260 mm (10.2 in)
BD: Horn 100mm/4"	480 mm (18.9 in)

- 1) Feature 070 of the product structure
 2) valid for antennas without antenna extension

 Please contact Endress+Hauser for applications with higher nozzle.

Threaded connection

 For devices with a threaded connection it may be necessary - depending on the antenna size - to unmount the horn before fastening the device and to mount it again afterwards.

- Tighten with the hexagonal nut only.
- Tool : 60 mm hexagonal wrench
- Maximum permissible torque: 60 Nm (44 lbf ft)

6.3.4 Parabolic antenna (FMR57)


Alignment

Ideally, the parabolic antenna should be installed vertically. To avoid interference reflections or for optimum alignment within the vessel, the Micropilot with optional alignment device can be swiveled by 15° in all directions →  32.

Nozzle mounting

- Case 1: Ideally, the parabolic antenna should protrude from the nozzle (1). Particularly when using the alignment device, please ensure that the parabolic reflector is protruding from the nozzle/roof so as not to inhibit alignment.
- Case 2: For applications with higher nozzle it may be necessary to install the parabolic antenna completely in the nozzle (2).

The maximum height of the nozzle (H_{max}) to the parabolic mirror should not exceed 500 mm (19.7 in). Interfering edges within the nozzle should be avoided.

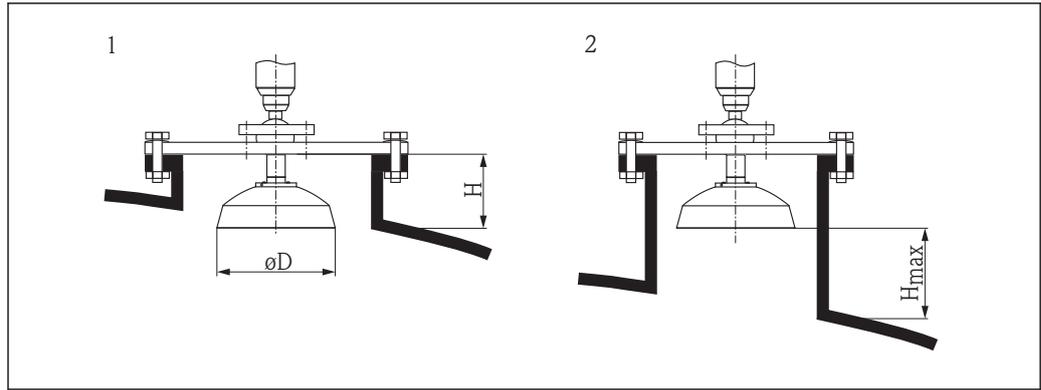

A0016827

9 Nozzle mounting of Micropilot FMR57 with parabolic antenna

- 1 Antenna protrudes from the nozzle
- 2 Antenna completely within the nozzle

Antenn ¹⁾	Antenna diameter D	Nozzle height H for case 1	Maximum nozzle height H_{max} for case 2
FA: Parabol 200mm/8"	173 mm (6.81 in)	< 50 mm (1.97 in)	500 mm (19.7 in)
FB: Parabol 250mm/10"	236 mm (9.29 in)	< 50 mm (1.97 in)	500 mm (19.7 in)


1) Feature 070 of the product structure

Examples for installation with small flange

If the flange is smaller than the parabolic reflector, the device can be mounted in one of the following ways:

- Standard installation → 30
This requires dismantling of the parabolic reflector.
- Installation with hinged flange → 31

Standard installation

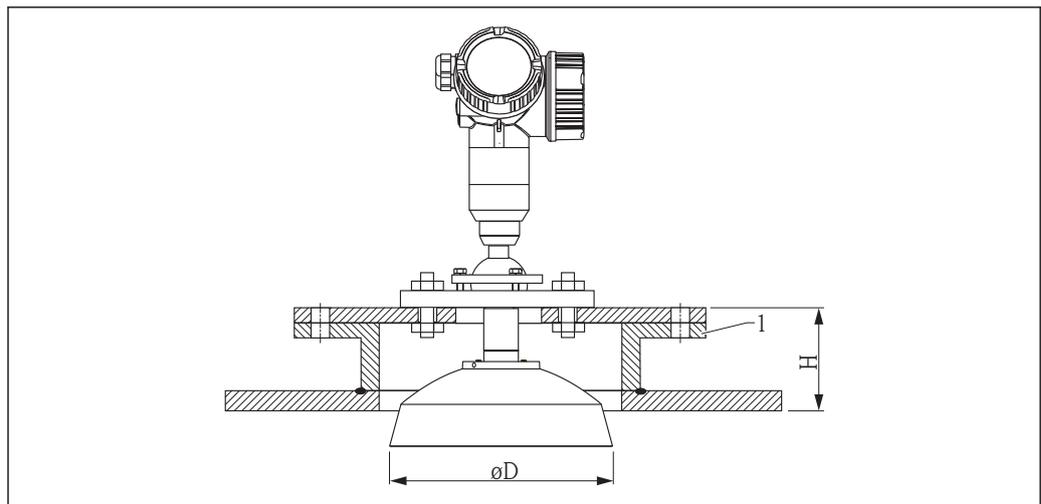

A0018874


1 Nozzle

Antenna size	ϕD	H ¹⁾
200 mm (8 in)	173 mm (6.81 in)	< 50 mm (1.96 in)
250 mm (10 in)	236 mm (9.29 in)	< 50 mm (1.96 in)

1) without antenna extension

Installation with hinged flange


 At hinged flanges, the length of the antenna must be taken into account.

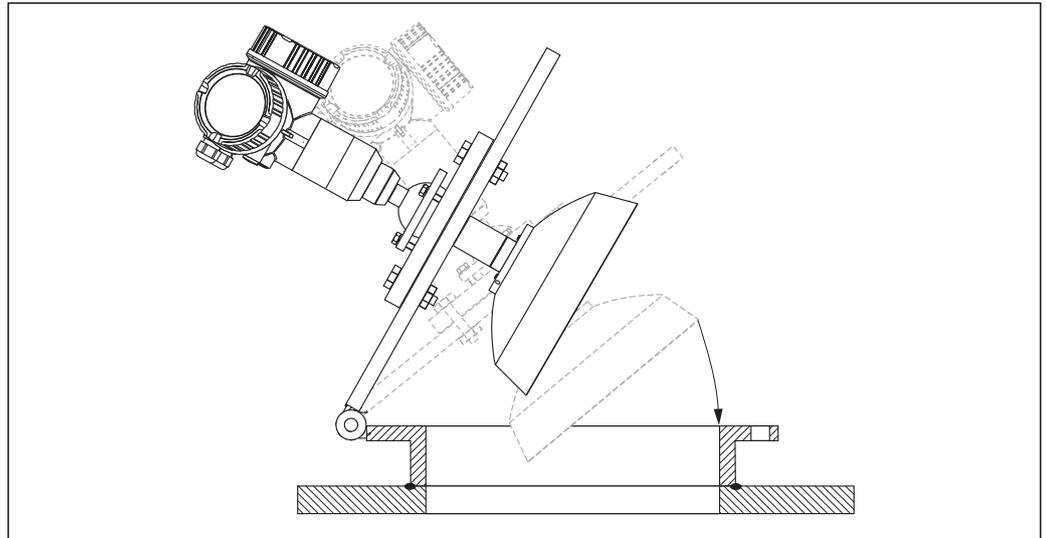

A0018878

Dismantling the parabolic reflector

For installation in a nozzle, the parabolic reflector can be dismantled:

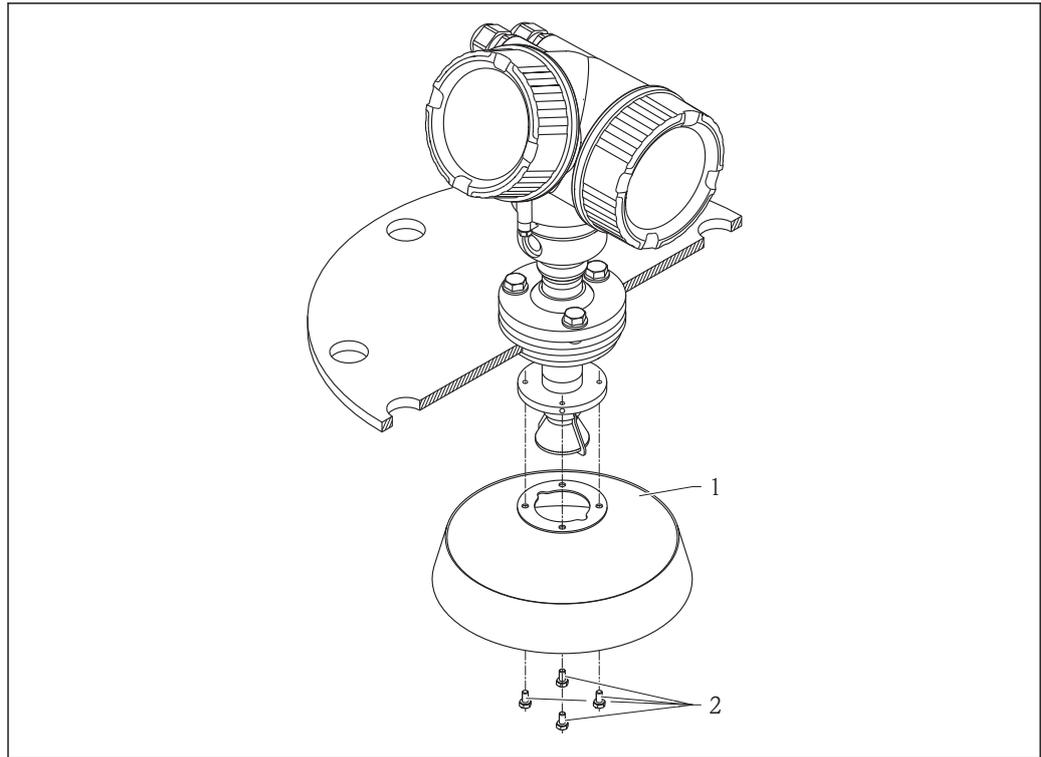


A0018877

- 1 Parabolic reflector
 2 4 bolts; torque: 3 Nm (2,2 lbf ft)

6.3.5 Alignment device for FMR57

Using the alignment device it is possible to tilt the antenna axis by up to 15° in all directions. The alignment device is used for the optimum alignment of the radar beam with the bulk solids surface.

Product structure: Feature 100 "Process connection", options XCJ, XEJ, XFJ

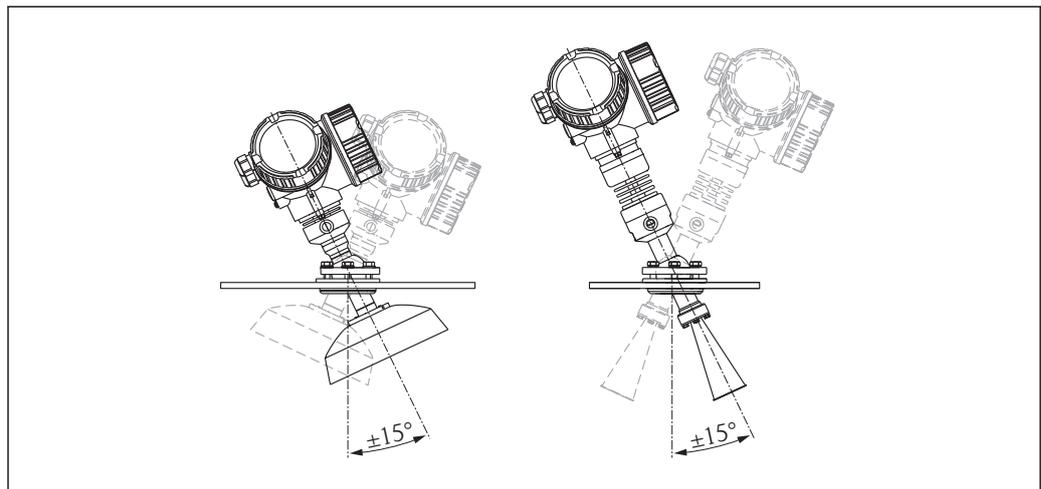

A0016931


10 Micropilot FMR57 with alignment device

Align antenna axis:

1. Loosen screws.
2. Align antenna axis (up to. $\pm 15^\circ$ in all directions).
3. Tighten screws with 15 Nm (11 lbf ft).

6.3.6 Integrated air purge connection for FMR57

In extremely dusty applications, the integrated air purge connection can prevent clogging of the antenna. Pulsed operation is recommended.

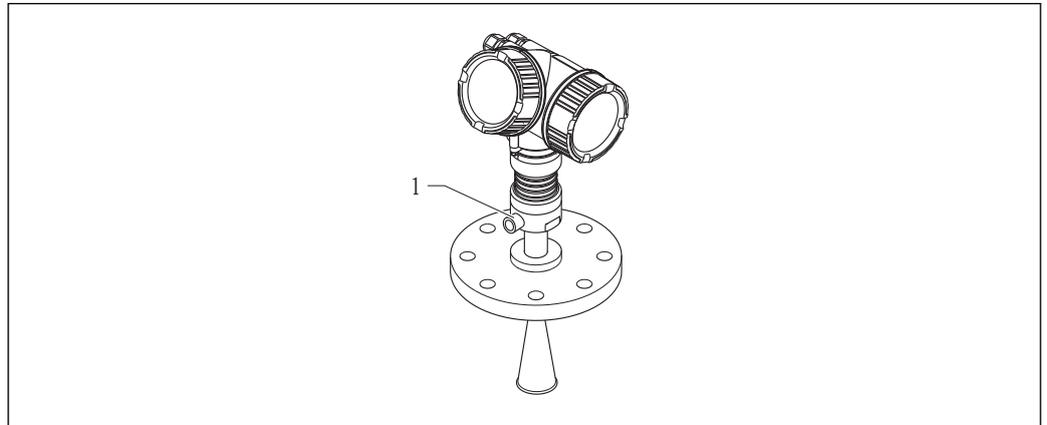

A0016932

 11 Micropilot FMR57 with air purge connection

1 Air purge connection NPT $\frac{1}{4}$ or G $\frac{1}{4}$

Pressure range of the purge air

- Pulsed operation:
max. 6 bar (87 psi)
- Permanent operation:
200 to 500 mbar (3 to 7.25 psi)


Connection of the purge air

- Tools:
 - 13mm (G 1/4) open-end wrench
 - 14 mm (NPT) open-end wrench
 - 17 mm (NPT "adapter") open-end wrench
- min. torque: 6 Nm (4.4 lbf ft)
- max. torque: 7 Nm (5.2 lbf ft)

 Make sure to use dry purge air.

 In general, air purging should only be used as much as necessary, since too much air purging may cause mechanical damage (abrasion).

6.4 Vessels with heat insulation

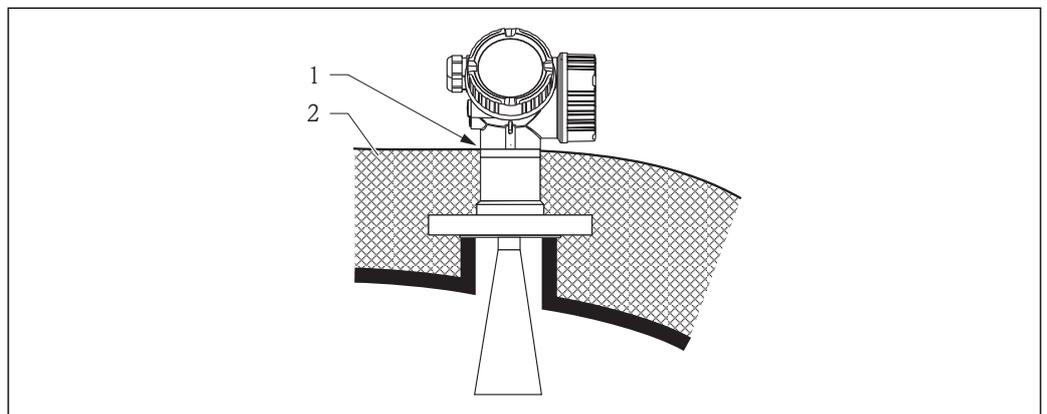


A0019142

If process temperatures are high, the device must be included in normal tank insulation to prevent the electronics heating up as a result of heat radiation or convection. The insulation may not exceed beyond the neck of the housing.

6.5 Turning the transmitter housing


To provide easier access to the connection compartment or display module, the transmitter housing can be turned:

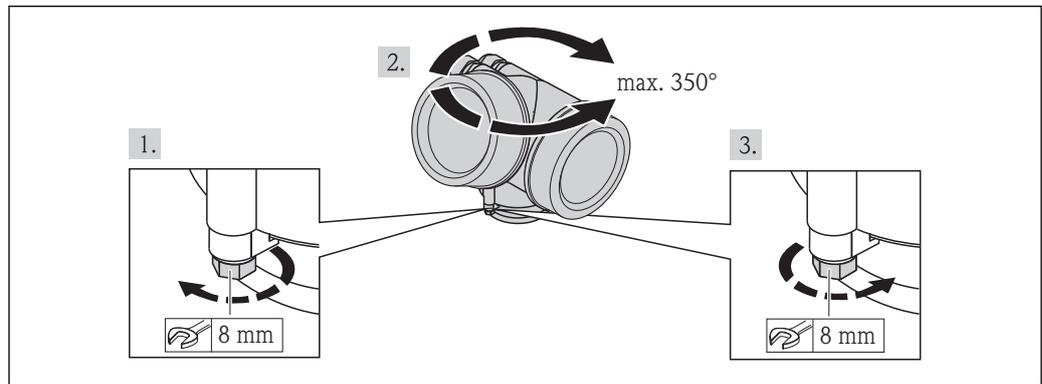

A0013713

1. Unscrew the securing screw using an open-ended wrench.
2. Rotate the housing in the desired direction.
3. Tighten the securing screw (1,5 Nm for plastics housing; 2,5 Nm for aluminium or stainless steel housing).

6.6 Turning the display module

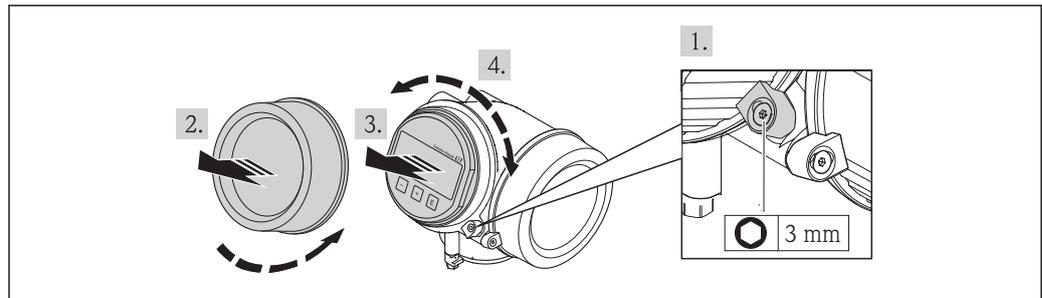

A0013905

1. If present: Loosen the screw of the securing clamp of the electronics compartment cover using an Allen key and turn the clamp 90° counterclockwise.
2. Unscrew cover of the electronics compartment from the transmitter housing.
3. Pull out the display module with a gentle rotation movement.
4. Rotate the display module into the desired position: Max. $8 \times 45^\circ$ in each direction.
5. Feed the spiral cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.
6. Screw the cover of the electronics compartment firmly back onto the transmitter housing.
7. Tighten the securing clamp again using the Allen key (Torque: 2.5 Nm).

6.7 Post-installation check


<input type="radio"/>	Is the device undamaged (visual inspection)?
<input type="radio"/>	Does the device conform to the measuring point specifications? For example: <ul style="list-style-type: none">■ Process temperature■ Process pressure (refer to the chapter on "Material load curves" of the "Technical Information" document)■ Ambient temperature range■ Measuring range
<input type="radio"/>	Are the measuring point identification and labeling correct (visual inspection)?
<input type="radio"/>	Is the device adequately protected from precipitation and direct sunlight?
<input type="radio"/>	Are the securing screw and securing clamp tightened securely?

7 Electrical connection

7.1 Connection conditions

7.1.1 Terminal assignment

PROFIBUS PA / FOUNDATION Fieldbus


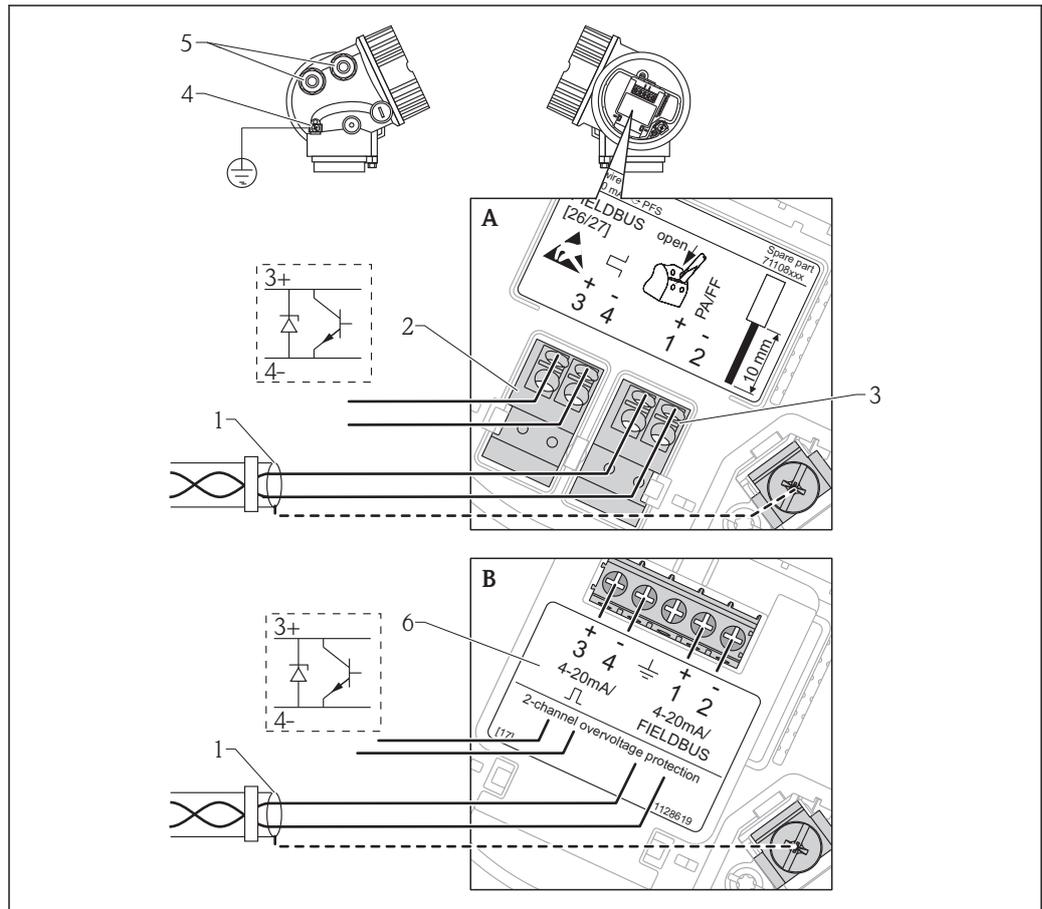


A0011341

12 Terminal assignment PROFIBUS PA / FOUNDATION Fieldbus

- A Without integrated overvoltage protection
- B With integrated overvoltage protection
- 1 Cable screen: Observe cable specifications
- 2 Switch output (open collector): Terminals 3 and 4
- 3 PROFIBUS PA / FOUNDATION Fieldbus: Terminals 1 and 2
- 4 Terminal for potential equalization line
- 5 Cable entries
- 6 Overvoltage protection module

Connection examples for the switch output

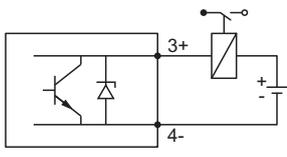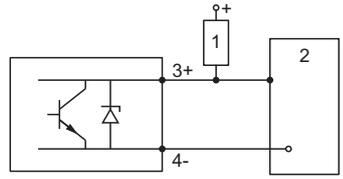 <p>13 Connection of a relay</p> <p>Suitable relays (examples):</p> <ul style="list-style-type: none"> ▪ Solid-state relay: Phoenix Contact OV-24DC/480AC/5 with mounting rail connector UMK-1 OM-R/AMS ▪ Electromechanical relay: Phoenix Contact PLC-RSC-12DC/21 <p style="text-align: right;"><small>A0015909</small></p>	 <p>14 Connection of a digital input</p> <ol style="list-style-type: none"> 1 Pull-up resistor 2 Digital input <p style="text-align: right;"><small>A0015910</small></p>
--	--

i For optimum interference immunity we recommend to connect an external resistor (internal resistance of the relay or Pull-up resistor) of $< 1\,000\ \Omega$.

7.1.2 Cable specification

- Minimum cross-section: See the "Terminal" specification in the Technical Information for the device.
- For ambient temperature $T_U \geq 60\ ^\circ\text{C}$ ($140\ ^\circ\text{F}$): use cable for temperature $T_U + 20\ \text{K}$.

FOUNDATION Fieldbus


Endress+Hauser recommends using twisted, shielded two-wire cables.

i For further information on the cable specifications, see Operating Instructions BA00013S "FOUNDATION Fieldbus Overview", FOUNDATION Fieldbus Guideline and IEC 61158-2 (MBP).


7.1.3 Device plug connectors

i For the versions with fieldbus plug connector (M12 or 7/8"), the signal line can be connected without opening the housing.

Pin assignment of the M12 plug connector

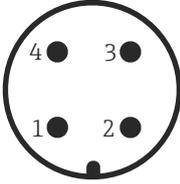 <p style="text-align: right; font-size: small;">A0011175</p>	Pin	Meaning
	1	Signal +
	2	not connected
	3	Signal -
	4	Ground

Pin assignment of the 7/8" plug connector

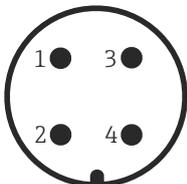 <p style="text-align: right; font-size: small;">A0011176</p>	Pin	Meaning
	1	Signal -
	2	Signal +
	3	Not connected
	4	Screen

7.1.4 Supply voltage

PROFIBUS PA, FOUNDATION Fieldbus

"Power supply; Output" ¹⁾	"Approval" ²⁾	Terminal voltage
E: 2-wire; FOUNDATION Fieldbus, switch output G: 2-wire; PROFIBUS PA, switch output	<ul style="list-style-type: none"> ■ Non-Ex ■ Ex nA ■ Ex nA(ia) ■ Ex ic ■ Ex ic(ia) ■ Ex d(ia) / XP ■ Ex ta / DIP ■ CSA GP 	9 to 32 V ³⁾
	<ul style="list-style-type: none"> ■ Ex ia / IS ■ Ex ia + Ex d(ia) / IS + XP 	9 to 30 V ³⁾

- 1) Feature 020 of the product structure
- 2) Feature 010 of the product structure
- 3) Input voltages up to 35 V will not spoil the device.

Polarity sensitive	No
FISCO/FNICO compliant according to IEC 60079-27	Yes

7.1.5 Overvoltage protection

If the measuring device is used for level measurement in flammable liquids which requires the use of overvoltage protection according to DIN EN 60079-14, standard for test procedures 60060-1 (10 kA, pulse 8/20 μs), overvoltage protection has to be ensured by an integrated or external overvoltage protection module.

Integrated overvoltage protection

An integrated overvoltage protection module is available for 2-wire HART as well as PROFIBUS PA and FOUNDATION Fieldbus devices.

Product structure: Feature 610 "Accessory mounted", option NA "Overvoltage protection".

Technical data	
Resistance per channel	2 * 0.5 Ω max
Threshold DC voltage	400 to 700 V
Threshold impulse voltage	< 800 V
Capacitance at 1 MHz	< 1.5 pF
Nominal arrest impulse voltage (8/20 μs)	10 kA

External overvoltage protection

HAW562 or HAW569 from Endress+Hauser are suited as external overvoltage protection.

-  For detailed information please refer to the following documents:
- HAW562: TI01012K
 - HAW569: TI01013K

7.2 Connecting the device


⚠ WARNING

Explosion hazard!

- ▶ Comply with the relevant national standards.
- ▶ Observe the specifications in the Safety Instructions (XA).
- ▶ Only use the specified cable glands.
- ▶ Check whether the supply voltage matches the specifications on the nameplate.
- ▶ Before connecting the device: Switch the supply voltage off.
- ▶ Before switching on the supply voltage: Connect the potential bonding line to the exterior ground terminal.


Required tools and accessories:

- For instruments with safety pin for the lid: AF 3 Allen key
- Wire stripping pliers
- When using stranded wires: Wire end sleeves.

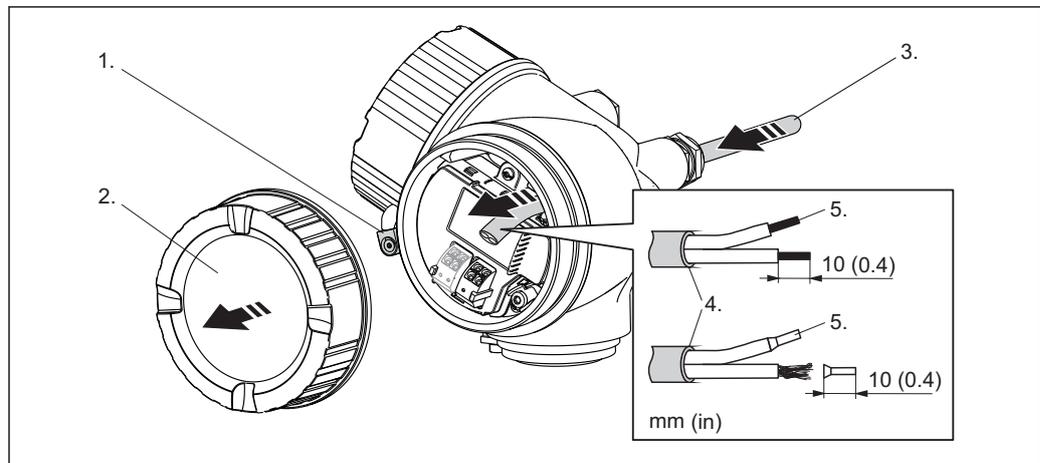

A0012619

1. Loosen the screw of the securing clamp of the connection compartment cover and turn the clamp 90° counterclockwise.
2. Unscrew the connection compartment cover.
3. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable.
5. Strip the cable ends 10 mm (0.4 in). For stranded cables, also attach wire end ferrules.
6. Firmly tighten the cable glands.

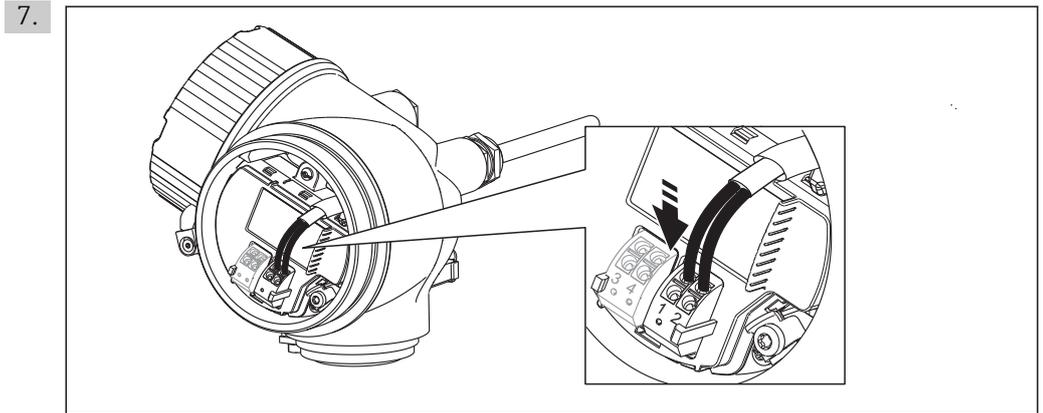

A0013837


Connect the cable in accordance with the terminal assignment → 36.

8. When using screened cable: Connect the cable screen to the ground terminal.
9. Screw the cover onto the connection compartment.
10. For instruments with safety pin for the lid: Adjust the safety pin so that its edge is over the edge of the display lid. Tighten the safety pin.

7.2.1 Pluggable spring-force terminals

Instruments without integrated overvoltage protection have pluggable spring-force terminals. Rigid conductors or flexible conductors with cable sleeve can directly be inserted and are contacted automatically.

To remove cables from the terminal: Press on the groove between the terminals using a flat-tip screwdriver ≤ 3 mm (0.12 inch) while pulling the cables out of the terminals.

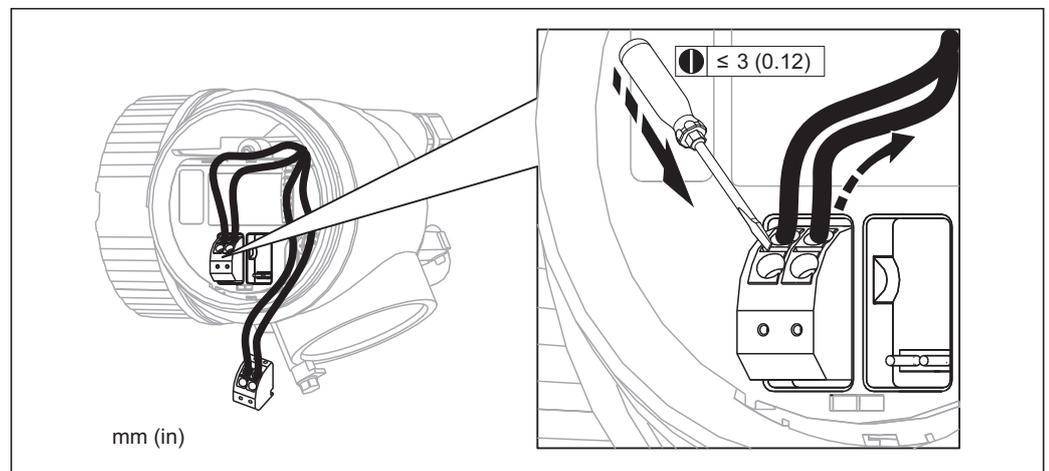

A0013661

7.3 Post-connection check



<input type="radio"/>	Are cables or the device undamaged (visual inspection)?
<input type="radio"/>	Do the cables comply with the requirements?
<input type="radio"/>	Do the cables have adequate strain relief?
<input type="radio"/>	Are all cable glands installed, firmly tightened and correctly sealed?
<input type="radio"/>	Does the supply voltage match the specifications on the transmitter nameplate?
<input type="radio"/>	Is the terminal assignment correct → 36?

<input type="radio"/>	If required: Is the protective earth connected correctly ?
<input type="radio"/>	If supply voltage is present: Is the device ready for operation and do values appear on the display module?
<input type="radio"/>	Are all housing covers installed and firmly tightened?
<input type="radio"/>	Is the securing clamp tightened correctly?


8 Operation options

8.1 Overview

8.1.1 Local operation

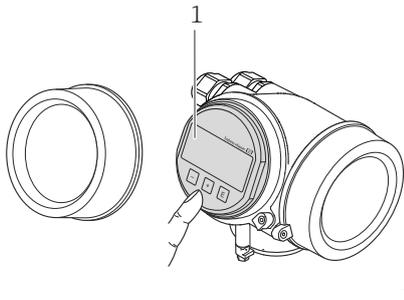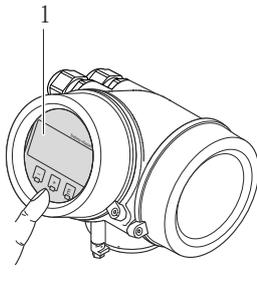Order code for "Display; Operation", option C "SD02"	Order code for "Display; Operation", option E "SD03"
	
<p>1 Operation with pushbuttons</p>	<p>1 Operation with touch control</p>

8.1.2 Operation with remote display and operating module FHX50

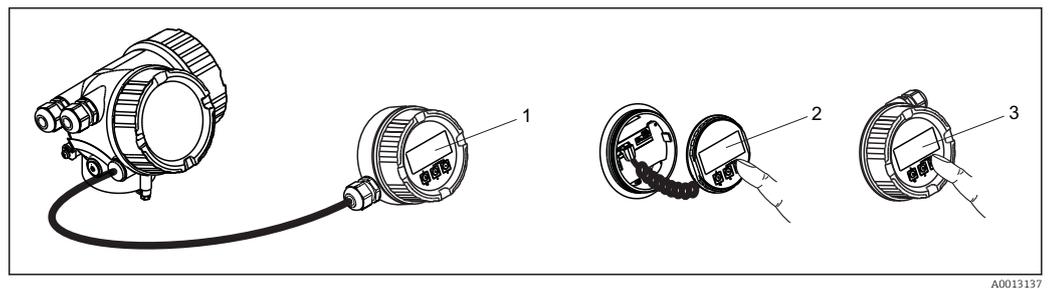


15 FHX50 operating options

- 1 Housing of the remote display and operating module FHX50
- 2 Display and operating module SD02, push buttons; cover must be removed
- 3 Display and operating module SD03, optical keys; can be operated through the glass of the cover

8.1.3 Remote operation

Via FOUNDATION Fieldbus

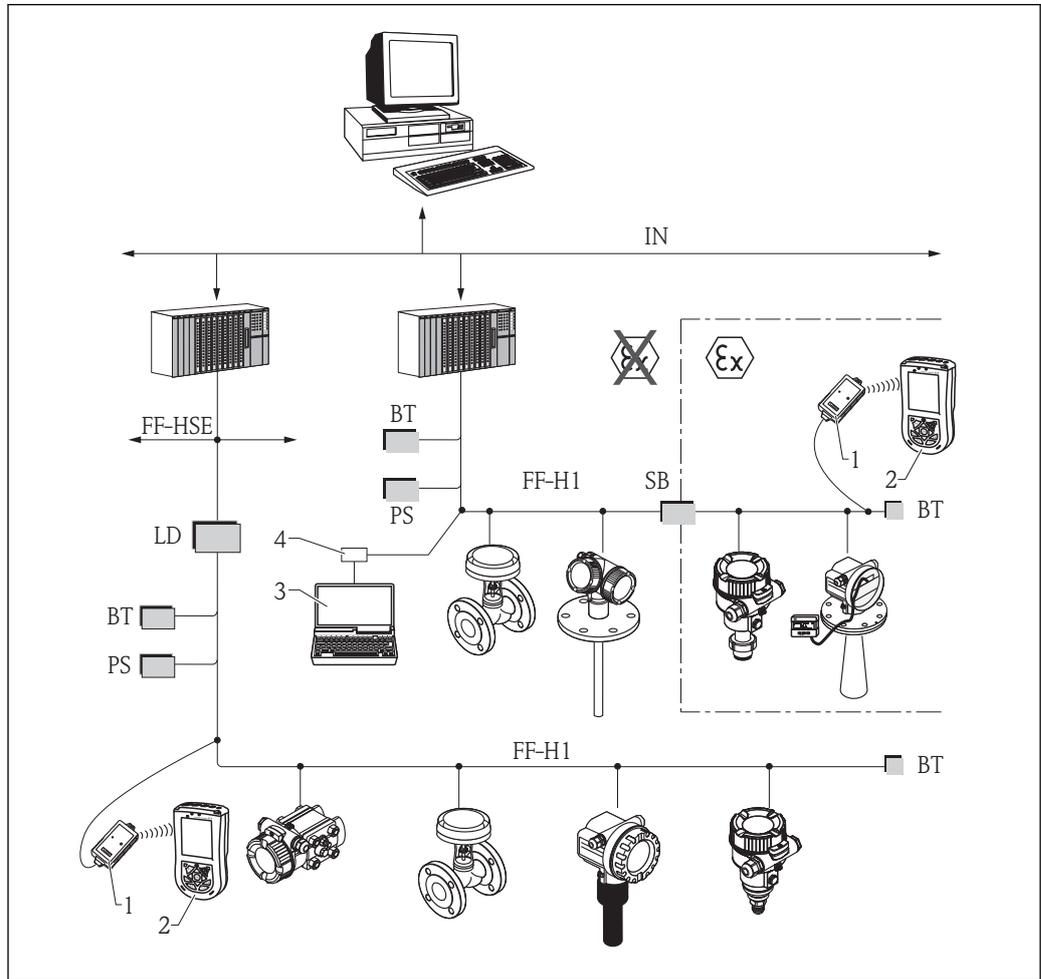


A0017188

16 FOUNDATION Fieldbus system architecture with associated components

- 1 FFblue Bluetooth modem
- 2 Field Xpert SFX350/SFX370
- 3 FieldCare
- 4 NI-FF interface card

IN	Industrial network
FF-HSE	High Speed Ethernet
FF-H1	FOUNDATION Fieldbus-H1
LD	Linking Device FF-HSE/FF-H1
PS	Bus Power Supply
SB	Safety Barrier
BT	Bus Terminator

Via service interface (CDI)

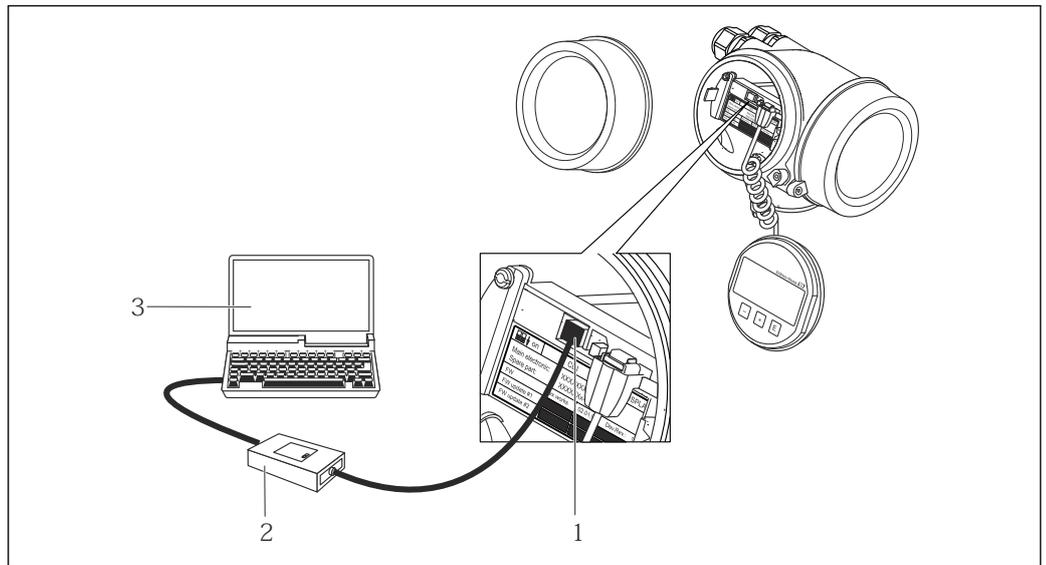

A0014019

- 1 Service interface (CDI) of the measuring device (= Endress+Hauser Common Data Interface)
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

Menu	Submenu / parameter	Meaning
	Language ¹⁾	Defines the operating language of the on-site display.
Setup	Parameter 1 ... Parameter N	When all these parameters have been assigned appropriate values, the measured should be completely configured in a standard application.
	Advanced setup	Contains further submenus and parameters: <ul style="list-style-type: none"> ▪ to adapt the device to special measuring conditions. ▪ to process the measured value (scaling, linearization). ▪ to configure the signal output.
Diagnostics	Diagnostic list	Contains up to 5 currently active error messages.
	Event logbook ²⁾	Contains the last 20 messages (which are no longer active).
	Device information	Contains information needed to identify the device.
	Measured values	Contains all current measured values.
	Data logging	Contains the history of the individual measuring values.
	Simulation	Used to simulate measured values or output values.
	Device check	Contains all parameters needed to check the measurement capability of the device.
Expert ³⁾ Contains all parameters of the device (including those which are already contained in one of the above submenus). This menu is organized according to the function blocks of the device. The parameter of the Expert menu are described in: GP01017F (FOUNDATION Fieldbus)	System	Contains all general device parameters which do not affect the measurement or the communication interface.
	Sensor	Contains all parameters needed to configure the measurement.
	Output	Contains all parameters needed to configure the switch output (PFS).
	Communication	Contains all parameters needed to configure the digital communication interface.
	Diagnostics	Contains all parameters needed to detect and analyze operational errors.

- 1) In case of operation via operating tools (e.g. FieldCare), the "Language" parameter is located at "Setup → Advanced setup → Display"
- 2) only available with local operation
- 3) On entering the "Expert" menu, an access code is always requested. If a customer specific access code has not been defined, "0000" has to be entered.

8.2.2 User roles and related access authorization

The two user roles **Operator** and **Maintenance** have different write access to the parameters if a device-specific access code has been defined. This protects the device configuration via the local display from unauthorized access →  48.

Access authorization to parameters

User role	Read access		Write access	
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	✓	✓	✓	--
Maintenance	✓	✓	✓	✓

If an incorrect access code is entered, the user obtains the access rights of the **Operator** role.

 The user role with which the user is currently logged on is indicated by the **Access status display** parameter (for display operation) or **Access status tooling** parameter (for tool operation).

8.2.3 Write protection via access code

Using the device-specific access code, the parameters for the measuring device configuration are write-protected and their values can no longer be changed via local operation.

Define access code via local display

1. Navigate to: "Setup" menu → Advanced setup → Administration → Define access code → Define access code
2. Define a max. 4-digit numeric code as an access code.
3. Repeat the same code in **Confirm access code** parameter.
 - ↳ The -symbol appears in front of all write-protected parameters.

Define access code via operating tool (e.g. FieldCare)

1. Navigate to: "Setup" menu → Advanced setup → Administration → Define access code
2. Define a max. 4-digit numeric code as an access code.
 - ↳ Write protection is active.

Parameters that can always be changed

The write protection does not include certain parameters that do not affect the measurement. Despite the defined access code, they can always be modified, even if the other parameters are locked.

If no key is pressed for 10 minutes in the navigation and editing mode, the device automatically locks the write-protected parameters. If the user goes from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after 60 s.

-  If write access is activated via access code, it can be also be deactivated only via the access code →  49.
- In the "Description of Device Parameters" documents, each write-protected parameter is identified with the -symbol.

8.2.4 Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a device-specific access code and its value cannot be changed at the moment using the local display →  48.

The locking of the write access via local operation can be disabled by entering the device-specific access code.

1. After you press , the input prompt for the access code appears.
2. Enter the access code.
 - ↳ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

8.2.5 Deactivation of the write protection via access code

Via local display

1. Navigate to "Setup" menu → Advanced setup → Administration → Define access code → Define access code
2. Enter **0000**.
3. Repeat **0000** in **Confirm access code** parameter.
 - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

Via operating tool (e.g. FieldCare)


1. Navigate to "Setup" menu → Advanced setup → Administration → Define access code
2. Enter **0000**.
 - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

8.2.6 Write protection via write protection switch


Unlike write protection via a user-specific access code, this allows write access to the entire operating menu - other than the **"Contrast display" parameter** - to be locked.

The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):


- Via local display
- Via FOUNDATION Fieldbus

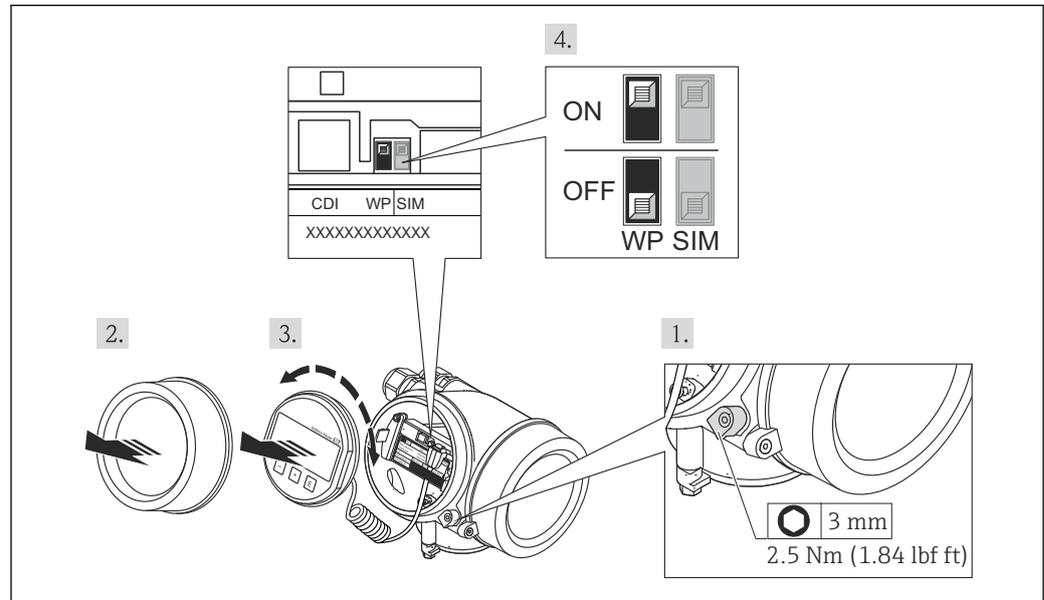

1. Loosen the securing clamp.
2. Unscrew the housing cover.
3. Pull out the display module with a gentle rotation movement. To make it easier to access the lock switch, attach the display module to the edge of the electronics compartment.
 - ↳ Display module is attached to the edge of the electronics compartment.

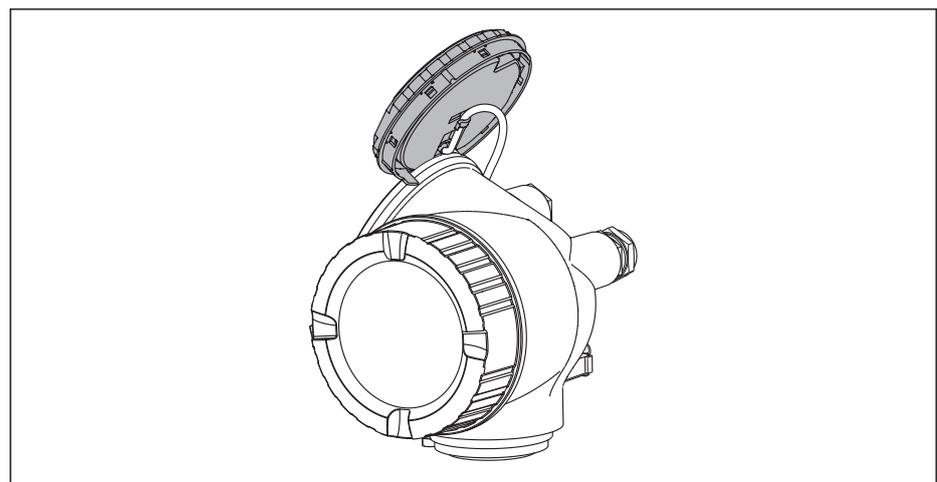

4. Installing the lock switch (WP) on the main electronics module in the **ON** position enables the hardware write protection. Installing the lock switch (WP) on the main electronics module in the **OFF** position (factory setting) disables the hardware write protection.
 - ↳ If the hardware write protection is enabled: The **Hardware locked** option is displayed in the **Locking status** parameter. In addition to this, the -symbol appears in the header of the measured value display and in the navigation view in front of the parameters.

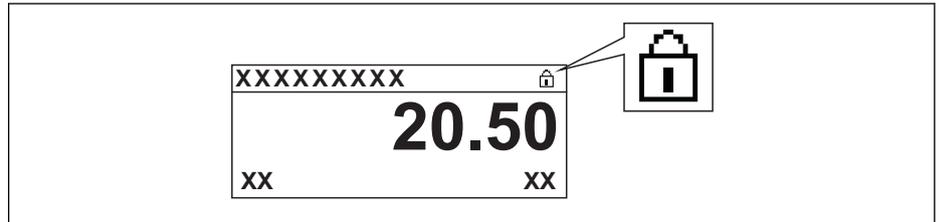

A0015870

If the hardware write protection is disabled: No option is displayed in the **Locking status** parameter. The -symbol disappears in the header of the measured value display and in the navigation view in front of the parameters.

5. Feed the spiral cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Screw the electronics compartment cover closed and tighten the securing clamp.

8.2.7 Enabling and disabling the keypad lock

The keypad lock allows to disable access to the entire operating menu via local operation. Thus navigating through the operating menu or modifying the values of individual parameters is no longer possible. Only the measured values on the measured value display can be read off.

The keylock is enabled and disabled via a context menu.

Enabling the keylock



For the SD03 display:

The keylock is automatically activated:

- If the device has not been operated via the display for > 1 minute.
- After a restart of the device.

To activate the keylock manually:

1. The device is in the measured value display.
Press for at least 2 seconds.
↳ A context menu appears.
2. Select **Keylock on** from the context menu.
↳ The keylock is enabled.




When attempting to access the operating menu while the keylock is enabled, the **Keylock on** message appears.

Disabling the keylock

1. The keylock is enabled.
Press for at least 2 seconds.
↳ A context menu appears.
2. Select **Keylock off** from the context menu.
↳ The keylock is disabled.

8.3 Display and operating module

8.3.1 Display appearance

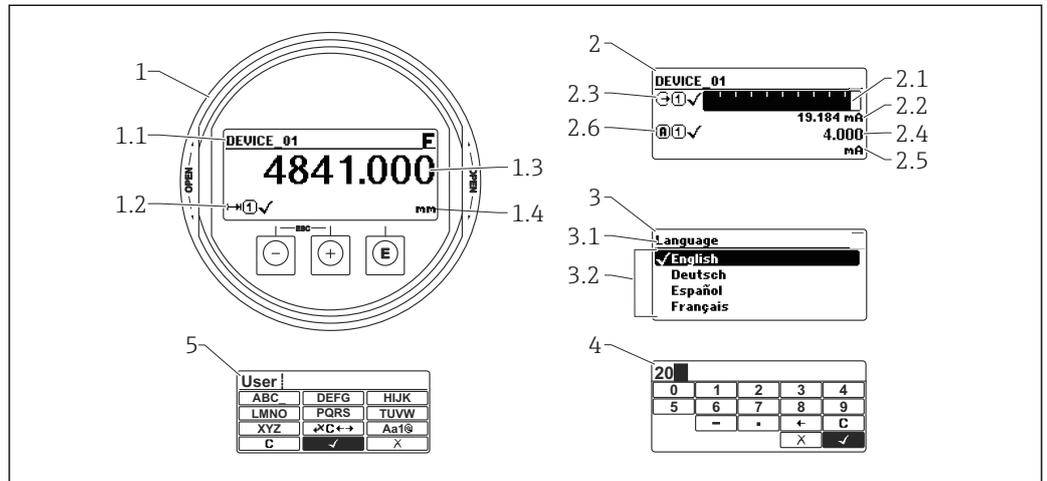

A0012635

17 Appearance of the display and operation module for on-site operation

- 1 Measured value display (1 value max. size)
- 1.1 Header containing tag and error symbol (if an error is active)
- 1.2 Measured value symbols
- 1.3 Measured value
- 1.4 Unit
- 2 Measured value display (1 bargraph + 1 value)
- 2.1 Bargraph for measured value 1
- 2.2 Measured value 1 (including unit)
- 2.3 Measured value symbols for measured value 1
- 2.4 Measured value 2
- 2.5 Unit for measured value 2
- 2.6 Measured value symbols for measured value 2
- 3 Representation of a parameter (here: a parameter with selection list)
- 3.1 Header containing parameter name and error symbol (if an error is active)
- 3.2 Selection list; marks the current parameter value.
- 4 Input matrix for numbers
- 5 Input matrix for alphanumeric and special characters

Display symbols for the submenus

Symbol	Meaning
 A0011975	Display/operation Is displayed: <ul style="list-style-type: none"> in the main menu next to the selection "Display/operation" in the header, if you are in the "Display/operation" menu
 A0011974	Setup Is displayed: <ul style="list-style-type: none"> in the main menu next to the selection "Setup" in the header, if you are in the "Setup" menu
 A0011976	Expert Is displayed: <ul style="list-style-type: none"> in the main menu next to the selection "Expert" in the header, if you are in the "Expert" menu
 A0011977	Diagnostics Is displayed: <ul style="list-style-type: none"> in the main menu next to the selection "Diagnostics" in the header, if you are in the "Diagnostics" menu

Status signals

F A0013956	"Failure" A device error is present. The measured value is no longer valid.
C A0013959	"Function check" The device is in service mode (e.g. during a simulation).
S A0013958	"Out of specification" The device is operated: <ul style="list-style-type: none"> Outside of its technical specifications (e.g. during startup or a cleaning) Outside of the configuration carried out by the user (e.g. level outside configured span)
M A0013957	"Maintenance required" Maintenance is required. The measured value is still valid.

Display symbols for the locking state

Symbol	Meaning
 A0011978	Display parameter Marks display-only parameters which can not be edited.
 A0011979	Device locked <ul style="list-style-type: none"> In front of a parameter name: The device is locked via software and/or hardware. In the header of the measured value screen: The device is locked via hardware.


Measured value symbols

Symbol	Meaning
Measured values	
 A0011995	Level
 A0011996	Distance
 A0011998	Current output
 A0011999	Measured current
 A0012106	Terminal voltage
 A0012104	Temperature of the electronics or the sensor
Measuring channels	
 A0012000	Measuring channel 1
 A0012107	Measuring channel 2
Status of the measured value	
 A0012102	Status "Alarm" The measurement is interrupted. The output assumes the defined alarm value. A diagnostic message is generated.
 A0012103	Status "Warning" The device continues measuring. A diagnostic message is generated.

8.3.2 Operating elements

Key	Meaning
 <small>A0013969</small>	<p>Minus key</p> <p><i>For menu, submenu</i> Moves the selection bar upwards in a picklist.</p> <p><i>For text and numeric editor</i> In the input mask, moves the selection bar to the left (backwards).</p>
 <small>A0013970</small>	<p>Plus key</p> <p><i>For menu, submenu</i> Moves the selection bar downwards in a picklist.</p> <p><i>For text and numeric editor</i> In the input mask, moves the selection bar to the right (forwards).</p>
 <small>A0013952</small>	<p>Enter key</p> <p><i>For measured value display</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly opens the operating menu. ▪ Pressing the key for 2 s opens the context menu. <p><i>For menu, submenu</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly Opens the selected menu, submenu or parameter. ▪ Pressing the key for 2 s for parameter: If present, opens the help text for the function of the parameter. <p><i>For text and numeric editor</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly <ul style="list-style-type: none"> - Opens the selected group. - Carries out the selected action. ▪ Pressing the key for 2 s confirms the edited parameter value.
 <small>A0013971</small>	<p>Escape key combination (press keys simultaneously)</p> <p><i>For menu, submenu</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly <ul style="list-style-type: none"> - Exits the current menu level and takes you to the next higher level. - If help text is open, closes the help text of the parameter. ▪ Pressing the key for 2 s returns you to the measured value display ("home position"). <p><i>For text and numeric editor</i> Closes the text or numeric editor without applying changes.</p>
 <small>A0013953</small>	<p>Minus/Enter key combination (press and hold down the keys simultaneously)</p> <p>Reduces the contrast (brighter setting).</p>
 <small>A0013954</small>	<p>Plus/Enter key combination (press and hold down the keys simultaneously)</p> <p>Increases the contrast (darker setting).</p>
 <small>A0013955</small>	<p>Minus/Plus/Enter key combination (press and hold down the keys simultaneously)</p> <p><i>For measured value display</i> Enables or disables the keypad lock.</p>




8.3.3 Entering numbers and text

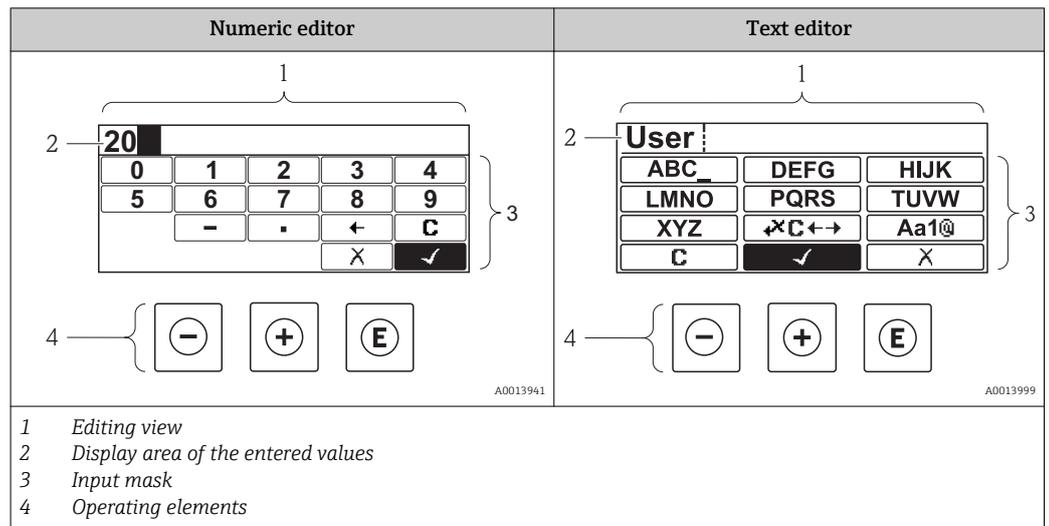


Input mask

The following input symbols are available in the input mask of the numeric and text editor:

   Numeric editor symbols

Symbol	Meaning
 A0013998	Selection of numbers from 0 to 9.
 A0016619	Inserts decimal separator at the input position.
 A0016620	Inserts minus sign at the input position.
 A0013985	Confirms selection.
 A0016621	Moves the input position one position to the left.
 A0013986	Exits the input without applying the changes.
 A0014040	Clears all entered characters.

 Text editor symbols

Symbol	Meaning
 A0013997	Selection of letters from A to Z
 A0013981	Toggle <ul style="list-style-type: none"> Between upper-case and lower-case letters For entering numbers For entering special characters

 <small>A0013985</small>	Confirms selection.
 <small>A0013987</small>	Switches to the selection of the correction tools.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.
Correction symbols under 	
 <small>A0013989</small>	Clears all entered characters.
 <small>A0013991</small>	Moves the input position one position to the right.
 <small>A0013990</small>	Moves the input position one position to the left.
 <small>A0013988</small>	Deletes one character immediately to the left of the input position.

8.3.4 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Conf. backup disp.
- Simulation

Calling up and closing the context menu

The user is in the operational display.

1. Press  for 2 s.
 - ↳ The context menu opens.

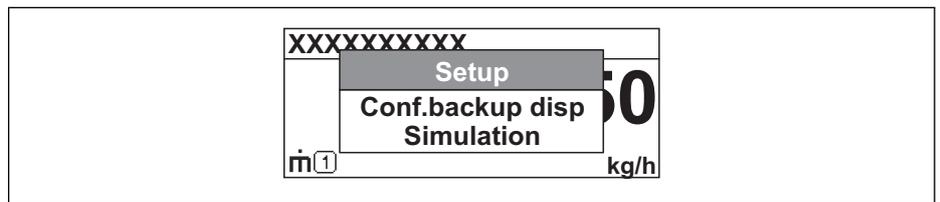

A0014003-EN


2. Press  +  simultaneously.
 - ↳ The context menu is closed and the operational display appears.

Calling up the menu via the context menu

1. Open the context menu.
2. Press  to navigate to the desired menu.
3. Press  to confirm the selection.
 - ↳ The selected menu opens.

8.3.5 Envelope curve on the display and operating module

In order to assess the measuring signal, the envelope curve and - if a mapping has been recorded - the mapping curve can be displayed:

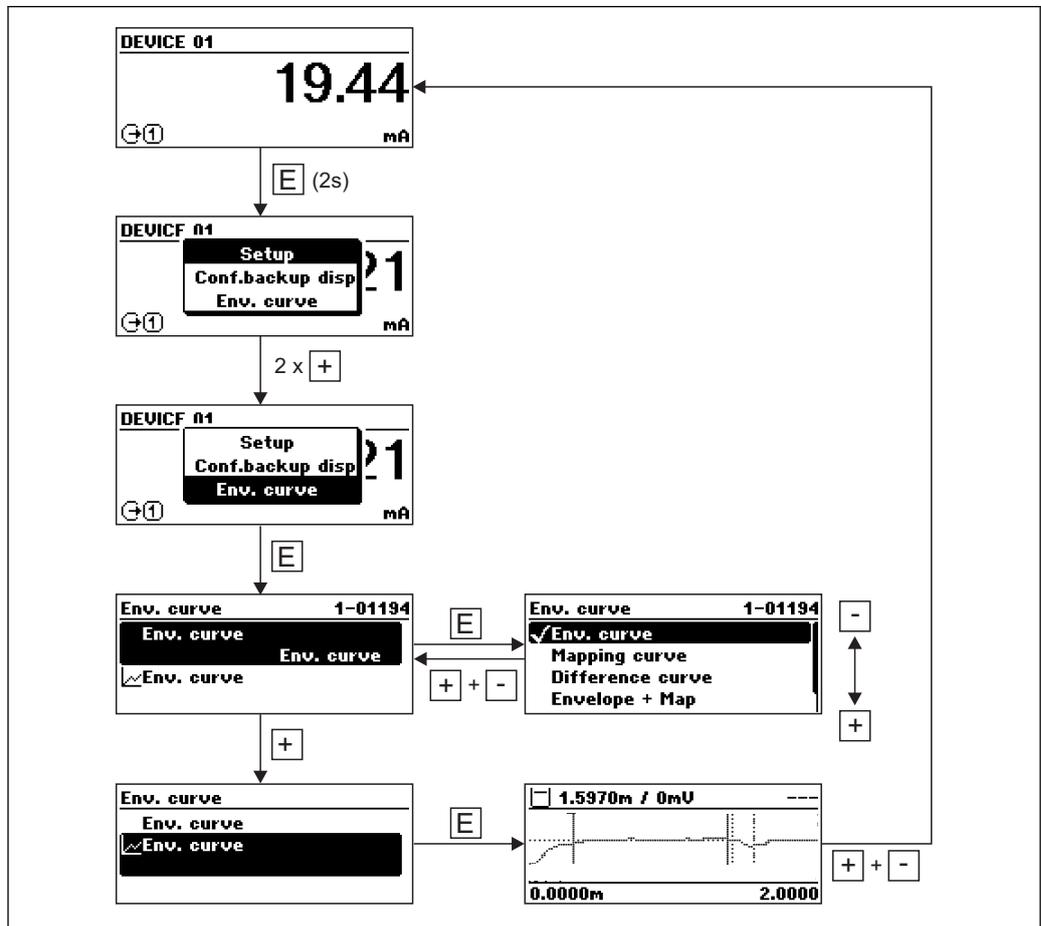

A0014277

9 Integration into a FOUNDATION Fieldbus network

9.1 Device Description (DD)

You require the following to configure a device and integrate it into an FF network:

- An FF configuration program
- The Cff file (Common File Format: *.cff)
- The device description (DD) in one of the following formats
 - Device Description format 4 : *.sym, *.ffo
 - Device Description format 5 : *.sy5, *.ff5

Information on the device-specific DD

Manufacturer ID	0x452B48
Device Type	0x1028
Device Revision	0x01
DD Revision	Information and files at:
CFF Revision	<ul style="list-style-type: none"> ■ www.endress.com ■ www.fieldbus.org

9.2 Integration into the FOUNDATION Fieldbus network

-  ■ For more in-depth information on integrating the device into the FF system, see the description for the configuration software used.
- When integrating the field devices into the FF system, make sure you are using the right files. You can read out the required version by means of the Device Revision/ DEV_REV and DD Revision/ DD_REV parameters in the Resource Block.


The device is integrated into the FF network as follows:

1. Start the FF configuration program.
2. Download the Cff and device description files (*.ffo, *.sym (for format 4) *.ff5, *.sy5 (for format 5) to the system.
3. Configure the interface.
4. Configure the device for the measuring task and for the FF system.

9.3 Device identification and addressing

FOUNDATION Fieldbus identifies the device using its ID code (Device ID) and automatically assigns it a suitable field address. The identity code cannot be changed. The device appears in the network display once you have started the FF configuration program and integrated the device into the network. The blocks available are displayed under the device name.

If the device description has not yet been loaded, the blocks report "Unknown" or "(UNK)".

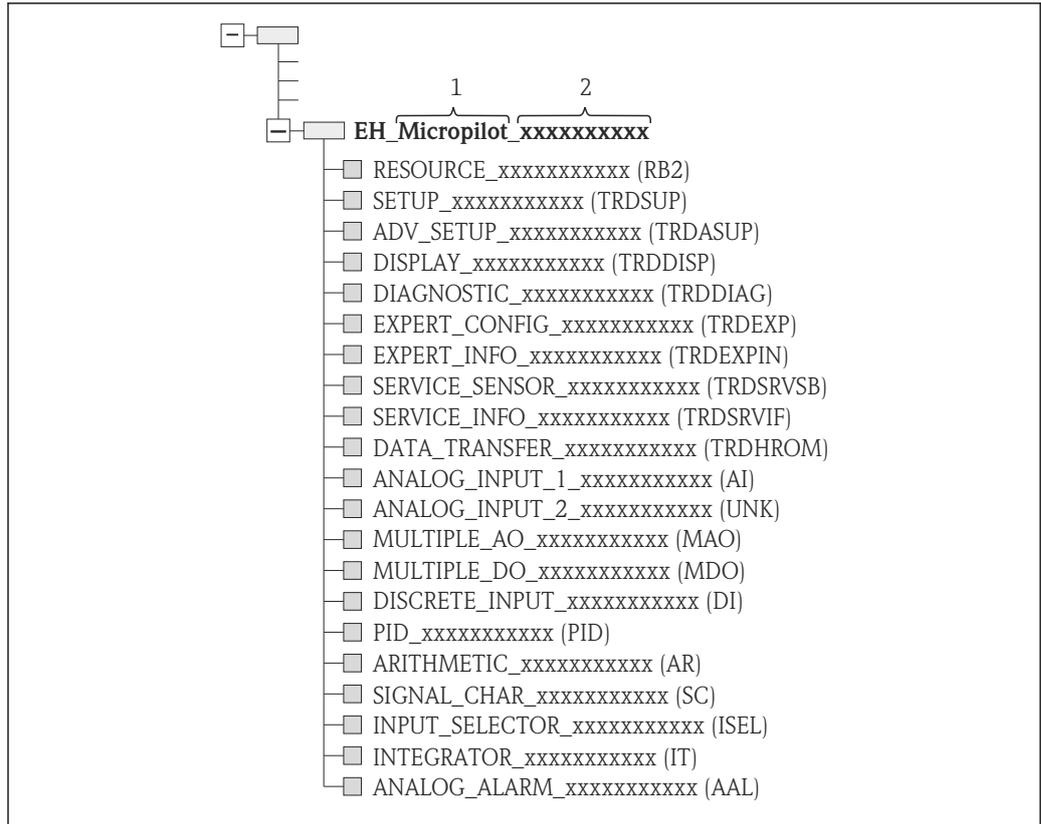

A0020711

18 Typical display in a configuration program after the connection has been established

- 1 Device name
- 2 Serial number

9.4 Block model

9.4.1 Blocks of the device software

The device has the following blocks:

- Resource Block (device block)
- Transducer Blocks
 - Setup Transducer Block (TRDSUP)
 - Advanced Setup Transducer Block (TRDASUP)
 - Display Transducer Block (TRDDISP)
 - Diagnostic Transducer Block (TRDDIAG)
 - Advanced Diagnostic Transducer Block (TRDADVDIAG)
 - Expert Configuration Transducer Block (TRDEXP)
 - Expert Information Transducer Block (TRDEXPIN)
 - Service Sensor Transducer Block (TRDSRVSB)
 - Service Information Transducer Block (TRDSRVIF)
 - Data Transfer Transducer Block (TRDHRM)
- Function Blocks
 - 2 AI Blocks (AI)
 - 1 Discrete Input Block (DI)
 - 1 Multiple Analog Output Block (MAO)
 - 1 Multiple Discrete Output Block (MDO)
 - 1 PID Block (PID)
 - 1 Arithmetic Block (AR)
 - 1 Signal Characterizer Block (SC)
 - 1 Input Selector Block (ISEL)
 - 1 Integrator Block (IT)
 - 1 Analog Alarm Block (AAL)

In addition to the pre-instantiated blocks already mentioned, the following blocks can also be instantiated:


- 3 AI Blocks (AI)
- 2 Discrete Input Blocks (DI)
- 1 PID Block (PID)
- 1 Arithmetic Block (AR)
- 1 Signal Characterizer Block (SC)
- 1 Input Selector Block (ISEL)
- 1 Integrator Block (IT)
- 1 Analog Alarm Block (AAL)

Up to 20 blocks can be instantiated in the device altogether, including the blocks already instantiated. For instantiating blocks, see the appropriate Operating Instructions of the configuration program used.

 Endress+Hauser Guideline BA00062S.

The guideline provides an overview of the standard function blocks that are described in FOUNDATION Fieldbus Specifications FF 890 - 894. It is designed to help operators use the blocks implemented in the Endress+Hauser field devices.

9.4.2 Block configuration when device is delivered

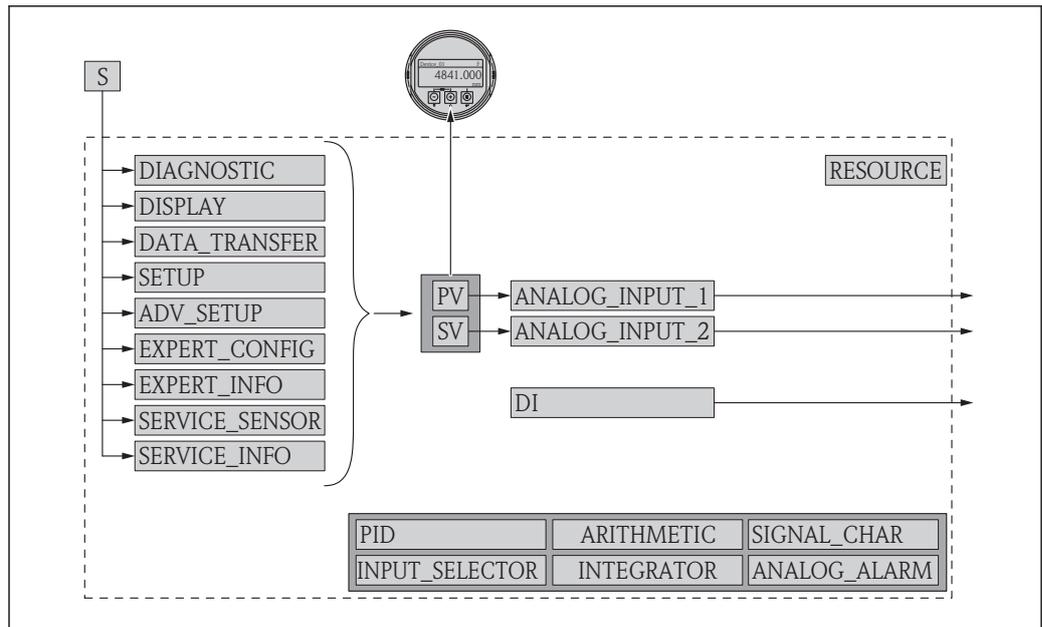

19 Block configuration when device is delivered

- S Sensor
- PV Primary value: Level linearized
- SV Secondary value: Distance

9.5 Assignment of the measured values (CHANNEL) in an AI Block

The input value of an Analog Input Block is defined by the CHANNEL parameter.

Channel	Measured value
0	Uninitialized
211	Terminal voltage
773	Analog output advance diagnostics 1
774	Analog output advance diagnostics 2
32786	Absolute echo amplitude
32856	Distance
32885	Elektronic temperature
32949	Level linearized
33044	Relative echo amplitude

9.6 Index tables of Endress+Hauser parameters

The following tables list the manufacturer-specific device parameters for the Resource Blocks. For the FOUNDATION Fieldbus parameters, see the document BA062S "Guideline - FOUNDATION Fieldbus Function Blocks", which can be downloaded from www.endress.com.

9.6.1 Setup Transducer Block

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
operating_mode	Operating mode	15	ENUM16	2	Static	Maintenance	OOS
distance_unit	Distance unit	16	ENUM16	2	Static	Maintenance	OOS
tank_type	Tanktyp	17	ENUM16	2	Static	Maintenance	OOS
tube_diameter	Tube diameter	18	FLOAT	4	Static	Maintenance	OOS
bin_type	Bin type	19	ENUM16	2	Static	Maintenance	OOS
solid_filling_speed_range	Max. filling speed solid	20	ENUM16	2	Static	Maintenance	OOS
solid_draining_speed_range	Max. draining speed solid	21	ENUM16	2	Static	Maintenance	OOS
medium_group	Medium group	22	ENUM16	2	Static	Maintenance	OOS
empty_calibration	Empty calibration	23	FLOAT	4	Static	Maintenance	OOS
full_calibration	Full calibration	24	FLOAT	4	Static	Maintenance	OOS
level_unit_ro	Level unit	25	ENUM16	2	Static	Maintenance	OOS
PrimLevOut	Primary Value	26	Standard	5	Dynamic		
output_unit_after_linearization	Unit after linearization	27	ENUM16	2	Static	Maintenance	
filtered_distance	Distance	28	Standard	5	Dynamic		
signal_quality	Signalqualität	29	ENUM16	2	Dynamic		
confirm_distance	Confirm distance	30	ENUM16	2	Static	Maintenance	OOS
mapping_start_point	Mapping start point	31	FLOAT	4	Static	Maintenance	OOS
mapping_end_point	Mapping end point	32	FLOAT	4	Static	Maintenance	OOS
end_map_ampl	End map amplitude	33	FLOAT	4	Static	Maintenance	OOS
map_end_x	Present mapping	34	FLOAT	4	Dynamic		
map_end_y	Map end Y	35	FLOAT	4	Dynamic		
record_map	Record map	36	ENUM16	2	Static	Maintenance	OOS
prepare_recording_map	Prepare recording map	37	ENUM16	2	Static	Development	OOS
end_of_mapping	End of mapping	38	ENUM16	2	Static	Maintenance	OOS
empty_scale		39	FLOAT	4	Static	Maintenance	OOS
full_scale		40	FLOAT	4	Static	Maintenance	OOS
empty_distance	Tank/silo height	41	FLOAT	4	Static	Maintenance	OOS
sw_option_active_overview	Software option overview	42	BIT_ENUM32	4			
sensor_type_ro	Sensor type	43	ENUM16	2	Static	Service	OOS
medium_type	Medium type	44	ENUM16	2	Static	Service	OOS
decimal_places_menu	Decimal places menu	45	ENUM16	2	Static	Maintenance	AUTO
evaluation_mode_ro	Evaluation mode	46	ENUM16	2	Dynamic	Maintenance	OOS
access_status_tooling	Access status tooling	47	ENUM16	2	Dynamic		
locking_status	Locking status	48	BIT_ENUM16	2	Dynamic		

9.6.2 Advanced Setup Transducer Block

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
medium_type	Medium type	15	ENUM16	2	Static	Service	OOS
medium_property	Medium property	16	ENUM16	2	Static	Maintenance	OOS

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
calculated_dc_value_ee	Calculated DC value	17	FLOAT	4	Dynamic	Production	AUTO
liquid_filling_speed_range	Max. filling speed liquid	18	ENUM16	2	Static	Maintenance	OOS
liquid_draining_speed_range	Max. draining speed liquid	19	ENUM16	2	Static	Maintenance	OOS
advanced_process_conditions	Advanced process conditions	20	ENUM16	2	Static	Maintenance	OOS
level_unit	Level unit	21	ENUM16	2	Static	Maintenance	OOS
blocking_distance	Blocking distance	22	FLOAT	4	Static	Maintenance	OOS
level_correction	Level correction	23	FLOAT	4	Static	Maintenance	OOS
empty_distance	Tank/silo height	24	FLOAT	4	Static	Maintenance	OOS
linearization_type	Linearization type	25	ENUM16	2	Static	Maintenance	OOS
unit_after_linearization	Unit after linearization	26	ENUM16	2	Static	Maintenance	OOS
free_text	Free text	27	STRING		Static	Maintenance	AUTO
maximum_value	Maximum value	28	FLOAT	4	Static	Maintenance	OOS
level_linearized_ds	Level linearized	29	Standard	5	Dynamic		
diameter	Diameter	30	FLOAT	4	Static	Maintenance	OOS
intermediate_height	Intermediate height	31	FLOAT	4	Static	Maintenance	OOS
table_number	Table number	32	UINT8	1	Static	Maintenance	OOS
table_mode	Table mode	33	ENUM16	2	Static	Maintenance	OOS
activate_table	Tabelle aktivieren	34	ENUM16	2	Static	Maintenance	OOS
custom_table_sel_level	Level	67	FLOAT	4	Static	Maintenance	OOS
custom_table_sel_value	Customer value	68	FLOAT	4	Static	Maintenance	OOS
level_semiautomatic	Level	69	FLOAT	4	Dynamic		
output_echo_lost	Output echo lost	70	ENUM16	2	Static	Maintenance	OOS
value_echo_lost	Value echo lost	71	FLOAT	4	Static	Maintenance	OOS
ramp_at_echo_lost	Ramp at echo lost	72	FLOAT	4	Static	Maintenance	OOS
switch_output_function	Switch output function	73	ENUM16	2	Static	Maintenance	OOS
assign_status	Assign status	74	ENUM16	2	Static	Maintenance	OOS
assign_limit	Assign limit	75	ENUM16	2	Static	Maintenance	OOS
assign_diag_behavior	Assign diagnostic behavior	76	ENUM16	2	Static	Maintenance	OOS
switch_on_value	Switch-on value	77	FLOAT	4	Static	Maintenance	OOS
switch_on_delay	Switch-on delay	78	FLOAT	4	Static	Maintenance	OOS
switch_off_value	Switch-off value	79	FLOAT	4	Static	Maintenance	OOS
switch_off_delay	Switch-off delay	80	FLOAT	4	Static	Maintenance	OOS
switch_output_failure_mode	Failure mode	81	ENUM16	2	Static	Maintenance	OOS
switch_status	Switch status	82	ENUM16	2	Dynamic		
invert_output_signal	Invert output signal	83	ENUM16	2	Static	Maintenance	OOS

9.6.3 Display Transducer Block

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
locking_status_display	Locking status	15	ENUM16	2	Dynamic		
access_status_display	Access status display	16	ENUM16	2	Dynamic		

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
access_code_for_display	Enter access code	17	UINT16	2	Static	Operator	AUTO
define_access_code	Freigabecode definieren	18	UINT16	2	Static	Maintenance	AUTO
language	Language	19	ENUM16	2	Static	Operator	AUTO
foramt_display	Format display	20	ENUM16	2	Static	Operator	AUTO
value_1_display	Value 1 display	21	ENUM16	2	Static	Maintenance	AUTO
decimal_places_1	Decimal places 1	22	ENUM16	2	Static	Maintenance	AUTO
value_2_display	Value 2 display	23	ENUM16	2	Static	Maintenance	AUTO
decimal_places_2	Decimal places 2	24	ENUM16	2	Static	Maintenance	AUTO
value_3_display	Value 3 display	25	ENUM16	2	Static	Maintenance	AUTO
decimal_places_3	Decimal places 3	26	ENUM16	2	Static	Maintenance	AUTO
value_4_display	Value 4 display	27	ENUM16	2	Static	Maintenance	AUTO
decimal_places_4	Decimal places 4	28	ENUM16	2	Static	Maintenance	AUTO
display_interval	Display interval	29	FLOAT	4	Static	Operator	AUTO
display_damping	Display damping	30	FLOAT	4	Static	Maintenance	AUTO
header	Header	31	ENUM16	2	Static	Maintenance	AUTO
header_text	Header text	32	STRING	12	Static	Maintenance	AUTO
display_separator	Separator	33	ENUM16	2	Static	Maintenance	AUTO
number_format	Zahlenformat	34	ENUM16	2	Static	Maintenance	AUTO
decimal_places_menu	Decimal places menu	35	ENUM16	2	Static	Maintenance	AUTO
contrast_display	Contrast display	36	FLOAT	4	Static	Operator	AUTO
backlight	Backlight	37	ENUM16	2	Static	Operator	AUTO
operating_time	Operating time	38	STRING	14	Dynamic		
last_backup	Last backup	39	STRING	14	Static	Production	AUTO
configuration_management	Configuration management	40	ENUM16	2	Static	Maintenance	AUTO
comparison_result	Comparison result	41	ENUM16	2	Static	Production	AUTO

9.6.4 Diagnostic Transducer Block

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
actual_diagnostics	Actual diagnostics	15	UINT32	4	Dynamic		
present_timestamp	Timestamp	16	STRING	14	Dynamic		
previous_diagnostics	Letzte Diagnose	17	UINT32	4	Dynamic		
previous_timestamp	Timestamp	18	STRING	14	Dynamic		
operating_time_from_restart	Operating time from restart	19	STRING	14	Dynamic		
operating_time	Operating time	20	STRING	14	Dynamic		
diagnostics_1	Diagnostics 1	21	UINT32	4	Dynamic		
diag_1_timestamp	Timestamp	22	STRING	14	Dynamic		
diagnostics_2	Diagnostics 2	23	UINT32	4	Dynamic		
diag_2_timestamp	Timestamp	24	STRING	14	Dynamic		
diagnostics_3	Diagnostics 3	25	UINT32	4	Dynamic		
diag_3_timestamp	Timestamp	26	STRING	14	Dynamic		
diagnostics_4	Diagnostics 4	27	UINT32	4	Dynamic		

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
diag_4_timestamp	Timestamp	28	STRING	14	Dynamic		
diagnostics_5	Diagnostics 5	29	UINT32	4	Dynamic		
diag_5_timestamp	Timestamp	30	STRING	14	Dynamic		
filter_options	Filter options	31	ENUM8	1	Static	Maintenance	AUTO
clear_event_list	Clear event list	32	ENUM16	2	Static	Service	AUTO
simulation_distance_ro	Simulation distance	33	ENUM16	2	Static	Development	AUTO
value_of_simulated_distance	Value of simulated distance	34	FLOAT	4	Static	Maintenance	AUTO
assign_sim_meas	Assign measurement variable	35	ENUM16	4	Static	Maintenance	OOS
sim_value_process_variable	Value process variable	36	FLOAT	4	Static	Maintenance	OOS
switch_output_simulation	Switch output simulation	37	ENUM16	2	Static	Maintenance	OOS
sim_switch_status	Switch status	38	ENUM16	2	Static	Maintenance	AUTO
simulation_device_alarm	Simulation device alarm	39	ENUM16	2	Static	Maintenance	OOS
simulation_diagnostic_event	Simulation diagnostic event	40	UINT32	4	Static	Service	OOS
start_device_check	Start device check	41	ENUM16	2	Static	Maintenance	AUTO
result_device_check	Result device check	42	ENUM16	2	Static	Development	AUTO
last_check_time	Last check time	43	STRING	14	Dynamic		
level_signal	Level signal	44	ENUM16	2	Static	Development	AUTO
device_check_timestamp	Timestamp	45	UINT32	14	Static	Development	AUTO
assign_channel_1	Assign channel 1	54	ENUM16	2	Static	Maintenance	AUTO
assign_channel_2	Assign channel 2	55	ENUM16	2	Static	Maintenance	AUTO
assign_channel_3	Assign channel 3	56	ENUM16	2	Static	Maintenance	AUTO
assign_channel_4	Assign channel 4	57	ENUM16	2	Static	Maintenance	AUTO
logging_interval	Logging interval	58	FLOAT	4	Static	Maintenance	AUTO
clear_logging_data	Clear logging data	59	ENUM16	2	Static	Maintenance	AUTO
alarm_delay	Alarm delay	60	FLOAT	4	Static	Maintenance	AUTO

9.6.5 Expert Configuration Transducer Block



The parameters of the **Expert Configuration Transducer Block** are described in GP01017F: "Micropilot FMR5x - Description of Device Parameters - FOUNDATION Fieldbus"

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
locking_status	Locking status	15	ENUM16	2			
access_status_tooling	Access status tooling	16	ENUM16	2			
enter_access_code	Enter access code	17	UINT16	2	Static	Operator	AUTO
distance_unit_ro	Distance unit	18	ENUM16	2	Static	Maintenance	OOS
operating_mode_ro	Operating mode	19	ENUM16	2	Static	Maintenance	OOS
free_field_special	Free field special	20	ENUM16	2	Static	Maintenance	OOS
sensor_type	Sensor type	21	ENUM16	2	Static	Service	OOS
distance_offset	Distance offset	22	FLOAT	4	Static	Maintenance	OOS
level_unit_ro	Level unit	23	ENUM16	2	Static	Maintenance	OOS

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
level_limit_mode	Level limit mode	24	ENUM16	2	Static	Maintenance	OOS
level_high_limit	High limit	25	FLOAT	4	Static	Maintenance	OOS
level_low_limit	Low limit	26	FLOAT	4	Static	Maintenance	OOS
output_mode	Output mode	27	ENUM16	2	Static	Maintenance	OOS
filter_dead_time	Dead time	28	FLOAT	4	Static	Maintenance	OOS
integration_time	Integration time	29	FLOT	4	Static	Maintenance	OOS
velocity_filter	Geschwindigkeitfilter	30	ENUM16	2	Static	Service	OOS
gpc_mode	GPC mode	31	ENUM16	2	Static	Maintenance	OOS
external_pressure_selector	External pressure selector	32	ENUM16	2	Static	Maintenance	OOS
gas_phase_compens_factor	Gas phase compensation factor	33	FLOAT	4	Static	Maintenance	OOS
reference_distance	Reference distance	34	FLOAT	4	Static	Maintenance	OOS
present_reference_distance	Present reference distance	35	FLOAT	4	Dynamic		
reference_echo_threshold	Reference echo threshold	36	FLOAT	4	Static	Maintenance	OOS
const_gpc_factor	Const. GPC factor	37	FLOAT	4	Static	Maintenance	OOS
external_pressure	External pressure	38	FLOAT	4	Static	Development	AUTO
start_self_check	Start self check	39	ENUM16	2	Static	Maintenance	AUTO
result_self_check	Result self check	40	ENUM16	2	Static	Development	AUTO
delay_time_echo_lost	Delay time echo lost	41	FLOAT	4	Static	Maintenance	OOS
safety_distance	Sicherheitsdistanz	42	FLOAT	4	Static	Maintenance	OOS
in_safety_distance	In safety distance	43	ENUM16	2	Static	Maintenance	OOS
acknowledge_alarm	Acknowledge alarm	44	ENUM16	2	Static	Maintenance	AUTO
evaluation_mode	Evaluation mode	45	ENUM16	2	Static	Maintenance	OOS
history_reset	History reset	46	ENUM16	2	Static	Maintenance	OOS
history_learning_control	History learning control	47	ENUM16	2	Static	Maintenance	OOS
history_learning	History learning	48	ENUM16	2	Static	Maintenance	OOS
level_external_input_1	Level external input 1	49	ENUM16	2	Static	Maintenance	OOS
function_input_1_level	Function input 1 level	50	ENUM16	2	Static	Maintenance	OOS
fixed_value_input_1	Fixed value input 1	51	FLOAT	4	Static	Maintenance	OOS
binary_input_1_level_control	Binary input 1 level control	52	ENUM16	2	Static	Maintenance	OOS
level_external_input_2	Level external input 2	53	ENUM16	2	Static	Maintenance	OOS
function_input_2_level	Function input 2 level	54	ENUM16	2	Static	Maintenance	OOS
fixed_value_input_2	Fixed value input 2	55	FLOAT	4	Static	Maintenance	OOS
binary_input_2_level_control	Binary input 2 level control	56	ENUM16	2	Static	Maintenance	OOS
control_measurement	Control measurement	57	ENUM16	2	Static	Maintenance	OOS
measurement_on	Measurement	58	ENUM16	2	Static	Maintenance	OOS
sensor_module	Sensor module	59	ENUM16	2	Static	Development	AUTO
sensor_module_ee	Sensor module	60	ENUM16	2	Static	Production	OOS
decimal_places_menu_ro	Decimal places menu	61	ENUM16	2	Static	Maintenance	AUTO
sw_option_active_overview	Software option active overview	62	BIT_ENUM32	4			
fieldbus_type	Feldbustyp	63	ENUM8	1			
medium_type_ro	Medium type	64	ENUM16	2	Static	Service	OOS

9.6.6 Expert Information Transducer Block

 The parameters of the **Expert Information Transducer Block** are described in GP01017F: "Micropilot FMR5x - Description of Device Parameters - FOUNDATION Fieldbus"

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
abs_echo_ampl	Absolute echo amplitude	15	Standard	5			
rel_echo_ampl	Relative echo amplitude	16	Standard	5	Dynamic		
rel_eop_ampl	Tank bottom echo amplitude	17	Standard	5	Dynamic		
noise_signal_val	Noise of signal	18	FLOAT	4	Dynamic		
electronic_temperature	Electronic temperature	19	Standard	5	Dynamic		
found_echoes	Found echoes	20	ENUM16	2	Dynamic		
temperature_unit	Temperature unit	21	ENUM16	2	Static	Maintenance	OOS
max_electr_temp	Max. electronic temperature	22	FLOAT	4	Static	Development	AUTO
application_parameter	Application parameter	23	ENUM16	2	Dynamic		
time_max_electr_temp	Time max. electronics temperature	24	STRING	14	Dynamic		
measurement_frequency	Measurement frequency	25	FLOAT	4	Dynamic		
min_electr_temp	Min. electronics temperature	26	FLOAT	4	Static	Development	AUTO
time_min_electr_temp	Time min. electronics temperaturer	27	STRING	14	Dynamic		
reset_min_max_temp	Reset min./max. Temp.	28	ENUM16	2	Static	Service	AUTO
used_calculation	Used calculation	29	ENUM16	2	Dynamic		
tank_trace_state	Status Tanktrace	30	ENUM16	2	Dynamic		
max_draining_speed	Max. draining speed	31	FLOAT	4	Static	Development	AUTO
max_filling_speed	Max. filling speed	32	FLOAT	4	Static	Entwicklung	AUTO
time_max_level	Time max. level	33	STRING	14	Dynamic		
max_level_value	Max. level value	34	FLOAT	4	Static	Development	AUTO
time_min_level	Time min. level	35	STRING	14	Dynamic		
min_level_value	Min. level	36	FLOAT	4	Static	Development	AUTO
reset_min_max	Reset min./max.	37	ENUM16	2	Static	Service	AUTO
appl_param_changed_flags	Application parameter	38	UINT16	2	Static	Production	AUTO
terminal_voltage_ds	Terminal voltage	39	Standard	5	Dynamic		
area_of_incoupling	Area of incoupling	40	Standard	5	Dynamic		
linearization_type_ro	Linearization type	41	ENUM16	2	Static	Maintenance	OOS
operating_mode	Operating mode	42	ENUM16	2	Static	Maintenance	OOS
decimal_places_menu_ro	Decimal places menu	43	ENUM16	2	Static	Maintenance	AUTO
activat_sw_option	Activate SW option	44	UINT32	4	Static	Maintenance	AUTO
sw_option_active_overview	Sw option active overview	45	BIT_ENUM32	4	Dynamic		
debug_status		107	UINT8	1	Dynamic	x	AUTO

9.6.7 Service Sensor Transducer Block

The parameters of the **Service Sensor** Transducer Block can only be operated by authorized Endress+Hauser service personnel.

9.6.8 Service Information Transducer Block

The parameters of the **Service Information** Transducer Block can only be operated by authorized Endress+Hauser service personnel.

9.6.9 Advanced Diagnostics Transducer Block

 The parameters of the **Advanced Diagnostics Transducer Block** are described in GP01017F: "Micropilot FMR5x - Description of Device Parameters - FOUNDATION Fieldbus"

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
assign_diag_signal_ad1	Assign diagnostic signal 1	15	ENUM16	2	Static	Maintenance	OOS
link_ad1_to	Link AD1 to	16	ENUM16	2	Static	Maintenance	OOS
linking_logic_ad1	Linking logic AD1	17	ENUM16	2	Static	Maintenance	OOS
sample_time_ad1	Sample time 1	18	UINT16	2	Static	Maintenance	OOS
calc_type_ad1	Calculation type 1	19	ENUM16	2	Static	Maintenance	OOS
check_mode_ad1	Check mode 1	20	ENUM16	2	Static	Maintenance	OOS
calculation_unit_ad1	Calculation unit 1	21	ENUM16	2	Static	Operator	OOS
upper_limit_ad1	Upper limit 1	22	FLOAT	4	Static	Maintenance	OOS
lower_limit_ad1	Lower limit 1	23	FLOAT	4	Static	Maintenance	OOS
hysteresis_ad1	Hysteresis 1	24	FLOAT	4	Static	Maintenance	OOS
max_value_ad1	Maximum value 1	25	FLOAT	4	Dynamic		
min_value_ad1	Minimum value 1	26	FLOAT	4	Dynamic		
reset_min_max_ad1	Reset min./max. 1	27	ENUM16	2	Static	Maintenance	AUTO
assign_status_sig_ad1	Assign status signal to AD event 1	28	ENUM16	2	Static	Maintenance	OOS
assign_event_behaviour_ad1	Assign event behaviour 1	29	ENUM16	2	Static	Maintenance	OOS
alarm_delay_ad1	Alarm delay	30	FLOAT	4	Static	Maintenance	OOS
assign_diag_signal_ad2	Assign diagnostic signal 2	31	ENUM16	2	Static	Maintenance	OOS
link_ad2_to	Link AD2 to	32	ENUM16	2	Static	Maintenance	OOS
linking_logic_ad2	Linking logic AD2	33	ENUM16	2	Static	Maintenance	OOS
sample_time_ad2	Sample time 2	34	UINT16	2	Static	Maintenance	OOS
calc_type_ad2	Calculation type 2	35	ENUM16	2	Static	Maintenance	OOS
check_mode_ad2	Check mode 2	36	ENUM16	2	Static	Maintenance	OOS
calculation_unit_ad2	Calculation unit 2	37	ENUM16	2	Static	Operator	OOS
upper_limit_ad2	Upper limit 2	38	FLOAT	4	Static	Maintenance	OOS
lower_limit_ad2	Lower limit 2	39	FLOAT	4	Static	Maintenance	OOS
hysteresis_ad2	Hysteresis 2	40	FLOAT	4	Static	Maintenance	OOS
max_value_ad2	Maximum value 2	41	FLOAT	4	Dynamic		
min_value_ad2	Minimum value 2	42	FLOAT	4	Dynamic		
reset_min_max_ad2	Reset min./max. 2	43	ENUM16	2	Static	Maintenance	AUTO
assign_status_sig_ad2	Assign status signal to AD event 2	44	ENUM16	2	Static	Maintenance	OOS
assign_event_behaviour_ad2	Assign event behaviour 2	45	ENUM16	2	Static	Maintenance	OOS
alarm_delay_ad2	Alarm delay 2	46	FLOAT	4	Static	Maintenance	OOS

9.7 Methods

The FOUNDATION Fieldbus Specification includes the use of methods to make device operation easier. A method is a sequence of interactive steps to be carried out in the specified order so as to configure certain device functions.

The following methods are available for the device:

- **Restart**
This method is located in the Resource Block and directly prompts the setting of the **Device reset** parameter. This resets the device configuration to a defined state.
- **ENP Restart**
This method is located in the Resource Block and directly prompts the setting of the parameters of the Electronic Name Plate (ENP).
- **Setup**
This method is located in the SETUP Transducer Block and allows to set the most important parameters in this block for device configuration (measuring units, type of tank or vessel, type of medium, empty and full calibration).
- **Linearization**
This method is located in the ADV_SETUP Transducer Block and allows to manage the linearization table by which the measured value is converted into volume, mass or flow.
- **Self Check**
This method is located in the EXPERT_CONFIG Transducer Block and prompts the device self check parameters.

10 Commissioning via operating menu


10.1 Installation and function check

Make sure that all final checks have been completed before you start up your measuring point:

- Checklist "Post-installation check" → 35
- Checklist "Post-connection check" → 41

10.2 Setting the operating language


Factory setting: English or ordered local language

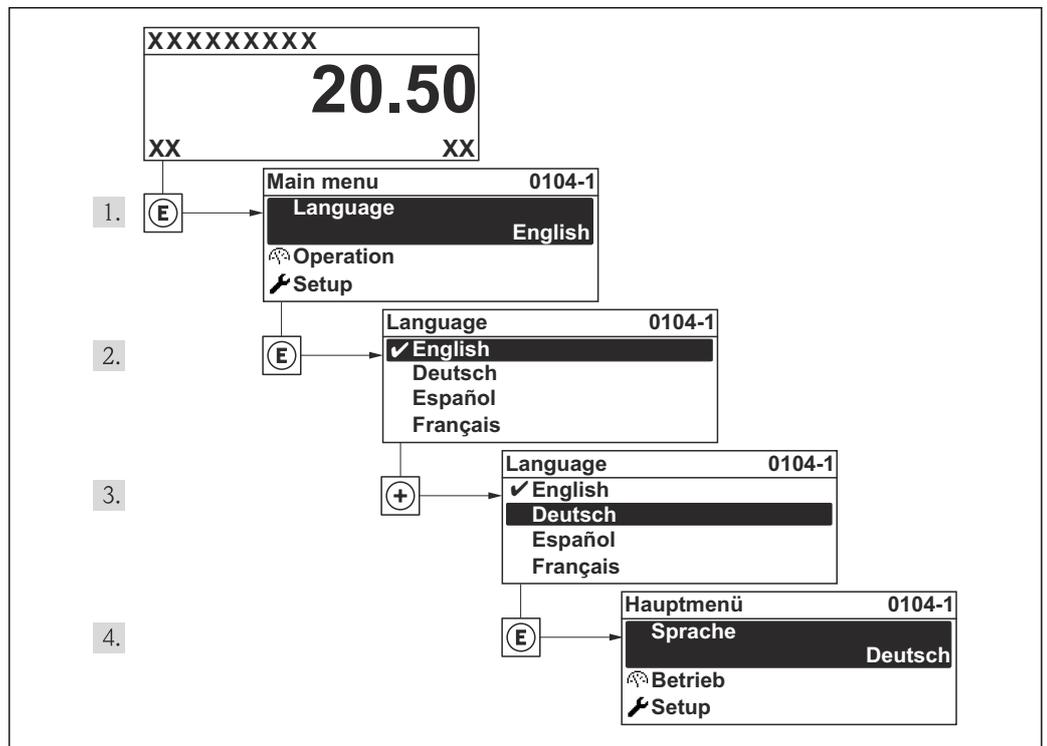

20 Using the example of the local display

A0013996

10.3 Configuration of a level measurement

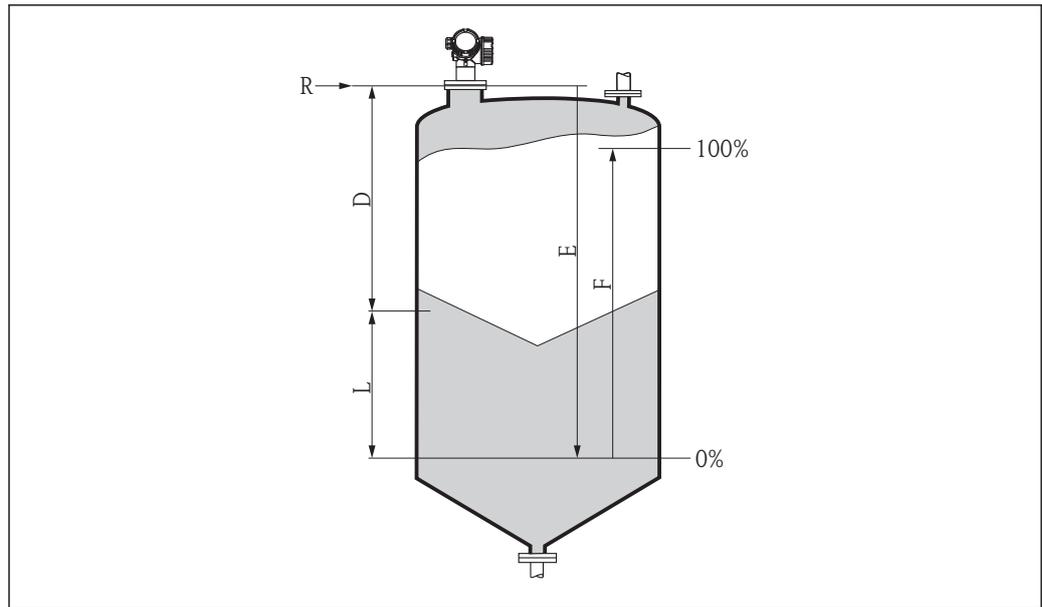

A0016934

21 Configuration parameters for level measurements in bulk solids

- R Reference point of the measurement
 D Distance
 L Level
 E Empty calibration (= zero)
 F Full calibration (= span)

1. Navigate to: "Setup" menu → Device tag
 ↳ Enter device tag.
2. Navigate to: "Setup" menu → Distance unit
 ↳ Select distance unit.
3. Navigate to: "Setup" menu → Bin type
 ↳ Select bin type.
4. Navigate to: "Setup" menu → Max. filling speed solid
 ↳ Enter maximum expected filling speed.
5. Navigate to: "Setup" menu → Max. draining speed solid
 ↳ Enter maximum expected draining speed.
6. Navigate to: "Setup" menu → Empty calibration
 ↳ Enter empty distance E (Distance from reference point R to the 0% level)³⁾.
7. Navigate to: "Setup" menu → Full calibration
 ↳ Enter full distance F (Distance from the 0% to the 100% level).
8. Navigate to: "Setup" menu → Level
 ↳ Indicates the measured level L.
9. Navigate to: "Setup" menu → Distance
 ↳ Indicates the measured distance from the reference point R to the level L.
10. Navigate to: "Setup" menu → Signal quality
 ↳ Indicates the quality of the evaluated level echo.

3) If, for example, the measuring range covers only an upper part of the tank ($E \ll$ tank height), it is mandatory to enter the actual tank height into the "Setup → Advanced Setup → Level → Tank/silo height" parameter.

11. When operating via local display:
Navigate to: "Setup" menu → Mapping → Confirm distance
 - ↳ Compare distance indicated on the display to real distance in order to start the recording of an interference echo map.
 12. When operating via operating tool:
Navigate to: "Setup" menu → Confirm distance
 - ↳ Compare distance indicated on the display to real distance in order to start the recording of an interference echo map.
 13. Navigate to: "Setup" menu → Advanced setup → Level → Level unit
 - ↳ Select level unit: %, m, mm, ft, in (Factory setting: %)
-  It is strongly recommended to adjust the maximum filling and draining speed to the actual process.

10.4 Recording the reference curve

After the configuration of the measurement it is recommended to record the current envelope curve as a reference curve. The reference curve can be used later on in the process for diagnostic purposes. To record the reference curve use the **Save reference curve** parameter.

Navigation in the menu

"Expert" menu → Diagnostics → Envelope diagnostics → Save reference curve

Meaning of the options

- No
No action
- Yes
The current envelope curve is saved as reference curve.

 In devices which have been delivered with software version 01.00.zz, this submenu is only visible for the "Service" user role.

 The reference curve can only be displayed in the envelope curve diagram of FieldCare after it has been loaded from the device into FieldCare. This is performed by the "Load Reference Curve" function in FieldCare.



 22 The "Load Reference Curve" function

10.5 Configuration of the on-site display

10.5.1 Factory settings of the on-site display

Parameter	Factory setting
Format display	1 value, max. size
Value 1 display	Level linearized
Value 2 display	None
Value 3 display	None
Value 4 display	None

10.5.2 Adjustment of the on-site display

The on-site display can be adjusted in the following submenu:
Setup → Advanced setup → Display

10.6 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration. You can do so using the **Configuration management** parameter and its options.

Navigation path in the operating menu

"Setup" menu → Advanced setup → Configuration backup display → Configuration management

Meaning of the options

- **Cancel**

No action is executed and the user exits the parameter.

- **Execute backup**

A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device. The backup copy comprises the transmitter and sensor data of the device.

- **Restore**

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device. The backup copy comprises the transmitter and sensor data of the device.

- **Duplicate**

The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:

Medium type

- **Compare**

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter.

- **Clear backup data**

The backup copy of the device configuration is deleted from the display module of the device.

 While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

 If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset →  171 will not restore the original status.

In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

10.7 Protection of the settings against unauthorized changes

There are two ways to protect the settings against unauthorized changes:

- Via parameter settings (software locking) →  48
- Via locking switch (hardware locking) →  50

11 Commissioning (block-based operation)

11.1 Function check

Carry out a post-installation and a post-connection check as per the checklist before commissioning the device:

- "Post-installation check" checklist →  35
- "Post-connection check" checklist →  41

11.2 Block configuration

11.2.1 Preparatory steps

1. Switch on the device.
2. Note the `DEVICE_ID` →  61.
3. Open the FOUNDATION Fieldbus configuration program.
4. Load Cff and device description files into the host system or the configuration program. Make sure you are using the right system files.
5. Identify the device using the **DEVICE_ID** (see Point 2). Assign the desired tag name to the device by means of the **Pd-tag/FF_PD_TAG** parameter.

11.2.2 Configuring the Resource Block

1. Open the Resource Block.
2. If necessary, disable the lock for device operation.
3. If necessary, change the block name. Factory setting: RS-xxxxxxxxxxx (RB2)
4. If necessary, assign a description to the block by means of the **Tag Description/TAG_DESC** parameter.
5. If necessary, change other parameters as per the requirements.

11.2.3 Configuring the Transducer Blocks

The measurement and the display module are configured using the Transducer Blocks. The general procedure is the same for all Transducer Blocks:

1. If necessary, change the block name.
2. Set the block mode to OOS by means of the **Block Mode/MODE_BLK** parameter, **TARGET** element.
3. Configure the level measurement →  83.
4. Set the block mode to **Auto** by means of the **Block Mode/MODE_BLK** parameter, **TARGET** element.

 The block mode must be set to **Auto** for the measuring device to function correctly.

11.2.4 Configuring the Analog Input Blocks

The device has 2 permanently instanced Analog Input Blocks that can be assigned as required to the various process variables. If required, up to 5 Analog Input Blocks can be instanced through the FOUNDATION Fieldbus configuration tool.

Default settings	
Analog Input Block	CHANNEL
AI 1	32949: Level linearized
AI 2	32856: Distance


1. If necessary, change the block name.
2. Set the block mode to **OOS** by means of the **Block Mode/MODE_BLK** parameter, **TARGET** element.
3. Use the **Channel/CHANNEL** parameter to select the process variable which should be used as the input value for the Analog Input Block.
4. Use the **Transducer Scale/XD_SCALE** parameter to select the desired unit and the block input range for the process variable → 81. Make sure that the unit selected suits the process variable selected. If the process variable does not suit the unit, the **Block Error/BLOCK_ERR** parameter reports **Block Configuration Error** and the block mode cannot be set to **Auto**.
5. Use the **Linearization Type/L_TYPE** parameter to select the type of linearization for the input variable (factory setting: **Direct**). Make sure that the settings for the **Transducer Scale/XD_SCALE** and **Output Scale/OUT_SCALE** parameters are the same for the **Direct** linearization type. If the values and units do not match, the **Block Error/BLOCK_ERR** parameter reports **Block Configuration Error** and the block mode cannot be set to **Auto**.
6. Enter the alarm and critical alarm messages by means of the **High High Limit/ HI_HI_LIM**, **High Limit/HI_LIM**, **Low Low Limit/LO_LO_LIM** and **Low Limit/LO_LIM** parameters. The limit values entered must be within the value range specified for the **Output Scale/OUT_SCALE** parameter → 81.
7. Specify the alarm priorities by means of the **High High Priority/HI_HI_PRI**, **High Priority/HI_PRI**, **Low Low Priority/LO_LO_PRI** and **Low Priority/LO_PRI** parameters. Reporting to the field host system only takes place with alarms with a priority greater than 2.
8. Set the block mode to **Auto** using the **Block Mode/MODE_BLK** parameter, **TARGET** element. For this purpose, the Resource Block and the Setup Transducer Block must also be set to the **Auto** block mode.

11.2.5 Additional configuration

1. Link the function blocks and output blocks.
2. After specifying the active LAS, download all the data and parameters to the field device.

11.3 Scaling of the measured value in an AI Block

If the type of linearisation **L_TYPE = indirect** has been selected in an AI block, the measured value can be scaled within the block. The input range is defined by the **XD_SCALE** parameter through its **EU_0** and **EU_100** elements. This range is mapped linearly to the output range defined by the **OUT_SCALE** parameter through its **EU_0** and **EU_100** elements.

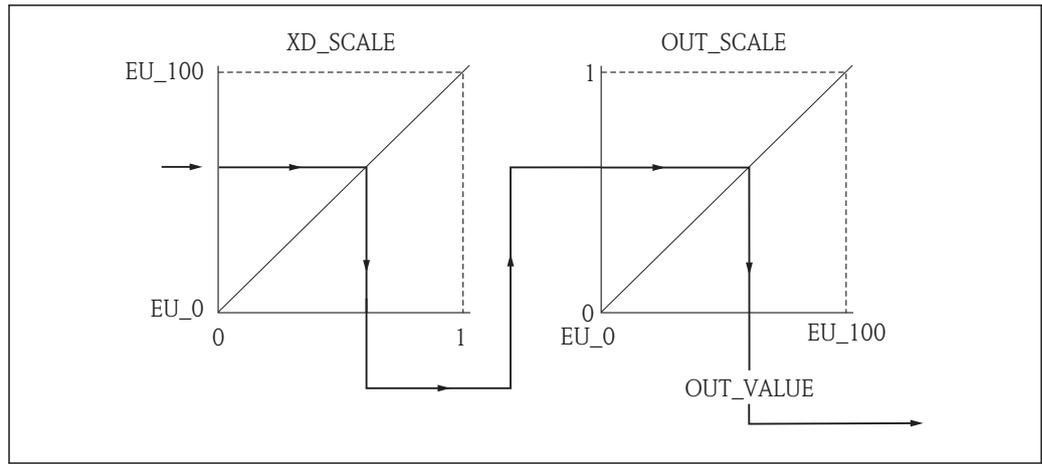

A0017336

23 Scaling of the measured value in an AI Block

- i** If you have selected the **Direct** mode for the **L_TYPE** parameter, you cannot change the values and units for **XD_SCALE** and **OUT_SCALE**.
- The **L_TYPE**, **XD_SCALE** and **OUT_SCALE** parameters can only be changed in the OOS block mode.


11.4 Language selection

Step	Block	Parameter	Action
1	DISPLAY (TRDDISP)	Language (language)	Select language ¹⁾ . Selection: <ul style="list-style-type: none"> ▪ 1268: Swedish ▪ 32805: Arabian ▪ 32824: Chinese simplified ▪ 32842: Czech ▪ 32881: Dutch ▪ 32888: English ▪ 32917: French ▪ 32920: German ▪ 32945: Italian ▪ 32946: Japanese ▪ 32948: Korean ▪ 33026: Polish ▪ 33027: Portuguese ▪ 33062: Russian ▪ 33083: Spanish ▪ 33103: Thai ▪ 33120: Vietnamese ▪ 33155: Bahasa ▪ 33166: Turkish

1) When ordering a device the set of available languages is defined. Refer to the product structure, feature 500 "Additional Operation Language".

11.5 Configuration of a level measurement

i The **Setup** method can also be used to configure the measurement. It is called up via the SETUP (TRDSUP) Transducer Block.

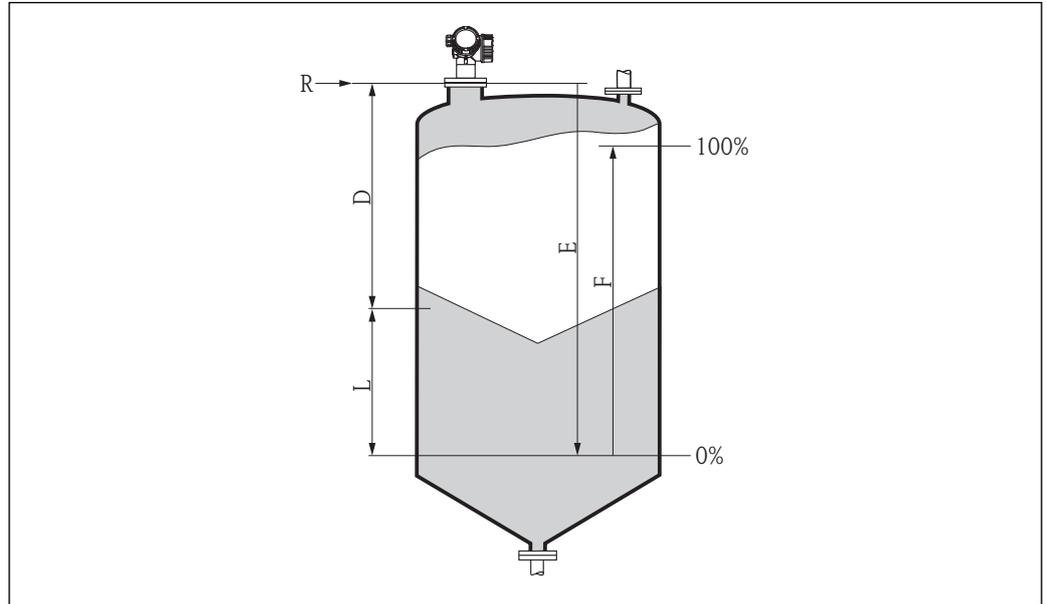

A0016934

R = Reference point of the measurement E = Empty calibration (= Zero point)

D = Distance

F = Full calibration (= span)

L = Level

Step	Block	Parameter	Action
1	SETUP (TRDSUP)	Distance unit (distance_unit)	Select distance unit. Selection: <ul style="list-style-type: none"> ▪ 1010: m ▪ 1013: mm ▪ 1018: ft ▪ 1019: in
2	SETUP (TRDSUP)	Bin type (bin_type)	Select bin type. Selection: <ul style="list-style-type: none"> ▪ 734: Workbench test ▪ 1275: Bin/pile ▪ 1276: Buffer silo (fast) ▪ 1277: Crusher/belt ▪ 1278: Silo
3	SETUP (TRDSUP)	Max. filling speed solid (solid_filling_sped_range)	Select maximum expected filling speed. Auswahl: <ul style="list-style-type: none"> ▪ 723: Very slow < 0,5m (1.6ft) /h ▪ 724: Slow < 1 m (3.3ft) /h ▪ 725: Medium < 4m (13ft) /h ▪ 726: Fast < 8m (26ft) /h ▪ 727: Very fast > 8m (26ft) /h ▪ 33442: No filter / test
4	SETUP (TRDSUP)	Max draining speed solid (solid_draining_sped_range)	Select maximum expected draining speed. Auswahl: <ul style="list-style-type: none"> ▪ 723: Very slow < 0,5m (1.6ft) /h ▪ 724: Slow < 1 m (3.3ft) /h ▪ 725: Medium < 4m (13ft) /h ▪ 726: Fast < 8m (26ft) /h ▪ 727: Very fast > 8m (26ft) /h ▪ 33442: No filter / test

Step	Block	Parameter	Action
5	SETUP (TRDSUP)	Empty calibration (empty_calibration)	Enter the distance E between the reference point R and the minimum level (0%).
6	SETUP (TRDSUP)	Full calibration (full_calibration)	Enter distance F between the minimum (0%) and maximum (100%) level.
7	SETUP (TRDSUP)	Level (level)	Displays the measured level L.
8	SETUP (TRDSUP)	Distance (filtered_dist_val)	Displays the distance D between the reference point R and the level L.
9	SETUP (TRDSUP)	Signal quality (signal_quality)	Displays the signal quality of the level echo.
10	SETUP (TRDSUP)	Confirm distance (confirm_distance)	Compare the displayed distance to the real distance in order to start the recording of the mapping curve. Selection: <ul style="list-style-type: none"> ▪ 179: Manual map ▪ 32847: Factory map ▪ 32859: Distance ok ▪ 32860: Distance too big ▪ 32861: Distance too small ▪ 32862: Distance unknown ▪ 33100: Tank empty

11.6 Configuration of the on-site display

11.6.1 Factory settings of the on-site display for level measurements

Parameter	Factory setting
Format display	1 value, max. size
Value 1 display	Level linearized
Value 2 display	None
Value 3 display	None
Value 4 display	None

 The on-site display can be adjusted in the **DISPLAY (TRDDISP)** transducer block.

11.7 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration. You can do so using the **Configuration management** parameter and its options.

Navigation path in the operating menu

Setup → Advanced setup → Conf.backup disp → Config. managem.

Block operation

Block: **DISPLAY (TRDDISP)**

Parameter: **Configuration management (configuration_management)**

Functions of the parameter options

Options	Description
33097: Execute backup	A backup copy of the current device configuration in the HistoROM is saved to the display module of the device. The backup copy comprises the transmitter data of the device.
33057: Restore	The last backup copy of the device configuration is copied from the display module to the HistoROM of the device. The backup copy comprises the transmitter data of the device.
33838: Duplicate	The transmitter configuration from another device is duplicated to the device using the display module.
265: Compare	The device configuration saved in the display module is compared to the current device configuration of the HistoROM.
32848: Clear backup data	The backup copy of the device configuration is deleted from the display module of the device.

HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.




While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

11.8 Configuration of the event behavior according to the FOUNDATION Fieldbus specification FF912

The device complies with the FOUNDATION Fieldbus specification FF912. This has - among other things - the following consequences:

- The diagnostic category according to NAMUR recommendation NE107 is transmitted via the fieldbus in a manufacturer-independent form:
 - F: Failure
 - C: Function check
 - S: Out of specification
 - M: Maintenance required
- The diagnostic category of pre-defined groups of events can be adjusted by the user according to the requirements of the specific application.
- Certain events can be separated from their group and can be handled individually:
 - 941: Echo lost
 - 942: In safety distance
 - 950: Advanced Diagnostic occurred
- Additional information and remedial measures are transmitted together with the event message via the fieldbus.

 The diagnostic messages according to FF912 are available in the host only if the **Multi-bit support** option has been activated in the **FEATURE_SEL** parameter of the Resource block. For reasons of compatibility, this option is **not** activated on delivery:

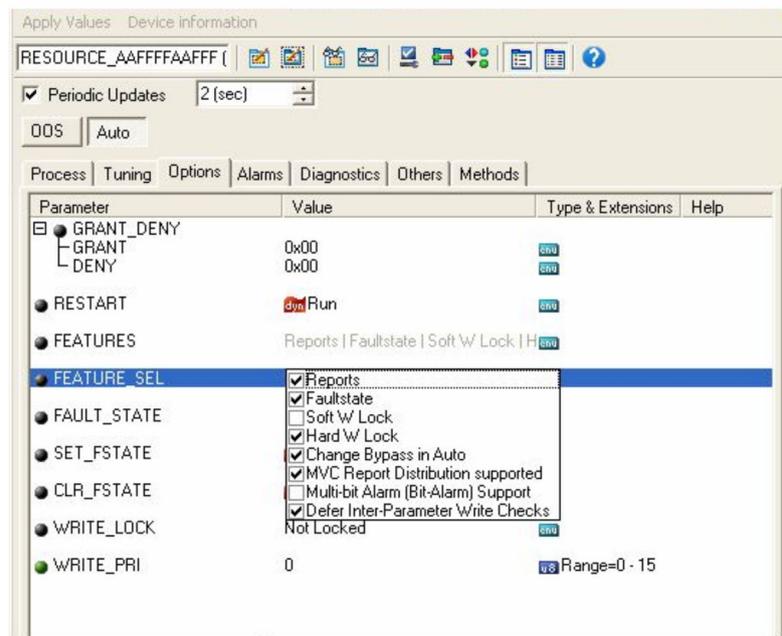

11.8.1 Groups of events

The diagnostic messages are classified into 16 groups according to the **source** and **severity** of the respective event. A **default diagnostic category** is allocated to each group. Each group is also represented by one bit of the allocation parameters.

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
Highest severity	Failure (F)	Sensor	31	<ul style="list-style-type: none"> ▪ F003: Broken probe detected ▪ F046: Build-up detected ▪ F083: Memory content ▪ F104: HF cable ▪ F105: HF cable ▪ F106: Sensor
		Electronics	30	<ul style="list-style-type: none"> ▪ F242: Software incompatible ▪ F252: Modules incompatible ▪ F261: Electronic modules ▪ F262: Module connecting ▪ F270: Main electronic failure ▪ F271: Main electronic failure ▪ F272: Main electronic failure ▪ F273: Main electronic failure ▪ F275: I/O-Modul failure ▪ F276: I/O module failure ▪ F282: Data storage ▪ F283: Memory content ▪ F311: Electronic Failure
		Configuration	29	<ul style="list-style-type: none"> ▪ F410: Data transfer ▪ F435: Linearization ▪ F437: Configuration incompatible ▪ F482: Block in OOS
		Process	28	<ul style="list-style-type: none"> ▪ F803: Current loop 1 ▪ F825: Current loop 1 ▪ F936: EMC interference ▪ F941: Echo lost ¹⁾ ▪ F970: Linearization

1) This event can be removed from the group in order to define its behavior individually; see section "Configurable area".

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
High severity	Function check (C)	Sensor	27	not used in Micropilot
		Electronics	26	not used in Micropilot
		Configuration	25	<ul style="list-style-type: none"> ▪ C411: Up-/download ▪ C484: Simulation failure mode ▪ C485: Simulation measured value ▪ C492: Simulation frequency output ▪ C493: Simulation pulse output ▪ C494: Switch output simulation ▪ C495: Simulation block output ▪ C585: Simulation distance ▪ C586: Record map
		Process	24	not used in Micropilot

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
Low severity	Out of specification (S)	Sensor	23	not used in Micropilot
		Electronics	22	not used in Micropilot

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
		Configuration	21	<ul style="list-style-type: none"> ▪ S442: Frequency output ▪ S443: Pulse output
		Process	20	<ul style="list-style-type: none"> ▪ S801: Energy too low ▪ S825: Operating temperature ▪ S921: Change of reference ▪ S942: In safety distance ¹⁾ ▪ S943: In blocking distance ▪ S944: Level range ▪ S968: Level limited

- 1) This event can be removed from the group in order to define its behavior individually; see section "Configurable area".

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
Lowest severity	Maintenance required (M)	Sensor	19	not used in Micropilot
		Elektronics	18	<ul style="list-style-type: none"> ▪ M272: Main electronics failure ▪ M311: Electronics failure
		Configuration	17	M438: Data set
		Process	16	M950: Advanced diagnostic occurred

11.8.2 Allocation parameters

The allocation of event categories to the event groups is controlled by the allocation parameters. They reside in the **RESOURCE (RB2)** block:

- **FD_FAIL_MAP**: for the **Failure (F)** event category
- **FD_CHECK_MAP**: for the **Function check (C)** event category
- **FD_OFFSPEC_MAP**: for the **Out of specification (S)** event category
- **FD_MAINT_MAP**: for the **Maintenance required (M)** event category

Each allocation parameter consists of 32 bits with the following meaning:

- **Bit 0**: reserved by the Fieldbus Foundation
- **Bits 1 to 15**: Configurable area; here, a number of predefined diagnostic events can be allocated irrespective of the group of events they belong to. In this case they are removed from their group and their behavior can be configured individually. With Micropilot, the following parameters can be allocated to the configurable area:
 - 941: Echo lost
 - 942: In safety distance
 - 950: Advanced Diagnostic occurred
- **Bits 16 ... 31**: Standard area; these bits are permanently allocated to a specific group of events. If a bit is set to **1**, the respective event category is assigned to the group.

The following table represents the default setting of the allocation parameters. In the default setting there is a unique relationship between the severity of the event and its category (i.e. its allocation parameter).

Default setting of the allocation parameters

Severity of the event	Standard area																Configurable area
	Highest severity				High severity				Low severity				Lowest severity				
Source of the event ¹⁾	S	E	C	P	S	E	C	P	S	E	C	P	S	E	C	P	
Bit	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15 ... 1
FD_FAIL_MAP	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0
FD_CHECK_MAP	0	0	0	0	1	1	1	1	0	0	0	0	0	0	0	0	0
FD_OFFSPEC_MAP	0	0	0	0	0	0	0	0	1	1	1	1	0	0	0	0	0
FD_MAINT_MAP	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	0


1) S: Sensor; E: Electronics; C: Configuration; P: Process

In order to change the diagnostic behavior of a group of events, proceed as follows:


1. Open the allocation parameter to which the group is currently allocated.
2. Switch the bit of the group from **1** to **0**. In the case of operation via FieldCare this is done by deactivating the respective checkbox (see the example below).
3. Open the allocation to which the group is to be allocated.
4. Switch the bit of the group from **0** to **1**. In the case of operation via FieldCare this is done by activating the respective checkbox (see the example below).

Example

The **Highest severity / Configuration** group contains the messages **410: Data transfer**, **411: Up-/Download**, **435: Linearization** and **437: Configuration incompatible**. These messages are no longer to be classified as **Failure (F)** but as **Funcktion check (C)**.

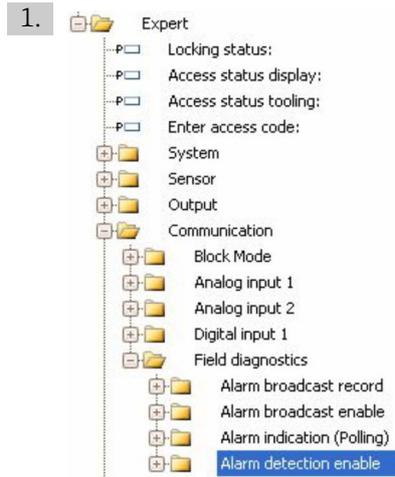

Use the FieldCare navigation window to navigate to the the following screen: **Expert** → **Communication** → **Field diagnostics** → **Alarm detection enable**.

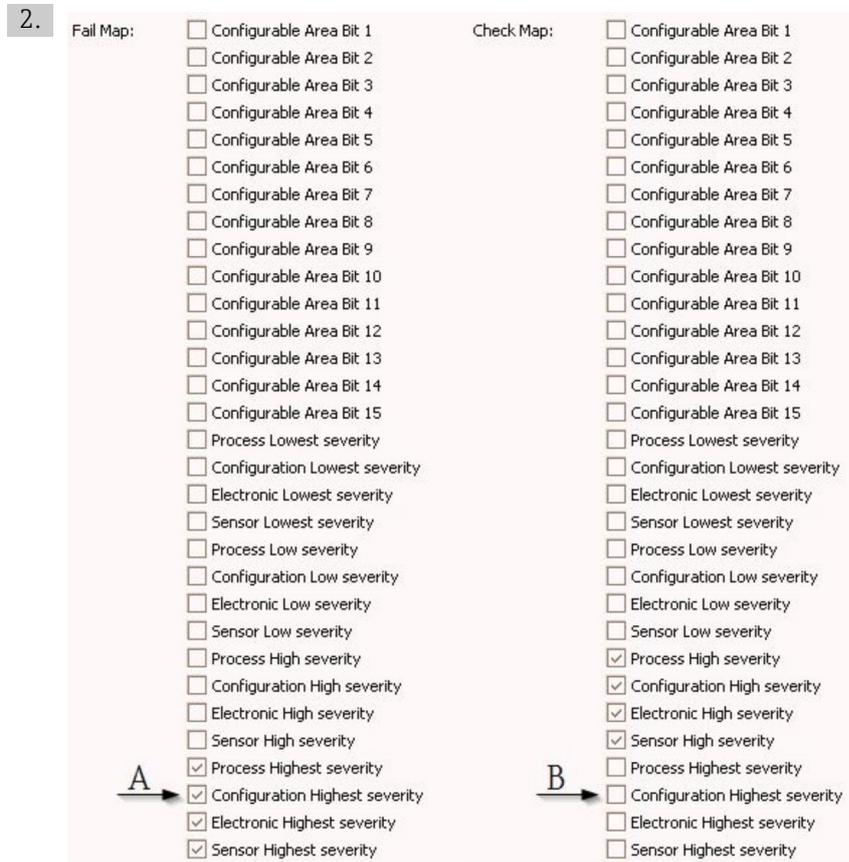

24 Default state of the "Fail Map" and "Check Map" columns

Look for the **Configuration Highest Severity** group in the **Fail Map** column and deactivate the associated checkbox (A). Activate the respective checkbox in the **Check Map** column (B). Remember to confirm each change by pressing the Enter key.



25 Changed state of the "Fail Map" and "Check Map" columns

- i** Make sure that for each group the corresponding bit is set to **1** in at least one of the allocation parameters. Otherwise no event category is transmitted with the event message. As a consequence the message will not be recognized by the control system.
- i** The **Alarm detection enable** screen is used to configure the detection of diagnostic events but not the transmission of event messages to the bus. The latter is configured on the **Alarm broadcast enable** screen, which is operated exactly in the same way as the **Alarm detection enable** screen. Status information is only transmitted to the bus if the Resource Block is in the **Auto** mode.

11.8.3 Configurable area


An event category can be individually defined for the following parameters - irrespective of the group of events they belong to by default.

- **F941**: Echo lost
- **S942**: In safety distance
- **M950**: Advanced Diagnostic occurred

Prior to changing the event category, the event must be allocated to one of the bits 1 to 15. This is performed by the parameters **FF912 ConfigArea_1** to **FF912 ConfigArea_15** in the **DIAGNOSTIC (TRDDIAG)** block. Thereafter, the selected bit can be switched from **0** to **1** in the desired allocation parameter.

Example

To change the category of error **942 "In safety distance"** from **Out of specification (S)** (default), to **Function check (C)**, proceed as follows.

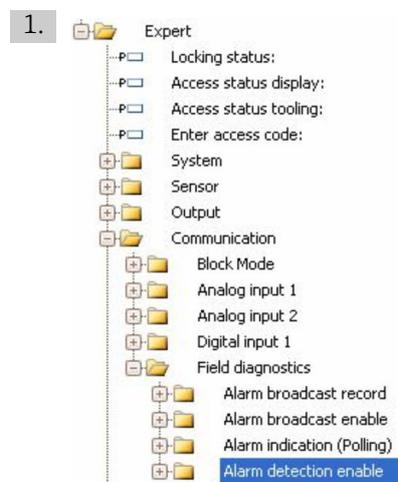


Use the FieldCare navigation window to navigate to the the following screen: **Expert** → **Communication** → **Field diagnostics** → **Alarm detection enable**.



By default all **Configurable Area Bits** are set to **not used**.



Select one of these bits (in the example: Configurable Area Bit 1) and select **In safety distance** from the associated drop-down menu. Confirm the selection by pressing the Enter key.

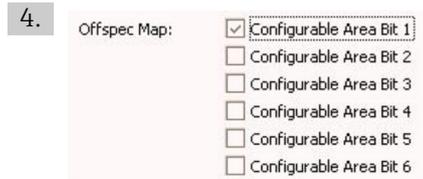


Got to the **Offspec Map** column and activate the checkbox of the respective bit (in the example: **Configurable Area Bit 1**). Confirm the selection by pressing the Enter key.

i A change of the error category of **In safety distance** does not affect an error which is already present. The new category is only assigned if a new error of this type occurs after the change.

11.8.4 Transmission of the event messages to the bus

Event priority

Event messages are only transmitted to the bus if their priority is between 2 and 15. Events of priority 1 are indicated on the display but not transmitted to the bus. Events of priority 0 are ignored. By default, the priority is 0 for all events. The priority can be adjusted individually for each allocation parameter. This is done by the following four priority parameters:

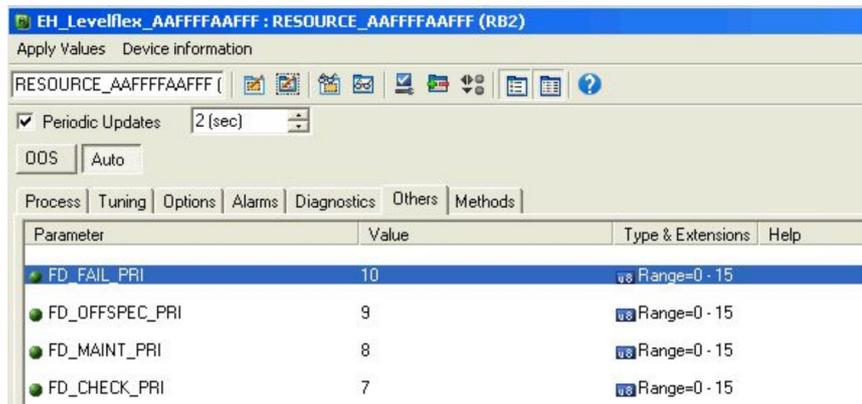

Suppression of individual events

For individual events, the transmission to the bus can be suppressed by the use of a mask. The corresponding events will be displayed but not transmitted to the bus. In FieldCare, this mask can be found at **Expert → Communication → Field diagnostics → Alarm broadcast enable**. This mask functions as a negative mask, which means that, if a field is marked, the corresponding events will **not** be transmitted to the bus.

11.9 Protection of the settings against unauthorized changes

There are two ways to protect the settings against unauthorized changes:

- Via locking switch (hardware locking) → 50
- Via operating menu (software locking) → 48
- Via block operation:
 - Block: **DISPLAY (TRDDISP)**; parameter: **Define access code (define_access_code)**
 - Block: **EXPERT_CONFIG (TRDEXP)**; parameter: **Enter access code (enter_access_code)**

12 Diagnostics and troubleshooting

12.1 General trouble shooting

12.1.1 General errors

Error	Possible cause	Remedial action
Device does not respond.	Supply voltage not connected.	Connect the correct voltage.
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.
Values on the display invisible	Contrast setting is too weak or too strong.	<ul style="list-style-type: none"> ▪ Increase contrast by pressing \oplus and \boxminus simultaneously. ▪ Decrease contrast by pressing \ominus and \boxminus simultaneously.
	The plug of the display cable is not connected correctly.	Connect the plug correctly.
	Display is defective.	Replace display.
"Communication error" is indicated on the display when starting the device or connecting the display	Electromagnetic interference	Check grounding of the device.
	Broken display cable or display plug.	Exchange display.
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer and change it if necessary.
Device measures incorrectly.	Parametrization error	Check and adjust parameterization.

12.1.2 Parametrization errors


Error	Possible cause	Remedy
Measured value incorrect	If measured distance ("Setup" menu → Distance) matches the real distance: Calibration error	<ul style="list-style-type: none"> ▪ Check and adjust Empty calibration parameter (→ ☰ 127) if necessary. ▪ Check and adjust Full calibration parameter (→ ☰ 128) if necessary. ▪ Check and adjust linearization if necessary (Linearization submenu (→ ☰ 143)).
	Wrong level correction	Enter correct value in Level correction parameter (→ ☰ 140).
	If measured distance (Setup → Distance) does not match the real distance: Interference echo	Carry out tank mapping (Confirm distance parameter (→ ☰ 130)).
No change of measured value on filling / emptying	Interference echo from installations, nozzle or build-up on the antenna.	<ul style="list-style-type: none"> ▪ Carry out tank mapping (Confirm distance parameter (→ ☰ 130)). ▪ If possible, align antenna in the direction of the solid surface in order to prevent interference echoes. ▪ If necessary, clean antenna (purge air). ▪ If necessary, select a better mounting position and/or larger antenna.

Error	Possible cause	Remedy
During filling/emptying or measurement, the measured value jumps sporadically to a higher level.	Signal is weakened (e.g. by fluidisation of the surface, extreme dust formation) - the interference echoes are sometimes stronger. Strong build-up, filling stream in path of beam.	<ul style="list-style-type: none"> ▪ Carry out tank mapping (Confirm distance parameter (→ ☰ 130)). ▪ Increase integration time ("Expert" menu → Sensor → Distance → Integration time) ▪ Optimize alignment of antenna ▪ If necessary, select a better mounting position and/or larger antenna. ▪ If necessary, clean antenna (purge air).
Error message F941 or S941 "Echo lost"	Level echo is too weak. Possible causes: <ul style="list-style-type: none"> ▪ Fluidisation of the surface ▪ Extreme dust formation ▪ Angle or repose 	<ul style="list-style-type: none"> ▪ Optimize alignment of antenna ▪ If necessary, select a better mounting position and/or larger antenna.
Measured values jumps to higher levels and remains there.	<ul style="list-style-type: none"> ▪ Build-up at container ▪ Build-up at antenna ▪ Strong condensate formation at antenna 	<ul style="list-style-type: none"> ▪ Periodic cleaning ▪ Carry out tank mapping (Confirm distance parameter (→ ☰ 130)). ▪ Increase integration time ("Expert" menu → Sensor → Distance → Integration time) ▪ Optimize alignment of antenna ▪ If necessary, select a better mounting position and/or larger antenna.
Device displays a level when the tank is empty.	Interference echo	Carry out mapping over entire measuring range when the silo is empty (Confirm distance parameter (→ ☰ 130)).
Wrong slope of the level throughout the complete measuring range	Bin property or process properties incorrect	<ul style="list-style-type: none"> ▪ Select the correct option in Bin type parameter (→ ☰ 126). ▪ Enter the actual values in Max. filling speed solid (→ ☰ 126) and Max. draining speed solid (→ ☰ 127).

12.2 Diagnostic information on local display

12.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the measured value display.

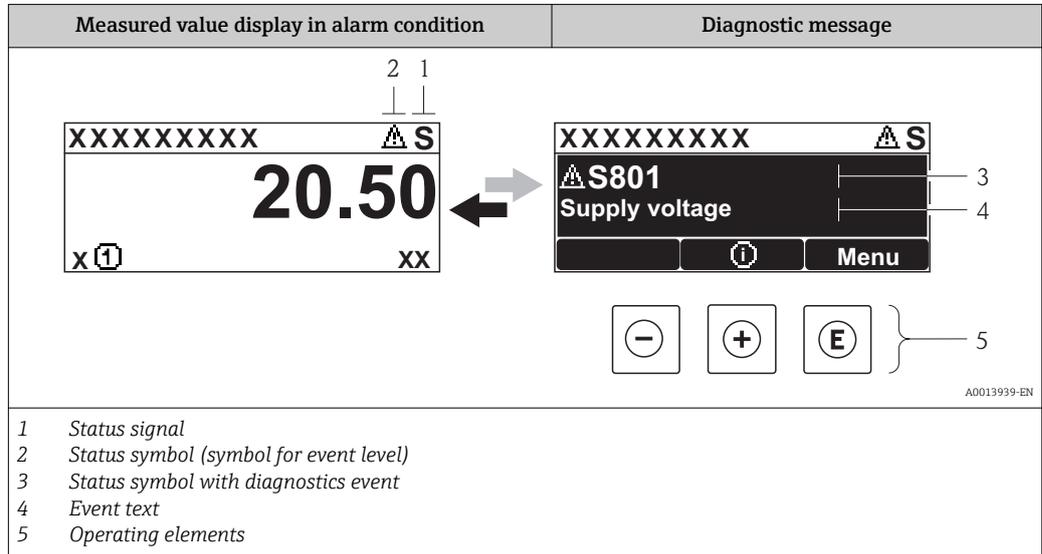

Status signals


F <small>A0013956</small>	"Failure" A device error is present. The measured value is no longer valid.
C <small>A0013959</small>	"Function check" The device is in service mode (e.g. during a simulation).
S <small>A0013958</small>	"Out of specification" The device is operated: <ul style="list-style-type: none"> ▪ Outside of its technical specifications (e.g. during startup or a cleaning) ▪ Outside of the configuration carried out by the user (e.g. level outside configured span)
M <small>A0013957</small>	"Maintenance required" Maintenance is required. The measured value is still valid.

Status symbol (symbol for event level)

 <small>A0013961</small>	"Alarm" status The measurement is interrupted. The signal outputs take on the defined alarm condition. A diagnostic message is generated.
 <small>A0013962</small>	"Warning" status The device continues to measure. A diagnostic message is generated.

Diagnostics event and event text

The fault can be identified using the diagnostics event. The event text helps you by providing information about the fault. In addition, the corresponding symbol is displayed before the diagnostics event.

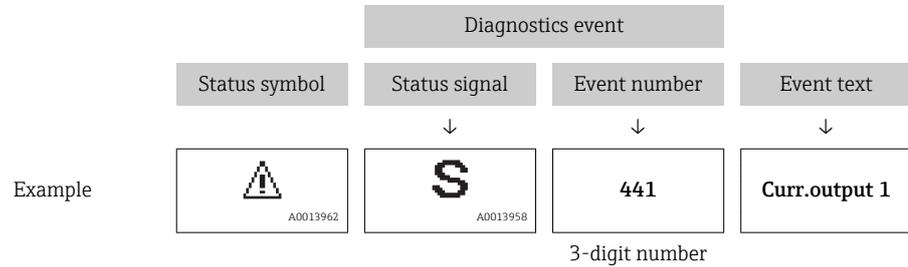


If two or more diagnostic messages are pending simultaneously, only the message with the highest priority is shown. Additional pending diagnostic messages can be shown in **Diagnostic list** submenu (→  176).

-  Past diagnostic messages that are no longer pending are shown as follows:
 - On the local display:
 - in **Event logbook** submenu (→  177)
 - In FieldCare:
 - via the "Event List /HistoROM" function.

Operating elements

Operating functions in menu, submenu	
 <small>A0013970</small>	Plus key Opens the message about the remedial measures.
 <small>A0013952</small>	Enter key Opens the operating menu.

12.2.2 Calling up remedial measures

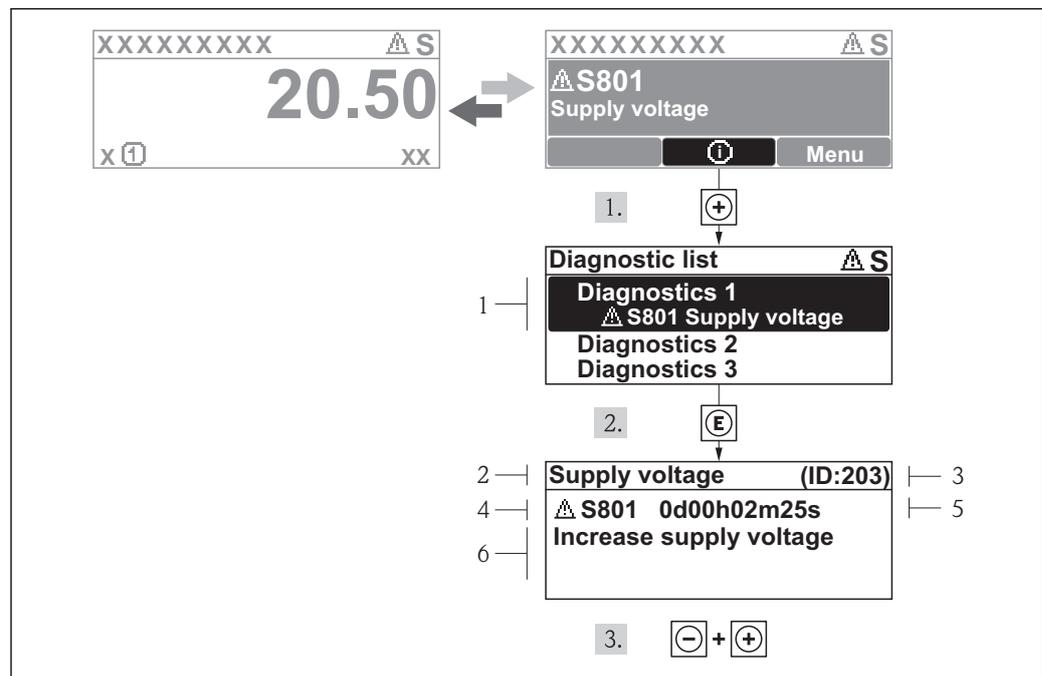

A0013940-EN

26 Message for remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

1. Press + (i) symbol.
 - ↳ **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with + or - and press E .
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press - + + simultaneously.
 - ↳ The message for the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in **Diagnostic list** submenu or in **Previous diagnostics**.

1. Press E .
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press - + + simultaneously.
 - ↳ The message for the remedial measures closes.

12.3 Diagnostic event in the operating tool

If a diagnostic event is present in the device, the status signal appears in the top left status in the operating tool along with the corresponding symbol for event level in accordance with NAMUR NE 107:

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)

Calling up remedial measures

1. Navigate to the **Diagnostics** menu.
 - ↳ In the **Actual diagnostics** parameter, the diagnostic event is shown with event text.
2. On the right in the display range, hover the cursor over the **Actual diagnostics** parameter.
 - ↳ A tool tip with remedial measures for the diagnostic event appears.

12.4 Diagnostic messages in the DIAGNOSTIC Transducer Block (TRDDIAG)

- The **Actual diagnostics** parameter displays the message with the highest priority. Every message is also output as per the FOUNDATION Fieldbus Specification by means of the **XD_ERROR** and **BLOCK_ERROR** parameters.
- A list of diagnostic messages is displayed in the **Diagnostics 1** to **Diagnostics 5** parameters. If more than 5 messages are currently active, only those with the highest priority are displayed.
- You can view a list of alarms which are no longer active (event log) via the **Previous diagnostics** parameter.

12.5 Diagnostic list

In the Diagnostic list submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

Navigation path

"Diagnostics" menu → Diagnostic list

Calling up and closing the remedial measures

1. Press .
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  +  simultaneously.
 - ↳ The message about the remedial measures closes.

12.6 Overview of diagnostic events

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of electronic				
242	Software incompatible	1. Check software 2. Flash or change main electronics module	F	Alarm
252	Modules incompatible	1. Check electronic modules 2. Change I/O or main electronic module	F	Alarm
261	Electronic modules	1. Restart device 2. Check electronic modules 3. Change I/O Modul or main electronics	F	Alarm
262	Module connection	1. Check module connections 2. Change electronic modules	F	Alarm
270	Main electronic failure	Change main electronic module	F	Alarm
271	Main electronic failure	1. Restart device 2. Change main electronic module	F	Alarm
272	Main electronic failure	1. Restart device 2. Contact service	F	Alarm
273	Main electronic failure	1. Emergency operation via display 2. Change main electronics	F	Alarm
275	I/O module failure	Change I/O module	F	Alarm
276	I/O module failure	1. Restart device 2. Change I/O module	F	Alarm
282	Data storage	1. Restart device 2. Contact service	F	Alarm
283	Memory content	1. Transfer data or reset device 2. Contact service	F	Alarm
311	Electronic failure	1. Transfer data or reset device 2. Contact service	F	Alarm
311	Electronic failure	Maintenance required! 1. Do not perform reset 2. Contact service	M	Warning
Diagnostic of configuration				
410	Data transfer	1. Check connection 2. Retry data transfer	F	Alarm
411	Up-/download active	Up-/download active, please wait	C	Warning
412	Processing Download	Download active, please wait	C	Warning
435	Linearization	Check linearization table	F	Alarm
437	Configuration incompatible	1. Restart device 2. Contact service	F	Alarm
438	Dataset	1. Check data set file 2. Check device configuration 3. Up- and download new configuration	M	Warning
482	Block in OOS	Set Block in AUTO mode	F	Alarm
484	Simulation failure mode	Deactivate simulation	C	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
485	Simulation measured value	Deactivate simulation	C	Warning
494	Switch output simulation	Deactivate simulation switch output	C	Warning
495	Simulation diagnostic event	Deactivate simulation	C	Warning
497	Simulation block output	Deactivate simulation	C	Warning
585	Simulation distance	Deactivate simulation	C	Warning
586	Record map	Recording of mapping please wait	C	Warning
Diagnostic of process				
801	Energy too low	Increase supply voltage	S	Warning
825	Operating temperature	1. Check ambient temperature 2. Check process temperature	F	Alarm
921	Change of reference	1. Check reference configuration 2. Check pressure 3. Check sensor	S	Warning
941	Echo lost	Check parameter 'DC value'	F	Alarm ¹⁾
942	In safety distance	1. Check level 2. Check safety distance 3. Reset self holding	S	Alarm ¹⁾
943	In blocking distance	Reduced accuracy Check level	S	Warning
950	Advanced diagnostic 1 to 2 occurred	Maintain your diagnostic event	M	Warning ¹⁾

1) Diagnostic status is changeable.

12.7 Event logbook

12.7.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Event list** submenu ⁴⁾.

Navigation path

Diagnostics → Event logbook → Event list

A maximum of 100 event messages can be displayed in chronological order.

The event history includes entries for:

- Diagnostic events
- Information events

4) This submenu is only available for operation via local display. In the case of operation via FieldCare, the event list can be displayed with the "Event List / HistoROM" functionality of FieldCare.

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
 - : Event has occurred
 - : Event has ended
- Information event
 - : Event has occurred

Calling up and closing the remedial measures

1. Press .
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  +  simultaneously.
 - ↳ The message about the remedial measures closes.

12.7.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Event list** submenu angezeigt werden.

Navigation path

"Diagnostics" menu → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information

12.7.3 Overview of information events

Info number	Info name
I1000	----- (Device ok)
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	Trend data deleted
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1154	Reset terminal voltage min/max
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared

Info number	Info name
I1256	Display: access status changed
I1264	Safety sequence aborted
I1335	Firmware changed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished

12.8 Firmware history

Date	Firmware version	Modifications	Documentation (FMR56/FMR57, FOUNDATION Fieldbus)		
			Operating Instructions	Description of Parameters	Technical Information
06.2012	01.00.zz	Original software	BA01123F/00/DE/01.13	GP01017F/00/DE/01.13	TI01042F/00/DE/03.13
05.2015	01.01.zz	<ul style="list-style-type: none"> ▪ additional languages ▪ HistoROM functionality enhanced ▪ Improvements and bugfixes 	BA01123F/00/DE/02.15	GP01017F/00/DE/02.15	TI01042F/00/DE/05.15

 The firmware version can explicitly be ordered via the product structure. In this way it is possible to ensure compatibility of the firmware version with an existing or planned system integration.

13 Maintenance

The measuring device requires no special maintenance.

13.1 Exterior cleaning

When exterior-cleaning the device, always use cleaning agents that do not attack the surface of the housing and the seals.

13.2 Replacing seals

The process seals of the sensors (at the process connection) must be replaced periodically, particularly if molded seals (aseptic construction) are used. The period between changes depends on the frequency of cleaning cycles and on the temperature of the measured substance and the cleaning temperature.

14 Repairs

14.1 General information on repairs

14.1.1 Repair concept

The Endress+Hauser repair concept assumes that the devices have a modular design and that repairs can be done by the Endress+Hauser service or specially trained customers.

Spare parts are contained in suitable kits. They contain the related replacement instructions.

For more information on service and spare parts, contact the Service Department at Endress+Hauser.

14.1.2 Repairs to Ex-approved devices

When carrying out repairs to Ex-approved devices, please note the following:

- Repairs to Ex-approved devices may only be carried out by trained personnel or by the Endress+Hauser Service.
- Comply with the prevailing standards, national Ex-area regulations, safety instructions (XA) and certificates.
- Only use original spare parts from Endress+Hauser.
- When ordering a spare part, please note the device designation on the nameplate. Only replace parts with identical parts.
- Carry out repairs according to the instructions. On completion of repairs, carry out the specified routine test on the device.
- Only Endress+Hauser Service may convert a certified device into a different certified variant.
- Document all repair work and conversions.

14.1.3 Replacement of an electronics module

If an electronics module has been replaced, it is not necessary to perform a new basic setup as the calibration parameters are stored in the HistoROM which is located in the housing. However, after exchanging the main electronics module it may be necessary to record a new mapping (interference echo suppression).

14.1.4 Replacement of a device


After a complete device or electronic module has been replaced, the parameters can be downloaded into the instrument again in one of the following ways:

- Via the display module
Condition: The configuration of the old device has been saved in the display module
→  168.
- Via FieldCare
Condition: The configuration of the old device has been saved to the computer via FieldCare.

You can continue to measure without carrying out a new setup. Only a linearization and a tank map (interference echo suppression) have to be recorded again.

14.2 Spare parts

- A few interchangeable measuring device components are identified by a spare part nameplate. This contains information about the spare part.
- The connection compartment cover of the device contains a spare part nameplate that includes the following information:
 - A list of the most important spare parts for the measuring device, including their ordering information.
 - The URL for the *W@M Device Viewer* (www.endress.com/deviceviewer): There, all spare parts for the measuring device are listed, including the order code, and can be ordered. If available, the corresponding Installation Instructions can also be downloaded there.

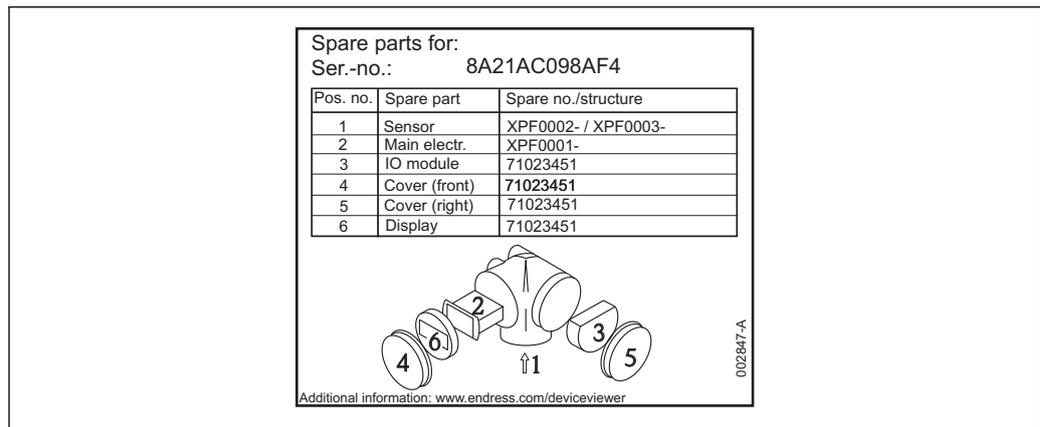

27 Example for spare part nameplate in connection compartment cover

- i** Measuring device serial number:
 - Is located on the device and spare part nameplate.
 - Can be read out via the "Serial number" parameter in the "Device information" submenu.

14.3 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <http://www.endress.com/support/return-material>

14.4 Disposal


Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.


15 Accessories

15.1 Device-specific accessories

15.1.1 Weather protection cover

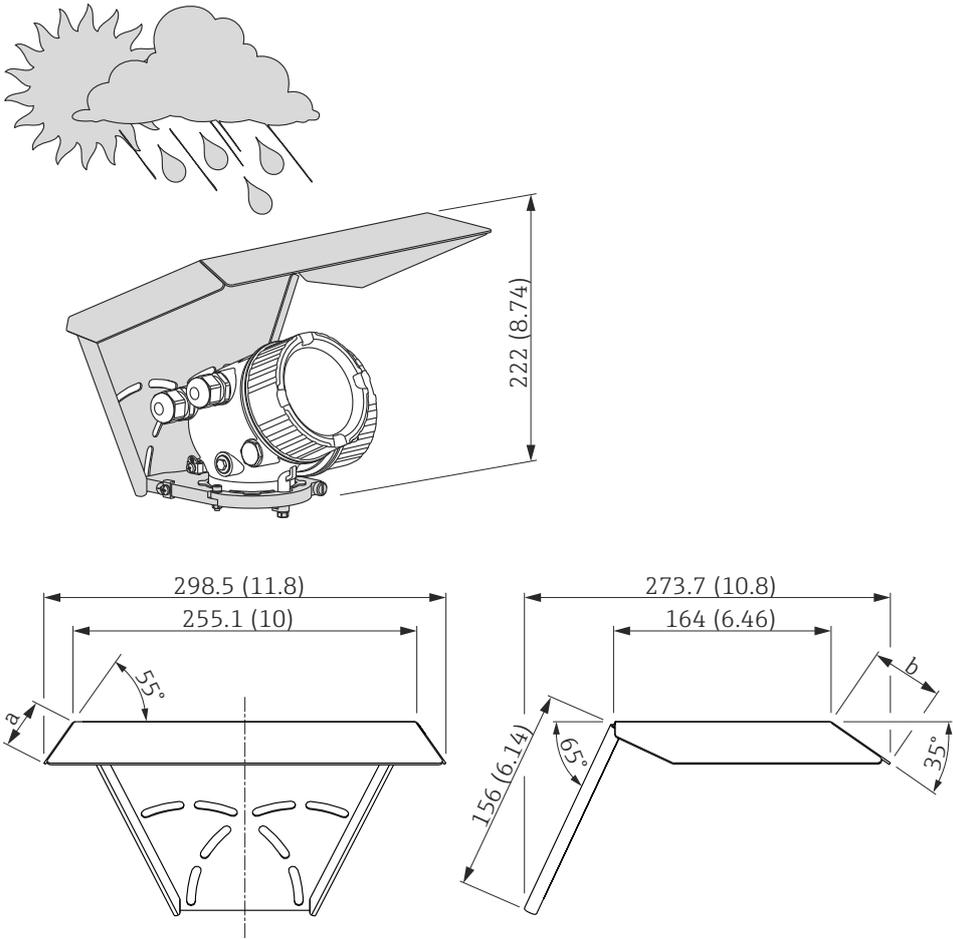Accessory	Description
Weather protection cover	 <p data-bbox="1476 1059 1528 1075">A0015466</p> <p data-bbox="1476 1473 1528 1489">A0015472</p> <p data-bbox="416 1503 925 1529">☑ 28 Weather protection cover; Dimensions: mm (in)</p> <p data-bbox="416 1541 622 1568">a 37,8 mm (1,5 in)</p> <p data-bbox="416 1568 606 1594">b 54 mm (2,1 in)</p> <p data-bbox="416 1621 1492 1700">  The weather protection cover can be ordered together with the device (product structure, feature 620 "Accessory Enclosed", option PB "Weather Protection Cover"). Alternatively, it can be separately ordered as an accessory; order code 71162242. </p>

15.1.2 Variable flange seal for FMR50/FMR56

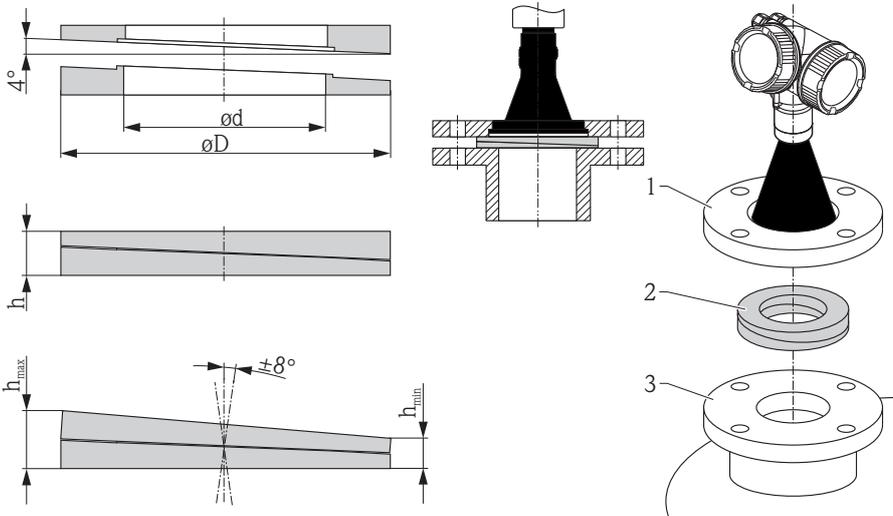Accessory	Description		
Variable flange seal for FMR50/FMR56	<div style="display: flex; justify-content: space-around;">  </div> <p style="text-align: right; font-size: small;">A0018871</p> <ol style="list-style-type: none"> 1 UNI slip-on flange 2 Variable flange seal 3 Nozzle <p>i The material and process conditions of the adjustable flange seal must fit the process properties (temperature, pressure, resistance).</p> <p>i For FMR56: The variable flange seal can also be ordered together with the device (product structure: feature 620 "Accessory Enclosed", options PL, PM, PN, PO, PQ, PR).</p>		
Technical data: DN/JIS version			
Order code	71074263	71074264	71074265
Compatible with	DN80 PN10/40	DN100 PN10/16	<ul style="list-style-type: none"> ■ DN150 PN10/16 ■ JIS 10K 150A
Length of screws	100 mm (3.9 in)	100 mm (3.9 in)	110 mm (4.3 in)
Size of screws	M14	M14	M18
Material	EPDM		
Process pressure	-0.1 to 0.1 bar (-1.45 to 1.45 psi)		
Process temperature	-40 to +80 °C (-40 to +176 °F)		
D	142 mm (5.59 in)	162 mm (6.38 in)	218 mm (8.58 in)
d	89 mm (3.5 in)	115 mm (4.53 in)	169 mm (6.65 in)
h	22 mm (0.87 in)	23.5 mm (0.93 in)	26.5 mm (1.04 in)
h _{min}	14 mm (0.55 in)	14 mm (0.55 in)	14 mm (0.55 in)
h _{max}	30 mm (1.18 in)	33 mm (1.3 in)	39 mm (1.45 in)


Accessory	Description			
	Technical data: ASME/JIS version			
Order code	71249070	71249072	71249073	
Compatible with	<ul style="list-style-type: none"> ■ ASME 3" 150lbs ■ JIS 80A 10K 	ASME 4" 150lbs	ASME 6" 150lbs	
Length of screws	100 mm (3.9 in)	100 mm (3.9 in)	110 mm (4.3 in)	
Empfohlene Schraubengröße	M14	M14	M18	
Material	EPDM			
Process pressure	-0.1 to 0.1 bar (-1.45 to 1.45 psi)			
Process temperature	-40 to +80 °C (-40 to +176 °F)			
D	133 mm (5.2 in)	171 mm (6.7 in)	219 mm (8.6 in)	
d	89 mm (3.5 in)	115 mm (4.53 in)	168 mm (6.6 in)	
h	22 mm (0.87 in)	23.5 mm (0.93 in)	26.5 mm (1.04 in)	
h _{min}	14 mm (0.55 in)	14 mm (0.55 in)	14 mm (0.55 in)	
h _{max}	30 mm (1.18 in)	33 mm (1.3 in)	39 mm (1.45 in)	

15.1.3 Mounting bracket for wall or ceiling mounting of FMR50/FMR56


Accessory	Description
Mounting bracket for wall or ceiling mounting of FMR50/FMR56	<div style="display: flex; align-items: flex-start;"> <div style="margin-right: 20px;"> <p>A</p> </div> <div style="margin-right: 20px;"> <p>B</p> </div> <div> </div> </div> <p>☑ 29 Mounting bracket for FMR50/FMR56 with horn antenna</p> <p>A Mounting at ceiling B Mounting at wall</p> <ul style="list-style-type: none"> ■ Material: <ul style="list-style-type: none"> - Mounting bracket: 304 (1.4301) - Screws: A2 - Nordlock washer: A4 ■ Order code: 71162776

A0017746

15.1.4 Remote display FHX50

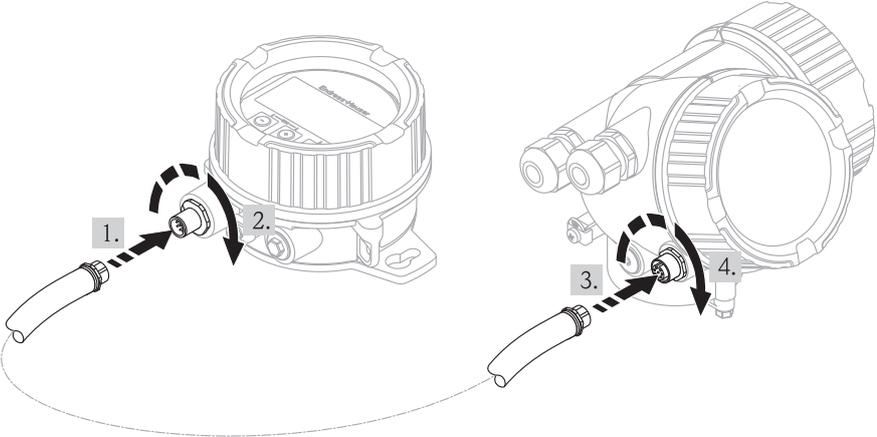Accessory	Description
Remote display FHX50	<div style="text-align: right; margin-bottom: 10px;">A0019128</div>  <ul style="list-style-type: none"> ▪ Material: <ul style="list-style-type: none"> - Plastics PBT - 316L ▪ Ingress protection: IP68 / NEMA 6P and IP66 / NEMA 4x ▪ Suitable for the display modules: <ul style="list-style-type: none"> - SD02 (push buttons) - SD03 (touch control) ▪ Connection cable: <ul style="list-style-type: none"> - Cable with M12 plug; supplied with the FHX50; up to 30 m (98 ft) - Customer supplied standard cable; up to 60 m (196 ft) ▪ Ambient temperature: -40 to 80 °C (-40 to 176 °F) <p>i ▪ If the remote display is to be used, the device must be ordered in the version "Prepared for display FHX50" (feature 030, option L or M). For the FHX50, on the other hand, the option A: "Prepared for display FHX50" has to be selected in feature 050: "Option Measurement Device".</p> <p>▪ If a device has not been ordered in the version "Prepared for display FHX50", but is nevertheless to be equipped with an FHX50, it is essential to select the option B: "Not prepared for display FHX50" in feature 050: "Option Measurement Device" of the FHX50. In this case, a retrofit kit, needed to prepare the device for the remote display, is supplied together with the FHX50.</p> <p>i For transmitters with approval, application of the FHX50 may be restricted. A device may only be retrofitted with the FHX50 if option L or M ("Prepared for FHX50") is quoted under <i>Basic specifications</i>, position 4 "Display, operation" in the associated Safety Instructions (XA). In addition to this, observe the Safety Instructions (XA) of the FHX50.</p> <p>i Do not retrofit transmitters with:</p> <ul style="list-style-type: none"> ▪ approval for use in areas with combustible dusts (Dust-Ex approval) ▪ type of protection Ex nA <p>i For details refer to the document SD01007F.</p>

15.1.5 Horn protection for horn antenna

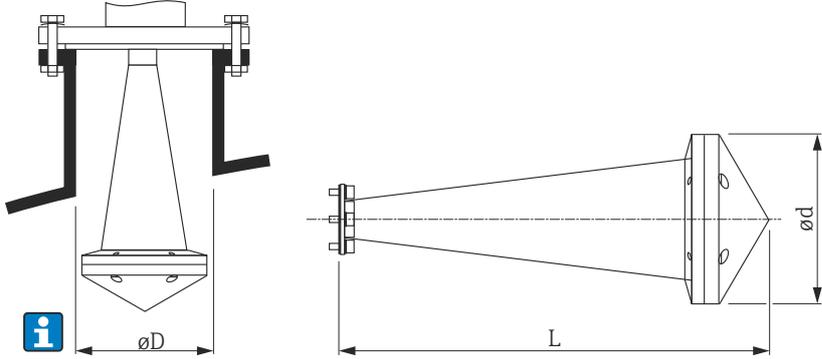Accessory	Description
Horn protection for 80 mm (3 in) or 100 mm (4 in) horn antenna	<div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p style="font-size: small;">A0019143</p> </div> </div> <p>For details please refer to the Mounting Instructions SD01084F.</p> <p>Process conditions</p> <ul style="list-style-type: none"> ■ Maximum vessel pressure: 0.5 bar (7.252 psi) ■ Maximum process temperature: 130 °C (266 °F) <p> Danger of explosion Avoid electrostatic charging of the horn protection.</p>

Horn protection for FMR57

Antenna ¹⁾	Order code of horn protection	Dimensions		
		Ød	L	ØD
BC: Horn 80mm/3"	71105890	96 mm (3.78 in)	238 mm (9.4 in)	≥ DN100
BD: Horn 100mm/4"	71105889	116 mm (4.57 in)	450 mm (17.7 in)	≥ DN150

1) Feature 070 of the product structure

 The horn protection can also be ordered together with the device. Product structure: Feature 610 "Accessory Mounted", option OW "Horn protection, PTFE".

15.1.6 Overvoltage protection

Accessory	Description
Overvoltage protection for 2-wire-devices OVP10 (1 channel) OVP20 (2 channel)	<div data-bbox="327 324 715 660" data-label="Image"> </div> <div data-bbox="1380 667 1436 683" data-label="Text"> <p>A0021734</p> </div> <p data-bbox="327 712 470 734">Technical data</p> <ul data-bbox="327 739 917 896" style="list-style-type: none"> ▪ Resistance per channel: $2 * 0.5 \Omega_{max}$ ▪ Threshold DC voltage: 400 to 700 V ▪ Threshold impulse voltage: < 800 V ▪ Capacitance at 1 MHz: < 1.5 pF ▪ Nominal arrest impulse voltage (8/20 μs): 10 kA ▪ Suited for wire cross-sections: 0.2 to 2.5 mm² (24 to 14 AWG) <p data-bbox="327 907 582 929">i Ordering with device</p> <p data-bbox="375 936 1388 1008">The overvoltage protection module is preferably ordered with the device. See product structure, feature 610 "Accessory mounted", option NA "Overvoltage protection". Separate ordering of the module is only necessary if a device is to be retrofitted with the overvoltage protection.</p> <p data-bbox="327 1019 630 1041">i Order code for retrofitting</p> <ul data-bbox="375 1048 901 1153" style="list-style-type: none"> ▪ For 1-channel devices (feature 020, option A) OVP10: 71128617 ▪ For 2-channel devices (feature 020, option B, C, E or G) OVP20 : 71128619 <p data-bbox="375 1164 638 1187">Housing lid for retrofitting</p> <p data-bbox="375 1193 1420 1243">In order to keep the necessary safety distances, the housing lid needs to be replaced if the device is retrofitted with the overvoltage protection. Depending on the housing type, the order code of the suitable lid is as follows:</p> <ul data-bbox="375 1249 678 1321" style="list-style-type: none"> ▪ GT18 housing: Lid 71185516 ▪ GT19 housing: Lid 71185518 ▪ GT20 housing: Lid 71185516 <p data-bbox="327 1332 646 1355">i Restrictions for retrofitting</p> <p data-bbox="375 1361 1428 1433">Depending on the approval of the transmitter the usage of the OVP module may be restricted. A device may only be retrofitted with an OVP module if the option NA (overvoltage protection) is quoted under <i>Optional Specifications</i> in the Safety Instructions (XA) pertaining to the device.</p> <p data-bbox="327 1444 662 1467">i For details refer to SD01090F.</p>

15.2 Communication-specific accessories

Accessory	Description
Commubox FXA291	Connects Endress+Hauser field devices with CDI interface (= Endress+Hauser Common Data Interface) to the USB interface of a computer. Order code: 51516983  For details refer to Technical Information TI00405C

Accessory	Description
Field Xpert SFX350	Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the non-Ex area .  For details, see Operating Instructions BA01202S

Accessory	Description
Field Xpert SFX370	Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the non-Ex area and the Ex area .  For details, see Operating Instructions BA01202S

15.3 Service-specific accessories

Accessory	Description
FieldCare	Endress+Hauser's FDT-based Plant Asset Management tool. Helps to configure and maintain all field devices of your plant. By supplying status information it also supports the diagnosis of the devices.  For details refer to Operating Instructions BA00027S and BA00059S.

15.4 System components

Accessory	Description
Graphic Data Manager Memograph M	The graphic data manager Memograph M provides information on all the relevant process variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on an SD card or USB stick.  For details refer to Technical Information TI00133R and Operating Instructions BA00247R

16 Operating menu

16.1 Overview of the operating menu (display module)

Navigation  Operating menu

Language	→  161
Setup	→  126
Distance unit	→  126
Bin type	→  126
Max. filling speed solid	→  126
Max. draining speed solid	→  127
Empty calibration	→  127
Full calibration	→  128
Level	→  129
Distance	→  129
Signal quality	→  130
Mapping	→  133
Confirm distance	→  133
Mapping end point	→  133
Record map	→  133
Distance	→  133
Prepare recording map	→  133
Analog inputs	
Analog input 1 to 5	→  134
Block tag	→  134

Channel	→  134
Process Value Filter Time	→  135
► Advanced setup	→  136
Locking status	→  136
Access status display	→  137
Enter access code	→  137
► Level	→  138
Medium type	→  138
Medium property	→  138
Advanced process conditions	→  139
Level unit	→  139
Blocking distance	→  140
Level correction	→  140
Tank/silo height	→  140
► Linearization	→  143
Linearization type	→  145
Unit after linearization	→  146
Free text	→  147
Maximum value	→  148
Diameter	→  148
Intermediate height	→  148
Table mode	→  149

▶ Edit table		
	Level	→ 150
	Customer value	→ 151
	Activate table	→ 151
▶ Safety settings		→ 152
	Output echo lost	→ 152
	Value echo lost	→ 152
	Ramp at echo lost	→ 153
	Blocking distance	→ 140
▶ Switch output		→ 155
	Switch output function	→ 155
	Assign status	→ 155
	Assign limit	→ 156
	Assign diagnostic behavior	→ 156
	Switch-on value	→ 157
	Switch-on delay	→ 158
	Switch-off value	→ 158
	Switch-off delay	→ 159
	Failure mode	→ 159
	Switch status	→ 159
	Invert output signal	→ 159
▶ Display		→ 161
	Language	→ 161
	Format display	→ 161
	Value 1 to 4 display	→ 163

Decimal places 1 to 4	→  163
Display interval	→  164
Display damping	→  164
Header	→  164
Header text	→  165
Separator	→  165
Number format	→  165
Decimal places menu	→  166
Backlight	→  166
Contrast display	→  167
► Configuration backup display	→  168
Operating time	→  168
Last backup	→  168
Configuration management	→  168
Comparison result	→  169
► Administration	→  171
► Define access code	→  173
Define access code	→  173
Confirm access code	→  173
Device reset	→  171
 Diagnostics	→  174
Actual diagnostics	→  174
Previous diagnostics	→  174
Operating time from restart	→  175
Operating time	→  168

▶ Diagnostic list	→ 176
Diagnostics 1 to 5	→ 176
▶ Event logbook	→ 177
Filter options	→ 177
▶ Event list	→ 177
▶ Device information	→ 178
Device tag	→ 178
Serial number	→ 178
Firmware version	→ 178
Device name	→ 178
Order code	→ 179
Extended order code 1 to 3	→ 179
▶ Measured values	→ 180
Distance	→ 129
Level linearized	→ 147
Terminal voltage 1	→ 180
Electronic temperature	→ 181
▶ Analog inputs	
▶ Analog input 1 to 5	→ 181
Block tag	→ 134
Channel	→ 134
Status	→ 182
Value	→ 182
Units index	→ 182

▶ Data logging	→ 183
Assign channel 1 to 4	→ 183
Logging interval	→ 183
Clear logging data	→ 184
▶ Display channel 1 to 4	→ 185
▶ Simulation	→ 188
Assign measurement variable	→ 189
Value process variable	→ 189
Switch output simulation	→ 189
Switch status	→ 190
Simulation device alarm	→ 190
Diagnostic event category	
Simulation diagnostic event	
▶ Device check	→ 191
Start device check	→ 191
Result device check	→ 191
Last check time	→ 191
Level signal	→ 192

16.2 Overview of the operating menu (operating tool)

Navigation



Operating menu

Setup	→ 126
Distance unit	→ 126
Bin type	→ 126
Max. filling speed solid	→ 126
Max. draining speed solid	→ 127
Empty calibration	→ 127
Full calibration	→ 128
Level	→ 129
Distance	→ 129
Signal quality	→ 130
Confirm distance	→ 130
Present mapping	→ 131
Mapping end point	→ 131
Record map	→ 132
▶ Analog inputs	
▶ Analog input 1 to 5	→ 134
Block tag	→ 134
Channel	→ 134
Process Value Filter Time	→ 135
▶ Advanced setup	→ 136
Locking status	→ 136
Access status tooling	→ 136
Enter access code	→ 137

▶ Level	→ 138
Medium type	→ 138
Medium property	→ 138
Advanced process conditions	→ 139
Level unit	→ 139
Blocking distance	→ 140
Level correction	→ 140
Tank/silo height	→ 140
▶ Linearization	→ 143
Linearization type	→ 145
Unit after linearization	→ 146
Free text	→ 147
Level linearized	→ 147
Maximum value	→ 148
Diameter	→ 148
Intermediate height	→ 148
Table mode	→ 149
Table number	→ 150
Level	→ 150
Level	→ 151
Customer value	→ 151
Activate table	→ 151
▶ Safety settings	→ 152
Output echo lost	→ 152
Value echo lost	→ 152

Ramp at echo lost	→  153
Blocking distance	→  140
► Switch output	→  155
Switch output function	→  155
Assign status	→  155
Assign limit	→  156
Assign diagnostic behavior	→  156
Switch-on value	→  157
Switch-on delay	→  158
Switch-off value	→  158
Switch-off delay	→  159
Failure mode	→  159
Switch status	→  159
Invert output signal	→  159
► Display	→  161
Language	→  161
Format display	→  161
Value 1 to 4 display	→  163
Decimal places 1 to 4	→  163
Display interval	→  164
Display damping	→  164
Header	→  164
Header text	→  165
Separator	→  165
Number format	→  165

Decimal places menu	→  166
Backlight	→  166
Contrast display	→  167
► Configuration backup display	→  168
Operating time	→  168
Last backup	→  168
Configuration management	→  168
Backup state	→  169
Comparison result	→  169
► Administration	→  171
Define access code	→  173
Device reset	→  171
 Diagnostics	→  174
Actual diagnostics	→  174
Timestamp	→  174
Previous diagnostics	→  174
Timestamp	→  175
Operating time from restart	→  175
Operating time	→  168
► Diagnostic list	→  176
Diagnostics 1 to 5	→  176
Timestamp 1 to 5	→  176
► Device information	→  178
Device tag	→  178
Serial number	→  178

Firmware version	→  178
Device name	→  178
Order code	→  179
Extended order code 1 to 3	→  179
▶ Measured values	→  180
Distance	→  129
Level linearized	→  147
Terminal voltage 1	→  180
Electronic temperature	→  181
▶ Analog inputs	
▶ Analog input 1 to 5	→  181
Block tag	→  134
Channel	→  134
Status	→  182
Value	→  182
Units index	→  182
▶ Data logging	→  183
Assign channel 1 to 4	→  183
Logging interval	→  183
Clear logging data	→  184
▶ Simulation	→  188
Assign measurement variable	→  189
Value process variable	→  189
Switch output simulation	→  189
Switch status	→  190

Simulation device alarm	→ 190
Simulation diagnostic event	
▶ Device check	→ 191
Start device check	→ 191
Result device check	→ 191
Last check time	→ 191
Level signal	→ 192

16.3 "Setup" menu

-   : Marks the navigation path to the parameter via the display and operating module.
-  : Marks the navigation path to the parameter via an operating tool (e.g. FieldCare).
-  : Marks parameters which can be locked via the software locking →  48.

Navigation   Setup

Distance unit

Navigation	  Setup → Distance unit	
Description	Select distance unit.	
Selection	<i>SI units</i> <ul style="list-style-type: none"> ▪ mm ▪ m 	<i>US units</i> <ul style="list-style-type: none"> ▪ ft ▪ in
Factory setting	m	

Bin type

Navigation	  Setup → Bin type	
Prerequisite	Medium type (→  138) = Solid	
Description	Specify bin type.	
Selection	<ul style="list-style-type: none"> ▪ Buffer silo (fast) ▪ Bin / Pile ▪ Crusher / belt ▪ Silo ▪ Workbench test 	
Factory setting	Silo	

Max. filling speed solid

Navigation	 Setup → Max. fill. solid	
Prerequisite	Medium type (→  138) = Solid	
Description	Select expected maximum filling speed.	

Selection	<ul style="list-style-type: none"> ■ Very slow < 0,5m (1,6ft) /h ■ Slow < 1m (3,3ft) /h ■ Standard < 2m (6,5ft) /h ■ Medium < 4m (13ft) /h ■ Fast < 8m (26ft) /h ■ Very fast > 8m (26ft) /h ■ No filter / test
Factory setting	Standard < 2m (6,5ft) /h
Additional information	It is strongly recommended to adjust this parameter to the actual maximum filling speed of the process.


Max. draining speed solid

Navigation	 Setup → Max.drain solid
Prerequisite	Medium type (→  138) = Solid
Description	Select expected maximum draining speed.
Selection	<ul style="list-style-type: none"> ■ Very slow < 0,5m (1,6ft) /h ■ Slow < 1m (3,3ft) /h ■ Standard < 2m (6,5ft) /h ■ Medium < 4m (13ft) /h ■ Fast < 8m (26ft) /h ■ Very fast > 8m (26ft) /h ■ No filter / test
Factory setting	Standard < 2m (6,5ft) /h
Additional information	It is strongly recommended to adjust this parameter to the actual maximum draining speed of the process.

Empty calibration

Navigation	  Setup → Empty calibr.
Description	Specify the distance E between the process connection and the minimum level (0%). This defines the starting point of the measuring range.
User entry	Depending on the antenna
Factory setting	Depending on the antenna

Additional information

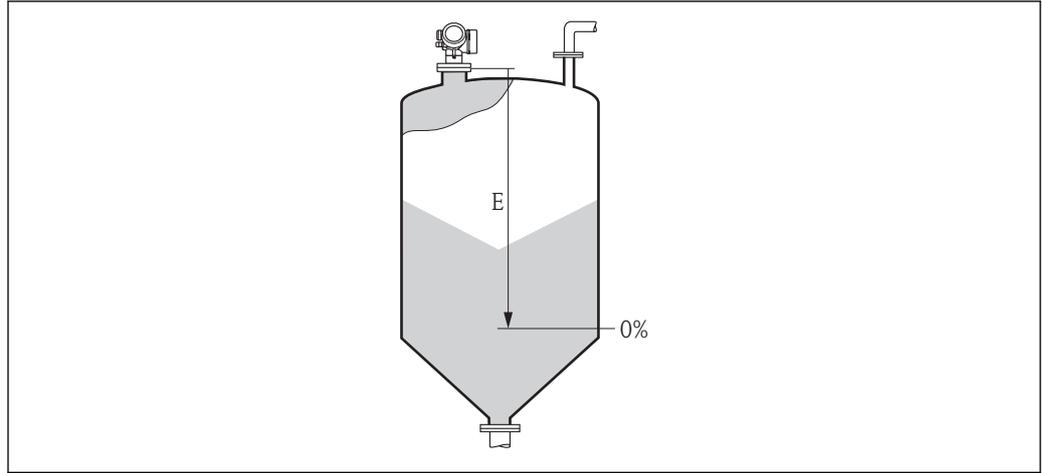

A0019488

30 Empty calibration (E) for level measurements in bulk solids.

The measuring range starts at the point at which the radar beam hits the tank or silo bottom. In the case of dished boiler ends or conical outlets levels below this point can not be measured.

Full calibration



Navigation

Setup → Full calibr.

Description

Specify the distance F between the minimum level (0%) and the maximum level (100%).


User entry

Depending on the antenna

Factory setting

Depending on the antenna

Additional information

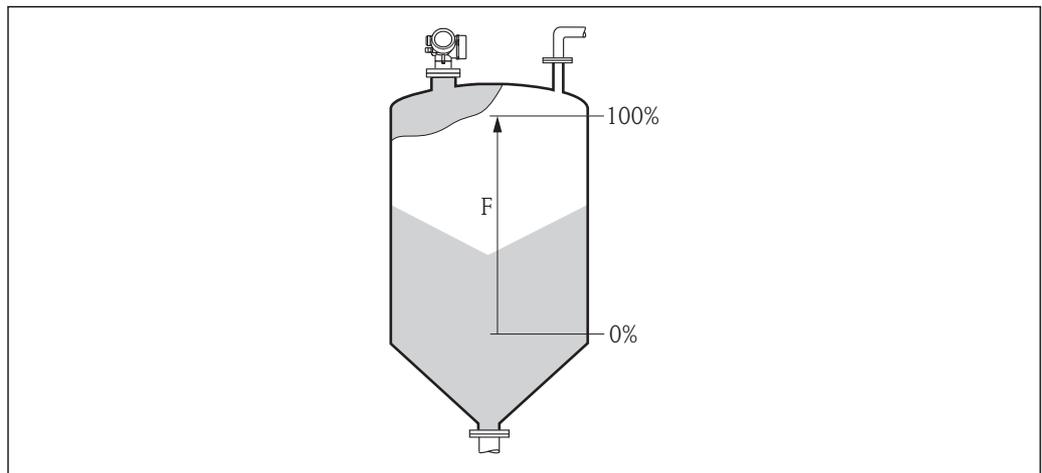

A0019489


31 Full calibration (F) for level measurements in bulk solids

Level

Navigation   Setup → Level

Description Displays measured level L (before linearization).

Additional information

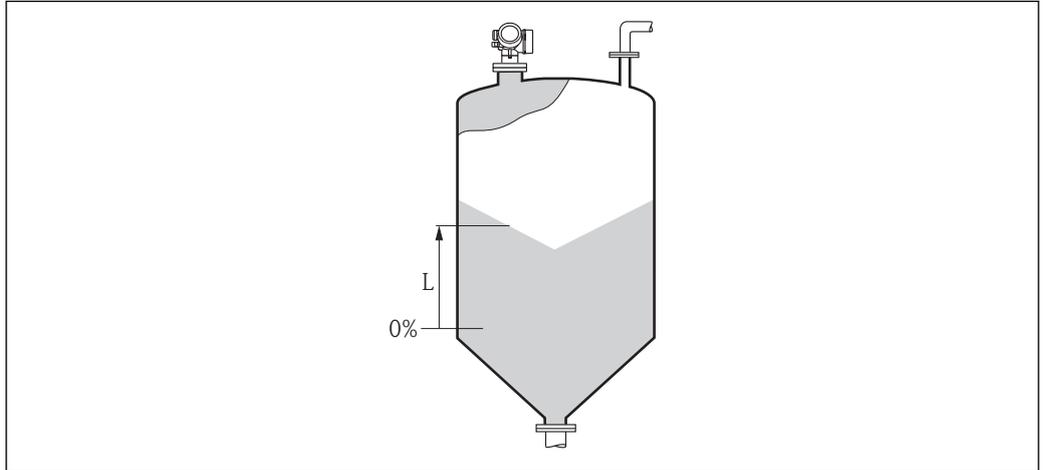

 32 *Level in case of bulk solid measurements*


 The unit is defined in the **Level unit** parameter (→  139).

Distance

Navigation   Setup → Distance

Description Displays the measured distance D between the reference point (lower edge of the flange or threaded connection) and the level.

Additional information

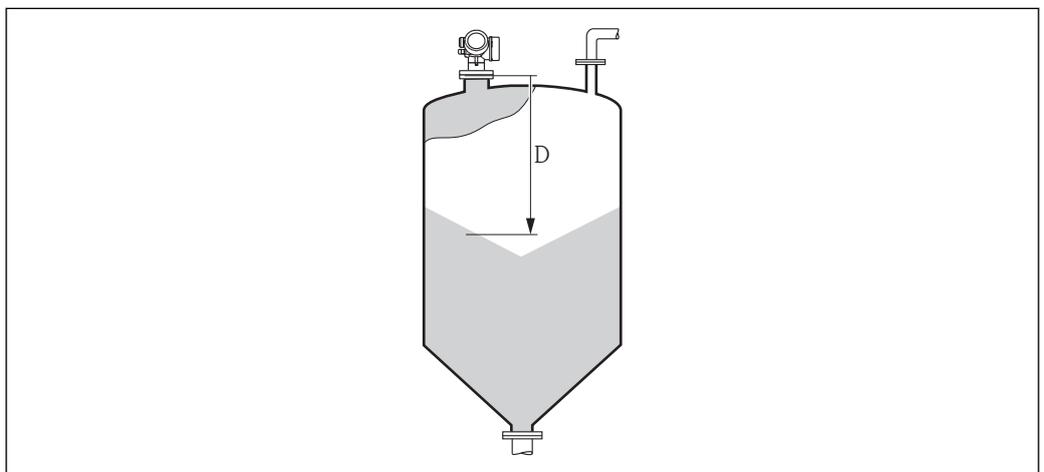

 33 *Distance for bulk solid measurements*

 The unit is defined in the **Distance unit** parameter (→  126).

Signal quality

Navigation   Setup → Signal quality

Description Displays the signal quality of the level echo.

Additional information **Meaning of the display options**

- **Strong**
The evaluated echo exceeds the threshold by at least 10 dB.
- **Medium**
The evaluated echo exceeds the threshold by at least 5 dB.
- **Weak**
The evaluated echo exceeds the threshold by less than 5 dB.
- **No signal**
The device does not find a usable echo.

The signal quality indicated in this parameter always refers to the currently evaluated echo: either the level echo or the tank bottom echo. To differentiate between these two, the quality of the tank bottom echo is always displayed in brackets.

 In case of a lost echo (**Signal quality = No signal**) the device generates the following error message:

- F941, for **Output echo lost** (→  152) = **Alarm**.
- S941, if another option has been selected in **Output echo lost** (→  152).

Confirm distance



Navigation  Setup → Confirm distance

Description Specify, whether the measured distance matches the real distance.
Depending on the selection the device automatically sets the range of mapping.

- Selection**
- Manual map
 - Distance ok
 - Distance unknown
 - Distance too small *
 - Distance too big *
 - Tank empty
 - Factory map

Factory setting Distance unknown

Additional information **Meaning of the options**

- **Manual map**
To be selected if the range of mapping is to be defined manually in the **Mapping end point** parameter (→  131). In this case it is not necessary to confirm the distance.
- **Distance ok**
To be selected if the measured distance matches the actual distance. The device performs a mapping.
- **Distance unknown**
To be selected if the actual distance is unknown. A mapping can not be performed in this case.

* Visibility depends on order options or device settings

- **Distance too small**
 To be selected if the measured distance is smaller than the actual distance. The device searches for the next echo and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.
 - **Distance too big** ⁷⁾
 To be selected if the measured distance exceeds the actual distance. The device adjusts the signal evaluation and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.
 - **Tank empty**
 To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range as defined by the **Tank/silo height** parameter (→  140). By default, **Tank/silo height** = **Empty calibration**.
 Take into account that in case of conical outlets, for example, a measurement is only possible up to the point at which the radar hits the bottom of the tank or silo. If the **Tank empty** option is used, **Empty calibration** (→  127) and **Tank/silo height** may not reach below this point as otherwise the empty signal is suppressed.
 - **Factory map**
 To be selected if the present mapping curve (if one exists) is to be deleted. The device returns to the **Confirm distance** parameter and a new mapping can be recorded.
-  When operating via the display module, the measured distance is displayed together with this parameter for reference purposes.
-  If the teaching procedure with the **Distance too small** option or the **Distance too big** option is quit before the distance has been confirmed, a map is **not** recorded and the teaching procedure is reset after 60 s.

Present mapping

Navigation	 Setup → Present mapping
Description	Indicates up to which distance a mapping has already been recorded.

Mapping end point 

Navigation	 Setup → Map. end point
Prerequisite	Confirm distance (→  130) = Manual map or Distance too small
Description	Specify new end of the mapping.
User entry	0.1 to 999 999.9 m
Factory setting	0.1 m

7) Only available for "Expert → Sensor → Echo tracking → **Evaluation mode** parameter" = "Short time history" or "Long time history"

Additional information

This parameter defines up to which distance the new mapping is to be recorded. The distance is measured from the reference point, i.e. from the lower edge of the mounting flange or the threaded connection.

 For reference purposes the **Present mapping** parameter (→  131) is displayed together with this parameter. It indicates up to which distance a mapping has already been recorded.

Record map**Navigation**

 Setup → Record map

Prerequisite

Confirm distance (→  130) = **Manual map** or **Distance too small**

Description

Start recording of the map.

Selection

- No
- Record map
- Overlay map
- Factory map
- Delete partial map

Factory setting

No

Additional information**Meaning of the options**

- **No**
The map is not recorded.
- **Record map**
The map is recorded. After the recording is completed, the new measured distance and the new mapping range appear on the display. When operating via the local display, these values must be confirmed by pressing .
- **Overlay map**
The new mapping curve is generated by overlaying the old and the current envelope curves.
- **Factory map**
The factory map stored in the ROM of the device is used.
- **Delete partial map**
The mapping curve is deleted up to **Mapping end point** (→  131).

16.3.1 "Mapping" wizard

 The **Mapping** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the mapping are located directly in the **Setup** menu (→  126).

 In the **Mapping** wizard two parameters are displayed simultaneously on the display module at any one time. The upper parameter can be edited, whereas the lower parameter is displayed for reference purposes only.

Navigation  Setup → Mapping

Confirm distance

Navigation  Setup → Mapping → Confirm distance

Description →  130

Mapping end point

Navigation  Setup → Mapping → Map. end point

Description →  131

Record map

Navigation  Setup → Mapping → Record map

Description →  132

Distance

Navigation  Setup → Mapping → Distance

Description →  129

Prepare recording map

Navigation  Setup → Mapping → Prepare rec. map

Description Indicates the progress of the recording of the map.

- User interface**
- Init. recording
 - In progress
 - Finished

16.3.2 "Analog input 1 to 5" submenu

There is an **Analog inputs** submenu for every AI block of the device. The AI block is used to configure the measured value transmission to the bus.

 Only the most basic properties of the AI block can be configured in this submenu. For a detailed configuration of the AI blocks refer to the **Expert** menu.

Navigation  Setup → Analog inputs → Analog input 1 to 5

Block tag

Navigation  Setup → Analog inputs → Analog input 1 to 5 → Block tag

Description Defined to be unique throughout the control system at one plant site. The tag may be changed using the FB_Tag service.

Factory setting

Channel

Navigation  Setup → Analog inputs → Analog input 1 to 5 → Channel

Description Select the process variable.

- Selection**
- Uninitialized
 - Level linearized
 - Absolute echo amplitude
 - Distance
 - Electronic temperature
 - Relative echo amplitude
 - Analog output adv. diagnostics 1
 - Analog output adv. diagnostics 2
 - Terminal voltage

Factory setting Uninitialized

Process Value Filter Time

Navigation	 Setup → Analog inputs → Analog input 1 to 5 → PV Filter Time
Description	Specify a time to suppress signal peaks. During the specified time the totalizer does not respond to an erratic increase in the process variable.
User entry	Positive floating-point number
Factory setting	0 s

16.3.3 "Advanced setup" submenu

Navigation  Setup → Advanced setup

Locking status

Navigation	  Setup → Advanced setup → Locking status
Description	Indicates the write protection with the highest priority that is currently active.
User interface	<ul style="list-style-type: none"> ▪ Hardware locked ▪ Temporarily locked
Additional information	<p>Meaning and priorities of the types of write protection</p> <ul style="list-style-type: none"> ▪ Hardware locked (priority 1) The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters. ▪ SIL locked (priority 2) The SIL mode is activated. Writing access to the relevant parameters is denied. ▪ WHG locked (priority 3) The WHG mode is activated. Writing access to the relevant parameters is denied. ▪ Temporarily locked (priority 4) Write access to the parameters is temporarily locked on account of internal processes in progress in the device (e.g. data upload/download, reset etc.). The parameters can be modified as soon as the processes are complete. <p> On the display module, the -symbol appears in front of parameters that cannot be modified since they are write-protected.</p>

Access status tooling

Navigation	 Setup → Advanced setup → Access stat.tool
Description	Indicates access authorization to parameters via operating tool (e.g. FieldCare).
User interface	<ul style="list-style-type: none"> ▪ Operator ▪ Maintenance ▪ Service
Additional information	<p> The access authorization can be changed via the Enter access code parameter (→  137).</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the Locking status parameter (→  136).</p>

Access status display

Navigation	 Setup → Advanced setup → Access stat.disp
Prerequisite	The device has a local display.
Description	Indicates access authorization to parameters via local display.
User interface	<ul style="list-style-type: none"> ▪ Operator ▪ Maintenance ▪ Service
Additional information	<p> If a  symbol appears in front of a parameter, the parameter cannot be changed via the local display with the current access authorization.</p> <p> The access authorization can be changed via the Enter access code parameter (→  137).</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the Locking status parameter (→  136).</p>

Enter access code

Navigation	  Setup → Advanced setup → Ent. access code
Description	Enter access code to disable write protection of parameters.
User entry	0 to 9999
Additional information	<ul style="list-style-type: none"> ▪ For local operation, the customer-specific access code, which has been defined in the Define access code parameter (→  171), has to be entered. ▪ If an incorrect access code is entered, the user retains his current access authorization. ▪ The write protection affects all parameters marked with the -symbol in this document. On the local display, the -symbol in front of a parameter indicates that the parameter is write-protected. ▪ If no key is pressed for 10 min, or the user switches from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after another 60 s. <p> Please contact your Endress+Hauser Sales Center if you lose your access code.</p>

"Level" submenu

Navigation  Setup → Advanced setup → Level

Medium type

Navigation  Setup → Advanced setup → Level → Medium type

Description Specify type of medium.

User interface

- Liquid
- Solid

Factory setting FMR56, FMR57: **Solid**

Additional information  This parameter determines the value of several other parameters and strongly influences the complete signal evaluation. Therefore, it is strongly recommended **not to change** the factory setting.

Medium property



Navigation  Setup → Advanced setup → Level → Medium property

Description Specify relative dielectric constant ϵ_r of the medium.

Selection

- Unknown
- DC 1.4 ... 1.6
- DC 1.6 ... 1.9
- DC 1.9 ... 2.5
- DC 2.5 ... 4
- DC 4 ... 7
- DC 7 ... 15
- DC > 15

Factory setting Dependent on **Medium type** (→  138) and **Medium group**.

Additional information *Dependency on "Medium type" and "Medium group"*

Medium type (→  138)	Medium group	Medium property
Solid		Unknown
Liquid	Water based (DC >= 4)	DC 4 ... 7
	Others	Unknown

 For dielectric constants (DC values) of many media commonly used in various industries refer to:

- the Endress+Hauser DC manual (CP01076F)
- the Endress+Hauser "DC Values App" (available for Android and iOS)

Advanced process conditions



Navigation	Setup → Advanced setup → Level → Adv. conditions
Description	Specify additional process conditions (if required).
Selection	<ul style="list-style-type: none"> ▪ Many obstacles ▪ Weak signal
Factory setting	None
Additional information	<p><i>"Many obstacles" option</i></p> <p>This option optimizes the signal evaluation for bulk solid applications with a large measuring range where obstacles generate many interference echos. With this selection the last echo in the envelope curve will always be evaluated. For strongly damping media this is always the level echo.</p> <p> The Many obstacles option is only available for bulk solid applications (FMR56, FMR57).</p> <p> Preconditions for the application of the "Many obstacles" option</p> <ul style="list-style-type: none"> ▪ Medium type (→ 138) = Solid ▪ Strongly damping medium (e.g. flour, wheat, cereals, ...) ▪ No multiple echos if the tank is full ▪ Interference echo suppression only in the near field (ringing area) ▪ Expert → Sensor → Echo tracking → Evaluation mode = Short time history <p><i>"Weak signal" option</i></p> <p>This option improves the detectability of small level echos in bulk solid applications with very weak signal amplitudes.</p> <p> The Weak signal option is only available for bulk solid measurements (FMR56, FMR57).</p>

Level unit



Navigation	Setup → Advanced setup → Level → Level unit				
Description	Select level unit.				
Selection	<table border="0" style="width: 100%;"> <tr> <td style="vertical-align: top;"><i>SI units</i></td> <td style="vertical-align: top;"><i>US units</i></td> </tr> <tr> <td> <ul style="list-style-type: none"> ▪ % ▪ m ▪ mm </td> <td> <ul style="list-style-type: none"> ▪ ft ▪ in </td> </tr> </table>	<i>SI units</i>	<i>US units</i>	<ul style="list-style-type: none"> ▪ % ▪ m ▪ mm 	<ul style="list-style-type: none"> ▪ ft ▪ in
<i>SI units</i>	<i>US units</i>				
<ul style="list-style-type: none"> ▪ % ▪ m ▪ mm 	<ul style="list-style-type: none"> ▪ ft ▪ in 				
Factory setting	%				
Additional information	<p>The level unit may differ from the distance unit defined in the Distance unit parameter (→ 126):</p> <ul style="list-style-type: none"> ▪ The unit defined in the Distance unit parameter is used for the basic calibration (Empty calibration (→ 127) and Full calibration (→ 128)). ▪ The unit defined in the Level unit parameter is used to display the (nonlinearized) level. 				

Blocking distance**Navigation**

 Setup → Advanced setup → Level → Blocking dist.

Description

Specify blocking distance BD.

User entry


0 to 200 m

Factory setting

FMR56, FMR57: antenna length + 400 mm (15.7 in)

Additional information

No echos are evaluated within the blocking distance BD. Therefore, BD can be used to suppress interference echos in the vicinity of the antenna.

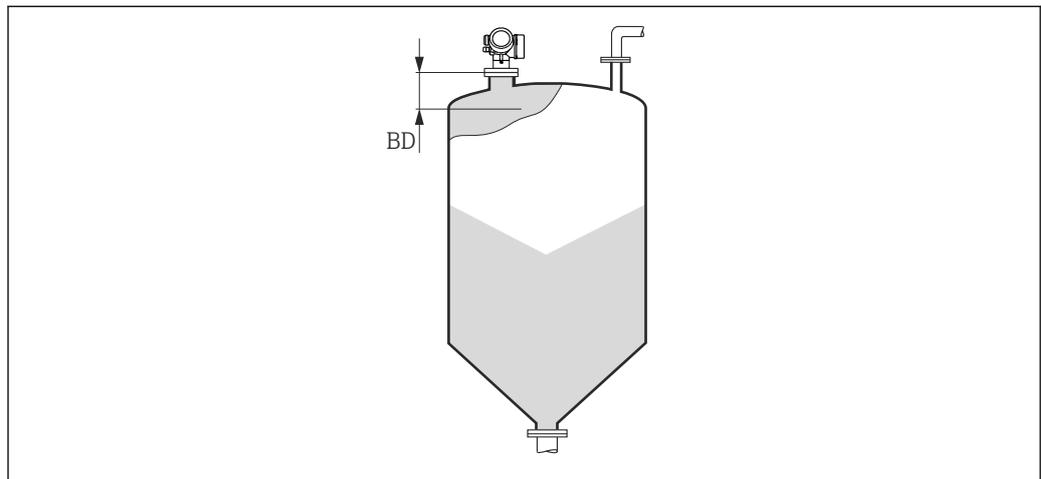

A0023041

 34 Blocking distance (BD) for bulk solid measurements

Level correction**Navigation**

 Setup → Advanced setup → Level → Level correction

Description

Specify level correction (if required).

User entry

-200 000.0 to 200 000.0 %

Factory setting

0.0 %

Additional information

The value specified in this parameter is added to the measured level (before linearization).

Tank/silo height**Navigation**

 Setup → Advanced setup → Level → Tank/silo height

Description


Specify total height of the tank or silo as measured from the process connection.

User entry

-999.9999 to 999.9999 m

Factory setting**Empty calibration** (→  127)**Additional information**

If the parametrized measuring range (**Empty calibration** (→  127)) differs significantly from the tank or silo height, it is recommended to enter the tank or silo height. Example: Continuous level monitoring in the upper third of a tank or silo.

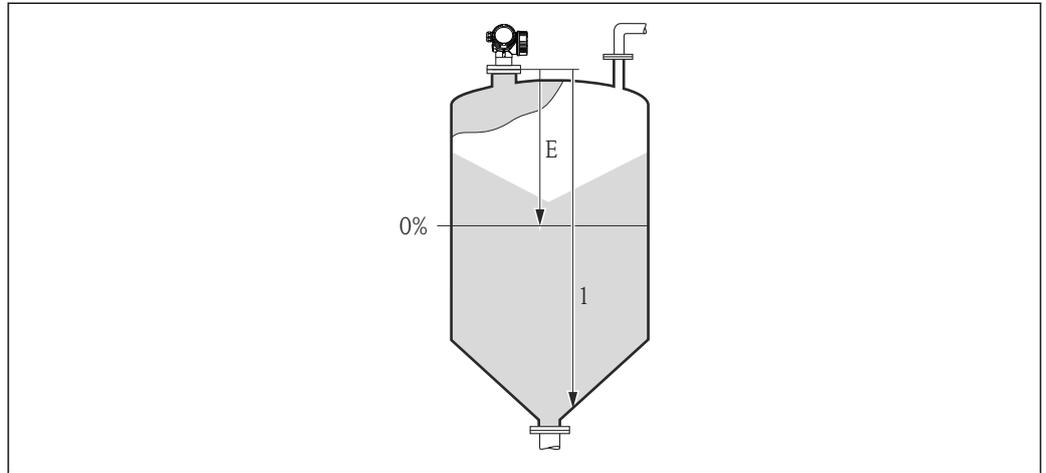

A0019868


 35 "Tank/silo height" parameter (→  140) for measurements in bulk solids

E Empty calibration (→  127)

1 Tank/silo height (→  140)

 For tanks with conical outlet, **Tank/silo height** should not be changed as in this type of applications **Empty calibration** (→  127) is usually **not** << the tank or silo height.

"Linearization" submenu

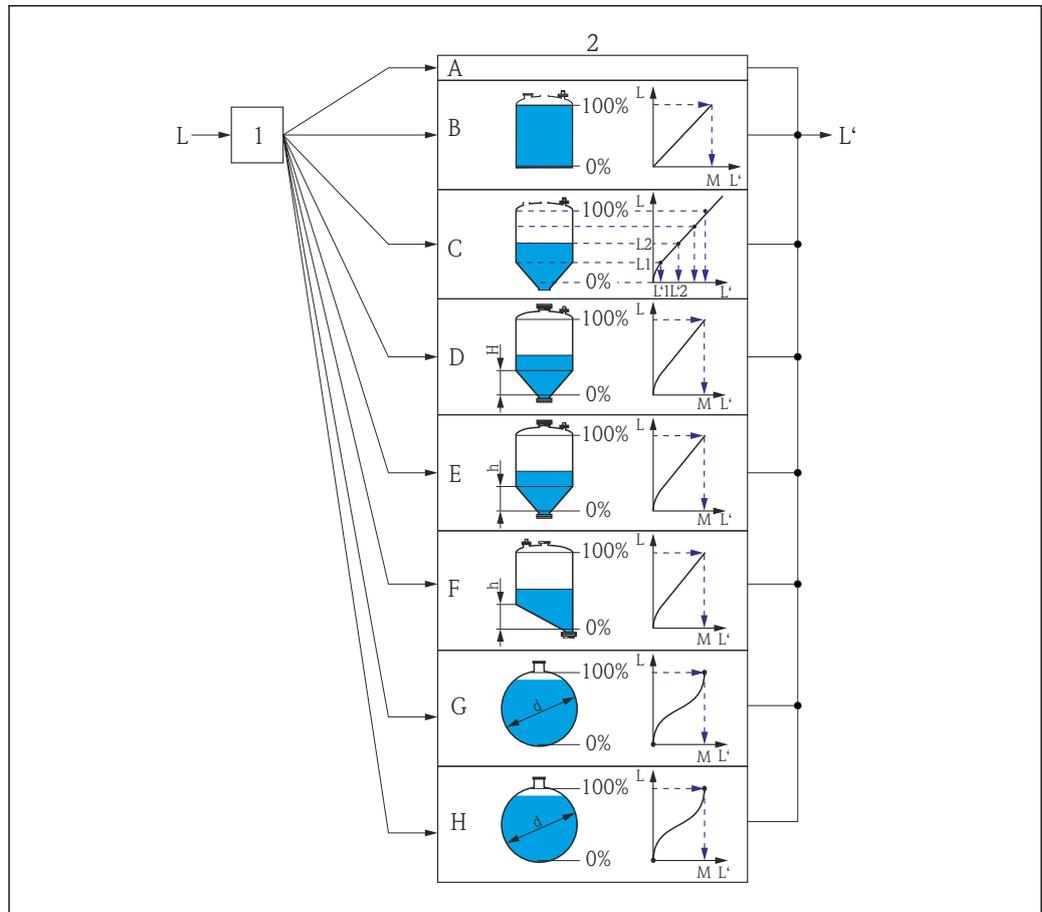

A0019648

36 Linearization: Transformation of the level and (if relevant) the interface height into a volume or weight; the transformation is dependent on the shape of the vessel.

- 1 Selection of linearization type and unit
- 2 Configuration of the linearization
- A Linearization type (→ 145) = None
- B Linearization type (→ 145) = Linear
- C Linearization type (→ 145) = Table
- D Linearization type (→ 145) = Pyramid bottom
- E Linearization type (→ 145) = Conical bottom
- F Linearization type (→ 145) = Angled bottom
- G Linearization type (→ 145) = Horizontal cylinder
- H Linearization type (→ 145) = Sphere
- L Level before linearization (measured in distance units)
- L' Level linearized (→ 147) (corresponds to volume or weight)
- M Maximum value (→ 148)
- d Diameter (→ 148)
- h Intermediate height (→ 148)

Structure of the submenu on the display module

Navigation  Setup → Advanced setup → Linearization

► Linearization	
Linearization type	→  145
Unit after linearization	→  146
Free text	→  147
Maximum value	→  148
Diameter	→  148
Intermediate height	→  148
Table mode	→  149
► Edit table	
Level	→  150
Customer value	→  151
Activate table	→  151

Structure of the submenu in an operating tool (e.g. FieldCare)

Navigation  Setup → Advanced setup → Linearization

► Linearization	
Linearization type	→  145
Unit after linearization	→  146
Free text	→  147
Level linearized	→  147
Maximum value	→  148
Diameter	→  148
Intermediate height	→  148
Table mode	→  149
Table number	→  150
Level	→  150
Level	→  151
Customer value	→  151
Activate table	→  151

Description of parameters

Navigation  Setup → Advanced setup → Linearization

Linearization type 


Navigation  Setup → Advanced setup → Linearization → Lineariz. type

Description Select linearization type.

- Selection**
- None
 - Linear
 - Table
 - Pyramid bottom
 - Conical bottom
 - Angled bottom
 - Horizontal cylinder
 - Sphere

Factory setting None

Additional information

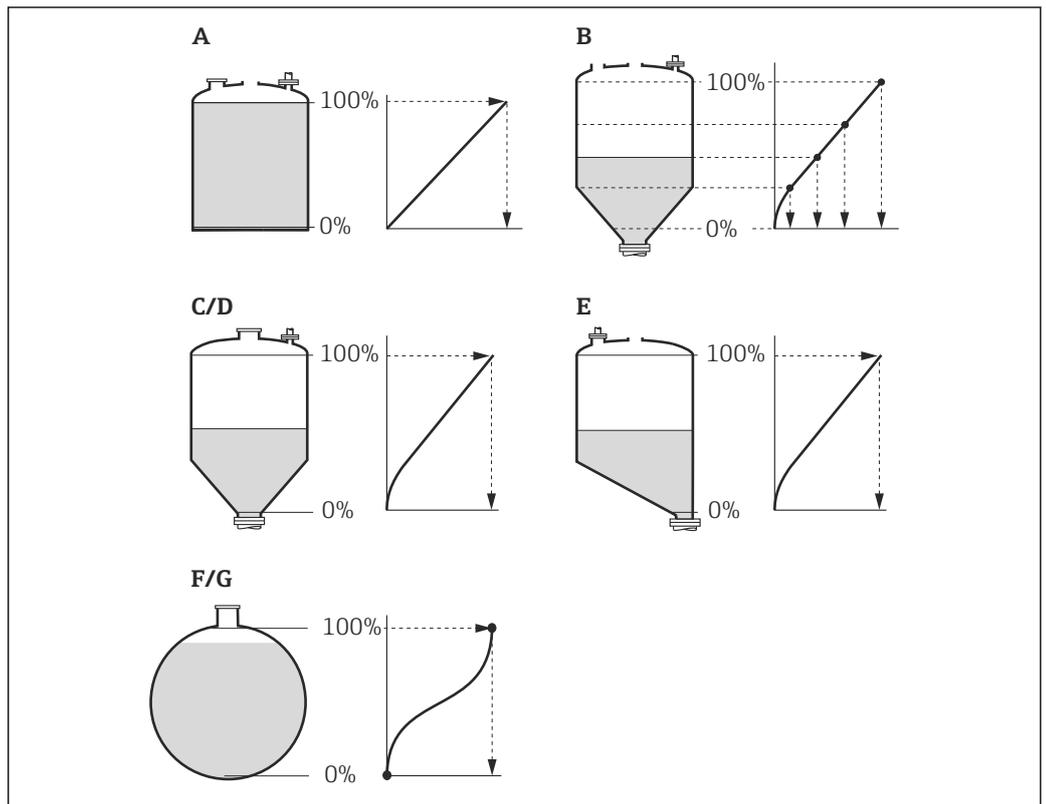

 37 *Linearization types*

- A *None*
- B *Table*
- C *Pyramid bottom*
- D *Conical bottom*
- E *Angled bottom*
- F *Sphere*
- G *Horizontal cylinder*

Meaning of the options**■ None**

The level is transmitted in the level unit without linearization.

■ Linear

The output value (volume/weight) is directly proportional to the level L. This is valid, for example, for vertical cylinders. The following additional parameters have to be specified:

- **Unit after linearization** (→  146)
- **Maximum value** (→  148): Maximum volume or weight

■ Table

The relationship between the measured level L and the output value (volume/weight) is given by a linearization table consisting of up to 32 pairs of values "level - volume" or "level - weight", respectively. The following additional parameters have to be specified:

- **Unit after linearization** (→  146)
- **Table mode** (→  149)
- For each table point: **Level** (→  150)
- For each table point: **Customer value** (→  151)
- **Activate table** (→  151)

■ Pyramid bottom

The output value corresponds to the volume or weight in a silo with pyramid bottom.

The following additional parameters have to be specified:

- **Unit after linearization** (→  146)
- **Maximum value** (→  148): Maximum volume or weight
- **Intermediate height** (→  148): The height of the pyramid

■ Conical bottom

The output value corresponds to the volume or weight in a tank with conical bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  146)
- **Maximum value** (→  148): Maximum volume or weight
- **Intermediate height** (→  148): The height of the conical part of the tank

■ Angled bottom

The output value corresponds to the volume or weight in a silo with an angled bottom.

The following additional parameters have to be specified:

- **Unit after linearization** (→  146)
- **Maximum value** (→  148): Maximum volume or weight
- **Intermediate height** (→  148): Height of the angled bottom

■ Horizontal cylinder

The output value corresponds to the volume or weight in a horizontal cylinder. The following additional parameters have to be specified:

- **Unit after linearization** (→  146)
- **Maximum value** (→  148): Maximum volume or weight
- **Diameter** (→  148)

■ Sphere

The output value corresponds to the volume or weight in a spherical tank. The following additional parameters have to be specified:

- **Unit after linearization** (→  146)
- **Maximum value** (→  148): Maximum volume or weight
- **Diameter** (→  148)

Unit after linearization**Navigation**

  Setup → Advanced setup → Linearization → Unit lineariz.

Prerequisite

Linearization type (→  145) ≠ None

Description

Select unit of the linearized value.

Selection	<i>SI units</i> <ul style="list-style-type: none"> ■ STon ■ t ■ kg ■ cm³ ■ dm³ ■ m³ ■ hl ■ l ■ % <i>Custom-specific units</i> Free text	<i>US units</i> <ul style="list-style-type: none"> ■ lb ■ UsGal ■ ft³ 	<i>Imperial units</i> impGal
------------------	---	---	---------------------------------

Factory setting %

Additional information The selected unit is only used to be indicated on the display. The measured value is **not** transformed according to the selected unit.

 It is also possible to configure a distance-to-distance linearization, i.e. a transformation from the level unit to a different distance unit. To do so, select the **Linear** linearization mode. In order to define the new level unit, select the **Free text** option in the **Unit after linearization** parameter and enter the required unit into the **Free text** parameter (→  147).

Free text 

Navigation   Setup → Advanced setup → Linearization → Free text

Prerequisite **Unit after linearization** (→  146) = **Free text**

Description Enter unit symbol.

User entry Up to 32 alphanumerical characters (letters, numbers, special characters)

Factory setting Free text

Level linearized

Navigation  Setup → Advanced setup → Linearization → Level linearized

Description Displays linearized level.

Additional information  The unit is defined by the **Unit after linearization** parameter →  146.

Maximum value
**Navigation**

Setup → Advanced setup → Linearization → Maximum value

Prerequisite
Linearization type (→ 145) has one of the following values:

- Linear
- Pyramid bottom
- Conical bottom
- Angled bottom
- Horizontal cylinder
- Sphere

Description

Specify the maximum content of the vessel (100%) measured in the units after linearization.

User entry

-50 000.0 to 50 000.0 %

Factory setting

100.0 %

Diameter
**Navigation**

Setup → Advanced setup → Linearization → Diameter

Prerequisite
Linearization type (→ 145) has one of the following values:

- Horizontal cylinder
- Sphere

Description

Specify tank diameter.

User entry

0 to 9 999.999 m

Factory setting

2 m

Additional information
 The unit is defined in the **Distance unit** parameter (→ 126).

Intermediate height
**Navigation**

Setup → Advanced setup → Linearization → Intermed. height

Prerequisite
Linearization type (→ 145) has one of the following values:

- Pyramid bottom
- Conical bottom
- Angled bottom

Description


Specify intermediate height H.

User entry

0 to 200 m

Factory setting

0 m

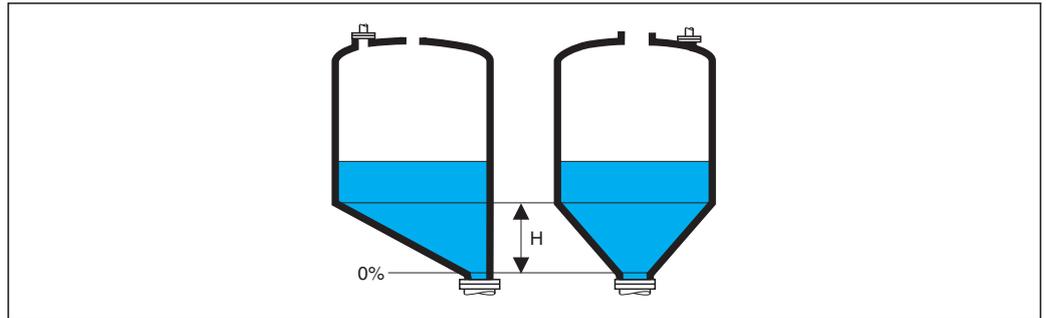Additional information

A0013264

H Intermediate height

The unit is defined in the **Distance unit** parameter (→ 126).

Table mode**Navigation**

Setup → Advanced setup → Linearization → Table mode

Prerequisite

Linearization type (→ 145) = Table

Description

Select editing mode of the linearization table.

Selection

- Manual
- Semiautomatic *
- Clear table
- Sort table

Factory setting

Manual

Additional information**Meaning of the options**

- **Manual**
The level and the associated linearized value are entered manually for each linearization point.
- **Semiautomatic**
The level is measured by the device for each linearization point. The associated linearized value is entered manually.
- **Clear table**
Deletes the existing linearization table.
- **Sort table**
Rearranges the linearization points into an ascending order.

* Visibility depends on order options or device settings

Conditions the linearization table must meet:

- The table may consist of up to 32 pairs of values "Level - Linearized Value".
- The table must be monotonic (monotonically increasing or decreasing).
- The first linearization point must refer to the minimum level.
- The last linearization point must refer to the maximum level.

 Before entering a linearization table, the values for **Empty calibration** (→  127) and **Full calibration** (→  128) must be set correctly.

If values of the table need to be changed after the full or empty calibration have been changed, a correct evaluation is only ensured if the existing table is deleted and the complete table is entered again. To do so delete the existing table (**Table mode** (→  149) = **Clear table**). Then enter a new table.

How to enter the table

- Via FieldCare
The table points can be entered via the **Table number** (→  150), **Level** (→  150) and **Customer value** (→  151) parameters. As an alternative, the graphic table editor may be used: Device Operation → Device Functions → Additional Functions → Linearization (Online/Offline)
- Via local display
Select the **Edit table** submenu to call up the graphic table editor. The table is displayed and can be edited line by line.

 The factory setting for the level unit is "%". If you want to enter the linearization table in physical units, you must select the appropriate unit in the **Level unit** parameter (→  139) beforehand.

Table number	
---------------------	---

Navigation	 Setup → Advanced setup → Linearization → Table number
Prerequisite	Linearization type (→  145) = Table
Description	Select table point you are going to enter or change.
User entry	1 to 32
Factory setting	1

Level (Manual)	
-----------------------	---

Navigation	 Setup → Advanced setup → Linearization → Level
Prerequisite	<ul style="list-style-type: none"> ■ Linearization type (→  145) = Table ■ Table mode (→  149) = Manual
Description	Enter level value of the table point (value before linearization).
User entry	Signed floating-point number

Factory setting 0 %

Level (Semiautomatic)

Navigation  Setup → Advanced setup → Linearization → Level

Prerequisite

- **Linearization type** (→  145) = **Table**
- **Table mode** (→  149) = **Semiautomatic**

Description Displays measured level (value before linearization). This value is transmitted to the table.

Customer value



Navigation  Setup → Advanced setup → Linearization → Customer value

Prerequisite **Linearization type** (→  145) = **Table**

Description Enter linearized value for the table point.

User entry Signed floating-point number

Factory setting 0 %

Activate table



Navigation   Setup → Advanced setup → Linearization → Activate table

Prerequisite **Linearization type** (→  145) = **Table**

Description Activate (enable) or deactivate (disable) the linearization table.

Selection

- **Disable**
- **Enable**

Factory setting Disable

Additional information **Meaning of the options**

- **Disable**
The measured level is not linearized.
If **Linearization type** (→  145) = **Table** at the same time, the device issues error message F435.
- **Enable**
The measured level is linearized according to the table.

 When editing the table, the **Activate table** parameter is automatically reset to **Disable** and must be reset to **Enable** after the table has been entered.

"Safety settings" submenu

Navigation  Setup → Advanced setup → Safety sett.

Output echo lost 

Navigation	 Setup → Advanced setup → Safety sett. → Output echo lost
Description	Define the behavior of the output signal in case of a lost echo.
Selection	<ul style="list-style-type: none"> ▪ Last valid value ▪ Ramp at echo lost ▪ Value echo lost ▪ Alarm
Factory setting	Last valid value
Additional information	<p>Meaning of the options</p> <ul style="list-style-type: none"> ▪ Last valid value The last valid value is kept in the case of a lost echo. ▪ Ramp at echo lost In the case of a lost echo the output value is continuously shifted towards 0% or 100%. The slope of the ramp is defined in the Ramp at echo lost parameter (→  153). ▪ Value echo lost In the case of a lost echo the output assumes the value defined in the Value echo lost parameter (→  152). ▪ Alarm In the case of a lost echo the device generates an alarm; see the Failure mode parameter

Value echo lost 

Navigation	 Setup → Advanced setup → Safety sett. → Value echo lost
Prerequisite	Output echo lost (→  152) = Value echo lost
Description	Define output value in case of a lost echo.
User entry	0 to 200 000.0 %
Factory setting	0.0 %
Additional information	<p>Use the unit which has been defined for the measured value output:</p> <ul style="list-style-type: none"> ▪ without linearization: Level unit (→  139) ▪ with linearization: Unit after linearization (→  146)

Ramp at echo lost


Navigation Setup → Advanced setup → Safety sett. → Ramp echo lost


Prerequisite **Output echo lost (→ 152) = Ramp at echo lost**

Description Define the slope of the ramp in the case of a lost echo.

User entry Signed floating-point number

Factory setting 0.0 %/min

Additional information

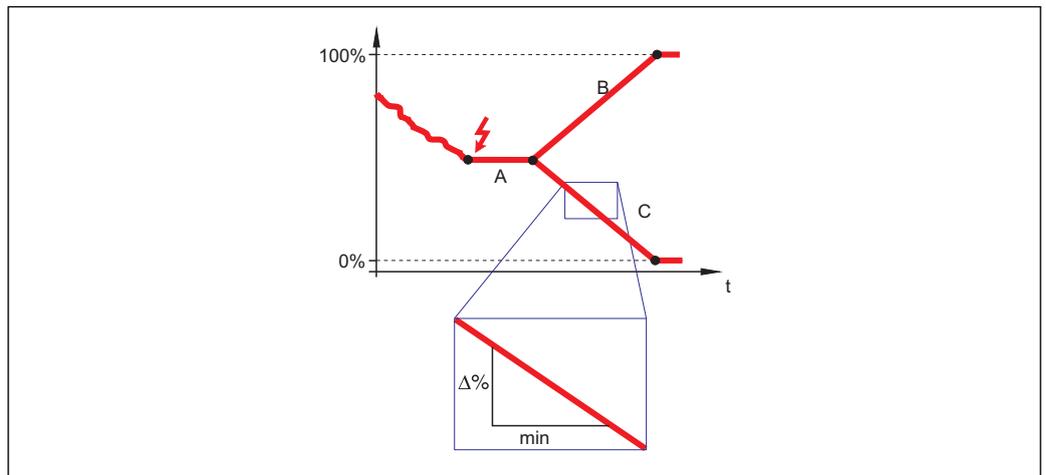

A0013269

- A *Delay time echo lost*
 B *Ramp at echo lost (→ 153) (positive value)*
 C *Ramp at echo lost (→ 153) (negative value)*

- The unit for the slope of the ramp is "percentage of the measuring range per minute" (%/min).
- For a negative slope of the ramp: The measured value is continuously decreased until it reaches 0%.
- For a positive slope of the ramp: The measured value is continuously increased until it reaches 100%.

Blocking distance



Navigation Setup → Advanced setup → Safety sett. → Blocking dist.

Description Specify blocking distance BD.

User entry 0 to 200 m

Factory setting FMR56, FMR57: antenna length + 400 mm (15.7 in)

Additional information No echos are evaluated within the blocking distance BD. Therefore, BD can be used to suppress interference echos in the vicinity of the antenna.

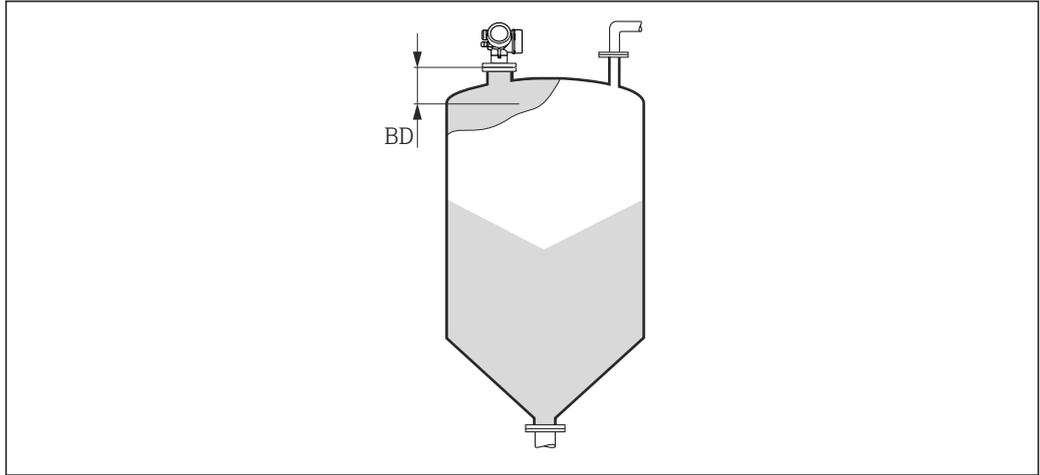

A0023041

38 Blocking distance (BD) for bulk solid measurements

"Switch output" submenu

Navigation  Setup → Advanced setup → Switch output

Switch output function 

Navigation	 Setup → Advanced setup → Switch output → Switch out funct
Description	Select function for switch output.
Selection	<ul style="list-style-type: none"> ■ Off ■ On ■ Diagnostic behavior ■ Limit ■ Digital Output
Factory setting	Off
Additional information	<p>Meaning of the options</p> <ul style="list-style-type: none"> ■ Off The output is always open (non-conductive). ■ On The output is always closed (conductive). ■ Diagnostic behavior The output is normally closed and is only opened if a diagnostic event is present. The Assign diagnostic behavior parameter (→  156) determines for which type of event the output is opened. ■ Limit The output is normally closed and is only opened if a measured variable exceeds or falls below a defined limit. The limit values are defined by the following parameters: <ul style="list-style-type: none"> – Assign limit (→  156) – Switch-on value (→  157) – Switch-off value (→  158) ■ Digital Output The switching state of the output tracks the output value of a DI function block. The function block is selected in the Assign status parameter (→  155). <p> The Off and On options can be used to simulate the switch output.</p>

Assign status 

Navigation	 Setup → Advanced setup → Switch output → Assign status
Prerequisite	Switch output function (→  155) = Digital Output
Description	Select device status for switch output.
Selection	<ul style="list-style-type: none"> ■ Off ■ Digital output AD 1 ■ Digital output AD 2 ■ Digital output 1

- Digital output 2
- Digital output 3
- Digital output 4
- Digital output 5
- Digital output 6
- Digital output 7
- Digital output 8

Factory setting Off

Additional information The **Digital output AD 1** and **Digital output AD 2** options refer to the Advanced Diagnostic Blocks. A switch signal generated in these blocks can be transmitted via the switch output.

Assign limit 

Navigation   Setup → Advanced setup → Switch output → Assign limit

Prerequisite **Switch output function (→  155) = Limit**

Description Select process variable for limit monitoring.

- Selection**
- Off
 - Level linearized
 - Distance
 - Terminal voltage
 - Electronic temperature
 - Relative echo amplitude
 - Area of incoupling

Factory setting Off

Assign diagnostic behavior 

Navigation   Setup → Advanced setup → Switch output → Assign diag. beh

Prerequisite **Switch output function (→  155) = Diagnostic behavior**

Description Select diagnostic behavior for switch output.

- Selection**
- Alarm
 - Alarm or warning
 - Warning

Factory setting Alarm

Switch-on value



Navigation

Setup → Advanced setup → Switch output → Switch-on value

Prerequisite

Switch output function (→ 155) = Limit

Description

Enter measured value for the switch-on point.

User entry

Signed floating-point number

Factory setting


0

Additional information

The switching behavior depends on the relative position of the **Switch-on value** and **Switch-off value** parameters:

Switch-on value > Switch-off value

- The output is closed if the measured value is larger than **Switch-on value**.
- The output is opened if the measured value is smaller than **Switch-off value**.

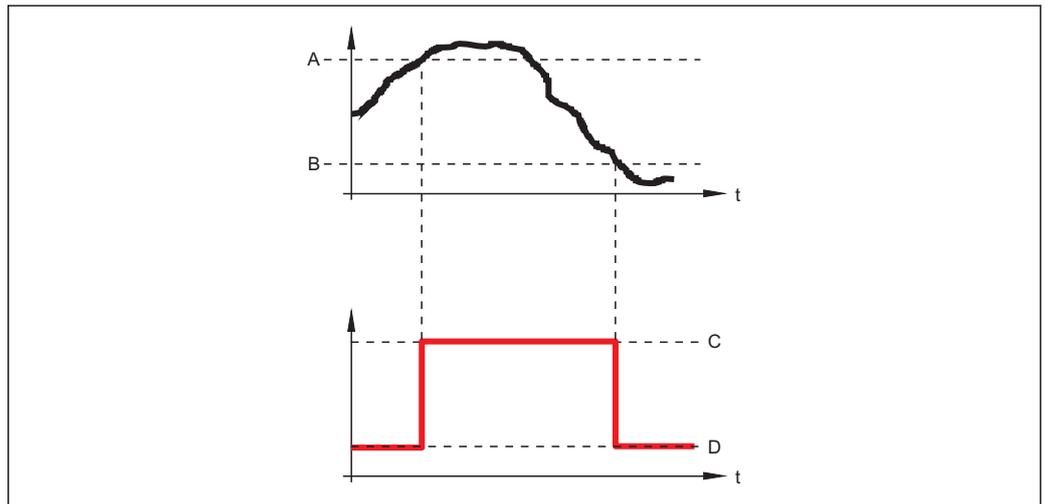


A0015585

- A Switch-on value
- B Switch-off value
- C Output closed (conductive)
- D Output opened (non-conductive)

Switch-on value < Switch-off value

- The output is closed if the measured value is smaller than **Switch-on value**.
- The output is opened if the measured value is larger than **Switch-off value**.

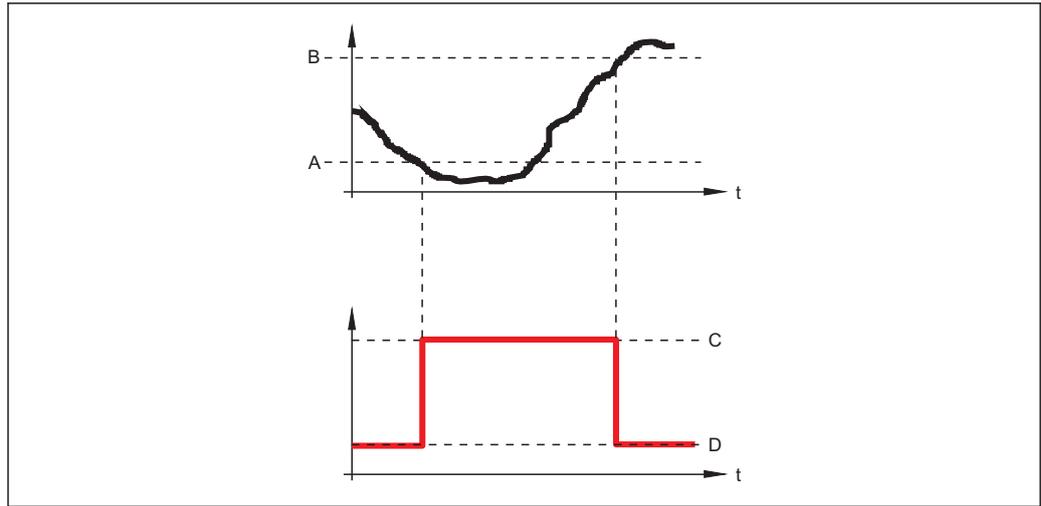

A0015586

- A Switch-on value
- B Switch-off value
- C Output closed (conductive)
- D Output opened (non-conductive)

Switch-on delay



Navigation	☰☰ Setup → Advanced setup → Switch output → Switch-on delay
Prerequisite	<ul style="list-style-type: none"> ▪ Switch output function (→ ☰ 155) = Limit ▪ Assign limit (→ ☰ 156) ≠ Off
Description	Define switch-on delay.
User entry	0.0 to 100.0 s
Factory setting	0.0 s

Switch-off value



Navigation	☰☰ Setup → Advanced setup → Switch output → Switch-off value
Prerequisite	Switch output function (→ ☰ 155) = Limit
Description	Enter measured value for the switch-off point.
User entry	Signed floating-point number
Factory setting	0
Additional information	The switching behavior depends on the relative position of the Switch-on value and Switch-off value parameters; description: see the Switch-on value parameter (→ ☰ 157).

Switch-off delay



Navigation	Setup → Advanced setup → Switch output → Switch-off delay
Prerequisite	<ul style="list-style-type: none"> ▪ Switch output function (→ 155) = Limit ▪ Assign limit (→ 156) ≠ Off
Description	Define switch-off delay.
User entry	0.0 to 100.0 s
Factory setting	0.0 s

Failure mode



Navigation	Setup → Advanced setup → Switch output → Failure mode
Description	Define output behavior in alarm condition.
Selection	<ul style="list-style-type: none"> ▪ Actual status ▪ Open ▪ Closed
Factory setting	Open

Switch status

Navigation	Setup → Advanced setup → Switch output → Switch status
Description	Displays the current state of the switch output.

Invert output signal



Navigation	Setup → Advanced setup → Switch output → Invert outp.sig.
Description	Specify whether the output signal is to be inverted.
Selection	<ul style="list-style-type: none"> ▪ No ▪ Yes
Factory setting	No

Additional information**Meaning of the options**■ **No**

The behavior of the switch output is as described above.

■ **Yes**

The states **Open** and **Closed** are inverted as compared to the description above.

"Display" submenu

The **Display** submenu is only visible if a display module is connected to the device.

Navigation



Setup → Advanced setup → Display

Language**Navigation**

Setup → Advanced setup → Display → Language

Description

Set display language.

Selection

- English
- Deutsch *
- Français *
- Español *
- Italiano *
- Nederlands *
- Portuguesa *
- Polski *
- русский язык (Russian) *
- Svenska *
- Türkçe *
- 中文 (Chinese) *
- 日本語 (Japanese) *
- 한국어 (Korean) *
- العربية (Arabic) *
- Bahasa Indonesia *
- ภาษาไทย (Thai) *
- tiếng Việt (Vietnamese) *
- čeština (Czech) *

Factory setting

The additional language selected in feature 500 of the product structure.
If no additional language has been selected: **English**

Additional information

The **English** option can be selected in every device. One additional operating language can be selected in the product structure when ordering a device (feature 500 "Additional Operation Language") and will be selectable in the **Language** parameter.

Format display**Navigation**

Setup → Advanced setup → Display → Format display

Description

Select how measured values are shown on the display.

* Visibility depends on order options or device settings


Selection

- 1 value, max. size
- 1 bargraph + 1 value
- 2 values
- 1 value large + 2 values
- 4 values

Factory setting


1 value, max. size

Additional information

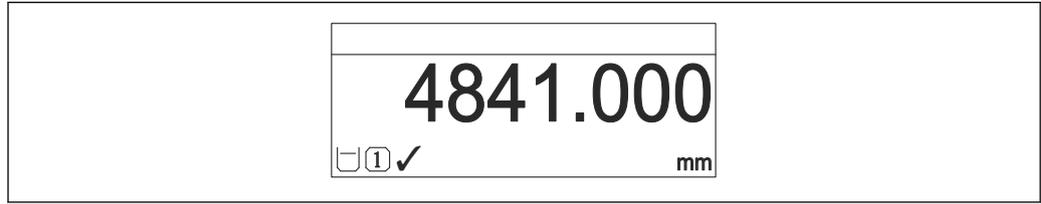


A0019963

39 "Format display" = "1 value, max. size"

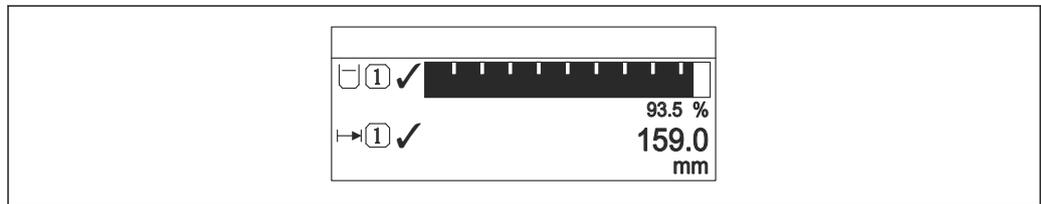


A0019964

40 "Format display" = "1 bargraph + 1 value"

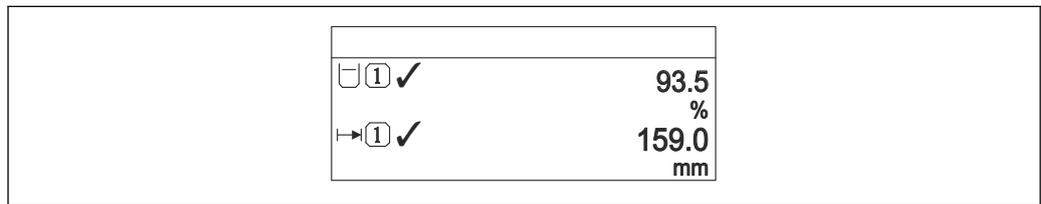


A0019965

41 "Format display" = "2 values"

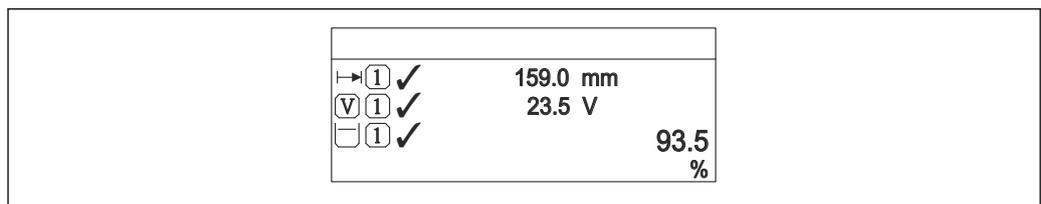

A0019966

42 "Format display" = "1 value large + 2 values"

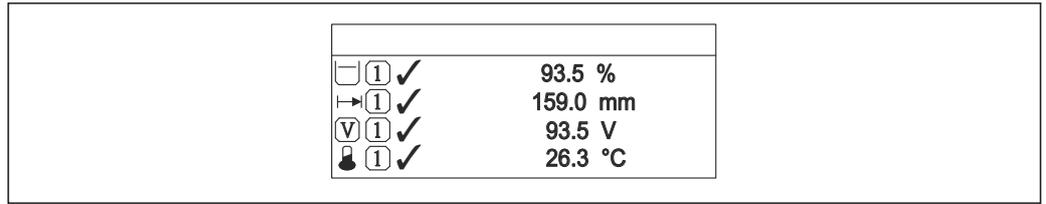

A0019968

43 "Format display" = "4 values"

- i
 ■ The **Value 1 to 4 display** → 163 parameters specify which measured values are shown on the display and in which order.
 - If more measured values are specified than the current display mode permits, the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter (→ 164).

Value 1 to 4 display 🔒

Navigation 📄📄 Setup → Advanced setup → Display → Value 1 display

Description Select the measured value that is shown on the local display.

- Selection**
- None ²⁷⁾
 - Level linearized
 - Distance
 - Current output 1 ²⁸⁾
 - Measured current
 - Current output 2
 - Terminal voltage
 - Electronic temperature
 - Absolute echo amplitude
 - Relative echo amplitude
 - Analog output adv. diagnostics 1
 - Analog output adv. diagnostics 2
 - Area of incoupling

- Factory setting**
- Value 1 display: Level linearized
 - Value 2 display: None
 - Value 3 display: None
 - Value 4 display: None

Decimal places 1 to 4 🔒

Navigation 📄📄 Setup → Advanced setup → Display → Decimal places 1

Description Select the number of decimal places for the display value.

27) can not be selected for the 'Value 1 display' parameter.

28) "Visibility depends on order options or device settings"

Selection	<ul style="list-style-type: none"> ■ X ■ X.X ■ X.XX ■ X.XXX ■ X.XXXX
Factory setting	x.xx
Additional information	The setting does not affect the measuring or computational accuracy of the device.

Display interval

Navigation	 Setup → Advanced setup → Display → Display interval
Description	Set time measured values are shown on display if display alternates between values.
User entry	1 to 10 s
Factory setting	5 s
Additional information	This parameter is only relevant if the number of selected measuring values exceeds the number of values the selected display format can display simultaneously.


Display damping

Navigation	 Setup → Advanced setup → Display → Display damping
Description	Define display reaction time to fluctuations in the measured value.
User entry	0.0 to 999.9 s
Factory setting	0.0 s

Header

Navigation	 Setup → Advanced setup → Display → Header
Description	Select header contents on local display.
Selection	<ul style="list-style-type: none"> ■ Device tag ■ Free text
Factory setting	Device tag

Additional information

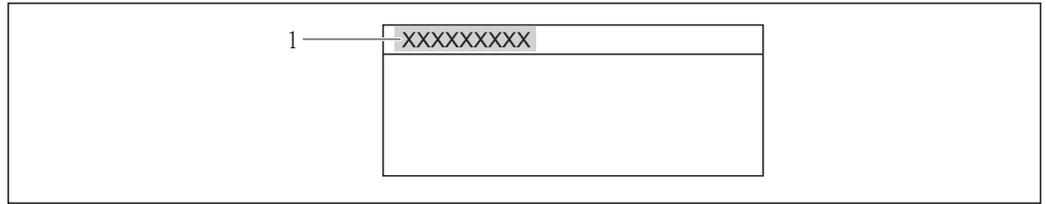

A0013375

1 Position of the header text on the display

Meaning of the options

- **Device tag**
Is defined in the **Device tag** parameter.
- **Free text**
Is defined in the **Header text** parameter (→ 165).

Header text 🔒

Navigation 🏠📄 Setup → Advanced setup → Display → Header text

Prerequisite **Header (→ 164) = Free text**

Description Enter display header text.

Factory setting -----

Additional information The number of characters which can be displayed depends on the characters used.

Separator 🔒

Navigation 🏠📄 Setup → Advanced setup → Display → Separator

Description Select decimal separator for displaying numerical values.

Selection ▪ .
 ▪ ,

Factory setting .

Number format 🔒

Navigation 🏠📄 Setup → Advanced setup → Display → Number format

Description Choose number format for the display.

Selection ▪ Decimal
 ▪ ft-in-1/16"

Factory setting	Decimal
Additional information	The ft-in-1/16" option is only valid for distance units.

Decimal places menu

Navigation	  Setup → Advanced setup → Display → Dec. places menu
Description	Select number of decimal places for the representation of numbers within the operating menu.
Selection	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx
Factory setting	x.xxxx
Additional information	<ul style="list-style-type: none"> ■ Is only valid for numbers in the operating menu (e.g. Empty calibration, Full calibration), but not for the measured value display. The number of decimal places for the measured value display is defined in the Decimal places 1 to 4 →  163 parameters. ■ The setting does not affect the accuracy of the measurement or the calculations.

Backlight

Navigation	  Setup → Advanced setup → Display → Backlight
Prerequisite	The device has the SD03 local display (with optical keys).
Description	Switch the local display backlight on and off.
Selection	<ul style="list-style-type: none"> ■ Disable ■ Enable
Factory setting	Disable
Additional information	<p>Meaning of the options</p> <ul style="list-style-type: none"> ■ Disable Switches the backlight off. ■ Enable Switches the backlight on. <p> Regardless of the setting in this parameter the backlight may be automatically switched off by the device if the supply voltage is too low.</p>

Contrast display

Navigation	 Setup → Advanced setup → Display → Contrast display
Description	Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle).
User entry	20 to 80 %
Factory setting	Dependent on the display.
Additional information	 Setting the contrast via push-buttons: <ul style="list-style-type: none">▪ Darker: press the  and  buttons simultaneously.▪ Brighter: press the  and  buttons simultaneously.

"Configuration backup display" submenu

 This submenu is only visible if a display module is connected to the device.

The configuration of the device can be saved to the display module at a certain point of time (backup). The saved configuration can be restored to the device if required, e.g. in order to bring the device back into a defined state. The configuration can also be transferred to a different device of the same type using the display module.

Navigation  Setup → Advanced setup → Conf.backup disp

Operating time

Navigation	 Setup → Advanced setup → Conf.backup disp → Operating time
Description	Indicates how long the device has been in operation.
User interface	Days (d), hours (h), minutes (m), seconds (s)
Additional information	<i>Maximum time</i> 9999 d (≈ 27 years)

Last backup

Navigation	 Setup → Advanced setup → Conf.backup disp → Last backup
Description	Indicates when the last data backup was saved to the display module.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Configuration management

Navigation	 Setup → Advanced setup → Conf.backup disp → Config. managem.
Description	Select action for managing the device data in the display module.
Selection	<ul style="list-style-type: none"> ■ Cancel ■ Execute backup ■ Restore ■ Duplicate ■ Compare ■ Clear backup data ■ Display incompatible
Factory setting	Cancel

Additional information**Meaning of the options**■ **Cancel**

No action is executed and the user exits the parameter.

■ **Execute backup**

A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device.

■ **Restore**

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device.

■ **Duplicate**

The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:

Medium type

■ **Compare**

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter (→  169).

■ **Clear backup data**

The backup copy of the device configuration is deleted from the display module of the device.



While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.



If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset will not restore the original status.

In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

Backup state

Navigation

 Setup → Advanced setup → Conf.backup disp → Backup state

Description

Displays which backup action is currently in progress.

Comparison result

Navigation

  Setup → Advanced setup → Conf.backup disp → Compar. result

Description

Displays the comparison result between the device and the display.

Additional information**Meaning of the display options****■ Settings identical**

The current device configuration of the HistoROM is identical to the backup copy in the display module.

■ Settings not identical

The current device configuration of the HistoROM is not identical to the backup copy in the display module.

■ No backup available

There is no backup copy of the device configuration of the HistoROM in the display module.

■ Backup settings corrupt

The current configuration of the HistoROM is corrupt or not compatible with the backup copy in the display module.

■ Check not done

The device configuration of the HistoROM has not yet been compared to the backup copy in the display module.

■ Dataset incompatible

The data sets are incompatible and can not be compared.



To start the comparison, set **Configuration management** (→  168) = **Compare**.



If the transmitter configuration has been duplicated from a different device by **Configuration management** (→  168) = **Duplicate**, the new device configuration in the HistoROM is only partially identical to the configuration stored in the display module: Sensor specific properties (e.g. the mapping curve) are not duplicated. Thus, the result of the comparison will be **Settings not identical**.

"Administration" submenu

Navigation  Setup → Advanced setup → Administration

Define access code 

Navigation	 Setup → Advanced setup → Administration → Def. access code
Description	Define release code for write access to parameters.
User entry	0 to 9999
Factory setting	0
Additional information	<p> If the factory setting is not changed or 0 is defined as the access code, the parameters are not write-protected and the configuration data of the device can then always be modified. The user is logged on in the <i>Maintenance</i> role.</p> <p> The write protection affects all parameters marked with the  symbol in this document. On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.</p> <p> Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the Enter access code parameter (→  137).</p> <p> Please contact your Endress+Hauser Sales Center if you lose your access code.</p> <p> For display operation: The new access code is only valid after it has been confirmed in the Confirm access code parameter (→  173).</p>

Device reset 

Navigation	  Setup → Advanced setup → Administration → Device reset
Description	Select to which state the device is to be reset.
Selection	<ul style="list-style-type: none"> ■ Cancel ■ To fieldbus defaults ■ To factory defaults ■ To delivery settings ■ Of customer settings ■ To transducer defaults ■ Restart device
Factory setting	Cancel

Additional information**Meaning of the options****■ Cancel**

No action

■ To factory defaults

All parameters are reset to the order-code specific factory setting.

■ To delivery settings

All parameters are reset to the delivery setting. The delivery setting may differ from the factory default if customer specific settings have been ordered.

This option is only visible if customer specific settings have been ordered.

■ Of customer settings

All customer parameters are reset to their factory setting. Service parameters, however, remain unchanged.

■ To transducer defaults

Every measurement-related parameter is reset to its factory setting. Service parameters and communication-related parameters, however, remain unchanged.

■ Restart device

The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

"Define access code" wizard

 The **Define access code** wizard is only available when operating via the local display. When operating via an operating tool, the **Define access code** parameter is located directly in the **Administration** submenu. The **Confirm access code** parameter is not available for operation via operating tool.

Navigation  Setup → Advanced setup → Administration → Def. access code

Define access code

Navigation  Setup → Advanced setup → Administration → Def. access code → Def. access code

Description →  171

Confirm access code

Navigation  Setup → Advanced setup → Administration → Def. access code → Confirm code

Description Confirm the entered access code.

User entry 0 to 9999

Factory setting 0

16.4 "Diagnostics" menu

Navigation  Diagnostics

Actual diagnostics

Navigation  Diagnostics → Actual diagnos.

Description Displays current diagnostic message.

Additional information The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 If several messages are active at the same time, the messages with the highest priority is displayed.

 Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

Timestamp

Navigation  Diagnostics → Timestamp

Description Displays timestamp for the **Actual diagnostics** parameter (→  174).

User interface Days (d), hours (h), minutes (m), seconds (s)

Previous diagnostics

Navigation  Diagnostics → Prev.diagnostics

Description Displays the last diagnostic message which has been active before the current message.

Additional information The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 The condition displayed may still apply. Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

Timestamp

Navigation	 Diagnostics → Timestamp
Description	Displays timestamp for the Previous diagnostics parameter (→  174).
User interface	Days (d), hours (h), minutes (m), seconds (s)

Operating time from restart

Navigation	  Diagnostics → Time fr. restart
Description	Displays the time the device has been in operation since the last device restart.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Operating time

Navigation	  Diagnostics → Operating time
Description	Indicates how long the device has been in operation.
User interface	Days (d), hours (h), minutes (m), seconds (s)
Additional information	<i>Maximum time</i> 9999 d (≈ 27 years)

16.4.1 "Diagnostic list" submenu

Navigation  Diagnostics → Diagnostic list

Diagnostics 1 to 5

Navigation	 Diagnostics → Diagnostic list → Diagnostics 1 to 5
Description	Display the current diagnostics messages with the highest to fifth-highest priority.
Additional information	The display consists of: <ul style="list-style-type: none">■ Symbol for event behavior■ Code for diagnostic behavior■ Operating time of occurrence■ Event text

Timestamp 1 to 5

Navigation	 Diagnostics → Diagnostic list → Timestamp
Description	Displays timestamp for the Diagnostics 1 to 5 parameter (→  176).
User interface	Days (d), hours (h), minutes (m), seconds (s)

16.4.2 "Event logbook" submenu

 The **Event logbook** submenu is only available when operating via the local display. When operating via FieldCare, the event list can be displayed in the FieldCare function "Event List / HistoROM".

Navigation  Diagnostics → Event logbook

Filter options

Navigation	 Diagnostics → Event logbook → Filter options
Description	Select category (status signal) whose event messages are displayed in the events list.
Selection	<ul style="list-style-type: none"> ▪ All ▪ Failure (F) ▪ Function check (C) ▪ Out of specification (S) ▪ Maintenance required (M) ▪ Information (I)
Factory setting	All
Additional information	 <ul style="list-style-type: none"> ▪ This parameter is only used for operation via the local display. ▪ The status signals are categorized according to NAMUR NE 107.

"Event list" submenu

The **Event list** submenu displays the history of past events of the category selected in the **Filter options** parameter (→  177). A maximum of 100 events are displayed in chronological order.

The following symbols indicate whether an event has occurred or has ended:

- : Event has occurred
- : Event has ended

 Information on what is causing the message, and remedy instructions, can be viewed via the -button.

Display format

- For event messages in category I: information event, event text, "recording event" symbol and time the event occurred
- For event messages in category F, M, C, S (status signal): diagnostics event, event text, "recording event" symbol and time the event occurred

Navigation  Diagnostics → Event logbook → Event list

16.4.3 "Device information" submenu

Navigation  Diagnostics → Device info

Device tag

Navigation  Diagnostics → Device info → Device tag

Description Enter tag for measuring point.

Factory setting FMP5x

Serial number

Navigation  Diagnostics → Device info → Serial number

Description Displays serial number of the device.

Additional information



Uses of the serial number

- To identify the device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the device using the Device Viewer:
www.endress.com/deviceviewer



The serial number is also indicated on the nameplate.

Firmware version

Navigation  Diagnostics → Device info → Firmware version

Description Indicates the installed Firmware version.

User interface xx.yy.zz

Additional information



For firmware versions differing only in the last two digits ("zz") there is no difference concerning functionality or operation.

Device name

Navigation  Diagnostics → Device info → Device name

Description Displays device name.

Order code

Navigation Diagnostics → Device info → Order code**Description**

Displays order code of the device.

Additional information

The order code is generated from the extended order code, which defines all device features of the product structure. In contrast, the device features can not be read directly from the order code.

Extended order code 1 to 3

Navigation Diagnostics → Device info → Ext. order cd. 1 to 3**Description**

Displays the three parts of the extended order code.

Additional information

The extended order code indicates the version of all the features of the product structure and thus uniquely identifies the device.

16.4.4 "Measured values" submenu


Navigation  Diagnostics → Measured val.

Distance

Navigation  Diagnostics → Measured val. → Distance

Description Displays the measured distance D between the reference point (lower edge of the flange or threaded connection) and the level.

Additional information

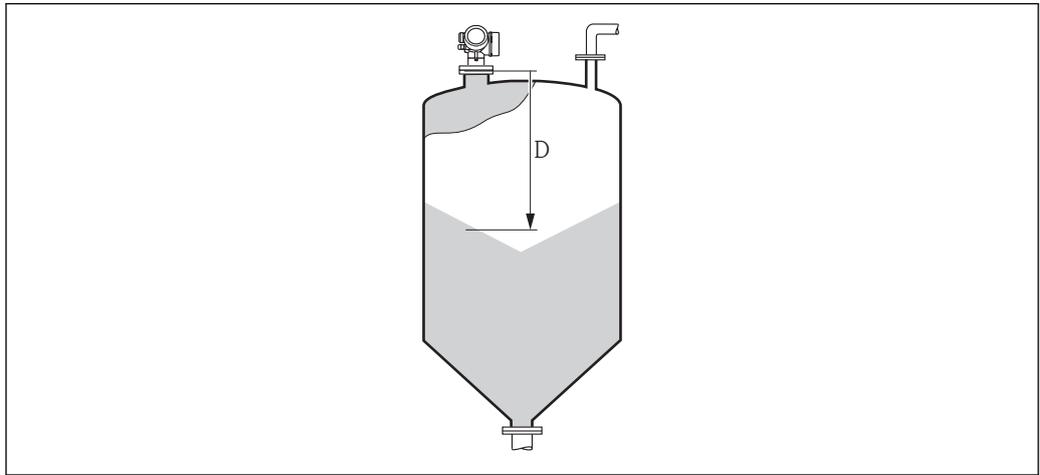

A0019485

 44 Distance for bulk solid measurements

 The unit is defined in the **Distance unit** parameter (→  126).

Level linearized

Navigation  Diagnostics → Measured val. → Level linearized

Description Displays linearized level.

Additional information  The unit is defined by the **Unit after linearization** parameter →  146.

Terminal voltage 1

Navigation  Diagnostics → Measured val. → Terminal volt. 1

Description Displays terminal voltage at the current output.

Electronic temperature

Navigation	 Diagnostics → Measured val. → Electronic temp.
Description	Displays the current temperature of the electronics.
Additional information	The unit is defined in the Temperature unit parameter.

16.4.5 "Analog input 1 to 5" submenu

There is an **Analog inputs** submenu for every AI block of the device. The AI block is used to configure the measured value transmission to the bus.

 Only the most basic properties of the AI block can be configured in this submenu. For a detailed configuration of the AI blocks refer to the **Expert** menu.

Navigation  Diagnostics → Analog inputs → Analog input 1 to 5

Block tag

Navigation	 Diagnostics → Analog inputs → Analog input 1 to 5 → Block tag
Description	Defined to be unique throughout the control system at one plant site. The tag may be changed using the FB_Tag service.
Factory setting	

Channel

Navigation	 Diagnostics → Analog inputs → Analog input 1 to 5 → Channel
Description	Select the process variable.
Selection	<ul style="list-style-type: none"> ■ Uninitialized ■ Level linearized ■ Absolute echo amplitude ■ Distance ■ Electronic temperature ■ Relative echo amplitude ■ Analog output adv. diagnostics 1 ■ Analog output adv. diagnostics 2 ■ Terminal voltage
Factory setting	Uninitialized

Status

Navigation Diagnostics → Analog inputs → Analog input 1 to 5 → Status**Description**

Indicates the status of the output of the AI block according to the FOUNDATION Fieldbus specification.

Value

Navigation Diagnostics → Analog inputs → Analog input 1 to 5 → Value**Description**

Indicates the output value of the AI block.

Units index

Navigation Diagnostics → Analog inputs → Analog input 1 to 5 → Units index**Description**

Indicates the unit of the output value.

16.4.6 "Data logging" submenu

Navigation  Diagnostics → Data logging

Assign channel 1 to 4

Navigation  Diagnostics → Data logging → Assign chan. 1 to 4

Description Allocate a process variable to the respective data logging channel.

- Selection**
- Off
 - Level linearized
 - Distance
 - Terminal voltage
 - Electronic temperature
 - Absolute echo amplitude
 - Relative echo amplitude
 - Analog output adv. diagnostics 1
 - Analog output adv. diagnostics 2

Factory setting Off

Additional information A total of 500 measured values can be logged. This means:

- 500 data points if 1 logging channel is used
- 250 data points if 2 logging channels are used
- 166 data points if 3 logging channels are used
- 125 data points if 4 logging channels are used

If the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 500, 250, 166 or 125 measured values are always in the log (ring memory principle).

 The logged data are deleted if a new option is selected in this parameter.

Logging interval

Navigation  Diagnostics → Data logging → Logging interval

Description Define logging interval t_{log} .

User entry 1.0 to 3 600.0 s

Factory setting 30.0 s

Additional information This parameter defines the interval between the individual data points in the data log, and thus the maximum loggable process time T_{log} :

- If 1 logging channel is used: $T_{log} = 500 \cdot t_{log}$
- If 2 logging channels are used: $T_{log} = 250 \cdot t_{log}$
- If 3 logging channels are used: $T_{log} = 166 \cdot t_{log}$
- If 4 logging channels are used: $T_{log} = 125 \cdot t_{log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of T_{\log} always remains in the memory (ring memory principle).

 The logged data are deleted if this parameter is changed.

Example

When using 1 logging channel

- $T_{\log} = 500 \cdot 1 \text{ s} = 500 \text{ s} \approx 8.5 \text{ min}$
- $T_{\log} = 500 \cdot 10 \text{ s} = 5\,000 \text{ s} \approx 1.5 \text{ h}$
- $T_{\log} = 500 \cdot 80 \text{ s} = 40\,000 \text{ s} \approx 11 \text{ h}$
- $T_{\log} = 500 \cdot 3\,600 \text{ s} = 1\,800\,000 \text{ s} \approx 20 \text{ d}$

Clear logging data

Navigation  Diagnostics → Data logging → Clear logging

Description Initiate a deletion of the complete logging memory.

Selection


- Cancel
- Clear data

Factory setting Cancel

"Display channel 1 to 4" submenu

i The **Display channel 1 to 4** submenus are only available for operation via the local display. When operating via FieldCare, the logging diagram can be displayed in the FieldCare function "Event List / HistoROM" .

The **Display channel 1 to 4** submenus invoke a diagram of the logging history of the respective channel.

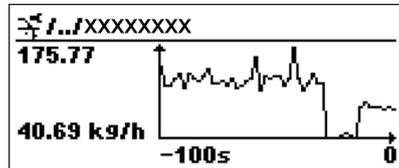

- x-axis: depending on the number of selected channels, 250 to 1000 measured values of a process variable are displayed.
- y-axis: covers the approximate measured value span and constantly adapts this to the measurement.

i To return to the operating menu, press \oplus and \ominus simultaneously.

Navigation  Diagnostics → Data logging → Displ.channel 1 to 4

16.4.7 "Simulation" submenu

The **Simulation** submenu is used to simulate specific measuring values or other conditions. This helps to check the correct configuration of the device and connected control units.


Conditions which can be simulated

Condition to be simulated	Associated parameters
Specific value of a process variable	<ul style="list-style-type: none"> ▪ Assign measurement variable (→ 189) ▪ Value process variable (→ 189)
Specific state of the switch output	<ul style="list-style-type: none"> ▪ Switch output simulation (→ 189) ▪ Switch status (→ 190)
Existence of an alarm	Simulation device alarm (→ 190)

Enable/disable simulation

The simulation of measured values can be enabled or disabled via a hardware switch (SIM switch) at the electronics. Simulating a measured value is only possible if the SIM switch is in the ON position.


The switch output can always be simulated, irrespective of the position of the SIM switch.

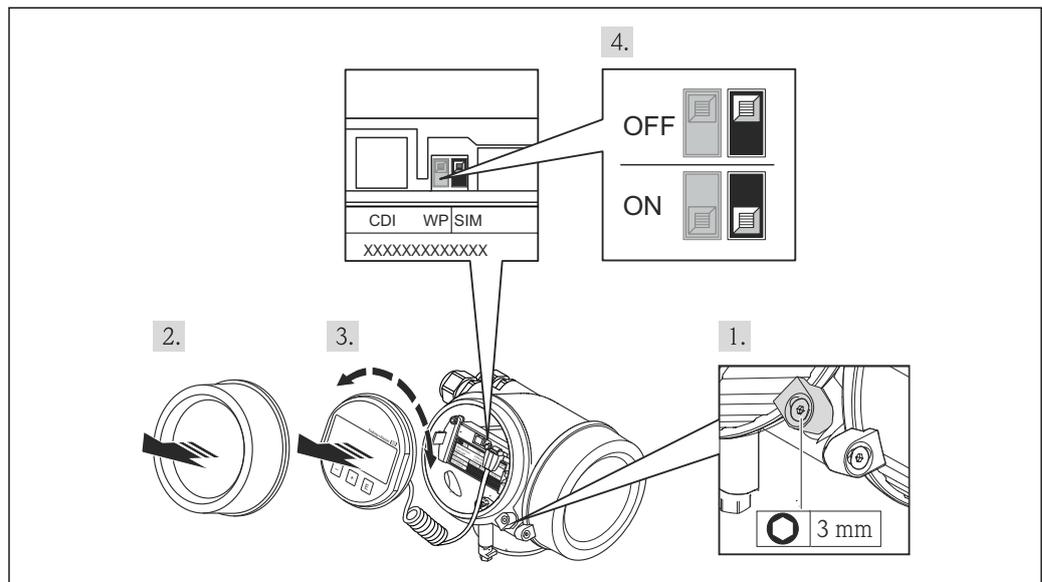

A00258B2

1. Loosen the securing clamp.
2. Unscrew the housing cover.

3. Pull out the display module with a gentle rotation movement. To make it easier to access the SIM switch, attach the display module to the edge of the electronics compartment.
 - ↳ Display module is attached to the edge of the electronics compartment.

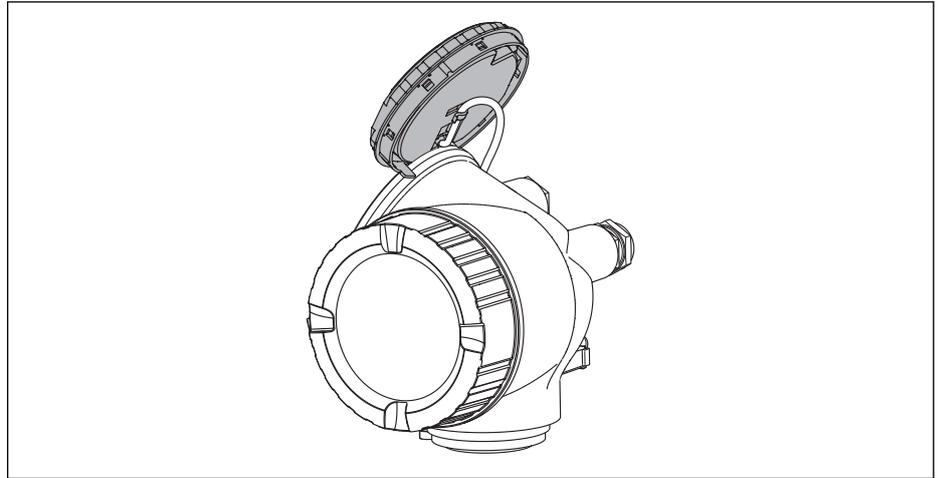

A0013909

4. SIM switch in the **ON** position: measured values can be simulated. SIM switch in the **OFF** position (factory setting): Simulation of measured values is disabled.
5. Feed the spiral cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Screw the electronics compartment cover closed and tighten the securing clamp.

Structure of the submenu

Navigation  Expert → Diagnostics → Simulation

▶ Simulation	
Assign measurement variable	→  189
Value process variable	→  189
Switch output simulation	→  189
Switch status	→  190
Simulation device alarm	→  190

Description of parameters

Navigation  Expert → Diagnostics → Simulation

Assign measurement variable 

Navigation	 Expert → Diagnostics → Simulation → Assign meas.var.
Description	Select process variable to be simulated.
Selection	<ul style="list-style-type: none"> ■ Off ■ Level ■ Level linearized
Factory setting	Off
Additional information	<ul style="list-style-type: none"> ■ The value of the variable to be simulated is defined in the Value process variable parameter (→  189). ■ If Assign measurement variable ≠ Off, a simulation is active. This is indicated by a diagnostic message of the <i>Function check (C)</i> category.

Value process variable 

Navigation	 Expert → Diagnostics → Simulation → Value proc. var.
Prerequisite	Assign measurement variable (→  189) ≠ Off
Description	Specify value of the process value being simulated.
User entry	Signed floating-point number
Factory setting	0
Additional information	Downstream measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.

Switch output simulation 

Navigation	 Expert → Diagnostics → Simulation → Switch sim.
Description	Switch the simulation of the switch output on or off.
Selection	<ul style="list-style-type: none"> ■ Off ■ On
Factory setting	Off

Switch status

**Navigation**

Expert → Diagnostics → Simulation → Switch status

Prerequisite**Switch output simulation** (→ 189) = On**Description**

Define the switch state to be simulated.

Selection

- Open
- Closed

Factory setting

Open

Additional information

The switch status assumes the value defined in this parameter. This helps to check correct operation of connected control units.

Simulation device alarm

**Navigation**

Expert → Diagnostics → Simulation → Sim. alarm

Description

Switch alarm simulation on or off.

Selection

- Off
- On

Factory setting

Off

Additional information

When selecting the **On** option, the device generates an alarm. This helps to check the correct output behavior of the device in the case of an alarm.

An active simulation is indicated by the diagnostic message **C484 Simulation failure mode**.

16.4.8 "Device check" submenu

Navigation   Diagnostics → Device check

Start device check

Navigation	  Diagnostics → Device check → Start dev. check
Description	Start a device check.
Selection	<ul style="list-style-type: none"> ■ No ■ Yes
Factory setting	No
Additional information	In the case of a lost echo a device check can not be performed.

Result device check

Navigation	  Diagnostics → Device check → Result dev.check
Description	Displays the result of the device check.
Additional information	<p>Meaning of the display options</p> <ul style="list-style-type: none"> ■ Installation ok Measurement possible without restrictions. ■ Accuracy reduced A measurement is possible. However, the measuring accuracy may be reduced due to the signal amplitudes. ■ Measurement capability reduced A measurement is currently possible. However, there is the risk of an echo loss. Check the mounting position of the device and the dielectric constant of the medium. ■ Check not done No device check has been performed.

Last check time

Navigation	  Diagnostics → Device check → Last check time
Description	Displays the operating time at which the last device check has been performed.

Level signal

Navigation	  Diagnostics → Device check → Level signal
Prerequisite	Device check has been performed.
Description	Displays result of the device check for the level signal.
User interface	<ul style="list-style-type: none">▪ Check not done▪ Check not OK▪ Check OK
Additional information	For Level signal = Check not OK : Check the mounting position of the device and the dielectric constant of the medium.

Index

A

- Access authorization to parameters
 - Read access 47
 - Write access 47
- Access code 47
 - Incorrect input 47
- Access status display (Parameter) 137
- Access status tooling (Parameter) 136
- Accessories
 - Communication specific 113
 - Device specific 107
 - Service specific 113
- Activate table (Parameter) 151
- Actual diagnostics (Parameter) 174
- Administration (Submenu) 171
- Advanced process conditions (Parameter) 139
- Advanced setup (Submenu) 136
- Analog input 1 to 5 (Submenu) 134, 181
- Application 12
 - Residual risk 12
- Assign channel 1 to 4 (Parameter) 183
- Assign diagnostic behavior (Parameter) 156
- Assign limit (Parameter) 156
- Assign measurement variable (Parameter) 189
- Assign status (Parameter) 155

B

- Backlight (Parameter) 166
- Backup state (Parameter) 169
- Bin type (Parameter) 126
- Block tag (Parameter) 134, 181
- Blocking distance (Parameter) 140, 153

C

- CE mark 13
- Channel (Parameter) 134, 181
- Cleaning 104
- Clear logging data (Parameter) 184
- Comparison result (Parameter) 169
- Configuration backup display (Submenu) 168
- Configuration management (Parameter) 168
- Configuration of a level measurement 74, 83
- Confirm access code (Parameter) 173
- Confirm distance (Parameter) 130, 133
- Context menu 59
- Contrast display (Parameter) 167
- Customer value (Parameter) 151

D

- Data logging (Submenu) 183
- Decimal places 1 (Parameter) 163
- Decimal places menu (Parameter) 166
- Declaration of Conformity 13
- Define access code 48
- Define access code (Parameter) 171, 173
- Define access code (Wizard) 173

- Designated use 12
- Device check (Submenu) 191
- Device information (Submenu) 178
- Device name (Parameter) 178
- Device replacement 105
- Device reset (Parameter) 171
- Device tag (Parameter) 178
- Diagnostic event
 - In the operating tool 99
- Diagnostic events 96
- Diagnostic list 99
- Diagnostic list (Submenu) 176
- Diagnostic message 96
- Diagnostics
 - Symbols 96
- Diagnostics (Menu) 174
- Diagnostics 1 to 5 (Parameter) 176
- Diagnostics event 97
- Diameter (Parameter) 148
- DIP switch
 - see Write protection switch
- Disable simulation 186
- Display (Submenu) 161
- Display and operating module FHX50 43
- Display channel 1 to 4 (Submenu) 185
- Display damping (Parameter) 164
- Display interval (Parameter) 164
- Display module 53
- Display symbols for submenus 54
- Display symbols for the locking state 54
- Disposal 106
- Distance (Parameter) 129, 133, 180
- Distance unit (Parameter) 126
- Document
 - Function 6
- Document function 6

E

- Electrical connection
 - Commubox FXA291 45
 - Operating tools
 - Via service interface (CDI) 45
- Electronic temperature (Parameter) 181
- Electronics housing
 - Design 15
 - Turning
 - see Turning the transmitter housing
- Empty calibration (Parameter) 127
- Enable simulation 186
- Enter access code (Parameter) 137
- Envelope curve display 60
- Event history 101
- Event level
 - Explanation 96
 - Symbols 96
- Event list (Submenu) 177

- Event logbook (Submenu) 177
- Event text 97
- Events list 101
- Extended order code 1 to 3 (Parameter) 179
- Exterior cleaning 104
- F**
- Failure mode (Parameter) 159
- FHX50 43
- Filter options (Parameter) 177
- Filtering the event logbook 102
- Firmware version (Parameter) 178
- Format display (Parameter) 161
- Free text (Parameter) 147
- Full calibration (Parameter) 128
- H**
- Hardware write protection 50
- Header (Parameter) 164
- Header text (Parameter) 165
- HistoROM (description) 84
- Housing
 - Design 15
- I**
- Input mask 57
- Intermediate height (Parameter) 148
- Invert output signal (Parameter) 159
- K**
- Keypad lock
 - Disabling 52
 - Switch-on 52
- L**
- Language (Parameter) 161
- Language selection 82
- Last backup (Parameter) 168
- Last check time (Parameter) 191
- Level (Parameter) 129, 150, 151
- Level (Submenu) 138
- Level correction (Parameter) 140
- Level linearized (Parameter) 147, 180
- Level measurement configuration 74, 83
- Level signal (Parameter) 192
- Level unit (Parameter) 139
- Linearization (Submenu) 143, 144, 145
- Linearization type (Parameter) 145
- Local display 43
 - see Diagnostics message
 - see In alarm condition
- Locking status (Parameter) 136
- Logging interval (Parameter) 183
- M**
- Maintenance 104
- Manage device configuration 78, 84
- Mapping (Wizard) 133
- Mapping end point (Parameter) 131, 133
- Max. draining speed solid (Parameter) 127
- Max. filling speed solid (Parameter) 126
- Maximum value (Parameter) 148
- Measured materials 12
- Measured value symbols 55
- Measured values (Submenu) 180
- Medium property (Parameter) 138
- Medium type (Parameter) 138
- Menu
 - Diagnostics 174
 - Setup 126
- N**
- Number format (Parameter) 165
- O**
- Operating elements
 - Diagnostics message 97
- Operating module 53
- Operating time (Parameter) 168, 175
- Operating time from restart (Parameter) 175
- Operational safety 13
- Order code (Parameter) 179
- Output echo lost (Parameter) 152
- Overvoltage protection
 - General information 39
- P**
- Prepare recording map (Parameter) 133
- Present mapping (Parameter) 131
- Previous diagnostics (Parameter) 174
- Process Value Filter Time (Parameter) 135
- Product safety 13
- R**
- Ramp at echo lost (Parameter) 153
- Read access 47
- Record map (Parameter) 132, 133
- Registered trademarks 16
- Remedial measures
 - Calling up 98
 - Closing 98
- Remote operation 44
- Repair concept 105
- Replacing a device 105
- Requirements for personnel 12
- Result device check (Parameter) 191
- Return 106
- S**
- Safety instructions
 - Basic 12
- Safety Instructions (XA) 8
- Safety settings (Submenu) 152
- Separator (Parameter) 165
- Serial number (Parameter) 178
- Setting the operating language 73
- Settings
 - Manage device configuration 78, 84
 - Operating language 73
- Setup (Menu) 126

Signal quality (Parameter) 130

SIM switch 186

Simulation (Submenu) 188, 189

Simulation device alarm (Parameter) 190

Spare parts 106

 Nameplate 106

Start device check (Parameter) 191

Status (Parameter) 182

Status signals 54, 96

Submenu

 Administration 171

 Advanced setup 136

 Analog input 1 to 5 134, 181

 Configuration backup display 168

 Data logging 183

 Device check 191

 Device information 178

 Diagnostic list 176

 Display 161

 Display channel 1 to 4 185

 Event list 177

 Event logbook 177

 Events list 101

 Level 138

 Linearization 143, 144, 145

 Measured values 180

 Safety settings 152

 Simulation 188, 189

 Switch output 155

Switch output (Submenu) 155

Switch output function (Parameter) 155

Switch output simulation (Parameter) 189

Switch status (Parameter) 159, 190

Switch-off delay (Parameter) 159

Switch-off value (Parameter) 158

Switch-on delay (Parameter) 158

Switch-on value (Parameter) 157

Symbols

 For correction 57

 In the text and numeric editor 57

System components 113

T

Table mode (Parameter) 149

Table number (Parameter) 150

Tank/silo height (Parameter) 140

Terminal voltage 1 (Parameter) 180

Timestamp (Parameter) 174, 175, 176

Transmitter

 Turning the display module 34

 Turning the housing 34

Transmitter housing

 Turning 34

Trouble shooting 94

Turning the display module 34

U

Unit after linearization (Parameter) 146

Units index (Parameter) 182

V

Value (Parameter) 182

Value 1 display (Parameter) 163

Value echo lost (Parameter) 152

Value process variable (Parameter) 189

W

W@M Device Viewer 106

Wizard

 Define access code 173

 Mapping 133

Workplace safety 13

Write access 47

Write protection

 Via access code 48

 Via write protection switch 50

Write protection switch 50



71294088

www.addresses.endress.com
