


Operating Instructions

Proline Promass P 500

Coriolis flowmeter
PROFINET over Ethernet-APL

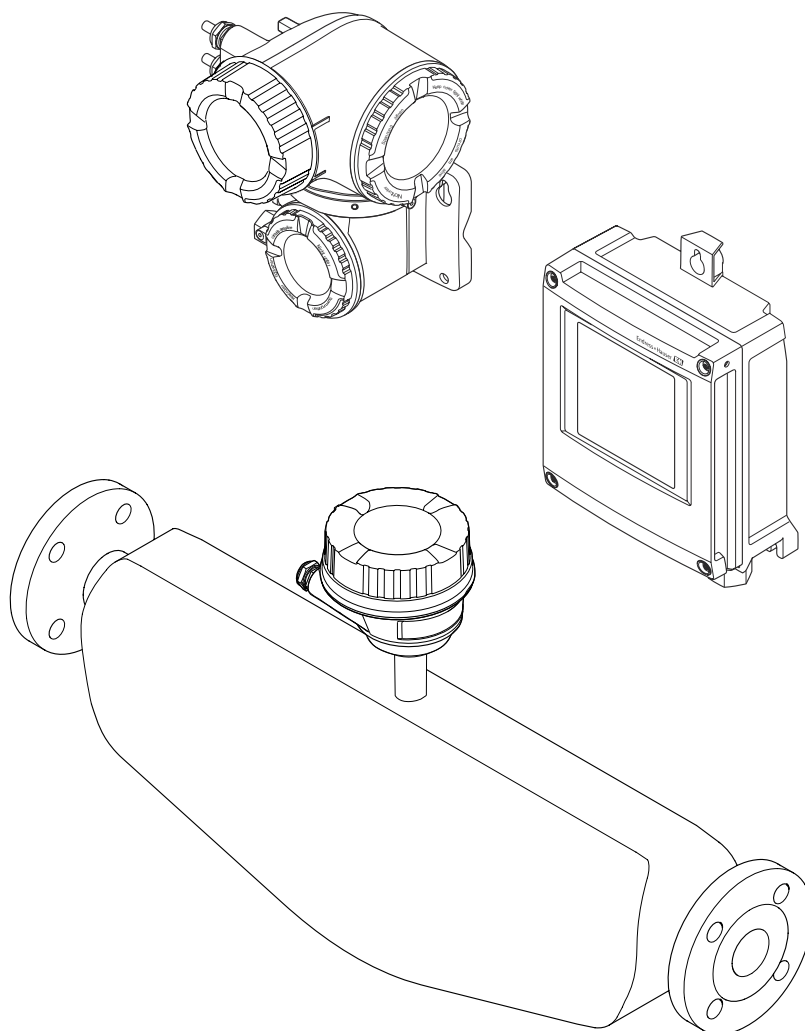

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser sales organization will supply you with current information and updates to this manual.

Table of contents

1	About this document	6	6	Installation	21
1.1	Document function	6	6.1	Installation requirements	21
1.2	Symbols	6	6.1.1	Installation position	21
1.2.1	Safety symbols	6	6.1.2	Environmental and process requirements	24
1.2.2	Electrical symbols	6	6.1.3	Special installation instructions	26
1.2.3	Communication-specific symbols	6	6.2	Installing the device	28
1.2.4	Tool symbols	7	6.2.1	Required tools	28
1.2.5	Symbols for certain types of information	7	6.2.2	Preparing the measuring instrument	28
1.2.6	Symbols in graphics	7	6.2.3	Installing the measuring instrument	28
1.3	Documentation	8	6.2.4	Installing the transmitter housing: Proline 500 – digital	29
1.4	Registered trademarks	8	6.2.5	Installing the transmitter housing: Proline 500	31
2	Safety instructions	9	6.2.6	Turning the transmitter housing: Proline 500	32
2.1	Requirements for the personnel	9	6.2.7	Turning the display module: Proline 500	32
2.2	Intended use	9	6.3	Post-installation check	33
2.3	Workplace safety	10	7	Electrical connection	34
2.4	Operational safety	10	7.1	Electrical safety	34
2.5	Product safety	10	7.2	Connecting requirements	34
2.6	IT security	10	7.2.1	Required tools	34
2.7	Device-specific IT security	11	7.2.2	Requirements for connection cable	34
2.7.1	Protecting access via hardware write protection	11	7.2.3	Terminal assignment	38
2.7.2	Protecting access via a password	11	7.2.4	Available device plugs for Proline 500	38
2.7.3	Access via web server	12	7.2.5	Pin assignment of device plug	39
2.7.4	Access via service interface (port 2): CDI-RJ45	12	7.2.6	Shielding and grounding	39
3	Product description	13	7.2.7	Preparing the device	40
3.1	Product design	13	7.3	Connecting the device: Proline 500 – digital	41
3.1.1	Proline 500 – digital	13	7.3.1	Connecting the connecting cable	41
3.1.2	Proline 500	14	7.3.2	Connecting the transmitter	46
4	Incoming acceptance and product identification	15	7.3.3	Integrating the transmitter into a network	49
4.1	Incoming acceptance	15	7.4	Connecting the device: Proline 500	50
4.2	Product identification	15	7.4.1	Connecting the connecting cable	50
4.2.1	Transmitter nameplate	16	7.4.2	Connecting the transmitter	54
4.2.2	Sensor nameplate	18	7.4.3	Integrating the transmitter into a network	57
4.2.3	Symbols on the device	19	7.5	Potential equalization	57
5	Storage and transport	20	7.5.1	Requirements	57
5.1	Storage conditions	20	7.6	Special connection instructions	58
5.2	Transporting the product	20	7.6.1	Connection examples	58
5.2.1	Measuring devices without lifting lugs	20	7.7	Hardware settings	60
5.2.2	Measuring devices with lifting lugs	21	7.7.1	Setting the device name	60
5.2.3	Transporting with a fork lift	21	7.7.2	Activating the default IP address	62
5.3	Packaging disposal	21	7.8	Ensuring the degree of protection	64
			7.9	Post-connection check	64
			8	Operation options	65
			8.1	Overview of operation options	65

8.2	Structure and function of the operating menu	66	10.6	Configuring the device	108
8.2.1	Structure of the operating menu	66	10.6.1	Defining the tag name	110
8.2.2	Operating philosophy	67	10.6.2	Displaying the communication interface	110
8.3	Access to operating menu via local display ...	68	10.6.3	Setting the system units	112
8.3.1	Operational display	68	10.6.4	Selecting and setting the medium ..	115
8.3.2	Navigation view	70	10.6.5	Configuration of the Analog Inputs .	116
8.3.3	Editing view	72	10.6.6	Displaying the I/O configuration ...	119
8.3.4	Operating elements	74	10.6.7	Configuring the current input	120
8.3.5	Opening the context menu	74	10.6.8	Configuring the status input	121
8.3.6	Navigating and selecting from list ...	76	10.6.9	Configuring the current output	122
8.3.7	Calling the parameter directly	76	10.6.10	Configuring the pulse/frequency/switch output	126
8.3.8	Calling up help text	77	10.6.11	Configuring the relay output	134
8.3.9	Changing the parameters	77	10.6.12	Configuring the local display	137
8.3.10	User roles and related access authorization	78	10.6.13	Configuring the low flow cut off	141
8.3.11	Disabling write protection via access code	78	10.6.14	Partially filled pipe detection	142
8.3.12	Enabling and disabling the keypad lock	79	10.7	Advanced settings	143
8.4	Access to operating menu via web browser ...	79	10.7.1	Using the parameter to enter the access code	144
8.4.1	Function range	79	10.7.2	Calculated process variables	144
8.4.2	Requirements	80	10.7.3	Carrying out a sensor adjustment ...	146
8.4.3	Connecting the device	81	10.7.4	Configuring the totalizer	149
8.4.4	Logging on	83	10.7.5	Carrying out additional display configurations	152
8.4.5	User interface	84	10.7.6	WLAN configuration	158
8.4.6	Disabling the Web server	85	10.7.7	Viscosity application package	160
8.4.7	Logging out	85	10.7.8	Concentration Measurement application package	160
8.5	Operation via SmartBlue app	86	10.7.9	Petroleum application package	160
8.6	Access to the operating menu via the operating tool	87	10.7.10	Heartbeat Technology application package	161
8.6.1	Connecting the operating tool	87	10.7.11	Configuration management	161
8.6.2	FieldCare	90	10.7.12	Using parameters for device administration	162
8.6.3	DeviceCare	91	10.8	Simulation	163
8.6.4	SIMATIC PDM	91	10.9	Protecting settings from unauthorized access	166
9	System integration	92	10.9.1	Write protection via access code ...	166
9.1	Overview of device description files	92	10.9.2	Write protection via write protection switch	168
9.1.1	Current version data for the device ...	92	11	Operation	170
9.1.2	Operating tools	92	11.1	Reading the device locking status	170
9.2	Device master file (GSD)	92	11.2	Adjusting the operating language	170
9.2.1	File name of the manufacturer-specific device master file (GSD)	93	11.3	Configuring the display	170
9.2.2	File name of the PA Profile device master file (GSD)	93	11.4	Reading off measured values	170
9.3	Cyclic data transmission	94	11.4.1	"Measured variables" submenu	171
9.3.1	Overview of the modules	94	11.4.2	Totalizer	173
9.3.2	Description of the modules	95	11.4.3	"Input values" submenu	174
9.3.3	Status coding	104	11.4.4	Output values	175
9.3.4	Factory setting	105	11.5	Adapting the measuring device to the process conditions	177
9.4	System redundancy S2	106	11.6	Performing a totalizer reset	177
10	Commissioning	107	11.6.1	Function scope of "Control Totalizer" parameter	178
10.1	Post-installation and post-connection check	107	11.6.2	Function range of "Reset all totalizers" parameter	178
10.2	Switching on the measuring instrument	107	11.7	Displaying the measured value history	179
10.3	Connecting via FieldCare	107			
10.4	Setting the operating language	107			
10.5	Initializing the measuring instrument	108			

11.8	Gas Fraction Handler	182	15	Accessories	274
11.8.1	"Measurement mode" submenu	183	15.1	Device-specific accessories	274
11.8.2	"Medium index" submenu	185	15.1.1	For the transmitter	274
12	Diagnostics and troubleshooting ..	186	15.1.2	For the sensor	275
12.1	General troubleshooting	186	15.2	Communication-specific accessories	275
12.2	Diagnostic information via LEDs	188	15.3	Service-specific accessories	276
12.2.1	Transmitter	188	15.4	System components	277
12.2.2	Sensor connection housing	190	16	Technical data	278
12.3	Diagnostic information on local display	192	16.1	Application	278
12.3.1	Diagnostic message	192	16.2	Function and system design	278
12.3.2	Calling up remedial actions	194	16.3	Input	279
12.4	Diagnostic information in the web browser ..	194	16.4	Output	281
12.4.1	Diagnostic options	194	16.5	Power supply	286
12.4.2	Calling up remedial actions	195	16.6	Performance characteristics	288
12.5	Diagnostic information in FieldCare or DeviceCare	195	16.7	Installation	292
12.5.1	Diagnostic options	195	16.8	Environment	292
12.5.2	Calling up remedy information	196	16.9	Process	294
12.6	Adapting the diagnostic information	197	16.10	Mechanical construction	296
12.6.1	Adapting the diagnostic behavior ...	197	16.11	User interface	300
12.7	Overview of diagnostic information	198	16.12	Certificates and approvals	303
12.7.1	Diagnostic of sensor	199	16.13	Application packages	306
12.7.2	Diagnostic of electronic	211	16.14	Accessories	307
12.7.3	Diagnostic of configuration	239	16.15	Documentation	308
12.7.4	Diagnostic of process	250	Index	310	
12.8	Pending diagnostic events	264			
12.9	Diagnostic list	265			
12.10	Event logbook	265			
12.10.1	Reading out the event logbook	265			
12.10.2	Filtering the event logbook	266			
12.10.3	Overview of information events	266			
12.11	Resetting the device	268			
12.11.1	Function scope of the "Device reset" parameter	268			
12.12	Device information	268			
12.13	Firmware history	270			
13	Maintenance	271			
13.1	Maintenance work	271			
13.1.1	Cleaning	271			
13.2	Measuring and test equipment	271			
13.3	Maintenance services	271			
14	Repair	272			
14.1	General notes	272			
14.1.1	Repair and conversion concept	272			
14.1.2	Notes for repair and conversion	272			
14.2	Spare parts	272			
14.3	Repair services	272			
14.4	Return	272			
14.5	Disposal	273			
14.5.1	Removing the measuring instrument	273			
14.5.2	Disposing of the measuring instrument	273			

1 About this document

1.1 Document function

These Operating Instructions contain all the information required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to installation, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.

1.2 Symbols

1.2.1 Safety symbols

DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

WARNING

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in serious or fatal injury.




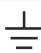

CAUTION

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in minor or medium injury.



NOTICE



This symbol alerts you to a potentially harmful situation. Failure to avoid this situation can result in damage to the product or something in its vicinity.

1.2.2 Electrical symbols




Symbol	Meaning
	Direct current
	Alternating current
	Direct current and alternating current
	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective earth (PE) Ground terminals that must be connected to ground prior to establishing any other connections. The ground terminals are located on the interior and exterior of the device: <ul style="list-style-type: none"> ▪ Interior ground terminal: protective earth is connected to the mains supply. ▪ Exterior ground terminal: device is connected to the plant grounding system.

1.2.3 Communication-specific symbols













Symbol	Meaning
	Wireless Local Area Network (WLAN) Communication via a wireless, local area network
	LED LED is off.

Symbol	Meaning
	LED LED is on.
	LED LED flashing.

1.2.4 Tool symbols

Symbol	Meaning
	Torx screwdriver
	Phillips screwdriver
	Open-end wrench

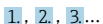1.2.5 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Notice or individual step to be observed
	Series of steps
	Result of a step
	Help in the event of a problem
	Visual inspection

1.2.6 Symbols in graphics

Symbol	Meaning
1, 2, 3, ...	Item numbers
	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections
	Hazardous area


Symbol	Meaning
	Safe area (non-hazardous area)
	Flow direction

1.3 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

The following document types are available in the Downloads area of the Endress+Hauser website (www.endress.com/downloads), depending on the device version:

Document type	Purpose and content of the document
Technical Information (TI)	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions (KA)	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Operating Instructions (BA)	Your reference document The Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.
Description of Device Parameters (GP)	Reference for your parameters The document provides a detailed explanation of each individual parameter. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.
Safety instructions (XA)	Depending on the approval, safety instructions for electrical equipment in hazardous areas are also supplied with the device. These are an integral part of the Operating Instructions.  The nameplate indicates which Safety Instructions (XA) apply to the device.
Supplementary device-dependent documentation (SD/FY)	Always comply strictly with the instructions in the relevant supplementary documentation. The supplementary documentation is a constituent part of the device documentation.

1.4 Registered trademarks

Ethernet-APL™

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA

2 Safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Intended use

Application and media

The measuring instrument described in this manual is intended only for the flow measurement of liquids.

Depending on the version ordered, the measuring instrument can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring instruments for use in hazardous areas, in hygienic applications, or where there is an increased risk due to pressure, are specially labeled on the nameplate.

To ensure that the measuring instrument remains in proper condition during the operating time:

- ▶ Only use the measuring instrument in full compliance with the data on the nameplate and the general conditions listed in the manual and supplementary documentation.
- ▶ Using the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring instrument only for media against which the materials in contact with the process are sufficiently resistant.
- ▶ Keep within the specified pressure and temperature range.
- ▶ Keep within the specified ambient temperature range.
- ▶ Protect the measuring instrument permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

WARNING

Danger of breakage due to corrosive or abrasive fluids and ambient conditions!

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ▶ Ensure the resistance of all wetted materials during the process.
- ▶ Keep within the specified pressure and temperature range.

NOTICE**Verification for borderline cases:**

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks**⚠ WARNING**

Risk of hot or cold burns! The use of media and electronics with high or low temperatures can produce hot or cold surfaces on the device.

- ▶ Mount suitable touch protection.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

2.4 Operational safety

Damage to the device!

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for the interference-free operation of the device.

Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers!

- ▶ If modifications are nevertheless required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability:

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to the repair of an electrical device.
- ▶ Use only original spare parts and accessories.

2.5 Product safety

This state-of-the-art device is designed and tested in accordance with good engineering practice to meet operational safety standards. It left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU declaration of conformity. The manufacturer confirms this by affixing the CE mark.


 



2.6 IT security

The manufacturer warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.


2.7 Device-specific IT security

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. The following list provides an overview of the most important functions:

Function/interface	Factory setting	Recommendation
Write protection via hardware write protection switch →  11	Not enabled	On an individual basis following risk assessment
Access code (also applies to web server login or FieldCare connection) →  11	Not enabled (0000)	Assign a customized access code during commissioning
WLAN (order option in display module)	Enabled	On an individual basis following risk assessment
WLAN security mode	Enabled (WPA2-PSK)	Do not change
WLAN passphrase (Password) →  12	Serial number	Assign an individual WLAN passphrase during commissioning
WLAN mode	Access point	On an individual basis following risk assessment
Web server →  12	Enabled	On an individual basis following risk assessment
Service interface CDI-RJ45 →  12	Enabled	-

2.7.1 Protecting access via hardware write protection

Write access to the parameters of the device via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the main electronics module). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered →  168.


2.7.2 Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

 
- **User-specific access code**
Protect write access to the device parameters via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare). Access authorization is clearly regulated through the use of a user-specific access code.
- **WLAN passphrase**
The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.
- **Infrastructure mode**
When the device is operated in infrastructure mode, the WLAN passphrase corresponds to the WLAN passphrase configured on the operator side.


User-specific access code

Local display, web browser and operating tool (e.g. FieldCare, DeviceCare)

- Write access to the device parameters via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code →  166.
- When delivered, the device does not have an access code; the default value is 0000 (open).

WLAN passphrase: Operation as WLAN access point


A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface (→  88), which can be ordered as an optional extra, is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter (→  160).

Infrastructure mode

A connection between the device and WLAN access point is protected by means of an SSID and passphrase on the system side. Please contact the relevant system administrator for access.

General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning for security reasons.
- Follow the general rules for generating a secure password when defining and managing the access code or network key.
- The user is responsible for the management and careful handling of the access code and network key.
- For information on configuring the access code or on what to do if you lose the password, for example, see "Write protection via access code" →  166.

2.7.3 Access via web server

The integrated web server can be used to operate and configure the device by means of a web browser via Ethernet-APL, the service interface (CDI-RJ45) or via WLAN interface.

The web server is enabled when the device is delivered. The web server can be disabled if necessary via the **Web server functionality** parameter (e.g., after commissioning).

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.



For detailed information on device parameters, see: Description of Device Parameters.

2.7.4 Access via service interface (port 2): CDI-RJ45

The device can be connected to a network via the service interface. Device-specific functions guarantee the secure operation of the device in a network.

The use of relevant industrial standards and guidelines that have been defined by national and international safety committees, such as IEC/ISA62443 or the IEEE, is recommended. This includes organizational security measures such as the assignment of access authorization as well as technical measures such as network segmentation.



For detailed information on connecting transmitters with an Ex de approval, see separate document "Safety instructions" (XA) for the device.

3 Product description

The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by connecting cables.

3.1 Product design

Two versions of the transmitter are available.

3.1.1 Proline 500 – digital


Signal transmission: digital

Order code for "Integrated ISEM electronics", option **A** "Sensor"


For use in applications not required to meet special requirements due to ambient or operating conditions.

As the electronics are located in the sensor, the device is ideal:
For simple transmitter replacement.

- A standard cable can be used as the connecting cable.
- Not sensitive to external EMC interference.

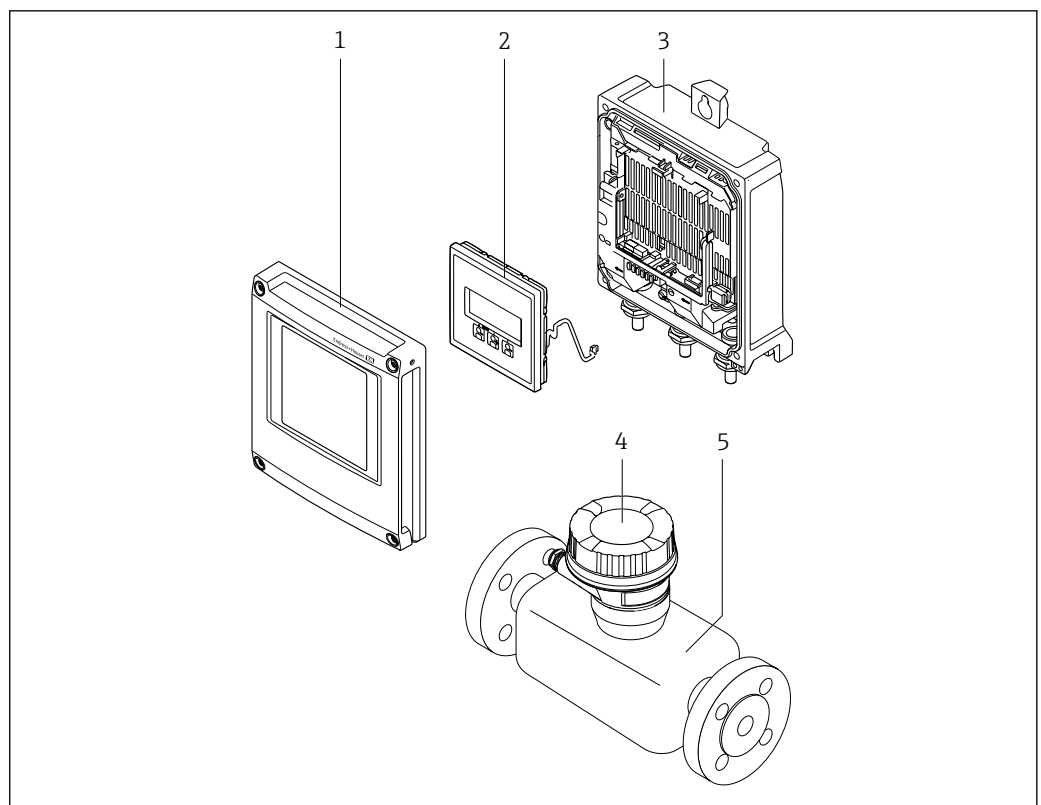

A0029593

 1 Important components of a measuring device

- 1 Electronics compartment cover
- 2 Display module
- 3 Transmitter housing
- 4 Sensor connection housing with integrated ISEM electronics: connecting cable connection
- 5 Sensor

3.1.2 Proline 500


Signal transmission: analog

Order code for "Integrated ISEM electronics", option **B** "Transmitter"

For use in applications required to meet special requirements due to ambient or operating conditions.

As the electronics are located in the transmitter, the device is ideal in the event of:

- Strong vibrations at the sensor.
- Sensor operation in underground installations.
- Permanent sensor immersion in water.

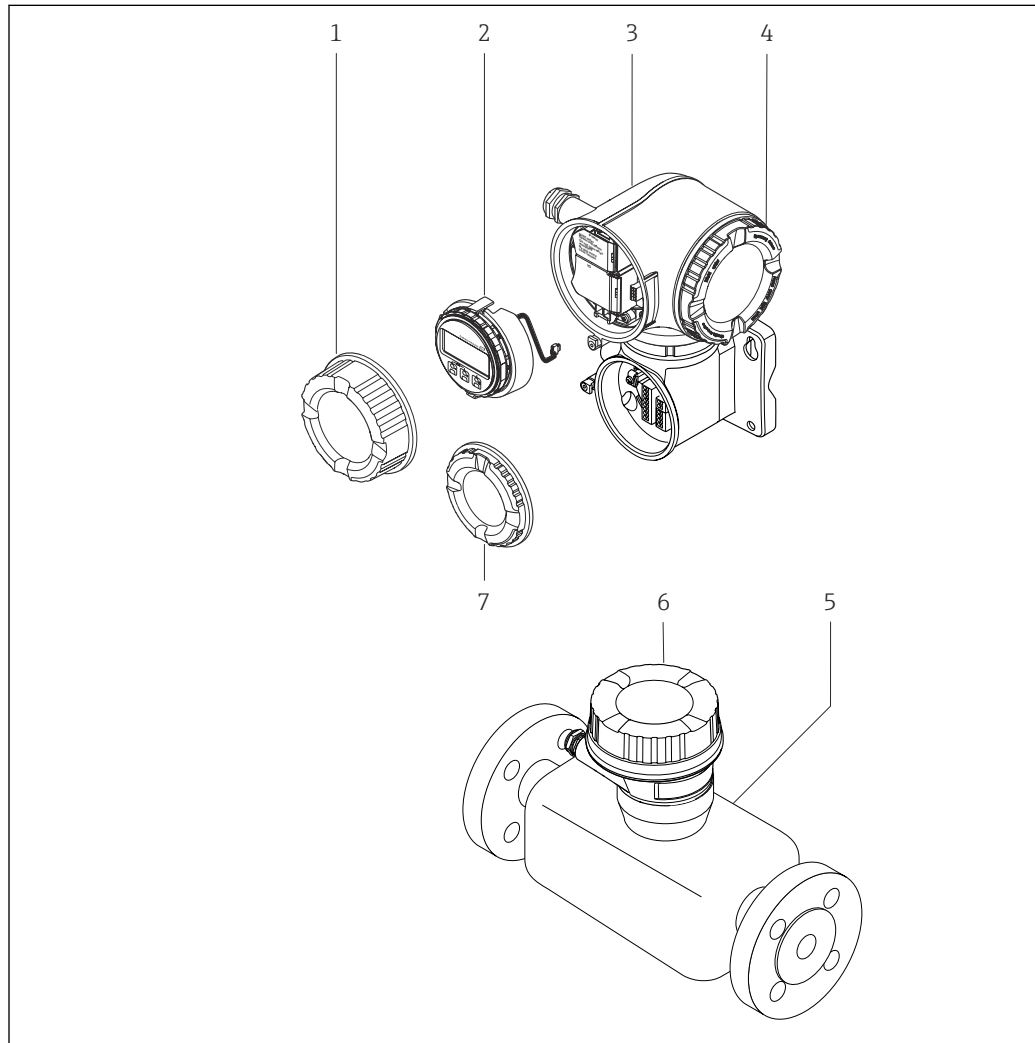

A0029589

2 Important components of a measuring device

- 1 Connection compartment cover
- 2 Display module
- 3 Transmitter housing with integrated ISEM electronics
- 4 Electronics compartment cover
- 5 Sensor
- 6 Sensor connection housing: connecting cable connection
- 7 Connection compartment cover: connecting cable connection

4 Incoming acceptance and product identification

4.1 Incoming acceptance

On receipt of the delivery:

1. Check the packaging for damage.
 - ↳ Report all damage immediately to the manufacturer.
Do not install damaged components.
2. Check the scope of delivery using the delivery note.
3. Compare the data on the nameplate with the order specifications on the delivery note.
4. Check the technical documentation and all other necessary documents, e.g. certificates, to ensure they are complete.



If one of the conditions is not satisfied, contact the manufacturer.

4.2 Product identification

The device can be identified in the following ways:


- Nameplate
- Order code with details of the device features on the delivery note
- Enter the serial numbers from the nameplates in the *Device Viewer* (www.endress.com/deviceviewer): all the information about the device is displayed.
- Enter the serial numbers from the nameplates into the *Endress+Hauser Operations app* or scan the DataMatrix code on the nameplate with the *Endress+Hauser Operations app*: all the information about the device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The "Additional standard device documentation" and "Supplementary device-dependent documentation" sections
- The *Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations app*: Enter the serial number from the nameplate or scan the DataMatrix code on the nameplate.

4.2.1 Transmitter nameplate


Proline 500 – digital

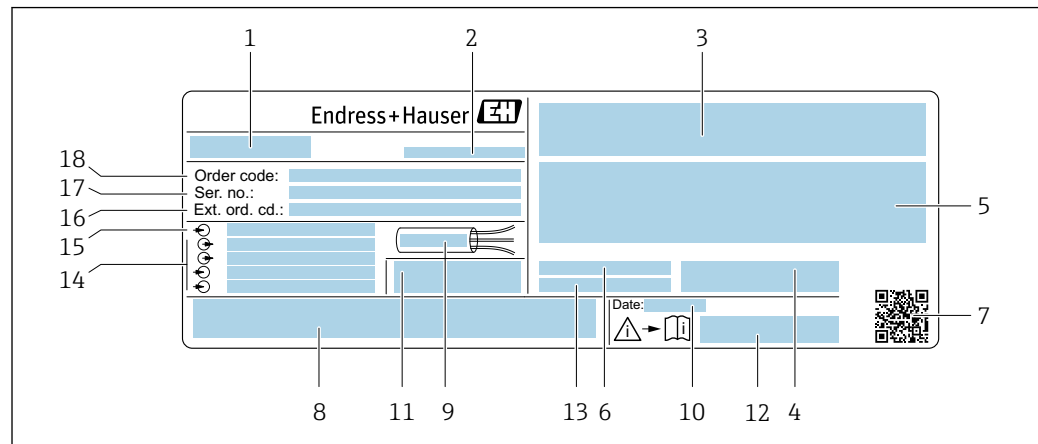


A0058873

3 Example of a transmitter nameplate

- 1 Name of the transmitter
- 2 Manufacturer/certificate holder
- 3 Space for approvals: Use in hazardous areas
- 4 Degree of protection
- 5 Electrical connection data: available inputs and outputs
- 6 Permitted ambient temperature (T_a)
- 7 2-D matrix code
- 8 Space for approvals and certificates: e.g. CE mark, RCM symbol
- 9 Permitted temperature range for cable
- 10 Manufacturing date: year-month
- 11 Firmware version (FW) and device revision (Dev. Rev.) from the factory
- 12 Document number of safety-related supplementary documentation
- 13 Space for additional information in the case of special products
- 14 Available inputs and outputs, supply voltage
- 15 Electrical connection data: supply voltage
- 16 Extended order code (Ext. ord. cd.)
- 17 Serial number (Ser. no.)
- 18 Order code

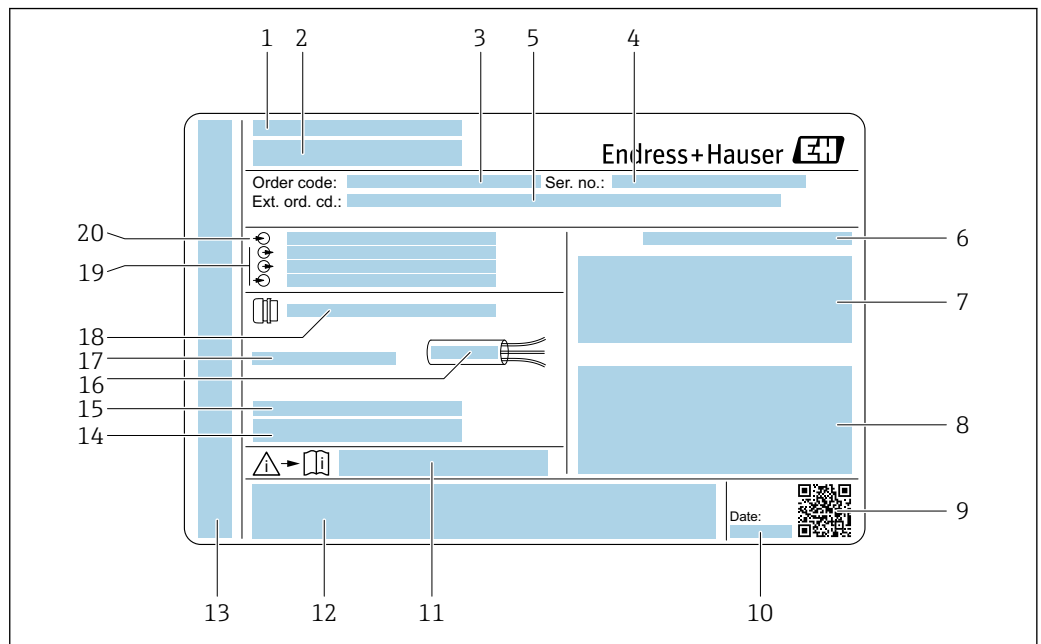
Proline 500

A0058872

 4 Example of a transmitter nameplate

- 1 Manufacturer/certificate holder
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Degree of protection
- 7 Space for approvals: use in hazardous areas
- 8 Electrical connection data: available inputs and outputs
- 9 2-D matrix code
- 10 Manufacturing date: year-month
- 11 Document number of safety-related supplementary documentation
- 12 Space for approvals and certificates: e.g. CE mark, RCM symbol
- 13 Space for degree of protection of connection and electronics compartment when used in hazardous areas
- 14 Firmware version (FW) and device revision (Dev. Rev.) from the factory
- 15 Space for additional information in the case of special products
- 16 Permitted temperature range for cable
- 17 Permitted ambient temperature (T_a)
- 18 Information on cable gland
- 19 Available inputs and outputs, supply voltage
- 20 Electrical connection data: supply voltage

4.2.2 Sensor nameplate

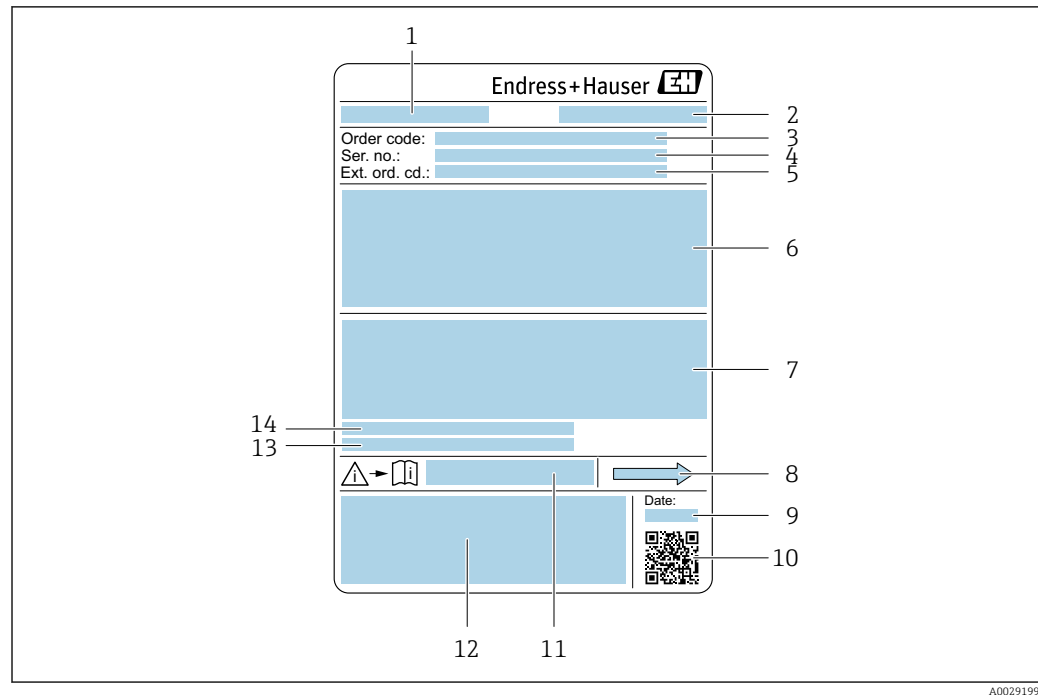

A0029199

5 Example of a sensor nameplate

- 1 Name of sensor
- 2 Manufacturer/certificate holder
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Nominal diameter of the sensor; flange nominal diameter/nominal pressure; sensor test pressure; medium temperature range; material of measuring tube and manifold; sensor-specific information: e.g. pressure range of sensor housing, wide-range density specification (special density calibration)
- 7 Approval information for explosion protection, Pressure Equipment Directive and degree of protection
- 8 Flow direction
- 9 Manufacturing date: year-month
- 10 2-D matrix code
- 11 Document number of safety-related supplementary documentation
- 12 CE mark, RCM symbol
- 13 Surface roughness
- 14 Permitted ambient temperature (T_a)






Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approval-related specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

4.2.3 Symbols on the device

Symbol	Meaning
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury. Please consult the documentation for the measuring instrument to discover the type of potential danger and measures to avoid it.
	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal that must be connected to the ground prior to establishing any other connections.

5 Storage and transport

5.1 Storage conditions


Observe the following notes for storage:

- ▶ Store in the original packaging to ensure protection from shock.
- ▶ Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- ▶ Protect from direct sunlight. Avoid unacceptably high surface temperatures.
- ▶ Store in a dry and dust-free place.
- ▶ Do not store outdoors.


Storage temperature →  292

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

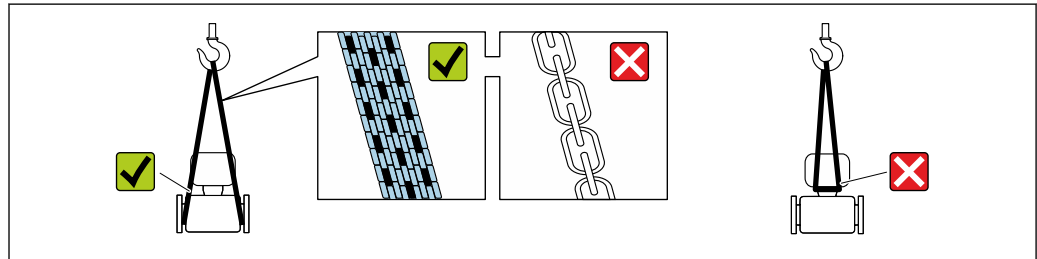

A0029252

 Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ▶ Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

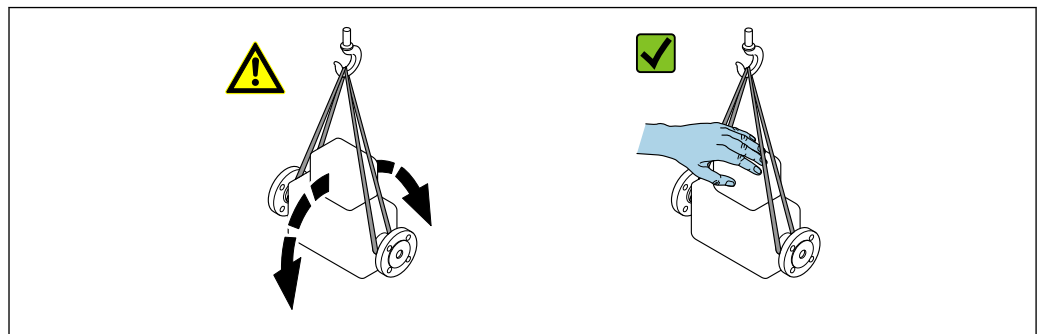

A0029214

5.2.2 Measuring devices with lifting lugs

⚠ CAUTION

Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ▶ The device must always be secured at two lifting lugs at least.

5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:


- Outer packaging of device
 - Stretch wrap made of polymer in accordance with EU Directive 2002/95/EC (RoHS)
- Packaging
 - Wood crate treated in accordance with ISPM 15 standard, confirmed by IPPC logo
 - Cardboard box in accordance with European packaging guideline 94/62/EC, recyclability confirmed by Resy symbol
- Transport material and fastening fixtures
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Filler material
 - Paper pads

6 Installation

6.1 Installation requirements

6.1.1 Installation position

Mounting location

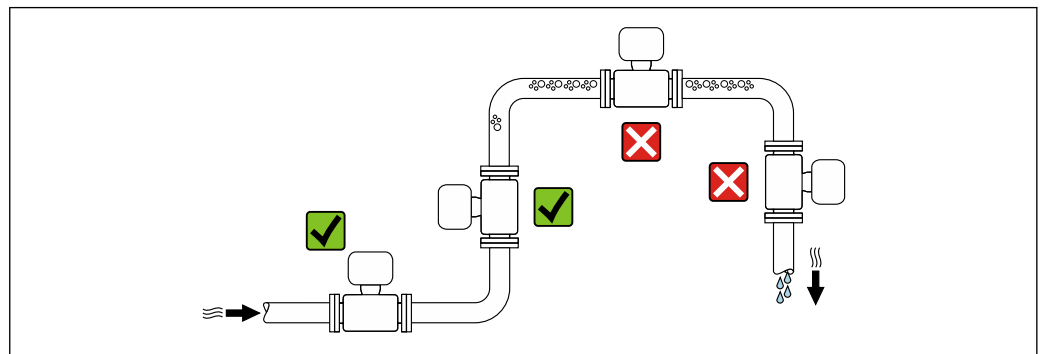


A0028772

To avoid measurement errors caused by gas bubble formation in the measuring tube, avoid the following installation locations in the pipe:

- Highest point of a pipeline
- Directly upstream of a free pipe outlet in a down pipe

Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

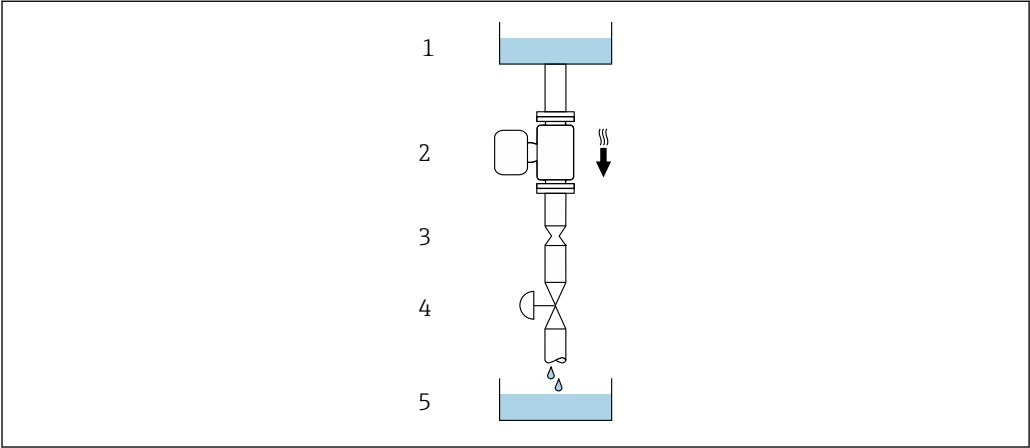

A0028773



6 Installation in a down pipe (e.g. for batching applications)



- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Filling container

DN/NPS		Ø orifice plate, pipe restriction	
[mm]	[in]	[mm]	[in]
8	3/8	6	0.24
15	1/2	10	0.40
25	1	14	0.55
40	1 1/2	22	0.87
50	2	28	1.10

Orientation

  
The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

Orientation			Recommendation
A	Vertical orientation	 <small>A0015591</small>	✓✓ ¹⁾
B	Horizontal orientation, transmitter at top	 <small>A0015589</small>	✓✓ ²⁾ Exception: → 7, 23

 Orientation			Recommendation
C	Horizontal orientation, transmitter at bottom	 A0015590	✓✓ ³⁾ Exception: → ☒ 7, ☒ 23
D	Horizontal orientation, transmitter at side	 A0015592	✓✓

- 1) This orientation is recommended to ensure self-draining.
- 2) Applications with low process temperatures may reduce the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 3) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

If a sensor is installed horizontally with a curved measuring tube, match the position of the sensor to the medium properties.

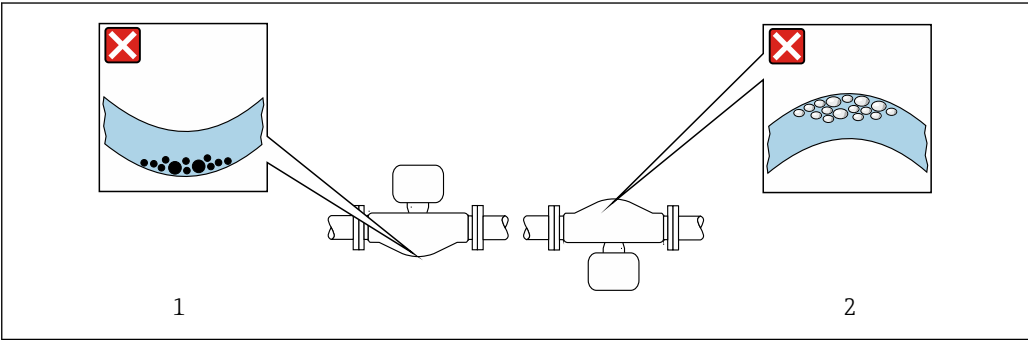

- ☒ 7 *Orientation of sensor with curved measuring tube*
- 1 *Avoid this orientation for media with entrained solids: Risk of solids accumulating*
 - 2 *Avoid this orientation for outgassing media: Risk of gas accumulating*

Inlet and outlet runs

No special precautions need to be taken for fittings that create turbulence, such as valves, elbows or T-pieces, as long as no cavitation occurs → ☒ 24.





Installation dimensions

☒ For the dimensions and installed lengths of the device, see the "Technical Information" document, "Mechanical construction" section



6.1.2 Environmental and process requirements

Ambient temperature range

Measuring instrument	<ul style="list-style-type: none">▪ -40 to +60 °C (-40 to +140 °F)▪ Order code for "Test, certificate", option JP: -50 to +60 °C (-58 to +140 °F)
Readability of the local display	-20 to +60 °C (-4 to +140 °F) The readability of the display may be impaired at temperatures outside the temperature range.

 Dependency of ambient temperature on medium temperature →  294

- ▶ If operating outdoors:
Avoid direct sunlight, particularly in warm climatic regions.

 You can order a weather protection cover from Endress+Hauser. →  274.

Static pressure


It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas.

Cavitation is caused if the pressure drops below the vapor pressure:

- In liquids that have a low boiling point (e.g. hydrocarbons, solvents, liquefied gases)
- In suction lines
- ▶ Ensure the static pressure is sufficiently high to prevent cavitation and outgassing.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

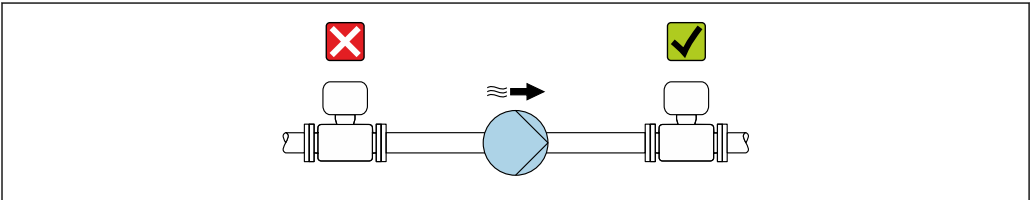

A0028771

Thermal insulation


In the case of some fluids, it is important to keep the heat radiated from the sensor to the transmitter to a low level. A wide range of materials can be used for the required insulation.

The following device versions are recommended for applications with thermal insulation:


- Version with extended neck for insulation:
Order code for "Sensor option", option CG with an extended neck length of 105 mm (4.13 in).
- Extended temperature version:
Order code for "Measuring tube material", option TD or TG with an extended neck length of 105 mm (4.13 in).

NOTICE**Electronics overheating on account of thermal insulation!**

- ▶ Recommended orientation: horizontal orientation, sensor connection housing pointing downwards.
- ▶ Do not insulate the sensor connection housing.
- ▶ Maximum permissible temperature at the lower end of the sensor connection housing: 80 °C (176 °F)
- ▶ Thermal insulation with exposed extension neck: We recommend that you do not insulate the extension neck in order to ensure optimum dissipation of heat.

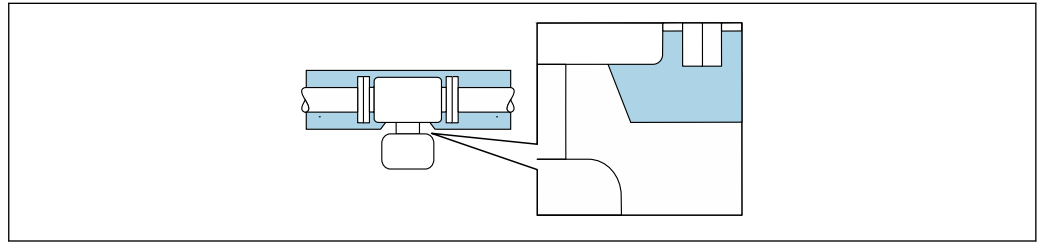

A0034391

 8 Thermal insulation with exposed extension neck

Heating**NOTICE****Electronics can overheat due to elevated ambient temperature!**

- ▶ Observe maximum permitted ambient temperature for the transmitter.
- ▶ Depending on the medium temperature, take the device orientation requirements into account.

NOTICE**Danger of overheating when heating**

- ▶ Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F).
- ▶ Ensure that sufficient convection takes place at the transmitter neck.
- ▶ Ensure that a sufficiently large area of the transmitter neck remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.
- ▶ When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation. For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.
- ▶ Consider the behavior of the process diagnostics "830 Ambient temperature too high" and "832 Electronics temperature too high" if overheating cannot be avoided by a suitable system design.

Heating options

If a medium requires that no heat loss should occur at the sensor, users can avail of the following heating options:

- Electrical heating, e.g. with electric band heaters ¹⁾
- Via pipes carrying hot water or steam
- Via heating jackets

Vibrations

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.


1) The use of parallel electric band heaters is generally recommended (bidirectional electricity flow). Particular considerations must be made if a single-wire heating cable is to be used. Additional information is provided in the document EA01339D "Installation instructions for electrical trace heating systems".

6.1.3 Special installation instructions

Drainability

When installed vertically, the measuring tube can be drained completely and protected against buildup.

When the sensor is installed in a horizontal line, eccentric clamps can be used to ensure complete drainability. When the system is pitched in a specific direction and at a specific slope, gravity can be used to achieve complete drainability. The sensor must be mounted in the correct position to ensure full drainability in the horizontal position. Markings on the sensor show the correct mounting position to optimize drainability.

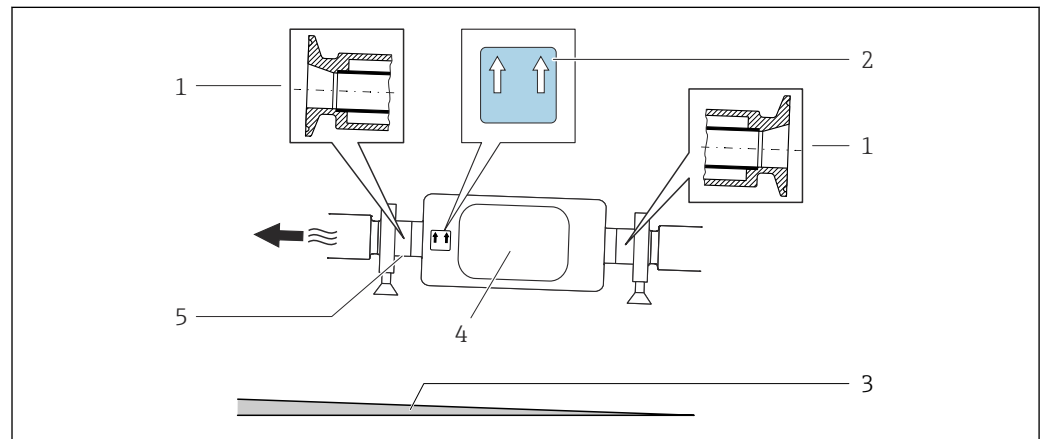

A0016583

- 1 Eccentric clamp connection
- 2 "This side up" label indicates which side is up
- 3 For DN 8 to 25 (3/8 to 1"): Gradient: approx. 2% or 21 mm/m (0.24 in/ft); for DN 40 to 50 (1½ to 2"): Gradient approx. 2° or 35 mm/m (0.42 in/ft)
- 4 Transmitter
- 5 Line on the underside indicates the lowest point of the eccentric process connection.


Hygienic compatibility

i When installing in hygienic applications, please refer to the information in the "Certificates and approvals/hygienic compatibility" section → 304

Securing with mounting clamp in the case of hygiene connections

It is not necessary to provide additional support for the sensor for operational performance purposes. If, however, additional support is required for installation purposes, the following dimensions must be observed.

Use mounting clamp with lining between clamp and measuring instrument.

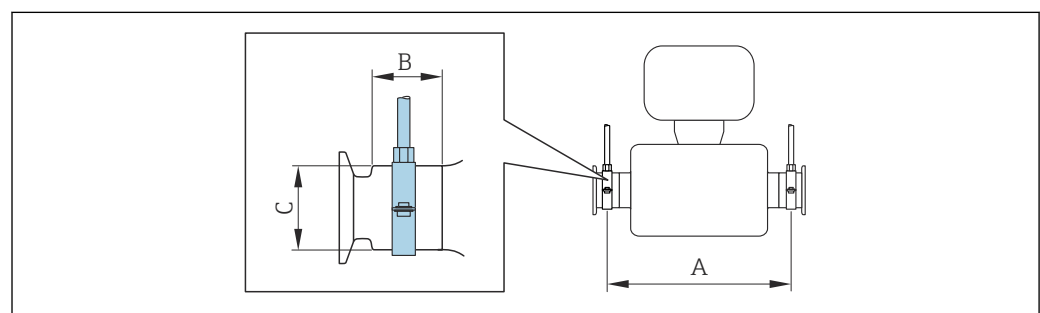

A0030298


DN		A		B		C	
[mm]	[in]	[mm]	[in]	[mm]	[in]	[mm]	[in]
8	$\frac{3}{8}$	298	11.73	33	1.3	28	1.1
15	$\frac{1}{2}$	402	15.83	33	1.3	28	1.1
25	1	542	21.34	33	1.3	38	1.5
40	1 $\frac{1}{2}$	658	25.91	36.5	1.44	56	2.2
50	2	772	30.39	44.1	1.74	75	2.95

Zero point verification and zero adjustment

All measuring instruments are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions → 288. Therefore, a zero adjustment in the field is generally not required.

Experience shows that zero adjustment is advisable only in special cases:

- To achieve maximum measurement accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity media).

 To achieve the highest possible measurement accuracy at low flow rates, the installation must protect the sensor from mechanical stress during operation.

To get a representative zero point, ensure that


- any flow in the device is prevented during the adjustment
- the process conditions (e.g. pressure, temperature) are stable and representative

 
Verification and adjustment cannot be performed if the following process conditions are present:

- Gas pockets
Ensure that the system has been sufficiently flushed with the medium. Repeat flushing can help to eliminate gas pockets
- Thermal circulation
In the event of temperature differences (e.g. between the measuring tube inlet and outlet section), induced flow can occur even if the valves are closed due to thermal circulation in the device
- Leaks at the valves
If the valves are not leak-tight, flow is not sufficiently prevented when determining the zero point


If these conditions cannot be avoided, it is advisable to keep the factory setting for the zero point.

Protective cover

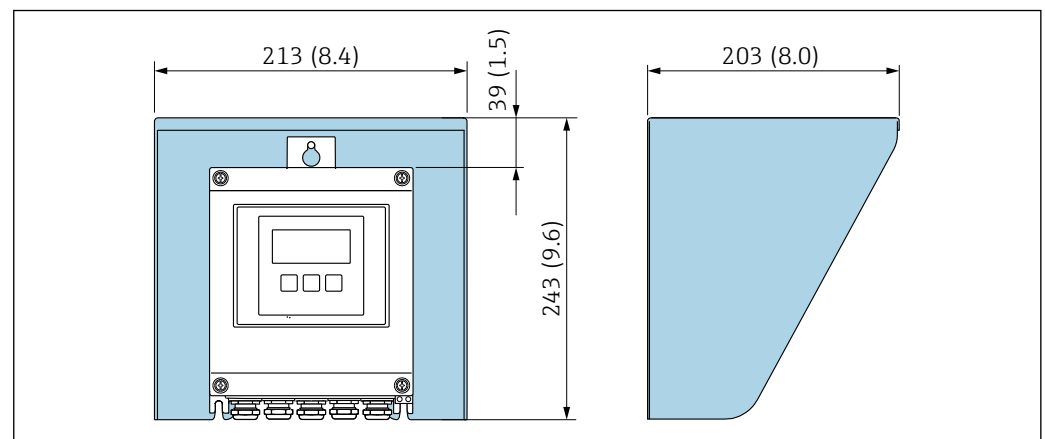

 9 Weather protection cover for Proline 500 – digital; unit mm (in)

A0029552

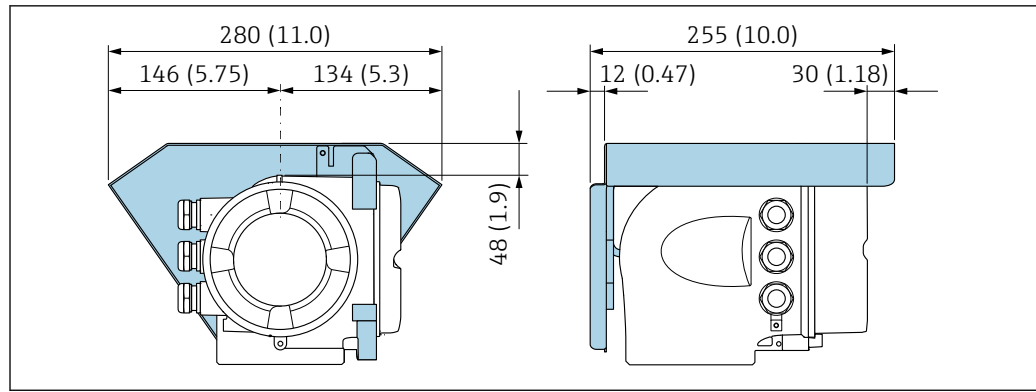

A0029553

10 Weather protection cover for Proline 500 – unit mm (in)

6.2 Installing the device

6.2.1 Required tools

For transmitter

For mounting on a post:

- Proline 500 – digital transmitter
 - Open-ended wrench AF 10
 - Torx screwdriver TX 25
- Proline 500 transmitter
 - Open-ended wrench AF 13

For wall mounting:

Drill with drill bit \varnothing 6.0 mm

For sensor

For flanges and other process connections: Use a suitable mounting tool.

6.2.2 Preparing the measuring instrument

1. Remove all remaining transport packaging.
2. Remove any protective covers or protective caps present from the sensor.
3. Remove stick-on label on the electronics compartment cover.

6.2.3 Installing the measuring instrument


⚠ WARNING

Danger due to improper process sealing!

- ▶ Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ▶ Ensure that the seals and sealing surfaces are clean and undamaged.
- ▶ Secure the seals correctly.

1. Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the medium.

2. Install the measuring instrument or turn the transmitter housing so that the cable entries do not point upwards.

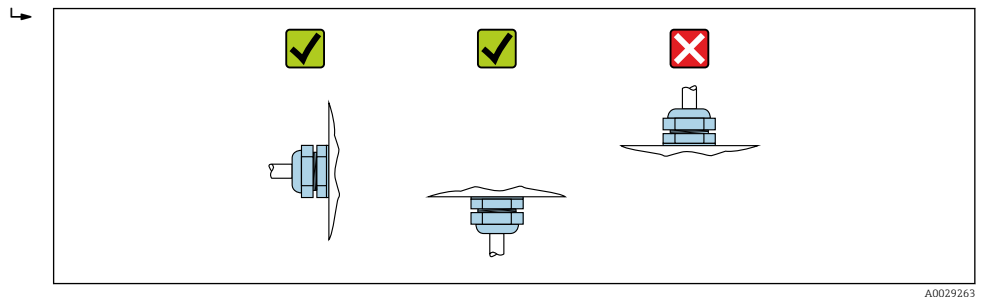

A0029263

6.2.4 Installing the transmitter housing: Proline 500 – digital

NOTICE

Ambient temperature too high!

Danger of electronics overheating and housing deformation.

- Do not exceed the permitted maximum ambient temperature.
- If operating outdoors: Avoid direct sunlight and exposure to weathering, particularly in warm climatic regions.

NOTICE

Excessive force can damage the housing!

- Avoid excessive mechanical stress.

The transmitter can be mounted in the following ways:

- Post mounting
- Wall mounting

Pipe mounting

Required tools:


- Open-ended wrench AF 10
- Torx screwdriver TX 25

NOTICE

Excessive tightening torque applied to the fixing screws!

Risk of damaging the plastic transmitter.

- Tighten the fixing screws as per the tightening torque: 2.5 Nm (1.8 lbf ft)

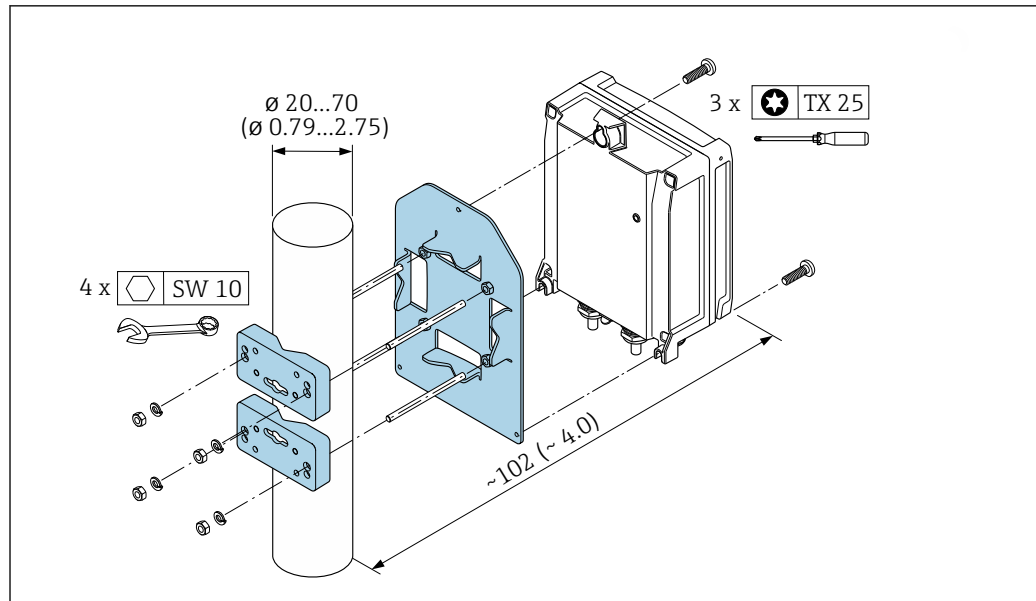


A0029051

11 Unit mm (in)

Wall mounting

Required tools:

Drill with drill bit \varnothing 6.0 mm

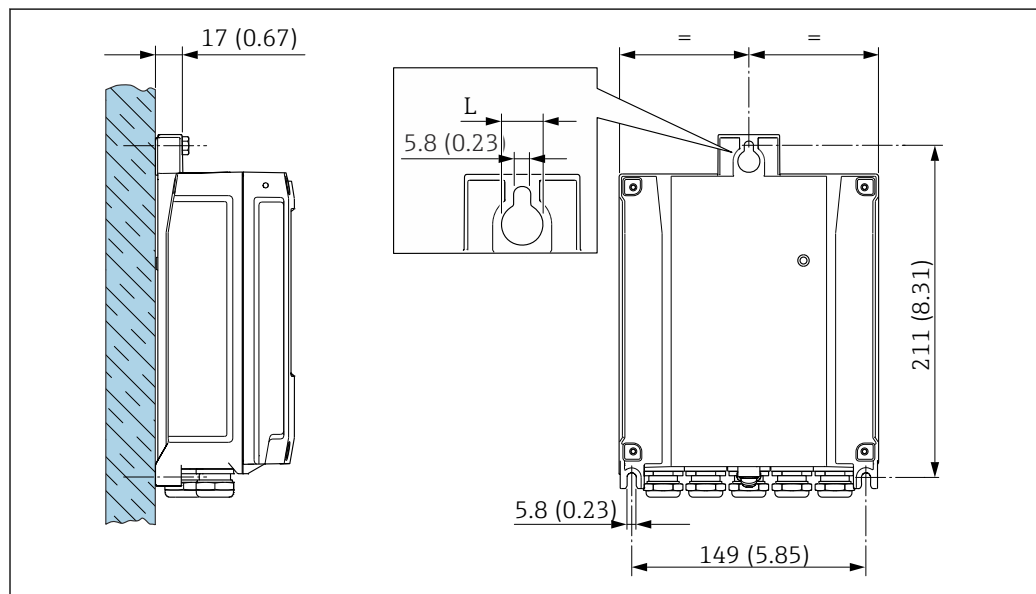

A0029054

12 Unit mm (in)

L Depends on order code for "Transmitter housing"

Order code for "Transmitter housing"

- Option A, aluminum, coated: L = 14 mm (0.55 in)
- Option D, polycarbonate: L = 13 mm (0.51 in)

1. Drill the holes.
2. Insert wall plugs into the drilled holes.
3. Screw in the securing screws loosely.
4. Fit the transmitter housing over the securing screws and mount in place.

5. Tighten the securing screws.

6.2.5 Installing the transmitter housing: Proline 500

NOTICE

Ambient temperature too high!

Danger of electronics overheating and housing deformation.

- ▶ Do not exceed the permitted maximum ambient temperature.
- ▶ If operating outdoors: Avoid direct sunlight and exposure to weathering, particularly in warm climatic regions.

NOTICE

Excessive force can damage the housing!

- ▶ Avoid excessive mechanical stress.


The transmitter can be mounted in the following ways:

- Post mounting
- Wall mounting

Wall mounting

Required tools

Drill with drill bit \varnothing 6.0 mm

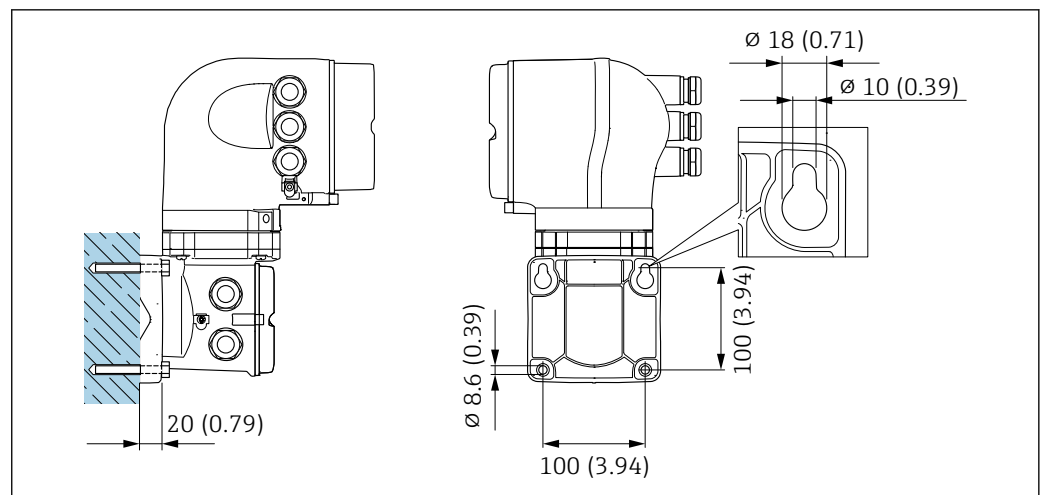


13 Unit mm (in)

1. Drill the holes.
2. Insert wall plugs into the drilled holes.
3. Lightly screw in the securing screws.
4. Fit the transmitter housing over the securing screws and hook into place.
5. Tighten the securing screws.

Pipe mounting

Required tools

Open-ended wrench AF 13

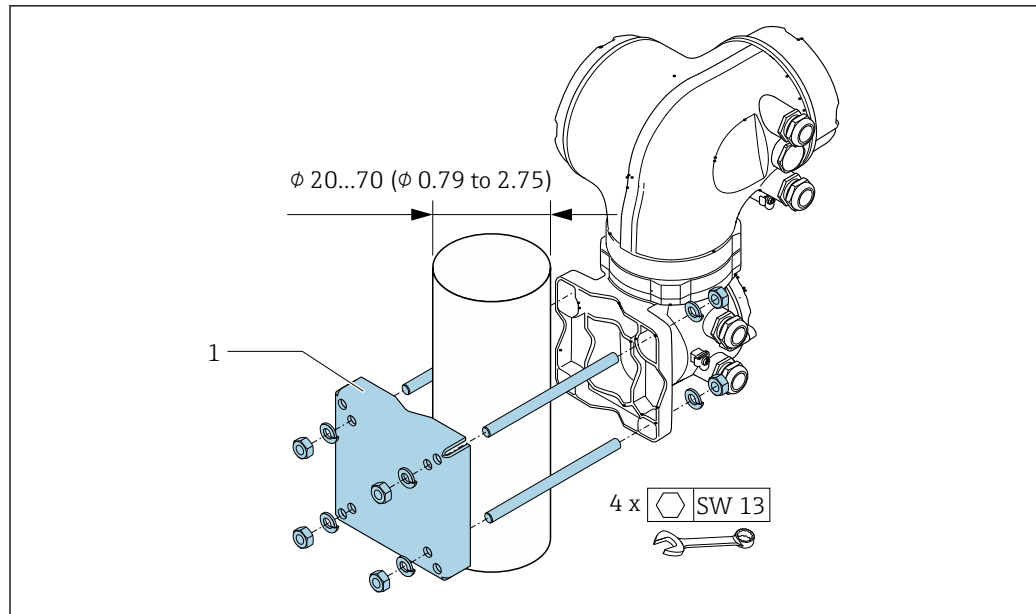


A0029057

14 Unit mm (in)

6.2.6 Turning the transmitter housing: Proline 500

To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

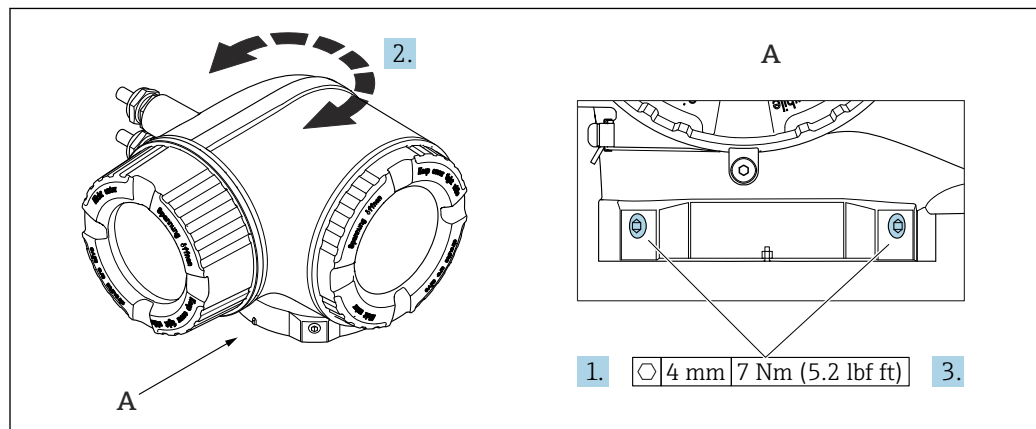


A0043150

15 Ex housing

1. Loosen the fixing screws.
2. Turn the housing to the desired position.
3. Tighten the securing screws.

6.2.7 Turning the display module: Proline 500

The display module can be turned to optimize display readability and operability.

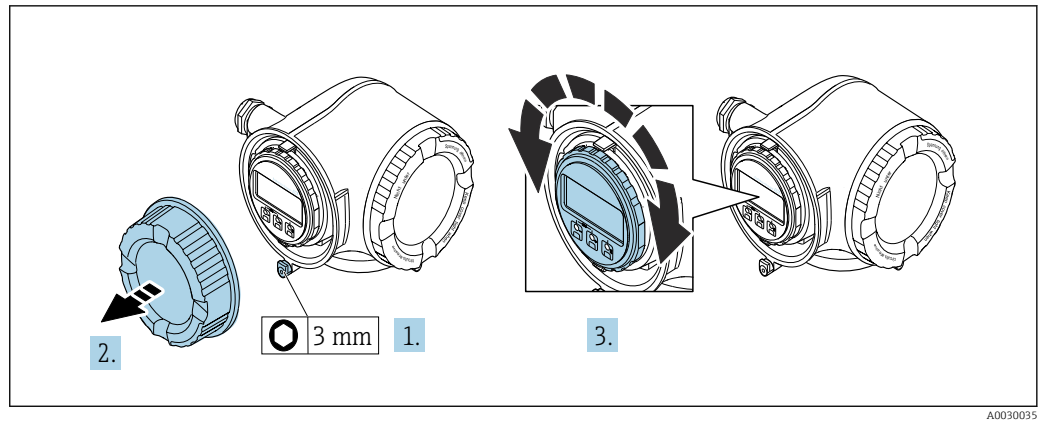

A0030035

1. Depending on the device version: Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Turn the display module to the desired position: max. $8 \times 45^\circ$ in each direction.
4. Screw on the connection compartment cover.
5. Depending on the device version: Attach the securing clamp of the connection compartment cover.

6.3 Post-installation check

Is the device undamaged (visual inspection)?	<input type="checkbox"/>
Does the measuring instrument correspond to the measuring point specifications? For example: <ul style="list-style-type: none"> ▪ Process temperature → 294 ▪ Pressure (refer to the "Pressure-temperature ratings" section of the "Technical Information" document). ▪ Ambient temperature ▪ Measuring range 	<input type="checkbox"/>
Has the correct orientation for the sensor been selected → 22? <ul style="list-style-type: none"> ▪ According to sensor type ▪ According to medium temperature ▪ According to medium properties (outgassing, with entrained solids) 	<input type="checkbox"/>
Does the arrow on the sensor match the direction of flow of the medium? → 22?	<input type="checkbox"/>
Is the tag name and labeling correct (visual inspection)?	<input type="checkbox"/>
Is the device sufficiently protected from precipitation and direct sunlight?	<input type="checkbox"/>
Are the securing screw and securing clamp tightened securely?	<input type="checkbox"/>

7 Electrical connection

WARNING

Live parts! Incorrect work performed on the electrical connections can result in an electric shock.

- ▶ Set up a disconnecting device (switch or power-circuit breaker) to easily disconnect the device from the supply voltage.
- ▶ In addition to the device fuse, include an overcurrent protection unit with max. 10 A in the plant installation.

7.1 Electrical safety

In accordance with applicable national regulations.

7.2 Connecting requirements

7.2.1 Required tools

- For cable entries: use appropriate tool
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: crimper for wire end ferrule
- For removing cables from terminal: flat blade screwdriver ≤ 3 mm (0.12 in)

7.2.2 Requirements for connection cable

The connecting cables provided by the customer must fulfill the following requirements.

Protective grounding cable for the outer ground terminal

Conductor cross-section $< 6 \text{ mm}^2$ (10 AWG)

Larger cross-sections can be connected using a cable lug.

The grounding impedance must be less than 2Ω .

Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

Power supply cable (incl. conductor for the inner ground terminal)

Standard installation cable is sufficient.

Signal cable

4 to 20 mA current input

Standard installation cable is sufficient.

Pulse/frequency/switch output

Standard installation cable is sufficient.

Relay output

Standard installation cable is sufficient.

Status input

Standard installation cable is sufficient.

Ethernet-APL

Shielded twisted-pair cable. Cable type A is recommended.


 See <https://www.profibus.com> Ethernet-APL White Paper "

Cable diameter




- Cable glands supplied:
M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Spring-loaded terminals: Suitable for strands and strands with ferrules.
Conductor cross-section 0.2 to 2.5 mm² (24 to 12 AWG)

Choice of connecting cable between the transmitter and sensor

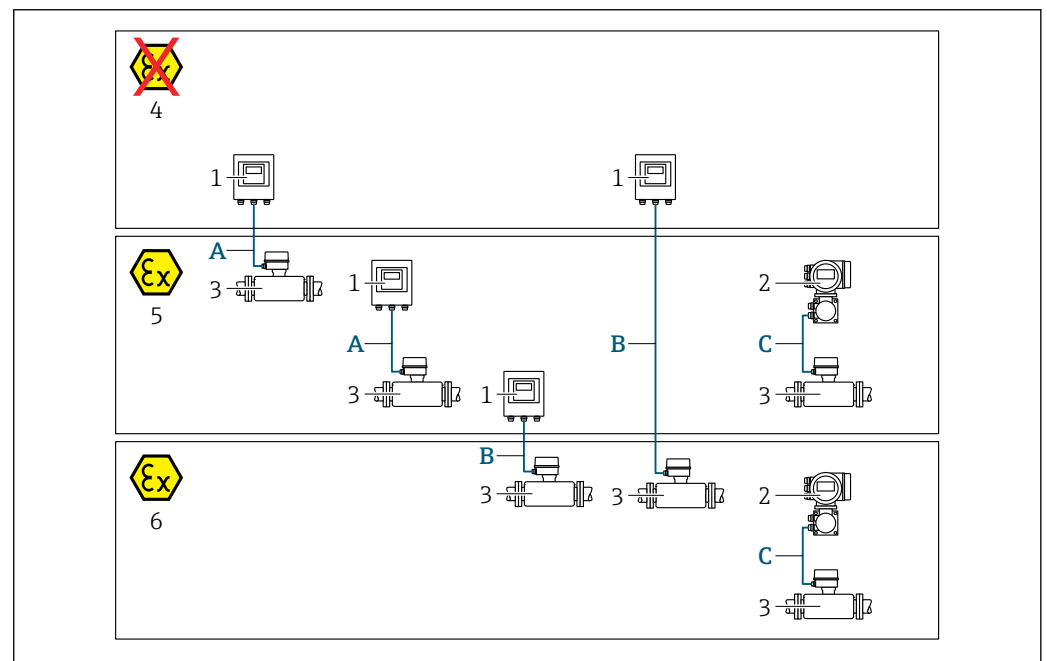Depends on the type of transmitter and the installation zones



 A0032476

- 1 Proline 500 digital transmitter
- 2 Proline 500 transmitter
- 3 Sensor Promass
- 4 Non-hazardous area
- 5 Hazardous area: Zone 2; Class I, Division 2
- 6 Hazardous area: Zone 1; Class I, Division 1
- A Standard cable to 500 digital transmitter →  35
Transmitter installed in the non-hazardous area or hazardous area: Zone 2; Class I, Division 2/sensor installed in the hazardous area: Zone 2; Class I, Division 2
- B Standard cable to 500 digital transmitter →  36
Transmitter installed in the hazardous area: Zone 2; Class I, Division 2/sensor installed in the hazardous area: Zone 1; Class I, Division 1
- C Signal cable to 500 transmitter →  38
Transmitter and sensor installed in the hazardous area: Zone 2; Class I, Division 2 or Zone 1; Class I, Division 1

A: Connecting cable between sensor and transmitter: Proline 500 – digital

Standard cable

A standard cable with the following specifications can be used as the connecting cable.

Design	4 cores (2 pairs); uninsulated stranded CU wires; pair-stranded with common shield
Shield	Tin-plated copper braid, optical cover $\geq 85\%$
Loop resistance	Power supply line (+, -): maximum 10 Ω
Cable length	Maximum 300 m (900 ft), see the following table.
Device plug, side 1	M12 socket, 5-pin, A-coded.
Device plug, side 2	M12 plug, 5-pin, A-coded.
Pins 1+2	Connected cores as twisted pair.
Pins 3+4	Connected cores as twisted pair.

Cross-section	Cable length [max.]
0.34 mm ² (AWG 22)	80 m (240 ft)
0.50 mm ² (AWG 20)	120 m (360 ft)
0.75 mm ² (AWG 18)	180 m (540 ft)
1.00 mm ² (AWG 17)	240 m (720 ft)
1.50 mm ² (AWG 15)	300 m (900 ft)

Optionally available connecting cable

Design	2 × 2 × 0.34 mm ² (AWG 22) PVC cable ¹⁾ with common shield (2 pairs, uninsulated stranded CU wires; pair-stranded)
Flame resistance	According to DIN EN 60332-1-2
Oil resistance	According to DIN EN 60811-2-1
Shield	Tin-plated copper braid, optical cover $\geq 85\%$
Continuous operating temperature	When mounted in a fixed position: -50 to +105 °C (-58 to +221 °F); when cable can move freely: -25 to +105 °C (-13 to +221 °F)
Available cable length	Fixed: 20 m (60 ft); variable: up to maximum 50 m (150 ft)




1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

B: Connecting cable between sensor and transmitter: Proline 500 - digital

Standard cable

A standard cable with the following specifications can be used as the connecting cable.

Design	4, 6, 8 cores (2, 3, 4 pairs); uninsulated stranded CU wires; pair-stranded with common shield
Shielding	Tin-plated copper braid, optical cover $\geq 85\%$
Capacitance C	Maximum 760 nF IIC, maximum 4.2 μ F IIB
Inductance L	Maximum 26 μ H IIC, maximum 104 μ H IIB
Inductance/resistance ratio (L/R)	Maximum 8.9 μ H/ Ω IIC, maximum 35.6 μ H/ Ω IIB (e.g. according to IEC 60079-25)
Loop resistance	Power supply line (+, -): maximum 5 Ω
Cable length	Maximum 150 m (450 ft), see the following table.

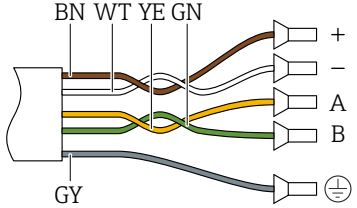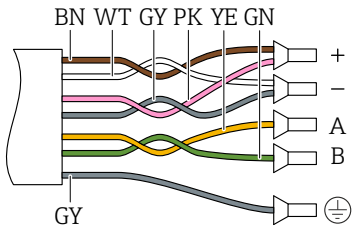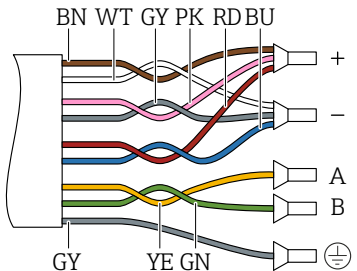Cross-section	Cable length [max.]	Termination
2 x 2 x 0.50 mm ² (AWG 20)	50 m (150 ft)	2 x 2 x 0.50 mm ² (AWG 20)  <ul style="list-style-type: none"> ■ +, - = 0.5 mm² ■ A, B = 0.5 mm²
3 x 2 x 0.50 mm ² (AWG 20)	100 m (300 ft)	3 x 2 x 0.50 mm ² (AWG 20)  <ul style="list-style-type: none"> ■ +, - = 1.0 mm² ■ A, B = 0.5 mm²
4 x 2 x 0.50 mm ² (AWG 20)	150 m (450 ft)	4 x 2 x 0.50 mm ² (AWG 20)  <ul style="list-style-type: none"> ■ +, - = 1.5 mm² ■ A, B = 0.5 mm²

Optionally available connecting cable

Connecting cable for	Zone 1; Class I, Division 1
Standard cable	2 × 2 × 0.5 mm ² (AWG 20) PVC cable ¹⁾ with common shield (2 pairs, pair-stranded)
Flame resistance	According to DIN EN 60332-1-2
Oil-resistance	According to DIN EN 60811-2-1
Shielding	Tin-plated copper braid, optical cover ≥ 85 %
Operating temperature	When mounted in a fixed position: -50 to +105 °C (-58 to +221 °F); when cable can move freely: -25 to +105 °C (-13 to +221 °F)
Available cable length	Fixed: 20 m (60 ft); variable: up to maximum 50 m (150 ft)

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

C: Connecting cable between sensor and transmitter: Proline 500

Design	6 × 0.38 mm ² PVC cable ¹⁾ with individual shielded cores and common copper shield With order code for "Test, certificate", option JQ 7 × 0.38 mm ² PUR cable ¹⁾ with individual shielded cores and common copper shield
Conductor resistance	≤ 50 Ω/km (0.015 Ω/ft)
Capacitance: core/shield	≤ 420 pF/m (128 pF/ft)
Cable length (max.)	20 m (60 ft)
Cable lengths (available for order)	5 m (15 ft), 10 m (30 ft), 20 m (60 ft)
Cable diameter	11 mm (0.43 in) ± 0.5 mm (0.02 in)
Continuous operating temperature	Max. 105 °C (221 °F)

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

7.2.3 Terminal assignment

Transmitter: supply voltage, input/outputs

The terminal assignment of the inputs and outputs depends on the individual order version of the device. The device-specific terminal assignment is documented on an adhesive label in the terminal cover.

PROFINET over Ethernet-APL

Supply voltage		Input/output 1 (Port 1)		Input/output 2		Input/output 3		Input/output 4 ¹⁾		Service interface (Port 2 ²⁾)
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)	CDI-RJ45
Device-specific terminal assignment: adhesive label in terminal cover.										

1) Input/output only available for Proline 500 - digital.
2) No PROFINET communication available on port 2


Transmitter and sensor connection housing: connecting cable

The sensor and transmitter, which are mounted in separate locations, are interconnected by a connecting cable. The cable is connected via the sensor connection housing and the transmitter housing.

Terminal assignment and connection of the connecting cable:

- Proline 500 – digital → 41
- Proline 500 → 50


7.2.4 Available device plugs for Proline 500

 Device plugs may not be used in hazardous areas!

Order code for "Input; output 1", option RB "PROFINET over Ethernet-APL"

Order code for "Electrical connection"	Cable entry/connection	
	2	3
L, N, P, U	Connector M12×1	–

7.2.5 Pin assignment of device plug

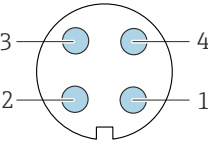	Pin	Assignment	Coding	Plug/socket
	1	Ethernet-APL signal -	A	Socket
	2	Ethernet-APL signal +		
	3	Cable shield ¹		
	4	Not used		
	Metal plug housing	Cable shield		
¹ If a cable shield is used				

7.2.6 Shielding and grounding

Optimal electromagnetic compatibility (EMC) of the fieldbus system can be guaranteed only if the system components and, in particular, the lines are shielded and the shield forms as complete a cover as possible.

1. To ensure optimal EMC protection, connect the shield to the reference ground as often as possible.
2. For reasons concerning explosion protection, it is recommended that grounding be dispensed with.

To comply with both requirements, there are basically three different types of shielding in the fieldbus system:

- Shielding at both ends
- Shielding at one end on the feed side with capacitance termination at the field device
- Shielding at one end on the feed side

Experience shows that the best results with regard to EMC are achieved in most cases in installations with one-sided shielding on the feed side (without capacitance termination at the field device). Appropriate measures with regard to input wiring must be taken to allow unrestricted operation when EMC interference is present. These measures have been taken into account for this device. Operation in the event of disturbance variables as per NAMUR NE21 is thus guaranteed.


1. Observe national installation requirements and guidelines during installation.
2. Where there are large differences in potential between the individual grounding points, connect only one point of the shielding directly to the reference ground.
3. In systems without potential equalization, the cable shielding of fieldbus systems should be grounded on one side only, for example at the fieldbus supply unit or at safety barriers.

NOTICE

In systems without potential matching, the multiple grounding of the cable shield causes mains frequency equalizing currents!

Damage to the bus cable shield.

- Only ground the bus cable shield to either the local ground or the protective ground at one end.
- Insulate the shield that is not connected.

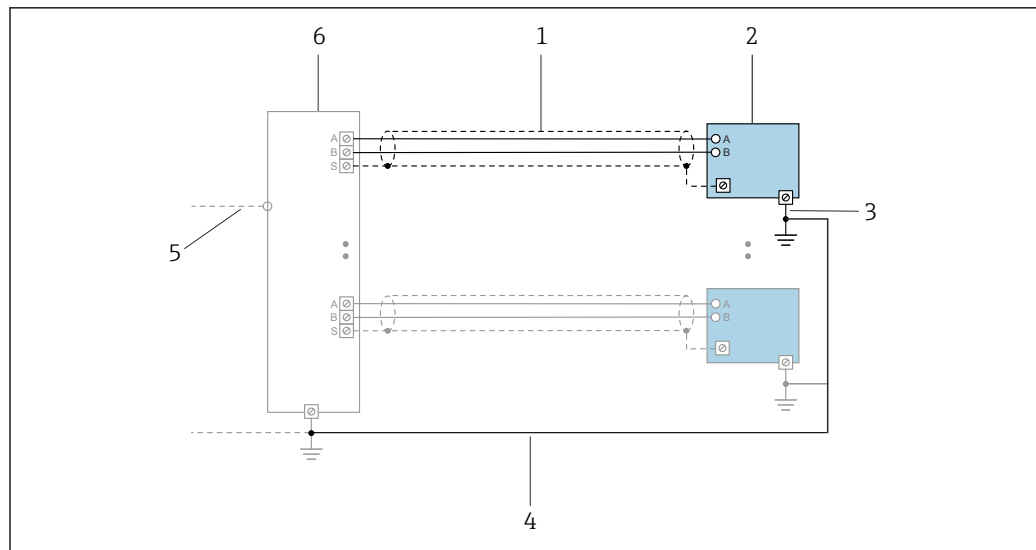

A0047536

16 Connection example for PROFINET over Ethernet-APL

- 1 Cable shield
- 2 Measuring instrument
- 3 Local grounding
- 4 Potential equalization
- 5 Trunk or TCP
- 6 Field switch

7.2.7 Preparing the device

Carry out the steps in the following order:

1. Mount the sensor and transmitter.
2. Sensor connection housing: Connect connecting cable.
3. Transmitter: Connect connecting cable.
4. Transmitter: Connect signal cable and cable for supply voltage.

NOTICE

Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

- Use suitable cable glands corresponding to the degree of protection.

1. Remove dummy plug if present.
2. If the measuring instrument is supplied without cable glands:
Provide suitable cable gland for corresponding connecting cable.
3. If the measuring instrument is supplied with cable glands:
Observe requirements for connecting cables → 34.

7.3 Connecting the device: Proline 500 – digital

NOTICE

An incorrect connection compromises electrical safety!

- ▶ Only properly trained specialist staff may perform electrical connection work.
- ▶ Observe applicable federal/national installation codes and regulations.
- ▶ Comply with local workplace safety regulations.
- ▶ Always connect the protective ground cable ⊕ before connecting additional cables.
- ▶ When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.


7.3.1 Connecting the connecting cable

NOTICE

Risk of damaging the electronic components!

- ▶ Connect the sensor and transmitter to the same potential equalization.
- ▶ Only connect the sensor to a transmitter with the same serial number.

Connecting cable terminal assignment

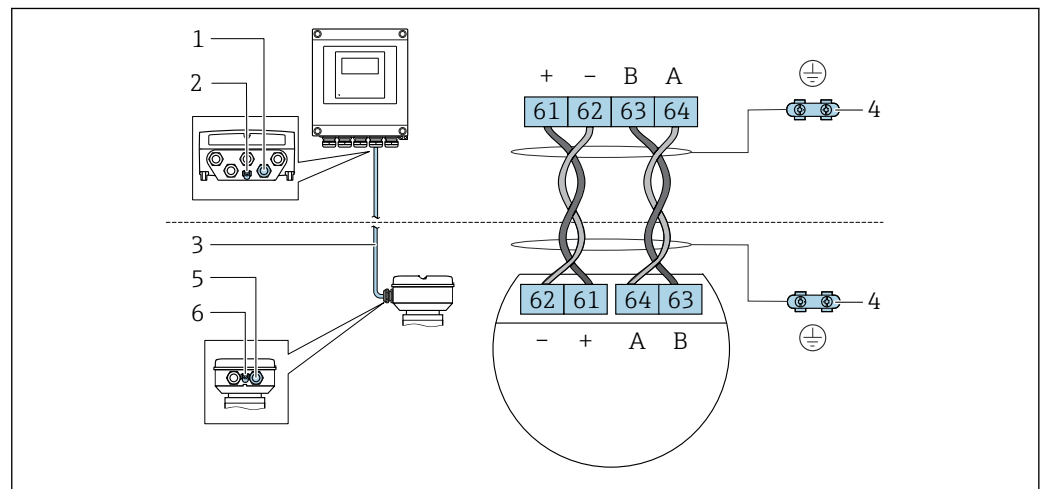

- 1 Cable entry for cable on transmitter housing
- 2 Protective earth (PE)
- 3 Connecting cable ISEM communication
- 4 Grounding via ground connection; in the version with a device plug, grounding is ensured through the plug itself
- 5 Cable entry for cable or connection of device plug on sensor connection housing
- 6 Protective earth (PE)

Connecting the connecting cable to the sensor connection housing


- Connection via terminals with order code for "Sensor connection housing":
 - Option A "Aluminum, coated" → 42
 - Option B "Stainless" → 43
- Connection via connectors with order code for "Sensor connection housing":
 - Option C "Ultra-compact hygienic, stainless" → 44

Connecting the connecting cable to the transmitter

The cable is connected to the transmitter via terminals → 45.

Connecting the sensor connection housing via terminals

For the device version with the order code for "Sensor connection housing":
Option A "Aluminum coated"

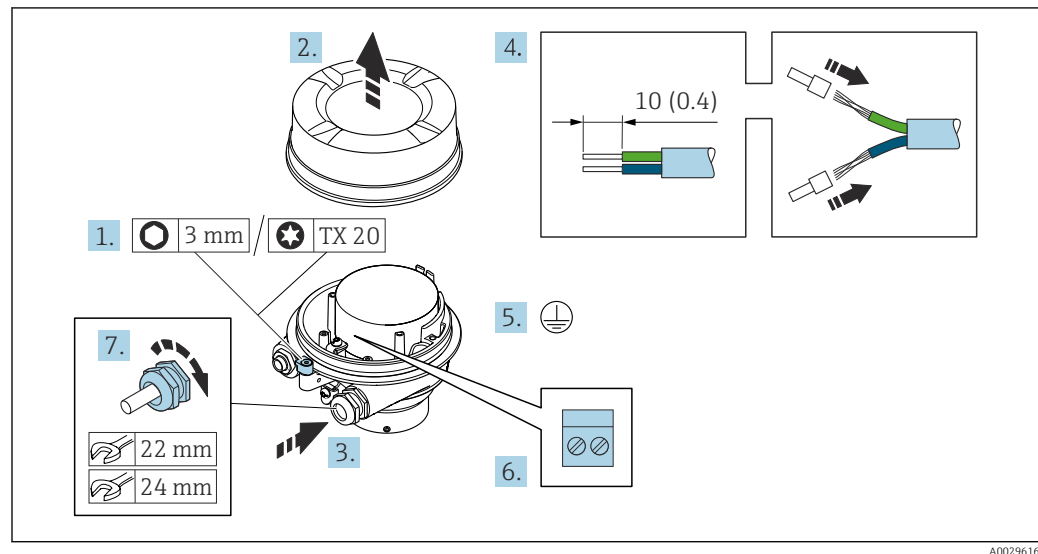

1. Loosen the securing clamp of the housing cover.
2. Unscrew the housing cover.
3. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
5. Connect the protective ground.
6. Connect the cable in accordance with the connecting cable terminal assignment.
7. Firmly tighten the cable glands.
 - ↳ This concludes the process for connecting the connecting cable.


⚠ WARNING

Housing degree of protection voided due to insufficient sealing of the housing.

- Screw in the thread on the cover without using any lubricant. The thread on the cover is coated with a dry lubricant.
8. Screw on the housing cover.
 9. Tighten the securing clamp of the housing cover.

Connecting the sensor connection housing via terminals

For the device version with the order code for "Sensor connection housing":
Option **B** "Stainless"

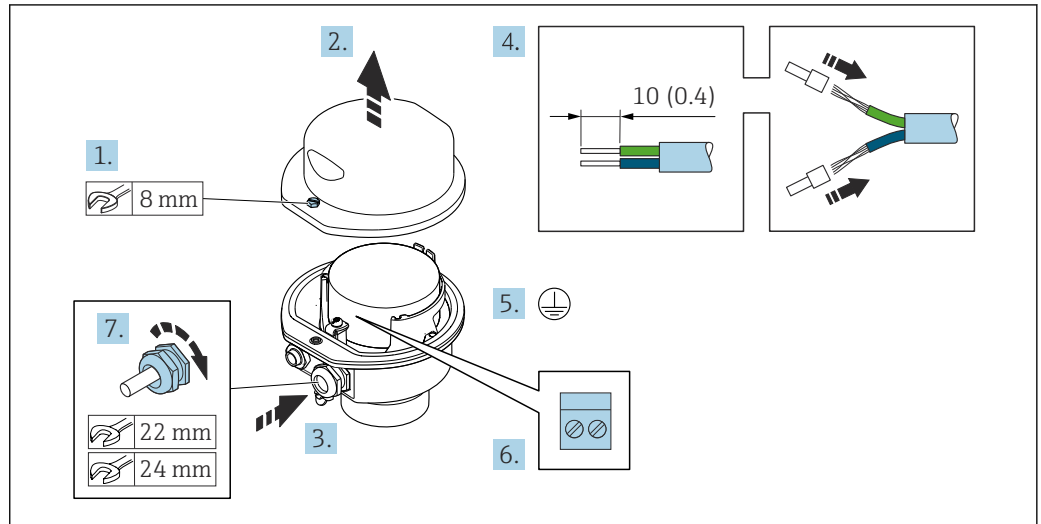


A0029613

1. Release the securing screw of the housing cover.
2. Open the housing cover.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
5. Connect the protective ground.
6. Connect the cable in accordance with the connecting cable terminal assignment.
7. Firmly tighten the cable glands.
 - This concludes the process for connecting the connecting cable.
8. Close the housing cover.
9. Tighten the securing screw of the housing cover.

Connecting the sensor connection housing via the connector


For the device version with the order code for "Sensor connection housing":
Option **C** "Ultra-compact hygienic, stainless"

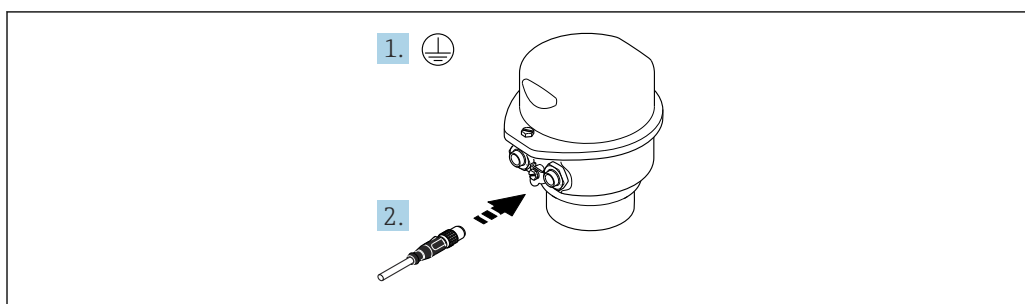

A0029615

1. Connect the protective ground.
2. Connect the connector.


Connecting the connecting cable to the transmitter

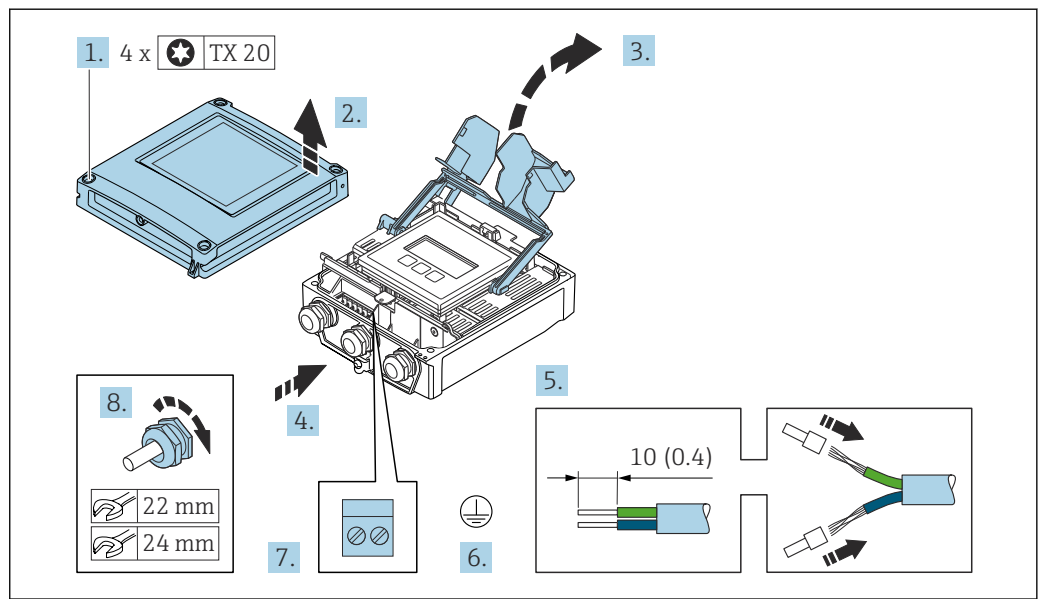

A0029597

1. Loosen the 4 fixing screws on the housing cover.
2. Open the housing cover.
3. Fold open the terminal cover.
4. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
5. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
6. Connect the protective ground.
7. Connect the cable according to the terminal assignment for the connecting cable → 41.
8. Firmly tighten the cable glands.
 - ↳ The process for connecting the connecting cable is now complete.
9. Close the housing cover.
10. Tighten the securing screw of the housing cover.
11. After connecting the connecting cable:
 - Connect the signal cable and the supply voltage cable → 46.

7.3.2 Connecting the transmitter

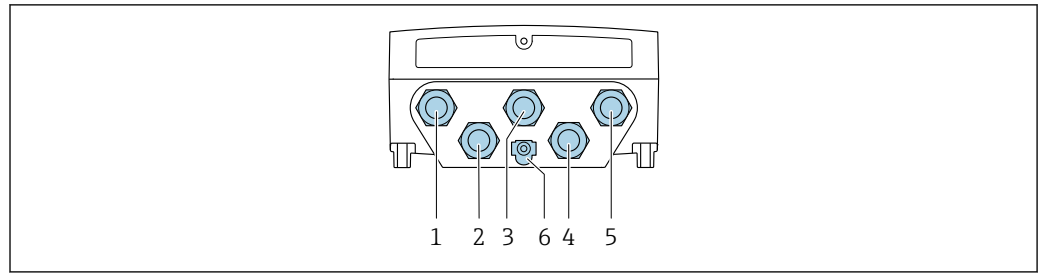


A0028200

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output
- 4 Terminal connection for connecting cable between sensor and transmitter
- 5 Terminal connection for signal transmission, input/output; optional: connection for external WLAN antenna
- 6 Protective earth (PE)

i In addition to connecting the device via and the available input/outputs, additional connection options are also available:
Integrate into a network via the service interface (CDI-RJ45) → 49.

Connecting the plug

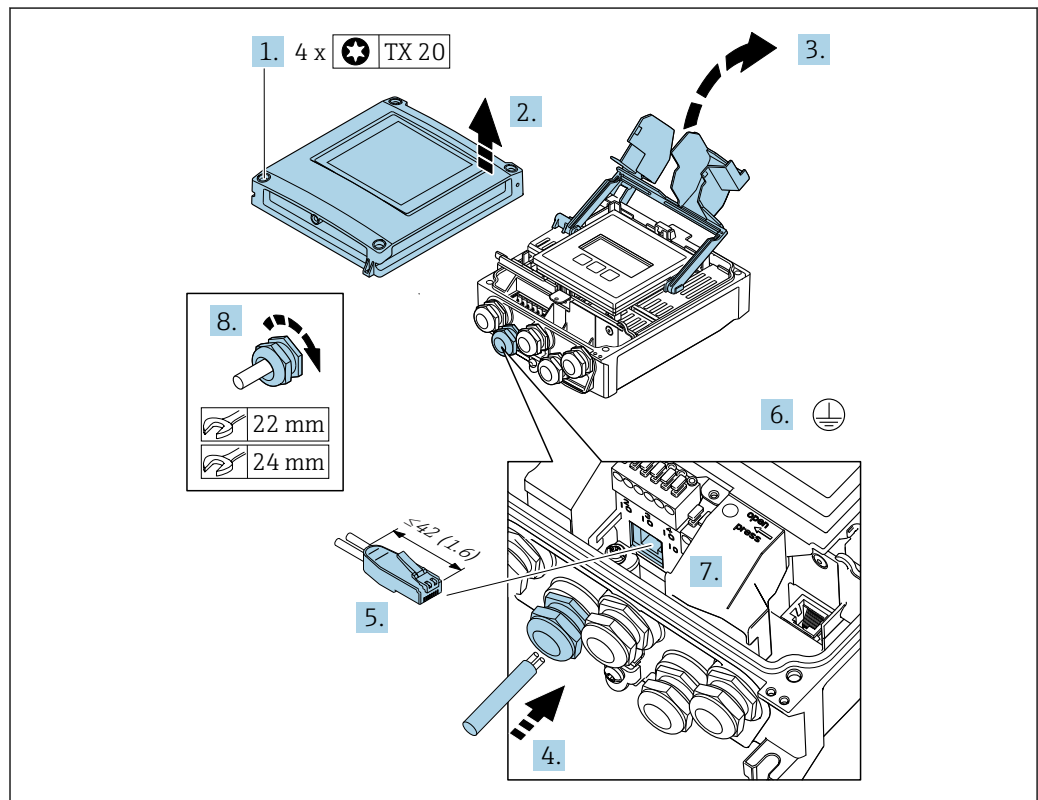


A0033987

1. Loosen the 4 fixing screws on the housing cover.
2. Open the housing cover.
3. Fold open the terminal cover.
4. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
5. Strip the cable and cable ends and connect to the RJ45 connector.
6. Connect the protective ground.

7. Plug in the RJ45 connector.
8. Firmly tighten the cable glands.
 - ↳ This concludes the connection process.

Connecting the supply voltage and additional inputs/outputs

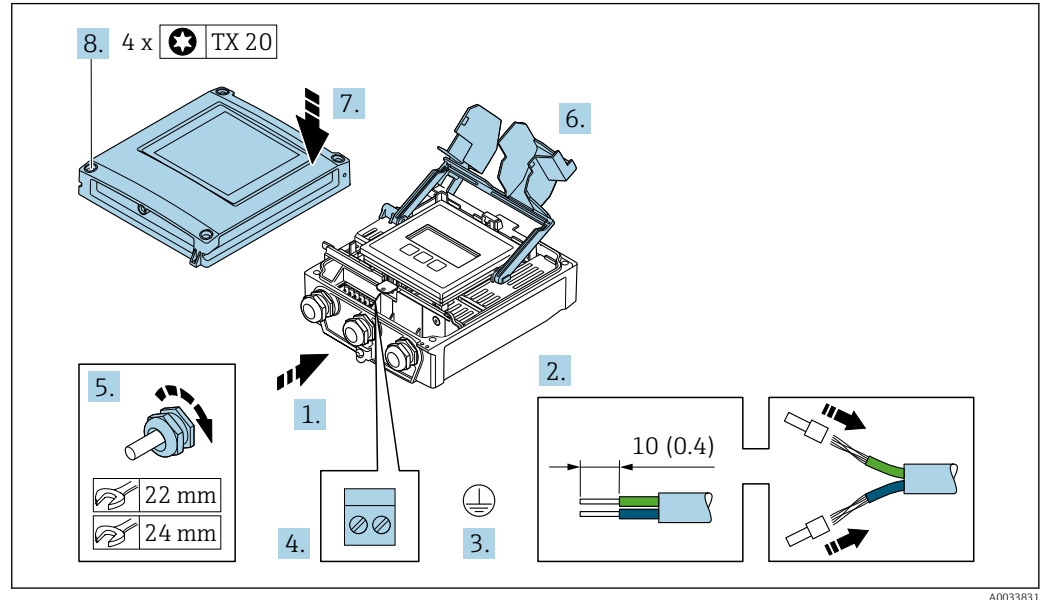

1. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
2. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
3. Connect the protective ground.
4. Connect the cable according to the terminal assignment.
 - ↳ **Signal cable terminal assignment:** The device-specific terminal assignment is documented on an adhesive label in the terminal cover.
 - Supply voltage terminal assignment:** Adhesive label in the terminal cover or → 38.
5. Firmly tighten the cable glands.
 - ↳ This concludes the cable connection process.
6. Close the terminal cover.
7. Close the housing cover.

⚠ WARNING

Housing degree of protection may be voided due to insufficient sealing of the housing.

- Screw in the screw without using any lubricant.

NOTICE

Excessive tightening torque applied to the fixing screws!


Risk of damaging the plastic transmitter.

- Tighten the fixing screws as per the tightening torque: 2.5 Nm (1.8 lbf ft)

8. Tighten the 4 fixing screws on the housing cover.

Removing a cable

To remove a cable from the terminal:

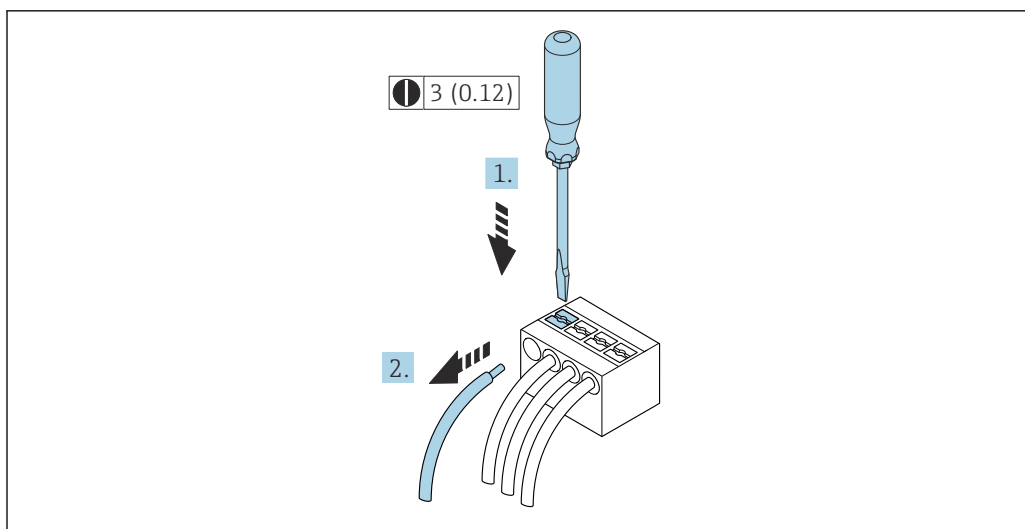

A0029598

17 Unit mm(in)

1. Use a flat-blade screwdriver to press down on the slot between the two terminal holes.
2. Remove the cable end from the terminal.

7.3.3 Integrating the transmitter into a network

This section only presents the basic options for integrating the device into a network.


For information on the procedure to follow to connect the transmitter correctly → 41.

Integrating via the service interface

The device is integrated via the connection to the service interface (CDI-RJ45).

Note the following when connecting:

- Recommended cable: CAT5e, CAT6 or CAT7, with shielded connector (e.g. brand: YAMAICHI ; Part No. Y-ConProfixPlug63/Prod. ID: 82-006660)
- Maximum cable thickness: 6 mm
- Length of plug including anti-bend protection: 42 mm
- Bending radius: 5 x cable thickness

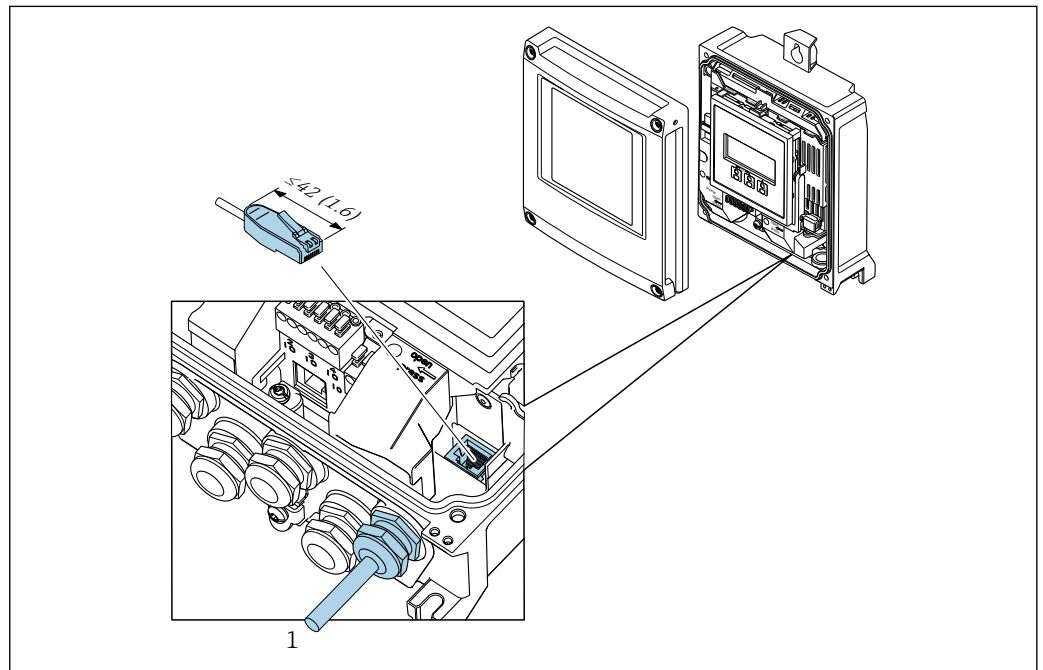

1 Service interface (CDI-RJ45)



An adapter for the RJ45 to the M12 plug is optionally available for the non-hazardous area:

Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. The connection to the service interface can thus be established via an M12 plug without opening the device.

7.4 Connecting the device: Proline 500

NOTICE

An incorrect connection compromises electrical safety!

- ▶ Only properly trained specialist staff may perform electrical connection work.
- ▶ Observe applicable federal/national installation codes and regulations.
- ▶ Comply with local workplace safety regulations.
- ▶ Always connect the protective ground cable ⊕ before connecting additional cables.
- ▶ When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.

7.4.1 Connecting the connecting cable

NOTICE

Risk of damaging the electronic components!


- ▶ Connect the sensor and transmitter to the same potential equalization.
- ▶ Only connect the sensor to a transmitter with the same serial number.

⚠ CAUTION

Measurement error due to shortening of the connecting cable

- ▶ The connecting cable is ready for installation and must be used in the length supplied. Shortening the connecting cable can affect the sensor's measurement accuracy.

Connecting cable terminal assignment

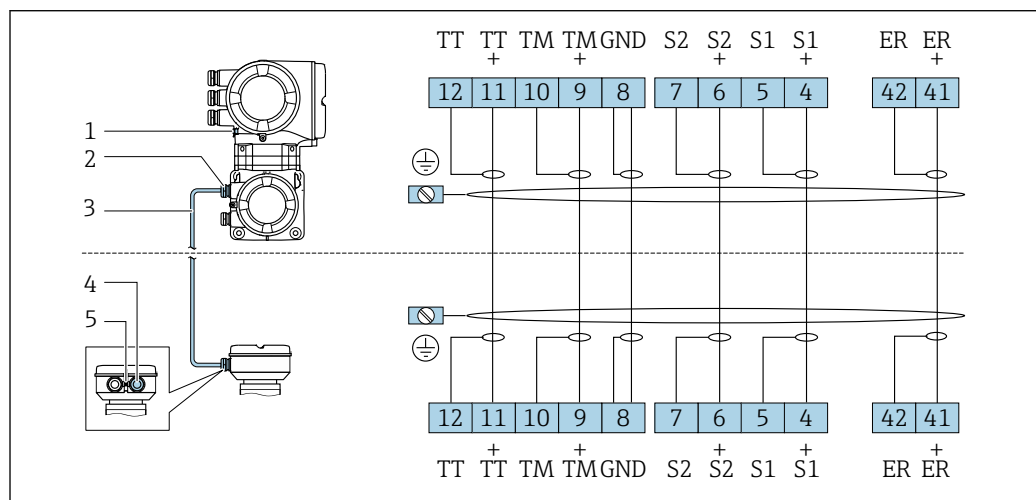

A0028197

- 1 Protective earth (PE)
- 2 Cable entry for connecting cable on transmitter connection housing
- 3 Connecting cable
- 4 Cable entry for connecting cable on sensor connection housing
- 5 Protective earth (PE)


Connecting the connecting cable to the sensor connection housing

Connection via terminals with order code for "Housing":

- Option **A** "Aluminum coated" → ☞ 51
- Option **B** "Stainless" → ☞ 52
- Option **L** "Cast, stainless" → ☞ 51

Connecting the sensor connection housing via terminals

For the device version with the order code for "Housing":
Option **A** "Aluminum coated"

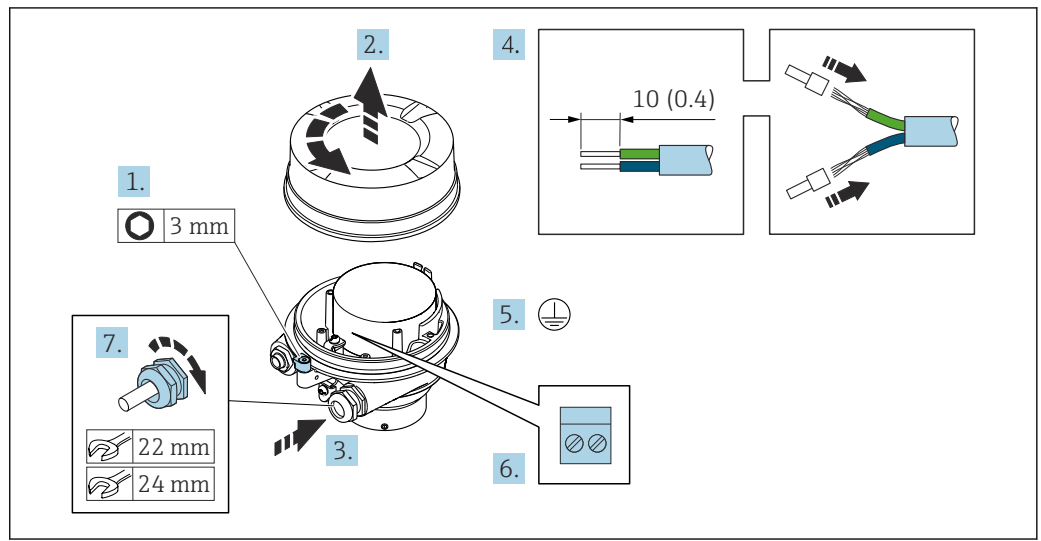

A0029612

1. Loosen the securing clamp of the housing cover.
2. Unscrew the housing cover.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
5. Connect the protective ground.
6. Connect the cable in accordance with the connecting cable terminal assignment.
7. Firmly tighten the cable glands.
 - The process for connecting the connecting cable is now complete.


⚠ WARNING

Housing degree of protection voided due to insufficient sealing of the housing.

- Screw in the thread on the cover without using any lubricant. The thread on the cover is coated with a dry lubricant.
8. Screw on the housing cover.
 9. Tighten the securing clamp of the housing cover.

Connecting the sensor connection housing via terminals


For the device version with the order code for "Housing":
Option B "Stainless"

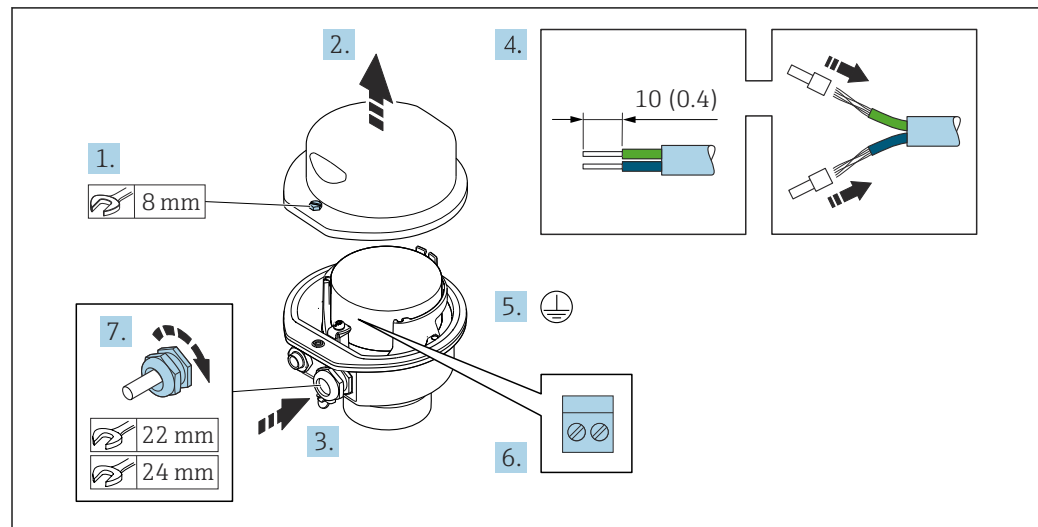

A0029613

1. Release the securing screw of the housing cover.
2. Open the housing cover.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
5. Connect the protective ground.
6. Connect the cable in accordance with the connecting cable terminal assignment.
7. Firmly tighten the cable glands.
 - ➔ This concludes the process for connecting the connecting cable.
8. Close the housing cover.
9. Tighten the securing screw of the housing cover.


Attaching the connecting cable to the transmitter

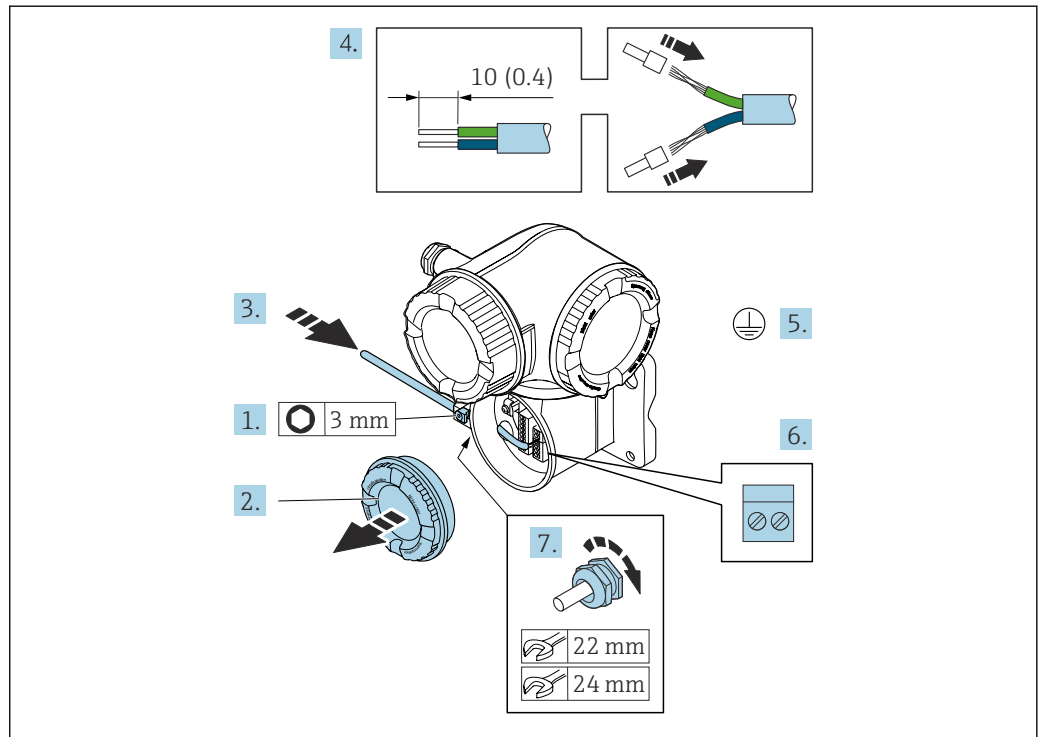

A0029592

1. Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
5. Connect the protective ground.
6. Connect the cable in accordance with the connecting cable terminal assignment
→ 50.
7. Firmly tighten the cable glands.
↳ This concludes the process for attaching the connecting cable.
8. Screw on the connection compartment cover.
9. Tighten the securing clamp of the connection compartment cover.
10. After connecting the connecting cable:
Connect the signal cable and the supply voltage cable .

7.4.2 Connecting the transmitter

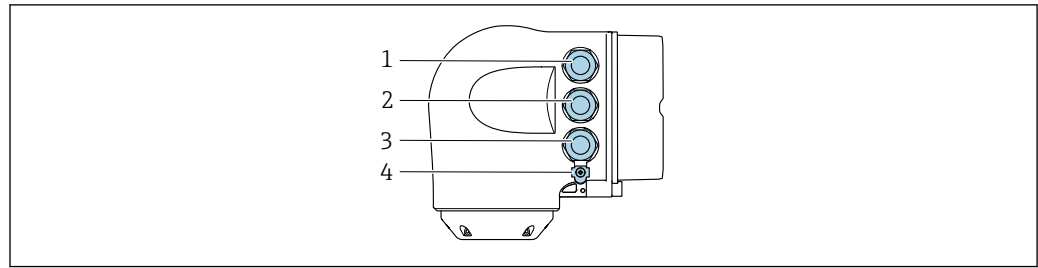


A0026781

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output or terminal connection for network connection via service interface (CDI-RJ45)
- 4 Protective earth (PE)


i In addition to connecting the device via PROFINET over Ethernet-APL and the available inputs/outputs, an additional connection option is also available: Integrate into a network via the service interface (CDI-RJ45) → 57.

Connecting connector

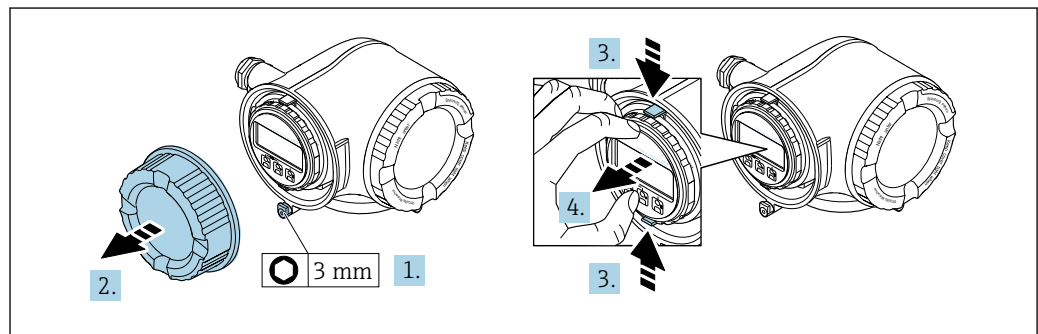


A0029813

- 1. Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Squeeze the tabs of the display module holder together.
- 4. Remove the display module holder.

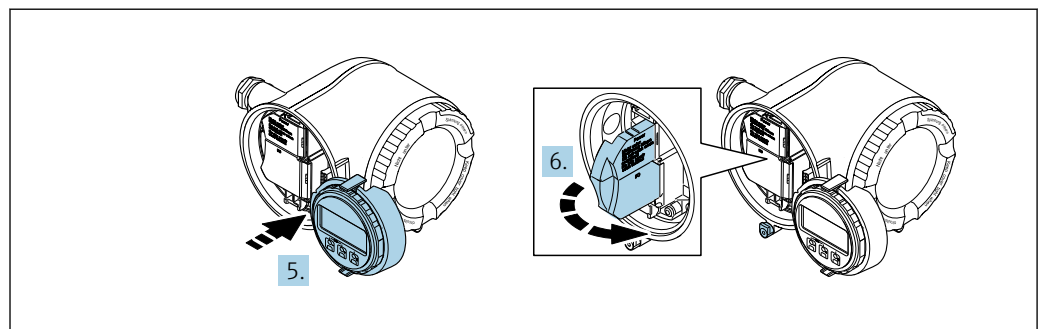

A0029814


- 5. Attach the holder to the edge of the electronics compartment.
- 6. Open the terminal cover.

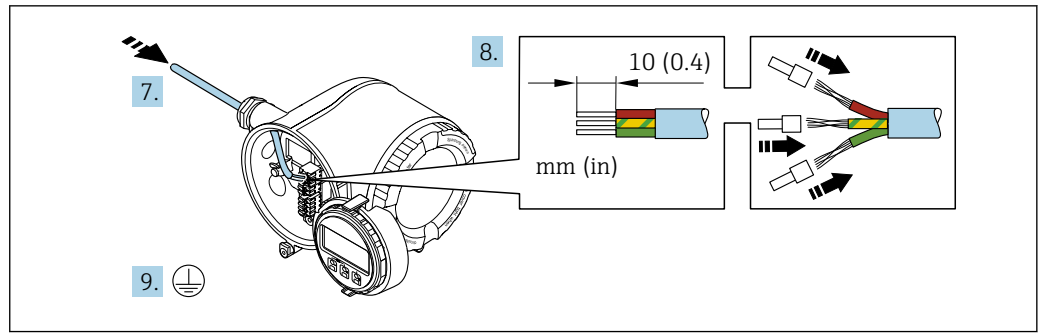

A0051111


7. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
8. Strip the cable and cable ends and connect to terminals 26-27. In the case of stranded cables, also fit ferrules.
9. Connect protective earth (PE).
10. Firmly tighten the cable glands.
 - This concludes the connection via the APL port.

Connecting the supply voltage and additional inputs/outputs

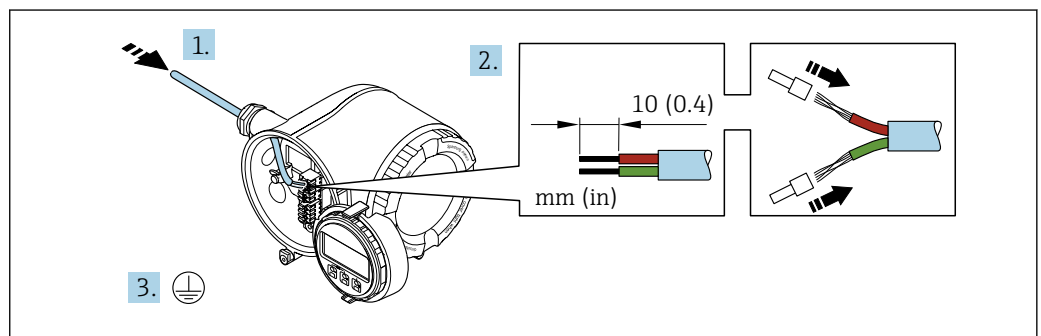

A0051128

1. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
2. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
3. Connect the protective ground.

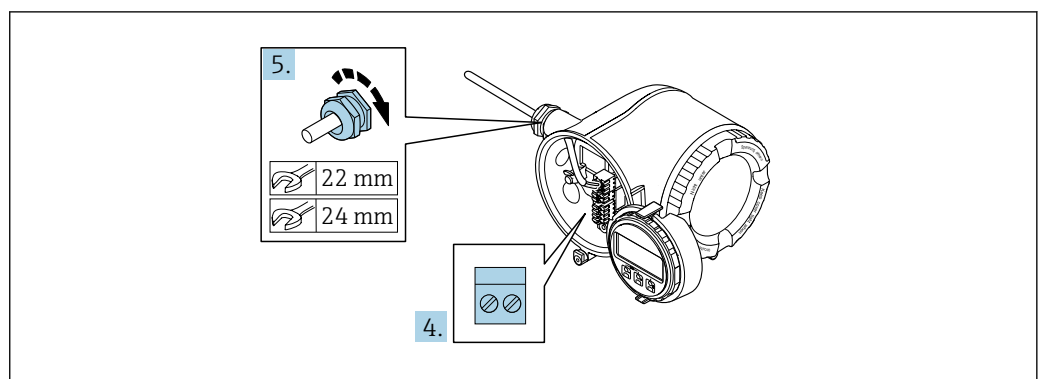


A0033984

4. Connect the cable according to the terminal assignment.
 - **Signal cable terminal assignment:** The device-specific terminal assignment is documented on an adhesive label in the terminal cover.
 - Supply voltage terminal assignment:** Adhesive label in the terminal cover or → 38.

5. Firmly tighten the cable glands.
↳ This concludes the cable connection process.
6. Close the terminal cover.
7. Fit the display module holder in the electronics compartment.
8. Screw on the connection compartment cover.
9. Secure the securing clamp of the connection compartment cover.

Removing a cable

To remove a cable from the terminal:

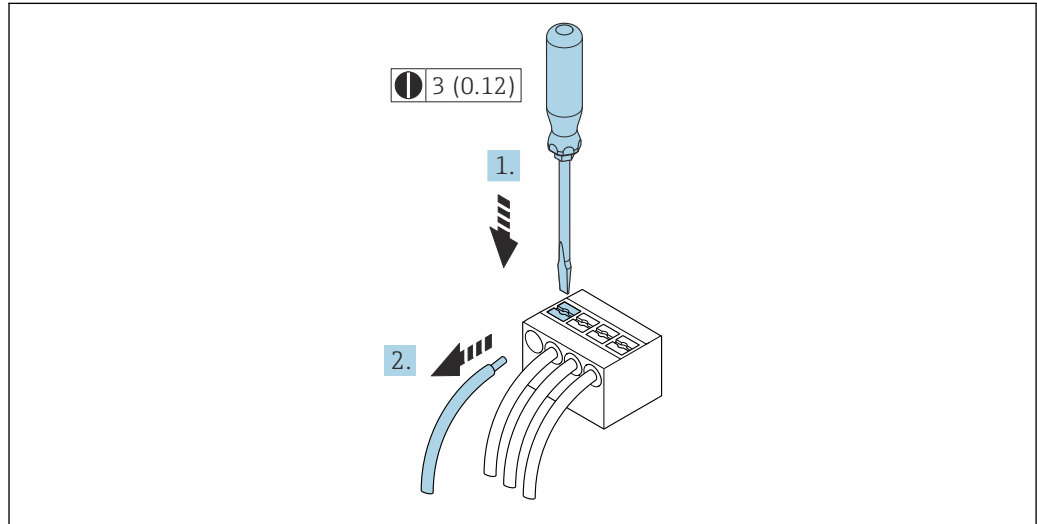

A0029598

18 Unit mm(in)

1. Use a flat-blade screwdriver to press down on the slot between the two terminal holes.
2. Remove the cable end from the terminal.

7.4.3 Integrating the transmitter into a network

This section only presents the basic options for integrating the device into a network.


For information on the procedure to follow to connect the transmitter correctly → 50.

Integrating via the service interface

The device is integrated via the connection to the service interface (CDI-RJ45).

Note the following when connecting:

- Recommended cable: CAT 5e, CAT 6 or CAT 7, with shielded connector (e.g. manufacturer YAMAICHI ; Part No Y-ConProfixPlug63 / Prod. ID: 82-006660)
- Maximum cable thickness: 6 mm
- Length of plug including anti-bend protection: 42 mm
- Bending radius: 5 x cable thickness

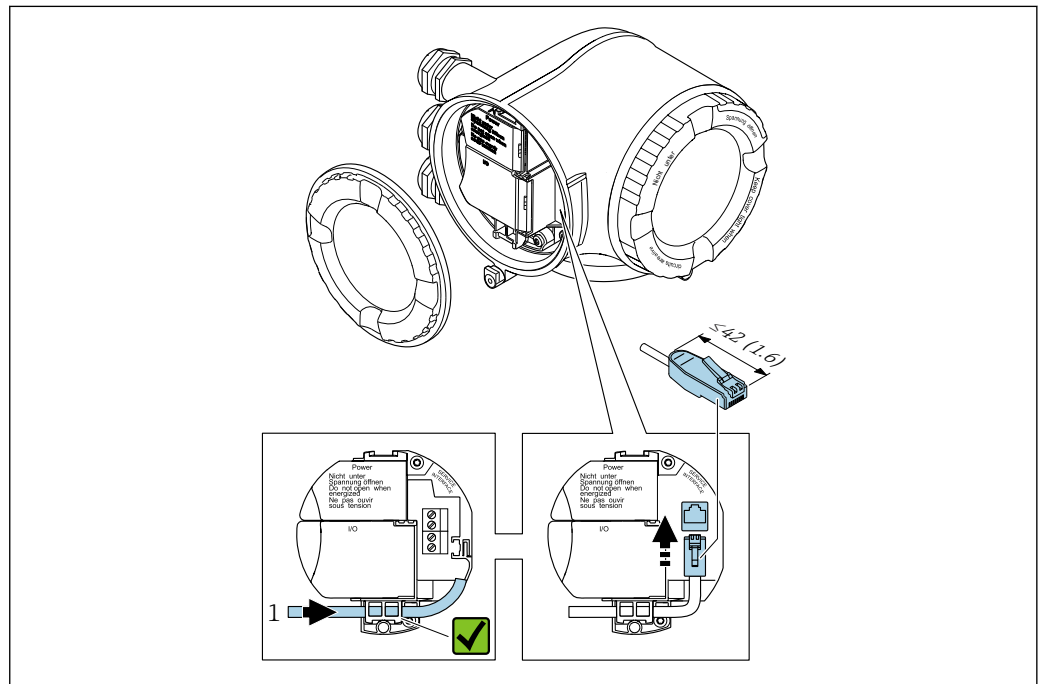

1 Service interface (CDI-RJ45)

- i** An adapter for the RJ45 to the M12 plug is optionally available:
Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. The connection to the service interface can thus be established via an M12 plug without opening the device.

7.5 Potential equalization

7.5.1 Requirements


For potential equalization:

- Pay attention to in-house grounding concepts
- Take account of operating conditions like the pipe material and grounding
- Connect the medium, sensor and transmitter to the same electric potential
- Use a ground cable with a minimum cross-section of 6 mm² (10 AWG) and a cable lug for potential equalization connections

7.6 Special connection instructions

7.6.1 Connection examples


Current output 4 to 20 mA (without HART)

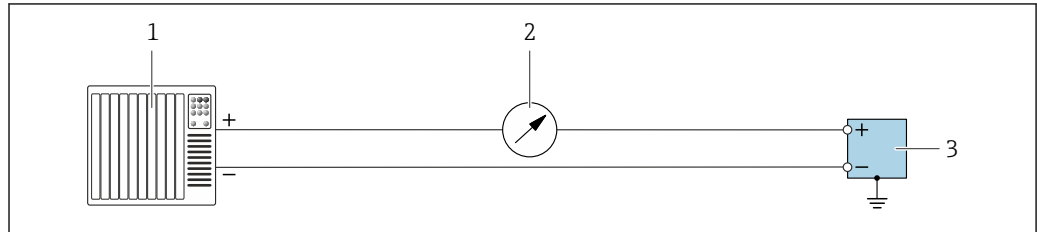

A0055851

19 Connection example for 4 to 20 mA current output (active)

- 1 Automation system with current input (e.g. PLC)
- 2 Optional additional display unit: Observe maximum load
- 3 Flowmeter with current output (active)

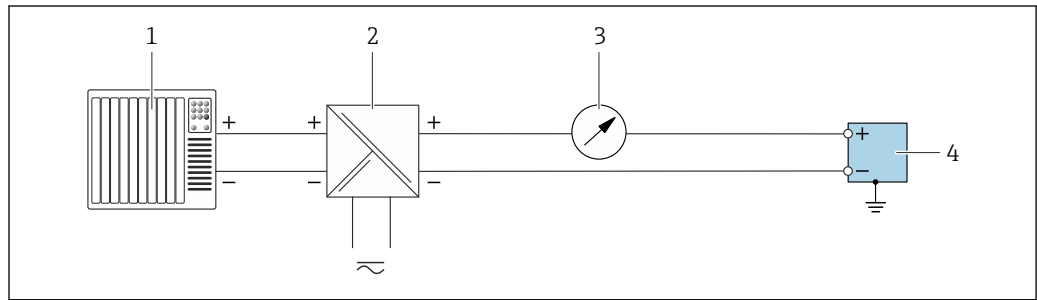


A0055852

20 Connection example for 4 to 20 mA current output (passive)

- 1 Automation system with current input (e.g. PLC)
- 2 Power supply
- 3 Optional additional display unit: Observe maximum load
- 4 Transmitter with current output (passive)


Current input 4 to 20 mA

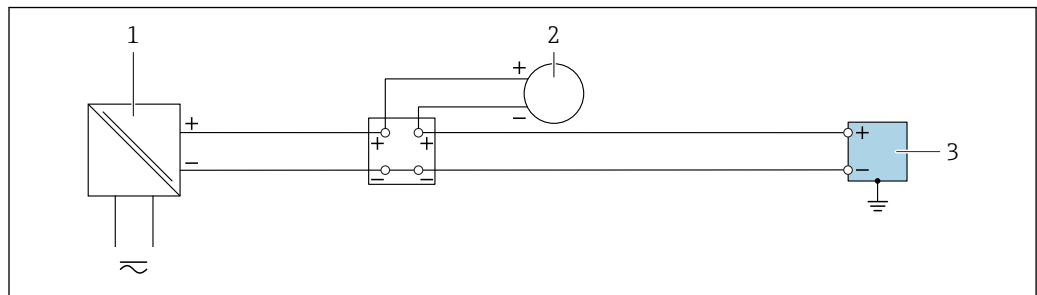

A0055853

21 Connection example for 4 to 20 mA current input


- 1 Power supply
- 2 External measuring instrument with 4 to 20 mA passive current output. e.g. pressure or temperature)
- 3 Transmitter with 4 to 20 mA current input

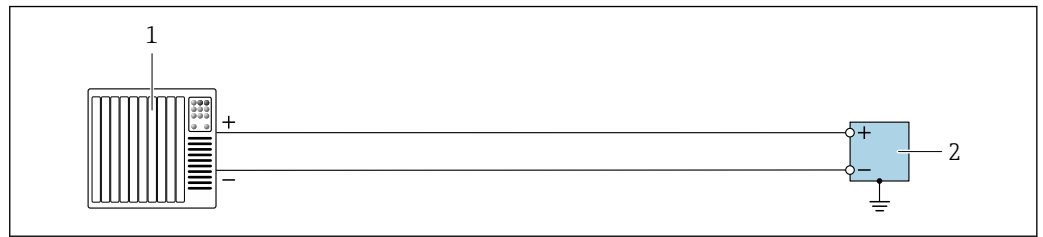Pulse output/frequency output/switch output

A0055856

22 Connection example for pulse output/frequency output/switch output (active)


- 1 Automation system with pulse input/frequency input/switch input (e.g. PLC)
- 2 Transmitter with pulse output/frequency output/switch output (active)

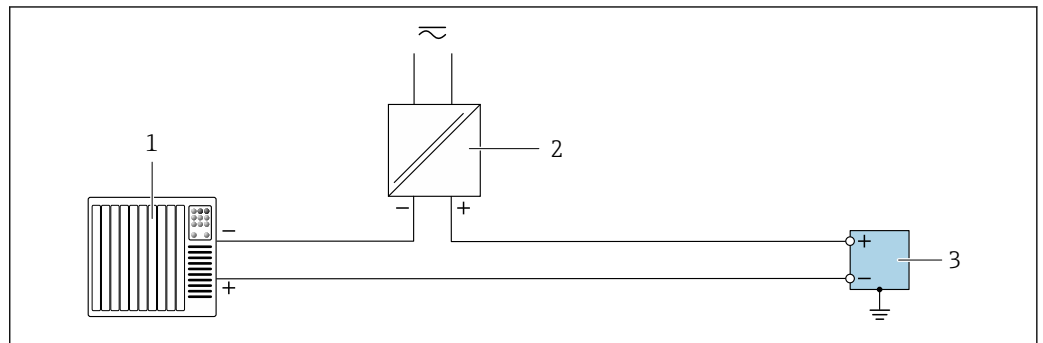

A0055856

23 Connection example for pulse output/frequency output/switch output (passive)

- 1 Automation system with pulse input/frequency input/switch input (e.g. PLC)
- 2 Power supply
- 3 Transmitter with pulse output/frequency output/switch output (passive)

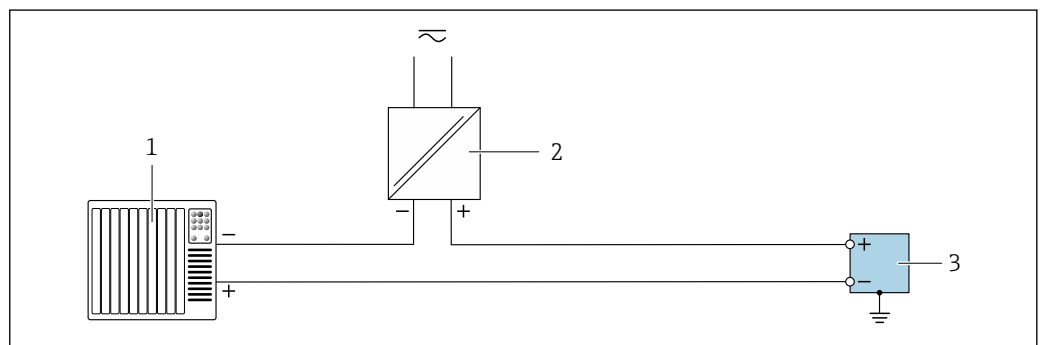
Relay output

A0055859

24 Connection example for relay output

- 1 Automation system with switch input (e.g. PLC)
- 2 Power supply
- 3 Transmitter with relay output

Status input

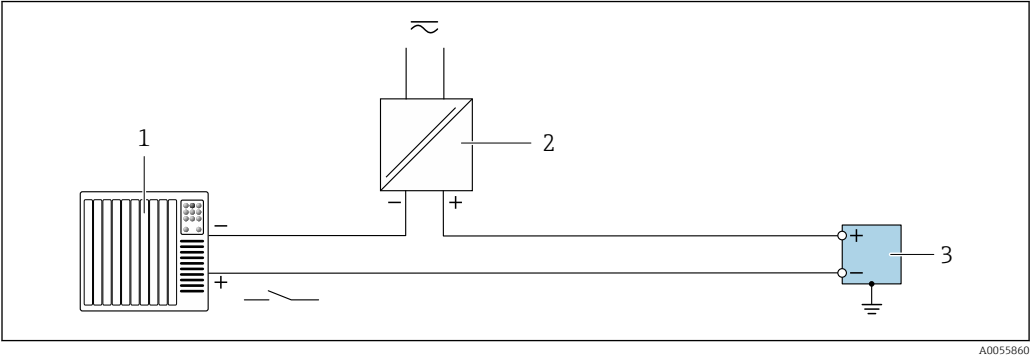

25 Connection example for status input

1 Automation system with switch output passive e.g. PLC)

2 Power supply

3 Transmitter with status input

Ethernet-APL

See <https://www.profibus.com> Ethernet-APL White Paper "

7.7 Hardware settings

7.7.1 Setting the device name

A measuring point can be quickly identified within a plant on the basis of the tag name. The factory-assigned device name can be changed using the DIP switches or the automation system.

Example: EH-Promass500-XXXX

EH	Endress+Hauser
Promass	Instrument family
500	Transmitter
XXXX	Serial number of the device

The device name currently used is displayed in Setup → Name of station .

Setting the device name using the DIP switches

The last part of the device name can be set using DIP switches 1-8. The address range is between 1 and 254 (factory setting: serial number of the device)

Overview of the DIP switches

DIP switch	Bit	Description
1	128	Configurable part of the device name
2	64	
3	32	
4	16	
5	8	
6	4	

DIP switch	Bit	Description
7	2	
8	1	



Example: setting the device name EH-PROMASS500-065


DIP switch	ON/OFF	Bit	Device name
1	OFF	–	EH-PROMASS500-065
2	ON	64	
3...7	OFF	–	
8	ON	1	
Serial number of the device:		065	

Setting the device name: Proline 500 - digital

Risk of electric shock when opening the transmitter housing.

- ▶ Before opening the transmitter housing:
- ▶ Disconnect the device from the power supply.

 The default IP address may **not** be activated →  62.

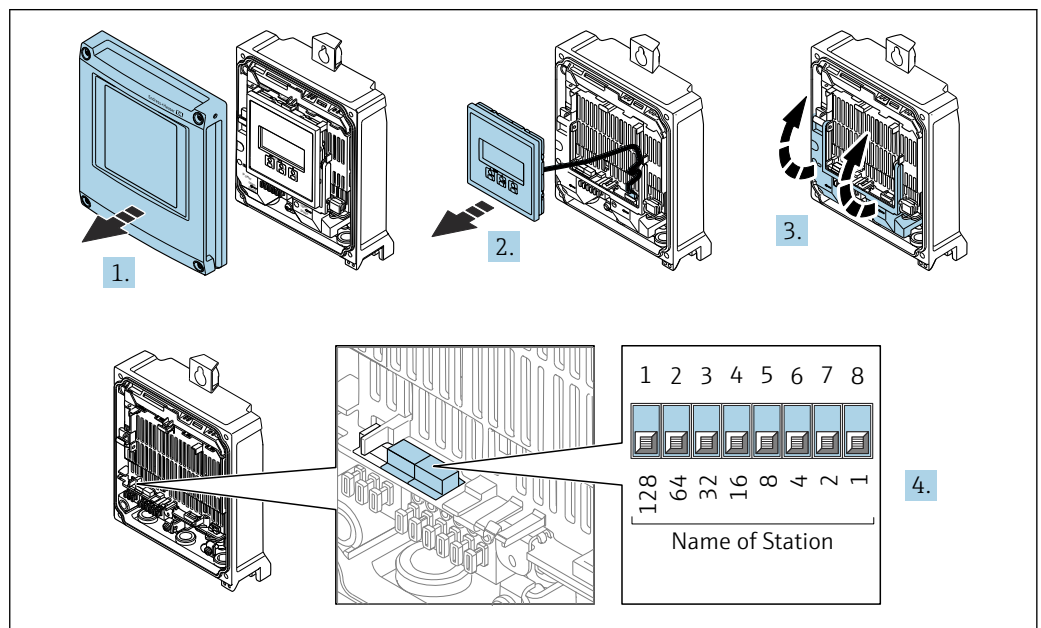

A0034497


1. Loosen the 4 fixing screws on the housing cover.
2. Open the housing cover.
3. Fold open the terminal cover.
4. Set the desired device name using the corresponding DIP switches on the I/O electronics module.
5. Reassemble the transmitter in the reverse order.
6. Reconnect the device to the power supply.
 - ↳ The configured device address is used once the device is restarted.

Setting the device name: Proline 500

Risk of electric shock when opening the transmitter housing.

- ▶ Before opening the transmitter housing:
- ▶ Disconnect the device from the power supply.

 The default IP address may **not** be activated →  63.

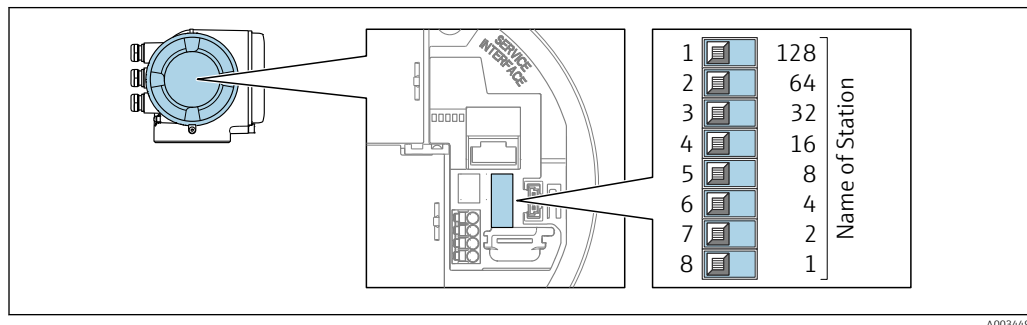


1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary .
3. Set the desired device name using the corresponding DIP switches on the I/O electronics module.
4. Reassemble the transmitter in the reverse order.
5. Reconnect the device to the power supply.
 - ↳ The configured device address is used once the device is restarted.

Setting the device name via the automation system

DIP switches 1-8 must all be set to **OFF** (factory setting) or all be set to **ON** to be able to set the device name via the automation system.

The complete device name (name of station) can be changed individually via the automation system.


-  The serial number used as part of the device name in the factory setting is not saved. It is not possible to reset the device name to the factory setting with the serial number. The device name is empty following the reset.
- When assigning the device name via the automation system: assign the device name in lower case letters.

7.7.2 Activating the default IP address

Activating the default IP address by DIP switch: Proline 500 - digital

Risk of electric shock when opening the transmitter housing.

- ▶ Before opening the transmitter housing:
- ▶ Disconnect the device from the power supply.

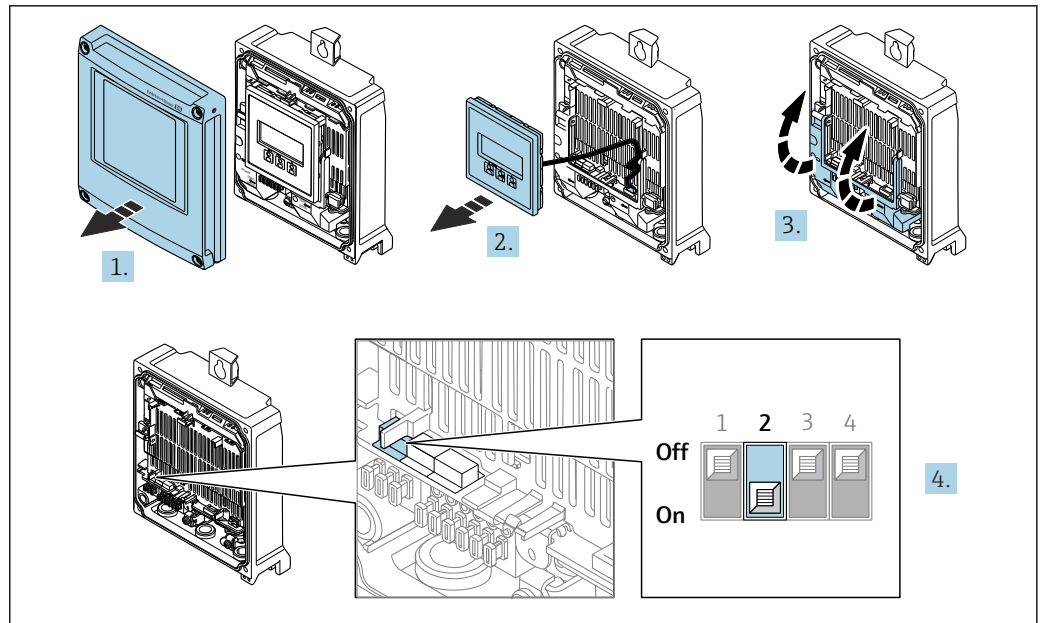


A0034500

1. Loosen the 4 fixing screws on the housing cover.
2. Open the housing cover.
3. Fold open the terminal cover.
4. Set DIP switch no. 2 on the I/O electronics module from **OFF** → **ON**.
5. Reassemble the transmitter in the reverse order.
6. Reconnect the device to the power supply.
 - ↳ The default IP address is used once the device is restarted.

Activating the default IP address by DIP switch: Proline 500

Risk of electric shock when opening the transmitter housing.

- Before opening the transmitter housing:
- Disconnect the device from the power supply.

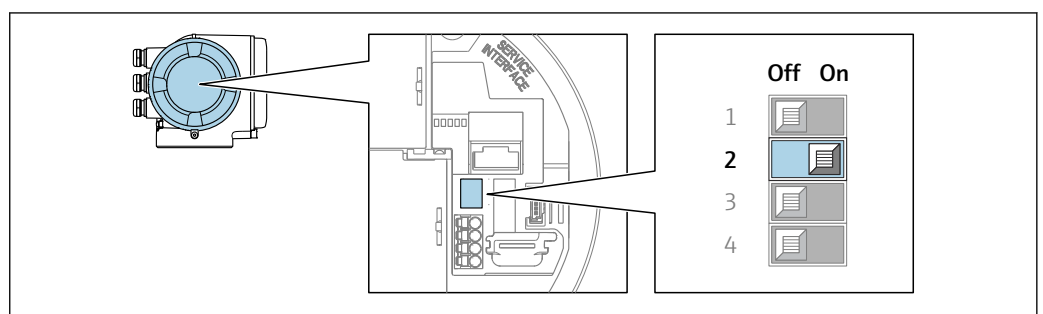

A0034499

1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary.
3. DIP switch no. 2 on the I/O electronics module from **OFF** → **ON**.
4. Reassemble the transmitter in the reverse order.
5. Reconnect the device to the power supply.
 - ↳ The default IP address is used once the device is restarted.

7.8 Ensuring the degree of protection

The measuring instrument fulfills all the requirements for the degree of protection IP66/67, Type 4X enclosure.

To ensure degree of protection IP66/67, Type 4X enclosure, carry out the following steps after making the electrical connection:

1.


Check that the housing seals are clean and fitted correctly.
2.

Dry, clean or replace the seals if necessary.
3.

Tighten all housing screws and screw covers.
4.

Firmly tighten the cable glands.
5.

To ensure that moisture does not enter the cable entry:
Route the cable so that it loops down before the cable entry ("water trap").

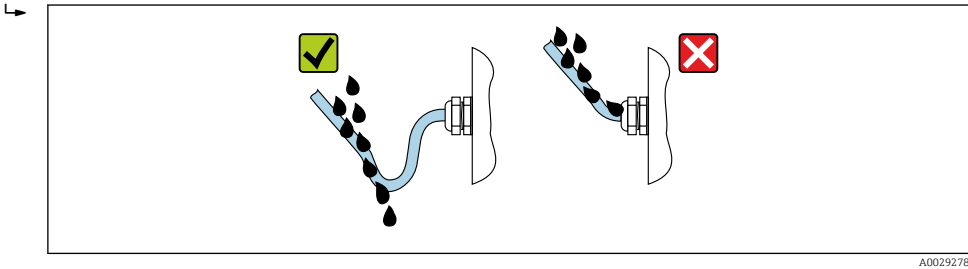

6.


The supplied cable glands and plastic dummy plugs used for the threaded cable entries do not ensure degree of protection IP66/67, Type 4X enclosure. To achieve this degree of protection, cable glands and plastic dummy plugs that are not used must be replaced by threaded dummy plugs with the degree of protection IP66/67, Type 4X enclosure.

7.9 Post-connection check

Are the device and cable undamaged (visual inspection)?	<input type="checkbox"/>
Is the protective earthing established correctly?	<input type="checkbox"/>
Do the cables used meet the requirements ?	<input type="checkbox"/>
Are the mounted cables strain-relieved and fixed securely in place?	<input type="checkbox"/>
Are all cable glands installed, securely tightened and leak-tight? Cable run with "water trap" → 64?	<input type="checkbox"/>
Is the terminal assignment correct ?	<input type="checkbox"/>
Are dummy plugs inserted in unused cable entries and have transportation plugs been replaced with dummy plugs?	<input type="checkbox"/>

8 Operation options

8.1 Overview of operation options

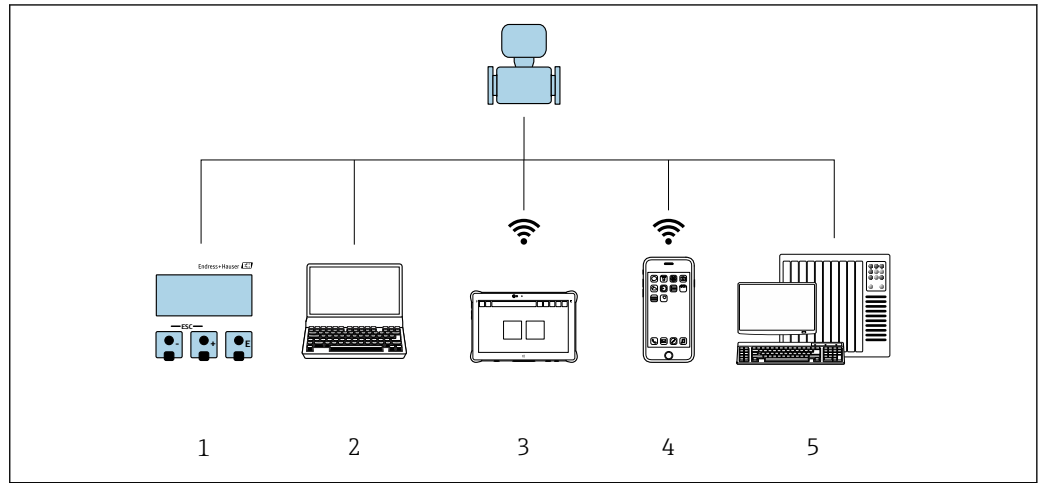




A0046226


- 1 Local operation via display module
- 2 Computer with web browser or with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM)
- 3 Field Xpert SMT70
- 4 Mobile handheld terminal
- 5 Automation system (e.g. PLC)

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

 For an overview of the operating menu for experts: see the "Description of Device Parameters" document supplied with the device →  308

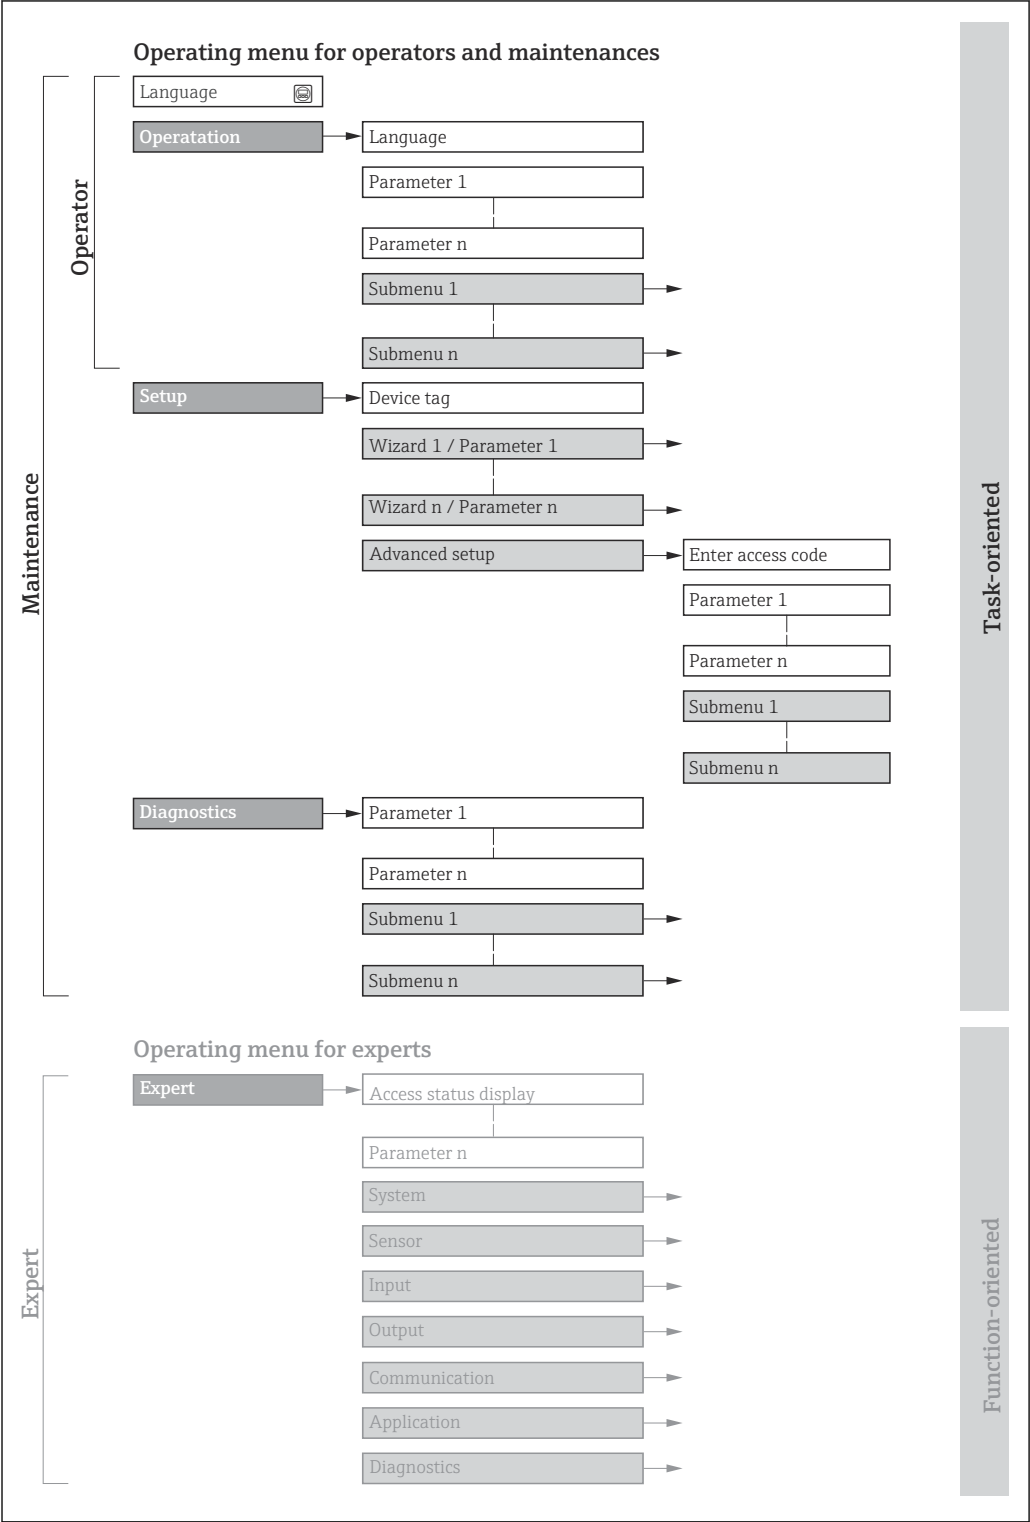

 26 Schematic structure of the operating menu

A0018237-EN

8.2.2 Operating philosophy


The individual parts of the operating menu are assigned to certain user roles (e.g. operator, maintenance etc.). Each user role contains typical tasks within the device life cycle.

Menu/parameter		User role and tasks	Content/meaning
Language	Task-oriented	Role "Operator", "Maintenance" Tasks during operation: <ul style="list-style-type: none"> ■ Configuring the operational display ■ Reading measured values 	Defining the operating language
Operation			<ul style="list-style-type: none"> ■ Defining the operating language ■ Defining the web server operating language ■ Resetting and controlling totalizers ■ Configuring the operational display (e.g. display format, display contrast) ■ Resetting and controlling totalizers
Setup		"Maintenance" role Commissioning: <ul style="list-style-type: none"> ■ Configuring the measurement ■ Configuring the inputs and outputs ■ Configuring the communication interface 	Wizard for quick commissioning: <ul style="list-style-type: none"> ■ Configuring the system units ■ Configuring the communication interface ■ Defining the medium ■ Displaying the I/O configuration ■ Configuring the inputs ■ Configuring the outputs ■ Configuring the operational display ■ Configuring the low flow cut off ■ Configuring the detection of partially filled and empty pipes Advanced setup <ul style="list-style-type: none"> ■ For more customized configuration of the measurement (adaptation to special measuring conditions) ■ Calculated process variables ■ Sensor adjustment ■ Configuring totalizers ■ Configuring the display ■ Configuring the WLAN settings ■ Data backup ■ Administration (define access code, reset measuring instrument)
Diagnostics		"Maintenance" role Troubleshooting: <ul style="list-style-type: none"> ■ Diagnostics and elimination of process and device errors ■ Measured value simulation 	Contains all parameters for error detection and analyzing process and device errors: <ul style="list-style-type: none"> ■ Diagnostic list Contains up to 5 currently pending diagnostic messages. ■ Event logbook Contains event messages that have occurred. ■ Device information Contains information for identifying the device. ■ Measured values Contains all current measured values. ■ Data logging submenu with the "Extended HistoROM" order option Storage and visualization of measured values ■ Heartbeat Technology The functionality of the device is checked on demand and the verification results are documented. ■ Simulation Used to simulate measured values or output values. ■ Testpoints

Menu/parameter		User role and tasks	Content/meaning
Expert	Function-oriented	Tasks that require detailed knowledge of the function of the device: <ul style="list-style-type: none">▪ Commissioning measurements under difficult conditions▪ Optimal adaptation of the measurement to difficult conditions▪ Detailed configuration of the communication interface▪ Error diagnostics in difficult cases	Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: <ul style="list-style-type: none">▪ System Contains all higher-level device parameters that do not affect measurement or measured value communication.▪ Sensor Configuring the measurement.▪ Input Configuring the status input.▪ Output Configuring the analog current outputs as well as the pulse/frequency and switch output.▪ Communication Configuring the digital communication interface and the web server.▪ Application Configuring the functions that go beyond the actual measurement (e.g. totalizer).▪ Diagnostics Error detection and analysis of process and device errors and for device simulation and the Heartbeat Technology menu.

8.3 Access to operating menu via local display

8.3.1 Operational display

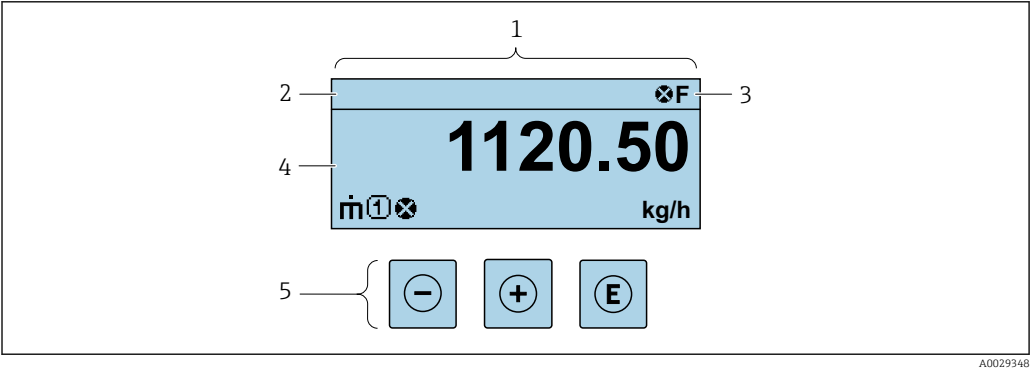

- 1 Operational display
- 2 Tag name
- 3 Status area
- 4 Display area for measured values (up to 4 lines)
- 5 Operating elements → 74

Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 192
 - F: Failure
 - C: Function check
 - S: Out of specification
 - M: Maintenance required
- Diagnostic behavior → 193
 - ⚠: Alarm
 - ⚠: Warning
 - 🔒: Locking (the device is locked via the hardware)
 - ↔: Communication (communication via remote operation is active)

Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

Measured variables

Symbol	Meaning
	Mass flow
	<ul style="list-style-type: none"> Volume flow Corrected volume flow
	<ul style="list-style-type: none"> Density Reference density
	Temperature

The number and display format of the measured variables can be configured via the **Format display** parameter (→ 138).

Totalizer

Symbol	Meaning
	Totalizer The measurement channel number indicates which of the three totalizers is displayed.

Input

Symbol	Meaning
	Status input

Measurement channel numbers


Symbol	Meaning
	Measurement channel 1 to 4 The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. Totalizer 1 to 3).

Diagnostic behavior

Symbol	Meaning
	Alarm <ul style="list-style-type: none"> Measurement is interrupted. Signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated.
	Warning <ul style="list-style-type: none"> Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable.

8.3.2 Navigation view

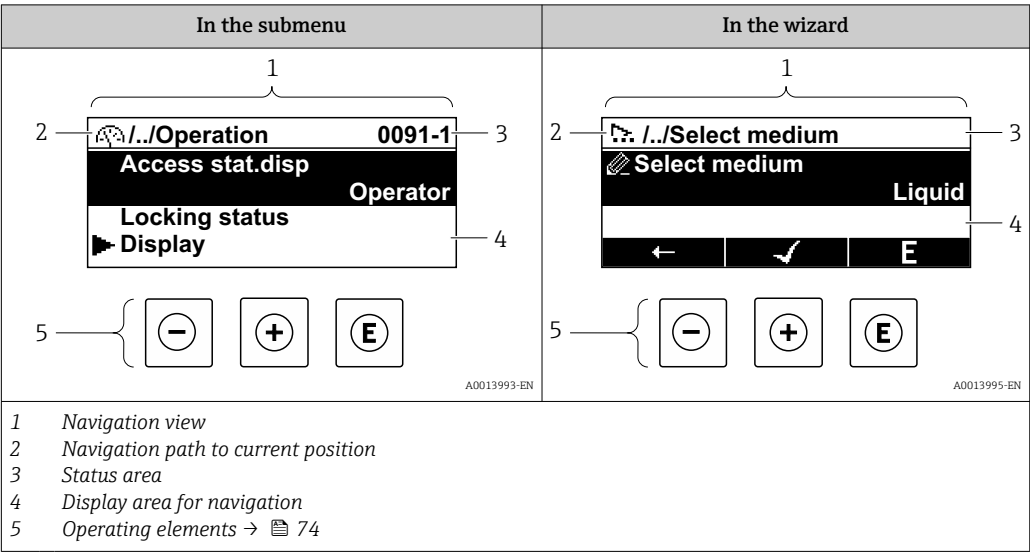


Navigation path

The navigation path to the current position is displayed at the top left in the navigation view and consists of the following elements:

- The display symbol for the menu/submenu (▶) or the wizard (⚙).
- An omission symbol (/ ../) for operating menu levels in between.
- Name of the current submenu, wizard or parameter


	Display symbol	Omission symbol	Parameter
	↓	↓	↓
Example	▶	/ ../	Indication

 For more information about the icons in the menu, refer to the "Display area" section → 70

Status area


The following appears in the status area of the navigation view in the top right corner:




- In the submenu
 - The direct access code to the parameter (e.g., 0022-1)
 - If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard
 - If a diagnostic event is present, the diagnostic behavior and status signal

-  ▪ For information on the diagnostic behavior and status signal → 192
- For information on the function and entry of the direct access code → 76





Display area

Menus


Symbol	Meaning
	Operation Is displayed: <ul style="list-style-type: none">▪ In the menu next to the "Operation" selection▪ At the left in the navigation path in the Operation menu

	Setup Is displayed: <ul style="list-style-type: none"> ■ In the menu next to the "Setup" selection ■ At the left in the navigation path in the Setup menu
	Diagnosis Is displayed: <ul style="list-style-type: none"> ■ In the menu next to the "Diagnostics" selection ■ At the left in the navigation path in the Diagnostics menu
	Expert Is displayed: <ul style="list-style-type: none"> ■ In the menu next to the "Expert" selection ■ At the left in the navigation path in the Expert menu




Submenus, wizards, parameters

Symbol	Meaning
	Submenu
	Wizards
	Parameters within a wizard
	No display symbol exists for parameters in submenus.

Locking procedure


Symbol	Meaning
	Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked. <ul style="list-style-type: none"> ■ By a user-specific access code ■ By the hardware write protection switch

Wizards

Symbol	Meaning
	Switches to the previous parameter.
	Confirms the parameter value and switches to the next parameter.
	Opens the editing view of the parameter.

8.3.3 Editing view

Numeric editor

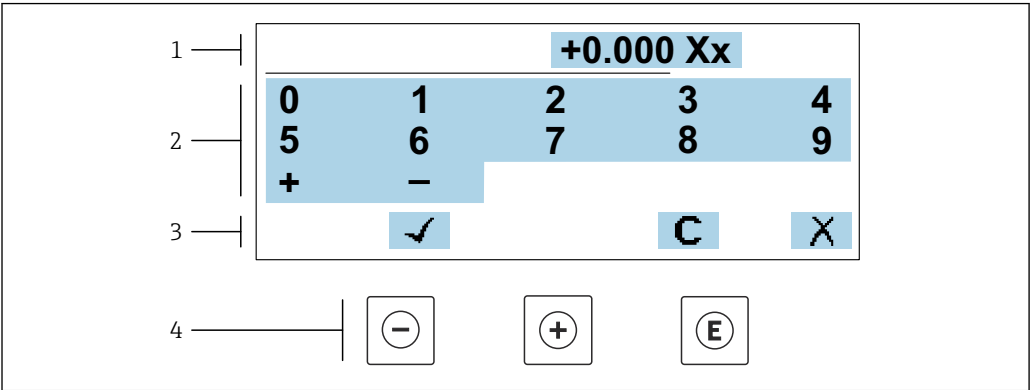


A0034250

27 For entering values in parameters (e.g. limit values)

- 1 Entry display area
- 2 Input screen
- 3 Confirm, delete or reject entry
- 4 Operating elements

Text editor

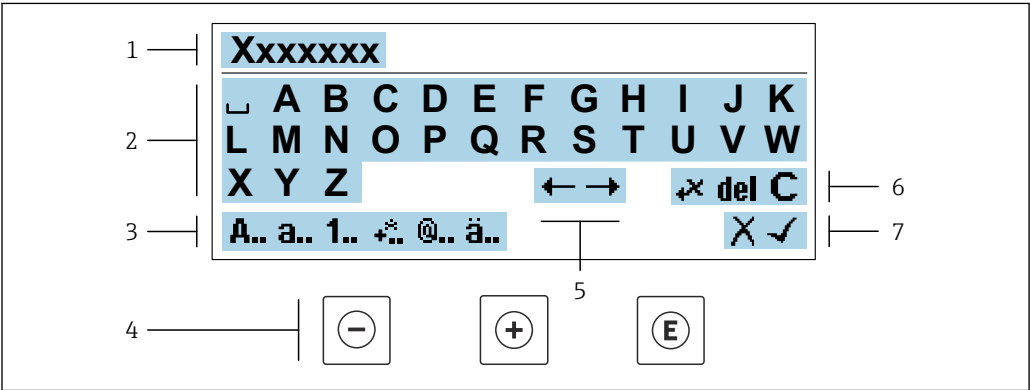


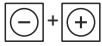
A0034114

28 For entering text in parameters (e.g. device tag)

- 1 Entry display area
- 2 Current input screen
- 3 Change input screen
- 4 Operating elements
- 5 Move entry position
- 6 Delete entry
- 7 Reject or confirm entry

Using the operating elements in the editing view





Operating key	Meaning
	Minus key Move the entry position to the left.
	Plus key Move the entry position to the right.

Operating key	Meaning
	Enter key <ul style="list-style-type: none"> Pressing the key briefly confirms your selection. Pressing the key for 2 s confirms your entry.
	Escape key combination (press keys simultaneously) Close the editing view without accepting a change.



 
 

Input screens

Symbol	Meaning
A..	Upper case
a..	Lower case
1..	Numbers
+..	Punctuation marks and special characters: = + - * / ² ³ ¼ ½ ¾ () [] < > { }
@..	Punctuation marks and special characters: ' " ^ . , ; : ? ! % μ ° € \$ £ ¥ § @ # / \ ~ & _
ä..	Umlauts and accents

Controlling data entries

Symbol	Meaning
	Move entry position
	Reject entry
	Confirm entry
	Delete character immediately to the left of the entry position
del	Delete character immediately to the right of the entry position
C	Clear all the characters entered

8.3.4 Operating elements

Operating key	Meaning
	Minus key <i>In menu, submenu</i> Moves the selection bar upwards in a picklist <i>In wizards</i> Goes to previous parameter <i>In the text and numeric editor</i> Move the entry position to the left.
	Plus key <i>In menu, submenu</i> Moves the selection bar downwards in a picklist <i>In wizards</i> Goes to the next parameter <i>In the text and numeric editor</i> Move the entry position to the right.
	Enter key <i>In the operational display</i> Pressing the key briefly opens the operating menu. <i>In menu, submenu</i> <ul style="list-style-type: none"> Pressing the key briefly: <ul style="list-style-type: none"> Opens the selected menu, submenu or parameter. Starts the wizard. If help text is open, closes the help text of the parameter. Pressing the key for 2 s in a parameter: <ul style="list-style-type: none"> If present, opens the help text for the function of the parameter. <i>In wizards</i> Opens the editing view of the parameter and confirms the parameter value <i>In the text and numeric editor</i> <ul style="list-style-type: none"> Pressing the key briefly confirms your selection. Pressing the key for 2 s confirms your entry.
	Escape key combination (press keys simultaneously) <i>In menu, submenu</i> <ul style="list-style-type: none"> Pressing the key briefly: <ul style="list-style-type: none"> Exits the current menu level and takes you to the next higher level. If help text is open, closes the help text of the parameter. Pressing the key for 2 s returns you to the operational display ("home position"). <i>In wizards</i> Exits the wizard and takes you to the next higher level <i>In the text and numeric editor</i> Exits the Editing view without applying the changes.
	Minus/Enter key combination (press and hold down the keys simultaneously) <ul style="list-style-type: none"> If keypad lock is active: <ul style="list-style-type: none"> Pressing the key for 3 s deactivates the keypad lock. If keypad lock is not active: <ul style="list-style-type: none"> Pressing the key for 3 s opens the context menu including the option for activating the keypad lock.



8.3.5 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Data backup
- Simulation



Calling up and closing the context menu

The user is in the operational display.

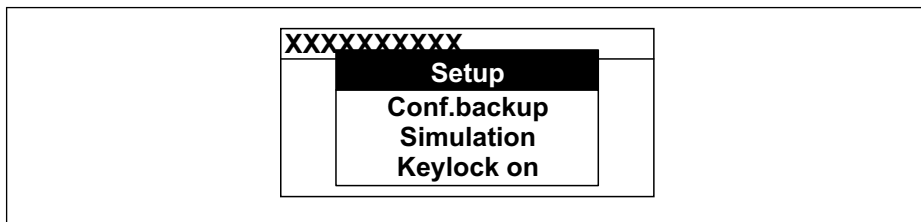

1. Press the  and  keys for longer than 3 seconds.
 - ↳ The context menu opens.



A0034608-EN

2. Press  +  simultaneously.
 - ↳ The context menu is closed and the operational display appears.

Calling up the menu via the context menu


1. Open the context menu.
2. Press  to navigate to the desired menu.
3. Press  to confirm the selection.
 - ↳ The selected menu opens.

8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

 For an explanation of the navigation view with symbols and operating elements
→  70

Example: Setting the number of displayed measured values to "2 values"

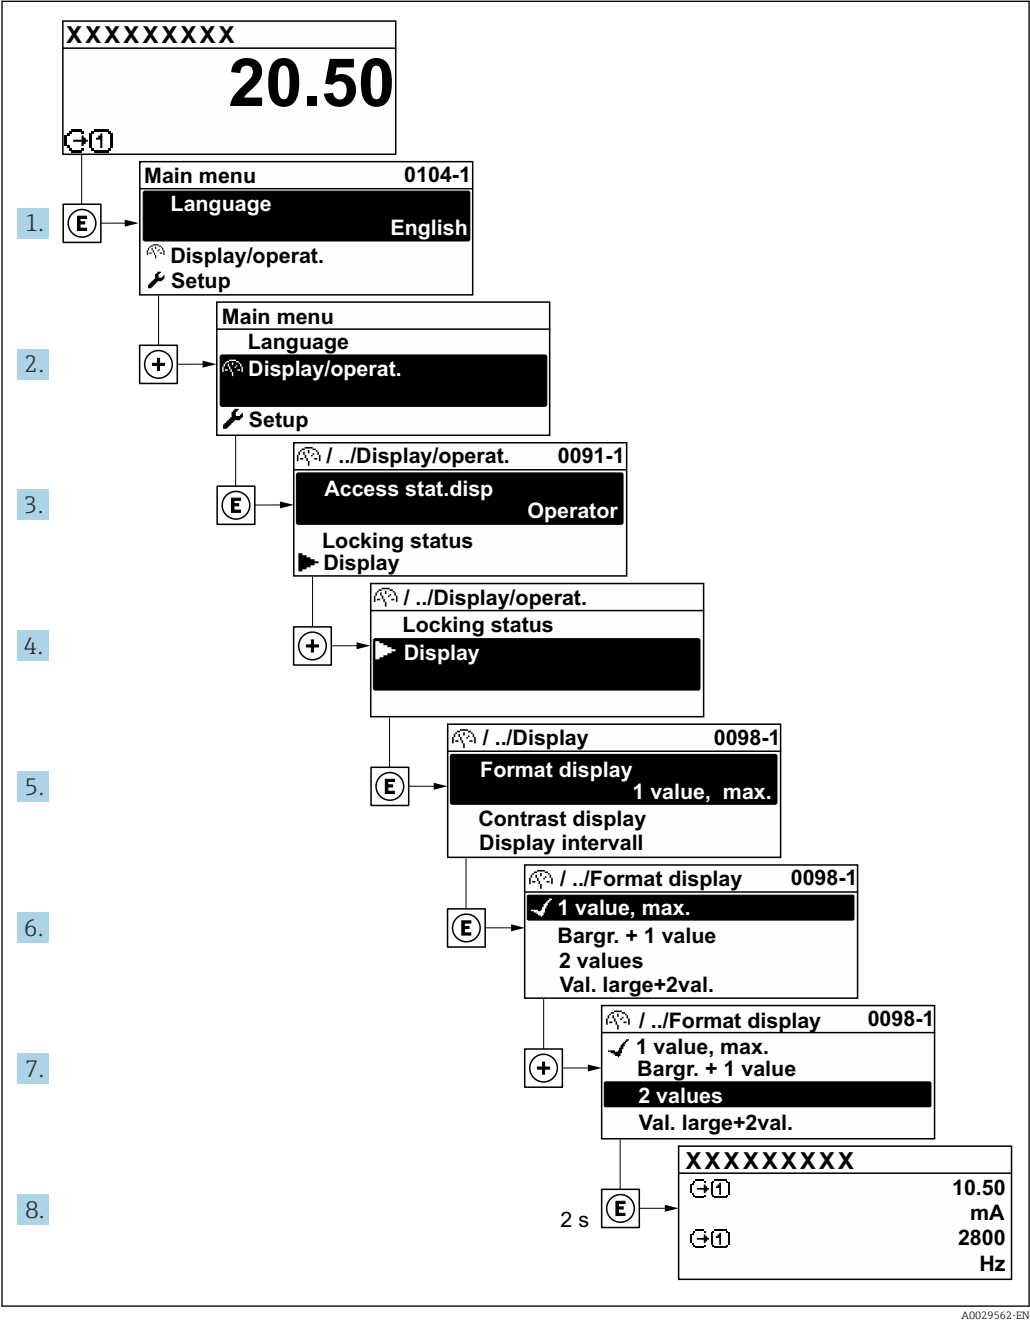


A0029562-EN

8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

Navigation path
Expert → Direct access

The direct access code consists of a 5-digit number (at maximum) and the channel number, which identifies the channel of a process variable: e.g. 00914-2. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

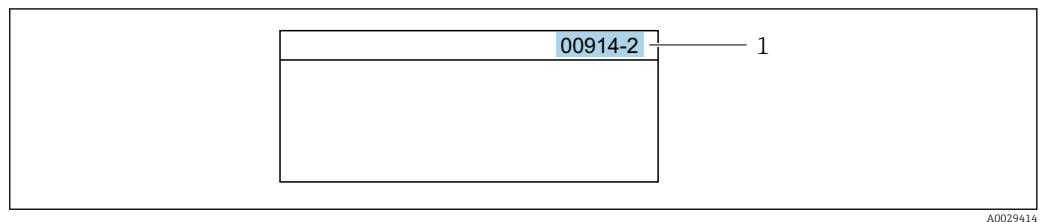

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered.
Example: Enter "914" instead of "00914"
- If no channel number is entered, channel 1 is opened automatically.
Example: Enter 00914 → **Assign process variable** parameter
- If a different channel is opened: Enter the direct access code with the corresponding channel number.
Example: Enter 00914-2 → **Assign process variable** parameter



For the direct access codes of the individual parameters, see the "Description of Device Parameters" document for the device


8.3.8 Calling up help text

Help text is available for some parameters and can be called up from the navigation view. The help text provides a brief explanation of the parameter function and thereby supports swift and safe commissioning.

Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

1. Press for 2 s.
↳ The help text for the selected parameter opens.

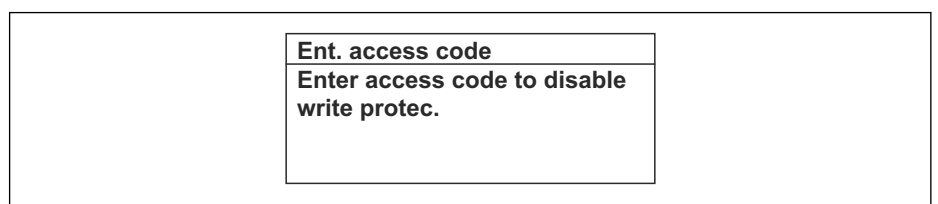

29 Example: Help text for parameter "Enter access code"

2. Press + simultaneously.
↳ The help text is closed.

8.3.9 Changing the parameters

Parameters can be changed via the numeric editor or text editor.

- Numeric editor: Change values in a parameter, e.g. specifications for limit values.
- Text editor: Enter text in a parameter, e.g. tag name.

A message is displayed if the value entered is outside the permitted value range.




Ent. access code

Invalid or out of range input value


Min:0

Max:9999

A0014049-EN

 For a description of the editing view - consisting of the text editor and numeric editor - with symbols →  72, for a description of the operating elements →  74

8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access →  166.

Defining access authorization for user roles

An access code is not yet defined when the device is delivered from the factory. Access authorization (read and write access) to the device is not restricted and corresponds to the "Maintenance" user role.

- ▶ Define the access code.
 - ↳ The "Operator" user role is redefined in addition to the "Maintenance" user role. Access authorization differs for the two user roles.


Access authorization to parameters: "Maintenance" user role


Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	✓	✓
After an access code has been defined.	✓	✓ ¹⁾

1) The user only has write access after entering the access code.



Access authorization to parameters: "Operator" user role


Access code status	Read access	Write access
After an access code has been defined.	✓	– ¹⁾


1) Despite the defined access code, certain parameters can always be modified and thus are excluded from the write protection as they do not affect the measurement: write protection via access code →  166

 The user role with which the user is currently logged on is indicated by the **Access status** parameter. Navigation path: Operation → Access status


8.3.11 Disabling write protection via access code

 If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using local operation →  166.

Parameter write protection via local operation can be disabled by entering the user-specific access code in the **Enter access code** parameter (→  144) via the respective access option.

1. After you press , the input prompt for the access code appears.

2. Enter the access code.


- ↳ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

8.3.12 Enabling and disabling the keypad lock

 
 
The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock



-  The keypad lock is switched on automatically:
- If the device has not been operated via the display for > 1 minute.
 - Each time the device is restarted.

To activate the keylock manually:

1. The device is in the measured value display.
Press the  and  keys for 3 seconds.
↳ A context menu appears.
2. In the context menu select the **Keylock on** option.
↳ The keypad lock is switched on.

-  If the user attempts to access the operating menu while the keypad lock is active, the **Keylock on** message appears.

 Switching off the keypad lock



- ▶ The keypad lock is switched on.
Press the  and  keys for 3 seconds.
↳ The keypad lock is switched off.

8.4 Access to operating menu via web browser

8.4.1 Function range

The integrated web server can be used to operate and configure the device via a web browser via Ethernet-APL, service interface (CDI-RJ45) or via WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is displayed and can be used to monitor device health. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; Operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

-  For additional information on the web server, see the Special Documentation for the device. →  309


8.4.2 Requirements

Computer hardware




Hardware	Interface	
	RJ45	WLAN
Interface	The computer must have a RJ45 interface. ¹⁾	The operating unit must have a WLAN interface.
Connection	Standard Ethernet cable	Connection via wireless local area network.
Screen	Recommended size: ≥12" (depends on the screen resolution)	

- 1) Recommended cable: CAT5e, CAT6 or CAT7, with shielded plug (e.g. YAMAICHI product; part no. Y-ConProfixPlug63/Prod. ID: 82-006660)

Computer software


 
Software	Interface	
	RJ45	WLAN
Recommended operating systems	<ul style="list-style-type: none"> Microsoft Windows 8 or higher. Mobile operating systems: <ul style="list-style-type: none"> iOS Android <p> Microsoft Windows XP and Windows 7 is supported.</p>	
Web browsers supported	<ul style="list-style-type: none"> Microsoft Edge Mozilla Firefox Google Chrome Safari 	

Computer settings


 
Settings	Interface	
	RJ45	WLAN
User rights	Appropriate user rights (e.g. administrator rights) for TCP/IP and proxy server settings are necessary (e.g. for adjusting the IP address, subnet mask etc.).	
Proxy server settings of the web browser	The web browser's <i>Use a Proxy Server for Your LAN</i> setting must be deselected .	
JavaScript	<p>JavaScript must be enabled.</p> <p> If JavaScript cannot be enabled: Enter <code>http://192.168.1.212/servlet/basic.html</code> in the address bar of the web browser. A fully functional but simplified version of the operating menu structure starts in the web browser.</p> <p> When installing a new firmware version: To enable correct data display, clear the temporary memory (cache) under Internet options in the web browser.</p>	<p>JavaScript must be enabled.</p> <p> The WLAN display requires JavaScript support.</p>
Network connections	Use only the active network connections for the measuring instrument.	
	Switch off all other network connections such as WLAN for example.	Switch off all other network connections.

 In the event of connection problems: →  187

Measuring device: Via CDI-RJ45 service interface

Device	CDI-RJ45 service interface
Measuring device	The measuring device has an RJ45 interface.
Web server	Web server must be enabled; factory setting: ON  For information on enabling the Web server →  85

Measuring device: via WLAN interface

Device	WLAN interface
Measuring device	The measuring device has a WLAN antenna: <ul style="list-style-type: none"> ▪ Transmitter with integrated WLAN antenna ▪ Transmitter with external WLAN antenna
Web server	Web server and WLAN must be enabled; factory setting: ON  For information on enabling the Web server →  85

8.4.3 Connecting the device

Via service interface (CDI-RJ45)*Preparing the measuring device**Proline 500 – digital*

1. Loosen the 4 fixing screws on the housing cover.
2. Open the housing cover.
3. The location of the connection socket depends on the measuring device and the communication protocol.
Connect the computer to the RJ45 plug via the standard Ethernet cable .

Proline 500


1. Depending on the housing version:
Loosen the securing clamp or fixing screw of the housing cover.
2. Depending on the housing version:
Unscrew or open the housing cover.
3. Connect the computer to the RJ45 plug via the standard Ethernet connecting cable..

Configuring the Internet protocol of the computer

The following information refers to the default Ethernet settings of the device.


IP address of the device: 192.168.1.212 (factory setting)

The IP address can be assigned to the measuring device in a variety of ways:

- Software addressing:
The IP address is entered via the **IP address** parameter (→  111) .
- DIP switch for "Default IP address":
To establish the network connection via the service interface (CDI-RJ45): the fixed IP address 192.168.1.212 is used .

To establish a network connection via the service interface (CDI-RJ45): set the "Default IP address" DIP switch to **ON**. The measuring device then has the fixed IP address: 192.168.1.212. The fixed IP address 192.168.1.212 can now be used to establish the connection to the network.

1. Via DIP switch 2, activate the default IP address 192.168.1.212: .
2. Switch on the measuring device.

3. Connect the computer to the RJ45 plug via the standard Ethernet cable →  87.
4. If a 2nd network card is not used, close all the applications on the notebook.
 - ↳ Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.
5. Close any open Internet browsers.
6. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

IP address	192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 → e.g. 192.168.1.213
Subnet mask	255.255.255.0
Default gateway	192.168.1.212 or leave cells empty

Via WLAN interface

Configuring the Internet protocol of the mobile device

NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.

- ▶ Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE

Please note the following to avoid a network conflict:

- ▶ Avoid accessing the measuring instrument simultaneously from the same mobile device via the service interface (CDI-RJ45) and the WLAN interface.
- ▶ Only activate one service interface (CDI-RJ45 or WLAN interface).
- ▶ If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

- ▶ Enable WLAN on the mobile terminal.

Establishing a WLAN connection from the mobile terminal to the measuring device

1. In the WLAN settings of the mobile terminal:
Select the measuring device using the SSID (e.g. EH_Promass_500_A802000).
2. If necessary, select the WPA2 encryption method.
3. Enter the password:
Serial number of the measuring device ex-works (e.g. L100A802000).
 - ↳ The LED on the display module flashes. It is now possible to operate the measuring device with the web browser, FieldCare or DeviceCare.



The serial number can be found on the nameplate.



To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

Terminating the WLAN connection

- ▶ After configuring the device:
Terminate the WLAN connection between the mobile terminal and measuring device.

Starting the web browser

1. Start the web browser on the computer.

- 2. Enter the IP address of the web server in the address line of the web browser:
192.168.1.212
↳ The login page appears.

The screenshot shows the login interface of an Endress+Hauser device. It includes fields for device identification (name, tag, status), a language selector set to 'English', and a login section with an access code field and a 'Login' button. A 'Reset access code' button is at the bottom. Numbered callouts point to specific elements: 1 (device picture), 2 (device name), 3 (device tag), 4 (status signal), 5 (measured values), 6 (language), 7 (user role), 8 (access code), 9 (login button), and 10 (reset access code button).

A0053670

- 1 Picture of device
- 2 Device name
- 3 Device tag
- 4 Status signal
- 5 Current measured values
- 6 Operating language
- 7 User role
- 8 Access code
- 9 Login
- 10 Reset access code (→ 163)

If a login page does not appear, or if the page is incomplete → 187


8.4.4 Logging on

- 1. Select the preferred operating language for the Web browser.
- 2. Enter the user-specific access code.
- 3. Press **OK** to confirm your entry.

Access code	0000 (factory setting); can be changed by customer
-------------	--

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

8.4.5 User interface

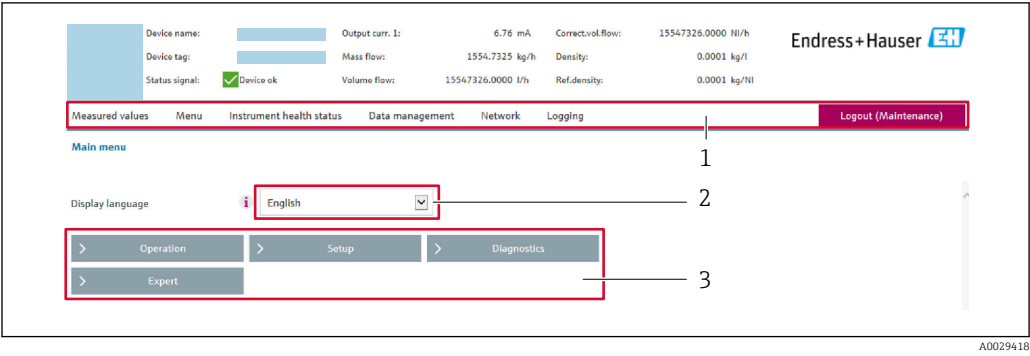


- 1 Function row
- 2 Local display language
- 3 Navigation area

Header

The following information appears in the header:

- Device name
- Device tag
- Device status with status signal → 195
- Current measured values

Function row

Functions	Meaning
Measured values	Displays the measured values of the measuring instrument
Menu	<ul style="list-style-type: none">■ Access to the operating menu from the measuring instrument■ The structure of the operating menu is the same as for the local display  Detailed information on the "Description of Device Parameters" operating menu
Device status	Displays the diagnostic messages currently pending, listed in order of priority
Data management	Data exchange between computer and measuring instrument: <ul style="list-style-type: none">■ Device configuration:<ul style="list-style-type: none">■ Load settings from the device (XML format, save configuration)■ Save settings to the device (XML format, restore configuration)■ Logbook - Export Event logbook (.csv file)■ Documents - Export documents:<ul style="list-style-type: none">■ Export backup data record (.csv file, create documentation of the measuring point configuration)■ Verification report (PDF file, only available with the "Heartbeat Verification" application package)■ Firmware update - Flashing a firmware version
Network	Configuration and checking of all the parameters required for establishing the connection to the measuring instrument: <ul style="list-style-type: none">■ Network settings (e.g. IP address, MAC address)■ Device information (e.g. serial number, firmware version)
Logout	End the operation and call up the login page

Navigation area

The menus, the associated submenus and parameters can be selected in the navigation area.

Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

8.4.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

Navigation

"Expert" menu → Communication → Web server

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Web server functionality	Switch the Web server on and off.	<ul style="list-style-type: none"> ■ Off ■ HTML Off ■ On 	On

Function scope of the "Web server functionality" parameter


Option	Description
Off	<ul style="list-style-type: none"> ■ The Web server is completely disabled. ■ Port 80 is locked.
HTML Off	The HTML version of the Web server is not available.
On	<ul style="list-style-type: none"> ■ The complete Web server functionality is available. ■ JavaScript is used. ■ The password is transferred in an encrypted state. ■ Any change to the password is also transferred in an encrypted state.

Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via local display
- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool


8.4.7 Logging out

 Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.

1. Select the **Logout** entry in the function row.
 - ↳ The home page with the Login box appears.
2. Close the Web browser.

3. If no longer needed:


Reset the modified properties of the Internet protocol (TCP/IP) →  81.

-  If communication with the web server was established via the default IP address 192.168.1.212, DIP switch no. 10 must be reset (from **ON** → **OFF**). Afterwards, the IP address of the device is active again for network communication.


8.5 Operation via SmartBlue app

The device can be operated and configured with the SmartBlue App.

- The SmartBlue app must be downloaded onto a mobile device for this purpose
- For information on the compatibility of the SmartBlue app with mobile devices, see **Apple App Store (iOS devices)** or **Google Play Store (Android devices)**
- Incorrect operation by unauthorized persons is prevented by means of encrypted communication and password encryption.
- The Bluetooth® function can be deactivated after initial device setup.

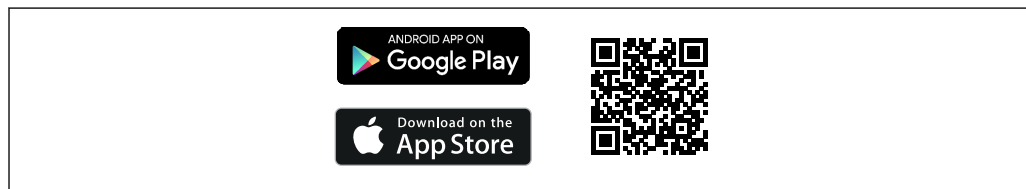

A0033202

 30 QR code for free Endress+Hauser SmartBlue App

Download and installation:

1. Scan the QR code or enter **SmartBlue** in the search field of the Apple App Store (iOS) or Google Play Store (Android).
2. Install and start the SmartBlue app.
3. For Android devices: enable location tracking (GPS) (not required for iOS devices).
4. Select a device that is ready to receive from the device list displayed.

Login:

1. Enter the user name: admin
2. Enter the initial password: serial number of the device
3. Change the password after logging in for the first time

Information on password and reset code

For devices that meet the requirements of IEC 62443-4-1 "Secure product development lifecycle management" ("ProtectBlue"):

- If the user-defined password is lost: refer to the user management instructions and the reset button in the operating manual.
- Refer to the associated Security Manual (SD).

For all other devices (without "ProtectBlue"):


- If the user-defined password is lost, access can be restored via a reset code. The reset code is the serial number of the device in reverse. The original password is once again valid after the reset code has been entered.
- The reset code can also be changed in addition to the password.
- If the user-defined reset code is lost, the password can no longer be reset via the SmartBlue app. Contact Endress+Hauser Service in this case.

8.6 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

8.6.1 Connecting the operating tool

Via APL network

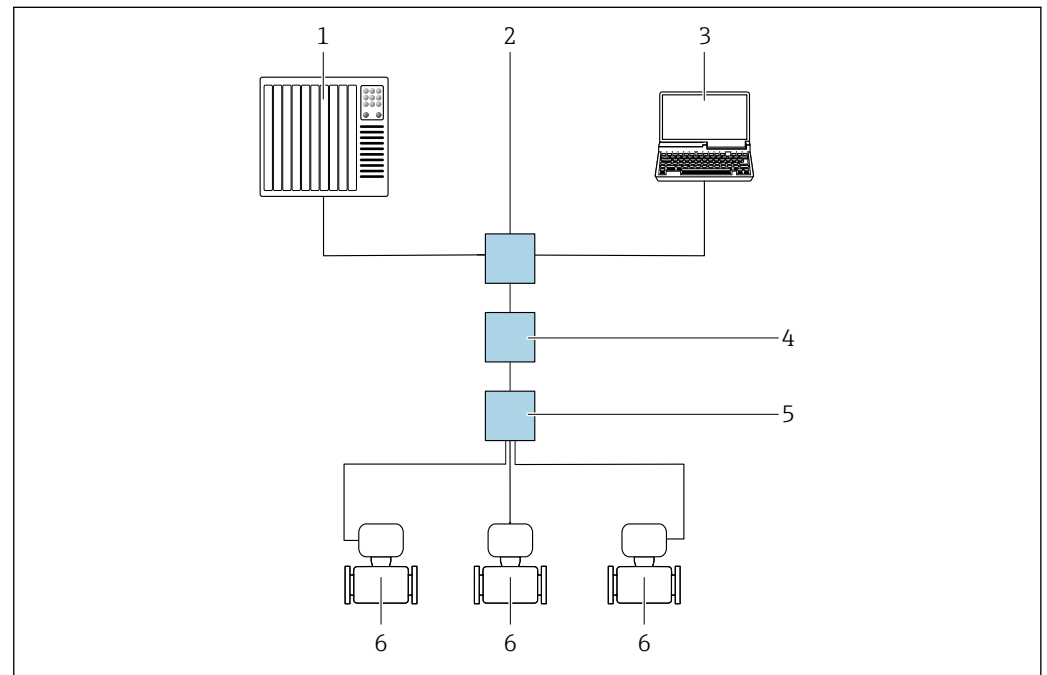

31 Options for remote operation via APL network

- 1 Automation system, e.g., Simatic S7 (Siemens)
- 2 Ethernet switch, e.g. Scalance X204 (Siemens)
- 3 Computer with web browser for accessing the integrated web server or computer with operating tool (e.g. FieldCare, DeviceCare with PROFINET COM DTM or SIMATIC PDM with FDI package)
- 4 APL power switch (optional)
- 5 APL field switch
- 6 Measuring instrument

Service interface


Via service interface (CDI-RJ45)

To configure the device on site, a point-to-point connection can be established. The connection is made with the housing open, directly via the device's service interface (CDI-RJ45).

i An adapter for the RJ45 to the M12 connector is optionally available for the non-hazardous area:

Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"


The adapter connects the service interface (CDI-RJ45) to an M12 connector mounted in the cable entry. The connection to the service interface can be established via an M12 connector without opening the device.

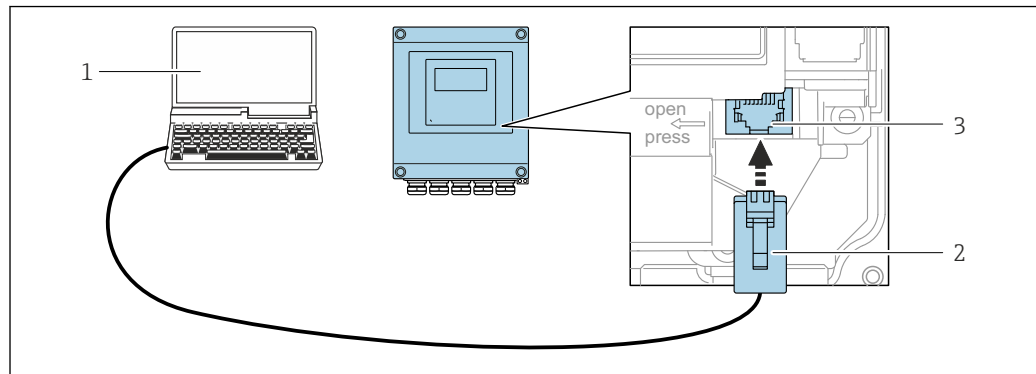Proline 500 – digital transmitter

A0029163

32 Connection via service interface (CDI-RJ45)

- 1 Computer with web browser for accessing the integrated web server or computer with operating tool, e.g. "FieldCare", "DeviceCare" with COM DTM "CDI Communication TCP/IP"
- 2 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of the measuring instrument with access to the integrated web server

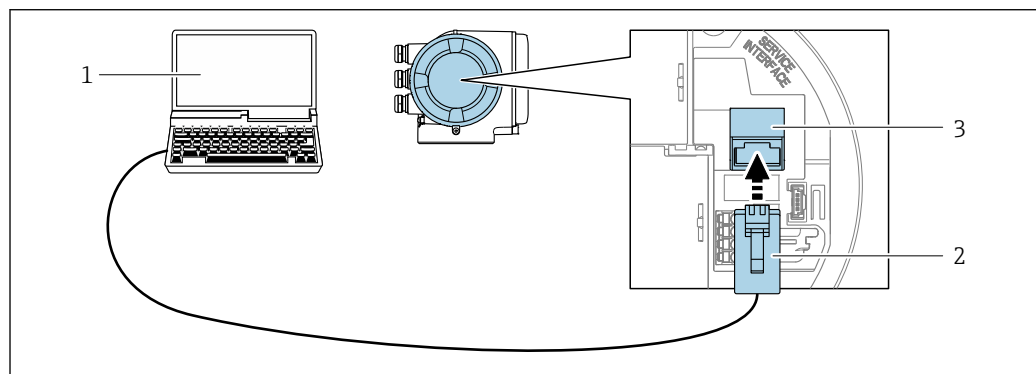Proline 500 transmitter

A0027563


33 Connection via service interface (CDI-RJ45)

- 1 Computer with web browser for accessing integrated web server or with operating tool e.g. "FieldCare", "DeviceCare", with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 2 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of the measuring instrument with access to the integrated web server

Via WLAN interface

The optional WLAN interface is available on the following device version:

Order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN"

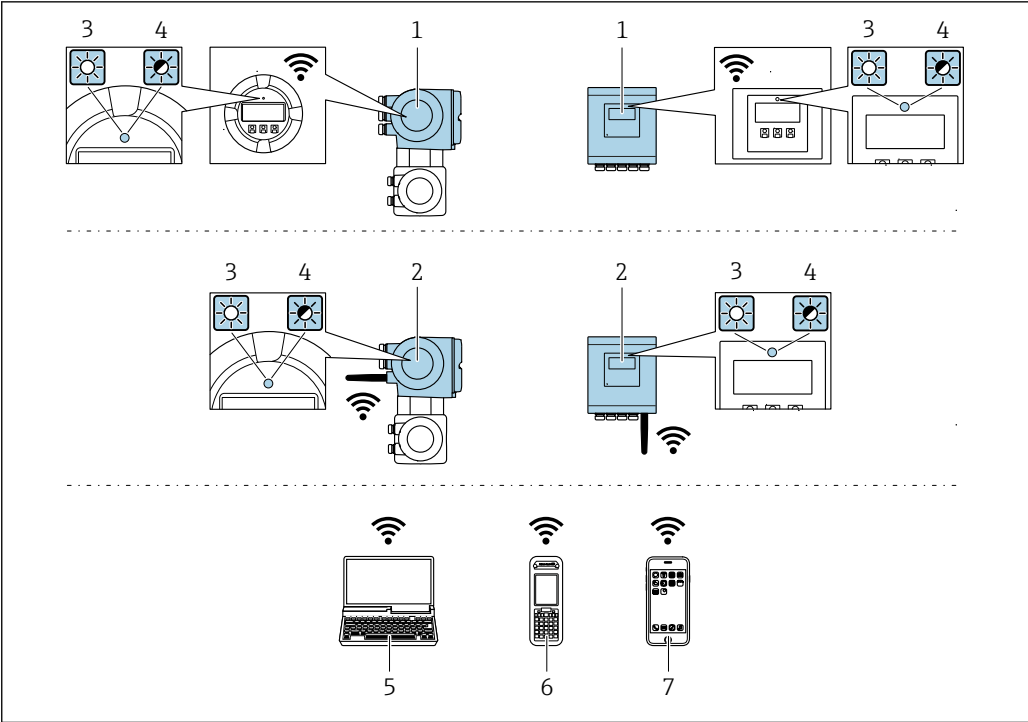

A0034569

- 1 Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring instrument
- 4 LED flashing: WLAN connection established between operating unit and measuring instrument
- 5 Computer with WLAN interface and web browser for accessing integrated device web server or with operating tool e.g. FieldCare, DeviceCare)
- 6 Mobile handheld terminal with WLAN interface and web browser for accessing integrated device web server or operating tool (e.g. FieldCare, DeviceCare)
- 7 Smartphone or tablet (e.g. Field Xpert SMT70)

Function	WLAN: IEEE 802.11 b/g (2.4 GHz)
Encryption	WPA2-PSK AES-128 (in accordance with IEEE 802.11i)
Configurable WLAN channels	1 to 11
Degree of protection	IP66/67
Available antennas	<ul style="list-style-type: none"> ▪ Internal antenna ▪ External antenna (optional) <p>In the event of poor transmission/reception conditions at the place of installation.</p> <p>i Only 1 antenna is active at any one time!</p>
Range	<ul style="list-style-type: none"> ▪ Internal antenna: typically 10 m (32 ft) ▪ External antenna: typically 50 m (164 ft)
Materials (external antenna)	<ul style="list-style-type: none"> ▪ Antenna: ASA plastic (acrylonitrile styrene acrylate) and nickel-plated brass ▪ Adapter: Stainless steel and nickel-plated brass ▪ Cable: Polyethylene ▪ Plug: Nickel-plated brass ▪ Angle bracket: Stainless steel

Configuring the Internet protocol of the mobile device

NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.

► Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE**Please note the following to avoid a network conflict:**

- ▶ Avoid accessing the measuring instrument simultaneously from the same mobile device via the service interface (CDI-RJ45) and the WLAN interface.
- ▶ Only activate one service interface (CDI-RJ45 or WLAN interface).
- ▶ If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

- ▶ Enable WLAN on the mobile terminal.

Establishing a WLAN connection from the mobile terminal to the measuring device

1. In the WLAN settings of the mobile terminal:
Select the measuring device using the SSID (e.g. EH_Promass_500_A802000).
2. If necessary, select the WPA2 encryption method.
3. Enter the password:
Serial number of the measuring device ex-works (e.g. L100A802000).
 - ↳ The LED on the display module flashes. It is now possible to operate the measuring device with the web browser, FieldCare or DeviceCare.



The serial number can be found on the nameplate.



To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

Terminating the WLAN connection

- ▶ After configuring the device:
Terminate the WLAN connection between the mobile terminal and measuring device.

8.6.2 FieldCare

Function range

FDT-based (Field Device Technology) plant asset management tool from Endress+Hauser. It can configure all smart field units in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

- CDI-RJ45 service interface → 87
- WLAN interface → 88

Typical functions:

- Transmitter parameter configuration
- Loading and saving of device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook



- Operating Instructions BA00027S
- Operating Instructions BA00059S



Source for device description files → 92

8.6.3 DeviceCare

Function range

Tool for connecting and configuring Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.



Innovation brochure IN01047S



Source for device description files → 92

8.6.4 SIMATIC PDM

Function range

Standardized, vendor-independent program from Siemens for the operation, configuration, maintenance and diagnosis of intelligent field devices via the PROFINET protocol.



Source for device description files → 92

9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

Firmware version	01.00.zz	<ul style="list-style-type: none"> ■ On the title page of the manual ■ On the transmitter nameplate ■ Firmware version Diagnostics → Device information → Firmware version
Manufacturer	17	Manufacturer Expert → Communication → Physical block → Manufacturer
Device ID	0xA43B	–
Device type ID	Promass 500	Device type Expert → Communication → Physical block → Device type
Device revision	1	–
PROFINET over Ethernet-APL version	2.43	Version of the PROFINET specification



For an overview of the various firmware versions for the device → 270

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

FieldCare	<ul style="list-style-type: none"> ■ www.endress.com → Downloads area ■ USB stick (contact Endress+Hauser) ■ E-mail → Downloads area
DeviceCare	<ul style="list-style-type: none"> ■ www.endress.com → Downloads area ■ E-mail → Downloads area
SIMATIC PDM (Siemens)	www.endress.com → Downloads area

9.2 Device master file (GSD)

In order to integrate field devices into a bus system, the PROFIBUS system needs a description of the device parameters, such as output data, input data, data format and data volume.

These data are available in the device master file (GSD) which is provided to the automation system when the communication system is commissioned. In addition device bit maps, which appear as icons in the network structure, can also be integrated.

The device master file (GSD) is in XML format, and the file is created in the GSDML description markup language.

With the PA Profile 4.02 device master file (GSD) it is possible to exchange field devices made by different manufacturers without having to reconfigure.

Two different device master files (GSD) can be used: Manufacturer-specific GSD and PA Profile GSD.

9.2.1 File name of the manufacturer-specific device master file (GSD)

Example of the name of a device master file:

GSDML-V2.43-EH-PROMASS_300_500_APL_yyyymmdd.xml

GSDML	Description language
V2.43	Version of the PROFINET specification
EH	Endress+Hauser
PROMASS	Instrument family
300_500_APL	Transmitter
yyymmdd	Date of issue (yyyy: year, mm: month, dd: day)
.xml	File name extension (XML file)

9.2.2 File name of the PA Profile device master file (GSD)

Example of the name of a PA Profile device master file:

GSDML-V2.43-PA_Profile_V4.02-B333-FLOW_CORIOLIS_yyyymmdd.xml

GSDML	Description language
V2.43	Version of the PROFINET specification
PA_Profile_V4.02	Version of the PA Profile specification
B333	PA Profile device identification
FLOW	Product line
CORIOLIS	Flow measuring principle
yyymmdd	Date of issue (yyyy: year, mm: month, dd: day)
.xml	File name extension (XML file)

API	Supported modules	Input and output variables
0x9700	Analog input	Mass flow
	Analog input	Density
	Analog input	Temperature
	Totalizer	Totalizer value: mass/mass Totalizer Control

Where to acquire the manufacturer-specific GSD:

Manufacturer-specific GSD:	www.endress.com → Downloads section
PA Profile GSD:	https://www.profibus.com/products/gsd-files/gsd-library-profile-for-process-control-devices-version-40 → Downloads section

9.3 Cyclic data transmission

9.3.1 Overview of the modules

The following graphic shows which modules are available to the device for cyclic data transfer. Cyclic data transfer is performed with an automation system.

API	Measuring device		Sub-slot	Direction Data flow	Control system
	Modules	Slot			
0x9700	Analog Input 1 (Mass flow)	1	1	→	PROFINET
	Analog Input 2 (Density)	2	1	→	
	Analog Input 3 (Temperature)	3	1	→	
	Analog Input 4	20	1	→	
	Analog Input 5	21	1	→	
	Analog Input 6	22	1	→	
	Analog Input 7	23	1	→	
	Analog Input 8	24	1	→	
	Analog Input 9	25	1	→	
	Analog Input 10	26	1	→	
	Analog Input 11	27	1	→	
	Analog Input 12	28	1	→	
	Analog Input 13	29	1	→	
	Analog Input 14	30	1	→	
	Analog Input 15	31	1	→	
	Analog Input 16	32	1	→	
	Totalizer 1 (Mass)	4	1	→ ←	
	Totalizer 2	70	1	→ →	
	Totalizer 3	71	1	→ ←	
	Binary Input 1 (Heartbeat)	80	1	→	
	Binary Input 2	81	1	→	
	Analog Output 1 (Pressure)	160	1	←	
	Analog Output 2 (Temperature)	161	1	←	
	Analog Output 3 (Ref. density)	162	1	←	
	Analog Output 4 (% Sediment and water)	163	1	←	
	Analog Output 5 (Water cut percentage)	164	1	←	
	Analog Output 6 (Appl. Spec. out 0)	165	1	←	
	Analog Output 7 (Appl. Spec. out 1)	166	1	←	
	Binary Output 1 (Heartbeat)	210	1	→	
	Binary Output 2	211	1	←	
	Enumerated Output	240	1	←	

9.3.2 Description of the modules

The data structure is described from the perspective of the automation system:

- Input data: Are sent from the measuring device to the automation system.
- Output data: Are sent from the automation system to the measuring device.

Analog Input module

Transmit input variables from the measuring device to the automation system.

Analog Input modules cyclically transmit the selected input variables, including the status, from the measuring device to the automation system. The input variable is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Selection: input variable

Slot	Sub-slot	Input variables
1	1	Mass flow
2	1	Density

Slot	Sub-slot	Input variables
3	1	Temperature
20...32	1	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Electronics temperature ■ Oscillation frequency ■ Frequency fluctuation ■ Oscillation damping ■ Tube damping fluctuation ■ Signal asymmetry ■ Exciter current ■ Application-specific output 0 ■ Application-specific output 1 ■ Index inhomogeneous medium ■ Index suspended bubbles ■ Index sensor asymmetry ■ Current output 1 ■ Current output 2 ■ Current output 3 <p>Additional input variables with the Heartbeat Verification application package</p> <ul style="list-style-type: none"> ■ Carrier pipe temperature ■ Oscillation damping 1 ■ Oscillation frequency 1 ■ Oscillation amplitude 0 ■ Oscillation amplitude 1 ■ Frequency fluctuation 1 ■ Tube damping fluctuation 1 ■ Exciter current 1 ■ HBSI <p>Additional input variables with the Concentration Measurement application package</p> <ul style="list-style-type: none"> ■ Concentration ■ Target mass flow ■ Carrier mass flow ■ Target volume flow ■ Carrier volume flow ■ Target corrected volume flow ■ Carrier corrected volume flow <p>Additional input variables with the Petroleum application package</p> <ul style="list-style-type: none"> ■ Alternative reference density ■ GSV flow ■ Alternative GSV flow ■ NSV flow ■ Alternative NSV flow ■ S&W volume flow ■ Water cut % ■ Oil density ■ Water density ■ Oil mass flow ■ Water mass flow ■ Oil volume flow ■ Water volume flow ■ Oil corrected volume flow ■ Water corrected volume flow

*Data structure**Output data of Analog Output*

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status ¹⁾

1) Status coding → 104

Application-specific Input module

Transmit compensation values from the measuring device to the automation system.

The Application-specific Input module cyclically transmits compensation values, including the status, from the measuring device to the automation system. The compensation value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the compensation value.

Assigned compensation values

The configuration is performed via: Expert → Application → Application specific calculations → Process variables

Slot	Compensation value
20...32	Application-specific Input module 0
20...32	Application-specific Input module 1

*Data structure**Input data of Application-specific Input module*

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status ¹⁾

1) Status coding → 104

Binary input module

Transmit binary input variables from the measuring device to the automation system.

Binary input variables are used by the measuring device to transmit the state of device functions to the automation system.

Binary Input modules cyclically transmit discrete input variables, including the status, from the measuring device to the automation system. The discrete input variable is depicted in the first byte. The second byte contains standardized status information pertaining to the input variable.

Selection: device function, binary input, slot 80

Slot	Sub-slot	Bit	Device function	Status (meaning)
80	1	0	Verification was not performed.	<ul style="list-style-type: none"> ■ 0 (device function not active) ■ 1 (device function active)
		1	The device has failed the verification.	
		2	Currently performing verification.	
		3	Verification ended.	
		4	The device has failed the verification.	

Slot	Sub-slot	Bit	Device function	Status (meaning)
		5	Verification carried out successfully.	
		6	Verification was not performed.	
		7	Reserved	

Selection: device function, binary input, slot 81

Slot	Sub-slot	Bit	Device function	Status (meaning)
81	1	0	Partially filled pipe detection	<ul style="list-style-type: none"> ■ 0 (device function not active) ■ 1 (device function active)
		1	Low flow cut off	
		2	Reserved	
		3	Reserved	
		4	Reserved	
		5	Reserved	
		6	Reserved	
		7	Reserved	

Data structure

Input data of Binary Input

Byte 1	Byte 2
Binary Input	Status ¹⁾

1) Status coding → 104

Mass module

Transmit mass counter value from the measuring device to the automation system.

The Mass module cyclically transmits the mass, including the status, from the measuring device to the automation system. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Selection: input variable

Slot	Sub-slot	Input variables
4	1	Mass

Data structure

Volume input data

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status ¹⁾

1) Status coding → 104

Mass Totalizer Control module

Transmit totalizer value from the measuring device to the automation system.

The Mass Totalizer Control module cyclically transmits a selected totalizer value, including the status, from the measuring device to the automation system. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Selection: input variable

Slot	Sub-slot	Input variable
4	1	Mass

Data structure

Mass Totalizer Control input data

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status ¹⁾

1) Status coding → 104

Selection: output variable

Transmit the control value from the automation system to the measuring device.

Slot	Sub-slot	Value	Input variable
70...71	1	1	Reset to "0"
		2	Preset value
		3	Stop
		4	Totalize

Data structure

Mass Totalizer Control output data

Byte 1
Control variable

Totalizer module

Transmit totalizer value from the measuring device to the automation system.

The Totalizer module cyclically transmits a selected totalizer value, including the status, from the measuring device to the automation system. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Selection: input variable


Slot	Sub-slot	Input variable
70 to 71	1	<div><ul style="list-style-type: none">■ Mass flow■ Volume flow■ Corrected volume flow■ Target mass flow ¹⁾■ Carrier mass flow■ Target volume flow■ Carrier volume flow■ Target corrected volume flow■ Carrier corrected volume flow■ GSV flow ²⁾■ GSV flow alternative■ NSV flow■ NSV alternative flow■ S&W volume flow■ Oil mass flow■ Water mass flow■ Oil volume flow■ Water volume flow■ Oil corrected volume flow■ Raw value mass flow</div>

- 1) Only available with the Concentration application package
- 2) Only available with the Petroleum application package

Data structure

Totalizer input data

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status ¹⁾

- 1) Status coding →  104

Totalizer Control module

Transmit totalizer value from the measuring device to the automation system.

The Totalizer Control module cyclically transmits a selected totalizer value, including the status, from the measuring device to the automation system. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Selection: input variable

Slot	Sub-slot	Input variable
70 to 71	1	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow ¹⁾ ■ Carrier mass flow ■ Target volume flow ■ Carrier volume flow ■ Target corrected volume flow ■ Carrier corrected volume flow ■ GSV flow ²⁾ ■ Alternative GSD flow ²⁾ ■ NSV flow ²⁾ ■ Alternative NSV flow ²⁾ ■ S&W volume flow ²⁾ ■ Oil mass flow ²⁾ ■ Water mass flow ²⁾ ■ Oil volume flow ²⁾ ■ Water volume flow ²⁾ ■ Oil corrected volume flow ²⁾ ■ Raw value mass flow ²⁾

1) Only available with the Concentration application package

2) Only available with the Petroleum application package

*Data structure**Totalizer Control input data*

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status ¹⁾

1) Status coding → 104

Selection: output variable

Transmit the control value from the automation system to the measuring device.

Slot	Sub-slot	Value	Input variable
70 to 71	1	1	Reset to "0"
		2	Preset value
		3	Stop
		4	Totalize

*Data structure**Totalizer Control output data*

Byte 1
Control variable

Analog Output module

Transmit a compensation value from the automation system to the measuring device.

Analog Output modules cyclically transmit compensation values, including the status and associated unit, from the automation system to the measuring device. The compensation value is depicted in the first four bytes in the form of a floating point number as per the

IEEE 754 standard. The fifth byte contains standardized status information pertaining to the compensation value.

Assigned compensation values



The selection is made via: Expert → Sensor → External compensation

Slot	Sub-slot	Compensation value
160	1	Pressure
161		Temperature
162		Reference density
163		External value for % S&W (sediment and water) ¹⁾
164		External value for % Water cut ¹⁾
165		Appl. Spec. Outp. 0
166		Appl. Spec. Outp. 1

1) Only available with the Petroleum application package.

Data structure

Output data of Analog Output

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status ¹⁾

1) Status coding → 104

Failsafe mode

A failsafe mode can be defined for using the compensation values.

If the status is GOOD or UNCERTAIN, the compensation values transmitted by the automation system are used. If the status is BAD, the failsafe mode is activated for the use of the compensation values.

Parameters are available per compensation value to define the failsafe mode: Expert → Sensor → External compensation

Fail safe type parameter

- Fail safe value option: The value defined in the Fail safe value parameter is used.
- Fallback value option: The last valid value is used.
- Off option: The failsafe mode is disabled.

Fail safe value parameter

Use this parameter to enter the compensation value which is used if the Fail safe value option is selected in the Fail safe type parameter.

Binary output module

Transmit binary output values from the automation system to the measuring device.

Binary output values are used by the automation system to enable and disable device functions.

Binary output values cyclically transmit discrete output values, including the status, from the automation system to the measuring device. The discrete output values are transmitted in the first byte. The second byte contains standardised status information pertaining to the output value.

Selection: device function, binary output, slot 210

Slot	Sub-slot	Bit	Device function	Status (meaning)
210	1	0	Start the verification.	A change of status from 0 to 1 starts the Heartbeat Verification ¹⁾
		1	Reserved	
		2	Reserved	
		3	Reserved	
		4	Reserved	
		5	Reserved	
		6	Reserved	
		7	Reserved	


1) Only available with the Heartbeat application package

Selection: device function, binary output, slot 211

Slot	Sub-slot	Bit	Device function	Status (meaning)
211	1	0	Flow override	<ul style="list-style-type: none"> ■ 0 (disable device function) ■ 1 (enable device function)
		1	Zero adjust	
		2	Relay output	Relay output value:
		3	Relay output	
		4	Relay output	
		5	Reserved	
		6	Reserved	
		7	Reserved	

*Data structure**Binary Output input data*

Byte 1	Byte 2
Binary Output	Status ^{1) 2)}

1) Status coding →  104

2) If the status is BAD, the control variable is not adopted.

Concentration module

Only available with the Concentration Measurement application package.

Assigned device functions

Slot	Input variables
240	Selection of the liquid type

*Data structure**Concentration output data*

Byte 1
Control variable

Liquid type	Enum code
Off	0
Sucrose in water	5
Glucose in water	2
Fructose in water	1
Invert sugar in water	6
Corn syrup HFCS42	15
Corn syrup HFCS55	16
Corn syrup HFCS90	17
Original wort	18
Ethanol in water	11
Methanol in water	12
Hydrogen peroxide in water	4
Hydrochloric acid	24
Sulfuric acid	25
Nitric acid	7
Phosphoric acid	8
Sodium hydroxide	10
Potassium hydroxide	9
Ammonium nitrate in water	13
Iron(III) chloride in water	14
% mass / % volume	19
User Profile Coef Set No. 1	21
User Profile Coef Set No. 2	22
User Profile Coef Set No. 3	23

9.3.3 Status coding

Status	Coding (hex)	Meaning
BAD - Maintenance alarm	0x24 to 0x27	A measured value is not available because a device error has occurred.
BAD - Process related	0x28 to 0x2B	A measured value is not available because the process conditions are not within the device's technical specification limits.
BAD - Function check	0x3C to 0x3F	A function check is active (e.g. cleaning or calibration)
UNCERTAIN - Initial value	0x4F to 0x4F	A predefined value is output until a correct measured value is available again or corrective measures have been performed that change this status.

Status	Coding (hex)	Meaning
UNCERTAIN - Maintenance demanded	0x68 to 0x6B	Signs of wear and tear have been detected on the measuring instrument. Short-term maintenance is needed to ensure that the measuring instrument remains operational. The measured value might be invalid. The use of the measured value depends on the application.
UNCERTAIN - Process related	0x78 to 0x7B	The process conditions are not within the device's technical specification limits. This could have a negative impact on the quality and accuracy of the measured value. The use of the measured value depends on the application.
GOOD - OK	0x80 to 0x83	No error has been diagnosed.
GOOD - Maintenance required	0xA4 to 0xA7	The measured value is valid. Maintenance of the device due in the near future.
GOOD - Maintenance demanded	0xA8 to 0xAB	The measured value is valid. It is highly advisable to service the device in the near future.
GOOD - Function check	0xBC to 0xBF	The measured value is valid. The measuring instrument is performing an internal function check. The function check does not have any noticeable effect on the process.

9.3.4 Factory setting


The slots are already assigned in the automation system for initial commissioning.

Assigned slots

Slot	Factory setting
1	Mass flow
2	Density
3	Temperature
4	Mass
20 to 32	–
70 to 71	–
80 to 81	–
160 to 166	–
210 to 211	–
240	–

9.4 System redundancy S2

For system-redundant operation in a continuous process, two mutually synchronized automation systems are required. If one system fails the second system guarantees continued, uninterrupted operation. The measuring instrument supports S2 system redundancy and can communicate with both automation systems simultaneously.

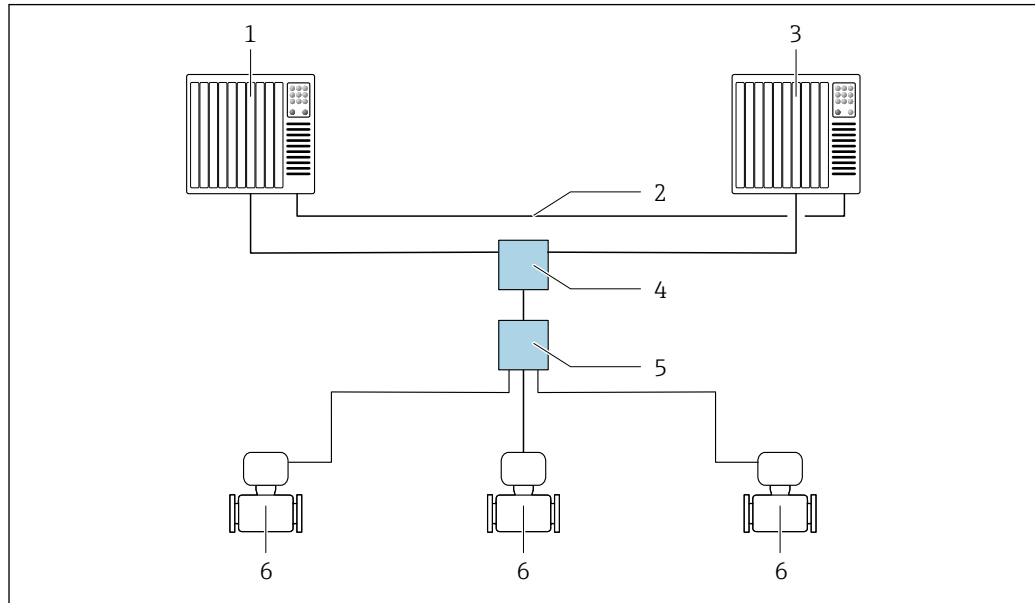

A0047362

34 Example of the layout of a redundant system (S2): star topology

- 1 Automation system 1
- 2 Synchronization of automation systems
- 3 Automation system 2
- 4 Industrial Ethernet Managed Switch
- 5 APL field switch
- 6 Measuring instrument



All the devices in the network must support S2 system redundancy.

10 Commissioning

10.1 Post-installation and post-connection check

Before commissioning the device:

- ▶ Make sure that the post-installation and post-connection checks have been performed successfully.
- Checklist for "Post-installation" check → 33
- Checklist for "Post-connection" check → 64

10.2 Switching on the measuring instrument

- ▶ Switch on the device upon successful completion of the post-mounting and post-connection check.
 - ↳ After a successful startup, the local display switches automatically from the startup display to the operational display.


If nothing appears on the local display or if a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting" → 186.

10.3 Connecting via FieldCare

- For connecting FieldCare → 87
- For connecting via FieldCare
- For user interface of FieldCare

10.4 Setting the operating language

Factory setting: English or ordered local language

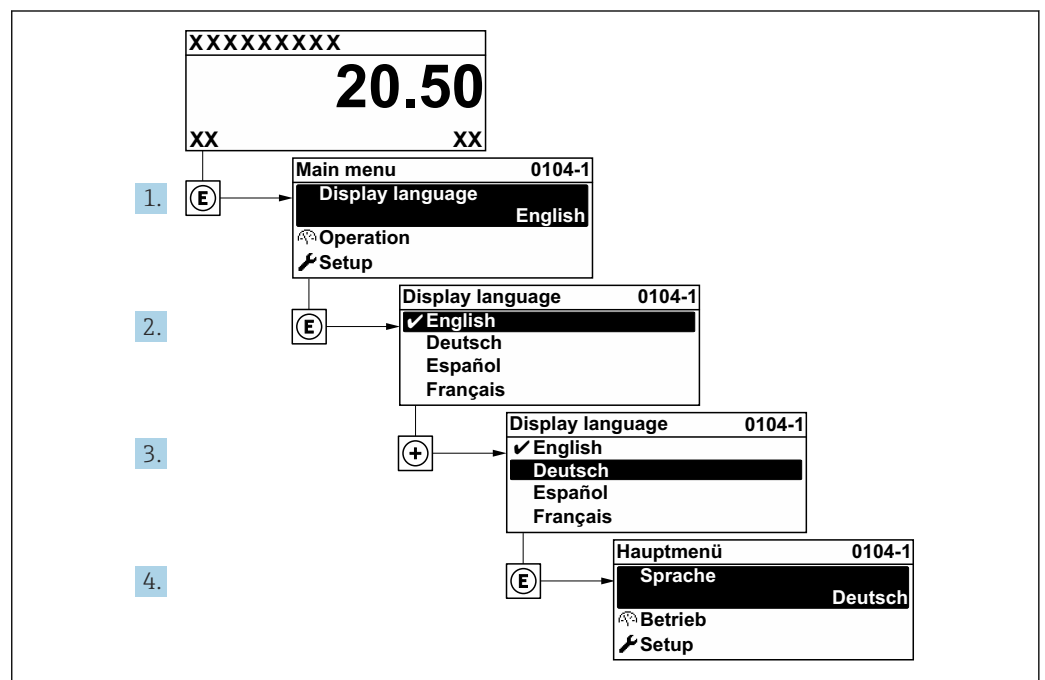

35 Taking the example of the local display

A0029420

10.5 Initializing the measuring instrument

- 1. Fill the system with liquid (density: 800 to 1 500 kg/m³ (1 764 to 3 307 lb/cf)).
- 2. Prevent any flow.
- 3. Repeated flushing can help to eliminate gas pockets.
- 4. Perform device initialization: Expert → Sensor → Disposable component → Commissioning, Modbus register 26321-1 or Profinet.
- 5. Heartbeat Verification and zero point adjustment are performed. This diagnostic message is displayed during this time: Device initialization active.
- 6. Heartbeat Verification and zero point adjustment have been performed: No diagnostic message is displayed.

The measuring instrument is initialized.

Navigation


"Expert" menu → Sensor → Disposable component

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Commissioning	Start commissioning of the sensor manually if does not start automatically.	<ul style="list-style-type: none">■ Start■ Busy■ Done■ Not done	Not done

10.6 Configuring the device

The **Setup** menu with its guided wizards contains all the parameters needed for standard operation.

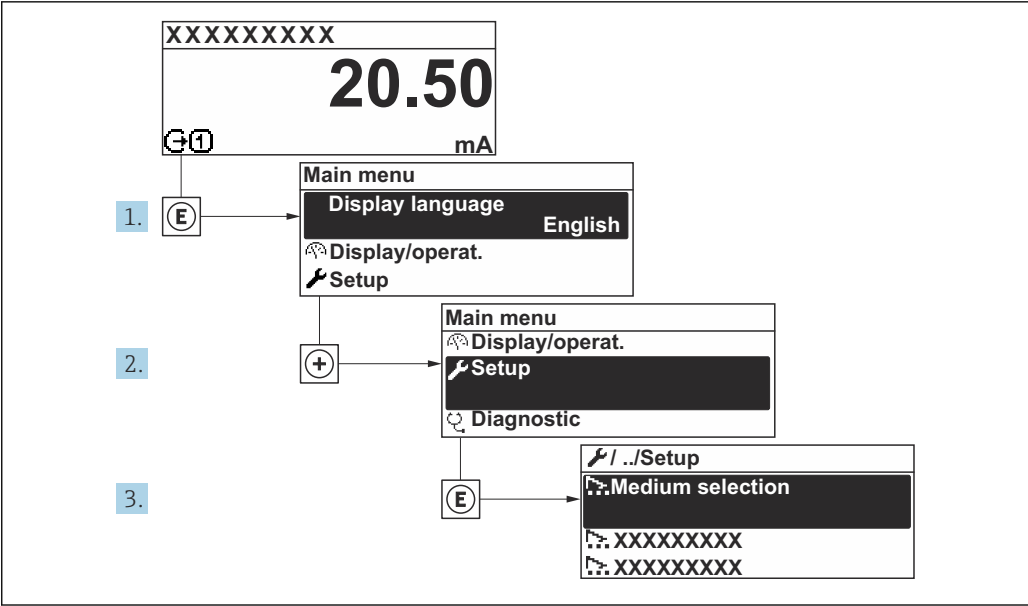

A003222-EN

36 Navigation to the "Setup" menu using the example of the local display

i The number of submenus and parameters can vary depending on the device version. Certain submenus and parameters in these submenus are not described in the Operating Instructions. Instead a description is provided in the Special Documentation for the device ("Supplementary documentation").

Setup		
PROFINET device name	→	110
► Communication	→	110
► System units	→	112
► Medium selection	→	115
► Analog inputs	→	116
► I/O configuration	→	119
► Current input 1 to n	→	120
► Status input 1 to n	→	121
► Current output 1 to n	→	122
► Pulse/frequency/switch output 1 to n	→	126
► Relay output 1 to n	→	134
► Display	→	137

► Low flow cut off	→ ⓘ 141
► Partially filled pipe detection	→ ⓘ 142
► Advanced setup	→ ⓘ 143

10.6.1 Defining the tag name

A measuring point can be quickly identified within a plant on the basis of the tag name. The tag name is equivalent to the device name (name of station) of the PROFINET specification (data length: 255 bytes)

The device name can be changed via DIP switches or the automation system .

The device name currently used is displayed in the **Name of station** parameter.

Navigation

"Setup" menu → PROFINET device name

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
PROFINET device name	Name of the measuring point.	Max. 32 characters such as letters and numbers.	EH-PROMASS500 serial number of the device

10.6.2 Displaying the communication interface

The **Communication** submenu shows all the current parameter settings for selecting and configuring the communication interface.

Navigation

"Setup" menu → Communication




► Communication	
► APL port	→ ⓘ 110
► Service interface	→ ⓘ 111
► Network diagnostics	→ ⓘ 112

"APL port" submenu

Navigation

"Setup" menu → Communication → APL port

► APL port	
IP address (7263)	→ ⓘ 111

Subnet mask (7265)	→  111
Default gateway (7264)	→  111
MAC address (7262)	→  111





Parameter overview with brief description

Parameter	Description	User entry / User interface	Factory setting
IP address	Enter the IP address of the measuring device.	Character string comprising numbers, letters and special characters (15)	0.0.0.0
Default gateway	Enter IP address for the default gateway of the measuring device.	Character string comprising numbers, letters and special characters (15)	0.0.0.0
Subnet mask	Enter subnet mask of the measuring device.	Character string comprising numbers, letters and special characters (15)	255.255.255.0
MAC address	Shows the MAC address of the measuring device.	Character string comprising numbers, letters and special characters	


"Service interface" submenu

Navigation

"Setup" menu → Communication → Service interface

► Service interface	
IP address (7209)	→  111
Subnet mask (7211)	→  111
Default gateway (7210)	→  111
MAC address (7214)	→  111

Parameter overview with brief description

Parameter	Description	User entry / User interface	Factory setting
IP address	Enter the IP address of the measuring device.	4 octet: 0 to 255 (in the particular octet)	192.168.1.212
Subnet mask	Displays the subnet mask.	4 octet: 0 to 255 (in the particular octet)	255.255.255.0
Default gateway	Displays the default gateway.	4 octet: 0 to 255 (in the particular octet)	0.0.0.0
MAC address	Displays the MAC address of the measuring instrument.  MAC = Media Access Control	Unique 12-digit character string comprising letters and numbers, e.g.: 00:07:05:10:01:5F	Each measuring instrument is given an individual address.


"Network diagnostics" submenu

Navigation


"Setup" menu → Communication → Network diagnostics

► Network diagnostics

Mean squared error (7258)

→  112

Number of failed received packets (7257)


→  112

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Mean squared error	Provides an indication of the link signal quality.	Signed floating-point number	0 dB
Number of failed received packets	Shows the number of failed received packets.	0 to 65 535	0

10.6.3 Setting the system units

In the **System units** submenu the units of all the measured values can be set.


 The number of submenus and parameters can vary depending on the device version. Certain submenus and parameters in these submenus are not described in the Operating Instructions. Instead a description is provided in the Special Documentation for the device ("Supplementary documentation").

Navigation


"Setup" menu → System units

► System units


Mass flow unit

→  113


Mass unit

→  113


Volume flow unit

→  113


Volume unit

→  113


Corrected volume flow unit

→  113


Corrected volume unit

→  113


Density unit



→  113

Reference density unit


→  113



Density 2 unit

→  113

Temperature unit	→  114
Pressure unit	→  114

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Mass flow unit	Select mass flow unit. <i>Effect</i> The selected unit applies to: <ul style="list-style-type: none"> Output Low flow cut off Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg/h lb/min
Mass unit	Select mass unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg lb
Volume flow unit	Select volume flow unit. <i>Effect</i> The selected unit applies to: <ul style="list-style-type: none"> Output Low flow cut off Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> l/h gal/min (us)
Volume unit	Select volume unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> l (DN > 150 (6"): m³ option) gal (us)
Corrected volume flow unit	Select corrected volume flow unit. <i>Effect</i> The selected unit applies to: Corrected volume flow parameter (→  172)	Unit choose list	Country-specific: <ul style="list-style-type: none"> Nl/h Sft³/min
Corrected volume unit	Select corrected volume unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> Nl Sft³
Reference density unit	Select reference density unit.	Unit choose list	Country-specific <ul style="list-style-type: none"> kg/Nl lb/Sft³
Density unit	Select density unit. <i>Effect</i> The selected unit applies to: <ul style="list-style-type: none"> Output Simulation process variable Density adjustment (Expert menu) 	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg/l lb/ft³
Density 2 unit	Select second density unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg/l lb/ft³

Parameter	Description	Selection	Factory setting
Temperature unit	<p>Select temperature unit.</p> <p><i>Effect</i></p> <p>The selected unit applies to:</p> <ul style="list-style-type: none"> ▪ Electronic temperature parameter (6053) ▪ Maximum value parameter (6051) ▪ Minimum value parameter (6052) ▪ Maximum value parameter (6108) ▪ Minimum value parameter (6109) ▪ Carrier pipe temperature parameter (6027) ▪ Maximum value parameter (6029) ▪ Minimum value parameter (6030) ▪ Reference temperature parameter (1816) ▪ Temperature parameter 	Unit choose list	<p>Country-specific:</p> <ul style="list-style-type: none"> ▪ °C ▪ °F
Pressure unit	<p>Select process pressure unit.</p> <p><i>Effect</i></p> <p>The unit is taken from:</p> <ul style="list-style-type: none"> ▪ Pressure value parameter (→  115) ▪ External pressure parameter (→  115) ▪ Pressure value 	Unit choose list	<p>Country-specific:</p> <ul style="list-style-type: none"> ▪ bar a ▪ psi a

10.6.4 Selecting and setting the medium

The **Select medium** wizard submenu contains parameters that must be configured in order to select and set the medium.

Navigation

"Setup" menu → Medium selection

► Medium selection	
Select medium type	→ 115
Pressure compensation	→ 115
Pressure value	→ 115
External pressure	→ 115

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Select medium type	–	Use this function to select the type of medium: "Gas" or "Liquid". Select the "Other" option in exceptional cases in order to enter the properties of the medium manually (e.g. for highly compressive liquids such as sulfuric acid).	<ul style="list-style-type: none"> ■ Liquid ■ Gas ■ Other 	Liquid
Pressure compensation	–	Select pressure compensation type.	<ul style="list-style-type: none"> ■ Off ■ Fixed value ■ External value ■ Current input 1 * ■ Current input 2 * ■ Current input 3 * 	Off
Pressure value	In the Pressure compensation parameter, the Fixed value option is selected.	Enter process pressure to be used for pressure correction.	Positive floating-point number	1.01325 bar
External pressure	In the Pressure compensation parameter, the External value option or the Current input 1...n option is selected.	Shows the external process pressure value.		–


* Visibility depends on order options or device settings

10.6.5 Configuration of the Analog Inputs

The **Analog inputs** submenu guides the user systematically to the individual **Analog input 1 to n** submenu. From here you get to the parameters of the individual analog input.

Navigation


"Setup" menu → Analog inputs

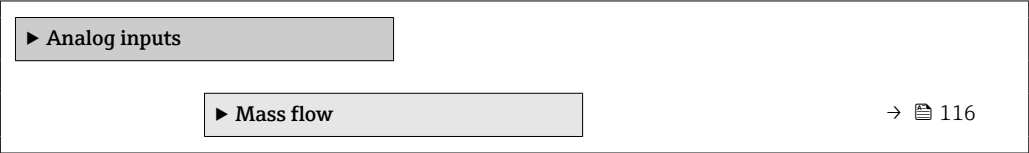

"Analog inputs" submenu

Navigation

"Setup" menu → Analog inputs → Mass flow

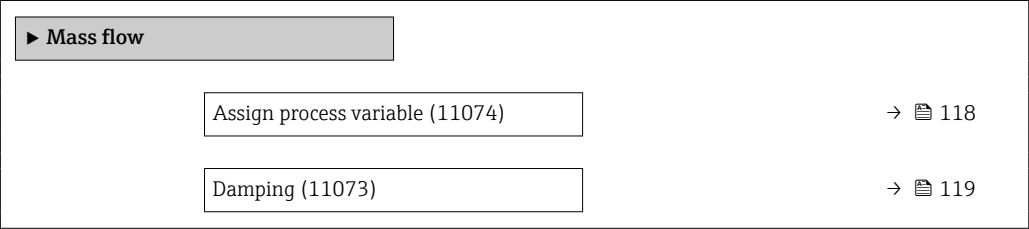

Parameter overview with brief description

Parameter	Description	User interface / User entry	Factory setting
Parent class		0 to 255	70

Parameter	Description	User interface / User entry	Factory setting
Assign process variable	Select a process variable.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Density ■ Temperature ■ Carrier pipe temperature ■ Electronics temperature ■ Oscillation frequency 0 ■ Oscillation frequency 1 ■ Oscillation amplitude 0 ■ Oscillation amplitude 1 ■ Frequency fluctuation 0 ■ Frequency fluctuation 1 ■ Oscillation damping 0 ■ Oscillation damping 1 ■ Oscillation damping fluctuation 0 ■ Oscillation damping fluctuation 1 ■ Signal asymmetry ■ Torsion signal asymmetry * ■ Exciter current 0 ■ Exciter current 1 ■ HBSI ■ Current input 1 ■ Current input 2 ■ Current input 3 ■ Application specific output 0 ■ Application specific output 1 ■ Inhomogeneous medium index ■ Suspended bubbles index ■ Test point 0 ■ Test point 1 ■ Sensor index coil asymmetry ■ Raw value mass flow ■ Corrected volume flow ■ Target mass flow ■ Carrier mass flow ■ Target volume flow ■ Carrier volume flow ■ Target corrected volume flow ■ Carrier corrected volume flow ■ Reference density ■ Reference density alternative ■ GSV flow ■ GSV flow alternative ■ NSV flow ■ NSV flow alternative * ■ S&W volume flow ■ Water cut * ■ Oil density ■ Water density ■ Oil mass flow ■ Water mass flow ■ Oil volume flow ■ Water volume flow ■ Oil corrected volume flow ■ Water corrected volume flow ■ Concentration ■ Dynamic viscosity ■ Kinematic viscosity ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity 	Mass flow

Parameter	Description	User interface / User entry	Factory setting
Damping	Enter time constant for input damping (PT1 element). Damping reduces the effect of fluctuations in the measured value on the output signal.	Positive floating-point number	1.0 s

* Visibility depends on order options or device settings

10.6.6 Displaying the I/O configuration

The **I/O configuration** submenu guides the user systematically through all the parameters in which the configuration of the I/O modules is displayed.

Navigation

"Setup" menu → I/O configuration

► I/O configuration	
I/O module 1 to n terminal numbers	→ 119
I/O module 1 to n information	→ 119
I/O module 1 to n type	→ 119
Apply I/O configuration	→ 119
I/O alteration code	→ 119

Parameter overview with brief description

Parameter	Description	User interface / Selection / User entry	Factory setting
I/O module 1 to n terminal numbers	Shows the terminal numbers used by the I/O module.	<ul style="list-style-type: none"> ■ Not used ■ 26-27 (I/O 1) ■ 24-25 (I/O 2) ■ 22-23 (I/O 3) ■ 20-21 (I/O 4) 	–
I/O module 1 to n information	Shows information of the plugged I/O module.	<ul style="list-style-type: none"> ■ Not plugged ■ Invalid ■ Not configurable ■ Configurable ■ PROFINET 	–
I/O module 1 to n type	Shows the I/O module type.	<ul style="list-style-type: none"> ■ Off ■ Current output * ■ Current input * ■ Status input * ■ Pulse/frequency/switch output * ■ Double pulse output * ■ Relay output * 	Off
Apply I/O configuration	Apply parameterization of the freely configurable I/O module.	<ul style="list-style-type: none"> ■ No ■ Yes 	No
I/O alteration code	Enter the code in order to change the I/O configuration.	Positive integer	0

* Visibility depends on order options or device settings

10.6.7 Configuring the current input

The "**Current input**" **wizard** guides the user systematically through all the parameters that have to be set for configuring the current input.

Navigation

"Setup" menu → Current input

▶ Current input 1 to n

Current span	→ 120
Terminal number	→ 120
Signal mode	→ 120
Terminal number	→ 120
0/4 mA value	→ 120
20 mA value	→ 121
Failure mode	→ 121
Terminal number	→ 120
Failure value	→ 121
Terminal number	→ 120

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Current span	–	Select current range for process value output and upper/lower level for alarm signal.	<ul style="list-style-type: none"> ■ 4...20 mA (4...20.5 mA) ■ 4...20 mA NE (3.8...20.5 mA) ■ 4...20 mA US (3.9...20.8 mA) ■ 0...20 mA (0...20.5 mA) 	4...20 mA NE (3.8...20.5 mA)
Terminal number	–	Shows the terminal numbers used by the current input module.	<ul style="list-style-type: none"> ■ Not used ■ 24-25 (I/O 2) ■ 22-23 (I/O 3) ■ 20-21 (I/O 4) * 	–
Signal mode	The measuring device is not approved for use in the hazardous area with type of protection Ex-i.	Select the signal mode for the current input.	<ul style="list-style-type: none"> ■ Passive ■ Active * 	Active
0/4 mA value	–	Enter 4 mA value.	Signed floating-point number	0

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
20 mA value	–	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter
Failure mode	–	Define input behavior in alarm condition.	<ul style="list-style-type: none"> ■ Alarm ■ Last valid value ■ Defined value 	Alarm
Failure value	In the Failure mode parameter, the Defined value option is selected.	Enter value to be used by the device if input value from external device is missing.	Signed floating-point number	0

* Visibility depends on order options or device settings

10.6.8 Configuring the status input

The **Status input** submenu guides the user systematically through all the parameters that have to be set for configuring the status input.

Navigation

"Setup" menu → Status input 1 to n

► Status input 1 to n

Assign status input

Terminal number

Active level

Terminal number

Response time status input

Terminal number

→ 121

→ 121

→ 122

→ 121

→ 122

→ 121

Parameter overview with brief description

Parameter	Description	Selection / User interface / User entry	Factory setting
Assign status input	Select function for the status input.	<ul style="list-style-type: none"> ■ Off ■ Reset totalizer 1 ■ Reset totalizer 2 ■ Reset totalizer 3 ■ Reset all totalizers ■ Flow override ■ Zero adjustment ■ Reset weighted averages * ■ Reset weighted averages + totalizer 3 * 	Off
Terminal number	Shows the terminal numbers used by the status input module.	<ul style="list-style-type: none"> ■ Not used ■ 24-25 (I/O 2) ■ 22-23 (I/O 3) ■ 20-21 (I/O 4) * 	–

Parameter	Description	Selection / User interface / User entry	Factory setting
Active level	Define input signal level at which the assigned function is triggered.	<div><div>■ High</div><div>■ Low</div></div>	High
Response time status input	Define the minimum amount of time the input signal level must be present before the selected function is triggered.	5 to 200 ms	50 ms

* Visibility depends on order options or device settings

10.6.9 Configuring the current output

The **Current output** wizard guides you systematically through all the parameters that have to be set for configuring the current output.

Navigation

"Setup" menu → Current output

► Current output 1 to n

Process variable current output

→ ⓘ 124

Terminal number

→ ⓘ 123

Current range output

→ ⓘ 125

Terminal number

→ ⓘ 123

Signal mode

→ ⓘ 123

Terminal number

→ ⓘ 123

Lower range value output

→ ⓘ 125

Upper range value output

→ ⓘ 125

Fixed current

→ ⓘ 125

Terminal number

→ ⓘ 123

Damping current output

→ ⓘ 125

Failure behavior current output

→ ⓘ 125

Terminal number

→ ⓘ 123

Failure current

→ ⓘ 125








Terminal number

→ ⓘ 123

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	–	Shows the terminal numbers used by the current output module.	<ul style="list-style-type: none">■ Not used■ 26-27 (I/O 1)■ 24-25 (I/O 2)■ 22-23 (I/O 3)■ 20-21 (I/O 4) *	–
Signal mode	–	Select the signal mode for the current output.	<ul style="list-style-type: none">■ Active *■ Passive *	Active

 Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Process variable current output	–	Select the process variable for the current output.	<ul style="list-style-type: none"> ■ Off * ■ Mass flow ■ Volume flow ■ Corrected volume flow * ■ Density ■ Reference density * ■ Temperature ■ Target mass flow * ■ Carrier mass flow * ■ Target volume flow * ■ Carrier volume flow * ■ Target corrected volume flow * ■ Carrier corrected volume flow * ■ Concentration * ■ Application specific output 0 * ■ Application specific output 1 * ■ Inhomogeneous medium index ■ Suspended bubbles index * ■ Raw value mass flow ■ Exciter current 0 ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 * ■ Oscillation frequency 0 ■ Frequency fluctuation 0 * ■ Signal asymmetry ■ Torsion signal asymmetry * ■ Carrier pipe temperature * ■ Frequency fluctuation 0 * ■ Oscillation amplitude 0 * ■ Oscillation damping fluctuation 0 * ■ HBSI * ■ Pressure * ■ Electronics temperature ■ Sensor index coil asymmetry ■ Test point 0 ■ Test point 1 	Mass flow

    Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Current range output	–	Select current range for process value output and upper/lower level for alarm signal.	<ul style="list-style-type: none"> ■ 4...20 mA NE (3.8...20.5 mA) ■ 4...20 mA US (3.9...20.8 mA) ■ 4...20 mA (4... 20.5 mA) ■ 0...20 mA (0... 20.5 mA) ■ Fixed value 	Depends on country: <ul style="list-style-type: none"> ■ 4...20 mA NE (3.8...20.5 mA) ■ 4...20 mA US (3.9...20.8 mA)
Lower range value output	In Current span parameter (→  125), one of the following options is selected: <ul style="list-style-type: none"> ■ 4...20 mA NE (3.8...20.5 mA) ■ 4...20 mA US (3.9...20.8 mA) ■ 4...20 mA (4... 20.5 mA) ■ 0...20 mA (0... 20.5 mA) 	Enter lower range value for the measured value range.	Signed floating-point number	Depends on country: <ul style="list-style-type: none"> ■ 0 kg/h ■ 0 lb/min
Upper range value output	In Current span parameter (→  125), one of the following options is selected: <ul style="list-style-type: none"> ■ 4...20 mA NE (3.8...20.5 mA) ■ 4...20 mA US (3.9...20.8 mA) ■ 4...20 mA (4... 20.5 mA) ■ 0...20 mA (0... 20.5 mA) 	Enter upper range value for the measured value range.	Signed floating-point number	Depends on country and nominal diameter
Fixed current	The Fixed current option is selected in the Current span parameter (→  125).	Defines the fixed output current.	0 to 22.5 mA	22.5 mA
Damping current output	A process variable is selected in the Assign current output parameter (→  124) and one of the following options is selected in the Current span parameter (→  125): <ul style="list-style-type: none"> ■ 4...20 mA NE (3.8...20.5 mA) ■ 4...20 mA US (3.9...20.8 mA) ■ 4...20 mA (4... 20.5 mA) ■ 0...20 mA (0... 20.5 mA) 	Set reaction time for output signal to fluctuations in the measured value.	0.0 to 999.9 s	1.0 s
Failure behavior current output	A process variable is selected in the Assign current output parameter (→  124) and one of the following options is selected in the Current span parameter (→  125): <ul style="list-style-type: none"> ■ 4...20 mA NE (3.8...20.5 mA) ■ 4...20 mA US (3.9...20.8 mA) ■ 4...20 mA (4... 20.5 mA) ■ 0...20 mA (0... 20.5 mA) 	Define output behavior in alarm condition.	<ul style="list-style-type: none"> ■ Min. ■ Max. ■ Last valid value ■ Actual value ■ Fixed value 	Max.
Failure current	The Defined value option is selected in the Failure mode parameter.	Enter current output value in alarm condition.	0 to 22.5 mA	22.5 mA

* Visibility depends on order options or device settings

10.6.10 Configuring the pulse/frequency/switch output

The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

Navigation

"Setup" menu → Advanced setup → Pulse/frequency/switch output

► Pulse/frequency/switch output
1 to n

Operating mode

→ 126

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Operating mode	Define the output as a pulse, frequency or switch output.	<div>■ Pulse</div> <div>■ Frequency</div> <div>■ Switch</div>	Pulse

Configuring the pulse output

Navigation

"Setup" menu → Pulse/frequency/switch output

► Pulse/frequency/switch output
1 to n

Operating mode

Terminal number

Signal mode

Assign pulse output

Pulse scaling

Pulse width

Failure mode

Invert output signal

→ 127

→ 127

→ 127

→ 127

→ 127

→ 127

→ 128

→ 128

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	<ul style="list-style-type: none"> ■ Pulse ■ Frequency ■ Switch 	Pulse
Terminal number	–	Shows the terminal numbers used by the PFS output module.	<ul style="list-style-type: none"> ■ Not used ■ 24-25 (I/O 2) ■ 22-23 (I/O 3) ■ 20-21 (I/O 4) * 	–
Signal mode	–	Select the signal mode for the PFS output.	<ul style="list-style-type: none"> ■ Passive ■ Active * ■ Passive NE 	Passive
Assign pulse output	The Pulse option is selected in Operating mode parameter.	Select process variable for pulse output.	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow * ■ Target mass flow * ■ Carrier mass flow * ■ Target volume flow * ■ Carrier volume flow * ■ Target corrected volume flow * ■ Carrier corrected volume flow * ■ GSV flow * ■ GSV flow alternative * ■ NSV flow * ■ NSV flow alternative * ■ S&W volume flow * ■ Oil mass flow * ■ Water mass flow * ■ Oil volume flow * ■ Water volume flow * ■ Oil corrected volume flow * ■ Water corrected volume flow * 	Off
Pulse scaling	The Pulse option is selected in the Operating mode parameter (→ 126) and a process variable is selected in the Assign pulse output parameter (→ 127).	Enter quantity for measured value at which a pulse is output.	Positive floating point number	Depends on country and nominal diameter
Pulse width	The Pulse option is selected in the Operating mode parameter (→ 126) and a process variable is selected in the Assign pulse output parameter (→ 127).	Define time width of the output pulse.	0.05 to 2000 ms	100 ms

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Failure mode	The Pulse option is selected in the Operating mode parameter (→ 126) and a process variable is selected in the Assign pulse output parameter (→ 127).	Define output behavior in alarm condition.	<div>Actual value</div> <div>No pulses</div>	No pulses
Invert output signal	–	Invert the output signal.	<div>No</div> <div>Yes</div>	No

* Visibility depends on order options or device settings

Configuring the frequency output

Navigation

"Setup" menu → Pulse/frequency/switch output

► Pulse/frequency/switch output
1 to n

Operating mode

→ 129

Terminal number

→ 129

Signal mode

→ 129

Assign frequency output

→ 130

Minimum frequency value

→ 130

Maximum frequency value

→ 131

Measuring value at minimum frequency

→ 131

Measuring value at maximum frequency

→ 131

Failure mode

→ 131

Failure frequency

→ 131

Invert output signal

→ 131

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	<ul style="list-style-type: none"> ■ Pulse ■ Frequency ■ Switch 	Pulse
Terminal number	–	Shows the terminal numbers used by the PFS output module.	<ul style="list-style-type: none"> ■ Not used ■ 24-25 (I/O 2) ■ 22-23 (I/O 3) ■ 20-21 (I/O 4) * 	–
Signal mode	–	Select the signal mode for the PFS output.	<ul style="list-style-type: none"> ■ Passive ■ Active * ■ Passive NE 	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Assign frequency output	The Frequency option is selected in Operating mode parameter (→ 126).	Select process variable for frequency output.	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow * ■ Density ■ Reference density * ■ Time period signal frequency (TPS) * ■ Temperature ■ Pressure ■ Concentration * ■ Target mass flow * ■ Carrier mass flow * ■ Target volume flow * ■ Carrier volume flow * ■ Target corrected volume flow * ■ Carrier corrected volume flow * ■ Application specific output 0 * ■ Application specific output 1 * ■ Inhomogeneous medium index ■ Suspended bubbles index * ■ HBSI * ■ Raw value mass flow ■ Exciter current 0 ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 * ■ Oscillation frequency 0 ■ Frequency fluctuation 0 * ■ Oscillation amplitude 0 * ■ Signal asymmetry ■ Torsion signal asymmetry * ■ Carrier pipe temperature * ■ Electronics temperature ■ Sensor index coil asymmetry ■ Test point 0 ■ Test point 1 	Off
Minimum frequency value	The Frequency option is selected in the Operating mode parameter (→ 126) and a process variable is selected in the Assign frequency output parameter (→ 130).	Enter minimum frequency.	0.0 to 10 000.0 Hz	0.0 Hz

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Maximum frequency value	The Frequency option is selected in the Operating mode parameter (→ 126) and a process variable is selected in the Assign frequency output parameter (→ 130).	Enter maximum frequency.	0.0 to 10 000.0 Hz	10 000.0 Hz
Measuring value at minimum frequency	The Frequency option is selected in the Operating mode parameter (→ 126) and a process variable is selected in the Assign frequency output parameter (→ 130).	Enter measured value for minimum frequency.	Signed floating-point number	Depends on country and nominal diameter
Measuring value at maximum frequency	The Frequency option is selected in the Operating mode parameter (→ 126) and a process variable is selected in the Assign frequency output parameter (→ 130).	Enter measured value for maximum frequency.	Signed floating-point number	Depends on country and nominal diameter
Failure mode	The Frequency option is selected in the Operating mode parameter (→ 126) and a process variable is selected in the Assign frequency output parameter (→ 130).	Define output behavior in alarm condition.	<ul style="list-style-type: none"> ■ Actual value ■ Defined value ■ 0 Hz 	0 Hz
Failure frequency	In the Operating mode parameter (→ 126), the Frequency option is selected, in the Assign frequency output parameter (→ 130) a process variable is selected, and in the Failure mode parameter, the Defined value option is selected.	Enter frequency output value in alarm condition.	0.0 to 12 500.0 Hz	0.0 Hz
Invert output signal	–	Invert the output signal.	<ul style="list-style-type: none"> ■ No ■ Yes 	No

* Visibility depends on order options or device settings

Configuring the switch output

Navigation

"Setup" menu → Pulse/frequency/switch output

► Pulse/frequency/switch output 1 to n		
Operating mode		→ 132
Terminal number		→ 132
Signal mode		→ 132
Switch output function		→ 133
Assign diagnostic behavior		→ 133
Assign limit		→ 133
Assign flow direction check		→ 133
Assign status		→ 133
Switch-on value		→ 134
Switch-off value		→ 134
Switch-on delay		→ 134
Switch-off delay		→ 134
Failure mode		→ 134
Invert output signal		→ 134

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	<ul style="list-style-type: none">■ Pulse■ Frequency■ Switch	Pulse
Terminal number	–	Shows the terminal numbers used by the PFS output module.	<ul style="list-style-type: none">■ Not used■ 24-25 (I/O 2)■ 22-23 (I/O 3)■ 20-21 (I/O 4) *	–
Signal mode	–	Select the signal mode for the PFS output.	<ul style="list-style-type: none">■ Passive■ Active *■ Passive NE	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch output function	The Switch option is selected in the Operating mode parameter.	Select function for switch output.	<ul style="list-style-type: none"> ■ Off ■ On ■ Diagnostic behavior ■ Limit ■ Flow direction check ■ Status 	Off
Assign diagnostic behavior	<ul style="list-style-type: none"> ■ In the Operating mode parameter, the Switch option is selected. ■ In the Switch output function parameter, the Diagnostic behavior option is selected. 	Select diagnostic behavior for switch output.	<ul style="list-style-type: none"> ■ Alarm ■ Alarm or warning ■ Warning 	Alarm
Assign limit	<ul style="list-style-type: none"> ■ The Switch option is selected in Operating mode parameter. ■ The Limit option is selected in Switch output function parameter. 	Select process variable for limit function.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow[*] ■ Target mass flow[*] ■ Carrier mass flow[*] ■ Target volume flow[*] ■ Carrier volume flow[*] ■ Target corrected volume flow[*] ■ Carrier corrected volume flow[*] ■ Density ■ Reference density[*] ■ Concentration[*] ■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Oscillation damping ■ Pressure ■ Application specific output 0[*] ■ Application specific output 1[*] ■ Inhomogeneous medium index ■ Suspended bubbles index[*] 	Volume flow
Assign flow direction check	<ul style="list-style-type: none"> ■ The Switch option is selected in the Operating mode parameter. ■ The Flow direction check option is selected in the Switch output function parameter. 	Select process variable for flow direction monitoring.		Mass flow
Assign status	<ul style="list-style-type: none"> ■ The Switch option is selected in Operating mode parameter. ■ The Status option is selected in Switch output function parameter. 	Select device status for switch output.	<ul style="list-style-type: none"> ■ Partially filled pipe detection ■ Low flow cut off ■ Binary output[*] ■ Binary output[*] ■ Binary output[*] 	Partially filled pipe detection

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch-on value	<ul style="list-style-type: none"> The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Enter measured value for the switch-on point.	Signed floating-point number	Depends on country: <ul style="list-style-type: none"> 0 kg/h 0 lb/min
Switch-off value	<ul style="list-style-type: none"> The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Enter measured value for the switch-off point.	Signed floating-point number	Depends on country: <ul style="list-style-type: none"> 0 kg/h 0 lb/min
Switch-on delay	<ul style="list-style-type: none"> The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s
Switch-off delay	<ul style="list-style-type: none"> The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Failure mode	–	Define output behavior in alarm condition.	<ul style="list-style-type: none"> Actual status Open Closed 	Open
Invert output signal	–	Invert the output signal.	<ul style="list-style-type: none"> No Yes 	No

* Visibility depends on order options or device settings

10.6.11 Configuring the relay output

The **Relay output** wizard guides the user systematically through all the parameters that have to be set for configuring the relay output.

Navigation

"Setup" menu → Relay output 1 to n

▶ Relay output 1 to n

Terminal number → 135








Relay output function → 135

Assign flow direction check → 135

Assign limit → 136

Assign diagnostic behavior → 136

Assign status → 136

Switch-off value	→  136
Switch-off delay	→  136
Switch-on value	→  136
Switch-on delay	→  136
Failure mode	→  136
Switch state	→  137
Powerless relay status	→  137

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	–	Shows the terminal numbers used by the relay output module.	<ul style="list-style-type: none"> ■ Not used ■ 24-25 (I/O 2) ■ 22-23 (I/O 3) ■ 20-21 (I/O 4) 	–
Relay output function	–	Select the function for the relay output.	<ul style="list-style-type: none"> ■ Closed ■ Open ■ Diagnostic behavior ■ Limit ■ Flow direction check ■ Status 	Closed
Assign flow direction check	The Flow direction check option is selected in the Relay output function parameter.	Select process variable for flow direction monitoring.		Mass flow

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Assign limit	The Limit option is selected in Relay output function parameter.	Select process variable for limit function.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow[*] ■ Target mass flow[*] ■ Carrier mass flow[*] ■ Target volume flow[*] ■ Carrier volume flow[*] ■ Target corrected volume flow[*] ■ Carrier corrected volume flow[*] ■ Density ■ Reference density[*] ■ Concentration[*] ■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Oscillation damping ■ Pressure ■ Application specific output 0[*] ■ Application specific output 1[*] ■ Inhomogeneous medium index ■ Suspended bubbles index[*] 	Mass flow
Assign diagnostic behavior	In the Relay output function parameter, the Diagnostic behavior option is selected.	Select diagnostic behavior for switch output.	<ul style="list-style-type: none"> ■ Alarm ■ Alarm or warning ■ Warning 	Alarm
Assign status	In the Relay output function parameter, the Digital Output option is selected.	Select device status for switch output.	<ul style="list-style-type: none"> ■ Partially filled pipe detection ■ Low flow cut off ■ Binary output[*] ■ Binary output[*] ■ Binary output[*] 	Partially filled pipe detection
Switch-off value	The Limit option is selected in the Relay output function parameter.	Enter measured value for the switch-off point.	Signed floating-point number	Depends on country: <ul style="list-style-type: none"> ■ 0 kg/h ■ 0 lb/min
Switch-off delay	In the Relay output function parameter, the Limit option is selected.	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Switch-on value	The Limit option is selected in the Relay output function parameter.	Enter measured value for the switch-on point.	Signed floating-point number	Depends on country: <ul style="list-style-type: none"> ■ 0 kg/h ■ 0 lb/min
Switch-on delay	In the Relay output function parameter, the Limit option is selected.	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s
Failure mode	–	Define output behavior in alarm condition.	<ul style="list-style-type: none"> ■ Actual status ■ Open ■ Closed 	Open

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Switch state	–	Shows the current relay switch status.	■ Open ■ Closed	–
Powerless relay status	–	Select quiescent state for relay.	■ Open ■ Closed	Open














* Visibility depends on order options or device settings

10.6.12 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can be configured for configuring the local display.

Navigation




"Setup" menu → Display

► Display		
Format display		→  138
Value 1 display		→  139
0% bargraph value 1		→  139
100% bargraph value 1		→  139
Value 2 display		→  140
Value 3 display		→  140
0% bargraph value 3		→  140
100% bargraph value 3		→  140
Value 4 display		→  140
Value 5 display		→  140
Value 6 display		→  140
Value 7 display		→  140
Value 8 display		→  140

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul style="list-style-type: none">■ 1 value, max. size■ 1 bargraph + 1 value■ 2 values■ 1 value large + 2 values■ 4 values	1 value, max. size

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow * ■ Density ■ Reference density * ■ Temperature ■ Pressure ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Concentration * ■ Target mass flow * ■ Carrier mass flow * ■ Target volume flow * ■ Carrier volume flow * ■ Target corrected volume flow * ■ Carrier corrected volume flow * ■ Application specific output 0 * ■ Application specific output 1 * ■ Inhomogeneous medium index ■ Suspended bubbles index * ■ HBSI * ■ Raw value mass flow ■ Exciter current 0 ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 * ■ Oscillation frequency 0 ■ Frequency fluctuation 0 * ■ Oscillation amplitude 0 * ■ Signal asymmetry ■ Torsion signal asymmetry * ■ Carrier pipe temperature * ■ Electronics temperature ■ Sensor index coil asymmetry ■ Test point 0 ■ Test point 1 ■ Current output 1 ■ Current output 2 * ■ Current output 3 * ■ Current output 4 * 	Mass flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 kg/h ■ 0 lb/min
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→  139)	None
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→  139)	None
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: ■ 0 kg/h ■ 0 lb/min
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→  139)	None
Value 5 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→  139)	None
Value 6 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→  139)	None
Value 7 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→  139)	None
Value 8 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→  139)	None

* Visibility depends on order options or device settings

10.6.13 Configuring the low flow cut off

The **Low flow cut off** wizard systematically guides the user through all the parameters that must be set to configure low flow cut off.

Navigation

"Setup" menu → Low flow cut off

▶ Low flow cut off

Assign process variable

→ 141

On value low flow cutoff

→ 141

Off value low flow cutoff

→ 141

Pressure shock suppression

→ 141

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	–	Select process variable for low flow cut off.	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow[*] 	Mass flow
On value low flow cutoff	A process variable is selected in the Assign process variable parameter (→ 141).	Enter on value for low flow cut off.	Positive floating-point number	Depends on country and nominal diameter
Off value low flow cutoff	A process variable is selected in the Assign process variable parameter (→ 141).	Enter off value for low flow cut off.	0 to 100.0 %	50 %
Pressure shock suppression	A process variable is selected in the Assign process variable parameter (→ 141).	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	0 s

* Visibility depends on order options or device settings

10.6.14 Partially filled pipe detection

The **Partial filled pipe detection** wizard guides you systematically through all parameters that have to be set for configuring the monitoring of the pipe filling.

Navigation

"Setup" menu → Partially filled pipe detection

▶ **Partially filled pipe detection**

Assign process variable

→ 142

Low value partial filled pipe detection

→ 142

High value partial filled pipe detection

→ 142

Response time part. filled pipe detect.

→ 142


Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	–	Select process variable for partially filled pipe detection.	<ul style="list-style-type: none"> ■ Off ■ Density ■ Calculated reference density 	Density
Low value partial filled pipe detection	A process variable is selected in the Assign process variable parameter (→ 142).	Enter lower limit value for deactivating partially filled pipe detection.	Signed floating-point number	Depends on country: <ul style="list-style-type: none"> ■ 200 kg/m³ ■ 12.5 lb/ft³
High value partial filled pipe detection	A process variable is selected in the Assign process variable parameter (→ 142).	Enter upper limit value for deactivating partially filled pipe detection.	Signed floating-point number	Depends on country: <ul style="list-style-type: none"> ■ 6 000 kg/m³ ■ 374.6 lb/ft³
Response time part. filled pipe detect.	A process variable is selected in the Assign process variable parameter (→ 142).	Use this function to enter the minimum time (hold time) the signal must be present before diagnostic message S962 "Pipe only partly filled" is triggered in the event of a partially filled or empty measuring pipe.	0 to 100 s	1 s

10.7 Advanced settings

The **Advanced setup** submenu with its submenus contains parameters for specific settings.

Navigation to the "Advanced setup" submenu

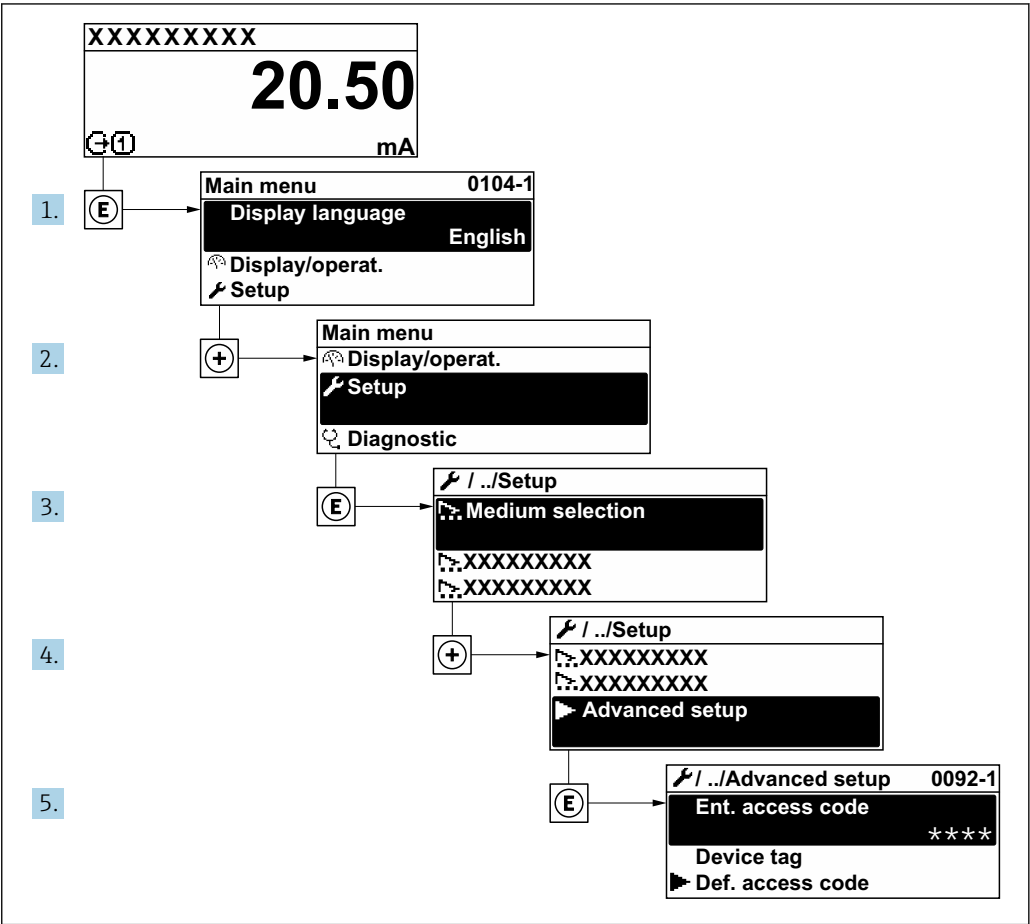

A0032223-EN

i The number of submenus and parameters can vary depending on the device version and the available application packages. These submenus and their parameters are explained in the Special Documentation for the device and not in Operating Instructions.

For detailed information on the parameter descriptions for application packages:
Special Documentation for the device → 309

Navigation

"Setup" menu → Advanced setup

► Advanced setup	
Enter access code (0003)	→ 144
► Calculated values	→ 144
► Sensor adjustment	→ 146

► Totalizer 1 to n	→ 149
► Display	→ 152
► WLAN settings	→ 158
► Viscosity	→ 160
► Concentration	→ 160
► Petroleum	→ 160
► Heartbeat setup	→ 161
► Configuration backup	→ 161
► Administration	→ 162

10.7.1 Using the parameter to enter the access code

Navigation
"Setup" menu → Advanced setup

Parameter overview with brief description

Parameter	Description	User entry
Enter access code	Enter access code to disable write protection of parameters.	Max. 16-digit character string comprising numbers, letters and special characters

10.7.2 Calculated process variables







The **Calculated values** submenu contains parameters for calculating the corrected volume flow.

Navigation
"Setup" menu → Advanced setup → Calculated values

► Calculated values	
► Corrected volume flow calculation	→ 145

"Corrected volume flow calculation" submenu**Navigation**

"Setup" menu → Advanced setup → Calculated values → Corrected volume flow calculation

► Corrected volume flow calculation		
Select reference density (1812)	→ 	145
External reference density (6198)	→ 	145
Fixed reference density (1814)	→ 	145
Reference temperature (1816)	→ 	145
Linear expansion coefficient (1817)	→ 	146
Square expansion coefficient (1818)	→ 	146

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Select reference density	–	Select reference density for calculating the corrected volume flow.	<ul style="list-style-type: none"> ■ Fixed reference density ■ Calculated reference density ■ External reference density ■ Current input 1 * ■ Current input 2 * ■ Current input 3 * 	Calculated reference density
External reference density	–	Shows external reference density.	Floating point number with sign	–
Fixed reference density	The Fixed reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter fixed value for reference density.	Positive floating-point number	1 kg/Nl
Reference temperature	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter reference temperature for calculating the reference density.	–273.15 to 99 999 °C	Country-specific: <ul style="list-style-type: none"> ■ +20 °C ■ +68 °F

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Linear expansion coefficient	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter linear, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0 1/K
Square expansion coefficient	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	For media with a non-linear expansion pattern: enter the quadratic, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0 1/K ²

* Visibility depends on order options or device settings

10.7.3 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu → Advanced setup → Sensor adjustment

► Sensor adjustment	
Installation direction	→ ⓘ 146
► Zero verification	→ ⓘ 147
► Zero adjustment	→ ⓘ 148

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Installation direction	Select sign of flow direction.	<ul style="list-style-type: none"> Forward flow Reverse flow 	Forward flow

Zero verification and zero adjustment

All measuring instruments are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions → ⓘ 288. Therefore, a zero adjustment in the field is generally not required.

Experience shows that zero adjustment is advisable only in special cases:

- To achieve maximum measurement accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity media).

i To achieve the highest possible measurement accuracy at low flow rates, the installation must protect the sensor from mechanical stress during operation.

To get a representative zero point, ensure that:

- any flow in the device is prevented during the adjustment
- the process conditions (e.g. pressure, temperature) are stable and representative

Zero verification and zero adjustment cannot be performed if the following process conditions are present:

- Gas pockets
Ensure that the system has been sufficiently flushed with the medium. Repeat flushing can help to eliminate gas pockets
- Thermal circulation
In the event of temperature differences (e.g. between the measuring tube inlet and outlet section), induced flow can occur even if the valves are closed due to thermal circulation in the device
- Leaks at the valves
If the valves are not leak-tight, flow is not sufficiently prevented when determining the zero point










If these conditions cannot be avoided, it is advisable to keep the factory setting for the zero point.

Zero point verification

The zero point can be verified with the **Zero verification** wizard.

Navigation

"Setup" menu → Advanced setup → Sensor adjustment → Zero verification

► Zero verification		
Process conditions	→	 147
Progress	→	 147
Status	→	 148
Additional information	→	 148
Recommendation:	→	 148
Root cause	→	 148
Abort cause	→	 148
Zero point measured	→	 148
Zero point standard deviation	→	 148

Parameter overview with brief description

Parameter	Description	Selection / User interface	Factory setting
Process conditions	Ensure process conditions as follows.	<ul style="list-style-type: none"> ■ Tubes are completely filled ■ Process operational pressure applied ■ No-flow conditions (closed valves) ■ Process and ambient temperatures stable 	–
Progress	Shows the progress of the process.	0 to 100 %	–

Parameter	Description	Selection / User interface	Factory setting
Status	Shows the status of the process.	<ul style="list-style-type: none"> ■ Busy ■ Failed ■ Done 	–
Additional information	Indicate whether to display additional information.	<ul style="list-style-type: none"> ■ Hide ■ Show 	Hide
Recommendation:	Indicates whether an adjustment is recommended. Only recommended if the measured zero point deviates significantly from the current zero point.	<ul style="list-style-type: none"> ■ Do not adjust zero point ■ Adjust zero point 	–
Abort cause	Indicates why the wizard was aborted.	<ul style="list-style-type: none"> ■ Check process conditions! ■ A technical issue has occurred 	–
Root cause	Shows the diagnostic and remedy.	<ul style="list-style-type: none"> ■ Zero point too high. Ensure no-flow. ■ Zero point is unstable. Ensure no-flow. ■ Fluctuation high. Avoid 2-phase medium. 	–
Zero point measured	Shows the zero point measured for the adjustment.	Signed floating-point number	–
Zero point standard deviation	Shows the standard deviation of the zero point measured.	Positive floating-point number	–

Zero adjust

The zero point can be adjusted with the **Zero adjustment** wizard.






- A zero point verification should be performed before a zero adjustment.
- The zero point can also be adjusted manually: Expert → Sensor → Calibration

Navigation

"Setup" menu → Advanced setup → Sensor adjustment → Zero adjustment

► Zero adjustment		
Process conditions	→	📄 149
Progress	→	📄 149
Status	→	📄 149
Root cause	→	📄 149
Abort cause	→	📄 149
Root cause	→	📄 149
Reliability of measured zero point	→	📄 149
Additional information	→	📄 149
Reliability of measured zero point	→	📄 149

Zero point measured	→  149
Zero point standard deviation	→  149
Select action	→  149

Parameter overview with brief description

Parameter	Description	Selection / User interface	Factory setting
Process conditions	Ensure process conditions as follows.	<ul style="list-style-type: none"> ■ Tubes are completely filled ■ Process operational pressure applied ■ No-flow conditions (closed valves) ■ Process and ambient temperatures stable 	–
Progress	Shows the progress of the process.	0 to 100 %	–
Status	Shows the status of the process.	<ul style="list-style-type: none"> ■ Busy ■ Failed ■ Done 	–
Abort cause	Indicates why the wizard was aborted.	<ul style="list-style-type: none"> ■ Check process conditions! ■ A technical issue has occurred 	–
Root cause	Shows the diagnostic and remedy.	<ul style="list-style-type: none"> ■ Zero point too high. Ensure no-flow. ■ Zero point is unstable. Ensure no-flow. ■ Fluctuation high. Avoid 2-phase medium. 	–
Reliability of measured zero point	Indicates the reliability of the zero point measured.	<ul style="list-style-type: none"> ■ Not done ■ Good ■ Uncertain 	–
Additional information	Indicate whether to display additional information.	<ul style="list-style-type: none"> ■ Hide ■ Show 	Hide
Zero point measured	Shows the zero point measured for the adjustment.	Signed floating-point number	–
Zero point standard deviation	Shows the standard deviation of the zero point measured.	Positive floating-point number	–
Select action	Select the zero point value to apply.	<ul style="list-style-type: none"> ■ Restore ■ Keep current zero point ■ Apply zero point measured ■ Apply factory zero point * 	Keep current zero point

* Visibility depends on order options or device settings

10.7.4 Configuring the totalizer

In the "Totalizer 1 to n" submenu, you can configure the specific totalizer.

Navigation

"Setup" menu → Advanced setup → Totalizer 1 to n

► Totalizer 1 to n		
Assign process variable 1 to n (11104-1 to n)	→	📄 150
Process variable unit 1 to n (11107-1 to n)	→	📄 150
Totalizer 1 to n operation mode (11102-1 to n)	→	📄 150
Totalizer 1 to n control (11101-1 to n)	→	📄 151
Totalizer 1 to n failure behavior (11103-1 to n)	→	📄 151

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Assign process variable 1 to n	Select process variable for totalizer.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow * ■ Target mass flow * ■ Carrier mass flow * ■ Target volume flow * ■ Carrier volume flow * ■ Target corrected volume flow * ■ Carrier corrected volume flow * ■ GSV flow * ■ GSV flow alternative * ■ NSV flow * ■ NSV flow alternative * ■ S&W volume flow * ■ Oil mass flow * ■ Water mass flow * ■ Oil volume flow * ■ Water volume flow * ■ Oil corrected volume flow * ■ Water corrected volume flow * ■ Raw value mass flow 	Mass flow
Process variable unit 1 to n	Select the unit for the process variable of the totalizer.	Unit choose list	kg
Totalizer 1 to n operation mode	Select totalizer operation mode, e.g. only totalize forward flow or only totalize reverse flow.	<ul style="list-style-type: none"> ■ Net ■ Forward ■ Reverse 	Forward

Parameter	Description	Selection	Factory setting
Totalizer 1 to n control	Operate the totalizer.	<ul style="list-style-type: none">■ Reset + hold■ Preset + hold■ Hold■ Totalize	Totalize
Totalizer 1 to n failure behavior	Select totalizer behavior in the event of a device alarm.	<ul style="list-style-type: none">■ Hold■ Continue■ Last valid value + continue	Continue





















* Visibility depends on order options or device settings


10.7.5 Carrying out additional display configurations

In the **Display** submenu you can set all the parameters associated with the configuration of the local display.

Navigation

"Setup" menu → Advanced setup → Display





► Display		
Format display	→	 154
Value 1 display	→	 155
0% bargraph value 1	→	 155
100% bargraph value 1	→	 155
Decimal places 1	→	 156
Value 2 display	→	 156
Decimal places 2	→	 156
Value 3 display	→	 156
0% bargraph value 3	→	 156
100% bargraph value 3	→	 156
Decimal places 3	→	 156
Value 4 display	→	 156
Decimal places 4	→	 156
Value 5 display	→	 156
0% bargraph value 5	→	 156
100% bargraph value 5	→	 156
Decimal places 5	→	 157
Value 6 display	→	 157
Decimal places 6	→	 157
Value 7 display	→	 157




0% bargraph value 7	→  157
100% bargraph value 7	→  157
Decimal places 7	→  157
Value 8 display	→  157
Decimal places 8	→  157
Display language	→  158
Display interval	→  158
Display damping	→  158
Header	→  158
Header text	→  158
Separator	→  158
Backlight	→  158

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul style="list-style-type: none">■ 1 value, max. size■ 1 bargraph + 1 value■ 2 values■ 1 value large + 2 values■ 4 values	1 value, max. size

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow * ■ Density ■ Reference density * ■ Temperature ■ Pressure ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Concentration * ■ Target mass flow * ■ Carrier mass flow * ■ Target volume flow * ■ Carrier volume flow * ■ Target corrected volume flow * ■ Carrier corrected volume flow * ■ Application specific output 0 * ■ Application specific output 1 * ■ Inhomogeneous medium index ■ Suspended bubbles index * ■ HBSI * ■ Raw value mass flow ■ Exciter current 0 ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 * ■ Oscillation frequency 0 ■ Frequency fluctuation 0 * ■ Oscillation amplitude 0 * ■ Signal asymmetry ■ Torsion signal asymmetry * ■ Carrier pipe temperature * ■ Electronics temperature ■ Sensor index coil asymmetry ■ Test point 0 ■ Test point 1 ■ Current output 1 ■ Current output 2 * ■ Current output 3 * ■ Current output 4 * 	Mass flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 kg/h ■ 0 lb/min
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Decimal places 1	A measured value is specified in the Value 1 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx ■ x.xxxxx ■ x.xxxxxx 	x.xx
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→  139)	None
Decimal places 2	A measured value is specified in the Value 2 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx ■ x.xxxxx ■ x.xxxxxx 	x.xx
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→  139)	None
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 kg/h ■ 0 lb/min
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 3	A measured value is specified in the Value 3 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx ■ x.xxxxx ■ x.xxxxxx 	x.xx
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→  139)	None
Decimal places 4	A measured value is specified in the Value 4 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx ■ x.xxxxx ■ x.xxxxxx 	x.xx
Value 5 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→  139)	None
0% bargraph value 5	An option was selected in the Value 5 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Depends on country: <ul style="list-style-type: none"> ■ 0 kg/h ■ 0 lb/min
100% bargraph value 5	An option was selected in the Value 5 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Decimal places 5	A measured value is specified in the Value 5 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx ■ x.xxxxx ■ x.xxxxxx 	x.xx
Value 6 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→  139)	None
Decimal places 6	A measured value is specified in the Value 6 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx ■ x.xxxxx ■ x.xxxxxx 	x.xx
Value 7 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→  139)	None
0% bargraph value 7	An option was selected in the Value 7 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Depends on country: <ul style="list-style-type: none"> ■ 0 kg/h ■ 0 lb/min
100% bargraph value 7	An option was selected in the Value 7 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 7	A measured value is specified in the Value 7 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx ■ x.xxxxx ■ x.xxxxxx 	x.xx
Value 8 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→  139)	None
Decimal places 8	A measured value is specified in the Value 8 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx ■ x.xxxxx ■ x.xxxxxx 	x.xx

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Display language	A local display is provided.	Set display language.	<ul style="list-style-type: none"> ■ English ■ Deutsch ■ Français ■ Español ■ Italiano ■ Nederlands ■ Portuguesa ■ Polski ■ русский язык (Russian) ■ Svenska ■ Türkçe ■ 中文 (Chinese) ■ 日本語 (Japanese) ■ 한국어 (Korean) ■ tiếng Việt (Vietnamese) ■ čeština (Czech) 	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	A local display is provided.	Select header contents on local display.	<ul style="list-style-type: none"> ■ Device tag ■ Free text 	Device tag
Header text	The Free text option is selected in the Header parameter.	Enter display header text.	Max. 12 characters, such as letters, numbers or special characters (e.g. @, %, /)	-----
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	<ul style="list-style-type: none"> ■ . (point) ■ , (comma) 	. (point)
Backlight	One of the following conditions is met: <ul style="list-style-type: none"> ■ Order code for "Display; operation", option F "4-line, illum.; touch control" ■ Order code for "Display; operation", option G "4-line, illum.; touch control +WLAN" 	Switch the local display backlight on and off.	<ul style="list-style-type: none"> ■ Disable ■ Enable 	Enable

* Visibility depends on order options or device settings

10.7.6 WLAN configuration

The **WLAN Settings** submenu guides the user systematically through all the parameters that have to be set for the WLAN configuration.

Navigation

"Setup" menu → Advanced setup → WLAN settings














▶ WLAN settings

WLAN

→ ⓘ 159



WLAN mode

→ ⓘ 159

SSID name	→  159
Network security	→  159
Security identification	→  159
User name	→  159
WLAN password	→  159
WLAN IP address	→  160
WLAN MAC address	→  160
WLAN passphrase	→  160
WLAN MAC address	→  160
Assign SSID name	→  160
SSID name	→  160
Connection state	→  160
Received signal strength	→  160

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
WLAN	–	Switch WLAN on and off.	<ul style="list-style-type: none"> ■ Disable ■ Enable 	Enable
WLAN mode	–	Select WLAN mode.	<ul style="list-style-type: none"> ■ WLAN access point ■ WLAN Client 	WLAN access point
SSID name	The client is activated.	Enter the user-defined SSID name (max. 32 characters).	–	–
Network security	–	Select the security type of the WLAN network.	<ul style="list-style-type: none"> ■ Unsecured ■ WPA2-PSK ■ EAP-PEAP with MSCHAPv2 * ■ EAP-PEAP MSCHAPv2 no server authentic. * ■ EAP-TLS * 	WPA2-PSK
Security identification	–	Select security settings and download these settings via menu Data management > Security > WLAN.	<ul style="list-style-type: none"> ■ Trusted issuer certificate ■ Device certificate ■ Device private key 	–
User name	–	Enter user name.	–	–
WLAN password	–	Enter WLAN password.	–	–

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
WLAN IP address	–	Enter IP address of the WLAN interface of the device.	4 octet: 0 to 255 (in the particular octet)	192.168.1.212
WLAN MAC address	–	Enter MAC address of the WLAN interface of the device.	Unique 12-digit character string comprising letters and numbers	Each measuring device is given an individual address.
WLAN passphrase	The WPA2-PSK option is selected in the Security type parameter.	Enter the network key (8 to 32 characters).  The network key supplied with the device should be changed during commissioning for security reasons.	8 to 32-digit character string comprising numbers, letters and special characters (without spaces)	Serial number of the measuring device (e.g. L100A802000)
Assign SSID name	–	Select which name will be used for SSID: device tag or user-defined name.	<ul style="list-style-type: none"> Device tag User-defined 	User-defined
SSID name	<ul style="list-style-type: none"> The User-defined option is selected in the Assign SSID name parameter. The WLAN access point option is selected in the WLAN mode parameter. 	Enter the user-defined SSID name (max. 32 characters).  The user-defined SSID name may only be assigned once. If the SSID name is assigned more than once, the devices can interfere with one another.	Max. 32-digit character string comprising numbers, letters and special characters	EH_device designation_last 7 digits of the serial number (e.g. EH_Promass_500_A 802000)
Connection state	–	Displays the connection status.	<ul style="list-style-type: none"> Connected Not connected 	Not connected
Received signal strength	–	Shows the received signal strength.	<ul style="list-style-type: none"> Low Medium High 	High

* Visibility depends on order options or device settings

10.7.7 Viscosity application package



For detailed information on the parameter descriptions for the Viscosity application package, see the Special Documentation for the device → 309

Navigation

"Setup" menu → Advanced setup → Viscosity

10.7.8 Concentration Measurement application package



For detailed information on the parameter descriptions for the Concentration application package, see the Special Documentation for the device → 309

Navigation

"Setup" menu → Advanced setup → Concentration

10.7.9 Petroleum application package



For detailed information on the parameter descriptions for the Petroleum application package, see the Special Documentation for the device → 309

Navigation

"Setup" menu → Advanced setup → Petroleum

10.7.10 Heartbeat Technology application package



For detailed information on the parameter descriptions of the application packages, see the Special Documentation for the device. → 309

Navigation

"Setup" menu → Advanced setup → Heartbeat setup

10.7.11 Configuration management

After commissioning, you can save the current device configuration or restore the previous device configuration. The device configuration is managed via the **Configuration management** parameter.

Navigation

"Setup" menu → Advanced setup → Configuration backup

► Configuration backup		
Operating time		→ 161
Last backup		→ 161
Configuration management		→ 161
Backup state		→ 161
Comparison result		→ 161

Parameter overview with brief description


Parameter	Description	User interface / Selection	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	–
Last backup	Shows when the last data backup was saved to HistoROM backup.	Days (d), hours (h), minutes (m) and seconds (s)	–
Configuration management	Select action for managing the device data in the HistoROM backup.	<ul style="list-style-type: none"> ■ Cancel ■ Execute backup ■ Restore * ■ Compare * ■ Clear backup data 	Cancel
Backup state	Shows the current status of data saving or restoring.	<ul style="list-style-type: none"> ■ None ■ Backup in progress ■ Restoring in progress ■ Delete in progress ■ Compare in progress ■ Restoring failed ■ Backup failed 	None
Comparison result	Comparison of current device data with HistoROM backup.	<ul style="list-style-type: none"> ■ Settings identical ■ Settings not identical ■ No backup available ■ Backup settings corrupt ■ Check not done ■ Dataset incompatible 	Check not done

* Visibility depends on order options or device settings

Function range of "Configuration management" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Execute backup	A backup copy of the current device configuration is saved from the HistoROM backup to the memory of the device. The backup copy includes the transmitter data of the device.
Restore	The last backup copy of the device configuration is restored from the display module from the device memory to the device's HistoROM backup. The backup copy includes the transmitter data of the device.
Compare	The device configuration saved in the device memory is compared with the current device configuration of the HistoROM backup.
Clear backup data	The backup copy of the device configuration is deleted from the memory of the device.

 *HistoROM backup*
A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

 While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

10.7.12 Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

Navigation

"Setup" menu → Advanced setup → Administration

► Administration

► Define access code

→ 162

► Reset access code

→ 163

Device reset

→ 163

Using the parameter to define the access code

Complete this wizard to specify an access code for the Maintenance role.

Navigation

"Setup" menu → Advanced setup → Administration → Define access code

► Define access code

Define access code

→ 163

Confirm access code

→ 163

Parameter overview with brief description

Parameter	Description	User entry
Define access code	Restrict write-access to parameters to protect the configuration of the device against unintentional changes.	Max. 16-digit character string comprising numbers, letters and special characters
Confirm access code	Confirm the entered access code.	Max. 16-digit character string comprising numbers, letters and special characters

Using the parameter to reset the access code**Navigation**

"Setup" menu → Advanced setup → Administration → Reset access code

► Reset access code


Operating time

→ 163

Reset access code

→ 163

Parameter overview with brief description

Parameter	Description	User interface / User entry	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	–
Reset access code	Reset access code to factory settings.  For a reset code, contact your Endress+Hauser service organization. The reset code can only be entered via: <ul style="list-style-type: none"> Web browser DeviceCare, FieldCare (via CDI-RJ45 service interface) Fieldbus 	Character string comprising numbers, letters and special characters	0x00

Using the parameter to reset the device**Navigation**

"Setup" menu → Advanced setup → Administration

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	<ul style="list-style-type: none"> Cancel To delivery settings Restart device Restore S-DAT backup * 	Cancel

* Visibility depends on order options or device settings




















10.8 Simulation

Via the **Simulation** submenu, it is possible to simulate various process variables in the process and the device alarm mode and verify downstream signal chains (switching valves


or closed-control loops). The simulation can be performed without a real measurement (no flow of medium through the device).

Navigation

"Diagnostics" menu → Simulation

► Simulation		
Assign simulation process variable	→	 165
Process variable value	→	 165
Current input 1 to n simulation	→	 166
Value current input 1 to n	→	 166
Status input 1 to n simulation	→	 166
Input signal level 1 to n	→	 166
Current output 1 to n simulation	→	 165
Current output value	→	 165
Frequency output 1 to n simulation	→	 165
Frequency output 1 to n value	→	 165
Pulse output simulation 1 to n	→	 165
Pulse value 1 to n	→	 165
Switch output simulation 1 to n	→	 165
Switch state 1 to n	→	 165
Relay output 1 to n simulation	→	 165
Switch state 1 to n	→	 165
Device alarm simulation	→	 166
Diagnostic event category	→	 166
Diagnostic event simulation	→	 166

Parameter overview with brief description




Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign simulation process variable	–	Select a process variable for the simulation process that is activated.	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow[*] ■ Target mass flow[*] ■ Carrier mass flow[*] ■ Target volume flow[*] ■ Carrier volume flow[*] ■ Target corrected volume flow[*] ■ Carrier corrected volume flow[*] ■ Density ■ Reference density[*] ■ Temperature ■ Concentration[*] ■ Time period signal frequency (TPS)[*] 	Off
Process variable value	A process variable is selected in the Assign simulation process variable parameter (→ 165).	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Current output 1 to n simulation	–	Switch the simulation of the current output on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Current output value	In the Current output 1 to n simulation parameter, the On option is selected.	Enter the current value for simulation.	3.59 to 22.5 mA	3.59 mA
Frequency output 1 to n simulation	In the Operating mode parameter, the Frequency option is selected.	Switch the simulation of the frequency output on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Frequency output 1 to n value	In the Frequency simulation 1 to n parameter, the On option is selected.	Enter the frequency value for the simulation.	0.0 to 12 500.0 Hz	0.0 Hz
Pulse output simulation 1 to n	In the Operating mode parameter, the Pulse option is selected.	Set and switch off the pulse output simulation.  For Fixed value option: Pulse width parameter (→ 127) defines the pulse width of the pulses output.	<ul style="list-style-type: none"> ■ Off ■ Fixed value ■ Down-counting value 	Off
Pulse value 1 to n	In the Pulse output simulation 1 to n parameter, the Down-counting value option is selected.	Enter the number of pulses for simulation.	0 to 65 535	0
Switch output simulation 1 to n	In the Operating mode parameter, the Switch option is selected.	Switch the simulation of the switch output on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Switch state 1 to n	–	Select the status of the status output for the simulation.	<ul style="list-style-type: none"> ■ Open ■ Closed 	Open
Relay output 1 to n simulation	–	Switch simulation of the relay output on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Switch state 1 to n	The On option is selected in the Switch output simulation 1 to n parameter.	Select status of the relay output for the simulation.	<ul style="list-style-type: none"> ■ Open ■ Closed 	Open

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Device alarm simulation	–	Switch the device alarm on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Diagnostic event category	–	Select a diagnostic event category.	<ul style="list-style-type: none"> ■ Sensor ■ Electronics ■ Configuration ■ Process 	Process
Diagnostic event simulation	–	Select a diagnostic event to simulate this event.	<ul style="list-style-type: none"> ■ Off ■ Diagnostic event picklist (depends on the category selected) 	Off
Current input 1 to n simulation	–	Switch simulation of the current input on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Value current input 1 to n	In the Current input 1 to n simulation parameter, the On option is selected.	Enter the current value for simulation.	0 to 22.5 mA	0 mA
Status input 1 to n simulation	–	Switch simulation of the status input on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Input signal level 1 to n	In the Status input simulation parameter, the On option is selected.	Select the signal level for the simulation of the status input.	<ul style="list-style-type: none"> ■ High ■ Low 	High

* Visibility depends on order options or device settings

10.9 Protecting settings from unauthorized access

The following write protection options exist in order to protect the configuration of the measuring device from unintentional modification:


- Protect access to parameters via access code →  166
- Protect access to local operation via key locking →  79
- Protect access to measuring device via write protection switch →  168

10.9.1 Write protection via access code

The effects of the user-specific access code are as follows:


- Via local operation, the parameters for the measuring device configuration are write-protected and their values can no longer be changed.
- Device access is protected via the Web browser, as are the parameters for the measuring device configuration.
- Device access is protected via FieldCare or DeviceCare (via CDI-RJ45 service interface), as are the parameters for the measuring device configuration.

Defining the access code via the local display

1. Navigate to the **Define access code** parameter (→  163).
2. Maximum of 16-digit character string comprising numbers, letters and special characters as the access code.


3. Enter the access code again in the **Confirm access code** parameter (→ 163) to confirm.

↳ The  symbol appears in front of all write-protected parameters.

- 
 - Disabling parameter write protection via access code → 78.
 - If the access code is lost: Resetting the access code → 167.
 - The user role with which the user is currently logged in is displayed in **Access status** parameter.
 - Navigation path: Operation → Access status
 - User roles and their access rights → 78
- The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view.
- The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.

Parameters which can always be modified via the local display


Certain parameters that do not affect the measurement are excepted from parameter write protection via the local display. Despite the user-specific access code, they can always be modified, even if the other parameters are locked.

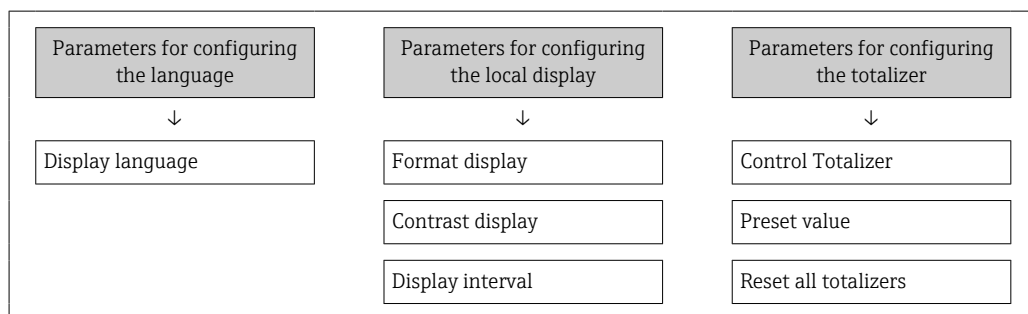

Defining the access code via the web browser

1. Navigate to the **Define access code** parameter (→ 163).
2. Define a 16-digit (max.) numeric code as the access code.
3. Enter the access code again in the **Confirm access code** parameter (→ 163) to confirm.

↳ The web browser switches to the login page.

- 
 - Disabling parameter write protection via access code → 78.
 - If the access code is lost: Resetting the access code → 167.
 - The **Access status** parameter shows which user role the user is currently logged in with.
 - Navigation path: Operation → Access status
 - User roles and their access rights → 78

If no action is performed for 10 minutes, the web browser automatically returns to the login page.

Resetting the access code

If you misplace the user-specific access code, it is possible to reset the code to the factory setting. A reset code must be entered for this purpose. The user-specific access code can then be defined again afterwards.

Via Web browser, FieldCare, DeviceCare (via CDI-RJ45 service interface), fieldbus

i You can only obtain a reset code from your local Endress+Hauser service organization. The code must be calculated explicitly for every device.

1. Note down the serial number of the device.
2. Read off the **Operating time** parameter.
3. Contact the local Endress+Hauser service organization and tell them the serial number and the operating time.
 - ↳ Get the calculated reset code.
4. Enter the reset code in the **Reset access code** parameter (→ 163).
 - ↳ The access code has been reset to the factory setting **0000**. It can be redefined → 166.

i For IT security reasons, the calculated reset code is only valid for 96 hours from the specified operating time and for the specific serial number. If you cannot return to the device within 96 hours, you should either increase the operating time you read out by a few days or switch off the device.

10.9.2 Write protection via write protection switch


Unlike parameter write protection via a user-specific access code, this allows the user to lock write access to the entire operating menu - apart from the **"Contrast display" parameter**.

The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via PROFINET protocol

Proline 500 – digital

Enable/disable write protection

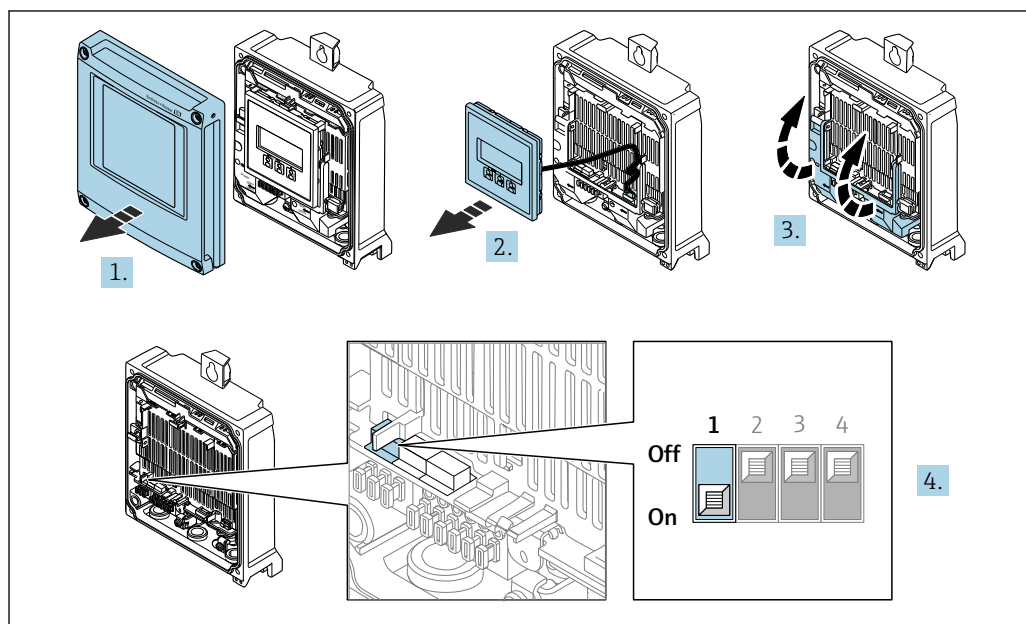



A0029673

1. Open the housing cover.
2. Remove the display module.
3. Fold open the terminal cover.

4. Enable or disable write protection:

 Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection/setting to **OFF** (factory setting) disables hardware write protection.

- In the **Locking status** parameter, the **Hardware locked** option is displayed
→ 170. When hardware write protection is enabled, the  symbol appears in the header of the measured value display and in the navigation view in front of the parameters.

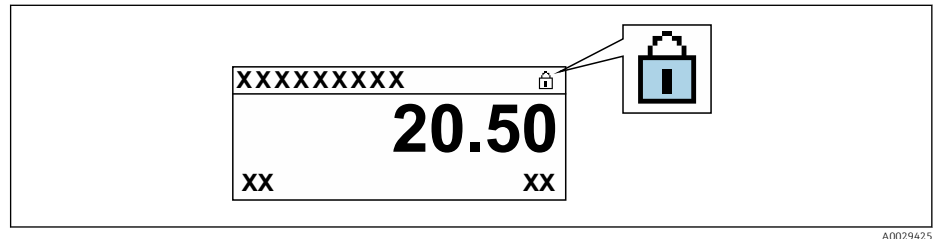

A0029425

5. Insert the display module.

6. Close the housing cover.


7. NOTICE

Excessive tightening torque applied to the fixing screws!

Risk of damaging the plastic transmitter.


- ▶ Tighten the fixing screws as per the tightening torque: 2.5 Nm (1.8 lbf ft)


Tighten the fixing screws.

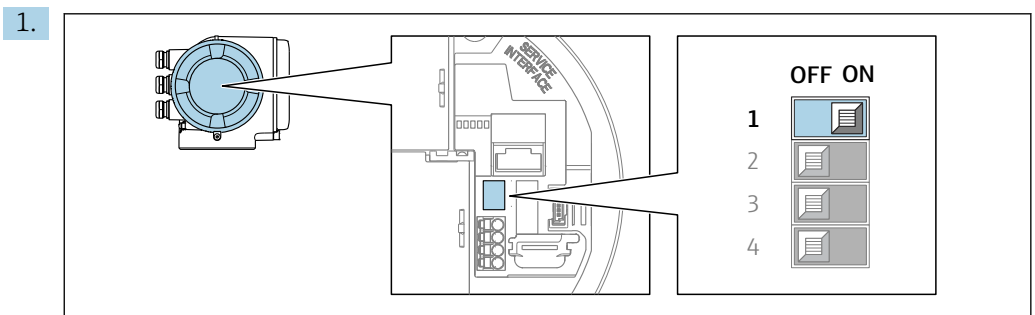Proline 500

A0029630


Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection.

- In the **Locking status** parameter, the **Hardware locked** option is displayed
→ 170. In addition, on the local display the  symbol appears in front of the parameters in the header of the operational display and in the navigation view.

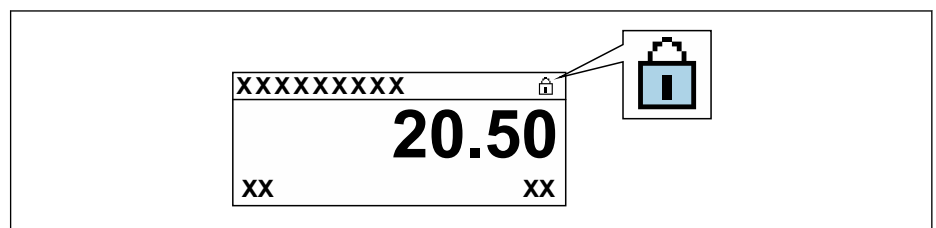

A0029425

 2. Setting the write protection (WP) switch on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.

- No option is displayed in the **Locking status** parameter → 170. On the local display, the  symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

 

11 Operation

11.1 Reading the device locking status

Device active write protection: **Locking status** parameter

Operation → Locking status



Function scope of the "Locking status" parameter

Options	Description
None	The access authorization displayed in the Access status parameter applies →  78. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool) →  168.
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset, etc.). Once the internal processing has been completed, the parameters can be changed again.

11.2 Adjusting the operating language





Detailed information:

- To configure the operating language →  107
- For information on the operating languages supported by the measuring device →  300

11.3 Configuring the display

Detailed information:





- On the basic settings for the local display →  137
- On the advanced settings for the local display →  152

11.4 Reading off measured values

With the **Measured values** submenu, it is possible to read all the measured values.

Navigation

"Diagnostics" menu → Measured values















▶ Measured values	
▶ Measured variables	→  171
▶ Totalizer	→  173
▶ Input values	→  174
▶ Output values	→  175

11.4.1 "Measured variables" submenu



The **Measured variables** submenu contains all the parameters needed to display the current measured values for each process variable.








 

 

 
Navigation


 

 

 
"Diagnostics" menu → Measured values → Measured variables

► Measured variables		
Mass flow	→ 	171
Volume flow	→ 	171
Corrected volume flow	→ 	172
Density	→ 	172
Reference density	→ 	172
Temperature	→ 	172
Pressure	→ 	172
Concentration	→ 	172
Target mass flow	→ 	172
Carrier mass flow	→ 	172
Target corrected volume flow	→ 	172
Carrier corrected volume flow	→ 	173
Target volume flow	→ 	173
Carrier volume flow	→ 	173

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Mass flow	–	Displays the mass flow that is currently measured. <i>Dependency</i> The unit is taken from: Mass flow unit parameter (→  113)	Signed floating-point number
Volume flow	–	Displays the volume flow that is currently calculated. <i>Dependency</i> The unit is taken from the Volume flow unit parameter (→  113).	Signed floating-point number

Parameter	Prerequisite	Description	User interface
Corrected volume flow	–	Displays the corrected volume flow that is currently calculated. <i>Dependency</i> The unit is taken from: Corrected volume flow unit parameter (→  113)	Signed floating-point number
Density	–	Shows the density currently measured. <i>Dependency</i> The unit is taken from the Density unit parameter (→  113).	Signed floating-point number
Reference density	–	Displays the reference density that is currently calculated. <i>Dependency</i> The unit is taken from: Reference density unit parameter (→  113)	Signed floating-point number
Temperature	–	Shows the medium temperature currently measured. <i>Dependency</i> The unit is taken from: Temperature unit parameter (→  114)	Signed floating-point number
Pressure	–	Displays either a fixed or external pressure value. <i>Dependency</i> The unit is taken from the Pressure unit parameter (→  114).	Signed floating-point number
Concentration	For the following order code: Order code for "Application package", option ED "Concentration"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the concentration that is currently calculated. <i>Dependency</i> The unit is taken from the Concentration unit parameter.	Signed floating-point number
Target mass flow	With the following conditions: Order code for "Application package", option ED "Concentration"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the mass flow that is currently measured for the target medium. <i>Dependency</i> The unit is taken from: Mass flow unit parameter (→  113)	Signed floating-point number
Carrier mass flow	With the following conditions: Order code for "Application package", option ED "Concentration"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the mass flow of the carrier medium that is currently measured. <i>Dependency</i> The unit is taken from: Mass flow unit parameter (→  113)	Signed floating-point number
Target corrected volume flow	With the following conditions: ■ Order code for "Application package", option ED "Concentration" ■ The Ethanol in water option or %mass / %volume option is selected in the Liquid type parameter.  The software options currently enabled are displayed in the Software option overview parameter.	Displays the corrected volume flow that is currently measured for the target fluid. <i>Dependency</i> The unit is taken from the Volume flow unit parameter (→  113).	Signed floating-point number





Parameter	Prerequisite	Description	User interface
Carrier corrected volume flow	<p>With the following conditions:</p> <ul style="list-style-type: none"> Order code for "Application package", option ED "Concentration" In the Liquid type parameter, the Ethanol in water option or %mass / %volume option is selected. <p> The software options currently enabled are displayed in the Software option overview parameter.</p>	<p>Displays the corrected volume flow currently measured for the carrier fluid.</p> <p><i>Dependency</i> The unit is taken from the Volume flow unit parameter (→  113).</p>	Signed floating-point number
Target volume flow	<p>With the following conditions:</p> <ul style="list-style-type: none"> Order code for "Application package", option ED "Concentration" The Ethanol in water option or %mass / %volume option is selected in the Liquid type parameter. The %vol option is selected in the Concentration unit parameter. <p> The software options currently enabled are displayed in the Software option overview parameter.</p>	<p>Displays the volume flow currently measured for the target medium.</p> <p><i>Dependency</i> The unit is taken from the Volume flow unit parameter (→  113).</p>	Signed floating-point number
Carrier volume flow	<p>With the following conditions:</p> <ul style="list-style-type: none"> Order code for "Application package", option ED "Concentration" The Ethanol in water option or %mass / %volume option is selected in the Liquid type parameter. The %vol option is selected in the Concentration unit parameter. <p> The software options currently enabled are displayed in the Software option overview parameter.</p>	<p>Displays the volume flow currently measured for the carrier medium.</p> <p><i>Dependency</i> The unit is taken from the Volume flow unit parameter (→  113).</p>	Signed floating-point number

11.4.2 Totalizer

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu → Measured values → Totalizer

► Totalizer	
Assign process variable 1 to n	→  174
Totalizer 1 to n value	→  174
Totalizer 1 to n status	→  174
Totalizer 1 to n status (Hex)	→  174

Parameter overview with brief description

Parameter	Description	Selection / User interface	Factory setting
Assign process variable 1 to n	Select process variable for totalizer.	<ul style="list-style-type: none">■ Mass flow■ Volume flow■ Corrected volume flow *■ Target mass flow *■ Carrier mass flow *■ Target volume flow *■ Carrier volume flow *■ Target corrected volume flow *■ Carrier corrected volume flow *■ GSV flow *■ GSV flow alternative *■ NSV flow *■ NSV flow alternative *■ S&W volume flow *■ Oil mass flow *■ Water mass flow *■ Oil volume flow *■ Water volume flow *■ Oil corrected volume flow *■ Water corrected volume flow *■ Raw value mass flow	Mass flow
Totalizer 1 to n value	Shows the totalizer value reported to the controller for further processing.	Signed floating-point number	0 kg
Totalizer 1 to n status	Shows the status of the totalizer value reported to the controller for further processing ('Good', 'Uncertain', 'Bad').	<ul style="list-style-type: none">■ Good■ Uncertain■ Bad	Good
Totalizer 1 to n status (Hex)	Shows the status of the totalizer value reported to the controller for further processing (Hex).	0 to 255	128

* Visibility depends on order options or device settings

11.4.3 "Input values" submenu

The **Input values** submenu guides you systematically to the individual input values.

Navigation

"Diagnostics" menu → Measured values → Input values

► Input values

► Current input 1 to n

→ ⓘ 174

► Status input 1 to n

→ ⓘ 175

Input values of current input

The **Current input 1 to n** submenu contains all the parameters needed to display the current measured values for every current input.

Navigation

"Diagnostics" menu → Measured values → Input values → Current input 1 to n

► Current input 1 to n

Measured values 1 to n → 175

Measured current 1 to n → 175

Parameter overview with brief description

Parameter	Description	User interface
Measured values 1 to n	Displays the current input value.	Signed floating-point number
Measured current 1 to n	Displays the current value of the current input.	0 to 22.5 mA

Input values of status input

The **Status input 1 to n** submenu contains all the parameters needed to display the current measured values for every status input.

Navigation

"Diagnostics" menu → Measured values → Input values → Status input 1 to n

► Status input 1 to n

Value status input → 175

Parameter overview with brief description

Parameter	Description	User interface
Value status input	Shows the current input signal level.	<div><div>High</div><div>Low</div></div>

11.4.4 Output values

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.

Navigation

"Diagnostics" menu → Measured values → Output values

► Output values

► Current output 1 to n

→ 176

► Pulse/frequency/switch output
1 to n

→ 176

► Relay output 1 to n

→ 177

Output values of current output

The **Value current output** submenu contains all the parameters needed to display the current measured values for every current output.

Navigation

"Diagnostics" menu → Measured values → Output values → Value current output 1 to n

► Current output 1 to n

Output current

→ 176

Measured current

→ 176

Parameter overview with brief description

Parameter	Description	User interface
Output current	Displays the current value currently calculated for the current output.	3.59 to 22.5 mA
Measured current	Displays the current value currently measured for the current output.	0 to 30 mA

Output values for pulse/frequency/switch output

The **Pulse/frequency/switch output 1 to n** submenu contains all the parameters needed to display the current measured values for every pulse/frequency/switch output.

Navigation

"Diagnostics" menu → Measured values → Output values → Pulse/frequency/switch output 1 to n

► Pulse/frequency/switch output
1 to n

Output frequency

→ 177

Pulse output 1 to n

→ 177

Switch state

→ 177

Parameter overview with brief description




Parameter	Prerequisite	Description	User interface
Output frequency	In the Operating mode parameter, the Frequency option is selected.	Displays the value currently measured for the frequency output.	0.0 to 12 500.0 Hz
Pulse output 1 to n	The Pulse option is selected in the Operating mode parameter parameter.	Displays the pulse frequency currently output.	Positive floating-point number
Switch state	The Switch option is selected in the Operating mode parameter.	Displays the current switch output status.	<ul style="list-style-type: none"> ■ Open ■ Closed

Output values for relay output

The **Relay output 1 to n** submenu contains all the parameters needed to display the current measured values for every relay output.

Navigation

"Diagnostics" menu → Measured values → Output values → Relay output 1 to n



► Relay output 1 to n		
Switch state		→  177
Switch cycles		→  177
Max. switch cycles number		→  177

Parameter overview with brief description

Parameter	Description	User interface
Switch state	Shows the current relay switch status.	<ul style="list-style-type: none"> ■ Open ■ Closed
Switch cycles	Shows number of all performed switch cycles.	Positive integer
Max. switch cycles number	Shows the maximal number of guaranteed switch cycles.	Positive integer

11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu (→  108)
- Advanced settings using the **Advanced setup** submenu (→  143)

11.6 Performing a totalizer reset

The totalizers are reset in the **Operation** submenu:

- Control Totalizer
- Reset all totalizers

Navigation
"Operation" menu → Totalizer handling

► Totalizer handling

Totalizer 1 to n control

→ 178

Preset value 1 to n

→ 178

Reset all totalizers

→ 178

Parameter overview with brief description

Parameter	Description	Selection / User entry	Factory setting
Totalizer 1 to n control	Operate the totalizer.	<div>Reset + hold</div> <div>Preset + hold</div> <div>Hold</div> <div>Totalize</div>	Totalize
Preset value 1 to n	Specify start value for totalizer.	Signed floating-point number	0 kg
Reset all totalizers	Reset all totalizers to 0 and start.	<div>Cancel</div> <div>Reset + totalize</div>	Cancel

11.6.1 Function scope of "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started or continues running.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold ¹⁾	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.
Preset + totalize ¹⁾	The totalizer is set to the defined start value in the Preset value parameter and the totaling process is restarted.
Hold	Totalizing is stopped.

1) Visible depending on the order options or device settings

11.6.2 Function range of "Reset all totalizers" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the previously aggregated flow values.

11.7 Displaying the measured value history

The **Extended HistoROM** application package must be enabled in the device (order option) for the **Data logging** submenu to appear. This contains all the parameters for the measured value history.




Data logging is also available via:

- Plant Asset Management Tool FieldCare → 90.
- Web browser

Function scope

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Displays the measured value trend for each logging channel in the form of a chart

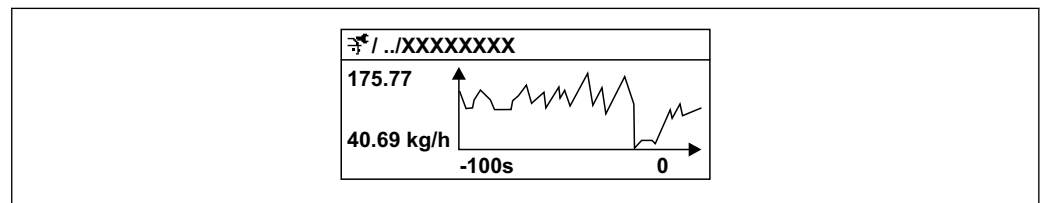

A0016357

37 Chart of a measured value trend

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.





If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

Navigation







"Diagnostics" menu → Data logging

► Data logging	
Assign channel 1	→ 181
Assign channel 2	→ 182
Assign channel 3	→ 182
Assign channel 4	→ 182
Logging interval	→ 182
Clear logging data	→ 182
Data logging	→ 182
Logging delay	→ 182
Data logging control	→ 182

Data logging status	→  182
Entire logging duration	→  182

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign channel 1	The Extended HistoROM application package is available.	Assign process variable to logging channel.	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow * ■ Density ■ Reference density * ■ Temperature ■ Pressure ■ Concentration * ■ Target mass flow * ■ Carrier mass flow * ■ Target volume flow * ■ Carrier volume flow * ■ Target corrected volume flow * ■ Carrier corrected volume flow * ■ Application specific output 0 * ■ Application specific output 1 * ■ Inhomogeneous medium index ■ Suspended bubbles index * ■ HBSI * ■ Raw value mass flow ■ Exciter current 0 ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 * ■ Oscillation frequency 0 ■ Frequency fluctuation 0 * ■ Oscillation amplitude * ■ Oscillation amplitude 1 * ■ Signal asymmetry ■ Torsion signal asymmetry * ■ Carrier pipe temperature * ■ Electronics temperature ■ Sensor index coil asymmetry ■ Test point 0 ■ Test point 1 ■ Current output 1 ■ Current output 2 * ■ Current output 3 * ■ Current output 4 * 	Off

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign channel 2	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see Assign channel 1 parameter (→  181)	Off
Assign channel 3	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see Assign channel 1 parameter (→  181)	Off
Assign channel 4	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see Assign channel 1 parameter (→  181)	Off
Logging interval	The Extended HistoROM application package is available.	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	0.1 to 3 600.0 s	1.0 s
Clear logging data	The Extended HistoROM application package is available.	Clear the entire logging data.	<ul style="list-style-type: none"> ■ Cancel ■ Clear data 	Cancel
Data logging	–	Select the type of data logging.	<ul style="list-style-type: none"> ■ Overwriting ■ Not overwriting 	Overwriting
Logging delay	In the Data logging parameter, the Not overwriting option is selected.	Enter the time delay for measured value logging.	0 to 999 h	0 h
Data logging control	In the Data logging parameter, the Not overwriting option is selected.	Start and stop measured value logging.	<ul style="list-style-type: none"> ■ None ■ Delete + start ■ Stop 	None
Data logging status	In the Data logging parameter, the Not overwriting option is selected.	Displays the measured value logging status.	<ul style="list-style-type: none"> ■ Done ■ Delay active ■ Active ■ Stopped 	Done
Entire logging duration	In the Data logging parameter, the Not overwriting option is selected.	Displays the total logging duration.	Positive floating-point number	0 s

* Visibility depends on order options or device settings

11.8 Gas Fraction Handler

The Gas Fraction Handler improves measurement stability and repeatability in the event of two-phase media and provides valuable diagnostic information for the process.

The function continuously checks for the presence of gas bubbles in liquids or droplets in gases, as this second phase influences the output values for flow and density.

In the case of two-phase media, the Gas Fraction Handler stabilizes the output values and enables better readability for operators and easier interpretation by the process control system. The level of smoothing is adjusted according to the severity of the disturbances introduced by the second phase. In the case of single-phase media, the Gas Fraction Handler does not have any influence on the output values.

Possible options in the Gas Fraction Handler parameter:

- Off: Disables the Gas Fraction Handler. When a second phase is present, large fluctuations in the values output for flow and density will occur.
- Moderate: Use for applications with low levels or intermittent levels of second phase.
- Powerful: Use for applications with very significant levels of second phase.

The Gas Fraction Handler is cumulative to any fixed damping constants applied to flow and density that are set elsewhere in the instrument parameterization.



For detailed information on the parameter descriptions of the Gas Fraction Handler, see the Special Documentation for the device → 309

11.8.1 "Measurement mode" submenu

Navigation

"Expert" menu → Sensor → Measurement mode

► Measurement mode		
MFT (Multi-Frequency Technology)	→	184
Select medium type	→	184
Select gas type	→	184
Reference sound velocity	→	184
Reference sound velocity	→	184
Temperature coefficient sound velocity	→	184
Temperature coefficient sound velocity	→	185
Gas Fraction Handler	→	185

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
MFT (Multi-Frequency Technology)	–	Enable/disable multi-frequency technology to increase the measuring accuracy in the event of microbubbles in the medium.	<ul style="list-style-type: none"> ■ No ■ Yes 	Yes
Select medium type	–	Use this function to select the type of medium: "Gas" or "Liquid". Select the "Other" option in exceptional cases in order to enter the properties of the medium manually (e.g. for highly compressive liquids such as sulfuric acid).	<ul style="list-style-type: none"> ■ Liquid ■ Gas ■ Other 	Liquid
Select gas type	In the Medium selection submenu, the Gas option is selected.	Select measured gas type.	<ul style="list-style-type: none"> ■ Air ■ Ammonia NH₃ ■ Argon Ar ■ Sulfur hexafluoride SF₆ ■ Oxygen O₂ ■ Ozone O₃ ■ Nitrogen oxide NO_x ■ Nitrogen N₂ ■ Nitrous oxide N₂O ■ Methane CH₄ ■ Methane CH₄ + 10% Hydrogen H₂ ■ Methane CH₄ + 20% Hydrogen H₂ ■ Methane CH₄ + 30% Hydrogen H₂ ■ Hydrogen H₂ ■ Helium He ■ Hydrogen chloride HCl ■ Hydrogen sulfide H₂S ■ Ethylene C₂H₄ ■ Carbon dioxide CO₂ ■ Carbon monoxide CO ■ Chlorine Cl₂ ■ Butane C₄H₁₀ ■ Propane C₃H₈ ■ Propylene C₃H₆ ■ Ethane C₂H₆ ■ Other 	Methane CH ₄
Reference sound velocity	In the Select gas type parameter, the Other option is selected.	Enter sound velocity of the gas at 0 °C (32 °F).	1 to 99 999.9999 m/s	415.0 m/s
Reference sound velocity	In the Select medium type parameter, the Other option is selected.	Enter sound velocity of the medium at 0 °C (32 °F).	Signed floating-point number	1 456 m/s
Temperature coefficient sound velocity	In the Select gas type parameter, the Other option is selected.	Enter the temperature coefficient for the gas sound velocity.	Positive floating point number	0.87 (m/s)/K

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Temperature coefficient sound velocity	In the Select medium type parameter, the Other option is selected.	Enter temperature coefficient for the medium sound velocity.	Signed floating-point number	1.3 (m/s)/K
Gas Fraction Handler	–	Activates the Gas Fraction Handler function for two phase media.	<ul style="list-style-type: none"> ■ Off ■ Moderate ■ Powerful 	Moderate

11.8.2 "Medium index" submenu

Navigation

"Expert" menu → Application → Medium index

► Medium index		
Inhomogeneous medium index (6368)	→	📄 185
Cut off inhomogeneous wet gas (6375)	→	📄 185
Cut off inhomogeneous liquid (6374)	→	📄 185
Suspended bubbles index (6376)	→	📄 185
Cut off suspended bubbles (6370)	→	📄 185

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface / User entry	Factory setting
Inhomogeneous medium index	–	Shows the degree of inhomogeneity of the medium.	Signed floating-point number	–
Cut off inhomogeneous wet gas	–	Enter cut off value for wet gas applications. Below this value the 'Inhomogeneous medium index' is set to 0.	Positive floating-point number	0.25
Cut off inhomogeneous liquid	–	Enter cut off value for liquid applications. Below this value the 'Inhomogeneous medium index' is set to 0.	Positive floating-point number	0.05
Suspended bubbles index	The diagnostic index is only available for Promass Q.	Shows the relative amount of suspended bubbles in the medium.	Signed floating-point number	–
Cut off suspended bubbles	The parameter is only available for Promass Q.	Enter the cut off value for suspended bubbles. Below this value the 'Index for suspended bubbles' is set to 0.	Positive floating-point number	0.05

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For local display

Fault	Possible causes	Remedial action
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display dark and no output signals	Supply voltage does not match the voltage specified on the nameplate.	Apply the correct supply voltage .
Local display dark and no output signals	Supply voltage has incorrect polarity.	Reverse polarity of supply voltage.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the electrical contact between the cable and terminals and correct if necessary.
Local display dark and no output signals	<ul style="list-style-type: none"> Terminals are not plugged into the I/O electronics module correctly. Terminals are not plugged into the main electronics module correctly. 	Check terminals.
Local display dark and no output signals	<ul style="list-style-type: none"> I/O electronics module is defective. Main electronics module is defective. 	Order spare part → 272.
Local display dark and no output signals	The connector between the main electronics module and display module is not plugged in correctly.	Check the connection and correct if necessary.
Local display cannot be read, but signal output is within the valid range	Display is set too bright or too dark.	<ul style="list-style-type: none"> Set the display brighter by simultaneously pressing + . Set the display darker by simultaneously pressing + .
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part → 272.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial actions → 198
Text on local display appears in a language that cannot be understood.	The selected operating language cannot be understood.	<ol style="list-style-type: none"> Press + for 2 s ("home position"). Press . Configure the required language in the Display language parameter (→ 158).
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	<ul style="list-style-type: none"> Check the cable and the connector between the main electronics module and display module. Order spare part → 272.

For output signals

Fault	Possible causes	Remedial action
Signal output outside the valid range	Main electronics module is defective.	Order spare part → 272.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Parameter configuration error	Check and adjust parameter configuration.
Device is measuring incorrectly.	Configuration error or device is operated outside the application.	<ol style="list-style-type: none"> Check and correct parameter configuration. Observe limit values specified in the "Technical Data".

For access

Fault	Possible causes	Remedial action
Write access to parameters is not possible.	Hardware write protection is enabled.	Set the write protection switch on the main electronics module to the OFF position → 168.
Write access to parameters is not possible.	Current user role has limited access authorization.	1. Check user role → 78. 2. Enter correct customer-specific access code → 78.
Connection to the web server is not possible.	Web server is disabled.	Use the "FieldCare" or "DeviceCare" operating tool to check if the web server of the device is enabled and enable if necessary → 85.
	The Ethernet interface on the PC is incorrectly configured.	<ul style="list-style-type: none"> ▶ Check the properties of the Internet protocol (TCP/IP) → 81. ▶ Check the network settings with the IT manager.
Connection to the web server is not possible.	WLAN access data are incorrect.	<ul style="list-style-type: none"> ▪ Check WLAN network status. ▪ Log on to the device again using WLAN access data. ▪ Check that WLAN is enabled on the measuring instrument and operating unit → 81.
	WLAN communication is disabled.	–
Unable to connect to web server, FieldCare or DeviceCare.	WLAN network is not available.	<ul style="list-style-type: none"> ▪ Check if WLAN reception is present: LED on display module is lit blue. ▪ Check if WLAN connection is enabled: LED on display module flashes blue. ▪ Switch on instrument function.
Network connection not present or unstable	WLAN network is weak.	<ul style="list-style-type: none"> ▪ Operating unit outside reception range: Check network status on operating unit. ▪ To improve network performance, use an external WLAN antenna.
	Parallel WLAN and Ethernet communication	<ul style="list-style-type: none"> ▪ Check network settings. ▪ Temporarily enable only the WLAN as an interface.
Web browser is frozen and operation no longer possible	Data transfer is active.	Wait until data transfer or current action is finished.
	Connection lost	<ul style="list-style-type: none"> ▶ Check cable connection and power supply. ▶ Refresh the web browser and restart if necessary.
Display of web browser content is difficult to read or incomplete.	Web browser version used is not optimal.	<ul style="list-style-type: none"> ▶ Use correct web browser version → 80. ▶ Empty the web browser cache. ▶ Restart the web browser.
	Unsuitable view settings.	Change the font size/display ratio of the web browser.
Incomplete or no display of content in the web browser	<ul style="list-style-type: none"> ▪ JavaScript is not enabled. ▪ JavaScript cannot be enabled. 	<ul style="list-style-type: none"> ▶ Enable JavaScript. ▶ Enter http://XXX.XXX.X.XX/servlet/basic.html as the IP address.
Operation with FieldCare or DeviceCare via service interface CDI-RJ45 (port 8000) is not possible.	Firewall of the PC or network is blocking communication.	Depending on the settings of the firewall used on the PC or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.
Flashing the firmware with FieldCare or DeviceCare via service interface CDI-RJ45 (port 8000 or TFTP ports) is not possible.	Firewall of the PC or network is blocking communication.	Depending on the settings of the firewall used on the PC or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.

For system integration


Error	Possible causes	Remedy
The PROFINET device name is not displayed correctly and contains coding.	A device name containing one or more underscores has been specified via the automation system.	Specify a correct device name (without underscores) via the automation system.

12.2 Diagnostic information via LEDs

12.2.1 Transmitter

Proline 500 – digital

Various LEDs in the transmitter provide information on the device status.

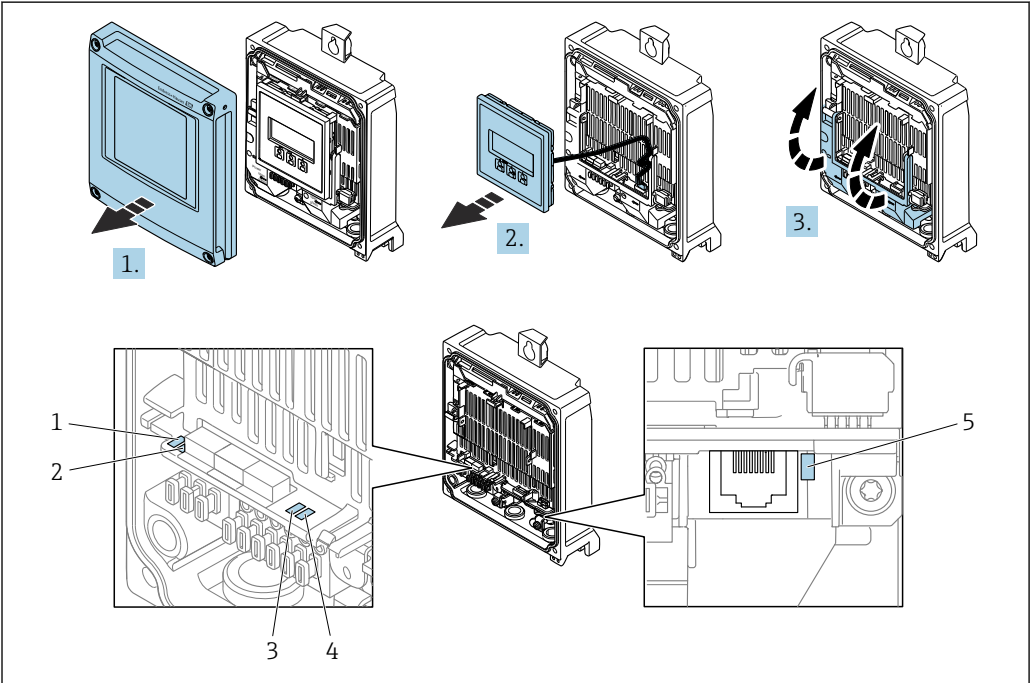

- 1 Supply voltage
- 2 Device status
- 3 Flashing/network status
- 4 Port 1 active: PROFINET over Ethernet-APL
- 5 Port 2 active: service interface (CDI)


- 1. Open the housing cover.
- 2. Remove the display module.
- 3. Fold open the terminal cover.

LED	Color	Meaning
1 Supply voltage	Off	Supply voltage is off or too low.
	Green	Supply voltage is OK.
2 Device status/module status (normal operation)	Off	Firmware error
	Green	Device status is OK.
	Flashing green	Device is not configured.

LED	Color	Meaning
	Flashing red	A diagnostic event with "Warning" diagnostic behavior has occurred.
	Red	A diagnostic event with "Alarm" diagnostic behavior has occurred.
	Red/green flashing	The device restarts/self-test.
3 Flashing/network status	Green	Cyclic data exchange is active.
	Flashing green	Following request from automation system: Flash frequency: 1 Hz (flash functionality: 500 ms on, 500 ms off) Cyclic data exchange is not active, no IP address is available: Flash frequency: 4 Hz
	Red	IP address is available but there is no connection to the automation system
	Flashing red	Cyclic data exchange was active but the connection was disconnected: Flash frequency: 3 Hz
4 Port 1 active: PROFINET over Ethernet-APL	Off	Not connected or no connection established.
	Green	Connection available, no active communication
	Flashing green	Connection with active communication
5 Port 2 active: Service interface (CDI)	Off	Not connected or no connection established.
	Orange	Connection available but no activity.
	Flashing orange	Activity present.

Proline 500

Various LEDs in the transmitter provide information on the device status.

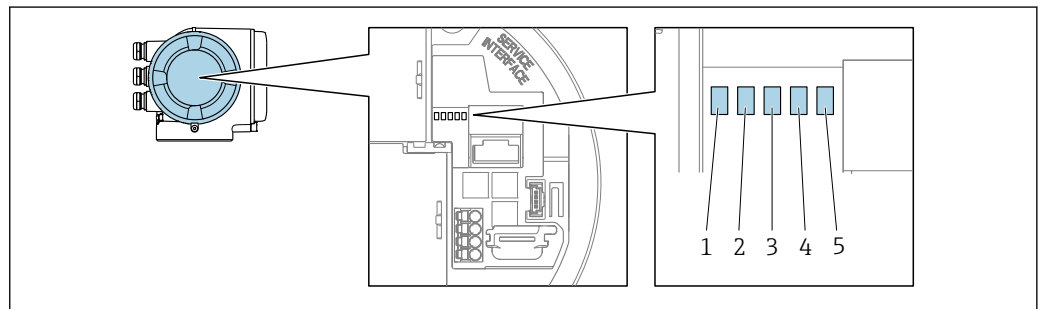

A0029629

- 1 Supply voltage
- 2 Device status
- 3 Flashing/network status
- 4 Port 1 active: PROFINET over Ethernet-APL
- 5 Port 2 active: service interface (CDI)


LED	Color	Meaning
1 Supply voltage	Off	Supply voltage is off or too low.
	Green	Supply voltage is OK.
2 Device status/module status (normal operation)	Off	Firmware error
	Green	Device status is OK.
	Flashing green	Device is not configured.
	Flashing red	A diagnostic event with "Warning" diagnostic behavior has occurred.

LED	Color	Meaning
3 Flashing/network status	Red	A diagnostic event with "Alarm" diagnostic behavior has occurred.
	Red/green flashing	The device restarts/self-test.
	Green	Cyclic data exchange is active.
	Flashing green	Following request from automation system: Flash frequency: 1 Hz (flash functionality: 500 ms on, 500 ms off) If no "Name of Station" is defined: <ul style="list-style-type: none">Flash frequency: 4 HzDisplay: no "Name of Station" available.
4 Port 1 active: PROFINET over Ethernet-APL	Red	IP address is available but there is no connection to the automation system
	Flashing red	Cyclic data exchange was active but the connection was disconnected: Flash frequency: 3 Hz
	Off	Not connected or no connection established.
5 Port 2 active: Service interface CDI- RJ45	White	Connection available, no active communication
	Flashing white	Connection with active communication
	Off	Not connected or no connection established.
5 Port 2 active: Service interface CDI- RJ45	Orange	Connection available but no activity.
	Flashing orange	Activity present.
	Off	Not connected or no connection established.

12.2.2 Sensor connection housing

Proline 500 – digital

Various LEDs on the ISEM electronics unit (intelligent sensor electronics module) in the sensor connection housing provide information about the device status.

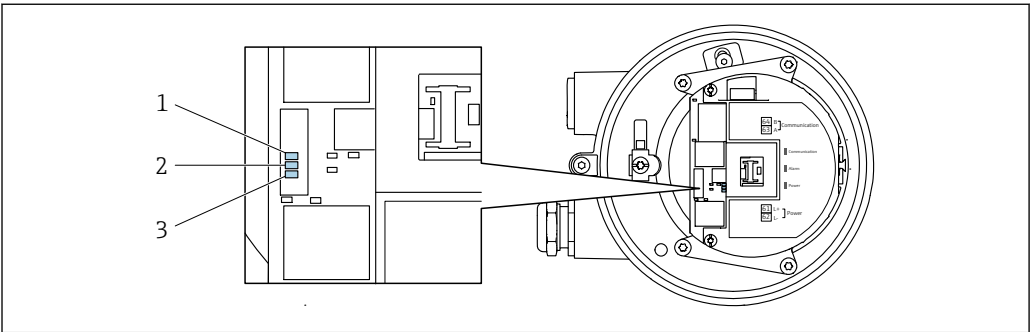

- 1 Communication
- 2 Device status
- 3 Supply voltage


LED	Color	Meaning
1 Communication	White	Communication active.
2 Device status (normal operation)	Red	Fault
	Flashing red	Warning
2 Device status (during start-up)	Flashes red slowly	If > 30 seconds: problem with the boot loader.
	Flashes red quickly	If > 30 seconds: compatibility problem when reading the firmware.

LED	Color	Meaning
3 Supply voltage	Green	Supply voltage is OK.
	Off	Supply voltage is off or too low.




12.3 Diagnostic information on local display

12.3.1 Diagnostic message

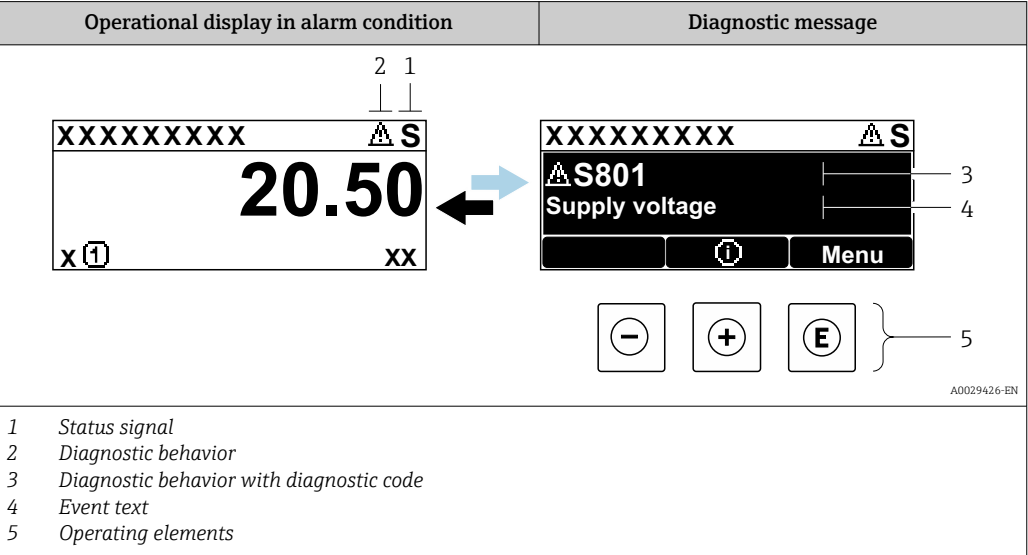Faults detected by the self-monitoring system of the measuring instrument are displayed as a diagnostic message in alternation with the operational display.




If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

-  Other diagnostic events that have occurred can be displayed in the **Diagnostics** menu:
- Via parameter →  264
 - Via submenus →  265



Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

-  The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:
- F = Failure
 - C = Function Check
 - S = Out of Specification
 - M = Maintenance Required

Symbol	Meaning
F	Failure A device error has occurred. The measured value is no longer valid.
C	Function check The device is in the service mode (e.g. during a simulation).
S	Out of specification The device is being operated: Outside its technical specification limits (e.g. outside the process temperature range)
M	Maintenance required Maintenance is required. The measured value remains valid.



Diagnostic behavior

Symbol	Meaning
	Alarm <ul style="list-style-type: none"> ■ Measurement is interrupted. ■ Signal outputs and totalizers assume the defined alarm condition. ■ A diagnostic message is generated.
	Warning <ul style="list-style-type: none"> ■ Measurement is resumed. ■ The signal outputs and totalizers are not affected. ■ A diagnostic message is generated.


Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

Operating elements

Operating key	Meaning
	Plus key <i>In menu, submenu</i> Opens the message about the remedial measures.
	Enter key <i>In menu, submenu</i> Opens the operating menu.

12.3.2 Calling up remedial actions

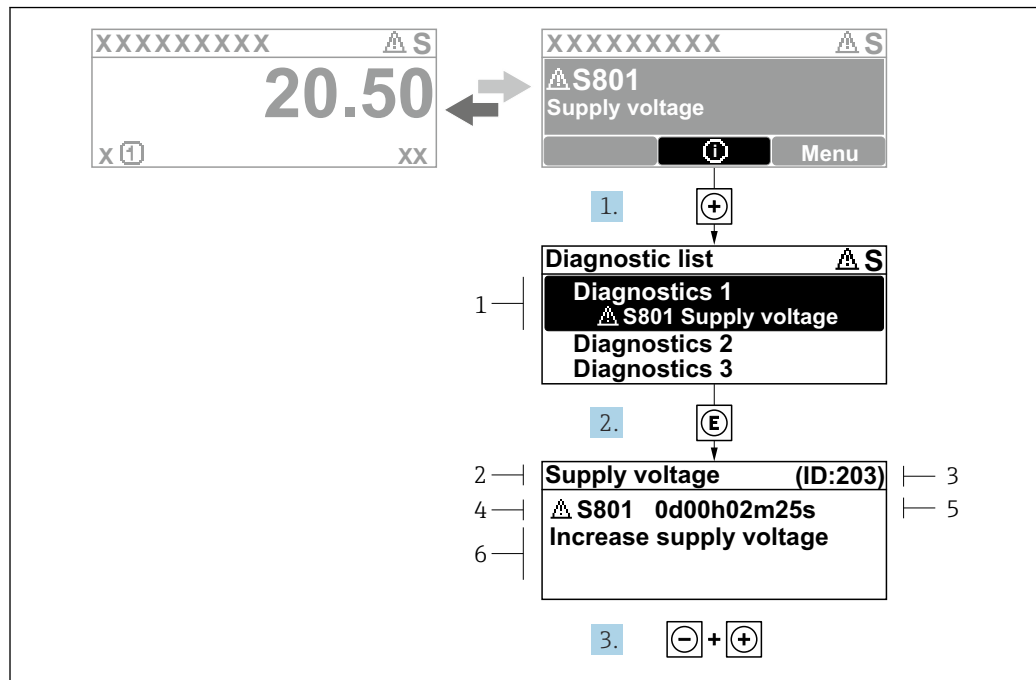

A0029431-EN

38 Message for remedial actions

- 1 Diagnostic information
- 2 Event text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operating time of occurrence
- 6 Remedial actions

1. The user is in the diagnostic message.
Press \oplus (ⓘ symbol).
↳ The **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with \oplus or \ominus and press \boxplus .
↳ The message about the remedial measures opens.
3. Press $\ominus + \oplus$ simultaneously.
↳ The message about the remedial measures closes.


The user is in the **Diagnostics** menu in the **Diagnostic list** submenu. A list of active diagnostics is displayed. The user can select a diagnostic event.

1. Press \boxplus .
↳ The message for the remedial actions for the selected diagnostic event opens.
2. Press $\ominus + \oplus$ simultaneously.
↳ The message about the remedial actions closes.

12.4 Diagnostic information in the web browser

12.4.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

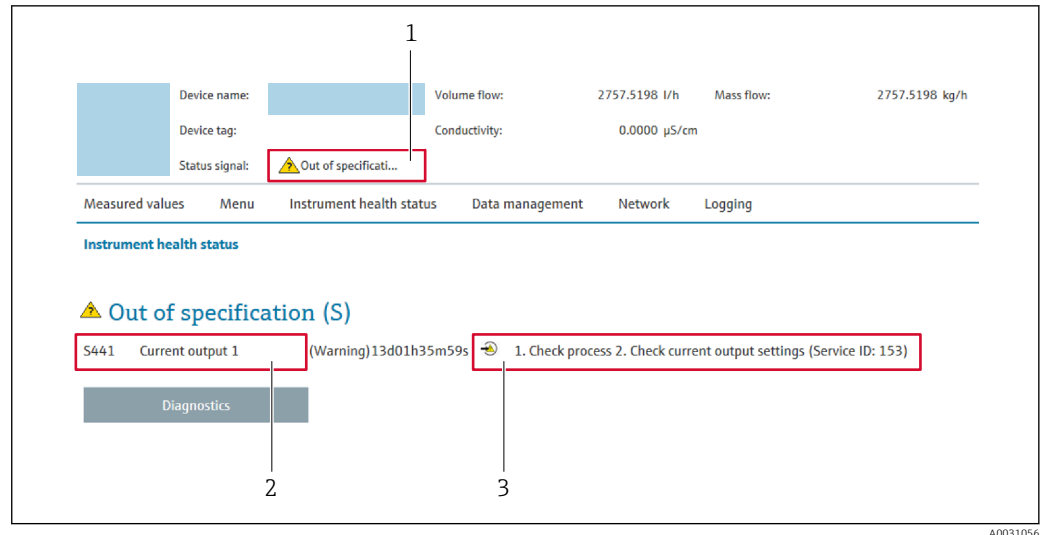

- 1 Status area with status signal
- 2 Diagnostic information
- 3 Remedial measures with service ID

i In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter → 264
- Via submenu → 265

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
	Failure A device error has occurred. The measured value is no longer valid.
	Function check The device is in service mode (e.g. during a simulation).
	Out of specification The device is being operated: Outside its technical specification limits (e.g. outside the process temperature range)
	Maintenance required Maintenance is required. The measured value remains valid.

i The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.


12.4.2 Calling up remedial actions

Remedial actions are provided for each diagnostic event to ensure that problems can be rectified quickly. These actions are displayed along with the diagnostic event and the related diagnostic information.

12.5 Diagnostic information in FieldCare or DeviceCare

12.5.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

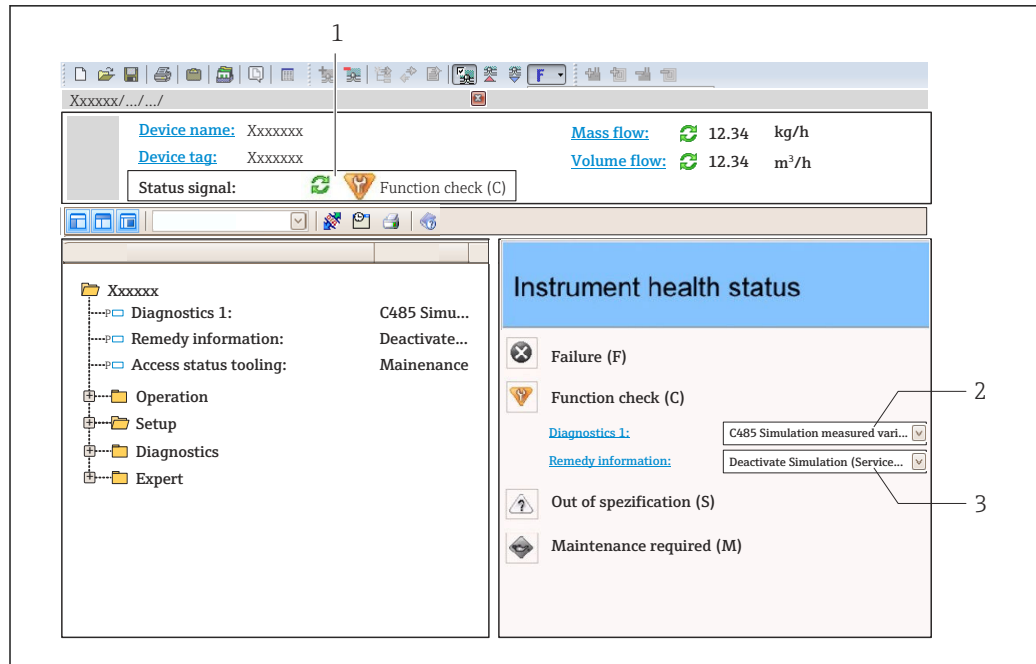

A0021799-EN

- 1 Status area with status signal → 192
- 2 Diagnostic information → 193
- 3 Remedial actions with service ID

i In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter → 264
- Via submenu → 265

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

12.5.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu
Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

1. Call up the desired parameter.
2. On the right in the working area, mouse over the parameter.
↳ A tool tip with remedy information for the diagnostic event appears.

12.6 Adapting the diagnostic information

12.6.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

Expert → System → Diagnostic handling → Diagnostic behavior


Available diagnostic behaviors

The following diagnostic behaviors can be assigned:

Diagnostic behavior	Description
Alarm	The device stops measurement. The totalizers assume the defined alarm condition. A diagnostic message is generated.
Warning	The device continues to measure. Measured value output via PROFINET and totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is only displayed in the Event logbook submenu (Event list submenu) and is not displayed in alternating sequence with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

Displaying the measured value status

If modules with input data (e.g. Analog Input module, Discrete Input module, Totalizer module, Heartbeat module) are configured for cyclic data transmission, the measured value status is coded as per PROFINET PA Profile 4 Specification and transmitted along with the measured value to the PROFINET Controller via the status byte. The status byte is split into three segments: Quality, Quality Substatus and Limits.

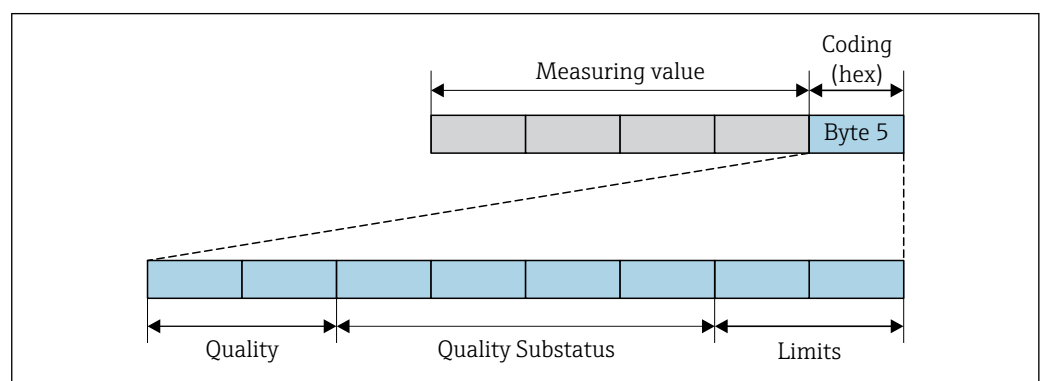

A0032228-EN




39 Structure of the status byte

The contents of the status byte depends on the configured failure mode in the individual function block. Depending on which failure mode has been configured, status information in accordance with PROFINET PA Profile Specification 4 is transmitted to the the PROFINET over Ethernet-APL controller via the status byte status information. The two bits for the limits always have the value 0.

Supported status information

Status	Coding (hex)
BAD - Maintenance alarm	0x24 to 0x27
BAD - Process related	0x28 to 0x2B
BAD - Function check	0x3C to 0x3F
UNCERTAIN - Initial value	0x4C to 0x4F
UNCERTAIN - Maintenance demanded	0x68 to 0x6B
UNCERTAIN - Process related	0x78 to 0x7B
GOOD - OK	0x80 to 0x83
GOOD - Maintenance required	0xA4 to 0xA7
GOOD - Maintenance demanded	0xA8 to 0xAB
GOOD - Function check	0xBC to 0xBF

12.7 Overview of diagnostic information

-  The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.
- All of the measured variables affected in the entire Promass instrument family are always listed under "Measured variables affected". The measured variables available for the device in question depend on the device version. When assigning the measured variables to the device functions, for example to the individual outputs, all of the measured variables available for the device version in question are available for selection.
-  In the case of some items of diagnostic information, the diagnostic behavior can be changed. Adapting the diagnostic information →  197

12.7.1 Diagnostic of sensor

Diagnostic information			Remedy instructions
No.	Short text		
002	Sensor unknown		1. Check if the correct sensor is mounted 2. Check if the 2-D matrix code on the sensor is undamaged
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	<div><div><ul style="list-style-type: none">■ Oscillation amplitude 1■ Oscillation amplitude 2■ Application specific output■ Application specific output■ Signal asymmetry■ Carrier mass flow■ Carrier pipe temperature■ Target corrected volume flow■ Carrier corrected volume flow■ Sensor index coil asymmetry■ Concentration■ Measured values■ Oscillation damping 1■ Oscillation damping 2■ Density■ Oil density■ Water density■ Test point■ Test point■ Dynamic viscosity</div><div><ul style="list-style-type: none">■ Sensor electronics temperature (ISEM)■ GSV flow■ GSV flow alternative■ Kinematic viscosity■ Mass flow■ Oil mass flow■ Water mass flow■ Inhomogeneous medium index■ Suspended bubbles index■ HBSI■ NSV flow■ NSV flow alternative■ External pressure■ Exciter current 1■ Exciter current 2■ Oscillation frequency 1■ Oscillation frequency 2■ Raw value mass flow■ S&W volume flow■ Torsion signal asymmetry</div><div><ul style="list-style-type: none">■ Reference density■ Reference density alternative■ Corrected volume flow■ Oil corrected volume flow■ Water corrected volume flow■ Oscillation damping fluctuation 1■ Oscillation damping fluctuation 2■ Frequency fluctuation 1■ Frequency fluctuation 2■ Target mass flow■ Carrier volume flow■ Target volume flow■ Temp. compensated dynamic viscosity■ Temp. compensated kinematic viscosity■ Temperature■ Volume flow■ Oil volume flow■ Water volume flow■ Water cut</div></div>		

Diagnostic information			Remedy instructions
No.	Short text		
022	Temperature sensor defective		1. If available: Check connection cable between sensor and transmitter 2. Check or replace sensor electronic module (ISEM) 3. Replace sensor
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div><div>■ Sensor electronics temperature (ISEM)</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div><div>■ Reference density</div></div><div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information		Remedy instructions
No.	Short text	
046	Sensor limit exceeded	1. Check process conditions 2. Check sensor
	Measured variable status [from the factory] ¹⁾	
	Quality	
	Good	
	Quality substatus	
	Ok	
	Coding (hex)	
	0x80 to 0x83	
	Status signal	
	S	
	Diagnostic behavior	
	Warning	
Influenced measured variables		
<ul style="list-style-type: none"> ▪ Oscillation amplitude 1 ▪ Oscillation amplitude 2 ▪ Application specific output ▪ Application specific output ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Target corrected volume flow ▪ Carrier corrected volume flow ▪ Sensor index coil asymmetry ▪ Concentration ▪ Oscillation damping 1 ▪ Oscillation damping 2 ▪ Density ▪ Oil density ▪ Water density ▪ Test point ▪ Test point ▪ Dynamic viscosity ▪ Sensor electronics temperature (ISEM) 		<ul style="list-style-type: none"> ▪ GSV flow ▪ GSV flow alternative ▪ Kinematic viscosity ▪ Mass flow ▪ Oil mass flow ▪ Water mass flow ▪ Inhomogeneous medium index ▪ Suspended bubbles index ▪ HBSI ▪ NSV flow ▪ NSV flow alternative ▪ External pressure ▪ Exciter current 1 ▪ Exciter current 2 ▪ Oscillation frequency 1 ▪ Oscillation frequency 2 ▪ Raw value mass flow ▪ S&W volume flow ▪ Torsion signal asymmetry ▪ Reference density
		<ul style="list-style-type: none"> ▪ Reference density alternative ▪ Corrected volume flow ▪ Oil corrected volume flow ▪ Water corrected volume flow ▪ Oscillation damping fluctuation 1 ▪ Oscillation damping fluctuation 2 ▪ Frequency fluctuation 1 ▪ Frequency fluctuation 2 ▪ Target mass flow ▪ Carrier volume flow ▪ Target volume flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Volume flow ▪ Oil volume flow ▪ Water volume flow ▪ Water cut

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
062	Sensor connection faulty		1. If available: Check connection cable between sensor and transmitter 2. Check or replace sensor electronic module (ISEM) 3. Replace sensor
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div><div>■ Sensor electronics temperature (ISEM)</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div><div>■ Reference density</div></div><div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
063	Exciter current faulty		1. If available: Check connection cable between sensor and transmitter 2. Check or replace sensor electronic module (ISEM) 3. Replace sensor
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>▪ Oscillation amplitude 1</div><div>▪ Oscillation amplitude 2</div><div>▪ Application specific output</div><div>▪ Application specific output</div><div>▪ Signal asymmetry</div><div>▪ Carrier mass flow</div><div>▪ Carrier pipe temperature</div><div>▪ Target corrected volume flow</div><div>▪ Carrier corrected volume flow</div><div>▪ Sensor index coil asymmetry</div><div>▪ Concentration</div><div>▪ Oscillation damping 1</div><div>▪ Oscillation damping 2</div><div>▪ Density</div><div>▪ Oil density</div><div>▪ Water density</div><div>▪ Test point</div><div>▪ Test point</div><div>▪ Dynamic viscosity</div><div>▪ Sensor electronics temperature (ISEM)</div></div><div><div>▪ GSV flow</div><div>▪ GSV flow alternative</div><div>▪ Kinematic viscosity</div><div>▪ Mass flow</div><div>▪ Oil mass flow</div><div>▪ Water mass flow</div><div>▪ Inhomogeneous medium index</div><div>▪ Suspended bubbles index</div><div>▪ HBSI</div><div>▪ NSV flow</div><div>▪ NSV flow alternative</div><div>▪ External pressure</div><div>▪ Exciter current 1</div><div>▪ Exciter current 2</div><div>▪ Oscillation frequency 1</div><div>▪ Oscillation frequency 2</div><div>▪ Raw value mass flow</div><div>▪ S&W volume flow</div><div>▪ Torsion signal asymmetry</div><div>▪ Reference density</div></div><div><div>▪ Reference density alternative</div><div>▪ Corrected volume flow</div><div>▪ Oil corrected volume flow</div><div>▪ Water corrected volume flow</div><div>▪ Oscillation damping fluctuation 1</div><div>▪ Oscillation damping fluctuation 2</div><div>▪ Frequency fluctuation 1</div><div>▪ Frequency fluctuation 2</div><div>▪ Target mass flow</div><div>▪ Carrier volume flow</div><div>▪ Target volume flow</div><div>▪ Temp. compensated dynamic viscosity</div><div>▪ Temp. compensated kinematic viscosity</div><div>▪ Temperature</div><div>▪ Volume flow</div><div>▪ Oil volume flow</div><div>▪ Water volume flow</div><div>▪ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
082	Data storage inconsistent		Check module connections
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Measured values</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div></div><div><div>■ Sensor electronics temperature (ISEM)</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div></div><div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
083	Memory content inconsistent		1. Restart device 2. Restore S-DAT data 3. Replace S-DAT
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>▪ Oscillation amplitude 1</div><div>▪ Oscillation amplitude 2</div><div>▪ Application specific output</div><div>▪ Application specific output</div><div>▪ Signal asymmetry</div><div>▪ Carrier mass flow</div><div>▪ Carrier pipe temperature</div><div>▪ Target corrected volume flow</div><div>▪ Carrier corrected volume flow</div><div>▪ Sensor index coil asymmetry</div><div>▪ Concentration</div><div>▪ Measured values</div><div>▪ Oscillation damping 1</div><div>▪ Oscillation damping 2</div><div>▪ Density</div><div>▪ Oil density</div><div>▪ Water density</div><div>▪ Test point</div><div>▪ Test point</div><div>▪ Dynamic viscosity</div></div><div><div>▪ Sensor electronics temperature (ISEM)</div><div>▪ GSV flow</div><div>▪ GSV flow alternative</div><div>▪ Kinematic viscosity</div><div>▪ Mass flow</div><div>▪ Oil mass flow</div><div>▪ Water mass flow</div><div>▪ Inhomogeneous medium index</div><div>▪ Suspended bubbles index</div><div>▪ HBSI</div><div>▪ NSV flow</div><div>▪ NSV flow alternative</div><div>▪ External pressure</div><div>▪ Exciter current 1</div><div>▪ Exciter current 2</div><div>▪ Oscillation frequency 1</div><div>▪ Oscillation frequency 2</div><div>▪ Raw value mass flow</div><div>▪ S&W volume flow</div><div>▪ Torsion signal asymmetry</div></div><div><div>▪ Reference density</div><div>▪ Reference density alternative</div><div>▪ Corrected volume flow</div><div>▪ Oil corrected volume flow</div><div>▪ Water corrected volume flow</div><div>▪ Oscillation damping fluctuation 1</div><div>▪ Oscillation damping fluctuation 2</div><div>▪ Frequency fluctuation 1</div><div>▪ Frequency fluctuation 2</div><div>▪ Target mass flow</div><div>▪ Carrier volume flow</div><div>▪ Target volume flow</div><div>▪ Temp. compensated dynamic viscosity</div><div>▪ Temp. compensated kinematic viscosity</div><div>▪ Temperature</div><div>▪ Volume flow</div><div>▪ Oil volume flow</div><div>▪ Water volume flow</div><div>▪ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
119	Sensor initialization active		Sensor initialization in progress, please wait
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	C	
	Diagnostic behavior	Warning	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Measured values</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div></div><div><div>■ Sensor electronics temperature (ISEM)</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div></div><div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
140	Sensor signal asymmetrical		1. If available: Check connection cable between sensor and transmitter 2. Check or replace sensor electronic module (ISEM) 3. Replace sensor
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div><div>▪ Oscillation amplitude 1</div><div>▪ Oscillation amplitude 2</div><div>▪ Application specific output</div><div>▪ Application specific output</div><div>▪ Signal asymmetry</div><div>▪ Carrier mass flow</div><div>▪ Carrier pipe temperature</div><div>▪ Target corrected volume flow</div><div>▪ Carrier corrected volume flow</div><div>▪ Sensor index coil asymmetry</div><div>▪ Concentration</div><div>▪ Measured values</div><div>▪ Oscillation damping 1</div><div>▪ Oscillation damping 2</div><div>▪ Density</div><div>▪ Oil density</div><div>▪ Water density</div><div>▪ Test point</div><div>▪ Test point</div><div>▪ Dynamic viscosity</div></div><div><div>▪ Sensor electronics temperature (ISEM)</div><div>▪ GSV flow</div><div>▪ GSV flow alternative</div><div>▪ Kinematic viscosity</div><div>▪ Mass flow</div><div>▪ Oil mass flow</div><div>▪ Water mass flow</div><div>▪ Inhomogeneous medium index</div><div>▪ Suspended bubbles index</div><div>▪ HBSI</div><div>▪ NSV flow</div><div>▪ NSV flow alternative</div><div>▪ External pressure</div><div>▪ Exciter current 1</div><div>▪ Exciter current 2</div><div>▪ Oscillation frequency 1</div><div>▪ Oscillation frequency 2</div><div>▪ Raw value mass flow</div><div>▪ S&W volume flow</div><div>▪ Torsion signal asymmetry</div></div><div><div>▪ Reference density</div><div>▪ Reference density alternative</div><div>▪ Corrected volume flow</div><div>▪ Oil corrected volume flow</div><div>▪ Water corrected volume flow</div><div>▪ Oscillation damping fluctuation 1</div><div>▪ Oscillation damping fluctuation 2</div><div>▪ Frequency fluctuation 1</div><div>▪ Frequency fluctuation 2</div><div>▪ Target mass flow</div><div>▪ Carrier volume flow</div><div>▪ Target volume flow</div><div>▪ Temp. compensated dynamic viscosity</div><div>▪ Temp. compensated kinematic viscosity</div><div>▪ Temperature</div><div>▪ Volume flow</div><div>▪ Oil volume flow</div><div>▪ Water volume flow</div><div>▪ Water cut</div></div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
141	Zero adjustment failed		1. Check process conditions 2. Repeat commissioning procedure 3. Check sensor
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><ul style="list-style-type: none">■ Oscillation amplitude 1■ Oscillation amplitude 2■ Application specific output■ Application specific output■ Signal asymmetry■ Carrier mass flow■ Carrier pipe temperature■ Target corrected volume flow■ Carrier corrected volume flow■ Sensor index coil asymmetry■ Concentration■ Measured values■ Oscillation damping 1■ Oscillation damping 2■ Density■ Oil density■ Water density■ Test point■ Test point■ Dynamic viscosity</div><div><ul style="list-style-type: none">■ Sensor electronics temperature (ISEM)■ GSV flow■ GSV flow alternative■ Kinematic viscosity■ Mass flow■ Oil mass flow■ Water mass flow■ Inhomogeneous medium index■ Suspended bubbles index■ HBSI■ NSV flow■ NSV flow alternative■ External pressure■ Exciter current 1■ Exciter current 2■ Oscillation frequency 1■ Oscillation frequency 2■ Raw value mass flow■ S&W volume flow■ Torsion signal asymmetry</div><div><ul style="list-style-type: none">■ Reference density■ Reference density alternative■ Corrected volume flow■ Oil corrected volume flow■ Water corrected volume flow■ Oscillation damping fluctuation 1■ Oscillation damping fluctuation 2■ Frequency fluctuation 1■ Frequency fluctuation 2■ Target mass flow■ Carrier volume flow■ Target volume flow■ Temp. compensated dynamic viscosity■ Temp. compensated kinematic viscosity■ Temperature■ Volume flow■ Oil volume flow■ Water volume flow■ Water cut</div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
142	Sensor index coil asymmetry too high		Check sensor
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
<div><div><ul style="list-style-type: none">▪ Oscillation amplitude 1▪ Oscillation amplitude 2▪ Application specific output▪ Application specific output▪ Signal asymmetry▪ Carrier mass flow▪ Carrier pipe temperature▪ Target corrected volume flow▪ Carrier corrected volume flow▪ Sensor index coil asymmetry▪ Concentration▪ Measured values▪ Oscillation damping 1▪ Oscillation damping 2▪ Density▪ Oil density▪ Water density▪ Test point▪ Test point▪ Dynamic viscosity</div><div><ul style="list-style-type: none">▪ Sensor electronics temperature (ISEM)▪ GSV flow▪ GSV flow alternative▪ Kinematic viscosity▪ Mass flow▪ Oil mass flow▪ Water mass flow▪ Inhomogeneous medium index▪ Suspended bubbles index▪ HBSI▪ NSV flow▪ NSV flow alternative▪ External pressure▪ Exciter current 1▪ Exciter current 2▪ Oscillation frequency 1▪ Oscillation frequency 2▪ Raw value mass flow▪ S&W volume flow▪ Torsion signal asymmetry</div><div><ul style="list-style-type: none">▪ Reference density▪ Reference density alternative▪ Corrected volume flow▪ Oil corrected volume flow▪ Water corrected volume flow▪ Oscillation damping fluctuation 1▪ Oscillation damping fluctuation 2▪ Frequency fluctuation 1▪ Frequency fluctuation 2▪ Target mass flow▪ Carrier volume flow▪ Target volume flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow▪ Oil volume flow▪ Water volume flow▪ Water cut</div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	
No.	Short text		
144	Measurement error too high	1. Check process conditions 2. Check or change sensor	
	Measured variable status [from the factory] ¹⁾		
	Quality		Good
	Quality substatus		Ok
	Coding (hex)		0x80 to 0x83
	Status signal		F
	Diagnostic behavior		Alarm
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div><div>■ Sensor electronics temperature (ISEM)</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div><div>■ Reference density</div></div><div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.7.2 Diagnostic of electronic

Diagnostic information			Remedy instructions
No.	Short text		
201	Electronics faulty		1. Restart device 2. Replace electronics
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	<div><div><ul style="list-style-type: none">▪ Oscillation amplitude 1▪ Oscillation amplitude 2▪ Application specific output▪ Application specific output▪ Signal asymmetry▪ Carrier mass flow▪ Carrier pipe temperature▪ Target corrected volume flow▪ Carrier corrected volume flow▪ Sensor index coil asymmetry▪ Concentration▪ Measured values▪ Oscillation damping 1▪ Oscillation damping 2▪ Density▪ Oil density▪ Water density▪ Test point▪ Test point▪ Dynamic viscosity</div><div><ul style="list-style-type: none">▪ Sensor electronics temperature (ISEM)▪ GSV flow▪ GSV flow alternative▪ Kinematic viscosity▪ Mass flow▪ Oil mass flow▪ Water mass flow▪ Inhomogeneous medium index▪ Suspended bubbles index▪ HBSI▪ NSV flow▪ NSV flow alternative▪ External pressure▪ Exciter current 1▪ Exciter current 2▪ Oscillation frequency 1▪ Oscillation frequency 2▪ Raw value mass flow▪ S&W volume flow▪ Torsion signal asymmetry</div><div><ul style="list-style-type: none">▪ Reference density▪ Reference density alternative▪ Corrected volume flow▪ Oil corrected volume flow▪ Water corrected volume flow▪ Oscillation damping fluctuation 1▪ Oscillation damping fluctuation 2▪ Frequency fluctuation 1▪ Frequency fluctuation 2▪ Target mass flow▪ Carrier volume flow▪ Target volume flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow▪ Oil volume flow▪ Water volume flow▪ Water cut</div></div>		

Diagnostic information			Remedy instructions
No.	Short text		
242	Firmware incompatible		1. Check firmware version 2. Flash or replace electronic module
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Measured values</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div></div><div><div>■ Sensor electronics temperature (ISEM)</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div></div><div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
252	Module incompatible		1. Check electronic modules 2. Check if correct modules are available (e.g. NEx, Ex) 3. Replace electronic modules
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>▪ Oscillation amplitude 1</div><div>▪ Oscillation amplitude 2</div><div>▪ Application specific output</div><div>▪ Application specific output</div><div>▪ Signal asymmetry</div><div>▪ Carrier mass flow</div><div>▪ Carrier pipe temperature</div><div>▪ Target corrected volume flow</div><div>▪ Carrier corrected volume flow</div><div>▪ Sensor index coil asymmetry</div><div>▪ Concentration</div><div>▪ Measured values</div><div>▪ Oscillation damping 1</div><div>▪ Oscillation damping 2</div><div>▪ Density</div><div>▪ Oil density</div><div>▪ Water density</div><div>▪ Test point</div><div>▪ Test point</div><div>▪ Dynamic viscosity</div></div><div><div>▪ Sensor electronics temperature (ISEM)</div><div>▪ GSV flow</div><div>▪ GSV flow alternative</div><div>▪ Kinematic viscosity</div><div>▪ Mass flow</div><div>▪ Oil mass flow</div><div>▪ Water mass flow</div><div>▪ Inhomogeneous medium index</div><div>▪ Suspended bubbles index</div><div>▪ HBSI</div><div>▪ NSV flow</div><div>▪ NSV flow alternative</div><div>▪ External pressure</div><div>▪ Exciter current 1</div><div>▪ Exciter current 2</div><div>▪ Oscillation frequency 1</div><div>▪ Oscillation frequency 2</div><div>▪ Raw value mass flow</div><div>▪ S&W volume flow</div><div>▪ Torsion signal asymmetry</div></div><div><div>▪ Reference density</div><div>▪ Reference density alternative</div><div>▪ Corrected volume flow</div><div>▪ Oil corrected volume flow</div><div>▪ Water corrected volume flow</div><div>▪ Oscillation damping fluctuation 1</div><div>▪ Oscillation damping fluctuation 2</div><div>▪ Frequency fluctuation 1</div><div>▪ Frequency fluctuation 2</div><div>▪ Target mass flow</div><div>▪ Carrier volume flow</div><div>▪ Target volume flow</div><div>▪ Temp. compensated dynamic viscosity</div><div>▪ Temp. compensated kinematic viscosity</div><div>▪ Temperature</div><div>▪ Volume flow</div><div>▪ Oil volume flow</div><div>▪ Water volume flow</div><div>▪ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
262	Module connection interrupted		1. Check or replace connection cable between sensor electronic module (ISEM) and main electronics 2. Check or replace ISEM or main electronics
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Measured values</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div></div><div><div>■ Sensor electronics temperature (ISEM)</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div></div><div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
270	Main electronics defective		1. Restart device 2. Replace main electronic module
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div><div>▪ Oscillation amplitude 1</div><div>▪ Oscillation amplitude 2</div><div>▪ Application specific output</div><div>▪ Application specific output</div><div>▪ Signal asymmetry</div><div>▪ Carrier mass flow</div><div>▪ Carrier pipe temperature</div><div>▪ Target corrected volume flow</div><div>▪ Carrier corrected volume flow</div><div>▪ Sensor index coil asymmetry</div><div>▪ Concentration</div><div>▪ Measured values</div><div>▪ Oscillation damping 1</div><div>▪ Oscillation damping 2</div><div>▪ Density</div><div>▪ Oil density</div><div>▪ Water density</div><div>▪ Test point</div><div>▪ Test point</div><div>▪ Dynamic viscosity</div></div><div><div>▪ Sensor electronics temperature (ISEM)</div><div>▪ GSV flow</div><div>▪ GSV flow alternative</div><div>▪ Kinematic viscosity</div><div>▪ Mass flow</div><div>▪ Oil mass flow</div><div>▪ Water mass flow</div><div>▪ Inhomogeneous medium index</div><div>▪ Suspended bubbles index</div><div>▪ HBSI</div><div>▪ NSV flow</div><div>▪ NSV flow alternative</div><div>▪ External pressure</div><div>▪ Exciter current 1</div><div>▪ Exciter current 2</div><div>▪ Oscillation frequency 1</div><div>▪ Oscillation frequency 2</div><div>▪ Raw value mass flow</div><div>▪ S&W volume flow</div><div>▪ Torsion signal asymmetry</div></div><div><div>▪ Reference density</div><div>▪ Reference density alternative</div><div>▪ Corrected volume flow</div><div>▪ Oil corrected volume flow</div><div>▪ Water corrected volume flow</div><div>▪ Oscillation damping fluctuation 1</div><div>▪ Oscillation damping fluctuation 2</div><div>▪ Frequency fluctuation 1</div><div>▪ Frequency fluctuation 2</div><div>▪ Target mass flow</div><div>▪ Carrier volume flow</div><div>▪ Target volume flow</div><div>▪ Temp. compensated dynamic viscosity</div><div>▪ Temp. compensated kinematic viscosity</div><div>▪ Temperature</div><div>▪ Volume flow</div><div>▪ Oil volume flow</div><div>▪ Water volume flow</div><div>▪ Water cut</div></div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
271	Main electronics faulty		1. Restart device 2. Replace main electronic module
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Measured values</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div></div><div><div>■ Sensor electronics temperature (ISEM)</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div></div><div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
272	Main electronics faulty		Restart device
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>▪ Oscillation amplitude 1</div><div>▪ Oscillation amplitude 2</div><div>▪ Application specific output</div><div>▪ Application specific output</div><div>▪ Signal asymmetry</div><div>▪ Carrier mass flow</div><div>▪ Carrier pipe temperature</div><div>▪ Target corrected volume flow</div><div>▪ Carrier corrected volume flow</div><div>▪ Sensor index coil asymmetry</div><div>▪ Concentration</div><div>▪ Measured values</div><div>▪ Oscillation damping 1</div><div>▪ Oscillation damping 2</div><div>▪ Density</div><div>▪ Oil density</div><div>▪ Water density</div><div>▪ Test point</div><div>▪ Test point</div><div>▪ Dynamic viscosity</div></div><div><div>▪ Sensor electronics temperature (ISEM)</div><div>▪ GSV flow</div><div>▪ GSV flow alternative</div><div>▪ Kinematic viscosity</div><div>▪ Mass flow</div><div>▪ Oil mass flow</div><div>▪ Water mass flow</div><div>▪ Inhomogeneous medium index</div><div>▪ Suspended bubbles index</div><div>▪ HBSI</div><div>▪ NSV flow</div><div>▪ NSV flow alternative</div><div>▪ External pressure</div><div>▪ Exciter current 1</div><div>▪ Exciter current 2</div><div>▪ Oscillation frequency 1</div><div>▪ Oscillation frequency 2</div><div>▪ Raw value mass flow</div><div>▪ S&W volume flow</div><div>▪ Torsion signal asymmetry</div></div><div><div>▪ Reference density</div><div>▪ Reference density alternative</div><div>▪ Corrected volume flow</div><div>▪ Oil corrected volume flow</div><div>▪ Water corrected volume flow</div><div>▪ Oscillation damping fluctuation 1</div><div>▪ Oscillation damping fluctuation 2</div><div>▪ Frequency fluctuation 1</div><div>▪ Frequency fluctuation 2</div><div>▪ Target mass flow</div><div>▪ Carrier volume flow</div><div>▪ Target volume flow</div><div>▪ Temp. compensated dynamic viscosity</div><div>▪ Temp. compensated kinematic viscosity</div><div>▪ Temperature</div><div>▪ Volume flow</div><div>▪ Oil volume flow</div><div>▪ Water volume flow</div><div>▪ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
273	Main electronics defective		1. Pay attention to display emergency operation 2. Replace main electronics
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Measured values</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div></div><div><div>■ Sensor electronics temperature (ISEM)</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div></div><div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information		Remedy instructions
No.	Short text	
275	I/O module defective	Change I/O module
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
Influenced measured variables		
<ul style="list-style-type: none"> ▪ Oscillation amplitude 1 ▪ Oscillation amplitude 2 ▪ Application specific output ▪ Application specific output ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Target corrected volume flow ▪ Carrier corrected volume flow ▪ Sensor index coil asymmetry ▪ Concentration ▪ Measured values ▪ Oscillation damping 1 ▪ Oscillation damping 2 ▪ Density ▪ Oil density ▪ Water density ▪ Test point ▪ Test point ▪ Dynamic viscosity 		<ul style="list-style-type: none"> ▪ Sensor electronics temperature (ISEM) ▪ GSV flow ▪ GSV flow alternative ▪ Kinematic viscosity ▪ Mass flow ▪ Oil mass flow ▪ Water mass flow ▪ Inhomogeneous medium index ▪ Suspended bubbles index ▪ HBSI ▪ NSV flow ▪ NSV flow alternative ▪ External pressure ▪ Exciter current 1 ▪ Exciter current 2 ▪ Oscillation frequency 1 ▪ Oscillation frequency 2 ▪ Raw value mass flow ▪ S&W volume flow ▪ Torsion signal asymmetry
		<ul style="list-style-type: none"> ▪ Reference density ▪ Reference density alternative ▪ Corrected volume flow ▪ Oil corrected volume flow ▪ Water corrected volume flow ▪ Oscillation damping fluctuation 1 ▪ Oscillation damping fluctuation 2 ▪ Frequency fluctuation 1 ▪ Frequency fluctuation 2 ▪ Target mass flow ▪ Carrier volume flow ▪ Target volume flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Volume flow ▪ Oil volume flow ▪ Water volume flow ▪ Water cut

Diagnostic information			Remedy instructions
No.	Short text		
276	I/O module faulty		1. Restart device 2. Change I/O module
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Measured values</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div></div><div><div>■ Sensor electronics temperature (ISEM)</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div></div><div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
283	Memory content inconsistent		Restart device
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>▪ Oscillation amplitude 1</div><div>▪ Oscillation amplitude 2</div><div>▪ Application specific output</div><div>▪ Application specific output</div><div>▪ Signal asymmetry</div><div>▪ Carrier mass flow</div><div>▪ Carrier pipe temperature</div><div>▪ Target corrected volume flow</div><div>▪ Carrier corrected volume flow</div><div>▪ Sensor index coil asymmetry</div><div>▪ Concentration</div><div>▪ Measured values</div><div>▪ Oscillation damping 1</div><div>▪ Oscillation damping 2</div><div>▪ Density</div><div>▪ Oil density</div><div>▪ Water density</div><div>▪ Test point</div><div>▪ Test point</div><div>▪ Dynamic viscosity</div></div><div><div>▪ Sensor electronics temperature (ISEM)</div><div>▪ GSV flow</div><div>▪ GSV flow alternative</div><div>▪ Kinematic viscosity</div><div>▪ Mass flow</div><div>▪ Oil mass flow</div><div>▪ Water mass flow</div><div>▪ Inhomogeneous medium index</div><div>▪ Suspended bubbles index</div><div>▪ HBSI</div><div>▪ NSV flow</div><div>▪ NSV flow alternative</div><div>▪ External pressure</div><div>▪ Exciter current 1</div><div>▪ Exciter current 2</div><div>▪ Oscillation frequency 1</div><div>▪ Oscillation frequency 2</div><div>▪ Raw value mass flow</div><div>▪ S&W volume flow</div><div>▪ Torsion signal asymmetry</div></div><div><div>▪ Reference density</div><div>▪ Reference density alternative</div><div>▪ Corrected volume flow</div><div>▪ Oil corrected volume flow</div><div>▪ Water corrected volume flow</div><div>▪ Oscillation damping fluctuation 1</div><div>▪ Oscillation damping fluctuation 2</div><div>▪ Frequency fluctuation 1</div><div>▪ Frequency fluctuation 2</div><div>▪ Target mass flow</div><div>▪ Carrier volume flow</div><div>▪ Target volume flow</div><div>▪ Temp. compensated dynamic viscosity</div><div>▪ Temp. compensated kinematic viscosity</div><div>▪ Temperature</div><div>▪ Volume flow</div><div>▪ Oil volume flow</div><div>▪ Water volume flow</div><div>▪ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
302	Device verification active		Device verification active, please wait.
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Function check	
	Coding (hex)	0xBC to 0xBF	
	Status signal	C	
	Diagnostic behavior	Warning	
	Influenced measured variables		
<div><div><div>▪ Oscillation amplitude 1</div><div>▪ Oscillation amplitude 2</div><div>▪ Application specific output</div><div>▪ Application specific output</div><div>▪ Signal asymmetry</div><div>▪ Carrier mass flow</div><div>▪ Carrier pipe temperature</div><div>▪ Target corrected volume flow</div><div>▪ Carrier corrected volume flow</div><div>▪ Sensor index coil asymmetry</div><div>▪ Concentration</div><div>▪ Measured values</div><div>▪ Oscillation damping 1</div><div>▪ Oscillation damping 2</div><div>▪ Density</div><div>▪ Oil density</div><div>▪ Water density</div><div>▪ Test point</div><div>▪ Test point</div><div>▪ Dynamic viscosity</div></div><div><div>▪ Sensor electronics temperature (ISEM)</div><div>▪ GSV flow</div><div>▪ GSV flow alternative</div><div>▪ Kinematic viscosity</div><div>▪ Mass flow</div><div>▪ Oil mass flow</div><div>▪ Water mass flow</div><div>▪ Inhomogeneous medium index</div><div>▪ Suspended bubbles index</div><div>▪ HBSI</div><div>▪ NSV flow</div><div>▪ NSV flow alternative</div><div>▪ External pressure</div><div>▪ Exciter current 1</div><div>▪ Exciter current 2</div><div>▪ Oscillation frequency 1</div><div>▪ Oscillation frequency 2</div><div>▪ Raw value mass flow</div><div>▪ S&W volume flow</div><div>▪ Torsion signal asymmetry</div></div><div><div>▪ Reference density</div><div>▪ Reference density alternative</div><div>▪ Corrected volume flow</div><div>▪ Oil corrected volume flow</div><div>▪ Water corrected volume flow</div><div>▪ Oscillation damping fluctuation 1</div><div>▪ Oscillation damping fluctuation 2</div><div>▪ Frequency fluctuation 1</div><div>▪ Frequency fluctuation 2</div><div>▪ Target mass flow</div><div>▪ Carrier volume flow</div><div>▪ Target volume flow</div><div>▪ Temp. compensated dynamic viscosity</div><div>▪ Temp. compensated kinematic viscosity</div><div>▪ Temperature</div><div>▪ Volume flow</div><div>▪ Oil volume flow</div><div>▪ Water volume flow</div><div>▪ Water cut</div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
303	I/O 1 to n configuration changed		1. Apply I/O module configuration (parameter 'Apply I/O configuration') 2. Afterwards reload device description and check wiring
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	M	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	—		

Diagnostic information			Remedy instructions
No.	Short text		
304	Device verification failed		1. Check verification report 2. Repeat commissioning procedure 3. Check sensor
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div><div>▪ Oscillation amplitude 1</div><div>▪ Oscillation amplitude 2</div><div>▪ Application specific output</div><div>▪ Application specific output</div><div>▪ Signal asymmetry</div><div>▪ Carrier mass flow</div><div>▪ Carrier pipe temperature</div><div>▪ Target corrected volume flow</div><div>▪ Carrier corrected volume flow</div><div>▪ Sensor index coil asymmetry</div><div>▪ Concentration</div><div>▪ Measured values</div><div>▪ Oscillation damping 1</div><div>▪ Oscillation damping 2</div><div>▪ Density</div><div>▪ Oil density</div><div>▪ Water density</div><div>▪ Test point</div><div>▪ Test point</div><div>▪ Dynamic viscosity</div></div><div><div>▪ Sensor electronics temperature (ISEM)</div><div>▪ GSV flow</div><div>▪ GSV flow alternative</div><div>▪ Kinematic viscosity</div><div>▪ Mass flow</div><div>▪ Oil mass flow</div><div>▪ Water mass flow</div><div>▪ Inhomogeneous medium index</div><div>▪ Suspended bubbles index</div><div>▪ HBSI</div><div>▪ NSV flow</div><div>▪ NSV flow alternative</div><div>▪ External pressure</div><div>▪ Exciter current 1</div><div>▪ Exciter current 2</div><div>▪ Oscillation frequency 1</div><div>▪ Oscillation frequency 2</div><div>▪ Raw value mass flow</div><div>▪ S&W volume flow</div><div>▪ Torsion signal asymmetry</div></div><div><div>▪ Reference density</div><div>▪ Reference density alternative</div><div>▪ Corrected volume flow</div><div>▪ Oil corrected volume flow</div><div>▪ Water corrected volume flow</div><div>▪ Oscillation damping fluctuation 1</div><div>▪ Oscillation damping fluctuation 2</div><div>▪ Frequency fluctuation 1</div><div>▪ Frequency fluctuation 2</div><div>▪ Target mass flow</div><div>▪ Carrier volume flow</div><div>▪ Target volume flow</div><div>▪ Temp. compensated dynamic viscosity</div><div>▪ Temp. compensated kinematic viscosity</div><div>▪ Temperature</div><div>▪ Volume flow</div><div>▪ Oil volume flow</div><div>▪ Water volume flow</div><div>▪ Water cut</div></div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions
No.	Short text	
311	Sensor electronics (ISEM) faulty	Maintenance required! Do not reset device
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	<ul style="list-style-type: none"> ■ Oscillation amplitude 1 ■ Oscillation amplitude 2 ■ Application specific output ■ Application specific output ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Target corrected volume flow ■ Carrier corrected volume flow ■ Sensor index coil asymmetry ■ Concentration ■ Measured values ■ Oscillation damping 1 ■ Oscillation damping 2 ■ Density ■ Oil density ■ Water density ■ Test point ■ Test point ■ Dynamic viscosity 	
	<ul style="list-style-type: none"> ■ Sensor electronics temperature (ISEM) ■ GSV flow ■ GSV flow alternative ■ Kinematic viscosity ■ Mass flow ■ Oil mass flow ■ Water mass flow ■ Inhomogeneous medium index ■ Suspended bubbles index ■ HBSI ■ NSV flow ■ NSV flow alternative ■ External pressure ■ Exciter current 1 ■ Exciter current 2 ■ Oscillation frequency 1 ■ Oscillation frequency 2 ■ Raw value mass flow ■ S&W volume flow ■ Torsion signal asymmetry 	
	<ul style="list-style-type: none"> ■ Reference density ■ Reference density alternative ■ Corrected volume flow ■ Oil corrected volume flow ■ Water corrected volume flow ■ Oscillation damping fluctuation 1 ■ Oscillation damping fluctuation 2 ■ Frequency fluctuation 1 ■ Frequency fluctuation 2 ■ Target mass flow ■ Carrier volume flow ■ Target volume flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Volume flow ■ Oil volume flow ■ Water volume flow ■ Water cut 	

Diagnostic information			Remedy instructions
No.	Short text		
330	Flash file invalid		1. Update firmware of device 2. Restart device
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	M	
	Diagnostic behavior	Warning	
	Influenced measured variables		
<div><div><div>▪ Oscillation amplitude 1</div><div>▪ Oscillation amplitude 2</div><div>▪ Application specific output</div><div>▪ Application specific output</div><div>▪ Signal asymmetry</div><div>▪ Carrier mass flow</div><div>▪ Carrier pipe temperature</div><div>▪ Target corrected volume flow</div><div>▪ Carrier corrected volume flow</div><div>▪ Sensor index coil asymmetry</div><div>▪ Concentration</div><div>▪ Measured values</div><div>▪ Oscillation damping 1</div><div>▪ Oscillation damping 2</div><div>▪ Density</div><div>▪ Oil density</div><div>▪ Water density</div><div>▪ Test point</div><div>▪ Test point</div><div>▪ Dynamic viscosity</div></div><div><div>▪ Sensor electronics temperature (ISEM)</div><div>▪ GSV flow</div><div>▪ GSV flow alternative</div><div>▪ Kinematic viscosity</div><div>▪ Mass flow</div><div>▪ Oil mass flow</div><div>▪ Water mass flow</div><div>▪ Inhomogeneous medium index</div><div>▪ Suspended bubbles index</div><div>▪ HBSI</div><div>▪ NSV flow</div><div>▪ NSV flow alternative</div><div>▪ External pressure</div><div>▪ Exciter current 1</div><div>▪ Exciter current 2</div><div>▪ Oscillation frequency 1</div><div>▪ Oscillation frequency 2</div><div>▪ Raw value mass flow</div><div>▪ S&W volume flow</div><div>▪ Torsion signal asymmetry</div></div><div><div>▪ Reference density</div><div>▪ Reference density alternative</div><div>▪ Corrected volume flow</div><div>▪ Oil corrected volume flow</div><div>▪ Water corrected volume flow</div><div>▪ Oscillation damping fluctuation 1</div><div>▪ Oscillation damping fluctuation 2</div><div>▪ Frequency fluctuation 1</div><div>▪ Frequency fluctuation 2</div><div>▪ Target mass flow</div><div>▪ Carrier volume flow</div><div>▪ Target volume flow</div><div>▪ Temp. compensated dynamic viscosity</div><div>▪ Temp. compensated kinematic viscosity</div><div>▪ Temperature</div><div>▪ Volume flow</div><div>▪ Oil volume flow</div><div>▪ Water volume flow</div><div>▪ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
331	Firmware update failed		1. Update firmware of device 2. Restart device
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Warning	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Measured values</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div></div><div><div>■ Sensor electronics temperature (ISEM)</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div></div><div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
332	Writing in HistoROM backup failed		1. Replace user interface board 2. Ex d/XP: replace transmitter
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><ul style="list-style-type: none">▪ Oscillation amplitude 1▪ Oscillation amplitude 2▪ Application specific output▪ Application specific output▪ Signal asymmetry▪ Carrier mass flow▪ Carrier pipe temperature▪ Target corrected volume flow▪ Carrier corrected volume flow▪ Sensor index coil asymmetry▪ Concentration▪ Measured values▪ Oscillation damping 1▪ Oscillation damping 2▪ Density▪ Oil density▪ Water density▪ Test point▪ Test point▪ Dynamic viscosity</div><div><ul style="list-style-type: none">▪ Sensor electronics temperature (ISEM)▪ GSV flow▪ GSV flow alternative▪ Kinematic viscosity▪ Mass flow▪ Oil mass flow▪ Water mass flow▪ Inhomogeneous medium index▪ Suspended bubbles index▪ HBSI▪ NSV flow▪ NSV flow alternative▪ External pressure▪ Exciter current 1▪ Exciter current 2▪ Oscillation frequency 1▪ Oscillation frequency 2▪ Raw value mass flow▪ S&W volume flow▪ Torsion signal asymmetry</div><div><ul style="list-style-type: none">▪ Reference density▪ Reference density alternative▪ Corrected volume flow▪ Oil corrected volume flow▪ Water corrected volume flow▪ Oscillation damping fluctuation 1▪ Oscillation damping fluctuation 2▪ Frequency fluctuation 1▪ Frequency fluctuation 2▪ Target mass flow▪ Carrier volume flow▪ Target volume flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow▪ Oil volume flow▪ Water volume flow▪ Water cut</div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
361	I/O module 1 to n faulty		1. Restart device 2. Check electronic modules 3. Change I/O module or main electronics
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Measured values</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div></div><div><div>■ Sensor electronics temperature (ISEM)</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div></div><div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

Diagnostic information		Remedy instructions
No.	Short text	
369	Matrix code scanner defective	Replace matrix code scanner
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
Influenced measured variables		
<ul style="list-style-type: none"> ▪ Oscillation amplitude 1 ▪ Oscillation amplitude 2 ▪ Application specific output ▪ Application specific output ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Target corrected volume flow ▪ Carrier corrected volume flow ▪ Sensor index coil asymmetry ▪ Concentration ▪ Measured values ▪ Oscillation damping 1 ▪ Oscillation damping 2 ▪ Density ▪ Oil density ▪ Water density ▪ Test point ▪ Test point ▪ Dynamic viscosity 		<ul style="list-style-type: none"> ▪ Sensor electronics temperature (ISEM) ▪ GSV flow ▪ GSV flow alternative ▪ Kinematic viscosity ▪ Mass flow ▪ Oil mass flow ▪ Water mass flow ▪ Inhomogeneous medium index ▪ Suspended bubbles index ▪ HBSI ▪ NSV flow ▪ NSV flow alternative ▪ External pressure ▪ Exciter current 1 ▪ Exciter current 2 ▪ Oscillation frequency 1 ▪ Oscillation frequency 2 ▪ Raw value mass flow ▪ S&W volume flow ▪ Torsion signal asymmetry
		<ul style="list-style-type: none"> ▪ Reference density ▪ Reference density alternative ▪ Corrected volume flow ▪ Oil corrected volume flow ▪ Water corrected volume flow ▪ Oscillation damping fluctuation 1 ▪ Oscillation damping fluctuation 2 ▪ Frequency fluctuation 1 ▪ Frequency fluctuation 2 ▪ Target mass flow ▪ Carrier volume flow ▪ Target volume flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Volume flow ▪ Oil volume flow ▪ Water volume flow ▪ Water cut

Diagnostic information		Remedy instructions	
No.	Short text		
371	Temperature sensor defective	Contact service	
	Measured variable status		
	Quality		Good
	Quality substatus		Ok
	Coding (hex)		0x80 to 0x83
	Status signal		M
	Diagnostic behavior		Warning
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Measured values</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div></div><div><div>■ Sensor electronics temperature (ISEM)</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div></div><div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
372	Sensor electronics (ISEM) faulty		1. Restart device 2. Check if failure recurs 3. Replace sensor electronic module (ISEM)
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	<div><div><ul style="list-style-type: none">■ Oscillation amplitude 1■ Oscillation amplitude 2■ Application specific output■ Application specific output■ Signal asymmetry■ Carrier mass flow■ Carrier pipe temperature■ Target corrected volume flow■ Carrier corrected volume flow■ Sensor index coil asymmetry■ Concentration■ Measured values■ Oscillation damping 1■ Oscillation damping 2■ Density■ Oil density■ Water density■ Test point■ Test point■ Dynamic viscosity</div><div><ul style="list-style-type: none">■ Sensor electronics temperature (ISEM)■ GSV flow■ GSV flow alternative■ Kinematic viscosity■ Mass flow■ Oil mass flow■ Water mass flow■ Inhomogeneous medium index■ Suspended bubbles index■ HBSI■ NSV flow■ NSV flow alternative■ External pressure■ Exciter current 1■ Exciter current 2■ Oscillation frequency 1■ Oscillation frequency 2■ Raw value mass flow■ S&W volume flow■ Torsion signal asymmetry</div><div><ul style="list-style-type: none">■ Reference density■ Reference density alternative■ Corrected volume flow■ Oil corrected volume flow■ Water corrected volume flow■ Oscillation damping fluctuation 1■ Oscillation damping fluctuation 2■ Frequency fluctuation 1■ Frequency fluctuation 2■ Target mass flow■ Carrier volume flow■ Target volume flow■ Temp. compensated dynamic viscosity■ Temp. compensated kinematic viscosity■ Temperature■ Volume flow■ Oil volume flow■ Water volume flow■ Water cut</div></div>		

Diagnostic information		Remedy instructions	
No.	Short text		
373	Sensor electronics (ISEM) faulty	Transfer data or reset device	
	Measured variable status		
	Quality		Good
	Quality substatus		Ok
	Coding (hex)		0x80 to 0x83
	Status signal		F
	Diagnostic behavior		Alarm
	Influenced measured variables		
<div><div><ul style="list-style-type: none">■ Oscillation amplitude 1■ Oscillation amplitude 2■ Application specific output■ Application specific output■ Signal asymmetry■ Carrier mass flow■ Carrier pipe temperature■ Target corrected volume flow■ Carrier corrected volume flow■ Sensor index coil asymmetry■ Concentration■ Measured values■ Oscillation damping 1■ Oscillation damping 2■ Density■ Oil density■ Water density■ Test point■ Test point■ Dynamic viscosity</div><div><ul style="list-style-type: none">■ Sensor electronics temperature (ISEM)■ GSV flow■ GSV flow alternative■ Kinematic viscosity■ Mass flow■ Oil mass flow■ Water mass flow■ Inhomogeneous medium index■ Suspended bubbles index■ HBSI■ NSV flow■ NSV flow alternative■ External pressure■ Exciter current 1■ Exciter current 2■ Oscillation frequency 1■ Oscillation frequency 2■ Raw value mass flow■ S&W volume flow■ Torsion signal asymmetry</div><div><ul style="list-style-type: none">■ Reference density■ Reference density alternative■ Corrected volume flow■ Oil corrected volume flow■ Water corrected volume flow■ Oscillation damping fluctuation 1■ Oscillation damping fluctuation 2■ Frequency fluctuation 1■ Frequency fluctuation 2■ Target mass flow■ Carrier volume flow■ Target volume flow■ Temp. compensated dynamic viscosity■ Temp. compensated kinematic viscosity■ Temperature■ Volume flow■ Oil volume flow■ Water volume flow■ Water cut</div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
374	Sensor electronics (ISEM) faulty		1. Restart device 2. Check if failure recurs 3. Replace sensor electronic module (ISEM)
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	<div><div><ul style="list-style-type: none">■ Oscillation amplitude 1■ Oscillation amplitude 2■ Application specific output■ Application specific output■ Signal asymmetry■ Carrier mass flow■ Carrier pipe temperature■ Target corrected volume flow■ Carrier corrected volume flow■ Sensor index coil asymmetry■ Concentration■ Oscillation damping 1■ Oscillation damping 2■ Density■ Oil density■ Water density■ Test point■ Test point■ Dynamic viscosity■ Sensor electronics temperature (ISEM)</div><div><ul style="list-style-type: none">■ GSV flow■ GSV flow alternative■ Kinematic viscosity■ Mass flow■ Oil mass flow■ Water mass flow■ Inhomogeneous medium index■ Suspended bubbles index■ HBSI■ NSV flow■ NSV flow alternative■ External pressure■ Exciter current 1■ Exciter current 2■ Oscillation frequency 1■ Oscillation frequency 2■ Raw value mass flow■ S&W volume flow■ Torsion signal asymmetry■ Reference density</div><div><ul style="list-style-type: none">■ Reference density alternative■ Corrected volume flow■ Oil corrected volume flow■ Water corrected volume flow■ Oscillation damping fluctuation 1■ Oscillation damping fluctuation 2■ Frequency fluctuation 1■ Frequency fluctuation 2■ Target mass flow■ Carrier volume flow■ Target volume flow■ Temp. compensated dynamic viscosity■ Temp. compensated kinematic viscosity■ Temperature■ Volume flow■ Oil volume flow■ Water volume flow■ Water cut</div></div>		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	
No.	Short text		
375	I/O- 1 to n communication failed	1. Restart device 2. Check if failure recurs 3. Replace module rack inclusive electronic modules	
	Measured variable status		
	Quality		Good
	Quality substatus		Ok
	Coding (hex)		0x80 to 0x83
	Status signal		F
	Diagnostic behavior		Alarm
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Measured values</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div></div><div><div>■ Sensor electronics temperature (ISEM)</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div></div><div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
378	Supply voltage ISEM faulty		1. If available: Check connection cable between sensor and transmitter 2. Replace main electronic module 3. Replace sensor electronic module (ISEM)
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><ul style="list-style-type: none">▪ Oscillation amplitude 1▪ Oscillation amplitude 2▪ Application specific output▪ Application specific output▪ Signal asymmetry▪ Carrier mass flow▪ Carrier pipe temperature▪ Target corrected volume flow▪ Carrier corrected volume flow▪ Sensor index coil asymmetry▪ Concentration▪ Measured values▪ Oscillation damping 1▪ Oscillation damping 2▪ Density▪ Oil density▪ Water density▪ Test point▪ Test point▪ Dynamic viscosity</div><div><ul style="list-style-type: none">▪ Sensor electronics temperature (ISEM)▪ GSV flow▪ GSV flow alternative▪ Kinematic viscosity▪ Mass flow▪ Oil mass flow▪ Water mass flow▪ Inhomogeneous medium index▪ Suspended bubbles index▪ HBSI▪ NSV flow▪ NSV flow alternative▪ External pressure▪ Exciter current 1▪ Exciter current 2▪ Oscillation frequency 1▪ Oscillation frequency 2▪ Raw value mass flow▪ S&W volume flow▪ Torsion signal asymmetry</div><div><ul style="list-style-type: none">▪ Reference density▪ Reference density alternative▪ Corrected volume flow▪ Oil corrected volume flow▪ Water corrected volume flow▪ Oscillation damping fluctuation 1▪ Oscillation damping fluctuation 2▪ Frequency fluctuation 1▪ Frequency fluctuation 2▪ Target mass flow▪ Carrier volume flow▪ Target volume flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow▪ Oil volume flow▪ Water volume flow▪ Water cut</div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
382	Data storage		1. Insert T-DAT 2. Replace T-DAT
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><ul style="list-style-type: none">■ Oscillation amplitude 1■ Oscillation amplitude 2■ Application specific output■ Application specific output■ Signal asymmetry■ Carrier mass flow■ Carrier pipe temperature■ Target corrected volume flow■ Carrier corrected volume flow■ Sensor index coil asymmetry■ Concentration■ Measured values■ Oscillation damping 1■ Oscillation damping 2■ Density■ Oil density■ Water density■ Test point■ Test point■ Dynamic viscosity</div><div><ul style="list-style-type: none">■ Sensor electronics temperature (ISEM)■ GSV flow■ GSV flow alternative■ Kinematic viscosity■ Mass flow■ Oil mass flow■ Water mass flow■ Inhomogeneous medium index■ Suspended bubbles index■ HBSI■ NSV flow■ NSV flow alternative■ External pressure■ Exciter current 1■ Exciter current 2■ Oscillation frequency 1■ Oscillation frequency 2■ Raw value mass flow■ S&W volume flow■ Torsion signal asymmetry</div><div><ul style="list-style-type: none">■ Reference density■ Reference density alternative■ Corrected volume flow■ Oil corrected volume flow■ Water corrected volume flow■ Oscillation damping fluctuation 1■ Oscillation damping fluctuation 2■ Frequency fluctuation 1■ Frequency fluctuation 2■ Target mass flow■ Carrier volume flow■ Target volume flow■ Temp. compensated dynamic viscosity■ Temp. compensated kinematic viscosity■ Temperature■ Volume flow■ Oil volume flow■ Water volume flow■ Water cut</div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
383	Memory content		Reset device
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><div>▪ Oscillation amplitude 1</div><div>▪ Oscillation amplitude 2</div><div>▪ Application specific output</div><div>▪ Application specific output</div><div>▪ Signal asymmetry</div><div>▪ Carrier mass flow</div><div>▪ Carrier pipe temperature</div><div>▪ Target corrected volume flow</div><div>▪ Carrier corrected volume flow</div><div>▪ Sensor index coil asymmetry</div><div>▪ Concentration</div><div>▪ Measured values</div><div>▪ Oscillation damping 1</div><div>▪ Oscillation damping 2</div><div>▪ Density</div><div>▪ Oil density</div><div>▪ Water density</div><div>▪ Test point</div><div>▪ Test point</div><div>▪ Dynamic viscosity</div></div><div><div>▪ Sensor electronics temperature (ISEM)</div><div>▪ GSV flow</div><div>▪ GSV flow alternative</div><div>▪ Kinematic viscosity</div><div>▪ Mass flow</div><div>▪ Oil mass flow</div><div>▪ Water mass flow</div><div>▪ Inhomogeneous medium index</div><div>▪ Suspended bubbles index</div><div>▪ HBSI</div><div>▪ NSV flow</div><div>▪ NSV flow alternative</div><div>▪ External pressure</div><div>▪ Exciter current 1</div><div>▪ Exciter current 2</div><div>▪ Oscillation frequency 1</div><div>▪ Oscillation frequency 2</div><div>▪ Raw value mass flow</div><div>▪ S&W volume flow</div><div>▪ Torsion signal asymmetry</div></div><div><div>▪ Reference density</div><div>▪ Reference density alternative</div><div>▪ Corrected volume flow</div><div>▪ Oil corrected volume flow</div><div>▪ Water corrected volume flow</div><div>▪ Oscillation damping fluctuation 1</div><div>▪ Oscillation damping fluctuation 2</div><div>▪ Frequency fluctuation 1</div><div>▪ Frequency fluctuation 2</div><div>▪ Target mass flow</div><div>▪ Carrier volume flow</div><div>▪ Target volume flow</div><div>▪ Temp. compensated dynamic viscosity</div><div>▪ Temp. compensated kinematic viscosity</div><div>▪ Temperature</div><div>▪ Volume flow</div><div>▪ Oil volume flow</div><div>▪ Water volume flow</div><div>▪ Water cut</div></div></div>			

Diagnostic information		Remedy instructions	
No.	Short text		
387	HistoROM data faulty	Contact service organization	
	Measured variable status		
	Quality		Good
	Quality substatus		Ok
	Coding (hex)		0x80 to 0x83
	Status signal		F
	Diagnostic behavior		Alarm
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Measured values</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div></div><div><div>■ Sensor electronics temperature (ISEM)</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div></div><div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

12.7.3 Diagnostic of configuration

Diagnostic information		Remedy instructions
No.	Short text	
410	Data transfer failed	1. Retry data transfer 2. Check connection
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
<ul style="list-style-type: none"> ▪ Oscillation amplitude 1 ▪ Oscillation amplitude 2 ▪ Application specific output ▪ Application specific output ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Target corrected volume flow ▪ Carrier corrected volume flow ▪ Sensor index coil asymmetry ▪ Concentration ▪ Measured values ▪ Oscillation damping 1 ▪ Oscillation damping 2 ▪ Density ▪ Oil density ▪ Water density ▪ Test point ▪ Test point ▪ Dynamic viscosity 		<ul style="list-style-type: none"> ▪ Sensor electronics temperature (ISEM) ▪ GSV flow ▪ GSV flow alternative ▪ Kinematic viscosity ▪ Mass flow ▪ Oil mass flow ▪ Water mass flow ▪ Inhomogeneous medium index ▪ Suspended bubbles index ▪ HBSI ▪ NSV flow ▪ NSV flow alternative ▪ External pressure ▪ Exciter current 1 ▪ Exciter current 2 ▪ Oscillation frequency 1 ▪ Oscillation frequency 2 ▪ Raw value mass flow ▪ S&W volume flow ▪ Torsion signal asymmetry
<ul style="list-style-type: none"> ▪ Reference density ▪ Reference density alternative ▪ Corrected volume flow ▪ Oil corrected volume flow ▪ Water corrected volume flow ▪ Oscillation damping fluctuation 1 ▪ Oscillation damping fluctuation 2 ▪ Frequency fluctuation 1 ▪ Frequency fluctuation 2 ▪ Target mass flow ▪ Carrier volume flow ▪ Target volume flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Volume flow ▪ Oil volume flow ▪ Water volume flow ▪ Water cut 		

Diagnostic information			Remedy instructions
No.	Short text		
412	Processing download		Download active, please wait
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	C	
	Diagnostic behavior	Warning	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Measured values</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div></div><div><div>■ Sensor electronics temperature (ISEM)</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div></div><div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

Diagnostic information			Remedy instructions
No.	Short text		
431	Trim 1 to n required		Carry out trim
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	C	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	-		

Diagnostic information			Remedy instructions
No.	Short text		
437	Configuration incompatible		1. Update firmware 2. Execute factory reset
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><ul style="list-style-type: none">▪ Oscillation amplitude 1▪ Oscillation amplitude 2▪ Application specific output▪ Application specific output▪ Signal asymmetry▪ Carrier mass flow▪ Carrier pipe temperature▪ Target corrected volume flow▪ Carrier corrected volume flow▪ Sensor index coil asymmetry▪ Concentration▪ Measured values▪ Oscillation damping 1▪ Oscillation damping 2▪ Density▪ Oil density▪ Water density▪ Test point▪ Test point▪ Dynamic viscosity</div><div><ul style="list-style-type: none">▪ Sensor electronics temperature (ISEM)▪ GSV flow▪ GSV flow alternative▪ Kinematic viscosity▪ Mass flow▪ Oil mass flow▪ Water mass flow▪ Inhomogeneous medium index▪ Suspended bubbles index▪ HBSI▪ NSV flow▪ NSV flow alternative▪ External pressure▪ Exciter current 1▪ Exciter current 2▪ Oscillation frequency 1▪ Oscillation frequency 2▪ Raw value mass flow▪ S&W volume flow▪ Torsion signal asymmetry</div><div><ul style="list-style-type: none">▪ Reference density▪ Reference density alternative▪ Corrected volume flow▪ Oil corrected volume flow▪ Water corrected volume flow▪ Oscillation damping fluctuation 1▪ Oscillation damping fluctuation 2▪ Frequency fluctuation 1▪ Frequency fluctuation 2▪ Target mass flow▪ Carrier volume flow▪ Target volume flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow▪ Oil volume flow▪ Water volume flow▪ Water cut</div></div>			

Diagnostic information		Remedy instructions
No.	Short text	
438	Dataset different	
	Measured variable status	
	Quality	Good
	Quality substatus	Ok
	Coding (hex)	0x80 to 0x83
	Status signal	M
	Diagnostic behavior	Warning
	Influenced measured variables	
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Measured values</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div></div><div><div>■ Sensor electronics temperature (ISEM)</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div></div><div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

Diagnostic information			Remedy instructions
No.	Short text		
441	Current output 1 to n saturated		1. Check current output settings 2. Check process
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	-		

Diagnostic information		Remedy instructions
No.	Short text	
442	Frequency output 1 saturated	1. Check frequency output settings 2. Check process
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
443	Pulse output 1 saturated	1. Check pulse output settings 2. Check process
	Measured variable status [from the factory] ¹⁾	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions
No.	Short text	
444	Current input 1 to n saturated	1. Check current input settings 2. Check connected device 3. Check process
	Measured variable status [from the factory] ¹⁾	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	Measured values	

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
453	Flow override active		Deactivate flow override
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	C	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div><div>■ Sensor electronics temperature (ISEM)</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div><div>■ Reference density</div></div><div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>		

Diagnostic information		Remedy instructions
No.	Short text	
484	Failure mode simulation active	Deactivate simulation
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	<ul style="list-style-type: none"> ▪ Oscillation amplitude 1 ▪ Oscillation amplitude 2 ▪ Application specific output ▪ Application specific output ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Target corrected volume flow ▪ Carrier corrected volume flow ▪ Sensor index coil asymmetry ▪ Concentration ▪ Oscillation damping 1 ▪ Oscillation damping 2 ▪ Density ▪ Oil density ▪ Water density ▪ Test point ▪ Test point ▪ Dynamic viscosity ▪ Sensor electronics temperature (ISEM) 	
	<ul style="list-style-type: none"> ▪ GSV flow ▪ GSV flow alternative ▪ Kinematic viscosity ▪ Mass flow ▪ Oil mass flow ▪ Water mass flow ▪ Inhomogeneous medium index ▪ Suspended bubbles index ▪ HBSI ▪ NSV flow ▪ NSV flow alternative ▪ External pressure ▪ Exciter current 1 ▪ Exciter current 2 ▪ Oscillation frequency 1 ▪ Oscillation frequency 2 ▪ Raw value mass flow ▪ S&W volume flow ▪ Torsion signal asymmetry ▪ Reference density 	
	<ul style="list-style-type: none"> ▪ Reference density alternative ▪ Corrected volume flow ▪ Oil corrected volume flow ▪ Water corrected volume flow ▪ Oscillation damping fluctuation 1 ▪ Oscillation damping fluctuation 2 ▪ Frequency fluctuation 1 ▪ Frequency fluctuation 2 ▪ Target mass flow ▪ Carrier volume flow ▪ Target volume flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Volume flow ▪ Oil volume flow ▪ Water volume flow ▪ Water cut 	

Diagnostic information		Remedy instructions
No.	Short text	
485	Process variable simulation active	Deactivate simulation
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	<ul style="list-style-type: none"> ■ Oscillation amplitude 1 ■ Oscillation amplitude 2 ■ Application specific output ■ Application specific output ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Target corrected volume flow ■ Carrier corrected volume flow ■ Sensor index coil asymmetry ■ Concentration ■ Oscillation damping 1 ■ Oscillation damping 2 ■ Density ■ Oil density ■ Water density ■ Test point ■ Test point ■ Dynamic viscosity ■ Sensor electronics temperature (ISEM) 	
	<ul style="list-style-type: none"> ■ GSV flow ■ GSV flow alternative ■ Kinematic viscosity ■ Mass flow ■ Oil mass flow ■ Water mass flow ■ Inhomogeneous medium index ■ Suspended bubbles index ■ HBSI ■ NSV flow ■ NSV flow alternative ■ External pressure ■ Exciter current 1 ■ Exciter current 2 ■ Oscillation frequency 1 ■ Oscillation frequency 2 ■ Raw value mass flow ■ S&W volume flow ■ Torsion signal asymmetry ■ Reference density 	
	<ul style="list-style-type: none"> ■ Reference density alternative ■ Corrected volume flow ■ Oil corrected volume flow ■ Water corrected volume flow ■ Oscillation damping fluctuation 1 ■ Oscillation damping fluctuation 2 ■ Frequency fluctuation 1 ■ Frequency fluctuation 2 ■ Target mass flow ■ Carrier volume flow ■ Target volume flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Volume flow ■ Oil volume flow ■ Water volume flow ■ Water cut 	

Diagnostic information		Remedy instructions
No.	Short text	
486	Current input 1 to n simulation active	Deactivate simulation
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	Measured values	

Diagnostic information		Remedy instructions
No.	Short text	
491	Current output 1 to n simulation active	Deactivate simulation
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
492	Frequency output 1 to n simulation active	Deactivate simulation frequency output
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
493	Pulse output simulation active	Deactivate simulation pulse output
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
494	Switch output 1 to n simulation active	Deactivate simulation switch output
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
495	Diagnostic event simulation active	Deactivate simulation
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
496	Status input 1 to n simulation active	Deactivate simulation status input
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
520	I/O 1 to n hardware configuration invalid	
	Measured variable status	
	Quality	Good
	Quality substatus	Ok
	Coding (hex)	0x80 to 0x83
	Status signal	F
	Diagnostic behavior	Alarm
	Influenced measured variables	
	-	

Diagnostic information		Remedy instructions
No.	Short text	
528	Concentration calculation not possible	
	Measured variable status	
	Quality	Good
	Quality substatus	Ok
	Coding (hex)	0x80 to 0x83
	Status signal	S
	Diagnostic behavior	Alarm
	Influenced measured variables	
	<ul style="list-style-type: none"> ▪ Carrier mass flow ▪ Target corrected volume flow ▪ Carrier corrected volume flow ▪ Concentration ▪ Density ▪ Mass flow ▪ Target mass flow ▪ Carrier volume flow ▪ Target volume flow ▪ Volume flow 	

Diagnostic information		Remedy instructions
No.	Short text	
529	Concentration calculation not accurate	
	Measured variable status	
	Quality	Good
	Quality substatus	Ok
	Coding (hex)	0x80 to 0x83
	Status signal	S
	Diagnostic behavior	Warning
	Influenced measured variables	
	<ul style="list-style-type: none"> ▪ Carrier mass flow ▪ Target corrected volume flow ▪ Carrier corrected volume flow ▪ Concentration ▪ Density ▪ Mass flow ▪ Target mass flow ▪ Carrier volume flow ▪ Target volume flow ▪ Volume flow 	

Diagnostic information		Remedy instructions
No.	Short text	
537	Configuration	1. Check IP addresses in network 2. Change IP address
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
594	Relay output 1 to n simulation active	Deactivate simulation switch output
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

12.7.4 Diagnostic of process

Diagnostic information		Remedy instructions
No.	Short text	
803	Loop current 1 faulty	1. Check wiring 2. Change I/O module
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information			Remedy instructions
No.	Short text		
830	Ambient temperature too high		Reduce ambient temp. around the sensor housing
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
<div><div><div>▪ Oscillation amplitude 1</div><div>▪ Oscillation amplitude 2</div><div>▪ Application specific output</div><div>▪ Application specific output</div><div>▪ Signal asymmetry</div><div>▪ Carrier mass flow</div><div>▪ Carrier pipe temperature</div><div>▪ Target corrected volume flow</div><div>▪ Carrier corrected volume flow</div><div>▪ Sensor index coil asymmetry</div><div>▪ Concentration</div><div>▪ Oscillation damping 1</div><div>▪ Oscillation damping 2</div><div>▪ Density</div><div>▪ Oil density</div><div>▪ Water density</div><div>▪ Test point</div><div>▪ Test point</div><div>▪ Dynamic viscosity</div><div>▪ Sensor electronics temperature (ISEM)</div></div><div><div>▪ GSV flow</div><div>▪ GSV flow alternative</div><div>▪ Kinematic viscosity</div><div>▪ Mass flow</div><div>▪ Oil mass flow</div><div>▪ Water mass flow</div><div>▪ Inhomogeneous medium index</div><div>▪ Suspended bubbles index</div><div>▪ HBSI</div><div>▪ NSV flow</div><div>▪ NSV flow alternative</div><div>▪ External pressure</div><div>▪ Exciter current 1</div><div>▪ Exciter current 2</div><div>▪ Oscillation frequency 1</div><div>▪ Oscillation frequency 2</div><div>▪ Raw value mass flow</div><div>▪ S&W volume flow</div><div>▪ Torsion signal asymmetry</div><div>▪ Reference density</div></div><div><div>▪ Reference density alternative</div><div>▪ Corrected volume flow</div><div>▪ Oil corrected volume flow</div><div>▪ Water corrected volume flow</div><div>▪ Oscillation damping fluctuation 1</div><div>▪ Oscillation damping fluctuation 2</div><div>▪ Frequency fluctuation 1</div><div>▪ Frequency fluctuation 2</div><div>▪ Target mass flow</div><div>▪ Carrier volume flow</div><div>▪ Target volume flow</div><div>▪ Temp. compensated dynamic viscosity</div><div>▪ Temp. compensated kinematic viscosity</div><div>▪ Temperature</div><div>▪ Volume flow</div><div>▪ Oil volume flow</div><div>▪ Water volume flow</div><div>▪ Water cut</div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions
No.	Short text	
831	Ambient temperature too low	Increase ambient temp. around the sensor housing
	Measured variable status [from the factory] ¹⁾	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	<ul style="list-style-type: none"> ■ Oscillation amplitude 1 ■ Oscillation amplitude 2 ■ Application specific output ■ Application specific output ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Target corrected volume flow ■ Carrier corrected volume flow ■ Sensor index coil asymmetry ■ Concentration ■ Oscillation damping 1 ■ Oscillation damping 2 ■ Density ■ Oil density ■ Water density ■ Test point ■ Test point ■ Dynamic viscosity ■ Sensor electronics temperature (ISEM) 	
		<ul style="list-style-type: none"> ■ GSV flow ■ GSV flow alternative ■ Kinematic viscosity ■ Mass flow ■ Oil mass flow ■ Water mass flow ■ Inhomogeneous medium index ■ Suspended bubbles index ■ HBSI ■ NSV flow ■ NSV flow alternative ■ External pressure ■ Exciter current 1 ■ Exciter current 2 ■ Oscillation frequency 1 ■ Oscillation frequency 2 ■ Raw value mass flow ■ S&W volume flow ■ Torsion signal asymmetry ■ Reference density
		<ul style="list-style-type: none"> ■ Reference density alternative ■ Corrected volume flow ■ Oil corrected volume flow ■ Water corrected volume flow ■ Oscillation damping fluctuation 1 ■ Oscillation damping fluctuation 2 ■ Frequency fluctuation 1 ■ Frequency fluctuation 2 ■ Target mass flow ■ Carrier volume flow ■ Target volume flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Volume flow ■ Oil volume flow ■ Water volume flow ■ Water cut

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
832	Electronics temperature too high		Reduce ambient temperature
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
<div><div><ul style="list-style-type: none">▪ Oscillation amplitude 1▪ Oscillation amplitude 2▪ Application specific output▪ Application specific output▪ Signal asymmetry▪ Carrier mass flow▪ Carrier pipe temperature▪ Target corrected volume flow▪ Carrier corrected volume flow▪ Sensor index coil asymmetry▪ Concentration▪ Measured values▪ Oscillation damping 1▪ Oscillation damping 2▪ Density▪ Oil density▪ Water density▪ Test point▪ Test point▪ Dynamic viscosity</div><div><ul style="list-style-type: none">▪ Sensor electronics temperature (ISEM)▪ GSV flow▪ GSV flow alternative▪ Kinematic viscosity▪ Mass flow▪ Oil mass flow▪ Water mass flow▪ Inhomogeneous medium index▪ Suspended bubbles index▪ HBSI▪ NSV flow▪ NSV flow alternative▪ External pressure▪ Exciter current 1▪ Exciter current 2▪ Oscillation frequency 1▪ Oscillation frequency 2▪ Raw value mass flow▪ S&W volume flow▪ Torsion signal asymmetry</div><div><ul style="list-style-type: none">▪ Reference density▪ Reference density alternative▪ Corrected volume flow▪ Oil corrected volume flow▪ Water corrected volume flow▪ Oscillation damping fluctuation 1▪ Oscillation damping fluctuation 2▪ Frequency fluctuation 1▪ Frequency fluctuation 2▪ Target mass flow▪ Carrier volume flow▪ Target volume flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow▪ Oil volume flow▪ Water volume flow▪ Water cut</div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	
No.	Short text		
833	Electronics temperature too low	Increase ambient temperature	
	Measured variable status [from the factory] ¹⁾		
	Quality		Good
	Quality substatus		Ok
	Coding (hex)		0x80 to 0x83
	Status signal		S
	Diagnostic behavior		Warning
	Influenced measured variables		
<div><div><ul style="list-style-type: none">■ Oscillation amplitude 1■ Oscillation amplitude 2■ Application specific output■ Application specific output■ Signal asymmetry■ Carrier mass flow■ Carrier pipe temperature■ Target corrected volume flow■ Carrier corrected volume flow■ Sensor index coil asymmetry■ Concentration■ Measured values■ Oscillation damping 1■ Oscillation damping 2■ Density■ Oil density■ Water density■ Test point■ Test point■ Dynamic viscosity</div><div><ul style="list-style-type: none">■ Sensor electronics temperature (ISEM)■ GSV flow■ GSV flow alternative■ Kinematic viscosity■ Mass flow■ Oil mass flow■ Water mass flow■ Inhomogeneous medium index■ Suspended bubbles index■ HBSI■ NSV flow■ NSV flow alternative■ External pressure■ Exciter current 1■ Exciter current 2■ Oscillation frequency 1■ Oscillation frequency 2■ Raw value mass flow■ S&W volume flow■ Torsion signal asymmetry</div><div><ul style="list-style-type: none">■ Reference density■ Reference density alternative■ Corrected volume flow■ Oil corrected volume flow■ Water corrected volume flow■ Oscillation damping fluctuation 1■ Oscillation damping fluctuation 2■ Frequency fluctuation 1■ Frequency fluctuation 2■ Target mass flow■ Carrier volume flow■ Target volume flow■ Temp. compensated dynamic viscosity■ Temp. compensated kinematic viscosity■ Temperature■ Volume flow■ Oil volume flow■ Water volume flow■ Water cut</div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
834	Process temperature too high		Reduce process temperature
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
<div><div><div>▪ Oscillation amplitude 1</div><div>▪ Oscillation amplitude 2</div><div>▪ Application specific output</div><div>▪ Application specific output</div><div>▪ Signal asymmetry</div><div>▪ Carrier mass flow</div><div>▪ Carrier pipe temperature</div><div>▪ Target corrected volume flow</div><div>▪ Carrier corrected volume flow</div><div>▪ Sensor index coil asymmetry</div><div>▪ Concentration</div><div>▪ Oscillation damping 1</div><div>▪ Oscillation damping 2</div><div>▪ Density</div><div>▪ Oil density</div><div>▪ Water density</div><div>▪ Test point</div><div>▪ Test point</div><div>▪ Dynamic viscosity</div><div>▪ Sensor electronics temperature (ISEM)</div></div><div><div>▪ GSV flow</div><div>▪ GSV flow alternative</div><div>▪ Kinematic viscosity</div><div>▪ Mass flow</div><div>▪ Oil mass flow</div><div>▪ Water mass flow</div><div>▪ Inhomogeneous medium index</div><div>▪ Suspended bubbles index</div><div>▪ HBSI</div><div>▪ NSV flow</div><div>▪ NSV flow alternative</div><div>▪ External pressure</div><div>▪ Exciter current 1</div><div>▪ Exciter current 2</div><div>▪ Oscillation frequency 1</div><div>▪ Oscillation frequency 2</div><div>▪ Raw value mass flow</div><div>▪ S&W volume flow</div><div>▪ Torsion signal asymmetry</div><div>▪ Reference density</div></div><div><div>▪ Reference density alternative</div><div>▪ Corrected volume flow</div><div>▪ Oil corrected volume flow</div><div>▪ Water corrected volume flow</div><div>▪ Oscillation damping fluctuation 1</div><div>▪ Oscillation damping fluctuation 2</div><div>▪ Frequency fluctuation 1</div><div>▪ Frequency fluctuation 2</div><div>▪ Target mass flow</div><div>▪ Carrier volume flow</div><div>▪ Target volume flow</div><div>▪ Temp. compensated dynamic viscosity</div><div>▪ Temp. compensated kinematic viscosity</div><div>▪ Temperature</div><div>▪ Volume flow</div><div>▪ Oil volume flow</div><div>▪ Water volume flow</div><div>▪ Water cut</div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions
No.	Short text	
835	Process temperature too low	Increase process temperature
	Measured variable status [from the factory] ¹⁾	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	<ul style="list-style-type: none"> ■ Oscillation amplitude 1 ■ Oscillation amplitude 2 ■ Application specific output ■ Application specific output ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Target corrected volume flow ■ Carrier corrected volume flow ■ Sensor index coil asymmetry ■ Concentration ■ Oscillation damping 1 ■ Oscillation damping 2 ■ Density ■ Oil density ■ Water density ■ Test point ■ Test point ■ Dynamic viscosity ■ Sensor electronics temperature (ISEM) 	
		<ul style="list-style-type: none"> ■ GSV flow ■ GSV flow alternative ■ Kinematic viscosity ■ Mass flow ■ Oil mass flow ■ Water mass flow ■ Inhomogeneous medium index ■ Suspended bubbles index ■ HBSI ■ NSV flow ■ NSV flow alternative ■ External pressure ■ Exciter current 1 ■ Exciter current 2 ■ Oscillation frequency 1 ■ Oscillation frequency 2 ■ Raw value mass flow ■ S&W volume flow ■ Torsion signal asymmetry ■ Reference density
		<ul style="list-style-type: none"> ■ Reference density alternative ■ Corrected volume flow ■ Oil corrected volume flow ■ Water corrected volume flow ■ Oscillation damping fluctuation 1 ■ Oscillation damping fluctuation 2 ■ Frequency fluctuation 1 ■ Frequency fluctuation 2 ■ Target mass flow ■ Carrier volume flow ■ Target volume flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Volume flow ■ Oil volume flow ■ Water volume flow ■ Water cut

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
842	Process value below limit		1. Decrease process value 2. Check application 3. Check sensor
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div><div>■ Sensor electronics temperature (ISEM)</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div><div>■ Reference density</div></div><div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
862	Partly filled pipe		1. Check for gas in process 2. Adjust detection limits
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
<div><div><ul style="list-style-type: none">■ Application specific output■ Application specific output■ Carrier mass flow■ Target corrected volume flow■ Carrier corrected volume flow■ Concentration■ Density■ Oil density■ Water density■ Dynamic viscosity■ Sensor electronics temperature (ISEM)■ GSV flow■ GSV flow alternative</div><div><ul style="list-style-type: none">■ Kinematic viscosity■ Mass flow■ Oil mass flow■ Water mass flow■ Inhomogeneous medium index■ Suspended bubbles index■ HBSI■ NSV flow■ NSV flow alternative■ External pressure■ S&W volume flow■ Reference density■ Reference density alternative</div><div><ul style="list-style-type: none">■ Corrected volume flow■ Oil corrected volume flow■ Water corrected volume flow■ Target mass flow■ Carrier volume flow■ Target volume flow■ Temp. compensated dynamic viscosity■ Temp. compensated kinematic viscosity■ Temperature■ Volume flow■ Oil volume flow■ Water volume flow■ Water cut</div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
882	Input signal faulty		1. Check input signal parameterization 2. Check external device 3. Check process conditions
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
<div><div><ul style="list-style-type: none">■ Oscillation amplitude 1■ Oscillation amplitude 2■ Application specific output■ Application specific output■ Signal asymmetry■ Carrier mass flow■ Carrier pipe temperature■ Target corrected volume flow■ Carrier corrected volume flow■ Sensor index coil asymmetry■ Concentration■ Measured values■ Oscillation damping 1■ Oscillation damping 2■ Density■ Oil density■ Water density■ Test point■ Test point■ Dynamic viscosity</div><div><ul style="list-style-type: none">■ Sensor electronics temperature (ISEM)■ GSV flow■ GSV flow alternative■ Kinematic viscosity■ Mass flow■ Oil mass flow■ Water mass flow■ Inhomogeneous medium index■ Suspended bubbles index■ HBSI■ NSV flow■ NSV flow alternative■ External pressure■ Exciter current 1■ Exciter current 2■ Oscillation frequency 1■ Oscillation frequency 2■ Raw value mass flow■ S&W volume flow■ Torsion signal asymmetry</div><div><ul style="list-style-type: none">■ Reference density■ Reference density alternative■ Corrected volume flow■ Oil corrected volume flow■ Water corrected volume flow■ Oscillation damping fluctuation 1■ Oscillation damping fluctuation 2■ Frequency fluctuation 1■ Frequency fluctuation 2■ Target mass flow■ Carrier volume flow■ Target volume flow■ Temp. compensated dynamic viscosity■ Temp. compensated kinematic viscosity■ Temperature■ Volume flow■ Oil volume flow■ Water volume flow■ Water cut</div></div>			

Diagnostic information		Remedy instructions
No.	Short text	
910	Tubes not oscillating	1. If available: Check connection cable between sensor and transmitter 2. Check or replace sensor electronic module (ISEM) 3. Check sensor
	Measured variable status	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	–	

Diagnostic information		Remedy instructions
No.	Short text	
912	Medium inhomogeneous	1. Check process cond. 2. Increase system pressure
	Measured variable status [from the factory] ¹⁾	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
<ul style="list-style-type: none"> ▪ Oscillation amplitude 1 ▪ Oscillation amplitude 2 ▪ Application specific output ▪ Application specific output ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Target corrected volume flow ▪ Carrier corrected volume flow ▪ Sensor index coil asymmetry ▪ Concentration ▪ Oscillation damping 1 ▪ Oscillation damping 2 ▪ Density ▪ Oil density ▪ Water density ▪ Test point ▪ Test point ▪ Dynamic viscosity ▪ Sensor electronics temperature (ISEM) 		<ul style="list-style-type: none"> ▪ GSV flow ▪ GSV flow alternative ▪ Kinematic viscosity ▪ Mass flow ▪ Oil mass flow ▪ Water mass flow ▪ Inhomogeneous medium index ▪ Suspended bubbles index ▪ HBSI ▪ NSV flow ▪ NSV flow alternative ▪ External pressure ▪ Exciter current 1 ▪ Exciter current 2 ▪ Oscillation frequency 1 ▪ Oscillation frequency 2 ▪ Raw value mass flow ▪ S&W volume flow ▪ Torsion signal asymmetry ▪ Reference density
		<ul style="list-style-type: none"> ▪ Reference density alternative ▪ Corrected volume flow ▪ Oil corrected volume flow ▪ Water corrected volume flow ▪ Oscillation damping fluctuation 1 ▪ Oscillation damping fluctuation 2 ▪ Frequency fluctuation 1 ▪ Frequency fluctuation 2 ▪ Target mass flow ▪ Carrier volume flow ▪ Target volume flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Volume flow ▪ Oil volume flow ▪ Water volume flow ▪ Water cut

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	
No.	Short text		
913	Medium unsuitable	1. Check process conditions 2. Check electronic modules or sensor	
	Measured variable status [from the factory] ¹⁾		
	Quality		Good
	Quality substatus		Ok
	Coding (hex)		0x80 to 0x83
	Status signal		S
	Diagnostic behavior		Warning
	Influenced measured variables		
<div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div><div>■ Sensor electronics temperature (ISEM)</div></div><div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div><div>■ Reference density</div></div><div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
915	Viscosity out of specification		1. Avoid 2-phase flow 2. Increase system pressure 3. Verify viscosity and density are within range 4. Check process conditions
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
<div><div><div><div>■ Oscillation amplitude 1</div><div>■ Oscillation amplitude 2</div><div>■ Application specific output</div><div>■ Application specific output</div><div>■ Signal asymmetry</div><div>■ Carrier mass flow</div><div>■ Carrier pipe temperature</div><div>■ Target corrected volume flow</div><div>■ Carrier corrected volume flow</div><div>■ Sensor index coil asymmetry</div><div>■ Concentration</div><div>■ Measured values</div><div>■ Oscillation damping 1</div><div>■ Oscillation damping 2</div><div>■ Density</div><div>■ Oil density</div><div>■ Water density</div><div>■ Test point</div><div>■ Test point</div><div>■ Dynamic viscosity</div></div><div><div>■ Sensor electronics temperature (ISEM)</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Kinematic viscosity</div><div>■ Mass flow</div><div>■ Oil mass flow</div><div>■ Water mass flow</div><div>■ Inhomogeneous medium index</div><div>■ Suspended bubbles index</div><div>■ HBSI</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ External pressure</div><div>■ Exciter current 1</div><div>■ Exciter current 2</div><div>■ Oscillation frequency 1</div><div>■ Oscillation frequency 2</div><div>■ Raw value mass flow</div><div>■ S&W volume flow</div><div>■ Torsion signal asymmetry</div></div><div><div>■ Reference density</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oscillation damping fluctuation 1</div><div>■ Oscillation damping fluctuation 2</div><div>■ Frequency fluctuation 1</div><div>■ Frequency fluctuation 2</div><div>■ Target mass flow</div><div>■ Carrier volume flow</div><div>■ Target volume flow</div><div>■ Temp. compensated dynamic viscosity</div><div>■ Temp. compensated kinematic viscosity</div><div>■ Temperature</div><div>■ Volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div></div>			

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
941	API/ASTM temperature out of specificat.		1. Check process temperature with selected API/ASTM commodity group 2. Check API/ASTM-related parameters
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	<div><div><div><div>■ Oil density</div><div>■ Water density</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Mass flow</div><div>■ Oil mass flow</div></div><div><div>■ Water mass flow</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ S&W volume flow</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div><div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div></div></div>		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
942	API/ASTM density out of specification		1. Check process density with selected API/ASTM commodity group 2. Check API/ASTM-related parameters
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	<div><div>■ Oil density</div><div>■ Water density</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Mass flow</div><div>■ Oil mass flow</div></div>	<div><div>■ Water mass flow</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ S&W volume flow</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div>	<div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div>

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions
No.	Short text		
943	API pressure out of specification		1. Check process pressure with selected API commodity group 2. Check API related parameters
	Measured variable status [from the factory] ¹⁾		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	<div><div>■ Oil density</div><div>■ Water density</div><div>■ GSV flow</div><div>■ GSV flow alternative</div><div>■ Mass flow</div><div>■ Oil mass flow</div></div>	<div><div>■ Water mass flow</div><div>■ NSV flow</div><div>■ NSV flow alternative</div><div>■ S&W volume flow</div><div>■ Reference density alternative</div><div>■ Corrected volume flow</div></div>	<div><div>■ Oil corrected volume flow</div><div>■ Water corrected volume flow</div><div>■ Oil volume flow</div><div>■ Water volume flow</div><div>■ Water cut</div></div>

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions
No.	Short text	
944	Monitoring failed	Check process conditions for Heartbeat Monitoring
	Measured variable status [from the factory] ¹⁾	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
	<ul style="list-style-type: none"> ▪ Oscillation amplitude 1 ▪ Oscillation amplitude 2 ▪ Signal asymmetry ▪ Carrier pipe temperature ▪ Sensor index coil asymmetry ▪ Oscillation damping 1 ▪ Oscillation damping 2 ▪ Test point ▪ Test point 	<ul style="list-style-type: none"> ▪ Dynamic viscosity ▪ Kinematic viscosity ▪ Inhomogeneous medium index ▪ Suspended bubbles index ▪ HBSI ▪ Exciter current 1 ▪ Exciter current 2 ▪ Oscillation frequency 1 ▪ Oscillation frequency 2
		<ul style="list-style-type: none"> ▪ Raw value mass flow ▪ Torsion signal asymmetry ▪ Oscillation damping fluctuation 1 ▪ Oscillation damping fluctuation 2 ▪ Frequency fluctuation 1 ▪ Frequency fluctuation 2 ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions
No.	Short text	
948	Oscillation damping too high	Check process conditions
	Measured variable status [from the factory] ¹⁾	
	Quality	
	Quality substatus	
	Coding (hex)	
	Status signal	
	Diagnostic behavior	
	Influenced measured variables	
<ul style="list-style-type: none"> ▪ Oscillation amplitude 1 ▪ Oscillation amplitude 2 ▪ Application specific output ▪ Application specific output ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Target corrected volume flow ▪ Carrier corrected volume flow ▪ Sensor index coil asymmetry ▪ Concentration ▪ Oscillation damping 1 ▪ Oscillation damping 2 ▪ Density ▪ Oil density ▪ Water density ▪ Test point ▪ Test point ▪ Dynamic viscosity ▪ Sensor electronics temperature (ISEM) 		<ul style="list-style-type: none"> ▪ GSV flow ▪ GSV flow alternative ▪ Kinematic viscosity ▪ Mass flow ▪ Oil mass flow ▪ Water mass flow ▪ Inhomogeneous medium index ▪ Suspended bubbles index ▪ HBSI ▪ NSV flow ▪ NSV flow alternative ▪ External pressure ▪ Exciter current 1 ▪ Exciter current 2 ▪ Oscillation frequency 1 ▪ Oscillation frequency 2 ▪ Raw value mass flow ▪ S&W volume flow ▪ Torsion signal asymmetry ▪ Reference density
		<ul style="list-style-type: none"> ▪ Reference density alternative ▪ Corrected volume flow ▪ Oil corrected volume flow ▪ Water corrected volume flow ▪ Oscillation damping fluctuation 1 ▪ Oscillation damping fluctuation 2 ▪ Frequency fluctuation 1 ▪ Frequency fluctuation 2 ▪ Target mass flow ▪ Carrier volume flow ▪ Target volume flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Volume flow ▪ Oil volume flow ▪ Water volume flow ▪ Water cut


1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.





Diagnostic information		Remedy instructions
No.	Short text	
984	Condensation risk	
	Measured variable status [from the factory] ¹⁾	
	Quality	Good
	Quality substatus	Ok
	Coding (hex)	0x80 to 0x83
	Status signal	S
	Diagnostic behavior	Warning
	Influenced measured variables	
<div><div><ul style="list-style-type: none">■ Oscillation amplitude 1■ Oscillation amplitude 2■ Application specific output■ Application specific output■ Signal asymmetry■ Carrier mass flow■ Carrier pipe temperature■ Target corrected volume flow■ Carrier corrected volume flow■ Sensor index coil asymmetry■ Concentration■ Measured values■ Oscillation damping 1■ Oscillation damping 2■ Density■ Oil density■ Water density■ Test point■ Test point■ Dynamic viscosity</div><div><ul style="list-style-type: none">■ Sensor electronics temperature (ISEM)■ GSV flow■ GSV flow alternative■ Kinematic viscosity■ Mass flow■ Oil mass flow■ Water mass flow■ Inhomogeneous medium index■ Suspended bubbles index■ HBSI■ NSV flow■ NSV flow alternative■ External pressure■ Exciter current 1■ Exciter current 2■ Oscillation frequency 1■ Oscillation frequency 2■ Raw value mass flow■ S&W volume flow■ Torsion signal asymmetry</div><div><ul style="list-style-type: none">■ Reference density■ Reference density alternative■ Corrected volume flow■ Oil corrected volume flow■ Water corrected volume flow■ Oscillation damping fluctuation 1■ Oscillation damping fluctuation 2■ Frequency fluctuation 1■ Frequency fluctuation 2■ Target mass flow■ Carrier volume flow■ Target volume flow■ Temp. compensated dynamic viscosity■ Temp. compensated kinematic viscosity■ Temperature■ Volume flow■ Oil volume flow■ Water volume flow■ Water cut</div></div>		



1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.8 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

 
 
 
 Accessing the remedial action for a diagnostic event:

- Via local display →  192
- Via web browser →  194
- Via "FieldCare" operating tool →  195
- Via "DeviceCare" operating tool →  195

 Other pending diagnostic events can be displayed in the **Diagnostic list** submenu →  265.


Navigation

"Diagnostics" menu

 Diagnostics	
Actual diagnostics	→  265
Previous diagnostics	→  265

Operating time from restart	→ ⓘ 265
Operating time	→ ⓘ 265

Parameter overview with brief description


Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occurred diagnostic event along with its diagnostic information.  If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	Symbol for diagnostic behavior, diagnostic code and short message.
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	–	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	–	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

12.9 Diagnostic list


Up to 5 currently pending diagnostic events are displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path

Diagnostics → Diagnostic list

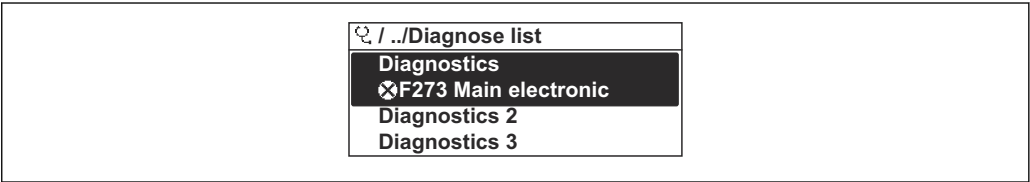

40 Using the example of the local display


-  Accessing the remedial action for a diagnostic event:
- Via local display → ⓘ 192
 - Via web browser → ⓘ 194
 - Via "FieldCare" operating tool → ⓘ 195
 - Via "DeviceCare" operating tool → ⓘ 195

12.10 Event logbook

12.10.1 Reading out the event logbook

A chronological overview of the event messages that have occurred is provided in the **Event logbook** submenu.

Navigation path
Diagnostics menu → **Event logbook** submenu → Event logbook

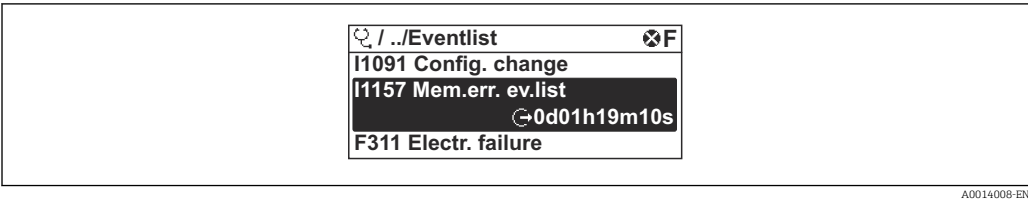

41 Using the example of the local display


- A maximum of 20 event messages can be displayed in chronological order.
- If the **Extended HistoROM** application package (order option) is enabled in the device, the event logbook can contain up to 100 entries.


The event history includes entries for:

- Diagnostic events → 198
- Information events → 266

In addition to the operating time when the event occurred, each event is also assigned a symbol that indicates whether the event has occurred or is finished:

- Diagnostic event
 - ⌚: Occurrence of the event
 - ⌚: End of the event
- Information event
 - ⌚: Occurrence of the event

-  Accessing the remedial action for a diagnostic event:
- Via local display → 192
 - Via web browser → 194
 - Via "FieldCare" operating tool → 195
 - Via "DeviceCare" operating tool → 195

-  Filtering the displayed event messages → 266

12.10.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

Navigation path
Diagnostics → Event logbook → Filter options

- Filter categories**
- All
 - Failure (F)
 - Function check (C)
 - Out of specification (S)
 - Maintenance required (M)
 - Information (I)

12.10.3 Overview of information events


Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
I1000	----- (Device ok)
I1079	Sensor changed

Info number	Info name
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	HistoROM backup deleted
I1111	Density adjust failure
I11280	ZeroPT verified and adjustm. recommended
I11281	ZeroPT verif. and adjust. not recommend.
I1137	Electronics changed
I1151	History reset
I1155	Reset electronics temperature
I1156	Memory error trend
I1157	Memory error event list
I1209	Density adjustment ok
I1221	Zero point adjust failure
I1222	Zero point adjustment ok
I1256	Display: access status changed
I1278	I/O module restarted
I1335	Firmware changed
I1361	Web server: login failed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1444	Device verification passed
I1445	Device verification failed
I1447	Record application reference data
I1448	Application reference data recorded
I1449	Recording application ref. data failed
I1450	Monitoring off
I1451	Monitoring on
I1457	Measurement error verification failed
I1459	I/O module verification failed
I1460	HBSI verification failed
I1461	Sensor verification failed
I1462	Sensor electronic module verif. failed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished
I1618	I/O module 2 replaced
I1619	I/O module 3 replaced
I1621	I/O module 4 replaced
I1622	Calibration changed
I1624	All totalizers reset
I1625	Write protection activated

Info number	Info name
I1626	Write protection deactivated
I1627	Web server: login successful
I1628	Display: login successful
I1629	CDI: login successful
I1631	Web server access changed
I1632	Display: login failed
I1633	CDI: login failed
I1634	Reset to factory settings
I1635	Reset to delivery settings
I1639	Max. switch cycles number reached
I1649	Hardware write protection activated
I1650	Hardware write protection deactivated
I1712	New flash file received
I1725	Sensor electronic module (ISEM) changed
I1726	Configuration backup failed

12.11 Resetting the device

The entire device configuration or some of the configuration can be reset to a defined state with the **Device reset** parameter (→  163).

12.11.1 Function scope of the "Device reset" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to the customer-specific value. All other parameters are reset to the factory setting.
Restart device	The restart resets every parameter with data stored in volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

12.12 Device information

The **Device information** submenu contains all parameters that display different information for device identification.

Navigation

"Diagnostics" menu → Device information

▶ Device information

Device tag








→ 269

Serial number





→ 269


Firmware version

→ 269

Device name	→  269
Manufacturer	→  269
Order code	→  269
Extended order code 1	→  269
Extended order code 2	→  269
Extended order code 3	→  270
ENP version	→  270




Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Device tag	Shows name of measuring point.	Character string comprising numbers, letters and special characters	Promass
Serial number	Shows the serial number of the measuring device.	Max. 11-digit character string comprising letters and numbers.	–
Firmware version	Shows the device firmware version installed.	Character string in the format xx.yy.zz	–
Device name	Shows the name of the transmitter.  The name can be found on the nameplate of the transmitter.	Promass 300/500	–
Device name		Character string comprising numbers, letters and special characters	Prowirl
Manufacturer	Displays the manufacturer.	Character string comprising numbers, letters and special characters	Endress+Hauser
Order code	Shows the device order code.  The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks (e.g. /).	–
Extended order code 1	Shows the 1st part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
Extended order code 2	Shows the 2nd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–

Parameter	Description	User interface	Factory setting
Extended order code 3	Shows the 3rd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
ENP version	Shows the version of the electronic nameplate (ENP).	Character string	2.02.00

12.13 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware Changes	Documentation type	Documentation
2023	01.00.zz	Option 61	Original firmware	Operating instructions	BA02128D/06/EN/01.21

-  It is possible to flash the firmware to the current version or an existing previous version via the service interface.
-  For the compatibility of the firmware version with the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.
-  The manufacturer's information is available:
- In the Download Area of the Endress+Hauser Web site: www.endress.com → Downloads
 - Specify the following details:
 - Product root: e.g. 8P5B
The product root is the first part of the order code: see the nameplate on the device.
 - Text search: Manufacturer's information
 - Media type: Documentation – Technical Documentation

13 Maintenance

13.1 Maintenance work

No special maintenance work is required.

13.1.1 Cleaning

Cleaning of surfaces not in contact with the medium

1. Recommendation: Use a lint-free cloth that is either dry or slightly dampened using water.
2. Do not use sharp objects or aggressive cleaning agents that could damage surfaces (e.g. displays, housing) and seals.
3. Do not use high-pressure steam.
4. Ensure compliance with the protection class of the device.

NOTICE

Cleaning agents can damage the surfaces!

Incorrect cleaning agents can damage the surfaces!

- Do not use cleaning agents containing concentrated mineral acids, alkalis or organic solvents e.g. benzyl alcohol, methylene chloride, xylene, concentrated glycerol cleaners or acetone.

Cleaning of surfaces in contact with the medium

Note the following for cleaning and sterilization in place (CIP/SIP):


- Use only cleaning agents to which the materials in contact with the medium are sufficiently resistant.
- Observe the permitted maximum medium temperature.

13.2 Measuring and test equipment

Endress+Hauser offers a variety of measuring and testing equipment, such as Netilion or device tests.



Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment: →  276

13.3 Maintenance services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.



Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repair

14.1 General notes

14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

14.1.2 Notes for repair and conversion

For repair and conversion of a measuring device, observe the following notes:

- ▶ Use only original Endress+Hauser spare parts.
- ▶ Carry out the repair according to the Installation Instructions.
- ▶ Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ▶ Document all repairs and conversions and enter the details in Netilion Analytics.

14.2 Spare parts

Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.



Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the **Serial number** parameter (→ 269) in the **Device information** submenu.

14.3 Repair services

Endress+Hauser offers a wide range of services.



Your Endress+Hauser Sales Center can provide detailed information on the services.

14.4 Return

The requirements for safe device return can vary depending on the device type and national legislation.

1. Refer to the web page for information: <https://www.endress.com>
2. If returning the device, pack the device in such a way that it is reliably protected against impact and external influences. The original packaging provides the best protection.

14.5 Disposal



If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

14.5.1 Removing the measuring instrument

1. Switch off the device.

WARNING

Danger to persons from process conditions!

- ▶ Beware of hazardous process conditions such as pressure in the measuring instrument, high temperatures or aggressive media.

2. Carry out the installation and connection steps from the "Installing the device" and "Connecting the device" sections in reverse order. Observe the safety instructions.

14.5.2 Disposing of the measuring instrument

WARNING

Danger to personnel and environment from fluids that are hazardous to health.

- ▶ Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:













- ▶ Observe valid federal/national regulations.
- ▶ Ensure proper separation and reuse of the device components.





15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.



15.1 Device-specific accessories

15.1.1 For the transmitter



Accessory	Description
Transmitter <ul style="list-style-type: none"> ■ Proline 500 – digital ■ Proline 500 	Transmitter for replacement or storage. Use the order code to define the following specifications: <ul style="list-style-type: none"> ■ Approvals ■ Output ■ Input ■ Display/operation ■ Housing ■ Software <div>  <ul style="list-style-type: none"> ■ Proline 500 – digital transmitter: Order number: 8X5BXX-*****A ■ Proline 500 transmitter: Order number: 8X5BXX-*****B </div> <div>  Proline 500 transmitter for replacement: It is essential to specify the serial number of the current transmitter when ordering. On the basis of the serial number, the device-specific data (e.g. calibration factors) of the replaced device can be used for the new transmitter. </div> <div>  <ul style="list-style-type: none"> ■ Proline 500 – digital transmitter: Installation Instructions EA01151D ■ Proline 500 transmitter: Installation Instructions EA01152D </div>
External WLAN antenna	External WLAN antenna with 1.5 m (59.1 in) connecting cable and two angle brackets. Order code for "Accessory enclosed", option P8 "Wireless antenna wide area". <div>  <ul style="list-style-type: none"> ■ The external WLAN antenna is not suitable for use in hygienic applications. ■ Further information on the WLAN interface →  88. </div> <div>  Order number: 71351317 </div> <div>  Installation Instructions EA01238D </div>
Pipe mounting set	Pipe mounting set for transmitter. <div>  Proline 500 – digital transmitter Order number: 71346427 </div> <div>  Installation Instructions EA01195D </div> <div>  Proline 500 transmitter Order number: 71346428 </div>
Protective cover Transmitter <ul style="list-style-type: none"> ■ Proline 500 – digital ■ Proline 500 	Is used to protect the measuring instrument from the effects of the weather: e.g. rainwater, excess heating from direct sunlight. <div>  <ul style="list-style-type: none"> ■ Proline 500 – digital transmitter Order number: 71343504 ■ Proline 500 transmitter Order number: 71343505 </div> <div>  Installation Instructions EA01191D </div>



Display guard Proline 500 – digital	<p>Is used to protect the display against impact or scoring, for example from sand in desert areas.</p> <p> Order number: 71228792</p> <p> Installation Instructions EA01093D</p>
Connecting cable Proline 500 – digital Sensor – Transmitter	<p>The connecting cable can be ordered directly with the measuring instrument (order code for "Cable, sensor connection") or as an accessory (order number DK8012).</p> <p>The following cable lengths are available: order code for "Cable, sensor connection"</p> <ul style="list-style-type: none"> ■ Option B: 20 m (65 ft) ■ Option E: User-configurable up to max. 50 m ■ Option F: User-configurable up to max. 165 ft <p> Maximum possible cable length for a Proline 500 – digital connecting cable: 300 m (1 000 ft)</p>
Connecting cable Proline 500 Sensor – Transmitter	<p>The connecting cable can be ordered directly with the measuring instrument (order code for "Cable, sensor connection") or as an accessory (order number DK8012).</p> <p>The following cable lengths are available: order code for "Cable, sensor connection"</p> <ul style="list-style-type: none"> ■ Option 1: 5 m (16 ft) ■ Option 2: 10 m (32 ft) ■ Option 3: 20 m (65 ft) <p> Possible cable length for a Proline 500 connecting cable: max. 20 m (65 ft)</p>

15.1.2 For the sensor



Accessories	Description
Heating jacket	<p>Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids.</p> <p> If using oil as a heating medium, please consult with Endress+Hauser.</p> <p>Use the order code with the product root DK8003.</p> <p> Special Documentation SD02160D</p>

15.2 Communication-specific accessories


 

 

 

Accessories	Description
Fieldgate FXA42	<p>Transmission of the measured values of connected 4 to 20 mA analog measuring instruments, as well as digital measuring instruments</p> <p> <ul style="list-style-type: none"> ■ Technical Information TI01297S ■ Operating Instructions BA01778S ■ Product page: www.endress.com/fxa42 </p>
Field Xpert SMT50	<p>The Field Xpert SMT50 tablet PC for device configuration enables mobile plant asset management in non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.</p> <p>This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.</p> <p> <ul style="list-style-type: none"> ■ Technical Information TI01555S ■ Operating Instructions BA02053S ■ Product page: www.endress.com/smt50 </p>

Field Xpert SMT70	<p>The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.</p> <p>This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.</p> <p> <ul style="list-style-type: none"> ■ Technical Information TI01342S ■ Operating Instructions BA01709S ■ Product page: www.endress.com/smt70 </p>
Field Xpert SMT77	<p>The Field Xpert SMT77 tablet PC for device configuration enables mobile plant asset management in areas categorized as Ex Zone 1.</p> <p> <ul style="list-style-type: none"> ■ Technical Information TI01418S ■ Operating Instructions BA01923S ■ Product page: www.endress.com/smt77 </p>

15.3 Service-specific accessories

Accessory	Description
Applicator	<p>Software for selecting and sizing Endress+Hauser measuring instruments:</p> <ul style="list-style-type: none"> ■ Choice of measuring instruments for industrial requirements ■ Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and measurement accuracy. ■ Graphic display of the calculation results ■ Determining the partial order code. Administration, documentation and access to all project-related data and parameters over the entire life cycle of a project. <p>Applicator is available: Via the Internet: https://portal.endress.com/webapp/applicator</p>
Netilion	<p>IIoT ecosystem: Unlock knowledge</p> <p>With the Netilion IIoT ecosystem, Endress+Hauser allows you to optimize your plant performance, digitize workflows, share knowledge, and enhance collaboration.</p> <p>Based on decades of experience in process automation, Endress+Hauser offers the process industry an IIoT ecosystem that enables you to gain useful insights from data. These insights can be used to optimize processes, leading to increased plant availability, efficiency, and reliability - ultimately resulting in a more profitable plant.</p> <p>www.netilion.endress.com</p>
FieldCare	<p>FDT-based plant asset management tool from Endress+Hauser.</p> <p>It can configure all intelligent field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.</p> <p> Operating Instructions BA00027S and BA00059S</p>
DeviceCare	<p>Tool to connect and configure Endress+Hauser field devices.</p> <p> <ul style="list-style-type: none"> ■ Technical Information: TI01134S ■ Innovation brochure: IN01047S </p>

15.4 System components

Accessories	Description
Memograph M graphic data manager	<p>The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.</p> <ul style="list-style-type: none">  Technical Information TI00133R  Operating Instructions BA00247R
Cerabar M	<p>The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.</p> <ul style="list-style-type: none">  Technical Information TI00426P and TI00436P  Operating Instructions BA00200P and BA00382P
Cerabar S	<p>The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.</p> <ul style="list-style-type: none">  Technical Information TI00383P  Operating Instructions BA00271P
iTEMP	<p>The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature.</p> <ul style="list-style-type: none">  "Fields of Activity" document FA00006T

16 Technical data


16.1 Application

The measuring device is intended only for the flow measurement of liquids.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

16.2 Function and system design

Measuring principle	Mass flow measurement based on the Coriolis measuring principle
Measuring system	<p>The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by connecting cables.</p> <p>For information on the structure of the measuring instrument →  13</p>

16.3 Input

Measured variable

Direct measured variables

- Mass flow
- Density
- Temperature

Calculated measured variables

- Volume flow
- Corrected volume flow
- Reference density

Measuring range

Measuring range for liquids

DN		Measuring range full scale values $\dot{m}_{\min(F)}$ to $\dot{m}_{\max(F)}$	
[mm]	[in]	[kg/h]	[lb/min]
8	$\frac{3}{8}$	0 to 2 000	0 to 73.50
15	$\frac{1}{2}$	0 to 6 500	0 to 238.9
25	1	0 to 18 000	0 to 661.5
40	$1\frac{1}{2}$	0 to 45 000	0 to 1 654
50	2	0 to 70 000	0 to 2 573

Recommended measuring range

 Flow limit →  296

Operable flow range

Over 1000 : 1.



Flow rates above the preset full scale value do not override the electronics unit, with the result that the totalizer values are registered correctly.

Input signal

External measured values

To increase the measurement accuracy of certain measured variables, the automation system can continuously write various measured values to the measuring instrument:

- Operating pressure to increase measurement accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S)
- Medium temperature to increase measurement accuracy (e.g. iTEMP)

 Various pressure and temperature measuring devices can be ordered from Endress +Hauser: see "Accessories" section →  277

Current input

The measured values are written from the automation system to the measuring device via the current input →  280.

Digital communication

The measured values are written by the automation system via PROFINET over Ethernet-APL.

Current input 0/4 to 20 mA

Current input	0/4 to 20 mA (active/passive)
Current span	<ul style="list-style-type: none"> ■ 4 to 20 mA (active) ■ 0/4 to 20 mA (passive)
Resolution	1 µA
Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)
Maximum input voltage	≤ 30 V (passive)
Open-circuit voltage	≤ 28.8 V (active)
Possible input variables	<ul style="list-style-type: none"> ■ Pressure ■ Temperature ■ Density

Status input

Maximum input values	<ul style="list-style-type: none"> ■ DC -3 to 30 V ■ If status input is active (ON): $R_i > 3 \text{ k}\Omega$
Response time	Configurable: 5 to 200 ms
Input signal level	<ul style="list-style-type: none"> ■ Low signal: DC -3 to +5 V ■ High signal: DC 12 to 30 V
Assignable functions	<ul style="list-style-type: none"> ■ Off ■ Reset the individual totalizers separately ■ Reset all totalizers ■ Flow override

16.4 Output

Output signal


PROFINET over Ethernet-APL

Device use	Device connection to an APL field switch The device may only be operated according to the following APL port classifications: <ul style="list-style-type: none"> ■ If used in hazardous areas: SLAA or SLAC ¹⁾ ■ If used in non-hazardous areas: SLAX Connection values of APL field switch (corresponds to APL port classification SPCC or SPAA, for instance): <ul style="list-style-type: none"> ■ Maximum input voltage: 15 V_{DC} ■ Minimum output values: 0.54 W Device connection to an SPE switch <ul style="list-style-type: none"> ■ In non-hazardous areas, the device can be used with an appropriate SPE switch: The device can be connected to an SPE switch with a maximum voltage of 30 V_{DC} and a minimum output power of 1.85 W connected. ■ The SPE switch must support the 10BASE-T1L standard and PoDL power classes 10, 11 or 12 and have a function to disable power class detection.
PROFINET	According to IEC 61158 and IEC 61784
Ethernet-APL	According to IEEE 802.3cg, APL port profile specification v1.0, galvanically isolated
Data transfer	10 Mbit/s
Current consumption	Transmitter <ul style="list-style-type: none"> ■ Max. 400 mA(24 V) ■ Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)
Permitted supply voltage	9 to 30 V
Network connection	With integrated reverse polarity protection



1) For more information on using the device in the hazardous area, see the Ex-specific Safety Instructions



Current output 4 to 20 mA

Signal mode	Can be set to: <ul style="list-style-type: none"> ■ Active ■ Passive
Current range	Can be set to: <ul style="list-style-type: none"> ■ 4 to 20 mA NAMUR ■ 4 to 20 mA US ■ 4 to 20 mA ■ 0 to 20 mA (only if the signal mode is active) ■ Fixed current
Maximum output values	22.5 mA
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	0 to 700 Ω
Resolution	0.38 µA

Damping	Configurable: 0 to 999.9 s
Assignable measured variables	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Electronics temperature ■ Oscillation frequency 0 ■ Oscillation damping 0 ■ Signal asymmetry ■ Exciter current 0 <p> The range of options increases if the measuring device has one or more application packages.</p>


Pulse/frequency/switch output

Function	Can be configured as pulse, frequency or switch output
Version	Open collector Can be set to: <ul style="list-style-type: none"> ■ Active ■ Passive ■ Passive NAMUR <p> Ex-i, passive</p>
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Pulse output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Pulse width	Configurable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Configurable
Assignable measured variables	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow <p> The range of options increases if the measuring device has one or more application packages.</p>
Frequency output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Configurable: end value frequency 2 to 10 000 Hz($f_{\max} = 12\,500\text{ Hz}$)
Damping	Configurable: 0 to 999.9 s
Pulse/pause ratio	1:1

Assignable measured variables	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Electronics temperature ■ Oscillation frequency 0 ■ Oscillation damping 0 ■ Signal asymmetry ■ Exciter current 0 <p> The range of options increases if the measuring device has one or more application packages.</p>
Switch output	
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Configurable: 0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	<ul style="list-style-type: none"> ■ Disable ■ On ■ Diagnostic behavior ■ Limit <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Totalizer 1-3 ■ Flow direction monitoring ■ Status <ul style="list-style-type: none"> ■ Partially filled pipe detection ■ Low flow cut off <p> The range of options increases if the measuring device has one or more application packages.</p>

Relay output

Function	Switch output
Version	Relay output, galvanically isolated
Switching behavior	Can be set to: <ul style="list-style-type: none"> ■ NO (normally open), factory setting ■ NC (normally closed)

Maximum switching capacity (passive)	<ul style="list-style-type: none"> ■ DC 30 V, 0.1 A ■ AC 30 V, 0.5 A
Assignable functions	<ul style="list-style-type: none"> ■ Disable ■ On ■ Diagnostic behavior ■ Limit <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Totalizer 1-3 ■ Flow direction monitoring ■ Status <ul style="list-style-type: none"> ■ Partially filled pipe detection ■ Low flow cut off <p> The range of options increases if the measuring device has one or more application packages.</p>

User-configurable input/output

One specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

Signal on alarm

Depending on the interface, failure information is displayed as follows:

PROFINET over Ethernet-APL

Device diagnostics	Diagnostics according to PROFINET PA Profile 4.02
---------------------------	---

Current output

Current output 4-20 mA	
Failure mode	Configurable: <ul style="list-style-type: none"> ■ 4 to 20 mA in accordance with NAMUR recommendation NE 43 ■ 4 to 20 mA in accordance with US ■ Min. value: 3.59 mA ■ Max. value: 22.5 mA ■ Definable value between: 3.59 to 22.5 mA ■ Actual value ■ Last valid value
Current output 4-20 mA	
Failure mode	Configurable: <ul style="list-style-type: none"> ■ Maximum alarm: 22 mA ■ Definable value between: 0 to 20.5 mA

Pulse/frequency/switch output

Pulse output	
Failure mode	Configurable: <ul style="list-style-type: none"> ■ Actual value ■ No pulses

Frequency output	
Failure mode	Configurable: <ul style="list-style-type: none"> Actual value 0 Hz Definable value between: 2 to 12 500 Hz
Switch output	
Failure mode	Configurable: <ul style="list-style-type: none"> Current status Open Closed

Relay output

Failure mode	Choose from: <ul style="list-style-type: none"> Current status Open Closed
--------------	---

Local display

Plain text display	With information on cause and remedial measures
Backlight	Red lighting indicates a device error.

 Status signal as per NAMUR recommendation NE 107



Interface/protocol

- Via digital communication:
 - PROFINET over Ethernet-APL
- Via service interface
 - Service interface CDI-RJ45
 - WLAN interface
- Plain text display
 - With information on cause and remedial actions

Web browser

Plain text display	With information on cause and remedial measures
--------------------	---

LEDs

Status information	<p>Status indicated by various LEDs</p> <p>The following information is displayed depending on the device version:</p> <ul style="list-style-type: none"> Supply voltage active Data transmission active Device alarm/error has occurred Network available Connection established PROFINET blinking feature <p> Diagnostic information via LEDs →  188</p>
--------------------	--

Low flow cut off


The switch points for low flow cut off are user-selectable.

Galvanic isolation	<p>The outputs are galvanically isolated:</p> <ul style="list-style-type: none"> ■ from the power supply ■ from one another ■ from the protective ground connection (PE)
--------------------	---

Protocol-specific data	Protocol	Application layer protocol for decentral device periphery and distributed automation, Version 2.43
	Communication type	Ethernet Advanced Physical Layer 10BASE-T1L
	Conformance Class	Conformance Class B (PA)
	Netload Class	PROFINET Netload Robustness Class 2 10 Mbit/s
	Data transfer	10 Mbit/s Full-duplex
	Cycle times	64 ms
	Polarity	Automatic correction of crossed "APL signal +" and "APL signal -" signal lines
	Media Redundancy Protocol (MRP)	Not possible (point-to-point connection to APL field switch)
	System redundancy support	System redundancy S2 (2 AR with 1 NAP)
	Device profile	PROFINET PA profile 4.02 (Application interface identifier API: 0x9700)
	Manufacturer ID	17
	Device type ID	0xA43B
	Device description files (GSD, DTM, FDI)	<p>Information and files available at:</p> <ul style="list-style-type: none"> ■ www.endress.com → Downloads area ■ www.profibus.com
	Supported connections	<ul style="list-style-type: none"> ■ 2x AR (IO Controller AR) ■ 2x AR (IO Supervisor Device AR connection allowed)
	Configuration options for measuring instrument	<ul style="list-style-type: none"> ■ DIP switches on the electronics module, for device name assignment (last part) ■ Asset management software (FieldCare, DeviceCare, Field Xpert) ■ Integrated Web server via Web browser and IP address ■ Device master file (GSD), can be read out via the integrated Web server of the measuring instrument. ■ Onsite operation
	Configuration of the device name	<ul style="list-style-type: none"> ■ DIP switches on the electronics module, for device name assignment (last part) ■ DCP protocol ■ Asset management software (FieldCare, DeviceCare, Field Xpert) ■ Integrated web server
	Supported functions	<ul style="list-style-type: none"> ■ Identification & Maintenance, simple device identifier via: <ul style="list-style-type: none"> ■ Control system ■ Nameplate ■ Measured value status The process variables are communicated with a measured value status ■ Blinking feature via the local display for simple device identification and assignment ■ Device operation via asset management software (e.g. FieldCare, DeviceCare, SIMATIC PDM with FDI package)
	System integration	<p>Information regarding system integration .</p> <ul style="list-style-type: none"> ■ Cyclic data transmission ■ Overview and description of the modules ■ Status coding ■ Factory setting

16.5 Power supply

Available device plugs →  38

Available device plugs →  39

Supply voltage	Order code for "Power supply"	Terminal voltage		Frequency range
	Option D	DC 24 V	±20%	–
	Option E	AC 100 to 240 V	–15 to 10%	50/60 Hz
	Option I	DC 24 V	±20%	–
		AC 100 to 240 V	–15 to 10%	50/60 Hz

Power consumption **Transmitter**
Max. 10 W (active power)

switch-on current	Max. 36 A (<5 ms) as per NAMUR Recommendation NE 21
--------------------------	---

Current consumption **Transmitter**

- Max. 400 mA (24 V)
- Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)

Power supply failure

- Totalizers stop at the last value measured.
- Depending on the device version, the configuration is retained in the device memory or in the plug-in memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

Overcurrent protection element

The device must be operated with a dedicated circuit breaker, as it does not have an ON/OFF switch of its own.

- The circuit breaker must be easy to reach and labeled accordingly.
- Permitted nominal current of the circuit breaker: 2 A up to maximum 10 A.

Electrical connection

- →  41
- →  50

Potential equalization →  57

Terminals

Spring-loaded terminals: Suitable for strands and strands with ferrules.
Conductor cross-section 0.2 to 2.5 mm² (24 to 12 AWG).


Cable entries

- Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
 - NPT ½"
 - G ½"
 - M20
- Device plug for connecting cable: M12



A device plug is always used for the device version with the order code for "Sensor connection housing", option **C** "Ultra-compact, hygienic, stainless".

Cable specification

→  34

Overvoltage protection	Mains voltage fluctuations	→  287
	Overvoltage category	Overvoltage category II
	Short-term, temporary overvoltage	Between cable and ground up to 1200 V, for max. 5 s
	Long-term, temporary overvoltage	Between cable and ground up to 500 V

16.6 Performance characteristics

Reference operating conditions	<div><ul style="list-style-type: none">■ Error limits based on ISO 11631■ Water<ul style="list-style-type: none">■ +15 to +45 °C (+59 to +113 °F)■ 2 to 6 bar (29 to 87 psi)■ Data as indicated in the calibration protocol■ Accuracy based on accredited calibration rigs according to ISO 17025<div> To obtain measured errors, use the <i>Applicator</i> sizing tool →  276</div></div>
--------------------------------	--

Maximum measurement error	o.r. = of reading; 1 g/cm³ = 1 kg/l; T = medium temperature
---------------------------	---

Base accuracy

 Design fundamentals →  291

Mass flow and volume flow (liquids)

±0.10 % o.r.

Density (liquids)

Under reference conditions	Standard density calibration ¹⁾	Wide-range Density specification ^{2) 3)}
[g/cm³]	[g/cm³]	[g/cm³]
±0.0005	±0.01	±0.002

1) Valid over the entire temperature and density range

2) Valid range for special density calibration: 0 to 2 g/cm³, +10 to +80 °C (+50 to +176 °F)

3) order code for "Application package", option EE "Special density"

Temperature

±0.5 °C ± 0.005 · T °C (±0.9 °F ± 0.003 · (T – 32) °F)

Zero point stability

DN		Zero point stability	
[mm]	[in]	[kg/h]	[lb/min]
8	³ / ₈	0.20	0.007
15	¹ / ₂	0.65	0.024
25	1	1.80	0.066

DN		Zero point stability	
[mm]	[in]	[kg/h]	[lb/min]
40	1½	4.50	0.165
50	2	7.0	0.257

Flow values

Flow values as turndown parameters depending on nominal diameter.

SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
8	2 000	200	100	40	20	4
15	6 500	650	325	130	65	13
25	18 000	1 800	900	360	180	36
40	45 000	4 500	2 250	900	450	90
50	70 000	7 000	3 500	1 400	700	140

US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
$\frac{3}{8}$	73.50	7.350	3.675	1.470	0.735	0.147
$\frac{1}{2}$	238.9	23.89	11.95	4.778	2.389	0.478
1	661.5	66.15	33.08	13.23	6.615	1.323
1½	1 654	165.4	82.70	33.08	16.54	3.308
2	2 573	257.3	128.7	51.46	25.73	5.146

Accuracy of outputs

The outputs have the following base accuracy specifications:

Current output

Accuracy	±5 µA
----------	-------

Pulse/frequency output

o.r. = of reading

Accuracy	Max. ±50 ppm o.r. (over the entire ambient temperature range)
----------	---

Repeatability

o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature

Base repeatability

 Design fundamentals →  291

Mass flow and volume flow (liquids)

±0.05 % o.r.

Density (liquids)


±0.00025 g/cm³


Temperature

±0.25 °C ± 0.0025 · T °C (±0.45 °F ± 0.0015 · (T-32) °F)

Response time	The response time depends on the configuration (damping).
---------------	---

Influence of ambient temperature	Current output	
	Temperature coefficient	Max. 1 µA/°C
	Pulse/frequency output	
	Temperature coefficient	No additional effect. Included in accuracy.

Influence of medium temperature	Mass flow	
	o.f.s. = of full scale value	
	If there is a difference between the temperature during zero adjustment and the process temperature, the additional measurement error of the sensors is typically ±0.0002 %o.f.s./°C (±0.0001 % o. f.s./°F).	
	The influence is reduced when the zero adjustment is performed at process temperature.	
	Density	
	If there is a difference between the density calibration temperature and the process temperature, the measurement error of the sensors is typically ±0.0001 g/cm ³ /°C (±0.00005 g/cm ³ /°F). Field density adjustment is possible.	
	Wide-range density specification (special density calibration)	
	If the process temperature is outside the valid range (→  288) the measurement error is ±0.0001 g/cm ³ /°C (±0.00005 g/cm ³ /°F)	

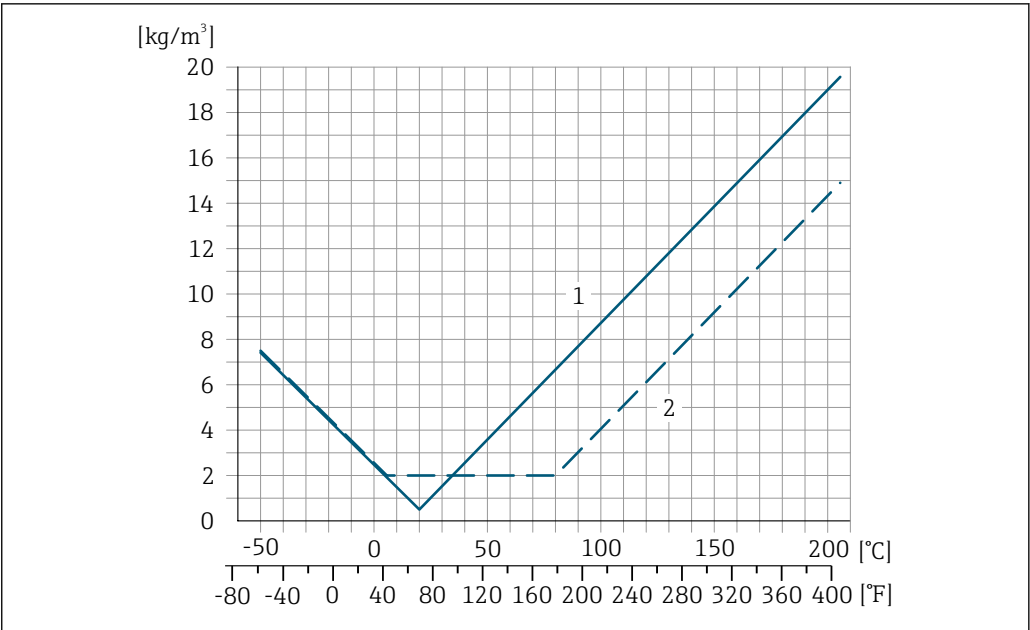

A0016610

- 1 Field density adjustment, for example at +20 °C (+68 °F)
- 2 Special density calibration

Temperature

$$\pm 0.005 \cdot T \text{ °C } (\pm 0.005 \cdot (T - 32) \text{ °F})$$

Influence of medium pressure

The following shows how the process pressure (gauge pressure) affects the accuracy of the mass flow.

o.r. = of reading



It is possible to compensate for the effect by:

- Reading in the current pressure measured value via the current input or a digital input.
- Specifying a fixed value for the pressure in the device parameters.



Operating Instructions .

DN		[% o.r./bar]	[% o.r./psi]
[mm]	[in]		
8	3/8	-0.002	-0.0001
15	1/2	-0.006	-0.0004
25	1	-0.005	-0.0003
40	1 1/2	-0.007	-0.0005
50	2	-0.006	-0.0004

Design fundamentals

o.r. = of reading, o.f.s. = of full scale value

BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.

MeasValue = measured value; ZeroPoint = zero point stability


Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ <small>A0021332</small>	$\pm \text{BaseAccu}$ <small>A0021339</small>
$< \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ <small>A0021333</small>	$\pm \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$ <small>A0021334</small>

Calculation of the maximum repeatability as a function of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$ <small>A0021335</small>	$\pm \text{BaseRepeat}$ <small>A0021340</small>
$< \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$ <small>A0021336</small>	$\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$ <small>A0021337</small>

Example of maximum measurement error

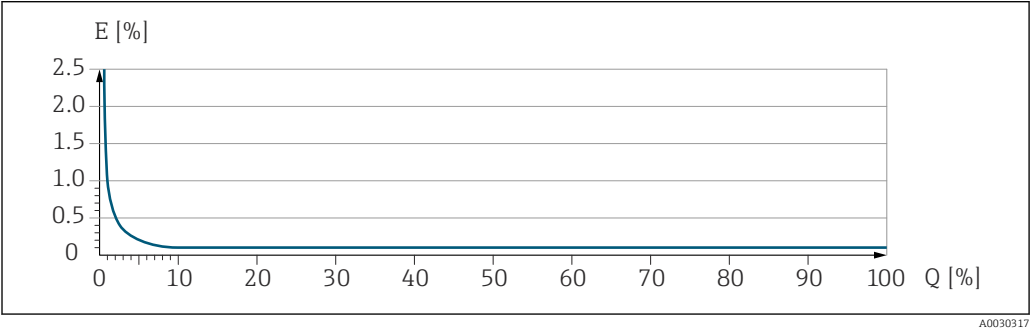

E Maximum measurement error in % o.r. (example)
Q Flow rate in % of maximum full scale value

16.7 Installation

Installation requirements



→ 21

16.8 Environment

Ambient temperature range

→ 24

Temperature tables

-  Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.
-  For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Storage temperature

−50 to +80 °C (−58 to +176 °F)

Climate class	DIN EN 60068-2-38 (test Z/AD)
Relative humidity	The device is suitable for use in outdoor and indoor areas with a relative humidity of 4 to 95%.
Operating height	According to EN 61010-1 ≤ 2 000 m (6 562 ft)
Degree of protection	<p>Transmitter</p> <ul style="list-style-type: none"> ■ IP66/67, Type 4X enclosure, suitable for pollution degree 4 ■ When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2 ■ Display module: IP20, Type 1 enclosure, suitable for pollution degree 2 <p>Sensor</p> <ul style="list-style-type: none"> ■ IP66/67, Type 4X enclosure, suitable for pollution degree 4 ■ When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2 <p><i>Optional</i></p> <p>Order code for "Sensor options", option CM "IP69"</p> <p>External WLAN antenna</p> <p>IP66/67, type 4X enclosure</p>
Vibration resistance and shock resistance	<p>Sinusoidal vibration similar to IEC 60068-2-6</p> <p>Sensor</p> <ul style="list-style-type: none"> ■ 2 to 8.4 Hz, 3.5 mm peak ■ 8.4 to 2 000 Hz, 1 g peak <p>Transmitter</p> <ul style="list-style-type: none"> ■ 2 to 8.4 Hz, 7.5 mm peak ■ 8.4 to 2 000 Hz, 2 g peak <p>Broadband random vibration similar to IEC 60068-2-64</p> <p>Sensor</p> <ul style="list-style-type: none"> ■ 10 to 200 Hz, 0.003 g²/Hz ■ 200 to 2 000 Hz, 0.001 g²/Hz ■ Total: 1.54 g rms <p>Transmitter</p> <ul style="list-style-type: none"> ■ 10 to 200 Hz, 0.01 g²/Hz ■ 200 to 2 000 Hz, 0.003 g²/Hz ■ Total: 2.70 g rms <p>Half-sine shocks similar to IEC 60068-2-27</p> <ul style="list-style-type: none"> ■ Sensor 6 ms 30 g ■ Transmitter 6 ms 50 g <p>Rough handling shocks similar to IEC 60068-2-31</p>


Mechanical load	Transmitter housing and sensor connection housing: <ul style="list-style-type: none">■ Protect against mechanical effects, such as shock or impact■ Do not use as a ladder or climbing aid
Electromagnetic compatibility (EMC)	<div><div></div>Details are provided in the Declaration of Conformity.</div> <div><div></div>This unit is not intended for use in residential environments and cannot guarantee adequate protection of the radio reception in such environments.</div>

16.9 Process

Medium temperature range

Standard version	−50 to +150 °C (−58 to +302 °F)	Order code for "Measuring tube mat., wetted surface", option BB, BC, BD
Extended temperature version	−50 to +205 °C (−58 to +401 °F)	Order code for "Measuring tube mat., wetted surface", option TD, TG

Dependency of ambient temperature on medium temperature

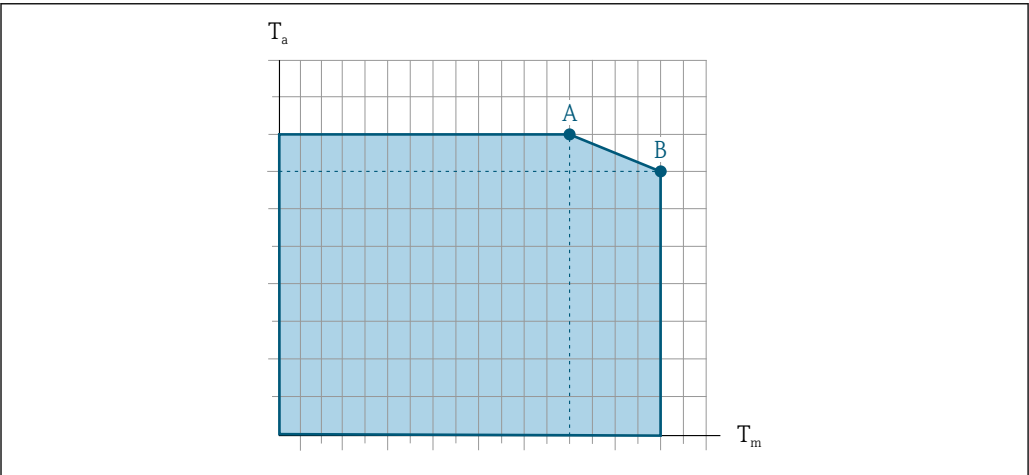

42 Exemplary representation, values in the table below.

T_a Ambient temperature
 T_m Medium temperature
A Maximum permitted medium temperature T_m at $T_{a\,max} = 60\text{ °C}$ (140 °F); higher medium temperatures T_m require a reduction in the ambient temperature T_a
B Maximum permitted ambient temperature T_a for the maximum specified medium temperature T_m of the sensor

Values for devices that are used in the hazardous area:
Separate Ex documentation (XA) for the device → 308.

Version ¹⁾	Not insulated				Insulated			
	A		B		A		B	
	T_a	T_m	T_a	T_m	T_a	T_m	T_a	T_m
Standard version	60 °C (140 °F)	150 °C (302 °F)	–	–	60 °C (140 °F)	90 °C (194 °F)	45 °C (113 °F)	150 °C (302 °F)
Extended temperature version	60 °C (140 °F)	205 °C (401 °F)	–	–	60 °C (140 °F)	150 °C (302 °F)	50 °C (122 °F)	205 °C (401 °F)

1) The values apply to Promass P 500 - digital and Promass P 500.

Medium density 0 to 5 000 kg/m³ (0 to 312 lb/cf)

Pressure/temperature ratings



For an overview of the pressure/temperature ratings for the process connections, see the Technical Information

Sensor housing

The sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.



If a measuring tube fails (e.g. due to process characteristics like corrosive or abrasive fluids), the fluid will initially be contained by the sensor housing.

If the sensor is to be purged with gas (gas detection), it should be equipped with purge connections.



Do not open the purge connections unless the containment can be filled immediately with a dry, inert gas. Use only low pressure to purge.

Maximum pressure: 5 bar (72.5 psi)

Burst pressure of the sensor housing

The following sensor housing burst pressures are only valid for standard devices and/or devices equipped with closed purge connections (not opened/as delivered).

If a device fitted with purge connections (order code for "Sensor option", option CH "Purge connection") is connected to the purge system, the maximum pressure is determined by the purge system itself or by the device, depending on which component has the lower pressure classification.

The sensor housing burst pressure refers to a typical internal pressure which is reached prior to mechanical failure of the sensor housing and which was determined during type testing. The corresponding type test declaration can be ordered with the device (order code for "Additional approval", option LN "Sensor housing burst pressure, type test").

DN		Sensor housing burst pressure	
[mm]	[in]	[bar]	[psi]
8	$\frac{3}{8}$	190	2 755
15	$\frac{1}{2}$	175	2 538
25	1	165	2 392
40	$1\frac{1}{2}$	152	2 204
50	2	103	1 494



For information on the dimensions: see the "Mechanical construction" section of the "Technical Information" document

Internal cleaning








- CIP cleaning
- SIP cleaning
- Cleaning with pigs

Options


Oil- and grease-free version for wetted parts, without declaration

Order code for "Service", option HA ²⁾

2) Cleaning only refers to the measuring instrument. Any accessories that have been supplied are not cleaned.

Flow limit	<p>Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.</p> <p> For an overview of the full scale values for the measuring range, see the "Measuring range" section →  279</p> <ul style="list-style-type: none"> ■ The minimum recommended full scale value is approx. 1/20 of the maximum full scale value ■ For the most common applications, 20 to 50 % of the maximum full scale value can be considered ideal ■ A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s). <p> To calculate the flow limit, use the <i>Applicator</i> sizing tool →  276</p>
Pressure loss	<p> To calculate the pressure loss, use the <i>Applicator</i> sizing tool →  276</p>
System pressure	→  24

16.10 Mechanical construction

Design, dimensions	<p> For the dimensions and installed lengths of the device, see the "Technical Information" document, "Mechanical construction" section</p>
Weight	<p>All values (weight exclusive of packaging material) refer to devices with EN/DIN PN 40 flanges.</p> <p>Transmitter</p> <ul style="list-style-type: none"> ■ Proline 500 – digital polycarbonate: 1.4 kg (3.1 lbs) ■ Proline 500 – digital aluminum: 2.4 kg (5.3 lbs) ■ Proline 500 aluminum: 6.5 kg (14.3 lbs) <p>Sensor</p> <p>Sensor with aluminum connection housing version:</p>

Weight in SI units

DN [mm]	Weight [kg]
8	12
15	14
25	20
40	36
50	59

Weight in US units

DN [in]	Weight [lbs]
3/8	26
1/2	31
1	44

DN [in]	Weight [lbs]
1½	79
2	130

Materials

Transmitter housing

Housing of Proline 500 – digital transmitter

Order code for "Transmitter housing":

- Option **A** "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **D** "Polycarbonate": polycarbonate

Housing of Proline 500 transmitter

Order code for "Transmitter housing":

Option **A** "Aluminum coated": aluminum, AlSi10Mg, coated

Window material

Order code for "Transmitter housing":

- Option **A** "Aluminum, coated": glass
- Option **D** "Polycarbonate": plastic

Fixing components for pipe mounting


- Screws, threaded bolts, washers, nuts: stainless A2 (chrome-nickel steel)
- Metal plates: stainless steel, 1.4301 (304)

Sensor connection housing

Order code for "Sensor connection housing":

- Option **A** "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **B** "Stainless":
 - Stainless steel 1.4301 (304)
 - Optional: Order code for "Sensor feature", option **CC** "Hygienic version, for maximum corrosion resistance": stainless steel, 1.4404 (316L)
- Option **C** "Ultra-compact, stainless":
 - Stainless steel 1.4301 (304)
 - Optional: Order code for "Sensor feature", option **CC** "Hygienic version, for maximum corrosion resistance": stainless steel, 1.4404 (316L)

Cable entries/cable glands

Cable entries and adapters	Material
Cable gland M20 × 1.5	Plastic
<ul style="list-style-type: none"> ■ Adapter for cable entry with female thread G ½" ■ Adapter for cable entry with female thread NPT ½" <p> Only available for certain device versions:</p> <ul style="list-style-type: none"> ■ Order code for "Transmitter housing": <ul style="list-style-type: none"> ■ Option A "Aluminum, coated" ■ Option D "Polycarbonate" ■ Order code for "Sensor connection housing": <ul style="list-style-type: none"> ■ Proline 500 – digital: <ul style="list-style-type: none"> Option A "Aluminum coated" Option B "Stainless" ■ Proline 500: <ul style="list-style-type: none"> Option B "Stainless" 	Nickel-plated brass

Connecting cable

 UV radiation can impair the cable outer sheath. Protect the cable from exposure to sun as much as possible.

Connecting cable for sensor - Proline 500 – digital transmitter

PVC cable with copper shield

Connecting cable for sensor - Proline 500 transmitter

- PVC cable with copper shield
- Devices with order code for "Test, certificate", option **JQ**: PUR with copper shield

Sensor housing



- Acid and alkali-resistant outer surface
- Stainless steel 1.4301 (304)

Measuring tubes

Stainless steel, 1.4435 BN2 (316L)

Process connections

- Flanges similar to EN 1092-1 (DIN 2501) / similar to ASME B16.5 / similar to JIS B2220:
Stainless steel, 1.4404 (F316/F316L)
- All other process connections:
Stainless steel, 1.4435 BN2 (316L)

 Available process connections →  299

Seals

Welded process connections without internal seals

Accessories

Protective cover

Stainless steel, 1.4404 (316L)

External WLAN antenna

- Antenna: ASA plastic (acrylonitrile styrene acrylate) and nickel-plated brass
- Adapter: Stainless steel and nickel-plated brass
- Cable: Polyethylene
- Plug: Nickel-plated brass
- Angle bracket: Stainless steel

Process connections

- Fixed flange connections:
 - EN 1092-1 (DIN 2501) flange
 - EN 1092-1 (DIN 2512N) flange
 - ASME B16.5 flange
 - JIS B2220 flange
 - DIN 11864-2 Form A flange, DIN 11866 series A, flange with notch
 - BBS flange small (sterile orbital), DIN 11866 series A, female
 - BBS flange small (sterile orbital), DIN 11866 series B, female
- Clamp connections:
 - Tri-Clamp (OD tubes), DIN 11866 series C
 - DIN 11864-3 Form A clamp, DIN 11866 series A, with notch
 - DIN 32676 clamp, DIN 11866 series A
 - ISO 2852 clamp, ISO 2037
 - ISO 2852 clamp, DIN 11866 series B
 - BBS Quick-Connect (sterile orbital), DIN 11866 series A, female
 - BBS Quick-Connect (sterile orbital), DIN 11866 series B, female
 - Neumo BioConnect clamp, DIN 11866 series A, clamp form R
- Eccentric clamp connections:
 - Eccen. Tri-Clamp, DIN 11866 series C
 - DIN 11864-3 Form A clamp, DIN 11866 series A, with notch
 - DIN 32676 clamp, DIN 11866 series A
 - ISO 2852 clamp, DIN 11866 series B
 - BBS Quick-Connect (sterile orbital), DIN 11866 series A, female
 - BBS Quick-Connect (sterile orbital), DIN 11866 series B, female
 - Neumo BioConnect clamp, DIN 11866 series A, clamp form R
- Thread:
 - DIN 11851 thread, DIN 11866 series A
 - SMS 1145 thread
 - ISO 2853 thread, ISO 2037
 - DIN 11864-1 Form A thread, DIN 11866 series A
 - BBS thread (sterile orbital), DIN 11866 series A
 - BBS thread (sterile orbital), DIN 11866 series B



Process connection materials → 298

Surface roughness

All data relate to parts in contact with medium.

The following surface roughness categories can be ordered:

Category	Method	Option(s)/Order code "Measuring tube mat., wetted surface"
$Ra \leq 0.76 \mu m$ (30 μin) ¹⁾	Mechanically polished	BB, TD
$Ra \leq 0.38 \mu m$ (15 μin) ¹⁾	Mechanically and electropolished	BC, TG

1) Ra according to ISO 21920

16.11 User interface

Languages

Can be operated in the following languages:



- Via local operation
 - English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Vietnamese, Czech, Swedish
- Via web browser
 - English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Vietnamese, Czech, Swedish
- Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese


Onsite operation

Via display module


Equipment level:

- Order code for "Display; operation", option F "4-line, illuminated, graphic display; touch control"
- Order code for "Display; operation", option G "4-line, illuminated, graphic display; touch control + WLAN"

 Information about WLAN interface →  88

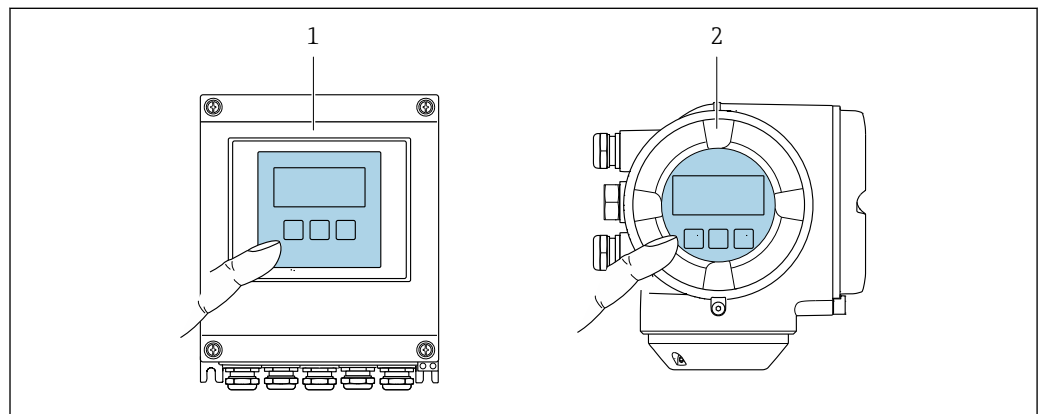

A0028232

 

 
 43 Operation with touch control

- 1 Proline 500 – digital
- 2 Proline 500


Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured


Operating elements

- External operation via touch control (3 optical keys) without opening the housing: , , 
- Operating elements also accessible in the various zones of the hazardous area

Remote operation




→  87

Service interface

→  87

Supported operating tools

Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with web browser	<ul style="list-style-type: none"> Service interface CDI-RJ45 WLAN interface 	Special Documentation for device →  309
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	<ul style="list-style-type: none"> Service interface CDI-RJ45 WLAN interface Fieldbus protocol 	→  276
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	<ul style="list-style-type: none"> Service interface CDI-RJ45 WLAN interface Fieldbus protocol 	→  276
Field Xpert	SMT70/77/50	<ul style="list-style-type: none"> All fieldbus protocols WLAN interface Bluetooth Service interface CDI-RJ45 	Operating Instructions BA01202S Device description files: Use update function of handheld terminal



Other operating tools based on FDT technology with a device driver such as DTM/iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:

- Emersons TREX → www.emerson.com
- Field Device Manager (FDM) from Honeywell → www.process.honeywell.com
- FieldMate from Yokogawa → www.yokogawa.com
- PACTWare → www.pactware.com

The related device description files are available: www.endress.com → Download Area


Web server


The integrated web server can be used to operate and configure the device via a web browser via Ethernet-APL, service interface (CDI-RJ45) or via WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is displayed and can be used to monitor device health. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; Operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

Supported functions


Data exchange between the operating unit (such as a notebook, for example,) and measuring instrument:

- Upload the configuration from the measuring instrument (XML format, configuration backup)
- Save the configuration to the measuring instrument (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file or PDF file, document the measuring point configuration)
- Export the Heartbeat Technology verification report (PDF file, only available with the **Heartbeat Verification** →  306 application package)

- Flash firmware version for device firmware upgrade, for example
- Download driver for system integration
- Visualize up to 1000 saved measured values (only available with the **Extended HistoROM** application package→  306)

HistoROM data management

The measuring instrument features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.

 When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	HistoROM backup	T-DAT	S-DAT
Available data	<ul style="list-style-type: none">■ Event logbook, e.g. diagnostic events■ Parameter data record backup■ Device firmware package■ Driver for system integration for exporting via web server, e.g.: GSD for PROFINET	<ul style="list-style-type: none">■ Measured value logging ("Extended HistoROM" order option)■ Current parameter data record (used by firmware at run time)■ Indicator (minimum/maximum values)■ Totalizer value	<ul style="list-style-type: none">■ Sensor data: e.g. nominal diameter■ Serial number■ Calibration data■ Device configuration (e.g. SW options, fixed I/O or multi I/O)
Storage location	Fixed on the user interface PC board in the connection compartment	Can be plugged into the user interface PC board in the connection compartment	In the sensor plug in the transmitter neck part

Data backup

Automatic

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors
- If exchanging the electronics module (e.g. I/O electronics module): Once the electronics module has been replaced, the software of the module is compared against the current device firmware. The module software is upgraded or downgraded where necessary. The electronics module is available for use immediately afterwards and no compatibility problems occur.

Manual

- Additional parameter data record (complete parameter settings) in the integrated device memory HistoROM backup for:
- Data backup function
Backup and subsequent restoration of a device configuration in the device memory HistoROM backup
 - Data comparison function
Comparison of the current device configuration with the device configuration saved in the device memory HistoROM backup

Data transmission**Manual**

- Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)
- Transmission of the drivers for system integration via web server, e.g.: GSD for PROFINET

Event list**Automatic**

- Chronological display of up to 20 event messages in the events list
- If the **Extended HistoROM** application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

Data logging**Manual**

If the **Extended HistoROM** application package (order option) is enabled:

- Recording of 1 to 4 channels of up to 1 000 measured values (up to 250 measured values per channel)
- User configurable recording interval
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or web server

16.12 Certificates and approvals

Current certificates and approvals for the product are available at www.endress.com on the relevant product page:

1. Select the product using the filters and search field.
2. Open the product page.
3. Select **Downloads**.

CE mark

The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

UKCA marking

The device meets the legal requirements of the applicable UK regulations (Statutory Instruments). These are listed in the UKCA Declaration of Conformity along with the designated standards. By selecting the order option for UKCA marking, Endress+Hauser confirms a successful evaluation and testing of the device by affixing the UKCA mark.

Contact address Endress+Hauser UK:


Endress+Hauser Ltd.

Floats Road

Manchester M23 9NF

United Kingdom

www.uk.endress.com

Hygienic compatibility	<ul style="list-style-type: none"> ■ 3-A approval <ul style="list-style-type: none"> ■ Only measuring instruments with the order code for "Additional approval", option LP "3A" have 3-A approval. ■ The 3-A approval refers to the measuring instrument. ■ When installing the measuring instrument, ensure that no liquid can accumulate on the outside of the measuring instrument. A remote display module must be installed in accordance with the 3-A Standard. ■ Accessories (e.g. heating jacket, weather protection cover, wall holder unit) must be installed in accordance with the 3-A Standard. Each accessory can be cleaned. Disassembly may be necessary under certain circumstances. ■ EHEDG-tested (Type EL Class I) <ul style="list-style-type: none"> Only devices with the order code for "Additional approval", option LT "EHEDG" have been tested and meet the requirements of the EHEDG. To meet the requirements for EHEDG certification, the device must be used with process connections in accordance with the EHEDG position paper entitled "Easy cleanable Pipe couplings and Process connections" (www.ehedg.org). To meet the requirements for EHEDG certification, the orientation of the device must ensure drainability. Test criteria for cleanability according to EHEDG is a flow velocity of 1.5 m/s in the process line. This speed must be ensured for EHEDG-compliant cleaning. ■ FDA CFR 21 <ul style="list-style-type: none"> ■ Food Contact Materials Regulation (EC) 1935/2004 ■ Food Contact Materials Regulation GB 4806 ■ The requirements of the Food Contact Material regulations must be observed when selecting the material versions. <p> Observe special installation instructions</p>
------------------------	--



Pharmaceutical compatibility	<ul style="list-style-type: none"> ■ FDA 21 CFR 177 ■ USP <87> ■ USP <88> Class VI 121 °C ■ TSE/BSE Certificate of Suitability ■ cGMP <p>Devices with the order code for "Test, certificate", option JG "Conformity with cGMP-derived requirements, declaration" comply with the requirements of cGMP with regard to the surfaces of parts in contact with the medium, design, FDA 21 CFR material conformity, USP Class VI tests and TSE/BSE conformity.</p> <p>A serial number-specific declaration is generated.</p>
------------------------------	--

PROFINET over Ethernet-APL certification

PROFINET interface

The measuring instrument is certified and registered by the PROFIBUS Nutzerorganisation e.V. (PNO). The measuring system meets all the requirements of the following specifications:

- Certified according to:
 - Test specification for PROFINET devices
 - PROFINET PA Profile 4.02
 - PROFINET Netload Robustness Class 2 10 Mbit/s
 - APL conformance test
- The device can also be operated with certified devices of other manufacturers (interoperability)
- The device supports PROFINET S2 system redundancy.



Pressure Equipment Directive	<ul style="list-style-type: none"> ■ With the marking <ul style="list-style-type: none"> a) PED/G1/x (x = category) or b) PESR/G1/x (x = category) on the sensor nameplate, Endress+Hauser confirms compliance with the "Essential Safety Requirements" <ul style="list-style-type: none"> a) specified in Annex I of the Pressure Equipment Directive 2014/68/EU or b) Schedule 2 of Statutory Instruments 2016 No. 1105. ■ Devices not bearing this marking (without PED or PESR) are designed and manufactured according to sound engineering practice. They meet the requirements of <ul style="list-style-type: none"> a) Art. 4, Section 3 of the Pressure Equipment Directive 2014/68/EU or b) Part 1, Section 8 of Statutory Instruments 2016 No. 1105. The scope of application is indicated <ul style="list-style-type: none"> a) in diagrams 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU or b) in Schedule 3, Section 2 of Statutory Instruments 2016 No. 1105.
Radio approval	<p>The measuring instrument has radio approval.</p> <p> For detailed information on the radio approval, see the Special Documentation →  309</p>
Additional certification	<p>CRN approval</p> <p>Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.</p> <p>Tests and certificates</p> <ul style="list-style-type: none"> ■ EN10204-3.1 material certificate, wetted parts and sensor housing (order code for "Test, certificate", option JA) ■ Pressure test, internal process, test report (order code for "Test, certificate", option JB) ■ Surface roughness test ISO4287/Ra, (wetted parts), test report (option JE) ■ Delta-ferrite test, internal procedure (wetted parts), test report (option JF) ■ Compliance with requirements derived from cGMP, Declaration (option JG)
External standards and guidelines	<ul style="list-style-type: none"> ■ EN 60529 Degrees of protection provided by enclosure (IP code) ■ IEC/EN 60068-2-6 Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal). ■ IEC/EN 60068-2-31 Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices. ■ EN 61010-1 Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements ■ GB 30439.5 Safety requirements for industrial automation products - Part 5: Flowmeter safety requirements ■ EN 61326-1/-2-3 EMC requirements for electrical equipment for measurement, control and laboratory use ■ NAMUR NE 21 Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment ■ NAMUR NE 32 Data retention in the event of a power failure in field and control instruments with microprocessors


- NAMUR NE 43
Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.
- NAMUR NE 53
Software of field devices and signal-processing devices with digital electronics
- NAMUR NE 80
The application of the pressure equipment directive to process control devices
- NAMUR NE 105
Specifications for integrating fieldbus devices in engineering tools for field devices
- NAMUR NE 107
Self-monitoring and diagnostics of field devices
- NAMUR NE 131
Requirements for field devices for standard applications
- NAMUR NE 132
Coriolis mass meter
- ETSI EN 300 328
Guidelines for 2.4 GHz radio components.
- EN 301489
Electromagnetic compatibility and radio spectrum matters (ERM).

16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

 Detailed information on the application packages:
Special Documentation →  308

Diagnostic functionality	<p>Order code for "Application package", option EA "Extended HistoROM"</p> <p>Comprises extended functions concerning the event log and the activation of the measured value memory.</p> <p>Event log: Memory volume is extended from 20 message entries (standard version) to up to 100 entries.</p> <p>Data logging (line recorder):</p> <ul style="list-style-type: none"> ■ Memory capacity for up to 1000 measured values is activated. ■ 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user. ■ Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server. <p> For detailed information, see the Operating Instructions for the device.</p>
Heartbeat Technology	Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

Heartbeat Verification

Meets the requirement for traceable verification in accordance with DIN ISO 9001:2015 Clause 7.6 a) "Control of monitoring and measuring equipment".

- Functional testing in the installed state without interrupting the process.
- Traceable verification results on request, including a report.
- Simple testing process via local operation or other operating interfaces.
- Clear measuring point assessment (pass/fail) with high total test coverage within the framework of manufacturer specifications.
- Extension of calibration intervals according to operator's risk evaluation.

Heartbeat Monitoring

Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:

- Draw conclusions - using these data and other information - about the impact the process influences (e.g. corrosion, abrasion, deposit buildup etc.) have on measuring performance over time.
- Schedule servicing in time.
- Monitor the process or product quality, e.g. gas pockets.



Detailed information on Heartbeat Technology:
Special Documentation → 308

Concentration measurement

Order code for "Application package", option ED "Concentration"

Calculation and outputting of fluid concentrations.

The measured density is converted to the concentration of a substance of a binary mixture using the "Concentration" application package:

- Choice of predefined fluids (e.g. various sugar solutions, acids, alkalis, salts, ethanol etc.).
- Common or user-defined units (°Brix, °Plato, % mass, % volume, mol/l etc.) for standard applications.
- Concentration calculation from user-defined tables.



For detailed information, see the Special Documentation for the device.

Special density

Order code for "Application package", option EE "Special density"

Many applications use density as a key measured value for monitoring quality or controlling processes. The device measures the density of the fluid as standard and makes this value available to the control system.

The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.

The following information can be found in the calibration certificate supplied:

- Density performance in air
- Density performance in liquids with different density
- Density performance in water with different temperatures



For detailed information, see the Operating Instructions for the device.

16.14 Accessories

Overview of accessories available to order → 274

16.15 Documentation



For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

Standard documentation

Brief Operating Instructions

Brief Operating Instructions for the sensor

Measuring instrument	Documentation code
Proline Promass P	KA01286D

Brief operating instructions for transmitter

Measuring instrument	Documentation code
Proline 500	KA01520D
Proline 500 – digital	KA01521D

Technical information

Measuring instrument	Documentation code
Promass P 500	TI01286D

Description of Device Parameters

Measuring instrument	Documentation code
Promass 500	GP01173D

Device-dependent additional documentation

Safety instructions

Safety instructions for electrical equipment for hazardous areas.



Contents	Documentation code Measuring instrument
ATEX/IECEX Ex ia	XA01473D
ATEX/IECEX Ex ec	XA01474D
cCSAus IS	XA01475D
cCSAus Ex ia	XA01509D
cCSAus Ex ec	XA01510D
EAC Ex ia	XA01658D
EAC Ex ec	XA01659D
JPN Ex ia	XA01780D
KCs Ex ia	XA03287D
INMETRO Ex ia	XA01476D
INMETRO Ex ec	XA01477D
NEPSI Ex ia	XA01478D

Contents	Documentation code
	Measuring instrument
NEPSI Ex nA	XA01479D
UKEX Ex ia	XA02570D
UKEX Ex ec	XA02572D

Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
Web server	SD02769D
Heartbeat Technology	SD02732D
Concentration measurement	SD02736D
Gas fraction handler	SD02584D

Installation Instructions

Contents	Note
Installation instructions for spare part sets and accessories	<ul style="list-style-type: none"> Access the overview of all the available spare part sets via <i>Device Viewer</i> →  272 Accessories available for order with Installation Instructions →  274

Index

0 ... 9	
3-A approval	304
A	
Access authorization to parameters	
Read access	78
Write access	78
Access code	78
Incorrect input	78
Adapting the diagnostic behavior	197
Additional certification	305
Ambient conditions	
Mechanical load	294
Operating height	293
Relative humidity	293
Storage temperature	292
Vibration resistance and shock resistance	293
Ambient temperature	
Influence	290
Ambient temperature range	293
Analog Output module	101
Application	278
Application packages	306
Approvals	303
Attaching the connecting cable	
Proline 500 transmitter	53
B	
Binary input module	97
Binary output module	102
C	
Cable entries	
Technical data	287
Cable entry	
Degree of protection	64
CE mark	10, 303
Certificates	303
cGMP	304
Check	
Connection	64
Received goods	15
Checklist	
Post-connection check	64
Post-installation check	33
CIP cleaning	295
Climate class	293
Commissioning	107
Advanced settings	143
Configuring the device	108
Connecting the connecting cable	
Proline 500 – digital transmitter	45
Proline 500 terminal assignment	50
Sensor connection housing, Proline 500	50
Sensor connection housing, Proline 500 - digital	41
Terminal assignment of Proline 500 - digital	41
Connecting the device	
Proline 500	50
Proline 500 – digital	41
Connecting the signal cable/supply voltage cable	
Proline 500 – digital transmitter	46
Connecting the signal cables	54
Connecting the supply voltage cables	54
Connection	
see Electrical connection	
Connection cable	34
Connection preparations	40
Connection tool	34
Context menu	
Calling up	74
Closing	74
Explanation	74
Current consumption	287
Cyclic data transmission	94
D	
Declaration of Conformity	10
Defining the access code	166, 167
Degree of protection	64, 293
Design	
Measuring device	13
Design fundamentals	
Measurement error	291
Repeatability	291
Device	
Configuring	108
Preparing for electrical connection	40
Device components	13
Device description files	92
Device locking, status	170
Device master file	
GSD	92
Device name	
Sensor	18
Transmitter	16
Device repair	272
Device revision	92
Device type ID	92
Device Viewer	272
DeviceCare	91
Device description file	92
Diagnostic behavior	
Explanation	193
Symbols	193
Diagnostic information	
Design, description	193, 196
DeviceCare	195
FieldCare	195
LED	188
Local display	192
Overview	198
Remedial measures	198

Web browser	194
Diagnostic list	265
Diagnostic message	192
Diagnostics	
Symbols	192
DIP switch	
see Write protection switch	
Direct access	76
Disabling write protection	166
Display	
see Local display	
Display area	
For operational display	69
In the navigation view	70
Display values	
For locking status	170
Displaying the measured value history	179
Disposal	273
Document	
Function	6
Symbols	6
Document function	6
Documentation	308
Down pipe	22
E	
Editing view	72
Input screen	73
Using operating elements	72, 73
EHEDG-tested	304
Electrical connection	
Degree of protection	64
Measuring instrument	34
Operating tools	
Via APL network	87
Via service interface (CDI-RJ45)	87
Via WLAN interface	88
RSLogix 5000	87
Web server	87
WLAN interface	88
Electromagnetic compatibility	294
Electronics module	13
Enabling write protection	166
Enabling/disabling the keypad lock	79
Error messages	
see Diagnostic messages	
Event logbook	265
Extended order code	
Sensor	18
Transmitter	16
F	
FDA	304
Field of application	
Residual risks	10
FieldCare	90
Device description file	92
Function	90
Filtering the event logbook	266

Firmware	
Release date	92
Version	92
Firmware history	270
Flow direction	22, 28
Flow limit	296
Food Contact Materials Regulation	304
Function range	
SIMATIC PDM	91
Functions	
see Parameter	
G	
Galvanic isolation	286
Gas Fraction Handler	182
H	
Hardware write protection	168
Help text	
Calling up	77
Closing	77
Explanation	77
HistoROM	161
Hygienic compatibility	304
I	
Identifying the measuring instrument	15
Incoming acceptance	15
Indication	
Current diagnostic event	264
Previous diagnostic event	264
Influence	
Ambient temperature	290
Medium pressure	291
Medium temperature	290
Information about this document	6
Initializing the measuring instrument	108
Inlet runs	23
Input variables	279
Inspection	
Installation	33
Installation	21
Installation dimensions	23
Installation requirements	
Down pipe	22
Inlet and outlet runs	23
Installation dimensions	23
Mounting location	21
Orientation	22
Sensor heating	25
Thermal insulation	24
Vibrations	25
Intended use	9
Internal cleaning	295
L	
Languages, operation options	300
Line recorder	179
Local display	300
Navigation view	70

- see Diagnostic message
- see In alarm condition
- see Operational display
- Text editor 72
- Low flow cut off 285

M

- Main electronics module 13
- Maintenance work 271
- Managing the device configuration 161
- Manufacturer ID 92
- Manufacturing date 16, 18
- Mass module 98
- Mass Totalizer Control module 98
- Materials 297
- Maximum measurement error 288
- Measured variables
 - see Process variables
- Measurement accuracy 288
- Measuring and test equipment 271
- Measuring device
 - Conversion 272
 - Design 13
 - Repairs 272
- Measuring instrument
 - Disposal 273
 - Installing the sensor 28
 - Preparing for mounting 28
 - Removing 273
 - Switch on 107
- Measuring principle 278
- Measuring range
 - For liquids 279
- Measuring range, recommended 296
- Measuring system 278
- Mechanical load 294
- Medium density 295
- Medium pressure
 - Influence 291
- Medium temperature
 - Influence 290
- Menu
 - Diagnostics 264
 - Setup 110
- Menus
 - For device configuration 108
 - For specific settings 143
- Module
 - Analog output 101
 - Binary input 97
 - Binary output 102
 - Mass 98
 - Mass Totalizer Control 98
 - Totalizer
 - Totalizer 99
 - Totalizer Control 100
- Mounting dimensions
 - see Installation dimensions
- Mounting location 21

- Mounting preparations 28
- Mounting requirements
 - Static pressure 24
- Mounting tool 28

N

- Nameplate
 - Sensor 18
 - Transmitter 16
- Navigation path (navigation view) 70
- Navigation view
 - In the submenu 70
 - In the wizard 70
- Netilion 271
- Numeric editor 72

O

- Onsite display
 - Numeric editor 72
- Operable flow range 279
- Operating elements 74, 193
- Operating height 293
- Operating keys
 - see Operating elements
- Operating menu
 - Menus, submenus 66
 - Structure 66
 - Submenus and user roles 67
- Operating philosophy 67
- Operation 170
- Operation options 65
- Operational display 68
- Operational safety 10
- Order code 16, 18
- Orientation (vertical, horizontal) 22
- Outlet runs 23
- Output signal 281
- Output variables 281

P

- Packaging disposal 21
- Parameter
 - Changing 77
 - Entering values or text 77
- Parameter settings
 - Administration (Submenu) 163
 - Advanced setup (Submenu) 144
 - APL port (Submenu) 110
 - Configuration backup (Submenu) 161
 - Corrected volume flow calculation (Submenu) 145
 - Current input 120
 - Current input (Wizard) 120
 - Current input 1 to n (Submenu) 174
 - Current output 122
 - Current output (Wizard) 122
 - Data logging (Submenu) 179
 - Define access code (Wizard) 162
 - Device information (Submenu) 268
 - Diagnostics (Menu) 264

Display (Submenu)	152	Protecting parameter settings	166
Display (Wizard)	137	R	
Disposable component (Submenu)	108	Radio approval	305
I/O configuration	119	Read access	78
I/O configuration (Submenu)	119	Reading off measured values	170
Low flow cut off (Wizard)	141	Recalibration	271
Mass flow (Submenu)	116	Reference operating conditions	288
Measured variables (Submenu)	171	Registered trademarks	8
Measurement mode (Submenu)	183	Remedial actions	
Medium index (Submenu)	185	Calling up	194
Medium selection (Wizard)	115	Closing	194
Network diagnostics (Submenu)	112	Remote operation	300
Partially filled pipe detection (Wizard)	142	Repair	272
Pulse/frequency/switch output	126	Notes	272
Pulse/frequency/switch output (Wizard)		Repair of a device	272
.	126, 128, 132	Repeatability	289
Pulse/frequency/switch output 1 to n (Submenu)	176	Replacement	
Relay output	134	Device components	272
Relay output 1 to n (Submenu)	177	Requirements for personnel	9
Relay output 1 to n (Wizard)	134	Response time	290
Reset access code (Submenu)	163	Return	272
Sensor adjustment (Submenu)	146	S	
Service interface (Submenu)	111	Safety	9
Setup (Menu)	110	Sensor	
Simulation (Submenu)	163	Installing	28
Status input	121	Sensor heating	25
Status input 1 to n (Submenu)	175	Sensor housing	295
Status input 1 to n (Wizard)	121	Serial number	16, 18
System units (Submenu)	112	Services	
Totalizer (Submenu)	173	Maintenance	271
Totalizer 1 to n (Submenu)	149	Repair	272
Totalizer handling (Submenu)	177	Setting the operating language	107
Value current output 1 to n (Submenu)	176	Settings	
Web server (Submenu)	85	Adapting the measuring device to the process	
WLAN settings (Wizard)	158	conditions	177
Zero adjustment (Wizard)	148	Administration	162
Zero verification (Wizard)	147	Advanced display configurations	152
Performance characteristics	288	Analog Input	116
Pharmaceutical compatibility	304	Communication interface	110
Post-connection check	107	Current input	120
Post-connection check (checklist)	64	Current output	122
Post-installation check	107	I/O configuration	119
Post-installation check (checklist)	33	Initializing the measuring instrument	108
Potential equalization	57	Local display	137
Power consumption	287	Low flow cut off	141
Power supply failure	287	Managing the device configuration	161
Pressure Equipment Directive	305	Medium	115
Pressure loss	296	Operating language	107
Pressure/temperature ratings	295	Partially filled pipe detection	142
Process connections	299	Pulse output	126
Process variables		Pulse/frequency/switch output	126, 128
Calculated	279	Relay output	134
Measured	279	Resetting the device	268
Product safety	10	Resetting the totalizer	177
PROFINET over Ethernet-APL certification	304	Sensor adjustment	146
Proline 500 – digital transmitter		Simulation	163
Connecting the signal cable/supply voltage cable	46	Status input	121
Proline 500 connecting cable terminal assignment			
Sensor connection housing	50		

Switch output	132
System units	112
Tag name	110
Totalizer	149
Totalizer reset	177
WLAN	158
Signal on alarm	284
SIMATIC PDM	91
Function	91
SIP cleaning	295
Software release	92
Spare part	272
Spare parts	272
Special connection instructions	58
Special mounting instructions	
Hygienic compatibility	26
Standards and guidelines	305
Static pressure	24
Status area	
For operational display	68
In the navigation view	70
Status signals	192, 195
Storage concept	302
Storage conditions	20
Storage temperature	20
Storage temperature range	292
Structure	
Operating menu	66
Submenu	
Administration	162, 163
Advanced setup	143, 144
Analog inputs	116
APL port	110
Calculated values	144
Communication	110
Concentration	160
Configuration backup	161
Corrected volume flow calculation	145
Current input 1 to n	174
Data logging	179
Device information	268
Display	152
Disposable component	108
Event logbook	265
Heartbeat setup	161
I/O configuration	119
Input values	174
Mass flow	116
Measured values	170
Measured variables	171
Measurement mode	183
Medium index	185
Network diagnostics	112
Output values	175
Overview	67
Petroleum	160
Process variables	144
Pulse/frequency/switch output 1 to n	176
Relay output 1 to n	177

Reset access code	163
Sensor adjustment	146
Service interface	111
Simulation	163
Status input 1 to n	175
System units	112
Totalizer	173
Totalizer 1 to n	149
Totalizer handling	177
Value current output 1 to n	176
Viscosity	160
Web server	85
Supply voltage	287
Surface roughness	299
Switch output	283
Symbols	
Controlling data entries	73
For communication	68
For diagnostic behavior	68
For locking	68
For measured variable	69
For measurement channel number	69
For menus	70
For parameters	70
For status signal	68
For submenu	70
For wizards	70
In the status area of the local display	68
Input screen	73
Operating elements	72
System design	
Measuring system	278
see Measuring device design	
System integration	92
System redundancy S2	106

T

Technical data, overview	278
Temperature range	
Ambient temperature for display	300
Medium temperature	294
Storage temperature	20
Terminal assignment	38
Terminal assignment of connecting cable for Proline	
500- digital	
Sensor connection housing	41
Terminals	287
Tests and certificates	305
Text editor	72
Thermal insulation	24
Tool	
For electrical connection	34
For mounting	28
Transportation	20
Tool tip	
see Help text	
Totalizer	
Assign process variable	173
Configuring	149

Totalizer Control module	100
Totalizer module	99
Transmitter	
Turning the display module	32
Turning the housing	32
Transporting the measuring instrument	20
Troubleshooting	
General	186
TSE/BSE Certificate of Suitability	304
Turning the display module	32
Turning the electronics housing	
see Turning the transmitter housing	
Turning the transmitter housing	32
U	
UKCA marking	303
Use of measuring instrument	
Borderline cases	9
Incorrect use	9
see Intended use	
User roles	67
USP Class VI	304
V	
Version data for the device	92
Vibration resistance and shock resistance	293
Vibrations	25
W	
W@M Device Viewer	15
Weight	
SI units	296
Transport (notes)	20
US units	296
Wizard	
Current input	120
Current output	122
Define access code	162
Display	137
Low flow cut off	141
Medium selection	115
Partially filled pipe detection	142
Pulse/frequency/switch output	126, 128, 132
Relay output 1 to n	134
Status input 1 to n	121
WLAN settings	158
Zero adjustment	148
Zero verification	147
WLAN settings	158
Workplace safety	10
Write access	78
Write protection	
Via access code	166
Via write protection switch	168
Write protection switch	168



www.addresses.endress.com
