

# Safety Instructions

## Liquiphant FTL41

II 1/2 G Ex db IIC T6...T1 Ga/Gb

II 2 G Ex db IIC T6...T1 Gb

UK  
CA



---

# Liquiphant FTL41

## Table of contents

About this document ..... 4

Associated documentation ..... 4

Supplementary documentation ..... 4

Certificates and declarations ..... 4

Manufacturer address ..... 4

Other standards ..... 5

Extended order code ..... 5

Safety instructions: General ..... 8

Safety instructions: Specific conditions of use ..... 8

Safety instructions: Installation ..... 9

Safety instructions: Ex d joints ..... 10

Safety instructions: Zone 0 ..... 10

Safety instructions: Zone separation Zone 0, Zone 1 ..... 10

Temperature tables ..... 11

Connection data ..... 12

**About this document**

The document number of these Safety Instructions (XA) must match the information on the nameplate.

**Associated documentation**

All documentation is available on the Internet:

[www.endress.com/Deviceviewer](http://www.endress.com/Deviceviewer)

(enter the serial number from the nameplate).

To commission the device, please observe the Operating Instructions pertaining to the device:

BA01893F

**Supplementary documentation**

Explosion protection brochure: CP00021Z

The explosion protection brochure is available on the Internet:

[www.endress.com/Downloads](http://www.endress.com/Downloads)

**Certificates and declarations****UK Declaration of Conformity**

Declaration Number:

UK\_00031

The UK Declaration of Conformity is available:

In the download area of the Endress+Hauser website:

[www.endress.com](http://www.endress.com) -> Downloads -> Declaration ->

Type: UKCA Declaration -> Product Code: ...

**UKCA type-examination certificate**

Certificate number:

CML 25UKEX1021X

List of applied standards: See UK Declaration of Conformity.

**Manufacturer address**

Endress+Hauser SE+Co. KG

Hauptstraße 1

79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

**Other standards**

Among other things, the following standards shall be observed in their current version for proper installation:

- IEC/EN 60079-14: "Explosive atmospheres - Part 14: Electrical installations design, selection and erection"
- EN 1127-1: "Explosive atmospheres - Explosion prevention and protection - Part 1: Basic concepts and methodology"

**Extended order code**

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

**Structure of the extended order code**

FTL41	–	*****	+	A*B*C*D*E*F*G*..
<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>

\* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

*Basic specifications*

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available.


The selected option of a feature can consist of several positions.

*Optional specifications*

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Liquiphant

-  The following specifications reproduce an extract from the product structure and are used to assign:
- This documentation to the device (using the extended order code on the nameplate).
  - The device options cited in the document.

Device type


FTL41

Basic specifications


Position 1, 2 (Approval)		
Selected option		Description
FTL41	UC	UK II 1/2 G Ex db IIC T6...T1 Ga/Gb UK II 2 G Ex db IIC T6...T1 Gb

Position 3, 4 (Output)		
Selected option		Description
FTL41	A2	FEL42, 3-wire PNP 10-55VDC
	A4	FEL44, relay DPDT 19-253VAC/19-55VDC contact 253V/6A
	A8	FEL48, 2-wire NAMUR

Position 6 (Housing, Material)		
Selected option		Description
FTL41	B	Single compartment; Alu, coated




Shown in the temperature tables exemplary as follows:

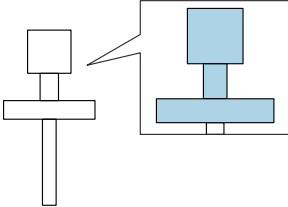


Position 7 (Electrical Connection)		
Selected option		Description
FTL41	F	Thread M20, IP66/68 NEMA Type 4X/6P
	G	Thread G1/2 <sup>1)</sup> , IP66/68 NEMA Type 4X/6P
	I	Thread NPT3/4, IP66/68 NEMA Type 4X/6P
	Y	Special version: Thread NPT1/2, IP66/68 NEMA Type 4X/6P

1) Reduction M20x1.5 to G1/2 enclosed

Position 10 (Type of Probe)		
Selected option		Description
FTL41	1	Compact version
	2	Extension tube
	3	Short tube version

 Shown in the temperature tables exemplary as follows:

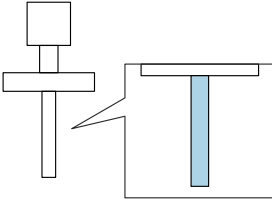

Position 11, 12 (Sensor Length, Material)		
Selected option		Description
FTL41	AJ	Compact version; 316L
	BJ	Short tube version; 316L
	CJ	..... mm L, Ra<3,2µm/126µin; 316L
	DJ	..... in L, Ra<3,2µm/126µin; 316L

Optional specifications

ID Px (Accessory Enclosed)		
Selected option		Description
FTL41	PB	Weather protection cover, plastic

## Safety instructions: General

- The device is intended to be used in explosive atmospheres as defined in the scope of EN IEC 60079-0 or equivalent national standards. If no potentially explosive atmospheres are present or if additional protective measures have been taken: The device may be operated according to the manufacturer's specifications.
- Devices suitable for zone separation (marked Ga/Gb or Da/Db) are always suitable for installation in the less critical zone (Gb or Db). Due to space limitations the corresponding marking maybe not indicated on the nameplate.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Avoid electrostatic charging:
  - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ...)
  - Of isolated capacities (e.g. isolated metallic plates)
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application and the temperature class.
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.

## Safety instructions: Specific conditions of use

Permitted ambient temperature range at the electronics enclosure:

→  11, "Temperature tables".


- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
  - Observe the danger of electrostatic charging and discharge.
  - Do not install in the vicinity of processes ( $\leq 0.5$  m) generating strong electrostatic charges.
- Avoid sparks caused by impact and friction.

*Optional specification, ID Px = PB*

Avoid electrostatic charging of the weather protection cover (e.g. friction, cleaning, maintenance, strong medium flow).



## Safety instructions: Installation

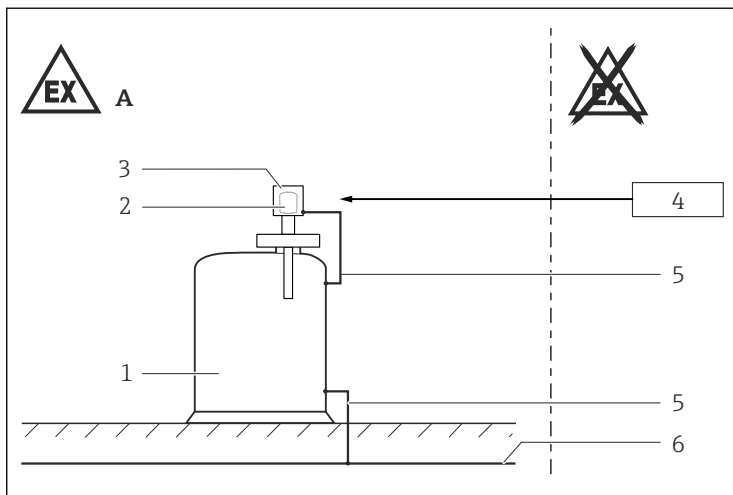

A0025536



1

- A Zone 1
- 1 Tank; Zone 0, Zone 1
- 2 Electronic insert
- 3 Enclosure
- 4 Supply unit
- 5 Potential equalization line
- 6 Local potential equalization

- Before operation:
  - Screw in the cover all the way.
  - Tighten the securing clamp on the cover.
- In potentially explosive atmospheres:
  - Do not disconnect the electrical connection of the power supply circuit when energized.
  - Do not open the connection compartment cover and the electronics compartment cover.
- Continuous service temperature of the connecting cable / cable gland / cable entry:
  - Basic specification, Position 3, 4 = A2:  $\geq T_a + 35\text{ K}$
  - Basic specification, Position 3, 4 = A4:  $\geq T_a + 40\text{ K}$
  - Basic specification, Position 3, 4 = A8:  $\geq T_a + 20\text{ K}$
- Perform the following to achieve the degree of protection IP66/68:
  - Screw the cover tight.
  - Mount the cable entry correctly.
- Observe the maximum process conditions according to the manufacturer's Operating Instructions.
- At high medium temperatures, note flange pressure load capacity as a factor of temperature.

- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.
- Support extension tube of the device if a dynamic load is expected.
- Only use certified cable entries suitable for the application. Observe national regulations and standards. Accordingly, the connection terminal does not include any ignition sources.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- The built-in metallic sealing plug is examined and approved for explosion protection type Ex d with the device.
- When operating the transmitter enclosure at an ambient temperature under  $-20^{\circ}\text{C}$ , use appropriate cables and cable entries permitted for this application.
- When connecting through a conduit entry approved for this purpose, mount the associated sealing unit directly at the enclosure.
- Flameproof equipment with G threaded holes is not intended for new installations, but only for replacing equipment in existing installations. Use of this equipment shall comply with the local installation requirements.

### **Accessory high pressure sliding sleeve**

The high pressure sliding sleeve can be used for a continuous setting of the switch point and is suited for zone separation if mounted properly (see Operating Instructions).

### **Potential equalization**

Integrate the device into the local potential equalization.

#### **Safety instructions: Ex d joints**

- If required or if in doubt: ask manufacturer for specifications.
- Flameproof joints are not intended to be repaired.

#### **Safety instructions: Zone 0**

When using under non-atmospheric pressures and non-atmospheric temperatures: The sensor part of the device approved for Zone 0 does not cause any ignition hazards.

#### **Safety instructions: Zone separation Zone 0, Zone 1**

The zone separation wall of the device is made of stainless steel or high corrosion-resistant alloy of thickness  $\geq 1\text{ mm}$ .

## Temperature tables

### General notes



*Optional specification, ID Px = PB*

When using the weather protection cover: Reduce the values  $T_a$  of P1, P2, P3 by 16 K.

### Description notes



Unless otherwise indicated, the positions always refer to the basic specification.


1st column: Position 3, 4 = ..., A4, A8

2nd column: Maximum load current

3rd column: Temperature classes T6 (85 °C) to T1 (450 °C)


Column P1 to P5: Position (temperature value) on the axes of the derating

- $T_a$ : Ambient temperature in °C
- $T_p$ : Process temperature in °C

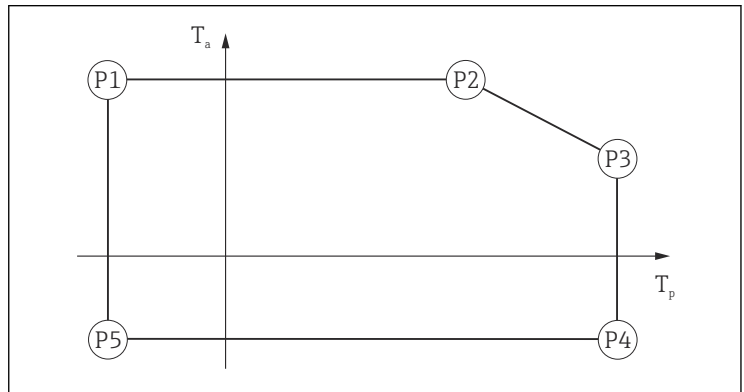

A0033052

### Zone 0, Zone 1

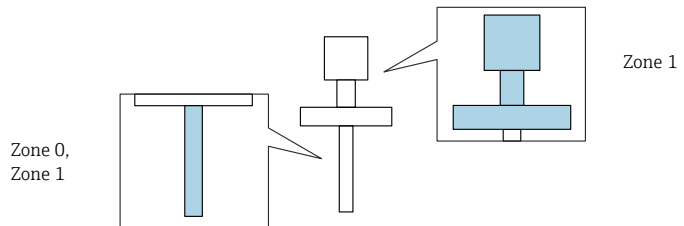

A2	350 mA		P1		P2		P3		P4		P5	
			T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
		T6	-40	70	70	70	75	70	75	-40	-40	-40
		T5	-40	70	70	70	90	70	90	-40	-40	-40
		T4	-40	70	70	70	125	55	125	-40	-40	-40
		T3...T1	-40	70	70	70	150	45	150	-40	-40	-40

A4	2 A		P1		P2		P3		P4		P5	
			T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
		T6	-40	70	70	70	75	40	75	-40	-40	-40
		T5	-40	70	70	70	90	55	90	-40	-40	-40
		T4	-40	70	70	70	125	47	125	-40	-40	-40
		T3...T1	-40	70	70	70	150	38	150	-40	-40	-40

A8			P1		P2		P3		P4		P5	
			T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
		T6	-40	70	70	70	75	70	75	-40	-40	-40
		T5	-40	70	70	70	90	70	90	-40	-40	-40
		T4	-40	70	70	70	125	70	125	-40	-40	-40
		T3...T1	-40	70	70	70	150	70	150	-40	-40	-40

Connection data

Basic specification, Position 3, 4	Power supply circuit	Output
A2	U = 10 to 55 V <sub>DC</sub> ; P <sub>max</sub> < 0.5 W	I <sub>max</sub> = 350 mA
A4	U = 19 to 253 V <sub>AC</sub> , 50/60 Hz or 19 to 55 V <sub>DC</sub> ; P <sub>max</sub> < 25 VA or < 1.3 W	2 potential free change- over contacts; 2 A Ex d
A8	U = 8.2 V <sub>DC</sub> ±20 %	NAMUR; I <sub>max</sub> = 3.8 mA

---

---

---



71673297

[www.addresses.endress.com](http://www.addresses.endress.com)

---