Installation Instructions Main electronics


Micropilot





1 Intended use

- A defective unit can only be replaced with a functioning unit of the same type.
- Use only original parts from Endress+Hauser.
- In the W@M Device Viewer, check if the spare part is suitable for the existing device.
- In some devices, an overview of spare parts is provided inside the device. If the spare part set is listed in the overview, it is not necessary to check the Device Viewer.

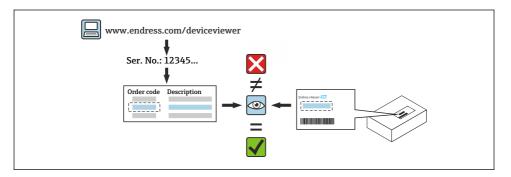

2 Personnel authorized to carry out repairs

Technical staff must comply with the following requirements for repair, mounting, electrical installation and commissioning of the devices:

- Be trained in instrument safety.
- Be familiar with the individual operating conditions of the devices.
- In the case of Ex-certified devices, they must also be trained in explosion protection.
- Technical staff carrying out work are responsible for ensuring that the work is carried out safely and to the required quality standard. They must also guarantee the safety of the device following repair.

3 Safety instructions

- Observe the Operating Instructions for the device.
- Comply with national regulations regarding mounting, electrical installation, commissioning, maintenance and repair.
- Device is live! Risk of fatal injury from electric shock. Open the device only when the device is deenergized.
- For devices intended for use in hazardous locations, please observe the instructions in the Ex documentation (XA).
- In the case of devices in safety-related applications in accordance with IEC 61508 or IEC 61511: Commission in accordance with Operating Instructions after repair.

- Before removing the device: set the process to a safe state and purge the pipe of dangerous process substances.
- Risk of burns from hot surfaces! Before commencing work: allow the system and device to cool down to a touchable temperature.
- In the case of devices in custody transfer, the custody transfer status no longer applies once the seal has been removed.
- Risk of damaging electronic components! Ensure that the working environment is protected against electrostatic discharge.
- After removing the electronics compartment cover: risk of electric shock due to removal of contact protection! Switch the device off before removing internal covers.
- Modifications to the device are not permitted.
- Only open the housing for a short period. Avoid ingress of foreign bodies, moisture or contaminants.
- Replace defective seals only with original seals from Endress+Hauser.
- If threads are damaged or defective, the device must be repaired.
- Do not lubricate threads (e.g. of electronics compartment cover and connection compartment cover).
- If spacing is reduced or the dielectric strength of the device cannot be guaranteed during repair work: Perform a test on completion of the work (e.g. high-voltage test in accordance with the manufacturer's specifications).
- Service connector:
 - Do not connect in potentially explosive atmospheres.
 - Only connect to Endress+Hauser service devices.
- Observe the instructions for transporting and returning the device outlined in the Operating Instructions.
- For information on service and spare parts, contact your Endress+Hauser sales center.

4 Tool list












5 Housing version

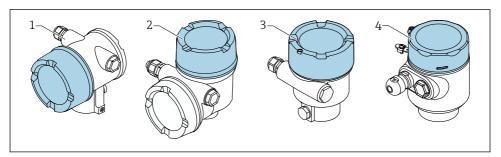



- 1 Dual compartment housing
- 2 Dual compartment housing, L-form
- 3 Single-compartment housing
- 4 Single-compartment housing, 316L hygiene

6 Removal

6.1 Dual-compartment housing, (not L-form)


6.1.1 Removing the cover

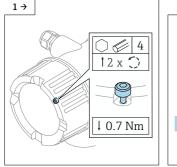

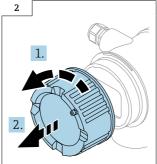


lacksquare Optional: cover lock

6.1.2 Optional: removing the display

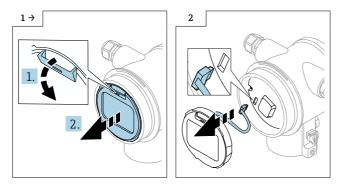

6.1.3 Removing the electronics

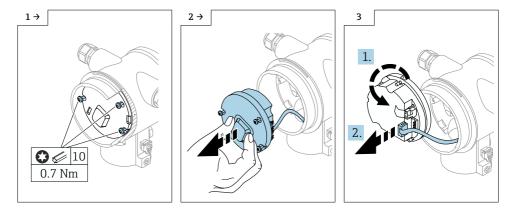


6.1.4 Removing the HistoROM

The electronics module contains a plug-in HistoROM, in which all device and measuring point data are stored.

NOTICE


The device cannot be operated without the HistoROM.

► Store the HistoROM in a safe place until it is installed in the new electronics module. After the electronics module has been installed, the device can be operated immediately.

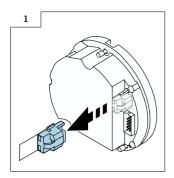



6.2 Single-compartment housing and L-form dual-compartment housing


6.2.1 Removing the cover

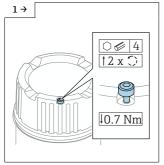




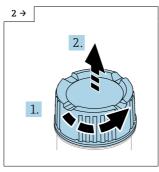


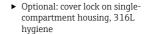


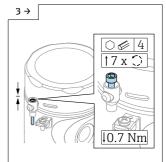

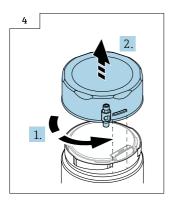


6.2.2 Optional: removing the display

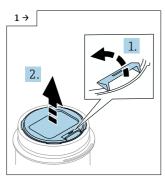


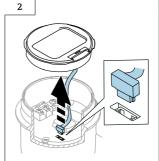


6.2.3 Optional: removing the transmitter VU140

- For customer wiring: step 1, 2, 3
- For M12: step 2, 3

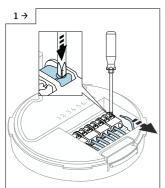


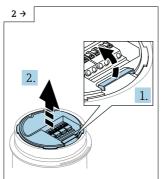

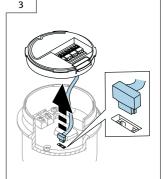

6.2.4 Removing the main electronics

- Single compartment housing: Steps 1, 2, 4, 5, 6
- Dual compartment housing, L-form: Steps 3, 4, 5, 6

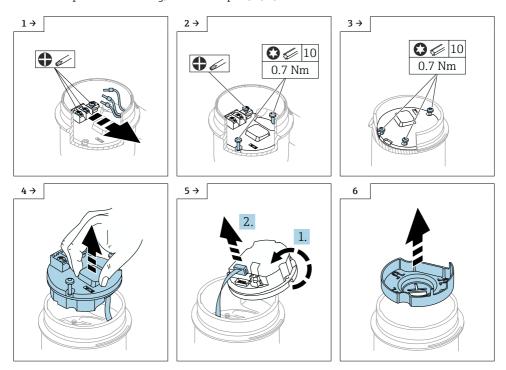


6.2.5 Removing the HistoROM

The electronics module contains a plug-in HistoROM, in which all device and measuring point data are stored.

NOTICE

The device cannot be operated without the HistoROM.

► Store the HistoROM in a safe place until it is installed in the new electronics module. After the electronics module has been installed, the device can be operated immediately.

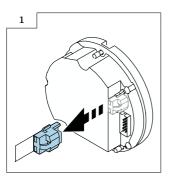


7 Installation

7.1 General installation instructions

Installation is performed by following the removal procedure in reverse order.


7.2 Special installation instructions


7.2.1 Mounting the HistoRom

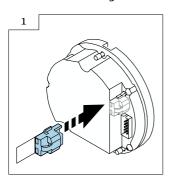

7.2.2 Aligning the connecting cable


Rotate the electronics once around its own axis so that the cable is shortened and can be better installed

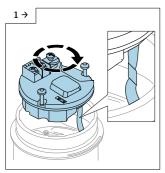

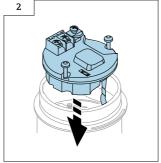

7.2.3 For remote display FHX50B: pay attention to terminal assignment

The terminal assignments at transmitter VU140 and receiver VU141 must match (all terminals (1 to 8)). Connect the cable shield to the ground terminals on both sides.

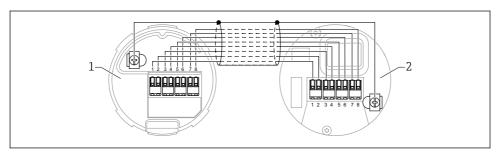

- 1 Transmitter VIJ140
- 2. Receiver VII141

7.2.4 Cover lock

In the case of devices with a cover lock, the securing screw must not protrude over the lower edge of the cover. Note the position of the securing screw before and while screwing the cover on.





www.addresses.endress.com