

Safety Instructions

iTHERM TM111, iTHERM TM131, iTHERM TM151

IND-Ex: Ex ia IIC T6...T1 Ga
Ex ia IIC T6...T1 Ga/Gb



iTHERM TM111, iTHERM TM131, iTHERM TM151

Table of contents

About this document	3
Associated documentation	3
Supplementary documentation	3
Certificates and declarations	3
Manufacturer address	3
Safety instructions	4
Safety instructions: General	4
Safety instructions: Installation in equipment of Group III	5
Safety instructions for Intrinsic safety: Installation	5
Safety instructions: Partition wall	5
Safety instructions: Specific conditions of use	6
Temperature tables	6
Electrical data	9

About this document

The document number of these Safety Instructions (XA) must match the information on the nameplate.

Associated documentation

All documentation is available on the Internet:

www.endress.com/Deviceviewer

(enter the serial number from the nameplate).

To commission the device, please observe the Operating Instructions pertaining to the device:

www.endress.com/<product code>, e.g. iTHERM TM111

Supplementary documentation

Explosion protection brochure: CP00021Z

The Explosion-protection brochure is available:

■ In the download area of the Endress+Hauser website:

www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP00021Z

■ On the CD for devices with CD-based documentation

Certificates and declarations

PESO Approval No.:

■ P651637/1

■ KLPL/Ex/25-079X Issue no. 00

Affixing the approval number certifies conformity with the following standards (depending on the device version):

■ IS/IEC 60079-0: 2017


■ IS/IEC 60079-11: 2023

■ IS/IEC 60079-26: 2021

Manufacturer address

Endress+Hauser Wetzer (India)
Private Limited
M-192/2, MIDC Waluj
Chhatrapati Sambhajnagar 431136
India

Safety instructions

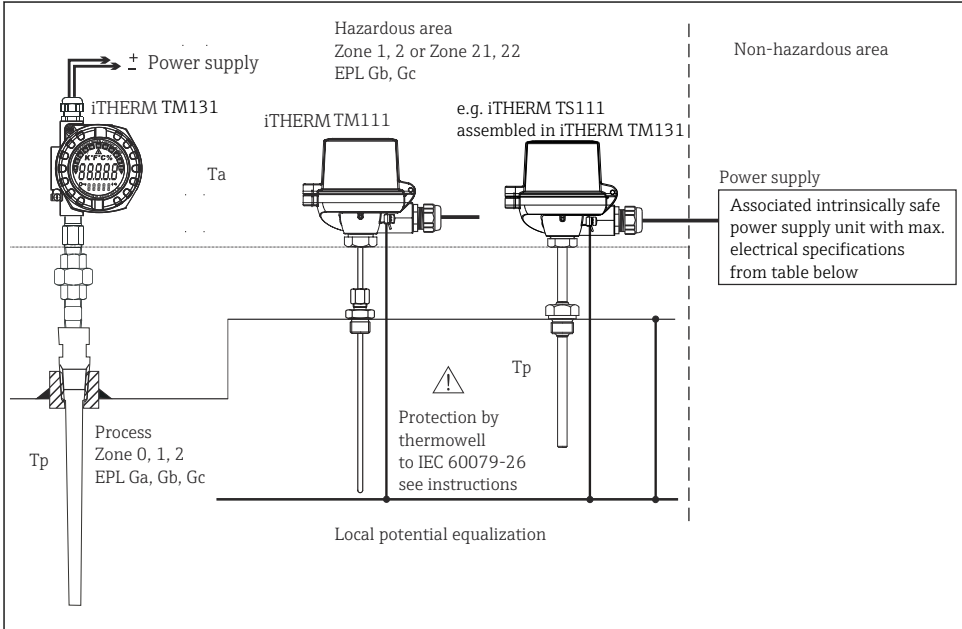

A0061919

Safety instructions: General

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and national regulations (e.g. IS 16724 : 2018).
- The housing of the thermometer must be connected to the local potential equalization or installed in a grounded metallic piping or tank respectively.
- It cannot be taken for granted that when using compression fittings with non metallic olives that there is a secure grounding when installing in a metal system. This means that an additional safe connection to the local potential equalization needs to be used.
- For using of a plug-in connector (e.g. PA-connector by Weidmüller) is to be observed that the requirements for the respective category and the operating temperature are followed.

Safety instructions:
Installation in equipment of Group III

⚠ WARNING

Explosive atmosphere

- ▶ In an explosive atmosphere, do not open the device when voltage is supplied (ensure that the IP6x housing protection is maintained during operation).

Safety instructions for Intrinsic safety: Installation

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and national regulations (e.g. IS 16724 : 2018).
- Observe the safety instructions for the used transmitters.
- The display, type TID10, may only be installed in Zone 1 (EPL Gb) or Zone 2 (EPL Gc).
- The type of protection changes as follows when the devices are connected to certified intrinsically safe circuits of Category ib: **Ex ib IIC**.
 When connecting to an intrinsically safe ib circuit, do not operate the sensor at Zone 0 without any thermowell according to IS/IEC 60079-26.
- The inserts with dual circuits (3 mm (1/8") and 6 mm (1/4") diameter) and 3 mm (1/8") diameter are not isolated to the metallic sheath in conformance with IS/IEC 60079-11 chapter 6.3.13.
- When connecting dual sensors make sure that the potential equalizations are at the same local potential equalization.
- Inserts with 3 mm (1/8") diameter or grounded inserts, e.g. type iTHERM TSx11 must be connected to the local potential equalization.
- For inserts with 3 mm (1/8") diameter or grounded inserts, e.g. type iTHERM TSx11 an intrinsically safe supply with galvanic isolation must be used.

Safety instructions:
Partition wall

Install the thermometer in a partition wall which is in compliance with IS/IEC 60079-26 in reference to its ultimate application.

Safety instructions:
Specific conditions of use

- From the safety point of view, the circuit of versions of the following temperature sensors and inserts shall be considered to be connected to earth (for details, the instruction manual, provided with the equipment, shall be observed):
 - Type iTHERM TS111 and TS211 with diameter 3 mm or 1/8", single or dual
 - Type iTHERM TS111 and TS211 with diameter 6 mm or 1/4" dual
- The device must be installed and maintained so, that even in the event of rare incidents, an ignition source due to impact or friction between the enclosure and iron/steel is excluded.
- Avoid electrostatic charging of the plastic housing (do not rub dry).

Temperature tables

The dependency of the ambient and process temperatures upon the temperature class for assembly with transmitters:

Type	Assembled Transmitter	Temperature class	Ambient temperature range housing	Maximum surface temperature housing
iTHERM TM111 iTHERM TM131 iTHERM TM151 iTHERM TS111	iTEMP TMT84 iTEMP TMT85 iTEMP TMT162 PA, FF	T6	-40 °C ≤ Ta ≤ +55 °C	T85 °C
		T5	-40 °C ≤ Ta ≤ +70 °C	T100 °C
		T4	-40 °C ≤ Ta ≤ +85 °C	T135 °C
	iTEMP TMT71 iTEMP TMT72 iTEMP TMT86 ¹⁾ iTEMP TMT162 HART	T6	-50 °C ≤ Ta ≤ +55 °C	T85 °C
		T5	-50 °C ≤ Ta ≤ +70 °C	T100 °C
		T4	-50 °C ≤ Ta ≤ +85 °C	T135 °C
	iTEMP TMT142 HART	T6	-50 °C ≤ Ta ≤ +58 °C	T85 °C
		T5	-50 °C ≤ Ta ≤ +75 °C	T100 °C
		T4	-50 °C ≤ Ta ≤ +85 °C	T135 °C
	iTEMP TMT82 ¹⁾	T6	-40 °C ≤ Ta ≤ +55 °C	T85 °C
		T5	-40 °C ≤ Ta ≤ +70 °C	T100 °C
		T4	-40 °C ≤ Ta ≤ +85 °C	T135 °C
	iTEMP TMT8x iTEMP TMT7x with display	T6	-40 °C ≤ Ta ≤ +55 °C	T85 °C
		T5	-40 °C ≤ Ta ≤ +70 °C	T100 °C
		T4	-40 °C ≤ Ta ≤ +85 °C	T135 °C

1) lower temperature of -52 °C is possible with marking Ex ia IIC Ga/Gb only

Type	Assembled Transmitter	Insert diameter	Process temperature range	Temperature class/ maximum surface temperature sensor
iTHERM TM111 iTHERM TM131 iTHERM TM151 iTHERM TS111 iTHERM TS211	iTEMP TMT8x iTEMP TMT7x	3 mm (1/8"), 3 mm (1/8") dual or 6 mm (1/4") dual	$-50\text{ °C} \leq T_p \leq +66\text{ °C}$	T6/T85 °C
			$-50\text{ °C} \leq T_p \leq +81\text{ °C}$	T5/T100 °C
			$-50\text{ °C} \leq T_p \leq +116\text{ °C}$	T4/T135 °C
			$-50\text{ °C} \leq T_p \leq +181\text{ °C}$	T3/T200 °C
			$-50\text{ °C} \leq T_p \leq +276\text{ °C}$	T2/T300 °C
			$-50\text{ °C} \leq T_p \leq +426\text{ °C}$	T1/T450 °C
		6 mm (1/4") dual	$-50\text{ °C} \leq T_p \leq +73\text{ °C}$	T6/T85 °C
			$-50\text{ °C} \leq T_p \leq +88\text{ °C}$	T5/T100 °C
			$-50\text{ °C} \leq T_p \leq +123\text{ °C}$	T4/T135 °C
			$-50\text{ °C} \leq T_p \leq +188\text{ °C}$	T3/T200 °C
			$-50\text{ °C} \leq T_p \leq +283\text{ °C}$	T2/T300 °C
			$-50\text{ °C} \leq T_p \leq +433\text{ °C}$	T1/T450 °C

Type	Assembled Transmitter	Insert diameter	Process temperature range	Temperature class/ maximum surface temperature sensor
iTHERM TM131 iTHERM TM151 iTHERM TS211	iTEMP TMT162	3 mm (1/8"), 3 mm (1/8") dual or 6 mm (1/4") dual	$-50\text{ °C} \leq T_p \leq +64\text{ °C}$	T6/T85 °C
			$-50\text{ °C} \leq T_p \leq +79\text{ °C}$	T5/T100 °C
			$-50\text{ °C} \leq T_p \leq +114\text{ °C}$	T4/T135 °C
			$-50\text{ °C} \leq T_p \leq +179\text{ °C}$	T3/T200 °C
			$-50\text{ °C} \leq T_p \leq +279\text{ °C}$	T2/T300 °C
			$-50\text{ °C} \leq T_p \leq +424\text{ °C}$	T1/T450 °C
		6 mm (1/4") dual	$-50\text{ °C} \leq T_p \leq +71\text{ °C}$	T6/T85 °C
			$-50\text{ °C} \leq T_p \leq +86\text{ °C}$	T5/T100 °C
			$-50\text{ °C} \leq T_p \leq +121\text{ °C}$	T4/T135 °C
			$-50\text{ °C} \leq T_p \leq +186\text{ °C}$	T3/T200 °C
			$-50\text{ °C} \leq T_p \leq +286\text{ °C}$	T2/T300 °C
			$-50\text{ °C} \leq T_p \leq +431\text{ °C}$	T1/T450 °C



For thermocouple inserts, the temperature class T6...T1 and the maximum surface temperature T85 °C...T450 °C are equal to the process temperature.

The dependency of the ambient and process temperatures upon the temperature class for assembly without transmitter (terminal block):

Insert diameter	Temperature class/ Maximum surface temperature	Tp (process) - maximum allowed process temperature (sensor)				
		Pi ≤ 50 mW	Pi ≤ 100 mW	Pi ≤ 200 mW	Pi ≤ 500 mW	Pi ≤ 650 mW
3 mm (1/8"), 3 mm (1/8") dual or 6 mm (1/4") dual	T1/T450 °C	426 °C	415 °C	396 °C	343 °C	333 °C
	T2/T300 °C	276 °C	265 °C	246 °C	193 °C	183 °C
	T3/T200 °C	181 °C	170 °C	151 °C	98 °C	88 °C
	T4/T135 °C	116 °C	105 °C	86 °C	33 °C	23 °C
	T5/T100 °C	81 °C	70 °C	51 °C	-2 °C	-12 °C
	T6/T85 °C	66 °C	55 °C	36 °C	-17 °C	-27 °C
6 mm (1/4") dual	T1/T450 °C	433 °C	428 °C	420 °C	398 °C	388 °C
	T2/T300 °C	283 °C	278 °C	270 °C	248 °C	238 °C
	T3/T200 °C	188 °C	183 °C	175 °C	153 °C	143 °C
	T4/T135 °C	123 °C	118 °C	110 °C	88 °C	78 °C
	T5/T100 °C	88 °C	83 °C	75 °C	53 °C	43 °C
	T6/T85 °C	73 °C	68 °C	60 °C	38 °C	28 °C

Insert diameter	Temperature class/ Maximum surface temperature	Tp (process) - maximum allowed process temperature (sensor)			Ta (ambient) - ambient temperature (housing) ¹⁾
		Pi ≤ 750 mW	Pi ≤ 800 mW	Pi ≤ 1 000 mW	
3 mm (1/8"), 3 mm (1/8") dual or 6 mm (1/4") dual	T1/T450 °C	320 °C	312 °C	280 °C	-40 °C ≤ Ta ≤ +130 °C
	T2/T300 °C	170 °C	162 °C	130 °C	
	T3/T200 °C	75 °C	62 °C	30 °C	
	T4/T135 °C	10 °C	2 °C	-30 °C	-40 °C ≤ Ta ≤ +116 °C
	T5/T100 °C	-25 °C	-33 °C	-	-40 °C ≤ Ta ≤ +81 °C
	T6/T85 °C	-40 °C	-	-	-40 °C ≤ Ta ≤ +66 °C
6 mm (1/4") dual	T1/T450 °C	381 °C	377 °C	361 °C	-40 °C ≤ Ta ≤ +130 °C
	T2/T300 °C	231 °C	227 °C	211 °C	
	T3/T200 °C	136 °C	127 °C	111 °C	
	T4/T135 °C	71 °C	67 °C	51 °C	-40 °C ≤ Ta ≤ +123 °C

Insert diameter	Temperature class/ Maximum surface temperature	Tp (process) - maximum allowed process temperature (sensor)			Ta (ambient) - ambient temperature (housing) ¹⁾
		Pi ≤ 750 mW	Pi ≤ 800 mW	Pi ≤ 1000 mW	
	T5/T100 °C	36 °C	32 °C	16 °C	-40 °C ≤ Ta ≤ +88 °C
	T6/T85 °C	21 °C	17 °C	1 °C	-40 °C ≤ Ta ≤ +73 °C

- 1) The ambient temperature at the terminal head may be directly influenced by the process temperature, but its restricted to the range -40 to +130 °C, besides for types TA30A, TA30D and TA30H with a restricted range -50 to +130 °C. For thermometers with two mounted head transmitters the allowed ambient temperature is up to 12 K lower than each head transmitter's certified ambient temperature.



For thermocouple inserts, the temperature class T6...T1 and the maximum surface temperature T85 °C...T450 °C are equal to the process temperature.

Electrical data

Associated intrinsically safe power supply unit with maximum electrical specifications below the characteristic values of the assembled transmitter:

Transmitter	Ui	Ii	Pi	Ci	Li
iTEMP TMT71/ TMT72	30 V	100 mA	800 mW	0	0
iTEMP TMT82	30 V	130 mA	800 mW	0	0
iTEMP TMT162 HART	30 V	300 mA	1000 mW	0	0
iTEMP TMT162 PA/FF	FISCO field device				
iTEMP TMT84 iTEMP TMT85 iTEMP TMT86	FISCO field device				
Terminal block	30 V	140 mA	1000 mW	See tables below	
Flying leads	30 V	140 mA	1000 mW	See tables below	

Sensor type	Insertion Length IL		Flying leads		Terminal block	
	C _i /m	L _i /m	C _i	L _i	C _i	L _i
Single	200 pF	1 μH	56.4 pF	282 nH	4.6 pF	23 nH
Dual	400 pF	2 μH	113 pF	564 nH	9.2 pF	46 nH

Calculation formula for options with flying leads only:

$$\blacksquare C_i = C_{i \text{ Insertion length IL}} \times \text{IL} + C_{i \text{ Flying leads}}$$

$$\blacksquare L_i = L_{i \text{ Insertion length IL}} \times \text{IL} + L_{i \text{ Flying leads}}$$

Calculation formula for options with terminal block only:

$$\blacksquare C_i = C_{i \text{ Insertion length IL}} \times \text{IL} + C_{i \text{ Terminal block}}$$

$$\blacksquare L_i = L_{i \text{ Insertion length IL}} \times \text{IL} + L_{i \text{ Terminal block}}$$



71758451

www.addresses.endress.com
