



Operating Instructions Levelflex FMP55 FOUNDATION Fieldbus

Guided wave radar

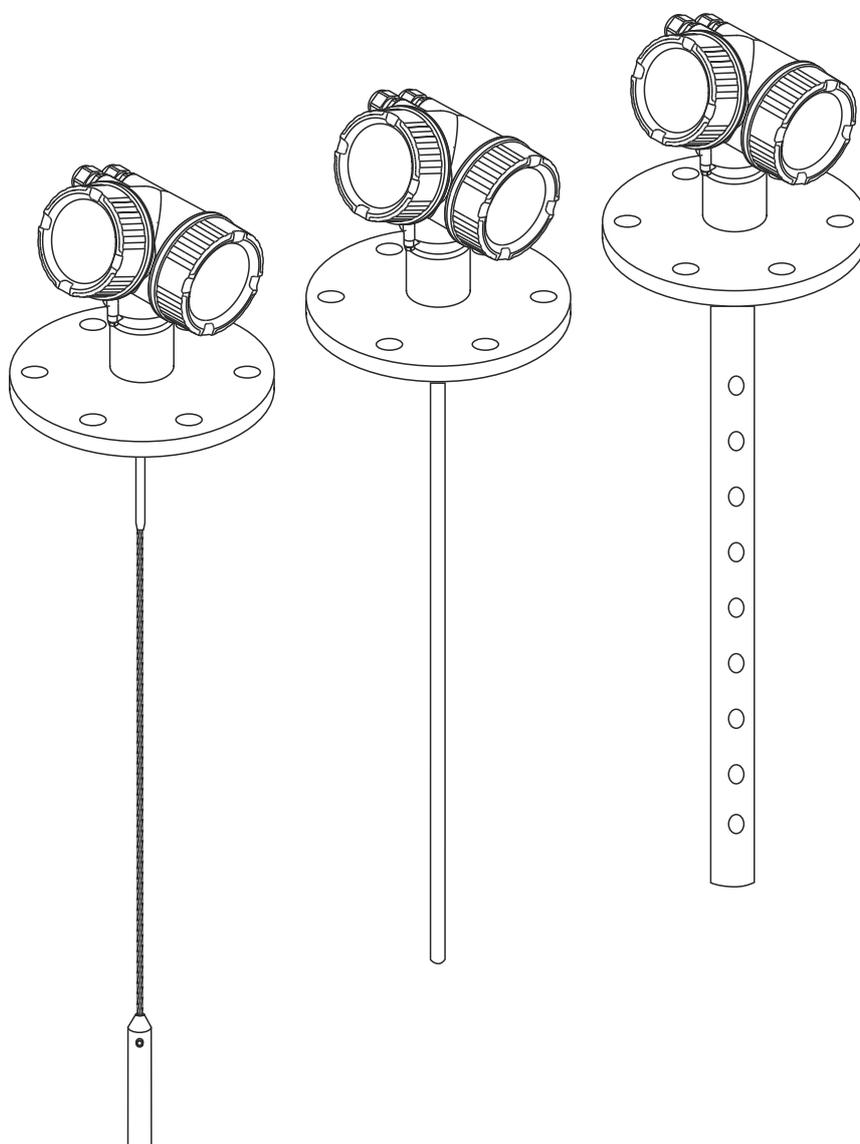

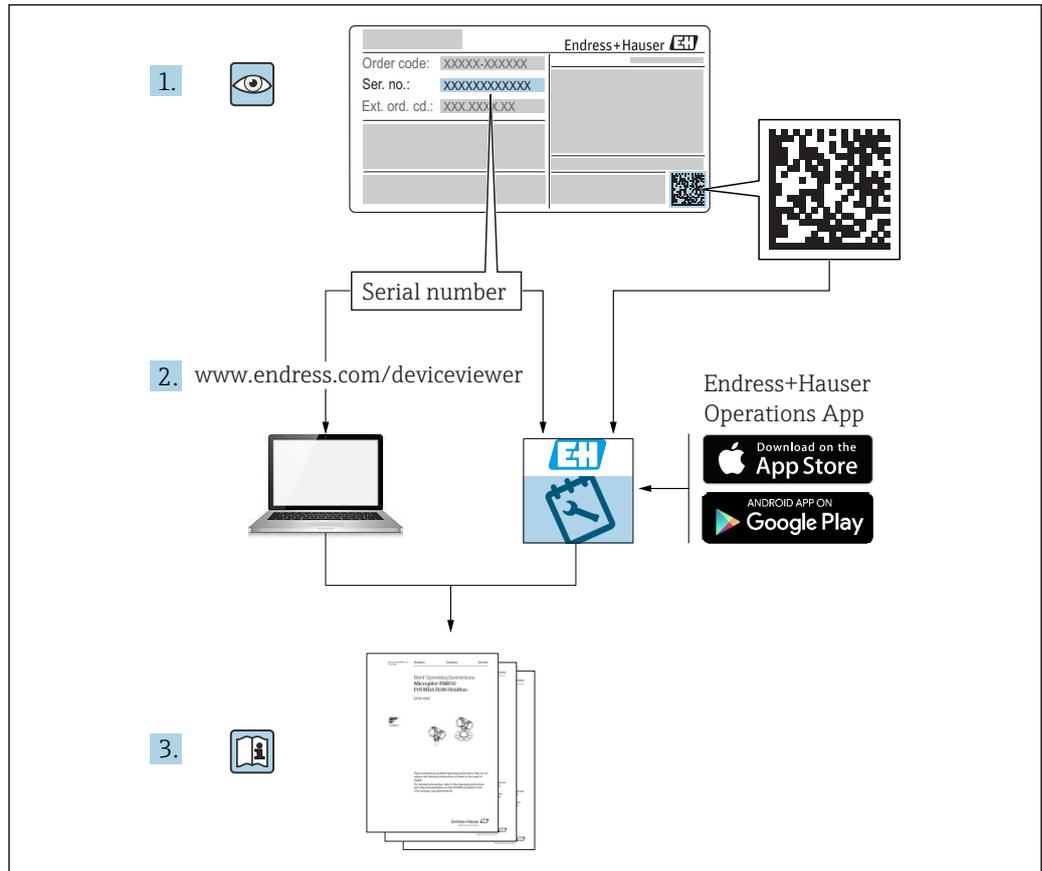

A0023555

Table of contents

1	Important document information	6		
1.1	Document function	6		
1.2	Symbols	6		
1.2.1	Safety symbols	6		
1.2.2	Electrical symbols	6		
1.2.3	Tool symbols	6		
1.2.4	Symbols for certain types of information	7		
1.2.5	Symbols in graphics	7		
1.2.6	Symbols at the device	8		
1.3	Supplementary documentation	9		
1.4	Terms and abbreviations	10		
1.5	Registered trademarks	11		
2	Basic safety instructions	12		
2.1	Requirements for the personnel	12		
2.2	Designated use	12		
2.3	Workplace safety	13		
2.4	Operational safety	13		
2.5	Product safety	13		
2.5.1	CE mark	13		
2.5.2	EAC conformity	13		
2.6	Safety Instructions (XA)	14		
2.6.1	Ex-marking in case of connected FHX50 remote display	16		
3	Product description	17		
3.1	Product design	17		
3.1.1	Levelflex FMP51/FMP52/FMP54/ FMP55	17		
3.1.2	Electronics housing	18		
4	Incoming acceptance and product identification	19		
4.1	Incoming acceptance	19		
4.2	Product identification	19		
4.2.1	Nameplate	20		
5	Storage, Transport	21		
5.1	Storage conditions	21		
5.2	Transport product to the measuring point	21		
6	Mounting	23		
6.1	Mounting requirements	23		
6.1.1	Suitable mounting position	23		
6.1.2	Applications with restricted mounting space	24		
6.1.3	Notes on the mechanical load of the probe	25		
6.1.4	Mounting cladded flanges	26		
6.1.5	Securing the probe	27		
6.1.6	Special mounting conditions	28		
6.2	Mounting the device	32		
6.2.1	Required mounting tools	32		
6.2.2	Mounting the device	32		
6.2.3	Mounting the "Sensor remote" version	32		
6.2.4	Turning the transmitter housing	34		
6.2.5	Turning the display	35		
6.3	Post-installation check	37		
7	Electrical connection	38		
7.1	Connection conditions	38		
7.1.1	Terminal assignment	38		
7.1.2	Cable specification	40		
7.1.3	Device plug connectors	41		
7.1.4	Power supply	42		
7.1.5	Overvoltage protection	42		
7.2	Connecting the measuring device	43		
7.2.1	Opening connection compartment cover	43		
7.2.2	Connecting	44		
7.2.3	Plug-in spring-force terminals	44		
7.2.4	Closing connection compartment cover	45		
7.3	Post-connection check	45		
8	Operation options	47		
8.1	Overview	47		
8.1.1	Local operation	47		
8.1.2	Operation with remote display and operating module FHX50	48		
8.1.3	Remote operation	48		
8.2	Structure and function of the operating menu	50		
8.2.1	Structure of the operating menu	50		
8.2.2	User roles and related access authorization	52		
8.2.3	Data access - Security	52		
8.3	Display and operating module	57		
8.3.1	Display appearance	57		
8.3.2	Operating elements	60		
8.3.3	Entering numbers and text	61		
8.3.4	Opening the context menu	63		
8.3.5	Envelope curve on the display and operating module	64		
9	Integration into a FOUNDATION Fieldbus network	65		
9.1	Device Description (DD)	65		
9.2	Integration into the FOUNDATION Fieldbus network	65		
9.3	Device identification and addressing	65		

9.4	Block model	66	12.8	Configuration of the event behavior according to the FOUNDATION Fieldbus specification FF912	92
9.4.1	Blocks of the device software	66	12.8.1	Groups of events	93
9.4.2	Block configuration when device is delivered	67	12.8.2	Allocation parameters	95
9.5	Assignment of the measured values (CHANNEL) in an AI Block	67	12.8.3	Configurable area	98
9.6	Index tables of Endress+Hauser parameters	68	12.8.4	Transmission of the event messages to the bus	99
9.6.1	Setup Transducer Block	68	12.9	Protection of the settings against unauthorized changes	99
9.6.2	Advanced Setup Transducer Block	69	13	Diagnostics and troubleshooting	100
9.6.3	Display Transducer Block	70	13.1	General trouble shooting	100
9.6.4	Diagnostic Transducer Block	71	13.1.1	General errors	100
9.6.5	Expert Configuration Transducer Block	71	13.1.2	Parametrization errors	101
9.6.6	Expert Information Transducer Block	73	13.2	Diagnostic information on local display	102
9.6.7	Service Sensor Transducer Block	74	13.2.1	Diagnostic message	102
9.6.8	Service Information Transducer Block	75	13.2.2	Calling up remedial measures	104
9.6.9	Data Transfer Transducer Block	75	13.3	Diagnostic event in the operating tool	105
9.7	Methods	76	13.4	Diagnostic messages in the DIAGNOSTIC Transducer Block (TRDDIAG)	106
10	Commissioning via wizard	77	13.5	Diagnostic list	106
11	Commissioning via operating menu	78	13.6	Event logbook	107
11.1	Installation and function check	78	13.6.1	Event history	107
11.2	Setting the operating language	78	13.6.2	Filtering the event logbook	107
11.3	Configuration of an interface measurement	79	13.6.3	Overview of information events	107
11.4	Recording the reference curve	81	13.7	Firmware history	109
11.5	Configuration of the on-site display	82	14	Maintenance	110
11.5.1	Factory settings of the on-site display for interface measurements	82	14.1	Exterior cleaning	110
11.5.2	Adjustment of the on-site display	82	14.2	Cleaning coax probes	110
11.6	Configuration management	83	15	Repairs	111
11.7	Protection of the settings against unauthorized changes	84	15.1	General information on repairs	111
12	Commissioning (block-based operation)	85	15.1.1	Repair concept	111
12.1	Function check	85	15.1.2	Repairs to Ex-approved devices	111
12.2	Block configuration	85	15.1.3	Replacement of an electronics module	111
12.2.1	Preparatory steps	85	15.1.4	Replacement of a device	111
12.2.2	Configuring the Resource Block	85	15.2	Spare parts	112
12.2.3	Configuring the Transducer Blocks	85	15.3	Return	112
12.2.4	Configuring the Analog Input Blocks	86	15.4	Disposal	112
12.2.5	Additional configuration	86	16	Accessories	113
12.3	Scaling of the measured value in an AI Block	86	16.1	Device-specific accessories	113
12.4	Language selection	87	16.1.1	Weather protection cover	113
12.5	Configuration of an interface measurement	87	16.1.2	Mounting bracket for the electronics housing	114
12.6	Configuration of the on-site display	90	16.1.3	Centering star	114
12.6.1	Factory settings of the on-site display for interface measurements	90	16.1.4	Remote display FHX50	115
12.7	Configuration management	90	16.1.5	Overvoltage protection	116
			16.1.6	Bluetooth module for HART devices	117
			16.2	Communication-specific accessories	118
			16.3	Service-specific accessories	118
			16.4	System components	118

17	Operating menu	119
17.1	Overview of the operating menu (display module)	119
17.2	Overview of the operating menu (operating tool)	126
17.3	"Setup" menu	133
17.3.1	"Mapping" wizard	143
17.3.2	"Analog input 1 to 5" submenu	144
17.3.3	"Advanced setup" submenu	146
17.4	"Diagnostics" menu	191
17.4.1	"Diagnostic list" submenu	193
17.4.2	"Event logbook" submenu	194
17.4.3	"Device information" submenu	195
17.4.4	"Measured values" submenu	197
17.4.5	"Analog input 1 to 5" submenu	199
17.4.6	"Data logging" submenu	202
17.4.7	"Simulation" submenu	205
17.4.8	"Device check" submenu	210
17.4.9	"Heartbeat" submenu	212
	Index	213

1 Important document information

1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols

1.2.1 Safety symbols


Symbol	Meaning
	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols

Symbol	Meaning
	Direct current
	Alternating current
	Direct current and alternating current
	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective Earth (PE) A terminal which must be connected to ground prior to establishing any other connections. The ground terminals are situated inside and outside the device: <ul style="list-style-type: none"> ▪ Inner ground terminal: Connects the protective earth to the mains supply. ▪ Outer ground terminal: Connects the device to the plant grounding system.

1.2.3 Tool symbols

Symbol	Meaning
 A0013442	Torx screwdriver
 A0011220	Flat blade screwdriver

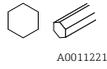Symbol	Meaning
 A0011219	Cross-head screwdriver
 A0011221	Allen key
 A0011222	Hexagon wrench

1.2.4 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation.
	Reference to page.
	Reference to graphic.
	Notice or individual step to be observed.
	Series of steps.
	Result of a step.
	Help in the event of a problem.
	Visual inspection.

1.2.5 Symbols in graphics

Symbol	Meaning
1, 2, 3 ...	Item numbers
	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections
	Hazardous area Indicates a hazardous area.
	Safe area (non-hazardous area) Indicates the non-hazardous area.

1.2.6 Symbols at the device

Symbol	Meaning
	Safety instructions Observe the safety instructions contained in the associated Operating Instructions.
	Temperature resistance of the connection cables Specifies the minimum value of the temperature resistance of the connection cables.

1.3 Supplementary documentation

Document	Purpose and content of the document
Technical Information TI01003F (FMP55)	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions KA01109F (FMP55, FOUNDATION Fieldbus)	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Description of Device Parameters GP01015F (FMP5x, FOUNDATION Fieldbus)	Reference for your parameters The document provides a detailed explanation of each individual parameter in the operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.
Special documentation SD00326F	Functional Safety Manual The document is part of the Operating Instructions and serves as a reference for application-specific parameters and notes.
Special documentation SD01872F	Manual for Heartbeat Verification and Heartbeat Monitoring The document contains descriptions of the additional parameters and technical data which are available with the Heartbeat Verification and Heartbeat Monitoring application packages.

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

1.4 Terms and abbreviations

Term/abbreviation	Explanation
BA	Document type "Operating Instructions"
KA	Document type "Brief Operating Instructions"
TI	Document type "Technical Information"
SD	Document type "Special Documentation"
XA	Document type "Safety Instructions"
PN	Nominal pressure
MWP	Maximum Working Pressure The MWP can also be found on the nameplate.
ToF	Time of Flight
FieldCare	Scalable software tool for device configuration and integrated plant asset management solutions
DeviceCare	Universal configuration software for Endress+Hauser HART, PROFIBUS, FOUNDATION Fieldbus and Ethernet field devices
DTM	Device Type Manager
DD	Device Description for HART communication protocol
ϵ_r (DC value)	Relative dielectric constant
Operating tool	The term "operating tool" is used in place of the following operating software: <ul style="list-style-type: none"> ▪ FieldCare / DeviceCare, for operation via HART communication and PC ▪ SmartBlue (app), for operation using an Android or iOS smartphone or tablet.
BD	Blocking Distance; no signals are analyzed within the BD.
PLC	Programmable Logic Controller
CDI	Common Data Interface
PFS	Pulse Frequency Status (Switching output)
MBP	Manchester Bus Powered
PDU	Protocol Data Unit

1.5 Registered trademarks

FOUNDATION™ Fieldbus

Registered trademark of the FieldComm Group, Austin, Texas, USA

Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Endress+Hauser is under license. Other trademarks and trade names are those of their respective owners.

Apple®

Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Android®

Android, Google Play and the Google Play logo are trademarks of Google Inc.

KALREZ®, VITON®

Registered trademark of DuPont Performance Elastomers L.L.C., Wilmington, USA

TEFLON®

Registered trademark of E.I. DuPont de Nemours & Co., Wilmington, USA

TRI CLAMP®

Registered trademark of Alfa Laval Inc., Kenosha, USA

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Designated use

Application and measured materials

The measuring device described in these Operating Instructions is intended only for level and interface measurement of liquids. Depending on the version ordered the device can also measure potentially explosive, flammable, poisonous and oxidizing materials.

Observing the limit values specified in the "Technical data" and listed in the Operating Instructions and supplementary documentation, the measuring device may be used for the following measurements only:

- ▶ Measured process variable: Level and/or interface
- ▶ Calculated process variable: Volume oder mass in arbitrarily shaped vessels (calculated from the level by the linearization functionality)

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Use the measuring device only for measured materials against which the process-wetted materials are adequately resistant.
- ▶ Observe the limit values in "Technical data".

Incorrect use

The manufacturer is not liable for damage caused by improper or non-designated use.

Verification for borderline cases:

- ▶ For special measured materials and cleaning agents, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of wetted materials, but does not accept any warranty or liability.

Residual risk

The electronics housing and its built-in components such as display module, main electronics module and I/O electronics module may heat to 80 °C (176 °F) during operation through heat transfer from the process as well as power dissipation within the electronics. During operation the sensor may assume a temperature near the temperature of the measured material.

Danger of burns due to heated surfaces!

- ▶ For high process temperatures: Install protection against contact in order to prevent burns.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from the manufacturer only.

Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection, pressure vessel safety):

- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these Instructions.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. It meets general safety standards and legal requirements.

NOTICE

Loss of degree of protection by opening of the device in humid environments

- ▶ If the device is opened in a humid environment, the degree of protection indicated on the nameplate is no longer valid. This may also impair the safe operation of the device.

2.5.1 CE mark

The measuring system meets the legal requirements of the applicable EC guidelines. These are listed in the corresponding EC Declaration of Conformity together with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

2.5.2 EAC conformity

The measuring system meets the legal requirements of the applicable EAC guidelines. These are listed in the corresponding EAC Declaration of Conformity together with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the EAC mark.

2.6 Safety Instructions (XA)

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

Feature 010	Approval	Available for	Feature 020: "Power Supply; Output"				
			A ¹⁾	B ²⁾	C ³⁾	E ^{4)/G⁵⁾}	K ^{6)/L⁷⁾}
BA	ATEX II 1G Ex ia IIC T6 Ga	FMP55	XA00496F	XA01125F	XA01126F	XA00516F	-
BB	ATEX II 1/2G Ex ia IIC T6 Ga/Gb	FMP55	XA00496F	XA01125F	XA01126F	XA00516F	-
BC	ATEX II 1/2G Ex d[ia] IIC T6 Ga/Gb	FMP55	XA00499F	XA00499F	XA00499F	XA00519F	XA01133F
BD	ATEX II 1/3G Ex ic[ia] IIC T6 Ga/Gc	FMP55	XA00497F	XA01127F	XA01128F	XA00517F	-
BG	ATEX II 3G Ex nA IIC T6 Gc	FMP55	XA00498F	XA01130F	XA01131F	XA00518F	XA01132F
BH	ATEX II 3G Ex ic IIC T6 Gc	FMP55	XA00498F	XA01130F	XA01131F	XA00518F	-
BL	ATEX II 1/3G Ex nA[ia] IIC T6 Ga/Gc	FMP55	XA00497F	XA01127F	XA01128F	XA00517F	XA01129F
B2	ATEX II 1/2G Ex ia IIC T6 Ga/Gb, 1/2D Ex ia IIIC Da/Db	FMP55	XA00502F	XA00502F	XA00502F	XA00522F	-
B3	ATEX II 1/2G Ex d[ia] IIC T6 Ga/Gb, 1/2 D Ex t IIIC Da/Db	FMP55	XA00503F	XA00503F	XA00503F	XA00523F	XA01136F
B4	ATEX II 1/2G Ex ia IIC T6 Ga/Gb, Ex d[ia] IIC T6 Ga/Gb	FMP55	XA00500F	XA01134F	XA01135F	XA00520F	-
C2	CSA C/US IS Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex ia	FMP55	XA00530F	XA00530F	XA00530F	XA00571F	XA00530F
C3	CSA C/US XP Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex d	FMP55	XA00529F	XA00529F	XA00529F	XA00570F	XA00529F
FB	FM IS Cl.I,II,III Div.1 Gr.A-G, AEx ia, NI Cl.1 Div.2	FMP55	XA00531F	XA00531F	XA00531F	XA00573F	XA00531F
FD	FM XP Cl.I,II,III Div.1 Gr.A-G, AEx d, NI Cl.1 Div.2	FMP55	XA00532F	XA00532F	XA00532F	XA00572F	XA00532F
GA	EAC Ex ia IIC T6 Ga	FMP55	XA01380F	XA01380F	XA01380F	XA01381F	XA01380F
GB	EAC Ex ia IIC T6 Ga/Gb	FMP55	XA01380F	XA01380F	XA01380F	XA01381F	XA01380F
GC	EAC Ex d[ia] IIC T6 Ga/Gb	FMP55	XA01382F	XA01382F	XA01382F	XA01383F	XA01382F
IA	IEC Ex ia IIC T6 Ga	FMP55	XA00496F	XA01125F	XA01126F	XA00516F	-
IB	IEC Ex ia IIC T6 Ga/Gb	FMP55	XA00496F	XA01125F	XA01126F	XA00516F	-
IC	IEC Ex d[ia] IIC T6 Ga/Gb	FMP55	XA00499F	XA00499F	XA00499F	XA00519F	XA01133F
ID	IEC Ex ic[ia] IIC T6 Ga/Gc	FMP55	XA00497F	XA01127F	XA01128F	XA00517F	-
IG	IEC Ex nA IIC T6 Gc	FMP55	XA00498F	XA01130F	XA01131F	XA00518F	XA01132F
IH	IEC Ex ic IIC T6 Gc	FMP55	XA00498F	XA01130F	XA01131F	XA00518F	-
IL	IEC Ex nA[ia] IIC T6 Ga/Gc	FMP55	XA00497F	XA01127F	XA01128F	XA00517F	XA01129F
I2	IEC Ex ia IIC T6 Ga/Gb, Ex ia IIIC Da/Db	FMP55	XA00502F	XA00502F	XA00502F	XA00522F	-
I3	IEC Ex d [ia] IIC T6 Ga/Gb, Ex t IIIC Da/Db	FMP55	XA00503F	XA00503F	XA00503F	XA00523F	XA01136F
I4	IEC Ex II 1/2G Ex ia IIC T6 Ga/Gb, Ex d[ia] IIC T6 Ga/Gb	FMP55	XA00500F	XA01134F	XA01135F	XA00520F	-
JC	JPN Ex d[ia] IIC T4 Ga/Gb	FMP55	-	-	XA01718F	-	-
KA	KC Ex ia IIC T6 Ga	FMP55	XA01169F	-	XA01169F	-	-
KB	KC Ex ia IIC T6 Ga/Gb	FMP55	XA01169F	-	XA01169F	-	-
KC	KC Ex d[ia] IIC T6	FMP55	-	-	XA01170F	-	-
MA	INMETRO Ex ia IIC T6 Ga	FMP55	XA01038F	XA01038F	XA01038F	-	XA01038F
MC	INMETRO Ex d[ia] IIC T6 Ga/Gb	FMP55	XA01041F	XA01041F	XA01041F	-	XA01041F
MH	INMETRO Ex ic IIC T6 Gc	FMP55	XA01040F	XA01040F	XA01040F	-	XA01040F
NA	NEPSI Ex ia IIC T6 Ga	FMP55	XA00634F	XA00634F	XA00634F	XA00640F	XA00634F
NB	NEPSI Ex ia IIC T6 Ga/Gb	FMP55	XA00634F	XA00634F	XA00634F	XA00640F	XA00634F
NC	NEPSI Ex d[ia] IIC T6 Ga/Gb	FMP55	XA00636F	XA00636F	XA00636F	XA00642F	XA00636F

Feature 010	Approval	Available for	Feature 020: "Power Supply; Output"				
			A ¹⁾	B ²⁾	C ³⁾	E ⁴⁾ /G ⁵⁾	K ⁶⁾ /L ⁷⁾
NG	NEPSI Ex nA II T6 Gc	FMP55	XA00635F	XA00635F	XA00635F	XA00641F	XA00635F
NH	NEPSI Ex ic IIC T6 Gc	FMP55	XA00635F	XA00635F	XA00635F	XA00641F	XA00635F
N2	NEPSI Ex ia IIC T6 Ga/Gb, Ex iaD 20/21 T85...90°C	FMP55	XA00638F	XA00638F	XA00638F	XA00644F	XA00638F
N3	NEPSI Ex d[ia] IIC T6 Ga/Gb, DIP A20/21 T85...90°C IP66	FMP55	XA00639F	XA00639F	XA00639F	XA00645F	XA00639F
8A	FM/CSA IS+XP Cl.I,II,III Div.1 Gr.A-G	FMP55	XA00531F XA00532F	XA00531F XA00532F	XA00531F XA00532F	XA00572F XA00573F	XA00531F XA00532F

- 1) A: 2-wire; 4-20mA HART
- 2) B: 2-wire; 4-20mA HART, switch output
- 3) C: 2-wire; 4-20mA HART, 4-20mA
- 4) E: 2-wire; FOUNDATION Fieldbus, switch output
- 5) G: 2-wire; PROFIBUS PA, switch output
- 6) K: 4-wire 90-253VAC; 4-20mA HART
- 7) L: 4-wire 10,4-48VDC; 4-20mA HART



For certified devices the relevant Safety Instructions (XA) are indicated on the nameplate.

2.6.1 Ex-marking in case of connected FHX50 remote display

If the device is prepared for the remote display FHX50 (product structure: feature 030: "Display, Operation", option L or M), the Ex marking of some certificates changes according to the following table¹⁾:


Feature 010 ("Approval")	Feature 030 ("Display, Operation")	Ex-marking
BG	L, M or N	ATEX II 3G Ex nA [ia Ga] IIC T6 Gc
BH	L, M or N	ATEX II 3G Ex ic [ia Ga] IIC T6 Gc
B3	L, M or N	ATEX II 1/2G Ex d [ia] IIC T6 Ga/Gb, ATEX II 1/2D Ex ta [ia Db] IIIC Txx°C Da/Db
IG	L, M or N	IECEX Ex nA [ia Ga] IIC T6 Gc
IH	L, M or N	IECEX Ex ic [ia Ga] IIC T6 Gc
I3	L, M or N	IECEX Ex d [ia] IIC T6 Ga/Gb, IECEX Ex ta [ia Db] IIIC Txx°C Da/Db

1) The marking of certificates not mentioned in this table are not affected by the FHX50.

3 Product description

3.1 Product design

3.1.1 Levelflex FMP51/FMP52/FMP54/FMP55

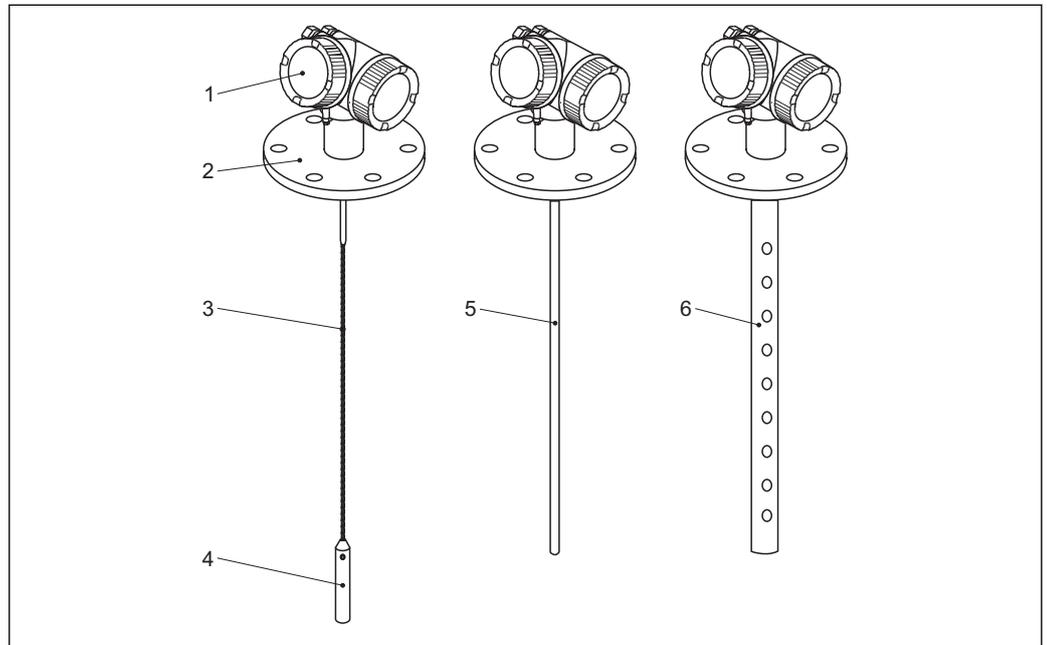


A0012399

1 Design of the Levelflex

- 1 Electronics housing
- 2 Process connection (here as an example: flange)
- 3 Rope probe
- 4 End-of-probe weight
- 5 Rod probe
- 6 Coax probe

3.1.2 Electronics housing

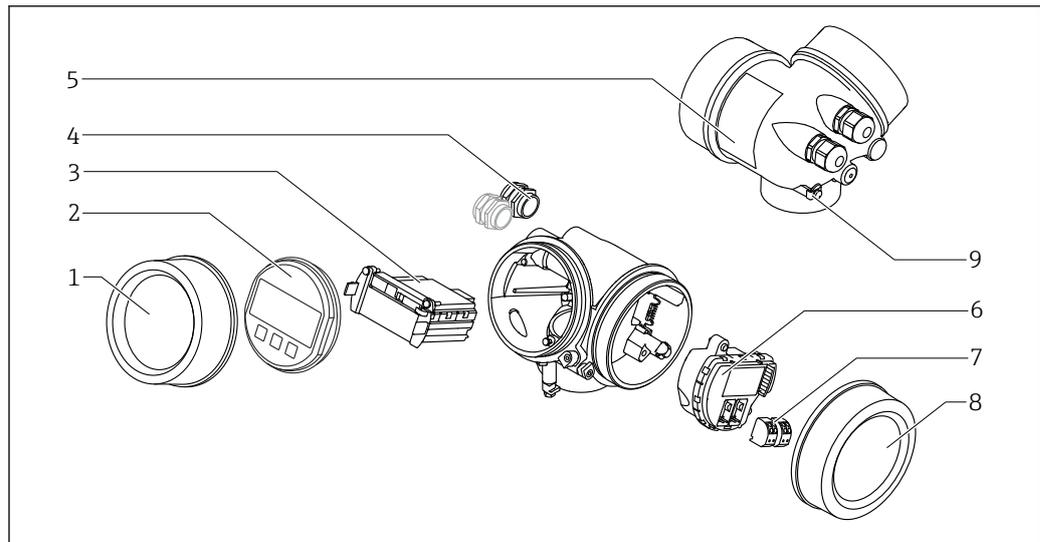

A0012422

2 Design of the electronics housing

- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands (1 or 2, depending on instrument version)
- 5 Nameplate
- 6 I/O electronics module
- 7 Terminals (pluggable spring terminals)
- 8 Connection compartment cover
- 9 Grounding terminal

4 Incoming acceptance and product identification

4.1 Incoming acceptance

Upon receipt of the goods check the following:

- Are the order codes on the delivery note and the product sticker identical?
- Are the goods undamaged?
- Do the nameplate data match the ordering information on the delivery note?
- If required (see nameplate): Are the Safety Instructions (XA) present?




If one of these conditions is not satisfied, contact your Endress+Hauser Sales Center.

4.2 Product identification

The following options are available for identification of the measuring device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

4.2.1 Nameplate

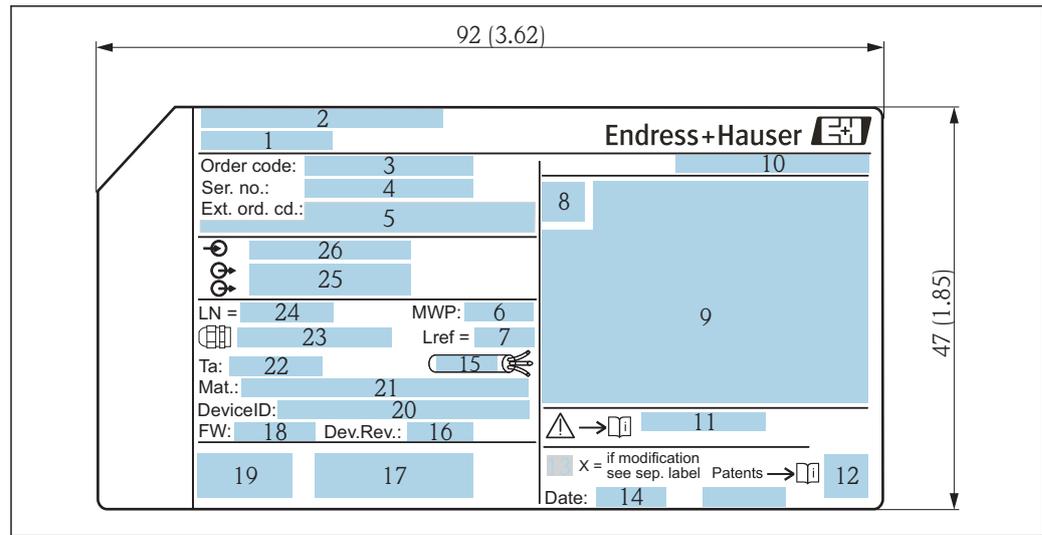

 3 Nameplate of the Levelflex; Dimensions: mm (in)

- 1 Device name
- 2 Address of manufacturer
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Process pressure
- 7 Gas phase compensation: reference distance
- 8 Certificate symbol
- 9 Certificate and approval relevant data
- 10 Degree of protection: e.g. IP, NEMA
- 11 Document number of the Safety Instructions: e.g. XA, ZD, ZE
- 12 2-D matrix code (QR code)
- 13 Modification mark
- 14 Manufacturing date: year-month
- 15 Permitted temperature range for cable
- 16 Device revision (Dev.Rev.)
- 17 Additional information about the device version (certificates, approvals, communication): e.g. SIL, PROFIBUS
- 18 Firmware version (FW)
- 19 CE mark, C-Tick
- 20 DeviceID
- 21 Material in contact with process
- 22 Permitted ambient temperature (T_a)
- 23 Size of the thread of the cable glands
- 24 Length of probe
- 25 Signal outputs
- 26 Operating voltage

 Only 33 digits of the extended order code can be indicated on the nameplate. If the extended order code exceeds 33 digits, the rest will not be shown. However, the complete extended order code can be viewed in the operating menu of the device in the **Extended order code 1 to 3** parameter.

5 Storage, Transport

5.1 Storage conditions

- Permitted storage temperature: -40 to +80 °C (-40 to +176 °F)
- Use the original packaging.


5.2 Transport product to the measuring point

⚠ WARNING

Housing or probe may be damaged or break away.

Risk of injury!

- ▶ Transport the measuring device to the measuring point in its original packaging or at the process connection.
- ▶ Do not fasten lifting devices (hoisting slings, lifting eyes etc.) at the housing or the probe but at the process connection. Take into account the mass center of the device in order to avoid unintended tilting.
- ▶ Comply with the safety instructions, transport conditions for devices over 18kg (39.6lbs) (IEC61010).

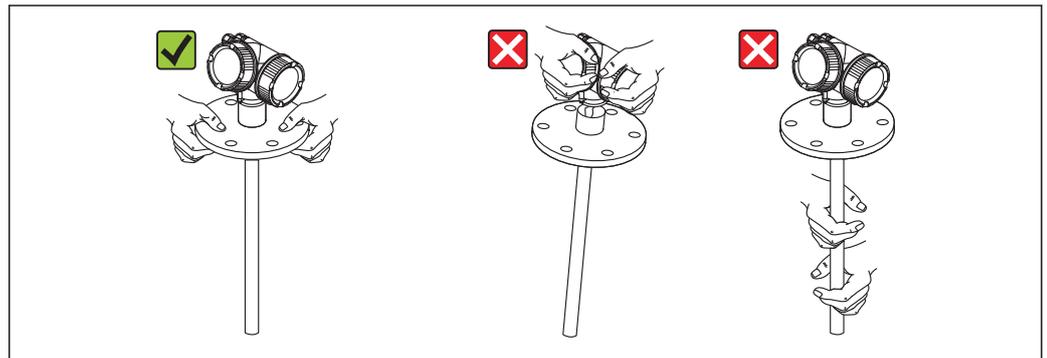


A0013920

NOTICE

Shipping lock for FMP5x with coax probe

- ▶ For FMP5x with coax probe the coax tube is not fixed permanently to the electronics housing. For shipping and transport it is secured with two cable ties. In order to prevent the spacer at the probe rod from moving along the probe, these cable ties must not be loosened when transporting and mounting the device. They may only be undone directly before screwing the device flange to the process connection.

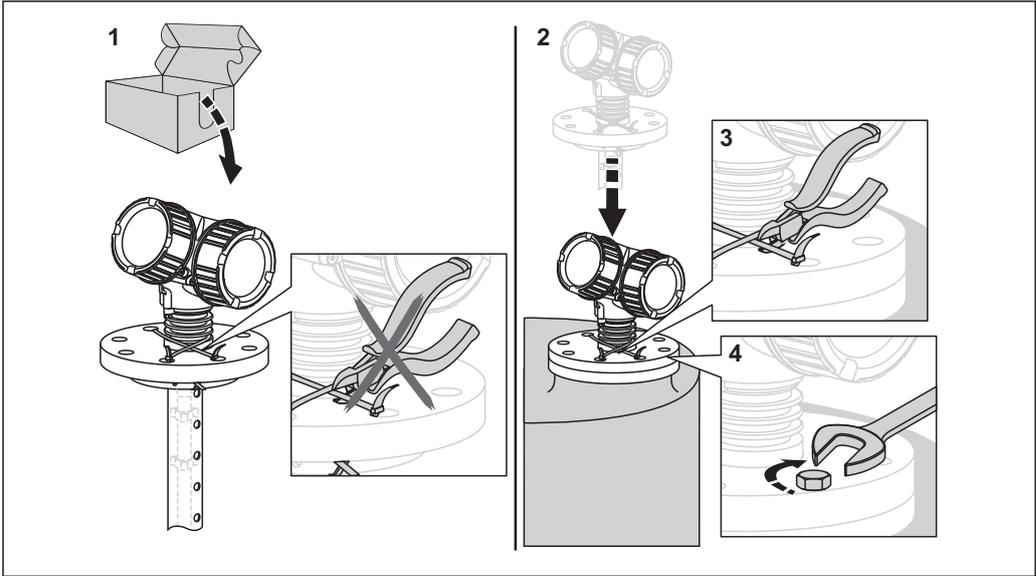


A0015471

6 Mounting

6.1 Mounting requirements

6.1.1 Suitable mounting position

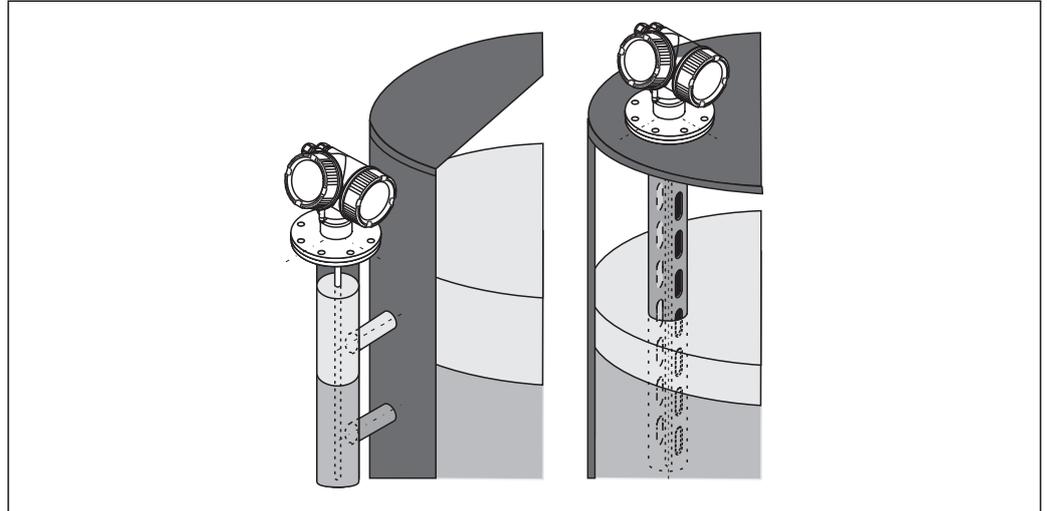

4 Mounting position of Levelflex FMP55


A0011281

- Rod probes / rope probes: must be mounted in a stilling well or bypass → 28.
- Coax probes: can be mounted at an arbitrary distance from the wall of the vessel.
- When mounting in the open, a weather protection cover may be installed to protect the device against extreme weather conditions.
- Minimum distance from the end of probe to the bottom of the vessel: 10 mm (0.4 in)

6.1.2 Applications with restricted mounting space

Mounting with remote sensor

The device version with a remote sensor is suited for applications with restricted mounting space. In this case the electronics housing is mounted at a separate position from which it is easier accessible.

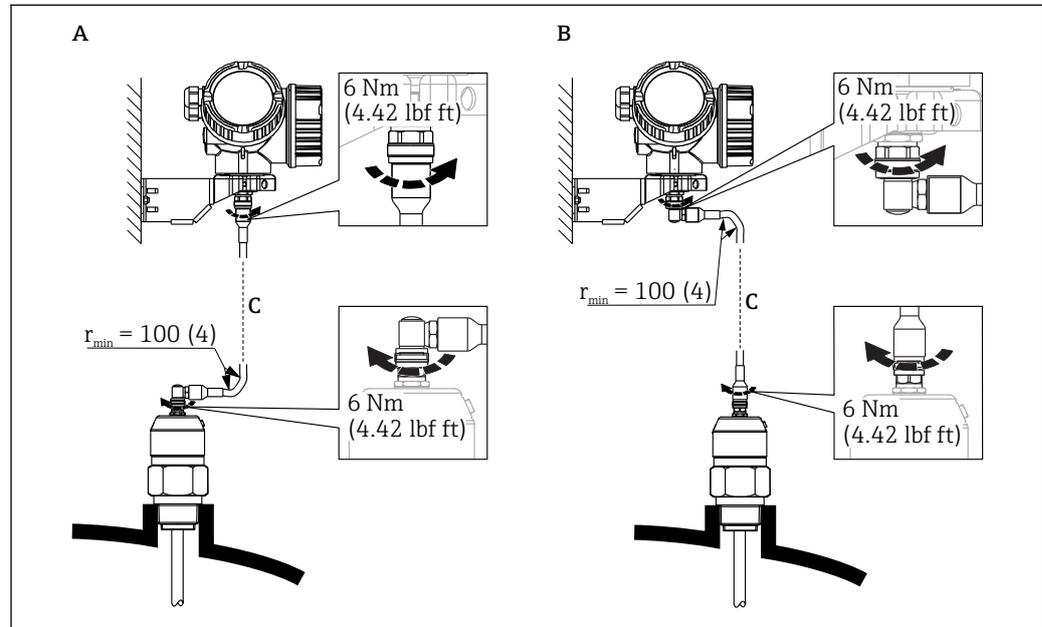

- A Angled plug at the probe
- B Angled plug at the electronics housing
- C Length of the remote cable as ordered

- Product structure, feature 600 "Probe Design":
Option MB "Sensor remote, 3m/9ft cable"
- The remote cable is supplied with these device versions
Minimum bending radius: 100 mm (4 inch)
- A mounting bracket for the electronics housing is supplied with these device versions.
Mounting options:
 - Wall mounting
 - Pipe mounting; diameter: 42 to 60 mm (1-1/4 to 2 inch)
- The connection cable has got one straight and one angled plug (90°). Depending on the local conditions the angled plug can be connected at the probe or at the electronics housing.
- i** Probe, electronics and connection cable are adjusted to match each other. They are marked by a common serial number. Only components with the same serial number shall be connected to each other.

6.1.3 Notes on the mechanical load of the probe

Tensile load limit of rope probes

Sensor	Feature 060	Probe	Tensile load limit [kN]
FMP55	NA, ND	Rope 4mm (1/6") PFA>316	2

Bending strength of rod probes

Sensor	Feature 060	Probe	Bending strength [Nm]
FMP55	CA, CB	Rod 16mm (0.63") PFA>316L	30

Bending strength of coax probes

Sensor	Feature 060	Process connection	Probe	Bending strength [Nm]
FMP55	UA, UB	Flange	Coax 316L, Ø 42,4 mm	300

6.1.4 Mounting cladded flanges


-  Use flange screws according to the number of flange holes.
 -  Tighten the screws with the required torque (see table).
 -  Retighten the screws after 24 hours or after the first temperature cycle.
 -  Depending on process pressure and process temperature check and retighten the screws at regular intervals.
-  Usually, the PTFE flange cladding also serves as a seal between the nozzle and the device flange.

Flange size	Number of screws	Recommended torque [Nm]	
		minimum	maximum
EN			
DN40/PN40	4	35	55
DN50/PN16	4	45	65
DN50/PN40	4	45	65
DN80/PN16	8	40	55
DN80/PN40	8	40	55
DN100/PN16	8	40	60
DN100/PN40	8	55	80
DN150/PN16	8	75	115
DN150/PN40	8	95	145
ASME			
1½"/150lbs	4	20	30
1½"/300lbs	4	30	40
2"/150lbs	4	40	55
2"/300lbs	8	20	30
3"/150lbs	4	65	95
3"/300lbs	8	40	55
4"/150lbs	8	45	70
4"/300lbs	8	55	80
6"/150lbs	8	85	125
6"/300lbs	12	60	90
JIS			
10K 40A	4	30	45
10K 50A	4	40	60
10K 80A	8	25	35
10K 100A	8	35	55
10K 100A	8	75	115

6.1.5 Securing the probe

Securing coax probes

For WHG approvals: For probe lengths ≥ 3 m (10 ft) a support is required.

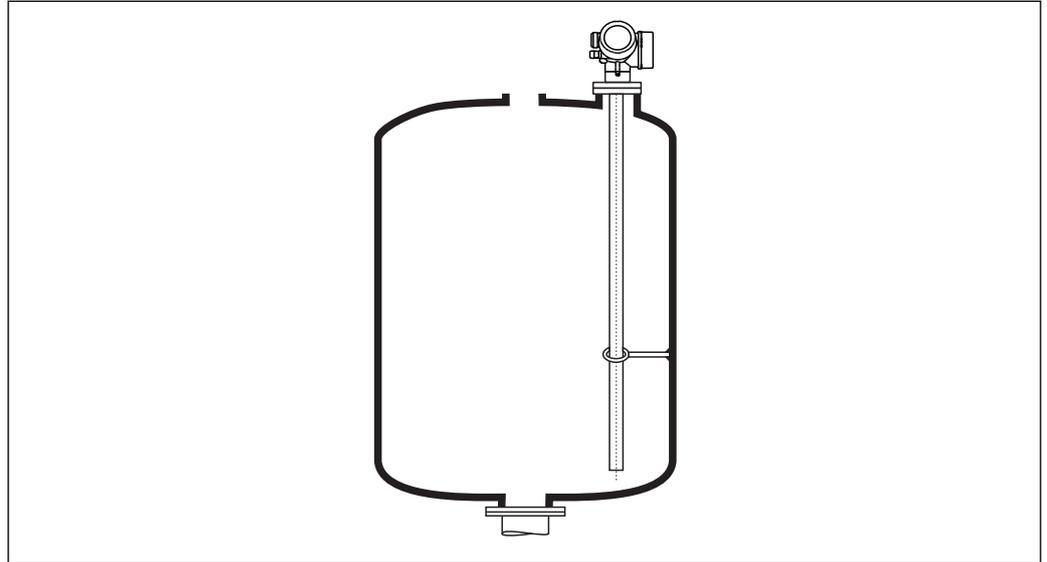


A0012608

Coax probes can be supported at any point of the outer tube.

6.1.6 Special mounting conditions

Bypasses and stilling wells

i In bypass and stilling well applications it is recommended to use a centering disks or stars.

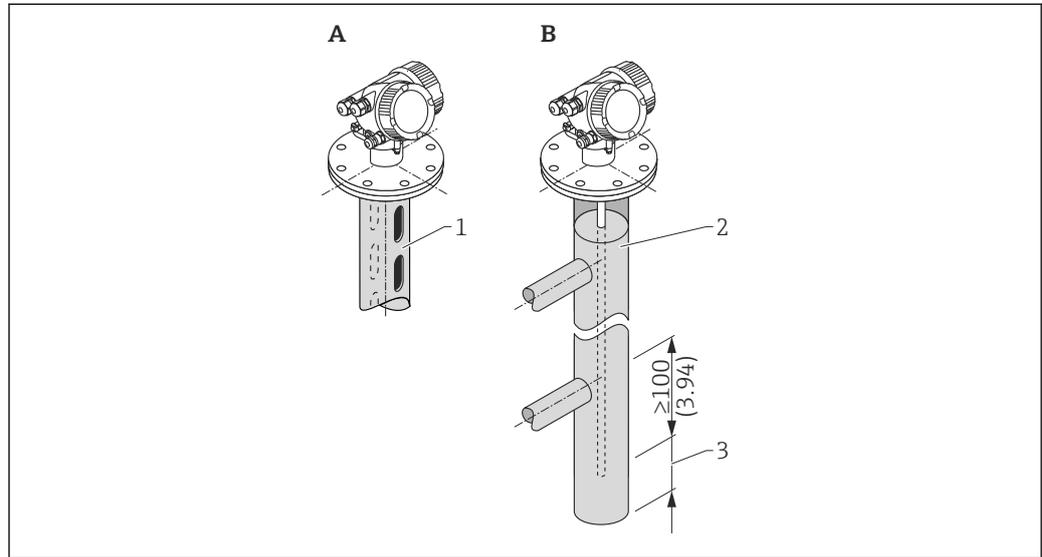

A0014129

- 1 Mounting in a stilling well
- 2 Mounting in a bypass
- 3 Minimum distance between end of probe and lower edge of the bypass; see table below

Minimum distance between end of probe and lower edge of the bypass

Type of probe	Minimum distance
Rope	10 mm (0.4 in)
Rod	10 mm (0.4 in)
Coax	10 mm (0.4 in)

- Pipe diameter: > 40 mm (1.6") for rod probes
- Rod probe installation can take place up to a diameter size of 150 mm (6 in). In the event of larger diameters, a coax probe is recommended.
- Side disposals, holes or slits and welded joints that protrude up to approx. 5 mm (0.2") inwards do not influence the measurement.
- The pipe may not exhibit any steps in diameter.
- The probe must be 100 mm longer than the lower disposal.

- Within the measuring range, the probe must not get into contact with the pipe wall. If necessary, secure the probe by retaining or tensioning. All rope probes are prepared for tensioning in containers (tensioning weight with anchor hole).
- Within the measuring range, the probe must not get into contact with the pipe wall. If necessary, use a PFA centering star (see feature 610 of the product structure). The spacer is also available as an accessory: →  113.
- Coax probes can always be applied if there is enough mounting space.


 For bypasses with condensate formation (water) and a medium with low dielectric constant (e.g. hydrocarbons):

In the course of time the bypass is filled with condensate up to the lower disposal and for low levels the the level echo is superimposed by the condensate echo. Thus in this range the condensate level is measured instead of the correct level. Only higher levels are measured correctly. To prevent this, position the lower disposal 100 mm (4 in) below the lowest level to be measured and apply a metallic centering disk at the height of the lower edge of the lower disposal.

 With heat insulated tanks the bypass should also be insulated in order to prevent condensate formation.

 For information on bypass solutions from Endress+Hauser please contact your Endress+Hauser sales representative.

Underground tanks

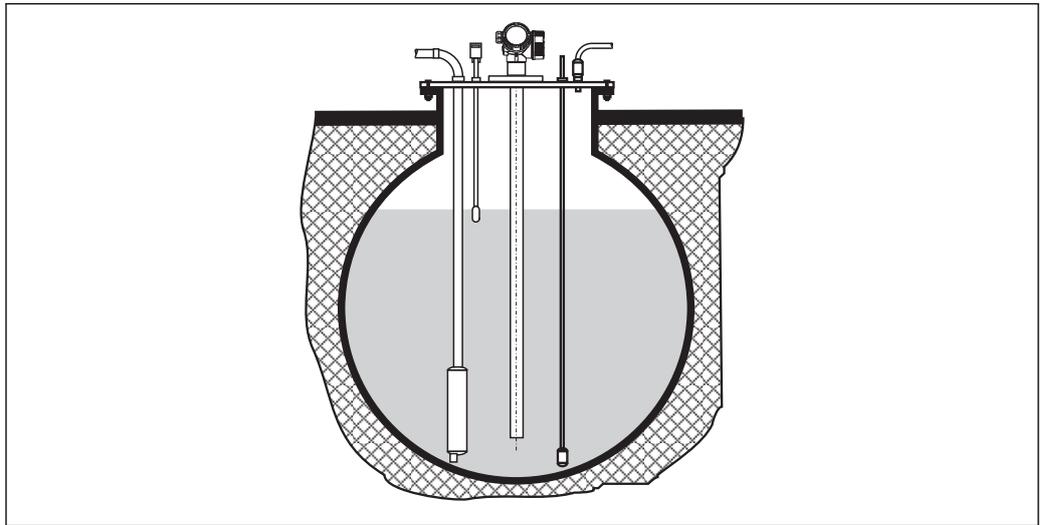

A0014142


Use a coax probe for nozzles with large diameters in order to avoid reflections at the nozzle wall.

Non-metallic vessels

When mounting Levelflex in a non-metallic vessel, use a coax probe.

Vessels with heat insulation

i If process temperatures are high, the device must be included in normal tank insulation to prevent the electronics heating up as a result of heat radiation or convection. The insulation may not exceed beyond the points labeled "MAX" in the drawings.

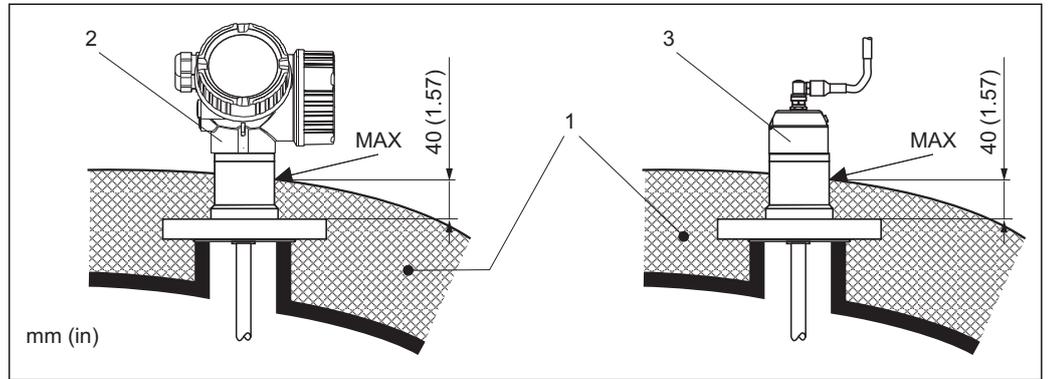

5 Process connection with flange - FMP55

- 1 Tank insulation
- 2 Compact device
- 3 Sensor remote (feature 600)

6.2 Mounting the device

6.2.1 Required mounting tools

- For flanges and other process connections: appropriate mounting tools
- To turn the housing: Hexagonal wrench 8 mm

6.2.2 Mounting the device

Flange mounting


If a seal is used, be sure to use unpainted metal bolts to ensure good electrical contact between probe flange and process flange.

Mounting rope probes

NOTICE

Electrostatic discharges may damage the electronics.

- ▶ Earth the housing before lowering the rope into the vessel.

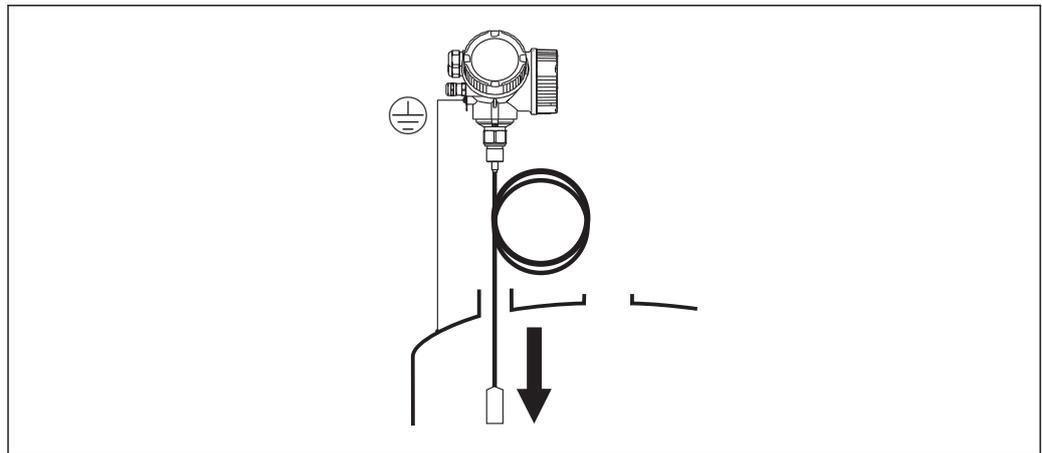

A0012852

When lowering the rope probe into the vessel, observe the following:

- Uncoil rope and lower it slowly and carefully into the vessel.
- Do not kink the rope.
- Avoid any backlash, since this might damage the probe or the vessel fittings.

6.2.3 Mounting the "Sensor remote" version

i This section is only valid for devices of the version "Probe Design" = "Sensor remote" (feature 600, option MB/MC/MD).

For the version "Probe design" = "Sensor remote" the following is supplied:

- The probe with the process connection
- The electronics housing
- The mounting bracket for wall or pipe mounting of the electronics housing
- The connection cable (length as ordered). The cable has got one straight and one angled plug (90°). Depending on the local conditions the angled plug can be connected at the probe or at the electronics housing.


⚠ CAUTION

The plugs of the connection cable may be damaged by mechanical stress.

- ▶ Mount the probe and the electronics housing tightly before connecting the cable.
- ▶ Lay the cable such that it is not exposed to mechanical stress. Minimum bending radius: 100 mm (4").
- ▶ When connecting the cable: Connect the straight plug before the angled one. Torque for both coupling nuts: 6 Nm.

- i** Probe, electronics and connection cable are adjusted to match each other. They are marked by a common serial number. Only components with the same serial number shall be connected to each other.
- i** If the measuring point is exposed to strong vibrations, an additional locking compound (e.g. Loctite 243) can be applied at the plug connectors.

Mounting the electronics housing

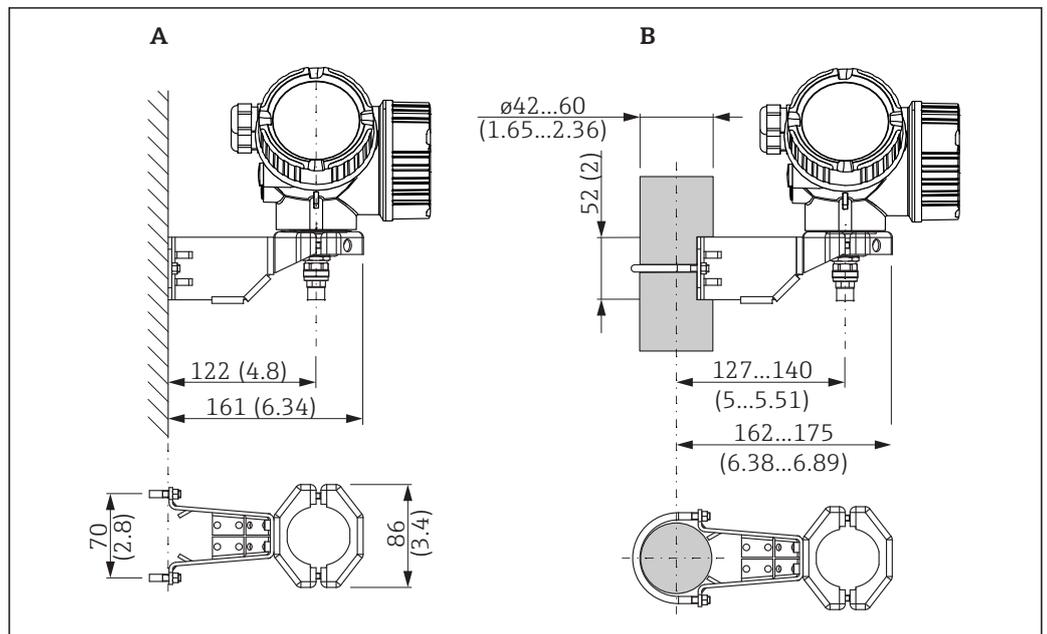


6 Mounting the electronics housing using the mounting bracket; dimensions: mm (in)

- A Wall mounting
- B Pipe mounting

Connecting the cable

Required tools:

Open-end wrench 18AF

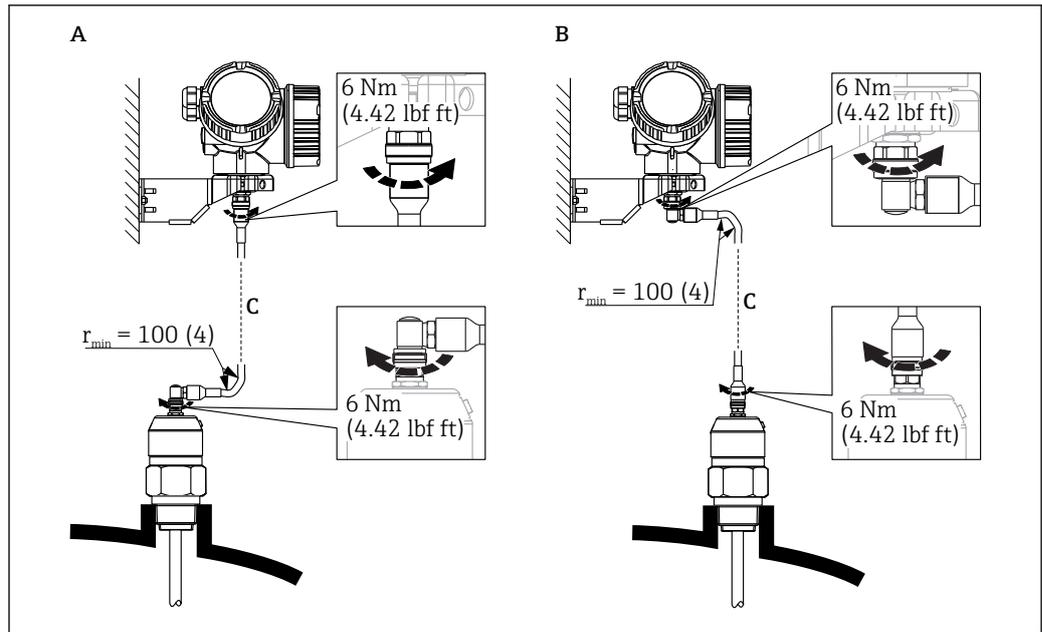


A0014794

7 Connecting the cable. There are the following possibilities:

- A Angled plug at the probe
- B Angled plug at the electronics housing
- C Length of the remote cable as ordered

6.2.4 Turning the transmitter housing

To provide easier access to the connection compartment or display module, the transmitter housing can be turned:

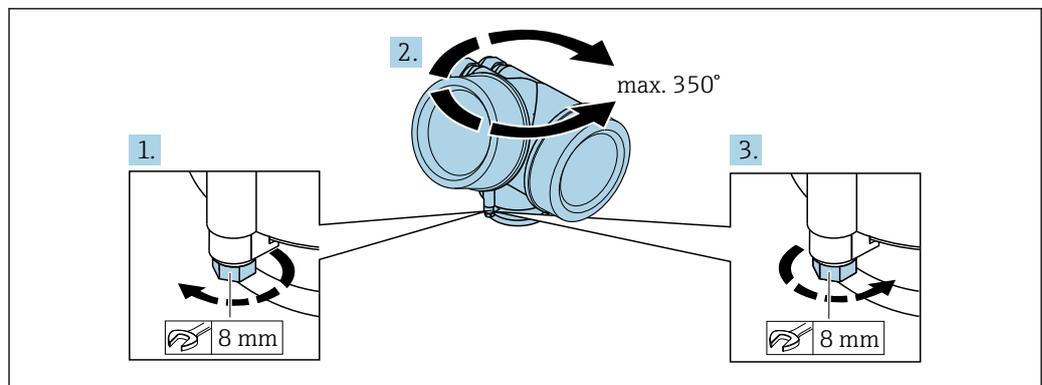


A0032242

1. Unscrew the securing screw using an open-ended wrench.
2. Rotate the housing in the desired direction.
3. Tighten the securing screw (1.5 Nm for plastic housing; 2.5 Nm for aluminum or stainless steel housing).


6.2.5 Turning the display

Opening cover

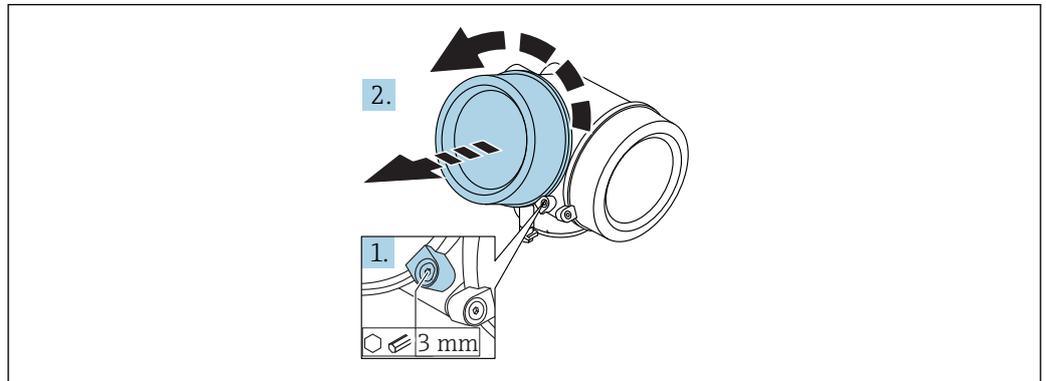


1. Loosen the screw of the securing clamp of the electronics compartment cover using an Allen key (3 mm) and turn the clamp 90 ° counterclockwise.
2. Unscrew cover and check lid gasket, replace if necessary.

Turning the display module

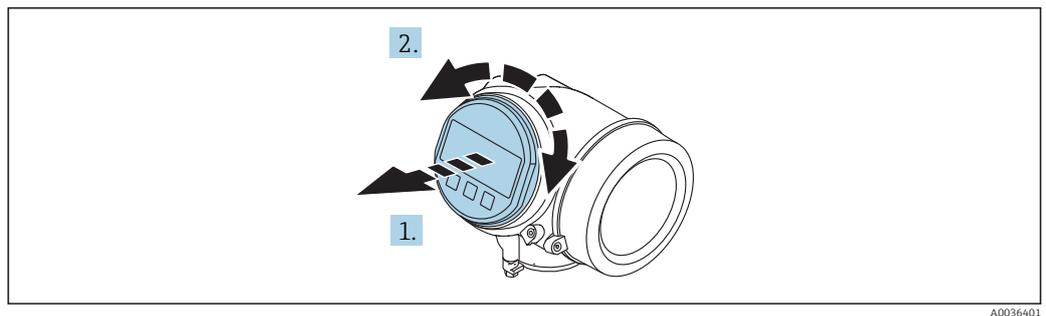

1. Pull out the display module with a gentle rotational movement.
2. Rotate the display module to the desired position: max. $8 \times 45^\circ$ in each direction.
3. Feed the coiled cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.

Closing electronics compartment cover

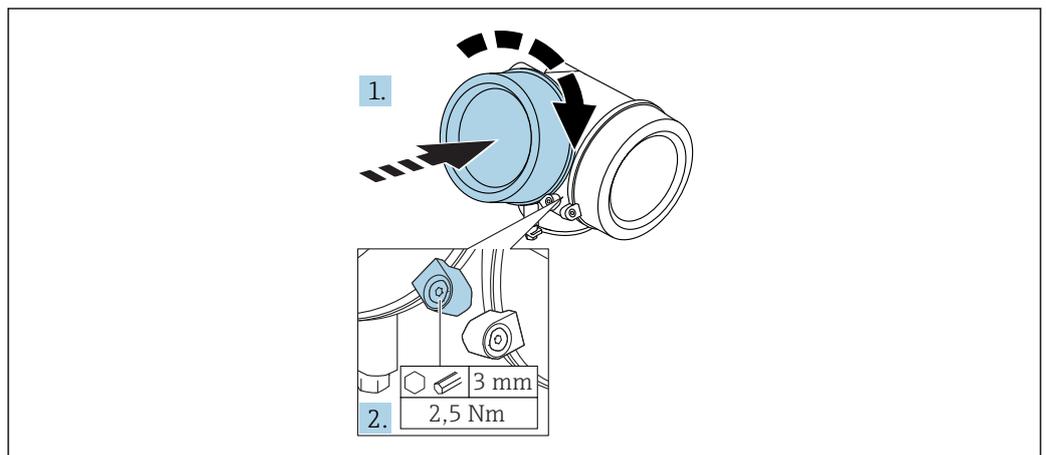

1. Screw back firmly electronics compartment cover.
2. Turning securing clamp 90 ° clockwise and tighten the clamp with 2.5 Nm using the Allen key (3 mm).

6.3 Post-installation check


<input type="radio"/>	Is the device undamaged (visual inspection)?
<input type="radio"/>	Does the device conform to the measuring point specifications? For example: <ul style="list-style-type: none">■ Process temperature■ Process pressure (refer to the chapter on "Material load curves" of the "Technical Information" document)■ Ambient temperature range■ Measuring range
<input type="radio"/>	Are the measuring point identification and labeling correct (visual inspection)?
<input type="radio"/>	Is the device adequately protected from precipitation and direct sunlight?
<input type="radio"/>	Are the securing screw and securing clamp tightened securely?

7 Electrical connection

7.1 Connection conditions

7.1.1 Terminal assignment

Terminal assignment 4-wire: 4-20 mA HART (90 to 253 V_{AC})

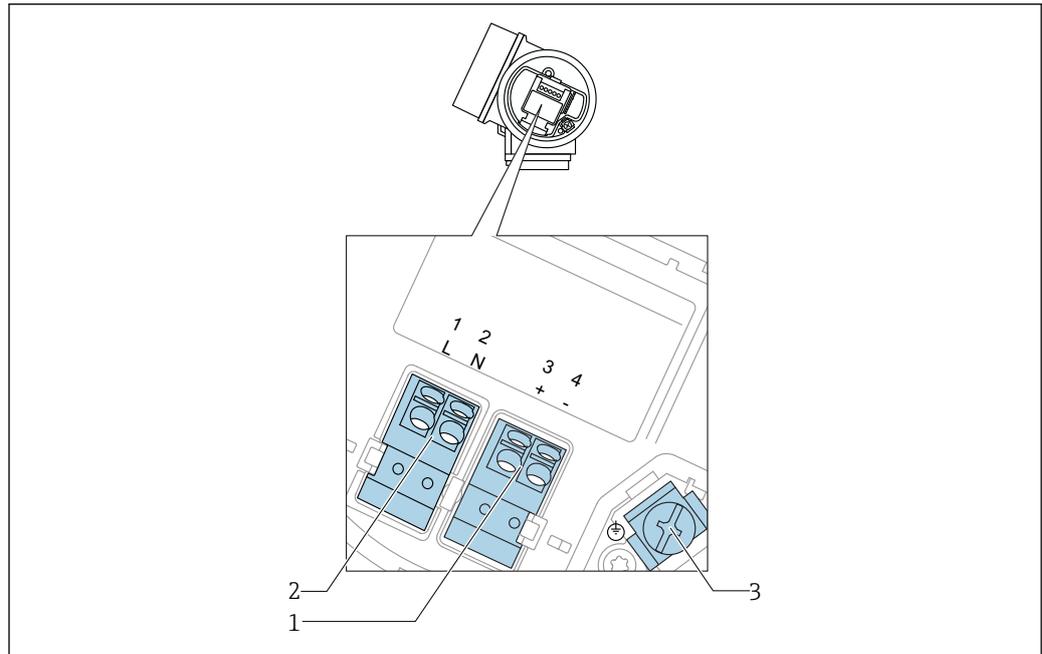

A0036519

8 Terminal assignment 4-wire: 4-20 mA HART (90 to 253 V_{AC})


- 1 Connection 4-20 mA HART (active): terminals 3 and 4
- 2 Connection supply voltage: terminals 1 and 2
- 3 Terminal for cable screen

CAUTION

To ensure electrical safety:

- ▶ Do not disconnect the protective connection.
 - ▶ Disconnect the supply voltage before disconnecting the protective earth.
- i** Connect protective earth to the internal ground terminal (3) before connecting the supply voltage. If necessary, connect the potential matching line to the external ground terminal.
 - i** In order to ensure electromagnetic compatibility (EMC): Do **not** only ground the device via the protective earth conductor of the supply cable. Instead, the functional grounding must also be connected to the process connection (flange or threaded connection) or to the external ground terminal.
 - i** An easily accessible power switch must be installed in the proximity of the device. The power switch must be marked as a disconnector for the device (IEC/EN61010).

Terminal assignment PROFIBUS PA / FOUNDATION Fieldbus

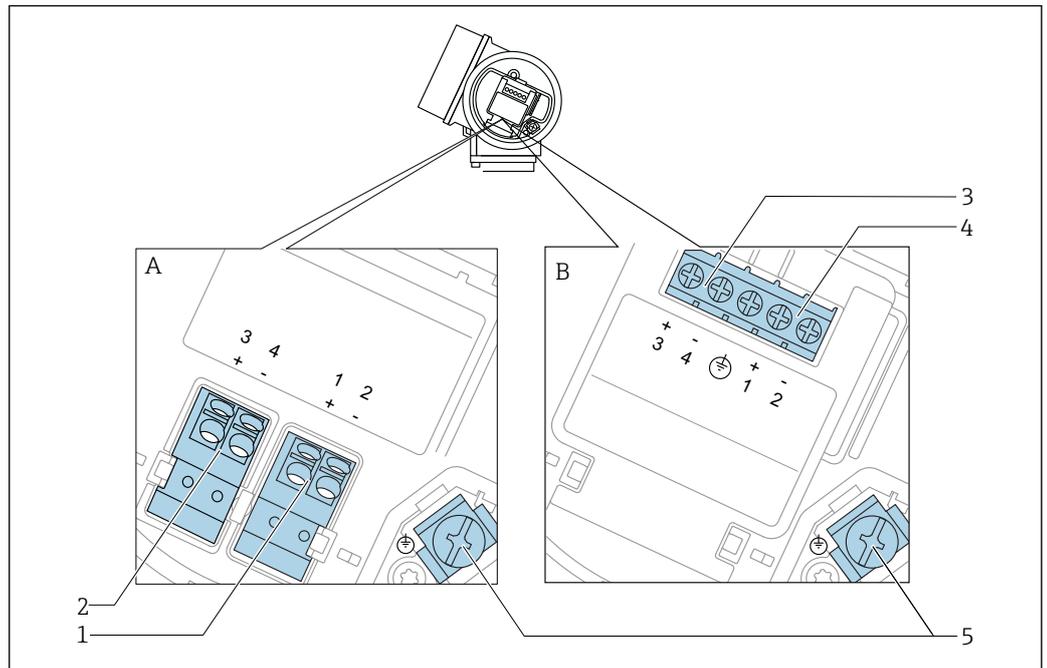

A0036500

9 Terminal assignment PROFIBUS PA / FOUNDATION Fieldbus

A Without integrated overvoltage protection

B With integrated overvoltage protection

1 Connection PROFIBUS PA / FOUNDATION Fieldbus: terminals 1 and 2, without integrated overvoltage protection


2 Connection switch output (Open Collector): terminals 3 and 4, without integrated overvoltage protection

3 Connection switch output (Open Collector): terminals 3 and 4, with integrated overvoltage protection

4 Connection PROFIBUS PA / FOUNDATION Fieldbus: terminals 1 and 2, with integrated overvoltage protection

5 Terminal for cable screen

Block diagram PROFIBUS PA / FOUNDATION Fieldbus

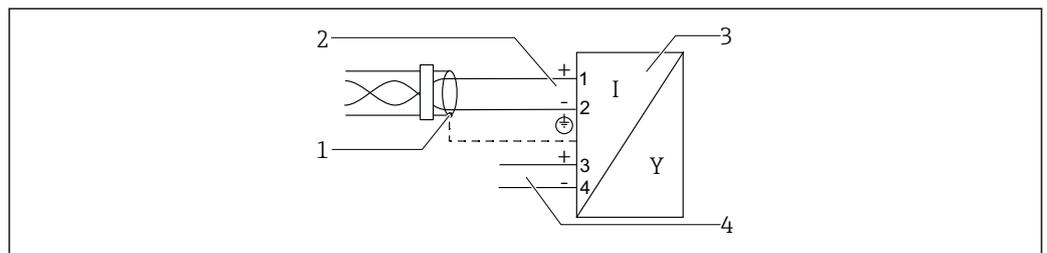

A0036530

10 Block diagram PROFIBUS PA / FOUNDATION Fieldbus



1 Cable screen; observe cable specifications

2 Connection PROFIBUS PA / FOUNDATION Fieldbus

3 Measuring device

4 Switch output (open collector)

Connection examples for the switch output

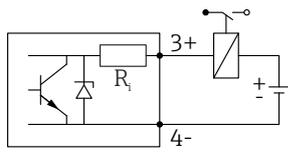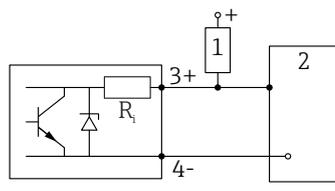 <p>11 Connection of a relay</p> <p>Suitable relays (examples):</p> <ul style="list-style-type: none"> ▪ Solid-state relay: Phoenix Contact OV-24DC/480AC/5 with mounting rail connector UMK-1 OM-R/AMS ▪ Electromechanical relay: Phoenix Contact PLC-RSC-12DC/21 	 <p>12 Connection of a digital input</p> <p>1 Pull-up resistor 2 Digital input</p>
--	--

i For optimum interference immunity we recommend to connect an external resistor (internal resistance of the relay or Pull-up resistor) of $< 1\ 000\ \Omega$.

7.1.2 Cable specification

▪ **Devices without integrated overvoltage protection**

Pluggable spring-force terminals for wire cross-sections 0.5 to $2.5\ \text{mm}^2$ (20 to 14 AWG)

▪ **Devices with integrated overvoltage protection**

Screw terminals for wire cross-sections 0.2 to $2.5\ \text{mm}^2$ (24 to 14 AWG)

▪ For ambient temperature $T_U \geq 60\ ^\circ\text{C}$ ($140\ ^\circ\text{F}$): use cable for temperature $T_U + 20\ \text{K}$.

FOUNDATION Fieldbus


Endress+Hauser recommends using twisted, shielded two-wire cables.

i For further information on the cable specifications, see Operating Instructions BA00013S "FOUNDATION Fieldbus Overview", FOUNDATION Fieldbus Guideline and IEC 61158-2 (MBP).


7.1.3 Device plug connectors

i For the versions with fieldbus plug connector (M12 or 7/8"), the signal line can be connected without opening the housing.

Pin assignment of the M12 plug connector

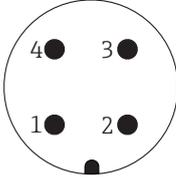 <p style="text-align: right; font-size: small;">A0011175</p>	Pin	Meaning
	1	Signal +
	2	not connected
	3	Signal -
	4	Ground

Pin assignment of the 7/8" plug connector

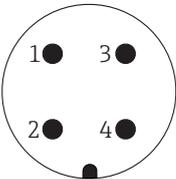 <p style="text-align: right; font-size: small;">A0011176</p>	Pin	Meaning
	1	Signal -
	2	Signal +
	3	Not connected
	4	Screen

7.1.4 Power supply

PROFIBUS PA, FOUNDATION Fieldbus

"Power supply; Output" ¹⁾	"Approval" ²⁾	Terminal voltage
E: 2-wire; FOUNDATION Fieldbus, switch output G: 2-wire; PROFIBUS PA, switch output	<ul style="list-style-type: none"> ▪ Non-Ex ▪ Ex nA ▪ Ex nA[ia] ▪ Ex ic ▪ Ex ic[ia] ▪ Ex d[ia] / XP ▪ Ex ta / DIP ▪ CSA GP 	9 to 32 V ³⁾
	<ul style="list-style-type: none"> ▪ Ex ia / IS ▪ Ex ia + Ex d[ia] / IS + XP 	9 to 30 V ³⁾

- 1) Feature 020 of the product structure
- 2) Feature 010 of the product structure
- 3) Input voltages up to 35 V will not spoil the device.

Polarity sensitive	No
FISCO/FNICO compliant according to IEC 60079-27	Yes

7.1.5 Overvoltage protection

If the measuring device is used for level measurement in flammable liquids which requires the use of overvoltage protection according to DIN EN 60079-14, standard for test procedures 60060-1 (10 kA, pulse 8/20 µs), an overvoltage protection module has to be installed.

Integrated overvoltage protection module

An integrated overvoltage protection module is available for 2-wire HART as well as PROFIBUS PA and FOUNDATION Fieldbus devices.

Product structure: Feature 610 "Accessory mounted", option NA "Overvoltage protection".

Technical data	
Resistance per channel	2 × 0.5 Ω max.
Threshold DC voltage	400 to 700 V
Threshold impulse voltage	< 800 V
Capacitance at 1 MHz	< 1.5 pF
Nominal arrest impulse voltage (8/20 µs)	10 kA

External overvoltage protection module

HAW562 or HAW569 from Endress+Hauser are suited as external overvoltage protection.



For detailed information please refer to the following documents:

- HAW562: TI01012K
- HAW569: TI01013K

7.2 Connecting the measuring device

⚠ WARNING


Risk of explosion!

- ▶ Observe applicable national standards.
- ▶ Comply with the specifications in the Safety Instructions (XA).
- ▶ Use specified cable glands only.
- ▶ Check to ensure that the power supply matches the information on the nameplate.
- ▶ Switch off the power supply before connecting the device.
- ▶ Connect the potential matching line to the outer ground terminal before applying the power supply.

Required tools/accessories:

- For devices with a cover lock: Allen key AF3
- Wire stripper
- When using stranded cables: One ferrule for every wire to be connected.


7.2.1 Opening connection compartment cover

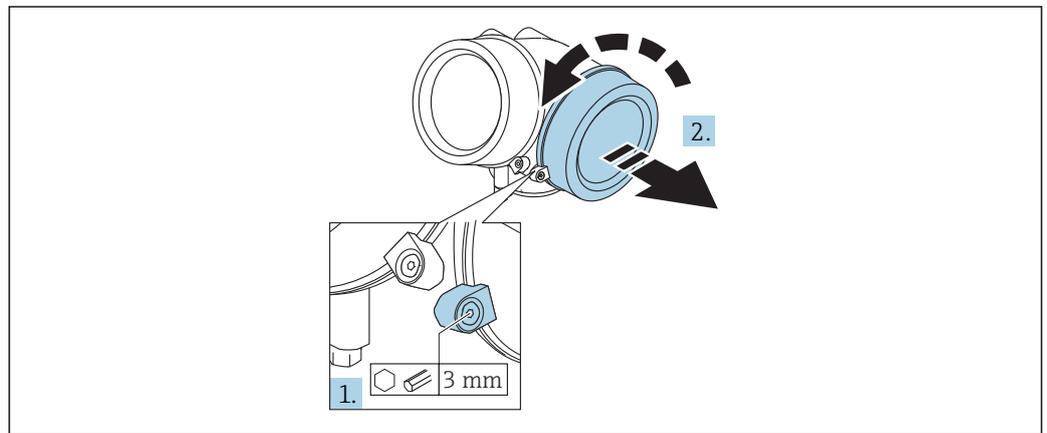

A0021490


1. Loosen the screw of the securing clamp of the connection compartment cover using an Allen key (3 mm) and turn the clamp 90 ° clockwise.
2. Afterwards unscrew connection compartment cover and check lid gasket, replace if necessary.

7.2.2 Connecting

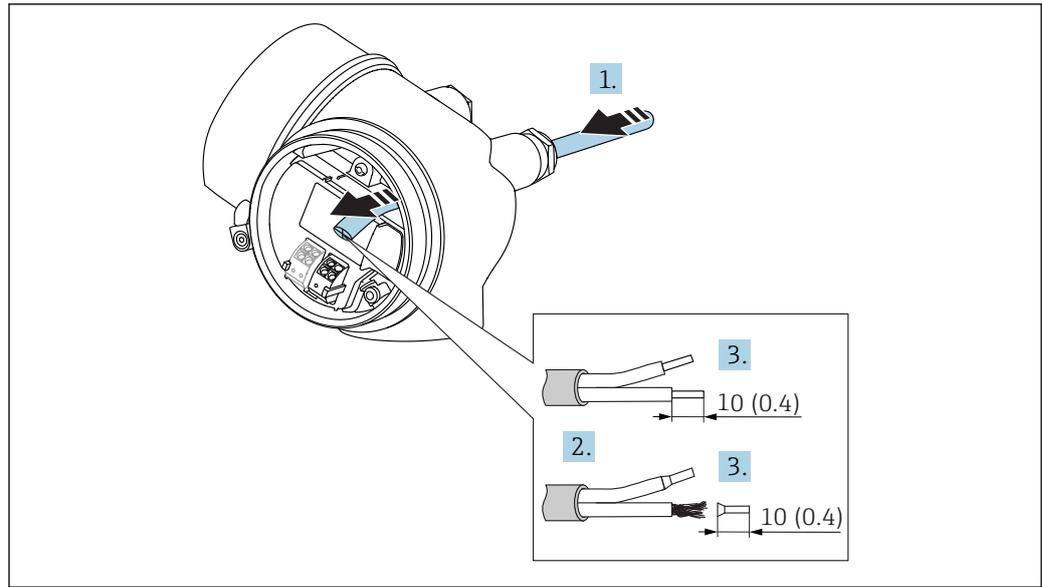

13 Dimensions: mm (in)


1. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
2. Remove the cable sheath.
3. Strip the cable ends over a length of 10 mm (0.4 in). In the case of stranded cables, also fit ferrules.
4. Firmly tighten the cable glands.
5. Connect the cable in accordance with the terminal assignment.

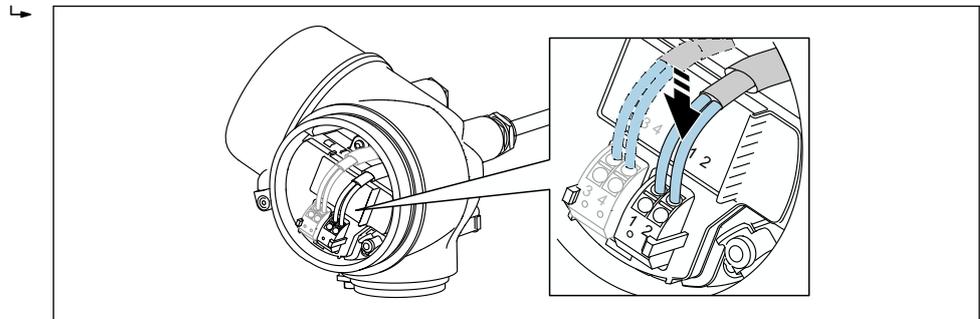

6. If using shielded cables: Connect the cable shield to the ground terminal.

7.2.3 Plug-in spring-force terminals

In the case of devices without integrated overvoltage protection, electrical connection is via plug-in spring-force terminals. Rigid conductors or flexible conductors with ferrules can be inserted directly into the terminal without using the lever, and create a contact automatically.

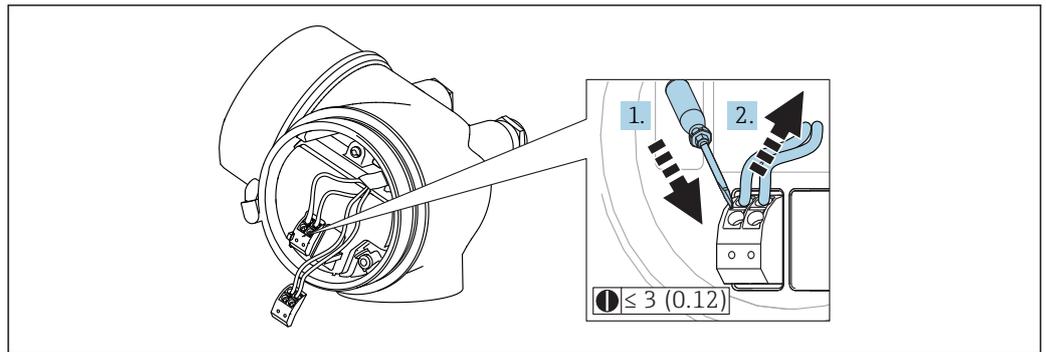


A0013661

14 Dimensions: mm (in)

To remove cables from the terminal:

1. Using a flat-blade screwdriver ≤ 3 mm, press down on the slot between the two terminal holes
2. while simultaneously pulling the cable end out of the terminal.

7.2.4 Closing connection compartment cover

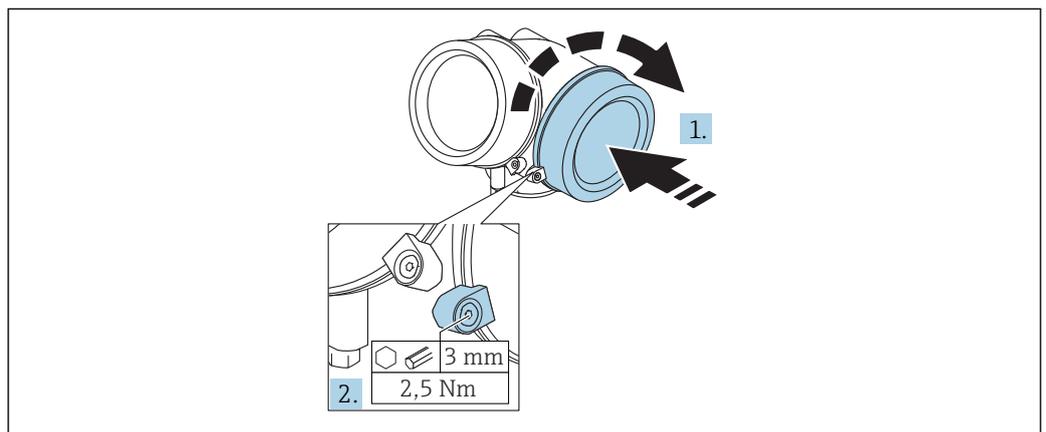

A0021491

1. Screw back firmly connection compartment cover.
2. Turning securing clamp 90 ° counterclockwise and tighten the clamp with 2.5 Nm (1.84 lbf ft) again using the Allen key (3 mm).

7.3 Post-connection check



<input type="checkbox"/>	Is the device or cable undamaged (visual check)?
<input type="checkbox"/>	Do the cables comply with the requirements ?
<input type="checkbox"/>	Do the cables have adequate strain relief?
<input type="checkbox"/>	Are all cable glands installed, securely tightened and leak-tight?
<input type="checkbox"/>	Does the supply voltage match the specifications on the nameplate?
<input type="checkbox"/>	Is the terminal assignment correct?

<input type="checkbox"/>	If required: Has protective ground connection been established ?
<input type="checkbox"/>	If supply voltage is present, is the device ready for operation and do values appear on the display module?
<input type="checkbox"/>	Are all housing covers installed and securely tightened?
<input type="checkbox"/>	Is the securing clamp tightened correctly?


8 Operation options

8.1 Overview

8.1.1 Local operation

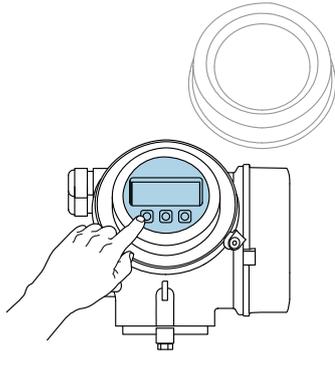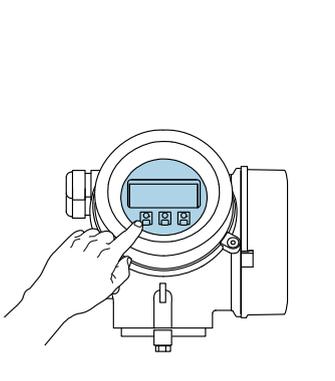Operation with	Pushbuttons	Touch Control
Order code for "Display; Operation"	Option C "SD02"	Option E "SD03"
	 <p style="text-align: right; font-size: small;">A0036312</p>	 <p style="text-align: right; font-size: small;">A0036313</p>
Display elements	4-line display	4-line display white background lighting; switches to red in event of device error
	Format for displaying measured variables and status variables can be individually configured	
	Permitted ambient temperature for the display: -20 to +70 °C (-4 to +158 °F) The readability of the display may be impaired at temperatures outside the temperature range.	
Operating elements	local operation with 3 push buttons (⊕, ⊖, ⊞)	external operation via touch control; 3 optical keys: ⊕, ⊖, ⊞
	Operating elements also accessible in various hazardous areas	
Additional functionality	Data backup function The device configuration can be saved in the display module.	
	Data comparison function The device configuration saved in the display module can be compared to the current device configuration.	
	Data transfer function The transmitter configuration can be transmitted to another device using the display module.	

8.1.2 Operation with remote display and operating module FHX50

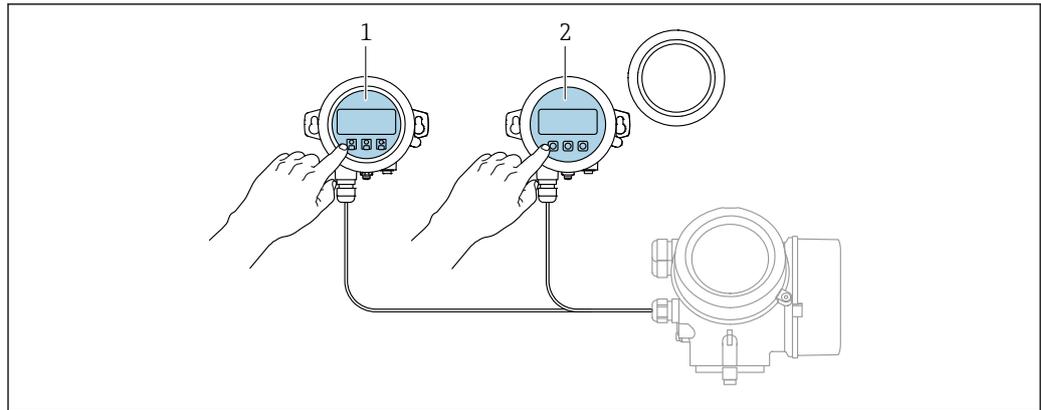


A0036314

15 FHX50 operating options

- 1 Display and operating module SD03, optical keys; can be operated through the glass of the cover
- 2 Display and operating module SD02, push buttons; cover must be removed

8.1.3 Remote operation

Via FOUNDATION Fieldbus

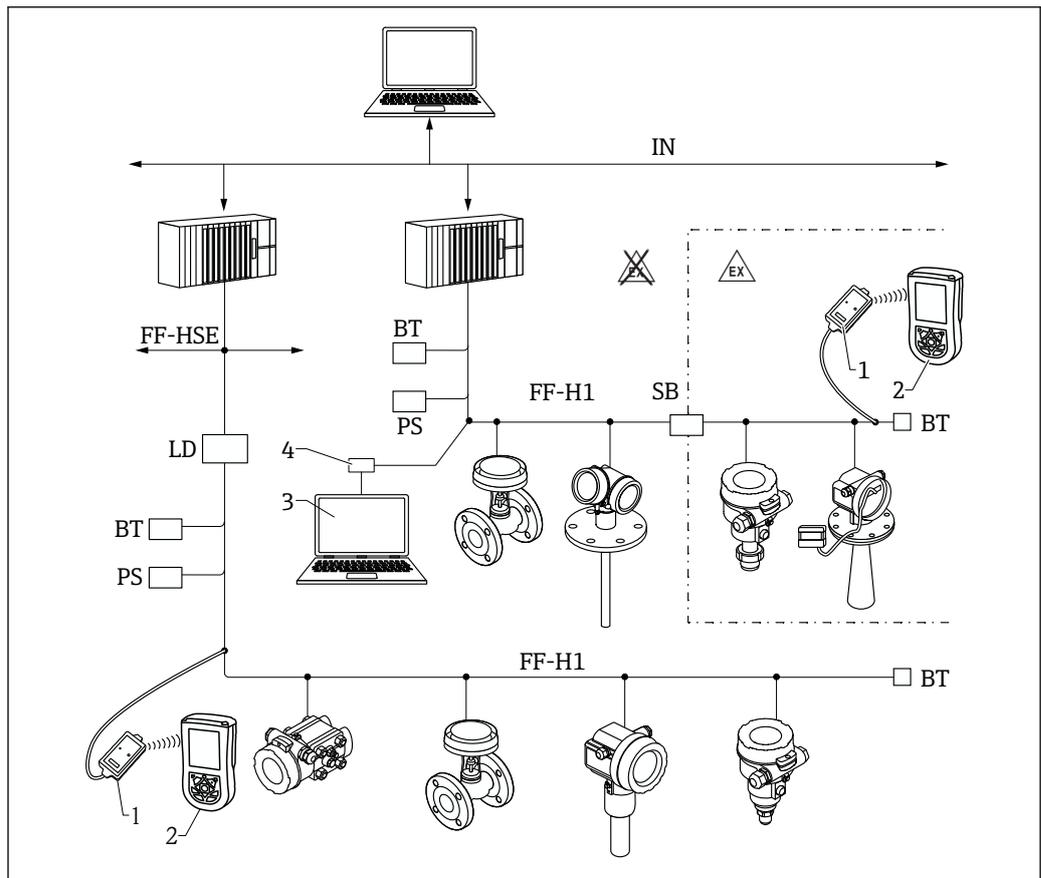


A0017188

16 FOUNDATION Fieldbus system architecture with associated components

- 1 FFblue Bluetooth modem
- 2 Field Xpert SFX350/SFX370
- 3 DeviceCare/FieldCare
- 4 NI-FF interface card

IN	Industrial network
FF-HSE	High Speed Ethernet
FF-H1	FOUNDATION Fieldbus-H1
LD	Linking Device FF-HSE/FF-H1
PS	Bus Power Supply
SB	Safety Barrier
BT	Bus Terminator

DeviceCare/FieldCare via service interface (CDI)

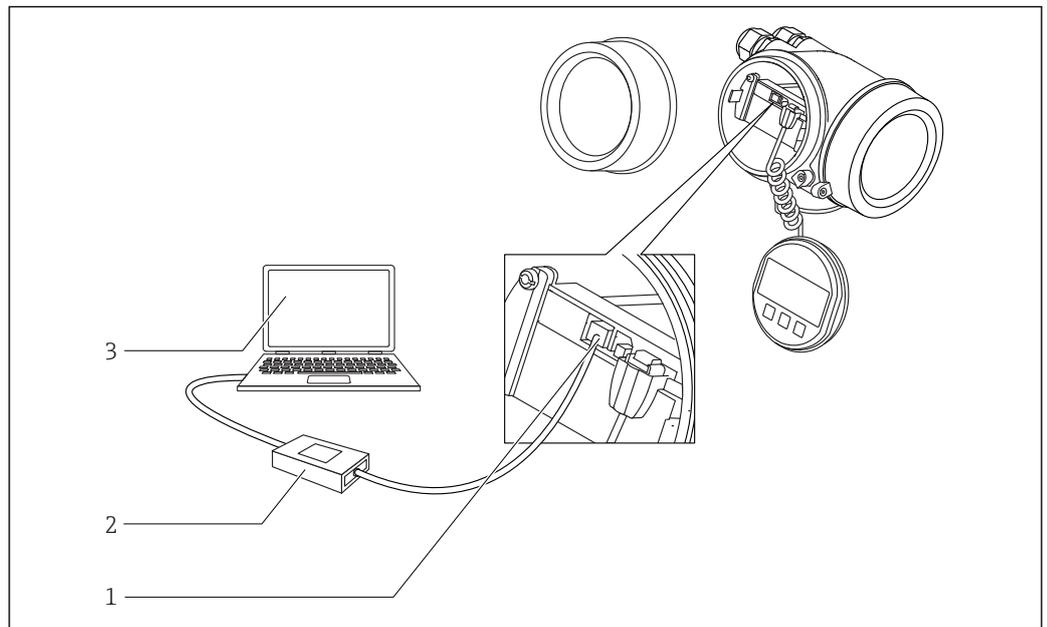

A0032466

17 DeviceCare/FieldCare via service interface (CDI)

- 1 Service interface (CDI) of the instrument (= Endress+Hauser Common Data Interface)
- 2 Commubox FXA291
- 3 Computer with DeviceCare/FieldCare operating tool

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

Menu	Submenu / parameter	Meaning
	Language ¹⁾	Defines the operating language of the on-site display
Commissioning ²⁾		Launches the interactive wizard for guided commissioning. Additional settings generally do not need to be made in the other menus when the wizard is finished.
Setup	Parameter 1 ... Parameter N	Once values have been set for these parameters, the measurement should generally be completely configured.
	Advanced setup	Contains additional submenus and parameters: <ul style="list-style-type: none"> ▪ to adapt the device to special measuring conditions. ▪ to process the measured value (scaling, linearization). ▪ to configure the signal output.
Diagnostics	Diagnostic list	Contains up to 5 currently active error messages.
	Event logbook ³⁾	Contains the last 20 messages (which are no longer active).
	Device information	Contains information for identifying the device.
	Measured values	Contains all current measured values.
	Data logging	Contains the history of the individual measuring values.
	Simulation	Is used to simulate measured values or output values.
	Device check	Contains all parameters needed to check the measurement capability of the device.
Expert ⁵⁾ Contains all parameters of the device (including those that are already in one of the other menus). This menu is organized according to the function blocks of the device. The parameters of the Expert menu are described in: GP01015F (FOUNDATION Fieldbus)	System	Contains all higher-order device parameters that do not concern the measurement or measured value communication.
	Sensor	Contains all parameters needed to configure the measurement.
	Output	Contains all parameters needed to configure the switch output (PFS).

Menu	Submenu / parameter	Meaning
	Communication	Contains all parameters needed to configure the digital communication interface.
	Diagnostics	Contains all parameters needed to detect and analyze operational errors.

- 1) If operating via operating tools (e.g. FieldCare), the "Language" parameter is located under "Setup → Advanced setup → Display"
- 2) Only if operating via an FDT/DTM system
- 3) only available with local operation
- 4) only available if operating via DeviceCare or FieldCare
- 5) On entering the "Expert" menu, an access code is always requested. If a customer specific access code has not been defined, "0000" has to be entered.

8.2.2 User roles and related access authorization

The two user roles **Operator** and **Maintenance** have different write access to the parameters if a device-specific access code has been defined. This protects the device configuration via the local display from unauthorized access →  52.

Access authorization to parameters

User role	Read access		Write access	
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	✓	✓	✓	--
Maintenance	✓	✓	✓	✓

If an incorrect access code is entered, the user obtains the access rights of the **Operator** role.

 The user role with which the user is currently logged on is indicated by the **Access status display** parameter (for display operation) or **Access status tooling** parameter (for tool operation).

8.2.3 Data access - Security

Write protection via access code

Using the device-specific access code, the parameters for the measuring device configuration are write-protected and their values can no longer be changed via local operation.

Define access code via local display

1. Navigate to: Setup → Advanced setup → Administration → Define access code → Define access code
2. Define a max. 4-digit numeric code as an access code.
3. Repeat the same code in **Confirm access code** parameter.
 - ↳ The -symbol appears in front of all write-protected parameters.

Define access code via operating tool (e.g. FieldCare)

1. Navigate to: Setup → Advanced setup → Administration → Define access code
2. Define a max. 4-digit numeric code as an access code.
 - ↳ Write protection is active.

Parameters that can always be changed

The write protection does not include certain parameters that do not affect the measurement. Despite the defined access code, they can always be modified, even if the other parameters are locked.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the measured value display mode from the navigation and editing view.

-  If write access is activated via access code, it can be also be deactivated only via the access code →  53.
- In the "Description of Device Parameters" documents, each write-protected parameter is identified with the -symbol.

Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a device-specific access code and its value cannot be changed at the moment using the local display →  52.

The locking of the write access via local operation can be disabled by entering the device-specific access code.

1. After you press , the input prompt for the access code appears.
2. Enter the access code.
 - ↳ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

Deactivation of the write protection via access code

Via local display

1. Navigate to: Setup → Advanced setup → Administration → Define access code → Define access code
2. Enter **0000**.
3. Repeat **0000** in **Confirm access code** parameter.
 - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

Via an operating tool (e.g. FieldCare)


1. Navigate to: Setup → Advanced setup → Administration → Define access code
2. Enter **0000**.
 - ↳ The write protection is deactivated. Parameters can be changed without entering an access code.

Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows write access to the entire operating menu - except for the **"Contrast display" parameter** - to be locked.


The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via FOUNDATION Fieldbus

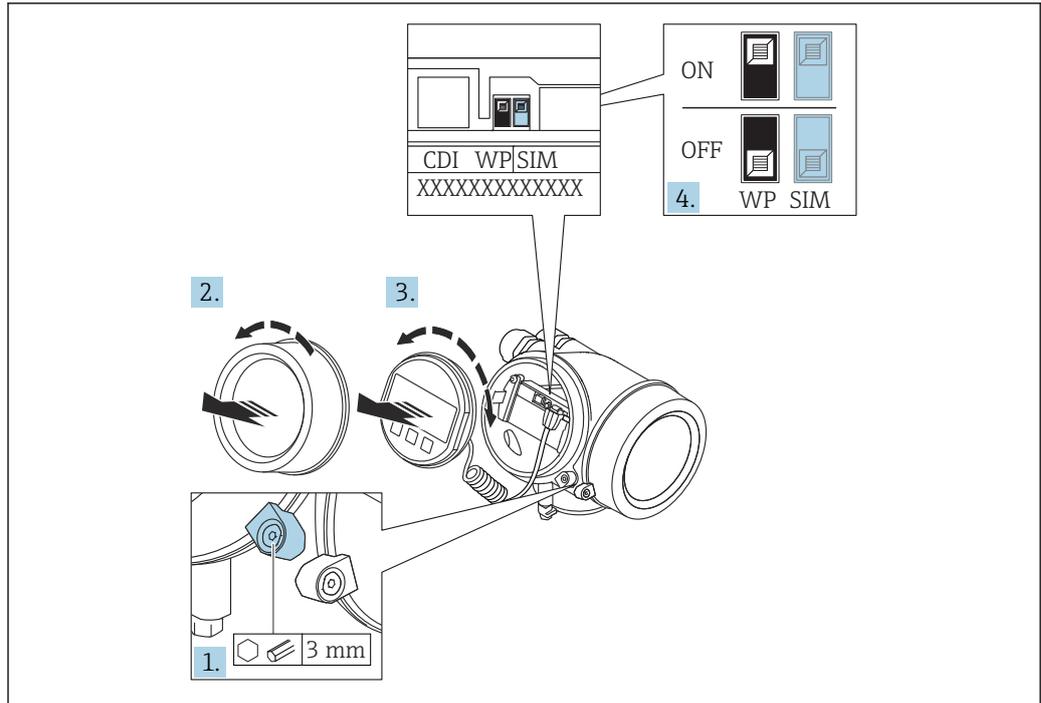


A0021474

1. Loosen the securing clamp.
2. Unscrew the electronics compartment cover.
3. Pull out the display module with a gentle rotational movement. To make it easier to access the lock switch, attach the display module to the edge of the electronics compartment.

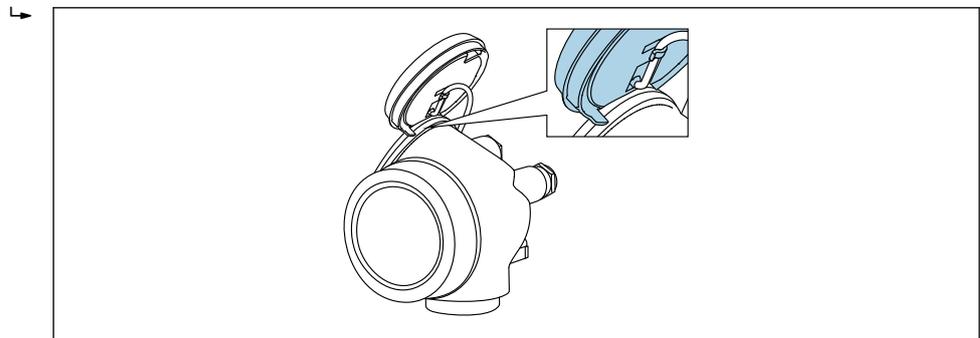

A0036086

4. Setting the write protection switch (WP) on the main electronics module to the **ON** position enables hardware write protection. Setting the write protection switch (WP) on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.
 - ↳ If the hardware write protection is enabled: The **Hardware locked** option is displayed in the **Locking status** parameter. In addition, on the local display the -symbol appears in front of the parameters in the header of the operational display and in the navigation view.

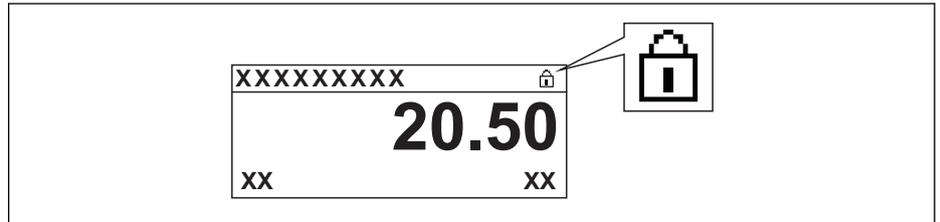

A0015870

If the hardware write protection is disabled: No option is displayed in the **Locking status** parameter. On the local display, the -symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

5. Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Reverse the removal procedure to reassemble the transmitter.

Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock

For the SD03 display only

The keypad lock is switched on automatically:

- If the device has not been operated via the display for > 1 minute.
- Each time the device is restarted.

To activate the keylock manually:

1. The device is in the measured value display.
Press  for at least 2 seconds.
↳ A context menu appears.
2. In the context menu select the **Keylock on** option.
↳ The keypad lock is switched on.

 If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

Switching off the keypad lock

1. The keypad lock is switched on.
Press  for at least 2 seconds.
↳ A context menu appears.
2. In the context menu select the **Keylock off** option.
↳ The keypad lock is switched off.


Bluetooth® wireless technology

Signal transmission via Bluetooth® wireless technology uses a cryptographic technique tested by the Fraunhofer Institute

- The device is not visible via *Bluetooth*® wireless technology without the SmartBlue app
- Only one point-to-point connection between **one** sensor and **one** smartphone or tablet is established

8.3 Display and operating module

8.3.1 Display appearance

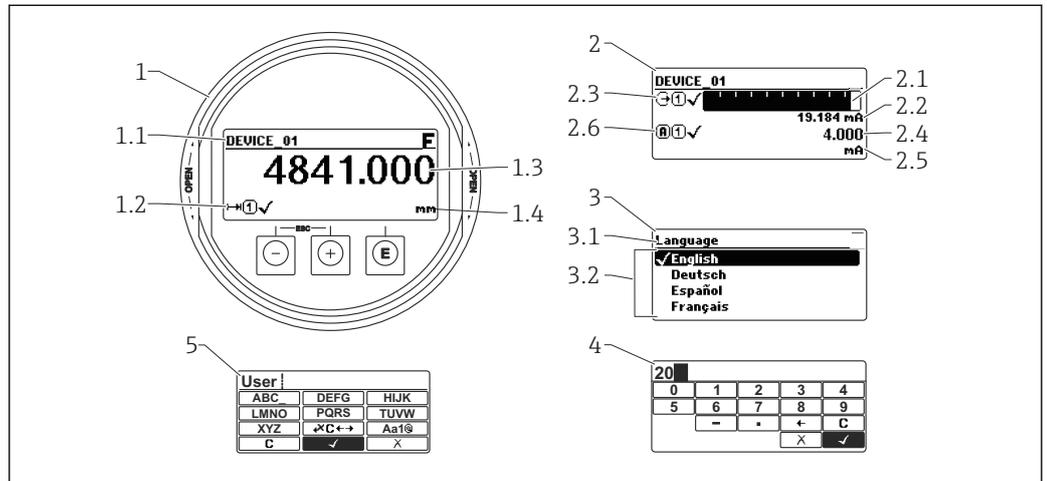

A0012635

18 Appearance of the display and operation module for on-site operation

- 1 Measured value display (1 value max. size)
- 1.1 Header containing tag and error symbol (if an error is active)
- 1.2 Measured value symbols
- 1.3 Measured value
- 1.4 Unit
- 2 Measured value display (1 bargraph + 1 value)
- 2.1 Bargraph for measured value 1
- 2.2 Measured value 1 (including unit)
- 2.3 Measured value symbols for measured value 1
- 2.4 Measured value 2
- 2.5 Unit for measured value 2
- 2.6 Measured value symbols for measured value 2
- 3 Representation of a parameter (here: a parameter with selection list)
- 3.1 Header containing parameter name and error symbol (if an error is active)
- 3.2 Selection list; marks the current parameter value.
- 4 Input matrix for numbers
- 5 Input matrix for alphanumeric and special characters

Display symbols for the submenus

Symbol	Meaning
 <small>A0018367</small>	Display/operation Is displayed: <ul style="list-style-type: none"> in the main menu next to the selection "Display/operation" in the header, if you are in the "Display/operation" menu
 <small>A0018364</small>	Setup Is displayed: <ul style="list-style-type: none"> in the main menu next to the selection "Setup" in the header, if you are in the "Setup" menu
 <small>A0018365</small>	Expert Is displayed: <ul style="list-style-type: none"> in the main menu next to the selection "Expert" in the header, if you are in the "Expert" menu
 <small>A0018366</small>	Diagnostics Is displayed: <ul style="list-style-type: none"> in the main menu next to the selection "Diagnostics" in the header, if you are in the "Diagnostics" menu

Status signals

F <small>A0032902</small>	"Failure" A device error is present. The measured value is no longer valid.
C <small>A0032903</small>	"Function check" The device is in service mode (e.g. during a simulation).
S <small>A0032904</small>	"Out of specification" The device is operated: <ul style="list-style-type: none"> Outside of its technical specifications (e.g. during startup or a cleaning) Outside of the configuration carried out by the user (e.g. level outside configured span)
M <small>A0032905</small>	"Maintenance required" Maintenance is required. The measured value is still valid.

Display symbols for the locking state

Symbol	Meaning
 <small>A0013148</small>	Display parameter Marks display-only parameters which can not be edited.
 <small>A0013150</small>	Device locked <ul style="list-style-type: none"> In front of a parameter name: The device is locked via software and/or hardware. In the header of the measured value screen: The device is locked via hardware.


Measured value symbols

Symbol	Meaning
Measured values	
 <small>A0032892</small>	Level
 <small>A0032893</small>	Distance
 <small>A0032908</small>	Current output
 <small>A0032894</small>	Measured current
 <small>A0032895</small>	Terminal voltage
 <small>A0032896</small>	Temperature of the electronics or the sensor
Measuring channels	
 <small>A0032897</small>	Measuring channel 1
 <small>A0032898</small>	Measuring channel 2
Status of the measured value	
 <small>A0018361</small>	Status "Alarm" The measurement is interrupted. The output assumes the defined alarm value. A diagnostic message is generated.
 <small>A0018360</small>	Status "Warning" The device continues measuring. A diagnostic message is generated.

8.3.2 Operating elements

Key	Meaning
 <small>A0018330</small>	<p>Minus key</p> <p><i>For menu, submenu</i> Moves the selection bar upwards in a picklist.</p> <p><i>For text and numeric editor</i> In the input mask, moves the selection bar to the left (backwards).</p>
 <small>A0018329</small>	<p>Plus key</p> <p><i>For menu, submenu</i> Moves the selection bar downwards in a picklist.</p> <p><i>For text and numeric editor</i> In the input mask, moves the selection bar to the right (forwards).</p>
 <small>A0018328</small>	<p>Enter key</p> <p><i>For measured value display</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly opens the operating menu. ▪ Pressing the key for 2 s opens the context menu. <p><i>For menu, submenu</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly Opens the selected menu, submenu or parameter. ▪ Pressing the key for 2 s for parameter: If present, opens the help text for the function of the parameter. <p><i>For text and numeric editor</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly <ul style="list-style-type: none"> - Opens the selected group. - Carries out the selected action. ▪ Pressing the key for 2 s confirms the edited parameter value.
 <small>A0032909</small>	<p>Escape key combination (press keys simultaneously)</p> <p><i>For menu, submenu</i></p> <ul style="list-style-type: none"> ▪ Pressing the key briefly <ul style="list-style-type: none"> - Exits the current menu level and takes you to the next higher level. - If help text is open, closes the help text of the parameter. ▪ Pressing the key for 2 s returns you to the measured value display ("home position"). <p><i>For text and numeric editor</i> Closes the text or numeric editor without applying changes.</p>
 <small>A0032910</small>	<p>Minus/Enter key combination (press and hold down the keys simultaneously)</p> <p>Reduces the contrast (brighter setting).</p>
 <small>A0032911</small>	<p>Plus/Enter key combination (press and hold down the keys simultaneously)</p> <p>Increases the contrast (darker setting).</p>

8.3.3 Entering numbers and text

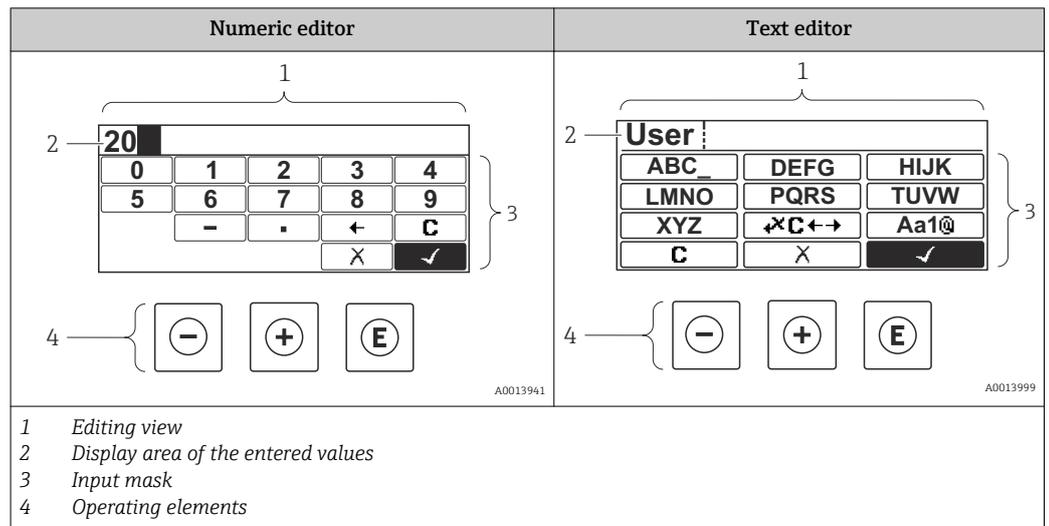

Input mask

The following input symbols are available in the input mask of the numeric and text editor:

Numeric editor symbols

Symbol	Meaning
 <small>A0013998</small>	Selection of numbers from 0 to 9.
 <small>A0016619</small>	Inserts decimal separator at the input position.
 <small>A0016620</small>	Inserts minus sign at the input position.
 <small>A0013985</small>	Confirms selection.
 <small>A0016621</small>	Moves the input position one position to the left.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.

Text editor symbols

Symbol	Meaning
 <small>A0013997</small>	Selection of letters from A to Z
 <small>A0013981</small>	Toggle <ul style="list-style-type: none"> Between upper-case and lower-case letters For entering numbers For entering special characters

 <small>A0013985</small>	Confirms selection.
 <small>A0013987</small>	Switches to the selection of the correction tools.
 <small>A0013986</small>	Exits the input without applying the changes.
 <small>A0014040</small>	Clears all entered characters.

Correction symbols under 

Symbol	Meaning
 <small>A0032907</small>	Clears all entered characters.
 <small>A0018324</small>	Moves the input position one position to the right.
 <small>A0018326</small>	Moves the input position one position to the left.
 <small>A0032906</small>	Deletes one character immediately to the left of the input position.

8.3.4 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Conf. backup disp.
- Env. curve
- Keylock on

Opening and closing the context menu

The user is in the operational display.

1. Press  for 2 s.
 - ↳ The context menu opens.

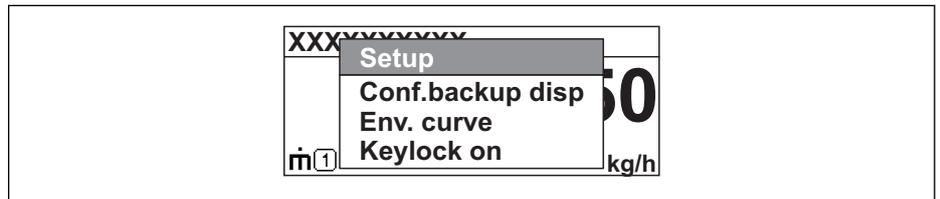

A0033110-EN


2. Press  +  simultaneously.
 - ↳ The context menu is closed and the operational display appears.

Calling up the menu via the context menu

1. Open the context menu.
2. Press  to navigate to the desired menu.
3. Press  to confirm the selection.
 - ↳ The selected menu opens.

8.3.5 Envelope curve on the display and operating module

In order to assess the measuring signal, the envelope curve and - if a mapping has been recorded - the mapping curve can be displayed:

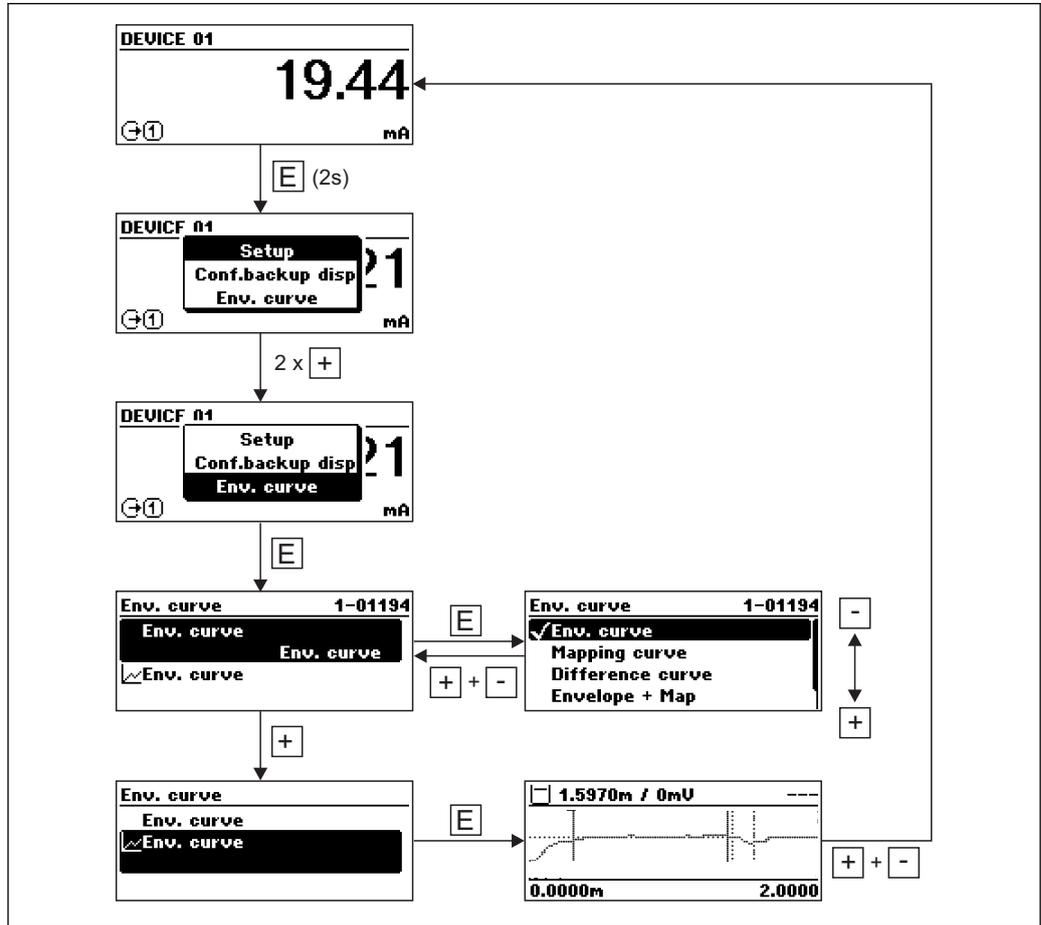

A0014277

9 Integration into a FOUNDATION Fieldbus network

9.1 Device Description (DD)

You require the following to configure a device and integrate it into an FF network:

- An FF configuration program
- The Cff file (Common File Format: *.cff)
- The device description (DD) in one of the following formats
 - Device Description format 4 : *.sym, *.ffo
 - Device Description format 5 : *.sy5, *.ff5

Information on the device-specific DD

Manufacturer ID	452B48hex
Device Type	100Fhex
Device Revision	05hex
DD Revision	Information and files at:
CFF Revision	<ul style="list-style-type: none"> ■ www.endress.com ■ www.fieldcommgroup.org

9.2 Integration into the FOUNDATION Fieldbus network

-  ■ For more in-depth information on integrating the device into the FF system, see the description for the configuration software used.
- When integrating the field devices into the FF system, make sure you are using the right files. You can read out the required version by means of the Device Revision/ DEV_REV and DD Revision/ DD_REV parameters in the Resource Block.


The device is integrated into the FF network as follows:

1. Start the FF configuration program.
2. Download the Cff and device description files (*.ffo, *.sym (for format 4) *.ff5, *.sy5 (for format 5) to the system.
3. Configure the interface.
4. Configure the device for the measuring task and for the FF system.

9.3 Device identification and addressing

FOUNDATION Fieldbus identifies the device using its ID code (Device ID) and automatically assigns it a suitable field address. The identity code cannot be changed. The device appears in the network display once you have started the FF configuration program and integrated the device into the network. The blocks available are displayed under the device name.

If the device description has not yet been loaded, the blocks report "Unknown" or "(UNK)".

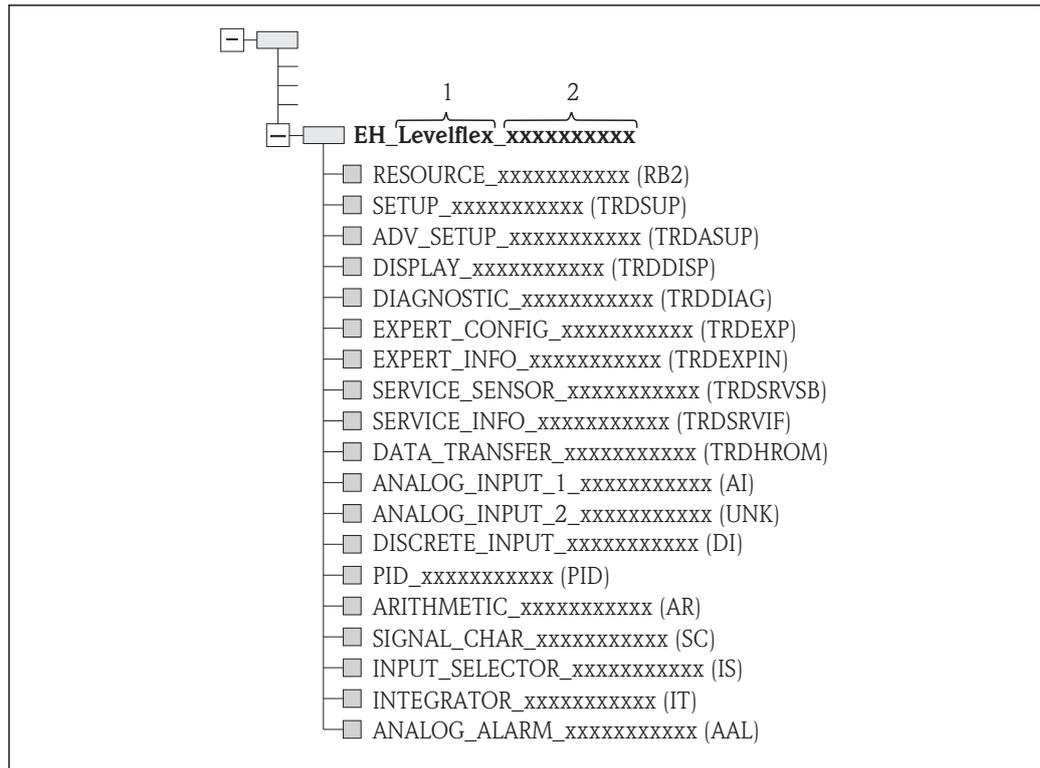

A0017208

19 Typical display in a configuration program after the connection has been established

- 1 Device name
2 Serial number

9.4 Block model

9.4.1 Blocks of the device software

The device has the following blocks:

- Resource Block (device block)
- Transducer Blocks
 - Setup Transducer Block (TRDSUP)
 - Advanced Setup Transducer Block (TRDASUP)
 - Display Transducer Block (TRDDISP)
 - Diagnostic Transducer Block (TRDDIAG)
 - Expert Configuration Transducer Block (TRDEXP)
 - Expert Information Transducer Block (TRDEXPIN)
 - Service Sensor Transducer Block (TRDSRVSB)
 - Service Information Transducer Block (TRDSRVIF)
 - Data Transfer Transducer Block (TRDHROM)
- Function Blocks
 - 2 Analog Input Blocks (AI)
 - 1 Discrete Input Block (DI)
 - 1 PID Block (PID)
 - 1 Arithmetic Block (AR)
 - 1 Signal Characterizer Block (SC)
 - 1 Input Selector Block (IS)
 - 1 Integrator Block (IT)
 - 1 Analog Alarm Block (AAL)

In addition to the pre-instantiated blocks already mentioned, the following blocks can also be instantiated:


- 5 Analog Input Blocks (AI)
- 2 Discrete Input Blocks (DI)
- 3 PID Blocks (PID)
- 3 Arithmetic Blocks (AR)
- 2 Signal Characterizer Blocks (SC)
- 5 Input Selector Blocks (IS)
- 3 Integrator Blocks (IT)
- 2 Analog Alarm Blocks (AAL)

Up to 20 blocks can be instantiated in the device altogether, including the blocks already instantiated. For instantiating blocks, see the appropriate Operating Instructions of the configuration program used.

 Endress+Hauser Guideline BA00062S.

The guideline provides an overview of the standard function blocks that are described in FOUNDATION Fieldbus Specifications FF 890 - 894. It is designed to help operators use the blocks implemented in the Endress+Hauser field devices.

9.4.2 Block configuration when device is delivered

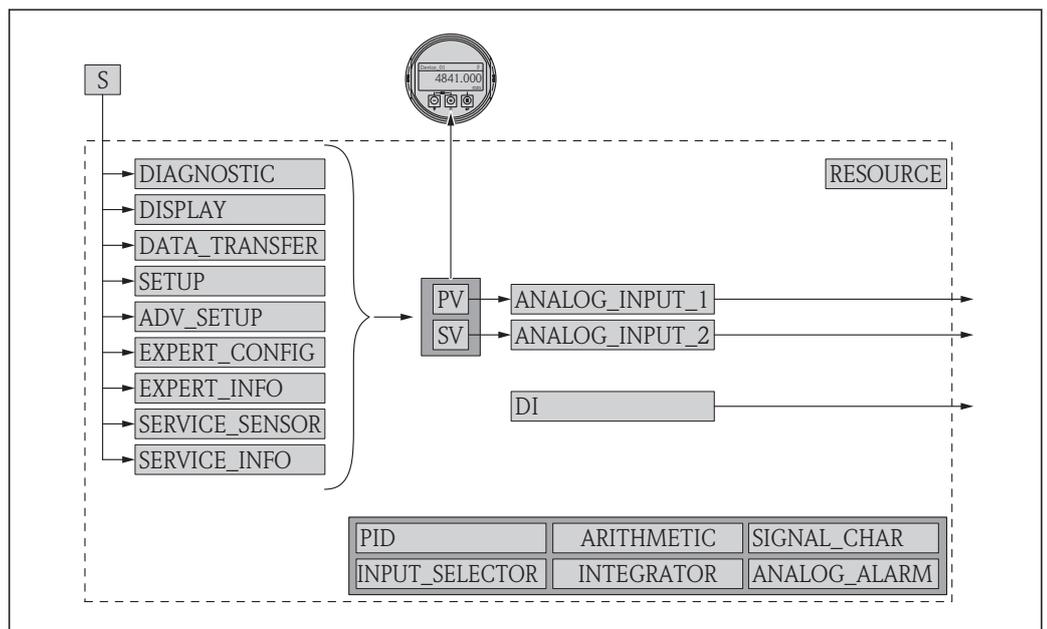

 20 Block configuration when device is delivered

S Sensor
 PV Primary value: Level linearized
 SV Secondary value: Distance

9.5 Assignment of the measured values (CHANNEL) in an AI Block

The input value of an Analog Input Block is defined by the CHANNEL parameter.

Channel	Measured value
0	Uninitialized
89	Measured capacitance
144	EOP shift

Channel	Measured value
145	Interface distance
172	Calculated DC value
211	Terminal voltage
212	Sensor debug
32785	Absolute EOP amplitude
32786	Absolute echo amplitude
32787	Absolute interface amplitude
32856	Distance
32885	Elektronic temperature
32938	Interface linearized
32949	Level linearized
33044	Relative echo amplitude
33045	Relative interface amplitude
33070	Noise of signal
33107	Upper interface thickness

9.6 Index tables of Endress+Hauser parameters

The following tables list the manufacturer-specific device parameters for the Resource Blocks. For the FOUNDATION Fieldbus parameters, see the document BA062S "Guideline - FOUNDATION Fieldbus Function Blocks", which can be downloaded from www.endress.com.

9.6.1 Setup Transducer Block

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK	Description
confirm_distance	Confirm distance	82	ENUM16	2	Static	x	OOS	→ ⓘ 140
filtered_dist_val	Distance	76	FLOAT	4	Dynamic			→ ⓘ 137
interface_distance	Interface distance	79	FLOAT	4	Dynamic			→ ⓘ 140
map_end_x	Present mapping	84	FLOAT	4	Dynamic			→ ⓘ 141
mapping_end_point	Mapping end point	83	FLOAT	4	Static	x	AUTO	→ ⓘ 142
record_map	Record map	86	ENUM16	2	Static	x	OOS	→ ⓘ 142
operating_mode	Operating mode	50	ENUM16	2	Static	x	OOS	→ ⓘ 133
signal_quality	Signal quality	81	ENUM16	2	Dynamic			→ ⓘ 138
medium_group	Medium group	55	ENUM16	2	Static	x	OOS	→ ⓘ 134
tank_type	Tank type	52	ENUM16	2	Static	x	OOS	→ ⓘ 134
tube_diameter	Tube diameter	53	FLOAT	4	Static	x	OOS	→ ⓘ 134
dc_value	DC value	68	ENUM16	2	Static	x	OOS	→ ⓘ 138
empty_calibration	Empty calibration	56	FLOAT	4	Static	x	OOS	→ ⓘ 135
full_calibration	Full calibration	57	FLOAT	4	Static	x	OOS	→ ⓘ 136
distance_unit	Distance unit	51	ENUM16	2	Static	x	OOS	→ ⓘ 133
interface	Interface	70	FLOAT	4	Dynamic			→ ⓘ 139
output_unit_after_linearization	Unit after linearization	62	ENUM16	2	Static			→ ⓘ 159

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK	Description
level_linearized	Level linearized	64	FLOAT	4	Dynamic			→ 160
present_probe_length	Present probe length	87	FLOAT	4	Dynamic	x	AUTO	→ 169
level	Level	60	FLOAT	4	Dynamic			→ 136
interface_linearized	Interface linearized	73	FLOAT	4	Dynamic			→ 161
decimal_places_menu_ro	Decimal places	93	ENUM16	2	Static	x	AUTO	→ 180
locking_status	Locking status	96	BIT_ENUM16	2	Dynamic			→ 146

9.6.2 Advanced Setup Transducer Block

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK	Description
calculated_dc_value	Calculated DC value	61	FLOAT	4	Dynamic			→ 152
blocking_distance	Blocking distance	55	FLOAT	4	Static	x	OOS	→ 167
interface_property	Interface property	57	ENUM16	2	Static	x	OOS	→ 148
dc_value_lower_medium	DC value lower medium	58	FLOAT	4	Static	x	OOS	→ 149
present_probe_length_ro	Present probe length	80	FLOAT	4	Dynamic	x	AUTO	→ 169
confirm_probe_length	Confirm probe length	79	ENUM16	2	Static	x	OOS	→ 170
meas_upper_iface_thickness	Measured thickness upper layer	60	FLOAT	4	Dynamic			→ 152
manual_interface_thickness	Manual thickness upper layer	59	FLOAT	4	Static	x	OOS	→ 151
use_calculated_dc_value	Use calculated DC value	62	ENUM16	2	Static	x	OOS	→ 153
linearization_type	Linearization type	71	ENUM16	2	Static	x	OOS	→ 158
activate_table	Activate table	70	ENUM16	2	Static	x	OOS	→ 164
table_mode	Table mode	69	ENUM16	2	Static	x	OOS	→ 162
custom_table_sel_level	Level	73	FLOAT	4	Static	x	OOS	→ 136
custom_table_sel_value	Customer value	74	FLOAT	4	Static	x	OOS	→ 164
unit_after_linearization	Unit after linearization	63	ENUM16	2	Static	x	OOS	→ 159
free_text	Free text	64	STRING		Static	x	AUTO	→ 160
diameter	Diameter	66	FLOAT	4	Static	x	OOS	→ 161
output_echo_lost	Output echo lost	76	ENUM16	2	Static	x	OOS	→ 166
intermediate_height	Intermediate height	67	FLOAT	4	Static	x	AUTO	→ 162
assign_limit	Assign limit	82	ENUM16	2	Static	x	AUTO	→ 173
maximum_value	Maximum value	65	FLOAT	4	Static	x	OOS	→ 161
assign_diag_behavior	Assign diagnostic behavior	83	ENUM16	2	Static	x	AUTO	→ 173
value_echo_lost	Value echo lost	77	FLOAT	4	Static	x	OOS	→ 166
ramp_at_echo_lost	Ramp at echo lost	78	FLOAT	4	Static	x	OOS	→ 167
switch_output_failure_mode	Failure mode	88	ENUM16	2	Static	x	AUTO	→ 176
switch_output_function	Switch output function	81	ENUM16	2	Static	x	AUTO	→ 172
switch_status	Switch status	89	ENUM16	2	Dynamic			→ 176
switch_off_delay	Switch-off delay	87	FLOAT	4	Static	x	AUTO	→ 176
switch_off_value	Switch-off value	86	FLOAT	4	Static	x	AUTO	→ 175

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK	Description
switch_on_delay	Switch-on delay	85	FLOAT	4	Static	x	AUTO	→ ⓘ 175
switch_on_value	Switch-on value	84	FLOAT	4	Static	x	AUTO	→ ⓘ 174
operating_mode_ro	Operating mode	95	ENUM16	2	Static	x	OOS	→ ⓘ 133
table_number	Table number	68	UINT8	1	Static	x	OOS	→ ⓘ 163
level_semiautomatic	Level	75	FLOAT	4	Dynamic			→ ⓘ 164
assign_status	Assign status	91	ENUM16	2	Static	x	AUTO	→ ⓘ 172
locking_status	Locking status	99	BIT_ENUM16	2	Dynamic			→ ⓘ 146
decimal_places_menu	Decimal places menu	93	ENUM16	2	Static	x	AUTO	→ ⓘ 183
distance_unit_ro	Distance unit	92	ENUM16	2	Static	x	OOS	→ ⓘ 133

9.6.3 Display Transducer Block

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK	Description
access_status_display	Access status display	51	ENUM16	2	Static			→ ⓘ 146
display_damping	Display damping	65	FLOAT	4	Static	x	AUTO	→ ⓘ 181
display_interval	Display interval	64	FLOAT	4	Static	x	AUTO	→ ⓘ 181
header	Header	66	ENUM16	2	Static	x	AUTO	→ ⓘ 181
format_display	Format display	55	ENUM16	2	Static	x	AUTO	→ ⓘ 178
number_format	Number format	69	ENUM16	2	Static	x	AUTO	→ ⓘ 182
display_separator	Separator	68	ENUM16	2	Static	x	AUTO	→ ⓘ 182
language	Language	54	ENUM16	2	Static	x	AUTO	→ ⓘ 178
contrast_display	Contrast display	71	FLOAT	4	Static	x	AUTO	→ ⓘ 184
header_text	Header text	67	STRING		Static	x	AUTO	→ ⓘ 182
access_code_for_display	Enter access code	52	UINT16	2	Static	x	AUTO	→ ⓘ 147
configuration_management	Configuration management	75	ENUM16	2	Static	x	AUTO	→ ⓘ 185
decimal_places_1	Decimal places 1	57	ENUM16	2	Static	x	AUTO	→ ⓘ 180
decimal_places_2	Decimal places 2	59	ENUM16	2	Static	x	AUTO	→ ⓘ 180
decimal_places_3	Decimal places 3	61	ENUM16	2	Static	x	AUTO	→ ⓘ 180
decimal_places_4	Decimal places 4	63	ENUM16	2	Static	x	AUTO	→ ⓘ 180
last_backup	Last backup	74	STRING		Static	x	AUTO	→ ⓘ 185
value_1_display	Value 1 display	56	ENUM16	2	Static	x	AUTO	→ ⓘ 180
value_2_display	Value 2 display	58	ENUM16	2	Static	x	AUTO	→ ⓘ 180
value_3_display	Value 3 display	60	ENUM16	2	Static	x	AUTO	→ ⓘ 180
value_4_display	Value 4 display	62	ENUM16	2	Static	x	AUTO	→ ⓘ 180
locking_status_display	Locking status	50	ENUM16	2	Static			→ ⓘ 146
define_access_code	Define access code	53	UINT16	2	Static	x	AUTO	→ ⓘ 188
comparison_result	Comparison result	76	ENUM16	2	Static	x	AUTO	→ ⓘ 186
decimal_places_menu	Decimal places menu	70	ENUM16	2	Static	x	AUTO	→ ⓘ 183
operating_time	Operating time	73	STRING		Dynamic			→ ⓘ 185
operating_mode_ro	Operating mode	83	ENUM16	2	Static	x	OOS	→ ⓘ 133
locking_status	Locking status	85	BIT_ENUM16	2	Dynamic			→ ⓘ 146

9.6.4 Diagnostic Transducer Block

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK	Description
operating_time	Operating time	55	STRING		Dynamic			→ 185
diagnostics_1	Diagnostics	56	UINT32	4	Static			→ 193
diagnostics_2	Diagnostics 2	58	UINT32	4	Static			→ 193
diagnostics_3	Diagnostics 3	60	UINT32	4	Static			→ 193
diagnostics_4	Diagnostics 4	62	UINT32	4	Static			→ 193
diagnostics_5	Diagnostics 5	64	UINT32	4	Static			→ 193
operating_time_from_restart	Operating time from restart	54	STRING		Dynamic			→ 192
launch_signal	Launch signal	81	ENUM16	2	Dynamic			→ 211
start_device_check	Start device check	77	ENUM16	2	Static	x	AUTO	→ 210
interface_signal	Interface signal	82	ENUM16	2	Dynamic			→ 211
level_signal	Level signal	80	ENUM16	2	Dynamic			→ 211
simulation_device_alarm	Simulation device alarm	75	ENUM16	2	Static	x	OOS	→ 209
filter_options	Filter options	66	ENUM8	1	Static	x	AUTO	→ 194
previous_diagnostics	Previous diagnostics	52	UINT32	4	Static			→ 191
actual_diagnostics	Actual diagnostics	50	UINT32	4	Static			→ 191
assign_sim_meas	Assign measurement variable	71	ENUM16	2	Static	x	OOS	→ 208
sim_value_process_variable	Process variable value	72	FLOAT	4	Static	x	OOS	→ 208
switch_output_simulation	Switch output simulation	73	ENUM16	2	Static	x	OOS	→ 208
sim_switch_status	Switch status	74	ENUM16	2	Static	x	OOS	→ 209
result_device_check	Result device check	78	ENUM16	2	Dynamic			→ 210
last_check_time	Last check time	79	STRING		Dynamic			→ 210
linearization_type	Linearization type	84	ENUM16	2	Static	x	OOS	→ 158
unit_after_linearization_ro	Unit after linearization	85	STRING		Static	x	AUTO	→ 159
decimal_places_menu	Decimal places menu	88	ENUM16	2	Static	x	AUTO	→ 183
operating_mode_ro	Operating mode	91	ENUM16	2	Static	x	OOS	→ 133
assign_channel_1	Assign channel 1	92	ENUM16	2	Static	x	AUTO	→ 202
assign_channel_2	Assign channel 2	93	ENUM16	2	Static	x	AUTO	→ 202
assign_channel_3	Assign channel 3	94	ENUM16	2	Static	x	AUTO	→ 202
assign_channel_4	Assign channel 4	95	ENUM16	2	Static	x	AUTO	→ 202
clear_logging_data	Clear logging data	97	ENUM16	2	Static	x	AUTO	→ 203
logging_interval	Logging interval	96	FLOAT	4	Static	x	AUTO	→ 203
display_filter_options	Filter options	99	ENUM8	1	Static	x	AUTO	→ 194
locking_status	Locking status	108	BIT_ENUM16	2	Dynamic			→ 146
distance_unit_ro	Distance unit	89	ENUM16	2	Static	x	OOS	→ 133

9.6.5 Expert Configuration Transducer Block



The parameters of the **Expert Configuration Transducer Block** are described in GP01015F: "Levelflex FMP5x - Description of Device Parameters - FOUNDATION Fieldbus"

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
acknowledge_alarm	Acknowledge alarm	81	ENUM16	2	Static	x	AUTO
integration_time	Integration time	67	FLOAT	4	Static	x	OOS
result_self_check	Result self check	77	ENUM16	2	Dynamic		
start_self_check	Start self check	76	ENUM16	2	Static	x	AUTO
broken_probe_detection	Broken probe detection	75	ENUM16	2	Static	x	AUTO
gpc_mode	GPC mode	68	ENUM16	2	Static	x	OOS
reference_echo_threshold	Reference echo threshold	73	FLOAT	4	Static	x	OOS
const_gpc_factor	Const. GPC factor	74	FLOAT	4	Static	x	OOS
build_up_ratio	Build-up ratio	90	FLOAT	4	Dynamic		
build_up_threshold	Build-up thres.	91	FLOAT	4	Static	x	AUTO
delay_time_echo_lost	Delay time echo lost	78	FLOAT	4	Static	x	AUTO
empty_capacity	Empty capacity	92	FLOAT	4	Static	x	AUTO
external_pressure_selector	External pressure selector	69	ENUM16	2	Static	x	OOS
measured_capacity	Measured capacitance	89	FLOAT	4	Dynamic		
gas_phase_compens_factor	Gas phase compensation factor	70	FLOT	4	Static	x	OOS
in_safety_distance	In safety distance	80	ENUM16	2	Static	x	OOS
ratio_amplitude_interface_level	Ratio amplitude interface/level	86	FLOAT	4	Static	x	OOS
interface_criterion	Interface criterion	87	FLOAT	4	Dynamic		
control_measurement	Measurement	106	ENUM16	2	Static	x	AUTO
control_measurement	Control measurement	105	ENUM16	2	Static	x	AUTO
filter_dead_time	Dead time	66	FLOAT	4	Static	x	OOS
present_reference_distance	Present reference distance	72	FLOAT	4	Dynamic		
history_reset	History reset	83	ENUM16	2	Static	x	OOS
safety_distance	Safety distance	79	FLOAT	4	Static	x	OOS
history_learning_control	History learning	85	ENUM16	2	Static	x	AUTO
history_learning_control	History learning control	84	ENUM16	2	Static	x	AUTO
sensor_module	Sensor module	107	ENUM16	2	Static		
evaluation_mode	Evaluation mode	82	ENUM16	2	Static	x	OOS
thin_interface	Thin interface	88	ENUM16	2	Static	x	OOS
calculated_dc_value	Calculated DC value	59	FLOAT	4	Dynamic	x	AUTO
dc_value_expert	DC value	55	FLOAT	4	Static	x	OOS
distance_offset	Distance offset	60	FLOAT	4	Static	x	OOS
level_limit_mode	Level limit mode	62	ENUM16	2	Static	x	OOS
level_high_limit	High limit	63	FLOAT	4	Static	x	OOS
level_low_limit	Low limit	64	FLOAT	4	Static	x	OOS
output_mode	Output mode	65	ENUM16	2	Static	x	OOS
level_external_input_1	Level external input 1	93	ENUM16	2	Static	x	AUTO
level_external_input_2	Level external input 2	96	ENUM16	2	Static	x	AUTO
function_input_1_level	Function Input 1 Level	94	ENUM16	2	Static	x	AUTO
function_input_2_level	Function Input 2 Level	97	ENUM16	2	Static	x	AUTO
fixed_value_inp_1	Fixed value inp.1	95	FLOAT	4	Static	x	AUTO
fixed_value_inp_2	Fixed value inp.2	98	FLOAT	4	Static	x	AUTO
interface_external_input_1	Interface external input 1	99	ENUM16	2	Static	x	OOS

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
interface_external_input_2	Interface external input 2	102	ENUM16	2	Static	x	OOS
function_input_1_interface	Function input 1 interface	100	ENUM16	2	Static	x	OOS
function_input_2_interface	Function input 2 interface	103	ENUM16	2	Static	x	OOS
fixed_value_input_1_interface	Fixed value input 1 interface	101	FLOAT	4	Static	x	OOS
fixed_value_input_2_interface	Fixed value input 2 interface	104	FLOAT	4	Static	x	OOS
distance_unit_ro	Distance unit	53	ENUM16	2	Static	x	OOS
level_unit_ro	Level unit	61	ENUM16	2	Static	x	OOS
operating_mode_ro	Operating mode	54	ENUM16	2	Static	x	OOS
enter_access_code	Enter access code	52	UINT16	2	Static	x	AUTO
locking_status	Locking status	50	BIT_ENUM16	2	Dynamic		
access_status_tooling	Access status tooling	51	ENUM16	2	Static		
reference_distance	Reference distance	71	FLOAT	4	Static	x	OOS
sw_option_active_overview	SW option active overview	110	BIT_ENUM32	4	Static		
decimal_places_menu	Decimal places menu	109	ENUM16	2	Static	x	AUTO
fieldbus_type	Fieldbus Type	111	ENUM8	1	Static		
interface_property_ro	Interface property	108	ENUM16	2	Static	x	OOS
medium_type_ro	Medium type	112	ENUM16	2	Static	x	OOS
eop_level_evaluation_ro	EOP level evaluation	113	ENUM16	2	Static	x	OOS
sensor_type_ro	Sensor type	114	ENUM16	2	Static	x	OOS
calculated_dc_status_en	Status	58	ENUM8	1	Dynamic		

9.6.6 Expert Information Transducer Block

 The parameters of the **Expert Information Transducer Block** are described in GP01015F: "Levelflex FMP5x - Description of Device Parameters - FOUNDATION Fieldbus"

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
abs_echo_amp_val	Absolute echo amplitude	51	FLOAT	4	Dynamic		
abs_eop_amp_val	Absolute EOP amplitude	55	FLOAT	4	Dynamic		
absolute_interface_amplitude	Absolute interface amplitude	58	FLOAT	4	Dynamic		
application_parameter	Application parameter	74	ENUM16	2	Dynamic		
electronic_temp_value	Electronic temperature	66	FLOAT	4	Dynamic		
eop_shift_value	EOP shift	69	FLOAT	4	Dynamic		
found_echoes	Found echoes	71	ENUM16	2	Dynamic		
max_electr_temp	Max. electronics temperature	73	FLOAT	4	Dynamic	x	AUTO
time_max_electr_temp	Time max. electronics temperature	75	STRING		Dynamic		
measurement_frequency	Measurement frequency	76	FLOAT	4	Dynamic		
min_electr_temp	Min. electronics temperature	77	FLOAT	4	Dynamic	x	AUTO
time_min_electr_temp	Time min. electronics temperature	78	STRING		Dynamic		
rel_echo_amp_val	Relative echo amplitude	53	FLOAT	4	Dynamic		
relative_interface_amplitude	Relative interface amplitude	60	FLOAT	4	Dynamic		
reset_min_max_temp	Reset min./max. temp.	79	ENUM16	2	Static	x	AUTO
noise_signal_val	Noise of signal	63	FLOAT	4	Dynamic		

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
used_calculation	Used calculation	80	ENUM16	2	Dynamic		
tank_trace_state	Tank trace state	81	ENUM16	2	Dynamic		
max_draining_speed	Max. draining speed	82	FLOAT	4	Dynamic	x	AUTO
max_filling_speed	L max. fill speed	83	FLOAT	4	Dynamic	x	AUTO
time_max_level	Time max. level	84	STRING		Dynamic		
max_level_value	Max. level value	85	FLOAT	4	Dynamic	x	AUTO
time_min_level	Time min. level	86	STRING		Dynamic		
min_level_value	Min. level value	87	FLOAT	4	Dynamic	x	AUTO
reset_min_max	Reset min./max.	94	ENUM16	2	Static	x	AUTO
interf_max_drain_speed	I max. drain speed	88	FLOAT	4	Dynamic	x	AUTO
interf_max_fill_speed	I max. fill speed	89	FLOAT	4	Dynamic	x	AUTO
time_max_interface	Time max. interface	90	STRING		Dynamic		
max_interface_value	Max. interface value	91	FLOAT	4	Dynamic	x	AUTO
time_min_interface	Time min. interface	92	STRING		Dynamic		
min_interface_value	Min. interface value	93	FLOAT	4	Dynamic	x	AUTO
application_parameter	Application parameter	95	ENUM16	2	Dynamic		
operating_mode_ro	Operating mode	108	ENUM16	2	Static	x	OOS
temperature_unit	Temperature unit	72	ENUM16	2	Static	x	AUTO
activate_sw_option	Activate SW option	110	UINT32	4	Static	x	AUTO
target_echo_status	Status	56	ENUM8	1	Dynamic		
iface_target_echo_status	Status	61	ENUM8	1	Dynamic		
signal_noise_status	Status	64	ENUM8	1	Dynamic		
sens_temp_status	Status	67	ENUM8	1	Dynamic		
eop_shift_status	Status	70	ENUM8	1	Dynamic		
terminal_voltage_1	Terminal voltage 1	97	FLOAT	4	Dynamic		
calculated_dc_value	Calculated DC value	100	FLOAT	4	Dynamic	x	AUTO
upper_interface_thickness	Upper interface thickness	103	FLOAT	4	Dynamic		
debug_value	Debug value	106	FLOAT	4	Dynamic	x	AUTO
sw_option_active_overview	SW option active overview	111	BIT_ENUM32	4	Static		
locking_status	Locking status	113	BIT_ENUM16	2	Dynamic		
decimal_places_menu_ro	Decimal places menu	109	ENUM16	2	Static	x	AUTO
linearization_type	Linearization type	104	ENUM16	2	Static	x	OOS
eop_level_evaluation	EOP level evaluation	112	ENUM16	2	Static	x	OOS
access_status_tooling	Access status tooling	114	ENUM16	2	Static		
calculated_dc_status	Status	99	UINT8	1	Dynamic		
status_up_iface_thickness	Customized upper phase thickness status	102	UINT8	1	Dynamic		
debug_status		107	UINT8	1	Dynamic	x	AUTO

9.6.7 Service Sensor Transducer Block

The parameters of the **Service Sensor** Transducer Block can only be operated by authorized Endress+Hauser service personnel.

9.6.8 Service Information Transducer Block

The parameters of the **Service Information** Transducer Block can only be operated by authorized Endress+Hauser service personnel.

9.6.9 Data Transfer Transducer Block

 The parameters of the **Data Transfer Transducer Block** are described in GP01015F: "Levelflex FMP5x - Description of Device Parameters - FOUNDATION Fieldbus"

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
used_calculation	Used calculation	87	ENUM16	2	Dynamic		
bdt_cfg_rdwr_ctrl		101	UINT16	2	Static	x	AUTO
bdt_transferred_ctrl		102	BYTEARRAY		Static	x	AUTO
bdt_data_trans		103	BYTEARRAY		Static	x	AUTO
bdt_prepare		99	BYTEARRAY		Static	x	AUTO
bdt_status		100	BYTEARRAY		Static		
sw_option_active_overview	SW option active overview	98	BIT_ENUM32	4	Static		
digits_at_0_mVdB		90	FLOAT	4	Dynamic	x	AUTO
digits_per_mVdB		91	FLOAT	4	Dynamic	x	AUTO
actual_diagnostics	Actual diagnostics	97	UINT32	4	Static		
electric_probe_length	Electric probe length	92	FLOAT	4	Dynamic		
empty_calibration_ro	Empty calibration	93	FLOAT	4	Static	x	OOS
full_calibration_ro	Full calibration	94	FLOAT	4	Static	x	OOS
distance_unit_ro	Distance unit	95	ENUM16	2	Static	x	OOS
operating_mode_ro	Operating mode	88	ENUM16	2	Static	x	OOS
present_probe_length_ro	Present probe length	89	FLOAT	4	Dynamic	x	AUTO
trend_operation_hours		104	UINT32	4	Static		
trend_package_size		105	UINT8	1	Static	x	AUTO
trend_storage_time	Trend storage time	106	UINT32	4	Static		
trend_sup_pack_size		107	UINT8	1	Static		
gpc_mode_ro	GPC mode	109	ENUM16	2	Static	x	OOS
eop_level_evaluation_ro	EOP level evaluation	110	ENUM16	2	Static	x	OOS
temperature_unit_ro	Temperature unit	111	ENUM16	2	Static	x	OOS
max_trend_entries		108	UINT16	2	Static		
line_mapping_point_number	Line mapping point number	126	UINT16	2	Static	x	AUTO
line_mapping_array_x	Line mapping array X	127	FLOAT	4	Static	x	AUTO
line_mapping_array_y	Line mapping array Y	128	FLOAT	4	Static	x	AUTO
mapping_end_point_ro	Mapping end point	125	FLOAT	4	Static	x	AUTO
mapping_start_point	Mapping start point	124	FLOAT	4	Static	x	AUTO
function_block_table		143	UINT32	4	Static		
custom_empty_value		112	FLOAT	4	Static		
custom_full_value		113	FLOAT	4	Static		
customized	Customized	121	UINT8	1	Static		
reset_ordered_configuration	Reset ordered configuration	122	ENUM16	2	Static	x	AUTO
empty_scale		114	FLOAT	4	Static	x	AUTO

Name	Label	Index	Data type	Size (Bytes)	Storage Class	Write access	MODE_BLK
eop_map_point_number		116	UINT16	2	Static	x	AUTO
factory_data_valid		123	UINT8	1	Static		
fieldbus_type	Fieldbus Type	144	ENUM8	1	Static		
full_scale		115	FLOAT	4	Static	x	AUTO
init_map_point_number		117	UINT16	2	Static	x	AUTO
max_not_assoc_track		118	UINT16	2	Static	x	AUTO
ref_max_dist	Ref max. dist.	119	FLOAT	4	Static	x	AUTO
ref_min_dist	Ref min. dist.	120	FLOAT	4	Static	x	AUTO
line_mapping_accuracy	Line mapping accuracy	130	FLOAT	4	Static	x	AUTO
mapping_curve_left_margin	Mapping curve left margin	131	FLOAT	4	Static	x	AUTO
device_calib_changed		133	ENUM16	2	Static	x	AUTO
echo_thresh_attenuat_const_ee	Threshold attenuation constant	134	FLOAT	4	Dynamic	x	AUTO
echo_threshold_far_ee		135	FLOAT	4	Static	x	AUTO
echo_thresh_inactive_len		137	FLOAT	4	Static	x	AUTO
echo_threshold_near_ee		136	FLOAT	4	Static	x	AUTO
present_probe_length_ee		138	FLOAT	4	Static	x	AUTO
reset_appl_para_chg_flags		139	ENUM16	2	Static	x	AUTO
reset_dyn_persistent		140	ENUM16	2	Static	x	AUTO
locking_status	Locking status	142	BIT_ENUM16	2	Dynamic		
decimal_places_menu	Decimal places menu	96	ENUM16	2	Static	x	AUTO
access_status_tooling	Access status tooling	141	ENUM16	2	Static		
level_linearized	Level linearized	147	FLOAT	4	Dynamic		
bdt_transferred_ctrl		197	UINT8	1	Static	x	AUTO
bdt_cfg_rdwr_ctrl		196	UINT16	2	Static	x	AUTO

9.7 Methods

The FOUNDATION Fieldbus Specification includes the use of methods to make device operation easier. A method is a sequence of interactive steps to be carried out in the specified order so as to configure certain device functions.

The following methods are available for the device:

- **Restart**

This method is located in the Resource Block and directly prompts the setting of the **Device reset** parameter. This resets the device configuration to a defined state.

- **ENP Restart**

This method is located in the Resource Block and directly prompts the setting of the parameters of the Electronic Name Plate (ENP).

- **Setup**

This method is located in the SETUP Transducer Block and allows to set the most important parameters in this block for device configuration (measuring units, type of tank or vessel, type of medium, empty and full calibration).

- **Linearization**

This method is located in the ADV_SETUP Transducer Block and allows to manage the linearization table by which the measured value is converted into volume, mass or flow.


- **Self Check**

This method is located in the EXPERT_CONFIG Transducer Block and prompts the device self check parameters.

10 Commissioning via wizard

A wizard guiding the user through the initial setup is available in FieldCare and DeviceCare ²⁾.

1. Connect the device to FieldCare or DeviceCare → 48.
2. Open the device in FieldCare or DeviceCare.
 - ↳ The dashboard (home page) of the device appears:

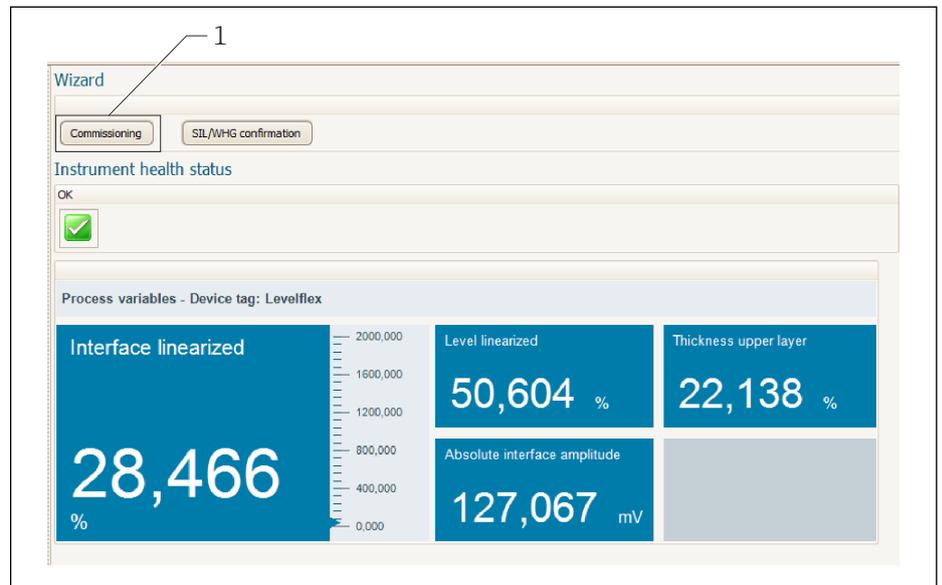

1 "Commissioning" button calls up the wizard.

3. Click on "Commissioning" to call up the wizard.
4. Enter or select the appropriate value for each parameter. These values are immediately written to the device.
5. Click "Next" to switch to the next page.
6. After finishing the last page, click "End of sequence" to close the wizard.

i If the wizard is cancelled before all necessary parameters have been set, the device may be in an undefined state. A reset to the default settings is recommended in this case.

2) DeviceCare is available for download at www.software-products.endress.com. The download requires a registration in the Endress+Hauser software portal.

11 Commissioning via operating menu


11.1 Installation and function check

Make sure that all final checks have been completed before you start up your measuring point:

- Checklist "Post-installation check" → 37
- Checklist "Post-connection check" → 45

11.2 Setting the operating language


Factory setting: English or ordered local language

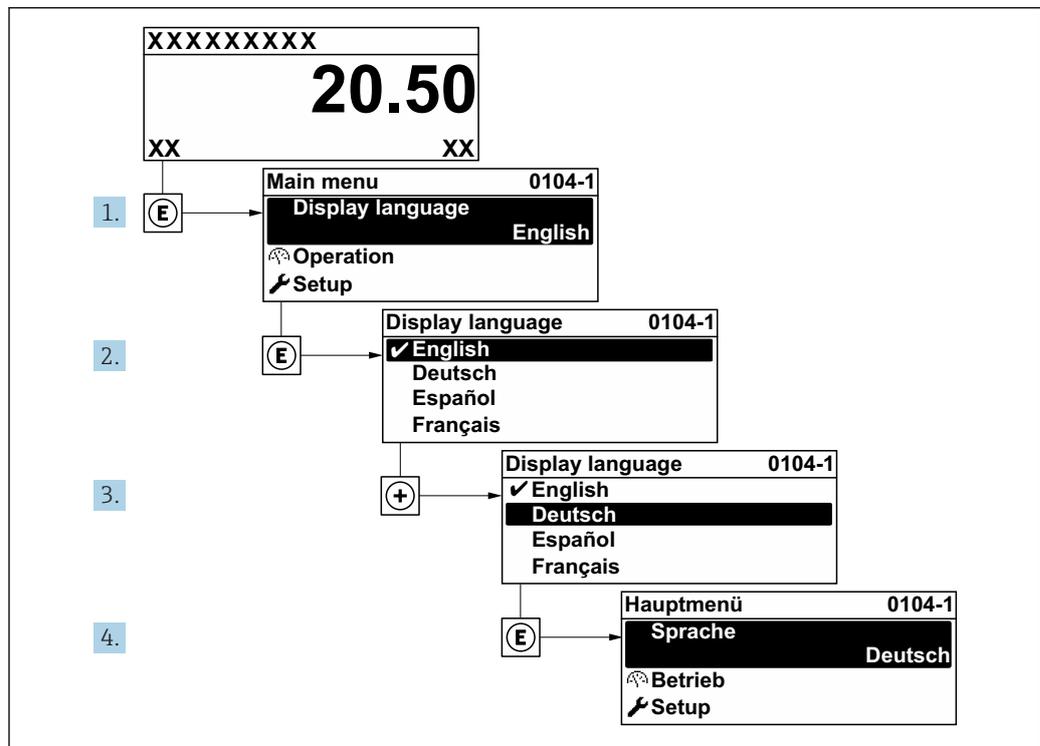

A0029420

21 Using the example of the local display

11.3 Configuration of an interface measurement

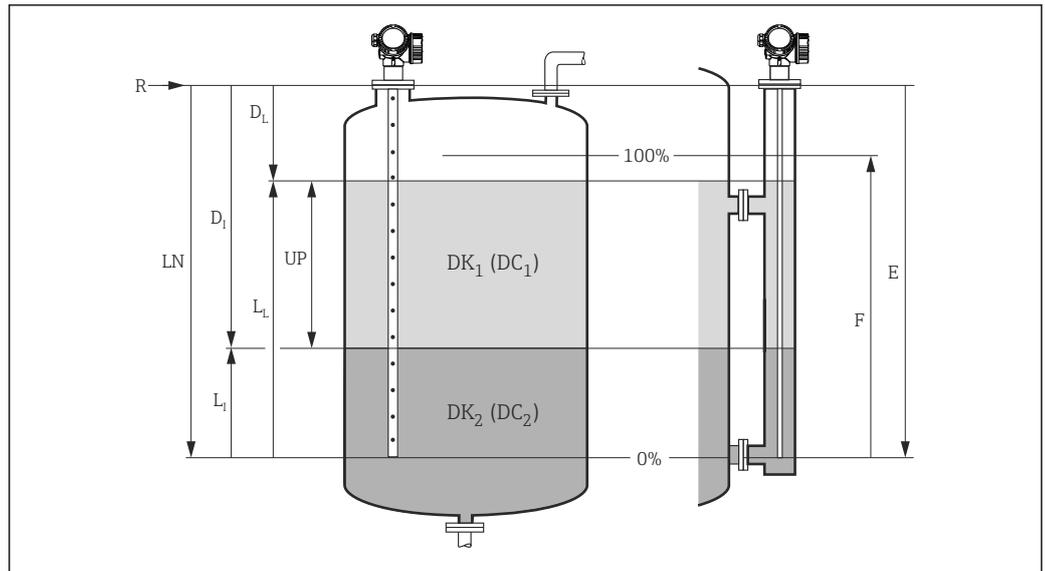

A0011177

22 Configuration parameters for interface measurements

- LN Length of probe
- R Reference point of the measurement
- DI "Interface distance" parameter (Distance from reference point to lower medium)
- LI Interface
- DL Distance
- LL Level
- UP Thickness upper layer
- E "Empty calibration" parameter (= zero point)
- F "Full calibration" parameter (= span)

1. Navigate to: Setup → Device tag
 - ↳ Enter tag for measuring point.
2. Navigate to: Setup → Operating mode
 - ↳ Select **Interface with capacitance** option.
3. Navigate to: Setup → Distance unit
 - ↳ Select distance unit.
4. Navigate to: Setup → Tank type
 - ↳ Select tank type.
5. For Tank type = Bypass / pipe:
 - Navigate to: Setup → Tube diameter
 - ↳ Enter the diameter of the bypass or stilling well.
6. Navigate to: Setup → DC value
 - ↳ Enter relative dielectric constant (ϵ_r) of the upper medium.
7. Navigate to: Setup → Empty calibration
 - ↳ Enter the distance E between the reference point R and the minimum level (0%).
8. Navigate to: Setup → Full calibration
 - ↳ Enter distance F between the minimum (0%) and maximum (100%) level.
9. Navigate to: Setup → Level
 - ↳ Displays the measured level L_L .
10. Navigate to: Setup → Interface
 - ↳ Displays the interface height L_I .

11. Navigate to: Setup → Distance
 - ↳ Displays the distance D_L between the reference point R and the level L_L .
12. Navigate to: Setup → Interface distance
 - ↳ Displays the distance D_I between the reference point R and the interface L_I .
13. Navigate to: Setup → Signal quality
 - ↳ Displays the signal quality of the level echo.
14. For operation via local display:
Navigate to: Setup → Mapping → Confirm distance
 - ↳ Make sure the vessel is completely empty. Then select Tank empty option.
15. For operation via operating tool (e.g. FieldCare):
Navigate to: Setup → Confirm distance
 - ↳ Make sure the vessel is completely empty. Then select Tank empty option.

NOTICE**Wrong dielectric constant of the lower medium may cause a measuring error.**

- ▶ If, in the case of **Operating mode = Interface with capacitance**, the lower medium is not water, it is necessary to specify its dielectric constant (DC value): Setup → Advanced setup → Interface → DC value lower medium

NOTICE**Wrong empty capacitance may cause a measuring error.**

- ▶ For rod and rope probes with **Operating mode = Interface with capacitance** a correct measurement is only possible if the empty capacitance has been determined. To do so, make sure that the vessel is completely empty and set **Confirm distance = Tank empty**. Only in exceptional cases (if the tank can not be emptied during the commissioning) the empty capacitance of rod probes may be entered manually: Expert → Sensor → Interface → Empty capacitance.

-  For coax probes the correct empty capacitance is always set on delivery.

11.4 Recording the reference curve

After the configuration of the measurement it is recommended to record the current envelope curve as a reference curve. The reference curve can be used later on in the process for diagnostic purposes. To record the reference curve use the **Save reference curve** parameter.

 
Navigation in the menu

Expert → Diagnostics → Envelope diagnostics → Save reference curve

Meaning of the options

- No
No action
- Yes
The current envelope curve is saved as reference curve.

-  In devices which have been delivered with software version 01.00.zz, this submenu is only visible for the "Service" user role.
-  The reference curve can only be displayed in the envelope curve diagram of FieldCare after it has been loaded from the device into FieldCare. This is performed by the "Load Reference Curve" function in FieldCare:



 23 The "Load Reference Curve" function

11.5 Configuration of the on-site display

11.5.1 Factory settings of the on-site display for interface measurements

Parameter	Factory setting for devices with 1 current output	Factory setting for devices with 2 current outputs
Format display	1 value, max. size	1 value, max. size
Value 1 display	Interface linearized	Interface linearized
Value 2 display	Level linearized	Level linearized
Value 3 display	Thickness upper layer	Current output 1
Value 4 display	Current output 1	Current output 2

11.5.2 Adjustment of the on-site display

The on-site display can be adjusted in the following menu:
Setup → Advanced setup → Display

11.6 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration. You can do so using the **Configuration management** parameter and its options.

Navigation path in the operating menu

Setup → Advanced setup → Configuration backup display → Configuration management

Meaning of the options

- **Cancel**

No action is executed and the user exits the parameter.

- **Execute backup**

A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device. The backup copy comprises the transmitter and sensor data of the device.

- **Restore**

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device. The backup copy comprises the transmitter and sensor data of the device.

- **Duplicate**

The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:

Medium type

- **Compare**

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter.

- **Clear backup data**

The backup copy of the device configuration is deleted from the display module of the device.



While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.



If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset → 188 will not restore the original status..

In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

11.7 Protection of the settings against unauthorized changes

There are two ways to protect the settings against unauthorized changes:

- Via parameter settings (software locking) →  52
- Via locking switch (hardware locking) →  53

12 Commissioning (block-based operation)

12.1 Function check

Carry out a post-installation and a post-connection check as per the checklist before commissioning the device:

- "Post-installation check" checklist →  37
- "Post-connection check" checklist →  45

12.2 Block configuration

12.2.1 Preparatory steps

1. Switch on the device.
2. Note the DEVICE_ID.
3. Open the configuration program.
4. Load Cff and device description files into the host system or the configuration program. Make sure you are using the right system files.
5. Identify the device using the **DEVICE_ID** (see Point 2). Assign the desired tag name to the device by means of the **Pd-tag/FF_PD_TAG** parameter.

12.2.2 Configuring the Resource Block

1. Open the Resource Block.
2. If necessary, disable the lock for device operation.
3. If necessary, change the block name. Factory setting: RS-xxxxxxxxxxx (RB2)
4. If necessary, assign a description to the block by means of the **Tag Description/TAG_DESC** parameter.
5. If necessary, change other parameters as per the requirements.

12.2.3 Configuring the Transducer Blocks

The measurement and the display module are configured using the Transducer Blocks. The general procedure is the same for all Transducer Blocks:

1. If necessary, change the block name.
2. Set the block mode to **OOS** by means of the **Block Mode/MODE_BLK** parameter, **TARGET** element.
3. Configure the device in accordance with the measuring task.
4. Set the block mode to **Auto** by means of the **Block Mode/MODE_BLK** parameter, **TARGET** element.

 The block mode must be set to **Auto** for the measuring device to function correctly.

12.2.4 Configuring the Analog Input Blocks

The device has 2 Analog Input Blocks that can be assigned as required to the various process variables.

Default settings	
Analog Input Block	CHANNEL
AI 1	32949: Level linearized
AI 2	32856: Distance


1. If necessary, change the block name.
2. Set the block mode to **OOS** by means of the **Block Mode/MODE_BLK** parameter, **TARGET** element.
3. Use the **Channel/CHANNEL** parameter to select the process variable which should be used as the input value for the Analog Input Block → 67.
4. Use the **Transducer Scale/XD_SCALE** parameter to select the desired unit and the block input range for the process variable → 86. Make sure that the unit selected suits the process variable selected. If the process variable does not suit the unit, the **Block Error/BLOCK_ERR** parameter reports **Block Configuration Error** and the block mode cannot be set to **Auto**.
5. Use the **Linearization Type/L_TYPE** parameter to select the type of linearization for the input variable (factory setting: **Direct**). Make sure that the settings for the **Transducer Scale/XD_SCALE** and **Output Scale/ OUT_SCALE** parameters are the same for the **Direct** linearization type. If the values and units do not match, the **Block Error/BLOCK_ERR** parameter reports **Block Configuration Error** and the block mode cannot be set to **Auto**.
6. Enter the alarm and critical alarm messages by means of the **High High Limit/ HI_HI_LIM**, **High Limit/ HI_LIM**, **Low Low Limit/ LO_LO_LIM** and **Low Limit/ LO_LIM** parameters. The limit values entered must be within the value range specified for the **Output Scale/ OUT_SCALE** parameter → 86.
7. Specify the alarm priorities by means of the **High High Priority/ HI_HI_PRI**, **High Priority/ HI_PRI**, **Low Low Priority/ LO_LO_PRI** and **Low Priority/ LO_PRI** parameters. Reporting to the field host system only takes place with alarms with a priority greater than 2.
8. Set the block mode to **Auto** using the **Block Mode/MODE_BLK** parameter, **TARGET** element. For this purpose, the Resource Block must also be set to the **Auto** block mode.

12.2.5 Additional configuration

1. Link the function blocks and output blocks.
2. After specifying the active LAS, download all the data and parameters to the field device.

12.3 Scaling of the measured value in an AI Block

If the type of linearisation **L_TYPE = indirect** has been selected in an AI block, the measured value can be scaled within the block. The input range is defined by the **XD_SCALE** parameter through its **EU_0** and **EU_100** elements. This range is mapped linearly to the output range defined by the **OUT_SCALE** parameter through its **EU_0** and **EU_100** elements.

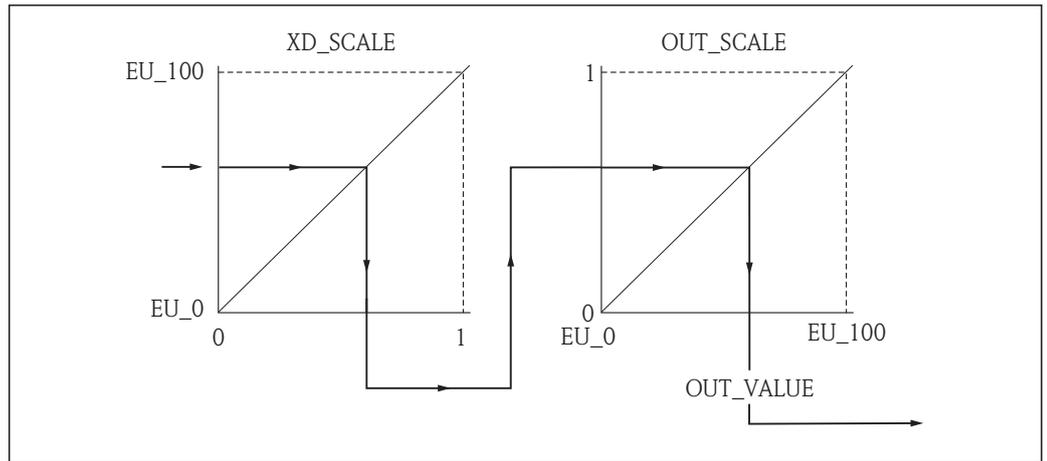

24 Scaling of the measured value in an AI Block

- i

 If you have selected the **Direct** mode for the **L_TYPE** parameter, you cannot change the values and units for **XD_SCALE** and **OUT_SCALE**.
- The **L_TYPE**, **XD_SCALE** and **OUT_SCALE** parameters can only be changed in the OOS block mode.

12.4 Language selection


Step	Block	Parameter	Action
1	DISPLAY (TRDDISP)	Language (language)	Select language ¹⁾ . Selection: <ul style="list-style-type: none"> ▪ 32805: Arabian ▪ 32824: Chinese simplified ▪ 32842: Czech ▪ 32881: Dutch ▪ 32888: English ▪ 32917: French ▪ 32920: German ▪ 32945: Italian ▪ 32946: Japanese ▪ 32948: Korean ▪ 33026: Polish ▪ 33027: Portuguese ▪ 33062: Russian ▪ 33083: Spanish ▪ 33103: Thai ▪ 33120: Vietnamese ▪ 33155: Bahasa ▪ 33166: Turkish

1) When ordering a device the set of available languages is defined. Refer to the product structure, feature 500 "Additional Operation Language".

12.5 Configuration of an interface measurement

- i

 The **Setup** method can also be used to configure the measurement. It is called up via the **SETUP** (TRDSUP) transducer block.

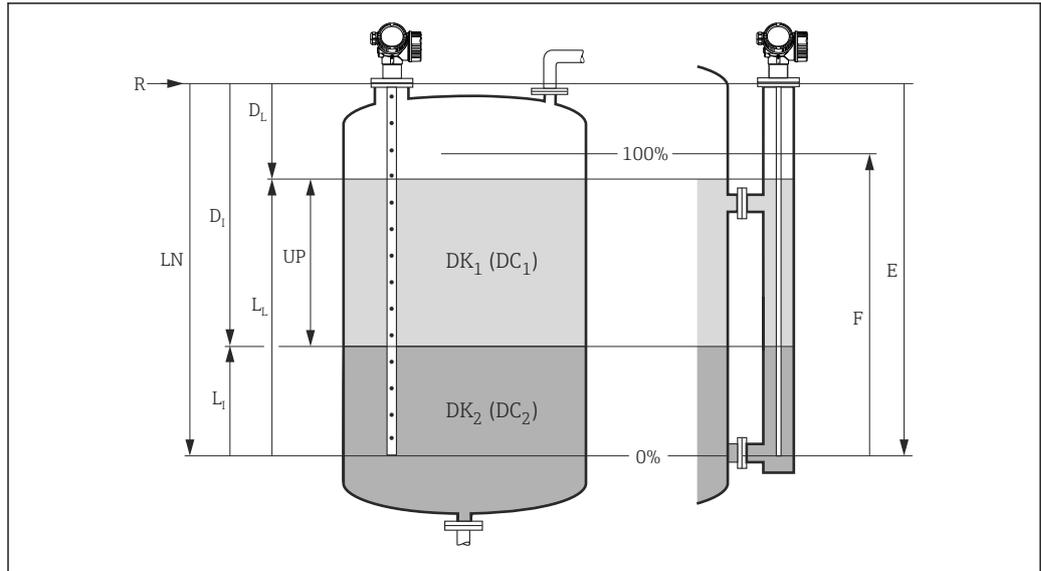

A0011177

25 Configuration parameters for interface measurements

- R* = Reference point of the measurement *D_I* = Distance of interface (Distance from reference point to lower medium)
- E* = Empty calibration (= zero point) *L₁* = Interface level
- F* = Full calibration (= span) *D_L* = Distance from reference point R to total level
- LN* = Length of probe *L_L* = total level
- UP* = Thickness of upper medium

Step	Block	Parameter	Action
1	SETUP (TRDSUP)	Operating mode (operating_mode)	Select 32940: Interface with capacitance .
2	SETUP (TRDSUP)	Distance unit (distance_unit)	Select distance unit. Selection: <ul style="list-style-type: none"> ▪ 1010: m ▪ 1013: mm ▪ 1018: in ▪ 1019: ft
3	SETUP (TRDSUP)	Tank type (tank_type)	Select tank type. Selection: <ul style="list-style-type: none"> ▪ 32816: Bypass / pipe ▪ 33288: Metallic ▪ 33302: Coaxial ▪ 33432: Twin rope ▪ 33433: Twin rod ▪ 33437: Rope centering disc metallic ▪ 33438: Rod centering disc metallic ▪ 33441: Non metallic ▪ 33444: Mounted outside
4	SETUP (TRDSUP)	Tube diameter (tube_diameter) ¹⁾	Enter the diameter of the bypass or stilling well.

Step	Block	Parameter	Action
5	SETUP (TRDSUP)	DC value (dc_value)	Enter dielectric constant of the upper medium.
6	SETUP (TRDSUP)	Empty calibration (empty_calibration)	Enter the distance E between the reference point R and the minimum level (0%).
7	SETUP (TRDSUP)	Full calibration (full_calibration)	Enter distance F between the minimum (0%) and maximum (100%) level.
8	SETUP (TRDSUP)	Level (level)	Displays the measured level L.
9	SETUP (TRDSUP)	Interface (interface)	Displays the interface height L _i .
10	SETUP (TRDSUP)	Distance (filtered_dist_val)	Displays the distance D between the reference point R and the level L.
11	SETUP (TRDSUP)	Interface distance (interface_distance)	Displays the distance D _i between the reference point R and the interface L _i .
12	SETUP (TRDSUP)	Signal quality (signal_quality)	Displays the signal quality of the level echo.
13	SETUP (TRDSUP)	Confirm distance (confirm_distance)	Compare the displayed distance to the real distance in order to start the recording of the mapping curve. Selection: <ul style="list-style-type: none"> ▪ 179: Manual map ▪ 32847: Delete all ▪ 32859: Distance ok ▪ 32860: Distance too big ▪ 32861: Distance too small ▪ 32862: Distance unknown ▪ 33100: Tank empty

1) only available for coated probes and "Tank type" = "Bypass/pipe"

NOTICE

Wrong dielectric constant of the lower medium may cause a measuring error.

- ▶ If, in the case of the operating mode **32940: Interface with capacitance** the lower medium is no water, it is necessary to specify its dielectric constant (DC value). Block: **ADV_SETUP (TRDASUP)**; parameter: **DC value lower medium (dc_value_lower_medium)**.

NOTICE**Wrong empty capacitance may cause a measuring error.**

- ▶ For rod and rope probes a correct measurement in the **32940: Interface with capacitance** operating mode is only possible after the empty capacitance has been determined. To do so, make sure that the vessel is completely empty and select the "Tank empty" option in the "Confirm distance" parameter (Step 13 in the table above). Only in exceptional cases (if the tank can not be emptied during the commissioning) the empty capacitance of rod probes may be entered manually. Block: **EXPERT_CONFIG (TRDEXP)**; Parameter: **Empty capacity (empty_capacity)**.

 For coax probes the correct empty capacitance is always set on delivery.

12.6 Configuration of the on-site display

12.6.1 Factory settings of the on-site display for interface measurements

Parameter	Factory setting for devices with 1 current output	Factory setting for devices with 2 current outputs
Format display	1 value, max. size	1 value, max. size
Value 1 display	Interface	Interface
Value 2 display	Level linearized	Level linearized
Value 3 display	Upper interface thickness	Current output 1
Value 4 display	Current output 1	Current output 2

 The on-site display can be adjusted in the **DISPLAY (TRDDISP)** transducer block.

12.7 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration. You can do so using the **Configuration management** parameter and its options.

Navigation path in the operating menu

Setup → Advanced setup → Conf.backup disp → Config. managem.

Block operation

Block: **DISPLAY (TRDDISP)**

Parameter: **Configuration management (configuration_management)**

Functions of the parameter options

Options	Description
33097: Execute backup	A backup copy of the current device configuration in the HistoROM is saved to the display module of the device. The backup copy comprises the transmitter data of the device.
33057: Restore	The last backup copy of the device configuration is copied from the display module to the HistoROM of the device. The backup copy comprises the transmitter data of the device.
33838: Duplicate	The transmitter configuration from another device is duplicated to the device using the display module.

Options	Description
265: Compare	The device configuration saved in the display module is compared to the current device configuration of the HistoROM.
32848: Clear backup data	The backup copy of the device configuration is deleted from the display module of the device.

HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.


-  While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.
-  For devices with FOUNDATION Fieldbus communication, the **PD Tag** parameter is also transmitted when duplicating the parameter configuration. If required change **PD Tag** to the required value after duplicating the set.

12.8 Configuration of the event behavior according to the FOUNDATION Fieldbus specification FF912

The device complies with the FOUNDATION Fieldbus specification FF912. This has - among other things - the following consequences:

- The diagnostic category according to NAMUR recommendation NE107 is transmitted via the fieldbus in a manufacturer-independent form:
 - F: Failure
 - C: Function check
 - S: Out of specification
 - M: Maintenance required
- The diagnostic category of pre-defined groups of events can be adjusted by the user according to the requirements of the specific application.
- Certain events can be separated from their group and can be handled individually:
 - 941: Echo lost
 - 942: In safety distance
- Additional information and remedial measures are transmitted together with the event message via the fieldbus.

i The diagnostic messages according to FF912 are available in the host only if the **Multi-bit support** option has been activated in the **FEATURE_SEL** parameter of the Resource block. For reasons of compatibility, this option is **not** activated on delivery:

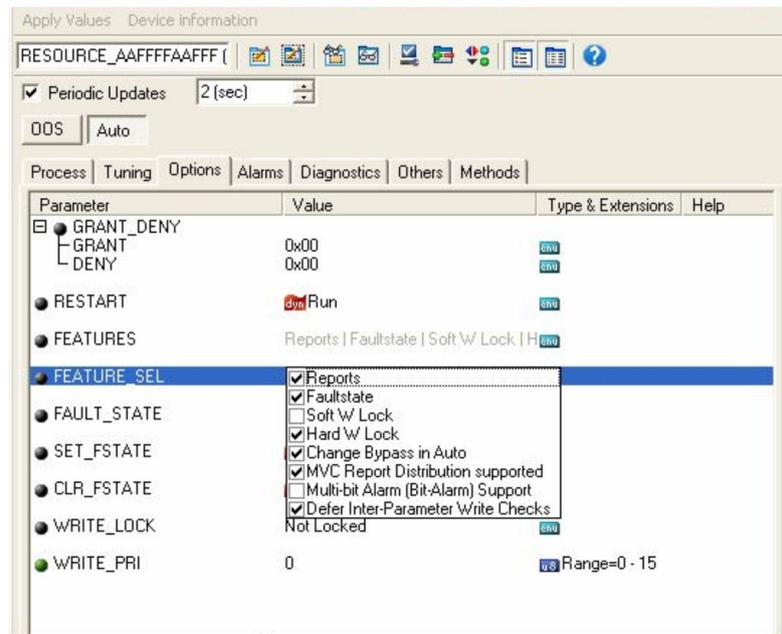

12.8.1 Groups of events

The diagnostic messages are classified into 16 groups according to the **source** and **severity** of the respective event. A **default diagnostic category** is allocated to each group. Each group is also represented by one bit of the allocation parameters.

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
Highest severity	Failure (F)	Sensor	31	<ul style="list-style-type: none"> ▪ F003: Broken probe detected ▪ F046: Build-up detected ▪ F083: Memory content ▪ F104: HF cable ▪ F105: HF cable ▪ F106: Sensor
		Electronics	30	<ul style="list-style-type: none"> ▪ F242: Software incompatible ▪ F252: Modules incompatible ▪ F261: Electronic modules ▪ F262: Module connecting ▪ F270: Main electronic failure ▪ F271: Main electronic failure ▪ F272: Main electronic failure ▪ F273: Main electronic failure ▪ F275: I/O-Modul failure ▪ F276: I/O module failure ▪ F282: Datenspeicher ▪ F283: Electronic memory ▪ F311: Memory content
		Configuration	29	<ul style="list-style-type: none"> ▪ F410: Data transfer ▪ F411: Up-/download ▪ F435: Linearization ▪ F437: Configuration incompatible
		Process	28	<ul style="list-style-type: none"> ▪ F803: Current loop 1 ▪ F825: Current loop 1 ▪ F936: EMC interference ▪ F941: Echo lost ¹⁾ ▪ F970: Linearization

1) This event can be removed from the group in order to define its behavior individually; see section "Configurable area".

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
High severity	Function check (C)	Sensor	27	not used in Levelflex
		Electronics	26	not used in Levelflex
		Configuration	25	<ul style="list-style-type: none"> ▪ C411: Up-/download ▪ C431: Trim ▪ C484: Simulation failure mode ▪ C485: Simulation measured value ▪ C491: Simulation current output ▪ C585: Simulation distance
		Process	24	not used in Levelflex

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
Low severity	Out of specification (S)	Sensor	23	not used in Levelflex
		Electronics	22	not used in Levelflex

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
		Configuration	21	S441: Current output 1
		Process	20	<ul style="list-style-type: none"> ▪ S801: Energy too low ▪ S825: Operating temperature ▪ S921: Change of reference ▪ S942: In safety distance ¹⁾ ▪ S943: In blocking distance ▪ S944: Level range ▪ S968: Level limited

- 1) This event can be removed from the group in order to define its behavior individually; see section "Configurable area".

Severity of the event	Default diagnostic category	Source of the event	Bit	Events within the group
Lowest severity	Maintenance required (M)	Sensor	19	not used in Levelflex
		Elektronics	18	<ul style="list-style-type: none"> ▪ M270: Main electronics failure ▪ M272: Main electronics failure ▪ M311: Electronics failure
		Configuration	17	M438: Data set
		Process	16	M803: Current loop 1

12.8.2 Allocation parameters

The allocation of event categories to the event groups is controlled by the allocation parameters. They reside in the **RESOURCE (RB2)** block:

- **FD_FAIL_MAP**: for the **Failure (F)** event category
- **FD_CHECK_MAP**: for the **Function check (C)** event category
- **FD_OFFSPEC_MAP**: for the **Out of specification (S)** event category
- **FD_MAINT_MAP**: for the **Maintenance required (M)** event category

Each allocation parameter consists of 32 bits with the following meaning:

- **Bit 0**: reserved by the Fieldbus Foundation
- **Bits 1 to 15**: Configurable area; here, a number of predefined diagnostic events can be allocated irrespective of the group of events they belong to. In this case they are removed from their group and their behavior can be configured individually. With Levelflex, the following parameters can be allocated to the configurable area:
 - 941: Echo lost
 - 942: In safety distance
- **Bits 16 ... 31**: Standard area; these bits are permanently allocated to a specific group of events. If a bit is set to **1**, the respective event category is assigned to the group.

The following table represents the default setting of the allocation parameters. In the default setting there is a unique relationship between the severity of the event and its category (i.e. its allocation parameter).

Default setting of the allocation parameters

Severity of the event	Standard area																Configurable area
	Highest severity				High severity				Low severity				Lowest severity				
Source of the event ¹⁾	S	E	C	P	S	E	C	P	S	E	C	P	S	E	C	P	
Bit	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15 ... 1
FD_FAIL_MAP	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0
FD_CHECK_MAP	0	0	0	0	1	1	1	1	0	0	0	0	0	0	0	0	0
FD_OFFSPEC_MAP	0	0	0	0	0	0	0	0	1	1	1	1	0	0	0	0	0
FD_MAINT_MAP	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	0


1) S: Sensor; E: Electronics; C: Configuration; P: Process

In order to change the diagnostic behavior of a group of events, proceed as follows:


1. Open the allocation parameter to which the group is currently allocated.
2. Switch the bit of the group from **1** to **0**. In the case of operation via FieldCare this is done by deactivating the respective checkbox (see the example below).
3. Open the allocation to which the group is to be allocated.
4. Switch the bit of the group from **0** to **1**. In the case of operation via FieldCare this is done by activating the respective checkbox (see the example below).

Example

The **Highest severity / Configuration** group contains the messages **410: Data transfer**, **411: Up-/Download**, **435: Linearization** and **437: Configuration incompatible**. These messages are no longer to be classified as **Failure (F)** but as **Function check (C)**.

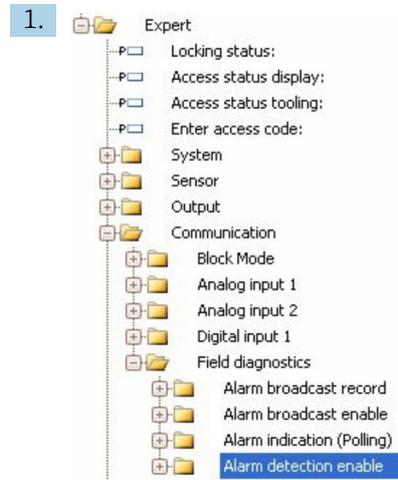

Use the FieldCare navigation window to navigate to the the following screen: **Expert → Communication → Field diagnostics → Alarm detection enable**.

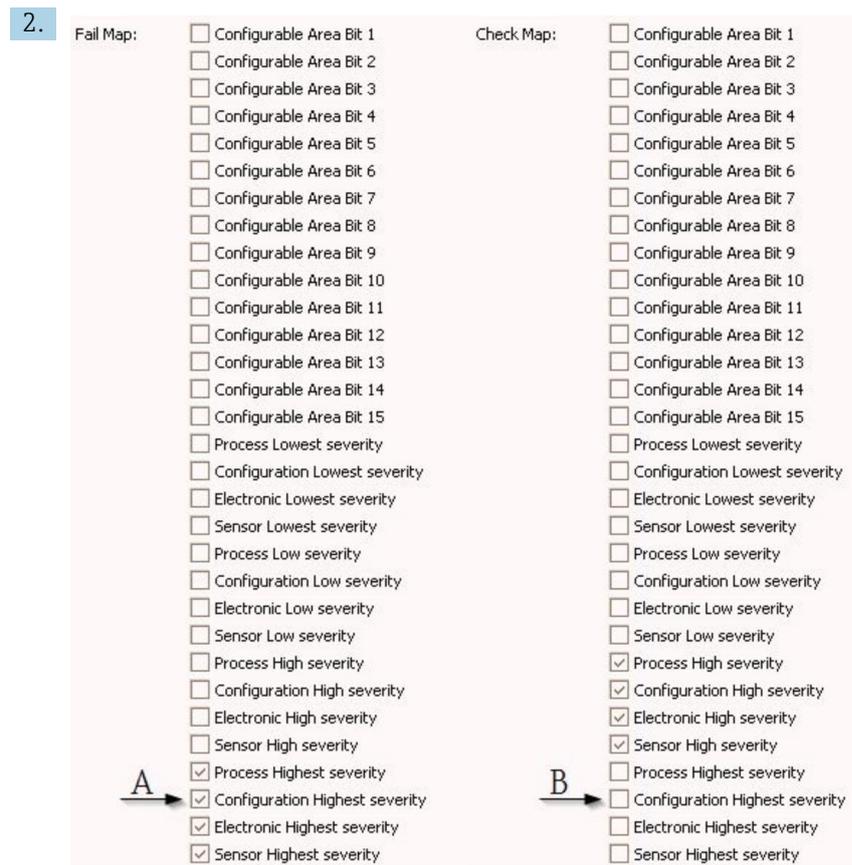

26 Default state of the "Fail Map" and "Check Map" columns

Look for the **Configuration Highest Severity** group in the **Fail Map** column and deactivate the associated checkbox (A). Activate the respective checkbox in the **Check Map** column (B). Remember to confirm each change by pressing the Enter key.



27 Changed state of the "Fail Map" and "Check Map" columns

-  Make sure that for each group the corresponding bit is set to **1** in at least one of the allocation parameters. Otherwise no event category is transmitted with the event message. As a consequence the message will not be recognized by the control system.
-  The **Alarm detection enable** screen is used to configure the detection of diagnostic events but not the transmission of event messages to the bus. The latter is configured on the **Alarm broadcast enable** screen, which is operated exactly in the same way as the **Alarm detection enable** screen. Status information is only transmitted to the bus if the Resource Block is in the **Auto** mode.

12.8.3 Configurable area


An event category can be individually defined for the following parameters - irrespective of the group of events they belong to by default.

- **F941**: Echo lost
- **S942**: In safety distance

Prior to changing the event category, the event must be allocated to one of the bits 1 to 15. This is performed by the parameters **FF912 ConfigArea_1** to **FF912ConfigArea_15** in the **DIAGNOSTIC (TRDDIAG)** block. Thereafter, the selected bit can be switched from **0** to **1** in the desired allocation parameter.

Example

To change the category of error **942 "In safety distance"** from **Out of specification (S)** (default), to **Function check (C)**, proceed as follows.

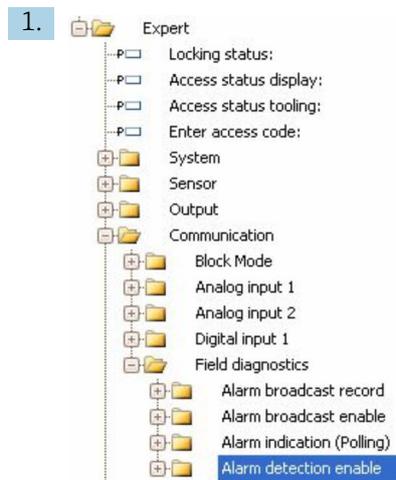


Use the FieldCare navigation window to navigate to the the following screen: **Expert** → **Communication** → **Field diagnostics** → **Alarm detection enable**.



By default all **Configurable Area Bits** are set to **not used**.



Select one of these bits (in the example: Configurable Area Bit 1) and select **In safety distance** from the associated drop-down menu. Confirm the selection by pressing the Enter key.

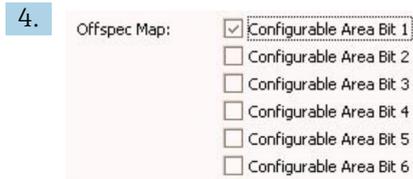


Got to the **Offspec Map** column and activate the checkbox of the respective bit (in the example: **Configurable Area Bit 1**). Confirm the selection by pressing the Enter key.

i A change of the error category of **In safety distance** does not affect an error which is already present. The new category is only assigned if a new error of this type occurs after the change.

12.8.4 Transmission of the event messages to the bus

Event priority

Event messages are only transmitted to the bus if their priority is between 2 and 15. Events of priority 1 are indicated on the display but not transmitted to the bus. Events of priority 0 are ignored. By default, the priority is 0 for all events. The priority can be adjusted individually for each allocation parameter. This is done by the following four priority parameters:

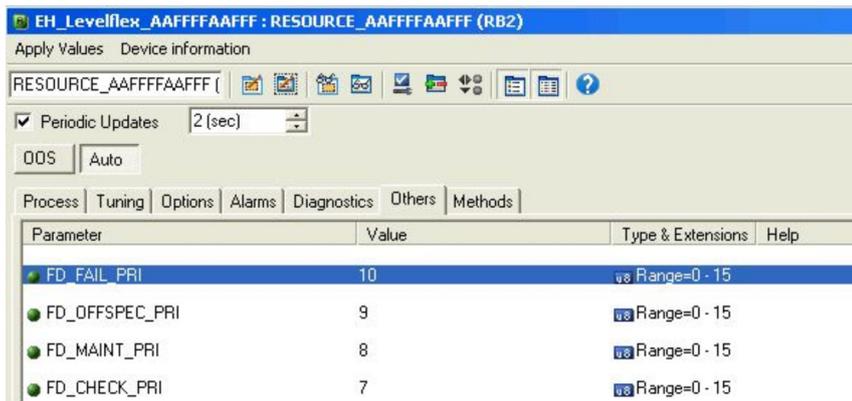

Suppression of individual events

For individual events, the transmission to the bus can be suppressed by the use of a mask. The corresponding events will be displayed but not transmitted to the bus. In FieldCare, this mask can be found at **Expert → Communication → Field diagnostics → Alarm broadcast enable**. This mask functions as a negative mask, which means that, if a field is marked, the corresponding events will **not** be transmitted to the bus.

12.9 Protection of the settings against unauthorized changes

There are two ways to protect the settings against unauthorized changes:

- Via locking switch (hardware locking)
- Via operating menu (software locking)
- Via block operation:
 - Block: **DISPLAY (TRDDISP)**; parameter: **Define access code (define_access_code)**
 - Block: **EXPERT_CONFIG (TRDEXP)**; parameter: **Enter access code (enter_access_code)**

13 Diagnostics and troubleshooting

13.1 General trouble shooting

13.1.1 General errors

Error	Possible cause	Remedial action
Device does not respond.	Supply voltage not connected.	Connect the correct voltage.
	The cables do not contact the terminals properly.	Ensure electrical contact between the cable and the terminal.
Values on the display invisible	Contrast setting is too weak or too strong.	<ul style="list-style-type: none"> ▪ Increase contrast by pressing \oplus and \boxminus simultaneously. ▪ Decrease contrast by pressing \ominus and \boxplus simultaneously.
	The plug of the display cable is not connected correctly.	Connect the plug correctly.
	Display is defective.	Replace display.
"Communication error" is indicated on the display when starting the device or connecting the display	Electromagnetic interference	Check grounding of the device.
	Broken display cable or display plug.	Exchange display.
Duplicating of the parameters from one device to another via the display doesn't work. Only the "Save" and "Abort" options are available.	Display with backup is not recognized if no data backup has been performed at the device before.	Connect display (with the backup) and restart the device.
CDI communication does not work.	Wrong setting of the COM port on the computer.	Check the setting of the COM port on the computer and change it if necessary.
Device measures incorrectly.	Parametrization error	Check and adjust parameterization.

13.1.2 Parametrization errors

Parametrization errors for level measurements

Error	Possible cause	Remedial action
Measured value wrong	If measured distance (Setup → Distance) matches the real distance: Calibration error	<ul style="list-style-type: none"> Check and adjust the Empty calibration parameter (→ 135) if necessary. Check and adjust the Full calibration parameter (→ 136) if necessary. Check and adjust linearization if necessary (Linearization submenu (→ 156)).
	If measured distance (Setup → Distance) does not match the real distance: An interference echo affects the measurement.	Perform mapping (Confirm distance parameter (→ 140)).
No change of the measured value when emptying/filling the tank	An interference echo affects the measurement.	Perform mapping (Confirm distance parameter (→ 140)).
	Build-up at the probe.	Clean the probe.
	Error in the echo tracking	Deactivate echo tracking: Expert → Sensor → Echo tracking → Evaluation mode = History off .
The diagnostic message Echo lost appears after switching on the supply voltage.	Echo threshold too high.	Check the Medium group parameter (→ 134). If necessary select a more detailed setting in the Medium property parameter.
	Level echo suppressed.	Delete mapping and record new mapping curve if required (Record map parameter (→ 142)).
Device displays a level when the tank is empty.	Incorrect probe length	Carry out probe length correction (Confirm probe length parameter (→ 170)).
	Interference echo	Carry out mapping over entire probe while the tank is empty (Confirm distance parameter (→ 140)).
Wrong slope of the level in the entire measuring range	Wrong tank type selected.	Set Tank type parameter (→ 134) correctly.


Parametrization errors for interface measurements

Error	Possible cause	Remedial action
Wrong slope of the measured interface level	Wrong dielectric constant (DC value).	Enter the correct dielectric constant (DC value) of the upper medium (DC value parameter (→ 138)).
The measured values for the interface and the total level are identical	Echo threshold for the total level too high due to a wrong dielectric constant.	Enter the correct dielectric constant (DC value) of the upper medium (DC value parameter (→ 138)).
If the interface layers are thin, the total level jumps to the interface level.	The thickness of the upper medium is less than 60 mm (2.4 in).	Interface measurement is only possible if the thickness of the interface is greater than 60 mm (2.4 in).

13.2 Diagnostic information on local display

13.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the measured value display.

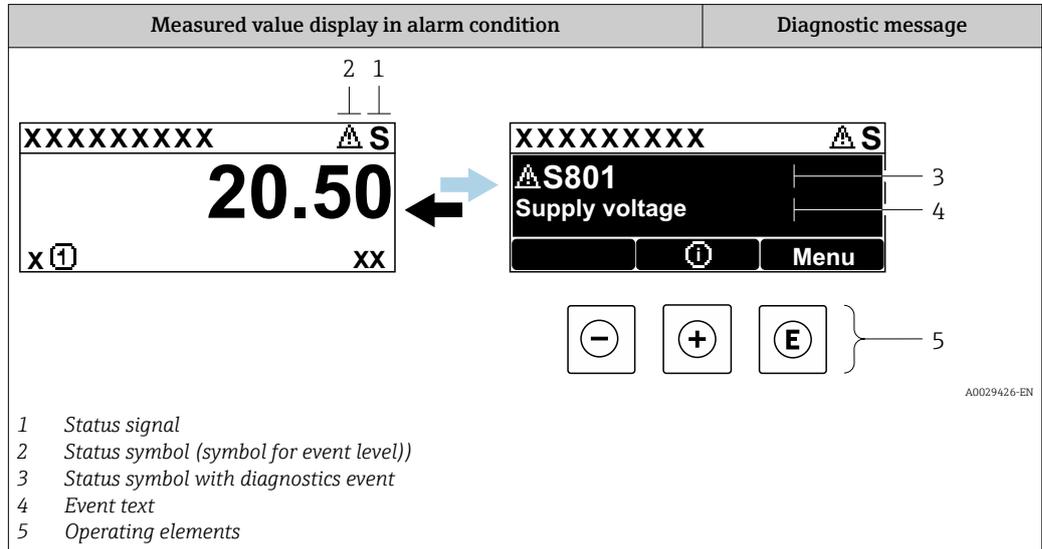

Status signals


F <small>A0032902</small>	"Failure (F)" option A device error is present. The measured value is no longer valid.
C <small>A0032903</small>	"Function check (C)" option The device is in service mode (e.g. during a simulation).
S <small>A0032904</small>	"Out of specification (S)" option The device is operated: <ul style="list-style-type: none"> ▪ Outside of its technical specifications (e.g. during startup or a cleaning) ▪ Outside of the configuration carried out by the user (e.g. level outside configured span)
M <small>A0032905</small>	"Maintenance required (M)" option Maintenance is required. The measured value is still valid.

Status symbol (symbol for event level)

⊗	"Alarm" status The measurement is interrupted. The signal outputs take on the defined alarm condition. A diagnostic message is generated.
⚠	"Warning" status The device continues to measure. A diagnostic message is generated.

Diagnostics event and event text

The fault can be identified using the diagnostics event. The event text helps you by providing information about the fault. In addition, the corresponding symbol is displayed before the diagnostics event.

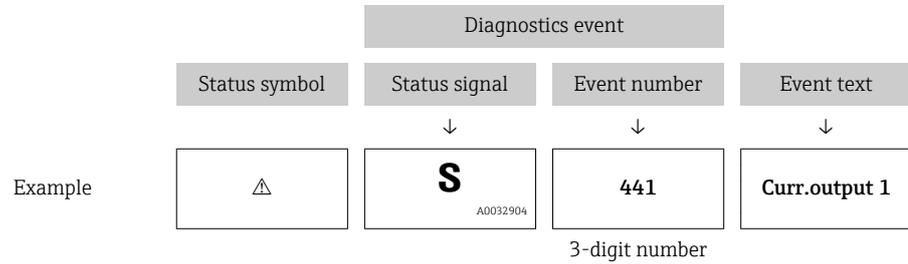


If two or more diagnostic messages are pending simultaneously, only the message with the highest priority is shown. Additional pending diagnostic messages can be shown in the **Diagnostic list** submenu.

-  Past diagnostic messages that are no longer pending are shown as follows:
 - On the local display:
in the **Event logbook** submenu
 - In FieldCare:
via the "Event List /HistoROM" function.

Operating elements

Operating functions in menu, submenu	
+	Plus key Opens the message about the remedial measures.
E	Enter key Opens the operating menu.

13.2.2 Calling up remedial measures

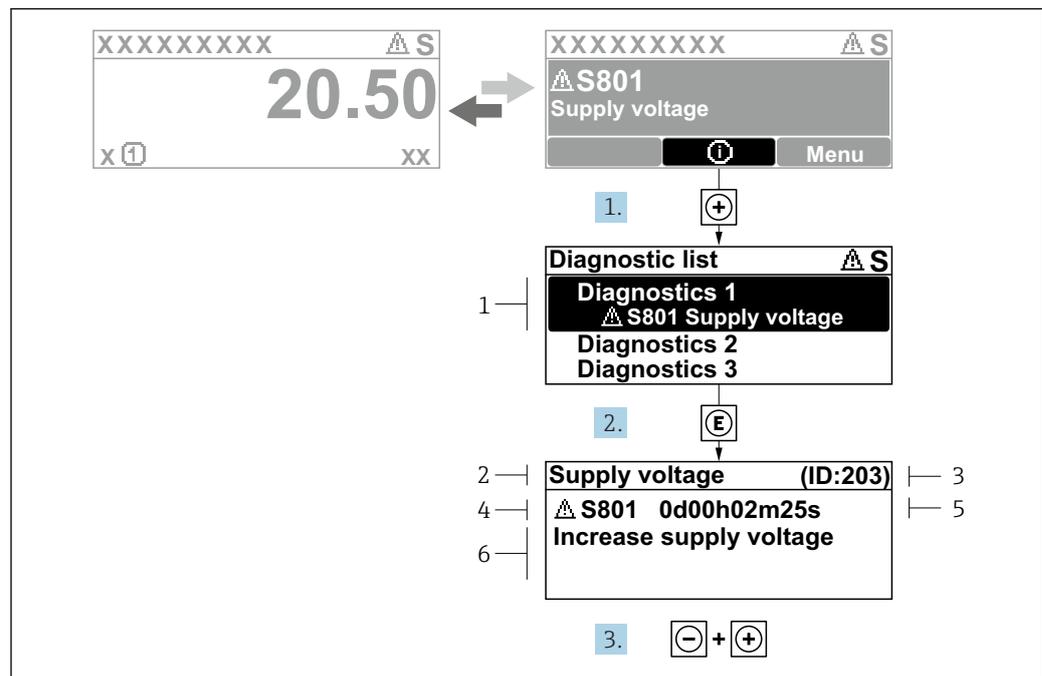

28 Message for remedial measures

A0029431-EN

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

1. Press \oplus ($\text{\textcircled{1}}$ -Symbol).
 - ↳ **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with \oplus or \ominus and press $\text{\textcircled{E}}$.
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press \ominus + \oplus simultaneously.
 - ↳ The message for the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in **Diagnostic list** submenu or in **Previous diagnostics**.

1. Press $\text{\textcircled{E}}$.
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press \ominus + \oplus simultaneously.
 - ↳ The message for the remedial measures closes.


13.3 Diagnostic event in the operating tool

If a diagnostic event is present in the device, the status signal appears in the top left status in the operating tool along with the corresponding symbol for event level in accordance with NAMUR NE 107:

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)

A: Via the operating menu

1. Navigate to the **Diagnostics** menu.
 - ↳ In the **Actual diagnostics** parameter, the diagnostic event is shown with event text.
2. On the right in the display range, hover the cursor over the **Actual diagnostics** parameter.

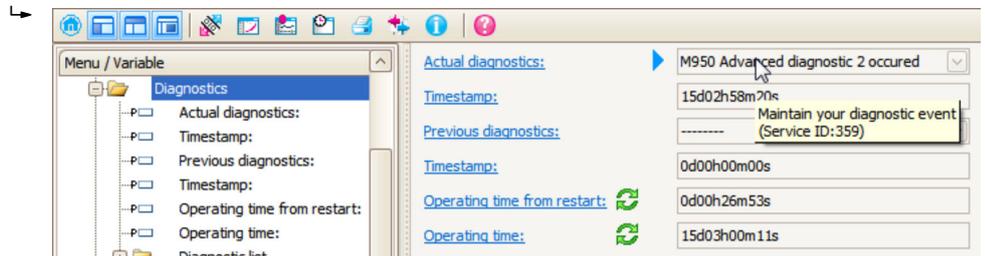

A tool tip with remedial measures for the diagnostic event appears.

B: Via the "Create documentation" function

- 1.

Select the "Create documentation" function.

2.


Documentation	Status
<input checked="" type="checkbox"/> Documentation	Initialized
<input checked="" type="checkbox"/> Title Pages	Initialized
<input checked="" type="checkbox"/> Cover Page	Initialized
<input checked="" type="checkbox"/> Signatures Page	Initialized
<input checked="" type="checkbox"/> Device parameters	Initialized
<input checked="" type="checkbox"/> Linearization table	Initialized
<input checked="" type="checkbox"/> Envelope curve	Initialized
<input checked="" type="checkbox"/> Extended HistoROM	Initialized
<input checked="" type="checkbox"/> Diagram data	Initialized
<input checked="" type="checkbox"/> Data overview	Initialized
<input type="checkbox"/> Compare Datasets	Not available

Make sure "Data overview" is marked.

3. Click "Save as ..." and save a PDF of the protocol.
 - ↳ The protocol contains the diagnostic messages and remedy information.


C: Via the "Eventlist / Extended HistoROM" function

1.

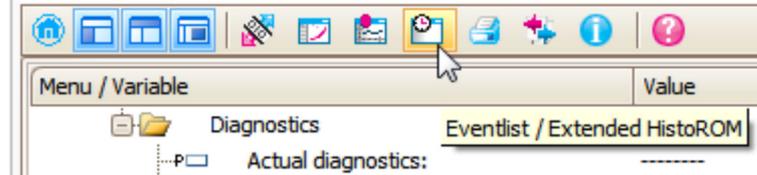

Select the "Eventlist / Extended HistoROM" function.

2.

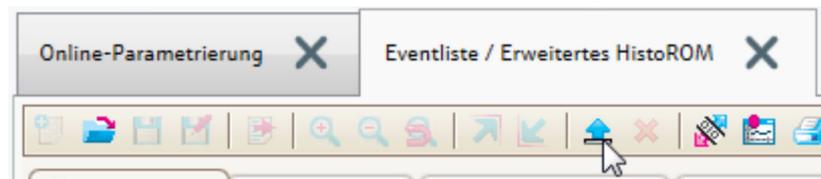

Select the "Load Eventlist" function.

- ↳ The list of events, including remedy information, is shown in the "Data overview" window.

13.4 Diagnostic messages in the DIAGNOSTIC Transducer Block (TRDDIAG)

- The **Actual diagnostics** parameter displays the message with the highest priority. Every message is also output as per the FOUNDATION Fieldbus Specification by means of the **XD_ERROR** and **BLOCK_ERROR** parameters.
- A list of diagnostic messages is displayed in the **Diagnostics 1** to **Diagnostics 5** parameters. If more than 5 messages are currently active, only those with the highest priority are displayed.
- You can view a list of alarms which are no longer active (event log) via the **Previous diagnostics** parameter.

13.5 Diagnostic list

In the **Diagnostic list** submenu submenu, up to 5 currently pending diagnostic messages can be displayed. If more than 5 messages are pending, the messages with the highest priority are shown on the display.

Navigation path

Diagnostics → Diagnostic list

Calling up and closing the remedial measures

1. Press \square .
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press $\square + \oplus$ simultaneously.
 - ↳ The message about the remedial measures closes.

13.6 Event logbook

13.6.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Event list** submenu ³⁾.

Navigation path

Diagnostics → Event logbook → Event list

A maximum of 100 event messages can be displayed in chronological order.

Die Ereignishistorie umfasst Einträge zu:

- Diagnostic events
- Information events

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
 - ☺: Event has occurred
 - ☹: Event has ended
- Information event
 - ☺: Event has occurred

Calling up and closing the remedial measures

1. Press 
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press  +  simultaneously.
 - ↳ The message about the remedial measures closes.

13.6.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Event list** submenu.

Navigation path

Diagnostics → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information

13.6.3 Overview of information events

Info number	Info name
I1000	----- (Device ok)
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed

3) This submenu is only available for operation via local display. In the case of operation via FieldCare, the event list can be displayed with the "Event List / HistoROM" functionality of FieldCare.

Info number	Info name
I1092	Trend data deleted
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1154	Reset terminal voltage min/max
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1256	Display: access status changed
I1264	Safety sequence aborted
I1335	Firmware changed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished

13.7 Firmware history

Date	Firmware version	Modifications	Documentation (FMP55, FOUNDATION Fieldbus)		
			Operating Instructions	Description of Parameters	Technical Information
04.2012	01.00.zz	Original-Software	BA01054F/00/EN/01.12	GP01015F/00/EN/01.12	TI01003F/00/EN/14.12
05.2015	01.01.zz	<ul style="list-style-type: none"> ▪ Support of SD03 ▪ additional languages ▪ HistoROM functionality enhanced ▪ "Advanced Diagnostic" function block integrated ▪ Improvements and bugfixes 	BA01054F/00/EN/03.15 BA01054F/00/EN/04.16 ¹⁾	GP01015F/00/EN/02.15	TI01003F/00/EN/17.15 TI01003F/00/EN/20.16 ¹⁾

1) Contains information on the Heartbeat wizards which are available in the latest DTM version for DeviceCare and FieldCare.



The firmware version can explicitly be ordered via the product structure. In this way it is possible to ensure compatibility of the firmware version with an existing or planned system integration.

14 Maintenance

The measuring device requires no special maintenance.

14.1 Exterior cleaning

When exterior-cleaning the device, always use cleaning agents that do not attack the surface of the housing and the seals.

14.2 Cleaning coax probes

For cleaning purposes the ground tube can be stripped of the coaxial probe. When unmounting and remounting the tube, make sure that the PFA spacers do not get out of space. A first spacer is positioned at about 10 cm (4 in) from the end of the probe. Depending of the length of the probe there may be additional spacers evenly spaced along the probe.

15 Repairs

15.1 General information on repairs

15.1.1 Repair concept

The Endress+Hauser repair concept assumes that the devices have a modular design and that repairs can be done by the Endress+Hauser service or specially trained customers.

Spare parts are contained in suitable kits. They contain the related replacement instructions.

For more information on service and spare parts, contact the Service Department at Endress+Hauser.

15.1.2 Repairs to Ex-approved devices

When carrying out repairs to Ex-approved devices, please note the following:

- Repairs to Ex-approved devices may only be carried out by trained personnel or by the Endress+Hauser Service.
- Comply with the prevailing standards, national Ex-area regulations, safety instructions (XA) and certificates.
- Only use original spare parts from Endress+Hauser.
- When ordering a spare part, please note the device designation on the nameplate. Only replace parts with identical parts.
- Carry out repairs according to the instructions. On completion of repairs, carry out the specified routine test on the device.
- Only Endress+Hauser Service may convert a certified device into a different certified variant.
- Document all repair work and conversions.

15.1.3 Replacement of an electronics module

If an electronics module has been replaced, it is not necessary to perform a new basic setup as the calibration parameters are stored in the HistoROM which is located in the housing. However, after exchanging the main electronics module it may be necessary to record a new mapping (interference echo suppression).

15.1.4 Replacement of a device


After a complete device or electronic module has been replaced, the parameters can be downloaded into the instrument again in one of the following ways:

- Via the display module
Condition: The configuration of the old device has been saved in the display module
→  185.
- Via FieldCare
Condition: The configuration of the old device has been saved to the computer via FieldCare.

You can continue to measure without carrying out a new setup. Only a linearization and a tank map (interference echo suppression) have to be recorded again.

15.2 Spare parts

- A few interchangeable measuring device components are identified by a spare part nameplate. This contains information about the spare part.
- The connection compartment cover of the device contains a spare part nameplate that includes the following information:
 - A list of the most important spare parts for the measuring device, including their ordering information.
 - The URL for the *W@M Device Viewer* (www.endress.com/deviceviewer): There, all spare parts for the measuring device are listed, including the order code, and can be ordered. If available, the corresponding Installation Instructions can also be downloaded there.

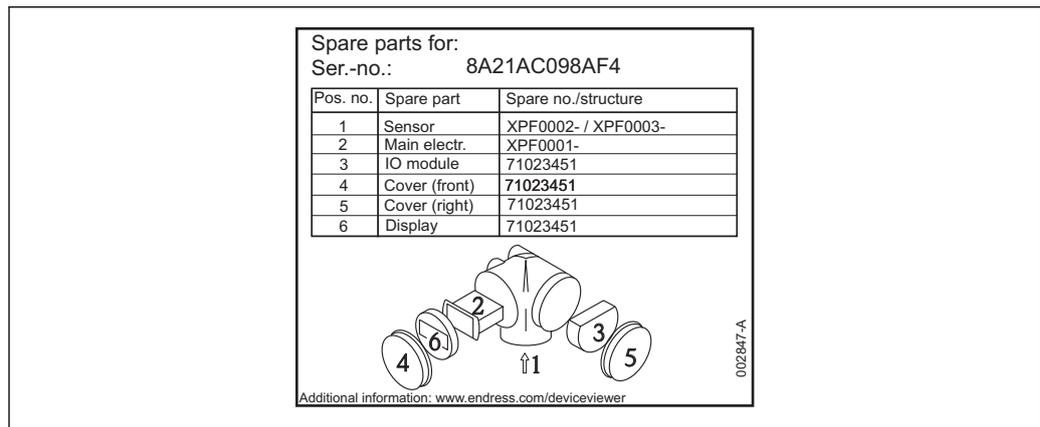

29 Example for spare part nameplate in connection compartment cover

- i** Measuring device serial number:
 - Is located on the device and spare part nameplate.
 - Can be read out via the "Serial number" parameter in the "Device information" submenu.

15.3 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <http://www.endress.com/support/return-material>

15.4 Disposal


Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.



16 Accessories

16.1 Device-specific accessories



16.1.1 Weather protection cover

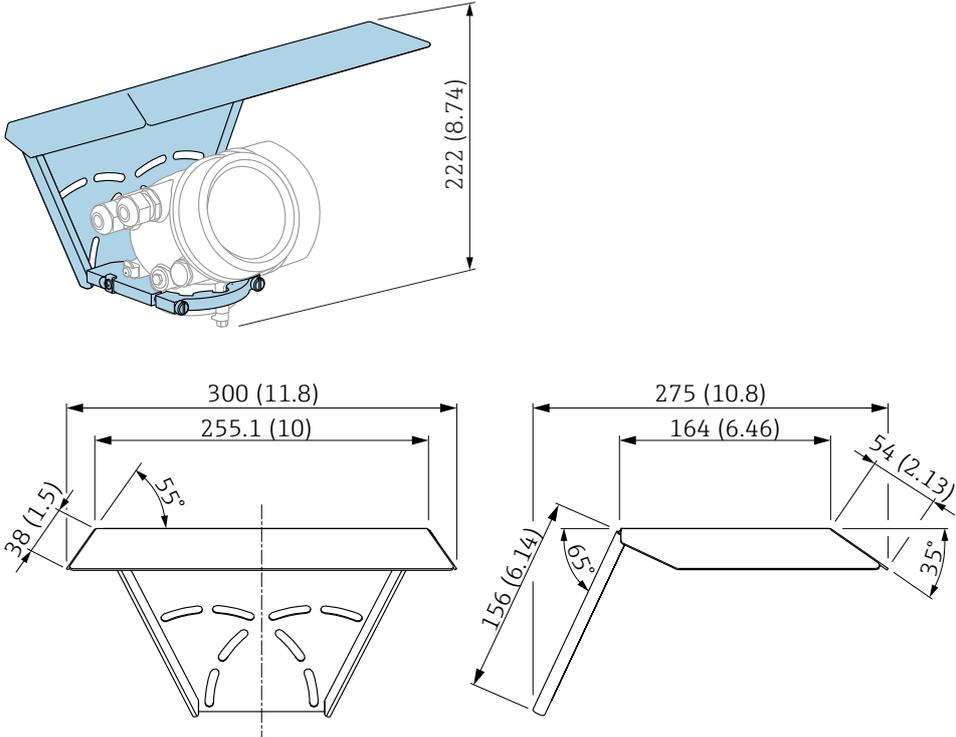Accessory	Description
Weather protection cover	 <p data-bbox="1476 869 1528 882">A0015466</p> <p data-bbox="1476 1279 1528 1292">A0015472</p> <p data-bbox="416 1301 925 1330">☑ 30 Weather protection cover; Dimensions: mm (in)</p> <p data-bbox="416 1357 1492 1435">  The weather protection cover can be ordered together with the device (product structure, feature 620 "Accessory Enclosed", option PB "Weather Protection Cover"). Alternatively, it can be separately ordered as an accessory; order code 71162242. </p>

16.1.2 Mounting bracket for the electronics housing

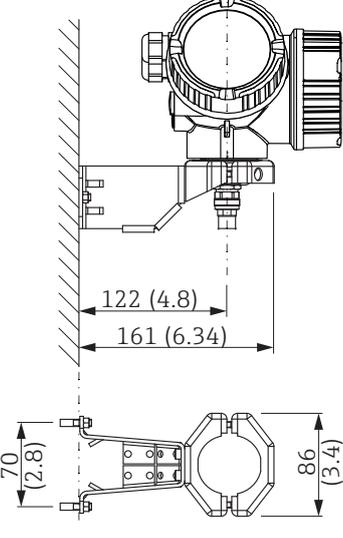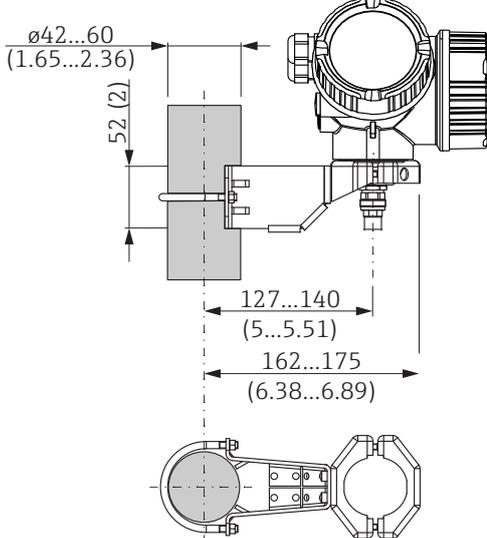Accessory	Description
Mounting bracket for the electronics housing	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>A</p>  </div> <div style="text-align: center;"> <p>B</p>  </div> </div> <p> 31 Mounting bracket for the electronics housing; Dimensions: mm (in)</p> <p>A Wall mounting B Pipe mounting</p> <p> For the "Sensor remote" device version (see feature 060 of the product structure), the mounting bracket is part of the delivery. If required, it can also be ordered as an accessory (order code 71102216).</p> <p style="text-align: right; font-size: small;">A0014793</p>

16.1.3 Centering star

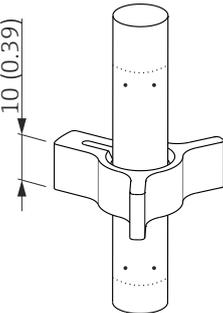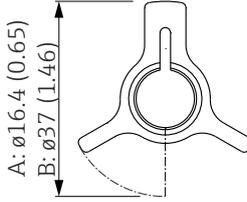Accessory	Description
Centering star PFA <ul style="list-style-type: none"> ■ ϕ 16.4 mm (0.65 in) ■ ϕ 37 mm (1.46 in) can be used for FMP55	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> </div> <p>A For 8 mm (0.3 in) probes B: For 12 mm (0.47 in) and 16 mm (0.63 in) probes</p> <p>The centering star is suitable for probes with a rod diameter of 8 mm (0.3 in), 12 mm (0.47 in) and 16 mm (0.63 in) (also coated rod probes) and can be used in pipes from DN40 (1½") up to DN50 (2"). See also Operating Instructions BA00378F/00/A2.</p> <ul style="list-style-type: none"> ■ Material: PFA ■ Admissible process temperature: -200 to +250 °C (-382 to +482 °F) ■ Order code <ul style="list-style-type: none"> - Probe 8 mm (0.3 in): 71162453 - Probe 12 mm (0.47 in): 71157270 - Probe 16 mm (0.63 in): 71069065 <p> The PFA centering star can also be ordered directly with the device (see the Levelflex product structure, feature 610 "Accessory mounted", option OE).</p> <p style="text-align: right; font-size: small;">A0014577</p>

16.1.4 Remote display FHX50


Accessories	Description
Remote display FHX50	<div style="text-align: center;"> </div> <p style="text-align: right; font-size: small;">A0019128</p> <ul style="list-style-type: none"> ▪ Material: <ul style="list-style-type: none"> - Plastic PBT - 316L/1.4404 - Aluminum ▪ Degree of protection: IP68 / NEMA 6P and IP66 / NEMA 4x ▪ Suitable for display modules: <ul style="list-style-type: none"> - SD02 (push buttons) - SD03 (touch control) ▪ Connecting cable: <ul style="list-style-type: none"> - Cable supplied with device up to 30 m (98 ft) - Standard cable supplied by customer up to 60 m (196 ft) ▪ Ambient temperature range: -40 to 80 °C (-40 to 176 °F) ▪ Ambient temperature range (option): -50 to 80 °C (-58 to 176 °F) ¹⁾ <p> i ▪ If the remote display should be used, order the device version "Prepared for display FHX50" (feature 030, version L, M or N). For the FHX50, you must select option A: "Prepared for display FHX50" under feature 050 "Measuring device version". </p> <p> i ▪ If the device version "Prepared for display FHX50" was not originally ordered and a FHX50 display is to be retrofitted, you must select version B "Not prepared for display FHX50" under feature 050: "Measuring device version" when ordering the FHX50. In this case, a retrofit kit for the device is supplied with the FHX50. The kit can be used to prepare the device so that the FHX50 can be used. </p> <p> i Use of the FHX50 may be restricted for transmitters with an approval. A device can only be retrofitted with the FHX50 if the option L, M or N ("Prepared for FHX50") is listed under <i>Basic specifications</i>, item 4 "Display, operation" in the Safety Instructions (XA) for the device. Also pay attention to the Safety Instructions (XA) of the FHX50. </p> <p> i Retrofitting is not possible on transmitters with: <ul style="list-style-type: none"> ▪ An approval for use in areas with flammable dust (dust ignition-proof approval) ▪ Ex nA type of protection </p> <p> i For details, see document SD01007F. </p>

1) This range is valid if option JN "Ambient temperature transmitter -50 °C (-58 °F)" has been selected in ordering feature 580 "Test, Certificate". If the temperature is permanently below -40 °C (-40 °F), failure rates may be increased.

16.1.5 Overvoltage protection

Accessory	Description
Overvoltage protection for 2-wire-devices OVP10 (1 channel) OVP20 (2 channel)	<div data-bbox="327 324 715 660" data-label="Image"> </div> <div data-bbox="1380 667 1437 683" data-label="Text"> <p>A0021734</p> </div> <p data-bbox="327 712 470 734">Technical data</p> <ul data-bbox="327 739 917 896" style="list-style-type: none"> ▪ Resistance per channel: $2 * 0.5 \Omega_{max}$ ▪ Threshold DC voltage: 400 to 700 V ▪ Threshold impulse voltage: < 800 V ▪ Capacitance at 1 MHz: < 1.5 pF ▪ Nominal arrest impulse voltage (8/20 μs): 10 kA ▪ Suited for wire cross-sections: 0.2 to 2.5 mm² (24 to 14 AWG) <p data-bbox="327 907 582 929">i Ordering with device</p> <p data-bbox="375 934 1388 1008">The overvoltage protection module is preferably ordered with the device. See product structure, feature 610 "Accessory mounted", option NA "Overvoltage protection". Separate ordering of the module is only necessary if a device is to be retrofitted with the overvoltage protection.</p> <p data-bbox="327 1019 630 1041">i Order code for retrofitting</p> <ul data-bbox="375 1046 901 1153" style="list-style-type: none"> ▪ For 1-channel devices (feature 020, option A) OVP10: 71128617 ▪ For 2-channel devices (feature 020, option B, C, E or G) OVP20 : 71128619 <p data-bbox="375 1164 638 1187">Housing lid for retrofitting</p> <p data-bbox="375 1191 1420 1243">In order to keep the necessary safety distances, the housing lid needs to be replaced if the device is retrofitted with the overvoltage protection. Depending on the housing type, the order code of the suitable lid is as follows:</p> <ul data-bbox="375 1247 678 1321" style="list-style-type: none"> ▪ GT18 housing: Lid 71185516 ▪ GT19 housing: Lid 71185518 ▪ GT20 housing: Lid 71185516 <p data-bbox="327 1332 646 1355">i Restrictions for retrofitting</p> <p data-bbox="375 1359 1428 1433">Depending on the approval of the transmitter the usage of the OVP module may be restricted. A device may only be retrofitted with an OVP module if the option NA (overvoltage protection) is quoted under <i>Optional Specifications</i> in the Safety Instructions (XA) pertaining to the device.</p> <p data-bbox="327 1444 662 1467">i For details refer to SD01090F.</p>

16.1.6 Bluetooth module for HART devices

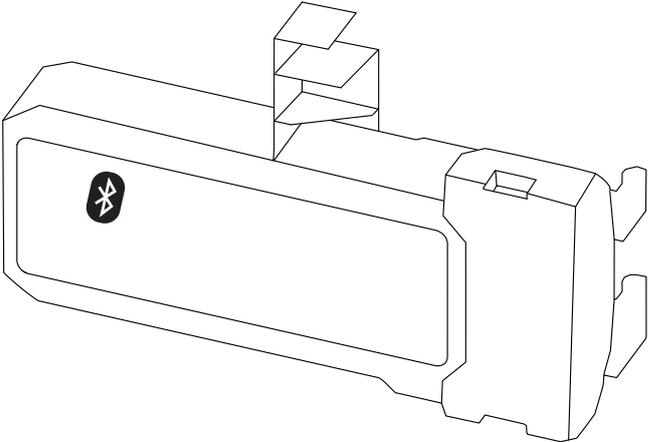Accessory	Description
Bluetooth module	<div style="text-align: right; margin-bottom: 10px;">A0036493</div>  <ul style="list-style-type: none"> ▪ Quick and easy commissioning via SmartBlue (app) ▪ No additional tools or adapters required ▪ Signal curve via SmartBlue (app) ▪ Encrypted single point-to-point data transmission (tested by Fraunhofer institute) and password protected communication via Bluetooth® wireless technology ▪ Range under reference conditions: > 10 m (33 ft) <p>i When using the Bluetooth module the minimum supply voltage increases by up to 3 V.</p> <p>i Ordering with device The Bluetooth module is preferably ordered with the device. See product structure, feature 610 "Accessory Mounted", option NF "Bluetooth". A separate order is only necessary in case of retrofitting.</p> <p>i Order code for retrofitting Bluetooth module (BT10): 71377355</p> <p>i Restrictions in case of retrofitting Depending on the approval of the transmitter, application of the Bluetooth module may be restricted. A device may only be retrofitted with a Bluetooth module if the option <i>NF</i> (Bluetooth) is listed in the associated Safety Instructions (<i>XA</i>) under <i>Optional specifications</i>.</p> <p>i For details refer to SD02252F.</p>

16.2 Communication-specific accessories

Accessory	Description
Commubox FXA291	Connects Endress+Hauser field devices with CDI interface (= Endress+Hauser Common Data Interface) to the USB interface of a computer. Order code: 51516983  For details refer to Technical Information TI00405C

Accessory	Description
Field Xpert SFX350	Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the non-Ex area .  For details, see Operating Instructions BA01202S

Accessory	Description
Field Xpert SFX370	Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the non-Ex area and the Ex area .  For details, see Operating Instructions BA01202S

16.3 Service-specific accessories

Accessory	Description
DeviceCare SFE100	Configuration tool for HART, PROFIBUS and FOUNDATION Fieldbus devices  Technical Information TI01134S  <ul style="list-style-type: none"> ▪ DeviceCare is available for download at www.software-products.endress.com. The download requires a registration in the Endress+Hauser software portal. ▪ Alternatively, a DeviceCare DVD can be ordered with the device. Product structure: Feature 570 "Service", Option IV "Tooling DVD (DeviceCare Setup)".
FieldCare SFE500	FDT-based Plant Asset Management tool. Helps to configure and maintain all field devices of your plant. By supplying status information it also supports the diagnosis of the devices.  Technical Information TI00028S

16.4 System components

Accessory	Description
Graphic Data Manager Memograph M	The graphic data manager Memograph M provides information on all the relevant process variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on an SD card or USB stick.  For details refer to Technical Information TI00133R and Operating Instructions BA00247R

17 Operating menu

17.1 Overview of the operating menu (display module)

Navigation  Operating menu

Language	→  178
Setup	→  133
Operating mode	→  133
Distance unit	→  133
Tank type	→  134
Tube diameter	→  134
DC value	→  138
Medium group	→  134
Empty calibration	→  135
Full calibration	→  136
Level	→  136
Interface	→  139
Distance	→  137
Interface distance	→  140
Signal quality	→  138
Mapping	→  143
Confirm distance	→  143
Mapping end point	→  143
Record map	→  143
Distance	→  143

▶ Analog inputs	
▶ Analog input 1 to 5	→ 144
Block tag	→ 144
Channel	→ 144
Process Value Filter Time	→ 145
▶ Advanced setup	→ 146
Locking status	→ 146
Access status display	→ 146
Enter access code	→ 147
▶ Interface	→ 148
Process property	→ 148
Interface property	→ 148
DC value lower medium	→ 149
Level unit	→ 150
Blocking distance	→ 150
Level correction	→ 151
▶ Automatic DC calculation	→ 154
Manual thickness upper layer	→ 154
DC value	→ 154
Use calculated DC value	→ 154
▶ Linearization	→ 156
Linearization type	→ 158
Unit after linearization	→ 159
Free text	→ 160
Maximum value	→ 161

Diameter	→ 161
Intermediate height	→ 162
Table mode	→ 162
► Edit table	
Level	→ 164
Customer value	→ 164
Activate table	→ 164
► Safety settings	→ 166
Output echo lost	→ 166
Value echo lost	→ 166
Ramp at echo lost	→ 167
Blocking distance	→ 167
► Probe settings	→ 169
Probe grounded	→ 169
► Probe length correction	→ 171
Confirm probe length	→ 171
Present probe length	→ 171
► Switch output	→ 172
Switch output function	→ 172
Assign status	→ 172
Assign limit	→ 173
Assign diagnostic behavior	→ 173
Switch-on value	→ 174
Switch-on delay	→ 175
Switch-off value	→ 175

Switch-off delay	→  176
Failure mode	→  176
Switch status	→  176
Invert output signal	→  176
► Display	→  178
Language	→  178
Format display	→  178
Value 1 to 4 display	→  180
Decimal places 1 to 4	→  180
Display interval	→  181
Display damping	→  181
Header	→  181
Header text	→  182
Separator	→  182
Number format	→  182
Decimal places menu	→  183
Backlight	→  183
Contrast display	→  184
► Configuration backup display	→  185
Operating time	→  185
Last backup	→  185

Configuration management	→  185
Comparison result	→  186
▶ Administration	→  188
▶ Define access code	→  190
Define access code	→  190
Confirm access code	→  190
Device reset	→  188
 Diagnostics	→  191
Actual diagnostics	→  191
Previous diagnostics	→  191
Operating time from restart	→  192
Operating time	→  185
▶ Diagnostic list	→  193
Diagnostics 1 to 5	→  193
▶ Event logbook	→  194
Filter options	→  194
▶ Event list	→  194
▶ Device information	→  195
Device tag	→  195
Serial number	→  195
Firmware version	→  195
Device name	→  196
Order code	→  196
Extended order code 1 to 3	→  196

▶ Measured values	→ 197
Distance	→ 137
Level linearized	→ 160
Interface distance	→ 140
Interface linearized	→ 161
Thickness upper layer	→ 198
Terminal voltage 1	→ 199
▶ Analog inputs	
▶ Analog input 1 to 5	→ 199
Block tag	→ 144
Channel	→ 144
Status	→ 200
Value	→ 200
Units index	→ 201
▶ Data logging	→ 202
Assign channel 1 to 4	→ 202
Logging interval	→ 203
Clear logging data	→ 203
▶ Display channel 1 to 4	→ 204
▶ Simulation	→ 207
Assign measurement variable	→ 208
Process variable value	→ 208
Switch output simulation	→ 208

Switch status	→ 209
Simulation device alarm	→ 209
▶ Device check	→ 210
Start device check	→ 210
Result device check	→ 210
Last check time	→ 210
Level signal	→ 211
Launch signal	→ 211
Interface signal	→ 211

17.2 Overview of the operating menu (operating tool)

Navigation



Operating menu

Setup	→ 133
Operating mode	→ 133
Distance unit	→ 133
Tank type	→ 134
Tube diameter	→ 134
Medium group	→ 134
Empty calibration	→ 135
Full calibration	→ 136
Level	→ 136
Distance	→ 137
Signal quality	→ 138
DC value	→ 138
Interface	→ 139
Interface distance	→ 140
Confirm distance	→ 140
Present mapping	→ 141
Mapping end point	→ 142
Record map	→ 142
▶ Analog inputs	
▶ Analog input 1 to 5	→ 144
Block tag	→ 144

Channel	→ 144
Process Value Filter Time	→ 145
► Advanced setup	→ 146
Locking status	→ 146
Access status tooling	→ 146
Enter access code	→ 147
► Interface	→ 148
Process property	→ 148
Interface property	→ 148
DC value lower medium	→ 149
Level unit	→ 150
Blocking distance	→ 150
Level correction	→ 151
Manual thickness upper layer	→ 151
Measured thickness upper layer	→ 152
DC value	→ 152
Calculated DC value	→ 152
Use calculated DC value	→ 153
► Linearization	→ 156
Linearization type	→ 158
Unit after linearization	→ 159
Free text	→ 160
Level linearized	→ 160
Interface linearized	→ 161
Maximum value	→ 161

Diameter	→  161
Intermediate height	→  162
Table mode	→  162
Table number	→  163
Level	→  164
Level	→  164
Customer value	→  164
Activate table	→  164
► Safety settings	→  166
Output echo lost	→  166
Value echo lost	→  166
Ramp at echo lost	→  167
Blocking distance	→  167
► Probe settings	→  169
Probe grounded	→  169
Present probe length	→  169
Confirm probe length	→  170
► Switch output	→  172
Switch output function	→  172
Assign status	→  172
Assign limit	→  173
Assign diagnostic behavior	→  173
Switch-on value	→  174
Switch-on delay	→  175
Switch-off value	→  175

Switch-off delay	→  176
Failure mode	→  176
Switch status	→  176
Invert output signal	→  176
► Display	→  178
Language	→  178
Format display	→  178
Value 1 to 4 display	→  180
Decimal places 1 to 4	→  180
Display interval	→  181
Display damping	→  181
Header	→  181
Header text	→  182
Separator	→  182
Number format	→  182
Decimal places menu	→  183
Backlight	→  183
Contrast display	→  184
► Configuration backup display	→  185
Operating time	→  185
Last backup	→  185
Configuration management	→  185

Backup state	→	📄	186
Comparison result	→	📄	186
▶ Administration	→	📄	188
Define access code	→	📄	190
Device reset	→	📄	188
🔍 Diagnostics	→	📄	191
Actual diagnostics	→	📄	191
Timestamp	→	📄	191
Previous diagnostics	→	📄	191
Timestamp	→	📄	192
Operating time from restart	→	📄	192
Operating time	→	📄	185
▶ Diagnostic list	→	📄	193
Diagnostics 1 to 5	→	📄	193
Timestamp 1 to 5	→	📄	193
▶ Device information	→	📄	195
Device tag	→	📄	195
Serial number	→	📄	195
Firmware version	→	📄	195
Device name	→	📄	196
Order code	→	📄	196
Extended order code 1 to 3	→	📄	196
▶ Measured values	→	📄	197
Distance	→	📄	137
Level linearized	→	📄	160

Interface distance	→ 140
Interface linearized	→ 161
Thickness upper layer	→ 198
Terminal voltage 1	→ 199
► Analog inputs	
► Analog input 1 to 5	→ 199
Block tag	→ 144
Channel	→ 144
Status	→ 200
Value	→ 200
Units index	→ 201
► Data logging	→ 202
Assign channel 1 to 4	→ 202
Logging interval	→ 203
Clear logging data	→ 203
► Simulation	→ 207
Assign measurement variable	→ 208
Process variable value	→ 208
Switch output simulation	→ 208
Switch status	→ 209
Simulation device alarm	→ 209
► Device check	→ 210
Start device check	→ 210
Result device check	→ 210
Last check time	→ 210

Level signal	→  211
Launch signal	→  211
Interface signal	→  211
▶ Heartbeat	→  212

17.3 "Setup" menu

- 
 -  : Marks the navigation path to the parameter via the display and operating module.
 -  : Marks the navigation path to the parameter via an operating tool (e.g. FieldCare).
 -  : Marks parameters which can be locked via the software locking.

Navigation   Setup

Operating mode	
<hr/>	
Navigation	  Setup → Operating mode
Prerequisite	The device has the "interface measurement" application package ⁴⁾ . FMP55 always contains this package.
Description	Select operating mode.
Selection	<ul style="list-style-type: none"> ▪ Level ▪ Interface with capacitance * ▪ Interface *
Factory setting	FMP55: Interface with capacitance
Additional information	The Interface with capacitance option is only available for FMP55.
<hr/>	
Distance unit	

Navigation	  Setup → Distance unit	
Description	Length unit for distance calculation.	
Selection	<i>SI units</i> <ul style="list-style-type: none"> ▪ mm ▪ m 	<i>US units</i> <ul style="list-style-type: none"> ▪ ft ▪ in
Factory setting	m	

4) Product structure: Feature 540 "Application Package", Option EB "Interface measurement"
 * Visibility depends on order options or device settings

Tank type 	
Navigation	  Setup → Tank type
Prerequisite	Medium type = Liquid
Description	Select tank type.
Selection	<ul style="list-style-type: none"> ▪ Metallic ▪ Bypass / pipe ▪ Non metallic ▪ Mounted outside ▪ Coaxial
Factory setting	Depending on the probe
Additional information	<ul style="list-style-type: none"> ▪ Depending on the probe some of the options mentioned above may not be available or there may be additional options. ▪ For coax probes and probes with metallic center washer Tank type parameter corresponds to the type of probe and cannot be changed.

Tube diameter 	
Navigation	  Setup → Tube diameter
Prerequisite	<ul style="list-style-type: none"> ▪ Tank type (→  134) = Bypass / pipe ▪ The probe is coated.
Description	Specify diameter of bypass or stilling well.
User entry	0 to 9.999 m
Factory setting	0.0384 m

Medium group 	
Navigation	  Setup → Medium group
Prerequisite	<ul style="list-style-type: none"> ▪ For FMP51/FMP52/FMP54/FMP55: Operating mode (→  133) = Level ▪ Medium type = Liquid
Description	Select medium group.
Selection	<ul style="list-style-type: none"> ▪ Others ▪ Water based (DC >= 4)
Factory setting	Others

Additional information

This parameter roughly specifies the dielectric constant (DC) of the medium. For a more detailed definition of the DC use the **Medium property** parameter.

The **Medium group** parameter presets the **Medium property** parameter as follows:

Medium group	Medium property
Others	Unknown
Water based (DC >= 4)	DC 4 ... 7

i The **Medium property** parameter can be changed at a later point of time. However, when doing so, the **Medium group** parameter retains its value. Only the **Medium property** parameter is relevant for the signal evaluation.

i The measuring range may be reduced for small dielectric constants. For details refer to the Technical Information (TI) of the respective device.

Empty calibration



Navigation

Setup → Empty calibration

Description

Distance process connection to min. level.


User entry

Depending on the probe

Factory setting

Depending on the probe

Additional information

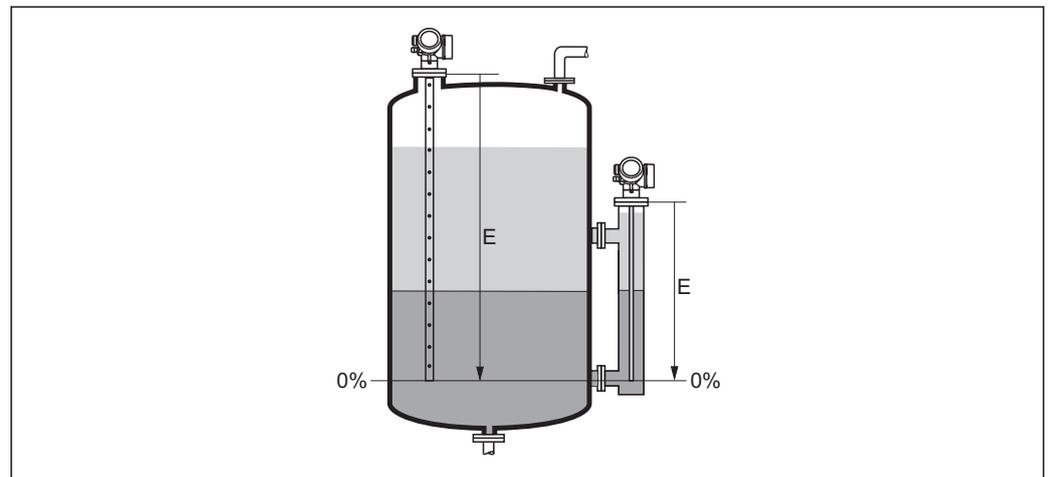

A0013177

32 Empty calibration (E) for interface measurements

i In the case of interface measurements the **Empty calibration** parameter is valid for both, the total and the interface level.

Full calibration




Navigation Setup → Full calibration

Description Span: max. level - min level.

User entry Depending on the probe

Factory setting Depending on the probe

Additional information

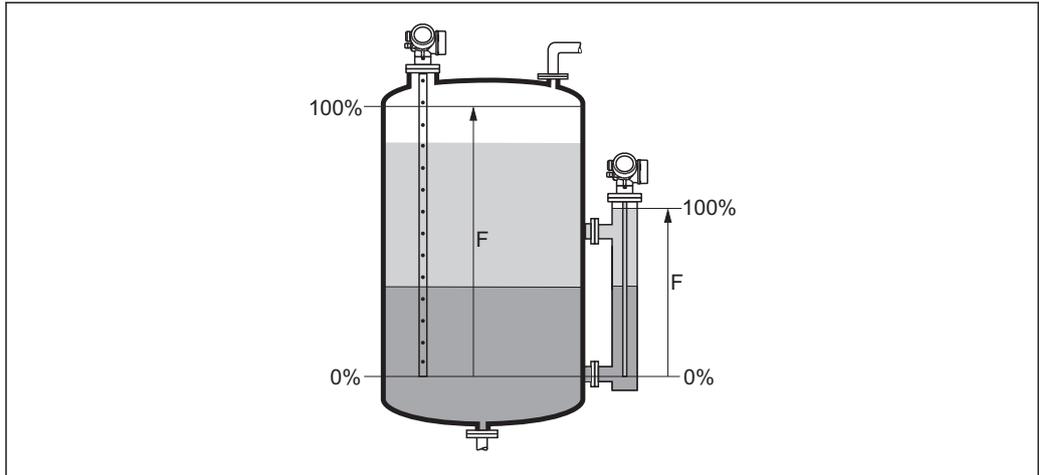

A0013188

33 Full calibration (F) for interface measurements


In the case of interface measurements the **Full calibration** parameter is valid for both, the total and the interface level.

Level

Navigation Setup → Level

Description Displays measured level L_L (before linearization).

Additional information

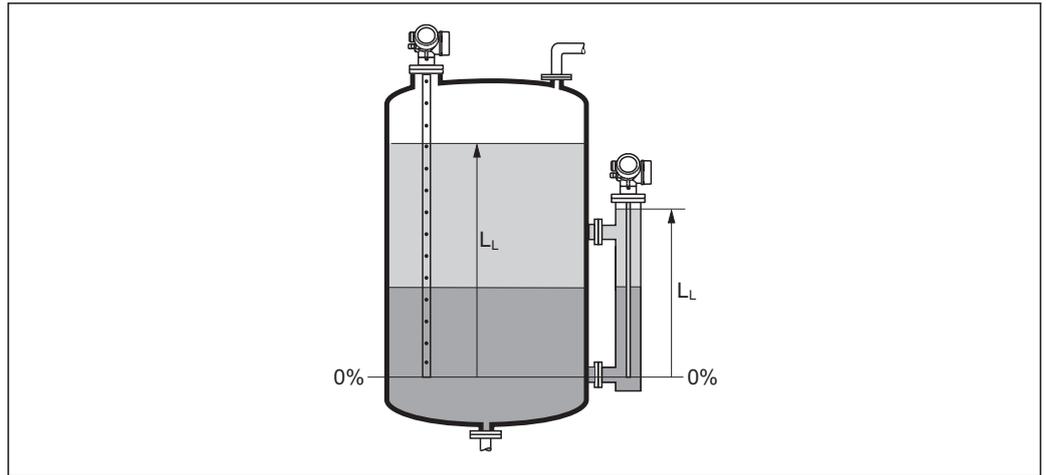

A0013195

34 Level in case of interface measurements

-  The unit is defined in the **Level unit** parameter (→ 150).
- In case of interface measurements, this parameter always refers to the total level.

Distance


Navigation

  Setup → Distance

Description

Displays the measured distance D_L between the reference point (lower edge of the flange or threaded connection) and the level.

Additional information

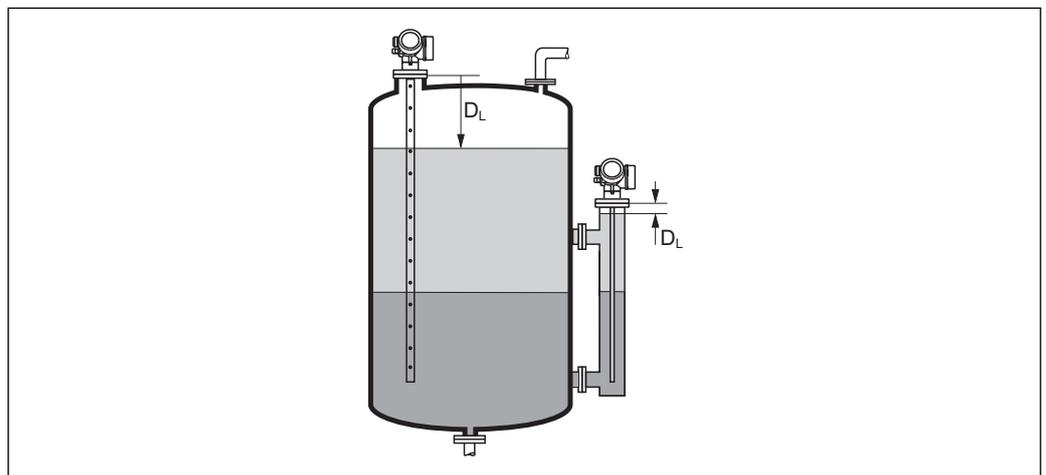

A0013199

35 Distance for interface measurements

-  The unit is defined in the **Distance unit** parameter (→ 133).

Signal quality

Navigation   Setup → Signal quality

Description Displays the signal quality of the evaluated echo.

Additional information **Meaning of the display options**

- **Strong**

The evaluated echo exceeds the threshold by at least 10 mV.

- **Medium**

The evaluated echo exceeds the threshold by at least 5 mV.

- **Weak**

The evaluated echo exceeds the threshold by less than 5 mV.

- **No signal**

The device does not find a usable echo.

The signal quality indicated in this parameter always refers to the currently evaluated echo: either the level/interface echo ⁵⁾ or the end-of-probe echo. To differentiate between these two, the quality of the end-of-probe echo is always displayed in brackets.

 In case of a lost echo (**Signal quality = No signal**) the device generates the following error message:

- F941, for **Output echo lost** (→  166) = **Alarm**.
- S941, if another option has been selected in **Output echo lost** (→  166).

DC value



Navigation   Setup → DC value

Prerequisite The device has the "interface measurement" application package ⁶⁾.

Description Specify relative dielectric constant ϵ_r of the upper medium (DC_1).


User entry 1.0 to 100

Factory setting 2.0

5) Of these two echos the one with the lower quality is indicated.

6) Product structure: Feature 540 "Application Package", Option EB "Interface measurement"

Additional information

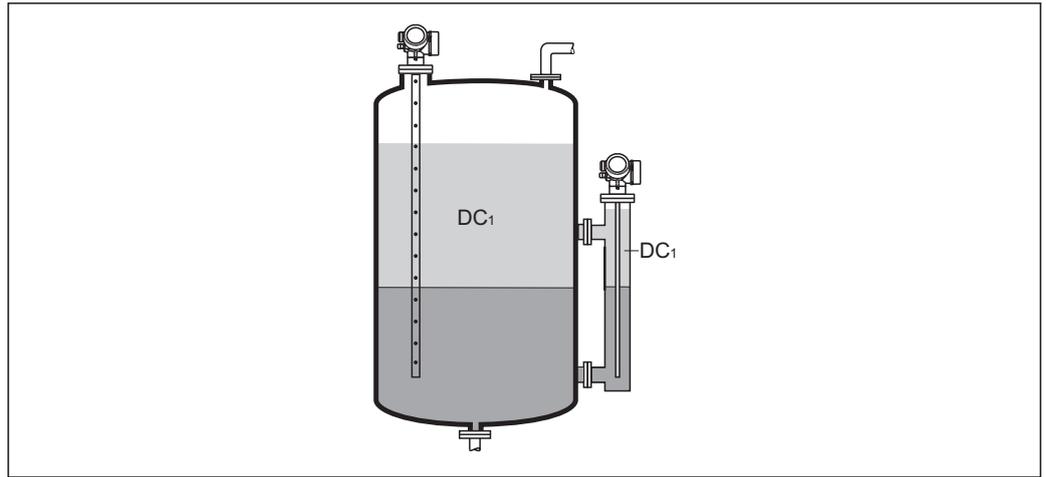

A0013181

DC1 Relative dielectric constant of the upper medium.

- i** For dielectric constants (DC values) of many media commonly used in various industries refer to:
 - the Endress+Hauser DC manual (CP01076F)
 - the Endress+Hauser "DC Values App" (available for Android and iOS)

Interface

Navigation

Setup → Interface


Prerequisite

Operating mode (→ 133) = **Interface** or **Interface with capacitance**

Description

Displays the measured interface level L_I (before linearization).


Additional information

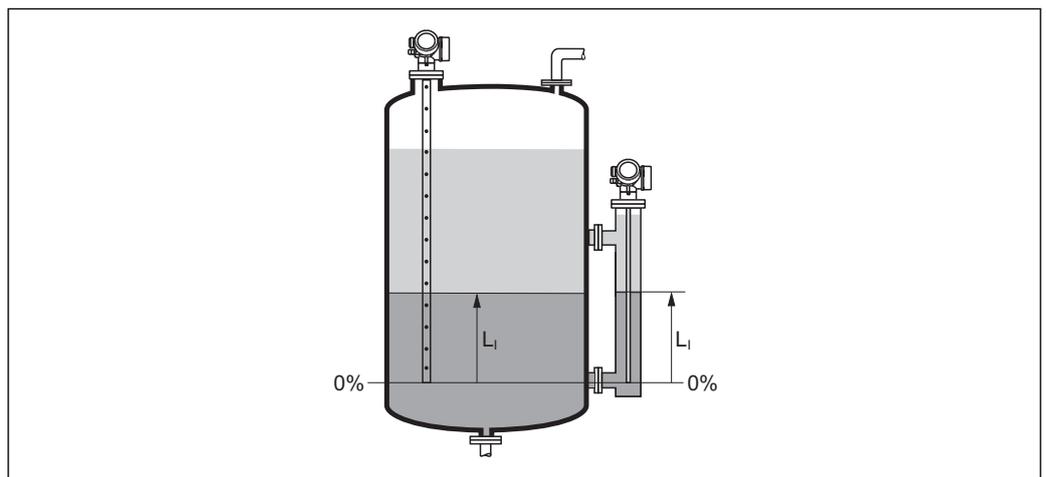

A0013197

- i** The unit is defined in the **Level unit** parameter (→ 150).

Interface distance

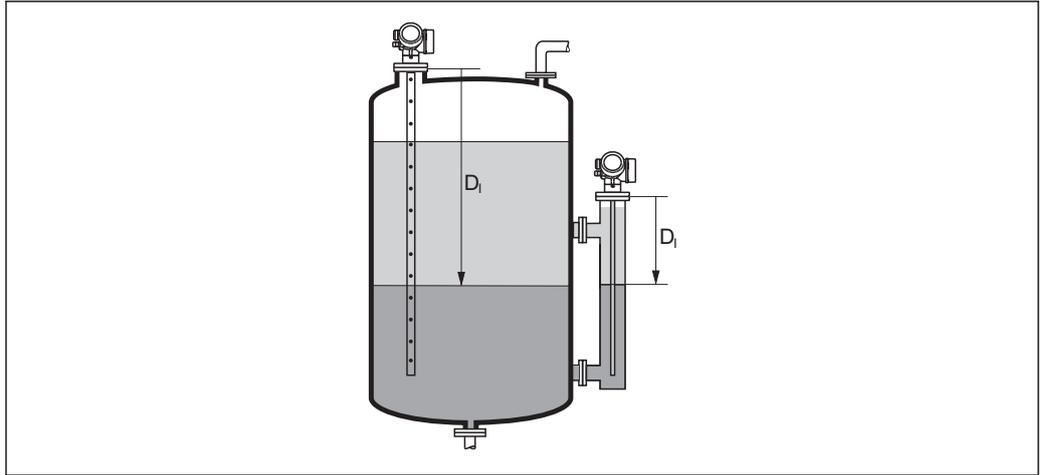Navigation
 Setup → Interface distance
Prerequisite
Operating mode (→  133) = **Interface** or **Interface with capacitance**
Description
 Displays the measured distance D_1 between the reference point (lower edge of flange or threaded connection) and the interface.
Additional information

A0013202

 The unit is defined in the **Distance unit** parameter (→  133).

Confirm distance

**Navigation**
 Setup → Confirm distance
Description
 Specify, whether the measured distance matches the real distance.
 Depending on the selection the device automatically sets the range of mapping.
Selection

- Manual map
- Distance ok
- Distance unknown
- Distance too small*
- Distance too big*
- Tank empty
- Delete map

Factory setting

Distance unknown

 * Visibility depends on order options or device settings

Additional information**Meaning of the options**

- **Manual map**

To be selected if the range of mapping is to be defined manually in the **Mapping end point** parameter (→  142). In this case it is not necessary to confirm the distance.

- **Distance ok**

To be selected if the measured distance matches the actual distance. The device performs a mapping.

- **Distance unknown**

To be selected if the actual distance is unknown. A mapping can not be performed in this case.

- **Distance too small**

To be selected if the measured distance is smaller than the actual distance. The device searches for the next echo and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.

- **Distance too big⁷⁾**

To be selected if the measured distance exceeds the actual distance. The device adjusts the signal evaluation and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.

- **Tank empty**

To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range.

- **Factory map**

To be selected if the present mapping curve (if one exists) is to be deleted. The device returns to the **Confirm distance** parameter and a new mapping can be recorded.



When operating via the display module, the measured distance is displayed together with this parameter for reference purposes.



For interface measurements the distance always refers to the total level (not the interface level).



For FMP55 with rope probes and **Operating mode** (→  133) = **Interface with capacitance** the mapping must be recorded with the tank being empty, and the **Tank empty** option must be selected. Otherwise the device can not register the correct empty capacitance.

For FMP55 with coax probes a mapping must be recorded at least in the upper part of the probe, as tightening the flange has an influence on the envelope curve. However, even with coax probes it is recommended to record the mapping with the tank being completely empty (and selecting the **Tank empty** option).



If the teaching procedure with the **Distance too small** option or the **Distance too big** option is quit before the distance has been confirmed, a map is **not** recorded and the teaching procedure is reset after 60 s.

Present mapping

Navigation

 Setup → Present mapping

Description

Indicates up to which distance a mapping has already been recorded.

7) Only available for "Expert → Sensor → Echo tracking → **Evaluation mode** parameter" = "Short time history" or "Long time history"

Mapping end point


Navigation	Setup → Mapping end point
Prerequisite	Confirm distance (→ 140) = Manual map or Distance too small
Description	Specify new end of the mapping.
User entry	0 to 200 000.0 m
Factory setting	0.1 m
Additional information	<p>This parameter defines up to which distance the new mapping is to be recorded. The distance is measured from the reference point, i.e. from the lower edge of the mounting flange or the threaded connection.</p> <p> For reference purposes the Present mapping parameter (→ 141) is displayed together with this parameter. It indicates up to which distance a mapping has already been recorded.</p>

Record map


Navigation	Setup → Record map
Prerequisite	Confirm distance (→ 140) = Manual map or Distance too small
Description	Start recording of the map.
Selection	<ul style="list-style-type: none"> ▪ No ▪ Record map ▪ Delete map
Factory setting	No
Additional information	<p>Meaning of the options</p> <ul style="list-style-type: none"> ▪ No The map is not recorded. ▪ Record map The map is recorded. After the recording is completed, the new measured distance and the new mapping range appear on the display. When operating via the local display, these values must be confirmed by pressing <input checked="" type="checkbox"/>. ▪ Delete map The mapping (if one exists) is deleted and the device displays the recalculated measured distance and the mapping range. When operating via the local display, these values must be confirmed by pressing <input checked="" type="checkbox"/>.

17.3.1 "Mapping" wizard

-  The **Mapping** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the mapping are located directly in the **Setup** menu (→  133).
-  In the **Mapping** wizard two parameters are displayed simultaneously on the display module at any one time. The upper parameter can be edited, whereas the lower parameter is displayed for reference purposes only.

Navigation  Setup → Mapping

Confirm distance

Navigation  Setup → Mapping → Confirm distance

Description →  140

Mapping end point

Navigation  Setup → Mapping → Mapping end point

Description →  142

Record map

Navigation  Setup → Mapping → Record map

Description →  142

Distance

Navigation  Setup → Mapping → Distance

Description →  137

17.3.2 "Analog input 1 to 5" submenu

There is an **Analog inputs** submenu for every AI block of the device. The AI block is used to configure the measured value transmission to the bus.

 Only the most basic properties of the AI block can be configured in this submenu. For a detailed configuration of the AI blocks refer to the **Expert** menu.

Navigation  Setup → Analog inputs → Analog input 1 to 5

Block tag

Navigation  Setup → Analog inputs → Analog input 1 to 7 → Block tag

Description Defined to be unique throughout the control system at one plant site. The tag may be changed using the FB_Tag service.

Factory setting

Channel

Navigation  Setup → Analog inputs → Analog input 1 to 7 → Channel

Description Use this function to select the input value that should be processed in the Analog Input function block.

Selection

- Uninitialized
- Level linearized
- Absolute echo amplitude
- Absolute EOP amplitude
- Absolute interface amplitude *
- Distance
- Electronic temperature
- EOP shift
- Interface linearized *
- Interface distance *
- Measured capacitance *
- Relative echo amplitude
- Relative interface amplitude *
- Noise of signal
- Terminal voltage
- Thickness upper layer *
- Calculated DC value *
- Analog output adv. diagnostics 2
- Analog output adv. diagnostics 1

Factory setting Uninitialized

* Visibility depends on order options or device settings

Process Value Filter Time

Navigation	 Setup → Analog inputs → Analog input 1 to 7 → Process Value Filter Time
Description	Use this function to enter the filter time specification for the filtering of the unconverted input value (PV).
User entry	Positive floating-point number
Factory setting	0 s
Additional information	<i>Factory setting</i>  If the value 0 s is entered, filtering will not be performed.

17.3.3 "Advanced setup" submenu

Navigation  Setup → Advanced setup

Locking status

Navigation	  Setup → Advanced setup → Locking status
Description	Indicates the write protection with the highest priority that is currently active.
User interface	<ul style="list-style-type: none"> ▪ Hardware locked ▪ Temporarily locked
Additional information	<p>Meaning and priorities of the types of write protection</p> <ul style="list-style-type: none"> ▪ Hardware locked (priority 1) The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters. ▪ SIL locked (priority 2) The SIL mode is activated. Writing access to the relevant parameters is denied. ▪ WHG locked (priority 3) The WHG mode is activated. Writing access to the relevant parameters is denied. ▪ Temporarily locked (priority 4) Write access to the parameters is temporarily locked on account of internal processes in progress in the device (e.g. data upload/download, reset etc.). The parameters can be modified as soon as the processes are complete. <p> On the display module, the -symbol appears in front of parameters that cannot be modified since they are write-protected.</p>

Access status tooling

Navigation	 Setup → Advanced setup → Access status tooling
Description	Shows the access authorization to the parameters via the operating tool.
Additional information	<p> The access authorization can be changed via the Enter access code parameter (→  147).</p> <p> If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the Locking status parameter (→  146).</p>

Access status display

Navigation	 Setup → Advanced setup → Access status display
Prerequisite	The device has a local display.

Description Indicates access authorization to parameters via local display.

Additional information

-  The access authorization can be changed via the **Enter access code** parameter (→  147).
-  If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter (→  146).

Enter access code

Navigation  Setup → Advanced setup → Enter access code

Description Enter access code to disable write protection of parameters.

User entry 0 to 9999

Additional information

- For local operation, the customer-specific access code, which has been defined in the **Define access code** parameter (→  188), has to be entered.
- If an incorrect access code is entered, the user retains his current access authorization.
- The write protection affects all parameters marked with the -symbol in this document. On the local display, the -symbol in front of a parameter indicates that the parameter is write-protected.
- If no key is pressed for 10 min, or the user switches from the navigation and editing mode back to the measured value display mode, the device automatically locks the write-protected parameters after another 60 s.

 Please contact your Endress+Hauser Sales Center if you lose your access code.

"Interface" submenu

Navigation  Setup → Advanced setup → Interface

Process property 

Navigation

 Setup → Advanced setup → Interface → Process property

Description

Specify typical rate of change for the interface position.

Selection

- Fast > 1 m (40 in)/min
- Standard < 1 m (40in) /min
- Medium < 10 cm (4in) /min
- Slow < 1 cm (0.4in) /min
- No filter / test

Factory setting

Standard < 1 m (40in) /min

Additional information

The device adjusts the signal evaluation filters and the damping of the output signal to the typical rate of level change defined in this parameter:

Process property	Step response time / s
Fast > 1 m (40 in)/min	5
Standard < 1 m (40in) /min	15
Medium < 10 cm (4in) /min	40
Slow < 1 cm (0.4in) /min	74
No filter / test	2.2

Interface property 

Navigation

 Setup → Advanced setup → Interface → Interface property

Prerequisite

Operating mode (→  133) = Interface with capacitance

Description

Select interface property.
The interface property determines how the Guided Radar and the Capacitance Measurement interact.

Selection

- Special: automatic DC
- Build up
- Standard
- Emulsion layer

Factory setting

Standard

Additional information	<p>Meaning of the options</p> <ul style="list-style-type: none"> ■ Special: automatic DC <ul style="list-style-type: none"> – Condition: The specific capacitance (pF/m) is known.⁸⁾ – Signal evaluation: As long as a clear interface is detected, both the total and the interface level are determined via the Guided Radar. The dielectric constant of the upper medium is continuously adjusted. If an emulsion layer is present, the total level is determined via the Guided Radar whereas the interface level is determined via the Capacitance Measurement. ■ Build up <ul style="list-style-type: none"> – Condition: The dielectric constant of the upper medium and the specific capacitance (pF/m) are known.⁸⁾ – Signal evaluation: As long as a clear interface is detected, the interface level is determined via the Guided Radar as well as via the Capacitance Measurement. If these two values start to diverge from each other due to build-up formation, an error message is generated. If an emulsion layer is present, the total level is determined via the Guided Radar whereas the interface level is determined via the Capacitance Measurement. ■ Standard <ul style="list-style-type: none"> – Condition: The dielectric constant of the upper medium is known. – Signal evaluation: As long as a clear interface is detected, the specific capacitance (pF/m) is continuously adjusted. Therefore build-up has only little influence on the measurement. If an emulsion layer is present, the total level is determined via the Guided Radar whereas the interface level is determined via the Capacitance Measurement. ■ Oil/Water condensate <ul style="list-style-type: none"> – Condition: The dielectric constant of the upper medium and the specific capacitance (pF/m) are known.⁸⁾ – Signal evaluation: The total level is always determined via the Guided Radar. The interface level is always determined via the Capacitance Measurement.
-------------------------------	--

DC value lower medium


Navigation	Setup → Advanced setup → Interface → DC value lower medium
Prerequisite	Operating mode (→ 133) = Interface or Interface with capacitance
Description	Specify the relative dielectric constant ϵ_r of the lower medium.
User entry	1 to 100
Factory setting	80.0

8) The specific capacitance of the media depends on the DC value and the geometry of the probe, which may differ noticeably. For rod probes < 2 m, the probe geometry is measured after production and the resulting specific capacitance for conductive media is preset on delivery.

Additional information

For dielectric constants (DC values) of many media commonly used in various industries refer to:

- the Endress+Hauser DC manual (CP01076F)
- the Endress+Hauser "DC Values App" (available for Android and iOS)



The factory setting, $\epsilon_r = 80$, is valid for water at 20 °C (68 °F).

Level unit**Navigation**

Setup → Advanced setup → Interface → Level unit

Description

Select level unit.

Selection

SI units

- %
- m
- mm

US units

- ft
- in

Factory setting

%

Additional information

The level unit may differ from the distance unit defined in the **Distance unit** parameter (→ 133):

- The unit defined in the **Distance unit** parameter is used for the basic calibration (**Empty calibration** (→ 135) and **Full calibration** (→ 136)).
- The unit defined in the **Level unit** parameter is used to display the (nonlinearized) level and interface position.

Blocking distance**Navigation**

Setup → Advanced setup → Interface → Blocking distance

Description

Specify upper blocking distance UB.

User entry

0 to 200 m


Factory setting

- For coax probes: 100 mm (3.9 in)
- For rod and rope probes up to 8 m (26 ft): 200 mm (8 in)
- For rod and rope probes above 8 m (26 ft): 0.025 * length of probe

Additional information

Echoes from within the blocking distance are not taken into account in the signal evaluation. The upper blocking distance is used

- to suppress interference echoes at the top end of the probe.
- to suppress the echo of the total level in the case of flooded bypasses.

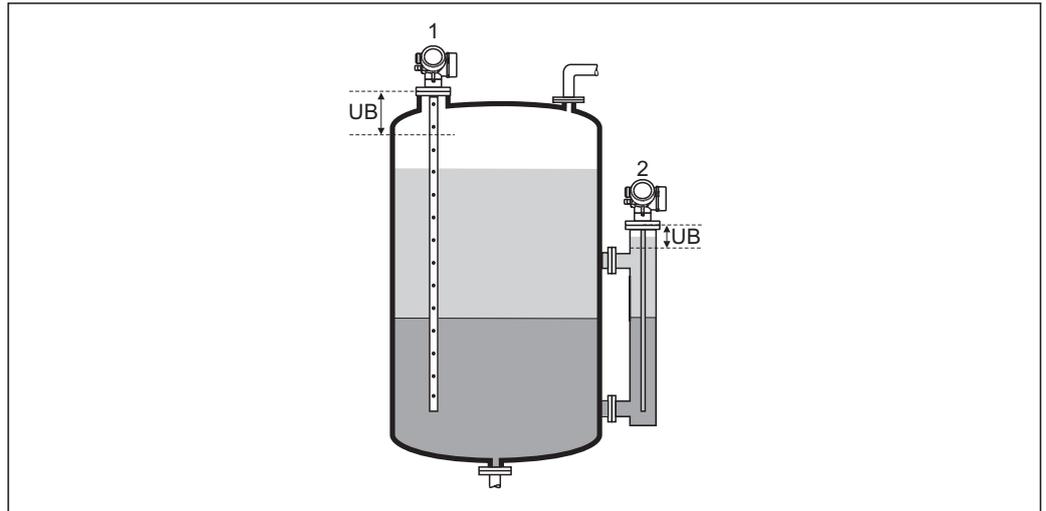

A0013220

- 1 Suppression of interference echoes at the top end of the probe.
- 2 Suppression of the level signal in case of a flooded bypass.
- UB Upper blocking distance

Level correction




Navigation	☰☰ Setup → Advanced setup → Interface → Level correction
Description	Specify level correction (if required).
User entry	-200 000.0 to 200 000.0 %
Factory setting	0.0 %
Additional information	The value specified in this parameter is added to the measured total and interface levels (before linearization).

Manual thickness upper layer



Navigation	☰ Setup → Advanced setup → Interface → Manual thickness upper layer
Description	Specify the manually determined interface thickness UP (i.e. the thickness of the upper medium).
User entry	0 to 200 m
Factory setting	0 m

Additional information

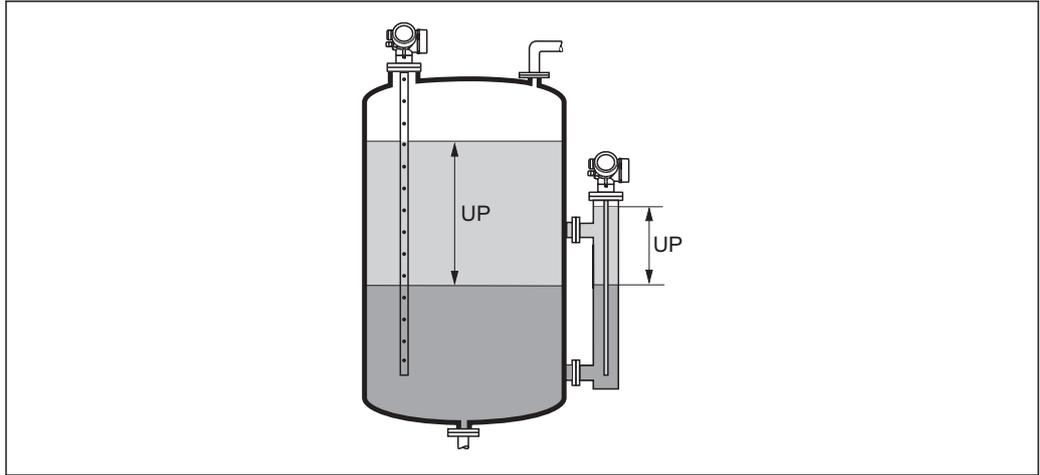

A0013313

UP Interface thickness (= thickness of upper medium)

 On the local display, the measured interface thickness is indicated together with the manual interface thickness. By comparing these two values the device can automatically adjust the dielectric constant of the upper medium.

Measured thickness upper layer

Navigation  Setup → Advanced setup → Interface → Measured thickness upper layer

Description Displays the measured interface thickness. (Thickness UP of the upper medium).

DC value



Navigation  Setup → Advanced setup → Interface → DC value

Description Displays relative dielectric constant ϵ_r of the upper medium (DC₁) before correction.

Calculated DC value

Navigation  Setup → Advanced setup → Interface → Calculated DC value

Description Displays calculated (i.e. corrected) relative dielectric constant ϵ_r (DC1) of the upper medium.

Use calculated DC value

**Navigation**

Setup → Advanced setup → Interface → Use calculated DC value

Description

Specify whether the calculated dielectric constant is to be used.

Selection

- Save and exit
- Cancel and exit

Factory setting

Cancel and exit

Additional information**Meaning of the options**

- Save and exit
The calculated constant is assumed to be the correct one.
- Cancel and exit
The calculated dielectric constant is rejected; the previous dielectric constant remains active.



On the local display, the **Calculated DC value** parameter (→ 152) is displayed together with this parameter.

"Automatic DC calculation" wizard

 The **Automatic DC calculation** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the automatic DC calculation are located directly in the **Interface** submenu (→  148)

 In the **Automatic DC calculation** wizard two parameters are displayed simultaneously on the display module at any one time. The upper parameter can be edited, whereas the lower parameter is displayed for reference purposes only.

Navigation  Setup → Advanced setup → Interface → Automatic DC calculation

Manual thickness upper layer 

Navigation  Setup → Advanced setup → Interface → Automatic DC calculation → Manual thickness upper layer

Description →  151

DC value 

Navigation  Setup → Advanced setup → Interface → Automatic DC calculation → DC value


Description →  152

Use calculated DC value 

Navigation  Setup → Advanced setup → Interface → Automatic DC calculation → Use calculated DC value

Description →  153

"Linearization" submenu

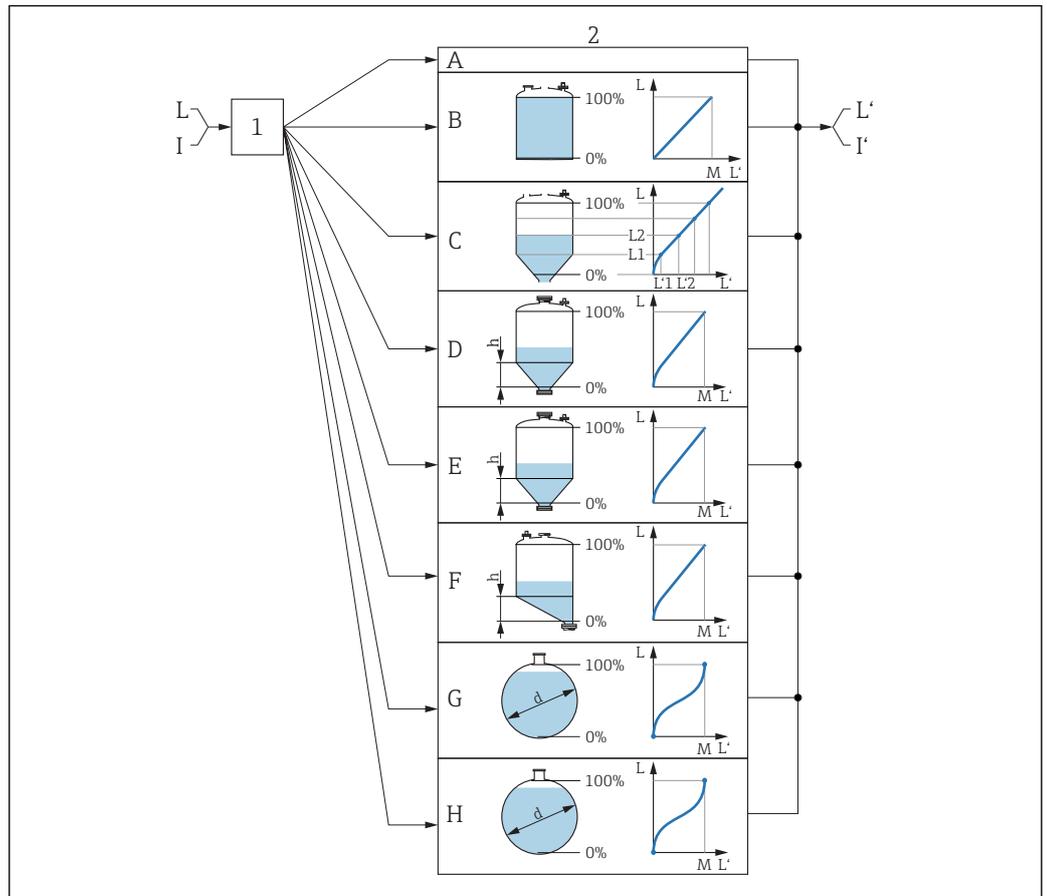

A0016084

36 Linearization: Transformation of the level and (if relevant) the interface height into a volume or weight; the transformation is dependent on the shape of the vessel.

- 1 Selection of linearization type and unit
- 2 Configuration of the linearization
- A Linearization type (→ 158) = None
- B Linearization type (→ 158) = Linear
- C Linearization type (→ 158) = Table
- D Linearization type (→ 158) = Pyramid bottom
- E Linearization type (→ 158) = Conical bottom
- F Linearization type (→ 158) = Angled bottom
- G Linearization type (→ 158) = Horizontal cylinder
- H Linearization type (→ 158) = Sphere
- I For "Operating mode (→ 133)" = "Interface" or "Interface with capacitance": Interface before linearization (measured in distance units)
- I' For "Operating mode (→ 133)" = "Interface" or "Interface with capacitance": Interface after linearization (corresponds to volume or weight)
- L Level before linearization (measured in distance units)
- L' Level linearized (→ 160) (corresponds to volume or weight)
- M Maximum value (→ 161)
- d Diameter (→ 161)
- h Intermediate height (→ 162)

Structure of the submenu on the display module

Navigation  Setup → Advanced setup → Linearization

► Linearization		
Linearization type		→  158
Unit after linearization		→  159
Free text		→  160
Maximum value		→  161
Diameter		→  161
Intermediate height		→  162
Table mode		→  162
► Edit table		
	Level	→  164
	Customer value	→  164
	Activate table	→  164

Structure of the submenu in an operating tool (e.g. FieldCare)

Navigation  Setup → Advanced setup → Linearization

► Linearization	
Linearization type	→  158
Unit after linearization	→  159
Free text	→  160
Level linearized	→  160
Interface linearized	→  161
Maximum value	→  161
Diameter	→  161
Intermediate height	→  162
Table mode	→  162
Table number	→  163
Level	→  164
Level	→  164
Customer value	→  164
Activate table	→  164

Description of parameters

Navigation  Setup → Advanced setup → Linearization

Linearization type 


Navigation  Setup → Advanced setup → Linearization → Linearization type

Description Select linearization type.

- Selection**
- None
 - Linear
 - Table
 - Pyramid bottom
 - Conical bottom
 - Angled bottom
 - Horizontal cylinder
 - Sphere

Factory setting None

Additional information

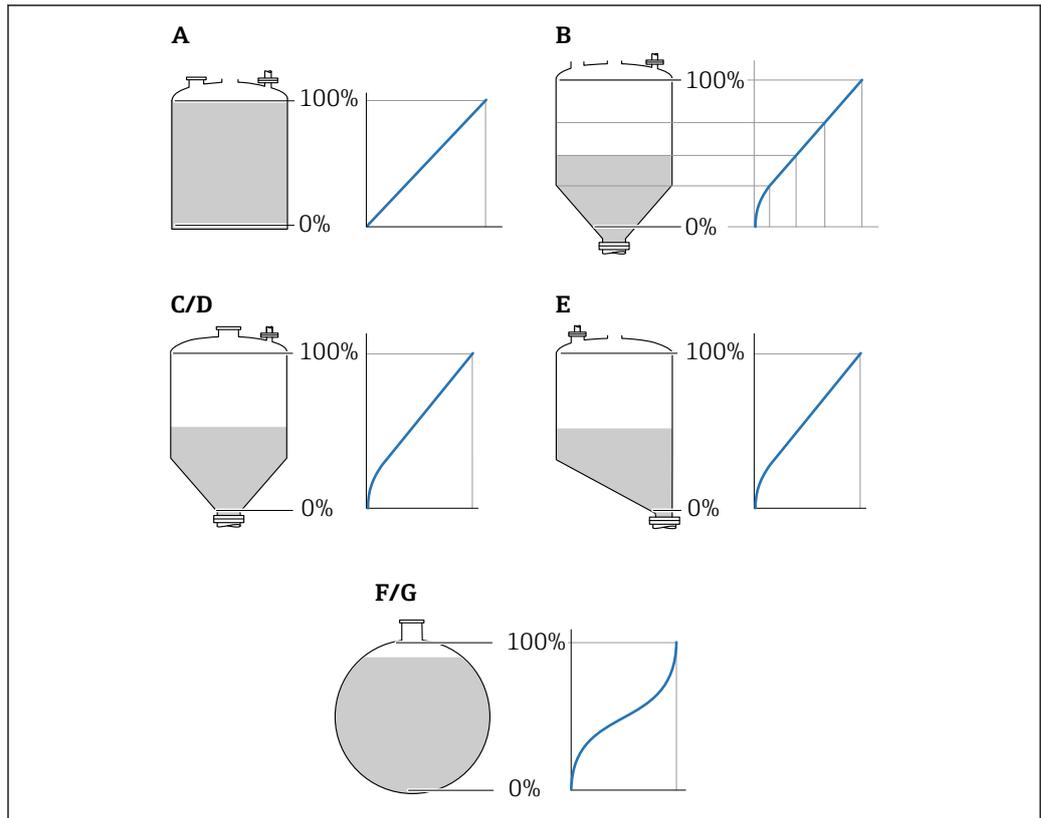

A0021476

 37 *Linearization types*

- A *None*
- B *Table*
- C *Pyramid bottom*
- D *Conical bottom*
- E *Angled bottom*
- F *Sphere*
- G *Horizontal cylinder*

Meaning of the options

■ **None**

The level is transmitted in the level unit without linearization.

■ **Linear**

The output value (volume/weight) is directly proportional to the level L. This is valid, for example, for vertical cylinders. The following additional parameters have to be specified:

- **Unit after linearization** (→  159)
- **Maximum value** (→  161): Maximum volume or weight

■ **Table**

The relationship between the measured level L and the output value (volume/weight) is given by a linearization table consisting of up to 32 pairs of values "level - volume" or "level - weight", respectively. The following additional parameters have to be specified:

- **Unit after linearization** (→  159)
- **Table mode** (→  162)
- For each table point: **Level** (→  164)
- For each table point: **Customer value** (→  164)
- **Activate table** (→  164)

■ **Pyramid bottom**

The output value corresponds to the volume or weight in a silo with pyramid bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  159)
- **Maximum value** (→  161): Maximum volume or weight
- **Intermediate height** (→  162): The height of the pyramid

■ **Conical bottom**

The output value corresponds to the volume or weight in a tank with conical bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  159)
- **Maximum value** (→  161): Maximum volume or weight
- **Intermediate height** (→  162): The height of the conical part of the tank

■ **Angled bottom**

The output value corresponds to the volume or weight in a silo with an angled bottom. The following additional parameters have to be specified:

- **Unit after linearization** (→  159)
- **Maximum value** (→  161): Maximum volume or weight
- **Intermediate height** (→  162): Height of the angled bottom

■ **Horizontal cylinder**

The output value corresponds to the volume or weight in a horizontal cylinder. The following additional parameters have to be specified:

- **Unit after linearization** (→  159)
- **Maximum value** (→  161): Maximum volume or weight
- **Diameter** (→  161)

■ **Sphere**

The output value corresponds to the volume or weight in a spherical tank. The following additional parameters have to be specified:

- **Unit after linearization** (→  159)
- **Maximum value** (→  161): Maximum volume or weight
- **Diameter** (→  161)

Unit after linearization



Navigation

  Setup → Advanced setup → Linearization → Unit after linearization

Prerequisite

Linearization type (→  158) ≠ None

Description

Select unit of the linealized value.

Selection	<i>SI units</i> <ul style="list-style-type: none"> ■ STon ■ t ■ kg ■ cm³ ■ dm³ ■ m³ ■ hl ■ l ■ % <i>Custom-specific units</i> Free text	<i>US units</i> <ul style="list-style-type: none"> ■ lb ■ UsGal ■ ft³ 	<i>Imperial units</i> impGal
------------------	---	---	---------------------------------

Factory setting %

Additional information The selected unit is only used to be indicated on the display. The measured value is **not** transformed according to the selected unit.

 It is also possible to configure a distance-to-distance linearization, i.e. a transformation from the level unit to a different distance unit. To do so, select the **Linear** linearization mode. In order to define the new level unit, select the **Free text** option in the **Unit after linearization** parameter and enter the required unit into the **Free text** parameter (→  160).

Free text 

Navigation   Setup → Advanced setup → Linearization → Free text

Prerequisite **Unit after linearization** (→  159) = **Free text**

Description Enter unit symbol.

User entry Up to 32 alphanumerical characters (letters, numbers, special characters)

Factory setting Free text

Level linearized

Navigation  Setup → Advanced setup → Linearization → Level linearized

Description Displays linearized level.

Additional information 

- The unit is defined by the **Unit after linearization** parameter →  159.
- For interface measurements, this parameter always refers to the total level.

Interface linearized

Navigation	 Setup → Advanced setup → Linearization → Interface linearized
Prerequisite	Operating mode (→  133) = Interface or Interface with capacitance
Description	Displays the linearized interface height.
Additional information	 The unit is defined in the Unit after linearization parameter (→  159).

Maximum value



Navigation	  Setup → Advanced setup → Linearization → Maximum value
Prerequisite	Linearization type (→  158) has one of the following values: <ul style="list-style-type: none"> ▪ Linear ▪ Pyramid bottom ▪ Conical bottom ▪ Angled bottom ▪ Horizontal cylinder ▪ Sphere
User entry	-50 000.0 to 50 000.0 %
Factory setting	100.0 %

Diameter



Navigation	  Setup → Advanced setup → Linearization → Diameter
Prerequisite	Linearization type (→  158) has one of the following values: <ul style="list-style-type: none"> ▪ Horizontal cylinder ▪ Sphere
User entry	0 to 9 999.999 m
Factory setting	2 m
Additional information	The unit is defined in the Distance unit parameter (→  133).

Intermediate height 

Navigation

  Setup → Advanced setup → Linearization → Intermediate height

Prerequisite

Linearization type (→  158) has one of the following values:

- Pyramid bottom
- Conical bottom
- Angled bottom


User entry

0 to 200 m

Factory setting

0 m

Additional information

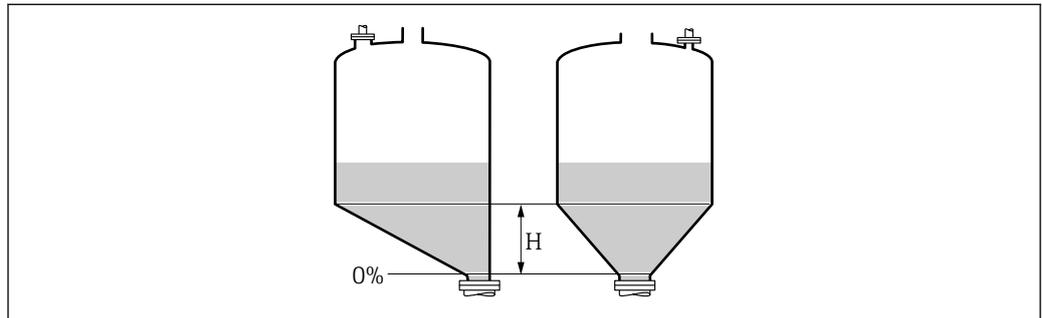

A0013264

H Intermediate heightThe unit is defined in the **Distance unit** parameter (→  133).Table mode 

Navigation

  Setup → Advanced setup → Linearization → Table mode

Prerequisite

Linearization type (→  158) = Table

Description

Select editing mode of the linearization table.

Selection

- Manual
- Semiautomatic *
- Clear table
- Sort table

Factory setting

Manual

* Visibility depends on order options or device settings

Additional information

Meaning of the options

- **Manual**
The level and the associated linearized value are entered manually for each linearization point.
- **Semiautomatic**
The level is measured by the device for each linearization point. The associated linearized value is entered manually.
- **Clear table**
Deletes the existing linearization table.
- **Sort table**
Rearranges the linearization points into an ascending order.

Conditions the linearization table must meet:

- The table may consist of up to 32 pairs of values "Level - Linearized Value".
- The table must be monotonic (monotonically increasing or decreasing).
- The first linearization point must refer to the minimum level.
- The last linearization point must refer to the maximum level.

 Before entering a linearization table, the values for **Empty calibration** (→  135) and **Full calibration** (→  136) must be set correctly.

If values of the table need to be changed after the full or empty calibration have been changed, a correct evaluation is only ensured if the existing table is deleted and the complete table is entered again. To do so delete the existing table (**Table mode** (→  162) = **Clear table**). Then enter a new table.

How to enter the table

- **Via FieldCare**
The table points can be entered via the **Table number** (→  163), **Level** (→  164) and **Customer value** (→  164) parameters. As an alternative, the graphic table editor may be used: Device Operation → Device Functions → Additional Functions → Linearization (Online/Offline)
- **Via local display**
Select the **Edit table** submenu to call up the graphic table editor. The table is displayed and can be edited line by line.

 The factory setting for the level unit is "%". If you want to enter the linearization table in physical units, you must select the appropriate unit in the **Level unit** parameter (→  150) beforehand.

Table number	
---------------------	---

Navigation	 Setup → Advanced setup → Linearization → Table number
Prerequisite	Linearization type (→  158) = Table
Description	Select table point you are going to enter or change.
User entry	1 to 32
Factory setting	1

Level (Manual)



Navigation  Setup → Advanced setup → Linearization → Level

Prerequisite

- **Linearization type** (→  158) = Table
- **Table mode** (→  162) = Manual

Description Enter level value of the table point (value before linearization).

User entry Signed floating-point number

Factory setting 0 %

Level (Semiautomatic)

Navigation  Setup → Advanced setup → Linearization → Level

Prerequisite

- **Linearization type** (→  158) = Table
- **Table mode** (→  162) = Semiautomatic

Description Displays measured level (value before linearization). This value is transmitted to the table.

Customer value



Navigation  Setup → Advanced setup → Linearization → Customer value

Prerequisite **Linearization type** (→  158) = Table

Description Enter linearized value for the table point.

User entry Signed floating-point number

Factory setting 0 %

Activate table



Navigation   Setup → Advanced setup → Linearization → Activate table

Prerequisite **Linearization type** (→  158) = Table

Description Activate (enable) or deactivate (disable) the linearization table.

Selection

- Disable
- Enable

Factory setting

Disable

Additional information**Meaning of the options****■ Disable**

The measured level is not linearized.

If **Linearization type** (→  **158**) = **Table** at the same time, the device issues error message F435.

■ Enable

The measured level is linearized according to the table.



When editing the table, the **Activate table** parameter is automatically reset to **Disable** and must be reset to **Enable** after the table has been entered.

"Safety settings" submenu

Navigation  Setup → Advanced setup → Safety settings

Output echo lost 

Navigation	 Setup → Advanced setup → Safety settings → Output echo lost
Description	Output signal in case of a lost echo.
Selection	<ul style="list-style-type: none"> ■ Last valid value ■ Ramp at echo lost ■ Value echo lost ■ Alarm
Factory setting	Last valid value
Additional information	<p>Meaning of the options</p> <ul style="list-style-type: none"> ■ Last valid value The last valid value is kept in the case of a lost echo. ■ Ramp at echo lost⁹⁾ In the case of a lost echo the output value is continuously shifted towards 0% or 100%. The slope of the ramp is defined in the Ramp at echo lost parameter (→  167). ■ Value echo lost⁹⁾ In the case of a lost echo the output assumes the value defined in the Value echo lost parameter (→  166). ■ Alarm In the case of a lost echo the device generates an alarm; see the Failure mode parameter

Value echo lost 

Navigation	 Setup → Advanced setup → Safety settings → Value echo lost
Prerequisite	Output echo lost (→  166) = Value echo lost
Description	Output value in case of a lost echo
User entry	0 to 200 000.0 %
Factory setting	0.0 %
Additional information	<p>Use the unit which has been defined for the measured value output:</p> <ul style="list-style-type: none"> ■ without linearization: Level unit (→  150) ■ with linearization: Unit after linearization (→  159)

9) Only visible if "Linearization type" (→  158) = "None"

Ramp at echo lost



Navigation Setup → Advanced setup → Safety settings → Ramp at echo lost


Prerequisite **Output echo lost (→ 166) = Ramp at echo lost**

Description Slope of the ramp in the case of a lost echo

User entry Signed floating-point number

Factory setting 0.0 %/min

Additional information

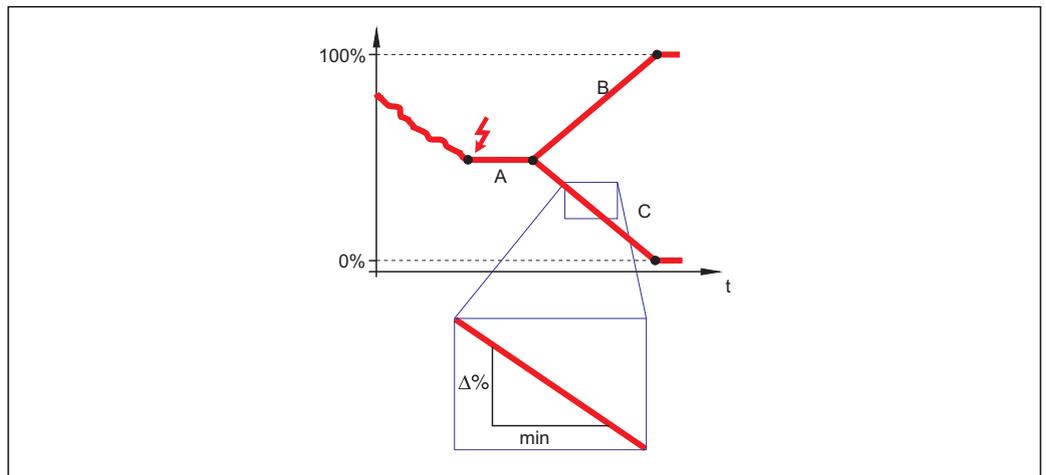

A0013269

- A Delay time echo lost
- B Ramp at echo lost (→ 167) (positive value)
- C Ramp at echo lost (→ 167) (negative value)

- The unit for the slope of the ramp is "percentage of the measuring range per minute" (%/min).
- For a negative slope of the ramp: The measured value is continuously decreased until it reaches 0%.
- For a positive slope of the ramp: The measured value is continuously increased until it reaches 100%.

Blocking distance



Navigation Setup → Advanced setup → Safety settings → Blocking distance

Description Specify upper blocking distance UB.

User entry 0 to 200 m

- Factory setting**
- For coax probes: 0 mm (0 in)
 - For rod and rope probes up to 8 m (26 ft): 200 mm (8 in)
 - For rod and rope probes above 8 m (26 ft): 0.025 * Sondenlänge

For FMP51/FMP52/FMP54 with the **Interface measurement** application package ¹⁰⁾ and for FMP55:
100 mm (3.9 in) for all antenna types


Additional information

Signals in the upper blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance due to a level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.

- i** This behavior is only valid if the following two conditions are met:
- Expert → Sensor → Echo tracking → Evaluation mode = **Short time history** or **Long time history**)
 - Expert → Sensor → Gas phase compensation → GPC mode= **On, Without correction** or **External correction**

If one of these conditions is not met, signals in the blocking distance will always be ignored.

- i** If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.

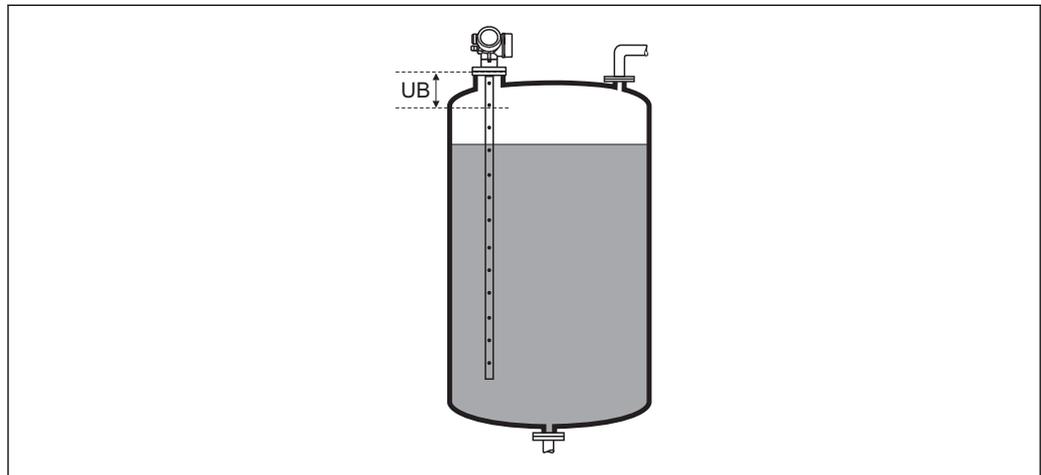

38 Blocking distance (UB) for liquid measurements

10) Ordering feature 540 "Application Package", option EB "Interface measurement"

"Probe settings" submenu

The **Probe settings** submenu helps to ensure that the end of probe signal within the envelope curve is correctly assigned by the evaluation algorithm. The assignment is correct if the length of probe indicated by the device matches the actual length of the probe. The automatic probe length correction can only be performed if the probe is installed in the vessel and is completely uncovered (no medium). For partially filled vessels and if the probe length is known, select **Confirm probe length** (→  170) = **Manual input** in order to enter the value manually.

-  If a mapping (interference echo suppression) has been recorded after shortening the probe, it is no longer possible to perform an automatic probe length correction. In this case there are two options:
 - Delete the map using the **Record map** parameter (→  142) before performing the automatic probe length correction. After the probe length correction, a new map can be recorded using the **Record map** parameter (→  142).
 - Alternative: Select **Confirm probe length** (→  170) = **Manual input** and enter the probe length manually into the **Present probe length** parameter →  169.
-  An automatic probe length correction is only possible after the correct option has been selected in the **Probe grounded** parameter (→  169).

Navigation   Setup → Advanced setup → Probe settings

Probe grounded 

Navigation   Setup → Advanced setup → Probe settings → Probe grounded

Prerequisite **Operating mode** (→  133) = **Level**

Description Specify whether the probe is grounded.

Selection

- No
- Yes

Factory setting No

Present probe length 

Navigation  Setup → Advanced setup → Probe settings → Present probe length

Description

- In most cases:
Displays the length of the probe according to the currently measured end-of-probe signal.
- For **Confirm probe length** (→  170) = **Manual input**:
Enter actual length of probe.

User entry 0 to 200 m

Factory setting 4 m

Confirm probe length
**Navigation**

Setup → Advanced setup → Probe settings → Confirm probe length

Description

Select, whether the value displayed in the **Present probe length** parameter → 169 matches the actual length of the probe. Based on this input, the device performs a probe length correction.

Selection

- Probe length OK
- Probe length too small
- Probe length too big
- Probe covered
- Manual input
- Probe length unknown

Factory setting

Probe length OK

Additional information**Meaning of the options**

- **Probe length OK**
To be selected if the indicated length is correct. An adjustment is not required. The device quits the sequence.
- **Probe length too small**
To be selected if the displayed length is smaller than the actual length of the probe. A different end of probe signal is allocated and the newly calculated length is displayed in the **Present probe length** parameter → 169. This procedure has to be repeated until the displayed value matches the actual length of the probe.
- **Probe length too big**
To be selected if the displayed length is bigger than the actual length of the probe. A different end of probe signal is allocated and the newly calculated length is indicated in the **Present probe length** parameter → 169. This procedure has to be repeated until the displayed value matches the actual length of the probe.
- **Probe covered**
To be selected if the probe is (partially or completely) covered. A probe length correction is impossible in this case. The device quits the sequence.
- **Manual input**
To be selected if no automatic probe length correction is to be performed. Instead, the actual length of the probe must be entered manually into the **Present probe length** parameter → 169¹¹⁾.
- **Probe length unknown**
To be selected if the actual length of the probe is unknown. A probe length correction is impossible in this case and the device quits the sequence.

11) When operated via FieldCare, the **Manual input** option needs not to be selected explicitly. In FieldCare the length of the probe can always be edited.

"Probe length correction" wizard

 The **Probe length correction** wizard is only available when operating via the local display. When operating via an operating tool, all parameters concerning the probe length correction are located directly in the **Probe settings** submenu (→  169).

Navigation  Setup → Advanced setup → Probe settings → Probe length correction

Confirm probe length 

Navigation  Setup → Advanced setup → Probe settings → Probe length correction → Confirm probe length

Description →  170

Present probe length 

Navigation  Setup → Advanced setup → Probe settings → Probe length correction → Present probe length

Description →  169

"Switch output" submenu

 The **Switch output** submenu (→  172) is only visible for devices with switch output.¹²⁾

Navigation  Setup → Advanced setup → Switch output

Switch output function **Navigation**

 Setup → Advanced setup → Switch output → Switch output function

Description

Select function for switch output.

Selection

- Off
- On
- Diagnostic behavior
- Limit
- Digital Output

Factory setting

Off

Additional information**Meaning of the options**

- **Off**
The output is always open (non-conductive).
- **On**
The output is always closed (conductive).
- **Diagnostic behavior**
The output is normally closed and is only opened if a diagnostic event is present. The **Assign diagnostic behavior** parameter (→  173) determines for which type of event the output is opened.
- **Limit**
The output is normally closed and is only opened if a measured variable exceeds or falls below a defined limit. The limit values are defined by the following parameters:
 - **Assign limit** (→  173)
 - **Switch-on value** (→  174)
 - **Switch-off value** (→  175)
- **Digital Output**
The switching state of the output tracks the output value of a DI function block. The function block is selected in the **Assign status** parameter (→  172).

 The **Off** and **On** options can be used to simulate the switch output.

Assign status **Navigation**

 Setup → Advanced setup → Switch output → Assign status

Prerequisite

Switch output function (→  172) = **Digital Output**

12) Ordering feature 020 "Power supply; Output", option B, E or G

Selection	<ul style="list-style-type: none"> ▪ Off ▪ Digital output AD 1 ▪ Digital output AD 2 ▪ Digital output 1 ▪ Digital output 2 ▪ Digital output 3 ▪ Digital output 4 ▪ Digital output 5 ▪ Digital output 6 ▪ Digital output 7 ▪ Digital output 8
Factory setting	Off
Additional information	The Digital output AD 1 and Digital output AD 2 options refer to the Advanced Diagnostic Blocks. A switch signal generated in these blocks can be transmitted via the switch output.

Assign limit

Navigation	  Setup → Advanced setup → Switch output → Assign limit
Prerequisite	Switch output function (→  172) = Limit
Selection	<ul style="list-style-type: none"> ▪ Off ▪ Level linearized ▪ Distance ▪ Interface linearized * ▪ Interface distance * ▪ Thickness upper layer * ▪ Terminal voltage ▪ Electronic temperature ▪ Measured capacitance * ▪ Relative echo amplitude ▪ Relative interface amplitude * ▪ Absolute echo amplitude ▪ Absolute interface amplitude *
Factory setting	Off

Assign diagnostic behavior

Navigation	  Setup → Advanced setup → Switch output → Assign diagnostic behavior
Prerequisite	Switch output function (→  172) = Diagnostic behavior
Description	Select diagnostic behavior for switch output.

* Visibility depends on order options or device settings

Selection

- Alarm
- Alarm or warning
- Warning

Factory setting Alarm

Switch-on value



Navigation Setup → Advanced setup → Switch output → Switch-on value

Prerequisite Switch output function (→ 172) = Limit

Description Enter measured value for the switch-on point.


User entry Signed floating-point number

Factory setting 0

Additional information The switching behavior depends on the relative position of the **Switch-on value** and **Switch-off value** parameters:

Switch-on value > Switch-off value

- The output is closed if the measured value is larger than **Switch-on value**.
- The output is opened if the measured value is smaller than **Switch-off value**.

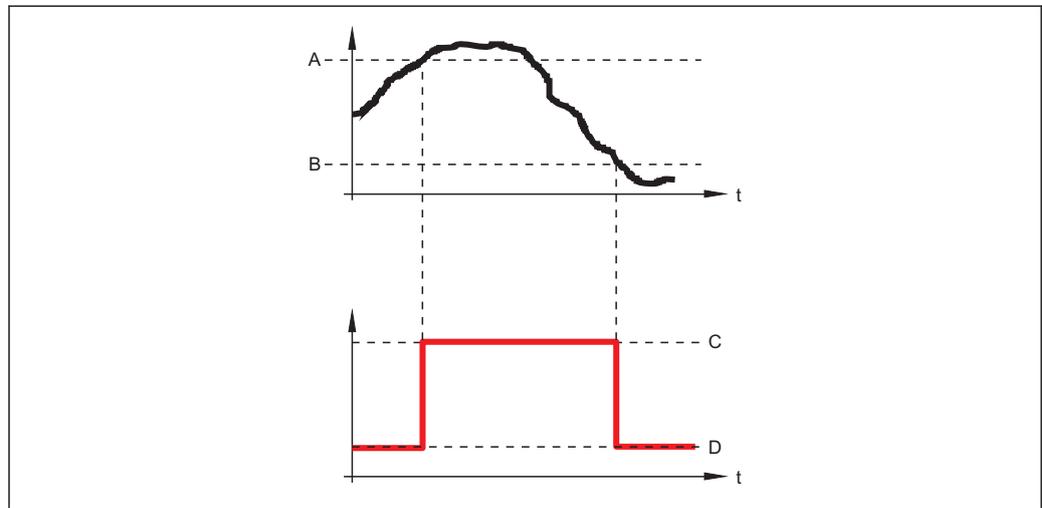


A0015585

- A Switch-on value
- B Switch-off value
- C Output closed (conductive)
- D Output opened (non-conductive)

Switch-on value < Switch-off value

- The output is closed if the measured value is smaller than **Switch-on value**.
- The output is opened if the measured value is larger than **Switch-off value**.

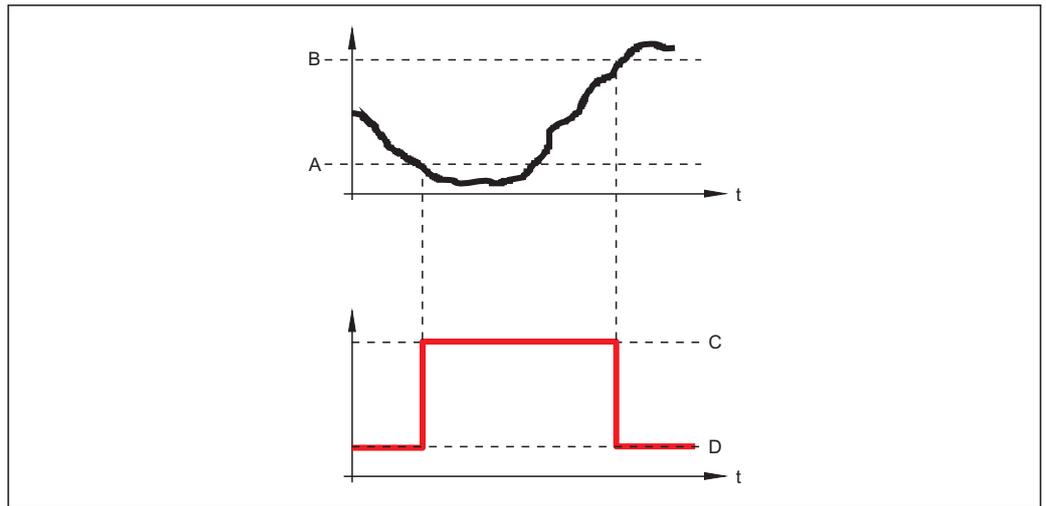

A0015586

- A Switch-on value
- B Switch-off value
- C Output closed (conductive)
- D Output opened (non-conductive)

Switch-on delay



Navigation	☰☰ Setup → Advanced setup → Switch output → Switch-on delay
Prerequisite	<ul style="list-style-type: none"> ▪ Switch output function (→ ☰ 172) = Limit ▪ Assign limit (→ ☰ 173) ≠ Off
Description	Define delay for the switch-on of status output.
User entry	0.0 to 100.0 s
Factory setting	0.0 s

Switch-off value



Navigation	☰☰ Setup → Advanced setup → Switch output → Switch-off value
Prerequisite	Switch output function (→ ☰ 172) = Limit
Description	Enter measured value for the switch-off point.
User entry	Signed floating-point number
Factory setting	0
Additional information	The switching behavior depends on the relative position of the Switch-on value and Switch-off value parameters; description: see the Switch-on value parameter (→ ☰ 174).

Switch-off delay



Navigation	  Setup → Advanced setup → Switch output → Switch-off delay
Prerequisite	<ul style="list-style-type: none"> ▪ Switch output function (→  172) = Limit ▪ Assign limit (→  173) ≠ Off
Description	Define delay for the switch-off of status output.
User entry	0.0 to 100.0 s
Factory setting	0.0 s

Failure mode



Navigation	  Setup → Advanced setup → Switch output → Failure mode
Prerequisite	Switch output function (→  172) = Limit or Digital Output
Description	Define output behavior in alarm condition.
Selection	<ul style="list-style-type: none"> ▪ Actual status ▪ Open ▪ Closed
Factory setting	Open

Additional information

Switch status

Navigation	  Setup → Advanced setup → Switch output → Switch status
Description	Shows the current switch output status.

Invert output signal



Navigation	  Setup → Advanced setup → Switch output → Invert output signal
Description	Invert the output signal.
Selection	<ul style="list-style-type: none"> ▪ No ▪ Yes
Factory setting	No

Additional information**Meaning of the options**

- **No**
The behavior of the switch output is as described above.
- **Yes**
The states **Open** and **Closed** are inverted as compared to the description above.

"Display" submenu

 The **Display** submenu is only visible if a display module is connected to the device.

Navigation  Setup → Advanced setup → Display

Language**Navigation**

 Setup → Advanced setup → Display → Language

Description

Set display language.

Selection

- English
- Deutsch *
- Français *
- Español *
- Italiano *
- Nederlands *
- Portuguesa *
- Polski *
- русский язык (Russian) *
- Svenska *
- Türkçe *
- 中文 (Chinese) *
- 日本語 (Japanese) *
- 한국어 (Korean) *
- Bahasa Indonesia *
- tiếng Việt (Vietnamese) *
- čeština (Czech) *

Factory setting

The language selected in feature 500 of the product structure.
If no language has been selected: **English**

Additional information**Format display****Navigation**

 Setup → Advanced setup → Display → Format display

Description

Select how measured values are shown on the display.

Selection

- 1 value, max. size
- 1 bargraph + 1 value
- 2 values
- 1 value large + 2 values
- 4 values

Factory setting

1 value, max. size


* Visibility depends on order options or device settings

Additional information




A0019963

39 "Format display" = "1 value, max. size"

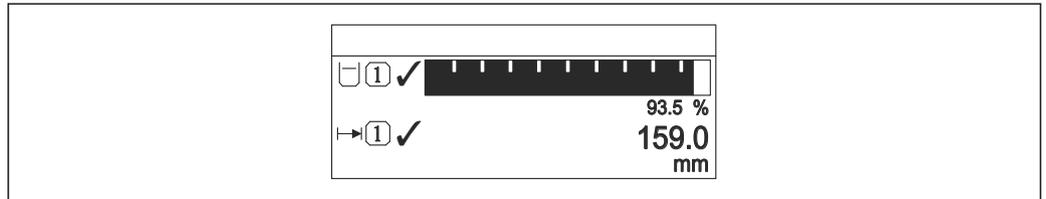


A0019964

40 "Format display" = "1 bargraph + 1 value"

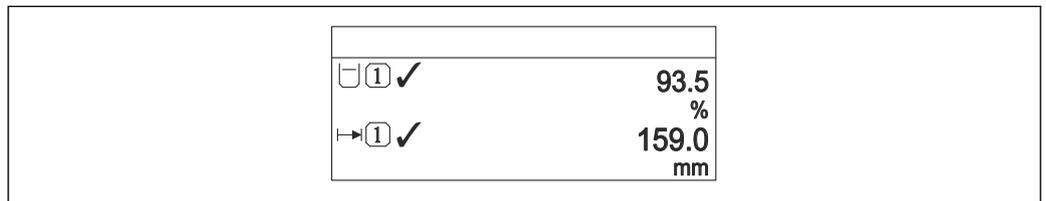


A0019965

41 "Format display" = "2 values"

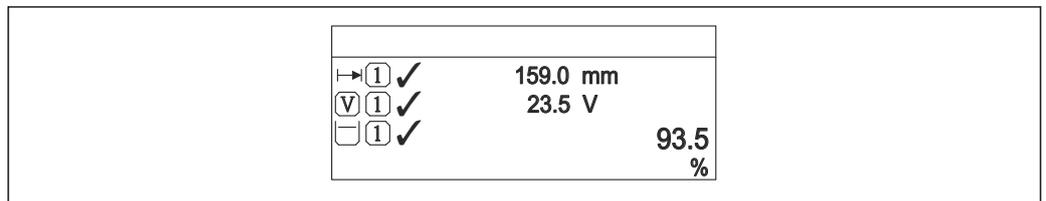

A0019966

42 "Format display" = "1 value large + 2 values"

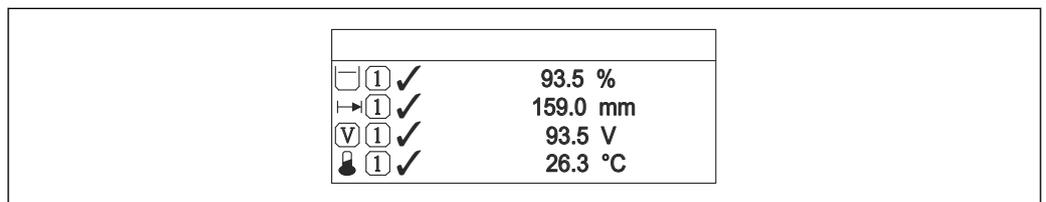

A0019968

43 "Format display" = "4 values"

- i
■
 The **Value 1 to 4 display** → 180 parameters specify which measured values are shown on the display and in which order.
- If more measured values are specified than the current display mode permits, the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter (→ 181).

Value 1 to 4 display


Navigation Setup → Advanced setup → Display → Value 1 display

Description Select the measured value that is shown on the local display.

- Selection**
- Level linearized
 - Distance
 - Interface linearized *
 - Interface distance *
 - Thickness upper layer *
 - Terminal voltage
 - Electronic temperature
 - Measured capacitance *
 - Analog output adv. diagnostics 1
 - Analog output adv. diagnostics 2
 - Analog output 1
 - Analog output 2
 - Analog output 3
 - Analog output 4
 - Analog output 5
 - Analog output 6
 - Analog output 7
 - Analog output 8

- Factory setting**
- For interface measurements and one current output**
- Value 1 display: Interface linearized
 - Value 2 display: Level linearized
 - Value 3 display: Thickness upper layer
 - Value 4 display: Current output 1
- For interface measurements and two current outputs**
- Value 1 display: Interface linearized
 - Value 2 display: Level linearized
 - Value 3 display: Current output 1
 - Value 4 display: Current output 2

Decimal places 1 to 4


Navigation Setup → Advanced setup → Display → Decimal places 1

Description Select the number of decimal places for the display value.

- Selection**
- X
 - X.X
 - X.XX
 - X.XXX
 - X.XXXX

Factory setting X.XX

* Visibility depends on order options or device settings

Additional information The setting does not affect the measuring or computational accuracy of the device.

Display interval

Navigation	  Setup → Advanced setup → Display → Display interval
Description	Set time measured values are shown on display if display alternates between values.
User entry	1 to 10 s
Factory setting	5 s
Additional information	This parameter is only relevant if the number of selected measuring values exceeds the number of values the selected display format can display simultaneously.


Display damping

Navigation	  Setup → Advanced setup → Display → Display damping
Description	Set display reaction time to fluctuations in the measured value.
User entry	0.0 to 999.9 s
Factory setting	0.0 s

Header

Navigation	  Setup → Advanced setup → Display → Header
Description	Select header contents on local display.
Selection	<ul style="list-style-type: none"> ■ Device tag ■ Free text
Factory setting	Device tag

Additional information

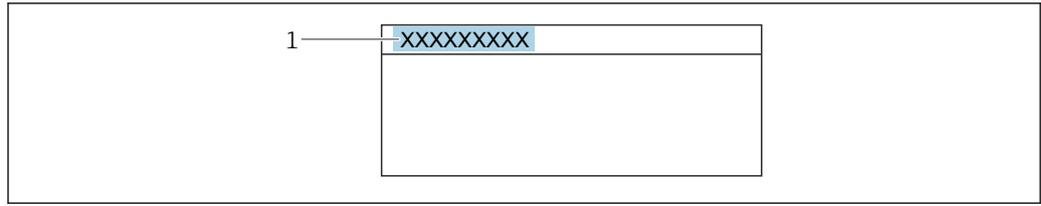

A0029422

1 Position of the header text on the display

Meaning of the options

- **Device tag**
Is defined in the **Device tag** parameter
- **Free text**
Is defined in the **Header text** parameter (→ 182)

Header text



Navigation Setup → Advanced setup → Display → Header text

Prerequisite **Header (→ 181) = Free text**

Description Enter display header text.

Factory setting -----

Additional information The number of characters which can be displayed depends on the characters used.

Separator



Navigation Setup → Advanced setup → Display → Separator

Description Select decimal separator for displaying numerical values.

Selection ■ .
 ■ ,

Factory setting .

Number format



Navigation Setup → Advanced setup → Display → Number format

Description Choose number format for the display.

Selection ■ Decimal
 ■ ft-in-1/16"

Factory setting Decimal

Additional information The **ft-in-1/16"** option is only valid for distance units.

Decimal places menu

Navigation   Setup → Advanced setup → Display → Decimal places menu

Description Select number of decimal places for the representation of numbers within the operating menu.

Selection

- x
- x.X
- x.XX
- x.XXX
- x.XXXX

Factory setting x.xxxx

Additional information

- Is only valid for numbers in the operating menu (e.g. **Empty calibration, Full calibration**), but not for the measured value display. The number of decimal places for the measured value display is defined in the **Decimal places 1 to 4** →  180 parameters.
- The setting does not affect the accuracy of the measurement or the calculations.

Backlight

Navigation   Setup → Advanced setup → Display → Backlight

Prerequisite The device has the SD03 local display (with optical keys).

Description Switch the local display backlight on and off.

Selection

- Disable
- Enable

Factory setting Disable

Additional information **Meaning of the options**

- **Disable**
Switches the backlight off.
- **Enable**
Switches the backlight on.

 Regardless of the setting in this parameter the backlight may be automatically switched off by the device if the supply voltage is too low.

Contrast display

Navigation Setup → Advanced setup → Display → Contrast display**Description**

Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle).

User entry

20 to 80 %

Factory setting

Dependent on the display.

Additional information

- 
- Setting the contrast via push-buttons:
- Darker: press the   buttons simultaneously.
 - Brighter: press the   buttons simultaneously.

"Configuration backup display" submenu

 This submenu is only visible if a display module is connected to the device.

The configuration of the device can be saved to the display module at a certain point of time (backup). The saved configuration can be restored to the device if required, e.g. in order to bring the device back into a defined state. The configuration can also be transferred to a different device of the same type using the display module.

 Configurations can only be exchanged between devices which are in the same operating mode (see the **Operating mode** parameter (→  133)).

Navigation   Setup → Advanced setup → Configuration backup display

Operating time

Navigation   Setup → Advanced setup → Configuration backup display → Operating time

Description Indicates how long the device has been in operation.

Additional information *Maximum time*
9 999 d (≈ 27 years)

Last backup

Navigation   Setup → Advanced setup → Configuration backup display → Last backup

Description Indicates when the last data backup was saved to the display module.

Configuration management



Navigation   Setup → Advanced setup → Configuration backup display → Configuration management

Description Select action for managing the device data in the display module.

Selection

- Cancel
- Execute backup
- Restore
- Duplicate
- Compare
- Clear backup data
- Display incompatible

Factory setting Cancel

Additional information

Meaning of the options

- **Cancel**
No action is executed and the user exits the parameter.
 - **Execute backup**
A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device.
 - **Restore**
The last backup copy of the device configuration is copied from the display module to the HistoROM of the device.
 - **Duplicate**
The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:
Medium type
 - **Compare**
The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter (→  186).
 - **Clear backup data**
The backup copy of the device configuration is deleted from the display module of the device.
-  While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.
-  If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset will not restore the original status.
- In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

Backup state

Navigation

 Setup → Advanced setup → Configuration backup display → Backup state

Description

Displays which backup action is currently in progress.

Comparison result

Navigation

  Setup → Advanced setup → Configuration backup display → Comparison result

Description

Comparison between present device data and display backup.

Additional information**Meaning of the display options****■ Settings identical**

The current device configuration of the HistoROM is identical to the backup copy in the display module.

■ Settings not identical

The current device configuration of the HistoROM is not identical to the backup copy in the display module.

■ No backup available

There is no backup copy of the device configuration of the HistoROM in the display module.

■ Backup settings corrupt

The current device configuration of the HistoROM is corrupt or not compatible with the backup copy in the display module.

■ Check not done

The device configuration of the HistoROM has not yet been compared to the backup copy in the display module.

■ Dataset incompatible

The data sets are incompatible and can not be compared.



To start the comparison, set **Configuration management** (→  185) = **Compare**.



If the transmitter configuration has been duplicated from a different device by **Configuration management** (→  185) = **Duplicate**, the new device configuration in the HistoROM is only partially identical to the configuration stored in the display module: Sensor specific properties (e.g. the mapping curve) are not duplicated. Thus, the result of the comparison will be **Settings not identical**.

"Administration" submenu

Navigation  Setup → Advanced setup → Administration

Define access code 

Navigation   Setup → Advanced setup → Administration → Define access code

Description Define release code for write access to parameters.

User entry 0 to 9 999

Factory setting 0

Additional information

-  If the factory setting is not changed or 0 is defined as the access code, the parameters are not write-protected and the configuration data of the device can then always be modified. The user is logged on in the *Maintenance* role.
-  The write protection affects all parameters marked with the  symbol in this document. On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.
-  Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter (→  147).
-  Please contact your Endress+Hauser Sales Center if you lose your access code.
-  For display operation: The new access code is only valid after it has been confirmed in the **Confirm access code** parameter (→  190).

Device reset 

Navigation  Setup → Advanced setup → Administration → Device reset
 Setup → Advanced setup → Administration → Device reset

Selection

- Cancel
- To fieldbus defaults
- To factory defaults
- To delivery settings
- Of customer settings
- To transducer defaults
- Restart device

Factory setting Cancel

Additional information**Meaning of the options****■ Cancel**

No action

■ To factory defaults

All parameters are reset to the order-code specific factory setting.

■ To delivery settings

All parameters are reset to the delivery setting. The delivery setting may differ from the factory default if customer specific settings have been ordered.

This option is only visible if customer specific settings have been ordered.

■ Of customer settings

All customer parameters are reset to their factory setting. Service parameters, however, remain unchanged.

■ To transducer defaults

Every measurement-related parameter is reset to its factory setting. Service parameters and communication-related parameters, however, remain unchanged.

■ Restart device

The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

"Define access code" wizard

 The **Define access code** wizard is only available when operating via the local display. When operating via an operating tool, the **Define access code** parameter is located directly in the **Administration** submenu. The **Confirm access code** parameter is not available for operation via operating tool.

Navigation  Setup → Advanced setup → Administration → Define access code

Define access code 

Navigation  Setup → Advanced setup → Administration → Define access code → Define access code

Description →  188

Confirm access code 

Navigation  Setup → Advanced setup → Administration → Define access code → Confirm access code

Description Confirm the entered access code.

User entry 0 to 9 999

Factory setting 0

17.4 "Diagnostics" menu

Navigation   Diagnostics

Actual diagnostics

Navigation   Diagnostics → Actual diagnostics

Description Displays current diagnostic message.

Additional information The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 If several messages are active at the same time, the messages with the highest priority is displayed.

 Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

Timestamp

Navigation  Diagnostics → Timestamp

Previous diagnostics

Navigation   Diagnostics → Previous diagnostics

Description Displays the last diagnostic message which has been active before the current message.

Additional information The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text

 The condition displayed may still apply. Information on what is causing the message, and remedy measures, can be viewed via the  symbol on the display.

Timestamp

Navigation  Diagnostics → Timestamp

Operating time from restart

Navigation   Diagnostics → Operating time from restart

Description Displays the time the device has been in operation since the last device restart.

Operating time

Navigation   Diagnostics → Operating time

Description Indicates how long the device has been in operation.

Additional information *Maximum time*
9 999 d (≈ 27 years)

17.4.1 "Diagnostic list" submenu

Navigation   Diagnostics → Diagnostic list

Diagnostics 1 to 5

Navigation	  Diagnostics → Diagnostic list → Diagnostics 1
Description	Display the current diagnostics messages with the highest to fifth-highest priority.
Additional information	The display consists of: <ul style="list-style-type: none">■ Symbol for event behavior■ Code for diagnostic behavior■ Operating time of occurrence■ Event text

Timestamp 1 to 5

Navigation	 Diagnostics → Diagnostic list → Timestamp
-------------------	---

17.4.2 "Event logbook" submenu

 The **Event logbook** submenu is only available when operating via the local display. When operating via FieldCare, the event list can be displayed in the FieldCare function "Event List / HistoROM".

Navigation  Diagnostics → Event logbook

Filter options

Navigation

 Diagnostics → Event logbook → Filter options

Selection

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

Factory setting

All

Additional information

-  ■ This parameter is only used for operation via the local display.
 ■ The status signals are categorized according to NAMUR NE 107.

"Event list" submenu

The **Event list** submenu displays the history of past events of the category selected in the **Filter options** parameter (→  194). A maximum of 100 events are displayed in chronological order.

The following symbols indicate whether an event has occurred or has ended:

- : Event has occurred
- : Event has ended

 Information on what is causing the message, and remedy instructions, can be viewed via the -button.

Display format

- For event messages in category I: information event, event text, "recording event" symbol and time the event occurred
- For event messages in category F, M, C, S (status signal): diagnostics event, event text, "recording event" symbol and time the event occurred

Navigation  Diagnostics → Event logbook → Event list

17.4.3 "Device information" submenu

Navigation   Diagnostics → Device information

Device tag

Navigation	 Diagnostics → Device information → Device tag
	 Diagnostics → Device information → Device tag
Description	Enter tag for measuring point.
Factory setting	FMP5x

Serial number

Navigation	 Diagnostics → Device information → Serial number
	 Diagnostics → Device information → Serial number
Additional information	 Uses of the serial number <ul style="list-style-type: none"> ■ To identify the device quickly, e.g. when contacting Endress+Hauser. ■ To obtain specific information on the device using the Device Viewer: www.endress.com/deviceviewer
	 The serial number is also indicated on the nameplate.

Firmware version

Navigation	 Diagnostics → Device information → Firmware version
	 Diagnostics → Device information → Firmware version
User interface	xx.yy.zz
Additional information	 For firmware versions differing only in the last two digits ("zz") there is no difference concerning functionality or operation.

Device name

- Navigation**
-  Diagnostics → Device information → Device name
 -  Diagnostics → Device information → Device name

Order code



- Navigation**
-  Diagnostics → Device information → Order code
 -  Diagnostics → Device information → Order code

Additional information The order code is generated from the extended order code, which defines all device features of the product structure. In contrast, the device features can not be read directly from the order code.

Extended order code 1 to 3



- Navigation**
-  Diagnostics → Device information → Extended order code 1
 -  Diagnostics → Device information → Extended order code 1

Description Display the three parts of the extended order code.

Additional information The extended order code indicates the version of all the features of the product structure and thus uniquely identifies the device.

17.4.4 "Measured values" submenu


Navigation  Diagnostics → Measured values

Distance

Navigation  Diagnostics → Measured values → Distance

Description Displays the measured distance D_L between the reference point (lower edge of the flange or threaded connection) and the level.

Additional information

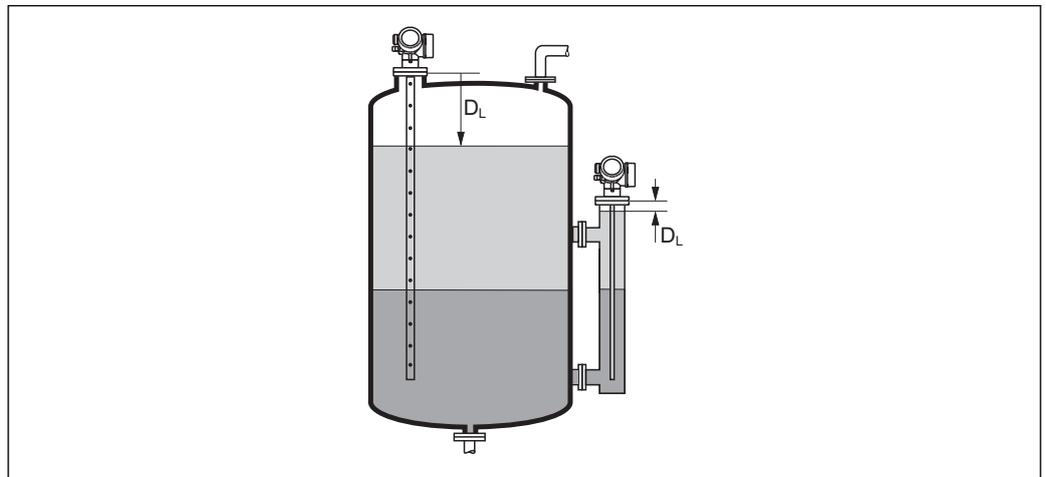

 44 Distance for interface measurements

A0013199

 The unit is defined in the **Distance unit** parameter (→  133).

Level linearized

Navigation  Diagnostics → Measured values → Level linearized

Description Displays linearized level.

Additional information 

- The unit is defined by the **Unit after linearization** parameter →  159.
- For interface measurements, this parameter always refers to the total level.


Interface distance

Navigation  Diagnostics → Measured values → Interface distance

Prerequisite **Operating mode** (→  133) = **Interface** or **Interface with capacitance**

Description

Displays the measured distance D_1 between the reference point (lower edge of flange or threaded connection) and the interface.

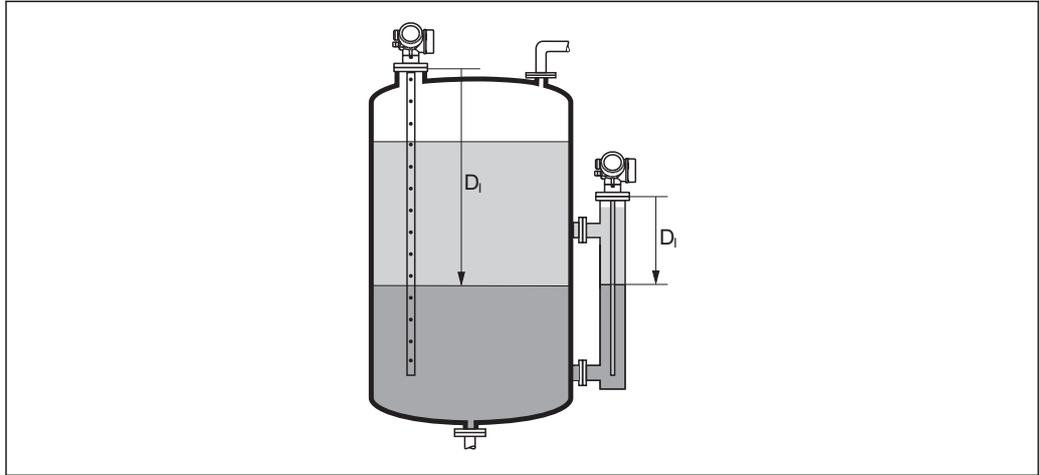Additional information

A0013202

 The unit is defined in the **Distance unit** parameter (→  133).

Interface linearized**Navigation**

  Diagnostics → Measured values → Interface linearized

Prerequisite

Operating mode (→  133) = **Interface** or **Interface with capacitance**

Description

Displays the linearized interface height.

Additional information

 The unit is defined in the **Unit after linearization** parameter →  159.

Thickness upper layer**Navigation**


  Diagnostics → Measured values → Thickness upper layer

Prerequisite

Operating mode (→  133) = **Interface** or **Interface with capacitance**

Description

Displays the upper interface thickness (UP).

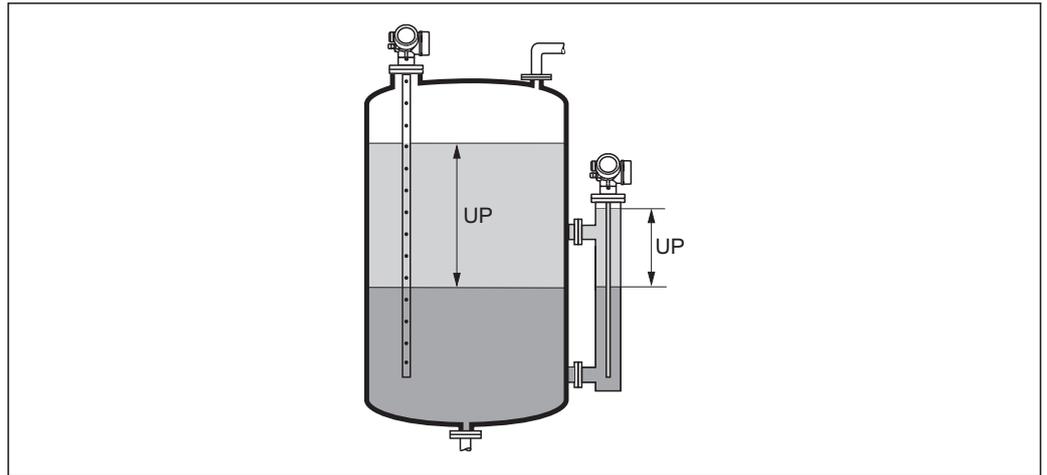Additional information

A0013313

UP Thickness upper layer

 The unit is defined by the **Unit after linearization** parameter →  159.

Terminal voltage 1**Navigation**

  Diagnostics → Measured values → Terminal voltage 1

17.4.5 "Analog input 1 to 5" submenu

There is an **Analog inputs** submenu for every AI block of the device. The AI block is used to configure the measured value transmission to the bus.

 Only the most basic properties of the AI block can be configured in this submenu. For a detailed configuration of the AI blocks refer to the **Expert** menu.

Navigation   Diagnostics → Analog inputs → Analog input 1 to 5

Block tag**Navigation**

  Diagnostics → Analog inputs → Analog input 1 to 7 → Block tag

Description

Defined to be unique throughout the control system at one plant site. The tag may be changed using the FB_Tag service.

Factory setting

Channel

Navigation	 Diagnostics → Analog inputs → Analog input 1 to 7 → Channel
Description	Use this function to select the input value that should be processed in the Analog Input function block.
Selection	<ul style="list-style-type: none"> ■ Uninitialized ■ Level linearized ■ Absolute echo amplitude ■ Absolute EOP amplitude ■ Absolute interface amplitude * ■ Distance ■ Electronic temperature ■ EOP shift ■ Interface linearized * ■ Interface distance * ■ Measured capacitance * ■ Relative echo amplitude ■ Relative interface amplitude * ■ Noise of signal ■ Terminal voltage ■ Thickness upper layer * ■ Calculated DC value * ■ Analog output adv. diagnostics 2 ■ Analog output adv. diagnostics 1
Factory setting	Uninitialized

Status

Navigation	 Diagnostics → Analog inputs → Analog input 1 to 7 → Status
Description	Indicates the status of the output of the AI block according to the FOUNDATION Fieldbus specification.

Value

Navigation	 Diagnostics → Analog inputs → Analog input 1 to 7 → Value
Description	Indicates the output value of the AI block.

* Visibility depends on order options or device settings

Units index

Navigation Diagnostics → Analog inputs → Analog input 1 to 7 → Units index**Description**

Indicates the unit of the output value.

17.4.6 "Data logging" submenu

Navigation  Diagnostics → Data logging

Assign channel 1 to 4

Navigation  Diagnostics → Data logging → Assign channel 1 to 4

Selection

- Off
- Level linearized
- Distance
- Unfiltered distance
- Interface linearized *
- Interface distance *
- Unfiltered interface distance
- Thickness upper layer *
- Terminal voltage
- Electronic temperature
- Measured capacitance *
- Absolute echo amplitude
- Relative echo amplitude
- Absolute interface amplitude *
- Relative interface amplitude *
- Absolute EOP amplitude
- EOP shift
- Noise of signal
- Calculated DC value *
- Analog output adv. diagnostics 1
- Analog output adv. diagnostics 2
- Analog output 1
- Analog output 2
- Analog output 3
- Analog output 4

Factory setting Off

Additional information A total of 1000 measured values can be logged. This means:

- 1000 data points if 1 logging channel is used
- 500 data points if 2 logging channels are used
- 333 data points if 3 logging channels are used
- 250 data points if 4 logging channels are used

If the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).

 The logged data are deleted if a new option is selected in this parameter.

* Visibility depends on order options or device settings

Logging interval
**Navigation**

-  Diagnostics → Data logging → Logging interval
-  Diagnostics → Data logging → Logging interval

User entry

1.0 to 3 600.0 s

Factory setting

30.0 s

Additional information

This parameter defines the interval between the individual data points in the data log, and thus the maximum loggable process time T_{\log} :

- If 1 logging channel is used: $T_{\log} = 1000 \cdot t_{\log}$
- If 2 logging channels are used: $T_{\log} = 500 \cdot t_{\log}$
- If 3 logging channels are used: $T_{\log} = 333 \cdot t_{\log}$
- If 4 logging channels are used: $T_{\log} = 250 \cdot t_{\log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of T_{\log} always remains in the memory (ring memory principle).

 The logged data are deleted if this parameter is changed.

*Example***When using 1 logging channel**

- $T_{\log} = 1000 \cdot 1 \text{ s} = 1000 \text{ s} \approx 16.5 \text{ min}$
- $T_{\log} = 1000 \cdot 10 \text{ s} = 10000 \text{ s} \approx 2.75 \text{ h}$
- $T_{\log} = 1000 \cdot 80 \text{ s} = 80000 \text{ s} \approx 22 \text{ h}$
- $T_{\log} = 1000 \cdot 3600 \text{ s} = 3600000 \text{ s} \approx 41 \text{ d}$

Clear logging data
**Navigation**

-  Diagnostics → Data logging → Clear logging data
-  Diagnostics → Data logging → Clear logging data

Selection

- Cancel
- Clear data


Factory setting

Cancel

"Display channel 1 to 4" submenu

i The **Display channel 1 to 4** submenus are only available for operation via the local display. When operating via FieldCare, the logging diagram can be displayed in the FieldCare function "Event List / HistoROM" .

The **Display channel 1 to 4** submenus invoke a diagram of the logging history of the respective channel.

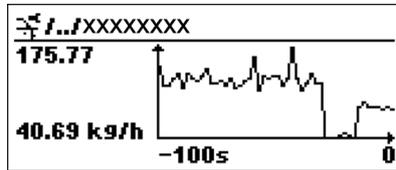

- x-axis: depending on the number of selected channels, 250 to 1000 measured values of a process variable are displayed.
- y-axis: covers the approximate measured value span and constantly adapts this to the measurement.

i To return to the operating menu, press **⏏** and **⏏** simultaneously.

Navigation **⏏** **⏏** Diagnostics → Data logging → Display channel 1 to 4

17.4.7 "Simulation" submenu

The **Simulation** submenu is used to simulate specific measuring values or other conditions. This helps to check the correct configuration of the device and connected control units.


Conditions which can be simulated

Condition to be simulated	Associated parameters
Specific value of a process variable	<ul style="list-style-type: none"> ▪ Assign measurement variable (→ 208) ▪ Process variable value (→ 208)
Specific state of the switch output	<ul style="list-style-type: none"> ▪ Switch output simulation (→ 208) ▪ Switch status (→ 209)
Existence of an alarm	Simulation device alarm (→ 209)

Enable/disable simulation


The simulation of measured values can be enabled or disabled via a hardware switch (SIM switch) at the electronics. Simulating a measured value is only possible if the SIM switch is in the ON position.

The switch output can always be simulated, irrespective of the position of the SIM switch.

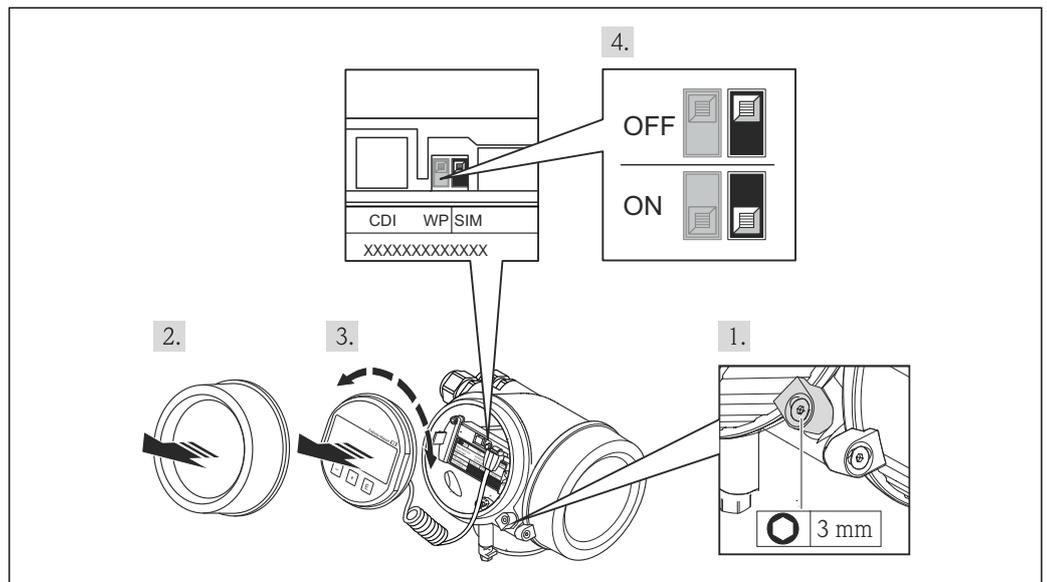

1. Loosen the securing clamp.
2. Unscrew the housing cover.

3. Pull out the display module with a gentle rotation movement. To make it easier to access the SIM switch, attach the display module to the edge of the electronics compartment.
 - ↳ Display module is attached to the edge of the electronics compartment.

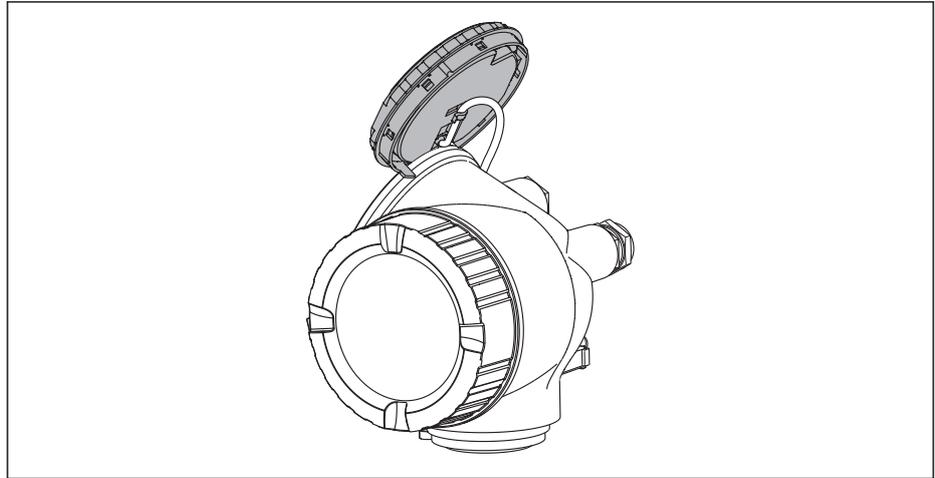

A0013909

4. SIM switch in the **ON** position: measured values can be simulated. SIM switch in the **OFF** position (factory setting): Simulation of measured values is disabled.
5. Feed the spiral cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Screw the electronics compartment cover closed and tighten the securing clamp.

Structure of the submenu

Navigation  Expert → Diagnostics → Simulation

▶ Simulation	
Assign measurement variable	→  208
Process variable value	→  208
Switch output simulation	→  208
Switch status	→  209
Simulation device alarm	→  209

Description of parameters

Navigation  Expert → Diagnostics → Simulation

Assign measurement variable

Navigation	 Expert → Diagnostics → Simulation → Assign measurement variable
Selection	<ul style="list-style-type: none"> ■ Off ■ Level ■ Interface * ■ Level linearized ■ Interface linearized ■ Thickness linearized
Factory setting	Off
Additional information	<ul style="list-style-type: none"> ■ The value of the variable to be simulated is defined in the Process variable value parameter (→  208). ■ If Assign measurement variable ≠ Off, a simulation is active. This is indicated by a diagnostic message of the <i>Function check (C)</i> category.

Process variable value

Navigation	 Expert → Diagnostics → Simulation → Process variable value
Prerequisite	Assign measurement variable (→  208) ≠ Off
User entry	Signed floating-point number
Factory setting	0
Additional information	Downstream measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.

Switch output simulation

Navigation	 Expert → Diagnostics → Simulation → Switch output simulation
Description	Switch the simulation of the switch output on and off.
Selection	<ul style="list-style-type: none"> ■ Off ■ On

* Visibility depends on order options or device settings

Factory setting Off

Switch status

Navigation   Expert → Diagnostics → Simulation → Switch status

Prerequisite **Switch output simulation** (→  208) = On

Description Select the status of the status output for the simulation.

Selection

- Open
- Closed

Factory setting Open

Additional information The switch status assumes the value defined in this parameter. This helps to check correct operation of connected control units.

Simulation device alarm

Navigation   Expert → Diagnostics → Simulation → Simulation device alarm

Description Switch the device alarm on and off.

Selection

- Off
- On

Factory setting Off

Additional information When selecting the **On** option, the device generates an alarm. This helps to check the correct output behavior of the device in the case of an alarm.
An active simulation is indicated by the diagnostic message  **C484 Simulation failure mode**.

Diagnostic event simulation

Navigation   Expert → Diagnostics → Simulation → Diagnostic event simulation

Description Select a diagnostic event to simulate this event.

Factory setting Off

Additional information When operated via the local display, the selection list can be filtered according to the event categories (**Diagnostic event category** parameter).

17.4.8 "Device check" submenu

Navigation  Diagnostics → Device check

Start device check

Navigation	 Diagnostics → Device check → Start device check
Description	Start a device check.
Selection	<ul style="list-style-type: none"> ■ No ■ Yes
Factory setting	No
Additional information	In the case of a lost echo a device check can not be performed.

Result device check

Navigation	 Diagnostics → Device check → Result device check
Description	Displays the result of the device check.
Additional information	<p>Meaning of the display options</p> <ul style="list-style-type: none"> ■ Installation ok Measurement possible without restrictions. ■ Accuracy reduced A measurement is possible. However, the measuring accuracy may be reduced due to the signal amplitudes. ■ Measurement capability reduced A measurement is currently possible. However, there is the risk of an echo loss. Check the mounting position of the device and the dielectric constant of the medium. ■ Check not done No device check has been performed.

Last check time

Navigation	 Diagnostics → Device check → Last check time
Description	Displays the operating time at which the last device check has been performed.

Level signal

Navigation	  Diagnostics → Device check → Level signal
Prerequisite	Device check has been performed.
Description	Displays result of the device check for the level signal.
User interface	<ul style="list-style-type: none"> ■ Check not done ■ Check not OK ■ Check OK
Additional information	For Level signal = Check not OK : Check the mounting position of the device and the dielectric constant of the medium.

Launch signal

Navigation	  Diagnostics → Device check → Launch signal
Prerequisite	Device check has been performed.
Description	Displays result of the display check for the launch signal.
User interface	<ul style="list-style-type: none"> ■ Check not done ■ Check not OK ■ Check OK
Additional information	For Launch signal = Check not OK : Check the mounting position of the device. In non-metallic vessels use a metal plate or a metal flange.

Interface signal

Navigation	  Diagnostics → Device check → Interface signal
Prerequisite	<ul style="list-style-type: none"> ■ Operating mode (→  133) = Interface or Interface with capacitance ■ Device check has been performed.
Description	Displays result of the device check for the interface signal.
User interface	<ul style="list-style-type: none"> ■ Check not done ■ Check not OK ■ Check OK

17.4.9 "Heartbeat" submenu

 The **Heartbeat** submenu is only available via **FieldCare** or **DeviceCare**. It contains the wizards which are part of the **Heartbeat Verification** and **Heartbeat Monitoring** application packages.

Detailed description

SD01872F

Navigation

 Diagnostics → Heartbeat

Index

A

Access authorization to parameters
 Read access 52
 Write access 52
 Access code 52
 Incorrect input 52
 Access status display (Parameter) 146
 Access status tooling (Parameter) 146
 Accessories
 Communication specific 118
 Device specific 113
 Service specific 118
 Activate table (Parameter) 164
 Actual diagnostics (Parameter) 191
 Administration (Submenu) 188
 Advanced setup (Submenu) 146
 Analog input 1 to 5 (Submenu) 144, 199
 Application 12
 Residual risk 12
 Assign channel 1 to 4 (Parameter) 202
 Assign diagnostic behavior (Parameter) 173
 Assign limit (Parameter) 173
 Assign measurement variable (Parameter) 208
 Assign status (Parameter) 172
 Automatic DC calculation (Wizard) 154

B

Backlight (Parameter) 183
 Backup state (Parameter) 186
 Block tag (Parameter) 144, 199
 Blocking distance (Parameter) 150, 167
 Bypass 28

C

Calculated DC value (Parameter) 152
 CE mark 13
 Channel (Parameter) 144, 200
 Cleaning 110
 Clear logging data (Parameter) 203
 Coax probe
 Design 17
 Coax probes
 Bending strength 25
 Comparison result (Parameter) 186
 Configuration backup display (Submenu) 185
 Configuration management (Parameter) 185
 Configuration of an interface measurement 79, 87
 Confirm access code (Parameter) 190
 Confirm distance (Parameter) 140, 143
 Confirm probe length (Parameter) 170, 171
 Context menu 63
 Contrast display (Parameter) 184
 Customer value (Parameter) 164

D

Data logging (Submenu) 202

DC value (Parameter) 138, 152, 154
 DC value lower medium (Parameter) 149
 Decimal places 1 (Parameter) 180
 Decimal places menu (Parameter) 183
 Declaration of Conformity 13
 Define access code 52
 Define access code (Parameter) 188, 190
 Define access code (Wizard) 190
 Designated use 12
 Device check (Submenu) 210
 Device information (Submenu) 195
 Device name (Parameter) 196
 Device replacement 111
 Device reset (Parameter) 188
 Device tag (Parameter) 195
 Diagnostic event
 In the operating tool 105
 Diagnostic event simulation (Parameter) 209
 Diagnostic events 102
 Diagnostic list 106
 Diagnostic list (Submenu) 193
 Diagnostic message 102
 Diagnostics
 Symbols 102
 Diagnostics (Menu) 191
 Diagnostics 1 (Parameter) 193
 Diagnostics event 103
 Diameter (Parameter) 161
 DIP switch
 see Write protection switch
 Disable simulation 205
 Display (Submenu) 178
 Display and operating module FHX50 48
 Display channel 1 to 4 (Submenu) 204
 Display damping (Parameter) 181
 Display interval (Parameter) 181
 Display module 57
 Display symbols for submenus 58
 Display symbols for the locking state 58
 Disposal 112
 Distance (Parameter) 137, 143, 197
 Distance unit (Parameter) 133
 Document
 Function 6
 Document function 6

E

Electronics housing
 Design 18
 Empty calibration (Parameter) 135
 Enable simulation 205
 Enter access code (Parameter) 147
 Envelope curve display 64
 Event history 107
 Event level
 Explanation 102

Symbols 102
 Event list (Submenu) 194
 Event logbook (Submenu) 194
 Event text 103
 Events list 107
 Extended order code 1 (Parameter) 196
 Exterior cleaning 110

F

Failure mode (Parameter) 176
 FHX50 48
 Filter options (Parameter) 194
 Filtering the event logbook 107
 Firmware version (Parameter) 195
 Flange 32
 Format display (Parameter) 178
 Free text (Parameter) 160
 Full calibration (Parameter) 136

H

Hardware write protection 53
 Header (Parameter) 181
 Header text (Parameter) 182
 Heartbeat (Submenu) 212
 Heat insulation 31
 HistoROM (description) 90
 Housing
 Design 18
 Turning 34

I

Input mask 61
 Interface (Parameter) 139
 Interface (Submenu) 148
 Interface distance (Parameter) 140, 197
 Interface linearized (Parameter) 161, 198
 Interface measurement configuration 79, 87
 Interface property (Parameter) 148
 Interface signal (Parameter) 211
 Intermediate height (Parameter) 162
 Invert output signal (Parameter) 176

K

Keypad lock
 Disabling 56
 Switching on 56

L

Language (Parameter) 178
 Language selection 87
 Last backup (Parameter) 185
 Last check time (Parameter) 210
 Launch signal (Parameter) 211
 Level (Parameter) 136, 164
 Level correction (Parameter) 151
 Level linearized (Parameter) 160, 197
 Level signal (Parameter) 211
 Level unit (Parameter) 150
 Linearization (Submenu) 156, 157, 158
 Linearization type (Parameter) 158

Local display 47
 see Diagnostics message
 see In alarm condition
 Locking status (Parameter) 146
 Logging interval (Parameter) 203

M

Maintenance 110
 Manage device configuration 83, 90
 Manual thickness upper layer (Parameter) 151, 154
 Mapping (Wizard) 143
 Mapping end point (Parameter) 142, 143
 Maximum value (Parameter) 161
 Measured materials 12
 Measured thickness upper layer (Parameter) 152
 Measured value symbols 59
 Measured values (Submenu) 197
 Medium group (Parameter) 134
 Menu
 Diagnostics 191
 Setup 133
 Mounting position for interface measurements 23

N

Number format (Parameter) 182

O

Operating elements
 Diagnostics message 103
 Operating mode (Parameter) 133
 Operating module 57
 Operating time (Parameter) 185, 192
 Operating time from restart (Parameter) 192
 Operational safety 13
 Order code (Parameter) 196
 Output echo lost (Parameter) 166
 Overvoltage protection
 General information 42

P

Present mapping (Parameter) 141
 Present probe length (Parameter) 169, 171
 Previous diagnostics (Parameter) 191
 Probe grounded (Parameter) 169
 Probe length correction (Wizard) 171
 Probe settings (Submenu) 169
 Process property (Parameter) 148
 Process Value Filter Time (Parameter) 145
 Process variable value (Parameter) 208
 Product safety 13

R

Ramp at echo lost (Parameter) 167
 Read access 52
 Record map (Parameter) 142, 143
 Registered trademarks 11
 Remedial measures
 Calling up 104
 Closing 104
 Remote operation 48

- Repair concept 111
- Replacing a device 111
- Requirements for personnel 12
- Result device check (Parameter) 210
- Return 112
- Rod probe
 - Design 17
- Rod probes
 - Bending strength 25
- Rope probe
 - Design 17
- Rope probes
 - Tensile load 25
- S**
- Safety instructions
 - Basic 12
- Safety Instructions (XA) 14
- Safety settings (Submenu) 166
- Securing coax probes 27
- Seilsonden
 - Montage 32
- Separator (Parameter) 182
- Serial number (Parameter) 195
- Service interface (CDI) 49
- Setting the operating language 78
- Settings
 - Manage device configuration 83, 90
 - Operating language 78
- Setup (Menu) 133
- Signal quality (Parameter) 138
- SIM switch 205
- Simulation (Submenu) 207, 208
- Simulation device alarm (Parameter) 209
- Spare parts 112
 - Nameplate 112
- Start device check (Parameter) 210
- Status (Parameter) 200
- Status signals 58, 102
- Stilling well 28
- Störungsbehebung 100
- Submenu
 - Administration 188
 - Advanced setup 146
 - Analog input 1 to 5 144, 199
 - Configuration backup display 185
 - Data logging 202
 - Device check 210
 - Device information 195
 - Diagnostic list 193
 - Display 178
 - Display channel 1 to 4 204
 - Event list 194
 - Event logbook 194
 - Events list 107
 - Heartbeat 212
 - Interface 148
 - Linearization 156, 157, 158
 - Measured values 197
 - Probe settings 169
 - Safety settings 166
 - Simulation 207, 208
 - Switch output 172
 - Switch output (Submenu) 172
 - Switch output function (Parameter) 172
 - Switch output simulation (Parameter) 208
 - Switch status (Parameter) 176, 209
 - Switch-off delay (Parameter) 176
 - Switch-off value (Parameter) 175
 - Switch-on delay (Parameter) 175
 - Switch-on value (Parameter) 174
- Symbols
 - For correction 61
 - In the text and numeric editor 61
- System components 118
- T**
- Table mode (Parameter) 162
- Table number (Parameter) 163
- Tank type (Parameter) 134
- Terminal voltage 1 (Parameter) 199
- Thickness upper layer (Parameter) 198
- Timestamp (Parameter) 191, 192, 193
- Tools 32
- Transmitter
 - Turning the display 35
 - Turning the display module 35
- Transmitter housing
 - Turning 34
- Tube diameter (Parameter) 134
- Turning the display 35
- Turning the display module 35
- U**
- Underground tanks 30
- Unit after linearization (Parameter) 159
- Units index (Parameter) 201
- Use calculated DC value (Parameter) 153, 154
- V**
- Value (Parameter) 200
- Value 1 display (Parameter) 180
- Value echo lost (Parameter) 166
- W**
- W@M Device Viewer 112
- Wizard
 - Automatic DC calculation 154
 - Define access code 190
 - Mapping 143
 - Probe length correction 171
- Workplace safety 13
- Write access 52
- Write protection
 - Via access code 52
 - Via write protection switch 53
- Write protection switch 53



www.addresses.endress.com
