


# Operating Instructions

## **Proline Promag P 100**

### **EtherNet/IP**

Electromagnetic flowmeter

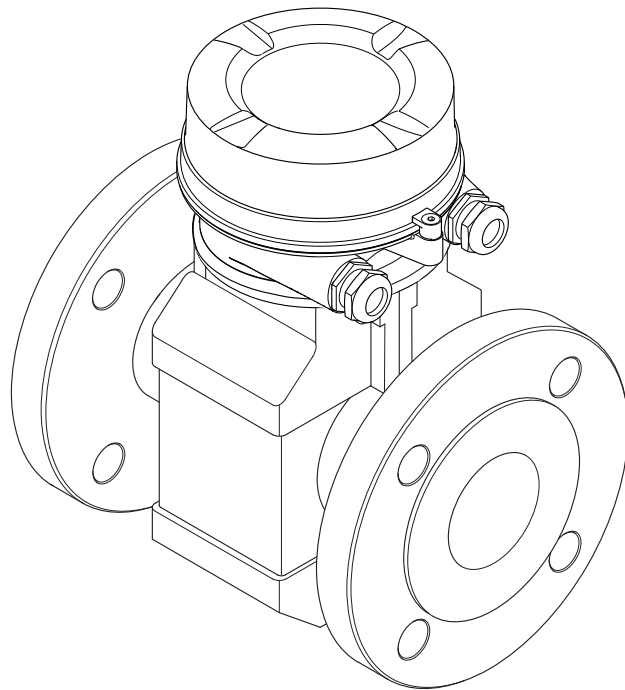

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

# Table of contents

<b>1</b>	<b>About this document</b>	<b>6</b>	<b>6.2</b>	Mounting the measuring device	23
1.1	Document function	6	6.2.1	Required tools	23
1.2	Symbols used	6	6.2.2	Preparing the measuring device	23
1.2.1	Safety symbols	6	6.2.3	Mounting the sensor	23
1.2.2	Electrical symbols	6	6.2.4	Turning the display module	28
1.2.3	Tool symbols	6	6.3	Post-installation check	28
1.2.4	Symbols for certain types of information	7	<b>7</b>	<b>Electrical connection</b>	<b>30</b>
1.2.5	Symbols in graphics	7	7.1	Connection conditions	30
1.3	Documentation	7	7.1.1	Required tools	30
1.3.1	Standard documentation	8	7.1.2	Requirements for connecting cable	30
1.3.2	Supplementary device-dependent documentation	8	7.1.3	Terminal assignment	31
1.4	Registered trademarks	8	7.1.4	Pin assignment, device plug	31
<b>2</b>	<b>Basic safety instructions</b>	<b>9</b>	7.1.5	Preparing the measuring device	32
2.1	Requirements for the personnel	9	7.2	Connecting the measuring device	32
2.2	Designated use	9	7.2.1	Connecting the transmitter	32
2.3	Workplace safety	10	7.2.2	Ensure potential equalization	34
2.4	Operational safety	10	7.3	Special connection instructions	36
2.5	Product safety	10	7.3.1	Connection examples	36
2.6	IT security	11	7.4	Hardware settings	36
<b>3</b>	<b>Product description</b>	<b>12</b>	7.4.1	Setting the device address	36
3.1	Product design	12	7.5	Ensuring the degree of protection	37
3.1.1	Device version with EtherNet/IP communication type	12	7.6	Post-connection check	38
<b>4</b>	<b>Incoming acceptance and product identification</b>	<b>13</b>	<b>8</b>	<b>Operation options</b>	<b>39</b>
4.1	Incoming acceptance	13	8.1	Overview of operating options	39
4.2	Product identification	13	8.2	Structure and function of the operating menu	40
4.2.1	Transmitter nameplate	14	8.2.1	Structure of the operating menu	40
4.2.2	Sensor nameplate	15	8.2.2	Operating philosophy	41
4.2.3	Symbols on measuring device	16	8.3	Access to the operating menu via the web browser	41
<b>5</b>	<b>Storage and transport</b>	<b>17</b>	8.3.1	Function range	41
5.1	Storage conditions	17	8.3.2	Prerequisites	42
5.2	Transporting the product	17	8.3.3	Establishing a connection	43
5.2.1	Measuring devices without lifting lugs	17	8.3.4	Logging on	44
5.2.2	Measuring devices with lifting lugs	18	8.3.5	User interface	45
5.2.3	Transporting with a fork lift	18	8.3.6	Disabling the Web server	46
5.3	Packaging disposal	18	8.3.7	Logging out	46
<b>6</b>	<b>Installation</b>	<b>19</b>	8.4	Access to the operating menu via the operating tool	47
6.1	Installation conditions	19	8.4.1	Connecting the operating tool	47
6.1.1	Mounting position	19	8.4.2	FieldCare	48
6.1.2	Requirements from environment and process	21	8.4.3	DeviceCare	50
			<b>9</b>	<b>System integration</b>	<b>51</b>
			9.1	Overview of device description files	51
			9.1.1	Current version data for the device	51
			9.1.2	Operating tools	51
			9.2	Overview of system files	51
			9.3	Integrating the measuring device in the system	52
			9.4	Cyclic data transmission	52
			9.4.1	Block model	52

9.4.2	Input and output groups .....	52	12.4.2	Calling up remedy information .....	83
<b>10</b>	<b>Commissioning .....</b>	<b>56</b>	12.5	Diagnostic information via communication interface .....	83
10.1	Function check .....	56	12.5.1	Reading out diagnostic information ..	83
10.2	Connecting via FieldCare .....	56	12.6	Adapting the diagnostic information .....	83
10.3	Configuring the device address via software ..	56	12.6.1	Adapting the diagnostic behavior ....	83
10.3.1	Ethernet network and Web server ...	56	12.7	Overview of diagnostic information .....	84
10.4	Setting the operating language .....	56	12.7.1	Diagnostic of sensor .....	84
10.5	Configuring the measuring device .....	56	12.7.2	Diagnostic of electronic .....	85
10.5.1	Defining the tag name .....	57	12.7.3	Diagnostic of configuration .....	88
10.5.2	Setting the system units .....	57	12.7.4	Diagnostic of process .....	90
10.5.3	Configuring the communication interface .....	59	12.8	Pending diagnostic events .....	92
10.5.4	Configuring the local display .....	60	12.9	Diagnostic list .....	93
10.5.5	Configuring the low flow cut off .....	61	12.10	Event logbook .....	93
10.5.6	Configuring empty pipe detection ...	63	12.10.1	Reading out the event logbook .....	93
10.6	Advanced settings .....	64	12.10.2	Filtering the event logbook .....	94
10.6.1	Carrying out a sensor adjustment ....	64	12.10.3	Overview of information events .....	94
10.6.2	Configuring the totalizer .....	64	12.11	Resetting the measuring device .....	95
10.6.3	Carrying out additional display configurations .....	66	12.11.1	Function scope of the "Device reset" parameter .....	95
10.6.4	Performing electrode cleaning .....	68	12.12	Device information .....	95
10.6.5	Using parameters for device administration .....	69	12.13	Firmware history .....	97
10.7	Simulation .....	70	<b>13</b>	<b>Maintenance .....</b>	<b>98</b>
10.8	Protecting settings from unauthorized access .....	71	13.1	Maintenance tasks .....	98
10.8.1	Write protection via access code .....	71	13.1.1	Exterior cleaning .....	98
10.8.2	Write protection via write protection switch .....	71	13.1.2	Interior cleaning .....	98
			13.1.3	Replacing seals .....	98
<b>11</b>	<b>Operation .....</b>	<b>73</b>	13.2	Measuring and test equipment .....	98
11.1	Read out and modify current Ethernet settings .....	73	13.3	Endress+Hauser services .....	98
11.2	Reading the device locking status .....	73	<b>14</b>	<b>Repairs .....</b>	<b>99</b>
11.3	Reading measured values .....	74	14.1	General notes .....	99
11.3.1	"Process variables" submenu .....	74	14.1.1	Repair and conversion concept .....	99
11.3.2	"Totalizer" submenu .....	75	14.1.2	Notes for repair and conversion .....	99
11.4	Adapting the measuring device to the process conditions .....	76	14.2	Spare parts .....	99
11.5	Performing a totalizer reset .....	76	14.3	Endress+Hauser services .....	99
11.5.1	Function scope of the "Control Totalizer" parameter .....	77	14.4	Return .....	99
11.5.2	Function scope of the "Reset all totalizers" parameter .....	77	14.5	Disposal .....	100
<b>12</b>	<b>Diagnostics and troubleshooting ...</b>	<b>78</b>	14.5.1	Removing the measuring device ....	100
12.1	General troubleshooting .....	78	14.5.2	Disposing of the measuring device ..	100
12.2	Diagnostic information via light emitting diodes .....	80	<b>15</b>	<b>Accessories .....</b>	<b>101</b>
12.2.1	Transmitter .....	80	15.1	Device-specific accessories .....	101
12.3	Diagnostic information in the Web browser ..	80	15.1.1	For the transmitter .....	101
12.3.1	Diagnostic options .....	80	15.1.2	For the sensor .....	101
12.3.2	Calling up remedy information .....	82	15.2	Communication-specific accessories .....	101
12.4	Diagnostic information in DeviceCare or FieldCare .....	82	15.3	Service-specific accessories .....	102
12.4.1	Diagnostic options .....	82	15.4	System components .....	102
			<b>16</b>	<b>Technical data .....</b>	<b>103</b>
			16.1	Application .....	103
			16.2	Function and system design .....	103
			16.3	Input .....	103
			16.4	Output .....	105
			16.5	Power supply .....	109

---

16.6	Performance characteristics . . . . .	110
16.7	Installation . . . . .	111
16.8	Environment . . . . .	111
16.9	Process . . . . .	112
16.10	Mechanical construction . . . . .	115
16.11	Operability . . . . .	119
16.12	Certificates and approvals . . . . .	121
16.13	Application packages . . . . .	122
16.14	Accessories . . . . .	123
16.15	Supplementary documentation . . . . .	123
<b>Index . . . . .</b>		<b>125</b>





# 1 About this document

## 1.1 Document function






These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

## 1.2 Symbols used



### 1.2.1 Safety symbols

Symbol	Meaning
	<b>DANGER!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
	<b>WARNING!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	<b>CAUTION!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
	<b>NOTE!</b> This symbol contains information on procedures and other facts which do not result in personal injury.







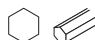





### 1.2.2 Electrical symbols

Symbol	Meaning
	Direct current
	Alternating current
	Direct current and alternating current
	<b>Ground connection</b> A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	<b>Protective Earth (PE)</b> A terminal which must be connected to ground prior to establishing any other connections.  The ground terminals are situated inside and outside the device: <ul style="list-style-type: none"> <li>▪ Inner ground terminal: Connects the protective earth to the mains supply.</li> <li>▪ Outer ground terminal: Connects the device to the plant grounding system.</li> </ul>



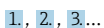

### 1.2.3 Tool symbols

Symbol	Meaning
	Allen key
	Open-ended wrench


### 1.2.4 Symbols for certain types of information

Symbol	Meaning
	<b>Permitted</b> Procedures, processes or actions that are permitted.
	<b>Preferred</b> Procedures, processes or actions that are preferred.
	<b>Forbidden</b> Procedures, processes or actions that are forbidden.
	<b>Tip</b> Indicates additional information.
	Reference to documentation.
	Reference to page.
	Reference to graphic.
	Notice or individual step to be observed.
	Series of steps.
	Result of a step.
	Help in the event of a problem.
	Visual inspection.

### 1.2.5 Symbols in graphics

Symbol	Meaning
1, 2, 3, ...	Item numbers
	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections
	Hazardous area
	Safe area (non-hazardous area)
	Flow direction

## 1.3 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer))
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

 For a detailed list of the individual documents along with the documentation code

### 1.3.1 Standard documentation

Document type	Purpose and content of the document
Technical Information	<b>Planning aid for your device</b> The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Sensor Brief Operating Instructions	<b>Guides you quickly to the 1st measured value - Part 1</b> The Sensor Brief Operating Instructions are aimed at specialists with responsibility for installing the measuring device. <ul style="list-style-type: none"> <li>■ Incoming acceptance and product identification</li> <li>■ Storage and transport</li> <li>■ Installation</li> </ul>
Transmitter Brief Operating Instructions	<b>Guides you quickly to the 1st measured value - Part 2</b> The Transmitter Brief Operating Instructions are aimed at specialists with responsibility for commissioning, configuring and parameterizing the measuring device (until the first measured value). <ul style="list-style-type: none"> <li>■ Product description</li> <li>■ Installation</li> <li>■ Electrical connection</li> <li>■ Operation options</li> <li>■ System integration</li> <li>■ Commissioning</li> <li>■ Diagnostic information</li> </ul>
Description of Device Parameters	<b>Reference for your parameters</b> The document provides a detailed explanation of each individual parameter in the Expert operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

### 1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

## 1.4 Registered trademarks

#### **EtherNet/IP™**

Trademark of ODVA, Inc.

#### **Microsoft®**

Registered trademark of the Microsoft Corporation, Redmond, Washington, USA



## 2 Basic safety instructions

### 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

### 2.2 Designated use


#### Application and media

The measuring device described in these Brief Operating Instructions is intended only for flow measurement of liquids with a minimum conductivity of 5  $\mu\text{S}/\text{cm}$ .

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Keep within the specified pressure and temperature range.
- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential: "Documentation" section →  7.
- ▶ Protect the measuring device permanently against corrosion from environmental influences.

#### Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

#### **WARNING**

##### **Danger of breakage due to corrosive or abrasive fluids!**

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Keep within the specified pressure and temperature range.

**NOTICE****Verification for borderline cases:**

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

**Residual risks****⚠ WARNING**

**The electronics and the medium may cause the surfaces to heat up. This presents a burn hazard!**

- ▶ For elevated fluid temperatures, ensure protection against contact to prevent burns.

## 2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

- ▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

- ▶ Due to the increased risk of electric shock, gloves must be worn.

## 2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

**Conversions to the device**

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with Endress+Hauser.

**Repair**

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

## 2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

## **2.6 IT security**

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

### 3 Product description


The device consists of a transmitter and a sensor.

The device is available as a compact version:


The transmitter and sensor form a mechanical unit.

#### 3.1 Product design

##### 3.1.1 Device version with EtherNet/IP communication type

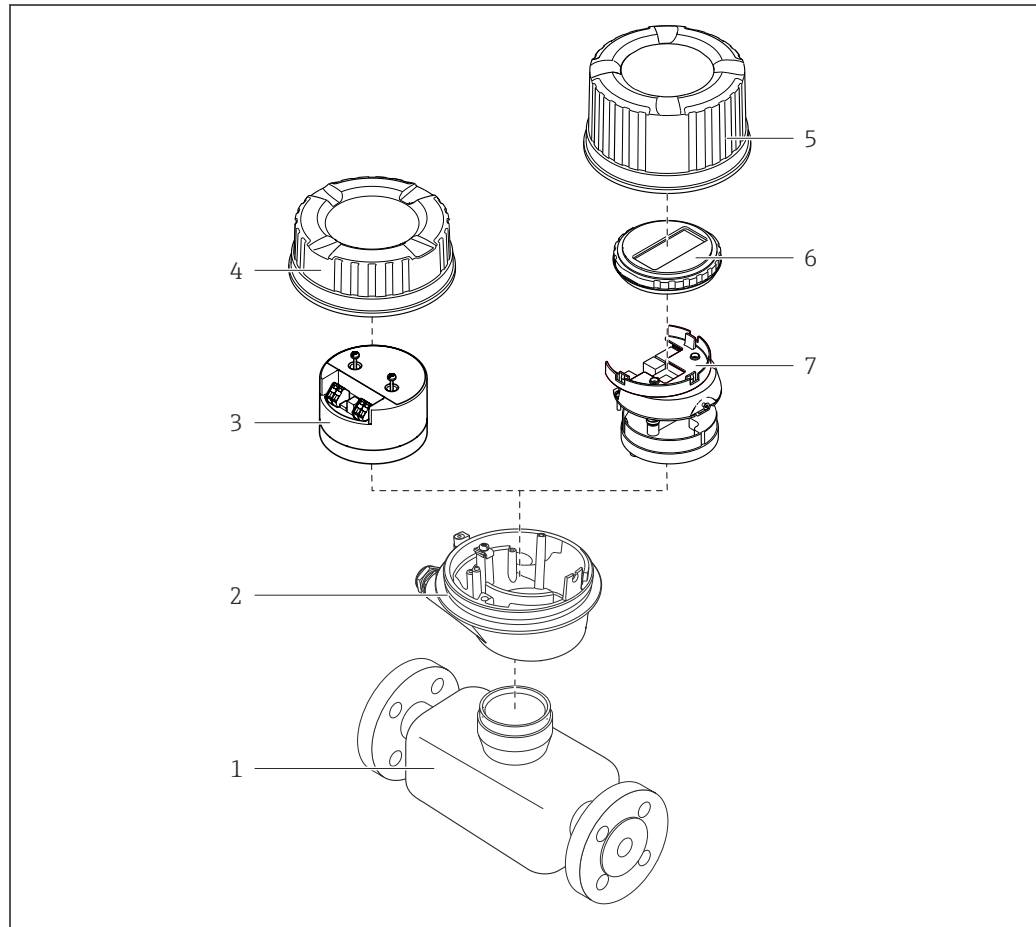



A0023153

 1 Important components of a measuring device




- 1 Sensor
- 2 Transmitter housing
- 3 Main electronics module
- 4 Transmitter housing cover
- 5 Transmitter housing cover (version for optional onsite display)
- 6 Onsite display (optional)
- 7 Main electronics module (with bracket for optional onsite display)

## 4 Incoming acceptance and product identification


### 4.1 Incoming acceptance

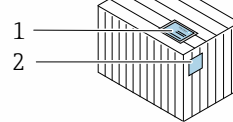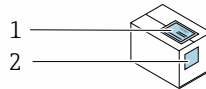

 Are the order codes on the delivery note (1) and the product sticker (2) identical?

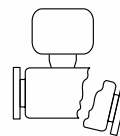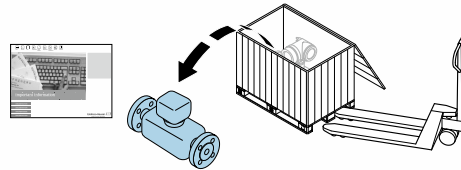

Are the goods undamaged?

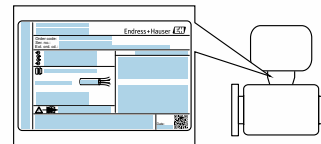

Do the nameplate data match the ordering information on the delivery note?



Is the CD-ROM with the Technical Documentation (depends on device version) and documents present?





- If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
- Depending on the device version, the CD-ROM might not be part of the delivery! The Technical Documentation is available via the Internet or via the *Endress+Hauser Operations App*, see the "Product identification" section → 14.

### 4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.


For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" →  8 and "Supplementary device-dependent documentation" →  8
- The *W@M Device Viewer*: Enter the serial number from the nameplate ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer))
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

### 4.2.1 Transmitter nameplate

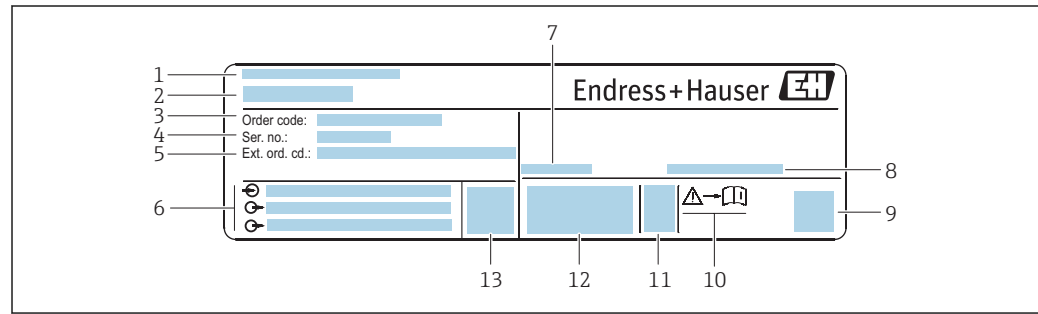


A0030222

 2 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Electrical connection data, e.g. available inputs and outputs, supply voltage
- 7 Permitted ambient temperature ( $T_a$ )
- 8 Degree of protection
- 9 2-D matrix code
- 10 Document number of safety-related supplementary documentation
- 11 Manufacturing date: year-month
- 12 CE mark, C-Tick
- 13 Firmware version (FW)

## 4.2.2 Sensor nameplate

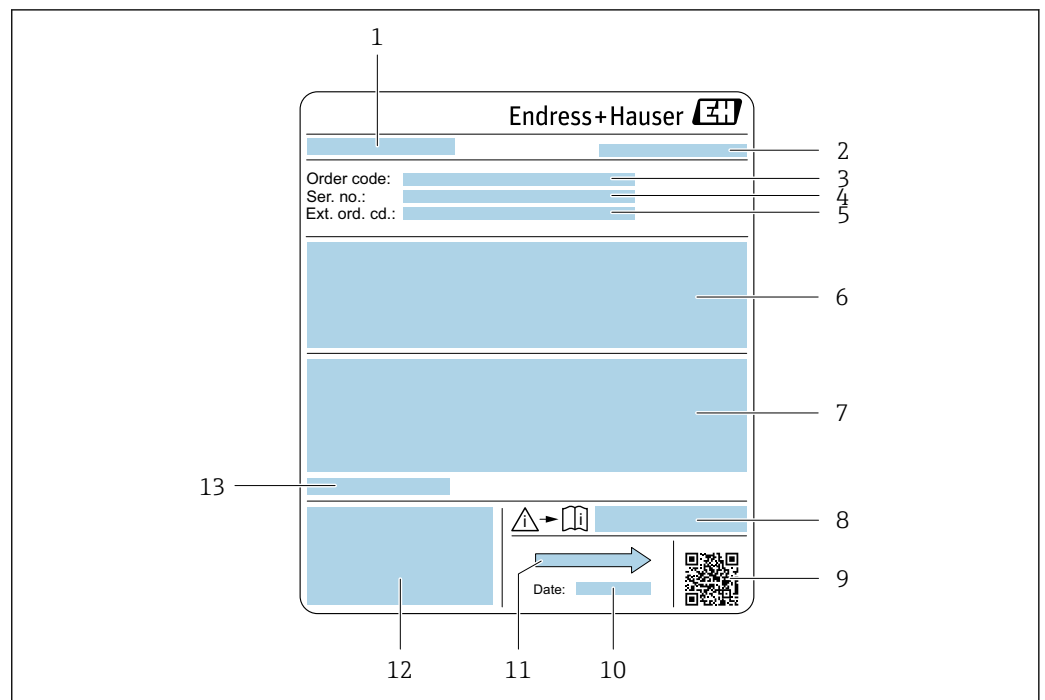

A0029205

3 Example of sensor nameplate

- 1 Name of the sensor
- 2 Manufacturing location
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Flow; nominal diameter of the sensor; pressure rating; nominal pressure; system pressure; fluid temperature range; material of liner and electrodes
- 7 Approval information for explosion protection, Pressure Equipment Directive and degree of protection
- 8 Document number of safety-related supplementary documentation → 123
- 9 2-D matrix code
- 10 Manufacturing date: year-month
- 11 Flow direction
- 12 CE mark, C-Tick
- 13 Permitted ambient temperature ( $T_a$ )




### Order code

The measuring device is reordered using the order code.

#### Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approval-related specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

### 4.2.3 Symbols on measuring device

Symbol	Meaning
	<b>WARNING!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	<b>Reference to documentation</b> Refers to the corresponding device documentation.
	<b>Protective ground connection</b> A terminal which must be connected to ground prior to establishing any other connections.



## 5 Storage and transport

### 5.1 Storage conditions


Observe the following notes for storage:

- ▶ Store in the original packaging to ensure protection from shock.
- ▶ Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- ▶ Protect from direct sunlight to avoid unacceptably high surface temperatures.
- ▶ Select a storage location where moisture cannot collect in the measuring device as fungus and bacteria infestation can damage the lining.
- ▶ Store in a dry and dust-free place.
- ▶ Do not store outdoors.


Storage temperature →  111

### 5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

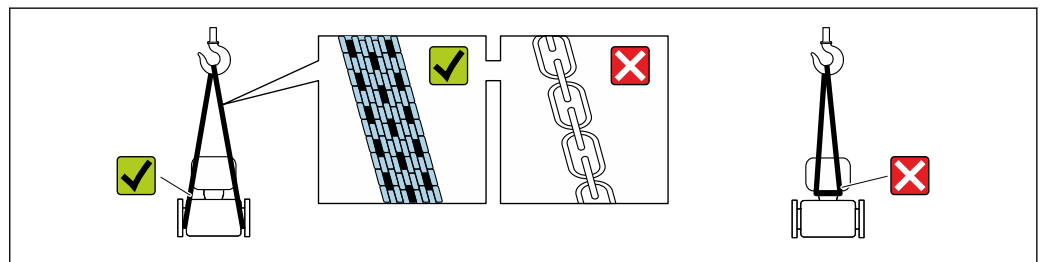

A0029252

 Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


#### 5.2.1 Measuring devices without lifting lugs

##### WARNING

**Center of gravity of the measuring device is higher than the suspension points of the webbing slings.**

Risk of injury if the measuring device slips.

- ▶ Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

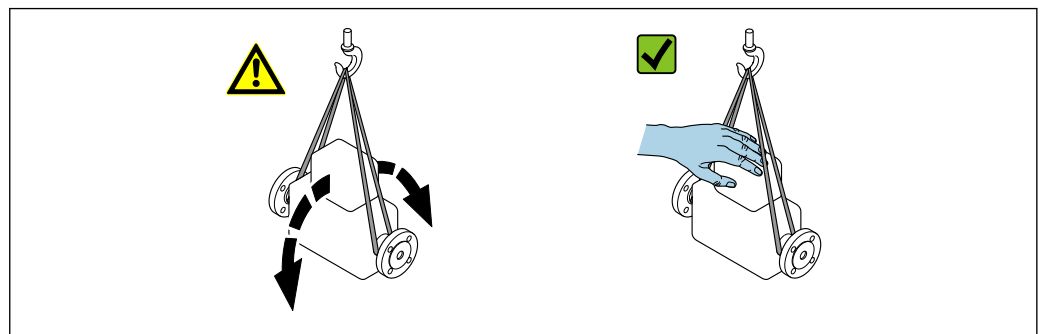

A0029214

### 5.2.2 Measuring devices with lifting lugs

#### ⚠ CAUTION

##### Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ▶ The device must always be secured at two lifting lugs at least.


### 5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

#### ⚠ CAUTION

##### Risk of damaging the magnetic coil

- ▶ If transporting by forklift, do not lift the sensor by the metal casing.
- ▶ This would buckle the casing and damage the internal magnetic coils.

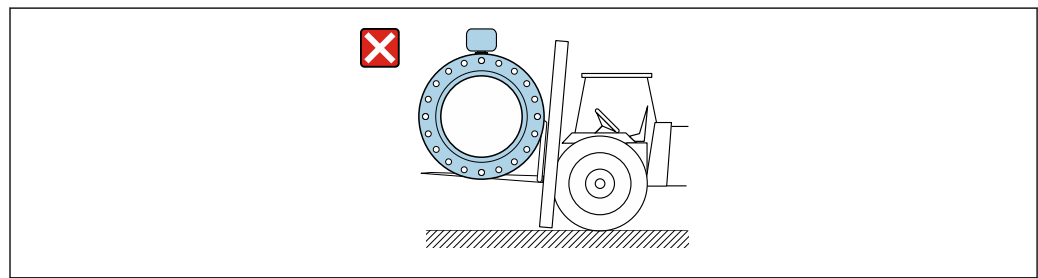

A0029319

## 5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:


- Measuring device secondary packaging: polymer stretch film that conforms to EC Directive 2002/95/EC (RoHS).
- Packaging:
  - Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
  - or
  - Carton in accordance with European Packaging Directive 94/62EC; recyclability is confirmed by the affixed RESY symbol.
- Seaworthy packaging (optional): Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
- Carrying and mounting hardware:
  - Disposable plastic pallet
  - Plastic straps
  - Plastic adhesive strips
- Dunnage: Paper cushion

## 6 Installation

### 6.1 Installation conditions

#### 6.1.1 Mounting position

##### Mounting location

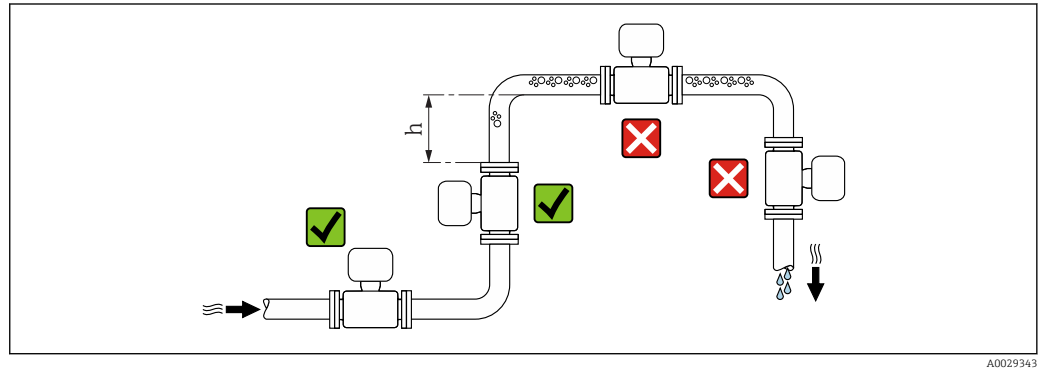


A0029343

Preferably install the sensor in an ascending pipe, and ensure a sufficient distance to the next pipe elbow:  $h \geq 2 \times DN$

##### Installation in down pipes

Install a siphon with a vent valve downstream of the sensor in down pipes whose length  $h \geq 5 \text{ m}$  (16.4 ft). This precaution is to avoid low pressure and the consequent risk of damage to the measuring tube. This measure also prevents the system losing prime.

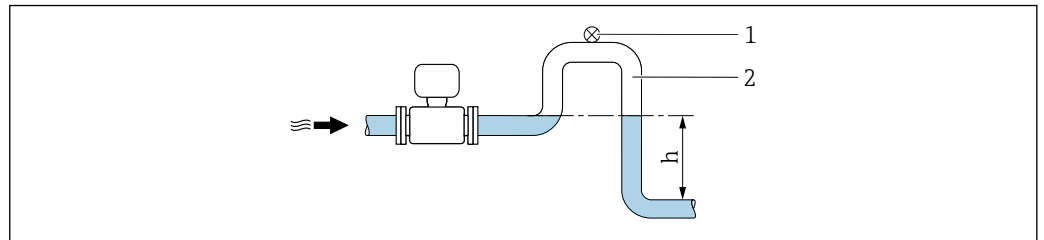


A0028981

##### 4 Installation in a down pipe

- 1 Vent valve
- 2 Pipe siphon
- h Length of down pipe


##### Installation in partially filled pipes

A partially filled pipe with a gradient necessitates a drain-type configuration.

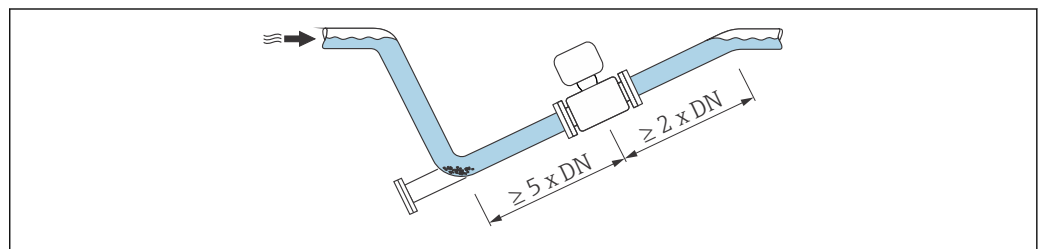





A0029257

For heavy sensors DN ≥ 350 (14")

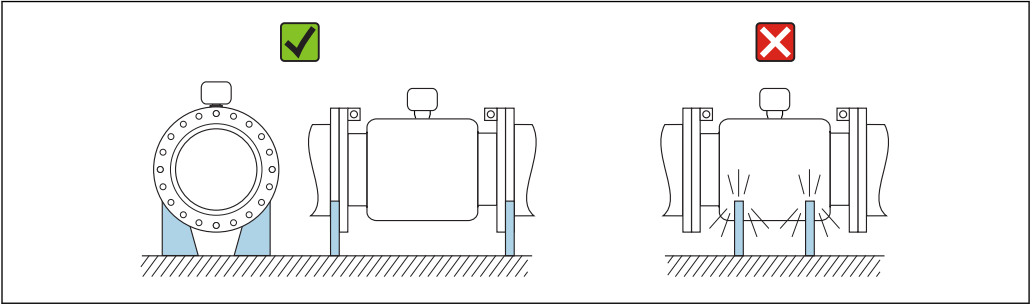

Orientation

   
The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

Orientation			Recommendation
A	Vertical orientation	 A0015591	✓✓
B	Horizontal orientation, transmitter at top	 A0015589	✓✓ <sup>1)</sup>
C	Horizontal orientation, transmitter at bottom	 A0015590	✓✓ <sup>2) 3)</sup>
D	Horizontal orientation, transmitter at side	 A0015592	✗

- 1) Applications with low process temperatures may decrease the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 2) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.
- 3) To prevent the electronics module from overheating in the case of a sharp rise in temperature (e.g. CIP- or SIP processes), install the device with the transmitter component pointing downwards.

Horizontal

- Ideally, the measuring electrode plane should be horizontal. This prevents brief insulation of the two measuring electrodes by entrained air bubbles.
- Empty pipe detection only works if the transmitter housing is pointing upwards as otherwise there is no guarantee that the empty pipe detection function will actually respond to a partially filled or empty measuring tube.

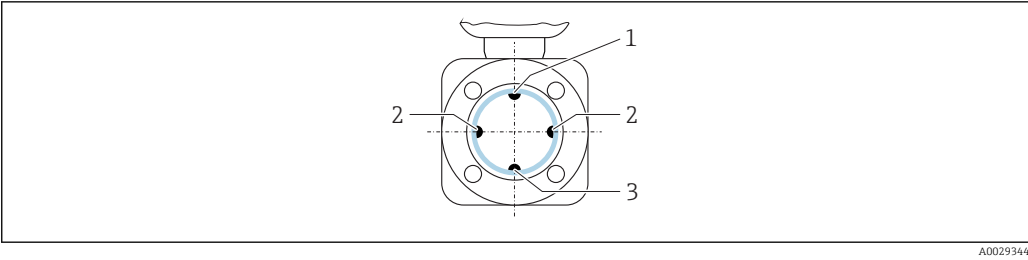


- 1 EPD electrode for empty pipe detection
- 2 Measuring electrodes for signal detection
- 3 Reference electrode for potential equalization


**i** Measuring devices with tantalum or platinum electrodes can be ordered without an EPD electrode. In this case, empty pipe detection is performed via the measuring electrodes.

**Inlet and outlet runs**

If possible, install the sensor upstream from fittings such as valves, T-pieces or elbows. Observe the following inlet and outlet runs to comply with accuracy specifications:

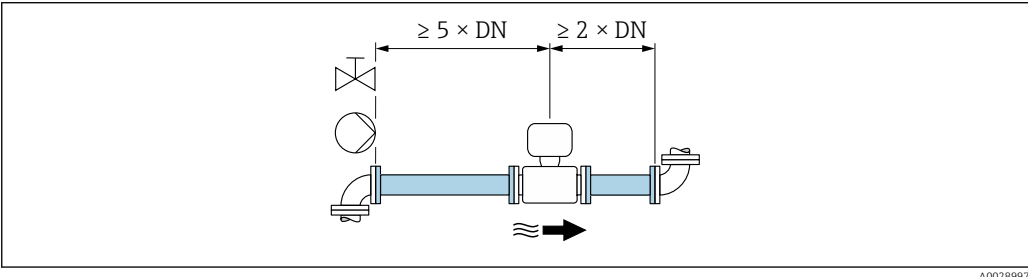

- 5 Order code for "Design", option A "Insertion length short, ISO/DVGW until DN400, DN450-2000 1:1" and order code for "Design", option B "Insertion length long, ISO/DVGW until DN400, DN450-2000 1:1.3"

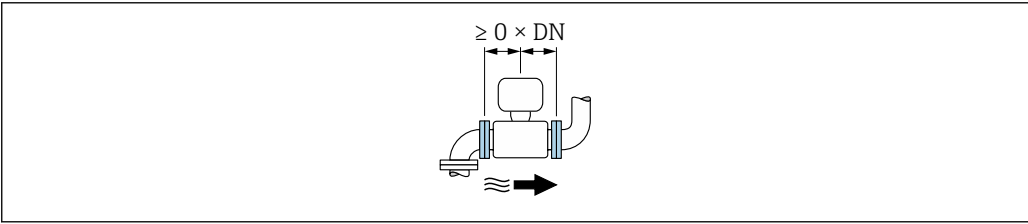

- 6 Order code for "Design", option C "Insertion length short ISO/DVGW until DN300, w/o inlet and outlet runs, constricted meas.tube"

*Installation dimensions*

**i** For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

**6.1.2 Requirements from environment and process**

**Ambient temperature range**


Transmitter	-40 to +60 °C (-40 to +140 °F)
Local display	-20 to +60 °C (-4 to +140 °F), the readability of the display may be impaired at temperatures outside the temperature range.

Sensor	<ul style="list-style-type: none"> <li>■ Process connection material, carbon steel: -10 to +60 °C (+14 to +140 °F)</li> <li>■ Process connection material, stainless steel: -40 to +60 °C (-40 to +140 °F)</li> </ul>
Liner	Do not exceed or fall below the permitted temperature range of the liner .

If operating outdoors:

- Install the measuring device in a shady location.
- Avoid direct sunlight, particularly in warm climatic regions.
- Avoid direct exposure to weather conditions.

### System pressure

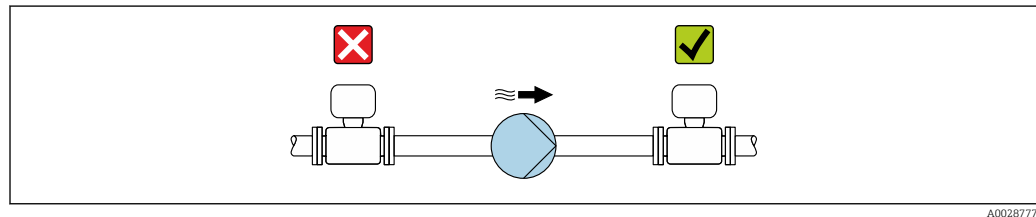


A0028777

Never install the sensor on the pump suction side in order to avoid the risk of low pressure, and thus damage to the liner.

**i** Furthermore, install pulse dampers if reciprocating, diaphragm or peristaltic pumps are used.

- i** ■ Information on the liner's resistance to partial vacuum → 113
- Information on the shock resistance of the measuring system → 112
- Information on the vibration resistance of the measuring system → 111

### Vibrations

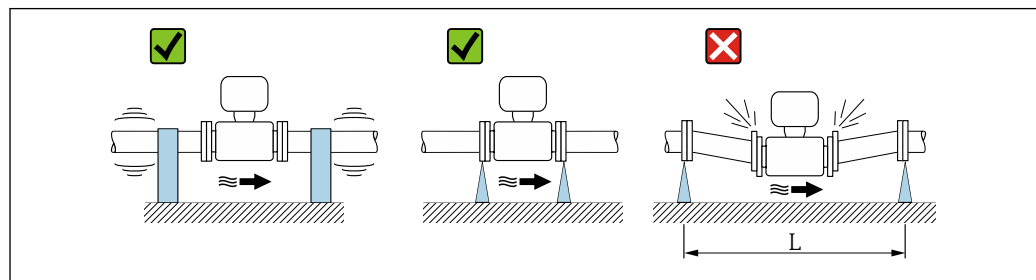

A0029004

**7** Measures to avoid device vibrations ( $L > 10\text{ m}$  (33 ft))

In the event of very strong vibrations, the pipe and sensor must be supported and fixed.

- i** ■ Information on the shock resistance of the measuring system → 112
- Information on the vibration resistance of the measuring system → 111


### Adapters

Suitable adapters to DIN EN 545 (double-flange reducers) can be used to install the sensor in larger-diameter pipes. The resultant increase in the rate of flow improves measuring accuracy with very slow-moving fluids. The nomogram shown here can be used to calculate the pressure loss caused by reducers and expanders.

**i** The nomogram only applies to liquids with a viscosity similar to that of water.

1. Calculate the ratio of the diameters  $d/D$ .

2. From the nomogram read off the pressure loss as a function of flow velocity (downstream from the reduction) and the  $d/D$  ratio.

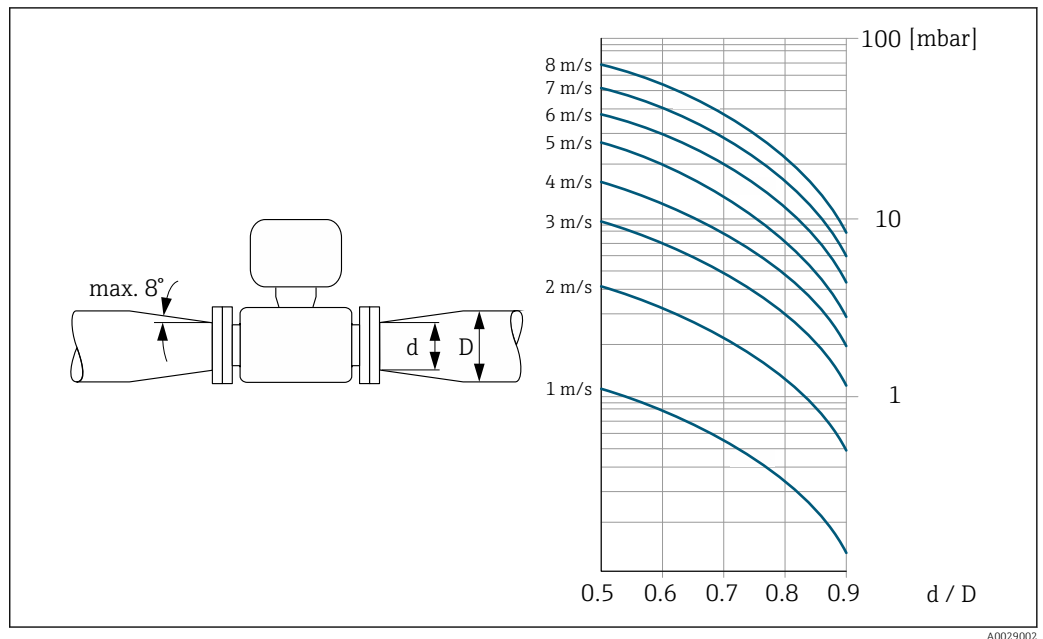

## 6.2 Mounting the measuring device

### 6.2.1 Required tools

#### For sensor

For flanges and other process connections: Corresponding mounting tools

### 6.2.2 Preparing the measuring device

1. Remove all remaining transport packaging.
2. Remove any protective covers or protective caps present from the sensor.
3. Remove stick-on label on the electronics compartment cover.


### 6.2.3 Mounting the sensor

#### **⚠ WARNING**

#### **Danger due to improper process sealing!**

- ▶ Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
  - ▶ Ensure that the gaskets are clean and undamaged.
  - ▶ Install the gaskets correctly.
1. Ensure that the direction of the arrow on the sensor matches the flow direction of the medium.
  2. To ensure compliance with device specifications, install the measuring device between the pipe flanges in a way that it is centered in the measurement section.
  3. If using ground disks, comply with the Installation Instructions provided.
  4. Observe required screw tightening torques → 24.

5. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

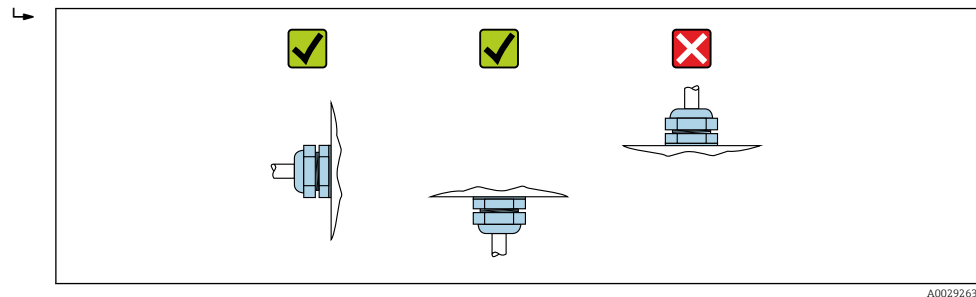

A0029263

### Mounting the seals

#### ⚠ CAUTION

**An electrically conductive layer could form on the inside of the measuring tube!**

Risk of measuring signal short circuit.

- Do not use electrically conductive sealing compounds such as graphite.

Comply with the following instructions when installing seals:

1. When mounting the process connections, make sure that the seals concerned are clean and centered correctly.
2. For DIN flanges: only use seals according to DIN EN 1514-1.
3. For "PFA" lining: generally additional seals are **not** required.
4. For "PTFE" lining: generally additional seals are **not** required.

### Mounting the ground cable/ground disks

Comply with the information on potential equalization and detailed mounting instructions for the use of ground cables/ground disks .

### Screw tightening torques

Please note the following:

- The screw tightening torques listed below apply only to lubricated threads and to pipes not subjected to tensile stress.
- Tighten the screws uniformly and in diagonally opposite sequence.
- Overtightening the screws will deform the sealing faces or damage the seals.

*Screw tightening torques for EN 1092-1 (DIN 2501), PN 10/16/25/40*

Nominal diameter [mm]	Pressure rating [bar]	Screws [mm]	Flange thickness [mm]	Max. screw tightening torque [Nm]	
				PTFE	PFA
15	PN 40	4 × M12	16	11	–
25	PN 40	4 × M12	18	26	20
32	PN 40	4 × M16	18	41	35
40	PN 40	4 × M16	18	52	47
50	PN 40	4 × M16	20	65	59
65 <sup>1)</sup>	PN 16	8 × M16	18	43	40
65	PN 40	8 × M16	22	43	40
80	PN 16	8 × M16	20	53	48
80	PN 40	8 × M16	24	53	48
100	PN 16	8 × M16	20	57	51



Nominal diameter [mm]	Pressure rating [bar]	Screws [mm]	Flange thickness [mm]	Max. screw tightening torque [Nm]	
				PTFE	PFA
100	PN 40	8 × M20	24	78	70
125	PN 16	8 × M16	22	75	67
125	PN 40	8 × M24	26	111	99
150	PN 16	8 × M20	22	99	85
150	PN 40	8 × M24	28	136	120
200	PN 10	8 × M20	24	141	101
200	PN 16	12 × M20	24	94	67
200	PN 25	12 × M24	30	138	105
250	PN 10	12 × M20	26	110	–
250	PN 16	12 × M24	26	131	–
250	PN 25	12 × M27	32	200	–
300	PN 10	12 × M20	26	125	–
300	PN 16	12 × M24	28	179	–
300	PN 25	16 × M27	34	204	–
350	PN 10	16 × M20	26	188	–
350	PN 16	16 × M24	30	254	–
350	PN 25	16 × M30	38	380	–
400	PN 10	16 × M24	26	260	–
400	PN 16	16 × M27	32	330	–
400	PN 25	16 × M33	40	488	–
450	PN 10	20 × M24	28	235	–
450	PN 16	20 × M27	40	300	–
450	PN 25	20 × M33	46	385	–
500	PN 10	20 × M24	28	265	–
500	PN 16	20 × M30	34	448	–
500	PN 25	20 × M33	48	533	–
600	PN 10	20 × M27	28	345	–
600 <sup>1)</sup>	PN 16	20 × M33	36	658	–
600	PN 25	20 × M36	58	731	–

1) Designed acc. to EN 1092-1 (not to DIN 2501)

*Screw tightening torques for EN 1092-1 (DIN 2501), PN 10/16/25, P245GH/stainless; calculated according to EN 1591-1:2014 for flanges as per EN 1092-1:2013*

Nominal diameter [mm]	Pressure rating [bar]	Screws [mm]	Flange thickness [mm]	Nom. screw tightening torque [Nm]
				PTFE
350	PN 10	16 × M20	26	60
350	PN 16	16 × M24	30	115
350	PN 25	16 × M30	38	220
400	PN 10	16 × M24	26	90
400	PN 16	16 × M27	32	155

Nominal diameter	Pressure rating	Screws	Flange thickness	Nom. screw tightening torque [Nm]
[mm]	[bar]	[mm]	[mm]	PTFE
400	PN 25	16 × M33	40	290
450	PN 10	20 × M24	28	90
450	PN 16	20 × M27	34	155
450	PN 25	20 × M33	46	290
500	PN 10	20 × M24	28	100
500	PN 16	20 × M30	36	205
500	PN 25	20 × M33	48	345
600	PN 10	20 × M27	30	150
600	PN 16	20 × M33	40	310
600	PN 25	20 × M36	48	500

*Screw tightening torques for ASME B16.5, Class 150/300*

Nominal diameter		Pressure rating	Screws	Max. screw tightening torque [Nm] ([lbf · ft])	
[mm]	[in]	[psi]	[in]	PTFE	PFA
15	½	Class 150	4 × ½	6 (4)	– (–)
15	½	Class 300	4 × ½	6 (4)	– (–)
25	1	Class 150	4 × ½	11 (8)	10 (7)
25	1	Class 300	4 × 5/8	14 (10)	12 (9)
40	1 ½	Class 150	4 × ½	24 (18)	21 (15)
40	1 ½	Class 300	4 × ¾	34 (25)	31 (23)
50	2	Class 150	4 × 5/8	47 (35)	44 (32)
50	2	Class 300	8 × 5/8	23 (17)	22 (16)
80	3	Class 150	4 × 5/8	79 (58)	67 (49)
80	3	Class 300	8 × ¾	47 (35)	42 (31)
100	4	Class 150	8 × 5/8	56 (41)	50 (37)
100	4	Class 300	8 × ¾	67 (49)	59 (44)
150	6	Class 150	8 × ¾	106 (78)	86 (63)
150	6	Class 300	12 × ¾	73 (54)	67 (49)
200	8	Class 150	8 × ¾	143 (105)	109 (80)
250	10	Class 150	12 × 7/8	135 (100)	– (–)
300	12	Class 150	12 × 7/8	178 (131)	– (–)
350	14	Class 150	12 × 1	260 (192)	– (–)
400	16	Class 150	16 × 1	246 (181)	– (–)
450	18	Class 150	16 × 1 1/8	371 (274)	– (–)
500	20	Class 150	20 × 1 1/8	341 (252)	– (–)
600	24	Class 150	20 × 1 ¼	477 (352)	– (–)

*Screw tightening torques for JIS B2220, 10/20K*

Nominal diameter [mm]	Pressure rating [bar]	Screws [mm]	Max. screw tightening torque [Nm]	
			PTFE	PFA
25	10K	4 × M16	32	27
25	20K	4 × M16	32	27
32	10K	4 × M16	38	–
32	20K	4 × M16	38	–
40	10K	4 × M16	41	37
40	20K	4 × M16	41	37
50	10K	4 × M16	54	46
50	20K	8 × M16	27	23
65	10K	4 × M16	74	63
65	20K	8 × M16	37	31
80	10K	8 × M16	38	32
80	20K	8 × M20	57	46
100	10K	8 × M16	47	38
100	20K	8 × M20	75	58
125	10K	8 × M20	80	66
125	20K	8 × M22	121	103
150	10K	8 × M20	99	81
150	20K	12 × M22	108	72
200	10K	12 × M20	82	54
200	20K	12 × M22	121	88
250	10K	12 × M22	133	–
250	20K	12 × M24	212	–
300	10K	16 × M22	99	–
300	20K	16 × M24	183	–

*Screw tightening torques for JIS B2220, 10/20K*

Nominal diameter [mm]	Pressure rating [bar]	Screws [mm]	Nom. screw tightening torque [Nm]	
			PUR	HG
350	10K	16 × M22	109	109
350	20K	16 × M30×3	217	217
400	10K	16 × M24	163	163
400	20K	16 × M30×3	258	258
450	10K	16 × M24	155	155
450	20K	16 × M30×3	272	272
500	10K	16 × M24	183	183
500	20K	16 × M30×3	315	315
600	10K	16 × M30	235	235
600	20K	16 × M36×3	381	381
700	10K	16 × M30	300	300
750	10K	16 × M30	339	339

Screw tightening torques for AS 2129, Table E

Nominal diameter [mm]	Screws [mm]	Max. screw tightening torque [Nm] PTFE
25	4 × M12	21
50	4 × M16	42


Screw tightening torques for AS 4087, PN 16

Nominal diameter [mm]	Screws [mm]	Max. screw tightening torque [Nm] PTFE
50	4 × M16	42

6.2.4 Turning the display module

The local display is only available with the following device version:  
Order code for "Display; Operation", option **B**: 4-line; lit, via communication  
The display module can be turned to optimize display readability.

Aluminum housing version, AlSi10Mg, coated

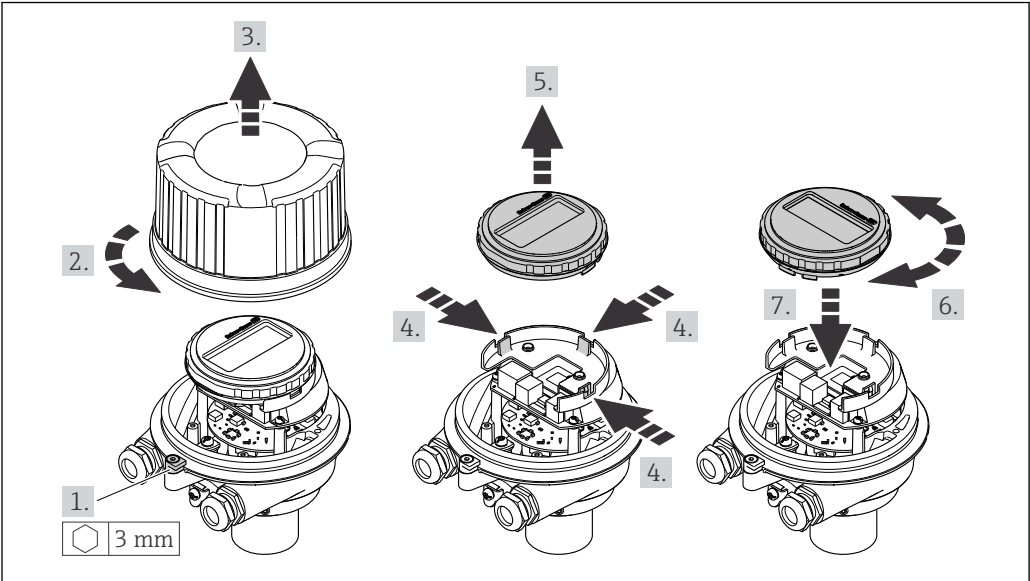

6.3 Post-installation check

Is the device undamaged (visual inspection)?	<input type="checkbox"/>
Does the measuring device conform to the measuring point specifications? For example: ■ Process temperature ■ Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document) ■ Ambient temperature ■ Measuring range	<input type="checkbox"/>

Has the correct orientation for the sensor been selected ? <ul style="list-style-type: none"><li>■ According to sensor type</li><li>■ According to medium temperature</li><li>■ According to medium properties (outgassing, with entrained solids)</li></ul>	<input type="checkbox"/>
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping ?	<input type="checkbox"/>
Are the measuring point identification and labeling correct (visual inspection)?	<input type="checkbox"/>
Is the device adequately protected from precipitation and direct sunlight?	<input type="checkbox"/>
Have the fixing screws been tightened with the correct tightening torque?	<input type="checkbox"/>

## 7 Electrical connection

### NOTICE

**The measuring device does not have an internal circuit breaker.**

- ▶ For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.
- ▶ Although the measuring device is equipped with a fuse, additional overcurrent protection (maximum 16 A) should be integrated into the system installation.

### 7.1 Connection conditions

#### 7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp (on aluminum housing): Allen screw 3 mm
- For securing screw (for stainless steel housing): open-ended wrench 8 mm
- Wire stripper
- When using stranded cables: crimper for wire end ferrule

#### 7.1.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

##### Electrical safety

In accordance with applicable federal/national regulations.

##### Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

##### Power supply cable

Standard installation cable is sufficient.

##### Signal cable

*EtherNet/IP*

The standard ANSI/TIA/EIA-568-B.2 Annex specifies CAT 5 as the minimum category for a cable used for EtherNet/IP. CAT 5e and CAT 6 are recommended.



For more information on planning and installing EtherNet/IP networks, please refer to the "Media Planning and Installation Manual. EtherNet/IP" of ODVA Organization

##### Cable diameter

- Cable glands supplied:  
M20 × 1.5 with cable  $\varnothing$  6 to 12 mm (0.24 to 0.47 in)
- Spring terminals:  
Wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)

7.1.3 Terminal assignment


Transmitter

EtherNet/IP connection version

Order code for "Output", option **N**

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

Order code "Housing"	Connection methods available		Possible options for order code "Electrical connection"
	Output	Power supply	
Option <b>A</b>	Device plugs → 31	Terminals	<ul style="list-style-type: none"><li>Option <b>L</b>: plug M12x1 + thread NPT ½"</li><li>Option <b>N</b>: plug M12x1 + coupling M20</li><li>Option <b>P</b>: plug M12x1 + thread G ½"</li><li>Option <b>U</b>: plug M12x1 + thread M20</li></ul>
Option <b>A</b>	Device plugs → 31	Device plugs → 31	Option <b>Q</b> : 2 x plug M12x1
Order code for "Housing": Option <b>A</b> : compact, coated aluminum			

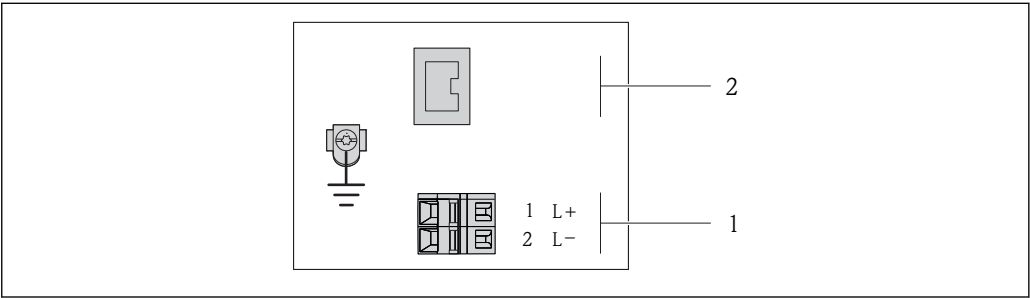

A0017054

8 EtherNet/IP terminal assignment


- 1 Power supply: DC 24 V
- 2 EtherNet/IP

Order code "Output"	Terminal number	
	Power supply 2 (L-)	Output 1 (L+) Device plug M12x1
Option <b>N</b>	DC 24 V	EtherNet/IP
Order code for "Output": Option <b>N</b> : EtherNet/IP		

7.1.4 Pin assignment, device plug

Supply voltage


Pin	Assignment	
	Pin	Assignment
1	L+	DC 24 V
2		Not assigned
3		Not assigned
4	L-	DC 24 V
5		Grounding/shielding

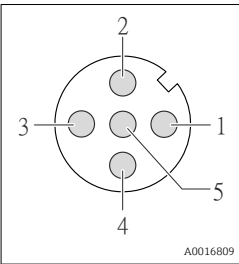

A0016809

	Coding	Plug/socket
	A	Plug

### Device plug for signal transmission (device side)

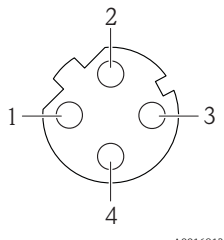	Pin	Assignment	
	1	+	Tx
	2	+	Rx
	3	-	Tx
	4	-	Rx
	Coding		Plug/socket
	D		Socket

## 7.1.5 Preparing the measuring device

### NOTICE

#### Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

- Use suitable cable glands corresponding to the degree of protection.

1. Remove dummy plug if present.
2. If the measuring device is supplied without cable glands:  
Provide suitable cable gland for corresponding connecting cable.
3. If the measuring device is supplied with cable glands:  
Observe requirements for connecting cables → 30.

## 7.2 Connecting the measuring device

### NOTICE

#### Limitation of electrical safety due to incorrect connection!


- Have electrical connection work carried out by appropriately trained specialists only.
- Observe applicable federal/national installation codes and regulations.
- Comply with local workplace safety regulations.
- Always connect the protective ground cable ⚡ before connecting additional cables.
- For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.
- The power unit must be tested to ensure it meets safety requirements (e.g. PELV, SELV).

### 7.2.1 Connecting the transmitter

The connection of the transmitter depends on the following order codes:

- Housing version: compact or ultra-compact
- Connection version: device plug or terminals




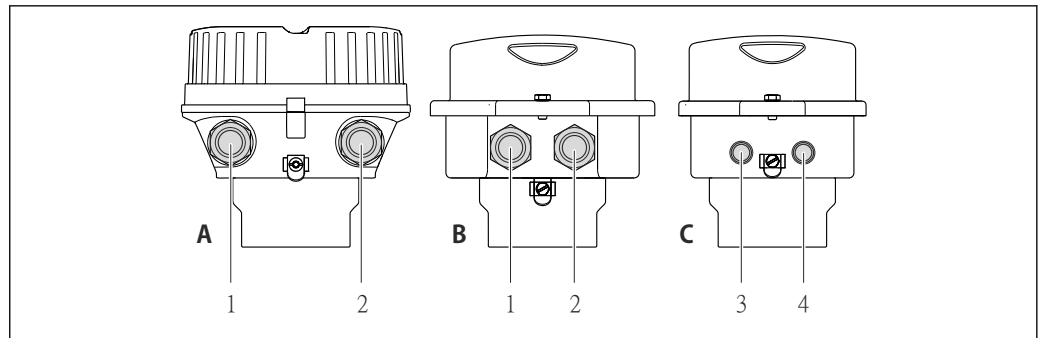

A0016924

9 Housing versions and connection versions

- A Compact, coated aluminum
- B Compact hygienic, stainless or compact, stainless
- 1 Cable entry or device plug for signal transmission
- 2 Cable entry or device plug for supply voltage
- C Ultra-compact hygienic, stainless or ultra-compact, stainless
- 3 Device plug for signal transmission
- 4 Device plug for supply voltage

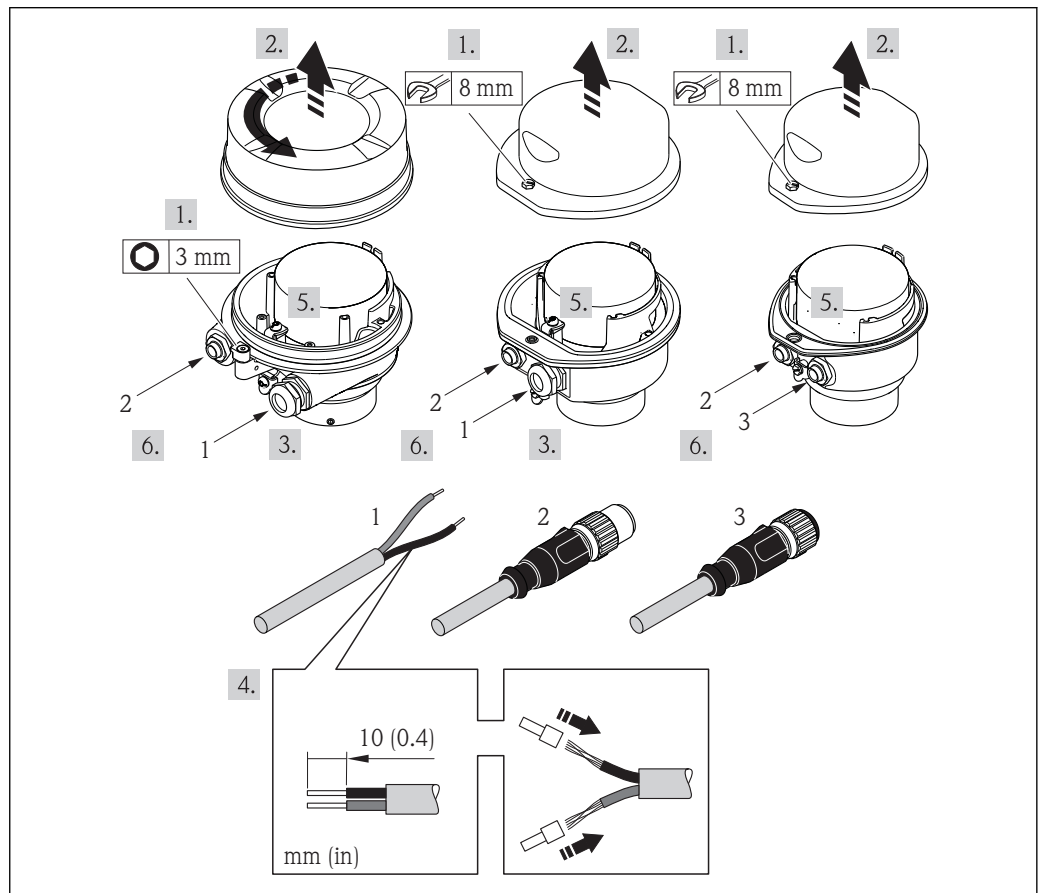

A0017844

10 Device versions with connection examples

- 1 Cable
- 2 Device plug for signal transmission
- 3 Device plug for supply voltage

**i** Depending on the housing version disconnect the local display from the main electronics module: Operating Instructions for the device .

- Connect the cable in accordance with the terminal assignment or the device plug pin assignment .


## 7.2.2 Ensure potential equalization

### Requirements

#### **⚠ CAUTION**


**Electrode damage can result in the complete failure of the device!**

- ▶ Same electrical potential for the medium and sensor
- ▶ Company-internal grounding concepts
- ▶ Pipe material and grounding


 For devices intended for use in hazardous locations, please observe the guidelines in the Ex documentation (XA).

### Connection example, standard scenario

*Metal, grounded pipe*

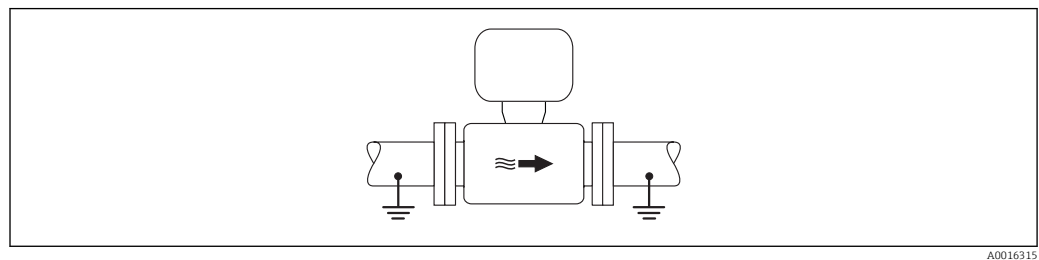

A0016315

 11 Potential equalization via measuring tube


### Connection example in special situations

*Unlined and ungrounded metal pipe*


This connection method also applies in situations where:

- The customary potential equalization is not used
- Equalizing currents are present

<b>Ground cable</b>	Copper wire, at least 6 mm <sup>2</sup> (0.0093 in <sup>2</sup> )
---------------------	---

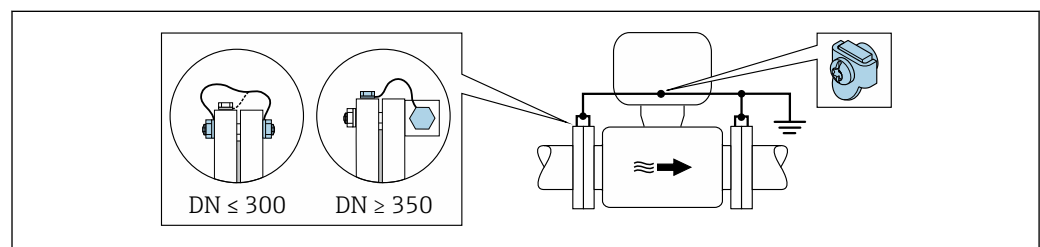

A0029338

 12 Potential equalization via ground terminal and pipe flanges


1. Connect both sensor flanges to the pipe flange via a ground cable and ground them.
2. If  $DN \leq 300$  (12"): Mount the ground cable directly on the conductive flange coating of the sensor with the flange screws.
3. If  $DN \geq 350$  (14"): Mount the ground cable directly on the metal transport bracket. Observe screw tightening torques: see the Sensor Brief Operating Instructions.
4. Connect the connection housing of the transmitter or sensor to ground potential by means of the ground terminal provided for the purpose.

*Plastic pipe or pipe with insulating liner*

This connection method also applies in situations where:

- The customary potential equalization is not used
- Equalizing currents are present

<b>Ground cable</b>	Copper wire, at least 6 mm <sup>2</sup> (0.0093 in <sup>2</sup> )
---------------------	---

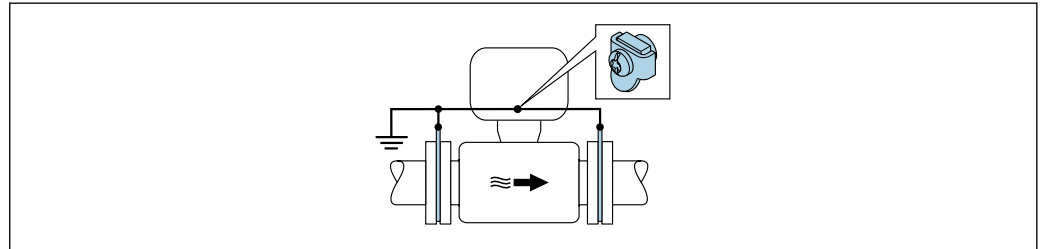

A0029339

13 Potential equalization via ground terminal and ground disks


1. Connect the ground disks to the ground terminal via the ground cable.
2. Connect the ground disks to ground potential.

*Pipe with a cathodic protection unit*

This connection method is only used if the following two conditions are met:

- Metal pipe without liner or pipe with electrically conductive liner
- Cathodic protection is integrated in the personal protection equipment

<b>Ground cable</b>	Copper wire, at least 6 mm <sup>2</sup> (0.0093 in <sup>2</sup> )
---------------------	---

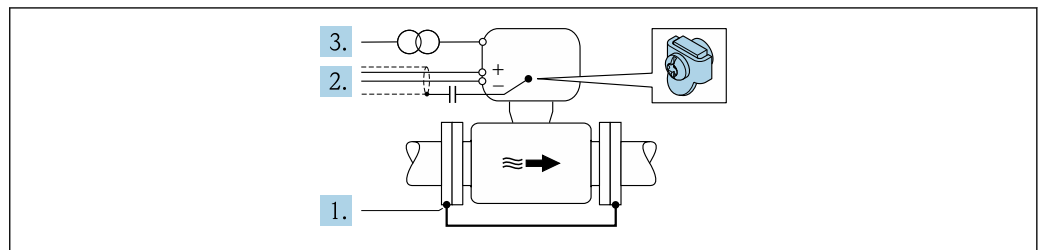

A0029340


Prerequisite: The sensor is installed in the pipe in a way that provides electrical insulation.

1. Connect the two flanges of the pipe to one another via a ground cable.
2. Guide the shield of the signal lines through a capacitor.
3. Connect the measuring device to the power supply such that it is floating in relation to the protective ground (isolation transformer).

### 7.3 Special connection instructions

#### 7.3.1 Connection examples

EtherNet/IP

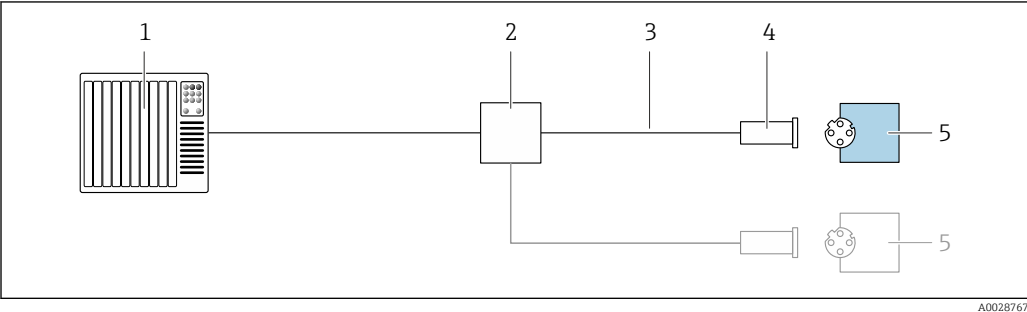

14 Connection example for EtherNet/IP

- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- 4 Device plug
- 5 Transmitter

### 7.4 Hardware settings

#### 7.4.1 Setting the device address


EtherNet/IP


The IP address of the measuring device can be configured for the network via DIP switches.

Addressing data

IP address and configuration options			
1st octet	2nd octet	3rd octet	4th octet
192.	168.	1.	XXX
↓		↓	
Can only be configured via software addressing		Can be configured via software addressing and hardware addressing	

IP address range	1 to 254 (4th octet)
IP address broadcast	255
Addressing mode ex works	Software addressing; all DIP switches for hardware addressing are set to OFF.
IP address ex works	DHCP server active

 For device addressing via software

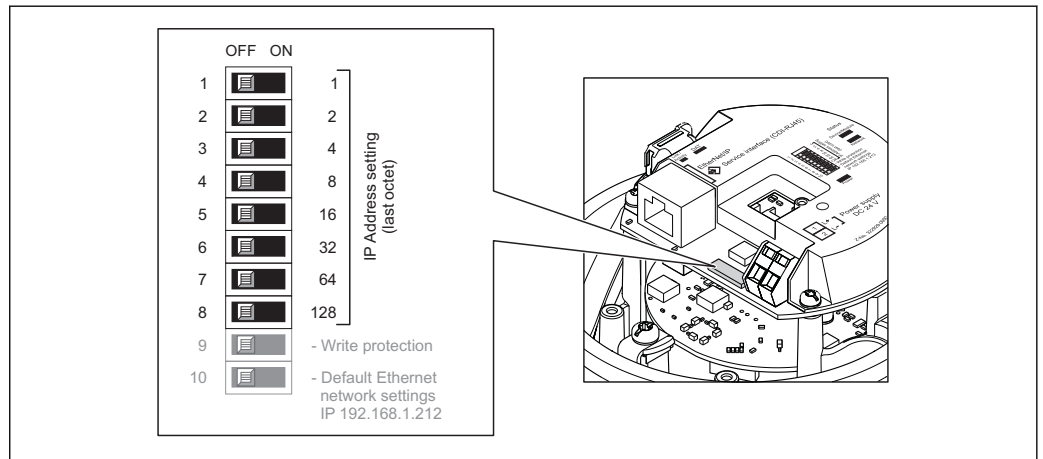*Setting the address*

A0017913


1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary → 119.
3. Set the desired IP address using the corresponding DIP switches on the I/O electronics module.
  - ↳ Hardware addressing with the configured IP address is enabled after 10 s.
4. Reverse the removal procedure to reassemble the transmitter.

## 7.5 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:


 
 

 
 
1. Check that the housing seals are clean and fitted correctly.
2. Dry, clean or replace the seals if necessary.
3. Tighten all housing screws and screw covers.
4. Firmly tighten the cable glands.
5. To ensure that moisture does not enter the cable entry:  
Route the cable so that it loops down before the cable entry ("water trap").

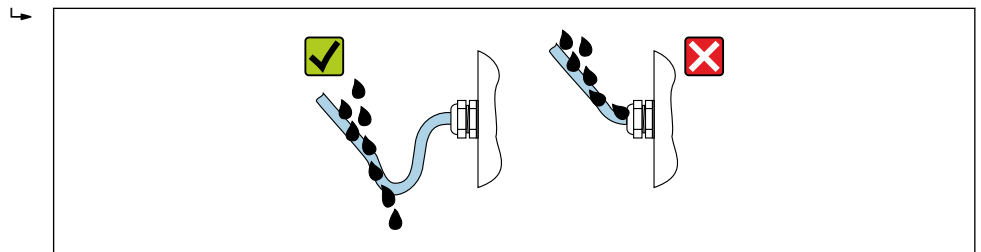

A0029278


6. Insert dummy plugs into unused cable entries.

## 7.6 Post-connection check

Are cables or the device undamaged (visual inspection)?	<input type="checkbox"/>
Do the cables used meet the requirements →  30?	<input type="checkbox"/>
Do the cables have adequate strain relief?	<input type="checkbox"/>
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" →  37 ?	<input type="checkbox"/>
Depending on the device version: are all the device plugs firmly tightened ?	<input type="checkbox"/>
Does the supply voltage match the specifications on the transmitter nameplate →  109?	<input type="checkbox"/>
Is the terminal assignment →  31 or pin assignment of the connector →  31 correct?	<input type="checkbox"/>
If supply voltage is present, is the power LED on the electronics module of the transmitter lit green →  12?	<input type="checkbox"/>
Is the potential equalization established correctly ?	<input type="checkbox"/>
Depending on the device version, is the securing clamp or fixing screw firmly tightened?	<input type="checkbox"/>

## 8 Operation options

### 8.1 Overview of operating options

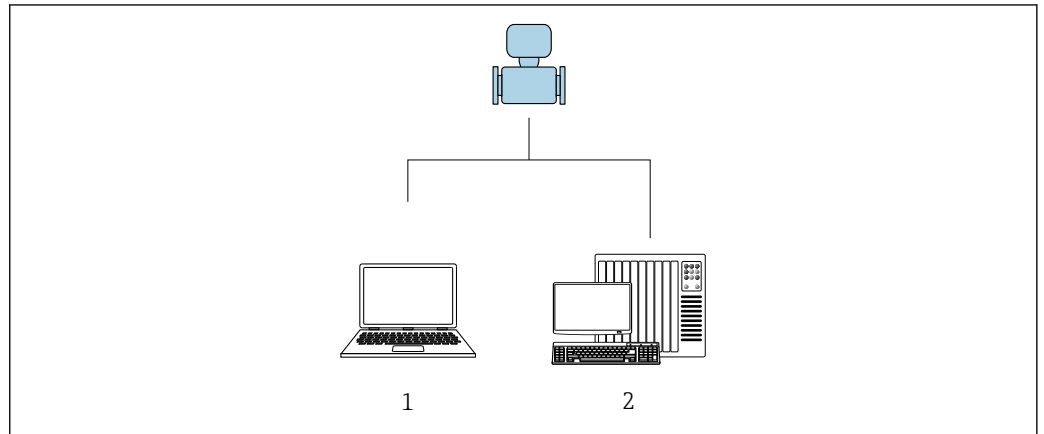


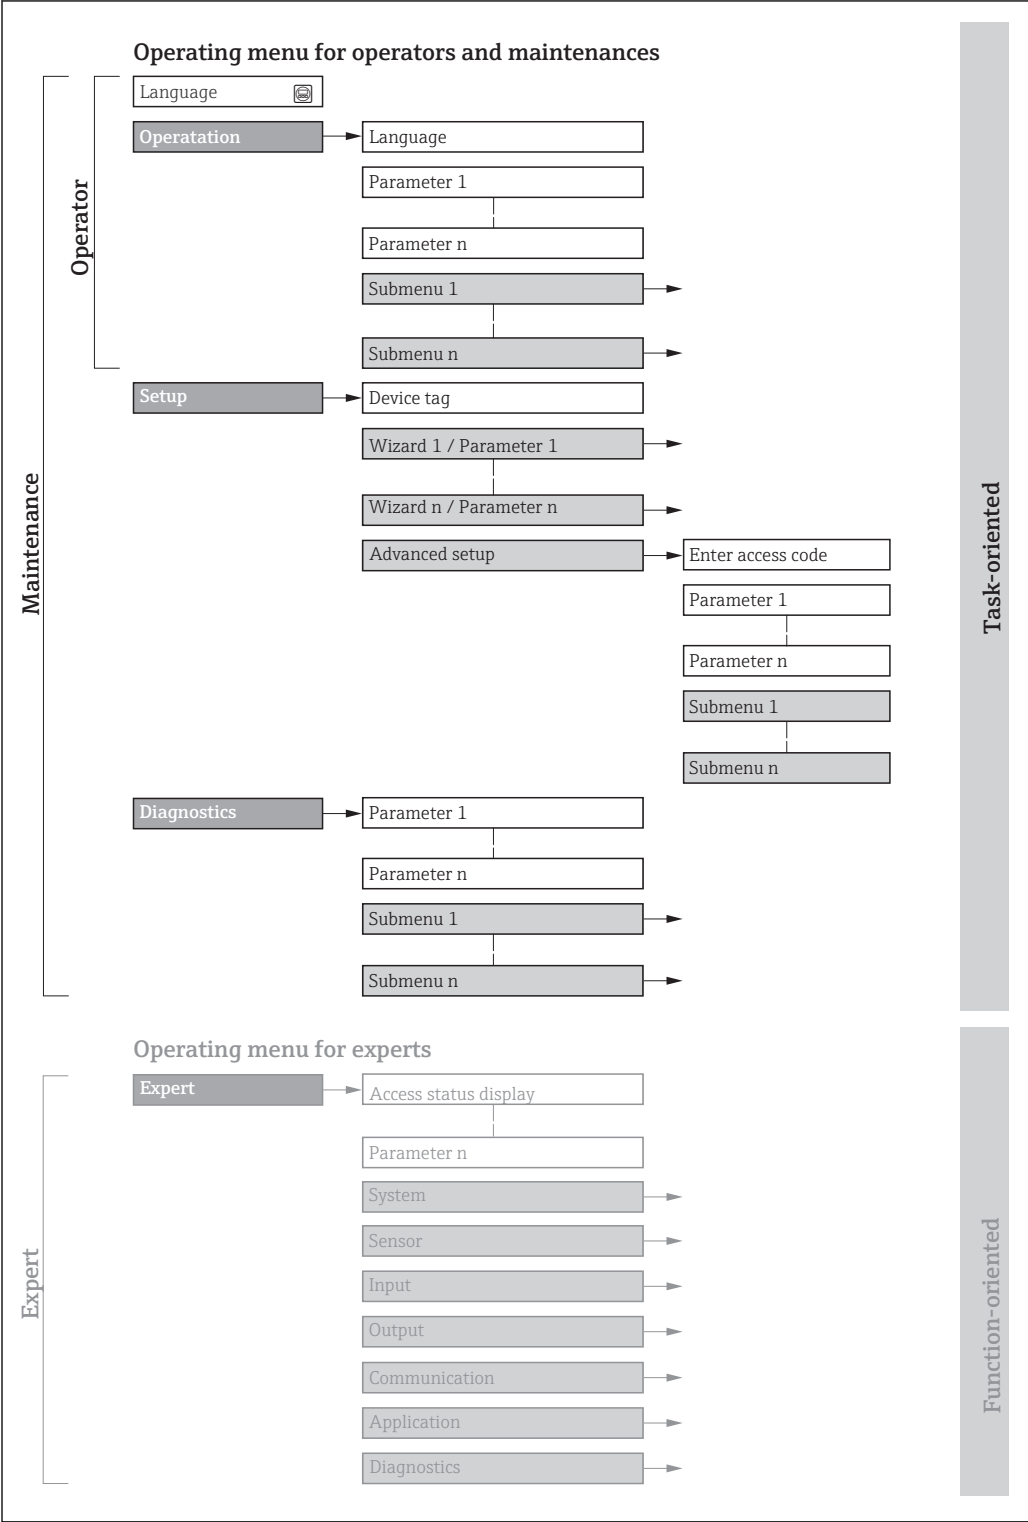
A0017760


- 1 Computer with Web browser (e.g. Internet Explorer) or with "FieldCare" operating tool
- 2 Automation system, e.g. "RSLogix" (Rockwell Automation) and work station for measuring device operation with Add-on Profile Level 3 for "RSLogix 5000" software (Rockwell Automation)

## 8.2 Structure and function of the operating menu

### 8.2.1 Structure of the operating menu

 For an overview of the operating menu for experts: "Description of Device Parameters" document supplied with the device



 15 Schematic structure of the operating menu

A0018237-EN



## 8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

Menu/parameter		User role and tasks	Content/meaning
Language	task-oriented	<b>Role "Operator", "Maintenance"</b> Tasks during operation: <ul style="list-style-type: none"> <li>■ Configuring the operational display</li> <li>■ Reading measured values</li> </ul>	<ul style="list-style-type: none"> <li>■ Defining the operating language</li> <li>■ Defining the Web server operating language</li> <li>■ Resetting and controlling totalizers</li> </ul>
Operation			<ul style="list-style-type: none"> <li>■ Configuring the operational display (e.g. display format, display contrast)</li> <li>■ Resetting and controlling totalizers</li> </ul>
Setup		<b>"Maintenance" role</b> Commissioning: <ul style="list-style-type: none"> <li>■ Configuration of the measurement</li> <li>■ Configuration of the communication interface</li> </ul>	Submenus for fast commissioning: <ul style="list-style-type: none"> <li>■ Set the system units</li> <li>■ Configuration of the digital communication interface</li> <li>■ Configuring the operational display</li> <li>■ Set the low flow cut off</li> <li>■ Empty pipe detection</li> </ul> Advanced setup <ul style="list-style-type: none"> <li>■ For more customized configuration of the measurement (adaptation to special measuring conditions)</li> <li>■ Configuration of totalizers</li> <li>■ Configuration of electrode cleaning (optional)</li> <li>■ Configure the WLAN settings</li> <li>■ Administration (define access code, reset measuring device)</li> </ul>
Diagnostics		<b>"Maintenance" role</b> Fault elimination: <ul style="list-style-type: none"> <li>■ Diagnostics and elimination of process and device errors</li> <li>■ Measured value simulation</li> </ul>	Contains all parameters for error detection and analyzing process and device errors: <ul style="list-style-type: none"> <li>■ Diagnostic list Contains up to 5 currently pending diagnostic messages.</li> <li>■ Event logbook Contains event messages that have occurred.</li> <li>■ Device information Contains information for identifying the device.</li> <li>■ Measured values Contains all current measured values.</li> <li>■ Heartbeat The functionality of the device is checked on demand and the verification results are documented.</li> <li>■ Simulation Is used to simulate measured values or output values.</li> </ul>
Expert	function-oriented	Tasks that require detailed knowledge of the function of the device: <ul style="list-style-type: none"> <li>■ Commissioning measurements under difficult conditions</li> <li>■ Optimal adaptation of the measurement to difficult conditions</li> <li>■ Detailed configuration of the communication interface</li> <li>■ Error diagnostics in difficult cases</li> </ul>	Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: <ul style="list-style-type: none"> <li>■ System Contains all higher-order device parameters which do not concern the measurement or the communication interface.</li> <li>■ Sensor Configuration of the measurement.</li> <li>■ Communication Configuration of the digital communication interface and the Web server.</li> <li>■ Application Configure the functions that go beyond the actual measurement (e.g. totalizer).</li> <li>■ Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.</li> </ul>

## 8.3 Access to the operating menu via the web browser

### 8.3.1 Function range

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) . In addition to the measured values, status

information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.



For additional information on the Web server, refer to the Special Documentation for the device → 124

### 8.3.2 Prerequisites

#### Computer hardware

Interface	The computer must have an RJ45 interface.
Connection	Standard Ethernet cable with RJ45 connector.
Screen	Recommended size: ≥12" (depends on the screen resolution)

#### Computer software

Recommended operating systems	Microsoft Windows 7 or higher. Microsoft Windows XP is supported.
Web browsers supported	<ul style="list-style-type: none"> <li>▪ Microsoft Internet Explorer 8 or higher</li> <li>▪ Microsoft Edge</li> <li>▪ Mozilla Firefox</li> <li>▪ Google Chrome</li> <li>▪ Safari</li> </ul>

#### Computer settings


User rights	Appropriate user rights (e.g. administrator rights) for TCP/IP and proxy server settings are necessary (for adjusting the IP address, subnet mask etc.).
Proxy server settings of the Web browser	The Web browser setting <i>Use a Proxy Server for Your LAN</i> must be <b>deselected</b> .
JavaScript	JavaScript must be enabled. If JavaScript cannot be enabled: enter <code>http://XXX.XXX.X.XXX/basic.html</code> in the address line of the Web browser, e.g. <code>http://192.168.1.212/basic.html</code> . A fully functional but simplified version of the operating menu structure starts in the Web browser.
Network connections	Only the active network connections to the measuring device should be used. Switch off all other network connections such as WLAN.



In the event of connection problems: → 78

#### Measuring device: Via CDI-RJ45 service interface

Device	CDI-RJ45 service interface
Measuring device	The measuring device has an RJ45 interface.
Web server	Web server must be enabled; factory setting: ON For information on enabling the Web server → 46
IP address	If the IP address of the device is not known, communication with the Web server can be established via the default IP address 192.168.1.212. The DHCP function is enabled in the device at the factory, i.e. the device expects an IP address to be assigned by the network. This function can be disabled and the device can be set to the default IP address 192.168.1.212: set DIP switch No. 10 from <b>OFF</b> → <b>ON</b> .

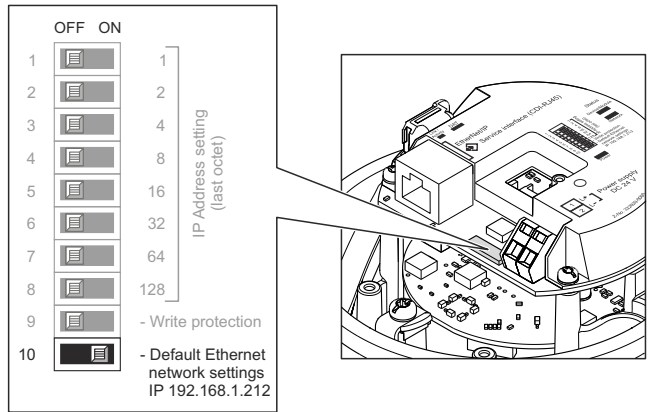Device	CDI-RJ45 service interface
	 <p>A0017965</p> <p><b>i</b> ■ Once the DIP switch has been activated, the device must be restarted before the device uses the default IP address.</p> <p>■ If the default IP address is used (DIP switch No. 10 = ON), there is no connection to the EtherNet/IP network.</p>


### 8.3.3 Establishing a connection

#### Via service interface (CDI-RJ45)

##### *Preparing the measuring device*


##### *Configuring the Internet protocol of the computer*

The IP address can be assigned to the measuring device in a variety of ways:

- **Dynamic Host Configuration Protocol (DHCP), factory setting:**  
The IP address is automatically assigned to the measuring device by the automation system (DHCP server).
- **Hardware addressing:**  
The IP address is set via DIP switches .
- **Software addressing:**  
The IP address is entered via the **IP address** parameter (→  60) .
- **DIP switch for "Default IP address":**  
To establish the network connection via the service interface (CDI-RJ45): the fixed IP address 192.168.1.212 is used .

The measuring device works with the Dynamic Host Configuration Protocol (DHCP), on leaving the factory, i.e. the IP address of the measuring device is automatically assigned by the automation system (DHCP server).


To establish a network connection via the service interface (CDI-RJ45): the "Default IP address" DIP switch must be set to **ON**. The measuring device then has the fixed IP address: 192.168.1.212. This address can now be used to establish the network connection.

1. Via DIP switch 2, activate the default IP address 192.168.1.212: .
2. Switch on the measuring device.
3. Connect to the computer using a cable →  120.
4. If a 2nd network card is not used, close all the applications on the notebook.
  - ↳ Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.
5. Close any open Internet browsers.
6. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

IP address	192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 → e.g. 192.168.1.213
Subnet mask	255.255.255.0
Default gateway	192.168.1.212 or leave cells empty

Starting the Web browser

1.
2.
- ↳
- The login page appears.

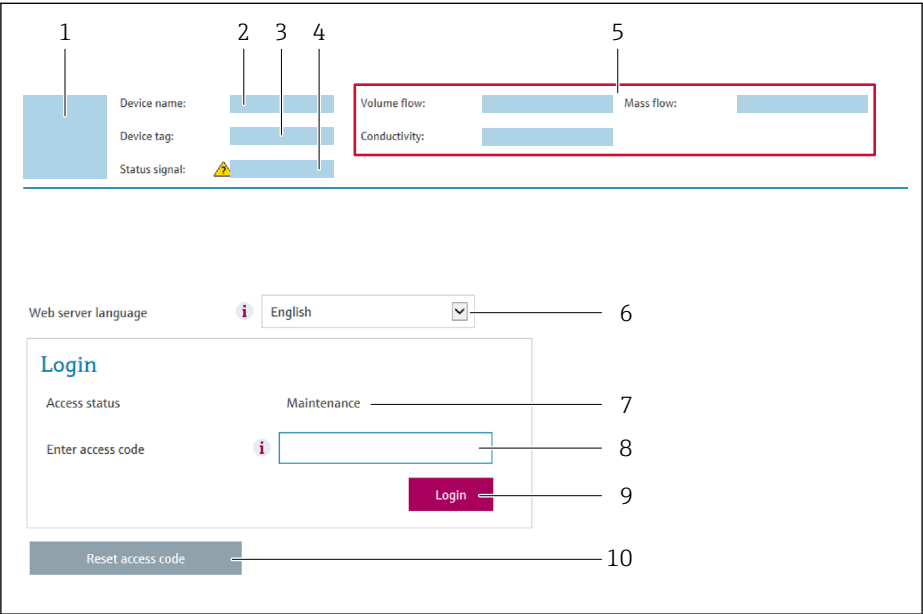

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10
- Picture of device
- Device name
- Device tag
- Status signal
- Current measured values
- Operating language
- User role
- Access code
- Login
- Reset access code

If a login page does not appear, or if the page is incomplete → 78


8.3.4 Logging on

1.
2.
3.
- Select the preferred operating language for the Web browser.
- Enter the user-specific access code.
- Press **OK** to confirm your entry.

Access code	0000 (factory setting); can be changed by customer
-------------	--

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

### 8.3.5 User interface

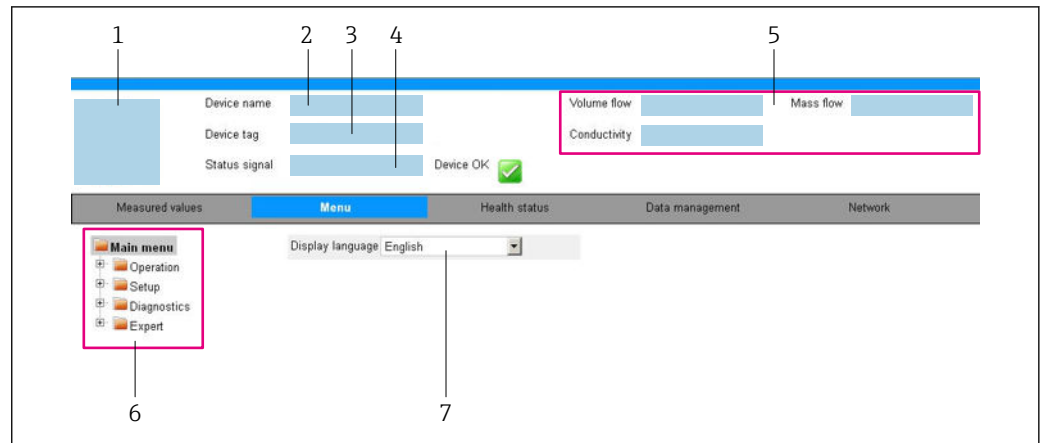

A0032879

- 1 Picture of device
- 2 Device name
- 3 Device tag
- 4 Status signal
- 5 Current measured values
- 6 Navigation area
- 7 Local display language

#### Header

The following information appears in the header:

- Device tag
- Device status with status signal → 81
- Current measured values

#### Function row

Functions	Meaning
Measured values	Displays the measured values of the measuring device
Menu	<ul style="list-style-type: none"> <li>■ Access to the operating menu from the measuring device</li> <li>■ The structure of the operating menu is the same as for the operating tools</li> </ul> For detailed information on the structure of the operating menu, see the Operating Instructions for the measuring device
Device status	Displays the diagnostic messages currently pending, listed in order of priority
Data management	Data exchange between PC and measuring device: <ul style="list-style-type: none"> <li>■ Device configuration:               <ul style="list-style-type: none"> <li>– Load settings from the device (XML format, save configuration)</li> <li>– Save settings to the device (XML format, restore configuration)</li> </ul> </li> <li>■ Logbook - Export Event logbook (.csv file)</li> <li>■ Documents - Export documents:               <ul style="list-style-type: none"> <li>– Export backup data record (.csv file, create documentation of the measuring point configuration)</li> <li>– Verification report (PDF file, only available with the "Heartbeat Verification" application package)</li> </ul> </li> <li>■ File for system integration - If using fieldbuses, upload device drivers for system integration from the measuring device: EtherNet/IP: EDS file</li> </ul>
Network configuration	Configuration and checking of all the parameters required for establishing the connection to the measuring device: <ul style="list-style-type: none"> <li>■ Network settings (e.g. IP address, MAC address)</li> <li>■ Device information (e.g. serial number, firmware version)</li> </ul>
Logout	End the operation and call up the login page

### Navigation area

If a function is selected in the function bar, the submenus of the function open in the navigation area. The user can now navigate through the menu structure.

### Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

## 8.3.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

### Navigation

"Expert" menu → Communication → Web server

### Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Web server functionality	Switch the Web server on and off.	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul>	On

### Function scope of the "Web server functionality" parameter


Option	Description
Off	<ul style="list-style-type: none"> <li>■ The web server is completely disabled.</li> <li>■ Port 80 is locked.</li> </ul>
On	<ul style="list-style-type: none"> <li>■ The complete functionality of the web server is available.</li> <li>■ JavaScript is used.</li> <li>■ The password is transferred in an encrypted state.</li> <li>■ Any change to the password is also transferred in an encrypted state.</li> </ul>

### Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool

## 8.3.7 Logging out

 Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.

1. Select the **Logout** entry in the function row.  
↳ The home page with the Login box appears.
2. Close the Web browser.

3. If no longer needed:

Reset modified properties of the Internet protocol (TCP/IP) → 43.



If communication with the Web server was established via the default IP address 192.168.1.212, DIP switch No. 10 must be reset (from **ON** → **OFF**). Afterwards, the IP address of the device is active again for network communication.


## 8.4 Access to the operating menu via the operating tool

### 8.4.1 Connecting the operating tool

#### Via EtherNet/IP network


This communication interface is available in device versions with EtherNet/IP.

*Star topology*

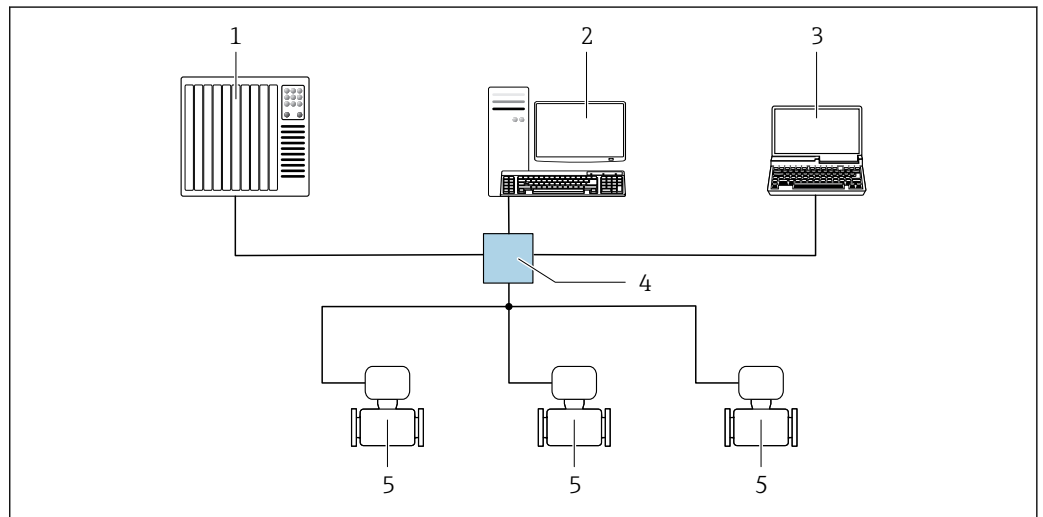


16 Options for remote operation via EtherNet/IP network: star topology

- 1 Automation system, e.g. "RSLogix" (Rockwell Automation)
- 2 Workstation for measuring device operation: with Custom Add-On Profile for "RSLogix 5000" (Rockwell Automation) or with Electronic Data Sheet (EDS)
- 3 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP"
- 4 Ethernet switch
- 5 Measuring device

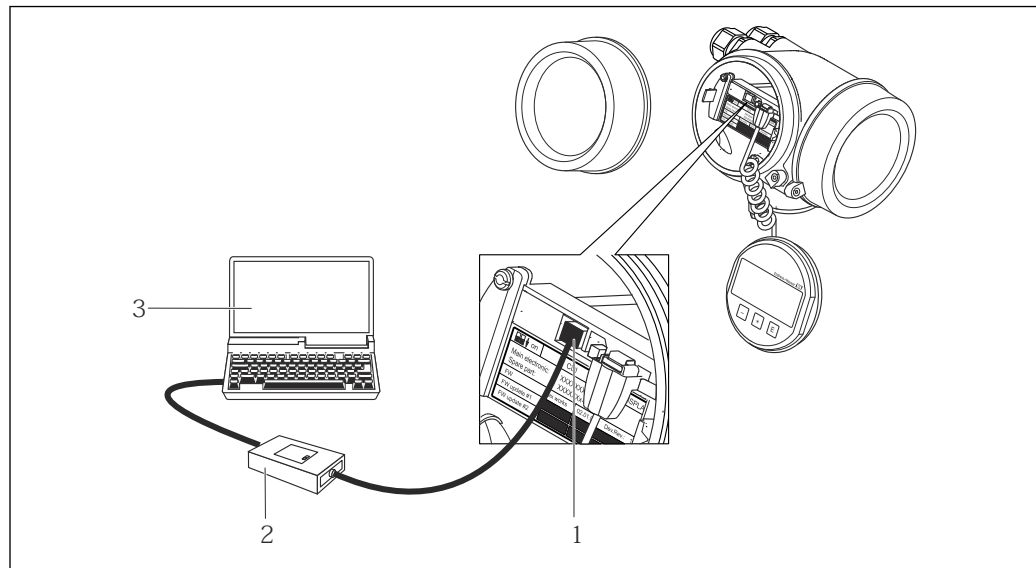**Via service interface (CDI)**

A0014019

- 1 Service interface (CDI = Endress+Hauser Common Data Interface) of the measuring device
- 2 Commubox FXA291
- 3 Computer with FieldCare operating tool with COM DTM CDI Communication FXA291

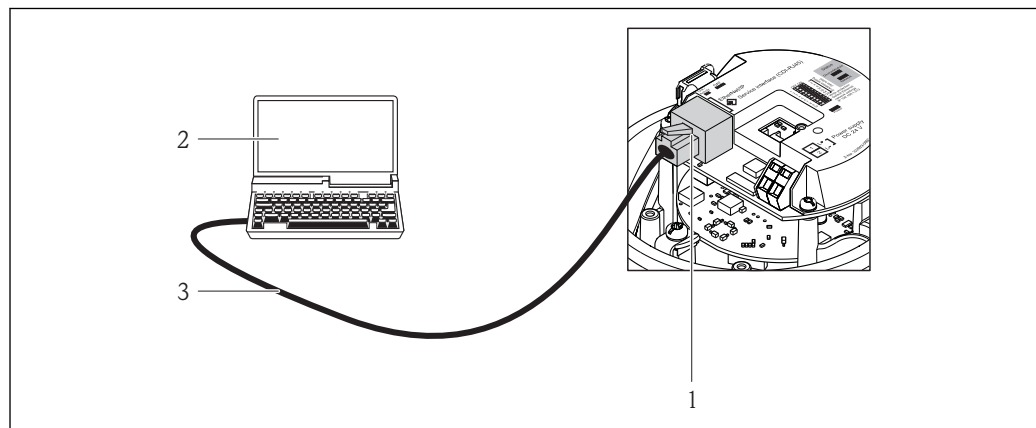**Via service interface (CDI-RJ45)***EtherNet/IP*

A0016940

17 Connection for order code for "Output", option N: EtherNet/IP

- 1 Service interface (CDI -RJ45) and EtherNet/IP interface of the measuring device with access to the integrated Web server
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

**8.4.2 FieldCare****Function scope**

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

CDI-RJ45 service interface




Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook




For additional information about FieldCare, see Operating Instructions BA00027S and BA00059S

### Source for device description files

See information →  51


### Establishing a connection

1. Start FieldCare and launch the project.
2. In the network: Add a device.
  - ↳ The **Add device** window opens.
3. Select the **CDI Communication TCP/IP** option from the list and press **OK** to confirm.
4. Right-click **CDI Communication TCP/IP** and select the **Add device** option in the context menu that opens.
5. Select the desired device from the list and press **OK** to confirm.
  - ↳ The **CDI Communication TCP/IP (Configuration)** window opens.
6. Enter the device address in the **IP address** field and press **Enter** to confirm: 192.168.1.212 (factory setting); if the IP address is not known →  73.
7. Establish the online connection to the device.



For additional information, see Operating Instructions BA00027S and BA00059S

## User interface

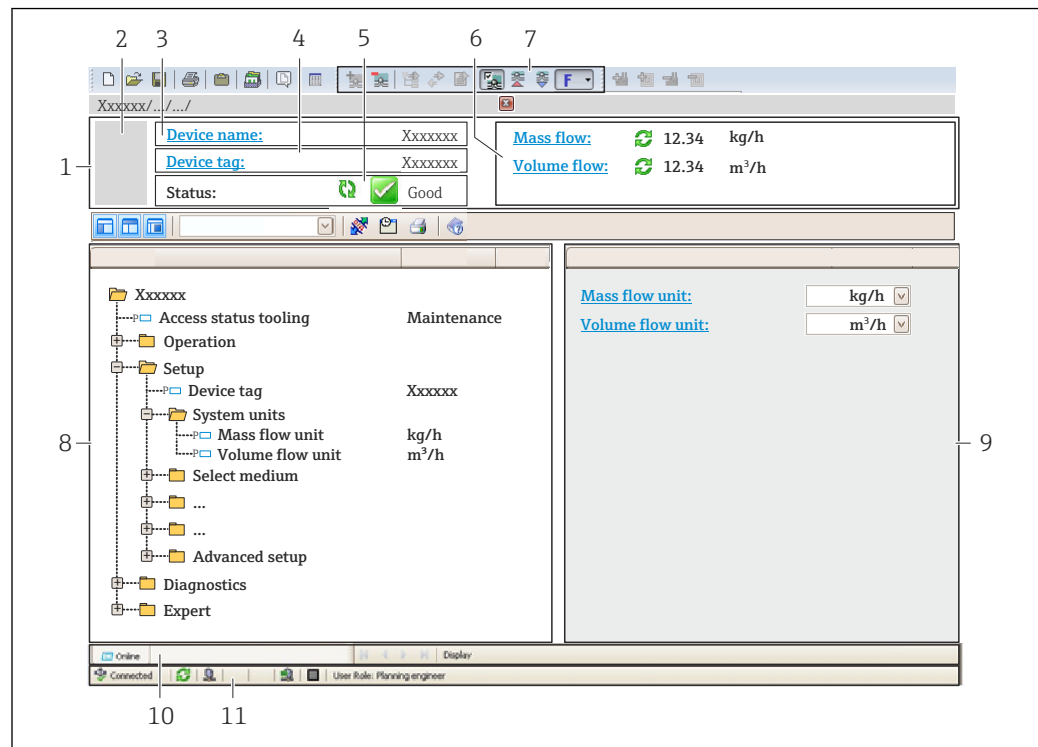

A0021051-EN

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Tag name
- 5 Status area with status signal → 81
- 6 Display area for current measured values
- 7 Edit toolbar with additional functions such as save/restore, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

### 8.4.3 DeviceCare

#### Function scope

Tool to connect and configure Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.



For details, see Innovation Brochure IN01047S

#### Source for device description files

See information → 51

## 9 System integration

### 9.1 Overview of device description files

#### 9.1.1 Current version data for the device

Firmware version	01.01.zz	<ul style="list-style-type: none"> <li>On the title page of the Operating instructions</li> <li>On the transmitter nameplate</li> <li>Firmware version Diagnostics → Device information → Firmware version</li> </ul>
Release date of firmware version	10.2014	---
Manufacturer ID	0x49E	Manufacturer ID Diagnostics → Device information → Manufacturer ID
Device type ID	0x103A	Device type Diagnostics → Device information → Device type
Device revision	<ul style="list-style-type: none"> <li>Major revision 2</li> <li>Minor revision 1</li> </ul>	<ul style="list-style-type: none"> <li>On the transmitter nameplate</li> <li>Device revision Diagnostics → Device information → Device revision</li> </ul>
Device profile	Generic device (product type: 0x2B)	



For an overview of the different firmware versions for the device

#### 9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via Service interface (CDI)	Sources for obtaining device descriptions
FieldCare	<ul style="list-style-type: none"> <li><a href="http://www.endress.com">www.endress.com</a> → Download Area</li> <li>CD-ROM (contact Endress+Hauser)</li> <li>DVD (contact Endress+Hauser)</li> </ul>
DeviceCare	<ul style="list-style-type: none"> <li><a href="http://www.endress.com">www.endress.com</a> → Download Area</li> <li>CD-ROM (contact Endress+Hauser)</li> <li>DVD (contact Endress+Hauser)</li> </ul>

### 9.2 Overview of system files

System files	Version	Description	How to acquire
Electronic Data Sheet (EDS system file)	2.1	Certified in accordance with the following ODVA guidelines: <ul style="list-style-type: none"> <li>Conformance test</li> <li>Performance test</li> <li>PlugFest</li> </ul> Embedded EDS Support (File Object 0x37)	<ul style="list-style-type: none"> <li><a href="http://www.endress.com">www.endress.com</a> → Download Area</li> <li>EDS system file integrated in the device: can be downloaded via the Web browser</li> </ul>
Add-on Profile Level 3	<ul style="list-style-type: none"> <li>Major revision 2</li> <li>Minor revision 1</li> </ul>	System file for "RSLogix 5000" software (Rockwell Automation)	<a href="http://www.endress.com">www.endress.com</a> → Download Area

## 9.3 Integrating the measuring device in the system



A detailed description of how to integrate the device into an automation system (e.g. from Rockwell Automation) is available as a separate document: [www.endress.com](http://www.endress.com) → Select country → Automation → Digital Communication → Feldbus device integration → EtherNet/IP



For information on the protocol-specific data of EtherNet/IP

## 9.4 Cyclic data transmission

Cyclic data transmission when using the device master file (GSD).

### 9.4.1 Block model

The block model shows which input and output data the measuring device makes available for implicit messaging. Cyclical data exchange is performed using an EtherNet/IP scanner, e.g. a distributed control system etc.

Measuring device				Control system
Transducer Block	Input Assembly Fix (Assem100) 44 Byte	→  53	Permanently assigned input group	→
	Output Assembly Fix (Assem102) 64 Byte	→  54	Permanently assigned output group	←
	Input Assembly Fix (Assem101) 88 Byte	→  54	Configurable input group	→
				EtherNet/IP

### 9.4.2 Input and output groups

#### Possible configurations

##### Configuration 1: Exclusive Owner Multicast

Input Assembly Fix		Instance	Size [byte]	Min. RPI (ms)
Input Assembly Configurable	Configuration	0 x 64	398	–
Output Assembly Fix	O → T Configuration	0 x 66	64	5
Input Assembly Fix	T → O Configuration	0 x 64	44	5

##### Configuration 2: Input Only Multicast

Input Assembly Fix		Instance	Size [byte]	Min. RPI (ms)
Input Assembly Configurable	Configuration	0 x 68	398	–
Output Assembly Fix	O → T Configuration	0 x C7	–	–
Input Assembly Fix	T → O Configuration	0 x 64	44	5

##### Configuration 3: Exclusive Owner Multicast

Input Assembly Configurable		Instance	Size [byte]	Min. RPI (ms)
Input Assembly Configurable	Configuration	0 x 68	398	–
Output Assembly Fix	O → T Configuration	0 x 66	64	5
Input Assembly Fix	T → O Configuration	0 x 65	88	5

*Configuration 4: Input Only Multicast*

Input Assembly Configurable		Instance	Size [byte]	Min. RPI (ms)
Input Assembly Configurable	Configuration	0 x 68	398	–
Output Assembly Fix	O → T Configuration	0 x C7	–	–
Input Assembly Fix	T → O Configuration	0 x 64	88	5

*Configuration 5: Exclusive Owner Multicast*

Input Assembly Fix		Instance	Size [byte]	Min. RPI (ms)
Input Assembly Configurable	Configuration	0 x 69	–	–
Output Assembly Fix	O → T Configuration	0 x 66	64	5
Input Assembly Fix	T → O Configuration	0 x 64	44	5

*Configuration 6: Input Only Multicast*

Input Assembly Fix		Instance	Size [byte]	Min. RPI (ms)
Input Assembly Configurable	Configuration	0 x 69	–	–
Output Assembly Fix	O → T Configuration	0 x C7	–	–
Input Assembly Fix	T → O Configuration	0 x 65	44	5

*Configuration 7: Exclusive Owner Multicast*

Input Assembly Configurable		Instance	Size [byte]	Min. RPI (ms)
Input Assembly Configurable	Configuration	0 x 69	–	–
Output Assembly Fix	O → T Configuration	0 x 66	64	5
Input Assembly Fix	T → O Configuration	0 x 64	88	5

*Configuration 8: Input Only Multicast*

Input Assembly Configurable		Instance	Size [byte]	Min. RPI (ms)
Input Assembly Configurable	Configuration	0 x 69	–	–
Output Assembly Fix	O → T Configuration	0 x C7	–	–
Input Assembly Fix	T → O Configuration	0 x 65	88	5

**Permanently assigned input group**

Input Assembly Fix (Assem100) 44 Byte

Designation	Description	Byte
Input Assembly Fix	1. File header (not visible)	1...4
	2. Current diagnosis <sup>1)</sup>	5...8
	3. Mass flow	9...12
	4. Volume flow	13...16
	5. Corrected volume flow	17...20
	6. Temperature	21...24
	7. Density	25...28
	8. Reference density	29...32
	9. Totalizer 1	33...36

Designation	Description	Byte
	10. Totalizer 2	37...40
	11. Totalizer 3	41...44

1) Structure: Code, number, description (e.g.: 16777265 F882 input signal)



Detailed description:

- Diagnostic information (Verweisziel existiert nicht, aber @y.link.required='true')
- Information events → 94

### Configurable input group

Input Assembly Configurable (Assem101) 88 byte

Designation	Description	Format
Input Assembly Configurable	1. - 10. Input values 1 to 10	Real
	11. - 20. Input values 11 to 20	Double integer

#### Possible input values

Possible input values 1 to 10:		
<ul style="list-style-type: none"> <li>Off</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Target mass flow <sup>1)</sup></li> <li>Carrier mass flow <sup>1)</sup></li> <li>Density</li> <li>Reference density</li> <li>Concentration <sup>1)</sup></li> </ul>	<ul style="list-style-type: none"> <li>Temperature</li> <li>Electronic temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation amplitude 0</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal shift</li> </ul>	<ul style="list-style-type: none"> <li>Tube damping fluctuation 0</li> <li>Exciter current 0</li> <li>Monitoring of exciter current 0</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul>

1) Only available with the Concentration application package

Possible input values 11 to 20:		
<ul style="list-style-type: none"> <li>Off</li> <li>Current diagnosis</li> <li>Previous diagnosis</li> <li>Mass flow unit</li> <li>Volume flow unit</li> <li>Corrected volume flow unit</li> </ul>	<ul style="list-style-type: none"> <li>Temperature unit</li> <li>Density unit</li> <li>Reference density unit</li> <li>Concentration unit</li> <li>Current unit</li> <li>Verification status</li> </ul>	<ul style="list-style-type: none"> <li>Totalizer 1 unit</li> <li>Totalizer 2 unit</li> <li>Totalizer 3 unit</li> <li>Verification result</li> </ul>

### Permanently assigned output group

Output Assembly Fix (Assem102) 64 byte



Designation	Description (format)	Byte	Bit	Value
Output Assembly Fix	1. Totalizer 1	1	1	<ul style="list-style-type: none"> <li>0: Enable</li> <li>1: Disable</li> </ul>
	2. Totalizer 2		2	
	3. Totalizer 3		3	
	4. Pressure compensation		4	
	5. Reference density compensation		5	
	6. Temperature compensation		6	
	7. Verification		7	
	8. Not used		8	–

Designation	Description (format)	Byte	Bit	Value
	9. Not used	2...4	0...8	–
	10. Control totalizer 1 (integer)	5...6	0...8	<ul style="list-style-type: none"> <li>■ 32226: Add</li> <li>■ 32490: Reset and stop</li> <li>■ 32228: Default value and stop</li> <li>■ 198: Reset and add</li> <li>■ 199: Default value and add</li> </ul>
	11. Not used	7...8	0...8	–
	12. Control totalizer 2 (integer)	9...10	0...8	See totalizer 1
	13. Not used	11...12	0...8	–
	14. Control totalizer 3 (integer)	13...14	0...8	See totalizer 1
	15. Not used	15...16	0...8	–
	16. External pressure (real)	17...20	0...8	Data format: Byte 1 to 4: External pressure Floating-point number (IEEE754)
	17. External pressure unit (integer)	21...22	0...8	<ul style="list-style-type: none"> <li>■ 2165: Pa a</li> <li>■ 2116: kPa a</li> <li>■ 2137: MPa a</li> <li>■ 4871: bar a</li> <li>■ 2166: Pa g</li> <li>■ 2117: kPa a</li> <li>■ 2138: MPa a</li> <li>■ 2053: bar g</li> <li>■ 2182: Psi a</li> <li>■ 2183: Psi g</li> <li>■ 2244: Customer-specific</li> </ul>
	18. Not used	23...24	0...8	–
	19. External reference density (real)	25...28	0...8	Data format: Byte 1 to 4: External ref. density Floating-point number (IEEE754)
	20. External reference density unit (integer)	29...30	0...8	<ul style="list-style-type: none"> <li>■ 2112: kg/Nm<sup>3</sup></li> <li>■ 2113: kg/Nl</li> <li>■ 2092: g/Scm<sup>3</sup></li> <li>■ 2114: kg/Scm<sup>3</sup></li> <li>■ 2181: lb/Sft<sup>3</sup></li> </ul>
	21. Not used	31...32	0...8	–
	22. External temperature (real)	33...36	0...8	Data format: Byte 1 to 4: External temperature Floating-point number (IEEE754)
	23. External temperature unit (integer)	37...38	0...8	<ul style="list-style-type: none"> <li>■ 4608: °C</li> <li>■ 4609: °F</li> <li>■ 4610: K</li> <li>■ 4611: °R</li> </ul>
	24. Not used	39...40	0...8	–
	25. Start verification (integer)	41...42	0...8	<ul style="list-style-type: none"> <li>■ 32378: Start</li> <li>■ 32713: Cancel</li> </ul>
	26. Not used	43...64	0...8	–



## 10 Commissioning

### 10.1 Function check

Before commissioning the measuring device:

- ▶ Make sure that the post-installation and post-connection checks have been performed.
- "Post-installation check" checklist →  28
- "Post-connection check" checklist →  38

### 10.2 Connecting via FieldCare

- For FieldCare connection
- For connecting via FieldCare →  49
- For the FieldCare →  50 user interface

### 10.3 Configuring the device address via software

In the **"Communication" submenu** the device address can be set.



#### Navigation

"Setup" menu → Communication → Device address

#### 10.3.1 Ethernet network and Web server

When delivered, the measuring device has the following factory settings:

IP address	192.168.1.212
Subnet mask	255.255.255.0
Default gateway	192.168.1.212

-  ▪ If hardware addressing is active, software addressing is disabled.
- If a switch is made to hardware addressing, the address configured via software addressing is retained for the first 9 places (the first three octets).
- If the IP address of the device is not known, the device address currently configured can be read out →  73.

### 10.4 Setting the operating language

Factory setting: English or ordered local language

The operating language can be set in FieldCare, DeviceCare or via the Web server:

Operation → Display language

### 10.5 Configuring the measuring device

The **Setup** menu with its submenus contains all the parameters needed for standard operation.




Navigation  
"Setup" menu

⚙ Setup		
Device tag	→ 📄	57
▶ System units	→ 📄	57
▶ Communication	→ 📄	59
▶ Display	→ 📄	60
▶ Low flow cut off	→ 📄	61
▶ Empty pipe detection	→ 📄	63
▶ Advanced setup	→ 📄	64

10.5.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

 Enter the tag name in the "FieldCare" operating tool → 📄 50


Navigation  
"Setup" menu → Device tag

Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device tag	Enter the name for the measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Promag 100








10.5.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

 Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

Navigation  
"Setup" menu → Advanced setup → System units

▶ System units		
Volume flow unit	→ 📄	58
Volume unit	→ 📄	58

Conductivity unit	→  58
Temperature unit	→  58
Mass flow unit	→  58
Mass unit	→  58
Density unit	→  58
Corrected volume flow unit	→  59
Corrected volume unit	→  59

### Parameter overview with brief description

Parameter	Prerequisite	Description	Selection	Factory setting
Volume flow unit	–	Select volume flow unit. <i>Result</i> The selected unit applies for: ▪ Output ▪ Low flow cut off ▪ Simulation process variable	Unit choose list	Country-specific: ▪ l/h ▪ gal/min (us)
Volume unit	–	Select volume unit.	Unit choose list	Country-specific: ▪ m <sup>3</sup> ▪ gal (us)
Conductivity unit	The <b>On</b> option is selected in the <b>Conductivity measurement</b> parameter.	Select conductivity unit. <i>Effect</i> The selected unit applies for: Simulation process variable	Unit choose list	µS/cm
Temperature unit	–	Select temperature unit. <i>Result</i> The selected unit applies for: ▪ <b>Temperature</b> parameter ▪ <b>Maximum value</b> parameter ▪ <b>Minimum value</b> parameter ▪ <b>External temperature</b> parameter ▪ <b>Maximum value</b> parameter ▪ <b>Minimum value</b> parameter	Unit choose list	Country-specific: ▪ °C ▪ °F
Mass flow unit	–	Select mass flow unit. <i>Result</i> The selected unit applies for: ▪ Output ▪ Low flow cut off ▪ Simulation process variable	Unit choose list	Country-specific: ▪ kg/h ▪ lb/min
Mass unit	–	Select mass unit.	Unit choose list	Country-specific: ▪ kg ▪ lb
Density unit	–	Select density unit. <i>Result</i> The selected unit applies for: ▪ Output ▪ Simulation process variable	Unit choose list	Country-specific: ▪ kg/l ▪ lb/ft <sup>3</sup>

Parameter	Prerequisite	Description	Selection	Factory setting
Corrected volume flow unit	–	Select corrected volume flow unit. <i>Result</i> The selected unit applies for: <b>Corrected volume flow</b> parameter (→  75)	Unit choose list	Country-specific: ■ Nm <sup>3</sup> /h ■ Sft <sup>3</sup> /h
Corrected volume unit	–	Select corrected volume unit.	Unit choose list	Country-specific: ■ Nm <sup>3</sup> ■ Sft <sup>3</sup>

### 10.5.3 Configuring the communication interface

The **Communication** submenu guides you systematically through all the parameters that have to be configured for selecting and setting the communication interface.

#### Navigation

"Setup" menu → Communication

► **Communication**

MAC address

→ 59

Default network settings

→ 59

DHCP client

→ 59

IP address

→ 60

Subnet mask

→ 60

Default gateway

→ 60

#### Parameter overview with brief description

Parameter	Description	User interface / Selection / User entry	Factory setting
MAC address	Displays the MAC address of the measuring device. MAC = Media Access Control	Unique 12-digit character string comprising letters and numbers, e.g.: 00:07:05:10:01:5F	Each measuring device is given an individual address.
Default network settings	Select whether to restore network settings.	■ Off ■ On	Off
DHCP client	Select to activate/deactivate DHCP client functionality. <b>Result</b> If the DHCP client functionality of the Web server is activated, the IP address, Subnet mask and Default gateway are set automatically. Identification is via the MAC address of the measuring device.	■ Off ■ On	Off

Parameter	Description	User interface / Selection / User entry	Factory setting
IP address	Displays the IP address of the Web server of the measuring device.	4 octet: 0 to 255 (in the particular octet)	192.168.1.212
Subnet mask	Displays the subnet mask.	4 octet: 0 to 255 (in the particular octet)	255.255.255.0
Default gateway	Displays the default gateway.	4 octet: 0 to 255 (in the particular octet)	0.0.0.0

10.5.4    **Configuring the local display**

The **Display** wizard guides you systematically through all the parameters that can configured for configuring the local display.

**Navigation**

"Setup" menu → Display

► Display

Format display

→ 61

Value 1 display

→ 61

0% bargraph value 1

→ 61

100% bargraph value 1

→ 61

Value 2 display

→ 61

Value 3 display

→ 61

0% bargraph value 3

→ 61



100% bargraph value 3

→ 61

Value 4 display

→ 61

### Parameter overview with brief description



Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul style="list-style-type: none"> <li>■ 1 value, max. size</li> <li>■ 1 bargraph + 1 value</li> <li>■ 2 values</li> <li>■ 1 value large + 2 values</li> <li>■ 4 values</li> </ul>	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	<ul style="list-style-type: none"> <li>■ Volume flow</li> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> <li>■ Flow velocity</li> <li>■ Electronic temperature</li> <li>■ Totalizer 1</li> <li>■ Totalizer 2</li> <li>■ Totalizer 3</li> <li>■ None</li> </ul>	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> <li>■ 0 l/h</li> <li>■ 0 gal/min (us)</li> </ul>
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the <b>Value 1 display</b> parameter	None
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the <b>Value 1 display</b> parameter (→  61)	None
0% bargraph value 3	A selection was made in the <b>Value 3 display</b> parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> <li>■ 0 l/h</li> <li>■ 0 gal/min (us)</li> </ul>
100% bargraph value 3	A selection was made in the <b>Value 3 display</b> parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the <b>Value 1 display</b> parameter (→  61)	None

### 10.5.5 Configuring the low flow cut off

The **Low flow cut off** submenu contains the parameters that must be set in order to configure the low flow cut off.

#### Navigation

"Setup" menu → Low flow cut off

► Low flow cut off	
Assign process variable	→  62
On value low flow cutoff	→  62

Off value low flow cutoff	→ 62
Pressure shock suppression	→ 62

### Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	–	Select process variable for low flow cut off.	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ Volume flow</li> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> </ul>	Volume flow
On value low flow cutoff	One of the following options is selected in the <b>Assign process variable</b> parameter (→ 62): <ul style="list-style-type: none"> <li>■ Volume flow</li> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> </ul>	Enter on value for low flow cut off.	Signed floating-point number	Depends on country and nominal diameter
Off value low flow cutoff	One of the following options is selected in the <b>Assign process variable</b> parameter (→ 62): <ul style="list-style-type: none"> <li>■ Volume flow</li> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> </ul>	Enter off value for low flow cut off.	0 to 100.0 %	50 %
Pressure shock suppression	One of the following options is selected in the <b>Assign process variable</b> parameter (→ 62): <ul style="list-style-type: none"> <li>■ Volume flow</li> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> </ul>	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	0 s

### 10.5.6 Configuring empty pipe detection

The **Empty pipe detection** submenu contains parameters that must be configured for the configuration of empty pipe detection.

#### Navigation

"Setup" menu → Empty pipe detection

► Empty pipe detection	
Empty pipe detection	→ 63
New adjustment	→ 63
Switch point empty pipe detection	→ 63
Response time empty pipe detection	→ 63

#### Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Empty pipe detection	–	Switch empty pipe detection on and off.	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul>	Off
New adjustment	The <b>On</b> option is selected in the <b>Empty pipe detection</b> parameter.	Select type of adjustment.	<ul style="list-style-type: none"> <li>■ Cancel</li> <li>■ Empty pipe adjust</li> <li>■ Full pipe adjust</li> </ul>	Cancel
Progress	The <b>On</b> option is selected in the <b>Empty pipe detection</b> parameter.	Shows the progress.	<ul style="list-style-type: none"> <li>■ Ok</li> <li>■ Busy</li> <li>■ Not ok</li> </ul>	–
Switch point empty pipe detection	The <b>On</b> option is selected in the <b>Empty pipe detection</b> parameter.	Enter hysteresis in %, below this value the measuring tube will be detected as empty.	0 to 100 %	10 %
Response time empty pipe detection	In the <b>Empty pipe detection</b> parameter (→ 63), the <b>On</b> option is selected.	Enter the time before diagnostic message S862 'Pipe empty' is displayed for empty pipe detection.	0 to 100 s	1 s

## 10.6 Advanced settings

The **Advanced setup** submenu together with its submenus contains parameters for specific settings.

**Navigation**

"Setup" menu → Advanced setup

▶ Advanced setup

Enter access code

▶ Sensor adjustment → 64

▶ Totalizer 1 to n → 64

▶ Display → 66

▶ Electrode cleaning circuit → 68

▶ Administration → 69

### 10.6.1 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

**Navigation**

"Setup" menu → Advanced setup → Sensor adjustment

▶ Sensor adjustment

Installation direction → 64

**Parameter overview with brief description**

Parameter	Description	Selection	Factory setting
Installation direction	Set sign of flow direction to match the direction of the arrow on the sensor.	<div><div>Flow in arrow direction</div><div>Flow against arrow direction</div></div>	Flow in arrow direction

### 10.6.2 Configuring the totalizer

In the **"Totalizer 1 to n"** submenu the individual totalizer can be configured.



**Navigation**

"Setup" menu → Advanced setup → Totalizer 1 to n

► <b>Totalizer 1 to n</b>		
Assign process variable	→	65
Unit totalizer	→	65
Totalizer operation mode	→	65
Failure mode	→	65

**Parameter overview with brief description**



















Parameter	Prerequisite	Description	Selection	Factory setting
Assign process variable	–	Select process variable for totalizer.	<ul style="list-style-type: none"> <li>Off</li> <li>Volume flow</li> <li>Mass flow</li> <li>Corrected volume flow</li> </ul>	Volume flow
Unit totalizer	One of the following options is selected in the <b>Assign process variable</b> parameter (→ 65) of the <b>Totalizer 1 to n</b> submenu: <ul style="list-style-type: none"> <li>Volume flow</li> <li>Mass flow</li> <li>Corrected volume flow</li> </ul>	Select process variable totalizer unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> <li>l</li> <li>gal (us)</li> </ul>
Totalizer operation mode	One of the following options is selected in the <b>Assign process variable</b> parameter (→ 65) of the <b>Totalizer 1 to n</b> submenu: <ul style="list-style-type: none"> <li>Volume flow</li> <li>Mass flow</li> <li>Corrected volume flow</li> </ul>	Select totalizer calculation mode.	<ul style="list-style-type: none"> <li>Net flow total</li> <li>Forward flow total</li> <li>Reverse flow total</li> </ul>	Net flow total
Failure mode	One of the following options is selected in the <b>Assign process variable</b> parameter (→ 65) of the <b>Totalizer 1 to n</b> submenu: <ul style="list-style-type: none"> <li>Volume flow</li> <li>Mass flow</li> <li>Corrected volume flow</li> </ul>	Define totalizer behavior in alarm condition.	<ul style="list-style-type: none"> <li>Stop</li> <li>Actual value</li> <li>Last valid value</li> </ul>	Stop

### 10.6.3 Carrying out additional display configurations

In the **Display** submenu you can set all the parameters associated with the configuration of the local display.

#### Navigation

"Setup" menu → Advanced setup → Display

► Display	
Format display	→  67
Value 1 display	→  67
0% bargraph value 1	→  67
100% bargraph value 1	→  67
Decimal places 1	→  67
Value 2 display	→  67
Decimal places 2	→  67
Value 3 display	→  67
0% bargraph value 3	→  67
100% bargraph value 3	→  67
Decimal places 3	→  67
Value 4 display	→  67
Decimal places 4	→  67
Display language	→  68
Display interval	→  68
Display damping	→  68
Header	→  68
Header text	→  68
Separator	→  68
Backlight	

## Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul style="list-style-type: none"> <li>■ 1 value, max. size</li> <li>■ 1 bargraph + 1 value</li> <li>■ 2 values</li> <li>■ 1 value large + 2 values</li> <li>■ 4 values</li> </ul>	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	<ul style="list-style-type: none"> <li>■ Volume flow</li> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> <li>■ Flow velocity</li> <li>■ Electronic temperature</li> <li>■ Totalizer 1</li> <li>■ Totalizer 2</li> <li>■ Totalizer 3</li> <li>■ None</li> </ul>	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> <li>■ 0 l/h</li> <li>■ 0 gal/min (us)</li> </ul>
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the <b>Value 1 display</b> parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> <li>■ x</li> <li>■ x.x</li> <li>■ x.xx</li> <li>■ x.xxx</li> <li>■ x.xxxx</li> </ul>	x.xx
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the <b>Value 1 display</b> parameter	None
Decimal places 2	A measured value is specified in the <b>Value 2 display</b> parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> <li>■ x</li> <li>■ x.x</li> <li>■ x.xx</li> <li>■ x.xxx</li> <li>■ x.xxxx</li> </ul>	x.xx
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the <b>Value 1 display</b> parameter (→ 61)	None
0% bargraph value 3	A selection was made in the <b>Value 3 display</b> parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> <li>■ 0 l/h</li> <li>■ 0 gal/min (us)</li> </ul>
100% bargraph value 3	A selection was made in the <b>Value 3 display</b> parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 3	A measured value is specified in the <b>Value 3 display</b> parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> <li>■ x</li> <li>■ x.x</li> <li>■ x.xx</li> <li>■ x.xxx</li> <li>■ x.xxxx</li> </ul>	x.xx
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the <b>Value 1 display</b> parameter (→ 61)	None
Decimal places 4	A measured value is specified in the <b>Value 4 display</b> parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> <li>■ x</li> <li>■ x.x</li> <li>■ x.xx</li> <li>■ x.xxx</li> <li>■ x.xxxx</li> </ul>	x.xx

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Display language	A local display is provided.	Set display language.	<ul style="list-style-type: none"> <li>■ English</li> <li>■ Deutsch *</li> <li>■ Français *</li> <li>■ Español *</li> <li>■ Italiano *</li> <li>■ Nederlands *</li> <li>■ Portuguesa *</li> <li>■ Polski *</li> <li>■ русский язык (Russian) *</li> <li>■ Svenska *</li> <li>■ Türkçe *</li> <li>■ 中文 (Chinese) *</li> <li>■ 日本語 (Japanese) *</li> <li>■ 한국어 (Korean) *</li> <li>■ العربية (Arabic) *</li> <li>■ Bahasa Indonesia *</li> <li>■ ภาษาไทย (Thai) *</li> <li>■ tiếng Việt (Vietnamese) *</li> <li>■ čeština (Czech) *</li> </ul>	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	A local display is provided.	Select header contents on local display.	<ul style="list-style-type: none"> <li>■ Device tag</li> <li>■ Free text</li> </ul>	Device tag
Header text	In the <b>Header</b> parameter, the <b>Free text</b> option is selected.	Enter display header text.	Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)	-----
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	<ul style="list-style-type: none"> <li>■ . (point)</li> <li>■ , (comma)</li> </ul>	. (point)

\* Visibility depends on order options or device settings

### 10.6.4 Performing electrode cleaning

The **Electrode cleaning circuit** submenu contains parameters that must be configured for the configuration of electrode cleaning.

 The submenu is only available if the device was ordered with electrode cleaning.

#### Navigation

"Setup" menu → Advanced setup → Electrode cleaning circuit

► Electrode cleaning circuit	
Electrode cleaning circuit	→ 69
ECC duration	→ 69
ECC recovery time	→ 69




## 10.7 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

### Navigation

"Diagnostics" menu → Simulation

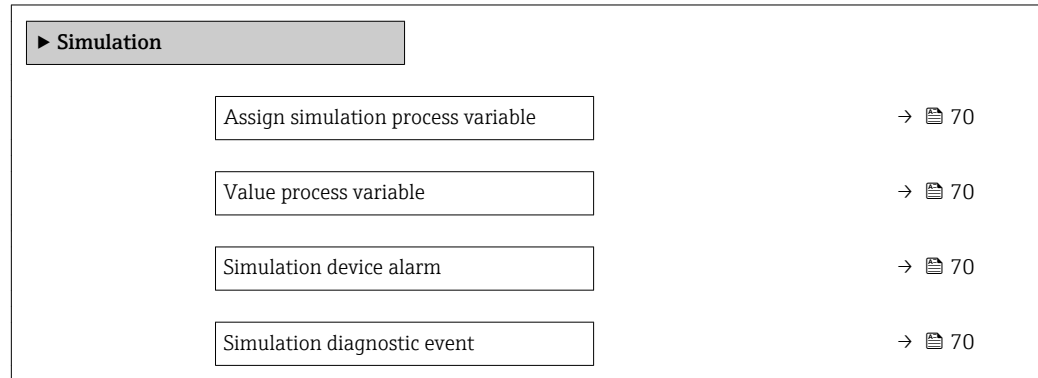



### Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign simulation process variable	–	Select a process variable for the simulation process that is activated.	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ Volume flow</li> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> <li>■ Conductivity *</li> </ul>	Off
Value process variable	One of the following options is selected in the <b>Assign simulation process variable</b> parameter (→ 70): <ul style="list-style-type: none"> <li>■ Volume flow</li> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> <li>■ Conductivity *</li> <li>■ Corrected conductivity *</li> <li>■ Temperature *</li> </ul>	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Simulation device alarm	–	Switch the device alarm on and off.	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul>	Off
Diagnostic event category	–	Select a diagnostic event category.	<ul style="list-style-type: none"> <li>■ Sensor</li> <li>■ Electronics</li> <li>■ Configuration</li> <li>■ Process</li> </ul>	Process
Simulation diagnostic event	–	Select a diagnostic event for the simulation process that is activated.	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ Diagnostic event picklist (depends on the category selected)</li> </ul>	Off

\* Visibility depends on order options or device settings

## 10.8 Protecting settings from unauthorized access

The following options exist for protecting the configuration of the measuring device from unintentional modification after commissioning:


- Write protection via access code for Web browser →  71
- Write protection via write protection switch →  71

### 10.8.1 Write protection via access code

With the customer-specific access code, access to the measuring device via the Web browser is protected, as are the parameters for the measuring device configuration.

#### Navigation

"Setup" menu → Advanced setup → Administration → Define access code

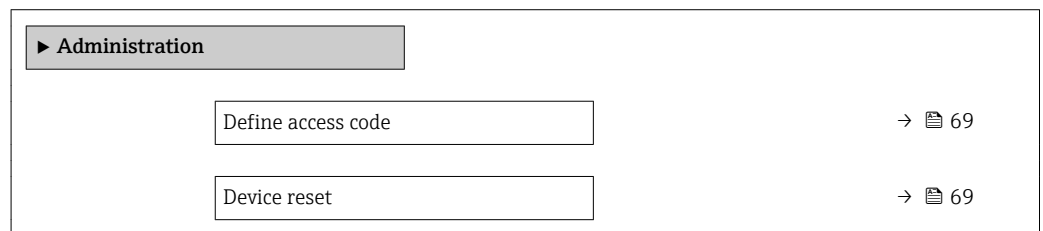

#### Defining the access code via the Web browser

1. Navigate to the **Define access code** parameter.
2. Define a max. 16-digit numeric code as an access code.
3. Enter the access code again in the to confirm the code.
  - ↳ The Web browser switches to the login page.



If no action is performed for 10 minutes, the Web browser automatically returns to the login page.



- If parameter write protection is activated via an access code, it can also only be deactivated via this access code .
- The user role with which the user is currently logged on via Web browser is indicated by the **Access status tooling** parameter. Navigation path: Operation → Access status tooling


### 10.8.2 Write protection via write protection switch

The write protection switch makes it possible to block write access to the entire operating menu with the exception of the following parameters:


- External pressure
- External temperature
- Reference density
- All parameters for configuring the totalizer

The parameter values are now read only and cannot be edited any more:

- Via service interface (CDI-RJ45)
- Via Ethernet network

1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary  
→  119.

3.

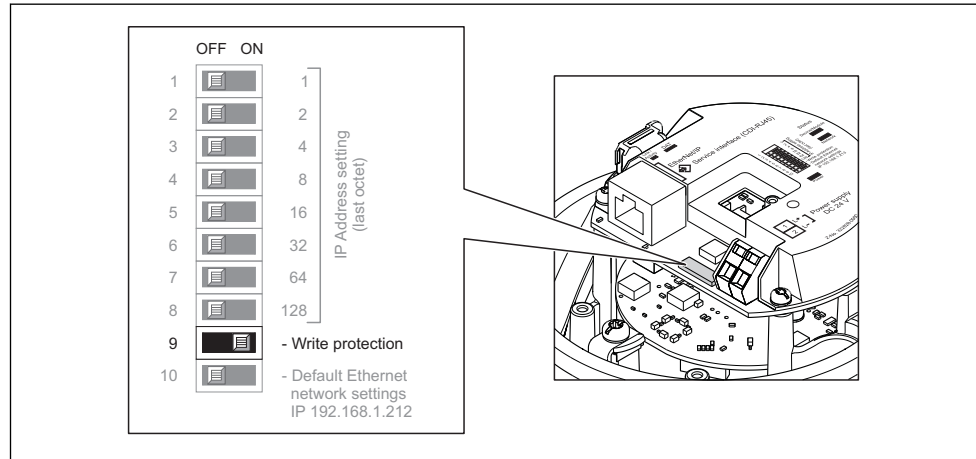

A0017915

Setting the write protection switch on the I/O electronics module to the **ON** position enables the hardware write protection. Setting the write protection switch on the I/O electronics module to the **OFF** position (factory setting) disables the hardware write protection.

- ↳ If hardware write protection is enabled: the **Locking status** parameter displays the **Hardware locked** option ; if disabled, the **Locking status** parameter does not display any option .

4.


Reverse the removal procedure to reassemble the transmitter.



## 11 Operation

### 11.1 Read out and modify current Ethernet settings

If the Ethernet settings such as the IP address of the measuring device are unknown, they can be read out and modified as explained in the following example for an IP address.

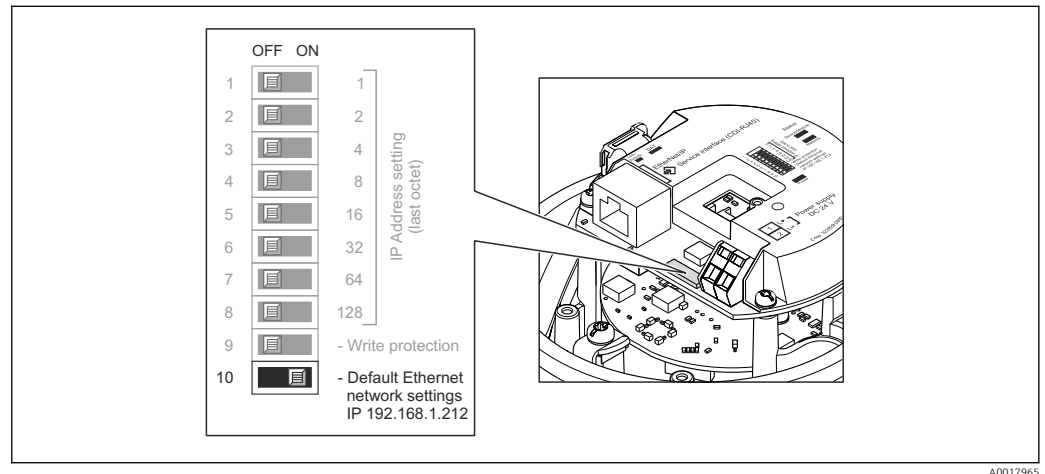

A0017965

#### Prerequisite

- Software addressing is enabled: All the DIP switches for hardware addressing are set to **OFF**.
- Measuring device is switched on.

1. Set the DIP switch for "Default Ethernet network settings, IP 192.168.1.212" from **OFF** → **ON**.
2. Restart the device.
  - ↳ The device's Ethernet settings are reset to their factory settings:  
IP address: 192.168.1.212; Subnet mask: 255.255.255.0; Default gateway: 192.168.1.212
3. Enter the default setting for the IP address in the address line of the Web browser.
4. Navigate to **IP address** parameter in the operating menu: Setup → Communication → IP address
  - ↳ The parameter displays the configured IP address.
5. Change the IP address of the device if necessary.
6. Set the DIP switch for "Default Ethernet network settings, IP 192.168.1.212" from **ON** → **OFF**.
7. Restart the device.
  - ↳ The modified IP address of the device is now enabled.

### 11.2 Reading the device locking status

Device active write protection: **Locking status** parameter

Navigation

"Operation" menu → Locking status

Function scope of "Locking status" parameter

Options	Description
Hardware locked	The write protection switch (DIP switch) for hardware locking is activated on the I/O electronic module. This prevents write access to the parameters .
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

11.3    Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

Navigation

"Diagnostics" menu → Measured values

► Measured values

► Process variables

→ ⓘ 74

► Totalizer

→ ⓘ 75

11.3.1    "Process variables" submenu

The **Process variables** submenu contains all the parameters needed to display the current measured values for each process variable.

Navigation

"Diagnostics" menu → Measured values → Process variables

► Process variables

Volume flow

→ ⓘ 75

Mass flow

→ ⓘ 75

Conductivity

→ ⓘ 75

Corrected volume flow

→ ⓘ 75

Temperature

→ ⓘ 75

Corrected conductivity

→ ⓘ 75

### Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Volume flow	–	Displays the volume flow currently measured. <i>Dependency</i> The unit is taken from the <b>Volume flow unit</b> parameter (→ 58).	Signed floating-point number
Mass flow	–	Displays the mass flow currently calculated. <i>Dependency</i> The unit is taken from the <b>Mass flow unit</b> parameter (→ 58).	Signed floating-point number
Corrected volume flow	–	Displays the corrected volume flow currently calculated. <i>Dependency</i> The unit is taken from the <b>Corrected volume flow unit</b> parameter (→ 59).	Signed floating-point number
Conductivity	The <b>On</b> option is selected in the <b>Conductivity measurement</b> parameter.	Displays the conductivity currently measured. <i>Dependency</i> The unit is taken from the <b>Conductivity unit</b> parameter (→ 58).	Signed floating-point number
Corrected conductivity	One of the following conditions is met: ▪ Order code for "Sensor option", option <b>CI</b> "Medium temperature sensor" or ▪ The temperature is read into the flowmeter from an external device.	Displays the conductivity currently corrected. <i>Dependency</i> The unit is taken from the <b>Conductivity unit</b> parameter (→ 58).	Positive floating-point number
Temperature	For the following order code: "Sensor option", option <b>CI</b> "Medium temperature sensor"	Displays the temperature currently calculated. <i>Dependency</i> The unit is taken from the <b>Temperature unit</b> parameter (→ 58).	Positive floating-point number

### 11.3.2 "Totalizer" submenu

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

#### Navigation

"Diagnostics" menu → Measured values → Totalizer

► Totalizer

Totalizer value 1 to n

→ 76

Totalizer overflow 1 to n

→ 76

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Totalizer value 1 to n	One of the following options is selected in the <b>Assign process variable</b> parameter (→ 65) of the <b>Totalizer 1 to n</b> submenu: <ul style="list-style-type: none"><li>■ Volume flow</li><li>■ Mass flow</li><li>■ Corrected volume flow</li></ul>	Displays the current totalizer counter value.	Signed floating-point number
Totalizer overflow 1 to n	One of the following options is selected in the <b>Assign process variable</b> parameter (→ 65) of the <b>Totalizer 1 to n</b> submenu: <ul style="list-style-type: none"><li>■ Volume flow</li><li>■ Mass flow</li><li>■ Corrected volume flow</li></ul>	Displays the current totalizer overflow.	Integer with sign

11.4 Adapting the measuring device to the process conditions

- The following are available for this purpose:
- Basic settings using the **Setup** menu (→ 56)
  - Advanced settings using the **Advanced setup** submenu (→ 64)

11.5 Performing a totalizer reset

**Navigation**  
"Operation" menu → Totalizer handling

► Totalizer handling

Control Totalizer 1 to n

→ 77


Preset value 1 to n

→ 77

Reset all totalizers

→ 77

### Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Control Totalizer 1 to n	One of the following options is selected in the <b>Assign process variable</b> parameter (→ 65) of the <b>Totalizer 1 to n</b> submenu: <ul style="list-style-type: none"> <li>■ Volume flow</li> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> </ul>	Control totalizer value.	<ul style="list-style-type: none"> <li>■ Totalize</li> <li>■ Reset + hold</li> <li>■ Preset + hold</li> <li>■ Reset + totalize</li> <li>■ Preset + totalize</li> </ul>	Totalize
Preset value 1 to n	One of the following options is selected in the <b>Assign process variable</b> parameter (→ 65) of the <b>Totalizer 1 to n</b> submenu: <ul style="list-style-type: none"> <li>■ Volume flow</li> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> </ul>	Specify start value for totalizer. <i>Dependency</i>  The unit of the selected process variable is specified for the totalizer in the <b>Unit totalizer</b> parameter (→ 65).	Signed floating-point number	0 l
Reset all totalizers	–	Reset all totalizers to 0 and start.	<ul style="list-style-type: none"> <li>■ Cancel</li> <li>■ Reset + totalize</li> </ul>	Cancel

#### 11.5.1 Function scope of the "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started or continues running.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the <b>Preset value</b> parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.
Preset + totalize	The totalizer is set to the defined start value from the <b>Preset value</b> parameter and the totaling process is restarted.

#### 11.5.2 Function scope of the "Reset all totalizers" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized.

## 12 Diagnostics and troubleshooting

### 12.1 General troubleshooting

*For local display*


Error	Possible causes	Solution
Local display dark and no output signals	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage .
Local display dark and no output signals	The polarity of the supply voltage is wrong.	Correct the polarity.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective.	Order spare part → 99.
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	<ul style="list-style-type: none"> <li>Set the display brighter by simultaneously pressing  + .</li> <li>Set the display darker by simultaneously pressing  + .</li> </ul>
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part → 99.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	<ul style="list-style-type: none"> <li>Check the cable and the connector between the main electronics module and display module.</li> <li>Order spare part → 99.</li> </ul>

*For output signals*

Error	Possible causes	Solution
Green power LED on the main electronics module of the transmitter is dark	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage .
Device measures incorrectly.	Configuration error or device is operated outside the application.	<ol style="list-style-type: none"> <li>Check and correct parameter configuration.</li> <li>Observe limit values specified in the "Technical Data".</li> </ol>

*For access*

Error	Possible causes	Solution
No write access to parameters	Hardware write protection enabled	Set the write protection switch on main electronics module to the <b>OFF</b> position → 71.
No connection via EtherNet/IP	Device plug connected incorrectly	Check the pin assignment of the connector .

Error	Possible causes	Solution
Not connecting to Web server	Web server disabled	Using the "FieldCare" or "DeviceCare" operating tool, check whether the Web server of the measuring device is enabled, and enable it if necessary → 46.
	Incorrect setting for the Ethernet interface of the computer	1. Check the properties of the Internet protocol (TCP/IP) → 43. 2. Check the network settings with the IT manager.
Not connecting to Web server	<ul style="list-style-type: none"> <li>Incorrect IP address</li> <li>IP address is not known</li> </ul>	1. If addressing via hardware: open the transmitter and check the IP address configured (last octet). 2. Check the IP address of the measuring device with the network manager. 3. If the IP address is not known, set DIP switch no. 10 to ON, restart the device and enter the factory IP address 192.168.1.212.  EtherNet/IP communication is interrupted by enabling the DIP switch.
	Web browser setting "Use a Proxy Server for Your LAN" is enabled	Disable the use of the proxy server in the Web browser settings of the computer. Using the example of MS Internet Explorer: 1. Under <i>Control Panel</i> open <i>Internet options</i> . 2. Select the <i>Connections</i> tab and then double-click <i>LAN settings</i> . 3. In the <i>LAN settings</i> disable the use of the proxy server and select <i>OK</i> to confirm.
	Apart from the active network connection to the measuring device, other network connections are also being used.	<ul style="list-style-type: none"> <li>Make sure that no other network connections are established by the computer (also no WLAN) and close other programs with network access to the computer.</li> <li>If using a docking station for notebooks, make sure that a network connection to another network is not active.</li> </ul>
Web browser frozen and operation no longer possible	Data transfer active	Wait until data transfer or current action is finished.
	Connection lost	1. Check cable connection and power supply. 2. Refresh the Web browser and restart if necessary.
Content of Web browser incomplete or difficult to read	Not using optimum version of Web server.	1. Use the correct Web browser version → 42. 2. Clear the Web browser cache and restart the Web browser.
	Unsuitable view settings.	Change the font size/display ratio of the Web browser.
No or incomplete display of contents in the Web browser	<ul style="list-style-type: none"> <li>JavaScript not enabled</li> <li>JavaScript cannot be enabled</li> </ul>	1. Enable JavaScript. 2. Enter http://XXX.XXX.X.XXX/basic.html as the IP address.

Error	Possible causes	Solution
Operation with FieldCare or DeviceCare via CDI-RJ45 service interface (port 8000)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.
Flashing of firmware with FieldCare or DeviceCare via CDI-RJ45 service interface (via port 8000 or TFTP ports)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.

## 12.2 Diagnostic information via light emitting diodes

### 12.2.1 Transmitter

Different LEDs in the transmitter provide information on the device status.


LED	Color	Meaning
Supply voltage	Off	Supply voltage is off or too low
	Green	Supply voltage is ok
Device status	Green	Device status is ok
	Flashing red	A device error of diagnostic behavior "Warning" has occurred
	Red	A device error of diagnostic behavior "Alarm" has occurred
	Alternately flashing red/green	Boot loader is active
Network status	Off	Device has no EtherNet/IP address
	Green	Device's EtherNet/IP connection is active
	Flashing green	Device has EtherNet/IP address but no EtherNet/IP connection
	Red	EtherNet/IP address of the device has been assigned twice
	Flashing red	Device's EtherNet/IP connection is in timeout mode
Link/Activity	Orange	Link available but no activity
	Flashing orange	Activity present

## 12.3 Diagnostic information in the Web browser

### 12.3.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.



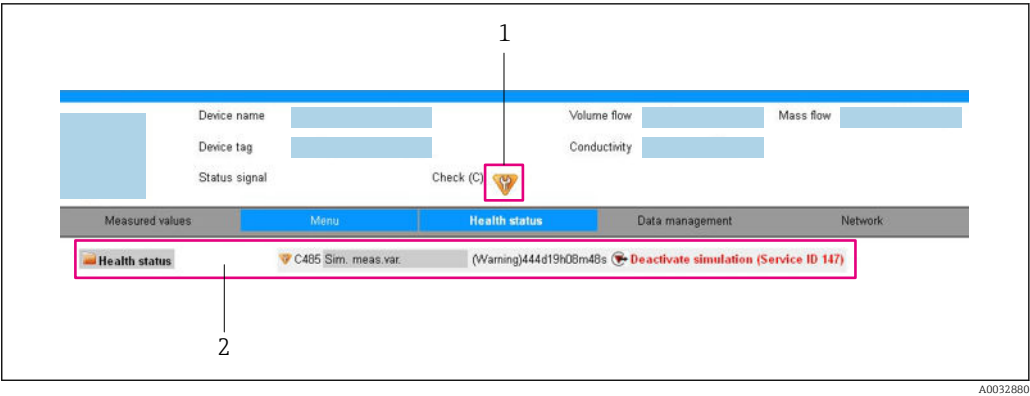

- 1 Status area with status signal
- 2 Diagnostic information → 81 and remedial measures with Service ID

**i** In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter
- Via submenu → 93

Status signals


The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
	<b>Failure</b> A device error has occurred. The measured value is no longer valid.
	<b>Function check</b> The device is in service mode (e.g. during a simulation).
	<b>Out of specification</b> The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
	<b>Maintenance required</b> Maintenance is required. The measured value is still valid.

**i** The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault.

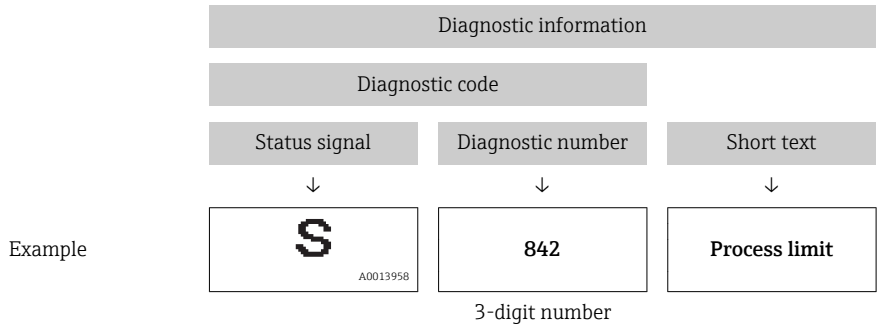


### 12.3.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

## 12.4 Diagnostic information in DeviceCare or FieldCare

### 12.4.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

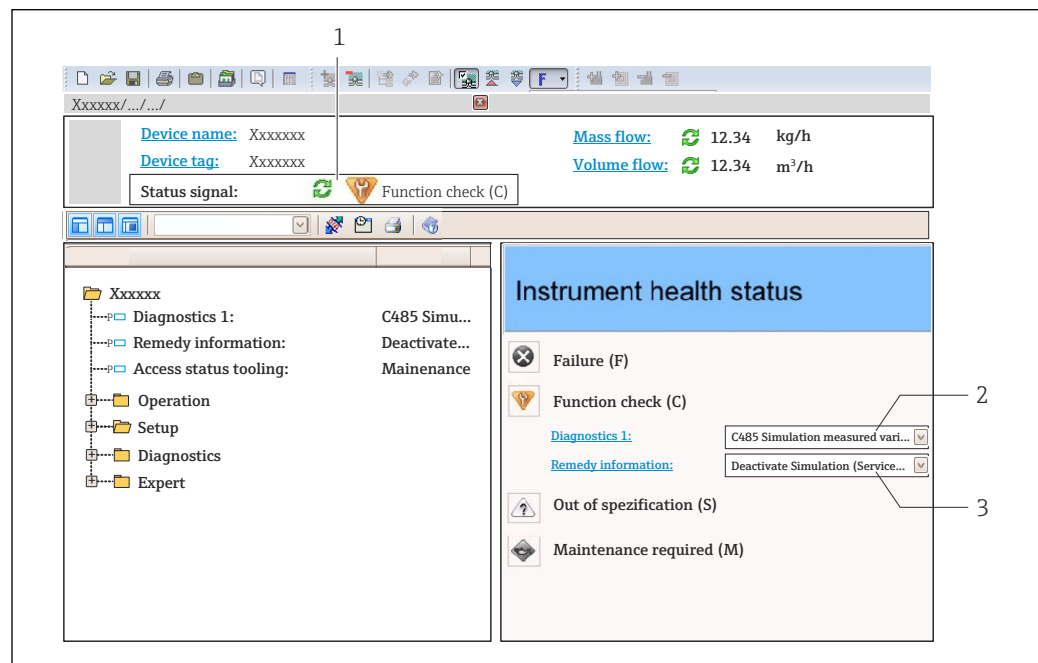

A0021799-EN


- 1 Status area with status signal
- 2 Diagnostic information → 81
- 3 Remedy information with Service ID

**i** In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter
- Via submenu → 93

### Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault.

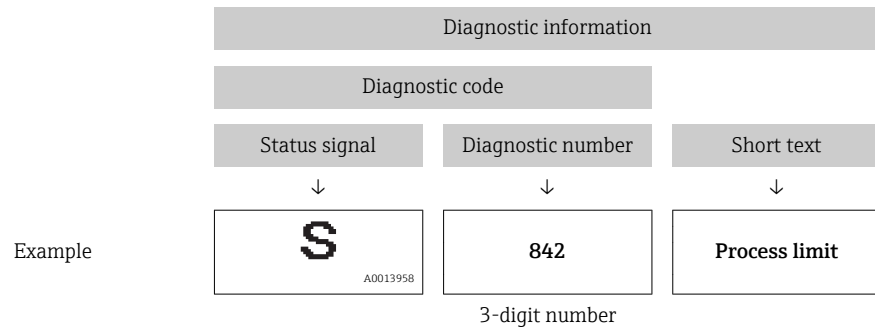

### 12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page  
Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu  
Remedy information can be called up in the working area of the user interface.


The user is in the **Diagnostics** menu.

1. Call up the desired parameter.
2. On the right in the working area, mouse over the parameter.
  - ↳ A tool tip with remedy information for the diagnostic event appears.

## 12.5 Diagnostic information via communication interface

### 12.5.1 Reading out diagnostic information

The current diagnostic event and associated diagnostic information can be read out via the input assembly (fix assembly):

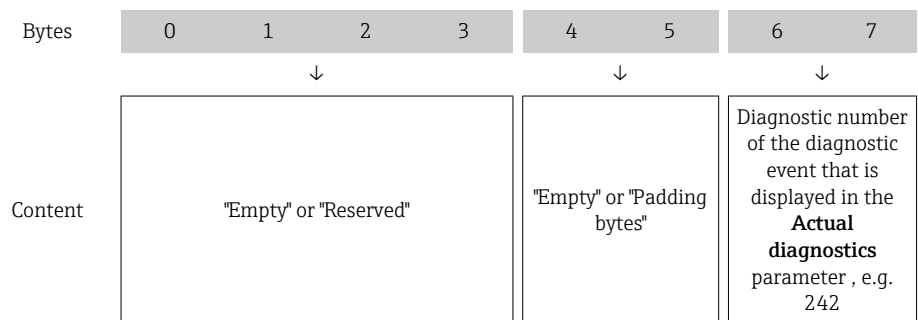

 For the content of bytes 8 to 16

## 12.6 Adapting the diagnostic information

### 12.6.1 Adapting the diagnostic behavior


Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.



Expert → System → Diagnostic handling → Diagnostic behavior

You can assign the following options to the diagnostic number as the diagnostic behavior:

Options	Description
Alarm	The device stops measurement. The totalizers assume the defined alarm condition. A diagnostic message is generated.
Warning	The device continues to measure. The totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is entered only in the <b>Event logbook</b> submenu ( <b>Event list</b> submenu) and is not displayed in alternation with the measured value display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

## 12.7 Overview of diagnostic information

 The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.

 In the case of some items of diagnostic information, the diagnostic behavior can be changed. Change the diagnostic information →  83

### 12.7.1 Diagnostic of sensor

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
004	Sensor		1. Change sensor 2. Contact service	0x800011D
	Status signal	S		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
022	Sensor temperature		1. Change main electronic module 2. Change sensor	■ 0x10000D5 ■ 0x10000D6
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
043	Sensor short circuit		1. Check sensor and cable 2. Change sensor or cable	0x8000153
	Status signal	S		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
062	Sensor connection		1. Check sensor connections 2. Contact service	0x100011C
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
082	Data storage		1. Check module connections 2. Contact service	0x10000E7
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
083	Memory content		1. Restart device 2. Contact service	0x10000A0
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
190	Special event 1		Contact service	0x10000EA
	Status signal	F		
	Diagnostic behavior	Alarm		

### 12.7.2 Diagnostic of electronic

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
201	Device failure		1. Restart device 2. Contact service	0x100014B
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
222	Electronic drift		Change main electronic module	0x1000119
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
242	Software incompatible		1. Check software 2. Flash or change main electronics module	0x1000067
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
252	Modules incompatible		1. Check electronic modules 2. Change electronic modules	0x100006B
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
262	Module connection		1. Check module connections 2. Change main electronics	0x1000149
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
270	Main electronic failure		Change main electronic module	<div><div>■ 0x100007C</div><div>■ 0x100007F</div><div>■ 0x1000080</div><div>■ 0x100009F</div></div>
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
271	Main electronic failure		1. Restart device 2. Change main electronic module	0x100007D
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
272	Main electronic failure		1. Restart device 2. Contact service	0x1000079
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
273	Main electronic failure		Change electronic	<div><div>■ 0x1000098</div><div>■ 0x10000E5</div><div>■ 0x100010B</div></div>
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
281	Electronic initialization		Firmware update active, please wait!	0x100003C
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
283	Memory content		1. Reset device 2. Contact service	0x100016F
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
302	Device verification active		Device verification active, please wait.	0x20001EE
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
311	Electronic failure		1. Reset device 2. Contact service	0x10000E1
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
311	Electronic failure		1. Do not reset device 2. Contact service	0x40000E2
	Status signal	M		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
322	Electronic drift		1. Perform verification manually 2. Change electronic	■ 0x8000157 ■ 0x8000158
	Status signal	S		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
382	Data storage		1. Insert DAT module 2. Change DAT module	0x100016D
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
383	Memory content		1. Restart device 2. Check or change DAT module 3. Contact service	0x100016E
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
390	Special event 2		Contact service	0x1000112
	Status signal	F		
	Diagnostic behavior	Alarm		

### 12.7.3 Diagnostic of configuration

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
410	Data transfer		1. Check connection 2. Retry data transfer	0x100008B
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
411	Up-/download active		Up-/download active, please wait	<div><div>■ 0x2000068</div><div>■ 0x2000069</div><div>■ 0x200006C</div></div>
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
437	Configuration incompatible		1. Restart device 2. Contact service	0x1000060
	Status signal	F		
	Diagnostic behavior	Alarm		



Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
438	Dataset		1. Check data set file 2. Check device configuration 3. Up- and download new configuration	0x400006A
	Status signal	M		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
453	Flow override		Deactivate flow override	0x2000094
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
484	Simulation failure mode		Deactivate simulation	0x2000090
	Status signal	C		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
485	Simulation measured variable		Deactivate simulation	0x2000093
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
495	Simulation diagnostic event		Deactivate simulation	0x200015E
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
500	Electrode 1 potential exceeded		1. Check process cond. 2. Increase system pressure	<div>■ 0x100015B</div> <div>■ 0x100015C</div>
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
500	Electrode difference voltage too high		1. Check process cond. 2. Increase system pressure	0x100015D
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
530	Electrode cleaning is running		1. Check process cond. 2. Increase system pressure	0x200015A
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
531	Empty pipe detection		Execute EPD adjustment	0x800016B
	Status signal	S		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
537	Configuration		1. Check IP addresses in network 2. Change IP address	0x100014A
	Status signal	F		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
590	Special event 3		Contact service	0x1000124
	Status signal	F		
	Diagnostic behavior	Alarm		

### 12.7.4 Diagnostic of process

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
832	Electronic temperature too high		Reduce ambient temperature	0x80000C3
	Status signal	S		
	Diagnostic behavior [from the factory] <sup>1)</sup>	Warning		

1) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
833	Electronic temperature too low		Increase ambient temperature	0x80000C1
	Status signal	S		
	Diagnostic behavior [from the factory] <sup>1)</sup>	Warning		

1) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
834	Process temperature too high		Reduce process temperature	0x80000C5
	Status signal	S		
	Diagnostic behavior [from the factory] <sup>1)</sup>	Warning		

1) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
835	Process temperature too low		Increase process temperature	0x80000C6
	Status signal	S		
	Diagnostic behavior [from the factory] <sup>1)</sup>	Warning		

1) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
842	Process limit		Low flow cut off active! 1. Check low flow cut off configuration	0x8000091
	Status signal	S		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
862	Empty pipe		1. Check for gas in process 2. Adjust empty pipe detection	0x8000092
	Status signal	S		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Coding of diagnostic information (hex)
No.	Short text			
882	Input signal		1. Check input configuration 2. Check external device or process conditions	0x1000031
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information		Remedy instructions	Coding of diagnostic information (hex)
No.	Short text		
937	EMC interference	Change main electronic module	0x8000154
	Status signal		
	Diagnostic behavior [from the factory] <sup>1)</sup>		







1) Diagnostic behavior can be changed.

Diagnostic information		Remedy instructions	Coding of diagnostic information (hex)
No.	Short text		
938	EMC interference	1. Check ambient conditions regarding EMC influence 2. Change main electronic module	0x100011B
	Status signal		
	Diagnostic behavior		





Diagnostic information		Remedy instructions	Coding of diagnostic information (hex)
No.	Short text		
990	Special event 4	Contact service	0x1000125
	Status signal		
	Diagnostic behavior		

12.8 Pending diagnostic events


The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

-  To call up the measures to rectify a diagnostic event:
  - Via Web browser →  82
  - Via "FieldCare" operating tool →  83
  - Via "DeviceCare" operating tool →  83
-  Other pending diagnostic events can be displayed in the **Diagnostic list** submenu →  93

Navigation  
"Diagnostics" menu

Diagnostics	
Actual diagnostics	→  93
Previous diagnostics	→  93
Operating time from restart	→  93
Operating time	→  93

### Parameter overview with brief description


Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occurred diagnostic event along with its diagnostic information.  If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	Symbol for diagnostic behavior, diagnostic code and short message.
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	–	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	–	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)




## 12.9 Diagnostic list

Up to 5 currently pending diagnostic events can be displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

### Navigation path

Diagnostics → Diagnostic list

 To call up the measures to rectify a diagnostic event:

- Via Web browser →  82
- Via "FieldCare" operating tool →  83
- Via "DeviceCare" operating tool →  83

## 12.10 Event logbook

### 12.10.1 Reading out the event logbook



A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

### Navigation path

**Diagnostics** menu → **Event logbook** submenu → Event list


A maximum of 20 event messages can be displayed in chronological order.




The event history includes entries for:

- Diagnostic events →  84
- Information events →  94

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
  - ☹: Occurrence of the event
  - ☺: End of the event
- Information event
  - ☹: Occurrence of the event

 To call up the measures to rectify a diagnostic event:

- Via Web browser →  82
- Via "FieldCare" operating tool →  83
- Via "DeviceCare" operating tool →  83

 For filtering the displayed event messages →  94

### 12.10.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

#### Navigation path

Diagnostics → Event logbook → Filter options

#### Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)


### 12.10.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.


Info number	Info name
I1000	----- (Device ok)
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1155	Reset electronic temperature
I1157	Memory error event list
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1256	Display: access status changed
I1264	Safety sequence aborted
I1335	Firmware changed

Info number	Info name
I1351	Empty pipe detection adjustment failure
I1353	Empty pipe detection adjustment ok
I1361	Web server: login failed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1444	Device verification passed
I1445	Device verification failed
I1457	Failed:Measured error verification
I1459	Failed: I/O module verification
I1461	Failed: Sensor verification
I1462	Failed:Sensor electronic module verific.

## 12.11 Resetting the measuring device

Using the **Device reset** parameter (→  69) it is possible to reset the entire device configuration or some of the configuration to a defined state.

### 12.11.1 Function scope of the "Device reset" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.  This option is not visible if no customer-specific settings have been ordered.
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

## 12.12 Device information


The **Device information** submenu contains all parameters that display different information for device identification.

### Navigation


"Diagnostics" menu → Device information

► Device information


Device tag

→  96

Serial number

→  96






Firmware version

→  96

Device name

Order code	→ 96
Extended order code 1	→ 96
Extended order code 2	→ 96
Extended order code 3	→ 96
ENP version	→ 96
IP address	→ 97
Subnet mask	→ 97
Default gateway	→ 97

### Parameter overview with brief description

Parameter	Description	User interface / User entry	Factory setting
Device tag	Shows name of measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Promag 100
Serial number	Shows the serial number of the measuring device.	A maximum of 11-digit character string comprising letters and numbers.	–
Firmware version	Shows the device firmware version installed.	Character string in the format xx.yy.zz	–
Device name	Shows the name of the transmitter.  The name can be found on the nameplate of the transmitter.	Promass300/500	–
Order code	Shows the device order code.  The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks (e.g. /).	–
Extended order code 1	Shows the 1st part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
Extended order code 2	Shows the 2nd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
Extended order code 3	Shows the 3rd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
ENP version	Shows the version of the electronic nameplate (ENP).	Character string	2.02.00



Parameter	Description	User interface / User entry	Factory setting
IP address	Displays the IP address of the Web server of the measuring device.	4 octet: 0 to 255 (in the particular octet)	192.168.1.212
Subnet mask	Displays the subnet mask.	4 octet: 0 to 255 (in the particular octet)	255.255.255.0
Default gateway	Displays the default gateway.	4 octet: 0 to 255 (in the particular octet)	0.0.0.0

## 12.13 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
06.2012	01.00.00	–	Original firmware	–	–
04.2013	01.01.zz	Option 73	Update	Operating Instructions	BA01174D/06/EN/01.13
10.2014	01.01.zz	Option 71	<ul style="list-style-type: none"> <li>■ Integration of optional local display</li> <li>■ Heartbeat functionality for Rockwell AOP</li> <li>■ New unit "Beer Barrel (BBL)"</li> <li>■ Simulation of diagnostic events</li> </ul>	Operating Instructions	BA01174D/06/EN/02.14



It is possible to flash the firmware to the current version or the previous version using the service interface.



For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.



The manufacturer's information is available:

- In the Download Area of the Endress+Hauser web site: [www.endress.com](http://www.endress.com) → Downloads
- Specify the following details:
  - Product root: e.g. 5H1B  
The product root is the first part of the order code: see the nameplate on the device.
  - Text search: Manufacturer's information
  - Media type: Documentation – Technical Documentation

## 13 Maintenance

### 13.1 Maintenance tasks

No special maintenance work is required.

#### 13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

#### 13.1.2 Interior cleaning

No interior cleaning is planned for the device.

#### 13.1.3 Replacing seals


The sensor's seals (particularly aseptic molded seals) must be replaced periodically.


The interval between changes depends on the frequency of the cleaning cycles, the cleaning temperature and the medium temperature.

Replacement seals (accessory part) →  123

### 13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment: →  101

### 13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

## 14 Repairs

### 14.1 General notes

#### 14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

#### 14.1.2 Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- ▶ Use only original Endress+Hauser spare parts.
- ▶ Carry out the repair according to the Installation Instructions.
- ▶ Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ▶ Document every repair and each conversion and enter them into the *W@M* life cycle management database.


### 14.2 Spare parts

*W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.



Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the **Serial number** parameter (→  96) in the **Device information** submenu.

### 14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.



Your Endress+Hauser Sales Center can provide detailed information on the services.

### 14.4 Return

The measuring device must be returned if it is in need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at

<http://www.endress.com/support/return-material>

## 14.5 Disposal

### 14.5.1 Removing the measuring device

1. Switch off the device.

#### **WARNING**

##### **Danger to persons from process conditions.**

- ▶ Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.

2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

### 14.5.2 Disposing of the measuring device

#### **WARNING**

##### **Danger to personnel and environment from fluids that are hazardous to health.**

- ▶ Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- ▶ Observe valid federal/national regulations.
- ▶ Ensure proper separation and reuse of the device components.

## 15 Accessories


Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: [www.endress.com](http://www.endress.com).

### 15.1 Device-specific accessories




#### 15.1.1 For the transmitter

Accessories	Description
Ground cable	Set, consisting of two ground cables for potential equalization.



#### 15.1.2 For the sensor

Accessories	Description
Ground disks	<p>Are used to ground the medium in lined measuring tubes to ensure proper measurement.</p> <p> For details, see Installation Instructions EA00070D</p>


### 15.2 Communication-specific accessories

Accessories	Description
Commubox FXA291	<p>Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop.</p> <p> For details, see the "Technical Information" document TI405C/07</p>
Field Xpert SFX350	<p>Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for and can be used in non-hazardous areas.</p> <p> For details, see Operating Instructions BA01202S</p>
Field Xpert SFX370	<p>Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for and can be used in the non-hazardous area and in the hazardous area.</p> <p> For details, see Operating Instructions BA01202S</p>

## 15.3 Service-specific accessories

Accessories	Description
Applicator	<p>Software for selecting and sizing Endress+Hauser measuring devices:</p> <ul style="list-style-type: none"> <li>Choice of measuring devices for industrial requirements</li> <li>Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy.</li> <li>Graphic illustration of the calculation results</li> <li>Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.</li> </ul> <p>Applicator is available:</p> <ul style="list-style-type: none"> <li>Via the Internet: <a href="https://wapps.endress.com/applicator">https://wapps.endress.com/applicator</a></li> <li>As a downloadable DVD for local PC installation.</li> </ul>
W@M	<p>W@M Life Cycle Management</p> <p>Improved productivity with information at your fingertips. Data relevant to a plant and its components is generated from the first stages of planning and during the asset's complete life cycle.</p> <p>W@M Life Cycle Management is an open and flexible information platform with online and on-site tools. Instant access for your staff to current, in-depth data shortens your plant's engineering time, speeds up procurement processes and increases plant uptime.</p> <p>Combined with the right services, W@M Life Cycle Management boosts productivity in every phase. For more information, visit <a href="http://www.endress.com/lifecyclemanagement">www.endress.com/lifecyclemanagement</a></p>
FieldCare	<p>FDT-based plant asset management tool from Endress+Hauser.</p> <p>It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.</p> <p> For details, see Operating Instructions BA00027S and BA00059S</p>
DeviceCare	<p>Tool for connecting and configuring Endress+Hauser field devices.</p> <p> For details, see Innovation brochure IN01047S</p>

## 15.4 System components

Accessories	Description
Memograph M graphic data manager	<p>The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.</p> <p> For details, see "Technical Information" TI00133R and Operating Instructions BA00247R</p>

## 16 Technical data

### 16.1 Application


The measuring device is only suitable for flow measurement of liquids with a minimum conductivity of 5  $\mu\text{S}/\text{cm}$ .

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

### 16.2 Function and system design

Measuring principle	Electromagnetic flow measurement on the basis of <i>Faraday's law of magnetic induction</i> .
---------------------	---

Measuring system	<p>The device consists of a transmitter and a sensor.</p> <p>The device is available as a compact version: The transmitter and sensor form a mechanical unit.</p> <p>For information on the structure of the device →  12</p>
------------------	--

### 16.3 Input

Measured variable	<p><b>Direct measured variables</b></p> <ul style="list-style-type: none"> <li>■ Volume flow (proportional to induced voltage)</li> <li>■ Electrical conductivity</li> </ul> <p><b>Calculated measured variables</b></p> <ul style="list-style-type: none"> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> </ul>
-------------------	---

Measuring range	<p>Typically <math>v = 0.01</math> to <math>10 \text{ m/s}</math> (<math>0.03</math> to <math>33 \text{ ft/s}</math>) with the specified accuracy</p> <p>Electrical conductivity: <math>\geq 5 \text{ }\mu\text{S}/\text{cm}</math> for liquids in general</p>
-----------------	--

*Flow characteristic values in SI units*

Nominal diameter		Recommended flow	Factory settings
[mm]	[in]	min./max. full scale value ( $v \sim 0.3/10 \text{ m/s}$ ) [dm <sup>3</sup> /min]	Low flow cut off ( $v \sim 0.04 \text{ m/s}$ ) [dm <sup>3</sup> /min]
15	½	4 to 100	0.5
25	1	9 to 300	1
32	–	15 to 500	2
40	1 ½	25 to 700	3
50	2	35 to 1 100	5

Nominal diameter		Recommended flow	Factory settings
		min./max. full scale value (v ~ 0.3/10 m/s)	Low flow cut off (v ~ 0.04 m/s)
[mm]	[in]	[dm <sup>3</sup> /min]	[dm <sup>3</sup> /min]
65	–	60 to 2 000	8
80	3	90 to 3 000	12
100	4	145 to 4 700	20
125	–	220 to 7 500	30
150	6	20 to 600 m <sup>3</sup> /h	2.5 m <sup>3</sup> /h
200	8	35 to 1 100 m <sup>3</sup> /h	5 m <sup>3</sup> /h
250	10	55 to 1 700 m <sup>3</sup> /h	7.5 m <sup>3</sup> /h
300	12	80 to 2 400 m <sup>3</sup> /h	10 m <sup>3</sup> /h
350	14	110 to 3 300 m <sup>3</sup> /h	15 m <sup>3</sup> /h
400	16	140 to 4 200 m <sup>3</sup> /h	20 m <sup>3</sup> /h
450	18	180 to 5 400 m <sup>3</sup> /h	25 m <sup>3</sup> /h
500	20	220 to 6 600 m <sup>3</sup> /h	30 m <sup>3</sup> /h
600	24	310 to 9 600 m <sup>3</sup> /h	40 m <sup>3</sup> /h

*Flow characteristic values in US units*

Nominal diameter		Recommended flow	Factory settings
		min./max. full scale value (v ~ 0.3/10 m/s)	Low flow cut off (v ~ 0.04 m/s)
[in]	[mm]	[gal/min]	[gal/min]
½	15	1.0 to 27	0.15
1	25	2.5 to 80	0.25
1 ½	40	7 to 190	0.75
2	50	10 to 300	1.25
3	80	24 to 800	2.5
4	100	40 to 1 250	4
6	150	90 to 2 650	12
8	200	155 to 4 850	15
10	250	250 to 7 500	30
12	300	350 to 10 600	45
14	350	500 to 15 000	60
16	400	600 to 19 000	60
18	450	800 to 24 000	90
20	500	1 000 to 30 000	120
24	600	1 400 to 44 000	180

**Recommended measuring range**

"Flow limit" section →  114



## Input signal

**External measured values**

To increase the accuracy of certain measured variables or to calculate the corrected volume flow, the automation system can continuously write different measured values to the measuring device:

- Operating pressure to increase accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S)
- Medium temperature to increase accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow

 Various pressure transmitters and temperature measuring devices can be ordered from Endress+Hauser: see "Accessories" section →  102

It is recommended to read in external measured values to calculate the following measured variables:

Corrected volume flow

*Digital communication*

The measured values are written from the automation system to the measuring device via EtherNet/IP.

## 16.4 Output

## Output signal

**EtherNet/IP**

<b>Standards</b>	In accordance with IEEE 802.3
------------------	-------------------------------

## Signal on alarm

Depending on the interface, failure information is displayed as follows:

**Current output 4 to 20 mA**

4 to 20 mA

<b>Failure mode</b>	Choose from: <ul style="list-style-type: none"> <li>■ 4 to 20 mA in accordance with NAMUR recommendation NE 43</li> <li>■ 4 to 20 mA in accordance with US</li> <li>■ Min. value: 3.59 mA</li> <li>■ Max. value: 22.5 mA</li> <li>■ Freely definable value between: 3.59 to 22.5 mA</li> <li>■ Actual value</li> <li>■ Last valid value</li> </ul>
---------------------	--

**Pulse/frequency/switch output**

Pulse output	
<b>Failure mode</b>	Choose from: <ul style="list-style-type: none"> <li>■ Actual value</li> <li>■ No pulses</li> </ul>
Frequency output	
<b>Failure mode</b>	Choose from: <ul style="list-style-type: none"> <li>■ Actual value</li> <li>■ 0 Hz</li> <li>■ Defined value: 0 to 12 500 Hz</li> </ul>

Switch output	
Failure mode	Choose from: <ul style="list-style-type: none"> <li>■ Current status</li> <li>■ Open</li> <li>■ Closed</li> </ul>

## EtherNet/IP

Device diagnostics	Device condition can be read out in Input Assembly
--------------------	--

## Local display

Plain text display	With information on cause and remedial measures
Backlight	Red backlighting indicates a device error.

 Status signal as per NAMUR recommendation NE 107

## Interface/protocol


- Via digital communication:  
EtherNet/IP
- Via service interface  
CDI-RJ45 service interface

Plain text display	With information on cause and remedial measures
--------------------	---

## Web server

Plain text display	With information on cause and remedial measures
--------------------	---

## Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes The following information is displayed depending on the device version: <ul style="list-style-type: none"> <li>■ Supply voltage active</li> <li>■ Data transmission active</li> <li>■ Device alarm/error has occurred</li> <li>■ EtherNet/IP network available</li> <li>■ EtherNet/IP connection established</li> </ul>  Diagnostic information via light emitting diodes
--------------------	---

Low flow cut off      The switch points for low flow cut off are user-selectable.


Galvanic isolation      The following connections are galvanically isolated from each other:

- Outputs
- Power supply

## Protocol-specific data

## Protocol-specific data

Protocol	<div><div></div><div>The CIP Networks Library Volume 1: Common Industrial Protocol</div><div></div><div>The CIP Networks Library Volume 2: EtherNet/IP Adaptation of CIP</div></div>		
Communication type	<div><div></div><div>10Base-T</div><div></div><div>100Base-TX</div></div>		
Device profile	Generic device (product type: 0x2B)		
Manufacturer ID	0x49E		
Device type ID	0x103A		
Baud rates	Automatic <sup>10</sup> / <sub>100</sub> Mbit with half-duplex and full-duplex detection		
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs		
Supported CIP connections	Max. 3 connections		
Explicit connections	Max. 6 connections		
I/O connections	Max. 6 connections (scanner)		
Configuration options for measuring device	<div><div></div><div>DIP switches on the electronics module for IP addressing</div><div></div><div>Manufacturer-specific software (FieldCare)</div><div></div><div>Add-on Profile Level 3 for Rockwell Automation control systems</div><div></div><div>Web browser</div><div></div><div>Electronic Data Sheet (EDS) integrated in the measuring device</div></div>		
Configuration of the EtherNet interface	<div><div></div><div>Speed: 10 MBit, 100 MBit, auto (factory setting)</div><div></div><div>Duplex: half-duplex, full-duplex, auto (factory setting)</div></div>		
Configuration of the device address	<div><div></div><div>DIP switches on the electronics module for IP addressing (last octet)</div><div></div><div>DHCP</div><div></div><div>Manufacturer-specific software (FieldCare)</div><div></div><div>Add-on Profile Level 3 for Rockwell Automation control systems</div><div></div><div>Web browser</div><div></div><div>EtherNet/IP tools, e.g. RSLinx (Rockwell Automation)</div></div>		
Device Level Ring (DLR)	No		
Fix Input			
RPI	5 ms to 10 s (factory setting: 20 ms)		
Exclusive Owner Multicast		Instance	Size [byte]
	Instance configuration:	0x68	398
	O → T configuration:	0x66	56
	T → O configuration:	0x64	32
Exclusive Owner Multicast		Instance	Size [byte]
	Instance configuration:	0x69	-
	O → T configuration:	0x66	56
	T → O configuration:	0x64	32
Input only Multicast		Instance	Size [byte]
	Instance configuration:	0x68	398
	O → T configuration:	0xC7	-
	T → O configuration:	0x64	32
Input only Multicast		Instance	Size [byte]
	Instance configuration:	0x69	-
	O → T configuration:	0xC7	-
	T → O configuration:	0x64	32

Input Assembly	<ul style="list-style-type: none"><li>▪ Current device diagnostics</li><li>▪ Volume flow</li><li>▪ Mass flow</li><li>▪ Corrected volume flow</li><li>▪ Totalizer 1</li><li>▪ Totalizer 2</li><li>▪ Totalizer 3</li></ul>		
Configurable Input			
RPI	5 ms to 10 s (factory setting: 20 ms)		
Exclusive Owner Multicast		Instance	Size [byte]
	Instance configuration:	0x68	398
	O → T configuration:	0x66	56
	T → O configuration:	0x65	88
Exclusive Owner Multicast		Instance	Size [byte]
	Instance configuration:	0x69	-
	O → T configuration:	0x66	56
	T → O configuration:	0x65	88
Input only Multicast		Instance	Size [byte]
	Instance configuration:	0x68	398
	O → T configuration:	0xC7	-
	T → O configuration:	0x65	88
Input only Multicast		Instance	Size [byte]
	Instance configuration:	0x69	-
	O → T configuration:	0xC7	-
	T → O configuration:	0x65	88
Configurable Input Assembly	<ul style="list-style-type: none"><li>▪ Volume flow</li><li>▪ Corrected volume flow</li><li>▪ Mass flow</li><li>▪ Electronic temperature</li><li>▪ Totalizer 1 to 3</li><li>▪ Flow velocity</li><li>▪ Volume flow unit</li><li>▪ Corrected volume flow unit</li><li>▪ Mass flow unit</li><li>▪ Temperature unit</li><li>▪ Unit totalizer 1-3</li><li>▪ Flow velocity unit</li><li>▪ Verification result</li><li>▪ Verification status</li></ul> <div> The range of options increases if the measuring device has one or more application packages.</div>		
Fix Output			
Output Assembly	<ul style="list-style-type: none"><li>▪ Activation of reset totalizers 1-3</li><li>▪ Activation of reference density compensation</li><li>▪ Activation of temperature compensation</li><li>▪ Reset totalizers 1-3</li><li>▪ External density</li><li>▪ Density unit</li><li>▪ External temperature</li><li>▪ Activation verification</li><li>▪ Start verification</li></ul>		

Configuration	
Configuration Assembly	<p>Only the most common configurations are listed below.</p> <ul style="list-style-type: none"> <li>■ Software write protection</li> <li>■ Mass flow unit</li> <li>■ Mass unit</li> <li>■ Volume flow unit</li> <li>■ Volume unit</li> <li>■ Corrected volume flow unit</li> <li>■ Corrected volume unit</li> <li>■ Density unit</li> <li>■ Reference density unit</li> <li>■ Temperature unit</li> <li>■ Pressure unit</li> <li>■ Length</li> <li>■ Totalizer 1-3: <ul style="list-style-type: none"> <li>- Assignment</li> <li>- Unit</li> <li>- Operating mode</li> <li>- Failsafe mode</li> </ul> </li> <li>■ Alarm delay</li> </ul>

## 16.5 Power supply

Terminal assignment →  31

Pin assignment, device plug →  31

Supply voltage The power unit must be tested to ensure it meets safety requirements (e.g. PELV, SELV).

### Transmitter

DC 20 to 30 V

Power consumption **Transmitter**


Order code for "Output"	Maximum Power consumption
Option N: EtherNet/IP	3.5 W

Current consumption **Transmitter**


Order code for "Output"	Maximum Current consumption	Maximum switch-on current
Option N: EtherNet/IP	145 mA	18 A (< 0.125 ms)

Power supply failure

- Totalizers stop at the last value measured.
- Depending on the device version, the configuration is retained in the device memory or in the plug-in memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

Electrical connection →  32

Potential equalization →  34

Terminals	<b>Transmitter</b> Spring terminals for wire cross-sections0.5 to 2.5 mm <sup>2</sup> (20 to 14 AWG)
Cable entries	<ul style="list-style-type: none"><li>■ Cable gland: M20 × 1.5 with cable Ø6 to 12 mm (0.24 to 0.47 in)</li><li>■ Thread for cable entry:<ul style="list-style-type: none"><li>– M20</li><li>– G ½"</li><li>– NPT ½"</li></ul></li></ul>
Cable specification	→  30


## 16.6 Performance characteristics


Reference operating conditions	<ul style="list-style-type: none"><li>■ Error limits following DIN EN 29104, in future ISO 20456</li><li>■ Water, typically +15 to +45 °C (+59 to +113 °F); 0.5 to 7 bar (73 to 101 psi)</li><li>■ Data as indicated in the calibration protocol</li><li>■ Accuracy based on accredited calibration rigs according to ISO 17025</li></ul>
Maximum measured error	<b>Error limits under reference operating conditions</b>


o.r. = of reading

**Volume flow**

- ±0.5 % o.r. ± 1 mm/s (0.04 in/s)
- Optional: ±0.2 % o.r. ± 2 mm/s (0.08 in/s)

 Fluctuations in the supply voltage do not have any effect within the specified range.

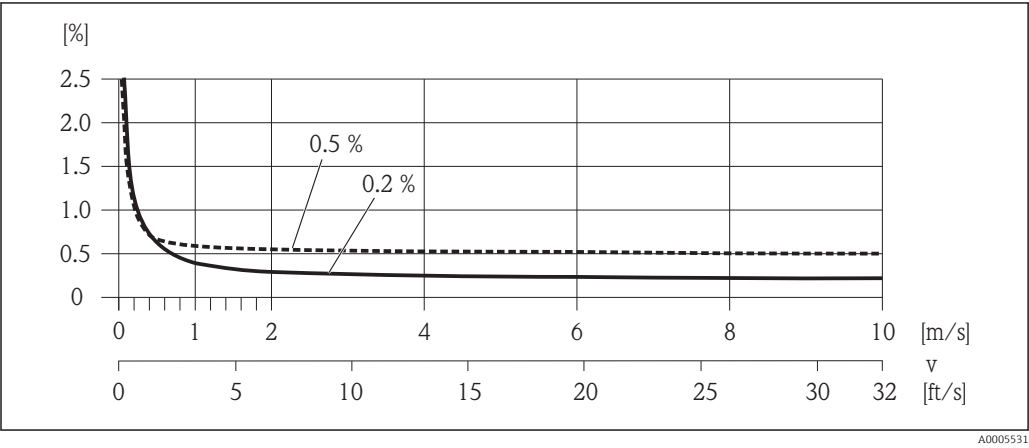

 18 Maximum measured error in % o.r.

**Electrical conductivity**  
Max. measured error not specified.

Repeatability	o.r. = of reading <b>Volume flow</b> Max. ±0.1 % o.r. ± 0.5 mm/s (0.02 in/s) <b>Electrical conductivity</b> Max. ±5 % o.r.
---------------	--

Temperature measurement response time  $T_{90} < 15 \text{ s}$

Influence of ambient temperature

#### Current output

o.r. = of reading

Temperature coefficient	Max. $\pm 0.005 \text{ % o.r./}^{\circ}\text{C}$
-------------------------	--

#### Pulse/frequency output

Temperature coefficient	No additional effect. Included in accuracy.
-------------------------	---

## 16.7 Installation

"Mounting requirements"

## 16.8 Environment

Ambient temperature range →  21

#### Temperature tables




Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.



For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Storage temperature

The storage temperature corresponds to the operating temperature range of the measuring transmitter and the appropriate measuring sensors. →  21

- Protect the measuring device against direct sunlight during storage in order to avoid unacceptably high surface temperatures.
- Select a storage location where moisture cannot collect in the measuring device as fungus or bacteria infestation can damage the liner.
- If protection caps or protective covers are mounted these should never be removed before installing the measuring device.


Degree of protection

#### Transmitter and sensor

- As standard: IP66/67, type 4X enclosure
- With the order code for "Sensor options", option **CM**: IP69 can also be ordered
- When housing is open: IP20, type 1 enclosure
- Display module: IP20, type 1 enclosure


Vibration resistance

- Vibration, sinusoidal according to IEC 60068-2-6
  - 2 to 8.4 Hz, 3.5 mm peak
  - 8.4 to 2 000 Hz, 1 g peak
- Vibration broad-band random, according to IEC 60068-2-64
  - 10 to 200 Hz,  $0.003 \text{ g}^2/\text{Hz}$
  - 200 to 2 000 Hz,  $0.001 \text{ g}^2/\text{Hz}$
  - Total: 1.54 g rms

Shock resistance	Shock, half-sine according to IEC 60068-2-27 6 ms 30 g
Impact resistance	Rough handling shocks according to IEC 60068-2-31
Mechanical load	<ul style="list-style-type: none"> <li>■ Protect the transmitter housing against mechanical effects, such as shock or impact.</li> <li>■ Never use the transmitter housing as a ladder or climbing aid.</li> </ul>
Electromagnetic compatibility (EMC)	<ul style="list-style-type: none"> <li>■ As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)</li> <li>■ Complies with emission limits for industry as per EN 55011 (Class A)</li> </ul> <div>  Details are provided in the Declaration of Conformity.                 </div>

## 16.9 Process


Medium temperature range	<ul style="list-style-type: none"> <li>■ -20 to +150 °C (-4 to +302 °F) for PFA, DN 25 to 200 (1 to 8")</li> <li>■ -20 to +180 °C (-4 to +356 °F) for PFA high-temperature, DN 25 to 200 (1 to 8")</li> <li>■ -40 to +130 °C (-40 to +266 °F) for PTFE, DN 15 to 600 (½ to 24")</li> </ul>
--------------------------	--

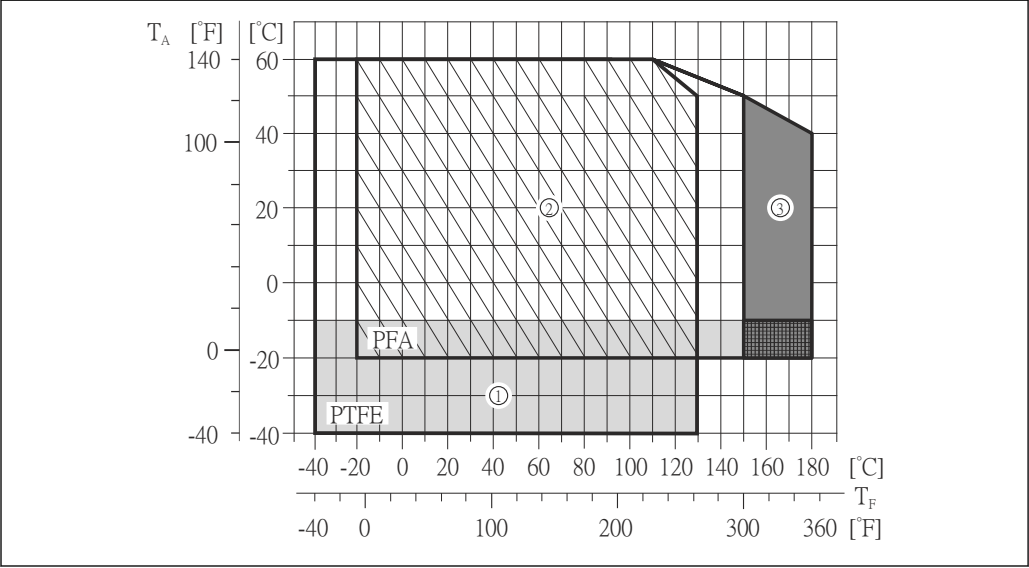

A0019742

- $T_A$  Ambient temperature
- $T_F$  Medium temperature
- 1 Gray area: the ambient and fluid temperature range of -10 to -40 °C (-14 to -40 °F) applies to stainless flanges only
  - 2 Hatched area: harsh environment and IP68 only up to +130 °C (+266 °F)
  - 3 Dark-gray area: high-temperature version with insulation

Conductivity	≥ 5 µS/cm for liquids in general. Stronger filter damping is required for very low conductivity values.
--------------	---

Pressure-temperature ratings	<div>  An overview of the pressure-temperature ratings for the process connections is provided in the "Technical Information" document                 </div>
------------------------------	--



## Pressure tightness

"- " = no specifications possible

*Liner: PFA*

Nominal diameter		Limit values for absolute pressure in [mbar] ([psi]) for fluid temperatures:		
[mm]	[in]	+25 °C (+77 °F)	+80 °C (+176 °F)	+100 to +180 °C (+212 to +356 °F)
25	1	0 (0)	0 (0)	0 (0)
32	–	0 (0)	0 (0)	0 (0)
40	1 ½	0 (0)	0 (0)	0 (0)
50	2	0 (0)	0 (0)	0 (0)
65	–	0 (0)	–	0 (0)
80	3	0 (0)	–	0 (0)
100	4	0 (0)	–	0 (0)
125	–	0 (0)	–	0 (0)
150	6	0 (0)	–	0 (0)
200	8	0 (0)	–	0 (0)

*Liner: PTFE*

Nominal diameter		Limit values for absolute pressure in [mbar] ([psi]) for fluid temperatures:			
[mm]	[in]	+25 °C (+77 °F)	+80 °C (+176 °F)	+100 °C (+212 °F)	+130 °C (+266 °F)
15	½	0 (0)	0 (0)	0 (0)	100 (1.45)
25	1	0 (0)	0 (0)	0 (0)	100 (1.45)
32	–	0 (0)	0 (0)	0 (0)	100 (1.45)
40	1 ½	0 (0)	0 (0)	0 (0)	100 (1.45)
50	2	0 (0)	0 (0)	0 (0)	100 (1.45)
65	–	0 (0)	–	40 (0.58)	130 (1.89)
80	3	0 (0)	–	40 (0.58)	130 (1.89)
100	4	0 (0)	–	135 (1.96)	170 (2.47)
125	–	135 (1.96)	–	240 (3.48)	385 (5.58)
150	6	135 (1.96)	–	240 (3.48)	385 (5.58)
200	8	200 (2.90)	–	290 (4.21)	410 (5.95)
250	10	330 (4.79)	–	400 (5.80)	530 (7.69)
300	12	400 (5.80)	–	500 (7.25)	630 (9.14)
350	14	470 (6.82)	–	600 (8.70)	730 (10.6)
400	16	540 (7.83)	–	670 (9.72)	800 (11.6)
450	18	No negative pressure permitted!			
500	20				
600	24				

## Flow limit

The diameter of the pipe and the flow rate determine the nominal diameter of the sensor. The optimum velocity of flow is between 2 to 3 m/s (6.56 to 9.84 ft/s). Also match the velocity of flow (v) to the physical properties of the fluid:


- $v < 2 \text{ m/s}$  (6.56 ft/s): for abrasive fluids (e.g. potter's clay, lime milk, ore slurry)
- $v > 2 \text{ m/s}$  (6.56 ft/s): for fluids producing buildup (e.g. wastewater sludge)

**i** A necessary increase in the flow velocity can be achieved by reducing the sensor nominal diameter.


**i** For an overview of the full scale values for the measuring range, see the "Measuring range" section → 103

## Pressure loss

- No pressure loss occurs if the sensor is installed in a pipe with the same nominal diameter.
- Pressure losses for configurations incorporating adapters according to DIN EN 545 → 22

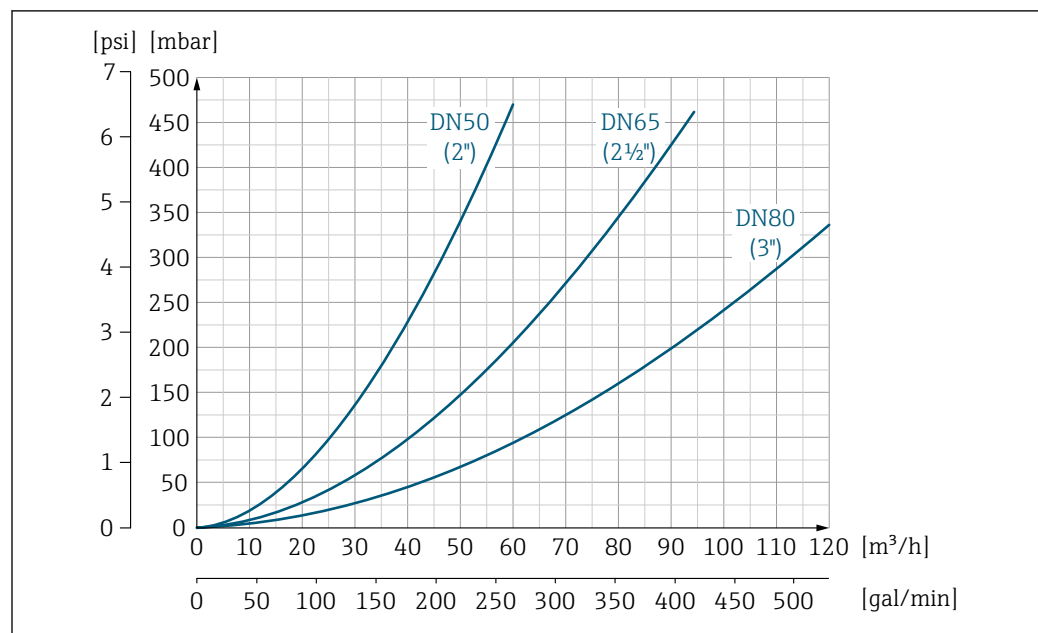

19 Pressure loss DN 50 to 80 (2 to 3") in the case of order code for "Design", option C "Insertion length short ISO/DVGW to DN300, without inlet/outlet runs, constricted meas.tube"

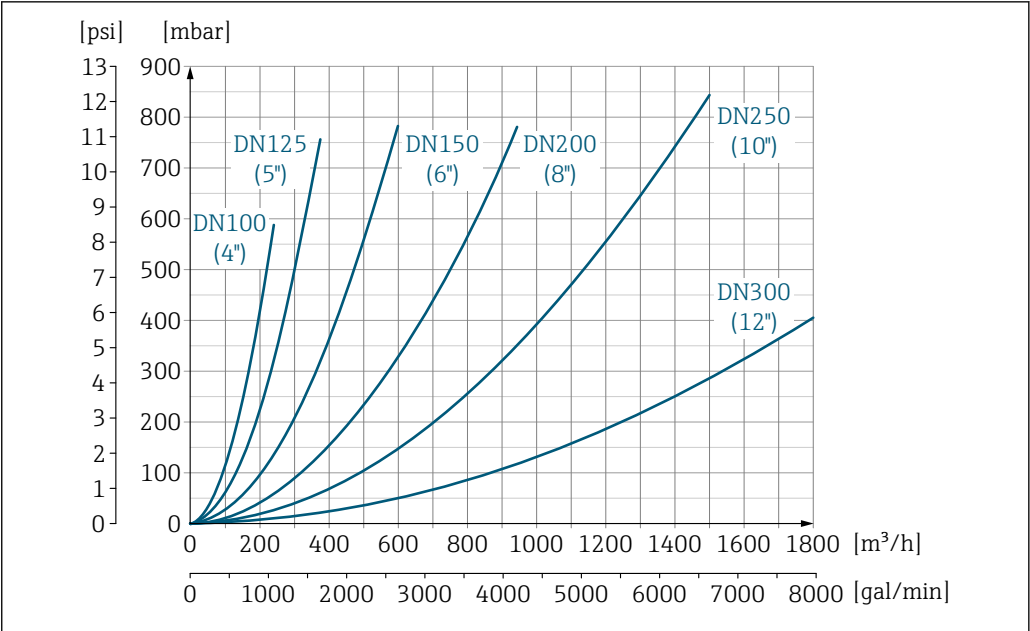

20 Pressure loss DN 100 to 300 (4 to 12") in the case of order code for "Design", option C "Insertion length short ISO/DVGW to DN300, without inlet/outlet runs, constricted meas.tube"

System pressure → 22

Vibrations → 22

16.10 Mechanical construction

Design, dimensions For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

Weight All values (weight exclusive of packaging material) refer to devices for standard pressure ratings. Weight specifications including transmitter: order code for "Housing", option A "Compact, aluminum coated".  
Different values due to different transmitter versions:

Compact version

- Including the transmitter
- High-temperature version + 1.5 kg (3.31 lb)
- Weight specifications apply to standard pressure ratings and without packaging material.

Weight in SI units

Nominal diameter		EN (DIN), AS <sup>1)</sup>		ASME		JIS	
[mm]	[in]	Pressure rating	[kg]	Pressure rating	[kg]	Pressure rating	[kg]
15	½	PN 40	4.5	Class 150	4.5	10K	4.5
25	1	PN 40	5.3	Class 150	5.3	10K	5.3
32	–	PN 40	6	Class 150	–	10K	5.3
40	1 ½	PN 40	7.4	Class 150	7.4	10K	6.3

Nominal diameter		EN (DIN), AS <sup>1)</sup>		ASME		JIS	
[mm]	[in]	Pressure rating	[kg]	Pressure rating	[kg]	Pressure rating	[kg]
50	2	PN 40	8.6	Class 150	8.6	10K	7.3
65	–	PN 16	10	Class 150	–	10K	9.1
80	3	PN 16	12	Class 150	12	10K	10.5
100	4	PN 16	14	Class 150	14	10K	12.7
125	–	PN 16	19.5	Class 150	–	10K	19
150	6	PN 16	23.5	Class 150	23.5	10K	22.5
200	8	PN 10	43	Class 150	43	10K	39.9
250	10	PN 10	63	Class 150	73	10K	67.4
300	12	PN 10	68	Class 150	108	10K	70.3
350	14	PN 10	103	Class 150	173	10K	79
400	16	PN 10	118	Class 150	203	10K	100
450	18	PN 10	159	Class 150	253	10K	128
500	20	PN 10	154	Class 150	283	10K	142
600	24	PN 10	206	Class 150	403	10K	188

1) For flanges to AS, only DN 25 and 50 are available.

#### Weight in US units


Nominal diameter		ASME	
[mm]	[in]	Pressure rating	[lbs]
15	½	Class 150	9.92
25	1	Class 150	11.7
40	1 ½	Class 150	16.3
50	2	Class 150	19.0
80	3	Class 150	26.5
100	4	Class 150	30.9
150	6	Class 150	51.8
200	8	Class 150	94.8
250	10	Class 150	161.0
300	12	Class 150	238.1
350	14	Class 150	381.5
400	16	Class 150	447.6
450	18	Class 150	557.9
500	20	Class 150	624.0
600	24	Class 150	888.6

Measuring tube  
specification


Nominal diameter		Pressure rating					Process connection internal diameter			
		EN (DIN)	ASME	AS 2129	AS 4087	JIS	PFA		PTFE	
[mm]	[in]	[bar]	[psi]	[bar]	[bar]	[bar]	[mm]	[in]	[mm]	[in]
15	½	PN 40	Class 150	–	–	20K	–	–	15	0.59
25	1	PN 40	Class 150	Table E	–	20K	23	0.91	26	1.02
32	–	PN 40	–	–	–	20K	32	1.26	35	1.38
40	1 ½	PN 40	Class 150	–	–	20K	36	1.42	41	1.61
50	2	PN 40	Class 150	Table E	PN 16	10K	48	1.89	52	2.05
65	–	PN 16	–	–	–	10K	63	2.48	67	2.64
80	3	PN 16	Class 150	–	–	10K	75	2.95	80	3.15
100	4	PN 16	Class 150	–	–	10K	101	3.98	104	4.09
125	–	PN 16	–	–	–	10K	126	4.96	129	5.08
150	6	PN 16	Class 150	–	–	10K	154	6.06	156	6.14
200	8	PN 10	Class 150	–	–	10K	201	7.91	202	7.95
250	10	PN 10	Class 150	–	–	10K	–	–	256	10.1
300	12	PN 10	Class 150	–	–	10K	–	–	306	12.0
350	14	PN 10	Class 150	–	–	10K	–	–	337	13.3
400	16	PN 10	Class 150	–	–	10K	–	–	387	15.2
450	18	PN 10	Class 150	–	–	10K	–	–	432	17.0
500	20	PN 10	Class 150	–	–	10K	–	–	487	19.2
600	24	PN 10	Class 150	–	–	10K	–	–	593	23.3


## Materials

## Transmitter housing

- Order code for "Housing", option **A** "Compact, aluminum coated":  
Aluminum, AlSi10Mg, coated
- Window material for optional local display (→  119):  
For order code for "Housing", option **A**: glass

## Cable entries/cable glands

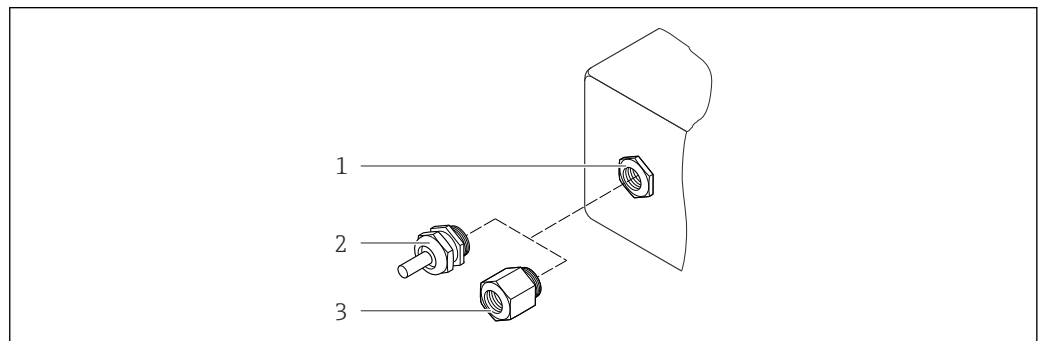

 21 Possible cable entries/cable glands

- 1 Female thread M20 × 1.5
- 2 Cable gland M20 × 1.5
- 3 Adapter for cable entry with internal thread G ½" or NPT ½"

A0020640

Order code for "Housing", option A "Compact, coated aluminum"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Nickel-plated brass
Adapter for cable entry with internal thread G ½"	
Adapter for cable entry with internal thread NPT ½"	

### Device plug

Electrical connection	Material
Plug M12x1	<ul style="list-style-type: none"> <li>Socket: Stainless steel, 1.4404 (316L)</li> <li>Contact housing: Polyamide</li> <li>Contacts: Gold-plated brass</li> </ul>

### Sensor housing

- DN 15 to 300 (½ to 12"): coated aluminum AlSi10Mg
- DN 350 to 600 (14 to 24"): carbon steel with protective varnish

### Measuring tubes

Stainless steel, 1.4301/304/1.4306/304L; for flanges made of carbon with Al/Zn protective coating (DN 15 to 300 (½ to 12")) or protective varnish (DN 350 to 600 (14 to 24"))

### Liner

- PFA
- PTFE

### Process connections

EN 1092-1 (DIN 2501)

Stainless steel, 1.4571 (F316L); carbon steel, E250C<sup>1)</sup>/S235JRG2/P245GH

ASME B16.5

Stainless steel, F316L; carbon steel, A105<sup>1)</sup>

JIS B2220

Stainless steel, 1.0425 (F316L)<sup>1)</sup>; carbon steel, A105/A350 LF2

AS 2129 Table E

- DN 25 (1"): carbon steel, A105/S235JRG2
- DN 40 (1 ½"): carbon steel, A105/S275JR

AS 4087 PN 16

Carbon steel, A105/S275JR

### Electrodes

Stainless steel, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); platinum; tantalum; titanium

### Seals

As per DIN EN 1514-1, form IBC

1) DN 15 to 300 (½ to 12") with Al/Zn protective coating; DN 350 to 600 (14 to 24") with protective varnish

**Accessories***Ground disks*

Stainless steel, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); tantalum; titanium

**Fitted electrodes**

Measuring electrodes, reference electrodes and electrodes for empty pipe detection:

- Standard: stainless steel, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); tantalum, titanium
- Optional: only platinum measuring electrodes

**Process connections**

- EN 1092-1 (DIN 2501): DN ≤ 300 (12") Form A, DN ≥ 350 (14") Form B; dimensions DN 65 PN 16 and only as per EN 1092-1
- ASME B16.5
- JIS B2220
- AS 2129 Table E
- AS 4087 PN 16



For information on the different materials used in the process connections → 118

**Surface roughness**

Stainless steel electrodes, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); platinum; tantalum; titanium:

≤ 0.3 to 0.5 µm (11.8 to 19.7 µin)

(All data relate to parts in contact with fluid)

Liner with PFA:

≤ 0.4 µm (15.7 µin)

(All data relate to parts in contact with fluid)

## 16.11 Operability

**Local display**

The local display is only available with the following device order code:

Order code for "Display; operation", option **B**: 4-line; illuminated, via communication

**Display element**

- 4-line liquid crystal display with 16 characters per line.
- White background lighting; switches to red in event of device errors.
- Format for displaying measured variables and status variables can be individually configured.
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F). The readability of the display may be impaired at temperatures outside the temperature range.

**Disconnecting the local display from the main electronics module**

In the case of the "Compact, aluminum coated" housing version, the local display must only be disconnected manually from the main electronics module. In the case of the "Compact, hygienic, stainless" and "Ultra-compact, hygienic, stainless" housing versions, the local display is integrated in the housing cover and is disconnected from the main electronics module when the housing cover is opened.

*"Compact, aluminum coated" housing version*

The local display is plugged onto the main electronics module. The electronic connection between the local display and main electronics module is established via a connecting cable.

For some work performed on the measuring device (e.g. electrical connection), it is advisable to disconnect the local display from the main electronics module:

1. Press in the side latches of the local display.
2. Remove the local display from the main electronics module. Pay attention to the length of the connecting cable when doing so.


Once the work is completed, plug the local display back on.

## Remote operation

### Via EtherNet/IP network

This communication interface is available in device versions with EtherNet/IP.

#### Star topology

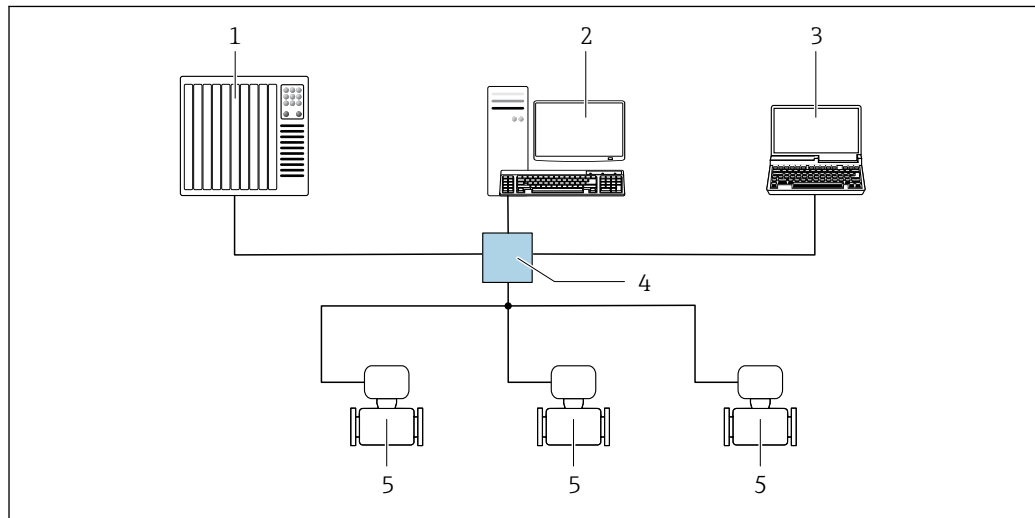

A0032078

22 Options for remote operation via EtherNet/IP network: star topology


- 1 Automation system, e.g. "RSLogix" (Rockwell Automation)
- 2 Workstation for measuring device operation: with Custom Add-On Profile for "RSLogix 5000" (Rockwell Automation) or with Electronic Data Sheet (EDS)
- 3 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP"
- 4 Ethernet switch
- 5 Measuring device

## Service interface

### Via service interface (CDI-RJ45)



EtherNet/IP

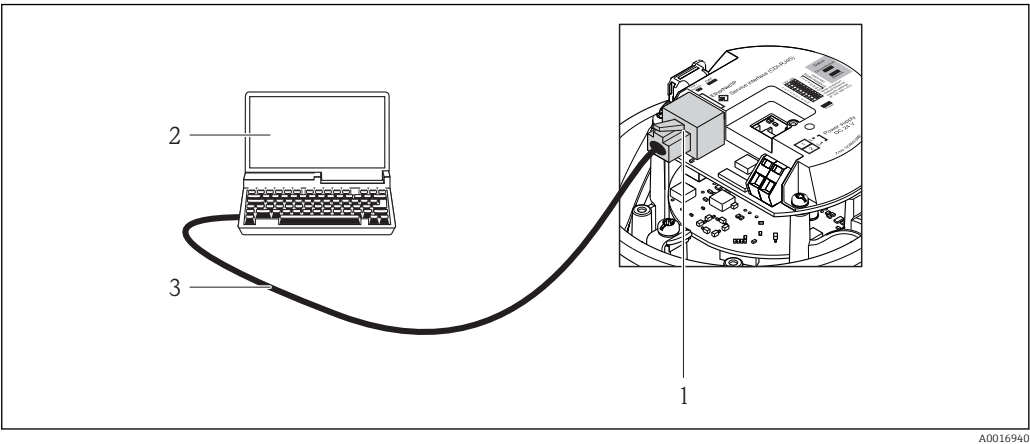

23 Connection for order code for "Output", option N: EtherNet/IP

- 1 Service interface (CDI -RJ45) and EtherNet/IP interface of the measuring device with access to the integrated Web server
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

Languages	<p>Can be operated in the following languages:</p> <ul style="list-style-type: none"><li>■ Via "FieldCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese</li><li>■ Via Web browser English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Bahasa (Indonesian), Vietnamese, Czech, Swedish, Korean</li></ul>
-----------	--

## 16.12 Certificates and approvals

CE mark	<p>The measuring system is in conformity with the statutory requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.</p> <p>Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.</p>
C-Tick symbol	<p>The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".</p>
Ex approval	<p>The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.</p>
EtherNet/IP certification	<p>The measuring device is certified and registered by the ODVA (Open Device Vendor Association). The measuring system meets all the requirements of the following specifications:</p> <ul style="list-style-type: none"><li>■ Certified in accordance with the ODVA Conformance Test</li><li>■ EtherNet/IP Performance Test</li><li>■ EtherNet/IP PlugFest compliance</li><li>■ The device can also be operated with certified devices of other manufacturers (interoperability)</li></ul>

## Pressure Equipment Directive

- With the identification PED/G1/x (x = category) on the sensor nameplate, Endress+Hauser confirms conformity with the "Essential Safety Requirements" specified in Appendix I of the Pressure Equipment Directive 2014/68/EC.
- Devices not bearing this marking (PED) are designed and manufactured according to good engineering practice. They meet the requirements of Art. 4, Par. 3 of the Pressure Equipment Directive 2014/68/EU. The range of application is indicated in tables 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EC.

## Other standards and guidelines

- EN 60529  
Degrees of protection provided by enclosures (IP code)
- EN 61010-1  
Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements
- IEC/EN 61326  
Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).
- NAMUR NE 21  
Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment
- NAMUR NE 32  
Data retention in the event of a power failure in field and control instruments with microprocessors
- NAMUR NE 43  
Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.
- NAMUR NE 53  
Software of field devices and signal-processing devices with digital electronics
- NAMUR NE 105  
Specifications for integrating fieldbus devices in engineering tools for field devices
- NAMUR NE 107  
Self-monitoring and diagnosis of field devices
- NAMUR NE 131  
Requirements for field devices for standard applications

## 16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: [www.endress.com](http://www.endress.com).



## Cleaning

Package	Description
Electrode cleaning circuit (ECC)	The electrode cleaning circuit (ECC) function has been developed to have a solution for applications where magnetite ( $\text{Fe}_3\text{O}_4$ ) deposits frequently occur (e.g. hot water). Since magnetite is highly conductive this build up leads to measuring errors and ultimately to the loss of signal. The application package is designed to AVOID build up of highly conductive matter and thin layers (typical of magnetite).


## Heartbeat Technology

Package	Description
Heartbeat Verification +Monitoring	<p><b>Heartbeat Verification</b> Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment".</p> <ul style="list-style-type: none"> <li>Functional testing in the installed state without interrupting the process.</li> <li>Traceable verification results on request, including a report.</li> <li>Simple testing process via local operation or other operating interfaces.</li> <li>Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications.</li> <li>Extension of calibration intervals according to operator's risk assessment.</li> </ul> <p><b>Heartbeat Monitoring</b> Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:</p> <ul style="list-style-type: none"> <li>Draw conclusions - using these data and other information - about the impact process influences (such as corrosion, abrasion, buildup etc.) have on the measuring performance over time.</li> <li>Schedule servicing in time.</li> <li>Monitor the process or product quality, e.g. gas pockets.</li> </ul>

## 16.14 Accessories


 Overview of accessories available for order →  101

## 16.15 Supplementary documentation

-  For an overview of the scope of the associated Technical Documentation, refer to the following:
- The *W@M Device Viewer* : Enter the serial number from the nameplate ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer))
  - The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

## Standard documentation

### Brief Operating Instructions

 Brief Operating Instructions containing all the important information for standard commissioning is enclosed with the device.

### Operating Instructions

Measuring device	Documentation code				
	HART	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET
Promag P 100	BA01172D	BA01238D	BA01176D	BA01174D	BA01422D

### Description of device parameters

Measuring device	Documentation code				
	HART	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET
Promag 100	GP01038D	GP01039D	GP01040D	GP01041D	GP01042D

## Supplementary device-dependent documentation



### Safety Instructions

Contents	Documentation code
ATEX/IECEX Ex nA	XA01090D

Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01056D
Heartbeat Technology	SD01149D

Installation Instructions

Contents	Comment
Installation instructions for spare part sets and accessories	<ul style="list-style-type: none"><li>▪ Access the overview of all the available spare part sets via <i>W@M Device Viewer</i> →  99</li><li>▪ Accessories available for order with Installation Instructions →  101</li></ul>

# Index

## A

Adapters	22
Adapting the diagnostic behavior	83
Ambient temperature	
Influence	111
Ambient temperature range	21
Application	103
Applicator	103
Approvals	121

## C

C-Tick symbol	121
Cable entries	
Technical data	110
Cable entry	
Degree of protection	37
CE mark	10, 121
Certificates	121
Checklist	
Post-connection check	38
Post-installation check	28
Cleaning	
Exterior cleaning	98
Interior cleaning	98
Commissioning	56
Advanced settings	64
Configuring the measuring device	56
Conductivity	112
Connecting cable	30
Connecting the measuring device	32
Connection	
see Electrical connection	
Connection examples, potential equalization	34
Connection preparations	32
Connection tools	30
Current consumption	109
Cyclic data transmission	52

## D

Declaration of Conformity	10
Define access code	71
Degree of protection	37, 111
Design	
Measuring device	12
Designated use	9
Device components	12
Device description files	51
Device documentation	
Supplementary documentation	8
Device locking, status	73
Device name	
Sensor	15
Transmitter	14
Device repair	99
Device revision	51
Device type ID	51

DeviceCare	50
Diagnostic information	
Communication interface	83
Design, description	81, 82
DeviceCare	82
FieldCare	82
Light emitting diodes	80
Overview	84
Remedial measures	84
Web browser	80
Diagnostic list	93
DIP switches	
see Write protection switch	
Disabling write protection	71
Display values	
For locking status	73
Disposal	100
Document	
Function	6
Symbols used	6
Document function	6
Down pipe	19

## E

ECC	68
Electrical connection	
Commubox FXA291	48
Degree of protection	37
Measuring device	30
Operating tools	
Via Ethernet network	47, 120
Via service interface (CDI-RJ45)	48, 120
Via service interface (CDI)	48
RSLogix 5000	47, 120
Web server	48, 120
Electromagnetic compatibility	112
Enabling write protection	71
Endress+Hauser services	
Maintenance	98
Repair	99
Environment	
Ambient temperature	21
Impact resistance	112
Mechanical load	112
Shock resistance	112
Storage temperature	111
Vibration resistance	111
Error messages	
see Diagnostic messages	
EtherNet/IP	
Diagnostic information	83
EtherNet/IP certification	121
Event list	93
Event logbook	93
Ex approval	121

Extended order code		Installation dimensions	21
Sensor	15	Interior cleaning	98
Transmitter	14		
Exterior cleaning	98	<b>L</b>	
<b>F</b>		Languages, operation options	121
Field of application		Low flow cut off	106
Residual risks	10		
FieldCare	48	<b>M</b>	
Device description file	51	Main electronics module	12
Establishing a connection	49	Maintenance tasks	98
Function	48	Replacing seals	98
User interface	50	Manufacturer ID	51
Filtering the event logbook	94	Manufacturing date	14, 15
Firmware		Materials	117
Release date	51	Maximum measured error	110
Version	51	Measured values	
Firmware history	97	Calculated	103
Fitted electrodes	119	Measured	103
Fix assembly	83	see Process variables	
Flow direction	20	Measuring and test equipment	98
Flow limit	114	Measuring device	
Function check	56	Configuration	56
Functions		Conversion	99
see Parameter		Design	12
<b>G</b>		Disposal	100
Galvanic isolation	106	Integrating via communication protocol	51
		Mounting the sensor	23
<b>H</b>		Mounting the ground cable/ground disks	24
Hardware write protection	71	Mounting the seals	24
Heavy sensors	20	Screw tightening torques	24
		Preparing for electrical connection	32
<b>I</b>		Preparing for mounting	23
I/O electronics module	12, 32	Removing	100
Identifying the measuring device	13	Repairs	99
Impact resistance	112	Measuring principle	103
Incoming acceptance	13	Measuring range	103
Influence		Measuring system	103
Ambient temperature	111	Measuring tube specification	117
Information on the document	6	Mechanical load	112
Inlet runs	21	Medium temperature range	112
Input	103	Menu	
Inspection		Diagnostics	92
Installation	28	Operation	73
Received goods	13	Setup	56, 57
Inspection check		Menus	
Connection	38	For measuring device configuration	56
Installation	19	For specific settings	64
Installation conditions		Mounting dimensions	
Adapters	22	see Installation dimensions	
Down pipe	19	Mounting location	19
Heavy sensors	20	Mounting preparations	23
Inlet and outlet runs	21	Mounting tools	23
Installation dimensions	21		
Mounting location	19	<b>N</b>	
Orientation	20	Nameplate	
Partially filled pipe	19	Sensor	15
System pressure	22	Transmitter	14
Vibrations	22	<b>O</b>	
		Operable flow range	104

Operating menu	
Menus, submenus	40
Structure	40
Submenus and user roles	41
Operating philosophy	41
Operation	73
Operation options	39
Operational safety	10
Order code	14, 15
Orientation (vertical, horizontal)	20
Outlet runs	2
Output	105
Output signal	105
<b>P</b>	
Packaging disposal	18
Parameter settings	
Administration (Submenu)	69
Communication (Submenu)	59
Device information (Submenu)	95
Diagnostics (Menu)	92
Display (Submenu)	66
Display (Wizard)	60
Electrode cleaning circuit (Submenu)	68
Empty pipe detection (Wizard)	63
Low flow cut off (Wizard)	61
Process variables (Submenu)	74
Sensor adjustment (Submenu)	64
Setup (Menu)	57
Simulation (Submenu)	70
System units (Submenu)	57
Totalizer (Submenu)	75
Totalizer 1 to n (Submenu)	64
Totalizer handling (Submenu)	76
Web server (Submenu)	46
Partially filled pipe	19
Performance characteristics	110
Post-connection check (checklist)	38
Post-installation check	56
Post-installation check (checklist)	28
Potential equalization	34
Power consumption	109
Power supply failure	109
Pressure Equipment Directive	122
Pressure loss	114
Pressure tightness	113
Pressure-temperature ratings	112
Process conditions	
Conductivity	112
Flow limit	114
Medium temperature	112
Pressure loss	114
Pressure tightness	113
Process connections	119
Product safety	10
Protecting parameter settings	71
<b>R</b>	
Reading measured values	74

Reading out diagnostic information, EtherNet/IP . . . . .	83
Recalibration . . . . .	98
Reference operating conditions . . . . .	110
Registered trademarks . . . . .	8
Remote operation . . . . .	120
Repair of a device . . . . .	99
Repairs . . . . .	99
Notes . . . . .	99
Repeatability . . . . .	110
Replacement	
Device components . . . . .	99
Replacing seals . . . . .	98
Requirements for personnel . . . . .	9
Return . . . . .	99
<b>S</b>	
Safety . . . . .	9
Screw tightening torques . . . . .	24
Sensor	
Mounting . . . . .	23
Serial number . . . . .	14, 15
Setting the operating language . . . . .	56
Settings	
Adapting the measuring device to the process conditions . . . . .	76
Administration . . . . .	69
Advanced display configurations . . . . .	66
Communication interface . . . . .	59
Device reset . . . . .	95
Device tag . . . . .	57
Electrode cleaning circuit (ECC) . . . . .	68
Empty pipe detection (EPD) . . . . .	63
Low flow cut off . . . . .	61
Onsite display . . . . .	60
Operating language . . . . .	56
Resetting the totalizer . . . . .	76
Sensor adjustment . . . . .	64
Simulation . . . . .	70
System units . . . . .	57
Totalizer . . . . .	64
Totalizer reset . . . . .	76
Shock resistance . . . . .	112
Signal on alarm . . . . .	105
Software release . . . . .	51
Spare part . . . . .	99
Spare parts . . . . .	99
Special connection instructions . . . . .	36
Standards and guidelines . . . . .	122
Status signals . . . . .	81
Storage conditions . . . . .	17
Storage temperature . . . . .	17
Storage temperature range . . . . .	111
Structure	
Operating menu . . . . .	40
Submenu	
Administration . . . . .	69
Advanced setup . . . . .	64
Communication . . . . .	56, 59
Device information . . . . .	95

Display	66
Electrode cleaning circuit	68
Event list	93
Measured values	74
Overview	41
Process variables	74
Sensor adjustment	64
Simulation	70
System units	57
Totalizer	75
Totalizer 1 to n	64
Totalizer handling	76
Web server	46
Supplementary documentation	123
Supply voltage	109
Surface roughness	119
System design	
Measuring system	103
see Measuring device design	
System file	
Release date	51
Source	51
Version	51
System integration	51
System pressure	22

## T

Technical data, overview	103
Temperature measurement response time	111
Temperature range	
Storage temperature	17
Terminal assignment	31, 32
Terminals	110
Tools	
Electrical connection	30
For mounting	23
Transport	17
Totalizer	
Configuration	64
Transmitter	
Connecting the signal cables	32
Turning the display module	28
Transporting the measuring device	17
Troubleshooting	
General	78
Turning the display module	28

## U

Use of the measuring device	
Borderline cases	9
Incorrect use	9
see Designated use	
User interface	
Current diagnostic event	92
Previous diagnostic event	92
User roles	41

## V

Version data for the device	51
-----------------------------	----

Vibration resistance	111
Vibrations	22

## W

W@M	98, 99
W@M Device Viewer	13, 99
Weight	
Compact version	115
Transport (notes)	17
Wizard	
Define access code	71
Display	60
Empty pipe detection	63
Low flow cut off	61
Workplace safety	10
Write protection	
Via access code	71
Via write protection switch	71
Write protection switch	71





[www.addresses.endress.com](http://www.addresses.endress.com)

---