Operating Instructions Gammapilot M FMG60 PROFIBUS PA

Radiometric measurement







Gammapilot M - Quick Guide



Contents of these Operating Instructions

These Operating Instructions describe how to install and commission the radiometric compact transmitter Gammapilot M. All of the functions that are necessary for standard measuring tasks are included. In addition, the Gammapilot M provides many additional functions for optimizing the measuring point and for converting the measured value. These functions are not described in these Operating Instructions.

An overview of the operating menu is provided in the Appendix \rightarrow \bigcirc 94

A detailed description of all the device functions is provided in the "Gammapilot M - Description of Device Functions" document, which can be found on the CD-ROM supplied.

BA00287F/00/EN

Table of contents

1	About this document	7
1.1 1.2	Document function	7 7
	1.2.1Safety symbols1.2.2Electrical symbols	7 7
	1.2.3 Tool symbols1.2.4 Symbols for	7
	1.2.5Symbols in graphics	8 8
2	Basic safety instructions	9
2.1	Requirements for the personnel	9
2.2 2 3	Designated use	9
2.4	Hazardous area	9
2.5	Radiation protection 10	0
	2.5.1 Basic radiation protection	~
26	guidelines 1	1
2.0	Operational safety	1 1
2.8	Product safety 1	1
3	Product description 12	3
3.1	Product design 1	3
2 2	3.1.1 Components of the FMG60 1	3
5.4	3.2.1 Namenlate of the device 14	4 4
	3.2.2 Supplementary nameplate	4
3.3	Scope of delivery 1	4
3.4	Accompanying documentation 1	5
	3.4.1 Operating Instructions (BA00236F/00/EN) 1	5
	3.4.2Description of Device Functions (BA00287F/00/EN)	5
	3.4.3 Safety instructions 1	5
3.5	Certificates and approvals	5
0.د		ر
4	Mounting 10	б
4.1	Incoming acceptance, product identification,	
	transport, storage	6
	4.1.1 Incoming acceptance	ь 6
	4.1.3 Transport	6
	4.1.4 Storage 1	6
4.2	Installation conditions 1	6
	4.2.1 Dimensions, weight 14.2.2 Installation conditions for level	6
	measurement 1	7
	4.2.3 Installation conditions for point level detection	8

	4.2.4	Installation conditions for density	10				
	() [and concentration measurements	19				
	4.2.5	Empty pipe detection	20				
	4.2.0		21				
4.2	Mator		21 21				
4.)	4 2 1	Mounting position and position of	21				
	4.2.1	the cooling water pozzles	22				
	432	Required flow	2) 22				
44	Post-ing	stallation check	22				
1. 1	1 051 111		21				
5	Wirind	a	25				
51	Connect	tion compartments	25				
5.1 5.2	Cable or	ntries	25				
53	Termin:	al assignment	26				
5.4	Fieldhu	s connectors	28				
2.1	5 4 1	Pin assignment for connector M12	28				
	5.4.2	Pin assignment for connector 7/8"	28				
5.5	PROFIB	US PA cable specifications	28				
5.6	Supply	voltage	29				
5.7	Potentia	al equalization	29				
5.8	Wiring	in connection compartment 1	30				
5.9	Wiring	in connection compartment 2	31				
5.10	Connect	ting the remote display and operating					
	unit FH	X40	31				
5.11	Wiring	for cascade mode	33				
5.12	Post-connection check 3						
6	Opera	tion	34				
6 6.1	Opera Overvie	tion	34				
6 6.1	Opera Overvie 6.1.1	tion	34 34 34				
6 6.1 6.2	Opera Overvie 6.1.1 Display	tion	34 34 34 35				
6 6.1 6.2	Opera Overvie 6.1.1 Display 6.2.1	tion w of the operating options PROFIBUS PA operation Display and operating elements	34 34 34 35 35				
6 6.1 6.2	Opera Overviee 6.1.1 Display 6.2.1 6.2.2	tion	34 34 35 35 35 36				
6 6.1 6.2 6.3	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna	tion	34 34 35 35 36 38				
6 6.1 6.2	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1	tion	34 34 35 35 36 38 38				
6 6.1 6.2 6.3 6.4	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1 Locking	tion	34 34 35 35 36 38 38 38				
6 6.1 6.2 6.3 6.4	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1 Locking 6.4.1	tion	34 34 35 35 36 38 38 38 38 38				
6 6.1 6.2 6.3 6.4	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1 Locking 6.4.1 6.4.2	tion	34 34 35 35 36 38 38 38 38 38 38 38				
6 6.1 6.2 6.3 6.4	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1 Locking 6.4.1 6.4.2 Resettin	tion	34 34 35 35 36 38 38 38 38 38 39 39				
6 6.1 6.2 6.3 6.4 6.5 6.6	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1 Locking 6.4.1 6.4.2 Resettir PROFIB	tion	34 34 35 35 36 38 38 38 38 38 39 39 39				
6 6.1 6.2 6.3 6.4 6.5 6.6	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1 Locking 6.4.1 6.4.2 Resettin PROFIB 6.6.1	tion	34 34 35 35 36 38 38 38 38 38 38 39 39 39 39				
6 6.1 6.2 6.3 6.4 6.5 6.6	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1 Locking 6.4.1 6.4.2 Resettir PROFIB 6.6.1 6.6.2	tion	34 34 35 35 36 38 38 38 38 38 39 39 39 40				
6 6.1 6.2 6.3 6.4 6.5 6.6	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1 Locking 6.4.1 6.4.2 Resettir PROFIB 6.6.1 6.6.2 6.6.3	tion	34 34 35 35 36 38 38 38 39 39 39 39 39 40 41				
6 6.1 6.2 6.3 6.4 6.5 6.6	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1 Locking 6.4.1 6.4.2 Resettir PROFIB 6.6.1 6.6.2 6.6.3 6.6.4	tion	34 34 35 35 36 38 38 38 39 39 39 39 40 41 43				
6 6.1 6.2 6.3 6.4 6.5 6.6	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1 Locking 6.4.1 6.4.2 Resettir PROFIB 6.6.1 6.6.2 6.6.3 6.6.4 6.6.5	tion	34 34 35 35 36 38 38 38 39 39 39 40 41 43 44				
 6 6.1 6.2 6.3 6.4 6.5 6.6 	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1 Locking 6.4.1 6.4.2 Resettir PROFIB 6.6.1 6.6.2 6.6.3 6.6.4 6.6.5	tion	34 34 35 35 36 38 38 39 39 39 39 40 41 43 44 51				
 6.1 6.2 6.3 6.4 6.5 6.6 	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1 Locking 6.4.1 6.4.2 Resettir PROFIB 6.6.1 6.6.2 6.6.3 6.6.4 6.6.5 Comm	tion	34 34 35 35 36 38 38 38 38 39 39 39 39 40 41 43 44 51				
 6.1 6.2 6.3 6.4 6.5 6.6 7 7.1 	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1 Locking 6.4.1 6.4.2 Resettir PROFIB 6.6.1 6.6.2 6.6.3 6.6.4 6.6.5 Comm Calibrat	tion	34 34 35 35 36 38 38 39 39 39 40 41 43 44 51				
 6 6.1 6.2 6.3 6.4 6.5 6.6 7 7.1 	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1 Locking 6.4.1 6.4.2 Resettir PROFIB 6.6.1 6.6.2 6.6.3 6.6.4 6.6.5 Comm Calibrat 7.1.1	tion	34 34 35 35 36 38 38 38 39 39 39 40 41 43 44 51 52				
 6.1 6.2 6.3 6.4 6.5 6.6 7 7.1 	Opera Overvie: 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1 Locking 6.4.1 6.4.2 Resettir PROFIB 6.6.1 6.6.2 6.6.3 6.6.4 6.6.5 Comm Calibrat 7.1.1 7.1.2	tion	34 34 35 35 36 38 38 38 39 39 39 40 41 43 44 51 52 51				
 6 6.1 6.2 6.3 6.4 6.5 6.6 7 7.1 	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1 Locking 6.4.1 6.4.2 Resettir PROFIB 6.6.1 6.6.2 6.6.3 6.6.4 6.6.5 Comm Calibrat 7.1.1 7.1.2	tion	34 34 35 35 36 38 38 38 39 39 39 39 39 39 40 41 43 44 51 52 52 52				
 6 6.1 6.2 6.3 6.4 6.5 6.6 7 7.1 	Opera Overvie 6.1.1 Display 6.2.1 6.2.2 Alterna 6.3.1 Locking 6.4.1 6.4.2 Resettir PROFIB 6.6.1 6.6.2 6.6.3 6.6.4 6.6.5 Comm Calibrat 7.1.1 7.1.3	tion	34 34 35 35 36 38 38 39 39 39 39 39 39 40 41 43 44 51 52 52 52				

7.3.1 Present date (*01)
7.3.2 "Isotope" (*03) 56 7.3.3 "Isotope" (*03) 56 7.3.4 "Operating mode" (*04) 56 7.3.5 "Measurement mode" (*05) 57 7.3.6 "Density unit" (*06) 58 7.3.7 "Min. density" (*07) 59 7.3.8 "Max. density" (*08) 59 7.3.9 "Pipe diameter unit" (*09) 59 7.3.10 "Pipe diameter" (*0A) 59 7.3.11 "Output damping" (*0B) 60 7.4 General principles 61 7.4.1 General principles 61 7.4.3 Full and empty calibration or covered
7.3.4 "Operating mode" (*04)
7.3.5 "Measurement mode" (*05)
7.3.6 "Density unit" (*06)
7.3.7 "Min. density" (*07)
7.3.8 "Max. density" (*08)
7.3.9 "Pipe diameter unit" (*09)
7.3.10"Pipe diameter" (*0A)
7.3.11 "Output damping" (*0B)
7.4Calibration for level measurement and point level detection617.4.1General principles617.4.2Background calibration637.4.3Full and empty calibration or covered
7.4.1General principles617.4.2Background calibration637.4.3Full and empty calibration or covered
7.4.1General principles617.4.2Background calibration637.4.3Full and empty calibration or covered
7.4.2 Full and empty calibration or covered
7.4.5 Full and empty canoration of tovered
and free calibration 65
7 4 4 Additional settings 68
7.5 Calibration for density and concentration
measurements
7.5.1 General principles
7.5.2 Background calibration
7.5.3 Calibration points
7.5.4 Linearization (for concentration
measurements)
7.5.5 Additional settings 76
7.6 Density measurement/temperature-
7.6 Density measurement/temperature- compensated 76
7.6Density measurement/temperature- compensated
 7.6 Density measurement/temperature- compensated
 7.6 Density measurement/temperature- compensated
7.6Density measurement/temperature- compensated767.7Gammagraphy detection768Maintenance and repair778.1Cleaning778.2Repairs77
7.6Density measurement/temperature- compensated767.7Gammagraphy detection768Maintenance and repair778.1Cleaning778.2Repairs778.3Repairs to devices with an Ex-certificate77
7.6Density measurement/temperature- compensated767.7Gammagraphy detection768Maintenance and repair778.1Cleaning778.2Repairs778.3Repairs to devices with an Ex-certificate778.4Replacement77
7.6Density measurement/temperature- compensated767.7Gammagraphy detection768Maintenance and repair778.1Cleaning778.2Repairs778.3Repairs to devices with an Ex-certificate778.4Replacement778.5Return77
7.6Density measurement/temperature- compensated767.7Gammagraphy detection768Maintenance and repair778.1Cleaning778.2Repairs778.3Repairs to devices with an Ex-certificate778.4Replacement778.5Return778.5.1Return77
7.6 Density measurement/temperature- compensated 76 7.7 Gammagraphy detection 76 8 Maintenance and repair 77 8.1 Cleaning 77 8.2 Repairs 77 8.3 Repairs to devices with an Ex-certificate 77 8.4 Replacement 77 8.5 Return 77 8.6 Disposal 78
7.6Density measurement/temperature- compensated767.7Gammagraphy detection768Maintenance and repair778.1Cleaning778.2Repairs778.3Repairs to devices with an Ex-certificate778.4Replacement778.5Return778.6Disposal788.7Contact addresses at Endress+Hauser78
7.6Density measurement/temperature- compensated767.7Gammagraphy detection768Maintenance and repair778.1Cleaning778.2Repairs778.3Repairs to devices with an Ex-certificate778.4Replacement778.5Return778.6Disposal788.7Contact addresses at Endress+Hauser78
7.6 Density measurement/temperature- compensated 76 7.7 Gammagraphy detection 76 8 Maintenance and repair 77 8.1 Cleaning 77 8.2 Repairs 77 8.3 Repairs to devices with an Ex-certificate 77 8.4 Replacement 77 8.5 Return 77 8.5 Return 77 8.6 Disposal 78 8.7 Contact addresses at Endress+Hauser 78 9 Accessories 79
7.6 Density measurement/temperature- compensated 76 7.7 Gammagraphy detection 76 8 Maintenance and repair 77 8.1 Cleaning 77 8.2 Repairs 77 8.3 Repairs to devices with an Ex-certificate 77 8.4 Replacement 77 8.5 Return 77 8.6 Disposal 78 8.7 Contact addresses at Endress+Hauser 78 9 Accessories 79 9.1 Commubox FXA291 79
7.6 Density measurement/temperature- compensated 76 7.7 Gammagraphy detection 76 8 Maintenance and repair 77 8.1 Cleaning 77 8.2 Repairs 77 8.3 Repairs to devices with an Ex-certificate 77 8.4 Replacement 77 8.5 Return 77 8.6 Disposal 78 8.7 Contact addresses at Endress+Hauser 78 9 Accessories 79 9.1 Commubox FXA291 79 9.2 ToF Adapter FXA291 79
7.6 Density measurement/temperature- compensated 76 7.7 Gammagraphy detection 76 8 Maintenance and repair 77 8.1 Cleaning 77 8.2 Repairs 77 8.3 Repairs to devices with an Ex-certificate 77 8.4 Replacement 77 8.5 Return 77 8.6 Disposal 78 8.7 Contact addresses at Endress+Hauser 78 9 Accessories 79 9.1 Commubox FXA291 79 9.2 ToF Adapter FXA291 79 9.3 Proficard 79
7.6 Density measurement/temperature- compensated 76 7.7 Gammagraphy detection 76 8 Maintenance and repair 77 8.1 Cleaning 77 8.2 Repairs 77 8.3 Repairs to devices with an Ex-certificate 77 8.4 Replacement 77 8.5 Return 77 8.6 Disposal 78 8.7 Contact addresses at Endress+Hauser 78 9 Accessories 79 9.1 Commubox FXA291 79 9.2 ToF Adapter FXA291 79 9.4 Profiboard 79
7.6 Density measurement/temperature- compensated 76 7.7 Gammagraphy detection 76 8 Maintenance and repair 77 8.1 Cleaning 77 8.2 Repairs 77 8.3 Repairs to devices with an Ex-certificate 77 8.4 Replacement 77 8.5 Return 77 8.6 Disposal 77 8.7 Contact addresses at Endress+Hauser 78 9 Accessories 79 9.1 Commubox FXA291 79 9.2 ToF Adapter FXA291 79 9.3 Proficard 79 9.4 Profiboard 79 9.5 Remote display and operating unit FHX40 80
7.6 Density measurement/temperature- compensated 76 7.7 Gammagraphy detection 76 8 Maintenance and repair 77 8.1 Cleaning 77 8.2 Repairs 77 8.3 Repairs 77 8.4 Repairs to devices with an Ex-certificate 77 8.5 Return 77 8.6 Disposal 77 8.7 Contact addresses at Endress+Hauser 78 8.7 Commubox FXA291 79 9.1 Commubox FXA291 79 9.2 ToF Adapter FXA291 79 9.4 Profiboard 79 9.5 Remote display and operating unit FHX40 80 9.5.1 Dimensions 80
7.6 Density measurement/temperature- compensated 76 7.7 Gammagraphy detection 76 8 Maintenance and repair 77 8.1 Cleaning 77 8.2 Repairs 77 8.3 Repairs to devices with an Ex-certificate 77 8.4 Replacement 77 8.5 Return 77 8.6 Disposal 78 8.7 Contact addresses at Endress+Hauser 78 8.7 Commubox FXA291 79 9.1 Commubox FXA291 79 9.2 ToF Adapter FXA291 79 9.3 Proficard 79 9.4 Profiboard 79 9.5 Remote display and operating unit FHX40 80 9.5.1 Dimensions 80 9.5.2 Ordering information 80 9.5.2 Tachnical data (acta
7.6 Density measurement/temperature- compensated 76 7.7 Gammagraphy detection 76 8 Maintenance and repair 77 8.1 Cleaning 77 8.2 Repairs 77 8.3 Repairs to devices with an Ex-certificate 77 8.4 Replacement 77 8.5 Return 77 8.6 Disposal 77 8.7 Contact addresses at Endress+Hauser 78 8.7 Commubox FXA291 79 9.1 Commubox FXA291 79 9.2 ToF Adapter FXA291 79 9.3 Proficard 79 9.4 Profiboard 79 9.5 Remote display and operating unit FHX40 80 9.5.1 Dimensions 80 9.5.2 Ordering information 80 9.5.3 Technical data (cable and housing) 81
7.6 Density measurement/temperature- compensated 76 7.7 Gammagraphy detection 76 8 Maintenance and repair 77 8.1 Cleaning 77 8.2 Repairs 77 8.3 Repairs to devices with an Ex-certificate 77 8.4 Replacement 77 8.5 Return 77 8.6 Disposal 77 8.7 Contact addresses at Endress+Hauser 78 8.7 Commubox FXA291 79 9.1 Commubox FXA291 79 9.2 ToF Adapter FXA291 79 9.3 Proficard 79 9.4 Profiboard 79 9.5 Remote display and operating unit FHX40 80 9.5.1 Dimensions 80 9.5.2 Ordering information 80 9.5.3 Technical data (cable and housing) 81 9.5.4 Materials 81
7.6 Density measurement/temperature- compensated
7.6 Density measurement/temperature- compensated
7.6 Density measurement/temperature- compensated

9.7	Clamping device for density measurement	84
9.8	Measurement section for density	04
	measurement FHG62	84
9.9	Memograph M, RSG45	84
	9.9.1 Measuring principle	84
0.10	9.9.2 Measuring system	84
9.10	RMA42, process transmitter with control	0.5
	Unit	85 05
	9.10.1 Measuring principle	00 85
	9.10.2 measuring system	رں
10	Troubleshooting	86
10.1	System error messages	86
	10.1.1 Error signal	86
	10.1.2 Last error	86
	10.1.3 Types of error	86
10.0	10.1.4 Error codes	86
10.2	Possible calibration errors	88
10 7		00
10.3	Software history	89
10.3 11	Software history	89 90
10.3 11 11.1	Software history Technical data Additional technical data	89 90 90
10.3 11 11.1 11.2	Software history Technical data Additional technical data Supplementary documentation	89 90 90 90
10.3 11 11.1 11.2	Software history	89 90 90 90
10.3 11 11.1 11.2	Software history	89 90 90 90
10.3 11 11.1 11.2	Software history Technical data Additional technical data Supplementary documentation 11.2.1 Clamping device for level and point level detection FHG60 11.2.2 Clamping device for density	89 90 90 90
10.3 11 11.1 11.2	Software history	89 90 90 90 90
10.3 11 11.1 11.2	Software history	89 90 90 90 90
10.3 11 11.1 11.2	Software history Technical data Additional technical data Supplementary documentation 11.2.1 Clamping device for level and point level detection FHG60 11.2.2 Clamping device for density measurement FHG61 11.2.3 Measurement section for density measurement FHG62	 89 90 90 90 90 90 90 90
10.3 11 11.1 11.2	Software history Technical data Additional technical data Supplementary documentation 11.2.1 Clamping device for level and point level detection FHG60 11.2.2 Clamping device for density measurement FHG61 11.2.3 Measurement section for density measurement FHG62 11.2.4 Certificates and approvals	 89 90 90 90 90 90 90 90 90 90
10.3 11 11.1 11.2 12	Software history	 89 90 <
10.3 11 11.1 11.2 12 12.1	Software history	 89 90 94
10.3 11 11.1 11.2 12 12.1 12.2	Software history	 89 90 94
10.3 11 11.1 11.2 12 12.1 12.2	Software history	 89 90 <
10.3 11 11.1 11.2 12 12.1 12.2 12.3	Software history Technical data Additional technical data Supplementary documentation 11.2.1 Clamping device for level and point level detection FHG60 11.2.2 Clamping device for density measurement FHG61 11.2.3 Measurement section for density measurement FHG62 11.2.4 Certificates and approvals Operating menu for level measurements Operating menu for level limit (point level) detection Operating menu for density and	 89 90 <

1 About this document

1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols used

1.2.1 Safety symbols

Symbol	Meaning
A DANGER	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
NOTICE	NOTE! This symbol contains information on procedures and other circumstances which do not result in personal injury.

1.2.2 Electrical symbols

Symbol	Meaning
	Direct current A terminal at which DC is present or through which DC flows.
\sim	Alternating current A terminal to which alternating voltage (sine-wave) is applied or through which alternating current flows.
<u>+</u>	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.

1.2.3 Tool symbols

Symbol	Meaning
0	Flat blade screwdriver
$\bigcirc \not \Subset$	Allen key

Symbol	Meaning		
	Permitted Procedures, processes or actions that are permitted.		
	Preferred Procedures, processes or actions that are preferred.		
\mathbf{X}	Forbidden Procedures, processes or actions that are forbidden.		
i	Tip Indicates additional information.		
Reference to documentation			
	Reference to page		
	Reference to graphic		
►	Notice or individual step to be observed		
1., 2., 3	Series of steps		
L.	Result of a step		
?	Help in the event of a problem		
	Visual inspection		
	Operation via local display		
	Operation via operating tool		
	Write-protected parameter		

1.2.4 Symbols for certain types of information

1.2.5 Symbols in graphics

Symbol	Meaning			
1, 2, 3	Item numbers			
1., 2., 3	Series of steps			
A, B, C,	Views			
A-A, B-B, C-C,	Sections			
EX	Hazardous area Indicates the hazardous area.			
X	Safe area (non-hazardous area) Indicates the non-hazardous area.			

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- Trained, qualified specialists must have a relevant qualification for this specific function and task.
- Are authorized by the plant owner/operator.
- Are familiar with federal/national regulations.
- Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ► Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ► Follow the instructions in this manual.

2.2 Designated use

The Gammapilot M is a compact transmitter for non-contact level, point level, density and concentration measurement. The measuring range of a single Gammapilot M is up to 2 m (6.6 ft). Large measuring ranges of any size can be implemented, however, by cascading several Gammapilot M devices. When used for point level detection, the Gammapilot is certified according to IEC 61508 for safety-related operation up to SIL 2/3.

2.3 Installation, commissioning and operation

The Gammapilot M is designed to meet state-of-the-art safety requirements and complies with applicable standards and EC regulations. However, if it is used improperly or for applications for which it is not intended, application-related hazards may arise, e.g. product overflow due to incorrect installation or configuration. Installation, electrical connection, commissioning, operation and maintenance of the measuring system must therefore be carried out exclusively by trained specialists authorized to perform such work by the system operator. Technical personnel must have read and understood these Operating Instructions and must adhere to them. Modifications and repairs to the device may only be carried out if they are expressly permitted in the Operating Instructions.

2.4 Hazardous area

If the measuring system is used in hazardous areas, the corresponding national standards and regulations must be observed. The device is accompanied by separate "Ex documentation", which is an integral part of these Operating Instructions. The installation specifications, connection values and safety instructions listed in this supplementary documentation must be observed.

- Ensure that all technical personnel are suitably qualified and trained.
- Comply with the metrological and safety-related requirements for the measuring point.

The detector or cooling jacket can become damaged if the cooling water freezes.

• Empty sensor with cooling jacket or protect against freezing.

WARNING

 The three screws connecting the detector pipe to the terminal housing may not be opened.



WARNING

• Depending on the certificate ordered, observe the associated safety instructions $\rightarrow \cong 90$

2.5 Radiation protection

The Gammapilot M is used in conjunction with a radioactive source, contained in a source container. When handling radioactive sources, the following instructions must be observed:

2.5.1 Basic radiation protection guidelines

WARNING

When working with radioactive sources, avoid any unnecessary exposure to radiation. All unavoidable radiation exposure must be kept to a minimum. Three basic concepts apply to achieve this:



- A Shielding
- B Time
- C Distance

Shielding

Ensure the best possible shielding between the radiation source and yourself and all other persons. Effective shielding is provided by source containers (FQG60, FQG61/FQG62, FQG63, QG2000) and all high-density materials (lead, iron, concrete etc.).

When working with source containers, all the instructions for mounting and usage outlined in the following documents must be observed:

Source container	Document		
FQG60	TI00445F/00/EN		
FQG61, FQG62	TI00435F/00/EN		
FQG63	TI00446F/00/EN		
QG2000	TI00346F/00/EN BA00223F/00/EN		

Time

The time spent in the exposed area should be kept to a minimum.

Distance

Keep as far away from the radiation source as possible. The radiation intensity decreases in proportion to the square of the distance from the radiation source.

2.6 Workplace safety

For work on and with the device:

 Wear the required personal protective equipment according to federal/national regulations.

2.7 Operational safety

Risk of injury.

- Operate the device in proper technical condition and fail-safe condition only.
- The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

► If, despite this, modifications are required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability,

- Carry out repairs on the device only if they are expressly permitted.
- Observe federal/national regulations pertaining to repair of an electrical device.
- Use original spare parts and accessories from the manufacturer only.

Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection, pressure vessel safety):

- Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area.
- Observe the specifications in the separate supplementary documentation that is an integral part of these Instructions.

2.8 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EC directives listed in the device-specific EC Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

Product description 3

Product design 3.1

3.1.1 **Components of the FMG60**



- **1** A: Gammapilot M without water cooling jacket; B: Gammapilot M with water cooling jacket; C: Gammapilot M with collimator
- 1 Terminal housing
- 2 Mounting collar
- 3 Detector pipe
- 4 5 Measuring range marks
- Connection compartment 2
- 6 Connection compartment 1
- 7 Supplementary nameplate
- 8 Centering knob
- 9 Nameplate of the device
- 10 Cooling water connections
- 11 *Marking of the radiation window (for versions with collimator)*
- 12 Potential equalization terminal of the cooling jacket

3.2 Nameplates

3.2.1 Nameplate of the device



- 1 Order code (see the product structure for the meaning of the code)
- 2 Serial number
- 3 Measuring range
- 4 Power supply
- 5 Output signal

6 Max. ambient temperature

3.2.2 Supplementary nameplate (examples)



- 7 Number of certificate
- 8 Equipment group and category
- 9 Type of protection
- 10 Reference to additional safety-related documentation
- 11 Reference to additional certificates (e.g. WHG, SIL)
- 12 Information on the required temperature resistance of the connecting cables (only for device versions with a water cooling jacket)

3.3 Scope of delivery

- Ordered version of the device (including Operating Instructions)
- Endress+Hauser operating program (on the CD-ROM supplied)
- Accessories as ordered

3.4 Accompanying documentation

3.4.1 Operating Instructions (BA00236F/00/EN)

The Operating Instructions describe how to install and commission the Gammapilot M (communication version PROFIBUS PA). All the functions of the operating menu that are necessary for standard measuring tasks are described here.

Any additional functions are contained in the "Description of Device Functions"

BA00287F/00/EN

3.4.2 Description of Device Functions (BA00287F/00/EN)

The Description of Device Functions document contains a detailed description of all the functions of the Gammapilot M and applies for all communication versions. This document is available as a PDF file on the CD-ROM supplied and can be downloaded from the Internet at "www.de.endress.com" (Download).

3.4.3 Safety instructions

Additional safety instructions (XA, ZE, ZD) are supplied with certified device versions. Please refer to the nameplate for the safety instructions that apply to your device version.

An overview of the certificates and approvals can be found in the "Certificates and approvals" section of

TI00363F/00/EN

3.5 Certificates and approvals

CE mark, Declaration of Conformity

The device is designed to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. The device takes into account the applicable standards and regulations which are listed in the EC Declaration of Conformity and thus meets the legal requirements of the EC directives. Endress+Hauser confirms the successful testing of the device by affixing to it the CE mark.

3.6 Registered trademarks

PROFIBUS®

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany ToF[®]

Registered trademark of Endress+Hauser SE+Co. KG, Maulburg, Germany

4 Mounting

4.1 Incoming acceptance, product identification, transport, storage

4.1.1 Incoming acceptance

Check the packaging and contents for any signs of damage. Check the shipment, make sure nothing is missing and that the scope of supply matches your order.

4.1.2 Product identification

The measuring device can be identified in the following ways:

- Using the nameplate specifications.
- Using the order code with a breakdown of the device features on the delivery note.
- By entering the serial number of the nameplates into *W@M Device Viewer*. (www.endress.com/deviceviewer): all the information about the measuring device is displayed.

For an overview of the scope of the Technical Documentation provided: Enter the serial number of the nameplates into W@M Device Viewer. (www.endress.com/ deviceviewer)

4.1.3 Transport

ACAUTION

Risk of injury

► Follow the safety instructions and transport conditions for devices weighing more than 18 kg (39.69 lb).

4.1.4 Storage

Pack the device so that it is protected against impact for storage and transport. The original packaging provides optimum protection. The permissible storage temperature is:

- -40 to +50 °C (-40 to +122 °F) for devices with PVT scintillator
- -40 to +60 °C (-40 to +140 °F) for devices with NaI crystal

4.2 Installation conditions

4.2.1 Dimensions, weight

Gammapilot M (without water cooling jacket)



Gammapilot M with water cooling jacket or collimator



Туре	Measuring length A [mm	Without wa jac	ater cooling Wit		Without water cooling jacket jacket			jacket
	(in)]	Total length B [mm (in)]	Weight [kg (lbs)] ¹⁾	Total length B [mm (in)]	Weight without water [kg (lbs)] ¹⁾	Weight with water [kg (lbs)] ¹⁾		
NaI	50 (1.97)	621 (24.4)	14 (30.87)	631 (24.8)	18 (39.69)	20 (44.10)		
Nal with collimator	50 (1.97)	663 (26.1)	35 (77.18)	-	-	-		
PVT	200 (7.87)	780 (30.7)	15 (33.08)	790 (31.1)	20 (44.10)	24 (52.92)		
PVT	400 (15.7)	980 (38.6)	16 (35.28)	990 (39)	23 (50.72)	29 (63.95)		
PVT	800 (31.5)	1380 (54.3)	20 (44.10)	1390 (54.7)	31 (68.36)	40 (88.20)		
PVT	1200 (47.5)	1780 (70.1)	24 (52.92)	1790 (70.5)	37 (81.59)	50 (110.25)		
PVT	1600 (63)	2180 (85.8)	28 (61.74)	2190 (86.2)	45 (99.23)	61 (134.51)		
PVT	2000 (7.87)	2580 (102)	31 (68.36)	2590 (102)	51 (112.46)	72 (158.76)		

1) The weight data indicated are for the 316L version. The weight of the aluminum version is reduced by 5.3 kg (11.69 lb)

4.2.2 Installation conditions for level measurement

Conditions

- For level measurements the Gammapilot M is mounted vertically; if possible the detector head should point downwards
- The angle of emission of the source container must be exactly aligned to the measuring range of the Gammapilot M. Observe the measuring range marks of the Gammapilot M.
- If several Gammapilot M devices are connected in cascade mode, there should not be any gap between the individual measuring ranges.
- The source container and the Gammapilot M should be mounted as close to the vessel as possible. Any access to the beam must be blocked to ensure that it is not possible to reach into this area.
- The Gammapilot M should be protected against direct sunlight in order to increase its service life. Use a protective cover if necessary.
- The mounting device FHG60 or an equivalent mounting device should be used to secure the Gammapilot $M \rightarrow \textcircled{B} 82$ The mounting device must be installed in such a way as to withstand the weight of the

Gammapilot M under all anticipated operating conditions (e.g. vibrations). $\rightarrow \cong 17$

The Gammapilot M should be given additional support to prevent damage to the connecting cable or to the unit if it falls.

Examples



- A Vertical cylinder; the Gammapilot M is mounted vertically with the detector head pointing downwards, the gamma ray is aligned to the measuring range.
- *B* Cascading of multiple Gammapilot *M* devices; there is no gap between the measuring ranges
- C Incorrect: Gammapilot M mounted inside the tank insulation
- D Conical vessel outlet (here with sun protection cover)
- *E* Horizontal cylinder (here with sun protection cover)
- *F* Correct: tank insulation removed for Gammapilot M
- 1 Support

4.2.3 Installation conditions for point level detection

Conditions

- For point level detection, the Gammapilot M is generally mounted horizontally at the height of the desired level limit.
- The angle of emission of the source container must be exactly aligned to the measuring range of the Gammapilot M. Observe the measuring range marks of the Gammapilot M.
- The source container and the Gammapilot M should be mounted as close to the vessel as possible. Any access to the beam must be blocked to ensure that it is not possible to reach into this area.
- The Gammapilot M should be protected against direct sunlight in order to increase its service life. Use a protective cover if necessary.
- The mounting device FHG60 or an equivalent mounting device should be used to secure the Gammapilot $M \rightarrow \textcircled{B} 82$ The mounting device must be installed in such a way as to withstand the weight of the
 - Gammapilot M under all anticipated operating conditions (e.g. vibrations). $\rightarrow \square 17$
- More information with regard to the safety-related use of the Gammapilot M can be found in the Functional Safety Manual SD00230F/00/EN and SD00324F/00/EN.

Examples



A Maximum fail-safe mode

B Minimum point level detection

4.2.4 Installation conditions for density and concentration measurements

Conditions

- If possible, density and concentration should be measured on vertical pipes with forward flow from bottom to top.
- If only horizontal pipes are accessible, the path of the beam should also be arranged horizontally to minimize the influence of air bubbles and deposits.

The clamping device itself must be installed in such a way as to withstand the weight of the source container and the Gammapilot M under all anticipated operating conditions. $\rightarrow \implies 17$

- The sample point may not be further than 20 m (66 ft) from the measuring point.
- The distance of the density measurement to pipe bends is $\ge 3 \text{ x}$ pipe diameter, and $\ge 10 \text{ x}$ pipe diameter in the case of pumps.

Measuring system arrangement

The arrangement of the source container and the Gammapilot M depends on the pipe diameter (or the length of the irradiated measuring path) and the density measuring range. These two parameters determine the measuring effect (relative change in the pulse rate). The measuring effect increases with the length of the radiation path through the medium. Therefore, it is advisable to use diagonal irradiation or a measurement section for small pipe diameters.

To select the measuring system arrangement please contact your Endress+Hauser sales organization or use the Applicator^M configuration software ¹)

¹⁾ The Applicator™ is available from your Endress+Hauser sales organization.



- Vertical beam (90°) Α
- В Diagonal beam (30°)
- С Measurement section 1
- Sample point
 - To increase the accuracy of density measurements, the use of a collimator is recommended. The collimator screens the detector from environmental radiation.
 - When planning, the total weight of the measuring system must be taken into consideration.
 - The Gammapilot M should be given additional support to secure it against falling or to prevent damage to the connecting cable.
 - A clamping device (FHG61) and a measurement section (FHG62) are available as accessories $\rightarrow \blacksquare 84$

4.2.5 **Empty pipe detection**



1 Gammapilot M

2 Monitoring detector FTG20 or FMG60

3 PLC

Mounting the FTG20 or FMG60 on the FMG60 for empty pipe detection

If the pipe becomes empty as a result of operational processes, the level of radiation on the detector side can reach dangerous levels.

- In such cases, the radiation emission channel must be closed immediately for reasons of radiation protection.
- A high local dose rate also causes the detector unit (scintillator and photomultiplier) to age quickly.

The best way to avoid such a situation is to mount a second radiometric measuring system that monitors the radiation intensity. If high radiation levels occur, an alarm is output and/or the source container is automatically switched off through pneumatic action for example.

4.2.6 Installation conditions for flow measurement

Measurement of solids flow

In conjunction with a density measuring device, such as Endress+Hauser's Gammapilot M, Promag 55S also determines the rate of solids in terms of mass, volume or percentage. The following order information is required for this purpose for Promag 55S: Order option for the "Solids flow" software function (F-CHIP) and order option for a current input.



- 2 Solids flow measurement (m) using a density meter and a flowmeter. If the density of the solids (ρ_s) and the density of the carrier liquid (ρ_c) are also known, the solids flow rate can be calculated.
- 1 Flowmeter (Promag 55S) -> volume flow (V). The solids density (ρ_s) and the density of the carrier liquid (ρ_c) also have to be entered in the transmitter
- 2 Density meter (e.g. "Gammapilot M") -> total density (ρ_m) consisting of the carrier liquid and solids

Measurement of mass flow

Bulk solids applications on conveyor belts and conveyor screws.

The source container is positioned above the conveyor belt and the Gammapilot M FMG60 below the conveyor belt. The radiation is attenuated by the medium on the conveyor belt. The intensity of the radiation received is proportional to the density of the medium. The mass flow is calculated from the belt speed and the radiation intensity.



1 Gammapilot M

4.3 Water cooling

The following applies for the versions of the Gammapilot M with a water cooling jacket:

- Material: 316L
- Water connection: 2 x G 1/4", DIN ISO 228
- Inlet temperature: max. 40 °C (104 °F)
- Outlet temperature: max. 50 °C (122 °F)(temperature monitoring recommended)
- Water pressure: 4 to 6 bar (60 to 90 psi)



- A T <75 ℃ (167 °F)
- B T < 120 ℃ (248 °F)

ACAUTION

The detector or cooling jacket can become damaged if the cooling water freezes.

• Empty the cooling jacket or protect against freezing.

WARNING

Pressurized water cooling system!

• Do not open the cylinder screws (see diagram below) when pressurized.



1 Cylinder screws

ACAUTION

Consider the following when using the water cooling jacket

- It is recommended to ground the water cooling jacket separately at the protective ground connection provided for this purpose.
- ► The ambient temperature of the terminal housing may not exceed 75 °C (167 °F). This also applies if water cooling is used.
- ► The three screws (see graphic below) connecting the detector pipe to the terminal housing may **not** be opened.



I *3 The three screws connecting the detector pipe to the terminal housing may not be opened.*

4.3.1 Mounting position and position of the cooling water nozzles



- A Recommended mounting position for level measurement: the terminal housing is at the bottom
- *B* In exceptional cases (e.g. shortage of space) the terminal housing may be located at the top
- C Mounting position for point level detection and density measurement
- 1 Cooling water inlet (always at bottom)
- 2 Cooling water outlet (always at top)

ACAUTION

The water must always be introduced from the bottom to ensure that the water cooling jacket is completely filled.

4.3.2 Required flow

The required flow rate depends on:

- The ambient temperature at the water cooling jacket
- The inlet temperature
- The measuring length of the Gammapilot M

Typical values are given in the following tables:

Ambient temperature $T_A = 75 \degree C (167 \degree F)$

Inlet temperature	Measuring length in mm (in)							
°C (°F)	50 (1.97)	200 (7.87)	400 (15.7)	800 (31.5)	1200 (47.2)	1600 (63)	2000 (78.7)	
20 (68)	30 l/h	30 l/h	30 l/h	41 l/h	55 l/h	70 l/h	84 l/h	
25 (77)	30 l/h	30 l/h	30 l/h	45 l/h	61 l/h	77 l/h	93 l/h	
30 (86)	30 l/h	30 l/h	33 l/h	50 l/h	68 l/h	86 l/h	104 l/h	
35 (95)	30 l/h	30 l/h	38 l/h	59 l/h	80 l/h	101 l/h	122 l/h	
40 (104)	30 l/h	30 l/h	47 l/h	72 l/h	98 l/h	124 l/h	149 l/h	

Ambient temperature $T_A = 100 \degree C (212 \degree F)$

Inlet temperature °C (°F)	Measuring length in mm (in)						
	50 (1.97)	200 (7.87)	400 (15.7)	800 (31.5)	1200 (47.2)	1600 (63)	2000 (78.7)
20 (68)	30 l/h	30 l/h	38 l/h	59 l/h	80 l/h	101 l/h	122 l/h
25 (77)	30 l/h	30 l/h	42 l/h	64 l/h	87 l/h	110 l/h	133 l/h
30 (86)	30 l/h	30 l/h	47 l/h	73 l/h	98 l/h	124 l/h	150 l/h
35 (95)	30 l/h	30 l/h	54 l/h	84 l/h	113 l/h	143 l/h	173 l/h
40 (104)	33 l/h	33 l/h	66 l/h	101 l/h	137 l/h	173 l/h	210 l/h

Inlet temperature	Measuring length in mm (in)						
°C (°F)	50 (1.97)	200 (7.87)	400 (15.7)	800 (31.5)	1200 (47.2)	1600 (63)	2000 (78.7)
20 (68)	30 l/h	30 l/h	45 l/h	70 l/h	94 l/h	119 l/h	144 l/h
25 (77)	30 l/h	30 l/h	50 l/h	77 l/h	104 l/h	131 l/h	158 l/h
30 (86)	30 l/h	30 l/h	55 l/h	85 l/h	115 l/h	146 l/h	176 l/h
35 (95)	32 l/h	32 l/h	64 l/h	98 l/h	133 l/h	168 l/h	203 l/h
40 (104)	38 l/h	38 l/h	75 l/h	116 l/h	157 l/h	199 l/h	240 l/h

Ambient temperature $T_A = 120 \degree C (248 \degree F)$

4.4 Post-installation check

After installing the measuring device, carry out the following checks:

- Is the device damaged (visual inspection)?
- Does the device match the measuring point specifications (ambient temperature, measuring range etc.)?
- If available: are the measuring point number and labeling correct (visual inspection)?
- Is the measuring device sufficiently protected against sunlight?
- Are the cable glands tightened correctly?

5 Wiring

5.1 Connection compartments

The Gammapilot M has two connection compartments



- 1 Connection compartment 1
- 2 Connection compartment 2

Connection compartment 1

Connection compartment for:

- Power supply
- Signal output (depending on the device version)

Connection compartment 2

Connection compartment for:

- Signal output (depending on the device version)
- Pt-100 input (4-wire)
- Pulse input for cascade mode
- Pulse output for cascade mode
- Display and operating module FHX40 (or VU331)



Maximum cable length:

- For cascade, 20 m (66 ft) per device
- For Pt-100 2 m (6.6 ft). Temperature measurement should be performed as close as possible to density measurement.

5.2 Cable entries

The number and type of cable entries depend on the device version ordered. The following are possible:

- Coupling M20x1.5. sealing range 7 to 10.5 mm (0.28 to 0.41 in)
- Cable entry M20x1.5
- Cable entry G1/2

- Cable entry NPT1/2
- M12 connector (see "Fieldbus connectors")
- 7/8" connector (see "Fieldbus connectors")

In addition, the Gammapilot M also has a socket to connect the separate display and operating unit FHX40. The housing of the Gammapilot M does not have to be opened to connect the FHX40.



1 Cable entry for connection compartment 2

2 Socket for FHX40

3 Cable entry for connection compartment 1

📔 Cable entries

- A maximum of one cable gland is provided for each of the connection compartments upon delivery. If additional cable glands are required (e.g. for cascade mode), they must be supplied by the user.
- Connecting cables should be routed away from the housing from below to prevent moisture from penetrating the connection compartment. Otherwise, a drip loop should be provided or the Gammapilot M should be fitted with a weather protection cover.

5.3 Terminal assignment

Connection compartment 1



- Image: For the terminal assignment, see the table below
- 1 Power supply: 90 to 253VAC, 18 to 35 VDC

Connection compartment 2



🖻 5 For the terminal assignment, see the table below

Terminal	Meaning
0	Grounding of the cable shield ¹⁾
1, 2	Power supply ²)
Connection	Signal output, depending on communication version:
compartment 2: 3, 4 Connection	 4-20mA with HART PROFIBUS PA FOUNDATION Fieldbus
3 ¹⁾ , 4 ¹⁾	Depending on the device version ordered, the signal output is located in connection compartment 1 or 2 (see below).
	For the versions of the Gammapilot M with a fieldbus connector (M12 or 7/8"), the signal output is wired in connection compartment 2 on delivery and connected to the fieldbus connector (see the "Fieldbus connectors" section). In this case, the housing does not need to be opened to connect the signal cable.
5, 6	Pulse input (for cascade mode; is used for master and slave)
7, 8	Pulse output (for cascade mode; is used for slave and end slave)
9, 10, 11, 12	Pt-100 input (4-wire)
13	Connection for display and operating module VU331 (from FHX40); is wired on delivery and connected to the FHX40 plug.
14	Protective ground ¹⁾
15	Protective ground or grounding of the cable shield ¹⁾

1) Rated cross-section > 1 mm^2 (17 AWG)

2) Rated cross-section max. 2.5 mm² (14 AWG)



Feature 30 of the ordering information: power supply wiring/output wiring		Connection compartment with terminals for		
		Supply voltage	Signal output	
А	Non-Ex; non-Ex	1	2	
В	Ex e; Ex ia	1	2	
С	Ex e; Ex e	1	1	
D	Ex d (XP); Ex d (XP)	1	1	
E	Ex d (XP); Ex ia (IS)	1	2	
F	Dust-Ex; Dust-Ex	1	1	
G	Ex e, Dust-Ex; Ex e, Dust-Ex	1	1	
Н	Ex d, Dust-Ex; Ex d, Dust-Ex	1	1	
J	Ex e, Dust-Ex; Ex ia, Dust-Ex	1	2	2
К	Ex d, Dust-Ex; Ex ia, Dust-Ex	1	2	
L	Dust-Ex; Ex ia	1	2	
				A0018082

5.4 Fieldbus connectors

For the versions with a fieldbus connector M12 or 7/8", the housing does not need to be opened to connect the signal cable.

5.4.1 Pin assignment for connector M12

	PIN	Meaning
4● 3●	1	Signal +
	2	Not assigned
	3	Signal –
A0011175	4	Ground

5.4.2 Pin assignment for connector 7/8"

	PIN	Meaning
	1	Signal –
	2	Signal +
2• 4•	3	Shielding
A0011176	4	Not assigned

5.5 **PROFIBUS PA cable specifications**

Always use a twisted, shielded two-wire cable. Make sure to comply with the following specifications if installing in hazardous areas (IEC/EN 60079-11, FISCO model):

- Loop-resistance (DC): 15 to 150 Ω /km
- Inductance per unit length: 0.4 to 1 mH/km
- Capacitance per unit length: 80 to 200 nF/km

The following are examples of suitable cable types:

Non-hazardous area:

- Siemens 6XV1 830-5BH10 (gray)
- Kerpen CEL-PE/OSCR/PVC/FRLA FB-02YS(ST)YFL (gray)
- Belden 3076F (orange)

Hazardous area:

- Siemens 6XV1 830-5AH10 (blue)
- Belden 3076F
- Kerpen CEL-PE/OSCR/PVC/FRLA FB-02YS(ST+C)YFL (blue)

5.6 Supply voltage

All of the following voltages are terminal voltages directly at the device:

Version Minimum terminal voltage		Maximum terminal voltage
Standard	9 V	32 V
Ex ia (FISCO model)	9 V	17.5 V
Ex ia (Entity concept)	9 V	24 V

The current consumption is approx. 11 mA over the entire voltage range.

5.7 Potential equalization

Please observe the following points to ensure maximum EMC protection:

- Ground the device via the external ground terminal. The cable should be kept as short as possible for optimum electromagnetic compatibility. Ideally, use a ground strap.
- The shielding of the bus cable must be continuous and intact.
- If there is potential equalization between the individual grounding points, ground the shielding at each cable end or connect it to the device housing (keep as short as possible).
- If there are large differences in potential between the individual grounding points, only one point is connected with the reference ground. All the other ends of the shielding are connected to the reference potential via a capacitor that is suitable for high frequency use (e.g. ceramic capacitor 10 nF/250 V).



Ground terminal for connecting the potential matching line

ACAUTION

 In applications that are subject to explosion protection regulations, the protective shield may only be grounded at multiple points under certain conditions, see IEC/EN 60079-14.

5.8 Wiring in connection compartment 1

Note the following before connecting:

- ► If the device is used in hazardous areas, make sure to comply with national standards and the specifications in the Safety Instructions (XAs). The specified cable gland must be used.
- The supply voltage must match the specifications on the nameplate
- Switch off the supply voltage before connecting the device.
- ▶ Connect the protective ground to the protective ground terminal $\rightarrow \triangleq 26$
- According to IEC/EN 61010 a suitable circuit breaker must be provided for the device
 The cables must be adequately insulated, with due consideration given to the supply
- voltage and the overvoltage category.
 The connecting cables must offer adequate temperature stability, with due consideration given to the ambient temperature.



- 1. Using a 3 mm Allen key, loosen the cover clamp for the connection compartment cover
- 2. Unscrew the cover
- 3. Push the power cable and (if required) the signal cable through the appropriate cable glands or cable entries
- 4. Wire up according to the terminal assignment diagram
- 5. Tighten the cable glands or cable entries so that they are leak-tight
- 6. Screw the cover securely back onto the connection compartment
- 7. Turn the cover clamp so that it is set over the cover and then tighten.

5.9 Wiring in connection compartment 2

Note the following before connecting:

- The cables must be adequately insulated, with due consideration given to the supply voltage and the overvoltage category.
- The connecting cables must offer adequate temperature stability, with due consideration given to the ambient temperature.



- 1. Unscrew the cover
- 2. Push the following cables through the corresponding cable glands or cable entries: signal cable (if the signal output is located in connection compartment 2), Pt100 cable (if present), cascading cable (input and/or output, if required)
- 3. Wire up according to the terminal assignment diagram
- 4. Tighten the cable glands or cable entries so that they are leak-tight
- 5. Screw the cover securely back onto the connection compartment

5.10 Connecting the remote display and operating unit FHX40

The remote display and operating unit FHX40 is available as an accessory. It is connected to the FHX40 connector of the Gammapilot M via the cable supplied. The housing of the Gammapilot M does not have to be opened for this.



1 Gammapilot M FMG60

2 Cable of the display and operating unit FHX40

For some Dust-Ex versions of the Gammapilot M, the FHX40 connector is protected by a metal sleeve:



- 1. Loosen the sleeve with an Allen key and remove it
- 2. Connect the display and operating unit FHX40
- 3. Attach the sleeve and fasten the Allen screw





- A Power supply (90 to 253VAC or 18 to 35VDC)
- B Junction box
- M Master
- S Slave
- E End slave

There are two options for attaching the circuit breaker as per IEC/EN 61010:

- **Upstream** of the junction box i.e. on the power supply side (one switch for all transmitters)
- **Downstream** of the junction box i.e. on the transmitter side (an individual switch for every transmitter)

5.12 Post-connection check

After wiring the device, carry out the following checks:

- Is the protective ground connected?
- Is the potential matching line connected?
- Is the terminal assignment correct?
- Are the cable glands and dummy plugs tight?
- Are the fieldbus connectors and the FHX40 connector fixed securely?
- Are the covers screwed tightly onto the connection compartments?
- For Dust-Ex devices: is the protective sleeve for the FHX40 socket mounted correctly?
- Is the cover of connection compartment 1 secured by the cover clamp?

WARNING

► The Gammapilot M may only be operated if the cover of connection compartment 1 is closed.

Operation 6

6.1 Overview of the operating options

6.1.1 **PROFIBUS PA**

A maximum of 32 transmitters (8 in hazardous area Ex ia IIC according to the FISCO model) can be connected to the bus. The segment coupler (1) provides the voltage to the bus. For further information on the PROFIBUS-PA standard, refer to Operating Instructions BA0034S/00/EN "PROFIBUS-DP/-PA: Guidelines for planning and commissioning" and to PROFIBUS-PA Specification IEC/EN 61158.



- 1 Segment coupler
- Fieldcare, Profiboard/Proficard PROFIBUS DP 2
- 3
- PLC 4
- 5 PROFIBUS PA
- Micropilot M with display VU331 6
- Prosonic M 7
- 8 Levelflex M
- 9 Gammapilot M
- Commubox FXA291 with ToF Adapter FXA291 10
- Computer with operating tool (e.g. FieldCare) 11
- 12 FHX40 with display VU331

Operation via the service interface

- With the display and operating unit FHX40
- With a personal computer, Commubox FXA291 with ToF Adapter FXA291 (USB) and the "FieldCare" operating program. FieldCare is a graphical operating program for measuring devices from Endress+Hauser. It assists with commissioning, data backup, signal analysis and documentation of the measuring point.

Operation via PROFIBUS

With Profiboard or Proficard and the "FieldCare" operating program.

6.2 Display operation

6.2.1 Display and operating elements

The LCD module VU331 for displaying and operating is located inside the remote display and operating unit FHX40. The measured value can be read through the FHX40 window. The FHX40 must be opened in order to operate the device. Remove the four screws on the cover to do so.



- 1 Gammapilot M
- 2 FHX40
- 3 Operating module VU331

LCD module VU331



- 1 Operating keys
- 2 Bargraph
- 3 Symbols
- 4 Function name
- 5 Parameter ID number

Display symbols

The following table describes the symbols that appear on the liquid crystal display:

Symbol	Meaning
4	ALARM_SYMBOL This alarm symbol is displayed when the device is in an alarm condition. If the symbol flashes, this indicates a warning.
5	LOCK_SYMBOL This lock symbol is displayed when the device is locked, i.e. if no entries are possible.
\$	COM_SYMBOL This communication symbol is displayed when data transmission via HART, PROFIBUS PA or FOUNDATION Fieldbus, for example, is in progress.
*	SIMULATION_SWITCH_ENABLE This communication symbol is displayed when simulation in FOUNDATION Fieldbus is enabled via the DIP switch.

Function of the keys

Key(s)	Meaning
+ or •	Navigate upwards in the picklist Edit the numeric values within a function
– or 🖡	Navigate downwards in the picklist Edit the numeric values within a function
- and + or	Navigate to the left within a function group
E	Navigate to the right within a function group, confirmation
+ and E or - and E	Contrast settings of the LCD
+ and – and E	Hardware locking/unlocking After locking the hardware, operation via the display and communication is not possible! The hardware can only be unlocked via the display. An access code must be entered to do so.

6.2.2 The operating menu

Function codes

The functions of the Gammapilot M are arranged in an operating menu. To ensure easy orientation within this menu, a unique position code is indicated on the display for each function. This code consists of one alphabetic and two numeric characters.



- 1 Measurement mode
- 2 Function group
- 3 Function
- The alphabetic character indicates the current measurement mode of the Gammapilot M:
 - L: Level
 - **S**: Switch
 - D: Density
 - **C**: Concentration
- *: no measurement mode selected yet
- The first numeric character identifies the function group:
 - Basic setup *0
 - Calibration *1
 - Safety settings *2
 - ...
- The second numeric character identifies the individual functions within the function group:
 - Basic setup *0
 - Today's date *01
 - Beam type *02
 - Isotope *03
 - Operating mode *04
 - ...

Hereinafter, the position is always indicated in brackets after the function name. "*" (not yet selected) is always indicated as the measurement mode, e.g. "**Present date**" (*01)

Operation using the onsite display VU331



■ 7 Operation using the onsite display VU331

Selection and configuration in the operating menu:

- Switch from the measured value display to the **Group selection** by pressing E
- Press or + to select the desired Function group and press E to confirm
- The mark in front of the menu text indicates the active option. Press – or + to activate the Edit mode
- Selection menus
- Select the required parameter in the **function** selected with or +
- E confirms the selection; the **mark** appears in front of the selected parameter
- E confirms the edited value; the system quits the Edit mode
- Pressing
 — and
 + simultaneously will cancel the selection; the system quits the Edit
 mode

Entering numerals and text

- Press or + to edit the first character of the numeral/text
- E positions the cursor at the next character; continue with and + until the entire value has been entered
- If the symbol appears at the cursor, press E to accept the value entered; the system quits the Edit mode
- If the difference symbol appears at the cursor, press E to return to the previous character
- Pressing
 — and
 + simultaneously will cancel the selection; the system quits the Edit
 mode
- Press E to select the next function
- Press and + simultaneously once to return to the last function
 Press and + simultaneously twice to return to the group selection
- Press and + simultaneously to return to the **measured value display**

6.3 Alternative operation options

6.3.1 Operation with FieldCare

FieldCare is an Endress+Hauser asset management tool based on FDT technology. With FieldCare you can configure all Endress+Hauser devices as well as devices from other manufacturers that support the FDT standard. Hardware and software requirements can be found on the Internet:

www.de.endress.com -> Search: FieldCare -> FieldCare -> Technical data

FieldCare supports the following functions:

- Configuration of transmitters in online mode
- Loading and saving device data (upload/download)
- Documentation of the measuring point

Connection options: Commubox FXA291 with ToF Adapter FXA291 via service interface

6.4 Locking/unlocking configuration

6.4.1 Software locking

Enter a number unequal to 2457 in the **"Unlock parameter" (*A4)** function in the **"Diagnostics" (*A)** function group. The **L** symbol appears on the display. No more entries can be made.

If you try to change a parameter, the device goes to the **"Unlock parameter" (*A4)** function. Enter "2457". Parameters can now be modified again.

6.4.2 Hardware locking

Press -, + and E simultaneously. No more entries can be made. If you try to change a parameter, the following appears:

Local display	
Unlock parameter 0A4 L Hardware locked	

Press —, + and E simultaneously. The **"Unlock parameter" (*A4)** function appears. Enter "2457". Parameters can now be modified again.

Hardware locking can only be unlocked again via the display by pressing the —, + and E keys simultaneously once again. It is not possible to unlock the hardware by communication.

6.5 Resetting to the default configuration

It is always advisable to reset the customer parameters if you want to use a device with an unknown history. Effects of resetting:

- All customer parameters are reset to their default values.
- Linearization is switched to "Linear" but the table values are kept. The table can be switched back on in the "Linearization" (*40/*46) function in the "Linearization" (*4) function group.

To perform a reset, enter "33333" in the **"Reset" (*A3)** function in the **"Diagnostics" (*A)** function group.

A reset may negatively impact the measurement. As a rule, a basic setup must be performed again after a reset. All the calibration data are deleted after a reset. A complete calibration is needed to put the measurement back into operation.

The default values of each parameter are shown in bold in the menu overview in the appendix.

6.6 **PROFIBUS PA interface**

6.6.1 Device address

Selecting the device address

- An address must be assigned to each PROFIBUS PA device. The control system can only recognize the device if the address is set correctly.
- Each address can only be assigned once in a PROFIBUS PA network.
- Valid device addresses are in the range from 0 to 126. All devices are delivered from the factory with the software address 126.

Configuring the device address

The address "126" configured at the factory can be used to check the function of the device and connect it to an operating PROFIBUS-PA system. This address must be changed subsequently to add additional devices. The following options are available for setting the address:

- The address can be set via the **display and operating module VU331 (in the FHX40)**. For this purpose, go to the "Profibus param" function group and enter the desired address in the **"Instrument address" (*60)** function.
- The address can be set via **FieldCare**. For this purpose, go to the "Profibus param" function group and enter the desired address in the **"Instrument address"** function.

6.6.2 Device database files (GSD files)

The device database file (x.gsd) contains a description of the properties of the PROFIBUS-PA device, e.g. the supported data transmission rates or the type and format of the digital information sent to the PLC. In addition, bitmap files are required to configure a PROFIBUS PA network and are used to visualize the specific measuring point in the configuration software. Every device is assigned an ID number by the PROFIBUS User Organization. The name of the GSD file and related files is derived from this number.

The Gammapilot M has the ID number 1548 (hex) = 5448 (dec).

Where to obtain the GSD files

www.endress.de

Click "Download" and enter "GSD" as the search string. A list with download links to all the GSD files available appears under "Software".

- CD-ROM with all the GSD files for E+H devices; Order No.: 50097200
- GSD library of the PROFIBUS User Organization (PNO): http://www.PROFIBUS.com

Directory structure

The files are stored in the following directory structure:

Gammapilot_M/PA/Profile3/Revision1.0/	BMP/	Eh1548_d.bmp
		Eh1548_n.bmp
		Eh1548_s.bmp
	DIB/	Eh1548_d.dib
		Eh1548_n.dib
		Eh1548_s.dib
	GSD/	Extended/Eh3x1548.gsd
		Standard/Eh3_1548.gsd
	Typdat5x/Eh31548x.200 Info/	Liesmich.pdf
		Readme.pdf

- The GSD file in the "Extended" directory is needed for the STEP7 programming software of the Siemens S7-300/400 PLC family.
- The GSD files in the "Standard" directory are used for PLCs which only support an identifier byte and do not support an identifier format e.g. Allen-Bradley PLC5.
- For the COM ET200 programming software with Siemens S5, the "EH_1548x.200" type file is used instead of a GSD file and the DIB files are used instead of the BMP files.

Universal database file

As an alternative to the specific GSD file, the PNO provides a universal database file called PA139700.gsd for devices with an Analog Input block. This file supports the transmission of the main value. The transmission of a 2nd cyclic value or a display value is not supported. When using the universal database file, the **Profile** setting must be selected in the **"Ident Number" (*61)** function.

6.6.3 Cyclic data exchange

Block model of the Gammapilot M



- 1 Measuring signal
- 2 Sensor; signal evaluation
- 3 Transducer block; parameters that describe the device, e.g. calibration, linearization etc.
- 4 Analog Input function block; parameters for processing the measured variable, e.g. scaling, status
- 5 e.g. PLC
- 6 Physical block; device-specific properties, e.g. tag name
- 7 Display with scaling

The block model shows which data are exchanged continuously (i.e. by cyclic data transfer) between the Gammapilot M and the PLC. The numbers refer to the function group and function:

- After linearization and integration in the Transducer block the "Measured value" (*00) is transmitted to the Analog Input function block. There, it can be scaled and checked to see whether it exceeds the limit value, and is output via to the PLC "OUT value" (*63).
- The "Select V0H0" (*68) function determines whether the "Measured value" (*00) or the value from the PLC, "Display value" (*69), is shown on the device display.
- The "2nd cycl. value" (*67) function specifies whether the "Present averaged pulse rate" (*A5) or the "Medium temperature" (*A7) (measured with an external PT-100 sensor) is output as the second cyclic value.

Modules for the cyclic data telegram

The Gammapilot M makes the following modules available for the cyclic data telegram:

- Main process value
- This is the main measured value after scaling by the Analog Input block (*63).
- 2nd cyclic value This is the current average pulse rate (*A5) or the medium temperature (*A7) measured by an external PT-100 temperature sensor.
- Display value This is a random value that is transmitted from the PLC to the Gammapilot M (*69). It can then be displayed on the device display.
- FREE PLACE

You must use this empty module during configuration if the second cyclic value or the display value are not to appear in the data telegram (see below).

Configuration of the cyclic data telegram

Use the configuration software for your PLC to compose the data telegram from these modules in the following ways:

- Main value Select the "Main process value" module if you only want to transmit the main measured value.
- Main value and second cyclic value

Select the modules in the order **"Main process value"**, **"2nd cyclic value"**, **"FREE PLACE"** if you want to transmit the main measured value and the second cyclic value.

- Main value and display value
 Select the modules in the order "Main process value", "FREE PLACE", "Display value" if you want to transmit the main measured value and read out a display value from the PLC.
- Main value, second cyclic value and display value

Select the modules in the order **"Main process value", "2nd cyclic value", "Display value"** if you want to transmit the main measured value and the second cyclic value and read out a display value from the PLC.

The way the configuration is actually performed depends on the configuration software used.

Structure of the input data (measuring device -> PLC)

The input data are transmitted to the PLC with the following structure:

Index input data	Data	Access	Data format/comments
0, 1, 2, 3	Main value (level, density)	Read	32-bit floating point number (IEEE-754)
4	Status code for main value	Read	See "Status codes"
5, 6, 7, 8 (optional)	Secondary value (average pulse rate, temperature)	Read	32-bit floating point number (IEEE-754)
9 (optional)	Status code for secondary value	Read	See "Status codes"

Structure of the output data (PLC -> measuring device)

The output data from the PLC for display on the device have the following structure:

Index output data	Data	Access	Data format/comments
0, 1, 2, 3	Display value	Write	32-bit floating point number (IEEE-754)
4	Status code for display value	Write	See "Status codes"

IEEE-754 floating point number

The measured value is transmitted as an IEEE 754 floating point number as follows, wherein the measured value = $(-1)^{\text{sign}} \ge 2^{(E-127)} \ge (1+F)$

Byte 1						Byte 2									
Bit 7	Bit 6 Bit 5 Bit 4 Bit 3 Bit 2 Bit 1 Bit 0						Bit 0	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Sign	2^7 2^6 2^5 2^4 2^3 2^2 2^1						21	20	2-1	2-2	2-3	2-4	2-5	2-6	2-7
	Exponent (E)										Ma	antissa	(F)		

	Byte 3						Byte 4								
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
2-8	2-9	2-10	2-11	2-12	2-13	2-14	2-15	2-16	2-17	2-18	2-19	2-20	2-21	2-22	2-23
							Manti	ssa (F)							

Example:

40 F0 00 00 (hex) = 0100 0000 1111 0000 0000 0000 0000 (bin)

- $= (-1)^{0} \ge 2^{(129-127)} \ge (1 + 2^{-1} + 2^{-2} + 2^{-3})$
- $= 1 \ge 2^2 \ge (1 + 0.5 + 0.25 + 0.125)$

= 1 x 4 x 1.875

= 7.5

Status codes

The status codes comprise 1 byte and have the following meaning:

Status code	Device status	Meaning	Main value	Secondary value
OC Hex	BAD	Device error		х
0F Hex	BAD	Device error	х	
1F Hex	BAD	Out of service (target mode)	х	
40 Hex	UNCERTAIN	Non-specific (simulation)		х
47 Hex	UNCERTAIN	Last valid value (fail-safe mode active)	х	
4B Hex	UNCERTAIN	Substitute set (fail-safe mode active)	х	
4F Hex	UNCERTAIN	Initial value (fail-safe mode active)	х	
5C Hex	UNCERTAIN	Configuration error (limits not set correctly)	х	
80 Hex	GOOD	ОК		х
84 Hex	GOOD	Active block alarm (static revision counter incremented)	х	
89 Hex	GOOD	LOW_LIM (alarm active)	х	
8A Hex	GOOD	HI_LIM (alarm active)	х	
8D Hex	GOOD	LOW_LOW_LIM (alarm active)	x	
8E Hex	GOOD	HI_HI_LIM (alarm active)	x	

If a status other than "GOOD" is sent to the device, the display indicates an error.

6.6.4 Acyclic data exchange

Acyclic data exchange allows device parameters to be changed independently of the cyclic data exchange between the device and a PLC. Acyclic data exchange is used:

- To transmit device parameters during commissioning and maintenance
- To display measured variables that are not part of the cyclic data telegram

There are two kinds of acyclic data exchange:

Acyclic communication with a Class 2 master (MS2AC)

In the case of MS2AC, a Class 2 master opens the communication channel via a service access point (SAP) in order to access the device. Examples of a Class 2 master include:

- FieldCare
- PDM

All the device parameters must be made known to the master before data can be exchanged via PROFIBUS. Users can choose from the following options:

- A device description (DD)
- A device type manager (DTM)
- A software component within the master that accesses the parameters via slot and index addresses.

Communication

- The DD or DTM are supplied by the device manufacturer.
- The number of Class 2 masters that can simultaneously communicate with a device is determined by the number of SAPs available for this communication. The number of SAPs varies from device to device.
- The use of a Class 2 master increases the cycle time of the bus system. This must be taken into account when programming the control system or controller.

Acyclic communication with a Class 1 master (MS1AC)

In the case of MS1AC, a master that is already communicating cyclically with the device additionally opens an acyclic communication channel via the SAP 0x33 (special SAP for MS1AC). It can then acyclically read or write the parameters via the slot and index addresses like a Class 2 master.

MS1AC

- Up to now, only a few PROFIBUS masters on the market support MS1AC
- Not all PROFIBUS field devices support MS1AC

ACAUTION

► In the user program, avoid permanently writing parameters (e.g. with every program cycle). Parameters written acyclically are saved as persistent data to the memory modules (e.g. EEPROM, Flash). The memory modules are only designed for a limited number of writes. During standard operation without MS1AC (during configuration of the device), the number of write operations will not come close to reaching this limit. If the program is not well programmed, however, this limit can be quickly reached. This would dramatically reduce the lifetime of the device.

6.6.5 Slot/index tables

Device management

Parameter	Menu position	Slot	Index	Size [bytes]	Туре	Read	Write	Storage class
Dir. object header		1	0	12	STRING	Х		Constant
Comp. list dir. entry		1	1	24	STRING	Х		Constant

Analog Input block

Parameter	Menu position	Slot	Index	Size [bytes]	Туре	Read	Write	Storage class		
Standard parameters										
Block object		1	16	20	STRING	Х		Constant		
Static revision		1	17	2	UINT16	Х		Static		

Parameter	Menu position	Slot	Index	Size [bytes]	Туре	Read	Write	Storage class
Tag description		1	18	32	STRING	Х	Х	Static
Strategy		1	19	2	UINT16	Х	Х	Static
Alert key		1	20	1	UINT8	Х	Х	Static
Target mode		1	21	1	ENUM8	Х	Х	Static
Mode of block		1	22	3	UINT8+ UINT8+ UINT8	Х		Dynamic
Alarm summary		1	23	8	UINT16+ UINT16+ UINT16+ UINT16	Х		Dynamic
Batch		1	24	10	UINT32+ UINT16+ UINT16+ UINT16	Х		Dynamic
Block parameters								
Out		1	26	5	FLOAT+ UINT8	Х	Х	Static
PV scale		1	27	8	FLOAT+ FLOAT	Х	Х	Static
Out scale		1	28	11	FLOAT+ FLOAT+ UINT16+ UINT8	Х	Х	Static
Linearisation type		1	29	1	UINT8	Х	Х	Static
Channel		1	30	2	UINT16	Х	Х	Static
PV filter time		1	32	4	FLOAT	Х	Х	Static
Fail safe type		1	33	1	UINT8	Х	Х	Static
Fail safe value		1	34	4	FLOAT	Х	Х	Static
Alarm hysteresis		1	35	4	FLOAT	Х	Х	Static
HI HI limit		1	37	4	FLOAT	Х	Х	Static
HI limit		1	39	4	FLOAT	Х	Х	Static
LO limit		1	41	4	FLOAT	Х	Х	Static
LO LO limit		1	43	4	FLOAT	Х	Х	Static
HI HI alarm		1	46		UINT8+ UINT8+ STRING+ UINT16+ FLOAT	Х		Dynamic
HI alarm		1	47		UINT8+ UINT8+ STRING+ UINT16+ FLOAT	Х		Dynamic
LO alarm		1	48		UINT8+ UINT8+ STRING+ UINT16+ FLOAT	X		Dynamic
LO LO alarm		1	49		UINT8+ UINT8+ STRING+ UINT16+ FLOAT	Х		Dynamic

Parameter	Menu position	Slot	Index	Size [bytes]	Туре	Read	Write	Storage class
Simulate		1	50	6	UINT8+ FLOAT+ UINT8	Х	Х	Dynamic
Out unit text		1	51		STRING	Х	Х	Static

Physical block

Parameter	Menu position	Slot	Index	Size [bytes]	Туре	Read	Write	Storage class
Standard parameters								
Block object		0	16		STRING	Х		Constant
Static revision		0	17	2	UINT16	Х		Static
Tag description		0	18		STRING	Х	Х	Static
Strategy		0	19	2	UINT16	Х	Х	Static
Alert key		0	20	1	UINT8	Х	Х	Static
Target mode		0	21	1	ENUM8	Х	Х	Static
Mode		0	22	3	UINT8+ UINT8+ UINT8	Х		Dynamic
Alarm summary		0	23	2	STRING	Х		Dynamic
Block parameters								
Software revision		0	24		STRING	Х		Constant
Hardware revision		0	25		STRING	Х		Constant
Device manufacturer ID		0	26	2	UINT16	Х		Constant
Device ID		0	27		STRING	Х		Constant
Device serial number		0	28		STRING	Х		Constant
Diagnosis		0	29		STRING	Х		Dynamic
Diagnosis extension		0	30		STRING	Х		Dynamic
Diagnosis mask		0	31		STRING	Х		Constant
Diagnosis mask ext.		0	32		STRING	Х		Constant
Device certification		0	33		STRING	Х		Constant
Write locking		0	34	2	UINT16	Х	Х	Static
Factory reset		0	35	2	UINT16	Х	Х	Static
Descriptor		0	36	32	STRING	Х	Х	Static
Device message		0	37	32	STRING	Х	Х	Static
Device instal. date		0	38	16	STRING	Х	Х	Static
Ident number select		0	40	1	UINT8	Х	Х	Static
HW write protection		0	41	1	UINT8	Х		Dynamic
Endress+Hauser param	eters				I			
Error code		0	54	2	UINT16	Х		Dynamic
Last error code		0	55	2	UINT16	Х		Static
Up down features		0	56	1	STRING	Х		Constant
Up down control		0	57	1	UINT8	Х	Х	Dynamic
Up down param		0	58	20	STRING	Х	Х	Dynamic
Bus address		0	59	1	UINT8	Х		Dynamic

Parameter	Menu position	Slot	Index	Size [bytes]	Туре	Read	Write	Storage class
Device SW no.		0	60	2	UINT16	Х		Constant
Set unit to bus		0	61	1	UINT8	Х	Х	Dynamic
Display value		0	62	6	FLOAT+ UINT8+ UINT8+ STRING	Х	Х	
Select main value		0	63	1	UINT8	Х	Х	Static
PA profile revision		0	64	32	STRING	Х		Constant
Status		0	65	1	UINT8	Х		Static
Identification string		0	66	32	STRING	Х		Static
Identification number		0	67	1	UINT8	Х		Dynamic
Dir. object header		1	0	12	STRING	Х		Constant
Comp. list dir. entry		1	1	24	STRING	Х		Constant

Endress+Hauser-specific Level Transducer block

Parameter	Menu position	Slot	Index	Size [bytes]	Туре	Read	Write	Storage class
Standard parameters								
Block data		1	114	20	STRING	Х	Х	Static
Static revision		1	115	2	UINT16	Х		Static
Tag description		1	116	32	STRING	Х	Х	Static
Strategy		1	117	2	UINT16	Х	Х	Static
Alert key		1	118	1	UINT8	Х	Х	Static
Target mode		1	119	1	UINT8	Х	Х	Static
Mode		1	120	3	UINT8+ UINT8 UINT8	Х		Dynamic
Alarm summary		1	121	8	STRING	Х		Dynamic
Status		1	122	1	UINT8	Х	Х	Dynamic
Endress+Hauser param	eters							
Measured value	(*00)	1	138	4	FLOAT	Х		Dynamic
Present date	(*01)	1	139	16	STRING	Х		Static
Present date day	(*01)	1	140	1	UINT8	Х	Х	Dynamic
Present date month	(*01)	1	141	1	UINT8	Х	Х	Dynamic
Present date year	(*01)	1	142	1	UINT8	Х	Х	Dynamic
Present date hour	(*01)	1	143	1	UINT8	Х	Х	Dynamic
Present date minute	(*01)	1	144	1	UINT8	Х	Х	Dynamic
Ray type	(*02)	1	145	2	ENUM	Х	Х	Static
Radiation source	(*03)	1	146	2	ENUM	Х	Х	Static
Master slave mode	(*04)	1	147	2	ENUM	Х	Х	Static
Measurement mode	(*05)	1	148	2	ENUM	Х	Х	Static
Density unit	(*06)	1	149	2	ENUM	Х	Х	Static
Min. density	(*07)	1	150	4	FLOAT	Х	Х	Static
Max. density	(*08)	1	151	4	FLOAT	Х	Х	Static
Pipe diam. unit	(*09)	1	152	2	ENUM	Х	Х	Static

Parameter	Menu position	Slot	Index	Size [bytes]	Туре	Read	Write	Storage class
Pipe diameter	(*0A)	1	153	4	FLOAT	Х	Х	Static
Output damping	(*0B)	1	154	2	UINT16	Х	Х	Static
Backgr. calibr.	(*10)	1	160	2	ENUM	Х	Х	Static
Average pulse rate	(*11)	1	161	4	INT32	Х		Dynamic
Backgr. pulse rate	(*12)	1	162	4	INT32	Х	Х	Static
Calibr. point level	(*13)	1	163	2	ENUM	Х	Х	Static
Value full	(*14)	1	164	4	FLOAT	Х	Х	Static
Calibration start stop	(*15)	1	165	2	ENUM	Х	Х	Static
Full calibr. pulse rate	(*16)	1	166	4	INT32	Х	Х	Static
Value empty	(*17)	1	167	4	FLOAT	Х	Х	Static
Empty calibr. pulse rate	(*18)	1	168	4	INT32	Х	Х	Static
Calibration next point	(*19)	1	169	2	ENUM	Х	Х	Static
Calibr. point density	(*1A)	1	170	1	UINT8	Х	Х	Static
Density calibr.	(*1B)	1	172	4	INT32	Х	Х	Static
Density value	(*1C)	1	173	4	FLOAT	Х	Х	Static
Use of cal. point	(*1D)	1	174	2	ENUM	Х	Х	Static
Absorp. coeff.	(*1E)	1	175	4	FLOAT	Х	Х	Static
Ref. pulse rate	(*1F)	1	176	4	UINT32	Х		Dynamic
Output on alarm	(*20)	1	180	2	ENUM	Х	Х	Static
Temp. compens.	(*30)	1	190	2	ENUM	Х	Х	Static
Select temperature	(*31)	1	191	2	ENUM	Х	Х	Static
Temp. value	(*32)	1	192	4	FLOAT	Х	Х	Static
Density value	(*33)	1	193	4	FLOAT	Х	Х	Static
Lin. coeff.	(*34)	1	194	4	FLOAT	Х	Х	Static
Square coeff.	(*35)	1	195	4	FLOAT	Х	Х	Static
Temp. coeff. next point	(*36)	1	196	2	ENUM	Х	Х	Static
Linearisation level	(*40)	1	200	2	ENUM	Х	Х	Static
Lin. table number	(*41)	1	201	1	UINT8	Х	Х	Static
Input level	(*42)	1	202	4	FLOAT	Х	Х	Static
Linearisation start stop	(*43)	1	203	2	ENUM	Х	Х	Static
Normal. pulse rate	(*44)	1	204	4	INT32	Х	Х	Static
Unit selection	(*45)	1	205	2	ENUM	Х	Х	Static
Customer unit	(*46)	1	206	2	ENUM16	Х	Х	Static
Linearisation concentr.	(*47)	1	207	2	ENUM	Х	Х	Static
Table number concentr.	(*48)	1	208	1	UINT8	Х	Х	Static
Input density	(*49)	1	209	4	FLOAT	Х	Х	Static
Input concentr.	(*4A)	1	210	4	FLOAT	Х	Х	Static
Lin. next point	(*4B)	2	233	2	ENUM	Х	Х	Static
Gammagr. detect.	(*50)	1	220	2	ENUM	Х	Х	Static
Span time	(*51)	1	221	2	UINT16	Х	Х	Static
Gammagr. sensitivity	(*52)	1	222	1	UINT8	Х	Х	Static
Gammagr. output	(*53)	1	223	2	ENUM	Х	Х	Static
Gammagr. hold time	(*54)	1	224	2	UINT16	Х	Х	Static

Parameter	Menu position	Slot	Index	Size [bytes]	Туре	Read	Write	Storage class
Gammagr. counter	(*55)	1	225	2	UINT16	Х		Dynamic
Gammagr. counter reset	(*56)	1	226	2	ENUM	Х	Х	Static
PA slave address	(*60)	1	230	1	UINT8	Х	Х	Static
PA ident number sel.	(*61)	1	231	2	ENUM	Х	Х	Static
Set unit to bus	(*62)	1	232	2	ENUM	Х	Х	Static
AI out value	(*63)	1	233	4	FLOAT	Х		Dynamic
AI out status	(*64)	1	234	1	UINT8	Х		Dynamic
Sim. level mode	(*65)	1	235	2	ENUM	Х	Х	Static
Sim. density mode	(*65)	1	236	2	ENUM	Х	Х	Static
Sim. concentr. mode	(*65)	1	237	2	ENUM	Х	Х	Static
Sim. value level	(*66)	1	238	4	FLOAT	Х	Х	Static
Sim. value pulse rate	(*66)	1	239	4	INT32	Х	Х	Static
Sim. value density	(*66)	1	240	4	FLOAT	Х	Х	Static
Sim. value concentr.	(*66)	1	241	4	FLOAT	Х	Х	Static
2nd cyclic value	(*67)	1	242	2	ENUM	Х	Х	Static
Select main value	(*68)	1	243	2	ENUM	Х	Х	Static
Language	(*92)	1	245	2	ENUM	Х	Х	Static
Back to home	(*93)	1	246	2	INT16	Х	Х	Static
No. of decimals	(*95)	1	247	2	ENUM	Х	Х	Static
Sep. character	(*96)	1	248	2	ENUM	Х	Х	Static
Display test	(*97)	1	249	2	ENUM	Х	Х	Static
Present error	(*A0)	2	0	2	UINT16	Х		Dynamic
Last error	(*A1)	2	1	2	UINT16	Х		Dynamic
Clear last error	(*A2)	2	2	2	ENUM	Х	Х	Static
Reset	(*A3)	2	3	2	UINT16	Х	Х	Static
Unlock parameter	(*A4)	2	4	2	UINT16	Х	Х	Static
Pres. avg. pulse rate	(*A5)	2	5	4	INT32	Х		Dynamic
Avg. raw pulse rate	(*A6)	2	6	4	INT32	Х		Dynamic
Medium temp.	(*A7)	2	7	4	FLOAT	Х		Dynamic
Density value	(*A8)	2	8	4	FLOAT	Х		Dynamic
Tag number	(*CO)	2	9	4	STRING	Х	Х	Static
Profile version	(*C1)	2	10	16	STRING	Х		Static
Prot. softw. version	(*C2)	2	11	16	STRING	Х		Const.
Serial number	(*C4)	2	12	16	STRING	Х		Static
Temp. unit	(*C6)	2	13	2	ENUM	Х	Х	Static
Calibr. date	(*C7)	2	14	16	STRING	Х		Static
Calibr. date day	(*C7)	2	15	1	UINT8	Х	Х	Static
Calibr. date month	(*C7)	2	16	1	UINT8	Х	Х	Static
Calibr. date year	(*C7)	2	17	1	UINT8	Х	Х	Static
Calibr. date hour	(*C7)	2	18	1	UINT8	Х	Х	Static
Calibr. date minute	(*C7)	2	19	1	UINT8	Х	Х	Static
Recalibr. date	(*C8)	2	20	16	STRING	Х		Static
Recalibr. date day	(*C8)	2	21	1	UINT8	Х		Static

Parameter	Menu position	Slot	Index	Size [bytes]	Туре	Read	Write	Storage class
Recalibr. date month	(*C8)	2	22	1	UINT8	Х		Static
Recalibr. date year	(*C8)	2	23	1	UINT8	Х		Static
Recalibr. date hour	(*C8)	2	24	1	UINT8	Х		Static
Recalibr. date minute	(*C8)	2	25	1	UINT8	Х		Static

7

Commissioning

This chapter describes how to commission the Gammapilot M using the display and operating module VU331 (which is located in the remote display and operating unit FHX40). Commissioning via "FieldCare" or "Field Xpert SFX100" is performed in a similar manner. More information on the "FieldCare" operating program and on Field Xpert SFX100 is provided in BA00027S/04/EN and BA00060S/04/EN respectively.

7.1 Calibration: overview



A detailed description of the functions used can be found in the following sections:

- Basic setup $\rightarrow \square 56$
- Calibration for level measurement and point level detection $\rightarrow \ \bigspace{-1.5ex} \bigspace{-1.5ex$
- Calibration for density and concentration measurements $\rightarrow \cong 69$
- Density measurement/temperature-compensated \rightarrow \cong 76

Step	Function	Entry or selection	Comments	See page
1	Present date (*01)	Sample value: 12.11.04 10:30	Set the day with + and -; confirm with E; the same routine applies for the month, year, hour and minute	
2	Beam type (*02)	Standard/cont.Modulated	Select with \boxdot and \frown ; confirm with \boxdot	
3	Isotope (*03)	 ¹³⁷Cs ⁶⁰Co No compensation 	Select with \boxdot and \frown ; confirm with \boxdot	
4	Operating mode (*04)	Stand aloneMasterSlaveEnd slaveNot defined	Select with \boxdot and $_$; confirm with \blacksquare	
5	Measurement mode (*05)	LevelSwitchDensityConcentration	Select with \boxdot and \boxdot ; confirm with \blacksquare	
The f	ollowing functions are for	density and concentr	ration measurements only:	
6	Density unit (*06)	 g/cm³ g/l 	Select with \boxdot and \boxdot ; confirm with \blacksquare	
7	Min. density (*07)(lower limit of the measuring range)	Sample value: 0.9500 g/cm ³	Set each decimal place with $+$ and $-$ and confirm with E ; after the last place, confirm the whole value with E .	
8	Max. density (*08) (upper limit of the measuring range)	Sample value: 1.2500 g/cm ³	Set each decimal place with $+$ and $-$ and confirm with E ; after the last place, confirm the whole value with E .	
9	Pipe diameter unit (*09)	• mm • inch	Select with \boxdot and \bigcirc ; confirm with \boxdot	
10	Pipe diameter (*0A)	Sample value: 200 mm	Set each decimal place with $+$ and $-$ and confirm with E ; after the last place, confirm the whole value with E .	
The f	ollowing function is for all	measurement mode	s:	
11	Output damping (*0B)	Sample value: 60 s	Set each decimal place with $+$ and $-$ and confirm with E ; after the last place, confirm the whole value with E .	

7.1.1 Basic setup

7.1.2 Calibration for level measurement and point level detection

The general principles for calibrating for level measurement and point level detection are described in "Calibration for level measurement and point level detection"

Background calibration

For details, see "Background calibration"

Step	Function	Action/comments
1		 Switch off radiation Fill vessel For level: min. 60% For switch (level limit): radiation path is covered
2	Background calibration (*10)	Select "Start" with $+$ or $-$; confirm with \blacksquare
3	Avg. pulse rate (*11)	Wait until the value is stable, then confirm with ${\ensuremath{\mathbb E}}$

Step	Function	Action/comments		
4	Background calibration (*10)	Select "Stop/edit" with \boxdot or \lnot ; confirm with \blacksquare		
5	Background pulse rate (*12) Confirm value with E			
Continue with full and empty calibration/covered and free calibration				

"Full" or "Covered" calibration

For details, see "Full and empty calibration or covered and free calibration"

Step	Function	Action/comments				
1		Switch on radiationVessel remains filled				
2	Calibration point (*13)	Select "Full/covered" with + or - ; confirm with E				
The fol	The following function is for level measurement only					
3	Value full (*14)	Enter the current level (60% - 100%)				
The fol	lowing functions are for level ar	d point level measurements				
4	Calibration (*15)	Select "Start" with $+$ or $-$; confirm with E				
5	Avg. pulse rate (*11)	Wait until the value is stable, then confirm with E				
6	Calibration (*15)	Select "Stop/edit" with \boxdot or $-$; confirm with \blacksquare				
7	Full calibration (*16)	Confirm value with E				
8	Next point (*19)	Select "Yes" with $+$ or $-$; confirm with \mathbb{E}				
Continue with "Empty" or "Free" calibration						

"Empty" or "Free" calibration

For details, see "Full and empty calibration or covered and free calibration"

Step	Function	Action/comments			
1		 The radiation remains switched on Empty the vessel Level: max. 40% Switch (level limit): radiation path free 			
2	Calibration point (*13)	Select "Empty/free" with \boxdot or \fbox ; confirm with \boxdot			
The following function is for level measurement only					
3	Value empty (*17)	Enter the current level (0% - 40%)			
The fol	lowing functions are for level and	l point level measurements			
4	Calibration (*15)	Select "Start" with \bigcirc or \bigcirc ; confirm with \boxdot			
5	Avg. pulse rate (*11)	Wait until the value is stable, then confirm with $\ensuremath{\mathbb E}$			
6	Calibration (*15)	Select "Stop/edit" with $+$ or $-$; confirm with E			
7	Empty calibration (*18)	Confirm value with E			
8	Next point (*19)	Select "No" with + or - ; confirm with E			
This cor	mpletes the calibration.				

7.1.3 Calibration for density and concentration measurements

The general principles for calibrating for density and concentration measurements are described in "General principles"

Background calibration

For details, see "Background calibration"

Step	Function	Action/comments			
1		Switch off radiation			
2	Background calibration (*10)	Select "Start" with $+$ or $-$; confirm with \mathbb{E}			
3	Avg. pulse rate (*11)	Wait until the value is stable, then confirm with E			
4	Background calibration (*10)	Select "Stop/edit" with $+$ or $-$; confirm with E			
5	Background pulse rate (*12)	Confirm value with E			
Contin	Continue to enter the calibration points				

Calibration points (one-point calibration, multiple point calibration, recalibration)

For details, see "Calibration points"

Step	Function	Action/comments
1		 Switch on radiation Fill the pipe with a medium of known density or take a sample of the medium during the calibration and determine its density in the laboratory, see Step 4).
2	Calibration point (*1A)	Enter the number of the calibration point: • For one-point calibration: "1" • For multiple point calibration: "1" - "9" • For recalibration: "10"
3	Calibration (*15)	Select "Start" with \boxdot or \square ; confirm with \blacksquare
4	Avg. pulse rate (*11)	Wait until the value is stable, then confirm with E During this time, take a sample of the medium and determine its density in the laboratory
5	Calibration (*15)	Select "Stop/edit" with $+$ or $-$; confirm with E
6	Density calibration (*1B)	Confirm value with E
7	Density value (*1C)	Enter the density of the medium (which was determined in the laboratory)
8	Calibration point (*1D)	Select "Used" with $(+)$ or $(-)$; confirm with (E)
9	Absorption coefficient (*1E)	Display value; confirm with E
10	Reference pulse rate (*1F)	Display value; confirm with E
11	Next point (*19)	 For one-point calibration: select "No"; this completes the calibration For multiple point calibration: select "Yes"; repeat steps 1 - 10 with a medium of a different density For recalibration: select "No"; this completes the recalibration

7.2 Switching on the device

Error messages A165 "Electronics defect" and A635 "Present date not defined"

The Gammapilot M contains 2 real-time clocks for decay compensation, which are permanently compared with one another for safety reasons. In order to bridge voltage interruptions, the clocks are buffered with a capacitor. To ensure that the clocks work correctly and retain the date in the event of a voltage interruption, this capacitor must have a minimum charge. If the A165 "Electronics defect" or A635 "Present date not defined" error message appears **after switching on** the Gammapilot M, this may indicate that the capacitor is not yet sufficiently charged. In this case, the Gammapilot M must be operated at the operating voltage for at least 20 to 30 minutes in order to charge the capacitor. After this, the correct date must be entered. If the error message persists after this, it can be deleted by switching the Gammapilot M off and then on again.

After the supply voltage has been switched on, the device is first initialized. Due to internal memory tests, this takes approx. 2 minutes.

Local display	
FMG60	
V01.03.06 PA	

The following information appears for approximately 5 seconds:

- Device type
- Software version
- Type of communication signal

Language 092	
✔ English Français Español	

On the first power-up, select the language for the text on the display.

Select the language with the - and + keys. Press E twice to confirm your selection.

Group selection	Group selection	
 ✓ Basic setup Calibration Safety settings 		

The measured value screen then appears.

The basic setup can now be performed. Press 🗉 to switch to the group selection: Press 🗉 again to enter the first function of the "Basic setup" function group

7.3 Basic setup

7.3.1 "Present date" (*01)

Local display	•	
Present date	*01	
17.11.04	10:30	
DD.MM.YY	HH:MM	

This function is used to enter the date and time of the basic setup. Each of these values must be confirmed by pressing E after entering the value.

7.3.2 "Beam type" (*02)

Local display
Beam type *02 ✔ Standard/cont. Modulated

This function is used to specify whether the radiation source used emits radiation continuously or whether it is modulated (for gamma radiography suppression).

- Standard/continuous (permanent, continuous radiation)
- Modulated (modulated radiation source)

7.3.3 "Isotope" (*03)

Local display
Isotope *03 ✔ 137 Cs
60 Co
No compens.

This function is used to specify which isotope is used for the measurement. The Gammapilot M needs this information for decay compensation.

7.3.4 "Operating mode" (*04)

Local display
Operating mode *04 ✔ Stand alone Master Slave

This function is used to specify in which operating mode the Gammapilot M will be used.

The operating mode can only be selected once. After this, the function is automatically locked and can only be unlocked by resetting the Gammapilot M ("Reset" (*A3) function).



A Stand alone.

Only one Gammapilot M is required for measuring ranges up to 2 m (6.6 ft)

For larger measuring ranges, any number of Gammapilot M devices can be interconnected (cascade mode). The devices are defined by software settings as:

- B Master
- C Slave(s) or
- D End slave
- 1 4 to 20 mA HART; PROFIBUS PA; FOUNDATION Fieldbus

Options/display:

- **Stand alone:** This option is selected if the Gammapilot M is used as a single, standalone device.
- Master: This option is selected if the Gammapilot M is located at the beginning of a cascade chain. It then receives the pulses from a connected slave, adds its own pulses and calculates the measured value from this total.
- Slave: This option is selected if the Gammapilot M is located in the middle of a cascade chain. It then receives the pulses from another connected slave or end slave, adds its own pulses and transmits this total to the next device (master or slave). The calibration is finished if this option is selected. If several transmitters are cascaded, the rest of the calibration procedure is performed on the master only.
- End slave: This option is selected if the Gammapilot is located at the end of a cascade chain. It does not receive pulses from another device but transmits its own pulses to the next device (master or slave). The calibration is finished if this option is selected. If several transmitters are cascaded, the rest of the calibration procedure is performed on the master only.
- Not defined: Is displayed if the operating mode has not yet been selected. An option must be selected in order to continue with the basic setup.

i

If a "slave" or an "end slave" is connected to "FieldCare", the pulse rate of this device is displayed in the header instead of the measured value.

7.3.5 "Measurement mode" (*05)

Local display
"Measurement mode" *05
✓ Level
Switch
Density

This function is used to select the desired measurement mode.

Further options:

- Level measurement (continuous)
- Level limit detection
- Density measurement (with temperature compensation if required)
- Concentration measurement (density measurement followed by linearization)
- The operating mode can only be selected once. After this, the function is automatically locked and can only be unlocked by resetting the Gammapilot M ("Reset" (*A3) function).



- A Level measurement (continuous)
- B Level limit detection
- C Density measurement (with temperature compensation if required)
- D Concentration measurement (density measurement followed by linearization)
- ρ Density
- E Concentration

7.3.6 "Density unit" (*06)

Local display
Density unit *06
✓ g/cm ³
g/l
lb/gal

This function is needed for density and concentration measurements only. It is used to select the density unit.

Further options:

- g/cm³
- g/l
- Ib/gal; [1g/cm³ = 8,345 lb/gal]
- Ib/ft³; [1g/cm³ = 62,428 lb/ft³]
- °Brix; [1°Brix =270 (1 1/x)]

- Baumé; [1°Baumé = 144.3 (1 1/x)]
- °API; [1°API = 131.5 (1,076/x 1)]
- Twaddell; [1°Twaddell = 200 (x-1)]

"x" refers to the density in g/cm³. The formula indicates how many degrees this density corresponds to.

7.3.7 "Min. density" (*07)

Local display	Loc
Min. density *07	Mir
0.9500 g/cm ³	0.9

This function is needed for density and concentration measurements only. It is used to specify the lower limit of the density measuring range.

7.3.8 "Max. density" (*08)

Local display	
Max. density *08 1.2500 g/cm ³	

This function is needed for density and concentration measurements only. It is used to specify the upper limit of the density measuring range.

7.3.9 "Pipe diameter unit" (*09)

Local display
Pipe diam. unit *09 ✔ mm inch

This function is needed for density and concentration measurements only. It is used to select the unit for the pipe diameter.

1 in = 25.4 mm

7.3.10 "Pipe diameter" (*0A)

Local display	
² ipe diam. *0A 200 mm	

This function is needed for density and concentration measurements only. It is used to specify the irradiated measuring path L. With standard installation, this value is identical to the pipe inner diameter D_I . For other installations (to enlarge the irradiated measuring path), it may be larger however (see figure). The pipe walls are not to be considered a part of the measuring path.



- 8 Always specify the complete irradiated measuring path L in the "Pipe diameter" (*0A) function. Depending on the installation, this value may be larger than the actual pipe diameter.
- 1 Gammapilot M

7.3.11 "Output damping" (*0B)

Local display	
Output damping *0B 60 s	

This function is used to specify the output damping time τ (in seconds). A change in the measured value is attenuated by this time. After a change in the level or density it takes 5 x τ until the new measured value is reached.



1 Level change (or density change)

2 Measured value

Value range

1 to 999 s

Default value

The default value depends on the selected "Measurement mode" (*05):

- Level: 6 s
- Switch: 6 s
- Density: 60 s
- Concentration: 60 s

Selecting the output damping value

The output damping value depends on the process conditions. Increasing the output damping value makes the measured value considerably steadier but also slower. In order to reduce the influence of stirrers or turbulent surfaces, it is advisable to increase the output damping value. However, the value selected for output damping should not be too large so that rapid changes in the measured value can also be detected quickly.

7.4 Calibration for level measurement and point level detection

7.4.1 General principles

The calibration points for the measurement are entered in the **"Calibration" (*1)** function group. Each calibration point consists of a level and the associated pulse rate.

Calibration points for level measurement



- A Background calibration
- B Full calibration
- C Empty calibration

Background calibration

Background calibration refers to the following situation:

- The radiation is switched off
- The vessel is filled as much as possible (ideally 100%) within the measuring range.

The background calibration is necessary in order to register the natural background radiation at the mounting position of the Gammapilot M. The pulse rate of this background radiation is automatically subtracted from all other measured pulse rates. This means that only the part of the pulse rate which originates from the applied radiation source is displayed and taken into account during signal analysis. As the background radiation remains virtually constant for the entire measurement duration (as opposed to the radiation of the source used), background calibration is not included in automatic decay compensation of the Gammapilot M.

Full calibration

Full calibration refers to the following situation:

- The radiation is switched on
- The vessel is filled as much as possible (ideally 100%, at least 60%) within the measuring range.

If the vessel cannot be filled to at least 60% during the calibration, the full calibration can alternatively be performed with the radiation switched off. This is a way of simulating a vessel that is 100% full. In this case, full calibration is identical to background calibration. As the pulse rate of the background calibration is automatically subtracted, the pulse rate displayed is around 0 cps.



This type of simulated calibration is not possible with self-radiating media. In this case, the vessel must be filled to 100% to perform the background and full calibration.

Empty calibration

Empty calibration refers to the following situation:

- The radiation is switched on
- The vessel is emptied as much as possible (ideally 0%, at least 40%) within the measuring range.

Calibration points for point level detection



- Α Background calibration
- В Covered calibration
- Free calibration С

Background calibration

Background calibration refers to the following situation:

- The radiation is switched off.
- The radiation path is completely covered

The background calibration is necessary in order to register the natural background radiation at the mounting position of the Gammapilot M. The pulse rate of this background radiation is automatically subtracted from all other measured pulse rates. This means that only the part of the pulse rate which originates from the applied radiation source is displayed. As the background radiation remains virtually constant for the entire measurement duration (as opposed to the radiation of the source used), background calibration is not included in automatic decay compensation of the Gammapilot M.

Covered calibration

Covered calibration refers to the following situation:

- The radiation is switched on
- The radiation path is completely covered, where possible

If the radiation path cannot be completely covered during the calibration, the covered calibration can alternatively be performed with the radiation switched off. This is a way of simulating a completely covered radiation path. In this case, covered calibration is identical to background calibration. As the pulse rate of the background calibration is automatically subtracted, the pulse rate displayed is around 0 c/s.

This type of simulated calibration is not possible with self-radiating media. In this case, the radiation path must be completely covered to perform the background calibration and the covered calibration.

Free calibration

Free calibration refers to the following situation:

- The radiation is switched on
- The radiation path is completely free

Methods for entering the calibration points

Automatic calibration

For an automatic calibration, the vessel is filled to the required value. The radiation remains switched off for background calibration, while radiation is switched on for all other calibration points. The Gammapilot M records the pulse rate automatically. The associated level is entered by the user.

Manual calibration

If one or more calibration points cannot be implemented during the commissioning of the Gammapilot M (e.g. because the vessel cannot be sufficiently filled or emptied), this calibration point must be entered manually. This means that both the level and the associated pulse rate must be entered directly. Please contact Endress+Hauser Service for any questions regarding the calculation of the pulse rate.



- Calibration date and calibration
- The calibration date is not set automatically during manual calibration. It must be entered by the user in the **"Calibration date" (*C7)** function.
- A calibration point entered manually should be replaced by an automatic calibration as soon as the associated level occurs during the operation of the plant. This recalibration is advisable because calibration points entered automatically result in more precise measurement results than calculated ones.

7.4.2 Background calibration

Excerpt from the operating menu

The following excerpt from the operating menu illustrates the entries to be made for background calibration. The individual functions are explained in detail in the sections that follow.



"Background calibration" (*10)

Local display
Backgr. cal. *10 Stop/edit Start

This function is used to start the background calibration

Options:

- Stop/edit
 - This option must be selected if:
 - No background calibration is to be performed but the pulse rate of an existing background calibration is to be displayed instead.
 - The background calibration is to be performed manually.

Once this option has been selected, the Gammapilot M goes to the **"Bgr. pulse rate"** (*12) function where the existing pulse rate is displayed and can be changed if required.

Start

This option is used to start automatic background calibration. The Gammapilot M changes to the **"Avg. pulse rate" (*11)** function.

"Avg. pulse rate" (*11)

Local display	
Avg. pulse rate *11 186 cps	

The average (integrated) pulse rate is displayed in this function (after the selection of "Start" in the previous function). Initially, this value fluctuates (because of the decay statistics), but reaches an average value over time due to integration. The longer the averaging is performed, the lower the fluctuations.



When the value is sufficiently stable users can quit the function by pressing E. After this, the Gammapilot M changes to the **"Background calibration" (*10)** function. Here the

"Stop/edit" option must be selected to stop the integration. The value is then automatically transmitted to the "Background pulse rate" (*12) function.

Background pulse rate

- The maximum integration time (= averaging time) is 1000 s. After this time, the value is automatically transmitted to the **"Background pulse rate" (*1B)** function.
- Integration is **not** terminated by pressing E in the "**Avg. pulse rate**" (*11) function. Integration continues until "**Stop/edit**" is selected in the "**Background calibration**" (*10) function. For this reason, there may be a slight deviation between the last average (integrated) pulse rate displayed and the final "**Background pulse rate**" (*12).

"Background pulse rate" (*12)

Local display
Background pulse rate *12 186 cps

The pulse rate of the background calibration is displayed in this function. Press E to confirm the value and complete the background calibration. If a background calibration has not yet been performed, "-1" is displayed. There are two options if this occurs:

- Return to the "Background calibration" (*10) function and restart the background calibration
- Enter a known or calculated pulse rate (manual calibration). The Gammapilot M then changes to the "Calibration point" (*13) or (*1A) function.

7.4.3 Full and empty calibration or covered and free calibration

Excerpt from the operating menu

The following excerpt from the operating menu illustrates the procedure for empty and full calibration (for level measurements) or for free and covered calibration (for point level detection). The individual functions are explained in detail in the sections that follow. The functions are only accessible once the background calibration has been performed.



The "Value full" (*14) and "Value empty" (*17) functions only appear if the "Level" option was selected in the "Measurement mode" (*05) function.

"Calibration point" (*13)

Local display
Calibr. point *13 ✓ Full/covered Empty/free

This function is used to select which calibration point ("full/covered" or "empty/free") will be entered.

"Value full" (*14) / "Value empty" (*17)

Local display	
Value full *14 100%	

Local display

```
Value empty *17
0%
```

These functions are needed for level measurements only. They are used to specify the level at which the full or empty calibration is performed.

Range of values

	optimum value	minimum value	maximum value
Value full (*14)	100%	60%	100%
Value empty (*17)	0%	0%	40%

"Calibration" (*15)

Local display	
Calibration *15 Stop/edit Start	

This function is used to start automatic entry of the selected calibration point

Options:

- Stop/edit
 - This option must be selected if:
 - The calibration point is not to be entered (e.g. because it has already been entered).
 The pulse rate of the calibration point is then displayed in the following function "Full calibration" (*16) or "Empty calibration" (*18). This value can be changed if required.
 - The calibration point is to be entered manually. The Gammapilot M changes to the "Full calibration" (*16) or "Empty calibration" (*18) function.
- Start

This option is used to start automatic entry of the calibration point. The Gammapilot M then changes to the **"Avg. pulse rate" (*11)** function.

"Avg. pulse rate" (*11)



The average (integrated) pulse rate is displayed in this function (after the selection of "Start" in the previous function). Initially, this value fluctuates (because of the decay statistics), but reaches an average value over time due to integration. The longer the averaging is performed, the lower the fluctuations.



9 The integrated (average) pulse rate fluctuates greatly at the start. An average value is reached over time.

When the value is sufficiently stable users can quit the function by pressing E. After this, the Gammapilot M changes to the **"Calibration" (*15)** function. Here the **"Stop/edit"**

option must be selected to stop the integration. The value is then automatically transmitted to the **"Full calibration" (*16)** or **"Empty calibration" (*18)** function.

🚹 Avg. pulse rate

- The maximum integration time (= averaging time) is 1000 s. After this time, the value is automatically transmitted to the "Full calibration" (*16) or "Empty calibration" (*18) function.
- Integration is not terminated by pressing E in the "Avg. pulse rate" (*11) function. Integration continues until "Stop/edit" is selected in the "Calibration" (*15) function. For this reason, there may be a slight deviation between the last average (integrated) pulse rate displayed and the final "Full calibration" (*16) or "Empty calibration" (*18).

"Full calibration" (*16) / "Empty calibration" (*18)

Local display
Full calibration *16 33 cps

Local display

Empty calibration *18 2548 cps

The pulse rate of the full or empty calibration is displayed in this function. Press E to confirm the value. If a full or empty calibration has not yet been performed, "-1" is displayed. There are two options if this occurs:

- Either return to the "Calibration" (*15) function and restart the calibration
- Or enter a known or calculated pulse rate (manual calibration)

"Next point" (*19)

Local display	
Next point *19 ✔ No Yes	

This function is used to specify whether an additional calibration point is to be entered or not.

Options:

No

Select this option once both calibration points have been entered. The Gammapilot M then returns to the group selection and the calibration is completed.

Yes

Select this option if only one calibration point has yet been entered. The Gammapilot M then returns to the **"Calibration point" (*13)** function and the next point can be entered.

7.4.4 Additional settings

After the basic setup, the Gammapilot M outputs the measured value via the PROFIBUS PA interface. Many additional functions are available for optimizing the measuring point and can be configured as required. For a detailed description of all the device functions, see BA00287F/00/EN, "Gammapilot M - Description of Device Functions" or the CD-ROM supplied.

7.5 Calibration for density and concentration measurements

7.5.1 General principles

The calibration points for the measurement are entered in the **"Calibration" (*1)** function group. Each calibration point consists of a density value and the associated pulse rate.

Calibration points for density and concentration measurements

Function of the calibration points

In addition to the length of the irradiated measuring path, the Gammapilot M also needs the following two parameters for density and concentration measurements:

- The absorption coefficient μ of the material measured
- The reference pulse rate $I_0^{(2)}$

It calculates these parameters automatically from the pulse rates of the following calibration points:

- Background calibration (calibration with radiation switched off)
- Up to nine calibration points for samples of various known densities

In the case of self-radiating media, the background calibration must always be performed when the pipe is filled. A simulated calibration with an empty pipe is not possible in this case.



0 Background calibration

1-9 Calibration points for various densities

Two-point calibration

Two-point calibration is the recommended calibration procedure to meet strict accuracy requirements over the entire measuring range. Background calibration is performed first of all. Afterwards, the two calibration points are entered. These points should be as far apart as possible. Once the two calibration points have been entered, the Gammapilot M calculates the I_0 and μ parameters on its own.

One-point calibration

A one-point calibration can be performed if a two-point calibration is not possible. This means that apart from the background calibration only one additional calibration point is used. This calibration point should be as close as possible to the operating point. Densities in the proximity of this calibration point are measured quite accurately, but the accuracy can decrease as the distance from the calibration point increases. In one-point calibration,

²⁾ I_0 is the pulse rate when the tube is empty. The value is significantly higher than any real pulse rates occurring during the measurement.

the Gammapilot M only calculates the reference pulse rate I₀. In this case, it uses the default value $\mu = 7.7 \text{ mm}^2/\text{g}$ for the absorption coefficient.

Multiple-point calibration

Multiple-point calibration is recommended particularly for measurements in a large density range or for particularly accurate measurements. Up to 9 calibration points can be used over the entire measuring range. The calibration points should be as far apart as possible and should be evenly distributed over the entire measuring range. Once the calibration points have been entered, the Gammapilot M calculates the I_0 and μ parameters on its own. Multiple-point calibration is recommended particularly for measurements in a large density range or for particularly accurate measurements.

Recalibration

The Gammapilot M provides an additional calibration point (calibration point "10") for recalibration. This point can be entered if the measuring conditions have changed, e.g. as a result of deposit buildup in the measuring tube. Once the calibration point has been entered, I_0 is recalculated according to the current measuring conditions. The absorption coefficient μ from the original calibration remains unchanged.

Methods for entering the calibration points

Automatic calibration

In the case of automatic calibration, the calibration point in question is implemented on the vessel or the measuring tube, i.e. the measuring tube is filled with a medium of the desired density. The radiation remains switched off for background calibration, while radiation is switched on for all other calibration points. The Gammapilot M records the pulse rate automatically. The associated density is determined in the laboratory and entered by the user.

Manual calibration

-

In order to achieve a high level of measuring accuracy, it is advisable to determine the pulse rates for several samples at a constant density and to calculate the average density and average pulse rate for these samples. These values can then be entered manually in the Gammapilot M. If possible, this procedure should be repeated at another density. The two density values should be as far apart as possible.

The calibration date is not set automatically during manual calibration. It must be entered by the user in the "Calibration date" (*C7) function.

7.5.2 Background calibration

Excerpt from the operating menu

The following excerpt from the operating menu illustrates the entries to be made for background calibration. The individual functions are explained in detail in the sections that follow.



"Background calibration" (*10)

Local display
Backgr. cal. *10 Stop/edit Start

This function is used to start the background calibration

Options:

- Stop/edit
 - This option must be selected if:
 - No background calibration is to be performed but the pulse rate of an existing background calibration is to be displayed instead.
 - The background calibration is to be performed manually.
 - Once this option has been selected, the Gammapilot M goes to the **"Bgr. pulse rate"** (*12) function where the existing pulse rate is displayed and can be changed if required.
- Start
 - This option is used to start automatic background calibration. The Gammapilot M changes to the **"Avg. pulse rate" (*11)** function.

"Avg. pulse rate" (*11)



The average pulse rate is displayed in this function. Initially, this value fluctuates (because of the decay statistics), but reaches an average value over time due to integration. The longer the averaging is performed, the lower the fluctuations.



When the value is sufficiently stable users can quit the function by pressing E. After this, the Gammapilot M changes to the **"Background calibration" (*10)** function. Here the **"Stop/edit"** option must be selected to stop the integration. The value is then automatically transmitted to the **"Background pulse rate" (*12)** function.



Background pulse rate

- The maximum integration time (= averaging time) is 1000 s. After this time, the value is automatically transmitted to the **"Background pulse rate" (*1B)** function.
- Integration is not terminated by pressing E in the "Avg. pulse rate" (*11) function. Integration continues until "Stop/edit" is selected in the "Background calibration" (*10) function. For this reason, there may be a slight deviation between the last average (integrated) pulse rate displayed and the final "Background pulse rate" (*12).

"Background pulse rate" (*12)



The pulse rate of the background calibration is displayed in this function. Press E to confirm the value and complete the background calibration. If a background calibration has not yet been performed, "-1" is displayed. There are two options if this occurs:

- Return to the "Background calibration" (*10) function and restart the background calibration
- Enter a known or calculated pulse rate (manual calibration). The Gammapilot M then changes to the "Calibration point" (*13) or (*1A) function.

7.5.3 Calibration points

The following excerpt from the operating menu illustrates the procedure for entering the density calibration points. The individual functions are explained in detail in the sections that follow. The functions are only accessible once the background calibration has been performed.


"Calibration point" (*1A)

Local display
Calibration point *1A 1 2 3

This function is used to select the calibration point which will be entered.

Further options:

- "1" to "9": calibration points for various densities
- "10": recalibration point. Once the calibration point has been entered, I_0 is recalculated according to the current measuring conditions. The absorption coefficient μ from the original calibration remains unchanged. Calibration point "10" can be entered if the measuring conditions have changed, e.g. as a result of deposit buildup in the measuring tube.

"Calibration" (*15)

Local display	
Calibration *15 Stop/edit Start	

This function is used to start automatic entry of the selected calibration point.

Options:

Stop/edit

This option must be selected if:

- The calibration point is not to be entered (e.g. because it has already been entered).
 The pulse rate of the calibration point is then displayed in the following function
 "Density calib." (*1B). This value can be changed if required.
- The calibration point is to be entered manually. The Gammapilot M changes to the **"Density calib." (*1B)** function.
- Start

This option is used to start automatic entry of the calibration point. The Gammapilot M then changes to the **"Avg. pulse rate" (*11)** function.

"Avg. pulse rate" (*11)

Local display	
Avg. pulse rate *11 1983 cps	

The average pulse rate is displayed with this function (after the selection of "Start" in the previous function). Initially, this value fluctuates (because of the decay statistics), but reaches an average value over time due to integration. The longer the averaging is performed, the lower the fluctuations.



When the value is sufficiently stable users can quit the function by pressing [E]. After this, the Gammapilot M changes to the "Calibration" (*15) function. Here the "Stop/edit" option must be selected to stop the integration. The value is then automatically transmitted to the "Density calibration" (*1B) function.



- **Density** calibration
 - The maximum integration time (= averaging time) is 1000 s. After this time, the value is automatically transmitted to the "Density calibration" (*1B) function.
- During the integration, a sample of the measured material must be taken. Its density must then be determined (e.g. in the laboratory).
- Integration is not terminated by pressing [E] in the "Avg. pulse rate" (*11) function. Integration continues until "Stop/edit" is selected in the "Calibration" (*15) function. For this reason, there may be a slight deviation between the last average (integrated) pulse rate displayed and the final "Density calibration (*1B).

"Density calibration" (*1B)



The pulse rate of the calibration point is displayed in this function. Press E to confirm the value and complete the entry of the calibration point. If a calibration has not yet been performed for the current point, "-1" is displayed. There are two options if this occurs:

- Either return to the "Calibration" (*15) function and restart the calibration
- Or enter a known or calculated pulse rate (manual calibration)

"Density value" (*1C)

Local display
Density value *1C D.9963 g/cm3

This function is used to specify the density of the calibration point. The value must be determined from a sample in the laboratory.

The temperature effect must be taken into account when entering the density value. The density entered must refer to the temperature at which the pulse rate has been determined. If the density and the pulse rate have been determined at different temperatures, the density value must be corrected accordingly before it is entered.

"Calibration point" (*1D)

Local display	
Calibration point *1D	
Not used	
✔ Used	
Clear	

This function is used to specify whether the current calibration point is to be used or not.

Options:

- Not used
- The calibration point is **not** used. It can be reactivated subsequently, however.
- Used

The calibration point is used.

- Clear
 - The calibration point is deleted. It cannot be reactivated subsequently.

"Absorption coefficient" (*1E)

Absorp. coeff. *1E	Local display	
7.70 IIIII2/g	Absorp. coeff. *1E 7.70 mm2/g	

This function is used to display the absorption coefficient μ which results from the calibration points that are currently active. The displayed value is used to check plausibility.

If only one calibration point is active, the absorption coefficient is not calculated and the last valid value is used instead. The default value $\mu = 7.70 \text{ mm}^2/\text{g}$ is used during initial commissioning and following a reset. This value can be changed by the user, however.

"Reference pulse rate" (*1F)

ocal display	
Ref. pulse rate *1F 81687 cps	

This function is used to display the reference pulse rate I_0 which has been calculated from the calibration points currently active. The value cannot be edited.

I₀ is the pulse rate when the tube is empty (theoretical reference value). Generally, the value is significantly higher than any real pulse rates occurring during the measurement.

"Next point" (*19)

Local display		
Next point *19 V No Yes		

This function is used to specify whether the current calibration point is to be used or not.

Options:

No

Select this option if no more calibration points are to be entered or changed. The Gammapilot M then returns to the group selection and the calibration is completed.

Yes

Select this option if another calibration point is to be entered or changed. The Gammapilot M then returns to the **"Calibration point" (*1A)** function and the next point can be entered or changed.

7.5.4 Linearization (for concentration measurements)

If the concentration is to be measured in a unit other than the **"Density unit" (*06)**, a linearization must be performed after the basic setup. This is done in the **"Linearization" (*4)** function group. The individual functions of this group and the linearization procedure are described in Operating Instructions BA00287F/00/EN, "Gammapilot M - Description of Device Functions", which can be found on the CD-ROM supplied.

7.5.5 Additional settings

After the basic setup, the Gammapilot M outputs the measured value via the PROFIBUS PA interface. Many additional functions are available for optimizing the measuring point and can be configured as required. For a detailed description of all the device functions, see BA00287F/00/EN, "Gammapilot M - Description of Device Functions" or the CD-ROM supplied.

7.6 Density measurement/temperature-compensated

Perform density measurement as described in the "Calibration for density and concentration measurements" section and then perform temperature calibration (see the "Temperature compensation" section in BA00287F/00/EN "Gammapilot M - Description of Device Functions").

7.7 Gammagraphy detection

See the "Gammagraphy" section of BA00287F/00/EN "Gammapilot M - Description of Device Functions".

8 Maintenance and repair

8.1 Cleaning

When cleaning the exterior, always use cleaning agents that do not corrode the surface of the housing and the seals.

8.2 Repairs

Under the Endress+Hauser repair concept, repairs to the Gammapilot M are performed by Endress+Hauser Service in Endress+Hauser repair workshops. For more information contact the Service Department at Endress+Hauser.

8.3 Repairs to devices with an Ex-certificate

When repairing devices with an Ex-certificate, please also note the following:

- Repairs to Ex-certified devices may only be carried out by Endress+Hauser Service in Endress+Hauser workshops.
- Comply with the prevailing standards, national Ex-area regulations, Safety Instructions (XA) and certificates.
- Only use original spare parts from Endress+Hauser.
- A certified device may only be converted into a different certified device version by Endress +Hauser Service in Endress+Hauser workshops.
- All repairs and modifications must be documented.

8.4 Replacement

ACAUTION

Data upload/download is not permitted if the device is used for safety-related applications.

 After an entire device or an electronics module has been replaced, the parameters can be downloaded to the device again via the communication interface. For this, the data must have been uploaded to the PC beforehand using the "FieldCare" software.

Level measurement and point level detection

You can continue measuring without performing a new calibration. However, the calibration values should be checked as soon as possible since the mounting position may have changed slightly.

Density and concentration measurement

A new calibration must be performed after the replacement.

8.5 Return

8.5.1 Return

The measuring device must be returned if it is in need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure swift, safe and professional device returns, please refer to the return procedures and conditions on the Endress+Hauser website at "www.services.endress.com/return-material".

8.6 Disposal

When disposing, separate and recycle the device components based on the materials.

8.7 Contact addresses at Endress+Hauser

Contact addresses are available at "www.endress.com/worldwide" or from your local Endress+Hauser branch office.

9 Accessories

9.1 Commubox FXA291

The Commubox FXA291 connects Endress+Hauser field devices with a CDI interface (Endress+Hauser Common Data Interface) and the USB port of a personal computer or laptop. For details, see

TI00405C/07/EN

For Gammapilot M, you also need the "ToF Adapter FXA291" accessory

9.2 ToF Adapter FXA291

The ToF Adapter FXA291 connects the Commubox FXA291 with the Gammapilot M via the USB port of a computer or laptop. For details, see

KA00271F/00/A2

9.3 Proficard

For connecting a laptop to PROFIBUS

9.4 Profiboard

For connecting a PC to PROFIBUS

Remote display and operating unit FHX40 9.5

9.5.1 Dimensions



- Wall mounting (without mounting bracket) Α
- В Pipe mounting (mounting bracket/plate supplied optionally)
- Gammapilot M 1
- Separate housing FHX40 2
- 3 Cable
- Pipe 4

Ordering information 9.5.2

010	Approval
A	Non-hazardous area
2	ATEX II 2G Ex ia IIC T6
3	ATEX II 2D Ex ia IIIC T80°C
H	ATEX II 3G Ex ic IIC T6, T5 Gc (in preparation)
G	IECEx Zone1 Ex ia IIC T6/T5
S	FM IS Cl.I Div.1 Gr.A-D, Zone0
U	CSA IS Cl.I Div.1 Gr.A-D, Zone0
N	CSA General Purpose
К	TIIS Ex ia IIC T6
С	NEPSI Ex ia IIC T6/T5 Gb
Ү	Special version, TSP-no. to be spec.
1	20m (> HART)
5	20m (> PROFIBUS PA/FOUNDATION Fieldbus)
9	Special version, TSP-no. to be spec.
030	Additional options
A	Basic model
B	Mounting bracket, pipe 1"/2"
Y	Special version, TSP-no. to be spec.

995	Marking
1	Measuring point (TAG), see additional specifications

Use the cables provided for the corresponding communication version of the device to connect the remote display FHX40.

9.5.3 Technical data (cable and housing)

Cable length	20 m (66 ft) (fixed length including attached plugs)
Temperature range	Temperature class T5: -40 to $+75$ °C (-40 to $+167$ °F) Temperature class T6: -40 to $+60$ °C (-40 to $+140$ °F)
Degree of protection	IP65/66/67 (housing); IP68 (cable) according to IEC 60529
Materials	Housing: AlSi12; cable gland: nickel-plated brass
Dimensions [mm (in)]	122x150x80 (4.72x5.91x3.15) / HxWxD

9.5.4 Materials



☑ 10 Materials (see table below)

Position	Component part	Material
1	Housing/cover	AlSi12, screw: V2A
	Ground terminal	CuZn nickel-plated, screw: V2A
2	Display	Glass
3	Cable gland	CuZn nickel-plated
4	Cable	PVC
5	Mounting bracket	316 Ti (1.4571) or 316 L (1.4435) or 316 (1.4401)
6	Nut	V4A
7	Plate screw set (M5)	316 Ti (1.4571) spring washer: 301 (1.431) or V2A, screw: V4A, nut: V4A

9.6 Mounting device FHG60 (for level and point level measurement)

9.6.1 Dimensions



- 1 Distance as large as possible
- 2 Retainers (number and size depending on selected application); Allen screws to ISO 4762 are supplied
- 3 Mounting clamps (number depending on selected application)
- 4 With preferred mounting method "housing head down" bracket (for "level" application only)
- 5 With alternative mounting method "housing head up" bracket (for "level" application only)

Mounting position on FMG60	A [mm (in)]	B [mm (in)]	øC [mm (in)]	øD [mm (in)]	Mounting
Scintillator pipe dimensions	198 (7.8)	126 (4.96)	80 (3.15)	40 to 65 (1.57 to 2.56)	(a)
Electronic pipe dimensions	210 (8.27)	150 (5.91)	102 (4.02)		(b)
Water cooling jacket dimensions	230 (9.06)	200 (7.87)	140 (5.51)		(c)

Size of the retainers (depending on selected application):

ACAUTION

Max. torque for the screws of the retainers:

▶ 6 Nm (4.42 lbf ft)

9.6.2 Use



🖌 🖌 Preferred



- A Level measurement, FMG60 without cooling jacket
- *B* Level measurement, FMG60 with cooling jacket
- C Point level measurement, FMG60 without cooling jacket
- D Point level measurement, FMG60 with cooling jacket
- *E* Such horizontal mounting not permitted
- 1 Retainer for pipe diameter 80 mm (3.15 in)
- 2 Retainer for water cooling jacket diameter 140 mm (5.51 in)
- 3 Retainer for pipe diameter 102 mm (4.72 in)
- 4 Bracket

For horizontal mounting with cooling jacket or collimator (see picture E), the pipe mounting must be carried out by the customer. Make sure that the clamping forces of the mounting clamps are sufficient to prevent the FMG60 from slipping off. The dimensions are described in the chapter "FHG60 mounting device". → 🗎 82

Note the following when mounting the device

- The mounting device must be installed in such a way as to withstand the weight of the Gammapilot M under all anticipated operating conditions.
- ► For measuring lengths of 1600 mm (63 in) or more, two retainers (vertical) or three retainers (horizontal) must be used.
- The use of the bracket or a support unit fitted by the customer is mandatory if the device is mounted in a vertical position. Otherwise sufficient stability and support for the Gammapilot M is not ensured.
- For stability reasons the mounting version with the terminal housing positioned at the top should only be used in exceptional cases.
- Clamping solution for pipe mounting required by the customer. Do not use supplied mounting clamps for pipe. Supplied retainers can be used for FMG60 (see picture E).
- ► To prevent damage to the tube of the Gammapilot M, the maximum torque that can be applied to tighten the retainer screws is 6 Nm (4.42 lbf ft).

9.6.3 Ordering information

Detailed ordering information is available from the following sources:

- In the Product Configurator on the Endress+Hauser website: www.endress.com -> Select country -> Instruments -> Select device -> Accessories for FMG60
- From an Endress+Hauser Sales Center: www.endress.com/worldwide

Product Configurator - the tool for individual product configuration

- Up-to-the-minute configuration data
- Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- Ability to order directly in the Endress+Hauser Online Shop

9.7 Clamping device for density measurement FHG61

For details, see:

SD01221F/00/EN

9.8 Measurement section for density measurement FHG62

For drawings and description, see: SD00540F/00/EN

9.9 Memograph M, RSG45

9.9.1 Measuring principle

Electronic acquisition, display, recording, analysis, remote transmission and archiving of analog and digital input signals as well as calculated values.

The device is intended for installation in a panel or cabinet door. There is also the option of operating it in a desktop housing or field housing.

9.9.2 Measuring system

Multichannel data recording system with multicolor TFT display (178 mm / 7" screen size), internal memory, external memory (SD card and USB stick), galvanically isolated universal inputs (U, I, TC, RTD, pulse, frequency), HART[®] inputs, digital inputs, transmitter power supply, limit relays, digital and analog outputs, communication interfaces (USB, Ethernet, RS232/485), optionally available with Modbus, Profibus DP or PROFINET I/O or EtherNet/IP.

An Essential Version of the Field Data Manager (FDM) software is included for SQLsupported data analysis on the PC.

The number of inputs available in the basic device can be individually increased using a maximum of 5 plug-in cards. The device supplies power directly to connected twowire transmitters. The device is configured and operated via the navigator (jog/shuttle dial) or by touchscreen (optional) using the integrated web server and a PC, an external USB keyboard or mouse or with the FieldCare / Device Care configuration software. Online help supports the user during local operation.

Ex version:

- The hazardous area version (Ex version) is only available in conjunction with the stainless steel front and touch control.
- In this version, the SD card is integrated in the device and cannot be removed. The card can be read out using the Field Data Manager (FDM) software supplied via USB or Ethernet or via WebDAV.

For more information, see:

TI01180R

BA01338R

9.10 RMA42, process transmitter with control unit

9.10.1 Measuring principle

The RMA42 process transmitter powers the transmitter and processes analog signals from transmitters, particularly from the area of process instrumentation. These signals are monitored, evaluated, calculated, saved, separated, linked, converted and displayed. The signals, intermediate values and the results of calculations and analysis are transmitted by digital or analog means.

9.10.2 Measuring system

The RMA42 is a process transmitter that is controlled by a microcontroller and features a display, analog inputs for process and status signals, analog and digital outputs, as well as a configuration interface.

Connected sensors can be powered by the integrated transmitter power supply system. The signals to be measured are converted from analog to digital signals, processed digitally in the device, and then converted from digital to analog signals and made available at the various outputs. All measured values, and values calculated in any way, are available as a signal source for the display, all outputs, relays and the interface. It is possible to make multiple use of the signals and results (e.g. a signal source is used as an analog output signal and as a limit value for a relay).

For more information, see:



BA00287R

10 Troubleshooting

10.1 System error messages

10.1.1 Error signal

Errors occurring during commissioning or operation are signaled in the following way:

- Error symbol, error code and error description on the display and operating module.
- PROFIBUS PA signal: MAX: +99999

10.1.2 Last error

The last error is displayed in the **"Previous error" (*A1)** function in the **"Diagnostics" (*A)** function group. This can be deleted in the **"Clear last error" (*A2)** function.

10.1.3 Types of error

Type of error	Symbol	Symbol
Alarm (A)	կ	The output signal adopts a defined value: MAX: +99999 An error message is displayed
	Continuous	
Warning (W)	Ч	The device continues to measure. An error message is displayed (alternating with the measured value)
	Flashing	

10.1.4 Error codes

Code	Error description	Remedial action
A102	Checksum error	Contact Endress+Hauser Service
W103	Initializing	Wait for the initialization procedure to finish
A106	Downloading	Wait for the download to finish
A110	Checksum error	Contact Endress+Hauser Service
A111	Electronics defect	Switch device off/on; If the error persists: contact Endress+Hauser Service or replace the transmitter
A113	Electronics defect	Switch device off/on; If the error persists: contact Endress+Hauser Service or replace the transmitter
A114	Electronics defect	Switch device off/on; If the error persists: contact Endress+Hauser Service or replace the transmitter
A116	Download error	Repeat download
A121	Electronics defect	Switch device off/on; If the error persists: contact Endress+Hauser Service or replace the transmitter
W153	Initializing	Wait for the initialization procedure to finish

Code	Error description	Remedial action
A160	Checksum error	Contact Endress+Hauser Service
A165	Electronics defect	 Switch device off/on; If the error persists: contact Endress+Hauser Service or replace the transmitter See note regarding "Error messages A165 "Electronics defect" and A635 "Present date not defined"
A291	Slave error	Check that the basic setup is correct and that the slave transmitter has been connected correctly
A503	Wrong sensor type	Contact Endress+Hauser Service
W513	Calibration integration running	Wait until the pulse rate has stabilized; then terminate the integration (by pressing E in the "Average pulse rate (*11) function)
W514	Pt100 calibration	Wait for the calibration to finish. If the error persists: contact Endress+Hauser Service
A531	Sensor electronics defect	Switch device off/on; If the error persists: contact Endress+Hauser Service or replace the transmitter
A532	Sensor voltage error	Contact Endress+Hauser Service
A533	Wrong sensor software version	Contact Endress+Hauser Service
A535	Sensor regulation error	Contact Endress+Hauser Service
W536	High voltage near limit	Contact Endress+Hauser Service
A538	Sensor communication error	Contact Endress+Hauser Service
A602	Linearization table not plausible	Check monotony of the linearization table; if necessary, correct the table ("Linearization" (*4) function group)
A612	Linearization table not defined	Enter or complete the linearization table ("Linearization" (*4) function group). The linearization table must contain the end points 0% = 1000 cps (standardized) and 100% = 0 cps (standardized). When entering the table via FieldCare, select the right type of table (lin tab. "Level" or "Concentration")
W621	Simulation on	Switch off simulation. ("Output" (*6) function group, "Simulation" (*65) function)
W640	SIL lock device	SIL_locking not completed
W642	I_back calibration running	Calibration of the current readback path active
A631	Background not calibrated	Perform background calibration ("Calibration" (*1) function group)
A632	Full/covered not calibrated	Perform full/covered calibration ("Calibration" (*1) function group)
A633	Empty/free not calibrated	Perform empty/free calibration ("Calibration" (*1) function group)
A634	Density not calibrated	 Check: has at least one calibration point been entered and activated? If not: enter and activate calibration point(s). ("Calibration" (*1) function group) Check: is the "reference pulse rate" (*1F) greater than 2³²? If so: perform density calibration again ("Calibration" (*1) function group)
A635	Present date not defined	 Enter present date ("Basic setup" (*0) function group, "Today's date" (*01) function) See note regarding "Error messages A165 "Electronics defect" and A635 "Present date not defined"
A636	Calibration date not plausible	Check calibration date and enter it again ("System parameters" (*C) function group, "Calibration date" (*C7) function)

Code	Error description	Remedial action
A637	Operating mode not defined	Enter operating mode ("Basic setup" (*0) function group, "Operating mode" (*04) function)
A638	Measurement mode not defined	Enter measurement mode ("Basic setup" (*0) function group, "Measurement mode" (*05) function)
A639	Temperature compensation not complete	Enter at least two "temperature - density" value pairs ("Temperature compensation" (*3) function group)
W662	High sensor temperature (warning)	Install water cooling jacket or thermal shielding
A663	Sensor temperature too high (alarm)	Install water cooling jacket or thermal shielding
A664	Temperature measurement error	Check the correct functioning and connection of the Pt100 sensor
W681	Current out of range (3.8 to 20.5 mA)	Check calibration and linearization
A692	Gammagraphy detected (alarm)	 Check whether interference radiation is present or the "Hold time" (*54) is too short. If no interference radiation is present: decrease gammagraphy sensitivity ("Gammagraphy" (*5) function group, "Sensitivity" (*52) function)
W693	Gammagraphy detected (warning)	Wait for the end of the gammagraphy measurement
W695	Measurement counter overflow	The local dose rate is too high (where applicable, reduce with blind flange)

10.2 Possible calibration errors

Error	Possible reasons	Solution	
Pulse rate too low at empty vessel	Radiation source switched off	Switch on source at the source container	
	Incorrect alignment of radiation beam	Realign beam	
	Buildup in the vessel	Clean vessel or Recalibrate (if buildup is stable)	
	Fittings in the vessel have not been considered in the activity calculation	Recalculate activity and change source if required	
	Pressure in the vessel has not been considered in the activity calculation	Recalculate activity and change source if required	
	No radiation source in the source container	Load source capsule in the container	
	Source too weak	Use source with higher activity	
Pulse rate too high at empty vessel	Activity too high	Attenuate radiation, e.g. by mounting a steel plate in front of the source container; or exchange source	
	External radiation sources present (e.g. from gammagraphy)	Shield off if possible; repeat calibration without external radiation source	
Pulse rate too high at full vessel	External radiation sources present (e.g. from gammagraphy)	Shield off if possible; repeat calibration without external radiation source	

10.3 Software history

Date	Software version	Software modification	Documentation
11.2005	01.01.04	Original software	 BA00329F/00/en/11.05, 7100008
08.2006	01.01.06	Bug fix. Corrections for high and low pulse rate.	 BA00287F/00/en/08.04, 52023818
10.2007	01.02.02	Beam type function (*02) added	BA00329F/00/en/01.08, 71041171BA00287F/00/en/06.07, 71041169
02.2009	01.03.02	 Automatic restart after error A165 caused by empty pipe during density measurement (pulse rate > 160000 c/s) New filtering function implemented for Gamma Modulator FHG65. 	 BA00329F/00/en/03.09, 71091968 BA00287F/00/en/06.07, 71041169
Since 10.2010	01.03.06	Improved EMC stability for extreme interferences far above the norm	 BA00329F/00/en/10.09, 71104599 BA00287F/00/en/06.07, 71041169
Since 08.2015	01.03.08	Error suppression A165 for pulse rates >160,000 cps	 BA00329F/00/EN/15.15, 71298582 BA00287F/00/en/06.07, 71041169

11 Technical data

11.1 Additional technical data

For additional technical data, please see

TI00363F/00/EN

11.2 Supplementary documentation

The supplementary documentation is available on our product pages at "www.endress.com"

- Technical Information (TI00363F/00/EN)
- Operating Instructions "Description of Device Functions" (BA00287F/00/EN)
- Functional Safety Manual:
 - For max. point level detection (SD00230F/00/EN)
 - For min. point level detection (SD00324F/00/EN)

11.2.1 Clamping device for level and point level detection FHG60

For details, see

SD01202F/00/EN

11.2.2 Clamping device for density measurement FHG61

For details, see

SD01221F/00/EN

11.2.3 Measurement section for density measurement FHG62

For drawings and description, see

SD00540F/00/EN

11.2.4 Certificates and approvals

Ex approval

The Ex certificates available are listed in the ordering information. Pay attention to the related Safety Instructions (XA)

Certificates

For the allocation of the approval to the device version, see the Product Configurator on the Endress+Hauser website: www.endress.com -> Select country -> Instruments -> Select device -> Product page function: Configure this product

General

Approval feature 010	Type of protection	Power supply wiring/output wiring, option 030	Output (communication), option 040	Safety instructions
А	Non-hazardous area	А	1,2,3	-
F	Non-hazardous area, WHG	А	1	-
N	CSA General Purpose	А	1,2,3	-

Approval number: NEPSI GYJ15.1144

Approval feature 010	Type of protection	Power supply wiring/output wiring, option 030	Output (communication), option 040	Safety instructions
		С	1	XA00536F
C	Ex de [ia] IIC T6	С	2,3	XA01706F
		В	1	XA00536F
		В	2,3	XA00537F
D	Ex d [ia] IIC T6	D	1	XA00536F
		D	2,3	XA01706F
		E	1	XA00536F
		E	2,3	XA00537F

Approval number: IECEx DEK 13.0071X

Approval feature 010	Type of protection	Power supply wiring/output wiring, option 030	Output (communication), option 040	Safety instructions
		В	1	XA00449F
G	Ex de [ia Ga] IIC T6 Gb	В	2,3	XA00450F
		С	1	XA00449F
		С	2,3	XA00451F
Н	Ex d [ia Ga] IIC T6 Gb	Е	1	XA00449F
		Е	2,3	XA00450F
		D	1	XA00449F
		D	2,3	XA00451F

Approval number: KEMA 04 ATEX 1153

Approval feature 010	Type of protection	Power supply wiring/ output wiring, option 030	Output (communication), option 040	Safety instructions
		В	1	XA00303F
1	$\mathbb{H}_{2}(1) \subset \mathbb{E}_{\mathbb{T}}$ do lip Col $\mathbb{H} \subset \mathbb{T} \subset \mathbb{C}$ b	В	2,3	XA00332F
T		С	1	XA00303F
		С	2,3	XA00334F
2	II 2(1) G Ex de [ia Ga] IIC T6 Gb, WHG	В	1	XA00303F
		С	1	XA00303F
3	II 2(1) G Ex d [ia Ga] IIC T6 Gb	Е	1	XA00303F
		E	2,3	XA00332F
		D	1	XA00303F
		D	2,3	XA00334F
4	II 2(1) G Ex d [ia Ga] IIC T6 Gb, WHG	E	1	XA00303F
		D	1	XA00303F
5	II 2(1) D Ex tb [ia Da] IIIC T80°C Db	F	1	XA00304F
		F	2,3	XA00335F
		L	1	XA00304F
		L	2,3	XA00333F
6	II 2(1) G Ex de [ia Ga] IIC T6 Gb II 2(1) D Ex tb [ia Da] IIIC T80°C Db	J	1	XA00303F XA00304F
		J	2,3	XA00332F XA00333F
		G	1	XA00303F XA00304F
		G	2,3	XA00334F XA00335F
7	II 2(1) Ex de [ia Ga] IIC T6 Gb, WHG II 2(1) D Ex tb [ia Da] IIIC T80°C Db, WHG	J	1	XA00303F XA00304F
		G	1	XA00303F XA00304F
8	II 2(1) G Ex d [ia Ga] IIC T6 Gb II 2(1) D Ex tb [ia Da] IIIC T80°C Db	К	1	XA00303F XA00304F
		К	2,3	XA00332F XA00304F
		Н	1	XA00303F XA00304F
		Н	2,3	XA00334F XA00335F
М	II 2(1) G Ex d [ia Ga] IIC T6 Gb, WHG II 2(1) D Ex tb [ia Da] IIIC T80°C Db, WHG	К	1	XA00303F XA00304F
		Н	1	XA00303F XA00304F

Approval number: ID 3022785

Approval feature 010	Type of protection	Power supply wiring/ output wiring, option 030	Output (communication), option 040	Safety instructions
	FM Cl. 1 Gp. A-D, Cl. II Gp. E-G, Cl. III, Cl. I Zone 1 Ex d [ia] IIC t6	D	1	XA01100F
S		D	2,3	XA01108F
		E	1	XA01102F
		E	2,3	XA01109F

Approval number: CSA 1653884

Approval feature 010	Type of protection	Power supply wiring/ output wiring, option 030	Output (communication), option 040	Safety instructions
		D	1	XA01099F
D D	CSA Cl. I Gp. A-D, Cl. II Gp. E-G, Cl. III, Cl. I	D	2,3	XA01110F
ſ	Zone 1 Ex d [ia] IIC T6	Е	1	XA01101F
		E	2,3	XA01111F

Approval number: TC17525, TC19557 (NaI scintillator)

Approval feature 010	Type of protection	Power supply wiring/output wiring, option 030	Output (communication), option 040	Safety instructions
К	TIIS Ex d [ia] IIC T6	D	1	BA00236F

Approval number: TC17524, TC19556 (PVT scintillator)

Approval feature 010	Type of protection	Power supply wiring/output wiring, option 030	Output (communication), option 040	Safety instructions
К	TIIS Ex d [ia] IIC T6	D	1	BA00236F

CE mark

The measuring system meets the legal requirements of the EC Directives. Endress+Hauser confirms that the device has been successfully tested by applying the CE mark.

GOST

Approval for GOST available

Overfill prevention

WHG (German Water Resources Act) for point level detection

12 Appendix



12.1 Operating menu for level measurements



All the device functions are described in detail in the following Operating Instructions:





12.2 Operating menu for level limit (point level) detection



All the device functions are described in detail in the following Operating Instructions:



BA00287F/00/EN



12.3 Operating menu for density and concentration measurements

density unit *06 g/cm3 g/1	★ min. density *07 ★ max. density *08 ★ pipe diam. unit *09 ★ pipe diam. *0A putp. damp. *0B 1 999 s Default: 60 s	
density calibr . *1B	density value *1C Calibr. point *1D → absorp. coef f *1E ref. pulse rate *1F → next point *19 without temp. not used used ref. ref. <t< td=""><td>→</td></t<>	→
square coef f.	*35 → next point *36 yes no	← →
Input concentr .	*4A ► next point *4B yes no	
gammagr . count	*55 → gammagr.count *56 keep erase	→ →
20 mA value fixed cur , value sep. character , period , comma	*69 sim. off *64 sim. out *64 sim. pulserate. sim. density/concentr simulation value *66 display test *67	→ →
pres. avg. pulsr	*A5 → lavg, raw pulsr . *A6 → Inedium temp. *A7 → Idensity value *A8 at integration time	•

All the device functions are described in detail in the following Operating Instructions:





www.addresses.endress.com

