


Operating Instructions

Proline Promass I 100

Coriolis flowmeter
PROFINET

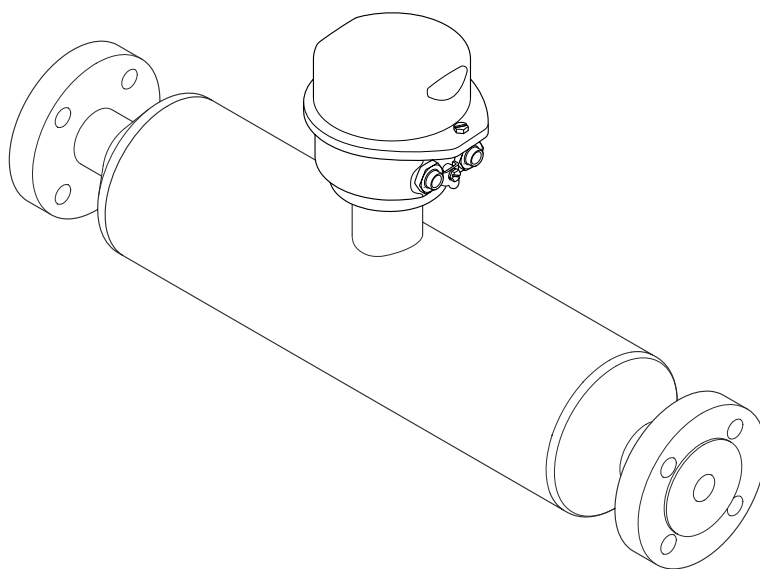

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

Table of contents

1	Document information	6	6.2	Mounting the measuring device	25
1.1	Document function	6	6.2.1	Required tools	25
1.2	Symbols used	6	6.2.2	Preparing the measuring device	25
1.2.1	Safety symbols	6	6.2.3	Mounting the measuring device	26
1.2.2	Electrical symbols	6	6.2.4	Turning the display module	26
1.2.3	Tool symbols	6	6.3	Post-installation check	27
1.2.4	Symbols for certain types of information	7	7	Electrical connection	28
1.2.5	Symbols in graphics	7	7.1	Connection conditions	28
1.3	Documentation	7	7.1.1	Required tools	28
1.3.1	Standard documentation	8	7.1.2	Requirements for connecting cable	28
1.3.2	Supplementary device-dependent documentation	8	7.1.3	Terminal assignment	29
1.4	Registered trademarks	8	7.1.4	Pin assignment, device plug	30
2	Basic safety instructions	9	7.1.5	Preparing the measuring device	30
2.1	Requirements for the personnel	9	7.2	Connecting the measuring device	30
2.2	Designated use	9	7.2.1	Connecting the transmitter	31
2.3	Workplace safety	10	7.2.2	Ensuring potential equalization	32
2.4	Operational safety	10	7.3	Special connection instructions	32
2.5	Product safety	10	7.3.1	Connection examples	32
2.6	IT security	11	7.4	Hardware settings	33
3	Product description	12	7.4.1	Setting the device name	33
3.1	Product design	12	7.5	Ensuring the degree of protection	34
3.1.1	Device version with PROFINET communication type	12	7.6	Post-connection check	35
4	Incoming acceptance and product identification	13	8	Operation options	36
4.1	Incoming acceptance	13	8.1	Overview of operating options	36
4.2	Product identification	13	8.2	Structure and function of the operating menu	37
4.2.1	Transmitter nameplate	14	8.2.1	Structure of the operating menu	37
4.2.2	Sensor nameplate	15	8.2.2	Operating philosophy	38
4.2.3	Symbols on measuring device	16	8.3	Access to the operating menu via the Web browser	38
5	Storage and transport	17	8.3.1	Function range	38
5.1	Storage conditions	17	8.3.2	Prerequisites	39
5.2	Transporting the product	17	8.3.3	Establishing a connection	39
5.2.1	Measuring devices without lifting lugs	17	8.3.4	Logging on	40
5.2.2	Measuring devices with lifting lugs	18	8.3.5	User interface	41
5.2.3	Transporting with a fork lift	18	8.3.6	Disabling the Web server	42
5.3	Packaging disposal	18	8.3.7	Logging out	42
6	Installation	19	8.4	Access to the operating menu via the operating tool	43
6.1	Installation conditions	19	8.4.1	Connecting the operating tool	43
6.1.1	Mounting position	19	8.4.2	FieldCare	44
6.1.2	Requirements from environment and process	21	8.4.3	DeviceCare	45
6.1.3	Special mounting instructions	24	9	System integration	46
			9.1	Overview of device description files	46
			9.1.1	Current version data for the device	46
			9.1.2	Operating tools	46
			9.2	Device master file (GSD)	47
			9.2.1	File name of the device master file (GSD)	47
			9.3	Cyclic data transmission	47
			9.3.1	Overview of the modules	47

9.3.2	Description of the modules	47	12.5	Adapting the diagnostic information	85
9.3.3	Status coding	53	12.5.1	Adapting the diagnostic behavior	85
9.3.4	Factory setting	54	12.6	Overview of diagnostic information	88
10	Commissioning	55	12.6.1	Diagnostic of sensor	88
10.1	Function check	55	12.6.2	Diagnostic of electronic	92
10.2	Identifying the device in the PROFINET network	55	12.6.3	Diagnostic of configuration	97
10.3	Startup parameterization	55	12.6.4	Diagnostic of process	101
10.4	Establishing a connection via FieldCare	55	12.7	Pending diagnostic events	109
10.5	Setting the operating language	55	12.8	Diagnostic list	109
10.6	Configuring the measuring device	55	12.9	Event logbook	109
10.6.1	Defining the tag name	56	12.9.1	Event history	109
10.6.2	Setting the system units	56	12.9.2	Filtering the event logbook	110
10.6.3	Displaying the communication interface	58	12.9.3	Overview of information events	110
10.6.4	Selecting and setting the medium ...	59	12.10	Resetting the measuring device	111
10.6.5	Configuring the low flow cut off	61	12.10.1	Function scope of the "Device reset" parameter	112
10.6.6	Configuring the partial filled pipe detection	62	12.11	Device information	112
10.7	Advanced settings	63	12.12	Firmware history	114
10.7.1	Calculated values	63	13	Maintenance	115
10.7.2	Carrying out a sensor adjustment	64	13.1	Maintenance tasks	115
10.7.3	Configuring the totalizer	65	13.1.1	Exterior cleaning	115
10.7.4	Carrying out additional display configurations	67	13.1.2	Interior cleaning	115
10.8	Simulation	70	13.2	Measuring and test equipment	115
10.9	Protecting settings from unauthorized access .	71	13.3	Endress+Hauser services	115
10.9.1	Write protection via access code	71	14	Repair	116
10.9.2	Write protection via write protection switch	72	14.1	General notes	116
10.9.3	Write protection via startup parameterization	73	14.2	Spare parts	116
11	Operation	74	14.3	Endress+Hauser services	116
11.1	Reading the device locking status	74	14.4	Return	116
11.2	Adjusting the operating language	74	14.5	Disposal	117
11.3	Configuring the display	74	14.5.1	Removing the measuring device	117
11.4	Reading measured values	74	14.5.2	Disposing of the measuring device ..	117
11.4.1	Process variables	74	15	Accessories	118
11.4.2	Totalizer	77	15.1	Device-specific accessories	118
11.5	Adapting the measuring device to the process conditions	77	15.1.1	For the sensor	118
11.6	Performing a totalizer reset	78	15.2	Service-specific accessories	118
12	Diagnostics and troubleshooting ...	80	15.3	System components	119
12.1	General troubleshooting	80	16	Technical data	120
12.2	Diagnostic information via light emitting diodes	81	16.1	Application	120
12.2.1	Transmitter	81	16.2	Function and system design	120
12.3	Diagnostic information in the Web browser ..	82	16.3	Input	121
12.3.1	Diagnostic options	82	16.4	Output	123
12.3.2	Calling up remedy information	84	16.5	Power supply	128
12.4	Diagnostic information in FieldCare	84	16.6	Performance characteristics	128
12.4.1	Diagnostic options	84	16.7	Installation	132
12.4.2	Calling up remedy information	85	16.8	Environment	133
			16.9	Process	133
			16.10	Mechanical construction	136
			16.11	Operability	139
			16.12	Certificates and approvals	141
			16.13	Application packages	142
			16.14	Accessories	143

16.15 Supplementary documentation 143

Index 145





1 Document information

1.1 Document function




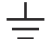


These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols used



1.2.1 Safety symbols

Symbol	Meaning
 DANGER	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
 WARNING	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
 CAUTION	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
 NOTICE	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.







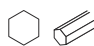




1.2.2 Electrical symbols

Symbol	Meaning	Symbol	Meaning
	Direct current		Alternating current
	Direct current and alternating current		Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.		Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.





1.2.3 Tool symbols

Symbol	Meaning
	Allen key
	Open-ended wrench


1.2.4 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Series of steps
	Result of a step
	Help in the event of a problem
	Visual inspection

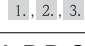1.2.5 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3, ...	Item numbers		Series of steps
A, B, C, ...	Views	A-A, B-B, C-C, ...	Sections
	Hazardous area		Safe area (non-hazardous area)
	Flow direction		

1.3 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

 For a detailed list of the individual documents along with the documentation code

1.3.1 Standard documentation

Document type	Purpose and content of the document
Technical Information	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

PROFINET®

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

Microsoft®

Registered trademark of the Microsoft Corporation, Redmond, Washington, USA

TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA

Applicator®, FieldCare®, DeviceCare®, Field Xpert™, HistoROM®, TMB®, Heartbeat Technology™

Registered or registration-pending trademarks of the Endress+Hauser Group

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task
- ▶ Are authorized by the plant owner/operator
- ▶ Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- ▶ Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- ▶ Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- ▶ Following the instructions in these Operating Instructions

2.2 Designated use


Application and media

The measuring device described in these Instructions is intended only for flow measurement of liquids and gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or in applications where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Check the nameplate to verify if the device ordered can be put to its intended use in the approval-related area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media against which the process-wetted materials are adequately resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential: "Documentation" section →  7.
- ▶ Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

WARNING

Danger of breakage of the measuring tube due to corrosive or abrasive fluids or from environmental conditions.

Housing breakage due to mechanical overload possible!

- ▶ Verify the compatibility of the process fluid with the measuring tube material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Keep within the specified pressure and temperature range.

Verification for borderline cases:

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks

The external surface temperature of the housing can increase by max. 20 K due to the power consumption of the electronic components. Hot process fluids passing through the measuring device will further increase the surface temperature of the housing. The surface of the sensor, in particular, can reach temperatures which are close to the fluid temperature.

Possible burn hazard due to fluid temperatures!

- ▶ For elevated fluid temperature, ensure protection against contact to prevent burns.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

- ▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

- ▶ It is recommended to wear gloves on account of the higher risk of electric shock.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EC directives listed in the device-specific EC Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

2.6 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

3 Product description


The device consists of a transmitter and a sensor.

The device is available as a compact version:


The transmitter and sensor form a mechanical unit.

3.1 Product design

3.1.1 Device version with PROFINET communication type

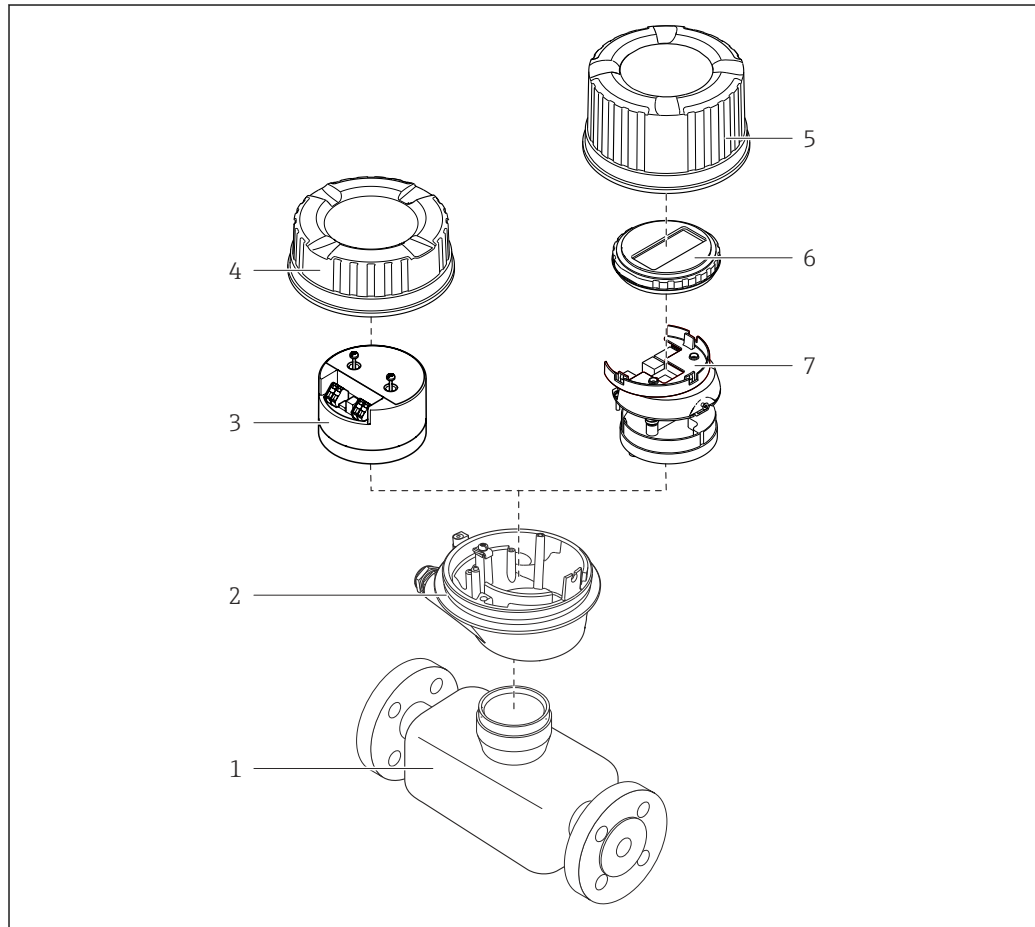





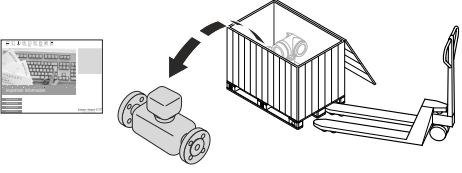










A0023153

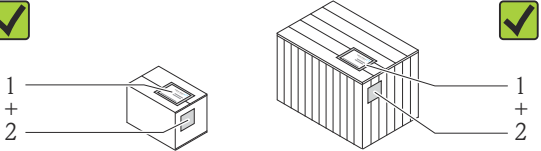

 1 Important components of a measuring device

- 1 Sensor
- 2 Transmitter housing
- 3 Main electronics module
- 4 Transmitter housing cover
- 5 Transmitter housing cover (version for optional onsite display)
- 6 Onsite display (optional)
- 7 Main electronics module (with bracket for optional onsite display)

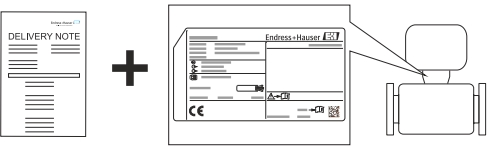4 Incoming acceptance and product identification

4.1 Incoming acceptance

 			<p>Are the order codes on the delivery note (1) and the product sticker (2) identical?</p>
			
 			<p>Are the goods undamaged?</p>
 		<p>Do the nameplate data match the ordering information on the delivery note?</p>	
 		<p>Is the CD-ROM with the Technical Documentation (depends on device version) and documents present?</p>	



-  ■ If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
- Depending on the device version, the CD-ROM might not be part of the delivery! The Technical Documentation is available via the Internet or via the *Endress+Hauser Operations App*, see the "Product identification" section →  14.

4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.


For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" →  8 and "Supplementary device-dependent documentation" →  8
- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

4.2.1 Transmitter nameplate

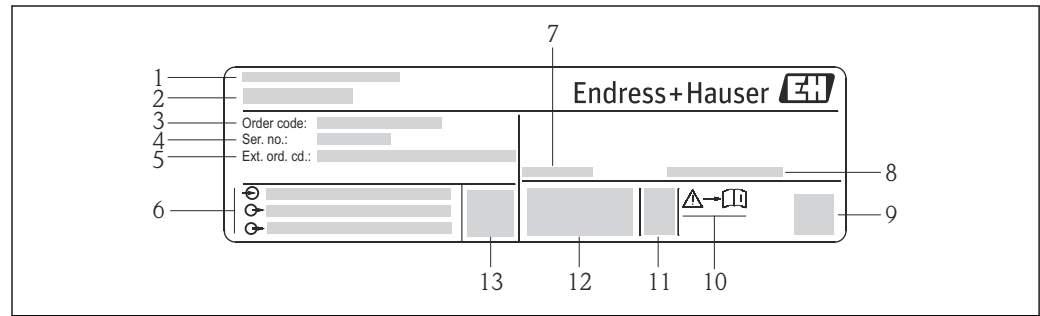


A0017520


 2 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Electrical connection data, e.g. available inputs and outputs, supply voltage
- 7 Permitted ambient temperature (T_a)
- 8 Degree of protection
- 9 2-D matrix code
- 10 Document number of safety-related supplementary documentation
- 11 Manufacturing date: year-month
- 12 CE mark, C-Tick
- 13 Firmware version (FW)

4.2.2 Sensor nameplate

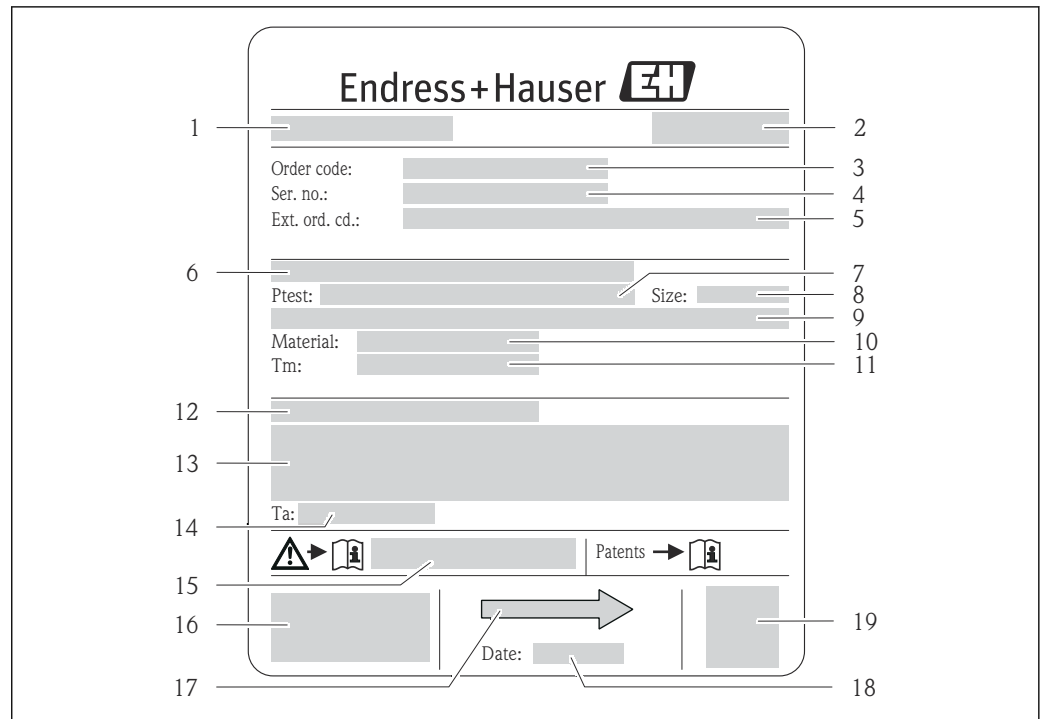

A0017923

 3 Example of a sensor nameplate

- 1 Name of the sensor
- 2 Manufacturing location
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (ext. ord. cd.)
- 6 Flange nominal diameter/nominal pressure
- 7 Test pressure of the sensor
- 8 Nominal diameter of sensor
- 9 Sensor-specific data: e.g. pressure range of secondary containment, wide-range density specification (special density calibration)
- 10 Material of measuring tube and manifold
- 11 Medium temperature range
- 12 Degree of protection
- 13 Approval information for explosion protection and Pressure Equipment Directive
- 14 Permitted ambient temperature (T_a)
- 15 Document number of safety-related supplementary documentation
- 16 CE mark, C-Tick
- 17 Flow direction
- 18 Manufacturing date: year-month
- 19 2-D matrix code






Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approval-related specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

4.2.3 Symbols on measuring device

Symbol	Meaning
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.

5 Storage and transport

5.1 Storage conditions

Observe the following notes for storage:


- Store in the original packaging to ensure protection from shock.
- Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- Protect from direct sunlight to avoid unacceptably high surface temperatures.
- Store in a dry and dust-free place.
- Do not store outdoors.

Storage temperature: -40 to $+80$ °C (-40 to $+176$ °F),

Order code for "Test, Certificate", option JM: -50 to $+60$ °C (-58 to $+140$ °F), preferably at $+20$ °C ($+68$ °F)

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

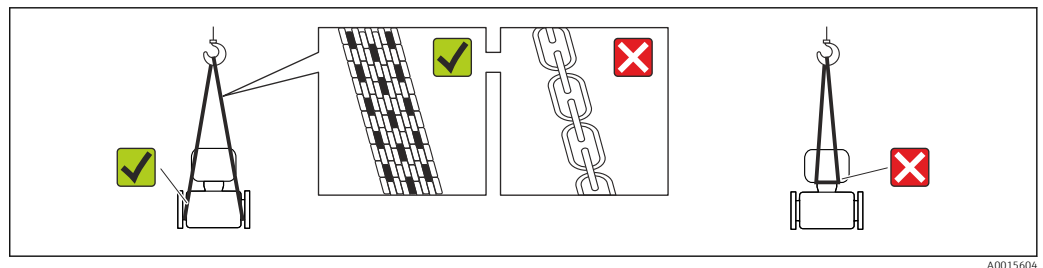

A0015604



Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

⚠ WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ▶ Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

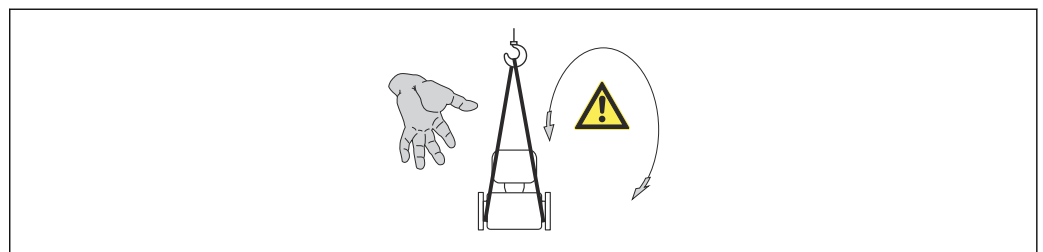

A0015606

5.2.2 Measuring devices with lifting lugs

CAUTION

Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ▶ The device must always be secured at two lifting lugs at least.

5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:

- Measuring device secondary packaging: polymer stretch film that conforms to EC Directive 2002/95/EC (RoHS).
- Packaging:
 - Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
 - or
 - Carton in accordance with European Packaging Directive 94/62EC; recyclability is confirmed by the affixed RESY symbol.
- Seaworthy packaging (optional): Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
- Carrying and mounting hardware:
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Dunnage: Paper cushion


6 Installation

6.1 Installation conditions

No special measures such as supports are necessary. External forces are absorbed by the construction of the device.

6.1.1 Mounting position

Mounting location

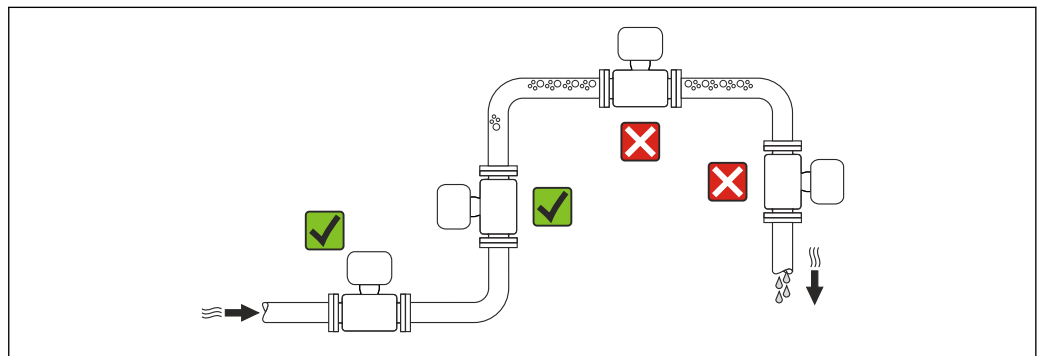


A0023344

To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

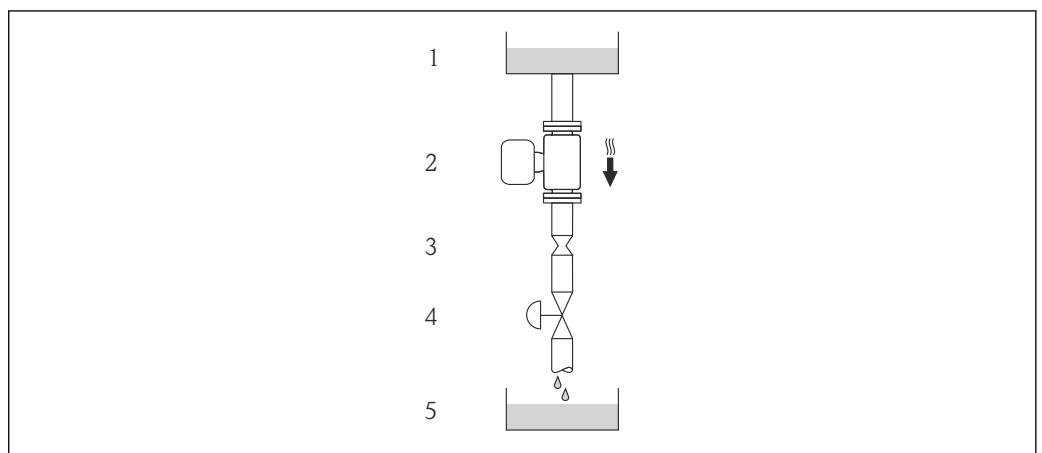

A0015596

4 Installation in a down pipe (e.g. for batching applications)





- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Batching tank

DN		Ø orifice plate, pipe restriction	
[mm]	[in]	[mm]	[in]
8	$\frac{3}{8}$	6	0.24
15	$\frac{1}{2}$	10	0.40
15 FB	$\frac{1}{2}$ FB	15	0.60
25	1	14	0.55
25 FB	1 FB	24	0.95
40	$1\frac{1}{2}$	22	0.87
40 FB	$1\frac{1}{2}$ FB	35	1.38
50	2	28	1.10
50 FB	2 FB	54	2.13
80	3	50	1.97

FB = Full bore

Orientation


The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

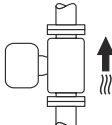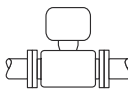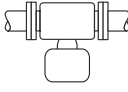Orientation			Recommendation
A	Vertical orientation	 <small>A0015591</small>	✓✓
B	Horizontal orientation, transmitter head up	 <small>A0015589</small>	✓✓ ¹⁾ Exceptions:
C	Horizontal orientation, transmitter head down	 <small>A0015590</small>	✓✓ ²⁾ Exceptions:
D	Horizontal orientation, transmitter head at side	 <small>A0015592</small>	✓✓

- 1) Applications with low process temperatures may decrease the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 2) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

Inlet and outlet runs

No special precautions need to be taken for fittings which create turbulence, such as valves, elbows or T-pieces, as long as no cavitation occurs → 21.

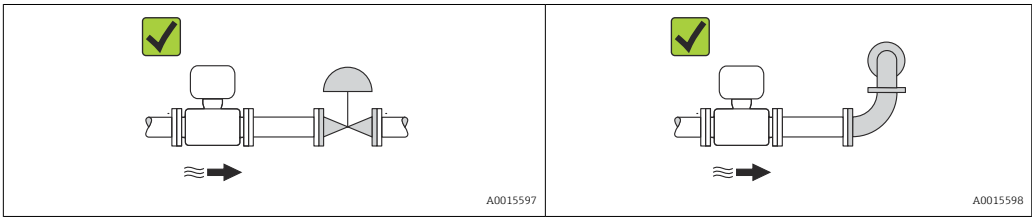

Installation dimensions

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

6.1.2 Requirements from environment and process**Ambient temperature range**

Measuring device	Non-Ex	-40 to +60 °C (-40 to +140 °F)
	Ex na, NI version	-40 to +60 °C (-40 to +140 °F)
	Ex ia, IS version	<ul style="list-style-type: none"> ■ -40 to +60 °C (-40 to +140 °F) ■ -50 to +60 °C (-58 to +140 °F) (order code for "Test, certificate", option JM)
Readability of the local display		-20 to +60 °C (-4 to +140 °F) The readability of the display may be impaired at temperatures outside the temperature range.

- If operating outdoors:
Avoid direct sunlight, particularly in warm climatic regions.

System pressure


It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas.

Cavitation is caused if the pressure drops below the vapor pressure:

- In liquids that have a low boiling point (e.g. hydrocarbons, solvents, liquefied gases)
- In suction lines
- Ensure the system pressure is sufficiently high to prevent cavitation and outgassing.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

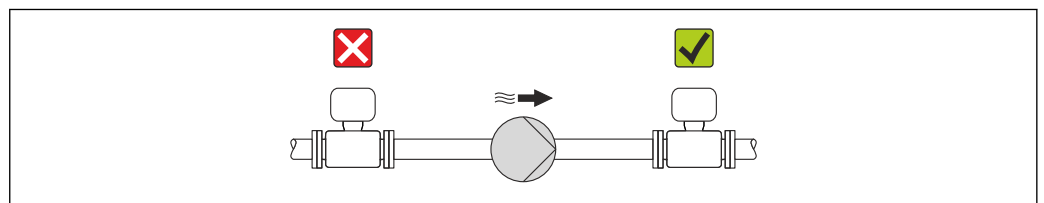


A0015594

Thermal insulation

In the case of some fluids, it is important that the heat radiated from the sensor to the transmitter is kept to a minimum. A wide range of materials can be used for the required insulation.

NOTICE**Electronics overheating on account of thermal insulation!**

- Observe maximum permitted insulation height of the transmitter neck so that the transmitter head is completely free.

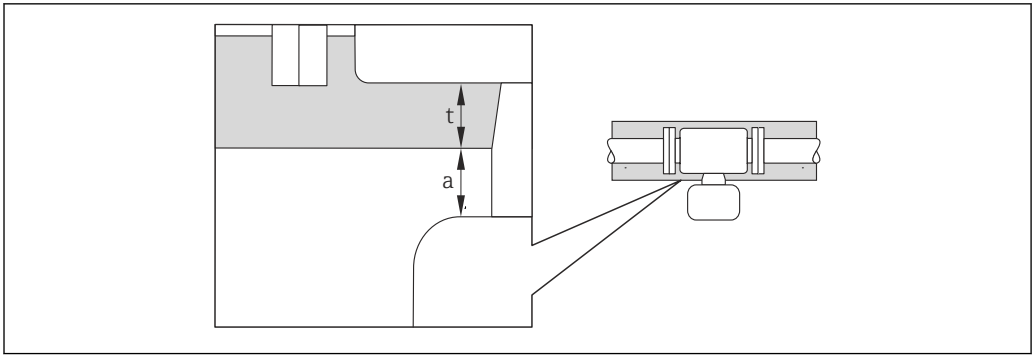


A0019919

a Minimum distance to insulation
t maximum Insulation thickness

The minimum distance between the transmitter housing and the insulation is 10 mm (0.39 in) so that the transmitter head remains completely exposed.

Maximum recommended insulation thickness

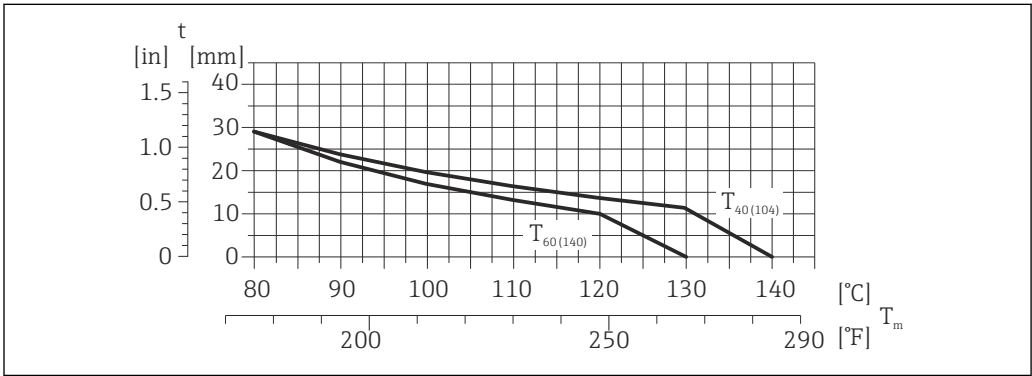


A0023173

5 Maximum recommended insulation thickness depending on the temperature of the medium and the ambient temperature

- t Insulation thickness
- T_m Medium temperature
- $T_{40(104)}$ Maximum recommended insulation thickness at an ambient temperature of $T_a = 40\text{ °C}$ (104 °F)
- $T_{60(140)}$ Maximum recommended insulation thickness at an ambient temperature of $T_a = 60\text{ °C}$ (140 °F)

Maximum recommended insulation thickness for the extended temperature range and insulation

For the extension neck for insulation version, order code for "Sensor option", option CG:

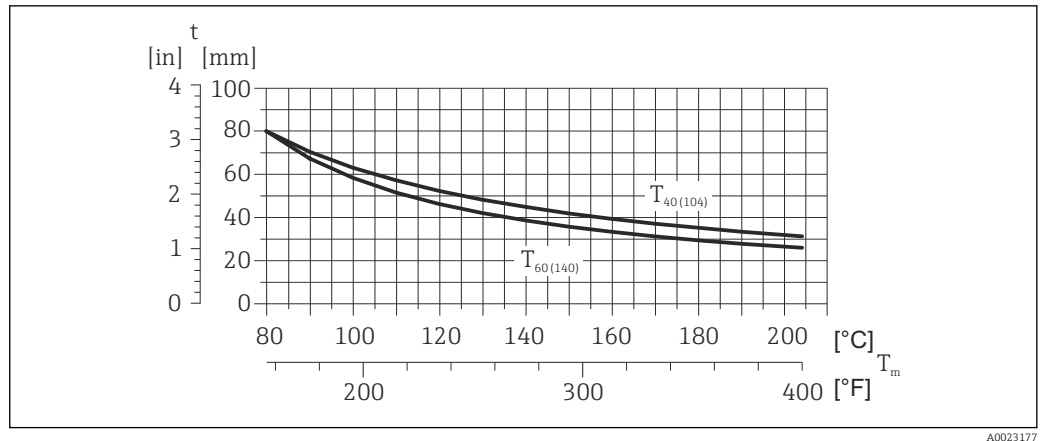

6 Maximum recommended insulation thickness depending on the temperature of the medium and the ambient temperature

t Insulation thickness

T_m Medium temperature

$T_{40(104)}$ Maximum recommended insulation thickness at an ambient temperature of $T_a = 40\text{ °C}$ (104 °F)

$T_{60(140)}$ Maximum recommended insulation thickness at an ambient temperature of $T_a = 60\text{ °C}$ (140 °F)

NOTICE

Danger of overheating with insulation

- Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F)

NOTICE

The insulation can also be thicker than the maximum recommended insulation thickness.

Prerequisite:

- Ensure that convection takes place on a sufficiently large scale at the transmitter neck.
- Ensure that a sufficiently large area of the housing support remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.

Heating

NOTICE

Electronics can overheat due to elevated ambient temperature!

- Observe maximum permitted ambient temperature for the transmitter .
- Depending on the fluid temperature, take the device orientation requirements into account .

NOTICE

Danger of overheating when heating

- Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F)
- Ensure that convection takes place on a sufficiently large scale at the transmitter neck.
- Ensure that a sufficiently large area of the housing support remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.

Heating options

If a fluid requires that no heat loss should occur at the sensor, users can avail of the following heating options:

- Electrical heating, e.g. with electric band heaters
- Via pipes carrying hot water or steam
- Via heating jackets

Using an electrical trace heating system

If heating is regulated via phase angle control or pulse packages, magnetic fields can affect the measured values (= for values that are greater than the values approved by the EN standard (sine 30 A/m)).

For this reason, the sensor must be magnetically shielded: the housing can be shielded with tin plates or electric sheets without a privileged direction (e.g. V330-35A).

The sheet must have the following properties:

- Relative magnetic permeability $\mu_r \geq 300$
- Plate thickness $d \geq 0.35 \text{ mm}$ ($d \geq 0.014 \text{ in}$)


Vibrations

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

6.1.3 Special mounting instructions

Complete drainability guaranteed

When the sensor is installed in a horizontal line, eccentric clamps can be used to ensure complete drainability. When the system is pitched in a specific direction and at a specific slope, gravity can be used to achieve complete drainability. The sensor must be mounted in the correct position to ensure full drainability in the horizontal position. Markings on the sensor show the correct mounting position to optimize drainability.

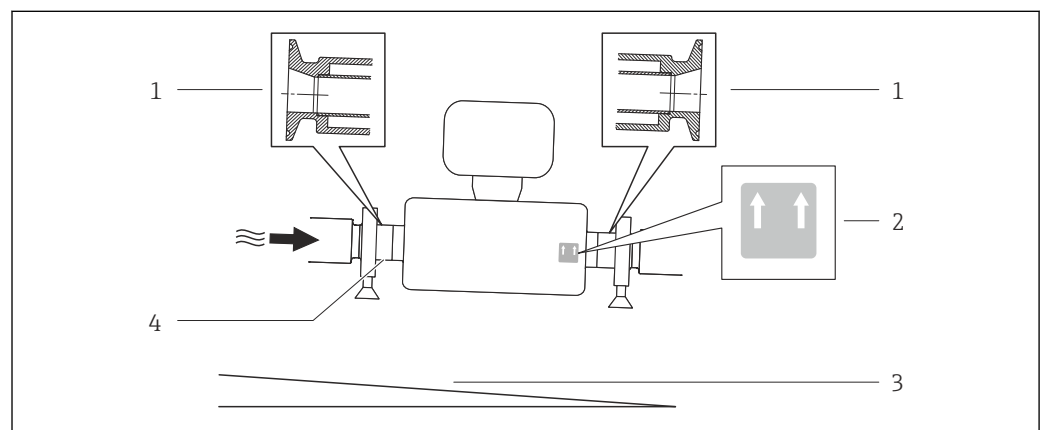


A0016585

- 1 Eccentric clamp connection
- 2 "This side up" label indicates which side is up
- 3 Slope the device in accordance with the hygiene guidelines. Slope: approx. 2 % or 21 mm/m (0.24 in/feet)
- 4 Line on the underside indicates the lowest point of the eccentric process connection.

Securing with mounting clamp in the case of hygiene connections

It is not necessary to provide additional support for the sensor for operational performance purposes. If, however, additional support is required for installation purposes, the following dimensions must be observed.

Use mounting clamp with lining between clamp and measuring instrument.

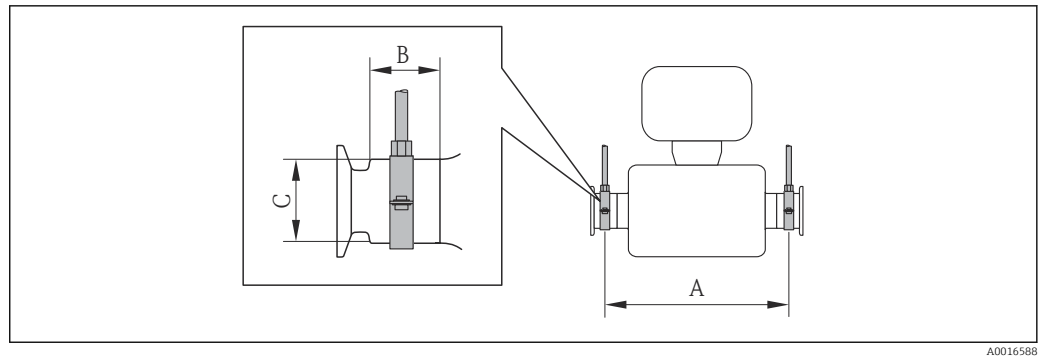

A0016588

DN		A		B		C	
[mm]	[in]	[mm]	[in]	[mm]	[in]	[mm]	[in]
8	8	373	14.69	20	0.79	40	1.57
15	15	409	16.1	20	0.79	40	1.57
15 FB	15 FB	539	21.22	30	1.18	44.5	1.75
25	25	539	21.22	30	1.18	44.5	1.75
25 FB	25 FB	668	26.3	28	1.1	60	2.36
40	40	668	26.3	28	1.1	60	2.36
40 FB	40 FB	780	30.71	35	1.38	80	3.15
50	50	780	30.71	35	1.38	80	3.15
50 FB	50 FB	1 152	45.35	57	2.24	90	3.54
80	80	1 152	45.35	57	2.24	90	3.54

Zero point adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions → 128. Therefore, a zero point adjustment in the field is generally not required.

Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

6.2 Mounting the measuring device

6.2.1 Required tools

For sensor

For flanges and other process connections: Corresponding mounting tools

6.2.2 Preparing the measuring device

1. Remove all remaining transport packaging.
2. Remove any protective covers or protective caps present from the sensor.
3. Remove stick-on label on the electronics compartment cover.


6.2.3 Mounting the measuring device

⚠ WARNING

Danger due to improper process sealing!

- ▶ Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ▶ Ensure that the gaskets are clean and undamaged.
- ▶ Install the gaskets correctly.

1. Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the fluid.
2. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

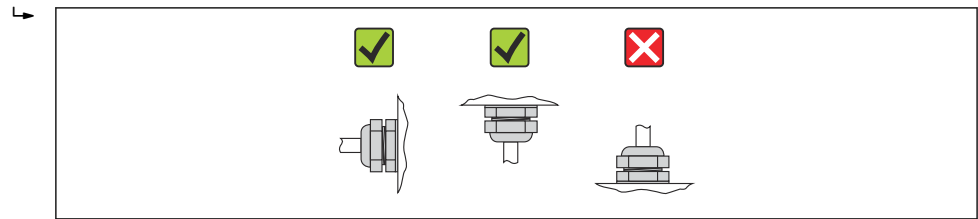

A0013964


6.2.4 Turning the display module

The local display is only available with the following device version:

Order code for "Display; Operation", option **B**: 4-line; lit, via communication


The display module can be turned to optimize display readability.

Aluminum housing version, AlSi10Mg, coated

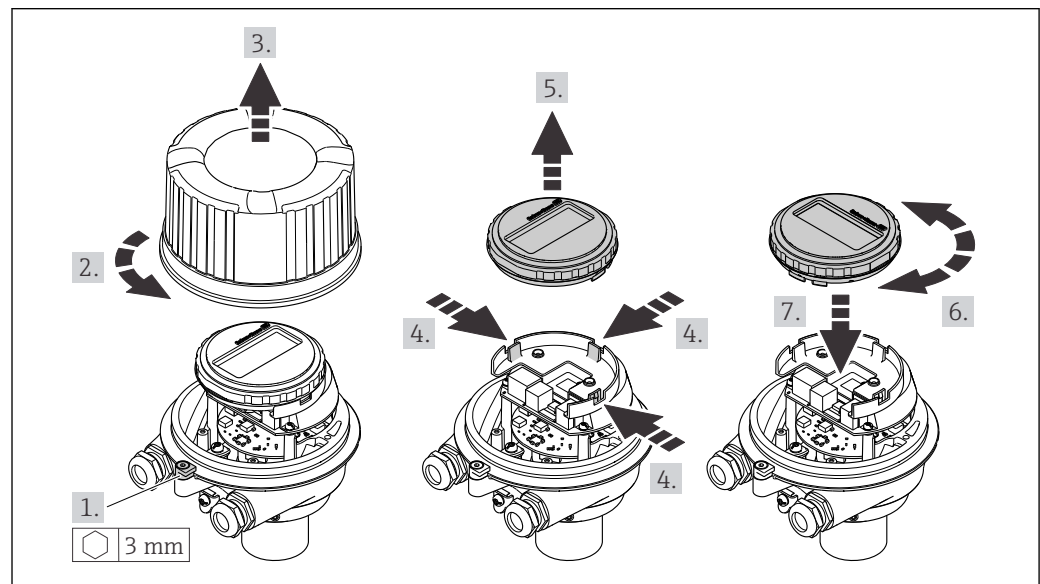

A0023192


Compact and ultra-compact housing version, hygienic, stainless

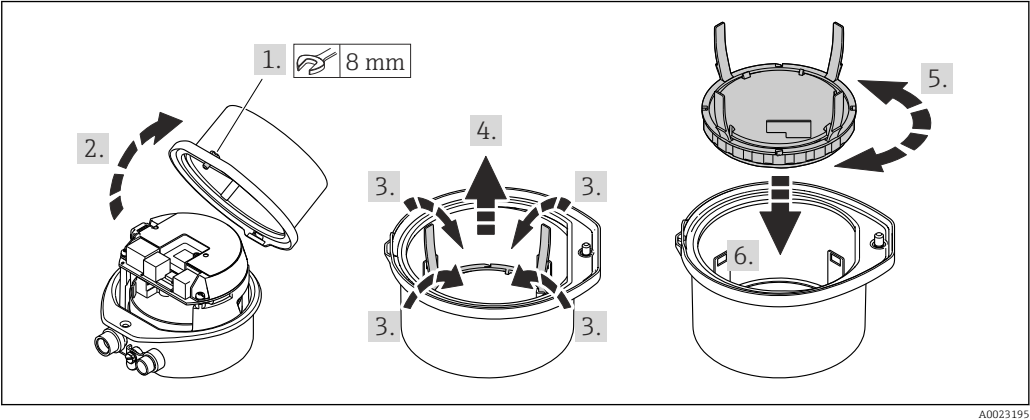

6.3 Post-installation check

Is the device undamaged (visual inspection)?	<input type="checkbox"/>
Does the measuring device conform to the measuring point specifications? For example: <ul style="list-style-type: none">■ Process temperature → 133■ Process pressure (refer to the chapter on "Pressure-temperature ratings" of the "Technical Information" document)■ Ambient temperature■ Measuring range	<input type="checkbox"/>
Has the correct orientation for the sensor been selected ? <ul style="list-style-type: none">■ According to sensor type■ According to medium temperature■ According to medium properties (outgassing, with entrained solids)	<input type="checkbox"/>
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping → 20?	<input type="checkbox"/>
Are the measuring point identification and labeling correct (visual inspection)?	<input type="checkbox"/>
Is the device adequately protected from precipitation and direct sunlight?	<input type="checkbox"/>
Are the securing screw and securing clamp tightened securely?	<input type="checkbox"/>

7 Electrical connection

 The measuring device does not have an internal circuit breaker. For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.

7.1 Connection conditions

7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp (on aluminum housing): Allen screw 3 mm
- For securing screw (for stainless steel housing): open-ended wrench 8 mm
- Wire stripper
- When using stranded cables: crimping tool for ferrule

7.1.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

Electrical safety

In accordance with applicable federal/national regulations.

Permitted temperature range

- -40 °C (-40 °F) to +80 °C (+176 °F)
- Minimum requirement: cable temperature range \geq ambient temperature +20 K


Power supply cable

Standard installation cable is sufficient.

Signal cable

PROFINET

Standard IEC 61156-6 specifies CAT 5 as the minimum category for a cable used for PROFINET. CAT 5e and CAT 6 are recommended.

 For more information on planning and installing PROFINET networks, see: "PROFINET Cabling and Interconnection Technology", Guideline for PROFINET

Cable diameter

- Cable glands supplied:
M20 × 1.5 with cable \varnothing 6 to 12 mm (0.24 to 0.47 in)
- Spring terminals:
Wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)

7.1.3 Terminal assignment


Transmitter

PROFINET connection version

Order code for "Output", option **R**

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

Order code for "Housing"	Connection methods available		Possible options for order code "Electrical connection"
	Output	Power supply	
Options A, B	Device plugs → 30	Terminals	<ul style="list-style-type: none">Option L: plug M12x1 + thread NPT ½"Option N: plug M12x1 + coupling M20Option P: plug M12x1 + thread G ½"Option U: plug M12x1 + thread M20
Options A, B, C	Device plugs → 30	Device plugs → 30	Option Q : 2 x plug M12x1
Order code for "Housing": <ul style="list-style-type: none">Option A: compact, coated aluminumOption B: compact, hygienic, stainlessOption C ultra-compact, hygienic, stainless			

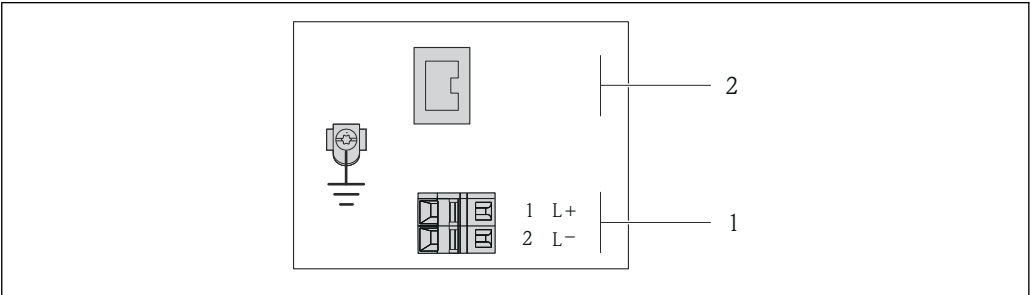


7 PROFINET terminal assignment

- 1 Power supply: DC 24 V
- 2 PROFINET


Order code for "Output"	Terminal number	
	Power supply 2 (L-) 1 (L+)	Output Device plug M12x1
Option R	DC 24 V	PROFINET
Order code for "Output": Option R : PROFINET		

7.1.4 Pin assignment, device plug

Supply voltage

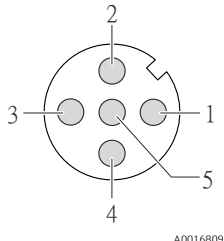	Pin	Assignment	
	1	L+	DC 24 V
	2		Not assigned
	3		Not assigned
	4	L-	DC 24 V
	5		Grounding/shielding
	Coding		Plug/socket
	A		Plug

Device plug for signal transmission (device side)

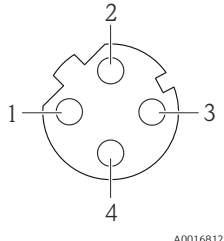	Pin	Assignment	
	1	+	TD +
	2	+	RD +
	3	-	TD -
	4	-	RD -
	Coding		Plug/socket
	D		Socket

7.1.5 Preparing the measuring device

1. Remove dummy plug if present.

2. **NOTICE**

Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

- Use suitable cable glands corresponding to the degree of protection.

If measuring device is delivered without cable glands:

Provide suitable cable gland for corresponding connecting cable .

3. If measuring device is delivered with cable glands:

Observe cable specification .

7.2 Connecting the measuring device

NOTICE


Limitation of electrical safety due to incorrect connection!

- Have electrical connection work carried out by correspondingly trained specialists only.
- Observe applicable federal/national installation codes and regulations.
- Comply with local workplace safety regulations.
- For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.

7.2.1 Connecting the transmitter

The connection of the transmitter depends on the following order codes:


- Housing version: compact or ultra-compact
- Connection version: device plug or terminals

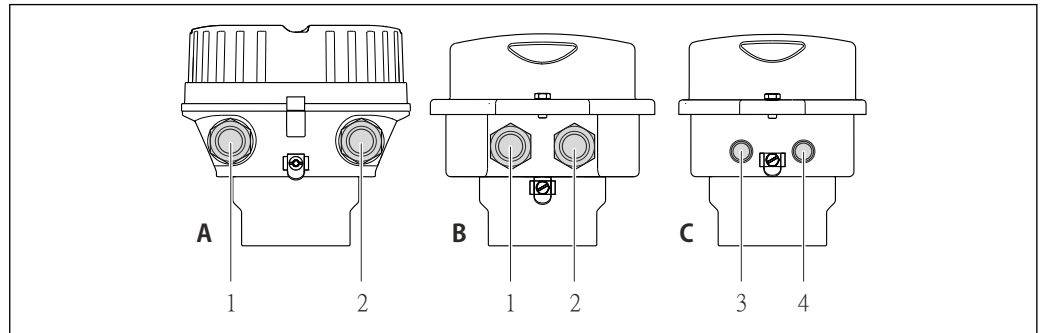

A0016924

8 Housing versions and connection versions

- A Housing version: compact, aluminum coated
 B Housing version: compact hygienic, stainless
 1 Cable entry or device plug for signal transmission
 2 Cable entry or device plug for supply voltage
 C Housing version: ultra-compact, hygienic, stainless:
 3 Device plug for signal transmission
 4 Device plug for supply voltage

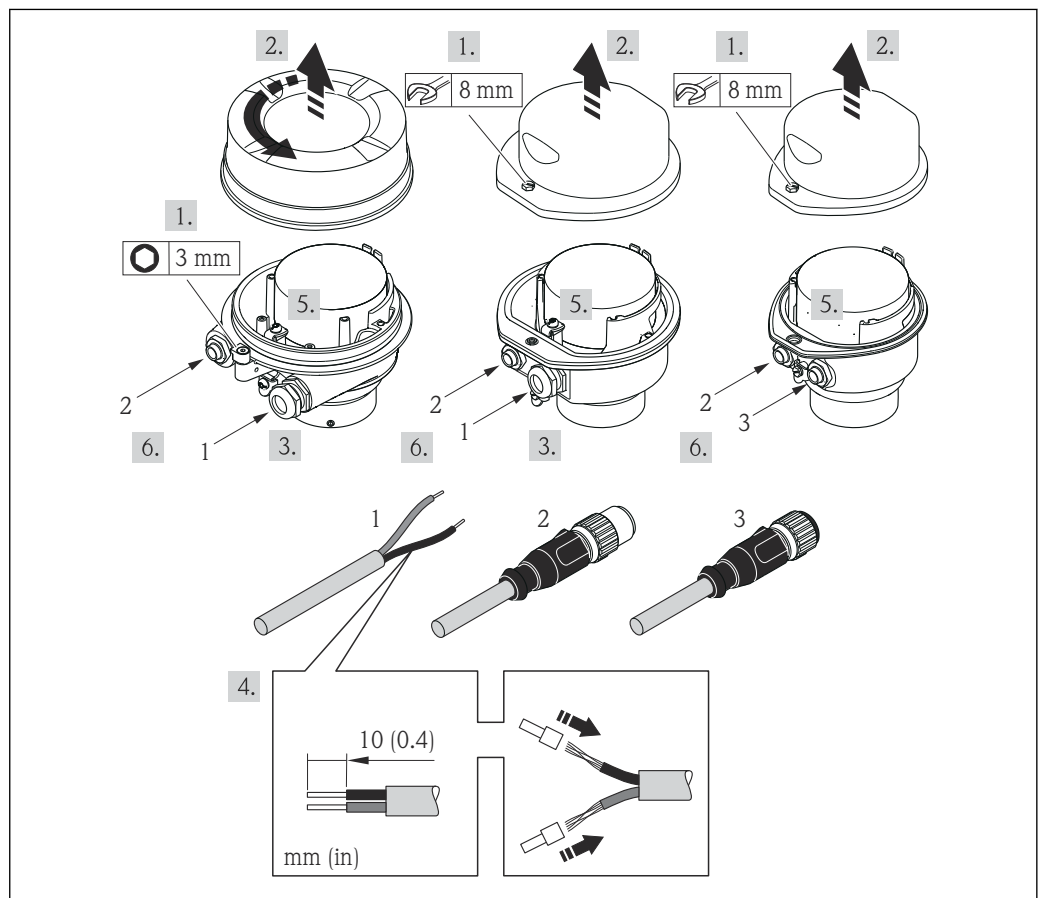

A0017844

9 Device versions with connection examples

- 1 Cable
 2 Device plug for signal transmission
 3 Device plug for supply voltage

For device version with device plug: follow step 6 only.

1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
2. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
3. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
4. Connect the cable in accordance with the terminal assignment or the device plug pin assignment .
5. Depending on the device version, tighten the cable glands or plug in the device plug and tighten .
6. **⚠ WARNING**

Housing degree of protection may be voided due to insufficient sealing of the housing.

- Screw in the screw without using any lubricant. The threads on the cover are coated with a dry lubricant.

Reverse the removal procedure to reassemble the transmitter.

7.2.2 Ensuring potential equalization

Requirements

Please consider the following to ensure correct measurement:

- Same electrical potential for the fluid and sensor
- Company-internal grounding concepts




For devices intended for use in hazardous locations, please observe the guidelines in the Ex documentation (XA).

7.3 Special connection instructions

7.3.1 Connection examples

PROFINET

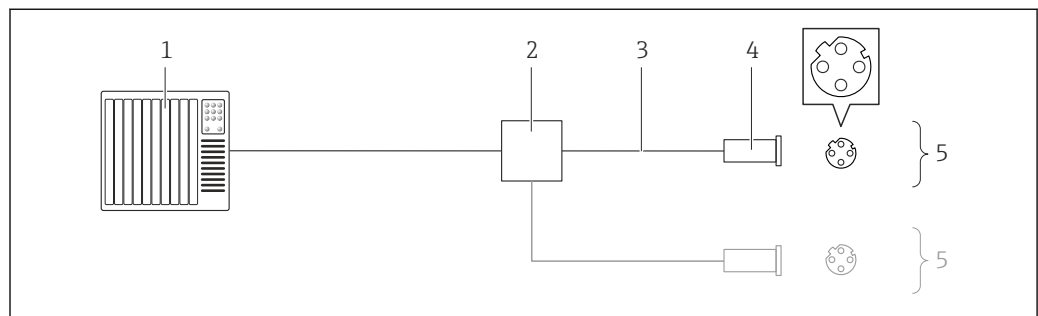

A0016805

10 Connecting cable for PROFINET

- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- 4 Connector
- 5 Transmitter

7.4 Hardware settings

7.4.1 Setting the device name


A measuring point can be quickly identified within a plant on the basis of the tag name. The tag name is equivalent to the device name (name of station of the PROFINET specification). The factory-assigned device name can be changed using the DIP switches or the automation system.

Example of device name (factory setting): eh-promass100-xxxxx

eh	Endress+Hauser
promass	Instrument family
100	Transmitter
xxxxx	Serial number of the device

The device name currently used is displayed in Setup → Name of station .

Setting the device name using the DIP switches

The last part of the device name can be set using DIP switches 1-8. The address range is between 1 and 254 (factory setting: serial number of the device →  14)

Overview of the DIP switches

DIP switches	Bit	Description
1	1	Configurable part of the device name
2	2	
3	4	
4	8	
5	16	
6	32	
7	64	
8	128	
9	–	Enable hardware write protection
10	–	Default IP address: use 192.168.1.212


Example: set the device name eh-promass100-065

DIP switches	ON/OFF	Bit
1	ON	1
2...6	OFF	–
7	ON	64
8	OFF	–

Setting the device name

Risk of electric shock when opening the transmitter housing.

- Disconnect the device from the power supply before opening the transmitter housing.

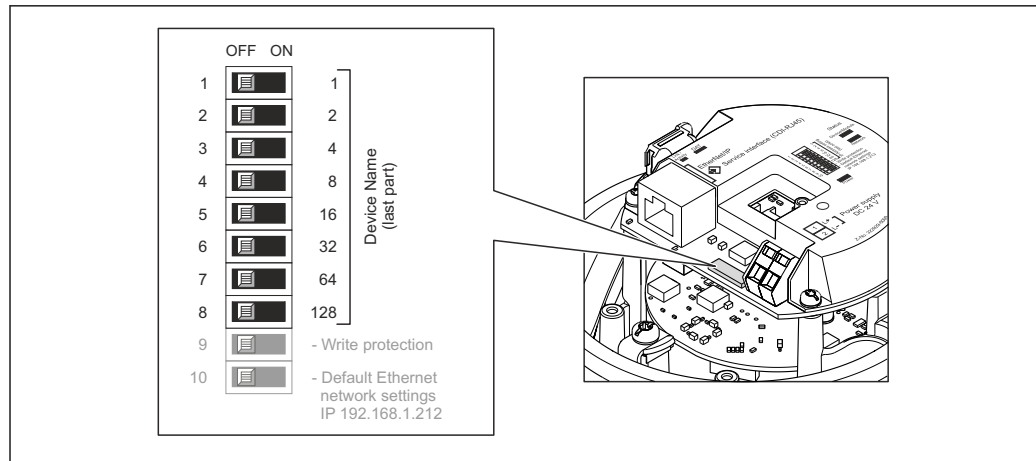

A0027332

1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary
→ 139.
3. Set the desired device name using the corresponding DIP switches on the I/O electronics module.
4. Reverse the removal procedure to reassemble the transmitter.
5. Reconnect the device to the power supply. The configured device address is used once the device is restarted.

i If the device is reset via the PROFINET interface, it is not possible to reset the device name to the factory setting. The value 0 is used instead of the device name.

Setting the device name via the automation system

DIP switches 1-8 must all be set to **OFF** (factory setting) or all be set to **ON** to be able to set the device name via the automation system.

The complete device name (name of station) can be changed individually via the automation system.

- i** The serial number used as part of the device name in the factory setting is not saved. It is not possible to reset the device name to the factory setting with the serial number. The value 0 is used instead of the serial number.
- When assigning the device name via the automation system, enter the device name in lower-case letters.


7.5 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

1. Check that the housing seals are clean and fitted correctly. Dry, clean or replace the seals if necessary.
2. Tighten all housing screws and screw covers.
3. Firmly tighten the cable glands.

4.
- To ensure that moisture does not enter the cable entry, route the cable so that it loops down before the cable entry ("water trap").

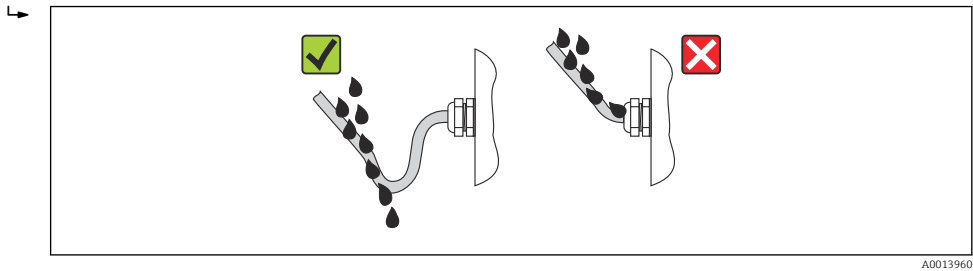

A0013960


5.
- Insert dummy plugs into unused cable entries.

7.6 Post-connection check

Are cables or the device undamaged (visual inspection)?	<input type="checkbox"/>
Do the cables comply with the requirements ?	<input type="checkbox"/>
Do the cables have adequate strain relief?	<input type="checkbox"/>
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" → 34 ?	<input type="checkbox"/>
Depending on the device version: are all the device plugs firmly tightened → 31?	<input type="checkbox"/>
Does the supply voltage match the specifications on the transmitter nameplate ?	<input type="checkbox"/>
Is the terminal assignment or the pin assignment of the device plug correct?	<input type="checkbox"/>
If supply voltage is present, is the power LED on the electronics module of the transmitter lit green ?	<input type="checkbox"/>
Depending on the device version, is the securing clamp or fixing screw firmly tightened?	<input type="checkbox"/>

8 Operation options


8.1 Overview of operating options

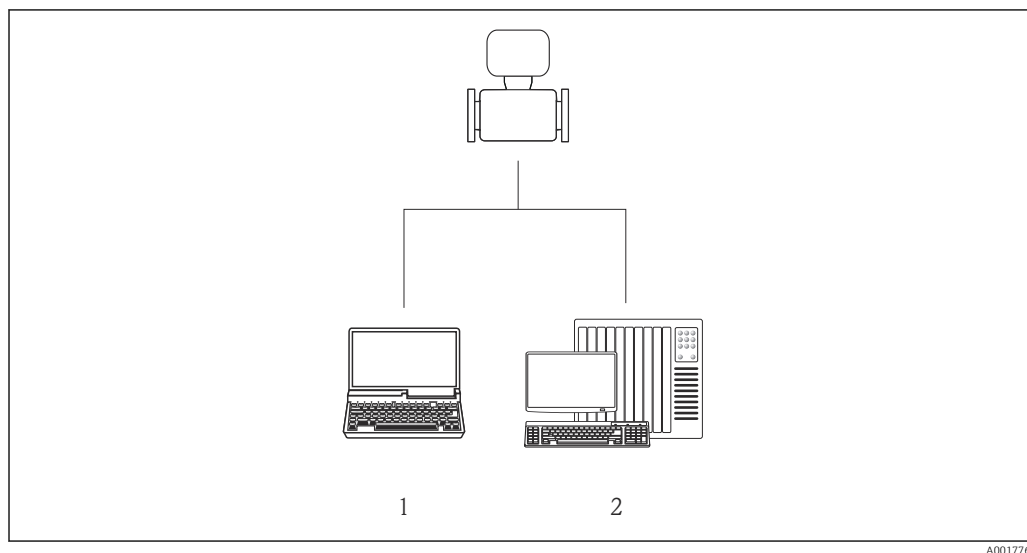



- 1 Computer with Web browser (e.g. Internet Explorer) or with "FieldCare" operating tool
- 2 Automation system, e.g. Siemens S7-300 or S7-1500 with Step7 or TIA portal and latest GSD file.

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

 For an overview of the operating menu with menus and parameters

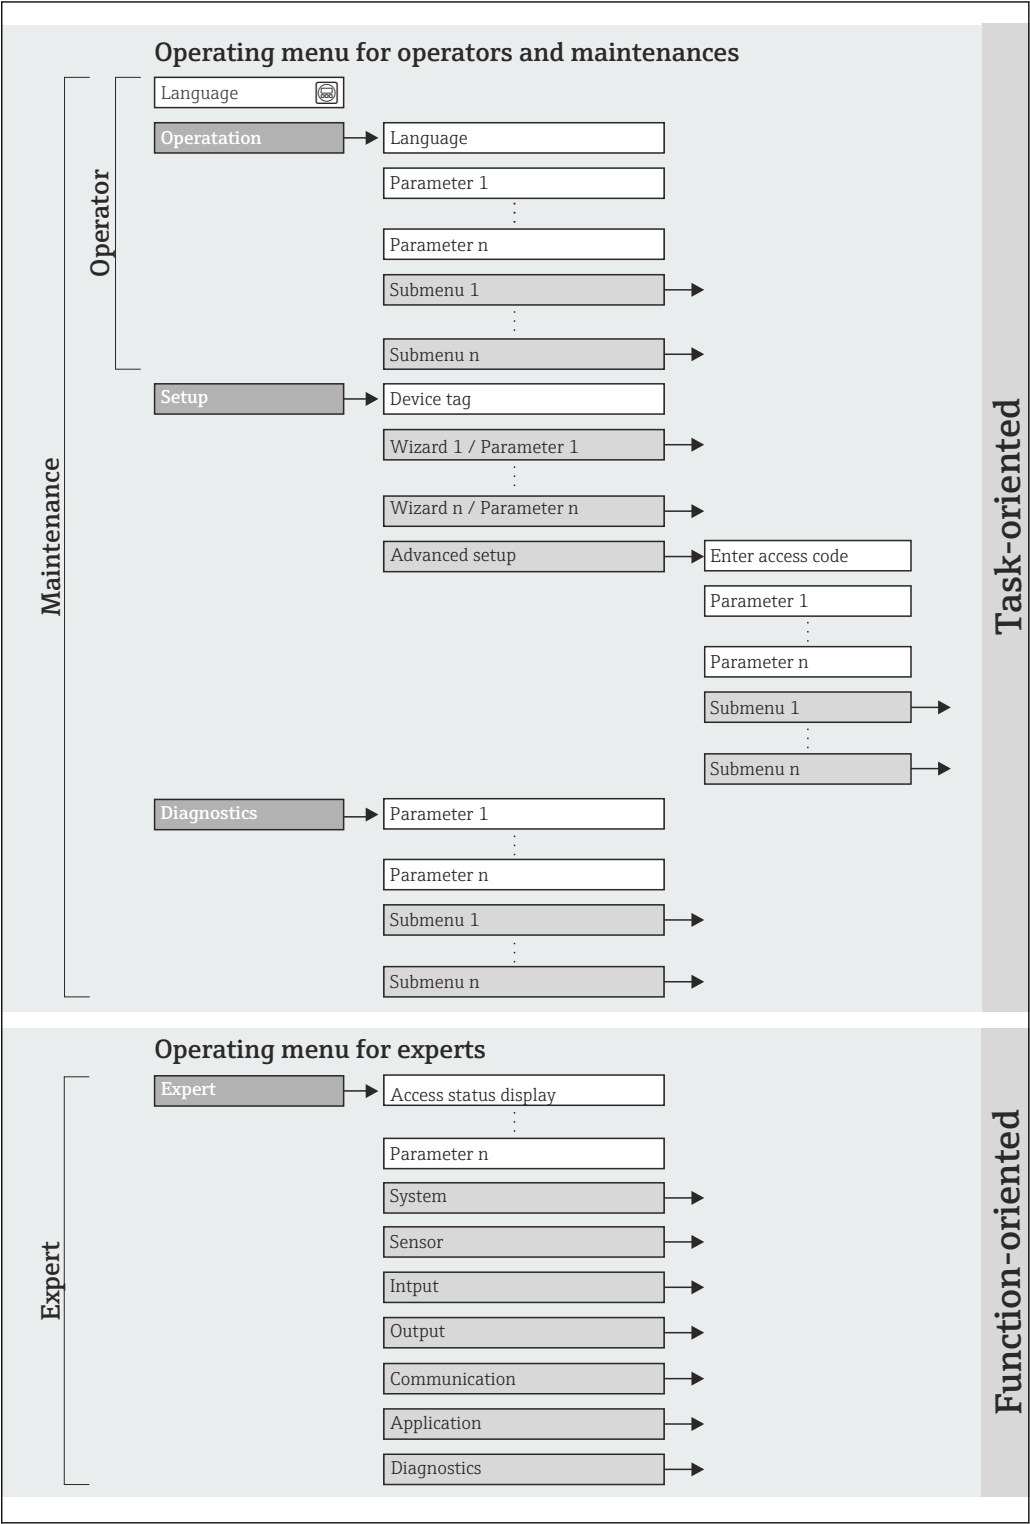

 11 Schematic structure of the operating menu

A0018237-EN

8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

Menu/parameter		User role and tasks	Content/meaning
Language	task-oriented	Role "Operator", "Maintenance" Tasks during operation: <ul style="list-style-type: none"> Configuring the operational display Reading measured values 	Defining the operating language
Operation			<ul style="list-style-type: none"> Configuring the operational display (e.g. display format, display contrast) Resetting and controlling totalizers
Setup		"Maintenance" role Commissioning: <ul style="list-style-type: none"> Configuration of the measurement Configuration of the inputs and outputs 	Advanced setup <ul style="list-style-type: none"> For more customized configuration of the measurement (adaptation to special measuring conditions) Configuration of totalizers Administration (define access code, reset measuring device)
Diagnostics		"Maintenance" role Fault elimination: <ul style="list-style-type: none"> Diagnostics and elimination of process and device errors Measured value simulation 	Contains all parameters for error detection and analyzing process and device errors: <ul style="list-style-type: none"> Diagnostic list Contains up to 5 currently pending diagnostic messages. Event logbook Contains up to 20 event messages that have occurred. Device information Contains information for identifying the device. Measured values Contains all current measured values. Heartbeat The functionality of the device is checked on demand and the verification results are documented. Simulation Is used to simulate measured values or output values.
Expert	function-oriented	Tasks that require detailed knowledge of the function of the device: <ul style="list-style-type: none"> Commissioning measurements under difficult conditions Optimal adaptation of the measurement to difficult conditions Detailed configuration of the communication interface Error diagnostics in difficult cases 	Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: <ul style="list-style-type: none"> System Contains all higher-order device parameters which do not concern the measurement or the communication interface. Sensor Configuration of the measurement. Application Configuration of the functions that go beyond the actual measurement (e.g. totalizer). Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.

8.3 Access to the operating menu via the Web browser

8.3.1 Function range


Thanks to the integrated Web server the device can be operated and configured via a Web browser. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.




For additional information about the Web server, see Special Documentation SD01458D

8.3.2 Prerequisites



Computer hardware

Interface	The computer must have an RJ45 interface.
Connecting cable	Standard Ethernet cable with RJ45 connector.
Screen	Recommended size: ≥12" (depends on the screen resolution)  Web server operation is not optimized for touch screens!



Computer software

Recommended operating systems	Microsoft Windows 7 or higher.  Microsoft Windows XP is supported.
Web browsers supported	<ul style="list-style-type: none"> ▪ Microsoft Internet Explorer 8 or higher ▪ Mozilla Firefox ▪ Google Chrome

Computer settings



User rights	User rights are required for TCP/IP and proxy server settings (for changes to the IP address, subnet mask etc.).
Proxy server settings of the Web browser	The Web browser setting <i>Use proxy server for LAN</i> must be disabled .
JavaScript	<p>JavaScript must be enabled.</p> <p> If JavaScript cannot be enabled: enter <code>http://XXX.XXX.X.XXX/basic.html</code> in the address line of the Web browser, e.g. <code>http://192.168.1.212/basic.html</code>. A fully functional but simplified version of the operating menu structure starts in the Web browser.</p> <p> When installing a new firmware version: To enable correct data display, clear the temporary memory (cache) of the Web browser under Internet options.</p>

Measuring device

Web server	<p>Web server must be enabled; factory setting: ON</p> <p> For information on enabling the Web server →  42</p>
------------	---

8.3.3 Establishing a connection

Configuring the Internet protocol of the computer

1. Via DIP switch 10, enable the default IP address 192.168.1.212 →  33.
2. Switch on the measuring device and connect to the computer via the cable →  43.
3. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

IP address	192.168.1.212
Subnet mask	255.255.255.0
Default gateway	192.168.1.212 or leave cells empty

Starting the Web browser

- ▶ Start the Web browser on the computer.

The login page appears.

The screenshot shows the login interface of the Endress+Hauser Proline Promass I 100 PROFINET. It includes a header with the Endress+Hauser logo. Below the header, there are fields for 'Device name', 'Device tag', and 'Status signal', each with a corresponding input box. To the right of these fields are three more input boxes labeled 'Current measured values'. Below these is a 'Webserv.language' dropdown menu set to 'English'. A 'Login' button is located at the bottom right. A legend on the left side of the page lists the numbered callouts: 1. Picture of device, 2. Device name, 3. Device tag, 4. Status signal, 5. Current measured values, 6. Operating language, 7. User role, 8. Access code, 9. Login.

- 1 Picture of device
- 2 Device name
- 3 Device tag
- 4 Status signal
- 5 Current measured values
- 6 Operating language
- 7 User role
- 8 Access code
- 9 Login

If a login page does not appear, or if the page is incomplete → 80


8.3.4 Logging on

1. Select the preferred operating language for the Web browser.
2. Enter the access code.
3. Press **OK** to confirm your entry.

Access code	0000 (factory setting); can be changed by customer
-------------	--

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

8.3.5 User interface

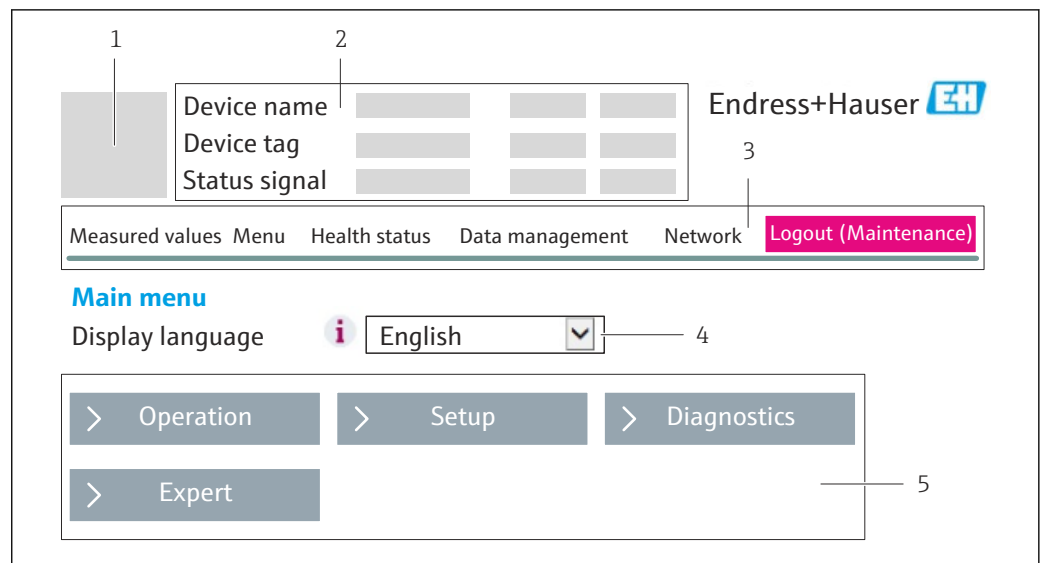

- 1 Picture of device
- 2 Header
- 3 Function row
- 4 Operating language
- 5 Navigation area

Header

The following information appears in the header:

- Device tag
- Device status with status signal → 83
- Current measured values

Function row

Functions	Meaning
Measured values	The measured values of the device are displayed
Menu	Access to the operating menu structure of the device, same as for the operating tool
Device status	Displays the diagnostic messages currently pending, listed in order of priority
Data management	Data exchange between PC and measuring device: <ul style="list-style-type: none"> ■ Upload the configuration from the device (XML format, create configuration back-up) ■ Save the configuration to the device (XML format, restore configuration) ■ Export the event list (.csv file) ■ Export parameter settings (.csv file, create documentation of the measuring point configuration) ■ Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)
Network configuration	Configuration and checking of all the parameters required for establishing the connection to the device: <ul style="list-style-type: none"> ■ Network settings (e.g. IP address, MAC address) ■ Device information (e.g. serial number, firmware version)
Logout	End the operation and call up the login page

Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

Navigation area

If a function is selected in the function bar, the submenus of the function open in the navigation area. The user can now navigate through the menu structure.

8.3.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

Possible selection:

- Off
 - The Web server is completely disabled.
 - Port 80 is blocked.
- HTML Off
 - The HTML version of the Web server is not available.
- On
 - The complete Web server functionality is available.
 - JavaScript is used.
 - The password is transmitted as an encrypted password.
 - Any change to the password is also transmitted in encrypted format.

Navigation

"Expert" menu → Communication → Web server

Parameter overview with brief description


Parameter	Description	Selection
Web server functionality	Switch the Web server on and off.	<ul style="list-style-type: none"> ■ Off ■ HTML Off ■ On


Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via the FieldCare operating tool
- Via the DeviceCare operating tool

8.3.7 Logging out

 Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.


1. Select the **Logout** entry in the function row.
 - ↳ The home page with the Login box appears.
2. Close the Web browser.
3. Reset the modified properties of the Internet protocol (TCP/IP) if they are no longer needed →  39.

8.4 Access to the operating menu via the operating tool

8.4.1 Connecting the operating tool

Via PROFINET network

This communication interface is available in device versions with PROFINET.

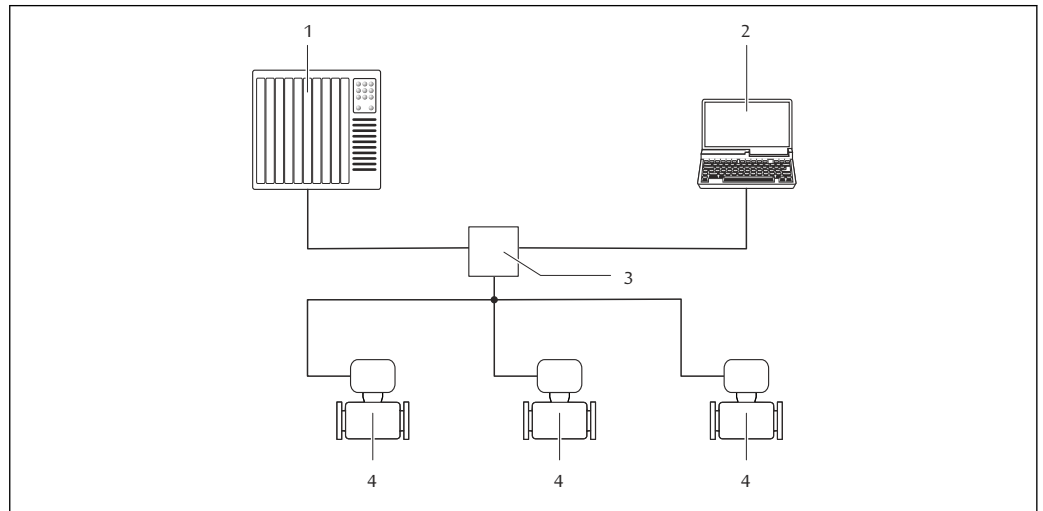


A0026545

12 Options for remote operation via PROFINET network

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

Via service interface (CDI-RJ45)

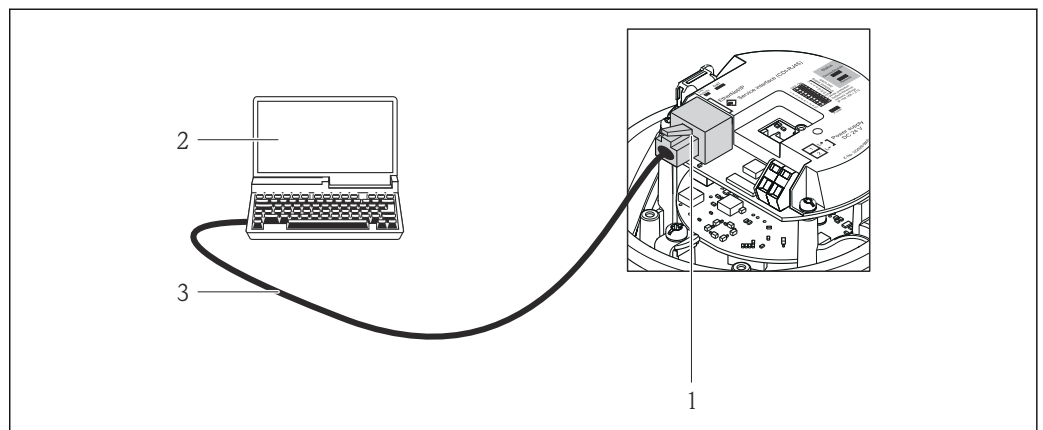

A0016940

13 Connection for order code for "Output", option R: PROFINET

- 1 Service interface (CDI -RJ45) and PROFINET interface of the measuring device with access to the integrated Web server
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 connector

8.4.2 FieldCare

Function scope

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

Service interface CDI-RJ45 →  43


Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook



For additional information about FieldCare, see Operating Instructions BA00027S and BA00059S

Source for device description files

See information →  46


Establishing a connection

1. Start FieldCare and launch the project.
2. In the network: Add a device.
 - ↳ The **Add device** window opens.
3. Select the **CDI Communication TCP/IP** option from the list and press **OK** to confirm.
4. Right-click **CDI Communication TCP/IP** and select the **Add device** option in the context menu that opens.
5. Select the desired device from the list and press **OK** to confirm.
 - ↳ The **CDI Communication TCP/IP (Configuration)** window opens.
6. Enter the device address in the **IP address** field and press **Enter** to confirm: 192.168.1.212 (factory setting); if the IP address is not known .
7. Establish the online connection to the device.



For additional information, see Operating Instructions BA00027S and BA00059S

User interface

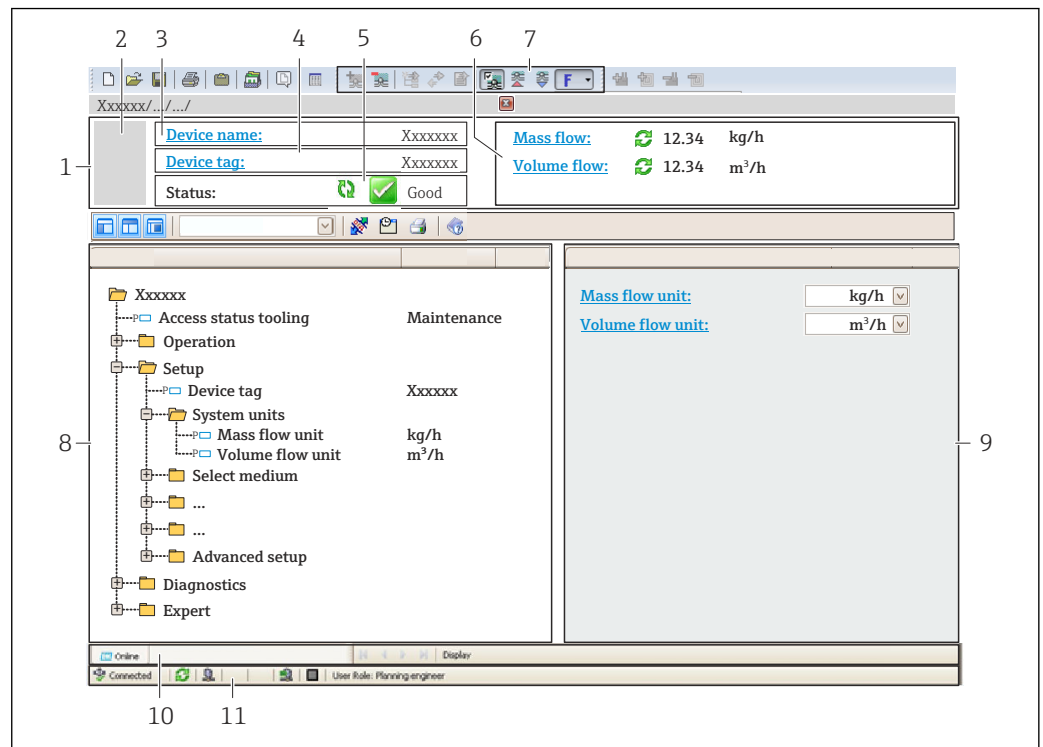

A0021051-EN

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Tag name
- 5 Status area with status signal → 83
- 6 Display area for current measured values
- 7 Edit toolbar with additional functions such as save/restore, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

8.4.3 DeviceCare

Function scope

Tool to connect and configure Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.



For details, see Innovation Brochure IN01047S


Source for device description files

See information → 46


9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

Firmware version	01.00.zz	<ul style="list-style-type: none"> ■ On the title page of the Operating instructions ■ On the transmitter nameplate →  14 ■ Firmware version Diagnostics → Device information → Firmware version
Release date of firmware version	12.2015	–
Manufacturer ID	0x11	Manufacturer ID Diagnostics → Device information → Manufacturer ID
Device ID	0x844A	Device ID Expert → Communication → PROFINET configuration → PROFINET information → Device ID
Device type ID	Promass 100	Device Type Expert → Communication → PROFINET configuration → PROFINET information → Device Type
Device revision	1	Device revision Expert → Communication → PROFINET configuration → PROFINET information → Device revision
PROFINET version	2.3.x	–



For an overview of the different firmware versions for the device →  114

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via Service interface (CDI)	Sources for obtaining device descriptions
FieldCare	<ul style="list-style-type: none"> ■ www.endress.com → Download Area ■ CD-ROM (contact Endress+Hauser) ■ DVD (contact Endress+Hauser)
DeviceCare	<ul style="list-style-type: none"> ■ www.endress.com → Download Area ■ CD-ROM (contact Endress+Hauser) ■ DVD (contact Endress+Hauser)

9.2 Device master file (GSD)

In order to integrate field devices into a bus system, the PROFINET system needs a description of the device parameters, such as output data, input data, data format and data volume.

These data are available in the device master file (GSD) which is provided to the automation system when the communication system is commissioned. In addition device bit maps, which appear as icons in the network structure, can also be integrated.

The device master file (GSD) is in XML format, and the file is created in the GSDML description markup language.

9.2.1 File name of the device master file (GSD)

Example of the name of a device master file:








GSDML-V2.3.x-EH-PROMASS 100-yyyymmdd.xml

GSDML	Description language
V2.3.x	Version of the PROFINET specification
EH	Endress+Hauser
Promass	Instrument family
100	Transmitter
yyyymmdd	Date of issue (yyyy: year, mm: month, dd: day)
.xml	File name extension (XML file)

9.3 Cyclic data transmission

9.3.1 Overview of the modules

The following tables shows which modules are available to the measuring device for cyclic data exchange. Cyclic data exchange is performed with an automation system.

Measuring device		Direction Data flow	Control system
Module	Slot		
Analog Input module →  48	1 to 14	→	PROFINET
Digital Input module →  48	1 to 14	→	
Diagnose Input module →  49	1 to 14	→	
Analog Output module →  51	18, 19, 20	←	
Digital Output module →  52	21, 22	←	
Totalizer 1 to 3 →  50	15...17	← →	
Heartbeat Verification module →  52	23	← →	

9.3.2 Description of the modules



The data structure is described from the perspective of the automation system:

- Input data: Are sent from the measuring device to the automation system.
- Output data: Are sent from the automation system to the measuring device.

Analog Input module

Transmit input variables from the measuring device to the automation system.

Analog Input modules cyclically transmit the selected input variables, along with the status, from the measuring device to the automation system. The input variable is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains status information pertaining to the input variable.

Selection: input variable

Slot	Input variables
1...14	<div><div>■</div>Mass flow</div> <div><div>■</div>Volume flow</div> <div><div>■</div>Corrected volume flow</div> <div><div>■</div>Target mass flow ¹⁾</div> <div><div>■</div>Carrier mass flow ¹⁾</div> <div><div>■</div>Density</div> <div><div>■</div>Reference density</div> <div><div>■</div>Concentration ¹⁾</div> <div><div>■</div>Temperature</div> <div><div>■</div>Carrier tube temperature ²⁾</div> <div><div>■</div>Electronic temperature</div> <div><div>■</div>Oscillation frequency</div> <div><div>■</div>Oscillation amplitude</div> <div><div>■</div>Frequency fluctuation</div> <div><div>■</div>Oscillation damping</div> <div><div>■</div>Tube damping fluctuation</div> <div><div>■</div>Signal asymmetry</div> <div><div>■</div>Exciter current</div> <div><div>■</div>Dynamic viscosity ³⁾</div> <div><div>■</div>Kinematic viscosity ³⁾</div> <div><div>■</div>Temp. compensated dynamic viscosity ³⁾</div> <div><div>■</div>Temp. compensated kinematic viscosity ³⁾</div>

- 1) Only available with the Concentration application package
- 2) Only available with the Heartbeat Verification application package
- 3) Only available with the Viscosity application package

Data structure

Input data of Analog Input

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status ¹⁾

- 1) Status coding → 53

Discrete Input module

Transmit discrete input values from the measuring device to the automation system.

Discrete input values are used by the measuring device to transmit the state of device functions to the automation system.


Discrete Input modules cyclically transmit discrete input values, along with the status, from the measuring device to the automation system. The discrete input value is depicted in the first byte. The second byte contains standardized status information pertaining to the input value.

Selection: device function

Slot	Device function	Status (meaning)
1...14	Empty pipe detection	<ul style="list-style-type: none"> 0 (device function not active) 1 (device function active)
	Low flow cut off	

*Data structure**Input data of Discrete Input*


Byte 1	Byte 2
Discrete Input	Status ¹⁾

1) Status coding →  53


Diagnose Input module

Transmit discrete input values (diagnostic information) from the measuring device to the automation system.


Diagnostic information is used by the measuring device to transmit the device status to the automation system.

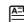Diagnose Input modules transmit discrete input values from the measuring device to the automation system. The first two bytes contain the information regarding the diagnostic information number (→  88). The third byte provides the status.

Selection: device function

Slot	Device function	Status (meaning)
1...14	Last diagnostics	Diagnostic information number (→  88) and status
	Current diagnosis	



Information about pending diagnostic information →  109.

*Data structure**Input data of Diagnose Input*

Byte 1	Byte 2	Byte 3	Byte 4
Diagnostic information number		Status	Value 0

Status

Coding (hex)	Status
0x00	No device error is present.
0x01	Failure (F): A device error is present. The measured value is no longer valid.
0x02	Function check (C): The device is in service mode (e.g. during a simulation).
0x04	Maintenance required (M): Maintenance is required. The measured value is still valid.
0x08	Out of specification (S): The device is being operated outside its technical specification limits (e.g. process temperature range).

Totalizer module

The Totalizer module consists of the Totalizer Value, Totalizer Control and Totalizer Mode submodules.

Totalizer Value submodule

Transmit transmitter value from the device to the automation system.

Totalizer modules cyclically transmit a selected totalizer value, along with the status, from the measuring device to the automation system via the Totalizer Value submodule. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains status information pertaining to the totalizer value.


Selection: input variable

Slot	Sub-slot	Input variable
15...17	1	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow ¹⁾ ■ Carrier mass flow ¹⁾

1) Only available with the Concentration application package

Data structure of input data (Totalizer Value submodule)

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status ¹⁾

1) Status coding →  53

Totalizer Control submodule

Control the totalizer via the automation system.

Selection: control totalizer

Slot	Sub-slot	Value	Control totalizer
15...17	2	0	Totalize
		1	Reset + hold
		2	Preset + hold
		3	Reset + totalize
		4	Preset + totalize
		5	Hold

Data structure of output data (Totalizer Control submodule)

Byte 1
Control variable

Totalizer Mode submodule

Configure the totalizer via the automation system.

Selection: totalizer configuration

Slot	Sub-slot	Value	Control totalizer
15...17	3	0	Balancing
		1	Balance the positive flow
		2	Balance the negative flow

Data structure of output data (Totalizer Mode submodule)

Byte 1
Configuration variable

Analog Output module

Transmit compensation values from the automation system to the measuring device.

Analog Output modules cyclically transmit compensation values, along with the status and the associated unit, from the automation system to the measuring device. The compensation value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the compensation value. The unit is transmitted in the sixth and seventh byte.

Assigned compensation values

The configuration is performed via: Expert → Sensor → External compensation

Slot	Compensation value
18	External pressure
19	External temperature
20	External reference density

Available units

Pressure		Temperature		Density	
Unit code	Unit	Unit code	Unit	Unit code	Unit
1610	Pa a	1001	°C	32840	kg/Nm ³
1616	kPa a	1002	°F	32841	kg/Nl
1614	MPa a	1000	K	32842	g/Scm ₃
1137	bar	1003	°R	32843	kg/Scm ₃
1611	Pa g			32844	lb/Sft ₃
1617	kPa g				
1615	MPa g				
32797	bar g				
1142	psi a				
1143	psi g				

*Data structure**Output data of Analog Output*

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
Measured value: floating point number (IEEE 754)				Status ¹⁾	Unit code	

1) Status coding → 53

Failsafe mode

A failsafe mode can be defined for using the compensation values.

If the status is GOOD or UNCERTAIN, the compensation values transmitted by the automation system are used. If the status is BAD, the failsafe mode is activated for the use of the compensation values.

Parameters are available per compensation value to define the failsafe mode: Expert
→ Sensor → External compensation

Fail safe type parameter

- Fail safe value option: The value defined in the Fail safe value parameter is used.
- Fallback value option: The last valid value is used.
- Off option: The failsafe mode is disabled.

Fail safe value parameter

Use this parameter to enter the compensation value which is used if the Fail safe value option is selected in the Fail safe type parameter.

Digital Output module

Transmit discrete output values from the automation system to the measuring device.

Discrete output values are used by the automation system to enable and disable device functions.

Digital Output modules cyclically transmit discrete output values, along with the status, from the automation system to the measuring device. The discrete output value is transmitted in the first byte. The second byte contains status information pertaining to the output value.

Assigned device functions

Slot	Device function	Status (meaning)
21	Flow override	<ul style="list-style-type: none"> ■ 0 (disable device function) ■ 1 (enable device function)
22	Zero point adjustment	

*Data structure**Output data of Discrete Output*

Byte 1	Byte 2
Discrete Output	Status ¹⁾ ²⁾

1) Status coding → 53

2) If the status is BAD, the control variable is not adopted.

Heartbeat Verification module

Receive discrete output values from the automation system and transmit discrete input values from the measuring device to the automation system.

The Heartbeat Verification module receives discrete output data from the automation system and transmits discrete input data from the measuring device to the automation system.

The discrete output value is provided by the automation system in order to start Heartbeat Verification. The discrete input value is depicted in the first byte. The second byte contains status information pertaining to the input value.

The discrete input value is used by the measuring device to transmit the status of the Heartbeat Verification device functions to the automation system. The module cyclically transmits the discrete input value, along with the status, to the automation system. The discrete input value is depicted in the first byte. The second byte contains status information pertaining to the input value.



Only available with the Heartbeat Verification application package.

Assigned device functions

Slot	Device function	Bit	Verification status
23	Status verification (input data)	0	Verification has not been performed
		1	Verification has failed
		2	Currently performing verification
		3	Verification terminated
	Verification result (input data)	Bit	Verification result
		4	Verification has failed
		5	Verification performed successfully
		6	Verification has not been performed
		7	–
	Start verification (output data)	Verification control	
		A change in the status from 0 to 1 starts the verification	

Data structure

Output data of the Heartbeat Verification module

Byte 1
Discrete Output

Input data of the Heartbeat Verification module

Byte 1	Byte 2
Discrete Input	Status ¹⁾

1) Status coding → 53

9.3.3 Status coding

Status	Coding (hex)	Meaning
BAD - Maintenance alarm	0x24	A measured value is not available because a device error has occurred.
BAD - Process related	0x28	A measured value is not available because the process conditions are not within the device's technical specification limits.

Status	Coding (hex)	Meaning
BAD - Function check	0x3C	A function check is active (e.g. cleaning or calibration)
UNCERTAIN - Initial value	0x4F	A pre-defined value is output until a correct measured value is available again or until remedial measures have been carried out that change this status.
UNCERTAIN - Maintenance demanded	0x68	Signs of wear and tear have been detected on the measuring device. Short-term maintenance is needed to ensure that the measuring device remains operational. The measured value might be invalid. The use of the measured value depends on the application.
UNCERTAIN - Process related	0x78	The process conditions are not within the device's technical specification limits. This could have a negative impact on the quality and accuracy of the measured value. The use of the measured value depends on the application.
GOOD - OK	0x80	No error has been diagnosed.
GOOD - Maintenance demanded	0xA8	The measured value is valid. It is highly advisable to service the device in the near future.
GOOD - Function check	0xBC	The measured value is valid. The measuring device is performing an internal function check. The function check does not have any noticeable effect on the process.

9.3.4 Factory setting

The slots are already assigned in the automation system for initial commissioning.



Assigned slots

Slot	Factory setting
1	Mass flow
2	Volume flow
3	Corrected volume flow
4	Density
5	Reference density
6	Temperature
7...12	–
15	Totalizer 1
16	Totalizer 2
17	Totalizer 3


10 Commissioning

10.1 Function check

Before commissioning the measuring device:



- Make sure that the post-installation and post-connection checks have been performed.
- "Post-installation check" checklist →  27
- "Post-connection check" checklist →  35

10.2 Identifying the device in the PROFINET network




A device can be quickly identified within a plant using the PROFINET flash function. If the PROFINET flash function is activated in the automation system, the LED indicating the network status flashes →  82 and the red backlight of the onsite display is switched on.

10.3 Startup parameterization

By activating the startup parameterization function (NSU: Normal Startup Unit), the configuration of the most important measuring device parameters is taken from the automation system.

 Configurations taken from the automation system →  127.

10.4 Establishing a connection via FieldCare

- For FieldCare connection →  43
- For establishing a connection via FieldCare →  44
- For FieldCare user interface →  45


10.5 Setting the operating language





Factory setting: English or ordered local language

The operating language can be set in FieldCare, DeviceCare or via the Web server:
Operation → Display language

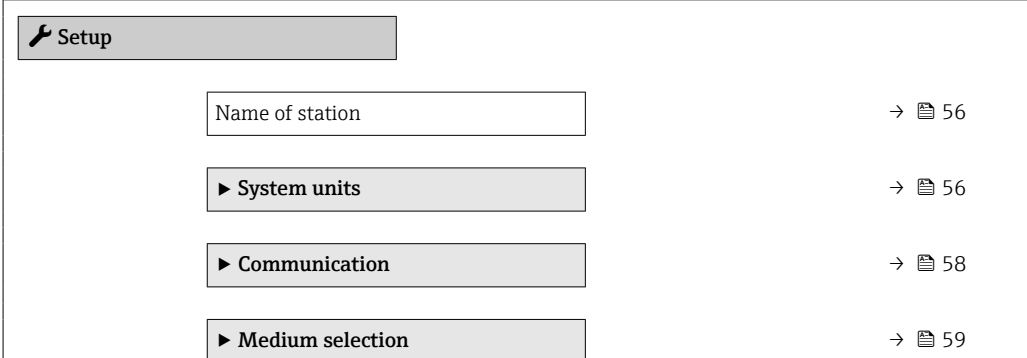10.6 Configuring the measuring device

The **Setup** menu with its submenus contains all the parameters needed for standard operation.



Setup Menu Item	Reference
Name of station	→  56
► System units	→  56
► Communication	→  58
► Medium selection	→  59

► Low flow cut off	→ 61
► Partially filled pipe detection	→ 62
► Advanced setup	→ 63

10.6.1 Defining the tag name

A measuring point can be quickly identified within a plant on the basis of the tag name. The tag name is equivalent to the device name (name of station) of the PROFINET specification (data length: 255 bytes)

The device name can be changed via DIP switches or the automation system → 33.

The device name currently used is displayed in the **Name of station** parameter.

Navigation


"Setup" menu → Name of station

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Name of station	Name of the measuring point.	Max. 32 characters such as letters and numbers.	EH-PROMASS100 serial number of the device

10.6.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

 Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

Navigation

"Setup" menu → Advanced setup → System units → Mass flow unit

► System units

Mass flow unit

Mass unit

Volume flow unit

Volume unit

Corrected volume flow unit

Corrected volume unit

Density unit

Reference density unit

Temperature unit
Pressure unit

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Mass flow unit	Select mass flow unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Output Low flow cut off Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg/h lb/min
Mass unit	Select mass unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg lb
Volume flow unit	Select volume flow unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Output Low flow cut off Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> l/h gal/min (us)
Volume unit	Select volume unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> l gal (us)
Corrected volume flow unit	Select corrected volume flow unit. <i>Result</i> The selected unit applies for: Corrected volume flow	Unit choose list	Country-specific: <ul style="list-style-type: none"> NI/h Sft³/min
Corrected volume unit	Select corrected volume unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> NI Sft³
Density unit	Select density unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Output Simulation process variable Density adjustment (Expert menu) 	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg/l lb/ft³
Reference density unit	Select reference density unit.	Unit choose list	Country-dependent <ul style="list-style-type: none"> kg/NI lb/Sft³

Parameter	Description	Selection	Factory setting
Temperature unit	Select temperature unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Maximum value Minimum value Maximum value Minimum value Maximum value Minimum value External temperature Reference temperature Temperature 	Unit choose list	Country-specific: <ul style="list-style-type: none"> °C °F
Pressure unit	Select process pressure unit. <i>Result</i> The unit is taken from: <ul style="list-style-type: none"> Pressure value External pressure Pressure value 	Unit choose list	Country-specific: <ul style="list-style-type: none"> bar a psi a

10.6.3 Displaying the communication interface

The **Communication** submenu shows all the current parameter settings for selecting and configuring the communication interface.

Navigation

"Setup" menu → Communication

► Communication


MAC address

IP address

Subnet mask

Default gateway

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
MAC address	Displays the MAC address of the measuring device.  MAC = Media Access Control	Unique 12-digit character string comprising letters and numbers, e.g.: 00:07:05:10:01:5F	Each measuring device is given an individual address.
IP address	Displays the IP address of the Web server of the measuring device.	4 octet: 0 to 255 (in the particular octet)	0.0.0.0
Subnet mask	Displays the subnet mask.	4 octet: 0 to 255 (in the particular octet)	0.0.0.0
Default gateway	Displays the default gateway.	4 octet: 0 to 255 (in the particular octet)	–

10.6.4 Selecting and setting the medium

The **Medium selection** submenu contains parameters that have to be configured for selecting and setting the medium.

Navigation

"Setup" menu → Medium selection

► Medium selection

Select medium

Select gas type

Reference sound velocity

Temperature coefficient sound velocity

Pressure compensation

Pressure value

External pressure

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Select medium	–	Select medium type.	<ul style="list-style-type: none"> ■ Liquid ■ Gas 	–
Select gas type	The Gas option is selected in the Select medium parameter.	Select measured gas type.	<ul style="list-style-type: none"> ■ Air ■ Ammonia NH₃ ■ Argon Ar ■ Sulfur hexafluoride SF₆ ■ Oxygen O₂ ■ Ozone O₃ ■ Nitrogen oxide NO_x ■ Nitrogen N₂ ■ Nitrous oxide N₂O ■ Methane CH₄ ■ Hydrogen H₂ ■ Helium He ■ Hydrogen chloride HCl ■ Hydrogen sulfide H₂S ■ Ethylene C₂H₄ ■ Carbon dioxide CO₂ ■ Carbon monoxide CO ■ Chlorine Cl₂ ■ Butane C₄H₁₀ ■ Propane C₃H₈ ■ Propylene C₃H₆ ■ Ethane C₂H₆ ■ Others 	–
Reference sound velocity	The Others option is selected in the Select gas type parameter.	Enter sound velocity of gas at 0 °C (32 °F).	1 to 99 999.9999 m/s	0 m/s
Temperature coefficient sound velocity	The Others option is selected in the Select gas type parameter.	Enter temperature coefficient for the gas sound velocity.	Positive floating-point number	0 (m/s)/K
Pressure compensation	The Gas option is selected in the Select medium parameter.	Select pressure compensation type.	<ul style="list-style-type: none"> ■ Off ■ Fixed value ■ External value 	–
Pressure value	The Fixed value option is selected in the Pressure compensation parameter.	Enter process pressure to be used for pressure correction.	Positive floating-point number	–
External pressure	The External value option is selected in the Pressure compensation parameter.	Shows the external, fixed process pressure value.	Positive floating-point number	–

10.6.5 Configuring the low flow cut off

The **Low flow cut off** submenu contains parameters that must be configured for the configuration of low flow cut off.

Navigation

"Setup" menu → Low flow cut off

▶ Low flow cut off

Assign process variable

On value low flow cutoff

Off value low flow cutoff

Pressure shock suppression

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	–	Select process variable for low flow cut off.	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow 	–
On value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→ 61): <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow 	Enter on value for low flow cut off.	Positive floating-point number	Depends on country and nominal diameter
Off value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→ 61): <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow 	Enter off value for low flow cut off.	0 to 100.0 %	–
Pressure shock suppression	One of the following options is selected in the Assign process variable parameter (→ 61): <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow 	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	–

10.6.6 Configuring the partial filled pipe detection

The **Partially filled pipe detection** submenu contains parameters that have to be set for configuring empty pipe detection.

Navigation

"Setup" menu → Partially filled pipe detection

▶ Partially filled pipe detection

Assign process variable

Low value partial filled pipe detection

High value partial filled pipe detection


Response time part. filled pipe detect.

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry
Assign process variable	–	Select process variable for partially filled pipe detection.	<ul style="list-style-type: none"> ■ Off ■ Density ■ Reference density
Low value partial filled pipe detection	One of the following options is selected in the Assign process variable parameter: <ul style="list-style-type: none"> ■ Density ■ Reference density 	Enter lower limit value for deactivating partialy filled pipe detection.	Signed floating-point number
High value partial filled pipe detection	One of the following options is selected in the Assign process variable parameter: <ul style="list-style-type: none"> ■ Density ■ Reference density 	Enter upper limit value for deactivating partialy filled pipe detection.	Signed floating-point number
Response time part. filled pipe detect.	One of the following options is selected in the Assign process variable parameter: <ul style="list-style-type: none"> ■ Density ■ Reference density 	Enter time before diagnostic message is displayed for partially filled pipe detection.	0 to 100 s


10.7 Advanced settings

The **Advanced setup** submenu together with its submenus contains parameters for specific settings.

 The number of submenus can vary depending on the device version, e.g. viscosity is available only with the Promass I.

Navigation

"Setup" menu → Advanced setup

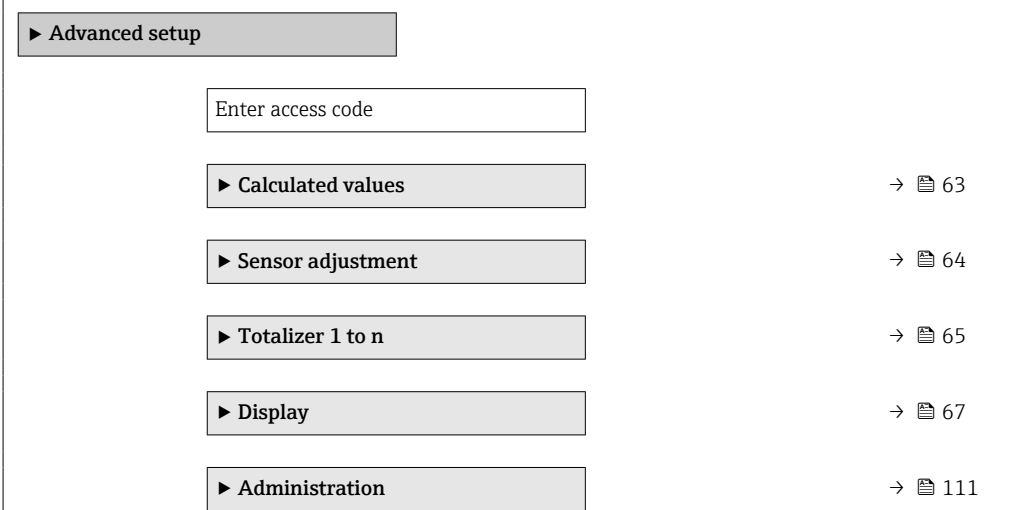


► Advanced setup	
Enter access code	
► Calculated values	→ 63
► Sensor adjustment	→ 64
► Totalizer 1 to n	→ 65
► Display	→ 67
► Administration	→ 111

10.7.1 Calculated values

The **Calculated values** submenu contains parameters for calculating the corrected volume flow.

Navigation

"Setup" menu → Advanced setup → Calculated values

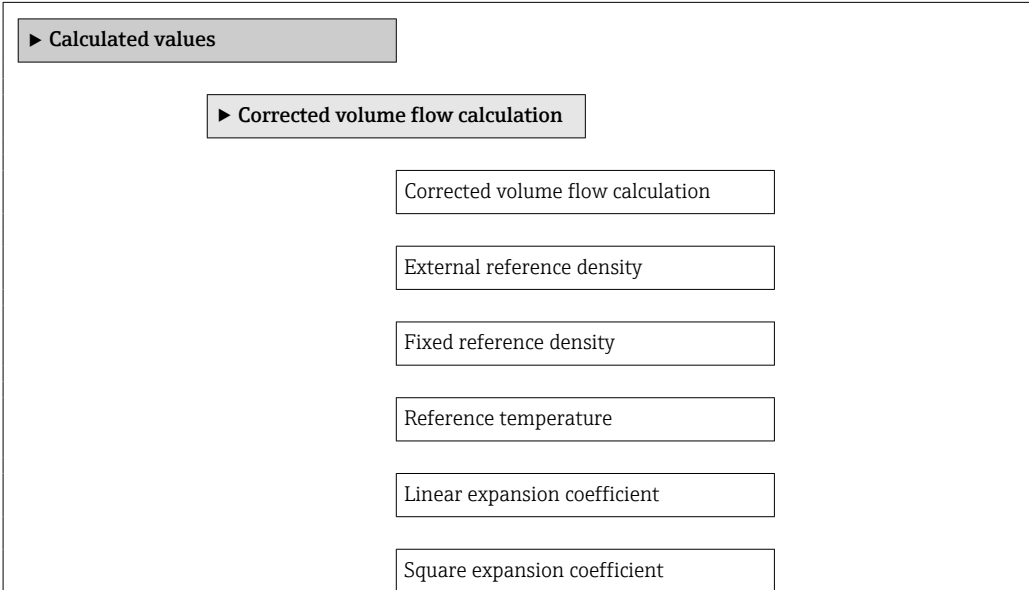

► Calculated values	
► Corrected volume flow calculation	
Corrected volume flow calculation	
External reference density	
Fixed reference density	
Reference temperature	
Linear expansion coefficient	
Square expansion coefficient	

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Corrected volume flow calculation	–	Select reference density for calculating the corrected volume flow.	<ul style="list-style-type: none"> Fixed reference density Calculated reference density Reference density by API table 53 External reference density 	–
External reference density	–	Shows external reference density.	Floating point number with sign	0 kg/Nl
Fixed reference density	In the Corrected volume flow calculation parameter the Fixed reference density option is selected.	Enter fixed value for reference density.	Positive floating-point number	–
Reference temperature	In the Corrected volume flow calculation parameter the Calculated reference density option is selected.	Enter reference temperature for calculating the reference density.	–273.15 to 99 999 °C	Country-specific: <ul style="list-style-type: none"> +20 °C +68 °F
Linear expansion coefficient	In the Corrected volume flow calculation parameter the Calculated reference density option is selected.	Enter linear, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	–
Square expansion coefficient	–	For media with a non-linear expansion pattern: enter the quadratic, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	–

10.7.2 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu → Advanced setup → Sensor adjustment

► Sensor adjustment

Installation direction

► Zero point adjustment

Parameter overview with brief description

Parameter	Description	Selection
Installation direction	Set sign of flow direction to match the direction of the arrow on the sensor.	<ul style="list-style-type: none"> Flow in arrow direction Flow against arrow direction

Zero point adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions → 128. Therefore, a zero point adjustment in the field is generally not required.

- Experience shows that zero point adjustment is advisable only in special cases:
- To achieve maximum measuring accuracy even with low flow rates
 - Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

Navigation

"Setup" menu → Advanced setup → Sensor adjustment → Zero point adjustment

► Zero point adjustment

Zero point adjustment control

Progress

Parameter overview with brief description

Parameter	Description	Selection / User interface	Factory setting
Zero point adjustment control	Start zero point adjustment.	<ul style="list-style-type: none">■ Cancel■ Busy■ Zero point adjust failure■ Start	–
Progress	Shows the progress of the process.	0 to 100 %	–

10.7.3 Configuring the totalizer

In the "Totalizer 1 to n" submenu the individual totalizer can be configured.

Navigation

"Setup" menu → Advanced setup → Totalizer 1 to n

► Totalizer 1 to n

Assign process variable

Unit totalizer

Totalizer operation mode

Failure mode

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection	Factory setting
Assign process variable	–	Select process variable for totalizer.	<ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Total mass flow ■ Condensate mass flow ■ Energy flow ■ Heat flow difference 	–
Unit totalizer	One of the following options is selected in the Assign process variable parameter: <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * 	Select the unit for the process variable of the totalizer.	Unit choose list	Country-specific: <ul style="list-style-type: none"> ■ kg ■ lb
Totalizer operation mode	In the Assign process variable parameter, one of the following options is selected: <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * 	Select totalizer calculation mode.	<ul style="list-style-type: none"> ■ Net flow total ■ Forward flow total ■ Reverse flow total ■ Last valid value 	–
Failure mode	In the Assign process variable parameter, one of the following options is selected: <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * 	Define the totalizer behavior in the event of a device alarm.	<ul style="list-style-type: none"> ■ Stop ■ Actual value ■ Last valid value 	–

* Visibility depends on order options or device settings

10.7.4 Carrying out additional display configurations

In the **Display** submenu you can set all the parameters associated with the configuration of the local display.

Navigation

"Setup" menu → Advanced setup → Display

► Display

Format display

Value 1 display

0% bargraph value 1

100% bargraph value 1

Decimal places 1

Value 2 display

Decimal places 2

Value 3 display

0% bargraph value 3

100% bargraph value 3

Decimal places 3

Value 4 display

Decimal places 4

Display language

Display interval

Display damping


Header

Header text

Separator

Backlight

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul style="list-style-type: none"> ■ 1 value, max. size ■ 1 bargraph + 1 value ■ 2 values ■ 1 value large + 2 values ■ 4 values 	–
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.  Depending on the device version, not all options are available in this parameter. The selection can vary depending on the sensor, e.g. viscosity is available only with the Promass I.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * ■ Density ■ Reference density ■ Concentration * ■ Dynamic viscosity * ■ Kinematic viscosity * ■ Temp. compensated dynamic viscosity * ■ Temp. compensated kinematic viscosity * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Oscillation frequency 1 * ■ Oscillation amplitude 0 * ■ Oscillation amplitude 1 * ■ Frequency fluctuation 0 ■ Frequency fluctuation 1 * ■ Oscillation damping 0 ■ Oscillation damping 1 * ■ Tube damping fluctuation 0 ■ Tube damping fluctuation 1 * ■ Signal asymmetry ■ Exciter current 0 ■ Exciter current 1 * ■ Sensor integrity * ■ None ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 	–
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 kg/h ■ 0 lb/min

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the Value 1 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	–
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist, see Value 1 display parameter	–
Decimal places 2	A measured value is specified in the Value 2 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	–
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist, see Value 1 display parameter	–
0% bargraph value 3	A selection has been made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 kg/h ■ 0 lb/min
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	–
Decimal places 3	A measured value is specified in the Value 3 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	–
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist, see Value 1 display parameter	–
Decimal places 4	A measured value is specified in the Value 4 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	–
Display language	A local display is provided.	Set display language.	<ul style="list-style-type: none"> ■ English ■ Deutsch * ■ Français * ■ Español * ■ Italiano * ■ Nederlands * ■ Portuguesa * ■ Polski * ■ русский язык (Russian) * ■ Svenska * ■ Türkçe * ■ 中文 (Chinese) * ■ 日本語 (Japanese) * ■ 한국어 (Korean) * ■ Bahasa Indonesia * ■ tiếng Việt (Vietnamese) * ■ čeština (Czech) * 	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	–
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	–

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Header	A local display is provided.	Select header contents on local display.	<div>■ Device tag</div> <div>■ Free text</div>	–
Header text	The Free text option is selected in the Header parameter.	Enter display header text.	Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)	–
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	<div>■ . (point)</div> <div>■ , (comma)</div>	. (point)
Backlight	Order code for "Display; operation", option E "SD03 4-line, illum.; touch control + data backup function"	Switch the local display backlight on and off.	<div>■ Disable</div> <div>■ Enable</div>	–

* Visibility depends on order options or device settings

10.8 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

Navigation
"Diagnostics" menu → Simulation

► Simulation

Assign simulation process variable

Process variable value

Simulation device alarm

Diagnostic event category

Diagnostic event simulation

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry
Assign simulation process variable	–	Select a process variable for the simulation process that is activated.	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Dynamic viscosity * ■ Kinematic viscosity * ■ Temp. compensated dynamic viscosity * ■ Temp. compensated kinematic viscosity * ■ Concentration * ■ Target mass flow * ■ Carrier mass flow *
Process variable value	One of the following options is selected in the Assign simulation process variable parameter (→ 71): <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Dynamic viscosity * ■ Kinematic viscosity * ■ Temp. compensated dynamic viscosity * ■ Temp. compensated kinematic viscosity * ■ Concentration * ■ Target mass flow * ■ Carrier mass flow * 	Enter the simulation value for the selected process variable.	Depends on the process variable selected
Simulation device alarm	–	Switch the device alarm on and off.	<ul style="list-style-type: none"> ■ Off ■ On
Diagnostic event category	–	Select a diagnostic event category.	<ul style="list-style-type: none"> ■ Sensor ■ Electronics ■ Configuration ■ Process
Diagnostic event simulation	–	Select a diagnostic event to simulate this event.	<ul style="list-style-type: none"> ■ Off ■ Diagnostic event picklist (depends on the category selected)

* Visibility depends on order options or device settings

10.9 Protecting settings from unauthorized access

The following options exist for protecting the configuration of the measuring device from unintentional modification after commissioning:

- Write protection via access code for Web browser → 71
- Write protection via write protection switch → 72
- Write protection via startup parameterization → 55

10.9.1 Write protection via access code


With the customer-specific access code, access to the measuring device via the Web browser is protected, as are the parameters for the measuring device configuration.


Navigation

"Setup" menu → Advanced setup → Administration → Define access code

Defining the access code via the Web browser

1. Navigate to the **"Enter access code" parameter**.
2. Max. Define a max. 4-digit numeric code as an access code.
3. Enter the access code again to confirm the code.
↳ The Web browser switches to the login page.

 If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

 The user role with which the user is currently logged on via the Web browser is indicated by the **Access status tooling** parameter.

Navigation path: Operation → Access status tooling


10.9.2 Write protection via write protection switch

The write protection switch makes it possible to block write access to the entire operating menu with the exception of the following parameters:


- External pressure
- External temperature
- Reference density
- All parameters for configuring the totalizer

The parameter values are now read only and cannot be edited any more:

- Via service interface (CDI-RJ45)
- Via PROFINET

1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary
→  139.

3.

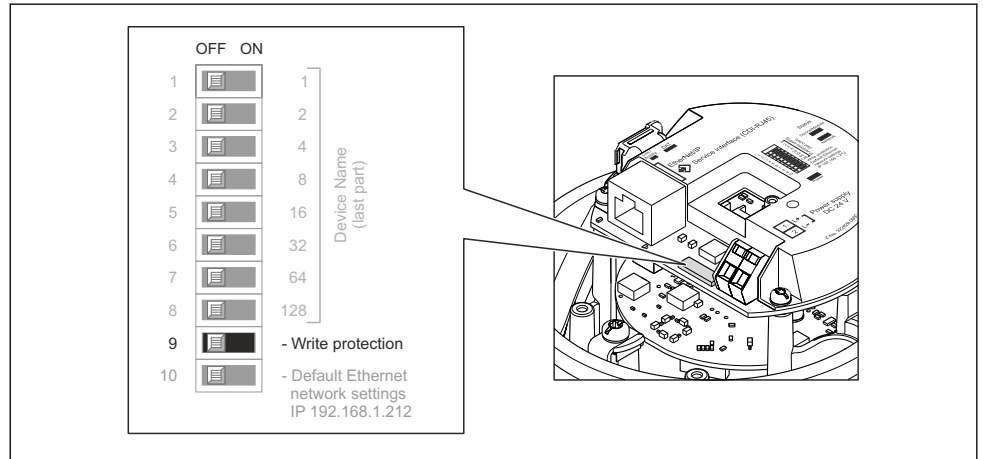

A0028081

Setting the write protection switch on the main electronics module to the **ON** position enables the hardware write protection. Setting the write protection switch on the main electronics module to the **OFF** position (factory setting) disables the hardware write protection.

- If hardware write protection is enabled: the **Locking status** parameter displays the **Hardware locked** option ; if disabled, the **Locking status** parameter does not display any option .

4. Reverse the removal procedure to reassemble the transmitter.

10.9.3 Write protection via startup parameterization

Software write protection can be enabled via startup parameterization. If software write protection is enabled, device configuration can only be performed via the PROFINET controller. In this case, write access is **no longer** possible via:

- Acyclic PROFINET communication
- Service interface
- Web server

Startup parameterization settings → 127.

11 Operation

11.1 Reading the device locking status

Device active write protection: **Locking status** parameter

Navigation


"Operation" menu → Locking status

Function scope of "Locking status" parameter

Options	Description
Hardware locked	The write protection switch (DIP switch) for hardware locking is activated on the I/O electronic module. This prevents write access to the parameters .
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

11.2 Adjusting the operating language

Information → ⓘ 55

 For information on the operating languages supported by the measuring device
→ ⓘ 140

11.3 Configuring the display

Advanced settings for the local display → ⓘ 67

11.4 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

11.4.1 Process variables

The **Process variables** submenu contains all the parameters needed to display the current measured values for every process variable.

Navigation

"Diagnostics" menu → Measured values → Process variables

► Process variables

Mass flow

Volume flow







Corrected volume flow

Density

Reference density
Temperature
Pressure value
Dynamic viscosity
Kinematic viscosity
Temp. compensated dynamic viscosity
Temp. compensated kinematic viscosity
Concentration
Target mass flow
Carrier mass flow

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Mass flow	–	Displays the mass flow currently measured. <i>Dependency</i> The unit is taken from the Mass flow unit parameter	Signed floating-point number
Volume flow	–	Displays the volume flow currently calculated. <i>Dependency</i> The unit is taken from the Volume flow unit parameter	Signed floating-point number
Corrected volume flow	–	Displays the corrected volume flow currently calculated. <i>Dependency</i> The unit is taken from the Corrected volume flow unit parameter	Signed floating-point number
Density	–	Shows the density currently measured. <i>Dependency</i> The unit is taken from the Density unit parameter	Signed floating-point number
Reference density	–	Displays the reference density currently calculated. <i>Dependency</i> The unit is taken from the Reference density unit parameter	Signed floating-point number
Temperature	–	Shows the medium temperature currently measured. <i>Dependency</i> The unit is taken from the Temperature unit parameter	Signed floating-point number


Parameter	Prerequisite	Description	User interface
Pressure value	–	Displays either a fixed or external pressure value. <i>Dependency</i> The unit is taken from the Pressure unit parameter.	Signed floating-point number
Dynamic viscosity	For the following order code: "Application package", option EG "Viscosity"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the dynamic viscosity currently calculated. <i>Dependency</i> The unit is taken from the Dynamic viscosity unit parameter	Signed floating-point number
Kinematic viscosity	For the following order code: "Application package", option EG "Viscosity"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the kinematic viscosity currently calculated. <i>Dependency</i> The unit is taken from the Kinematic viscosity unit parameter	Signed floating-point number
Temp. compensated dynamic viscosity	For the following order code: "Application package", option EG "Viscosity"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the temperature compensation currently calculated for the viscosity. <i>Dependency</i> The unit is taken from the Dynamic viscosity unit parameter	Signed floating-point number
Temp. compensated kinematic viscosity	For the following order code: "Application package", option EG "Viscosity"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the temperature compensation currently calculated for the kinetic viscosity. <i>Dependency</i> The unit is taken from the Kinematic viscosity unit parameter	Signed floating-point number
Concentration	For the following order code: "Application package", option ED "Concentration"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the concentration currently calculated. <i>Dependency</i> The unit is taken from the Concentration unit parameter.	Signed floating-point number
Target mass flow	With the following conditions: <ul style="list-style-type: none"> Order code for "Application package", option ED "Concentration" The WT-% option or the User conc. option is selected in the Concentration unit parameter.  The software options currently enabled are displayed in the Software option overview parameter.	Displays the target fluid mass flow currently measured. <i>Dependency</i> The unit is taken from the Mass flow unit parameter.	Signed floating-point number
Carrier mass flow	With the following conditions: <ul style="list-style-type: none"> Order code for "Application package", option ED "Concentration" The WT-% option or the User conc. option is selected in the Concentration unit parameter.  The software options currently enabled are displayed in the Software option overview parameter.	Displays the carrier fluid mass flow currently measured. <i>Dependency</i> The unit is taken from the Mass flow unit parameter.	Signed floating-point number

11.4.2 Totalizer

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu → Measured values → Totalizer 1 to n

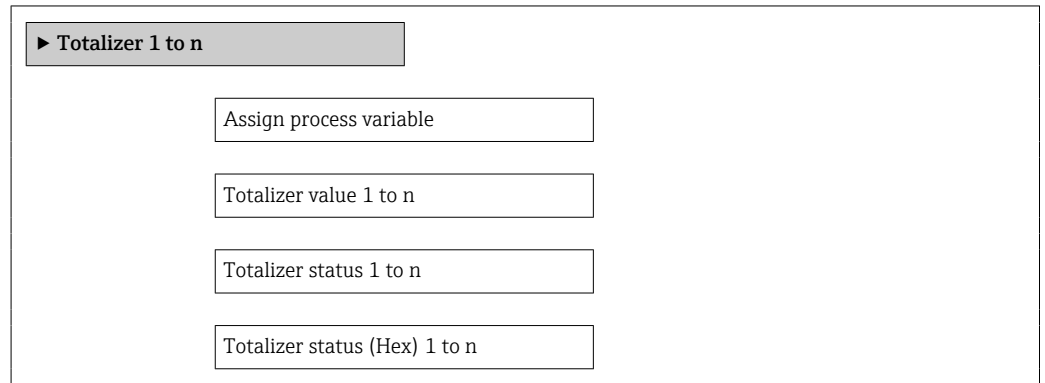

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface
Assign process variable	–	Select process variable for totalizer.	<ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Total mass flow ■ Condensate mass flow ■ Energy flow ■ Heat flow difference
Totalizer value 1 to n	In the Assign process variable parameter one of the following options is selected: <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Total mass flow ■ Condensate mass flow ■ Energy flow ■ Heat flow difference 	Displays the current totalizer counter value.	Signed floating-point number
Totalizer status 1 to n	–	Displays the current totalizer status.	<ul style="list-style-type: none"> ■ Good ■ Uncertain ■ Bad
Totalizer status (Hex) 1 to n	In Target mode parameter, the Auto option is selected.	Displays the current status value (hex) of the totalizer.	0 to 0xFF

11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu → 55
- Advanced settings using the **Advanced setup** submenu → 63

11.6 Performing a totalizer reset

The totalizers are reset in the **Operation** submenu:

- Control Totalizer
- Reset all totalizers

Function scope of the "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.
Preset + totalize	The totalizer is set to the defined start value from the Preset value parameter and the totaling process is restarted.
Hold	Totalizing is stopped.

Function scope of the "Reset all totalizers" parameter

Options	Description
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized.

Navigation

"Operation" menu → Totalizer handling


► Totalizer handling

Control Totalizer 1 to n

Preset value 1 to n

Reset all totalizers

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Control Totalizer 1 to n	One of the following options is selected in the Assign process variable parameter of the Totalizer 1 to n submenu: <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * 	Control totalizer value.	<ul style="list-style-type: none"> ■ Totalize ■ Reset + hold ■ Preset + hold ■ Reset + totalize ■ Preset + totalize ■ Hold 	–
Preset value 1 to n	One of the following options is selected in the Assign process variable parameter of the Totalizer 1 to n submenu: <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * 	Specify start value for totalizer. <i>Dependency</i>  The unit of the selected process variable is specified for the totalizer in the Unit totalizer parameter.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 kg ■ 0 lb
Reset all totalizers	–	Reset all totalizers to 0 and start.	<ul style="list-style-type: none"> ■ Cancel ■ Reset + totalize 	–

* Visibility depends on order options or device settings

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For local display

Problem	Possible causes	Remedy
Local display dark and no output signals	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage → 31.
Local display dark and no output signals	The polarity of the supply voltage is wrong.	Correct the polarity.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective.	Order spare part → 116.
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	<ul style="list-style-type: none"> Set the display brighter by simultaneously pressing + . Set the display darker by simultaneously pressing + .
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part → 116.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures → 88
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	<ul style="list-style-type: none"> Check the cable and the connector between the main electronics module and display module. Order spare part → 116.

For output signals

Problem	Possible causes	Remedy
Green power LED on the main electronics module of the transmitter is dark	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage → 31.
Device measures incorrectly.	Configuration error or device is operated outside the application.	<ol style="list-style-type: none"> Check and correct parameter configuration. Observe limit values specified in the "Technical Data".

For access

Problem	Possible causes	Remedy
No write access to parameters	Hardware write protection enabled	Set the write protection switch on the main electronics module to the OFF position .
No connection via PROFINET	PROFINET bus cable connected incorrectly	Check the terminal assignment .
No connection via PROFINET	Device plug connected incorrectly	Check the pin assignment of the device plug .

Problem	Possible causes	Remedy
Not connecting to Web server	Incorrect setting for the Ethernet interface of the computer	1. Check the properties of the Internet protocol (TCP/IP) → 39. 2. Check the network settings with the IT manager.
Not connecting to Web server	Web server disabled	Via the "FieldCare" operating tool check whether the Web server of the measuring device is enabled and enable it if necessary → 42.
No or incomplete display of contents in the Web browser	<ul style="list-style-type: none"> JavaScript not enabled JavaScript cannot be enabled 	1. Enable JavaScript. 2. Enter http://XXX.XXX.X.XXX/basic.html as the IP address.
Web browser frozen and operation no longer possible	Data transfer active	Wait until data transfer or current action is finished.
Web browser frozen and operation no longer possible	Connection lost	1. Check cable connection and power supply. 2. Refresh the Web browser and restart if necessary.
Content of Web browser incomplete or difficult to read	Not using optimum version of Web server.	1. Use the correct Web browser version → 39. 2. Clear the Web browser cache and restart the Web browser.
Content of Web browser incomplete or difficult to read	Unsuitable view settings.	Change the font size/display ratio of the Web browser.


For system integration

Problem	Possible causes	Remedy
The device name is not displayed correctly and contains coding.	A device name containing one or more underscores has been specified via the automation system.	Specify a correct device name (without underscores) via the automation system.

12.2 Diagnostic information via light emitting diodes

12.2.1 Transmitter

Various light emitting diodes (LEDs) on the main electronics module of the transmitter provide information on device status.

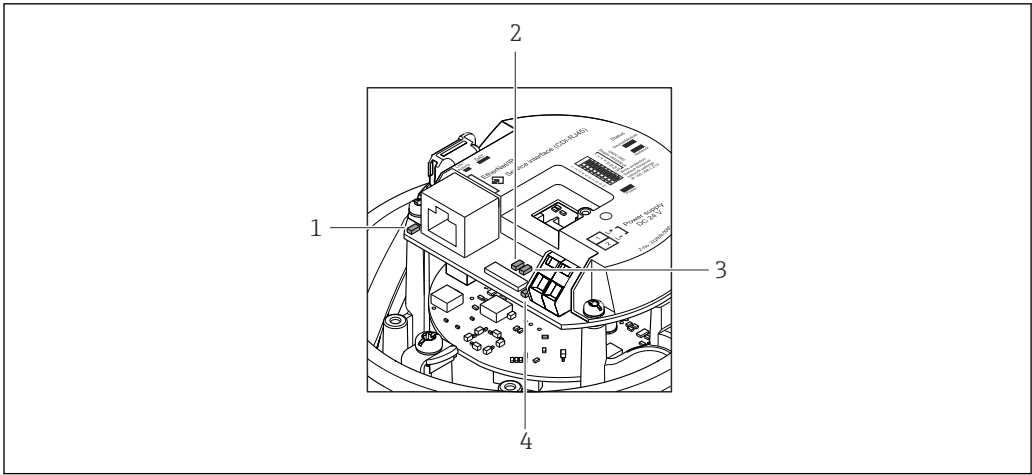

A0027678


- 1 Link/Activity
- 2 Network status
- 3 Device status
- 4 Supply voltage

LED	Color	Meaning
Supply voltage	Off	Supply voltage is off or too low
	Green	Supply voltage is ok
Device status	Green	Device status is ok
	Flashing red	A device error of diagnostic behavior "Warning" has occurred
	Red	A device error of diagnostic behavior "Alarm" has occurred
Network status	Green	Device performing cyclic data exchange
	Flashing green	Following request from automation system: Flash frequency: 1 Hz (flash functionality: 500 ms on, 500 ms off) The device does not have an IP address, no cyclic data exchange Flash frequency: 3 Hz
	Red	IP address is available but no connection to the automation system
	Flashing red	Cyclic connection was established but connection was dropped Flash frequency: 3 Hz
Link/Activity	Orange	Link available but no activity
	Flashing orange	Activity present

12.3 Diagnostic information in the Web browser

12.3.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

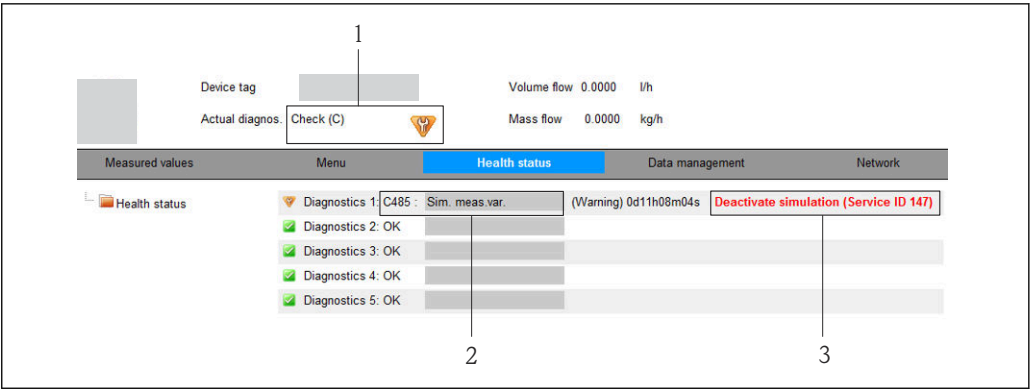

A0017759-EN

- 1 Status area with status signal
- 2 Diagnostic information → 83
- 3 Remedy information with Service ID

i Furthermore, diagnostic events that have occurred can be viewed in the **Diagnostics** menu:

- Via parameters → 109
- Via submenus → 109

Status signals


The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
 A0017271	Failure A device error has occurred. The measured value is no longer valid.
 A0017278	Function check The device is in service mode (e.g. during a simulation).
 A0017277	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
 A0017276	Maintenance required Maintenance is required. The measured value is still valid.

i The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault.

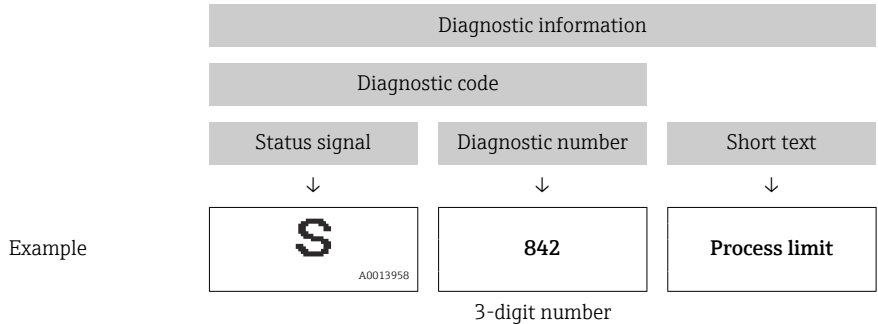


12.3.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

12.4 Diagnostic information in FieldCare

12.4.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

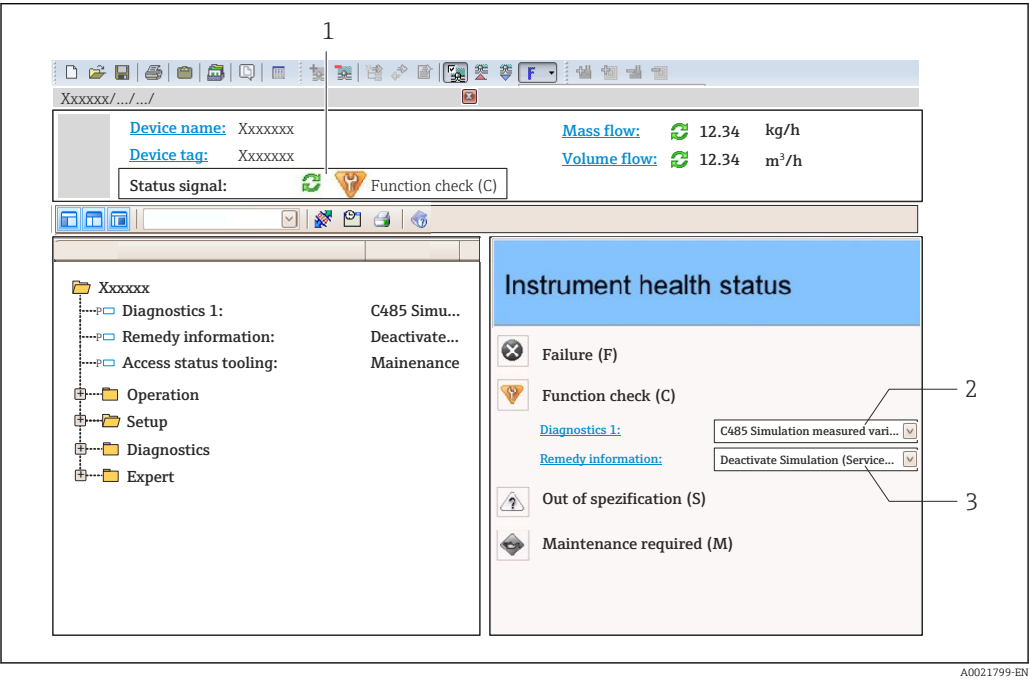



- 1 Status area with status signal
- 2 Diagnostic information → 83
- 3 Remedy information with Service ID



i Furthermore, diagnostic events that have occurred can be viewed in the **Diagnostics** menu:

- Via parameter → 109
- Via submenu → 109

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).


Symbol	Meaning
 <small>A0017271</small>	Failure A device error has occurred. The measured value is no longer valid.
 <small>A0017278</small>	Function check The device is in service mode (e.g. during a simulation).

Symbol	Meaning
 A0017277	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
 A0017276	Maintenance required Maintenance is required. The measured value is still valid.

 The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault.

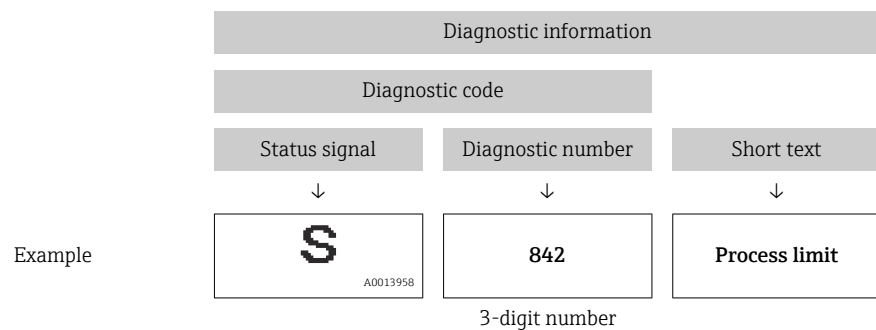

12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu
Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

1. Call up the desired parameter.
2. On the right in the working area, mouse over the parameter.
↳ A tool tip with remedy information for the diagnostic event appears.

12.5 Adapting the diagnostic information

12.5.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for certain diagnostic information in the **Diagnostic behavior** submenu.

 Diagnostic behavior in accordance with Specification PROFIBUS PA Profile 3.02, Condensed Status.

Expert → System → Diagnostic handling → Diagnostic behavior


Available diagnostic behaviors

The following diagnostic behaviors can be assigned:

Diagnostic behavior	Description
Alarm	Measurement is interrupted. The totalizers assume the defined alarm condition. A diagnostic message is generated.
Warning	Measurement is resumed. Measured value output via PROFIBUS and totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is entered in the Event logbook (events list) submenu only and is not displayed in alternation with the measured value display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

Displaying the measured value status

If modules with input data (e.g. Analog Input module, Discrete Input module, Totalizer module, Heartbeat module) are configured for cyclic data transmission, the measured value status is coded as per PROFIBUS PA Profile 3.02 Specification and transmitted along with the measured value to the PROFINET Controller via the status byte. The status byte is split into three segments: Quality, Quality Substatus and Limits.

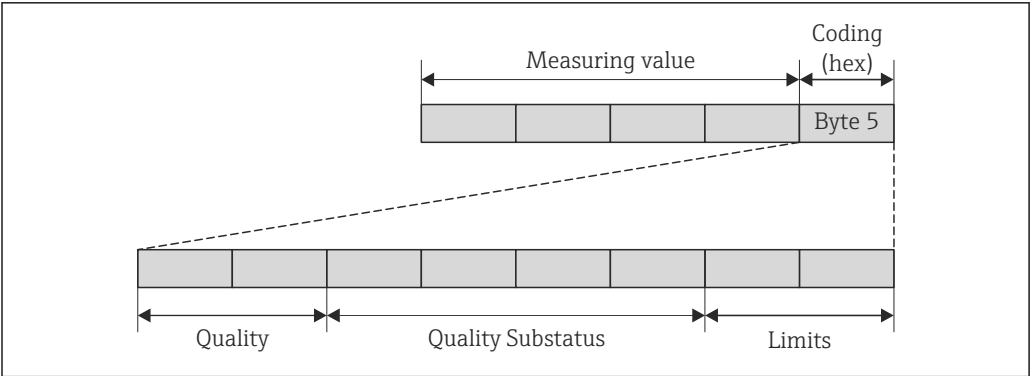

14 Structure of the status byte

The content of the status byte depends on the configured failsafe mode in the particular function block. Depending on which failsafe mode has been configured, status information in accordance with PROFIBUS PA Profile Specification 3.02 is transmitted to the the PROFINET controller via the status byte. The two bits for the limits always have the value 0.

Supported status information

Status	Coding (hex)
BAD - Maintenance alarm	0x24
BAD - Process related	0x28
BAD - Function check	0x3C
UNCERTAIN - Initial value	0x4F
UNCERTAIN - Maintenance demanded	0x68
UNCERTAIN - Process related	0x78
GOOD - OK	0x80
GOOD - Maintenance demanded	0xA8
GOOD - Function check	0xBC

Determining the measured value status and device status via the diagnostic behavior

When the diagnostic behavior is assigned, this also changes the measured value status and device status for the diagnostic information. The measured value status and device status depend on the choice of diagnostic behavior and the group in which the diagnostic information is located. The measured value status and device status are firmly assigned to the particular diagnostic behavior and cannot be changed individually.

The diagnostic information is grouped as follows:

- Diagnostic information pertaining to the sensor: diagnostic number 000 to 199
→ 87
- Diagnostic information pertaining to the electronics: diagnostic number 200 to 399
→ 87
- Diagnostic information pertaining to the configuration: diagnostic number 400 to 599
→ 87
- Diagnostic information pertaining to the process: diagnostic number 800 to 999
→ 88

Depending on the group in which diagnostic information is located, the following measured value status and device status are firmly assigned to the particular diagnostic behavior:

Diagnostic information pertaining to the sensor (diagnostic no.: 000 to 199)

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Maintenance alarm	0x24	F (Failure)	Maintenance alarm
Warning	GOOD	Maintenance demanded	0xA8	M (Maintenance)	Maintenance demanded
Logbook entry only	GOOD	ok	0x80	–	–
Off					

Diagnostic information pertaining to the electronics (diagnostic no.: 200 to 399)

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Maintenance alarm	0x24	F (Failure)	Maintenance alarm
Warning					
Logbook entry only	GOOD	ok	0x80	–	–
Off					

Diagnostic information pertaining to the configuration (diagnostic no.: 400 to 599)


Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Process related	0x28	F (Failure)	Invalid process condition
Warning	UNCERTAIN	Process related	0x78	S (Out of specification)	Invalid process condition



Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Logbook entry only	GOOD	ok	0x80	–	–
Off					

Diagnostic information pertaining to the process (diagnostic no.: 800 to 999)

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Process related	0x28	F (Failure)	Invalid process condition
Warning	UNCERTAIN	Process related	0x78	S (Out of specification)	Invalid process condition
Logbook entry only	GOOD	ok	0x80	–	–
Off					

12.6 Overview of diagnostic information

 The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.

 In the case of some items of diagnostic information, the diagnostic behavior can be changed. Change the diagnostic information →  85

12.6.1 Diagnostic of sensor

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
022	Sensor temperature	1. Change main electronic module 2. Change sensor	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
046	Sensor limit exceeded	1. Inspect sensor 2. Check process condition	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
062	Sensor connection	1. Change main electronic module 2. Change sensor	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
082	Data storage	1. Check module connections 2. Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
083	Memory content	1. Restart device 2. Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		
	Bad		
	Maintenance alarm		
	0x24 to 0x27		
	F		
	Alarm		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
140	Sensor signal	1. Check or change main electronics 2. Change sensor	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		
	Good		
	Ok		
	0x80 to 0x83		
	S		
	Alarm		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
144	Measuring error too high	1. Check or change sensor 2. Check process conditions	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		
	Good		
	Ok		
	0x80 to 0x83		
	F		
	Alarm		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
190	Special event 1	Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
191	Special event 5	Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
192	Special event 9	Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.6.2 Diagnostic of electronic

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
201	Device failure		1. Restart device 2. Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
242	Software incompatible		1. Check software 2. Flash or change main electronics module	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
252	Modules incompatible		1. Check electronic modules 2. Change electronic modules	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	F		
	Diagnostic behavior	Alarm		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
262	Module connection	1. Check module connections 2. Change main electronics	<ul style="list-style-type: none"> ■ Carrier mass flow ■ Concentration ■ Density ■ Dynamic viscosity ■ Kinematic viscosity ■ Mass flow ■ Sensor integrity ■ Reference density ■ Corrected volume flow ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
270	Main electronic failure	Change main electronic module	<ul style="list-style-type: none"> ■ Carrier mass flow ■ Concentration ■ Density ■ Dynamic viscosity ■ Kinematic viscosity ■ Mass flow ■ Sensor integrity ■ Reference density ■ Corrected volume flow ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
271	Main electronic failure	1. Restart device 2. Change main electronic module	<ul style="list-style-type: none"> ■ Carrier mass flow ■ Concentration ■ Density ■ Dynamic viscosity ■ Kinematic viscosity ■ Mass flow ■ Sensor integrity ■ Reference density ■ Corrected volume flow ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
272	Main electronic failure	1. Restart device 2. Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
273	Main electronic failure	Change electronic	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
274	Main electronic failure	Change electronic	<ul style="list-style-type: none"> Mass flow Sensor integrity Corrected volume flow Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
283	Memory content		1. Reset device 2. Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
311	Electronic failure		1. Reset device 2. Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
311	Electronic failure		1. Do not reset device 2. Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	M		
	Diagnostic behavior	Warning		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
382	Data storage	1. Insert DAT module 2. Change DAT module	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
383	Memory content	1. Restart device 2. Check or change DAT module 3. Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
390	Special event 2	Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
391	Special event 6		Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
392	Special event 10		Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	F		
	Diagnostic behavior	Alarm		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.6.3 Diagnostic of configuration

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
410	Data transfer		1. Check connection 2. Retry data transfer	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
412	Processing download	Download active, please wait	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
437	Configuration incompatible	1. Restart device 2. Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
438	Dataset	1. Check data set file 2. Check device configuration 3. Up- and download new configuration	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
453	Flow override		Deactivate flow override	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Good		
	Quality substatus	Function check		
	Coding (hex)	0xBC to 0xBF		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
484	Simulation Failure Mode		Deactivate simulation	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Function check		
	Coding (hex)	0x3C to 0x3F		
	Status signal	C		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
485	Simulation measured variable		Deactivate simulation	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Good		
	Quality substatus	Function check		
	Coding (hex)	0xBC to 0xBF		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
495	Diagnostic event simulation		Deactivate simulation	–
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
537	Configuration		1. Check IP addresses in network 2. Change IP address	–
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	F		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
590	Special event 3		Contact service	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Status▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
591	Special event 7	Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
592	Special event 11	Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.6.4 Diagnostic of process

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
825	Operating temperature	1. Check ambient temperature 2. Check process temperature	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
825	Operating temperature	1. Check ambient temperature 2. Check process temperature	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
825	Operating temperature	1. Check ambient temperature 2. Check process temperature	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
830	Sensor temperature too high	Reduce ambient temp. around the sensor housing	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
831	Sensor temperature too low		Increase ambient temp. around the sensor housing	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Uncertain		
	Quality substatus	Process related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
832	Electronic temperature too high		Reduce ambient temperature	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temperature▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
833	Electronic temperature too low		Increase ambient temperature	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
834	Process temperature too high	Reduce process temperature	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
835	Process temperature too low	Increase process temperature	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
842	Process limit	Low flow cut off active! 1. Check low flow cut off configuration	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
843	Process limit		Check process conditions	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
862	Partly filled pipe		1. Check for gas in process 2. Adjust detection limits	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Uncertain		
	Quality substatus	Process related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
882	Input signal		1. Check input configuration 2. Check external device or process conditions	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
910	Tubes not oscillating		1. Check electronic 2. Inspect sensor	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
912	Medium inhomogeneous		1. Check process cond. 2. Increase system pressure	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
912	Inhomogeneous		1. Check process cond. 2. Increase system pressure	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
913	Medium unsuitable		1. Check process conditions 2. Check electronic modules or sensor	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
944	Monitoring failed		Check process conditions for Heartbeat Monitoring	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temperature
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
948	Tube damping too high		Check process conditions	<ul style="list-style-type: none">▪ Carrier mass flow▪ Concentration▪ Density▪ Dynamic viscosity▪ Kinematic viscosity▪ Mass flow▪ Sensor integrity▪ Reference density▪ Corrected volume flow▪ Target mass flow▪ Temp. compensated dynamic viscosity▪ Temp. compensated kinematic viscosity▪ Temperature▪ Status▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
990	Special event 4	Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		


Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
991	Special event 8	Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		



Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
992	Special event 12	Contact service	<ul style="list-style-type: none"> Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		



1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.7 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

 To call up the measures to rectify a diagnostic event:


- Via Web browser →  84
- Via "FieldCare" operating tool →  85

 Other pending diagnostic events can be displayed in the **Diagnostic list** submenu
→  109


Navigation

"Diagnostics" menu

Structure of the submenu

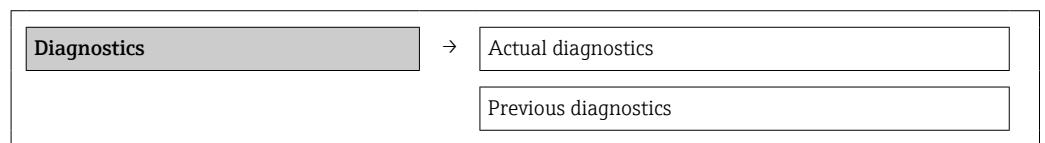

Parameter overview with brief description


Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occurred diagnostic event along with its diagnostic information.  If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	Symbol for diagnostic behavior, diagnostic code and short message.
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.



12.8 Diagnostic list

In the **Diagnostic list** submenu, up to 5 currently pending diagnostic events can be displayed along with the related diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path

Diagnostics menu → **Diagnostic list** submenu

 To call up the measures to rectify a diagnostic event:

- Via Web browser →  84
- Via "FieldCare" operating tool →  85


12.9 Event logbook

12.9.1 Event history



A chronological overview of the event messages that have occurred is provided in the events list which contains a maximum of 20 message entries. This list can be displayed via FieldCare if necessary.

Navigation path




Edit toolbar: **F** → Additional functions → Events list

 For information on the Edit toolbar, see the FieldCare user interface

This event history includes entries for:

- Diagnostic events →  88
- Information events →  110


In addition to the operation time of its occurrence and possible troubleshooting measures, each event is also assigned a symbol that indicates whether the event has occurred or is ended:



- Diagnostic event
 - : Event has occurred
 - : Event has ended
- Information event
 - : Event has occurred

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

Navigation path

"Diagnostics" menu → Event logbook → Events list

 To call up the measures to rectify a diagnostic event:

- Via Web browser →  84
- Via "FieldCare" operating tool →  85

 For filtering the displayed event messages →  110

12.9.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Events list** submenu.

Navigation path

"Diagnostics" menu → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.9.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
I1000	----- (Device ok)
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1111	Density adjust failure
I1137	Electronic changed
I1151	History reset
I1155	Reset electronic temperature

Info number	Info name
I1157	Memory error event list
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1209	Density adjustment ok
I1221	Zero point adjust failure
I1222	Zero point adjustment ok
I1256	Display: access status changed
I1335	Firmware changed
I1361	Web server login failed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1444	Device verification passed
I1445	Device verification failed
I1446	Device verification active
I1447	Record application reference data
I1448	Application reference data recorded
I1449	Recording application ref. data failed
I1450	Monitoring off
I1451	Monitoring on
I1457	Measured error verification failed
I1459	I/O module verification failed
I1460	Sensor integrity verification failed
I1461	Sensor verification failed
I1462	Sensor electronic module verific. failed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished
I1627	Web server login successful
I1631	Web server access changed
I1649	Hardware write protection activated
I1650	Hardware write protection deactivated

12.10 Resetting the measuring device

Using the **Device reset** parameter it is possible to reset the entire device configuration or some of the configuration to a defined state.

Navigation

"Setup" menu → Advanced setup → Administration → Device reset

► Administration

Define access code

Device reset

Parameter overview with brief description

Parameter	Description	Selection
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	<ul style="list-style-type: none">■ Cancel■ To delivery settings■ Restart device■ Delete factory data

12.10.1 Function scope of the "Device reset" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.
History reset	Every parameter is reset to the factory setting.

12.11 Device information

The **Device information** submenu contains all the parameters that display different information for identifying the device.

Navigation

"Diagnostics" menu → Device information

► Device information

Device tag

Serial number






Firmware version

Device name

Order code

Extended order code 1
Extended order code 2
Extended order code 3
ENP version

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Device tag	Display the name for the measuring point.	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)	–
Serial number	Shows the serial number of the measuring device.	A maximum of 11-digit character string comprising letters and numbers.	–
Firmware version	Shows the device firmware version installed.	Character string in the format xx.yy	–
Device name	Shows the name of the transmitter.  The name can be found on the nameplate of the transmitter.	Promass 100	–
Order code	Shows the device order code.  The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks (e.g. /).	–
Extended order code 1	Shows the 1st part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
Extended order code 2	Shows the 2nd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
Extended order code 3	Shows the 3rd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
ENP version	Shows the version of the electronic nameplate (ENP).	Character string	–

12.12 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
12.2015	01.00.zz	Option 68	Original firmware	Operating Instructions	BA01429D/06/EN/01.15



Flashing the firmware to the current version is possible via the service interface (CDI).



For the compatibility of the firmware version with the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.



The manufacturer's information is available:

- In the Downloads area of the Endress+Hauser web site: www.endress.com → Downloads
- Specify the following details:
 - Product root: e.g. 8E1B
 - Text search: Manufacturer's information
 - Media type: Documentation – Technical Documentation

13 Maintenance

13.1 Maintenance tasks


No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

13.1.2 Interior cleaning

Observe the following points for CIP and SIP cleaning:


- Use only cleaning agents to which the process-wetted materials are adequately resistant.
- Observe the maximum permitted medium temperature for the measuring device
→  133.


Observe the following point for cleaning with pigs:

Observe the inside diameter of the measuring tube and process connection.

13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

 For a list of some of the measuring and test equipment, refer to the "Accessories" chapter of the "Technical Information" document for the device.

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repair

14.1 General notes

Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by correspondingly trained customers.
- Certified devices can be converted into other certified devices by Endress+Hauser Service or at the factory only.

Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- Use only original Endress+Hauser spare parts.
- Carry out the repair according to the Installation Instructions.
- Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- Document every repair and each conversion and enter them into the *W@M* life cycle management database.

14.2 Spare parts

W@M Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.



Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the **Serial number** parameter in the **Device information** submenu .

14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.



Your Endress+Hauser Sales Center can provide detailed information on the services.

14.4 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <http://www.endress.com/support/return-material>

14.5 Disposal

14.5.1 Removing the measuring device

1. Switch off the device.

2.  **WARNING**

Danger to persons from process conditions.

- Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.

Carry out the mounting and connection steps from the chapters "Mounting the measuring device" and "Connecting the measuring device" in the logically reverse sequence. Observe the safety instructions.

14.5.2 Disposing of the measuring device

 **WARNING**

Danger to personnel and environment from fluids that are hazardous to health.

- Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:


- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.

15 Accessories



Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Device-specific accessories



15.1.1 For the sensor

Accessories	Description
Heating jacket	<p>Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids. If using oil as a heating medium, please consult with Endress+Hauser.</p> <p> For details, see Operating Instructions BA00099D</p>

15.2 Service-specific accessories

Accessories	Description
Applicator	<p>Software for selecting and sizing Endress+Hauser measuring devices:</p> <ul style="list-style-type: none"> ■ Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, accuracy or process connections. ■ Graphic illustration of the calculation results <p>Administration, documentation and access to all project-related data and parameters throughout the entire life cycle of a project.</p> <p>Applicator is available:</p> <ul style="list-style-type: none"> ■ Via the Internet: https://wapps.endress.com/applicator ■ On CD-ROM for local PC installation.
W@M	<p>Life cycle management for your plant W@M supports you with a wide range of software applications over the entire process: from planning and procurement, to the installation, commissioning and operation of the measuring devices. All the relevant device information, such as the device status, spare parts and device-specific documentation, is available for every device over the entire life cycle. The application already contains the data of your Endress+Hauser device. Endress+Hauser also takes care of maintaining and updating the data records.</p> <p>W@M is available:</p> <ul style="list-style-type: none"> ■ Via the Internet: www.endress.com/lifecyclemanagement ■ On CD-ROM for local PC installation.
FieldCare	<p>FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.</p> <p> For details, see Operating Instructions BA00027S and BA00059S</p>
DeviceCare	<p>Tool for connecting and configuring Endress+Hauser field devices.</p> <p> For details, see Innovation brochure IN01047S</p>

15.3 System components

Accessories	Description
Memograph M graphic display recorder	<p>The Memograph M graphic display recorder provides information on all relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.</p> <p> For details, see "Technical Information" TI00133R and Operating Instructions BA00247R</p>
iTEMP	<p>The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the fluid temperature.</p> <p> For details, see "Fields of Activity", FA00006T</p>

16 Technical data


16.1 Application

The measuring device is suitable for flow measurement of liquids and gases only.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are adequately resistant.

16.2 Function and system design

Measuring principle	Mass flow measurement based on the Coriolis measuring principle
Measuring system	<p>The device consists of a transmitter and a sensor.</p> <p>The device is available as a compact version: The transmitter and sensor form a mechanical unit.</p> <p>For information on the structure of the device →  12</p>

16.3 Input

Measured variable

Direct measured variables

- Mass flow
- Density
- Temperature
- Viscosity

Calculated measured variables

- Volume flow
- Corrected volume flow
- Reference density

Measuring range

Measuring ranges for liquids

DN		Measuring range full scale values $\dot{m}_{\min(F)}$ to $\dot{m}_{\max(F)}$	
[mm]	[in]	[kg/h]	[lb/min]
8	$\frac{3}{8}$	0 to 2 000	0 to 73.50
15	$\frac{1}{2}$	0 to 6 500	0 to 238.9
15 FB	$\frac{1}{2}$ FB	0 to 18 000	0 to 661.5
25	1	0 to 18 000	0 to 661.5
25 FB	1 FB	0 to 45 000	0 to 1 654
40	$1\frac{1}{2}$	0 to 45 000	0 to 1 654
40 FB	$1\frac{1}{2}$ FB	0 to 70 000	0 to 2 573
50	2	0 to 70 000	0 to 2 573
50 FB	2 FB	0 to 180 000	0 to 6 615
80	3	0 to 180 000	0 to 6 615
FB = Full bore			

Measuring ranges for gases

The full scale values depend on the density of the gas and can be calculated with the formula below:

$$\dot{m}_{\max(G)} = \dot{m}_{\max(F)} \cdot \rho_G : x$$

$\dot{m}_{\max(G)}$	Maximum full scale value for gas [kg/h]
$\dot{m}_{\max(F)}$	Maximum full scale value for liquid [kg/h]
$\dot{m}_{\max(G)} < \dot{m}_{\max(F)}$	$\dot{m}_{\max(G)}$ can never be greater than $\dot{m}_{\max(F)}$
ρ_G	Gas density in [kg/m ³] at operating conditions

DN		x
[mm]	[in]	[kg/m ³]
8	$\frac{3}{8}$	60
15	$\frac{1}{2}$	80
15 FB	$\frac{1}{2}$ FB	90
25	1	90

[mm]	DN	x [kg/m ³]
	[in]	
25 FB	1 FB	90
40	1½	90
40 FB	1½ FB	90
50	2	90
50 FB	2 FB	110
80	3	110
FB = Full bore		

Calculation example for gas

- Sensor: Promass I, DN 50
- Gas: Air with a density of 60.3 kg/m³ (at 20 °C and 50 bar)
- Measuring range (liquid): 70 000 kg/h
- x = 90 kg/m³ (for Promass I, DN 50)

Maximum possible full scale value:

$$\dot{m}_{\max(G)} = \dot{m}_{\max(F)} \cdot \rho_G : x = 70\,000 \text{ kg/h} \cdot 60.3 \text{ kg/m}^3 : 90 \text{ kg/m}^3 = 46\,900 \text{ kg/h}$$

Recommended measuring range

"Flow limit" section →  135

Operable flow range



Over 1000 : 1.

Flow rates above the preset full scale value are not overridden by the electronics unit, with the result that the totalizer values are registered correctly.

Input signal**External measured values**

To increase the accuracy of certain measured variables or to calculate the corrected volume flow for gases, the automation system can continuously write different measured values to the measuring device:

- Operating pressure to increase accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S)
- Medium temperature to increase accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow for gases

 Various pressure transmitters and temperature measuring devices can be ordered from Endress+Hauser: see "Accessories" section →  119

It is recommended to read in external measured values to calculate the following measured variables:

- Mass flow
- Corrected volume flow

Digital communication

The measured values are written from the automation system to the measuring device via PROFINET.

16.4 Output

Output signal

PROFINET

Standards	In accordance with IEEE 802.3
------------------	-------------------------------

Signal on alarm

Depending on the interface, failure information is displayed as follows:

PROFINET

Device diagnostics	In accordance with "Application Layer protocol for decentral device periphery and distributed automation", version 2.3
---------------------------	--

Local display

Plain text display	With information on cause and remedial measures
Backlight	Red backlighting indicates a device error.



Status signal as per NAMUR recommendation NE 107

Operating tool

- Via digital communication:
PROFINET
- Via service interface
- Via Web server

Plain text display	With information on cause and remedial measures
---------------------------	---

Web browser

Plain text display	With information on cause and remedial measures
---------------------------	---

Light emitting diodes (LED)

Status information	<p>Status indicated by various light emitting diodes</p> <p>The following information is displayed depending on the device version:</p> <ul style="list-style-type: none"> ■ Supply voltage active ■ Data transmission active ■ Device alarm/error has occurred ■ PROFINET network available ■ PROFINET connection established ■ PROFINET blinking feature <p> Diagnostic information via light emitting diodes → 81</p>
---------------------------	---

Low flow cut off

The switch points for low flow cut off are user-selectable.

Galvanic isolation



The following connections are galvanically isolated from each other:

- Outputs
- Power supply

Protocol-specific data

PROFINET

Protocol	"Application layer protocol for decentral device periphery and distributed automation", version 2.3
Conformity class	B
Communication type	100 MBit/s
Device profile	Application interface identifier 0xF600 Generic device
Manufacturer ID	0x11
Device type ID	0x844A
Device description files (GSD, DTM)	Information and files under: <ul style="list-style-type: none"> ▪ www.endress.com On the product page for the device: Documents/Software → Device drivers ▪ www.profibus.org
Baud rates	Automatic 100 Mbit/s with full-duplex detection
Cycle times	From 8 ms
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs
Supported connections	<ul style="list-style-type: none"> ▪ 1 x AR (Application Relation) ▪ 1 x Input CR (Communication Relation) ▪ 1 x Output CR (Communication Relation) ▪ 1 x Alarm CR (Communication Relation)
Configuration options for measuring device	<ul style="list-style-type: none"> ▪ DIP switches on the electronics module, for device name assignment (last part) ▪ Manufacturer-specific software (FieldCare, DeviceCare) ▪ Web browser ▪ Device master file (GSD), can be read out via the integrated Web server of the measuring device
Configuration of the device name	<ul style="list-style-type: none"> ▪ DIP switches on the electronics module, for device name assignment (last part) ▪ DCP protocol

Output values (from measuring device to automation system)	Analog Input module (slot 1 to 14) <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow ■ Carrier mass flow ■ Density ■ Reference density ■ Concentration ■ Dynamic viscosity ■ Kinematic viscosity ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Carrier pipe temperature ■ Electronic temperature ■ Oscillation frequency ■ Oscillation amplitude ■ Frequency fluctuation ■ Oscillation damping ■ Tube damping fluctuation ■ Signal asymmetry ■ Exciter current Discrete Input module (slot 1 to 14) <ul style="list-style-type: none"> ■ Empty pipe detection ■ Low flow cut off Diagnostics Input module (slot 1 to 14) <ul style="list-style-type: none"> ■ Last diagnostics ■ Current diagnosis Totalizer 1 to 3 (slot 15 to 17) <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow Heartbeat Verification module (fixed assignment) Verification status (slot 23) <div>  The range of options increases if the measuring device has one or more application packages. </div>
Input values (from automation system to measuring device)	Analog Output module (fixed assignment) <ul style="list-style-type: none"> ■ External pressure (slot 18) ■ External temperature (slot 19) ■ External reference density (slot 20) Discrete Output module (fixed assignment) <ul style="list-style-type: none"> ■ Activate/deactivate positive zero return (slot 21) ■ Perform zero point adjustment (slot 22) Totalizer 1 to 3 (slot 15 to 17) <ul style="list-style-type: none"> ■ Totalize ■ Reset and hold ■ Preset and hold ■ Stop ■ Operating mode configuration: <ul style="list-style-type: none"> ■ Net flow total ■ Forward flow total ■ Reverse flow total Heartbeat Verification module (fixed assignment) Start verification (slot 23) <div>  The range of options increases if the measuring device has one or more application packages. </div>
Supported functions	<ul style="list-style-type: none"> ■ Identification & Maintenance Simple device identification via: <ul style="list-style-type: none"> ■ Control system ■ Nameplate ■ Measured value status The process variables are communicated with a measured value status ■ Blinking feature via the onsite display for simple device identification and assignment

Administration of software options

Input/output value	Process variable	Category	Slot
Output value	Mass flow	Process variable	1...14
	Volume flow		
	Corrected volume flow		
	Density		
	Reference density		
	Temperature		
	Electronic temperature		
	Oscillation frequency		
	Frequency fluctuation		
	Oscillation damping		
	Oscillation frequency		
	Signal asymmetry		
	Exciter current		
	Empty pipe detection		
	Low flow cut off		
	Current device diagnostics		
	Previous device diagnostics		
Output value	Target mass flow	Concentration ¹⁾	1...14
	Carrier mass flow		
	Concentration		
Output value	Dynamic viscosity	Viscosity ²⁾	1...14
	Kinematic viscosity		
	Temp. compensated dynamic viscosity		
	Temp. compensated kinematic viscosity		
Output value	Carrier pipe temperature	Heartbeat ³⁾	1...14
	Oscillation damping 1		
	Oscillation frequency 1		
	Oscillation amplitude 0		
	Oscillation amplitude 1		
	Frequency fluctuation 1		
	Tube damping fluctuation 1		
	Exciter current 1		
	Sensor integrity		
Input value	External density	Process monitoring	18
	External temperature		19
	External reference density		20
	Flow override		21





Input/output value	Process variable	Category	Slot
	Zero point adjustment		22
	Verification status	Heartbeat Verification	23

- 1) Only available with the "Concentration" application package.
- 2) Only available with the "Viscosity" application package.
- 3) Only available with the "Heartbeat" application package.




Startup configuration

Startup configuration (NSU)	<p>If startup configuration is enabled, the configuration of the most important device parameters is taken from the automation system and used.</p> <p>The following configuration is taken from the automation system:</p> <ul style="list-style-type: none"> ■ Management <ul style="list-style-type: none"> ■ Software revision ■ Write protection ■ System units <ul style="list-style-type: none"> ■ Mass flow ■ Mass ■ Volume flow ■ Volume ■ Corrected volume flow ■ Corrected volume ■ Density ■ Reference density ■ Temperature ■ Pressure ■ Viscosity application package <ul style="list-style-type: none"> ■ Dynamic viscosity ■ Kinematic viscosity ■ Concentration application package <ul style="list-style-type: none"> ■ Coefficients A0 to A4 ■ Coefficients B1 to B3 ■ Sensor adjustment ■ Process param. <ul style="list-style-type: none"> ■ Damping (flow, density, temperature) ■ Flow override ■ Low flow cut off <ul style="list-style-type: none"> ■ Assign process variable ■ Switch-on/switch-off point ■ Pressure shock suppression ■ Empty pipe detection <ul style="list-style-type: none"> ■ Assign process variable ■ Limit values ■ Response time ■ Max. damping ■ Corrected volume flow calculation <ul style="list-style-type: none"> ■ External reference density ■ Fixed reference density ■ Reference temperature ■ Linear expansion coefficient ■ Square expansion coefficient ■ Measuring mode <ul style="list-style-type: none"> ■ Medium ■ Gas type ■ Reference sound velocity ■ Temperature coefficient sound velocity ■ External compensation <ul style="list-style-type: none"> ■ Pressure compensation ■ Pressure value ■ External pressure ■ Diagnostic settings ■ Diagnostic behavior for diverse diagnostic information
-----------------------------	---

16.5 Power supply


Terminal assignment	→  29						
Supply voltage	The power unit must be tested to ensure it meets safety requirements (e.g. PELV, SELV).						
Power consumption	<div>Transmitter<table><tr><th>Order code for "Output"</th><th>Maximum Power consumption</th></tr><tr><td>Option R: PROFINET</td><td>3.5 W</td></tr></table></div>	Order code for "Output"	Maximum Power consumption	Option R: PROFINET	3.5 W		
Order code for "Output"	Maximum Power consumption						
Option R: PROFINET	3.5 W						
Current consumption	<div>Transmitter<table><tr><th>Order code for "Output"</th><th>Maximum Current consumption</th><th>Maximum switch-on current</th></tr><tr><td>Option R: PROFINET</td><td>145 mA</td><td>18 A (< 0.125 ms)</td></tr></table></div>	Order code for "Output"	Maximum Current consumption	Maximum switch-on current	Option R: PROFINET	145 mA	18 A (< 0.125 ms)
Order code for "Output"	Maximum Current consumption	Maximum switch-on current					
Option R: PROFINET	145 mA	18 A (< 0.125 ms)					
Power supply failure	<ul style="list-style-type: none">■ Totalizers stop at the last value measured.■ Configuration is retained in the plug-in memory (HistoROM DAT).■ Error messages (incl. total operated hours) are stored.						
Electrical connection	→  30						
Potential equalization	→  32						
Terminals	Transmitter Spring terminals for wire cross-sections0.5 to 2.5 mm ² (20 to 14 AWG)						
Cable entries	<ul style="list-style-type: none">■ Cable gland: M20 × 1.5 with cable Ø6 to 12 mm (0.24 to 0.47 in)■ Thread for cable entry:<ul style="list-style-type: none">■ NPT ½"■ G ½"■ M20						
Cable specification	→  28						

16.6 Performance characteristics

Reference operating conditions	<ul style="list-style-type: none">■ Error limits based on ISO 11631■ Water with +15 to +45 °C (+59 to +113 °F) at 2 to 6 bar (29 to 87 psi)■ Specifications as per calibration protocol■ Accuracy based on accredited calibration rigs that are traced to ISO 17025. <div> To obtain measured errors, use the <i>Applicator</i> sizing tool →  118→  143</div>
--------------------------------	--

Maximum measured error o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature

Base accuracy

 Design fundamentals →  132

Mass flow and volume flow (liquids)

$\pm 0.10 \%$ o.r.

Mass flow (gases)

$\pm 0.50 \%$ o.r.

Density (liquids)

Under reference operating conditions		Standard density calibration ¹⁾		Wide-range density specification ^{2) 3)}	
[g/cm ³]	[lbs/in ³]	[g/cm ³]	[lbs/in ³]	[g/cm ³]	[lbs/in ³]
± 0.0005	± 0.00097	± 0.02	± 0.039	± 0.004	± 0.0078

1) Valid over the entire temperature and density range

2) Valid range for special density calibration: 0 to 2 g/cm^3 , +5 to +80 °C (+41 to +176 °F)

3) Order code for "Application package", option EF "Special density and concentration" or EH "Special density and viscosity"

Temperature

$\pm 0.5 \text{ °C} \pm 0.005 \cdot T \text{ °C}$ ($\pm 0.9 \text{ °F} \pm 0.003 \cdot (T - 32) \text{ °F}$)

Zero point stability

DN		Zero point stability	
[mm]	[in]	[kg/h]	[lb/min]
8	$\frac{3}{8}$	0.150	0.0055
15	$\frac{1}{2}$	0.488	0.0179
15 FB	$\frac{1}{2}$ FB	1.350	0.0496
25	1	1.350	0.0496
25 FB	1 FB	3.375	0.124
40	$1\frac{1}{2}$	3.375	0.124
40 FB	$1\frac{1}{2}$ FB	5.25	0.193
50	2	5.25	0.193
50 FB	2 FB	13.5	0.496
80	3	13.5	0.496
FB = Full bore			

Flow values

Flow values as turndown parameter depending on nominal diameter.

SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
8	2 000	200	100	40	20	4
15	6 500	650	325	130	65	13
15 FB	18 000	1 800	900	360	180	36
25	18 000	1 800	900	360	180	36
25 FB	45 000	4 500	2 250	900	450	90
40	45 000	4 500	2 250	900	450	90
40 FB	70 000	7 000	3 500	1 400	700	140
50	70 000	7 000	3 500	1 400	700	140
50 FB	180 000	18 000	9 000	3 600	1 800	360
80	180 000	18 000	9 000	3 600	1 800	360
FB = Full bore						

US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
$\frac{3}{8}$	73.50	7.350	3.675	1.470	0.735	0.147
$\frac{1}{2}$	238.9	23.89	11.95	4.778	2.389	0.478
$\frac{1}{2}$ FB	661.5	66.15	33.08	13.23	6.615	1.323
1	661.5	66.15	33.08	13.23	6.615	1.323
1 FB	1 654	165.4	82.70	33.08	16.54	3.308
$1\frac{1}{2}$	1 654	165.4	82.70	33.08	16.54	3.308
$1\frac{1}{2}$ FB	2 573	257.3	128.7	51.46	25.73	5.146
2	2 573	257.3	128.7	51.46	25.73	5.146
2 FB	6 615	661.5	330.8	132.3	66.15	13.23
3	6 615	661.5	330.8	132.3	66.15	13.23
FB = Full bore						

Repeatability

o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature

Base repeatability

Mass flow and volume flow (liquids)

$\pm 0.05 \%$ o.r.

Mass flow (gases)

$\pm 0.25 \%$ o.r.

 Design fundamentals →  132

Density (liquids)

$\pm 0.00025 \text{ g/cm}^3$

Temperature

$\pm 0.25 \text{ }^\circ\text{C} \pm 0.0025 \cdot T \text{ }^\circ\text{C} (\pm 0.45 \text{ }^\circ\text{F} \pm 0.0015 \cdot (T-32) \text{ }^\circ\text{F})$

Response time The response time depends on the configuration (damping).

Influence of medium temperature

Mass flow and volume flow


When there is a difference between the temperature for zero point adjustment and the process temperature, the typical measured error of the sensor is $\pm 0.0002\%$ of the full scale value/ $^{\circ}\text{C}$ ($\pm 0.0001\%$ of the full scale value/ $^{\circ}\text{F}$).

Density

When there is a difference between the density calibration temperature and the process temperature, the typical measured error of the sensor is $\pm 0.0001\text{ g/cm}^3\text{ }^{\circ}\text{C}$ ($\pm 0.00005\text{ g/cm}^3\text{ }^{\circ}\text{F}$). Field density calibration is possible.

Wide-range density specification (special density calibration)

If the process temperature is outside the valid range (\rightarrow 129) the measured error is $\pm 0.0001\text{ g/cm}^3\text{ }^{\circ}\text{C}$ ($\pm 0.00005\text{ g/cm}^3\text{ }^{\circ}\text{F}$)

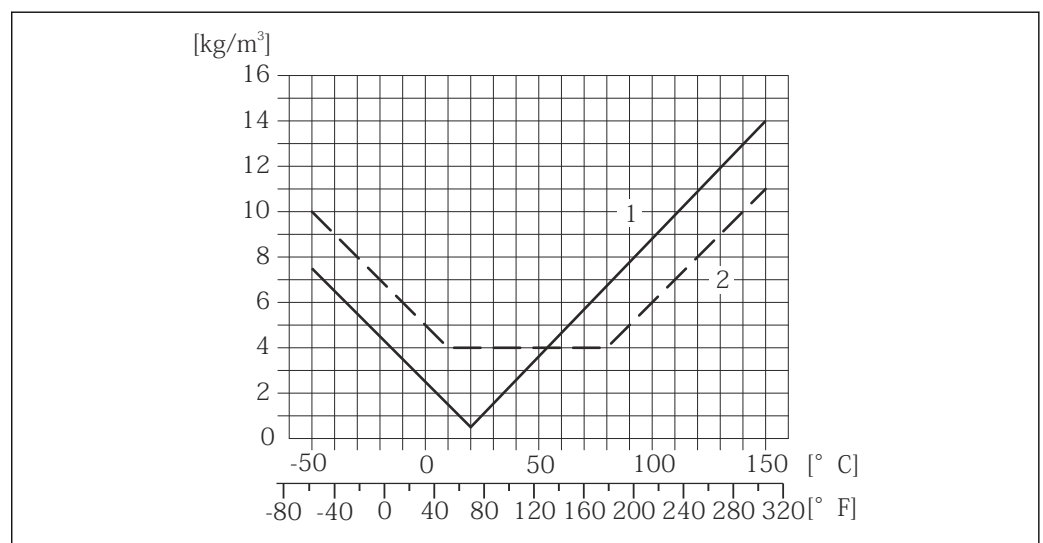

- 1 Field density calibration, for example at $+20\text{ }^{\circ}\text{C}$ ($+68\text{ }^{\circ}\text{F}$)
 2 Special density calibration

Temperature

$\pm 0.005 \cdot T\text{ }^{\circ}\text{C}$ ($\pm 0.005 \cdot (T - 32)\text{ }^{\circ}\text{F}$)

Influence of medium pressure

The table below shows the effect on accuracy of mass flow due to a difference between calibration pressure and process pressure.

o.r. = of reading

DN		[% o.r./bar]	[% o.r./psi]
[mm]	[in]		
8	$\frac{3}{8}$	No effect	No effect
15	$\frac{1}{2}$	No effect	No effect
15 FB	$\frac{1}{2}$ FB	+0.003	+0.0002
25	1	+0.003	+0.0002
25 FB	1 FB	No effect	No effect
40	$1\frac{1}{2}$	No effect	No effect
40 FB	$1\frac{1}{2}$ FB	No effect	No effect
50	2	No effect	No effect

DN		[% o.r./bar]	[% o.r./psi]
[mm]	[in]		
50 FB	2 FB	No effect	No effect
80	3	No effect	No effect
FB = Full bore			

Design fundamentals

o.r. = of reading, o.f.s. = of full scale value
BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.
MeasValue = measured value; ZeroPoint = zero point stability


Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ <small>A0021332</small>	$\pm \text{BaseAccu}$ <small>A0021339</small>
$< \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ <small>A0021333</small>	$\pm \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$ <small>A0021334</small>

Calculation of the maximum repeatability as a function of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$ <small>A0021335</small>	$\pm \text{BaseRepeat}$ <small>A0021340</small>
$< \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$ <small>A0021336</small>	$\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$ <small>A0021337</small>

Example for max. measured error

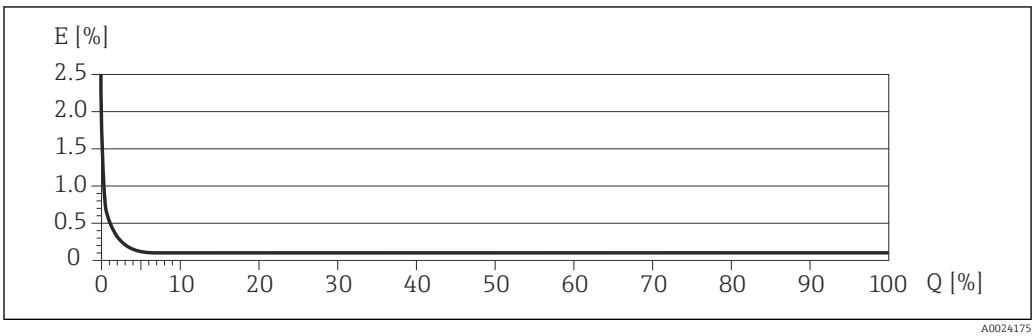

E Error: Maximum measured error as % o.r. (example)
Q Flow rate as %

16.7 Installation

"Mounting requirements" → 19

16.8 Environment

Ambient temperature range

Temperature tables



Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.



For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Storage temperature

–40 to +80 °C (–40 to +176 °F), preferably at +20 °C (+68 °F) (standard version)
–50 to +80 °C (–58 to +176 °F) (Order code for "Test, certificate", option JM)

Climate class

DIN EN 60068-2-38 (test Z/AD)

Degree of protection

Transmitter and sensor

- As standard: IP66/67, type 4X enclosure
- With the order code for "Sensor options", option **CM**: IP69K can also be ordered
- When housing is open: IP20, type 1 enclosure
- Display module: IP20, type 1 enclosure

Vibration resistance

Compact version

- Vibration, sinusoidal according to IEC 60068-2-6
 - 2 to 8.4 Hz, 3.5 mm peak
 - 8.4 to 2 000 Hz, 1 g peak
- Vibration broad-band random, according to IEC 60068-2-64
 - 10 to 200 Hz, 0.003 g²/Hz
 - 200 to 2 000 Hz, 0.001 g²/Hz
 - Total: 1.54 g rms

Shock resistance

Compact version

Shock, half-sine according to IEC 60068-2-27
6 ms 30 g

Shock resistance

Compact version

Rough handling shocks according to IEC 60068-2-31

Electromagnetic compatibility (EMC)

- According to IEC/EN 61326
- Complies with emission limits for industry as per EN 55011 (Class A)




For details, refer to the Declaration of Conformity.

16.9 Process

Medium temperature range

–50 to +150 °C (–58 to +302 °F)

Dependency of ambient temperature on medium temperature

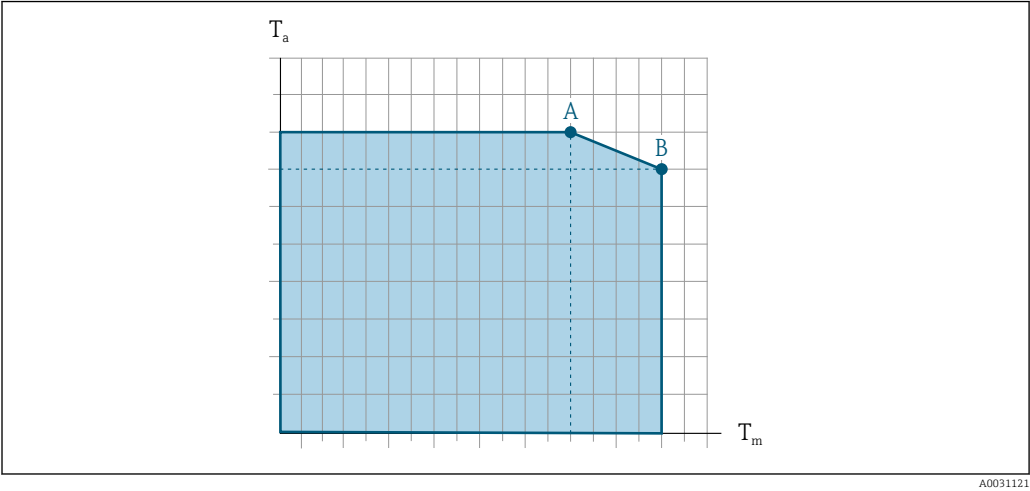

15 Exemplary representation, values in the table below.

T_a Ambient temperature range
 T_m Medium temperature
A Maximum permitted medium temperature T_m at $T_{a\ max} = 60\ ^\circ\text{C}$ ($140\ ^\circ\text{F}$); higher medium temperatures T_m require a reduced ambient temperature T_a
B Maximum permitted ambient temperature T_a for the maximum specified medium temperature T_m of the sensor

i Values for devices used in the hazardous area:
Separate Ex documentation (XA) for the device .

Density	0 to 5 000 kg/m ³ (0 to 312 lb/cf)
Pressure-temperature ratings	i An overview of the pressure-temperature ratings for the process connections is provided in the "Technical Information" document
Sensor housing	<p>The sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.</p> <p>i If a measuring tube fails (e.g. due to process characteristics like corrosive or abrasive fluids), the fluid will initially be contained by the sensor housing.</p> <p>If the sensor is to be purged with gas (gas detection), it should be equipped with purge connections.</p> <p>i Do not open the purge connections unless the containment can be filled immediately with a dry, inert gas. Use only low pressure to purge.</p> <p>Maximum pressure: 5 bar (72.5 psi)</p> <p>Burst pressure of the sensor housing</p> <p>The following sensor housing burst pressures are only valid for standard devices and/or devices equipped with closed purge connections (not opened/as delivered).</p> <p>If a device fitted with purge connections (order code for "Sensor option", option CH "Purge connection") is connected to the purge system, the maximum pressure is determined by the purge system itself or by the device, depending on which component has the lower pressure classification.</p>

The sensor housing burst pressure refers to a typical internal pressure which is reached prior to mechanical failure of the sensor housing and which was determined during type testing. The corresponding type test declaration can be ordered with the device (order code for "Additional approval", option LN "Sensor housing burst pressure, type test").

DN		Sensor housing burst pressure	
[mm]	[in]	[bar]	[psi]
8	$\frac{3}{8}$	220	3 190
15	$\frac{1}{2}$	220	3 190
15 FB	$\frac{1}{2}$ FB	235	3 408
25	1	235	3 408
25 FB	1 FB	220	3 190
40	$1\frac{1}{2}$	220	3 190
40 FB	$1\frac{1}{2}$ FB	235	3 408
50	2	235	3 408
50 FB	2 FB	460	6 670
80	3	460	6 670

FB = Full bore



For information on the dimensions: see the "Mechanical construction" section of the "Technical Information" document

Flow limit

Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.



For an overview of the full scale values for the measuring range, see the "Measuring range" section → 121

- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- In most applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).
- For gas measurement the following rules apply:
 - The flow velocity in the measuring tubes should not exceed half the sound velocity (0.5 Mach).
 - The maximum mass flow depends on the density of the gas: formula → 121



To calculate the flow limit, use the *Applicator* sizing tool → 118

Pressure loss



To calculate the pressure loss, use the *Applicator* sizing tool → 118

System pressure

→ 21

16.10 Mechanical construction

Design, dimensions



For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

Weight

All values (weight exclusive of packaging material) refer to devices with EN/DIN PN 40 flanges. Weight specifications including transmitter: order code for "Housing", option A "Compact, aluminum coated".

Weight in SI units

DN [mm]	Weight [kg]
8	11
15	13
15 FB	19
25	20
25 FB	39
40	40
40 FB	65
50	67
50 FB	118
80	122
FB = Full bore	

Weight in US units


DN [in]	Weight [lbs]
3/8	24
1/2	29
1/2 FB	42
1	44
1 FB	86
1 1/2	88
1 1/2 FB	143
2	148
2 FB	260
3	269
FB = Full bore	

Materials

Transmitter housing

- Order code for "Housing", option **A** "Compact, aluminum coated":
Aluminum, AlSi10Mg, coated
- Order code for "Housing", option **B** "Compact, hygienic, stainless":
Hygienic version, stainless steel 1.4301 (304)
- Order code for "Housing", option **C** "Ultra-compact, hygienic, stainless":
Hygienic version, stainless steel 1.4301 (304)
- Window material for optional local display (→ 139):
 - For order code for "Housing", option **A**: glass
 - For order code for "Housing", option **B** and **C**: plastic

Cable entries/cable glands

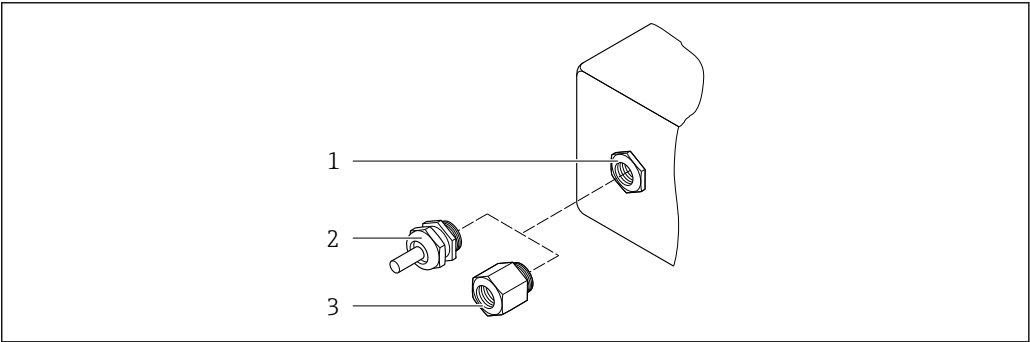

16 Possible cable entries/cable glands

- 1 Female thread M20 × 1.5
- 2 Cable gland M20 × 1.5
- 3 Adapter for cable entry with female thread G ½" or NPT ½"

Order code for "Housing", option A "Compact, aluminum, coated"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Nickel-plated brass
Adapter for cable entry with female thread G ½"	
Adapter for cable entry with female thread NPT ½"	

Order code for "Housing", option B "Compact, hygienic, stainless"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Stainless steel, 1.4404 (316L)
Adapter for cable entry with female thread G ½"	
Adapter for cable entry with female thread NPT ½"	

Device plug

Electrical connection	Material
Plug M12x1	<ul style="list-style-type: none">■ Socket: Stainless steel, 1.4404 (316L)■ Contact housing: Polyamide■ Contacts: Gold-plated brass

Sensor housing



- Acid and alkali-resistant outer surface
- Stainless steel 1.4301 (304)

Measuring tubes

Grade 9 titanium

Process connections

- Flanges according to EN 1092-1 (DIN 2501) / according to ASME B16.5/ according to JIS:
 - Stainless steel 1.4301 (304)
 - Wetted parts: Grade 2 titanium
- All other process connections: Grade 2 titanium

 Available process connections →  138

Seals

Welded process connections without internal seals

Accessories

Protective cover

Stainless steel, 1.4404 (316L)

Safety Barrier Promass 100

Housing: Polyamide

Process connections

- Fixed flange connections:
 - EN 1092-1 (DIN 2501) flange
 - EN 1092-1 (DIN 2512N) flange
 - ASME B16.5 flange
 - JIS B2220 flange
 - DIN 11864-2 Form A flange, DIN 11866 series A, flange with notch
- Clamp connections: Tri-Clamp (OD tubes), DIN 11866 series C
- Eccentric clamp connection: Eccen. Tri-Clamp, DIN 11866 series C
- Thread:
 - DIN 11851 thread, DIN 11866 series A
 - SMS 1145 thread
 - ISO 2853 thread, ISO 2037
 - DIN 11864-1 Form A thread, DIN 11866 series A

 Process connection materials

Surface roughness

All data relate to parts in contact with fluid. The following surface roughness quality can be ordered.

- Not polished
- $Ra_{max} = 0.76 \mu m$ (30 μin)
- $Ra_{max} = 0.38 \mu m$ (15 μin)

16.11 Operability

Local display

The local display is only available with the following device order code:
Order code for "Display; Operation", option **B**: 4-line; lit, via communication

Display element

- 4-line liquid crystal display with 16 characters per line.
- White background lighting; switches to red in event of device errors.
- Format for displaying measured variables and status variables can be individually configured.
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F). The readability of the display may be impaired at temperatures outside the temperature range.

Disconnecting the local display from the main electronics module



In the case of the "Compact, aluminum coated" housing version, the local display must only be disconnected manually from the main electronics module. In the case of the "Compact, hygienic, stainless" and "Ultra-compact, hygienic, stainless" housing versions, the local display is integrated in the housing cover and is disconnected from the main electronics module when the housing cover is opened.

"Compact, aluminum coated" housing version

The local display is plugged onto the main electronics module. The electronic connection between the local display and main electronics module is established via a connecting cable.

For some work performed on the measuring device (e.g. electrical connection), it is advisable to disconnect the local display from the main electronics module:


1. Press in the side latches of the local display.
2. Remove the local display from the main electronics module. Pay attention to the length of the connecting cable when doing so.

Once the work is completed, plug the local display back on.

Remote operation

Via PROFINET network

This communication interface is available in device versions with PROFINET.

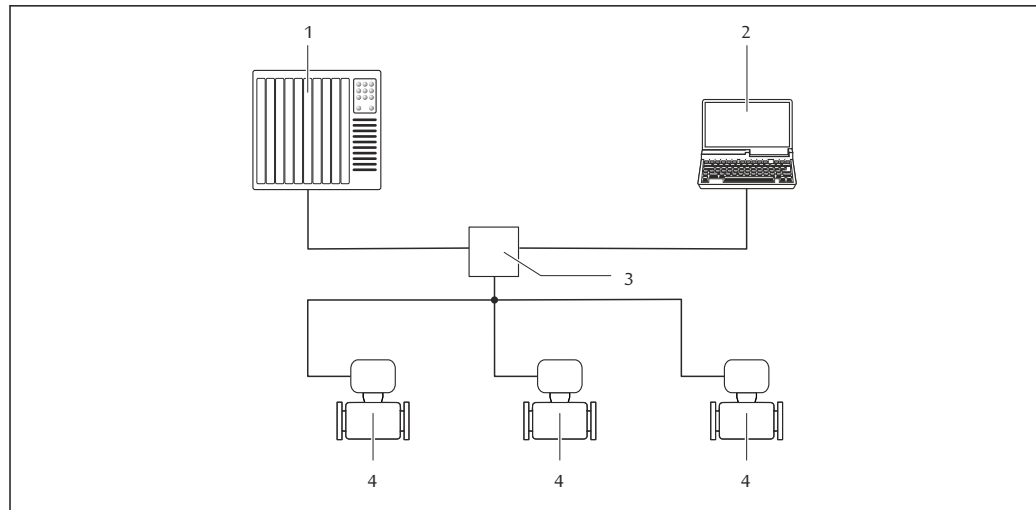

A0026545


17 Options for remote operation via PROFINET network

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

Service interface

Via service interface (CDI-RJ45)

PROFINET

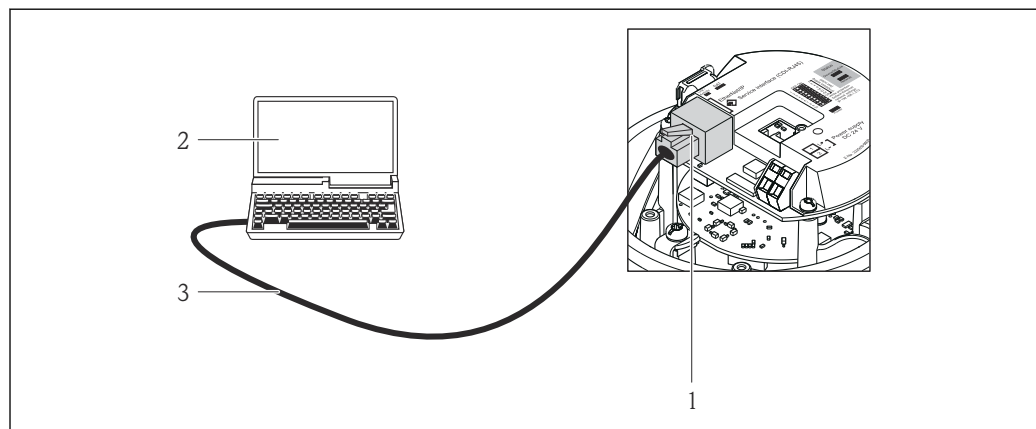

A0016940

18 Connection for order code for "Output", option R: PROFINET

- 1 Service interface (CDI -RJ45) and PROFINET interface of the measuring device with access to the integrated Web server
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

Languages

Can be operated in the following languages:

Via "FieldCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese

16.12 Certificates and approvals

CE mark	<p>The measuring system is in conformity with the statutory requirements of the applicable EC Directives. These are listed in the corresponding EC Declaration of Conformity along with the standards applied.</p> <p>Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.</p>
Ex approval	<p>The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.</p>
Sanitary compatibility	<ul style="list-style-type: none"> ■ 3-A approval ■ EHEDG-tested
Certification PROFINET	<p>PROFINET interface</p> <p>The measuring device is certified and registered by the PNO (PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:</p> <ul style="list-style-type: none"> ■ Certified according to: <ul style="list-style-type: none"> ■ Test specification for PROFINET devices ■ PROFINET Security Level 1 – Net load test ■ The device can also be operated with certified devices of other manufacturers (interoperability)
Pressure Equipment Directive	<ul style="list-style-type: none"> ■ With the PED/G1/x (x = category) marking on the sensor nameplate, Endress+Hauser confirms compliance with the "Essential Safety Requirements" specified in Annex I of the Pressure Equipment Directive 97/23/EC. ■ Devices not bearing this marking (PED) are designed and manufactured according to good engineering practice. They meet the requirements of Art.3 Section 3 of the Pressure Equipment Directive 97/23/EC. The range of application is indicated in tables 6 to 9 in Annex II of the Pressure Equipment Directive.
Other standards and guidelines	<ul style="list-style-type: none"> ■ EN 60529 Degrees of protection provided by enclosures (IP code) ■ IEC/EN 60068-2-6 Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal). ■ IEC/EN 60068-2-31 Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices. ■ EN 61010-1 Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements ■ IEC/EN 61326 Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements). ■ NAMUR NE 21 Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment ■ NAMUR NE 32 Data retention in the event of a power failure in field and control instruments with microprocessors

- NAMUR NE 43
Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.
- NAMUR NE 53
Software of field devices and signal-processing devices with digital electronics
- NAMUR NE 80
The application of the pressure equipment directive to process control devices
- NAMUR NE 105
Specifications for integrating fieldbus devices in engineering tools for field devices
- NAMUR NE 107
Self-monitoring and diagnosis of field devices
- NAMUR NE 131
Requirements for field devices for standard applications
- NAMUR NE 132
Coriolis mass meter

16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.



Detailed information on the application packages:

- Special Documentation for the device
- Special Documentation for the device



Heartbeat Technology

Package	Description
Heartbeat Verification +Monitoring	<p>Heartbeat Monitoring Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:</p> <ul style="list-style-type: none"> ■ Draw conclusions - using these data and other information - about the impact process influences (such as corrosion, abrasion, buildup etc.) have on the measuring performance over time. ■ Schedule servicing in time. ■ Monitor the process or product quality, e.g. gas pockets. <p>Heartbeat Verification Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment".</p> <ul style="list-style-type: none"> ■ Functional testing in the installed state without interrupting the process. ■ Traceable verification results on request, including a report. ■ Simple testing process via local operation or other operating interfaces. ■ Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications. ■ Extension of calibration intervals according to operator's risk assessment.


Concentration	Package	Description
	Concentration measurement and special density	<p>Calculation and outputting of fluid concentrations</p> <p>Many applications use density as a key measured value for monitoring quality or controlling processes. The device measures the density of the fluid as standard and makes this value available to the control system.</p> <p>The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.</p> <p>With the help of the "Concentration Measurement" application package, the measured density is used to calculate other process parameters:</p> <ul style="list-style-type: none"> ■ Temperature-compensated density (reference density). ■ Percentage mass of the individual substances in a two-phase fluid. (Concentration in %). ■ Fluid concentration is output with special units (°Brix, °Baumé, °API, etc.) for standard applications. <p>The measured values are output via the digital and analog outputs of the device.</p>

Viscosity	Package	Description
	Viscosity measurement	<p>In-line and real-time viscosity measurement</p> <p>Promass I with the "Viscosity" application package also measures the real-time viscosity of the fluid directly in the process, in addition to measuring the mass flow/volume flow/ temperature and density.</p> <p>The following viscosity measurements are performed on liquids:</p> <ul style="list-style-type: none"> ■ Dynamic viscosity ■ Kinematic viscosity ■ Temperature-compensated viscosity (kinematic and dynamic) in relation to the reference temperature <p>Viscosity measurement can be used for Newtonian and non-Newtonian applications and supplies accurate measured data irrespective of the flow, even under difficult conditions.</p>

16.14 Accessories

 Overview of accessories available for order →  118


16.15 Supplementary documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

Standard documentation

Brief Operating Instructions

 Brief Operating Instructions containing the most important information for standard commissioning are supplied with the device.

Technical Information

Measuring device	Documentation code
Promass I 100	TI01035D

Description of device parameters

Measuring device	Documentation code
Promass 100	GP01037D

Supplementary device-
dependent documentation



Safety Instructions

Content	Documentation code
ATEX/IECEX Ex i	XA00159D
ATEX/IECEX Ex nA	XA01029D
cCSAus IS	XA00160D
INMETRO Ex i	XA01219D
INMETRO Ex nA	XA01220D
NEPSI Ex i	XA01249D
NEPSI Ex nA	XA01262D

Special Documentation

Content	Documentation code
Information on the Pressure Equipment Directive	SD00142D
Concentration Measurement	SD01152D
Viscosity Measurement	SD01151D
Heartbeat Technology	SD01153D

Installation Instructions

Contents	Documentation code
Installation Instructions for spare part sets	 Overview of accessories available for order →  118

Index

A

Accuracy	128
Adapting the diagnostic behavior	85
Application	9, 120
Application packages	142
Applicator	121
Approvals	141

C

Cable entries	
Technical data	128
Cable entry	
Degree of protection	34
CE mark	10, 141
Certificates	141
Certification PROFIBUS	141
Check	
Installation	27
Checklist	
Post-connection check	35
Post-installation check	27
Cleaning	
Cleaning in place (CIP)	115
Exterior cleaning	115
Interior cleaning	115
Sterilization in place (SIP)	115
Climate class	133
Commissioning	55
Advanced settings	63
Configuring the measuring device	55
Connecting cable	28
Connecting the measuring device	30
Connection	
see Electrical connection	
Connection preparations	30
Connection tools	28
Current consumption	128
Cyclic data transmission	47

D

Declaration of Conformity	10
Define access code	72
Degree of protection	34, 133
Density	134
Design	
Measuring device	12
Design fundamentals	
Maximum measured error	132
Repeatability	132
Designated use	9
Device components	12
Device description files	46
Device documentation	
Supplementary documentation	8
Device locking, status	74

Device master file

GSD	47
Device name	
Sensor	15
Transmitter	14
Device repair	116
Device revision	46
Device type ID	46
DeviceCare	45
Diagnostic information	
Design, description	83, 85
FieldCare	84
Light emitting diodes	81
Overview	88
Remedy information	88
Web browser	82
Diagnostic list	109
DIP switches	
see Write protection switch	
Disabling write protection	71
Display values	
For locking status	74
Disposal	117
Document	
Function	6
Symbols used	6
Document function	6
Down pipe	19

E

Electrical connection	
Degree of protection	34
Measuring device	28
Operating tools	
Via PROFINET network	43, 139
Via service interface (CDI-RJ45)	43, 140
RSLogix 5000	43, 139
Web server	43, 140
Electromagnetic compatibility	133
Enabling write protection	71
Endress+Hauser services	
Maintenance	115
Repair	116
Environment	
Shock resistance	133
Storage temperature	133
Vibration resistance	133
Error messages	
see Diagnostic messages	
Event history	109
Events list	109
Ex approval	141
Extended order code	
Sensor	15
Transmitter	14
Exterior cleaning	115

F

Field of application	
Residual risks	10
FieldCare	44
Device description file	46
Establishing a connection	44
Function	44
User interface	45
Filtering the event logbook	110
Firmware	
Release date	46
Version	46
Firmware history	114
Flash function	55
Flow direction	20, 26
Flow limit	135
Function check	55
Functions	
see Parameters	

G

Galvanic isolation	123
--------------------	-----

H

Hardware write protection	72
---------------------------	----

I

I/O electronics module	12, 31
Identifying the measuring device	13
Incoming acceptance	13
Influence	
Medium pressure	131
Medium temperature	131
Information on the document	6
Inlet runs	20
Input	121
Inspection	
Received goods	13
Inspection check	
Connection	35
Installation	19
Installation conditions	
Down pipe	19
Mounting location	19
Orientation	20
System pressure	21
Thermal insulation	21
Vibrations	24
Installation dimensions	21
Interior cleaning	115

L

Languages, operation options	140
Low flow cut off	123

M

Main electronics module	12
Maintenance tasks	115
Manufacturer ID	46

Manufacturing date	14, 15
Materials	137
Maximum measured error	129
Measured variables	
see Process variables	
Measuring and test equipment	115
Measuring device	
Configuration	55
Conversion	116
Design	12
Disposal	117
Mounting the sensor	26
Preparing for electrical connection	30
Preparing for mounting	25
Removing	117
Repair	116
Measuring principle	120
Measuring range	
Calculation example for gas	122
For gases	121
For liquids	121
Measuring range, recommended	135
Measuring system	120
Media	9
Medium pressure	
Influence	131
Medium temperature	
Influence	131
Menu	
Diagnostics	109
Operation	74
Setup	56
Menus	
For measuring device configuration	55
For specific settings	63
Mounting dimensions	
see Installation dimensions	
Mounting location	19
Mounting preparations	25
Mounting requirements	
Inlet and outlet runs	20
Installation dimensions	21
Sensor heating	23
Mounting tools	25

N

Nameplate	
Sensor	15
Transmitter	14

O

Operable flow range	122
Operating menu	
Menus, submenus	37
Structure	37
Submenus and user roles	38
Operating philosophy	38
Operation	74
Operation options	36

Operational safety	10
Order code	14, 15
Orientation (vertical, horizontal)	20
Outlet runs	20
Output	123
Output signal	123

P

Packaging disposal	18
Parameter settings	
Administration (Submenu)	111
Calculated values (Submenu)	63
Communication (Submenu)	58
Device information (Submenu)	112
Diagnostics (Menu)	109
Display (Submenu)	67
Low flow cut off (Wizard)	61
Medium selection (Submenu)	59
Partially filled pipe detection (Wizard)	62
Process variables (Submenu)	74
Sensor adjustment (Submenu)	64
Setup (Menu)	56
Simulation (Submenu)	70
System units (Submenu)	56
Totalizer 1 to n (Submenu)	65, 77
Totalizer handling (Submenu)	78
Web server (Submenu)	42
Zero point adjustment (Submenu)	65
Performance characteristics	128
Post-connection check (checklist)	35
Post-installation check	55
Post-installation check (checklist)	27
Potential equalization	32
Power consumption	128
Power supply failure	128
Pressure Equipment Directive	141
Pressure loss	135
Pressure-temperature ratings	134
Process connections	138
Process variables	
Calculated	121
Measured	121
Product safety	10
Protecting parameter settings	71

R

Reading measured values	74
Recalibration	115
Reference operating conditions	128
Registered trademarks	8
Remote operation	139
Repair	116
Notes	116
Repair of a device	116
Repeatability	130
Replacement	
Device components	116
Requirements for personnel	9
Response time	131

Return	116
--------	-----

S

Safety	9
Sanitary compatibility	141
Sensor	
Mounting	26
Sensor heating	23
Sensor housing	134
Serial number	14, 15
Setting the operating language	55
Settings	
Adapting the measuring device to the process	
conditions	77
Advanced display configurations	67
Communication interface	58
Device reset	111
Device tag	56
Low flow cut off	61
Medium	59
Operating language	55
Partial filled pipe detection	62
Resetting the totalizer	78
Sensor adjustment	64
Simulation	70
System units	56
Totalizer	65
Totalizer reset	78
Shock resistance	133
Signal on alarm	123
Software release	46
Software write protection	73
Spare part	116
Spare parts	116
Special connection instructions	32
Standards and guidelines	141
Startup parameterization (NSU)	55
Status signals	83, 84
Storage conditions	17
Storage temperature	17
Storage temperature range	133
Structure	
Operating menu	37
Submenu	
Administration	111
Advanced setup	63
Calculated values	63
Communication	58
Device information	112
Display	67
Events list	109
Medium selection	59
Overview	38
Process variables	63, 74
Sensor adjustment	64
Simulation	70
System units	56
Totalizer 1 to n	65, 77
Totalizer handling	78

Web server	42
Zero point adjustment	65
Supply voltage	128
Surface roughness	138
System design	
Measuring system	120
see Measuring device design	
System integration	46
System pressure	21

T

Technical data, overview	120
Temperature range	
Medium temperature	133
Storage temperature	17
Terminal assignment	29, 31
Terminals	128
Thermal insulation	21
Tools	
Electrical connection	28
Installation	25
Transport	17
Transmitter	
Connecting the signal cables	31
Turning the display module	26
Transporting the measuring device	17
Troubleshooting	
General	80
Turning the display module	26

U

Use of the measuring device	
Borderline cases	9
Incorrect use	9
see Designated use	
User interface	
Current diagnostic event	109
Previous diagnostic event	109
User roles	38

V

Version data for the device	46
Vibration resistance	133
Vibrations	24

W

W@M	115, 116
W@M Device Viewer	13, 116
Weight	
SI units	136
Transport (notes)	17
US units	136
Wizard	
Define access code	71
Low flow cut off	61
Partially filled pipe detection	62
Workplace safety	10
Write protection	
Via access code	71
Via startup parameterization (NSU)	73

Via write protection switch	72
Write protection switch	72



www.addresses.endress.com
