


# Operating Instructions

## Proline Promass I 100

Coriolis flowmeter  
EtherNet/IP

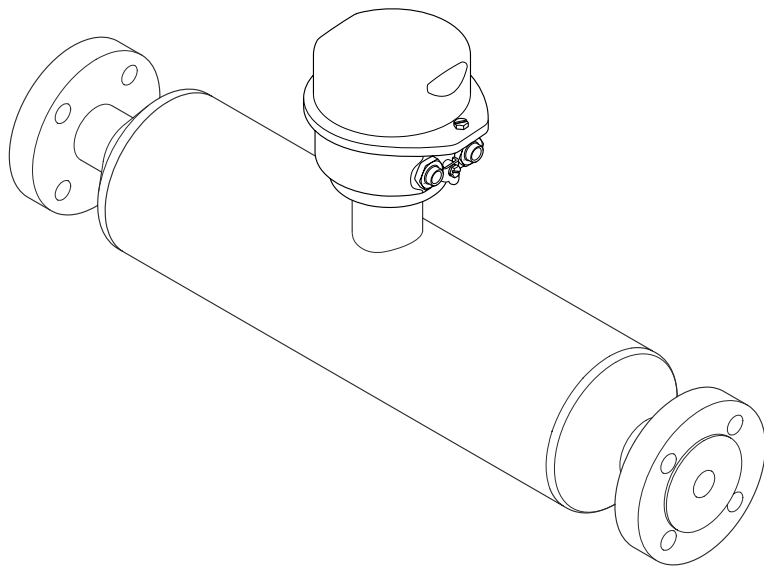

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data in line with technological developments without prior notice. Your Endress+Hauser sales center will supply you with current information and updates to this manual.

# Table of contents

|          |   |           |            |   |           |
|----------|---|-----------|------------|---|-----------|
| <b>1</b> | <b>Document information</b>                           | <b>6</b>  | <b>6.2</b> | Mounting the measuring device                       | 25        |
| 1.1      | Document function                                     | 6         | 6.2.1      | Required tools                                      | 25        |
| 1.2      | Symbols used  | 6         | 6.2.2      | Preparing the measuring device                      | 26        |
| 1.2.1    | Safety symbols  | 6         | 6.2.3      | Mounting the measuring device                       | 26        |
| 1.2.2    | Electrical symbols                                    | 6         | 6.2.4      | Turning the display module                          | 26        |
| 1.2.3    | Tool symbols  | 6         | 6.3        | Post-installation check                             | 27        |
| 1.2.4    | Symbols for certain types of information              | 7         | <b>7</b>   | <b>Electrical connection</b>                        | <b>28</b> |
| 1.2.5    | Symbols in graphics                                   | 7         | 7.1        | Connection conditions                               | 28        |
| 1.3      | Documentation   | 7         | 7.1.1      | Required tools                                      | 28        |
| 1.3.1    | Standard documentation                                | 8         | 7.1.2      | Requirements for connecting cable                   | 28        |
| 1.3.2    | Supplementary device-dependent documentation          | 8         | 7.1.3      | Terminal assignment                                 | 29        |
| 1.4      | Registered trademarks                                 | 8         | 7.1.4      | Pin assignment, device plug                         | 30        |
| <b>2</b> | <b>Basic safety instructions</b>                      | <b>9</b>  | 7.1.5      | Preparing the measuring device                      | 30        |
| 2.1      | Requirements for the personnel                        | 9         | 7.2        | Connecting the measuring device                     | 30        |
| 2.2      | Designated use  | 9         | 7.2.1      | Connecting the transmitter                          | 31        |
| 2.3      | Workplace safety                                      | 10        | 7.2.2      | Ensuring potential equalization                     | 32        |
| 2.4      | Operational safety                                    | 10        | 7.3        | Special connection instructions                     | 32        |
| 2.5      | Product safety  | 10        | 7.3.1      | Connection examples                                 | 32        |
| 2.6      | IT security   | 10        | 7.4        | Hardware settings                                   | 33        |
| <b>3</b> | <b>Product description</b>                            | <b>12</b> | 7.4.1      | Setting the device address                          | 33        |
| 3.1      | Product design  | 12        | 7.5        | Ensuring the degree of protection                   | 34        |
| 3.1.1    | Device version with EtherNet/IP communication type    | 12        | 7.6        | Post-connection check                               | 34        |
| <b>4</b> | <b>Incoming acceptance and product identification</b> | <b>13</b> | <b>8</b>   | <b>Operation options</b>                            | <b>35</b> |
| 4.1      | Incoming acceptance                                   | 13        | 8.1        | Overview of operation options                       | 35        |
| 4.2      | Product identification                                | 13        | 8.2        | Structure and function of the operating menu        | 36        |
| 4.2.1    | Transmitter nameplate                                 | 14        | 8.2.1      | Structure of the operating menu                     | 36        |
| 4.2.2    | Sensor nameplate                                      | 15        | 8.2.2      | Operating philosophy                                | 37        |
| 4.2.3    | Symbols on measuring device                           | 16        | 8.3        | Access to the operating menu via the Web browser    | 37        |
| <b>5</b> | <b>Storage and transport</b>                          | <b>17</b> | 8.3.1      | Function range                                      | 37        |
| 5.1      | Storage conditions                                    | 17        | 8.3.2      | Prerequisites                                       | 38        |
| 5.2      | Transporting the product                              | 17        | 8.3.3      | Establishing a connection                           | 39        |
| 5.2.1    | Measuring devices without lifting lugs                | 17        | 8.3.4      | Logging on  | 40        |
| 5.2.2    | Measuring devices with lifting lugs                   | 18        | 8.3.5      | User interface                                      | 40        |
| 5.2.3    | Transporting with a fork lift                         | 18        | 8.3.6      | Disabling the Web server                            | 41        |
| 5.3      | Packaging disposal                                    | 18        | 8.3.7      | Logging out   | 42        |
| <b>6</b> | <b>Installation</b>                                   | <b>19</b> | 8.4        | Access to the operating menu via the operating tool | 42        |
| 6.1      | Installation conditions                               | 19        | 8.4.1      | Connecting the operating tool                       | 42        |
| 6.1.1    | Mounting position                                     | 19        | 8.4.2      | FieldCare   | 43        |
| 6.1.2    | Requirements from environment and process             | 21        | <b>9</b>   | <b>System integration</b>                           | <b>45</b> |
| 6.1.3    | Special mounting instructions                         | 24        | 9.1        | Overview of device description files                | 45        |
|          |   |           | 9.1.1      | Current version data for the device                 | 45        |
|          |   |           | 9.1.2      | Operating tools                                     | 45        |
|          |   |           | 9.2        | Overview of system files                            | 45        |
|          |   |           | 9.3        | Integrating the measuring device in the system      | 45        |
|          |   |           | 9.4        | Cyclic data transmission                            | 46        |
|          |   |           | 9.4.1      | Block model   | 46        |
|          |   |           | 9.4.2      | Input and output groups                             | 46        |

|           |   |           |  |  |
|-----------|---|-----------|--|--|
| <b>10</b> | <b>Commissioning</b>                                    | <b>51</b> |  |  |
| 10.1      | Function check  | 51        |  |  |
| 10.2      | Configuring the device address via software             | 51        |  |  |
| 10.2.1    | Ethernet network and Web server                         | 51        |  |  |
| 10.3      | Setting the operating language                          | 51        |  |  |
| 10.4      | Configuring the measuring device                        | 51        |  |  |
| 10.4.1    | Defining the tag name                                   | 52        |  |  |
| 10.4.2    | Setting the system units                                | 52        |  |  |
| 10.4.3    | Selecting and setting the medium                        | 54        |  |  |
| 10.4.4    | Configuring the communication interface                 | 55        |  |  |
| 10.4.5    | Configuring the low flow cut off                        | 56        |  |  |
| 10.4.6    | Configuring the partial filled pipe detection           | 57        |  |  |
| 10.5      | Advanced settings                                       | 58        |  |  |
| 10.5.1    | Calculated values                                       | 58        |  |  |
| 10.5.2    | Carrying out a sensor adjustment                        | 59        |  |  |
| 10.5.3    | Configuring the totalizer                               | 60        |  |  |
| 10.5.4    | Carrying out additional display configurations          | 62        |  |  |
| 10.6      | Simulation  | 65        |  |  |
| 10.7      | Protecting settings from unauthorized access            | 66        |  |  |
| 10.7.1    | Write protection via access code                        | 66        |  |  |
| 10.7.2    | Write protection via write protection switch            | 67        |  |  |
| <b>11</b> | <b>Operation</b>  | <b>68</b> |  |  |
| 11.1      | Read out and modify current Ethernet settings           | 68        |  |  |
| 11.2      | Reading device locking status                           | 68        |  |  |
| 11.3      | Adjusting the operating language                        | 69        |  |  |
| 11.4      | Configuring the display                                 | 69        |  |  |
| 11.5      | Reading measured values                                 | 69        |  |  |
| 11.5.1    | Process variables                                       | 69        |  |  |
| 11.5.2    | Totalizer   | 70        |  |  |
| 11.5.3    | Output values   | 71        |  |  |
| 11.6      | Adapting the measuring device to the process conditions | 71        |  |  |
| 11.7      | Performing a totalizer reset                            | 72        |  |  |
| <b>12</b> | <b>Diagnostics and troubleshooting</b>                  | <b>73</b> |  |  |
| 12.1      | General troubleshooting                                 | 73        |  |  |
| 12.2      | Diagnostic information via light emitting diodes        | 75        |  |  |
| 12.2.1    | Transmitter   | 75        |  |  |
| 12.3      | Diagnostic information on local display                 | 76        |  |  |
| 12.3.1    | Diagnostic message                                      | 76        |  |  |
| 12.3.2    | Calling up remedial measures                            | 78        |  |  |
| 12.4      | Diagnostic information in the Web browser               | 79        |  |  |
| 12.4.1    | Diagnostic options                                      | 79        |  |  |
| 12.4.2    | Calling up remedy information                           | 80        |  |  |
| 12.5      | Diagnostic information in FieldCare                     | 80        |  |  |
| 12.5.1    | Diagnostic options                                      | 80        |  |  |
| 12.5.2    | Calling up remedy information                           | 81        |  |  |
| 12.6      | Diagnostic information via communication interface      | 82        |  |  |
| 12.6.1    | Reading out diagnostic information                      | 82        |  |  |
| 12.7      | Adapting the diagnostic information                     | 82        |  |  |
| 12.7.1    | Adapting the diagnostic behavior                        | 82        |  |  |
| 12.8      | Overview of diagnostic information                      | 82        |  |  |
| 12.9      | Pending diagnostic events                               | 85        |  |  |
| 12.10     | Diagnostic list   | 86        |  |  |
| 12.11     | Event logbook   | 86        |  |  |
| 12.11.1   | Event history   | 86        |  |  |
| 12.11.2   | Filtering the event logbook                             | 87        |  |  |
| 12.11.3   | Overview of information events                          | 87        |  |  |
| 12.12     | Resetting the measuring device                          | 88        |  |  |
| 12.12.1   | Function scope of "Device reset" parameter              | 88        |  |  |
| 12.13     | Device information                                      | 89        |  |  |
| 12.14     | Firmware history  | 91        |  |  |
| <b>13</b> | <b>Maintenance</b>                                      | <b>92</b> |  |  |
| 13.1      | Maintenance tasks                                       | 92        |  |  |
| 13.1.1    | Exterior cleaning                                       | 92        |  |  |
| 13.1.2    | Interior cleaning                                       | 92        |  |  |
| 13.2      | Measuring and test equipment                            | 92        |  |  |
| 13.3      | Endress+Hauser services                                 | 92        |  |  |
| <b>14</b> | <b>Repair</b>   | <b>93</b> |  |  |
| 14.1      | General notes   | 93        |  |  |
| 14.2      | Spare parts   | 93        |  |  |
| 14.3      | Endress+Hauser services                                 | 93        |  |  |
| 14.4      | Return  | 93        |  |  |
| 14.5      | Disposal  | 93        |  |  |
| 14.5.1    | Removing the measuring device                           | 93        |  |  |
| 14.5.2    | Disposing of the measuring device                       | 94        |  |  |
| <b>15</b> | <b>Accessories</b>                                      | <b>95</b> |  |  |
| 15.1      | Device-specific accessories                             | 95        |  |  |
| 15.1.1    | For the sensor  | 95        |  |  |
| 15.2      | Service-specific accessories                            | 95        |  |  |
| 15.3      | System components                                       | 96        |  |  |
| <b>16</b> | <b>Technical data</b>                                   | <b>97</b> |  |  |
| 16.1      | Application   | 97        |  |  |
| 16.2      | Function and system design                              | 97        |  |  |
| 16.3      | Input   | 97        |  |  |
| 16.4      | Output  | 99        |  |  |
| 16.5      | Power supply  | 102       |  |  |
| 16.6      | Performance characteristics                             | 103       |  |  |
| 16.7      | Installation  | 107       |  |  |
| 16.8      | Environment   | 107       |  |  |
| 16.9      | Process   | 108       |  |  |
| 16.10     | Mechanical construction                                 | 110       |  |  |
| 16.11     | Operability   | 113       |  |  |
| 16.12     | Certificates and approvals                              | 115       |  |  |
| 16.13     | Application packages                                    | 116       |  |  |
| 16.14     | Accessories   | 117       |  |  |
| 16.15     | Documentation   | 117       |  |  |

**17 Appendix ..... 119**

17.1 Overview of the operating menu ..... 119

17.1.1 "Operation" menu ..... 119

17.1.2 "Setup" menu ..... 120

17.1.3 "Diagnostics" menu ..... 125

17.1.4 "Expert" menu ..... 128

**Index ..... 144**





# 1 Document information

## 1.1 Document function




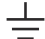


These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

## 1.2 Symbols used



### 1.2.1 Safety symbols

| Symbol  | Meaning  |
|---|--|
|  <b>DANGER</b>   | <b>DANGER!</b><br>This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury. |
|  <b>WARNING</b>  | <b>WARNING!</b><br>This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury. |
|  <b>CAUTION</b> | <b>CAUTION!</b><br>This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.  |
|  <b>NOTICE</b> | <b>NOTE!</b><br>This symbol contains information on procedures and other facts which do not result in personal injury.                     |







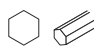




### 1.2.2 Electrical symbols

| Symbol  | Meaning  | Symbol   | Meaning  |
|---|--|--|--|
|  | Direct current   |  | Alternating current  |
|  | Direct current and alternating current   |  | <b>Ground connection</b><br>A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.  |
|  | <b>Protective ground connection</b><br>A terminal which must be connected to ground prior to establishing any other connections. |  | <b>Equipotential connection</b><br>A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice. |





### 1.2.3 Tool symbols

| Symbol  | Meaning           |
|---|-------------------|
|  | Allen key         |
|  | Open-ended wrench |


### 1.2.4 Symbols for certain types of information

| Symbol   | Meaning  |
|--|--|
|   | <b>Permitted</b><br>Procedures, processes or actions that are permitted. |
|   | <b>Preferred</b><br>Procedures, processes or actions that are preferred. |
|   | <b>Forbidden</b><br>Procedures, processes or actions that are forbidden. |
|   | <b>Tip</b><br>Indicates additional information.                          |
|   | Reference to documentation   |
|   | Reference to page  |
|   | Reference to graphic   |
|   | Series of steps  |
|   | Result of a sequence of actions  |
|   | Help in the event of a problem   |
|  | Visual inspection  |
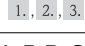
### 1.2.5 Symbols in graphics

| Symbol  | Meaning        | Symbol  | Meaning                        |
|---|----------------|---|--------------------------------|
| 1, 2, 3, ...  | Item numbers   |  | Series of steps                |
| A, B, C, ...  | Views          | A-A, B-B, C-C, ...  | Sections                       |
|  | Hazardous area |  | Safe area (non-hazardous area) |
|  | Flow direction |   |                                |

## 1.3 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer))
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

 For a detailed list of the individual documents along with the documentation code

### 1.3.1 Standard documentation

| Document type                | Purpose and content of the document  |
|------------------------------|--|
| Technical Information        | <b>Planning aid for your device</b><br>The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device. |
| Brief Operating Instructions | <b>Guide that takes you quickly to the 1st measured value</b><br>The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.           |

### 1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

## 1.4 Registered trademarks

### **EtherNet/IP™**

Trademark of ODVA, Inc.

### **Microsoft®**

Registered trademark of the Microsoft Corporation, Redmond, Washington, USA

### **TRI-CLAMP®**

Registered trademark of Ladish & Co., Inc., Kenosha, USA

### **Applicator®, FieldCare®, Field Xpert™, HistoROM®, TMB®, Heartbeat Technology™**

Registered or registration-pending trademarks of the Endress+Hauser Group



## 2 Basic safety instructions

### 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task
- ▶ Are authorized by the plant owner/operator
- ▶ Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- ▶ Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- ▶ Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- ▶ Following the instructions in these Operating Instructions

### 2.2 Designated use


#### Application and media

The measuring device described in these Instructions is intended only for flow measurement of liquids and gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or in applications where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media against which the process-wetted materials are adequately resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential: "Documentation" section →  7.

#### Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

#### WARNING

#### **Danger of breakage of the measuring tube due to corrosive or abrasive fluids.**

Housing breakage due to mechanical overload possible!

- ▶ Verify the compatibility of the process fluid with the measuring tube material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Observe the specified pressure and temperature range.

Verification for borderline cases:

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any

warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

#### **Residual risks**

The external surface temperature of the housing can increase by max. 20 K due to the power consumption of the electronic components. Hot process fluids passing through the measuring device will further increase the surface temperature of the housing. The surface of the sensor, in particular, can reach temperatures which are close to the fluid temperature.

Possible burn hazard due to fluid temperatures!

- ▶ For elevated fluid temperature, ensure protection against contact to prevent burns.

## **2.3 Workplace safety**

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

- ▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

- ▶ It is recommended to wear gloves on account of the higher risk of electric shock.

## **2.4 Operational safety**

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

#### **Conversions to the device**

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with Endress+Hauser.

#### **Repair**

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

## **2.5 Product safety**

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EC directives listed in the device-specific EC Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

## **2.6 IT security**

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.


### 3 Product description

The device consists of a transmitter and a sensor.


One device version is available: compact version - transmitter and sensor form a mechanical unit.

#### 3.1 Product design

##### 3.1.1 Device version with EtherNet/IP communication type

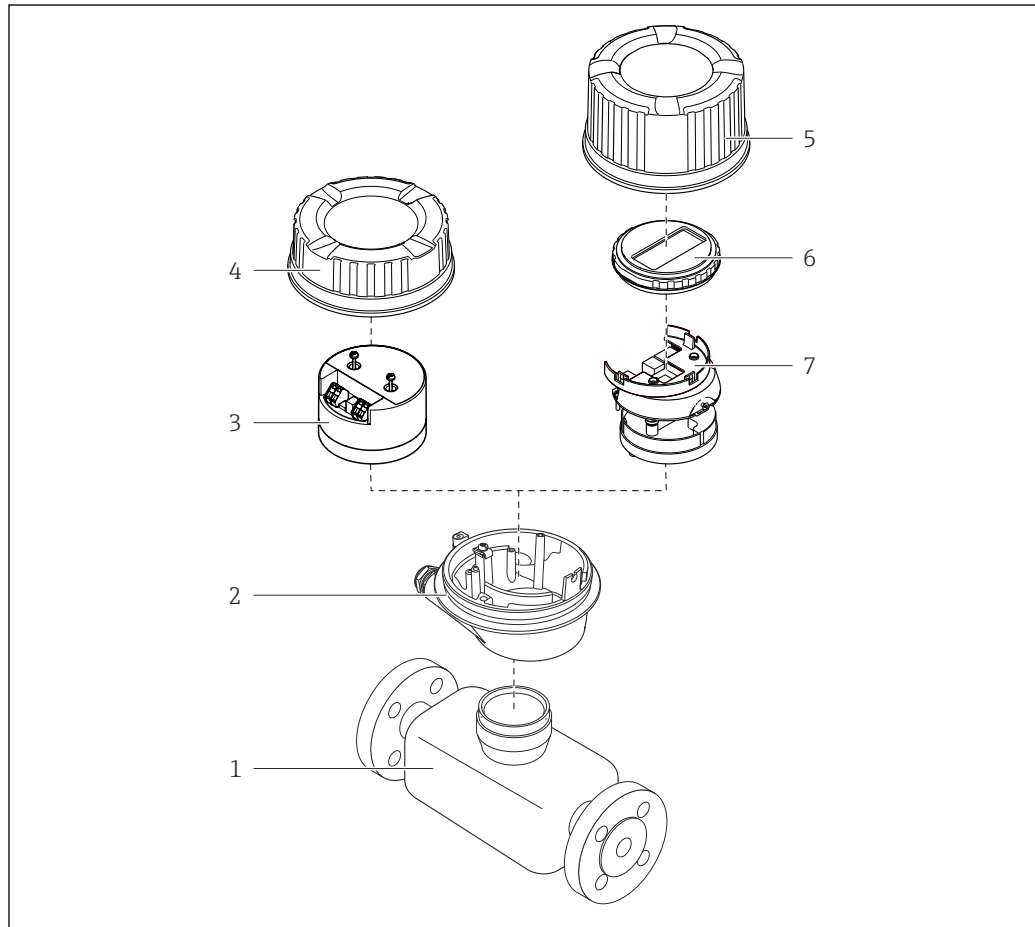













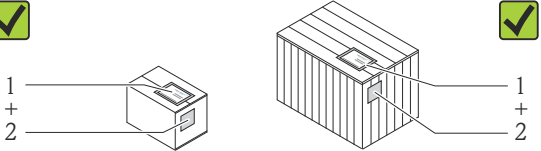



A0023153

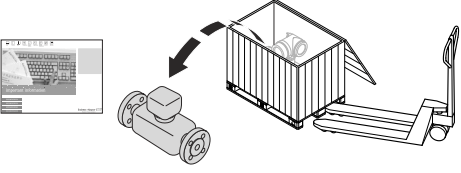 1 Important components of a measuring device

- 1 Sensor
- 2 Transmitter housing
- 3 Main electronics module
- 4 Transmitter housing cover
- 5 Transmitter housing cover (version for optional onsite display)
- 6 Onsite display (optional)
- 7 Main electronics module (with bracket for optional onsite display)

## 4 Incoming acceptance and product identification
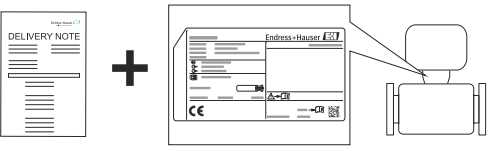
### 4.1 Incoming acceptance

|   |  |   |  |
|---|--|---|--|
|       |    |   | <p>Are the order codes on the delivery note (1) and the product sticker (2) identical?</p>               |
|   |  |   |  |
|       |    |    | <p>Are the goods undamaged?</p>  |
|     |   |   | <p>Do the nameplate data match the ordering information on the delivery note?</p>                        |
|   |  |   | <p>Is the CD-ROM with the Technical Documentation (depends on device version) and documents present?</p> |



- If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
- Depending on the device version, the CD-ROM might not be part of the delivery! The Technical Documentation is available via the Internet or via the *Endress+Hauser Operations App*, see the "Product identification" section → 14.

### 4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.


For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" →  8 and "Supplementary device-dependent documentation" →  8
- The *W@M Device Viewer*: Enter the serial number from the nameplate ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer))
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

### 4.2.1 Transmitter nameplate

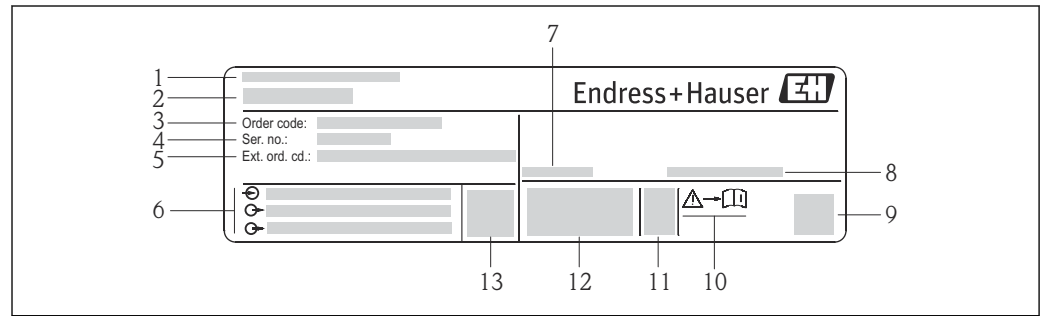


A0017520

 2 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Electrical connection data, e.g. available inputs and outputs, supply voltage
- 7 Permitted ambient temperature ( $T_a$ )
- 8 Degree of protection
- 9 2-D matrix code
- 10 Document number of safety-related supplementary documentation
- 11 Manufacturing date: year-month
- 12 CE mark, C-Tick
- 13 Firmware version (FW)

### 4.2.2 Sensor nameplate

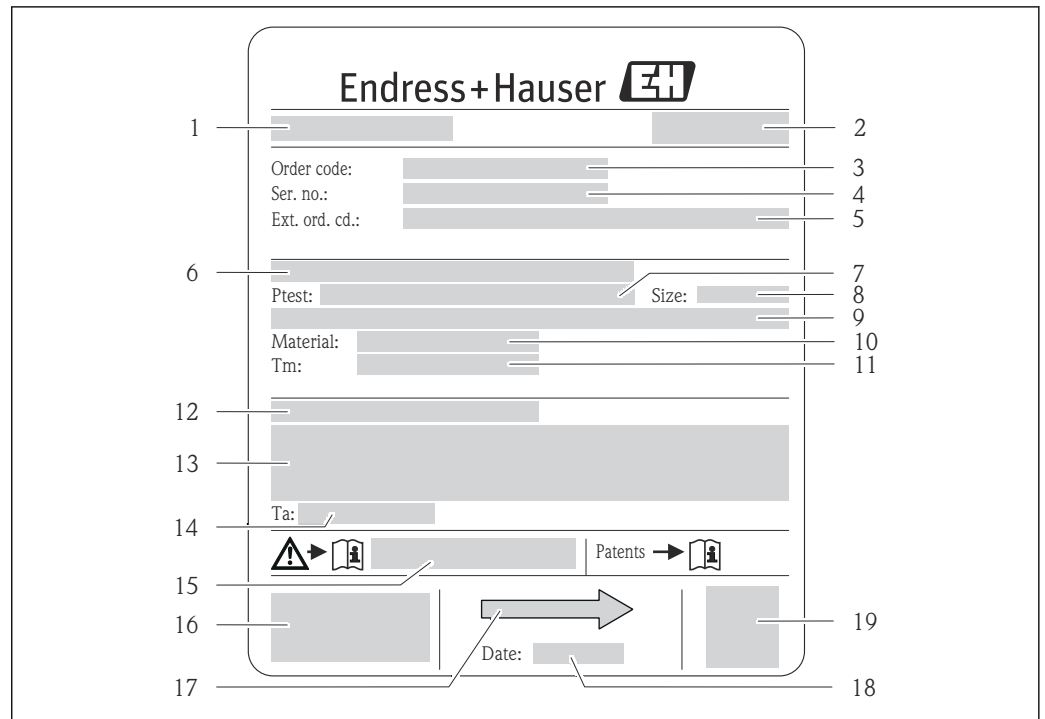

3 Example of a sensor nameplate

- 1 Name of the sensor
- 2 Manufacturing location
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (ext. ord. cd.)
- 6 Flange nominal diameter/nominal pressure
- 7 Test pressure of the sensor
- 8 Nominal diameter of sensor
- 9 Sensor-specific data: e.g. pressure range of secondary containment, wide-range density specification (special density calibration)
- 10 Material of measuring tube and manifold
- 11 Medium temperature range
- 12 Degree of protection
- 13 Approval information for explosion protection and Pressure Equipment Directive
- 14 Permitted ambient temperature ( $T_a$ )
- 15 Document number of safety-related supplementary documentation
- 16 CE mark, C-Tick
- 17 Flow direction
- 18 Manufacturing date: year-month
- 19 2-D matrix code






#### Order code

The measuring device is reordered using the order code.

#### Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approval-related specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

### 4.2.3 Symbols on measuring device

| Symbol  | Meaning  |
|---|--|
|  | <b>WARNING!</b><br>This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury. |
|  | <b>Reference to documentation</b><br>Refers to the corresponding device documentation.   |
|  | <b>Protective ground connection</b><br>A terminal which must be connected to ground prior to establishing any other connections.           |



## 5 Storage and transport


### 5.1 Storage conditions

Observe the following notes for storage:

- Store in the original packaging to ensure protection from shock.
- Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- Protect from direct sunlight to avoid unacceptably high surface temperatures.
- Storage temperature:  $-40$  to  $+80$  °C ( $-40$  to  $+176$  °F),  
Order Code "Test, Certificate", Option JM:  $-50$  to  $+60$  °C ( $-58$  to  $+140$  °F),  
preferably at  $+20$  °C ( $+68$  °F)
- Store in a dry and dust-free place.
- Do not store outdoors.

### 5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

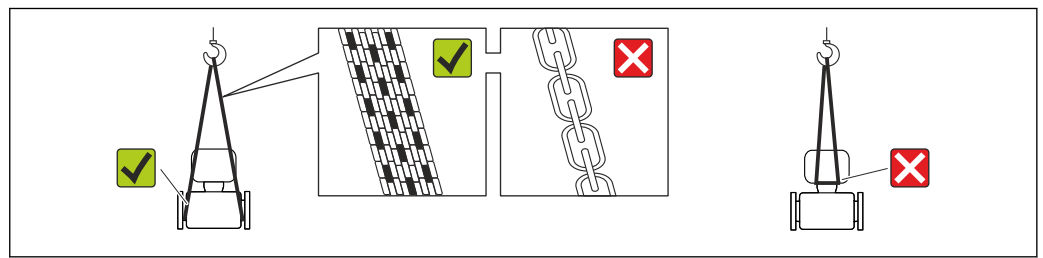

A0015604

- i** Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


#### 5.2.1 Measuring devices without lifting lugs

##### **⚠ WARNING**

**Center of gravity of the measuring device is higher than the suspension points of the webbing slings.**

Risk of injury if the measuring device slips.

- ▶ Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

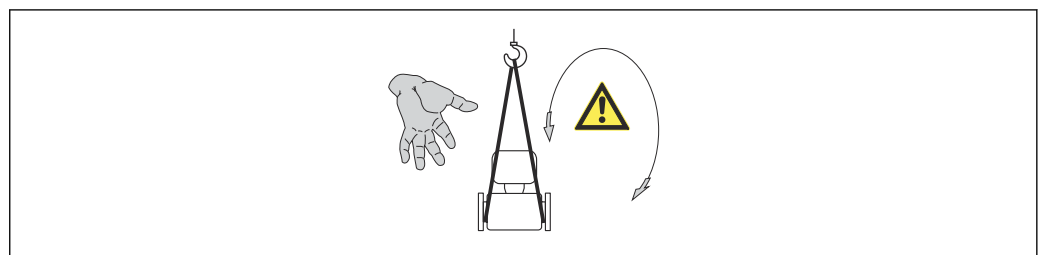

A0015606

### 5.2.2 Measuring devices with lifting lugs

#### CAUTION

##### Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ▶ The device must always be secured at two lifting lugs at least.

### 5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

## 5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:

- Measuring device secondary packaging: polymer stretch film that conforms to EC Directive 2002/95/EC (RoHS).
- Packaging:
  - Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
  - or
  - Carton in accordance with European Packaging Directive 94/62EC; recyclability is confirmed by the affixed RESY symbol.
- Seaworthy packaging (optional): Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
- Carrying and mounting hardware:
  - Disposable plastic pallet
  - Plastic straps
  - Plastic adhesive strips
- Dunnage: Paper cushion

## 6 Installation

### 6.1 Installation conditions


No special measures such as supports are necessary. External forces are absorbed by the construction of the device.

#### 6.1.1 Mounting position

##### Mounting location

To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:


- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

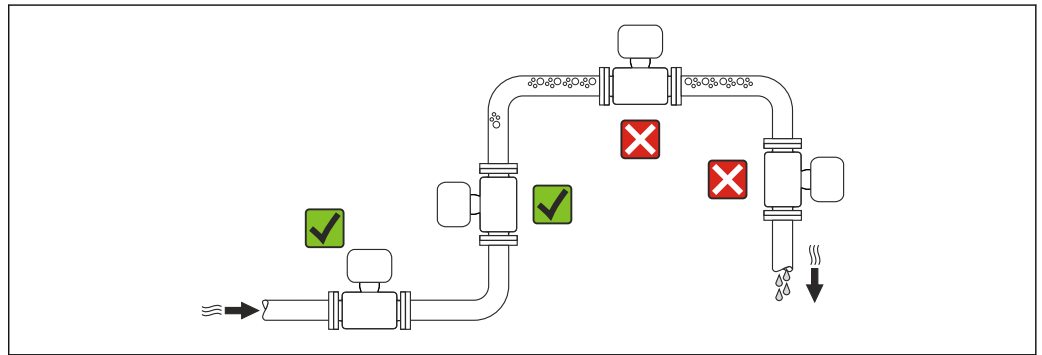

A0023344

##### Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

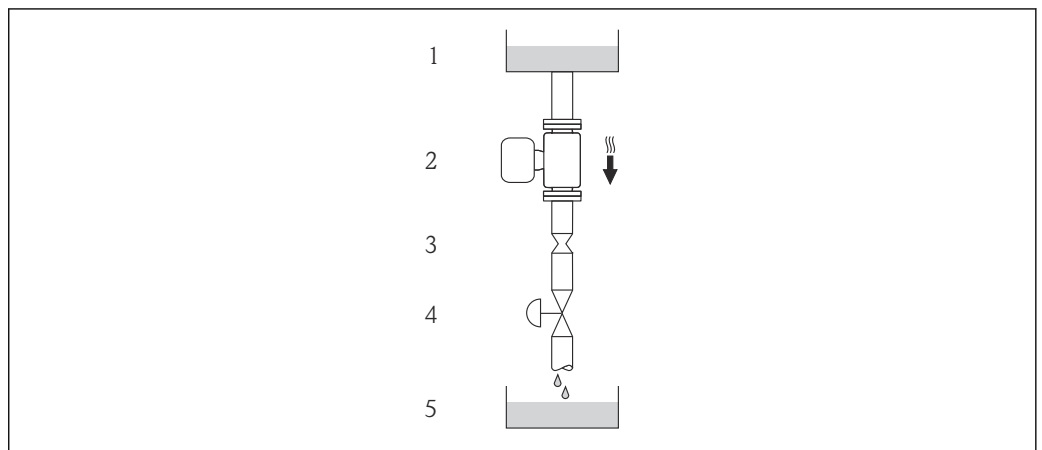

A0015596





4 Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Batching tank

| DN             |                   | Ø orifice plate, pipe restriction |      |
|----------------|-------------------|-----------------------------------|------|
| [mm]           | [in]              | [mm]                              | [in] |
| 8              | $\frac{3}{8}$     | 6                                 | 0.24 |
| 15             | $\frac{1}{2}$     | 10                                | 0.40 |
| 15 FB          | $\frac{1}{2}$ FB  | 15                                | 0.60 |
| 25             | 1                 | 14                                | 0.55 |
| 25 FB          | 1 FB              | 24                                | 0.95 |
| 40             | $1\frac{1}{2}$    | 22                                | 0.87 |
| 40 FB          | $1\frac{1}{2}$ FB | 35                                | 1.38 |
| 50             | 2                 | 28                                | 1.10 |
| 50 FB          | 2 FB              | 54                                | 2.13 |
| 80             | 3                 | 50                                | 1.97 |
| FB = Full bore |                   |                                   |      |

Orientation


The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).
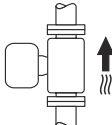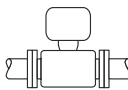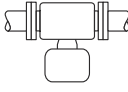
| Orientation |  |  | Recommendation                 |
|-------------|--|--|--------------------------------|
| A           | Vertical orientation                             | <br>A0015591 | ✓✓                             |
| B           | Horizontal orientation, transmitter head up      | <br>A0015589 | ✓✓ <sup>1)</sup><br>Exception: |
| C           | Horizontal orientation, transmitter head down    | <br>A0015590 | ✓✓ <sup>2)</sup><br>Exception: |
| D           | Horizontal orientation, transmitter head at side | <br>A0015592 | ✓✓                             |

- 1)
- Applications with low process temperatures may reduce the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 2)
- Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

Inlet and outlet runs

No special precautions need to be taken for fittings which create turbulence, such as valves, elbows or T-pieces, as long as no cavitation occurs → 21.

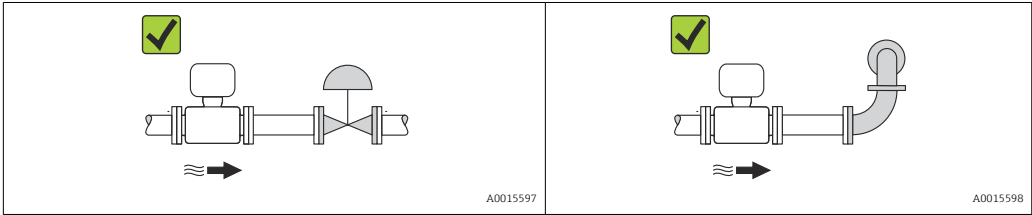

*Installation dimensions*

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

**6.1.2 Requirements from environment and process****Ambient temperature range**

|                         |                   |  |
|-------------------------|-------------------|--|
| <b>Measuring device</b> | Non-Ex            | -40 to +60 °C (-40 to +140 °F)   |
|                         | Ex na, NI version | -40 to +60 °C (-40 to +140 °F)   |
|                         | Ex ia, IS version | <ul style="list-style-type: none"> <li>■ -40 to +60 °C (-40 to +140 °F)</li> <li>■ -50 to +60 °C (-58 to +140 °F) (Order code for "Test, certificate", option JM)</li> </ul> |
| <b>Local display</b>    |                   | -20 to +60 °C (-4 to +140 °F)<br>The readability of the display may be impaired at temperatures outside the temperature range.   |

- If operating outdoors:  
Avoid direct sunlight, particularly in warm climatic regions.

**System pressure**


It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas.

Cavitation is caused if the pressure drops below the vapor pressure:

- In liquids that have a low boiling point (e.g. hydrocarbons, solvents, liquefied gases)
- In suction lines
- Ensure the system pressure is sufficiently high to prevent cavitation and outgassing.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

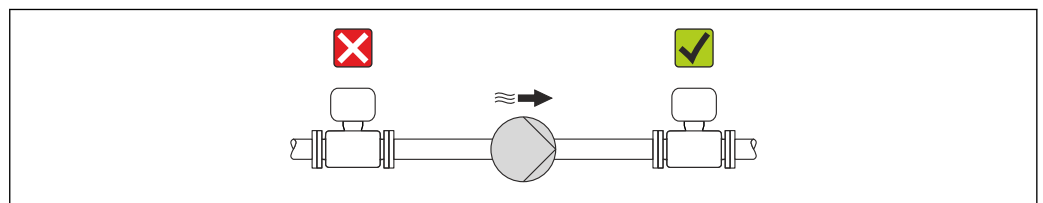


A0015594

**Thermal insulation**

In the case of some fluids, it is important that the heat radiated from the sensor to the transmitter is kept to a minimum. A wide range of materials can be used for the required insulation.

**NOTICE****Electronics overheating on account of thermal insulation!**

- Observe maximum permitted insulation height of the transmitter neck so that the transmitter head is completely free.

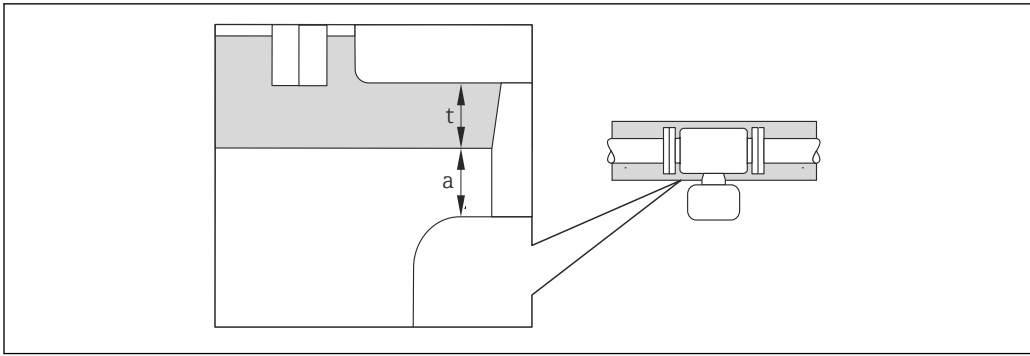


A0019919

*a* Minimum distance to insulation  
*t* maximum Insulation thickness

The minimum distance between the transmitter housing and the insulation is 10 mm (0.39 in) so that the transmitter head remains completely exposed.

**Maximum recommended insulation thickness**

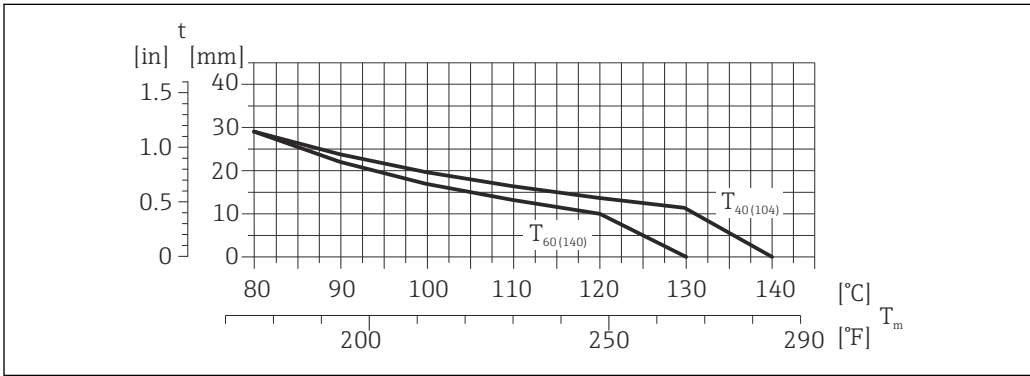


A0023173

5 Maximum recommended insulation thickness depending on the temperature of the medium and the ambient temperature

- $t$  Insulation thickness
- $T_m$  Medium temperature
- $T_{40(104)}$  Maximum recommended insulation thickness at an ambient temperature of  $T_a = 40$  °C (104 °F)
- $T_{60(140)}$  Maximum recommended insulation thickness at an ambient temperature of  $T_a = 60$  °C (140 °F)

**Maximum recommended insulation thickness for the extended temperature range and insulation**

For the extension neck for insulation version, order code for "Sensor option", option CG:

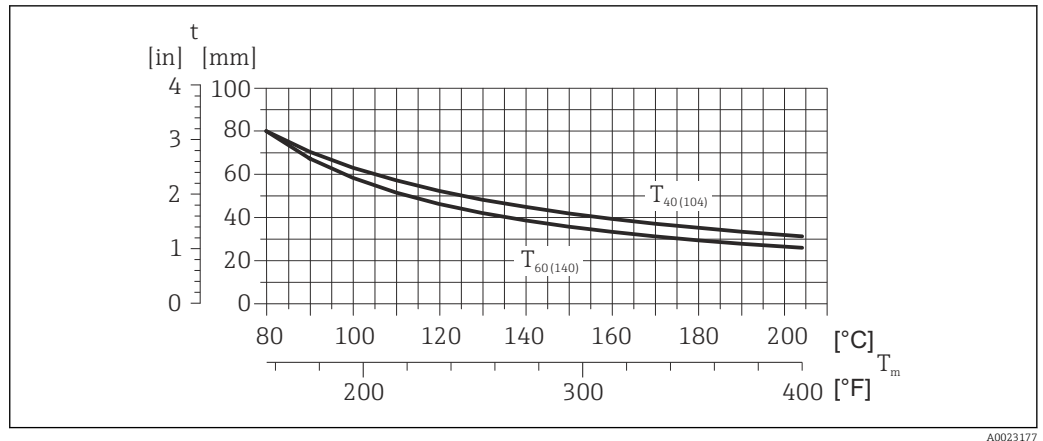

6 Maximum recommended insulation thickness depending on the temperature of the medium and the ambient temperature

$t$  Insulation thickness

$T_m$  Medium temperature

$T_{40(104)}$  Maximum recommended insulation thickness at an ambient temperature of  $T_a = 40\text{ °C}$  ( $104\text{ °F}$ )

$T_{60(140)}$  Maximum recommended insulation thickness at an ambient temperature of  $T_a = 60\text{ °C}$  ( $140\text{ °F}$ )

#### NOTICE

##### Danger of overheating with insulation

- Ensure that the temperature at the lower end of the transmitter housing does not exceed  $80\text{ °C}$  ( $176\text{ °F}$ )

#### NOTICE

##### The insulation can also be thicker than the maximum recommended insulation thickness.

Prerequisite:

- Ensure that convection takes place on a sufficiently large scale at the transmitter neck.
- Ensure that a sufficiently large area of the housing support remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.

#### Heating

#### NOTICE

##### Electronics can overheat due to elevated ambient temperature!

- Observe maximum permitted ambient temperature for the transmitter → 21.
- Depending on the fluid temperature, take the device orientation requirements into account.

#### NOTICE

##### Danger of overheating when heating

- Ensure that the temperature at the lower end of the transmitter housing does not exceed  $80\text{ °C}$  ( $176\text{ °F}$ )
- Ensure that convection takes place on a sufficiently large scale at the transmitter neck.
- Ensure that a sufficiently large area of the housing support remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.

### Heating options

If a fluid requires that no heat loss should occur at the sensor, users can avail of the following heating options:

- Electrical heating, e.g. with electric band heaters
- Via pipes carrying hot water or steam
- Via heating jackets

### Using an electrical trace heating system

If heating is regulated via phase angle control or pulse packages, magnetic fields can affect the measured values (= for values that are greater than the values approved by the EN standard (sine 30 A/m)).

For this reason, the sensor must be magnetically shielded: the housing can be shielded with tin plates or electric sheets without a privileged direction (e.g. V330-35A).

The sheet must have the following properties:

- Relative magnetic permeability  $\mu_r \geq 300$
- Plate thickness  $d \geq 0.35 \text{ mm}$  ( $d \geq 0.014 \text{ in}$ )


### Vibrations

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

## 6.1.3 Special mounting instructions

### Guarantees complete drainability

When the sensor is installed in a horizontal line, eccentric clamps can be used to ensure complete drainability. When the system is pitched in a specific direction and at a specific slope, gravity can be used to achieve complete drainability. The sensor must be mounted in the correct position to ensure full drainability in the horizontal position. Markings on the sensor show the correct mounting position to optimize drainability.

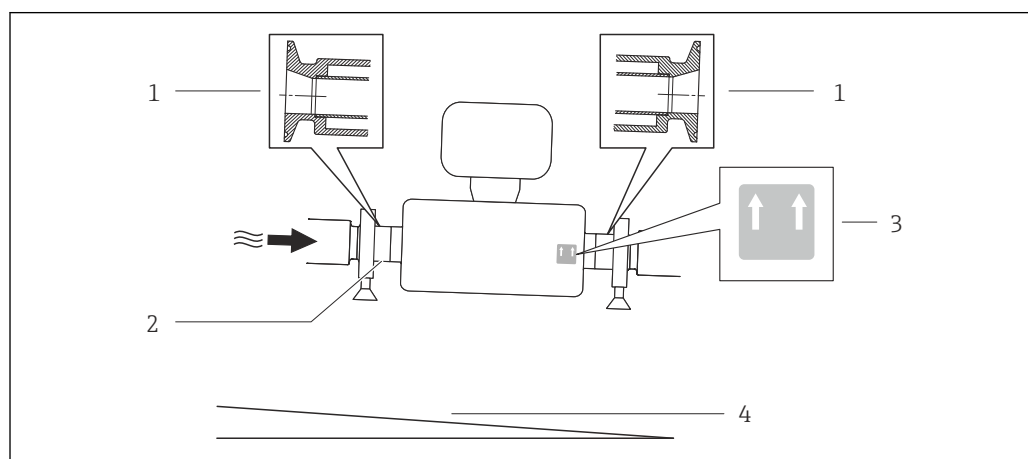

7


- 1 Eccentric clamp connection
- 2 Line on the underside indicates the lowest point of the eccentric process connection.
- 3 "This side up" label indicates which side is up
- 4 Slope the device in accordance with the hygiene guidelines. Slope: approx. 2 % or 21mm/m (0.24 in/feet)

### Securing with mounting clamp in the case of hygiene connections

It is not necessary to provide additional support for the sensor for operational performance purposes. If, however, additional support is required for installation purposes, the following dimensions must be observed.



Use mounting clamp with lining between clamp and measuring instrument.

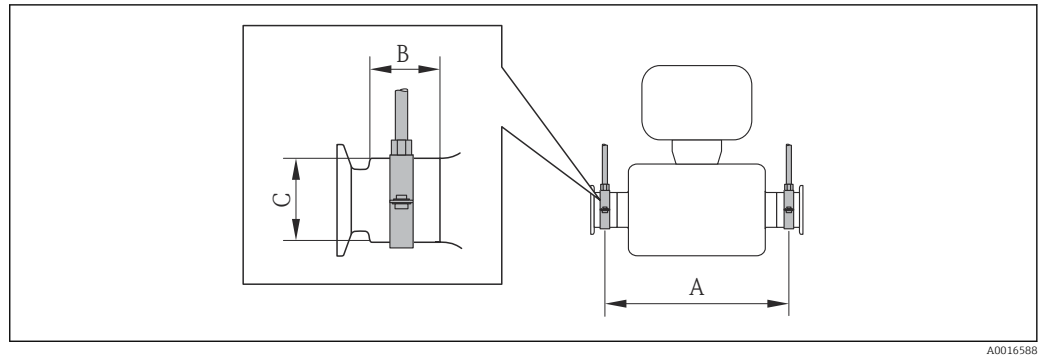

A0016588

### SI units

| DN [mm] | 8   | 15  | 15 FB | 25   | 25 FB | 40  | 40 FB | 50  | 50 FB | 80   |
|---------|-----|-----|-------|------|-------|-----|-------|-----|-------|------|
| A [mm]  | 373 | 409 | 539   | 539  | 668   | 668 | 780   | 780 | 1152  | 1152 |
| B [mm]  | 20  | 20  | 30    | 30   | 28    | 28  | 35    | 35  | 57    | 57   |
| C [mm]  | 40  | 40  | 44.5  | 44.5 | 60    | 60  | 80    | 80  | 90    | 90   |

### US units

| DN [in] | $\frac{3}{8}$ | $\frac{1}{2}$ | $\frac{1}{2}$ FB | 1     | 1 FB | 1 $\frac{1}{2}$ | 1 $\frac{1}{2}$ FB | 2     | 2 FB  | 3     |
|---------|---------------|---------------|------------------|-------|------|-----------------|--------------------|-------|-------|-------|
| A [in]  | 14.69         | 16.1          | 21.22            | 21.22 | 26.3 | 26.3            | 30.71              | 30.71 | 45.35 | 45.35 |
| B [in]  | 0.79          | 0.79          | 1.18             | 1.18  | 1.1  | 1.1             | 1.38               | 1.38  | 2.24  | 2.24  |
| C [in]  | 1.57          | 1.57          | 1.75             | 1.75  | 2.36 | 2.36            | 3.15               | 3.15  | 3.54  | 3.54  |

### Zero point adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions → 103. Therefore, a zero point adjustment in the field is generally not required.

Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

**i** Zero point adjustment is performed via the **Zero point adjustment control** parameter (→ 60).

## 6.2 Mounting the measuring device

### 6.2.1 Required tools

#### For sensor

For flanges and other process connections: Corresponding mounting tools

### 6.2.2 Preparing the measuring device

1. Remove all remaining transport packaging.
2. Remove any protective covers or protective caps present from the sensor.
3. Remove stick-on label on the electronics compartment cover.


### 6.2.3 Mounting the measuring device

#### **⚠ WARNING**

#### **Danger due to improper process sealing!**

- ▶ Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ▶ Ensure that the gaskets are clean and undamaged.
- ▶ Install the gaskets correctly.

1. Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the fluid.
2. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

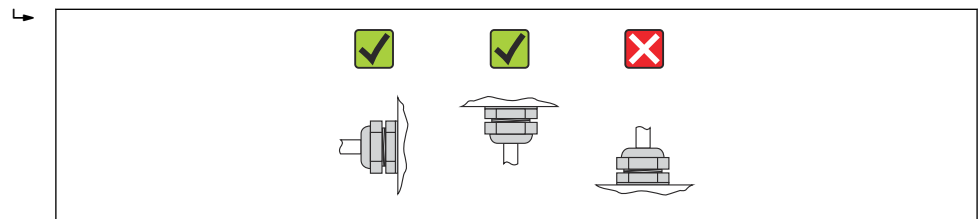

A0013964


### 6.2.4 Turning the display module

The local display is only available with the following device version:

Order code for "Display; Operation", option **B**: 4-line; lit, via communication


The display module can be turned to optimize display readability.

**Aluminum housing version, AlSi10Mg, coated**

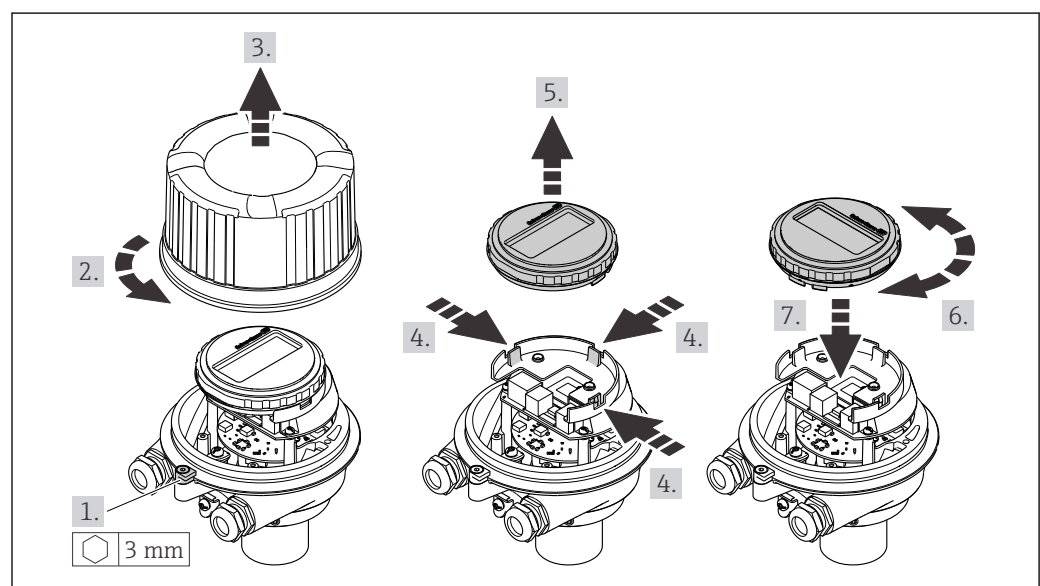

A0023192


Compact and ultra-compact housing version, hygienic, stainless

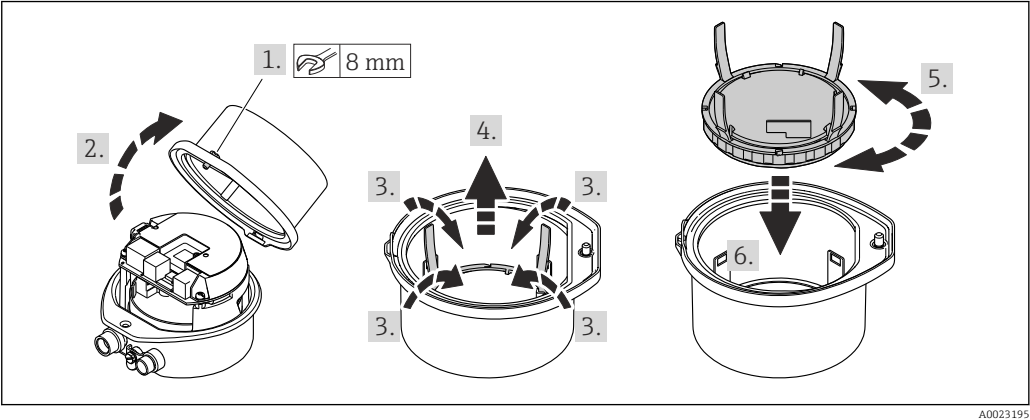

6.3 Post-installation check

|  |                          |
|--|--------------------------|
| Is the device undamaged (visual inspection)?   | <input type="checkbox"/> |
| Does the measuring device conform to the measuring point specifications?<br>For example: <ul style="list-style-type: none"><li>■ Process temperature → 108</li><li>■ Process pressure (refer to the chapter on "Pressure-temperature ratings" of the "Technical Information" document)</li><li>■ Ambient temperature → 21</li><li>■ Measuring range → 97</li></ul> | <input type="checkbox"/> |
| Has the correct orientation for the sensor been selected ? <ul style="list-style-type: none"><li>■ According to sensor type</li><li>■ According to medium temperature</li><li>■ According to medium properties (outgassing, with entrained solids)</li></ul>   | <input type="checkbox"/> |
| Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping → 20?   | <input type="checkbox"/> |
| Are the measuring point identification and labeling correct (visual inspection)?   | <input type="checkbox"/> |
| Is the device adequately protected from precipitation and direct sunlight?   | <input type="checkbox"/> |
| Are the securing screw and securing clamp tightened securely?  | <input type="checkbox"/> |

## 7 Electrical connection

 The measuring device does not have an internal circuit breaker. For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.

### 7.1 Connection conditions

#### 7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp (on aluminum housing): Allen screw 3 mm
- For securing screw (for stainless steel housing): open-ended wrench 8 mm
- Wire stripper
- When using stranded cables: crimping tool for ferrule

#### 7.1.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

##### Electrical safety

In accordance with applicable federal/national regulations.

##### Permitted temperature range

- $-40\text{ °C}$  ( $-40\text{ °F}$ ) to  $+80\text{ °C}$  ( $+176\text{ °F}$ )
- Minimum requirement: cable temperature range  $\geq$  ambient temperature  $+20\text{ K}$


##### Power supply cable

Standard installation cable is sufficient.

##### Signal cable

###### *EtherNet/IP*

The standard ANSI/TIA/EIA-568-B.2 Annex specifies CAT 5 as the minimum category for a cable used for EtherNet/IP. CAT 5e and CAT 6 are recommended.

 For more information on planning and installing EtherNet/IP networks, please refer to the "Media Planning and Installation Manual. EtherNet/IP" of ODVA Organization.

##### Cable diameter

- Cable glands supplied:  
M20  $\times$  1.5 with cable  $\varnothing$  6 to 12 mm (0.24 to 0.47 in)
- Spring terminals:  
Wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)

7.1.3 Terminal assignment


Transmitter

EtherNet/IP connection version

Order code for "Output", option **N**

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

| Order code for "Housing"   | Connection methods available |                      | Possible options for order code "Electrical connection"   |
|--|------------------------------|----------------------|---|
|  | Output                       | Power supply         |   |
| Options <b>A, B</b>  | Device plugs<br>→ 30         | Terminals            | <ul style="list-style-type: none"><li>Option <b>L</b>: plug M12x1 + thread NPT ½"</li><li>Option <b>N</b>: plug M12x1 + coupling M20</li><li>Option <b>P</b>: plug M12x1 + thread G ½"</li><li>Option <b>U</b>: plug M12x1 + thread M20</li></ul> |
| Options <b>A, B, C</b>   | Device plugs<br>→ 30         | Device plugs<br>→ 30 | Option <b>Q</b> : 2 x plug M12x1  |
| Order code for "Housing": <ul style="list-style-type: none"><li>Option <b>A</b>: compact, coated aluminum</li><li>Option <b>B</b>: compact, hygienic, stainless</li><li>Option <b>C</b> ultra-compact, hygienic, stainless</li></ul> |                              |                      |   |

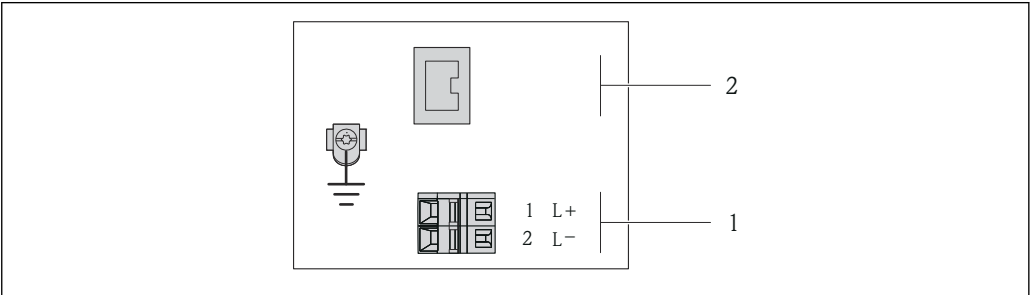

A0017054

8 EtherNet/IP terminal assignment


- 1 Power supply: DC 24 V
- 2 EtherNet/IP

| Order code for "Output"                                   | Terminal number        |                                       |
|---|------------------------|---------------------------------------|
|   | Power supply<br>2 (L-) | Output<br>Device plug M12x1<br>1 (L+) |
| Option <b>N</b>   | DC 24 V                | EtherNet/IP                           |
| Order code for "Output":<br>Option <b>N</b> : EtherNet/IP |                        |                                       |


7.1.4 Pin assignment, device plug

EtherNet/IP

Device plug for supply voltage (device side)
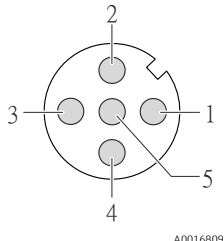
| <br>A0016809 | Pin    | Assignment  |                     |
|---|--------|-------------|---------------------|
|   | 1      | L+          | DC 24 V             |
|   | 2      |             |                     |
|   | 3      |             |                     |
|   | 4      | L-          | DC 24 V             |
|   | 5      |             | Grounding/shielding |
|   | Coding |             |                     |
|   | A      | Plug/socket |                     |
|   |        | Plug        |                     |

Device plug for signal transmission (device side)
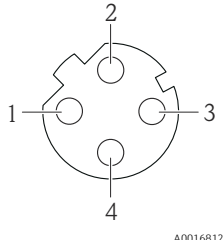
| <br>A0016812 | Pin    | Assignment  |    |
|--|--------|-------------|----|
|  | 1      | +           | Tx |
|  | 2      | +           | Rx |
|  | 3      | -           | Tx |
|  | 4      | -           | Rx |
|  | Coding |             |    |
|  | D      | Plug/socket |    |
|  |        | Socket      |    |

7.1.5 Preparing the measuring device

1. Remove dummy plug if present.
2. **NOTICE**  
**Insufficient sealing of the housing!**  
Operational reliability of the measuring device could be compromised.  
► Use suitable cable glands corresponding to the degree of protection.  
  
If measuring device is delivered without cable glands:  
Provide suitable cable gland for corresponding connecting cable → 28.
3. If measuring device is delivered with cable glands:  
Observe cable specification → 28.

7.2 Connecting the measuring device

**NOTICE**


**Limitation of electrical safety due to incorrect connection!**

- Have electrical connection work carried out by correspondingly trained specialists only.
- Observe applicable federal/national installation codes and regulations.
- Comply with local workplace safety regulations.
- For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.

### 7.2.1 Connecting the transmitter

The connection of the transmitter depends on the following order codes:


- Housing version: compact or ultra-compact
- Connection version: device plug or terminals

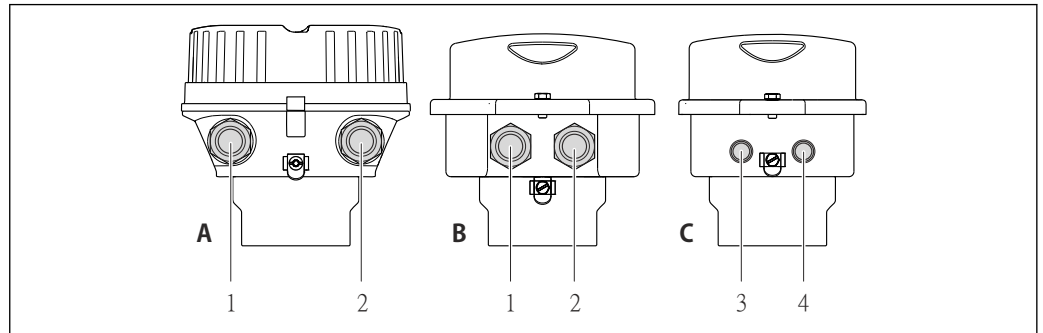

A0016924

9 Housing versions and connection versions

- A Housing version: compact, aluminum coated  
 B Housing version: compact hygienic, stainless  
 1 Cable entry or device plug for signal transmission  
 2 Cable entry or device plug for supply voltage  
 C Housing version: ultra-compact, hygienic, stainless:  
 3 Device plug for signal transmission  
 4 Device plug for supply voltage

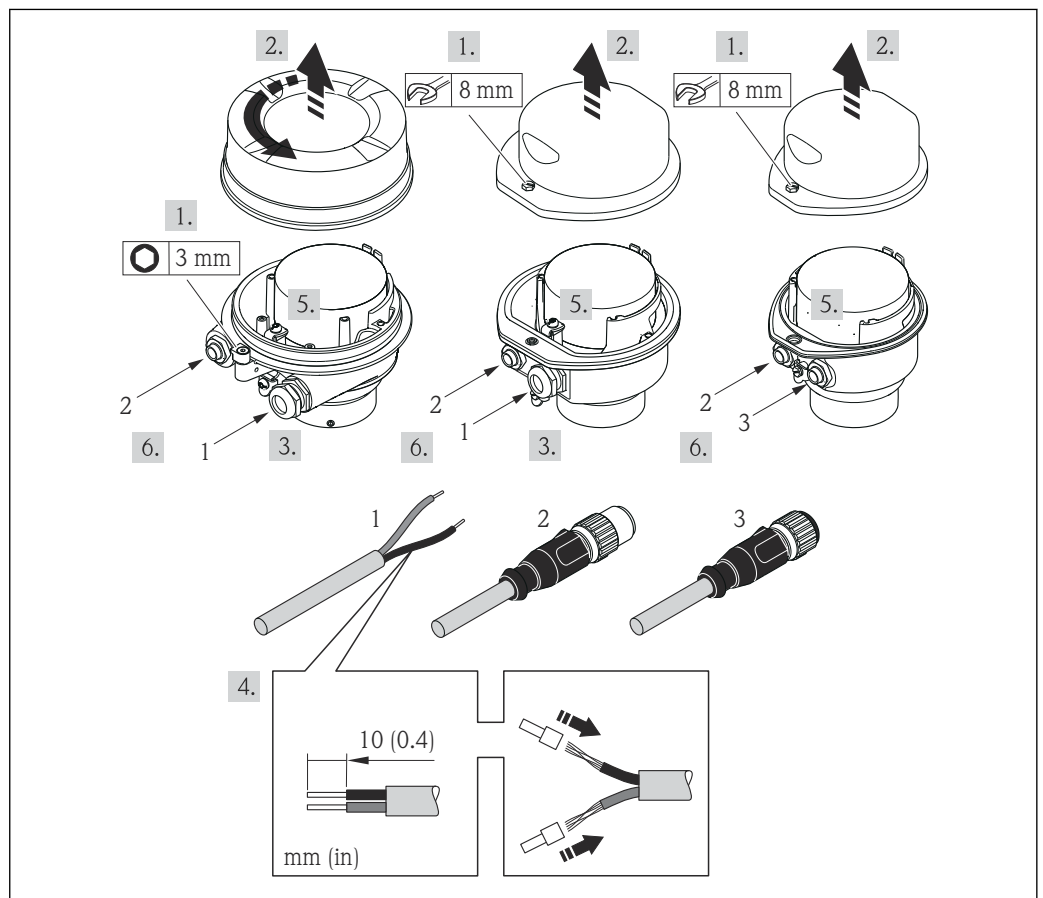

A0017844

10 Device versions with connection examples

- 1 Cable  
 2 Device plug for signal transmission  
 3 Device plug for supply voltage

For device version with device plug: follow step 6 only.


1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary  
→ 113.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
5. Connect the cable in accordance with the terminal assignment or the device plug pin assignment .
6. Depending on the device version, tighten the cable glands or plug in the device plug and tighten .
7. **⚠ WARNING**  
**Housing degree of protection may be voided due to insufficient sealing of the housing.**  
► Screw in the screw without using any lubricant. The threads on the cover are coated with a dry lubricant.

Reverse the removal procedure to reassemble the transmitter.

## 7.2.2 Ensuring potential equalization

### Requirements


No special measures for potential equalization are required.

 For devices intended for use in hazardous locations, please observe the guidelines in the Ex documentation (XA).


## 7.3 Special connection instructions

### 7.3.1 Connection examples

#### EtherNet/IP

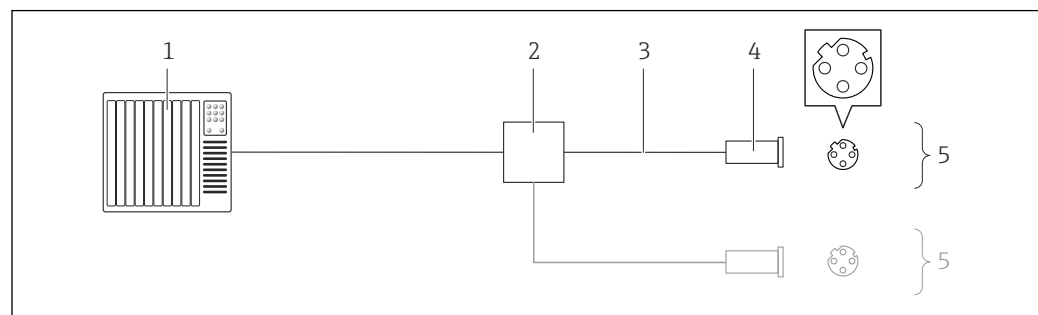

A0016805

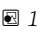 11 Connection example for EtherNet/IP

- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications → 28
- 4 Device plugs
- 5 Transmitter



## 7.4 Hardware settings

### 7.4.1 Setting the device address



#### EtherNet/IP

The IP address of the measuring device can be configured for the network via DIP switches.


#### Addressing data


| IP address and configuration options                |           |           |  |
|---|-----------|-----------|--|
| 1st octet   | 2nd octet | 3rd octet | 4th octet  |
| 192.  | 168.      | 1.        | XXX  |
| ↓<br>Can only be configured via software addressing |           |           | ↓<br>Can be configured via software addressing and hardware addressing |

|                          |   |
|--------------------------|---|
| IP address range         | 1 to 254 (4th octet)  |
| IP address broadcast     | 255   |
| Addressing mode ex works | Software addressing; all DIP switches for hardware addressing are set to OFF. |
| IP address ex works      | DHCP server active  |

 For device addressing via software →  51

#### Setting the address

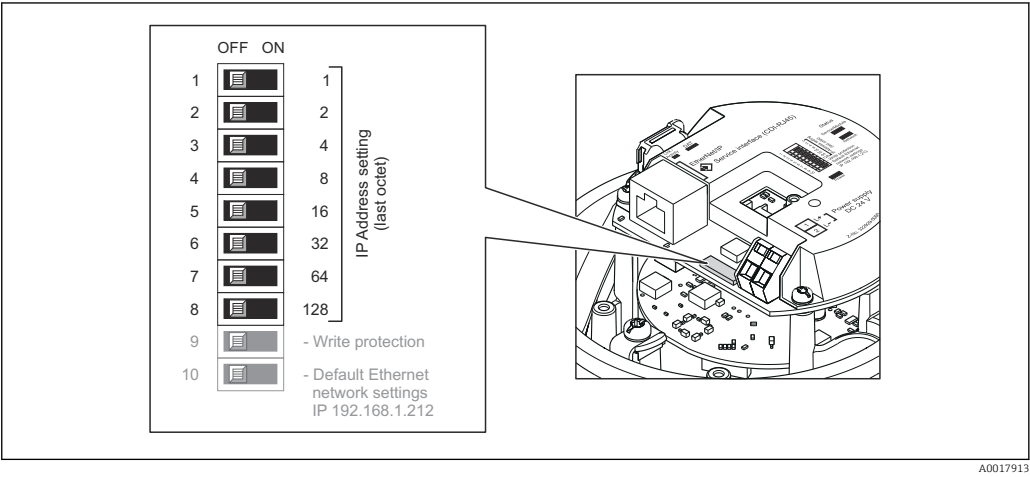


1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary →  113.
3. Set the desired IP address using the corresponding DIP switches on the I/O electronics module.  
↳ Hardware addressing with the configured IP address is enabled after 10 s.
4. Reverse the removal procedure to reassemble the transmitter.

## 7.5 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

1. Check that the housing seals are clean and fitted correctly. Dry, clean or replace the seals if necessary.
2. Tighten all housing screws and screw covers.
3. Firmly tighten the cable glands.
4. To ensure that moisture does not enter the cable entry, route the cable so that it loops down before the cable entry ("water trap").

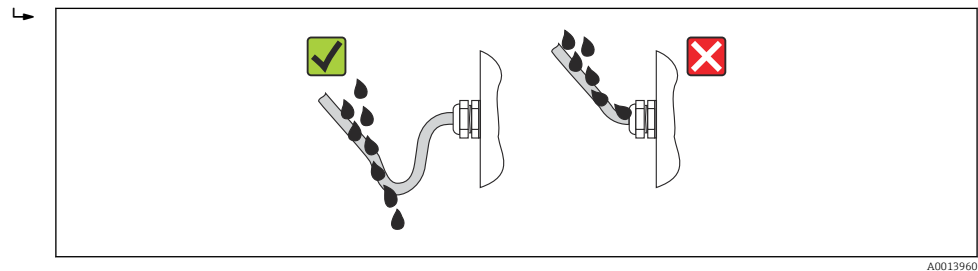

A0013960


5. Insert dummy plugs into unused cable entries.

## 7.6 Post-connection check

|   |                          |
|---|--------------------------|
| Are cables or the device undamaged (visual inspection)?   | <input type="checkbox"/> |
| Do the cables comply with the requirements → 28?  | <input type="checkbox"/> |
| Do the cables have adequate strain relief?  | <input type="checkbox"/> |
| Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" → 34 ?     | <input type="checkbox"/> |
| Depending on the device version: are all the device plugs firmly tightened → 31?                            | <input type="checkbox"/> |
| Does the supply voltage match the specifications on the transmitter nameplate ?                             | <input type="checkbox"/> |
| Is the terminal assignment or the pin assignment of the device plug correct?                                | <input type="checkbox"/> |
| If supply voltage is present, is the power LED on the electronics module of the transmitter lit green → 12? | <input type="checkbox"/> |
| Depending on the device version, is the securing clamp or fixing screw firmly tightened?                    | <input type="checkbox"/> |

## 8 Operation options


### 8.1 Overview of operation options

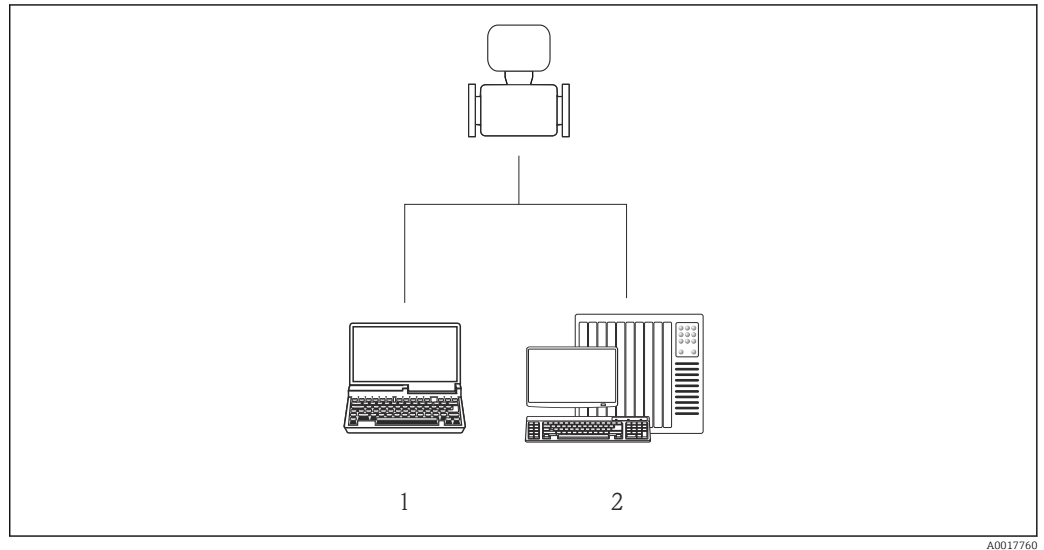



- 1 Computer with Web browser (e.g. Internet Explorer) or with "FieldCare" operating tool
- 2 Automation system, e.g. "RSLogix" (Rockwell Automation) and work station for measuring device operation with Add-on Profile Level 3 for "RSLogix 5000" software (Rockwell Automation)

## 8.2 Structure and function of the operating menu

### 8.2.1 Structure of the operating menu

 For an overview of the operating menu with menus and parameters

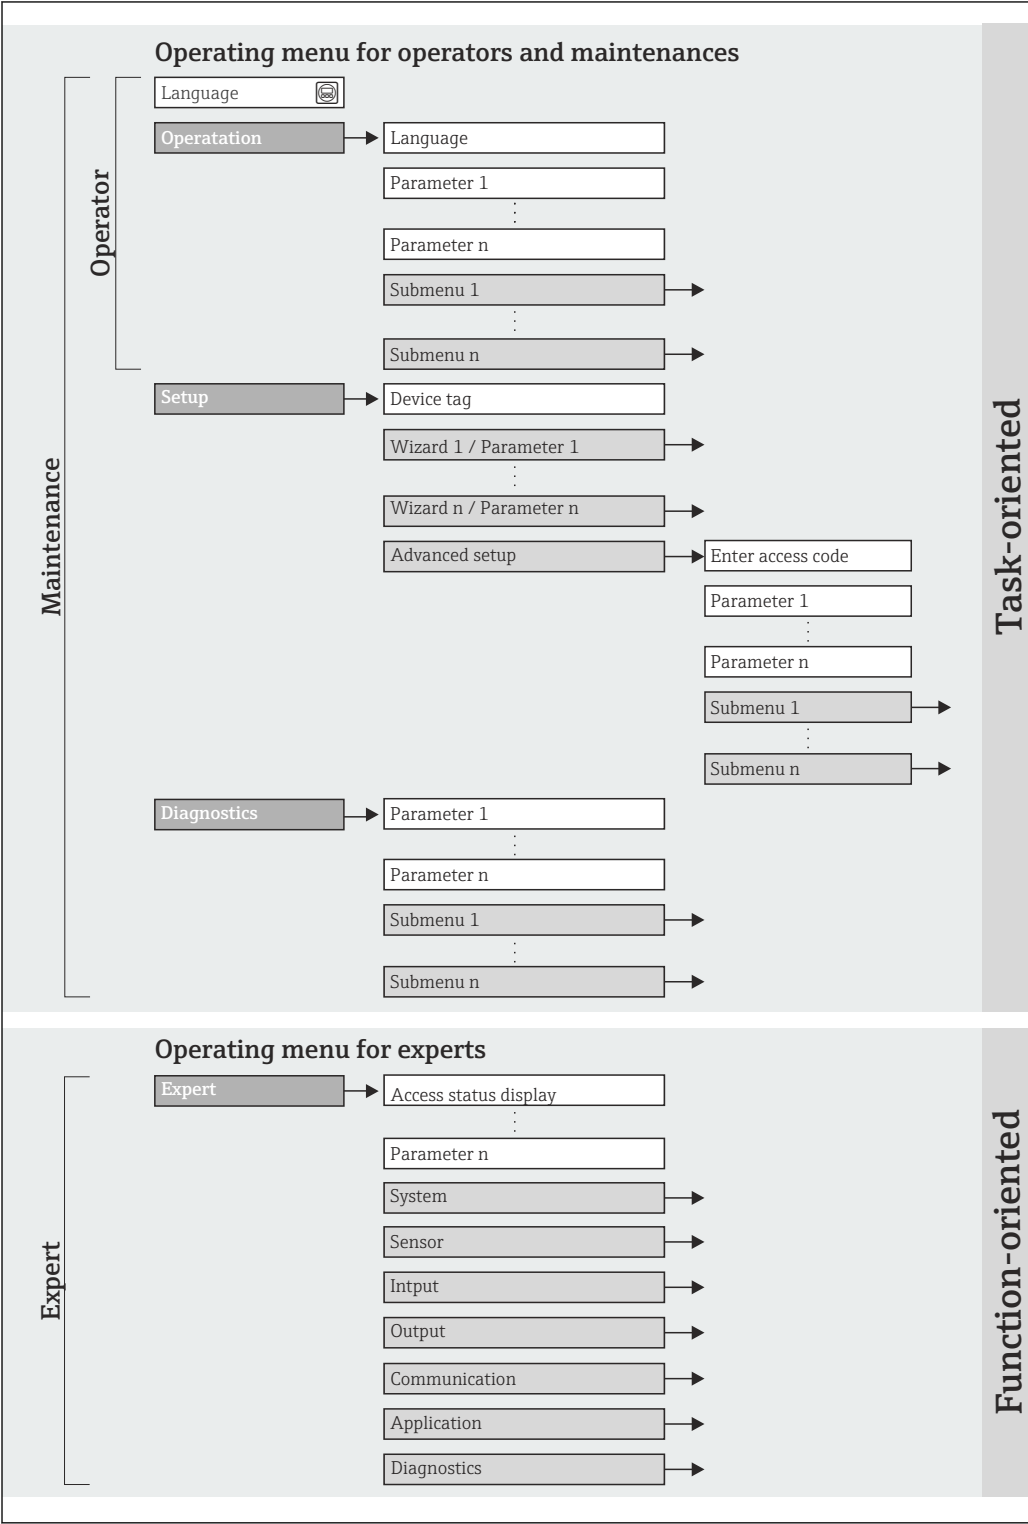

 12 Schematic structure of the operating menu

A0018237-EN

## 8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

| Menu        |                   | User role and tasks  | Content/meaning   |
|-------------|-------------------|--|---|
| Operation   | task-oriented     | <b>Role "Operator", "Maintenance"</b><br>Tasks during operation:<br>Reading measured values  | <ul style="list-style-type: none"> <li>Defining the Web server operating language</li> <li>Resetting and controlling totalizers</li> </ul>  |
| Setup       |                   | <b>"Maintenance" role</b><br>Commissioning: <ul style="list-style-type: none"> <li>Configuration of the measurement</li> <li>Configuration of the communication interface</li> </ul>   | Submenus for fast commissioning: <ul style="list-style-type: none"> <li>Setting the individual system units</li> <li>Defining the medium</li> <li>Configuration of the digital communication interface</li> <li>Configuring the low flow cut off</li> <li>Configuring partial and empty pipe detection</li> </ul> <b>"Advanced setup" submenu:</b> <ul style="list-style-type: none"> <li>For more customized configuration of the measurement (adaptation to special measuring conditions)</li> <li>Configuration of totalizers</li> </ul> <b>"Device reset" submenu</b><br>Resets the device configuration to certain settings  |
| Diagnostics |                   | <b>"Maintenance" role</b><br>Fault elimination: <ul style="list-style-type: none"> <li>Diagnostics and elimination of process and device errors</li> <li>Measured value simulation</li> </ul>  | Contains all parameters for error detection and analyzing process and device errors: <ul style="list-style-type: none"> <li><b>"Diagnostic list" submenu</b><br/>Contains up to 5 currently pending diagnostic messages.</li> <li><b>"Event logbook" submenu</b><br/>Contains 20 event messages that have occurred.</li> <li><b>"Device information" submenu</b><br/>Contains information for identifying the device.</li> <li><b>"Measured values" submenu</b><br/>Contains all current measured values.</li> <li><b>"Simulation" submenu</b><br/>Is used to simulate measured values or output values.</li> </ul>   |
| Expert      | function-oriented | Tasks that require detailed knowledge of the function of the device: <ul style="list-style-type: none"> <li>Commissioning measurements under difficult conditions</li> <li>Optimal adaptation of the measurement to difficult conditions</li> <li>Detailed configuration of the communication interface</li> <li>Error diagnostics in difficult cases</li> </ul> | Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: <ul style="list-style-type: none"> <li><b>"System" submenu</b><br/>Contains all higher-order device parameters that do not pertain either to measurement or the measured value communication.</li> <li><b>"Sensor" submenu</b><br/>Configuration of the measurement.</li> <li><b>"Communication" submenu</b><br/>Configuration of the digital communication interface and the Web server.</li> <li><b>"Application" submenu</b><br/>Configuration of the functions that go beyond the actual measurement (e.g. totalizer).</li> <li><b>"Diagnostics" submenu</b><br/>Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.</li> </ul> |


## 8.3 Access to the operating menu via the Web browser

### 8.3.1 Function range


Thanks to the integrated Web server the device can be operated and configured via a Web browser. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

### 8.3.2 Prerequisites



#### Computer hardware

|                  |   |
|------------------|---|
| Interface        | The computer must have an RJ45 interface.   |
| Connecting cable | Standard Ethernet cable with RJ45 connector.  |
| Screen           | Recommended size: ≥12" (depends on the screen resolution)<br> Web server operation is not optimized for touch screens! |



#### Computer software


|                               |  |
|-------------------------------|--|
| Recommended operating systems | Microsoft Windows 7 or higher.<br> Microsoft Windows XP is supported. |
| Web browsers supported        | <ul style="list-style-type: none"> <li>▪ Microsoft Internet Explorer 8 or higher</li> <li>▪ Mozilla Firefox</li> <li>▪ Google chrome</li> </ul>        |


#### Computer settings

|  |  |
|--|--|
| User rights                              | User rights are required for TCP/IP and proxy server settings (for changes to the IP address, subnet mask etc.).   |
| Proxy server settings of the Web browser | The Web browser setting <i>Use proxy server for LAN</i> must be <b>disabled</b> .  |
| JavaScript                               | JavaScript must be enabled.<br> If JavaScript cannot be enabled: enter <code>http://XXX.XXX.X.XXX/basic.html</code> in the address line of the Web browser, e.g. <code>http://192.168.1.212/basic.html</code> . A fully functional but simplified version of the operating menu structure starts in the Web browser.<br> When installing a new firmware version: To enable correct data display, clear the temporary memory (cache) of the Web browser under <b>Internet options</b> . |

#### Measuring device

|            |   |
|------------|---|
| Web server | Web server must be enabled; factory setting: ON<br> For information on enabling the Web server →  41  |
| IP address | If the IP address of the device is not known, communication with the Web server can be established via the standard IP address 192.168.1.212. The DHCP function is enabled in the device at the factory, i.e. the device expects an IP address to be assigned by the network. This function can be disabled and the device can be set to the standard IP address 192.168.1.212: set switch DIP switch No. 10 from OFF → ON. |

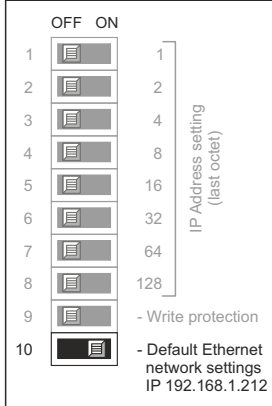

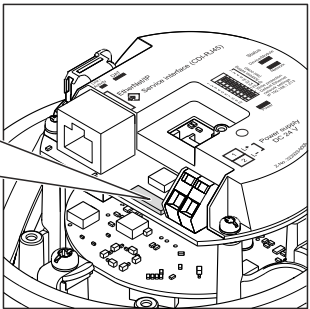

A0017965

- Once the DIP switch has been activated, the device must be restarted before the device uses the standard IP address.
- If the standard IP address (DIP switch No. 10 = ON) is used, there is no connection to the EtherNet/IP network.

### 8.3.3 Establishing a connection

#### Configuring the Internet protocol of the computer

The following information refers to the default Ethernet settings of the device.

IP address of the device: 192.168.1.212 (factory setting)


|                        |   |
|------------------------|---|
| <b>IP address</b>      | 192.168.1.XXX; for XXX all numerical values except: 0, 212 and 255 → e.g. 192.168.1.213 |
| <b>Subnet mask</b>     | 255.255.255.0   |
| <b>Default gateway</b> | 192.168.1.212 or leave cells empty  |

1. Switch on the measuring device and connect to the computer via the cable → 43.
2. If a 2nd network card is not used: all the applications on the notebook should be closed, or all the applications that require the Internet or network, such as e-mail, SAP applications, Internet or Windows Explorer, i.e. close all open Internet browsers.
3. Configure the properties of the Internet protocol (TCP/IP) as defined in the table above.

#### Starting the Web browser

1. Start the Web browser on the computer.
2. If the IP address of the measuring device is known, enter the defined device address in the address line of the Web browser. If it is unknown, set DIP switch No. 10 to ON, restart the device and enter the standard IP address: 192.168.1.212 → 39.

The login page appears.

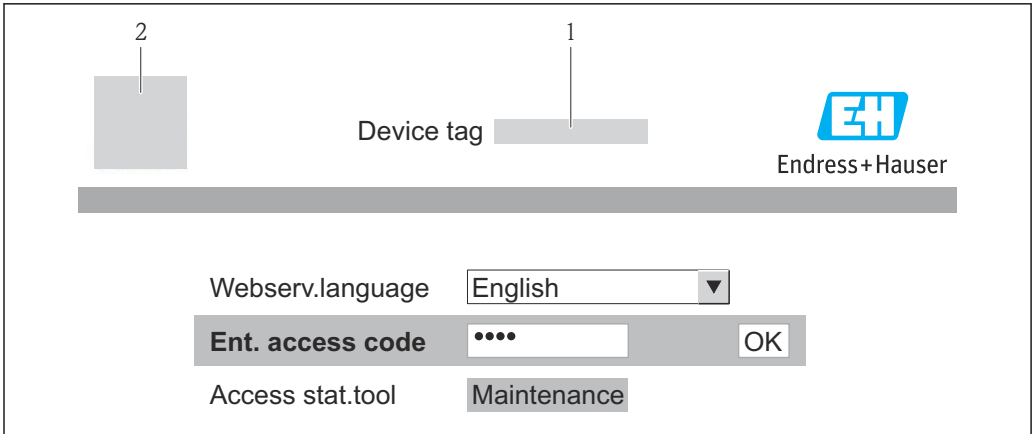

A0017362

- 1 Device tag → 52
- 2 Picture of device

**i** If a login page does not appear, or if the page is incomplete → 73


8.3.4 Logging on

- 1. Select the preferred operating language for the Web browser.
- 2. Enter the access code.
- 3. Press **OK** to confirm your entry.

|             |   |
|-------------|---|
| Access code | 0000 (factory setting); can be changed by customer → 66 |
|-------------|---|

**i** If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

8.3.5 User interface

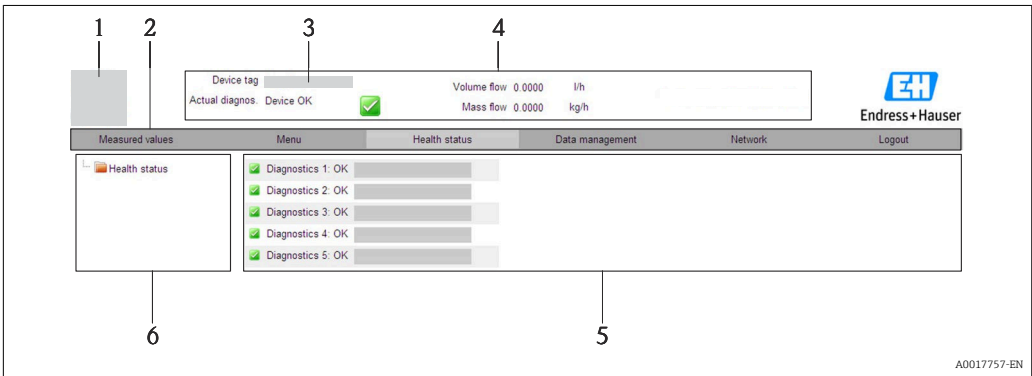

A0017757-EN

- 1 Picture of device
- 2 Function row with 6 functions
- 3 Device tag
- 4 Header
- 5 Working area
- 6 Navigation area

Header

The following information appears in the header:

- Device tag → 52
- Device status with status signal → 79
- Current measured values



**Function row**

| Functions             | Meaning   |
|-----------------------|---|
| Measured values       | The measured values of the device are displayed   |
| Menu                  | Access to the operating menu structure of the device, same as for the operating tool  |
| Device status         | Displays the diagnostic messages currently pending, listed in order of priority   |
| Data management       | <ul style="list-style-type: none"> <li>▪ Data exchange between PC and measuring device: <ul style="list-style-type: none"> <li>▪ Upload the configuration from the device (XML format, create configuration back-up)</li> <li>▪ Save the configuration to the device (XML format, restore configuration)</li> <li>▪ Export the event list (.csv file)</li> <li>▪ Export parameter settings (.csv file, create documentation of the measuring point configuration)</li> <li>▪ Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)</li> </ul> </li> <li>▪ Upload the device driver for system integration from the device</li> </ul> |
| Network configuration | Configuration and checking of all the parameters required for establishing the connection to the device: <ul style="list-style-type: none"> <li>▪ Network settings (e.g. IP address, MAC address)</li> <li>▪ Device information (e.g. serial number, firmware version)</li> </ul>   |
| Logout                | End the operation and call up the login page  |

**Navigation area**

If a function is selected in the function bar, the submenus of the function open in the navigation area. The user can now navigate through the menu structure.

**Working area**

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

**8.3.6 Disabling the Web server**

The Web server for the measuring device can enabled and disabled as required via the **Web server functionality** parameter.

**Navigation**

"Expert" menu → Communication → Web server

**Parameter overview with brief description**

| Parameter                | Description                       | Selection   |
|--------------------------|-----------------------------------|---|
| Web server functionality | Switch the Web server on and off. | <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul> |

**Enabling the Web server**

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

Via "FieldCare" operating tool

### 8.3.7 Logging out

**i** Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.

1. Select the **Logout** entry in the function row.  
↳ The home page with the Login box appears.
2. Close the Web browser.
3. Reset the modified properties of the Internet protocol (TCP/IP) if they are no longer needed → 39.


**i** If communication with the Web server was established via the standard IP address 192.168.1.212, DIP switch No. 10 must be reset (from ON → OFF) and the IP address of the device is active again for network communication.

## 8.4 Access to the operating menu via the operating tool

### 8.4.1 Connecting the operating tool

#### Via Ethernet-based fieldbus

This communication interface is available in device versions with EtherNet/IP.

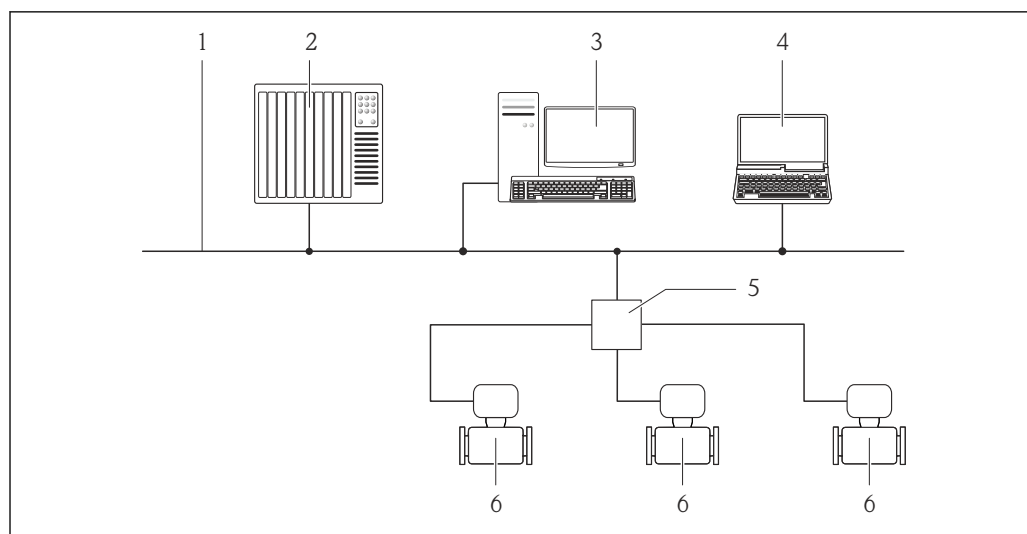


A0016961

**13** Options for remote operation via Ethernet-based fieldbus

- 1 Ethernet network
- 2 Automation system, e.g. "RSLogix" (Rockwell Automation)
- 3 Workstation for measuring device operation: with Add-on Profile Level 3 for "RSLogix 5000" (Rockwell Automation) or with Electronic Data Sheet (EDS)
- 4 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 5 Ethernet switch
- 6 Measuring device

### Via service interface (CDI-RJ45)

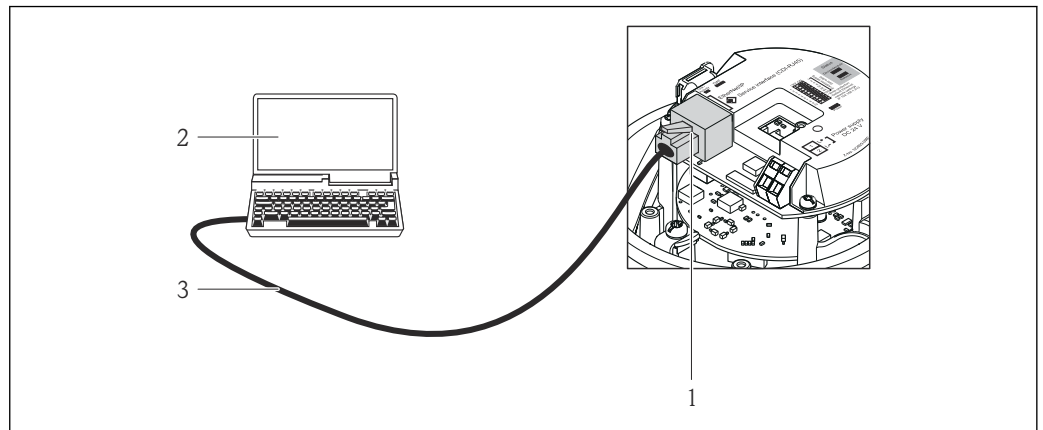

A0016940

14 Connection for order code for "Output", option N: EtherNet/IP

- 1 Service interface (CDI -RJ45) and EtherNet/IP interface of the measuring device with access to the integrated Web server
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

## 8.4.2 FieldCare

### Function scope

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access takes place via:

Service interface CDI-RJ45 → 43

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook



For details, see Operating Instructions BA00027S and BA00059S

### Source for device description files

See data → 45

### Establishing a connection

Via service interface (CDI-RJ45)


1. Start FieldCare and launch the project.
2. In the network: Add a device.
  - ↳ The **Add device** window opens.
3. Select the **CDI Communication TCP/IP** option from the list and press **OK** to confirm.
4. Right-click **CDI Communication TCP/IP** and select the **Add device** option in the context menu that opens.
5. Select the desired device from the list and press **OK** to confirm.
  - ↳ The **CDI Communication TCP/IP (Configuration)** window opens.

6. Enter the device address in the **IP address** field and press **Enter** to confirm: 192.168.1.212 (factory setting); if the IP address is not known → 68.
7. Establish the online connection to the device.



For details, see Operating Instructions BA00027S and BA00059S

## User interface

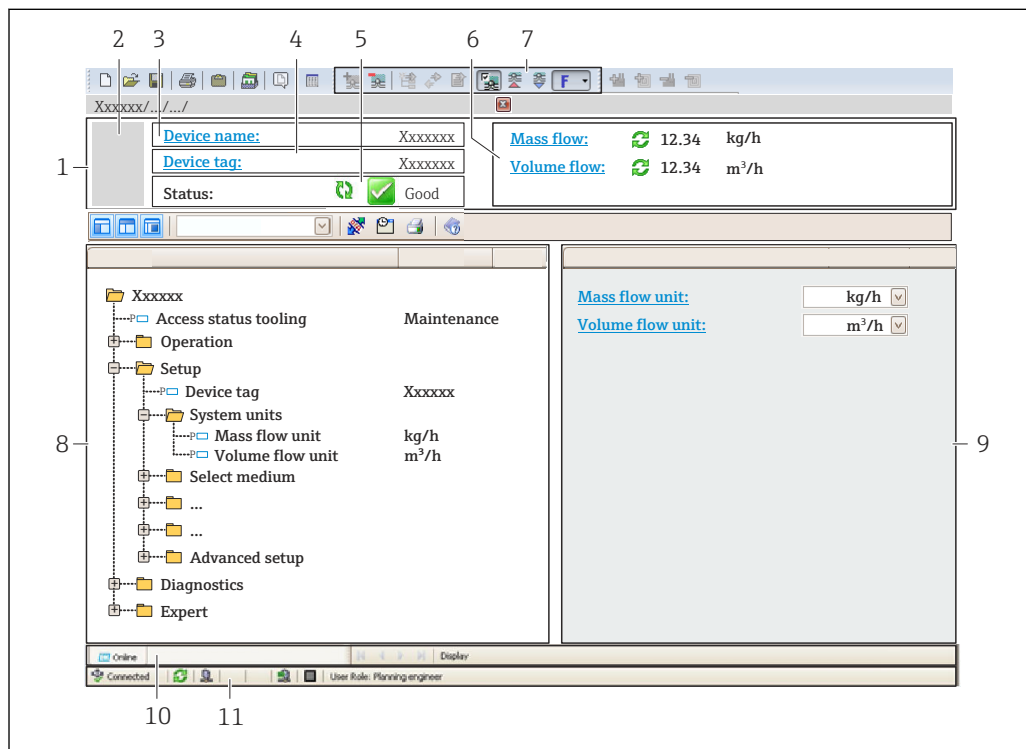

A0021051-EN

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Device tag → 52
- 5 Status area with status signal → 79
- 6 Display area for current measured values → 69
- 7 Event list with additional functions such as save/load, events list and document creation
- 8 Navigation area with operating menu structure
- 9 Operating range
- 10 Range of action
- 11 Status area

## 9 System integration

### 9.1 Overview of device description files

#### 9.1.1 Current version data for the device

|                                  |  |  |
|----------------------------------|--|--|
| Firmware version                 | 01.02.zz   | <ul style="list-style-type: none"> <li>On the title page of the Operating instructions</li> <li>On transmitter nameplate → 14</li> <li>Parameter <b>firmware version</b><br/>Diagnostics → Device info → Firmware version</li> </ul> |
| Release date of firmware version | 10.2014  | ---  |
| Manufacturer ID                  | 0x49E  | <b>Manufacturer ID</b> parameter<br>Diagnostics → Device info → Manufacturer ID  |
| Device type ID                   | 0x104A   | <b>Device type</b> parameter<br>Diagnostics → Device info → Device type  |
| Device revision                  | <ul style="list-style-type: none"> <li>Major revision 2</li> <li>Minor revision 1</li> </ul> | <ul style="list-style-type: none"> <li>On transmitter nameplate → 14</li> <li><b>Device revision</b> parameter<br/>Diagnostics → Device info → Device revision</li> </ul>  |
| Device profile                   | Generic device (product type: 0x2B)  |  |

#### 9.1.2 Operating tools

| Operating tool via Service interface (CDI) | Sources for obtaining device descriptions   |
|--|---|
| FieldCare                                  | <ul style="list-style-type: none"> <li><a href="http://www.endress.com">www.endress.com</a> → Download Area</li> <li>CD-ROM (contact Endress+Hauser)</li> <li>DVD (contact Endress+Hauser)</li> </ul> |

### 9.2 Overview of system files

| System files                            | Version  | Description  | How to acquire   |
|---|--|--|--|
| Electronic Data Sheet (EDS system file) | 2.1  | Certified in accordance with the following ODVA guidelines: <ul style="list-style-type: none"> <li>Conformance test</li> <li>Performance test</li> <li>PlugFest</li> </ul> Embedded EDS Support (File Object 0x37) | <ul style="list-style-type: none"> <li><a href="http://www.endress.com">www.endress.com</a> → Download Area</li> <li>EDS system file integrated in the device: can be downloaded via the Web browser → 41</li> </ul> |
| Add-on Profile Level 3                  | <ul style="list-style-type: none"> <li>Major revision 2</li> <li>Minor revision 1</li> </ul> | System file for "RSLogix 5000" software (Rockwell Automation)  | <a href="http://www.endress.com">www.endress.com</a> → Download Area   |

### 9.3 Integrating the measuring device in the system



A detailed description of how to integrate the device into an automation system (e.g. from Rockwell Automation) is available as a separate document: [www.endress.com](http://www.endress.com) → Select country → Automation → Digital Communication → Fieldbus device integration → EtherNet/IP






For information on the protocol-specific data of EtherNet/IP

## 9.4 Cyclic data transmission

Cyclic data transmission when using the device master file (GSD).

### 9.4.1 Block model

The block model shows which input and output data the measuring device makes available for implicit messaging. Cyclical data exchange is performed using an EtherNet/IP scanner, e.g. a distributed control system etc.
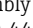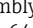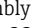
| Measuring device |  |  |                                   | Control system |
|------------------|--|--|-----------------------------------|----------------|
| Transducer Block | Input Assembly Fix (Assem100) 44 Byte  | →  47 | Permanently assigned input group  | →              |
|                  | Output Assembly Fix (Assem102) 64 Byte | →  48 | Permanently assigned output group | ←              |
|                  | Input Assembly Fix (Assem101) 88 Byte  | →  48 | Configurable input group          | →              |
|                  |  |  |                                   | EtherNet/IP    |

### 9.4.2 Input and output groups

#### Possible configurations

*Configuration 1: Exclusive Owner Multicast*

| Input Assembly Fix          |                     | Instance | Size [byte] | min. RPI (ms) |
|-----------------------------|---------------------|----------|-------------|---------------|
| Input Assembly Configurable | Configuration       | 0 x 64   | 398         | –             |
| Output Assembly Fix         | O → T Configuration | 0 x 66   | 64          | 5             |
| Input Assembly Fix          | T → O Configuration | 0 x 64   | 44          | 5             |

*Configuration 2: Input Only Multicast*

| Input Assembly Fix          |                     | Instance | Size [byte] | min. RPI (ms) |
|-----------------------------|---------------------|----------|-------------|---------------|
| Input Assembly Configurable | Configuration       | 0 x 68   | 398         | –             |
| Output Assembly Fix         | O → T Configuration | 0 x C7   | –           | –             |
| Input Assembly Fix          | T → O Configuration | 0 x 64   | 44          | 5             |

*Configuration 3: Exclusive Owner Multicast*

| Input Assembly Configurable |                     | Instance | Size [byte] | min. RPI (ms) |
|-----------------------------|---------------------|----------|-------------|---------------|
| Input Assembly Configurable | Configuration       | 0 x 68   | 398         | –             |
| Output Assembly Fix         | O → T Configuration | 0 x 66   | 64          | 5             |
| Input Assembly Fix          | T → O Configuration | 0 x 65   | 88          | 5             |

*Configuration 4: Input Only Multicast*

| Input Assembly Configurable |                     | Instance | Size [byte] | min. RPI (ms) |
|-----------------------------|---------------------|----------|-------------|---------------|
| Input Assembly Configurable | Configuration       | 0 x 68   | 398         | –             |
| Output Assembly Fix         | O → T Configuration | 0 x C7   | –           | –             |
| Input Assembly Fix          | T → O Configuration | 0 x 64   | 88          | 5             |

*Configuration 5: Exclusive Owner Multicast*

| Input Assembly Fix          |                     | Instance | Size [byte] | min. RPI (ms) |
|-----------------------------|---------------------|----------|-------------|---------------|
| Input Assembly Configurable | Configuration       | 0 x 69   | –           | –             |
| Output Assembly Fix         | O → T Configuration | 0 x 66   | 64          | 5             |
| Input Assembly Fix          | T → O Configuration | 0 x 64   | 44          | 5             |

*Configuration 6: Input Only Multicast*

| Input Assembly Fix          |                     | Instance | Size [byte] | min. RPI (ms) |
|-----------------------------|---------------------|----------|-------------|---------------|
| Input Assembly Configurable | Configuration       | 0 x 69   | –           | –             |
| Output Assembly Fix         | O → T Configuration | 0 x C7   | –           | –             |
| Input Assembly Fix          | T → O Configuration | 0 x 65   | 44          | 5             |

*Configuration 7: Exclusive Owner Multicast*

| Input Assembly Configurable |                     | Instance | Size [byte] | min. RPI (ms) |
|-----------------------------|---------------------|----------|-------------|---------------|
| Input Assembly Configurable | Configuration       | 0 x 69   | –           | –             |
| Output Assembly Fix         | O → T Configuration | 0 x 66   | 64          | 5             |
| Input Assembly Fix          | T → O Configuration | 0 x 64   | 88          | 5             |

*Configuration 8: Input Only Multicast*

| Input Assembly Configurable |                     | Instance | Size [byte] | min. RPI (ms) |
|-----------------------------|---------------------|----------|-------------|---------------|
| Input Assembly Configurable | Configuration       | 0 x 69   | –           | –             |
| Output Assembly Fix         | O → T Configuration | 0 x C7   | –           | –             |
| Input Assembly Fix          | T → O Configuration | 0 x 65   | 88          | 5             |

**Permanently assigned input group**

Input Assembly Fix (Assem100) 44 Byte

| Name               | Description                        | Byte     |
|--------------------|------------------------------------|----------|
| Input Assembly Fix | 1. File header (not visible)       | 1 to 4   |
|                    | 2. Current diagnosis <sup>1)</sup> | 5 to 8   |
|                    | 3. Mass flow                       | 9 to 12  |
|                    | 4. Volume flow                     | 13 to 16 |
|                    | 5. Corrected volume flow           | 17 to 20 |
|                    | 6. Temperature                     | 21 to 24 |
|                    | 7. Density                         | 25 to 28 |
|                    | 8. Reference density               | 29 to 32 |
|                    | 9. Totalizer 1                     | 33 to 36 |

| Name | Description     | Byte     |
|------|-----------------|----------|
|      | 10. Totalizer 2 | 37 to 40 |
|      | 11. Totalizer 3 | 41 to 44 |

1) Structure: Code, number, description (e.g.: 16777265 F882 input signal)



Detailed description

- Diagnostic information → 82
- Information events → 87

### Configurable input group

Input Assembly Configurable (Assem101) 88 byte

| Name                        | Description                     | Format         |
|-----------------------------|---------------------------------|----------------|
| Input Assembly Configurable | 1. - 10. Input values 1 to 10   | Real           |
|                             | 11. - 20. Input values 11 to 20 | Double integer |

#### Possible input values

| Possible input values 1 to 10:   |  |   |
|--|--|---|
| <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> <li>■ Target mass flow</li> <li>■ Carrier mass flow</li> <li>■ Density</li> <li>■ Reference density</li> <li>■ Concentration</li> <li>■ Dynamic viscosity</li> <li>■ Kinematic viscosity</li> </ul> | <ul style="list-style-type: none"> <li>■ Temperature-compensated dynamic viscosity</li> <li>■ Temperature-compensated kinematic viscosity</li> <li>■ Temperature</li> <li>■ Carrier pipe temperature</li> <li>■ Electronics temperature</li> <li>■ Oscillation frequency 0</li> <li>■ Oscillation frequency 1</li> <li>■ Oscillation amplitude 0</li> <li>■ Oscillation amplitude 1</li> <li>■ Oscillation frequency 0</li> <li>■ Oscillation frequency 1</li> <li>■ Oscillation damping 0</li> <li>■ Oscillation damping 1</li> <li>■ Signal shift</li> </ul> | <ul style="list-style-type: none"> <li>■ Tube damping fluctuation 0</li> <li>■ Tube damping fluctuation 1</li> <li>■ Exciter current 0</li> <li>■ Exciter current 1</li> <li>■ Monitoring of exciter current 0</li> <li>■ Monitoring of exciter current 1</li> <li>■ Totalizer 1</li> <li>■ Totalizer 2</li> <li>■ Totalizer 3</li> <li>■ Sensor integrity</li> </ul> |

| Possible input values 11 to 20:  |   |   |
|--|---|---|
| <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Current diagnosis</li> <li>■ Previous diagnosis</li> <li>■ Mass flow unit</li> <li>■ Volume flow unit</li> <li>■ Corrected volume flow unit</li> </ul> | <ul style="list-style-type: none"> <li>■ Temperature unit</li> <li>■ Density unit</li> <li>■ Reference density unit</li> <li>■ Concentration unit</li> <li>■ Current unit</li> <li>■ Status verification</li> </ul> | <ul style="list-style-type: none"> <li>■ Totalizer 1 unit</li> <li>■ Totalizer 2 unit</li> <li>■ Totalizer 3 unit</li> <li>■ Verification result</li> <li>■ Dynamic viscosity unit</li> <li>■ Kinematic viscosity unit</li> </ul> |

### Permanently assigned output group

Output Assembly Fix (Assem102) 64 byte

| Name                | Description (format)              | Byte | Bit | Value   |
|---------------------|-----------------------------------|------|-----|---|
| Output Assembly Fix | 1. Totalizer 1                    | 1    | 1   | <ul style="list-style-type: none"> <li>■ 0: Enable</li> <li>■ 1: Disable</li> </ul> |
|                     | 2. Totalizer 2                    |      | 2   |   |
|                     | 3. Totalizer 3                    |      | 3   |   |
|                     | 4. Pressure compensation          |      | 4   |   |
|                     | 5. Reference density compensation |      | 5   |   |





| Name | Description (format)                          | Byte     | Bit    | Value   |
|------|---|----------|--------|---|
|      | 6. Temperature compensation                   |          | 6      |   |
|      | 7. Verification                               |          | 7      |   |
|      | 8. Not used                                   |          | 8      |   |
|      | 9. Not used                                   | 2 to 4   | 0 to 8 | –   |
|      | 10. Control totalizer 1 (integer)             | 5 to 6   | 0 to 8 | <ul style="list-style-type: none"> <li>■ 32226: Add</li> <li>■ 32490: Reset and stop</li> <li>■ 32228: Default value and stop</li> <li>■ 198: Reset and add</li> <li>■ 199: Default value and add</li> </ul>  |
|      | 11. Not used                                  | 7 to 8   | 0 to 8 | –   |
|      | 12. Control totalizer 2 (integer)             | 9...10   | 0 to 8 | See totalizer 1   |
|      | 13. Not used                                  | 11 to 12 | 0 to 8 | –   |
|      | 14. Control totalizer 3 (integer)             | 13 to 14 | 0 to 8 | See totalizer 1   |
|      | 15. Not used                                  | 15 to 16 | 0 to 8 | –   |
|      | 16. External pressure (real)                  | 17 to 20 | 0 to 8 | Data format:<br>Byte 1 to 4: External pressure<br>Floating-point number<br>(IEEE754)  |
|      | 17. External pressure unit (integer)          | 21 to 22 | 0 to 8 | <ul style="list-style-type: none"> <li>■ 2165: Pa a</li> <li>■ 2116: kPa a</li> <li>■ 2137: MPa a</li> <li>■ 4871: bar a</li> <li>■ 2166: Pa g</li> <li>■ 2117: kPa a</li> <li>■ 2138: MPa a</li> <li>■ 2053: bar g</li> <li>■ 2182: Psi a</li> <li>■ 2183: Psi g</li> <li>■ 2244: Customer-specific</li> </ul> |
|      | 18. Not used                                  | 23 to 24 | 0 to 8 | –   |
|      | 19. External reference density (real)         | 25 to 28 | 0 to 8 | Data format:<br>Byte 1 to 4: External ref. density<br>Floating-point number<br>(IEEE754)  |
|      | 20. External reference density unit (integer) | 29 to 30 | 0 to 8 | <ul style="list-style-type: none"> <li>■ 2112: kg/Nm<sup>3</sup></li> <li>■ 2113: kg/Nl</li> <li>■ 2092: g/Scm<sup>3</sup></li> <li>■ 2114: kg/Scm<sup>3</sup></li> <li>■ 2181: lb/Sft<sup>3</sup></li> </ul>   |
|      | 21. Not used                                  | 31 to 32 | 0 to 8 | –   |
|      | 22. External temperature (real)               | 33 to 36 | 0 to 8 | Data format:<br>Byte 1 to 4: External temperature<br>Floating-point number<br>(IEEE754)   |
|      | 23. External temperature unit (integer)       | 37 to 38 | 0 to 8 | <ul style="list-style-type: none"> <li>■ 4608: °C</li> <li>■ 4609: °F</li> <li>■ 4610: K</li> <li>■ 4611: °R</li> </ul>   |
|      | 24. Not used                                  | 39 to 40 | 0 to 8 | –   |

| Name | Description (format)             | Byte     | Bit    | Value                             |
|------|----------------------------------|----------|--------|-----------------------------------|
|      | 25. Start verification (integer) | 41 to 42 | 0 to 8 | ■ 32378: Start<br>■ 32713: Cancel |
|      | 26. Not used                     | 43 to 64 | 0 to 8 | –                                 |

## 10 Commissioning

### 10.1 Function check

Before commissioning the measuring device:

- Make sure that the post-installation and post-connection checks have been performed.
- "Post-installation check" checklist →  27
- "Post-connection check" checklist →  34

### 10.2 Configuring the device address via software

In the **"Communication"** submenu the device address can be set.

#### Navigation


"Setup" menu → Communication → Device address

#### 10.2.1 Ethernet network and Web server

When delivered, the measuring device has the following factory settings:

|                 |               |
|-----------------|---------------|
| IP address      | 192.168.1.212 |
| Subnet mask     | 255.255.255.0 |
| Default gateway | 192.168.1.212 |



- If hardware addressing is active, software addressing is disabled.
- If a switch is made to hardware addressing, the address configured via software addressing is retained for the first 9 places (the first three octets).
- If the IP address of the device is not known, the device address currently configured can be read out →  68.


### 10.3 Setting the operating language

Factory setting: English or ordered local language

The operating language of the local display can be set in FieldCare or via the Web server:  
Operation → Display language

### 10.4 Configuring the measuring device

The **Setup** menu with its submenus contains all the parameters needed for standard operation.

 Setup

Device tag



► System units

► Medium selection

|                                   |        |
|-----------------------------------|--------|
| ► Communication                   | → ⓘ 55 |
| ► Low flow cut off                | → ⓘ 56 |
| ► Partially filled pipe detection | → ⓘ 57 |
| ► Advanced setup                  | → ⓘ 58 |

10.4.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

-  The number of characters displayed depends on the characters used.
-  For information on the tag name in the "FieldCare" operating tool → ⓘ 44


**Navigation**  
"Setup" menu → Device tag

Parameter overview with brief description

| Parameter  | Description                             | User entry   | Factory setting |
|------------|---|--|-----------------|
| Device tag | Enter the name for the measuring point. | Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /). | Promass 100     |

10.4.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

-  Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

► System units

Mass flow unit

Mass unit

Volume flow unit

Volume unit

Corrected volume flow unit

Corrected volume unit

Density unit

Reference density unit

|                  |
|------------------|
| Temperature unit |
| Pressure unit    |

### Parameter overview with brief description

| Parameter                  | Description  | Selection        | Factory setting  |
|----------------------------|--|------------------|--|
| Mass flow unit             | Select mass flow unit.<br><i>Result</i><br>The selected unit applies for:<br><ul style="list-style-type: none"> <li>Output</li> <li>Low flow cut off</li> <li>Simulation process variable</li> </ul>             | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>kg/h</li> <li>lb/min</li> </ul>                  |
| Mass unit                  | Select mass unit.<br><i>Result</i><br>The selected unit is taken from: <b>Mass flow unit</b> parameter   | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>kg</li> <li>lb</li> </ul>                        |
| Volume flow unit           | Select volume flow unit.<br><i>Result</i><br>The selected unit applies for:<br><ul style="list-style-type: none"> <li>Output</li> <li>Low flow cut off</li> <li>Simulation process variable</li> </ul>           | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>l/h</li> <li>gal/min (us)</li> </ul>             |
| Volume unit                | Select volume unit.<br><b>Result</b><br>The selected unit is taken from: <b>Volume flow unit</b> parameter   | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>l</li> <li>gal (us)</li> </ul>                   |
| Corrected volume flow unit | Select corrected volume flow unit.<br><i>Result</i><br>The selected unit applies for:<br><ul style="list-style-type: none"> <li>Output</li> <li>Low flow cut off</li> <li>Simulation process variable</li> </ul> | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>NI/h</li> <li>Sft<sup>3</sup>/h</li> </ul>       |
| Corrected volume unit      | Select corrected volume unit.<br><i>Result</i><br>The selected unit is taken from: <b>Corrected volume flow unit</b> parameter   | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>NI</li> <li>Sft<sup>3</sup></li> </ul>           |
| Density unit               | Select density unit.<br><i>Result</i><br>The selected unit applies for:<br><ul style="list-style-type: none"> <li>Output</li> <li>Simulation process variable</li> </ul>   | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>kg/l</li> <li>lb/ft<sup>3</sup></li> </ul>       |
| Reference density unit     | Select reference density unit.   | Unit choose list | –  |
| Temperature unit           | Select temperature unit.<br><i>Result</i><br>The selected unit applies for:<br><ul style="list-style-type: none"> <li>Output</li> <li>Reference temperature</li> <li>Simulation process variable</li> </ul>      | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>°C (Celsius)</li> <li>°F (Fahrenheit)</li> </ul> |
| Pressure unit              | Select process pressure unit.  | Unit choose list | Country-specific:<br><ul style="list-style-type: none"> <li>bar</li> <li>psi</li> </ul>                      |

### 10.4.3 Selecting and setting the medium

The **Medium selection** submenu contains parameters that have to be configured for selecting and setting the medium.

#### Navigation

"Setup" menu → Select medium

| ► Medium selection                     |      |
|--|------|
| Select medium                          | → 54 |
| Select gas type                        | → 54 |
| Reference sound velocity               | → 54 |
| Temperature coefficient sound velocity | → 54 |
| Pressure compensation                  | → 54 |
| Pressure value                         | → 54 |
| External pressure                      | → 54 |

#### Parameter overview with brief description

| Parameter                              | Prerequisite  | Description  | Selection / User entry   | Factory setting |
|--|---|--|--|-----------------|
| Select medium                          | –   | Select medium type.  | Gas  | –               |
| Select gas type                        | The following option is selected in the <b>Medium selection</b> parameter:<br>Gas                 | Select measured gas type.                                  | Gas type choose list   | –               |
| Reference sound velocity               | The following option is selected in the <b>Select gas type</b> parameter:<br>Others               | Enter sound velocity of gas at 0 °C (32 °F).               | 1 to 99 999.9999 m/s   | 0 m/s           |
| Temperature coefficient sound velocity | The following option is selected in the <b>Select gas type</b> parameter:<br>Others               | Enter temperature coefficient for the gas sound velocity.  | Positive floating-point number   | 0 (m/s)/K       |
| Pressure compensation                  | The following option is selected in the <b>Medium selection</b> parameter:<br>Gas                 | Select pressure compensation type.                         | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Fixed value</li> <li>■ External value</li> </ul> | –               |
| Pressure value                         | The following option is selected in the <b>Pressure compensation</b> parameter:<br>Fixed value    | Enter process pressure to be used for pressure correction. | Positive floating-point number   | –               |
| External pressure                      | The following option is selected in the <b>Pressure compensation</b> parameter:<br>External value |  | Positive floating-point number   | –               |

### 10.4.4 Configuring the communication interface



The "**Communication**" submenu guides you systematically through all the parameters that have to be configured for selecting and setting the communication interface.

#### Navigation

"Setup" menu → Communication

▶ Communication

#### Parameter overview with brief description

| Parameter                | Description   | User interface / Selection / User entry  | Factory setting                                       |
|--------------------------|---|--|---|
| MAC address              | Displays the MAC address of the measuring device.<br> MAC = Media Access Control   | Unique 12-digit character string comprising letters and numbers, e.g.: 00:07:05:10:01:5F | Each measuring device is given an individual address. |
| Default network settings | Select whether to restore network settings.   | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul>                    | –   |
| DHCP client              | Select to activate/deactivate DHCP client functionality.<br><b>Result</b><br>If the web server's DHCP client functionality is activated, the IP address, subnet mask and default gateway are automatically set.<br> Identification is via the MAC address of the measuring device. | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul>                    | On  |
| IP address               | IP address of the Web server of the measuring device.   | 4 octet: 0 to 255 (in the particular octet)  | –   |
| Subnet mask              | Displays the subnet mask.   | 4 octet: 0 to 255 (in the particular octet)  | –   |
| Default gateway          | Displays the default gateway.   | 4 octet: 0 to 255 (in the particular octet)  | –   |

### 10.4.5 Configuring the low flow cut off

The **Low flow cut off** submenu contains parameters that must be configured for the configuration of low flow cut off.

#### Navigation

"Setup" menu → Low flow cut off

|                            |      |
|----------------------------|------|
| ► Low flow cut off         |      |
| Assign process variable    | → 56 |
| On value low flow cutoff   | → 56 |
| Off value low flow cutoff  | → 56 |
| Pressure shock suppression | → 56 |

#### Parameter overview with brief description

| Parameter                  | Prerequisite   | Description  | Selection / User entry   | Factory setting                                      |
|----------------------------|--|--|--|--|
| Assign process variable    | –  | Select process variable for low flow cut off.                                  | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> </ul> | –  |
| On value low flow cutoff   | In the <b>Assign process variable</b> parameter, one of the following options is selected: <ul style="list-style-type: none"> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> </ul> | Enter on value for low flow cut off.   | Positive floating-point number   | For liquids: depends on country and nominal diameter |
| Off value low flow cutoff  | In the <b>Assign process variable</b> parameter, one of the following options is selected: <ul style="list-style-type: none"> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> </ul> | Enter off value for low flow cut off.  | 0 to 100.0 %   | –  |
| Pressure shock suppression | In the <b>Assign process variable</b> parameter, one of the following options is selected: <ul style="list-style-type: none"> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> </ul> | Enter time frame for signal suppression (= active pressure shock suppression). | 0 to 100 s   | –  |



### 10.4.6 Configuring the partial filled pipe detection

The **Partially filled pipe detection** submenu contains parameters that have to be set for configuring empty pipe detection.

#### Navigation

"Setup" menu → Partially filled pipe detection


|  |      |
|--|------|
| ► Partially filled pipe detection        |      |
| Assign process variable                  | → 57 |
| Low value partial filled pipe detection  | → 57 |
| High value partial filled pipe detection | → 57 |
| Response time part. filled pipe detect.  | → 57 |

#### Parameter overview with brief description

| Parameter                                | Prerequisite   | Description  | Selection / User entry  | Factory setting   |
|--|--|--|---|---|
| Assign process variable                  | –  | Select process variable for partially filled pipe detection.                           | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Density</li> <li>■ Reference density</li> </ul> | –   |
| Low value partial filled pipe detection  | One of the following options is selected in the <b>Assign process variable</b> parameter: <ul style="list-style-type: none"> <li>■ Density</li> <li>■ Reference density</li> </ul> | Enter lower limit value for deactivating partialy filled pipe detection.               | Signed floating-point number  | Country-dependent: <ul style="list-style-type: none"> <li>■ 0.2 kg/l</li> <li>■ 12.5 lb/ft<sup>3</sup></li> </ul> |
| High value partial filled pipe detection | One of the following options is selected in the <b>Assign process variable</b> parameter: <ul style="list-style-type: none"> <li>■ Density</li> <li>■ Reference density</li> </ul> | Enter upper limit value for deactivating partialy filled pipe detection.               | Signed floating-point number  | Country-dependent: <ul style="list-style-type: none"> <li>■ 6 kg/l</li> <li>■ 374.6 lb/ft<sup>3</sup></li> </ul>  |
| Response time part. filled pipe detect.  | One of the following options is selected in the <b>Assign process variable</b> parameter: <ul style="list-style-type: none"> <li>■ Density</li> <li>■ Reference density</li> </ul> | Enter time before diagnostic message is displayed for partially filled pipe detection. | 0 to 100 s  | –   |

## 10.5 Advanced settings

The **Advanced setup** submenu with its submenus contains parameters for specific settings.

 The number of submenus can vary depending on the device version, e.g. viscosity is available only with the Promass I.

### Navigation

"Setup" menu → Advanced setup

▶ Advanced setup

Enter access code

▶ Calculated values → 58

▶ Sensor adjustment → 59

▶ Totalizer 1 to n → 60

▶ Display → 62

▶ Viscosity

▶ Concentration

▶ Heartbeat setup

▶ Administration → 88

### 10.5.1 Calculated values

The **Calculated values** submenu contains parameters for calculating the corrected volume flow.

### Navigation

"Setup" menu → Advanced setup → Calculated values

▶ Calculated values

▶ Corrected volume flow calculation

Corrected volume flow calculation → 59

External reference density → 59

Fixed reference density → 59

Reference temperature → 59

|                              |      |
|------------------------------|------|
| Linear expansion coefficient | → 59 |
| Square expansion coefficient | → 59 |

### Parameter overview with brief description

| Parameter                         | Prerequisite  | Description  | Selection / User entry   | Factory setting |
|-----------------------------------|---|--|--|-----------------|
| Corrected volume flow calculation | –   | Select reference density for calculating the corrected volume flow.  | <ul style="list-style-type: none"> <li>Fixed reference density</li> <li>Calculated reference density</li> <li>Reference density by API table 53</li> <li>External reference density</li> </ul> | –               |
| External reference density        | –   | Shows external reference density.  | Floating point number with sign  | 0 kg/Nl         |
| Fixed reference density           | The following option is selected in the <b>Corrected volume flow calculation</b> parameter:<br>Fixed reference density      | Enter fixed value for reference density.   | Positive floating-point number   | –               |
| Reference temperature             | The following option is selected in the <b>Corrected volume flow calculation</b> parameter:<br>Calculated reference density | Enter reference temperature for calculating the reference density.   | –273.15 to 99 999 °C   | –               |
| Linear expansion coefficient      | The following option is selected in the <b>Corrected volume flow calculation</b> parameter:<br>Calculated reference density | Enter linear, medium-specific expansion coefficient for calculating the reference density.   | Signed floating-point number   | –               |
| Square expansion coefficient      | –   | For media with a non-linear expansion pattern: enter the quadratic, medium-specific expansion coefficient for calculating the reference density. | Signed floating-point number   | –               |

### 10.5.2 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu → Advanced setup → Sensor adjustment

► Sensor adjustment

Installation direction

→ 60

► Zero point adjustment

Zero point adjustment control

→ 60

Progress

→ 60

Parameter overview with brief description

| Parameter                     | Description   | Selection / User interface  |
|-------------------------------|---|---|
| Installation direction        | Set sign of flow direction to match the direction of the arrow on the sensor. | <div><div>▪ Flow in arrow direction</div><div>▪ Flow against arrow direction</div></div>                |
| Zero point adjustment control | Start zero point adjustment.  | <div><div>▪ Cancel</div><div>▪ Busy</div><div>▪ Zero point adjust failure</div><div>▪ Start</div></div> |
| Progress                      | Shows the progress of the process.  | 0 to 100 %  |

10.5.3 Configuring the totalizer

In the "Totalizer 1 to n" submenu the individual totalizer can be configured.

Navigation

"Setup" menu → Advanced setup → Totalizer 1 to n

► Totalizer 1 to n

Assign process variable

Unit totalizer

Totalizer operation mode

Failure mode

**Parameter overview with brief description**

| Parameter                | Description                                   | Selection   |
|--------------------------|---|---|
| Assign process variable  | Select process variable for totalizer.        | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Volume flow</li> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> <li>■ Target mass flow</li> <li>■ Carrier mass flow</li> </ul> |
| Unit totalizer           | Select process variable totalizer unit.       | Unit choose list  |
| Totalizer operation mode | Select totalizer calculation mode.            | <ul style="list-style-type: none"> <li>■ Net flow total</li> <li>■ Forward flow total</li> <li>■ Reverse flow total</li> </ul>  |
| Failure mode             | Define totalizer behavior in alarm condition. | <ul style="list-style-type: none"> <li>■ Stop</li> <li>■ Actual value</li> <li>■ Last valid value</li> </ul>  |

### 10.5.4 Carrying out additional display configurations

In the **"Display"** submenu you can set all the parameters involved in the configuration of the local display.

#### Navigation

"Setup" menu → Advanced setup → Display

► Display

Format display

Value 1 display

0% bargraph value 1

100% bargraph value 1

Decimal places 1

Value 2 display

Decimal places 2

Value 3 display

0% bargraph value 3

100% bargraph value 3

Decimal places 3

Value 4 display

Decimal places 4

Display language

Display interval

Display damping


Header

Header text

Separator


Backlight

## Parameter overview with brief description

| Parameter             | Prerequisite | Description  | Selection / User entry  | Factory setting |
|-----------------------|--------------|--|---|-----------------|
| Format display        | –            | Select how measured values are shown on the display.   | <ul style="list-style-type: none"> <li>■ 1 value, max. size</li> <li>■ 1 bargraph + 1 value</li> <li>■ 2 values</li> <li>■ 1 value large + 2 values</li> <li>■ 4 values</li> </ul>  | –               |
| Value 1 display       | –            | <p>Select the measured value that is shown on the local display.</p> <p> Depending on the device version, not all options are available in this parameter. The selection can vary depending on the sensor, e.g. viscosity is available only with the Promass I.</p> | <ul style="list-style-type: none"> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> <li>■ Target mass flow</li> <li>■ Carrier mass flow</li> <li>■ Density</li> <li>■ Reference density</li> <li>■ Concentration</li> <li>■ Dynamic viscosity</li> <li>■ Kinematic viscosity</li> <li>■ Temp. compensated dynamic viscosity</li> <li>■ Temp. compensated kinematic viscosity</li> <li>■ Temperature</li> <li>■ Carrier pipe temperature</li> <li>■ Electronic temperature</li> <li>■ Oscillation frequency 0</li> <li>■ Oscillation frequency 1</li> <li>■ Oscillation amplitude 0</li> <li>■ Oscillation amplitude 1</li> <li>■ Frequency fluctuation 0</li> <li>■ Frequency fluctuation 1</li> <li>■ Oscillation damping 0</li> <li>■ Oscillation damping 1</li> <li>■ Tube damping fluctuation 0</li> <li>■ Tube damping fluctuation 1</li> <li>■ Signal asymmetry</li> <li>■ Exciter current 0</li> <li>■ Exciter current 1</li> <li>■ Sensor integrity</li> <li>■ None</li> <li>■ Totalizer 1</li> <li>■ Totalizer 2</li> <li>■ Totalizer 3</li> </ul> | –               |
| 0% bargraph value 1   | –            | Enter 0% value for bar graph display.  | Signed floating-point number  | –               |
| 100% bargraph value 1 | –            | Enter 100% value for bar graph display.  | Signed floating-point number  | –               |

| Parameter             | Prerequisite  | Description   | Selection / User entry   | Factory setting   |
|-----------------------|---|---|--|---|
| Decimal places 1      | –   | Select the number of decimal places for the display value.                          | <ul style="list-style-type: none"> <li>■ x</li> <li>■ x.x</li> <li>■ x.xx</li> <li>■ x.xxx</li> <li>■ x.xxxx</li> </ul>  | –   |
| Value 2 display       | –   | Select the measured value that is shown on the local display.                       | Picklist (see 1st display value)   | –   |
| Decimal places 2      | –   | Select the number of decimal places for the display value.                          | <ul style="list-style-type: none"> <li>■ x</li> <li>■ x.x</li> <li>■ x.xx</li> <li>■ x.xxx</li> <li>■ x.xxxx</li> </ul>  | –   |
| Value 3 display       | –   | Select the measured value that is shown on the local display.                       | Picklist (see 1st display value)   | –   |
| 0% bargraph value 3   | An option was selected in the <b>Value 3 display</b> parameter. | Enter 0% value for bar graph display.   | Signed floating-point number   | –   |
| 100% bargraph value 3 | An option was selected in the <b>Value 3 display</b> parameter. | Enter 100% value for bar graph display.   | Signed floating-point number   | –   |
| Decimal places 3      | –   | Select the number of decimal places for the display value.                          | <ul style="list-style-type: none"> <li>■ x</li> <li>■ x.x</li> <li>■ x.xx</li> <li>■ x.xxx</li> <li>■ x.xxxx</li> </ul>  | –   |
| Value 4 display       | –   | Select the measured value that is shown on the local display.                       | Picklist (see 1st display value)   | –   |
| Decimal places 4      | –   | Select the number of decimal places for the display value.                          | <ul style="list-style-type: none"> <li>■ x</li> <li>■ x.x</li> <li>■ x.xx</li> <li>■ x.xxx</li> <li>■ x.xxxx</li> </ul>  | –   |
| Display language      | –   | Set display language.   | <ul style="list-style-type: none"> <li>■ English</li> <li>■ Deutsch</li> <li>■ Français</li> <li>■ Español</li> <li>■ Italiano</li> <li>■ Nederlands</li> <li>■ Portuguesa</li> <li>■ Polski</li> <li>■ русский язык (Russian)</li> <li>■ Svenska</li> <li>■ Türkçe</li> <li>■ 中文 (Chinese)</li> <li>■ 日本語 (Japanese)</li> <li>■ 한국어 (Korean)</li> <li>■ العربية (Arabic)</li> <li>■ Bahasa Indonesia</li> <li>■ ภาษาไทย (Thai)</li> <li>■ tiếng Việt (Vietnamese)</li> <li>■ čeština (Czech)</li> </ul> | English (alternatively, the ordered language is preset in the device) |
| Display interval      | –   | Set time measured values are shown on display if display alternates between values. | 1 to 10 s  | –   |
| Display damping       | –   | Set display reaction time to fluctuations in the measured value.                    | 0.0 to 999.9 s   | –   |
| Header                | –   | Select header contents on local display.  | <ul style="list-style-type: none"> <li>■ Device tag</li> <li>■ Free text</li> </ul>  | –   |




| Parameter   | Prerequisite | Description  | Selection / User entry  | Factory setting |
|-------------|--------------|--|---|-----------------|
| Header text | –            | Enter display header text.   | Character string comprising numbers, letters and special characters (#12)     | –               |
| Separator   | –            | Select decimal separator for displaying numerical values.  | <ul style="list-style-type: none"> <li>■ .</li> <li>■ ,</li> </ul>            | –               |
| Backlight   | –            | Switch the local display backlight on and off.<br> Only for device version with onsite display SD03 (touch control) | <ul style="list-style-type: none"> <li>■ Disable</li> <li>■ Enable</li> </ul> | –               |

## 10.6 Simulation


The **"Simulation" submenu** enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

### Navigation

"Diagnostics" menu → Simulation

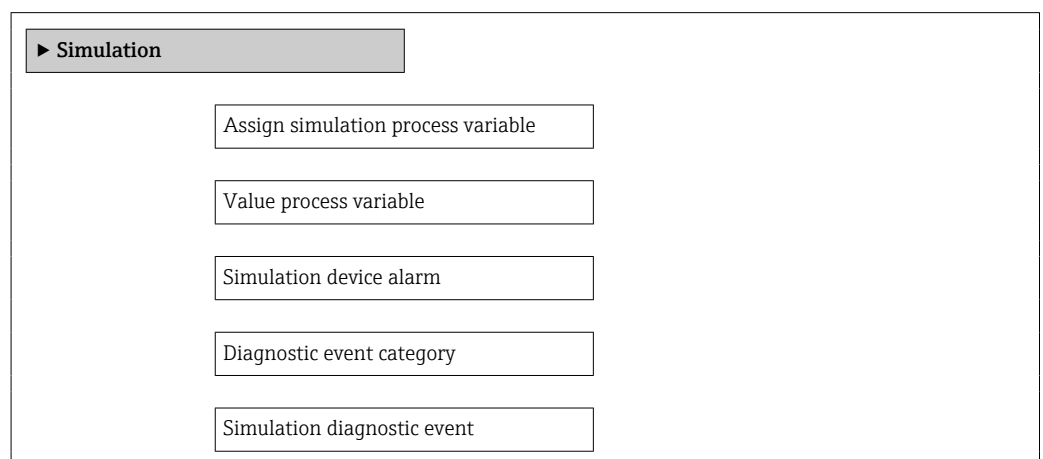



## Parameter overview with brief description

| Parameter                          | Prerequisite   | Description   | Selection / User entry  |
|------------------------------------|--|---|---|
| Assign simulation process variable | –  | Select a process variable for the simulation process that is activated.<br> Depending on the device version, not all options are available in this parameter. The selection can vary depending on the sensor, e.g. viscosity is available only with the Promass I. | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Mass flow</li> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> <li>■ Density</li> <li>■ Reference density</li> <li>■ Temperature</li> <li>■ Dynamic viscosity</li> <li>■ Kinematic viscosity</li> <li>■ Temp. compensated dynamic viscosity</li> <li>■ Temp. compensated kinematic viscosity</li> <li>■ Concentration</li> <li>■ Target mass flow</li> <li>■ Carrier mass flow</li> </ul> |
| Value process variable             | A process variable is selected in the <b>Assign simulation process variable</b> parameter. | Enter the simulation value for the selected process variable.   | Signed floating-point number  |
| Simulation device alarm            | –  | Switch the device alarm on and off.   | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul>   |
| Diagnostic event category          | –  | Select the category of the diagnostic event.  | <ul style="list-style-type: none"> <li>■ Sensor</li> <li>■ Electronics</li> <li>■ Configuration</li> <li>■ Process</li> </ul>   |
| Simulation diagnostic event        | –  | Switch simulation of the diagnostic event on and off.<br><br>For the simulation, you can choose from the diagnostic events of the category selected in the <b>Diagnostic event category</b> parameter.  | <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Picklist Diagnostic events (depends on the selected category)</li> </ul>  |

## 10.7 Protecting settings from unauthorized access

The following options exist for protecting the configuration of the measuring device from unintentional modification after commissioning:

- Write protection via access code for Web browser →  66
- Write protection via write protection switch →  67

### 10.7.1 Write protection via access code

With the customer-specific access code, access to the measuring device via the Web browser is protected, as are the parameters for the measuring device configuration.

#### Navigation

"Setup" menu → Advanced setup → Administration → Define access code

#### Structure of the submenu

|   |   |  |
|---|---|--|
| <div style="border: 1px solid black; background-color: #f0f0f0; padding: 2px; margin-bottom: 5px;">Define access code</div> | → | <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">Define access code</div> <div style="border: 1px solid black; padding: 2px;">Confirm access code</div> |
|---|---|--|


#### Defining the access code via the Web browser


1. Navigate to the **Enter access code** parameter.

2. Define a max. 4-digit numeric code as an access code.

3. Enter the access code again to confirm the code.

↳ The Web browser switches to the login page.

 If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

 The user role with which the user is currently logged on via the Web browser is indicated by the **Access status tooling** parameter. Navigation path: Operation → Access status tooling


### 10.7.2 Write protection via write protection switch

The write protection switch makes it possible to block write access to the entire operating menu with the exception of the following parameters:

- External pressure
- External temperature
- Reference density
- All parameters for configuring the totalizer


The parameter values are now read only and cannot be edited any more:

- Via service interface (CDI-RJ45)
- Via Ethernet network

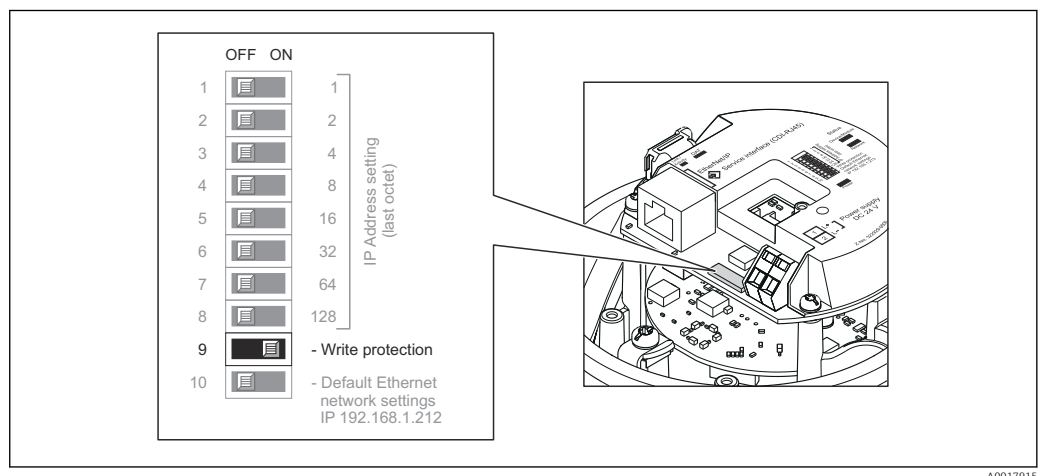
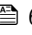


A0017915

1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.

2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary →  113.

3. Setting the write protection switch on the I/O electronics module to the ON position enables the hardware write protection. Setting the write protection switch on the I/O electronics module to the OFF position (factory setting) disables the hardware write protection.


↳ If hardware write protection is enabled, the **Hardware locked** option is displayed in the **Locking status** parameter →  68; if disabled, no option is displayed in the **Locking status** parameter →  68

4. Reverse the removal procedure to reassemble the transmitter.

## 11 Operation

### 11.1 Read out and modify current Ethernet settings

If the Ethernet settings such as the IP address of the measuring device are unknown, they can be read out and modified as explained in the following example for an IP address.

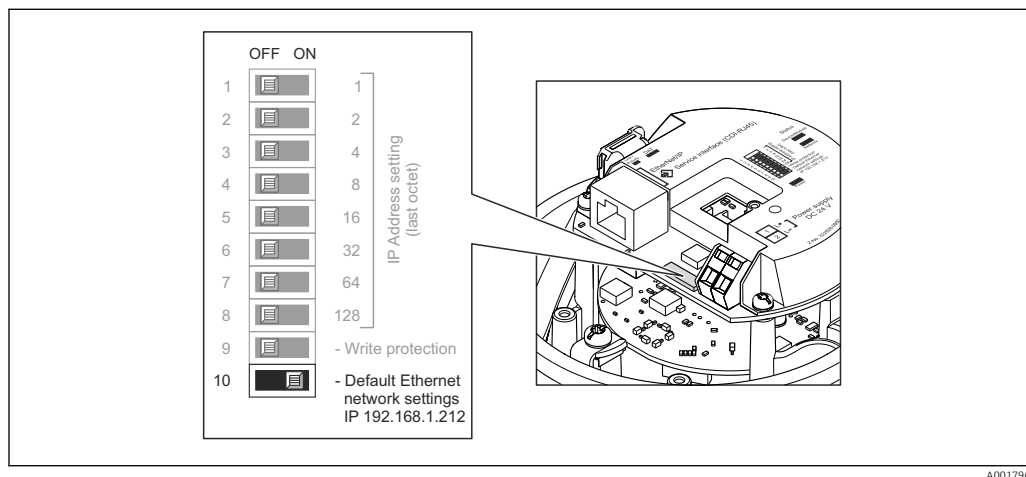

A0017965

#### Prerequisite

- Software addressing is enabled: All the DIP switches for hardware addressing are set to OFF. → 33
- Measuring device is switched on.

1. Set the DIP switch for "Default Ethernet network settings, IP 192.168.1.212" from OFF → ON.
2. Restart the device.
  - ↳ The device's Ethernet settings are reset to their factory settings:  
IP address: 192.168.1.212; Subnet mask: 255.255.255.0; Default gateway: 192.168.1.212
3. Enter the default setting for the IP address in the address line of the Web browser.
4. In the operating menu navigate to the **IP address** parameter: "Setup" menu → Communication → IP address
  - ↳ The parameter displays the configured IP address.
5. Change the IP address of the device if necessary.
6. Set the DIP switch for "Default Ethernet network settings, IP 192.168.1.212" from ON → OFF.
7. Restart the device.
  - ↳ The modified IP address of the device is now enabled.

### 11.2 Reading device locking status

The write protection types that are currently active can be determined using the **Locking status** parameter.

**Navigation**

"Operation" menu → Locking status

*Function scope of "Locking status" parameter*

| Options            | Description  |
|--------------------|--|
| Hardware locked    | The write protection switch (DIP switch) for hardware locking is activated on the I/O electronic module. This prevents write access to the parameters → 67.  |
| Temporarily locked | Due to internal processing in the device (e.g. up-/downloading of data, reset), write access to the parameters is blocked for a short time. Once the internal processing has been completed, the parameters can be changed once again. |

### 11.3 Adjusting the operating language

Information → 51



For information on the operating languages supported by the measuring device → 114

### 11.4 Configuring the display

- Basic settings for local display
- Advanced settings for local display → 62

### 11.5 Reading measured values

Using the **Measured values** submenu , it is possible to read all the measured values.

Diagnostics → Measured values

#### 11.5.1 Process variables

The **Process variables** submenu contains all the parameters needed to display the current measured values for every process variable.

**Navigation**

"Diagnostics" menu → Measured values → Process variables

|                          |                       |
|--------------------------|-----------------------|
| <b>Process variables</b> | Mass flow             |
|                          | Volume flow           |
|                          | Corrected volume flow |
|                          | Density               |
|                          | Reference density     |
|                          | Temperature           |
|                          | Pressure value        |

Parameter overview with brief description

| Parameter             | Description   | User interface               | Factory setting |
|-----------------------|---|------------------------------|-----------------|
| Mass flow             | Displays the mass flow currently measured.  | Signed floating-point number | –               |
| Volume flow           | Displays the volume flow currently calculated.<br><i>Dependency</i><br>The unit is taken from the <b>Volume flow unit</b> parameter                     | Signed floating-point number | –               |
| Corrected volume flow | Displays the corrected volume flow currently calculated.<br><i>Dependency</i><br>The unit is taken from the <b>Corrected volume flow unit</b> parameter | Signed floating-point number | –               |
| Density               | Displays the density currently measured.<br><i>Dependency</i><br>The unit is taken from the <b>Density unit</b> parameter                               | Signed floating-point number | –               |
| Reference density     | Displays the reference density currently calculated.<br><i>Dependency</i><br>The unit is taken from the <b>Reference density unit</b> parameter         | Signed floating-point number | –               |
| Temperature           | Shows the medium temperature currently measured.<br><i>Dependency</i><br>The unit is taken from the <b>Temperature unit</b> parameter                   | Signed floating-point number |                 |
| Pressure value        | Displays either a fixed or external pressure value.   | Signed floating-point number |                 |

11.5.2 Totalizer

The "Totalizer" submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu → Measured values → Totalizer

► Totalizer

Totalizer value 1 to n

Totalizer overflow 1 to n

### Parameter overview with brief description

| Parameter                 | Prerequisite   | Description                                   | User interface               |
|---------------------------|--|---|------------------------------|
| Totalizer value 1 to n    | In the <b>Assign process variable</b> parameter in the <b>Totalizer 1 to n</b> submenu, one of the following options is selected:<br><ul style="list-style-type: none"> <li>■ Volume flow</li> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> </ul> | Displays the current totalizer counter value. | Signed floating-point number |
| Totalizer overflow 1 to n | In the <b>Assign process variable</b> parameter in the <b>Totalizer 1 to n</b> submenu, one of the following options is selected:<br><ul style="list-style-type: none"> <li>■ Volume flow</li> <li>■ Mass flow</li> <li>■ Corrected volume flow</li> </ul> | Displays the current totalizer overflow.      | Integer with sign            |

### 11.5.3 Output values

The **"Output values"** submenu contains all the parameters needed to display the current measured values for every output.

#### Navigation

"Diagnostics" menu → Measured values → Output values

► Output values

Terminal voltage 1

Pulse output

Output frequency

Switch status

### Parameter overview with brief description

| Parameter        | Description   | User interface   |
|------------------|---|--|
| Pulse output     | Displays the value currently measured for the pulse output.     | Positive floating-point number   |
| Output frequency | Displays the value currently measured for the frequency output. | 0.0 to 1250.0 Hz   |
| Switch status    | Displays the current switch output status.                      | <ul style="list-style-type: none"> <li>■ Open</li> <li>■ Closed</li> </ul> |

## 11.6 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu → 51
- Advanced settings using the **Advanced setup** submenu → 58

# 11.7 Performing a totalizer reset

Function scope of "Control Totalizer " parameter

| Options           | Description   |
|-------------------|---|
| Totalize          | The totalizer is started.   |
| Reset + hold      | The totaling process is stopped and the totalizer is reset to 0.  |
| Preset + hold     | The totaling process is stopped and the totalizer is set to its defined start value from the <b>Preset value</b> parameter. |
| Reset + totalize  | The totalizer is reset to 0 and the totaling process is restarted.  |
| Preset + totalize | The totalizer is set to the defined start value in <b>Preset value</b> parameterand the totaling process is restarted.      |

Function scope of "Reset all totalizers" parameter

| Options          | Description  |
|------------------|--|
| Reset + totalize | Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized. |

## Navigation

"Operation" menu → Operation

► Totalizer handling

Control Totalizer 1 to n

Preset value 1 to n

Reset all totalizers

## Parameter overview with brief description

| Parameter                | Description                          | Selection / User entry   |
|--------------------------|--------------------------------------|--|
| Control Totalizer 1 to n | Control totalizer value.             | <ul style="list-style-type: none"><li>■ Totalize</li><li>■ Reset + hold</li><li>■ Preset + hold</li><li>■ Reset + totalize</li><li>■ Preset + totalize</li></ul> |
| Preset value 1 to n      | Specify start value for totalizer.   | Signed floating-point number   |
| Reset all totalizers     | Reset all totalizers to 0 and start. | <ul style="list-style-type: none"><li>■ Cancel</li><li>■ Reset + totalize</li></ul>  |



## 12 Diagnostics and troubleshooting

### 12.1 General troubleshooting

#### *For local display*


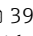
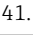

| Problem   | Possible causes  | Remedial action   |
|---|--|---|
| Local display dark and no output signals                                  | Supply voltage does not match that specified on the nameplate.               | Apply the correct supply voltage → 31.  |
| Local display dark and no output signals                                  | Supply voltage has incorrect polarity.                                       | Reverse polarity of supply voltage.   |
| Local display dark and no output signals                                  | No contact between connecting cables and terminals.                          | Check the connection of the cables and correct if necessary.  |
| Local display dark and no output signals                                  | Terminals are not plugged into the I/O electronics module correctly.         | Check terminals.  |
| Local display dark and no output signals                                  | I/O electronics module is defective.   | Order spare part → 93.  |
| Local display is dark, but signal output is within the valid range        | Display is set too bright or too dark.                                       | <ul style="list-style-type: none"> <li>Set the display brighter by simultaneously pressing  + .</li> <li>Set the display darker by simultaneously pressing  + .</li> </ul>  |
| Local display is dark, but signal output is within the valid range        | The cable of the display module is not plugged in correctly.                 | Insert the plug correctly into the main electronics module and display module.  |
| Local display is dark, but signal output is within the valid range        | Display module is defective.   | Order spare part → 93.  |
| Backlighting of local display is red                                      | Diagnostic event with "Alarm" diagnostic behavior has occurred.              | Take remedial measures → 82   |
| Message on local display:<br>"Communication Error"<br>"Check Electronics" | Communication between the display module and the electronics is interrupted. | <ul style="list-style-type: none"> <li>Check the cable and the connector between the main electronics module and display module.</li> <li>Order spare part → 93.</li> </ul> |

#### *For output signals*

| Problem   | Possible causes  | Remedial action   |
|---|--|---|
| Green power LED on the main electronics module of the transmitter is dark | Supply voltage does not match that specified on the nameplate.     | Apply the correct supply voltage → 31.  |
| Device measures incorrectly.  | Configuration error or device is operated outside the application. | <ol style="list-style-type: none"> <li>Check and correct parameter configuration.</li> <li>Observe limit values specified in the "Technical Data".</li> </ol> |

#### *For access*

| Problem                       | Possible causes                   | Remedial action  |
|-------------------------------|-----------------------------------|--|
| No write access to parameters | Hardware write protection enabled | Set the write protection switch on the main electronics module to the OFF position → 67. |
| No connection via EtherNet/IP | Device plug connected incorrectly | Check the pin assignment of the device plug.   |

| Problem   | Possible causes  | Remedial action   |
|---|--|---|
| Not connecting to Web server                            | <ul style="list-style-type: none"> <li>Incorrect IP address</li> <li>IP address is not known</li> </ul>        | <ol style="list-style-type: none"> <li>If addressing via hardware: open the transmitter and check the IP address configured (last octet).</li> <li>Check the IP address of the measuring device with the network manager.</li> <li>If the IP address is not known, set DIP switch No. 10 on the I/O electronics module to ON, restart the device and enter the default setting for the IP address 192.168.1.212.</li> </ol> <p> EtherNet/IP communication is interrupted by enabling the DIP switch.</p> |
| Not connecting to Web server                            | Incorrect setting for the Ethernet interface of the computer   | <ol style="list-style-type: none"> <li>Check the properties of the Internet protocol (TCP/IP) →  39.</li> <li>Check the network settings with the IT manager.</li> </ol>   |
| Not connecting to Web server                            | Web server disabled  | Via the "FieldCare" operating tool check whether the Web server of the measuring device is enabled and enable it if necessary →  41.   |
| Not connecting to Web server                            | The use of the proxy server is not disabled in the Web browser settings of the computer.                       | <p>Disable the use of the proxy server in the Web browser settings of the computer.</p> <p>Using the example of MS Internet Explorer:</p> <ol style="list-style-type: none"> <li>Under <i>Control Panel</i> open <i>Internet options</i>.</li> <li>Select the <i>Connections</i> tab and then double-click <i>LAN settings</i>.</li> <li>In the <i>LAN settings</i> disable the use of the proxy server and select <i>OK</i> to confirm.</li> </ol>   |
| Not connecting to Web server                            | Other network connections or programs are still active on the computer.  | <ul style="list-style-type: none"> <li>Make sure that no other network connections are established by the computer (also no WLAN) and close other programs with network access to the computer.</li> <li>If using a docking station for notebooks make sure that a network connection to another network is not active.</li> </ul>  |
| No or incomplete display of contents in the Web browser | <ul style="list-style-type: none"> <li>JavaScript not enabled</li> <li>JavaScript cannot be enabled</li> </ul> | <ol style="list-style-type: none"> <li>Enable JavaScript.</li> <li>Enter <code>http://XXX.XXX.X.XXX/basic.html</code> as the IP address.</li> </ol>   |
| Web browser frozen and operation no longer possible     | Data transfer active   | Wait until data transfer or current action is finished.   |
| Web browser frozen and operation no longer possible     | Connection lost  | <ol style="list-style-type: none"> <li>Check cable connection and power supply.</li> <li>Refresh the Web browser and restart if necessary.</li> </ol>   |
| Content of Web browser incomplete or difficult to read  | Not using optimum version of Web server.   | <ol style="list-style-type: none"> <li>Use the correct Web browser version →  38.</li> <li>Clear the Web browser cache and restart the Web browser.</li> </ol>   |
| Content of Web browser incomplete or difficult to read  | Unsuitable view settings.  | Change the font size/display ratio of the Web browser.  |

## 12.2 Diagnostic information via light emitting diodes

### 12.2.1 Transmitter



Various light emitting diodes (LEDs) on the main electronics module of the transmitter provide information on device status.

| LED            | Color                              | Meaning  |
|----------------|------------------------------------|--|
| Power          | Off                                | Supply voltage is off or too low                             |
|                | Green                              | Supply voltage is ok   |
| Device status  | Green                              | Device status is ok  |
|                | Flashing red                       | A device error of diagnostic behavior "Warning" has occurred |
|                | Red                                | A device error of diagnostic behavior "Alarm" has occurred   |
|                | Alternately flashing red/<br>green | Boot loader is active  |
| Network status | Off                                | Device has no EtherNet/IP address                            |
|                | Green                              | Device's EtherNet/IP connection is active                    |
|                | Flashing green                     | Device has EtherNet/IP address but no EtherNet/IP connection |
|                | Red                                | EtherNet/IP address of the device has been assigned twice    |
|                | Flashing red                       | Device's EtherNet/IP connection is in timeout mode           |
| Link/Activity  | Orange                             | Link available but no activity                               |
|                | Flashing orange                    | Activity present   |
| Communication  | Flashing white                     |  |




## 12.3 Diagnostic information on local display

### 12.3.1 Diagnostic message

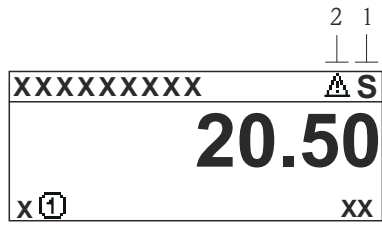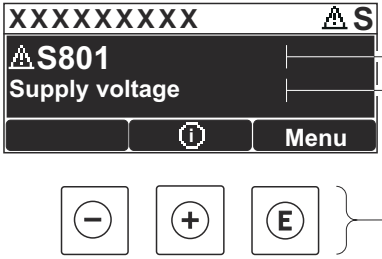Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.


| Operational display in alarm condition  | Diagnostic message   |
|---|--|
|    |  |
| <p>1 Status signal<br/>2 Diagnostic behavior<br/>3 Diagnostic behavior with diagnostic code<br/>4 Short text<br/>5 Operating elements</p> |  |

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

-  Other diagnostic events that have occurred can be called up in the **Diagnostics** menu:
  - Via parameters →  85
  - Via submenus →  86



#### Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

-  The status signals are categorized according to VDI/VDE 2650 and NAMUR Recommendation NE 107: F = Failure, C = Function Check, S = Out of Specification, M = Maintenance Required


| Symbol                           | Meaning   |
|----------------------------------|---|
| <div>F</div> <div>A0013956</div> | <b>Failure</b><br>A device error has occurred. The measured value is no longer valid.   |
| <div>C</div> <div>A0013959</div> | <b>Function check</b><br>The device is in service mode (e.g. during a simulation).  |
| <div>S</div> <div>A0013958</div> | <b>Out of specification</b><br>The device is operated:<br>Outside its technical specification limits (e.g. outside the process temperature range) |
| <div>M</div> <div>A0013957</div> | <b>Maintenance required</b><br>Maintenance is required. The measured value remains valid.   |

Diagnostic behavior



| Symbol   | Meaning   |
|--|---|
| <br><small>A0013961</small> | <b>Alarm</b> <ul style="list-style-type: none"><li>■ Measurement is interrupted.</li><li>■ Signal outputs and totalizers assume the defined alarm condition.</li><li>■ A diagnostic message is generated.</li></ul> |
| <br><small>A0013962</small> | <b>Warning</b> <p>Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.</p>  |

Diagnostic information

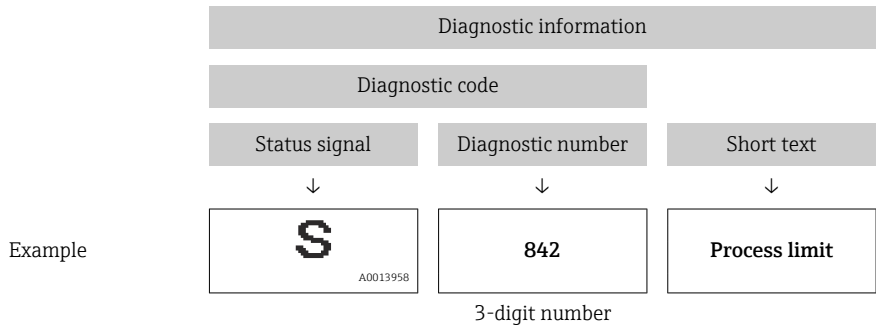
The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault.



Operating elements

| Key  | Meaning   |
|--|---|
| <br><small>A0013970</small> | <b>Plus key</b> <p><i>In a menu, submenu</i><br/>Opens the message about the remedial measures.</p> |
| <br><small>A0013952</small> | <b>Enter key</b> <p><i>In a menu, submenu</i><br/>Opens the operating menu.</p>                     |

### 12.3.2 Calling up remedial measures

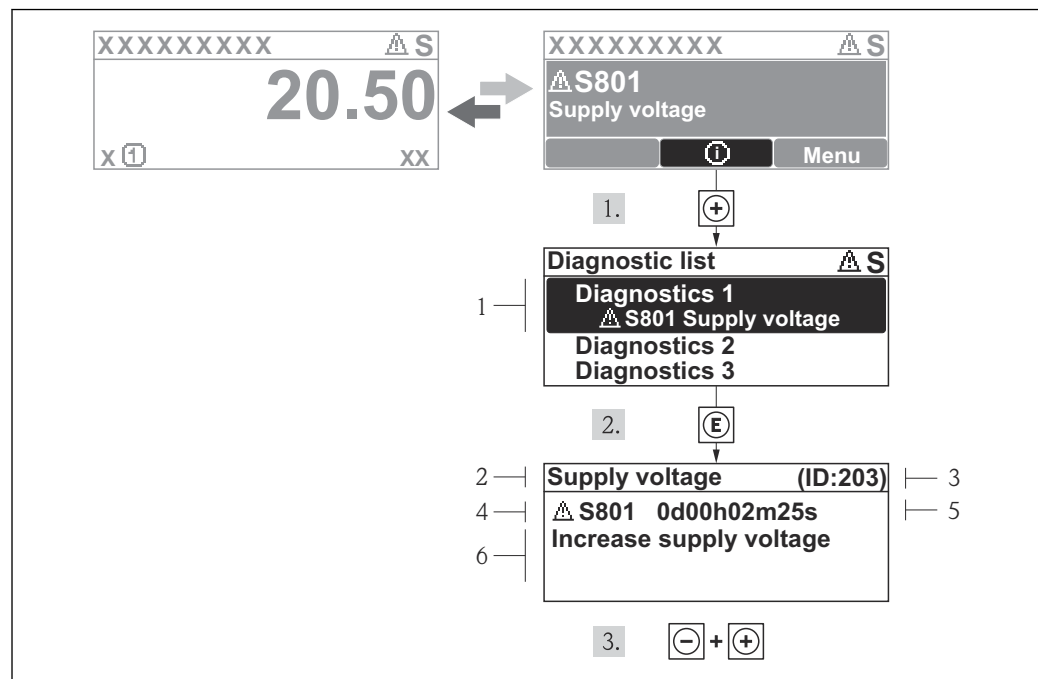

A0013940-EN

15 Message for remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

1. Press the '+' button (with an 'i' symbol).  
↳ The **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with the '+' or '-' button and press the 'E' button.  
↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press the '-' and '+' buttons simultaneously.  
↳ The message for the remedial measures closes.

The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or the **Previous diagnostics** parameter.

1. Press the 'E' button.  
↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press the '-' and '+' buttons simultaneously.  
↳ The message for the remedial measures closes.

## 12.4 Diagnostic information in the Web browser

### 12.4.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

1

Device tag

Actual diagnos.

Check (C)

Volume flow 0.0000 l/h

Mass flow 0.0000 kg/h

Measured values

Menu

Health status

Data management

Network

Health status

Diagnostics 1: C485 : Sim. meas.var. (Warning) 0d11h08m04s Deactivate simulation (Service ID 147)

Diagnostics 2: OK

Diagnostics 3: OK

Diagnostics 4: OK

Diagnostics 5: OK

2

3

1



2

3

A0017759-EN





- 1 Status area with status signal
- 2 Diagnostic information
- 3 Remedial measures with Service ID

**i** Furthermore, diagnostic events that have occurred can be viewed in the **Diagnostics** menu:

- Via parameters →  85
- Via submenus →  86

### Status signals


The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

| Symbol  | Meaning   |
|---|---|
| <br>A0017271 | <b>Failure</b><br>A device error has occurred. The measured value is no longer valid.   |
| <br>A0017278 | <b>Function check</b><br>The device is in service mode (e.g. during a simulation).  |
| <br>A0017277 | <b>Out of specification</b><br>The device is operated:<br>Outside its technical specification limits (e.g. outside the process temperature range) |
| <br>A0017276 | <b>Maintenance required</b><br>Maintenance is required. The measured value is still valid.  |

**i** The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

**Diagnostic information**

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault.

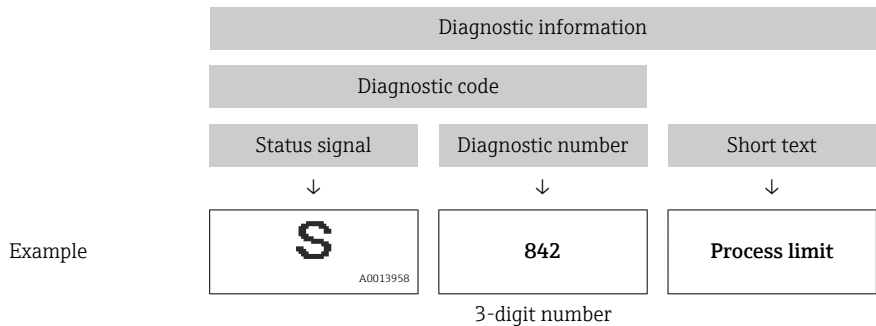

**12.4.2 Calling up remedy information**


Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

**12.5 Diagnostic information in FieldCare**

**12.5.1 Diagnostic options**

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.



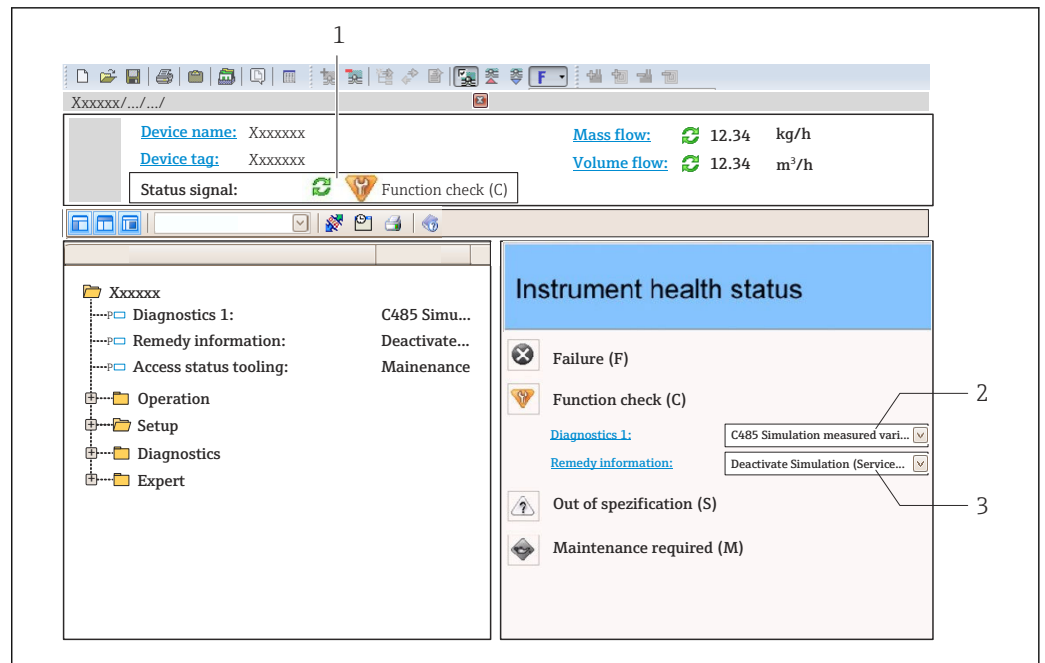

A0021799-EN


- 1 Status area with status signal → 76
- 2 Diagnostic information → 77
- 3 Remedial measures with Service ID

**i** Furthermore, diagnostic events that have occurred can be viewed in the **Diagnostics** menu:

- Via parameters → 85
- Via submenu → 86

### Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault.

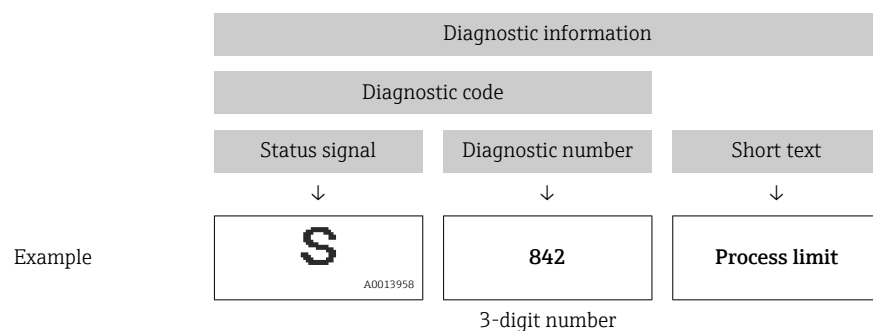

### 12.5.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page  
Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu  
Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

1. Call up the desired parameter.

2.
- On the right in the working area, mouse over the parameter.
- A tool tip with remedy information for the diagnostic event appears.

## 12.6 Diagnostic information via communication interface

### 12.6.1 Reading out diagnostic information

The current diagnostic event and associated diagnostic information can be read out via the input assembly (fix assembly):

|          |                       |   |   |   |                            |   |   |   |
|----------|-----------------------|---|---|---|----------------------------|---|---|---|
| Bytes    | 0                     | 1 | 2 | 3 | 4                          | 5 | 6   | 7 |
|          | ↓                     |   |   |   | ↓                          |   | ↓   |   |
| Contents | "Empty" or "Reserved" |   |   |   | "Empty" or "Padding bytes" |   | Diagnostic number of diagnostic event which is displayed in the <b>Actual diagnostics</b> parameter<br>→ ⓘ 85, e.g. 242 |   |

ⓘ

For content of bytes 8 to 16

## 12.7 Adapting the diagnostic information

### 12.7.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for certain diagnostic information in the **Diagnostic behavior** submenu .

Expert → System → Diagnostic handling → Diagnostic behavior

You can assign the following options to the diagnostic number as the diagnostic behavior:

| Options            | Description   |
|--------------------|---|
| Alarm              | Measurement is interrupted. The totalizers assume the defined alarm condition. A diagnostic message is generated.   |
| Warning            | Measurement is resumed. The totalizers are not affected. A diagnostics message is generated.  |
| Logbook entry only | The device continues to measure. The diagnostic message is entered in the Event logbook (events list) submenu only and is not displayed in alternation with the measured value display. |
| Off                | The diagnostic event is ignored, and no diagnostic message is generated or entered.   |

## 12.8 Overview of diagnostic information

- ⓘ
- The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.
- ⓘ
- In the case of some items of diagnostic information, the status signal and the diagnostic behavior can be changed. Adapt the diagnostic information → ⓘ 82

| Diagnostic number               | Short text               | Remedy instructions  | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|---------------------------------|--------------------------|--|----------------------------------|--|
| <b>Diagnostic of sensor</b>     |                          |  |                                  |  |
| 022                             | Sensor temperature       | 1. Change main electronic module<br>2. Change sensor                     | F                                | Alarm                                  |
| 046                             | Sensor limit exceeded    | 1. Inspect sensor<br>2. Check process condition                          | S                                | Alarm                                  |
| 062                             | Sensor connection        | 1. Change main electronic module<br>2. Change sensor                     | F                                | Alarm                                  |
| 082                             | Data storage             | 1. Check module connections<br>2. Contact service                        | F                                | Alarm                                  |
| 083                             | Memory content           | 1. Restart device<br>2. Contact service                                  | F                                | Alarm                                  |
| 140                             | Sensor signal            | 1. Check or change main electronics<br>2. Change sensor                  | S                                | Alarm                                  |
| 144                             | Measuring error too high | 1. Check or change sensor<br>2. Check process conditions                 | F                                | Alarm                                  |
| 190                             | Special event 1          | Contact service  | F                                | Alarm                                  |
| 191                             | Special event 5          | Contact service  | F                                | Alarm                                  |
| 192                             | Special event 9          | Contact service  | F                                | Alarm <sup>1)</sup>                    |
| <b>Diagnostic of electronic</b> |                          |  |                                  |  |
| 201                             | Device failure           | 1. Restart device<br>2. Contact service                                  | F                                | Alarm                                  |
| 242                             | Software incompatible    | 1. Check software<br>2. Flash or change main electronics module          | F                                | Alarm                                  |
| 252                             | Modules incompatible     | 1. Check electronic modules<br>2. Change electronic modules              | F                                | Alarm                                  |
| 262                             | Module connection        | 1. Check module connections<br>2. Change main electronics                | F                                | Alarm                                  |
| 270                             | Main electronic failure  | Change main electronic module  | F                                | Alarm                                  |
| 271                             | Main electronic failure  | 1. Restart device<br>2. Change main electronic module                    | F                                | Alarm                                  |
| 272                             | Main electronic failure  | 1. Restart device<br>2. Contact service                                  | F                                | Alarm                                  |
| 273                             | Main electronic failure  | Change electronic  | F                                | Alarm                                  |
| 274                             | Main electronic failure  | Change electronic  | S                                | Warning                                |
| 283                             | Memory content           | 1. Reset device<br>2. Contact service                                    | F                                | Alarm                                  |
| 311                             | Electronic failure       | 1. Reset device<br>2. Contact service                                    | F                                | Alarm                                  |
| 311                             | Electronic failure       | 1. Do not reset device<br>2. Contact service                             | M                                | Warning                                |
| 382                             | Data storage             | 1. Insert DAT module<br>2. Change DAT module                             | F                                | Alarm                                  |
| 383                             | Memory content           | 1. Restart device<br>2. Check or change DAT module<br>3. Contact service | F                                | Alarm                                  |

| Diagnostic number                  | Short text                      | Remedy instructions  | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|------------------------------------|---------------------------------|--|----------------------------------|--|
| 390                                | Special event 2                 | Contact service  | F                                | Alarm                                  |
| 391                                | Special event 6                 | Contact service  | F                                | Alarm                                  |
| 392                                | Special event 10                | Contact service  | F                                | Alarm <sup>1)</sup>                    |
| <b>Diagnostic of configuration</b> |                                 |  |                                  |  |
| 410                                | Data transfer                   | 1. Check connection<br>2. Retry data transfer  | F                                | Alarm                                  |
| 411                                | Up-/download active             | Up-/download active, please wait   | C                                | Warning                                |
| 437                                | Configuration incompatible      | 1. Restart device<br>2. Contact service  | F                                | Alarm                                  |
| 438                                | Dataset                         | 1. Check data set file<br>2. Check device configuration<br>3. Up- and download new configuration | M                                | Warning                                |
| 453                                | Flow override                   | Deactivate flow override   | C                                | Warning                                |
| 484                                | Simulation failure mode         | Deactivate simulation  | C                                | Alarm                                  |
| 485                                | Simulation measured variable    | Deactivate simulation  | C                                | Warning                                |
| 495                                | Simulation diagnostic event     | Deactivate simulation  | C                                | Warning                                |
| 537                                | Configuration                   | 1. Check IP addresses in network<br>2. Change IP address   | F                                | Warning                                |
| 590                                | Special event 3                 | Contact service  | F                                | Alarm                                  |
| 591                                | Special event 7                 | Contact service  | F                                | Alarm                                  |
| 592                                | Special event 11                | Contact service  | F                                | Alarm <sup>1)</sup>                    |
| <b>Diagnostic of process</b>       |                                 |  |                                  |  |
| 825                                | Operating temperature           | 1. Check ambient temperature<br>2. Check process temperature                                     | S                                | Warning                                |
| 825                                | Operating temperature           |  | F                                | Alarm                                  |
| 830                                | Sensor temperature too high     | Reduce ambient temp. around the sensor housing   | S                                | Warning                                |
| 831                                | Sensor temperature too low      | Increase ambient temp. around the sensor housing   | S                                | Warning                                |
| 832                                | Electronic temperature too high | Reduce ambient temperature   | S                                | Warning <sup>1)</sup>                  |
| 833                                | Electronic temperature too low  | Increase ambient temperature   | S                                | Warning <sup>1)</sup>                  |
| 834                                | Process temperature too high    | Reduce process temperature   | S                                | Warning <sup>1)</sup>                  |
| 835                                | Process temperature too low     | Increase process temperature   | S                                | Warning <sup>1)</sup>                  |
| 842                                | Process limit                   | Low flow cut off active!<br>1. Check low flow cut off configuration                              | S                                | Warning                                |
| 843                                | Process limit                   | Check process conditions   | S                                | Warning                                |
| 862                                | Partly filled pipe              | 1. Check for gas in process<br>2. Adjust detection limits  | S                                | Warning                                |
| 882                                | Input signal                    | 1. Check input configuration<br>2. Check external device or process conditions                   | F                                | Alarm                                  |

| Diagnostic number | Short text            | Remedy instructions  | Status signal [from the factory] | Diagnostic behavior [from the factory] |
|-------------------|-----------------------|--|----------------------------------|--|
| 910               | Tubes not oscillating | 1. Check electronic<br>2. Inspect sensor                             | F                                | Alarm                                  |
| 912               | Medium inhomogeneous  | 1. Check process cond.<br>2. Increase system pressure                | S                                | Warning                                |
| 912               | Inhomogeneous         |  | S                                | Warning                                |
| 913               | Medium unsuitable     | 1. Check process conditions<br>2. Check electronic modules or sensor | S                                | Alarm                                  |
| 944               | Monitoring failed     | Check process conditions for Heartbeat Monitoring                    | S                                | Warning                                |
| 948               | Tube damping too high | Check process conditions   | S                                | Warning                                |
| 990               | Special event 4       | Contact service  | F                                | Alarm                                  |
| 991               | Special event 8       | Contact service  | F                                | Alarm                                  |
| 992               | Special event 12      | Contact service  | F                                | Alarm <sup>1)</sup>                    |

1) Diagnostic behavior can be changed.

## 12.9 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.



To call up the measures to rectify a diagnostic event:

- Via Web browser → 80
- Via "FieldCare" operating tool → 81




Other pending diagnostic events can be displayed in the **Diagnostic list** submenu → 86


### Navigation

"Diagnostics" menu

### Structure of the submenu

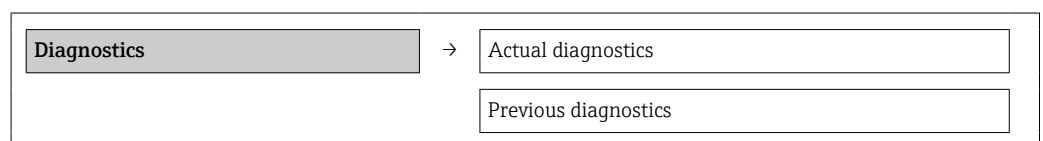

**Parameter overview with brief description**


| Parameter            | Prerequisite                               | Description  | User interface   | Factory setting |
|----------------------|--|--|--|-----------------|
| Actual diagnostics   | 1 diagnostic event has occurred.           | Displays the current diagnostic event along with the diagnostic information.<br> If two or more messages occur simultaneously, the message with the highest priority is shown on the display. | Symbol for diagnostic behavior, diagnostic code and short message. | –               |
| Previous diagnostics | 2 diagnostic events have already occurred. | Displays the diagnostic event that occurred prior to the current diagnostic event along with the diagnostic information.   | Symbol for diagnostic behavior, diagnostic code and short message. | –               |



## 12.10 Diagnostic list

In the **Diagnostic list** submenu, up to 5 currently pending diagnostic events can be displayed along with the related diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

**Navigation path**

**Diagnostics** menu → **Diagnostic list** submenu

 To call up the measures to rectify a diagnostic event:

- Via Web browser →  80
- Via "FieldCare" operating tool →  81

## 12.11 Event logbook

### 12.11.1 Event history



A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

**Navigation path**




"Diagnostics" menu → Event logbook → Events list


A maximum of 20 event messages can be displayed in chronological order.



The event history includes entries for:

- Diagnostic events →  82
- Information events →  87

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
  - : Event has occurred
  - : Event has ended
- Information event
  - : Event has occurred

 To call up the measures to rectify a diagnostic event:

- Via Web browser →  80
- Via "FieldCare" operating tool →  81

 For filtering the displayed event messages →  87

### 12.11.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Events list** submenu.

#### Navigation path

"Diagnostics" menu → Event logbook → Filter options

#### Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

### 12.11.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

| Info number | Info name                         |
|-------------|-----------------------------------|
| I1000       | ----- (Device ok)                 |
| I1089       | Power on                          |
| I1090       | Configuration reset               |
| I1091       | Configuration changed             |
| I1110       | Write protection switch changed   |
| I1111       | Density adjust failure            |
| I1137       | Electronic changed                |
| I1151       | History reset                     |
| I1155       | Reset electronic temperature      |
| I1157       | Memory error event list           |
| I1185       | Display backup done               |
| I1186       | Restore via display done          |
| I1187       | Settings downloaded with display  |
| I1188       | Display data cleared              |
| I1189       | Backup compared                   |
| I1209       | Density adjustment ok             |
| I1221       | Zero point adjust failure         |
| I1222       | Zero point adjustment ok          |
| I1256       | Display: access status changed    |
| I1264       | Safety sequence aborted           |
| I1335       | Firmware changed                  |
| I1361       | Wrong web server login            |
| I1397       | Fieldbus: access status changed   |
| I1398       | CDI: access status changed        |
| I1444       | Device verification passed        |
| I1445       | Device verification failed        |
| I1446       | Device verification active        |
| I1447       | Record application reference data |

| Info number | Info name                                |
|-------------|--|
| I1448       | Application reference data recorded      |
| I1449       | Recording application ref. data failed   |
| I1450       | Monitoring off                           |
| I1451       | Monitoring on                            |
| I1457       | Failed:Measured error verification       |
| I1459       | Failed: I/O module verification          |
| I1460       | Failed: Sensor integrity verification    |
| I1461       | Failed: Sensor verification              |
| I1462       | Failed:Sensor electronic module verific. |

## 12.12 Resetting the measuring device

Using the **Device reset** parameter it is possible to reset the entire device configuration or some of the configuration to a defined state.

### Navigation

"Setup" menu → Advanced setup → Administration → Device reset

The screenshot shows a web-based configuration interface. At the top, there is a grey button labeled '► Administration'. Below it, a sub-menu is displayed with a grey button labeled '► Define access code'. Under this sub-menu, there are two input fields: 'Define access code' and 'Confirm access code'. At the bottom of the sub-menu, there is a button labeled 'Device reset'.

### Parameter overview with brief description

| Parameter    | Description                       | Selection  |
|--------------|-----------------------------------|--|
| Device reset | Restart or reset device manually. | <ul style="list-style-type: none"> <li>■ Cancel</li> <li>■ To delivery settings</li> <li>■ Restart device</li> </ul> |

#### 12.12.1 Function scope of "Device reset" parameter

| Options              | Description   |
|----------------------|---|
| Cancel               | No action is executed and the user exits the parameter.   |
| To delivery settings | Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.    |
| Restart device       | The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged. |
| History reset        | Every parameter is reset to its factory setting.  |



## 12.13 Device information

The **Device information** submenu contains all the parameters that display different information for identifying the device.

### Navigation

"Diagnostics" menu → Device information

▶ Device information

### Parameter overview with brief description

| Parameter        | Description   | User interface / User entry   | Factory setting |
|------------------|---|---|-----------------|
| Device tag       | Enter the name for the measuring point.             | Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /) | –               |
| Serial number    | Displays the serial number of the measuring device. | Max. 11-digit character string comprising letters and numbers.                    | –               |
| Firmware version | Displays the device firmware version installed.     | Character string with the following format:<br>xx.yy.zz                           | –               |
| Device name      | Displays the name of the transmitter.               | Character string composed of letters, numbers and certain punctuation marks.      | –               |
| Order code       | Displays the device order code.                     | Character string composed of letters, numbers and certain punctuation marks       | –               |

| Parameter             | Description  | User interface / User entry                 | Factory setting |
|-----------------------|--|---|-----------------|
| Extended order code 1 | Displays the 1st part of the extended order code.                  | Character string                            | –               |
| Extended order code 2 | Displays the 2nd part of the extended order code.                  | Character string                            | –               |
| Extended order code 3 | Displays the 3rd part of the extended order code.                  | Character string                            | –               |
| ENP version           | Displays the version of the electronic nameplate.                  | Character string in the format xx.yy.zz     | –               |
| IP address            | Displays the IP address of the Web server of the measuring device. | 4 octet: 0 to 255 (in the particular octet) | –               |
| Subnet mask           | Displays the subnet mask.  | 4 octet: 0 to 255 (in the particular octet) | –               |
| Default gateway       | Displays the default gateway.                                      | 4 octet: 0 to 255 (in the particular octet) | –               |

## 12.14 Firmware history

| Release date | Firmware version | Order code for "Firmware version" | Firmware changes  | Documentation type     | Documentation        |
|--------------|------------------|-----------------------------------|---|------------------------|----------------------|
| 06.2012      | 01.00.00         | Option 77                         | Original firmware   | Operating Instructions | BA01066D/06/EN/01.12 |
| 04.2013      | 01.01.zz         | Option 73                         | <ul style="list-style-type: none"> <li>▪ Fieldbus access level was changed from service to maintenance</li> <li>▪ Improved calculation: <ul style="list-style-type: none"> <li>▪ Target mass flow</li> <li>▪ Carrier mass flow</li> </ul> </li> <li>▪ Option to access application packages: <ul style="list-style-type: none"> <li>▪ Heartbeat Technology</li> <li>▪ Concentration</li> <li>▪ Viscosity</li> </ul> </li> </ul> | Operating Instructions | BA01066D/06/EN/02.13 |
| 10.2014      | 01.02.zz         | Option 71                         | <ul style="list-style-type: none"> <li>▪ Integration of optional local display</li> <li>▪ Heartbeat functionality for Rockwell AOP</li> <li>▪ New unit "Beer Barrel (BBL)"</li> <li>▪ Monitoring of measuring tube damping</li> <li>▪ Simulation of diagnostic events</li> </ul>  | Operating Instructions | BA01066D/06/EN/03.14 |



Flashing the firmware to the current version or to the previous version is possible via the service interface (CDI) .



For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.



The manufacturer's information is available:

- In the Download Area of the Endress+Hauser Internet site: [www.endress.com](http://www.endress.com) → Download
- Specify the following details:
  - Product root, e.g. 8E1B
  - Text search: Manufacturer's information
  - Search range: documentation

## 13 Maintenance

### 13.1 Maintenance tasks


No special maintenance work is required.

#### 13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

#### 13.1.2 Interior cleaning

Observe the following points for CIP and SIP cleaning:

- Use only cleaning agents to which the process-wetted materials are adequately resistant.
- Observe the maximum permitted medium temperature for the measuring device  
→  108.

Observe the following point for cleaning with pigs:

Observe the inside diameter of the measuring tube and process connection.

### 13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.



Your Endress+Hauser Sales Center can provide detailed information on the services.



For a list of some of the measuring and test equipment, refer to the "Accessories" chapter of the "Technical Information" document for the device.

### 13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.



Your Endress+Hauser Sales Center can provide detailed information on the services.

## 14 Repair

### 14.1 General notes

#### Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by correspondingly trained customers.
- Certified devices can be converted into other certified devices by Endress+Hauser Service or at the factory only.

#### Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- Use only original Endress+Hauser spare parts.
- Carry out the repair according to the Installation Instructions.
- Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- Document every repair and each conversion and enter them into the *W@M* life cycle management database.

### 14.2 Spare parts

*W@M Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.



Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the **Serial number** parameter in the **Device information** submenu → 89.

### 14.3 Endress+Hauser services



Contact your Endress+Hauser Sales Center for information on services and spare parts.

### 14.4 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <http://www.endress.com/support/return-material>

### 14.5 Disposal

#### 14.5.1 Removing the measuring device

1. Switch off the device.

2.

**⚠ WARNING****Danger to persons from process conditions.**

- ▶ Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.

Carry out the mounting and connection steps from the chapters "Mounting the measuring device" and "Connecting the measuring device" in the logically reverse sequence. Observe the safety instructions.

### 14.5.2 Disposing of the measuring device

**⚠ WARNING****Danger to personnel and environment from fluids that are hazardous to health.**

- ▶ Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:


- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.

## 15 Accessories


Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: [www.endress.com](http://www.endress.com).

### 15.1 Device-specific accessories



#### 15.1.1 For the sensor

| Accessories    | Description  |
|----------------|--|
| Heating jacket | <p>Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids. If using oil as a heating medium, please consult with Endress+Hauser.</p> <p> For details, see Operating Instructions BA00099D</p> |

### 15.2 Service-specific accessories

| Accessories | Description   |
|-------------|---|
| Applicator  | <p>Software for selecting and sizing Endress+Hauser measuring devices:</p> <ul style="list-style-type: none"> <li>■ Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, accuracy or process connections.</li> <li>■ Graphic illustration of the calculation results</li> </ul> <p>Administration, documentation and access to all project-related data and parameters throughout the entire life cycle of a project.</p> <p>Applicator is available:</p> <ul style="list-style-type: none"> <li>■ Via the Internet: <a href="https://wapps.endress.com/applicator">https://wapps.endress.com/applicator</a></li> <li>■ On CD-ROM for local PC installation.</li> </ul>   |
| W@M         | <p>Life cycle management for your plant</p> <p>W@M supports you with a wide range of software applications over the entire process: from planning and procurement, to the installation, commissioning and operation of the measuring devices. All the relevant device information, such as the device status, spare parts and device-specific documentation, is available for every device over the entire life cycle.</p> <p>The application already contains the data of your Endress+Hauser device. Endress+Hauser also takes care of maintaining and updating the data records.</p> <p>W@M is available:</p> <ul style="list-style-type: none"> <li>■ Via the Internet: <a href="http://www.endress.com/lifecyclemanagement">www.endress.com/lifecyclemanagement</a></li> <li>■ On CD-ROM for local PC installation.</li> </ul> |
| FieldCare   | <p>FDT-based plant asset management tool from Endress+Hauser.</p> <p>It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.</p> <p> For details, see Operating Instructions BA00027S and BA00059S</p>   |

## 15.3 System components

| Accessories                          | Description   |
|--------------------------------------|---|
| Memograph M graphic display recorder | <p>The Memograph M graphic display recorder provides information on all relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.</p> <p> For details, see "Technical Information" TI00133R and Operating Instructions BA00247R</p> |
| iTEMP                                | <p>The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the fluid temperature.</p> <p> For details, see "Fields of Activity", FA00006T</p>   |



## 16 Technical data

### 16.1 Application


The measuring device is suitable for flow measurement of liquids and gases only.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are adequately resistant.

### 16.2 Function and system design

|                     |   |
|---------------------|---|
| Measuring principle | Mass flow measurement based on the Coriolis measuring principle |
|---------------------|---|

|                  |   |
|------------------|---|
| Measuring system | <p>The device consists of a transmitter and a sensor.</p> <p>One device version is available: compact version - transmitter and sensor form a mechanical unit.</p> <p>For information on the structure of the device →  12</p> |
|------------------|---|

### 16.3 Input

|                   |  |
|-------------------|--|
| Measured variable | <p><b>Direct measured variables</b></p> <ul style="list-style-type: none"> <li>■ Mass flow</li> <li>■ Density</li> <li>■ Temperature</li> <li>■ Viscosity</li> </ul> <p><b>Calculated measured variables</b></p> <ul style="list-style-type: none"> <li>■ Volume flow</li> <li>■ Corrected volume flow</li> <li>■ Reference density</li> </ul> |
|-------------------|--|

|                 |                              |
|-----------------|------------------------------|
| Measuring range | Measuring ranges for liquids |
|-----------------|------------------------------|

| DN    |                   | Measuring range full scale values $\dot{m}_{\min(F)}$ to $\dot{m}_{\max(F)}$ |            |
|-------|-------------------|--|------------|
| [mm]  | [in]              | [kg/h]   | [lb/min]   |
| 8     | $\frac{3}{8}$     | 0 to 2 000   | 0 to 73.50 |
| 15    | $\frac{1}{2}$     | 0 to 6 500   | 0 to 238.9 |
| 15 FB | $\frac{1}{2}$ FB  | 0 to 18 000  | 0 to 661.5 |
| 25    | 1                 | 0 to 18 000  | 0 to 661.5 |
| 25 FB | 1 FB              | 0 to 45 000  | 0 to 1 654 |
| 40    | $1\frac{1}{2}$    | 0 to 45 000  | 0 to 1 654 |
| 40 FB | $1\frac{1}{2}$ FB | 0 to 70 000  | 0 to 2 573 |
| 50    | 2                 | 0 to 70 000  | 0 to 2 573 |

| DN             |      | Measuring range full scale values $\dot{m}_{\min(F)}$ to $\dot{m}_{\max(F)}$ |            |
|----------------|------|--|------------|
| [mm]           | [in] | [kg/h]   | [lb/min]   |
| 50 FB          | 2 FB | 0 to 180 000   | 0 to 6 615 |
| 80             | 3    | 0 to 180 000   | 0 to 6 615 |
| FB = Full bore |      |  |            |

### Measuring ranges for gases

The full scale values depend on the density of the gas and can be calculated with the formula below:

$$\dot{m}_{\max(G)} = \dot{m}_{\max(F)} \cdot \rho_G : x$$

|   |   |
|---|---|
| $\dot{m}_{\max(G)}$                     | Maximum full scale value for gas [kg/h]                           |
| $\dot{m}_{\max(F)}$                     | Maximum full scale value for liquid [kg/h]                        |
| $\dot{m}_{\max(G)} < \dot{m}_{\max(F)}$ | $\dot{m}_{\max(G)}$ can never be greater than $\dot{m}_{\max(F)}$ |
| $\rho_G$                                | Gas density in [kg/m <sup>3</sup> ] at operating conditions       |

| DN             |                   | x                    |
|----------------|-------------------|----------------------|
| [mm]           | [in]              | [kg/m <sup>3</sup> ] |
| 8              | $\frac{3}{8}$     | 60                   |
| 15             | $\frac{1}{2}$     | 80                   |
| 15 FB          | $\frac{1}{2}$ FB  | 90                   |
| 25             | 1                 | 90                   |
| 25 FB          | 1 FB              | 90                   |
| 40             | $1\frac{1}{2}$    | 90                   |
| 40 FB          | $1\frac{1}{2}$ FB | 90                   |
| 50             | 2                 | 90                   |
| 50 FB          | 2 FB              | 110                  |
| 80             | 3                 | 110                  |
| FB = Full bore |                   |                      |

### Calculation example for gas

- Sensor: Promass I, DN 50
- Gas: Air with a density of 60.3 kg/m<sup>3</sup> (at 20 °C and 50 bar)
- Measuring range (liquid): 70 000 kg/h
- x = 90 kg/m<sup>3</sup> (for Promass I, DN 50)

Maximum possible full scale value:

$$\dot{m}_{\max(G)} = \dot{m}_{\max(F)} \cdot \rho_G : x = 70\,000 \text{ kg/h} \cdot 60.3 \text{ kg/m}^3 : 90 \text{ kg/m}^3 = 46\,900 \text{ kg/h}$$

### Recommended measuring range

"Flow limit" section →  109

Operable flow range

Over 1000 : 1.

Flow rates above the preset full scale value are not overridden by the electronics unit, with the result that the totalizer values are registered correctly.

## 16.4 Output

Output signal

**EtherNet/IP**

|                  |                               |
|------------------|-------------------------------|
| <b>Standards</b> | In accordance with IEEE 802.3 |
|------------------|-------------------------------|

Signal on alarm

Depending on the interface, failure information is displayed as follows:

**EtherNet/IP**

|                           |  |
|---------------------------|--|
| <b>Device diagnostics</b> | Device condition can be read out in Input Assembly |
|---------------------------|--|

**Local display**

|                           |   |
|---------------------------|---|
| <b>Plain text display</b> | With information on cause and remedial measures |
| <b>Backlight</b>          | Red backlighting indicates a device error.      |



Status signal as per NAMUR recommendation NE 107

**Operating tool**

- Via digital communication:  
EtherNet/IP
- Via service interface

|                           |   |
|---------------------------|---|
| <b>Plain text display</b> | With information on cause and remedial measures |
|---------------------------|---|

**Web browser**

|                           |   |
|---------------------------|---|
| <b>Plain text display</b> | With information on cause and remedial measures |
|---------------------------|---|

**Light emitting diodes (LED)**

|                           |   |
|---------------------------|---|
| <b>Status information</b> | <p>Status indicated by various light emitting diodes</p> <p>The following information is displayed depending on the device version:</p> <ul style="list-style-type: none"> <li>▪ Supply voltage active</li> <li>▪ Data transmission active</li> <li>▪ Device alarm/error has occurred</li> <li>▪ EtherNet/IP network available</li> <li>▪ EtherNet/IP connection established</li> </ul> |
|---------------------------|---|

Low flow cut off

The switch points for low flow cut off are user-selectable.

Galvanic isolation


The following connections are galvanically isolated from each other:

- Outputs
- Power supply

## Protocol-specific data




**EtherNet/IP**


|          |  |  |  |
|----------|--|--|--|
| Protocol | <div><div></div><div><div></div><div></div></div><div><div></div><div></div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div><div></div><div></div></div> <div>&lt;</div> |  |  |
|----------|--|--|--|

|                             |  |          |             |
|-----------------------------|--|----------|-------------|
| Input Assembly              | <ul style="list-style-type: none"><li>■ Current device diagnostics</li><li>■ Mass flow</li><li>■ Volume flow</li><li>■ Corrected volume flow</li><li>■ Density</li><li>■ Reference density</li><li>■ Temperature</li><li>■ Totalizer 1</li><li>■ Totalizer 2</li><li>■ Totalizer 3</li></ul>   |          |             |
| Configurable Input          |  |          |             |
| RPI                         | 5 ms to 10 s (factory setting: 20 ms)  |          |             |
| Exclusive Owner Multicast   |  | Instance | Size [byte] |
|                             | Instance configuration:  | 0x68     | 398         |
|                             | O → T configuration:   | 0x66     | 64          |
|                             | T → O configuration:   | 0x65     | 88          |
| Exclusive Owner Multicast   |  | Instance | Size [byte] |
|                             | Instance configuration:  | 0x69     | -           |
|                             | O → T configuration:   | 0x66     | 64          |
|                             | T → O configuration:   | 0x65     | 88          |
| Input only Multicast        |  | Instance | Size [byte] |
|                             | Instance configuration:  | 0x68     | 398         |
|                             | O → T configuration:   | 0xC7     | -           |
|                             | T → O configuration:   | 0x65     | 88          |
| Input only Multicast        |  | Instance | Size [byte] |
|                             | Instance configuration:  | 0x69     | -           |
|                             | O → T configuration:   | 0xC7     | -           |
|                             | T → O configuration:   | 0x65     | 88          |
| Configurable Input Assembly | <ul style="list-style-type: none"><li>■ Current device diagnostics</li><li>■ Mass flow</li><li>■ Volume flow</li><li>■ Corrected volume flow</li><li>■ Density</li><li>■ Reference density</li><li>■ Temperature</li><li>■ Totalizer 1</li><li>■ Totalizer 2</li><li>■ Totalizer 3</li></ul> <div> The range of options increases if the measuring device has one or more application packages.</div> |          |             |
| Fix Output                  |  |          |             |
| Output Assembly             | <ul style="list-style-type: none"><li>■ Activation of reset totalizers 1-3</li><li>■ Activation of pressure compensation</li><li>■ Activation of reference density compensation</li><li>■ Activation of temperature compensation</li><li>■ Reset totalizers 1-3</li><li>■ External pressure value</li><li>■ Pressure unit</li><li>■ External reference density</li><li>■ Reference density unit</li><li>■ External temperature</li><li>■ Temperature unit</li></ul>                      |          |             |

| Configuration          |   |
|------------------------|---|
| Configuration Assembly | <div>Only the most common configurations are listed below.</div> <div><ul style="list-style-type: none"><li>■ Software write protection</li><li>■ Mass flow unit</li><li>■ Mass unit</li><li>■ Volume flow unit</li><li>■ Volume unit</li><li>■ Corrected volume flow unit</li><li>■ Corrected volume unit</li><li>■ Density unit</li><li>■ Reference density unit</li><li>■ Temperature unit</li><li>■ Pressure unit</li><li>■ Length</li><li>■ Totalizer 1-3:<ul style="list-style-type: none"><li>■ Assignment</li><li>■ Unit</li><li>■ Measuring mode</li><li>■ Failsafe mode</li></ul></li><li>■ Alarm delay</li></ul></div> |

16.5 Power supply

| Terminal assignment         | →  29  |                           |                         |                             |                           |                       |        |                   |
|-----------------------------|---|---------------------------|-------------------------|-----------------------------|---------------------------|-----------------------|--------|-------------------|
| Pin assignment, device plug | →  30  |                           |                         |                             |                           |                       |        |                   |
| Supply voltage              | <div>The power unit must be tested to ensure it meets safety requirements (e.g. PELV, SELV).</div> <div><b>Transmitter</b></div> <div>DC 20 to 30 V</div>   |                           |                         |                             |                           |                       |        |                   |
| Power consumption           | <div><b>Transmitter</b></div> <table><tr><th>Order code for "Output"</th><th colspan="2">Maximum Power consumption</th></tr><tr><td>Option N: EtherNet/IP</td><td colspan="2">3.5 W</td></tr></table>   |                           | Order code for "Output" | Maximum Power consumption   |                           | Option N: EtherNet/IP | 3.5 W  |                   |
| Order code for "Output"     | Maximum Power consumption   |                           |                         |                             |                           |                       |        |                   |
| Option N: EtherNet/IP       | 3.5 W   |                           |                         |                             |                           |                       |        |                   |
| Current consumption         | <div><b>Transmitter</b></div> <table><tr><th>Order code for "Output"</th><th>Maximum Current consumption</th><th>Maximum switch-on current</th></tr><tr><td>Option N: EtherNet/IP</td><td>145 mA</td><td>18 A (&lt; 0.125 ms)</td></tr></table>   |                           | Order code for "Output" | Maximum Current consumption | Maximum switch-on current | Option N: EtherNet/IP | 145 mA | 18 A (< 0.125 ms) |
| Order code for "Output"     | Maximum Current consumption   | Maximum switch-on current |                         |                             |                           |                       |        |                   |
| Option N: EtherNet/IP       | 145 mA  | 18 A (< 0.125 ms)         |                         |                             |                           |                       |        |                   |
| Power supply failure        | <div><ul style="list-style-type: none"><li>■ Totalizers stop at the last value measured.</li><li>■ Depending on the device version, the configuration is retained in the device memory or in the plug-in memory (HistoROM DAT).</li><li>■ Error messages (incl. total operated hours) are stored.</li></ul></div> |                           |                         |                             |                           |                       |        |                   |
| Electrical connection       | →  30  |                           |                         |                             |                           |                       |        |                   |

Potential equalization →  32

Terminals **Transmitter**  
Spring terminals for wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)

Cable entries




- Cable gland: M20 × 1.5 with cable  $\phi$  6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
  - NPT ½"
  - G ½"
  - M20

Cable specification →  28

## 16.6 Performance characteristics

Reference operating conditions

- Error limits based on ISO 11631
- Water with +15 to +45 °C (+59 to +113 °F) at 2 to 6 bar (29 to 87 psi)
- Specifications as per calibration protocol
- Accuracy based on accredited calibration rigs that are traced to ISO 17025.

 To obtain measured errors, use the *Applicator* sizing tool →  95 →  117

Maximum measured error o.r. = of reading; 1 g/cm<sup>3</sup> = 1 kg/l; T = medium temperature

### Base accuracy

#### Mass flow and volume flow (liquids)

±0.10 %

#### Mass flow (gases)

±0.50 % o.r.

 Design fundamentals →  106

### Density (liquids)

- Reference conditions: ±0.0005 g/cm<sup>3</sup>
- Standard density calibration: ±0.02 g/cm<sup>3</sup>  
(valid over the entire temperature range and density range)
- Wide-range density specification (order code for "Application package", option EF "Special density and concentration" or EH "Special density and viscosity"): ±0.004 g/cm<sup>3</sup> (valid range for special density calibration: 0 to 2 g/cm<sup>3</sup>, +10 to +80 °C (+50 to +176 °F))

### Temperature

±0.5 °C ± 0.005 · T °C (±0.9 °F ± 0.003 · (T – 32) °F)

### Zero point stability

| DN    |      | Zero point stability |          |
|-------|------|----------------------|----------|
| [mm]  | [in] | [kg/h]               | [lb/min] |
| 8     | ⅜    | 0.150                | 0.0055   |
| 15    | ½    | 0.488                | 0.0179   |
| 15 FB | ½ FB | 1.350                | 0.0496   |
| 25    | 1    | 1.350                | 0.0496   |

| DN             |        | Zero point stability |          |
|----------------|--------|----------------------|----------|
| [mm]           | [in]   | [kg/h]               | [lb/min] |
| 25 FB          | 1 FB   | 3.375                | 0.124    |
| 40             | 1½     | 3.375                | 0.124    |
| 40 FB          | 1 ½ FB | 5.25                 | 0.193    |
| 50             | 2      | 5.25                 | 0.193    |
| 50 FB          | 2 FB   | 13.5                 | 0.496    |
| 80             | 3      | 13.5                 | 0.496    |
| FB = Full bore |        |                      |          |

### Flow values

Flow values as turndown parameter depending on nominal diameter.

#### SI units

| DN             | 1:1     | 1:10   | 1:20   | 1:50   | 1:100  | 1:500  |
|----------------|---------|--------|--------|--------|--------|--------|
| [mm]           | [kg/h]  | [kg/h] | [kg/h] | [kg/h] | [kg/h] | [kg/h] |
| 8              | 2 000   | 200    | 100    | 40     | 20     | 4      |
| 15             | 6 500   | 650    | 325    | 130    | 65     | 13     |
| 15 FB          | 18 000  | 1 800  | 900    | 360    | 180    | 36     |
| 25             | 18 000  | 1 800  | 900    | 360    | 180    | 36     |
| 25 FB          | 45 000  | 4 500  | 2 250  | 900    | 450    | 90     |
| 40             | 45 000  | 4 500  | 2 250  | 900    | 450    | 90     |
| 40 FB          | 70 000  | 7 000  | 3 500  | 1 400  | 700    | 140    |
| 50             | 70 000  | 7 000  | 3 500  | 1 400  | 700    | 140    |
| 50 FB          | 180 000 | 18 000 | 9 000  | 3 600  | 1 800  | 360    |
| 80             | 180 000 | 18 000 | 9 000  | 3 600  | 1 800  | 360    |
| FB = Full bore |         |        |        |        |        |        |

#### US units

| DN             | 1:1      | 1:10     | 1:20     | 1:50     | 1:100    | 1:500    |
|----------------|----------|----------|----------|----------|----------|----------|
| [inch]         | [lb/min] | [lb/min] | [lb/min] | [lb/min] | [lb/min] | [lb/min] |
| ⅜              | 73.50    | 7.350    | 3.675    | 1.470    | 0.735    | 0.147    |
| ½              | 238.9    | 23.89    | 11.95    | 4.778    | 2.389    | 0.478    |
| ½ FB           | 661.5    | 66.15    | 33.08    | 13.23    | 6.615    | 1.323    |
| 1              | 661.5    | 66.15    | 33.08    | 13.23    | 6.615    | 1.323    |
| 1 FB           | 1 654    | 165.4    | 82.70    | 33.08    | 16.54    | 3.308    |
| 1½             | 1 654    | 165.4    | 82.70    | 33.08    | 16.54    | 3.308    |
| 1½ FB          | 2 573    | 257.3    | 128.7    | 51.46    | 25.73    | 5.146    |
| 2              | 2 573    | 257.3    | 128.7    | 51.46    | 25.73    | 5.146    |
| 2 FB           | 6 615    | 661.5    | 330.8    | 132.3    | 66.15    | 13.23    |
| 3              | 6 615    | 661.5    | 330.8    | 132.3    | 66.15    | 13.23    |
| FB = Full bore |          |          |          |          |          |          |



Repeatability o.r. = of reading;  $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature

#### Base repeatability

##### Mass flow and volume flow (liquids)

$\pm 0.05 \%$  o.r.

##### Mass flow (gases)

$\pm 0.25 \%$  o.r.



Design fundamentals → 106

##### Density (liquids)

$\pm 0.00025 \text{ g/cm}^3$

##### Temperature

$\pm 0.25 \text{ }^\circ\text{C} \pm 0.0025 \cdot T \text{ }^\circ\text{C} (\pm 0.45 \text{ }^\circ\text{F} \pm 0.0015 \cdot (T-32) \text{ }^\circ\text{F})$

Response time The response time depends on the configuration (damping).

Influence of medium temperature

#### Mass flow and volume flow


When there is a difference between the temperature for zero point adjustment and the process temperature, the typical measured error of the sensor is  $\pm 0.0002 \%$  of the full scale value/ $^\circ\text{C}$  ( $\pm 0.0001 \%$  of the full scale value/ $^\circ\text{F}$ ).

#### Density

When there is a difference between the density calibration temperature and the process temperature, the typical measured error of the sensor is  $\pm 0.0001 \text{ g/cm}^3 \text{ }^\circ\text{C}$  ( $\pm 0.00005 \text{ g/cm}^3 \text{ }^\circ\text{F}$ ). Field density calibration is possible.

#### Wide-range density specification (special density calibration)

If the process temperature is outside the valid range → 103 the measured error is  $\pm 0.0001 \text{ g/cm}^3 \text{ }^\circ\text{C}$  ( $\pm 0.00005 \text{ g/cm}^3 \text{ }^\circ\text{F}$ )

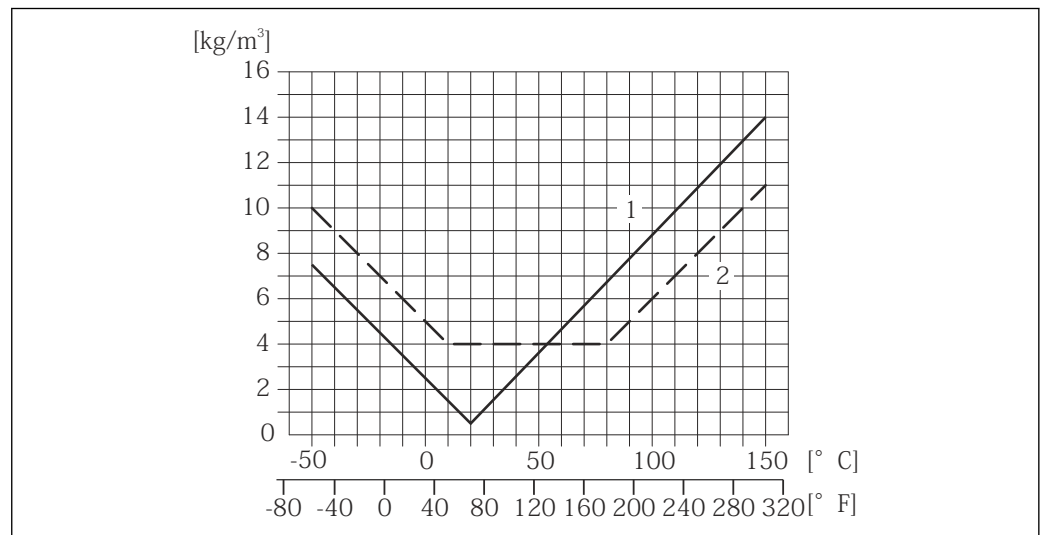

- 1 Field density calibration, for example at  $+20 \text{ }^\circ\text{C}$  ( $+68 \text{ }^\circ\text{F}$ )  
 2 Special density calibration

#### Temperature

$\pm 0.005 \cdot T \text{ }^\circ\text{C} (\pm 0.005 \cdot (T - 32) \text{ }^\circ\text{F})$

## Influence of medium pressure

The table below shows the effect on accuracy of mass flow due to a difference between calibration pressure and process pressure.

o.r. = of reading

| DN             |                   | [% o.r./bar] | [% o.r./psi] |
|----------------|-------------------|--------------|--------------|
| [mm]           | [in]              |              |              |
| 8              | $\frac{3}{8}$     | No effect    | No effect    |
| 15             | $\frac{1}{2}$     | No effect    | No effect    |
| 15 FB          | $\frac{1}{2}$ FB  | -0.003       | -0.0002      |
| 25             | 1                 | -0.003       | -0.0002      |
| 25 FB          | 1 FB              | No effect    | No effect    |
| 40             | $1\frac{1}{2}$    | No effect    | No effect    |
| 40 FB          | $1\frac{1}{2}$ FB | No effect    | No effect    |
| 50             | 2                 | No effect    | No effect    |
| 50 FB          | 2 FB              | -0.003       | -0.0002      |
| 80             | 3                 | No effect    | No effect    |
| FB = Full bore |                   |              |              |

## Design fundamentals

o.r. = of reading, o.f.s. = of full scale value

BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.

MeasValue = measured value; ZeroPoint = zero point stability


*Calculation of the maximum measured error as a function of the flow rate*

| Flow rate   | Maximum measured error in % o.r.                                      |
|---|---|
| $\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$<br>A0021332 | $\pm \text{BaseAccu}$<br>A0021339                                     |
| $< \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$<br>A0021333    | $\pm \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$<br>A0021334 |

*Calculation of the maximum repeatability as a function of the flow rate*

| Flow rate   | Maximum repeatability in % o.r.   |
|---|---|
| $\geq \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$<br>A0021335 | $\pm \text{BaseRepeat}$<br>A0021340   |
| $< \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$<br>A0021336    | $\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$<br>A0021337 |


Example for max. measured error

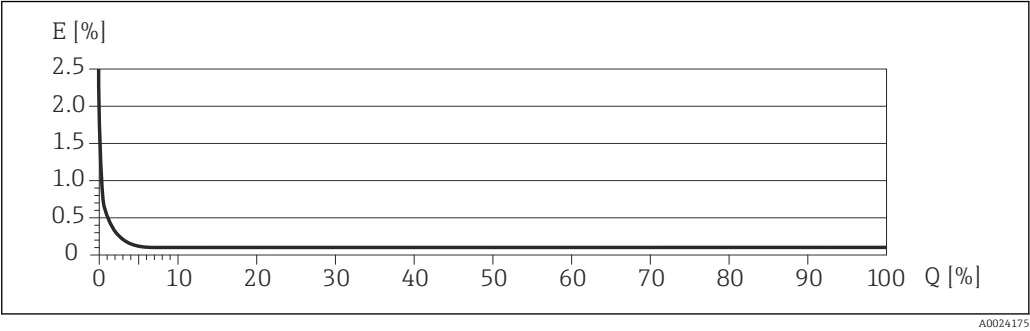

E Error: Maximum measured error as % o.r. (example)  
Q Flow rate as %

 Design fundamentals →  106



16.7 Installation

"Mounting requirements" →  19

16.8 Environment

Ambient temperature range →  21

Temperature tables

-  Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.
-  For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Storage temperature All components apart from the display modules:

- -40 to +80 °C (-40 to +176 °F), preferably at +20 °C (+68 °F) (standard version)
- -50 to +80 °C (-58 to +176 °F) (Order code for "Test, certificate", option JM)

Display modules  
-40 to +80 °C (-40 to +176 °F)


Climate class DIN EN 60068-2-38 (test Z/AD)

Degree of protection **Transmitter and sensor**




- As standard: IP66/67, type 4X enclosure
- With the order code for "Sensor options", option **CM**: IP69K can also be ordered
- When housing is open: IP20, type 1 enclosure
- Display module: IP20, type 1 enclosure

Shock resistance As per IEC/EN 60068-2-31

Vibration resistance Acceleration up to 1 g, 10 to 150 Hz, based on IEC/EN 60068-2-6

|                                     |   |
|-------------------------------------|---|
| Interior cleaning                   | <ul style="list-style-type: none"><li>■ Sterilization in place (SIP)</li><li>■ Cleaning in place (CIP)</li><li>■ Cleaning with pigs</li></ul>   |
| Electromagnetic compatibility (EMC) | <ul style="list-style-type: none"><li>■ As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)</li><li>■ Complies with emission limits for industry as per EN 55011 (Class A)</li></ul> <div> For details refer to the Declaration of Conformity.</div> |

## 16.9 Process

|                              |   |
|------------------------------|---|
| Medium temperature range     | <p><b>Sensor</b><br/>−50 to +150 °C (−58 to +302 °F)</p> <p><b>Seals</b><br/>No internal seals</p>  |
| Medium density               | 0 to 5 000 kg/m <sup>3</sup> (0 to 312 lb/cf)   |
| Pressure-temperature ratings | <div> An overview of the material load diagrams (pressure/temperature diagrams) for the process connections is provided in the "Technical Information" document.</div>   |
| Sensor housing               | <p>The sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.</p> <div><div></div><div>If a measuring tube fails (e.g. due to process characteristics like corrosive or abrasive fluids), the fluid will initially be contained by the sensor housing.</div></div> <p>If the sensor is to be purged with gas (gas detection), it should be equipped with purge connections.</p> <div><div></div><div>Do not open the purge connections unless the containment can be filled immediately with a dry, inert gas. Use only low pressure to purge.</div></div> <p>Maximum pressure: 5 bar (72.5 psi)</p> |

### Burst pressure of the sensor housing

The following sensor housing burst pressures are only valid for standard devices and/or devices equipped with closed purge connections (not opened/as delivered).

If a device fitted with purge connections (order code for "Sensor option", option CH "Purge connection") is connected to the purge system, the maximum pressure is determined by the purge system itself or by the device, depending on which component has the lower pressure classification.

The sensor housing burst pressure refers to a typical internal pressure which is reached prior to mechanical failure of the sensor housing and which was determined during type testing. The corresponding type test declaration can be ordered with the device (order code for "Additional approval", option LN "Sensor housing burst pressure, type test").

| DN   |      | Sensor housing burst pressure |       |
|------|------|-------------------------------|-------|
| [mm] | [in] | [bar]                         | [psi] |
| 8    | 3⁄8  | 220                           | 3 190 |
| 15   | 1⁄2  | 220                           | 3 190 |

| DN    |        | Sensor housing burst pressure |       |
|-------|--------|-------------------------------|-------|
| [mm]  | [in]   | [bar]                         | [psi] |
| 15 FB | ½ FB   | 235                           | 3 408 |
| 25    | 1      | 235                           | 3 408 |
| 25 FB | 1 FB   | 220                           | 3 190 |
| 40    | 1½     | 220                           | 3 190 |
| 40 FB | 1 ½ FB | 235                           | 3 408 |
| 50    | 2      | 235                           | 3 408 |
| 50 FB | 2 FB   | 460                           | 6 670 |
| 80    | 3      | 460                           | 6 670 |

FB = Full bore



For information on the dimensions: see the "Mechanical construction" section of the "Technical Information" document

#### Flow limit

Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.



For an overview of the measuring range full scale values, see the "Measuring range" section → 97

- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- In most applications, 20 to 50 % of the maximum full scale value can be considered ideal
- Select a lower full scale value for abrasive substances (such as liquids with entrained solids): flow velocity <1 m/s (<3 ft/s).
- For gas measurement the following rules apply:
  - The flow velocity in the measuring tubes should not exceed half the sonic velocity (0.5 Mach).
  - The maximum mass flow depends on the density of the gas: formula → 98

#### Pressure loss



To calculate the pressure loss, use the *Applicator* sizing tool → 117

## 16.10 Mechanical construction

### Design, dimensions



For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

### Weight

All values (weight exclusive of packaging material) refer to devices with EN/DIN PN 40 flanges. Weight specifications including transmitter: order code for "Housing", option A "Compact, aluminum coated".

#### Weight in SI units

| DN<br>[mm]     | Weight [kg] |
|----------------|-------------|
| 8              | 11          |
| 15             | 13          |
| 15 FB          | 19          |
| 25             | 20          |
| 25 FB          | 39          |
| 40             | 40          |
| 40 FB          | 65          |
| 50             | 67          |
| 50 FB          | 118         |
| 80             | 122         |
| FB = Full bore |             |

#### Weight in US units


| DN<br>[in]     | Weight [lbs] |
|----------------|--------------|
| 3/8            | 24           |
| 1/2            | 29           |
| 1/2 FB         | 42           |
| 1              | 44           |
| 1 FB           | 86           |
| 1 1/2          | 88           |
| 1 1/2 FB       | 143          |
| 2              | 148          |
| 2 FB           | 260          |
| 3              | 269          |
| FB = Full bore |              |

Materials

**Transmitter housing**

- Order code for "Housing", option **A** "Compact, aluminum coated":  
Aluminum, AlSi10Mg, coated
- Order code for "Housing", option **B** "Compact, hygienic, stainless":  
Hygienic version, stainless steel 1.4301 (304)
- Order code for "Housing", option **C** "Ultra-compact, hygienic, stainless":  
Hygienic version, stainless steel 1.4301 (304)
- Window material for optional local display (→ 113):
  - For order code for "Housing", option **A**: glass
  - For order code for "Housing", option **B** and **C**: plastic

**Cable entries/cable glands**

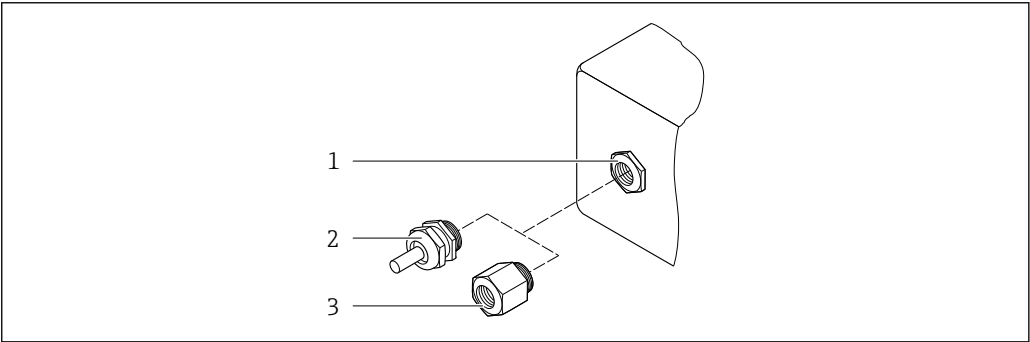

16 Possible cable entries/cable glands

- 1 Female thread M20 × 1.5
- 2 Cable gland M20 × 1.5
- 3 Adapter for cable entry with female thread G ½" or NPT ½"

Order code for "Housing", option **A** "Compact, aluminum, coated"

The various cable entries are suitable for hazardous and non-hazardous areas.

| Cable entry/cable gland                           | Material            |
|---|---------------------|
| Cable gland M20 × 1.5                             | Nickel-plated brass |
| Adapter for cable entry with female thread G ½"   |                     |
| Adapter for cable entry with female thread NPT ½" |                     |

Order code for "Housing", option **B** "Compact, hygienic, stainless"

The various cable entries are suitable for hazardous and non-hazardous areas.

| Cable entry/cable gland                           | Material                       |
|---|--------------------------------|
| Cable gland M20 × 1.5                             | Stainless steel, 1.4404 (316L) |
| Adapter for cable entry with female thread G ½"   |                                |
| Adapter for cable entry with female thread NPT ½" |                                |

**Device plug**

| Electrical connection | Material  |
|-----------------------|---|
| Plug M12x1            | <ul style="list-style-type: none"> <li>■ Socket: Stainless steel, 1.4404 (316L)</li> <li>■ Contact housing: Polyamide</li> <li>■ Contacts: Gold-plated brass</li> </ul> |

### Sensor housing



- Acid and alkali-resistant outer surface
- Stainless steel 1.4301 (304)

### Measuring tubes

Grade 9 titanium

### Process connections

- Flanges according to EN 1092-1 (DIN 2501) / according to ASME B16.5/ according to JIS:
  - Stainless steel 1.4301 (304)
  - Wetted parts: Grade 2 titanium
- All other process connections: Grade 2 titanium

 Available process connections →  112

### Seals

Welded process connections without internal seals

### Accessories

*Protective cover*

Stainless steel, 1.4404 (316L)

*Safety Barrier Promass 100*

Housing: Polyamide

### Process connections

- Fixed flange connections:
  - EN 1092-1 (DIN 2501) flange
  - EN 1092-1 (DIN 2512N) flange
  - ASME B16.5 flange
  - JIS B2220 flange
  - DIN 11864-2 Form A flange, DIN 11866 series A, flange with notch
- Clamp connections: Tri-Clamp (OD tubes), DIN 11866 series C
- Eccentric clamp connection: Eccen. Tri-Clamp, DIN 11866 series C
- Thread:
  - DIN 11851 thread, DIN 11866 series A
  - SMS 1145 thread
  - ISO 2853 thread, ISO 2037
  - DIN 11864-1 Form A thread, DIN 11866 series A

 Process connection materials

### Surface roughness

All data relate to parts in contact with fluid. The following surface roughness quality can be ordered.

- Not polished
- $Ra_{max} = 0.76 \mu m$  (30  $\mu in$ )
- $Ra_{max} = 0.38 \mu m$  (15  $\mu in$ )



## 16.11 Operability

### Local display

The local display is only available with the following device order code:  
Order code for "Display; Operation", option **B**: 4-line; lit, via communication

#### Display element

- 4-line liquid crystal display with 16 characters per line.
- White background lighting; switches to red in event of device errors.
- Format for displaying measured variables and status variables can be individually configured.
- Permitted ambient temperature for the display:  $-20$  to  $+60$  °C ( $-4$  to  $+140$  °F). The readability of the display may be impaired at temperatures outside the temperature range.

#### Disconnecting the local display from the main electronics module



In the case of the "Compact, aluminum coated" housing version, the local display must only be disconnected manually from the main electronics module. In the case of the "Compact, hygienic, stainless" and "Ultra-compact, hygienic, stainless" housing versions, the local display is integrated in the housing cover and is disconnected from the main electronics module when the housing cover is opened.

#### *"Compact, aluminum coated" housing version*

The local display is plugged onto the main electronics module. The electronic connection between the local display and main electronics module is established via a connecting cable.

For some work performed on the measuring device (e.g. electrical connection), it is advisable to disconnect the local display from the main electronics module:


1. Press in the side latches of the local display.
2. Remove the local display from the main electronics module. Pay attention to the length of the connecting cable when doing so.

Once the work is completed, plug the local display back on.

### Remote operation

#### Via Ethernet-based fieldbus

This communication interface is available in device versions with EtherNet/IP.

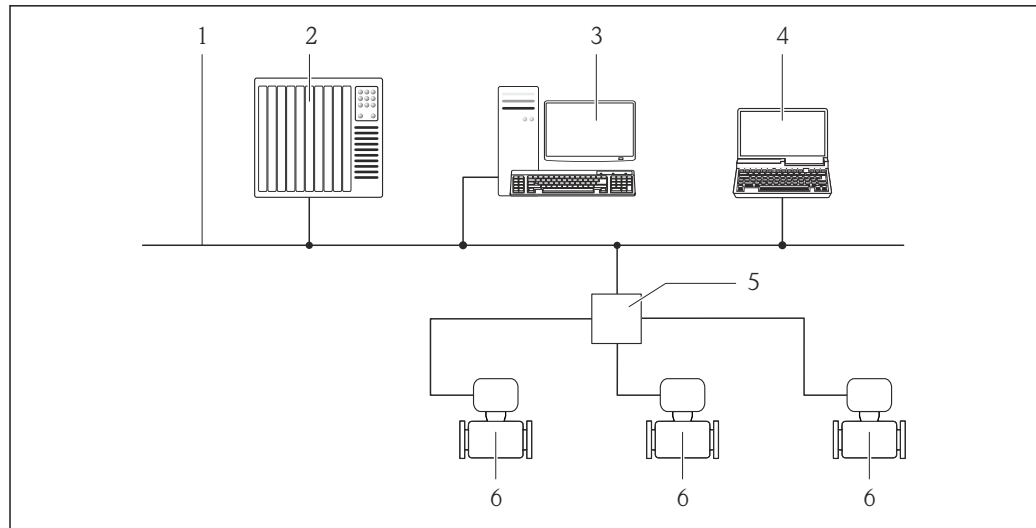

A0016961


 17 Options for remote operation via Ethernet-based fieldbus

- 1 Ethernet network
- 2 Automation system, e.g. "RSLogix" (Rockwell Automation)
- 3 Workstation for measuring device operation: with Add-on Profile Level 3 for "RSLogix 5000" (Rockwell Automation) or with Electronic Data Sheet (EDS)
- 4 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 5 Ethernet switch
- 6 Measuring device


## Service interface

### Via service interface (CDI-RJ45)

#### EtherNet/IP

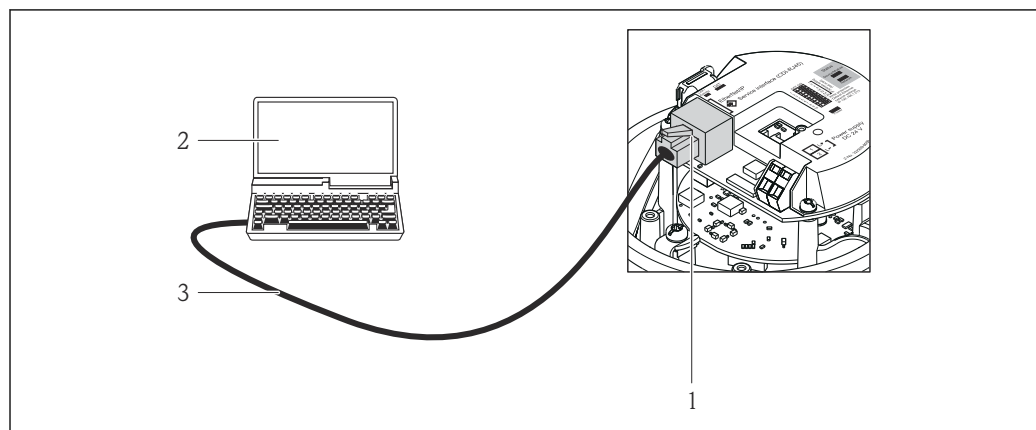

A0016940

 18 Connection for order code for "Output", option N: EtherNet/IP

- 1 Service interface (CDI -RJ45) and EtherNet/IP interface of the measuring device with access to the integrated Web server
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

## Languages

Can be operated in the following languages:

- Via "FieldCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese
- Via Web browser  
English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Bahasa (Indonesian), Vietnamese, Czech

## 16.12 Certificates and approvals


|                                |  |
|--------------------------------|--|
| CE mark                        | <p>The measuring system is in conformity with the statutory requirements of the applicable EC Directives. These are listed in the corresponding EC Declaration of Conformity along with the standards applied.</p> <p>Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.</p>  |
| C-Tick symbol                  | <p>The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".</p>  |
| Ex approval                    | <p>The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.</p>  |
| Hygienic compatibility         | <ul style="list-style-type: none"> <li>■ 3A approval</li> <li>■ EHEDG-tested</li> </ul>  |
| EtherNet/IP certification      | <p>The measuring device is certified and registered by the ODVA (Open Device Vendor Association). The measuring system meets all the requirements of the following specifications:</p> <ul style="list-style-type: none"> <li>■ Certified in accordance with the ODVA Conformance Test</li> <li>■ EtherNet/IP Performance Test</li> <li>■ EtherNet/IP PlugFest compliance</li> <li>■ The device can also be operated with certified devices of other manufacturers (interoperability)</li> </ul>   |
| Pressure Equipment Directive   | <ul style="list-style-type: none"> <li>■ With the PED/G1/x (x = category) marking on the sensor nameplate, Endress+Hauser confirms compliance with the "Essential Safety Requirements" specified in Annex I of the Pressure Equipment Directive 97/23/EC.</li> <li>■ Devices not bearing this marking (PED) are designed and manufactured according to good engineering practice. They meet the requirements of Art.3 Section 3 of the Pressure Equipment Directive 97/23/EC. The range of application is indicated in tables 6 to 9 in Annex II of the Pressure Equipment Directive.</li> </ul>   |
| Other standards and guidelines | <ul style="list-style-type: none"> <li>■ EN 60529<br/>Degrees of protection provided by enclosures (IP code)</li> <li>■ IEC/EN 60068-2-6<br/>Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).</li> <li>■ IEC/EN 60068-2-31<br/>Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices.</li> <li>■ EN 61010-1<br/>Safety requirements for electrical equipment for measurement, control and laboratory use</li> <li>■ IEC/EN 61326<br/>Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).</li> <li>■ NAMUR NE 21<br/>Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment</li> <li>■ NAMUR NE 32<br/>Data retention in the event of a power failure in field and control instruments with microprocessors</li> </ul> |

- NAMUR NE 43  
Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.
- NAMUR NE 53  
Software of field devices and signal-processing devices with digital electronics
- NAMUR NE 80  
The application of the pressure equipment directive to process control devices
- NAMUR NE 105  
Specifications for integrating fieldbus devices in engineering tools for field devices
- NAMUR NE 107  
Self-monitoring and diagnosis of field devices
- NAMUR NE 131  
Requirements for field devices for standard applications
- NAMUR NE 132  
Coriolis mass meter

16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: [www.endress.com](http://www.endress.com).

 Detailed information on the application packages:  
Special Documentation on the device


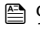
Heartbeat Technology

| Package                               | Description  |
|---------------------------------------|--|
| Heartbeat Verification<br>+Monitoring | <p><b>Heartbeat Monitoring:</b><br/>Continuously supplies monitoring data, which are characteristic of the measuring principle, for an external condition monitoring system. This makes it possible to:</p> <ul style="list-style-type: none"><li>■ Draw conclusions - using these data and other information - about the impact the measuring application has on the measuring performance over time.</li><li>■ Schedule servicing in time.</li><li>■ Monitor the product quality, e.g. gas pockets.</li></ul> <p><b>Heartbeat Verification:</b><br/>Makes it possible to check the device functionality on demand when the device is installed, without having to interrupt the process.</p> <ul style="list-style-type: none"><li>■ Access via onsite operation or other operating interfaces, such as FieldCare for instance.</li><li>■ Documentation of device functionality within the framework of manufacturer specifications, for proof testing for instance.</li><li>■ End-to-end, traceable documentation of the verification results, including report.</li><li>■ Makes it possible to extend calibration intervals in accordance with operator's risk assessment.</li></ul> |


| Concentration | Package                                       | Description  |
|---------------|---|--|
|               | Concentration measurement and special density | <p><b>Calculation and outputting of fluid concentrations</b></p> <p>Many applications use density as a key measured value for monitoring quality or controlling processes. The device measures the density of the fluid as standard and makes this value available to the control system.</p> <p>The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.</p> <p>With the help of the "Concentration Measurement" application package, the measured density is used to calculate other process parameters:</p> <ul style="list-style-type: none"> <li>■ Temperature-compensated density (reference density).</li> <li>■ Percentage mass of the individual substances in a two-phase fluid. (Concentration in %).</li> <li>■ Fluid concentration is output with special units (°Brix, °Baumé, °API, etc.) for standard applications.</li> </ul> <p>The measured values are output via the digital and analog outputs of the device.</p> |

| Viscosity | Package               | Description  |
|-----------|-----------------------|--|
|           | Viscosity measurement | <p><b>In-line and real-time viscosity measurement</b></p> <p>Promass I with the "Viscosity" application package also measures the real-time viscosity of the fluid directly in the process, in addition to measuring the mass flow/volume flow/ temperature and density.</p> <p>The following viscosity measurements are performed on liquids:</p> <ul style="list-style-type: none"> <li>■ Dynamic viscosity</li> <li>■ Kinematic viscosity</li> <li>■ Temperature-compensated viscosity (kinematic and dynamic) in relation to the reference temperature</li> </ul> <p>Viscosity measurement can be used for Newtonian and non-Newtonian applications and supplies accurate measured data irrespective of the flow, even under difficult conditions.</p> |

## 16.14 Accessories

 Overview of accessories available for order →  95

## 16.15 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer))
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

### Standard documentation

#### Brief Operating Instructions

| Measuring device | Documentation code |
|------------------|--------------------|
| Promass I 100    | KA01117D           |

#### Technical Information

| Measuring device | Documentation code |
|------------------|--------------------|
| Promass I 100    | TI01035D           |

Supplementary device-  
dependent documentation




## Safety Instructions

| Contents         | Documentation code |
|------------------|--------------------|
| ATEX/IECEX Ex i  | XA00159D           |
| ATEX/IECEX Ex nA | XA01029D           |
| cCSAus IS        | XA00160D           |
| INMETRO Ex i     | XA01219D           |
| INMETRO Ex nA    | XA01220D           |
| NEPSI Ex i       | XA01249D           |
| NEPSI Ex nA      | XA01262D           |

## Special Documentation

| Contents  | Documentation code |
|---|--------------------|
| Information on the Pressure Equipment Directive | SD00142D           |
| Concentration Measurement                       | SD01152D           |
| Viscosity measurement                           | SD01151D           |
| Heartbeat Technology                            | SD01153D           |

## Installation instructions

| Contents                                      | Documentation code  |
|---|---|
| Installation Instructions for spare part sets | <p>Specified for each individual accessory<br/>→  95</p> <p> Overview of accessories available for<br/>order →  95</p> |









# 17 Appendix

## 17.1 Overview of the operating menu

The following graphic provides an overview of the entire operating menu structure with its menus, submenus and parameters. The page reference indicates where a description of the parameter can be found in the manual.







Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

For the Order Code "Application Package", the associated parameters are described in the Special Documentation.

|   |   |
|---|---|
|  Operation   | →  119 |
|  Setup       | →  120 |
|  Diagnostics | →  125 |
|  Expert      | →  128 |

### 17.1.1 "Operation" menu


Navigation  Operation


|   |  |
|---|--|
|  Operation | →  68 |
| Display language  |  |
| Access status tooling   |  |
| Locking status  |  |
| ► Display   | →  62 |
| Format display  | →  63 |
| Contrast display  |  |
| Backlight   | →  65 |
| Display interval  | →  64 |
| ► Totalizer handling  |  |
| Control Totalizer 1 to n  |  |

Preset value 1 to n

Reset all totalizers

17.1.2 "Setup" menu

Navigation  Setup

 Setup

→ 51

Device tag

► System units

Mass flow unit

Mass unit

Volume flow unit

Volume unit

Corrected volume flow unit

Corrected volume unit

Density unit

Reference density unit

Temperature unit

Pressure unit

► Medium selection

Select medium

Select gas type

Reference sound velocity

Temperature coefficient sound velocity

Pressure compensation



|  |      |
|--|------|
| Pressure value                           |      |
| External pressure                        |      |
| ► Communication                          | → 55 |
| MAC address                              | → 55 |
| Default network settings                 | → 55 |
| DHCP client                              | → 55 |
| IP address                               | → 55 |
| Subnet mask                              | → 55 |
| Default gateway                          | → 55 |
| ► Low flow cut off                       | → 56 |
| Assign process variable                  | → 56 |
| On value low flow cutoff                 | → 56 |
| Off value low flow cutoff                | → 56 |
| Pressure shock suppression               | → 56 |
| ► Partially filled pipe detection        | → 57 |
| Assign process variable                  | → 57 |
| Low value partial filled pipe detection  | → 57 |
| High value partial filled pipe detection | → 57 |
| Response time part. filled pipe detect.  | → 57 |
| ► Advanced setup                         | → 58 |
| Enter access code                        |      |
| ► Calculated values                      | → 58 |
| ► Corrected volume flow calculation      |      |
| Corrected volume flow calculation        |      |
| External reference density               |      |

|                         |                               |      |
|-------------------------|-------------------------------|------|
|                         | Fixed reference density       |      |
|                         | Reference temperature         |      |
|                         | Linear expansion coefficient  |      |
|                         | Square expansion coefficient  |      |
| ► Sensor adjustment     |                               | → 59 |
|                         | Installation direction        | → 60 |
| ► Zero point adjustment |                               |      |
|                         | Zero point adjustment control |      |
|                         | Progress                      |      |
| ► Totalizer 1 to n      |                               | → 60 |
|                         | Assign process variable       | → 61 |
|                         | Unit totalizer                | → 61 |
|                         | Totalizer operation mode      | → 61 |
|                         | Failure mode                  | → 61 |
| ► Display               |                               | → 62 |
|                         | Format display                | → 63 |
|                         | Value 1 display               | → 63 |
|                         | 0% bargraph value 1           | → 63 |
|                         | 100% bargraph value 1         | → 63 |
|                         | Decimal places 1              | → 64 |
|                         | Value 2 display               | → 64 |
|                         | Decimal places 2              | → 64 |
|                         | Value 3 display               | → 64 |
|                         | 0% bargraph value 3           | → 64 |
|                         | 100% bargraph value 3         | → 64 |

|                               |      |
|-------------------------------|------|
| Decimal places 3              | → 64 |
| Value 4 display               | → 64 |
| Decimal places 4              | → 64 |
| Display language              | → 64 |
| Display interval              | → 64 |
| Display damping               | → 64 |
| Header                        | → 64 |
| Header text                   | → 65 |
| Separator                     | → 65 |
| Backlight                     | → 65 |
| ► Viscosity                   |      |
| ► Temperature compensation    |      |
| Calculation model             |      |
| Reference temperature         |      |
| Compensation coefficient X 1  |      |
| Compensation coefficient X 2  |      |
| ► Dynamic viscosity           |      |
| Dynamic viscosity unit        |      |
| User dynamic viscosity text   |      |
| User dynamic viscosity factor |      |
| User dynamic viscosity offset |      |
| ► Kinematic viscosity         |      |
| Kinematic viscosity unit      |      |
| User kinematic viscosity text |      |

User kinematic viscosity factor

User kinematic viscosity offset

► Concentration

Concentration unit

User concentration text

User concentration factor

User concentration offset

A 0

A 1

A 2

A 3

A 4

B 1

B 2

B 3

► Heartbeat setup

► Heartbeat Monitoring

Activate monitoring

► Administration

Define access code








Device reset

→ 88

→ 88

17.1.3 "Diagnostics" menu

Navigation  Diagnostics

|  |  |
|--|--|
|  <b>Diagnostics</b> | →  85   |
| Actual diagnostics   | →  86   |
| Timestamp  |  |
| Previous diagnostics   | →  86   |
| Timestamp  |  |
| Operating time from restart  |  |
| Operating time   |  |
| ► <b>Diagnostic list</b>   |  |
| Diagnostics 1  |  |
| Timestamp  |  |
| Diagnostics 2  |  |
| Timestamp  |  |
| Diagnostics 3  |  |
| Timestamp  |  |
| Diagnostics 4  |  |
| Timestamp  |  |
| Diagnostics 5  |  |
| Timestamp  |  |
| ► <b>Event logbook</b>   |  |
| Filter options   |  |
| ► <b>Device information</b>  | →  89 |
| Device tag   | →  89 |
| Serial number  | →  89 |

|                                       |        |
|---------------------------------------|--------|
| Firmware version                      | → ⓘ 89 |
| Device name                           | → ⓘ 89 |
| Order code                            | → ⓘ 89 |
| Extended order code 1                 | → ⓘ 90 |
| Extended order code 2                 | → ⓘ 90 |
| Extended order code 3                 | → ⓘ 90 |
| ENP version                           | → ⓘ 90 |
| IP address                            | → ⓘ 90 |
| Subnet mask                           | → ⓘ 90 |
| Default gateway                       | → ⓘ 90 |
| ▶ Measured values                     |        |
| ▶ Process variables                   | → ⓘ 69 |
| Mass flow                             | → ⓘ 70 |
| Volume flow                           | → ⓘ 70 |
| Corrected volume flow                 | → ⓘ 70 |
| Density                               | → ⓘ 70 |
| Reference density                     | → ⓘ 70 |
| Temperature                           | → ⓘ 70 |
| Pressure value                        | → ⓘ 70 |
| Dynamic viscosity                     |        |
| Kinematic viscosity                   |        |
| Temp. compensated dynamic viscosity   |        |
| Temp. compensated kinematic viscosity |        |
| Concentration                         |        |





|                           |      |
|---------------------------|------|
| Target mass flow          |      |
| Carrier mass flow         |      |
| ► Totalizer               | → 70 |
| Totalizer value 1 to n    | → 71 |
| Totalizer overflow 1 to n | → 71 |
| ► Heartbeat               |      |
| ► Performing verification |      |
| Year                      |      |
| Month                     |      |
| Day                       |      |
| Hour                      |      |
| AM/PM                     |      |
| Minute                    |      |
| Start verification        |      |
| Progress                  |      |
| Status                    |      |
| Overall result            |      |
| ► Verification results    |      |
| Date/time                 |      |
| Verification ID           |      |
| Operating time            |      |
| Overall result            |      |
| Sensor                    |      |
| Sensor integrity          |      |

|                                    |      |
|------------------------------------|------|
| Sensor electronic module           |      |
| I/O module                         |      |
| ► Monitoring results               |      |
| Sensor integrity                   |      |
| ► Simulation                       | → 65 |
| Assign simulation process variable | → 66 |
| Value process variable             | → 66 |
| Simulation device alarm            | → 66 |
| Simulation diagnostic event        | → 66 |

17.1.4 "Expert" menu

The following tables provide an overview of the **Expert** menu with its submenus and parameters. The direct access code to the parameter is given in brackets. The page reference indicates where a description of the parameter can be found in the manual.

Navigation  Expert



















|   |       |
|---|-------|
| Display language  |       |
|  Operation   | → 119 |
|  Setup       | → 51  |
|  Diagnostics | → 125 |
|  Expert      |       |

"System" submenu

Navigation   Expert → System

|                  |      |
|------------------|------|
| ► System         |      |
| ► Display        | → 62 |
| Display language | → 64 |
| Format display   | → 63 |














|                                       |  |
|---------------------------------------|--|
| Value 1 display                       | →  63   |
| 0% bargraph value 1                   | →  63   |
| 100% bargraph value 1                 | →  63   |
| Decimal places 1                      | →  64   |
| Value 2 display                       | →  64   |
| Decimal places 2                      | →  64   |
| Value 3 display                       | →  64   |
| 0% bargraph value 3                   | →  64   |
| 100% bargraph value 3                 | →  64   |
| Decimal places 3                      | →  64   |
| Value 4 display                       | →  64   |
| Decimal places 4                      | →  64 |
| Display interval                      | →  64 |
| Display damping                       | →  64 |
| Header                                | →  64 |
| Header text                           | →  65 |
| Separator                             | →  65 |
| Contrast display                      |  |
| Backlight                             | →  65 |
| Access status display                 |  |
| ► Diagnostic handling                 |  |
| Alarm delay                           |  |
| ► Diagnostic behavior                 |  |
| Assign behavior of diagnostic no. 140 |  |
| Assign behavior of diagnostic no. 046 |  |
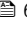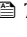
|                  |                                       |      |
|------------------|---------------------------------------|------|
|                  | Assign behavior of diagnostic no. 144 |      |
|                  | Assign behavior of diagnostic no. 832 |      |
|                  | Assign behavior of diagnostic no. 833 |      |
|                  | Assign behavior of diagnostic no. 834 |      |
|                  | Assign behavior of diagnostic no. 835 |      |
|                  | Assign behavior of diagnostic no. 912 |      |
|                  | Assign behavior of diagnostic no. 913 |      |
|                  | Assign behavior of diagnostic no. 944 |      |
|                  | Assign behavior of diagnostic no. 948 |      |
|                  | Assign behavior of diagnostic no. 192 |      |
|                  | Assign behavior of diagnostic no. 274 |      |
|                  | Assign behavior of diagnostic no. 392 |      |
|                  | Assign behavior of diagnostic no. 592 |      |
|                  | Assign behavior of diagnostic no. 992 |      |
| ► Administration |                                       | → 88 |
|                  | Define access code                    |      |
|                  | Device reset                          | → 88 |
|                  | Activate SW option                    |      |
|                  | Software option overview              |      |

"Sensor" submenu

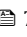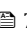Navigation  Expert → Sensor

|                                       |  |
|---------------------------------------|--|
| ► Sensor                              |  |
| ► Measured values                     |  |
| ► Process variables                   | →  69   |
| Mass flow                             | →  70   |
| Volume flow                           | →  70   |
| Corrected volume flow                 | →  70   |
| Density                               | →  70   |
| Reference density                     | →  70   |
| Temperature                           | →  70   |
| Pressure value                        | →  70 |
| Dynamic viscosity                     |  |
| Kinematic viscosity                   |  |
| Temp. compensated dynamic viscosity   |  |
| Temp. compensated kinematic viscosity |  |
| Concentration                         |  |
| Target mass flow                      |  |
| Carrier mass flow                     |  |
| ► Totalizer                           | →  60 |
| Totalizer value 1 to n                | →  71 |
| Totalizer overflow 1 to n             | →  71 |
| ► System units                        |  |
| Mass flow unit                        |  |
| Mass unit                             |  |

Volume flow unit

Volume unit

Corrected volume flow unit

Corrected volume unit

Density unit

Reference density unit

Temperature unit

Pressure unit

Date/time format

► User-specific units

User mass text

User mass offset

User mass factor

User volume text

User volume offset

User volume factor

User corrected volume text

User corrected volume offset

User corrected volume factor

User density text

User density offset

User density factor

User pressure text

User pressure offset

User pressure factor

**► Process parameters**

Flow damping

Density damping

Temperature damping

Flow override

**► Low flow cut off**

→ 56

Assign process variable

→ 56

On value low flow cutoff

→ 56

Off value low flow cutoff

→ 56

Pressure shock suppression

→ 56

**► Partially filled pipe detection**

→ 57

Assign process variable

→ 57

Low value partial filled pipe detection

→ 57

High value partial filled pipe detection

→ 57

Response time part. filled pipe detect.

→ 57

Maximum damping partial filled pipe  
det.**► Measurement mode**

Select medium

Select gas type

Reference sound velocity

Temperature coefficient sound velocity

**► External compensation**

Pressure compensation

Pressure value

|                                     |      |
|-------------------------------------|------|
| External pressure                   |      |
| Temperature mode                    |      |
| External temperature                |      |
| ► Calculated values                 | → 58 |
| ► Corrected volume flow calculation |      |
| Corrected volume flow calculation   |      |
| External reference density          |      |
| Fixed reference density             |      |
| Reference temperature               |      |
| Linear expansion coefficient        |      |
| Square expansion coefficient        |      |
| ► Sensor adjustment                 | → 59 |
| Installation direction              | → 60 |
| ► Zero point adjustment             |      |
| Zero point adjustment control       |      |
| Progress                            |      |
| ► Process variable adjustment       |      |
| Mass flow offset                    |      |
| Mass flow factor                    |      |
| Volume flow offset                  |      |
| Volume flow factor                  |      |
| Density offset                      |      |
| Density factor                      |      |
| Corrected volume flow offset        |      |
| Corrected volume flow factor        |      |

Reference density offset

Reference density factor

Temperature offset

Temperature factor

► Calibration

Calibration factor

Zero point

Nominal diameter

C0 to 5

► Supervision

Limit value measuring tube damping

"Current input" submenu

Navigation  Expert → Input → Current input

► Input

► Status input

Assign status input

Value status input

Active level

Response time status input

► Output

► Pulse/frequency/switch output  
1 to n

Operating mode

Channel 2

|                                      |
|--------------------------------------|
| Assign pulse output                  |
| Value per pulse                      |
| Pulse width                          |
| Measuring mode                       |
| Failure mode                         |
| Pulse output                         |
| Assign frequency output              |
| Minimum frequency value              |
| Maximum frequency value              |
| Measuring value at maximum frequency |
| Measuring mode                       |
| Damping output                       |
| Failure mode                         |
| Failure frequency                    |
| Output frequency                     |
| Switch output function               |
| Assign diagnostic behavior           |
| Assign limit                         |
| Switch-on value                      |
| Switch-off value                     |
| Assign flow direction check          |
| Assign status                        |
| Failure mode                         |



Switch status

Invert output signal

► Communication

► Configuration

Web server language

MAC address

Default network settings

DHCP client

IP address

Subnet mask

Default gateway

Web server functionality

► Configurable input assembly

Input assembly position 1

Input assembly position 2

Input assembly position 3

Input assembly position 4

Input assembly position 5

Input assembly position 6

Input assembly position 7

Input assembly position 8

Input assembly position 9

Input assembly position 10

Input assembly position 11

Input assembly position 12

Input assembly position 13

Input assembly position 14

Input assembly position 15

Input assembly position 16

Input assembly position 17

Input assembly position 18

Input assembly position 19

Input assembly position 20

► Application

Reset all totalizers

► Totalizer 1 to n

→ 60

Assign process variable

→ 61

Unit totalizer

→ 61

Totalizer operation mode

→ 61

Control Totalizer 1 to n

Preset value 1 to n

Failure mode

→ 61

► Viscosity

Viscosity damping

► Temperature compensation

Calculation model

Reference temperature

Compensation coefficient X 1

Compensation coefficient X 2

► Dynamic viscosity

Dynamic viscosity unit

User dynamic viscosity text

User dynamic viscosity factor

User dynamic viscosity offset

► Kinematic viscosity

Kinematic viscosity unit

User kinematic viscosity text

User kinematic viscosity factor

User kinematic viscosity offset

► Concentration

Concentration damping

Concentration unit

User concentration text

User concentration factor

User concentration offset

A 0

A 1

A 2

A 3

A 4

B 1

B 2

B 3

► Diagnostics

Actual diagnostics

Timestamp

Previous diagnostics

Timestamp

Operating time from restart

Operating time

► Diagnostic list

Diagnostics 1

Timestamp

Diagnostics 2

Timestamp

Diagnostics 3

Timestamp

Diagnostics 4

Timestamp

Diagnostics 5

Timestamp

► Event logbook

Filter options

► Device information

Device tag

Serial number

Firmware version

Device name

Order code

Extended order code 1

Extended order code 2

Extended order code 3

Configuration counter

ENP version

► Min/max values

Reset min/max values

► Electronic temperature

Minimum value

Maximum value

► Medium temperature

Minimum value

Maximum value

► Carrier pipe temperature

Minimum value

Maximum value

► Oscillation frequency

Minimum value

Maximum value

► Torsion oscillation frequency

Minimum value

Maximum value

► Oscillation amplitude

Minimum value

Maximum value

► Torsion oscillation amplitude

Minimum value

Maximum value

► Oscillation damping

Minimum value

Maximum value

► Torsion oscillation damping

Minimum value

Maximum value

► Signal asymmetry

Minimum value

Maximum value

► Heartbeat

► Performing verification

Year

Month

Day

Hour

AM/PM

|              |                                    |      |
|--------------|------------------------------------|------|
|              | Minute                             |      |
|              | Start verification                 |      |
|              | Progress                           |      |
|              | Status                             |      |
|              | Overall result                     |      |
|              | ► Verification results             |      |
|              | Date/time                          |      |
|              | Verification ID                    |      |
|              | Operating time                     |      |
|              | Overall result                     |      |
|              | Sensor                             |      |
|              | Sensor integrity                   |      |
|              | Sensor electronic module           |      |
|              | I/O module                         |      |
|              | ► Heartbeat Monitoring             |      |
|              | Activate monitoring                |      |
|              | ► Monitoring results               |      |
|              | Sensor integrity                   |      |
| ► Simulation |                                    | → 65 |
|              | Assign simulation process variable | → 66 |
|              | Value process variable             | → 66 |
|              | Simulation device alarm            | → 66 |
|              | Simulation diagnostic event        | → 66 |

# Index

## A

|                                  |       |
|----------------------------------|-------|
| Accuracy                         | 103   |
| Adapting the diagnostic behavior | 82    |
| Ambient temperature range        | 21    |
| Application                      | 9, 97 |
| Application packages             | 116   |
| Applicator                       | 98    |
| Approvals                        | 115   |

## C

|                                  |         |
|----------------------------------|---------|
| C-Tick symbol                    | 115     |
| Cable entries                    |         |
| Technical data                   | 103     |
| Cable entry                      |         |
| Degree of protection             | 34      |
| CE mark                          | 10, 115 |
| Certificates                     | 115     |
| Check                            |         |
| Installation                     | 27      |
| Checklist                        |         |
| Post-connection check            | 34      |
| Post-installation check          | 27      |
| Cleaning                         |         |
| Cleaning in place (CIP)          | 92      |
| Exterior cleaning                | 92      |
| Interior cleaning                | 92      |
| Sterilization in place (SIP)     | 92      |
| Cleaning in place (CIP)          | 108     |
| Climate class                    | 107     |
| Commissioning                    | 51      |
| Advanced settings                | 58      |
| Configuring the measuring device | 51      |
| Connecting cable                 | 28      |
| Connecting the measuring device  | 30      |
| Connection                       |         |
| see Electrical connection        |         |
| Connection preparations          | 30      |
| Connection tools                 | 28      |
| Current consumption              | 102     |
| Current input (Submenu)          | 135     |
| Cyclic data transmission         | 46      |

## D

|                             |         |
|-----------------------------|---------|
| Declaration of Conformity   | 10      |
| Define access code          | 66      |
| Degree of protection        | 34, 107 |
| Design                      |         |
| Measuring device            | 12      |
| Design fundamentals         |         |
| Maximum measured error      | 106     |
| Repeatability               | 106     |
| Designated use              | 9       |
| Device components           | 12      |
| Device description files    | 45      |
| Device documentation        |         |
| Supplementary documentation | 8       |

|                             |            |
|-----------------------------|------------|
| Device locking, status      | 68         |
| Device name                 |            |
| Sensor                      | 15         |
| Transmitter                 | 14         |
| Device repair               | 93         |
| Device revision             | 45         |
| Device type ID              | 45         |
| Diagnostic behavior         |            |
| Explanation                 | 77         |
| Symbols                     | 77         |
| Diagnostic information      |            |
| Communication interface     | 82         |
| Design, description         | 77, 80, 81 |
| FieldCare                   | 80         |
| Light emitting diodes       | 75         |
| Local display               | 76         |
| Overview                    | 82         |
| Remedial measures           | 82         |
| Web browser                 | 79         |
| Diagnostic list             | 86         |
| Diagnostic message          | 76         |
| Diagnostics                 |            |
| Symbols                     | 76         |
| Diagnostics (Menu)          | 125        |
| DIP switch                  |            |
| see Write protection switch |            |
| Disabling write protection  | 66         |
| Display                     |            |
| Current diagnostic event    | 85         |
| Previous diagnostic event   | 85         |
| Display values              |            |
| For locking status          | 68         |
| Disposal                    | 93         |
| Document                    |            |
| Function                    | 6          |
| Symbols used                | 6          |
| Document function           | 6          |
| Down pipe                   | 19         |

## E

|                                  |         |
|----------------------------------|---------|
| Electrical connection            |         |
| Degree of protection             | 34      |
| Measuring device                 | 28      |
| Operating tools                  |         |
| Via Ethernet network             | 42, 113 |
| Via service interface (CDI-RJ45) | 43, 114 |
| RSLogix 5000                     | 42, 113 |
| Web server                       | 43, 114 |
| Electromagnetic compatibility    | 108     |
| Enabling write protection        | 66      |
| Endress+Hauser services          |         |
| Maintenance                      | 92      |
| Repair                           | 93      |
| Environment                      |         |
| Storage temperature              | 107     |



- Error messages
  - see Diagnostic messages
- EtherNet/IP
  - Diagnostic information . . . . . 82
- EtherNet/IP certification . . . . . 115
- Event history . . . . . 86
- Events list . . . . . 86
- Ex approval . . . . . 115
- Expert (Menu) . . . . . 128
- Extended order code
  - Sensor . . . . . 15
  - Transmitter . . . . . 14
- Exterior cleaning . . . . . 92
- F**
- Field of application
  - Residual risks . . . . . 10
- FieldCare . . . . . 43
  - Device description file . . . . . 45
  - Establishing a connection . . . . . 43
  - Function . . . . . 43
  - User interface . . . . . 44
- Filtering the event logbook . . . . . 87
- Firmware
  - Release date . . . . . 45
  - Version . . . . . 45
- Firmware history . . . . . 91
- Fix assembly . . . . . 82
- Flow direction . . . . . 20, 26
- Flow limit . . . . . 109
- Function check . . . . . 51
- Functions
  - see Parameters
- G**
- Galvanic isolation . . . . . 99
- H**
- Hardware write protection . . . . . 67
- Hygienic compatibility . . . . . 115
- I**
- I/O electronics module . . . . . 12, 31
- Identifying the measuring device . . . . . 13
- Incoming acceptance . . . . . 13
- Influence
  - Medium pressure . . . . . 106
  - Medium temperature . . . . . 105
- Information on the document . . . . . 6
- Inlet runs . . . . . 20
- Input . . . . . 97
- Inspection
  - Received goods . . . . . 13
- Inspection check
  - Connection . . . . . 34
- Installation . . . . . 19
- Installation conditions
  - Down pipe . . . . . 19
  - Mounting location . . . . . 19
  - System pressure . . . . . 21
- Thermal insulation . . . . . 21
- Vibrations . . . . . 24
- Installation dimensions . . . . . 21
- Interior cleaning . . . . . 92, 108
- L**
- Languages, operation options . . . . . 114
- Local display
  - see Diagnostic message
  - see In alarm condition
- Low flow cut off . . . . . 99
- M**
- Main electronics module . . . . . 12
- Maintenance tasks . . . . . 92
- Manufacturer ID . . . . . 45
- Manufacturing date . . . . . 14, 15
- Materials . . . . . 111
- Maximum measured error . . . . . 103
- Measured variables
  - see Process variables
- Measuring and test equipment . . . . . 92
- Measuring device
  - Configuration . . . . . 51
  - Conversion . . . . . 93
  - Design . . . . . 12
  - Disposal . . . . . 94
  - Mounting the sensor . . . . . 26
  - Preparing for electrical connection . . . . . 30
  - Preparing for mounting . . . . . 26
  - Removing . . . . . 93
  - Repair . . . . . 93
- Measuring principle . . . . . 97
- Measuring range
  - Calculation example for gas . . . . . 98
  - For gases . . . . . 98
  - For liquids . . . . . 97
- Measuring range, recommended . . . . . 109
- Measuring system . . . . . 97
- Media . . . . . 9
- Medium density . . . . . 108
- Medium pressure
  - Influence . . . . . 106
- Medium temperature
  - Influence . . . . . 105
- Menu
  - Diagnostics . . . . . 85, 125
  - Expert . . . . . 128
  - Operation . . . . . 68, 119
  - Setup . . . . . 52, 120
- Menus
  - For measuring device configuration . . . . . 51
  - For specific settings . . . . . 58
- Mounting dimensions
  - see Installation dimensions
- Mounting location . . . . . 19
- Mounting preparations . . . . . 26
- Mounting requirements
  - Inlet and outlet runs . . . . . 20

|                                   |    |
|-----------------------------------|----|
| Installation dimensions . . . . . | 21 |
| Orientation . . . . .             | 20 |
| Sensor heating . . . . .          | 23 |
| Mounting tools . . . . .          | 25 |

## N

|                       |    |
|-----------------------|----|
| Nameplate             |    |
| Sensor . . . . .      | 15 |
| Transmitter . . . . . | 14 |

## O

|  |        |
|--|--------|
| Operable flow range . . . . .                | 98     |
| Operating elements . . . . .                 | 77     |
| Operating menu                               |        |
| Menus, submenus . . . . .                    | 36     |
| Overview of menus with parameters . . . . .  | 119    |
| Structure . . . . .                          | 36     |
| Submenus and user roles . . . . .            | 37     |
| Operating philosophy . . . . .               | 37     |
| Operation . . . . .                          | 68     |
| Operation (Menu) . . . . .                   | 119    |
| Operation options . . . . .                  | 35     |
| Operational safety . . . . .                 | 10     |
| Order code . . . . .                         | 14, 15 |
| Orientation (vertical, horizontal) . . . . . | 20     |
| Outlet runs . . . . .                        | 20     |
| Output . . . . .                             | 99     |
| Output signal . . . . .                      | 99     |
| Overview                                     |        |
| Operating menu . . . . .                     | 119    |

## P

|  |     |
|--|-----|
| Packaging disposal . . . . .                       | 18  |
| Parameter settings                                 |     |
| Administration (Submenu) . . . . .                 | 88  |
| Calculated values (Submenu) . . . . .              | 58  |
| Communication (Submenu) . . . . .                  | 55  |
| Device information (Submenu) . . . . .             | 89  |
| Diagnostics (Menu) . . . . .                       | 85  |
| Display (Submenu) . . . . .                        | 62  |
| Low flow cut off (Wizard) . . . . .                | 56  |
| Operation (Submenu) . . . . .                      | 72  |
| Output values (Submenu) . . . . .                  | 71  |
| Partially filled pipe detection (Wizard) . . . . . | 57  |
| Process variables (Submenu) . . . . .              | 69  |
| Select medium (Submenu) . . . . .                  | 54  |
| Sensor adjustment (Submenu) . . . . .              | 59  |
| Setup (Menu) . . . . .                             | 52  |
| Simulation (Submenu) . . . . .                     | 65  |
| Totalizer (Submenu) . . . . .                      | 70  |
| Totalizer 1 to n (Submenu) . . . . .               | 60  |
| Web server (Submenu) . . . . .                     | 41  |
| Performance characteristics . . . . .              | 103 |
| Post-connection check (checklist) . . . . .        | 34  |
| Post-installation check . . . . .                  | 51  |
| Post-installation check (checklist) . . . . .      | 27  |
| Potential equalization . . . . .                   | 32  |
| Power consumption . . . . .                        | 102 |
| Power supply failure . . . . .                     | 102 |

|   |     |
|---|-----|
| Pressure Equipment Directive . . . . .  | 115 |
| Pressure loss . . . . .                 | 109 |
| Pressure-temperature ratings . . . . .  | 108 |
| Process connections . . . . .           | 112 |
| Process variables                       |     |
| Calculated . . . . .                    | 97  |
| Measured . . . . .                      | 97  |
| Product safety . . . . .                | 10  |
| Protecting parameter settings . . . . . | 66  |

## R

|   |     |
|---|-----|
| Reading measured values . . . . .                         | 69  |
| Reading out diagnostic information, EtherNet/IP . . . . . | 82  |
| Recalibration . . . . .                                   | 92  |
| Reference operating conditions . . . . .                  | 103 |
| Registered trademarks . . . . .                           | 8   |
| Remedial measures   |     |
| Calling up . . . . .                                      | 78  |
| Closing . . . . .   | 78  |
| Remote operation . . . . .                                | 113 |
| Repair . . . . .  | 93  |
| Notes . . . . .   | 93  |
| Repair of a device . . . . .                              | 93  |
| Repeatability . . . . .                                   | 105 |
| Replacement   |     |
| Device components . . . . .                               | 93  |
| Requirements for personnel . . . . .                      | 9   |
| Response time . . . . .                                   | 105 |
| Return . . . . .  | 93  |

## S

|   |        |
|---|--------|
| Safety . . . . .  | 9      |
| Seals   |        |
| Medium temperature range . . . . .                                | 108    |
| Sensor  |        |
| Medium temperature range . . . . .                                | 108    |
| Mounting . . . . .  | 26     |
| Sensor (Submenu) . . . . .  | 131    |
| Sensor heating . . . . .  | 23     |
| Sensor housing . . . . .  | 108    |
| Serial number . . . . .   | 14, 15 |
| Setting the operating language . . . . .                          | 51     |
| Settings  |        |
| Adapting the measuring device to the process conditions . . . . . | 71     |
| Advanced display configurations . . . . .                         | 62     |
| Communication interface . . . . .                                 | 55     |
| Device reset . . . . .  | 88     |
| Device tag . . . . .  | 52     |
| Low flow cut off . . . . .  | 56     |
| Medium . . . . .  | 54     |
| Operating language . . . . .                                      | 51     |
| Partial filled pipe detection . . . . .                           | 57     |
| Resetting the totalizer . . . . .                                 | 72     |
| Sensor adjustment . . . . .                                       | 59     |
| Simulation . . . . .  | 65     |
| System units . . . . .  | 52     |
| Totalizer . . . . .   | 60     |
| Totalizer reset . . . . .   | 72     |

|   |        |
|---|--------|
| Setup (Menu) . . . . .                    | 120    |
| Shock resistance . . . . .                | 107    |
| Signal on alarm . . . . .                 | 99     |
| Software release . . . . .                | 45     |
| Spare part . . . . .                      | 93     |
| Spare parts . . . . .                     | 93     |
| Special connection instructions . . . . . | 32     |
| Standards and guidelines . . . . .        | 115    |
| Status signals . . . . .                  | 76, 79 |
| Sterilization in place (SIP) . . . . .    | 108    |
| Storage conditions . . . . .              | 17     |
| Storage temperature . . . . .             | 17     |
| Storage temperature range . . . . .       | 107    |
| Structure                                 |        |
| Operating menu . . . . .                  | 36     |
| Submenu                                   |        |
| Administration . . . . .                  | 88     |
| Advanced setup . . . . .                  | 58     |
| Calculated values . . . . .               | 58     |
| Communication . . . . .                   | 51, 55 |
| Current input . . . . .                   | 135    |
| Define access code . . . . .              | 66     |
| Device information . . . . .              | 89     |
| Display . . . . .                         | 62     |
| Events list . . . . .                     | 86     |
| Operation . . . . .                       | 72     |
| Output values . . . . .                   | 71     |
| Overview . . . . .                        | 37     |
| Process variables . . . . .               | 58, 69 |
| Select medium . . . . .                   | 54     |
| Sensor . . . . .                          | 131    |
| Sensor adjustment . . . . .               | 59     |
| Simulation . . . . .                      | 65     |
| System . . . . .                          | 128    |
| Totalizer . . . . .                       | 70     |
| Totalizer 1 to n . . . . .                | 60     |
| Web server . . . . .                      | 41     |
| Supply voltage . . . . .                  | 102    |
| Surface roughness . . . . .               | 112    |
| System (Submenu) . . . . .                | 128    |
| System design                             |        |
| Measuring system . . . . .                | 97     |
| see Measuring device design               |        |
| System file                               |        |
| Release date . . . . .                    | 45     |
| Source . . . . .                          | 45     |
| Version . . . . .                         | 45     |
| System integration . . . . .              | 45     |
| System pressure . . . . .                 | 21     |
| <b>T</b>                                  |        |
| Technical data, overview . . . . .        | 97     |
| Temperature range                         |        |
| Medium temperature . . . . .              | 108    |
| Storage temperature . . . . .             | 17     |
| Terminal assignment . . . . .             | 29, 31 |
| Terminals . . . . .                       | 103    |
| Thermal insulation . . . . .              | 21     |

|   |        |
|---|--------|
| Tools                                       |        |
| Electrical connection . . . . .             | 28     |
| Installation . . . . .                      | 25     |
| Transport . . . . .                         | 17     |
| Transmitter                                 |        |
| Connecting the signal cables . . . . .      | 31     |
| Turning the display module . . . . .        | 26     |
| Transporting the measuring device . . . . . | 17     |
| Troubleshooting                             |        |
| General . . . . .                           | 73     |
| Turning the display module . . . . .        | 26     |
| <b>U</b>                                    |        |
| Use of the measuring device                 |        |
| Borderline cases . . . . .                  | 9      |
| Incorrect use . . . . .                     | 9      |
| see Designated use                          |        |
| User roles . . . . .                        | 37     |
| <b>V</b>                                    |        |
| Version data for the device . . . . .       | 45     |
| Vibration resistance . . . . .              | 107    |
| Vibrations . . . . .                        | 24     |
| <b>W</b>                                    |        |
| W@M . . . . .                               | 92, 93 |
| W@M Device Viewer . . . . .                 | 13, 93 |
| Weight                                      |        |
| SI units . . . . .                          | 110    |
| Transport (notes) . . . . .                 | 17     |
| US units . . . . .                          | 110    |
| Wizard                                      |        |
| Define access code . . . . .                | 66     |
| Low flow cut off . . . . .                  | 56     |
| Partially filled pipe detection . . . . .   | 57     |
| Workplace safety . . . . .                  | 10     |
| Write protection                            |        |
| Via access code . . . . .                   | 66     |
| Via write protection switch . . . . .       | 67     |
| Write protection switch . . . . .           | 67     |



[www.addresses.endress.com](http://www.addresses.endress.com)

---