# Safety Instructions **Deltabar PMD55B**

Ex iaD 20/21 T<sub>200</sub>100°C







Deltabar PMD55B XA02219P-A

### **Deltabar PMD55B**

### Table of contents

About this document	4
Associated documentation	4
Supplementary documentation	4
Manufacturer's certificates	4
Manufacturer address	4
Extended order code	4
Safety instructions: General	6
Safety instructions: Special conditions	7
Safety instructions: Installation	7
Temperature tables	9
Connection data	9

### About this document



This document has been translated into several languages. Legally determined is solely the English source text.

### Associated documentation

This document is an integral part of the following Operating Instructions:

BA02013P/00, TI01510P/00

## Supplementary documentation

Explosion-protection brochure: CP00021Z/11

The Explosion-protection brochure is available:

In the download area of the Endress+Hauser website:
 www.endress.com -> Downloads -> Media Type:
 Documentation -> Documentation Type: Brochures and catalogs ->
 Text Search: CP00021Z

• On the CD for devices with CD-based documentation

### Manufacturer's certificates

#### **NEPSI Declaration of Conformity**

Certificate number: GYI21.1018X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- GB 3836.1-2010
- GB 3836.4-2010
- GB 12476.1-2013
- GB 12476.4-2010

## Manufacturer address

Endress+Hauser SE+Co. KG

Hauptstraße 1

79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

# Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Deltabar PMD55B XA02219P-A

#### Structure of the extended order code

PMD55B - **		*****	+	A*B*C*D*E*F*G*.
(Device		(Basic		(Optional
type)		specifications)		specifications)

#### \* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

#### Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

#### Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

#### Extended order code: Deltabar

Device type PMD55B

#### Basic specifications

P	Position 1, 2 (Approval)			
Selected option D		tion	Description	
P	PMD55B NH		NEPSI Ex iaD 20/21 T <sub>200</sub> 100°C	

Position 6 (H	Position 6 (Housing, Material)			
Selected option		Description		
PMD55B B		Single compartment; Alu, coated		

Position 7 (	Position 7 (Electrical Connection)			
Selected option		Description		
PMD55B	В	Gland M20, brass nickel plated, IP66/68 NEMA Type 4X/6P		
	С	Gland M20, 316L, IP66/68 NEMA Type 4X/6P		
	F	Thread M20, IP66/68 NEMA Type 4X/6P		
	G	Thread G1/2, IP66/68 NEMA Type 4X/6P		
	Н	Thread NPT1/2, IP66/68 NEMA Type 4X/6P		

#### Optional specifications

No options specific to hazardous locations are available.

#### Safety instructions: General

- Devices suitable for zone separation (marked 20/21) are always suitable for installation in the less critical zone (21). Due to space limitations the corresponding marking maybe not indicated on the nameplate.
- Comply with the installation and safety instructions in the Operating Instructions.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations
- For installation, use and maintenance of the device, users must also observe the requirements stated in the Operating Instructions and the standards:
  - GB 50257-2014: "Code for construction and acceptance of electric device for explosion atmospheres and fire hazard electrical equipment installation engineering".
  - GB 3836.13-2013: "Explosive atmospheres, Part 13: Equipment repair, overhaul and reclamation".
  - GB/T 3836.15-2017: "Explosive atmospheres, Part 15: Electrical installations design, selection and erection".
  - GB/T 3836.16-2017: "Explosive atmospheres, Part 16: Electrical installations inspection and maintenance".
  - GB/T 3836.18-2017: "Explosive atmospheres, Part 18: Intrinsically safe electrical systems".
  - GB 15577-2018: "Safety regulations for dust explosive prevention and protection". (Only if installed in dust hazardous area.)
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.

Deltabar PMD55B XA02219P-A


 Only use the device in media to which the wetted materials have sufficient durability.

- Avoid electrostatic charging:
  - Of plastic surfaces (e.g. housing, sensor element, special varnishing, attached additional plates, ..)
  - Of isolated capacities (e.g. isolated metallic plates)
- Modifications to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser

#### Safety instructions: Special conditions

- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the housing or other metal parts or for adhesive plates:
  - Observe the danger of electrostatic charging and discharge.
  - Do not install in the vicinity of processes (≤ 0.5 m) generating strong electrostatic charges.
- Avoid sparks caused by impact and friction.

#### Safety instructions: Installation

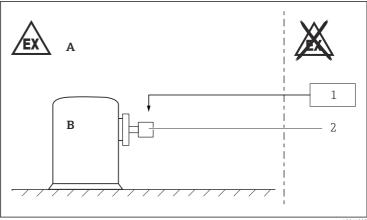

A004199

- A Zone 21, Electronic
- B Zone 20 or Zone 21, Process
- 1 Associated intrinsically safe power supply units
- 2 PMD55B
- After aligning (rotating) the housing, retighten the fixing screw.
- Continuous service temperature of the connecting cable:  $\geq T_a + 20 \text{ K}$ .
- Perform the following to achieve the degree of protection IP66/67:
  - Screw the cover tight.
  - Mount the cable entry correctly.

 Seal unused entry glands with suitable sealing plugs that correspond to the type of protection.

- Supplied cable glands and metallic sealing plugs comply with the requirements of type of protection marked on the nameplate.
- The plastic sealing plug is used only as transport protection.
- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.
- Observe the maximum process conditions according to the manufacturer's Operating Instructions.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.

#### Permitted ambient conditions

Process Zone 20	Housing Zone 21
Continuous dust submersion	Dust accumulation or temporary explosive dust atmosphere
Continuous explosive dust atmosphere and deposits	Dust accumulation or temporary explosive dust atmosphere

Process	Housing
Zone 21	Zone 21
Continuous dust deposits or temporary explosive dust atmosphere	Dust accumulation or temporary explosive dust atmosphere

#### Intrinsic safety

- The device is only suitable for connection to certified, intrinsically safe equipment with explosion protection Ex ia / Ex ib.
- The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least 500  $V_{\rm rms}$ .

#### Potential equalization

Integrate the device into the local potential equalization.

Deltabar PMD55B XA02219P-A

#### **Temperature** tables



- The specified surface temperature takes into account all direct heat influences from process heat and self-heating at the housing.
  - The specified ambient and process temperature ranges exclusively refer to the explosion protection and must not be exceeded. Operationally permitted ambient temperature ranges can be restricted depending on the version: See Operating Instructions.
  - Do not exceed the max. ambient temperature at the housing.
  - The process temperatures refer to the temperature at the separation membrane.

For detailed information see Technical Information.



Ingress protection of housing: IP66/67

Maximum surface temperature	Process temperature range	Ambient temperature range
T100°C	-40 °C ≤ T <sub>p</sub> ≤ +80 °C	$-40 ^{\circ}\text{C} \le T_a \le +60 ^{\circ}\text{C}$
	-40 °C ≤ T <sub>p</sub> ≤ +100 °C	-40 °C ≤ T <sub>a</sub> ≤ +55 °C

Specific conditions of use:

The surface temperature is  $T_{200}$  100 °C (with 200 mm dust deposit)

#### Connection data

Power supply		
$\begin{split} &U_{l} \leq 30 \ V_{DC} \\ &I_{l} \leq 300 \ mA \\ &P_{l} \leq 1 \ W \\ &C_{l} \leq 10 \ nF \\ &L_{l} = 0 \end{split}$		

#### Cable entry: Connection compartment

Cable gland: Basic specification, Position 7 (Electrical Connection) = B

Thread	Clamping range	Material	Sealing insert	O-ring
	ø 8 to 10.5 mm <sup>1)</sup> ø 6.5 to 13 mm <sup>2)</sup>	Ms, nickel-plated	Silicone	EPDM (ø 17x2)

- 1) Standard
- 2) Separate clamping inserts available

#### Cable gland: Basic specification, Position 7 (Electrical Connection) = C

Thread	Clamping range	Material	Sealing insert	O-ring
M20x1,5	ø 7 to 12 mm	1.4404	NBR	EPDM (ø 17x2)



- The tightening torque refers to cable glands installed by the manufacturer:
  - Recommended: 3.5 Nm
  - Maximum: 10 Nm
- This value may be different depending on the type of cable.
  However, the maximum value must not be exceeded.
- Only suitable for fixed installation. The operator must pay attention to a suitable strain relief of the cable.
- To maintain the ingress protection of the housing: Install the housing cover, cable glands and blind plugs correctly.





www.addresses.endress.com