# Safety Instructions iTEMP TMT142

**HART®** 

ATEX: II1G Ex ia IIC T6...T4 Ga IECEx: Ex ia IIC T6...T4 Ga

Safety instructions for electrical apparatus in explosion-hazardous areas







iTEMP TMT142 XA00050R

### **iTEMP TMT142**

### **HART®**

### Table of contents

About this document
Associated documentation
Supplementary documentation
Manufacturer's certificates5
Manufacturer address 5
Safety instructions: $\epsilon$
Safety instructions: Installation $\epsilon$
Safety instructions: Zone 0
Safety instructions: Specific conditions of use
Геmperature tables
Electrical connection data

XA00050R iTEMP TMT142


### About this document



This document has been translated into several languages. Legally determined is solely the English source text.

The document translated into EU languages is available:

- In the download area of the Endress+Hauser website:
   www.endress.com -> Downloads -> Manuals and Datasheets ->
   Type: Ex Safety Instruction (XA) -> Text Search: ...
- In the Device Viewer: www.endress.com -> Product tools -> Access device specific information -> Check device features

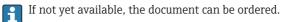

# Associated documentation

This document is an integral part of the following Operating Instructions:

Operating instructions: BA00191RBrief operating instructions: KA00222R

■ Technical information: TI00107R

## Supplementary documentation

Explosion-protection brochure: CP00021Z/11

The Explosion-protection brochure is available:

In the download area of the Endress+Hauser website:
 www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP000217.

• On the CD for devices with CD-based documentation

iTEMP TMT142 XA00050R

# Manufacturer's certificates

#### IECEx certificate

Certificate number: IECEx KEM 06.0038X

Affixing the certificate number certifies conformity with the following standards (depending on the device version)

IEC 60079-0:2017IEC 60079-11:2011

#### ATEX certificate

Certificate number: DEKRA 17ATEX0048 X


# Manufacturer address

Endress+Hauser Wetzer GmbH + Co. KG Obere Wank 1

87484 Nesselwang, Germany

XA00050R iTEMP TMT142

### Safety instructions:

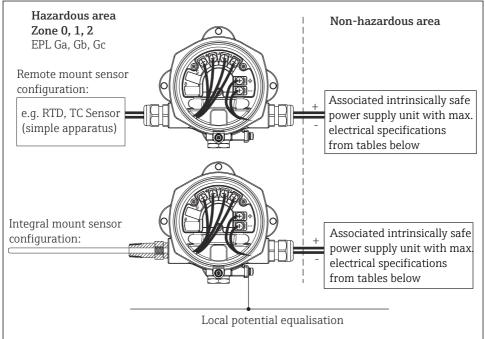

A004888

### Safety instructions: Installation

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- The type of protection changes as follows when the devices are connected to certified intrinsically safe circuits of Category ib: Ex ib IIC. When connecting an intrinsically safe ib circuit, do not operate the sensor at Zone 0.
- When connecting two independent sensors make sure that the potential equalisation cables are at the same potential.
- The circuits of the transmitter are isolated from its enclosure in conformance with EN/IEC 60079-11 chapter 6.3.13.

iTEMP TMT142 XA00050R

### Safety instructions: Zone 0

- Only operate devices in potentially explosive vapour/air mixtures under atmospheric conditions:
  - -20 °C ≤ Ta ≤ +60 °C
  - $0.8 \text{ bar} \le p \le 1.1 \text{ bar}$
- If no potentially explosive mixtures are present, or if additional protective measures have been taken, according to EN 1127-1, the transmitters may be operated under other atmospheric conditions in accordance with the manufacturer's specifications.
- Associated apparatus with galvanic isolation between the intrinsically safe and non-intrinsically safe circuits are preferred.

### Safety instructions: Specific conditions of use

- The temperature transmitter must be installed so, that even in the event of rare incidents, an ignition source due to impact or friction between the enclosure and iron/steel is excluded.
- When the optional non-conductive coating is applied the risk from electrostatic discharge shall be minimized.

# Temperature tables

Туре	Temperature class	Ambient temperature
TMT142	Т6	-40 °C ≤ Ta ≤ +55 °C
	T5	-40 °C ≤ Ta ≤ +70 °C
	T4	-40 °C ≤ Ta ≤ +85 °C

# Electrical connection data

Туре	Electrical data		
TMT142 HART®	Supply (terminals + and -):	$\label{eq:controller} \begin{split} &Ui \leq 30 \ V_{DC} \\ &Ii \leq 300 \ mA \\ Π \leq 1000 \ mW \\ &Ci \leq 5 \ nF \\ &Li = 0 \end{split}$	
	Sensor circuit (terminals 1 to 6):	$Uo \le 7.6 V_{DC}$ $Io \le 29.3 \text{ mA}$ $Po \le 55.6 \text{ mW}$	
	Maximum connection values: Ex ia IIC Ex ia IIB Ex ia IIA	Lo = 40 mH Lo = 150 mH Lo = 300 mH	Co = 10.4 μF Co = 160 μF Co = 1000 μF

Category	Type of protection (ATEX)	Туре
II 1G	Ex ia IIC T6T4 Ga	TMT142

XA00050R iTEMP TMT142

Type of protection (IEC)	Туре
Ex ia IIC T6T4 Ga	TMT142







www.addresses.endress.com