Safety Instructions Liquiphant FTL41

Ex db IIC T6...T1 Ga/Gb Ex db IIC T6...T1 Gb







Liquiphant FTL41

Table of contents

About this document	4
Associated documentation	4
Supplementary documentation	4
Manufacturer's certificates	4
Manufacturer address	4
Extended order code	4
Safety instructions: General	8
Safety instructions: Special conditions	8
Safety instructions: Installation	9
Safety instructions: Ex d joints 1	1
Safety instructions: Zone 0 1	1
Temperature tables 1	.1
Connection data 1	.3

About this document	This document has been translated into several languages. Legally determined is solely the English source text.
Associated documentation	This document is an integral part of the following Operating Instructions: BA01893F/00
Supplementary documentation	 Explosion-protection brochure: CP00021Z/11 The Explosion-protection brochure is available: In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP00021Z On the CD for devices with CD-based documentation
Manufacturer's certificates	NEPSI Declaration of Conformity Certificate number: GYJ21.1248X Affixing the certificate number certifies conformity with the following standards (depending on the device version): • GB/T 3836.1-2021 • GB/T 3836.2-2021 • GB 3836.20-2010
Manufacturer address	Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany Address of the manufacturing plant: See nameplate.
Extended order code	The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

FTL41	-	******	+	A*B*C*D*E*F*G*			
(Device		(Basic		(Optional			
type)		specifications)		specifications)			

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

 
The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Liquiphant




- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type FTL41

Basic specifications

Position 1	Position 1, 2 (Approval)						
Selected option Description							
FTL41	NC	NEPSI Ex db IIC T6T1 Ga/Gb NEPSI Ex db IIC T6T1 Gb					


Position 3, 4 (Output)						
Selected opt	tion	Description				
FTL41	L41 A2 FEL42, 3-wire PNP 10-55VDC					
A4 FEL44, relay DPDT 19-253VAC/19-55VDC contact 253V/6A						
	A8	FEL48, 2-wire NAMUR				

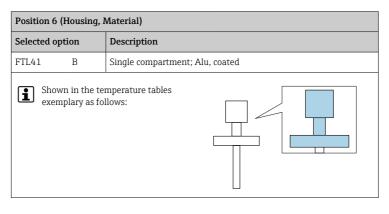

Position 7 (Electrical Connection)							
Selected op	otion	Description					
FTL41	F	Thread M20, IP66/68 NEMA Type 4X/6P					
	G	Thread G1/2 ¹⁾ , IP66/68 NEMA Type 4X/6P					
	Ι	Thread NPT3/4, IP66/68 NEMA Type 4X/6P					
Y Special version: Thread NPT1/2, IP66/68 NEMA Type							

1) Reduction M20x1.5 to G1/2 enclosed

Position 10 (Type of Probe)							
Selected o	ption	Description					
FTL41	1	Compact version					
	2	Extension tube					
	3	Short tube version					
Shown in the temperature tables							

 

Position 11, 12 (Sensor Length, Material)						
Selected option		Description				
FTL41	AJ	Compact version; 316L				
	BJ	Short tube version; 316L				
	CJ	mm L, Ra<3,2um/126uin; 316L				
	DJ	in L, Ra<3,2um/126uin; 316L				

Optional specifications

ID Px (Accessory Enclosed)						
Selected op	tion	Description				
FTL41 PB		Weather protection cover, plastic				


Safety instructions: General	 Devices suitable for zone separation (marked Ga/Gb or Da/Db) are always suitable for installation in the less critical zone (Gb or Db). Due to space limitations the corresponding marking maybe not indicated on the nameplate. Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device: Be suitably qualified for their role and the tasks they perform Be trained in explosion protection Be familiar with national regulations For installation, use and maintenance of the device, users must also observe the requirements stated in the Operating Instructions and the standards: GB 50257-2014: "Code for construction and acceptance of electric device for explosion atmospheres and fire hazard electrical equipment installation engineering". GB/T 3836.13-2021: "Explosive atmospheres, Part 13: Equipment repair, overhaul, reclamation and modification". GB/T 3836.16-2017: "Explosive atmospheres, Part 15: Electrical installations disign, selection and erection". GB/T 3836.18-2017: "Explosive atmospheres, Part 16: Electrical installations inspection and maintenance". GB/T 3836.18-2017: "Explosive atmospheres, Part 16: Electrical installations inspection and maintenance". GB/T 3836.18-2017: "Explosive atmospheres, Part 18: Intrinsically safe electrical systems". Install the device according to the manufacturer's instructions and national regulations. Do not operate the device in media to which the wetted materials have sufficient durability. Avoid electrostatic charging: Of isolated capacities (e.g. isolated metallic plates) Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application and the temperature class. Modifications to the device can affect the explosion protecti
Safety instructions: Special conditions	Permitted ambient temperature range at the electronics enclosure: $\rightarrow \cong 11$, "Temperature tables".

- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
 - Observe the danger of electrostatic charging and discharge.
 - Do not install in the vicinity of processes (≤ 0.5 m) generating strong electrostatic charges.
- Avoid sparks caused by impact and friction.

Optional specification, ID Px = PB

Avoid electrostatic charging of the weather protection cover (e.g. friction, cleaning, maintenance, strong medium flow).

Safety instructions: Installation

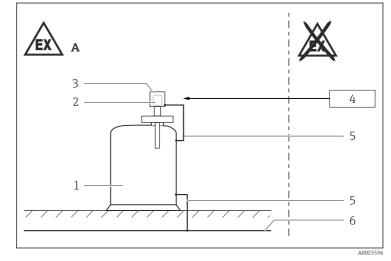

• 1

- A Zone 1
- 1 Tank; Zone 0, Zone 1
- 2 Electronic insert
- 3 Enclosure
- 4 Supply unit
- 5 Potential equalization line
- 6 Local potential equalization

- Before operation:
 - Screw in the cover all the way.
 - Tighten the securing clamp on the cover.
- In potentially explosive atmospheres:
 - Do not disconnect the electrical connection of the power supply circuit when energized.
 - Do not open the connection compartment cover and the electronics compartment cover.
- Continuous service temperature of the connecting cable / cable gland / cable entry:
 - Basic specification, Position 3, 4 = A2: $\ge T_a + 35 \text{ K}$
 - Basic specification, Position 3, $4 = A4: \ge T_a + 40 \text{ K}$
 - Basic specification, Position 3, $4 = A8: \ge T_a + 20 \text{ K}$
- Perform the following to achieve the degree of protection IP66/68:
 - Screw the cover tight.
 - Mount the cable entry correctly.
- Observe the maximum process conditions according to the manufacturer's Operating Instructions.
- At high medium temperatures, note flange pressure load capacity as a factor of temperature.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.
- Support extension tube of the device if a dynamic load is expected.
- Only use certified cable entries suitable for the application. Observe national regulations and standards. Accordingly, the connection terminal does not include any ignition sources.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- The built-in metallic sealing plug is examined and approved for explosion protection type Ex d with the device.
- When operating the transmitter enclosure at an ambient temperature under -20 °C, use appropriate cables and cable entries permitted for this application.
- When connecting through a conduit entry approved for this purpose, mount the associated sealing unit directly at the enclosure.
- Flameproof equipment with G threaded entry holes is not intended for new installations but only for replacement of equipment in existing installations. Application of this equipment shall comply with the local installation requirements.

Accessory high pressure sliding sleeve

The high pressure sliding sleeve can be used for a continuous setting of the switch point and is suited for zone separation if mounted properly (see Operating Instructions).

Potential equalization

Integrate the device into the local potential equalization.

Safety instructions: Ex d joints	 If required or if in doubt: ask manufacturer for specifications. Flameproof joints are not intended to be repaired.
Safety instructions: Zone 0	 In the event of potentially explosive vapor/air mixtures, only operate the device under atmospheric conditions. Temperature: -20 to +60 °C Pressure: 80 to 110 kPa (0.8 to 1.1 bar) Air with normal oxygen content, usually 21 % (V/V) If no potentially explosive mixtures are present, or if additional protective measures have been taken, the device may also be operated under non-atmospheric conditions in accordance with the manufacturer's specifications. Only use the device in media to which the wetted materials have sufficient durability (e.g. process connection seal). When using under non-atmospheric pressures and non-atmospheric temperatures: The sensor part of the device approved for Zone 0 does not cause any ignition hazards.

Temperature tables

General notes

Optional specification, ID Px = PB

When using the weather protection cover: Reduce the values T_a of P1, P2, P3 by 16 K.

Description notes

Unless otherwise indicated, the positions always refer to the basic specification.


1st column: Position 3, 4 = .., A4, A8

2nd column: Maximum load current


3rd column: Temperature classes T6 (85 °C) to T1 (450 °C)

Column P1 to P5: Position (temperature value) on the axes of the derating

- T_a: Ambient temperature in °C
- T_p: Process temperature in °C

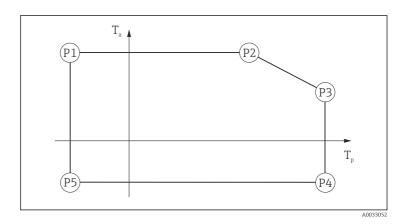



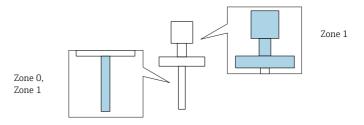

A2	350 mA		P1		P2		Р3		P4		P5	
			Tp	Ta	Tp	Ta	Tp	Ta	Tp	Ta	Tp	Ta
		Т6	-50	70	70	70	75	70	75	-40	-50	-40
		T5	-50	70	70	70	90	70	90	-40	-50	-40
		T4	-50	70	70	70	125	55	125	-40	-50	-40
		T3T1	-50	70	70	70	150	45	150	-40	-50	-40

A4	2 A		P1		P2		Р3		P4		P5	
			Tp	Ta	Tp	Ta	Tp	Ta	Tp	Ta	Tp	Ta
		Т6	-50	52	52	52	75	40	75	-40	-50	-40
		Т5	-50	67	67	67	90	55	90	-40	-50	-40
		T4	-50	70	70	70	125	47	125	-40	-50	-40
		T3T1	-50	70	70	70	150	38	150	-40	-50	-40

A8			P1		P2		Р3		P4		Р5	
			Tp	Ta	Tp	Ta	Tp	Ta	T _p	Ta	T _p	Ta
		Т6	-50	70	70	70	75	70	75	-40	-50	-40
		T5	-50	70	70	70	90	70	90	-40	-50	-40
		T4	-50	70	70	70	125	70	125	-40	-50	-40
		T3T1	-50	70	70	70	150	70	150	-40	-50	-40

Connection data

Basic specification, Position 3, 4	Power supply circuit	Output
A2	U = 10 to 55 V_{DC} ; P _{max} < 0.5 W	I _{max} = 350 mA
A4	U = 19 to 253 V _{AC} , 50/60 Hz or 19 to 55 V _{DC} ; $P_{max} < 25$ VA or < 1.3 W	2 potential free change- over contacts; 2 A Ex d
A8	$U = 4$ to 8.2 V_{DC}	NAMUR; I _{max} = 3.8 mA



71561727

www.addresses.endress.com

