# Technical Information **Proline Promass X 300**

Coriolis flowmeter



## Highest capacity four-tube flowmeter with a compact, easily accessible transmitter

#### **Application**

- Measuring principle operates independently of physical fluid properties such as viscosity or density
- For highest flow rates and outstanding performance in on-/ offshore oil and gas applications

#### Device properties

- Nominal diameter: DN 300 to 400 (12 to 16")
- Four-tube system with low pressure drop
- Complete exterior design made of 1.4435 (316L)
- Compact dual-compartment housing with up to 3 I/Os
- Backlit display with touch control and WLAN access
- Remote display available

#### Your benefits

- Increased profit single installation point providing premium accuracy for large quantities
- Fewer process measuring points multivariable measurement (flow, density, temperature)
- Space-saving installation no in-/outlet run needs
- Full access to process and diagnostic information numerous, freely combinable I/Os and Ethernet
- Reduced complexity and variety freely configurable I/O functionality
- Integrated verification Heartbeat Technology



## Table of contents

About this document		Ambient temperature range	
		Storage temperature	57
Function and system design	5	Climate class	57
Measuring principle		Relative humidity	57
Measuring system			57
Equipment architecture		Degree of protection	57
Security			57
Security	• /	Mechanical load	57
		Electromagnetic compatibility (EMC)	58
Input			
Measured variable	10	Process	58
Measuring range	10		
Operable flow range	11		
Input signal	11		58
•		Pressure-temperature ratings	58
Outmut	12	5	59
<b>±</b>		Rupture disk	
Output and input variants			60
Output signal			60
Signal on alarm		, i	60
Load			61
Ex connection data	23	Heating	
Low flow cut off	25	Vibrations	61
Galvanic isolation	25		
Protocol-specific data	25	Custody transfer	62
Power supply	32		
Terminal assignment			63
Available device plugs	33		
Supply voltage	34	Dimensions in US units	68
Power consumption	34	Weight	72
Current consumption	34		72
	34	Process connections	74
Power supply failure	34	Surface roughness	74
Electrical connection	35	•	
	45	Operability	75
Potential equalization		Operability	7.
Terminals	45	Operating concept	
Cable entries	45	Languages	
Pin assignment, device plug		1	
Cable specification			76
Overvoltage protection	50	Service interface	
		Network integration	
Performance characteristics	50	Supported operating tools	
Reference operating conditions	50	HistoROM data management	85
Maximum measured error	50		
Repeatability	51	Certificates and approvals	87
Response time	52	CE mark	
Influence of ambient temperature	52	UKCA marking	
Influence of medium temperature	-	RCM mark	
Influence of medium pressure	53		87
Design fundamentals		Functional safety	_
Design fundamentals	رر	,	
		FOUNDATION Fieldbus certification	
Installation	54		
Mounting location	54		
Orientation	54	EtherNet/IP certification	
Inlet and outlet runs	55		89
Special mounting instructions	55		89
-		Pressure Equipment Directive	89

2

Radio approval	90 90 90 90
Ordering information	91
Application packages Diagnostic functionality Heartbeat Technology Concentration measurement Special density Petroleum Petroleum & locking function OPC-UA Server	91 92 92 92 92 93 93
Accessories  Device-specific accessories  Communication-specific accessories  Service-specific accessories  System components	93 93 94 95 95
Documentation          Standard documentation          Supplementary device-dependent documentation	
Registered trademarks	98

## About this document

#### Symbols Electrical symbols

Symbol	Meaning
===	Direct current
~	Alternating current
$\overline{\sim}$	Direct current and alternating current
<u></u>	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Potential equalization connection (PE: protective earth) Ground terminals that must be connected to ground prior to establishing any other connections.
	The ground terminals are located on the interior and exterior of the device:  Interior ground terminal: potential equalization is connected to the supply network.  Exterior ground terminal: device is connected to the plant grounding system.

#### Communication-specific symbols

Symbol	Meaning
(F)	Wireless Local Area Network (WLAN) Communication via a wireless, local network.
•	LED Light emitting diode is off.
-\$	LED Light emitting diode is on.
	LED Light emitting diode is flashing.

#### Symbols for certain types of information

Symbol	Meaning
<b>✓</b>	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
(A)	Reference to documentation
A <sup>=</sup>	Reference to page
	Reference to graphic
	Visual inspection

#### Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections
EX	Hazardous area
×	Safe area (non-hazardous area)
≋➡	Flow direction

## Function and system design

#### Measuring principle

The measuring principle is based on the controlled generation of Coriolis forces. These forces are always present in a system when both translational and rotational movements are superimposed.

 $F_c = 2 \cdot \Delta m (v \cdot \omega)$ 

 $F_c$  = Coriolis force

 $\Delta m = moving mass$ 


 $\omega$  = rotational velocity

v = radial velocity in rotating or oscillating system

The amplitude of the Coriolis force depends on the moving mass  $\Delta m$ , its velocity v in the system and thus on the mass flow. Instead of a constant rotational velocity  $\omega$ , the sensor uses oscillation.

In the sensor, two sets of two parallel measuring tubes containing flowing fluid oscillate in antiphase, acting like a tuning fork. The Coriolis forces produced at the measuring tubes cause a phase shift in the tube oscillations (see illustration):

- At zero flow (when the fluid is at a standstill) the two tubes oscillate in phase (1).
- Mass flow causes deceleration of the oscillation at the inlet of the tubes (2) and acceleration at the outlet (3).

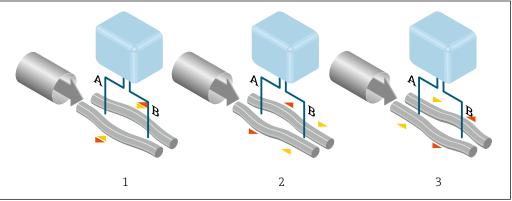

A002885

The phase difference (A-B) increases with increasing mass flow. Electrodynamic sensors register the tube oscillations at the inlet and outlet. System balance is ensured by the antiphase oscillation of the two measuring tubes. The measuring principle operates independently of temperature, pressure, viscosity, conductivity and flow profile.

#### Density measurement

The measuring tube is continuously excited at its resonance frequency. A change in the mass and thus the density of the oscillating system (comprising measuring tube and fluid) results in a corresponding, automatic adjustment in the oscillation frequency. The resonance frequency is thus a function of the medium density. The microprocessor utilizes this relationship to obtain a density signal.

#### Volume measurement

Together with the measured mass flow, this is used to calculate the volume flow.

#### Temperature measurement

The temperature of the measuring tube is determined in order to calculate the compensation factor due to temperature effects. This signal corresponds to the process temperature and is also available as an output signal.

#### Gas Fraction Handler (GFH)

The Gas Fraction Handler is a Promass software function that improves measurement stability and repeatability. The function continuously checks for the presence of disturbances in single-phase flow, i.e. gas bubbles in liquids or droplets in gas. In the presence of the second phase, flow and density become increasingly unstable. The Gas Fraction Handler function improves measurement stability with respect to the severity of the disturbances, without any effect under single-phase flow conditions.



The Gas Fraction Handler is only available in device versions with HART, Modbus RS485, PROFINET and PROFINET with Ethernet-APL.




#### Measuring system

The device consists of a transmitter and a sensor.

The device is available as a compact version:

The transmitter and sensor form a mechanical unit.

#### Transmitter

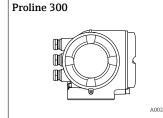


Device versions and materials:

- Transmitter housing
  - Aluminum, coated: aluminum, AlSi10Mg, coated
- Cast, stainless: cast, stainless steel, 1.4409 (CF3M) similar to 316L
- Material of window in transmitter housing:
  - Aluminum, coated: glass
  - Cast, stainless: glass

#### Configuration:


- External operation via 4-line, illuminated graphic local display (LCD) with touch control and guided menus ("Make-it-run" wizards) for application-specific commissioning.
- Via service interface or WLAN interface:
  - Operating tools (e.g. FieldCare, DeviceCare)
  - Web server (access via Web browser, e.g. Microsoft Internet Explorer, Microsoft Edge)

#### Sensor

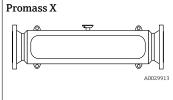

- Compact, bent four-tube system for measuring maximum flow rates, suitable for offshore applications and highly accurate
- Simultaneous measurement of flow, volume flow, density and temperature (multivariable)
- Nominal diameter range: DN 300 to 400 (12 to 16")
- Materials:
  - Sensor: stainless steel, 1.4404 (316L)
  - Measuring tubes: stainless steel, 1.4404 (316/316L)
  - Process connections: stainless steel, 1.4404 (F316/F316L)

#### Equipment architecture

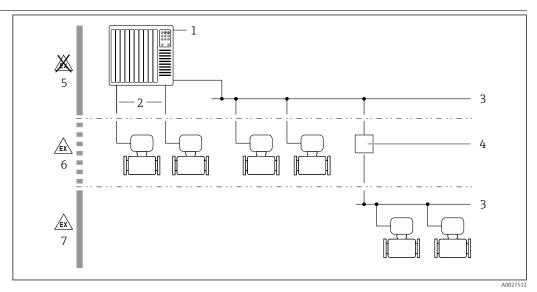

 $\blacksquare$  1 Possibilities for integrating measuring devices into a system

- 1 Control system (e.g. PLC)
- 2 Connecting cable (0/4 to 20 mA HART etc.)
- 3 Fieldbus
- 4 Coupler
- 5 Non-hazardous area
- 6 Hazardous area: Zone 2; Class I, Division 2
- Hazardous area: Zone 1; Class I, Division 1

#### Security

#### IT security

Our warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.

#### **Device-specific IT security**

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. An overview of the most important functions is provided in the following section:

Function/interface	Factory setting	Recommendation
Write protection via hardware write protection switch $\Rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	Not enabled	On an individual basis following risk assessment
Access code (also applies for Web server login or FieldCare connection) → 🖺 8	Not enabled (0000)	Assign a customized access code during commissioning
WLAN (order option in display module)	Enabled	On an individual basis following risk assessment
WLAN security mode	Enabled (WPA2- PSK)	Do not change
WLAN passphrase (password) → 🖺 8	Serial number	Assign a customized WLAN passphrase during commissioning
WLAN mode	Access point	On an individual basis following risk assessment
Web server → 🖺 8	Enabled	On an individual basis following risk assessment
CDI-RJ45 service interface → 🗎 9	-	On an individual basis following risk assessment

Protecting access via hardware write protection

Write access to the parameters of the device via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the main electronics module). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered.

#### Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

- User-specific access code
  - Protect write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare). Access authorization is clearly regulated through the use of a user-specific access code.
- WLAN passphrase
  - The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.
- Infrastructure mode
  - When the device is operated in infrastructure mode, the WLAN passphrase corresponds to the WLAN passphrase configured on the operator side.

User-specific access code

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code.

WLAN passphrase: Operation as WLAN access point

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface, which can be ordered as an optional extra, is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter.

Infrastructure mode

A connection between the device and WLAN access point is protected by means of an SSID and passphrase on the system side. Please contact the relevant system administrator for access.

General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning.
- Follow the general rules for generating a secure password when defining and managing the access code or network key.
- The user is responsible for the management and careful handling of the access code and network key.

#### Access via Web server

The device can be operated and configured via a Web browser with the integrated Web server. The connection is via the service interface (CDI-RJ45) or the WLAN interface. For device versions with the EtherNet/IP and PROFINET communication protocols, the connection can also be established via the terminal connection for signal transmission with EtherNet/IP, PROFINET (RJ45 plug) or PROFINET with Ethernet-APL (two-wire).

The Web server is enabled when the device is delivered. The Web server can be disabled if necessary (e.g. after commissioning) via the **Web server functionality** parameter.

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.

For detailed information on device parameters, see:

#### Access via OPC-UA

The device can communicate with OPC UA clients using the "OPC UA Server" application package.

The OPC UA server integrated in the device can be accessed via the WLAN access point using the WLAN interface - which can be ordered as an optional extra - or the service interface (CDI- RJ45) via Ethernet network. Access rights and authorization as per separate configuration.

The following Security Modes are supported as per the OPC UA Specification (IEC 62541):

- None
- Basic128Rsa15 signed
- Basic128Rsa15 signed and encrypted

Access via service interface (CDI-RJ45)

The device can be connected to a network via the service interface (CDI-RJ45). Device-specific functions guarantee the secure operation of the device in a network.

The use of relevant industrial standards and guidelines that have been defined by national and international safety committees, such as IEC/ISA62443 or the IEEE, is recommended. This includes organizational security measures such as the assignment of access authorization as well as technical measures such as network segmentation.

- Transmitters with an Ex de approval may not be connected via the service interface (CDI-RJ45)!

  Order code for "Approval transmitter + sensor", options (Ex de): BA, BB, C1, C2, GA, GB, MA, MB, NA, NB
- The device can be incorporated into a ring topology. The device is integrated via the terminal connection for signal transmission (output 1) and the connection to the service interface (CDI-RJ45).

## Input

#### Measured variable

#### Direct measured variables

- Mass flow
- Density
- Temperature

#### Calculated measured variables

- Volume flow
- Corrected volume flow
- Reference density

#### Measuring range

#### Measuring range for liquids

DN		Measuring range full scale values $\dot{m}_{min(F)}$ to $\dot{m}_{max(F)}$	
[mm]	[in]	[t/h]	[tn. sh./h]
300	12	0 to 4 100	0 to 4520
350	14	0 to 4 100	0 to 4520
400	16	0 to 4 100	0 to 4520

#### Measuring range for gases

The full scale value depends on the density and the sound velocity of the gas used. The full scale value can be calculated with the following formulas:

$$\dot{m}_{max(G)}=$$
 minimum of 
$$(\dot{m}_{max(F)}\cdot\rho_G:x\ ) \ and$$
 
$$(\rho_G\cdot(c_G/2)\cdot d_i{}^2\cdot(\pi/4)\cdot 3600\cdot n)$$

m <sub>max(G)</sub>	Maximum full scale value for gas [kg/h]
m <sub>max(F)</sub>	Maximum full scale value for liquid [kg/h]
$\dot{m}_{\max(G)} < \dot{m}_{\max(F)}$	$\dot{m}_{ max(G)}$ can never be greater than $\dot{m}_{ max(F)}$
$\rho_{G}$	Gas density in [kg/m³] at operating conditions
х	Limitation constant for max. gas flow [kg/m³]
$c_G$	Sound velocity (gas) [m/s]
d <sub>i</sub>	Measuring tube internal diameter [m]
π	Pi
n = 4	Number of measuring tubes

DN		х
[mm]	[in]	[kg/m³]
300	12	200
350	14	200
400	16	200

If calculating the full scale value using the two formulas:

1. Calculate the full scale value with both formulas.

2. The smaller value is the value that must be used.

#### Recommended measuring range



Flow limit → 🗎 60

#### Operable flow range

Over 1000:1.

Flow rates above the preset full scale value do not override the electronics unit, with the result that the totalizer values are registered correctly.

#### Input signal

#### **Output** and input variants

→ 🖺 13

#### External measured values

To increase the accuracy of certain measured variables or to calculate the corrected volume flow for gases, the automation system can continuously write different measured values to the measuring device:

- Operating pressure to increase accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.q. Cerabar M or Cerabar S)
- Medium temperature to increase accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow for gases
- Various pressure and temperature measuring devices can be ordered from Endress+Hauser: see "Accessories" section  $\rightarrow \stackrel{ riangle}{\Rightarrow} 95$

It is recommended to read in external measured values to calculate the corrected volume flow.

#### HART protocol

The measured values are written from the automation system to the measuring device via the HART protocol. The pressure transmitter must support the following protocol-specific functions:

- HART protocol
- Burst mode

#### Current input

#### Digital communication

The measured values can be written by the automation system via:

- FOUNDATION Fieldbus
- PROFIBUS DP
- PROFIBUS PA
- Modbus RS485
- EtherNet/IP
- PROFINET
- PROFINET with Ethernet-APL

#### Current input 0/4 to 20 mA

Current input	0/4 to 20 mA (active/passive)
Current span	<ul><li>4 to 20 mA (active)</li><li>0/4 to 20 mA (passive)</li></ul>
Resolution	1 μΑ
Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)
Maximum input voltage	≤ 30 V (passive)
Open-circuit voltage	≤ 28.8 V (active)
Possible input variables	<ul><li>Pressure</li><li>Temperature</li><li>Density</li></ul>

#### Status input

Maximum input values	■ DC $-3$ to 30 V ■ If status input is active (ON): $R_i > 3 \text{ k}\Omega$
Response time	Configurable: 5 to 200 ms
Input signal level	<ul> <li>Low signal: DC -3 to +5 V</li> <li>High signal: DC 12 to 30 V</li> </ul>
Assignable functions	<ul> <li>Off</li> <li>Reset the individual totalizers separately</li> <li>Reset all totalizers</li> <li>Flow override</li> </ul>

## **Output**

#### Output and input variants

Depending on the option selected for output/input 1, different options are available for the other outputs and inputs. Only one option can be selected for each output/input 1 to 3. The following tables must be read vertically  $(\downarrow)$ .

Example: If the option BA "4-20 mA HART" was selected for output/input 1, one of the options A, B, D, E, F, H, I or J is available for output 2 and one of the options A, B, D, E, F, H, I or J is available for output 3.

#### Output/input 1 and options for output/input 2



Options for output/input  $3 \rightarrow 14$ 

Order code for "Output; input 1" (020) → Possible options													
Current output 4 to 20 mA HART	ВА												
Current output 4 to 20 mA HART Ex i passive	4	CA											
Current output 4 to 20 mA HART Ex i active		4	СС										
FOUNDATION Fieldbus			4	SA									
FOUNDATION Fieldbus Ex i				<b>\</b>	TA								
PROFIBUS DP					<b>\</b>	LA							
PROFIBUS PA						<b>\</b>	GA						
PROFIBUS PA Ex i							4	НА					
Modbus RS485								4	MA				
EtherNet/IP 2-port switch integrated									4	NA			
PROFINET 2-port switch integrated										<b>\</b>	RA		
PROFINET with Ethernet-APL											<b>4</b>	RB	
PROFINET with Ethernet-APL Ex i												<b>\</b>	RC
Order code for "Output; input 2" (021) →		<b>\</b>	4	4	4	4	<b>\</b>	4	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>	1
Not assigned	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α
Current output 4 to 20 mA	В			В		В	В		В	В	В	В	
Current output 4 to 20 mA Ex i passive		С	С		С			С					С
User-configurable input/output <sup>1)</sup>	D			D		D	D		D	D	D	D	
Pulse/frequency/switch output	Е			Е		Е	Е		Е	Е	Е	Е	
Double pulse output <sup>2)</sup>	F								F				
Pulse/frequency/switch output Ex i passive		G	G		G			G					G
Relay output	Н			н		н	Н		Н	Н	Н	Н	
Current input 0/4 to 20 mA	I			I		I	I		I	I	I	I	
Status input	J			J		J	J		J	J	J	J	

<sup>2)</sup> If double pulse output (F) is selected for output/input 2 (021), only the double pulse output (F) option is available for selection for output/input 3 (022).

#### Output/input 1 and options for output/input 3 $\,$

Options for output/input  $2 \rightarrow \triangleq 13$ 

Order code for "Output; input 1" (020) →	Possible options												
Current output 4 to 20 mA HART	BA												
Current output 4 to 20 mA HART Ex i passive	4	CA											
Current output 4 to 20 mA HART Ex i active		4	СС										
FOUNDATION Fieldbus			4	SA									
FOUNDATION Fieldbus Ex i				<b>\</b>	TA								
PROFIBUS DP					4	LA							
PROFIBUS PA						4	GA						
PROFIBUS PA Ex i							1	НА					
Modbus RS485								4	MA				
EtherNet/IP 2-port switch integrated									<b>\</b>	NA			
PROFINET 2-port switch integrated										$\rightarrow$	RA		
PROFINET with Ethernet-APL											4	RB	
PROFINET with Ethernet-APL Ex i												4	RC
Order code for "Output; input 3" (022) →	<b>\</b>	<b>4</b>	<b>4</b>	<b>\</b>	4	4	1	<b>4</b>	<b>\</b>	<b>→</b>	<b>\</b>	<b>\</b>	<b>4</b>
Not assigned	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α
Current output 4 to 20 mA	В					В			В	В	В	В	
Current output 4 to 20 mA Ex i passive		С	С										
User-configurable input/output	D					D			D	D	D	D	
Pulse/frequency/switch output	Е					E			Е	Е	Е	E	
Double pulse output (slave) 1)	F								F				
Pulse/frequency/switch output Ex i passive		G	G										
Relay output	Н					Н			Н	Н	Н	Н	
Current input 0/4 to 20 mA	I					I			I	I	I	I	
Status input	J					J			J	J	J	J	

<sup>1)</sup> If double pulse output (F) is selected for output/input 2 (021), only the double pulse output (F) option is available for output/input 3 (022).

14

#### Output signal

#### Current output 4 to 20 mA HART

Order code	"Output; input 1" (20): Option BA: current output 4 to 20 mA HART
Signal mode	Can be set to: Active Passive
Current range	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  0 to 20 mA (only if the signal mode is active)  Fixed current
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	250 to 700 Ω
Resolution	0.38 μΑ
Damping	Configurable: 0 to 999.9 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### Current output 4 to 20 mA HART Ex i

Order code	"Output; input 1" (20) choose from:  Option CA: current output 4 to 20 mA HART Ex i passive  Option CC: current output 4 to 20 mA HART Ex i active
Signal mode	Depends on the selected order version.
Current range	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  0 to 20 mA  for index is active)  Fixed current
Open-circuit voltage	DC 21.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	<ul> <li>250 to 400 Ω (active)</li> <li>250 to 700 Ω (passive)</li> </ul>
Resolution	0.38 μΑ

Damping	Configurable: 0 to 999.9 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### FOUNDATION Fieldbus

FOUNDATION Fieldbus	H1, IEC 61158-2, galvanically isolated
Data transfer	31.25 kbit/s
<b>Current consumption</b>	10 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

#### PROFIBUS DP

Signal encoding	NRZ code
Data transfer	9.6 kBaud12 MBaud
Terminating resistor	Integrated, can be activated via DIP switches

#### PROFIBUS PA

PROFIBUS PA	In accordance with EN 50170 Volume 2, IEC 61158-2 (MBP), galvanically isolated
Data transmission	31.25 kbit/s
<b>Current consumption</b>	10 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

#### Modbus RS485

Physical interface	RS485 in accordance with EIA/TIA-485 standard
Terminating resistor	Integrated, can be activated via DIP switches

#### EtherNet/IP

Standards	In accordance with IEEE 802.3	
-----------	-------------------------------	--

#### PROFINET

Standards	In accordance with IEEE 802.3
-----------	-------------------------------

#### PROFINET with Ethernet-APL

Device use	Device connection to an APL field switch  The device may only be operated according to the following APL port classifications:  If used in hazardous areas: SLAA or SLAC 1)  If used in non-hazardous areas: SLAX
	Connection values of APL field switch (corresponds to APL port classification SPCC or SPAA, for instance):
	<ul> <li>Maximum input voltage: 15 V<sub>DC</sub></li> <li>Minimum output values: 0.54 W</li> </ul>
	Device connection to an SPE switch The device may only be operated according to the following PoDL power class: If used in the non-hazardous area: PoDL power class 10
	Connection values of SPE switch (corresponds to PoDL power class 10, 11 or 12):  Maximum input voltage: 30 V <sub>DC</sub> Minimum output values: 1.85 W
PROFINET	According to IEC 61158 and IEC 61784
Ethernet-APL	According to IEEE 802.3cg, APL port profile specification v1.0, galvanically isolated
Data transfer	10 Mbit/s
Current consumption	Transmitter ■ Max. 400 mA(24 V) ■ Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)
Permitted supply voltage	9 to 30 V
Network connection	With integrated reverse polarity protection

1) For more information on using the device in the hazardous area, see the Ex-specific Safety Instructions

#### Current output 4 to 20 mA

Order code	"Output; input 2" (21), "Output; input 3" (022): Option B: current output 4 to 20 mA
Signal mode	Can be set to: Active Passive
Current span	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  0 to 20 mA (only if the signal mode is active)  Fixed current
Maximum output values	22.5 mA
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	$0$ to $700\Omega$
Resolution	0.38 μΑ

Damping	Configurable: 0 to 999.9 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### Current output 4 to 20 mA Ex i passive

Order code	"Output; input 2" (21), "Output; input 3" (022): Option C: current output 4 to 20 mA Ex i passive
Signal mode	Passive
Current span	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  Fixed current
Maximum output values	22.5 mA
Maximum input voltage	DC 30 V
Load	0 to 700 $\Omega$
Resolution	0.38 μΑ
Damping	Configurable: 0 to 999 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

## Pulse/frequency/switch output

Function	Can be configured as pulse, frequency or switch output
Version	Open collector
	Can be set to:  Active Passive Passive Ex-i, passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V

Pulse output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Pulse width	Configurable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Configurable
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> </ul>
Frequency output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Configurable: end value frequency 2 to $10000\text{Hz}(f_{max}=12500\text{Hz})$
Damping	Configurable: 0 to 999.9 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>
Switch output	
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Configurable: 0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	<ul> <li>Off</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit value</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1-3</li> <li>Flow direction monitoring</li> <li>Status</li> <li>Partially filled pipe detection</li> <li>Low flow cut off</li> </ul> The range of options increases if the measuring device has one or more application packages.

#### Double pulse output

Function	Double pulse
Version	Open collector
	Can be set to:  Active Passive Passive NAMUR
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Output frequency	Configurable: 0 to 1000 Hz
Damping	Configurable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### Relay output

Function	Switch output
Version	Relay output, galvanically isolated
Switching behavior	Can be set to: NO (normally open), factory setting NC (normally closed)
Maximum switching capacity (passive)	■ DC 30 V, 0.1 A ■ AC 30 V, 0.5 A
Assignable functions	■ Off ■ On ■ Diagnostic behavior ■ Limit value ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Totalizer 1-3 ■ Flow direction monitoring ■ Status ■ Partially filled pipe detection ■ Low flow cut off  The range of options increases if the measuring device has one or more application packages.

#### User-configurable input/output

 $\textbf{One} \ specific input \ or \ output \ is \ assigned \ to \ a \ user-configurable \ input/output \ (configurable \ I/O) \ during \ device \ commissioning.$ 

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

The technical values correspond to those of the inputs and outputs described in this section.

#### Signal on alarm

Depending on the interface, failure information is displayed as follows:

#### **HART** current output

Device diagnostics	Device condition can be read out via HART Command 48

#### **PROFIBUS PA**

Status and alarm messages	Diagnostics in accordance with PROFIBUS PA Profile 3.02
Failure current FDE (Fault Disconnection Electronic)	0 mA

#### **PROFIBUS DP**

Status and alarm	Diagnostics in accordance with PROFIBUS PA Profile 3.02
messages	

#### EtherNet/IP

Device diagnostics	Device condition can be read out in Input Assembly
--------------------	--

#### **PROFINET**

#### PROFINET with Ethernet-APL

Device diagnostics	Diagnostics according to PROFINET PA Profile 4
--------------------	--

#### FOUNDATION Fieldbus

Status and alarm messages	Diagnostics in accordance with FF-891
Failure current FDE (Fault Disconnection Electronic)	0 mA

#### Modbus RS485

Failure mode	Choose from:
	■ NaN value instead of current value
	■ Last valid value

#### Current output 0/4 to 20 mA

#### 4 to 20 mA

Failure mode	Choose from:  4 to 20 mA in accordance with NAMUR recommendation NE 43  4 to 20 mA in accordance with US  Min. value: 3.59 mA	
	<ul> <li>Max. value: 22.5 mA</li> <li>Freely definable value between: 3.59 to 22.5 mA</li> <li>Actual value</li> <li>Last valid value</li> </ul>	

#### 0 to 20 mA

Failure mode	Choose from:
	■ Maximum alarm: 22 mA
	■ Freely definable value between: 0 to 20.5 mA

#### Pulse/frequency/switch output

Pulse output			
Failure mode	Choose from:  Actual value  No pulses		
Frequency output			
Failure mode	Choose from:  Actual value  O Hz  Defined value (f max 2 to 12 500 Hz)		
Switch output			
Failure mode	Choose from:  Current status  Open  Closed		

#### Relay output

Choose from:
<ul><li>Current status</li></ul>
■ Open
■ Closed

#### Local display

Plain text display	With information on cause and remedial measures	
Backlight	Red backlighting indicates a device error.	

Status signal as per NAMUR recommendation NE 107

#### Interface/protocol

- Via digital communication:
  - HART protocol
  - FOUNDATION Fieldbus
  - PROFIBUS PA
  - PROFIBUS DP
  - Modbus RS485
  - EtherNet/IP
  - PROFINET
  - PROFINET with Ethernet-APL
- Via service interface
  - CDI-RJ45 service interface
  - WLAN interface

Plain text display	With information on cause and remedial measures
--------------------	---



Additional information on remote operation  $\rightarrow~ riangleq 76$ 

#### Web browser

Plain text display	With information on cause and remedial measures
--------------------	---

#### Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes			
	The following information is displayed depending on the device version:  Supply voltage active  Data transmission active  Device alarm/error has occurred  EtherNet/IP network available  EtherNet/IP connection established  PROFINET network available  PROFINET connection established			
	■ PROFINET blinking feature			

Load

Output signal  $\rightarrow$   $\blacksquare$  15

#### Ex connection data

#### Safety-related values

Order code for "Output; input 1"	Output type	Safety-related values "Output; input 1"	
		26 (+)	27 (-)
Option <b>BA</b>	Current output 4 to 20 mA HART	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$	
Option <b>GA</b>	PROFIBUS PA	$U_{N} = 32 V_{DC}$ $U_{M} = 250 V_{AC}$	
Option <b>LA</b>	PROFIBUS DP	$U_{N} = 32 V_{DC}$ $U_{M} = 250 V_{AC}$	
Option <b>MA</b>	Modbus RS485	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$	
Option <b>SA</b>	FOUNDATION Fieldbus	$U_{N} = 32 V_{DC}$ $U_{M} = 250 V_{AC}$	
Option <b>NA</b>	EtherNet/IP	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$	

Order code for "Output; input 1"	Output type	Safety-related values "Output; input 1"	
		26 (+)	27 (-)
Option <b>RA</b>	PROFINET	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$	
Option <b>RB</b>	PROFINET with Ethernet- APL	APL port profile SLAX SPE PoDL classes 10, 11, 12 $U_N = 30 \ V_{DC}$ $U_M = 250 \ V_{AC}$	2

Order code for	Output type	Safety-related values			
"Output; input 2"; "Output; input 3"		Output; input 2		Output;	input 3
		24 (+)	25 (-)	22 (+)	23 (-)
Option <b>B</b>	Current output 4 to 20 mA	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$	:		
Option <b>D</b>	User-configurable input/ output	$U_{\rm N} = 30  V_{\rm DC}$ $U_{\rm M} = 250  V_{\rm AC}$	:		
Option <b>E</b>	Pulse/frequency/switch output	$U_{\rm N} = 30  V_{\rm DC}$ $U_{\rm M} = 250  V_{\rm AC}$	:		
Option <b>F</b>	Double pulse output	$U_{\rm N} = 30  V_{\rm DC}$ $U_{\rm M} = 250  V_{\rm AC}$	:		
Option <b>H</b>	Relay output	$U_{N} = 30 V_{DC}$ $I_{N} = 100 \text{ mA}_{DC}$ $U_{M} = 250 V_{AC}$			
Option <b>I</b>	Current input 4 to 20 mA	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$	:		
Option <b>J</b>	Status input	$U_{\rm N} = 30  V_{\rm DC}$ $U_{\rm M} = 250  V_{\rm AC}$	:		

#### Intrinsically safe values

Order code "Output; input 1"	Output type	Intrinsically safe values "Output; input 1"	
		26 (+)	27 (-)
Option <b>CA</b>	Current output 4 to 20 mA HART Ex i passive	$\begin{split} &U_{i} = 30 \text{ V} \\ &I_{i} = 100 \text{ mA} \\ &P_{i} = 1.25 \text{ W} \\ &L_{i} = 0  \mu\text{H} \\ &C_{i} = 6 \text{ nF} \end{split}$	
Option CC	Current output 4 to 20 mA HART Ex i active	Ex ia $^{1)}$ $U_0 = 21.8 \text{ V}$ $l_0 = 90 \text{ mA}$ $P_0 = 491 \text{ mW}$ $L_0 = 4.1 \text{ mH (IIC)/15 mH (IIB)}$ $C_0 = 160 \text{ nF (IIC)/}$ 1 160  nF (IIB)	Ex ic $^{2)}$ $U_0 = 21.8 \text{ V}$ $l_0 = 90 \text{ mA}$ $P_0 = 491 \text{ mW}$ $L_0 = 9 \text{ mH (IIC)/39 mH}$ (IIB) $C_0 = 600 \text{ nF (IIC)/}$ 4000  nF (IIB)
		$\begin{split} &U_{i} = 30 \text{ V} \\ &I_{i} = 10 \text{ mA} \\ &P_{i} = 0.3 \text{ W} \\ &L_{i} = 5  \mu\text{H} \\ &C_{i} = 6 \text{ nF} \end{split}$	

Order code "Output; input 1"	Output type	Intrinsically safe values "Output; input 1"	
		26 (+)	27 (-)
Option <b>HA</b>	PROFIBUS PA Ex i (FISCO Field Device)	$Ex ia ^{1)} \\ U_i = 30 V \\ l_i = 570 mA \\ P_i = 8.5 W \\ L_i = 10 \mu H \\ C_i = 5 nF$	Ex ic $^{2}$ ) $U_{i} = 32 \text{ V}$ $l_{i} = 570 \text{ mA}$ $P_{i} = 8.5 \text{ W}$ $L_{i} = 10  \mu\text{H}$ $C_{i} = 5 \text{ nF}$
Option TA	FOUNDATION Fieldbus Ex i	$Ex ia ^{1} \\ U_i = 30 V \\ l_i = 570 mA \\ P_i = 8.5 W \\ L_i = 10 \mu H \\ C_i = 5 nF$	Ex ic $^{2}$ ) $U_{i} = 32 \text{ V}$ $l_{i} = 570 \text{ mA}$ $P_{i} = 8.5 \text{ W}$ $L_{i} = 10  \mu\text{H}$ $C_{i} = 5 \text{ nF}$
Option RC	PROFINET with Ethernet- APL Ex i	Ex ia <sup>1)</sup> 2-WISE power load APL port profile SLAA	Ex ic <sup>2)</sup> 2-WISE power load APL port profile SLAC

- 1) Only available for Proline 500 transmitter Zone 1; Class I, Division 1.
- 2) Only available for transmitter Zone 2; Class I, Division 2.

Order code for	Output type	Intrins	sically safe va	lues or NIFW	values
"Output; input 2"; "Output; input 3"		Output;	input 2	Output;	input 3
• / •		24 (+)	25 (-)	22 (+)	23 (-)
Option C	Current output 4 to 20 mA Ex i passive	$U_{i} = 30 \text{ V}$ $l_{i} = 100 \text{ mA}$ $P_{i} = 1.25 \text{ W}$ $L_{i} = 0$ $C_{i} = 0$			
Option <b>G</b>	Pulse/frequency/switch output Ex i passive	$\begin{aligned} &U_{i} = 30 \text{ V} \\ &l_{i} = 100 \text{ mA} \\ &P_{i} = 1.25 \text{ W} \\ &L_{i} = 0 \\ &C_{i} = 0 \end{aligned}$			

#### Low flow cut off

The switch points for low flow cut off are user-selectable.

#### Galvanic isolation

The outputs are galvanically isolated:

- from the power supply
- from one another
- from the potential equalization (PE) terminal

#### Protocol-specific data

#### **HART**

Manufacturer ID	0x11
Device type ID	0x3B
HART protocol revision	7
Device description files (DTM, DD)	Information and files under: www.endress.com
HART load	Min. 250 Ω
System integration	Information on system integration: Operating Instructions → 🗎 96.  ■ Measured variables via HART protocol  ■ Burst Mode functionality

#### FOUNDATION Fieldbus

Manufacturer ID	0x452B48 (hex)
Ident number	0x103B (hex)
Device revision	1
DD revision	Information and files under:
CFF revision	<ul><li>www.endress.com</li><li>www.fieldcommgroup.org</li></ul>
Interoperability Test Kit (ITK)	Version 6.2.0
ITK Test Campaign Number	Information:  www.endress.com www.fieldcommgroup.org
Link Master capability (LAS)	Yes
Choice of "Link Master" and "Basic Device"	Yes Factory setting: Basic Device
Node address	Factory setting: 247 (0xF7)
Supported functions	The following methods are supported:  Restart  ENP Restart  Diagnostic  Set to OOS  Set to AUTO  Read trend data  Read event logbook
Virtual Communication Relation	onships (VCRs)
Number of VCRs	44
Number of link objects in VFD	50
Permanent entries	1
Client VCRs	0
Server VCRs	10
Source VCRs	43
Sink VCRs	0
Subscriber VCRs	43
Publisher VCRs	43
Device Link Capabilities	
Slot time	4
Min. delay between PDU	8
Max. response delay	16
System integration	Information regarding system integration: Operating Instructions → 🗎 96.  ■ Cyclic data transmission  ■ Description of the modules  ■ Execution times  ■ Methods

#### PROFIBUS DP

Manufacturer ID	0x11
Ident number	0x156F
Profile version	3.02

Device description files (GSD, DTM, DD)	Information and files under:  ■ https://www.endress.com/download On the device product page: PRODUCTS → Product Finder → Links ■ https://www.profibus.com
Supported functions	<ul> <li>Identification &amp; Maintenance         Simplest device identification on the part of the control system and nameplate</li> <li>PROFIBUS upload/download         Reading and writing parameters is up to ten times faster with PROFIBUS upload/download</li> <li>Condensed status         Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur</li> </ul>
Configuration of the device address	<ul> <li>DIP switches on the I/O electronics module</li> <li>Via operating tools (e.g. FieldCare)</li> </ul>
Compatibility with earlier model	If the device is replaced, the measuring device Promass 300 supports the compatibility of the cyclic data with previous models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promass 300 GSD file.
	Previous model: Promass 83 PROFIBUS DP  ■ ID No.: 1529 (hex)  ■ Extended GSD file: EH3x1529.gsd  ■ Standard GSD file: EH3_1529.gsd  Description of the function scope of compatibility: Operating Instructions →   96.
System integration	Information regarding system integration: Operating Instructions → 🗎 96.  Cyclic data transmission Block model Description of the modules

#### PROFIBUS PA

Manufacturer ID	0x11
Ident number	0x156D
Profile version	3.02
Device description files (GSD, DTM, DD)	Information and files under:  ■ https://www.endress.com/download On the device product page: PRODUCTS → Product Finder → Links ■ https://www.profibus.com
Supported functions	<ul> <li>Identification &amp; Maintenance         Simplest device identification on the part of the control system and         nameplate</li> <li>PROFIBUS upload/download         Reading and writing parameters is up to ten times faster with PROFIBUS         upload/download</li> <li>Condensed status         Simplest and self-explanatory diagnostic information by categorizing         diagnostic messages that occur</li> </ul>
Configuration of the device address	<ul> <li>DIP switches on the I/O electronics module</li> <li>Local display</li> <li>Via operating tools (e.g. FieldCare)</li> </ul>

Compatibility with earlier model	If the device is replaced, the measuring device Promass 300 supports the compatibility of the cyclic data with previous models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promass 300 GSD file.
	Earlier models:  Promass 80 PROFIBUS PA  ID No.: 1528 (hex)  Extended GSD file: EH3x1528.gsd  Standard GSD file: EH3_1528.gsd  Promass 83 PROFIBUS PA  ID No.: 152A (hex)  Extended GSD file: EH3x152A.gsd  Standard GSD file: EH3x152A.gsd
	Description of the function scope of compatibility: Operating Instructions $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
System integration	Information regarding system integration: Operating Instructions → 🗎 96.  Cyclic data transmission  Block model  Description of the modules

#### Modbus RS485

Protocol	Modbus Applications Protocol Specification V1.1
Response times	<ul> <li>Direct data access: typically 25 to 50 ms</li> <li>Auto-scan buffer (data range): typically 3 to 5 ms</li> </ul>
Device type	Slave
Slave address range	1 to 247
Broadcast address range	0
Function codes	<ul> <li>03: Read holding register</li> <li>04: Read input register</li> <li>06: Write single registers</li> <li>08: Diagnostics</li> <li>16: Write multiple registers</li> <li>23: Read/write multiple registers</li> </ul>
Broadcast messages	Supported by the following function codes:  O6: Write single registers  16: Write multiple registers  23: Read/write multiple registers
Supported baud rate	<ul> <li>1200 BAUD</li> <li>2400 BAUD</li> <li>4800 BAUD</li> <li>9600 BAUD</li> <li>19200 BAUD</li> <li>38400 BAUD</li> <li>57600 BAUD</li> <li>115200 BAUD</li> </ul>
Data transfer mode	• ASCII • RTU
Data access	Each device parameter can be accessed via Modbus RS485.  For Modbus register information

Compatibility with earlier model	If the device is replaced, the measuring device Promass 300 supports the compatibility of the Modbus registers for the process variables and the diagnostic information with the previous model Promass 83. It is not necessary to change the engineering parameters in the automation system.  □ Description of the function scope of compatibility:  Operating Instructions → ■ 96.
System integration	Information on system integration: Operating Instructions → 🗎 96.  ■ Modbus RS485 information  ■ Function codes  ■ Register information  ■ Response time  ■ Modbus data map

#### EtherNet/IP

	<u></u>				
Protocol	<ul> <li>The CIP Networks Library Volume 1: Common Industrial Protocol</li> <li>The CIP Networks Library Volume 2: EtherNet/IP Adaptation of CIP</li> </ul>				
Communication type	■ 10Base-T ■ 100Base-TX				
Device profile	Generic device (product type: 0x2B)				
Manufacturer ID	0x000049E				
Device type ID	0x103B				
Baud rates	Automatic 10/100 Mbit with half-duplex and full-duplex detection				
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs				
Supported CIP connections	Max. 3 connections				
Explicit connections	Max. 6 connections				
I/O connections	Max. 6 connections (scanner)				
Configuration options for measuring device	<ul> <li>DIP switches on the electronics module for IP addressing</li> <li>Manufacturer-specific software (FieldCare)</li> <li>Add-on Profile Level 3 for Rockwell Automation control systems</li> <li>Web browser</li> <li>Electronic Data Sheet (EDS) integrated in the measuring device</li> </ul>				
Configuration of the EtherNet interface	<ul> <li>Speed: 10 MBit, 100 MBit, auto (factory setting)</li> <li>Duplex: half-duplex, full-duplex, auto (factory setting)</li> </ul>				
Configuration of the device address	<ul> <li>DIP switches on the electronics module for IP addressing (last octet)</li> <li>DHCP</li> <li>Manufacturer-specific software (FieldCare)</li> <li>Add-on Profile Level 3 for Rockwell Automation control systems</li> <li>Web browser</li> <li>EtherNet/IP tools, e.g. RSLinx (Rockwell Automation)</li> </ul>				
Device Level Ring (DLR)	Yes				
System integration	Information regarding system integration: Operating Instructions $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $				
	<ul><li>Cyclic data transmission</li><li>Block model</li><li>Input and output groups</li></ul>				

#### PROFINET

Protocol	Application layer protocol for decentral device periphery and distributed automation, Version 2.3
Communication type	100 MBit/s
Conformance Class	Conformance Class B
Netload Class	Netload Class 2 0 Mbps

Baud rates	Automatic 100 Mbit/s with full-duplex detection
Cycle times	From 8 ms
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs
Media Redundancy Protocol (MRP)	Yes
System redundancy support	System redundancy S2 (2 AR with 1 NAP)
Device profile	Application interface identifier 0xF600 Generic device
Manufacturer ID	0x11
Device type ID	0x843B
Device description files (GSD, DTM, DD)	Information and files under:  ■ www.endress.com  On the product page for the device: Documents/Software → Device drivers  ■ www.profibus.com
Supported connections	<ul> <li>2 x AR (IO Controller AR)</li> <li>1 x AR (IO-Supervisor Device AR connection allowed)</li> <li>1 x Input CR (Communication Relation)</li> <li>1 x Output CR (Communication Relation)</li> <li>1 x Alarm CR (Communication Relation)</li> </ul>
Configuration options for measuring device	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server via Web browser and IP address</li> <li>Device master file (GSD), can be read out via the integrated Web server of the measuring device.</li> <li>Onsite operation</li> </ul>
Configuration of the device name	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>DCP protocol</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server</li> </ul>
Supported functions	<ul> <li>Identification &amp; Maintenance, simple device identifier via:</li> <li>Control system</li> <li>Nameplate</li> <li>Measured value status         The process variables are communicated with a measured value status     </li> <li>Blinking feature via the local display for simple device identification and assignment</li> <li>Device operation via asset management software (e.g. FieldCare, DeviceCare, SIMATIC PDM)</li> </ul>
System integration	Information regarding system integration: Operating Instructions → 🗎 96.  Cyclic data transmission Overview and description of the modules Status coding Startup configuration Factory setting

#### PROFINET with Ethernet-APL

Protocol	Application layer protocol for decentral device periphery and distributed automation, Version 2.4
Communication type	Ethernet Advanced Physical Layer 10BASE-T1L
Conformance Class	Conformance Class B (PA)
Netload Class	Netload Class 2 0 Mbps
Baud rates	10 Mbit/s Full-duplex
Cycle times	64 ms

Polarity	Automatic correction of crossed "APL signal +" and "APL signal -" signal lines
Media Redundancy Protocol (MRP)	Not possible (point-to-point connection to APL field switch)
System redundancy support	System redundancy S2 (2 AR with 1 NAP)
Device profile	PROFINET PA profile 4 (Application interface identifier API: 0x9700)
Manufacturer ID	0x11
Device type ID	0xA43B
Device description files (GSD, DTM, FDI)	Information and files under:  ■ www.endress.com/download On the device product page: PRODUCTS → Product Finder → Links  ■ www.profibus.com
Supported connections	<ul> <li>2x AR (IO Controller AR)</li> <li>2x AR (IO Supervisor Device AR connection allowed)</li> </ul>
Configuration options for measuring device	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server via Web browser and IP address</li> <li>Device master file (GSD), can be read out via the integrated Web server of the measuring device.</li> <li>Onsite operation</li> </ul>
Configuration of the device name	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>DCP protocol</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server</li> </ul>
Supported functions	<ul> <li>Identification &amp; Maintenance, simple device identifier via:</li> <li>Control system</li> <li>Nameplate</li> <li>Measured value status         The process variables are communicated with a measured value status     </li> <li>Blinking feature via the local display for simple device identification and assignment</li> <li>Device operation via asset management software (e.g. FieldCare, DeviceCare, SIMATIC PDM with FDI package)</li> </ul>
System integration	Information regarding system integration: Operating Instructions → 🗎 96.  Cyclic data transmission Overview and description of the modules Status coding Startup configuration Factory setting

## Power supply

#### Terminal assignment

#### Transmitter: supply voltage, input/outputs

#### HART

Supply voltage		Input/o	Input/output 1		Input/output 2		Input/output 3	
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	
		The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $						

#### FOUNDATION Fieldbus

Supply voltage		Input/output 1		Input/output 2		Input/output 3		
1 (+)	2 (-)	26 (A)	27 (B)	24 (+)	25 (-)	22 (+)	23 (-)	
		The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $						

#### PROFIBUS DP

Supply	Supply voltage		Input/output 1		Input/output 2		Input/output 3	
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	
		The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $						

#### PROFIBUS PA

Supply voltage		Input/output 1		Input/output 2		Input/output 3		
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	
		The terminal assignment depends on the specific device version ordered → 🖺 13.						

#### Modbus RS485

Supply voltage		Input/o	Input/output 1		Input/output 2		Input/output 3		
	1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	
			The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $						

#### PROFINET

Supply	Supply voltage Input/output 1		Input/output 2		Input/output 3	
1 (+)	2 (-)	PROFINET	24 (+)	25 (-)	22 (+)	23 (-)
		(RJ45 connector)			t depends on t rdered → 🖺 1	

#### PROFINET with Ethernet-APL

Supply voltage		Input/output 1	Input/o	utput 2	Input/o	utput 3
1 (+)	2 (-)	PROFINET	24 (+)	25 (-)	22 (+)	23 (-)
	(RJ45 connector)			t depends on t rdered → 🖺 1		

#### EtherNet/IP

Supply	y voltage	Input/output 1	Input/output 2		Input/output 3	
1 (+)	2 (-)	EtherNet/IP	24 (+)	25 (-)	22 (+)	23 (-)
	(RJ45 c	(RJ45 connector)			t depends on t rdered → 🖺 1	*

#### Available device plugs

Povice plugs may not be used in hazardous areas!

#### Device plugs for fieldbus systems:

Order code for "Input; output 1"

- Option **GA** "PROFIBUS PA" → 🖺 33
- Option **NA** "EtherNet/IP" → 🖺 33
- Option **RA** "PROFINET" → 🗎 34
- Option **RB** "PROFINET with Ethernet-APL" → 🗎 34

#### Device plug for connecting to the service interface:

Order code for "Accessory mounted"

Option NB, adapter RJ45 M12 (service interface) → 

47

#### Order code for "Input; output 1", option SA "FOUNDATION Fieldbus"

Order code for	Cable entry/connection → 🖺 35		
"Electrical connection"	2	3	
M, 3, 4, 5	7/8" connector	-	

#### Order code for "Input; output 1", option GA "PROFIBUS PA"

Order code for	Cable entry/connection → 🖺 35		
"Electrical connection"	2	3	
L, N, P, U	Connector M12 × 1	-	

#### Order code for "Input; output 1", option NA "EtherNet/IP"

Order code for	Cable entry/connection → 🗎 35		
"Electrical connection"	2	3	
L, N, P, U	Connector M12 × 1	-	
R <sup>1) 2)</sup> , S <sup>1) 2)</sup> , T <sup>1) 2)</sup> , V <sup>1) 2)</sup>	Connector M12 × 1	Connector M12 × 1	

Cannot be combined with an external WLAN antenna (order code for "Enclosed accessories", option P8) of an RJ45 M12 adapter for the service interface (order code for "Accessories mounted", option NB) or of the remote display and operating module DKX001

2) Suitable for integrating the device in a ring topology.

#### Order code for "Input; output 1", option RA "PROFINET"

Order code for	Cable entry/connection → 🖺 35		
"Electrical connection"	2	3	
L, N, P, U	Connector M12 × 1	-	
R <sup>1)2)</sup> , S <sup>1)2)</sup> , T <sup>1)2)</sup> , V <sup>1)2)</sup>	Connector M12 × 1	Connector M12 × 1	

- Cannot be combined with an external WLAN antenna (order code for "Enclosed accessories", option P8) of an RJ45 M12 adapter for the service interface (order code for "Accessories mounted", option NB) or of the remote display and operating module DKX001.
- 2) Suitable for integrating the device in a ring topology.

#### Order code for "Input; output 1", option RB "PROFINET with Ethernet-APL"

Order code	Cable entry/connection → 🗎 35		
"Electrical connection"	2	3	
L, N, P, U	M12 plug × 1	-	

#### Order code for "Accessory mounted", option NB "Adapter RJ45 M12 (service interface)"

Order code	Cable entry/coupling → 🖺 35		
"Accessory mounted"	Cable entry 2	Cable entry 3	
NB	Plug M12 × 1	-	

#### Supply voltage

Order code for "Power supply"	Terminal voltage		Frequency range
Option <b>D</b>	DC 24 V	±20%	-
Option <b>E</b>	AC 100 to 240 V	-15 to +10%	50/60 Hz
Option <b>I</b>	DC 24 V	±20%	-
Option I	AC 100 to 240 V	-15 to +10%	50/60 Hz

#### Power consumption

#### Transmitter

Max. 10 W (active power)

switch-on current Max. 36 A (<5 ms) as per NAMUR Recommendation NE 21	
---	--

#### **Current consumption**

#### Transmitter

- Max. 400 mA (24 V)
- Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)

#### Power supply failure

- Totalizers stop at the last value measured.
- Depending on the device version, the configuration is retained in the device memoryor in the pluggable data memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

## Overcurrent protection element

The device must be operated with a dedicated circuit breaker, as it does not have an ON/OFF switch of its own.


- The circuit breaker must be easy to reach and labeled accordingly.
- Permitted nominal current of the circuit breaker: 2 A up to maximum 10 A.

#### **Electrical connection**

#### Transmitter connection




- Terminal assignment → 🗎 32
- Device plugs available→ 🖺 33

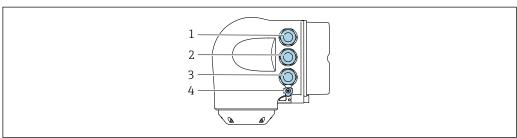

A002678

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output or terminal for network connection via service interface (CDI-RJ45); Optional: terminal connection for external WLAN antenna or connection for remote display and operating module DKX001
- 4 Terminal connection for potential equalization (PE)
- An adapter for the RJ45 to the M12 plug is optionally available:
  Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. The connection to the service interface can therefore be established via an M12 plug without opening the device.

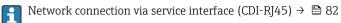


#### Connecting in a ring topology

Device versions with EtherNet/IP and PROFINET communication protocols can be integrated into a ring topology. The device is integrated via the terminal connection for signal transmission (output 1) and the connection to the service interface (CDI-RJ45).



Integrate the transmitter into a ring topology:

- EtherNet/IP
- PROFINET

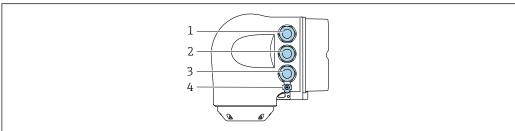


A0026781

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission: PROFINET or EtherNet/IP (RJ45 connector)
- 3 Terminal connection to service interface (CDI-RJ45)
- 4 Terminal connection for potential equalization (PE)

If the device has additional inputs/outputs, these are routed in parallel via the cable entry for connection to the service interface (CDI-RJ45).

#### Connecting the remote display and operating module DKX001


- The remote display and operating module DKX001 is available as an optional extra  $\rightarrow \triangleq 93$ .
- The measuring device is always supplied with a dummy cover when the remote display and operating module DKX001 is ordered directly with the measuring device. Display or operation at the transmitter is not possible in this case.
- If ordered subsequently, the remote display and operating module DKX001 may not be connected at the same time as the existing measuring device display module. Only one display or operation unit may be connected to the transmitter at any one time.

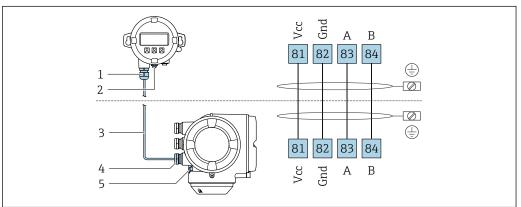


- 1 Remote display and operating module DKX001
- 2 Terminal connection for potential equalization (PE)
- 3 Connecting cable
- Measuring device
- Terminal connection for potential equalization (PE)

#### Connection examples

Current output 4 to 20 mA HART

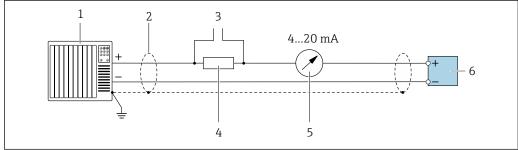


- **₽** 2 Connection example for 4 to 20 mA HART current output (active)
- Automation system with current input (e.g. PLC) 1
- Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC
- Connection for HART operating devices  $\rightarrow \blacksquare 76$
- Resistor for HART communication ( $\geq 250~\Omega$ ): observe maximum load  $\rightarrow ~ riangleq 15$ 4
- 5 Analog display unit: observe maximum load  $\rightarrow = 15$
- Transmitter

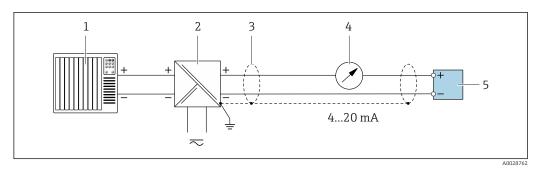

- 3 Connection example for 4 to 20 mA HART current output (passive)
- 1 Automation system with current input (e.g. PLC)
- 2 Power supply
- 3 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications → 🖺 47
- 5 Transmitter


#### HART input

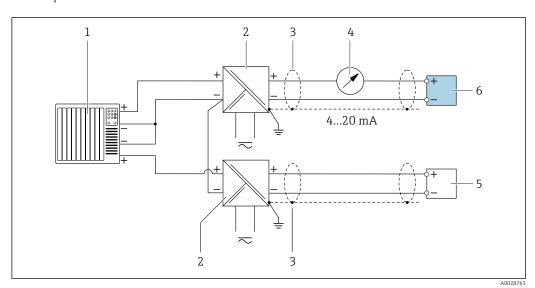

■ 4 Connection example for HART input with a common negative (passive)

- 1 Automation system with HART output (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- Pressure transmitter (e.g. Cerabar M, Cerabar S): see requirements
- 6 Transmitter


#### PROFIBUS PA

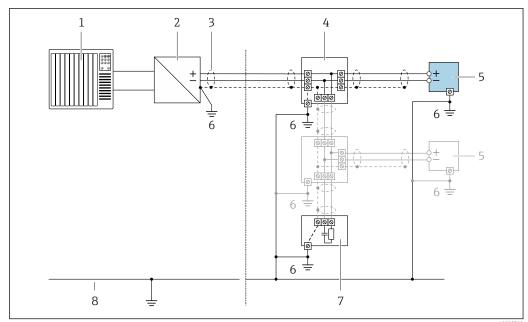

A00287

- 5 Connection example for PROFIBUS PA
- 1 Control system (e.g. PLC)
- 2 PROFIBUS PA segment coupler
- 3 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

#### PROFIBUS DP

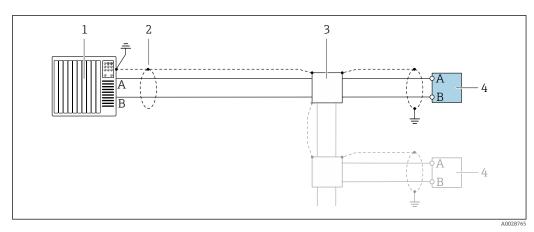


 $\blacksquare$  6 Connection example for PROFIBUS DP, non-hazardous area and Zone 2/Div. 2

- 1 Control system (e.g. PLC)
- 2 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Distribution box
- 4 Transmitter


If baud rates > 1.5 MBaud an EMC cable entry must be used and the cable shield must continue as far as the terminal wherever possible.

#### EtherNet/IP

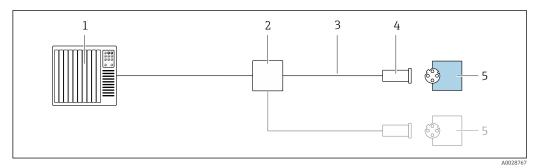


- 7 Connection example for EtherNet/IP
- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- *3 Observe cable specifications*
- 4 Device plug
- 5 Transmitter

#### EtherNet/IP: DLR (Device Level Ring)

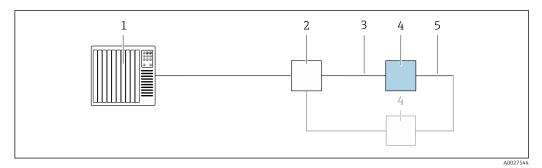

- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- *3 Observe cable specifications*  $\rightarrow$   $\implies$  47
- 4 Transmitter
- 5 Connecting cable between the two transmitters


# PROFINET

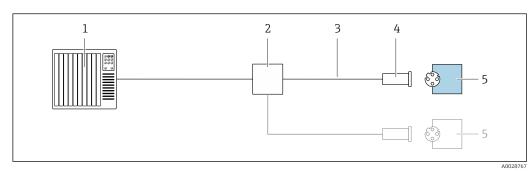

 $\blacksquare$  8 Connection example for PROFINET


- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- 4 Device plug
- 5 Transmitter

#### PROFINET with Ethernet-APL

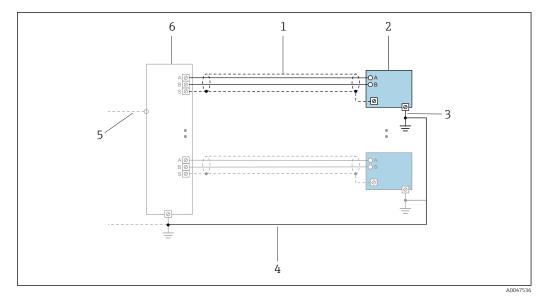

- **9**  ${\it Connection example for PROFINET with Ethernet-APL}$
- 1 Cable shield
- 2 Measuring device
- 3 Local grounding
- Potential equalization
  Trunk or TCP
- 5
- Field switch


# PROFINET: MRP (Media Redundancy Protocol)

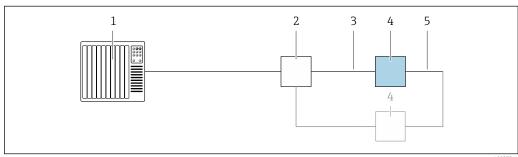

A0027544

- Control system (e.g. PLC) Ethernet switch
- 2
- 3 *Observe cable specifications*  $\rightarrow$   $\blacksquare$  47
- Transmitter 4
- ${\it Connecting\ cable\ between\ the\ two\ transmitters}$


#### PROFINET: system redundancy S2

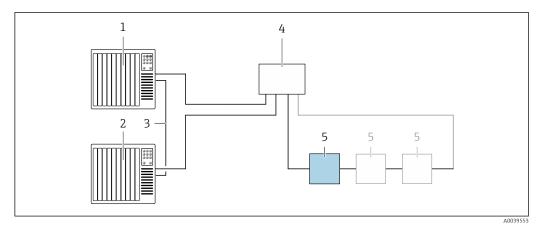

**■** 10 Connection example for system redundancy S2

- Control system 1 (e.g. PLC)
- Synchronization of control systems 2
- Control system 2 (e.g. PLC)
- Industrial Ethernet Managed Switch 4
- Transmitter


#### FOUNDATION Fieldbus

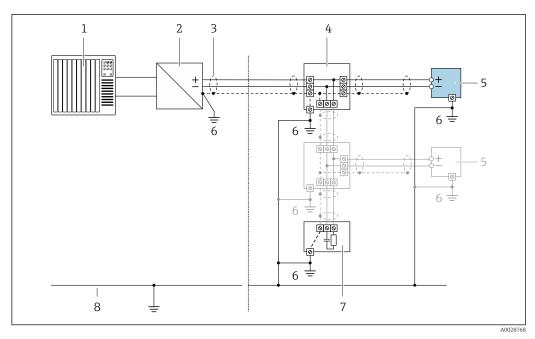

#### ■ 11 Connection example for FOUNDATION Fieldbus

- 1
- Control system (e.g. PLC) Power Conditioner (FOUNDATION Fieldbus) 2
- 3 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- T-box
- Measuring device
- Local grounding 6
- Bus terminator
- Potential matching line


#### Modbus RS485

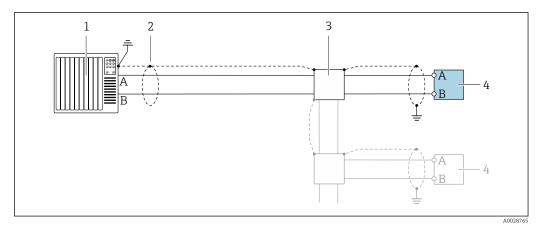

**■** 12 Connection example for Modbus RS485, non-hazardous area and Zone 2; Class I, Division 2


- Control system (e.g. PLC)
- 2 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Distribution box
- Transmitter

#### Current output 4-20 mA

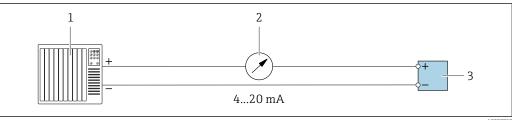

#### **■** 13 Connection example for 4-20 mA current output (active)


- Automation system with current input (e.g. PLC) 1
- 2 Analog display unit: observe maximum load  $\rightarrow = 15$
- 3 Transmitter

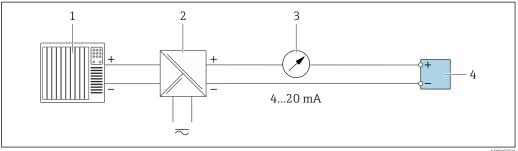

#### **№** 14 Connection example for 4-20 mA current output (passive)


- Automation system with current input (e.g. PLC)
- Active barrier for power supply (e.g. RN221N) 2
- 3
- Transmitter

# Pulse/frequency output

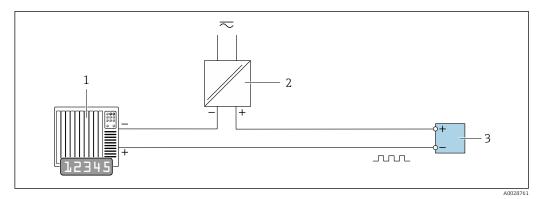

- 15 Connection example for pulse/frequency output (passive)
- Automation system with pulse/frequency input (e.g. PLC with 10 kΩ pull-up or pull-down resistor)
- 2 Power supply
- 3 Transmitter: observe input values  $\rightarrow \blacksquare 18$


#### Switch output

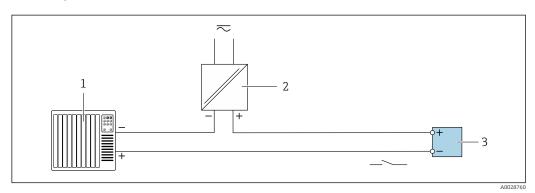

■ 16 Connection example for switch output (passive)


- Automation system with switch input (e.g. PLC with a 10 kΩ pull-up or pull-down resistor)
- 2 Power supply

#### Double pulse output

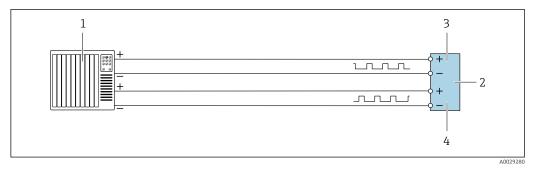

■ 17 Connection example for double pulse output (active)


- 1 Automation system with double pulse input (e.g. PLC)
- 2 Transmitter: observe input values → 🗎 20
- 3 Double pulse output
- 4 Double pulse output (slave), phase-shifted

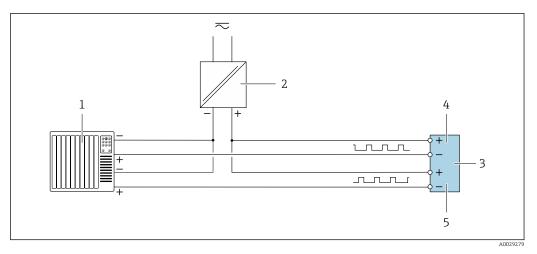

■ 18 Connection example for double pulse output (passive)

- 1 Automation system with double pulse input (e.g. PLC with a 10  $k\Omega$  pull-up or pull-down resistor)
- 2 Power supply
- 4 Double pulse output
- 5 Double pulse output (slave), phase-shifted


# Relay output

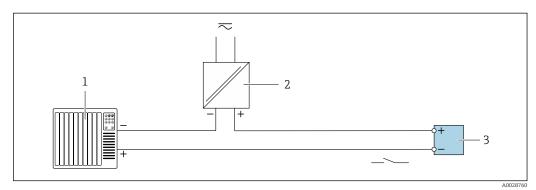

■ 19 Connection example for relay output (passive)

- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: observe input values  $\rightarrow \triangleq 20$


# Current input

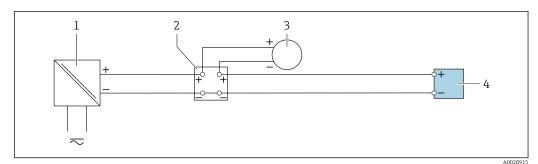

■ 20 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 Terminal box
- 3 External measuring device (to read in pressure or temperature, for instance)
- 4 Transmitter

#### Status input

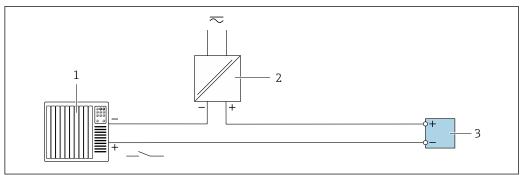

A002876

■ 21 Connection example for status input

- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter

#### Potential equalization

#### Requirements

For potential equalization:

- Pay attention to in-house grounding concepts
- Take account of operating conditions like the pipe material and grounding
- Connect the medium, sensor and transmitter to the same electrical potential
- Use a ground cable with a minimum cross-section of 6 mm<sup>2</sup> (0.0093 in<sup>2</sup>) and a cable lug for potential equalization connections



For devices intended for use in hazardous locations, please observe the guidelines in the  ${\sf Ex}$  documentation (XA).

### **Terminals**

Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to  $2.5~\mathrm{mm}^2$  (24 to  $12~\mathrm{AWG}$ ).

#### Cable entries

- Cable gland: M20  $\times$  1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
  - NPT ½"
  - G 1/2"
  - M20
- Device plug for digital communication: M12 Only available for certain device versions  $\rightarrow$  🖺 33.

# Pin assignment, device plug

# FOUNDATION Fieldbus

	Pin		Assignment	Coding	Plug/socket
2 / 3	1	+	Signal +	А	Plug
1 4	2	-	Signal –		
	3		Grounding		
	4		Not assigned		

#### PROFIBUS PA

	Pin		Assignment	Coding	Plug/socket
2 3	1	+	PROFIBUS PA +	A	Plug
1 4	2		Grounding		
	3	-	PROFIBUS PA -		
	4		Not assigned		

- Recommended plug:
  Binder, series 713, part no. 99 1430 814 04
  - Phoenix, part no. 1413934 SACC-FS-4QO SH PBPA SCO

# PROFINET

2	Pin		Assignment
	1	+	TD +
1 3	2	+	RD +
	3	-	TD -
	4	-	RD -
4 A0032047	Cod	ing	Plug/socket
	Ι	)	Socket

# Recommended plug:

- Binder, series 825, part no. 99 3729 810 04
- Phoenix, part no. 1543223 SACC-M12MSD-4Q

# PROFINET with Ethernet-APL

	Pin		Assignment	Coding	Plug/socket
3 4	1	-	APL signal -	А	Socket
2 - 1	2	+	APL signal +		
	3		Cable shield <sup>1</sup>		
	4		Not assigned		
	Metal plug housing		Cable shield		
	<sup>1</sup> If a cable shield is used				

- Recommended plug:
  Binder, series 713, part no. 99 1430 814 04
  - Phoenix, part no. 1413934 SACC-FS-4QO SH PBPA SCO


#### EtherNet/IP

2	Pin		Assignment
	1	+	Tx
1 3	2	+	Rx
	3	-	Tx
	4	-	Rx
4 A0032047	Cod	ling	Plug/socket
	I	)	Socket

- Recommended plug:
  Binder, series 763, part no. 99 3729 810 04
  - Phoenix, part no. 1543223 SACC-M12MSD-4Q

#### Service interface

Order code for "Accessories mounted", option NB: Adapter RJ45 M12 (service interface)

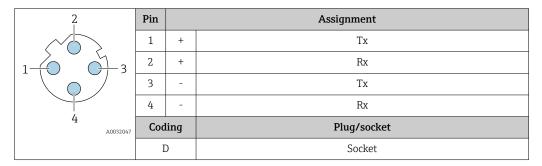



# Recommended plug:

- Binder, series 763, part no. 99 3729 810 04
- Phoenix, part no. 1543223 SACC-M12MSD-4Q

#### Cable specification

#### Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

#### Power supply cable (incl. conductor for the inner ground terminal)

Standard installation cable is sufficient.

#### Protective grounding cable for the outer ground terminal

Conductor cross-section < 2.1 mm<sup>2</sup> (14 AWG)

The use of a cable lug enables the connection of larger cross-sections.

The grounding impedance must be less than 2  $\Omega$ .

#### Signal cable

Current output 4 to 20 mA HART

A shielded cable is recommended. Observe grounding concept of the plant.

#### PROFIBUS PA

Twisted, shielded two-wire cable. Cable type A is recommended.



For further information on planning and installing PROFIBUS networks see:

- Operating Instructions "PROFIBUS DP/PA: Guidelines for planning and commissioning" (BA00034S)
- PNO Directive 2.092 "PROFIBUS PA User and Installation Guideline"
- IEC 61158-2 (MBP)

#### PROFIBUS DP

The IEC 61158 standard specifies two types of cable (A and B) for the bus line which can be used for every transmission rate. Cable type A is recommended.

Cable type	A		
Characteristic impedance	135 to 165 $\Omega$ at a measuring frequency of 3 to 20 MHz		
Cable capacitance	< 30 pF/m		
Wire cross-section	> 0.34 mm <sup>2</sup> (22 AWG)		
Cable type	Twisted pairs		
Loop resistance	≤110 Ω/km		

Signal damping	Max. 9 dB over the entire length of the cable cross-section		
Shield	Copper braided shielding or braided shielding with foil shield. When grounding the cable shield, observe the grounding concept of the plant.		



For further information on planning and installing PROFIBUS networks see:

- Operating Instructions "PROFIBUS DP/PA: Guidelines for planning and commissioning" (BA00034S)
- PNO Directive 2.092 "PROFIBUS PA User and Installation Guideline"
- IEC 61158-2 (MBP)

#### EtherNet/IP

The standard ANSI/TIA/EIA-568-B.2 Annex specifies CAT 5 as the minimum category for a cable used for EtherNet/IP. CAT 5e and CAT 6 are recommended.



For more information on planning and installing EtherNet/IP networks, please refer to the "Media Planning and Installation Manual. EtherNet/IP" of ODVA Organization

#### **PROFINET**

Standard IEC 61156-6 specifies CAT 5 as the minimum category for a cable used for PROFINET. CAT 5e and CAT 6 are recommended.



For more information on planning and installing PROFINET networks, see: "PROFINET Cabling and Interconnection Technology", Guideline for PROFINET

#### PROFINET with Ethernet-APL

The reference cable type for APL segments is fieldbus cable type A, MAU type 1 and 3 (specified in IEC 61158-2). This cable meets the requirements for intrinsically safe applications according to IEC TS 60079-47 and can also be used in non-intrinsically safe applications.

Cable type	A	
Cable capacitance	45 to 200 nF/km	
Loop resistance	15 to 150 Ω/km	
Cable inductance	0.4 to 1 mH/km	

Further details are provided in the Ethernet-APL Engineering Guideline (https://www.ethernet-apl.org).

#### FOUNDATION Fieldbus

Twisted, shielded two-wire cable.



For further information on planning and installing FOUNDATION Fieldbus networks see:

- Operating Instructions for "FOUNDATION Fieldbus Overview" (BA00013S)
- FOUNDATION Fieldbus Guideline
- IEC 61158-2 (MBP)

#### Modbus RS485

The EIA/TIA-485 standard specifies two types of cable (A and B) for the bus line which can be used for every transmission rate. Cable type A is recommended.

Cable type	A		
Characteristic impedance	135 to 165 $\Omega$ at a measuring frequency of 3 to 20 MHz		
Cable capacitance	< 30 pF/m		
Wire cross-section	> 0.34 mm <sup>2</sup> (22 AWG)		
Cable type	Twisted pairs		
Loop resistance	≤110 Ω/km		

Signal damping	Max. 9 dB over the entire length of the cable cross-section	
Shield	Copper braided shielding or braided shielding with foil shield. When grounding the cable shield, observe the grounding concept of the plant.	

### Current output 0/4 to 20 mA

- Standard installation cable is sufficient
- $\blacksquare$  For custody transfer measurement, use a shielded cable: tin-plated copper braid, optical cover  $\geq$  85 %

#### Pulse /frequency /switch output

- Standard installation cable is sufficient
- $\blacksquare$  For custody transfer measurement, use a shielded cable: tin-plated copper braid, optical cover  $\geq$  85 %

#### Double pulse output

- Standard installation cable is sufficient
- $\blacksquare$  For custody transfer measurement, use a shielded cable: tin-plated copper braid, optical cover  $\geq$  85 %

#### Relay output

Standard installation cable is sufficient.

#### Current input 0/4 to 20 mA

- Standard installation cable is sufficient
- $\bullet$  For custody transfer measurement, use a shielded cable: tin-plated copper braid, optical cover  $\geq$  85 %

#### Status input

- Standard installation cable is sufficient
- $\blacksquare$  For custody transfer measurement, use a shielded cable: tin-plated copper braid, optical cover  $\geq$  85 %

# Connecting cable for transmitter - remote display and operating module DKX001

#### Standard cable

A standard cable can be used as the connecting cable.

Standard cable	4 cores (2 pairs); pair-stranded with common shield		
Shielding	in-plated copper-braid, optical cover ≥ 85 %		
Capacitance: core/shield	Maximum 1000 nF for Zone 1; Class I, Division 1		
L/R	Maximum 24 μH/Ω for Zone 1; Class I, Division 1		
Cable length	Maximum 300 m (1000 ft), see the following table		

Cross-section	Cable length for use in:  Non-hazardous area  Hazardous area: Zone 2; Class I, Division 2  Hazardous area: Zone 1; Class I, Division 1
0.34 mm <sup>2</sup> (22 AWG)	80 m (270 ft)
0.50 mm <sup>2</sup> (20 AWG)	120 m (400 ft)
0.75 mm <sup>2</sup> (18 AWG)	180 m (600 ft)
1.00 mm <sup>2</sup> (17 AWG)	240 m (800 ft)
1.50 mm <sup>2</sup> (15 AWG)	300 m (1000 ft)

#### Optionally available connecting cable

Standard cable	$2 \times 2 \times 0.34 \text{ mm}^2$ (22 AWG) PVC cable $^{1)}$ with common shield (2 pairs, pairstranded)	
Flame resistance	According to DIN EN 60332-1-2	
Oil-resistance	According to DIN EN 60811-2-1	
Shielding	Tin-plated copper-braid, optical cover ≥ 85 %	
Capacitance: core/shield	≤200 pF/m	
L/R	≤24 μH/Ω	
Available cable length	10 m (35 ft)	
Operating temperature	When mounted in a fixed position: $-50$ to $+105$ °C ( $-58$ to $+221$ °F); when cable can move freely: $-25$ to $+105$ °C ( $-13$ to $+221$ °F)	

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

#### Overvoltage protection

Mains voltage fluctuations	→ 🖺 34
Overvoltage category	Overvoltage category II
Short-term, temporary overvoltage	Up to 1200 V between cable and ground, for max. 5 s
Long-term, temporary overvoltage	Up to 500 V between cable and ground

# **Performance characteristics**

# Reference operating conditions

- Error limits based on ISO 11631
- Water with +15 to +45 °C (+59 to +113 °F) at 2 to 6 bar (29 to 87 psi)
- Specifications as per calibration protocol
- Accuracy based on accredited calibration rigs that are traced to ISO 17025.



#### Maximum measured error

o.r. = of reading;  $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature

# Base accuracy



Design fundamentals  $\rightarrow \implies 53$ 

Mass flow and volume flow (liquids)

- ±0.05 % o.r. (optional for mass flow: PremiumCal; order code for "Calibration flow", option D)
- ±0.10 % o.r. (standard)

Mass flow (gases)

±0.35 % o.r.

Density (liquids)

Under reference conditions	Standard density calibration 1)	Wide-range Density specification <sup>2) 3)</sup>
[g/cm³]	[g/cm³]	[g/cm³]
±0.0005	±0.01	±0.001

- 1) Valid over the entire temperature and density range
- 2) Valid range for special density calibration: 0 to 2 g/cm $^3$ , +5 to +80  $^{\circ}$ C (+41 to +176  $^{\circ}$ F)
- 3) order code for "Application package", option EE "Special density"

# Temperature

 $\pm 0.5 \,^{\circ}\text{C} \pm 0.005 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.9 \,^{\circ}\text{F} \pm 0.003 \cdot (\text{T} - 32) \,^{\circ}\text{F})$ 

# Zero point stability

DN		Zero poin	t stability
[mm]	[in]	[kg/h]	[lb/min]
300	12	137	5.03
350	14	137	5.03
400	16	137	5.03

#### Flow values

Flow values as turndown parameters depending on the nominal diameter.

#### SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
300	4100000	410 000	205 000	82 000	41000	8200
350	4100000	410 000	205 000	82 000	41000	8200
400	4100000	410 000	205 000	82 000	41000	8200

#### US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
12	150700	15 070	7535	3014	1507	301.4
14	150700	15 070	7535	3014	1507	301.4
16	150700	15 070	7535	3014	1507	301.4

# Accuracy of outputs

The outputs have the following base accuracy specifications.

Current output

Accuracy	±5 μA

Pulse/frequency output

o.r. = of reading

Accuracy Max. ±50	ppm o.r. (over the entire ambient temperature range)
-------------------	--

# Repeatability

o.r. = of reading;  $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature

# Base repeatability

Design fundamentals → 🗎 53

Mass flow and volume flow (liquids)

±0.025 % o.r. (PremiumCal)

±0.05 % o.r.

Mass flow (gases)

±0.25 % o.r.

Density (liquids)

 $\pm 0.00025 \text{ g/cm}^3$ 

**Temperature** 

 $\pm 0.25 \,^{\circ}\text{C} \pm 0.0025 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.45 \,^{\circ}\text{F} \pm 0.0015 \cdot (\text{T}-32) \,^{\circ}\text{F})$ 

#### Response time

The response time depends on the configuration (damping).

#### Influence of ambient temperature

#### **Current output**

Temperature coefficient	Max. 1 μA/°C

#### Pulse/frequency output

Temperature coefficient	No additional effect. Included in accuracy.
-------------------------	---

#### Influence of medium temperature

#### Mass flow and volume flow

o.f.s. = of full scale value

If there is a difference between the temperature during zero adjustment and the process temperature, the additional measured error of the sensors is typically  $\pm 0.0002$  %o.f.s./°C ( $\pm 0.0001$  % o.f.s./°F).


The influence is reduced when the zero adjustment is performed at process temperature.

#### Density

If there is a difference between the density calibration temperature and the process temperature, the measured error of the sensors is typically  $\pm 0.00005$  g/cm<sup>3</sup>/°C ( $\pm 0.000025$  g/cm<sup>3</sup>/°F). Field density adjustment is possible.

# Wide-range density specification (special density calibration)

If the process temperature is outside the valid range ( $\rightarrow \implies 50$ ) the measured error is  $\pm 0.00005 \text{ g/cm}^3 \text{ /°C } (\pm 0.000025 \text{ g/cm}^3 \text{ /°F})$ 

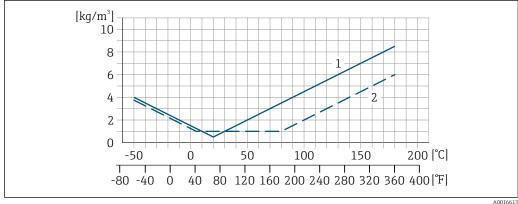

- Field density adjustment, for example at +20 °C (+68 °F)
- Special density calibration

#### Temperature

 $\pm 0.005 \cdot \text{T} \, ^{\circ}\text{C} \, (\pm 0.005 \cdot (\text{T} - 32) \, ^{\circ}\text{F})$ 

### Influence of medium pressure

The tables below show the effect that a difference in pressure between the calibration pressure and the process pressure has on the accuracy in the case of the mass flow and density.

o.r. = of reading



- It is possible to compensate for the effect by:
  - Reading in the current pressure measured value via the current input or a digital input.
  - Specifying a fixed value for the pressure in the device parameters.

Operating Instructions  $\rightarrow \blacksquare 96$ .

DN		[% o.r./bar]	[% o.r./psi]
[mm]	[in]		
300	12	-0.009	-0.0006
350	14	-0.009	-0.0006
400	16	-0.009	-0.0006

#### Design fundamentals

o.r. = of reading, o.f.s. = of full scale value

BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.

MeasValue = measured value; ZeroPoint = zero point stability


Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$	± BaseAccu
A0021332	
$< \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$	$\pm \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$
A0021333	A0021334

Calculation of the maximum repeatability as a function of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$	± BaseRepeat
A0021335	10021710
$<\frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$	± ½ · ZeroPoint MeasValue · 100
A0021336	A0021337

#### Example of maximum measured error

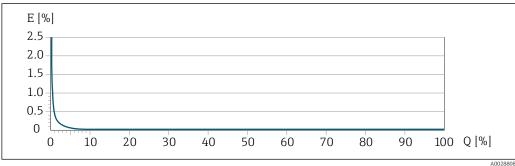


Maximum measured error in % o.r. (example with PremiumCal)

Flow rate in % of maximum full scale value

# Installation

#### Mounting location

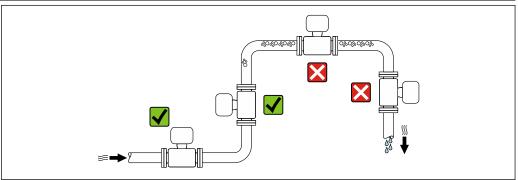


A0028772

To prevent measuring errors arising from accumulation of gas bubbles in the measuring pipe, avoid the following mounting locations in the piping:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

# Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

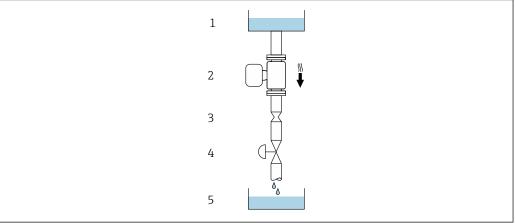

A0028773

■ 22 Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Batching tank

D	N	Ø orifice plate, pipe restriction			
[mm]	[in]	[mm]	[in]		
300	12	210	8.27		
350	14	210	8.27		
400	16	210	8.27		


#### Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

	Orientatio	n	Recommendation
A	Vertical orientation	A0015591	<b>✓ ✓</b> 1)
В	Horizontal orientation, transmitter at top	A0015589	✓ ✓ <sup>2)</sup> → <b>2</b> 23, <b>2</b> 55
С	Horizontal orientation, transmitter at bottom	A0015590	<b>√ √</b> <sup>3)</sup> → <b>②</b> 23, <b>△</b> 55
D	Horizontal orientation, transmitter at side	A0015592	<b>√</b> → <b>2</b> 3, <b>3</b> 55

- 1) This orientation is recommended to ensure self-draining.
- Applications with low process temperatures may reduce the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 3) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

If a sensor is installed horizontally with a curved measuring tube, match the position of the sensor to the fluid properties.

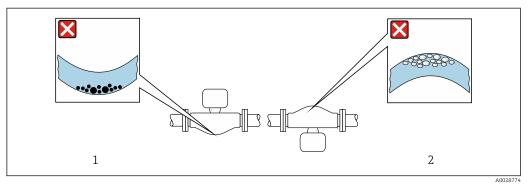

■ 23 Orientation of sensor with curved measuring tube

- 1 Avoid this orientation for fluids with entrained solids: Risk of solids accumulating.
- 2 Avoid this orientation for outgassing fluids: Risk of gas accumulating.

#### Inlet and outlet runs

# Special mounting instructions

#### Drainability

When installed vertically, the measuring tubes can be drained completely and protected against buildup.

#### Hygienic compatibility



- When installing in hygienic applications, please refer to the information in the "Certificates and approvals/hygienic compatibility" section
- In the case of measuring devices with the order code for "Housing", option B "Stainless, hygienic", to seal the connection compartment cover, screw it closed finger-tight and tighten it by another 45° (corresponds to 15 Nm).

### Rupture disk

Process-related information:  $\rightarrow \triangleq 60$ .

# **A** WARNING

# Danger from medium escaping!

Medium escaping under pressure can cause injury or material damage.


- ▶ Take precautions to prevent danger to persons and damage if the rupture disk is actuated.
- ▶ Observe the information on the rupture disk sticker.
- ► Make sure that the function and operation of the rupture disk is not impeded through the installation of the device.
- ▶ Do not use a heating jacket.
- ▶ Do not remove or damage the rupture disk.

The position of the rupture disk is indicated by a sticker affixed beside it.

The transportation guard must be removed.

The existing connecting nozzles are not intended for the purpose of rinsing or pressure monitoring, but instead serve as the mounting location for the rupture disk.

In the event of a failure of the rupture disk, a drain device can be screwed onto the female thread of the rupture disk in order to drain off any escaping medium.

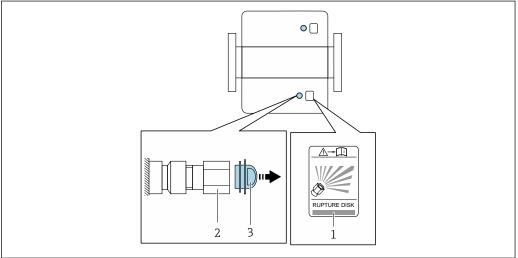


A00299

- 1 Rupture disk label
- 2 Rupture disk with 1/2" NPT female thread and 1" width across flats
- 3 Transport protection

For information on the dimensions, see the "Mechanical construction" section (accessories).

#### Weather protection cover

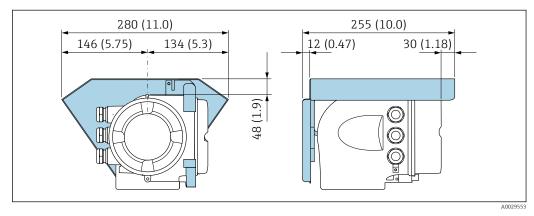

■ 24 Engineering unit mm (in)

# **Environment**

Ambient temperature range	Measuring device	■ -40 to +60 °C (-40 to +140 °F)					
comperature range	Measuring device	<ul> <li>-40 to +60 C (-40 to +140 F)</li> <li>Order code for "Test, certificate", option JP:</li> <li>-50 to +60 °C (-58 to +140 °F)</li> </ul>					
	Readability of the local display	-20 to +60 °C (-4 to +140 °F) The readability of the display may be impaired at temperatures outside the temperature range.					
	Dependency of am	bient temperature on medium temperature $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $					
	<ul><li>If operating outdoor Avoid direct sunligh</li></ul>	s: t, particularly in warm climatic regions.					
	You can order a weather protection cover from Endress+Hauser. $\rightarrow \triangleq 93$ .						
Storage temperature	−50 to +80 °C (−58 to +	176 °F)					
Climate class	DIN EN 60068-2-38 (te	est Z/AD)					
Relative humidity	The device is suitable for use in outdoor and indoor areas with a relative humidity of 4 to 95%.						
Operating height	According to EN 61010-1 $\leq$ 2 000 m (6 562 ft) $\leq$ 2 000 m (6 562 ft) with additional overvoltage protection (e.g. Endress+Hauser HAW Series)						
Degree of protection	Transmitter						
	<ul> <li>IP66/67, Type 4X enclosure, suitable for pollution degree 4</li> <li>When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2</li> <li>Display module: IP20, Type 1 enclosure, suitable for pollution degree 2</li> </ul>						
	Optional						
	Order code for "Sensor options", option CM "IP69						
	External WLAN antenna						
	IP67						
Vibration- and shock-	Vibration sinusoidal, i	n accordance with IEC 60068-2-6					
resistance	<ul><li>2 to 8.4 Hz, 3.5 mm p</li><li>8.4 to 2000 Hz, 1 g p</li></ul>						
	Vibration broad-band	random, according to IEC 60068-2-64					
	<ul> <li>10 to 200 Hz, 0.003 g²/Hz</li> <li>200 to 2000 Hz, 0.001 g²/Hz</li> <li>Total: 1.54 g rms</li> </ul>						
	Shock half-sine, according to IEC 60068-2-27						
	6 ms 30 g						
	Rough handling shock	s, according to IEC 60068-2-31					
Mechanical load	Transmitter housing:  Protect against mecha Do not use as a ladder	anical effects, such as shock or impact					

# Electromagnetic compatibility (EMC)


- As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)
- Device version with PROFIBUS DP: Complies with emission limits for industry as per EN 50170
   Volume 2, IEC 61784
- The following applies for PROFIBUS DP: If baud rates > 1.5 MBaud, an EMC cable entry must be used and the cable shield must continue as far as the terminal wherever possible.
- Details are provided in the Declaration of Conformity.
- This unit is not intended for use in residential environments and cannot guarantee adequate protection of the radio reception in such environments.

# **Process**

#### Medium temperature range

 $-50 \text{ to } +180 ^{\circ}\text{C} (-58 \text{ to } +356 ^{\circ}\text{F})$ 

#### Dependency of ambient temperature on medium temperature

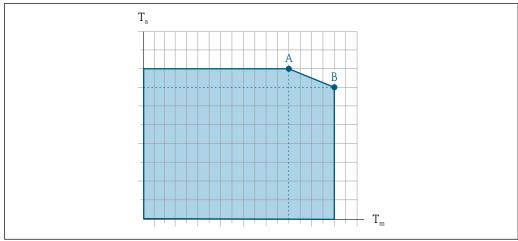

A00311

- $\blacksquare$  25 Exemplary representation, values in the table below.
- $T_a$  Ambient temperature
- $T_m$  Medium temperature
- A Maximum permitted medium temperature  $T_m$  at  $T_{a max}$  = 60 °C (140 °F); higher medium temperatures  $T_m$  require a reduction in the ambient temperature  $T_a$
- B Maximum permitted ambient temperature  $T_a$  for the maximum specified medium temperature  $T_m$  of the sensor
- Values for devices that are used in the hazardous area: Separate Ex documentation (XA) for the device  $\rightarrow \triangleq 97$ .

Not insulated				Insulated				
Α	A B			A		В		
T <sub>a</sub>	T <sub>m</sub>	Ta	$T_{m}$	Ta	$T_{m}$	Ta	$T_{m}$	
60 °C (140 °F)	170 °C (338 °F)	55 ℃ (131 °F)	180 ℃ (356 °F)	60 °C (140 °F)	110 ℃ (230 ℉)	50 °C (122 °F)	180 °C (356 °F)	


#### Density

0 to  $5000 \text{ kg/m}^3$  (0 to 312 lb/cf)

# Pressure-temperature ratings


The following pressure/temperature diagrams apply to all pressure-bearing parts of the device and not just the process connection. The diagrams show the maximum permissible medium pressure depending on the specific medium temperature.

#### Flange connection according to EN 1092-1 (DIN 2501)

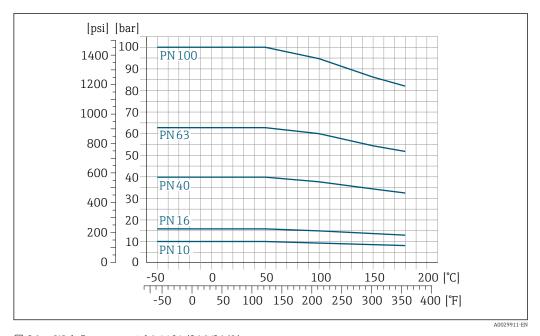

■ 26 With flange material 1.4404 (316/316L)

# Flange connection according to ASME B16.5

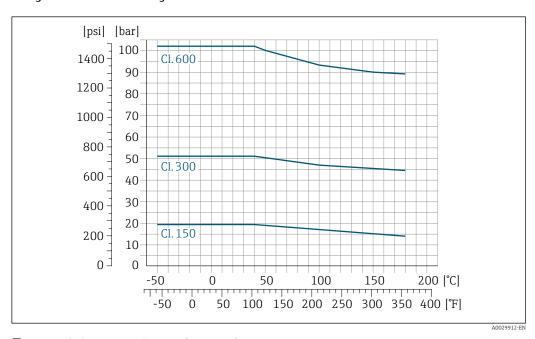

■ 27 With flange material 1.4404 (316/316L)

#### Sensor housing

The sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.

If a measuring tube fails (e.g. due to process characteristics like corrosive or abrasive fluids), the fluid will initially be contained by the sensor housing.

In the event of a tube failure, the pressure level inside the sensor housing will rise according to the operating process pressure. If the user judges that the sensor housing burst pressure does not provide an adequate safety margin, the device can be fitted with a rupture disk. This prevents excessively high pressure from forming inside the sensor housing. Therefore, the use of a rupture disk is strongly recommended in applications involving high gas pressures, and particularly in applications in which the process pressure is greater than 2/3 of the sensor housing burst pressure.

If there is a need to drain the leaking medium into a discharge device, the sensor should be fitted with a rupture disk. Connect the discharge to the additional threaded connection  $\rightarrow \triangleq 66$ .

If the sensor is to be purged with gas (gas detection), it should be equipped with purge connections.

Do not open the purge connections unless the containment can be filled immediately with a dry, inert gas. Use only low pressure to purge.

Maximum pressure: 2 bar (29.0 psi)

#### Burst pressure of the sensor housing

The following sensor housing burst pressures are only valid for standard devices and/or devices equipped with closed purge connections (not opened/as delivered).

If a device fitted with purge connections (order code for "Sensor option", option CH "Purge connection") is connected to the purge system, the maximum pressure is determined by the purge system itself or by the device, depending on which component has the lower pressure classification.

If the device is fitted with a rupture disk (order code for "Sensor option", option CA "Rupture disk"), the rupture disk trigger pressure is decisive.

The sensor housing burst pressure refers to a typical internal pressure which is reached prior to mechanical failure of the sensor housing and which was determined during type testing. The corresponding type test declaration can be ordered with the device (order code for "Additional approval", option LN "Sensor housing burst pressure, type test").

D	N	Sensor housing burst pressure		
[mm]	[in]	[bar]	[psi]	
300	12	28	406	
350	14	28	406	
400	16	28	406	

For information on the dimensions: see the "Mechanical construction" section  $\rightarrow \triangleq 63$ 


#### Rupture disk

To increase the level of safety, a device version with a rupture disk with a trigger pressure of 5.5 to 6.5 bar (80 to 94 psi) can be used (order code for "Sensor option", option CA "rupture disk").


For information on the dimensions: see the "Mechanical construction" section (accessories)  $\rightarrow \triangleq 66$ 

#### Flow limit

Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.

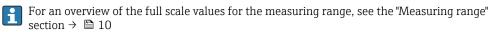

- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- In most applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).
- For gas measurement the following rules apply:
  - The flow velocity in the measuring tubes should not exceed half the sound velocity (0.5 Mach).
  - The maximum mass flow depends on the density of the gas: formula

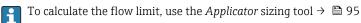

#### Pressure loss


To calculate the pressure loss, use the *Applicator* sizing tool  $\rightarrow \triangleq 95$ 

#### System pressure

It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas. This is prevented by means of a sufficiently high system pressure.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

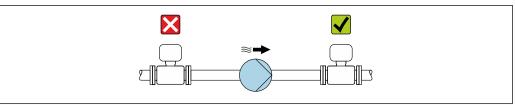

Λ002877

#### Thermal insulation

In the case of some fluids, it is important to keep the heat radiated from the sensor to the transmitter to a low level. A wide range of materials can be used for the required insulation.


The following device versions are recommended for versions with thermal insulation: Version with extended neck:

Order code for "Measuring tube material", option SA with an extended neck length of  $105\ mm$  (4.13 in).

#### NOTICE

#### Electronics overheating on account of thermal insulation!

- ▶ Recommended orientation: horizontal orientation, transmitter housing pointing downwards.
- ▶ Do not insulate the transmitter housing .
- ► Maximum permissible temperature at the lower end of the transmitter housing: 80 °C (176 °F)
- ► Thermal insulation with not isolated extended neck: We recommend that you do not insulate the extended neck in order to ensure optimum dissipation of heat.

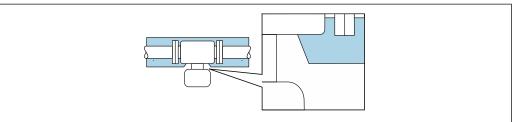

A003439

■ 28 Thermal insulation with not isolated extended neck

#### Heating

Some fluids require suitable measures to avoid loss of heat at the sensor.

### Heating options

- Electrical heating, e.g. with electric band heaters 1)
- Via pipes carrying hot water or steam
- Via heating jackets



Under critical climatic conditions, in particular, it is important to ensure that the temperature difference between the ambient temperature and the fluid temperature is not >100 K. Suitable measures must be taken, such as heating or insulation.

#### NOTICE

# Danger of overheating when heating

- ▶ Ensure that the temperature at the lower end of the transmitter housing does not exceed 80  $^{\circ}$ C (176  $^{\circ}$ F).
- ▶ Ensure that sufficient convection takes place at the transmitter neck.
- ► Ensure that a sufficiently large area of the transmitter neck remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.
- ▶ When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation. For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

#### Vibrations

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

# **Custody transfer**

The measuring device is optionally tested in accordance with OIML R117 and has an EU type evaluation certificate which authorizes the use in EU type-examination certificates according to Measuring Instruments Directive 2014/32/EU for service subject to legal metrological control ("custody transfer") for liquids other than water(Annex VII).

The measuring device is optionally tested according to OIML R137 and has an EU type-examination certificate according to Measuring Instruments Directive 2014/32/EU for service subject to legal metrological control ("custody transfer") as a gas meter (Annex IV).

The device is used with a legally controlled totalizer on the local display and optionally with legally controlled outputs.

Measuring devices subject to legal metrological control totalize in both directions, i.e. all the outputs consider flow components in the positive (forward) and negative (reverse) flow direction.

Generally a measuring device subject to legal metrological control is secured against tampering by seals on the transmitter or sensor. These seals may normally only be opened by a representative of the competent authority for legal metrology controls.

After putting the device into circulation or after sealing the device, operation is only possible to a limited extent.

Detailed ordering information is available from your local Endress+Hauser sales center for national approvals, which are based on the OIML certificates, for applications with liquids other than water or gases.




More information is provided in the supplementary documentation.

# Mechanical construction

#### Dimensions in SI units

# **Compact version**

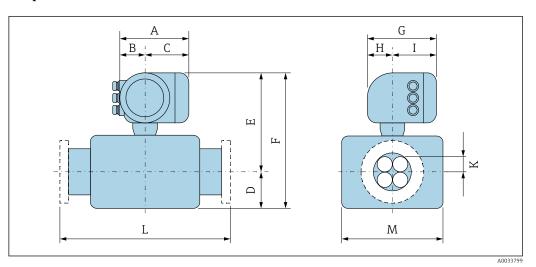

Order code for "Housing", option A "Aluminum, coated"

DN	A 1)	B 1)	С	D	Е	F	G <sup>2)</sup>	Н	I 2)	K	L	М
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]							
300	169	68	101	140	499	639	200	59	141	102.3	3)	1227
350	169	68	101	140	499	639	200	59	141	102.3	3)	1227
400	169	68	101	140	499	639	200	59	141	102.3	3)	1227

- 1) Depending on the cable gland used: values up to + 30 mm
- 2) For version without local display: values 30 mm
- 3) Depending on the process connection

Order code for "Housing", option A "Aluminum, coated"; Ex d

DN	A 1)	В	С	D	Е	F	G <sup>2)</sup>	Н	I 2)	K	L	M
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]							
300	188	85	103	140	499	639	217	58	159	102.3	3)	1227
350	188	85	103	140	499	639	217	58	159	102.3	3)	1227
400	188	85	103	140	499	639	217	58	159	102.3	3)	1227


- 1) Depending on the cable gland used: values up to  $\pm$  30 mm
- 2) For version without local display: values 40 mm
- 3) Depending on the process connection

Order code for "Housing", option L "Cast, stainless"

DN	A 1)	В	С	D	Е	F	G	Н	I	K	L	M
[mm]	[mm]	[mm]										
300	186	85	101	140	499	639	217	60	157	102.3	2)	1227
350	186	85	101	140	499	639	217	60	157	102.3	2)	1227
400	186	85	101	140	499	639	217	60	157	102.3	2)	1227

- 1) Depending on the cable gland used: values up to + 30 mm
- 2) Depending on the process connection

#### Fixed flange connections EN 1092-1, ASME B16.5

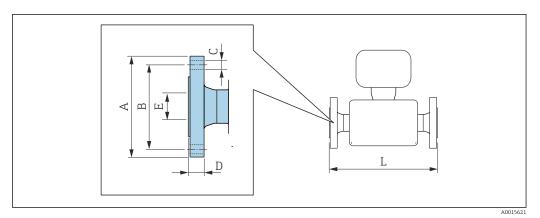

■ 29 Engineering unit mm (in)

Length tolerance for dimension L in mm:

Flange in accordance with EN 1092-1 (DIN 2501 / DIN 2512N): PN 10  $\,$ 1.4404 (F316/F316L) Order code for "Process connection", option  ${\bf DAS}$ С D Ε [mm] [mm] [mm] [mm] [mm] [mm] [mm] 300 445 400  $12\times \varnothing 22$ 26 309.7 1707 350 505 460 16 × Ø22 26 341.4 1707 400 565 515  $16 \times \emptyset 26$ 392.2 1716 26 Surface roughness (flange): EN 1092-1 Form B1 (DIN 2526 Form C), Ra 3.2 to 12.5  $\mu m$ 

Flange in accordance with EN 1092-1 (DIN 2501 / DIN 2512N): PN 16 1.4404 (F316/F316L) Order code for "Process connection", option D1S										
DN         A         B         C         D         E         L           [mm]         [mm]         [mm]         [mm]         [mm]										
300	460	410	12 × Ø26	28	309.7	1727				
350	520	470	16 × Ø26	30	339.6	1734				
400	400 580 525 12 × Ø30 32 390.4 1741									
Surface roughr	ness (flange): EN	V 1092-1 Form	B1 (DIN 2526 Form	C), Ra 3.2 to 12	2.5 µm					

Flange in accordance with EN 1092-1 (DIN 2501 / DIN 2512N): PN40 1.4404 (F316/F316L) Order code for "Process connection", option D2S										
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]				
300	515	450	16 × Ø33	42	307.9	1800				
350	580	510	16 × Ø36	46	338.0	1818				
400	660	585	16 × Ø39	50	384.4	1836				
Surface roughr	ness (flange): EN	l 1092-1 Form	B1 (DIN 2526 Form	C), Ra 3.2 to 12	2.5 µm					

### Flange in accordance with EN 1092-1 (DIN 2501 / DIN 2512N): PN63 1.4404 (F316/F316L)

Order code for "Process connection", option D3S

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
300	530	460	16 × Ø36	52	301.9	1844
350	600	525	16 × Ø39	56	330.6	1863
400	670	585	16 × Ø42	60	378.0	1880

Surface roughness (flange): EN 1092-1 Form B1 (DIN 2526 Form C), Ra 3.2 to 12.5  $\mu m$ 

#### Flange in accordance with EN 1092-1 (DIN 2501 / DIN 2512N): PN100 1.4404 (F316/F316L)

Order code for "Process connection", option D4S)

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
300	585	500	16 × Ø42	68	295.5	1901
350	655	560	16 × Ø48	74	323.6	1936
400	715	620	16 × Ø48	82.2	364.9	1936

Surface roughness (flange): EN 1092-1 Form B1 (DIN 2526 Form C), Ra 3.2 to 12.5  $\mu m$ 

# Flange in accordance with ASME B16.5: Cl 150

1.4404 (F316/F316L)

Order code for "Process connection", option AAS

		,				
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
300	482.6	431.8	12 × Ø25.4	32.2	304.8	1794
350	533.4	476.3	16 × Ø28.4	35.5	336.5	1820
400	596.9	539.8	16 × Ø28.4	37.0	387.3	1820
	[mm] 300 350	[mm] [mm] 300 482.6 350 533.4	DN [mm]         A [mm]         B [mm]           300         482.6         431.8           350         533.4         476.3	DN [mm]         A [mm]         B [mm]         C [mm]           300         482.6         431.8         12 × Ø25.4           350         533.4         476.3         16 × Ø28.4	DN [mm]         A [mm]         B [mm]         C [mm]         D [mm]           300         482.6         431.8         12 × Ø25.4         32.2           350         533.4         476.3         16 × Ø28.4         35.5	DN [mm]         A [mm]         B [mm]         C [mm]         D [mm]         E [mm]           300         482.6         431.8         12 × Ø25.4         32.2         304.8           350         533.4         476.3         16 × Ø28.4         35.5         336.5

Surface roughness (flange): Ra 3.2 to  $6.3~\mu m$ 

#### Flange in accordance with ASME B16.5: Cl 300 1.4404 (F316/F316L)

Order code for "Process connection", option ABS

oraci coac joi	1 TOCCOD COTTIC	ction, option 1	120			
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
300	520.7	450.9	16 × Ø31.8	51.3	304.8	1826
350	584.2	514.4	16 × Ø31.8	54.4	336.5	1852
400	647.7	571.5	16 × Ø35.1	57.6	387.3	1858

Surface roughness (flange): Ra 3.2 to  $6.3~\mu m$ 


#### Flange in accordance with ASME B16.5: Cl 600 1.4404 (F316/F316L)

Order code for	r "Process conne	ection", option <b>A</b>	CS			
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
300	558.8	489.0	20 × Ø35.1	73.7	288.8	1875
350	603.3	527.1	20 × Ø38.1	77.0	317.5	1891

1.4404 (F316	Flange in accordance with ASME B16.5: Cl 600 1.4404 (F316/F316L) Order code for "Process connection", option ACS										
DN [mm]											
400	685.8	603.3	20 × Ø41.1	83.2	363.3	1912					
Surface rough	ness (flange): I	Ra 3.2 to 6.3 ur	n								

#### Accessories

# Rupture disk/purge connections

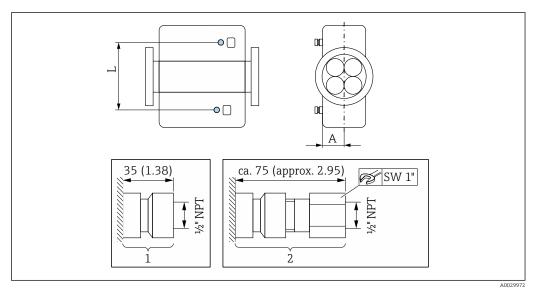


**■** 30

- Connection nipple for purge connections: order code for "Sensor options", option CH "Purge connection"
- 2 Connection nipple with rupture disk: order code for "Sensor option", option CA "Rupture disk"


DN	A	L
[mm]	[mm]	[mm]
300	182	547
350	182	547
400	182	547

# $Weather\ protection\ cover$

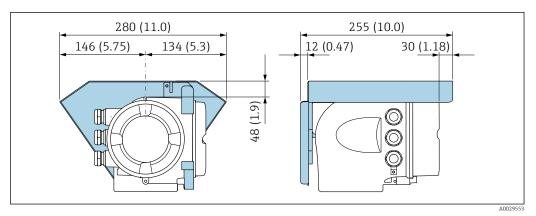

■ 31 Engineering unit mm (in)

#### Remote display and operating module DKX001

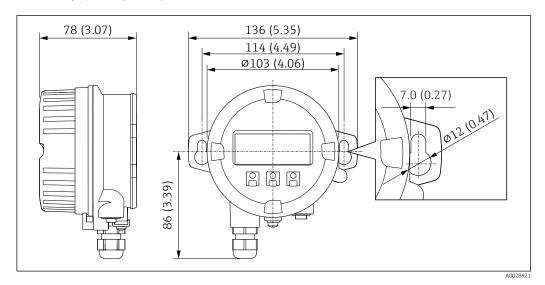


**■** 32 Engineering unit mm (in)

# External WLAN antenna

The external WLAN antenna is not suitable for use in hygienic applications.


#### External WLAN antenna mounted on device

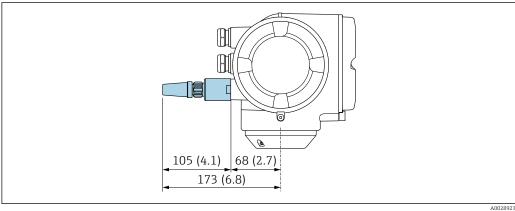

■ 33 Engineering unit mm (in)

### External WLAN antenna mounted with cable


The external WLAN antenna can be mounted separately from the transmitter if the transmission/ reception conditions at the transmitter mounting location are poor.

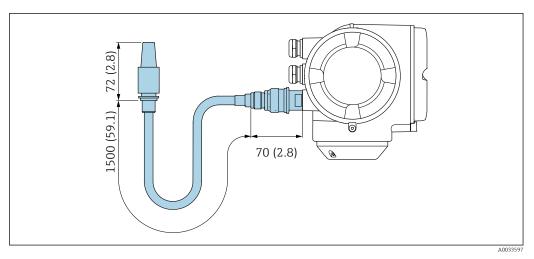

€ 34 Engineering unit mm (in)

# **Dimensions in US units**

# **Compact version**

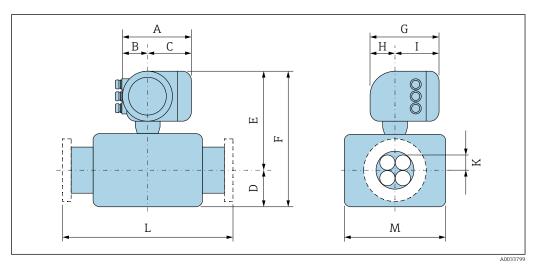

Order code for "Housing", option A "Aluminum, coated"

DN	A 1)	B 1)	С	D	Е	F	G <sup>2)</sup>	Н	I 2)	K	L	M
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
12	6.65	2.68	3.98	5.51	19.65	25.16	7.87	2.32	5.55	4.03	3)	48.31
14	6.65	2.68	3.98	5.51	19.65	25.16	7.87	2.32	5.55	4.03	3)	48.31
16	6.65	2.68	3.98	5.51	19.65	25.16	7.87	2.32	5.55	4.03	3)	48.31

- Depending on the cable gland used: values up to + 1.18 in For version without local display: values 1.18 in 1)
- 2)
- 3) Depending on the process connection

68

Order code for "Housing", option A "Aluminum, coated"; Ex d

]	DN	A 1)	B 1)	С	D	E	F	G <sup>2)</sup>	Н	I 2)	K	L	M
[	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
	12	7.40	3.35	4.06	5.51	19.65	25.16	8.54	2.28	6.26	4.03	3)	48.31
	14	7.40	3.35	4.06	5.51	19.65	25.16	8.54	2.28	6.26	4.03	3)	48.31
	16	7.40	3.35	4.06	5.51	19.65	25.16	8.54	2.28	6.26	4.03	3)	48.31


- Depending on the cable gland used: values up to  $\pm$  1.18 in 1)
- 2) 3) For version without local display: values - 1.57 in
- Depending on the process connection

# Order code for "Housing", option L "Cast, stainless"

DN	A 1)	B 1)	С	D	Е	F	G	Н	I	К	L	М
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
12	7.32	3.35	3.98	5.51	19.65	25.16	8.54	2.36	6.18	4.03	2)	48.31
14	7.32	3.35	3.98	5.51	19.65	25.16	8.54	2.36	6.18	4.03	2)	48.31
16	7.32	3.35	3.98	5.51	19.65	25.16	8.54	2.36	6.18	4.03	2)	48.31

- Depending on the cable gland used: values up to  $\pm$  1.18 in 1)
- 2) Depending on the process connection

# Fixed flange connections ASME B16.5

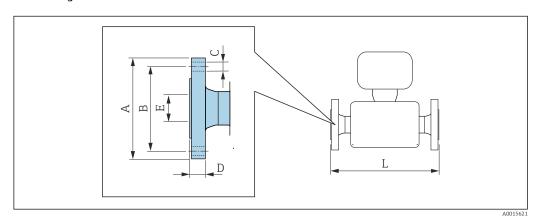

Engineering unit mm (in)

#### Length tolerance for dimension L in inch: ±0.16


1.4404 (F	Flange in accordance with ASME B16.5: Cl 150 1.4404 (F316/F316L) Order code for "Process connection", option AAS										
DN [in]											
12	19.00	17.00	12 × Ø1.00	1.27	12.00	70.63					
14	21.00	18.75	16 × Ø1.12	1.40	13.25	71.65					
16 23.50 21.25 16 × Ø1.12 1.46 15.25 71.65											
Surface rou	ughness (flange	): Ra 125 to 250	) µin								

1.4404 (F	Flange in accordance with ASME B16.5: CI 300 1.4404 (F316/F316L) Order code for "Process connection", option ABS										
DN [in]											
12	20.50	17.75	16 × Ø1.25	2.02	12.00	71.89					
14	14 23.00 20.25 16 × Ø1.25 2.14 13.25 72.91										
16 25.50 22.50 16 × Ø1.38 2.27 15.25 73.15											
Surface rou	ughness (flange)	): Ra 125 to 250	) µin								

1.4404 (F	Flange in accordance with ASME B16.5: Cl 600 1.4404 (F316/F316L) Order code for "Process connection", option ACS										
DN [in]											
12	22.00	19.25	20 × Ø1.38	2.90	11.37	73.82					
14	14 23.75 20.75 20 × Ø1.50 3.03 12.50 74.45										
16 27.00 23.75 20 × Ø1.62 3.28 14.30 75.28											
Surface rou	ughness (flange	): Ra 125 to 250	) µin								

#### Accessories

Rupture disk/purge connections

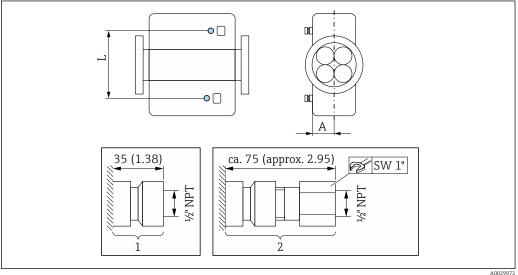


₹ 36

- Connection nipple for purge connections: order code for "Sensor options", option CH "Purge connection" Connection nipple with rupture disk: order code for "Sensor option", option CA "Rupture disk"


DN	A	L
[in]	[in]	[in]
12	7.17	21.54
14	7.17	21.54
16	7.17	21.54

# Weather protection cover

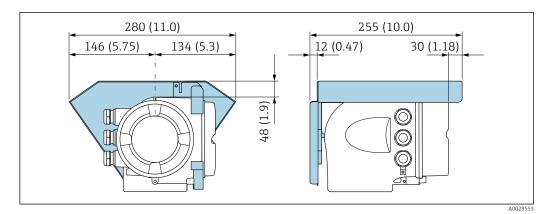

**■** 37 Engineering unit mm (in)

# Remote display and operating module DKX001

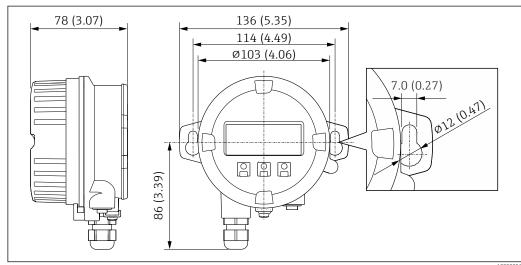


₹ 38 Engineering unit mm (in)

#### External WLAN antenna

The external WLAN antenna is not suitable for use in hygienic applications.


#### External WLAN antenna mounted on device

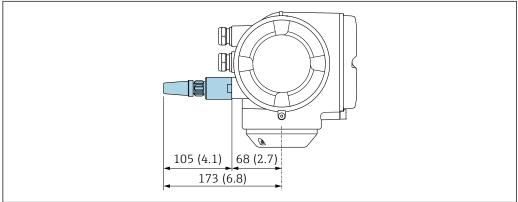

₹ 39 Engineering unit mm (in)

#### External WLAN antenna mounted with cable

The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

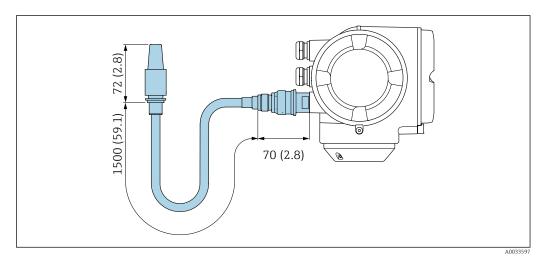

■ 40 Engineering unit mm (in)

#### Weight

All values (weight exclusive of packaging material) refer to devices with ASME B16.5 Class 150 flanges. Weight specifications including transmitter as per order code for "Housing", option A "Aluminum, coated".

Different values due to different transmitter versions:

- Transmitter version for the hazardous area (Order code for "Housing", option A "Aluminum, coated"; Ex d): +2 kg (+4.4 lbs)
- Cast transmitter version, stainless
   (Order code for "Housing", option L "Cast, stainless"): +6 kg (+13 lbs)

#### Weight in SI units

DN [mm]	Weight [kg]
300	553
350	577
400	601

## Weight in US units

DN [in]	Weight [lbs]
12	1219
14	1272
16	1325

#### Materials

# Transmitter housing

Order code for "Housing":

- Option **A** "Aluminum, coated": aluminum, AlSi10Mg, coated
- Option L "Cast, stainless": cast, stainless steel, 1.4409 (CF3M) similar to 316L


Window material

Order code for "Housing":

- Option **A** "Aluminum, coated": glass
- Option L "Cast, stainless": glass

72

# Cable entries/cable glands

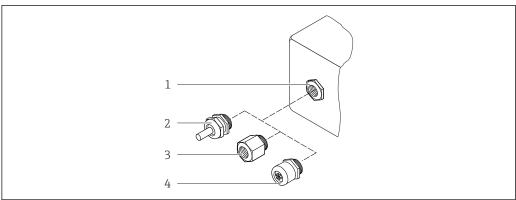

A0028352

■ 41 Possible cable entries/cable glands

- 1 Female thread M20  $\times$  1.5
- 2 Cable gland  $M20 \times 1.5$
- 3 Adapter for cable entry with female thread G ½" or NPT ½"
- 4 Device plug

Order code for "Housing", option A "Aluminum, coated"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Compression fitting M20 × 1.5	Non-Ex: plastic
Compression many wize ^ 1.5	Z2, D2, Ex d/de: brass with plastic
Adapter for cable entry with female thread G 1/2"	Nickel-plated brass
Adapter for cable entry with female thread NPT 1/2"	

Order code for "Housing", option L "Cast, stainless"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Stainless steel, 1.4404 (316L)
Adapter for cable entry with female thread G 1/2"	
Adapter for cable entry with female thread NPT ½"	

# Device plug

Electrical connection	Material
Plug M12x1	<ul> <li>Socket: Stainless steel, 1.4404 (316L)</li> <li>Contact housing: Polyamide</li> <li>Contacts: Gold-plated brass</li> </ul>

# Sensor housing

- Acid and alkali-resistant outer surface
- Stainless steel, 1.4404 (316L)

# Measuring tubes

Stainless steel, 1.4404 (316/316L);

Manifold: stainless steel, 1.4404 (316/316L)

#### **Process connections**

Flanges in accordance with EN 1092-1 (DIN2501) / ASME B 16.5: Stainless steel, 1.4404 (F316/F316L)



Available process connections → 1 74

#### Seals

Welded process connections without internal seals

#### Accessories

Protective cover

Stainless steel, 1.4404 (316L)

#### External WLAN antenna

- Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass
- Adapter: Stainless steel and nickel-plated brass
- Cable: Polyethylene
- Plug: Nickel-plated brass
- Angle bracket: Stainless steel

#### **Process connections**

Fixed flange connections:

- EN 1092-1 (DIN 2501) flange
- EN 1092-1 (DIN 2512N) flange
- ASME B16.5 flange



# Surface roughness

Not polished

# Operability

#### Operating concept

# Operator-oriented menu structure for user-specific tasks

- Commissioning
- Operation
- Diagnostics
- Expert level

#### Fast and safe commissioning

- Guided menus ("Make-it-run" wizards) for applications
- Menu quidance with brief descriptions of the individual parameter functions
- Access to the device via Web server
- WLAN access to the device via mobile handheld terminal, tablet or smart phone

#### Reliable operation

- Operation in local language
- Uniform operating philosophy applied to device and operating tools
- If replacing electronic modules, transfer the device configuration via the integrated memory (HistoROM backup) which contains the process and measuring device data and the event logbook. No need to reconfigure.

#### Efficient diagnostic behavior increases measurement availability

- Troubleshooting measures can be called up via the device and in the operating tools
- Diverse simulation options, logbook for events that occur and optional line recorder functions

### Languages

Can be operated in the following languages:

- Via local operation
   English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese,
   Japanese, Korean, Vietnamese, Czech, Swedish
- Via Web browser
   English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese,
   Japanese, Vietnamese, Czech, Swedish
- Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese

# Local operation


# Via display module

#### Equipment:

- Order code for "Display; operation", option F "4-line, illuminated, graphic display; touch control"
- Order code for "Display; operation", option G "4-line, illuminated, graphic display; touch control + WI AN"



Information about WLAN interface → 🖺 83

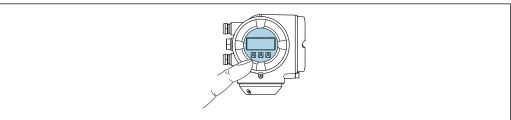

A002678

42 Operation with touch control

# Display elements


- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F)
  The readability of the display may be impaired at temperatures outside the temperature range.

#### Operating elements

- External operation via touch control (3 optical keys) without opening the housing: 🕀, 🖃, 🗉
- Operating elements also accessible in the various zones of the hazardous area

#### Via remote display and operating module DKX001

- The remote display and operating module DKX001 is available as an optional extra  $\rightarrow \triangleq 93$ .
  - The measuring device is always supplied with a dummy cover when the remote display and operating module DKX001 is ordered directly with the measuring device. Display or operation at the transmitter is not possible in this case.
  - If ordered subsequently, the remote display and operating module DKX001 may not be connected at the same time as the existing measuring device display module. Only one display or operation unit may be connected to the transmitter at any one time.

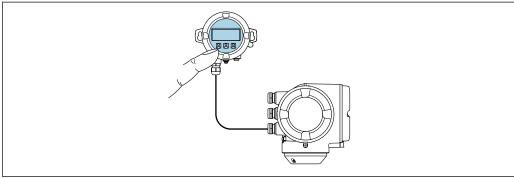

Operation via remote display and operating module DKX001 € 43

#### Display and operating elements

The display and operating elements correspond to those of the display module  $\rightarrow \blacksquare 75$ .

#### Housing material

The housing material of the display and operating module DKX001 depends on the choice of transmitter housing material.

Transmitter housing		Remote display and operating module	
Order code for "Housing"	Material	Material	
Option A "Aluminum, coated"	AlSi10Mg, coated	AlSi10Mg, coated	
Option <b>L</b> "Cast, stainless"	Cast stainless steel, 1.4409 (CF3M) similar to 316L	1.4409 (CF3M)	

# Cable entry

Corresponds to the choice of transmitter housing, order code for "Electrical connection".

#### Connecting cable

→ 🖺 49


# Dimensions

→ 🗎 67

#### Remote operation


#### Via HART protocol

This communication interface is available in device versions with a HART output.

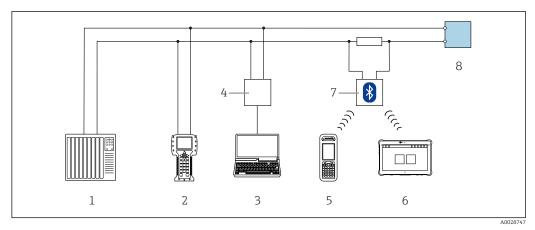

■ 44 Options for remote operation via HART protocol (active)

- 1 Control system (e.g. PLC)
- 2 Field Communicator 475
- 3 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 4 Commubox FXA195 (USB)
- 5 Field Xpert SFX350 or SFX370
- 6 Field Xpert SMT70
- 7 VIATOR Bluetooth modem with connecting cable
- 8 Transmitter

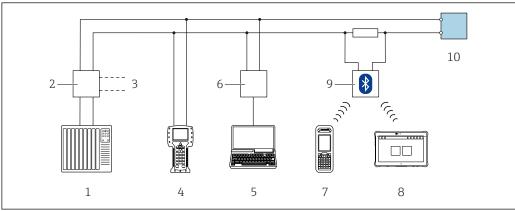


A0028746

 $\blacksquare$  45 Options for remote operation via HART protocol (passive)

- 1 Control system (e.g. PLC)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA195 and Field Communicator 475
- 4 Field Communicator 475
- 5 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 6 Commubox FXA195 (USB)
- 7 Field Xpert SFX350 or SFX370
- 8 Field Xpert SMT70
- 9 VIATOR Bluetooth modem with connecting cable
- 10 Transmitter

#### Via FOUNDATION Fieldbus network

This communication interface is available in device versions with FOUNDATION Fieldbus.

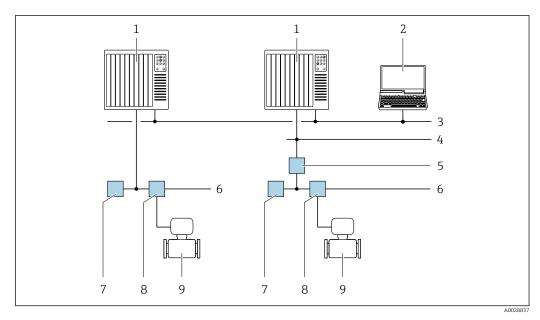


 $\blacksquare$  46 Options for remote operation via FOUNDATION Fieldbus network

- 1 Automation system
- 2 Computer with FOUNDATION Fieldbus network card
- 3 Industry network
- 4 High Speed Ethernet FF-HSE network
- 5 Segment coupler FF-HSE/FF-H1
- 6 FOUNDATION Fieldbus FF-H1 network
- 7 Power supply FF-H1 network
- 8 T-box
- 9 Measuring device

#### Via PROFIBUS DP network

This communication interface is available in device versions with PROFIBUS DP.

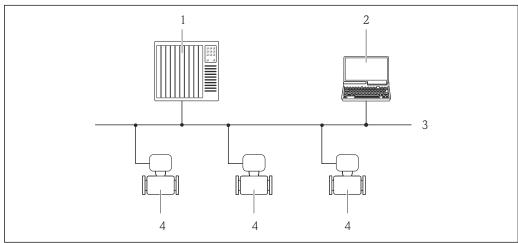

• 47 Options for remote operation via PROFIBUS DP network


- 1 Automation system
- 2 Computer with PROFIBUS network card
- 3 PROFIBUS DP network
- 4 Measuring device

# Via PROFIBUS PA network

This communication interface is available in device versions with PROFIBUS PA.

78 Endress+Hauser

A002090

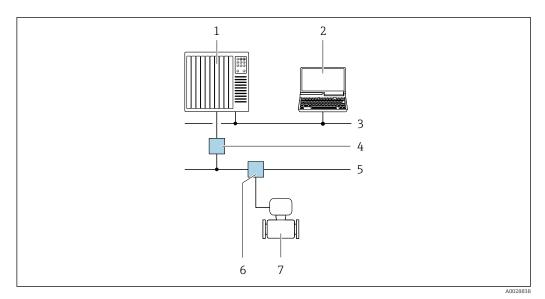


■ 48 Options for remote operation via PROFIBUS PA network

- 1 Automation system
- 2 Computer with PROFIBUS network card
- 3 PROFIBUS DP network
- 4 Segment coupler PROFIBUS DP/PA
- 5 PROFIBUS PA network
- 6 T-box
- 7 Measuring device

# Via Modbus RS485 protocol

This communication interface is available in device versions with a Modbus-RS485 output.

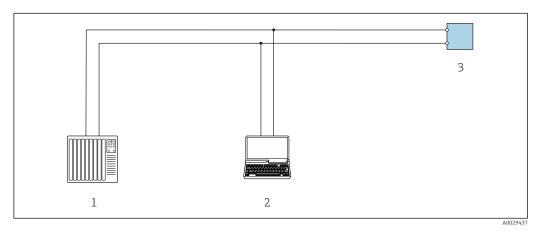


 $\blacksquare$  49 Options for remote operation via Modbus-RS485 protocol (active)

- 1 Control system (e.g. PLC)
- Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 3 Transmitter

# Via EtherNet/IP network

This communication interface is available in device versions with EtherNet/IP.

# Star topology

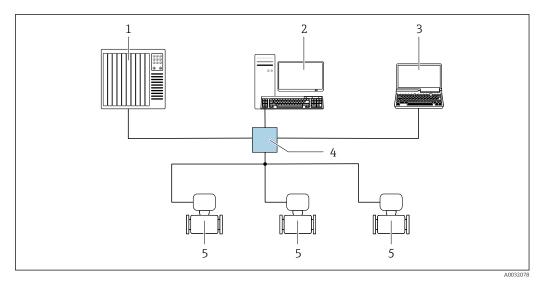


■ 50 Options for remote operation via EtherNet/IP network: star topology

- 1 Automation system, e.g. "RSLogix" (Rockwell Automation)
- 2 Workstation for measuring device operation: with Custom Add-On Profile for "RSLogix 5000" (Rockwell Automation) or with Electronic Data Sheet (EDS)
- 3 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP"
- 4 Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- 5 Measuring device

# Ring topology

The device is integrated via the terminal connection for signal transmission (output 1) and the service interface (CDI-RJ45).

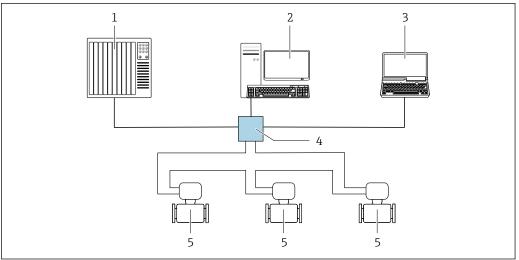

■ 51 Options for remote operation via EtherNet/IP network: ring topology

- 1 Automation system, e.g. "RSLogix" (Rockwell Automation)
- 2 Workstation for measuring device operation: with Custom Add-On Profile for "RSLogix 5000" (Rockwell Automation) or with Electronic Data Sheet (EDS)
- 3 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP"
- 4 Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- 5 Measuring device


#### Via PROFINET network

This communication interface is available in device versions with PROFINET.

80 Endress+Hauser

A003372

# Star topology

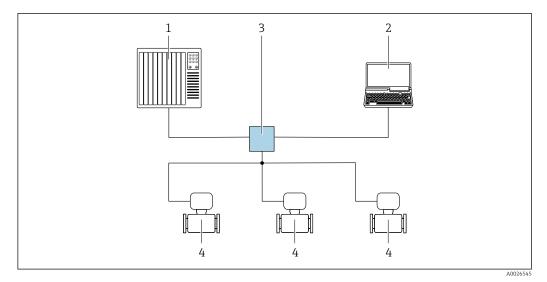


■ 52 Options for remote operation via PROFINET network: star topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

# Ring topology


The device is integrated via the terminal connection for signal transmission (output 1) and the service interface (CDI-RJ45).

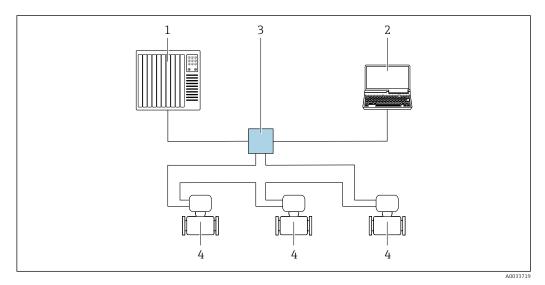

■ 53 Options for remote operation via PROFINET network: ring topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

#### Via APL network

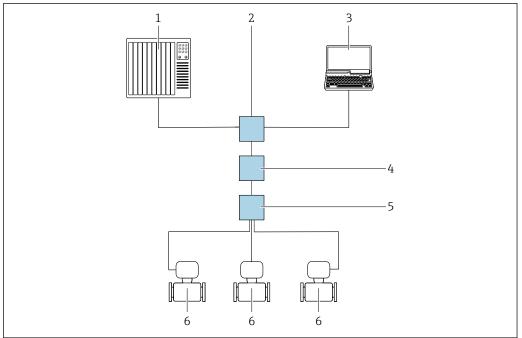

A0046117

■ 54 Options for remote operation via APL network

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Ethernet switch, e.g. Scalance X204 (Siemens)
- 3 Computer with Web browser (e.g. Internet Explorer) for access to integrated Web server or computer with operating tool (e.g. FieldCare or DeviceCare with PROFINET COM DTM or SIMATIC PDM with FDI-Package)
- 4 APL power switch (optional)
- 5 APL field switch
- 6 Measuring device

# Service interface


### Via service interface (CDI-RJ45)

A point-to-point connection can be established via onsite device configuration. With the housing open, the connection is established directly via the service interface (CDI-RJ45) of the device.



An adapter for RJ45 to the M12 plug is optionally available: Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. The connection to the service interface can be established via an M12 plug without opening the device.

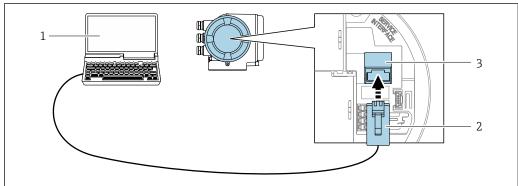

A0027563


# ■ 55 Connection via service interface (CDI-RJ45)

- 1 Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 2 Standard Ethernet connecting cable with RJ45 plug
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

82

#### Via WLAN interface

The optional WLAN interface is available on the following device version: Order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN"

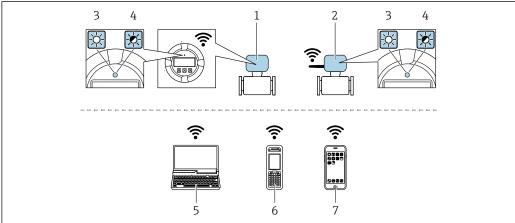

A0034570

- 1 Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- 4 LED flashing: WLAN connection established between operating unit and measuring device
- 5 Computer with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare)
- 6 Mobile handheld terminal with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or operating tool (e.g. FieldCare, DeviceCare)
- 7 Smart phone or tablet (e.g. Field Xpert SMT70)

Function	WLAN: IEEE 802.11 b/g (2.4 GHz)  • Access Point with DHCP server (factory setting)  • Network
Encryption	WPA2-PSK AES-128 (in accordance with IEEE 802.11i)
Configurable WLAN channels	1 to 11
Degree of protection	IP67
Available antennas	<ul> <li>Internal antenna</li> <li>External antenna (optional)         In the event of poor transmission/reception conditions at the place of installation.         Available as an accessory .     </li> <li>Only 1 antenna is active at any one time!</li> </ul>
Range	<ul> <li>Internal antenna: typically 10 m (32 ft)</li> <li>External antenna: typically 50 m (164 ft)</li> </ul>
Materials (external antenna)	<ul> <li>Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass</li> <li>Adapter: Stainless steel and nickel-plated brass</li> <li>Cable: Polyethylene</li> <li>Plug: Nickel-plated brass</li> <li>Angle bracket: Stainless steel</li> </ul>


#### Network integration

Network integration is only available for the HART communication protocol.

With the optional "OPC-UA Server" application package, the device can be integrated into an Ethernet network via the service interface (CDI-RJ45 and WLAN) and communicate with OPC-UA clients. If the device is used in this way, IT security must be considered.

Transmitters with an Ex de approval may **not** be connected via the service interface (CDI-RJ45)! Order code for "Approval transmitter + sensor", options (Ex de): BA, BB, C1, C2, GA, GB, MA, MB, NA, NB

For permanent access to device data and for device configuration via the Web server, the device is incorporated directly in a network via the service interface (CDI-RJ45). In this way, the device can be accessed any time from the control station. The measured values are processed separately via the inputs and outputs through the automation system.

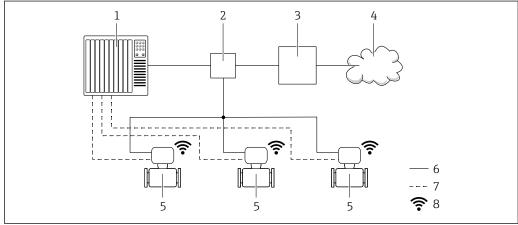

A0033618

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Ethernet switch
- 3 Edge Gateway
- 4 Cloud
- 5 Measuring device
- 6 Ethernet network
- 7 Measured values via inputs and outputs
- 8 Optional WLAN interface
- The optional WLAN interface is available on the following device version:
  Order code for "Display; operation", option **G** "4-line, backlit, graphic display; touch control +
  WLAN"

# Supported operating tools

Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with Web browser	<ul> <li>CDI-RJ45 service interface</li> <li>WLAN interface</li> <li>Ethernet-based fieldbus (EtherNet/IP, PROFINET)</li> </ul>	Special Documentation for the device → 🖺 97
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→ 🖺 95
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→ 🖺 95

Supported operating tools	Operating unit	Interface	Additional information
Field Xpert	SMT70/77/50	<ul> <li>All fieldbus protocols</li> <li>WLAN interface</li> <li>Bluetooth</li> <li>CDI-RJ45 service interface</li> </ul>	Operating Instructions BA01202S Device description files: Use update function of handheld terminal
SmartBlue app	Smart phone or tablet with iOs or Android	WLAN	→ 🖺 95



Other operating tools based on FDT technology with a device driver such as DTM/iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:

- FactoryTalk AssetCentre (FTAC) from Rockwell Automation → www.rockwellautomation.com
- Process Device Manager (PDM) from Siemens → www.siemens.com
- Asset Management Solutions (AMS) from Emerson → www.emersonprocess.com
- FieldCommunicator 375/475 from Emerson → www.emersonprocess.com
- Field Device Manager (FDM) from Honeywell → www.process.honeywell.com
- FieldMate from Yokogawa → www.yokogawa.com
- PACTWare → www.pactware.com

The related device description files are available: www.endress.com → Downloads

#### Web server

Thanks to the integrated Web server the device can be operated and configured via a Web browser and via the service interface (CDI-RJ45) or via the WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, device status information is also displayed and allows users to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

#### Supported functions

Data exchange between the operating unit (such as a notebook for example) and the measuring device:

- Upload the configuration from the measuring device (XML format, configuration backup)
- Save the configuration to the measuring device (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file or PDF file, document the measuring point configuration)
- Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)
- Flash firmware version for device firmware upgrade, for instance
- Download driver for system integration
- Visualize up to 1000 saved measured values (only available with the Extended HistoROM application package → 

  92)



Web server special documentation → 🖺 97

#### HistoROM data management

The measuring device features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.



When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

# Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	HistoROM backup	T-DAT	S-DAT
Available data	<ul> <li>Event logbook such as diagnostic events for example</li> <li>Parameter data record backup</li> <li>Device firmware package</li> <li>Driver for system integration for exporting via Web server, e.g:</li> <li>GSD for PROFIBUS DP</li> <li>GSD for PROFIBUS PA</li> <li>GSDML for PROFINET</li> <li>EDS for EtherNet/IP</li> <li>DD for FOUNDATION Fieldbus</li> </ul>	Measured value logging ("Extended HistoROM" order option)  Current parameter data record (used by firmware at run time)  Maximum indicators (min/max values)  Totalizer values	<ul> <li>Sensor data: nominal diameter etc.</li> <li>Serial number</li> <li>Calibration data</li> <li>Device configuration (e.g. SW options, fixed I/O or multi I/O)</li> </ul>
Storage location	Fixed on the user interface board in the connection compartment	Attachable to the user interface board in the connection compartment	In the sensor plug in the transmitter neck part

# Data backup

#### **Automatic**

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors
- If exchanging the electronics module (e.g. I/O electronics module): Once the electronics module has been replaced, the software of the module is compared against the current device firmware. The module software is upgraded or downgraded where necessary. The electronics module is available for use immediately afterwards and no compatibility problems occur.

# Manual

Additional parameter data record (complete parameter settings) in the integrated device memory HistoROM backup for:

- Data backup function
   Backup and subsequent restoration of a device configuration in the device memory HistoROM backup
- Data comparison function
   Comparison of the current device configuration with the device configuration saved in the device memory HistoROM backup

### Data transmission

#### Manual

- Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)
- Transmission of the drivers for system integration via Web server, e.g.:
  - GSD for PROFIBUS DP
  - GSD for PROFIBUS PA
  - GSDML for PROFINET
  - EDS for EtherNet/IP
  - DD for FOUNDATION Fieldbus

#### **Event list**

#### **Automatic**

- Chronological display of up to 20 event messages in the events list
- If the Extended HistoROM application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

#### Data logging

#### Manual

If the **Extended HistoROM** application package (order option) is enabled:

- Record up to 1000 measured values via 1 to 4 channels
- User configurable recording interval
- Record up to 250 measured values via each of the 4 memory channels
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or web server

# Certificates and approvals

Current certificates and approvals that are available for the product can be selected via the Product Configurator at <a href="https://www.endress.com">www.endress.com</a>:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- Select Configuration.

#### CE mark

The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

#### **UKCA** marking

The device meets the legal requirements of the applicable UK regulations (Statutory Instruments). These are listed in the UKCA Declaration of Conformity along with the designated standards. By selecting the order option for UKCA marking, Endress+Hauser confirms a successful evaluation and testing of the device by affixing the UKCA mark.

Contact address Endress+Hauser UK: Endress+Hauser Ltd. Floats Road Manchester M23 9NF United Kingdom

www.uk.endress.com

# RCM mark

The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

#### Ex approval

The measuring device is certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.

Devices with the order code for "Approval; transmitter + sensor", option BA, BB, BC or BD have equipment protection level (EPL) Ga/Gb (Zone 0 in the measuring tube).

The separate Ex documentation (XA) containing all the relevant explosion protection data is available from your Endress+Hauser sales center.

#### ATEX/IECEx

Currently, the following versions for use in hazardous areas are available:

#### Ex db eb

Category	Type of protection
II1/2G	Ex db eb ia IIC T6T1 Ga/Gb Ex db eb ia IIB T6T1 Ga/Gb
II2G	Ex db eb ia IIC T6T1 Gb Ex db eb ia IIB T6T1 Gb

#### Ex db

Category	Type of protection
II1/2G	Ex db ia IIC T6T1 Ga/Gb Ex db ia IIB T6T1 Ga/Gb
II2G	Ex db ia IIC T6T1 Gb Ex db ia IIB T6T1 Gb

#### Ех ес

Category	Type of protection
II3G	Ex ec IIC T5T1 Gc

# Ex tb

Category	Type of protection
II2D	Ex tb IIIC T** °C Db

# ${}_{\text{C}}\text{CSA}_{\text{US}}$

Currently, the following versions for use in hazardous areas are available:

# IS (Ex i) and XP (Ex d)

- Class I, II, III Division 1 Groups A-G
- Class I, II, III Division 1 Groups C-G

#### NI (Ex ec)

Class I Division 2 Groups A - D

#### Ex db eb

- Class I, Zone 1 AEx/ Ex db eb ia IIC T6...T1 Ga/Gb Class I, Zone 1 AEx/ Ex db eb ia IIB T6...T1 Ga/Gb
- Class I, Zone 1 AEx/Ex db eb ia IIC T6...T1 Gb Class I, Zone 1 AEx/Ex db eb ia IIB T6...T1 Gb

#### Ex db

- Class I, Zone 1 AEx/ Ex db ia IIC T6...T1 Ga/Gb Class I, Zone 1 AEx/ Ex db ia IIB T6...T1 Ga/Gb
- Class I, Zone 1 AEx/ Ex db ia IIC T6...T1 Gb Class I, Zone 1 AEx/ Ex db ia IIB T6...T1 Gb

## Ex ec

Class I, Zone 2 AEx/ Ex ec IIC T5...T1 Gc

#### Ex th

Zone 21 AEx/ Ex tb IIIC T\*\* °C Db

#### **Functional safety**

The measuring device can be used for flow monitoring systems (min., max., range) up to SIL 2 (single-channel architecture; order code for "Additional approval", option LA) and SIL 3 (multichannel architecture with homogeneous redundancy) and is independently evaluated and certified in accordance with IEC 61508.

The following types of monitoring in safety equipment are possible:

- Mass flow
- Volume flow
- Density



#### **HART** certification

#### **HART** interface

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified according to HART 7
- The device can also be operated with certified devices of other manufacturers (interoperability)

# FOUNDATION Fieldbus certification

#### **FOUNDATION Fieldbus interface**

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified in accordance with FOUNDATION Fieldbus H1
- Interoperability Test Kit (ITK), revision version 6.2.0 (certificate available on request)
- Physical Layer Conformance Test
- The device can also be operated with certified devices of other manufacturers (interoperability)

#### **Certification PROFIBUS**

#### **PROFIBUS** interface

The measuring device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e.V./ PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to PA Profile 3.02
- The device can also be operated with certified devices of other manufacturers (interoperability)

#### EtherNet/IP certification

The measuring device is certified and registered by the ODVA (Open Device Vendor Association). The measuring system meets all the requirements of the following specifications:

- Certified in accordance with the ODVA Conformance Test
- EtherNet/IP Performance Test
- EtherNet/IP PlugFest compliance
- The device can also be operated with certified devices of other manufacturers (interoperability)

#### **Certification PROFINET**

#### **PROFINET** interface

The measuring device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e.V. / PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to:
  - Test specification for PROFINET devices
  - PROFINET Security Level 2 Netload Class 2 0 Mbps
- The device can also be operated with certified devices of other manufacturers (interoperability)
- The device supports PROFINET S2 system redundancy.

# Certification PROFINET with Ethernet-APL

#### **PROFINET** interface

The measuring device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e.V. / PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to:
  - Test specification for PROFINET devices
  - PROFINET PA Profile 4
  - PROFINET Security Level 2 Netload Class 2 0 Mbps
  - APL conformance test
- The device can also be operated with certified devices of other manufacturers (interoperability)
- The device supports PROFINET S2 system redundancy.

# Pressure Equipment Directive

The devices can be ordered with or without a PED or UKCA approval. If a device with a PED or UKCA approval is required, this must be explicitly stated in the order. A UK Ex approval must be selected for UKCA.

- With the marking:
  - a) PED/G1/x (x = category) or
  - b) UK/G1/x (x = category)

on the sensor nameplate, Endress+Hauser confirms compliance with the "Essential Safety Requirements"

- a) specified in Annex I of the Pressure Equipment Directive 2014/68/EU or
- b) Schedule 2 of Statutory Instruments 2016 No. 1105.
- Devices bearing this marking (PED or UKCA) are suitable for the following types of medium:
  - Media in Group 1 and 2 with a vapor pressure greater than, or smaller and equal to 0.5 bar (7.3 psi)
  - Unstable gases
- Devices not bearing this marking (without PED or UKCA) are designed and manufactured according to sound engineering practice. They meet the requirements of
  - a) Art. 4 Para. 3 of the Pressure Equipment Directive 2014/68/EU or
  - b) Part 1, Para. 8 of Statutory Instruments 2016 No. 1105.

The scope of application is indicated

- a) in diagrams 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU or
- b) Schedule 3, Para. 2 of Statutory Instruments 2016 No. 1105.

# Radio approval

The measuring device has radio approval.



For detailed information on the radio approval, see the Special Documentation  $\rightarrow \implies 97$ 

# Measuring instrument approval

The measuring device is (optionally) approved as a gas meter (MI-002) or component in measuring systems (MI-005) in service subject to legal metrological control in accordance with the European Measuring Instruments Directive 2014/32/EU (MID).

The measuring device is qualified to OIML R117 or OIML R137 OIML R117 and has an OIML Certificate of Conformity (optional).

#### Additional certification

#### CRN approval

Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.

# Tests and certificates

- EN10204-3.1 material certificate, wetted parts and sensor housing
- Pressure test, internal process, inspection certificate
- PMI test (XRF), internal procedure, wetted parts, test report
- EN10204-2.1 confirmation of compliance with the order and EN10204-2.2 test report

### *Testing of welded connections*

Option	Test s	Component				
	ISO 23277 AL2x (PT) ISO 10675-1 AL1 (RT, DR)	ASME B31.3 NFS	ASME VIII Div.1 Appx. 4+8	NORSOK M-601	Measuring tube	Process connection
KF	Х				PT	RT
KK		х			PT	RT
KP			Х		PT	RT
KR				Х	VT, PT	VT, RT

PT = penetrant testing, RT = radiographic testing, VT = visual testing
All options with test report

# Other standards and guidelines

■ EN 60529

Degrees of protection provided by enclosures (IP code)

■ IEC/EN 60068-2-6

Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).

■ IEC/EN 60068-2-31

Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices

■ EN 61010-1

Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements

■ IEC/EN 61326-2-3

Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).

■ NAMUR NE 21

Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment

NAMUR NE 32

Data retention in the event of a power failure in field and control instruments with microprocessors

■ NAMUR NE 43

Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.

■ NAMUR NE 53

Software of field devices and signal-processing devices with digital electronics

■ NAMUR NE 80

The application of the pressure equipment directive to process control devices

■ NAMUR NE 105

Specifications for integrating fieldbus devices in engineering tools for field devices

■ NAMUR NE 107

Self-monitoring and diagnosis of field devices

■ NAMUR NE 131

Requirements for field devices for standard applications

■ NAMUR NE 132

Coriolis mass meter

■ NACE MR0103

Materials resistant to sulfide stress cracking in corrosive petroleum refining environments.

NACE MR0175/ISO 15156-1

Materials for use in H2S-containing Environments in Oil and Gas Production.

■ ETSI EN 300 328

Guidelines for 2.4 GHz radio components.

■ EN 301489

Electromagnetic compatibility and radio spectrum matters (ERM).

# Ordering information

Detailed ordering information is available from your nearest sales organization www.addresses.endress.com or in the Product Configurator at www.endress.com:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select **Configuration**.

# Product Configurator - the tool for individual product configuration

- Up-to-the-minute configuration data
- Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- Ability to order directly in the Endress+Hauser Online Shop

# Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: <a href="https://www.endress.com">www.endress.com</a>.



Detailed information on the application packages: Special Documentation for the device  $\rightarrow \implies 97$ 

#### Diagnostic functionality

Order code for "Application package", option EA "Extended HistoROM"

Comprises extended functions concerning the event log and the activation of the measured value memory.

Event log:

Memory volume is extended from 20 message entries (standard version) to up to 100 entries.

Data logging (line recorder):

- Memory capacity for up to 1000 measured values is activated.
- 250 measured values can be output via each of the 4 memory channels. The recording interval can
  be defined and configured by the user.
- Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.



For detailed information, see the Operating Instructions for the device.

#### **Heartbeat Technology**

Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

#### **Heartbeat Verification**

Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment".

- Functional testing in the installed state without interrupting the process.
- Traceable verification results on request, including a report.
- Simple testing process via local operation or other operating interfaces.
- Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications.
- Extension of calibration intervals according to operator's risk assessment.

# Heartbeat Monitoring

Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:

- Draw conclusions using these data and other information about the impact the process influences (e.g. corrosion, abrasion, formation of buildup etc.) have on measuring performance over time.
- Schedule servicing in time.
- Monitor the process or product quality, e.g. gas pockets.



For detailed information, see the Special Documentation for the device.  $\label{eq:continuous}$ 

#### Concentration measurement

Order code for "Application package", option ED "Concentration"

Calculation and outputting of fluid concentrations.

The measured density is converted to the concentration of a substance of a binary mixture using the "Concentration" application package:

- Choice of predefined fluids (e.g. various sugar solutions, acids, alkalis, salts, ethanol etc.).
- Common or user-defined units ('Brix, 'Plato, % mass, % volume, mol/l etc.) for standard applications.
- Concentration calculation from user-defined tables.



For detailed information, see the Special Documentation for the device.

# Special density

Order code for "Application package", option EE "Special density"

Many applications use density as a key measured value for monitoring quality or controlling processes. The device measures the density of the fluid as standard and makes this value available to the control system.

The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.



For detailed information, see the Operating Instructions for the device.

#### Petroleum

Order code for "Application package", option EJ "Petroleum"

The most important parameters for the Oil & Gas Industry can be calculated and displayed with this application package.

- Corrected volume flow and calculated reference density in accordance with the "API Manual of Petroleum Measurement Standards, Chapter 11.1"
- Water content, based on density measurement
- Weighted mean of the density and temperature



For detailed information, see the Special Documentation for the device.

#### Petroleum & locking function

Order code for "Application package", option EM "Petroleum & locking function"

The most important parameters for the Oil & Gas Industry can be calculated and displayed with this application package. It is also possible to lock the settings.

- Corrected volume flow and calculated reference density in accordance with the "API Manual of Petroleum Measurement Standards, Chapter 11.1"
- Water content, based on density measurement
- Weighted mean of the density and temperature



For detailed information, see the Special Documentation for the device.

#### **OPC-UA Server**

Order code for "Application package", option EL "OPC-UA Server"

The application package provides an integrated OPC-UA server for comprehensive device services for IoT and SCADA applications.



For detailed information, see the Special Documentation for the device.

# Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

#### **Device-specific accessories**

#### For the transmitter

Accessories	Description
Proline 300 transmitter	Transmitter for replacement or storage. Use the order code to define the following specifications:  Approvals  Output  Input  Display/operation  Housing  Software  Order code: 8X3BXX  Installation Instructions EA01200D

Remote display and operating module DKX001	<ul> <li>If ordered directly with the measuring device:         Order code for "Display; operation", option O "Remote display 4-line, illuminated;         10 m (30 ft) cable; touch control"</li> <li>If ordered separately:         <ul> <li>Measuring device: order code for "Display; operation", option M "W/o, prepared for remote display"</li> <li>DKX001: Via the separate product structure DKX001</li> </ul> </li> <li>If ordered subsequently:         <ul> <li>DKX001: Via the separate product structure DKX001</li> </ul> </li> <li>Mounting bracket for DKX001</li> <li>If ordered directly: order code for "Accessory enclosed", option RA "Mounting bracket, pipe 1/2"</li> <li>If ordered subsequently: order number: 71340960</li> </ul> <li>Connecting cable (replacement cable)</li> <li>Via the separate product structure: DKX002</li>					
	<b>1</b> Further information on display and operating module DKX001 $\rightarrow$ $\  \  \  \  \  \  \  \  \  \  \  \  \ $					
	Special Documentation SD01763D					
External WLAN antenna	External WLAN antenna with 1.5 m (59.1 in) connecting cable and two angle brackets. Order code for "Accessory enclosed", option P8 "Wireless antenna wide area".					
	<ul> <li>The external WLAN antenna is not suitable for use in hygienic applications.</li> </ul>					
	■ Additional information regarding the WLAN interface $\rightarrow$ 🖺 83.					
	Order number: 71351317					
	Installation Instructions EA01238D					
Weather protection cover	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight.					
	① Order number: 71343505					
	Installation Instructions EA01160D					

# Communication-specific accessories

Accessories	Description
Commubox FXA195 HART	For intrinsically safe HART communication with FieldCare via the USB interface.  Technical Information TI00404F
HART Loop Converter HMX50	Is used to evaluate and convert dynamic HART process variables to analog current signals or limit values.  • Technical Information TI00429F • Operating Instructions BA00371F
Fieldgate FXA42	Is used to transmit the measured values of connected 4 to 20 mA analog measuring devices, as well as digital measuring devices  Technical Information TI01297S Operating Instructions BA01778S Product page: www.endress.com/fxa42
Field Xpert SMT50	The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.  This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.
	<ul> <li>Technical Information TI01342S</li> <li>Operating Instructions BA01709S</li> <li>Product page: www.endress.com/smt50</li> </ul>

Field Xpert SMT70	The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.  This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.				
	<ul> <li>Technical Information TI01342S</li> <li>Operating Instructions BA01709S</li> <li>Product page: www.endress.com/smt70</li> </ul>				
Field Xpert SMT77	The Field Xpert SMT77 tablet PC for device configuration enables mobile plant asset management in areas categorized as Ex Zone 1.				
	<ul> <li>Technical Information TI01418S</li> <li>Operating Instructions BA01923S</li> <li>Product page: www.endress.com/smt77</li> </ul>				

# Service-specific accessories

Accessory	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring devices:  Choice of measuring devices with industrial requirements  Calculation of all the necessary data for identifying the optimum flowmeter e.g. nominal diameter, pressure loss, flow velocity and accuracy.  Graphic illustration of the calculation results  Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.
	Applicator is available:  Via the Internet: https://portal.endress.com/webapp/applicator  As a downloadable DVD for local PC installation.
W@M	W@M Life Cycle Management Improved productivity with information at your fingertips. Data relevant to a plant and its components is generated from the first stages of planning and during the asset's complete life cycle.  W@M Life Cycle Management is an open and flexible information platform with online and on-site tools. Instant access for your staff to current, in-depth data shortens your plant's engineering time, speeds up procurement processes and increases plant uptime. Combined with the right services, W@M Life Cycle Management boosts productivity in every phase. For more information, see: www.endress.com/lifecyclemanagement
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.  Operating Instructions BA00027S and BA00059S
DeviceCare	Tool for connecting and configuring Endress+Hauser field devices.  Innovation brochure IN01047S

# System components

Accessories	Description
Memograph M graphic data manager	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.
	<ul><li>Technical Information TI00133R</li><li>Operating Instructions BA00247R</li></ul>
Cerabar M	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.
	<ul> <li>Technical Information TI00426P and TI00436P</li> <li>Operating Instructions BA00200P and BA00382P</li> </ul>

Accessories	Description
Cerabar S	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.
	<ul><li>Technical Information TI00383P</li><li>Operating Instructions BA00271P</li></ul>
iTEMP	The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature.
	"Fields of Activity" document FA00006T

# **Documentation**



For an overview of the scope of the associated Technical Documentation, refer to the following:

- Device Viewer (www.endress.com/deviceviewer): Enter serial number from nameplate.
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

# Standard documentation

# **Brief Operating Instructions**

*Brief Operating Instructions for the sensor* 

Measuring device	Documentation code		
Proline Promass X	KA01288D		

# Brief Operating Instructions for the transmitter

	Documentation code							
Measuring device	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET	PROFINET with Ethernet- APL
Proline 300	KA01309D	KA01229D	KA01227D	KA01386D	KA01311D	KA01339D	KA01341D	KA01517D

# **Operating Instructions**

Measuring device	Documentation code							
	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET	PROFINET with Ethernet- APL
Promass X 300	BA01492D	BA01525D	BA01514D	BA01864D	BA01503D	BA01735D	BA01746D	BA02118D

# **Description of Device Parameters**

	Documentation code							
Measuring device	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET	PROFINET with Ethernet- APL
Promass 300	GP01057D	GP01094D	GP01058D	GP01134D	GP01059D	GP01114D	GP01115D	GP01168D

Supplementary devicedependent documentation Safety instructions

Safety instructions for electrical equipment for hazardous areas.

Contents	Documentation code
ATEX/IECEx Ex d/Ex de	XA01405D
ATEX/IECEx Ex ec	XA01439D
cCSAus XP	XA01373D
cCSAus Ex d/ Ex de	XA01372D
cCSAus Ex nA	XA01507D
INMETRO Ex d/Ex de	XA01468D
INMETRO Ex ec	XA01470D
NEPSI Ex d/Ex de	XA01469D
NEPSI Ex nA	XA01471D
EAC Ex d/Ex de	XA01656D
EAC Ex nA	XA01657D
JPN Ex d	XA01778D

# Remote display and operating module DKX001

Contents	Documentation code
ATEX/IECEx Ex i	XA01494D
ATEX/IECEx Ex ec	XA01498D
cCSAus IS	XA01499D
cCSAus Ex nA	XA01513D
INMETRO Ex i	XA01500D
INMETRO Ex ec	XA01501D
NEPSI Ex i	XA01502D
NEPSI Ex nA	XA01503D

# **Functional Safety Manual**

Contents	Documentation code
Proline Promass 300	SD01727D

# **Special Documentation**

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Remote display and operating module DKX001	SD01763D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
OPC-UA server <sup>1)</sup>	SD02039D

1) This Special Documentation is only available for device versions with a HART output.

Contents	Documentation code							
	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	PROFINET	EtherNet/IP	PROFINET with Ethernet- APL
Web server	SD01662D	SD01665D	SD01664D	SD02226D	SD01663D	SD01969D	SD01968D	SD02762D
Heartbeat Technology	SD01642D	SD01696D	SD01698D	SD02202D	SD01697D	SD01988D	SD01982	SD02731D
Concentration measurement	SD01644D	SD01706D	SD01708D	SD02212D	SD01707D	SD02005D	SD02004D	SD02735D
Petroleum	SD02097D	-	SD02291D	SD02216D	SD02098D	SD02099D	SD02096D	SD02739D
Petroleum & locking function	SD02499D	_	_	-	SD02500D	_	-	SD02739D
Gas Fraction Handler	SD02584D	_	_	-	SD02584D	SD02584D	-	SD02584D
Custody transfer	SD01688D	-	-	-	SD01689D	-	-	-

#### **Installation Instructions**

Contents	Comment
Installation instructions for spare part sets and accessories	Documentation code: specified for each individual accessory → <b>1</b> 93.

# Registered trademarks

#### **HART®**

Registered trademark of the FieldComm Group, Austin, Texas, USA

#### **PROFIBUS®**

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

# FOUNDATION™ Fieldbus

Registration-pending trademark of the FieldComm Group, Austin, Texas, USA

#### Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

### EtherNet/IP™

Trademark of ODVA, Inc.

## Ethernet-APL $^{TM}$

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

# **PROFINET®**

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany





www.addresses.endress.com