

Same as

XA02708C/66/EN/02.21

Safety Instructions **J22 TDLAS Gas Analyzer**

ATEX/IECEX/UKEX: Zone 1

cCSAus: Class I, Division 1/Zone 1

Safety instructions for J22 TDLAS Gas Analyzer with and without SCS for explosion-hazardous areas classified according to the National Electrical Code (NEC), Canadian Electrical Code (CEC), International Electrotechnical Commission (IEC), UK Statutory Instrument SI 2016 No. 1107 (as amended by SI 2019 No. 696-Schedule 3A Part 1) and Directive 2014/34/EU of the European Parliament and of the Council of 26 February 2014 on the harmonization of the laws Member States.



Table of Contents

1	Introduction	1
	Intended Equipment Use	1
	Associated Documentation	1
	Manufacturer's Certificates	1
	Manufacturer Address	2
2	General	3
	Symbols Used	3
	Safety symbols	3
	Informational symbols	3
	Electrical symbols	3
	Labels	4
	Nameplate	4
	Controller	4
	Personnel Qualifications	4
	General	5
	Equipment Training	5
	Potential Risks Affecting Personnel	5
	Electrocution hazard	6
	Laser safety	6
	Analyzer Technical Specifications	6
	Electrostatic discharge	9
	Chemical compatibility	9
3	Equipment Installation	10
	Required Hardware/Tools	10
	Tools symbols	10
	Lifting/Carrying the Analyzer	10
	Mounting the Analyzer	11
	Opening/Closing the Analyzer Enclosure	12
	Protective Chassis and Ground Connections	12
	Protective ground cable	12
	Ground connections	13
	Electrical Wiring Requirements	14
	Wire temperature rating and torque	14
	Cable entries	15
	Threaded entries	15
	Cables Type	16
	Flow Switch Connection Requirements	16
	Connection Values: Signal Circuits	16
	Terminal assignment	16
	Safety-related values	17
	Modbus interface cable specification	17
	Electrical Circuit Breakers	17
	Connecting the Gas Supply	18
	Sample System Heater	18

4 Equipment Operation19

Operating Controls..... 19

Commissioning..... 19

Decommissioning..... 19

 Intermittent operation 19

5 Maintenance and Service21

Cleaning and Decontamination 21

 To clean the J22 exterior 21

Troubleshooting and Repairs 21

 Cleaning the cell mirror 21

 Replacing the membrane separator filter..... 23

 Enclosure purge (optional)..... 24

 Sample system purge (optional) 25

 Repair verification 25

 Power termination covers..... 25

Spare Parts 25

Service Contact..... 25

1 Introduction

Endress+Hauser’s J22 TDLAS Gas Analyzer is a laser-based extractive analyzer for measuring gas concentration. The technology employed is Tunable Diode Laser Absorption Spectroscopy (TDLAS). Typical measurement ranges vary between 0 to 10 parts-per-million by volume (ppmv) and 0 to 100% by volume.

Intended Equipment Use

The J22 TDLAS Gas Analyzer is intended for use as instructed in the documentation package provided with the equipment. This information should be read and referenced by anyone installing, operating or having direct contact with the analyzer. Any use of the equipment in a manner not specified by Endress+Hauser could impair the protection provided by the equipment.

Associated Documentation

Each analyzer shipped from the factory is packaged with documents for the model that was purchased. All documentation is available on the USB flash drive provided with the shipment. This document is an integral part of the document package, which includes:

Part Number	Document Type	Description
BA02152C	Operating Instruction	A complete overview of the operations required to install, commission and maintain the device.
TI01607C	Technical Information	Provides technical data on the device with an overview of associated models available.

Manufacturer’s Certificates

cCSAus Certificate of Conformity
Certificate number: CSA21CA80053040

ATEX/IECEX Certificate of Conformity
Certificate number: CSANe 20ATEX1197X / IECEX SIR 20.0035X

UKEX Certificate of Conformity
Certificate number: CSAE 21UKEX1072X

J22 TDLAS Gas Analyzer, J22 TDLAS Gas Analyzer with SCS on Panel, J22 TDLAS Gas Analyzer with Enclosed SCS, J22 TDLAS Gas Analyzer with Enclosed SCS, with Heater	
ATEX/UKEX	IECEX
EN IEC 60079-0:2018 EN 60079-1:2014 + AC:2018-09 EN 60079-11:2012 EN 60079-28:2015 EN ISO 80079-36:2016 + AC:2019 EN IEC 60079-0:2018 EN 60079-1:2014 + AC:2018-09 EN 60079-11:2012 EN 60079-28:2015 EN ISO 80079-36:2016+AC:2019	IEC 60079-0:2017 Ed. 7.0 IEC 60079-1:2014+COR1:2018 Ed. 7 IEC 60079-11:2011 Ed. 6.0 IEC 60079-28:2015 Ed. 2.0 ISO 80079-36:2016+COR1:2019 Ed. 1
cCSA	CSAus
CAN/CSA-C22.2 No. 60079-0:19 CSA C22.2 No. 60079-1:16 CAN/CSA-C22.2 No. 60079-11:14 CAN/CSA-C22.2 No. 60079-28:16 CSA C22.2 No. 30-M1986 (R2016) CSA C22.2 No. 60529:16 CSA C22.2 No. 94.2-15 CSA C22.2 No. 0-10 (R2015) CSA C22.2 No. 61010-1-12, UPD1:2015, UPD2:2016, AMD1:2018	ANSI/UL 60079-0-2019 Seventh Edition ANSI/UL 60079-1:2015 Seventh Edition ANSI/UL60079-11:2013 Seventh Edition UL 60079-28 Second Edition UL 913 Eighth Edition FM 3600:2018 FM 3615:2018 ANSI/UL 50E:2015 UL 61010-1 Ed. 3, AMD1:2018




Manufacturer
Address

Endress+Hauser
11027 Arrow Route
Rancho Cucamonga, CA 91730
United States
www.endress.com


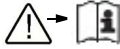
2 General

Symbols Used


Safety symbols

Symbol	Description
	This symbol alerts the user to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury or damage to the equipment.
	Hazardous voltage and risk of electric shock.
	INVISIBLE LASER RADIATION - Avoid exposure to the beam. Class 3R Radiation Product. Refer servicing to manufacturer-qualified personnel.

Informational symbols


Symbol	Description	Symbol	Description
	Indicates additional information		Refer to the manual for more information.

Electrical symbols

Symbol	Description
	Protective Earth (PE) A terminal which is bonded to conductive parts of equipment for safety purposes and is intended to be connected to an external protective earthing system.

Labels

Nameplate

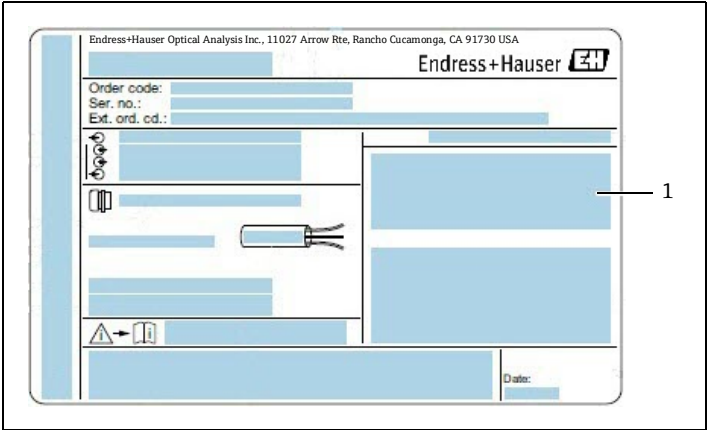

1 WARNING - Potential Electrostatic Discharge

Controller

POWER

Nicht unter Spannung offen
Do not open when energized
Ne pas ouvrir sous tension

Terminate power prior to accessing equipment to prevent damage to the analyzer.

Warning: DO NOT OPEN IN
EXPLOSIVE ATMOSPHERE
Attention: NE PAS OUVRIR EN
ATMOSPHERE EXPLOSIVE

Use caution before opening the analyzer enclosure to avoid injury.

Personnel
Qualifications

Personnel must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device. This includes, but is not limited to:

- Be suitably qualified for their role and the tasks they perform
- Be trained in explosion protection
- Be familiar with national and local regulations and guidelines (e.g., CEC, NEC and/or ATEX/IECEX/UKEX)
- Be familiar with lockout/tag-out procedures, toxic gas monitoring protocols and PPE (personal protection equipment) requirements

General

- Adhere to all warning labels to prevent damage to the unit.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Modifications to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- Only open the controller cover if the following conditions are met:
 - An explosive atmosphere is not present.
 - All device technical data is observed (see nameplate).
 - The optional stainless steel label tag is not bonded to earth. The maximum average capacitance of the tag determined by measurement is maximum 30 pF. This shall be considered by the user to determine suitability of the equipment in a specific application.
- In potentially explosive atmospheres:
 - Do not disconnect any electrical connections while the equipment is energized.
 - Do not open the connection compartment cover when energized or the area is known to be hazardous.
- Install the controller circuit wiring according to the Canadian Electrical Code (CEC) respective National Electrical Code (NEC) using threaded conduit or other wiring methods in accordance with articles 501 to 505, and/or IEC 60079-14.
- Install the device according to the manufacturer's instructions and regulations.
- The flameproof joints of this equipment are other than the minimums specified in IEC/EN 60079-1 and shall not be repaired by the user.



Substitution of components is not permitted.
Substitution of components may impair intrinsic safety.

Equipment Training

Refer to local service providers for installation and operational training of the J22 TDLAS Gas Analyzer.

Potential Risks Affecting Personnel

This section addresses the appropriate actions to undertake when faced with hazardous situations during or before service of the analyzer. It is not possible to list all potential hazards within this document. The user is responsible for identifying and mitigating any potential hazards present when servicing the analyzer.



Technicians are expected to be trained and follow all safety protocols that have been established by the customer in accordance with the area hazard classification to service or operate the analyzer. This may include, but is not limited to, toxic and flammable gas monitoring protocols, lockout/tagout procedures, the use of personal protective equipment (PPE) requirements, hot work permits and other precautions that address safety concerns related to the use and operation of process equipment located in hazardous areas.

Electrocution hazard

1. Shut off power at the main disconnect external to the analyzer.



Complete this action before performing any service that requires working near the main input power or disconnecting any wiring or other electrical components.

2. Only use tools with a safety rating for protection against accidental contact with voltage up to 1000V (IEC 900, ASTF-F1505-04, VDE 0682/201).

Laser safety

The J22 TDLAS Gas Analyzer is a Class 1 laser product, which poses no threat to equipment operators. The laser internal to the analyzer controller is classified Class 3R and could cause eye damage if the beam is viewed directly.



Before servicing, shut off all power to the analyzer.



Analyzer Technical Specifications

Technical specifications are provided in the following tables that outline recommended equipment settings, ratings, and physical specifications.



Electrical & Communications		
Input Voltages	100 to 240 VAC tolerance $\pm 10\%$ 50/60 Hz, 10W ¹ 24 VDC tolerance $\pm 20\%$, 10W $U_M = 250$ VAC Heater 100 to 240 VAC tolerance $\pm 10\%$ 50/60 Hz, 80W	
Output Type	Modbus RS485 or Modbus TCP over Ethernet (IO1)	$U_N = 30$ VDC $U_M = 250$ VAC N = nominal, M = maximum
	Relay Output (IO2 and/or IO3)	$U_N = 30$ VDC $U_M = 250$ VAC $I_N = 100$ mA DC/500 mA AC
	Configurable IO Current 4-20 mA Input/Output (Passive/Active) (IO2 and/or IO3)	$U_N = 30$ VDC $U_M = 250$ VAC
	Intrinsically Safe Output (Flow Switch)	$U_o = \pm 5.88$ V $I_o = 4.53$ mA $P_o = 6.6$ mW $C_o = 43$ μ F $L_o = 1.74$ H
Application Data		
Environmental Temperature Range/ Sample Cell Temperature Range	Storage (analyzer and analyzer on panel): -40 °C to 60 °C (-40 °F to 140 °F) Storage (analyzer with enclosed SCS ²): -30 °C to 60 °C (-22 °F to 140 °F) Operation: -20 °C to 60 °C (-4 °F to +140 °F)	
Environmental Relative Humidity	80% to temperatures up to 31 °C decreasing linearly to 50% RH at 40 °C	
Environment: Pollution Degree	Rated Type 4X and IP66 for outdoor use and considered pollution degree 2 internally	
Altitude	Up to 2,000 m	

1 Transient over-voltages according to Over Voltage Category II.

2 Sample Conditioning System.

Application Data	
Sample Inlet Pressure	140 to 310 kPaG (20 to 45 psi)
Measurement Ranges (H ₂ O)	0 to 500 ppmv (0 to 24 lb/mmscf) 0 to 2000 ppmv (0 to 95 lb/mmscf) 0 to 6000 ppmv (0 to 284 lb/mmscf)
Sample Cell Operating Pressure Range	800 to 1200 mbara (standard) 800 to 1700 mbara (optional)
Sample Flow Rate	0.5 to 1.0 slpm (1 to 2 scfh)
Bypass Flow Rate	0.5 to 1.0 slpm (1 to 2 scfh)
Area Classification	
J22 TDLAS Gas Analyzer	<p><u>cCSAus</u>: Ex db ia [ia Ga] op is IIC T4 Gb Class I, Zone 1, AEx db ia [ia Ga] op is IIC T4 Gb Class I, Division 1, Groups A, B, C, D, T4 Tambient = -20 °C to 60 °C</p> <p><u>ATEX/IECEX/UKEX</u>:  II 2G Ex db ia [ia Ga] ib op is IIC T4 Gb Tambient = -20 °C to 60 °C</p>
J22 TDLAS Gas Analyzer with SCS ³ on Panel	<p><u>cCSAus</u>: Ex db ia op is IIC T4 Gb Class I, Zone 1, AEx db ia op is IIC T4 Gb Class I, Division 1, Groups A, B, C, D, T4 Tambient = -20 °C to 60 °C</p> <p><u>ATEX/IECEX/UKEX</u>:  II 2G Ex db ia ib op is h IIC T4 Gb Tambient = -20 °C to 60 °C</p>

3 Sample Conditioning System.

Area Classification	
J22 TDLAS Gas Analyzer with Enclosed SCS ⁴	<p><u>cCSAus</u>: Ex db ia op is IIC T4 Gb Class I, Zone 1, AEx db ia op is IIC T4 Gb Class I, Division 1, Groups A, B, C, D, T4 Tambient = -20 °C to 60 °C</p> <p><u>ATEX/IECEX/UKEX</u>:  II 2G Ex db ia ib op is h IIC T4 Gb Tambient = -20 °C to 60 °C</p>
J22 TDLAS Gas Analyzer with Enclosed SCS ⁴ , with Heater	<p><u>cCSAus</u>: Ex db ia op is IIC T3 Gb Class I, Zone 1, AEx db ia op is IIC T3 Gb Class I, Division 1, Groups B, C, D, T3 Tambient = -20 °C to 60 °C</p> <p><u>ATEX/IECEX/UKEX</u>:  II 2G Ex db ia ib op is h IIC T3 Gb Tambient = -20 °C to 60 °C</p>
Ingress Protection	Type 4X, IP66

4 Sample Conditioning System.

Electrostatic discharge

The coating and the adhesive label is non-conducting and may generate an ignition capable level of electrostatic discharge under certain extreme conditions. The user should ensure that the equipment is not installed in a location where it may be subjected to external conditions, such as high pressure steam, which may cause a build-up of electrostatic charges on non-conducting surfaces. To clean the equipment, use only a damp cloth.

Chemical compatibility

Never use vinyl acetate or acetone or other organic solvents to clean the analyzer housing or labels.

3 Equipment Installation



The safety of the analyzer is the responsibility of the installer and the organization he/she represents.

Use appropriate protective safety equipment as recommended by local safety codes and practices (e.g., hard hat, steel-toe shoes, gloves, etc.) and exercise caution particularly when installing equipment at a height (i.e., one (1) meter above ground).

**Required Hardware/
Tools**

- Mounting hardware (e.g., spring nuts, machine screws and nuts to fit the size of the mounting hole)



Mounting hardware used for wall-mounting the J22 must be able to support four times the weight of the approximately 19 kg (40 lbs) to 43 kg (95 lbs) depending on configuration).

- Stainless steel tubing (electro-polished seamless stainless steel tubing, 6 mm [1/4 in.] O.D. x 0.1 mm [0.035 in.] wall thickness is recommended, depending on configuration.)
- Stainless steel 12 mm (1/2 in.) fittings for optional enclosure purge.

Tools symbols

Symbol	Description	Symbol	Description
	T20 Torx screwdriver		3 mm Flat blade screwdriver
	24 mm Open-ended wrench		#2 Phillips screwdriver
	Tape measure		10 mm Hex driver
	Pencil		Level

**Lifting/Carrying the
Analyzer**

The analyzer should be lifted and/or moved by a minimum of two individuals.

Never lift the analyzer by the controller enclosure or conduit runs, cable glands, cables, tubing or any other part protruding through the enclosure wall or edge of the panel or enclosure. Always carry the load using the following points/method shown under Mounting the Analyzer.

Mounting the Analyzer

The J22 is manufactured for wall- or post-mount installations. Refer to the layout diagrams mounting dimensions and additional instructions in the Operator's Manual.



Mounting hardware used for mounting the J22 TDLAS Gas Analyzer must be able to support four times the weight of the instrument (approximately 16 kg (36 lbs) to 43 kg (95 lbs) depending on configuration).

WARNING

The J22 analyzer is designed for operation within the specified ambient temperature range. Intense sun exposure in some areas may impact the temperature inside the analyzer controller, therefore, installing a sunshade or canopy over the analyzer for outdoor installations in cases where the rated temperature range could be exceeded is recommended.


WARNING

When mounting the analyzer, be sure to position the instrument so that it is not difficult to operate adjacent devices.

1. Install the bottom two mounting bolts to the mounting frame or wall. Do not fully tighten the bolts. Leave approximately a 10 mm (1/4 in.) gap to slide the analyzer mounting tabs onto the bottom bolts.
2. Lift the analyzer vertically at the points shown in the figure below.


WARNING

Distribute the weight evenly among personnel to avoid injury.

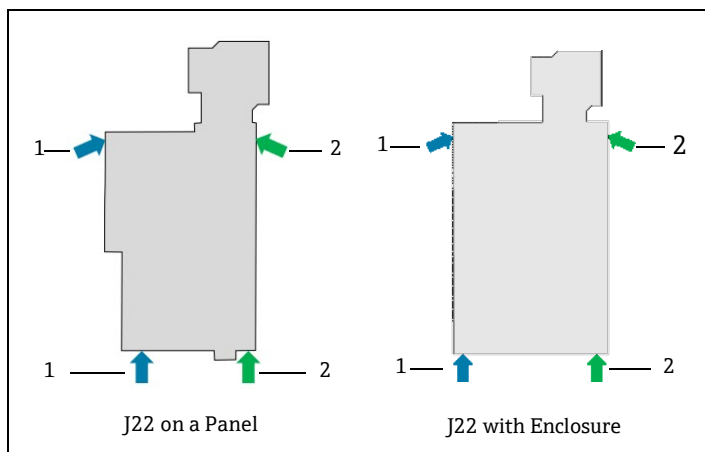

- 1 Person one hand positions
- 2 Person two hand positions

3. Lift the analyzer onto the bottom bolts and **slide the** slotted bottom mounting tabs over the bolts. Allow the two bottom bolts to take the weight of the analyzer while stabilizing in a vertical orientation.

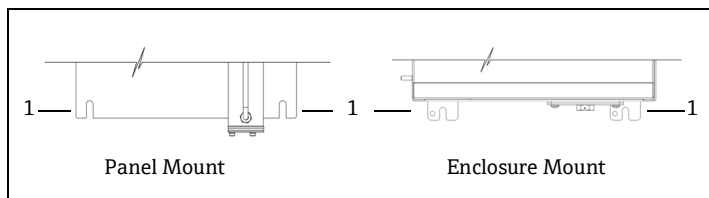

1 Slotted tabs

4. Tilt the analyzer and push it towards the mounting frame or wall while aligning the two top bolts.
5. While one person exerts the necessary pressure to hold the analyzer to the frame or wall, the second person secures the two top bolts.
6. Tighten all four bolts.

Opening/Closing the Analyzer Enclosure



Hazardous voltage and risk of electric shock. Failure to properly ground the analyzer may create a high-voltage shock hazard.

Protective Chassis and Ground Connections

Before connecting any electrical signal or power, the protective and chassis grounds must be connected.

- Protective and chassis grounds must be of equal or greater size than any other current-carrying conductors, including the heater located in the sample conditioning system
- Protective and chassis grounds to remain connected until all other wiring is removed
- Protective grounding wire current carrying capacity must be at minimum the same as the main supply
- Earth bonding/chassis ground shall be at least 6 mm² (10 AWG)


Protective ground cable

- Analyzer: 2.1 mm² (14 AWG)
- Enclosure: 6 mm² (10 AWG)

The grounding impedance must be less than 1 Ω.

Ground connections

Analyzer

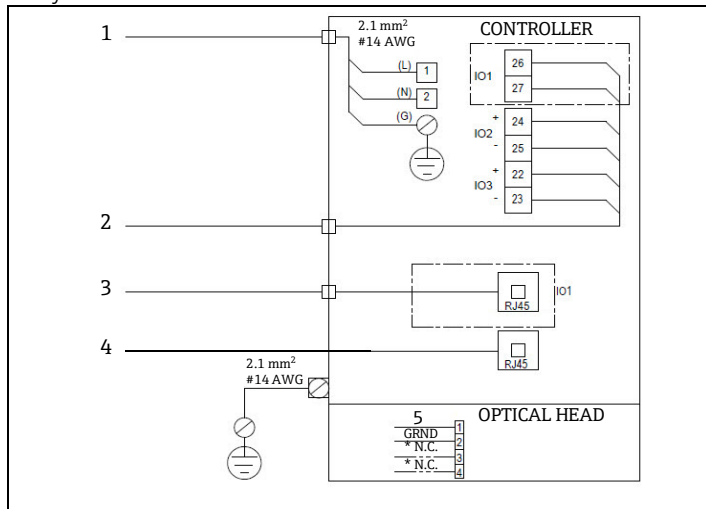

- 1 AC 100 to 240 VAC $\pm 10\%$; DC 24 VDC $\pm 20\%$
- 2 IO options: Modbus RTU, 4-20 mA/Status out, Relay
- 3 10/100 Ethernet (optional), Network option Modbus TCP
- 4 Connection to the Service port shall only be permitted temporarily by trained personnel for test, repair or overhaul of the equipment, and if the area where the equipment is installed is known to be non-hazardous
- 5 Flow switch connection




Terminals 26 and 27 are used for Modbus RTU (RS485) only.
Terminals 26 and 27 are replaced by an RJ45 connector for Modbus TCP.



*N.C. is used for "No connection".

Enclosure, Sample Conditioning System

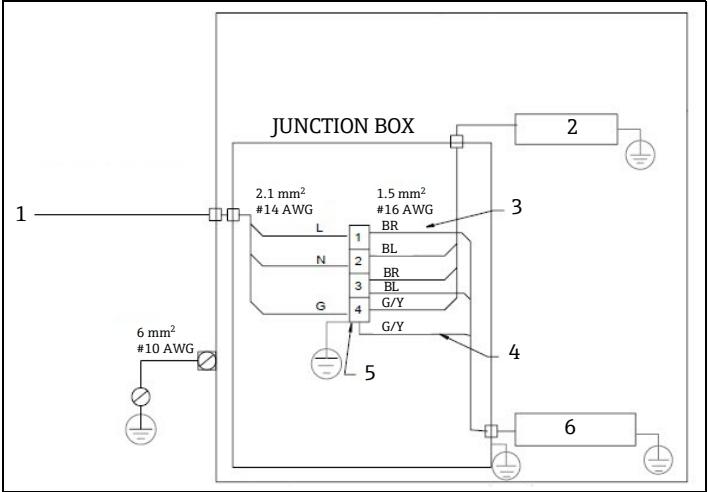

- 1 100 to 240 VAC \pm 10%, 50/60 HZ; main power
- 2 Heater
- 3 Blue wire is used in thermostat phase, no ground wire
- 4 Ground wire is not installed for CSA thermostat. Only applies to ATEX version.
- 5 Use copper wire only
- 6 Thermostat
- BL Blue wire
- BR Brown wire
- G/Y Green/yellow wire

Electrical Wiring Requirements



Field wiring (Power and Signal) shall be accomplished using wiring methods approved for hazardous locations as per the Canadian Electrical Code (CEC) Appendix J, the National Electric Code (NEC) Article 501 or 505 and IEC 60079-14. The installer is responsible for complying with all local installation codes. **Use copper conductors only.**


For models of the J22 TDLAS Gas Analyzer with SCS mounted within an enclosure, the inner sheath of the supply cable for the heater circuit shall be sheathed with thermoplastic, thermosetting, or elastomeric material. It shall be circular and compact. Any bedding or sheath shall be extruded. Fillers, if any, shall be non-hygroscopic.


Wire temperature rating and torque


- -40 °C to 105 °C
- Terminal block screw torque: 1.2 N m (10 in-lbf)

Cable entries


After installing all interconnecting wiring or cabling, make sure any remaining conduit or cable entries are plugged with certified accessories according to the intended use of the product.

 *Thread lubricant must be applied on all conduit hub threaded connections. Using Syntheses Glep1 or equivalent lubricant on all conduit screw thread is recommended.*

 **WARNING** *Conduit seals and glands specific to the application should be used where appropriate in compliance with local regulations.*

 *The user shall install a suitable equipment certified seal within 18 in. of the controller enclosure entrance. On models of the J22 TDLAS Gas Analyzer with enclosed SCS featuring an optional heater, a suitable equipment seal shall be installed within 2 in. of the outer enclosure wall of the heating circuit.*

Threaded entries

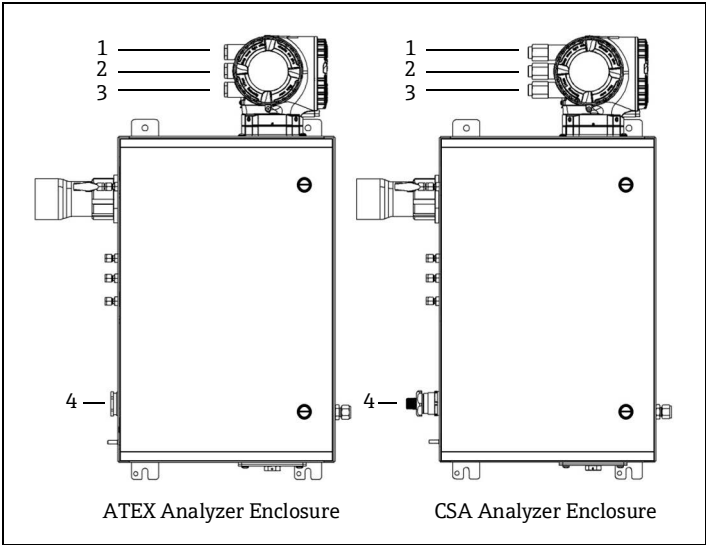

Cable Entry	Description	ATEX, IECEx	cCSAus
1	Controller power	M20 x 1.5	1/2 in. NPTF

Cable Entry	Description	ATEX, IECEx	cCSAus
2	Modbus output	M20 x 1.5	1/2 in. NPTF
3	(2) Configurable IO	M20 x 1.5	1/2 in. NPTF
4	Heater power (optional)	M25 x 1.5	1/2 in. NPTM



Threaded entry locations for the panel configuration are the same as shown for the enclosed sample system above.

Cables Type

Ethernet/IP

The standard ANSI/TIA/EIA-568-B.2 Annex specifies CAT5 as the minimum used for Ethernet/IP. CAT5e and CAT 6 are recommended.

Flow Switch Connection Requirements

The J22 TDLAS Gas Analyzer can be offered with a variable flow meter equipped with an optional mechanical display and reed contact to measure the volume flow of flammable and non-flammable gases.

Conditions of use

Installation shall be in accordance with the National Electric Code® NFPA 70, Article 500 to 510, ANSI/ISA-RP 12.06.01, IEC 60079-14 and Canadian Electrical Code for Canada.

Installation:

Run shielded interconnection cable with shield connected to FM approved associated apparatus ground.

The maximum temperature of terminals, cable glands and wires should be greater than 60 °C dependent of ambient and product temperature. The variable area flow meter with coated parts shall be installed and maintained such that the risk of electrostatic discharge is minimized.

**Connection Values:
Signal Circuits**

Terminal assignment

Controller: supply voltage, outputs

Input Supply Voltage		Input/Output 1		Input/Output 2		Input/Output 3	
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)
		Modbus RS485 only ¹⁾		Device-specific terminal assignment: refer to adhesive label on terminal cover			

1) Terminals 26 and 27 are replaced by an RJ45 connector for Modbus TCP/IP.

Safety-related values

Refer to “Analyzer Technical Specifications” on page 6.

Modbus interface cable specification

Cable type	A
Characteristic impedance	135 to 165Ω at a measuring frequency of 3 to 20 MHz
Cable capacitance	< 30 pF/m
Wire cross-section	> 0.34 mm ² (22 AWG)
Cable type	Twisted pairs
Loop resistance	≤ 110Ω/km

Electrical Circuit Breakers

The main electronic assembly shall be protected by an overcurrent protection rated for 10 amp or less.



The breaker shall not interrupt the protective earth conductor.



If the breaker in the customer-provided power distribution panel or switch is the primary means of disconnecting the power from the analyzer, locate the analyzer so that the power distribution panel is in close proximity to the equipment and within easy reach of the operator.

Connecting the Gas Supply

Consult the layout and flow diagrams in the system drawings in the Operator’s Manual for supply and return port locations. All work must be performed by technicians qualified in pneumatic tubing.



Process samples may contain hazardous material in potentially flammable and/or toxic concentrations. Personnel should have a thorough knowledge and understanding of the physical properties and safety precautions for the sample contents before connecting the gas supply.

Sample System Heater

The purpose of the optional heater is to maintain the temperature of the sample system to avoid condensation in cold weather.

Manufacturer	Intertec
Power	AC 100-240 V tolerance ± 10%, 50/60 Hz, 80W
Ingress Protection	IP 68

4 Equipment Operation



The safety of the analyzer is the responsibility of the installer and the organization he/she represents.



WARNING

Mounting hardware used for wall-mounting the J22 must be able to support four times the weight of the approximately 19 kg (40 lbs) to 43 kg (95 lbs) depending on configuration).

Operating Controls

The J22 is operated using the optical touch pad. Basic operating parameters are provided in the Operator's manual → 1.

Commissioning

1. Power system on.
2. Set flow rates and pressure for system as specified in the system drawings provided in the Operator's manual.
3. Ensure sample vent has an unrestricted connection to atmosphere or flare, as specified.



The temperature of the process medium shall be within the ambient temperature rating of the equipment.



WARNING

Do not exceed specified pressure setting or equipment damage may occur.

Decommissioning

Intermittent operation

If the analyzer is to be stored or shut down for a short time period, follow the instructions for isolating the measurement cell and sample conditioning system (SCS).

1. Shut off the process gas flow.
2. Allow all residual gas to dissipate from the lines.
3. Connect a nitrogen (N₂) purge supply, regulated to the specified sample supply pressure, to the sample supply port.
4. Confirm that any valves controlling the sample flow effluent to the low pressure flare or atmospheric vent are open.
5. Turn on the purge supply to purge the system and clear any residual process gases.
6. Turn off the purge supply.
7. Allow all residual gas to dissipate from the lines.
8. Close any valves controlling the sample flow effluent to the low pressure flare or atmospheric vent.
9. Disconnect power to the system.



Confirm the power source is disconnected at the switch or circuit breaker. Make sure the switch or breaker is in the "OFF" position and locked with a padlock.

10. Confirm all digital/analog signals are turned off at the location from which they are being monitored.
11. Disconnect the phase and neutral wires from the analyzer.
12. Disconnect the protective ground wire from the analyzer system.
13. Disconnect all tubing and signal connections.
14. Cap all inlets and outlets to prevent foreign material such as dust or water from entering the system).
15. Ensure the analyzer is free from dust, oils or any foreign material. Follow instructions found in "To clean the J22 exterior".
16. Pack the equipment in the original packaging in which it was shipped, if available. If the original packaging material is no longer available, the equipment should be adequately secured (to prevent excessive shock or vibration).
17. If returning the analyzer to the factory, complete the Decontamination Form provided by Endress+Hauser and attach to the outside of the shipping package as instructed before shipping. Refer to **"Service Contact" on page 25**.

5 Maintenance and Service



WARNING

Mounting hardware used for wall-mounting the J22 must be able to support four times the weight of the approximately 19 kg (40 lbs) to 43 kg (95 lbs) depending on configuration).

Cleaning and Decontamination

To clean the J22 exterior

The housing should be cleaned only with a damp cloth to avoid electrostatic discharge.



WARNING

Never use vinyl acetate, acetone or other organic solvents to clean the analyzer housing or labels.

Troubleshooting and Repairs

Any repairs carried out by the customer or on behalf of the customer must be recorded in a site dossier and kept available for inspectors.

For more information on system repairs and replacements → 1.

Cleaning the cell mirror

If contamination makes its way into the cell and accumulates on the internal optics, a **DC spectrum power range exceeded** fault will result. If mirror contamination is suspected, contact Service before attempting to clean the mirrors. If advised to do so, use the following procedure.



WARNING

This procedure should be used ONLY when necessary and is not part of routine maintenance. To avoid compromising the system warranty, contact Service before cleaning mirrors → 25.



Disregard steps 4 and 16 for analyzers without an enclosed Sample Conditioning System (SCS).



INVISIBLE LASER RADIATION - *The sample cell assembly contains a low power, 35 mW maximum, CW Class 3b invisible laser with a wavelength between 750 to 3000 nm. Never open the sample cell flanges or the optical assembly unless the power is turned off.*

Tools and materials

- Lens cleaning cloth (Cole Parmer® EW-33677-00 TEXWIPE® Alphawipe® Low-Particulate Clean Room Wipes or equivalent)
- Reagent-grade isopropyl alcohol (ColeParmer® EW-88361-80 or equivalent)

- Small drop dispenser bottle (Nalgene® 2414 FEP Drop Dispenser Bottle or equivalent)
 - Acetone-impenetrable gloves (North NOR CE412W Nitrile Chemsoft™ CE Clean room Gloves or equivalent)
 - Hemostat (Fisherbrand™ 13-812-24 Rochester-Pean Serrated Forceps)
 - Bulb blower or dry compressed air/nitrogen
 - Torque wrench
 - 3 mm Hex driver
 - Non-outgassing grease
 - Flashlight
1. Power down the analyzer.
 2. Isolate the SCS from the process sample tap.

**WARNING**


All valves, regulators, switches, etc. should be operated in accordance with site lock-out/tag-out procedures.

3. If possible, purge the system with nitrogen for 10 minutes.

**WARNING**

Process samples may contain hazardous material in potentially flammable and/or toxic concentrations. Personnel should have a thorough knowledge and understanding of the physical properties and safety precautions for the sample contents before operating the SCS.

4. On the underside of the SCS enclosure, remove the plate covering the measurement cell located inside the enclosure and set aside. Retain screws.

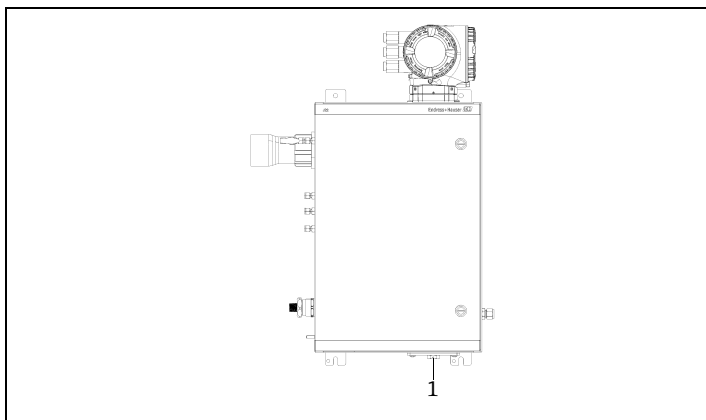

1 Measurement cell plate on underside of SCS enclosure



Careful marking of the mirror orientation is critical to restoring system performance upon reassembly after cleaning.



INVISIBLE LASER RADIATION - The sample cell assembly contains a low power, 35 mW maximum, CW Class 3b invisible laser with a wavelength between 750 to 3000 nm. Never open the sample cell flanges or the optical assembly unless the power is turned off.

5. Gently remove the mirror assembly from the cell using a 3 mm hex driver to remove the socket head cap screws and set on a clean, stable and flat surface.



WARNING Always handle the optical assembly by the edge of the mount. Never touch the coated surfaces of the mirror.

6. Look inside the sample cell at the top window using a flashlight to ensure that there is no contamination on the top window.
7. Put on clean acetone-impenetrable gloves.
8. Double-fold a clean sheet of lens cleaning cloth and clamp near and along the fold with the hemostats or fingers to form a "brush."
9. Place a few drops of isopropyl alcohol onto the mirror and rotate the mirror to spread the liquid evenly across the mirror surface.
10. With gentle, uniform pressure, wipe the mirror from one edge to the other with the cleaning cloth only once and only in one direction to remove the contamination. Discard the cloth.



WARNING Never rub an optical surface, especially with dry tissues, as this can mar or scratch the coated surface.

11. Repeat with a clean sheet of lens cleaning cloth to remove the streak left by the first wipe. Repeat, if necessary, until there is no visible contamination on the mirror.
12. Replace the O-ring adding a very thin layer of grease. Ensure it is properly seated.
13. Carefully replace the mirror assembly onto the cell (it is not necessary to maintain the original orientation).
14. Tighten the socket head cap screws evenly with a torque wrench to 3.5 Nm (30 in-lb).
15. Replace the plate on the outside of the SCS enclosure.

Replacing the membrane separator filter

Make sure that a membrane separator filter is operating normally. If liquid enters the cell and accumulates on the internal optics, a **DC spectrum power range exceeded** fault will result.

1. Close the sample supply valve.
2. Unscrew the cap from the membrane separator.

If the membrane filter is dry:

3. Check if there are any contaminants or discoloring of the white membrane.
If yes, the filter should be replaced.
4. Remove the O-ring and replace the membrane filter.
5. Replace the O-ring on top of the membrane filter.
6. Place the cap back onto the membrane separator and tighten.
7. Check upstream of the membrane for liquid contamination and clean and dry out before reopening the sample supply valve.

If liquid or contaminants are detected on the filter:

3. Drain any liquids and clean with isopropyl alcohol.
4. Clean any liquids or contaminants from the base of the membrane separator.
5. Replace the filter and the O-ring.
6. Place the cap onto the membrane separator and hand tighten.
7. Check upstream of the membrane for liquid contamination and clean and dry out before reopening the sample supply valve.

Enclosure purge (optional)



The optional enclosure purge is typically elected when the sample gas contains high concentrations of H_2S .

When maintenance of the J22 is required, follow one of the two methods described below prior to opening the enclosure door.

With a gas sensor:



Ensure an appropriate sensor is used based on the toxic components in the process gas stream.

1. Allow the sample gas to continue flowing through the system.
2. Open the tee fitting cap on the exhaust port on the lower right side of the enclosure and insert a sensor to determine if there is H_2S inside the enclosure.
3. If no hazardous gas is detected, proceed with opening the enclosure door.
4. If hazardous gas is detected, follow the instructions below for purging the enclosure.

If no appropriate gas sensor is available:

1. Turn off the sample gas to the system.
2. Connect the purge gas to the purge inlet on the upper right side of the enclosure.
3. Open the exhaust on the bottom right side of the enclosure and connect a piece of tubing that vents to safe area.

4. Input the purge gas at 5 liters per minute.
5. Operate the purge for 22 minutes.

Sample system purge (optional)

1. Shut off gas to the analyzer.
2. Ensure the vent and bypass, if present, are open.
3. Connect the purge gas to 'sample purge in' port.
4. Switch the gas select valve from 'sample in' to 'purge in'.
5. Set the flow rate to 1 liter per minute and run the purge for at least 10 minutes for safety.

Repair verification

When repairs have been completed correctly, alarms will clear from the system.




Residual risk: Some capacitors may remain charged with high voltage in the case of a single fault. Allow 10 minutes before controller covers are opened.

Power termination covers

Confirm the termination cover is closed before initiating operation or after a repair event. Should the cover become damaged, it must be replaced to avoid potential safety risk.

Spare Parts

All parts required for operation of the J22 TDLAS Gas Analyzer must be supplied by Endress+Hauser or an authorized agent. Refer to the J22 TDLAS Gas Analyzer Operating Instructions →  1 for a complete list of available spare parts.

Service Contact

For Service, refer to our website (<https://www.endress.com/contact>) for the list of local sales channels in your area.

www.endress.com
