

Description of Device Parameters

Deltabar PMD55B

Differential pressure measurement
PROFINET with Ethernet-APL

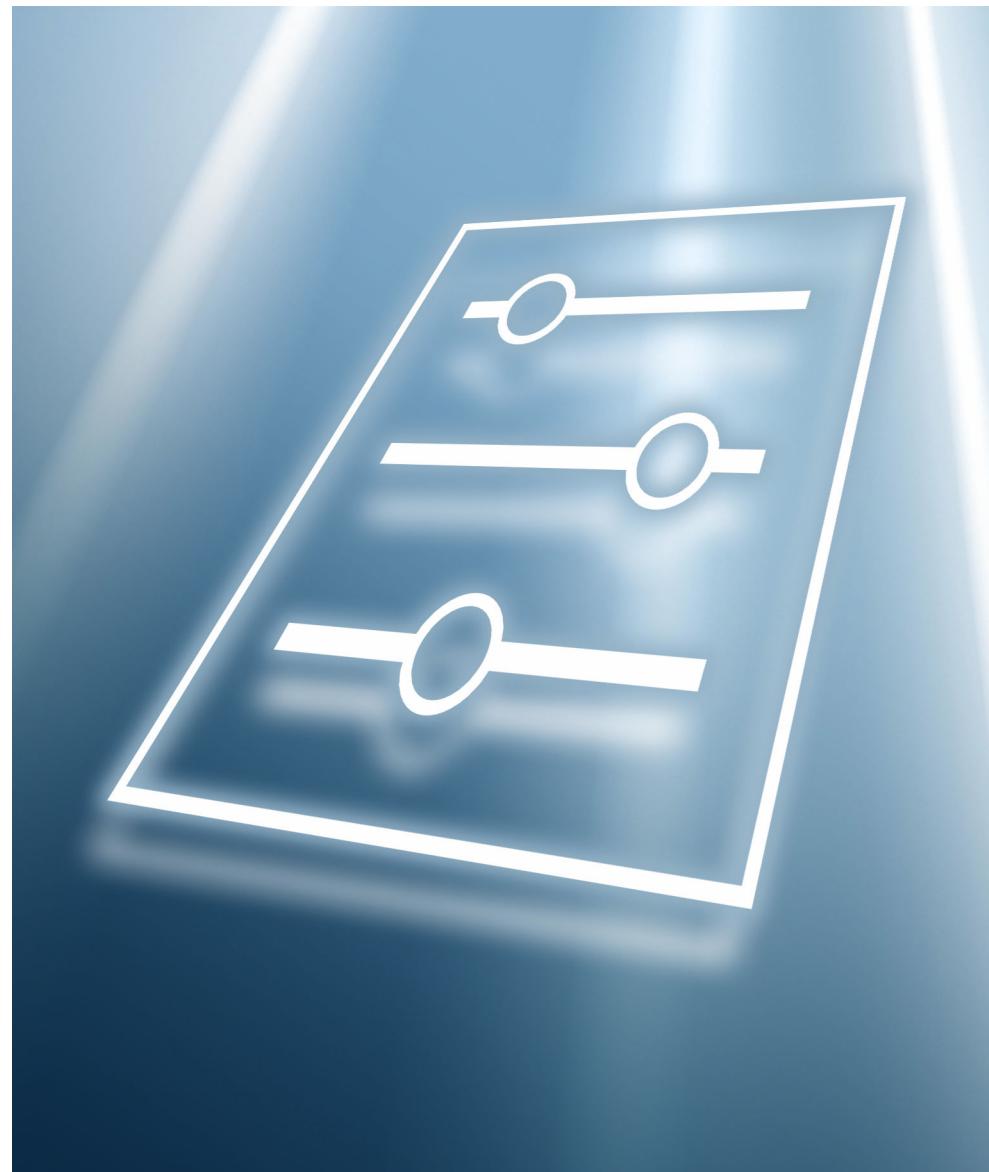


Table of contents

1	About this document	4
1.1	Document function	4
1.2	Target group	4
1.3	Using this document	4
1.4	Symbols used	5
1.5	Documentation	5
2	Overview of the operating menu	6
3	Description of device parameters ...	19
3.1	User navigation	19
3.2	"Device information" menu	22
3.3	"Guidance" menu	23
3.4	"Diagnostics" menu	38
3.5	"Application" menu	54
3.6	"System" menu	72
Index	96	

1 About this document

1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters. The document provides a detailed explanation of each individual parameter.

Performance of tasks that require detailed knowledge of the functioning of the device:

- Commissioning measurements under difficult conditions
- Optimal adaptation of the measurement to difficult conditions
- Detailed configuration of the communication interface
- Error diagnostics in difficult cases

1.2 Target group

The document is aimed at specialists who work with the device over the entire life cycle and perform specific configurations.

1.3 Using this document

1.3.1 Information on the document structure

This document lists the submenus and parameters that are available when the "Maintenance" option user role is enabled.

 For the operating concept of the operating menus, see the Operating Instructions.

1.3.2 Structure of a parameter description

The individual parts of a parameter description are described in the following section:

- Navigation: Navigation path to the parameter via the local display
- Prerequisite: The parameter is only available under these specific conditions
- Description: Description of the parameter function
- Selection: List of the individual options for the parameter
- User entry: Input range for the parameter
- User interface: Display value/data of the parameter
- Additional information:
 - On individual options
 - On display values/data
 - On the input range
 - On the factory setting
 - On the parameter function

1.4 Symbols used

1.4.1 Symbols for certain types of Information

Additional information: 

Reference to documentation: 

Operation via local display: 

Operation via operating tool: 

Write-protected parameter: 

1.5 Documentation

1.5.1 Standard documentation

Operating Instructions

 The Operating Instructions are available via the Internet: www.endress.com → Download

1.5.2 Supplementary device-dependent documentation

Special Documentation

 The Special Documentation is available via the Internet: www.endress.com → Download

2 Overview of the operating menu

Navigation

Operating tool

Device information	→ 22
Status signal	→ 22
Pressure	→ 22
Scaled variable	→ 22
Do not show this message again	→ 22
Guidance	→ 19
► Commissioning	→ 23
► Device identification	→ 23
Device tag	→ 23
Device name	→ 23
Serial number	→ 23
Extended order code 1	→ 24
Extended order code 2	→ 24
Extended order code 3	→ 24
► Device identification	→ 25
Locking status	→ 25
► Device identification	→ 26
Time zone	→ 26
Date/time	→ 27
► Device identification	→ 27
PROFINET device name	→ 27
PROFINET device name	→ 27
IP address	→ 27

Descriptor	→ 28
MAC address	→ 28
Device ID	→ 28
Manufacturer ID	→ 28
► Measurement adjustments	→ 29
Damping	→ 29
Assign scaled variable?	→ 29
► Measurement adjustments	→ 29
Pressure unit	→ 29
Temperature unit	→ 30
► Measurement adjustments	→ 30
Pressure unit	→ 30
Scaled variable unit	→ 31
Free text	→ 31
Temperature unit	→ 32
► Measurement adjustments	→ 32
Zero adjustment	→ 32
Pressure	→ 33
► Output settings	→ 33
Scaled variable transfer function	→ 33
Low flow cut off	→ 33
► Output settings	→ 34
Lower Range Limit	→ 34
Upper Range Limit	→ 34
Minimum span	→ 34

▶ Output settings	→ 34
Pressure	→ 34
Scaled variable	→ 35
▶ Output settings	→ 35
Scaled variable transfer function	→ 35
Pressure value 1	→ 35
Scaled variable value 1	→ 36
Pressure value 2	→ 36
Scaled variable value 2	→ 36
Lower Range Limit	→ 36
Upper Range Limit	→ 36
Minimum span	→ 37
▶ Output settings	→ 37
Assign process variable	→ 37
Diagnostics	→ 38
▶ Active diagnostics	→ 38
Active diagnostics	→ 38
Timestamp	→ 38
Previous diagnostics	→ 39

Timestamp	→ 39
Operating time from restart	→ 39
Operating time	→ 40
► Event logbook	→ 40
Filter options	→ 40
► Minimum/maximum values	→ 41
Pressure min	→ 41
Counter limit underruns sensor Pmin	→ 41
Counter underruns of user limit Pmin	→ 41
Minimum sensor temperature	→ 41
Counter limit underruns sensor Tmin	→ 42
Counter underruns of user limit Tmin	→ 42
Minimum terminal voltage	→ 42
Minimum electronics temperature	→ 42
Reset user defined counters P and T	→ 42
Pressure max	→ 43
Counter limit overruns sensor Pmax	→ 43
Counter overruns of user limit Pmax	→ 43
Maximum sensor temperature	→ 43
Counter limit overruns sensor Tmax	→ 44
Counter overruns of user limit Tmax	→ 44
Maximum terminal voltage	→ 44
Maximum electronics temperature	→ 44
► Simulation	→ 45
Simulation	→ 45

Diagnostic event simulation	→ 45
Value pressure simulation	→ 45
► Diagnostic settings	→ 46
► Properties	→ 46
SSD Out of range delay time	→ 46
SSD Monitoring delay time	→ 46
500 Process alert pressure	→ 46
Low alert value	→ 46
High alert value	→ 47
501 Process alert scaled variable	→ 47
Low alert value	→ 47
High alert value	→ 47
User temperature process alert	→ 48
Low alert value	→ 48
High alert value	→ 48
► Configuration	→ 48
► Configuration	→ 48
436 Diagnostic behavior	→ 48
436 Event category	→ 49
500 Diagnostic behavior	→ 49
500 Event category	→ 49
500 Event category	→ 49

500 Event category	→ 49
500 Event category	→ 49
501 Diagnostic behavior	→ 50
501 Event category	→ 50
502 Diagnostic behavior	→ 50
502 Event category	→ 51
► Process	→ 51
Sensor pressure range behavior	→ 51
Sensor pressure range behavior	→ 51

841 Event category	→ 51
900 Event category	→ 52
900 Diagnostic behavior	→ 52
906 Event category	→ 53
Application	→ 54
► Measured values	→ 54
Pressure	→ 54
Scaled variable	→ 54
Sensor temperature	→ 54
Terminal voltage 1	→ 54
Electronics temperature	→ 54

► Measuring units	→ 55
Pressure unit	→ 55
Decimal places pressure	→ 55
Temperature unit	→ 55
Scaled variable unit	→ 56
Free text	→ 57
Decimal places scaled variable	→ 57
► PROFINET	→ 66
 ► Configuration	→ 66
PROFINET device name	→ 66
PROFINET device name	→ 66
Parameter change acknowledge mode	→ 67
Acknowledge parameter change	→ 67
Descriptor	→ 67
 ► Analog input	→ 67
 ► Analog input 1 to 7	→ 67
Process value	→ 67
Assign process variable	→ 68
Damping	→ 68
 ► Binary input	→ 68
 ► Binary input 1 to 2	→ 68
Controller input value	→ 68
 ► Binary output	→ 69
Set point value	→ 69
BO block output value	→ 69

Failure behavior	→ 69
Failure behavior delay	→ 69
Fixed value	→ 70
► Information	→ 70
Device ID	→ 70
PA profile version	→ 70
► Application relation	→ 70
AR state	→ 70
MAC address IO controller	→ 71
MAC address backup IO controller	→ 71
IP address IO controller	→ 71
IP address backup IO controller	→ 71
System	→ 72
► Device management	→ 72
Device tag	→ 72
Locking status	→ 72
Configuration counter	→ 73
Reset device	→ 73
► User management	→ 74
User role	→ 74
Password	→ 74
Enter access code	→ 74
Status password entry	→ 74
New password	→ 75
Confirm new password	→ 75

Status password entry	→ 74
Old password	→ 75
New password	→ 75
Confirm new password	→ 75
Status password entry	→ 74
Reset password	→ 75
Status password entry	→ 74
Old password	→ 75
Status password entry	→ 74
► Connectivity	→ 76
► Interfaces	→ 76
Display operation	→ 76
Web server functionality	→ 76
Bluetooth activation	→ 76
Service (UART-CDI)	→ 76
► Ethernet	→ 77
MAC address	→ 77
IP address	→ 77
Subnet mask	→ 77
Default gateway	→ 77
Service IP active	→ 78
Interface connection status	→ 78
Interface speed	→ 78
Duplex status	→ 78
Auto negotiation status	→ 78

Received packet number	→ 79
Sent packet number	→ 79
Number of failed received packets	→ 79
Number of failed sent packets	→ 79
Signal to noise ratio	→ 79
Number of failed received packets	→ 79
Active TCP connections	→ 80
Supported TCP connections	→ 80
TCP connection requests	→ 80
TCP connection timeouts	→ 80
Number of TCP connections closed	→ 80
Number of received TCP packets	→ 80
TCP sent packet number	→ 81
Number of TCP failed received packets	→ 81
Available UDP ports	→ 81
UDP received packet number	→ 81
UDP sent packet number	→ 81
Number of UDP failed received packets	→ 81
► Display	→ 82
Language	→ 82
Format display	→ 82
Value 1 display	→ 83
Value 2 display	→ 83
Value 3 display	→ 84

Value 4 display	→ 84
Contrast display	→ 85
► Date/time	→ 85
Date/time	→ 85
Time zone	→ 85
Enable NTP	→ 86
NTP server address	→ 87
Clock synchronized	→ 87
► Geolocation	→ 87
Location description	→ 87
Longitude	→ 87
Latitude	→ 88
Altitude	→ 88
► Information	→ 88
Device name	→ 88
Manufacturer	→ 88
Serial number	→ 89
Order code	→ 89
Firmware version	→ 89
Hardware version	→ 90
Extended order code 1	→ 90
Extended order code 2	→ 90

Extended order code 3	→ 90
Checksum	→ 91
► Software configuration	→ 91
Activate SW option	→ 91
Software option overview	→ 92
► Firmware update	→ 92
► Start update	→ 92
I have read the warning texts.	→ 93
► Device information	→ 93
Device tag	→ 93
Device name	→ 94
Package version	→ 94
► Select file	→ 94
File check status	→ 94
► Performing verification	→ 95
File validation status	→ 95
► Finish	→ 95
I have read the warning texts.	→ 95

3 Description of device parameters

In the following section, the parameters are listed according to the menu structure of the operating tool.

The operating menu is dynamic and adapts the choice of parameters to the selected options.

3.1 User navigation

The Guidance main menu contains functions which enable users to perform basic tasks swiftly, e.g. commissioning.

These are primarily guided wizards and cross-subject special functions.

Navigation

  Guidance

3.1.1 Overview of the operating menu

User navigation

- Commissioning (→  23)
- Import/Export →  20
- Compare →  21

3.1.2 Commissioning

Run this wizard to put the device into operation. Enter the appropriate value in each parameter or select the appropriate option.

 If the wizard is canceled before all the necessary parameters have been configured, any settings already made are saved. For this reason, the device may then be in an undefined state!

In such situations, it is advisable to reset the device to the factory default settings.

The following parameters are configured in the Commissioning wizard:

- **Device identification** (→ [23](#))
This page summarizes the most important data characterizing the device. Some of the parameters can be edited, others are displayed for information only.
 - Device tag (→ [23](#))
 - Device name (→ [23](#))
 - Serial number (→ [23](#))
 - Extended order code 1 (→ [24](#))
 - Extended order code 2 (→ [24](#))
 - Extended order code 3 (→ [24](#))
 - Locking status (→ [25](#))
 - Time zone (→ [26](#))
 - Date/time (→ [27](#))
 - PROFINET device name (→ [27](#))
 - IP address (→ [27](#))
 - Descriptor (→ [28](#))
 - MAC address (→ [28](#))
 - Device ID (→ [28](#))
 - Manufacturer ID (→ [28](#))
- **Measurement adjustments** (→ [29](#))
 - Damping (→ [29](#))
 - Assign scaled variable? (→ [29](#))
 - Pressure unit (→ [29](#))
 - Temperature unit (→ [30](#))
 - Scaled variable unit (→ [31](#))
 - Free text (→ [31](#))
 - Temperature unit (→ [30](#))
 - Temperature unit (→ [30](#))
 - Zero adjustment (→ [32](#))
 - Pressure (→ [22](#))
- **Output settings** (→ [33](#))
 - Scaled variable transfer function (→ [33](#))
 - Low flow cut off (→ [33](#))
 - Lower Range Limit (→ [34](#))
 - Upper Range Limit (→ [34](#))
 - Minimum span (→ [34](#))
 - Pressure (→ [34](#))
 - Scaled variable (→ [35](#))
 - Pressure value 1 (→ [35](#))
 - Scaled variable value 1 (→ [36](#))
 - Pressure value 2 (→ [36](#))
 - Scaled variable value 2 (→ [36](#))
 - Assign process variable (→ [37](#))

3.1.3 Import / Export

Save / Load

- **Save:** The device settings can be saved in a .deh file.
- **Load:** The device settings saved in a .deh file can be written to the device.

Create documentation

- Device documentation can be saved in PDF format under "Create documentation".
- This documentation contains the following general device information:
 - Information on device parameters
 - Information on linearization
 - Echo curves
 - Event list
 - Diagnostic list

3.1.4 Compare

Compare datasets

This function can be used to compare the following datasets:

- Datasets in the .deh file format from the import/export function
- Datasets with the configuration currently in the device

3.2 "Device information" menu

Navigation  Device info

Status signal

Navigation  Device info → Status signal

User interface

- OK
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- ---
- Not categorized

Pressure

Navigation  Device info → Pressure

Scaled variable

Navigation  Device info → Scaled variable

User interface Signed floating-point number

Do not show this message again

Navigation  Device info → Don't show again

Selection Yes

3.3 "Guidance" menu

Navigation

  Guidance

3.3.1 "Commissioning" wizard

Navigation

  Guidance → Commissioning

"Device identification" wizard

Navigation

  Guidance → Commissioning → Device ident.

Device tag

Navigation

 Guidance → Commissioning → Device ident. → Device tag

Description

Enter a name for the measuring point to identify the measuring device in the plant

User entry

Character string comprising numbers, letters and special characters (32)

Device name

Navigation

 Guidance → Commissioning → Device ident. → Device name

Description

Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.

User interface

Max. 32 characters such as letters or numbers.

Serial number

Navigation

 Guidance → Commissioning → Device ident. → Serial number

Description

Displays the serial number of the measuring device.

 The number can be found on the nameplate of the sensor and transmitter.

User interface

Max. 11-digit character string comprising letters and numbers.

Additional information*Description***Uses of the serial number**

- To identify the measuring device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the measuring device using the Device Viewer:
www.endress.com/deviceviewer

Extended order code 1**Navigation**

Guidance → Commissioning → Device ident. → Ext. order cd. 1

Description

The extended order code is an alphanumeric code containing all information to identify the device and its options.

User interface

Character string

Factory setting

–

Additional information*Description*

The extended order code indicates the version of all the features of the product structure for the measuring device and thus uniquely identifies the measuring device.

Extended order code 2**Navigation**

Guidance → Commissioning → Device ident. → Ext. order cd. 2

Description

The extended order code is an alphanumeric code containing all information to identify the device and its options.



The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

User interface

Character string

Factory setting

–

Extended order code 3**Navigation**

Guidance → Commissioning → Device ident. → Ext. order cd. 3

Description

The extended order code is an alphanumeric code containing all information to identify the device and its options.



The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

User interface

Character string

Factory setting

-

"Device identification" wizard*Navigation*
 Guidance → Commissioning → Device ident.
Locking status**Navigation**
 Guidance → Commissioning → Device ident. → Locking status
Description

Displays the active write protection.

User interface

- Hardware locked
- Temporarily locked

Additional information*User interface*

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.

 Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

*Selection**Function scope of the "Locking status" parameter*

Options	Description
None	The access status displayed in the Access status display parameter applies. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the main electronics module. This prevents write access to the parameters (e.g. via the local display or operating tool).
Temporarily locked	Write access to the parameters is temporarily locked due to device-internal processing (e.g. data upload/download, reset). Once the internal processing has been completed, the parameters can be changed once again.

"Device identification" wizard*Navigation* Guidance → Commissioning → Device ident.**Time zone****Navigation** Guidance → Commissioning → Device ident. → Time zone**Description**

Select the time zone. Every time the time zone is changed, a logbook entry is created.

Selection*Other units*

- UTC-12:00
- UTC-11:00
- UTC-10:00
- UTC-09:30
- UTC-09:00
- UTC-08:00
- UTC-07:00
- UTC-06:00
- UTC-05:00
- UTC-04:00
- UTC-03:30
- UTC-03:00
- UTC-02:30
- UTC-02:00
- UTC-01:00
- UTC 00:00
- UTC+01:00
- UTC+02:00
- UTC+03:00
- UTC+03:30
- UTC+04:00
- UTC+04:30
- UTC+05:00
- UTC+05:30
- UTC+05:45
- UTC+06:00
- UTC+06:30
- UTC+07:00
- UTC+08:00
- UTC+08:45
- UTC+09:00
- UTC+09:30
- UTC+10:00
- UTC+10:30
- UTC+11:00
- UTC+12:00
- UTC+12:45
- UTC+13:00
- UTC+13:45
- UTC+14:00

Date/time

Navigation  Guidance → Commissioning → Device ident. → Date/time

Description Displays the date and time entered.

User interface Character string comprising numbers, letters and special characters

"Device identification" wizard

Navigation   Guidance → Commissioning → Device ident.

PROFINET device name

Navigation  Guidance → Commissioning → Device ident. → PROFINET DevName

Description Up to 240 characters are allowed.
The following syntax must be used:

- 1 or more identifiers, separated with [.]
- Identifier length is 1 to 63 characters
- Identifier consists of [a-z 0-9] only lowercase letters and numbers allowed.

User entry Character string comprising numbers, letters and special characters (240)

PROFINET device name

Navigation  Guidance → Commissioning → Device ident. → PROFINET DevName

Description Shows the short form of the PROFINET device name for the measuring point

User interface Character string comprising numbers, letters and special characters

IP address

Navigation  Guidance → Commissioning → Device ident. → IP address

Description Enter the IP address of the measuring device

User entry Character string comprising numbers, letters and special characters (15)

Descriptor

Navigation	 Guidance → Commissioning → Device ident. → Descriptor
Description	Enter a description for the measuring point
User entry	Character string comprising numbers, letters and special characters (54)

MAC address

Navigation	 Guidance → Commissioning → Device ident. → MAC Address
Description	Shows the MAC address of the measuring device
User interface	Character string comprising numbers, letters and special characters

Device ID

Navigation	 Guidance → Commissioning → Device ident. → Device ID
User interface	0 to 65 535

Manufacturer ID

Navigation	 Guidance → Commissioning → Device ident. → Manufacturer ID
User interface	0 to 65 535

"Measurement adjustments" wizard*Navigation* Guidance → Commissioning → Meas. adjust.**Damping****Navigation** Guidance → Commissioning → Meas. adjust. → Damping**Description**

The damping is effective before the measured value is further processed, i.e., before the following processes:

- Scaling
- Limit value monitoring
- Forwarding to display
- Forwarding to Analog Input Block

Note:

The Analog Input Block has its own “Damping” parameter. In the measurement chain, only one of the two attenuation parameters shall have a value other than 0. Otherwise, the signal will be attenuated several times.

User entry

0 to 999.0 s

Assign scaled variable?**Navigation** Guidance → Commissioning → Meas. adjust. → Scaled variable?**Selection**

- No
- Yes

"Measurement adjustments" wizard*Navigation* Guidance → Commissioning → Meas. adjust.**Pressure unit****Navigation** Guidance → Commissioning → Meas. adjust. → Pressure unit**Description**

Use this function to select the unit for the pipe pressure.

Selection*SI units*

- MPa
- kPa
- Pa
- bar
- mbar a
- torr
- atm
- kgf/cm²
- gf/cm²

US units

psi

Other units

- inH₂O
- inH₂O (4°C)
- mmH₂O
- mmH₂O (4°C)
- mH₂O
- mH₂O (4°C)
- ftH₂O
- inHg
- mmHg

Temperature unit**Navigation**

Guidance → Commissioning → Meas. adjust. → Temperature unit

Description

Use this function to select the unit for the temperature.

Selection*SI units*

- °C
- K

US units

°F

Factory setting

Country-specific:

- °C
- °F

Additional information*Selection***"Measurement adjustments" wizard***Navigation*

Guidance → Commissioning → Meas. adjust.

Pressure unit**Navigation**

Guidance → Commissioning → Meas. adjust. → Pressure unit

Description

Use this function to select the unit for the pipe pressure.

Selection*SI units*

- MPa
- kPa
- Pa
- bar
- mbar a
- torr
- atm
- kgf/cm²
- gf/cm²

US units

psi

Other units

- inH₂O
- inH₂O (4°C)
- mmH₂O
- mmH₂O (4°C)
- mH₂O
- mH₂O (4°C)
- ftH₂O
- inHg
- mmHg

Scaled variable unit**Navigation**

Guidance → Commissioning → Meas. adjust. → SV unit

Description

Use 'Free text', first selection, if the desired unit is not available in the selection list. It is possible to define a customer specific unit with another parameter.

Selection*SI units*

- %
- mm
- cm
- m
- l
- hl
- m³
- g
- kg
- t
- g/s
- kg/s
- kg/min
- kg/h
- t/min
- t/h
- t/d
- m³/s
- m³/min
- m³/h
- m³/d
- l/s
- l/min
- l/h
- Nm³/h
- Nl/h
- Sm³/s
- Sm³/min
- Sm³/h
- Sm³/d
- Nm³/s
- g/cm³
- kg/m³
- Nm³/min
- Nm³/d

US units

- ft
- in
- ft³
- gal (us)
- bbl (us;oil)
- oz
- lb
- STon
- lb/s
- lb/min
- lb/h
- STon/min
- STon/h
- STon/d
- ft³/s
- ft³/min
- ft³/h
- ft³/d
- gal/s (us)
- gal/min (us)
- gal/h (us)
- gal/d (us)
- bbl/s (us;oil)
- bbl/min (us;oil)
- bbl/h (us;oil)
- bbl/d (us;oil)
- Sft³/min
- Sft³/h
- Sft³/d

Imperial units

- gal (imp)
- gal/s (imp)
- gal/min (imp)
- gal/h (imp)

Custom-specific units

Free text

Free text**Navigation**

Guidance → Commissioning → Meas. adjust. → Free text

User entry

Character string comprising numbers, letters and special characters (32)

Temperature unit

Navigation	Guidance → Commissioning → Meas. adjust. → Temperature unit
Description	Use this function to select the unit for the temperature.
Selection	<i>SI units</i> <input checked="" type="checkbox"/> °C <input type="checkbox"/> K <i>US units</i> <input type="checkbox"/> °F
Factory setting	Country-specific: <input checked="" type="checkbox"/> °C <input type="checkbox"/> °F
Additional information	<i>Selection</i>

"Measurement adjustments" wizard

Navigation Guidance → Commissioning → Meas. adjust.

Zero adjustment

Navigation	Guidance → Commissioning → Meas. adjust. → Zero adjustment
Description	Due to the mounting position of the measuring instrument, a pressure shift may occur. The pressure shift can be corrected with the zero adjustment.
Selection	<input checked="" type="checkbox"/> No <input type="checkbox"/> Confirm

Pressure

Navigation

 Guidance → Commissioning → Meas. adjust. → Pressure

"Output settings" wizard

Navigation

  Guidance → Commissioning → Output settings

Scaled variable transfer function



Navigation

 Guidance → Commissioning → Output settings → Scal. v. trans.

Description

'Linear'

The linear pressure signal is used for the output signal. The flow must be calculated in the evaluation unit. Deviating from the bar graph (output signal), the digital value on the display shows continues to be the eradicated value.

'Square root'

The root flow signal is used for the output signal. The 'Flow (square root)' output signal is indicated on the on-site display with a root symbol.

'Table'

The output is defined according to the scaled variable / pressure table entered.

Selection

- Linear
- Square root *
- Table

Low flow cut off



Navigation

 Guidance → Commissioning → Output settings → Low flow cut off

Description

When activated, this function suppresses small flows which can lead to large fluctuations in the measured value.

User entry

0.0 to 50.0 %

* Visibility depends on order options or device settings

"Output settings" wizard*Navigation* Guidance → Commissioning → Output settings**Lower Range Limit****Navigation** Guidance → Commissioning → Output settings → LRL**Description**

Indicates the lower measuring limit of the sensor.

User interface

Signed floating-point number

Upper Range Limit**Navigation** Guidance → Commissioning → Output settings → URL**Description**

Indicates the upper measuring limit of the sensor.

User interface

Signed floating-point number

Minimum span**Navigation** Guidance → Commissioning → Output settings → Minimum span**Description**

Specifies the smallest possible measuring span of the sensor.

User interface

Signed floating-point number

"Output settings" wizard*Navigation* Guidance → Commissioning → Output settings**Pressure****Navigation** Guidance → Commissioning → Output settings → Pressure**User entry**

Signed floating-point number

Scaled variable

Navigation Guidance → Commissioning → Output settings → Scaled variable

User entry Signed floating-point number

"Output settings" wizard

Navigation Guidance → Commissioning → Output settings

Scaled variable transfer function

Navigation Guidance → Commissioning → Output settings → Scal. v. trans.

Description

- 'Linear'
The linear pressure signal is used for the output signal. The flow must be calculated in the evaluation unit. Deviating from the bar graph (output signal), the digital value on the display shows continues to be the eradicated value.
- 'Square root'
The root flow signal is used for the output signal. The 'Flow (square root)' output signal is indicated on the on-site display with a root symbol.
- 'Table'
The output is defined according to the scaled variable / pressure table entered.

Selection

- Linear
- Square root *
- Table

Pressure value 1

Navigation Guidance → Commissioning → Output settings → P. value 1

Description Enter pressure for the first scaling point. 'Scaled variable value 1' will be allocated to this pressure.

User entry Signed floating-point number

* Visibility depends on order options or device settings

Scaled variable value 1

Navigation  Guidance → Commissioning → Output settings → Sc. var.value 1

Description Enter value for the first scaling point. This value is allocated to 'Pressure value 1'.

User interface Signed floating-point number

Pressure value 2

Navigation  Guidance → Commissioning → Output settings → P. value 2

Description Enter pressure for the second scaling point. 'Scaled variable value 2' will be allocated to this pressure.

User entry Signed floating-point number

Scaled variable value 2

Navigation  Guidance → Commissioning → Output settings → Sc. var.value 2

Description Enter value for the second scaling point. This value is allocated to 'Pressure value 2'.

User entry Signed floating-point number

Lower Range Limit

Navigation  Guidance → Commissioning → Output settings → LRL

Description Indicates the lower measuring limit of the sensor.

User interface Signed floating-point number

Upper Range Limit

Navigation  Guidance → Commissioning → Output settings → URL

Description Indicates the upper measuring limit of the sensor.

User interface Signed floating-point number

Minimum span

Navigation	█ Guidance → Commissioning → Output settings → Minimum span
Description	Specifies the smallest possible measuring span of the sensor.
User interface	Signed floating-point number

"Output settings" wizard

Navigation █ █ Guidance → Commissioning → Output settings

Assign process variable

Navigation	█ Guidance → Commissioning → Output settings → Assign variable █ Guidance → Commissioning → Output settings → Assign variable █ Guidance → Commissioning → Output settings → Assign variable █ Guidance → Commissioning → Output settings → Assign variable █ Guidance → Commissioning → Output settings → Assign variable █ Guidance → Commissioning → Output settings → Assign variable █ Guidance → Commissioning → Output settings → Assign variable
Description	Select a process variable
User interface	<ul style="list-style-type: none"> ■ Pressure * ■ Scaled variable * ■ Sensor temperature * ■ Sensor pressure * ■ Electronics temperature * ■ Median of pressure signal * ■ Noise of pressure signal *
Additional information	<p><i>User interface</i></p> <p>"Sensor pressure" option Sensor Pressure is the raw signal from sensor before damping and position adjustment.</p>

* Visibility depends on order options or device settings

3.4 "Diagnostics" menu

Navigation  Diagnostics

3.4.1 "Active diagnostics" submenu

Navigation  Diagnostics → Active diagnos.

Active diagnostics

Navigation   Diagnostics → Active diagnos. → Active diagnos.

Prerequisite A diagnostic event has occurred.

Description Displays the current diagnostic message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.

User interface Symbol for diagnostic behavior, diagnostic code and short message.

Additional information *User interface*
 Additional pending diagnostic messages can be viewed in the **Diagnostic list** submenu.

Example

For the display format:
☒ F271 Main electronic failure

Timestamp

Navigation   Diagnostics → Active diagnos. → Timestamp

Description Displays the operating time when the current diagnostic message occurred.

User interface Days (d), hours (h), minutes (m) and seconds (s)

Additional information *User interface*
 The diagnostic message can be viewed via the **Actual diagnostics** parameter
(→  38).

Example

For the display format:
24d12h13m00s

Previous diagnostics

Navigation	 Diagnostics → Active diagnos. → Prev.diagnostics
Prerequisite	Two diagnostic events have already occurred.
Description	Displays the diagnostic message that occurred before the current message.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<p><i>User interface</i></p> <p> Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.</p>
	<p><i>Example</i></p> <p>For the display format: ☒F271 Main electronic failure</p>

Timestamp

Navigation	 Diagnostics → Active diagnos. → Timestamp
Description	Displays the operating time when the last diagnostic message before the current message occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<p><i>User interface</i></p> <p> The diagnostic message can be viewed via the Previous diagnostics parameter (→  39).</p>
	<p><i>Example</i></p> <p>For the display format: 24d12h13m00s</p>

Operating time from restart

Navigation	 Diagnostics → Active diagnos. → Time fr. restart
Description	Indicates how long the device has been in operation since the last time the device was restarted.
User interface	Days (d), hours (h), minutes (m), seconds (s)

Operating time

Navigation	 Diagnostics → Active diagnos. → Operating time
Description	Indicates how long the device has been in operation.
Additional information	Maximum time: 9 999 d (≈ 27 years)

3.4.2 "Event logbook" submenu

Navigation  Diagnostics → Event logbook

Filter options

Navigation	 Diagnostics → Event logbook → Filter options
Description	Use this function to select the category whose event messages are displayed in the event list of the operating tool.
Selection	<ul style="list-style-type: none">■ All■ Failure (F)■ Function check (C)■ Out of specification (S)■ Maintenance required (M)■ Information (I)■ Not categorized
Additional information	<p><i>Description</i></p> <p> The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:</p> <ul style="list-style-type: none">■ F = Failure■ C = Function Check■ S = Out of Specification■ M = Maintenance Required

3.4.3 "Minimum/maximum values" submenu

Navigation



Diagnostics → Min/max val.

Pressure min

Navigation



Diagnostics → Min/max val. → Pressure min

Description

Minimum or maximum value measured by device.

User interface

Signed floating-point number

Counter limit underruns sensor Pmin

Navigation



Diagnostics → Min/max val. → Counter P < Pmin

Description

Counts how many times the value underruns the sensor specific minimum values. Sensor specific minimum values are shown in Application/Sensor menu.

User interface

0 to 65 535

Counter underruns of user limit Pmin

Navigation



Diagnostics → Min/max val. → Counter < P user

Description

Counts how many times the value underruns the minimum values defined by the user. User defined minimum values are shown in Diagnostic/Diagnostic settings/Properties menu.

User interface

0 to 65 535

Minimum sensor temperature

Navigation



Diagnostics → Min/max val. → Min. sensor temp

Description

Minimum or maximum value measured by device.
Users cannot reset this value.

User interface

-273.15 to 9 726.85 °C

Counter limit underruns sensor Tmin

Navigation  Diagnostics → Min/max val. → Counter T < Tmin**Description** Counts how many times the value underruns/overruns the sensor specific minimum/maximum values.
Sensor specific minimum/maximum values are shown in Application/Sensor menu.**User interface** 0 to 65 535

Counter underruns of user limit Tmin

Navigation  Diagnostics → Min/max val. → Counter < T user**User interface** 0 to 65 535

Minimum terminal voltage

Navigation  Diagnostics → Min/max val. → Min.term.volt.**Description** Minimum or maximum measured terminal (supply) voltage.**User interface** 0.0 to 50.0 V

Minimum electronics temperature

Navigation  Diagnostics → Min/max val. → Min.electr.temp.**Description** Minimum or maximum measured main electronics temperature.**User interface** Signed floating-point number

Reset user defined counters P and T**Navigation**  Diagnostics → Min/max val. → Reset count. P T**Selection**

- Cancel
- Confirm

Pressure max

Navigation  Diagnostics → Min/max val. → Pressure max

Description Minimum or maximum value measured by device.

User interface Signed floating-point number

Counter limit overruns sensor Pmax

Navigation  Diagnostics → Min/max val. → Counter P > Pmax

Description Counts how many times the value overruns the sensor specific maximum values.
Sensor specific maximum values are shown in Application/Sensor menu.

User interface 0 to 65 535

Counter overruns of user limit Pmax

Navigation  Diagnostics → Min/max val. → Counter > P user

Description Counts how many times the value overruns the maximum values defined by the user.
User defined maximum values are shown in Diagnostic/Diagnostic settings/Properties menu.

User interface 0 to 65 535

Maximum sensor temperature

Navigation  Diagnostics → Min/max val. → Max. sensor temp

Description Minimum or maximum value measured by device.
Users cannot reset this value.

User interface -273.15 to 9 726.85 °C

Counter limit overruns sensor Tmax

Navigation  Diagnostics → Min/max val. → Counter T > Tmax**Description** Counts how many times the value underruns/overruns the sensor specific minimum/maximum values.
Sensor specific minimum/maximum values are shown in Application/Sensor menu.**User interface** 0 to 65 535**Counter overruns of user limit Tmax**

Navigation  Diagnostics → Min/max val. → Counter > T user**User interface** 0 to 65 535**Maximum terminal voltage**

Navigation  Diagnostics → Min/max val. → Max.term.voltage**Description** Minimum or maximum measured terminal (supply) voltage.**User interface** 0.0 to 50.0 V**Maximum electronics temperature**

Navigation  Diagnostics → Min/max val. → Max.electr.temp.**Description** Minimum or maximum measured main electronics temperature.**User interface** Signed floating-point number

3.4.4 "Simulation" submenu

Navigation



Diagnostics → Simulation

Simulation



Navigation

Diagnostics → Simulation → Simulation

Description

Simulates one or more process variables and/or events.

Warning:

Output will reflect the simulated value or event.

Selection

- Off
- Pressure
- Diagnostic event simulation

Diagnostic event simulation



Navigation

Diagnostics → Simulation → Diag. event sim.

Description

Use this function to select a diagnostic event for the simulation process that is activated.

Selection

- Off
- Diagnostic event picklist (depends on the category selected)

Additional information

Description

For the simulation, you can choose from the diagnostic events of the category selected in the **Diagnostic event category** parameter.

Value pressure simulation



Navigation

Diagnostics → Simulation → Value pressure

User entry

Signed floating-point number

3.4.5 "Diagnostic settings" submenu

Navigation  Diagnostics → Diag. settings

"Properties" submenu

Navigation  Diagnostics → Diag. settings → Properties

SSD Out of range delay time



Navigation  Diagnostics → Diag. settings → Properties → SSD Delay time

User entry 0 to 604 800 s

SSD Monitoring delay time



Navigation  Diagnostics → Diag. settings → Properties → SSD Verz. Zeit

User entry 0 to 86 400 s

500 Process alert pressure



Navigation  Diagnostics → Diag. settings → Properties → 500 Pressure

Description Define whether user-defined pressure limits should be set.
If 'No' is selected, no analysis will take place and no event message will be generated.

Selection

- Off
- On

Low alert value



Navigation  Diagnostics → Diag. settings → Properties → Low alert value

Description Set area.
If this limit value is exceeded or undercut, an event is generated. There is no hysteresis.

User entry Signed floating-point number

High alert value

Navigation

█ Diagnostics → Diag. settings → Properties → High alert value

Description

Set area.
If this limit value is exceeded or undercut, an event is generated. There is no hysteresis.

User entry

Signed floating-point number

501 Process alert scaled variable

Navigation

█ Diagnostics → Diag. settings → Properties → 501 Scaled var.

Description

Define whether user-defined limits should be set.
If 'No' is selected, no analysis will take place and no event message will be generated.

Selection

- Off
- On

Low alert value

Navigation

█ Diagnostics → Diag. settings → Properties → Low alert value

Description

Set area.
If this limit value is exceeded or undercut, an event is generated. There is no hysteresis.

User entry

Signed floating-point number

High alert value

Navigation

█ Diagnostics → Diag. settings → Properties → High alert value

Description

Set area.
If this limit value is exceeded or undercut, an event is generated. There is no hysteresis.

User entry

Signed floating-point number

User temperature process alert**Navigation**

█ Diagnostics → Diag. settings → Properties → UserTemp alert

Description

Define whether the user-defined sensor temperature limits should be set. If 'No' no analysis and therefore no event message will take place.

Selection

- Off
- On

Low alert value**Navigation**

█ Diagnostics → Diag. settings → Properties → Low alert value

Description

Set area.
If this limit value is exceeded or undercut, an event is generated. There is no hysteresis.

User entry

-50 to 150 °C

High alert value**Navigation**

█ Diagnostics → Diag. settings → Properties → High alert value

Description

Set area.
If this limit value is exceeded or undercut, an event is generated. There is no hysteresis.

User entry

-50 to 150 °C

"Configuration" submenu

Navigation █ Diagnostics → Diag. settings → Configuration → Configuration

436 Diagnostic behavior**Navigation**

█ Diagnostics → Diag. settings → Configuration → Configuration → 436 Diag. behav.

Selection

- Warning
- Logbook entry only

436 Event category

Navigation	 Diagnostics → Diag. settings → Configuration → Configuration → 436 Event category
User interface	<ul style="list-style-type: none"> ▪ Failure (F) ▪ Function check (C) ▪ Out of specification (S) ▪ Maintenance required (M) ▪ Not categorized

500 Diagnostic behavior

Navigation	  Diagnostics → Diag. settings → Configuration → Configuration → 500 Diag. behav.
Description	<p>Select event behavior</p> <p>'Logbook entry only': no digital or analog transmission of the message</p> <p>'Warning': Current output unchanged. Message is output digitally (default).</p> <p>'Alarm': Current output assumes the set alarm current.</p> <p>Regardless of the setting, the message appears on the display. If the permissible conditions are reached again, the warning is no longer available in the instrument.</p>
Selection	<ul style="list-style-type: none"> ▪ Off ▪ Alarm ▪ Warning ▪ Logbook entry only

500 Event category

Navigation	  Diagnostics → Diag. settings → Configuration → Configuration → 500Event category
User interface	<ul style="list-style-type: none"> ▪ Failure (F) ▪ Function check (C) ▪ Out of specification (S) ▪ Maintenance required (M) ▪ Not categorized

501 Diagnostic behavior



Navigation

Diagnostics → Diag. settings → Configuration → Configuration → 501 Diag. behav.

Description

Select event behavior

'Logbook entry only':
no digital or analog transmission of the message

'Warning': Current output unchanged. Message is output digitally (default).

'Alarm': Current output assumes the set alarm current.

Regardless of the setting, the message appears on the display. If the permissible conditions are reached again, the warning is no longer available in the instrument.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

501 Event category

Navigation

Diagnostics → Diag. settings → Configuration → Configuration → 501Event category

User interface

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Not categorized

502 Diagnostic behavior



Navigation

Diagnostics → Diag. settings → Configuration → Configuration → 502 Diag. behav.

Description

Select event behavior

'Logbook entry only':
no digital or analog transmission of the message

'Warning': Current output unchanged. Message is output digitally (default).

'Alarm': Current output assumes the set alarm current.

Regardless of the setting, the message appears on the display. If the permissible conditions are reached again, the warning is no longer available in the instrument.

Selection

- Off
- Alarm
- Warning
- Logbook entry only

502 Event category

Navigation	Diagnostics → Diag. settings → Configuration → Configuration → 502Event category
User interface	<ul style="list-style-type: none"> ■ Failure (F) ■ Function check (C) ■ Out of specification (S) ■ Maintenance required (M) ■ Not categorized

"Process" submenu

Navigation Diagnostics → Diag. settings → Configuration → Process

Sensor pressure range behavior



Navigation	Diagnostics → Diag. settings → Configuration → Process → P-range behavior
Description	Alarm and warning messages appear on the display. If the permissible conditions are reached again, the warning message disappears. Select event behavior: 'Alarm': The signal outputs assume the specified alarm condition. A diagnostic message is generated. 'Warning': The signal outputs assume the specified warning condition. A diagnostic message is generated. 'Logbook entry only': No digital or analog forwarding of the message. A diagnostic message is written in the logbook.
Selection	<ul style="list-style-type: none"> ■ Alarm ■ Warning ■ Logbook entry only

841 Event category

Navigation	Diagnostics → Diag. settings → Configuration → Process → 841 Event category
User interface	<ul style="list-style-type: none"> ■ Failure (F) ■ Function check (C) ■ Out of specification (S) ■ Maintenance required (M) ■ Not categorized

900 Event category

Navigation

  Diagnostics → Diag. settings → Configuration → Process → 900Event category

User interface

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Not categorized

900 Diagnostic behavior

**Navigation**

  Diagnostics → Diag. settings → Configuration → Process → 900 Diag. behav.

Description

Select event behavior

'Logbook entry only':

No forwarding of the message via the fieldbus.

'Warning': Warning message is transmitted via the fieldbus (default setting).

Regardless of the setting, the message appears on the display. If the permissible conditions are reached again, the warning is no longer available in the instrument.

Selection

- Warning
- Logbook entry only

906 Diagnostic behavior

**Navigation**

  Diagnostics → Diag. settings → Configuration → Process → 906 Diag. behav.

Description

Select event behavior

'Logbook entry only':

No forwarding of the message via the fieldbus.

'Warning': Warning message is transmitted via the fieldbus (default setting).

Regardless of the setting, the message appears on the display. If the permissible conditions are reached again, the warning is no longer available in the instrument.

Selection

- Off
- Warning
- Logbook entry only

906 Event category

Navigation Diagnostics → Diag. settings → Configuration → Process → 906Event category**User interface**

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Not categorized

3.5 "Application" menu

Navigation  Application

3.5.1 "Measured values" submenu

Navigation  Application → Measured values

Pressure

Navigation   Application → Measured values → Pressure

Scaled variable

Navigation   Application → Measured values → Scaled variable

User interface Signed floating-point number

Sensor temperature

Navigation   Application → Measured values → Sensor temp.

User interface -273.15 to 9 726.85 °C

Terminal voltage 1

Navigation   Application → Measured values → Terminal volt. 1

Description Shows the current terminal voltage that is applied at the output

User interface 0.0 to 50.0 V

Electronics temperature

Navigation   Application → Measured values → Electronics temp

Description Displays the current temperature of the main electronics.

User interface	Signed floating-point number
----------------	------------------------------

3.5.2 "Measuring units" submenu

Navigation



Application → Measuring units

Pressure unit



Navigation

Application → Measuring units → Pressure unit

Description

Use this function to select the unit for the pipe pressure.

Selection

SI units

- MPa
- kPa
- Pa
- bar
- mbar a
- torr
- atm
- kgf/cm²
- gf/cm²

US units

- psi

Other units

- inH2O
- inH2O (4°C)
- mmH2O
- mmH2O (4°C)
- mH2O
- mH2O (4°C)
- ftH2O
- inHg
- mmHg

Decimal places pressure



Navigation

Application → Measuring units → Decimal pressure

Description

This selection does not affect the measurement and calculation accuracy of the device.

Selection

- Automatic
- x
- x.X
- x.XX
- x.XXX
- x.XXXX

Temperature unit



Navigation

Application → Measuring units → Temperature unit

Description

Use this function to select the unit for the temperature.

Selection	SI units	US units
	▪ °C	°F
Factory setting	Country-specific: ▪ °C ▪ °F	
Additional information	<i>Selection</i>	

Scaled variable unit

Navigation Application → Measuring units → SV unit

Description Use 'Free text', first selection, if the desired unit is not available in the selection list. It is possible to define a customer specific unit with another parameter.

Selection	<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
■ %	■ ft	■ gal (imp)	
■ mm	■ in	■ gal/s (imp)	
■ cm	■ ft ³	■ gal/min (imp)	
■ m	■ gal (us)	■ gal/h (imp)	
■ l	■ bbl (us;oil)		
■ hl	■ oz		
■ m ³	■ lb		
■ g	■ STon		
■ kg	■ lb/s		
■ t	■ lb/min		
■ g/s	■ lb/h		
■ kg/s	■ STon/min		
■ kg/min	■ STon/h		
■ kg/h	■ STon/d		
■ t/min	■ ft ³ /s		
■ t/h	■ ft ³ /min		
■ t/d	■ ft ³ /h		
■ m ³ /s	■ ft ³ /d		
■ m ³ /min	■ gal/s (us)		
■ m ³ /h	■ gal/min (us)		
■ m ³ /d	■ gal/h (us)		
■ l/s	■ gal/d (us)		
■ l/min	■ bbl/s (us;oil)		
■ l/h	■ bbl/min (us;oil)		
■ Nm ³ /h	■ bbl/h (us;oil)		
■ NI/h	■ bbl/d (us;oil)		
■ Sm ³ /s	■ Sft ³ /min		
■ Sm ³ /min	■ Sft ³ /h		
■ Sm ³ /h	■ Sft ³ /d		
■ Sm ³ /d			
■ Nm ³ /s			
■ g/cm ³			
■ kg/m ³			
■ Nm ³ /min			
■ Nm ³ /d			

Custom-specific units
Free text

Free text**Navigation**

Application → Measuring units → Free text

User entry

Character string comprising numbers, letters and special characters (32)

Decimal places scaled variable**Navigation**

Application → Measuring units → Decimal scaled

Description

This selection does not affect the measurement and calculation accuracy of the device.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

3.5.3 "Sensor" submenu

Navigation Application → Sensor → Sensor cal.**Zero adjustment****Navigation**  Application → Sensor → Sensor cal. → Zero adjustment**Description**

Due to the mounting position of the measuring instrument, a pressure shift may occur. The pressure shift can be corrected with the zero adjustment.

Selection

- No
- Confirm

Calibration offset**Navigation**  Application → Sensor → Sensor cal. → Calibr offset**Prerequisite**

Absolute pressure sensor

User entry

Signed floating-point number

Zero adjustment offset**Navigation**  Application → Sensor → Sensor cal. → Zero adj. offset**User entry**

Signed floating-point number

Sensor Trim Reset**Navigation**  Application → Sensor → Sensor cal. → Sen. Trim Reset**Selection**

- No
- Confirm

Lower sensor trim**Navigation**

Application → Sensor → Sensor cal. → LowerSensor trim

Description

These two parameters allow a recalibration of the sensor, i.e., if you want to fit the sensor to the measuring range. The highest accuracy is obtained when the value for the 'Lower sensor trim' is as close as possible to 'LRV' (lower range value) and the value for 'Upper sensor trim' as close as possible to 'URV' (upper range value).

There must be a known reference pressure when setting a new lower or upper sensor characteristic curve value. The more accurate the reference pressure is during recalibration, the higher the accuracy of the pressure transmitter later. A new value is assigned to the applied pressure using 'Lower sensor trim' and 'Upper sensor trim' parameters.

Proceed as follows:

- Apply reference pressure for lower range value ('LRV')
- Enter the measured reference pressure at 'Lower sensor trim' and confirm
- Apply reference pressure for upper range value ('URV')
- Enter the measured reference pressure at 'Upper sensor trim' and confirm
- The sensor is now calibrated

User entry

Signed floating-point number

Upper sensor trim**Navigation**

Application → Sensor → Sensor cal. → UpperSensor trim

User entry

Signed floating-point number

Lower range value**Navigation**

Application → Sensor → Sensor cal. → Lower range val.

Description

The calibrated span corresponds to the span between the LRV and URV.

Factory setting: 0 to URL.

Other calibrated spans can be ordered as customized span.

User entry

Signed floating-point number

Upper range value**Navigation**

Application → Sensor → Sensor cal. → Upper range val.

Description

The calibrated span corresponds to the span between the LRV and URV.

Factory setting: 0 to URL.

Other calibrated spans can be ordered as customized span.

User entry	Signed floating-point number
------------	------------------------------

"Sensor configuration" submenu

Navigation  Application → Sensor → Sensor conf.

Damping



Navigation	  Application → Sensor → Sensor conf. → Damping
------------	---

Description	The damping is effective before the measured value is further processed, i.e., before the following processes:
-------------	--

- Scaling
- Limit value monitoring
- Forwarding to display
- Forwarding to Analog Input Block

Note:

The Analog Input Block has its own "Damping" parameter. In the measurement chain, only one of the two attenuation parameters shall have a value other than 0. Otherwise, the signal will be attenuated several times.

User entry	0 to 999.0 s
------------	--------------

HP/LP swap



Navigation	  Application → Sensor → Sensor conf. → HP/LP swap
------------	--

Description	With this parameter the high and low pressure side of the differential pressure transmitter can be interchanged.
-------------	--

Selection	<ul style="list-style-type: none">■ No■ Yes
-----------	--

"Sensor limits" submenu**Navigation**

Application → Sensor → Sensor limits

Lower Range Limit

Navigation

Application → Sensor → Sensor limits → LRL

Description

Indicates the lower measuring limit of the sensor.

User interface

Signed floating-point number

Upper Range Limit

Navigation

Application → Sensor → Sensor limits → URL

Description

Indicates the upper measuring limit of the sensor.

User interface

Signed floating-point number

Minimum span

Navigation

Application → Sensor → Sensor limits → Minimum span

Description

Specifies the smallest possible measuring span of the sensor.

User interface

Signed floating-point number

Sensor temperature lower range limit

Navigation

Application → Sensor → Sensor limits → Sens.temp.lo.lim

User interface

-273.15 to 9 726.85 °C

Sensor temperature upper range limit

Navigation Application → Sensor → Sensor limits → Sens.temp.up.lim**User interface**

-273.15 to 9 726.85 °C

"Scaled variable" submenu*Navigation* Application → Sensor → Scaled variable

Scaled variable unit**Navigation**  Application → Sensor → Scaled variable → SV unit**Description**

Use 'Free text', first selection, if the desired unit is not available in the selection list. It is possible to define a customer specific unit with another parameter.

Selection	<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
■ %	■ ft	■ gal (imp)	
■ mm	■ in	■ gal/s (imp)	
■ cm	■ ft ³	■ gal/min (imp)	
■ m	■ gal (us)	■ gal/h (imp)	
■ l	■ bbl (us;oil)		
■ hl	■ oz		
■ m ³	■ lb		
■ g	■ STon		
■ kg	■ lb/s		
■ t	■ lb/min		
■ g/s	■ lb/h		
■ kg/s	■ STon/min		
■ kg/min	■ STon/h		
■ kg/h	■ STon/d		
■ t/min	■ ft ³ /s		
■ t/h	■ ft ³ /min		
■ t/d	■ ft ³ /h		
■ m ³ /s	■ ft ³ /d		
■ m ³ /min	■ gal/s (us)		
■ m ³ /h	■ gal/min (us)		
■ m ³ /d	■ gal/h (us)		
■ l/s	■ gal/d (us)		
■ l/min	■ bbl/s (us;oil)		
■ l/h	■ bbl/min (us;oil)		
■ Nm ³ /h	■ bbl/h (us;oil)		
■ NI/h	■ bbl/d (us;oil)		
■ Sm ³ /s	■ Sft ³ /min		
■ Sm ³ /min	■ Sft ³ /h		
■ Sm ³ /h	■ Sft ³ /d		
■ Sm ³ /d			
■ Nm ³ /s			
■ g/cm ³			
■ kg/m ³			
■ Nm ³ /min			
■ Nm ³ /d			
<i>Custom-specific units</i>			
Free text			

Free text**Navigation**

Application → Sensor → Scaled variable → Free text

User entry

Character string comprising numbers, letters and special characters (32)

Pressure

Navigation

 Application → Sensor → Scaled variable → Pressure

Scaled variable transfer function



Navigation

 Application → Sensor → Scaled variable → Scal. v. trans.

Description

'Linear'

The linear pressure signal is used for the output signal. The flow must be calculated in the evaluation unit. Deviating from the bar graph (output signal), the digital value on the display shows continues to be the eradicated value.

'Square root'

The root flow signal is used for the output signal. The 'Flow (square root)' output signal is indicated on the on-site display with a root symbol.

'Table'

The output is defined according to the scaled variable / pressure table entered.

Selection

- Linear
- Square root *
- Table

Pressure value 1



Navigation

 Application → Sensor → Scaled variable → P. value 1

Description

Enter pressure for the first scaling point. 'Scaled variable value 1' will be allocated to this pressure.

User entry

Signed floating-point number

Scaled variable value 1

Navigation

 Application → Sensor → Scaled variable → Sc. var.value 1

Description

Enter value for the first scaling point. This value is allocated to 'Pressure value 1'.

User interface

Signed floating-point number

* Visibility depends on order options or device settings

Pressure value 2

Navigation Application → Sensor → Scaled variable → P. value 2

Description Enter pressure for the second scaling point. 'Scaled variable value 2' will be allocated to this pressure.

User entry Signed floating-point number

Scaled variable value 2

Navigation Application → Sensor → Scaled variable → Sc. var.value 2

Description Enter value for the second scaling point. This value is allocated to 'Pressure value 2'.

User entry Signed floating-point number

Low flow cut off

Navigation Application → Sensor → Scaled variable → Low flow cut off

Description When activated, this function suppresses small flows which can lead to large fluctuations in the measured value.

User entry 0.0 to 50.0 %

Activate table

Navigation Application → Sensor → Scaled variable → Activate table

Selection

- Disable
- Enable

Pressure

Navigation Application → Sensor → Scaled variable → Pressure

User entry Signed floating-point number

Scaled variable

Navigation Application → Sensor → Scaled variable → Scaled variable

User entry Signed floating-point number

3.5.4 "PROFINET" submenu

Navigation Application → PROFINET

"Configuration" submenu

Navigation Application → PROFINET → Configuration

PROFINET device name

Navigation Application → PROFINET → Configuration → PROFINET DevName

Description Shows the short form of the PROFINET device name for the measuring point

User interface Character string comprising numbers, letters and special characters

PROFINET device name

Navigation Application → PROFINET → Configuration → PROFINET DevName

Description Up to 240 characters are allowed.
The following syntax must be used:
- 1 or more identifiers, separated with [.]
- Identifier length is 1 to 63 characters
- Identifier consists of [a-z 0-9] only lowercase letters and numbers allowed.

User entry Character string comprising numbers, letters and special characters (240)

Parameter change acknowledge mode

Navigation  Application → PROFINET → Configuration → ParaChngAcknMode

Description Select how to acknowledge the displayed flag when changing the device configuration:
 - "Auto acknowledge": the flag disappears automatically after 20 seconds.
 - "Manual acknowledge": the flag must be acknowledged manually.

Selection

- Auto acknowledge
- Manual acknowledge

Acknowledge parameter change

Navigation  Application → PROFINET → Configuration → AcknParaChange

Description If the Option "Manual acknowledge" is selected as the acknowledgement type, then a parameter change must be acknowledged with the "Reset update event flag" option.

Selection

- No acknowledge
- Reset update event flag

Descriptor

Navigation  Application → PROFINET → Configuration → Descriptor

Description Enter a description for the measuring point

User entry Character string comprising numbers, letters and special characters (54)

"Analog input 1 to 7" submenu

Navigation  Application → PROFINET → Analog input → Analog input 1 to 7

Process value

Navigation  Application → PROFINET → Analog input → Analog input 1 to 7 → Process value

Description Shows the process value reported to the controller for further processing

User interface Signed floating-point number

Assign process variable

Navigation	 Application → PROFINET → Analog input → Analog input 1 to 7 → Assign variable
Description	Select a process variable
User interface	<ul style="list-style-type: none">▪ Pressure *▪ Scaled variable *▪ Sensor temperature *▪ Sensor pressure *▪ Electronics temperature *▪ Median of pressure signal *▪ Noise of pressure signal *
Additional information	<p><i>User interface</i></p> <p>"Sensor pressure" option Sensor Pressure is the raw signal from sensor before damping and position adjustment.</p>

Damping

Navigation	 Application → PROFINET → Analog input → Analog input 1 to 7 → Damping
Description	Enter time constant for input damping (PT1 element). Damping reduces the effect of fluctuations in the measured value on the output signal.
User entry	Positive floating-point number
<p>"Binary input 1 to 2" submenu</p> <p><i>Navigation</i>  Application → PROFINET → Binary input → Binary input 1 to 2</p>	

Controller input value

Navigation	 Application → PROFINET → Binary input → Binary input 1 to 2 → ControllInputVal
Description	Shows for each device function the state reported to the controller for further processing
User interface	0 to 255

* Visibility depends on order options or device settings

"Binary output" submenu**Navigation**

Application → PROFINET → Binary output

Set point value**Navigation**

Application → PROFINET → Binary output → Set point value

User entry

0 to 255

BO block output value**Navigation**

Application → PROFINET → Binary output → BOBlockOutValue

Description

Shows for each device function the state reported to the measuring device for further processing

User entry

0 to 255

Failure behavior**Navigation**

Application → PROFINET → Binary output → Failure behavior

Description

Select failure behavior in the event of a failure (value with status 'Bad')

Selection

- Fixed value
- Last valid value
- Actual value

Failure behavior delay**Navigation**

Application → PROFINET → Binary output → FailBehavDelay

Description

Enter a delay until in the event of a failure (value with status 'Bad') the failure behavior specified applies

User entry

Positive floating-point number

Fixed value

Navigation	  Application → PROFINET → Binary output → Fixed value
Description	Enter value to report in the event of a failure (value with status 'Bad')
User entry	0 to 255

"Information" submenu

Navigation  Application → PROFINET → Information

Device ID

Navigation	  Application → PROFINET → Information → Device ID
User interface	0 to 65 535

PA profile version

Navigation	  Application → PROFINET → Information → PA profile vers.
User interface	0 to 65 535

"Application relation" submenu

Navigation  Application → PROFINET → Applicat. relat.

AR state

Navigation	  Application → PROFINET → Applicat. relat. → AR state
Description	Shows whether an AR connection and a system redundancy have been established
User interface	<ul style="list-style-type: none">■ Active■ Not active■ Redundancy 1AR active■ Redundancy 2AR active

MAC address IO controller

Navigation  Application → PROFINET → Applicat. relat. → MAC IO contr.

Description Shows the MAC address of the only or of the primary IO controller

User interface Character string comprising numbers, letters and special characters

MAC address backup IO controller

Navigation  Application → PROFINET → Applicat. relat. → MAC backup IO c.

Description Shows the MAC address of the backup IO controller

User interface Character string comprising numbers, letters and special characters

IP address IO controller

Navigation  Application → PROFINET → Applicat. relat. → IP IO controller

Description Shows the IP address of the only or of the primary IO controller

User interface Character string comprising numbers, letters and special characters

IP address backup IO controller

Navigation  Application → PROFINET → Applicat. relat. → IP backup IO c.

Description Shows the IP address of the backup IO controller

User interface Character string comprising numbers, letters and special characters

3.6 "System" menu

Navigation  System

3.6.1 "Device management" submenu

Navigation  System → Device manag.

Device tag

Navigation   System → Device manag. → Device tag

Description Enter a name for the measuring point to identify the measuring device in the plant

User entry Character string comprising numbers, letters and special characters (32)

Locking status

Navigation   System → Device manag. → Locking status

Description Displays the active write protection.

- Hardware locked
- Temporarily locked

Additional information *User interface*

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.

 Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

Selection

Function scope of the "Locking status" parameter

Options	Description
None	The access status displayed in the Access status display parameter applies. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the main electronics module. This prevents write access to the parameters (e.g. via the local display or operating tool).
Temporarily locked	Write access to the parameters is temporarily locked due to device-internal processing (e.g. data upload/download, reset). Once the internal processing has been completed, the parameters can be changed once again.

Configuration counter

Navigation	 System → Device manag. → Config. counter
Description	Shows the number of changes made to static parameters (e.g. configuration parameters)
User interface	0 to 65 535

Reset device



Navigation	 System → Device manag. → Reset device										
Description	Use this function to choose whether to reset the device configuration - either entirely or in part - to a defined state.										
Selection	<ul style="list-style-type: none"> ■ Cancel ■ To factory defaults * ■ To delivery settings * ■ Restart device 										
Additional information	<i>Selection</i>										
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left; background-color: #cccccc;">Options</th> <th style="background-color: #cccccc;">Description</th> </tr> </thead> <tbody> <tr> <td>Cancel</td> <td>No action is executed and the user exits the parameter.</td> </tr> <tr> <td>To factory defaults</td> <td>Every parameter is reset to its factory setting.</td> </tr> <tr> <td>To delivery settings</td> <td>Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.  This option is not visible if no customer-specific settings have been ordered.</td> </tr> <tr> <td>Restart device</td> <td>The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.</td> </tr> </tbody> </table>		Options	Description	Cancel	No action is executed and the user exits the parameter.	To factory defaults	Every parameter is reset to its factory setting.	To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.  This option is not visible if no customer-specific settings have been ordered.	Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.
Options	Description										
Cancel	No action is executed and the user exits the parameter.										
To factory defaults	Every parameter is reset to its factory setting.										
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.  This option is not visible if no customer-specific settings have been ordered.										
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.										

* Visibility depends on order options or device settings

3.6.2 "User management" submenu

Navigation

  System → User manag.

User role

Navigation

  System → User manag. → User role

Description

Shows the access authorization to the parameters via the operating tool

User interface

- Operator
- Maintenance
- Expert
- Production
- Development

Password

Navigation

 System → User manag. → Password

Description

Enter the password for the 'Maintenance' user role to get access to the functionality of this role.

User entry

Character string comprising numbers, letters and special characters (16)

Enter access code



Navigation

 System → User manag. → Ent. access code

Description

Use this function to enter the user-specific release code to remove parameter write protection in the operating tool.

User entry

0 to 9999

Status password entry

Navigation

  System → User manag. → Status pw entry

Description

Use this function to display the status of the password verification.

User interface

- -----
- Wrong password
- Password rule violated

- Password accepted
- Permission denied
- Confirm PW mismatch
- Reset password accepted
- Invalid user role
- Wrong sequence of entry

New password

Navigation System → User manag. → New password

Description Define the new 'Maintenance' password.
A new password is valid after it has been confirmed within the 'Confirm new password' parameter.
Any valid password consists of 4 to 16 characters and can contain letters and numbers.

User entry Character string comprising numbers, letters and special characters (16)

Confirm new password

Navigation System → User manag. → Conf. new passw.

Description Enter the new password again to confirm.

User entry Character string comprising numbers, letters and special characters (16)

Old password

Navigation System → User manag. → Old password

Description Enter the current password, to subsequently change the existing password.

User entry Character string comprising numbers, letters and special characters (16)

Reset password

Navigation System → User manag. → Reset password

Description Enter a code to reset the current 'Maintenance' password.
The code is delivered by your local support.

User entry Character string comprising numbers, letters and special characters (16)

3.6.3 "Connectivity" submenu

Navigation

System → Connectivity

"Interfaces" submenu

Navigation

System → Connectivity → Interfaces

Display operation



Navigation

System → Connectivity → Interfaces → DisplayOperation

Selection

- Disable
- Enable

Web server functionality



Navigation

System → Connectivity → Interfaces → Webserver funct.

Description

Switch web server on and off, switch off HTML.

Selection

- Disable
- Enable

Bluetooth activation

Navigation

System → Connectivity → Interfaces → Bluetooth active

Description

If Bluetooth is deactivated, it can only be reactivated via the display or the operating tool. Reactivating via the SmartBlue app is not possible.

Selection

- Disable
- Enable

Service (UART-CDI)



Navigation

System → Connectivity → Interfaces → Service (CDI)

Selection

- Disable
- Enable

"Ethernet" submenu**Navigation**

System → Connectivity → Ethernet

MAC address**Navigation**

System → Connectivity → Ethernet → MAC Address

Description

Shows the MAC address of the measuring device

User interface

Character string comprising numbers, letters and special characters

IP address**Navigation**

System → Connectivity → Ethernet → IP address

Description

Enter the IP address of the measuring device

User entry

Character string comprising numbers, letters and special characters (15)

Subnet mask**Navigation**

System → Connectivity → Ethernet → Subnet mask

Description

Enter subnet mask of the measuring device

User entry

Character string comprising numbers, letters and special characters (15)

Default gateway**Navigation**

System → Connectivity → Ethernet → Default gateway

Description

Enter IP address for the default gateway of the measuring device

User entry

Character string comprising numbers, letters and special characters (15)

Service IP active

Navigation  System → Connectivity → Ethernet → Service IP act.**User interface**

- No
- Yes

Interface connection status

Navigation  System → Connectivity → Ethernet → Interface status**User interface**

- Connected
- Not connected

Interface speed

Navigation  System → Connectivity → Ethernet → Interface speed**User interface** Positive integer**Duplex status**

Navigation  System → Connectivity → Ethernet → Duplex status**User interface**

- Full duplex
- Half duplex
- Unknown

Auto negotiation status

Navigation  System → Connectivity → Ethernet → Auto negot.stat.**User interface**

- Idle
- In progress
- Completed
- Failed
- Speed detection failed

Received packet number

Navigation  System → Connectivity → Ethernet → RX packet no.**User interface** Positive integer**Sent packet number**

Navigation  System → Connectivity → Ethernet → TX packet number**User interface** Positive integer**Number of failed received packets**

Navigation  System → Connectivity → Ethernet → FailRcvdPackets**User interface** Positive integer**Number of failed sent packets**

Navigation  System → Connectivity → Ethernet → FailTXPacketsNo.**User interface** Positive integer**Signal to noise ratio**

Navigation  System → Connectivity → Ethernet → SNR**Description** Shows the signal to noise ratio of the Ethernet-APL connection. A value >21dB is good and >23dB is excellent.**User interface** Signed floating-point number**Number of failed received packets**

Navigation  System → Connectivity → Ethernet → FailRXPacketsNo.**Description** Shows the number of failed received packets.

User interface 0 to 65 535

Active TCP connections

Navigation  System → Connectivity → Ethernet → Act. TCP connec.

User interface 0 to 65 535

Supported TCP connections

Navigation  System → Connectivity → Ethernet → Supported TCP

User interface 0 to 65 535

TCP connection requests

Navigation  System → Connectivity → Ethernet → TCPConneRequest

User interface 0 to 65 535

TCP connection timeouts

Navigation  System → Connectivity → Ethernet → TCPConneTimeout

User interface 0 to 255

Number of TCP connections closed

Navigation  System → Connectivity → Ethernet → TCPConnect.close

User interface 0 to 255

Number of received TCP packets

Navigation  System → Connectivity → Ethernet → No.RX TCP Packet

User interface Positive integer

TCP sent packet number

Navigation  System → Connectivity → Ethernet → TCP TX PacketNo.**User interface** Positive integer**Number of TCP failed received packets**

Navigation  System → Connectivity → Ethernet → TCPFailRXPackets**User interface** Positive integer**Available UDP ports**

Navigation  System → Connectivity → Ethernet → Avail. UDP ports**User interface** Positive integer**UDP received packet number**

Navigation  System → Connectivity → Ethernet → UDP RX PacketNo.**User interface** Positive integer**UDP sent packet number**

Navigation  System → Connectivity → Ethernet → UDP TX PacketNo.**User interface** Positive integer**Number of UDP failed received packets**

Navigation  System → Connectivity → Ethernet → UDPFailRXPackets**User interface** Positive integer

3.6.4 "Display" submenu

Navigation  System → Display

Language

Navigation   System → Display → Language

Prerequisite A local display is provided.

Description Use this function to select the configured language on the local display.

Selection

- English
- Deutsch
- Français
- Español
- Italiano
- Nederlands
- Portuguesa
- Polski
- русский язык (Russian)
- Svenska
- Türkçe
- 中文 (Chinese)
- 日本語 (Japanese)
- 한국어 (Korean)
- Bahasa Indonesia
- tiếng Việt (Vietnamese)
- čeština (Czech)

Factory setting English (alternatively, the ordered language is preset in the device)

Format display

Navigation   System → Display → Format display

Prerequisite A local display is provided.

Description Use this function to select how the measured value is shown on the local display.

Selection

- 1 value, max. size
- 2 values

Additional information*Description*

The display format (size, bar graph etc.) and number of measured values displayed simultaneously (1 to 4) can be configured. This setting only applies to normal operation.



- The **Value 1 display** parameter (→ 83)...**Value 8 display** parameter **Value 4 display** parameter (→ 84) are used to specify which measured values are shown on the local display and in what order.
- If more measured values are specified than the display mode selected permits, then the values alternate on the device display. The display time until the next change is configured using the **Display interval** parameter.

Value 1 display**Navigation**

System → Display → Value 1 display

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values shown on the local display.

Selection

- Pressure
- Scaled variable
- Sensor temperature

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the first value to be displayed. The value is only displayed during normal operation.



- The **Format display** parameter (→ 82) is used to specify how many measured values are displayed simultaneously and how.

Dependency

- The unit of the displayed measured value is taken from the **System units** submenu.

Value 2 display**Navigation**

System → Display → Value 2 display

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values shown on the local display.

Selection

- None
- Pressure
- Scaled variable
- Sensor temperature

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the second value to be displayed. The value is only displayed during normal operation.

 The **Format display** parameter (→ 82) is used to specify how many measured values are displayed simultaneously and how.

Dependency

 The unit of the displayed measured value is taken from the **System units** submenu.

Value 3 display**Navigation**

  System → Display → Value 3 display

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values shown on the local display.

Selection

- None
- Pressure
- Scaled variable
- Sensor temperature

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the third value to be displayed. The value is only displayed during normal operation.

 The **Format display** parameter (→ 82) is used to specify how many measured values are displayed simultaneously and how.

Selection

 The unit of the displayed measured value is taken from the **System units** submenu.

Value 4 display**Navigation**

  System → Display → Value 4 display

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values shown on the local display.

Selection

- None
- Pressure
- Scaled variable
- Sensor temperature

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the fourth value to be displayed. The value is only displayed during normal operation.



The **Format display** parameter (→ 82) is used to specify how many measured values are displayed simultaneously and how.

Selection

The unit of the displayed measured value is taken from the **System units** submenu.

Contrast display**Navigation**

System → Display → Contrast display

Description

Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle)

User entry

20 to 80 %

Factory setting

Depends on the display

Additional information

Set the contrast via the push-buttons:

- Weaker: Press the and buttons simultaneously
- Stronger: Press the and buttons simultaneously

3.6.5 "Date/time" submenu*Navigation*

System → Date/time

Date/time**Navigation**

System → Date/time → Date/time

Description

Displays the date and time entered.

User interface

Character string comprising numbers, letters and special characters

Time zone**Navigation**

System → Date/time → Time zone

Description

Select the time zone. Every time the time zone is changed, a logbook entry is created.

Selection*Other units*

- UTC-12:00
- UTC-11:00
- UTC-10:00
- UTC-09:30
- UTC-09:00
- UTC-08:00
- UTC-07:00
- UTC-06:00
- UTC-05:00
- UTC-04:00
- UTC-03:30
- UTC-03:00
- UTC-02:30
- UTC-02:00
- UTC-01:00
- UTC 00:00
- UTC+01:00
- UTC+02:00
- UTC+03:00
- UTC+03:30
- UTC+04:00
- UTC+04:30
- UTC+05:00
- UTC+05:30
- UTC+05:45
- UTC+06:00
- UTC+06:30
- UTC+07:00
- UTC+08:00
- UTC+08:45
- UTC+09:00
- UTC+09:30
- UTC+10:00
- UTC+10:30
- UTC+11:00
- UTC+12:00
- UTC+12:45
- UTC+13:00
- UTC+13:45
- UTC+14:00

Enable NTP**Navigation**

System → Date/time → Enable NTP

Selection

- No
- Yes

NTP server address

Navigation System → Date/time → NTP server add.

Description IP address of the NTP server.

User entry Character string comprising numbers, letters and special characters (64)

Clock synchronized

Navigation System → Date/time → Clock synch.

Description Timestamp of last synchronization with an NTP server.

User interface Character string comprising numbers, letters and special characters

3.6.6 "Geolocation" submenu

Navigation System → Geolocation

Location description

Navigation System → Geolocation → Location descr.

Description Enter a description for the location

User entry Character string comprising numbers, letters and special characters (32)

Longitude

Navigation System → Geolocation → Longitude

Description Enter the longitude.

User entry -180 to 180 °

Latitude**Navigation** System → Geolocation → Latitude**Description** Enter latitude**User entry** -90 to 90 °

Altitude**Navigation** System → Geolocation → Altitude**Description** Enter altitude**User entry** Signed floating-point number

3.6.7 "Information" submenu*Navigation* System → Information

Device name**Navigation** System → Information → Device name**Description** Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.**User interface** Max. 32 characters such as letters or numbers.

Manufacturer**Navigation** System → Information → Manufacturer**User interface** Character string comprising numbers, letters and special characters

Serial number

Navigation
  System → Information → Serial number
Description

Displays the serial number of the measuring device.



The number can be found on the nameplate of the sensor and transmitter.

User interface

Max. 11-digit character string comprising letters and numbers.

Additional information*Description***Uses of the serial number**

- To identify the measuring device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the measuring device using the Device Viewer: www.endress.com/deviceviewer

Order code

Navigation
  System → Information → Order code
Description

Shows the device order code.

User interface

Character string composed of letters, numbers and certain punctuation marks (e.g. /).

Factory setting

–

Additional information*Description*

The order code is generated from the extended order code through a process of reversible transformation. The extended order code indicates the attributes for all the device features in the product structure. The device features are not directly readable from the order code.

**Uses of the order code**

- To order an identical spare device.
- To identify the device quickly and easily, e.g. when contacting Endress+Hauser.

Firmware version

Navigation
  System → Information → Firmware version
Description

Displays the device firmware version that is installed.

User interface

Character string in the format xx.yy.zz

Additional information*User interface*

The Firmware version is also located:

- On the title page of the Operating instructions
- On the transmitter nameplate

Hardware version

Navigation  System → Information → Hardware version**User interface**

Character string comprising numbers, letters and special characters

Extended order code 1

**Navigation** System → Information → Ext. order cd. 1**Description**

The extended order code is an alphanumeric code containing all information to identify the device and its options.

User interface

Character string

Factory setting

–

Additional information*Description*

The extended order code indicates the version of all the features of the product structure for the measuring device and thus uniquely identifies the measuring device.

Extended order code 2

**Navigation** System → Information → Ext. order cd. 2**Description**

The extended order code is an alphanumeric code containing all information to identify the device and its options.

 The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.**User interface**

Character string

Factory setting

–

Extended order code 3

**Navigation** System → Information → Ext. order cd. 3**Description**

The extended order code is an alphanumeric code containing all information to identify the device and its options.

 The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.**User interface**

Character string

Factory setting

-

Checksum**Navigation**  System → Information → Checksum**Description** Checksum for Firmware version.**User interface** Positive integer**3.6.8 "Software configuration" submenu***Navigation*  System → Softw. config.**Activate SW option****Navigation**  System → Softw. config. → Activate SW opt.**Description** Use this function to enter an activation code to enable an additional, ordered software option.**User entry** Max. 10-digit string of numbers.**Factory setting** Depends on the software option ordered**Additional information** *Description*

If a measuring device was ordered with an additional software option, the activation code is programmed in the device at the factory.

User entry

To activate a software option subsequently, please contact your Endress+Hauser sales organization.

NOTE!

The activation code is linked to the serial number of the measuring device and varies according to the device and software option.

If an incorrect or invalid code is entered, this results in the loss of software options that have already been activated.

- ▶ Before you enter a new activation code, make a note of the current activation code from the parameter protocol.
- ▶ Enter the new activation code provided by Endress+Hauser when the new software option was ordered.
- ▶ If the code entered is incorrect or invalid, enter the old activation code from the parameter protocol.

- Have the Endress+Hauser sales organization check the new activation code remembering to specify the serial number or ask for the code again.

Example for a software option

Order code for "Application package", option **EA** "Extended HistoROM"

Software option overview

Navigation  System → Softw. config. → SW option overv.

Description Shows all enabled software options

User interface

- Heartbeat Verification
- Heartbeat Monitoring

"Firmware update" wizard

Depending on device and software interface, it is possible to update main software, sensor and display firmware.

Be sure to have a valid firmware package (e.g.: Device_Name_BusType_Vxx.yy.zz_bbbb_pkgVuu.vv.ww.sfu) already available on your system.

A list of available firmware can be found on “www.endress.com” or asking to local service supplier.

If the firmware is validated, a further confirmation will be prompted before to start the update process.

It is always possible to cancel the firmware update process before final confirmation.

Navigation  System → Softw. config. → Firmware update

"Start update" wizard

Warning: Firmware update is irreversible. It is not always possible to downgrade the firmware after a successfully update to ensure compatibility.

Be sure to save configuration before to start the firmware update process.

After firmware confirmation a device restart can occur; be sure to consider all the related safety measures.

Navigation

System → Softw. config. → Firmware update → Start update

I have read the warning texts.

**Navigation**

System → Softw. config. → Firmware update → Start update → warning texts

Selection

Yes

"Device information" wizard

Warning: Firmware update is irreversible. It is not always possible to downgrade the firmware after a successful update to ensure compatibility.

Be sure to save configuration before starting the firmware update process.

After firmware confirmation a device restart can occur; be sure to consider all the related safety measures.

Navigation

System → Softw. config. → Firmware update → Device info

Device tag**Navigation**

System → Softw. config. → Firmware update → Device info → Device tag

Description


Displays a unique name for the measuring point so it can be identified quickly within the plant. The name is displayed in the header.

User interface

Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).

Additional information

User interface

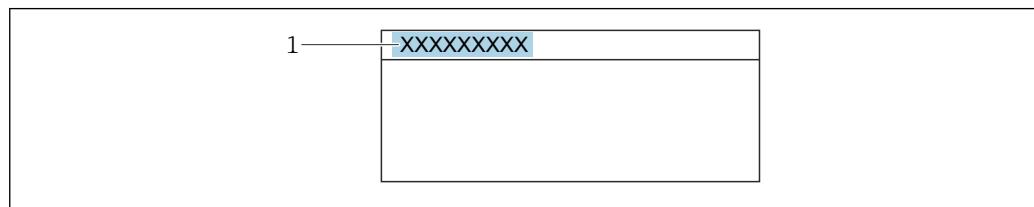

1 Position of the header text on the display

The number of characters displayed depends on the characters used.

Device name

Navigation	 System → Softw. config. → Firmware update → Device info → Device name
Description	Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.
User interface	Max. 32 characters such as letters or numbers.

Package version

Navigation	 System → Softw. config. → Firmware update → Device info → Package version
Description	Current version of installed firmware package. The package is an '.sfu' extension file containing all needed device software components.
User interface	Positive integer

"Select file" wizard

Select firmware update file to be transferred to the device.

Navigation  System → Softw. config. → Firmware update → Select file

File check status

Navigation	 System → Softw. config. → Firmware update → Select file → File check st.
User interface	<ul style="list-style-type: none">■ Active■ Failed■ Not done■ Passed

"Performing verification" wizard

Navigation



System → Softw. config. → Firmware update → Perform.verific.

File validation status

Navigation



System → Softw. config. → Firmware update → Perform.verific. → File val. st.

User interface

■ Active

■ Failed

■ Not done

■ Passed

"Finish" wizard

Caution: Firmware updates are irreversible.

Firmware update has been transferred successfully. Continue to start update.

Navigation



System → Softw. config. → Firmware update → Finish

I have read the warning texts.



Navigation



System → Softw. config. → Firmware update → Finish → warning texts

Selection

Yes

Index

0 ... 9

- | | |
|---|----|
| 436 Diagnostic behavior (Parameter) | 48 |
| 436 Event category (Parameter) | 49 |
| 500 Diagnostic behavior (Parameter) | 49 |
| 500 Event category (Parameter) | 49 |
| 500 Process alert pressure (Parameter) | 46 |
| 501 Diagnostic behavior (Parameter) | 50 |
| 501 Event category (Parameter) | 50 |
| 501 Process alert scaled variable (Parameter) | 47 |
| 502 Diagnostic behavior (Parameter) | 50 |
| 502 Event category (Parameter) | 51 |
| 841 Event category (Parameter) | 51 |
| 900 Diagnostic behavior (Parameter) | 52 |
| 900 Event category (Parameter) | 52 |
| 906 Diagnostic behavior (Parameter) | 52 |
| 906 Event category (Parameter) | 53 |

A

- | | |
|--|--------|
| Acknowledge parameter change (Parameter) | 67 |
| Activate SW option (Parameter) | 91 |
| Activate table (Parameter) | 65 |
| Active diagnostics (Parameter) | 38 |
| Active diagnostics (Submenu) | 38 |
| Active TCP connections (Parameter) | 80 |
| Altitude (Parameter) | 88 |
| Analog input 1 to 7 (Submenu) | 67 |
| Application (Menu) | 54 |
| Application relation (Submenu) | 70 |
| AR state (Parameter) | 70 |
| Assign process variable (Parameter) | 37, 68 |
| Assign scaled variable? (Parameter) | 29 |
| Auto negotiation status (Parameter) | 78 |
| Available UDP ports (Parameter) | 81 |

B

- | | |
|---|----|
| Binary input 1 to 2 (Submenu) | 68 |
| Binary output (Submenu) | 69 |
| Bluetooth activation (Parameter) | 76 |
| BO block output value (Parameter) | 69 |

C

- | | |
|---|--------|
| Calibration offset (Parameter) | 58 |
| Checksum (Parameter) | 91 |
| Clock synchronized (Parameter) | 87 |
| Commissioning (Wizard) | 23 |
| Configuration (Submenu) | 48, 66 |
| Configuration counter (Parameter) | 73 |
| Confirm new password (Parameter) | 75 |
| Connectivity (Submenu) | 76 |
| Contrast display (Parameter) | 85 |
| Controller input value (Parameter) | 68 |
| Counter limit overruns sensor Pmax (Parameter) | 43 |
| Counter limit overruns sensor Tmax (Parameter) | 44 |
| Counter limit underruns sensor Pmin (Parameter) | 41 |
| Counter limit underruns sensor Tmin (Parameter) | 42 |
| Counter overruns of user limit Pmax (Parameter) | 43 |

Counter overruns of user limit Tmax (Parameter) 44
Counter underruns of user limit Pmin (Parameter) 41
Counter underruns of user limit Tmin (Parameter) 42

D

- | | |
|--|----------------|
| Damping (Parameter) | 29, 60, 68 |
| Date/time (Parameter) | 27, 85 |
| Date/time (Submenu) | 85 |
| Decimal places pressure (Parameter) | 55 |
| Decimal places scaled variable (Parameter) | 57 |
| Default gateway (Parameter) | 77 |
| Description of device parameters | 19 |
| Descriptor (Parameter) | 28, 67 |
| Device ID (Parameter) | 28, 70 |
| Device identification (Wizard) | 23, 25, 26, 27 |
| Device information (Menu) | 22 |
| Device information (Wizard) | 93 |
| Device management (Submenu) | 72 |
| Device name (Parameter) | 23, 88, 94 |
| Device tag (Parameter) | 23, 72, 93 |
| Diagnostic event simulation (Parameter) | 45 |
| Diagnostic settings (Submenu) | 46 |
| Diagnostics (Menu) | 38 |
| Display (Submenu) | 82 |
| Display operation (Parameter) | 76 |
| Do not show this message again (Parameter) | 22 |
| Document | |

Document

- | | |
|---|----|
| Explanation of the structure of a parameter | |
| description | 4 |
| Function | 4 |
| Structure | 4 |
| Symbols used | 5 |
| Target group | 4 |
| Using the document | 4 |
| cument function | 4 |
| plex status (Parameter) | 78 |

E

- | | |
|---|--------|
| Electronics temperature (Parameter) | 54 |
| Enable NTP (Parameter) | 86 |
| Enter access code (Parameter) | 74 |
| Ethernet (Submenu) | 77 |
| Event logbook (Submenu) | 40 |
| Extended order code 1 (Parameter) | 24, 90 |
| Extended order code 2 (Parameter) | 24, 90 |
| Extended order code 3 (Parameter) | 24, 90 |

F

- | | |
|--|----|
| Failure behavior (Parameter) | 69 |
| Failure behavior delay (Parameter) | 69 |
| File check status (Parameter) | 94 |
| File validation status (Parameter) | 95 |
| Filter options (Parameter) | 40 |
| Finish (Wizard) | 95 |
| Firmware update (Wizard) | 92 |
| Firmware version (Parameter) | 89 |
| Fixed value (Parameter) | 70 |

Format display (Parameter)	82
Free text (Parameter)	31, 57, 63
Function	
see Parameter	
G	
Geolocation (Submenu)	87
Guidance (Menu)	19, 23
H	
Hardware version (Parameter)	90
High alert value (Parameter)	47, 48
HP/LP swap (Parameter)	60
I	
I have read the warning texts. (Parameter)	93, 95
Information (Submenu)	70, 88
Interface connection status (Parameter)	78
Interface speed (Parameter)	78
Interfaces (Submenu)	76
IP address (Parameter)	27, 77
IP address backup IO controller (Parameter)	71
IP address IO controller (Parameter)	71
L	
Language (Parameter)	82
Latitude (Parameter)	88
Location description (Parameter)	87
Locking status (Parameter)	25, 72
Longitude (Parameter)	87
Low alert value (Parameter)	46, 47, 48
Low flow cut off (Parameter)	33, 65
Lower Range Limit (Parameter)	34, 36, 61
Lower range value (Parameter)	59
Lower sensor trim (Parameter)	59
M	
MAC address (Parameter)	28, 77
MAC address backup IO controller (Parameter)	71
MAC address IO controller (Parameter)	71
Manufacturer (Parameter)	88
Manufacturer ID (Parameter)	28
Maximum electronics temperature (Parameter)	44
Maximum sensor temperature (Parameter)	43
Maximum terminal voltage (Parameter)	44
Measured values (Submenu)	54
Measurement adjustments (Wizard)	29, 30, 32
Measuring units (Submenu)	55
Menu	
Application	54
Device information	22
Diagnostics	38
Guidance	19, 23
System	72
Minimum electronics temperature (Parameter)	42
Minimum sensor temperature (Parameter)	41
Minimum span (Parameter)	34, 37, 61
Minimum terminal voltage (Parameter)	42
Minimum/maximum values (Submenu)	41

N	
New password (Parameter)	75
NTP server address (Parameter)	87
Number of failed received packets (Parameter)	79
Number of failed sent packets (Parameter)	79
Number of received TCP packets (Parameter)	80
Number of TCP connections closed (Parameter)	80
Number of TCP failed received packets (Parameter)	81
Number of UDP failed received packets (Parameter)	81
O	
Old password (Parameter)	75
Operating time (Parameter)	40
Operating time from restart (Parameter)	39
Order code (Parameter)	89
Output settings (Wizard)	33, 34, 35, 37
P	
PA profile version (Parameter)	70
Package version (Parameter)	94
Parameter	
Structure of a parameter description	4
Parameter change acknowledge mode (Parameter)	67
Password (Parameter)	74
Performing verification (Wizard)	95
Pressure (Parameter)	22, 33, 34, 54, 64, 65
Pressure max (Parameter)	43
Pressure min (Parameter)	41
Pressure unit (Parameter)	29, 30, 55
Pressure value 1 (Parameter)	35, 64
Pressure value 2 (Parameter)	36, 65
Previous diagnostics (Parameter)	39
Process (Submenu)	51
Process value (Parameter)	67
PROFINET (Submenu)	66
PROFINET device name (Parameter)	27, 66
Properties (Submenu)	46
R	
Received packet number (Parameter)	79
Reset device (Parameter)	73
Reset password (Parameter)	75
Reset user defined counters P and T (Parameter)	42
S	
Scaled variable (Parameter)	22, 35, 54, 66
Scaled variable (Submenu)	62
Scaled variable transfer function (Parameter)	33, 35, 64
Scaled variable unit (Parameter)	31, 56, 62
Scaled variable value 1 (Parameter)	36, 64
Scaled variable value 2 (Parameter)	36, 65
Select file (Wizard)	94
Sensor calibration (Submenu)	58
Sensor configuration (Submenu)	60
Sensor limits (Submenu)	61
Sensor pressure range behavior (Parameter)	51
Sensor temperature (Parameter)	54
Sensor temperature lower range limit (Parameter)	61
Sensor temperature upper range limit (Parameter)	62

Sensor Trim Reset (Parameter)	58
Sent packet number (Parameter)	79
Serial number (Parameter)	23, 89
Service (UART-CDI) (Parameter)	76
Service IP active (Parameter)	78
Set point value (Parameter)	69
Signal to noise ratio (Parameter)	79
Simulation (Parameter)	45
Simulation (Submenu)	45
Software configuration (Submenu)	91
Software option overview (Parameter)	92
SSD Monitoring delay time (Parameter)	46
SSD Out of range delay time (Parameter)	46
Start update (Wizard)	92
Status password entry (Parameter)	74
Status signal (Parameter)	22
Submenu	
Active diagnostics	38
Analog input 1 to 7	67
Application relation	70
Binary input 1 to 2	68
Binary output	69
Configuration	48, 66
Connectivity	76
Date/time	85
Device management	72
Diagnostic settings	46
Display	82
Ethernet	77
Event logbook	40
Geolocation	87
Information	70, 88
Interfaces	76
Measured values	54
Measuring units	55
Minimum/maximum values	41
Process	51
PROFINET	66
Properties	46
Scaled variable	62
Sensor calibration	58
Sensor configuration	60
Sensor limits	61
Simulation	45
Software configuration	91
User management	74
Subnet mask (Parameter)	77
Supported TCP connections (Parameter)	80
System (Menu)	72

T

Target group	4
TCP connection requests (Parameter)	80
TCP connection timeouts (Parameter)	80
TCP sent packet number (Parameter)	81
Temperature unit (Parameter)	30, 32, 55
Terminal voltage 1 (Parameter)	54
Time zone (Parameter)	26, 85
Timestamp (Parameter)	38, 39

U

UDP received packet number (Parameter)	81
UDP sent packet number (Parameter)	81
Upper Range Limit (Parameter)	34, 36, 61
Upper range value (Parameter)	59
Upper sensor trim (Parameter)	59
User management (Submenu)	74
User role (Parameter)	74
User temperature process alert (Parameter)	48

V

Value 1 display (Parameter)	83
Value 2 display (Parameter)	83
Value 3 display (Parameter)	84
Value 4 display (Parameter)	84
Value pressure simulation (Parameter)	45

W

Web server functionality (Parameter)	76
Wizard	
Commissioning	23
Device identification	23, 25, 26, 27
Device information	93
Finish	95
Firmware update	92
Measurement adjustments	29, 30, 32
Output settings	33, 34, 35, 37
Performing verification	95
Select file	94
Start update	92

Z

Zero adjustment (Parameter)	32, 58
Zero adjustment offset (Parameter)	58



71606665

www.addresses.endress.com
