

# Safety Instructions

## TR/TC6x

Thermometer

Ex db IIC T1...T6 Gb



# TR/TC6x

Thermometer

## Table of contents

Associated documentation .....	3
Supplementary documentation .....	3
Manufacturer's certificates .....	3
Safety instructions .....	4
Safety instructions: Installation of protection flameproof .....	4
Safety instructions: Installation of dust ignition protection .....	5
Safety instructions: Specific conditions of use .....	6
Temperature tables .....	6
Electrical connection data .....	7

**Associated documentation**

To commission the device, please observe the Operating Instructions pertaining to the device:  
[www.endress.com/<product code>](http://www.endress.com/<product code>), e.g. TR61

**Supplementary documentation**

Explosion protection brochure: CP00021Z  
The explosion protection brochure is available on the Internet:  
[www.endress.com/Downloads](http://www.endress.com/Downloads)

**Manufacturer's certificates****NEPSI Certificate of conformity**

Certificate number: GYJ20.1294X

Affixing the certificate number certifies conformity with the following standards (depending on the device version)

- GB3836.1-2010
- GB3836.2-2010

**CCC Certificate of conformity**

Certificate number:

2020322315002507

2020322315002506


Affixing the certificate number certifies conformity with the following standards (depending on the device version)

- GB/T 3836.1-2021
- GB/T 3836.2-2021



Please refer to NEPSI/CCC certificates for conditions of safe use.

**Safety instructions**

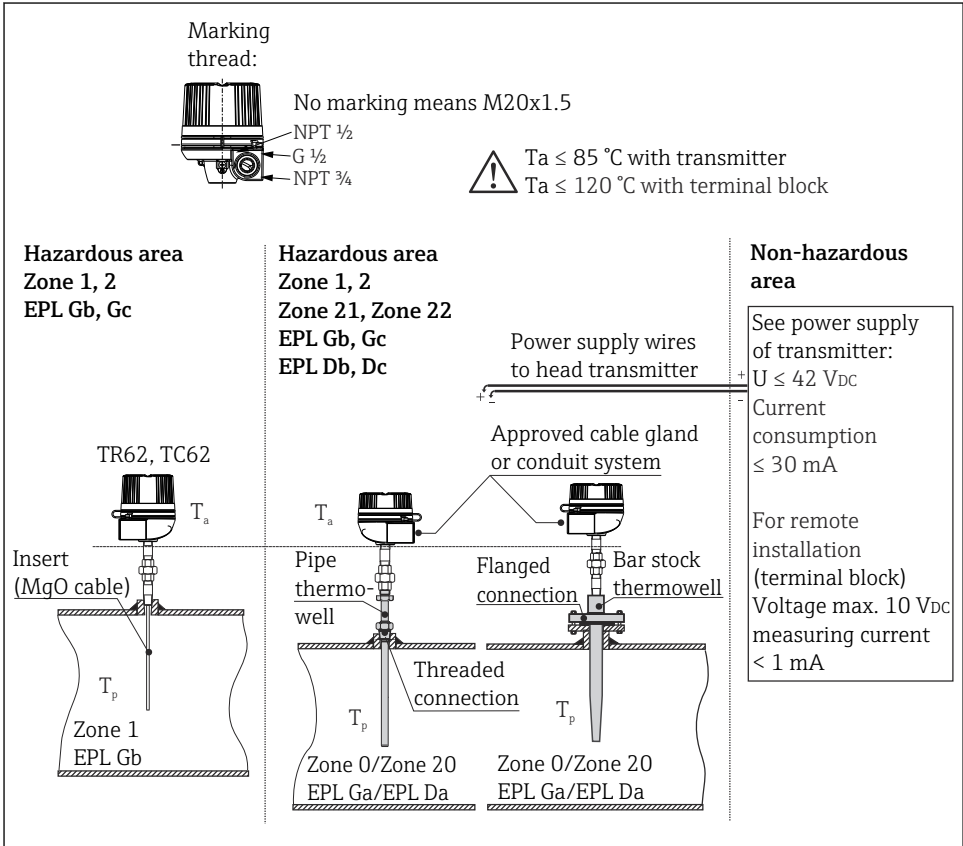

A0045320

**Safety instructions:**  
**Installation of protection flameproof**

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- The housing of the thermometer must be connected to the potential matching line.
- Only the approved wire entries as specified in paragraph 10 of EN/IEC 60079-14, paragraph 16 of EN/IEC 60079-0, paragraph 13 of EN/IEC 60079-1 must be used.
- For connection through a conduit entry approved for this purpose the associated sealing facility shall be mounted directly to the housing.

- Seal the cable entries with certified cable glands and or blanking elements which have at least type of protection Ex db and Ex tb suitable for Group IIC and IIIC (degree of protection IP6X).
- The maximum specified ambient temperature  $T_a$  at terminal head may not be exceeded.
- If this equipment is used above  $+65\text{ }^\circ\text{C}$ , the cables and cable gland shall be suitable at least max.  $T_a + 12\text{K}$ .
- During operation, the cover must be screwed all the way in and the cover's safety catch must be fastened.
- The thermometer must be installed so, that even in the event of rare incidents, an ignition source due to impact or friction between the enclosure and iron/steel is excluded.

**⚠ WARNING**

**Explosive atmosphere**

- ▶ Do not open the electrical connection of the power supply circuit under voltage in an explosive atmosphere.

**Safety instructions:  
Installation of dust ignition protection**

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- Seal the cable entries tight with certified cables which have at least type of protection Ex tb suitable for Group IIIC (degree of protection IP6X)
- The housing of the thermometer must be connected to the potential matching line.
- If this equipment is used above  $+65\text{ }^\circ\text{C}$ , the cables and cable gland shall be suitable at least max.  $T_a + 12\text{K}$ .

**⚠ WARNING**

**Explosive atmosphere**

- ▶ In an explosive atmosphere, do not open the device when voltage is supplied (ensure that the IP6x housing protection is maintained during operation).

**Safety instructions:**  
**Specific conditions of use**

- The flameproof joints are not intended to be repaired.
- Sensors of TX6x with diameter smaller than 6 mm shall be protected by thermowell.
- It shall be verified, taking into account the worst case process and ambient temperatures,
  - that the temperature of the enclosure at the process connection point does not exceed the ambient temperature range of the assembly and
  - the temperature of the optionally used RBFF1NS union does not exceed the service temperature range of  $-50$  to  $+150$  °C for following option:  
 Neck length N; Material; Fitting:  
**D** 104 mm; 316; NU 1/2"NPT F  
**E** 156 mm; 316; NUN 1/2"NPT M  
**H** 104 mm; A105; NU 1/2"NPT F
- Install only head transmitters not exceeding a maximum power dissipation of 2.2 W with a temperature input rating not exceeding  $10 V_{DC}$  and 1 mA.
- For assure that the temperature assembly has a degree of protection of IP6X the user shall provide a thermowell or equivalent component at the process side.

**Temperature tables**

*The relation between the type, electrical connection, temperature class, maximum surface temperature, ambient temperature range and process temperature range is shown in the following table.*

Type	Electrical connection	Temperature class	Maximum surface temperature	Ambient temperature range	Process temperature range	
					Insert diameter	3 mm, 6 mm dual
Tx6x	Terminal block <sup>1)</sup> (C)	T6	T85 °C	-50 to +70 °C	-50 to +55 °C	-50 to +68 °C
		T5	T100 °C	-50 to +80 °C	-50 to +70 °C	-50 to +83 °C
		T4	T135 °C	-50 to +120 °C	-50 to +105 °C	-50 to +118 °C
		T3	T200 °C	-50 to +120 °C	-50 to +170 °C	-50 to +183 °C
		T2	T300 °C	-50 to +120 °C	-50 to +265 °C	-50 to +278 °C
		T1	T450 °C	-50 to +120 °C	-50 to +415 °C	-50 to +428 °C

Type	Electrical connection	Temperature class	Maximum surface temperature	Ambient temperature range	Process temperature range Insert diameter	
					3 mm, 6 mm dual	6 mm
	Flying leads (F) or Transmitter TMT71(A) TMT72 (E) TMT82 (K, L, M, N) TMT84 (B) TMT85 (D) TMT180 (2, 3, 4, 5) TMT181 (G) TMT182 (H, J, K, O) TMT31 (U, O) TMT86 (X, Z)	T6	T85 °C	-40 to +65 °C	-50 to +55 °C	-50 to +68 °C
		T5	T100 °C	-40 to +80 °C	-50 to +70 °C	-50 to +83 °C
		T4	T135 °C	-40 to +85 °C	-50 to +105 °C	-50 to +118 °C
		T3	T200 °C	-40 to +85 °C	-50 to +170 °C	-50 to +183 °C
		T2	T300 °C	-40 to +85 °C	-50 to +265 °C	-50 to +278 °C
		T1	T450 °C	-40 to +85 °C	-50 to +415 °C	-50 to +428 °C

1) in an enclosure with a blind cover;



Transmitters are not in the scope of CCC. For detail information:  
[www.endress.com](http://www.endress.com).

## Electrical connection data

Type	Electrical data
TR61, TR62, TR63, TR65, TR66 TC61, TC62, TC63, TC65, TC66	$U_b \leq 42 V_{DC}$ Current consumption $\leq 30 \text{ mA}$ Remote installation: Voltage max. $10 V_{DC}$ Measuring current $I < 1 \text{ mA}$



71613154

[www.addresses.endress.com](http://www.addresses.endress.com)

---