

Safety Instructions

Proline t-mass 500

JPN: Zone 1
Zone 0/1
Zone 21



Proline t-mass 500

Table of contents

Associated documentation	4
Certificates and declarations	4
Certificate holder	4
Extended order code	5
Safety instructions: General	8
Safety instructions: Installation	9
Safety instructions: Zone 0	10
Safety instructions: Zone 21	10
Temperature tables	11
Explosion hazards arising from gas and dust	13
Connection values: Signal circuits	14

Associated documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* (www.endress.com/deviceviewer): Enter serial number from nameplate.
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

To commission the device, please observe the Operating Instructions pertaining to the device:

Measuring device	Documentation code	
	HART	Modbus RS485
t-mass F 500	BA01996D	BA01998D
t-mass I 500	BA01997D	BA01999D

Additional documentation

Contents	Document type	Documentation code
Explosion Protection	Brochure	CP00021Z/11

Please note the documentation associated with the device.

Certificates and declarations**JPN Type Examination Certificate**

Certificate number:

- CML 17JPN2348X (Proline 500 – digital)
- CML 17JPN2348X

Affixing the certificate number certifies conformity with the standards (depending on the device version).

- JNIOOSH-TR-46-1: 2020
- JNIOOSH-TR-46-2: 2018
- JNIOOSH-TR-46-6: 2015
- JNIOOSH-TR-46-9: 2018
- IEC 60079-26: 2021

Certificate holder

Endress+Hauser Flowtec AG
Kägenstrasse 7
4153 Reinach BL
Switzerland

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

$$\begin{array}{c} \text{*****} \quad - \quad \text{*****} \dots \text{*****} \quad + \quad \text{A*B*C*D*E*F*G*...} \\ \hline \text{(Device type)} \quad \quad \quad \text{(Basic specifications)} \quad \quad \quad \text{(Optional specifications)} \end{array}$$

* = Placeholder
At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Device type

The device and the device design is defined in the "Device type" section (Product root).

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).


More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Device type

Position	Order code for	Option selected	Description
1	Instrument family	6	Thermisches Massedurchfluss-Messgerät
2 ¹⁾	Sensor	F, I	Sensor type
3	Transmitter	5	Transmitter type: 4-wire, remote version

Position	Order code for	Option selected	Description
4	Generation index	B	Platform generation
5, 6 ²⁾	Nominal diameter	<ul style="list-style-type: none"> ■ t-mass F: DN 15 to 100 ■ t-mass I: Insertion length 235 to 608 mm 	Nominal diameter of sensor

- 1) For replacement transmitter only: X
 2) For replacement transmitter only: XX

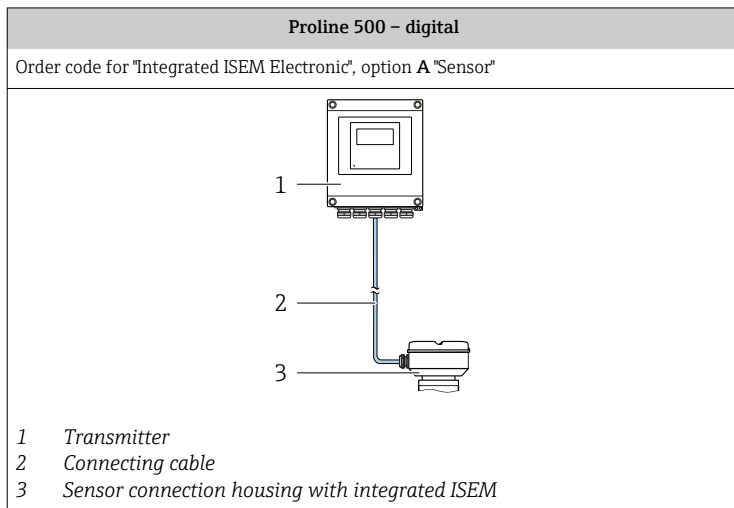

Basic specifications

Position 1, 2 Order code for "Approval" Selected option	Position 4, 5 Order code for "Output, input 1" Selected option	Type of protection	
		Transmitter	Sensor connection housing
JJ ¹⁾	A	[Ex ia] IIC [Ex ia] IIIC ²⁾	Ex db ia IIC T4...T1 Ga/Gb Ex ia tb IIIC T**°C Db ²⁾ or Ex db ia IIC T4...T1 Gb Ex ia tb IIIC T**°C Db ²⁾

- 1) The transmitter is located in a non-hazardous area.
 2) The marking may be applied depending on users' applications.

Position	Order code for	Option selected	Description
4, 5	Output, input 1	BA	4-20mA HART
		MA	Modbus RS485
6	Output, input 2	A	W/o
		B	4-20mA

Position	Order code for	Option selected	Description
		D	Configurable I/O initial setting off
		E	Pulse/frequency/switch output
		H	Relay
		I	4-20mA input
		J	Status input
7	Output, input 3	A	W/o
		B	4-20mA
		D	Configurable I/O initial setting off
		E	Pulse/frequency/switch output
		H	Relay
		I	4-20mA input
		J	Status input
8	Output; input 4	A	W/o
		B	4-20mA
		D	Configurable I/O initial setting off
		E	Pulse/frequency/switch output
		H	Relay
		I	4-20mA input
		J	Status input
9	Display; Operation	F	4-line, illuminated; touch control
		G	4-line, illuminated; touch control + WLAN
10	Integrated ISEM Electronic	A	Sensor
11	Transmitter Housing	A	Alu, coated
12	Sensor junction Housing	A	Alu, coated
		L	Cast, stainless
20, 21	Device Model	A2	2

Optional specifications

ID	Order code for	Option selected	Description
Jx	Test, certificate	JP	Ambient temperature transmitter -50 °C
Px	Enclosed accessories	P8	Wireless antenna, wide area (external WLAN antenna) ¹⁾

1) The external WLAN antenna is available with the order code for "Accessory Enclosed", option P8.

Safety instructions:
General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations or guidelines (e.g. JNIOH-TR-NO.44)
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- When using in hybrid mixtures (gas and dust occurring simultaneously), observe additional measures for explosion protection.
- For measuring device with digital signal transmission, order code for "Integrated ISEM electronics", Option A "Sensor" open the housing cover of the **sensor connection housing** in explosion protection Ex db only if one of the following conditions is met:
 - An explosive atmosphere is not present.
 - A waiting time of 10 minutes is observed after switching off the power supply.
The following warning notice is on the device:
WARNING – AFTER DE-ENERGIZING, DELAY 10 MINUTES
BEFORE OPENING ENCLOSURE IN TYPE OF PROTECTION EX D
- In devices with damaged Ex d threads:
 - Use in hazardous areas is not permitted.
 - Repair of Ex d threads is not permitted.
- Observe all the technical data of the device (see nameplate).
- Avoid electrostatic charge (e.g. caused by friction, cleaning, maintenance, strong currents in the medium):
On the attached stainless steel nameplate and on painted metallic housings that are not integrated into the local potential equalization system.

**Safety
instructions:
Installation**

- Continuous service temperature of the connecting cable:
 - 40 to +80 °C (–50 to +60 °C for optional specifications, ID Jx (Test Certificate) = JP); in accordance with the range of service temperature taking into account additional influences of the process conditions ($T_{a,min}$ and $T_{a,max} + 20$ K).
- Only use certified cable entries suitable for the application. Observe selection criteria as per JNIOOSH-TR-NO.44.
- The following applies when connecting the transmitter with a connection compartment in Ex db:
 - Only use separately certified cables and wire entries (Ex db IIC) which are suitable for operating temperatures up to 85 °C and for IP 66/67. If using conduit entries, the associated sealing mechanisms must be mounted directly on the housing.
 - Plastic sealing plugs act as transport protection and have to be replaced by suitable, individually approved installation material. The mounted metal thread extensions and blind plugs are tested and certified as part of the housing for type of protection Ex db IIC. The thread extension or the blind plug labeled as follows for identification purposes:
 - Md: M20 x 1.5
 - d: NPT ½"
 - Gd: G ½"
- The following cable glands approved by an Ex certification body may be installed on the devices with order code "Approval", option (for details, contact our service center):
 - Ex d, Ex t approved cable glands, e.g. EXTC-16MG
 - Ex d approved cable glands, e.g. KXBF-20·16
- Yellow cap attached to the cable glands is a transportation measure only, and is to be removed when the delivered device is installed.
- If the third cable gland is not used, remove it and seal the thread hole with Ex d blind plug (M20 x 1.5).
- Information on our service center: Service Desk, 5-70-3 Nisshin-cho, Fuchu-shi, Tokyo-to
 Tel: 042-314-1911
 Fax: 042-314-1951
- When the measuring device is connected, attention must be paid to explosion protection at the transmitter.
- For measuring devices with order code "Approval", option the transmitter housing (plastic) is allowed to be installed at most in a Pollution Degree 2 environment.

- When connecting through a conduit entry approved for this purpose, mount the associated sealing unit directly at the enclosure.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- Only use certified sealing plugs. The metal sealing plugs supplied meet this requirement.

Intrinsic safety

- Observe the guidelines for interconnecting intrinsically safe circuits (e.g. JNIOHS-TR-NO.44).
- When the intrinsically safe Ex ia circuits of the device are connected to certified intrinsically safe circuits of Category Ex ib for Equipment Groups IIC or IIB, the type of protection changes to Ex ib IIC or Ex ib IIB.
- Proline 500 - digital (Order code for "Integrated ISEM electronics", option A)
The connecting cables between the transmitter and sensor must meet the following requirements:
 - Group IIC: $L/R \leq 0.0089 \text{ mH}/\Omega$ or $L_{\text{cable}} \leq 26 \mu\text{H}$ and $C_{\text{cable}} \leq 760 \text{ nF}$
 - Group IIB: $L/R \leq 0.0356 \text{ mH}/\Omega$ or $L_{\text{cable}} \leq 104 \mu\text{H}$ and $C_{\text{cable}} \leq 4.2 \mu\text{F}$

Potential equalization

- Integrate the device into the potential equalization .
- If the ground connection has been established via the pipe as specified, it is also possible to integrate the sensor into the potential equalization system via the pipe.

Safety instructions: Zone 0

For sensors with EPL Ga/Gb the zone 0 is permitted in the measuring tube.

Safety instructions: Zone 21

- To ensure dust-tightness, securely seal all housing openings, cable entries and sealing plugs.
- Only open all housing briefly, ensuring that no dust or moisture enters the housing.
- Only use certified cable entries. The metal cable entries, extensions and sealing plugs supplied meet this requirement.
- Cable routing shall be arranged so that the cables are not exposed to friction effects and static buildup due to the passage of dust. Precautions shall be taken to prevent the build-up of static an surfaces of cables.

Temperature tables

Ambient temperature

Minimum ambient temperature

- $T_a = -40\text{ °C}$ depending on the selected device variant (see nameplate)
- *Optional specification, ID Jx (Test, Certificate) = JP*
 $T_a = -50\text{ °C}$ depending on the selected device variant (see nameplate)

Maximum ambient temperature

$T_a = +60\text{ °C}$ depending on the temperature class

Proline 500 – digital transmitter

Non-hazardous area

Transmitter housing material	$T_a\text{ [°C]}$			
	Non-hazardous area	T6	T5	T4
Aluminum	60	-	45	60
Polycarbonate	60	-	-	-

Medium temperature

Minimum medium temperature

$T_m = -50\text{ °C}$

Maximum medium temperature

T_m for T4...T1 depending on the maximum ambient temperature T_a

Proline 500 - digital


Order code for "Integrated ISEM electronics", option A

Maximum medium temperature with or without thermal insulation according to Endress+Hauser specifications

DN	T _{a, max} [°C]	T _{m, min} [°C]	T _{m, max} [°C]	T _m [°C]					
				T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
All	55	-50	180	-	-	115	155	180	180
	60			-	-	115	130	130	130

With thermal insulation without Endress+Hauser specifications

The specified reference temperature T_{ref} and the maximum medium temperature T_{m, max} for each temperature class must not be exceeded → 12.

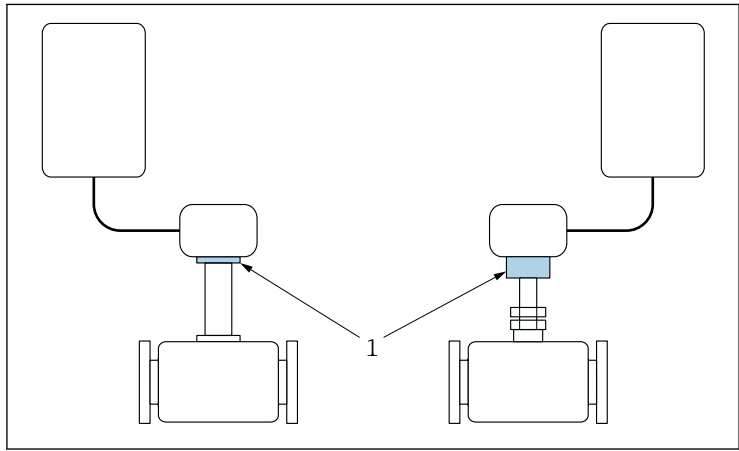

A0041737

1 Position of reference point for temperature measurement

1 Reference point (T_{ref})

Reference temperature T_{ref}

T6 [80 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
-	-	76	78	82	82

Explosion hazards arising from gas and dust

Determining the temperature class and surface temperature with the temperature table

- In the case of gas: Determine the temperature class as a function of the maximum ambient temperature T_a and the maximum medium temperature T_m .
- In the case of dust: Determine the maximum surface temperature as a function of the maximum ambient temperature T_a and the maximum medium temperature T_m .

Example

- Measured maximum ambient temperature: $T_{ma} = 58\text{ °C}$
- Measured maximum medium temperature: $T_{mm} = 98\text{ °C}$

T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
50	-	-	115	150	180	180
55	-	-	115	155	160	160
60	-	-	100	100	100	100

Diagram annotations: 1. Arrow from 60 in the T_a column to the 60 row. 2. Arrow from 98 in the T_m column to the 100 cell in the 60 row. 3. Arrow from the 100 cell to the 135 °C value in the T4 column.

A0041673

2 Procedure for determining the temperature class and surface temperature

1. In the column for the maximum ambient temperature T_a select the temperature that is immediately greater than or equal to the maximum ambient temperature T_{ma} that is present.
 - ↳ $T_a = 60\text{ °C}$.
The row showing the maximum medium temperature is determined.
2. Select the maximum medium temperature T_m of this row, which is immediately greater than or equal to the maximum medium temperature T_{mm} that is present.
 - ↳ The column with the temperature class for gas is determined:
 $98\text{ °C} \leq 100\text{ °C} \rightarrow T4$.
3. The maximum temperature of the temperature class determined corresponds to the maximum surface temperature for dust: $T4 = 135\text{ °C}$.

Connection values: Signal circuits

The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.

Terminal assignment

Transmitter: supply voltage, input/outputs

HART

Supply voltage		Input/output 1		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
Device-specific terminal assignment: adhesive label in terminal cover.									

Modbus RS485

Supply voltage		Input/output 1		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
Device-specific terminal assignment: adhesive label in terminal cover.									

Safety-related values

Order code for "Output; input 1"	Output type	Safety-related values "Output; input 1"	
		26 (+)	27 (-)
Option BA	Current output 4 to 20 mA HART	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$	
Option MA	Modbus RS485	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$	

Order code for "Output; input 2"; "Output; input 3" "Output; input 4"	Output type	Safety-related values					
		Output; input 2		Output; input 3		Output; input 4	
		24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
Option B	Current output 4 to 20 mA	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$					
Option D	User-configurable input/output	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$					
Option E	Pulse/frequency/ switch output	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$					

Order code for "Output; input 2"; "Output; input 3" "Output; input 4"	Output type	Safety-related values					
		Output; input 2		Output; input 3		Output; input 4	
		24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
Option H	Relay output	$U_N = 30 V_{DC}$ $I_N = 100 mA_{DC}/500 mA_{AC}$ $U_M = 250 V_{AC}$					
Option I	Current input 4 to 20 mA	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$					
Option J	Status input	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$					



71613373

www.addresses.endress.com
