

# Operating Instructions

## Liquiline CM44P

Universal four-wire multichannel controller for process spectrometers and Memosens sensors





## Table of contents

<b>1</b>	<b>About this document</b> .....	<b>5</b>	<b>8</b>	<b>Operation options</b> .....	<b>55</b>
1.1	Warnings .....	5	8.1	Overview .....	55
1.2	Symbols .....	5	8.2	Access to operating menu via local display ...	56
1.3	Symbols on the device .....	5	8.3	Configuration options .....	57
1.4	Documentation .....	6	<b>9</b>	<b>Commissioning</b> .....	<b>59</b>
<b>2</b>	<b>Basic safety instructions</b> .....	<b>7</b>	9.1	Function check .....	59
2.1	Requirements of the personnel .....	7	9.2	Power-up .....	59
2.2	Intended use .....	7	9.3	<b>User definable screens</b> .....	60
2.3	Workplace safety .....	8	9.4	Basic setup .....	61
2.4	Operational safety .....	8	<b>10</b>	<b>Operation</b> .....	<b>62</b>
2.5	Product safety .....	9	10.1	Display .....	62
<b>3</b>	<b>Device description</b> .....	<b>10</b>	10.2	General settings .....	64
3.1	Housing closed (field device) .....	10	10.3	Inputs .....	78
3.2	Standard device .....	10	10.4	Outputs .....	83
3.3	Open?? device with sensor communication module type 2DS Ex-i .....	11	10.5	Binary inputs and outputs .....	93
3.4	Overview (cabinet device) .....	12	10.6	Additional functions .....	99
3.5	Slot and port assignment .....	13	<b>11</b>	<b>Calibration</b> .....	<b>132</b>
3.6	Terminal diagram .....	14	11.1	Calibration instructions .....	132
<b>4</b>	<b>Incoming acceptance and product identification</b> .....	<b>15</b>	11.2	<b>CAL</b> menu .....	132
4.1	Incoming acceptance .....	15	<b>12</b>	<b>Diagnosis and troubleshooting</b> ....	<b>135</b>
4.2	Product identification .....	15	12.1	General troubleshooting .....	135
4.3	Scope of delivery .....	16	12.2	Diagnostic information on local display ....	136
<b>5</b>	<b>Mounting</b> .....	<b>17</b>	12.3	Diagnostic information via web browser ....	136
5.1	Mounting requirements .....	17	12.4	Diagnostic information via fieldbus .....	136
5.2	Mounting the measuring device (field device) .....	21	12.5	Adapting the diagnostic information .....	136
5.3	Mounting the measuring device (cabinet device) .....	26	12.6	Overview of diagnostic information .....	138
5.4	Post-mounting check .....	29	12.7	Pending diagnostic messages .....	157
<b>6</b>	<b>Electrical connection</b> .....	<b>30</b>	12.8	<b>Diagnostics list</b> .....	158
6.1	Connection conditions .....	30	12.9	Event logbook .....	158
6.2	Connecting the measuring device .....	30	12.10	<b>Simulation</b> .....	161
6.3	Connecting the sensors .....	36	12.11	Device test .....	162
6.4	Connecting additional inputs, outputs or relays .....	40	12.12	Resetting the measuring device .....	163
6.5	Connecting PROFIBUS DP or Modbus RS 485 .	44	12.13	Device information .....	164
6.6	Hardware settings .....	48	12.14	Firmware history .....	167
6.7	Ensuring the degree of protection .....	49	<b>13</b>	<b>Maintenance</b> .....	<b>169</b>
6.8	Post-connection check .....	50	13.1	Cleaning .....	169
<b>7</b>	<b>System integration</b> .....	<b>51</b>	<b>14</b>	<b>Repair</b> .....	<b>171</b>
7.1	Web server .....	51	14.1	General notes .....	171
7.2	Service interface .....	52	14.2	Spare parts .....	171
7.3	Fieldbus systems .....	53	14.3	Return .....	171
			14.4	Disposal .....	171
			<b>15</b>	<b>Accessories</b> .....	<b>172</b>
			15.1	Device-specific accessories .....	172
			15.2	Communication-specific accessories .....	177

15.3 Service-specific accessories ..... 178

15.4 System components ..... 180

15.5 Other accessories ..... 180

**16 Technical data ..... 182**

16.1 Input ..... 182

16.2 Digital inputs, passive ..... 183

16.3 Current input, passive ..... 183

16.4 Output ..... 183

16.5 Digital outputs, passive ..... 185

16.6 Current outputs, active ..... 185

16.7 Relay outputs ..... 186

16.8 Protocol-specific data ..... 187

16.9 Energy supply ..... 190

16.10 Performance characteristics ..... 192

16.11 Environment ..... 193

16.12 Mechanical construction ..... 194




  

**Index ..... 196**








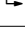


# 1 About this document



## 1.1 Warnings

Structure of information	Meaning
 <b>DANGER</b> <b>Causes (/consequences)</b> If necessary, Consequences of non-compliance (if applicable) ► Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation <b>will</b> result in a fatal or serious injury.
 <b>WARNING</b> <b>Causes (/consequences)</b> If necessary, Consequences of non-compliance (if applicable) ► Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation <b>can</b> result in a fatal or serious injury.
 <b>CAUTION</b> <b>Causes (/consequences)</b> If necessary, Consequences of non-compliance (if applicable) ► Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or more serious injuries.
<b>NOTICE</b> <b>Cause/situation</b> If necessary, Consequences of non-compliance (if applicable) ► Action/note	This symbol alerts you to situations which may result in damage to property.

## 1.2 Symbols

Symbol	Meaning
	Additional information, tips
	Permitted or recommended
	Recommended
	Not permitted or not recommended
	Reference to device documentation
	Reference to page
	Reference to graphic
	Result of a step

## 1.3 Symbols on the device

Symbol	Meaning
	Reference to device documentation
	Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

## 1.4 Documentation


The following manuals complement these Operating Instructions and are available on the product pages on the Internet:

- Brief Operating Instructions for Liquiline CM44P, KA01450C
- Operating Instructions for Memosens, BA01245C
  - Software description for Memosens inputs
  - Calibration of Memosens sensors
  - Sensor-specific diagnostics and troubleshooting
- Operating Instructions for HART communication, BA00486C
  - Onsite settings and installation instructions for HART
  - Description of HART driver
- Guidelines for communication via fieldbus and web server
  - HART, SD01187C
  - PROFIBUS, SD01188C
  - Modbus, SD01189C
  - Web server, SD01190C
  - EtherNet/IP, SD01293C
  - PROFINET, SD02490C

## 2 Basic safety instructions

### 2.1 Requirements of the personnel

- Installation, commissioning, operation and maintenance of the measuring system may be carried out only by specially trained technical personnel.
- The technical personnel must be authorized by the plant operator to carry out the specified activities.
- The electrical connection may be performed only by an electrical technician.
- The technical personnel must have read and understood these Operating Instructions and must follow the instructions contained therein.
- Faults at the measuring point may only be rectified by authorized and specially trained personnel.

 Repairs not described in the Operating Instructions provided must be carried out only directly at the manufacturer's site or by the service organization.

### 2.2 Intended use

#### 2.2.1 Non-hazardous environment

Liquiline CM44P is a multichannel controller for connecting process spectrometers and digital sensors with Memosens technology in non-hazardous environments.

The device is designed for use in the following applications:

- Food and beverages
- Life science
- Water and wastewater
- Chemical industry
- Power stations
- Other industrial applications

#### 2.2.2 Hazardous environment

- Pay attention to the information in the relevant documents relating to safety instructions (XA).

#### 2.2.3 Non-intended use and improper use

##### **NOTICE**

##### **Objects stored on top of the housing**

May cause short-circuits or fire or result in the failure of individual cabinet components or complete failure of the measuring point!

- Never place any objects, such as tools, cables, paper, food, liquid containers or similar, on top of the housing.
- Always observe the operator's regulations, in particular with regard to fire safety (smoking) and foodstuffs (beverages).

Use of the device for any purpose other than that described, poses a threat to the safety of people and of the entire measuring system and is therefore not permitted.

The manufacturer is not liable for damage caused by improper or non-designated use.

### 2.2.4 Installation environment (cabinet device only)

The device and the associated power units can be operated with 24 V AC, 24 V DC or 100 to 230 V AC and comply with IP20.

The components were designed for pollution degree 2 and for environments with non-condensing moisture. They must therefore be installed in an appropriate enclosure for protection. The ambient conditions specified in the instructions must be observed here.

## 2.3 Workplace safety

As the user, you are responsible for complying with the following safety conditions:

- Installation guidelines
- Local standards and regulations
- Regulations for explosion protection

### Electromagnetic compatibility

- The product has been tested for electromagnetic compatibility in accordance with the applicable international standards for industrial applications.
- The electromagnetic compatibility indicated applies only to a product that has been connected in accordance with these Operating Instructions.

## 2.4 Operational safety

### Before commissioning the entire measuring point:

1. Verify that all connections are correct.
2. Ensure that electrical cables and hose connections are undamaged.
3. Do not operate damaged products, and protect them against unintentional operation.
4. Label damaged products as defective.

### During operation:

- ▶ If faults cannot be rectified:  
products must be taken out of service and protected against unintentional operation.

### CAUTION

#### Programs not switched off during maintenance activities.

Risk of injury due to medium or cleaning agent!

- ▶ Quit any programs that are active.
- ▶ Switch to the service mode.
- ▶ If testing the cleaning function while cleaning is in progress, wear protective clothing, goggles and gloves or take other suitable measures to protect yourself.

## **2.5 Product safety**

### **2.5.1 State-of-the-art**

The product is designed to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. The relevant regulations and international standards have been observed.


### **2.5.2 IT security**

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

### 3 Device description


#### 3.1 Housing closed (field device)

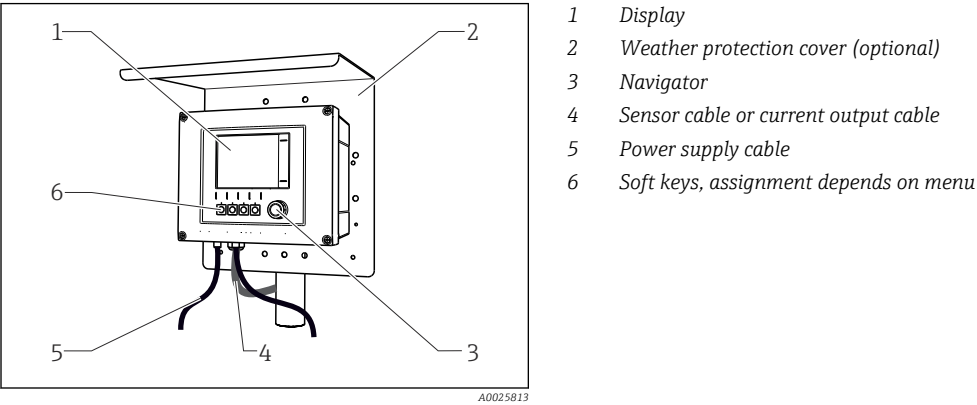

1 Mounted on a post

#### 3.2 Standard device

##### 3.2.1 Housing open (field device)

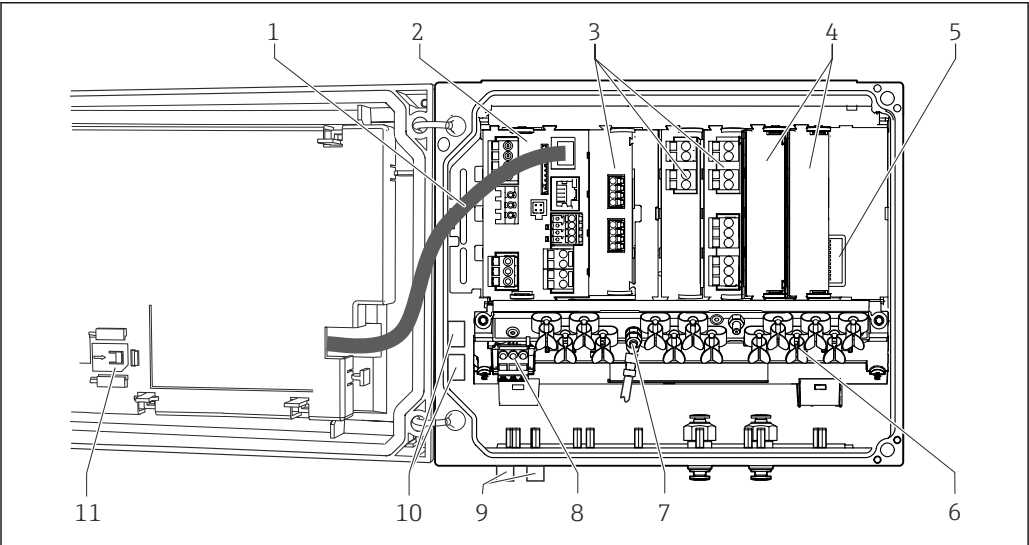


2 Example of a four-channel device with an open display cover (without wiring)

- |   |   |
|---|---|
| 1 Display cable                               | 7 Threaded bolt for protective ground connection            |
| 2 Basic module                                | 8 Extension power unit with internal cable                  |
| 3 Extension modules (optional)                | 9 M12 connectors for sensor connection (optional)           |
| 4 Shock protection, dummy cover and end cover | 10 Distributor terminals for user-defined use <sup>1)</sup> |
| 5 Extension backplane                         | 11 Storage slot for SD card                                 |
| 6 Cable mounting rail                         |   |

1) Example: you want to loop the signal from the alarm relay to a siren and a lamp. The terminals on the alarm relay only accommodate one cable. Route the signal from the alarm relay to a terminal on the distributor block. The block's terminals are all interconnected. You therefore have 3 additional terminals on this block from where you can carry the signal forward to the consumer (siren, lamp etc.). The signal can be multiplied in this way.

### 3.3 Open?? device with sensor communication module type 2DS Ex-i

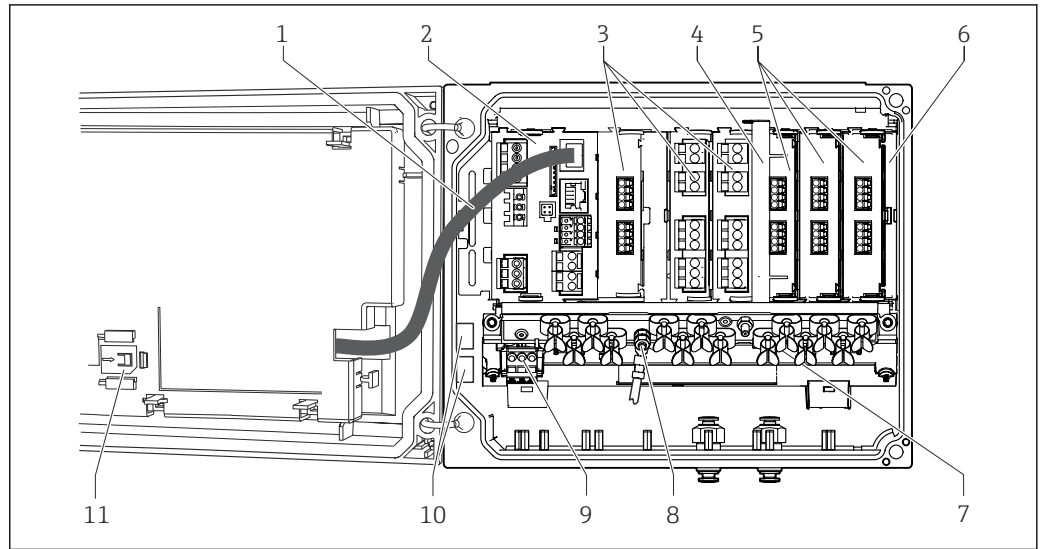

A0045639


3 Example of a field device with sensor communication module type 2DS Ex-i and open display cover (without wiring)

- |   |   |    |  |
|---|---|----|--|
| 1 | Display cable                               | 7  | Cable mounting rail                                      |
| 2 | Basic module                                | 8  | Threaded bolt for protective ground connection           |
| 3 | Extension modules (optional)                | 9  | Extension power unit                                     |
| 4 | Separation element (pre-installed)          | 10 | Distributor terminals for user-defined use <sup>1)</sup> |
| 5 | Sensor communication modules 2DS Ex-i       | 11 | Storage slot for SD card                                 |
| 6 | Shock protection, dummy cover and end cover |    |  |

- 1) Example: you want to loop the signal from the alarm relay to a siren and a lamp. The terminals on the alarm relay only accommodate one cable. Route the signal from the alarm relay to a terminal on the distributor block. The block's terminals are all interconnected. You therefore have 3 additional terminals on this block from where you can carry the signal forward to the consumer (siren, lamp etc.). The signal can be multiplied in this way.

### 3.4 Overview (cabinet device)


*Cabinet device for non-hazardous area*

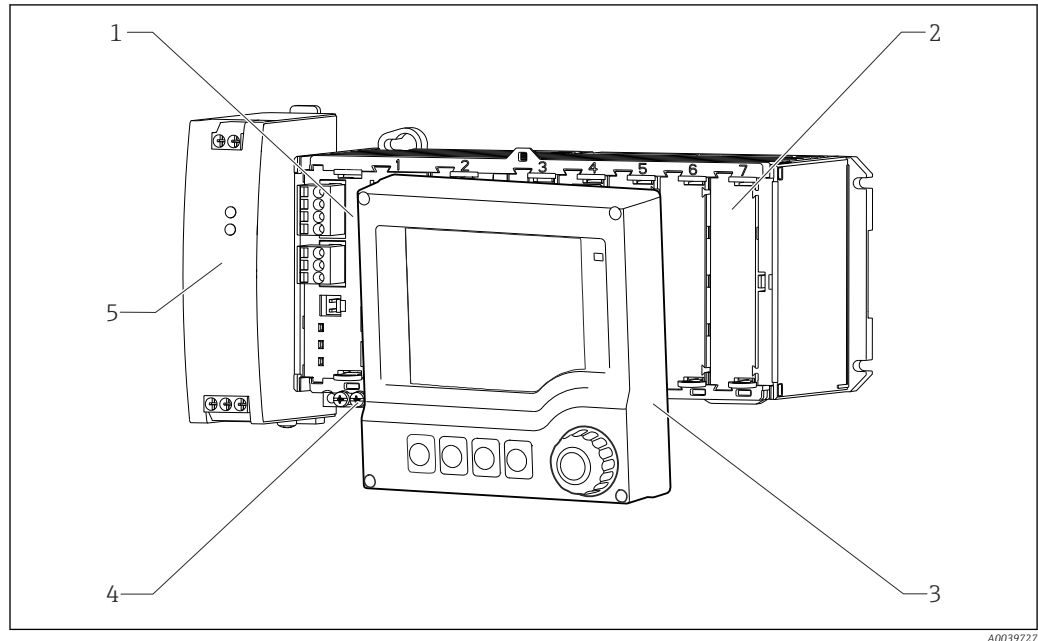

4 Device with optional, external display (excluding cables)

- |   |                                |   |                     |
|---|--------------------------------|---|---------------------|
| 1 | Base module                    | 4 | Terminal strip      |
| 2 | Shock protection, dummy module | 5 | External power unit |
| 3 | External display (optional)    |   |                     |


*Cabinet device with sensor communication module 2DS Ex-i for hazardous area*

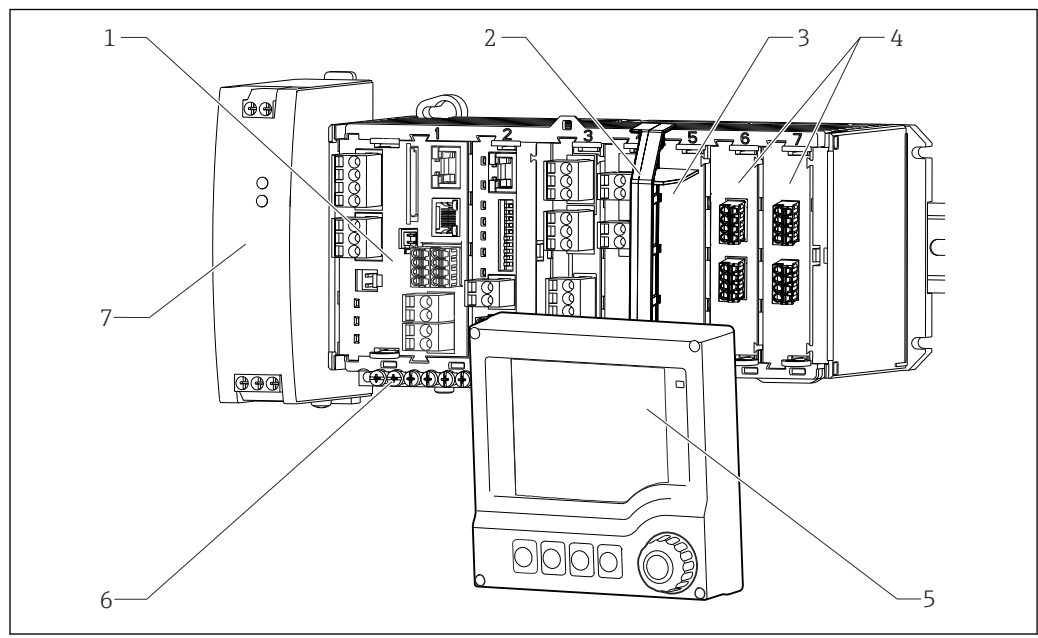

- |   |  |   |                             |
|---|--|---|-----------------------------|
| 1 | Base module                                    | 5 | External display (optional) |
| 2 | Separator element (pre-installed)              | 6 | Terminal strip              |
| 3 | Shock protection, dummy module                 | 7 | External power unit         |
| 4 | Intrinsically safe sensor connections 2DS Ex-i |   |                             |



3.5 Slot and port assignment

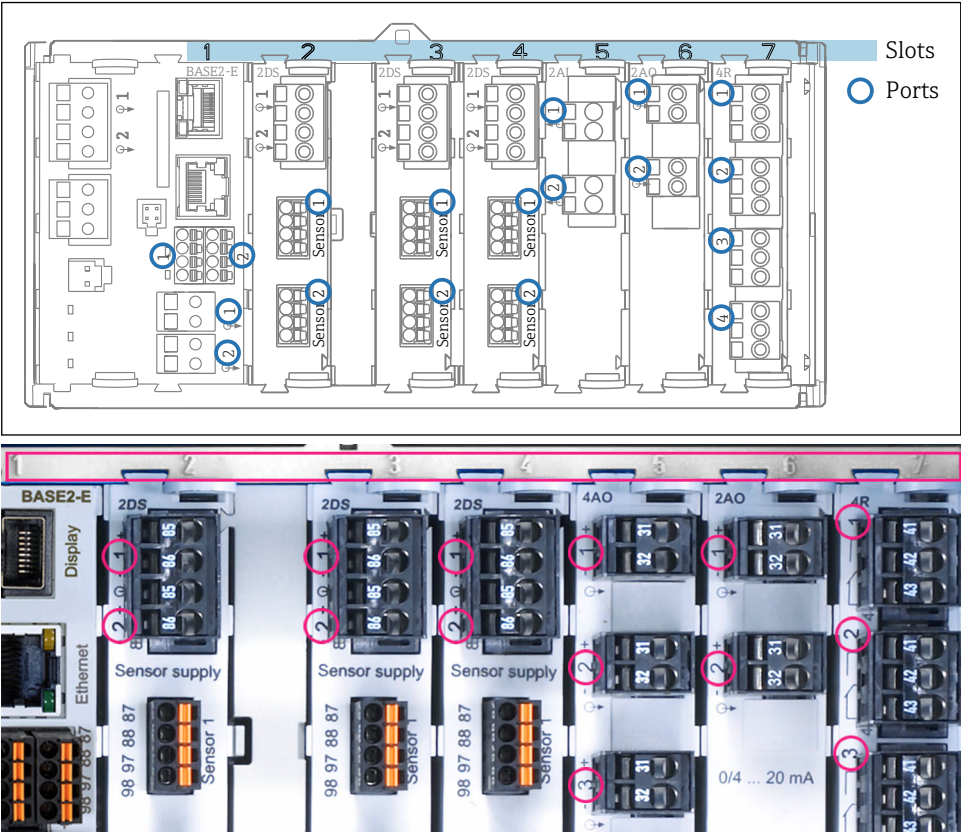

5 Slot and port assignment of the hardware modules

Outlet 1			OK
CH1:	1:1 pH Glass	ATC 6.95 pH	Port Slot
CH2:	1:2 TU/TS	500.0 g/l	
CH3:	5:1 SAC	500.0 1/m	
CH4:	5:2 Cond i	ATC 2.62 mS/cm	
CH5:	6:1 Chlorine	28.33 mg/l	
CH6:	6:2 Redox	51 mV	
CH7:	7:1 Oxygen (am...	32.86 mg/l	
CH8:	7:2 Cond c	ATC 131.1 µS/cm	
MENU CAL DIAG HOLD			

6 Slot and port assignment on the display

- Inputs are assigned to measuring channels in the ascending order of the slots and ports. Adjacent example: "CH1: 1:1 pH glass" means: Channel 1 (CH1) is slot 1 (basic module) : Port 1 (input 1), pH glass sensor
- Outputs and relays are named according to their function, e.g. "current output", and are displayed in ascending order with the slot and port numbers

### 3.6 Terminal diagram




The unique terminal name is derived from:

Slot no. : Port no. : Terminal

#### Example, NO contact of a relay

Device with 2 inputs for digital sensors, 4 current outputs and 4 relays

- Base module BASE2-E (contains 2 sensor inputs, 2 current outputs)
- SEM module (1 spectrometer)
- 2AO module (2 current outputs)
- 4R module (4 relays)

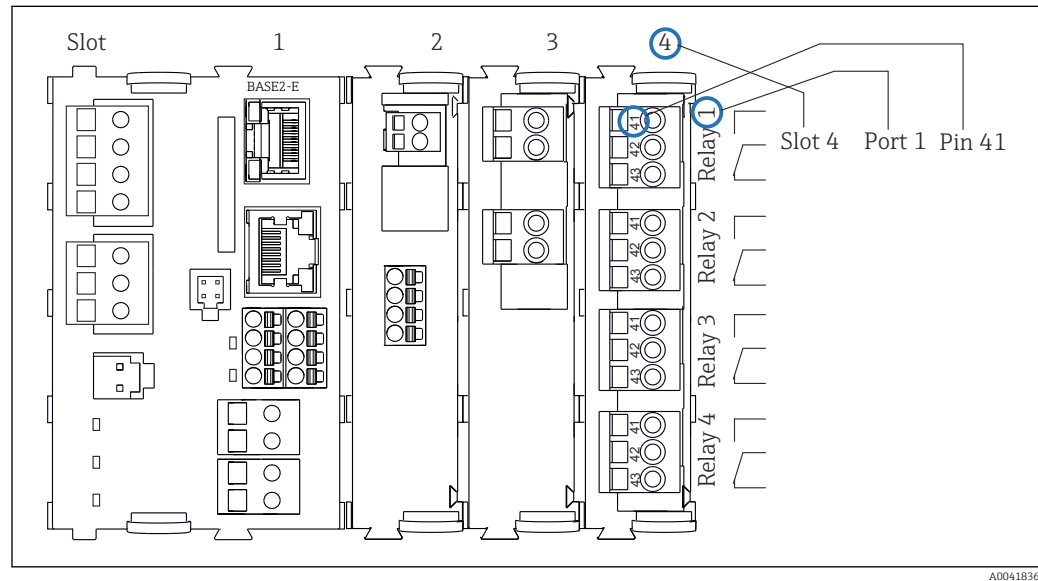

A0041836

7 Creating a terminal diagram using the example of the NO contact (terminal 41) of a relay

## 4 Incoming acceptance and product identification

### 4.1 Incoming acceptance

1. Verify that the packaging is undamaged.
  - ↳ Notify the supplier of any damage to the packaging.  
Keep the damaged packaging until the issue has been resolved.
2. Verify that the contents are undamaged.
  - ↳ Notify the supplier of any damage to the delivery contents.  
Keep the damaged goods until the issue has been resolved.
3. Check that the delivery is complete and nothing is missing.
  - ↳ Compare the shipping documents with your order.
4. Pack the product for storage and transportation in such a way that it is protected against impact and moisture.
  - ↳ The original packaging offers the best protection.  
Make sure to comply with the permitted ambient conditions.

If you have any questions, please contact your supplier or your local Sales Center.

### 4.2 Product identification

#### 4.2.1 Nameplate

The nameplate provides you with the following information on your device:

- Manufacturer identification
- Order code
- Extended order code
- Serial number
- Firmware version
- Ambient conditions
- Input and output values
- Activation codes
- Safety information and warnings
- Degree of protection

- ▶ Compare the information on the nameplate with the order.

#### 4.2.2 Identifying the product

##### Product page

[www.endress.com/cm44p](http://www.endress.com/cm44p)

##### Interpreting the order code

The order code and serial number of your product can be found in the following locations:

- On the nameplate
- In the delivery papers

##### Obtaining information on the product

1. Go to [www.endress.com](http://www.endress.com).
2. Page search (magnifying glass symbol): Enter valid serial number.

3. Search (magnifying glass).
  - ↳ The product structure is displayed in a popup window.
4. Click the product overview.
  - ↳ A new window opens. Here you fill information pertaining to your device, including the product documentation.

**Manufacturer address**

Endress+Hauser Conducta GmbH+Co. KG  
Dieselstraße 24  
70839 Gerlingen  
Germany

### 4.3 Scope of delivery

The scope of delivery comprises:

- 1 multichannel controller in the version ordered
  - 1 mounting plate
  - 1 wiring label (attached at the factory to the inside of the display cover)
  - 1 external display (if selected as an option) <sup>1)</sup>
  - 1 DIN rail power unit incl. cable (cabinet device only)
  - 1 printed copy of the Operating Instructions for the DIN rail power unit (cabinet device only)
  - 1 printed copy of the Brief Operating Instructions in the language ordered
  - Separation element (pre-installed on hazardous area version type 2DS Ex-i)
  - Safety instructions for the hazardous area (for hazardous area version type 2DS Ex-i)
- If you have any queries:  
Please contact your supplier or local sales center.


---

1) The external display can be selected as an option in the order structure or ordered as an accessory at a later stage.

# 5 Mounting

## 5.1 Mounting requirements


### 5.1.1 Dimensions

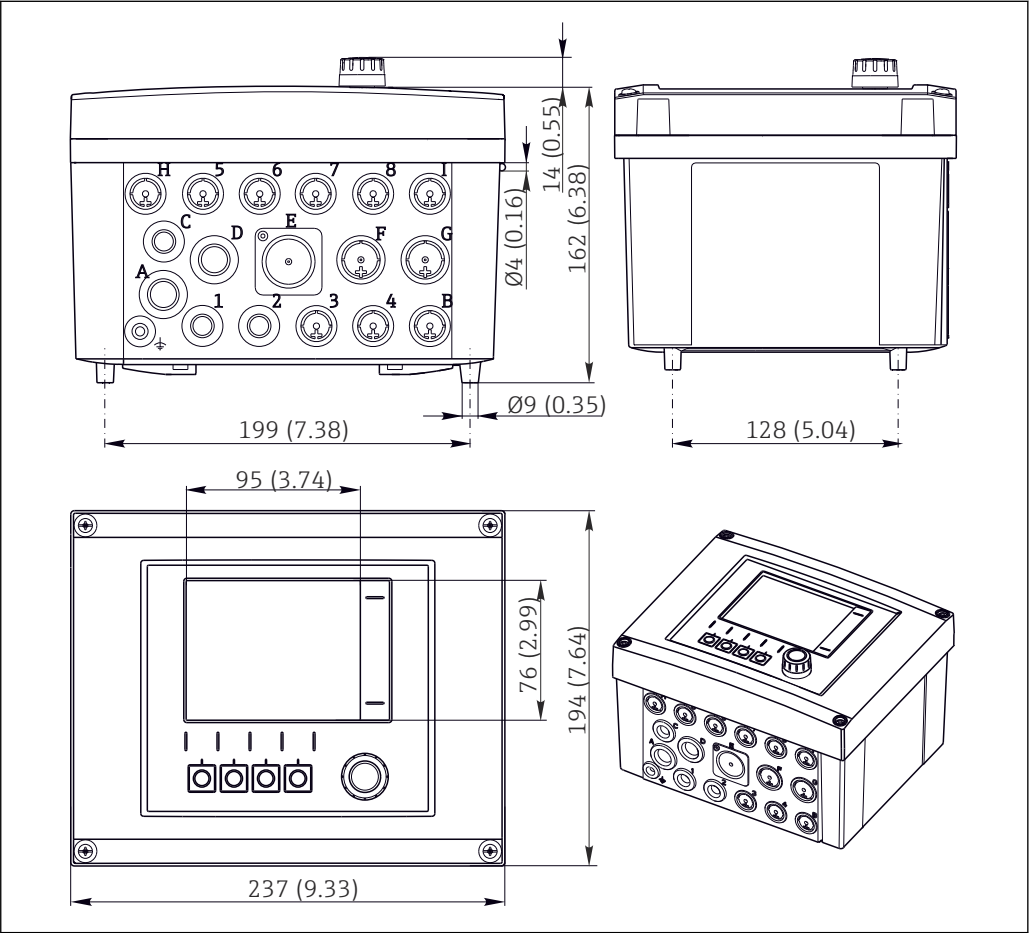

8 Dimensions of field housing in mm (in)

A0012396

### 5.1.2 Mounting plate

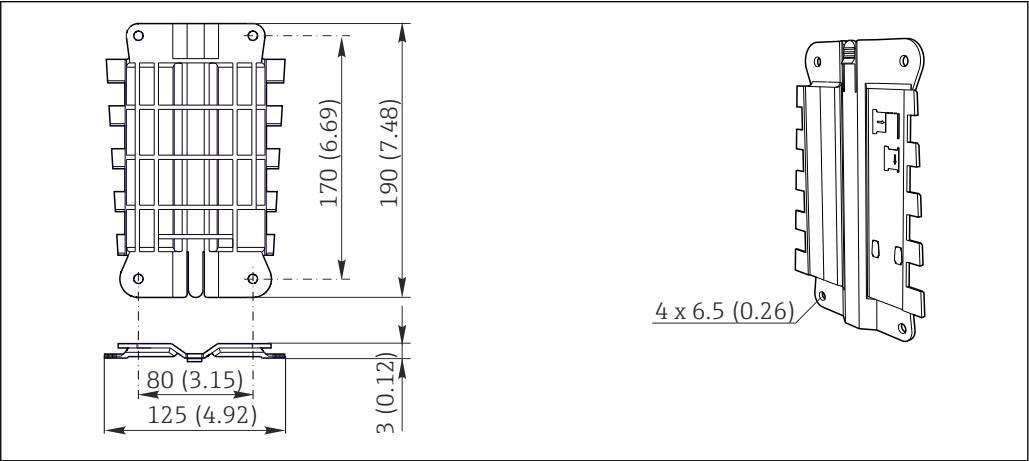

9 Mounting plate. Engineering unit: mm (in)

A0012426


### 5.1.3 Weather protection cover

#### NOTICE

**Effect of climatic conditions (rain, snow, direct sunlight etc.)**


Impaired operation to complete transmitter failure are possible!

- Always use the weather protection cover (accessory) when installing the device outdoors.

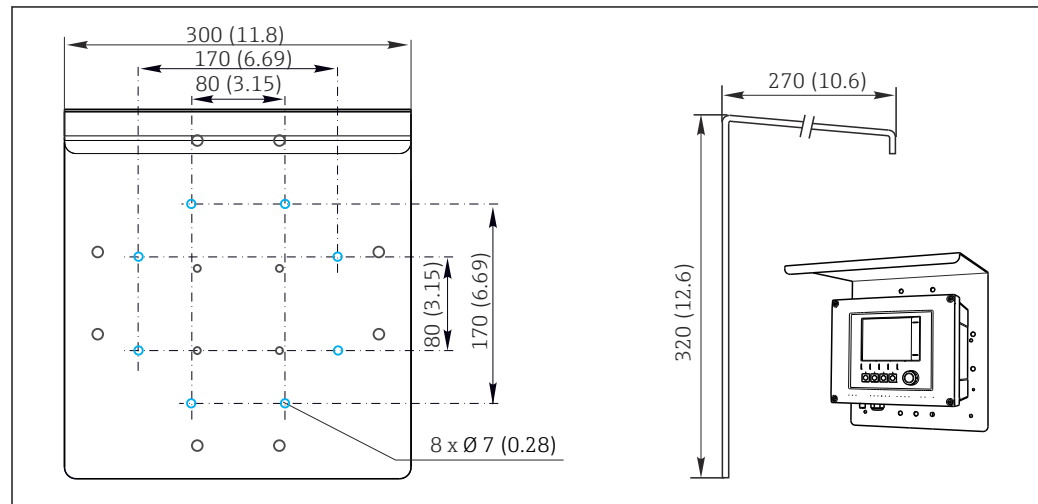

10 Dimensions in mm (in)

### 5.1.4 Dimensions (cabinet device)

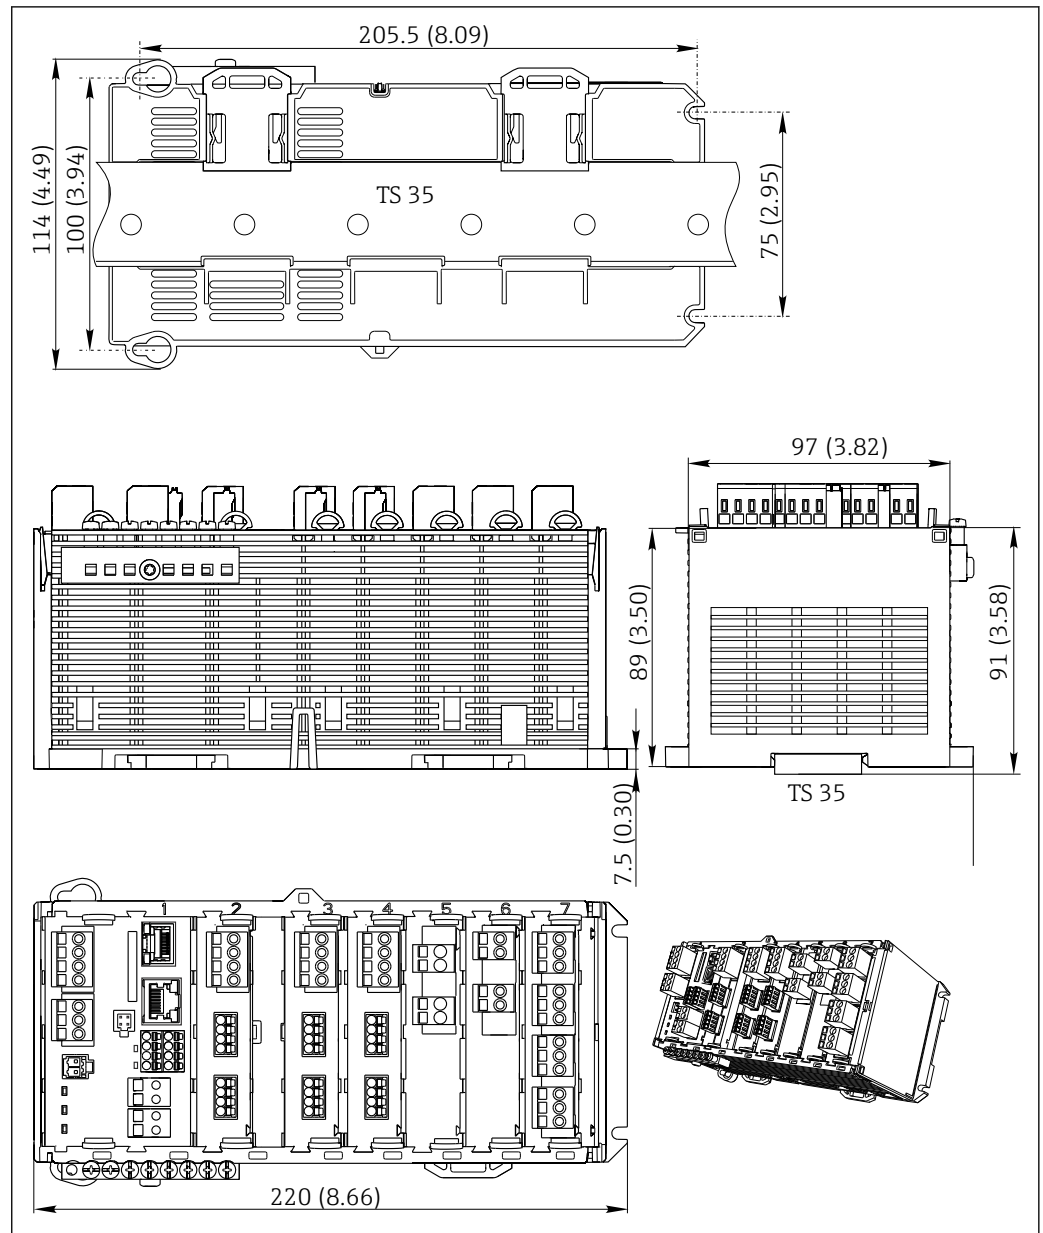

11 Dimensions in mm (inch)

A0039730

### 5.1.5 Mounting on DIN rail as per IEC 60715

#### ⚠ CAUTION

**The power unit can get very hot under full load**

Burn hazard!

- ▶ Avoid touching the power unit during operation.
- ▶ The minimum distances to other devices must be observed.
- ▶ After switching off the power unit, allow it to cool down before carrying out any work on it.

**⚠ CAUTION****Condensation on the device**

Risk to user safety!

- ▶ The device complies with the IP20 degree of protection. It is designed only for environments with non-condensing moisture.
- ▶ Comply with the specified ambient conditions, e.g. by installing the device in an appropriate protective enclosure.


**NOTICE****Incorrect mounting location in the cabinet, spacing regulations not observed**

Possible malfunctions as a result of heat buildup and interference from neighboring devices!

- ▶ Do not position the device directly above sources of heat. The temperature specification must be observed.
- ▶ The components are designed for convection-based cooling. Avoid heat buildup. Ensure openings are not covered, e.g. by cables.
- ▶ Observe the specified distances to other devices.
- ▶ Physically separate the device from frequency converters and high-voltage devices.
- ▶ Recommended installation direction: horizontal. The specified ambient conditions, and particularly the ambient temperatures, only apply for horizontal installation.
- ▶ Vertical orientation is also possible. However, this requires additional fixing clips at the place of installation to hold the device in position on the DIN rail.
- ▶ Recommended installation of power unit: to the left of the device

**The following minimum clearance specifications must be observed:**

- Distances at the side in relation to other devices incl. power units and to the wall of the cabinet:  
at least 20 mm (0.79 inch)
- Distance above and below the device and depth distance (to control cabinet door or other devices installed there):  
at least 50 mm (1.97 inch)

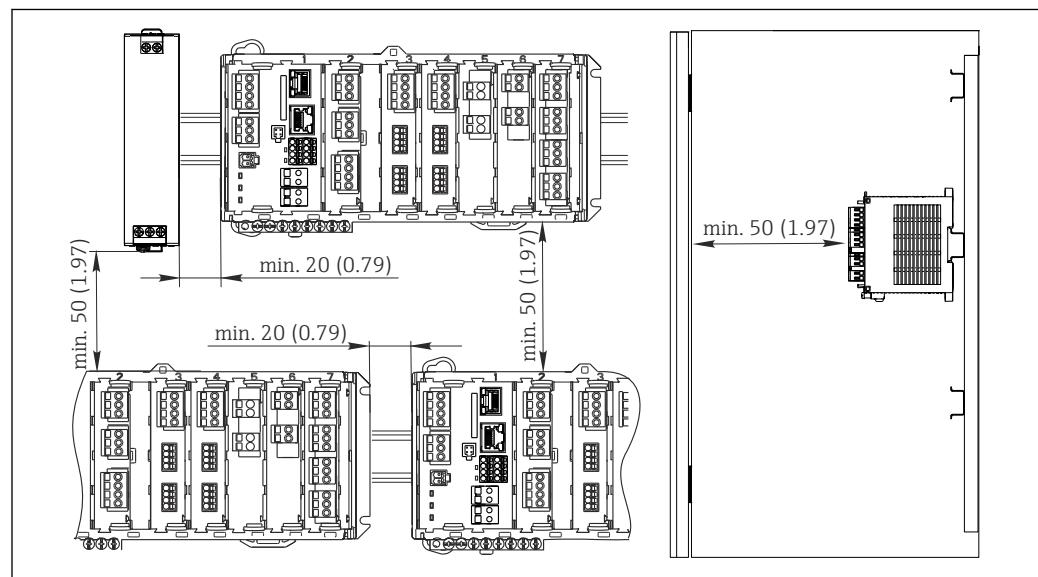


A0039736

12 Minimum clearance in mm (in)



### 5.1.6 Wall mounting

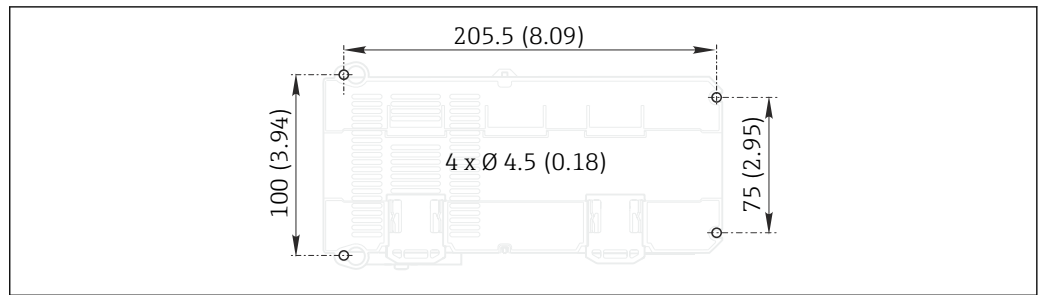


A0027859

13 Drilling pattern for wall mounting in mm (in)

### 5.1.7 Mounting the external display



The mounting plate also serves as the drilling template. The marks on the side help you mark the position of the drill holes.

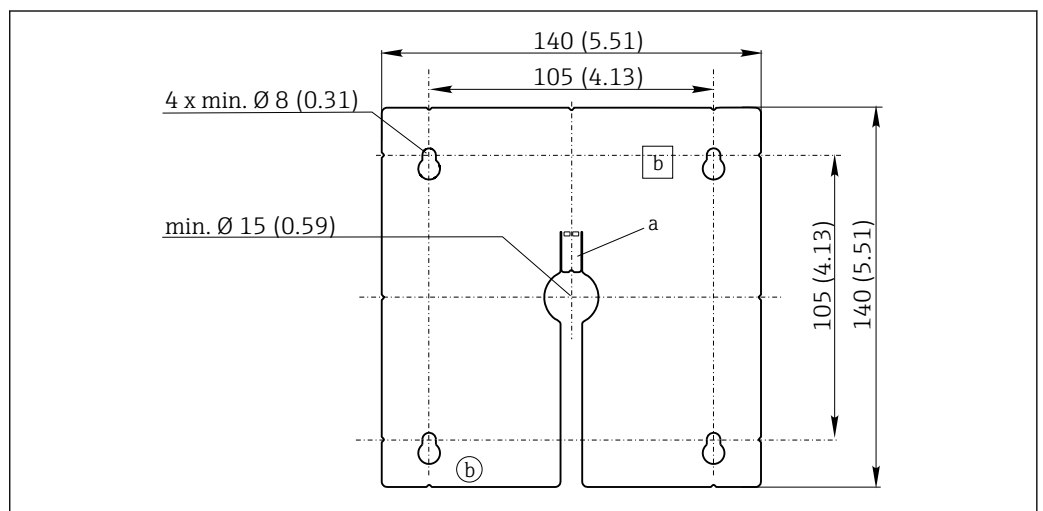

A0025371

14 Mounting plate of external display, dimensions in mm (in)

a Retaining tab

b Production-related recesses, no function for the user

### 5.1.8 Cable length for optional display

**Length of display cable provided (cabinet device only):**

3 m (10 ft)

**Maximum permitted length of a display cable (cabinet device only):**


5 m (16.5 ft)

## 5.2 Mounting the measuring device (field device)

### 5.2.1 Post mounting




You require the post mounting kit (optional) to mount the unit on a pipe, post or railing (square or circular, clamping range 20 to 61 mm (0.79 to 2.40")).

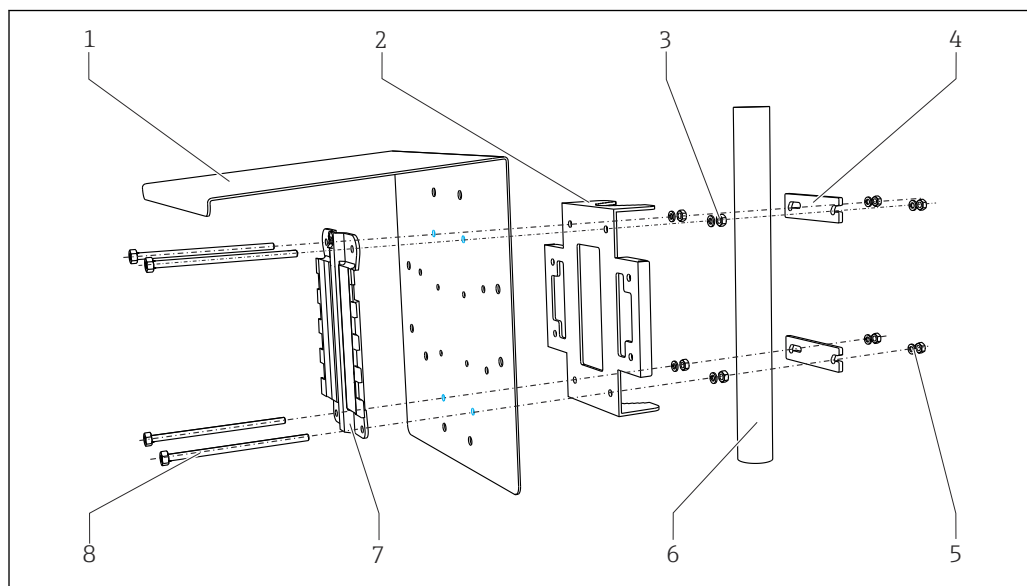

A0033044


15 Post mounting

- |   |   |   |   |
|---|---|---|---|
| 1 | Weather protection cover (optional)         | 5 | Spring washers and nuts (post mounting kit) |
| 2 | Post mounting plate (post mounting kit)     | 6 | Pipe or railing (circular/square)           |
| 3 | Spring washers and nuts (post mounting kit) | 7 | Mounting plate                              |
| 4 | Pipe clamps (post mounting kit)             | 8 | Threaded rods (post mounting kit)           |

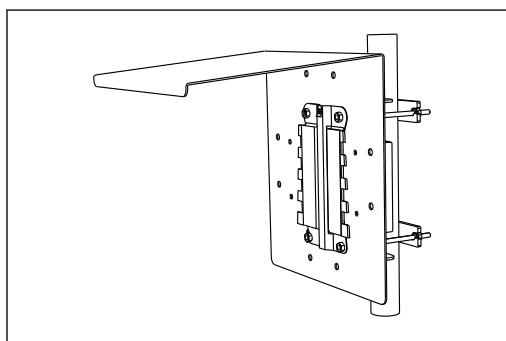

A0033045

16 Post mounting

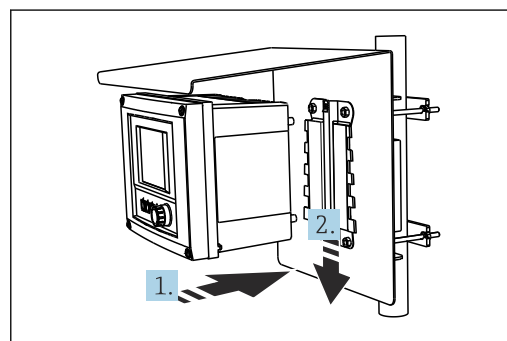


A0025885

17 Attach the device and click it into place

1. Place the device on the mounting plate.
2. Slide the device downwards in the guide on the mounting rail until it clicks into place.


### 5.2.2 Rail mounting

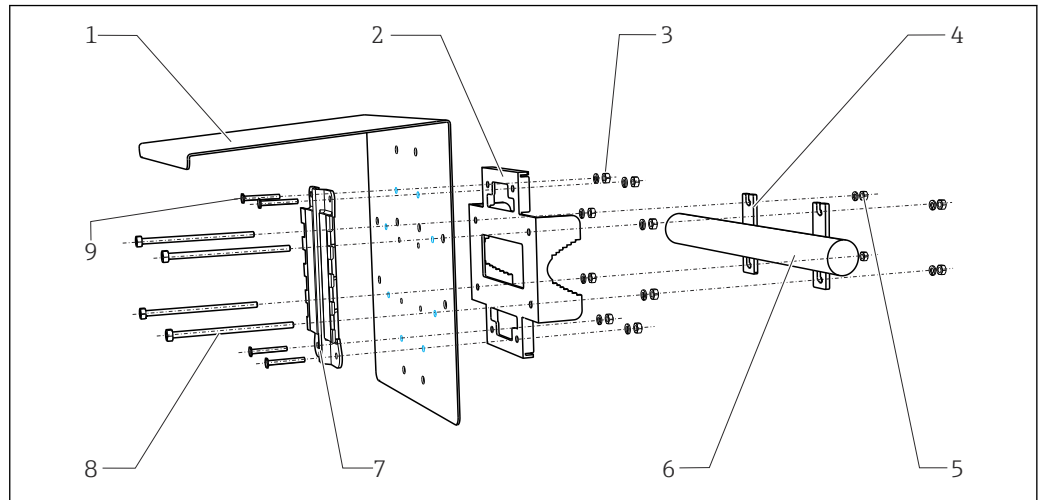


A0012668

#### 18 Rail mounting

- |   |   |   |                                   |
|---|---|---|-----------------------------------|
| 1 | Weather protection cover (optional)         | 6 | Pipe or railing (circular/square) |
| 2 | Post mounting plate (post mounting kit)     | 7 | Mounting plate                    |
| 3 | Spring washers and nuts (post mounting kit) | 8 | Threaded rods (post mounting kit) |
| 4 | Pipe clamps (post mounting kit)             | 9 | Screws (post mounting kit)        |
| 5 | Spring washers and nuts (post mounting kit) |   |                                   |

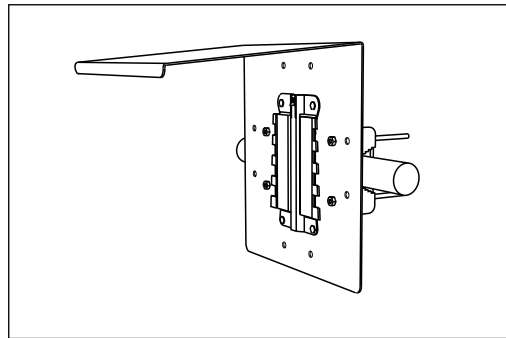

A0025886

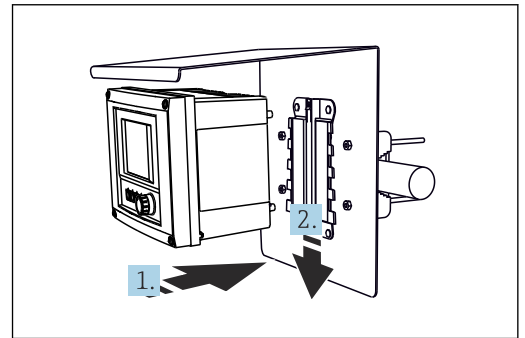

A0027803


#### 19 Rail mounting

1. Place the device on the mounting plate.


#### 20 Attach the device and click it into place

2. Slide the device downwards in the guide on the mounting rail until it clicks into place.

### 5.2.3 Wall mounting

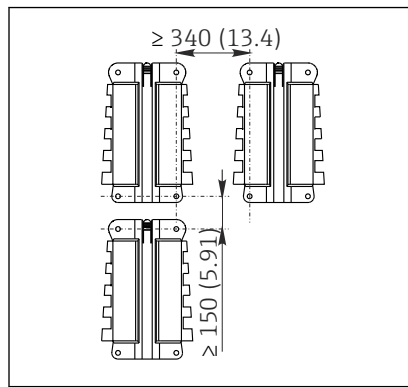


21 Installation clearance in mm (in)

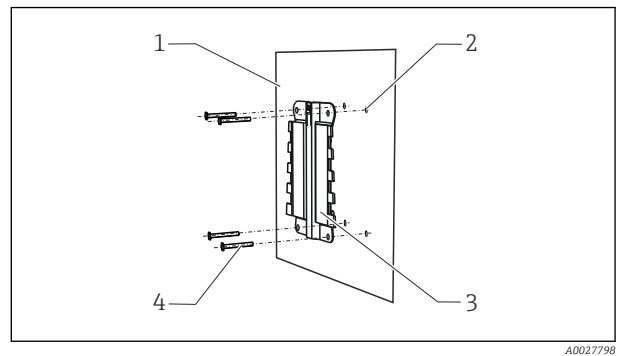


22 Wall mounting

- 1 Wall
- 2 4 drill holes <sup>1)</sup>
- 3 Mounting plate
- 4 Screws Ø 6 mm (not part of scope of supply)

<sup>1)</sup>The size of the drill holes depends on the wall plugs used. The wall plugs and screws must be provided by the customer.

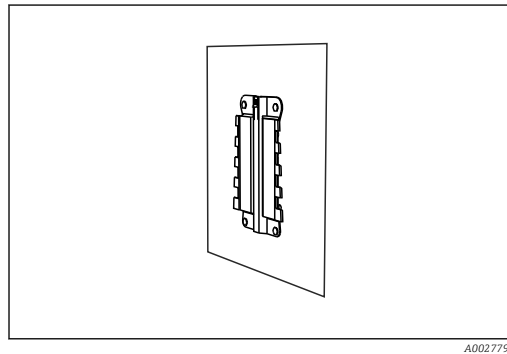

23 Wall mounting

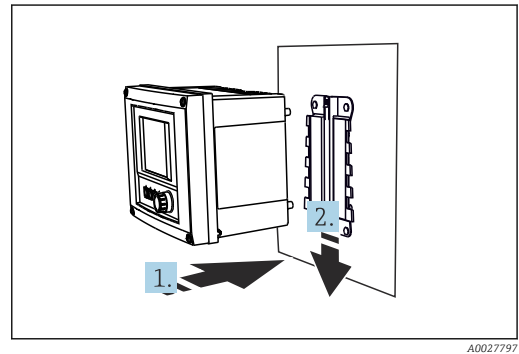

24 Attach the device and click it into place


1. Place the device on the mounting plate.
2. Slide the device downwards in the guide on the mounting rail until it clicks into place.

### 5.2.4 Disassembly (for conversion, cleaning etc.)


#### NOTICE

**The device can be damaged if dropped**


- When pushing the housing out of the holder, secure the housing to prevent it from falling. If possible, ask a second person to help you.

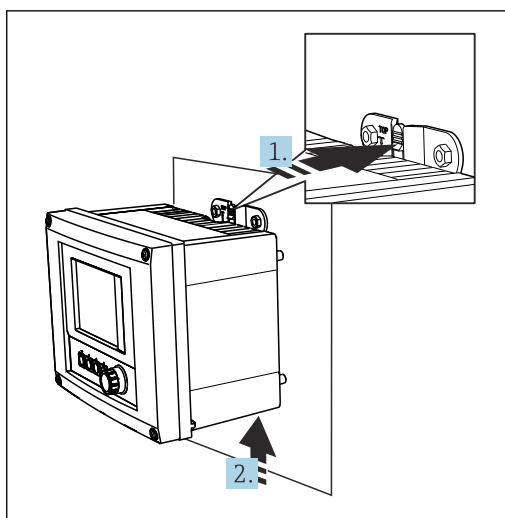

A0025890

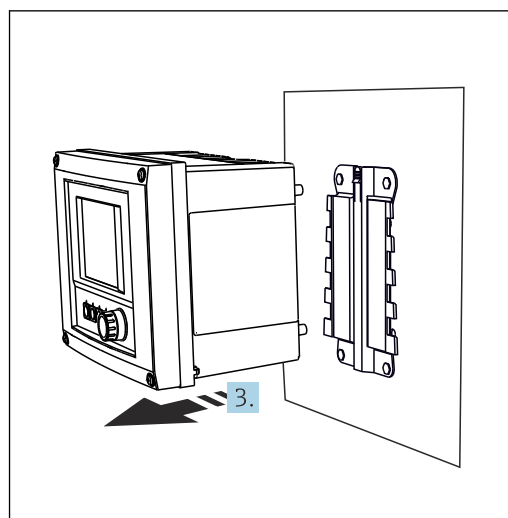 25 Disassembling

A0025891

 26 Disassembling


1. Hold down the latch.
2. Push up the device to remove it from the holder.
3. Remove the device towards the front.

## 5.3 Mounting the measuring device (cabinet device)


### 5.3.1 DIN rail mounting

The mounting procedure is the same for all Liquiline devices. The example shows a CM448R.


1. In the order configuration, the securing clips are "tightened" to secure the DIN rail. Release the securing clips by pulling them downwards.

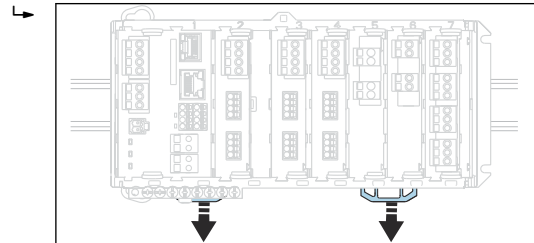

2. Attach the device from the top to the DIN rail (a) and secure it by pressing down (b).

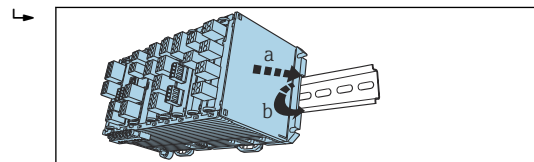

3. Slide the securing clips upwards until they click, thereby securing the device to the DIN rail.

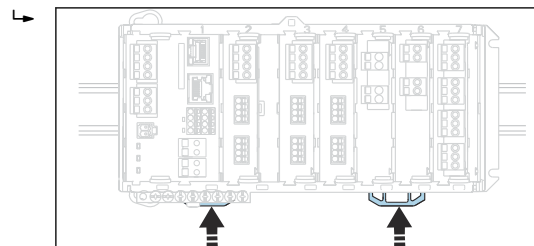

4. Mount the external power unit in the same way.

### 5.3.2 Wall mounting

**i** Mounting material (screws, dowels) are not included in the scope of delivery and must be provided by the customer.

The external power unit can be mounted on a DIN rail only.

Use the back of the housing to mark the mounting holes.

1. Drill the corresponding holes and insert wall plugs if necessary.
2. Screw the housing onto the wall.

### 5.3.3 Mounting the optional external display

#### **⚠ CAUTION**


#### **Sharp-edged, non-deburred boreholes**

Risk of injury, display cable may get damaged!

- Trim and deburr all boreholes. In particular, make sure that the middle borehole for the display cable is properly deburred.


#### **Mounting the display on the door of the cabinet**

1.

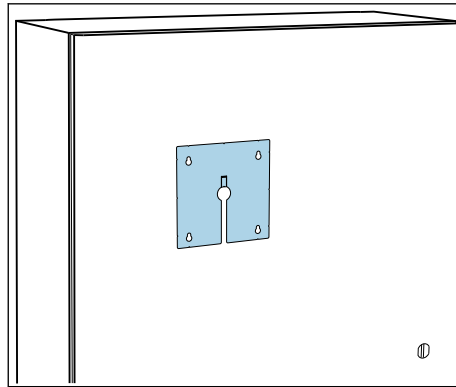


Hold the mounting plate from the outside against the door of the control cabinet. Select the position at which the display is to be mounted.

2.

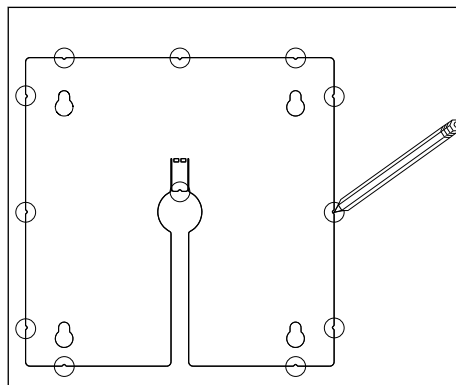


Make all the markings.

3.

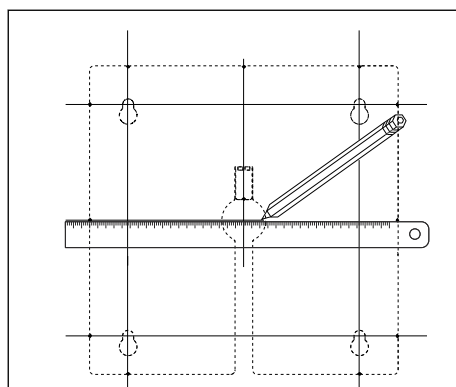


Draw lines to interconnect all the marks.

- ↳ The points of intersection of the lines mark the position of the 5 necessary boreholes.

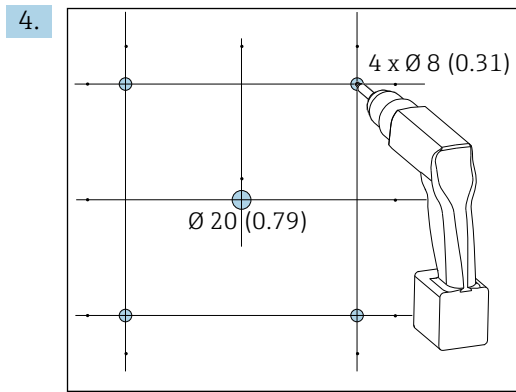


27 Diameter of boreholes in mm (in)

Drill the holes. → 14, 21

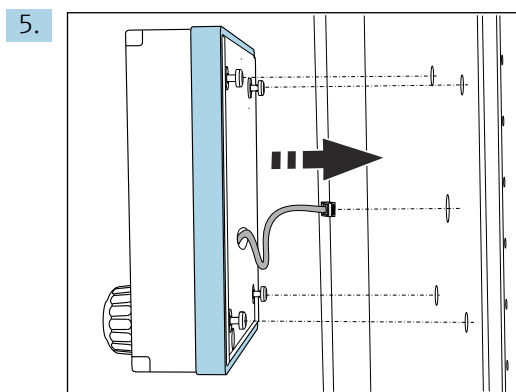


Pull the display cable through the central borehole.

6. With the Torx screws unscrewed until the last half turn (but still inserted), fit the display from the outside via the 4 outer boreholes. Ensure that the rubber frame (seal, highlighted blue) does not become damaged and is properly positioned on the surface of the door.

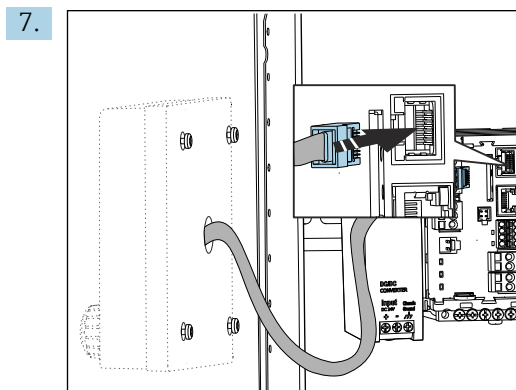


Connect the display cable to the RJ-45 socket of the base module. The RJ-45 socket is labeled **Display**.



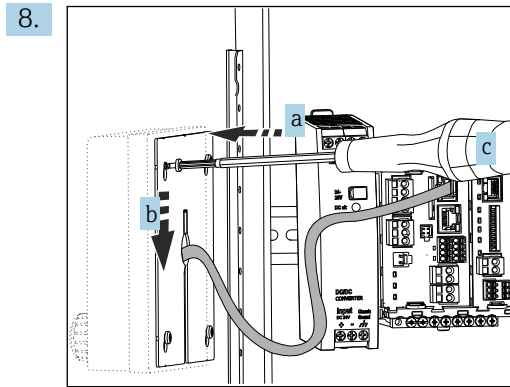

Place the mounting plate on the inside over the screws (a), slide it down (b) and tighten the screws (c).

↳ The display is now mounted and ready to use.

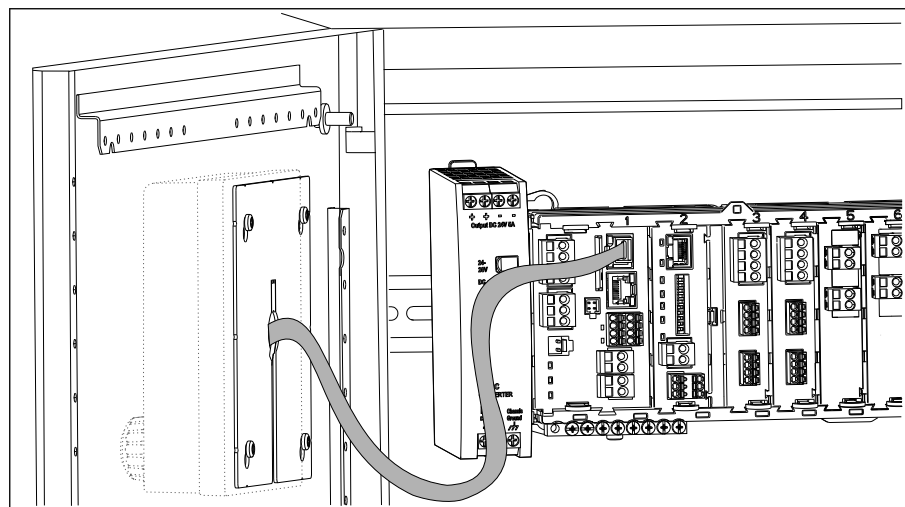

28 Mounted display

#### NOTICE

##### Incorrect installation

Damage and malfunctions possible

- ▶ Lay cables in such a way that they do not get squashed e.g. when closing the cabinet door.
- ▶ Only connect the display cable to the RJ45 socket with the **Display** labeling on the base module.


## 5.4 Post-mounting check

1. After installation, check the transmitter for damage.
2. Check whether the transmitter is protected against precipitation and direct sunlight (e.g. by the weather protection cover).
3. After mounting, check all devices (controller, power unit, display) for damage.
4. Verify that the specified installation clearances have been observed.
5. Verify that all securing clips have been snapped into place and that the components are securely positioned on the DIN rail.
6. Ensure that the temperature limits are observed at the mounting location.

## 6 Electrical connection

### 6.1 Connection conditions

#### 6.1.1 Via HART (e.g. via HART modem and FieldCare)

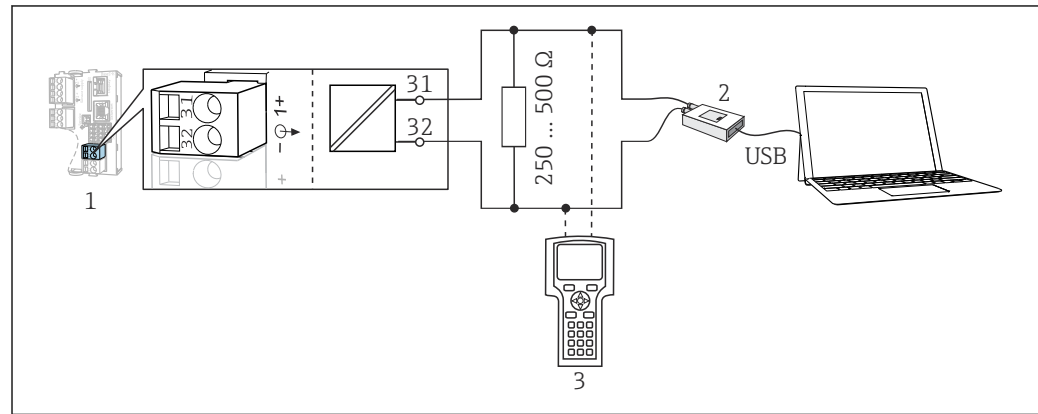

29 HART using modem

1 Device module Base2-L, -H or -E; current output 1 with HART

2 HART modem for connection to PC, e.g. Commubox FXA191 (RS232) or FXA195 <sup>1)</sup> (USB)

3 HART handheld terminal

<sup>1)</sup> Switch position "on" (substitutes the resistor)

### 6.2 Connecting the measuring device

#### **WARNING**

##### **Device is live!**

Incorrect connection may result in injury or death!

- ▶ The electrical connection may be performed only by an electrical technician.
- ▶ The electrical technician must have read and understood these Operating Instructions and must follow the instructions contained therein.
- ▶ **Prior** to commencing connection work, ensure that no voltage is present on any cable.

#### **NOTICE**

##### **The device does not have a power switch!**

- ▶ Provide a protected circuit breaker in the vicinity of the device at the place of installation.
- ▶ The circuit breaker must be a switch or power switch, and must be labeled as the circuit breaker for the device.
- ▶ At the supply point, the power supply must be isolated from dangerous live cables by double or reinforced insulation in the case of devices with a 24 V supply voltage.


#### 6.2.1 Opening the housing

##### **NOTICE**

##### **Pointed or sharp tools**


The use of unsuitable tools can cause scratches on the housing or damage to the seal, and therefore negatively affect the leak-tightness of the housing!

- ▶ Do not use any sharp or pointed objects, e.g. a knife, to open the housing.
- ▶ Only use a suitable Phillips screwdriver.

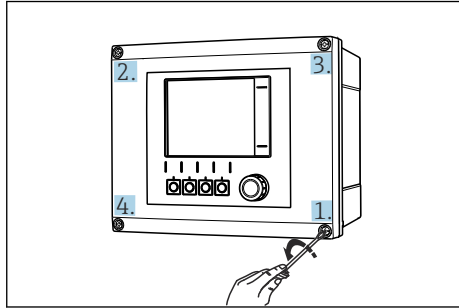


30 Slacken the housing screws crosswise with a Phillips head screwdriver

1. Slacken the housing screws crosswise.
2. To close the housing: tighten the screws in a similar step-by-step, crosswise sequence.

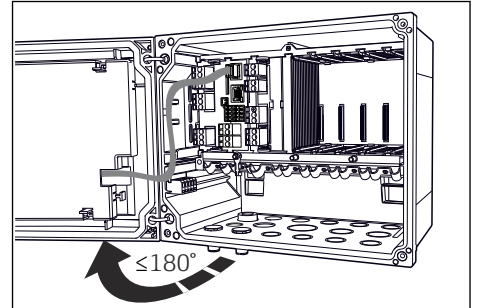


31 Opening display cover, max. opening angle  $180^\circ$  (depends on installation position)

## 6.2.2 Cable mounting rail

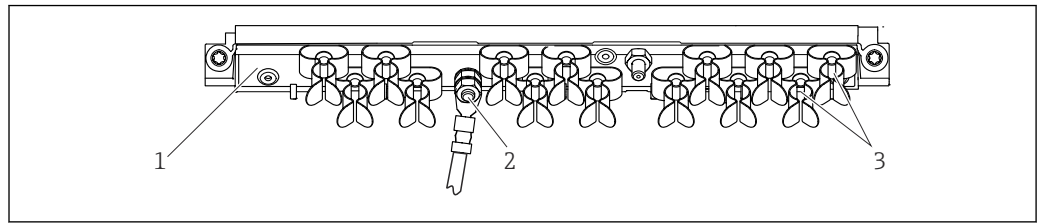

A0048299

32 Cable mounting rail and associated function (field device)

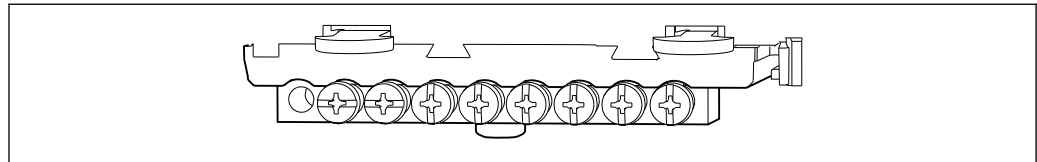

A0025366

33 Mounting rail for functional ground connections (cabinet device)

- |   |   |
|---|---|
| 1 Cable mounting rail   | 3 Cable clamps (fixing and grounding the sensor cables) |
| 2 Threaded bolt (protective ground connection, central grounding point) |   |


## 6.2.3 Connecting the cable shield

The sensor, fieldbus and Ethernet cables must be shielded cables.

**i** Only use terminated original cables where possible.


Clamping range of cable clamps: 4 to 11 mm (0.16 to 0.43 in)

*Cable sample (does not necessarily correspond to the original cable supplied)*

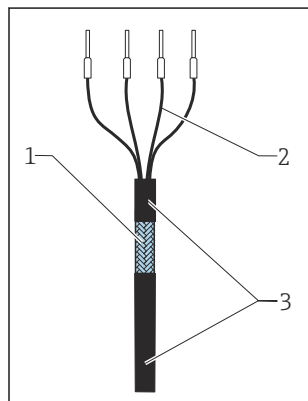

34 Terminated cable


- |                             |
|-----------------------------|
| 1 Outer shield (exposed)    |
| 2 Cable cores with ferrules |
| 3 Cable sheath (insulation) |

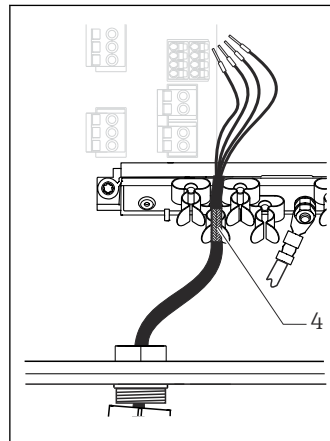

A0045763

35 Connect the cable to the grounding clamp

- 4 Grounding clamp

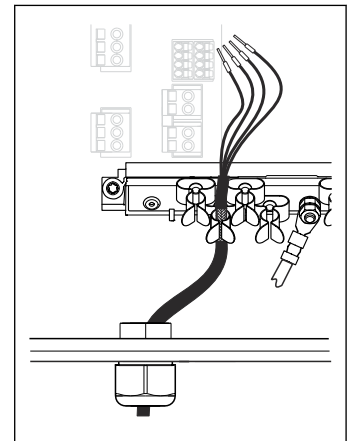

A0045764

36 Press the cable into the grounding clamp

The cable shield is grounded using the grounding clamp <sup>1)</sup>


1) Please note the instructions in the "Ensuring the degree of protection" section (→ 49)

1. Loosen a suitable cable gland on the bottom of the housing.
2. Remove the dummy plug.
3. Attach the gland to the cable end, making sure the gland is facing the right direction.
4. Pull the cable through the gland and into the housing.


5. Route the cable in the housing in such a way that the **exposed** cable shield fits into one of the cable clamps and the cable cores can be easily routed as far as the connection plug on the electronics module.
6. Connect the cable to the cable clamp.
7. Clamp the cable.
8. Connect cable cores as per the wiring diagram.
9. Tighten the cable gland from outside.

## 6.2.4 Cable terminals


*Plug-in terminals for Memosens and PROFIBUS/RS485 connections*

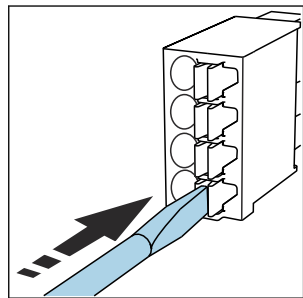

- ▶ Press the screwdriver against the clip (opens the terminal).

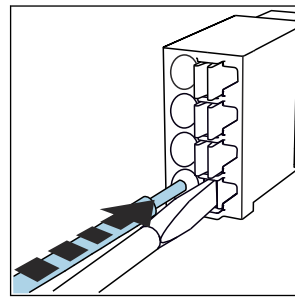

- ▶ Insert the cable until the limit stop.

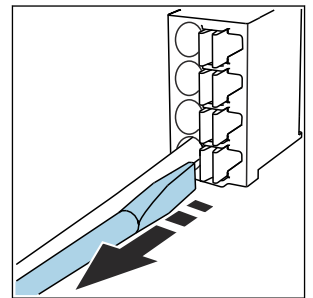


- ▶ Remove the screwdriver (closes the terminal).




After connection, make sure that every cable end is securely in place. Terminated cable ends, in particular, tend to come loose easily if they have not been correctly inserted as far as the limit stop.


*All other plug-in terminals*

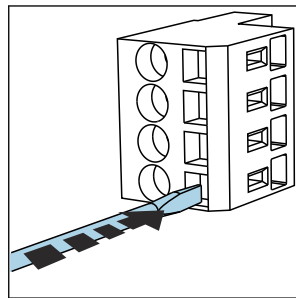

- ▶ Press the screwdriver against the clip (opens the terminal).

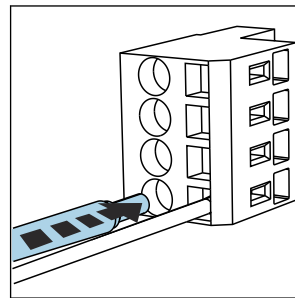


- ▶ Insert the cable until the limit stop.

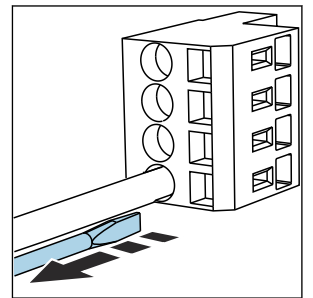

- ▶ Remove the screwdriver (closes the terminal).


## 6.2.5 Connecting supply voltage

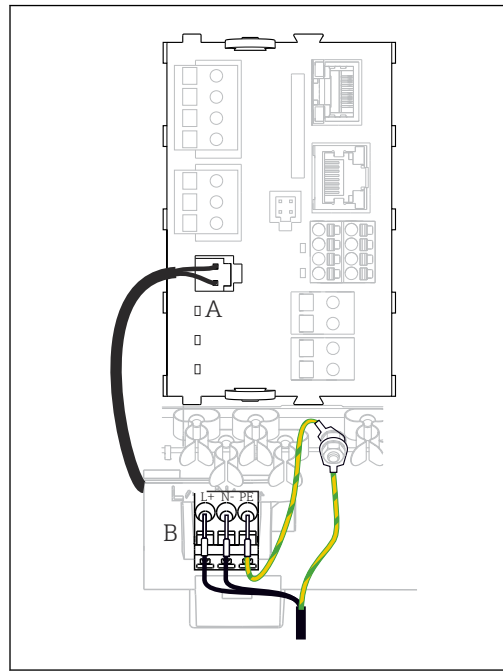

A0039626


37 Connecting the power supply using the example of the BASE2-E (field device)

A Internal power supply cable  
B Extension power unit

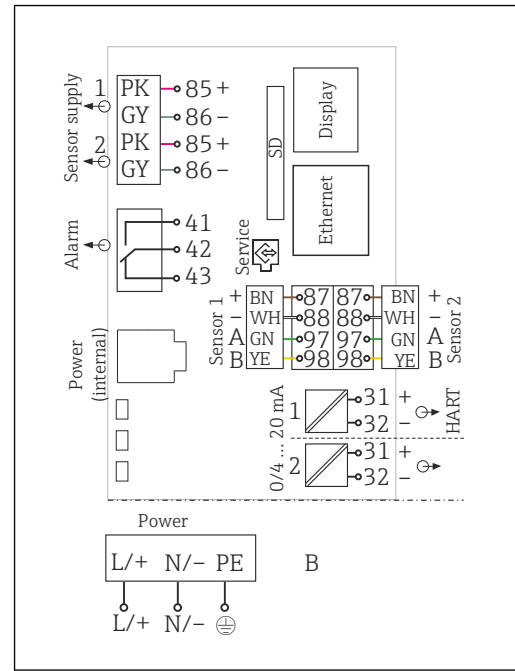

A0039624


38 Complete wiring diagram using the example of the BASE2-E and extension power supply unit (B)

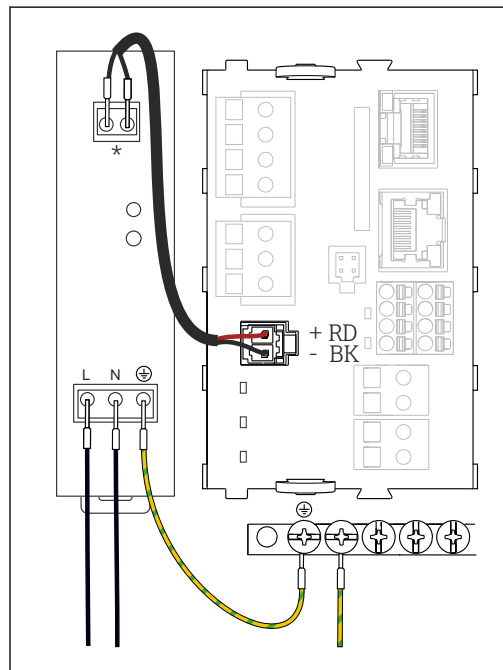

A0039668

39 Connecting the power supply using the example of the BASE2-E (cabinet device)

\* Assignment depends on power supply unit; make sure it is correctly connected.

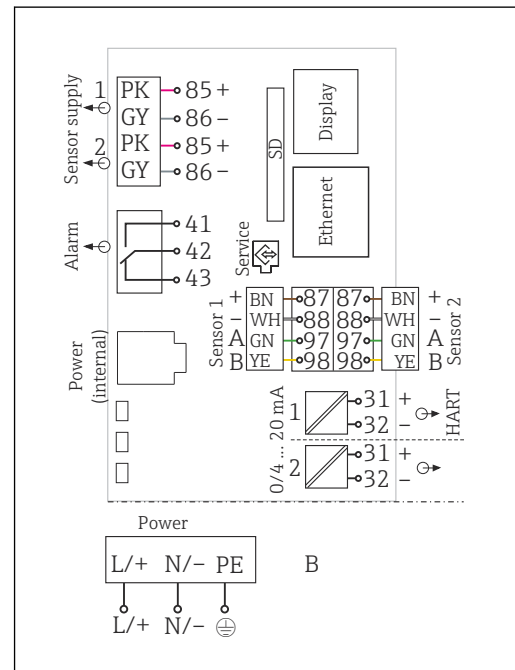


A0039624

40 Complete wiring diagram using the example of the BASE2-E and external power supply unit (B)

**i** The two device versions may only be operated with the power unit supplied and the power unit cable. Also pay attention to the information in the operating instructions supplied for the power unit.

### Connecting the supply voltage

1. Route the power supply cable into the housing through the suitable cable entry.
2. Connect the protective ground of the power unit to the threaded bolt specially provided on the cable mounting rail.
3. Protective ground or grounding provided at the installation location: provide a ground cable (min.  $0.75 \text{ mm}^2$  (corresponding to 18 AWG))<sup>1)</sup> ! Also guide the ground cable through the cable entry and connect it to the threaded bolt on the cable mounting rail. Tighten the nut to 1 Nm.
4. Connect the cable cores L and N (100 to 230 V AC) or + and - (24 V DC) to the plug-in terminals on the power unit in accordance with the wiring diagram.

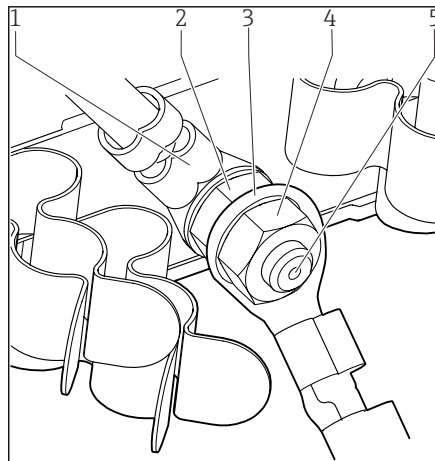

- |   |  |
|---|--|
| 1 | Protective ground of power unit  |
| 2 | Serrated washer and nut  |
| 3 | Protective ground/ground cable, provided at the installation location (min. $0.75 \text{ mm}^2$ ( $\approx$ 18 AWG)) <sup>1)</sup> |
| 4 | Serrated washer and nut  |
| 5 | Mounting bolts   |

41 Protective ground or grounding connection

- 1) For a fuse with a 10 A rating. For a fuse with a rating of 16 A, the protective ground / ground cable must have a cross-sectional area of at least  $1.5 \text{ mm}^2$  ( $\approx$  14 AWG).

### NOTICE

#### Protective ground/ground cable with end sleeve or open cable lug

Loosening the nuts on the protective ground (2) results in loss of the protective function!

- To connect the protective ground or ground cable to the threaded bolt, only use a cable with a closed cable lug as per DIN 46211, 46225, form A.
- Make sure that the nut of the ground cable is tightened to 1 Nm.
- Never connect the protective ground or ground cable to the threaded bolt with an end sleeve or an open cable lug!

### NOTICE

#### Incorrect connection and cable run not separate

Interference on signal or display cable, incorrect measured values or failure of display may occur!

- Do **not** connect the cable shield of the display cable to PE (terminal strip of device)!
- Run the signal/display cable in the control cabinet separately from live (current-carrying) cables.

## 6.3 Connecting the sensors

### 6.3.1 Sensor types for non-hazardous area

*Sensors with Memosens protocol*

Sensor types	Sensor cable	Sensors
Digital sensors <b>without</b> additional internal power supply	With plug-in connection and inductive signal transmission	<ul style="list-style-type: none"> <li>■ pH sensors</li> <li>■ ORP sensors</li> <li>■ Combined sensors</li> <li>■ Oxygen sensors (amperometric and optical)</li> <li>■ Conductivity sensors with conductive measurement of conductivity</li> <li>■ Chlorine sensors (disinfection)</li> </ul>
	Fixed cable	Conductivity sensors with inductive measurement of conductivity
Digital sensors with additional internal power supply	Fixed cable	<ul style="list-style-type: none"> <li>■ Process spectrometer</li> <li>■ Turbidity sensors</li> <li>■ Sensors for interface measurement</li> <li>■ Sensors for measuring the spectral absorption coefficient (SAC)</li> <li>■ Nitrate sensors</li> <li>■ Optical oxygen sensors</li> <li>■ Ion-sensitive sensors</li> </ul>


**The following rule applies if connecting CUS71D sensors:**

- The maximum number of Memosens inputs is limited to two.
- Any combination of CUS71D or other sensors is possible.

### 6.3.2 Sensor types for hazardous area

*Sensors with Memosens protocol*


Sensor types	Sensor cable	Sensors
Digital sensors <b>without</b> additional internal power supply	With plug-in connection and inductive signal transmission	<ul style="list-style-type: none"> <li>■ pH sensors</li> <li>■ ORP sensors</li> <li>■ Combined sensors</li> <li>■ Oxygen sensors (amperometric and optical)</li> <li>■ Conductivity sensors with conductive measurement of conductivity</li> <li>■ Chlorine sensors (disinfection)</li> </ul>
	Fixed cable	Conductivity sensors with inductive measurement of conductivity

 Intrinsically safe sensors for use in explosive atmospheres may only be connected to the sensor communication module type 2DS Ex-i. Only the sensors covered by the certificates may be connected (see XA).

The sensor connections for non-Ex sensors on the base module are disabled.



### 6.3.3 Mounting the terminal strip for sensor communication module 2DS Ex i

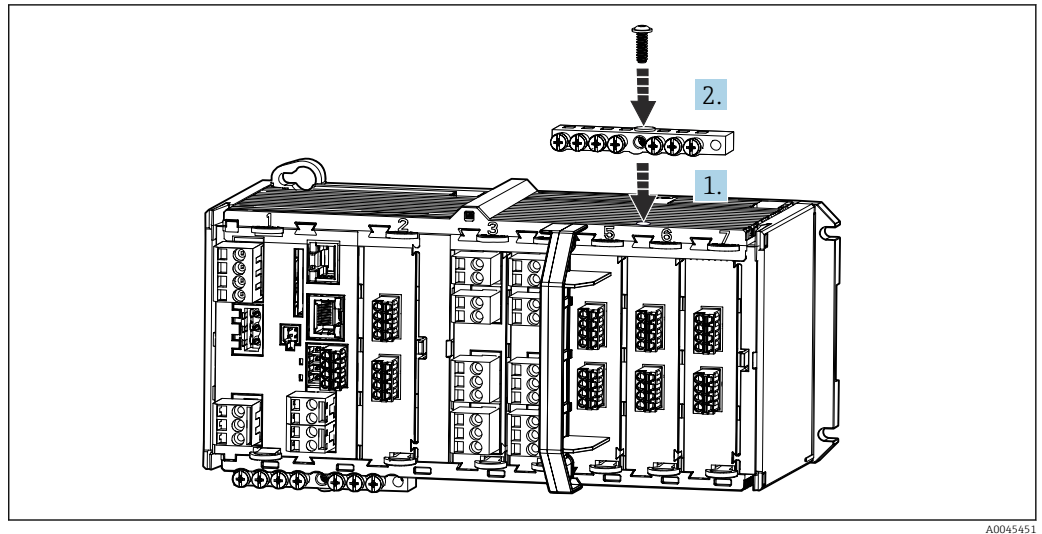


A0045451

1. Fit the cable duct with the central bore over the thread of the sensor communication module 2DS Ex-i.
2. Tighten the cable duct.
3. Establish the grounding of the cable duct (e.g. via the cable duct of the base module). Use the green/yellow cable supplied for this purpose.

### 6.3.4 Connecting the functional ground (cabinet device)

You must always connect the terminal strip with PE from the central node in the cabinet. Use the conductor with cable clamp that is included with the Memosens cable to connect the functional earth to the terminal strip of the device.

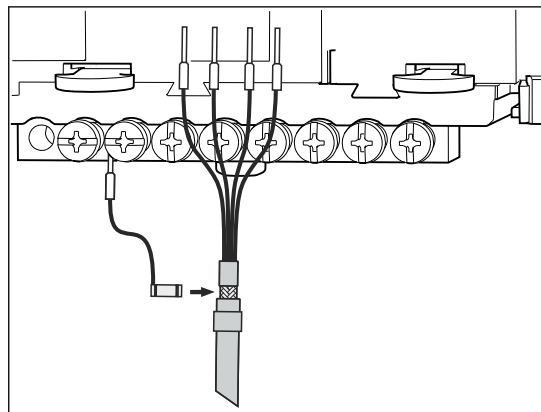

42 Functional earth connection


- i** You must only ever connect one functional earth to each screw in the terminal strip. Otherwise, shielding is not guaranteed.

### 6.3.5 Connecting sensors for non-hazardous area


#### Types of connection

- Direct connection of the sensor cable to the terminal connector of the , 2DS Memosens module , basic module-E (→ 43 ff.)(Memosens sensors only)
- Optional for Memosens sensors: Sensor cable plug connected to the M12 sensor socket on the underside of the device (field device)  
With this type of connection, the device is already wired at the factory (→ 47).


1. **Sensor cable connected directly**  
Connect the sensor cable to the terminal connector of the SEM, or the 2DS, or of the BASE2-E module.
2. **If connected via M12 connector (Memosens sensors only)**  
Connect the sensor connector to an M12 sensor socket which has been previously installed or is supplied on delivery.

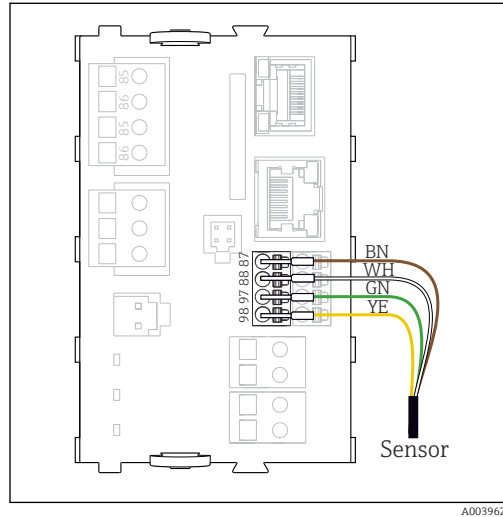**Sensor cable connected directly**


43 *Memosens sensors without additional supply voltage*

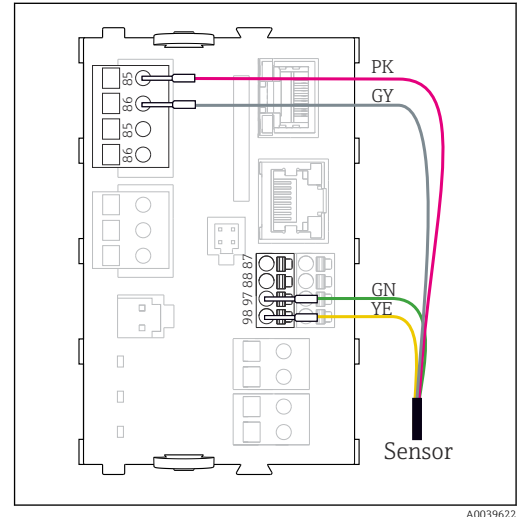

44 *Memosens sensors with additional supply voltage*

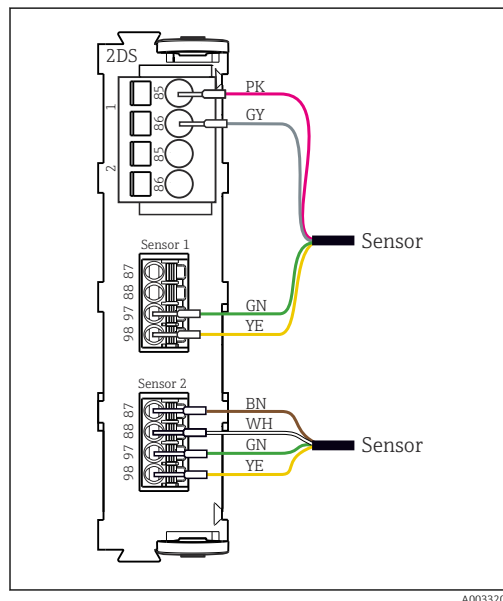

45 *Sensors with and without additional supply voltage at sensor module 2DS*

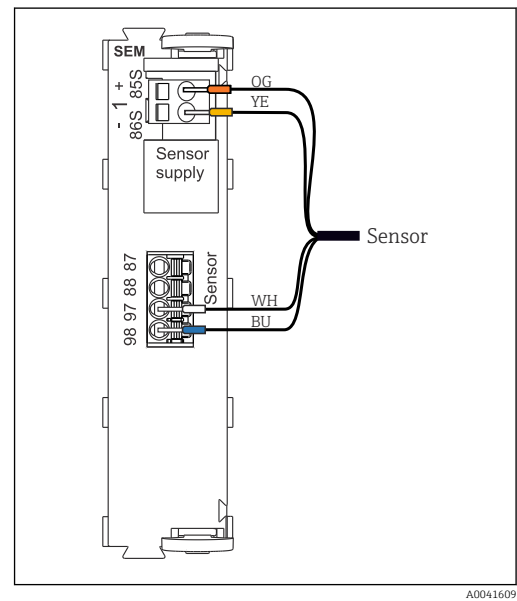


46 *Spectrometer connection to SEM module*

**i In the case of a single-channel device:**  
The left-hand Memosens input on basic module must be used!

**Memosens connection via M12 connection (field device only)**

Only for connection in non-hazardous area.

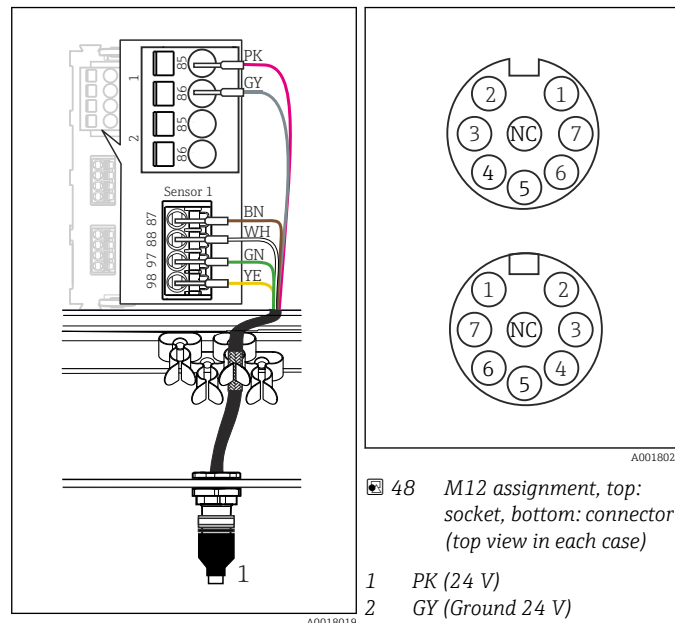

47 M12 connection (e.g. on sensor module)

1 Sensor cable with M12 connector

48 M12 assignment, top: socket, bottom: connector (top view in each case)

- 1 PK (24 V)
- 2 GY (Ground 24 V)
- 3 BN (3 V)
- 4 WH (Ground 3 V)
- 5 GN (Memosens)
- 6 YE (Memosens)
- 7, NC

Device versions with a pre-installed M12 socket are ready-wired upon delivery.

**Version without a pre-installed M12 socket**

1. Insert an M12 socket (accessory) into a suitable opening in the base of the housing.
2. Connect the cable to a Memosens terminal as per the wiring diagram.

**Connecting the sensor**

- Connect the sensor cable connector (→ 47item 1) directly to M12 socket.

Please note the following:


- The internal device wiring is always the same regardless of what kind of sensor you connect to the M12 socket (plug&play).
- The signal or power supply cables are assigned in the sensor head in such a way that the PK and GY power supply cables are either used (e.g. optical sensors) or not (e.g. pH or ORP sensors).

**i** When connecting intrinsically safe sensors to transmitters with sensor communication module type 2DS Ex i, the M12 plug-in connector is **not** permitted.

### 6.3.6 Connecting intrinsically safe sensors to sensor communication module type 2DS Ex i

Sensor cable connected directly

- Connect the sensor cable to the terminal connector of the sensor communication module 2DS Ex-i.

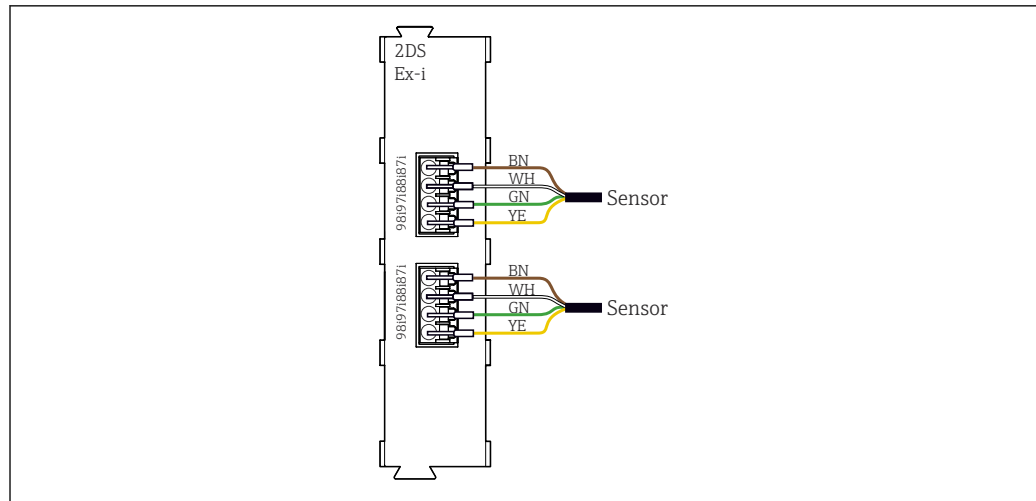

A0045659

49 Sensors without additional supply voltage at sensor communication module type 2DS Ex-i

**i** Intrinsically safe sensors for use in explosive atmospheres may only be connected to the sensor communication module type 2DS Ex-i. Only the sensors covered by the certificates may be connected (see XA).

## 6.4 Connecting additional inputs, outputs or relays

### **⚠ WARNING**

#### **Module not covered**

No shock protection. Danger of electric shock!


- ▶ Change or extend the hardware for the **non-hazardous area**: always fill the slots from left to right. Do not leave any gaps.
- ▶ If all of the slots are not occupied in the case of devices for the **non-hazardous area**: always insert a dummy cover or end cover in the slot to the right of the last module (→ 2, 10). This ensures that the unit is shock-protected.
- ▶ Always ensure shock protection is guaranteed particularly in the case of relay modules (2R, 4R, AOR).
- ▶ Hardware for the **hazardous area** may not be modified. Only the Manufacturer's Service Team may convert a certified device to another certified device version. This includes all modules of the transmitter with an integrated 2DS Ex-i module, as well as changes that concern non-intrinsically safe modules.

**i** The terminal strip (cabinet unit) is used to connect the cable shields.


- ▶ If additional shields are required, connect them with PE centrally in the control cabinet via terminal blocks supplied by the customer.

6.4.1 Digital inputs and outputs

DIO module

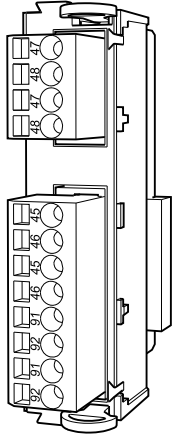


50 Module

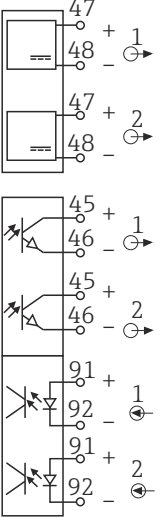


51 Wiring diagram

6.4.2 Current inputs

2AI module




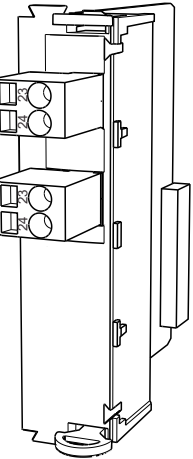




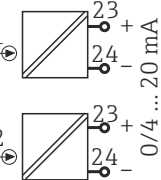

52 Module







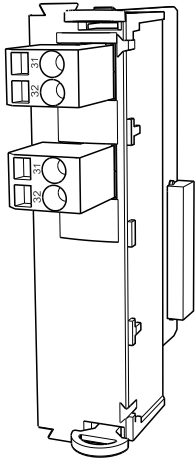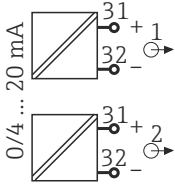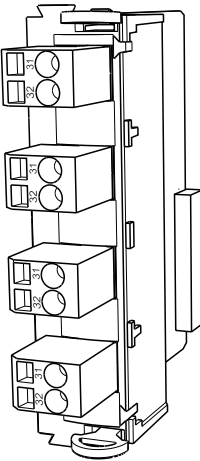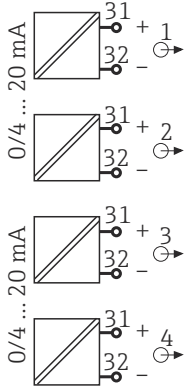



53 Wiring diagram

6.4.3 Current outputs

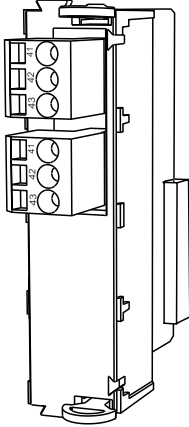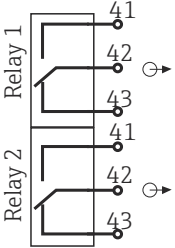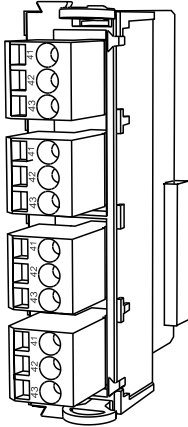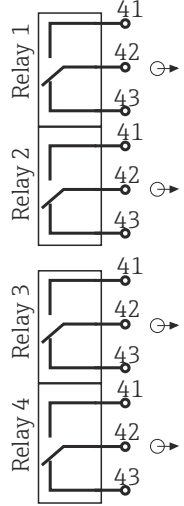2AO		4AO	
			
 54 Module	 55 Wiring diagram	 56 Module	 57 Wiring diagram


6.4.4 Relay

2R module		4R module	
			
 58 Module	 59 Wiring diagram	 60 Module	 61 Wiring diagram

**Example: Connecting the cleaning unit 71072583 for CAS40D****NOTICE****Power consumption too high for the Liquiline alarm relay!**


Can cause irreparable damage to the base module

- Connect the cleaning unit only to terminals of an additional module (AOR, 2R or 4R), **not** to the alarm relay of the base module.

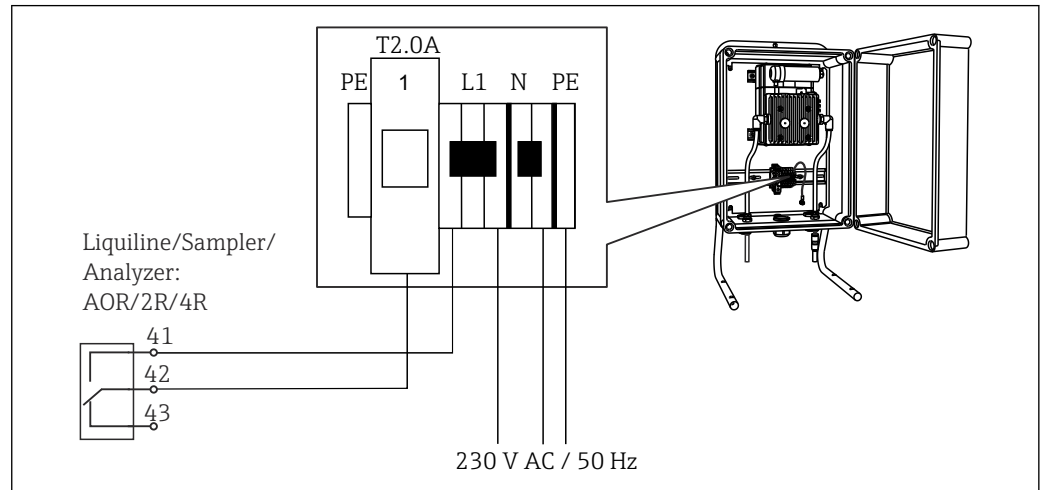

A0028597

62 Connecting the cleaning unit for CAS40D

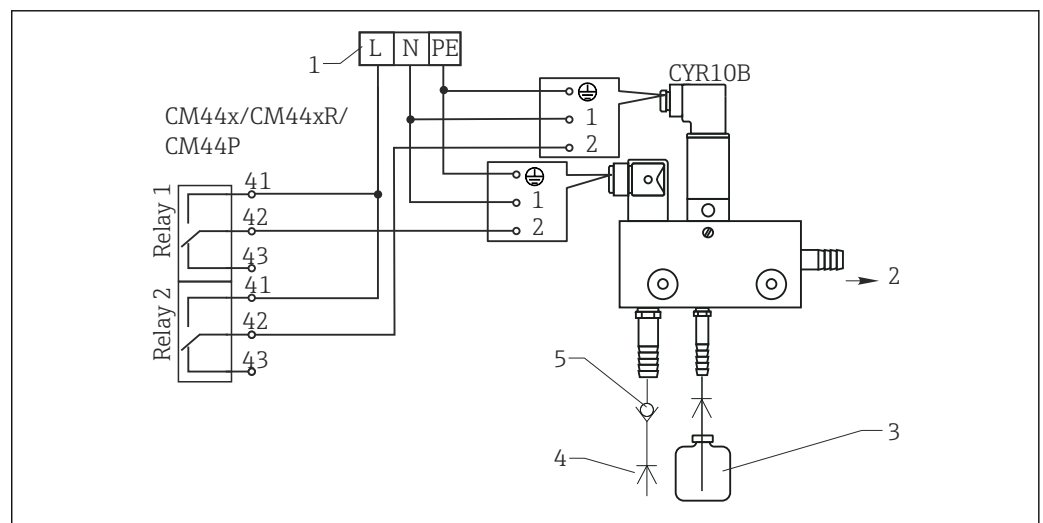**Example: Connecting the Chemoclean CYR10B injector cleaning unit**

A0028598


63 Connecting the CYR10B injector cleaning unit

- 1 External power supply
- 2 Cleaner to spray head
- 3 Container with cleaner
- 4 Motive water 2 to 12 bar (30 to 180 psi)
- 5 Backflow valve (to be provided by the customer)





6.5.2 Module 485 MB

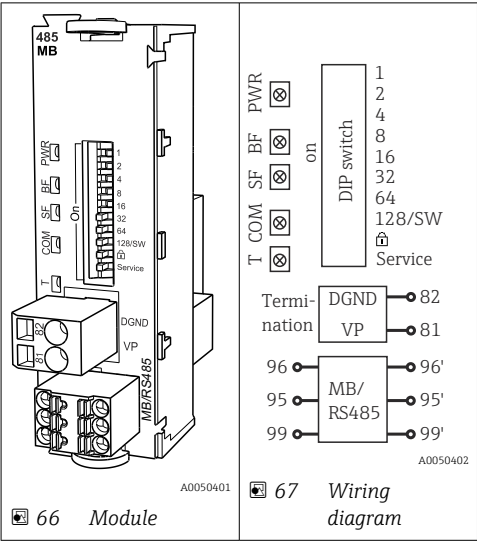

Terminal	Modbus RS485
95	B
96	A
99	C
82	DGND
81	VP

LEDs on front of module




LED	Designation	Color	Description
PWR	Power	GN	Supply voltage is applied and module is initialized.
BF	Bus failure	RD	Bus failure
SF	System failure	RD	Device error
COM	Communication	YE	Modbus message sent or received.
T	Bus termination	YE	<ul style="list-style-type: none"><li>Off = No termination</li><li>On = Termination is used</li></ul>

DIP switches on front of module

DIP	Factory setting	Assignment
1-128	ON	Bus address (→ "Commissioning/communication")
128/SW	OFF	Write protection: "ON" = configuration not possible via the bus, only via local operation
Service	OFF	The switch has no function




6.5.3 Connection via M12 plug (field device only)

PROFIBUS DP

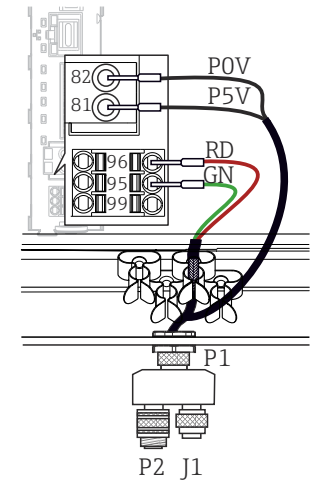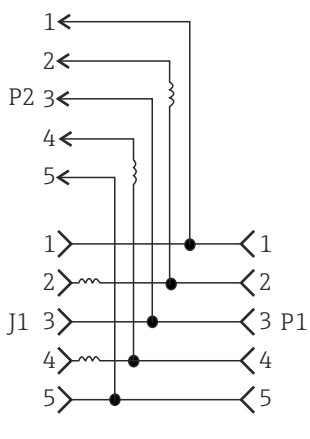
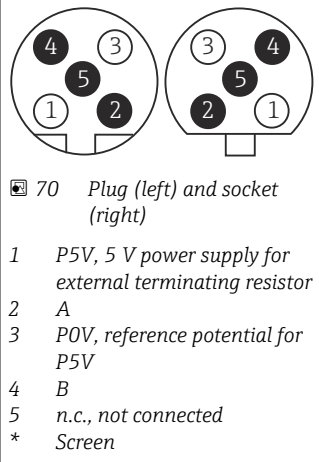
M12 Y-section	Wiring in M12 Y section	Pin assignment in plug and socket
 <p>68 M12 plug-in connector</p>	 <p>69 Wiring</p>	 <p>70 Plug (left) and socket (right)</p> <p>1 P5V, 5 V power supply for external terminating resistor 2 A 3 P0V, reference potential for P5V 4 B 5 n.c., not connected * Screen</p>

**i** When using the M12 Y-section, the maximum data transfer rate is limited to 1.5 MBit/s. For direct wiring, the maximum data transfer rate is 12 MBit/s.

Modbus RS485

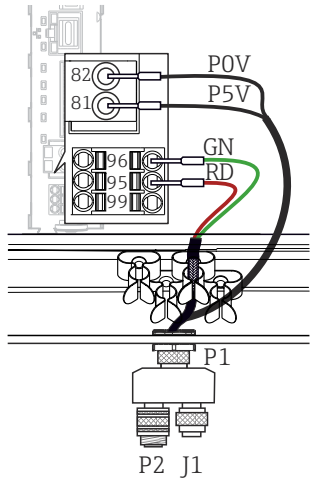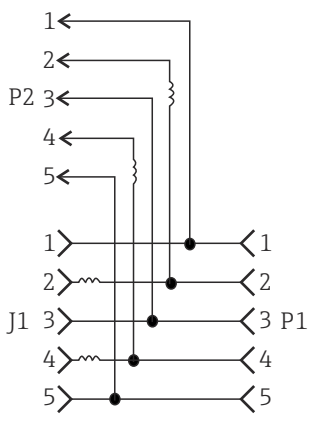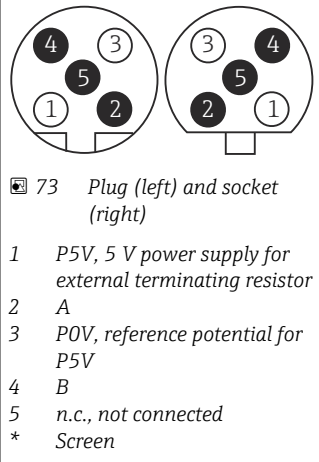M12 Y-section	Wiring in M12 Y section	Pin assignment in plug and socket
 <p>71 M12 plug-in connector</p>	 <p>72 Wiring</p>	 <p>73 Plug (left) and socket (right)</p> <p>1 P5V, 5 V power supply for external terminating resistor 2 A 3 P0V, reference potential for P5V 4 B 5 n.c., not connected * Screen</p>


Ethernet, web server, PROFINET

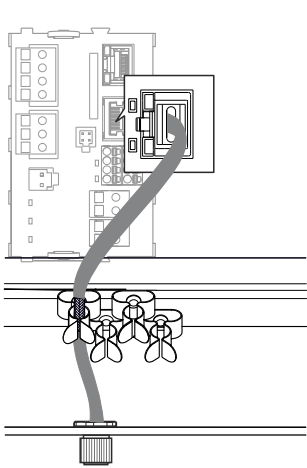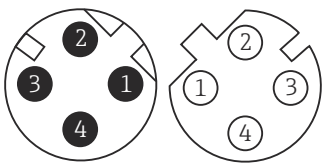Internal connection	Pin assignment in plug and socket
 <p>74 Ethernet socket</p>	 <p>75 Plug (left) and socket (right)</p> <p>1 Tx+</p> <p>2 Rx+</p> <p>3 Tx-</p> <p>4 Rx-</p> <p>Shielding (thread)</p>

### 6.5.4 Bus termination


There are 2 ways to terminate the bus:

#### 1. Internal termination (via DIP switch on module board)

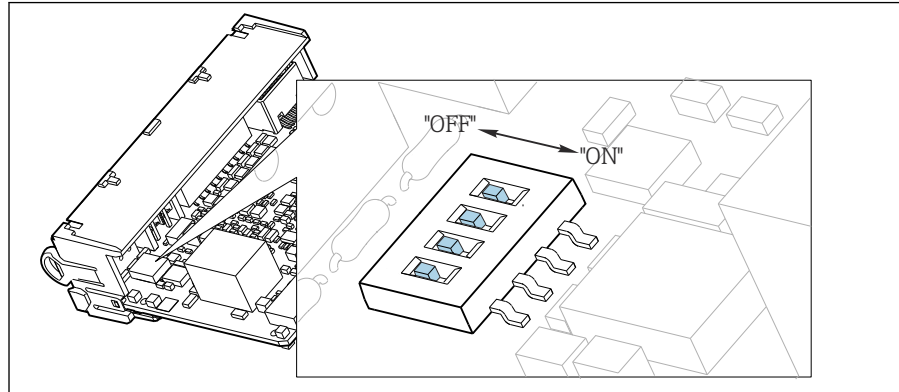

76 DIP switch for internal termination

- Using a suitable tool such as a tweezer, move all four DIP switches to the "ON" position.
  - ↳ The internal termination is used.

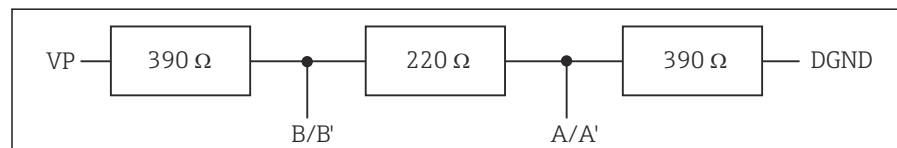

77 Structure of internal termination

#### 2. External termination

Leave the DIP switches on the module board in the "OFF" position (factory setting).


- Connect the external termination to terminals 81 and 82 on the front of module 485DP or 485MB for 5-V power supply.
  - ↳ The external termination is used.

## 6.6 Hardware settings

### Setting the bus address

1. Open the housing.
2. Set the desired bus address via the DIP switches of module 485DP or 485MB.

**i** For PROFIBUS DP, valid bus addresses are anything between 1 and 126, and anything between 1 and 247 for Modbus. If you configure an invalid address, software addressing is automatically enabled via the local configuration or via the fieldbus.

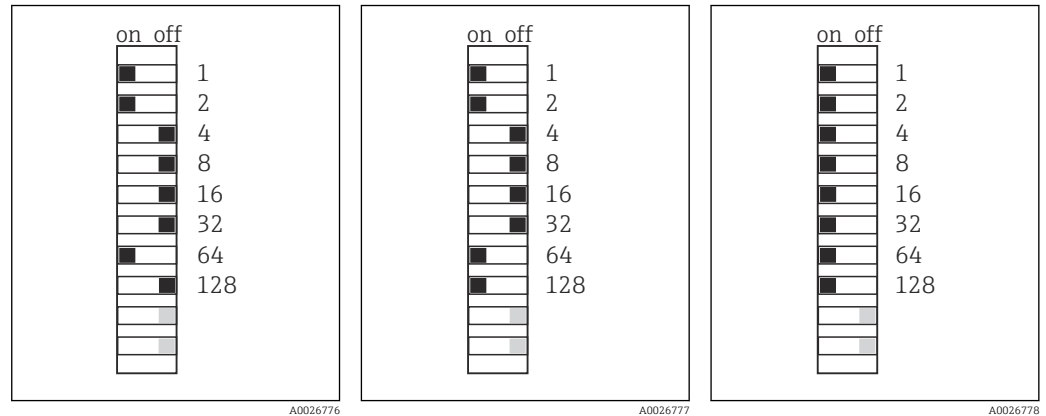

78 Valid PROFIBUS address 67 79 Valid Modbus address 195 80 Invalid address 255 <sup>1)</sup>

<sup>1)</sup> Order configuration, software addressing is active, software address configured at the factory: PROFIBUS 126, Modbus 247

## 6.7 Ensuring the degree of protection

Only the mechanical and electrical connections which are described in these instructions and which are necessary for the required, designated use, may be carried out on the device delivered.

- Exercise care when carrying out the work.

Individual types of protection permitted for this product (impermeability (IP), electrical safety, EMC interference immunity, Ex protection) can no longer be guaranteed if, for example :

- Covers are left off
- Different power units to the ones supplied are used
- Cable glands are not sufficiently tightened (must be tightened with 2 Nm (1.5 lbf ft) for the permitted level of IP protection)
- Unsuitable cable diameters are used for the cable glands
- Modules are not fully secured
- The display is not fully secured (risk of moisture entering due to inadequate sealing)
- Loose or insufficiently tightened cables/cable ends
- Conductive cable strands are left in the device

## 6.8 Post-connection check

### WARNING

#### Connection errors

The safety of people and of the measuring point is at risk! The manufacturer does not accept any responsibility for errors that result from failure to comply with the instructions in this manual.

- ▶ Put the device into operation only if you can answer **yes** to **all** the following questions.

#### Device condition and specifications


- ▶ Are the device and all the cables free from damage on the outside?

#### Electrical connection

- ▶ Are the mounted cables strain relieved?
- ▶ Are the cables routed without loops and cross-overs?
- ▶ Are the signal cables correctly connected as per the wiring diagram?
- ▶ Have all the other connections been established correctly?
- ▶ Are unused connection wires connected to the protective ground connection?
- ▶ Are all plug-in terminals securely engaged?
- ▶ Are all the connection wires securely positioned in the cable terminals?
- ▶ Are all cable entries mounted, tightened and leak-tight?
- ▶ Does the supply voltage match the voltage indicated on the nameplate?


## 7 System integration


### 7.1 Web server

 Versions without fieldbus: An activation code is required for the web server.

#### 7.1.1 Connection

- Connect the communication cable of the computer to the Ethernet port of the BASE2 module.

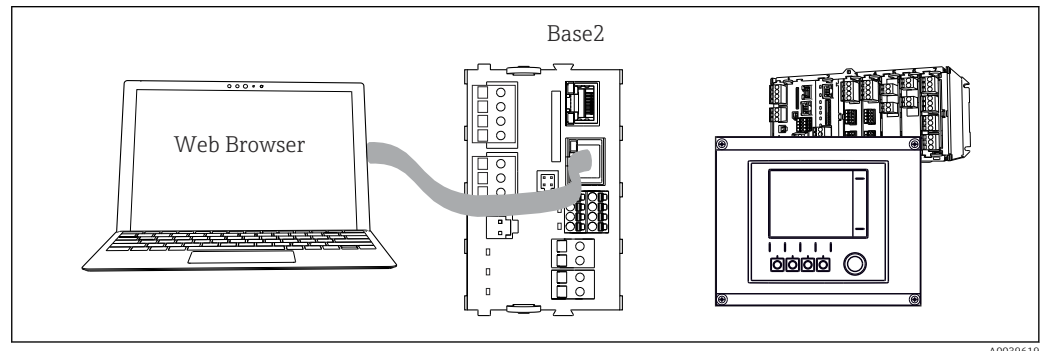

 81 Web server/Ethernet connection

#### 7.1.2 Establishing the data connection

*All versions with the exception of PROFINET:*

To ensure that your device has a valid IP address, you must disable the **DHCP** parameter in the Ethernet settings. (**Menu/Setup/General settings/Extended setup/Ethernet/Settings**)

You can assign the IP address manually in the same menu (for point-to-point connections).


*All versions including PROFINET:*

You will find the IP address and subnet mask of the device under: **DIAG/System information/Ethernet**.

1. Start your PC.
2. First, configure a manual IP address in the network connection settings of the operating system.


#### Example: Microsoft Windows 10

3. Open Network and Sharing Center.
  - ↳ Apart from your standard network, you should see an additional Ethernet connection (e.g. as an "unidentified network").
4. Select the link to this Ethernet connection.
5. In the pop-up window select the "Properties" button.
6. Double-click "Internet Protocol Version 4 (TCP/IPv4)".
7. Select "Use the following IP Address".
8. Enter the desired IP address. This address must be in the same subnet as the IP address of the device, e.g.:
  - ↳ IP address for Liquiline: 192.168.1.212 (as configured previously)
  - IP address for PC: 192.168.1.213.
9. Start the Internet browser.

10. If you use a proxy server to connect to the Internet:  
Disable the proxy (browser settings under "Connections/LAN settings").
  11. Enter the IP address of your device in the address bar (192.168.1.212 in the example).
    - ↳ The system takes a few moments to establish the connection and then the CM44 web server starts. You might be asked for a password. The factory setting is "admin" for the user name and "admin" for the password.
  12. Enter the following address(es) to download logbooks:
    - ↳ 192.168.1.212/logbooks\_csv.fhtml (for logbooks in CSV format)
    - 192.168.1.212/logbooks\_fdm.fhtml (for logbooks in FDM format)
-  Downloads in FDM format can be securely transmitted, saved and visualized with Endress+Hauser's "Field Data Manager Software".  
(→ [www.endress.com/ms20](http://www.endress.com/ms20))

### 7.1.3 Operation


The menu structure of the web server corresponds to the onsite operation.

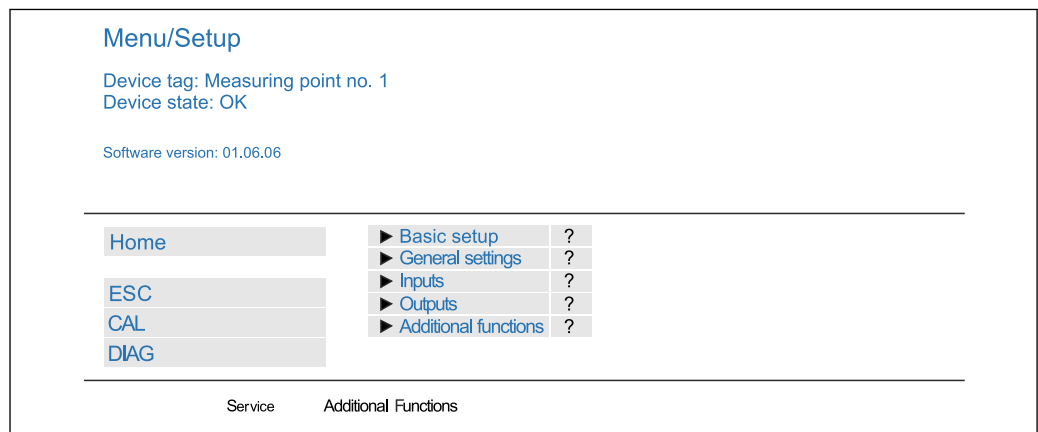

A0026780

 82 Example of web server (menu/language=English)

- Clicking a menu name or a function corresponds to pressing the navigator.
- You can make your settings conveniently via the computer keyboard.

 Instead of using an Internet browser, you can also use FieldCare for configuration via Ethernet. The Ethernet DTM required for this is an integral part of the "Endress +Hauser Interface Device DTM Library".

Download: <https://portal.endress.com/webdownload/FieldCareDownloadGUI/>


## 7.2 Service interface

You can connect the device to a computer via the service interface and configure it using "FieldCare". Furthermore, configurations can also be saved, transferred and documented.

### 7.2.1 Connection

1. Connect the service connector to the interface on the Liquiline base module and connect it to the Commubox.
2. Connect the Commubox via the USB connection to the computer on which FieldCare is installed.



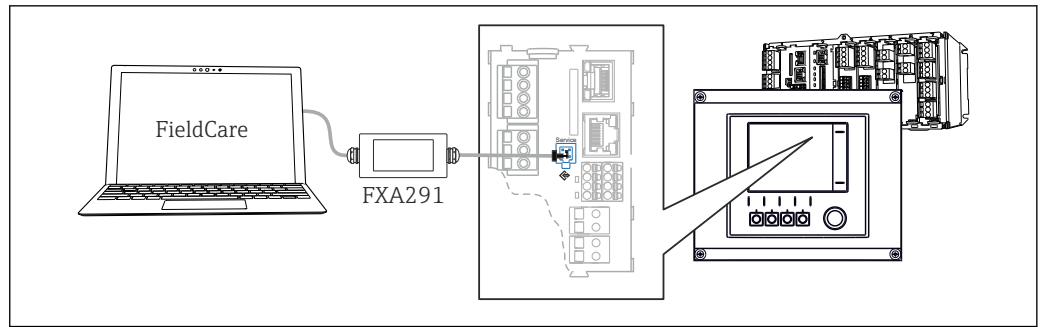

A0039618

83 Connection overview

## 7.2.2 Establishing the data connection

1. Start FieldCare.
2. Establish a connection to the Commubox. To do so, select the "CDI Communication FXA291" ComDTM.
3. Then select the "Liquiline CM44x" DTM and start configuration.

You can now start online configuration via the DTM.

Online configuration competes with onsite operation, i.e. each of the two options blocks the other one. On both sides it is possible to take away access from the other side.

## 7.2.3 Operation

- In the DTM the menu structure corresponds to the onsite operation. The functions of the Liquiline soft keys are found in the main window on the left.
- Clicking a menu name or a function corresponds to pressing the navigator.
- You can make your settings conveniently via the computer keyboard.
- You can use FieldCare to save logbooks, make backups of configurations and transfer configurations to other devices.
- You can also print out configurations or save them as PDFs.

## 7.3 Fieldbus systems

### 7.3.1 HART

You can communicate using the HART protocol via current output 1.

1. Connect the HART modem or HART handheld terminal to current output 1 (communication load 250 - 500 Ohm).
2. Establish a connection via your HART device.
3. Operate the Liquiline via the HART device. To do so, follow the instructions in the manual.



More detailed information on HART communication is provided on the product pages on the Internet (→ BA00486C).

### 7.3.2 PROFIBUS DP

Communication via PROFIBUS DP is possible with module 485DP and the appropriate device version.

- Connect the PROFIBUS data cable to the terminals of the fieldbus module as described .



For detailed information on "PROFIBUS communication", see the product pages on the Internet (→ SD01188C).

### 7.3.3 Modbus

Communication via Modbus RS485 is possible with module 485MB and the appropriate device version.

Communication via Modbus TCP is possible with module BASE2.

The RTU and ASCII protocols are available when connecting via Modbus RS485. You can switch to ASCII on the device.

- ▶ Connect the Modbus data cable to the terminals of module 485MB (RS 485) or to the RJ45 socket of module BASE2 (TCP) as described.



For detailed information on "Modbus communication", see the product pages on the Internet (→ SD01189C).

### 7.3.4 EtherNet/IP

Communication via EtherNet/IP is possible with module BASE2 and the appropriate device version.

- ▶ Connect the EtherNet/IP data cable to the RJ45 socket of module BASE2.



For detailed information on "Ethernet/IP communication", see the product pages on the Internet (→ SD01293C).

### 7.3.5 PROFINET

Communication via PROFINET is possible with module BASE2 and the appropriate device version.

- ▶ Connect the PROFINET data cable to the RJ45 socket of module BASE2.




For detailed information on "PROFINET communication", see the product pages on the internet (→ SD02490C).

# 8      Operation options

## 8.1    Overview


### 8.1.1   Display and operating elements

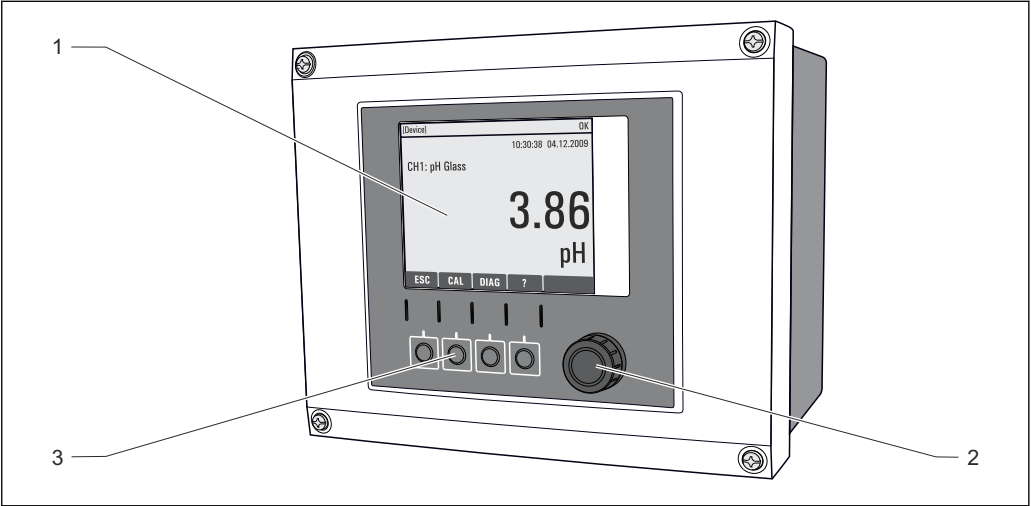

84    Overview of operation (using the example of the field device)

- 1    Display (with red display background in alarm condition)
- 2    Navigator (jog/shuttle and press/hold function)
- 3    Soft keys (function depends on menu)


### 8.1.2   Display

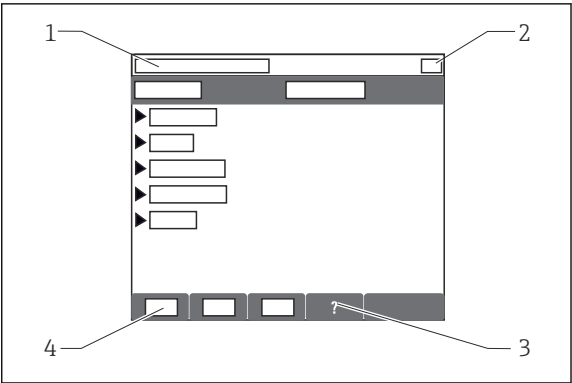


- 1    Menu path and/or device designation
- 2    Status display
- 3    Help if available
- 4    Assignment of the soft keys

## 8.2 Access to operating menu via local display


### 8.2.1 Operating concept

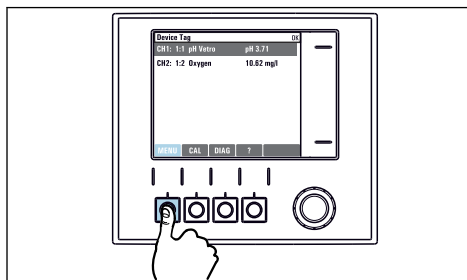


- ▶ Pressing the soft key: selecting the menu directly

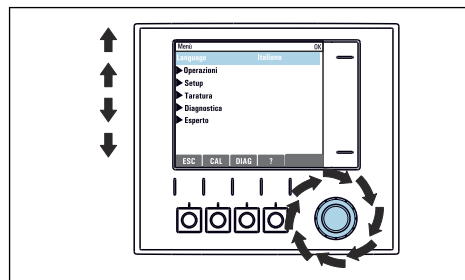


- ▶ Turning the navigator: moving the cursor in the menu

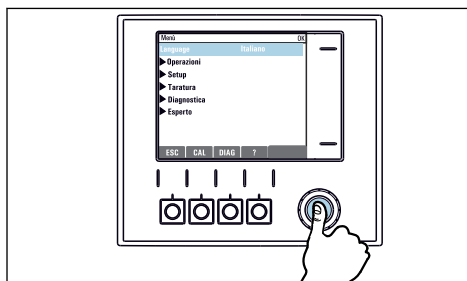


- ▶ Pressing the navigator: launching a function

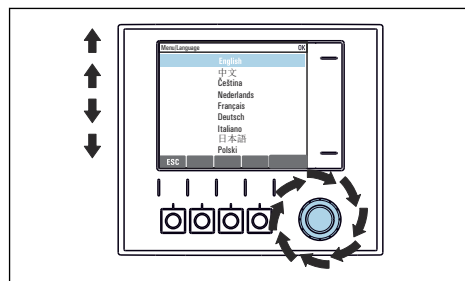

- ▶ Turning the navigator: selecting a value (e.g. from a list)

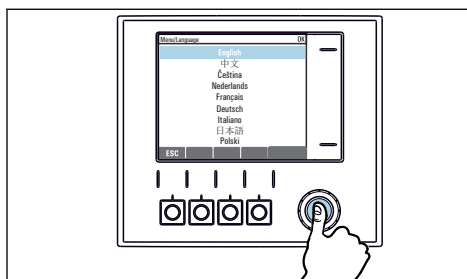

- ▶ Pressing the navigator: accepting the new value

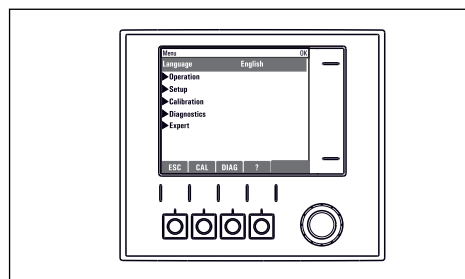

- ↳ New setting is accepted

### 8.2.2 Locking or unlocking operating keys

#### Locking operating keys

1. Press the navigator for longer than 2 s.
  - ↳ A context menu for locking the operating keys is displayed. You have the choice of locking the keys with or without password protection. "With password" means that you can only unlock the keys again by entering the correct password. Set this password here: **Menu/Setup/General settings/Extended setup/Data management/Change key lock password.**

2. Select whether to lock keys with or without a password.

↳ The keys are locked. No more entries can be made. In the soft key bar, you will see the  symbol.



The password is 0000 when the device is delivered from the factory. **Make sure to note down any changes to the password**, as otherwise you will not be able to unlock the keypad yourself.

### Unlocking operating keys


1. Press the navigator for longer than 2 s.

↳ A context menu for unlocking the operating keys is displayed.

2. **Key unlock .**

↳ The keys are unlocked immediately if you did not choose to lock with a password. Otherwise you are asked to enter your password.

3. Only if keypad is password-protected: enter the right password.

↳ The keys are unlocked. It is possible to access the entire onsite operation again. The  symbol is no longer visible on the display.

## 8.3 Configuration options

### 8.3.1 Display only

- You can only read the values but cannot change them.
- Typical read-only values are: sensor data and system information


### 8.3.2 Picklists

- You receive a list of options. In a few cases, these also appear in the form of multiple choice boxes.
- Usually you just select one option; in rare instances you select one or more options.

### 8.3.3 Numerical values


- You are changing a variable.
- The maximum and minimum values for this variable are shown on the display.
- Configure a value within these limits.

### 8.3.4 Actions

- You trigger an action with the appropriate function.
- You know that the item in question is an action if it is preceded by the following symbol:  

- Examples of typical actions include:
  - Deleting log entries
  - Saving or loading configurations
  - Triggering cleaning programs
- Example: **Diagnostics/Logbooks/Configuration logbook/Delete all entries**

### 8.3.5 User-defined text

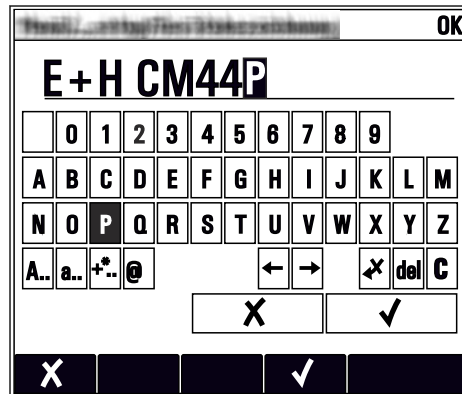- You are assigning an individual designation.
- Enter a text. You can use the characters in the editor for this purpose (upper-case and lower-case letters, numbers and special characters).
- Using the soft keys, you can:
  - Cancel your entries without saving the data (X)
  - Delete the character in front of the cursor (X)
  - Move the cursor back one position (←)
  - Finish your entries and save (✓)
- Example: **Menu/Setup/General settings/Device tag**



### 8.3.6 Tables

- Tables are needed to map mathematical functions or to enter irregular interval samples.
- You edit a table by navigating through rows and columns with the navigator and changing the values of the cells.
- You only edit the numerical values. The controller automatically takes care of the engineering units.
- You can add rows to the table (**INSERT** soft key) or delete them (**DEL** soft key).
- Afterwards, you save the table (**SAVE** soft key).
- You can also cancel your entries any time using the **X** soft key.
- Example: **Menu/Setup/Inputs/pH/Medium comp.**

	Temperature	pH
1	20.0 °C	pH 6.90
2	25.0 °C	pH 7.00
3	30.0 °C	pH 7.10

## 9 Commissioning

### 9.1 Function check

#### **WARNING**

##### **Incorrect connection, incorrect supply voltage**

Safety risks for staff and device malfunctions!


- ▶ Check that all connections have been established correctly in accordance with the wiring diagram.
- ▶ Ensure that the supply voltage matches the voltage indicated on the nameplate.

##### **Saving the configuration settings as a screenshot**

Via the local display , you can take screenshots at any time and save them to an SD card.

1. Insert an SD card into the SD card slot in the base module.
2. Press the navigator button for at least 3 seconds.
3. In the context menu, select the **Screenshot** item.
  - ↳ The current screen is saved as a bitmap file to the SD card in the "Screenshots" folder.

### 9.2 Power-up

-  During the device startup phase, the relays and current outputs have an undefined status for a few seconds prior to initialization. Watch out for possible effects on any actuators which may be connected.

#### 9.2.1 Setting the operating language

##### **Configuring the language**

If you have not already done so, close the housing cover and screw the device closed.

1. Switch on the supply voltage.
  - ↳ Wait for the initialization to finish.
2. Press the soft key: **MENU**.
3. Set your language in the top menu item.
  - ↳ The device can now be operated in your chosen language.

## 9.2.2 Display behavior

Menu/Operation/Display		
Function	Options	Info
Contrast	5 to 95 % <b>Factory setting</b> 50 %	Adjust the screen settings to suit your working environment. <b>Backlight = Automatic</b>
Backlight	<b>Selection</b> <ul style="list-style-type: none"> <li>On</li> <li>Off</li> <li>Automatic</li> </ul> <b>Factory setting</b> Automatic	The backlighting is switched off automatically after a short time if a button is not pressed. It switches back on again as soon as you press the navigator button. <b>Backlight = On</b> The backlighting does not switch off automatically.
Screen rotation	<b>Selection</b> <ul style="list-style-type: none"> <li>Manual</li> <li>Automatic</li> </ul> <b>Factory setting</b> Manual	If <b>Automatic</b> is selected, the single-channel measured value display switches from one channel to the next every second.

## 9.3 User definable screens

Menu/Operation/User definable screens		
Function	Options	Info
► Meas. screen 1 ... 6		You can create 6 measuring screens of your own and give them a name. The functions are identical for all 6 measuring screens.
Meas. screen	<b>Selection</b> <ul style="list-style-type: none"> <li>On</li> <li>Off</li> </ul> <b>Factory setting</b> Off	Once you have defined your own measuring screen, you can switch it on here. You can find the new screen under <b>User definable screens</b> .
Label	Customized text, 20 characters	Name of the measuring screen Appears in the status bar of the display.
Number of lines	1 to 8 <b>Factory setting</b> 8	Specify the number of measured values displayed.
► Line 1 ... 8	<b>User interface</b> Label	Specify the content of <b>Label</b> in the submenu of each line.
Source of data	<b>Selection</b> <ul style="list-style-type: none"> <li>None</li> <li>See list in "Info" column</li> </ul> <b>Factory setting</b> None	► Select a source of data. You can choose from the following: <ul style="list-style-type: none"> <li>Sensor inputs</li> <li>Heartbeat diagnostics of sensor inputs</li> <li>Controller</li> <li>Current inputs</li> <li>Fieldbus signals</li> <li>Mathematical functions</li> <li>Binary inputs and outputs</li> <li>Current outputs</li> <li>Relay</li> <li>Measuring range switching</li> </ul>
Measured value <i>Source of data is an input</i>	<b>Selection</b> Depends on the input <b>Factory setting</b> None	You can display different main, secondary and raw measured values depending on the type of input. No options can be selected for outputs here.



Menu/Operation/User definable screens		
Function	Options	Info
Actuator type <b>Source of data is a controller</b>	<b>Selection</b> <ul style="list-style-type: none"> <li>■ None</li> <li>■ Bipolar</li> <li>■ Unipolar-</li> <li>■ Unipolar+</li> </ul> <b>Factory setting</b> None	For more information on controllers and manipulated variables: → 86.
Label	Customized text, 20 characters	User-defined name for the parameter to be displayed
▷ Set label to "%OV" <sup>1)</sup>	Action	If you perform this action you accept the parameter name that is automatically suggested. Your own parameter name ( <b>Label</b> ) is lost!

- 1) "%OV" here stands for text that depends on the context. This text is generated automatically by the software and inserted in place of %OV. In the simplest situations, the generated text could be the name of the measuring channel, for example.

## 9.4 Basic setup

### Making basic settings

1. Switch to the **Setup/Basic setup** menu.
  - ↳ Make the following settings.
2. **Device tag:** Give your device any name of your choice (max. 32 characters).
3. **Set date:** Correct the set date if necessary.
4. **Set time:** Correct the set time if necessary.
  - ↳ For quick commissioning, you can ignore the additional settings for outputs, relays etc. You can make these settings later in the specific menus.
5. To return to the measuring mode: press the soft key for **ESC** for at least one second.
  - ↳ Your controller now works with your basic settings. The sensors connected use the factory settings of the sensor type in question and the individual calibration settings that were last saved.

If you wish to configure your most important input and output parameters in the **Basic setup** :

- Configure the current outputs, relays, limit switches, controllers, device diagnostics and cleaning cycles with the submenus which follow the time setting.

## 10 Operation

### 10.1 Display

#### 10.1.1 Soft keys in measuring mode

On the bottom row of the display you can find four soft keys in the measuring screens:


- With **MENU**, **CAL** and **DIAG** take you directly to the specific software menu.
- With **HOLD** you can activate an immediate, general hold for sensors. This also sets all the linked outputs, controllers and cleaning cycles to HOLD. Any sensor cleaning programs that are currently running are interrupted. However, you can also start manual sensor cleaning when a hold is active.

#### 10.1.2 Measuring mode

There are different display modes: (press the navigator button to change the mode)

- (1) Overview of all the inputs and outputs
- (2) Main measured value of an input or output or the status of a relay
- (3) Main and secondary measured value of a sensor input
- (4) All measured values of a sensor input
- (5) **Only for spectrometer measured value:**  
Graphic display of the absorption spectrum
- (5) **Only for interface measurement:**  
Graphic display of the separation zone

There are also submenus:

- (6) User-definable measuring menus (only available if already defined)  
Selection of previously configured screens (→  60)
- (7) Heartbeat diagnostics  
Quick overview of the health of the device and of each connected sensor that supports Heartbeat technology

#### Change of channel to modes (2) - (5)


- Turn the navigator.
  - ↳ The display changes from channel to channel.

Sensor type	Main value	Main/secondary measured value	All values
Spectrometer	L*	L* Temperature	L*, a*, b*, temperature Graphic display of spectrum
pH, glass	pH value	pH value, temperature	Main value, Raw value, Temperature, Glass impedance
Combined sensor pH and ORP	pH value or ORP or rH value	pH value or ORP or rH value, temperature	Main value, Raw value, Temperature, Glass impedance
pH, ISFET	pH value	pH value, temperature	Main value, Raw value, Temperature
ORP	ORP	ORP, temperature	Main value, Raw value, Offset, Temperature
Conductivity, measured inductively	Conductivity, concentration	Conductivity, concentration, temperature	Main value, Raw value, Temperature
Conductivity, measured conductively	Conductivity, resistivity, concentration	Conductivity, resistivity, concentration, temperature	Main value, Raw value, Temperature
Oxygen, optical and amperometric	Oxygen	Oxygen, temperature	Partial pressure, Saturation , Concentration, Temperature

Sensor type	Main value	Main/secondary measured value	All values
Disinfection	Chlorine or chlorine dioxide (depending on the sensor)	Chlorine or chlorine dioxide, temperature	Main value, Raw value, Temperature
Nitrate	Nitrate	Nitrate, temperature	Main value, Raw value, Temperature
Turbidity	Turbidity	Turbidity, temperature	Main value, Raw value, Temperature
Spectral absorption coefficient (SAC)	SAC	SAC, temperature	Main value, Raw value, Temperature
Sludge level	Turbidity	Turbidity, temperature	Main value, Raw value, Temperature
Ammonium, ion-selective	Ammonium	Ammonium, temperature	Main value, Raw value, Temperature
Nitrate, ion-selective	Nitrate	Nitrate, temperature	Main value, Raw value, Temperature
Potassium, ion-selective	Potassium	Potassium, temperature	Main value, Raw value, Temperature
Interface measurement	UIS	UIS	Main value, Raw value, Temperature Separation zone (graphic)

### Heartbeat diagnostics

(Optional or with additional activation code)

- Heartbeat diagnostics screen with graphic indicators for the health of the device and sensor and with a maintenance or (sensor-dependent) calibration timer
- Heartbeat status information on the health of the device and condition of the sensor  
→  64
  - ☺: Sensor/device condition and maintenance timer > 20 %; no action is required
  - ☹: Sensor/device condition or maintenance timer > 5 ≤ 20 %, maintenance not yet urgent but should be scheduled
  - ☹: Sensor/device condition or maintenance timer < 5 %, maintenance is recommended
- The Heartbeat sensor condition is the assessment of the calibration results and the sensor diagnostic functions.

An unhappy smiley can be due to the calibration result, the measured value status or to the operating hours limit having been exceeded. These limits can be configured in the sensor setup in a way that adapts the Heartbeat diagnostics to the application.

### Heartbeat and NAMUR category

The Heartbeat status indicates the sensor or device condition while the NAMUR categories (F, C, M, S) assess the reliability of the measured value. The two conditions can correlate but do not have to.

#### ■ Example 1

- The number of remaining cleaning cycles for the sensor reaches 20% of the defined maximum number. The Heartbeat symbol changes from ☺ to ☹. The measured value is still reliable so the NAMUR status signal does not change.
- If the maximum number of cleaning cycles is exceeded, the Heartbeat symbol changes from ☹ to ☹. While the measured value can still be reliable, the NAMUR status signal changes to M (maintenance required).

#### ■ Example 2


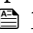
The sensor breaks. The Heartbeat status changes immediately from ☺ to ☹ and the NAMUR status signal also changes immediately to F (failure).

### 10.1.3 Device status

Icons on the display alert you to special device states.

Icon	Location	Description
<b>F</b>	Header bar	Diagnostic message "Failure"
<b>M</b>	Header bar	Diagnostic message "Maintenance request"
<b>C</b>	Header bar	Diagnostic message "Check"
<b>S</b>	Header bar	Diagnostic message "Out of specification"
↔	Header bar	Fieldbus or TCP/IP communication active
⌛	Header bar	Hold active (for sensors)
⌛	At measured value	Hold for the actuator (current output, limit switch etc.) is active
±	At measured value <sup>1)</sup>	An offset has been added to the measured value
⊗	At measured value	Measured value in "Bad" or "Alarm" state
ATC	At measured value	Automatic temperature compensation active (for sensors)
MTC	At measured value	Manual temperature compensation active (for sensors)
SIM	Header bar	Simulation mode active or Memocheck SIM connected
SIM	At measured value	The measured value is influenced by a simulated value
<b>SIM</b>	At measured value	The displayed measured value is simulated (for sensors)
😊	After the channel number	Heartbeat diagnostics: condition of sensor is good
😞	After the channel number	Heartbeat diagnostics: condition of sensor is bad
😐	After the channel number	Heartbeat diagnostics: condition of sensor is OK
☑	Header bar	Controller is active

1) Only pH or ORP measurement

 If two or more diagnostic messages occur simultaneously, only the icon for the message with the highest priority is shown on the display (for the order of priority according to NAMUR, →  136).


### 10.1.4 Assignment views

Assignment views, e.g. **Channel assignment view**, appear as the last function in many sections of the menu. You can use this function to see which actuators or functions are connected to an input or output. The assignments appear in hierarchical order.

## 10.2 General settings

### 10.2.1 Basic settings

Menu/Setup/General settings		
Function	Options	Info
Device tag	Customized text, 32 characters	► Select any name for your controller, e.g. use the TAG name.
Temperature unit	<b>Selection</b> <ul style="list-style-type: none"> <li>■ °C</li> <li>■ °F</li> <li>■ K</li> </ul> <b>Factory setting</b> °C	

Menu/Setup/General settings		
Function	Options	Info
Current output range	<b>Selection</b> <ul style="list-style-type: none"> <li>0..20 mA</li> <li>4..20 mA</li> </ul> <b>Factory setting</b> 4..20 mA	In accordance with NAMUR NE43, the linear range is 3.8 to 20.5 mA ( <b>4..20 mA</b> ) or 0 to 20.5 mA ( <b>0..20 mA</b> ). If the range is exceeded or undershot, the current value stops at the range limit and a diagnostic message (460 or 461) is output.
Failure current	0.0 to 23.0 mA <b>Factory setting</b> 22.5 mA	The function meets NAMUR NE43. ► Set the current value that should be output at the current outputs in the event of an error.
 The value for <b>Failure current</b> should be outside the measuring range. If you have selected <b>Current output range = 0..20 mA</b> , you should set a fault current between 20.1 and 23 mA. If <b>Current output range = 4..20 mA</b> is selected, you could also define a value of < 4 mA as a fault current. The device allows a fault current within the measuring range. In such instances, pay attention to any effects this may have on your process.		
Alarm delay	0 to 9999 s <b>Factory setting</b> 0 s	The software displays only the errors that are present longer than the set delay time. This makes it possible to suppress messages that only occur briefly and are caused by normal process-specific fluctuations.
Device hold	<b>Selection</b> <ul style="list-style-type: none"> <li>Disabled</li> <li>Enabled</li> </ul> <b>Factory setting</b> Disabled	You can enable an immediate, general hold (for sensors) here. The function acts in the same way as the <b>HOLD</b> softkey in the measuring screens.


## 10.2.2 Date and time

Menu/Setup/General settings/Date/Time		
Function	Options	Info
Set date	Depends on the format	Editing mode: Day (two-digit): 01 to 31 Month (two-digit): 01 to 12 Year (four-digit): 1970 to 2106
Set time	Depends on the format	Editing mode: hh (hour): 00 to 23 / 0 am to 12 pm mm (minutes): 00 to 59 ss (seconds): 00 to 59

Menu/Setup/General settings/Date/Time		
Function	Options	Info
► Extended setup		
Date format	<b>Selection</b> <ul style="list-style-type: none"> <li>■ DD.MM.YYYY</li> <li>■ YYYY-MM-DD</li> <li>■ MM-DD-YYYY</li> </ul> <b>Factory setting</b> DD.MM.YYYY	► Select a date format.
Time format	<b>Selection</b> <ul style="list-style-type: none"> <li>■ hh:mm am (12h)</li> <li>■ hh:mm (24h)</li> <li>■ hh:mm:ss (24h)</li> </ul> <b>Factory setting</b> hh:mm:ss (24h)	► Choose between 12-hour display or 24-hour display. Seconds can also be displayed with the latter version.
Time zone	<b>Selection</b> <ul style="list-style-type: none"> <li>■ None</li> <li>■ Choice of 35 time zones</li> </ul> <b>Factory setting</b> None	<b>None</b> = Greenwich Mean Time (London).
DST	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Europe</li> <li>■ USA</li> <li>■ Manual</li> </ul> <b>Factory setting</b> Off	The controller adapts the summertime/normal time changeover automatically if you choose European or American daylight saving time. Manual means that you can specify the start and end of daylight saving time yourself. Here, two additional submenus are displayed in which you specify the changeover date and time.

### 10.2.3 Hold settings

Menu/Setup/General settings/Hold settings		
Function	Options	Info
Settings automatic Hold		
Hold release time	0 to 600 s <b>Factory setting</b> 0 s	The hold status is maintained for the duration of the delay time when you switch to the measuring mode.
Setup menu	<b>Selection</b> <ul style="list-style-type: none"><li>■ Disabled</li><li>■ Enabled</li></ul> <b>Factory setting</b> Disabled	
Diagnostics menu		
Calibration active	<b>Factory setting</b> Enabled	

 If a device-specific hold status is activated, any cleaning previously started is interrupted. When a hold is active you can only start manual cleaning.

### 10.2.4 Logbooks

Logbooks record the following events:

- Calibration/adjustment events
- Operator events
- Diagnostic events

You define how the logbooks should store the data.


In addition, you can also define individual data logbooks .

1. Assign the logbook name.
2. Select the measured value to be recorded.
3. Set the scan time (**Scan time**).
  - ↳ You can set the scan time individually for every data logbook.



Further information on the logbooks: → 158.

Menu/Setup/General settings/Logbooks		
Function	Options	Info
Logbook ident	Customized text, 16 characters	Part of the file name when exporting a logbook
Event logbook	<b>Selection</b> <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Ring buffer</li> <li>▪ Fill up buffer</li> </ul> <b>Factory setting</b> Ring buffer	All diagnostic messages are recorded <b>Ring buffer</b> If the memory is full, the most recent entry automatically overwrites the oldest entry. <b>Fill up buffer</b> If the memory is full, there is an overflow, i. e. you cannot store any new values. The controller displays a corresponding diagnostic message. The memory then has to be cleared manually.
► Overflow warnings <b>Event logbook = Fill up buffer</b>		
Calibration logbook	<b>Selection</b> <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul> <b>Factory setting</b> Off	► Decide whether you want to receive a diagnostic message if the fill buffer of the relevant logbook overflows.
Diagnostic logbook		
Configuration logbook		
► Data logbooks		
► New		You can create a maximum of 8 data logbooks.
Logbook name	Customized text, 20 characters	
Source of data	<b>Selection</b> <ul style="list-style-type: none"> <li>▪ Sensor inputs</li> <li>▪ Heartbeat signals</li> <li>▪ Controller</li> <li>▪ Current inputs</li> <li>▪ Fieldbus signals</li> <li>▪ Binary inputs</li> <li>▪ Mathematical functions</li> </ul> <b>Factory setting</b> None	► Select a data source for the logbook entries. You can choose from the following: <ul style="list-style-type: none"> <li>▪ Connected sensors</li> <li>▪ Available controllers</li> <li>▪ Current inputs</li> <li>▪ Fieldbus signals</li> <li>▪ Binary input signals</li> <li>▪ Mathematical functions</li> </ul>
Measured value	<b>Selection</b> Depends on <b>Source of data</b> <b>Factory setting</b> None	You can record different measured values depending on the data source.

Menu/Setup/General settings/Logbooks		
Function	Options	Info
Scan time	0:00:01 to 1:00:00 <b>Factory setting</b> 0:01:00	Minimum time interval between two entries Format: H:MM:SS
Data logbook	<b>Selection</b> <ul style="list-style-type: none"> <li>Ring buffer</li> <li>Fill up buffer</li> </ul> <b>Factory setting</b> Ring buffer	<b>Ring buffer</b> If the memory is full, the most recent entry automatically overwrites the oldest entry.  <b>Fill up buffer</b> If the memory is full, there is an overflow, i. e. no new values can be saved. The controller displays a corresponding diagnostic message. The memory then has to be cleared manually.
Overflow warnings <b>Event logbook =</b> <b>Fill up buffer</b>	<b>Selection</b> <ul style="list-style-type: none"> <li>Off</li> <li>On</li> </ul> <b>Factory setting</b> Off	► Decide whether you want to receive a diagnostic message if the fill buffer of the relevant logbook overflows.
▷ Add another logbook	Action	Only if you want to create another data logbook immediately. You add a new data logbook at a later date using <b>New</b> .
▷ Finished	Action	This allows you to exit the <b>New</b> menu.
▷ Start/stop simultaneously	Action	Appears if you have created more than one data logbook. With one mouse click, you can start or stop recording all the data logbooks.
► Logbook name		The name of this submenu is based on the name of the logbook and only appears once you have created a logbook.
 This menu appears several times if you have several data logbooks.		
Source of data	Read only	This is for information purposes only. If you want to record another value, delete this logbook and create a new data logbook.
Measured value		
Log time left <b>Event logbook =</b> <b>Fill up buffer</b>	Read only	Displays the days, hours and minutes remaining until the logbook is full.
Log size <b>Event logbook =</b> <b>Fill up buffer</b>	Read only	Displays the number of entries remaining until the logbook is full.
Logbook name	Customized text, 20 characters	You can change the name here again.
Scan time	0:00:01 to 1:00:00 <b>Factory setting</b> 0:01:00	As above Minimum time interval between two entries Format: H:MM:SS
Data logbook	<b>Selection</b> <ul style="list-style-type: none"> <li>Ring buffer</li> <li>Fill up buffer</li> </ul> <b>Factory setting</b> Ring buffer	<b>Ring buffer</b> If the memory is full, the most recent entry automatically overwrites the oldest entry.  <b>Fill up buffer</b> If the memory is full, there is an overflow, i. e. no new values can be saved. The controller displays a corresponding diagnostic message. The memory then has to be cleared manually.
Overflow warnings <b>Event logbook =</b> <b>Fill up buffer</b>	<b>Selection</b> <ul style="list-style-type: none"> <li>Off</li> <li>On</li> </ul> <b>Factory setting</b> Off	► Decide whether you want to receive a diagnostic message if the fill buffer of the relevant logbook overflows.



Menu/Setup/General settings/Logbooks		
Function	Options	Info
► Line plotter		Menu to define the graphic display
Axes	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> On	Should the axes (x, y) be displayed ( <b>On</b> ) or not ( <b>Off</b> )?
Orientation	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Horizontal</li> <li>■ Vertical</li> </ul> <b>Factory setting</b> Horizontal	You can choose whether the value curves should be displayed from left to right ( <b>Horizontal</b> ) or from top to bottom ( <b>Vertical</b> ). If you want to display two data logbooks simultaneously, make sure that both logbooks have the same settings here.
X-Description	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> On	► Decide whether a description should be displayed for the axes and whether gridlines should be shown. In addition, you can also decide whether pitches should be displayed.
Y-Description		
Grids		
Pitches		
X Pitch/Grid distance	10 to 50%	► Determine the pitch.
Y Pitch/Grid distance	<b>Factory setting</b> 10 %	
▷ Remove	Action	This action removes the data logbook. Any data that have not been saved are lost.

#### Example: New data logbook (Setup/General settings/Logbooks/Data logbooks/New)

##### 1. Make the settings:

- Logbook name  
Assign a name. Example: "01".
- Source of data  
Select a data source. Example: Sensor connected to channel 1 (CH1).
- Measured value  
Select the measured value to be recorded. Example: pH value.
- Scan time  
Specify the time interval between two logbook entries.
- Data logbook  
Activate the logbook: specify the data storage method.

##### 2. ../Finished: Perform the action.

- ↳ The device shows the new logbook in the list of data logbooks.

##### 3. Select data logbook "01".

- ↳ Additional display: **Log time left**.

##### 4. Only in the case of **Fill up buffer**:

Decide to set **Overflow warning**: **On** or **Off**.



- ↳ **On**: The device displays a diagnostic message in the event of memory overflow.

##### 5. **Line plotter** submenu: Specify the type of graphic representation.

## 10.2.5 Extended setup

### Diagnostics settings


The list of diagnostic messages displayed depends on the path selected. There are device-specific messages, and messages that depend on what sensor is connected.

Menu/Setup/(General settings or Inputs<Sensor channel>)/Extended setup/Diagnostics settings/Diag. behavior		
Function	Options	Info
List of diagnostic messages		► Select the message to be changed. Only then is it possible to make the settings for this message.
Diag. code	Read only	
Diagnostic message	<b>Selection</b> <ul style="list-style-type: none"> <li>▪ On</li> <li>▪ Off</li> </ul> <b>Factory setting</b> Depends on the message	Deactivate the diagnostic message or activate it again. Deactivating means: <ul style="list-style-type: none"> <li>▪ No error message in the measuring mode</li> <li>▪ No failure current at the current output</li> </ul>
Failure current	<b>Selection</b> <ul style="list-style-type: none"> <li>▪ On</li> <li>▪ Off</li> </ul> <b>Factory setting</b> Depends on the message	► Decide whether a failure current should be output at the current output if the diagnostic message display is activated.  In the event of general device errors, the failure current is output at all the current outputs. In the event of channel-specific errors, the failure current is only output at the assigned current output.
Status signal	<b>Selection</b> <ul style="list-style-type: none"> <li>▪ Maintenance (M)</li> <li>▪ Out of specification (S)</li> <li>▪ Function check (C)</li> <li>▪ Failure (F)</li> </ul> <b>Factory setting</b> Depends on the message	The messages are divided into different error categories in accordance with NAMUR NE 107. ► Decide whether a status signal assignment should be changed for the application.
Diag. output	<b>Selection</b> <ul style="list-style-type: none"> <li>▪ None</li> <li>▪ Alarm relay</li> <li>▪ Binary output</li> <li>▪ Relay 1 to n (depends on the device version)</li> </ul> <b>Factory setting</b> None	Select an output to which the diagnostic message should be assigned. A relay output must first be configured for <b>Diagnostics</b> before it is possible to assign the message to an output. <b>(Menu/Setup/Outputs: Assign the Diagnostics function and set Operating mode to as assigned.)</b>
 Alarm relays are available, depending on the device version.		
Cleaning program (for sensors)	<b>Selection</b> <ul style="list-style-type: none"> <li>▪ None</li> <li>▪ Cleaning 1</li> <li>▪ Cleaning 2</li> <li>▪ Cleaning 3</li> <li>▪ Cleaning 4</li> </ul> <b>Factory setting</b> None	► Decide whether the diagnostic message should trigger a cleaning program. The cleaning programs can be defined under: <b>Menu/Setup/Additional functions/Cleaning.</b>
Detail information	Read only	Additional information on the diagnostic message and instructions on how to resolve the problem.



### HART bus address

The list of diagnostic messages displayed depends on the path selected. There are device-specific messages, and messages that depend on what sensor is connected.


Menu/Setup/General settings/Extended setup/HART		
Function	Options	Info
Bus address	0 to 63 <b>Factory setting</b> 0	You can change the device address to integrate several HART devices in a single network (Multidrop mode).

 If you reset the device to the factory settings (**Diagnostics/Reset/Factory default**), the bus address is not reset. Your setting is retained.

### PROFIBUS DP

Menu/Setup/General settings/Extended setup/PROFIBUS		
Function	Options	Info
Enable	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> On	You can switch off communication at this point. The software can then only be accessed via local operation.
Termination	Read only	If the device is the last in the bus, you can terminate via the hardware. →  48
Bus address	1 to 125	If you have addressed the bus via hardware (DIP switches on the module, →  48), you can only read the address here. If an invalid address is set via the hardware, you have to assign a valid address for your device either here or via the bus.
Ident number	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Automatic</li> <li>■ PA-Profile 3.02 (9760)</li> <li>■ Liquiline CM44x (155D)</li> <li>■ Manufacturer specific</li> </ul> <b>Factory setting</b> Automatic	

### Modbus

Menu/Setup/General settings/Extended setup/Modbus		
Function	Options	Info
Enable	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> On	You can switch off communication at this point. The software can then only be accessed via local operation.
Termination	Read only	If the device is the last in the bus, you can terminate via the hardware. →  48

Menu/Setup/General settings/Extended setup/Modbus		
Function	Options	Info
Settings		
Transmission mode	<b>Selection</b> <ul style="list-style-type: none"> <li>■ TCP</li> <li>■ RTU</li> <li>■ ASCII</li> </ul> <b>Factory setting</b> (Modbus-RS485 only) RTU	<p>The transmission mode is displayed depending on the version ordered.</p> <p>In the case of RS485 transmission, you can choose between <b>RTU</b> and <b>ASCII</b>. There are no choices for Modbus-TCP.</p>
Baudrate <i>Modbus-RS485 only</i>	<b>Selection</b> <ul style="list-style-type: none"> <li>■ 1200</li> <li>■ 2400</li> <li>■ 4800</li> <li>■ 9600</li> <li>■ 19200</li> <li>■ 38400</li> <li>■ 57600</li> <li>■ 115200</li> </ul> <b>Factory setting</b> 19200	
Parity <i>Modbus-RS485 only</i>	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Even (1 Stopbit)</li> <li>■ Odd (1 Stopbit)</li> <li>■ None (2 Stopbit)</li> </ul> <b>Factory setting</b> Even (1 Stopbit)	
Byte order	<b>Selection</b> <ul style="list-style-type: none"> <li>■ 1-0-3-2</li> <li>■ 0-1-2-3</li> <li>■ 2-3-0-1</li> <li>■ 3-2-1-0</li> </ul> <b>Factory setting</b> 1-0-3-2	
Watchdog	0 to 999 s <b>Factory setting</b> 5 s	<p>If no data transmission takes place for longer than the time set, this is an indicator that communication has been interrupted. After this time, input values received via the Modbus are considered to be invalid.</p>

## Web server

Menu/Setup/General settings/Extended setup/Webserver		
Function	Options	Info
Webserver	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> On	<p>You can switch off communication at this point. The software can then only be accessed via local operation.</p>
Webserver TCP port 80	Read only	<p>The Transmission Control Protocol (TCP) is an arrangement (protocol) as to how data should be exchanged between computers. A port is a part of an address which assigns data segments to a network protocol.</p>
Webserver login	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> On	<p>You can switch user administration on and off at this point. This makes it possible to create multiple users with password access.</p>

Menu/Setup/General settings/Extended setup/Webserver		
Function	Options	Info
User administration		
List of users already created	View/edit	You can change user names or passwords or delete users. A user is already created at the factory: "admin" with password "admin".
<b>New user:</b>		
Name	Free text	<b>Create new user</b> <b>1. INSERT .</b> <b>2.</b> Assign any name to the new user. <b>3.</b> Select a password for the user. <b>4.</b> Confirm password. ↳ You can now change the password at any time.
Enter new user password	Free text	
Confirm new user password	Free text	
Change user password	Free text	

## PROFINET

Menu/Setup/General settings/Extended setup/PROFINET		
Function	Options	Info
Name of station	Read only <b>Factory setting</b> Empty character string	Symbolic name for unique identification of the field device in a PROFINET system. The parameter can only be written via the DCP protocol.

### Ethernet/IP or Ethernet (depending on the protocol)



If PROFINET is used, the settings in this menu are read only settings. The network settings are made via the PROFINET-DCP protocol.



For detailed information on "PROFINET communication", see the product pages on the internet (→ SD02490C).

Menu/Setup/General settings/Extended setup/Ethernet		
Function	Options	Info
Enable	<b>Selection</b> <ul style="list-style-type: none"> <li>Off</li> <li>On</li> </ul> <b>Factory setting</b> On	You can switch off communication at this point. The software can then only be accessed via local operation.
Settings		
Link settings	<b>Selection</b> <ul style="list-style-type: none"> <li>Auto negotiation</li> <li>10MBps half duplex</li> <li>10MBps full duplex</li> <li>100MBps half duplex</li> <li>100MBps full duplex</li> </ul> <b>Factory setting</b> Auto negotiation	Transmission methods of the communication channels <ul style="list-style-type: none"> <li><b>Full duplex:</b> Data can be transmitted and received simultaneously.</li> <li><b>Half-duplex:</b> Data can be transmitted and received on an alternating basis only, i.e. not simultaneously.</li> </ul>
DHCP	<b>Selection</b> <ul style="list-style-type: none"> <li>Off</li> <li>On</li> </ul> <b>Factory setting</b> On	The Dynamic Host Configuration Protocol (DHCP) makes it possible to assign the network configuration to clients via a server. With DHCP, it is possible to automatically integrate the device into an existing network without the need for manual configuration. Normally only the automatic assignment of the IP address must be configured at the client. During startup, the IP address, the netmask and the gateway are retrieved from a DHCP server.   Do you want to assign the IP address of the device manually? If so, you have to set <b>DHCP = Off</b> .
IP-Address	xxx.xxx.xxx.xxx	An IP address is an address in computer networks which are based on the Internet protocol (IP). You can only set the IP address if <b>DHCP</b> is switched off.
Netmask	xxx.xxx.xxx.xxx	On the basis of the IP address of a device, the netmask specifies which IP addresses this device searches for in its own network and which addresses it could access in other networks via a router. It therefore divides the IP address into a network part (network prefix) and a device part. The network part must be identical for all devices in the individual network, and the device part must be different for every device within the network.
Gateway	x.x.x.x	A gateway (protocol converter) enables communication between networks that are based on completely different protocols.
Service switch	Read only	
MAC-Address	Read only	The MAC address (Media Access Control address) is the hardware address of every individual network adapter which is used to uniquely identify the device in a computer network.
EtherNetIP Port 44818	Read only	A port is a part of an address which assigns data segments to a network protocol.


### Accepting settings

Have you changed settings manually, such as the IP address?

- ▶ Before you leave the **Ethernet** menu:  
select **SAVE** to apply your settings.
  - ↳ In the **DIAG/System information** menu you can check whether the new settings are used.

### Data management

#### Firmware update

 Please contact your local sales office for information on firmware updates available for your controller and its compatibility with earlier versions.

**Current firmware version : Menu/Diagnostics/System information.**

- ▶ Back up your current setup and your logbooks to an SD card.

To install a firmware update, you must have the update available on an SD card.

1. Insert the SD card into the controller card reader.
2. Go to **Menu/Setup/General settings/Extended setup/Data management/Firmware update**.
  - ↳ The update files on the SD card are displayed.
3. Select the desired update and select yes when asked the following:  
The current firmware will be overwritten.  
After this the device will reboot.  
Do you want to proceed?
  - ↳ The firmware is loaded and the device is then started with the new firmware.

#### Saving the setup

Saving a setup offers the following advantages, among others :

- Copying settings for other devices
- Quick and easy switching between various setups, e. g. for different user groups or for recurring sensor type changes
- Restoring a tried-and-tested setup, e. g. if you have changed a lot of settings and no longer know what the original settings were

1. Insert the SD card into the controller card reader.
2. Go to **Menu/Setup/General settings/Extended setup/Data management/Save setup** .
3. **Name:** Assign a file name.
4. Then select **Save** .
  - ↳ If you have already assigned the file name, you will be asked whether you want to overwrite the existing setup.
5. Use **OK** to confirm or cancel and assign a new file name.
  - ↳ Your setup is stored on the SD card and you can upload it quickly to the device at a later date.

#### Loading the setup

When you load a setup, the current configuration is overwritten.

1. Insert the SD card into the controller card reader. A setup must have been saved to the SD card.


2. Go to **Menu/Setup/General settings/Extended setup/Data management/Load setup** .
  - ↳ A list of all the setups on the SD card is displayed.  
An error message is displayed if there is no valid setup on the card.
3. Select the desired setup.
  - ↳ A warning is displayed:  
  
The current parameters will be overwritten and the device will reboot.  
Warning: Please note that cleaning and controller programs can be active.  
Do you want to proceed?
4. Use **OK** to confirm or cancel.
  - ↳ If you select **OK** to confirm, the device restarts with the desired setup.

#### *Exporting the setup*

Exporting a setup offers the following advantages, among others:

- Export in XML format with a stylesheet for formatted display in an XML-compatible application, such as . Microsoft Internet Explorer
- Importing the data (drag and drop the XML file into a browser window)


1. Insert the SD card into the controller card reader.
2. Go to **Menu/Setup/General settings/Extended setup/Data management/Export setup** .
3. **Name:** Assign a file name.
4. Then select **Export** .
  - ↳ If you have already assigned the file name, you will be asked whether you want to overwrite the existing setup.
5. Use **OK** to confirm or cancel and assign a new file name.
  - ↳ Your setup is saved on the SD card in the "Device" folder.

 You cannot upload the exported setup to the device again. You must use the **Save setup** . This is the only way you can save a setup to an SD card and reload it later on or upload it to other devices.

#### *Activation code*

Activation codes are required for:

- Additional functions, e. g. Fieldbus communication
- Firmware upgrades
- Modifications, e.g. deactivation of fieldbus protocols

 If the original device has activation codes, these can be found on the nameplate. The corresponding device functions are activated at the factory. Codes are only required if servicing the device or deactivating fieldbus protocols.

1. Enter the activation code: **Menu/Setup/General settings/Extended setup/Data management/Activation code**.
2. Confirm your entry.
  - ↳ The new hardware or software function is activated and can be configured.

#### *Functions that are enabled by an activation code:*

Function	Activation code beginning with
Second Memosens input	062...
Fieldbus deactivation when removing module 485DP/485MB <sup>1)</sup>	0B0...
2 current outputs (BASE2-E module only)	081...
Web server <sup>2) 3)</sup>	351...



Function	Activation code beginning with
HART	0B1...
PROFIBUS DP	0B3...
Modbus TCP <sup>3)</sup>	0B8...
Modbus RS485	0B5...
EtherNet/IP <sup>3)</sup>	0B9...
PROFINET	0B7...
Measuring range switching, set 1	211...
Measuring range switching, set 2 <sup>4)</sup>	212...
Feedforward control	220...
Chemoclean Plus	25...
Cation exchanger capacity <sup>5)</sup>	301...
Formula <sup>6)</sup>	321...
Heartbeat monitoring	2D1...
Heartbeat verification	2E1...

- 1) If module 485DP/485MB is removed with the fieldbus protocol activated, the device outputs an error message. Enter the activation code from the inside nameplate. The fieldbus is only deactivated once you do this. The appropriate activation code must then be entered to activate current outputs of the base module. Additional current outputs (CM444R and CM448R only) are activated as soon as the corresponding module is used.
- 2) Via Ethernet socket of the BASE2 module, for versions without an Ethernet fieldbus
- 3)
- 4) When you order the "Measuring range switching" option, you receive two activation codes. Enter both in order to have two sets for measuring range switching.
- 5) Mathematical function
- 6) Mathematical function

### *Change password*

You can lock the operating keys with a password (access the context menu by pressing the navigator for longer). The keys can then only be enabled by entering the right password.

You can set the password to lock the keys here: **Menu/Setup/General settings/Extended setup/Data management/Change key lock password.**

1. Enter the current password (factory setting 0000).
  - ↳ Enter new password
2. Enter a new password.
  - ↳ Confirm new password
3. Enter the new password again.
  - ↳ The password has been changed successfully.

Press the navigator for longer to return to the measuring mode.

## 10.3 Inputs


### 10.3.1 Spectrometer

#### Basic settings

##### *Spectrometer identification*

Menu/Setup/Inputs/Channel: sensor type		
Function	Options	Info
Channel	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> On	<b>On</b> The channel display is switched on in the measuring mode  <b>Off</b> The channel is not displayed in the measuring mode, regardless of whether a sensor is connected or not.
Sensor type	Read only (Only available if a sensor is connected)	Connected sensor type
Order code		Order code of the connected sensor

##### *Application*

 Calibration datasets are saved under an individual name in the sensor. A new sensor is calibrated at the factory and thus already has appropriate datasets. You can add your own datasets during each calibration. These are then available for selection under **Application type**.

Menu/Setup/Inputs/Channel: Spectrometer		
Function	Options	Info
Application type	<b>Selection</b> color  <b>Factory setting</b> color	
Dataset		Preselection for saved calibration datasets

##### *Manual hold*

Menu/Setup/Inputs/Channel: Sensor type		
Function	Options	Info
Manual hold	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> Off	<b>On</b> You can use this function to set the channel manually to "Hold".  <b>Off</b> No channel-specific hold


## Extended setup

### Temperature format and measurement period

Menu/Setup/Inputs/Spectrometer/Extended setup		
Function	Options	Info
Temperature format	<b>Selection</b> <ul style="list-style-type: none"> <li>■ #.#</li> <li>■ #.##</li> </ul> <b>Factory setting</b> #.#	<ul style="list-style-type: none"> <li>► For specifying the number of decimal places.</li> </ul>
Measurement period	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Default</li> <li>■ Manual</li> </ul> <b>Factory setting</b> Default	
Measurement period <i>Measurement period = Manual</i>	1.00 to 3600.00 s	Number of measurements

### Cleaning hold

Menu/Setup/Inputs/Channel: <Sensor type>/► Extended setup		
Function	Options	Info
Cleaning hold	<b>Selection</b> <ul style="list-style-type: none"> <li>■ None</li> <li>■ Cleaning 1 ... 4</li> </ul> <b>Factory setting</b> None	<ul style="list-style-type: none"> <li>► For selecting one or more cleaning programs (multiple selection).             <ul style="list-style-type: none"> <li>↳ For the programs defined, the channel switches to "Hold" while cleaning is in progress.</li> </ul> </li> </ul> <p>Cleaning programs are executed:</p> <ul style="list-style-type: none"> <li>■ At a specified interval For this, the cleaning program must be started.</li> <li>■ If a diagnostics message is pending on the channel and a cleaning has been specified for this message (→ <b>Inputs/Channel: Sensor type/Diagnostics settings/Diag. behavior/Diagnostic number/Cleaning program</b>).</li> </ul>

 The cleaning programs are defined in the menu: **Setup/Additional functions/Cleaning**.

### Calibration settings

#### Stability criteria

You define the permitted variation in the measured value which may not be exceeded in a certain timeframe during calibration. If the permitted difference is exceeded, the calibration will not be allowed and is canceled automatically.

Menu/Setup/Inputs/Channel: Spectrometer/► Extended setup/Calib. settings/► Stability criteria		
Function	Options	Info
Delta temperature	0.10 to 2.00 K <b>Factory setting</b> 0.50 K	Permitted temperature fluctuation during calibration
Duration	5 to 100 s <b>Factory setting</b> 10 s	Timeframe within which the permitted measured value variation may not be exceeded

*Calibration monitoring*


Menu/Setup/Inputs/Channel: Spectrometer/► Extended setup/Calib. settings/► Calib. expiration time		
Function	Options	Info
Warning limit	1 to 51 weeks <b>Factory setting</b> 48 weeks	Warning and alarm limits mutually influence each other's adjustment range. General rule: Alarm limit > warning limit. ► Select warning and alarm limits that match your process.
Alarm limit	49 to 104 weeks <b>Factory setting</b> 52 weeks	


*Diagnostic settings**Operating hours limit values*

Menu/Setup/Inputs/Spectrometer/Extended setup/Diagnostics settings/Limits operating hours		
Function	Options	Info
Function	<b>Selection</b> ■ Off ■ On  <b>Factory setting</b> Off	
► Operating time	0 to 60 000 h	The total operating time of the process spectrometer and its use under extreme conditions is monitored. If the operating time exceeds the defined threshold values, the device issues a corresponding diagnostics message.
► Operation < -20 °C	<b>Factory setting</b> 10 000 h	
► Operation > 60 °C		

*Diagnostic behavior*

The list of diagnostic messages displayed depends on the path selected. There are device-specific messages, and messages that depend on what sensor is connected.

Menu/Setup/(General settings or Inputs<Sensor channel>)/Extended setup/Diagnostics settings/Diag. behavior		
Function	Options	Info
List of diagnostic messages		► Select the message to be changed. Only then is it possible to make the settings for this message.
Diag. code	Read only	
Diagnostic message	<b>Selection</b> ■ On ■ Off <b>Factory setting</b> Depends on the message	Deactivate the diagnostic message or activate it again. Deactivating means: ■ No error message in the measuring mode ■ No failure current at the current output
Failure current	<b>Selection</b> ■ On ■ Off <b>Factory setting</b> Depends on the message	► Decide whether a failure current should be output at the current output if the diagnostic message display is activated.  In the event of general device errors, the failure current is output at all the current outputs. In the event of channel-specific errors, the failure current is only output at the assigned current output.

Menu/Setup/(General settings or Inputs<Sensor channel>)/Extended setup/Diagnostics settings/Diag. behavior		
Function	Options	Info
Status signal	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Maintenance (M)</li> <li>■ Out of specification (S)</li> <li>■ Function check (C)</li> <li>■ Failure (F)</li> </ul> <b>Factory setting</b> Depends on the message	The messages are divided into different error categories in accordance with NAMUR NE 107. <ul style="list-style-type: none"> <li>► Decide whether a status signal assignment should be changed for the application.</li> </ul>
Diag. output	<b>Selection</b> <ul style="list-style-type: none"> <li>■ None</li> <li>■ Alarm relay</li> <li>■ Binary output</li> <li>■ Relay 1 to n (depends on the device version)</li> </ul> <b>Factory setting</b> None	Select an output to which the diagnostic message should be assigned.  A relay output must first be configured for <b>Diagnostics</b> before it is possible to assign the message to an output. <b>(Menu/Setup/Outputs: Assign the Diagnostics function and set Operating mode to as assigned.)</b>
 Alarm relays are available, depending on the device version.		
Cleaning program (for sensors)	<b>Selection</b> <ul style="list-style-type: none"> <li>■ None</li> <li>■ Cleaning 1</li> <li>■ Cleaning 2</li> <li>■ Cleaning 3</li> <li>■ Cleaning 4</li> </ul> <b>Factory setting</b> None	<ul style="list-style-type: none"> <li>► Decide whether the diagnostic message should trigger a cleaning program.</li> </ul> The cleaning programs can be defined under: <b>Menu/Setup/Additional functions/Cleaning.</b>
Detail information	Read only	Additional information on the diagnostic message and instructions on how to resolve the problem.

### Spectrum

Menu/Setup/Inputs/Spectrometer/Extended setup/Spectrum		
Function	Options	Info
Spectrum	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Intensity</li> <li>■ Absorption</li> <li>■ Reference</li> </ul> <b>Factory setting</b> Absorption	Determines the type of spectrum display and spectrum storage
Logging	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> On	<ul style="list-style-type: none"> <li>► For specifying whether or not a spectrum should be written to the SD card for each measurement period configured.</li> </ul>
Dspl. spctr. lower limit	190 to 1000 nm  <b>Factory setting</b> 350 nm	Configures the spectrum limits for the spectrum shown
Dspl. spctr. upper limit	350 to 1000 nm  <b>Factory setting</b> 1000 nm	

*Tag check*

This function is used to specify which sensors are accepted at the device.

Menu/Setup/Inputs/Channel: Sensor type/Extended setup/► Tag control		
Function	Options	Info
Operating mode	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Tag</li> <li>■ Group</li> </ul> <b>Factory setting</b> Off	<b>Off</b> No tag control, all sensors are accepted.  <b>Tag</b> Only sensors with the same tag name are accepted.  <b>Group</b> Only sensors in the same tag group are accepted.
Tag	User-defined text  <b>Factory setting</b> EH_CM44P_	Enter the tag name. The controller checks every sensor to be connected as to whether this sensor belongs to the measuring point, and only accepts the sensors that have the same name.
Group	Numerical  <b>Factory setting</b> 0	

*Sensor change***Menu/Setup/Inputs/Channel: Sensor type/Extended setup/Sensor change**

- On  
When the sensor is replaced, the last measured value is retained via the "hold" function.  
A diagnostics message is not triggered.
- Off  
When the sensor is replaced, the last measured value is not retained and triggers a diagnostics message.

*Sensor factory setting*

Here you can restore the sensor factory settings.

**Menu/Setup/Inputs/Channel: Sensor type/Extended setup**

1. ► **Factory default sensor**
2. Respond to prompt: **OK** when the prompt for the device software appears.
  - ↳ Only the factory settings for the sensor are restored. The settings for the input remain unchanged.

### 10.3.2 Current inputs

The input can be used as the data source for limit switches and logbooks, for example. Furthermore, external values can be made available as set points for controllers.

Menu/Setup/Inputs/Current input x:y <sup>1)</sup>		
Function	Options	Info
Mode	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ 0 - 20mA</li> <li>■ 4 - 20mA</li> </ul> <b>Factory setting</b> 4 - 20mA	<ul style="list-style-type: none"> <li>▶ Select the same current range as in the data source (connected device).</li> </ul>
Input variable	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Flow rate</li> <li>■ Parameter</li> <li>■ Current</li> </ul> <b>Factory setting</b> Current	<ul style="list-style-type: none"> <li>▶ Select the input variable.</li> </ul>
Meas. value format	<b>Selection</b> <ul style="list-style-type: none"> <li>■ #</li> <li>■ #.#</li> <li>■ #.##</li> <li>■ #.###</li> </ul> <b>Factory setting</b> #.#	<ul style="list-style-type: none"> <li>▶ Specify the number of decimal places.</li> </ul>
Parameter name <b>Input variable = Parameter</b>	Customized text, 16 characters	<ul style="list-style-type: none"> <li>▶ Assign a useful name, e.g. the parameter name that the data source also uses.</li> </ul>
Unit of measure <b>Input variable = Parameter</b>	Customized text, 16 characters	You cannot choose the unit from a list. If you want to use a unit, you must enter it here as customized text.
Lower range value <b>Input variable = Parameter</b>	-20.0 ... <b>Upper range value</b> <unit of measure> <b>Factory setting</b> 0.0 <engineering unit>	<ul style="list-style-type: none"> <li>▶ Enter the measuring range. The lower and upper range values are assigned to the 0 or 4 mA value and the 20 mA value respectively. The system uses the engineering unit which you entered beforehand.</li> </ul>
Upper range value <b>Input variable = Parameter</b>	<b>Lower range value</b> to 10000.0 <engineering unit> <b>Factory setting</b> 10.0 <engineering unit>	
Damping	0 to 60 s <b>Factory setting</b> 0 s	The damping causes a floating average curve of the measured values over the time specified.

1) x:y = slot no. : input number

## 10.4 Outputs


### 10.4.1 Current outputs

The basic version of the device always has two current outputs.

You can configure additional current outputs with extension modules.

#### Setting the current output range

- ▶ **Menu/Setup/General settings: 0..20 mA or 4..20 mA.**

Menu/Setup/Outputs/Current output x:y <sup>1)</sup>		
Function	Options	Info
Current output	<b>Selection</b> <ul style="list-style-type: none"> <li>Off</li> <li>On</li> </ul> <b>Factory setting</b> Off	Use this function to activate or deactivate a variable being output at the current output
Source of data	<b>Selection</b> <ul style="list-style-type: none"> <li>None</li> <li>Connected inputs</li> <li>Controller</li> </ul> <b>Factory setting</b> None	The sources of data on offer depend on your device version. The all the sensors and controllers connected to inputs are available for selection.
Measured value	<b>Selection</b> <ul style="list-style-type: none"> <li>None</li> <li>Depends on the <b>Source of data</b></li> </ul> <b>Factory setting</b> None	The measured value you can select depends on the option selected under <b>Source of data</b> .
 The list of dependent measured values is provided in the <b>Measured value table</b> , <i>subject to the Source of data</i> → 84. Apart from measured values from connected sensors, you can also select a controller as the data source. The best way to do so is by using the <b>Additional functions</b> menu. Here, you can select and configure the current output for outputting the controlled variable.		
Range lower value	Range of adjustment and factory settings depend on the <b>Measured value</b>	You can output the entire measuring range or just some of it at the current output. To do so, specify the upper and lower range values in accordance with your requirements.
Range upper value		
Hold behavior	<b>Selection</b> <ul style="list-style-type: none"> <li>Freeze last value</li> <li>Fixed value</li> <li>Ignore</li> </ul> <b>Factory setting</b> Depends on the channel:output	<b>Freeze last value</b> The device freezes the last current value.  <b>Fixed value</b> You define a fixed current value that is output at the output.  <b>Ignore</b> A hold does not affect this current output.
Hold current <b>Hold behavior = Fixed value</b>	0.0 to 23.0 mA  <b>Factory setting</b> 22.0 mA	► Specify which current should be output at this current output in the hold state.

1) x:y = slot:output number

### Measured value depending on the Source of data

Source of data	Measured value
Spectrometer	<b>Selection</b> <ul style="list-style-type: none"> <li>L*</li> <li>a*</li> <li>b*</li> <li>Temperature</li> </ul>
pH Glass	<b>Selection</b> <ul style="list-style-type: none"> <li>Raw value mV</li> <li>pH</li> <li>Temperature</li> </ul>
pH ISFET	
ORP	<b>Selection</b> <ul style="list-style-type: none"> <li>Temperature</li> <li>ORP mV</li> <li>ORP %</li> </ul>



Source of data	Measured value
Oxygen (amp.)	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Temperature</li> <li>■ Partial pressure</li> <li>■ Concentration liquid</li> <li>■ Saturation</li> <li>■ Raw value nA (only <b>Oxygen (amp.)</b>)</li> <li>■ Raw value µs (only <b>Oxygen (opt.)</b>)</li> </ul>
Oxygen (opt.)	
Cond i	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Temperature</li> <li>■ Conductivity</li> <li>■ Resistance (only <b>Cond c</b>)</li> <li>■ Concentration (only <b>Cond i and Cond c 4-pol</b>)</li> </ul>
Cond c	
Cond c 4-pol	
Disinfection	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Temperature</li> <li>■ Sensor current</li> <li>■ Concentration</li> </ul>
ISE	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Temperature</li> <li>■ pH</li> <li>■ Ammonium</li> <li>■ Nitrate</li> <li>■ Potassium</li> <li>■ Chloride</li> </ul>
TU/TS	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Temperature</li> <li>■ Turbidity g/l (only <b>TU/TS</b>)</li> <li>■ Turbidity FNU (only <b>TU/TS</b>)</li> <li>■ Turbidity Formazine (only <b>TU</b>)</li> <li>■ Turbidity solid (only <b>TU</b>)</li> </ul>
TU	
Nitrate	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Temperature</li> <li>■ NO3</li> <li>■ NO3-N</li> </ul>
Ultrasonic interface	<b>Selection</b> Interface
SAC	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Temperature</li> <li>■ SAC</li> <li>■ Transm.</li> <li>■ Absorption</li> <li>■ COD</li> <li>■ BOD</li> </ul>
Controller 1	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Bipolar (only for current outputs)</li> <li>■ Unipolar+</li> <li>■ Unipolar-</li> </ul>
Controller 2	
Mathematical functions	All the mathematical functions can also be used as a data source and the calculated value can be used as the measured value.

**Outputting the controller manipulated variable via the current output**

**Unipolar+** Assign to the output to which an actuator that can increase the measured value is connected. **Unipolar-** Assign to the output to which an actuator that can decrease the measured value is connected.

To output the manipulated variable of a two-sided controller, positive manipulated variables and negative manipulated variables generally have to be output to different actuators, as most actuators are able to influence the process in one direction only (not in both). For this purpose, the instrument splits the bipolar manipulated variable y into two unipolar manipulated variables, y+ and y-. Only the two unipolar manipulated variable parts are available for selection for outputting to modulated relays. If outputting the values via a current output, you also have the possibility of outputting the bipolar manipulated variable y to one current output only (split range).

**10.4.2 Alarm relay and optional relays**

The basic version of the device always has one alarm relay. Additional relays are also available depending on the version of the device.


**The following functions can be output via a relay:**

- Limit switch status
- Controller manipulated variable for controlling an actuator
- Diagnostic messages
- Status of a cleaning function in order to control a pump or a valve

 You can assign a relay to multiple inputs in order to clean several sensors with just one cleaning unit, for example.


Menu/Setup/Outputs/Alarm relay or relay at channel no.		
Function	Options	Info
Function	<p><b>Selection</b></p> <ul style="list-style-type: none"><li>■ Off</li><li>■ Limit switch</li><li>■ Controller</li><li>■ Diagnostics</li><li>■ Cleaning (sensor)</li><li>■ Formula (sensor)</li><li>■ Device status signal</li></ul> <p><b>Factory setting</b></p> <ul style="list-style-type: none"><li>■ Alarm relays: Diagnostics</li><li>■ Other relays: Off</li></ul>	<p>The following functions depend on the option selected. These versions are illustrated individually in the following sections to provide a clearer understanding of the options.</p> <p><b>Function = Off</b> Switches off the relay function and means no further settings are required.</p>

### Outputting the status of a limit switch


Function = Limit switch		
Function	Options	Info
Source of data	<b>Selection</b> Limit switch 1 ... 8  <b>Factory setting</b> None	Select the limit switch via which the status of the relay is to be output.  The limit switches are configured in the menu: <b>Setup/Additional functions/Limit switches</b> .   Use the <b>ALL</b> and <b>NONE</b> soft keys to select or deselect all the limit switches in one go.
Hold behavior	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Freeze last value</li> <li>■ Fixed value</li> <li>■ Ignore</li> </ul> <b>Factory setting</b> Ignore	

### Outputting the manipulated variable of a controller

To output a controller manipulated variable via a relay, the relay is modulated. The relay is energized (pulse,  $t_1$ ) and is then de-energized (interval,  $t_0$ ).


Function = Controller		
Function	Options	Info
Source of data	<b>Selection</b> <ul style="list-style-type: none"> <li>■ None</li> <li>■ Controller 1</li> <li>■ Controller 2</li> </ul> <b>Factory setting</b> None	 Select the controller that should act as the data source.
Operating mode	<b>Selection</b> <ul style="list-style-type: none"> <li>■ PWM</li> <li>■ PFM</li> </ul> <b>Factory setting</b> PWM	PWM=pulse width modulation PFM=pulse frequency modulation

1. **PWM** (pulse width modulation):  
The duty cycle is varied within a period **T** ( $T=t_1+t_0$ ). The cycle duration remains constant.

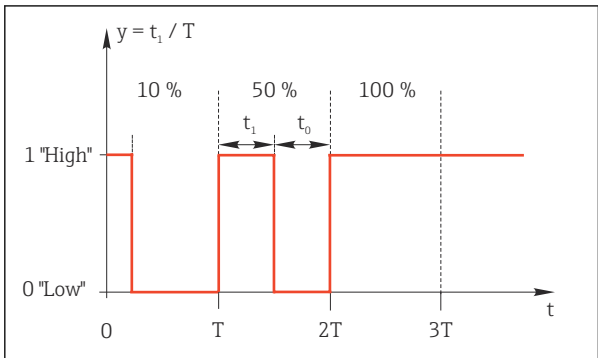

85 Typical application: solenoid valve

2. **PFM** (pulse frequency modulation):  
Here, pulses of a constant length ( $t_1$ ) are output and the interval between the pulses varies ( $t_0$ ). At a maximum frequency,  $t_1 = t_0$ .

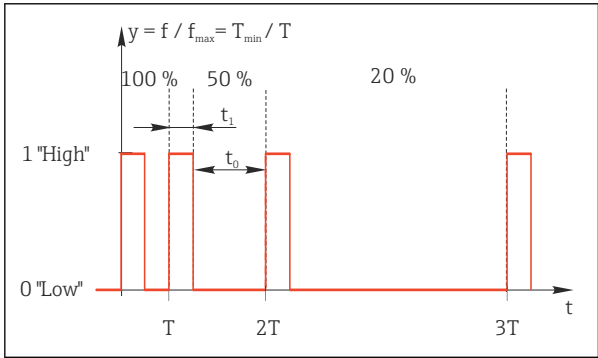

86 Typical application: dosing pump

Function = Controller		
Function	Options	Info
Actuator type	<b>Selection</b> <ul style="list-style-type: none"><li>None</li><li>Unipolar(-)</li><li>Unipolar(+)</li></ul> <b>Factory setting</b> None	Here you specify what part of the controller should power the relay. <b>Unipolar(+)</b> is the part of the manipulated variable which the controller uses to increase the process value (e.g. for heating purposes). Alternatively, select <b>Unipolar(-)</b> if you are connecting an actuator to the relay that reduces the controlled variable (e.g. for cooling purposes).
Cycle duration <b>Operating mode = PWM</b>	<b>Shortest turn-on time</b> to 999.0 s <b>Factory setting</b> 10.0 s	► Specify the cycle duration within which the duty cycle should be varied (only PWM).
<b>i</b> The settings for <b>Cycle duration</b> and <b>Shortest turn-on time</b> influence one another. The following applies: <b>Cycle duration ≥ Shortest turn-on time.</b>		
Shortest turn-on time <b>Operating mode = PWM</b>	0.3 s to <b>Cycle duration</b> <b>Factory setting</b> 0.3 s	Pulses that are shorter than this limit value are not output in order to conserve the actuator.

Function = Controller		
Function	Options	Info
Maximum frequency <b>Operating mode = PFM</b>	1 to 180 min <sup>-1</sup> <b>Factory setting</b> 60 min <sup>-1</sup>	Maximum number of pulses per minute The controller calculates the pulse duration based on this setting.
Hold behavior	<b>Selection</b> <ul style="list-style-type: none"> <li>Freeze last value</li> <li>Fixed value</li> <li>Ignore</li> </ul> <b>Factory setting</b> Ignore	

### Outputting diagnostic messages via the relay

If a relay is defined as a diagnostic relay (**Function = Diagnostics**), it operates in "**Fail-safe mode**".

This means that the relay is always energized ("normally closed", n.c.) in the basic state if an error is not present. This enables it to also indicate a voltage drop, for example. The alarm relay always works in the failsafe mode.

You can output two categories of diagnostic messages via the relay:

- Diagnostic messages from one of the four NAMUR classes → 136
- Diagnostic messages which you have individually assigned to the relay output

A message is individually assigned to the relay output at 2 specific points in the menu:

- Menu/Setup/General settings/Extended setup/Diagnostics settings/Diag. behavior** (device-specific messages)
- Menu/Setup/Inputs/<Sensor>/Extended setup/Diagnostics settings/Diag. behavior** (sensor-specific messages)



Before you can assign a special message to the relay output in **Diag. behavior**, you need to set **Outputs/relay x:y** or **/Alarm relay/Function = Diagnostics**.

Function = Diagnostics		
Function	Options	Info
Operating mode	<b>Selection</b> <ul style="list-style-type: none"> <li>as assigned</li> <li>NAMUR M</li> <li>NAMUR S</li> <li>NAMUR C</li> <li>NAMUR F</li> </ul> <b>Factory setting</b> <ul style="list-style-type: none"> <li>Relay: as assigned</li> <li>Alarm relays: NAMUR F</li> </ul>	<b>as assigned</b> If this option is selected, the diagnostic messages which you have individually assigned to the relay are output via the relay.  <b>NAMUR M ... NAMUR F</b> If you decided to use one of the NAMUR classes, all the messages that are assigned to the individual class are output via the relay. You can also change the NAMUR class assignment for every diagnostic message. (Menu/Setup/General settings/Extended setup/Diagnostics settings/Diag. behavior or Menu/Setup/Inputs/<Sensor>/Extended setup/Diagnostics settings/Diag. behavior)
Attributed diagnostic messages <b>Operating mode = as assigned</b>	Read only	All the messages assigned to the relay output appear on the display. You do not have the option of editing the information here.

### Outputting diagnosis messages from the CYA27 assembly

Function = Device status signal		
Function	Options	Info
Operating mode	<b>Selection</b> <ul style="list-style-type: none"> <li>■ OK</li> <li>■ NAMUR M</li> <li>■ NAMUR S</li> <li>■ NAMUR C</li> <li>■ NAMUR F</li> </ul> <b>Factory setting</b> All disabled	The function allows the status signals of the CYA27 assembly to be output via a relay. Several signals can be output in parallel during this process.


### Outputting the status of a cleaning function

Function = Cleaning		
Function	Options	Info
Assignments	<b>Selection</b> <ul style="list-style-type: none"> <li>■ None</li> <li>■ Depends on the type of cleaning</li> </ul> <b>Factory setting</b> None	<p>Here you can specify how a cleaning function should be displayed for the relay.</p> <p>You have the following options depending on the cleaning program that is selected (<b>Menu/Setup/Additional functions/Cleaning</b>):</p> <ul style="list-style-type: none"> <li>■ <b>Cleaning type = Standard clean</b> Cleaning 1 - Water, Cleaning 2 - Water, Cleaning 3 - Water, Cleaning 4 - Water</li> <li>■ <b>Cleaning type = Chemoclean</b> Cleaning 1 - Water, Cleaning 1 - Cleaner, Cleaning 2 - Water, Cleaning 2 - Cleaner, Cleaning 3 - Water, Cleaning 3 - Cleaner, Cleaning 4 - Water, Cleaning 4 - Cleaner</li> <li>■ <b>Cleaning type = Chemoclean Plus</b> 4x Cleaning 1 - %OV, 4x Cleaning 2 - %OV<sup>1)</sup></li> </ul>
Hold behavior	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Freeze last value</li> <li>■ Fixed value</li> <li>■ Ignore</li> </ul> <b>Factory setting</b> Ignore	<p><b>Freeze last value</b> The device freezes the last measured value.</p> <p><b>Fixed value</b> You define a fixed measured value that is output at the output.</p> <p><b>Ignore</b> A hold has no effect.</p>

- 1) %OV is variable text which you can assign in **Menu/Setup/Additional functions/Cleaning/Chemoclean Plus/Output label 1 ... 4**.

### Formula


Function = Controller		
Function	Options	Info
Operating mode	<b>Selection</b> <ul style="list-style-type: none"> <li>■ PWM</li> <li>■ PFM</li> </ul> <b>Factory setting</b> PWM	PWM=pulse width modulation PFM=pulse frequency modulation → 88
Source of data	<b>Selection</b> <ul style="list-style-type: none"> <li>■ List of available formulas</li> <li>■ Maximum of 8 formulas</li> </ul>	Mathematical functions of type Formula must be available. <ul style="list-style-type: none"> <li>► Select the formula which is to serve as a data source.</li> </ul>
Range lower value	0 to 9999	

Function = Controller		
Function	Options	Info
Range upper value	<b>Range lower value</b> to 9999	
Cycle duration <b>Operating mode = PWM</b>	<b>Shortest turn-on time</b> to 999.0 s <b>Factory setting</b> 10.0 s	► Specify the cycle duration within which the duty cycle should be varied (only PWM).
 The settings for <b>Cycle duration</b> and <b>Shortest turn-on time</b> affect one another. The following applies: <b>Cycle duration</b> ≥ <b>Shortest turn-on time</b> .		
Shortest turn-on time <b>Operating mode = PWM</b>	0.3 s to <b>Cycle duration</b> <b>Factory setting</b> 0.3 s	Pulses that are shorter than this limit value are not output in order to conserve the actuator.
Maximum frequency <b>Operating mode = PFM</b>	1 to 180 min <sup>-1</sup> <b>Factory setting</b> 60 min <sup>-1</sup>	Maximum number of pulses per minute The controller calculates the pulse duration based on this setting.
Hold behavior	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Freeze last value</li> <li>■ Fixed value</li> <li>■ Ignore</li> </ul> <b>Factory setting</b> Ignore	


### 10.4.3 HART

Specify which device variables should be output via HART communication.

You can define a maximum of 16 device variables.

1. Specify the data source.  
↳ You can choose from sensor inputs and controllers.
2. Select the measured value to be output.
3. Specify the behavior in "Hold" status. (Configuration options of **Source of data**, **Measured value** and **Hold behavior**) →  84

Please note that if you select **Hold behavior** = **Freeze**, the system not only flags the status but also actually "freezes" the measured value.

 More information is provided in:


Operating Instructions "HART Communication", BA00486C

### 10.4.4 PROFIBUS DP and PROFINET

#### Device variables (device → PROFIBUS/PROFINET)

Here you can specify which process values should be mapped to the PROFIBUS function blocks and are thereby available for transmission via PROFIBUS communication.

You can define a maximum of 16 device variables (AI Blocks).

1. Define the data source.  
↳ You can choose from sensor inputs, current inputs and mathematical functions.
2. Choose the measured value to be transmitted.
3. Define how the device should behave in the hold state. (Configuration options of **Source of data**, **Measured value** and **Hold behavior**) →  84

Please note that if you select **Hold behavior= Freeze**, the system not only flags the status but also actually "freezes" the measured value.

**In addition**, you can define 8 binary variables (DI Blocks):

1. Define the data source.
2. Select the limit switch or relay whose status is to be transmitted.

#### PROFIBUS/PROFINET variables (PROFIBUS/PROFINET → device)

A maximum of 4 analog (AO) and 8 digital (DO) PROFIBUS variables are available as measured values in the controller, limit switch or current output menus.

Example: Using an AO or DO value as the set point for the controller

#### Menu/Setup/Additional functions/Controller 1

1. In the specified menu, define PROFIBUS as the data source.
2. Select the desired analog output (AO) or digital output (DO) as the measured value.



Further information on "PROFIBUS" can be found in the Guideline for Communication via PROFIBUS, SD01188C



Further information on "PROFINET" can be found in the Guideline for Communication via PROFINET, SD02490C

### 10.4.5 Modbus RS485 and Modbus TCP

Specify which process values should be output via Modbus RS485 Communication or via Modbus TCP.

In the case of Modbus RS485, you can switch between the RTU and the ASCII protocol.

You can define a maximum of 16 device variables.

1. Define the data source.
  - ↳ You can choose from sensor inputs and controllers.
2. Select the measured value to be output.
3. Define how the device should behave in the hold state. (Configuration options of **Source of data, Measured value and Hold behavior**) → 84

Please note that if you select **Hold behavior = Freeze**, the system not only flags the status but also actually "freezes" the measured value.



Further information on "Modbus" can be found in the Guideline for Communication via Modbus, SD01189C

### 10.4.6 Ethernet/IP

Specify which process values should be output via EtherNet/IP communication.

You can define a maximum of 16 analog device variables (AI).

1. Define the data source.
  - ↳ You can choose from sensor inputs and controllers.
2. Select the measured value to be output.
3. Define how the device should behave in the hold state. (Configuration options of **Source of data, Measured value and Hold behavior**) → 84
4. In the case of controllers, also specify the type of manipulated variable.

Please note that if you select **Hold behavior = Freeze**, the system not only flags the status but also actually "freezes" the measured value.



**In addition** you can define digital device variables (DI):


- ▶ Define the data source.
  - ↳ You can choose from relays, binary inputs and limit switches.



For further information on "EtherNet/IP", see the Guideline for Communication via EtherNet/IP, SD01293C


## 10.5 Binary inputs and outputs

Hardware options, such as the DIO module with 2 digital inputs and 2 digital outputs or fieldbus module 485DP/485MB enable the following:

- Via a digital input signal
  - measuring range switching for conductivity (upgrade code required, →  76)
  - switching between different calibration datasets in the case of optical sensors
  - external hold
  - a cleaning interval to be triggered
  - PID controller switch-on/switch-off, e.g. via the proximity switch of the CCA250
  - the use of the input as an "analog input" for pulse-frequency modulation (PFM)
- Via a digital output signal
  - diagnostic states, point level switches, or similar states transmitted statically (similar to a relay)
  - the dynamic transmission (comparable to a non-wearing "analog output") of PFM signals, e.g. to control dosing pumps

## 10.5.1 Application examples

### Chlorine regulation with feedforward control

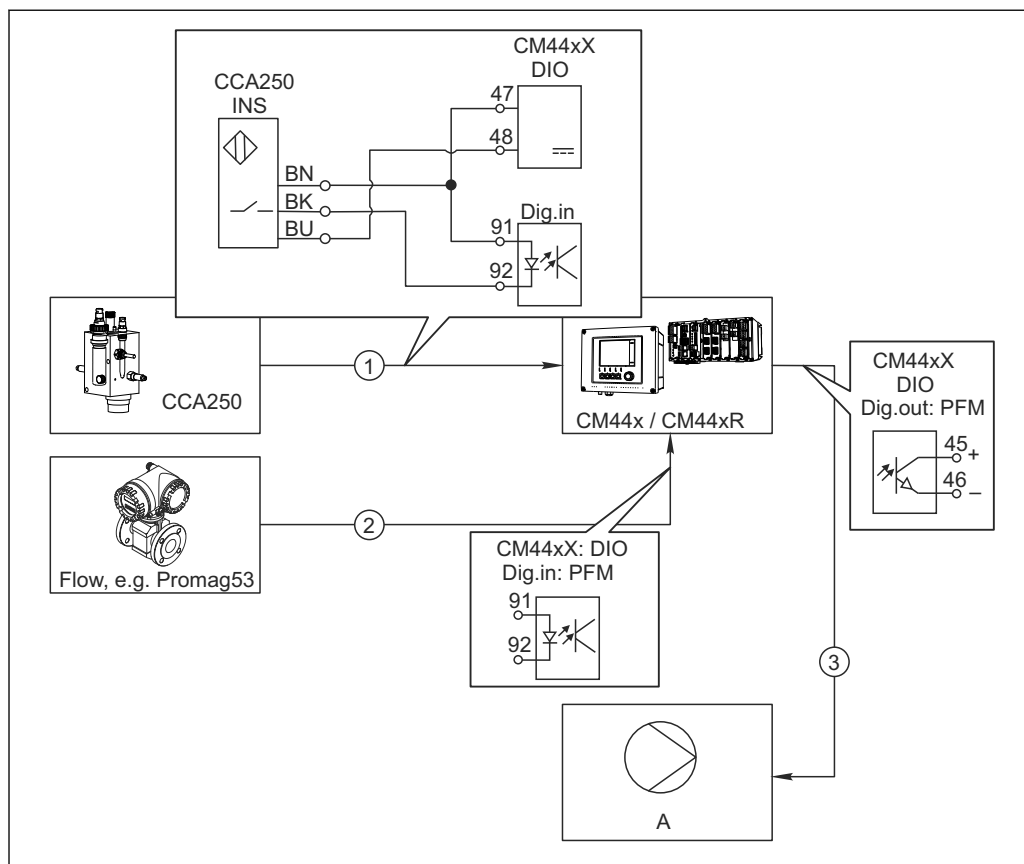

A0028316

87 Example of chlorine control with feedforward control

- 1 Connection of the inductive proximity switch INS of CCA250 to the digital input of the DIO module
- 2 Connection of the signal from a flowmeter to the digital input of the DIO module
- 3 Activation of a (pulse) dosing pump via the digital output of the DIO module
- A Dosing pump

Utilize the advantage of the effectively wear-free control with binary outputs versus a control system with relay. With pulse frequency modulation (PFM), it is possible to achieve virtually continuous dosing using a dosing pump with higher input frequency.

1. Connect the INS proximity switch of the CCA250 assembly to a digital input of the DIO module (e.g. slot 6, port 1).
2. In the software, configure a controller and as the source select the binary input (e.g. **Binary input 1**) to which the proximity switch is connected. (**Menu/Additional functions/Controllers/Controller 1/Controller enable = Binary input 1**)
3. **Signal type:** For the selected input, select the factory setting (**Static signal**).
4. Connect the measured value of a flowmeter to the second input of the DIO module (e.g. slot 6, port 2).
5. **Signal type:** for this input, select **PFM**. (**Menu/Inputs/Binary input 6:2/Signal type = PFM**)
6. **Input variable:** select the corresponding measured value (**Flow rate**).  
 ↳ You can now use the input you have just configured as the disturbance variable for your controller<sup>2)</sup>.


2) An activation code, Order No. 71211288, is necessary for the "feedforward control" function.

7. **Disturbance variable:** in the controller menu, select the binary input to which you have connected the flow measured value. (**Menu/Additional functions/Controllers/Controller 1/Disturbance variable/Source of data = Binary input 6:2 and Measured value = PFM value**)
8. You can activate a dosing pump through PFM via a digital output of the DIO module. Connect the pump to an output of the DIO module (e.g. slot 6, port 1) and select the following settings in the menu: **Menu/Outputs/Binary output 6:1/Signal type = PFM and Source of data = Controller 1.**

Take the direction of action of your dosing into account. Select the correct parameter (**Actuator type = Unipolar+ or Unipolar-**).

You must make additional settings in the controller menu to fully customize the control to suit your process conditions.

### CM44x as the cleaning master

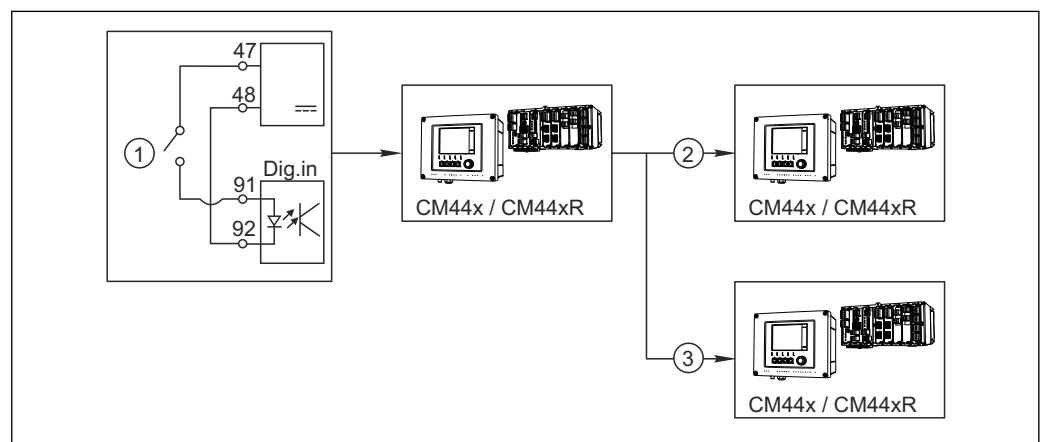

88 Example of a central cleaning control

- 1 External cleaning trigger at the binary input
- 2 Transferring the external hold over binary output to other measuring devices without connected cleaning functions
- 3 Transferring the cleaning trigger over a binary output to other self-cleaning measuring points

1. An external trigger actuates a cleaning operation at the master. A cleaning unit is connected via a relay or a binary output, for example.
2. The cleaning trigger is transferred to another device via a binary output. This does not have its own connected cleaning unit, but its sensors are installed in the medium affected by cleaning the master and are set to hold by the trigger.
3. The trigger is transferred via an additional binary output to another device, whose connected sensors have their own cleaning units. The signal can be used to simultaneously activate a self-cleaning with the master.

## 10.5.2 Binary input configuration

Menu/Setup/Inputs/Binary input x:y <sup>1)</sup>		
Function	Options	Info
Binary input	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> On	Switches the input on/off
Signal type	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Static signal</li> <li>■ PFM</li> </ul> <b>Factory setting</b> Static signal	<p>► Select the signal type.</p> <p><b>Static signal</b> Use this setting to read out the position of, for example, an on/off switch, an inductive proximity switch or a PLC binary output. Signal application: for measuring range switching, acceptance of an external hold, as a cleaning trigger or for controller activation</p> <p><b>PFM</b> The PFM setting produces a pulse-frequency-modulated signal that is subsequently available on the device as a quasi-continuous process value. Example: Measuring signal of a flowmeter</p>
<b>Signal type = Static signal</b>		
Signal level	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Low</li> <li>■ High</li> </ul> <b>Factory setting</b> High	<p>Specifies which input signal levels should activate, for example, measuring range switching or a cleaning.</p> <p><b>Low</b> Input signals between 0 and 5 V DC</p> <p><b>High</b> Input signals between 11 and 30 V DC</p>
<b>Signal type = PFM</b>		
Max. frequency	100.00 to 1000.00 Hz <b>Factory setting</b> 1000.00 Hz	<p>Maximum frequency of the PFM input signal is to equal the maximum possible upper limit of the measuring range.</p> <p>If the value selected is too small, higher frequencies will not be detected. If the value is too large, on the other hand, the resolution for small frequencies will be relatively inexact.</p>
Meas. value format	<b>Selection</b> <ul style="list-style-type: none"> <li>■ #</li> <li>■ #.#</li> <li>■ #.##</li> <li>■ #.###</li> </ul> <b>Factory setting</b> #.#	<p>► Specify the number of decimal places.</p>

Menu/Setup/Inputs/Binary input x:y <sup>1)</sup>		
Function	Options	Info
Input variable	<b>Selection</b> <ul style="list-style-type: none"> <li>Frequency</li> <li>Parameter</li> <li>Flow rate</li> </ul> <b>Factory setting</b> Frequency	<b>Frequency</b> Display in Hz in the measuring menu <b>Parameter</b> You subsequently determine the parameter name and unit. These are then displayed in the measuring menu. <b>Flow rate</b> For connecting a flowmeter
Parameter name <b>Input variable = Parameter</b>	Customized text, 16 characters	► Define a name for the parameter, e.g. "Pressure".
Unit of measure <b>Input variable = Parameter</b>	Customized text, 16 characters	► Specify the unit for your parameter, e.g. "hPa".
Flow rate unit <b>Input variable = Flow rate</b>	<b>Selection</b> <ul style="list-style-type: none"> <li>l/s</li> <li>l/h</li> <li>m<sup>3</sup>/s</li> <li>m<sup>3</sup>/h</li> <li>cfs</li> <li>cfh</li> <li>mgd</li> </ul> <b>Factory setting</b> l/s	► Define the unit for the flow. <b>cfs</b> = cubic feet per second <b>cfh</b> = cubic feet per hour <b>mgd</b> = mega gallon per day
Lower range value <b>Input variable = Parameter or Flow rate</b>	-2000.00 to 0.00 <b>Factory setting</b> 0.00	The start of measuring range corresponds to a frequency of 0 Hz. Your previously defined unit is additionally displayed.
Upper range value <b>Input variable = Parameter or Flow rate</b>	0.00 to 10000.00 <b>Factory setting</b> 0.00	The end of measuring range corresponds to the maximum frequency defined above. Your previously defined unit is additionally displayed.
Damping	0 to 60 s <b>Factory setting</b> 0 s	The damping causes a floating average curve of the measured values over the time specified.

1) x:y = slot no. : input number

### 10.5.3 Configuration of binary outputs

Menu/Setup/Outputs/Binary output x:y <sup>1)</sup>		
Function	Options	Info
Binary output	<b>Selection</b> <ul style="list-style-type: none"> <li>Off</li> <li>On</li> </ul> <b>Factory setting</b> On	Switches the output on/off
Signal type	<b>Selection</b> <ul style="list-style-type: none"> <li>Static signal</li> <li>PFM</li> </ul> <b>Factory setting</b> Static signal	► Select the signal type. <b>Static signal</b> Comparable to a relay: output of a diagnostic status or a limit switch <b>PFM</b> You can output a measured value, e.g. the chlorine value or the manipulated variable of a controller. It functions as a "wear-free" switching contact that can be used to control a dosing pump, for example.

Menu/Setup/Outputs/Binary output x:y <sup>1)</sup>		
Function	Options	Info
<b>Signal type = Static signal</b>		
Function	<b>Selection</b> <ul style="list-style-type: none"> <li>None</li> <li>Limit switches</li> <li>Diagnostics message</li> <li>Cleaning</li> </ul> <b>Factory setting</b> None	Source for the outputted switching state The following functions depend on the option selected. <b>Function = None</b> switches off the function. There are no other settings.
Assignments <b>Function = Cleaning</b>	<b>Multiple selection</b> <ul style="list-style-type: none"> <li>Cleaning 1 - Water ...</li> <li>Cleaning 4 - Cleaner</li> </ul>	Here you can decide which binary outputs should be used for activating the valves and pumps. Here you specifically assign a control signal to the binary output for the cleaner/water dosing of a cleaning program. You can define cleaning programs under: <b>Menu/Setup/Additional functions/Cleaning</b> .
Data sources <b>Function = Limit switches</b>	<b>Multiple selection</b> Limit switch 1 ... 8	<ul style="list-style-type: none"> <li>Select the limit switches that should be output via the binary output.</li> </ul> Configuration of the limit switches: <b>Menu/Setup/Additional functions/Limit switches</b> .
Operating mode <b>Function = Diagnostics message</b>	<b>Selection</b> <ul style="list-style-type: none"> <li>as assigned</li> <li>NAMUR M</li> <li>NAMUR S</li> <li>NAMUR C</li> <li>NAMUR F</li> </ul> <b>Factory setting</b> as assigned	<b>as assigned</b> With this selection, the diagnosis messages are transmitted over the binary output that you individually allocated to it. <b>NAMUR M ... F</b> When you choose one of the Namur classes, all messages allocated to that particular class are output. You can change the Namur class assignment for each diagnostic message.
<b>Signal type = PFM</b>		
Max. frequency	1.00 to 1000.00 Hz <b>Factory setting</b> 1000.00 Hz	Maximum frequency of the PFM output signal Is to equal the maximum possible upper limit of the measuring range.
Meas. value format	<b>Selection</b> <ul style="list-style-type: none"> <li>#</li> <li>#. #</li> <li>#. ##</li> <li>#. ###</li> </ul> <b>Factory setting</b> #. ##	<ul style="list-style-type: none"> <li>Specify the number of decimal places.</li> </ul>

Menu/Setup/Outputs/Binary output x:y <sup>1)</sup>		
Function	Options	Info
Source of data	<b>Selection</b> <ul style="list-style-type: none"> <li>None</li> <li>Sensor inputs</li> <li>Binary inputs</li> <li>Controller</li> <li>Fieldbus signals</li> <li>Mathematical functions</li> </ul> <b>Factory setting</b> None	Source whose value should be read out as a frequency via the binary output.
Measuring value <b>Source of data</b> ≠ Controller	<b>Selection</b> Depends on: Source of data	► Choose the measured value which should be output as the frequency via the binary output.
Actuator type <b>Source of data</b> = Controller	<b>Selection</b> <ul style="list-style-type: none"> <li>None</li> <li>Bipolar</li> <li>Unipolar+</li> <li>Unipolar-</li> </ul> <b>Factory setting</b> None	► Determines which part of the controller should control the connected actuators, e.g. the dosing pump.  <b>Bipolar</b> "Split range"  <b>Unipolar+</b> Part of the manipulated variable that the controller uses to increase the process value  <b>Unipolar-</b> For connected actuators that decrease the controlled variable
Hold behavior	<b>Selection</b> <ul style="list-style-type: none"> <li>Freeze</li> <li>Fixed value</li> <li>None</li> </ul> <b>Factory setting</b> None	<b>Freeze</b> The device freezes the last value.  <b>Fixed value</b> You define a fixed current value that is transmitted at the output.  <b>None</b> A hold does not affect this output.
Hold value <b>Hold behavior</b> = Fixed value	0 ... 100 %  <b>Factory setting</b> 0 %	
Error behavior	<b>Selection</b> <ul style="list-style-type: none"> <li>Freeze</li> <li>Fixed value</li> </ul> <b>Factory setting</b> Fixed value	<b>Freeze</b> The device freezes the last value.  <b>Fixed value</b> You define a fixed current value that is transmitted at the output.
Error value <b>Error behavior</b> = Fixed value	0 ... 100 %  <b>Factory setting</b> 0 %	

1) x:y = slot no. : input number

## 10.6 Additional functions

### 10.6.1 Limit switch

There are different ways to configure a limit switch:

- Assigning a switch-on and switch-off point
- Assigning a switch-on and switch-off delay for a relay
- Setting an alarm threshold and also outputting an error message
- Starting a cleaning function

Menu/Setup/Additional functions/Limit switches/Limit switch 1 ... 8		
Function	Options	Info
Source of data	<b>Selection</b> <ul style="list-style-type: none"> <li>None</li> <li>Sensor inputs</li> <li>Binary inputs</li> <li>Controller</li> <li>Fieldbus signals</li> <li>Mathematical functions</li> <li>MRS set 1 ... 2</li> </ul> <b>Factory setting</b> None	<p>► Specify the input or output which is to be the data source for the limit switch.</p> <p>The sources of data on offer depend on your device version.</p> <p>You can choose from connected sensors, binary inputs, fieldbus signals, mathematical functions, controllers and sets for measuring range switching.</p>
Measuring value	<b>Selection</b> Depends on: Source of data	<p>► Select the measured value, see the following table.</p>

### Measured value depending on the Source of data

Source of data	Measured value
Spectrometer	<b>Selection</b> <ul style="list-style-type: none"> <li>L*</li> <li>a*</li> <li>b*</li> <li>Temperature</li> </ul>
pH Glass	<b>Selection</b> <ul style="list-style-type: none"> <li>Raw value mV</li> <li>pH</li> <li>Temperature</li> </ul>
pH ISFET	
ORP	<b>Selection</b> <ul style="list-style-type: none"> <li>Temperature</li> <li>ORP mV</li> <li>ORP %</li> </ul>
Oxygen (amp.)	<b>Selection</b> <ul style="list-style-type: none"> <li>Temperature</li> <li>Partial pressure</li> <li>Concentration liquid</li> <li>Saturation</li> <li>Raw value nA (only <b>Oxygen (amp.)</b>)</li> <li>Raw value µs (only <b>Oxygen (opt.)</b>)</li> </ul>
Oxygen (opt.)	
Cond i	<b>Selection</b> <ul style="list-style-type: none"> <li>Temperature</li> <li>Conductivity</li> <li>Resistance (only <b>Cond c</b>)</li> <li>Concentration (only <b>Cond i</b> and <b>Cond c 4-pol</b>)</li> </ul>
Cond c	
Cond c 4-pol	
Disinfection	<b>Selection</b> <ul style="list-style-type: none"> <li>Temperature</li> <li>Sensor current</li> <li>Concentration</li> </ul>
ISE	<b>Selection</b> <ul style="list-style-type: none"> <li>Temperature</li> <li>pH</li> <li>Ammonium</li> <li>Nitrate</li> <li>Potassium</li> <li>Chloride</li> </ul>





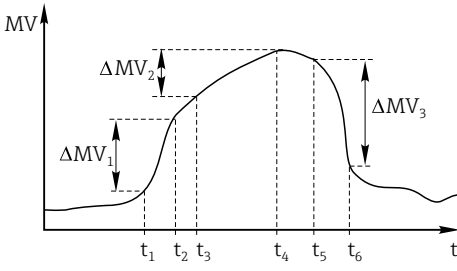

Source of data	Measured value
TU/TS	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Temperature</li> <li>■ Turbidity g/l (only <b>TU/TS</b>)</li> <li>■ Turbidity FNU (only <b>TU/TS</b>)</li> <li>■ Turbidity Formazine (only <b>TU</b>)</li> <li>■ Turbidity solid (only <b>TU</b>)</li> </ul>
TU	
Nitrate	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Temperature</li> <li>■ NO3</li> <li>■ NO3-N</li> </ul>
Ultrasonic interface	<b>Selection</b> Interface
SAC	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Temperature</li> <li>■ SAC</li> <li>■ Transm.</li> <li>■ Absorption</li> <li>■ COD</li> <li>■ BOD</li> </ul>
Controller 1	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Bipolar (only for current outputs)</li> <li>■ Unipolar+</li> <li>■ Unipolar-</li> </ul>
Controller 2	
Mathematical functions	All the mathematical functions can also be used as a data source and the calculated value can be used as the measured value.



You can monitor the manipulated variable by assigning the controller manipulated variable to a limit switch (e. g. configure a dosing time alarm).


Menu/Setup/Additional functions/Limit switches/Limit switch 1 ... 8		
Function	Options	Info
Cleaning program	<b>Selection</b> <ul style="list-style-type: none"> <li>■ None</li> <li>■ Cleaning 1 ... 4</li> </ul> <b>Factory setting</b> None	Use this function to choose which cleaning instance should start when the limit switch is active.
Function	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> Off	Activating/deactivating the limit switch
Operating mode	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Above limit check</li> <li>■ Below limit check</li> <li>■ In range check</li> <li>■ Out of range check</li> <li>■ Change rate</li> </ul> <b>Factory setting</b> Above limit check	Type of limit value monitoring: <ul style="list-style-type: none"> <li>■ Limit value overshoot or undershoot →  89</li> <li>■ Measured value within or outside a range →  90</li> <li>■ Rate of change →  92</li> </ul>

A0028523

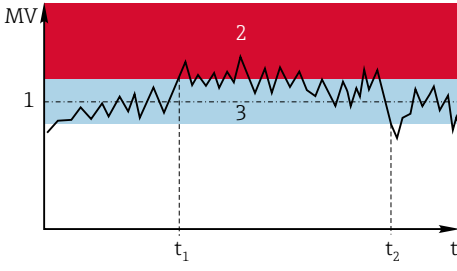Menu/Setup/Additional functions/Limit switches/Limit switch 1 ... 8		
Function	Options	Info
Hysteresis    91 Hysteresis taking the example of limit value overshoot 1 Limit value 2 Alarm range 3 Hysteresis range $t_{1,2}$ An event is generated	Settings depend on the measured value  0 to 9999 s <b>Factory setting</b> 0 s	<b>Operating mode <math>\neq</math> Change rate</b>  The hysteresis is needed to ensure a stable switching behavior. The device software adds or subtracts the value set here to/from the limit value ( <b>Limit value</b> , <b>Range lower value</b> or <b>Range upper value</b> ). This results in double the <b>Hysteresis</b> value for the hysteresis range around the limit value. An event is then only generated if the measured value (MV) completely passes through the hysteresis range.
Start delay <b>Operating mode <math>\neq</math> Change rate</b>	0 to 9999 s <b>Factory setting</b> 0 s	Synonyms: pick-up and drop-out delay
Switch off delay <b>Operating mode <math>\neq</math> Change rate</b>		
Delta value	Settings depend on the measured value	<b>Operating mode = Change rate</b>  The slope of the measured value (MV) is monitored in this mode. If, in the specified time frame ( <b>Delta time</b> ), the measured value increases or decreases by more than the specified value ( <b>Delta value</b> ), an event is generated. No further event is generated if the value continues to experience such a steep increase or decrease. If the slope is back below the limit value, the alarm status is reset after a preset time ( <b>Auto confirm</b> ).  Events are triggered by the following conditions in the example given: $t_2 - t_1 < \text{Delta time}$ and $\Delta MV_1 > \text{Delta value}$ $t_4 - t_3 > \text{Auto confirm}$ and $\Delta MV_2 < \text{Delta value}$ $t_6 - t_5 < \text{Delta time}$ and $\Delta MV_3 > \text{Delta value}$
Delta time	00:00:01 ... 23:59:00 <b>Factory setting</b> 01:00:00	
Auto confirm	00:01 to 23:59 <b>Factory setting</b> 00:01	
  92 Rate of change		

### 10.6.2 Time switch

A time switch provides a time-controlled, binary process value. This can be used as a source by the "Formula" mathematical function.

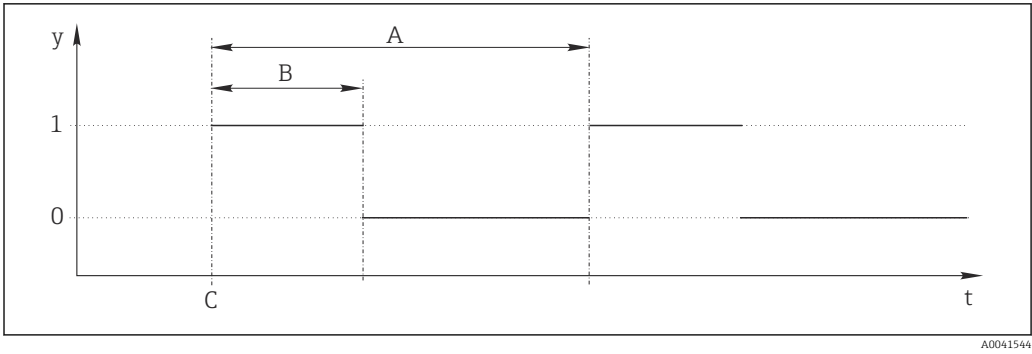


93 Signal pattern of a time switch

- t Timeline
- y Signal level (1 = on, 0 = off)
- A Period
- B Signal duration
- C Start time (Start date, Start time)

Menu/Setup/Additional functions/Time switches/ Time switch 1 ... 8		
Function	Options	Info
Function	<b>Selection</b> <ul style="list-style-type: none"> <li>On</li> <li>Off</li> </ul> <b>Factory setting</b> Off	Switches the function on or off
Start date	01.01.2000 to 31.12.2099 <b>Format</b> DD.MM.YYYY	► Enter start date
Start time	00:00:00 to 23:59:59 <b>Format</b> hh.mm.ss	► Enter start time
Signal duration	00:00:03 to 2400:00:00 <b>Format</b> hh.mm.ss	Duration of the high signal level at the start of a cycle
Period	00:00:03 to 2400:00:00 <b>Format</b> hh.mm.ss	Duration of a cycle
Signal	Display only	Current process value of the time switch
Next signal date	Display only	Date of the next signal
Next signal time	Display only	Time of the next signal

Example 1: Time-based set point for a temperature controller

The temperature should increase to 21 °C from 08:00 every day, and then to 23 °C for 5 hours from 12:00. The temperature should be controlled to fall back down to 18 °C from 17.00. Two time switches are defined for this purpose which are used in a **MF1: Formula** mathematical function. Using the mathematical function, an analog temperature set point is thus available for a controller.

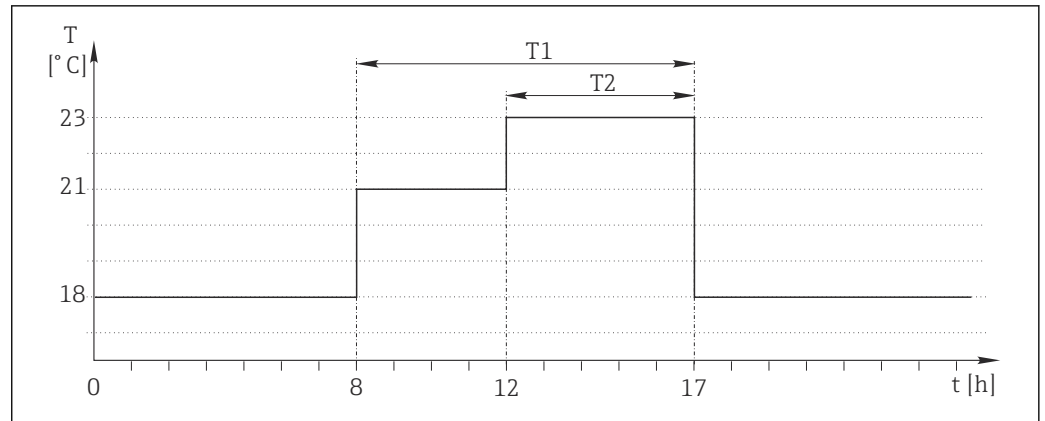

A0041704

#### 94 Time-based temperature control

##### 1. Program **Time switch 1** (T1):

- **Start date** = 01.01.2020
- **Start time** = 08:00:00
- **Signal duration** = 09:00:00
- **Period** = 24:00:00

##### 2. Define **Time switch 2** (T2):

- **Start date** = 01.01.2020
- **Start time** = 12:00:00
- **Signal duration** = 05:00:00
- **Period** = 24:00:00

##### 3. Create **Formula** mathematical function.

#### Menu/Setup/Additional functions/Mathematical functions

- MF1: Formula
- **Tracking** = On
- **Source A** = Time switch 1
- **Source B** = Time switch 2
- **Formula** =  $18.0 + 3 \cdot \text{NUM}(\text{A}) + 2 \cdot \text{NUM}(\text{B})$

Explanation: NUM converts the logical value to a numerical value and thus enables multiplication.

- $3 \cdot \text{NUM}(\text{A})$  results in the value 3.0 from 08:00 to 17:00 and 0.0 outside of this time period.
- $2 \cdot \text{NUM}(\text{B})$  results in the value 2.0 from 12:00 to 17:00 and 0.0 outside of this time period.

The formula thus yields one of these analog values depending on the time: 18.0, 21.0 or 23.0. This analog value can be used as a set point for a temperature controller.

#### Example 2: Time-based condition

A pump should switch on (via a relay) for 10 minutes every 2 hours. This only applies if the pH value is lower than 4.0.

##### 1. Program **Time switch 1**:

- **Start date** = 01.01.2020
- **Start time** = 00:00:00
- **Signal duration** = 00:10:00
- **Period** = 02:00:00

##### 2. Create **Formula** mathematical function.

### Menu/Setup/Additional functions/Mathematical functions

- MF1: Formula
- Tracking = On
- Source A = Time switch 1
- Source B = pH value of a Memosens pH input
- Formula = A AND (B < 4.0)

3. Use the formula as the data source of a relay.


### Menu/Setup/Outputs/Relay[x:y]

- Function = Formula
- Operating mode = Static signal
- Source of data = MF1: Formula

The formula yields a logical value (TRUE or FALSE) and is thus suitable to trigger a relay directly in the static operating mode. **Time switch 1** provides a TRUE value for 10 minutes every 2 hours but only if the pH value has dropped to below 4 at the same time.

## 10.6.3 Controller

### Controller structure in Laplace representation

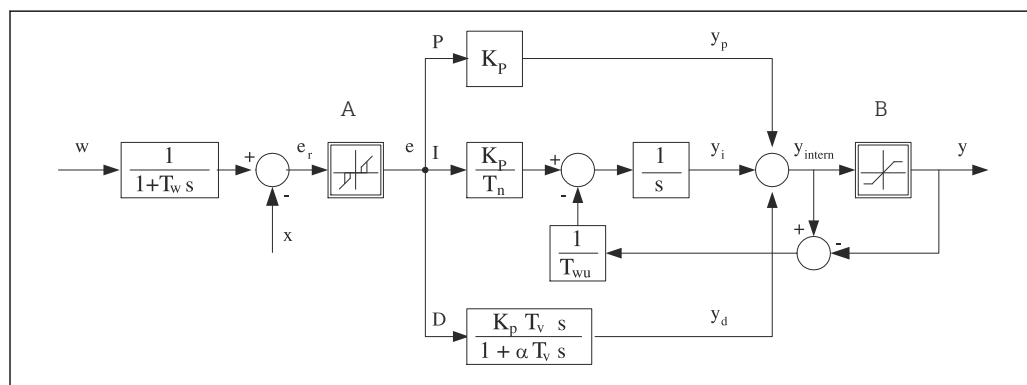

A0015007

95 Block diagram of the controller structure

A	Neutral zone	I	Integral value
B	Output limiting	D	Derivative value
$K_p$	Gain (P-value)	$\alpha T_v$	Damping time constant with $\alpha = 0$ to 1
$T_n$	Integral action time (I-value)	e	Control deviation
$T_v$	Derivative action time (D-value)	w	Set point
$T_w$	Time constant for set point damping	x	Controlled variable
$T_{wu}$	Time constant for anti-windup feedback	y	Manipulated variable
P	Proportional value		

The controller structure of the device comprises set point damping at the input to prevent erratic changes in the manipulated variable if the set point changes. The difference between the set point w and the controlled variable (measured value) X results in the control deviation which is filtered by a neutral zone.

The neutral zone is used to suppress control deviations (e) that are too small. The control deviation thus filtered is now fed to the actual PID controller which divides into 3 parts based on the P (proportional), I (integral) and D (derivative) values (top-down). The integral section (middle) also comprises an anti-windup mechanism for limiting the integrator. A low-pass filter is added to the D-section to damp hard D-terms in the manipulated variable. The sum of the 3 sections results in the internal controller manipulated variable which is limited according to the settings (for PID-2s to -100% to +100%).

The graphic does not illustrate a downstream filter for limiting the rate of change of the manipulated variable (can be configured in the menu in **Max y change rate**).




In the menu do not configure the gain  $K_p$ . Instead configure the reciprocal value, the proportional band  $X_p$  ( $K_p = 1/X_p$ ).

### Parameter configuration

Make the following decisions to configure a controller:

- (1) What type of process can your process be assigned to? → **Process type**
- (2) Should it be possible to influence the measured variable (controlled variable) in one direction or in both directions? One-sided or two-sided controller, → **Controller type**
- (3) What should be the controlled variable (sensor, measured value)? → **Controlled variable**
- (4) Do you have a disturbance variable that should be active at the controller output? → **Disturbance variable**
- (5) Specify the parameters for the controller:
  - Set point, → **Setpoint**
  - Neutral zone, → **Xn**
  - Proportional band, → **Xp**
  - Integral action time (I-value), → **Tn**
  - Derivative action time (D-value), → **Tv**
- (6) What should the controller do in the event of a hold (measured error, sensor replacement, cleaning etc.)?
  - Pause or continue with dosing? → **Hold behavior/Manipulated Variable**
  - At the end of a hold, continue or restart the control loop (affects I-value)? → **Hold behavior/State**
- (7) How should the actuator be triggered?
  - **Unipolar+**: assign this setting to the output for an actuator which can increase the measured value.
  - **Unipolar-**: assign this setting to the output for an actuator which can decrease the measured value.
  - **Bipolar**: select this setting if you want to output the manipulated variable via one current output only (split range).
- (8) Configure the outputs and switch on the controller.


Menu/Setup/Additional functions/Controller 1 ... 2		
Function	Options	Info
Control	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Automatic</li> <li>■ Manual mode</li> </ul> <b>Factory setting</b> Off	► First configure the controller and leave the switch at the factory setting ( <b>Off</b> ).  Once you have made all the settings, you can assign the controller to an output and switch it on.
► Manual mode		
y	-100 to 100 % <b>Factory setting</b> 0 %	► Specify the manipulated variable that should be output in manual mode.
y actual output	Read only	Manipulated variable actually output.
Setpoint		Current set point
x		Current measured value
Disturbance variable		Current measured value of disturbance variable
Norm. disturb. value		
Name	Free text	► Give the controller a name so you can identify it later on.

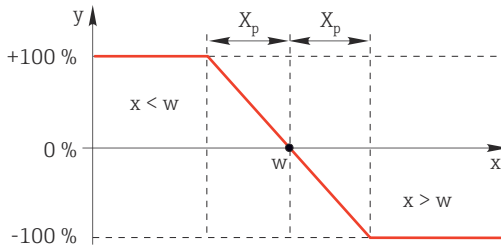
Menu/Setup/Additional functions/Controller 1 ... 2		
Function	Options	Info
Controller enable	<b>Selection</b> <ul style="list-style-type: none"> <li>None</li> <li>Binary inputs</li> <li>Limit switches</li> <li>Fieldbus variables</li> </ul> <b>Factory setting</b> None	In connection with the DIO module, you can select a binary input signal, e. g. from an inductive proximity switch, as a source for enabling the controller.
Setup Level	<b>Selection</b> <ul style="list-style-type: none"> <li>Standard</li> <li>Advanced</li> </ul> <b>Factory setting</b> Standard	Changes the number of parameters that can be configured. → <b>Parameters</b> → 111 <b>Standard:</b> If you choose this, the other controller parameters are active nevertheless. The factory settings are used. These suffice in most cases.
Process type	<b>Selection</b> <ul style="list-style-type: none"> <li>Inline</li> <li>Batch</li> </ul> <b>Factory setting</b> Inline	<p>► Decide what type of process best describes your particular process.</p> <p><b>Batch process</b> The medium is in a closed system. The task of the control system is to dose in such a way that the measured value (controlled variable) changes from its start value to its target value. No more dosing is needed once the set point has been reached and the system is stable. If the target value is overshoot, a two-sided control system can compensate for this. In the case of 2-sided batch control systems, a neutral zone is used/configured to suppress oscillations around the set point.</p> <p><b>In-line process</b> In an in-line process, the control system works with the medium flowing by in the process. Here, the controller has the task of using the manipulated variable to set a mixture ratio between the medium and dosing agent such that the resulting measured variable corresponds to the set point. The properties and volume of the medium flow can change at any time and the controller has to react to these changes on a continuous basis. If the flow rate and medium remain constant, the manipulated variable can also assume a fixed value once the process has settled. Since the control process is never "finished" here, this type of control is also referred to as continuous control.</p> <p><b>i</b> A mixture of both process types can often be found in practice: the semi-batch process. Depending on the ratio between the flow and the container volume, this arrangement behaves either like a batch process or an in-line process.</p>
Controller type	<b>Selection</b> <ul style="list-style-type: none"> <li>PID 1-sided</li> <li>PID 2-sided</li> </ul> <b>Factory setting</b> PID 2-sided	<p>Depending on which actuator you have connected, you influence the process in only one direction (e.g. heating) or in both directions (e. g. heating and cooling).</p> <p>A 2-sided controller can output a manipulated variable in the range from -100 % to +100 %, i. e. the manipulated variable is bipolar. The manipulated variable is positive if the controller should increase the process value. In the case of a pure P-controller, this means that the value of the controlled variable <math>x</math> is smaller than the set point <math>w</math>. On the other hand, the manipulated variable is negative if the process value should be decreased. The value for <math>x</math> is greater than the set point <math>w</math>.</p>  <p><b>96</b> Relationship <math>y = (w-x)/X_p</math></p>




Menu/Setup/Additional functions/Controller 1 ... 2		
Function	Options	Info
Effective direction <b>Controller type = PID 1-sided</b>	<b>Selection</b> <ul style="list-style-type: none"> <li>Direct</li> <li>Reverse</li> </ul> <b>Factory setting</b> Reverse	In what direction should the controller influence the measured value? <ul style="list-style-type: none"> <li>The measured value should increase as a result of dosing (e. g. heating) → <b>Reverse</b></li> <li>The measured value should decrease as a result of dosing (e. g. cooling) → <b>Direct</b></li> </ul>
<p>A 1-sided controller has a unipolar manipulated variable, i. e. it can only influence the process in one direction.</p> <p><b>Reverse:</b> If the controller should increase the process value, set this as the direction of action. The controller becomes active when the process value is too small (range A).</p> <p><b>Direct:</b> With this direction of action, the controller acts as a "downwards controller". It becomes active when the process value (e. g. the temperature) is too high (range B).</p>		
97 Red: overlap between the curves of the two 1-sided controllers.		
► Controlled variable		
Source of data	<b>Selection</b> <ul style="list-style-type: none"> <li>None</li> <li>Sensor inputs</li> <li>Current inputs</li> <li>Fieldbus signals</li> <li>Binary inputs</li> <li>Mathematical functions</li> </ul> <b>Factory setting</b> None	► Specify the input or output which should be the source of data for the controlled variable.
Measured value	<b>Selection</b> Depends on <b>Source of data</b> <b>Factory setting</b> None	► Specify the measured value that should be your controlled variable. You can use different measured values depending on the data source. →  99
► Setpoint		Target value of the controlled variable This menu is not displayed if you selected a fieldbus as the source ( <b>Source of data</b> = fieldbus).
Setpoint	Range of adjustment and factory setting depending on the <b>Source of data</b>	► Specify the target value for the controlled variable.
Tw <b>Setup Level = Advanced</b>	0.0 to 999.9 s <b>Factory setting</b> 2.0 s	Time constant for the set point damping filter
► Disturbance variable		optional, activation code necessary

Menu/Setup/Additional functions/Controller 1 ... 2		
Function	Options	Info
<p>In the case of "flowing medium" (in-line) controls, the flow rate may not be constant. In some circumstances, strong fluctuations are possible. In the case of a settled control system in which the flow rate is suddenly halved, it is desirable that the dosed quantity from the controller is also directly halved. In order to achieve this type of "flow-rate-proportional" dosing, this task is not left to the I-component of the controller, but rather one enters the (to be measured) flow rate as disturbance variable z multiplicative at the controller output.</p> <div></div> <p>Strictly speaking, feedforward control involves an open-loop control system, since its effect is not measured directly. That means that the feed flow is directed exclusively forward. Hence the designation "feedforward control".</p> <p>For the additive feedforward control that is alternatively available in the device, the (standardized) disturbance variable is added to the controller manipulated variable. This enables you to set up a type of variable base load dosing.</p> <p>The standardization of the disturbance variable is required both for multiplicative and for additive feedforward control and is done using parameters <math>Z_0</math> (zero point) and <math>Z_p</math> (proportional band): <math>z_n = (z - z_0)/z_p</math></p> <div></div> <p><b>Example</b> Flowmeter with measuring range 0 to 200 m<sup>3</sup>/ h The controller would currently dose 100% without feedforward control. The feedforward control should be configured such that at z = 200m<sup>3</sup>/h, the controller still doses at 100% (zn = 1). If the flow rate drops, the dosing rate should be reduced, and at a flow rate of less than 4 m<sup>3</sup>/h, dosing should stop entirely (zn = 0). → Select the zero point z0 = 4 m<sup>3</sup>/h and the proportional band Zp= 196 m<sup>3</sup>/h.</p>		
Function	<p><b>Selection</b></p> <ul style="list-style-type: none"><li>Off</li><li>Multiply</li><li>Add</li></ul> <p><b>Factory setting</b> Off</p>	Selecting multiplicative or additive feedforward control
Source of data	<p><b>Selection</b></p> <ul style="list-style-type: none"><li>None</li><li>Sensor inputs</li><li>Current inputs</li><li>Fieldbus signals</li><li>Binary inputs</li><li>Mathematical functions</li></ul> <p><b>Factory setting</b> None</p>	<p>► Specify the input which should be the source of data for the disturbance variable.</p>

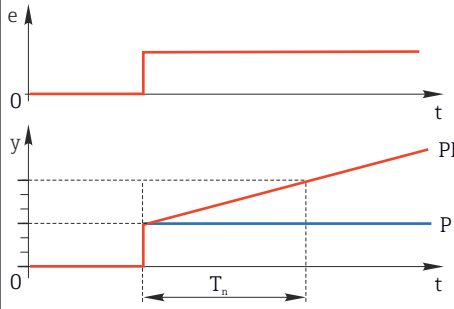Menu/Setup/Additional functions/Controller 1 ... 2		
Function	Options	Info
Measured value	<b>Selection</b> Depends on <b>Source of data</b> <b>Factory setting</b> None	► Specify the measured value that should be your disturbance variable. You can use different measured values depending on the data source. → 99
Zp	Range of adjustment depending on the selection of the measured value	Proportional band -->
Z0		Zero point
► Parameters		<p>The Liquiline PID controller has been implemented in the serial structural form, i. e. it has the following parameters:</p> <ul style="list-style-type: none"> <li>■ Integral action time <math>T_n</math></li> <li>■ Derivative action time <math>T_v</math></li> <li>■ Proportional band <math>X_p</math></li> </ul> <p><b>Setup Level = Advanced:</b> With this setup level, you can also configure the following:</p> <ul style="list-style-type: none"> <li>■ Time constant <math>T_{wu}</math></li> <li>■ Time constant <math>\alpha</math></li> <li>■ Width of the neutral zone <math>X_n</math></li> <li>■ Width of the hysteresis range of the neutral zone <math>X_{hyst}</math></li> <li>■ Clock time of the controller</li> </ul>
$T_n$	0.0 to 9999.0 s <b>Factory setting</b> 0.0 s	The integral action time specifies the effect of the I-value If $T_n > 0$ the following applies: $Clock < T_{wu} < 0.5(T_n + T_v)$
<p>The integral action time is the time needed in a step-function response to achieve a change in the manipulated variable - as a result of the I effect - which has the same magnitude as the P-value.</p>  <p><math>e</math> = control deviation, <math>e=w-x</math> (set point controlled variable)</p>		

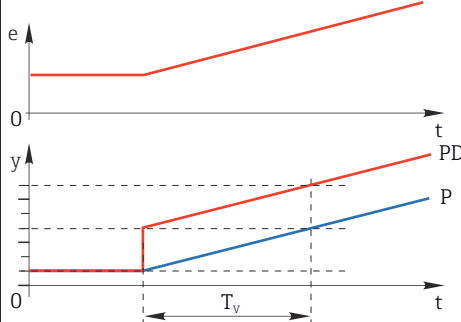Menu/Setup/Additional functions/Controller 1 ... 2		
Function	Options	Info
Twu	0.1 to 999.9 s <b>Factory setting</b> 20.0 s	Time constant for anti-windup feedback The lower the value the greater the integrator inhibition. Exercise extreme caution when making changes. <b><math>\text{Clock} &lt; \text{Twu} &lt; 0.5(\text{Tn} + \text{Tv})</math></b>
Tv	0.1 to 999.9 s <b>Factory setting</b> 0.0 s	The derivative action time specifies the effect of the D-value  The derivative action time is the time by which the ramp response of a PD controller reaches a specific value of the manipulated variable at an earlier stage than it would solely as a result of its P-value.  
alpha	0.0 to 1.0 <b>Factory setting</b> 0.3	Affects the additional damping filter of the D-controller. The time constant is calculated from $\alpha \cdot \text{Tv}$ .
Process balance <b>Controller type = PID 2-sided</b>	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Symmetric</li> <li>■ Asymmetric</li> </ul> <b>Factory setting</b> Symmetric	<b>Symmetric</b> There is only one control gain and this applies for both sides of the process.  <b>Asymmetric</b> You can set the control gain individually for both sides of the process.
Xp <b>Process balance = Symmetric</b>	Range of adjustment and factory setting depending on the <b>Source of data</b>	Proportional band, reciprocal value of the proportional gain $K_p$ As soon as controlled variable x deviates more than $x_p$ from the set point w, manipulated variable y reaches 100%.
Xp Low <b>Process balance = Asymmetric</b>	Range of adjustment and factory setting depending on the <b>Source of data</b>	$x_p$ for $y < 0$ (manipulated variable $< 0$ )
Xp High <b>Process balance = Asymmetric</b>		$x_p$ for $y > 0$ (manipulated variable $> 0$ )
Xn	Range of adjustment and factory setting depending on the <b>Source of data</b>	Tolerance range about the set point that prevents minor oscillations about the set point if using two-sided control loops.
XN Low <b>Process balance = Asymmetric</b>	Range of adjustment and factory setting depending on the <b>Source of data</b>	$x_n$ for $x < w$ (controlled variable $<$ set point)
XN High <b>Process balance = Asymmetric</b>		$x_n$ for $x > w$ (controlled variable $>$ set point)

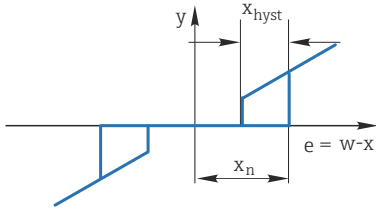Menu/Setup/Additional functions/Controller 1 ... 2		
Function	Options	Info
XHyst  	0.0 to 99.9 % <b>Factory setting</b> 0.0 %	Width of the hysteresis range of the neutral zone, relative component of $x_n$
Clock	0.333 to 100.000 s <b>Factory setting</b> 1.000 s	<b>Expert setting</b> Only change the clock time of the controller if you know exactly what you are doing. <b>Clock &lt; Twu &lt; 0.5(Tn + Tv)</b>
Max y change rate	0.00 to 1.00 <b>Factory setting</b> 0.40	Limits the change of the output variable A value of 0.5 permits a maximum manipulated variable change of 50 % within one second.
► Exception behavior		Hold=measured value is no longer reliable
Manipulated Variable	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Freeze</li> <li>■ Fixed value</li> </ul> <b>Factory setting</b> Freeze	How should the controller react to a measured value that is no longer reliable?  <b>Freeze</b> The manipulated variable is frozen at the current value  <b>Fixed value</b> Manipulated variable is set to 0 (no dosing)
State	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Freeze</li> <li>■ Reset</li> </ul> <b>Factory setting</b> Freeze	Internal controller status  <b>Freeze</b> No change  <b>Reset</b> After a hold, the control system starts from scratch, and settling time takes place again.
Hold as exception	<b>Selection</b> <ul style="list-style-type: none"> <li>■ All</li> <li>■ None</li> </ul> <b>Factory setting</b> All	► Select: Should the hold trigger the previously selected exception behaviour, or should it be ignored?
► Outputs		Goes to the menu <b>Outputs</b> → 83
► Controller assignment view		Shows an overview of the inputs and outputs used

### 10.6.4 Cleaning programs

#### ⚠ CAUTION

**Programs not switched off during maintenance activities.**


Risk of injury due to medium or cleaning agent!

- Quit any programs that are active.
- Switch to the service mode.
- If testing the cleaning function while cleaning is in progress, wear protective clothing, goggles and gloves or take other suitable measures to protect yourself.

### Types of cleaning

The user can choose from the following cleaning types:


- Standard clean
- Chemoclean
- Chemoclean Plus

 **State of cleaning:** Indicates whether the cleaning program is active or not. This is for information purposes only.


### Selecting the cleaning type

1. **Menu/Setup/Additional functions/Cleaning:** Select a cleaning program.
  - ↳ You can configure 4 different types of cleaning which you can assign individually to the inputs.
2. **Cleaning type:** For each cleaning program decide which type of cleaning should be performed.

### Standard cleaning

Standard cleaning involves cleaning a sensor with compressed air as performed with the ion-selective sensor CAS40D (connection of cleaning unit for →  43CAS40D) or rinsing with water, for example.

Menu/Setup/Additional functions/Cleaning/Cleaning 1 ... 4/Standard clean		
Function	Options	Info
Cleaning time	5 to 600 s <b>Factory setting</b> 10 s	Cleaning duration The cleaning duration and interval are dependent on the process and sensor. ► Determine the variables empirically or based on experience.

► Define the cleaning cycle →  117.

### Chemoclean

One example is the use of the CYR10B injector unit for cleaning sensors, e.g. with CYA112 (CYR10B →  43 connection).

Menu/Setup/Additional functions/Cleaning/Cleaning 1 ... 4/Chemoclean		
Function	Options	Info
Cleaning time	0 to 900 s <b>Factory setting</b> 5 s	Cleaning duration
Prerinse time	0 to 900 s <b>Factory setting</b> 0 s	The cleaning duration, pre-rinse and post-rinse times and the interval are dependent on the process and sensor. Determine the variables empirically or based on experience.
Postrinse time		

### Chemoclean Plus

One example is the use of the CYR10B injector unit in conjunction with Cleanfit Control CYC25 for automated cleaning of 12 mm sensors in pneumatic retractable assemblies (CYC25 connection, see CYC25 Operating Instructions: BA01436C).

Menu/Setup/Additional functions/Cleaning/Cleaning 1 ... 4/Chemoclean Plus/Chemoclean Plus setup			
Function	Options	Info	
Cleaning steps setup	Table to create a time program	You define a maximum of 30 program steps which are to be performed one after the other. For each step, enter the duration [s] and the state (0 = "off", 1 = "on") of each relay or output. You can specify the number and name of the outputs further down in the menu. See below for an example of programming.	
		Querying the switch status of the limit position switch in the limit switch column: When used with CYC25 with a retractable assembly connected, the following signal table applies:	
		CPA871/CPA875	
		Service	ES1 1 ES2 1
		Measuring	ES1 0 ES2 0
		CPA472D/CPA473/CPA474	
		Service	ES1 1 ES2 0
		Measuring	ES1 0 ES2 1
Failsafe step setup	Table view	► In the table specify the states that the relays or outputs should assume in the event of an error.	
Limit contacts	0 to 2	► Select the number of digital input signals (e.g. from limit position switches of the retractable assembly). For querying the limit position switches of a retractable assembly, select 2.	
Limit contact 1 ... 2	<b>Selection</b> <ul style="list-style-type: none"><li>■ Binary inputs</li><li>■ Fieldbus signals</li></ul>	► Define the signal source for each limit position switch.  When used with CYC25 with a retractable assembly connected: <ul style="list-style-type: none"><li>■ <b>Limit contact 1</b>= DI x:1 (Service)</li><li>■ <b>Limit contact 2</b>= DI x:2 (Measuring)</li></ul>	
Outputs	0 to 4	► Select the number of outputs that actuators, such as valves or pumps, should activate.	
Output label 1 ... 4	User-defined text	You can assign a meaningful name to each output, e.g. "assembly", "cleaner 1", "cleaner 2", etc.  When used with CYC25: <ul style="list-style-type: none"><li>■ Output 1 = assembly (4/2-way pilot valve)</li><li>■ Output 2 = water (relay, e.g. CYR10B)</li><li>■ Output 3 = cleaner (relay, e.g. CYR10B)</li><li>■ Output 4 = optional valve (CYC25-AA relay or CYC25-AB 3/2-way pilot valve)</li></ul>	

The pneumatic retractable assembly, e.g. CPA87x, is activated by compressed air via a two-way valve. As a result, the assembly assumes either the "Measuring" position (sensor in medium) or the "Service" position (sensor in rinse chamber). Media such as water or

cleaning agents are supplied via valves or pumps. Here there are two states: 0 (= "off" or "closed") and 1 (= "on" or "open").

*Programming example: Regular cleaning with water and two cleaning agents*

Step	Limit switch	Duration [s]	Assembly CPA87x	Water	Cleaner 1	Cleaner 2
1	ES1 1	5	1	1	0	0
2	ES2 1	5	1	1	0	0
3	0	30	1	1	0	0
4	0	5	1	1	1	0
5	0	60	1	0	0	0
6	0	30	1	1	0	0
7	0	5	1	1	0	1
8	0	60	1	0	0	0
9	0	30	1	1	0	0
10	ES1 0	5	0	1	0	0
11	ES2 0	5	0	1	0	0
12	0	5	0	0	0	0

*Programming example: Regular cleaning with water, one cleaning agent and additional valve on the rinse chamber outlet of the assembly (seal water)*

Step	Limit switch	Duration [s]	Assembly CPA87x	Water	Cleaner	Valve
1	0	5	0	1	0	0
2	ES1 1	5	1	1	0	0
3	ES2 0	5	1	1	0	1
4	0	30	1	1	0	1
5	0	5	1	1	1	0
6	0	60	1	0	0	1
7	0	30	1	1	0	0
8	ES1 0	5	0	1	0	0
9	ES2 1	5	0	1	0	0
10	0	5	0	0	0	0



### Defining the cleaning cycle

Menu/Setup/Additional functions/Cleaning/Cleaning 1 ... 4		
Function	Options	Info
Cleaning cycle	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ Interval</li> <li>■ Weekly program</li> </ul> <b>Factory setting</b> Weekly program	<ul style="list-style-type: none"> <li>► Choose from a cleaning routine that is restarted at set intervals and a user-definable weekly program.</li> </ul>
Cleaning interval <b>Cleaning cycle = Interval</b>	0-00:01 to 07-00:00 (D-hh:mm) <b>Factory setting</b> 1-00:00	The interval value can be between 1 minute and 7 days. Example: You have set the value "1-00:00". Each day, the cleaning cycle starts at the same time you started the first cleaning cycle.
Daily event times <b>Cleaning cycle = Weekly program</b>	00:00 to 23:59 (HH:MM)	<ol style="list-style-type: none"> <li>1. Define up to 6 times (<b>Event time 1 ... 6</b>).  <ul style="list-style-type: none"> <li>↳ You can then choose from these for each day of the week.</li> </ul> </li> </ol>
Weekdays <b>Cleaning cycle = Weekly program</b>	<b>Selection</b> <b>Monday ... Sunday</b>	<ol style="list-style-type: none"> <li>2. Choose individually for each day of the week which of the 6 times should be used for a cleaning routine on this particular day.</li> </ol> <p>This allows you to create weekly programs that are perfectly adapted to suit your process.</p>

## Other settings and manual cleaning

Menu/Setup/Additional functions/Cleaning/Cleaning 1 ... 4		
Function	Options	Info
Start signal	<b>Selection</b> <ul style="list-style-type: none"> <li>None</li> <li>Fieldbus signals</li> <li>Signals of digital or analog inputs</li> </ul> <b>Factory setting</b> None	<p>In addition to cyclic cleaning, you can also use an input signal to start event-controlled cleaning.</p> <ul style="list-style-type: none"> <li>Choose the trigger for such a cleaning process here.</li> </ul> <p>Interval and weekly programs are executed as normal, which means that conflicts can arise. Priority is given to the cleaning program that was the first to be started.</p>
Hold	<b>Selection</b> <ul style="list-style-type: none"> <li>Off</li> <li>On</li> </ul> <b>Factory setting</b> On	<ul style="list-style-type: none"> <li>Decide whether there should be a hold during the cleaning process. This hold affects the inputs to which this cleaning process is assigned. Activate the cleaning hold in the advanced setup for the sensor.</li> </ul>
Start cyclic	Action	Activates the cyclical cleaning as set. Only visible if <b>Interval</b> is selected under <b>Cleaning cycle</b> .
▷ Start single	Action	Starts an individual cleaning process with the selected parameters. If cyclical cleaning is enabled, there are times in which it is not possible to manually start the process.
▷ Stop or Stop failsafe	Action	Ends the cleaning process (cyclical or manual) Only visible if the program is running or if <b>Failsafe</b> has happened.
► Outputs		<p>Switch to the <b>Outputs</b> → 83 menu</p> <p>Assignment of the relay with <b>Chemoclean Plus</b>:</p> <ul style="list-style-type: none"> <li>Relay x:1 - Cleaning x - Out1 or as assigned in setup for <b>Chemoclean Plus</b>.</li> <li>Relay x:2 - Cleaning x - Out2 or as assigned in setup for <b>Chemoclean Plus</b>.</li> <li>Relay x:3 - Cleaning x - Out3 or as assigned in setup for <b>Chemoclean Plus</b>.</li> <li>Relay x:4 - Cleaning x - Out4 or as assigned in setup for <b>Chemoclean Plus</b>.</li> </ul>
► Cleaning program assignment view		Shows an overview of the assignment of inputs and outputs in the cleaning program.

## 10.6.5 Mathematical functions

In addition to "real" process values, which are provided by connected physical sensors or analog inputs, mathematical functions can be used to calculate a maximum of 8 "virtual" process values.

The "virtual" process values can be:

- Output via a current output or a fieldbus
- Used as a controlled variable
- Assigned as a measured variable to a limit switch
- Used as a measured variable to trigger cleaning
- Displayed in user-defined measuring menus

### Difference

You can subtract the measured values of two sensors and use the result to detect incorrect measurements, for example.

To calculate a difference, you must use two measured values with the same engineering unit.

Menu/Setup/Additional functions/Mathematical functions/MF1 to 8/Mode = Difference		
Function	Options	Info
Calculation	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> Off	On/off switch for the function
Y1	The options depend on the sensors connected	Select the sensors and measured variables that should function as the minuend ( <b>Y1</b> ) or subtrahend ( <b>Y2</b> ).
Measured value		
Y2		
Measured value		
Difference value	Read only	View this value in a user-defined measuring screen or output the value via the current output.
► Mathematical function assignment view		Overview of the configured functions

### Redundancy

Use this function to monitor two or three sensors with redundant measurements. The arithmetic average of the two closest measured values is calculated and output as the redundancy value.

Menu/Setup/Additional functions/Mathematical functions/MF1 to 8/Mode = Redundancy		
Function	Options	Info
Calculation	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> Off	On/off switch for the function
Y1	The options depend on the sensors connected	You can select a maximum of 3 different types of sensor that output the same measured value.  <b>Example for temperature redundancy</b> You have a pH sensor and an oxygen sensor at inputs 1 and 2. Select the pH sensor as <b>Y1</b> and the oxygen sensor as <b>Y2</b> . <b>Measured value:</b> Select <b>Temperature</b> in each case.
Measured value		
Y2		
Measured value		
Y3 (optional)		
Measured value		
Deviation control	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> Off	You can monitor the redundancy. Specify an absolute limit value that must not be exceeded.
Deviation limit	Depends on the selected measured value	
Redundancy	Read only	View this value in a user-defined measuring screen or output the value via the current output.
► Mathematical function assignment view		Overview of the configured functions

### rH value

To calculate the rH value, a pH sensor and an ORP sensor must be connected. It is irrelevant whether you are using a pH glass sensor, an ISFET sensor or the pH electrode of an ISE sensor.

Instead of the mathematical functions, you can also connect a combined pH/ORP sensor.

- Set the main measured value simply to rH.

Menu/Setup/Additional functions/Mathematical functions/MF1 to 8/Mode = rH calculation		
Function	Options	Info
Calculation	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> Off	On/off switch for the function
pH source	Connected pH sensor	Set the input for the pH sensor and the input for the ORP sensor. Measured value querying is obsolete – you must select pH or ORP mV.
ORP source	Connected ORP sensor	
Calculated rH	Read only	View this value in a user-defined measuring screen or output the value via the current output.
► Mathematical function assignment view		Overview of the configured functions

### Degassed conductivity

Carbon dioxide from the air can be a contributing factor to the conductivity of a medium. The degassed conductivity is the conductivity of the medium excluding the conductivity caused by carbon dioxide.

Advantages of using degassed conductivity taking the example of a power station:

- The conductivity caused by corrosion products or contamination in the feed water is determined as soon as the turbines are started. The system excludes the initially high conductivity values resulting from the ingress of air.
- If carbon dioxide is regarded as non-corrosive, the live steam can be directed to the turbine far earlier during startup.
- If the conductivity value increases during normal operation, it is possible to immediately determine an ingress of coolant or air by calculating the degassed conductivity.

Menu/Setup/Additional functions/Mathematical functions/MF1 to 8/Mode = Degassed conductivity		
Function	Options	Info
Calculation	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> Off	On/off switch for the function
Cation conductivity	Connected conductivity sensor	<b>Cation conductivity</b> represents the sensor downstream from the cation exchanger and upstream from the "degassing module", <b>Degassed conductivity</b> represents the sensor at the outlet of the degassing module. Measured value querying is obsolete – you can only select conductivity.
Degassed conductivity	Connected conductivity sensor	
CO2 concentration	Read only	View this value in a user-defined measuring screen or output the value via the current output.
► Mathematical function assignment view		Overview of the configured functions

## Dual conductivity

You can subtract two conductivity values and use the result to monitor the efficiency of an ion exchanger, for example.

Menu/Setup/Additional functions/Mathematical functions/MF1 to 8/Mode = Dual conductivity		
Function	Options	Info
Calculation	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> Off	On/off switch for the function
Inlet	The options depend on the sensors connected	Select the sensors that should act as the minuend ( <b>Inlet</b> , e.g. sensor upstream of the ion exchanger) or subtrahend ( <b>Outlet</b> , e.g. sensor downstream of the ion exchanger).
Measured value		
Outlet		
Measured value		
Main value format	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Auto</li> <li>■ #</li> <li>■ #.#</li> <li>■ #.##</li> <li>■ #.###</li> </ul> <b>Factory setting</b> Auto	Specify the number of decimal places.
Cond. unit	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Auto</li> <li>■ µS/cm</li> <li>■ mS/cm</li> <li>■ S/cm</li> <li>■ µS/m</li> <li>■ mS/m</li> <li>■ S/m</li> </ul> <b>Factory setting</b> Auto	
Dual conductivity	Read only	View this value in a user-defined measuring screen or output the value via the current output.
► Mathematical function assignment view		Overview of the configured functions

### Calculated pH value

The pH value can be calculated from the measured values of two conductivity sensors under certain conditions. Areas of application include power stations, steam generators and boiler feedwater.

Menu/Setup/Additional functions/Mathematical functions/MF1 to 8/Mode = pH calculation from conductivity		
Function	Options	Info
Calculation	<b>Selection</b> <ul style="list-style-type: none"> <li>Off</li> <li>On</li> </ul> <b>Factory setting</b> Off	On/off switch for the function
Method	<b>Selection</b> <ul style="list-style-type: none"> <li>NaOH</li> <li>NH<sub>3</sub></li> <li>LiOH</li> </ul> <b>Factory setting</b> NaOH	The calculation is performed on the basis of Guideline VGB-R-450L of the Technical Association of Large Power Plant Operators (Verband der Großkesselbetreiber, (VGB)).  <b>NaOH</b> $\text{pH} = 11 + \log \{(\kappa_v - 1/3 \kappa_h)/273\}$ <b>NH<sub>3</sub></b> $\text{pH} = 11 + \log \{(\kappa_v - 1/3 \kappa_h)/243\}$ <b>LiOH</b> $\text{pH} = 11 + \log \{(\kappa_v - 1/3 \kappa_h)/228\}$ $\kappa_v$ ... <b>Inlet</b> ... direct conductivity $\kappa_h$ ... <b>Outlet</b> ... acid conductivity
Inlet	The options depend on the sensors connected	<b>Inlet</b> Sensor upstream from the cation exchanger, "direct conductivity"  <b>Outlet</b> Sensor downstream from the cation exchanger, "acid conductivity"  Selection of the measured value is obsolete as it must always be <b>Conductivity</b> .
Measured value		
Outlet		
Measured value		
Calculated pH	Read only	View this value in a user-defined measuring screen or output the value via the current output.
► Mathematical function assignment view		Overview of the configured functions

### Cation exchanger capacity (optional, with activation code)

Cation exchangers are used to monitor the water/steam circuit for inorganic contamination. The cation exchangers eliminate the disruptive influence of alkalizing agents, such as ammonium hydroxide or caustic soda, which are added to the boiler feedwater.

The service life of cation exchangers depends on:

- The type of alkalizing agent
- The concentration of the alkalizing agent
- The amount of contamination in the medium
- The capacity of the cation exchanger (efficiency of the resin)

To ensure the smooth operation of power stations, it is important to continuously monitor the exchange column load. When a user-defined remaining capacity is reached, the transmitter displays a diagnostic message so that the ion exchange column can be replaced or regenerated in good time.

The calculation of the remaining capacity depends on the following factors:

- Flow rate
- Volume of the exchanger
- Salinity of the water at the exchanger inlet
- Total volume capacity of the resin
- Degree of efficiency of the exchanger

Menu/Setup/Additional functions/Mathematical functions/MF1 to 8/Mode = Cation exchanger capacity		
Function	Options	Info
Cond IEX output	Read only	
Cond IEX input		
Flow rate		
Remaining capacity		
Remaining op. time		
Time until %OB <sup>1)</sup>		
► Configuration		
Calculation	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> Off	On/off switch for the function
Unit of volume	<b>Selection</b> <ul style="list-style-type: none"> <li>■ l</li> <li>■ gal</li> </ul> <b>Factory setting</b> l	
Exchanger volume	0.0 to 99999 <b>Factory setting</b> 0.0	Volume of the cation exchanger Unit depending on the option selected in <b>Unit of volume</b>
TVC resin	0.0 to 99999 eq/l or eq/gal <b>Factory setting</b> 0.0 eq/l	TVC = total volume capacity Unit as equivalent per <b>Unit of volume</b>
Resin efficiency	1.0 to 100.0% <b>Factory setting</b> 100.0%	For information on the resin efficiency, refer to the data provided by the manufacturer of the resin used.
Set remaining capacity	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Yes</li> <li>■ No</li> </ul> <b>Factory setting</b> No	Before you start monitoring, specify the remaining capacity of the exchanger resin. This value makes allowances for the re-use of resin that has already been used. If no value is entered manually, 100% is used as the initial value for calculating the current remaining capacity.
Remaining capacity <b>Set remaining capacity = Yes</b>	0.0 to 100.0% <b>Factory setting</b> 0.0%	
Warning limit	1.0 to 100.0% <b>Factory setting</b> 20.0%	Specify the remaining capacity at which the transmitter should display a diagnostic message.

Menu/Setup/Additional functions/Mathematical functions/MF1 to 8/Mode = Cation exchanger capacity		
Function	Options	Info
Cond IEX input	Connected conductivity sensor	Select the conductivity sensor upstream from the inlet of the exchanger column.
Cond IEX output	Connected conductivity sensor	Select the conductivity sensor downstream from the outlet of the exchanger column.
Max cond at IEX output	0.0 to 99999 µS/cm <b>Factory setting</b> 0.0 µS/cm	Here, enter the maximum value that the acid conductivity may have at the outlet of the cation exchanger. The transmitter displays a diagnostic message if this value is exceeded.
Flow rate type	<b>Selection</b> <ul style="list-style-type: none"> <li>Source value</li> <li>Fixed value</li> </ul> <b>Factory setting</b> Source value	<b>Source value</b> You have connected the measured value of a flowmeter via a current input or a binary input. <b>Fixed value</b> Manual entry of a fixed flow rate
Flow rate	<b>Selection</b> <ul style="list-style-type: none"> <li>None</li> <li>Current inputs</li> <li>Binary inputs</li> </ul> <b>Factory setting</b> None	Specify the input at which you have connected and configured the measured value of a flowmeter ( <b>Menu/Setup/Inputs</b> ).
Fixed value <b>Flow rate type = Fixed value</b>	User-defined text	Specify the fixed flow value which you have read on an external flowmeter, for example.
Min flow rate	0.0 to 99999 l/h	
Max flow rate	<b>Factory setting</b> 0.0 l/h	
► Mathematical function assignment view		Overview of the configured functions

1) %OB is a variable whose value depends on the configuration. The configured value is displayed, e.g. 20%.

### Combined chlorine

This function calculates the concentration of combined chlorine in the medium. This calculation involves subtracting the free chlorine concentration from the total chlorine



concentration. This requires both a sensor for free chlorine CCS51E and a sensor for total chlorine CCS53E.

Menu/Setup/Additional functions/Mathematical functions/MF1 to 8/Mode /Combined chlorine		
Function	Options	Info
Calculation	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> Off	On/off switch for the function
Free chlorine	<b>Selection</b> Channels to which a sensor for free chlorine is connected <b>Factory setting</b> ---	
Total chlorine	<b>Selection</b> Channels to which a sensor for total chlorine is connected <b>Factory setting</b> ---	
Unit	<b>Selection</b> <ul style="list-style-type: none"> <li>■ mg/l</li> <li>■ µg/l</li> <li>■ ppm</li> <li>■ ppb</li> </ul> <b>Factory setting</b> mg/l	
Format	<b>Selection</b> <ul style="list-style-type: none"> <li>■ #.###</li> <li>■ #.##</li> <li>■ #.#</li> <li>■ #</li> </ul> <b>Factory setting</b> #.###	Specify the number of decimal places.
Combined chlorine	Read only	Current, calculated value
► Mathematical function assignment view		Overview of the configured functions

### Formula (optional, with activation code)

With the formula editor, it is possible to calculate a new value from a maximum of 3 measured values. A wide range of mathematical and logical (Boolean) operations are available for this purpose.



The Liquiline firmware offers you a powerful mathematics tool with the formula editor. You are responsible for the feasibility of your formula, and therefore for the feasibility of the result.

Symbol	Operation	Type of operands	Type of result	Example
+	Addition	Numerical	Numerical	A+2
-	Subtraction	Numerical	Numerical	100-B
*	Multiplication	Numerical	Numerical	A*C
/	Division	Numerical	Numerical	B/100
^	Power	Numerical	Numerical	A^5
<sup>2</sup>	Square	Numerical	Numerical	A <sup>2</sup>

Symbol	Operation	Type of operands	Type of result	Example
<sup>3</sup>	Cube	Numerical	Numerical	B <sup>3</sup>
SIN	Sine	Numerical	Numerical	SIN(A)
COS	Cosine	Numerical	Numerical	COS(B)
EXP	Exponential function e <sup>x</sup>	Numerical	Numerical	EXP(A)
LN	Natural logarithm	Numerical	Numerical	LN(B)
LOG	Decadic logarithm	Numerical	Numerical	LOG(A)
MAX	Maximum of two values	Numerical	Numerical	MAX(A,B)
MIN	Minimum of two values	Numerical	Numerical	MIN(20,B)
MOD	Division with remainder	Numerical	Numerical	MOD (10,3)
ABS	Absolute value	Numerical	Numerical	ABS(C)
NUM	Boolean → numerical conversion	Boolean	Numerical	NUM(A)
=	Equals	Boolean	Boolean	A=B
<>	Not equal to	Boolean	Boolean	A<>B
>	Greater than	Numerical	Boolean	B>5.6
<	Less than	Numerical	Boolean	A<C
OR	Disjunction	Boolean	Boolean	B OR C
AND	Conjunction	Boolean	Boolean	A AND B
XOR	Exclusive disjunction	Boolean	Boolean	B XOR C
NOT	Negation	Boolean	Boolean	NOT A

Menu/Setup/Additional functions/Mathematical functions/MF1 to 8/Mode = Formula		
Function	Options	Info
Calculation	<b>Selection</b> ■ Off ■ On <b>Factory setting</b> Off	On/off switch for the function
Source A ... C	<b>Selection</b> Select source <b>Factory setting</b> None	You can use all the sensor inputs, binary and analog inputs, mathematical functions, limit switches, time switches, fieldbus signals, controllers and datasets for measuring range switching as the source for measured values.
Measured value	<b>Selection</b> Depends on the source	
A ... C	The current measured value is displayed	
		<ol style="list-style-type: none"> <li>1. Choose a maximum of three sources (A, B and C) for measured values.</li> <li>2. For each source, choose the measured value to be calculated.               <ul style="list-style-type: none"> <li>↳ All available signals - depending on the selected source - are possible measured values.</li> </ul> </li> <li>3. Enter the formula.</li> <li>4. Switch on the calculation.               <ul style="list-style-type: none"> <li>↳ The current measured values A, B and C as well as the result of the calculation using the formula are displayed.</li> </ul> </li> </ol>

Menu/Setup/Additional functions/Mathematical functions/MF1 to 8/Mode = Formula		
Function	Options	Info
Formula	User-defined text	Table →  125 Make sure the exact notation is used (upper case). Blank spaces before and after mathematical characters are irrelevant. Note the operator precedence, i.e. multiplication and division take precedence over addition and subtraction. Use parentheses if necessary.
Result unit	User-defined text	You may enter a unit for the calculated value if desired.
Result format	<b>Selection</b> ■ # ■ #.# ■ #.## ■ #.### ■ #.#### <b>Factory setting</b> #.##	Select the number of decimal places.
Result numeric	Read only	Current, calculated value
► Mathematical function assignment view		Overview of the configured functions

### Example: 2-point chlorine regulator with volume flow monitoring

A relay output activates a dosing pump. The pump should switch on when the following 3 conditions are met:

- (1) There is flow
  - (2) The volume flow is above a defined value
  - (3) The concentration of chlorine drops below a defined value
1. Connect a binary input signal from an "INS" point level switch of the CCA250 assembly to the DIO module.
  2. Connect an analog input signal of a volume flow meter to the AI module.
  3. Connect the chlorine sensor.
  4. Configure the **Formula** mathematical function: **Source A** = binary input DIO, **Source B** = current input AI, **Source C** = input **Disinfection**.  
 ↳ Formula:  
**A AND (B > 3) AND (C < 0.9)**  
 (where 3 is the lower limit value of the volume flow and 0.9 is the lower limit value of the chlorine concentration)
  5. Configure the relay output with the **Formula** mathematical function and connect the dosing pump to the corresponding relay.

The pump is switched on if all 3 conditions are met. If one of the conditions is no longer met, the pump is switched off again.

Instead of outputting the result of the formula directly to a relay, you can also connect a limit switch in between in order to attenuate the output signal via a switch-on and switch-off delay.

### Example: Load-based control

The load – i.e. the product of the concentration and volume flow – is needed for the dosage of precipitants, for instance.

1. Connect the input signal of a phosphate analyzer to the AI module.
2. Connect an analog input signal of a volume flow meter to the AI module.

3. Configure the **Formula** mathematical function: **Source A** = input signal phosphate and **Source B** = input signal volume flow.  
     ↳ Formula:  
          $A * B * x$   
         (where x is an application-specific proportionality factor)
4. Select this formula as the source e.g. of the current output or of a modulated binary output.
5. Connect the valve or pump.

### 10.6.6 Measuring range switching

A measuring range switching (MRS) configuration includes the following options for each of the four binary input states:

- Operating mode (conductivity or concentration)
- Concentration table
- Temperature compensation
- Current output turndown
- Limit switch range

An MRS set is assigned to a channel and switched on. The measuring range configuration selected via the binary inputs is now applied instead of the normal configuration of the linked sensor channel. For current outputs and limit switches to be controlled by the MRS, they must be linked to the MRS set, not to the measuring channel.

Current outputs and limit switches can be linked to an MRS set. This MRS set gives you the measured value and the associated turn down (current outputs) or the range for limit value monitoring (limit switches).

A limit switch connected to an MRS set always uses the **Out of range check** mode.

Consequently, it switches when the value is outside the configured range.

If a current output or limit switch is connected to an MRS set, the turndown, monitoring range and limit switch mode can no longer be configured manually. Therefore, these options are hidden in the menus (current outputs and limit switch).

*Programming example: CIP cleaning in a brewery*

	Beer	Water	Alkali	Acid
Binary input 1	0	0	1	1
Binary input 1	0	1	0	1
	Measuring range 00	Measuring range 01	Measuring range 10	Measuring range 11
Operating mode	Conductivity	Conductivity	Concentration	Concentration
Conc. table	-	-	NaOH 0..15%	User table 1
Compensation	User table 1	Linear	-	-
Current output				
Range lower value	1.00 mS/cm	0.1 mS/cm	0.50 %	0.50 %
Range upper value	3.00 mS/cm	0.8 mS/cm	5.00 %	1.50 %
Limit switches				
Range lower value	2.3 mS/cm	0.5 mS/cm	2.00 %	1.30 %
Range upper value	2.5 mS/cm	0.7 mS/cm	2.10 %	1.40 %

Menu/Setup/Additional functions/Measuring range switch		
Function	Options	Info
► MRS set 1 ... 2		If you enter both activation codes, you have two independent parameter sets available for measuring range switching. The submenus are the same for both sets.
MRS	<b>Selection</b> <ul style="list-style-type: none"> <li>Off</li> <li>On</li> </ul> <b>Factory setting</b> Off	Switches the function on or off
Sensor	<b>Selection</b> <ul style="list-style-type: none"> <li>None</li> <li>Connected conductivity sensors</li> </ul> <b>Factory setting</b> None	This function can be used on conductivity sensors only.
Binary input 1 ... 2	<b>Selection</b> <ul style="list-style-type: none"> <li>None</li> <li>Binary inputs</li> <li>Fieldbus signals</li> <li>Limit switches</li> </ul> <b>Factory setting</b> None	Source of the switching signal, can be selected for input 1 and 2 in each case
► Measuring range 00 ... 11		Select the MRSs; a maximum of 4 are possible. The submenus are identical for each and thus are displayed only once.
Operating mode	<b>Selection</b> <ul style="list-style-type: none"> <li>Conductivity</li> <li>Concentration</li> <li>TDS</li> <li>Resistance</li> </ul> <b>Factory setting</b> Conductivity	Selection depends on the sensor used: <ul style="list-style-type: none"> <li>Inductive sensor and conductive four-pin sensor               <ul style="list-style-type: none"> <li>Conductivity</li> <li>Concentration</li> <li>TDS</li> </ul> </li> <li>Conductive sensor               <ul style="list-style-type: none"> <li>Conductivity</li> <li>Resistance</li> <li>TDS</li> </ul> </li> </ul>
Conc. table <b>Operating mode = Concentration</b>	<b>Selection</b> <ul style="list-style-type: none"> <li>NaOH 0..15%</li> <li>NaOH 25..50%</li> <li>HCl 0..20%</li> <li>HNO<sub>3</sub> 0..24%</li> <li>HNO<sub>3</sub> 24..30%</li> <li>H<sub>2</sub>SO<sub>4</sub> 0.5..27%</li> <li>H<sub>2</sub>SO<sub>4</sub> 93..99%</li> <li>H<sub>3</sub>PO<sub>4</sub> 0..40%</li> <li>NaCl 0..26%</li> <li>User table 1 ... 4</li> </ul> <b>Factory setting</b> NaOH 0..15%	Concentration tables saved at the factory: <ul style="list-style-type: none"> <li>NaOH: 0 to 15%, 0 to 100 °C (32 to 212 °F)</li> <li>NaOH: 25 to 50%, 2 to 80 °C (36 to 176 °F)</li> <li>HCl: 0 to 20%, 0 to 65 °C (32 to 149 °F)</li> <li>HNO<sub>3</sub>: 0 to 25%, 2 to 80 °C (36 to 176 °F)</li> <li>H<sub>2</sub>SO<sub>4</sub>: 0 to 28%, 0 to 100 °C (32 to 212 °F)</li> <li>H<sub>2</sub>SO<sub>4</sub>: 40 to 80%, 0 to 100 °C (32 to 212 °F)</li> <li>H<sub>2</sub>SO<sub>4</sub>: 93 to 100%, 0 to 100 °C (32 to 212 °F)</li> <li>H<sub>3</sub>PO<sub>4</sub>: 0 to 40%, 2 to 80 °C (36 to 176 °F)</li> <li>NaCl: 0 to 26%, 2 to 80 °C (36 to 176 °F)</li> </ul>
Compensation <b>Operating mode = Conductivity</b>	<b>Selection</b> <ul style="list-style-type: none"> <li>None</li> <li>Linear</li> <li>NaCl (IEC 746-3)</li> <li>Water ISO7888 (20°C)</li> <li>Water ISO7888 (25°C)</li> <li>UPW NaCl</li> <li>UPW HCl</li> <li>User table 1 ... 4</li> </ul> <b>Factory setting</b> Linear	Various methods are available to compensate for the temperature dependency. Depending on your process, decide which type of compensation you want to use. Alternatively, you can also select <b>None</b> and thus measure uncompensated conductivity.

Menu/Setup/Additional functions/Measuring range switch		
Function	Options	Info
► Current output		
Range lower unit	Depends on the <b>Operating mode</b>	Units are only queried for <b>Operating mode = Conductivity</b> . The other units are pre-defined and cannot be modified. <ul style="list-style-type: none"> <li>Conductivity S/m, mS/cm, µS/cm, S/cm, µS/m, mS/m</li> <li>Concentration %</li> <li>TDS ppm</li> <li>Resistance Ωcm</li> </ul>
Range lower value		
Range upper unit		
Range upper value		
► Limit switches		
Range lower unit	Depends on the <b>Operating mode</b>	Units are only queried for <b>Operating mode = Conductivity</b> . The other units are pre-defined and cannot be modified. <ul style="list-style-type: none"> <li>Conductivity S/m, mS/cm, µS/cm, S/cm, µS/m, mS/m</li> <li>Concentration %</li> <li>TDS ppm</li> <li>Resistance Ωcm</li> </ul>
Range lower value		
Range upper unit		
Range upper value		

### 10.6.7 Diagnostic modules

Here you can configure a maximum of 8 individual diagnostic messages.

A diagnostic module has the following properties:

- The feed source can be configured like a binary output (relay, digital output).
- You can choose whether the diagnostic message should be output at a high level or low level.
- You decide which error category (Namur class) should be assigned to the message.
- You can define a customized text to be output as the diagnostic message text.

In addition you can switch off the factory diagnostic code for limit switches. This allows you to:

- Use the limit switch on a purely functional basis (without a message)
- Configure application-specific message texts
- Control diagnostic modules directly by a digital signal or via a limit switch output (enables the use of switch-on/switch-off delay, for example).

Menu/Setup/Additional functions/Diagnostic modules		
Function	Options	Info
► Diagnostic module 1 (961) ... 8 (968)		
Source of data	<b>Selection</b> <ul style="list-style-type: none"> <li>None</li> <li>Fieldbus signals</li> <li>Binary inputs</li> <li>Limit switch</li> </ul> <b>Factory setting</b> None	Specify the input which should be the source of data for the diagnostic message.
Measured value	<b>Selection</b> Depends on <b>Source of data</b> <b>Factory setting</b> None	Specify the measured value that should trigger the diagnostic message. You can use different measured values depending on the data source. → 99

Menu/Setup/Additional functions/Diagnostic modules		
Function	Options	Info
Active low	<b>Selection</b> <ul style="list-style-type: none"><li>■ Off</li><li>■ On</li></ul> <b>Factory setting</b> On	<b>On:</b> The output value is equal to the inverse output value.
Short text	User-defined text	Give the diagnostic message a name.
► Diagnostic module assignment view		Shows an overview of the diagnostic modules used.

## 11 Calibration

- Sensors with Memosens protocol are calibrated at the factory.
  - Users must decide whether the process conditions present require calibration during initial commissioning.
  - Additional calibration is not required in many standard applications.
- Calibrate sensors at sensible intervals depending on the process.



Operating Instructions "Memosens", BA01245C

### 11.1 Calibration instructions

#### Calibration

(according to DIN 1319)

A calibration is defined as an operation to establish the relationship between the measured value or expected value of the output variable and the related true or correct value of the measured variable (input variable) for a measuring system under specified conditions.

A calibration does not alter the performance of the measuring device.

#### Adjustment

An adjustment corrects the value displayed by a measuring device, in other words the measured/displayed value (the actual value) is corrected so that the reading agrees with the correct, set value.

The value determined during calibration is used to calculate the correct measured value and saved in the sensor.

### 11.2 CAL menu

#### 11.2.1 Take reference spectrum

1. **CAL/CH..x:y Spectrometer/Spectrometer/Take reference spectrum.**
2. ▸Reference spectrum (zero solution)
  - ↳ Do you want to start the calibration?  
(Hold turns to active)
3. Clean the measuring gap and put the sensor in zero solution.
4. OK
  - ↳ Lamp spectrum is recorded.

Following calibration, clean the sensor again and insert it back into the process.



## 11.2.2 Application calibration

### Menu settings

CAL/CH..x.y Spectrometer/Spectrometer/Application calibration		
Function	Options	Info
Dataset	<b>Options</b> Dataset 1 ... 50 <b>Default setting</b> Dataset 1	Select the dataset.
Package	<b>Options</b> color <b>Default setting</b> color	Measuring package for color measurement
Parameter	<b>Options</b> <ul style="list-style-type: none"> <li>■ L*</li> <li>■ a*</li> <li>■ b*</li> </ul> <b>Default setting</b> L*	
Unit	none	No unit in "Lab" color space
Calibration table		<b>Application table</b> Application adjustment whereby L*, a* or b* is assigned a different value.
Calibration curve	Display only	
► Edit factor	Display <ul style="list-style-type: none"> <li>■ Dataset name</li> <li>■ Parameter name</li> </ul>	<ol style="list-style-type: none"> <li>1. Cal. factor</li> <li>2. Enter the new factor.</li> <li>3. ▷Accept calibration data</li> </ol>
► Edit offset	Display <ul style="list-style-type: none"> <li>■ Dataset name</li> <li>■ Parameter name</li> </ul>	<ol style="list-style-type: none"> <li>1. Offset</li> <li>2. Enter the new offset.</li> <li>3. ▷Accept calibration data</li> </ol>

11.2.3 Temperature

Menu settings

CAL/CH..x.y Spectrometer/Spectrometer/Temperature		
Function	Options	Info
► Edit offset	Action	<p>The current offset is displayed.</p> <p>1. Enter the new offset [K].</p> <p>2. ▷Accept calibration data</p> <p>↳ The new offset is used.</p>
▷ Start calibration		<p>1. <b>CAL/CH..x.y Spectrometer/Spectrometer/Temperature/▷Start calibration.</b></p> <p>↳ Do you want to start the calibration? (Hold turns to active)</p> <p>2. <b>OK.</b></p> <p>3. Place the sensor in the calibration medium. <b>OK.</b></p> <p>↳ The new actual value is displayed.</p> <p>4. Enter the reference temperature. ▷<b>Next.</b></p> <p>↳ The current and new offset are displayed.</p> <p>5. Adopt calibration data.</p> <p>6. Clean the sensor and place it in the process medium. <b>OK.</b></p>

## 12 Diagnosis and troubleshooting

### 12.1 General troubleshooting


The transmitter continuously monitors its functions itself.

If a diagnostic message occurs, the display alternates between the diagnostic message and the measured value in the measuring mode.

The color of the display background changes to red if a diagnostic message for error category "F" occurs.

#### 12.1.1 Troubleshooting

A diagnostic message appears on the display or via the fieldbus, measured values are not plausible, or you identify a fault.

1. See the Diagnostics menu for details on the diagnostic message.
  - ↳ Follow the instructions to rectify the problem.
2. If this does not help, search for the diagnostic message under "Overview of diagnostic information" in these Operating Instructions. Use the message number as a search criterion. Ignore the letters indicating the NAMUR error category.
  - ↳ Follow the troubleshooting instructions provided in the last column of the error tables.
3. If the measured values are implausible, the local display is faulty or you encounter other problems, search for the faults under "Process errors without messages" (→ Operating Instructions Memosens, BA01245C) or "Device-specific errors" (→  138).
  - ↳ Follow the recommended measures.
4. Contact the Service Department if you cannot rectify the error yourself, citing only the error number.

#### 12.1.2 Process errors without messages

 Operating Instructions "Memosens", BA01245C

#### 12.1.3 Device-specific errors

Problem	Possible cause	Tests and/or remedial measures
Dark display	No supply voltage	▶ Check if supply voltage applied.
	Display connector plugged in incorrectly	▶ Check. Must be in RJ45 socket on base module.
	Base module defective	▶ Replace base module.
Values appear on display but: ■ Display does not change and/or ■ Device cannot be operated	Module not wired correctly	▶ Check modules and wiring.
	Impermissible operating system condition	▶ Switch off device and switch it on again.
Implausible measured values	Inputs defective	▶ First perform tests and take measures as outlined in "Process-specific errors" section. Measuring input test: ▶ Connect the Memocheck Sim CYP03D to the input and use it to check the function of the input.

Problem	Possible cause	Tests and/or remedial measures
Current output, incorrect current value	Incorrect adjustment	► Check with integrated current simulation, connect mA meter directly to current output.
	Load too large	
	Shunt/short to ground in current loop	
No current output signal	Base module defective	► Check with integrated current simulation, connect mA meter directly to current output.

## 12.2 Diagnostic information on local display

Up-to-date diagnostic events are displayed along with their status category, diagnostic code and short text. Clicking on the navigator lets you retrieve more information and tips on remedial measures.

## 12.3 Diagnostic information via web browser

The same diagnostic information that is available for the local display is available via the web server.

## 12.4 Diagnostic information via fieldbus

Diagnostic events, status signals and more information are transmitted according to the definitions and technical capability of the respective fieldbus systems.

## 12.5 Adapting the diagnostic information

### 12.5.1 Classification of diagnostic messages

In the **DIAG/Diagnostics list** menu, you can find more detailed information on the current diagnostic messages displayed.

In accordance with NAMUR specification NE 107, the diagnostic messages are characterized by:

- Message number
- Error category (letter in front of the message number)
  - **F** = (Failure) a malfunction has been detected  
The measured value of the affected channel is no longer reliable. The cause of the malfunction is to be found in the measuring point. Any controller connected should be set to manual mode.
  - **C** = (Function check), (no error)  
Maintenance work is being performed on the device. Wait until the work has been completed.
  - **S** = (Out of specification), the measuring point is being operated outside its specification  
Operation is still possible. However, you run the risk of increased wear, a shorter operating life or lower accuracy levels. The cause of the problem is to be found outside the measuring point.
  - **M** = Maintenance required. Action must be taken as soon as possible  
The device still measures correctly. Immediate measures are not necessary. However, proper maintenance efforts would prevent a possible malfunction in the future.
- Message text



If you contact the Service Department, please cite the message number only. Since you can individually change the assignment of an error to an error category, the Service Department cannot use this information.

## 12.5.2 Adapting the diagnostic behavior

All the diagnostic messages are assigned to specific error categories at the factory. Since other settings might be preferred depending on the application, error categories and the effect errors have on the measuring point can be configured individually. Furthermore, every diagnostic message can be disabled.

### Example


Diagnostic message 531 **Logbook full** appears on the display. You want to change this message so that an error is not shown on the display for example.

1. **Menu/Setup/General settings/Extended setup/Diagnostics settings/Diag. behavior .**
2. Select the diagnostics message and press the navigator button.
3. Decide: (a) Should the message be deactivated? (**Diagnostics message = Off**)  
(b) Do you want to change the error category? (**Status signal**)  
(c) Should an error current be output? (**Failure current = On**)  
(d) Do you want to trigger a cleaning program? (**Cleaning program**)
4. Example: You deactivate the message.  
 ↳ The message is no longer displayed. In the **DIAG** menu, the message appears as **Past message**.

### Possible settings

The list of diagnostic messages displayed depends on the path selected. There are device-specific messages, and messages that depend on what sensor is connected.

Menu/Setup/Run the ../Extended setup/Diagnostics settings/Diag. behavior		
Function	Options	Info
List of diagnostic messages		► Select the message to be changed. Only then can you make the settings for this message.
Diag. code	Read only	
Diagnostic message	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> Depends on the Diag. code	You can deactivate or reactivate a diagnostic message here. Deactivating means: <ul style="list-style-type: none"> <li>■ No error message in the measuring mode</li> <li>■ No error current at the current output</li> </ul>
Failure current	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> Depends on the Diag. code	Decide whether an error current should be output at the current output if the diagnostic message display is activated. In the event of general device errors, the error current is switched to all the current outputs. In the event of channel-specific errors, the error current is only switched to the current output in question.
Status signal	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Maintenance (M)</li> <li>■ Out of specification (S)</li> <li>■ Function check (C)</li> <li>■ Failure (F)</li> </ul> <b>Factory setting</b> Depends on the Diag. code	The messages are divided into different error categories in accordance with NAMUR NE 107. Decide whether you want to change a status signal assignment for your application.

Menu/Setup/Run the ../Extended setup/Diagnostics settings/Diag. behavior		
Function	Options	Info
Diag. output	<b>Selection</b> <ul style="list-style-type: none"> <li>None</li> <li>Binary outputs</li> <li>Alarm relay</li> <li>Relay</li> </ul> <b>Factory setting</b> None	<p>You can use this function to select an output to which the diagnostic message should be assigned.</p> <p> An alarm relay is always available, regardless of the device version. Other relays are optional.</p> <p>Before you can assign the message to an output: Configure one of the output types mentioned as follows:  <b>Menu/Setup/Outputs/(Alarm relay or Binary output or relay)/Function = Diagnostics and Operating mode = as assigned.</b></p>
Cleaning program	<b>Selection</b> <ul style="list-style-type: none"> <li>None</li> <li>Cleaning 1 ... 4</li> </ul> <b>Factory setting</b> None	<p>Decide whether the diagnostic message should trigger a cleaning program.</p> <p>You can define cleaning programs under:  <b>Menu/Setup/Additional functions/Cleaning.</b></p>
► Detail information	Read only	Here you can find more information on the diagnostic message and instructions on how to resolve the problem.

## 12.6 Overview of diagnostic information

### 12.6.1 Device-specific, general diagnostic messages

No.	Message	Factory settings			Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>	
202	Selftest active	F	On	Off	Wait for self-test to be finished
216	Hold active	C	On	Off	Output values and status of the channel are on hold
241	Firmware failure	F	On	On	Internal device error 1. Update the software. 2. Contact Endress+Hauser Service. 3. Replace the backplane (Endress+Hauser Service).
242	Firmware incomp.	F	On	On	
243	Firmware failure	F	On	On	
261	Electronics module	F	On	On	Electronics module defective 1. Replace the module. 2. Contact Endress+Hauser Service.
262	Module connection	F	On	On	Electronics module not communicating 1. Check the module , replace it if necessary. 2. Contact Endress+Hauser Service.
263	Incomp. detected	F	On	On	Wrong type of electronics module 1. Replace the module. 2. Contact Endress+Hauser Service.
284	Firmware update	M	On	Off	Update completed successfully

No.	Message	Factory settings			Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>	
285	Update error	F	On	On	Firmware update failed 1. Repeat. 2. SD card error → use another card. 3. Incorrect firmware → repeat with suitable firmware. 4. Contact Endress+Hauser Service.
302	Battery low	M	On	Off	Buffer battery of real time clock is low The date and time are lost if the power is interrupted. ► Contact Endress+Hauser Service (battery replacement).
304	Module data	F	On	On	At least 1 module has incorrect configuration data 1. Check the system information. 2. Contact Endress+Hauser Service.
305	Power consumption	F	On	On	Total power consumption too high 1. Check installation. 2. Remove sensors/modules.
306	Software error	F	On	On	Internal firmware error ► Contact Endress+Hauser Service.
366	Module connection	F	On	On	No communication with the actuator module ► Check the internal connecting cable to the 11F module.
370	Internal voltage	F	On	On	Internal voltage outside the valid range 1. Check supply voltage. 2. Check inputs and outputs for short-circuiting.
373	Electronictemp. high	M	On	Off	High electronics temperature ► Check ambient temperature and energy consumption.
374	Sensor check	F	On	Off	No measurement signal from sensor 1. Check sensor connection. 2. Check the sensor, replace it if necessary.
401	Factory reset	F	On	On	Factory reset is performed
403	Device verification	M	Off	Off	Device verification active, please wait
405	Service IP active	C	Off	Off	Endress+Hauser Service switch is switched on The device can be addressed at 192.168.1.212. ► Switch off the service switch to change to the saved IP settings.
406	Param. active	C	Off	Off	► Wait for configuration to be finished.
407	Diag. setup active	C	Off	Off	► Wait for maintenance to be finished.
412	Writing backup	F	On	Off	► Wait for the write process to be finished
413	Reading backup	F	On	Off	► Wait.

No.	Message	Factory settings			Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>	
436	SD card (80%)	M	On	Off	SD card 80% full <ol style="list-style-type: none"> <li>1. Replace SD card with empty card.</li> <li>2. Clear SD card.</li> <li>3. Set logbook properties to ring buffer (<b>Setup/General settings/Logbooks</b>).</li> </ol>
437	SD card (100%)	M	On	Off	SD card 100% full. No longer possible to write to the card. <ol style="list-style-type: none"> <li>1. Replace SD card with empty card.</li> <li>2. Clear SD card.</li> <li>3. Set logbook properties to ring buffer (<b>Setup/General settings/Logbooks</b>).</li> </ol>
438	SD card removed	M	On	Off	SD card not plugged in <ol style="list-style-type: none"> <li>1. Check SD card.</li> <li>2. Replace SD card.</li> <li>3. Disable logging.</li> </ol>
455	Mathemat. function	F	On	On	Mathematical function: fault condition <ol style="list-style-type: none"> <li>1. Check mathematical function.</li> <li>2. Check assigned input variables.</li> </ol>
460	Output below limit	S	On	Off	Reasons <ul style="list-style-type: none"> <li>▪ Sensor in air</li> <li>▪ Air pockets in assembly</li> <li>▪ Sensor fouled</li> <li>▪ Incorrect flow to sensor</li> </ul> <ol style="list-style-type: none"> <li>1. Check sensor installation.</li> <li>2. Clean the sensor.</li> <li>3. Change assignment of current outputs.</li> </ol>
461	Output above limit	S	On	Off	
502	No text catalog	F	On	On	► Contact Endress+Hauser Service.
503	Language change	M	On	Off	Language change failed ► Contact Endress+Hauser Service.
529	Diag. setup active	C	Off	Off	► Wait for maintenance to be finished.
530	Logbook at 80%	M	On	Off	<ol style="list-style-type: none"> <li>1. Save the logbook to the SD card and then delete the logbook in the device.</li> <li>2. Set memory to circular buffer.</li> <li>3. Deactivate logbook.</li> </ol>
531	Logbook full	M	On	Off	
532	License error	M	On	Off	
540	Parameter save fail	M	On	Off	Storage of configuration has failed ► Repeat.
541	Parameter load ok	M	On	Off	Configuration successfully loaded
542	Parameter load fail	M	On	Off	Loading of configuration has failed ► Repeat.
543	Parameter load abort	M	On	Off	Configuration loading aborted
544	Parameter reset ok	M	On	Off	Factory default successful
545	Parameter reset fail	M	On	Off	Setting of device configuration to factory setting has failed



No.	Message	Factory settings			Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>	
583	SD card write protected	M	On	Off	SD card write-protected. Not possible to write to the card.  <ol style="list-style-type: none"> <li>1. Remove the write protection from the SD card.</li> <li>2. Replace the SD card with an SD card that does not have write protection.</li> <li>3. Set logbook properties to ring buffer (<b>Setup/General settings/Logbooks</b>).</li> </ol>
906	Cat.exchanger failure	F	On	Off	Invalid values for conductivity or flow  <ol style="list-style-type: none"> <li>1. Check for valid measured values in the menu of the mathematical function.</li> <li>2. Check sensors.</li> <li>3. Check minimum flow.</li> </ol>
907	Cat.exchanger warning	S	On	Off	Limit values exceeded for conductivity or flow. Possible reasons: <ul style="list-style-type: none"> <li>■ Resin depleted</li> <li>■ Blocked pipe</li> </ul> <p>► Check application.</p>
908	IEX capacity low	M	On	Off	The capacity of the exchange resin will soon be exhausted.  <p>► Schedule resin regeneration or replacement.</p>
909	IEX capacity exhausted	F	On	Off	The capacity of the exchange resin is exhausted.  <p>► Regenerate or replace the resin.</p>
910	Limit switch	S	On	Off	Limit switch activated
937	Controlled variable	S	On	Off	Controller input warning Status of the controller variable is not OK  <p>► Check application.</p>
938	Controller setpoint	S	On	Off	Controller input warning Status of set point is not OK  <p>► Check application.</p>
939	Control. disturbance	S	On	Off	Controller input warning Status of disturbance variable is not OK  <p>► Check application.</p>
951 - 958	Hold active CH1 ..	C	On	Off	Output values and status of the channels are on hold.  <p>► Wait until the hold is deactivated.</p>
961 - 968	Diagnostic module 1 (961) ... Diagnostic module 8 (968)	S	Off	Off	Diagnostic module is enabled
969	Modbus Watchdog	S	Off	Off	The device did not receive a Modbus telegram from the master within the specified time. The status of received Modbus process values is set to invalid
970	Curr. input overload	S	On	On	Current input overloaded The current input is switched off at 23 mA and above due to overload and reactivated automatically when a normal load is present.
971	Current Input low	S	On	On	Current input too low At 4 to 20 mA, the input current is less than the lower fault current.  <p>► Check the input for short-circuit.</p>

No.	Message	Factory settings			Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>	
972	Curr. input > 20 mA	S	On	On	Output current above current output range
973	Current Input < 4 mA	S	On	On	Output current below current output range
974	Diagnostics confirm.	C	Off	Off	User has acknowledged the message displayed in the measuring menu.
975	Device restart	C	Off	Off	Device reset
976	PFM/PWM value high	S	On	Off	Pulse frequency modulation: Measured value above/below the specified output signal range. <ul style="list-style-type: none"> <li>■ Sensor in air</li> <li>■ Air pockets in assembly</li> <li>■ Incorrect flow to sensor</li> <li>■ Sensor fouled</li> </ul> <ol style="list-style-type: none"> <li>1. Clean the sensor</li> <li>2. Check plausibility.</li> <li>3. Adjust the PFM configuration.</li> </ol>
977	PFM/PWM value low	S	On	Off	
978	Chemoclean Failsafe	S	On	On	No feedback signal detected within the configured period. <ol style="list-style-type: none"> <li>1. Check application.</li> <li>2. Check wiring.</li> <li>3. Extend the duration.</li> <li>4. Carry out active reset of <b>Failsafe</b>. Path: <b>Menu/Setup/Additional functions/Cleaning Cleaning x/Stop failsafe</b></li> </ol>
990	Deviation limit	F	On	On	Redundancy: Percentage deviation value above limit value
991	CO <sub>2</sub> conc. range	F	On	On	CO <sub>2</sub> concentration (degassed conductivity) outside the measuring range
992	pH calculation range	F	On	On	pH calculation outside the measuring range
993	rH calculation range	F	On	On	rH calculation outside the measuring range
994	Difference conduct.	F	On	On	Dual conductivity outside the measuring range

- 1) **Status signal**  
 2) **Diagnostic message**  
 3) **Failure current**

### 12.6.2 Sensor-specific diagnostic messages

The following abbreviations for the various sensor types are used in the table:

- P ... pH/ORP (general, applies for all pH sensors)
  - P (glass) ... only applies for glass electrodes
  - P (ISFET) ... only applies for ISFET sensors
- C ... conductivity (general, applies for all conductivity sensors)
  - C (cond.) ... only applies for sensors with conductive measurement of conductivity
  - C (ind.) ... only applies for sensors with inductive measurement of conductivity
- O ... oxygen (general, applies for all oxygen sensors)
  - O (opt.) ... only applies for optical oxygen sensors
  - O (amp.) ... only applies for amperometric oxygen sensors
- N ... nitrate sensors
- T ... turbidity and solids sensors
- S ... SAC sensors
- U ... interface sensors
- I ... ion-selective sensors
- DI ... disinfection sensors

- SC ... spectrometer for water analysis
- FL ... sensors for fluorescence measurement
- Spc ... spectrometer

No.	Message	Factory settings			Sensor type	Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>		
002	Sensor unknown	F	On	On	All	► Replace sensor.
004	Sensor defective	F	On	On	All	
005	Sensor data invalid	F	On	On	All	<ol style="list-style-type: none"> <li>1. Check the firmware compatibility of the sensor and transmitter or load suitable firmware</li> <li>2. Set the sensor to the factory settings, disconnect the sensor and reconnect it.</li> <li>3. Update transmitter data</li> <li>4. Replace sensor.</li> </ol>
010	Sensor scanning	F	Off	On	All	► Wait for initialization to be finished.
012	Writing data failed	F	On	On	All	<ol style="list-style-type: none"> <li>1. Repeat write process.</li> <li>2. Replace sensor.</li> </ol>
013	Sensor type wrong	F	On	On	All	<p>Sensor does not suit the device configuration or device configuration must be changed to new type of sensor</p> <ol style="list-style-type: none"> <li>1. Change to a sensor of the type that is configured.</li> <li>2. Adapt the device configuration to the connected sensor.</li> </ol>
018	Sensor not ready	F	On	On	All	<p>Sensor communication blocked</p> <ol style="list-style-type: none"> <li>1. Sensor fails tag check. Replace.</li> <li>2. Internal software error. Contact the Service Department.</li> </ol>
022	Temperature sensor	F	On	On	P, C, O, I, DI, SC, FL	<p>Temperature sensor defective</p> <p>► Replace sensor.</p>
061	Sensor electronic	F	On	On	All	<p>Sensor electronics defective</p> <p>► Replace sensor.</p>
062	Sensor connection	F	On	On	All	<ol style="list-style-type: none"> <li>1. Check sensor connection.</li> <li>2. Contact Service Department.</li> </ol>
081	Initialization	F	On	On	All	► Wait for initialization to be finished.
100	Sensor communication	F	On	On	All	<p>Sensor not communicating</p> <ol style="list-style-type: none"> <li>1. Check sensor connection.</li> <li>2. Check sensor connector.</li> <li>3. Contact Service Department.</li> </ol>
101	Sensor incompatible	F	On	On	All	<ol style="list-style-type: none"> <li>1. Update sensor firmware</li> <li>2. Replace sensor.</li> <li>3. Contact Service Department.</li> </ol>
102	Calibration timer	M	On	Off	All except SC, FL	<p>Calibration interval elapsed. Measurement can still take place.</p> <p>► Calibrate sensor.</p>
103	Calibration timer	M	On	Off	All except SC, FL	<p>Calibration interval will elapse soon. Measurement can still take place.</p> <p>► Calibrate sensor.</p>

No.	Message	Factory settings			Sensor type	Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>		
104	Calibration validity	M	On	Off	All	Last calibration no longer valid. Measurement can still take place. ► Calibrate sensor.
105	Calibration validity	M	On	Off	All	Last calibration will lose its validity soon. Measurement can still take place. ► Calibrate sensor.
106	Sensor TAG	F	On	On	All	Sensor has invalid tag or tag group
107	Calibration active	C	On	Off	P, C, O, I, DI	► Wait for calibration to be finished.
108	SIP, CIP, autoclaving	M	On	Off	P, C, O	Specified number of sterilizations will soon be reached. Measurement can still take place. ► Replace sensor.
109	SIP, CIP, autoclav cap	M	On	Off	O (amp.)	Specified number of sterilizations for the cap is reached. Measurement can still take place. ► Replace membrane cap.
110	Init. channel	F	On	On	All except SC	Channel initialization has failed. Measuring operation not possible. ► Contact Service Department.
111	Operating time cap	M	On	Off	DI	Hours of operation monitoring The limit set for the total hours of operation for the cap has been reached. Measurement can still take place. <b>1.</b> Replace the cap. <b>2.</b> Change monitoring limit.
113	Incompatible filter	F	On	On	O (opt)	Incompatible filter setting in the sensor <b>1.</b> Switch to valid measurement filter (sensor settings). <b>2.</b> Update the device firmware. <b>3.</b> Contact Service Department.
114	Temp.offset high	M	On	Off	All except U, SC, FL	Calibration alarm: Limit values for temperature offset exceeded <b>1.</b> Check temperature sensor. <b>2.</b> Replace sensor.
115	Temp. offset low	M	On	Off	All except U, SC, FL	
116	Temp. slope high	M	On	Off	All except U, SC, FL	Calibration alarm: Limit values for temperature slope exceeded Sensor old or defective <b>1.</b> Repeat calibration. <b>2.</b> Replace sensor.
117	Temp. slope low	M	On	Off	All except U, SC, FL	
118	Sensor glass break.	F	On	Off	P (glass)	Glass breakage warning, impedance of pH glass too low Measuring can continue until the alarm (118) occurs. <b>1.</b> Inspect sensor for hair-line cracks and breakage. <b>2.</b> Check medium temperature. <b>3.</b> Replace sensor.
119	Sensor check	M	On	Off	P (glass)	

No.	Message	Factory settings			Sensor type	Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>		
120	Sensor reference	F	On	Off	P (glass)	Reference warning, impedance of reference too low
121	Sensor reference	M	On	Off	P (glass)	Measuring can continue until the alarm (120) occurs. <ol style="list-style-type: none"> <li>1. Check reference for clogging/contamination.</li> <li>2. Clean reference/junction.</li> <li>3. Replace sensor.</li> </ol>
122	Sensor glass	F	On	Off	P (glass)	Impedance limit values exceeded/undershot Measuring can continue until the alarm (122, 124) occurs. <ol style="list-style-type: none"> <li>1. Inspect sensor for hair-line cracks and breakage.</li> <li>2. Check or change limit values.</li> <li>3. Replace sensor.</li> </ol>
123	Sensor glass	M	On	On	P (glass)	
124	Sensor glass	M	On	Off	P (glass)	
125	Sensor glass	F	On	Off	P (glass)	
126	Sensor check	M	On	Off	P (glass)	Sensor condition check (SCC), poor sensor condition Glass membrane fouled or dry, junction blocked <ol style="list-style-type: none"> <li>1. Clean sensor, regenerate</li> <li>2. Replace sensor.</li> </ol>
127	Sensor check	M	On	Off	P (glass)	Sensor condition check (SCC), adequate sensor condition
128	Sensor leakage	F	On	Off	P (ISFET), O (amp.), DI	Leak current alarm Defective due to abrasion or damage Damage to the gate (only ISFET) ► Replace sensor.
129	Sensor leakage	F	On	Off	P (ISFET), O (amp.), DI	Leak current warning Measuring can continue until the alarm occurs
130	Sensor supply	F	On	Off	P, O, I, DI	Poor sensor power supply <ol style="list-style-type: none"> <li>1. Check sensor connection.</li> <li>2. Replace sensor.</li> </ol>
131	Sensor calibration	M	On	Off	O (opt.)	Limit values for sensor relaxation time (fluorescence decay time) exceeded/undershot Reasons: high oxygen content, incorrect calibration <ol style="list-style-type: none"> <li>1. Repeat calibration.</li> <li>2. Replace sensor cap.</li> <li>3. Contact Service Department.</li> </ol>
132	Sensor calibration	M	On	Off	O (opt.)	
133	Sensor signal	F	On	Off	O (opt.)	No signal (fluorescence decay) <ol style="list-style-type: none"> <li>1. Replace sensor cap.</li> <li>2. Contact Service Department.</li> </ol>
134	Sensor signal	M	On	Off	O (opt.)	Low signal amplitude. Measurement can still take place. <ol style="list-style-type: none"> <li>1. Replace sensor cap.</li> <li>2. Contact Service Department.</li> </ol>

No.	Message	Factory settings			Sensor type	Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>		
135	Sensor temp. low	S	On	Off	O	Temperature outside specification 1. Check process. 2. Check installation.
136	Sensor temp. high	S	On	Off	O, Spc	
137	Sensor LED	F	On	Off	O (opt.)	Sensor LED: no voltage ► Contact Service Department.
138	Sensor LED	F	On	Off	O (opt.)	Sensor LED: no power ► Contact Service Department.
140	Sensor check	F	On	Off	O	Sensor range errors ► Contact Service Department.
141	Polarization	F	On	Off	C (cond.)	Polarization warning The measured value is corrupted at high conductivity levels. ► Use a sensor with a larger cell constant.
142	Sensor signal	F	On	Off	C	Reasons: sensor in air, sensor defective 1. Check installation. 2. Replace sensor.
143	Sensor check	F	On	Off	C	Sensor self-test error 1. Replace sensor. 2. Contact Service Department.
144	Conductivity range	S	Off	On	C	Conductivity outside measuring range ► Use a sensor with a suitable cell constant.
146	Sensor temperature	S	Off	Off	C, N, T, S, FL	Temperature outside specification 1. Check the temperature. 2. Check electrode system. 3. Replace sensor type.
147	Sensor check	F	On	On	C (ind.)	Coil transmission current too high Reasons: transmission coil short-circuit, inductance too low 1. Replace sensor. 2. Contact Service Department.
148	Sensor check	F	On	On	C (ind.)	Reasons: transmission coil interrupted, inductance too high 1. Replace sensor. 2. Contact Service Department.
149	Sensor LED	F	On	On	T	Sensor LED error 1. Replace sensor. 2. Contact Service Department.
151	Sensor buildup	F	On	On	T	Buildup, high degree of contamination 1. Clean sensor. 2. Replace sensor. 3. Contact Service Department.
152	Sensor data invalid	M	Off	Off	C (ind.)	No calibration data ► Perform air set calibration.

No.	Message	Factory settings			Sensor type	Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>		
153	Sensor defective	F	On	On	N, T, S	Sensorlamp defective Reasons: aging, end of operating life, mechanical disturbance/vibration <b>1.</b> Replace sensor. <b>2.</b> Contact Service Department.
154	Sensor data invalid	M	Off	Off	C	Factory calibration is used ► Calibrate.
155	Sensor defective	F	On	On	N, T, S	Sensor defective Error with analog evaluation <b>1.</b> Replace sensor. <b>2.</b> Contact Service Department.
156	Organic pollution	F	On	On	N, T, S	Excessive organic fouling Reasons: sensor fouling, high organic content, incorrect orientation <b>1.</b> Clean sensor <b>2.</b> Install automatic cleaning. <b>3.</b> Check application.
157	Filter change	M	On	Off	N, S	Optical filter must be replaced Reasons: long period of operation, moisture in sensor ► Contact Service Department.
158	Sensor check	F	On	Off	N, T, S	Invalid measured value <b>1.</b> Check sensor power supply. <b>2.</b> Restart the device. <b>3.</b> Contact Service Department.
159	Sensor check	F	On	Off	N, T, S	Uncertain measured value Reasons: sensor fouling, incorrect application <b>1.</b> Clean sensor. <b>2.</b> Check application.
160	Sensor data invalid	F	On	Off	N, T, S, DI, SC, FL	No calibration data Reasons: data deleted <b>1.</b> Select other data record. <b>2.</b> Use factory calibration. <b>3.</b> Contact Service Department.
161	Filter change	F	On	Off	N, T, S	Filter needs to be changed Reasons: long period of operation, moisture in sensor ► Contact Service Department.
162	Install.factor	M	On	Off	C (ind.)	Installation factor exceeded/undershot, alarm
163	Install.factor	M	On	Off	C (ind.)	Reason: distance between wall and sensor too small (< 15 mm) <b>1.</b> Check pipe diameter. <b>2.</b> Clean sensor. <b>3.</b> Calibrate sensor.

No.	Message	Factory settings			Sensor type	Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>		
164	Sensor data invalid	M	Off	Off	C	No temperature calibration data Factory calibration is used 1. Check process. 2. Check or replace sensor.
168	Polarization	S	On	Off	C (cond.)	Polarization warning The measured value is corrupted at high conductivity levels. ► Use a sensor with a larger cell constant.
169	Operating time	M	On	Off	S	Operating hours, conc. > 200 mg/l, measurement can still take place 1. Replace sensor. 2. Change monitoring limit. 3. Disable monitoring.
170	Operating time	M	On	Off	S	Operating hours, conc. < 50 mg/l, measurement can still take place 1. Replace sensor. 2. Change monitoring limit. 3. Disable monitoring.
171	Lamp change	M	On	Off	N, T, S, SC	Lamp change recommended
172	Echo lost	F	On	On	U	Echo signal lost
173	Sludge level	F	On	On	U	Incorrect separation zone measurement ► Replace sensor.
174	Turbid. failure	F	On	On	U	Incorrect turbidity measurement ► Replace sensor.
175	Wiper failure	F	On	On	U	Wiper not working ► Clean or replace sensor.
176	Operating time	M	On	Off	DI	Operating hours > 100 nA, measurement can still take place 1. Replace sensor. 2. Change monitoring limit. 3. Disable monitoring.
177	Operating time	M	On	Off	DI	Operating hours > 20 nA, measurement can still take place 1. Replace sensor. 2. Change monitoring limit. 3. Disable monitoring.
178	Operating time	M	On	Off	DI	Operating hours > 15 °C, measurement can still take place 1. Replace sensor. 2. Change monitoring limit. 3. Disable monitoring.
179	Operating time	M	On	Off	P	Operating hours > 300 mV, measurement can still take place 1. Replace sensor. 2. Change monitoring limit. 3. Disable monitoring.



No.	Message	Factory settings			Sensor type	Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>		
180	Operating time	M	On	Off	P	Operating hours < -300 mV, measurement can still take place 1. Replace sensor. 2. Change monitoring limit. 3. Disable monitoring.
181	Operating time	M	On	Off	O (opt.)	Operating hours < 25 µS, measurement can still take place 1. Replace sensor. 2. Change monitoring limit. 3. Disable monitoring.
182	Operating time	M	On	Off	O (opt.)	Operating hours > 40 µS, measurement can still take place 1. Replace sensor. 2. Change monitoring limit. 3. Disable monitoring.
183	Operating time	M	On	Off	O (amp.)	Operating hours > 10 nA (COS51D), measurement can still take place 1. Replace sensor. 2. Change monitoring limit. 3. Disable monitoring.
184	Operating time	M	On	Off	O (amp.)	Operating hours > 30 nA (COS22D), measurement can still take place 1. Replace sensor. 2. Change monitoring limit. 3. Disable monitoring.
185	Operating time	M	On	Off	O (amp.)	Operating hours > 40 nA (COS51D), measurement can still take place 1. Replace sensor. 2. Change monitoring limit. 3. Disable monitoring.
186	Operating time	M	On	Off	O (amp.)	Operating hours > 160 nA (COS22D), measurement can still take place 1. Replace sensor. 2. Change monitoring limit. 3. Disable monitoring.
187	Operating time	M	On	Off	C	Operating hours > 80 °C, 100 nS/cm, measurement can still take place 1. Replace sensor. 2. Change monitoring limit. 3. Disable monitoring.
188	Operating time	M	On	Off	C, O	Operating hours < 5 °C, measurement can still take place 1. Replace sensor. 2. Change monitoring limit. 3. Disable monitoring.

No.	Message	Factory settings			Sensor type	Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>		
189	Operating time	M	On	Off	O	Operating hours > 5 °C, measurement can still take place <ol style="list-style-type: none"> <li>1. Replace sensor.</li> <li>2. Change monitoring limit.</li> <li>3. Disable monitoring.</li> </ol>
190	Operating time	M	On	Off	O	Operating hours > 25 °C, measurement can still take place <ol style="list-style-type: none"> <li>1. Replace sensor.</li> <li>2. Change monitoring limit.</li> <li>3. Disable monitoring.</li> </ol>
191	Operating time	M	On	Off	O, I, DI	Operating hours > 30 °C, measurement can still take place <ol style="list-style-type: none"> <li>1. Replace sensor.</li> <li>2. Change monitoring limit.</li> <li>3. Disable monitoring.</li> </ol>
192	Operating time	M	On	Off	O, I	Operating hours > 40 °C, measurement can still take place <ol style="list-style-type: none"> <li>1. Replace sensor.</li> <li>2. Change monitoring limit.</li> <li>3. Disable monitoring.</li> </ol>
193	Operating time	M	On	Off	P, C, O	Operating hours > 80 °C, measurement can still take place <ol style="list-style-type: none"> <li>1. Replace sensor.</li> <li>2. Change monitoring limit.</li> <li>3. Disable monitoring.</li> </ol>
194	Operating time	M	On	Off	P	Operating hours > 100 °C, measurement can still take place <ol style="list-style-type: none"> <li>1. Replace sensor.</li> <li>2. Change monitoring limit.</li> <li>3. Disable monitoring.</li> </ol>
195	Operating time	M	On	Off	C	Operating hours > 120 °C, measurement can still take place <ol style="list-style-type: none"> <li>1. Replace sensor.</li> <li>2. Change monitoring limit.</li> <li>3. Disable monitoring.</li> </ol>
196	Operating time	M	On	Off	C	Operating hours > 125 °C, measurement can still take place <ol style="list-style-type: none"> <li>1. Replace sensor.</li> <li>2. Change monitoring limit.</li> <li>3. Disable monitoring.</li> </ol>
197	Operating time	M	On	Off	C	Operating hours > 140 °C, measurement can still take place <ol style="list-style-type: none"> <li>1. Replace sensor.</li> <li>2. Change monitoring limit.</li> <li>3. Disable monitoring.</li> </ol>

No.	Message	Factory settings			Sensor type	Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>		
198	Operating time	M	On	Off	C	Operating hours > 150 °C, measurement can still take place <ol style="list-style-type: none"> <li>1. Replace sensor.</li> <li>2. Change monitoring limit.</li> <li>3. Disable monitoring.</li> </ol>
199	Operating time	M	On	Off	All except U	The limit set for the total operating hours has been reached. Measurement can still take place. <ol style="list-style-type: none"> <li>1. Replace sensor.</li> <li>2. Change monitoring limit.</li> </ol>
215	Simulation active	C	On	Off	All	Simulation active End simulation by changing to measuring mode.
408	Calibration aborted	M	Off	Off	P, C, O, I, DI	Calibration aborted
500	Sensor calibration	M	On	Off	All, except SC, FL	Calibration aborted, main measured value varies Reasons: sensor too old, sensor occasionally dry, calibration value not constant <ol style="list-style-type: none"> <li>1. Check sensor.</li> <li>2. Check calibration solution.</li> </ol>
501	Sensor calibration	M	On	Off	All except U, SC, FL	Calibration aborted, temperature measured value varies Reasons: sensor too old, sensor occasionally dry, temperature of calibration solution not constant <ol style="list-style-type: none"> <li>1. Check sensor.</li> <li>2. Regulate calibration solution temperature.</li> </ol>
505	Sensor calibration	M	On	Off	P, O, I, DI	Max. zero point warning, measurement can still take place Possible reasons: sensor old or defective, reference blocked, calibration solution too old or contaminated <ol style="list-style-type: none"> <li>1. Check or replace sensor.</li> <li>2. Check or replace calibration solution.</li> <li>3. Repeat calibration.</li> </ol>
507	Sensor calibration	M	On	Off	P, O, I, DI	Min. zero point warning, measurement can still take place Possible reasons: sensor old or defective, reference blocked, calibration solution too old or contaminated <ol style="list-style-type: none"> <li>1. Check or replace sensor.</li> <li>2. Check or replace calibration solution.</li> <li>3. Repeat calibration.</li> </ol>

No.	Message	Factory settings			Sensor type	Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>		
509	Sensor calibration	M	On	Off	P, O, I, DI	<p>Min. slope warning, measurement can still take place</p> <p>Possible reasons: sensor old or defective, reference blocked, calibration solution too old or contaminated</p> <ol style="list-style-type: none"> <li>1. Check or replace sensor.</li> <li>2. Check or replace calibration solution.</li> <li>3. Repeat calibration.</li> </ol>
511	Sensor calibration	M	On	Off	P, O, I, DI	<p>Max. slope warning, measurement can still take place</p> <p>Possible reasons: sensor old or defective, reference blocked, calibration solution too old or contaminated</p> <ol style="list-style-type: none"> <li>1. Check or replace sensor.</li> <li>2. Check or replace calibration solution.</li> <li>3. Repeat calibration.</li> </ol>
513	Zero warning	M	On	Off	O (amp.), DI	<p>Zero point warning, measurement can still take place</p> <p>Possible reasons: sensor old or defective, reference blocked, calibration solution too old or contaminated</p> <ol style="list-style-type: none"> <li>1. Check or replace sensor.</li> <li>2. Check or replace calibration solution.</li> <li>3. Repeat calibration.</li> </ol>
515	Sensor calibration	M	On	Off	P (ISFET)	<p>Max. operating point warning, measurement can still take place</p> <p>Possible reasons: sensor old or defective, reference blocked, calibration solution too old or contaminated</p> <ol style="list-style-type: none"> <li>1. Check or replace sensor.</li> <li>2. Check or replace calibration solution.</li> <li>3. Repeat calibration.</li> </ol>
517	Sensor calibration	M	On	Off	P (ISFET)	<p>Min. operating point warning, measurement can still take place</p> <p>Possible reasons: sensor old or defective, reference blocked, calibration solution too old or contaminated</p> <ol style="list-style-type: none"> <li>1. Check or replace sensor.</li> <li>2. Check or replace calibration solution.</li> <li>3. Repeat calibration.</li> </ol>

No.	Message	Factory settings			Sensor type	Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>		
518	Sensor calibration	M	On	Off	P, O, I, DI	Delta slope warning, measurement can still take place Possible reasons: sensor old or defective, reference blocked, calibration solution too old or contaminated <ol style="list-style-type: none"><li>1. Check or replace sensor.</li><li>2. Check or replace calibration solution.</li><li>3. Repeat calibration.</li></ol>
520	Sensor calibration	M	On	Off	P, O, I, DI	Delta zero point warning, measurement can still take place Possible reasons: sensor old or defective, reference blocked, calibration solution too old or contaminated <ol style="list-style-type: none"><li>1. Check or replace sensor.</li><li>2. Check or replace calibration solution.</li><li>3. Repeat calibration.</li></ol>
522	Sensor calibration	M	On	Off	P (ISFET)	Delta operating point warning, measurement can still take place Possible reasons: sensor old or defective, reference blocked, calibration solution too old or contaminated <ol style="list-style-type: none"><li>1. Check or replace sensor.</li><li>2. Check or replace calibration solution.</li><li>3. Repeat calibration.</li></ol>
534	Electrolyte warning	M	On	Off	DI	Electrolyte consumption warning The limit set for the electrolyte capacity has been reached. <ol style="list-style-type: none"><li>1. Replace electrolyte.</li><li>2. Reset consumption counter.</li><li>3. Replace sensor.</li></ol>
535	Sensor check	M	On	Off	O (amp.), DI	Specified number of cap calibrations is reached Measurement can still take place. ► Replace sensor cap.
550	Process temperature	S	On	On	C	Process temperature above/below concentration table ■ Process value outside specifications ■ Table incomplete ► Extend table.
551	Process temperature	S	On	On	C	
552	Conductivity low	S	On	On	C	Process concentration above/below concentration table ■ Process value outside specifications ■ Table incomplete ► Extend table.
553	Conductivity high	S	On	On	C	
554	Concentration low	S	On	On	C	Process concentration above/below concentration table ■ Process value outside specifications ■ Table incomplete ► Extend table.
555	Concentration high	S	On	On	C	

No.	Message	Factory settings			Sensor type	Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>		
556	Temperature low	S	On	On	C	Process temperature above/below compensation table ■ Process value outside specifications ■ Table incomplete ► Extend table.
557	Temperature high	S	On	On	C	
558	Conductivity low	S	On	On	C	Process conductivity above/below compensation table ■ Process value outside specifications ■ Table incomplete ► Extend table.
559	Conductivity high	S	On	On	C	
560	Conduc. compensation	S	On	On	C	Conductivity compensation above/below compensation table ■ Process value outside specifications ■ Table incomplete ► Extend table.
561	Conduc. compensation	S	On	On	C	
566	Package incompatible	C	On	Off	SC	Incompatible model package ► Check the configuration of the assigned outputs, measuring settings and application calibration.
720	Membrane change	M	On	Off	I	Membrane cap must be replaced 1. Replace membrane cap. 2. Reset timer.
722	Sensor reference	F	On	On	P	Alarm: Reference membrane impedance too low. 1. Check or replace sensor. 2. Check/correct reference limit value.
723	Sensor reference	M	On	Off	I	Warning: Reference membrane impedance too low. Can continue measuring until the alarm occurs. 1. Check or replace sensor. 2. Check/correct reference limit value.
724	Sensor reference	F	On	On	I	Alarm: Reference membrane impedance too high. 1. Check or replace sensor. 2. Check/correct reference limit value.
725	Sensor reference	M	On	Off	I	Warning: Reference membrane impedance too high. Can continue measuring until the alarm occurs. 1. Check or replace sensor. 2. Check/correct reference limit value.

No.	Message	Factory settings			Sensor type	Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>		
734	Calibration quality	M	On	Off	O (opt.)	Warning: The calibration quality index indicates a substantial change since the last calibration. Measurement can still take place. <b>1.</b> Repeat calibration. <b>2.</b> Check the sensor and replace if necessary.
740	Sensor defective	F	On	On	C (only four-pin sensor)	Internal electrode failure <b>1.</b> Replace sensor. <b>2.</b> Contact Service Department.
771	Lamp change	F	On	Off	N, T, S, SC	Lamp change alarm Configured operating time has been reached ► Contact the Service Department to have the lamp replaced.
772	Lamp change	M	On	Off		Lamp change warning Possible reasons: remaining lamp intensity low, lamp service life was not reset after lamp replacement <b>1.</b> Replace lamp and reset lamp service life. <b>2.</b> Contact Service Department.
773	Lamp change	F	On	On		Lamp change alarm Possible reasons: remaining lamp intensity low, lamp service life was not reset after lamp replacement <b>1.</b> Replace lamp and reset lamp service life. <b>2.</b> Contact Service Department.
774	Lamp defective	F	On	On		Possible reasons: cable defective, lamp defective <b>1.</b> Check cable. <b>2.</b> Replace lamp. <b>3.</b> Contact Service Department.
832	Temp. range exceeded	S	Off	Off	All except U, FL	Outside temperature specification <b>1.</b> Check application. <b>2.</b> Check temperature sensor.
841	Operating range	S	Off	Off	All except FL	Process value outside operational range <b>1.</b> Check application. <b>2.</b> Check sensor.
842	Process value	S	Off	Off	P	Process limit value exceeded/undershot
843	Process value	S	Off	Off	P	Reasons: sensor in air, air pockets in assembly, incorrect flow to sensor, sensor defective <b>1.</b> Change process value. <b>2.</b> Check electrode system. <b>3.</b> Change sensor type.

No.	Message	Factory settings			Sensor type	Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>		
844	Process value	S	Off	Off	N, T, S	<p>Measured value outside specified range</p> <p>Reasons: sensor in air, air pockets in assembly, incorrect flow to sensor, sensor defective</p> <ol style="list-style-type: none"> <li>1. Increase process value.</li> <li>2. Check electrode system.</li> <li>3. Change sensor type.</li> </ol>
904	Process check alarm	F	On	On	All except Phot	<p>Stagnating measuring signal</p> <p>Reasons: sensor in air, sensor fouling, incorrect flow to sensor, sensor defective</p> <ol style="list-style-type: none"> <li>1. Check electrode system.</li> <li>2. Check sensor.</li> <li>3. Restart the device.</li> </ol>
914	USP/ EP alarm	M	On	Off	C	<p>USP limit values exceeded</p> <p>► Check process.</p>
915	USP / EP warning	M	On	Off	C	
934	Process temp. high	S	Off	Off	N, S, U, SC, FL	<p>Process temperature high</p> <ol style="list-style-type: none"> <li>1. Do not increase process temperature.</li> <li>2. Check electrode system.</li> <li>3. Change sensor type.</li> </ol>
935	Process temp. low	S	Off	Off	N, S, U, SC, FL	<p>Process temperature low</p> <ol style="list-style-type: none"> <li>1. Do not lower process temperature.</li> <li>2. Check electrode system.</li> <li>3. Change sensor type.</li> </ol>
942	Process value	S	Off	Off	N, P, U	<p>Process value high</p> <ol style="list-style-type: none"> <li>1. Do not increase process value.</li> <li>2. Check electrode system.</li> <li>3. Change sensor type.</li> </ol>
943	Process value	S	Off	Off	N, P, U	<p>Process value low</p> <ol style="list-style-type: none"> <li>1. Do not decrease process value.</li> <li>2. Check electrode system.</li> <li>3. Change sensor type.</li> </ol>
944	Sensor range	S	On	Off	S, U, FL	<p>Measurement at periphery of sensor dynamic range</p> <p>Reasons: changes in process to a higher or lower measuring range</p> <ol style="list-style-type: none"> <li>1. Check application.</li> <li>2. Use sensor that suits the measuring range of the application.</li> </ol>
945	pH value high	S	On	Off	DI	<p>Warning maximum pH value exceeded</p> <ol style="list-style-type: none"> <li>1. Check application.</li> <li>2. Check pH sensor.</li> </ol>
946	pH value low	S	On	Off	DI	<p>Warning minimum pH value not reached. Potential leaking of gaseous chlorine!</p> <ol style="list-style-type: none"> <li>1. Check application.</li> <li>2. Check pH sensor.</li> </ol>



No.	Message	Factory settings			Sensor type	Tests or remedial action
		S <sup>1)</sup>	D <sup>2)</sup>	F <sup>3)</sup>		
950	Process temperature	F	On	On	C	Concentration table (conductivity) Process temperature below the lowest value in the table ► Extend table.
951	Process temperature	F	On	On	C	Concentration table (conductivity) Process temperature above the highest value in the table ► Extend table.
952	Conductivity low	F	On	On	C	Concentration table (conductivity) Process conductivity below the lowest value in the table ► Extend table.
953	Conductivity high	F	On	On	C	Concentration table (conductivity) Process conductivity above the highest value in the table ► Extend table.
954	Concentration low	F	On	On	C	Concentration table (conductivity) Process concentration below the lowest value in the table ► Extend table.
955	Concentration high	F	On	On	C	Concentration table (conductivity) Process concentration above the highest value in the table ► Extend table.
983	Sensor ISE check	F	On	On	I	Electrode or membrane defective 1. Check or replace electrode. 2. Check or replace membrane cap.
984	Process temp. high	S	On	On	I	Temperature outside specification 1. Check process temperature. 2. Check electrode system.
985	Sensor Interface	F	On	On	I	Sensor interface error 1. Check connector. 2. Check or replace cable.
987	Calibration required	M	On	On	I, DI, SC	A calibration is required due to sensor maintenance.

- 1) **Status signal**  
2) **Diagnostic message**  
3) **Failure current**

## 12.7 Pending diagnostic messages

The Diagnostics menu contains all the information on the device status.

Furthermore, various service functions are available.

The following messages are directly displayed every time you enter the menu:

- **Most important message**

Diagnostic message recorded with the highest criticality level

- **Past message**

Diagnostic message whose cause is no longer present.

All the other functions in the Diagnostics menu are described in the following chapters.

## 12.8 Diagnostics list

All the current diagnostic messages are listed here.

A time stamp is available for each message. Furthermore, the user also sees the configuration and description of the message as saved in **Menu/Setup/General settings/Extended setup/Diagnostics settings/Diag. behavior**.

## 12.9 Event logbook

### 12.9.1 Available logbooks

Types of logbooks

- Logbooks physically available (all apart from the overall logbook)
- Database view of all logbooks (= overall logbook)

Logbook	Visible in	Max. entries	Can be disabled <sup>1)</sup>	Logbook can be deleted	Entries can be deleted	Can be exported
Overall logbook	All events	20000	Yes	No	Yes	No
Calibration logbook	Calibration events	75	(Yes)	No	Yes	Yes
Operation logbook	Configuration events	250	(Yes)	No	Yes	Yes
Diagnostics logbook	Diagnostic events	10000	(Yes)	No	Yes	Yes
Version logbook	All events	50	No	No	No	Yes
Hardware version logbook	All events	125	No	No	No	Yes
Data logbook for sensors (optional)	Data logbooks	150 000	Yes	Yes	Yes	Yes
Debugging logbook	Debug events (only accessible by entering the special service activation code)	1000	Yes	No	Yes	Yes

1) Data in brackets means this depends on the overall logbook

### 12.9.2 Logbooks menu


DIAG/Logbooks		
Function	Options	Info
► All events		Chronological list of all the logbook entries, with information on the type of event
► Show	Events are displayed	Select a particular event to display more detailed information.
► Go to date	<b>User entry</b> <ul style="list-style-type: none"> <li>■ Go to date</li> <li>■ Time</li> </ul>	Use this function to go directly to a specific time in the list. In this way, you avoid having to scroll through all the information. The complete list is always visible, however.

DIAG/Logbooks		
Function	Options	Info
► Calibration events		Chronological list of the calibration events
► Show	Events are displayed	Select a particular event to display more detailed information.
► Go to date	<b>User entry</b> <ul style="list-style-type: none"> <li>Go to date</li> <li>Time</li> </ul>	Use this function to go directly to a specific time in the list. In this way, you avoid having to scroll through all the information. The complete list is always visible, however.
▷ Delete all entries	Action	You can delete all the calibration logbook entries here.
► Configuration events		Chronological list of the configuration events
► Show	Events are displayed	Select a particular event to display more detailed information.
► Go to date	<b>User entry</b> <ul style="list-style-type: none"> <li>Go to date</li> <li>Time</li> </ul>	Use this function to go directly to a specific time in the list. In this way, you avoid having to scroll through all the information. The complete list is always visible, however.
▷ Delete all entries	Action	You can use this to delete all the operation logbook entries.
► Diagnostic events		Chronological list of the diagnostics events
► Show	Events are displayed	Select a particular event to display more detailed information.
► Go to date	<b>User entry</b> <ul style="list-style-type: none"> <li>Go to date</li> <li>Time</li> </ul>	Use this function to go directly to a specific time in the list. In this way, you avoid having to scroll through all the information. The complete list is always visible, however.
▷ Delete all entries	Action	You can use this to delete all the diagnostics logbook entries.

You can also view your data logbook entries graphically on the display (**Show plot**).

You can also adapt the display to suit your individual requirements:


- Press the navigator button in the graphic display: you are given additional options such as the zoom function and x/y movement of the graph.
- Define the cursor: if you select this option, you can move along the graph with the navigator and view the logbook entry (data stamp/measured value) in text form for every point in the graph.
- Simultaneous display of two logbooks: **Select 2nd plot** and **Show plot**
  - A small cross marks the currently selected graph for which the zoom can be changed or a cursor used, for example.
  - In the context menu (press the navigator button), you can select the other graph. You can then apply the zoom function, a movement or a cursor to this graph.
  - Using the context menu, you can also select both graphs simultaneously. This enables you to use the zoom function on both graphs simultaneously, for example.

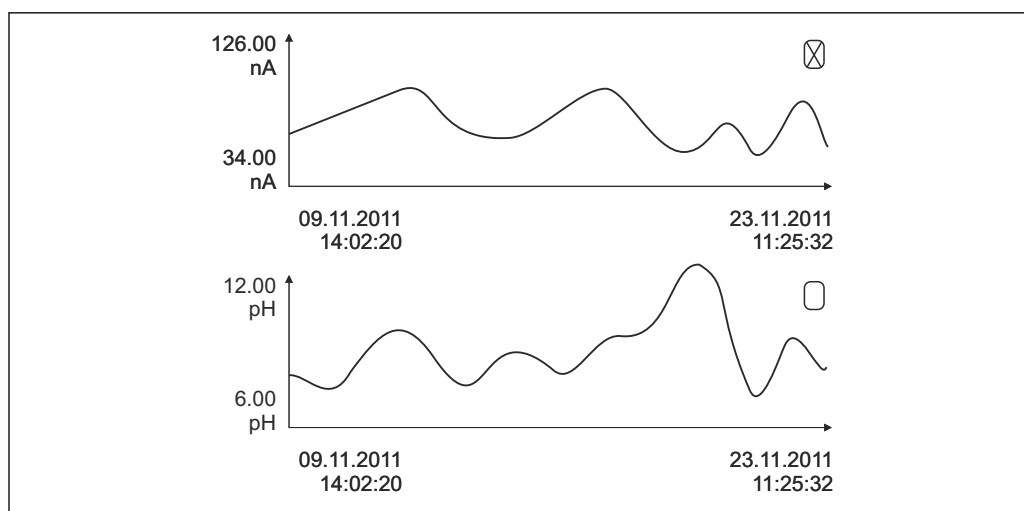

A0016688

98 Simultaneous display of two graphs, the top one is selected

DIAG/Logbooks		
Function	Options	Info
► Data logbooks		Chronological list of the data logbook entries for sensors
Data logbook 1 ... 8 <Logbook name>		This submenu is available for each data logbook that you have set up and activated.
Source of data	Read only	Input or mathematical function is displayed
Measured value	Read only	Measured value being recorded is displayed
Log time left	Read only	Display of days, hours and minutes until logbook is full.  ► Pay attention to the information on selecting the memory type in the menu <b>General settings/Logbooks</b> .
► Show	Events are displayed	Select a particular event to display more detailed information.
► Go to date	<b>User entry</b> ▪ Go to date ▪ Time	Use this function to go directly to a specific time in the list. In this way, you avoid having to scroll through all the information. The complete list is always visible, however.
► Show plot	Graphic display of the logbook entries	The display is according to your settings in the menu <b>General settings/Logbooks</b> .
Select 2nd plot	Select another data logbook	You can view a second logbook at the same time as the current one.
▷ Delete all entries	Action	You can use this to delete all data logbook entries.
► Save logbooks		
File format	<b>Selection</b> ▪ CSV ▪ FDM	► Save the logbook in the preferred file format.  You can then open the saved CSV file on the PC in MS Excel, for example, and make further edits here. <sup>1)</sup> You can import the FDM files into FieldCare and archive them so that they are tamper-proof.


DIAG/Logbooks		
Function	Options	Info
<ul style="list-style-type: none"> <li>▷ All data logbooks</li> <li>▷ Data logbook 1 ... 8</li> <li>▷ All event logbooks</li> <li>▷ Calibration logbook</li> <li>▷ Diagnostic logbook</li> <li>▷ Configuration logbook</li> <li>▷ HW version logbook</li> <li>▷ Version logbook</li> </ul>	Action, commences as soon as the option is selected	Use this function to save the logbook to an SD card. <ul style="list-style-type: none"> <li>▶ Save the logbook in the preferred file format. You can then open the saved CSV file on the PC in MS-Excel, for example, and edit it. You can import the FDM files into Fieldcare and archive them so they are tamper-proof.</li> </ul>
 The file name is made up of the <b>Logbook ident (Menu/Setup/General settings/Logbooks)</b> , an abbreviation for the particular logbook and a time stamp.		

- 1) CSV files use international number formats and separators. Therefore they must be imported into MS Excel as external data with the correct format settings. If you double-click the file to open it, the data are only displayed correctly if MS Excel is installed with the US country setting.

## 12.10 Simulation

You can simulate values at inputs and outputs for testing purposes:


- Current values at current outputs
- Measured values at inputs
- Relay contact opening or closing

 Only current values are simulated. Via the simulation function, it is not possible to calculate the totalized value for the flow or rainfall.

DIAG/Simulation		
Function	Options	Info
▶ Current output x:y		Simulation of an output current This menu appears once for each current output.
Simulation	<b>Selection</b> <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul> <b>Factory setting</b> Off	If you simulate the value at the current output, this is indicated on the display by a simulation icon in front of the current value.
Current	2.4 to 23.0 mA <b>Factory setting</b> 4 mA	▶ Set the desired simulation value.
▶ Alarm relay ▶ Relay x:y		Simulation of a relay state This menu appears once for each relay.
Simulation	<b>Selection</b> <ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> </ul> <b>Factory setting</b> Off	If you simulate the relay state, this is indicated on the display by a simulation icon in front of the relay display.
State	<b>Selection</b> <ul style="list-style-type: none"> <li>▪ Low</li> <li>▪ High</li> </ul> <b>Factory setting</b> Low	▶ Set the desired simulation value.  The relay switches in accordance with your setting when you switch on the simulation. On the measured value display, you see <b>On (= Low)</b> or <b>Off(= High)</b> for the simulated relay state.

DIAG/Simulation		
Function	Options	Info
► Meas. inputs		Simulation of a measured value (only for sensors)
Channel : parameter		This menu appears once for each measuring input.
Simulation	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> Off	If you simulate the measured value, this is indicated on the display by a simulation icon in front of the measured value.
Main value	Depends on the sensor	► Set the desired simulation value.
Sim. temperature	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> Off	If you simulate the temperature measured value, this is indicated on the display by a simulation icon in front of the temperature.
Temperature	-50.0 to +250.0 °C (-58.0 to 482.0 °F)  <b>Factory setting</b> 20.0 °C (68.0 °F)	► Set the desired simulation value.
Binary input x:y Binary output x:y		Simulation of a binary input or output signal The number of submenus available corresponds to the number of binary inputs or outputs.
Simulation	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul> <b>Factory setting</b> Off	
State	<b>Selection</b> <ul style="list-style-type: none"> <li>■ Low</li> <li>■ High</li> </ul>	

## 12.11 Device test

DIAG/System test		
Function	Options	Info
► Photometer		
Cleaning factor	Read only	
► Power supply	<b>Read only</b> <ul style="list-style-type: none"> <li>■ Digital supply 1: 1.2V</li> <li>■ Digital supply 2: 3.3V</li> <li>■ Analog supply: 12.5V</li> <li>■ Sensor supply: 24V</li> <li>■ Temperature</li> </ul>	Detailed list of power supply to instrument.   The actual values can vary without a malfunction being present.


DIAG/System test		
Function	Options	Info
► Heartbeat		Heartbeat has no effect on the outputs and their status. You can start the verification at any time without affecting the measurement.
► Perform verification		<p>Starts verification.</p> <ol style="list-style-type: none"> <li>1. To save the results, press <b>OK</b>. ↳ Results displayed (see below)</li> <li>2. Ensure that the writable SD card is inserted in the device's card reader. <b>Export to SD-card.</b> ↳ Results are written to the SD card in the form of a PDF file. Display indicates if this was successful or not.</li> <li>3. If export fails: Check SD card; use a different SD card if necessary. Check SD compartment on base module.</li> </ol>
▷ Verification results		<p><b>Result display</b></p> <ul style="list-style-type: none"> <li>■ Plant operator Customized text, maximum 32 characters</li> <li>■ Location Customized text, maximum 32 characters</li> <li>■ Verification report Automatic time stamp</li> <li>■ Verification ID Automatic counter</li> <li>■ Overall result Passed or failed</li> </ul>
▷ Export to SD-card		<p>Export the verification report as a pdf file</p> <ul style="list-style-type: none"> <li>■ Detailed report on various device tests</li> <li>■ Input and output information</li> <li>■ Device information</li> <li>■ Sensor information</li> </ul> <p>The report is ready to be printed out and signed. You can file it immediately in an operations log, for example.</p>

## 12.12 Resetting the measuring device

DIAG/Reset		
Function	Options	Info
▷ Device restart	<b>Selection</b> <ul style="list-style-type: none"> <li>■ OK</li> <li>■ ESC</li> </ul>	Restart and keep all the settings
▷ Factory default	<b>Selection</b> <ul style="list-style-type: none"> <li>■ OK</li> <li>■ ESC</li> </ul>	Restart with factory settings Settings that have not been saved are lost.

## 12.13 Device information

### 12.13.1 System information

DIAG/System information		
Function	Options	Info
Device tag	Read only	Individual device tag → <b>General settings</b>
Order code	Read only	You can order identical hardware with this code. This code changes on account of changes to the hardware and you can enter the new code you received from the manufacturer here <sup>1)</sup> .
 To establish the version of your device, enter the order code into the search screen at the following address: <a href="http://www.endress.com/order-ident">www.endress.com/order-ident</a>		
Orig. order code ext.	Read only	Complete order code for the original device, resulting from the product structure.
Current order code ext.	Read only	Current code, taking into account changes to the hardware. You must enter this code yourself.
Serial number	Read only	The serial number allows you to access device data and documentation on the Internet: <a href="http://www.endress.com/device-viewer">www.endress.com/device-viewer</a>
Software version	Read only	Current version
<b>► HART</b> <i>Only with the HART option</i>	Read only <ul style="list-style-type: none"> <li>■ Bus address</li> <li>■ Unique address</li> <li>■ Manufacturer ID</li> <li>■ Device type</li> <li>■ Device revision</li> <li>■ Software revision</li> </ul>	HART-specific information The unique address is linked to the serial number and is used to access devices in a Multidrop environment. Device and software version numbers are incremented as soon as changes have been made.
<b>► Modbus</b> <i>Only with the Modbus option</i>	Read only <ul style="list-style-type: none"> <li>■ Enable</li> <li>■ Bus address</li> <li>■ Termination</li> <li>■ Modbus TCP Port 502</li> </ul>	Modbus-specific information
<b>► PROFIBUS</b> <i>Only with the PROFIBUS option</i>	Read only <ul style="list-style-type: none"> <li>■ Termination</li> <li>■ Bus address</li> <li>■ Ident number</li> <li>■ Baudrate</li> <li>■ DPV0 state</li> <li>■ DPV0 fault</li> <li>■ DPV0 master addr</li> <li>■ DPV0 WDT [ms]</li> </ul>	Module status and other PROFIBUS-specific information



DIAG/System information		
Function	Options	Info
<b>► Ethernet</b> <i>Only with the Ethernet, EtherNet/IP, Modbus TCP, Modbus RS485 or PROFIBUS DP or PROFINET option</i>	Read only <ul style="list-style-type: none"> <li>■ Enable</li> <li>■ Webserver</li> <li>■ Link settings</li> <li>■ DHCP</li> <li>■ IP-Address</li> <li>■ Netmask</li> <li>■ Gateway</li> <li>■ Service switch</li> <li>■ MAC-Address</li> <li>■ EtherNetIP Port 44818</li> <li>■ Modbus TCP Port 502</li> <li>■ Webserver TCP port 80</li> </ul>	Ethernet-specific information Display depends on the fieldbus protocol used.
<b>► PROFINET</b> <i>Only with the PROFINET option</i>		
Name of station	Read only	
<b>► SD card</b>	Read only <ul style="list-style-type: none"> <li>■ Total</li> <li>■ Free memory</li> </ul>	
<b>► System modules</b>		
Backplane	Read only <ul style="list-style-type: none"> <li>■ Description</li> <li>■ Serial number</li> <li>■ Order code</li> <li>■ Hardware version</li> <li>■ Software version</li> </ul>	This information is provided for every electronics module available. Specify the serial numbers and order codes when servicing, for example.
Base		
Display module		
Extension module 1 ... 8		
<b>► Sensors</b>	Read only <ul style="list-style-type: none"> <li>■ Description</li> <li>■ Serial number</li> <li>■ Order code</li> <li>■ Hardware version</li> <li>■ Software version</li> </ul>	This information is provided for every sensor available. Specify the serial numbers and order codes when servicing, for example.
<b>► Save system information</b>		
► Save to SD card	File name assigned automatically (includes a time stamp)	The information is saved on the SD card in a "sysinfo" subfolder. The csv file can be read and edited in MS Excel, for example. This file can be used when servicing the device.

DIAG/System information		
Function	Options	Info
► Heartbeat operation		Heartbeat functions are only available with the appropriate device version or optional access code.
► Device	Read only <ul style="list-style-type: none"><li>■ Total operating time</li><li>■ Counters since reset<ul style="list-style-type: none"><li>■ Availability</li><li>■ Operating time</li><li>■ Time in failure</li><li>■ Number of failures</li><li>■ MTBF</li><li>■ MTTR</li></ul></li><li>■ ► Reset counters</li></ul>	<b>Availability</b> Percentage of time no error with the status signal F was pending <b>(Operating time - Time in failure)*100% /Operating time</b> <b>Time in failure</b> Total amount of time an error with the status signal F was pending <b>MTBF</b> Mean Time Between Failures <b>(Operating time - Time in failure)/ Number of failures</b> <b>MTTR</b> Mean Time To Repair <b>Time in failure/Number of failures</b>

1) Provided you give the manufacturer all the information about changes to the hardware.

12.13.2 Sensor information

► Select the required channel from the list of channels.

Information in the following categories is displayed:

- **Extreme values**  
Extreme conditions to which the sensor was previously exposed, e.g. min./max. temperatures <sup>3)</sup>
- **Operating time**  
Operating time of the sensor under defined extreme conditions
- **Calibration information**  
Calibration data of the last calibration  
Calibration data of the factory calibration <sup>4)</sup>
- **Sensor specifications**  
Measuring range limits for main measured value and temperature
- **General information**  
Information on sensor identification

The specific data that are displayed depends on what sensor is connected.

3) Not available for all sensor types.  
4) Not available for all sensor types.

## 12.14 Firmware history

Date	Version	Changes to firmware	Documentation
12/2019	01.07.00	<p>Expansion</p> <ul style="list-style-type: none"> <li>Support for new BASE2 module</li> <li>PROFINET</li> <li>New sensor Memosens Wave CAS80E</li> <li>New sensor Memosens Wave CKI50</li> <li>Time switch for binary process values depending on time-based conditions</li> </ul> <p>Improvement</p> <ul style="list-style-type: none"> <li>Maximum character length for formula mathematical function has been extended to 255 characters</li> <li>Heartbeat device status also via fieldbus</li> <li>Heartbeat Verification: Status "not activated" redefined</li> <li>Single-point calibration for pH sensors adapted to process and logbook behavior of CM42</li> <li>Format of delta time extended to seconds</li> </ul>	BA01570C/07/EN/07.19 BA00486C/07/EN/02.13 BA01245C/07/EN/08.20
01/2019	01.06.08	<p>Improvement</p> <ul style="list-style-type: none"> <li>Heartbeat verification no longer affects outputs</li> <li>Graphic display of Heartbeat status also in integrated web server</li> <li>Limit values for electrolyte depletion for amperometric oxygen sensors</li> <li>Limit values for CIP cycles for 4-pin conductivity sensors</li> </ul>	BA01570C/07/EN/05.19 BA00486C/07/EN/02.13 BA01245C/07/EN/06.19
05/2018	01.06.06	<p>Improvement</p> <ul style="list-style-type: none"> <li>New soft keys <b>ALL</b> and <b>NONE</b> in multiple choice editors</li> <li>Manual factor for CAS51D nitrate</li> <li>Calibration timer and validity revised for pH, conductivity, oxygen and disinfection</li> <li>Clear distinction between offset and 1-point calibration for pH</li> <li>Heartbeat verification report can now also be downloaded via the web server</li> <li>Better description of diagnostics code 013</li> </ul>	BA01570C/07/EN/04.18 BA00486C/07/EN/02.13 BA01245C/07/EN/05.17
06/2017	01.06.04	<p>Expansion</p> <ul style="list-style-type: none"> <li>Heartbeat Monitoring and Verification</li> <li>New mathematical function <b>Formula</b></li> <li>New sensors: CUS50D and chlorine dioxide</li> <li>Calibration via Ethernet/IP</li> <li>PDF generator for Heartbeat</li> <li>Sample calibration CAS51D</li> <li>OUSAF46 with Easycal</li> </ul> <p>Improvement</p> <ul style="list-style-type: none"> <li>Changes to conductivity concentration tables</li> <li>Renaming of parameter chlorine → <b>Disinfection</b></li> <li>Last active measuring screen restored after reboot</li> <li>Cap and electrolyte replacements are logged in the calibration logbook (oxygen, disinfection)</li> <li>Manual factor for nitrate</li> </ul>	BA01570C/07/EN/03.17 BA00486C/07/EN/02.13 BA01245C/07/EN/05.17

Date	Version	Changes to firmware	Documentation
12/2016	01.06.03	Expansion <ul style="list-style-type: none"> <li>■ EasyCal filter recertification date visible in the <b>DIAG/Sensor information/Operating time</b> menu</li> <li>■ Sensor calibration via Modbus or Ethernet/IP: conductivity, oxygen, chlorine and turbidity</li> <li>■ Four-factor adjustment, SAC</li> <li>■ Flash meter, nitrate and SAC</li> <li>■ New sludge model CUS51D</li> </ul> Improvement <ul style="list-style-type: none"> <li>■ Local display can be locked via Modbus or Ethernet/IP</li> <li>■ The output status can also be recorded in the data logbook</li> <li>■ Name of Endress+Hauser pH buffer 9.18 changed to 9.22</li> <li>■ CUS51D factor can be read out via fieldbus</li> </ul>	BA01570C/07/EN/02.16 BA00486C/07/EN/02.13 BA01245C/07/EN/04.16
03/2016	01.06.00	Original firmware Expansion <ul style="list-style-type: none"> <li>■ Heartbeat verification</li> <li>■ User-configurable diagnostic modules</li> <li>■ Four-factor adjustment, SAC</li> <li>■ Offset calibration CUS71D</li> <li>■ New mathematical function, cation exchanger</li> <li>■ Configurable byte order for Modbus</li> </ul> Improvement <ul style="list-style-type: none"> <li>■ Sensor calibration validity check (adaptation to batch processes)</li> <li>■ pH-Offset can be saved in either the sensor or the transmitter (previously only possible in the transmitter)</li> <li>■ CUS71D screens (gain display, trend information)</li> <li>■ Modified menu texts</li> </ul>	BA01570C/07/EN/01.16 BA00486C/07/EN/02.13 BA01245C/07/EN/03.16

## LZ4 Library

Copyright (c) 2011-2016, Yann Collet

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

\* Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

\* Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

## 13 Maintenance

Effects on process and process control

- ▶ Take all the necessary precautions in time to ensure the operational safety and reliability of the entire measuring point.

The maintenance of the measuring point comprises:

- Calibration
- Cleaning the controller, assembly and sensor
- Checking cables and connections.

### WARNING

#### **Process pressure and temperature, contamination, electrical voltage**

Risk of serious or fatal injury

- ▶ Avoid hazards posed by pressure, temperature and contamination.
- ▶ Make sure the device is de-energized before you open it.
- ▶ Power can be supplied to switching contacts from separate circuits. De-energize these circuits before working on the terminals.

### NOTICE

#### **Electrostatic discharge (ESD)**

Risk of damaging the electronic components

- ▶ Take personal protective measures to avoid ESD, such as discharging beforehand at PE or permanent grounding with a wrist strap.
- ▶ For your own safety, use only genuine spare parts. With genuine parts, the function, accuracy and reliability are also ensured after maintenance work.

## 13.1 Cleaning

### 13.1.1 Controller

- ▶ Clean the front of the housing using commercially available cleaning agents only.

The front of the housing is resistant to the following in accordance with DIN 42 115:

- Ethanol (for a short time)
- Diluted acids (max. 2% HCl)
- Diluted bases (max. 3% NaOH)
- Soap-based household cleaning agents

### NOTICE

#### **Cleaning agents not permitted**

Damage to the housing surface or housing seal

- ▶ Never use concentrated mineral acids or alkaline solutions for cleaning.
- ▶ Never use organic cleaners such as acetone, benzyl alcohol, methanol, methylene chloride, xylene or concentrated glycerol cleaner.
- ▶ Never use high-pressure steam for cleaning.

### 13.1.2 Digital sensors

### CAUTION

#### **Programs not switched off during maintenance activities.**

Risk of injury due to medium or cleaning agent!

- ▶ Quit any programs that are active.
- ▶ Switch to the service mode.
- ▶ If testing the cleaning function while cleaning is in progress, wear protective clothing, goggles and gloves or take other suitable measures to protect yourself.

### Replacing the sensor while ensuring measuring point availability

If an error occurs or the maintenance schedule stipulates that the sensor has to be replaced, use a new sensor, or a sensor that has been precalibrated in the laboratory.

- A sensor is calibrated in the laboratory under optimum external conditions, thereby ensuring better quality of measurement.
  - You must perform onsite calibration if you use a sensor that is not precalibrated.
1. Pay attention to the safety instructions regarding the removal of the sensor that are provided in the Operating Instructions for the sensor.
  2. Remove the sensor that requires maintenance.
  3. Install the new sensor.
    - ↳ The sensor data are automatically accepted by the transmitter. A release code is not required.  
Measurement is resumed.
  4. Take the used sensor back to the laboratory.
    - ↳ In the laboratory get the sensor ready for reuse while ensuring the availability of the measuring point.

### Prepare the sensor for reuse

1. Clean sensor.
  - ↳ For this purpose, use the cleaning agent specified in the sensor manual.
2. Inspect the sensor for cracks or other damage.
3. If no damage is found, regenerate the sensor. Where necessary, store the sensor in a regeneration solution (→ sensor manual).
4. Recalibrate the sensor for reuse.

### 13.1.3 Assemblies



Refer to the assembly operating instructions for information on servicing and troubleshooting the assembly. The assembly operating manual describes the procedure for mounting and disassembling the assembly, replacing the sensors and seals, and contains information on the material resistance properties, as well as on spare parts and accessories.

## 14 Repair

### 14.1 General notes

The repair and conversion concept provides for the following:

- The product has a modular design
- Spare parts are grouped into kits which include the associated kit instructions
- Only use original spare parts from the manufacturer
- Repairs are carried out by the manufacturer's Service Department or by trained users
- Certified devices can only be converted to other certified device versions by the manufacturer's Service Department or at the factory
- Observe applicable standards, national regulations, Ex documentation (XA) and certificates

1. Carry out the repair according to the kit instructions.
2. Document the repair and conversion and enter, or have entered, in the Life Cycle Management tool (W@M).

### 14.2 Spare parts

Device spare parts that are currently available for delivery can be found on the website:

<https://portal.endress.com/webapp/SparePartFinder>

- Quote the serial number of the device when ordering spare parts.

### 14.3 Return

The product must be returned if repairs or a factory calibration are required, or if the wrong product was ordered or delivered. As an ISO-certified company and also due to legal regulations, Endress+Hauser is obliged to follow certain procedures when handling any returned products that have been in contact with medium.

To ensure the swift, safe and professional return of the device:

- Refer to the website [www.endress.com/support/return-material](http://www.endress.com/support/return-material) for information on the procedure and conditions for returning devices.

### 14.4 Disposal

The device contains electronic components. The product must be disposed of as electronic waste.

- Observe the local regulations.

#### Dispose of batteries correctly

- Always dispose of batteries in accordance with local regulations on battery disposal.

## 15 Accessories

The following are the most important accessories available at the time this documentation was issued.

Listed accessories are technically compatible with the product in the instructions.

1. Application-specific restrictions of the product combination are possible.  
Ensure conformity of the measuring point to the application. This is the responsibility of the operator of the measuring point.
2. Pay attention to the information in the instructions for all products, particularly the technical data.
3. For accessories not listed here, please contact your Service or Sales Center.

### 15.1 Device-specific accessories

#### 15.1.1 Measuring cables

##### **Memosens data cable CYK10**

- For digital sensors with Memosens technology
- Product Configurator on the product page: [www.endress.com/cyk10](http://www.endress.com/cyk10)



Technical Information TI00118C

##### **Memosens data cable CYK11**

- Extension cable for digital sensors with Memosens protocol
- Product Configurator on the product page: [www.endress.com/cyk11](http://www.endress.com/cyk11)



Technical Information TI00118C

#### 15.1.2 Sensors

##### **Glass electrodes**

##### **Memosens CPS11E**

- pH sensor for standard applications in process and environmental engineering
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cps11e](http://www.endress.com/cps11e)



Technical Information TI01493C

##### **Memosens CPS41E**

- pH sensor for process technology
- With ceramic junction and KCl liquid electrolyte
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cps41e](http://www.endress.com/cps41e)



Technical Information TI01495C

##### **Memosens CPS71E**

- pH sensor for chemical process applications
- With ion trap for poison-resistant reference
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cps71e](http://www.endress.com/cps71e)



Technical Information TI01496C



**Memosens CPS91E**

- pH sensor for heavily polluted media
- With open aperture
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cps91e](http://www.endress.com/cps91e)

 Technical Information TI01497C


**Memosens CPS31E**

- pH sensor for standard applications in drinking water and swimming pool water
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cps31e](http://www.endress.com/cps31e)

 Technical Information TI01574C

**Memosens CPS61E**

- pH sensor for bioreactors in life sciences and for the food industry
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cps61e](http://www.endress.com/cps61e)

 Technical Information TI01566C


**Memosens CPF81E**

- pH sensor for mining operations, industrial water and wastewater treatment
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cpf81e](http://www.endress.com/cpf81e)

 Technical Information TI01594C

**Enamel pH electrodes****Ceramax CPS341D**

- pH electrode with pH-sensitive enamel
- Meets highest demands of measuring accuracy, pressure, temperature, sterility and durability
- Product Configurator on the product page: [www.endress.com/cps341d](http://www.endress.com/cps341d)

 Technical Information TI00468C

**ORP sensors****Memosens CPS12E**

- ORP sensor for standard applications in process and environmental engineering
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cps12e](http://www.endress.com/cps12e)

 Technical Information TI01494C


**Memosens CPS42E**

- ORP sensor for process technology
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cps42e](http://www.endress.com/cps42e)

 Technical Information TI01575C

**Memosens CPS72E**

- ORP sensor for chemical process applications
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cps72e](http://www.endress.com/cps72e)

 Technical Information TI01576C

**Memosens CPF82E**

- ORP sensor for mining operations, industrial water and wastewater treatment
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cpf82e](http://www.endress.com/cpf82e)



Technical Information TI01595C

**Memosens CPS92E**

- ORP sensor for use in heavily polluted media
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cps92e](http://www.endress.com/cps92e)



Technical Information TI01577C

**Memosens CPS62E**

- ORP sensor for hygienic and sterile applications
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cps62e](http://www.endress.com/cps62e)



Technical Information TI01604C

**pH-ISFET sensors****Memosens CPS47E**

- ISFET sensor for pH measurement
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cps47e](http://www.endress.com/cps47e)



Technical Information TI01616C

**Memosens CPS77E**

- Sterilizable and autoclavable ISFET sensor for pH measurement
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cps77e](http://www.endress.com/cps77e)



Technical Information TI01396

**Memosens CPS97E**

- ISFET sensor for pH measurement
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cps97e](http://www.endress.com/cps97e)



Technical Information TI01618C

**pH and ORP combined sensors****Memosens CPS16E**

- pH/ORP sensor for standard applications in process technology and environmental engineering
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cps16e](http://www.endress.com/cps16e)



Technical Information TI01600C

**Memosens CPS76E**

- pH/ORP sensor for process technology
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cps76e](http://www.endress.com/cps76e)



Technical Information TI01601C

**Memosens CPS96E**

- pH/ORP sensor for heavily polluted media and suspended solids
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cps96e](http://www.endress.com/cps96e)



Technical Information TI01602C

**Conductivity sensors with inductive measurement of conductivity****Indumax CLS50D**

- High-durability inductive conductivity sensor
- For standard and hazardous area applications
- With Memosens technology
- Product Configurator on the product page: [www.endress.com/cls50d](http://www.endress.com/cls50d)



Technical Information TI00182C

**Indumax H CLS54D**

- Inductive conductivity sensor
- With certified, hygienic design for foodstuffs, beverages, pharmaceuticals and biotechnology
- Product Configurator on the product page: [www.endress.com/cls54d](http://www.endress.com/cls54d)



Technical Information TI00508C

**Conductivity sensors with conductive measurement of conductivity****Memosens CLS15E**

- Digital conductivity sensor for measurements in pure and ultrapure water
- Conductive measurement
- With Memosens 2.0
- Product Configurator on the product page: [www.endress.com/cls15e](http://www.endress.com/cls15e)



Technical Information TI01526C

**Memosens CLS16E**

- Digital conductivity sensor for measurements in pure and ultrapure water
- Conductive measurement
- With Memosens 2.0
- Product Configurator on the product page: [www.endress.com/cls16e](http://www.endress.com/cls16e)



Technical Information TI01527C

**Memosens CLS21E**

- Digital conductivity sensor for media with medium or high conductivity
- Conductive measurement
- With Memosens 2.0
- Product Configurator on the product page: [www.endress.com/cls21e](http://www.endress.com/cls21e)



Technical Information TI01528C

**Memosens CLS82E**

- Hygienic conductivity sensor
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cls82e](http://www.endress.com/cls82e)



Technical Information TI01529C

**Oxygen sensors****Memosens COS22E**

- Hygienic amperometric oxygen sensor with maximum measurement stability over multiple sterilization cycles
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cos22e](http://www.endress.com/cos22e)



Technical Information TI01619C

**Memosens COS51E**

- Amperometric oxygen sensor for water, wastewater and utilities
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cos51e](http://www.endress.com/cos51e)



Technical Information TI01620C

**Oxymax COS61D**

- Optical oxygen sensor for drinking water and industrial water measurement
- Measuring principle: quenching
- With Memosens technology
- Product Configurator on the product page: [www.endress.com/cos61d](http://www.endress.com/cos61d)



Technical Information TI00387C

**Memosens COS81E**

- Hygienic optical oxygen sensor with maximum measurement stability over multiple sterilization cycles
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: [www.endress.com/cos81e](http://www.endress.com/cos81e)



Technical Information TI01558C

**Disinfection sensors****Memosens CCS51D**

- Sensor for measuring free available chlorine
- Product Configurator on the product page: [www.endress.com/ccs51d](http://www.endress.com/ccs51d)



Technical Information TI01423C

**Ion-selective sensors****ISEmax CAS40D**

- Ion selective sensors
- Product Configurator on the product page: [www.endress.com/cas40d](http://www.endress.com/cas40d)



Technical Information TI00491C

**Turbidity sensors****Turbimax CUS51D**

- For nephelometric measurements of turbidity and solids in wastewater
- 4-beam scattered light method
- With Memosens technology
- Product Configurator on the product page: [www.endress.com/cus51d](http://www.endress.com/cus51d)



Technical Information TI00461C

**Turbimax CUS52D**

- Hygienic Memosens sensor for turbidity measurement in drinking water, process water and in utilities
- With Memosens technology
- Product Configurator on the product page: [www.endress.com/cus52d](http://www.endress.com/cus52d)

 Technical Information TI01136C


**SAC and nitrate sensors****Viomax CAS51D**

- SAC and nitrate measurement in drinking water and wastewater
- With Memosens technology
- Product Configurator on the product page: [www.endress.com/cas51d](http://www.endress.com/cas51d)

 Technical Information TI00459C

**Interface measurement****Turbimax CUS71D**

- Immersion sensor for interface measurement
- Ultrasonic interface sensor
- Product Configurator on the product page: [www.endress.com/cus71d](http://www.endress.com/cus71d)

 Technical Information TI00490C


**Spectrometer sensors****Memosens Wave CAS80E**

- Measurement of various parameters in liquid media
- With Memosens technology
- Product Configurator on the product page: [www.endress.com/cas80e](http://www.endress.com/cas80e)

 Technical Information TI01522C

**Fluorescence sensors****Memosens CFS51**

- Sensor for fluorescence measurement
- With Memosens technology
- Product Configurator on the product page: [www.endress.com/cfs51](http://www.endress.com/cfs51)

 Technical Information TI01630C

## 15.2 Communication-specific accessories

**Device Care SFE100**

- Configuration of Endress+Hauser devices
- Fast and easy installation, online application updates, one-click connection to devices
- Automatic hardware identification and driver catalog update
- Device configuration with DTMs

 Technical Information Device Care SFE100, TI01134S

**Commubox FXA195**

Intrinsically safe HART communication with FieldCare via the USB port

 Technical Information TI00404F

**Commubox FXA291**

Connects the CDI interface of measuring devices with the USB port of the computer or laptop



Technical Information TI00405C

**Wireless HART adapter SWA70**

- Wireless device connection
- Easily integrated, offers data protection and transmission safety, can be operated in parallel with other wireless networks, minimum cabling complexity



Technical Information TI00061S

**Field Data Manager Software MS20/21**

- PC software for central data management
- Visualization of series of measurements and logbook events
- SQL database for secure data storage

**FieldCare SFE500**

- Universal tool for field device configuration and management
- Supplied with a complete library of certified DTMs (Device Type Manager) for operation of Endress+Hauser field devices
- Order according to product order structure
- [www.endress.com/sfe500](http://www.endress.com/sfe500)

**Memobase Plus CYZ71D**

- PC software to support laboratory calibration
- Visualization and documentation of sensor management
- Sensor calibrations stored in database
- Product Configurator on the product page: [www.endress.com/cyz71d](http://www.endress.com/cyz71d)



Technical Information TI00502C

## 15.3 Service-specific accessories

### 15.3.1 Additional functionality

**Hardware extension modules****Kit, extension module AOR**

- 2 x relay, 2 x 0/4 to 20 mA analog output
- Order No. 71111053

**Kit, extension module 2R**

- 2 x relay
- Order No. 71125375

**Kit, extension module 4R**

- 4 x relay
- Order No. 71125376

**Kit, extension module 2AO**

- 2 x 0/4 to 20 mA analog output
- Order No. 71135632

**Kit, extension module 4AO**

- 4 x analog output 0/4 to 20 mA
- Order No. 71135633

**Kit, extension module 2DS**

- 2 x digital sensor, Memosens
- Order No. 71135631

**Kit, extension module 2AI**

- 2 x 0/4 to 20 mA analog input
- Order No. 71135639

**Kit, extension module DIO**

- 2 x digital input
- 2 x digital output
- Auxiliary voltage supply for digital output
- Order No. 71135638

**Upgrade kit, extension module 485DP**

- Extension module 485DP
- PROFIBUS DP
- Order No. 71575177

**Upgrade kit, extension module 485MB**

- Extension module 485MB
- Modbus RS485
- Order No. 71575178

**Firmware and activation codes****SD card with Liquiline firmware**

- Industrial Flash Drive, 1 GB
- Order No. 71127100



You must quote the serial number of the device when ordering the activation code.

**Kit CM442: activation code for 2nd digital sensor input**

Order No. 71114663

**Activation code for feedforward control**

- Requires current input or fieldbus communication
- Order No. 71211288

**Activation code for measuring range switch**

- Requires digital inputs or fieldbus communication
- Order No. 71211289

**Activation code for ChemocleanPlus**

- Requires relays or digital outputs or fieldbus communication and optional digital inputs
- Order No. 71239104

**Activation code for Heartbeat Verification and Monitoring**

Order No. 71367524

**Activation code for mathematics**

- Formula editor
- Order No. 71367541

**Activation code for Ethernet/IP and web server**

Order No. XPC0018

**Activation code for Modbus TCP and web server**

Order No. XPC0020

**Activation code for web server for BASE2**

Order No. XPC0021

**Activation code for PROFINET and web server Base2**

Order No. XPC0022

**Activation code for HART**

Order No. XPC0023

**Activation code for Profibus DP for module 485**

Order No. XPC0024

**Activation code for module 485 Modbus RS485**

Order No. XPC0025

**Activation code for Liquiline inputs/outputs**

Order No. XPC0026

## 15.4 System components

**RIA14, RIA16**

- Field display unit for integration into 4-20 mA circuits
- RIA14 in flameproof metal enclosure



Technical Information TI00143R and TI00144R

**RIA15**

- Process display unit, Digital display unit for integration into 4-20 mA circuits
- Panel mounting
- With optional HART communication



Technical Information TI01043K

## 15.5 Other accessories

### 15.5.1 External display<sup>5)</sup>

**Graphic display**

- For installation in the control cabinet door or panel
- Order number: 71185295

**Service display**

- Portable, for commissioning
- Order number: 71185296

### 15.5.2 SD card

- Industrial Flash Drive, 1 GB
- Order number: 71110815

### 15.5.3 M12 built-in socket and cable junction with Velcro strip

**Kit CM442/CM444/CM448/CSF48: M12 built-in socket for digital sensors**

- Pre-terminated
- Order No. 71107456

**Kit CM442/CM444/CM448/CSF48: M12 built-in socket for PROFIBUS DP/Modbus RS485**

- B-coded, pre-terminated
- Order No. 71140892

**Kit CM442/CM444/CM448/CSF48: M12 built-in socket for Ethernet**

- D-coded, pre-terminated
- Order No. 71140893

**Kit: external CDI socket, complete**

- Retrofit kit for CDI interface, with terminated connecting cables
- Order No. 51517507

5) The external display can be selected as an option in the product structure or ordered subsequently as an accessory.



**Cable junction with Velcro strip**

- 4 pieces, for sensor cable
- Order No. 71092051

## 16 Technical data

### 16.1 Input

Measured variables	<b>Spectrometer</b> Color ( $L^*$ , $a^*$ , $b^*$ )  <b>Memosens sensors</b> → Documentation of the connected sensor
Measuring ranges	<b>Spectrometer</b> → Documentation of the connected sensor  <b>Memosens sensors</b> → Documentation of the connected sensor
Types of input	<ul style="list-style-type: none"> <li>■ Digital sensor inputs for sensors with Memosens protocol</li> <li>■ Analog current inputs (optional)</li> <li>■ Digital inputs (optional)</li> <li>■ Digital sensor inputs for intrinsically safe sensors with Memosens protocol and Ex approval (optional)</li> </ul> <p>Only the following approved sensors, cables and devices may be connected to the intrinsically safe digital sensor inputs of the sensor communication module 2DS Ex-i:</p> <ul style="list-style-type: none"> <li>■ Memosens cable xYK10, xYK20              The connection of the sensor communication module 2DS Ex-i, which is an associated apparatus of CM44P, with the Memosens cable xYK10 and xYK20 is certified as a system.</li> <li>■ Digital Memosens sensors and other Memosens devices               <ul style="list-style-type: none"> <li>■ Sensors and devices must meet the specified electrical parameters of the CM44P with the sensor communication module 2DS Ex-i.</li> <li>■ Sensors and devices excluding xLS50D must be connected with Memosens cable xYK10 or xYK20 via an inductive interface.</li> </ul> </li> <li>■ Digital sensor simulator xYP03D              Sensor simulator/ Memocheck simulation tester (type xYP03D) must be used with the following batteries: Duracell MN1500 or Energizer EN91.</li> </ul>
Input signal	Depending on version: <ul style="list-style-type: none"> <li>■ 1 x spectrometer</li> <li>■ max. 4 x binary sensor signal</li> <li>■ 2 x 0/4 to 20 mA (optional), passive, potentially isolated from one another and from the sensor inputs</li> <li>■ 0 to 30 V</li> </ul>
Cable specification	<b>Cable type</b>  Memosens data cable CYK10 or sensor fixed cable, each with cable end sleeves or M12 circular plug (optional, for field housing)  <b>Cable length</b>

## 16.2 Digital inputs, passive

Electrical specification	<ul style="list-style-type: none"> <li>■ drawing power (passive)</li> <li>■ Galvanically isolated</li> </ul>
--------------------------	--

Span	<ul style="list-style-type: none"> <li>■ High: 11 to 30 V DC</li> <li>■ Low: 0 to 5 V DC</li> </ul>
------	---

Nominal input current	max. 8 mA
-----------------------	-----------

PFM function	Minimum pulse width: 500 µs (1 kHz)
--------------	-------------------------------------

Test voltage	500 V
--------------	-------

Cable specification	Max. 2.5 mm <sup>2</sup> (14 AWG)
---------------------	-----------------------------------

## 16.3 Current input, passive

Span	> 0 to 20 mA
------	--------------

Signal characteristic	Linear
-----------------------	--------

Internal resistance	Non-linear
---------------------	------------

Test voltage	500 V
--------------	-------

## 16.4 Output

Output signal	<p>Depending on version:</p> <ul style="list-style-type: none"> <li>■ 2 x 0/4 to 20 mA, active, galvanically isolated from one another and from the sensor circuits</li> <li>■ 4 x 0/4 to 20 mA, active, galvanically isolated from one another and from the sensor circuits</li> <li>■ 6 x 0/4 to 20 mA, active, galvanically isolated from one another and from the sensor circuits</li> <li>■ 8 x 0/4 to 20 mA, active, galvanically isolated from one another and from the sensor circuits</li> <li>■ Optional HART communication (only via current output 1:1)</li> </ul>
---------------	--

HART	
Signal encoding	FSK ± 0.5 mA above current signal
Data transmission rate	1200 baud
Galvanic isolation	Yes
Load (communication resistor)	250 Ω

PROFIBUS DP/RS485	
Signal encoding	EIA/TIA-485, PROFIBUS DP-compliant acc. to IEC 61158
Data transmission rate	9.6 kBd, 19.2 kBd, 45.45kBd, 93.75 kBd, 187.5 kBd, 500 kBd, 1.5 MBd, 6 MBd, 12 MBd
Galvanic isolation	Yes
Connectors	Spring terminal (max. 1.5 mm), bridged internally (T-function), optional M12
Bus termination	Internal slide switch with LED display

Modbus RS485	
Signal encoding	EIA/TIA-485
Data transmission rate	2,400, 4,800, 9,600, 19,200, 38,400, 57,600 and 115,200 baud
Galvanic isolation	Yes
Connectors	Spring terminal (max. 1.5 mm), bridged internally (T-function), optional M12
Bus termination	Internal slide switch with LED display

Ethernet and Modbus TCP	
Signal encoding	IEEE 802.3 (Ethernet)
Data transmission rate	10/100 MBd
Galvanic isolation	Yes
Connection	RJ45
IP address	DHCP (default) or configuration via menu

Ethernet/IP	
Signal encoding	IEEE 802.3 (Ethernet)
Data transmission rate	10/100 MBd
Galvanic isolation	Yes
Connection	RJ45
IP address	DHCP (default) or configuration via menu

PROFINET	
Signal encoding	IEEE 802.3 (Ethernet)
Data transmission rate	100 MBd
Galvanic isolation	Yes
Connection	RJ45
Name of station	Via DCP protocol by means of configuration tool (e.g. Siemens PRONETA)
IP address	Via DCP protocol by means of configuration tool (e.g. Siemens PRONETA)

Signal on alarm	Adjustable, as per NAMUR Recommendation NE 43 <ul style="list-style-type: none"> <li>■ In measuring range 0 to 20 mA (HART is not available with this measuring range): Failure current from 0 to 23 mA</li> <li>■ In measuring range 4 to 20 mA: Failure current from 2.4 to 23 mA</li> <li>■ Factory setting for failure current for both measuring ranges: 21.5 mA</li> </ul>
-----------------	--

Load	Max. 500 $\Omega$
------	-------------------

Linearization/transmission behavior	Linear
-------------------------------------	--------

## 16.5 Digital outputs, passive

Electrical specification	<ul style="list-style-type: none"> <li>■ Passive</li> <li>■ Open collector, max. 30 V, 15 mA</li> <li>■ Maximum voltage drop 3 V</li> </ul>
--------------------------	---

External power supply	When using an onsite auxiliary voltage supply and an onsite digital input: Recommended minimum auxiliary voltage = $3\text{ V} + V_{IHmin}$ ( $V_{IHmin}$ = minimum input voltage required (high-level input voltage))
-----------------------	--

PFM function	Minimum pulse width: 500 $\mu\text{s}$ (1 kHz)
--------------	--

Auxiliary voltage	<b>Electrical specification</b> <ul style="list-style-type: none"> <li>■ Galvanically isolated</li> <li>■ Unregulated, 24 V DC</li> <li>■ Max. 50 mA (per DIO module)</li> </ul>
-------------------	--

Test voltage	500 V
--------------	-------

Cable specification	Max. 2.5 mm <sup>2</sup> (14 AWG)
---------------------	-----------------------------------

## 16.6 Current outputs, active

Span	0 to 23 mA 2.4 to 23 mA for HART communication
------	---

Signal characteristic	Linear
-----------------------	--------

Electrical specification	<b>Output voltage</b> Max. 24 V  <b>Test voltage</b> 500 V
--------------------------	--

Cable specification	<b>Cable type</b> Recommended: shielded cable  <b>Cable specification</b> Max. 2.5 mm <sup>2</sup> (14 AWG)
---------------------	---

16.7 Relay outputs

Electrical specification

Relay types

■ 1 single-pin changeover contact (alarm relay)

■ 2 or 4 single-pin changeover contacts (optional with extension modules)

Maximum load

■ Alarm relay: 0.5 A

■ All other relays: 2.0 A

Relay switching capacity

Base module (Alarm relay)

Switching voltage	Load (max.)	Switching cycles (min.)
230 V AC, cosΦ = 0.8 to 1	0.1 A	700,000
	0.5 A	450,000
115 V AC, cosΦ = 0.8 to 1	0.1 A	1,000,000
	0.5 A	650,000
24 V DC, L/R = 0 to 1 ms	0.1 A	500,000
	0.5 A	350,000

Extension modules

Switching voltage	Load (max.)	Switching cycles (min.)
230 V AC, cosΦ = 0.8 to 1	0.1 A	700,000
	0.5 A	450,000
	2 A	120,000
115 V AC, cosΦ = 0.8 to 1	0.1 A	1,000,000
	0.5 A	650,000
	2 A	170,000
24 V DC, L/R = 0 to 1 ms	0.1 A	500,000
	0.5 A	350,000
	2 A	150,000

Cable specification

Max. 2.5 mm<sup>2</sup> (14 AWG)

## 16.8 Protocol-specific data

HART	Manufacturer ID	11 <sub>h</sub>
	Device type	155D <sub>h</sub>
	Device revision	001 <sub>h</sub>
	HART version	7.2
	Device description files (DD/DTM)	<a href="http://www.endress.com/hart">www.endress.com/hart</a> Device Integration Manager DIM
	Device variables	16 user-definable and 16 predefined device variables, dynamic variables PV, SV, TV, QV
	Supported features	PDM DD, AMS DD, DTM, Field Xpert DD
PROFIBUS DP	Manufacturer ID	11 <sub>h</sub>
	Device type	155D <sub>h</sub>
	Profile version	3.02
	Device database files (GSD files)	<a href="http://www.endress.com/profibus">www.endress.com/profibus</a> Device Integration Manager DIM
	Output variables	16 AI blocks, 8 DI blocks
	Input variables	4 AO blocks, 8 DO blocks
	Supported features	<ul style="list-style-type: none"> <li>■ 1 MSCY0 connection (cyclical communication, master class 1 to slave)</li> <li>■ 1 MSAC1 connection (acyclical communication, master class 1 to slave)</li> <li>■ 2 MSAC2 connections (acyclical communication, master class 2 to slave)</li> <li>■ Device lock: The device can be locked using the hardware or software.</li> <li>■ Addressing using DIL switches or software</li> <li>■ GSD, PDM DD, DTM</li> </ul>
Modbus RS485	Protocol	RTU/ASCII
	Function codes	03, 04, 06, 08, 16, 23
	Broadcast support for function codes	06, 16, 23
	Output data	16 measured values (value, unit, status), 8 digital values (value, status)
	Input data	4 setpoints (value, unit, status), 8 digital values (value, status), diagnostic information
	Supported features	Address can be configured using switch or software
Modbus TCP	TCP port	502
	TCP connections	3
	Protocol	TCP
	Function codes	03, 04, 06, 08, 16, 23
	Broadcast support for function codes	06, 16, 23
	Output data	16 measured values (value, unit, status), 8 digital values (value, status)

Input data	4 setpoints (value, unit, status), 8 digital values (value, status), diagnostic information
Supported features	Address can be configured using DHCP or software

## Ethernet/IP

Log	EtherNet/IP	
ODVA certification	Yes	
Device profile	Generic device (product type: 0x2B)	
Manufacturer ID	0x049E <sub>h</sub>	
Device type ID	0x109C <sub>h</sub>	
Polarity	Auto-MIDI-X	
Connections	CIP	12
	I/O	6
	Explicit message	6
	Multicast	3 consumers
Minimum RPI	100 ms (default)	
Maximum RPI	10000 ms	
System integration	EtherNet/IP	EDS
	Rockwell	Add-on-Profile Level 3, Faceplate for Factory Talk SE
IO data	Input (T → O)	Device status and diagnostic message with highest priority  Measured values: <ul style="list-style-type: none"> <li>■ 16 AI (analog input) + Status + Unit</li> <li>■ 8 DI (discrete input) + Status</li> </ul>
	Output (O → T)	Actuating values: <ul style="list-style-type: none"> <li>■ 4 AO (analog output) + status + unit</li> <li>■ 8 DO (discrete output) + Status</li> </ul>



PROFINET	Protocol	"Application layer protocol for decentral device periphery and distributed automation", PNIO Version 2.34
	Communication type	100 MBit/s
	Conformance Class	Conformance Class B
	Netload Class	Netload Class II
	Baud rate	Automatic 100 Mbps with full-duplex detection
	Cycle times	From 32 ms
	Device profile	Application interface identifier 0xF600 Generic device
	PROFINET interface	1 port, Realtime Class 1 (RT_CLASS_1)
	Manufacturer ID	0x11 <sub>h</sub>
	Device type ID	0x859C D <sub>h</sub>
	Device description files (GSD)	Information and files under: <ul style="list-style-type: none"> <li>▪ <a href="http://www.endress.com">www.endress.com</a> On the product page for the device: Documents/Software → Device drivers</li> <li>▪ <a href="http://www.profibus.com">www.profibus.com</a> On the website under Products/Product Finder</li> </ul>
	Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs
	Supported connections	<ul style="list-style-type: none"> <li>▪ 1 x AR (IO Controller AR)</li> <li>▪ 1 x AR (IO-Supervisor Device AR connection allowed)</li> <li>▪ 1 x Input CR (Communication Relation)</li> <li>▪ 1 x Output CR (Communication Relation)</li> <li>▪ 1 x Alarm CR (Communication Relation)</li> </ul>
	Configuration options for measuring device	<ul style="list-style-type: none"> <li>▪ Web browser</li> <li>▪ Manufacturer-specific software (FieldCare, DeviceCare)</li> <li>▪ Device master file (GSD), can be read out via the integrated web server of the measuring device</li> </ul>
	Configuration of the device name	DCP protocol
	Supported functions	<ul style="list-style-type: none"> <li>▪ Identification &amp; maintenance Simple device identification via: <ul style="list-style-type: none"> <li>▪ Process control system</li> <li>▪ Nameplate</li> </ul> </li> <li>▪ Measured value status The process variables are communicated with a measured value status</li> <li>▪ Blinking feature (FLASH_ONCE) via the local display for simple device identification and assignment</li> <li>▪ Device operation via operating tools (e.g. FieldCare, DeviceCare)</li> </ul>
	System integration	For information on system integration, see the Operating Instructions <ul style="list-style-type: none"> <li>▪ Cyclic data transmission</li> <li>▪ Overview and description of the modules</li> <li>▪ Status coding</li> <li>▪ Startup configuration</li> <li>▪ Factory setting</li> </ul>

## Web server

The web server enables full access to the device configuration, measured values, diagnostic messages, logbooks and service data via standard WiFi/WLAN/LAN/GSM or 3G routers with a user-defined IP address.

TCP port	80
Supported features	<ul style="list-style-type: none"> <li>■ Remote-controlled device configuration(1 session)</li> <li>■ Save/restore device configuration (via SD card)</li> <li>■ Logbook export (file formats: CSV, FDM)</li> <li>■ Access to web server via DTM or Internet Explorer</li> <li>■ Login</li> <li>■ Web server can be switched off</li> </ul>

## 16.9 Energy supply

## Supply voltage

**CM44P**

Depending on the version,:

- 100 to 230 V AC, 50/60 Hz  
Maximum permitted fluctuation of mains supply voltage:  $\pm 15\%$  of nominal voltage <sup>6)</sup>
- 24 V DC  
Maximum permitted fluctuation of mains supply voltage:  $+20\%/-15\%$  of nominal voltage <sup>6)</sup>

## Power consumption

**CM44P**

Depending on supply voltage

- 100 to 230 V AC:  
Max. 73 VA (field device)  
Max. 150 VA (cabinet device) <sup>6)</sup>
- 24 V DC:  
Max. 68 W (field device)  
Max. 59 W (cabinet device) <sup>6)</sup>

## Fuse

Fuse not exchangeable


## Surge arrester

Integrated overvoltage/lightning protection as per EN 61326-1/-2  
Protection category 1 and 3


<sup>6)</sup> \*Specifications only apply if used with power unit supplied by manufacturer.

## Cable entries

*Cable entries for transmitters for the non-hazardous area*

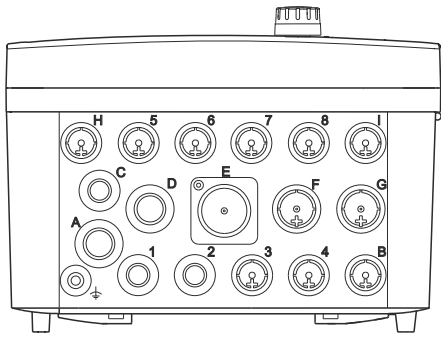Identification of the cable entry on housing base	Suitable gland																
B, C, H, I, 1-8	M16x1.5 mm/NPT3/8"/G3/8																
A, D, F, G	M20x1.5 mm/NPT1/2"/G1/2																
E	-																
⚡	M12x1.5 mm																
 <p style="text-align: right; font-size: small;">A0018025</p>																	
<b>Recommended assignment</b> <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">1-8</td><td>Sensors 1-8</td></tr> <tr> <td>A</td><td>Power supply</td></tr> <tr> <td>B</td><td>Unrestricted use</td></tr> <tr> <td>C</td><td>RS485 Out or M12 Ethernet</td></tr> <tr> <td>D,F,G</td><td>Current outputs and inputs, relays</td></tr> <tr> <td>H</td><td>RS485 In or M12 DP/RS485</td></tr> <tr> <td>I</td><td>Unrestricted use</td></tr> <tr> <td>E</td><td>Do not use</td></tr> </table>		1-8	Sensors 1-8	A	Power supply	B	Unrestricted use	C	RS485 Out or M12 Ethernet	D,F,G	Current outputs and inputs, relays	H	RS485 In or M12 DP/RS485	I	Unrestricted use	E	Do not use
1-8	Sensors 1-8																
A	Power supply																
B	Unrestricted use																
C	RS485 Out or M12 Ethernet																
D,F,G	Current outputs and inputs, relays																
H	RS485 In or M12 DP/RS485																
I	Unrestricted use																
E	Do not use																

*Cable entries for transmitters with sensor communication module 2DS Ex-i for the hazardous area*

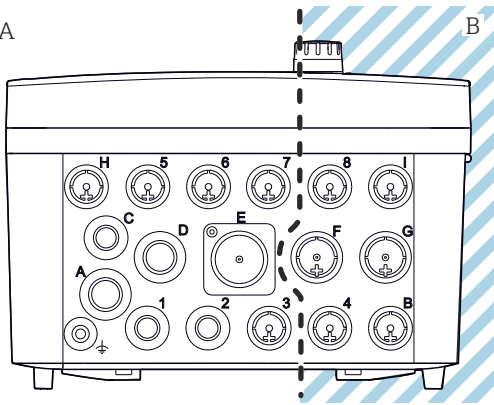Identification of the cable entry on housing base	Suitable gland																		
B, C, H, I, 1-8	M16x1.5 mm/NPT3/8"/G3/8																		
A, D, F, G	M20x1.5 mm/NPT1/2"/G1/2																		
E	-																		
⚡	M12x1.5 mm																		
 <p style="text-align: right; font-size: small;">A0045661</p>																			
<b>Recommended assignment</b> <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">1/2/3</td><td>Do not use</td></tr> <tr> <td>5/6/7</td><td></td></tr> <tr> <td>4/8</td><td>Intrinsically safe sensors</td></tr> <tr> <td>B/F/G/I</td><td></td></tr> <tr> <td>A</td><td>Power supply</td></tr> <tr> <td>C</td><td>RS485 Out or M12 Ethernet</td></tr> <tr> <td>D</td><td>Current outputs and inputs, relays</td></tr> <tr> <td>H</td><td>RS485 In or M12 DP/RS485</td></tr> <tr> <td>E</td><td>Do not use</td></tr> </table>		1/2/3	Do not use	5/6/7		4/8	Intrinsically safe sensors	B/F/G/I		A	Power supply	C	RS485 Out or M12 Ethernet	D	Current outputs and inputs, relays	H	RS485 In or M12 DP/RS485	E	Do not use
1/2/3	Do not use																		
5/6/7																			
4/8	Intrinsically safe sensors																		
B/F/G/I																			
A	Power supply																		
C	RS485 Out or M12 Ethernet																		
D	Current outputs and inputs, relays																		
H	RS485 In or M12 DP/RS485																		
E	Do not use																		

99 A: Non-hazardous area, B: Hazardous area



Do not cross cables for the non-hazardous area and the hazardous area in the housing. Select a suitable cable entry for the connection.

Cable specification	<b>Cable gland</b>	<b>Permitted cable diameter</b>
	M16x1.5 mm	4 to 8 mm (0.16 to 0.32")
	M12x1.5 mm	2 to 5 mm (0.08 to 0.20")
	M20x1.5 mm	6 to 12 mm (0.24 to 0.48")
	NPT3/8"	4 to 8 mm (0.16 to 0.32")
	G3/8	4 to 8 mm (0.16 to 0.32")
	NPT1/2"	6 to 12 mm (0.24 to 0.48")
	G1/2	7 to 12 mm (0.28 to 0.48")



Cable glands mounted at the factory are tightened with 2 Nm.

**Length of display cable provided (cabinet device only):**

3 m (10 ft)

**Maximum permitted length of a display cable (cabinet device only):**

5 m (16.5 ft)

## 16.10 Performance characteristics

Response time	<b>Current outputs</b> $t_{90}$ = max. 500 ms for an increase from 0 to 20 mA  <b>Current inputs</b> $t_{90}$ = max. 330 ms for an increase from 0 to 20 mA  <b>Digital inputs and outputs</b> $t_{90}$ = max. 330 ms for an increase from low to high
Reference temperature	25 °C (77 °F)
Measurement error for sensor inputs	→ Documentation of the connected sensor
Measurement error for current inputs and outputs	<b>Typical measured errors:</b> < 20 µA (with current values < 4 mA) < 50 µA (with current values 4 to 20 mA) at 25 °C (77 ° F) each  <b>Additional measured error depending on the temperature:</b> < 1.5 µA/K
Frequency tolerance of digital inputs and outputs	≤ 1%
Resolution of current inputs and outputs	< 5 µA
Repeatability	→ Documentation of the connected sensor

## 16.11 Environment

Ambient temperature	<p><b>Cabinet device</b></p> <ul style="list-style-type: none"> <li>■ Generally 0 to 50 °C (32 to 122 °F), with the exception of packages under the following point in the list</li> <li>■ 0 to 45 °C (32 to 113 °F) for the following packages: CM44P-**DINP2M4*A5FI*****+...</li> </ul> <p><b>External display (optional)</b> -20 to 60 °C (-4 to 140 °F)</p> <p><b>Field device</b></p> <ul style="list-style-type: none"> <li>■ Generally -20 to 50 °C (-4 to 122 °F), with the exception of packages under the following point in the list</li> <li>■ -20 to 45 °C (-4 to 113 °F) for the following packages: CM44P-**FIHP2M4*A5FI*****+...</li> </ul>
Storage temperature	<p><b>Field device</b> -40 to +80 °C (-40 to 176 °F)</p> <p><b>Cabinet device</b> -25 to 85 °C (-13 to 185 °F)</p>
Relative humidity	<p><b>cabinet device</b> 5 to 85%, not condensing</p> <p><b>External display (in installed state)</b> 10 to 95%, not condensing</p> <p><b>Field device</b> 10 to 95 %, non-condensing</p>
Degree of protection	<p><b>cabinet device</b> IP20</p> <p><b>External display</b> IP66 front-panel, when installed correctly including seal for housing door</p> <p><b>Field device</b> IP66/67, tightness and corrosion resistance in accordance with NEMA TYPE 4X</p>
Climate class	As per IEC 60654-1: B2
Vibration resistance	<p><b>Environmental tests</b> Vibration test according to DIN EN 60068-2 Vibration test according to DIN EN 60654-3</p>

	<b>Post or pipe mounting</b> Frequency range10 to 500 Hz (sinusoidal) Amplitude10 to 57.5 Hz:0.15 mm 57.5 to 500 Hz:2 g <sup>1)</sup> Test duration10 frequency cycles/ spatial axis, in 3 spatial axes (1 oct./ min)  <b>Wall mounting</b> Frequency range10 to 150 Hz (sinusoidal) Amplitude10 to 12.9 Hz:0.75 mm 12.9 to 150 Hz:0.5 g <sup>1)</sup> Test duration10 frequency cycles/ spatial axis, in 3 spatial axes (1 oct./ min)  1) g ... acceleration due to gravity (1 g ≈ 9.81 m/s²)
Electromagnetic compatibility	Interference emission and interference immunity as per EN 61326-1, class A for industrial areas
Electrical safety	<b>Field device</b> IEC 61010-1, Class I equipment Low voltage: overvoltage category II Environment < 3000 m (< 9840 ft) above MSL  <b>Cabinet device</b> IEC 61010-1, Class I equipment Low voltage: overvoltage category II Environment < 2000 m (< 6562 ft) above MSL
Pollution degree	<b>Field device</b> Pollution level 2  <b>cabinet device</b> Pollution level 2  <b>Optional display</b> Pollution level 2
Pressure compensation to environment field device only	Filter made of GORE-TEX used as pressure compensation element Ensures pressure compensation to environment and guarantees IP protection.

16.12 Mechanical construction

Dimensions	→  17
	→  19

## Weight

**Field device**

Complete device	Approx. 2.1 kg (4.63 lbs), depending on the version
Individual module	Approx. 0.06 kg (0.13 lbs)

**Cabinet device**

CM44P (fully configured)	Approx. 0.95 kg (2.1 lbs)
Individual module	Approx. 0.06 kg (0.13 lbs)
External display (excluding cables)	Approx. 0.56 kg (1.2 lbs)
Service display cover	0.46 kg (1 lbs)
External power unit	0.27 to 0.42 kg (0.60 to 0.92 lbs), depending on the power unit variant

## Materials

Housing base and DIN rail housing	PC-FR
Display cover	PC-FR
Display film and soft keys (field device)	PE
Housing seal Display seal	EPDM
Soft keys (optional display)	EPDM
Module side panels	PC-FR
Module housing 2DS Ex-i	PC-PBT
Module covers	PBT GF30 FR
Cable mounting rail (field device) Terminal strip (cabinet device)	PBT GF30 FR, stainless steel 1.4301 (AISI304) Nickel-plated brass
Clamps Ground terminals	Stainless steel 1.4301 (AISI304)
Screws	Stainless steel 1.4301 (AISI304)
Mounting plate (optional display)	Stainless steel 1.4301 (AISI304)
Securing screws (optional display)	Steel, galvanized
Cover for service display (accessories)	EPDM
Cable glands	Polyamide V0 as per UL94
Separation element	PC-PBT GF30

# Index

## A

Accessories	
Additional functionality	178
Communication-specific	177
Firmware and activation codes	179
Hardware extension modules	178
Measuring cables	172
Miscellaneous	180
Sensors	172
Activation code	76
Adapting the diagnostic behavior	137
Additional functions	
Cleaning programs	113
Controller	106
Limit switch	99
Mathematical functions	118
Measuring range switching	128
Time switch	103
Alarm relay	86
Ambient temperature	193
Application calibration	133
Assignment views	64

## B

Basic settings	64
Basic setup	61
Bus termination	48

## C

Cable entries	191
Cable specification	182, 183, 192
Cable terminals	33
Calculated pH value	122
Calibration	132
Cation exchanger capacity	122
Change password	77
Check	
Connection	50
Installation and function	59
Mounting	29
Chemoclean	43, 114
Chemoclean Plus	115
Chlorine control with feedforward control	94
Cleaning cycle	117
Cleaning function	90
Cleaning programs	
Chemoclean	114
Chemoclean Plus	115
Manual cleaning	118
Standard cleaning	114
Cleaning unit	43
Climate class	193
Combined chlorine	124
Commissioning	59
Configuration	
Binary inputs	96

Binary outputs	97
Configure	
Actions	57
Numerical values	57
Picklists	57
Tables	58
User-defined text	58
Configuring	
Display behavior	60
Operating language	59
User definable screens	60
Connection	
Cable entries	191
Check	50
Fieldbus (PROFIBUS, Modbus 485)	44
Functional ground	37
Measuring device	30
Optional modules	40
Protective ground	32
Sensors	36
Supply voltage	190
Web server	51, 52
Controller	87, 106
Controller structure	106
Current inputs	83
Current outputs	83

## D

Data management	75
Date	65
Degassed conductivity	120
Degree of protection	193
Device description	10
Device information	164
Device status	64
Device test	162
Device variables	91
Device-specific diagnostic messages	138
Device-specific errors	135
Diagnostic messages	
Adapting	136
Classification	136
Device-specific	138
Fieldbus	136
Local display	136
Outputting via the relay	89
Pending	157
Sensor-specific	142
Web browser	136
Diagnostic modules	130
Diagnostics list	158
Dimensions	17, 194
Disassembly	24
Display	62
Display behavior	60
Display cable	21



Disposal .....	171
Documentation .....	6
Dual conductivity .....	121

**E**

Electrical safety .....	194
Electromagnetic compatibility .....	194
Energy supply .....	190
Cable entries .....	191
Cable specification .....	192
Connecting the fieldbus (PROFIBUS, Modbus 485) .....	44
Connecting the measuring device .....	30
Fuse .....	190
Power consumption .....	190
Protective ground connection .....	32
Sensor connection .....	36
Supply voltage .....	190
Surge arrester .....	190
Ensuring the degree of protection .....	49
Ethernet/IP .....	73, 92, 188
EtherNet/IP .....	54
Event logbook .....	158
Exporting the setup .....	76
Extended setup .....	70

**F**

Factory setting .....	82
Fieldbus .....	
Termination .....	48
Firmware history .....	167
Firmware update .....	75
Formula .....	125
Function check .....	59
Functional ground .....	37
Fuse .....	190

**H**

Hardware settings .....	48
HART .....	53, 91, 187
HART bus address .....	71
Heartbeat diagnostics .....	62
Heartbeat verification .....	162
Hold settings .....	66
Housing .....	30

**I**

Identifying the product .....	15
Incoming acceptance .....	15
Input .....	
Current input, passive .....	183
Digital inputs, passive .....	183
Measured variables .....	182
Input signal .....	182
Inputs .....	
Binary .....	93
Current inputs .....	83
Spectrometer .....	78
Installation check .....	59
Installation environment .....	8
Intended use .....	7

**L**

Laplace representation .....	106
Limit switch .....	87, 99
Loading the setup .....	75
Logbooks .....	66, 158

**M**

M12 plug .....	46
Maintenance .....	169
Manipulated variable .....	87
Materials .....	195
Mathematical functions .....	118
Calculated pH value .....	122
Cation exchanger capacity .....	122
Combined chlorine .....	124
Degassed conductivity .....	120
Difference .....	118
Dual conductivity .....	121
Formula .....	125
Redundancy .....	119
rH value .....	120
Measured variables .....	182
Measuring mode .....	62
Measuring range switching .....	128
Measuring ranges .....	182
Modbus .....	54, 71, 92
Modbus 485 .....	
Connection .....	44
Modbus RS485 .....	187
Modbus TCP .....	187
Mounting .....	
Check .....	29
Post .....	21
Rail .....	23
Wall .....	24
Mounting plate .....	17
Mounting requirements .....	17
Mounting the measuring device .....	21

**N**

Nameplate .....	15
-----------------	----

**O**

Operating language .....	59
Operation .....	
Configure .....	57
Display .....	62
General settings .....	64
Operational safety .....	8
Output .....	
Current outputs, active .....	185
Digital outputs, passive .....	185
Output signal .....	183
Relay outputs .....	186
Outputs .....	
Binary .....	93
Current outputs .....	83
Ethernet/IP .....	92
HART .....	91

Modbus .....	92
PROFIBUS DP .....	91
PROFINET .....	91
Relay .....	86

## P

Pollution degree .....	194
Power consumption .....	190
Power supply	
Connecting optional modules .....	40
Power-up .....	59
Process errors without messages .....	135
Product safety .....	9
PROFIBUS	
Connection .....	44
PROFIBUS DP .....	53, 71, 187
Device variables .....	91
PROFIBUS variables .....	92
PROFINET .....	54, 189
Device variables .....	91
PROFINET variables .....	92
Protocol-specific data .....	187

## R

Relative humidity .....	193
Relay .....	86
Remote operation .....	30
Repair .....	171
Requirements of the personnel .....	7
Resetting the measuring device .....	163
Return .....	171
rH value .....	120

## S

Safety	
IT .....	9
Operation .....	8
Product .....	9
Workplace safety .....	8
Safety instructions .....	7
Saving the setup .....	75
Scope of delivery .....	16
Sensor	
Connection .....	36
Sensor change .....	82
Sensor information .....	166
Sensor-specific diagnostic messages .....	142
Service interface .....	52
Settings	
Diagnosis .....	70
Ethernet/IP .....	73
Extended .....	70
General .....	64
Hardware .....	48
HART bus address .....	71
Modbus .....	71
PROFIBUS DP .....	71
PROFINET .....	73
Web server .....	72

## Setup

Basic .....	61
Simulation .....	161
Slot and port assignment .....	13
Soft keys in measuring mode .....	62
Spare parts .....	171
Spectrometer	
Application .....	78
Basic settings .....	78
Calibration settings .....	79
Diagnostic settings .....	80
Extended setup .....	79
Standard cleaning .....	114
State-of-the-art .....	9
Storage temperature .....	193
Supply voltage .....	190
Surge arrester .....	190
Symbols .....	5
System information .....	164
System integration	
Fieldbus .....	53
Service interface .....	52
Web server .....	51

## T

TAG .....	82
Tag check .....	82
Take reference spectrum .....	132
Technical data	
Current input, passive .....	183
Current outputs, active .....	185
Digital inputs, passive .....	183
Digital outputs, passive .....	185
Environment .....	193
Input .....	182
Mechanical construction .....	194
Output .....	183
Performance characteristics .....	192
Protocol-specific data .....	187
Relay outputs .....	186
Technical personnel .....	7
Temperature .....	134
Terminal diagram .....	14
Time .....	65
Time switch .....	103
Troubleshooting .....	135
Diagnostic information .....	136
General troubleshooting .....	135
Types of cleaning .....	114
Types of input .....	182

## U

Use	
Intended .....	7
Non-intended .....	7
User definable screens .....	60

## V

Vibration resistance .....	193
----------------------------	-----

**W**

Warnings . . . . . 5

Weather protection cover . . . . . 18

Web server . . . . . 72, 190

Weight . . . . . 195

Workplace safety . . . . . 8



[www.addresses.endress.com](http://www.addresses.endress.com)

---