
BA02114D/06/EN/01.22-00 71598684 2024-01-08 Valid as of version 01.00.zz (Device firmware)

# Operating Instructions **Proline Promass P 300**

Coriolis flowmeter PROFINET with Ethernet-APL

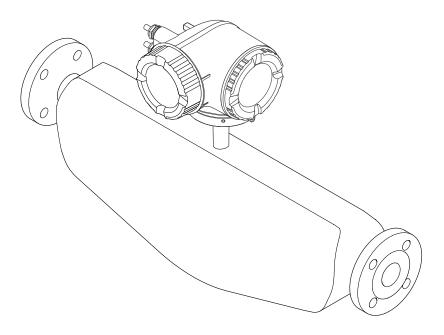





- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

## Table of contents

1	About	this document	6
1.1		nt function	6
1.2		Safatu gumbala	6 6
		Safety symbols	6
		Communication-specific symbols	6
		Fool symbols	7
		Symbols for	
		certain types of information	
1.3		Symbols in graphics	7 8
1.7		Document function	8
1.4		ed trademarks	8
2	Safety i	instructions	9
2.1	Requiren	nents for the personnel	9
2.2	Intended	use	9
2.3		ce safety	10
2.4 2.5		nal safety	10 10
2.6		ty	10
2.7		pecific IT security	11
	2.7.1 I	Protecting access via hardware write	
		protection	11
		Protecting access via a password Access via Web server	11 12
		Access via service interface (CDI-	12
		RJ45)	12
3	Produc	t description	13
3.1	Product o	design	13
4	Incomi	ng acceptance and product	
	identifi	ication	14
4.1	Incomino	J acceptance	14
4.2		dentification	14
		Transmitter nameplate	15
		Sensor nameplate	16 17
	4.2.3 \$	Symbols on measuring device	1/
5	Storage	e and transport	18
5.1		conditions	18
5.2		ting the product	18
		Measuring devices without lifting	18
		ugs	10
		Fransporting with a fork lift	19
5.3		g disposal	19

6	Mounting	20
6.1	Mounting requirements	20
	6.1.1 Mounting position	20
	6.1.2 Environment and process	
	requirements	22
	6.1.3 Special mounting instructions	24
6.2	Mounting the measuring device	25
	6.2.1 Required tools	25
	6.2.2 Preparing the measuring device	25
	6.2.3 Mounting the measuring device	26
	6.2.4 Turning the transmitter housing	26
6.3	6.2.5 Turning the display module Post-installation check	27 28
0.5		20
7	Electrical connection	29
7.1	Electrical safety	29
7.2	Connecting requirements	29
	7.2.1 Required tools	29
	7.2.2 Requirements for connecting cable	29
	7.2.3 Terminal assignment	32
	7.2.4 Available device plugs	32
	7.2.5 device plug pin assignment	32
	7.2.6 Preparing the measuring device	32
7.3	Connecting the measuring device	33
	7.3.1 Connecting the transmitter	33
	7.3.2 Connecting the remote display and	26
7.4	operating module DKX001 Potential equalization	36 36
7.4	7.4.1 Requirements	36
7.5	Special connection instructions	37
1.5	7.5.1 Connection examples	37
7.6	Hardware settings	40
	7.6.1 Setting the device name	40
	7.6.2 Activating the default IP address	41
7.7	Ensuring the degree of protection	42
7.8	Post-connection check	42
8	Operation options	43
-		
8.1 8.2	Overview of operation options Structure and function of the operating	43
	menu	44
	8.2.1 Structure of the operating menu	44
0.0	8.2.2 Operating philosophy	45
8.3	Access to the operating menu via the local	1.6
	display	46 46
	1 1 5	40 48
	<ul><li>8.3.2 Navigation view</li><li>8.3.3 Editing view</li></ul>	40 50
	8.3.4 Operating elements	52
	8.3.5 Opening the context menu	52
	8.3.6 Navigating and selecting from list	54
	8.3.7 Calling the parameter directly	54
	8.3.8 Calling up help text	55
	8.3.9 Changing the parameters	55

detection ..... 119

10.5.14 Configuring partially filled pipe

	8.3.10	User roles and related access	ГC
	0 2 1 1	authorization	56
	8.3.11	Disabling write protection via access code	56
	8.3.12	code	50
	0.9.12	lock	57
8.4	Access	to operating menu via Web browser	58
	8.4.1	PROFINET with Ethernet-APL	58
	8.4.2	Prerequisites	58
	8.4.3	Establishing a connection	60
	8.4.4	Logging on	62
	8.4.5	User interface	63
	8.4.6	Disabling the Web server	64
	8.4.7	Logging out	64
8.5	Access	to the operating menu via the	
	operati	ng tool	65
	8.5.1	Connecting the operating tool	65
	8.5.2	FieldCare	68
	8.5.3	DeviceCare	69
	8.5.4	SIMATIC PDM	69
9	Syster	m integration	71
9.1	Overvie	ew of device description files	71
2.1	9.1.1	Current version data for the device	71
	9.1.2	Operating tools	71
9.2		master file (GSD)	71
	9.2.1	File name of the manufacturer-	
		specific device master file (GSD)	72
	9.2.2	File name of the PA Profile device	
		master file (GSD)	72
9.3	Cyclic d	master file (GSD)	72 73
9.3	Cyclic d 9.3.1	master file (GSD) lata transmission Overview of the modules	
9.3		lata transmission	73
9.3	9.3.1	lata transmission Overview of the modules	73 73
9.3	9.3.1 9.3.2	lata transmissionOverview of the modulesDescription of the modules	73 73 74
9.3 9.4	9.3.1 9.3.2 9.3.3 9.3.4	lata transmissionOverview of the modulesDescription of the modulesStatus coding	73 73 74 83
	9.3.1 9.3.2 9.3.3 9.3.4	lata transmissionOverview of the modulesDescription of the modulesStatus codingFactory setting	73 73 74 83 84
	9.3.1 9.3.2 9.3.3 9.3.4 System	lata transmissionOverview of the modulesDescription of the modulesStatus codingFactory setting	73 73 74 83 84
9.4 <b>10</b>	9.3.1 9.3.2 9.3.3 9.3.4 System	lata transmissionOverview of the modulesDescription of the modulesStatus codingFactory settingredundancy S2	73 73 74 83 84 85 <b>86</b>
9.4 <b>10</b> 10.1	9.3.1 9.3.2 9.3.3 9.3.4 System Post-in	lata transmission       Overview of the modules         Overview of the modules       Description of the modules         Description of the modules       Status coding         Status coding       Status coding         Factory setting       Factory setting         redundancy S2       Status         hissioning       Status connection check	73 73 74 83 84 85 <b>86</b> 86
9.4 <b>10</b> 10.1 10.2	9.3.1 9.3.2 9.3.3 9.3.4 System Post-in Switchi	lata transmission       Overview of the modules         Overview of the modules       Description of the modules         Description of the modules       Status coding         Status coding       Status coding         Factory setting       Factory setting         redundancy S2       Factory         nissioning       Stallation and post-connection check         ng on the measuring device       Stallation	73 73 74 83 84 85 <b>86</b> 86 86
9.4 <b>10</b> 10.1 10.2 10.3	9.3.1 9.3.2 9.3.3 9.3.4 System Post-in Switchi Connec	lata transmission       Overview of the modules         Description of the modules       Description         Status coding       Status         Factory setting       Factory setting         redundancy S2       Status         nissioning       Status         stallation and post-connection check       Image: Mage: M	73 73 74 83 84 85 <b>86</b> 86 86 86
9.4 <b>10</b> 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 System Comm Post-in Switchi Connec Setting	lata transmission       Overview of the modules         Description of the modules       Description         Status coding       Status         Factory setting       Factory setting         redundancy S2       Factory         hissioning       Status         stallation and post-connection check       Status         ng on the measuring device       Status         the operating language       Status	73 73 74 83 84 85 <b>86</b> 86 86
9.4 <b>10</b> 10.1 10.2 10.3	9.3.1 9.3.2 9.3.3 9.3.4 System Comm Post-in Switchi Connec Setting Configu	lata transmission         Overview of the modules         Description of the modules         Status coding         Factory setting         redundancy S2 <b>hissioning</b> stallation and post-connection check .         ng on the measuring device         the operating language         uring the measuring device	73 73 74 83 84 85 <b>86</b> 86 86 86 86 86
9.4 <b>10</b> 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 System Comm Post-in Switchi Connec Setting Configu	lata transmission         Overview of the modules         Description of the modules         Status coding         Factory setting         redundancy S2         hissioning         stallation and post-connection check .         ng on the measuring device         the operating language         uring the measuring device         Defining the tag name	73 74 83 84 85 <b>86</b> 86 86 86 86 86 86 87
9.4 <b>10</b> 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 System Post-in Switchi Connec Setting Configu 10.5.1	lata transmission         Overview of the modules         Description of the modules         Status coding         Factory setting         redundancy S2         hissioning         stallation and post-connection check .         ng on the measuring device         the operating language         uring the measuring device         Defining the tag name         Displaying the communication	73 74 83 84 85 <b>86</b> 86 86 86 86 86 86 87
9.4 <b>10</b> 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 System Post-in Switchi Connec Setting Configu 10.5.1	lata transmission         Overview of the modules         Description of the modules         Status coding         Factory setting         redundancy S2         hissioning         stallation and post-connection check .         ng on the measuring device         the operating language         uring the measuring device         Defining the tag name	73 74 83 84 85 <b>86</b> 86 86 86 86 86 86 86 86 88 88 88
9.4 <b>10</b> 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 System Post-in Switchi Connec Setting Configu 10.5.1 10.5.2	lata transmission         Overview of the modules         Description of the modules         Status coding         Status coding         Factory setting         redundancy S2 <b>hissioning</b> stallation and post-connection check         ng on the measuring device         the operating language         uring the measuring device         Defining the tag name         Displaying the communication         interface	73 74 83 84 85 <b>86</b> 86 86 86 86 86 86 86 86 88 88 88
9.4 <b>10</b> 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 System Post-in Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5	lata transmission         Overview of the modules         Description of the modules         Status coding         Factory setting         redundancy S2 <b>hissioning</b> stallation and post-connection check .         ng on the measuring device         the operating language         uring the measuring device         Defining the tag name         Displaying the communication         interface         Setting the system units         Selecting and setting the medium         Configuration of the Analog Inputs	73 74 83 84 85 <b>86</b> 86 86 86 86 86 86 86 86 88 88 90 93 94
9.4 <b>10</b> 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 System Post-in Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6	lata transmission         Overview of the modules         Description of the modules         Status coding         Factory setting         redundancy S2         hissioning         stallation and post-connection check         ng on the measuring device         the operating language         uring the measuring device         Defining the tag name         Displaying the communication         interface         Setting the system units         Selecting and setting the medium         Configuration of the Analog Inputs         Displaying the I/O configuration	73 74 83 84 85 <b>86</b> 86 86 86 86 86 86 86 86 88 88 90 93 94 97
9.4 <b>10</b> 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 System Post-in Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7	lata transmission         Overview of the modules         Description of the modules         Status coding         Factory setting         redundancy S2         hissioning         stallation and post-connection check .         ng on the measuring device         the operating language         uring the measuring device         Defining the tag name         Displaying the communication         interface         Selecting and setting the medium         Configuration of the Analog Inputs         Displaying the I/O configuration	73 74 83 84 85 <b>86</b> 86 86 86 86 86 86 86 86 88 88 90 93 94 97 98
9.4 <b>10</b> 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 System Post-in Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8	lata transmission         Overview of the modules         Description of the modules         Status coding         Status coding         Factory setting         redundancy S2         hissioning         stallation and post-connection check         ng on the measuring device         the operating language         uring the measuring device         Defining the tag name         Displaying the communication         interface         Setting the system units         Selecting and setting the medium         Configuration of the Analog Inputs         Displaying the current input         Configuring the status input	73 74 83 84 85 <b>86</b> 86 86 86 86 86 86 86 86 88 88 90 93 94 97 98 99
9.4 <b>10</b> 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 System Post-in Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9	lata transmission       Overview of the modules         Description of the modules       Description of the modules         Status coding       Status coding         Factory setting       Factory setting         redundancy S2       Factory setting         hissioning       Stallation and post-connection check         ng on the measuring device       Stallation and post-connection check         ng on the measuring device       Stallation         the operating language       Stallation         uring the measuring device       Stallation         Defining the tag name       Defining the tag name         Displaying the communication       Interface         Setting the system units       Selecting and setting the medium         Configuration of the Analog Inputs       Displaying the I/O configuration         Configuring the current input       Configuring the status input         Configuring the current output       Setting the current output	73 74 83 84 85 <b>86</b> 86 86 86 86 86 86 86 86 88 88 90 93 94 97 98
9.4 <b>10</b> 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 System Post-in Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9	lata transmission       Overview of the modules         Description of the modules       Description of the modules         Status coding       Factory setting         Factory setting       Factory setting         redundancy S2       Factory setting         hissioning       Factory setting         stallation and post-connection check       Factory setting         ng on the measuring device       Factory         the operating language       Factory         the operating language       Factory         uring the measuring device       Factory         Defining the tag name       Factory         Defining the tag name       Factory         Displaying the communication       Interface         Setting the system units       Factory         Selecting and setting the medium       Factory         Configuration of the Analog Inputs       Factory         Displaying the I/O configuration       Factory         Configuring the status input       Factory         Configuring the current output       Factory         Configuring the pulse/frequency/       Factory	73 74 83 84 85 <b>86</b> 86 86 86 86 86 86 88 88 90 93 93 94 97 98 99 100
9.4 <b>10</b> 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 System Post-in Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.10	lata transmission       Overview of the modules         Description of the modules       Description of the modules         Status coding       Factory setting         Factory setting       redundancy S2         nissioning       fissioning         stallation and post-connection check       ng on the measuring device         ng on the measuring device       fill fieldCare         the operating language       fill field f	73 74 83 84 85 <b>86</b> 86 86 86 86 86 86 86 86 88 88 90 93 93 94 97 98 99 100
9.4 <b>10</b> 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 System Post-in Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.10 10.5.11	lata transmission       Overview of the modules         Description of the modules       Description of the modules         Status coding       Factory setting         Factory setting       redundancy S2         nissioning       fissioning         stallation and post-connection check       ng on the measuring device         ng on the measuring device       fill for the for the for the for the for the operating language         the operating language       for the for t	73 74 83 84 85 <b>86</b> 86 86 86 86 86 86 86 86 88 90 93 94 97 98 99 100
9.4 <b>10</b> 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 System Post-in Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.10 10.5.11 10.5.12	lata transmission       Overview of the modules         Description of the modules       Description of the modules         Status coding       Factory setting         Factory setting       redundancy S2         nissioning       fissioning         stallation and post-connection check       ng on the measuring device         ng on the measuring device       fing the fieldCare         the operating language       fing the measuring device         uring the measuring device       fing the tag name         Displaying the communication       interface         Setting the system units       fing the fag name         Configuration of the Analog Inputs       fing the formation         Configuring the current input       fing fing the current input         Configuring the status input       fing fing the pulse/frequency/         switch output       fing fing the relay output         Configuring the relay output       fing fing fing fing fing fing fing fing	73 74 83 84 85 <b>86</b> 86 86 86 86 86 86 86 88 88 90 93 94 97 98 99 100 103 111 114
9.4 <b>10</b> 10.1 10.2 10.3 10.4	9.3.1 9.3.2 9.3.3 9.3.4 System Post-in Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.10 10.5.11 10.5.12	lata transmission       Overview of the modules         Description of the modules       Description of the modules         Status coding       Factory setting         Factory setting       redundancy S2         nissioning       stallation and post-connection check .         ng on the measuring device       ng on the measuring device         the operating language       the operating language         uring the measuring device       Defining the tag name         Displaying the communication interface       Setting the system units         Selecting and setting the medium       Selecting and setting the medium         Configuring the current input       Configuring the current output         Configuring the pulse/frequency/       switch output         Switch output       Selecing and setlay output	73 74 83 84 85 <b>86</b> 86 86 86 86 86 86 86 86 88 90 93 94 97 98 99 100

10.6	Advance 10.6.1	ed settings	120
	10 ( 0	access code	121
	10.6.2 10.6.3	Calculated process variables Carrying out a sensor adjustment	121 122
	10.6.4	Configuring the totalizer	122
	10.6.5	Carrying out additional display	107
		configurations	131
	10.6.6	WLAN configuration	137
	10.6.7 10.6.8	Viscosity application package Concentration Measurement	139
	10.0.8	application package	139
	10.6.9	Petroleum application package	140
	10.6.10	Heartbeat Technology application	
		package	140
		Configuration management	140
	10.6.12	Using parameters for device administration	141
10.7	Simulati	ion	141
10.8		ng settings from unauthorized access	145
		Write protection via access code	145
	10.8.2	1 1	
		switch	147
11	Operat	tion	149
11.1		off the device locking status	149
11.2		ng the operating language	149
11.3 11.4		ring the display	149 149
11.4	11 4 1	"Measured variables" submenu	149
		Totalizer	
	11.4.2		152
		"Input values" submenu	152 153
	11.4.3 11.4.4	"Input values" submenu Output values	
11.5	11.4.3 11.4.4 Adaptin	"Input values" submenu Output values	153 154
	11.4.3 11.4.4 Adaptin conditio	"Input values" submenu Output values	153 154 156
11.5 11.6	11.4.3 11.4.4 Adaptin conditio Perform	"Input values" submenu Output values Ig the measuring device to the process ins ing a totalizer reset	153 154
	11.4.3 11.4.4 Adaptin conditio Perform	"Input values" submenu Output values Ig the measuring device to the process ins ing a totalizer reset Function scope of "Control Totalizer"	153 154 156
	11.4.3 11.4.4 Adaptin conditio Perform 11.6.1	"Input values" submenu Output values Ing the measuring device to the process ins Thing a totalizer reset Function scope of "Control Totalizer" parameter Function scope of the "Reset all	153 154 156 156 157
11.6	11.4.3 11.4.4 Adaptin conditio Perform 11.6.1 11.6.2	"Input values" submenu Output values	153 154 156 156 157 157
11.6 11.7	11.4.3 11.4.4 Adaptin conditio Perform 11.6.1 11.6.2 Show da	"Input values" submenu Output values Ig the measuring device to the process ins ing a totalizer reset Function scope of "Control Totalizer" parameter Function scope of the "Reset all totalizers" parameter ata logging	153 154 156 156 157 157
11.6	11.4.3 11.4.4 Adaptin conditio Perform 11.6.1 11.6.2 Show da Gas Frac	"Input values" submenu Output values Ig the measuring device to the process ins ing a totalizer reset Function scope of "Control Totalizer" parameter Function scope of the "Reset all totalizers" parameter ata logging ction Handler	153 154 156 156 157 157 158 161
11.6 11.7	11.4.3 11.4.4 Adaptin conditio Perform 11.6.1 11.6.2 Show da Gas Frac 11.8.1	"Input values" submenu Output values Ing the measuring device to the process ins ing a totalizer reset Function scope of "Control Totalizer" parameter Function scope of the "Reset all totalizers" parameter ita logging ction Handler "Measurement mode" submenu	153 154 156 156 157 157
11.6 11.7 11.8	11.4.3 11.4.4 Adaptin conditio Perform 11.6.1 11.6.2 Show da Gas Frac 11.8.1 11.8.2	"Input values" submenu Output values Ig the measuring device to the process ins Function scope of "Control Totalizer" parameter Function scope of the "Reset all totalizers" parameter ata logging totion Handler "Measurement mode" submenu "Medium index" submenu	153 154 156 156 157 157 158 161 162 162
11.6 11.7 11.8 <b>12</b>	11.4.3 11.4.4 Adaptin conditio Perform 11.6.1 11.6.2 Show da Gas Frac 11.8.1 11.8.2 <b>Diagno</b>	"Input values" submenu Output values Ig the measuring device to the process ins Function scope of "Control Totalizer" parameter Function scope of the "Reset all totalizers" parameter Ata logging total Handler "Measurement mode" submenu "Medium index" submenu	153 154 156 156 157 157 158 161 162 162 162
<ul> <li>11.6</li> <li>11.7</li> <li>11.8</li> <li>12</li> <li>12.1</li> </ul>	11.4.3 11.4.4 Adaptin conditio Perform 11.6.1 11.6.2 Show da Gas Frac 11.8.1 11.8.2 <b>Diagno</b> General	"Input values" submenu Output values Ig the measuring device to the process ins Function scope of "Control Totalizer" parameter Function scope of the "Reset all totalizers" parameter ata logging totalizers" submenu "Measurement mode" submenu "Medium index" submenu troubleshooting	153 154 156 156 157 157 158 161 162 162
11.6 11.7 11.8 <b>12</b>	11.4.3 11.4.4 Adaptin conditio Perform 11.6.1 11.6.2 Show da Gas Frac 11.8.1 11.8.2 <b>Diagno</b> General Diagnos	"Input values" submenu Output values Ig the measuring device to the process ins Function scope of "Control Totalizer" parameter Function scope of the "Reset all totalizers" parameter ata logging totalizers" parameter "Measurement mode" submenu "Medium index" submenu "Medium index" submenu troubleshooting troubleshooting	153 154 156 156 157 157 158 161 162 162 <b>164</b>
<ul> <li>11.6</li> <li>11.7</li> <li>11.8</li> <li>12</li> <li>12.1</li> </ul>	11.4.3 11.4.4 Adaptin conditio Perform 11.6.1 11.6.2 Show da Gas Frac 11.8.1 11.8.2 <b>Diagno</b> General Diagnos diodes .	"Input values" submenu Output values	153 154 156 157 157 158 161 162 162 <b>164</b> 164 166
<ul> <li>11.6</li> <li>11.7</li> <li>11.8</li> <li>12</li> <li>12.1</li> </ul>	11.4.3 11.4.4 Adaptin conditio Perform 11.6.1 11.6.2 Show da Gas Frac 11.8.1 11.8.2 <b>Diagno</b> General Diagnos diodes . 12.2.1	"Input values" submenu Output values Ig the measuring device to the process ins Function scope of "Control Totalizer" parameter Function scope of the "Reset all totalizers" parameter ata logging totalizers" parameter "Measurement mode" submenu "Medium index" submenu "Medium index" submenu troubleshooting troubleshooting	153 154 156 156 157 157 158 161 162 162 <b>164</b>
11.6 11.7 11.8 <b>12</b> 12.1 12.2	11.4.3 11.4.4 Adaptin conditio Perform 11.6.1 11.6.2 Show da Gas Frac 11.8.1 11.8.2 <b>Diagno</b> General Diagnos diodes . 12.2.1	"Input values" submenu	153 154 156 157 157 158 161 162 162 164 164 166 166
<ul> <li>11.6</li> <li>11.7</li> <li>11.8</li> <li>12</li> <li>12.1</li> <li>12.2</li> <li>12.3</li> </ul>	11.4.3 11.4.4 Adaptin conditio Perform 11.6.1 11.6.2 Show da Gas Frac 11.8.1 11.8.2 <b>Diagnos</b> diodes . 12.2.1 Diagnos 12.3.1 12.3.2	"Input values" submenu Output values	153 154 156 157 157 158 161 162 162 162 164 166 166 168 168 168 170
11.6 11.7 11.8 <b>12</b> 12.1 12.2	11.4.3 11.4.4 Adaptin conditio Perform 11.6.1 11.6.2 Show da Gas Frac 11.8.1 11.8.2 <b>Diagnos</b> diodes . 12.2.1 Diagnos 12.3.1 12.3.2 Diagnos	"Input values" submenu Output values	153 154 156 157 157 158 161 162 162 164 164 166 166 166 168 168 170 170
<ul> <li>11.6</li> <li>11.7</li> <li>11.8</li> <li>12</li> <li>12.1</li> <li>12.2</li> <li>12.3</li> </ul>	11.4.3 11.4.4 Adaptin conditio Perform 11.6.1 11.6.2 Show da Gas Frac 11.8.1 11.8.2 <b>Diagnos</b> diodes . 12.2.1 Diagnos 12.3.1 12.3.2	"Input values" submenu Output values	153 154 156 157 157 158 161 162 162 162 164 166 166 168 168 168 170

12.5	Diagnostic information in FieldCare or	
	DeviceCare	171
	12.5.1 Diagnostic options	171
	12.5.2 Calling up remedy information	172
12.6	Adapting the diagnostic information	173
	12.6.1 Adapting the diagnostic behavior	173
12.7	Overview of diagnostic information	174
	12.7.1 Diagnostic of sensor	175
	12.7.2 Diagnostic of electronic	187
	12.7.3 Diagnostic of configuration	215
12.0	12.7.4 Diagnostic of process	226
12.8	Pending diagnostic events	240
12.9	Diagnostic list	241 241
12.10	Event logbook	241 241
	12.10.1 Reading out the event logbook	241
	12.10.2 Filtering the event logbook 12.10.3 Overview of information events	242 242
12 11	Resetting the measuring device	244
12.11	12.11.1 Function scope of "Device reset"	244
	parameter	244
12 12	Device information	244
	Firmware history	246
10.19		210
13	Maintenance	247
13.1	Maintenance tasks	
	13.1.1 Exterior cleaning	247
10.0	13.1.2 Interior cleaning	247 247
		////
13.2	Measuring and test equipment	
13.3	Endress+Hauser services	247
13.3	Endress+Hauser services	247
13.3 <b>14</b>	Endress+Hauser services	247 <b>248</b>
13.3	Endress+Hauser services	247 <b>248</b> 248
13.3 <b>14</b>	Endress+Hauser services         Repair         General information         14.1.1         Repair and conversion concept	247 <b>248</b> 248 248
13.3 <b>14</b> 14.1	Endress+Hauser services <b>Repair</b> General information 14.1.1 Repair and conversion concept 14.1.2 Notes for repair and conversion	247 <b>248</b> 248 248 248
<ul><li>13.3</li><li><b>14</b></li><li>14.1</li><li>14.2</li></ul>	Endress+Hauser services	247 <b>248</b> 248 248 248 248 248
<ul> <li>13.3</li> <li><b>14</b></li> <li>14.1</li> <li>14.2</li> <li>14.3</li> </ul>	Endress+Hauser services <b>Repair</b> General information 14.1.1 Repair and conversion concept 14.1.2 Notes for repair and conversion Spare parts Endress+Hauser services	247 <b>248</b> 248 248 248
<ul> <li>13.3</li> <li><b>14</b></li> <li>14.1</li> <li>14.2</li> <li>14.3</li> <li>14.4</li> </ul>	Endress+Hauser services <b>Repair</b> General information 14.1.1 Repair and conversion concept 14.1.2 Notes for repair and conversion Spare parts Endress+Hauser services Return	247 248 248 248 248 248 248 248 248 248
<ul> <li>13.3</li> <li><b>14</b></li> <li>14.1</li> <li>14.2</li> <li>14.3</li> </ul>	Endress+Hauser services <b>Repair</b> General information 14.1.1 Repair and conversion concept 14.1.2 Notes for repair and conversion Spare parts Endress+Hauser services Return Disposal	247 248 248 248 248 248 248 248 248 248 248
<ul> <li>13.3</li> <li><b>14</b></li> <li>14.1</li> <li>14.2</li> <li>14.3</li> <li>14.4</li> </ul>	Endress+Hauser services <b>Repair</b> General information 14.1.1 Repair and conversion concept 14.1.2 Notes for repair and conversion Spare parts Endress+Hauser services Return Disposal 14.5.1 Removing the measuring device	247 <b>248</b> 248 248 248 248 248 248 248 249 249
<ul> <li>13.3</li> <li><b>14</b></li> <li>14.1</li> <li>14.2</li> <li>14.3</li> <li>14.4</li> </ul>	Endress+Hauser services <b>Repair</b> General information 14.1.1 Repair and conversion concept 14.1.2 Notes for repair and conversion Spare parts Endress+Hauser services Return Disposal	247 248 248 248 248 248 248 248 248 248 248
13.3 <b>14</b> 14.1 14.2 14.3 14.4 14.5	Endress+Hauser services	247 248 248 248 248 248 248 248 248 249 249 249 249
<ul> <li>13.3</li> <li><b>14</b></li> <li>14.1</li> <li>14.2</li> <li>14.3</li> <li>14.4</li> </ul>	Endress+Hauser services <b>Repair</b> General information 14.1.1 Repair and conversion concept 14.1.2 Notes for repair and conversion Spare parts Endress+Hauser services Return Disposal 14.5.1 Removing the measuring device	247 <b>248</b> 248 248 248 248 248 248 248 249 249
13.3 <b>14</b> 14.1 14.2 14.3 14.4 14.5	Endress+Hauser services <b>Repair</b> General information 14.1.1 Repair and conversion concept 14.1.2 Notes for repair and conversion Spare parts Endress+Hauser services Return Disposal 14.5.1 Removing the measuring device 14.5.2 Disposing of the measuring device Accessories	247 248 248 248 248 248 248 248 248 249 249 249 249
13.3 <b>14</b> 14.1 14.2 14.3 14.4 14.5 <b>15</b>	Endress+Hauser services	247 248 248 248 248 248 248 248 249 249 249 249 249 249
13.3 <b>14</b> 14.1 14.2 14.3 14.4 14.5 <b>15</b>	Endress+Hauser services	247 248 248 248 248 248 248 249 249 249 249 249 249 249 249 249 250
13.3 <b>14</b> 14.1 14.2 14.3 14.4 14.5 <b>15</b>	Endress+Hauser services	247 248 248 248 248 248 248 249 249 249 249 249 249 249 249 250 250
13.3 <b>14</b> 14.1 14.2 14.3 14.4 14.5 <b>15</b> 15.1	Endress+Hauser services	247 248 248 248 248 248 248 249 249 249 249 249 249 249 249 250 250 250 251
<ul> <li>13.3</li> <li>14</li> <li>14.1</li> <li>14.2</li> <li>14.3</li> <li>14.4</li> <li>14.5</li> </ul> 15.1 15.2	Endress+Hauser services	247 248 248 248 248 248 248 248 249 249 249 249 249 249 249 249 250 250 250 251 251
13.3 <b>14</b> 14.1 14.2 14.3 14.4 14.5 <b>15</b> 15.1 15.2 15.3	Endress+Hauser services	247 248 248 248 248 248 248 248 249 249 249 249 249 249 249 250 250 250 251 251 252
13.3 <b>14</b> 14.1 14.2 14.3 14.4 14.5 <b>15</b> 15.1 15.2 15.3	Endress+Hauser services	247 248 248 248 248 248 248 248 249 249 249 249 249 249 249 250 250 250 251 251 252
<ul> <li>13.3</li> <li>14</li> <li>14.1</li> <li>14.2</li> <li>14.3</li> <li>14.4</li> <li>14.5</li> <li>15.1</li> <li>15.2</li> <li>15.3</li> <li>15.4</li> </ul>	Endress+Hauser services	247 248 248 248 248 248 248 249 249 249 249 249 249 249 250 250 250 251 251 252 252
<ul> <li>13.3</li> <li>14</li> <li>14.1</li> <li>14.2</li> <li>14.3</li> <li>14.4</li> <li>14.5</li> </ul> 15 <ul> <li>15.1</li> <li>15.2</li> <li>15.3</li> <li>15.4</li> </ul> 16	Endress+Hauser services	247 248 248 248 248 248 249 249 249 249 249 249 249 250 250 250 251 251 252 252 252 252
<ul> <li>13.3</li> <li>14</li> <li>14.1</li> <li>14.2</li> <li>14.3</li> <li>14.4</li> <li>14.5</li> </ul> 15 <ul> <li>15.1</li> <li>15.2</li> <li>15.3</li> <li>15.4</li> </ul> 16 <ul> <li>16.1</li> </ul>	Endress+Hauser services	247 248 248 248 248 248 249 249 249 249 249 249 249 250 250 250 251 252 252 252 252 252 253 253
13.3 <b>14</b> 14.1 14.2 14.3 14.4 14.5 <b>15</b> 15.1 15.2 15.3 15.4 <b>16</b> 16.1 16.2	Endress+Hauser services	247 248 248 248 248 248 249 249 249 249 249 249 249 249 250 250 250 250 251 252 252 252 252 253 253
13.3 <b>14</b> 14.1 14.2 14.3 14.4 14.5 <b>15</b> 15.1 15.2 15.3 15.4 <b>16</b> 16.1 16.2 16.3	Endress+Hauser services	247 248 248 248 248 248 249 249 249 249 249 249 249 250 250 250 251 251 252 252 252 252 253 253 253 254

16.7	Mounting	267
	5	
16.8	Environment	267
16.9	Process	269
16.10	Mechanical construction	271
16.11	Operability	273
16.12	Certificates and approvals	278
16.13	Application packages	281
16.14	Accessories	282
16.15	Supplementary documentation	282
Index	Κ	285

## 1 About this document

## 1.1 Document function

These Operating Instructions contain all the information required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to installation, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.

## 1.2 Symbols

#### 1.2.1 Safety symbols

#### **DANGER**

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

#### A WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

#### **A** CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

#### NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

## 1.2.2 Electrical symbols

Symbol	Meaning
	Direct current
$\sim$	Alternating current
$\sim$	Direct current and alternating current
<u>+</u>	<b>Ground connection</b> A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	<b>Potential equalization connection (PE: protective earth)</b> Ground terminals that must be connected to ground prior to establishing any other connections.
	<ul><li>The ground terminals are located on the interior and exterior of the device:</li><li>Interior ground terminal: potential equalization is connected to the supply network.</li><li>Exterior ground terminal: device is connected to the plant grounding system.</li></ul>

## 1.2.3 Communication-specific symbols

Symbol	Meaning
((i•	Wireless Local Area Network (WLAN) Communication via a wireless, local network.
	LED Light emitting diode is off.

Symbol	Meaning
-X-	LED Light emitting diode is on.
	<b>LED</b> Light emitting diode is flashing.

## 1.2.4 Tool symbols

Symbol	Meaning
	Flat-blade screwdriver
$\bigcirc \not \blacksquare$	Allen key
Ń	Open-ended wrench

## 1.2.5 Symbols for certain types of information

Symbol	Meaning
	<b>Permitted</b> Procedures, processes or actions that are permitted.
	<b>Preferred</b> Procedures, processes or actions that are preferred.
×	<b>Forbidden</b> Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Notice or individual step to be observed
1., 2., 3	Series of steps
L.	Result of a step
?	Help in the event of a problem
	Visual inspection

## **1.2.6** Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections
EX	Hazardous area

Symbol	Meaning
$\bigotimes$	Safe area (non-hazardous area)
≈ <b>→</b>	Flow direction

## 1.3 Documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- Device Viewer (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

### 1.3.1 Document function

The following documentation may be available depending on the version ordered:

Document type	Purpose and content of the document
Technical Information (TI)	<b>Planning aid for your device</b> The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions (KA)	<b>Guide that takes you quickly to the 1st measured value</b> The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Operating Instructions (BA)	Your reference document The Operating Instructions contain all the information that is required in the various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.
Description of Device Parameters (GP)	<b>Reference for your parameters</b> The document provides a detailed explanation of each individual parameter. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.
Safety Instructions (XA)	Depending on the approval, safety instructions for electrical equipment in hazardous areas are also supplied with the device. The Safety Instructions are an integral part of the Operating Instructions.  Information on the Safety Instructions (XA) relevant to the device is provided on the nameplate.
Supplementary device-dependent documentation (SD/FY)	Always comply strictly with the instructions in the relevant supplementary documentation. The supplementary documentation is an integral part of the device documentation.

## 1.4 Registered trademarks

#### Ethernet-APL™

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

#### **TRI-CLAMP®**

Registered trademark of Ladish & Co., Inc., Kenosha, USA

## 2 Safety instructions

## 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- Trained, qualified specialists must have a relevant qualification for this specific function and task.
- Are authorized by the plant owner/operator.
- Are familiar with federal/national regulations.
- Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ► Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

## 2.2 Intended use

#### Application and media

The measuring device described in this manual is intended only for the flow measurement of liquids.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- Keep within the specified pressure and temperature range.
- Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- Protect the measuring device permanently against corrosion from environmental influences.

#### Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-intended use.

#### **WARNING**

#### Danger of breakage due to corrosive or abrasive fluids and ambient conditions!

- Verify the compatibility of the process fluid with the sensor material.
- Ensure the resistance of all fluid-wetted materials in the process.
- ► Keep within the specified pressure and temperature range.

### NOTICE

#### Verification for borderline cases:

For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

#### **Residual risks**

#### **A**CAUTION

# The electronics and the medium may cause the surfaces to heat up or freeze. Risk of burns or frostbite!

• Mount suitable touch protection.

## 2.3 Workplace safety

When working on and with the device:

• Wear the required personal protective equipment as per national regulations.

## 2.4 Operational safety

Damage to the device!

- Operate the device in proper technical condition and fail-safe condition only.
- The operator is responsible for the interference-free operation of the device.

#### Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers!

▶ If modifications are nevertheless required, consult with the manufacturer.

#### Repair

To ensure continued operational safety and reliability:

- Carry out repairs on the device only if they are expressly permitted.
- ► Observe federal/national regulations pertaining to the repair of an electrical device.
- ► Use only original spare parts and accessories.

## 2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. The manufacturer confirms this by affixing the CE mark to the device.

## 2.6 IT security

Our warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.

## 2.7 Device-specific IT security

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater inoperation safety if used correctly. The following list provides an overview of the most important functions:

Function/interface	Factory setting	Recommendation
Write protection via hardware write protection switch $\rightarrow \cong 11$	Not enabled	On an individual basis following risk assessment
Access code (also applies for Web server login or FieldCare connection) $\rightarrow \textcircled{B} 11$	Not enabled (0000)	Assign a customized access code during commissioning
WLAN (order option in display module)	Enabled	On an individual basis following risk assessment
WLAN security mode	Enabled (WPA2- PSK)	Do not change
WLAN passphrase (password) $\rightarrow \square 12$	Serial number	Assign a customized WLAN passphrase during commissioning
WLAN mode	Access point	On an individual basis following risk assessment
Web server $\rightarrow \square 12$	Enabled	On an individual basis following risk assessment
CDI-RJ45 service interface $\rightarrow \square 12$	-	On an individual basis following risk assessment

### 2.7.1 Protecting access via hardware write protection

Write access to the parameters of the device via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the main electronics module). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered  $\rightarrow \square$  147.

#### 2.7.2 Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

User-specific access code

Protect write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare). Access authorization is clearly regulated through the use of a user-specific access code.

- WLAN passphrase The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.
- Infrastructure mode
   When the device is operated in infrastructure mode, the WLAN passphrase corresponds to the WLAN passphrase configured on the operator side.

#### User-specific access code

Write access to the device parameters via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code ( $\rightarrow \cong 145$ ).

When the device is delivered, the device does not have an access code and is equivalent to 0000 (open).

#### WLAN passphrase: Operation as WLAN access point

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface ( $\Rightarrow \textcircled{B} 66$ ), which can be ordered as an optional extra, is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter ( $\rightarrow \equiv 139$ ).

#### Infrastructure mode

A connection between the device and WLAN access point is protected by means of an SSID and passphrase on the system side. Please contact the relevant system administrator for access.

#### General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning.
- Follow the general rules for generating a secure password when defining and managing the access code or network key.
- The user is responsible for the management and careful handling of the access code and network key.
- For information on configuring the access code or on what to do if you lose the password, for example, see the "Write protection via access code" section → 
   <sup>145</sup>

#### 2.7.3 Access via Web server

The device can be operated and configured via a Web browser with the integrated Web server. The connection is via the service interface (CDI-RJ45), signal transmission connection for PROFINET with Ethernet-APL (IO1) or the WLAN interface.

The Web server is enabled when the device is delivered. The Web server can be disabled if necessary (e.g. after commissioning) via the **Web server functionality** parameter.

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.

For detailed information on device parameters, see: "Description of Device Parameters" document .

#### 2.7.4 Access via service interface (CDI-RJ45)

The device can be connected to a network via the service interface (CDI-RJ45). Devicespecific functions guarantee the secure operation of the device in a network.

The use of relevant industrial standards and guidelines that have been defined by national and international safety committees, such as IEC/ISA62443 or the IEEE, is recommended. This includes organizational security measures such as the assignment of access authorization as well as technical measures such as network segmentation.

Transmitters with an Ex de approval may not be connected via the service interface (CDI-RJ45)!


Order code for "Approval transmitter + sensor", options (Ex de): BA, BB, C1, C2, GA, GB, MA, MB, NA, NB

## **3** Product description

The device consists of a transmitter and a sensor.

The device is available as a compact version: The transmitter and sensor form a mechanical unit.


## 3.1 Product design

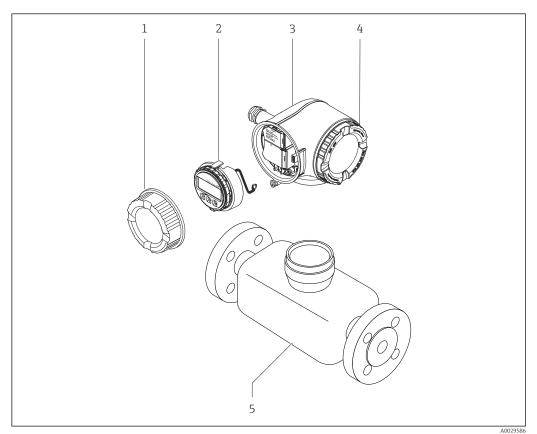

- 1 Important components of a measuring device
- 1 Connection compartment cover
- 2 Display module
- 3 Transmitter housing
- 4 Electronics compartment cover
- 5 Sensor

## 4 Incoming acceptance and product identification

## 4.1 Incoming acceptance

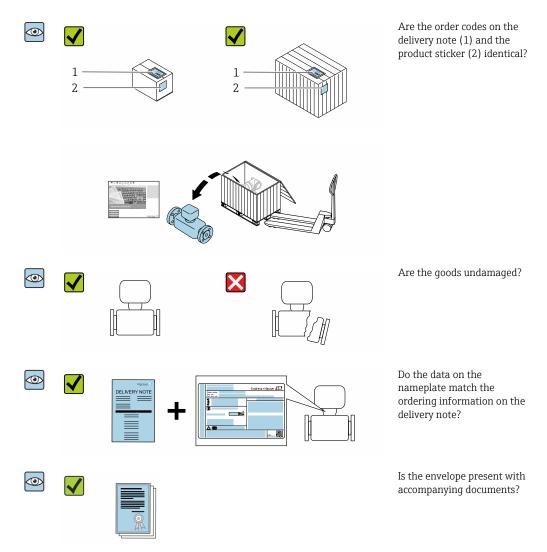

## 4.2 Product identification


The following options are available for identification of the device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter the serial numbers from the nameplates in the *Device Viewer* (www.endress.com/deviceviewer): all the information about the device is displayed.
- Enter the serial numbers from the nameplates into the *Endress+Hauser Operations App* or scan the DataMatrix code on the nameplate with the *Endress+Hauser Operations App*: all the information about the device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" and "Supplementary device-dependent documentation"
- The *Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the DataMatrix code on the nameplate.


#### 4.2.1 Transmitter nameplate

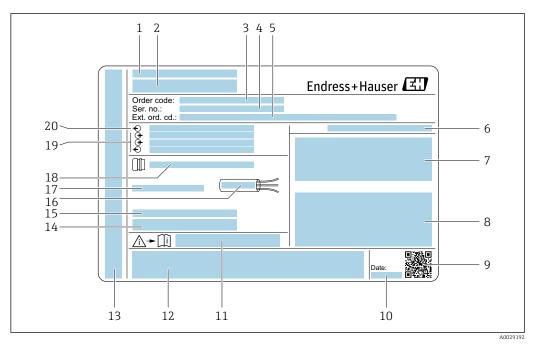

*Example of a transmitter nameplate*

- 1 Place of manufacture
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Degree of protection
- 7 Space for approvals: use in hazardous areas
- 8 Electrical connection data: available inputs and outputs
- 9 2-D matrix code
- 10 Date of manufacture: year-month
- 11 Document number of safety-related supplementary documentation
- 12 Space for approvals and certificates: e.g. CE mark, RCM tick
- 13 Space for degree of protection of connection and electronics compartment when used in hazardous areas
- 14 Firmware version (FW) and device revision (Dev.Rev.) from the factory
  - 15 Space for additional information in the case of special products
  - *16 Permitted temperature range for cable*
  - 17 Permitted ambient temperature  $(T_a)$
  - 18 Information on cable gland
  - *19* Available inputs and outputs, supply voltage
  - 20 Electrical connection data: supply voltage

#### 4.2.2 Sensor nameplate

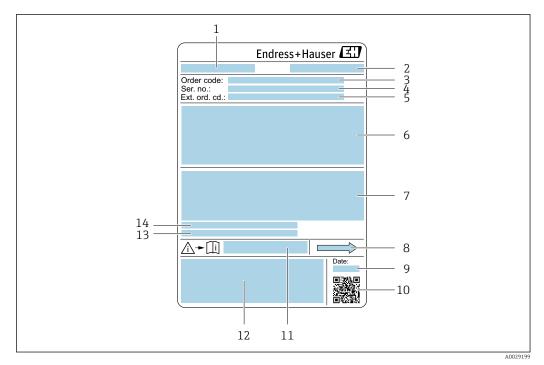

#### ■ 3 Example of a sensor nameplate

- 1 Name of the sensor
- 2 Place of manufacture
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Nominal diameter of the sensor; flange nominal diameter/nominal pressure; sensor test pressure; medium temperature range; material of measuring tube and manifold; sensor-specific information: e.g. pressure range of sensor housing, wide-range density specification (special density calibration)
- 7 Approval information for explosion protection, Pressure Equipment Directive and degree of protection
- 8 Flow direction
- 9 Manufacturing date: year-month
- 10 2-D matrix code
- 11 Document number of safety-related supplementary documentation
- 12 CE mark, RCM-Tick mark
- 13 Surface roughness
- 14 Permitted ambient temperature  $(T_a)$

#### 📔 Order code

The measuring device is reordered using the order code.

#### Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approvalrelated specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

## 4.2.3 Symbols on measuring device

Symbol	Meaning	
	<b>WARNING!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury. To determine the nature of the potential hazard and the measures required to avoid it, consult the documentation accompanying the measuring device.	
Ĩ	Reference to documentation Refers to the corresponding device documentation.	
	<b>Protective ground connection</b> A terminal which must be connected to ground prior to establishing any other connections.	

## 5 Storage and transport

## 5.1 Storage conditions


Observe the following notes for storage:

- Store in the original packaging to ensure protection from shock.
- Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring pipe.
- Protect from direct sunlight to avoid unacceptably high surface temperatures.
- Store in a dry and dust-free place.
- ► Do not store outdoors.

Storage temperature  $\rightarrow \cong 267$ 

## 5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

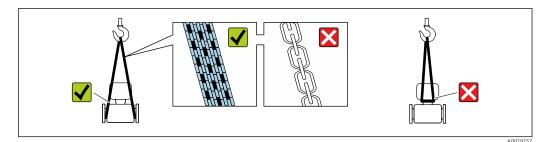

Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


## 5.2.1 Measuring devices without lifting lugs

#### **WARNING**

# Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- Secure the measuring device against slipping or turning.
- Observe the weight specified on the packaging (stick-on label).

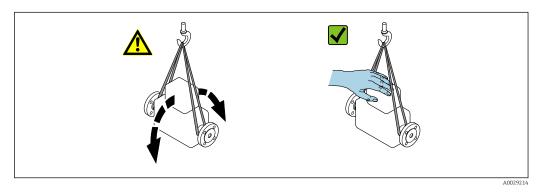

### 5.2.2 Measuring devices with lifting lugs

#### **A**CAUTION

#### Special transportation instructions for devices with lifting lugs

- Only use the lifting lugs fitted on the device or flanges to transport the device.
- The device must always be secured at two lifting lugs at least.

### 5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

## 5.3 Packaging disposal

All packaging materials are environmentally friendly and 100 % recyclable:


- Outer packaging of device
- Polymer stretch wrap, complying with EU Directive 2002/95/EC (RoHS)
- Packaging
  - Wooden crate treated in accordance with ISPM 15 standard, confirmed by IPPC logo
  - Cardboard box in accordance with European packaging guideline 94/62EC, recyclability confirmed by Resy symbol
- Carrying and securing materials
  - Disposable plastic pallet
  - Plastic straps
  - Plastic adhesive strips
- Filler material Paper pads

## 6 Mounting

## 6.1 Mounting requirements

## 6.1.1 Mounting position

#### Mounting location

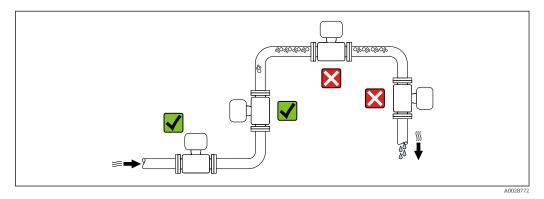


To prevent measuring errors arising from accumulation of gas bubbles in the measuring pipe, avoid the following mounting locations in the piping:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

#### Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

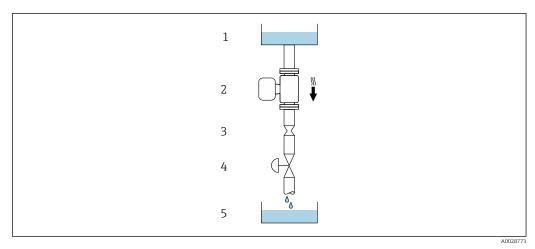

• 4 Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Batching tank

DN		Ø orifice plate, pipe restriction	
[mm]	[in]	[mm]	[in]
8	3⁄8	6	0.24
15	1/2	10	0.40
25	1	14	0.55
40	11/2	22	0.87
50	2	28	1.10

#### Orientation


The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

	Orientatio	Recommendation	
A	Vertical orientation	A0015591	<b>V V</b> <sup>1)</sup>
В	Horizontal orientation, transmitter at top	A0015589	Exception: $\rightarrow \square 5, \square 21$
С	Horizontal orientation, transmitter at bottom	۵۵۵۱5590	Exception: $\rightarrow \textcircled{2} 5, \textcircled{2} 21$
D	Horizontal orientation, transmitter at side	A0015592	

1) This orientation is recommended to ensure self-draining.

- 2) Applications with low process temperatures may reduce the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 3) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.


If a sensor is installed horizontally with a curved measuring tube, match the position of the sensor to the fluid properties.

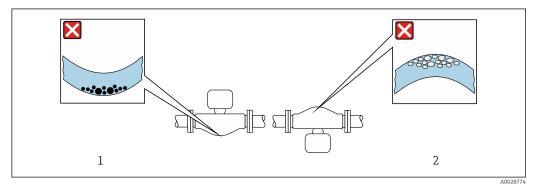

- 5 Orientation of sensor with curved measuring tube
- 1 Avoid this orientation for fluids with entrained solids: Risk of solids accumulating.
- 2 Avoid this orientation for outgassing fluids: Risk of gas accumulating.

#### Inlet and outlet runs

 No special precautions need to be taken for fittings that create turbulence, such as valves, elbows or T-pieces, as long as no cavitation occurs  $\rightarrow \cong 22$ .



#### Dimensions

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section .

#### 6.1.2 Environment and process requirements

#### Ambient temperature range

Measuring device	<ul> <li>-40 to +60 °C (-40 to +140 °F)</li> <li>Order code for "Test, certificate", option JP: -50 to +60 °C (-58 to +140 °F)</li> </ul>
Readability of the local	-20 to $+60$ °C ( $-4$ to $+140$ °F)
display	The readability of the display may be impaired at temperatures outside the temperature range.

P Dependency of ambient temperature on medium temperature  $\rightarrow \cong 269$ 

 If operating outdoors: Avoid direct sunlight, particularly in warm climatic regions.

You can order a weather protection cover from Endress+Hauser.  $\rightarrow \cong 250$ .

#### System pressure

 
It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas.

Cavitation is caused if the pressure drops below the vapor pressure:

- In liquids that have a low boiling point (e.g. hydrocarbons, solvents, liquefied gases)
- In suction lines
- Ensure the system pressure is sufficiently high to prevent cavitation and outgassing.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)



#### Thermal insulation

In the case of some fluids, it is important to keep the heat radiated from the sensor to the transmitter to a low level. A wide range of materials can be used for the required insulation.


The following device versions are recommended for versions with thermal insulation: • Version with extended neck for insulation:

- Order code for "Sensor option", option CG with an extended neck length of 105 mm (4.13 in).
- Extended temperature version: Order code for "Measuring tube material", option TD or TG with an extended neck length of 105 mm (4.13 in).

#### NOTICE

#### Electronics overheating on account of thermal insulation!

- Recommended orientation: horizontal orientation, transmitter housing pointing downwards.
- Do not insulate the transmitter housing .
- Maximum permissible temperature at the lower end of the transmitter housing: 80 °C (176 °F)
- Thermal insulation with not isolated extended neck: We recommend that you do not insulate the extended neck in order to ensure optimum dissipation of heat.

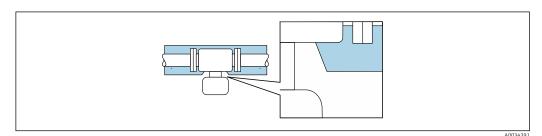

*■* 6 Thermal insulation with not isolated extended neck

#### Heating

#### NOTICE

#### Electronics can overheat due to elevated ambient temperature!

- Observe maximum permitted ambient temperature for the transmitter.
- Depending on the medium temperature, take the device orientation requirements into account.

#### NOTICE

#### Danger of overheating when heating

- ► Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F).
- Ensure that sufficient convection takes place at the transmitter neck.
- Ensure that a sufficiently large area of the transmitter neck remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.
- ► When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation. For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.
- Take account of the behavior of process diagnostic "830 Ambient temperature too high" and "832 Electronics temperature too high" if it is not possible to avoid overheating with a suitable system layout.

#### Heating options

If a fluid requires that no heat loss should occur at the sensor, users can avail of the following heating options:

- Electrical heating, e.g. with electric band heaters <sup>1)</sup>
- Via pipes carrying hot water or steam
- Via heating jackets

#### Vibrations


The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

#### 6.1.3 Special mounting instructions

#### Drainability

When installed vertically, the measuring tube can be drained completely and protected against buildup.

When the sensor is installed in a horizontal line, eccentric clamps can be used to ensure complete drainability. When the system is pitched in a specific direction and at a specific slope, gravity can be used to achieve complete drainability. The sensor must be mounted in the correct position to ensure full drainability in the horizontal position. Markings on the sensor show the correct mounting position to optimize drainability.

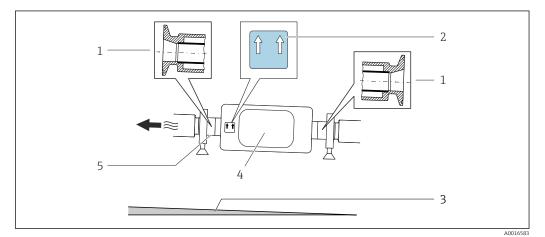

- *1* Eccentric clamp connection
- 2 "This side up" label indicates which side is up
- 3 For DN 8 to 25(3/8 to 1"): Gradient: approx. 2% or 21 mm/m (0.24 in/ft); for DN 40 to 50(1½ to 2"):
  - Gradient approx. 2° or 35 mm/m (0.42 in/ft)
- 4 Transmitter
- 5 Line on the underside indicates the lowest point of the eccentric process connection.

#### Hygienic compatibility


- When installing in hygienic applications, please refer to the information in the "Certificates and approvals/hygienic compatibility" section → 
   <sup>(1)</sup> 279
  - In the case of measuring devices with the order code for "Housing", option B "Stainless, hygienic", to seal the connection compartment cover, screw it closed finger-tight and tighten it by another 45° (corresponds to 15 Nm).

<sup>1)</sup> The use of parallel electric band heaters is generally recommended (bidirectional electricity flow). Particular considerations must be made if a single-wire heating cable is to be used. Additional information is provided in the document EA01339D "Installation instructions for electrical trace heating systems".

#### Securing with mounting clamp in the case of hygiene connections


It is not necessary to provide additional support for the sensor for operational performance purposes. If, however, additional support is required for installation purposes, the following dimensions must be observed.

Use mounting clamp with lining between clamp and measuring instrument.

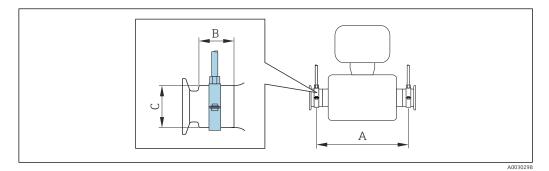

DN		I	ł	В		C	
[mm]	[in]	[mm]	[in]	[mm]	[in]	[mm]	[in]
8	3⁄8	298	11.73	33	1.3	28	1.1
15	1/2	402	15.83	33	1.3	28	1.1
25	1	542	21.34	33	1.3	38	1.5
40	1 1/2	658	25.91	36.5	1.44	56	2.2
50	2	772	30.39	44.1	1.74	75	2.95

#### Weather protection cover

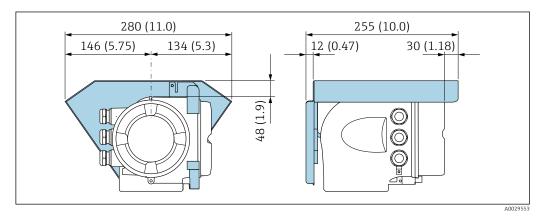

<sup>☑ 7</sup> Engineering unit mm (in)

## 6.2 Mounting the measuring device

#### 6.2.1 Required tools

#### For sensor

For flanges and other process connections: use a suitable mounting tool

### 6.2.2 Preparing the measuring device

1. Remove all remaining transport packaging.


- 2. Remove any protective covers or protective caps present from the sensor.
- 3. Remove stick-on label on the electronics compartment cover.

#### 6.2.3 Mounting the measuring device

#### **WARNING**


#### Danger due to improper process sealing!

- Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- Ensure that the seals are clean and undamaged.
- Secure the seals correctly.
- 1. Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the medium.
- 2. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

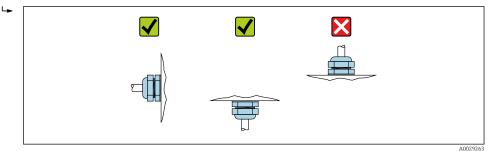


#### 6.2.4 Turning the transmitter housing

To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

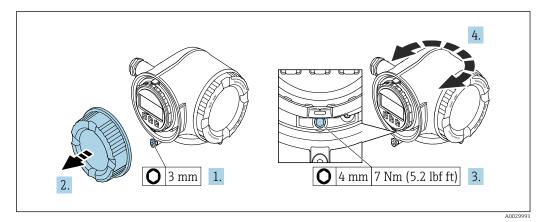

#### 🗷 8 Non-Ex housing

- **1.** Depending on the device version: Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Loosen the securing screw.
- 4. Turn the housing to the desired position.
- 5. Tighten the securing screw.
- 6. Screw on the connection compartment cover.
- 7. Depending on the device version: Attach the securing clamp of the connection compartment cover.

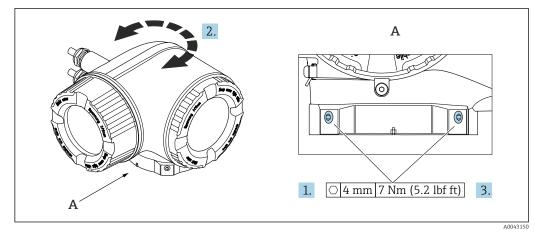


#### ■ 9 Ex housing

1. Loosen the fixing screws.

- 2. Turn the housing to the desired position.
- 3. Tighten the securing screws.

#### 6.2.5 Turning the display module

The display module can be turned to optimize display readability and operability.

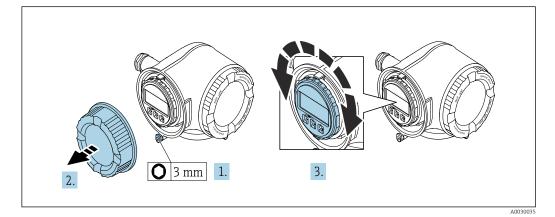

**1.** Depending on the device version: Loosen the securing clamp of the connection compartment cover.

- 2. Unscrew the connection compartment cover.
- 3. Turn the display module to the desired position: max.  $8 \times 45^{\circ}$  in each direction.
- 4. Screw on the connection compartment cover.
- **5.** Depending on the device version: Attach the securing clamp of the connection compartment cover.

## 6.3 Post-installation check

Is the device undamaged (visual inspection)?	
<ul> <li>Does the measuring device conform to the measuring point specifications?</li> <li>For example: <ul> <li>Process temperature → ■ 269</li> <li>Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document)</li> <li>Ambient temperature</li> <li>Measuring range</li> </ul> </li> </ul>	
<ul> <li>Has the correct orientation for the sensor been selected ?</li> <li>According to sensor type</li> <li>According to medium temperature</li> <li>According to medium properties (outgassing, with entrained solids)</li> </ul>	
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping $\rightarrow \bigoplus 21$ ?	
Are the measuring point identification and labeling correct (visual inspection)?	
Is the device adequately protected from precipitation and direct sunlight?	
Are the securing screw and securing clamp tightened securely?	

7

## **Electrical connection**

#### WARNING

# Live parts! Incorrect work performed on the electrical connections can result in an electric shock.

- Set up a disconnecting device (switch or power-circuit breaker) to easily disconnect the device from the supply voltage.
- ► In addition to the device fuse, include an overcurrent protection unit with max. 10 A in the plant installation.

## 7.1 Electrical safety

In accordance with applicable national regulations.

## 7.2 Connecting requirements

## 7.2.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: Crimper for wire end ferrule
- For removing cables from terminal: Flat blade screwdriver  $\leq$  3 mm (0.12 in)

### 7.2.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

#### Protective grounding cable for the outer ground terminal

Conductor cross-section < 2.1 mm<sup>2</sup> (14 AWG)

The use of a cable lug enables the connection of larger cross-sections.

The grounding impedance must be less than 2  $\boldsymbol{\Omega}.$ 

#### Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

#### Power supply cable (incl. conductor for the inner ground terminal)

Standard installation cable is sufficient.

#### Signal cable

#### PROFINET with Ethernet-APL

The reference cable type for APL segments is fieldbus cable type A, MAU type 1 and 3 (specified in IEC 61158-2). This cable meets the requirements for intrinsically safe applications according to IEC TS 60079-47 and can also be used in non-intrinsically safe applications.

Cable type	A
Cable capacitance	45 to 200 nF/km

Loop resistance	15 to 150 Ω/km
Cable inductance	0.4 to 1 mH/km

Further details are provided in the Ethernet-APL Engineering Guideline (https://www.ethernet-apl.org).

Current output 0/4 to 20 mA

Standard installation cable is sufficient

Pulse / frequency / switch output

Standard installation cable is sufficient

Relay output

Standard installation cable is sufficient.

Current input 0/4 to 20 mA

Standard installation cable is sufficient

Status input

Standard installation cable is sufficient

#### Cable diameter

- Cable glands supplied: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to 2.5 mm<sup>2</sup> (24 to 12 AWG).

#### Requirements for connecting cable – remote display and operating module DKX001

#### Optionally available connecting cable

A cable is supplied depending on the order option

- Order code for measuring device: order code 030 for "Display; operation", option 0 or
- Order code for measuring device: order code 030 for "Display; operation", option M and
- Order code for DKX001: order code **040** for "Cable", option **A**, **B**, **D**, **E**

Standard cable	$2\times2\times0.34~mm^2$ (22 AWG) PVC cable with common shield (2 pairs, pairstranded)			
Flame resistance	According to DIN EN 60332-1-2			
Oil resistance	According to DIN EN 60811-2-1			
Shield	Tin-plated copper braid, optical cover $\geq 85$ %			
Capacitance: core/shield	< 200 pF/m			
L/R	$\leq$ 24 $\mu$ H/ $\Omega$			
Available cable length	5 m (15 ft)/10 m (35 ft)/20 m (65 ft)/30 m (100 ft)			
Operating temperature	When mounted in a fixed position: –50 to +105 °C (–58 to +221 °F); when cable can move freely: –25 to +105 °C (–13 to +221 °F)			

Standard cable - customer-specific cable

With the following order option, no cable is supplied with the device and must be provided by the customer:

Order code for DKX001: Order code **040** for "Cable", option **1** "None, provided by customer, max 300 m"

A standard cable with the following minimum requirements can be used as the connecting cable, even in the hazardous area (Zone 2, Class I, Division 2 and Zone 1, Class I, Division 1):

Standard cable	4 wires (2 pairs); pair-stranded with common shield, minimum wire cross-section 0.34 $\rm mm^2$ (22 AWG)		
Shield	Tin-plated copper braid, optical cover $\ge$ 85 %		
Cable impedance (pair)	Minimum 80 Ω		
Cable length	Maximum 300 m (1000 ft), maximum loop impedance 20 $\Omega$		
Capacitance: core/shield	Maximum 1000 nF for Zone 1, Class I, Division 1		
L/R	Maximum 24 $\mu H/\Omega$ for Zone 1, Class I, Division 1		

## 7.2.3 Terminal assignment

#### Transmitter: supply voltage, input/outputs

The terminal assignment of the inputs and outputs depends on the individual order version of the device. The device-specific terminal assignment is documented on an adhesive label in the terminal cover.

Supply voltage		Input/output 1		Input/output 2		Input/output 3	
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)
		Device-specific terminal assignment: adhesive label in terminal cover.					

Terminal assignment of the remote display and operating module  $\rightarrow \square$  36.

## 7.2.4 Available device plugs

P Device plugs may not be used in hazardous areas!

Order code for "Input; output 1", option RB "PROFINET with Ethernet-APL"

Order code	Cable entry/connection			
"Electrical connection"	2	3		
L, N, P, U	M12 plug × 1	-		

## 7.2.5 device plug pin assignment

Pin	Assignment	Coding	Plug/socket		
1	APL signal -	А	Socket		
2	APL signal +				
3	Cable shield <sup>1</sup>				
4	Not assigned				
Metal plug housing	Cable shield				
<sup>1</sup> If a cable shield is used					

## 7.2.6 Preparing the measuring device

#### NOTICE

#### Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

• Use suitable cable glands corresponding to the degree of protection.

1. Remove dummy plug if present.

# If the measuring device is supplied without cable glands: Provide suitable cable gland for corresponding connecting cable.

If the measuring device is supplied with cable glands:
 Observe requirements for connecting cables → 
 <sup>(2)</sup> 29.


## 7.3 Connecting the measuring device

#### NOTICE

#### An incorrect connection compromises electrical safety!

- ► Have electrical connection work carried out by appropriately trained specialists only.
- Observe applicable federal/national installation codes and regulations.
- Comply with local workplace safety regulations.
- ► Always connect the protective ground cable ⊕ before connecting additional cables.
- When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.


### 7.3.1 Connecting the transmitter

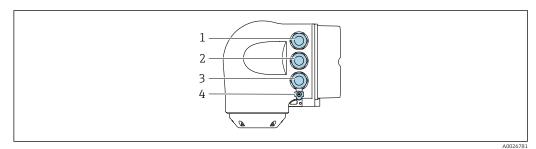


- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output or terminal connection for network connection via service interface (CDI-RJ45); optional: connection for external WLAN antenna or remote display and operating module DKX001
- 4 Protective earth (PE)

In addition to connecting the device via PROFINET with Ethernet-APL and the available inputs/outputs, an additional connection option is also available: Integrate into a network via the service interface (CDI-RJ45).


#### Connecting the plug

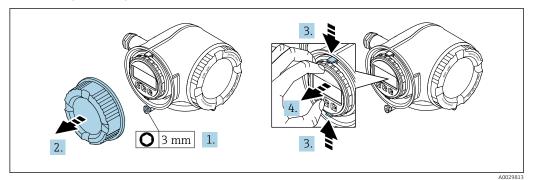

- **1.** Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Squeeze the tabs of the display module holder together.
- 4. Remove the display module holder.

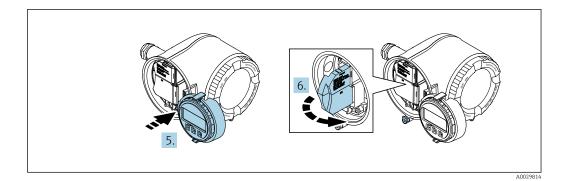


- 5. Attach the holder to the edge of the electronics compartment.
- 6. Open the terminal cover.

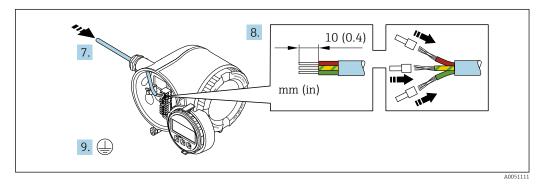


- 7. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 8. Strip the cable and cable ends and connect to terminals 26-27. In the case of stranded cables, also fit ferrules.
- 9. Connect protective earth (PE).
- **10.** Firmly tighten the cable glands.
  - └ This concludes the connection via the APL port.

#### Connecting the supply voltage and additional inputs/outputs

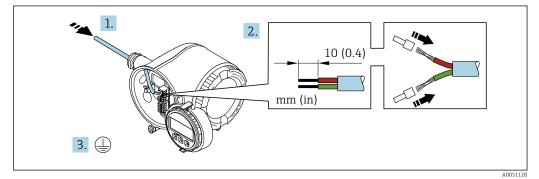


- **1.** Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 2. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
- 3. Connect the protective ground.

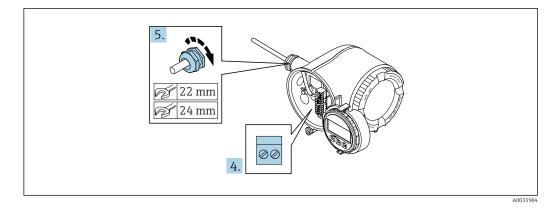

- 4. Connect the cable according to the terminal assignment.
  - ▶ Signal cable terminal assignment: The device-specific terminal assignment is documented on an adhesive label in the terminal cover.
     Supply voltage terminal assignment: Adhesive label in the terminal cover or → 
     → 
     32.
- 5. Firmly tighten the cable glands.
  - $\blacktriangleright$  This concludes the cable connection process.
- 6. Close the terminal cover.
- 7. Fit the display module holder in the electronics compartment.
- 8. Screw on the connection compartment cover.
- 9. Secure the securing clamp of the connection compartment cover.

#### Removing a cable

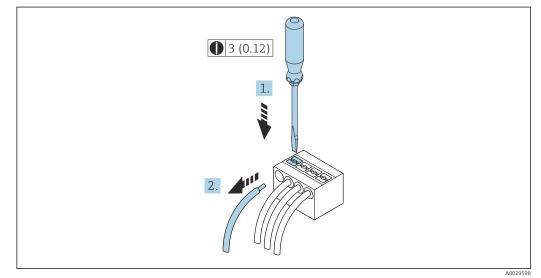

🖻 10 Engineering unit mm (in)


1. To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes

2. while simultaneously pulling the cable end out of the terminal.

#### 7.3.2 Connecting the remote display and operating module DKX001

The remote display and operating module DKX001 is available as an optional extra  $\rightarrow \cong 250$ .

- The remote display and operating module DKX001 is only available for the following housing version: order code for "Housing": option A "Aluminum, coated"
- The measuring device is always supplied with a dummy cover when the remote display and operating module DKX001 is ordered directly with the measuring device. Display or operation at the transmitter is not possible in this case.
- If ordered subsequently, the remote display and operating module DKX001 may not be connected at the same time as the existing measuring device display module. Only one display or operation unit may be connected to the transmitter at any one time.

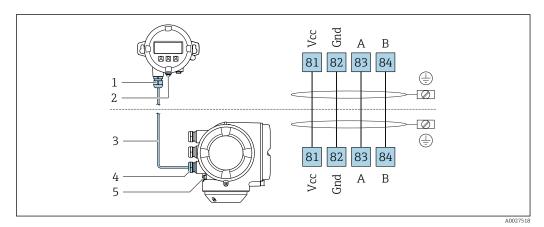

- 1 Remote display and operating module DKX001
- 2 Terminal connection for potential equalization (PE)
- 3 Connecting cable
- 4 Measuring device
- 5 Terminal connection for potential equalization (PE)

## 7.4 Potential equalization

#### 7.4.1 Requirements

For potential equalization:


- Pay attention to in-house grounding concepts
- Take account of operating conditions like the pipe material and grounding
- Connect the medium, sensor and transmitter to the same electrical potential
- Use a ground cable with a minimum cross-section of 6 mm<sup>2</sup> (0.0093 in<sup>2</sup>) and a cable lug for potential equalization connections

For devices intended for use in hazardous locations, please observe the guidelines in the Ex documentation (XA).

## 7.5 Special connection instructions

### 7.5.1 Connection examples


#### **PROFINET** with Ethernet-APL

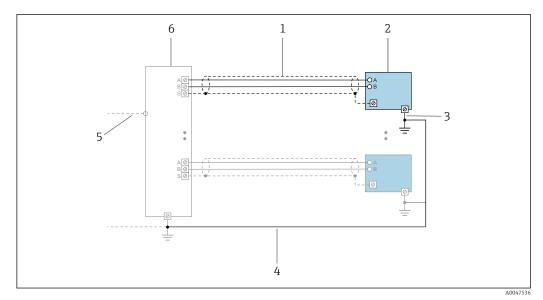


11 Connection example for PROFINET with Ethernet-APL

- 1 Cable shield
- 2 Measuring device
- 3 Local grounding
- 4 Potential equalization
- 5 Trunk or TCP
- 6 Field switch

### Current output 4-20 mA

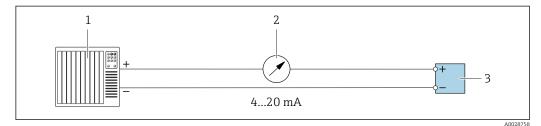


- 12 Connection example for 4-20 mA current output (active)
- 1 Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load
- 3 Transmitter

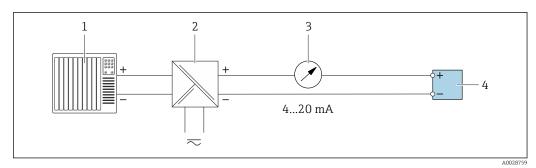

- 13 Connection example for 4-20 mA current output (passive)
- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- *3* Analog display unit: observe maximum load
- 4 Transmitter

#### Pulse/frequency output

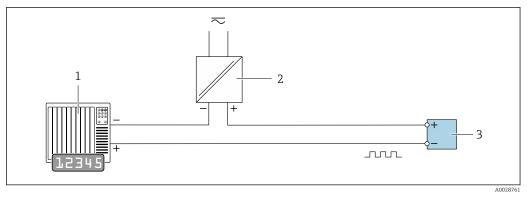


14 Connection example for pulse/frequency output (passive)

1 Automation system with pulse/frequency input (e.g. PLC with 10 k $\Omega$  pull-up or pull-down resistor)

- 2 Power supply
- 3 Transmitter: observe input values → 🖺 257


#### Switch output

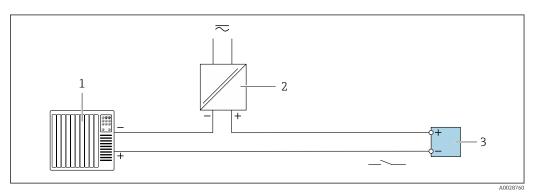

Connection example for switch output (passive)

- 1 Automation system with switch input (e.g. PLC with a 10 k $\Omega$  pull-up or pull-down resistor)
- 2 Power supply
- 3 Transmitter: observe input values  $\rightarrow \cong 257$


#### **Relay output**

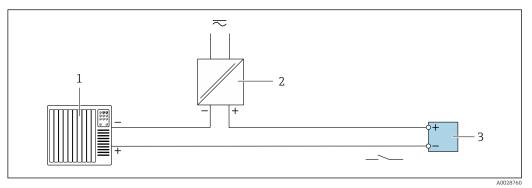

■ 16 Connection example for relay output (passive)


- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: observe input values  $\rightarrow \square 258$

#### **Current input**

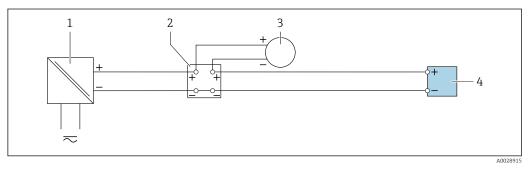

- 17 Connection example for 4 to 20 mA current input
- 1 Power supply
- 2 Terminal box
- 3 External measuring device (to read in pressure or temperature, for instance)
- 4 Transmitter

### Status input

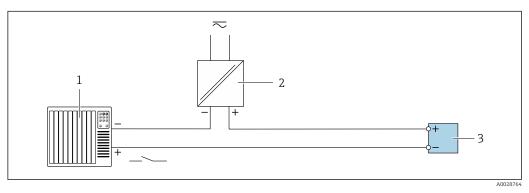

- 🖻 18 Connection example for status input
- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter

# 7.6 Hardware settings

### 7.6.1 Setting the device name

A measuring point can be quickly identified within a plant on the basis of the tag name. The factory-assigned device name can be changed using the DIP switches or the automation system.

Example: EH-Promass300-XXXX

EH	Endress+Hauser
Promass	Instrument family
300	Transmitter
XXXX	Serial number of the device

The device name currently used is displayed in Setup  $\rightarrow$  Name of station.

### Setting the device name using the DIP switches

The last part of the device name can be set using DIP switches 1-8. The address range is between 1 and 254 (factory setting: serial number of the device )

DIP switch	Bit	Description
1	128	
2	64	
3	32	
4	16	Configurable port of the device name
5	8	Configurable part of the device name
6	4	
7	2	
8	1	

*Overview of the DIP switches* 

Example: setting the device name EH-PROMASS300-065


DIP switch	ON/OFF	Bit	Device name
1	OFF	_	
2	ON	64	
37	OFF	_	
8	ON	1	
Serial number of the device:		065	EH-PROMASS300-065

### Setting the device name

Risk of electric shock when opening the transmitter housing.

- Before opening the transmitter housing:
- Disconnect the device from the power supply.

The default IP address may **not** be activated  $\rightarrow \cong 41$ .

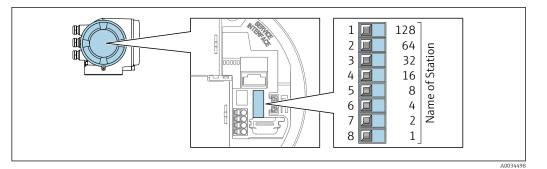

- **1.** Depending on the housing version, loosen the securing clamp or securing screw of the housing cover.
- 2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary .
- **3.** Set the desired device name using the corresponding DIP switches on the I/O electronics module.
- 4. Reassemble the transmitter in the reverse order.
- 5. Reconnect the device to the power supply.
  - └ The configured device address is used once the device is restarted.

#### Setting the device name via the automation system

DIP switches 1-8 must all be set to **OFF** (factory setting) or all be set to **ON** to be able to set the device name via the automation system.

The complete device name (name of station) can be changed individually via the automation system.


- The serial number used as part of the device name in the factory setting is not saved. It is not possible to reset the device name to the factory setting with the serial number. The device name is empty following the reset.
  - When assigning the device name via the automation system: assign the device name in lower case letters.

### 7.6.2 Activating the default IP address

### Activating the default IP address by DIP switch

Risk of electric shock when opening the transmitter housing.

- Before opening the transmitter housing:
- Disconnect the device from the power supply.

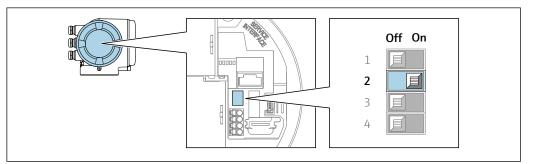

- 1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
- 2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary .

- **3.** Set DIP switch no. 2 on the I/O electronics module from **OFF**  $\rightarrow$  **ON**.
- 4. Reassemble the transmitter in the reverse order.
- 5. Reconnect the device to the power supply.
  - └ The default IP address is used once the device is restarted.


### 7.7 Ensuring the degree of protection

The measuring device fulfills all the requirements for the degree of protection IP66/67, Type 4X enclosure.

To guarantee the degree of protection IP66/67, Type 4X enclosure, carry out the following steps after the electrical connection:

- 1. Check that the housing seals are clean and fitted correctly.
- 2. Dry, clean or replace the seals if necessary.
- 3. Tighten all housing screws and screw covers.
- 4. Firmly tighten the cable glands.
- 5. To ensure that moisture does not enter the cable entry:

Route the cable so that it loops down before the cable entry ("water trap").

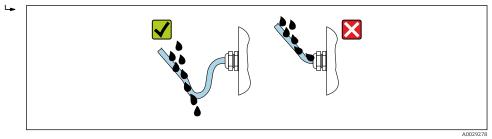


6. The cable glands supplied do not provide any housing protection if they are not used. Therefore, they must be replaced by dummy plugs that match the housing protection.

### 7.8 Post-connection check

Are cables or the device undamaged (visual inspection)?	
Is the protective earthing established correctly?	
Do the cables used comply with the requirements ?	
Do the mounted cables have adequate strain relief?	
Are all cable glands installed, securely tightened and leak-tight? Cable run with "water trap" $\rightarrow \textcircled{B}$ 42?	
Is the terminal assignment correct ?	
If supply voltage is present, do values appear on the display module?	
Are dummy plugs inserted in unused cable entries and have transportation plugs been replaced with dummy plugs?	

#### **Operation options** 8

#### 8.1 **Overview of operation options**

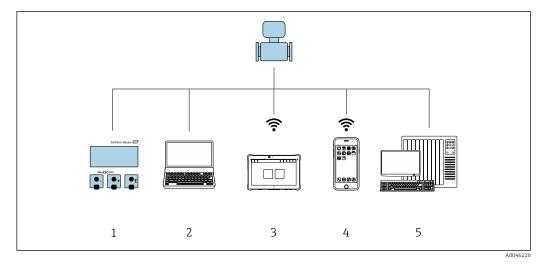


- Local operation via display module 1
- Computer with web browser (e.g. Internet Explorer) or with operating tool (e.g. FieldCare, SIMATIC PDM)
- 2 3 Field Xpert SMT70
- 4 Mobile handheld terminal
- 5 Control system (e.g. PLC)

# 8.2 Structure and function of the operating menu

### 8.2.1 Structure of the operating menu

For an overview of the operating menu for experts: see the "Description of Device Parameters" document supplied with the device

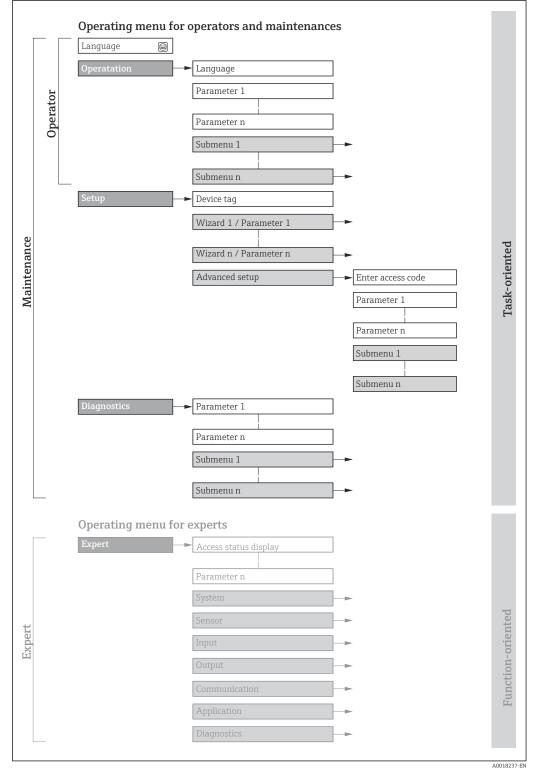

 $\blacksquare 19$  Schematic structure of the operating menu


### 8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

Menu/pa	arameter	User role and tasks	Content/meaning
Language	Task- oriented	Role "Operator", "Maintenance" Tasks during operation: Configuration of the operational	<ul> <li>Defining the operating language</li> <li>Defining the Web server operating language</li> <li>Resetting and controlling totalizers</li> </ul>
Operation		display • Reading measured values	<ul><li>Configuring the operational display (e.g. display format, display contrast)</li><li>Resetting and controlling totalizers</li></ul>
Setup		<ul> <li>"Maintenance" role Commissioning:</li> <li>Configuration of the measurement</li> <li>Configuration of the inputs and outputs</li> <li>Configuration of the communication interface</li> </ul>	<ul> <li>Wizards for quick commissioning:</li> <li>Configuration of the system units</li> <li>Configuration of the communication interface</li> <li>Definition of the medium</li> <li>Display the I/O configuration</li> <li>Configuration of the inputs</li> <li>Configuration of the outputs</li> <li>Configuration of the low flow cut off</li> <li>Configuration of the detection of partially filled and empty pipes</li> <li>Advanced setup</li> <li>For more customized configuration of the measurement (adaptation to special measuring conditions)</li> <li>Configuration of WLAN settings</li> <li>Administration (define access code, reset measuring device)</li> </ul>
Diagnostics		<ul> <li>"Maintenance" role Troubleshooting: <ul> <li>Diagnostics and elimination of process and device errors</li> <li>Measured value simulation</li> </ul></li></ul>	<ul> <li>Contains all parameters for error detection and analyzing process and device errors:</li> <li>Diagnostic list Contains up to 5 currently pending diagnostic messages.</li> <li>Event logbook Contains event messages that have occurred.</li> <li>Device information Contains information for identifying the device.</li> <li>Measured values Contains all current measured values.</li> <li>Data logging submenu with the "Extended HistoROM" order option Storage and visualization of measured values</li> <li>Heartbeat The functionality of the device is checked on demand and the verification results are documented.</li> <li>Simulation Is used to simulate measured values or output values.</li> </ul>
Expert	Function- oriented	<ul> <li>Tasks that require detailed knowledge of the function of the device:</li> <li>Commissioning measurements under difficult conditions</li> <li>Optimal adaptation of the measurement to difficult conditions</li> <li>Detailed configuration of the communication interface</li> <li>Error diagnostics in difficult cases</li> </ul>	<ul> <li>Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device:</li> <li>System Contains all higher-level device parameters that do not pertain either to the measurement or to measured value communication.</li> <li>Sensor Configuration of the measurement.</li> <li>Input Configuration of the status input.</li> <li>Output Configuration of the analog current outputs as well as the pulse/frequency and switch output.</li> <li>Communication Configuration of the digital communication interface and the Web server.</li> <li>Application Configuration of the functions that go beyond the actual measurement (e.g. totalizer).</li> <li>Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.</li> </ul>

# 8.3 Access to the operating menu via the local display

### 8.3.1 Operational display

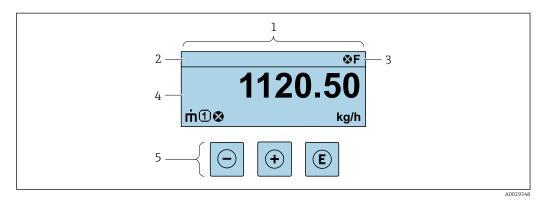

- 1 Operational display
- 2 Tag name
- 3 Status area
- 4 Display area for measured values (4-line)
- 5 Operating elements  $\rightarrow \cong 52$

### Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 🗎 168
  - F: Failure
  - C: Function check
  - S: Out of specification
  - M: Maintenance required
- Diagnostic behavior → 🗎 169
  - 🐼: Alarm
  - M: Warning
- 🛱: Locking (the device is locked via the hardware )
- 🛶: Communication (communication via remote operation is active)

### Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

Measured	variables
measurea	van tabteb

Symbol	Meaning
'n	Mass flow
Ú	<ul><li>Volume flow</li><li>Corrected volume flow</li></ul>
ρ	<ul><li>Density</li><li>Reference density</li></ul>
4	Temperature
Σ	Totalizer         Image: The measurement channel number indicates which of the three totalizers is displayed.
Ð	Status input

#### Measurement channel numbers


Symbol	Meaning
14	Measurement channel 1 to 4

The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. totalizer 1 to 3).

Diagnostic behavior

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable. For information on the symbols  $\rightarrow \square 169$ 


The number and display format of the measured values can be configured via the **Format display** parameter ( $\Rightarrow \triangleq 115$ ).

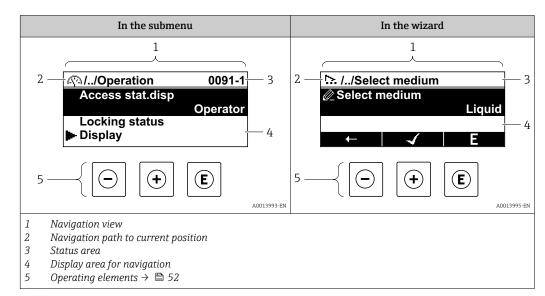

### 8.3.2 Navigation view

### Navigation path

The navigation path - displayed at the top left in the navigation view - consists of the following elements:

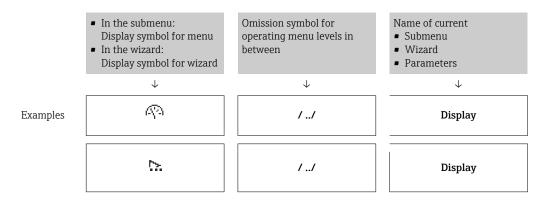

For more information about the icons in the menu, refer to the "Display area" section  $\rightarrow \cong 49$ 

### Status area

The following appears in the status area of the navigation view in the top right corner: • In the submenu

- The direct access code for the parameter you are navigating to (e.g. 0022-1)
- If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard

ľ

If a diagnostic event is present, the diagnostic behavior and status signal

- For information on the diagnostic behavior and status signal  $\rightarrow$  🖺 168
- For information on the function and entry of the direct access code  $\rightarrow \square 54$

### Display area

#### Menus

Symbol	Meaning
A	Operation         Appears:         In the menu next to the "Operation" selection         At the left in the navigation path in the Operation menu
۶	Setup         Appears:         In the menu next to the "Setup" selection         At the left in the navigation path in the Setup menu
ਪੁ	Diagnostics         Appears:         In the menu next to the "Diagnostics" selection         At the left in the navigation path in the Diagnostics menu
-3 <b>*</b>	<ul> <li>Expert</li> <li>Appears:</li> <li>In the menu next to the "Expert" selection</li> <li>At the left in the navigation path in the Expert menu</li> </ul>

### Submenus, wizards, parameters

Symbol	Meaning
•	Submenu
₩.	Wizard
Ø	Parameters within a wizard           Image: No display symbol exists for parameters in submenus.

### Locking


Symbol	Meaning
ô	<ul><li>Parameter locked</li><li>When displayed in front of a parameter name, indicates that the parameter is locked.</li><li>By a user-specific access code</li><li>By the hardware write protection switch</li></ul>

### Wizard operation

Symbol	Meaning
	Switches to the previous parameter.
$\checkmark$	Confirms the parameter value and switches to the next parameter.
E	Opens the editing view of the parameter.

### 8.3.3 Editing view


### Numeric editor

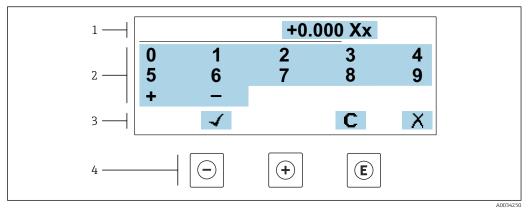

20 For entering values in parameters (e.g. limit values)

- 1 Entry display area
- 2 Input screen
- *3 Confirm, delete or reject entry*
- 4 Operating elements

#### Text editor

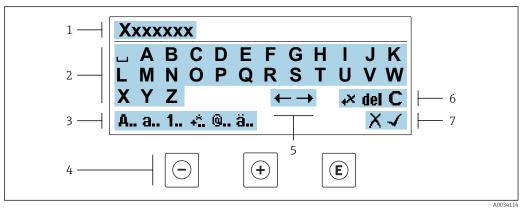

21 For entering text in parameters (e.g. tag name)

- 1 Entry display area
- 2 Current input screen
- 3 Change input screen
- 4 *Operating elements*
- 5 Move entry position
- 6 Delete entry
- 7 Reject or confirm entry

### Using the operating elements in the editing view

Кеу		Meaning
E	)	Minus key Move the entry position to the left.
(+	Ð	Plus key Move the entry position to the right.

Кеу	Meaning	
E	<ul><li>Enter key</li><li>Pressing the key briefly confirms the selection.</li><li>Pressing the key for 2 s confirms your entry.</li></ul>	
-++	Escape key combination (press keys simultaneously) Close the editing view without accepting a change.	

### Input screens

Symbol	Meaning
A	Upper case
а	Lower case
1	Numbers
+*	Punctuation marks and special characters: = + – * / <sup>2 3</sup> $\frac{1}{4}$ $\frac{1}{2}$ $\frac{3}{4}$ ( ) [ ] < > { }
<b>@</b>	Punctuation marks and special characters: '" `^. , ; : ? ! % $\mu$ ° $\in$ \$ £ ¥ § @ # / \ I ~ & _
ä	Umlauts and accents

### Controlling data entries

Symbol	Meaning	
←→	Move entry position	
X	Reject entry	
4	Confirm entry	
×,	Delete character immediately to the left of the entry position	
del	Delete character immediately to the right of the entry position	
С	Clear all the characters entered	

Кеу	Meaning		
Θ	Minus key         In menu, submenu         Moves the selection bar upwards in a picklist.         With a wizard         Confirms the parameter value and goes to the previous parameter.         For text and numeric editor         Move the entry position to the left.		
( <del>+</del> )	Plus key         In menu, submenu         Moves the selection bar downwards in a picklist.         With a wizard         Confirms the parameter value and goes to the next parameter.         For text and numeric editor         Move the entry position to the right.		
Ē	<ul> <li>Enter key</li> <li>For operational display</li> <li>Pressing the key briefly opens the operating menu.</li> <li>In menu, submenu</li> <li>Pressing the key briefly: <ul> <li>Opens the selected menu, submenu or parameter.</li> <li>Starts the wizard.</li> <li>If help text is open, closes the help text of the parameter.</li> </ul> </li> <li>Pressing the key for 2 s in a parameter: <ul> <li>If present, opens the help text for the function of the parameter.</li> </ul> </li> <li>With a wizard <ul> <li>Opens the editing view of the parameter.</li> </ul> </li> <li>For text and numeric editor <ul> <li>Pressing the key briefly confirms the selection.</li> <li>Pressing the key for 2 s confirms your entry.</li> </ul> </li> </ul>		
-+++	<ul> <li>Escape key combination (press keys simultaneously)</li> <li>In menu, submenu</li> <li>Pressing the key briefly: <ul> <li>Exits the current menu level and takes you to the next level up.</li> <li>If help text is open, closes the help text of the parameter.</li> </ul> </li> <li>Pressing the key for 2 s returns you to the operational display ("home position").</li> <li>With a wizard</li> <li>Exits the wizard and takes you to the next level up.</li> <li>For text and numeric editor</li> <li>Closes the editing view without applying changes.</li> </ul>		
()+E	<ul> <li>Minus/Enter key combination (press and hold down the keys simultaneously)</li> <li>If the keypad lock is enabled: Pressing the key for 3 s disables the keypad lock.</li> <li>If the keypad lock is not enabled: Pressing the key for 3 s opens the context menu including the selection for activating the keypad lock.</li> </ul>		

### 8.3.4 Operating elements

### 8.3.5 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Data backup
- Simulation

### Calling up and closing the context menu

The user is in the operational display.

- **1.** Press the  $\Box$  and  $\Box$  keys for longer than 3 seconds.
  - └ The context menu opens.

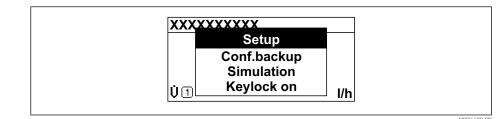

2. Press - + + simultaneously.

└ The context menu is closed and the operational display appears.

#### Calling up the menu via the context menu

1. Open the context menu.

**2.** Press  $\pm$  to navigate to the desired menu.

**3.** Press E to confirm the selection.


└ The selected menu opens.

### 8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

For an explanation of the navigation view with symbols and operating elements  $\rightarrow \cong 48$ 

Example: Setting the number of displayed measured values to "2 values"

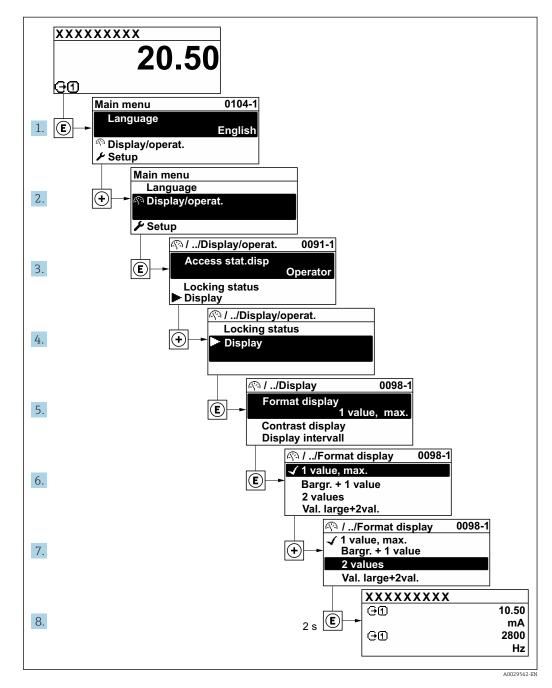


### 8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

### Navigation path

Expert  $\rightarrow$  Direct access

The direct access code consists of a 5-digit number (at maximum) and the channel number, which identifies the channel of a process variable: e.g. 00914-2. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

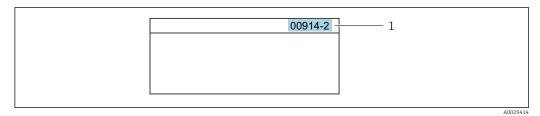

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered. Example: Enter **"914"** instead of **"00914"**
- If no channel number is entered, channel 1 is opened automatically.
- Example: Enter  $00914 \rightarrow Assign \ process \ variable$  parameter
- If a different channel is opened: Enter the direct access code with the corresponding channel number.

Example: Enter 00914-2 → Assign process variable parameter

For the direct access codes of the individual parameters, see the "Description of Device Parameters" document for the device

### 8.3.8 Calling up help text


Help text is available for some parameters and can be called up from the navigation view. The help text provides a brief explanation of the parameter function and thereby supports swift and safe commissioning.

#### Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

1. Press E for 2 s.

← The help text for the selected parameter opens.

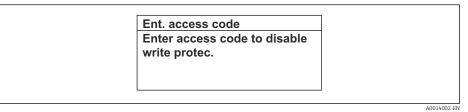

- 22 Example: Help text for parameter "Enter access code"
- 2. Press + + simultaneously.
  - └ The help text is closed.

### 8.3.9 Changing the parameters

Parameters can be changed via the numeric editor or text editor.

- Numeric editor: Change values in a parameter, e.g. specifications for limit values.Text editor: Enter text in a parameter, e.g. tag name.
- A message is displayed if the value entered is outside the permitted value range.

Ent. access code
Invalid or out of range input
value
Min:0
Max:9999

For a description of the editing view - consisting of the text editor and numeric editor - with symbols  $\rightarrow \cong 50$ , for a description of the operating elements  $\rightarrow \cong 52$ 

#### 8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access  $\rightarrow \square 145$ .

### Defining access authorization for user roles

An access code is not yet defined when the device is delivered from the factory. Access authorization (read and write access) to the device is not restricted and corresponds to the "Maintenance" user role.

Define the access code.

└ The "Operator" user role is redefined in addition to the "Maintenance" user role. Access authorization differs for the two user roles.

•		
Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	V	V
After an access code has been defined.	V	✓ <sup>1)</sup>

Access authorization to parameters: "Maintenance" user role

The user only has write access after entering the access code. 1)

Access authorization to parameters: "Operator" user role

Access code status	Read access	Write access
After an access code has been defined.	V	_ 1)

1) Despite the defined access code, certain parameters can always be modified and thus are excluded from the write protection, as they do not affect the measurement. Refer to the "Write protection via access code" section

The user role with which the user is currently logged on is indicated by the Access **status** parameter. Navigation path: Operation  $\rightarrow$  Access status

#### 8.3.11 Disabling write protection via access code

If the 🖻 -symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using local operation  $\rightarrow \cong 145$ .

Parameter write protection via local operation can be disabled by entering the user-specific access code in the **Enter access code** parameter ( $\rightarrow \square$  121) via the respective access option.

1. After you press E, the input prompt for the access code appears.

2. Enter the access code.

→ The @-symbol in front of the parameters disappears; all previously writeprotected parameters are now re-enabled.

### 8.3.12 Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.

#### Switching on the keypad lock

The keypad lock is switched on automatically:

- If the device has not been operated via the display for > 1 minute.
- Each time the device is restarted.

### To activate the keylock manually:

1. The device is in the measured value display.

- Press the  $\Box$  and  $\blacksquare$  keys for 3 seconds.
- └ A context menu appears.
- 2. In the context menu select the **Keylock on** option.
  - └ The keypad lock is switched on.

If the user attempts to access the operating menu while the keypad lock is active, the **Keylock on** message appears.

#### Switching off the keypad lock

- ► The keypad lock is switched on. Press the □ and □ keys for 3 seconds.
  - └ The keypad lock is switched off.

# 8.4 Access to operating menu via Web browser

### 8.4.1 **PROFINET** with Ethernet-APL

Device use       Device connection to an APL field switch         The device may only be operated according to the following APL classifications:       If used in hazardous areas: SLAA or SLAC <sup>1)</sup> If used in non-hazardous areas: SLAX       Connection values of APL field switch (for example correspond classification SPCC or SPAA):         Maximum input voltage: 15 V <sub>DC</sub> Minimum output values: 0.54 W         Device connection to an SPE switch         If used in non-hazardous areas: suitable SPE switch         SPE switch prerequisite:         Support of 10BASE-T1L standard         Support of PoDL power class 10, 11 or 12         Detection of SPE field devices without integrated PoDL module         Connection values of SPE switch:         Maximum input voltage: 30 V <sub>DC</sub> Minimum output values: 1.85 W	
PROFINET	According to IEC 61158 and IEC 61784
Ethernet-APL	According to IEEE 802.3cg, APL port profile specification v1.0, galvanically isolated
Data transfer	10 Mbit/s
Current consumption Transmitter	
	Max. 55.56 mA
Permitted supply voltage	<ul> <li>Ex: 9 to 15 V</li> <li>Non-Ex: 9 to 32 V</li> </ul>
Network connection	With integrated reverse polarity protection

1) For more information on using the device in the hazardous area, see the Ex-specific Safety Instructions

### 8.4.2 Prerequisites

Computer hardware

Hardware	Interface	
	CDI-RJ45	WLAN
Interface	The computer must have an RJ45 interface. <sup>1)</sup>	The operating unit must have a WLAN interface.
Connection	Standard Ethernet cable	Connection via Wireless LAN.
Screen	Recommended size: ≥12" (depends on the screen resolution)	

1) Recommended cable: CAT5e, CAT6 or CAT7, with shielded connector (e.g. brand YAMAICHI ; Part No Y-ConProfixPlug63 / Prod. ID: 82-006660)

#### Computer software

Software	Interface	
	CDI-RJ45	WLAN
Recommended operating systems	<ul> <li>Microsoft Windows 8 or higher.</li> <li>Mobile operating systems: <ul> <li>iOS</li> <li>Android</li> </ul> </li> <li>Microsoft Windows XP and Windows 7 is supported.</li> </ul>	
Web browsers supported	<ul> <li>Microsoft Internet Explorer 8 or higher</li> <li>Microsoft Edge</li> <li>Mozilla Firefox</li> <li>Google Chrome</li> <li>Safari</li> </ul>	

#### Computer settings

Settings	Interface		
	CDI-RJ45	WLAN	
User rights	Appropriate user rights (e.g. administrator rights) for TCP/IP and proxy server settings are necessary (for adjusting the IP address, subnet mask etc.).		
Proxy server settings of the web browser	The web browser setting <i>Use proxy server for LAN</i> must be <b>disabled</b> .		
JavaScript	JavaScript must be enabled.		
	If JavaScript cannot be enabled: Enter http://192.168.1.212/servlet/basic.html in the address bar of the web browser. A fully functional but simplified version of the operating menu structure starts in the web browser.		
	When installing a new firmware version: To enable correct data display, clear the temporary memory (cache) under <b>Internet options</b> in the web browser.		
Network connections	Only the active network connections to the measuring device should be used.		
	Switch off all other network connections such as WLAN.	Switch off all other network connections.	



### Measuring device: Via CDI-RJ45 service interface

Device	CDI-RJ45 service interface
Measuring device	The measuring device has an RJ45 interface.
Web server	<ul> <li>Web server must be enabled; factory setting: ON</li> <li>I For information on enabling the Web server → </li> <li>64</li> </ul>

### Measuring device: via WLAN interface

Device	WLAN interface
Measuring device	The measuring device has a WLAN antenna: Transmitter with integrated WLAN antenna Transmitter with external WLAN antenna
Web server	Web server and WLAN must be enabled; factory setting: ON for information on enabling the Web server →

### 8.4.3 Establishing a connection

### Via service interface (CDI-RJ45)

Preparing the measuring device

- Depending on the housing version: Loosen the securing clamp or fixing screw of the housing cover.
- 2. Depending on the housing version: Unscrew or open the housing cover.
- 3. Connect the computer to the RJ45 plug via the standard Ethernet cable .

### Configuring the Internet protocol of the computer

The following information refers to the default Ethernet settings of the device.

IP address of the device: 192.168.1.212 (factory setting)

The IP address can be assigned to the measuring device in a variety of ways:

- Software addressing:
  - The IP address is entered via the  $I\!P$  address parameter (  $\rightarrow~\boxtimes~90)$  .
- DIP switch for "Default IP address": To establish the network connection via the service interface (CDI-RJ45): the fixed IP address 192.168.1.212 is used.

To establish a network connection via the service interface (CDI-RJ45): set the "Default IP address" DIP switch to **ON**. The measuring device then has the fixed IP address: 192.168.1.212. The fixed IP address 192.168.1.212 can now be used to establish the connection to the network.

- 1. Via DIP switch 2, activate the default IP address 192.168.1.212: .
- 2. Switch on the measuring device.
- 3. Connect the computer to the RJ45 plug via the standard Ethernet cable  $\rightarrow \square$  66.
- 4. If a 2nd network card is not used, close all the applications on the notebook.
  - └ Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.
- 5. Close any open Internet browsers.
- 6. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

IP address	192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 $\rightarrow$ e.g. 192.168.1.213
Subnet mask	255.255.255.0
Default gateway	192.168.1.212 or leave cells empty

### Via WLAN interface

Configuring the Internet protocol of the mobile terminal

### NOTICE

### If the WLAN connection is lost during the configuration, settings made may be lost.

► Make sure that the WLAN connection is not disconnected while configuring the device.

### NOTICE

#### Note the following to avoid a network conflict:

- Avoid accessing the measuring device simultaneously from the same mobile terminal via the service interface (CDI-RJ45) and the WLAN interface.
- Only activate one service interface (CDI-RJ45 or WLAN interface).
- ► If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

#### Preparing the mobile terminal

• Enable WLAN on the mobile terminal.

Establishing a WLAN connection from the mobile terminal to the measuring device

- 1. In the WLAN settings of the mobile terminal: Select the measuring device using the SSID (e.g. EH\_Promass\_300\_A802000).
- 2. If necessary, select the WPA2 encryption method.
- 3. Enter the password:
  - Serial number of the measuring device ex-works (e.g. L100A802000).
  - ← The LED on the display module flashes. It is now possible to operate the measuring device with the web browser, FieldCare or DeviceCare.
  - The serial number can be found on the nameplate.
- To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

Terminating the WLAN connection


 After configuring the device: Terminate the WLAN connection between the mobile terminal and measuring device.

#### Starting the Web browser

1. Start the Web browser on the computer.

# 2. Enter the IP address of the web server in the address line of the web browser: 192.168.1.212

└ The login page appears.

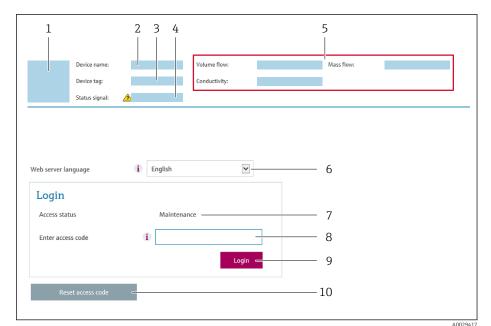

- 1 Picture of device
- 2 Device name
- Device tag
   Status signa
- 4 Status signal5 Current measured values
- 6 Operating language
- 7 User role
- 8 Access code
- 9 Login
- 10 Reset access code ( $\rightarrow \square 142$ )

If a login page does not appear, or if the page is incomplete  $\rightarrow \square$  165

### 8.4.4 Logging on


**1.** Select the preferred operating language for the Web browser.

- 2. Enter the user-specific access code.
- 3. Press **OK** to confirm your entry.

Access code 0000 (factory s	etting); can be changed by customer
-----------------------------	-------------------------------------

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

### 8.4.5 User interface

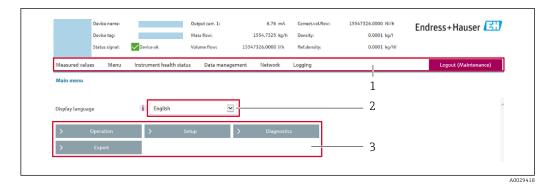

- 1 Function row
- 2 Local display language
- 3 Navigation area

#### Header

The following information appears in the header:

- Device name
- Device tag
- Device status with status signal  $\rightarrow \implies 171$
- Current measured values

#### **Function** row

Functions	Meaning
Measured values	Displays the measured values of the device
Menu	<ul> <li>Access to the operating menu from the measuring device</li> <li>The structure of the operating menu is the same as for the local display</li> <li>Detailed information on the structure of the operating menu: see the Description of Device Parameters</li> </ul>
Device status	Displays the diagnostic messages currently pending, listed in order of priority
Data management	<ul> <li>Data exchange between computer and measuring device:</li> <li>Device configuration:</li> <li>Load settings from the device (XML format, save configuration)</li> <li>Save settings to the device (XML format, restore configuration)</li> <li>Logbook - Export Event logbook (.csv file)</li> <li>Documents - Export documents:</li> <li>Export backup data record (.csv file, create documentation of the measuring point configuration)</li> <li>Verification report (PDF file, only available with the "Heartbeat Verification" application package)</li> <li>Firmware update - Flashing a firmware version</li> </ul>
Network	<ul> <li>Configuration and checking of all the parameters required for establishing the connection to the measuring device:</li> <li>Network settings (e.g. IP address, MAC address)</li> <li>Device information (e.g. serial number, firmware version)</li> </ul>
Logout	End the operation and call up the login page

#### Navigation area

The menus, the associated submenus and parameters can be selected in the navigation area.

### Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

### 8.4.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

#### Navigation

"Expert" menu  $\rightarrow$  Communication  $\rightarrow$  Web server

#### Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Web server functionality	Switch the Web server on and off.	<ul><li>Off</li><li>HTML Off</li><li>On</li></ul>	On

#### Function scope of the "Web server functionality" parameter

Option	Description
Off	<ul><li>The Web server is completely disabled.</li><li>Port 80 is locked.</li></ul>
HTML Off	The HTML version of the Web server is not available.
On	<ul> <li>The complete Web server functionality is available.</li> <li>JavaScript is used.</li> <li>The password is transferred in an encrypted state.</li> <li>Any change to the password is also transferred in an encrypted state.</li> </ul>

#### Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via local display
- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool

### 8.4.7 Logging out

Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.

- 1. Select the **Logout** entry in the function row.
  - ← The home page with the Login box appears.
- 2. Close the Web browser.

3. If no longer needed:

Reset the modified properties of the Internet protocol (TCP/IP)  $\rightarrow \square$  60.


If communication with the web server was established via the default IP address 192.168.1.212, DIP switch no. 10 must be reset (from  $ON \rightarrow OFF$ ). Afterwards, the IP address of the device is active again for network communication.

### 8.5 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

### 8.5.1 Connecting the operating tool

#### Via APL network

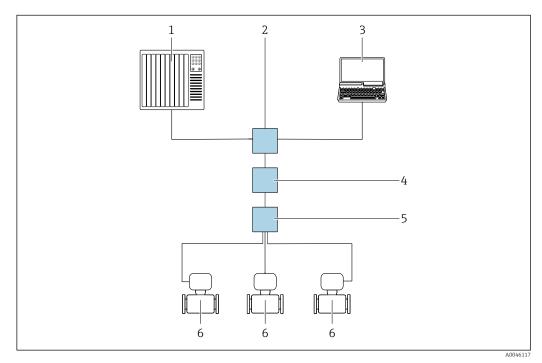

23 Options for remote operation via APL network

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Ethernet switch, e.g. Scalance X204 (Siemens)
- 3 Computer with Web browser (e.g. Internet Explorer) for access to integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare with PROFINET COM DTM or SIMATIC PDM with FDI-Package)
- 4 APL power switch (optional)
- 5 APL field switch
- 6 Measuring device

#### Service interface


Via service interface (CDI-RJ45)

A point-to-point connection can be established via onsite device configuration. With the housing open, the connection is established directly via the service interface (CDI-RJ45) of the device.

An adapter for the RJ45 to the M12 plug is optionally available for the non-hazardous area:

Order code for "Accessories", option NB: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. The connection to the service interface can be established via an M12 plug without opening the device.

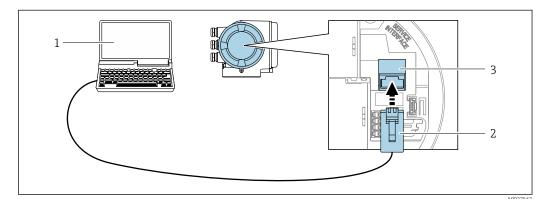


☑ 24 Connection via service interface (CDI-RJ45)

1 Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP"

- 2 Standard Ethernet connecting cable with RJ45 plug
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

### Via WLAN interface

The optional WLAN interface is available on the following device version: Order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN"

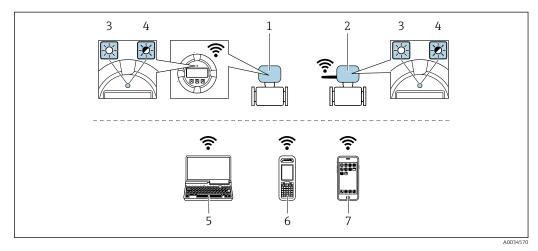

1 Transmitter with integrated WLAN antenna

2 Transmitter with external WLAN antenna

- 3 LED lit constantly: WLAN reception is enabled on measuring device
- 4 LED flashing: WLAN connection established between operating unit and measuring device
- 5 Computer with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare)
- 6 Mobile handheld terminal with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or operating tool (e.g. FieldCare, DeviceCare)

7 Smart phone or tablet (e.g. Field Xpert SMT70)

	-	
Function	WLAN: IEEE 802.11 b/g (2.4 GHz)	
Encryption	WPA2-PSK AES-128 (in accordance with IEEE 802.11i)	
Configurable WLAN channels	1 to 11	
Degree of protection	IP67	
Available antennas	<ul> <li>Internal antenna</li> <li>External antenna (optional) In the event of poor transmission/reception conditions at the place of installation.</li> <li>Only 1 antenna is active at any one time!</li> </ul>	
Range	<ul> <li>Internal antenna: typically 10 m (32 ft)</li> <li>External antenna: typically 50 m (164 ft)</li> </ul>	
Materials (external antenna)	<ul> <li>Antenna: ASA plastic (acrylonitrile styrene acrylate) and nickel-plated brass</li> <li>Adapter: Stainless steel and nickel-plated brass</li> <li>Cable: Polyethylene</li> <li>Plug: Nickel-plated brass</li> <li>Angle bracket: Stainless steel</li> </ul>	

Configuring the Internet protocol of the mobile terminal

### NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.

• Make sure that the WLAN connection is not disconnected while configuring the device.

### NOTICE

#### Note the following to avoid a network conflict:

- Avoid accessing the measuring device simultaneously from the same mobile terminal via the service interface (CDI-RJ45) and the WLAN interface.
- Only activate one service interface (CDI-RJ45 or WLAN interface).
- ► If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

### Preparing the mobile terminal

• Enable WLAN on the mobile terminal.

Establishing a WLAN connection from the mobile terminal to the measuring device

- 1. In the WLAN settings of the mobile terminal: Select the measuring device using the SSID (e.g. EH\_Promass\_300\_A802000).
- 2. If necessary, select the WPA2 encryption method.
- 3. Enter the password:

Serial number of the measuring device ex-works (e.g. L100A802000).

← The LED on the display module flashes. It is now possible to operate the measuring device with the web browser, FieldCare or DeviceCare.

The serial number can be found on the nameplate.

To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

### Terminating the WLAN connection

 After configuring the device: Terminate the WLAN connection between the mobile terminal and measuring device.

### 8.5.2 FieldCare

### Function scope

FDT (Field Device Technology)-based plant asset management tool from Endress+Hauser. It can configure all smart field units in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

- CDI-RJ45 service interface  $\rightarrow \cong 66$
- WLAN interface  $\rightarrow$  🗎 66

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook

For additional information about FieldCare, see Operating Instructions BA00027S and BA00059S


### Source for device description files

See information  $\rightarrow \square 71$ 

#### Establishing a connection

- 1. Start FieldCare and launch the project.
- 2. In the network: Add a device.
  - ← The **Add device** window opens.
- 3. Select the **CDI Communication TCP/IP** option from the list and press **OK** to confirm.
- 4. Right-click **CDI Communication TCP/IP** and select the **Add device** option in the context menu that opens.
- 5. Select the desired device from the list and press **OK** to confirm.
  - ← The CDI Communication TCP/IP (Configuration) window opens.
- 6. Enter the device address in the **IP address** field: 192.168.1.212 and press **Enter** to confirm.
- 7. Establish the online connection to the device.
- For additional information, see Operating Instructions BA00027S and BA00059S

#### User interface

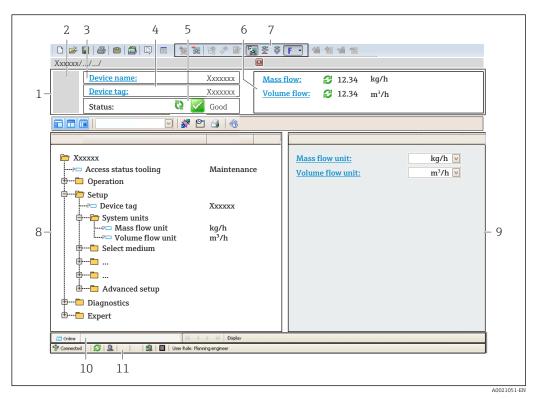

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Tag name
- 5 Status area with status signal  $\rightarrow \square 171$
- 6 Display area for current measured values
- 7 Edit toolbar with additional functions such as save/load, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

### 8.5.3 DeviceCare

#### **Function scope**

Tool to connect and configure Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.

For details, see Innovation Brochure IN01047S

#### Source for device description files

See information  $\rightarrow \square 71$ 

### 8.5.4 SIMATIC PDM

#### Function scope

SIMATIC PDM is a standardized, vendor-independent program from Siemens for the operation, configuration, maintenance and diagnosis of intelligent field devices via PROFINET protocol.

### Source for device description files

See information  $\rightarrow \square 71$ 

# 9 System integration

# 9.1 Overview of device description files

### 9.1.1 Current version data for the device

Firmware version	01.00.zz	<ul> <li>On the title page of the Operating Instructions</li> <li>On the transmitter nameplate</li> <li>Firmware version</li> <li>Diagnostics → Device information → Firmware version</li> </ul>
Manufacturer	17	Manufacturer Expert $\rightarrow$ Communication $\rightarrow$ Physical block $\rightarrow$ Manufacturer
Device ID	0xA43B	-
Device type ID	Promass 300	Device type Expert $\rightarrow$ Communication $\rightarrow$ Physical block $\rightarrow$ Device type
Device revision	1	-
PROFINET with Ethernet-APL version	2.43	Version of the PROFINET specification

 $\mathbf{P}$  For an overview of the various firmware versions for the device  $\rightarrow \mathbf{P}$  246

### 9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

FieldCare	<ul> <li>www.endress.com → Download Area</li> <li>USB stick (contact Endress+Hauser)</li> <li>DVD (contact Endress+Hauser)</li> </ul>
DeviceCare	<ul> <li>www.endress.com → Download Area</li> <li>CD-ROM (contact Endress+Hauser)</li> <li>DVD (contact Endress+Hauser)</li> </ul>
SIMATIC PDM (Siemens)	www.endress.com → Download Area

# 9.2 Device master file (GSD)

In order to integrate field devices into a bus system, PROFINET needs a description of the device parameters, such as output data, input data, data format and data volume.

These data are available in the device master file (GSD) which is provided to the automation system when the communication system is commissioned. In addition device bit maps, which appear as icons in the network structure, can also be integrated.

The device master file (GSD) is in XML format, and the file is created in the GSDML description markup language.

With the PA Profile 4.02 device master file (GSD) it is possible to exchange field devices made by different manufacturers without having to reconfigure.

The use of two different device master files (GSDs) is possible: the manufacturer-specific GSD and the PA-Profile GSD.

# 9.2.1 File name of the manufacturer-specific device master file (GSD)

Example of the name of a device master file: GSDML-V2.43-EH-PROMASS\_300\_500\_APL\_yyyymmdd.xml

GSDML	Description language
V2.43	Version of the PROFINET specification
EH	Endress+Hauser
PROMASS	Instrument family
300_500_APL	Transmitter
yyyymmdd	Date of issue (yyyy: year, mm: month, dd: day)
.xml	File name extension (XML file)

### 9.2.2 File name of the PA Profile device master file (GSD)

Example of the name of a PA Profile device master file:

GSDML-V2.43-PA\_Profile\_V4.02-B333-FLOW\_CORIOLIS-yyyymmdd.xml

GSDML	Description language
V2.43	Version of the PROFINET specification
PA_Profile_V4.02	Version of the PA Profile specification
B333	PA Profile device identification
FLOW	Product family
CORIOLIS	Flow measuring principle
yyyymmdd	Date of issue (yyyy: year, mm: month, dd: day)
.xml	File name extension (XML file)

API	Supported modules	Input and output variables
0x9700	Analog input	Mass flow
	Analog input	Density
	Analog input	Temperature
	Totalizer	Totalizer value: mass/mass Totalizer control

Source for device master files (GSD):

Manufacturer-specific GSD:	www.endress.com $\rightarrow$ Download Area	
	https://www.profibus.com/products/gsd-files/gsd-library-profile-for-process- control-devices-version-40 → Download Area	

# 9.3 Cyclic data transmission

# 9.3.1 Overview of the modules

The following graphic shows which modules are available to the device for cyclic data transfer. Cyclic data transfer is performed with an automation system.

	Measuring device			Direction	Control
API	Modules	Slot	Sub-slot	Data flow	system
	Analog Input 1 (Mass flow)	1	1	→	
	Analog Input 2 (Density)	2	1	→	
	Analog Input 3 (Temperature)	3	1	→	
	Analog Input 4	20	1	<i>→</i>	
	Analog Input 5	21	1	÷	-
	Analog Input 6	22	1	→	
	Analog Input 7	23	1	<b>→</b>	
	Analog Input 8	24	1	<i>→</i>	
	Analog Input 9	25	1	<b>→</b>	
	Analog Input 10	26	1	<i>→</i>	
	Analog Input 11	27	1	→	
	Analog Input 12	28	1	$\rightarrow$	
	Analog Input 13	29	1	→	
	Analog Input 14	30	1	$\rightarrow$	
	Analog Input 15	31	1	$\rightarrow$	
	Analog Input 16	32	1	→	
	Totalizer 1 (Mass)	4	1	→ ←	
0x9700	Totalizer 2	70	1	$\rightarrow$ $\rightarrow$	PROFINET
	Totalizer 3	71	1	→ ←	
	Binary Input 1 (Heartbeat)	80	1	$\rightarrow$	
	Binary Input 2	81	1	$\rightarrow$	
	Analog Output 1 (Pressure)	160	1	÷	
	Analog Output 2 (Temperature)	161	1	÷	
	Analog Output 3 (Ref. density)	162	1	÷	
	Analog Output 4 (% Sediment and water)	163	1	÷	
	Analog Output 5 (Water cut percentage)	164	1	÷	
	Analog Output 6 (Appl. Spec. out 0)	165	1	÷	
	Analog Output 7 (Appl. Spec. out 1)	166	1	÷	
	Binary Output 1 (Heartbeat)	210	1	<i>→</i>	
	Binary Output 2	211	1	÷	
	Enumerated Output	240	1	÷	

# 9.3.2 Description of the modules

The data structure is described from the perspective of the automation system:

- Input data: Are sent from the measuring device to the automation system.
- Output data: Are sent from the automation system to the measuring device.

## Analog Input module

Transmit input variables from the measuring device to the automation system.

Analog Input modules cyclically transmit the selected input variables, including the status, from the measuring device to the automation system. The input variable is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Selection: input variable

Slot	Sub-slot	Input variables
1	1	Mass flow
2	1	Density

Slot	Sub-slot	Input variables
3	1	Temperature
20 to 32	1	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency</li> <li>Frequency fluctuation</li> <li>Oscillation damping</li> <li>Tube damping fluctuation</li> <li>Signal asymmetry</li> <li>Exciter current</li> <li>Application-specific output 0</li> <li>Application-specific output 1</li> <li>Index suspended bubbles</li> <li>Index suspended bubbles</li> <li>Index sensor asymmetry</li> <li>Current output 1</li> <li>Current output 2</li> <li>Current output 3</li> <li>Additional input variables with the Heartbeat Verification application package</li> <li>Carrier pipe temperature</li> <li>Oscillation damping 1</li> <li>Oscillation amplitude 0</li> <li>Oscillation amplitude 1</li> <li>Frequency fluctuation 1</li> <li>Tube damping fluctuation 1</li> <li>Exciter current 1</li> </ul>
		<ul> <li>HBSI</li> <li>Additional input variables with the Concentration Measurement application package</li> <li>Concentration</li> <li>Target mass flow</li> <li>Carrier mass flow</li> <li>Target volume flow</li> <li>Carrier volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Additional input variables with the Petroleum application package</li> <li>Alternative reference density</li> <li>GSV flow</li> <li>Alternative GSV flow</li> <li>NSV flow</li> <li>Alternative NSV flow</li> <li>S&amp;W volume flow</li> <li>Water cut %</li> <li>Oil density</li> <li>Water density</li> <li>Oil mass flow</li> <li>Oil volume flow</li> <li>Water corrected volume flow</li> <li>Water corrected volume flow</li> <li>Water corrected volume flow</li> <li>Water corrected volume flow</li> </ul>

### Data structure

Output data of Analog Output

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status <sup>1)</sup>

1) Status coding  $\rightarrow \square 83$ 

### Application-specific Input module

Transmit compensation values from the measuring device to the automation system.

The Application-specific Input module cyclically transmits compensation values, including the status, from the measuring device to the automation system. The compensation value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the compensation value.

### Assigned compensation values

The configuration is performed via: Expert  $\rightarrow$  Application  $\rightarrow$  Application specific calculations  $\rightarrow$  Process variables

Slot	Compensation value
2032	Application-specific Input module 0
2032	Application-specific Input module 1

#### Data structure

Input data of Application-specific Input module

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	ed value: floating	point number (IE	EEE 754)	Status <sup>1)</sup>

1) Status coding  $\rightarrow \square 83$ 

## **Binary Input module**

Transmit binary input variables from the measuring device to the automation system.

Binary input variables are used by the measuring device to transmit the state of device functions to the automation system.

Binary Input modules cyclically transmit discrete input variables, including the status, from the measuring device to the automation system. The discrete input variable is depicted in the first byte. The second byte contains standardized status information pertaining to the input variable.

Selection: Device function Binary Input Slot 80

Slot	Sub-slot	Bit	Device function	Status (meaning)
		0	Verification has not been performed.	<ul><li> 0 (device function not active)</li><li> 1 (device function active)</li></ul>
		1	Verification has failed.	
80	1	2	Currently performing verification.	
		3	Verification completed.	
		4	Verification has failed.	

Slot	Sub-slot	Bit	Device function	Status (meaning)
		5	Verification performed successfully.	
		6	Verification has not been performed.	
		7	Reserved	

### Selection: Device function Binary Input Slot 81

Slot	Sub-slot	Bit	Device function	Status (meaning)
		0	Partially empty pipe detection	<ul> <li>0 (device function not active)</li> </ul>
		1	Low flow cut off	<ul> <li>1 (device function active)</li> </ul>
	81 1	2	Reserved	
81		3	Reserved	
01	T	4	Reserved	
		5	Reserved	
		6	Reserved	
		7	Reserved	1

#### Data structure

Input data of Binary Input

Byte 1	Byte 2
Binary Input	Status 1)

1) Status coding  $\rightarrow \square 83$ 

### Mass module

Transmit mass counter value from the measuring device to the automation system.

The Mass module cyclically transmits the mass, including the status, from the measuring device to the automation system. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

#### Selection: input variable

Slot	Sub-slot	Input variables
4	1	Mass

#### Data structure

Volume input data

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	Measured value: floating point number (IEEE 754)		Status 1)	

1) Status coding  $\rightarrow \square 83$ 

### Mass Totalizer Control module

Transmit totalizer value from the measuring device to the automation system.

The Mass Totalizer Control module cyclically transmits a selected totalizer value, including the status, from the measuring device to the automation system. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Selection: input variable

Slot	Sub-slot	Input variable
4	1	Mass

#### Data structure

Mass Totalizer Control input data

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	Status 1)			

1) Status coding  $\rightarrow \square 83$ 

### Selection: output variable

Transmit the control value from the automation system to the measuring device.

Slot	Sub-slot	Value	Input variable
		1	Reset to "0"
7071	1	2	Preset value
7071	1	3	Stop
	-	4	Totalize

## Data structure

Mass Totalizer Control output data

Byte 1	
Control variable	

## Totalizer module

Transmit totalizer value from the measuring device to the automation system.

The Totalizer module cyclically transmits a selected totalizer value, including the status, from the measuring device to the automation system. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

## Selection: input variable

Slot	Sub-slot	Input variable
70 to 71	1	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Target mass flow <sup>1)</sup></li> <li>Carrier mass flow</li> <li>Target volume flow</li> <li>Carrier volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>GSV flow <sup>2)</sup></li> <li>Alternative GSV flow <sup>2)</sup></li> <li>Alternative NSV flow <sup>2)</sup></li> <li>S&amp;W volume flow <sup>2)</sup></li> <li>Oil mass flow <sup>2)</sup></li> <li>Water mass flow <sup>2)</sup></li> <li>Oil volume flow <sup>2)</sup></li> <li>Oil corrected volume flow <sup>2)</sup></li> <li>Raw value mass flow <sup>2)</sup></li> </ul>

1) Only available with the Concentration application package

2) Only available with the Petroleum application package

#### Data structure

Totalizer input data

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	Status 1)			

1) Status coding  $\rightarrow \square 83$ 

## **Totalizer Control module**

Transmit totalizer value from the measuring device to the automation system.

The Totalizer Control module cyclically transmits a selected totalizer value, including the status, from the measuring device to the automation system. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

## Selection: input variable

Slot	Sub-slot	Input variable
70 to 71	1	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Target mass flow <sup>1)</sup></li> <li>Carrier mass flow</li> <li>Target volume flow</li> <li>Carrier volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>GSV flow <sup>2)</sup></li> <li>Alternative GSD flow <sup>2)</sup></li> <li>NSV flow <sup>2)</sup></li> <li>Alternative NSV flow <sup>2)</sup></li> <li>S&amp;W volume flow <sup>2)</sup></li> <li>Oil mass flow <sup>2)</sup></li> <li>Water mass flow <sup>2)</sup></li> <li>Oil volume flow <sup>2)</sup></li> <li>Oil corrected volume flow <sup>2)</sup></li> <li>Oil corrected volume flow <sup>2)</sup></li> <li>Raw value mass flow <sup>2)</sup></li> </ul>

1) Only available with the Concentration application package

2) Only available with the Petroleum application package

### Data structure

Totalizer Control input data

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5		
Measure	Measured value: floating point number (IEEE 754)					

1) Status coding  $\rightarrow \square 83$ 

## Selection: output variable

Transmit the control value from the automation system to the measuring device.

Slot	Sub-slot	Value	Input variable
70 to 71 1		1	Reset to "0"
	1	2	Preset value
	1	3	Stop
	-	4	Totalize

### Data structure

Totalizer Control output data

Byte 1
Control variable

## Analog Output module

Transmit a compensation value from the automation system to the measuring device.

Analog Output modules cyclically transmit compensation values, including the status and associated unit, from the automation system to the measuring device. The compensation value is depicted in the first four bytes in the form of a floating point number as per the

IEEE 754 standard. The fifth byte contains standardized status information pertaining to the compensation value.

Assigned compensation values

The selection is made via: Expert → Sensor → External compensation

Slot	Sub-slot	Compensation value	
160		Pressure	
161		Temperature	
162		Reference density	
163	1	External value for % S&W (sediment and water) <sup>1)</sup>	
164	External value for % Water cut <sup>1)</sup>		
165		Appl. Spec. Outp. 0	
166		Appl. Spec. Outp. 1	

1) Only available with the Petroleum application package.

#### Data structure

Output data of Analog Output

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	Status 1)			

1) Status coding  $\rightarrow \square 83$ 

### Failsafe mode

A failsafe mode can be defined for using the compensation values.

If the status is GOOD or UNCERTAIN, the compensation values transmitted by the automation system are used. If the status is BAD, the failsafe mode is activated for the use of the compensation values.

Parameters are available per compensation value to define the fails afe mode: Expert  $\rightarrow$  Sensor  $\rightarrow$  External compensation

#### Fail safe type parameter

- Fail safe value option: The value defined in the Fail safe value parameter is used.
- Fallback value option: The last valid value is used.
- Off option: The failsafe mode is disabled.

### Fail safe value parameter

Use this parameter to enter the compensation value which is used if the Fail safe value option is selected in the Fail safe type parameter.

### **Binary Output module**

Transmit binary output values from the automation system to the measuring device.

Binary output values are used by the automation system to enable and disable device functions.

Binary output values cyclically transmit discrete output values, including the status, from the automation system to the measuring device. The discrete output values are transmitted in the first byte. The second byte contains standardised status information pertaining to the output value.

Slot	Sub-slot	Bit	Device function	Status (meaning)
		0	Start verification.	A change of status from 0 to 1
		1	Reserved	starts Heartbeat Verification <sup>1)</sup>
		2	Reserved	
210	1	3	Reserved	
210	1	4	Reserved	
		5	Reserved	
		6	Reserved	
		7	Reserved	

# Selection: Device function Binary Output Slot 210

1) Only available with the Heartbeat application package

## Selection: Device function Binary Output Slot 211

Slot	Sub-slot	Bit	Device function	Status (meaning)
		0	Flow override	<ul> <li>0 (disable device function)</li> </ul>
		1	Zero adjust	<ul> <li>1 (enable device function)</li> </ul>
211		2	Relay output	Relay output value:
	1	3	Relay output	■ 0 ■ 1
		4	Relay output	- 1
		5	Reserved	
		6	Reserved	
		7	Reserved	

## Data structure

Binary Output input data

Byte 1	Byte 2	
Binary Output	Status <sup>1) 2)</sup>	

1) Status coding  $\rightarrow \square 83$ 

2) If the status is BAD, the control variable is not adopted.

# **Concentration module**

**1** Only available with the Concentration Measurement application package.

## Assigned device functions

Slot	Input variables
240	Selection of the liquid type

## Data structure

# Concentration output data

Byte 1		
		Î

Control variable

Liquid type	Enum code
Off	0
Sucrose in water	5
Glucose in water	2
Fructose in water	1
Invert sugar in water	6
Corn syrup HFCS42	15
Corn syrup HFCS55	16
Corn syrup HFCS90	17
Original wort	18
Ethanol in water	11
Methanol in water	12
Hydrogen peroxide in water	4
Hydrochloric acid	24
Sulfuric acid	25
Nitric acid	7
Phosphoric acid	8
Sodium hydroxide	10
Potassium hydroxide	9
Ammonium nitrate in water	13
Iron(III) chloride in water	14
% mass / % volume	19
User Profile Coef Set No. 1	21
User Profile Coef Set No. 2	22
User Profile Coef Set No. 3	23

# 9.3.3 Status coding

Status	Coding (hex)	Meaning
BAD - Maintenance alarm	0x24 to 0x27	A measured value is not available because a device error has occurred.
BAD - Process related	0x28 to 0x2B	A measured value is not available because the process conditions are not within the device's technical specification limits.
BAD - Function check	0x3C to 0x03F	A function check is active (e.g. cleaning or calibration)
UNCERTAIN - Initial value	0x4F to 0x4F	A predefined value is output until a correct measured value is available again or corrective measures have been performed that change this status.

Status	Coding (hex)	Meaning
UNCERTAIN - Maintenance demanded	0x68 to 0x6B	Signs of wear and tear have been detected on the measuring device. Short-term maintenance is needed to ensure that the measuring device remains operational. The measured value might be invalid. The use of the measured value depends on the application.
UNCERTAIN - Process related	0x78 to 0x7B	The process conditions are not within the device's technical specification limits. This could have a negative impact on the quality and accuracy of the measured value. The use of the measured value depends on the application.
GOOD - OK	0x80 to 0x83	No error has been diagnosed.
GOOD - Maintenance required	0xA4 to 0xA7	The measured value is valid. The device will require servicing in the near future.
GOOD - Maintenance demanded	0xA8 to 0xAB	The measured value is valid. It is highly advisable to service the device in the near future.
GOOD - Function check	0xBC to 0XBF	The measured value is valid. The measuring device is performing an internal function check. The function check does not have any noticeable effect on the process.

# 9.3.4 Factory setting


The slots are already assigned in the automation system for initial commissioning.

# Assigned slots

Slot	Factory setting
1	Mass flow
2	Density
3	Temperature
4	Mass
20 to 32	-
70 to 71	-
80 to 81	-
160 to 166	-
210 to 211	-
240	-

# 9.4 System redundancy S2

A redundant layout with two automation systems is necessary for processes that are in continuous operation. If one system fails the second system guarantees continued, uninterrupted operation. The measuring device supports S2 system redundancy and can communicate with both automation systems simultaneously.

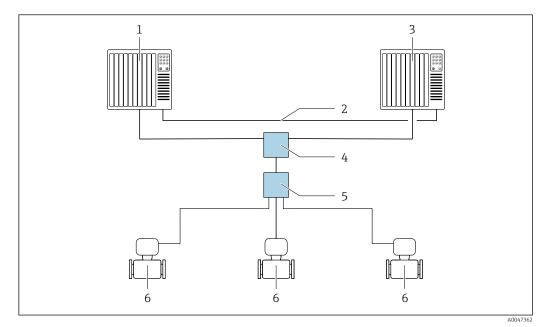

25 Example of the layout of a redundant system (S2): star topology

- 1 Automation system 1
- 2 Synchronization of automation systems
- 3 Automation system 2
- 4 Industrial Ethernet Managed Switch
- 5 APL field switch
- 6 Measuring device

All the devices in the network must support S2 system redundancy.

# 10 Commissioning

# 10.1 Post-installation and post-connection check

Before commissioning the device:

- Make sure that the post-installation and post-connection checks have been performed successfully.
- "Post-installation check" checklist  $\rightarrow \cong 28$
- "Post-connection check" checklist  $\rightarrow \square 42$

# **10.2** Switching on the measuring device

- After a successful post-installation and post-connection check, switch on the device.
  - ← After a successful startup, the local display switches automatically from the startup display to the operational display.


If the local display is blank or if a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting"  $\rightarrow \cong 164$ .

# 10.3 Connecting via FieldCare

- For FieldCare  $\rightarrow \square$  66 connection
- For the FieldCare  $\rightarrow \triangleq 69$  user interface

# 10.4 Setting the operating language


Factory setting: English or ordered local language

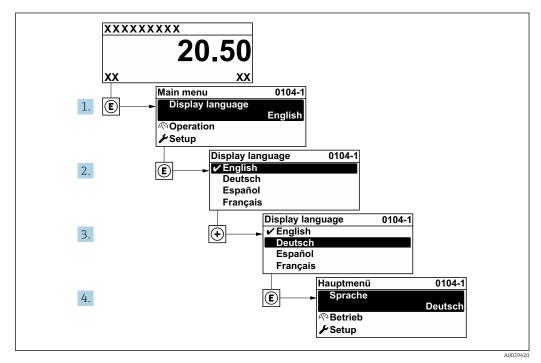

■ 26 Taking the example of the local display

# **10.5** Configuring the measuring device


- The **Setup** menu with its guided wizards contains all the parameters needed for standard operation.
- Navigation to the Setup menu

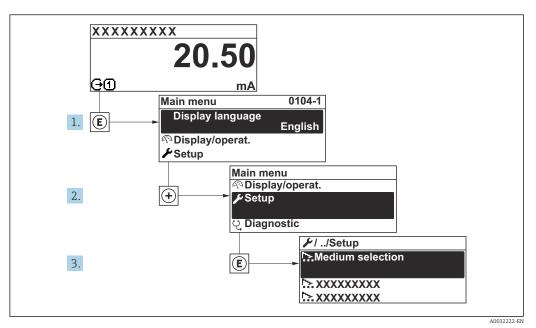

27 Taking the example of the local display

The number of submenus and parameters can vary depending on the device version. Certain submenus and parameters in these submenus are not described in the Operation Instructions. Instead a description is provided in the Special Documentation for the device (→ "Supplementary documentation" section).

🖌 Setup			
PROFINET device r	ame	<del>``</del>	88
► Communication	l	÷	88
► System units		→	90
► Medium selecti	on	<i>→</i>	93
► Analog inputs		÷	₿ 94
► I/O configuration	on	÷	97
► Current input 1	to n		98
► Status input 1 t	o n	÷	99
► Current output	1 to n		100

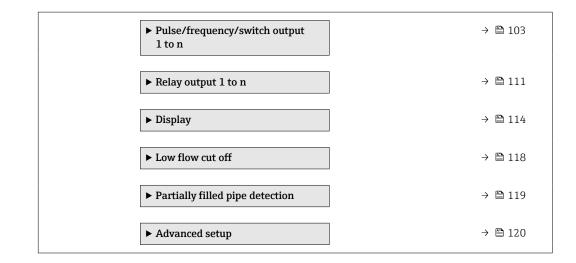

# 10.5.1 Defining the tag name

A measuring point can be quickly identified within a plant on the basis of the tag name. The tag name is equivalent to the device name (name of station) of the PROFINET specification (data length: 255 bytes)

The device name can be changed via DIP switches or the automation system .

The device name currently used is displayed in the **Name of station** parameter.

### Navigation

"Setup" menu  $\rightarrow$  PROFINET device name

### Parameter overview with brief description

Parameter	Description	User interface	Factory setting
PROFINET device name	Name of the measuring point.		EH-PROMASS300 serial number of the device

# 10.5.2 Displaying the communication interface

The **Communication** submenu shows all the current parameter settings for selecting and configuring the communication interface.

### Navigation

"Setup" menu → Communication

► Communication				
► APL port	) → 🖹 89			
► Service interface	) → 🖹 89			
► Network diagnostics	) → 🗎 90			

## "APL port" submenu

## Navigation

"Setup" menu  $\rightarrow$  Communication  $\rightarrow$  APL port

► APL port	
IP address (7263)	→ 🗎 89
Subnet mask (7265)	→ 🖺 89
Default gateway (7264)	→ 🗎 89
MAC address (7262)	→ 🗎 89

# Parameter overview with brief description

Parameter	Description	User entry / User interface	Factory setting
IP address	Enter the IP address of the measuring device.	Character string comprising numbers, letters and special characters (15)	0.0.0.0
Default gateway	Enter IP address for the default gateway of the measuring device.	Character string comprising numbers, letters and special characters (15)	0.0.0.0
Subnet mask	Enter subnet mask of the measuring device.	Character string comprising numbers, letters and special characters (15)	255.255.255.0
MAC address	Shows the MAC address of the measuring device.	Character string comprising numbers, letters and special characters	

## "Service interface" submenu

## Navigation

"Setup" menu  $\rightarrow$  Communication  $\rightarrow$  Service interface

► Service interface	
IP address (7209)	→ 🗎 90
Subnet mask (7211)	→ 🗎 90
Default gateway (7210)	→ 🗎 90
MAC address (7214)	→ 🗎 90


# Parameter overview with brief description

Parameter	Description	User entry / User interface	Factory setting
IP address	Enter the IP address of the measuring device.	4 octet: 0 to 255 (in the particular octet)	192.168.1.212
Subnet mask	Displays the subnet mask.	4 octet: 0 to 255 (in the particular octet)	255.255.255.0
Default gateway	Displays the default gateway.	4 octet: 0 to 255 (in the particular octet)	0.0.0.0
MAC address	Displays the MAC address of the measuring device. MAC = Media Access Control	Unique 12-digit character string comprising letters and numbers, e.g.: 00:07:05:10:01:5F	Each measuring device is given an individual address.

## "Network diagnostics" submenu

### Navigation

"Setup" menu  $\rightarrow$  Communication  $\rightarrow$  Network diagnostics

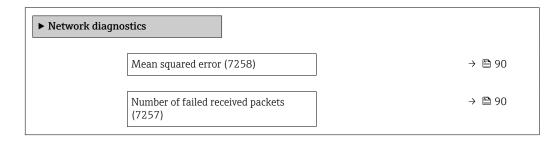

## Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Mean squared error	Provides an indication of the link signal quality.	Signed floating-point number	0 dB
Number of failed received packets	Shows the number of failed received packets.	0 to 65 535	0

# 10.5.3 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

The number of submenus and parameters can vary depending on the device version. Certain submenus and parameters in these submenus are not described in the Operation Instructions. Instead a description is provided in the Special Documentation for the device (→ "Supplementary documentation" section).

### Navigation

"Setup" menu  $\rightarrow$  System units

► System units		
Mass flow unit	]	→ 🗎 91
Mass unit	]	→ 🗎 91

Volume flow unit		→ 🖺 91
Volume unit		→ 🗎 91
Corrected volume flow unit		→ 🖺 91
Corrected volume unit		→ 🗎 91
Density unit		→ 🗎 91
Reference density unit		→ 🗎 92
Density 2 unit		→ 🗎 92
Temperature unit		→ 🖺 92
Pressure unit	]	→ 🗎 92
		/ 🖬 )2

Parameter	Description	Selection	Factory setting
Mass flow unit	Select mass flow unit. <i>Effect</i> The selected unit applies for: • Output • Low flow cut off • Simulation process variable	Unit choose list	Country-specific: • kg/h • lb/min
Mass unit	Select mass unit.	Unit choose list	Country-specific: • kg • lb
Volume flow unit	Select volume flow unit. <i>Effect</i> The selected unit applies for: • Output • Low flow cut off • Simulation process variable	Unit choose list	Depends on country: • l/h • gal/min (us)
Volume unit	Select volume unit.	Unit choose list	Country-specific: • l (DN > 150 (6"): <b>m<sup>3</sup></b> option) • gal (us)
Corrected volume flow unit	Select corrected volume flow unit. Result The selected unit applies for: Corrected volume flow parameter $(\rightarrow \cong 151)$	Unit choose list	Country-specific: • Nl/h • Sft <sup>3</sup> /min
Corrected volume unit	Select corrected volume unit.	Unit choose list	Country-specific: • NI • Sft <sup>3</sup>
Density unit	Select density unit. <i>Effect</i> The selected unit applies for: • Output • Simulation process variable • Density adjustment ( <b>Expert</b> menu)	Unit choose list	Country-specific: • kg/l • lb/ft <sup>3</sup>

Parameter	Description	Selection	Factory setting
Reference density unit	Select reference density unit.	Unit choose list	Country-dependent • kg/Nl • lb/Sft <sup>3</sup>
Density 2 unit	Select second density unit.	Unit choose list	Depends on country: • kg/l • lb/ft <sup>3</sup>
Temperature unit	<ul> <li>Select temperature unit.</li> <li><i>Effect</i></li> <li>The selected unit applies for: <ul> <li>Electronic temperature parameter (6053)</li> <li>Maximum value parameter (6051)</li> <li>Minimum value parameter (6052)</li> <li>Maximum value parameter (6108)</li> <li>Minimum value parameter (6109)</li> <li>Carrier pipe temperature parameter (6027)</li> <li>Maximum value parameter (6029)</li> <li>Minimum value parameter (6030)</li> <li>Reference temperature parameter (1816)</li> <li>Temperature parameter</li> </ul> </li> </ul>	Unit choose list	Country-specific: • °C • °F
Pressure unit	Select process pressure unit. <i>Result</i> The unit is taken from: • Pressure value parameter (→ 🗎 93) • External pressure parameter (→ 🗎 93) • Pressure value	Unit choose list	Country-specific: bar a psi a

# 10.5.4 Selecting and setting the medium

The **Select medium** wizard submenu contains parameters that must be configured in order to select and set the medium.

# Navigation

 $"Setup" menu \rightarrow Medium \ selection$ 

► Medium selection	
Select medium type	] → 🗎 93
Pressure compensation	) → 🗎 93
Pressure value	) → 🗎 93
External pressure	] → 🗎 93

# Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Select medium type	_	Use this function to select the type of medium: "Gas" or "Liquid". Select the "Other" option in exceptional cases in order to enter the properties of the medium manually (e.g. for highly compressive liquids such as sulfuric acid).	<ul><li>Liquid</li><li>Gas</li><li>Other</li></ul>	Liquid
Pressure compensation	-	Select pressure compensation type.	<ul> <li>Off</li> <li>Fixed value</li> <li>External value</li> <li>Current input 1 *</li> <li>Current input 2 *</li> </ul>	Off
Pressure value	In the <b>Pressure compensation</b> parameter, the <b>Fixed value</b> option is selected.	Enter process pressure to be used for pressure correction.	Positive floating- point number	1.01325 bar
External pressure	In the <b>Pressure compensation</b> parameter, the <b>External value</b> option or the <b>Current input</b> <b>1n</b> option is selected.	Shows the external process pressure value.		-

\* Visibility depends on order options or device settings

# 10.5.5 Configuration of the Analog Inputs

The **Analog inputs** submenu guides the user systematically to the individual **Analog input 1 to n** submenu. From here you get to the parameters of the individual analog input.

## Navigation

"Setup" menu → Analog inputs

► Analog inputs	
► Mass flow	→ 🗎 94

# "Analog inputs" submenu

## Navigation

"Setup" menu  $\rightarrow$  Analog inputs  $\rightarrow$  Mass flow

► Mass flow		
	Assign process variable (11074)	→ 🗎 96
	Damping (11073)	→ 🖺 97

Parameter	Description	User interface / User entry	Factory setting
Parent class		0 to 255	70

Parameter	Description	User interface / User entry	Factory setting
Assign process variable	Select a process variable.	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Density</li> <li>Temperature</li> <li>Carrier pipe temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation amplitude 0</li> <li>Oscillation amplitude 1</li> <li>Frequency fluctuation 0</li> <li>Frequency fluctuation 1</li> <li>Oscillation damping 1</li> <li>Oscillation damping 1</li> <li>Oscillation damping fluctuation 1</li> <li>Signal asymmetry</li> <li>Torsion signal asymmetry</li> <li>Exciter current 0</li> <li>Exciter current 1</li> <li>HBSI</li> <li>Current input 1</li> <li>Current input 3</li> <li>Application specific output 0</li> <li>Application specific output 1</li> <li>Inhomogeneous medium index</li> <li>Suspended bubbles index</li> <li>Test point 1</li> <li>Sensor index coil asymmetry</li> <li>Raference density</li> <li>Reference density</li> <li>Mavalue flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Carrier corrected volume flow</li> <li>Water cut*</li> <li>Oil density</li> <li>Water corrected volume flow</li> <li>Concentration</li> <li>Dynamic viscosity</li> <li>Kinematic viscosity</li> <li>Kinematic viscosity</li> <li>Femp. compensated kinematic viscosity</li> </ul>	Mass flow

Parameter	Description	User interface / User entry	Factory setting
Damping	Enter time constant for input damping (PT1 element). Damping reduces the effect of fluctuations in the measured value on the output signal.	Positive floating-point number	1.0 s

# 10.5.6 Displaying the I/O configuration

The **I/O configuration** submenu guides the user systematically through all the parameters in which the configuration of the I/O modules is displayed.

# Navigation

"Setup" menu  $\rightarrow$  I/O configuration

► I/O configuration	
I/O module 1 to n terminal numbers	→ 🗎 97
I/O module 1 to n information	→ 🗎 97
I/O module 1 to n type	→ 🗎 97
Apply I/O configuration	→ 🗎 97
I/O alteration code	→ 🗎 97

# Parameter overview with brief description

Parameter	Description	User interface / Selection / User entry	Factory setting
I/O module 1 to n terminal numbers	Shows the terminal numbers used by the I/O module.	<ul> <li>Not used</li> <li>26-27 (I/O 1)</li> <li>24-25 (I/O 2)</li> <li>22-23 (I/O 3)</li> </ul>	-
I/O module 1 to n information	Shows information of the plugged I/O module.	<ul> <li>Not plugged</li> <li>Invalid</li> <li>Not configurable</li> <li>Configurable</li> <li>PROFINET</li> </ul>	-
I/O module 1 to n type	Shows the I/O module type.	<ul> <li>Off</li> <li>Current output *</li> <li>Current input *</li> <li>Status input *</li> <li>Pulse/frequency/switch output *</li> <li>Double pulse output *</li> <li>Relay output *</li> </ul>	Off
Apply I/O configuration	Apply parameterization of the freely configurable I/O module.	<ul><li>No</li><li>Yes</li></ul>	No
I/O alteration code	Enter the code in order to change the I/O configuration.	Positive integer	0

\* Visibility depends on order options or device settings

# 10.5.7 Configuring the current input

The **"Current input" wizard** guides the user systematically through all the parameters that have to be set for configuring the current input.

## Navigation

"Setup" menu → Current input

► Current input 1 to n	
Terminal number	] → 🗎 98
Signal mode	] → 🗎 98
0/4 mA value	→ 🗎 98
20 mA value	→ 🗎 98
Current span	→ 🗎 98
Failure mode	] → 🗎 99
Failure value	] → 🗎 99

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the current input module.	<ul> <li>Not used</li> <li>24-25 (I/O 2)</li> <li>22-23 (I/O 3)</li> </ul>	-
Signal mode	The measuring device is <b>not</b> approved for use in the hazardous area with type of protection Ex-i.	Select the signal mode for the current input.	<ul><li>Passive</li><li>Active*</li></ul>	Active
0/4 mA value	-	Enter 4 mA value.	Signed floating-point number	0
20 mA value	-	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter
Current span	-	Select current range for process value output and upper/lower level for alarm signal.	<ul> <li>420 mA (4 20.5 mA)</li> <li>420 mA NE (3.820.5 mA)</li> <li>420 mA US (3.920.8 mA)</li> <li>020 mA (0 20.5 mA)</li> </ul>	Country-specific: • 420 mA NE (3.820.5 mA) • 420 mA US (3.920.8 mA)

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Failure mode	-	Define input behavior in alarm condition.	<ul><li>Alarm</li><li>Last valid value</li><li>Defined value</li></ul>	Alarm
Failure value	In the <b>Failure mode</b> parameter, the <b>Defined value</b> option is selected.	Enter value to be used by the device if input value from external device is missing.	Signed floating-point number	0

# 10.5.8 Configuring the status input

The **Status input** submenu guides the user systematically through all the parameters that have to be set for configuring the status input.

## Navigation

"Setup" menu  $\rightarrow$  Status input 1 to n

► Status input 1 to n		
Assign status input		99
Terminal number		₿ 99
Active level		100
Terminal number		99
Response time status input	) → @	100
Terminal number	→ @	99

Parameter	Description	Selection / User interface / User entry	Factory setting
Assign status input	Select function for the status input.	<ul> <li>Off</li> <li>Reset totalizer 1</li> <li>Reset totalizer 2</li> <li>Reset totalizer 3</li> <li>Reset all totalizers</li> <li>Flow override</li> <li>Zero adjustment</li> <li>Reset weighted averages *</li> <li>Reset weighted averages + totalizer 3 *</li> </ul>	Off
Terminal number	Shows the terminal numbers used by the status input module.	<ul> <li>Not used</li> <li>24-25 (I/O 2)</li> <li>22-23 (I/O 3)</li> </ul>	-

Parameter	Description	Selection / User interface / User entry	Factory setting
Active level	Define input signal level at which the assigned function is triggered.	<ul><li>High</li><li>Low</li></ul>	High
Response time status input	Define the minimum amount of time the input signal level must be present before the selected function is triggered.	5 to 200 ms	50 ms

# 10.5.9 Configuring the current output

The **Current output** wizard guides you systematically through all the parameters that have to be set for configuring the current output.

## Navigation

"Setup" menu → Current output

► Current output 1 to n	
Terminal number	) → 🗎 100
Signal mode	] → 🗎 100
Process variable current output	) → 🗎 101
Current range output	) → 🗎 102
Lower range value output	) → 🗎 102
Upper range value output	) → 🗎 102
Fixed current	) → 🗎 102
Damping current output	) → 🗎 102
Failure behavior current output	) → 🖺 102
Failure current	) → 🗎 102

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the current output module.	<ul> <li>Not used</li> <li>26-27 (I/O 1)</li> <li>24-25 (I/O 2)</li> <li>22-23 (I/O 3)</li> </ul>	-
Signal mode	-	Select the signal mode for the current output.	<ul> <li>Active *</li> <li>Passive *</li> </ul>	Active

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Process variable current output		Select the process variable for the current output.	<ul> <li>Off*</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow*</li> <li>Density</li> <li>Reference density*</li> <li>Temperature</li> <li>Target mass flow*</li> <li>Carrier mass flow*</li> <li>Carrier volume flow*</li> <li>Carrier volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Concentration application specific output 0*</li> <li>Application specific output 1*</li> <li>Inhomogeneous medium index</li> <li>Suspended bubbles index*</li> <li>Raw value mass flow</li> <li>Exciter current 0</li> <li>Oscillation damping 0</li> <li>Oscillation frequency 0</li> <li>Frequency fluctuation 0*</li> <li>Signal asymmetry</li> <li>Torsion signal asymmetry</li> <li>Torsion signal asymmetry</li> <li>Carrier pipe temperature</li> <li>Frequency fluctuation 0</li> <li>Oscillation amplitude 0*</li> <li>Oscillation aspecific of asymmetry</li> <li>Test point 0</li> <li>Test point 1</li> </ul>	Mass flow

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Current range output	-	Select current range for process value output and upper/lower level for alarm signal.	<ul> <li>420 mA NE (3.820.5 mA)</li> <li>420 mA US (3.920.8 mA)</li> <li>420 mA (4 20.5 mA)</li> <li>020 mA (0 20.5 mA)</li> <li>Fixed value</li> </ul>	Depends on country: • 420 mA NE (3.820.5 mA) • 420 mA US (3.920.8 mA)
Lower range value output	<ul> <li>One of the following options is selected in the Current span parameter (→      102):</li> <li>420 mA NE (3.820.5 mA)</li> <li>420 mA US (3.920.8 mA)</li> <li>420 mA (4 20.5 mA)</li> <li>020 mA (0 20.5 mA)</li> </ul>	Enter lower range value for the measured value range.	Signed floating-point number	Depends on country: • 0 kg/h • 0 lb/min
Upper range value output	<ul> <li>One of the following options is selected in the Current span parameter (→</li></ul>	Enter upper range value for the measured value range.	Signed floating-point number	Depends on country and nominal diameter
Fixed current	The <b>Fixed current</b> option is selected in the <b>Current span</b> parameter ( $\rightarrow \cong$ 102).	Defines the fixed output current.	0 to 22.5 mA	22.5 mA
Damping current output	<ul> <li>A process variable is selected in the Assign current output parameter (→  <sup>(⇒)</sup> 101) and one of the following options is selected in the Current span parameter (→  <sup>(⇒)</sup> 102):</li> <li>420 mA NE (3.820.5 mA)</li> <li>420 mA US (3.920.8 mA)</li> <li>420 mA (4 20.5 mA)</li> <li>020 mA (0 20.5 mA)</li> </ul>	Set reaction time for output signal to fluctuations in the measured value.	0.0 to 999.9 s	1.0 s
Failure behavior current output	<ul> <li>A process variable is selected in the Assign current output parameter (→  <sup>B</sup> 101) and one of the following options is selected in the Current span parameter (→  <sup>B</sup> 102):</li> <li>420 mA NE (3.820.5 mA)</li> <li>420 mA US (3.920.8 mA)</li> <li>420 mA (4 20.5 mA)</li> <li>020 mA (0 20.5 mA)</li> </ul>	Define output behavior in alarm condition.	<ul> <li>Min.</li> <li>Max.</li> <li>Last valid value</li> <li>Actual value</li> <li>Fixed value</li> </ul>	Max.
Failure current	The <b>Defined value</b> option is selected in the <b>Failure mode</b> parameter.	Enter current output value in alarm condition.	0 to 22.5 mA	22.5 mA

# 10.5.10 Configuring the pulse/frequency/switch output

The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Pulse/frequency/switch output

<ul> <li>Pulse/frequency/switch output 1 to n</li> </ul>	
Operating mode	→ 🗎 103

### Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Operating mode	Define the output as a pulse, frequency or switch output.	<ul><li>Pulse</li><li>Frequency</li><li>Switch</li></ul>	Pulse

## Configuring the pulse output

## Navigation

"Setup" menu  $\rightarrow$  Pulse/frequency/switch output

Pulse/frequency/switch output 1 to n	
Operating mode	→ 🗎 104
Terminal number	→ 🗎 104
Signal mode	) → 🗎 104
Assign pulse output	→ 🗎 104
Pulse scaling	) → 🗎 104
Pulse width	→ 🗎 104
Failure mode	→ 🗎 105
Invert output signal	) → 🗎 105

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	<ul><li>Pulse</li><li>Frequency</li><li>Switch</li></ul>	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	<ul> <li>Not used</li> <li>24-25 (I/O 2)</li> <li>22-23 (I/O 3)</li> </ul>	-
Signal mode	-	Select the signal mode for the PFS output.	<ul> <li>Passive</li> <li>Active<sup>*</sup></li> <li>Passive NE</li> </ul>	Passive
Assign pulse output	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter.	Select process variable for pulse output.	<ul> <li>Off</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow*</li> <li>Target mass flow*</li> <li>Carrier mass flow*</li> <li>Carrier volume flow*</li> <li>Carrier volume flow*</li> <li>Carrier corrected volume flow*</li> <li>GSV flow*</li> <li>GSV flow alternative*</li> <li>NSV flow alternative*</li> <li>S&amp;W volume flow*</li> <li>Oil mass flow*</li> <li>Oil volume flow*</li> <li>Oil corrected volume flow*</li> <li>Oil corrected volume flow*</li> <li>Water corrected volume flow*</li> <li>Water corrected volume flow*</li> <li>Oil corrected volume flow*</li> <li>Water corrected volume flow*</li> <li>Water corrected volume flow*</li> <li>Water corrected volume flow*</li> <li>Water corrected volume flow*</li> </ul>	Off
Pulse scaling	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter ( $\rightarrow \bowtie$ 103) and a process variable is selected in the <b>Assign pulse output</b> parameter ( $\rightarrow \limsup$ 104).	Enter quantity for measured value at which a pulse is output.	Positive floating point number	Depends on country and nominal diameter
Pulse width	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter ( $\rightarrow \boxminus 103$ ) and a process variable is selected in the <b>Assign pulse output</b> parameter ( $\rightarrow \boxminus 104$ ).	Define time width of the output pulse.	0.05 to 2 000 ms	100 ms

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Failure mode	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter ( $\rightarrow \boxdot 103$ ) and a process variable is selected in the <b>Assign pulse output</b> parameter ( $\rightarrow \boxdot 104$ ).	Define output behavior in alarm condition.	<ul><li>Actual value</li><li>No pulses</li></ul>	No pulses
Invert output signal	-	Invert the output signal.	<ul><li>No</li><li>Yes</li></ul>	No

# Configuring the frequency output

# Navigation

"Setup" menu  $\rightarrow$  Pulse/frequency/switch output

<ul> <li>Pulse/frequency/switch output 1 to n</li> </ul>	
Operating mode	] → 🖺 106
Terminal number	) → 🗎 106
Signal mode	] → 🗎 106
Assign frequency output	) → 🗎 107
Minimum frequency value	) → 🗎 107
Maximum frequency value	) → 🗎 108
Measuring value at minimum frequency	→ 🗎 108
Measuring value at maximum frequency	) → 🗎 108
Failure mode	] → 🗎 108
Failure frequency	] → 🗎 108
Invert output signal	] → 🗎 108

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	<ul><li>Pulse</li><li>Frequency</li><li>Switch</li></ul>	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	<ul> <li>Not used</li> <li>24-25 (I/O 2)</li> <li>22-23 (I/O 3)</li> </ul>	-
Signal mode	-	Select the signal mode for the PFS output.	<ul> <li>Passive</li> <li>Active *</li> <li>Passive NE</li> </ul>	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Assign frequency output	In the <b>Operating mode</b> parameter (→ 🗎 103), the <b>Frequency</b> option is selected.	Select process variable for frequency output.	<ul> <li>Off</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow*</li> <li>Density</li> <li>Reference density*</li> <li>Time period signal frequency (TPS)*</li> <li>Temperature</li> <li>Pressure</li> <li>Concentration*</li> <li>Target mass flow*</li> <li>Carrier mass flow*</li> <li>Carrier volume flow*</li> <li>Carrier volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Application specific output 0*</li> <li>Application specific output 1*</li> <li>Inhomogeneous medium index</li> <li>Suspended bubbles index*</li> <li>HBSI</li> <li>Raw value mass flow</li> <li>Exciter current 0</li> <li>Oscillation damping 0</li> <li>Oscillation frequency 0</li> <li>Frequency fluctuation 0*</li> <li>Oscillation amplitude 0*</li> <li>Signal asymmetry</li> <li>Carrier pipe temperature</li> <li>Electronics temperature</li> <li>Sensor index coil asymmetry</li> <li>Test point 0</li> <li>Test point 0</li> </ul>	Off
Minimum frequency value	The <b>Frequency</b> option is selected in the <b>Operating</b> <b>mode</b> parameter ( $\rightarrow \cong 103$ ) and a process variable is selected in the <b>Assign</b> <b>frequency output</b> parameter ( $\rightarrow \cong 107$ ).	Enter minimum frequency.	0.0 to 10000.0 Hz	0.0 Hz

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Maximum frequency value	The <b>Frequency</b> option is selected in the <b>Operating</b> <b>mode</b> parameter ( $\rightarrow \cong 103$ ) and a process variable is selected in the <b>Assign</b> <b>frequency output</b> parameter ( $\rightarrow \cong 107$ ).	Enter maximum frequency.	0.0 to 10 000.0 Hz	10 000.0 Hz
Measuring value at minimum frequency	The <b>Frequency</b> option is selected in the <b>Operating</b> <b>mode</b> parameter ( $\rightarrow \square 103$ ) and a process variable is selected in the <b>Assign</b> <b>frequency output</b> parameter ( $\rightarrow \square 107$ ).	Enter measured value for minimum frequency.	Signed floating-point number	Depends on country and nominal diameter
Measuring value at maximum frequency	The <b>Frequency</b> option is selected in the <b>Operating</b> <b>mode</b> parameter ( $\rightarrow \triangleq 103$ ) and a process variable is selected in the <b>Assign</b> <b>frequency output</b> parameter ( $\rightarrow \triangleq 107$ ).	Enter measured value for maximum frequency.	Signed floating-point number	Depends on country and nominal diameter
Failure mode	The <b>Frequency</b> option is selected in the <b>Operating</b> <b>mode</b> parameter ( $\rightarrow \cong 103$ ) and a process variable is selected in the <b>Assign</b> <b>frequency output</b> parameter ( $\rightarrow \cong 107$ ).	Define output behavior in alarm condition.	<ul> <li>Actual value</li> <li>Defined value</li> <li>0 Hz</li> </ul>	0 Hz
Failure frequency	In the <b>Operating mode</b> parameter ( $\rightarrow \square$ 103), the <b>Frequency</b> option is selected, in the <b>Assign frequency</b> <b>output</b> parameter ( $\rightarrow \square$ 107) a process variable is selected, and in the <b>Failure mode</b> parameter, the <b>Defined value</b> option is selected.	Enter frequency output value in alarm condition.	0.0 to 12 500.0 Hz	0.0 Hz
Invert output signal	_	Invert the output signal.	<ul><li>No</li><li>Yes</li></ul>	No

### Configuring the switch output

#### Navigation

"Setup" menu  $\rightarrow$  Pulse/frequency/switch output

<ul> <li>Pulse/frequency/switch output</li> <li>1 to n</li> </ul>	
Operating mode	) → 🗎 109
Terminal number	) → 🗎 109
Signal mode	) → 🗎 109
Switch output function	) → 🗎 110
Assign diagnostic behavior	) → 🗎 110
Assign limit	→ 🗎 110
Assign flow direction check	→ 🗎 110
Assign status	→ 🗎 110
Switch-on value	→ 🗎 111
Switch-off value	→ 🗎 111
Switch-on delay	) → 🗎 111
Switch-off delay	] → 🗎 111
Failure mode	) → 🗎 111
Invert output signal	) → 🗎 111

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	<ul><li>Pulse</li><li>Frequency</li><li>Switch</li></ul>	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	<ul> <li>Not used</li> <li>24-25 (I/O 2)</li> <li>22-23 (I/O 3)</li> </ul>	-
Signal mode	-	Select the signal mode for the PFS output.	<ul> <li>Passive</li> <li>Active *</li> <li>Passive NE</li> </ul>	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch output function	The <b>Switch</b> option is selected in the <b>Operating mode</b> parameter.	Select function for switch output.	<ul> <li>Off</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit</li> <li>Flow direction check</li> <li>Status</li> </ul>	Off
Assign diagnostic behavior	<ul> <li>In the Operating mode parameter, the Switch option is selected.</li> <li>In the Switch output function parameter, the Diagnostic behavior option is selected.</li> </ul>	Select diagnostic behavior for switch output.	<ul><li>Alarm</li><li>Alarm or warning</li><li>Warning</li></ul>	Alarm
Assign limit	<ul> <li>In the Operating mode parameter, the Switch option is selected.</li> <li>In the Switch output function parameter, the Limit option is selected.</li> </ul>	Select process variable for limit function.	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow*</li> <li>Target mass flow*</li> <li>Carrier mass flow*</li> <li>Target volume flow*</li> <li>Carrier volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Concentration*</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> <li>Oscillation damping</li> <li>Pressure</li> <li>Application specific output 0*</li> <li>Application specific output 1*</li> <li>Inhomogeneous medium index</li> <li>Suspended bubbles index*</li> </ul>	Volume flow
Assign flow direction check	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Flow direction check option is selected in the Switch output function parameter.</li> </ul>	Select process variable for flow direction monitoring.	<ul> <li>Off</li> <li>Volume flow</li> <li>Mass flow</li> <li>Corrected volume flow *</li> </ul>	Mass flow
Assign status	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Status option is selected in the Switch output function parameter.</li> </ul>	Select device status for switch output.	<ul> <li>Partially filled pipe detection</li> <li>Low flow cut off</li> <li>Binary output *</li> <li>Binary output *</li> <li>Binary output *</li> </ul>	Partially filled pipe detection

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch-on value	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Limit option is selected in the Switch output function parameter.</li> </ul>	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
Switch-off value	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Limit option is selected in the Switch output function parameter.</li> </ul>	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
Switch-on delay	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Limit option is selected in the Switch output function parameter.</li> </ul>	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s
Switch-off delay	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Limit option is selected in the Switch output function parameter.</li> </ul>	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Failure mode	-	Define output behavior in alarm condition.	<ul><li>Actual status</li><li>Open</li><li>Closed</li></ul>	Open
Invert output signal	-	Invert the output signal.	<ul><li>No</li><li>Yes</li></ul>	No

## **10.5.11** Configuring the relay output

The **Relay output** wizard guides the user systematically through all the parameters that have to be set for configuring the relay output.

#### Navigation

"Setup" menu  $\rightarrow$  Relay output 1 to n

► Relay output 1 to n	
Terminal number	→ 🗎 112
Relay output function	→ 🗎 112
Assign flow direction check	→ 🗎 112
Assign limit	) → 🗎 113
Assign diagnostic behavior	→ 🗎 113
Assign status	→ 🗎 113

Switch-off value	) → 🗎 113
Switch-off delay	) → 🗎 113
Switch-on value	→ 🗎 113
Switch-on delay	→ 🗎 113
Failure mode	→ 🗎 113

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the relay output module.	<ul> <li>Not used</li> <li>24-25 (I/O 2)</li> <li>22-23 (I/O 3)</li> </ul>	_
Relay output function	-	Select the function for the relay output.	<ul> <li>Closed</li> <li>Open</li> <li>Diagnostic behavior</li> <li>Limit</li> <li>Flow direction check</li> <li>Status</li> </ul>	Closed
Assign flow direction check	The <b>Flow direction check</b> option is selected in the <b>Relay</b> <b>output function</b> parameter.	Select process variable for flow direction monitoring.	<ul> <li>Off</li> <li>Volume flow</li> <li>Mass flow</li> <li>Corrected volume flow *</li> </ul>	Mass flow

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Assign limit	The Limit option is selected in the Relay output function parameter.	Select process variable for limit function.	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow*</li> <li>Target mass flow *</li> <li>Carrier mass flow *</li> <li>Carrier volume flow*</li> <li>Carrier volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Concentration*</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> <li>Oscillation damping</li> <li>Pressure</li> <li>Application specific output 0*</li> <li>Application specific output 1*</li> <li>Inhomogeneous medium index</li> <li>Suspended bubbles index*</li> </ul>	Mass flow
Assign diagnostic behavior	In the <b>Relay output function</b> parameter, the <b>Diagnostic</b> <b>behavior</b> option is selected.	Select diagnostic behavior for switch output.	<ul><li> Alarm</li><li> Alarm or warning</li><li> Warning</li></ul>	Alarm
Assign status	In the <b>Relay output function</b> parameter, the <b>Digital Output</b> option is selected.	Select device status for switch output.	<ul> <li>Partially filled pipe detection</li> <li>Low flow cut off</li> <li>Binary output *</li> <li>Binary output *</li> <li>Binary output *</li> </ul>	Partially filled pipe detection
Switch-off value	In the <b>Relay output function</b> parameter, the <b>Limit</b> option is selected.	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
Switch-off delay	In the <b>Relay output function</b> parameter, the <b>Limit</b> option is selected.	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Switch-on value	The <b>Limit</b> option is selected in the <b>Relay output function</b> parameter.	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
Switch-on delay	In the <b>Relay output function</b> parameter, the <b>Limit</b> option is selected.	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s
Failure mode	-	Define output behavior in alarm condition.	<ul><li>Actual status</li><li>Open</li><li>Closed</li></ul>	Open

## 10.5.12 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can configured for configuring the local display.

## Navigation

"Setup" menu → Display

► Display	
Format display	) → 🗎 115
Value 1 display	] → 🗎 116
0% bargraph value 1	] → 🗎 116
100% bargraph value 1	] → 🗎 116
Value 2 display	→ 🗎 117
Value 3 display	→ 🗎 117
0% bargraph value 3	→ 🗎 117
100% bargraph value 3	→ 🗎 117
Value 4 display	→ 🗎 117
Value 5 display	→ 🗎 117
Value 6 display	] → 🗎 117
Value 7 display	] → 🗎 117
Value 8 display	→ 🗎 117

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul> <li>1 value, max. size</li> <li>1 bargraph + 1 value</li> <li>2 values</li> <li>1 value large + 2 values</li> <li>4 values</li> </ul>	1 value, max. size

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow*</li> <li>Density</li> <li>Reference density*</li> <li>Temperature</li> <li>Pressure</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> <li>Concentration*</li> <li>Target mass flow*</li> <li>Carrier mass flow*</li> <li>Carrier volume flow*</li> <li>Carrier volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Carrier corrected volume flow</li> <li>Application specific output 0*</li> <li>Application specific output 1*</li> <li>Inhomogeneous medium index</li> <li>Suspended bubbles index*</li> <li>HBSI*</li> <li>Raw value mass flow</li> <li>Exciter current 0</li> <li>Oscillation damping 0</li> <li>Oscillation frequency 0</li> <li>Frequency fluctuation 0*</li> <li>Oscillation amplitude 0*</li> <li>Signal asymmetry</li> <li>Torsion signal asymmetry*</li> <li>Eestori ndex coil asymmetry</li> <li>Test point 0</li> <li>Test point 1</li> <li>Current output 2*</li> <li>Current output 2</li> <li>Current output 3</li> </ul>	Mass flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the <b>Value 1 display</b> parameter $(\rightarrow \cong 116)$	None
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \cong 116)$	None
0% bargraph value 3	A selection was made in the <b>Value 3 display</b> parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
100% bargraph value 3	A selection was made in the <b>Value 3 display</b> parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \cong 116)$	None
Value 5 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \cong 116)$	None
Value 6 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \cong 116)$	None
Value 7 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \cong 116)$	None
Value 8 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the <b>Value 1 display</b> parameter $(\rightarrow \cong 116)$	None

## 10.5.13 Configuring the low flow cut off

The **Low flow cut off** wizard systematically guides the user through all the parameters that must be set to configure low flow cut off.

### Navigation

"Setup" menu  $\rightarrow$  Low flow cut off

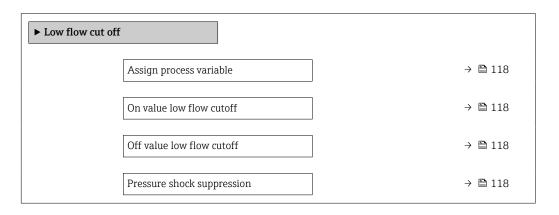

#### Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	-	Select process variable for low flow cut off.	<ul> <li>Off</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow *</li> </ul>	Mass flow
On value low flow cutoff	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \bigoplus 118$ ).	Enter on value for low flow cut off.	Positive floating- point number	Depends on country and nominal diameter
Off value low flow cutoff	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \cong 118$ ).	Enter off value for low flow cut off.	0 to 100.0 %	50 %
Pressure shock suppression	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \bigoplus 118$ ).	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	0 s


\* Visibility depends on order options or device settings

## 10.5.14 Configuring partially filled pipe detection

The **Partial filled pipe detection** wizard guides you systematically through all parameters that have to be set for configuring the monitoring of the pipe filling.

#### Navigation

"Setup" menu  $\rightarrow$  Partially filled pipe detection

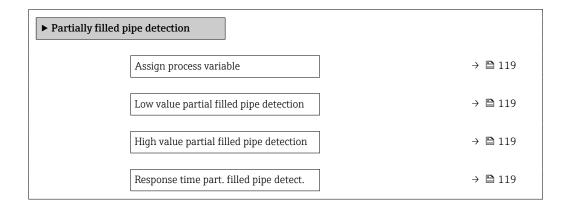


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	-	Select process variable for partially filled pipe detection.	<ul><li>Off</li><li>Density</li><li>Calculated reference density</li></ul>	Off
Low value partial filled pipe detection	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \square$ 119).	Enter lower limit value for deactivating partialy filled pipe detection.	Signed floating-point number	Depends on country: • 200 kg/m <sup>3</sup> • 12.5 lb/ft <sup>3</sup>
High value partial filled pipe detection	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \square$ 119).	Enter upper limit value for deactivating partialy filled pipe detection.	Signed floating-point number	Depends on country: • 6 000 kg/m <sup>3</sup> • 374.6 lb/ft <sup>3</sup>
Response time part. filled pipe detect.	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \square$ 119).	Use this function to enter the minimum time (hold time) the signal must be present before diagnostic message S962 "Pipe only partly filled" is triggered in the event of a partially filled or empty measuring pipe.	0 to 100 s	1 s

# 10.6 Advanced settings

The **Advanced setup** submenu with its submenus contains parameters for specific settings.

Navigation to the "Advanced setup" submenu

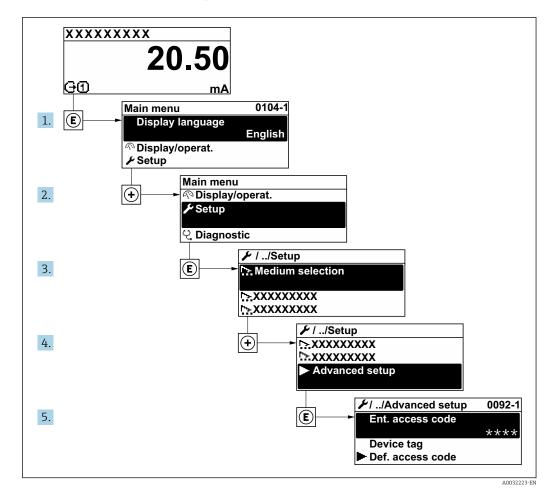


The number of submenus can vary depending on the device version. Some submenus are not dealt with in the Operating Instructions. These submenus and the parameters they contain are explained in the Special Documentation for the device.

## Navigation

"Setup" menu → Advanced setup

► Advanced setup				
Enter access code (0003)	→ 🗎 121			
► Calculated values	→ 🗎 121			
► Sensor adjustment	→ 🗎 122			
► Totalizer 1 to n	→ 🗎 129			
► Display	→ 🗎 131			

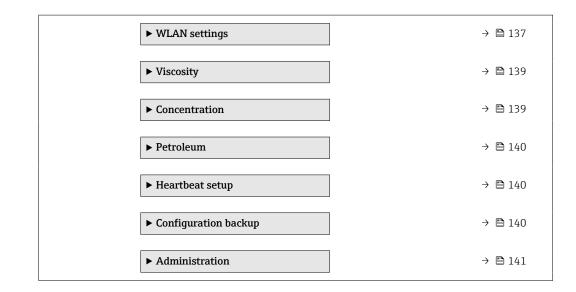

## 10.6.1 Using the parameter to enter the access code

### Navigation

"Setup" menu → Advanced setup

### Parameter overview with brief description

Parameter	Description	User entry
Enter access code	1 1	Max. 16-digit character string comprising numbers, letters and special characters

## **10.6.2** Calculated process variables

The **Calculated values** submenu contains parameters for calculating the corrected volume flow.

### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Calculated values

► Calculated value	25	
	► Corrected volume flow calculation	→ 🗎 121

### "Corrected volume flow calculation" submenu

### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Calculated values  $\rightarrow$  Corrected volume flow calculation

► Corrected volume flow calculation	
Select reference density (1812)	→ 🗎 122
External reference density (6198)	→ 🗎 122

Fixed reference density (1814)	→ 🗎 122
Reference temperature (1816)	→ 🗎 122
Linear expansion coefficient (1817)	→ 🗎 122
Square expansion coefficient (1818)	→ 🗎 122

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Select reference density	-	Select reference density for calculating the corrected volume flow.	<ul> <li>Fixed reference density</li> <li>Calculated reference density</li> <li>External reference density</li> <li>Current input 1 *</li> <li>Current input 2 *</li> </ul>	Calculated reference density
External reference density	-	Shows external reference density.	Floating point number with sign	-
Fixed reference density	The <b>Fixed reference density</b> option is selected in the <b>Corrected volume flow</b> <b>calculation</b> parameter parameter.	Enter fixed value for reference density.	Positive floating- point number	1 kg/Nl
Reference temperature	The <b>Calculated reference</b> <b>density</b> option is selected in the <b>Corrected volume flow</b> <b>calculation</b> parameter parameter.	Enter reference temperature for calculating the reference density.	-273.15 to 99 999 °C	Country-specific: • +20 °C • +68 °F
Linear expansion coefficient	The <b>Calculated reference</b> <b>density</b> option is selected in the <b>Corrected volume flow</b> <b>calculation</b> parameter parameter.	Enter linear, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0 1/K
Square expansion coefficient	The <b>Calculated reference</b> <b>density</b> option is selected in the <b>Corrected volume flow</b> <b>calculation</b> parameter parameter.	For media with a non-linear expansion pattern: enter the quadratic, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0 1/K <sup>2</sup>

\* Visibility depends on order options or device settings

## 10.6.3 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Sensor adjustment

► Sensor adjustment				
Installation direction	] → 🗎 123			
► Zero verification	] → 🗎 126			
► Zero adjustment	] → 🗎 127			

#### Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Installation direction	Select sign of flow direction.	<ul><li>Forward flow</li><li>Reverse flow</li></ul>	Forward flow

#### Density adjustment

With density adjustment, a high level of accuracy is achieved only at the point of adjustment and at the relevant density and temperature. However, the accuracy of a density adjustment is only ever as good as the quality of the reference measuring data provided. Therefore it is not a substitute for special density calibration.

#### Performing density adjustment

Note the following before performing the adjustment:

- A density adjustment only makes sense if there is little variation in the operating conditions and the density adjustment is performed under the operating conditions.
- The density adjustment scales the internally computed density value with a userspecific slope and offset.
- A 1-point or 2-point density adjustment can be performed.
- For a 2-point density adjustment, there must be a difference of at least 0.2 kg/l between the two target density values.
- The reference media must be gas-free or pressurized so that any gas they contain is compressed.
- The reference density measurements must be performed at the same medium temperature that prevails in the process, as otherwise the density adjustment will not be accurate.
- The correction resulting from the density adjustment can be deleted with the **Restore original** option.

#### "1 point adjustment" option

- 1. In the **Density adjustment mode** parameter, select the **1 point adjustment** option and confirm.
- 2. In the **Density setpoint 1** parameter, enter the density value and confirm.
  - In the Execute density adjustment parameter the following options are now available:
    - Ok

Measure density 1 option Restore original

3. Select the **Measure density 1** option and confirm.

- 4. If 100% was reached in the **Progress** parameter on the display and the **Ok** option is displayed in the **Execute density adjustment** parameter, then confirm.
  - In the Execute density adjustment parameter the following options are now available:
    - Ok Calculate
    - Cancel
- 5. Select the **Calculate** option and confirm.

If the adjustment was completed successfully, the **Density adjustment factor** parameter and the **Density adjustment offset** parameter and the values calculated for them are shown on the display.

### "2 point adjustment" option

- 1. In the **Density adjustment mode** parameter, select the **2 point adjustment** option and confirm.
- 2. In the **Density setpoint 1** parameter, enter the density value and confirm.

3. In the **Density setpoint 2** parameter, enter the density value and confirm.

- In the Execute density adjustment parameter the following options are now available:
   Ok
  - Measure density 1 Restore original
- 4. Select the **Measure density 1** option and confirm.
  - └ In the Execute density adjustment parameter the following options are now available:

Ok Measure density 2 Restore original

- 5. Select the **Measure density 2** option and confirm.
  - In the Execute density adjustment parameter the following options are now available:
    - Ok Calculate Cancel

6. Select the **Calculate** option and confirm.

If the **Density adjust failure** option is displayed in the **Execute density adjustment** parameter, call up the options and select the **Cancel** option. The density adjustment is canceled and can be repeated.

If the adjustment was completed successfully, the **Density adjustment factor** parameter and the **Density adjustment offset** parameter and the values calculated for them are shown on the display.

#### Navigation

"Expert" menu  $\rightarrow$  Sensor  $\rightarrow$  Sensor adjustment  $\rightarrow$  Density adjustment

► Density adjustment	
Density adjustment mode	→ 🗎 125
Density setpoint 1	) → 🗎 125

Density setpoint 2	→ 🗎 125
Execute density adjustment	→ 🗎 125
Progress	→ 🗎 125
Density adjustment factor	→ 🗎 125
Density adjustment offset	→ 🗎 125

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Density adjustment mode	-	Select the method for field density adjustment to correct the factory setting.	<ul><li> 1 point adjustment</li><li> 2 point adjustment</li></ul>	1 point adjustment
Density setpoint 1	-	Enter density for the first reference media.	The entry depends on the unit selected in the <b>Density unit</b> parameter (0555).	1 kg/l
Density setpoint 2	In the <b>Density adjustment</b> <b>mode</b> parameter, the <b>2 point</b> <b>adjustment</b> option is selected.	Enter density for the second reference media.	The entry depends on the unit selected in the <b>Density unit</b> parameter (0555).	1 kg/l
Execute density adjustment	_	Select the next step to be performed for the density adjustment.	<ul> <li>Cancel*</li> <li>Busy*</li> <li>Ok*</li> <li>Density adjust failure*</li> <li>Measure density 1*</li> <li>Measure density 2*</li> <li>Calculate*</li> <li>Restore original*</li> </ul>	Ok
Progress	-	Shows the progress of the process.	0 to 100 %	-
Density adjustment factor	-	Shows the calculated correction factor for the density.	Signed floating-point number	1
Density adjustment offset	-	Shows the calculated correction offset for the density.	Signed floating-point number	0

\* Visibility depends on order options or device settings

#### Zero point verification and zero adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions  $\rightarrow \textcircled{B} 263$ . Therefore, a zero adjustment in the field is generally not required.

Experience shows that zero adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

To get a representative zero point, ensure that:

- any flow in the device is prevented during the adjustment
- the process conditions (e.g. pressure, temperature) are stable and representative

Zero point verification and zero adjustment cannot be performed if the following process conditions are present:

- Gas pockets Ensure that the system has been sufficiently flushed with the medium. Repeat flushing can help to eliminate gas pockets
- Thermal circulation

In the event of temperature differences (e.g. between the measuring tube inlet and outlet section), induced flow can occur even if the valves are closed due to thermal circulation in the device

Leaks at the valves

If the valves are not leak-tight, flow is not sufficiently prevented when determining the zero point

If these conditions cannot be avoided, it is advisable to keep the factory setting for the zero point.

#### Zero point verification

The zero point can be verified with the **Zero verification** wizard.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Sensor adjustment  $\rightarrow$  Zero verification

► Zero verification	
Process conditions	] → 🗎 127
Progress	→ 🗎 127
Status	→ 🗎 127
Additional information	] → 🗎 127
Recommendation:	] → 🗎 127
Root cause	] → 🗎 127
Abort cause	] → 🗎 127
Zero point measured	) → 🗎 127
Zero point standard deviation	→ 🗎 127

Parameter	Description	Selection / User interface	Factory setting
Process conditions	Ensure process conditions as follows.	<ul> <li>Tubes are completely filled</li> <li>Process operational pressure applied</li> <li>No-flow conditions (closed valves)</li> <li>Process and ambient temperatures stable</li> </ul>	-
Progress	Shows the progress of the process.	0 to 100 %	-
Status	Shows the status of the process.	<ul><li>Busy</li><li>Failed</li><li>Done</li></ul>	-
Additional information	Indicate whether to display additional information.	<ul><li>Hide</li><li>Show</li></ul>	Hide
Recommendation:	Indicates whether an adjustment is recommended. Only recommended if the measured zero point deviates significantly from the current zero point.	<ul> <li>Do not adjust zero point</li> <li>Adjust zero point</li> </ul>	-
Abort cause	Indicates why the wizard was aborted.	<ul> <li>Check process conditions!</li> <li>A technical issue has occurred</li> </ul>	-
Root cause	Shows the diagnostic and remedy.	<ul> <li>Zero point too high. Ensure no-flow.</li> <li>Zero point is unstable. Ensure no-flow.</li> <li>Fluctuation high. Avoid 2- phase medium.</li> </ul>	-
Zero point measured	Shows the zero point measured for the adjustment.	Signed floating-point number	-
Zero point standard deviation	Shows the standard deviation of the zero point measured.	Positive floating-point number	-

## Zero adjust

The zero point can be adjusted with the **Zero adjustment** wizard.




A zero point verification should be performed before a zero adjustment.
The zero point can also be adjusted manually: Expert → Sensor → Calibration

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Sensor adjustment  $\rightarrow$  Zero adjustment

► Zero adjustment			
Process c	onditions	]	→ 🗎 128
Progress		]	→ 🗎 128
Status		]	→ 🗎 128
Root caus	Se	]	→ 🖺 128
Abort cau	ISE	]	→ 🗎 128

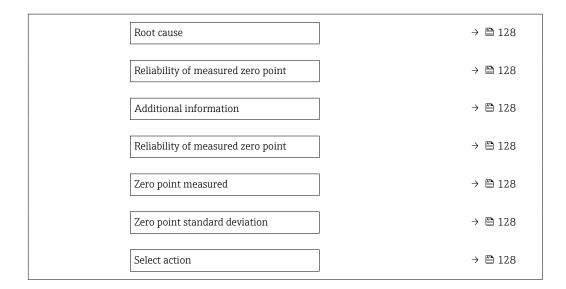

Parameter	Description	Selection / User interface	Factory setting
Process conditions	Ensure process conditions as follows.	<ul> <li>Tubes are completely filled</li> <li>Process operational pressure applied</li> <li>No-flow conditions (closed valves)</li> <li>Process and ambient temperatures stable</li> </ul>	-
Progress	Shows the progress of the process.	0 to 100 %	-
Status	Shows the status of the process.	<ul><li>Busy</li><li>Failed</li><li>Done</li></ul>	-
Abort cause	Indicates why the wizard was aborted.	<ul> <li>Check process conditions!</li> <li>A technical issue has occurred</li> </ul>	-
Root cause	Shows the diagnostic and remedy.	<ul> <li>Zero point too high. Ensure no-flow.</li> <li>Zero point is unstable. Ensure no-flow.</li> <li>Fluctuation high. Avoid 2- phase medium.</li> </ul>	-
Reliability of measured zero point	Indicates the reliability of the zero point measured.	<ul><li>Not done</li><li>Good</li><li>Uncertain</li></ul>	-
Additional information	Indicate whether to display additional information.	<ul><li>Hide</li><li>Show</li></ul>	Hide
Zero point measured	Shows the zero point measured for the adjustment.	Signed floating-point number	-
Zero point standard deviation	Shows the standard deviation of the zero point measured.	Positive floating-point number	-
Select action	Select the zero point value to apply.	<ul> <li>Restore</li> <li>Keep current zero point</li> <li>Apply zero point measured</li> <li>Apply factory zero point*</li> </ul>	Keep current zero point

\* Visibility depends on order options or device settings

## 10.6.4 Configuring the totalizer

In the **"Totalizer 1 to n" submenu** the individual totalizer can be configured.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Totalizer 1 to n

► Totalizer 1 to n	
Assign process variable 1 to n (11104–1 to n)	→ 🗎 129
Process variable unit 1 to n (11107–1 to n)	→ 🗎 129
Totalizer 1 to n operation mode (11102–1 to n)	→ 🗎 129
Totalizer 1 to n control (11101–1 to n)	→  130
Totalizer 1 to n failure behavior (11103–1 to n)	→ <a>130</a>

Parameter	Description	Selection	Factory setting
Assign process variable 1 to n	Select process variable for totalizer.	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow*</li> <li>Target mass flow*</li> <li>Carrier mass flow*</li> <li>Carrier volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Carrier corrected volume flow*</li> <li>GSV flow*</li> <li>GSV flow alternative*</li> <li>NSV flow*</li> <li>NSV flow alternative*</li> <li>S&amp;W volume flow*</li> <li>Oil mass flow*</li> <li>Oil volume flow*</li> <li>Oil volume flow*</li> <li>Oil corrected volume flow*</li> <li>Oil corrected volume flow*</li> <li>Water corrected volume flow*</li> <li>Water corrected volume flow*</li> <li>Water corrected volume flow*</li> <li>Raw value mass flow</li> </ul>	Mass flow
Process variable unit 1 to n	Select the unit for the process variable of the totalizer.	Unit choose list	kg
Totalizer 1 to n operation mode	Select totalizer operation mode, e.g. only totalize forward flow or only totalize reverse flow.	<ul><li>Net</li><li>Forward</li><li>Reverse</li></ul>	Forward

Parameter	Description	Selection	Factory setting
Totalizer 1 to n control	Operate the totalizer.	<ul> <li>Reset + hold</li> <li>Preset + hold</li> <li>Hold</li> <li>Totalize</li> </ul>	Totalize
Totalizer 1 to n failure behavior	Select totalizer behavior in the event of a device alarm.	<ul> <li>Hold</li> <li>Continue</li> <li>Last valid value + continue</li> </ul>	Continue

## 10.6.5 Carrying out additional display configurations

In the **Display** submenu you can set all the parameters associated with the configuration of the local display.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Display

► Display	
Format display	→ 🗎 133
Value 1 display	] → 🗎 134
0% bargraph value 1	] → 🗎 134
100% bargraph value 1	] → 🗎 134
Decimal places 1	) → 🗎 135
Value 2 display	→ 🗎 135
Decimal places 2	→ 🗎 135
Value 3 display	→ 🗎 135
0% bargraph value 3	→ 🗎 135
100% bargraph value 3	→ 🗎 135
Decimal places 3	→ 🗎 135
Value 4 display	→ 🗎 135
Decimal places 4	→ 🗎 135
Value 5 display	→ 🗎 135
0% bargraph value 5	→ 🗎 135
100% bargraph value 5	→ 🗎 135
Decimal places 5	] → 🗎 136
Value 6 display	] → 🗎 136
Decimal places 6	] → 🖺 136
-	
Value 7 display	→ 🗎 136

0% bargraph value 7	→ 🗎 136
100% bargraph value 7	→ 🖺 136
Decimal places 7	→ 🗎 136
Value 8 display	→ 🖺 136
Decimal places 8	→ 🗎 136
Display language	→ 🗎 137
Display interval	→ 🗎 137
Display damping	→ 🗎 137
Header	→ 🗎 137
Header text	→ 🖺 137
Separator	→ 🗎 137
Backlight	→ 🖺 137

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul> <li>1 value, max. size</li> <li>1 bargraph + 1 value</li> <li>2 values</li> <li>1 value large + 2 values</li> <li>4 values</li> </ul>	1 value, max. size

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow*</li> <li>Density</li> <li>Reference density*</li> <li>Temperature</li> <li>Pressure</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> <li>Concentration*</li> <li>Target mass flow*</li> <li>Carrier mass flow*</li> <li>Carrier volume flow*</li> <li>Carrier volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Carrier corrected volume flow</li> <li>Application specific output 0*</li> <li>Application specific output 1*</li> <li>Inhomogeneous medium index</li> <li>Suspended bubbles index*</li> <li>HBSI*</li> <li>Raw value mass flow</li> <li>Exciter current 0</li> <li>Oscillation damping 0</li> <li>Oscillation frequency 0</li> <li>Frequency fluctuation 0*</li> <li>Oscillation amplitude 0*</li> <li>Signal asymmetry</li> <li>Torsion signal asymmetry</li> <li>Torsion signal asymmetry</li> <li>Test point 0</li> <li>Test point 1</li> <li>Current output 1</li> <li>Current output 2*</li> <li>Current output 2</li> </ul>	Mass flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Decimal places 1	A measured value is specified in the <b>Value 1 display</b> parameter.	Select the number of decimal places for the display value.	<ul> <li>x</li> <li>x.x</li> <li>x.xx</li> <li>x.xxx</li> <li>x.xxxx</li> <li>x.xxxxx</li> <li>x.xxxxx</li> <li>x.xxxxx</li> </ul>	x.xx
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \cong 116)$	None
Decimal places 2	A measured value is specified in the <b>Value 2 display</b> parameter.	Select the number of decimal places for the display value.	<ul> <li>x</li> <li>x.x</li> <li>x.xx</li> <li>x.xxx</li> <li>x.xxxx</li> <li>x.xxxxx</li> <li>x.xxxxx</li> <li>x.xxxxx</li> <li>x.xxxxxx</li> </ul>	X.XX
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \square 116)$	None
0% bargraph value 3	A selection was made in the <b>Value 3 display</b> parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
100% bargraph value 3	A selection was made in the <b>Value 3 display</b> parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 3	A measured value is specified in the <b>Value 3 display</b> parameter.	Select the number of decimal places for the display value.	<ul> <li>X</li> <li>X.X</li> <li>X.XX</li> <li>X.XXX</li> <li>X.XXX</li> <li>X.XXXX</li> <li>X.XXXXX</li> <li>X.XXXXXX</li> </ul>	X.XX
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \cong 116)$	None
Decimal places 4	A measured value is specified in the <b>Value 4 display</b> parameter.	Select the number of decimal places for the display value.	<ul> <li>x</li> <li>x.x</li> <li>x.xx</li> <li>x.xxx</li> <li>x.xxxx</li> <li>x.xxxx</li> <li>x.xxxxx</li> <li>x.xxxxx</li> <li>x.xxxxx</li> </ul>	X.XX
Value 5 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the <b>Value 1 display</b> parameter $(\rightarrow \cong 116)$	None
0% bargraph value 5	An option was selected in the <b>Value 5 display</b> parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Depends on country: • 0 kg/h • 0 lb/min
100% bargraph value 5	An option was selected in the <b>Value 5 display</b> parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Decimal places 5	A measured value is specified in the <b>Value 5 display</b> parameter.	Select the number of decimal places for the display value.	<ul> <li>x</li> <li>x.x</li> <li>x.xx</li> <li>x.xxx</li> <li>x.xxxx</li> <li>x.xxxx</li> <li>x.xxxxx</li> <li>x.xxxxx</li> <li>x.xxxxx</li> </ul>	X.XX
Value 6 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the <b>Value 1 display</b> parameter $( \rightarrow \cong 116)$	None
Decimal places 6	A measured value is specified in the <b>Value 6 display</b> parameter.	Select the number of decimal places for the display value.	<ul> <li>x</li> <li>x.x</li> <li>x.xx</li> <li>x.xxx</li> <li>x.xxxx</li> <li>x.xxxxx</li> <li>x.xxxxx</li> <li>x.xxxxx</li> <li>x.xxxxxx</li> </ul>	X.XX
Value 7 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $( \rightarrow \square 116)$	None
0% bargraph value 7	An option was selected in the <b>Value 7 display</b> parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Depends on country: • 0 kg/h • 0 lb/min
100% bargraph value 7	An option was selected in the <b>Value 7 display</b> parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 7	A measured value is specified in the <b>Value 7 display</b> parameter.	Select the number of decimal places for the display value.	<ul> <li>x</li> <li>x.x</li> <li>x.xx</li> <li>x.xxx</li> <li>x.xxxx</li> <li>x.xxxxx</li> <li>x.xxxxx</li> <li>x.xxxxx</li> <li>x.xxxxxx</li> </ul>	X.XX
Value 8 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \cong 116)$	None
Decimal places 8	A measured value is specified in the <b>Value 8 display</b> parameter.	Select the number of decimal places for the display value.	<ul> <li>X</li> <li>X.X</li> <li>X.XX</li> <li>X.XXX</li> <li>X.XXXX</li> <li>X.XXXXX</li> <li>X.XXXXX</li> <li>X.XXXXXX</li> </ul>	X.XX

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Display language	A local display is provided.	Set display language.	<ul> <li>English</li> <li>Deutsch</li> <li>Français</li> <li>Español</li> <li>Italiano</li> <li>Nederlands</li> <li>Portuguesa</li> <li>Polski</li> <li>pycский язык (Russian)</li> <li>Svenska</li> <li>Türkçe</li> <li>中文 (Chinese)</li> <li>日本語 (Japanese)</li> <li>한국어 (Korean)</li> <li>tiếng Việt (Vietnamese)</li> <li>čeština (Czech)</li> </ul>	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	A local display is provided.	Select header contents on local display.	<ul><li> Device tag</li><li> Free text</li></ul>	Device tag
Header text	The <b>Free text</b> option is selected in the <b>Header</b> parameter.	Enter display header text.	Max. 12 characters, such as letters, numbers or special characters (e.g. @, %, /)	
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	<ul> <li>. (point)</li> <li>, (comma)</li> </ul>	. (point)
Backlight	<ul> <li>One of the following conditions is met:</li> <li>Order code for "Display; operation", option F "4-line, illum.; touch control"</li> <li>Order code for "Display; operation", option G "4-line, illum.; touch control +WLAN"</li> <li>Order code for "Display; operation", option O "Remote display 4-line illuminated; 10m/30ft cable; touch control"</li> </ul>	Switch the local display backlight on and off.	<ul><li>Disable</li><li>Enable</li></ul>	Enable

## 10.6.6 WLAN configuration

The **WLAN Settings** submenu guides the user systematically through all the parameters that have to be set for the WLAN configuration.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  WLAN settings

► WLAN settings

WLAN		→ 🗎 138
WLAN mode		→ 🗎 138
SSID name		→ 🗎 138
Network security		→ 🗎 138
Security identification		→ 🗎 139
User name		→ 🗎 139
WLAN password		→ 🗎 139
WLAN IP address		→ 🗎 139
WLAN MAC address		→ 🗎 139
WLAN passphrase		→ 🗎 139
WLAN MAC address		→ 🗎 139
Assign SSID name		→ 🗎 139
SSID name		→ 🗎 139
Connection state		→ 🗎 139
Received signal strength		→ 🗎 139
	WLAN mode         SSID name         Network security         Security identification         User name         WLAN password         WLAN IP address         WLAN MAC address         WLAN passphrase         WLAN MAC address         SSID name         SSID name         Connection state	WLAN mode         SSID name         Network security         Security identification         User name         WLAN password         WLAN IP address         WLAN MAC address         WLAN passphrase         WLAN MAC address         SID name         SSID name         Connection state

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
WLAN	-	Switch WLAN on and off.	<ul><li>Disable</li><li>Enable</li></ul>	Enable
WLAN mode	-	Select WLAN mode.	<ul><li>WLAN access point</li><li>WLAN Client</li></ul>	WLAN access point
SSID name	The client is activated.	Enter the user-defined SSID name (max. 32 characters).	-	_
Network security	-	Select the security type of the WLAN network.	<ul> <li>Unsecured</li> <li>WPA2-PSK</li> <li>EAP-PEAP with MSCHAPv2*</li> <li>EAP-PEAP MSCHAPv2 no server authentic.*</li> <li>EAP-TLS*</li> </ul>	WPA2-PSK

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Security identification	-	Select security settings and download these settings via menu Data management > Security > WLAN.	<ul><li>Trusted issuer certificate</li><li>Device certificate</li><li>Device private key</li></ul>	-
User name	-	Enter user name.	-	-
WLAN password	-	Enter WLAN password.	-	-
WLAN IP address	-	Enter IP address of the WLAN interface of the device.	4 octet: 0 to 255 (in the particular octet)	192.168.1.212
WLAN MAC address	-	Enter MAC address of the WLAN interface of the device.	Unique 12-digit character string comprising letters and numbers	Each measuring device is given an individual address.
WLAN passphrase	The <b>WPA2-PSK</b> option is selected in the <b>Security type</b> parameter.	Enter the network key (8 to 32 characters). The network key supplied with the device should be changed during commissioning for security reasons.	8 to 32-digit character string comprising numbers, letters and special characters (without spaces)	Serial number of the measuring device (e.g. L100A802000)
Assign SSID name	-	Select which name will be used for SSID: device tag or user- defined name.	<ul><li>Device tag</li><li>User-defined</li></ul>	User-defined
SSID name	<ul> <li>The User-defined option is selected in the Assign SSID name parameter.</li> <li>The WLAN access point option is selected in the WLAN mode parameter.</li> </ul>	Enter the user-defined SSID name (max. 32 characters). The user-defined SSID name may only be assigned once. If the SSID name is assigned more than once, the devices can interfere with one another.	Max. 32-digit character string comprising numbers, letters and special characters	EH_device designation_last 7 digits of the serial number (e.g. EH_Promass_300_A 802000)
Connection state	-	Displays the connection status.	<ul><li>Connected</li><li>Not connected</li></ul>	Not connected
Received signal strength	-	Shows the received signal strength.	<ul><li>Low</li><li>Medium</li><li>High</li></ul>	High

## **10.6.7** Viscosity application package

For detailed information on the parameter descriptions for the Viscosity application package, see the Special Documentation for the device  $\rightarrow \square 284$ 

### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Viscosity

## 10.6.8 Concentration Measurement application package

For detailed information on the parameter descriptions for the Concentration application package, see the Special Documentation for the device  $\rightarrow \cong 284$ 

### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Concentration

## 10.6.9 Petroleum application package

For detailed information on the parameter descriptions for the Petroleum application package, see the Special Documentation for the device  $\rightarrow \square 284$ 

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Petroleum

## 10.6.10 Heartbeat Technology application package

For detailed information on the parameter descriptions for the Heartbeat setup application package, see the Special Documentation for the device  $\rightarrow \cong 284$ 

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Heartbeat setup

## 10.6.11 Configuration management

After commissioning, you can save the current device configurationor restore the previous device configuration. The device configuration is managed via the **Configuration management** parameter.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Configuration backup

► Configuration backup	
Operating time	) → 🗎 140
Last backup	→ 🗎 140
Configuration management	) → 🗎 140
Backup state	) → 🖺 141
Comparison result	) → 🗎 141

Parameter	Description	User interface / Selection	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	-
Last backup	Shows when the last data backup was saved to HistoROM backup.	Days (d), hours (h), minutes (m) and seconds (s)	-
Configuration management	Select action for managing the device data in the HistoROM backup.	<ul> <li>Cancel</li> <li>Execute backup</li> <li>Restore *</li> <li>Compare *</li> <li>Clear backup data</li> </ul>	Cancel

Parameter	Description	User interface / Selection	Factory setting
Backup state	Shows the current status of data saving or restoring.	<ul> <li>None</li> <li>Backup in progress</li> <li>Restoring in progress</li> <li>Delete in progress</li> <li>Compare in progress</li> <li>Restoring failed</li> <li>Backup failed</li> </ul>	None
Comparison result	Comparison of current device data with HistoROM backup.	<ul> <li>Settings identical</li> <li>Settings not identical</li> <li>No backup available</li> <li>Backup settings corrupt</li> <li>Check not done</li> <li>Dataset incompatible</li> </ul>	Check not done

#### Function scope of the "Configuration management" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Execute backup	A backup copy of the current device configuration is saved from the HistoROM backup to the memory of the device. The backup copy includes the transmitter data of the device.
Restore	The last backup copy of the device configuration is restored from the device memory to the device's HistoROM backup. The backup copy includes the transmitter data of the device.
Compare	The device configuration saved in the device memory is compared with the current device configuration of the HistoROM backup.
Clear backup data	The backup copy of the device configuration is deleted from the memory of the device.



#### HistoROM backup

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

While this action is in progress, the configuration cannot be edited via the local i display and a message on the processing status appears on the display.

## 10.6.12 Using parameters for device administration

The Administration submenu systematically guides the user through all the parameters that can be used for device administration purposes.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Administration

► Administration			
	► Define access code		→ 🗎 142
	► Reset access code	]	→ 🖺 142
	Device reset	]	→ 🗎 143

#### Using the parameter to define the access code

Complete this wizard to specify an access code for the Maintenance role.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define access code

► Define access code	
Define access code	] → 🗎 142
Confirm access code	] → 🗎 142

#### Parameter overview with brief description

Parameter	Description	User entry
Define access code	Restrict write-access to parameters to protect the configuration of the device against unintentional changes.	Max. 16-digit character string comprising numbers, letters and special characters
Confirm access code	Confirm the entered access code.	Max. 16-digit character string comprising numbers, letters and special characters

#### Using the parameter to reset the access code

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Reset access code

► Reset access code	
Operating time	] → 🗎 142
Reset access code	] → 🗎 142

#### Parameter overview with brief description

Parameter	Description	User interface / User entry	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	-
Reset access code	<ul> <li>Reset access code to factory settings.</li> <li>For a reset code, contact your Endress+Hauser service organization.</li> <li>The reset code can only be entered via:</li> <li>Web browser</li> <li>DeviceCare, FieldCare (via CDI-RJ45 service interface)</li> <li>Fieldbus</li> </ul>	Character string comprising numbers, letters and special characters	0x00

#### Using the parameter to reset the device

#### Navigation

 $"Setup" menu \rightarrow Advanced setup \rightarrow Administration"$ 

Parameter	Description	Selection	Factory setting
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	<ul> <li>Cancel</li> <li>To delivery settings</li> <li>Restart device</li> <li>Restore S-DAT backup*</li> </ul>	Cancel

\* Visibility depends on order options or device settings

# 10.7 Simulation

Via the **Simulation** submenu, it is possible to simulate various process variables in the process and the device alarm mode and verify downstream signal chains (switching valves or closed-control loops). The simulation can be performed without a real measurement (no flow of medium through the device).

### Navigation

"Diagnostics" menu  $\rightarrow$  Simulation

► Simulation		
	Assign simulation process variable	→ 🗎 144
	Process variable value	→ 🗎 144
	Current input 1 to n simulation	→ 🗎 145
	Value current input 1 to n	→ 🖺 145
	Status input 1 to n simulation	→ 🗎 145
	Input signal level 1 to n	→ 🗎 145
	Current output 1 to n simulation	→ 🗎 144
	Current output value	→ 🖺 144
	Frequency output 1 to n simulation	→ 🗎 144
	Frequency output 1 to n value	→ 🗎 144
	Pulse output simulation 1 to n	→ 🖺 144
	Pulse value 1 to n	→ 🗎 144
	Switch output simulation 1 to n	→ 🗎 145
	Switch state 1 to n	→ 🗎 145
	Relay output 1 to n simulation	→ 🖹 145
	, , , , , , , , , , , , , , , , , , ,	

Switch state 1 to n	→ 🗎 145
Device alarm simulation	ı → 🗎 145
Diagnostic event catego	ry → 🗎 145
Diagnostic event simula	tion $\rightarrow \square 145$

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign simulation process variable	-	Select a process variable for the simulation process that is activated.	<ul> <li>Off</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow*</li> <li>Target mass flow*</li> <li>Carrier mass flow*</li> <li>Target volume flow*</li> <li>Carrier volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Target corrected volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Target corrected volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Carr</li></ul>	Off
Process variable value	A process variable is selected in the <b>Assign simulation</b> <b>process variable</b> parameter $(\rightarrow \cong 144)$ .	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Current output 1 to n simulation	-	Switch the simulation of the current output on and off.	<ul><li>Off</li><li>On</li></ul>	Off
Current output value	In the <b>Current output 1 to n</b> <b>simulation</b> parameter, the <b>On</b> option is selected.	Enter the current value for simulation.	3.59 to 22.5 mA	3.59 mA
Frequency output 1 to n simulation	In the <b>Operating mode</b> parameter, the <b>Frequency</b> option is selected.	Switch the simulation of the frequency output on and off.	<ul><li>Off</li><li>On</li></ul>	Off
Frequency output 1 to n value	In the <b>Frequency simulation</b> <b>1 to n</b> parameter, the <b>On</b> option is selected.	Enter the frequency value for the simulation.	0.0 to 12 500.0 Hz	0.0 Hz
Pulse output simulation 1 to n	In the <b>Operating mode</b> parameter, the <b>Pulse</b> option is selected.	<ul> <li>Set and switch off the pulse output simulation.</li> <li>For Fixed value option: Pulse width parameter (→  104) defines the pulse width of the pulses output.</li> </ul>	<ul> <li>Off</li> <li>Fixed value</li> <li>Down-counting value</li> </ul>	Off
Pulse value 1 to n	In the <b>Pulse output</b> simulation 1 to n parameter, the <b>Down-counting value</b> option is selected.	Enter the number of pulses for simulation.	0 to 65 535	0

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Switch output simulation 1 to n	In the <b>Operating mode</b> parameter, the <b>Switch</b> option is selected.	Switch the simulation of the switch output on and off.	<ul><li>Off</li><li>On</li></ul>	Off
Switch state 1 to n	-	Select the status of the status output for the simulation.	<ul><li>Open</li><li>Closed</li></ul>	Open
Relay output 1 to n simulation	-	Switch simulation of the relay output on and off.	<ul><li>Off</li><li>On</li></ul>	Off
Switch state 1 to n	The <b>On</b> option is selected in the <b>Switch output simulation</b> <b>1 to n</b> parameter parameter.	Select status of the relay output for the simulation.	<ul><li> Open</li><li> Closed</li></ul>	Open
Device alarm simulation	-	Switch the device alarm on and off.	<ul><li>Off</li><li>On</li></ul>	Off
Diagnostic event category	-	Select a diagnostic event category.	<ul><li>Sensor</li><li>Electronics</li><li>Configuration</li><li>Process</li></ul>	Process
Diagnostic event simulation	-	Select a diagnostic event to simulate this event.	<ul> <li>Off</li> <li>Diagnostic event picklist (depends on the category selected)</li> </ul>	Off
Current input 1 to n simulation	-	Switch simulation of the current input on and off.	<ul><li>Off</li><li>On</li></ul>	Off
Value current input 1 to n	In the <b>Current input 1 to n</b> <b>simulation</b> parameter, the <b>On</b> option is selected.	Enter the current value for simulation.	0 to 22.5 mA	0 mA
Status input 1 to n simulation	-	Switch simulation of the status input on and off.	<ul><li>Off</li><li>On</li></ul>	Off
Input signal level 1 to n	In the <b>Status input simulation</b> parameter, the <b>On</b> option is selected.	Select the signal level for the simulation of the status input.	<ul><li>High</li><li>Low</li></ul>	High

\* Visibility depends on order options or device settings

## **10.8** Protecting settings from unauthorized access

The following write protection options exist in order to protect the configuration of the measuring device from unintentional modification:

- Protect access to parameters via access code  $\rightarrow \implies 145$
- Protect access to local operation via key locking  $\rightarrow \implies 57$
- Protect access to measuring device via write protection switch  $\rightarrow \square 147$

#### **10.8.1** Write protection via access code

The effects of the user-specific access code are as follows:

- Via local operation, the parameters for the measuring device configuration are writeprotected and their values can no longer be changed.
- Device access is protected via the Web browser, as are the parameters for the measuring device configuration.
- Device access is protected via FieldCare or DeviceCare (via CDI-RJ45 service interface), as are the parameters for the measuring device configuration.

#### Defining the access code via local display

**1.** Navigate to the **Define access code** parameter ( $\rightarrow \square 142$ ).


- 2. Define a max. 16-digit character string comprising numbers, letters and special characters as the access code.
- **3.** Enter the access code again in the **Confirm access code** parameter ( $\rightarrow \implies 142$ ) to confirm the code.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.

- - The user role with which the user is currently logged on via the local display
    - → B 56 is indicated by the **Access status** parameter. Navigation path: Operation → Access status

#### Parameters which can always be modified via the local display

Certain parameters that do not affect the measurement are excepted from parameter write protection via the local display. Despite the user-specific access code, they can always be modified, even if the other parameters are locked.

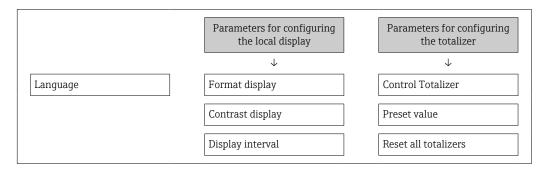

#### Defining the access code via the Web browser

- **1.** Navigate to the **Define access code** parameter ( $\rightarrow \implies 142$ ).
- 2. Define a max. 16-digit numeric code as an access code.
- **3.** Enter the access code again in the **Confirm access code** parameter ( $\rightarrow \implies 142$ ) to confirm the code.
  - ← The Web browser switches to the login page.
- If no action is performed for 10 minutes, the Web browser automatically returns to the login page.
- If parameter write protection is activated via an access code, it can also only be deactivated via this access code  $\rightarrow \cong 56$ .
  - The user role with which the user is currently logged on via Web browser is indicated by the Access status parameter. Navigation path: Operation → Access status

#### Resetting the access code

If you misplace the user-specific access code, it is possible to reset the code to the factory setting. A reset code must be entered for this purpose. The user-specific access code can then be defined again afterwards.

Via Web browser, FieldCare, DeviceCare (via CDI-RJ45 service interface), fieldbus


- You can only obtain a reset code from your local Endress+Hauser service organization. The code must be calculated explicitly for every device.
- 1. Note down the serial number of the device.
- 2. Read off the **Operating time** parameter.
- **3.** Contact the local Endress+Hauser service organization and tell them the serial number and the operating time.
  - └ Get the calculated reset code.
- 4. Enter the reset code in the **Reset access code** parameter ( $\rightarrow \triangleq 142$ ).
  - → The access code has been reset to the factory setting **0000**. It can be redefined  $\rightarrow \cong 145$ .
- For IT security reasons, the calculated reset code is only valid for 96 hours from the specified operating time and for the specific serial number. If you cannot return to the device within 96 hours, you should either increase the operating time you read out by a few days or switch off the device.

#### 10.8.2 Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows the user to lock write access to the entire operating menu - apart from the **"Contrast display"** parameter.


The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via PROFINET protocol

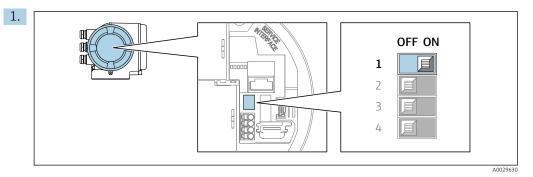

Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection.

In the Locking status parameter, the Hardware locked option is displayed
 → ■ 149. In addition, on the local display the 
 symbol appears in front of the parameters in the header of the operational display and in the navigation view.

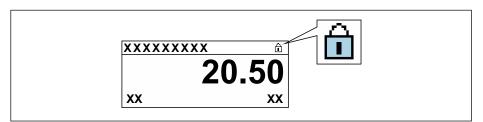

2. Setting the write protection (WP) switch on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.

► No option is displayed in the Locking status parameter → <a> 149</a>. On the local display, the <a> symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.</a>

## 11 Operation

## 11.1 Reading off the device locking status

Device active write protection: Locking status parameter

Operation  $\rightarrow$  Locking status

Function scope of the "Locking status" parameter

Options	Description
None	The access authorization displayed in the <b>Access status</b> parameter applies $\rightarrow \square$ 56. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool) $\rightarrow \square$ 147.
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset, etc.). Once the internal processing has been completed, the parameters can be changed once again.

## 11.2 Adjusting the operating language

Petailed information:

- To configure the operating language  $\rightarrow \cong 86$
- For information on the operating languages supported by the measuring device  $\rightarrow \, \boxminus \, 273$

## **11.3** Configuring the display

Detailed information:

- On the basic settings for the local display  $\rightarrow \square 114$
- On the advanced settings for the local display  $\rightarrow \cong 131$

## 11.4 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values

► Measured values	
► Measured variables	→ 🗎 150
► Totalizer	→ 🗎 152
► Input values	→  153
► Output values	→ 🗎 154

#### 11.4.1 "Measured variables" submenu

The **Measured variables** submenu contains all the parameters needed to display the current measured values for each process variable.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Measured variables

► Measured varia	bles		
	Mass flow	]	→ 🖺 150
	Volume flow		→ 🗎 150
	Corrected volume flow		→ 🖺 151
	Density		→ 🖺 151
	Reference density		→ 🗎 151
	Temperature		→ 🗎 151
	Pressure		→ 🖺 151
	Concentration		→ 🗎 151
	Target mass flow		→ 🖺 151
	Carrier mass flow		→ 🖺 151
	Target corrected volume flow		→ 🗎 151
	Carrier corrected volume flow		→ 🗎 152
	Target volume flow		→ 🖺 152
	Carrier volume flow		→ 🗎 152

#### Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Mass flow	-	Displays the mass flow that is currently measured. <i>Dependency</i>	Signed floating-point number
		The unit is taken from: <b>Mass flow unit</b> parameter ( $\rightarrow \square 91$ )	
Volume flow	-	Displays the volume flow that is currently calculated.	Signed floating-point number
		Dependency The unit is taken from the Volume flow unit parameter ( $\rightarrow \square 91$ ).	

Parameter	Prerequisite	Description	User interface
Corrected volume flow	-	Displays the corrected volume flow that is currently calculated. Dependency The unit is taken from: <b>Corrected</b> <b>volume flow unit</b> parameter ( $\rightarrow \cong 91$ )	Signed floating-point number
Density	-	Shows the density currently measured. Dependency The unit is taken from the <b>Density unit</b> parameter ( $\rightarrow \cong$ 91).	Signed floating-point number
Reference density	-	Displays the reference density that is currently calculated. Dependency The unit is taken from: <b>Reference</b> <b>density unit</b> parameter ( $\rightarrow \square 92$ )	Signed floating-point number
Temperature	_	Shows the medium temperature currently measured. Dependency The unit is taken from: <b>Temperature</b> <b>unit</b> parameter ( $\rightarrow \cong$ 92)	Signed floating-point number
Pressure	-	Displays either a fixed or external pressure value. Dependency The unit is taken from the <b>Pressure</b> <b>unit</b> parameter ( $\rightarrow \cong$ 92).	Signed floating-point number
Concentration	For the following order code: Order code for "Application package", option ED "Concentration" The software options currently enabled are displayed in the Software option overview parameter.	Displays the concentration that is currently calculated. <i>Dependency</i> The unit is taken from the <b>Concentration unit</b> parameter.	Signed floating-point number
Target mass flow	With the following conditions:         Order code for "Application package",         option ED "Concentration"         Image: The software options currently enabled are displayed in the software option overview parameter.	Displays the mass flow that is currently measured for the target medium. Dependency The unit is taken from the <b>Mass flow unit</b> parameter ( $\rightarrow \square$ 91).	Signed floating-point number
Carrier mass flow	With the following conditions:         Order code for "Application package",         option ED "Concentration"         Image: The software options currently enabled are displayed in the Software option overview parameter.	Displays the mass flow of the carrier medium that is currently measured. Dependency The unit is taken from: Mass flow unit parameter ( $\rightarrow \square 91$ )	Signed floating-point number
Target corrected volume flow	<ul> <li>With the following conditions:</li> <li>Order code for "Application package", option ED "Concentration"</li> <li>The Ethanol in water option or %mass / %volume option is selected in the Liquid type parameter.</li> <li>The software options currently enabled are displayed in the Software option overview parameter.</li> </ul>	Displays the corrected volume flow that is currently measured for the target fluid. <i>Dependency</i> The unit is taken from the <b>Volume flow</b> <b>unit</b> parameter ( $\rightarrow \square$ 91).	Signed floating-point number

Parameter	Prerequisite	Description	User interface
Carrier corrected volume flow	<ul> <li>With the following conditions:</li> <li>Order code for "Application package", option ED "Concentration"</li> <li>In the Liquid type parameter, the Ethanol in water option or %mass / %volume option is selected.</li> <li>The software options currently enabled are displayed in the Software option overview parameter.</li> </ul>	Displays the corrected volume flow currently measured for the carrier fluid. <i>Dependency</i> The unit is taken from the <b>Volume flow unit</b> parameter ( $\rightarrow \boxdot 91$ ).	Signed floating-point number
Target volume flow	<ul> <li>With the following conditions:</li> <li>Order code for "Application package", option ED "Concentration"</li> <li>The Ethanol in water option or %mass / %volume option is selected in the Liquid type parameter.</li> <li>The %vol option is selected in the Concentration unit parameter.</li> <li>The software options currently enabled are displayed in the Software option overview parameter.</li> </ul>	Displays the volume flow currently measured for the target medium. <i>Dependency</i> The unit is taken from the <b>Volume flow unit</b> parameter ( $\rightarrow \square$ 91).	Signed floating-point number
Carrier volume flow	<ul> <li>With the following conditions:</li> <li>Order code for "Application package", option ED "Concentration"</li> <li>The Ethanol in water option or %mass / %volume option is selected in the Liquid type parameter.</li> <li>The %vol option is selected in the Concentration unit parameter.</li> <li>The software options currently enabled are displayed in the Software option overview parameter.</li> </ul>	Displays the volume flow currently measured for the carrier medium. <i>Dependency</i> The unit is taken from the <b>Volume flow unit</b> parameter ( $\rightarrow \square$ 91).	Signed floating-point number

### 11.4.2 Totalizer

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Totalizer

► Totalizer	
Assign process variable 1 to n	→ 🗎 153
Totalizer 1 to n value	→ 🗎 153
Totalizer 1 to n status	→ 🗎 153
Totalizer 1 to n status (Hex)	→ 🗎 153

Parameter	Description	Selection / User interface	Factory setting
Assign process variable 1 to n	Select process variable for totalizer.	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow*</li> <li>Target mass flow*</li> <li>Carrier mass flow*</li> <li>Target volume flow*</li> <li>Carrier volume flow*</li> <li>Target corrected volume flow*</li> <li>Carrier corrected volume flow*</li> <li>GSV flow alternative*</li> <li>NSV flow alternative*</li> <li>S&amp;W volume flow*</li> <li>Oil mass flow*</li> <li>Oil volume flow*</li> <li>Oil corrected volume flow*</li> <li>Water corrected volume flow*</li> <li>Raw value mass flow</li> </ul>	Mass flow
Totalizer 1 to n value	Shows the totalizer value reported to the controller for further processing.	Signed floating-point number	0 kg
Totalizer 1 to n status	Shows the status of the totalizer value reported to the controller for further processing ('Good', 'Uncertain', 'Bad').	<ul><li> Good</li><li> Uncertain</li><li> Bad</li></ul>	Good
Totalizer 1 to n status (Hex)	Shows the status of the totalizer value reported to the controller for further processing (Hex).	0 to 255	128

#### Parameter overview with brief description

\* Visibility depends on order options or device settings

#### 11.4.3 "Input values" submenu

The **Input values** submenu guides you systematically to the individual input values.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Input values

► Input values	
► Current input 1 to n	→ 🗎 153
► Status input 1 to n	) → 🗎 154

#### Input values of current input

The **Current input 1 to n** submenu contains all the parameters needed to display the current measured values for every current input.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Input values  $\rightarrow$  Current input 1 to n

► Current input 1 to n	
Measured values 1 to n	] → 🗎 154
Measured current 1 to n	] → 🗎 154

#### Parameter overview with brief description

Parameter	Description	User interface
Measured values 1 to n	Displays the current input value.	Signed floating-point number
Measured current 1 to n	Displays the current value of the current input.	0 to 22.5 mA

#### Input values of status input

The **Status input 1 to n** submenu contains all the parameters needed to display the current measured values for every status input.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Input values  $\rightarrow$  Status input 1 to n



#### Parameter overview with brief description

Parameter	Description	User interface
Value status input	Shows the current input signal level.	<ul><li>High</li><li>Low</li></ul>

#### 11.4.4 Output values

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Output values

► Output values		
► Current output 1 to p	1	→ 🗎 155

<ul> <li>Pulse/frequency/switch output 1 to n</li> </ul>	→ 🗎 155
► Relay output 1 to n	→ 🗎 156

#### Output values of current output

The **Value current output** submenu contains all the parameters needed to display the current measured values for every current output.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Output values  $\rightarrow$  Value current output 1 to n

► Current output 1 to n	
Output current	) → 🗎 155
Measured current	) → 🗎 155

#### Parameter overview with brief description

Parameter	Description	User interface
Output current	Displays the current value currently calculated for the current output.	3.59 to 22.5 mA
Measured current	Displays the current value currently measured for the current output.	0 to 30 mA

#### Output values for pulse/frequency/switch output

The **Pulse/frequency/switch output 1 to n** submenu contains all the parameters needed to display the current measured values for every pulse/frequency/switch output.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Output values  $\rightarrow$  Pulse/frequency/switch output 1 to n

<ul> <li>Pulse/frequency/switch output 1 to n</li> </ul>	
Output frequency	→ 🗎 156
Pulse output 1 to n	→ 🗎 156
Switch state	→ 🗎 156

#### Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Output frequency	In the <b>Operating mode</b> parameter, the <b>Frequency</b> option is selected.	Displays the value currently measured for the frequency output.	0.0 to 12 500.0 Hz
Pulse output 1 to n	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter parameter.	Displays the pulse frequency currently output.	Positive floating-point number
Switch state	The <b>Switch</b> option is selected in the <b>Operating mode</b> parameter.	Displays the current switch output status.	<ul><li> Open</li><li> Closed</li></ul>

#### Output values for relay output

The **Relay output 1 to n** submenu contains all the parameters needed to display the current measured values for every relay output.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Output values  $\rightarrow$  Relay output 1 to n

► Relay output 1 to n	
Switch state	→ 🗎 156
Switch cycles	→ 🗎 156
Max. switch cycles number	→ 🗎 156

#### Parameter overview with brief description

Parameter	Description	User interface
Switch state	Shows the current relay switch status.	<ul><li> Open</li><li> Closed</li></ul>
Switch cycles	Shows number of all performed switch cycles.	Positive integer
Max. switch cycles number	Shows the maximal number of guaranteed switch cycles.	Positive integer

# 11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Advanced settings using the Advanced setup submenu ( $\rightarrow \implies 120$ )

## **11.6** Performing a totalizer reset

The totalizers are reset in the **Operation** submenu:

- Control Totalizer
- Reset all totalizers

#### Navigation

"Operation" menu  $\rightarrow$  Totalizer handling

► Totalizer handling		
Totalizer 1 to n control (11101–1 to n)	→ 🗎 157	
Preset value 1 to n (11108–1 to n)	→ 🗎 157	
Reset all totalizers (2806)	→ 🗎 157	

#### Parameter overview with brief description

Parameter	Description	Selection / User entry	Factory setting
Totalizer 1 to n control	Operate the totalizer.	<ul><li>Reset + hold</li><li>Preset + hold</li><li>Hold</li><li>Totalize</li></ul>	Totalize
Preset value 1 to n	Specify start value for totalizer.	Signed floating-point number	0 kg
Reset all totalizers	Reset all totalizers to 0 and start.	<ul><li>Cancel</li><li>Reset + totalize</li></ul>	Cancel

#### **11.6.1** Function scope of "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started or continues running.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold <sup>1)</sup>	The totaling process is stopped and the totalizer is set to its defined start value from the <b>Preset value</b> parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.
Preset + totalize <sup>1)</sup>	The totalizer is set to the defined start value in the <b>Preset value</b> parameter and the totaling process is restarted.
Hold	Totalizing is stopped.

1) Visible depending on the order options or device settings

#### 11.6.2 Function scope of the "Reset all totalizers" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized.

## 11.7 Show data logging

 
The **Extended HistoROM** application package must be enabled in the device (order option) for the **Data logging** submenu to appear. This contains all the parameters for the measured value history.

🚹 Data logging is also available via:

- Plant Asset Management Tool FieldCare  $\rightarrow \square 68$ .
- Web browser

#### Function scope

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Measured value trend for each logging channel displayed in the form of a chart



28 Chart of a measured value trend

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Data logging

► Data logging		
Assign channel 1		→ 🗎 160
Assign channel 2		→ 🗎 161
Assign channel 3		→ 🗎 161
Assign channel 4		→ 🗎 161
Logging interval		→ 🗎 161
Clear logging data		→ 🗎 161
Data logging		→ 🗎 161
Logging delay		→ 🗎 161
Data logging control		→ 🗎 161

Data le	ogging status	]	→ 🖺 161
Entire	logging duration	]	→ 🗎 161

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign channel 1	The Extended HistoROM application package is available.	Assign process variable to logging channel.	<ul> <li>Off</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow*</li> <li>Density</li> <li>Reference density*</li> <li>Temperature</li> <li>Pressure</li> <li>Concentration *</li> <li>Target mass flow*</li> <li>Carrier mass flow*</li> <li>Carrier volume flow*</li> <li>Carrier volume flow*</li> <li>Carrier corrected volume flow*</li> <li>Application specific output 0*</li> <li>Application specific output 1*</li> <li>Inhomogeneous medium index</li> <li>Suspended bubbles index*</li> <li>HBSI*</li> <li>Raw value mass flow</li> <li>Exciter current 0</li> <li>Oscillation damping 0</li> <li>Oscillation damping fluctuation 0*</li> <li>Oscillation frequency 0</li> <li>Frequency fluctuation 0</li> <li>Oscillation amplitude 1*</li> <li>Signal asymmetry</li> <li>Carrier pipe temperature</li> <li>Electronics temperature</li> <li>Sensor index coil asymmetry</li> <li>Test point 1</li> <li>Current output 1</li> <li>Current output 2*</li> <li>Current output 2*</li> </ul>	Off

#### Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign channel 2	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see the <b>Assign channel</b> 1 parameter $(\rightarrow \bowtie 160)$	Off
Assign channel 3	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see the <b>Assign channel</b> 1 parameter (→ 🗎 160)	Off
Assign channel 4	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see the <b>Assign channel</b> <b>1</b> parameter $(\rightarrow \textcircled{P} 160)$	Off
Logging interval	The <b>Extended HistoROM</b> application package is available.	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	0.1 to 3600.0 s	1.0 s
Clear logging data	The <b>Extended HistoROM</b> application package is available.	Clear the entire logging data.	<ul><li>Cancel</li><li>Clear data</li></ul>	Cancel
Data logging	-	Select the type of data logging.	<ul><li>Overwriting</li><li>Not overwriting</li></ul>	Overwriting
Logging delay	In the <b>Data logging</b> parameter, the <b>Not</b> <b>overwriting</b> option is selected.	Enter the time delay for measured value logging.	0 to 999 h	0 h
Data logging control	In the <b>Data logging</b> parameter, the <b>Not</b> <b>overwriting</b> option is selected.	Start and stop measured value logging.	<ul><li>None</li><li>Delete + start</li><li>Stop</li></ul>	None
Data logging status	In the <b>Data logging</b> parameter, the <b>Not</b> <b>overwriting</b> option is selected.	Displays the measured value logging status.	<ul><li>Done</li><li>Delay active</li><li>Active</li><li>Stopped</li></ul>	Done
Entire logging duration	In the <b>Data logging</b> parameter, the <b>Not</b> <b>overwriting</b> option is selected.	Displays the total logging duration.	Positive floating- point number	0 s

\* Visibility depends on order options or device settings

## 11.8 Gas Fraction Handler

The Gas Fraction Handler improves measurement stability and repeatability in the event of two-phase media and provides valuable diagnostic information for the process.

The function continuously checks for the presence of gas bubbles in liquids or droplets in gases, as this second phase influences the output values for flow and density.

In the case of two-phase media, the Gas Fraction Handler stabilizes the output values and enables better readability for operators and easier interpretation by the distributed control system. The level of smoothing is adjusted according to the severity of the disturbances introduced by the second phase. In the case of single-phase media, the Gas Fraction Handler does not have any influence on the output values.

Possible options in the Gas Fraction Handler parameter:

- Off: Disables the Gas Fraction Handler. When a second phase is present, large fluctuations in the values output for flow and density will occur.
- Moderate: Use for applications with low levels or intermittent levels of second phase.
- Powerful: Use for applications with very significant levels of second phase.

The Gas Fraction Handler is cumulative to any fixed damping constants applied to flow and density that are set elsewhere in the instrument parameterization.

For detailed information on the parameter descriptions of the Gas Fraction Handler, see the Special Documentation for the device  $\rightarrow \cong 284$ 

#### 11.8.1 "Measurement mode" submenu

#### Navigation

"Expert" menu → Sensor → Measurement mode




#### Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Gas Fraction Handler	Activates the Gas Fraction Handler function for two phase media.	<ul><li>Off</li><li>Moderate</li><li>Powerful</li></ul>	Moderate

#### 11.8.2 "Medium index" submenu

#### Navigation

"Expert" menu  $\rightarrow$  Application  $\rightarrow$  Medium index

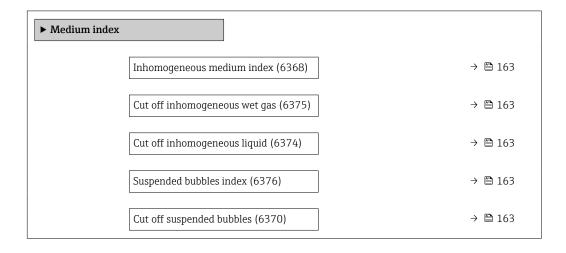

Parameter	Prerequisite	Description	User interface / User entry	Factory setting
Inhomogeneous medium index	-	Shows the degree of inhomogeneity of the medium.	Signed floating-point number	_
Cut off inhomogeneous wet gas	-	Enter cut off value for wet gas applications. Below this value the 'Inhomogeneous medium index' is set to 0.	Positive floating- point number	0.25
Cut off inhomogeneous liquid	-	Enter cut off value for liquid applications. Below this value the 'Inhomogeneous medium index' is set to 0.	Positive floating- point number	0.05
Suspended bubbles index	The diagnostic index is only available for Promass Q.	Shows the relative amount of suspended bubbles in the medium.	Signed floating-point number	-
Cut off suspended bubbles	The parameter is only available for Promass Q.	Enter the cut off value for suspended bubbles. Below this value the Index for suspended bubbles' is set to 0.	Positive floating- point number	0.05

#### Parameter overview with brief description

## 12 Diagnostics and troubleshooting

## 12.1 General troubleshooting

#### For local display

Error	Possible causes	Remedy
Local display dark and no output signals	Supply voltage does not match that specified on the nameplate.	Apply the correct supply voltage .
Local display dark and no output signals	The polarity of the supply voltage is wrong.	Correct the polarity.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly. Terminals are not plugged into the main electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective. Main electronics module is defective.	Order spare part → 🗎 248.
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	<ul> <li>Set the display brighter by simultaneously pressing ± + E.</li> <li>Set the display darker by simultaneously pressing □ + E.</li> </ul>
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part $\rightarrow \square 248$ .
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures $\rightarrow \square 174$
Text on local display appears in a foreign language and cannot be understood.	Incorrect operating language is configured.	1. Press 2 s $\Box$ + $\textcircled{\bullet}$ ("home position"). 2. Press $\blacksquare$ . 3. Set the desired language in the <b>Display language</b> parameter ( $\rightarrow \blacksquare$ 137).
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	<ul> <li>Check the cable and the connector between the main electronics module and display module.</li> <li>Order spare part →</li></ul>

#### For output signals

Error	Possible causes	Remedial action
Signal output outside the valid range	Main electronics module is defective.	Order spare part → 🗎 248.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Parametrization errors	Check parameterization and correct it.
Device measures incorrectly.	Configuration error or device is operated outside the application.	<ol> <li>Check and correct parameter configuration.</li> <li>Observe limit values specified in the "Technical Data".</li> </ol>

#### For access

Problem	Possible causes	Remedy
No write access to parameters.	Hardware write protection is enabled.	Set the write protection switch on the main electronics module to the <b>OFF</b> position $\rightarrow \cong 147$ .
No write access to parameters.	Current user role has limited access authorization.	1. Check user role $\rightarrow \boxdot$ 56. 2. Enter correct customer-specific access code $\rightarrow \boxdot$ 56.
No connection to web server.	Web server is disabled.	Using the "FieldCare" or "DeviceCare" operating tool, check whether the Web server of the measuring device is enabled, and enable it if necessary $\rightarrow \cong 64$ .
	Incorrect settings for the Ethernet interface of the computer.	1. Check the properties of the Internet protocol (TCP/IP) → 🖹 $60$ → 🗎 $60$ . 2. Check the network settings with the IT manager.
No connection to web server.	Incorrect WLAN access data.	<ul> <li>Check WLAN network status.</li> <li>Log on to the device again using WLAN access data.</li> <li>Check that WLAN is enabled on the measuring device and operating device →  60.</li></ul>
	WLAN communication is disabled.	-
Not connecting to web server, FieldCare or DeviceCare.	No WLAN network available.	<ul> <li>Check if WLAN reception is present: LED on display module is lit blue</li> <li>Check if WLAN connection is enabled: LED on display module flashes blue</li> <li>Switch on instrument function.</li> </ul>
Network connection not present or unstable.	WLAN network is weak.	<ul> <li>Operating device is outside of reception range: Check network status on operating device.</li> <li>To improve network performance, use an external WLAN antenna.</li> </ul>
	Parallel WLAN and Ethernet communication.	<ul><li>Check network settings.</li><li>Temporarily enable only the WLAN as an interface.</li></ul>
Web browser is frozen and operation no longer possible.	Data transfer is active.	Wait until data transfer or current action is finished.
	Connection lost	<ol> <li>Check cable connection and power supply.</li> <li>Refresh the Web browser and restart if necessary.</li> </ol>
Content of web browser is incomplete or difficult to read.	Not using optimum version of Web server.	<ol> <li>Use the correct Web browser version</li> <li>→          ⇒ 58.         2. Clear the Web browser cache and restart the Web browser.     </li> </ol>
	Unsuitable view settings.	Change the font size/display ratio of the Web browser.
No or incomplete display of contents in the web browser.	<ul><li>JavaScript is not enabled</li><li>JavaScript cannot be enabled</li></ul>	1. Enable JavaScript. 2. Enter http://XXX.XXX.X.X.XX/servlet/ basic.html as the IP address.
Operation with FieldCare or DeviceCare is not possible via CDI-RJ45 service interface (port 8000).	Firewall of computer or network is preventing communication.	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/ DeviceCare access.
Flashing of firmware with FieldCare or DeviceCare via CDI-RJ45 service interface (via port 8000 or TFTP ports) is not possible.	Firewall of computer or network is preventing communication.	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/ DeviceCare access.


For system integration

Error	Possible causes	Remedy
The PROFINET device name is not displayed correctly and contains coding.	A device name containing one or more underscores has been specified via the automation system.	Specify a correct device name (without underscores) via the automation system.

## 12.2 Diagnostic information via light emitting diodes

#### 12.2.1 Transmitter

Different LEDs in the transmitter provide information on the device status.

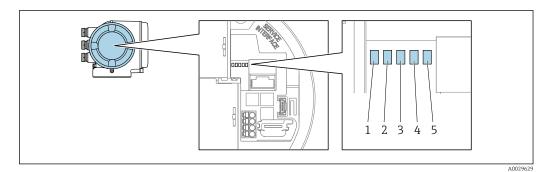

- 1 Supply voltage
- 2 Device status
- 3 Flashing/network status
- 4 Port 1 active: PROFINET with Ethernet-APL
- 5 Port 2 active: service interface (CDI)


LED		Color	Meaning
1	Supply voltage	Off	Supply voltage is off or too low.
		Green	Supply voltage is ok.
2		Off	Firmware error
	status (normal operation)	Green	Device status is ok.
		Flashing green	Device is not configured.
		Flashing red	A diagnostic event with "Warning" diagnostic behavior has occurred.
		Red	A diagnostic event with "Alarm" diagnostic behavior has occurred.
		Flashing red/green	The device restarts/self-test.
3	Flashing/network status	Green	Cyclic data exchange is active.
		Flashing green	Following request from automation system: Flash frequency: 1 Hz (flash functionality: 500 ms on, 500 ms off)
			If no "Name of Station" is defined: Flash frequency: 4 Hz Display: no "Name of Station" available.
		Red	IP address is available but there is no connection to the automation system
		Flashing red	Cyclic data exchange was active but the connection was disconnected: Flash frequency: 3 Hz

LED		Color	Meaning
4	Port 1 active:	Off	Not connected or no connection established.
	PROFINET with Ethernet-APL	White	Connection available, no active communication
		Flashing white	Connection with active communication
5	Port 2 active:	Off	Not connected or no connection established.
	Service interface (CDI- RJ45)	Amber	Connection available but no activity.
		Flashing amber	Activity present.

## 12.3 Diagnostic information on local display

#### 12.3.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

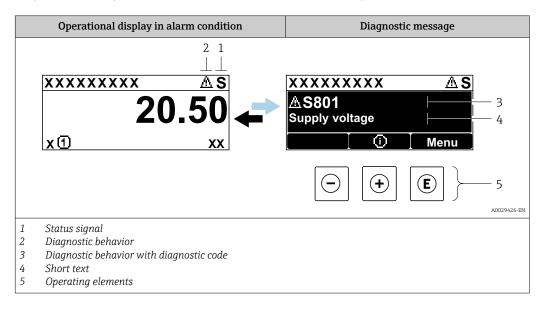


If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

Other diagnostic events that have occurred can be displayed in the **Diagnostics** menu:

#### Status signals

 •

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).



= Maintenance Required

Symbol	Meaning		
F	<b>Failure</b> A device error has occurred. The measured value is no longer valid.		
<b>C Function check</b> The device is in service mode (e.g. during a simulation).			
S	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)		
М	Maintenance required Maintenance is required. The measured value remains valid.		

#### Diagnostic behavior


Symbol	Meaning		
8	<ul> <li>Alarm</li> <li>Measurement is interrupted.</li> <li>Signal outputs and totalizers assume the defined alarm condition.</li> <li>A diagnostic message is generated.</li> </ul>		
Δ	Warning Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.		

#### **Diagnostic information**

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

#### **Operating elements**

Кеу	Meaning
+	<b>Plus key</b> <i>In a menu, submenu</i> Opens the message about remedy information.
E	<b>Enter key</b> <i>In a menu, submenu</i> Opens the operating menu.

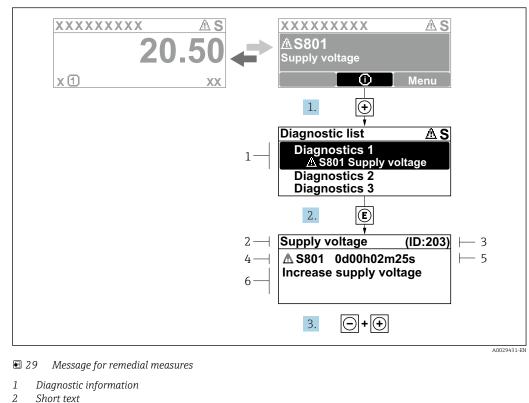

#### 12.3.2 Calling up remedial measures

- 3 Service ID
- Diagnostic behavior with diagnostic code 4
- 5 Operation time when error occurred
- 6 Remedial measures

1. The user is in the diagnostic message.

Press 🛨 (① symbol).

- └ The **Diagnostic list** submenu opens.
- **2.** Select the desired diagnostic event with  $\pm$  or  $\Box$  and press  $\mathbb{E}$ .
  - └ The message about the remedial measures opens.
- 3. Press  $\Box$  +  $\pm$  simultaneously.
  - └ The message about the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the Diagnostic list submenu or Previous diagnostics parameter.

- 1. Press E.
  - └ The message for the remedial measures for the selected diagnostic event opens.
- **2.** Press  $\Box$  +  $\pm$  simultaneously.
  - └ The message for the remedial measures closes.

#### 12.4 Diagnostic information in the Web browser

#### 12.4.1 **Diagnostic options**

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

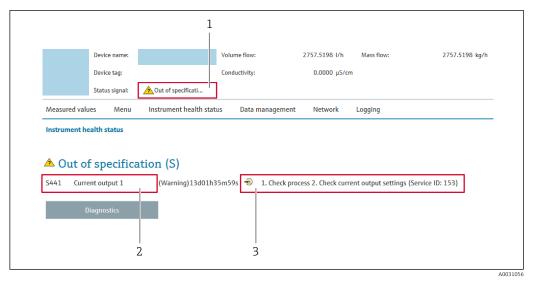

- 1 Status area with status signal
- 2 Diagnostic information
- 3 Remedial measures with service ID

In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter  $\rightarrow \cong 240$

#### Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning		
$\otimes$	<b>Failure</b> A device error has occurred. The measured value is no longer valid.		
V	<b>Function check</b> The device is in the service mode (during a simulation, for example).		
2	Out of specification The device is being operated: Outside its technical specification limits (e.g. outside the process temperature range)		
	Maintenance required Maintenance is required. The measured value is still valid.		

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.


#### 12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

#### 12.5 Diagnostic information in FieldCare or DeviceCare

#### 12.5.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

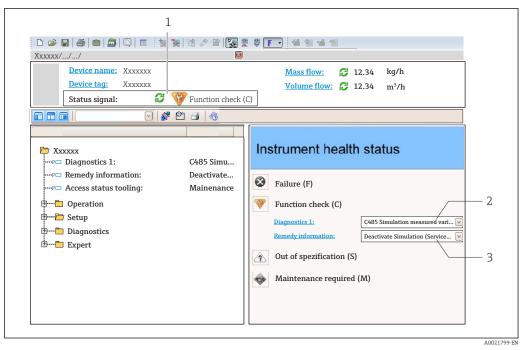

- 1 Status area with status signal  $\rightarrow \square 168$
- 2 Diagnostics information  $\rightarrow \square 169$
- 3 Remedial measures with service ID

In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter → 
   <sup>(1)</sup> 240
- Via submenu → 🖺 241

#### **Diagnostic information**

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

#### 12.5.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

• On the home page

Remedy information is displayed in a separate field below the diagnostics information. In the **Diagnostics** menu

Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

1. Call up the desired parameter.

2. On the right in the working area, mouse over the parameter.

← A tool tip with remedy information for the diagnostic event appears.

## 12.6 Adapting the diagnostic information

#### 12.6.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

 $\mathsf{Expert} \rightarrow \mathsf{System} \rightarrow \mathsf{Diagnostic} \ \mathsf{handling} \rightarrow \mathsf{Diagnostic} \ \mathsf{behavior}$ 


#### Available diagnostic behaviors

The following diagnostic behaviors can be assigned:

Diagnostic behavior	Description
Alarm	The device stops measurement. The totalizers assume the defined alarm condition. A diagnostic message is generated.
Warning	The device continues to measure. Measured value output via PROFINET and totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is only displayed in the <b>Event logbook</b> submenu ( <b>Event list</b> submenu) and is not displayed in alternating sequence with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

#### Displaying the measured value status

If modules with input data (e.g. Analog Input module, Discrete Input module, Totalizer module, Heartbeat module) are configured for cyclic data transmission, the measured value status is coded as per PROFINET PA Profile 4 Specification and transmitted along with the measured value to the PROFINET Controller via the status byte. The status byte is split into three segments: Quality, Quality Substatus and Limits.

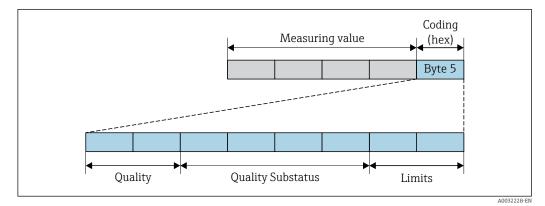

☑ 30 Structure of the status byte

The content of the status byte depends on the configured failure mode in the individual function block. Depending on which failure mode has been configured, status information in accordance with PROFINET PA Profile Specification 4 is transmitted to the the PROFINET with Ethernet-APL controller via the status byte status information. The two bits for the limits always have the value 0.

Status	Coding (hex)
BAD - Maintenance alarm	0x24 to 0x27
BAD - Process related	0x28 to 0x2B
BAD - Function check	0x3C to 0x3F
UNCERTAIN - Initial value	0x4C to 0x4F
UNCERTAIN - Maintenance demanded	0x68 to 0x6B
UNCERTAIN - Process related	0x78 to 0x7B
GOOD - OK	0x80 to 0x83
GOOD - Maintenance required	0xA4 to 0xA7
GOOD - Maintenance demanded	0xA8 to 0xAB
GOOD - Function check	0xBC to 0xBF

#### Supported status information

## 12.7 Overview of diagnostic information

- The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.
  - All of the measured variables affected in the entire Promass instrument family are always listed under "Measured variables affected". The measured variables available for the device in question depend on the device version. When assigning the measured variables to the device functions, for example to the individual outputs, all of the measured variables available for the device version in question are available for selection.

In the case of some items of diagnostic information, the diagnostic behavior can be changed. Adapting the diagnostic information  $\rightarrow \cong 173$ 

Diagnostic information					Remedy instructions
No.	S	hort text			
002	Sensor unknown		1. Check if the correct		
	Measured variable status		2. Check if the 2-D ma	atrix code on the sensor is undamaged	
	Quality	Good		1	
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83			
	Status signal	F		1	
	Diagnostic behavior	Alarm			
	Influenced measured variable	es		1	
	Influenced measured variables• Oscillation amplitude 1• Sensor electronics• Oscillation amplitude 2• GSV flow• Application specific output• GSV flow alternati• Application specific output• GSV flow alternati• Signal asymmetry• Mass flow• Carrier mass flow• Oil mass flow• Carrier pipe temperature• Water mass flow• Target corrected volume flow• Inhomogeneous m• Carrier corrected volume flow• Suspended bubbles• Sensor index coil asymmetry• HBSI• Concentration• NSV flow• Measured values• NSV flow alternati• Oscillation damping 1• External pressure• Oscillation damping 2• Exciter current 1• Density• Oscillation frequer• Water density• Oscillation frequer• Water density• Oscillation frequer• Test point• Raw value mass flow		ve edium index s index ve icy 1 icy 2	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>	

## 12.7.1 Diagnostic of sensor

	Diagnostic in	formation	<b>Remedy instructions</b>		
No.	Short text				
022	Temperature sensor defective		1. If available: Check connection cable between sensor and transmitter		
	Measured variable status		<ol> <li>Check or replace sensor electronic module (ISEM)</li> <li>Replace sensor</li> </ol>		
	Quality	Good			
	Quality substatus 0	Dk			
	Coding (hex)	0x80 to 0x83			
	Status signal F	7			
	Diagnostic behavior A	Alarm			
	Influenced measured variables				
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperature</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous mass flow</li> <li>Inhomogeneous mass</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Oscillation frequent</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asymptotic formation of the symptotic sy</li></ul>	<ul> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>edium index</li> <li>Frequency fluctuation 1</li> <li>index</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Carrier volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>cy 1</li> <li>Volume flow</li> <li>Water volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>		

Diagnostic information			Remedy instructions
No.	Short text		
046	Sensor limit exceeded		1. Check process conditions
	Measured variable status [from the factory] <sup>1)</sup>		2. Check sensor
	Quality Go	ood	
	Quality substatus Ol	k	
	Coding (hex) 02	x80 to 0x83	
	Status signal S		
	Diagnostic behavior W	Varning	
	Influenced measured variables		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperature</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous mage statements</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequere</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyne</li> <li>(ISEM)</li> </ul>	<ul> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>edium index</li> <li>Frequency fluctuation 1</li> <li>Sindex</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic in	formation	Remedy instructions		
No.	Short text				
062	Sensor connection faulty		1. If available: Check connection cable between sensor and transmitter		
	Measured variable status		<ol> <li>Check or replace sensor electronic module (ISEM)</li> <li>Replace sensor</li> </ol>		
	Quality	Good			
	Quality substatus 0	Dk			
	Coding (hex)	0x80 to 0x83			
	Status signal F	7			
	Diagnostic behavior A	Alarm			
	Influenced measured variables				
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperature</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous measure</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequen</li> <li>Oscillation frequen</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asymptic</li> <li>e (ISEM)</li> </ul>	Oil corrected volume flow         Water corrected volume flow         Oscillation damping fluctuation 1         Oscillation damping fluctuation 2         edium index         Frequency fluctuation 1         index         Frequency fluctuation 2         Target mass flow         Carrier volume flow         Target volume flow         Target volume flow         Temp. compensated dynamic viscosity         Temperature         cy 1         Volume flow         Water volume flow         Water volume flow         Water volume flow		

Diagnostic information			Remedy instructions
No.	Sho	rt text	
063	Exciter current faulty		1. If available: Check connection cable between sensor and transmitter
	Measured variable status		<ol> <li>Check or replace sensor electronic module (ISEM)</li> <li>Replace sensor</li> </ol>
	Quality G	Good	•
	Quality substatus 0	)k	
	Coding (hex) 0:	0x80 to 0x83	
	Status signal F		
	Diagnostic behavior A	Alarm	
	Influenced measured variables		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperature</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alternati</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubble</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternati</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequer</li> <li>Oscillation frequer</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asy:</li> <li>e (ISEM)</li> </ul>	<ul> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>edium index</li> <li>Frequency fluctuation 1</li> <li>Sindex</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Cy 1</li> <li>Volume flow</li> <li>Water volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

Diagnostic information					Remedy instructions
No.	Short text				
082	Data storage inconsistent			Check module connections	
	Measured variable status			1	
	Quality	Good		]	
	Quality substatus	Ok		1	
	Coding (hex)	0x80 to 0x83		1	
	Status signal	F			
	Diagnostic behavior	Alarm		-	
	Influenced measured variable	es		1	
	<ul> <li>Oscillation amplitude 1</li> <li>Sensor electronics</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Density</li> <li>Oscillation frequer</li> <li>Water density</li> <li>Oscillation frequer</li> <li>Test point</li> <li>Raw value mass flow</li> </ul>		ve edium index s index ve ucy 1 ucy 2 ow	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>	

	Diagnostic information				Remedy instructions
No.	Short text				
083	Memory content inconsistent			1. Restart device	
	Measured variable status			2. Restore S-DAT data 3. Replace S-DAT	
	Quality	Good			
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83			
	Status signal	F			
	Diagnostic behavior	Alarm			
	Influenced measured variables				
	Influenced measured variables  Oscillation amplitude 1 Oscillation specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Sensor index coil asymmetry Concentration Measured values Oscillation damping 1 Oscillation damping 2 Density Vater density Test point Test point Dynamic viscosity		<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequere</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyn</li> </ul>	ve edium index s index ve ucy 1 ucy 2 ow	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic	information			Remedy instructions
No.	SI	hort text			
119	Sensor initialization active Measured variable status			Sensor initialization in	n progress, please wait
	Quality	Good			
	Quality substatus	Ok		-	
	Coding (hex)	0x80 to 0x83		-	
	Status signal	С		-	
	Diagnostic behavior	Warning		-	
	Influenced measured variables			1	
	Influenced measured variables  Oscillation amplitude 1 Oscillation amplitude 2 Application specific output Application specific output Signal asymmetry Carrier mass flow Carrier pipe temperature Target corrected volume flow Carrier corrected volume flow Sensor index coil asymmetry Concentration Measured values Oscillation damping 1 Oscillation damping 2 Density Oil density Water density Test point Test point		<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Oscillation frequent</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyrt</li> </ul>	ve edium index s index ve hcy 1 hcy 2 bw	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

Diagnostic information			Remedy instructions	
No.	S	hort text		
L40	Sensor signal asymmetrical		1. If available: Check connection cable between sensor and transmitter	
	Measured variable status [from the factory] <sup>1)</sup>		<ol> <li>Check or replace sensor electronic module (ISEM)</li> <li>Replace sensor</li> </ol>	
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Alarm		
	Influenced measured variabl	es		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flo</li> <li>Carrier corrected volume flo</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	w • Suspended bubbles	<ul> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Cy 1</li> <li>Volume flow</li> <li>Oil volume flow</li> </ul>	

	Diagnostic	information	Remedy instructions
No.	SI	hort text	
141	Zero adjustment failed		1. Check process conditions
	Measured variable status		2. Repeat commissioning procedure 3. Check sensor
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variable	2S	1
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	w • Suspended bubbles	<ul> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Scillation damping fluctuation 2</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

Diagnostic information				Remedy instructions
Jo.	Short text			
.42	Sensor index coil asymmetry t	oo high	Check sensor	
	Measured variable status [fr	om the factory] <sup>1)</sup>		
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83	-	
	Status signal	S	-	
	Diagnostic behavior	Warning	_	
	Influenced measured variabl	Influenced measured variables		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flo</li> <li>Carrier corrected volume flo</li> <li>Carrier corrected volume flo</li> <li>Sensor index coil asymmetr</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	w • Suspended bubbles	ve y nedium index s index ve ncy 1 ncy 2 ow	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic inf	formation	<b>Remedy instructions</b>
No.	Sho	rt text	
144	Measurement error too high		1. Check process conditions
	Measured variable status [from	1 the factory] <sup>1)</sup>	2. Check or change sensor
	Quality G	Good	
	Quality substatus C	Dk	
	Coding (hex) 0	0x80 to 0x83	
	Status signal F	·	
	Diagnostic behavior A	Alarm	
	Influenced measured variables		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperature</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous measure</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequen</li> <li>Oscillation frequen</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asymptet</li> <li>E (ISEM)</li> </ul>	<ul> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>index</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>cy 1</li> <li>Volume flow</li> <li>Water volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic information				Remedy instructions
No.	S	hort text			
201	Electronics faulty			1. Restart device	
	Measured variable status			2. Replace electronics	
	Quality	Good			
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83			
	Status signal	F			
	Diagnostic behavior	Alarm		-	
	Influenced measured variables			1	
	Influenced measured variablesOscillation amplitude 1Sensor electronicsOscillation amplitude 2GSV flowApplication specific outputGSV flow alternatiApplication specific outputKinematic viscositySignal asymmetryMass flowCarrier mass flowOil mass flowCarrier pipe temperatureWater mass flowTarget corrected volume flowInhomogeneous mSensor index coil asymmetryHBSIConcentrationNSV flowMeasured valuesNSV flowOscillation damping 1External pressureOscillation damping 2Exciter current 1DensityOscillation frequerWater densityOscillation frequerTest pointRaw value mass flow		ve edium index s index ve ncy 1 ncy 2	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>	

## 12.7.2 Diagnostic of electronic

	Diagnostic	information	Remedy instructions
No.	SI	hort text	
242	Firmware incompatible		1. Check firmware version
	Measured variable status		2. Flash or replace electronic module
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variable	es	
	Carrier corrected volume flowSuspendSensor index coil asymmetryHBSIConcentrationNSV flowMeasured valuesNSV flowOscillation damping 1ExternalOscillation damping 2Exciter ofDensityOscillatiWater densityOscillatiTest pointRaw valueS&W volS&W vol		<ul> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>edium index</li> <li>Frequency fluctuation 1</li> <li>Sindex</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temp. compensated kinematic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> </ul>

	Diagnostic	information			Remedy instructions
No.	S	hort text			
252	Module incompatible			1. Check electronic mo	
	Measured variable status			<ol> <li>Check if correct mo</li> <li>Replace electronic r</li> </ol>	dules are available (e.g. NEx, Ex) nodules
	Quality	Good			
	Quality substatus	Ok		1	
	Coding (hex)	0x80 to 0x83			
	Status signal	F		]	
	Diagnostic behavior	Alarm		1	
	Influenced measured variables				
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flor</li> <li>Carrier corrected volume flor</li> <li>Carrier corrected volume flor</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	W	<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Oscillation frequent</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyr</li> </ul>	ve edium index s index ve ucy 1 ucy 2 ow	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic	information			Remedy instructions
No.	SI	hort text			
262	Module connection interrupted				nnection cable between sensor electronic module
	Measured variable status			(ISEM) and main ele 2. Check or replace ISE	
	Quality	Good			
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83		-	
	Status signal	F		-	
	Diagnostic behavior	Alarm			
	Influenced measured variables				
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> </ul>		<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Oscillation frequent</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyn</li> </ul>	ve edium index s index ve ucy 1 ucy 2 ow	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic	information			<b>Remedy instructions</b>
No.	SI	hort text			
270	Main electronics defective			1. Restart device	
	Measured variable status			2. Replace main electr	onic module
	Quality	Good			
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83			
	Status signal	F			
	Diagnostic behavior	Alarm			
	Influenced measured variables		1		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	W	<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyrt</li> </ul>	ve edium index s index ve kcy 1 kcy 2 ww	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic	information			Remedy instructions
No.	SI	hort text			
271	Main electronics faulty			1. Restart device	
	Measured variable status			2. Replace main electr	ronic module
	Quality	Good			
	Quality substatus	Ok		-	
	Coding (hex)	0x80 to 0x83		-	
	Status signal	F		-	
	Diagnostic behavior	Alarm		-	
	Influenced measured variables			1	
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> </ul>		<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyrt</li> </ul>	ve edium index s index ve hcy 1 hcy 2 bw	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic	information			Remedy instructions
No.	SI	hort text			
272	Main electronics faulty Measured variable status		Restart device		
	Quality	Good		]	
	Quality substatus	Ok		1	
	Coding (hex)	0x80 to 0x83		1	
	Status signal	F			
	Diagnostic behavior	Alarm			
	Influenced measured variables		1		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	N W J	<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequen</li> <li>Oscillation frequen</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyr</li> </ul>	ve edium index s index ve kcy 1 kcy 2 ww	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic	information	Remedy instructions
No.	SI	hort text	
273	Main electronics defective		1. Pay attention to display emergency operation
	Measured variable status		2. Replace main electronics
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variable	es	I
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>GSV flow a</li> <li>Application specific output</li> <li>GSV flow a</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Mass flow</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Water mass</li> <li>Target corrected volume flow</li> <li>Inhomoger</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>HBSI</li> <li>Concentration</li> <li>NSV flow a</li> <li>Oscillation damping 1</li> <li>Exciter currer</li> <li>Oscillation damping 2</li> <li>Exciter currer</li> <li>Oil density</li> <li>Oscillation</li> <li>Water density</li> <li>Test point</li> <li>Saw volum</li> <li>Dynamic viscosity</li> <li>Torsion sig</li> </ul>		<ul> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>edium index</li> <li>Frequency fluctuation 1</li> <li>Scindex</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> </ul>

	<b>Diagnostic</b>	information			Remedy instructions
No.	SI	hort text			
275	I/O module defective			Change I/O module	
	Measured variable status				
	Quality	Good		1	
	Quality substatus	Ok		1	
	Coding (hex)	0x80 to 0x83			
	Status signal	F			
	Diagnostic behavior	Alarm			
	Influenced measured variables		1		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	W	<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyrt</li> </ul>	ve edium index s index ve kcy 1 kcy 2 ww	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic i	information			Remedy instructions
No.	SI	hort text			
276	I/O module faulty		1. Restart device		
	Measured variable status			2. Change I/O module	
	Quality	Good			
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83			
	Status signal	F			
	Diagnostic behavior	Alarm		-	
	Influenced measured variables			1	
	Influenced measured variables• Oscillation amplitude 1• Sensor electronics• Oscillation amplitude 2• GSV flow• Application specific output• GSV flow alternati• Application specific output• Kinematic viscosity• Signal asymmetry• Mass flow• Carrier mass flow• Oil mass flow• Carrier pipe temperature• Water mass flow• Target corrected volume flow• Suspended bubbles• Sensor index coil asymmetry• HBSI• Concentration• NSV flow• Measured values• NSV flow alternati• Oscillation damping 1• External pressure• Oscillation damping 2• Exciter current 1• Density• Oscillation frequer• Water density• Oscillation frequer• Test point• Raw value mass flow		ve edium index s index ve ucy 1 ucy 2	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>	

	Diagnostic	information			Remedy instructions
Io.	SI	hort text			
83	Memory content inconsistent		Restart device		
	Measured variable status				
	Quality	Good			
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83		-	
	Status signal	F		-	
	Diagnostic behavior	Alarm		-	
	Influenced measured variables			1	
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	W	<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asymption</li> </ul>	ve edium index s index ve ucy 1 ucy 2 ow	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic	information	Remedy instructions
No.	SI	hort text	
302	Device verification active		Device verification active, please wait.
	Measured variable status [fro	om the factory] <sup>1)</sup>	1
	Quality	Good	
	Quality substatus	Function check	
	Coding (hex)	0xBC to 0xBF	
	Status signal	С	-
	Diagnostic behavior	Warning	-
	Influenced measured variable	es	1
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	w • Suspended bubble	<ul> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>S index</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Nolume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water volume flow</li> </ul>

	Diagnos	stic information	Remedy instructions
No.	No. Short text		
303	I/O 1 to n configuration changed		1. Apply I/O module configuration (parameter 'Apply I/O configuration')
	Measured variable status		2. Afterwards reload device description and check wiring
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	M	
	Diagnostic behavior	Warning	
	Influenced measured variables		
1	-		

	Diagnostic	information	Remedy instructions
о.	SI	hort text	
)4	Device verification failed		1. Check verification report
	Measured variable status [from the factory] 1)		<ol> <li>Repeat commissioning procedure</li> <li>Check sensor</li> </ol>
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		I
	<ul> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> </ul>	w • Suspended bubbles	<ul> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>edium index</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Outperature</li> <li>Oll colume flow</li> </ul>

	Diagnostic	information			Remedy instructions
No.	SI	hort text			
311			Maintenance required!		
	Measured variable status			Do not reset device	
	Quality	Good			
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83		-	
	Status signal	М		-	
	Diagnostic behavior	Warning		-	
	Influenced measured variables			1	
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Oscillation specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Warrier corrected volume flow</li> <li>Inhtering Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Exx</li> <li>Oscillation damping 2</li> <li>Exx</li> <li>Oil density</li> <li>Os</li> <li>Water density</li> <li>Os</li> </ul>		<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Oscillation frequent</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyrt</li> </ul>	ve / edium index s index ve ve hcy 1 hcy 2 ww	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic	nformation			Remedy instructions
No.	SI	nort text			
330	Flash file invalid			1. Update firmware of	device
	Measured variable status			2. Restart device	
	Quality	Good			
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83		-	
	Status signal	М		-	
	Diagnostic behavior	Warning		-	
	Influenced measured variables		1		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	N	<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyrt</li> </ul>	ve edium index s index ve ucy 1 ucy 2 ow	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic	information	Remedy instructions
No.	SI	hort text	
331	Firmware update failed		1. Update firmware of device
	Measured variable status		2. Restart device
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Warning	
	Influenced measured variable	es	1
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	w • Suspended bubbles	<ul> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Scillation damping fluctuation 2</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temp. compensated kinematic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic	information			Remedy instructions
No.	SI	hort text			
332	Writing in HistoROM backup failed			1. Replace user interfa	
	Measured variable status			2. Ex d/XP: replace tra	ansmitter
	Quality	Good			
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83		-	
	Status signal	F		-	
	Diagnostic behavior	Alarm		-	
	Influenced measured variables			1	
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	W	<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyrt</li> </ul>	ve edium index s index ve ucy 1 ucy 2 ow	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

Diagnostic information			Remedy instructions
No.	SI	hort text	
361	I/O module 1 to n faulty		1. Restart device
	Measured variable status		<ol> <li>Check electronic modules</li> <li>Change I/O module or main electronics</li> </ol>
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variable	2S	
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	w • Suspended bubbles	<ul> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>edium index</li> <li>Frequency fluctuation 1</li> <li>Scillation damping fluctuation 2</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temp. compensated kinematic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

Diagnostic information					Remedy instructions
No.	Short text				
369	Matrix code scanner defective	Matrix code scanner defective			canner
	Measured variable status				
	Quality	Good		]	
	Quality substatus	Ok		1	
	Coding (hex)	0x80 to 0x83		1	
	Status signal	F			
	Diagnostic behavior	Alarm			
	Influenced measured variables			1	
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	W	<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Oscillation frequent</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyr</li> </ul>	ve edium index s index ve kcy 1 kcy 2 ww	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic	information			Remedy instructions
No.	Short text				
371	Temperature sensor defective			Contact service	
	Measured variable status				
	Quality	Good		-	
	Quality substatus	Ok		-	
	Coding (hex)	0x80 to 0x83		-	
	Status signal	М		-	
	Diagnostic behavior	Warning		-	
	Influenced measured variables				
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> </ul>		<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Oscillation frequent</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyrt</li> </ul>	ve edium index s index ve hcy 1 hcy 2 bw	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic	information			Remedy instructions
No.	. Short text				
372	Sensor electronics (ISEM) fault	у		1. Restart device	
	Measured variable status			<ol> <li>Check if failure recurs</li> <li>Replace sensor electron</li> </ol>	
	Quality	Good			
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83			
	Status signal	F			
	Diagnostic behavior	Alarm			
	Influenced measured variables			•	
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> </ul>		<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Oscillation frequent</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyrt</li> </ul>	ve edium index s index ve ucy 1 ucy 2 ow	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic information				Remedy instructions
No.	Short text				
373	Sensor electronics (ISEM) fault	у		Transfer data or reset	device
	Measured variable status			1	
	Quality	Good			
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83			
	Status signal	F			
	Diagnostic behavior	Alarm			
	Influenced measured variables			1	
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	<ul> <li>GSV flue</li> <li>GSV flue</li> <li>GSV flue</li> <li>Kinem</li> <li>Mass f</li> <li>Oil ma</li> <li>Water</li> <li>Water</li> <li>Water</li> <li>Water</li> <li>Susper</li> <li>HBSI</li> <li>NSV fl</li> <li>NSV fl</li> <li>NSV fl</li> <li>Exciten</li> <li>Exciten</li> <li>Exciten</li> <li>Exciten</li> <li>Exciten</li> <li>Oscilla</li> <li>Oscilla</li> <li>Raw va</li> <li>S&amp;W v</li> </ul>	ow atic viscosity low ss flow mass flow ogeneous m ided bubbles	ve hedium index s index ve hey 1 hey 2 bw	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

Diagnostic information			Remedy instructions
No.	Short text		
374	Sensor electronics (ISEM) faulty		1. Restart device
	Measured variable status [from	the factory] <sup>1)</sup>	<ol> <li>Check if failure recurs</li> <li>Replace sensor electronic module (ISEM)</li> </ol>
	Quality Go	ood	
	Quality substatus Ol	k	
	Coding (hex)	x80 to 0x83	
	Status signal S		
	Diagnostic behavior W	Varning	
	Influenced measured variables		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperature</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Oscillation frequent</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asymptotic (ISEM)</li> </ul>	Oil corrected volume flow         Water corrected volume flow         Oscillation damping fluctuation 1         Oscillation damping fluctuation 2         edium index         Frequency fluctuation 1         index         Frequency fluctuation 2         Target mass flow         Carrier volume flow         Target volume flow         Temp. compensated dynamic viscosity         Temperature         volume flow         Volume flow         Volume flow         Water volume flow         Water volume flow

	Diagnostic	information	Remedy instructions
No.	SI	hort text	
375	I/O- 1 to n communication fail	ed	1. Restart device
	Measured variable status		<ol> <li>Check if failure recurs</li> <li>Replace module rack inclusive electronic modules</li> </ol>
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	-
	Influenced measured variables		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alternative</li> <li>GSV flow alternative</li> <li>Kinematic viscosi</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous results</li> <li>W suspended bubble</li> </ul>	y Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Not 1 Volume flow Oil volume flow Water volume flow Water cut

	Diagnostic	information			Remedy instructions
No.	S	hort text			
378	Supply voltage ISEM faulty				connection cable between sensor and transmitter
	Measured variable status			<ol> <li>Replace main electr</li> <li>Replace sensor electr</li> </ol>	
	Quality	Good			
	Quality substatus	Ok		1	
	Coding (hex)	0x80 to 0x83		1	
	Status signal	F			
	Diagnostic behavior	Alarm		1	
	Influenced measured variables				
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flor</li> <li>Carrier corrected volume flor</li> <li>Carrier corrected volume flor</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	W	<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequen</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyr</li> </ul>	ve edium index s index ve kcy 1 kcy 2 ww	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic information				Remedy instructions
No.	Short text				
382	Data storage			1. Insert T-DAT	
	Measured variable status			2. Replace T-DAT	
	Quality	Good			
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83		1	
	Status signal	F			
	Diagnostic behavior	Alarm			
	Influenced measured variables			1	
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> </ul>		<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyr</li> </ul>	ve edium index s index ve ve ucy 1 ucy 2 ow	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

Diagnostic information					Remedy instructions
No.	Short text				
883	Memory content		Reset device		
	Measured variable status				
	Quality	Good		]	
	Quality substatus	Ok		1	
	Coding (hex)	0x80 to 0x83		1	
	Status signal	F			
	Diagnostic behavior	Alarm			
	Influenced measured variables		1		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	W	<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyn</li> </ul>	ve edium index s index ve kcy 1 kcy 2 ww	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic	information	Remedy instructions
No.	Short text		
387	HistoROM data faulty		Contact service organization
	Measured variable status		
	Quality	Good	-
	Quality substatus	Ok	-
	Coding (hex)	0x80 to 0x83	-
	Status signal	F	-
	Diagnostic behavior	Alarm	-
	Influenced measured variable	es	
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alternat</li> <li>Kinematic viscosit</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Water mass flow</li> <li>Mater mass flow</li> <li>Suspended bubble</li> </ul>	y Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Target mass flow Carrier volume flow Carrier volume flow Target volume flow Temp. compensated dynamic viscosity Temperature Not 1 Volume flow Oil volume flow Water volume flow Water cut

	Diagnostic information				Remedy instructions
No.	S	hort text			
410	Data transfer failed			1. Retry data transfer	
	Measured variable status			2. Check connection	
	Quality	Good			
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83			
	Status signal	F		-	
	Diagnostic behavior	Alarm		-	
	Influenced measured variables			1	
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flor</li> <li>Carrier corrected volume flor</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	W	<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequer</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyn</li> </ul>	ve edium index s index ve ucy 1 ucy 2 ow	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

## 12.7.3 Diagnostic of configuration

Diagnostic information					Remedy instructions
No.	Short text				
412	Processing download Measured variable status		Download active, please wait		
	Quality	Good			
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83			
	Status signal	С		-	
	Diagnostic behavior	Warning		-	
	Influenced measured variable	es			
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>		<ul> <li>Sensor electronics temperature (ISEM)</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous medium index</li> <li>Suspended bubbles index</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequency 1</li> <li>Oscillation frequency 2</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asymmetry</li> </ul>		<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagno	stic information	Remedy instructions
lo.	Short text		
31	Trim 1 to n required		Carry out trim
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	С	
	Diagnostic behavior	Warning	
	Influenced measured var	iables	
	-		

	Diagnostic information				Remedy instructions
No.	SI	hort text			
437	37 Configuration incompatible			1. Update firmware	
	Measured variable status			2. Execute factory reset	
	Quality	Good			
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83		-	
	Status signal	F		-	
	Diagnostic behavior	Alarm		-	
	Influenced measured variables			1	
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	W	<ul> <li>Sensor electronics</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyrt</li> </ul>	ve edium index s index ve ucy 1 ucy 2 ow	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic	information			Remedy instructions
No.	Short text				
438	Dataset different			1. Check dataset file	
	Measured variable status			<ol> <li>Check device parame</li> <li>Download new device</li> </ol>	
	Quality	Good			_
	Quality substatus	Ok			
	Coding (hex)	0x80 to 0x83			
	Status signal	М			
	Diagnostic behavior	Warning			
	Influenced measured variable	es			
	<ul> <li>Oscillation amplitude 1</li> <li>Sensor electronics to GSV flow</li> <li>Application specific output</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Suspended bubbles</li> <li>Sensor index coil asymmetry</li> <li>Mass flow</li> <li>Suspended bubbles</li> <li>Sensor index coil asymmetry</li> <li>Mass flow</li> <li>Concentration</li> <li>MSV flow</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Density</li> <li>Oscillation frequen</li> <li>Water density</li> <li>Oscillation frequen</li> <li>Water density</li> <li>Sexiter current 2</li> <li>Oscillation frequen</li> <li>Test point</li> <li>Raw value mass flow</li> </ul>		ve edium index s index ve ucy 1 ucy 2	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>	

	Diagnos	stic information	Remedy instructions
No.		Short text	
441	Current output 1 to n satu	rated	1. Check current output settings
	Measured variable status		2. Check process
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		1
	-		

	Diagnostic	information	<b>Remedy instructions</b>
No.	S	hort text	
442	Frequency output 1 saturated		1. Check frequency output settings
	Measured variable status		2. Check process
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	-		

	Diagnos	stic information	Remedy instructions
No.		Short text	
443	Pulse output 1 saturated		1. Check pulse output settings
	Measured variable status [from the factory] <sup>1)</sup>		2. Check process
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	-		

	Diagnostic	information	Remedy instructions
No.	2	Short text	
444	Current input 1 to n saturated	1	1. Check current input settings
	Managinal region $h_{0}$ atom $h_{0}$ from the factor $1^{1/2}$		<ol> <li>Check connected device</li> <li>Check process</li> </ol>
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	Measured values		

	Diagnostic in	formation		Remedy instructions
No.	Sho	Short text		
453	Flow override active		Deactivate flow override	
	Measured variable status			
	Quality C	Good		
	Quality substatus 0	)k		
	Coding (hex)	0x80 to 0x83		
	Status signal C	]		
	Diagnostic behavior V	Warning		
	Influenced measured variables		I	
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperature</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous measure</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequen</li> <li>Oscillation frequen</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asymptic</li> <li>e (ISEM)</li> </ul>	edium index index ze cy 1 cy 2 w	<ul> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic information				Remedy instructions
No.	Sho	rt text			
484	Failure mode simulation active			Deactivate simulation	
	Measured variable status				
	Quality G	Good			
	Quality substatus C	)k			
	Coding (hex) 0	0x80 to 0x83			
	Status signal C	2			
	Diagnostic behavior A	Alarm			
	Influenced measured variables				
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperature</li> </ul>	Kine Mas: Oil n Wat Inho Susp HBSI NSV NSV Exte Excit Excit Excit Socil Oscil Raw S&W Tors	flow alternativ matic viscosity s flow nass flow er mass flow mogeneous mo ended bubbles	edium index s index ve cy 1 cy 2 w	<ul> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic ir	oformation		Remedy instructions
No.	Sh	ort text		
485	Process variable simulation active		Deactivate simulation	
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	С		
	Diagnostic behavior	Warning		
	Influenced measured variables	5		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperature</li> </ul>	<ul> <li>Suspended bit</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alte</li> <li>External press</li> <li>Exciter curree</li> <li>Exciter curree</li> <li>Oscillation fr</li> <li>Oscillation fr</li> <li>Raw value m</li> <li>S&amp;W volume</li> <li>Torsion signal</li> </ul>	cosity low bus medium index abbles index ernative sure at 1 at 2 equency 1 equency 2 ass flow flow 1 asymmetry	<ul> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnosti	c information	Remedy instructions
No.		Short text	
486	Current input 1 to n simulation	on active	Deactivate simulation
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	С	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	Measured values		

	Diagnostic	information	<b>Remedy instructions</b>
No.	S	hort text	
491	Current output 1 to n simulation	on active	Deactivate simulation
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	С	
	Diagnostic behavior	Warning	
	Influenced measured variable	es	
	-		

	Diagnos	tic information	Remedy instructions
No.	Short text		
492	Frequency output 1 to n sir	nulation active	Deactivate simulation frequency output
	Measured variable status		1
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	С	
	Diagnostic behavior	Warning	
	Influenced measured vari	ables	
	-		

	Diagnos	stic information	Remedy instructions
No.		Short text	
493	3 Pulse output simulation active		Deactivate simulation pulse output
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	C	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	-		

	Diagno	stic information	Remedy instructions
No.		Short text	
494	Switch output 1 to n simulation active		Deactivate simulation switch output
	Measured variable status		
	Quality	Good	-
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	С	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	-		

	Diagnostic	information	Remedy instructions
No.	s	Short text	
495	Diagnostic event simulation active		Deactivate simulation
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	С	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	-		

Diagn	ostic information	Remedy instructions
	Short text	
Status input 1 to n simul	ation active	Deactivate simulation status input
Measured variable stat	us	
Quality	Good	
Quality substatus	Ok	
Coding (hex)	0x80 to 0x83	
Status signal	С	
Diagnostic behavior	Warning	
Influenced measured variables		

	Diagnostic	information	Remedy instructions
No.	:	Short text	
520	0 I/O 1 to n hardware configuration invalid		1. Check I/O hardware configuration
	Measured variable status		<ol> <li>Replace wrong I/O module</li> <li>Plug the module of double pulse output on correct slot</li> </ol>
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	-		

	Diagnostic information		Remedy instructions
No.		Short text	
528	B     Concentration calculation not possible       Measured variable status		Out of valid range of the selected calculation algorithm 1. Check concentration settings
			2. Check measured values, e.g. density or temperature
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	Carrier mass flow     Carrier corrected volume flow     Carrier corrected volume flow     Concentration     Carrier volume flow		<ul><li>Target volume flow</li><li>Volume flow</li></ul>

Diagnostic information		stic information	Remedy instructions
lo.		Short text	
29	Concentration calculation not accurate		Out of valid range of the selected calculation algorithm
	Measured variable status		1. Check concentration settings         2. Check measured values, e.g. density or temperature
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	_
	Diagnostic behavior	Warning	
	Influenced measured variables		
	<ul> <li>Carrier mass flow</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Concentration</li> <li>Carrier volume flow</li> </ul>		

Diagnostic information			Remedy instructions
o.		Short text	
7	Configuration		1. Check IP addresses in network
Ī	Measured variable status		2. Change IP address
Ī	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Warning	
Ī	Influenced measured variables		
	-		

	Diagnostic	information	Remedy instructions
No.	Short text		
594	Relay output 1 to n simulation active		Deactivate simulation switch output
	Measured variable status		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	С	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	-		

# 12.7.4 Diagnostic of process

Diagnostic information		Remedy instructions
	Short text	
Loop current 1 faulty		1. Check wiring
Measured variable status		2. Change I/O module
Quality	Good	
Quality substatus	Ok	
Coding (hex)	0x80 to 0x83	
Status signal	F	
Diagnostic behavior	Alarm	
Influenced measured va	ariables	

Diagnostic information		ormation	Remedy instructions
No.	Shor	rt text	
830	Ambient temperature too high		Reduce ambient temp. around the sensor housing
	Measured variable status [from	the factory] <sup>1)</sup>	1
	Quality Go	ood	
	Quality substatus Ol	k	1
	Coding (hex) 02	x80 to 0x83	
	Status signal S		
	Diagnostic behavior W	Varning	
	Influenced measured variables		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperature</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alternation</li> <li>GSV flow alternation</li> <li>Kinematic viscosition</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous masses</li> <li>Suspended bubble</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternation</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Oscillation frequent</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asy</li> <li>termatic viscosite</li> <li>termatic viscosite</li> <li>GSEM)</li> </ul>	<ul> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Nourier flow</li> <li>Nourier volume flow</li> <li>Water volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic inf	formation	Remedy instructions
No.	Short text		
831	Ambient temperature too low		Increase ambient temp. around the sensor housing
	Measured variable status [from	n the factory] <sup>1)</sup>	
	Quality G	Good	
	Quality substatus C	)k	
	Coding (hex) 0	0x80 to 0x83	
	Status signal S	;	
	Diagnostic behavior V	Varning	
	Influenced measured variables		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperature</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Oscillation frequent</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyrtemes</li> <li>ISE</li> </ul>	<ul> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>edium index</li> <li>Frequency fluctuation 1</li> <li>Sindex</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

Diagnostic information			Remedy instructions
Io.	S	hort text	
32	Electronics temperature too high		Reduce ambient temperature
	Measured variable status [fr	om the factory] <sup>1)</sup>	1
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	-
	Status signal	S	-
	Diagnostic behavior	Warning	-
	Influenced measured variabl	es	
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flor</li> <li>Carrier corrected volume flor</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alterna</li> <li>Kinematic viscosi</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Water mass flow</li> <li>w</li> <li>Inhomogeneous</li> <li>Suspended bubbl</li> </ul>	<ul> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Nolume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic	information		Remedy instructions
No.	SI	hort text		
833	Electronics temperature too lov	N	Increase ambient tem	perature
	Measured variable status [fro	om the factory] <sup>1)</sup>		
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		
	Influenced measured variable	es		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Aignal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alte</li> <li>Kinematic via</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass</li> <li>Water mass</li> <li>w</li> <li>Inhomogene</li> <li>w</li> <li>Suspended b</li> </ul>	cosity low bus medium index bbles index tbbles index rnative sure at 1 at 2 equency 1 equency 2 uss flow flow	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic info	ormation	Remedy instructions
No.	Shor	rt text	
834	Process temperature too high		Reduce process temperature
	Measured variable status [from	the factory] <sup>1)</sup>	
	Quality Go	ood	
	Quality substatus Ol	k	
	Coding (hex) 0x	x80 to 0x83	
	Status signal S		
	Diagnostic behavior W	Varning	
	Influenced measured variables		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperature</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alternati</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubble</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternati</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequer</li> <li>Oscillation frequer</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asy:</li> <li>e (ISEM)</li> </ul>	oil corrected volume flow         Water corrected volume flow         Oscillation damping fluctuation 1         Oscillation damping fluctuation 2         edium index         Frequency fluctuation 1         s index         Frequency fluctuation 2         Target mass flow         Carrier volume flow         Target volume flow         Temp. compensated dynamic viscosity         Temp. compensated kinematic viscosity         Temperature         volume flow         Volume flow         Water volume flow         Water volume flow

	Diagnostic inf	formation	Remedy instructions
No.	Sho	ort text	
835	Process temperature too low		Increase process temperature
	Measured variable status [from	n the factory] <sup>1)</sup>	
	Quality G	Good	
	Quality substatus C	)k	
	Coding (hex) 0	0x80 to 0x83	
	Status signal S		
	Diagnostic behavior V	Varning	
	Influenced measured variables		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperature</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous mass</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequen</li> <li>Oscillation frequen</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asymetric</li> </ul>	<ul> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Cy 1</li> <li>Volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

Diagnostic information		ormation	Remedy instructions
No.	Shor	rt text	
342	Process value below limit		1. Decrease process value
	Measured variable status [from	the factory] <sup>1)</sup>	2. Check application 3. Check sensor
	Quality Go	ood	
	Quality substatus Ol	k	
	Coding (hex)	x80 to 0x83	
	Status signal S		
	Diagnostic behavior W	Jarning	
	Influenced measured variables		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperature</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous mass</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequen</li> <li>Oscillation frequen</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asyre</li> <li>(ISEM)</li> </ul>	<ul> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>edium index</li> <li>Frequency fluctuation 1</li> <li>Scillation damping fluctuation 2</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic	nformation	<b>Remedy instructions</b>
No.	Short text		
862	Partly filled pipe		1. Check for gas in process
	Measured variable status [fro	om the factory] <sup>1)</sup>	2. Adjust detection limits
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	<ul> <li>Application specific output</li> <li>Application specific output</li> <li>Carrier mass flow</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Concentration</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperate</li> <li>GSV flow</li> <li>GSV flow alternative</li> </ul>	w Inhomogeneous ma Suspended bubbles HBSI NSV flow NSV flow alternativ External pressure	<ul> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temp. compensated kinematic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> </ul>

	Diagnostic	information	Remedy instructions
No.	S	hort text	
882	Input signal faulty		1. Check input signal parameterization
	Measured variable status		<ol> <li>Check external device</li> <li>Check process conditions</li> </ol>
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variabl	es	
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flo</li> <li>Carrier corrected volume flo</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	w • Suspended bubbles	<ul> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>edium index</li> <li>Frequency fluctuation 1</li> <li>Scillation damping fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Cy 1</li> <li>Volume flow</li> <li>Water volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnos	tic information	Remedy instructions
No.		Short text	
910	5		1. If available: Check connection cable between sensor and transmitter
	Management regional activity		<ol> <li>Check or replace sensor electronic module (ISEM)</li> <li>Check sensor</li> </ol>
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	F	
	Diagnostic behavior	Alarm	
	Influenced measured variables		
	-		

	Diagnostic inf	formation	Remedy instructions
No.	Sho	ort text	
912	Medium inhomogeneous Measured variable status [from the factory] <sup>1)</sup>		1. Check process cond.
			2. Increase system pressure
	Quality G	Good	
	Quality substatus C	)k	
	Coding (hex) 0	0x80 to 0x83	
	Status signal S		
	Diagnostic behavior V	Warning	
	Influenced measured variables		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperature</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>Exciter current 1</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequent</li> <li>Oscillation frequent</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asymptet</li> <li>EISEM)</li> </ul>	<ul> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Sindex</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water volume flow</li> </ul>

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic inf	formation	Remedy instructions
No.	5. Short text		
913	Medium unsuitable		1. Check process conditions
	Measured variable status [from the factory] <sup>1)</sup>		2. Check electronic modules or sensor
	Quality	Good	
	Quality substatus C	Dk	
	Coding (hex)	0x80 to 0x83	
	Status signal S		
	Diagnostic behavior V	Warning	
	Influenced measured variables		L
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperature</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous measure</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequen</li> <li>Oscillation frequen</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asymptic</li> <li>(ISEM)</li> </ul>	<ul> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>edium index</li> <li>Frequency fluctuation 1</li> <li>Scillation damping fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Cy 1</li> <li>Volume flow</li> <li>Water volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>

	Diagnostic	information	Remedy instructions			
No.	SI	hort text				
915	Viscosity ouf of specification		1. Avoid 2-phase flow			
	Measured variable status [fro	om the factory] <sup>1)</sup>	<ol> <li>Increase system pressure</li> <li>Verify viscosity and density are within range</li> </ol>			
	Quality	Good	4. Check process conditions			
	Quality substatus	Ok				
	Coding (hex)	0x80 to 0x83				
	Status signal	S				
	Diagnostic behavior	Warning				
	Influenced measured variable	Influenced measured variables				
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	w • Suspended bubbles	<ul> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>edium index</li> <li>Frequency fluctuation 1</li> <li>Scindex</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>			

	Diagnos	tic information	Remedy instructions
No.		Short text	
941	API/ASTM temperature ou	t of specificat.	1. Check process temperature with selected API/ASTM commodity grou
	Measured variable status [from the factory] <sup>1)</sup>		2. Check API/ASTM-related parameters
	Quality	Good	
	Quality substatus		1
	Coding (hex)		-
	Status signal	S	
	Diagnostic behavior	Warning	-
	Influenced measured vari	ables	
	<ul> <li>Oil density</li> <li>Water density</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Mass flow</li> <li>Oil mass flow</li> </ul>	<ul> <li>Water mass flow</li> <li>NSV flow</li> <li>NSV flow alternation</li> <li>S&amp;W volume flow</li> <li>Reference density</li> <li>Corrected volume</li> </ul>	<ul><li>Water volume flow</li><li>Water cut</li></ul>

	Diagnosti	c information	Remedy instructions
No.	Short text		
942			1. Check process density with selected API/ASTM commodity group
	Measured variable status [from the factory] <sup>1)</sup>		2. Check API/ASTM-related parameters
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variables		
	<ul> <li>Oil density</li> <li>Water density</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Mass flow</li> <li>Oil mass flow</li> </ul>	<ul> <li>Water mass flow</li> <li>NSV flow</li> <li>NSV flow alternation</li> <li>S&amp;W volume flow</li> <li>Reference density a</li> <li>Corrected volume flow</li> </ul>	<ul><li>Water volume flow</li><li>Water cut</li></ul>

	Diagnostic	information	Remedy instructions
No.	Short text		
943	· ·		1. Check process pressure with selected API commodity group
	Measured variable status [fro	om the factory] <sup>1)</sup>	2. Check API related parameters
	Quality Good	Good	
	Quality substatus	Ok	
	Coding (hex)	0x80 to 0x83	
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variable	es	
	<ul> <li>Oil density</li> <li>Water density</li> <li>GSV flow</li> <li>GSV flow alternative</li> <li>Mass flow</li> <li>Oil mass flow</li> </ul>	<ul> <li>Water mass flow</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>S&amp;W volume flow</li> <li>Reference density at Corrected volume flow</li> </ul>	<ul><li>Water volume flow</li><li>Water cut</li></ul>

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic	information	Remedy instructions
No.	Short text		
944	Monitoring failed		Check process conditions for Heartbeat Monitoring
	Measured variable status [from the factory] <sup>1)</sup>		
	Quality	Good	
	Quality substatus	Ok	
	Coding (hex) 0x80 to 0x83		
	Status signal	S	
	Diagnostic behavior	Warning	
	Influenced measured variable	es	
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Signal asymmetry</li> <li>Carrier pipe temperature</li> <li>Sensor index coil asymmetry</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Test point</li> <li>Test point</li> </ul>	<ul> <li>Dynamic viscosity</li> <li>Kinematic viscosity</li> <li>Inhomogeneous m</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequen</li> <li>Oscillation frequen</li> </ul>	edium index index Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 Frequency fluctuation 2 Temp. compensated dynamic viscosity cy 1 Temp. compensated kinematic viscosity

No.	Diagnostic information		Remedy instructions
948	Oscillation damping too high		Check process conditions
	Measured variable status [from	n the factory] <sup>1)</sup>	1
	Quality G	Good	
	Quality substatus O	)k	
	Coding (hex) 0	0x80 to 0x83	
	Status signal S	5	
	Diagnostic behavior V	Warning	
	Influenced measured variables		
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> <li>Sensor electronics temperature</li> </ul>	<ul> <li>GSV flow</li> <li>GSV flow alternative</li> <li>GSV flow alternative</li> <li>Kinematic viscosity</li> <li>Mass flow</li> <li>Oil mass flow</li> <li>Water mass flow</li> <li>Water mass flow</li> <li>Inhomogeneous measure</li> <li>Suspended bubbles</li> <li>HBSI</li> <li>NSV flow</li> <li>NSV flow alternative</li> <li>External pressure</li> <li>Exciter current 1</li> <li>Exciter current 2</li> <li>Oscillation frequen</li> <li>Oscillation frequen</li> <li>Raw value mass flow</li> <li>S&amp;W volume flow</li> <li>Torsion signal asymetry</li> <li>e (ISEM)</li> </ul>	y Oil corrected volume flow Water corrected volume flow Oscillation damping fluctuation 1 Oscillation damping fluctuation 2 Frequency fluctuation 1 S index Frequency fluctuation 2 Target mass flow Carrier volume flow Carrier volume flow Temp. compensated dynamic viscosity Temperature ncy 1 Nolume flow Water volume flow Water volume flow Water cut

Diagnostic information				Remedy instructions		
No.	Short text					
984	Condensation risk		1. Decrease ambient te	1		
	Measured variable status [fr	om the factory] <sup>1)</sup>		2. Increase medium ter	mperature	
	Quality	Good				
	Quality substatus	Ok		-		
	Coding (hex)	0x80 to 0x83		-		
	Status signal	S		-		
	Diagnostic behavior	Warning		-		
	Influenced measured variable	Influenced measured variables				
	<ul> <li>Oscillation amplitude 1</li> <li>Oscillation amplitude 2</li> <li>Application specific output</li> <li>Application specific output</li> <li>Signal asymmetry</li> <li>Carrier mass flow</li> <li>Carrier pipe temperature</li> <li>Target corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Carrier corrected volume flow</li> <li>Sensor index coil asymmetry</li> <li>Concentration</li> <li>Measured values</li> <li>Oscillation damping 1</li> <li>Oscillation damping 2</li> <li>Density</li> <li>Oil density</li> <li>Water density</li> <li>Test point</li> <li>Test point</li> <li>Dynamic viscosity</li> </ul>	GSV flov GSV flov Kinemat Mass flo Oil mass Water n W Inhomog W Suspend M HBSI NSV flov External Exciter o Exciter o Oscillati Raw valu S&W vo	w w alternativ tic viscosity w s flow nass flow geneous m led bubbles w w alternativ l pressure current 1 current 2 on frequen on frequen ue mass flo	edium index s index ve cy 1 cy 2 ww	<ul> <li>Reference density</li> <li>Reference density alternative</li> <li>Corrected volume flow</li> <li>Oil corrected volume flow</li> <li>Water corrected volume flow</li> <li>Oscillation damping fluctuation 1</li> <li>Oscillation damping fluctuation 2</li> <li>Frequency fluctuation 1</li> <li>Frequency fluctuation 2</li> <li>Target mass flow</li> <li>Carrier volume flow</li> <li>Target volume flow</li> <li>Temp. compensated dynamic viscosity</li> <li>Temperature</li> <li>Volume flow</li> <li>Oil volume flow</li> <li>Water volume flow</li> <li>Water cut</li> </ul>	

## 12.8 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

To call up the measures to rectify a diagnostic event:

- Via local display  $\rightarrow \square 170$
- Via web browser  $\rightarrow \square 171$
- Via "FieldCare" operating tool  $\rightarrow \square$  172
- Via "DeviceCare" operating tool → 
   <sup>™</sup> 172

Other pending diagnostic events can be displayed in the Diagnostic list submenu  $\rightarrow \cong 241$ 

#### Navigation

"Diagnostics" menu

억 Diagnostics			
Actual diagnostics			→ 🖺 241
Previous diagnosti	2S	]	→ 🖺 241

Operation	ng time from restart	→ 🗎 241
Operation	ng time	→ 🗎 241

#### Parameter overview with brief description


Parameter	Prerequisite	Description	User interface
		Shows the current occured diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
		If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	-	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	-	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

### 12.9 Diagnostic list

Up to 5 currently pending diagnostic events can be displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

#### Navigation path

Diagnostics  $\rightarrow$  Diagnostic list

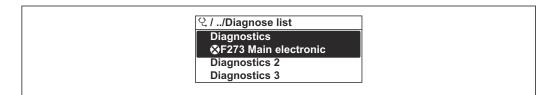

31 Taking the example of the local display

To call up the measures to rectify a diagnostic event:

- Via local display  $\rightarrow \implies 170$
- Via web browser  $\rightarrow \square 171$
- Via "FieldCare" operating tool  $\rightarrow \implies 172$
- Via "DeviceCare" operating tool  $\rightarrow \implies 172$


## 12.10 Event logbook

### 12.10.1 Reading out the event logbook

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

#### Navigation path

**Diagnostics** menu  $\rightarrow$  **Event logbook** submenu  $\rightarrow$  Event list

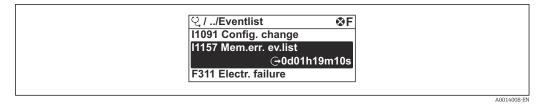

32 Taking the example of the local display

- A maximum of 20 event messages can be displayed in chronological order.
- If the **Extended HistoROM** application package (order option) is enabled in the device, the event list can contain up to 100 entries .

The event history includes entries for:

- Information events  $\rightarrow \cong 242$

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
  - $\overline{\mathbf{O}}$ : Occurrence of the event
  - G: End of the event
- Information event

 $\odot$ : Occurrence of the event

To call up the measures to rectify a diagnostic event:

- Via local display  $\rightarrow \triangleq 170$
- Via web browser  $\rightarrow \implies 171$
- Via "FieldCare" operating tool  $\rightarrow \implies 172$
- Via "DeviceCare" operating tool  $\rightarrow$  🗎 172

For filtering the displayed event messages  $\rightarrow \cong 242$ 

### 12.10.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

#### Navigation path

Diagnostics  $\rightarrow$  Event logbook  $\rightarrow$  Filter options

#### Filter categories

All

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

### 12.10.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
I1000	(Device ok)
I1079	Sensor changed

Info number	Info name	
I1089	Power on	
I1090	Configuration reset	
I1091	Configuration changed	
I1092	HistoROM backup deleted	
I1111	Density adjust failure	
I11280	ZeroPT verified and adjustm. recommended	
I11281	ZeroPT verif. and adjust. not recommend.	
I1137	Electronics changed	
I1151	History reset	
I1155	Reset electronics temperature	
I1156	Memory error trend	
I1157	Memory error event list	
I1209	Density adjustment ok	
I1221	Zero point adjust failure	
I1222	Zero point adjustment ok	
I1256	Display: access status changed	
I1278	I/O module restarted	
I1335	Firmware changed	
I1361	Web server: login failed	
I1397	Fieldbus: access status changed	
I1398	CDI: access status changed	
I1444	Device verification passed	
I1445	Device verification failed	
I1447	Record application reference data	
I1448	Application reference data recorded	
I1449	Recording application ref. data failed	
I1450	Monitoring off	
I1451	Monitoring on	
I1457	Measurement error verification failed	
I1459	I/O module verification failed	
I1460	HBSI verification failed	
I1461	Sensor verification failed	
I1462	Sensor electronic module verific. failed	
I1512	Download started	
I1513	Download finished	
I1514	Upload started	
I1515	Upload finished	
I1618	I/O module 2 replaced	
I1619	I/O module 3 replaced	
I1621	I/O module 4 replaced	
I1622	Calibration changed	
I1624	All totalizers reset	
I1625	Write protection activated	

Info number	Info name	
I1626	Write protection deactivated	
I1627	Web server: login successful	
I1628	Display: login successful	
I1629	CDI: login successful	
I1631	Web server access changed	
I1632	Display: login failed	
I1633	CDI: login failed	
I1634	Reset to factory settings	
I1635	Reset to delivery settings	
I1639	Max. switch cycles number reached	
I1649	Hardware write protection activated	
I1650	Hardware write protection deactivated	
I1712	New flash file received	
I1725	Sensor electronic module (ISEM) changed	
I1726	Configuration backup failed	

## 12.11 Resetting the measuring device

The entire device configuration or some of the configuration can be reset to a defined state with the **Device reset** parameter ( $\Rightarrow \triangleq 143$ ).

12.11.1	Function scope of	"Device reset" parameter
---------	-------------------	--------------------------

Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to the customer-specific value. All other parameters are reset to the factory setting.
Restart device	The restart resets every parameter with data stored in volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.


## 12.12 Device information

The **Device information** submenu contains all parameters that display different information for device identification.

### Navigation

"Diagnostics" menu  $\rightarrow$  Device information

► Device information	
Device tag	) → 🗎 245
Serial number	) → 🗎 245
Firmware version	) → 🗎 245

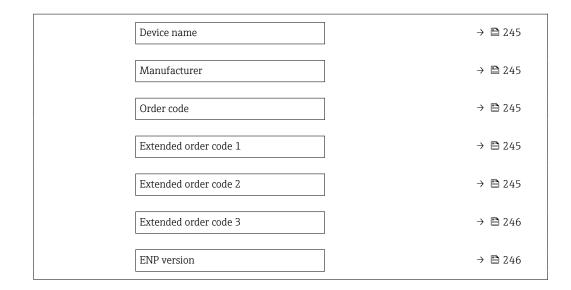

### Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Device tag	Shows name of measuring point.	Character string comprising numbers, letters and special characters	Promass
Serial number	Shows the serial number of the measuring device.	Max. 11-digit character string comprising letters and numbers.	-
Firmware version	Shows the device firmware version installed.	Character string in the format xx.yy.zz	-
Device name	Shows the name of the transmitter.  The name can be found on the nameplate of the transmitter.	Promass 300/500	-
Device name		Character string comprising numbers, letters and special characters	Prowirl
Manufacturer	Displays the manufacturer.	Character string comprising numbers, letters and special characters	Endress+Hauser
Order code	Shows the device order code. The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks (e.g. /).	-
Extended order code 1	Shows the 1st part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
Extended order code 2	Shows the 2nd part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-

Parameter	Description	User interface	Factory setting
Extended order code 3	Shows the 3rd part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
ENP version	Shows the version of the electronic nameplate (ENP).	Character string	2.02.00

## 12.13 Firmware history

	date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
20	023	01.00.zz	Option <b>61</b>	Original firmware	Operating Instructions	BA02114D/06/EN/01.21

It is possible to flash the firmware to the current version using the service interface.

- For the compatibility of the firmware version with the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.
- The manufacturer's information is available:
  - In the Download Area of the Endress+Hauser web site: www.endress.com → Downloads
  - Specify the following details:
    - Product root: e.g. 8P3B
       The product root is the first part of the order code: see the nameplate on the device.
    - Text search: Manufacturer's information
    - Media type: Documentation Technical Documentation

## 13 Maintenance

### 13.1 Maintenance tasks

No special maintenance work is required.

### 13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

### 13.1.2 Interior cleaning

Observe the following points for CIP and SIP cleaning:

- Use only cleaning agents to which the process-wetted materials are adequately resistant.
- Observe the maximum permitted medium temperature for the measuring device  $\rightarrow \cong 269$ .

Observe the following point for cleaning with pigs:

Observe the inside diameter of the measuring tube and process connection.

## 13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment:  $\rightarrow \square 250 \rightarrow \square 252$ 

## 13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.



Your Endress+Hauser Sales Center can provide detailed information on the services.

# 14 Repair

## 14.1 General information

### 14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

### 14.1.2 Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- Use only original Endress+Hauser spare parts.
- Carry out the repair according to the Installation Instructions.
- Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ► Document every repair and each conversion and enter them into the *W*@*M* life cycle management database and Netilion Analytics.

## 14.2 Spare parts

Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

P Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the Serial number parameter (→ 
   <sup>(→)</sup> 245) in the Device information submenu.

## 14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

Your Endress+Hauser Sales Center can provide detailed information on the services.

## 14.4 Return

The requirements for safe device return can vary depending on the device type and national legislation.

- Refer to the web page for information: http://www.endress.com/support/return-material
   Select the region.
- 2. Return the device if repairs or a factory calibration are required, or if the wrong device was ordered or delivered.

## 14.5 Disposal

### X

If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

### 14.5.1 Removing the measuring device

1. Switch off the device.

### **WARNING**

#### Danger to persons from process conditions!

 Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive media.

2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

### 14.5.2 Disposing of the measuring device

#### **WARNING**

#### Danger to personnel and environment from fluids that are hazardous to health.

 Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- Observe valid federal/national regulations.
- ► Ensure proper separation and reuse of the device components.

## 15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress +Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

## 15.1 Device-specific accessories

## 15.1.1 For the transmitter

Accessories	Description
Proline 300 transmitter	Transmitter for replacement or storage. Use the order code to define the following specifications: • Approvals • Output • Input • Display/operation • Housing • Software • Order code: 8X3BXX • Installation Instructions EA01200D
Remote display and operating module DKX001	<ul> <li>If ordered directly with the measuring device: Order code for "Display; operation", option O "Remote display 4-line, illuminated; 10 m (30 ft) cable; touch control"</li> <li>If ordered separately:</li> <li>Measuring device: order code for "Display; operation", option M "W/o, prepared for remote display"</li> <li>DKX001: Via the separate product structure DKX001</li> <li>If ordered subsequently: DKX001: Via the separate product structure DKX001</li> <li>Mounting bracket for DKX001</li> <li>If ordered directly: order code for "Accessory enclosed", option RA "Mounting bracket, pipe 1/2"</li> <li>If ordered subsequently: order number: 71340960</li> <li>Connecting cable (replacement cable)</li> <li>Via the separate product structure: DKX002</li> <li>Further information on display and operating module DKX001 →  274.</li> </ul>
External WLAN antenna	<ul> <li>External WLAN antenna with 1.5 m (59.1 in) connecting cable and two angle brackets. Order code for "Accessory enclosed", option P8 "Wireless antenna wide area".</li> <li>Inte external WLAN antenna is not suitable for use in hygienic applications.</li> <li>Additional information regarding the WLAN interface → </li> <li>66.</li> <li>Order number: 71351317</li> <li>Installation Instructions EA01238D</li> </ul>
Weather protection cover	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight.     Order number: 71343505     Installation Instructions EA01160D

### 15.1.2 For the sensor

Accessories	Description
Heating jacket	Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids.
	If using oil as a heating medium, please consult with Endress+Hauser.
	Use the order code with the product root DK8003.
	Special Documentation SD02160D

# 15.2 Communication-specific accessories

Accessories	Description
Fieldgate FXA42	Is used to transmit the measured values of connected 4 to 20 mA analog measuring devices, as well as digital measuring devices
	<ul> <li>Technical Information TI01297S</li> <li>Operating Instructions BA01778S</li> <li>Product page: www.endress.com/fxa42</li> </ul>
Field Xpert SMT50	The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress. This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.
	<ul> <li>Technical Information TI01342S</li> <li>Operating Instructions BA01709S</li> <li>Product page: www.endress.com/smt50</li> </ul>
Field Xpert SMT70	The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.         This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.         Image: Technical Information TI01342S         Operating Instructions BA01709S         Product page: www.endress.com/smt70
Field Xpert SMT77	The Field Xpert SMT77 tablet PC for device configuration enables mobile plant asset management in areas categorized as Ex Zone 1.         Image: Technical Information TI01418S         Operating Instructions BA01923S         Product page: www.endress.com/smt77

Accessory	Description
Applicator	<ul> <li>Software for selecting and sizing Endress+Hauser measuring devices:</li> <li>Choice of measuring devices with industrial requirements</li> <li>Calculation of all the necessary data for identifying the optimum flowmeter:</li> <li>e.g. nominal diameter, pressure loss, flow velocity and accuracy.</li> <li>Graphic illustration of the calculation results</li> <li>Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.</li> </ul>
	<ul><li>Applicator is available:</li><li>Via the Internet: https://portal.endress.com/webapp/applicator</li><li>As a downloadable DVD for local PC installation.</li></ul>
W@M	W@M Life Cycle ManagementImproved productivity with information at your fingertips. Data relevant to aplant and its components is generated from the first stages of planning andduring the asset's complete life cycle.W@M Life Cycle Management is an open and flexible information platformwith online and on-site tools. Instant access for your staff to current, in-depthdata shortens your plant's engineering time, speeds up procurement processesand increases plant uptime.Combined with the right services, W@M Life Cycle Management boostsproductivity in every phase. For more information, see:www.endress.com/lifecyclemanagement
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition. Operating Instructions BA00027S and BA00059S
DeviceCare	Tool for connecting and configuring Endress+Hauser field devices.

# 15.3 Service-specific accessories

## 15.4 System components

The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.
<ul> <li>Technical Information TI00133R</li> <li>Operating Instructions BA00247R</li> </ul>
The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.
<ul> <li>Technical Information TI00426P and TI00436P</li> <li>Operating Instructions BA00200P and BA00382P</li> </ul>
The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value. • Technical Information TI00383P • Operating Instructions BA00271P
The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature. The temperature of the temperature of temperature of the temperature of temp

# 16 Technical data

## 16.1 Application

The measuring device is intended only for the flow measurement of liquids.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

# 16.2 Function and system design

Measuring principle	Mass flow measurement based on the Coriolis measuring principle
Measuring system	The device consists of a transmitter and a sensor.
	The device is available as a compact version: The transmitter and sensor form a mechanical unit.
	Information on the structure of the device $\rightarrow \square 13$

Measured variable	Direct measured varia	bles		
	<ul> <li>Mass flow</li> </ul>			
	<ul> <li>Density</li> </ul>			
	<ul> <li>Temperature</li> </ul>			
	Calculated measured	variables		
	<ul> <li>Volume flow</li> </ul>			
	<ul> <li>Corrected volume flo</li> </ul>	W		
	<ul> <li>Reference density</li> </ul>			
Measuring range	Measuring range for	iquids		
	D	N	Measuring range full scal	e values ṁ <sub>min(F)</sub> to ṁ <sub>max(F</sub>
	[mm]	[in]	[kg/h]	[lb/min]
	8	3⁄8	0 to 2 000	0 to 73.50
	15	1/2	0 to 6 500	0 to 238.9
	25	1	0 to 18000	0 to 661.5
	40	11/2	0 to 45 000	0 to 1654
	50	2	0 to 70 000	0 to 2 573
	<b>Recommended measu</b> Flow limit $\rightarrow \cong 2$	ring range		
	Recommended measu flow limit → 🗎 2	ring range		
Operable flow range	Recommended measu Flow limit → 🗎 2 Over 1000 : 1.	<b>ring range</b> 70		
Operable flow range	Recommended measu Flow limit → 🗎 2 Over 1000 : 1.	<b>ring range</b> 70 reset full scale valu	e do not override the electr red correctly.	onics unit, with the
Operable flow range	Recommended measu Flow limit → 🗎 2 Over 1000 : 1. Flow rates above the p	<b>ring range</b> 70 reset full scale valu values are registe		onics unit, with the
	Recommended measu Flow limit → ■ 2 Over 1000 : 1. Flow rates above the p result that the totalizer External measured va To increase the accurate continuously write varia • Operating pressure t	ring range 70 reset full scale valu values are registe <b>lues</b> ry of certain measu ous measured valu o increase accuracy levice for absolute	red correctly. ared variables, the automati les to the measuring device 7 (Endress+Hauser recomm pressure, e.g. Cerabar M or	on system can : ends the use of a
	Recommended measures Flow limit → ■ 2 Over 1000 : 1. Flow rates above the presult that the totalizer External measured van To increase the accurate continuously write variate • Operating pressure to pressure measuring of • Medium temperature	ring range 70 reset full scale value values are registe <b>lues</b> ry of certain measu ous measured value o increase accuracy levice for absolute e to increase accura	red correctly. ured variables, the automati les to the measuring device y (Endress+Hauser recomm pressure, e.g. Cerabar M or acy (e.g. iTEMP) leasuring devices can be ord	on system can : ends the use of a <sup>.</sup> Cerabar S)
	Recommended measu Flow limit → ■ 2 Over 1000 : 1. Flow rates above the p result that the totalizer External measured va To increase the accurate continuously write variate • Operating pressure to pressure measuring of • Medium temperature	ring range 70 reset full scale value values are registe <b>lues</b> ry of certain measu ous measured value o increase accuracy levice for absolute e to increase accura	red correctly. ured variables, the automati les to the measuring device y (Endress+Hauser recomm pressure, e.g. Cerabar M or acy (e.g. iTEMP) leasuring devices can be ord	on system can : ends the use of a <sup>.</sup> Cerabar S)
	<ul> <li>Recommended measures</li> <li>Flow limit → ■ 2</li> <li>Over 1000 : 1.</li> <li>Flow rates above the presult that the totalizes</li> <li>External measured values</li> <li>External measured values</li> <li>To increase the accurate continuously write variates</li> <li>Operating pressure to pressure measuring to medium temperatures</li> <li>Medium temperatures</li> <li>Various pressure at +Hauser: see "Accel</li> <li>Current input</li> </ul>	ring range 70 reset full scale values values are registe <b>lues</b> ry of certain measu ous measured values o increase accuracy levice for absolute e to increase accuracy levice for absolute e to increase accuracy levices for absolute e to increase accuracy levice for absolute e to increase accuracy levice for absolute e to increase accuracy levice for absolute e to increase accuracy levices for absolute e to increase accuracy levice for absolute e to increase accuracy levice for absolute e to increase accuracy	red correctly. ured variables, the automati les to the measuring device y (Endress+Hauser recomm pressure, e.g. Cerabar M or acy (e.g. iTEMP) leasuring devices can be ord	on system can : ends the use of a · Cerabar S) lered from Endress
	Recommended measures Flow limit → ■ 2 Over 1000 : 1. Flow rates above the presult that the totalizer External measured var To increase the accurate continuously write variate • Operating pressure to pressure measuring of • Medium temperatures • Medium temperatures • Various pressure at +Hauser: see "Accord Current input The measured values at	ring range 70 reset full scale values values are registe <b>lues</b> ry of certain measu ous measured values o increase accuracy levice for absolute e to increase accuracy levice for absolute e to increase accuracy levices for absolute e to increase accuracy levice for absolute e to increase accuracy levice for absolute e to increase accuracy levice for absolute e to increase accuracy levices for absolute e to increase accuracy levice for absolute e to increase accuracy levice for absolute e to increase accuracy	red correctly. ured variables, the automatines to the measuring device (Endress+Hauser recomm pressure, e.g. Cerabar M or acy (e.g. iTEMP) leasuring devices can be ord 252	on system can : ends the use of a · Cerabar S) lered from Endress

# 16.3 Input

### Current input 0/4 to 20 mA

Current input	0/4 to 20 mA (active/passive)
Current span	<ul> <li>4 to 20 mA (active)</li> <li>0/4 to 20 mA (passive)</li> </ul>
Resolution	1 μΑ
Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)
Maximum input voltage	≤ 30 V (passive)
Open-circuit voltage	≤ 28.8 V (active)
Possible input variables	<ul><li>Pressure</li><li>Temperature</li><li>Density</li></ul>

### Status input

Maximum input values	<ul> <li>DC -3 to 30 V</li> <li>If status input is active (ON): R<sub>i</sub> &gt;3 kΩ</li> </ul>
Response time	Configurable: 5 to 200 ms
Input signal level	<ul> <li>Low signal: DC -3 to +5 V</li> <li>High signal: DC 12 to 30 V</li> </ul>
Assignable functions	<ul> <li>Off</li> <li>Reset the individual totalizers separately</li> <li>Reset all totalizers</li> <li>Flow override</li> </ul>

# 16.4 Output

Output signal

### PROFINET with Ethernet-APL

Device use	Device connection to an APL field switch
	The device may only be operated according to the following APL port
	classifications:
	<ul> <li>If used in hazardous areas: SLAA or SLAC<sup>1)</sup></li> </ul>
	<ul> <li>If used in non-hazardous areas: SLAX</li> </ul>
	Connection values of APL field switch (for example corresponds to APL port classification SPCC or SPAA, for instance):
	<ul> <li>Maximum input voltage: 15 V<sub>DC</sub></li> <li>Minimum output values: 0.54 W</li> </ul>
	Device connection to an SPE switch
	<ul> <li>In non-hazardous areas, the device can be used with a suitable SPE switch: The device can be connected to an SPE switch with a maximum voltage of 30 V<sub>DC</sub> and a minimum autorut neuron of 1.95 W.</li> </ul>
	<ul><li>and a minimum output power of 1.85 W.</li><li>The SPE switch must support the 10BASE-T1L standard and the PoDL power</li></ul>
	classes 10, 11 or 12 and have a function to disable power class recognition.
PROFINET	According to IEC 61158 and IEC 61784
Ethernet-APL	According to IEEE 802.3cg, APL port profile specification v1.0, galvanically isolated
Data transfer	10 Mbit/s
Current consumption	Transmitter
<b>x</b>	<ul> <li>Max. 400 mA(24 V)</li> </ul>
	<ul> <li>Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)</li> </ul>
Permitted supply voltage	9 to 30 V
Network connection	With integrated reverse polarity protection

1) For more information on using the device in the hazardous area, see the Ex-specific Safety Instructions

### Current output 4 to 20 mA

Signal mode	Can be set to: • Active • Passive
Current span	Can be set to: • 4 to 20 mA NAMUR • 4 to 20 mA US • 4 to 20 mA • 0 to 20 mA (only if the signal mode is active) • Fixed current
Maximum output values	22.5 mA
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	0 to 700 Ω
Resolution	0.38 μΑ

Damping	Configurable: 0 to 999.9 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>In range of options increases if the measuring device has one or more application packages.</li> </ul>

### Pulse/frequency/switch output

Function	Can be configured as pulse, frequency or switch output
Version	Open collector Can be set to: • Active • Passive • Passive NAMUR • Ex-i, passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Pulse output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Pulse width	Configurable: 0.05 to 2 000 ms
Maximum pulse rate	10000 Impulse/s
Pulse value	Configurable
Assignable measured variables	<ul><li>Mass flow</li><li>Volume flow</li><li>Corrected volume flow</li></ul>
Frequency output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Configurable: end value frequency 2 to $10000$ Hz(f <sub>max</sub> = 12500 Hz)
Damping	Configurable: 0 to 999.9 s
Pulse/pause ratio	1:1

Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>
Switch output	
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Configurable: 0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	<ul> <li>Off</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit value</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1-3</li> <li>Flow direction monitoring</li> <li>Status</li> <li>Partially filled pipe detection</li> <li>Low flow cut off</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

### Relay output

Function	Switch output
Version	Relay output, galvanically isolated
Switching behavior	Can be set to: • NO (normally open), factory setting • NC (normally closed)

Maximum switching capacity (passive)	<ul> <li>DC 30 V, 0.1 A</li> <li>AC 30 V, 0.5 A</li> </ul>
Assignable functions	<ul> <li>Off</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit value</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1-3</li> <li>Flow direction monitoring</li> <li>Status</li> <li>Partially filled pipe detection</li> <li>Low flow cut off</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

### User-configurable input/output

**One** specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

Signal on alarm

Depending on the interface, failure information is displayed as follows:

#### **PROFINET** with Ethernet-APL

Device diagnostics	Diagnostics according to PROFINET PA Profile 4
--------------------	--

### Current output 0/4 to 20 mA

4	to	20	тA	
---	----	----	----	--

Failure mode	Choose from: • 4 to 20 mA in accordance with NAMUR recommendation NE 43 • 4 to 20 mA in accordance with US • Min. value: 3.59 mA • Max. value: 22.5 mA • Definable value between: 3.59 to 22.5 mA • Actual value • Last valid value
--------------	--

### 0 to 20 mA

Failure mode	e Choose from:	
	<ul> <li>Maximum alarm: 22 mA</li> </ul>	
	<ul> <li>Definable value between: 0 to 20.5 mA</li> </ul>	

### Pulse/frequency/switch output

Pulse output		
Failure mode	Choose from: • Actual value • No pulses	
Frequency output		
Failure mode       Choose from:         • Actual value         • 0 Hz         • Definable value between: 2 to 12 500 Hz		
Switch output		
Failure mode       Choose from:         • Current status       • Open         • Closed       • Closed		

### **Relay output**

Failure mode	Choose from:
	<ul> <li>Current status</li> </ul>
	<ul> <li>Open</li> </ul>
	<ul> <li>Closed</li> </ul>

### Local display

Plain text display	With information on cause and remedial measures	
Backlight	Red lighting indicates a device error.	



Status signal as per NAMUR recommendation NE 107

### Interface/protocol

- Via digital communication: PROFINET with Ethernet-APL
- Via service interface
  - CDI-RJ45 service interface
  - WLAN interface

Plain text display With information on cause and remedial measures	Plain text display	With information on cause and remedial measures
--	--------------------	---

### Web browser

Pla	ain text display	With information on cause and remedial measures	
-----	------------------	---	--

### Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes	
	The following information is displayed depending on the device version: <ul> <li>Supply voltage active</li> <li>Data transmission active</li> <li>Device alarm/error has occurred</li> <li>PROFINET network available</li> <li>PROFINET connection established</li> <li>PROFINET blinking feature</li> </ul>	
	Diagnostic information via light emitting diodes $\rightarrow \square$ 166	

witch

The switch points for low flow cut off are user-selectable.

Galvanic isolation The outputs are galvanically isolated:

- from the power supply
- from one another
- from the potential equalization (PE) terminal

protocol-specific data	Protocol	Application layer protocol for decentral device periphery and distributed automation, Version 2.43
	Communication type	Ethernet Advanced Physical Layer 10BASE-T1L
	Conformance Class	Conformance Class B (PA)
	Netload Class	PROFINET Netload Robustness Class 2 10 Mbit/s
	Baud rates	10 Mbit/s Full-duplex
	Cycle times	64 ms
	Polarity	Automatic correction of crossed "APL signal +" and "APL signal -" signal lines
	Media Redundancy Protocol (MRP)	Not possible (point-to-point connection to APL field switch)
	System redundancy support	System redundancy S2 (2 AR with 1 NAP)
	Device profile	PROFINET PA profile 4 (Application interface identifier API: 0x9700)
	Manufacturer ID	17
	Device type ID	0xA43B
	Device description files (GSD, DTM, FDI)	Information and files at: • www.endress.com → Download Area • www.profibus.com
	Supported connections	<ul> <li>2x AR (IO Controller AR)</li> <li>2x AR (IO Supervisor Device AR connection allowed)</li> </ul>
	Configuration options for measuring device	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server via Web browser and IP address</li> <li>Device master file (GSD), can be read out via the integrated Web server of the measuring device.</li> <li>Onsite operation</li> </ul>
	Configuration of the device name	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>DCP protocol</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server</li> </ul>

Supported functions	<ul> <li>Identification &amp; Maintenance, simple device identifier via:</li> <li>Control system</li> <li>Nameplate</li> <li>Measured value status The process variables are communicated with a measured value status</li> <li>Blinking feature via the local display for simple device identification and assignment</li> <li>Device operation via asset management software (e.g. FieldCare, DeviceCare, SIMATIC PDM with FDI package)</li> </ul>
System integration	Information regarding system integration . <ul> <li>Cyclic data transmission</li> <li>Overview and description of the modules</li> <li>Status coding</li> <li>Factory setting</li> </ul>

# 16.5 Power supply

Terminal assignment	→ 🗎 32			
Available device plugs	→ 🗎 32			
Pin assignment, device plug	→ 🗎 32			
Supply voltage	Order code for "Power supply"	Terminal voltage	2	Frequency range
	Option <b>D</b>	DC 24 V	±20%	-
	Option <b>E</b>	AC 100 to 240 V	-15 to +10%	50/60 Hz
	Ontion I	DC 24 V	±20%	-
	Option I	AC 100 to 240 V	-15 to +10%	50/60 Hz
Current consumption	switch-on current	Max. 36 A (<5 ms) as per		
Current consumption	Transmitter • Max. 400 mA (24 • Max. 200 mA (11	: V) .0 V, 50/60 Hz; 230 V, 50	)/60 Hz)	
Power supply failure	<ul> <li>Totalizers stop at the last value measured.</li> <li>Depending on the device version, the configuration is retained in the device memory or in the plug-in memory (HistoROM DAT).</li> <li>Error messages (incl. total operated hours) are stored.</li> </ul>			
Overcurrent protection element	<ul> <li>The device must be operated with a dedicated circuit breaker, as it does not have an ON/OFF switch of its own.</li> <li>The circuit breaker must be easy to reach and labeled accordingly.</li> <li>Permitted nominal current of the circuit breaker: 2 A up to maximum 10 A.</li> </ul>			

Electrical connection	→ 🗎 33			
Potential equalization	→ 🖺 36			
Ferminals	Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to 2.5 mm <sup>2</sup> (24 to 12 AWG).			
Cable entries	<ul> <li>Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)</li> <li>Thread for cable entry: <ul> <li>NPT ½"</li> <li>G ½"</li> <li>M20</li> </ul> </li> </ul>			
Cable specification	→ 🖺 29			
Overvoltage protection	Mains voltage fluctuations	→ 🖺 262		
	Overvoltage category	Overvoltage category II		
			cable and ground, for max. 5 s	
	Short-term, temporary overvoltage		Up to 500 V between cable and ground	
	Short-term, temporary overvoltage Long-term, temporary overvoltage		able and ground	
Reference operating conditions	Long-term, temporary overvoltage	Up to 500 V between co characteristics 531 59 to +113 °F) at 2 to 6 bar (2 ion protocol	.9 to 87 psi)	
	Long-term, temporary overvoltage <b>16.6 Performance</b> • Error limits based on ISO 116 • Water with +15 to +45 °C (+4 • Specifications as per calibrations • Accuracy based on accredited	Up to 500 V between co characteristics 531 59 to +113 °F) at 2 to 6 bar (2 ion protocol	.9 to 87 psi) ed to ISO 17025.	
conditions	Long-term, temporary overvoltage <b>16.6 Performance</b> • Error limits based on ISO 116 • Water with +15 to +45 °C (+4 • Specifications as per calibrations • Accuracy based on accredited	Up to 500 V between control of the second se	.9 to 87 psi) ed to ISO 17025.	
onditions	Long-term, temporary overvoltage <b>16.6 Performance</b> • Error limits based on ISO 116 • Water with +15 to +45 °C (+1) • Specifications as per calibration • Accuracy based on accredited To obtain measured errors o.r. = of reading; 1 g/cm <sup>3</sup> = 1 k	Up to 500 V between control of the second se	.9 to 87 psi) ed to ISO 17025.	
conditions	Long-term, temporary overvoltage <b>16.6 Performance</b> • Error limits based on ISO 116 • Water with +15 to +45 °C (+1) • Specifications as per calibrati • Accuracy based on accredited To obtain measured errors	Up to 500 V between co characteristics 531 59 to +113 °F) at 2 to 6 bar (2 50 n protocol d calibration rigs that are trace s, use the <i>Applicator</i> sizing too	.9 to 87 psi) ed to ISO 17025.	
conditions	Long-term, temporary overvoltage <b>16.6 Performance</b> • Error limits based on ISO 116 • Water with +15 to +45 °C (+4) • Specifications as per calibrati • Accuracy based on accredited To obtain measured errors o.r. = of reading; 1 g/cm <sup>3</sup> = 1 k Base accuracy	Up to 500 V between co characteristics 531 59 to +113 °F) at 2 to 6 bar (2 50 n protocol 1 calibration rigs that are trace s, use the <i>Applicator</i> sizing too g/l; T = medium temperature <sup>2</sup> 266	.9 to 87 psi) ed to ISO 17025.	
conditions	Long-term, temporary overvoltage <b>16.6 Performance</b> • Error limits based on ISO 116         • Water with +15 to +45 °C (+1)         • Specifications as per calibratian         • Accuracy based on accredited         Image: The obtain measured errors         o.r. = of reading; 1 g/cm³ = 1 k         Base accuracy         Image: Design fundamentals → Image: Mass flow and volume flow (lique)	Up to 500 V between co characteristics 531 59 to +113 °F) at 2 to 6 bar (2 50 n protocol 1 calibration rigs that are trace s, use the <i>Applicator</i> sizing too g/l; T = medium temperature <sup>2</sup> 266	.9 to 87 psi) ed to ISO 17025.	
	Long-term, temporary overvoltage <b>16.6</b> Performance • Error limits based on ISO 116 • Water with +15 to +45 °C (+4 • Specifications as per calibration • Accuracy based on accredited To obtain measured errors o.r. = of reading; 1 g/cm <sup>3</sup> = 1 k Base accuracy Design fundamentals $\rightarrow$ <i>Mass flow and volume flow (liq</i> ±0.10 % o.r.	Up to 500 V between co characteristics 531 59 to +113 °F) at 2 to 6 bar (2 50 n protocol 1 calibration rigs that are trace s, use the <i>Applicator</i> sizing too g/l; T = medium temperature <sup>2</sup> 266	.9 to 87 psi) ed to ISO 17025.	
conditions	Long-term, temporary overvoltage <b>16.6</b> Performance • Error limits based on ISO 116 • Water with +15 to +45 °C (+1) • Specifications as per calibrati • Accuracy based on accredited • To obtain measured errors o.r. = of reading; 1 g/cm <sup>3</sup> = 1 k <b>Base accuracy</b> • Design fundamentals $\rightarrow \square$ <i>Mass flow and volume flow (liq</i> ±0.10 % o.r. <i>Density (liquids)</i>	Up to 500 V between constraints <b>characteristics</b> 531 59 to +113 °F) at 2 to 6 bar (2 ion protocol d calibration rigs that are trace s, use the <i>Applicator</i> sizing too g/l; T = medium temperature 266 <i>uids</i> )	9 to 87 psi) ed to ISO 17025. ol → 🗎 252 Wide-range	

1)

Valid over the entire temperature and density range Valid range for special density calibration: 0 to 2 g/cm<sup>3</sup>, +10 to +80 °C (+50 to +176 °F) order code for "Application package", option EE "Special density" 2) 3)

### Temperature

 $\pm 0.5 \ ^{\circ}C \pm 0.005 \cdot T \ ^{\circ}C \ (\pm 0.9 \ ^{\circ}F \pm 0.003 \cdot (T - 32) \ ^{\circ}F)$ 

### Zero point stability

DN		Zero point stability		
[mm]	[in]	[kg/h]	[lb/min]	
8	3⁄8	0.20	0.007	
15	1/2	0.65	0.024	
25	1	1.80	0.066	
40	1½	4.50	0.165	
50	2	7.0	0.257	

### Flow values

Flow values as turndown parameters depending on the nominal diameter.

SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
8	2000	200	100	40	20	4
15	6500	650	325	130	65	13
25	18000	1800	900	360	180	36
40	45 000	4 500	2 2 5 0	900	450	90
50	70000	7 000	3 500	1400	700	140

### US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
3/8	73.50	7.350	3.675	1.470	0.735	0.147
1/2	238.9	23.89	11.95	4.778	2.389	0.478
1	661.5	66.15	33.08	13.23	6.615	1.323
1½	1654	165.4	82.70	33.08	16.54	3.308
2	2573	257.3	128.7	51.46	25.73	5.146

### Accuracy of outputs

The outputs have the following base accuracy specifications.


Current output

Accuracy ±5 μA	
----------------	--

### Pulse/frequency output

o.r. = of reading

Repeatability	o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature			
	Base repeatability			
	Design fundamentals → 🗎 266			
	Mass flow and volume flow (liquids)			
	±0.05 % o.r.			
	Density (liquids)			
	±0.00025 g/cm <sup>3</sup>			
	Temperature			
	±0.25 °C ± 0.0025 · T °C (±0.45 °F ± 0.0015 · (T-32) °F)			
Response time	The response time depends on the configuration (damping).			
Influence of ambient temperature	Current output			
rr	Temperature coefficientMax. 1 µA/°C			
	Pulse/frequency output			
	Temperature coefficient         No additional effect. Included in accuracy.			
Influence of medium	Mass flow and volume flow			
temperature	o.f.s. = of full scale value			
	If there is a difference between the temperature during zero adjustment and the process temperature, the additional measured error of the sensors is typically $\pm 0.0002$ %o.f.s./°C ( $\pm 0.0001$ % o.f.s./°F).			
	The influence is reduced when the zero adjustment is performed at process temperature.			
	<b>Density</b> If there is a difference between the density calibration temperature and the process temperature, the measured error of the sensors is typically $\pm 0.0001 \text{ g/cm}^{3}/^{\circ}\text{C} (\pm 0.00005 \text{ g/cm}^{3}/^{\circ}\text{F})$ . Field density adjustment is possible.			
	Wide-range density specification (special density calibration) If the process temperature is outside the valid range ( $\rightarrow \cong 263$ ) the measured error is $\pm 0.0001 \text{ g/cm}^3$ /°C ( $\pm 0.00005 \text{ g/cm}^3$ /°F)			

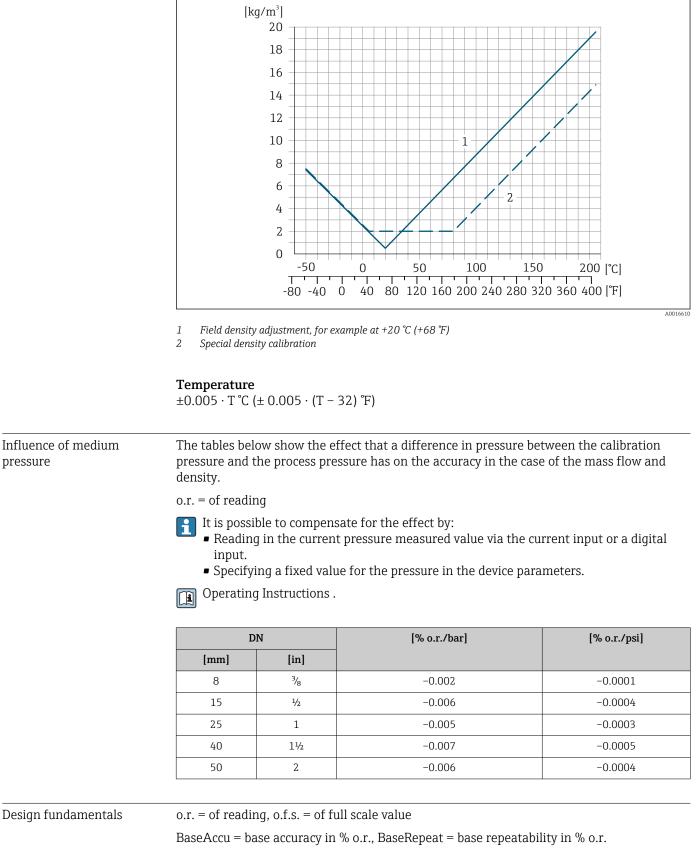

MeasValue = measured value; ZeroPoint = zero point stability


### Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$	± BaseAccu
A0021332	
< ZeroPoint BaseAccu · 100	$\pm \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$
A0021333	A0021334

### Calculation of the maximum repeatability as a function of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$	± BaseRepeat
A0021335	AUU21340
$< \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$	$\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$
A0021336	A0021337

### Example of maximum measured error

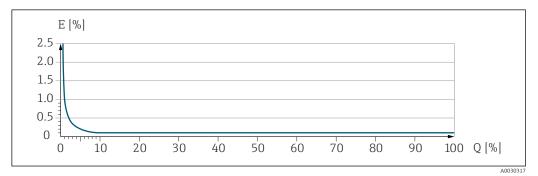

Ε Maximum measured error in % o.r. (example)

Q Flow rate in % of maximum full scale value

#### 16.7 Mounting

Mounting requirements	→ 🖺 20
	16.8 Environment
Ambient temperature range	→ 🗎 22
	Temperature tables
	Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.
	For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.
Storage temperature	$-50 \text{ to } +80 ^{\circ}\text{C} (-58 \text{ to } +176 ^{\circ}\text{F})$

-50 to +80 °C (-58 to +176 °F)


Climate class	DIN EN 60068-2-38 (test Z/AD)
Relative humidity	The device is suitable for use in outdoor and indoor areas with a relative humidity of 4 to 95%.
Operating height	According to EN 61010-1 ■ ≤ 2 000 m (6 562 ft) ■ > 2 000 m (6 562 ft) with additional overvoltage protection (e.g. Endress+Hauser HAW Series)
Degree of protection	Transmitter
	<ul> <li>IP66/67, Type 4X enclosure, suitable for pollution degree 4</li> <li>When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2</li> <li>Display module: IP20, Type 1 enclosure, suitable for pollution degree 2</li> </ul>
	Optional
	Order code for "Sensor options", option CM "IP69
	External WLAN antenna
	IP67
Vibration- and shock-	Vibration sinusoidal, in accordance with IEC 60068-2-6
resistance	<ul> <li>2 to 8.4 Hz, 3.5 mm peak</li> <li>8.4 to 2 000 Hz, 1 g peak</li> </ul>
	Vibration broad-band random, according to IEC 60068-2-64
	<ul> <li>10 to 200 Hz, 0.003 g<sup>2</sup>/Hz</li> <li>200 to 2 000 Hz, 0.001 g<sup>2</sup>/Hz</li> <li>Total: 1.54 g rms</li> </ul>
	Shock half-sine, according to IEC 60068-2-27
	6 ms 30 g
	Rough handling shocks, according to IEC 60068-2-31
Interior cleaning	<ul> <li>Cleaning in place (CIP)</li> <li>Sterilization in place (SIP)</li> <li>Cleaning with pigs</li> </ul>
	<b>Options</b> Oil- and grease-free version for wetted parts, without declaration Order code for "Service", option HA
Mechanical load	Transmitter housing: Protect against mechanical effects, such as shock or impact Do not use as a ladder or climbing aid
Electromagnetic compatibility (EMC)	Details are provided in the Declaration of Conformity.
	This unit is not intended for use in residential environments and cannot guarantee adequate protection of the radio reception in such environments.

## 16.9 Process

### Medium temperature range

Standard version	–50 to +150 °C (–58 to +302 °F)	Order code for "Measuring tube mat., wetted surface", option BB, BC, BD
Extended temperature version	–50 to +205 °C (–58 to +401 °F)	Order code for "Measuring tube mat., wetted surface", option TD, TG

### Dependency of ambient temperature on medium temperature

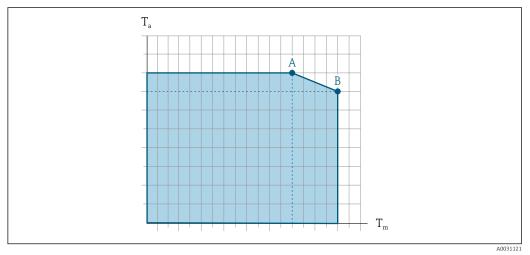

*■ 33 Exemplary representation, values in the table below.* 

- *T<sub>a</sub> Ambient temperature*
- $T_m$  Medium temperature
- A Maximum permitted medium temperature  $T_m$  at  $T_{a max} = 60 \degree C$  (140 °F); higher medium temperatures  $T_m$  require a reduction in the ambient temperature  $T_a$
- *B* Maximum permitted ambient temperature  $T_a$  for the maximum specified medium temperature  $T_m$  of the sensor

Values for devices that are used in the hazardous area: Separate Ex documentation (XA) for the device  $\Rightarrow \cong 283$ .

	Not insulated			Insulated				
	A		B A		А	В		
Version	Ta	T <sub>m</sub>	Ta	T <sub>m</sub>	T <sub>a</sub>	T <sub>m</sub>	T <sub>a</sub>	T <sub>m</sub>
Standard version	60 °C (140 °F)	150 °C (302 °F)	-	-	60 °C (140 °F)	110 °C (230 °F)	55 ℃ (131 °F)	150 °C (302 °F)
Extended temperature version	60 °C (140 °F)	205 °C (401 °F)	-	-	60 °C (140 °F)	110 ℃ (230 ℉)	50 ℃ (122 ℉)	205 °C (401 °F)

#### Density

 
0 to  $5000 \text{ kg/m}^3$  (0 to 312 lb/cf)

Pressure-temperature ratings

For an overview of the pressure-temperature ratings for the process connections, see the Technical Information

Sensor housing

The sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.



If the sensor is to be purged with gas (gas detection), it should be equipped with purge connections.

Do not open the purge connections unless the containment can be filled immediately with a dry, inert gas. Use only low pressure to purge.

Maximum pressure: 5 bar (72.5 psi)

### Burst pressure of the sensor housing

The following sensor housing burst pressures are only valid for standard devices and/or devices equipped with closed purge connections (not opened/as delivered).

If a device fitted with purge connections (order code for "Sensor option", option CH "Purge connection") is connected to the purge system, the maximum pressure is determined by the purge system itself or by the device, depending on which component has the lower pressure classification.

The sensor housing burst pressure refers to a typical internal pressure which is reached prior to mechanical failure of the sensor housing and which was determined during type testing. The corresponding type test declaration can be ordered with the device (order code for "Additional approval", option LN "Sensor housing burst pressure, type test").

 
DN		Sensor housing burst pressure		
[mm] [in]		[bar]	[psi]	
8	3⁄8	190	2 755	
15	1/2	175	2 538	
25	1	165	2 392	
40	11⁄2	152	2 204	
50	2	103	1494	

For information on the dimensions: see the "Mechanical construction" section of the "Technical Information" document

Flow limit

Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.

- For an overview of the full scale values for the measuring range, see the "Measuring range" section  $\rightarrow \cong 254$
- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- In most applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).</li>



Pressure loss

To calculate the pressure loss, use the Applicator sizing tool  $\rightarrow \square 252$ 

System pressure

$\rightarrow$		22
---------------	--	----

### 16.10 Mechanical construction

Design, dimensions	For the dimensions and installation lengths of the device, see the "Technical
	Information" document, "Mechanical construction" section .

#### Weight

All values (weight exclusive of packaging material) refer to devices with EN/DIN PN 40 flanges. Weight specifications including transmitter as per order code for "Housing", option A "Aluminum, coated".

Different values due to different transmitter versions:

- Transmitter version for the hazardous area
- (Order code for "Housing", option A "Aluminum, coated"; Ex d): +2 kg (+4.4 lbs)Transmitter version for hygienic area
  - (Order code for "Housing", option B "Stainless, hygienic"): +0.2 kg (+0.44 lbs)

### Weight in SI units

DN [mm]	Weight [kg]
8	12
15	14
25	20
40	36
50	59

### Weight in US units

DN [in]	Weight [lbs]
3/8	26
1/2	31
1	44
1½	79
2	130

### Materials

### Transmitter housing

Order code for "Housing":

- ${\scriptstyle \bullet} \ \mbox{Option} \ {\scriptstyle A}$  "Aluminum, coated": aluminum, AlSi10Mg, coated
- Option **B** "Stainless, hygienic": stainless steel, 1.4404 (316L)

#### Window material

Order code for "Housing":

- Option **A** "Aluminum, coated": glass
- Option **B** "Stainless, hygienic": polycarbonate

#### Seals

Order code for "Housing": Option **B** "Stainless, hygienic": EPDM and silicone

### Cable entries/cable glands

### Order code for "Housing", option A "Aluminum, coated"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material	
Compression fitting M20 × 1.5	Non-Ex: plastic	
Compression niting W20 ^ 1.5	Z2, D2, Ex d/de: brass with plastic	
Adapter for cable entry with female thread G ½"	Nickel-plated brass	
Adapter for cable entry with female thread NPT ½"		

### Order code for "Housing", option B "Stainless, hygienic"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Plastic
Adapter for cable entry with female thread G $\frac{1}{2}$ "	Nickel-plated brass
Adapter for cable entry with female thread NPT ½"	

### Sensor housing

- Acid and alkali-resistant outer surface
- Stainless steel 1.4301 (304)

### Measuring tubes

Stainless steel, 1.4435 BN2 (316L)

### Process connections

 Flanges according to EN 1092-1 (DIN 2501) / according to ASME B16.5 / according to JIS B2220:

Stainless steel, 1.4404 (F316/F316L)

 All other process connections: Stainless steel, 1.4435 BN2 (316L)

Available process connections→ 🖺 273

### Seals

Welded process connections without internal seals

### Accessories

Protective cover

Stainless steel, 1.4404 (316L)

External WLAN antenna

- Antenna: ASA plastic (acrylonitrile styrene acrylate) and nickel-plated brass
- Adapter: Stainless steel and nickel-plated brass
- Cable: Polyethylene
- Plug: Nickel-plated brass
- Angle bracket: Stainless steel

Process connections	<ul> <li>Fixed flange connections: <ul> <li>EN 1092-1 (DIN 2501) flange</li> <li>EN 1092-1 (DIN 2512N) flange</li> <li>ASME B16.5 flange</li> <li>JIS B2220 flange</li> <li>DIN 11864-2 Form A flange, DIN 11866 series A, flange with notch</li> <li>BBS flange small (sterile orbital), DIN 11866 series A, female</li> <li>BBS flange small (sterile orbital), DIN 11866 series B, female</li> </ul> </li> <li>Clamp connections: <ul> <li>Tri-Clamp (DD tubes), DIN 11866 series C</li> <li>DIN 11864-3 Form A clamp, DIN 11866 series A, with notch</li> <li>DIN 32676 clamp, DIN 11866 series A</li> <li>ISO 2852 clamp, ISO 2037</li> <li>ISO 2852 clamp, ISO 2037</li> <li>ISO 2852 clamp, DIN 11866 series B</li> <li>BBS Quick-Connect (sterile orbital), DIN 11866 series A, female</li> <li>BBS Quick-Connect (sterile orbital), DIN 11866 series A, female</li> <li>Neumo BioConnect clamp, DIN 11866 series A, alamp form R</li> </ul> </li> <li>Eccentric clamp connection: <ul> <li>Eccentric clamp, DIN 11866 series B</li> <li>BBS Quick-Connect (sterile orbital), DIN 11866 series A, female</li> <li>Neumo BioConnect (sterile orbital), DIN 11866 series A, female</li> <li>Neumo BioConnect (sterile orbital), DIN 11866 series A, female</li> <li>BBS Quick-Connect (sterile orbital), DIN 11866 series A, female</li> <li>BBS Quick-Connect (sterile orbital), DIN 11866 series A, female</li> <li>BBS Quick-Connect (sterile orbital), DIN 11866 series A, female</li> <li>BBS Quick-Connect (sterile orbital), DIN 11866 series A, female</li> <li>BBS Quick-Connect (sterile orbital), DIN 11866 series A, female</li> <li>BBS Quick-Connect (sterile orbital), DIN 11866 series A, female</li> <li>BBS Quick-Connect (sterile orbital), DIN 11866 series A, female</li> <li>BBS Quick-Connect (sterile orbital), DIN 11866 series A, female</li> <li>BBS Quick-Connect (sterile orbital), DIN 11866 series A, female</li> <li>BBS Quick-Connect (sterile orbital), DIN 11866 series A, female</li> <li>BBS 1145 thread</li> <li>IN 11851 thread, DIN 11866 series A</li> <li>BBS thread (sterile</li></ul></li></ul>
Surface roughness	All data refer to parts in contact with the medium. The following surface roughness categories can be ordered. • $Ra_{max} = 0.76 \ \mu m (30 \ \mu in)$ • $Ra_{max} = 0.38 \ \mu m (15 \ \mu in) electropolished$ • Delta ferrite <1%
	16.11 Operability

Languages

Can be operated in the following languages:


- Via local operation
   English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Vietnamese, Czech, Swedish
- Via Web browser
   English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Vietnamese, Czech, Swedish
- Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese

### Local operation

### Via display module

- Equipment:
- Order code for "Display; operation", option F "4-line, illuminated, graphic display; touch control"
- Order code for "Display; operation", option G "4-line, illuminated, graphic display; touch control + WLAN"

Information about WLAN interface  $\rightarrow \square$  66

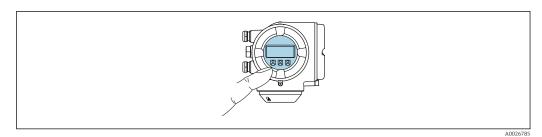

34 Operation with touch control

### Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured


#### **Operating elements**

- External operation via touch control (3 optical keys) without opening the housing:  $\boxdot$ ,  $\boxdot$ ,  $\boxdot$
- Operating elements also accessible in the various zones of the hazardous area

### Via remote display and operating module DKX001

The remote display and operating module DKX001 is available as an optional extra  $\rightarrow \cong 250$ .

- The remote display and operating module DKX001 is only available for the following housing version: order code for "Housing": option A "Aluminum, coated"
- The measuring device is always supplied with a dummy cover when the remote display and operating module DKX001 is ordered directly with the measuring device. Display or operation at the transmitter is not possible in this case.
- If ordered subsequently, the remote display and operating module DKX001 may not be connected at the same time as the existing measuring device display module. Only one display or operation unit may be connected to the transmitter at any one time.

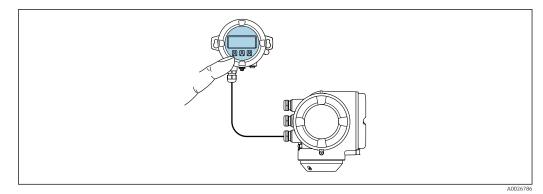

35 Operation via remote display and operating module DKX001

### Display and operating elements

The display and operating elements correspond to those of the display module  $\rightarrow \cong 274$ .

#### Housing material

The housing material of the display and operating module DKX001 depends on the choice of transmitter housing material.

Transmitter housing	Remote display and operating module	
Order code for "Housing"	Material	Material
Option <b>A</b> "Aluminum, coated"	AlSi10Mg, coated	AlSi10Mg, coated

#### Cable entry

Corresponds to the choice of transmitter housing, order code for "Electrical connection".

Connecting cable

→ 🗎 30

#### Dimensions

Information about dimensions:

"Mechanical construction" section of the "Technical Information" document.

Remote operation	$\rightarrow$	🗎 65
------------------	---------------	------

Service interface  $\rightarrow \cong 66$ 

# Supported operating tools

Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information		
Web browser	Notebook, PC or tablet with Web browser	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li></ul>	Special Documentation for the device $\rightarrow \textcircled{B} 284$		
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	<ul> <li>CDI-RJ45 service interface</li> <li>WLAN interface</li> <li>Fieldbus protocol</li> </ul>	→ 🗎 252		
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→ 🗎 252		

Supported operating tools	Operating unit	Interface	Additional information
Field Xpert	SMT70/77/50	<ul> <li>All fieldbus protocols</li> <li>WLAN interface</li> <li>Bluetooth</li> <li>CDI-RJ45 service interface</li> </ul>	Operating Instructions BA01202S Device description files: Use update function of handheld terminal
SmartBlue app	Smart phone or tablet with iOs or Android	WLAN	→ 🗎 252

Other operating tools based on FDT technology with a device driver such as DTM/ iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:

- Field Device Manager (FDM) from Honeywell → www.process.honeywell.com
- FieldMate from Yokogawa → www.yokogawa.com
- PACTWare → www.pactware.com

The related device description files are available: www.endress.com  $\rightarrow$  Download Area

#### Web server

With the integrated web server, the device can be operated and configured via a web browser via Ethernet-APL, the the service interface (CDI-RJ45) or via the WLAN interface . The structure of the operating menu is the same as for the local display. In addition to the measured values, device status information is also displayed and allows users to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

Access to the network is required for the Ethernet-APL connection.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

#### Supported functions

Data exchange between the operating unit (such as a notebook for example) and the measuring device:

- Upload the configuration from the measuring device (XML format, configuration backup)
- Save the configuration to the measuring device (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file or PDF file, document the measuring point configuration)
- Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)
- Flash firmware version for device firmware upgrade, for instance
- Download driver for system integration
- Visualize up to 1000 saved measured values (only available with the **Extended HistoROM** application package  $\rightarrow \cong 281$ )

Web server special documentation → 🗎 284

HistoROMThe measuring device features HistoROM data management. HistoROM data managementdata managementcomprises both the storage and import/export of key device and process data, making<br/>operation and servicing far more reliable, secure and efficient.

When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

### Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	HistoROM backup	T-DAT	S-DAT
Available data	<ul> <li>Event logbook such as diagnostic events for example</li> <li>Parameter data record backup</li> <li>Device firmware package</li> <li>Driver for system integration for exporting via Web server, e.g: GSDML for PROFINET</li> </ul>	<ul> <li>Measured value logging ("Extended HistoROM" order option)</li> <li>Current parameter data record (used by firmware at run time)</li> <li>Peakhold indicator (min/max values)</li> <li>Totalizer values</li> </ul>	<ul> <li>Sensor data: nominal diameter etc.</li> <li>Serial number</li> <li>Calibration data</li> <li>Device configuration (e.g. SW options, fixed I/O or multi I/O)</li> </ul>
Storage location	Fixed on the user interface board in the connection compartment	Attachable to the user interface board in the connection compartment	In the sensor plug in the transmitter neck part

### Data backup

### Automatic

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors
- If exchanging the electronics module (e.g. I/O electronics module): Once the electronics module has been replaced, the software of the module is compared against the current device firmware. The module software is upgraded or downgraded where necessary. The electronics module is available for use immediately afterwards and no compatibility problems occur.

### Manual

Additional parameter data record (complete parameter settings) in the integrated device memory HistoROM backup for:

- Data backup function Backup and subsequent restoration of a device configuration in the device memory HistoROM backup
- Data comparison function Comparison of the current device configuration with the device configuration saved in the device memory HistoROM backup

### Data transmission

### Manual

- Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)
- Transmission of the drivers for system integration via Web server, e.g.: GSDML for PROFINET

### Event list

### Automatic

- Chronological display of up to 20 event messages in the events list
- If the Extended HistoROM application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

### Data logging

### Manual

- If the **Extended HistoROM** application package (order option) is enabled:
- Record up to 1000 measured values via 1 to 4 channels
- User configurable recording interval
- Record up to 250 measured values via each of the 4 memory channels
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or web server

### 16.12 Certificates and approvals

Current certificates and approvals that are available for the product can be selected via the Product Configurator at www.endress.com:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select **Configuration**.

CE mark The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied. Endress+Hauser confirms successful testing of the device by affixing to it the CE mark. The device meets the legal requirements of the applicable UK regulations (Statutory UKCA marking Instruments). These are listed in the UKCA Declaration of Conformity along with the designated standards. By selecting the order option for UKCA marking, Endress+Hauser confirms a successful evaluation and testing of the device by affixing the UKCA mark. Contact address Endress+Hauser UK: Endress+Hauser Ltd. Floats Road Manchester M23 9NF United Kingdom www.uk.endress.com Ex approval The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.

Hygienic compatibility	<ul> <li>3-A approval</li> <li>Only measuring devices with the order code for "Additional approval", option LP "3A" have 3-A approval.</li> <li>The 3-A approval refers to the measuring device.</li> <li>When installing the measuring device, ensure that no liquid can accumulate on the outside of the measuring device. A remote display module must be installed in accordance with the 3-A Standard.</li> <li>Accessories (e.g. heating jacket, weather protection cover, wall holder unit) must be installed in accordance with the 3-A Standard. Each accessory can be cleaned. Disassembly may be necessary under certain circumstances.</li> <li>EHEDG-tested</li> <li>Only devices with the order code for "Additional approval", option LT "EHEDG" have been tested and meet the requirements of the EHEDG. To meet the requirements for EHEDG certification, the device must be used with process connections in accordance with the EHEDG position paper entitled "Easy cleanable Pipe couplings and Process connections" (www.ehedg.org).</li> <li>FDA</li> <li>Food Contact Materials Regulation (EC) 1935/2004</li> </ul>
Pharmaceutical compatibility	<ul> <li>FDA 21 CFR 177</li> <li>USP &lt;87&gt;</li> <li>USP &lt;88&gt; Class VI 121 °C</li> <li>TSE/BSE Certificate of Suitability</li> <li>cGMP</li> <li>Devices with the order code for "Test, certificate", option JG "Conformity with cGMP-derived requirements, declaration" comply with the requirements of cGMP with regard to the surfaces of parts in contact with the medium, design, FDA 21 CFR material conformity, USP Class VI tests and TSE/BSE conformity.</li> <li>A serial number-specific declaration is generated.</li> </ul>
Certification PROFINET with Ethernet-APL	<ul> <li>PROFINET interface</li> <li>The measuring device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e.V. / PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:</li> <li>Certified according to: <ul> <li>Test specification for PROFINET devices</li> <li>PROFINET PA Profile 4</li> <li>PROFINET Netload Robustness Class 2 10 Mbps</li> <li>APL conformance test</li> </ul> </li> <li>The device can also be operated with certified devices of other manufacturers (interoperability)</li> <li>The device supports PROFINET S2 system redundancy.</li> </ul>

Pressure Equipment Directive	<ul> <li>With the marking: <ul> <li>a) PED/G1/x (x = category) or</li> <li>b) UK/G1/x (x = category)</li> <li>on the sensor nameplate, Endress+Hauser confirms compliance with the "Essential Safety Requirements"</li> <li>a) specified in Annex I of the Pressure Equipment Directive 2014/68/EU or</li> <li>b) Schedule 2 of Statutory Instruments 2016 No. 1105.</li> </ul> </li> <li>Devices not bearing this marking (without PED or UKCA) are designed and manufactured according to sound engineering practice. They meet the requirements of <ul> <li>a) Art. 4 Para. 3 of the Pressure Equipment Directive 2014/68/EU or</li> <li>b) Part 1, Para. 8 of Statutory Instruments 2016 No. 1105.</li> </ul> </li> <li>The scope of application is indicated <ul> <li>a) in diagrams 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU or</li> <li>b) Schedule 3, Para. 2 of Statutory Instruments 2016 No. 1105.</li> </ul> </li> </ul>
Radio approval	The measuring device has radio approval.
	For detailed information on the radio approval, see the Special Documentation $\rightarrow \cong 284$
 Additional certification	CRN approval
	Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.
	Tests and certificates
	<ul> <li>EN10204-3.1 material certificate, wetted parts and sensor housing</li> <li>Pressure test, internal process, inspection certificate</li> <li>PMI test (XRF), internal procedure, wetted parts, test report</li> <li>Compliance with requirements derived from cGMP, Declaration</li> <li>EN10204-2.1 confirmation of compliance with the order and EN10204-2.2 test report</li> </ul>
Other standards and guidelines	<ul> <li>EN 60529</li> <li>Degrees of protection provided by enclosures (IP code)</li> <li>IEC/EN 60068-2-6</li> </ul>
	<ul> <li>Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).</li> <li>IEC/EN 60068-2-31 Environmental influences: Test procedure - Test Ec: shocks due to rough handling,</li> </ul>
	primarily for devices.
	<ul> <li>EN 61010-1 Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements</li> <li>IEC/EN 61326-2-3</li> </ul>
	<ul> <li>Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).</li> <li>NAMUR NE 21</li> </ul>
	Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment <ul> <li>NAMUR NE 32</li> </ul>
	Data retention in the event of a power failure in field and control instruments with microprocessors <ul> <li>NAMUR NE 43</li> </ul>
	<ul><li>Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.</li><li>NAMUR NE 53</li></ul>
	Software of field devices and signal-processing devices with digital electronics

NAMUR NE 80

The application of the pressure equipment directive to process control devices

- NAMUR NE 105
   Specifications for it
  - Specifications for integrating fieldbus devices in engineering tools for field devices
- NAMUR NE 107
- Self-monitoring and diagnosis of field devices
- NAMUR NE 131 Requirements for field devices for standard applications
- NAMUR NE 132
- Coriolis mass meter
- ETSI EN 300 328
  - Guidelines for 2.4 GHz radio components.
- EN 301489
   Electromagnetic compatibility and radio spectrum matters (ERM).

# 16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

Detailed information on the application packages: Special Documentation for the device  $\rightarrow \cong 283$ 

Diagnostic functionality	Order code for "Application package", option EA "Extended HistoROM"				
	Comprises extended functions concerning the event log and the activation of the measured value memory.				
	Event log: Memory volume is extended from 20 message entries (standard version) to up to 100 entries.				
	<ul> <li>Data logging (line recorder):</li> <li>Memory capacity for up to 1000 measured values is activated.</li> <li>250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user.</li> <li>Measured value logs can be accessed via the local display or operating tool e.g. FieldCare DeviceCare or Web server.</li> </ul>				
	For detailed information, see the Operating Instructions for the device.				
Heartbeat Technology	Order code for "Application package", option EB "Heartbeat Verification + Monitoring"				
	<ul> <li>Heartbeat Verification</li> <li>Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a)</li> <li>"Control of monitoring and measuring equipment".</li> <li>Functional testing in the installed state without interrupting the process.</li> <li>Traceable verification results on request, including a report.</li> <li>Simple testing process via local operation or other operating interfaces.</li> <li>Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications.</li> <li>Extension of calibration intervals according to operator's risk assessment.</li> </ul>				

	<ul> <li>Heartbeat Monitoring</li> <li>Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:</li> <li>Draw conclusions - using these data and other information - about the impact process influences (e.g. corrosion, abrasion, formation of buildup etc.) have on the measuring performance over time.</li> <li>Schedule servicing in time.</li> <li>Monitor the process or product quality, e.g. gas pockets.</li> </ul>
Concentration	Order code for "Application package", option ED "Concentration"
measurement	Calculation and outputting of fluid concentrations.
	<ul> <li>The measured density is converted to the concentration of a substance of a binary mixture using the "Concentration" application package:</li> <li>Choice of predefined fluids (e.g. various sugar solutions, acids, alkalis, salts, ethanol etc.).</li> <li>Common or user-defined units ("Brix, "Plato, % mass, % volume, mol/l etc.) for standard applications.</li> <li>Concentration calculation from user-defined tables.</li> </ul>
	$\operatorname{For}$ For detailed information, see the Special Documentation for the device.
Special density	Order code for "Application package", option EE "Special density"
	Many applications use density as a key measured value for monitoring quality or controlling processes. The device measures the density of the fluid as standard and makes this value available to the control system.
	The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.
	For detailed information, see the Operating Instructions for the device.
	16.14 Accessories
	Overview of accessories available for order $\rightarrow \cong 250$

# 16.15 Supplementary documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

### Standard documentation Brief Operating Instructions

### Brief Operating Instructions for the sensor

Measuring device	Documentation code
Proline Promass P	KA01286D

### Brief Operating Instructions for transmitter

Measuring device	Documentation code
Proline 300	KA01517D

### **Technical Information**

Measuring device	Documentation code
Promass P 300	TI01276D

### **Description of Device Parameters**

	Documentation code							
Measuring device	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET	PROFINET with Ethernet- APL
Promass 300	GP01057D	GP01094D	GP01058D	GP01134D	GP01059D	GP01114D	GP01115D	GP01168D

Supplementary devicedependent documentation

#### Safety instructions

Safety instructions for electrical equipment for hazardous areas.

Contents	Documentation code
ATEX/IECEx Ex d/Ex de	XA01405D
ATEX/IECEx Ex ec	XA01439D
cCSAus XP	XA01373D
cCSAus Ex d/ Ex de	XA01372D
cCSAus Ex nA	XA01507D
INMETRO Ex d/Ex de	XA01468D
INMETRO Ex ec	XA01470D
NEPSI Ex d/Ex de	XA01469D
NEPSI Ex nA	XA01471D
EAC Ex d/Ex de	XA01656D
EAC Ex nA	XA01657D
JPN Ex d	XA01778D

### Remote display and operating module DKX001

Contents	Documentation code
ATEX/IECEx Ex i	XA01494D
ATEX/IECEx Ex ec	XA01498D

Contents	Documentation code
cCSAus IS	XA01499D
cCSAus Ex nA	XA01513D
INMETRO Ex i	XA01500D
INMETRO Ex ec	XA01501D
NEPSI Ex i	XA01502D
NEPSI Ex nA	XA01503D

### Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Remote display and operating module DKX001	SD01763D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
Web server	SD02760D
Heartbeat Technology	SD02731D
Concentration measurement	SD02735D

### Installation Instructions

Contents	Comment
Installation instructions for spare part sets and accessories	<ul> <li>Access the overview of all the available spare part sets via <i>Device Viewer</i> →  <sup>(1)</sup> 248</li> <li>Accessories available for order with Installation Instructions →  <sup>(2)</sup> 250</li> </ul>

# Index

## 0...9

3-A approval	 •	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	·	•	•	•	•	•	•	27	'9

# Α

Access authorization to parameters Read access	56
Write access	6
Access code	6
Incorrect input	6
Adapting the diagnostic behavior	'3
Additional certification 28	
Ambient conditions	
Mechanical load	68
Operating height	
Relative humidity	
Ambient temperature	
Influence	55
Ambient temperature range 26	
Analog Output module	
Application	
Application packages	
Approvals	

## В

Binary Input module	76
Binary Output module	81

# C

Cable entries	
Technical data	3
Cable entry	
Degree of protection	
CE mark	3
Certificates	3
Certification PROFINET with Ethernet-APL 279	9
cGMP 279	9
Check	
Connection	
Installation	3
Checklist	
Post-connection check	
Post-installation check	3
Cleaning	
Cleaning in place (CIP)	7
Exterior cleaning	7
Interior cleaning	7
Sterilization in place (SIP)	7
Cleaning in place (CIP) 268	З
Climate class	З
Commissioning 80	6
Advanced settings	C
Configuring the measuring device 82	7
Connecting cable	
Connecting the measuring device	3
Connecting the signal cables	
Connecting the supply voltage cables	3

Connection
see Electrical connection
Connection preparations
Connection tools
Context menu
Calling up
Closing
Explanation
Current consumption
Cyclic data transmission
<b>D</b>
D
Date of manufacture
$Declaration \ of \ Conformity \ \ldots \ 10$
Define access code
Degree of protection
Density
Density adjustment
Design fundamentals
Maximum measured error
Repeatability
Device components
Device description files
Device locking, status
Device notking, status
GSD
Device name
Sensor
Device repair
Device revision
Device type ID
Device Viewer
DeviceCare
Device description file
Diagnostic behavior
Explanation
Symbols
Diagnostic information
Design, description
DeviceCare
FieldCare
Light emitting diodes
Local display
Overview
Remedial measures
Web browser
Diagnostic list
Diagnostic message
Diaqnostics
Symbols
Dimensions
DIP switch
see Write protection switch
Direct access
Direct access code

Disabling write protection
see Local display
Display and operating module DKX001 274
Display area
For operational display
In the navigation view
Display values
For locking status149Disposal249
Document
Function
Symbols
Document function
Document information
Down pipe
2000 p.pe 100 100 100 20
Е
Editing view
Input screen
Using operating elements
EHDEG-certified 279
Electrical connection
Degree of protection
Measuring device
Operating tools
Via APL network
Via service interface (CDI-RJ45) 66
Via WLAN interface
RSLogix 5000
Web server
WLAN interface
Electromagnetic compatibility
Electronics module
Enabling write protection
Enabling/disabling the keypad lock
Endress+Hauser services
Maintenance
Repair
Environment
Storage temperature
Vibration- and shock-resistance
Error messages
see Diagnostic messages
Event list
Event logbook
Ex approval
Extended order code
Sensor
Transmitter
Exterior cleaning
F
FDA
Field of application
Residual risks
FieldCare
Device description file
Establishing a connection

Function68User interface69Filtering the event logbook242
Firmware
Release date
Version
Firmware history
Flow direction
Flow limit
Food Contact Materials Regulation
Function scope
SIMATIC PDM
Functions
see Parameters

### G

Galvanic isolation	261
Gas Fraction Handler	161

## Η

# I

Identifying the measuring device
Incoming acceptance
Influence
Ambient temperature
Medium pressure
Medium temperature
Inlet runs
Input
Inspection
Received goods
Intended use
Interior cleaning 247, 268

# L

Languages, operation options
Line recorder
Local display
Navigation view
see Diagnostic message
see In alarm condition
see Operational display
Text editor
Low flow cut off

### Μ

Main electronics module	13
Maintenance tasks	47
Managing the device configuration 1	40
Manufacturer ID	71
Mass module	77
Mass Totalizer Control module	77

Maximum measured error
Measured values
see Process variables
Measurement accuracy
Measuring and test equipment
Measuring device
Configuration
Conversion
Disposal
Mounting the sensor
Preparing for electrical connection
Preparing for mounting
Removing
Repairs
Structure
Switching on
Measuring principle
Measuring range
For liquids
Measuring range, recommended
Measuring system
Mechanical load
Medium pressure
Influence
Medium temperature
Influence
Menu
Diagnostics
Setup
Menus
For measuring device configuration
For specific settings
Module
Module Analog output
Module
Module Analog output
Module Analog output
Module80Analog output80Binary Input76Binary Output81
Module80Analog output80Binary Input76Binary Output81Mass77
Module80Analog output76Binary Input76Binary Output81Mass77Mass Totalizer Control77
Module80Analog output80Binary Input76Binary Output81Mass77Mass Totalizer Control77Totalizer78
Module80Analog output80Binary Input76Binary Output81Mass77Mass Totalizer Control77Totalizer78Totalizer Control79
Module80Analog output80Binary Input76Binary Output81Mass77Mass Totalizer Control77Totalizer78Totalizer Control79Mounting20
Module80Analog output80Binary Input76Binary Output81Mass77Mass Totalizer Control77Totalizer78Totalizer Control79Mounting20Mounting dimensions
Module80Analog output80Binary Input76Binary Output81Mass77Mass Totalizer Control77Totalizer78Totalizer Control79Mounting20Mounting dimensionssee Dimensions
Module80Analog output80Binary Input76Binary Output81Mass77Mass Totalizer Control77Totalizer78Totalizer Control79Mounting20Mounting dimensions20Mounting location20
Module80Analog output80Binary Input76Binary Output81Mass77Mass Totalizer Control77Totalizer78Totalizer Control79Mounting20Mounting dimensions20Mounting location20Mounting preparations25
Module80Analog output80Binary Input76Binary Output81Mass77Mass Totalizer Control77Totalizer78Totalizer Control79Mounting20Mounting location20Mounting preparations25Mounting requirements25
Module80Analog output80Binary Input76Binary Output81Mass77Mass Totalizer Control77Totalizer78Totalizer Control79Mounting20Mounting dimensions see Dimensions20Mounting location20Mounting preparations25Mounting requirements Dimensions22
Module80Analog output80Binary Input76Binary Output81Mass77Mass Totalizer Control77Totalizer78Totalizer Control79Mounting20Mounting location20Mounting preparations25Mounting requirements22Dimensions22Down pipe20
Module80Analog output80Binary Input76Binary Output81Mass77Mass Totalizer Control77Totalizer78Totalizer Control79Mounting20Mounting location20Mounting preparations25Mounting requirements22Dimensions22Down pipe20Inlet and outlet runs22
Module80Analog output80Binary Input76Binary Output81Mass77Mass Totalizer Control77Totalizer78Totalizer Control79Mounting20Mounting dimensions see Dimensions20Mounting preparations25Mounting requirements25Dimensions22Down pipe20Inlet and outlet runs22Mounting location22Mounting location20
Module80Analog output80Binary Input76Binary Output81Mass77Mass Totalizer Control77Totalizer78Totalizer Control79Mounting20Mounting dimensions see Dimensions20Mounting preparations25Mounting requirements22Dimensions22Mounting location20Mounting requirements20Dimensions22Down pipe20Inlet and outlet runs22Mounting location20Orientation20Orientation21
Module80Analog output80Binary Input76Binary Output81Mass77Mass Totalizer Control77Totalizer78Totalizer Control79Mounting20Mounting dimensions see Dimensions20Mounting preparations25Mounting requirements22Dimensions22Mounting location20Mounting requirements20Dimensions22Down pipe20Inlet and outlet runs22Mounting location20Orientation20Orientation21Sensor heating23
Module80Analog output80Binary Input76Binary Output81Mass77Mass Totalizer Control77Totalizer78Totalizer Control79Mounting20Mounting dimensions see Dimensions20Mounting preparations25Mounting requirements21Dimensions22Mounting location20Mounting requirements21Dimensions22Sensor heating21System pressure22
Module80Analog output80Binary Input76Binary Output81Mass77Mass Totalizer Control77Totalizer78Totalizer Control79Mounting20Mounting dimensions see Dimensions20Mounting preparations25Mounting requirements22Dimensions22Down pipe20Inlet and outlet runs22Mounting location20Orientation21Sensor heating23System pressure22Thermal insulation23
Module80Analog output80Binary Input76Binary Output81Mass77Mass Totalizer Control77Totalizer78Totalizer Control79Mounting20Mounting dimensions see Dimensions20Mounting preparations25Mounting requirements21Dimensions22Mounting location20Mounting requirements21Dimensions22Sensor heating21System pressure22

Nameplate	
Sensor	6
Transmitter	5
Navigation path (navigation view)	З
Navigation view	
In the submenu	З
In the wizard	З
Numeric editor	C

### 0

Onsite display
Numeric editor
Operable flow range
Operating elements
Operating height
Operating keys
see Operating elements
Operating menu
Menus, submenus
Structure
Submenus and user roles
Operating philosophy
Operation
Operation options
Operational display
Operational safety 10
Order code
Orientation (vertical, horizontal)
Outlet runs
Output signal
Output variables 256
n
P
Packaging disposal
Parameter
Changing
Entering values or text
Parameter settings
Administration (Submenu)
Advanced setup (Submenu)
APL port (Submenu)
Configuration backup (Submenu)
Corrected volume flow calculation (Submenu) 121
Current input
Current input (Wizard)
Current input 1 to n (Submenu)
Current output
Current output (Wizard)
Data logging (Submenu) 158
Define access code (Wizard)

Density adjustment (Wizard)123Device information (Submenu)244Diagnostics (Menu)240Display (Submenu)131Display (Wizard)114I/O configuration97I/O configuration (Submenu)97

Low flow cut off (Wizard) ..... 118

Medium selection (Wizard) ..... 93 Network diagnostics (Submenu) . . . . . . . . . . . . . . . . 90 Partially filled pipe detection (Wizard) . . . . . . 119 Pulse/frequency/switch output (Wizard) Pulse/frequency/switch output 1 to n (Submenu) 155 Relay output 1 to n (Submenu) ..... 156 Status input 1 to n (Wizard) ..... 99 Totalizer (Submenu) ..... 152 Totalizer 1 to n (Submenu) ..... 129 Value current output 1 to n (Submenu) . . . . . . . 155 WLAN settings (Wizard) ..... 137 Zero adjustment (Wizard) ..... 127 Process variables 

### R

0
6
9
7
3
8

Remedial measures	
Calling up	70
Closing	70
Remote operation	75
Repair	
Notes	
Repair of a device	
Repeatability	
Replacement	
Device components	48
Requirements for personnel	
Response time	
Return	
Netum	±0
S	
Safety	q
Sensor	9
	56
Mounting	
Sensor heating	
Sensor housing	
Serial number	
Setting the operating language	36
Settings	
Adapting the measuring device to the process	
conditions	
Administration	
Advanced display configurations 13	
Analog Input	
Communication interface 8	
Current input	98
Current output	00
I/O configuration   I/O	
	97
I/O configuration	97 14
I/O configuration	97 14 18
I/O configuration       9         Local display       11         Low flow cut off       11         Managing the device configuration       14	97 14 18 40
I/O configuration       9         Local display       11         Low flow cut off       11         Managing the device configuration       14         Medium       9	97 14 18 40 93
I/O configuration       9         Local display       11         Low flow cut off       12         Managing the device configuration       14         Medium       9         Operating language       8	97 14 18 40 93 36
I/O configuration       9         Local display       11         Low flow cut off       11         Managing the device configuration       14         Medium       9         Operating language       8         Partially filled pipe detection       11	97 14 18 40 93 36 19
I/O configuration9Local display11Low flow cut off11Managing the device configuration14Medium14Operating language8Partially filled pipe detection11Pulse output10	97 14 18 40 93 36 19 03
I/O configuration9Local display11Low flow cut off11Managing the device configuration14Medium9Operating language8Partially filled pipe detection11Pulse output10Pulse/frequency/switch output103, 10	97 14 18 40 93 36 19 03 05
I/O configuration9Local display11Low flow cut off11Managing the device configuration14Medium9Operating language11Pulse output10Pulse output10Pulse/frequency/switch output103, 10Relay output11	97 14 18 40 93 36 19 03 05 11
I/O configuration9Local display11Low flow cut off11Managing the device configuration14Medium9Operating language6Partially filled pipe detection11Pulse output10Pulse/frequency/switch output103, 10Relay output11Resetting the device24	97 14 18 40 93 36 19 03 05 11 44
I/O configuration1Local display1Low flow cut off1Managing the device configuration14Medium14Operating language6Partially filled pipe detection11Pulse output10Pulse/frequency/switch output103, 10Relay output11Resetting the device24Resetting the totalizer15	97 14 18 40 93 19 03 11 44 56
I/O configuration9Local display11Low flow cut off11Managing the device configuration14Medium14Medium14Operating language15Partially filled pipe detection11Pulse output10Pulse/frequency/switch output103, 10Relay output11Resetting the device24Resetting the totalizer15Sensor adjustment12	97 14 18 40 93 19 36 19 35 11 44 56 22
I/O configuration9Local display11Low flow cut off11Managing the device configuration14Medium14Medium14Operating language8Partially filled pipe detection11Pulse output10Pulse/frequency/switch output103, 10Relay output11Resetting the device24Resetting the totalizer12Sensor adjustment12Simulation14	97 14 18 93 19 05 11 44 56 22 43
I/O configuration9Local display11Low flow cut off11Managing the device configuration14Medium14Medium14Operating language15Partially filled pipe detection16Pulse output10Pulse/frequency/switch output103, 10Relay output11Resetting the device24Resetting the totalizer15Sensor adjustment12Simulation14Status input14	97 14 18 93 19 36 93 11 44 56 22 39
I/O configuration1Local display1Low flow cut off1Managing the device configuration14Medium14Operating language14Partially filled pipe detection11Pulse output10Pulse/frequency/switch output103, 10Relay output11Resetting the device24Resetting the totalizer12Simulation14Status input10Switch output10	97 $140$ $936$ $936$ $130$ $144$ $522$ $399$ $000$
I/O configuration1Local display1Low flow cut off1Managing the device configuration14Medium14Medium14Operating language14Pulse output10Pulse output10Pulse/frequency/switch output103, 10Relay output11Resetting the device24Resetting the totalizer15Sensor adjustment12Switch output10Switch output10System units10	97 $140$ $936$ $936$ $130$ $144$ $522$ $399$ $030$ $144$ $522$ $399$ $030$ $000$
I/O configuration9Local display11Low flow cut off11Managing the device configuration14Medium9Operating language6Partially filled pipe detection11Pulse output10Pulse/frequency/switch output103, 10Relay output11Resetting the device24Resetting the totalizer12Simulation14Status input10System units9Tag name8	97 $140$ $360$ $360$ $193$ $114$ $562$ $399$ $90$ $380$ $305$ $114$ $562$ $399$ $90$ $380$ $3$
I/O configuration9Local display11Low flow cut off11Managing the device configuration14Medium9Operating language8Partially filled pipe detection11Pulse output10Pulse/frequency/switch output103, 10Relay output11Resetting the device24Resetting the totalizer12Sensor adjustment12Simulation14Status input10System units9Tag name8Totalizer12	97 $14$ $18$ $936$ $936$ $193$ $11$ $466$ $223$ $990$ $389$ $290$ $389$ $290$ $389$ $38$
I/O configuration9Local display11Low flow cut off11Managing the device configuration14Medium9Operating language8Partially filled pipe detection11Pulse output10Pulse/frequency/switch output103, 10Relay output11Resetting the device24Resetting the totalizer12Simulation14Status input10System units9Tag name8Totalizer reset15	97 14 18 93 93 93 93 93 93 93 93 93 93 93 93 93
I/O configuration1Local display1Low flow cut off1Managing the device configuration14Medium14Medium14Medium14Operating language14Pulse output16Pulse output103, 10Relay output11Resetting the device24Resetting the totalizer15Sensor adjustment12Simulation14Status input16System units17Tag name18Totalizer12WLAN13	97 $140$ $369$ $310$ $140$ $369$ $310$ $144$ $522$ $399$ $3256$ $37$ $3266$ $37$
I/O configuration9Local display11Low flow cut off11Managing the device configuration14Medium9Operating language10Pulse output10Pulse output10Pulse/frequency/switch output103, 10Relay output11Resetting the device24Resetting the totalizer15Sensor adjustment12Simulation14Status input10System units10Tag name12Totalizer15Show data logging15	97 $140$ $369$ $100$ $146$ $236$ $100$ $1446$ $239$ $900$ $329$ $326$ $356$
I/O configuration1Local display1Low flow cut off1Managing the device configuration14Medium14Medium14Medium14Medium14Medium14Medium14Medium14Medium14Medium15Operating language16Partially filled pipe detection11Pulse output10Pulse/frequency/switch output103, 10Relay output11Resetting the device24Resetting the totalizer15Sensor adjustment12Simulation14Status input16System units17Totalizer12Totalizer reset15WLAN13Show data logging15Signal on alarm25	97480369351465239908256789
I/O configuration9Local display11Low flow cut off11Managing the device configuration14Medium9Operating language8Partially filled pipe detection11Pulse output10Pulse/frequency/switch output103, 10Relay output11Resetting the device24Resetting the totalizer12Simulation14Status input16System units9Tag name8Totalizer reset15WLAN15Show data logging15Simulatio n alarm25SIMATIC PDM6	97489369351465239908267899
I/O configuration9Local display11Low flow cut off11Managing the device configuration14Medium9Operating language6Partially filled pipe detection11Pulse output10Pulse/frequency/switch output103, 10Relay output11Resetting the device24Resetting the totalizer12Sensor adjustment12Simulation14Status input9Switch output10System units9Totalizer reset12WLAN13Show data logging15Signal on alarm25SIMATIC PDM6Function6	9748936935144623990889678999
I/O configuration9Local display11Low flow cut off11Managing the device configuration14Medium9Operating language6Partially filled pipe detection11Pulse output10Pulse/frequency/switch output103, 10Relay output11Resetting the device24Resetting the device24Resetting the totalizer15Sensor adjustment12Simulation14Status input16System units17Totalizer12Totalizer reset15WLAN15Show data logging15Signal on alarm25Software release7	91493693514623990826389991
I/O configuration9Local display11Low flow cut off11Managing the device configuration14Medium9Operating language6Partially filled pipe detection11Pulse output10Pulse/frequency/switch output103, 10Relay output11Resetting the device24Resetting the totalizer12Sensor adjustment12Simulation14Status input9Switch output10System units9Totalizer reset12WLAN13Show data logging15Signal on alarm25SIMATIC PDM6Function6	914936935146239908967899914

Special connection instructions	37
Special mounting instructions	
Hygienic compatibility	
Standards and guidelines	280
Status area	
For operational display	46
In the navigation view	48
Status signals	171
Sterilization in place (SIP)	268
Storage concept	277
Storage conditions	. 18
Storage temperature	18
Storage temperature range	267
Structure	
Measuring device	
Operating menu	44
Submenu	
Administration	142
Advanced setup	121
Analog inputs	94
APL port	89
Calculated values	121
Communication	88
Concentration	139
Configuration backup	140
Corrected volume flow calculation	121
Current input 1 to n	153
Data logging	158
	244
Display	131
	241
Heartbeat setup	140
I/O configuration	97
Input values	153
Mass flow	94
	149
Measured variables	150
Measurement mode	162
Medium index	162
Network diagnostics	90
Output values	154
Overview	45
	140
	121
Pulse/frequency/switch output 1 to n	155
Relay output 1 to n	156
Reset access code	142
Sensor adjustment	122
	. 89
	143
Status input 1 to n	154
System units	90
	152
	129
J	156
1	155
5	139
Web server	64
Supply voltage	262

Surface roughness
Switch output
Symbols
Controlling data entries
For communication
For diagnostic behavior
For locking
For measured variable
For measurement channel number
For menus
For parameters
For status signal
For submenu 49
For wizard
In the status area of the local display
Input screen
Operating elements
System design
Measuring system
see Measuring device design
System integration
System pressure
System redundancy S2
Т
- Technical data, overview
Temperature range
Ambient temperature range for display 274
Medium temperature
Storage temperature
Terminal assignment
Terminals
Tests and certificates
Text editor         50
Thermal insulation
1001
For mounting
Transport
Tool tip
see Help text
Tools
Electrical connection
Totalizer
Assign process variable
Configuration
Totalizer Control module
Totalizer module
Transmitter
Turning the display module
Turning the housing
Transporting the measuring device 18
Troubleshooting
General
TSE/BSE Certificate of Suitability 279
Turning the display module
Turning the electronics housing
see Turning the transmitter housing
Turning the transmitter housing

### U

UKCA marking
Borderline cases
Incorrect use
see Intended use
User interface
Current diagnostic event
Previous diagnostic event
User roles
USP Class VI
V
-
Version data for the device
Vibrations
vibrations
W
W@M 247, 248
W@M Device Viewer 14
Weight
SI units
Transport (notes)
US units
Wizard
Current input
Current output 100
Define access code
Density adjustment
Display
Low flow cut off 118
Medium selection
Partially filled pipe detection
Pulse/frequency/switch output 103, 105, 109
Relay output 1 to n
Status input 1 to n
WLAN settings         137           Zero adjustment         127
Zero verification
WLAN settings         137
Workplace safety
Write access
Write protection
Via access code
Via write protection switch



www.addresses.endress.com

