Valid as of version 01.02.zz (Device firmware) Products

Services

# Operating Instructions **Proline Prosonic Flow G 300**

Solutions

Ultrasonic time-of-flight flowmeter Modbus RS485







- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

# Table of contents

1	About this document 6	6	Mounting	21
1.1 1.2 1.3	Document function6Symbols61.2.1Safety symbols61.2.2Electrical symbols61.2.3Communication-specific symbols61.2.4Tool symbols71.2.5Symbols for certain types of information71.2.6Symbols in graphics7Documentation81.3.1Document function8Registered trademarks8	6.2	Mounting requirements	23 24 26 26 26 26 26 27
2	Safety Instructions 9	7	Electrical connection	29
2.1 2.2 2.3 2.4 2.5 2.6 2.7	Requirements for the personnel 9 Intended use 9 Workplace safety 10 Operational safety 10 Product safety 10 IT security 11 Device-specific IT security 11 2.7.1 Protecting access via hardware write protection 11 2.7.2 Protecting access via a password 11 2.7.3 Access via web server 12 2.7.4 Access via service interface (CDI-RJ45) 13	7.1 7.2 7.3 7.4 7.5	Electrical safety	29 29 29 32 32 33 33 36 36
3	Product description 14		7.5.1 Connection examples	. 37
3.1	Product design	7.6	Hardware settings	
4	Incoming acceptance and product	7.7 7.8	Ensuring the degree of protection	41
	identification		Post-connection check	41
4.1 4.2	Incoming acceptance15Product identification154.2.1 Transmitter nameplate16	<b>8</b> 8.1	Operation options	<b>43</b>
	4.2.2 Sensor nameplate	8.2	Structure and function of the operating menu	44 44
5	Storage and transport 19	8.3	8.2.2 Operating philosophy	45 46
<ul><li>5.1</li><li>5.2</li><li>5.3</li></ul>	Storage conditions		8.3.1 Operational display	46 49 51 53

		Disabling write protection via access code	57		10.5.6 Configuration management 10 10.5.7 Using parameters for device	80
	8.3.12	Enabling and disabling the keypad			administration 10	09
		lock	58	10.6	Simulation	11
3.4	Access	to operating menu via web browser	58	10.7	Protecting settings from unauthorized access 11	14
	8.4.1	Function range	58		10.7.1 Write protection via access code 12	14
	8.4.2	Requirements	59		10.7.2 Write protection via write protection	
	8.4.3	Connecting the device	60		switch	15
	8.4.4	Logging on	62			
	8.4.5	User interface		11	Operation	17
	8.4.6	Disabling the Web server			•	
	8.4.7	Logging out	I	11.1	5	17
3.5		to the operating menu via the		11.2	J J I J J J	17
		ng tool	65	11.3	3 3 1 3	17
	8.5.1	Connecting the operating tool	65	11.4		17
	8.5.2	FieldCare	67			18
	8.5.3	DeviceCare	69		<b>3</b>	20
						21
0	C	n intogration	70		*	22
9	Syster	n integration	70		11.4.5 "Totalizer" submenu 12	24
9.1	Overvie	w of device description files	70	11.5	Adapting the measuring device to the process	
	9.1.1	Current version data for the device	70			25
	9.1.2	Operating tools	70	11.6	3	25
9.2		RS485 information	70		11.6.1 Function scope of "Control Totalizer"	
	9.2.1	Function codes	70			26
	9.2.2	Register information			11.6.2 Function range of "Reset all	
	9.2.3	Response time	72			26
	9.2.4	Data types	I	11.7	Displaying the measured value history 12	27
	9.2.5	Byte transmission sequence				
	9.2.6	Modbus data map	73	12	Diagnosis and troubleshooting 13	
10	Comm	iissioning	75	12.1	General troubleshooting	
		_		12.2	Diagnostic information via LEDs 13	
10.1	Post-mo	ounting and post-connection check	75		12.2.1 Transmitter	32
10.1 10.2	Post-mo	ounting and post-connection check ng on the measuring device	75 75	12.2 12.3	12.2.1 Transmitter	32 33
10.1 10.2 10.3	Post-me Switching Setting	ounting and post-connection check ng on the measuring device the operating language	75 75 75		12.2.1 Transmitter	32 33 33
10.1 10.2	Post-me Switching Setting Configu	ounting and post-connection check ng on the measuring device the operating language ring the measuring device	75 75 75 75	12.3	12.2.1 Transmitter	32 33 33 35
10.1 10.2 10.3	Post-me Switchin Setting Configu 10.4.1	ounting and post-connection check ng on the measuring device the operating language ring the measuring device Defining the tag name	75 75 75 75 77		12.2.1 Transmitter	32 33 33 35 35
10.1 10.2 10.3	Post-me Switching Setting Configur 10.4.1 10.4.2	ounting and post-connection check	75 75 75 75	12.3	12.2.1Transmitter13Diagnostic information on local display1312.3.1Diagnostic message1312.3.2Calling up remedial measures13Diagnostic information in the web browser1312.4.1Diagnostic options13	32 33 35 35 35
10.1 10.2 10.3	Post-me Switching Setting Configur 10.4.1 10.4.2	ounting and post-connection check	75 75 75 75 77 77	12.3 12.4	12.2.1 Transmitter	32 33 33 35 35
10.1 10.2 10.3	Post-mo Switching Setting Configue 10.4.1 10.4.2 10.4.3	ounting and post-connection check	75 75 75 75 77 77	12.3 12.4	12.2.1 Transmitter	32 33 35 35 35 36
10.1 10.2 10.3	Post-mo Switching Setting Configur 10.4.1 10.4.2 10.4.3	ounting and post-connection check	75 75 75 75 77 77 77	12.3 12.4	12.2.1 Transmitter	32 33 35 35 35 36
10.1 10.2 10.3	Post-mo Switching Setting Configur 10.4.1 10.4.2 10.4.3	ounting and post-connection check	75 75 75 75 77 77 79 80 81	12.3 12.4	12.2.1 Transmitter	32 33 35 35 35 36 36
10.1 10.2 10.3	Post-mo Switching Configur 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6	bunting and post-connection check	75 75 75 75 77 77 77 79 80 81 82	<ul><li>12.3</li><li>12.4</li><li>12.5</li></ul>	12.2.1 Transmitter	32 33 35 35 35 36
10.1 10.2 10.3	Post-mo Switching Configur 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7	bunting and post-connection check	75 75 75 75 77 77 79 80 81	<ul><li>12.3</li><li>12.4</li><li>12.5</li></ul>	12.2.1 Transmitter	32 33 35 35 36 36 36 37
10.1 10.2 10.3	Post-mo Switching Configur 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7	counting and post-connection check	75 75 75 77 77 77 79 80 81 82 83	<ul><li>12.3</li><li>12.4</li><li>12.5</li></ul>	12.2.1 Transmitter	32 33 35 35 36 36 36 37
10.1 10.2 10.3	Post-me Switching Configuration 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8	counting and post-connection check	75 75 75 77 77 77 79 80 81 82 83	<ul><li>12.3</li><li>12.4</li><li>12.5</li></ul>	12.2.1 Transmitter	32 33 35 35 36 36 36 37 38
10.1 10.2 10.3	Post-mo Switching Configuration 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8	counting and post-connection check	75 75 75 77 77 77 79 80 81 82 83 86 92	12.4 12.5 12.6	12.2.1 Transmitter	32 33 35 35 36 36 36 38 38
10.1 10.2 10.3	Post-mo Switching Configuration 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8	counting and post-connection check	75 75 75 77 77 77 79 80 81 82 83 86 92 94	12.4 12.5 12.6	12.2.1 Transmitter	32 33 35 35 36 36 36 38 38 38
10.1 10.2 10.3	Post-mo Switching Configuration 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9 10.4.10 10.4.11	counting and post-connection check	75 75 75 77 77 77 79 80 81 82 83 86 92 94 95	12.4 12.5 12.6	12.2.1 Transmitter	32 33 35 35 36 36 36 38 38 38
10.1 10.2 10.3	Post-mo Switching Configuration 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9 10.4.10 10.4.11	counting and post-connection check	75 75 75 77 77 77 79 80 81 82 83 86 92 94 95 97	12.3 12.4 12.5 12.6 12.7 12.8	12.2.1 Transmitter	32 33 35 35 36 36 36 38 38 38 38
10.1 10.2 10.3 10.4	Post-mo Switching Configuration 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.10 10.4.11 10.4.12 10.4.13	counting and post-connection check	75 75 75 77 77 77 79 80 81 82 83 86 92 94 95 97	12.3 12.4 12.5 12.6 12.7 12.8 12.9	12.2.1 Transmitter	32 33 35 35 36 36 37 38 38 38 38 34
10.1 10.2 10.3	Post-mo Switching Configuration 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9 10.4.10 10.4.11 10.4.12 10.4.13 Advance	counting and post-connection check	75 75 75 77 77 77 79 80 81 82 83 86 92 94 95 97	12.3 12.4 12.5 12.6 12.7 12.8 12.9 12.10	12.2.1 Transmitter	32 33 35 35 36 36 37 38 38 38 38 44 45
10.1 10.2 10.3 10.4	Post-mo Switching Configuration 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9 10.4.10 10.4.11 10.4.12 10.4.13 Advance	counting and post-connection check	75 75 75 77 77 77 79 80 81 82 83 86 92 94 95 97 98	12.3 12.4 12.5 12.6 12.7 12.8 12.9 12.10	12.2.1 Transmitter	32 33 35 35 36 36 37 38 38 38 39 44 45
10.1 10.2 10.3 10.4	Post-mo Switching Configuration 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9 10.4.11 10.4.12 10.4.13 Advance 10.5.1	counting and post-connection check	75 75 75 77 77 77 79 80 81 82 83 86 92 94 95 97 98 100	12.3 12.4 12.5 12.6 12.7 12.8 12.9 12.10	12.2.1 Transmitter	323335336 3637 383383344 4545
10.1 10.2 10.3 10.4	Post-mo Switching Configuration 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9 10.4.10 10.4.11 10.4.12 10.4.13 Advance 10.5.1	counting and post-connection check	75 75 75 77 77 77 79 80 81 82 83 86 92 94 95 97 98 100	12.3 12.4 12.5 12.6 12.7 12.8 12.9 12.10	12.2.1 Transmitter	32 33 33 35 36 36 37 38 38 38 38 38 44 45 46
10.1 10.2 10.3 10.4	Post-me Switching Configuration 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9 10.4.12 10.4.13 Advance 10.5.1 10.5.2 10.5.3	counting and post-connection check	75 75 75 77 77 77 79 80 81 82 83 86 92 94 95 97 98 100	12.3 12.4 12.5 12.6 12.7 12.8 12.9 12.10 12.11	12.2.1 Transmitter	323335333 3637 3833333445446 44546
10.1 10.2 10.3 10.4	Post-me Switching Configuration 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.9 10.4.12 10.4.13 Advance 10.5.1 10.5.2 10.5.3	counting and post-connection check	75 75 75 77 77 77 79 80 81 82 83 86 92 94 95 97 98 100	12.3 12.4 12.5 12.6 12.7 12.8 12.9 12.10 12.11	12.2.1 Transmitter	32 33 33 35 36 36 37 38 38 38 38 38 44 45 46
10.1 10.2 10.3 10.4	Post-mo Switching Configuration 10.4.1 10.4.2 10.4.3 10.4.4 10.4.5 10.4.6 10.4.7 10.4.8 10.4.12 10.4.13 Advance 10.5.1 10.5.2 10.5.3 10.5.4	counting and post-connection check	75 75 75 77 77 77 79 80 81 82 83 86 92 94 95 97 98 100	12.3 12.4 12.5 12.6 12.7 12.8 12.9 12.10 12.11	12.2.1 Transmitter	323335333 3637 3833333445446 44546

	Device information	148 150
13	Maintenance	151
13.1	Maintenance tasks	151
	13.1.1 Exterior cleaning	151
13.2	Measuring and test equipment	151
13.3	Endress+Hauser services	151
14	Repair	152
14.1	General notes	152
	14.1.1 Repair and conversion concept	152
	14.1.2 Notes for repair and conversion	152
14.2	Spare parts	152
14.3	Endress+Hauser services	152
14.4	Return	152
14.5	Disposal	153
	14.5.1 Removing the measuring device	153
	14.5.2 Disposing of the measuring device	153
15	Accessories	154
15.1	Device-specific accessories	154
	15.1.1 For the transmitter	154
15.2	Communication-specific accessories	155
15.3	Service-specific accessories	155
15.4	System components	156
16	Technical data	157
16.1	Application	157
16.2	Function and system design	157
16.3	Input	158
16.4	Output	161
16.5	Power supply	167
16.6	Performance characteristics	168
16.7	Mounting	171
16.8	Environment	171
16.9	Process	172
	Mechanical construction	174
	Display and user interface	178 182
	Certificates and approvals	184
	Accessories	185
	Supplemental documentation	185
Index	ζ	188

# 1 About this document

# 1.1 Document function

These Operating Instructions contain all the information required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to installation, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.

# 1.2 Symbols

# 1.2.1 Safety symbols

#### **⚠** DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

#### **▲** WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

### **A** CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

#### NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

# 1.2.2 Electrical symbols

Symbol	Meaning
===	Direct current
~	Alternating current
$\overline{}$	Direct current and alternating current
=	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Potential equalization connection (PE: protective earth) Ground terminals that must be connected to ground prior to establishing any other connections.
	The ground terminals are located on the interior and exterior of the device:  Interior ground terminal: potential equalization is connected to the supply network.  Exterior ground terminal: device is connected to the plant grounding system.

# 1.2.3 Communication-specific symbols

Symbol	Meaning
<b></b>	Wireless Local Area Network (WLAN) Communication via a wireless, local network.
•	LED Light emitting diode is off.

Symbol	Meaning
<del>\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\</del>	<b>LED</b> Light emitting diode is on.
	<b>LED</b> Light emitting diode is flashing.

# 1.2.4 Tool symbols

Symbol	Meaning
0	Flat-blade screwdriver
0 6	Allen key
Ó	Open-ended wrench

# 1.2.5 Symbols for certain types of information


Symbol	Meaning
<b>~</b>	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
Ţ <u>i</u>	Reference to documentation
	Reference to page
	Reference to graphic
<b>&gt;</b>	Notice or individual step to be observed
1., 2., 3	Series of steps
L_	Result of a step
?	Help in the event of a problem
	Visual inspection

# 1.2.6 Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections
EX	Hazardous area

Symbol	Meaning
×	Safe area (non-hazardous area)
≋➡	Flow direction

# 1.3 Documentation

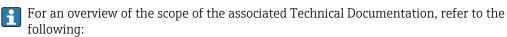

- *Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

# 1.3.1 Document function

The following documentation may be available depending on the version ordered:

Document type	Purpose and content of the document
Technical Information (TI)	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions (KA)	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Operating Instructions (BA)	Your reference document The Operating Instructions contain all the information that is required in the various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.
Description of Device Parameters (GP)	Reference for your parameters The document provides a detailed explanation of each individual parameter. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.
Safety Instructions (XA)	Depending on the approval, safety instructions for electrical equipment in hazardous areas are also supplied with the device. The Safety Instructions are an integral part of the Operating Instructions.
	Information on the Safety Instructions (XA) relevant to the device is provided on the nameplate.
Supplementary device-dependent documentation (SD/FY)	Always comply strictly with the instructions in the relevant supplementary documentation. The supplementary documentation is an integral part of the device documentation.

# 1.4 Registered trademarks

# Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

# 2 Safety Instructions

# 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ► Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ► Are authorized by the plant owner/operator.
- ► Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ► Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

### 2.2 Intended use

#### Application and media

The measuring device described in this manual is intended only for the flow measurement of gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in explosive atmospheres, in hygienic applications or where there is a high risk of pressures, are labeled accordingly on the nameplate.

To ensure that the measuring device is in proper condition during the operation period:

- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ► Refer to the nameplate to check whether the ordered metering system can be operated for the intended application in areas requiring specific approvals (e.g. explosion protection, pressure equipment safety).
- ► Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- ▶ Keep within the specified pressure and temperature range.
- ▶ Keep within the specified ambient temperature range.
- ► Protect the measuring device permanently against corrosion from environmental influences.

#### Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

#### **WARNING**

### Danger of breakage due to corrosive or abrasive fluids and ambient conditions!

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Keep within the specified pressure and temperature range.

# NOTICE

#### Verification for borderline cases:

► For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

#### Residual risks

#### **A** CAUTION

Risk of hot or cold burns! The use of media and electronics with high or low temperatures can produce hot or cold surfaces on the device.

- ► Mount suitable touch protection.
- ▶ Use suitable protective equipment.

### **A** WARNING

#### Danger from medium escaping!

For device versions with a rupture disk: medium escaping under pressure can cause injury or material damage.

► Take precautions to prevent injury and material damage if the rupture disk is actuated.

# 2.3 Workplace safety

When working on and with the device:

▶ Wear the required personal protective equipment as per national regulations.

# 2.4 Operational safety

Damage to the device!

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ► The operator is responsible for the interference-free operation of the device.

#### Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers!

▶ If modifications are nevertheless required, consult with the manufacturer.

# Repair

To ensure continued operational safety and reliability:

- ► Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to the repair of an electrical device.
- ▶ Use only original spare parts and accessories.

# 2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. The manufacturer confirms this by affixing the CE mark to the device..

# 2.6 IT security

Our warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.

# 2.7 Device-specific IT security

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater inoperation safety if used correctly. The following list provides an overview of the most important functions:

Function/interface	Factory setting	Recommendation
Write protection via hardware write protection switch $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	Not enabled	On an individual basis following risk assessment
Access code (also applies to web server login or FieldCare connection) → 🖺 12	Not enabled (0000)	Assign a customized access code during commissioning
WLAN (order option in display module)	Enabled	On an individual basis following risk assessment
WLAN security mode	Enabled (WPA2- PSK)	Do not change
WLAN passphrase (Password) → 🖺 12	Serial number	Assign an individual WLAN passphrase during commissioning
WLAN mode	Access point	On an individual basis following risk assessment
Web server → 🗎 12	Enabled	On an individual basis following risk assessment
CDI-RJ45 service interface→ 🗎 13	-	On an individual basis following risk assessment

# 2.7.1 Protecting access via hardware write protection

Write access to the parameters of the device via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the main electronics module). When hardware write protection is enabled, only read access to the parameters is possible.

# 2.7.2 Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

- User-specific access code
  - Protect write access to the device parameters via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare). Access authorization is clearly regulated through the use of a user-specific access code.
- WLAN passphrase
  - The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.
- Infrastructure mode
  - When the device is operated in infrastructure mode, the WLAN passphrase corresponds to the WLAN passphrase configured on the operator side.

#### User-specific access code

Write access to the device parameters via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code  $(\rightarrow \ \cong 114)$ .

When the device is delivered, the device does not have an access code and is equivalent to 0000 (open).

#### WLAN passphrase: Operation as WLAN access point

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter  $(\rightarrow \implies 107)$ .

#### Infrastructure mode

A connection between the device and WLAN access point is protected by means of an SSID and passphrase on the system side. Please contact the relevant system administrator for access.

#### General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning for safety reasons.
- Follow the general rules for generating a secure password when defining and managing the access code and network key.
- The user is responsible for the management and careful handling of the access code and network key.
- For information on configuring the access code or on what to do if you lose the password, for example, see "Write protection via access code" → 🖺 114.

#### 2.7.3 Access via web server

The web server is enabled when the device is delivered. The web server can be disabled via the **Web server functionality** parameter if necessary (e.q., after commissioning).

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.

For detailed information on device parameters, see: "Description of device parameters" document .

# 2.7.4 Access via service interface (CDI-RJ45)

The device can be connected to a network via the service interface (CDI-RJ45). Device-specific functions guarantee the secure operation of the device in a network.

The use of relevant industrial standards and guidelines that have been defined by national and international safety committees, such as IEC/ISA62443 or the IEEE, is recommended. This includes organizational security measures such as the assignment of access authorization as well as technical measures such as network segmentation.

Transmitters with an Ex de approval may not be connected via the service interface (CDI-RJ45)!


# 3 Product description

The device consists of a transmitter and a sensor.

The device is available as a compact version:

The transmitter and sensor form a mechanical unit.

# 3.1 Product design

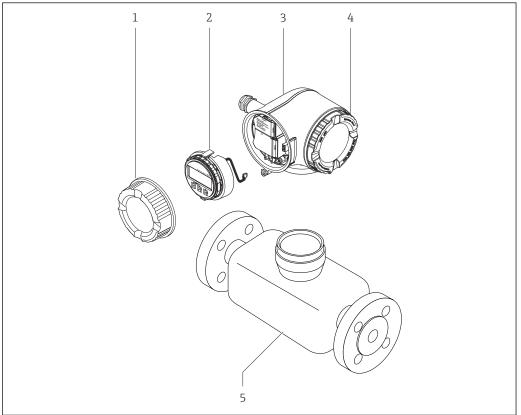


A002958

- $\blacksquare 1$  Important components of a measuring device
- 1 Connection compartment cover
- 2 Display module
- 3 Transmitter housing
- 4 Electronics compartment cover
- 5 Sensor

# 4 Incoming acceptance and product identification

# 4.1 Incoming acceptance

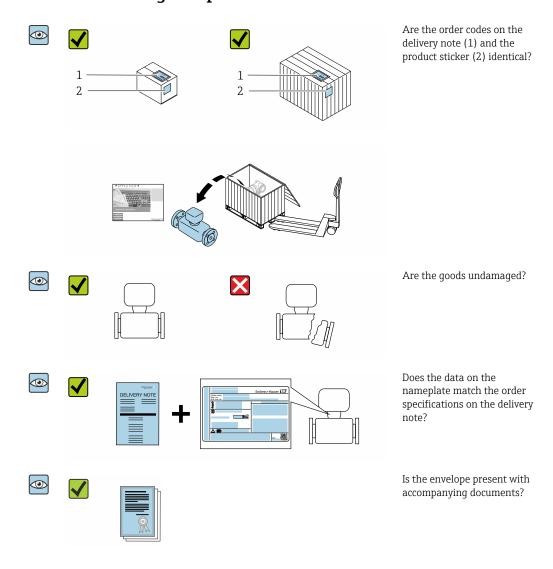

- If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.

# 4.2 Product identification


The following options are available for identification of the device:

- Nameplate
- Order code with details of the device features on the delivery note
- Enter the serial numbers from the nameplates in the *Device Viewer* (www.endress.com/deviceviewer): all the information about the device is displayed.
- Enter the serial numbers from the nameplates into the *Endress+Hauser Operations app* or scan the DataMatrix code on the nameplate with the *Endress+Hauser Operations app*: all the information about the device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The "Additional standard documentation on the device" and "Supplementary device-dependent documentation" sections
- The *Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations app*: Enter the serial number from the nameplate or scan the DataMatrix code on the nameplate.

# 4.2.1 Transmitter nameplate

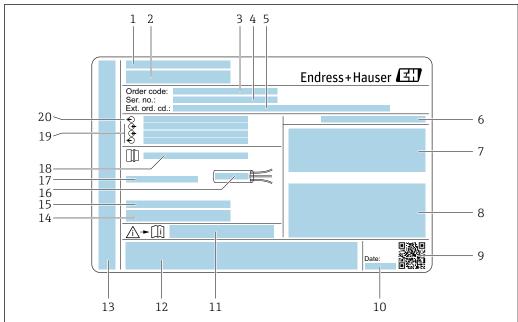


A00291

#### ■ 2 Example of a transmitter nameplate

- 1 Manufacturer address/certificate holder
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number
- 5 Extended order code
- 6 Degree of protection
- 7 Space for approvals: use in hazardous areas
- 8 Electrical connection data: available inputs and outputs
- 9 2-D matrix code
- 10 Date of manufacture: year-month
- 11 Document number of safety-related supplementary documentation
- 12 Space for approvals and certificates: e.g. CE mark, RCM tick
- 13 Space for degree of protection of connection and electronics compartment when used in hazardous areas
- 14 Firmware version (FW) and device revision (Dev. rev.) from the factory
- 15 Space for additional information in the case of special products
- 16 Permitted temperature range for cable
- 17 Permitted ambient temperature  $(T_a)$
- 18 Information on cable gland
- 19 Available inputs and outputs, supply voltage
- 20 Electrical connection data: supply voltage

# 4.2.2 Sensor nameplate

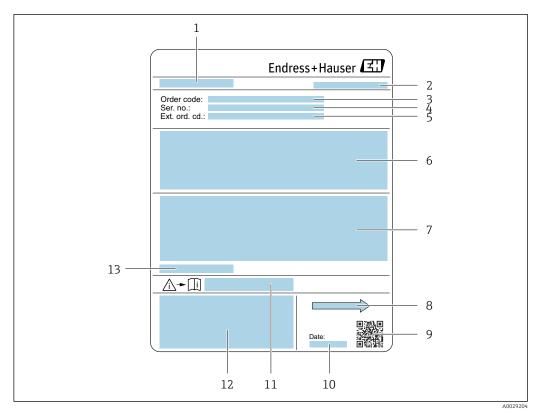

■ 3 Example of sensor nameplate

- 1 Name of sensor
- 2 Manufacturer address/certificate holder
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Nominal diameter of the sensor; flange nominal diameter/nominal pressure; sensor test pressure; medium temperature range; material of measuring pipe and flanges; sensor-specific data
- 7 Approval information for explosion protection, Pressure Equipment Directive and degree of protection
- 8 Flow direction
- 9 2D-Matrixcode
- 10 Date of manufacture: year-month
- 11 Document number of safety-related supplementary documentation → 🖺 186
- 12 CE mark, RCM-Tick mark
- 13 Permitted ambient temperature  $(T_a)$

# Order code

The measuring device is reordered using the order code.

### Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approvalrelated specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

# 4.2.3 Symbols on the device

Symbol	Meaning
$\triangle$	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury. Please consult the documentation for the measuring device to discover the type of potential danger and measures to avoid it.
[ji	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal that must be connected to the ground prior to establishing any other connections.

# 5 Storage and transport

# 5.1 Storage conditions


Observe the following notes for storage:

- ► Store in the original packaging to ensure protection from shock.
- ▶ Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- ▶ Protect from direct sunlight. Avoid unacceptably high surface temperatures.
- ► Store in a dry and dust-free place.
- ▶ Do not store outdoors.

Storage temperature  $\rightarrow \triangleq 171$ 

# 5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

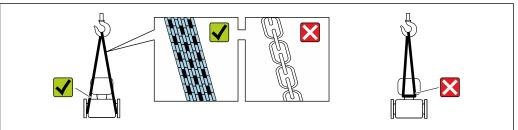

A0029252

Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


# 5.2.1 Measuring devices without lifting lugs

### **A** WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ► Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

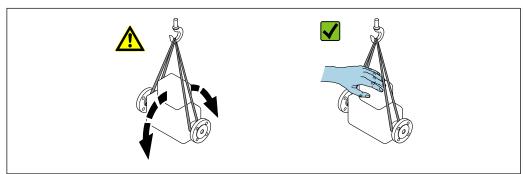

A0029214

# 5.2.2 Measuring devices with lifting lugs

# **A** CAUTION

# Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ► The device must always be secured at two lifting lugs at least.

# 5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

# 5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:


- Outer packaging of device
   Stretch wrap made of polymer in accordance with EU Directive 2002/95/EC (RoHS)
- Packaging
  - Wood crate treated in accordance with ISPM 15 standard, confirmed by IPPC logo
  - Cardboard box in accordance with European packaging guideline 94/62/EC, recyclability confirmed by Resy symbol
- Transport material and fastening fixtures
  - Disposable plastic pallet
  - Plastic straps
  - Plastic adhesive strips
- Filler material Paper pads

#### Mounting 6

#### 6.1 Mounting requirements

#### 6.1.1 Mounting position

# Mounting location

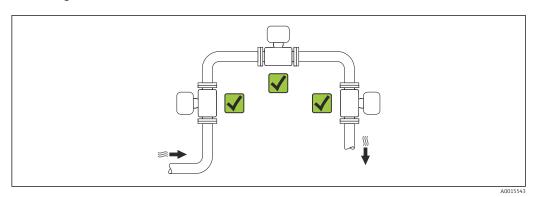

#### Orientation

The direction of the arrow on the sensor helps you to install the sensor according to the flow direction (direction of medium flow through the piping).




- Install the measuring device in a parallel plane free of external mechanical stress.
  - The internal diameter of the pipe must match the internal diameter of the sensor: see the "Technical Information" device document, "Design and dimensions" section



	Compact version		
A	Vertical orientation	A0015545	
В	Horizontal orientation, transmitter head up <sup>1)</sup>	A0015589	✓
С	Horizontal orientation, transmitter head down <sup>1)</sup>	A0015590	Ø
D	Horizontal orientation, transmitter head at side	A0015592	×


The horizontal alignment of the transducers may only deviate by a maximum of  $\pm 5^{\circ}$ , particularly if a liquid is present in the medium (wet gas).

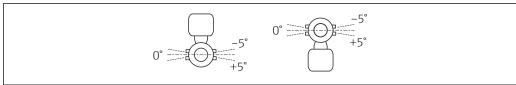

### Inlet and outlet runs


If possible, install the sensors upstream of assemblies such as valves, T-pieces, elbows, and pumps. If this is not possible, the specified measurement accuracy of the measuring device is achieved by observing the specified minimum inlet and outlet runs with optimum sensor configuration.

Single-path version: DN 25 (1")

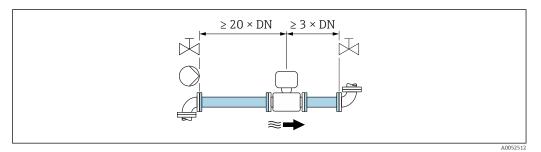


€ 4 Single-path version: Minimum inlet and outlet runs with various flow obstructions. For order code for "Flow calibration", option A "1 %" .

Two-path version: DN 50 to 300 (2 to 12")

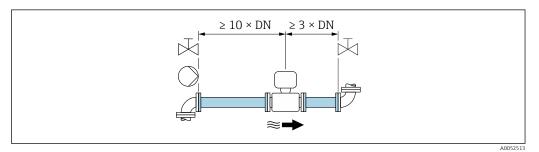

**₽** 5 Two-path version: minimum inlet and outlet runs with various flow obstructions For order code for "Flow calibration", option A "1 %" ".

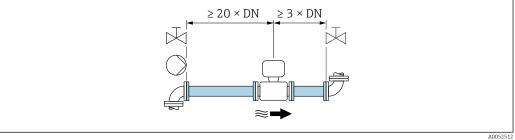

€ 6 Two-path version: minimum inlet and outlet runs with various flow obstructions For order code for "Flow calibration", option C "0.50%" and option D "0.50%, traceable to ISO/IEC17025".

#### **Dimensions**

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section .

# 6.1.2 Environmental and process requirements

#### Ambient temperature range

Measuring device	■ Standard:-40 to +60 °C (-40 to +140 °F) ■ Optional order code for "Test, certificate", option JP: -50 to +60 °C (-58 to +140 °F)			
Readability of the local display	-20 to $+60$ °C ( $-4$ to $+140$ °F) The readability of the display may be impaired at temperatures outside the temperature range.			

# ► If operating outdoors:

Avoid direct sunlight, particularly in warm climatic regions.

#### Medium pressure range

Min. medium pressure: 0.7 bar (10.2 psi) absolute

The maximum permitted medium pressure is defined by the pressure/temperature curves (see the "Technical Information" document) and the pressure specifications of the integrated pressure measuring cell (optional; order code for "Measuring tube; transducer; sensor version", option AC "316L; Titanium Gr. 2; pressure + temperature measurement integrated").

# **A** WARNING

The maximum pressure for the measuring device depends on the lowest-rated element with regard to pressure.

- ▶ Note specifications regarding the pressure range of the pressure measuring cell.
- ► The Pressure Equipment Directive (2014/68/EU) uses the abbreviation "PS". The abbreviation "PS" corresponds to the MWP (maximum working pressure) of the pressure measuring cell.
- ► The MWP for the pressure measuring cell depends on the lowest-rated element, with regard to pressure, of the selected components, i.e. the process connection must be taken into consideration in addition to the pressure measuring cell. Also take the pressure/temperature dependency into consideration.
- ► The MWP may be applied at the device for an unlimited period. The MWP is indicated on the nameplate. This value refers to a reference temperature of +20 °C (+68 °F) and may be applied to the pressure measuring cell for an unlimited time.
- ► The OPL (over pressure limit = sensor overload limit) for the measuring device depends on the lowest-rated element, with regard to pressure, of the selected components, i.e. the process connection has to be taken into consideration in addition to the pressure measuring cell. Also take the pressure/temperature dependency into consideration.
- ▶ The test pressure corresponds to the over pressure limit of the pressure measuring cell and may be applied only temporarily to ensure that the measurement is within the specifications and no permanent damage occurs.

Pressure measuring cell	Maximum sensor measuring range		MWP	OPL
	Lower (LRL)	Upper (URL)		
	[bar (psi)]	[bar (psi)]	[bar (psi)]	[bar (psi)]
2 bar (30 psi)	0 (0)	+2 (+30)	6.7 (100.5)	10 (150)
4 bar (60 psi)	0 (0)	+4 (+60)	10.7 (160.5)	16 (240)
10 bar (150 psi)	0 (0)	+10 (+150)	25 (375)	40 (600)
40 bar (600 psi)	0 (0)	+40 (+600)	100 (1500)	160 (2400)
100 bar (1500 psi)	0 (0)	+100 (+1500)	100 (1500)	160 (2 400)

#### Thermal insulation

For optimum measurement performance, make sure that no heat transfer (heat loss or heat supply) can take place at the sensor. This can be ensured by installing thermal insulation. The formation of condensation in the measuring device can also be limited in this way.


Thermal insulation is particularly recommended in situations in which the difference between the process temperature and ambient temperature is large. This difference leads to an error during temperature measurement that is caused by heat conduction (known as the "heat conduction error").

#### **WARNING**

# Electronics overheating on account of thermal insulation!

- Recommended orientation: horizontal orientation, transmitter housing pointing downwards.
- ▶ Do not insulate the transmitter housing .
- ► Maximum permissible temperature at the lower end of the transmitter housing: 80 °C (176 °F)
- ► Thermal insulation with extended neck free: We recommend that you do not insulate the extended neck in order to ensure optimum dissipation of heat.

The thermal insulation should never cover the transmitter housing and the pressure measuring cell.

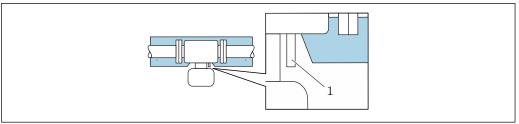

A003767

 ${f E}$  7 Thermal insulation with free extended neck and pressure measuring cell


1 Pressure measuring cell

# **6.1.3** Special mounting instructions

# Rupture disk


Process-related information:  $\rightarrow \blacksquare 173$ .

The position of the rupture disk is indicated on a sticker applied over it. If the rupture disk is triggered, the sticker is destroyed. The disk can therefore be visually monitored.

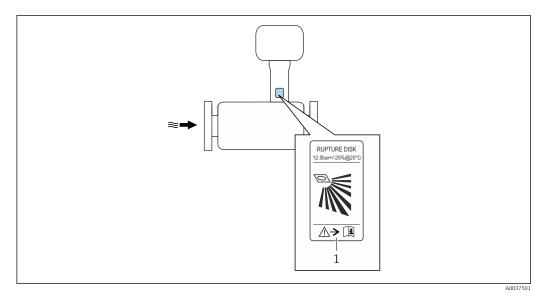

Rupture disk label

# Weather protection cover

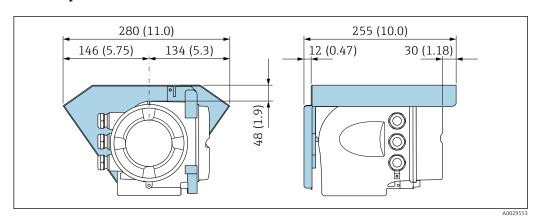

■ 8 Engineering unit mm (in)


### Cover lock

# NOTICE

Order code "Housing", option L "Cast, stainless": The covers of the transmitter housing are provided with a borehole to lock the cover.

The cover can be locked using screws and a chain or cable provided by the customer on site.

- ► The use of stainless steel chains or cables is recommended.
- ► If a protective coating is applied, it is recommended to use a heat shrink tube to protect the housing paint.

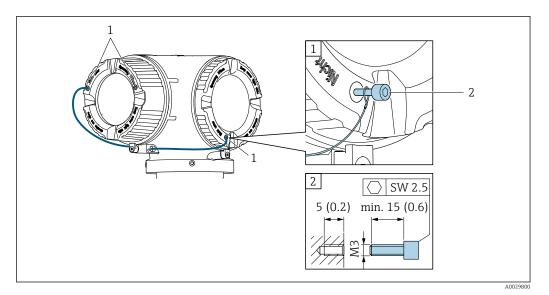

- 1 Cover borehole for the securing screw
- 2 Securing screw to lock the cover

# 6.2 Mounting the measuring device

# 6.2.1 Required tools

#### For sensor

For flanges and other process connections: use a suitable mounting tool

# 6.2.2 Preparing the measuring device


- 1. Remove all remaining transport packaging.
- 2. Remove stick-on label on the electronics compartment cover.

# 6.2.3 Mounting the measuring device

#### **WARNING**

#### Danger due to improper process sealing!

- ► Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ► Ensure that the seals are clean and undamaged.
- ► Secure the seals correctly.
- 1. Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the medium.
- 2. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

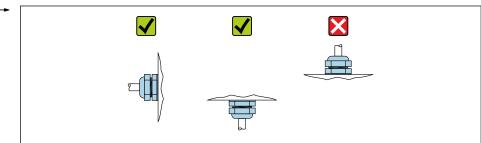


A0029263

26


#### 6.2.4 Turning the transmitter housing

To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

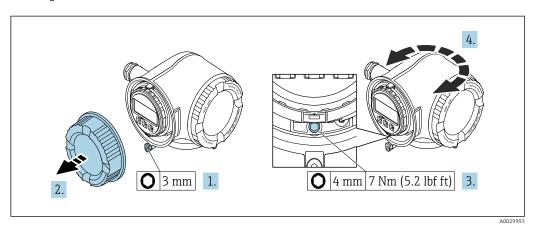

**₽** 9 Non-Ex housing

- 1. Depending on the device version: Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Loosen the securing screw.
- 4. Turn the housing to the desired position.
- 5. Tighten the securing screw.
- 6. Screw on the connection compartment cover.
- 7. Depending on the device version: Attach the securing clamp of the connection compartment cover.

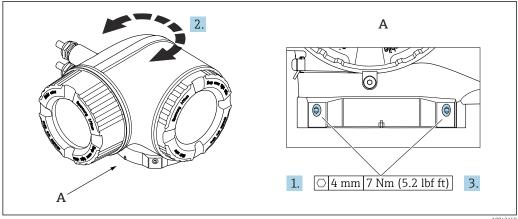

**■** 10 Ex housing


- 1. Loosen the fixing screws.
- 2. Turn the housing to the desired position.
- 3. Tighten the securing screws.

#### 6.2.5 Turning the display module

The display module can be turned to optimize display readability and operability.

27 Endress+Hauser

A0043150

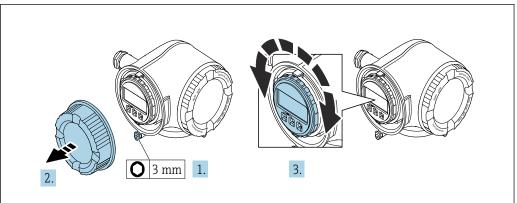

A0030035

- 1. Depending on the device version: Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Turn the display module to the desired position: max.  $8 \times 45^{\circ}$  in each direction.
- 4. Screw on the connection compartment cover.
- 5. Depending on the device version: Attach the securing clamp of the connection compartment cover.

# 6.3 Post-mounting check

Is the measuring device undamaged (visual inspection)?		
Does the measuring device correspond to the measuring point specifications?  For example:  Process temperature → 🖺 172  Pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document on the CD-ROM provided)  Ambient temperature  Measuring range		
Has the correct orientation for the sensor been selected → 🖺 21?  • According to sensor type  • According to medium temperature  • According to medium properties (outgassing, with entrained solids)		
Does the arrow on the sensor match the actual direction of flow of the medium through the piping $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $		
Is the tag name and labeling correct (visual inspection)?		
Is the device sufficiently protected from precipitation and direct sunlight?		
Are the securing screw and securing clamp tightened securely?		

# 7 Electrical connection

#### **WARNING**

Live parts! Incorrect work performed on the electrical connections can result in an electric shock.

- ► Set up a disconnecting device (switch or power-circuit breaker) to easily disconnect the device from the supply voltage.
- ▶ In addition to the device fuse, include an overcurrent protection unit with max. 10 A in the plant installation.

# 7.1 Electrical safety

In accordance with applicable national regulations.

# 7.2 Connecting requirements

# 7.2.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: Crimper for wire end ferrule
- For removing cables from terminal: Flat blade screwdriver  $\leq$  3 mm (0.12 in)

# 7.2.2 Requirements for connection cable

The connecting cables provided by the customer must fulfill the following requirements.

#### Protective grounding cable for the outer ground terminal

Conductor cross-section < 2.1 mm<sup>2</sup> (14 AWG)

The use of a cable lug enables the connection of larger cross-sections.

The grounding impedance must be less than 2  $\Omega$ .

#### Permitted temperature range

- The installation quidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

#### Power supply cable (incl. conductor for the inner ground terminal)

Standard installation cable is sufficient.

# Signal cable

Modbus RS485

The EIA/TIA-485 standard specifies two types of cable (A and B) for the bus line which can be used for every transmission rate. Cable type A is recommended.

Cable type	A
Characteristic impedance	135 to 165 $\Omega$ at a measuring frequency of 3 to 20 MHz
Cable capacitance	< 30 pF/m
Wire cross-section	> 0.34 mm <sup>2</sup> (22 AWG)

Cable type	Twisted pairs			
<b>Loop resistance</b> $\leq 110 \Omega/km$				
Signal damping	Max. 9 dB over the entire length of the cable cross-section			
Shield	Copper braided shielding or braided shielding with foil shield. When grounding the cable shield, observe the grounding concept of the plant.			

Current output 0/4 to 20 mA

Standard installation cable is sufficient

Pulse /frequency /switch output

Standard installation cable is sufficient

Double pulse output

Standard installation cable is sufficient

Relay output

Standard installation cable is sufficient.

Current input 0/4 to 20 mA

Standard installation cable is sufficient

Status input

Standard installation cable is sufficient

#### Cable diameter

■ Cable glands supplied:

 $M20 \times 1.5$  with cable Ø 6 to 12 mm (0.24 to 0.47 in)

Spring-loaded terminals: Suitable for strands and strands with ferrules.
 Conductor cross-section 0.2 to 2.5 mm<sup>2</sup> (24 to 12 AWG).

### Requirements for connecting cable – remote display and operating module DKX001

Optionally available connecting cable

A cable is supplied depending on the order option

- Order code for measuring device: order code 030 for "Display; operation", option 0 or
- Order code for measuring device: order code 030 for "Display; operation", option M
  and
- Order code for DKX001: order code **040** for "Cable", option **A, B, D, E**

Standard cable	$2\times2\times0.34~\text{mm}^2$ (22 AWG) PVC cable with common shield (2 pairs, pairstranded)				
Flame resistance	According to DIN EN 60332-1-2				
Oil resistance	According to DIN EN 60811-2-1				
Shield	Tin-plated copper braid, optical cover $\geq$ 85 %				
Capacitance: core/shield	≤ 200 pF/m				
L/R	≤ 24 μH/Ω				
Available cable length	5 m (15 ft)/10 m (35 ft)/20 m (65 ft)/30 m (100 ft)				
Operating temperature	When mounted in a fixed position: $-50$ to $+105$ °C ( $-58$ to $+221$ °F); when cable can move freely: $-25$ to $+105$ °C ( $-13$ to $+221$ °F)				

Standard cable - customer-specific cable

With the following order option, no cable is supplied with the device and must be provided by the customer:

Order code for DKX001: Order code  $\bf 040$  for "Cable", option  $\bf 1$  "None, provided by customer, max  $\bf 300~m$ "

A standard cable with the following minimum requirements can be used as the connecting cable, even in the hazardous area (Zone 2, Class I, Division 2 and Zone 1, Class I, Division 1):

Standard cable	$4$ wires (2 pairs); pair-stranded with common shield, minimum wire cross-section $0.34\ mm^2$ (22 AWG)				
Shield	Tin-plated copper braid, optical cover ≥ 85 %				
Cable impedance (pair)	Minimum $80\Omega$				
Cable length	Maximum 300 m (1000 ft), maximum loop impedance 20 $\Omega$				
Capacitance: core/shield	Maximum 1000 nF for Zone 1, Class I, Division 1				
L/R	Maximum 24 $\mu H/\Omega$ for Zone 1, Class I, Division 1				

# 7.2.3 Terminal assignment

#### Transmitter: supply voltage, input/outputs

The terminal assignment of the inputs and outputs depends on the individual order version of the device. The device-specific terminal assignment is documented on an adhesive label in the terminal cover.

Supply voltage		Input/o	utput 1	Input/o	utput 2	Input/o	output 3
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)
		Device-specific terminal assignment: adhesive label in terminal cover.					

# 7.2.4 Shielding and grounding

#### Shielding and grounding concept

- 1. Maintain electromagnetic compatibility (EMC).
- 2. Take explosion protection into consideration.
- 3. Pay attention to the protection of persons.
- 4. Comply with national installation regulations and guidelines.
- 5. Observe cable specifications.
- 6. Keep the stripped and twisted lengths of cable shield to the ground terminal as short as possible.
- 7. Shield cables fully.

### Grounding of the cable shield

#### NOTICE

In systems without potential matching, the multiple grounding of the cable shield causes mains frequency equalizing currents!

Damage to the bus cable shield.

- ▶ Only ground the bus cable shield to either the local ground or the protective ground at one end.
- ▶ Insulate the shield that is not connected.

To comply with EMC requirements:

- 1. Ensure the cable shield is grounded to the potential matching line at multiple points.
- 2. Connect every local ground terminal to the potential matching line.

### 7.2.5 Preparing the measuring device

#### NOTICE

#### Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

- ▶ Use suitable cable glands corresponding to the degree of protection.
- 1. Remove dummy plug if present.
- 2. If the measuring device is supplied without cable glands:
  Provide suitable cable gland for corresponding connecting cable.
- 3. If the measuring device is supplied with cable glands:

  Observe requirements for connecting cables → 

  29.


# 7.3 Connecting the measuring device

#### **NOTICE**

#### An incorrect connection compromises electrical safety!


- ► Have electrical connection work carried out by appropriately trained specialists only.
- ▶ Observe applicable federal/national installation codes and regulations.
- ► Comply with local workplace safety regulations.
- ▶ Always connect the protective ground cable ⊕ before connecting additional cables.
- ► When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.

# 7.3.1 Connecting the transmitter

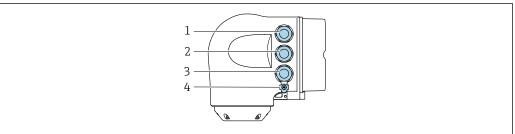


10026701

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output or terminal connection for network connection via service interface (CDI-RJ45); optional: connection for external WLAN antenna or remote display and operating module DKX001
- 4 Protective earth (PE)

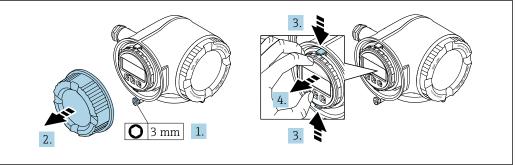


A0029813

- 1. Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Squeeze the tabs of the display module holder together.
- 4. Remove the display module holder.

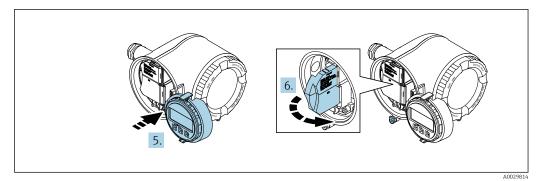


- 5. Attach the holder to the edge of the electronics compartment.
- 6. Open the terminal cover.

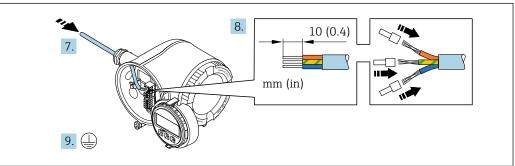

A00298

- 7. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 8. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
- 9. Connect the protective ground.

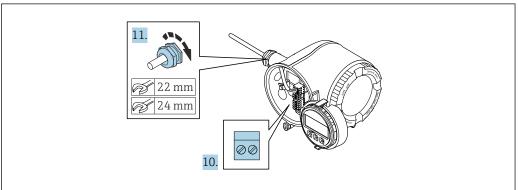


A002981

- 10. Connect the cable according to the terminal assignment.
  - Signal cable terminal assignment: The device-specific terminal assignment is documented on an adhesive label in the terminal cover.
     Supply voltage connection terminal assignment: Adhesive label in the terminal cover or → ≅ 32.
- 11. Firmly tighten the cable glands.
  - ► This concludes the cable connection process.
- 12. Close the terminal cover.
- 13. Fit the display module holder in the electronics compartment.
- 14. Screw on the connection compartment cover.
- 15. Secure the securing clamp of the connection compartment cover.

# Removing a cable

To remove a cable from the terminal:

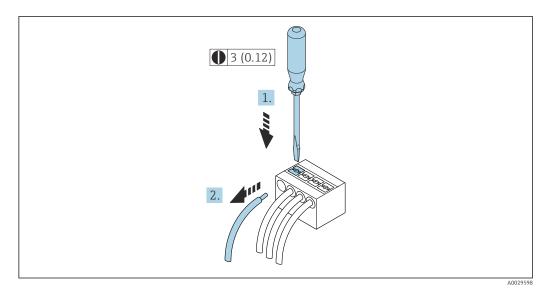


- 11 Engineering unit mm (in)
- 1. Use a flat-blade screwdriver to press down on the slot between the two terminal holes.
- 2. Remove the cable end from the terminal.

# 7.3.2 Connecting the remote display and operating module DKX001

The remote display and operating module DKX001 is available as an optional extra  $\Rightarrow \triangleq 154$ .

- The measuring device is always supplied with a dummy cover when the remote display and operating module DKX001 is ordered directly with the measuring device. Display or operation at the transmitter is not possible in this case.
- If ordered subsequently, the remote display and operating module DKX001 may not be connected at the same time as the existing measuring device display module.
   Only one display or operation unit may be connected to the transmitter at any one time.

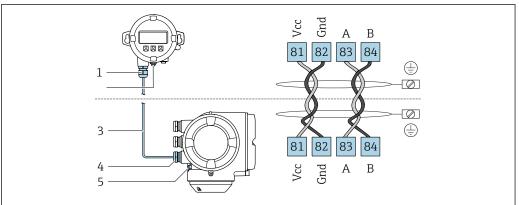

A002751

- 1 Remote display and operating module DKX001
- 2 Terminal connection for potential equalization (PE)
- 3 Connecting cable
- 4 Measuring device
- 5 Terminal connection for potential equalization (PE)

# 7.4 Potential equalization

# 7.4.1 Requirements

For potential equalization:


- Pay attention to in-house grounding concepts
- Take account of operating conditions like the pipe material and grounding
- Medium, Connect the sensor and transmitter to the same electric potential <sup>1)</sup>
- Use a ground cable with a minimum cross-section of 6 mm<sup>2</sup> (10 AWG) and a cable lug for potential equalization connections

1)

# 7.5 Special connection instructions

## 7.5.1 Connection examples


### Modbus RS485

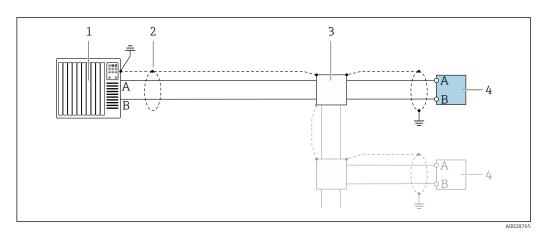

 $\blacksquare$  12 Connection example for Modbus RS485, non-hazardous area and Zone 2; Class I, Division 2


- 1 Control system (e.g. PLC)
- 2 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Distribution box
- 4 Transmitter

### Current output 4-20 mA

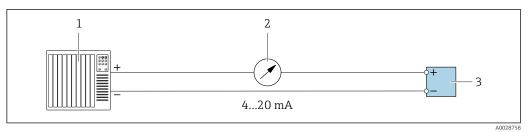

■ 13 Connection example for 4-20 mA current output (active)

- Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load
- 3 Transmitter

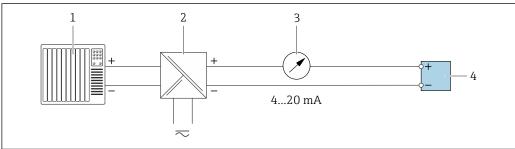


■ 14 Connection example for 4-20 mA current output (passive)

- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Analog display unit: observe maximum load
- 4 Transmitter


A0028759

### Pulse/frequency output

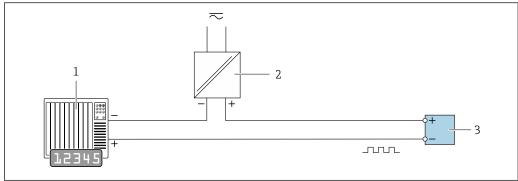


- Connection example for pulse/frequency output (passive)
- 1 Automation system with pulse/frequency input (e.g. PLC with 10 k $\Omega$  pull-up or pull-down resistor)
- 2 Power supply
- 3 *Transmitter: observe input values*  $\rightarrow \blacksquare 161$

### Switch output

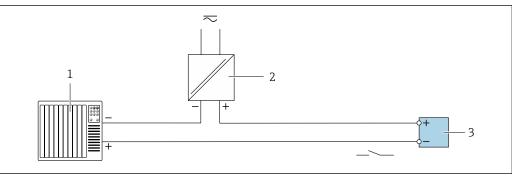


- **■** 16 Connection example for switch output (passive)
- Automation system with switch input (e.g. PLC with a 10 k $\Omega$  pull-up or pull-down resistor)
- 2 Power supply
- *Transmitter: observe input values →*  161

## Double pulse output

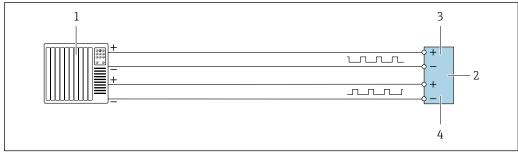


- **■** 17 Connection example for double pulse output (active)
- 1 Automation system with double pulse input (e.g. PLC)
- 2
- 3 Double pulse output
- Double pulse output (slave), phase-shifted

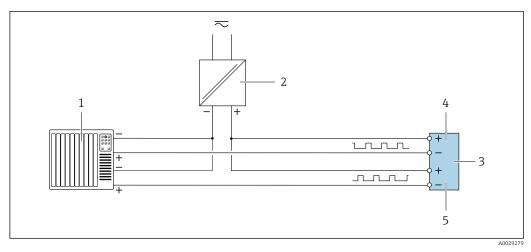

Connection example for double pulse output (passive)


- Automation system with double pulse input (e.g. PLC with a 10 k $\Omega$  pull-up or pull-down resistor) 1
- Power supply 2
- 3
- Double pulse output
- 4 5 Double pulse output (slave), phase-shifted

### Relay output

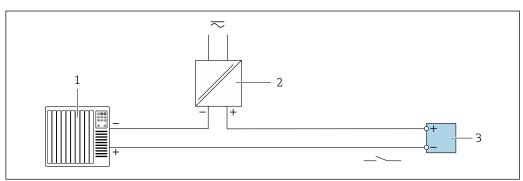


- Connection example for relay output (passive)
- Automation system with relay input (e.g. PLC)
- Power supply
- 3 *Transmitter: observe input values → 🖺 163*

### **Current input**

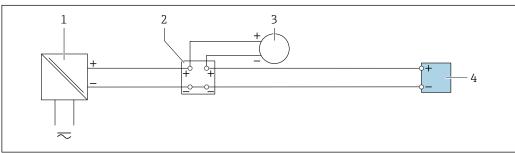

- № 20 Connection example for 4 to 20 mA current input
- 1 Power supply
- 3 External measuring device (to read in pressure or temperature, for instance)
- Transmitter

## Status input

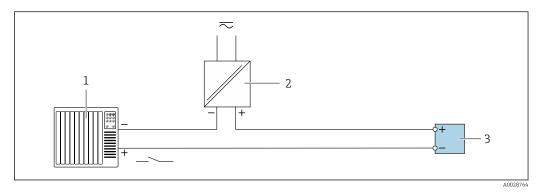

21 Connection example for status input


- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter

## 7.6 Hardware settings


## 7.6.1 Setting the device address

The device address must always be configured for a Modbus slave. The valid device addresses are in the range from 1 to 247. Each address may only be assigned once in a Modbus RS485 network. If an address is not configured correctly, the measuring device is not recognized by the Modbus master. All measuring devices are delivered from the factory with the device address 247 and with the "software addressing" address mode.

### Hardware addressing

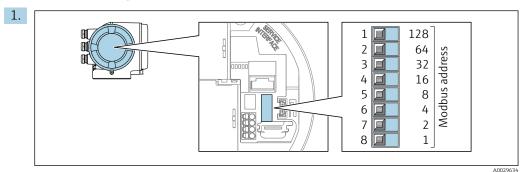

Set the desired device address using the DIP switches in the connection compartment.

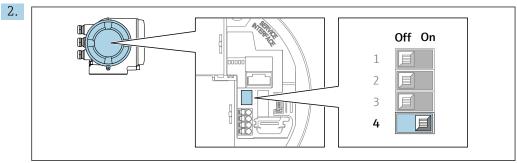

A0029633

To switch addressing from software addressing to hardware addressing: set the DIP switch to **On**.


► The change of device address takes effect after 10 seconds.

### Software addressing

- ► To switch addressing from hardware addressing to software addressing: set the DIP switch to **Off**.
  - The device address configured in the **Device address** parameter takes effect after 10 seconds.

## 7.6.2 Activating the terminating resistor

To avoid incorrect communication transmission caused by impedance mismatch, terminate the Modbus RS485 cable correctly at the start and end of the bus segment.

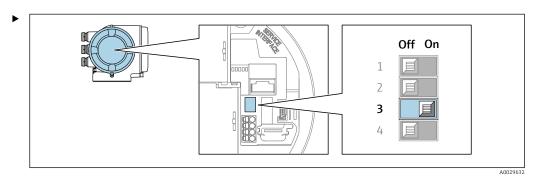

Switch DIP switch no. 3 to **On**.


## 7.7 Ensuring the degree of protection

The measuring device fulfills all the requirements for the degree of protection IP66/67, Type 4X enclosure.

To guarantee the degree of protection IP66/67, Type 4X enclosure, carry out the following steps after electrical connection:

- 1. Check that the housing seals are clean and fitted correctly.
- 2. Dry, clean or replace the seals if necessary.
- 3. Tighten all housing screws and screw covers.
- 4. Firmly tighten the cable glands.
- 5. To ensure that moisture does not enter the cable entry:

  Route the cable so that it loops down before the cable entry ("water trap").

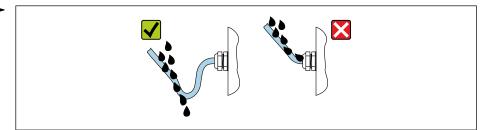

A0029278

6. The cable glands supplied do not ensure housing protection when not in use. They must therefore be replaced by dummy plus corresponding to the housing protection.


## 7.8 Post-connection check

Are cables or the device undamaged (visual inspection)?	
Is the protective earthing established correctly?	

Do the cables used comply with the requirements ?	
Are the mounted cables relieved of tension?	
Are all cable glands installed, securely tightened and leak-tight? Cable run with "water trap" → 🖺 41?	
Is the terminal assignment correct ?	
If supply voltage is present, do values appear on the display module?	
Are dummy plugs inserted in unused cable entries and have transportation plugs been replaced with dummy plugs?	

# 8 Operation options

# 8.1 Overview of operation options

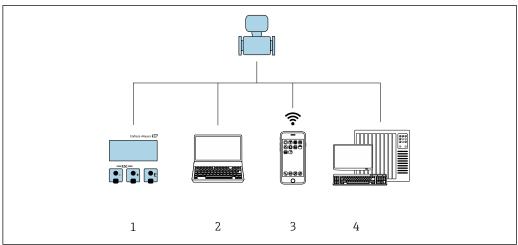


40020212

- 1 Local operation via display module
- 2 Computer with Web browser (e.g. Internet Explorer) or with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM)
- 3 Mobile handheld terminal with SmartBlue App
- 4 Control system (e.g. PLC)

# 8.2 Structure and function of the operating menu

## 8.2.1 Structure of the operating menu

For an overview of the operating menu for experts: see the "Description of Device Parameters" document supplied with the device

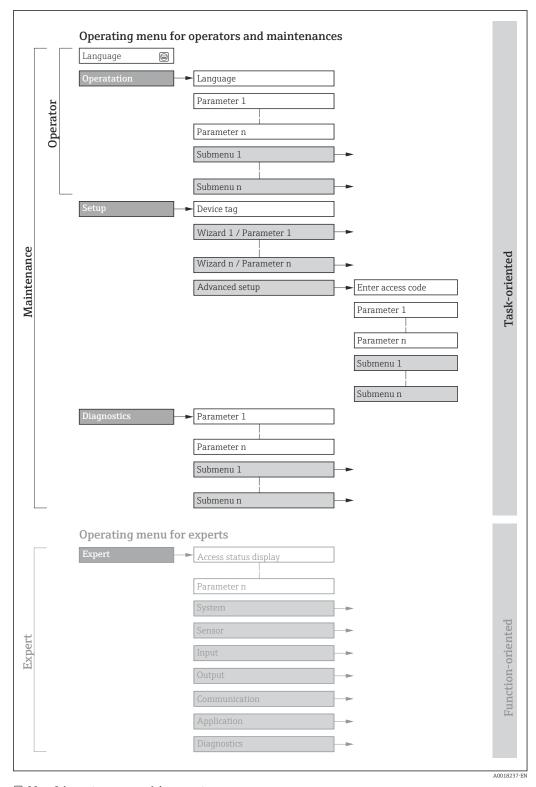

 $\blacksquare$  22 Schematic structure of the operating menu


## 8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (e.g. operator, maintenance etc.). Each user role contains typical tasks within the device life cycle.

Menu/pa	arameter	User role and tasks	Content/meaning
Language	Task- oriented	Role "Operator", "Maintenance" Tasks during operation: Configuration of the operational	<ul> <li>Defining the operating language</li> <li>Defining the Web server operating language</li> <li>Resetting and controlling totalizers</li> </ul>
Operation		display  Reading measured values	<ul> <li>Configuring the operational display (e.g. display format, display contrast)</li> <li>Resetting and controlling totalizers</li> </ul>
Setup		"Maintenance" role Commissioning: Configuration of the measurement Configuration of the inputs and outputs Configuration of the communication interface	Wizards for fast commissioning:  Configuration of the system units  Displaying the I/O configuration  Configuring the measuring point  Configuration of the inputs  Configuration of the outputs  Configuration of the operational display  Configuration of the low flow cut off  Configuration of gas analysis
			Advanced setup  For more customized configuration of the measurement (adaptation to special measuring conditions)  Configuration of totalizers  Configuration of WLAN settings  Administration (define access code, reset measuring device)
Diagnostics		"Maintenance" role Troubleshooting:  Diagnostics and elimination of process and device errors  Measured value simulation	Contains all parameters for error detection and analyzing process and device errors:  Diagnostic list Contains up to 5 currently pending diagnostic messages.  Event logbook Contains event messages that have occurred.  Device information Contains information for identifying the device  Measured values Contains all current measured values.  Data logging submenu with the "Extended HistoROM" order option Storage and visualization of measured values  Heartbeat Technology The functionality of the device is checked on demand and the verification results are documented.  Simulation Used to simulate measured values or output values.
Expert	Function- oriented	Tasks that require detailed knowledge of the function of the device:  Commissioning measurements under difficult conditions  Optimal adaptation of the measurement to difficult conditions  Detailed configuration of the communication interface  Error diagnostics in difficult cases	Contains all of the device parameters and allows direct access to these by means of an access code. The structure of this menu is based on the function blocks of the device:  System Contains all higher-level device parameters that do not affect measurement or measured value communication  Sensor Configuration of the measurement  Input Configuration of the status input  Output Configuration of the analog current outputs as well as the pulse/frequency and switch output  Communication Configuration of the digital communication interface and the web server  Application Configuration of the functions that go beyond the actual measurement (e.g. totalizer).  Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.

# 8.3 Access to operating menu via local display

## 8.3.1 Operational display

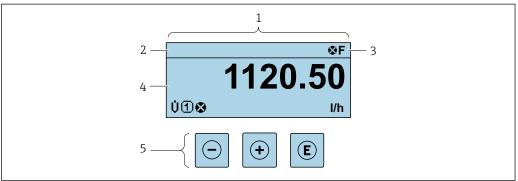

A002934

- 1 Operational display
- 2 Device tag  $\rightarrow$   $\stackrel{\triangle}{=}$  77
- 3 Status area
- 4 Display range for measured values (up to 4 lines)
- 5 Operating elements → 🗎 53


### Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 🗎 133
  - **F**: Failure
  - **C**: Function check
  - **S**: Out of specification
- **M**: Maintenance required
- Diagnostic behavior → 🖺 134
  - 🛚 🐼: Alarm
  - <u>M</u>: Warning
- 🛱: Locking (the device is locked via the hardware )
- +: Communication (communication via remote operation is active)

### Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

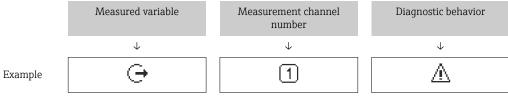

Appears only if a diagnostics event is present for this measured variable.

### Measured variables

Symbol	Meaning
Ü	<ul><li>Volume flow</li><li>Corrected volume flow</li></ul>
ṁ	Mass flow

С	Sound velocity
р	Pressure
Р	Energy flow
ΰ	Flow velocity
4	Temperature
М	Wobbe index
σ	Methane fraction
М	Molar mass
ρ	<ul><li>Density</li><li>Reference density</li></ul>
η	Dynamic viscosity
Н	Calorific value
SNR	Signal to noise ratio
1/4	Acceptance rate
A	Asymmetry
Т	Turbulence
••	Signal strength

The number and display format of the measured variables can be configured via the **Format display** parameter ( $\Rightarrow \triangleq 96$ ).

## Totalizer

Symbol	Meaning
Σ	Totalizer  The measurement channel number indicates which of the three totalizers is displayed.

## Output

Symbol	Meaning
⊖	Output  The measurement channel number indicates which of the outputs is displayed.

## Input

Symbol	Meaning
€	Status input

## Measurement channel numbers


Symbol	Meaning
14	Measurement channel 1 to 4  The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. totalizer 1 to 3).

## Diagnostic behavior

Symbol	Meaning
8	Alarm  Measurement is interrupted.  Signal outputs and totalizers assume the defined alarm condition.  A diagnostic message is generated.
Δ	<ul> <li>Warning</li> <li>Measurement is resumed.</li> <li>The signal outputs and totalizers are not affected.</li> <li>A diagnostic message is generated.</li> </ul>

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable.


#### 8.3.2 **Navigation view**

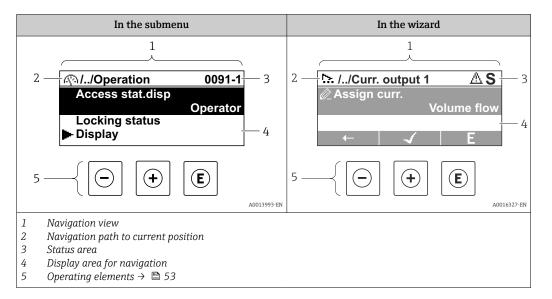


### Navigation path

The navigation path to the current position is displayed at the top left in the navigation view and consists of the following elements:

- The display symbol for the menu/submenu (►) or the wizard (►).
- An omission symbol (/ ../) for operating menu levels in between.
- Name of the current submenu, wizard or parameter

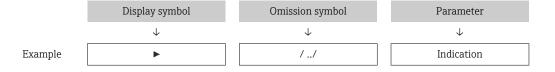

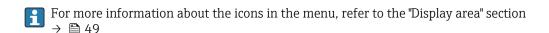


### Status area

The following appears in the status area of the navigation view in the top right corner:

- In the submenu
  - The direct access code to the parameter (e.g., 0022-1)
  - If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard

If a diagnostic event is present, the diagnostic behavior and status signal

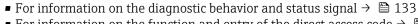

### Display area

#### Menus

Symbol	Meaning
P	Operation Is displayed: ■ In the menu next to the "Operation" selection ■ At the left in the navigation path in the Operation menu

۶	Setup Is displayed: In the menu next to the "Setup" selection At the left in the navigation path in the Setup menu
ય	Diagnosis Is displayed: ■ In the menu next to the "Diagnostics" selection ■ At the left in the navigation path in the Diagnostics menu
3€	Expert Is displayed: In the menu next to the "Expert" selection At the left in the navigation path in the Expert menu

## Submenus, wizards, parameters

Symbol	Meaning
•	Submenu
1>.	Wizards
Ø.	Parameters within a wizard  No display symbol exists for parameters in submenus.

## Locking procedure


Symbol	Meaning
û	Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked.  ■ By a user-specific access code  ■ By the hardware write protection switch

## Wizards

Symbol	Meaning
<b>←</b>	Switches to the previous parameter.
$\checkmark$	Confirms the parameter value and switches to the next parameter.
E	Opens the editing view of the parameter.

## 8.3.3 Editing view


#### Numeric editor

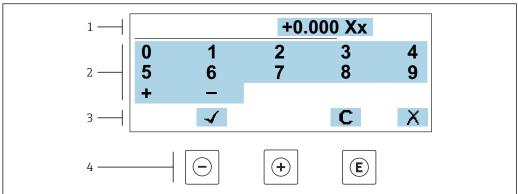

■ 23 For entering values in parameters (e.g. limit values)

- 1 Entry display area
- 2 Input screen
- 3 Confirm, delete or reject entry
- 4 Operating elements

#### Text editor

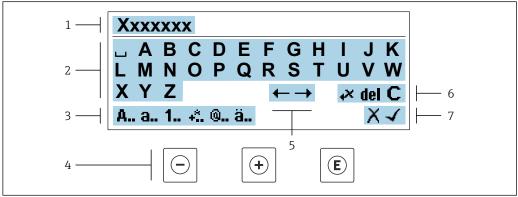

A0034114

24 For entering text in parameters (e.g. device tag)

- 1 Entry display area
- 2 Current input screen
- 3 Change input screen
- 4 Operating elements
- 5 Move entry position
- 6 Delete entry
- 7 Reject or confirm entry

*Using the operating elements in the editing view* 

Operating key	Meaning
	Minus key Move the entry position to the left.
+	Plus key Move the entry position to the right.

Operating key	Meaning
E	<ul> <li>Enter key</li> <li>Pressing the key briefly confirms your selection.</li> <li>Pressing the key for 2 s confirms your entry.</li> </ul>
-++	Escape key combination (press keys simultaneously) Close the editing view without accepting a change.

## *Input screens*

Symbol	Meaning
Α	Upper case
a	Lower case
1	Numbers
+*	Punctuation marks and special characters: = + - * / $^2$ $^3$ $^4$ /4 $^4$ /2 $^3$ /4 ( ) [ ] < > { }
<b>0</b>	Punctuation marks and special characters: ' " `^. , ; : ? ! % $\mu$ ° $\in$ \$ £ ¥ § @ # / \ I ~ & _
ä	Umlauts and accents

## Controlling data entries

Symbol	Meaning	
←→	Move entry position	
X	Reject entry	
4	Confirm entry	
<b>,</b> ×	Delete character immediately to the left of the entry position	
del	Delete character immediately to the right of the entry position	
С	Clear all the characters entered	

## 8.3.4 Operating elements

Operating key	Meaning
	Minus key
	In menu, submenu Moves the selection bar upwards in a picklist
	In wizards Goes to previous parameter
	In the text and numeric editor  Move the entry position to the left.
	Plus key
	In menu, submenu Moves the selection bar downwards in a picklist
<u>+</u>	In wizards Goes to the next parameter
	In the text and numeric editor  Move the entry position to the right.
	Enter key
E	In the operational display Pressing the key briefly opens the operating menu.
	<ul> <li>In menu, submenu</li> <li>Pressing the key briefly:</li> <li>Opens the selected menu, submenu or parameter.</li> <li>Starts the wizard.</li> <li>If help text is open, closes the help text of the parameter.</li> <li>Pressing the key for 2 s in a parameter:</li> <li>If present, opens the help text for the function of the parameter.</li> </ul>
	In wizards Opens the editing view of the parameter and confirms the parameter value
	<ul> <li>In the text and numeric editor</li> <li>Pressing the key briefly confirms your selection.</li> <li>Pressing the key for 2 s confirms your entry.</li> </ul>
	Escape key combination (press keys simultaneously)
(a)+(+)	<ul> <li>In menu, submenu</li> <li>Pressing the key briefly:</li> <li>Exits the current menu level and takes you to the next higher level.</li> <li>If help text is open, closes the help text of the parameter.</li> <li>Pressing the key for 2 s returns you to the operational display ("home position").</li> </ul>
	In wizards Exits the wizard and takes you to the next higher level
	In the text and numeric editor Exits the Editing view without applying the changes.
	Minus/Enter key combination (press and hold down the keys simultaneously)
(-)+E	<ul> <li>If keypad lock is active:         Pressing the key for 3 s deactivates the keypad lock.     </li> <li>If keypad lock is not active:         Pressing the key for 3 s opens the context menu including the option for activating the keypad lock.     </li> </ul>

## 8.3.5 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Data backup
- Simulation

## Calling up and closing the context menu

The user is in the operational display.

- 1. Press the  $\Box$  and  $\Box$  keys for longer than 3 seconds.
  - ► The context menu opens.

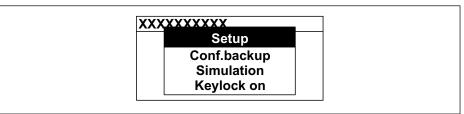

A0034608-EN

- 2. Press  $\Box$  +  $\pm$  simultaneously.
  - └ The context menu is closed and the operational display appears.

### Calling up the menu via the context menu


- 1. Open the context menu.
- 2. Press 🛨 to navigate to the desired menu.
- 3. Press **E** to confirm the selection.
  - ► The selected menu opens.

## 8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

For an explanation of the navigation view with symbols and operating elements  $\Rightarrow \triangleq 49$ 

Example: Setting the number of displayed measured values to "2 values"

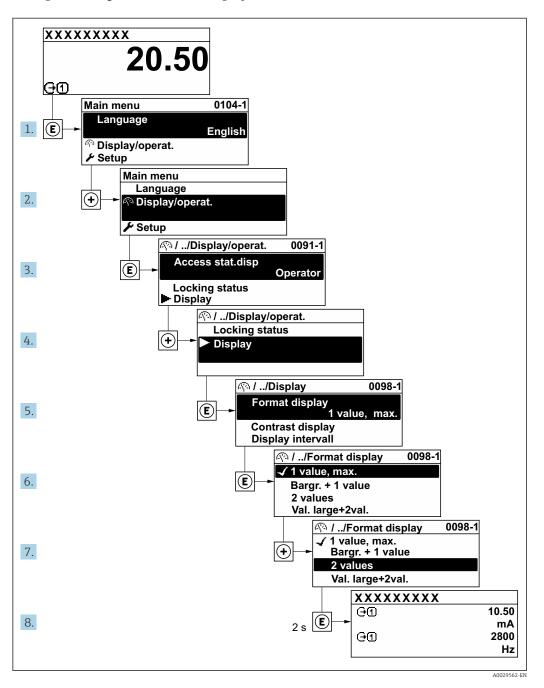


## 8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

## Navigation path

Expert → Direct access

The direct access code consists of a 5-digit number (at maximum) and the channel number, which identifies the channel of a process variable: e.g. 00914-2. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

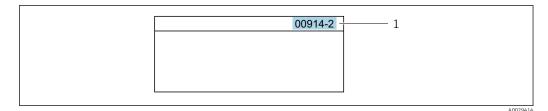

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered. Example: Enter "914" instead of "00914"
- If no channel number is entered, channel 1 is opened automatically.
   Example: Enter 00914 → Assign process variable parameter
- If a different channel is opened: Enter the direct access code with the corresponding channel number.

Example: Enter **00914-2** → **Assign process variable** parameter

For the direct access codes of the individual parameters, see the "Description of Device Parameters" document for the device


## 8.3.8 Calling up help text

Help text is available for some parameters and can be called up from the navigation view. The help text provides a brief explanation of the parameter function and thereby supports swift and safe commissioning.

#### Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

- 1. Press E for 2 s.
  - ► The help text for the selected parameter opens.

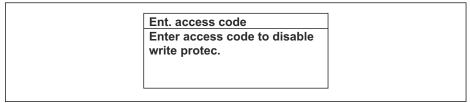

A0014002-EN

- 25 Example: Help text for parameter "Enter access code"
- 2. Press  $\Box$  +  $\pm$  simultaneously.
  - ► The help text is closed.

## 8.3.9 Changing the parameters

Parameters can be changed via the numeric editor or text editor.

- Numeric editor: Change values in a parameter, e.g. specifications for limit values.
- Text editor: Enter text in a parameter, e.g. tag name.

A message is displayed if the value entered is outside the permitted value range.

Ent. access code
Invalid or out of range input
value
Min:0
Max:9999

A0014049-EN

For a description of the editing view - consisting of the text editor and numeric editor - with symbols  $\rightarrow \implies 51$ , for a description of the operating elements  $\rightarrow \implies 53$ 

### 8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access  $\rightarrow \implies 114$ .

### Defining access authorization for user roles

An access code is not yet defined when the device is delivered from the factory. Access authorization (read and write access) to the device is not restricted and corresponds to the "Maintenance" user role.

- ▶ Define the access code.
  - The "Operator" user role is redefined in addition to the "Maintenance" user role. Access authorization differs for the two user roles.

Access authorization to parameters: "Maintenance" user role

Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	V	V
After an access code has been defined.	V	<b>✓</b> 1)

1) The user only has write access after entering the access code.

Access authorization to parameters: "Operator" user role

Access code status	Read access	Write access
After an access code has been defined.	V	_ 1)

- Despite the defined access code, certain parameters can always be modified and thus are excluded from the write protection as they do not affect the measurement: write protection via access code → 
   ☐ 114
- The user role with which the user is currently logged on is indicated by the **Access** status parameter. Navigation path: Operation → Access status

### 8.3.11 Disabling write protection via access code

Parameter write protection via local operation can be disabled by entering the user-specific access code in the **Enter access code** parameter ( $\rightarrow \implies 101$ ) via the respective access option.

1. After you press 🗉, the input prompt for the access code appears.

- 2. Enter the access code.
  - The \( \bar{\mathbb{O}}\) -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

## 8.3.12 Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.

### Switching on the keypad lock

- The keypad lock is switched on automatically:
  - If the device has not been operated via the display for > 1 minute.
  - Each time the device is restarted.

### To activate the keylock manually:

- 1. The device is in the measured value display.

  Press the □ and □ keys for 3 seconds.
  - ► A context menu appears.
- 2. In the context menu select the **Keylock on** option.
  - ► The keypad lock is switched on.
- If the user attempts to access the operating menu while the keypad lock is active, the **Keylock on** message appears.

## Switching off the keypad lock

- ► The keypad lock is switched on. Press the □ and © keys for 3 seconds.
  - ► The keypad lock is switched off.

# 8.4 Access to operating menu via web browser

### 8.4.1 Function range

With the integrated web server, the device can be operated and configured via a web browser service interface (CDI-RJ45) or WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is displayed and can be used to monitor device health. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

For additional information on the web server, see the Special Documentation for the device.  $\rightarrow \triangleq 186$ 

## 8.4.2 Requirements

## Computer hardware

Hardware	Interface	
	CDI-RJ45	WLAN
Interface	The computer must have a RJ45 interface. <sup>1)</sup>	The operating unit must have a WLAN interface.
Connection	Standard Ethernet cable	Connection via Wireless LAN.
Screen	Recommended size: ≥12" (depends on the screen resolution)	

<sup>1)</sup> Recommended cable: CAT5e, CAT6 or CAT7, with shielded plug (e.g. YAMAICHI product; part no. Y-ConProfixPlug63/Prod. ID: 82-006660)

## Computer software

Software	Interface		
	CDI-RJ45	WLAN	
Recommended operating systems	<ul> <li>Microsoft Windows 8 or higher.</li> <li>Mobile operating systems: <ul> <li>iOS</li> <li>Android</li> </ul> </li> <li>Microsoft Windows XP and Windows 7 is supported.</li> </ul>		
Web browsers supported	<ul> <li>Microsoft Internet Explorer 8 or higher</li> <li>Microsoft Edge</li> <li>Mozilla Firefox</li> <li>Google Chrome</li> <li>Safari</li> </ul>		

## Computer settings

Settings	Interface		
	CDI-RJ45	WLAN	
User rights	Appropriate user rights (e.g. administrator rights) for TCP/IP and proxy server settings are necessary (e.g. for adjusting the IP address, subnet mask etc.).		
Proxy server settings of the web browser	The web browser setting <i>Use a proxy server for your LAN</i> must be <b>disabled</b> .		
JavaScript	JavaScript must be enabled.	JavaScript must be enabled.	
	If JavaScript cannot be enabled: Enter http://192.168.1.212/servlet/ basic.html in the address bar of the web browser. A fully functional but simplified version of the operating menu structure starts in the web browser.	The WLAN display requires JavaScript support.	
	When installing a new firmware version: To enable correct data display, clear the temporary memory (cache) under Internet options in the web browser.		
Network connections	Only use the active network connections to the measuring device.		
	Switch off all other network connections such as WLAN for example.	Switch off all other network connections.	

### Measuring device: Via CDI-RJ45 service interface

Device	CDI-RJ45 service interface	
Measuring device	The measuring device has an RJ45 interface.	
Web server	Web server must be enabled; factory setting: ON	
	For information on enabling the Web server $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	

### Measuring device: via WLAN interface

Device	WLAN interface	
Measuring device	The measuring device has a WLAN antenna:  Transmitter with integrated WLAN antenna Transmitter with external WLAN antenna	
Web server	Web server and WLAN must be enabled; factory setting: ON  For information on enabling the Web server →   64	

## 8.4.3 Connecting the device

### Via service interface (CDI-RJ45)

Preparing the measuring device

- 1. Depending on the housing version:

  Loosen the securing clamp or fixing screw of the housing cover.
- 2. Depending on the housing version: Unscrew or open the housing cover.
- 3. Connect the computer to the RJ45 plug via the standard Ethernet cable.

Configuring the Internet protocol of the computer

The following information refers to the default Ethernet settings of the device.

IP address of the device: 192.168.1.212 (factory setting)

- 1. Switch on the measuring device.
- 2. Connect the computer to the RJ45 plug via the standard Ethernet cable  $\rightarrow \triangleq 65$ .
- 3. If a 2nd network card is not used, close all the applications on the notebook.
  - Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.
- 4. Close any open Internet browsers.
- 5. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

IP address	192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 $\rightarrow$ e.g. 192.168.1.213	
Subnet mask	255.255.255.0	
Default gateway	192.168.1.212 or leave cells empty	

#### Via WLAN interface

Configuring the Internet protocol of the mobile terminal

### **NOTICE**

If the WLAN connection is lost during the configuration, settings made may be lost.

▶ Make sure that the WLAN connection is not disconnected while configuring the device.

### NOTICE

### Note the following to avoid a network conflict:

- ► Avoid accessing the measuring device simultaneously from the same mobile terminal via the service interface (CDI-RJ45) and the WLAN interface.
- ▶ Only activate one service interface (CDI-RJ45 or WLAN interface).
- ► If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

### Preparing the mobile terminal

► Enable WLAN on the mobile terminal.

Establishing a WLAN connection from the mobile terminal to the measuring device

- In the WLAN settings of the mobile terminal:
   Select the measuring device using the SSID (e.g. EH\_Prosonic Flow\_300\_A802000).
- 2. If necessary, select the WPA2 encryption method.
- 3. Enter the password:
  - Serial number of the measuring device ex-works (e.g. L100A802000).
  - The LED on the display module flashes. It is now possible to operate the measuring device with the web browser, FieldCare or DeviceCare.
- The serial number can be found on the nameplate.
- To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

### *Terminating the WLAN connection*


► After configuring the device:

Terminate the WLAN connection between the mobile terminal and measuring device.

### Starting the web browser

1. Start the web browser on the computer.

- 2. Enter the IP address of the web server in the address line of the web browser: 192.168.1.212
  - ► The login page appears.

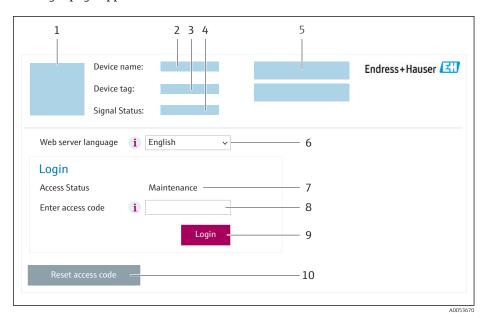

- 1 Picture of device
- 2 Device name
- 3 Device tag
- 4 Status signal
- 5 Current measured values
- 6 Operating language
- 7 User role
- 8 Access code
- 9 Login
- 10 Reset access code ( $\Rightarrow \triangleq 110$ )

## 8.4.4 Logging on

- 1. Select the preferred operating language for the Web browser.
- 2. Enter the user-specific access code.
- 3. Press **OK** to confirm your entry.

Access code 0000 (factory setting); can be changed by customer

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

## 8.4.5 User interface



- 1 Function row
- 2 Local display language
- 3 Navigation area

### Header

The following information appears in the header:

- Device name
- Device tag
- Device status with status signal  $\rightarrow$  🖺 136
- Current measured values

### **Function row**

Functions	Meaning		
Measured values	Displays the measured values of the device		
Menu	<ul> <li>Access to the operating menu from the measuring device</li> <li>The structure of the operating menu is the same as for the local display</li> </ul>		
	Detailed information on the operating menu structure: Description of Device Parameters		
Device status	Displays the diagnostic messages currently pending, listed in order of priority		
Data management	Data exchange between computer and measuring device:  Device configuration:  Load settings from the device (XML format, save configuration)  Save settings to the device (XML format, restore configuration)  Logbook - Export Event logbook (.csv file)  Documents - Export documents:  Export backup data record (.csv file, create documentation of the measuring point configuration)  Verification report (PDF file, only available with the "Heartbeat Verification" application package)  Firmware update - Flashing a firmware version		
Network	Configuration and checking of all the parameters required for establishing the connection to the measuring device:  Network settings (e.g. IP address, MAC address)  Device information (e.g. serial number, firmware version)		
Logout	End the operation and call up the login page		

### Navigation area

The menus, the associated submenus and parameters can be selected in the navigation area.

### Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

### 8.4.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

### **Navigation**

"Expert" menu  $\rightarrow$  Communication  $\rightarrow$  Web server

### Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Web server functionality	Switch the Web server on and off.	■ Off ■ HTML Off ■ On	On

### Function scope of the "Web server functionality" parameter

Option	Description
Off	<ul><li>The Web server is completely disabled.</li><li>Port 80 is locked.</li></ul>
On	<ul> <li>The complete Web server functionality is available.</li> <li>JavaScript is used.</li> <li>The password is transferred in an encrypted state.</li> <li>Any change to the password is also transferred in an encrypted state.</li> </ul>

### Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via local display
- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool

## 8.4.7 Logging out

- Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.
- 1. Select the **Logout** entry in the function row.
  - ► The home page with the Login box appears.
- 2. Close the Web browser.
- 3. If no longer needed:

Reset the modified properties of the Internet protocol (TCP/IP)  $\rightarrow \triangleq 60$ .


## 8.5 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

## 8.5.1 Connecting the operating tool

### Via Modbus RS485 protocol

This communication interface is available in device versions with a Modbus RS485 output.

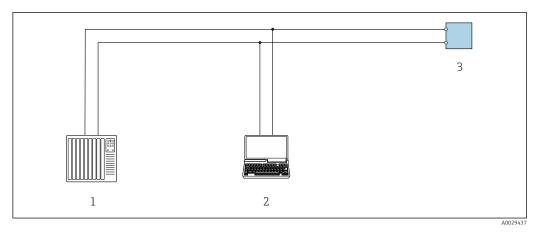

■ 26 Options for remote operation via Modbus RS485 protocol (active)

- 1 Control system (e.g. PLC)
- 2 Computer with web browser (e.g. Microsoft Edge) to access the integrated device web server or with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 3 Transmitter

### Service interface


*Via service interface (CDI-RJ45)* 

A point-to-point connection can be established to configure the device on site. With the housing open, the connection is established directly via the service interface (CDI-RJ45) of the device.

An adapter for the RJ45 to the M12 plug is optionally available for the non-hazardous area:

Order code for "Accessories", option NB: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. The connection to the service interface can be established via an M12 plug without opening the device.

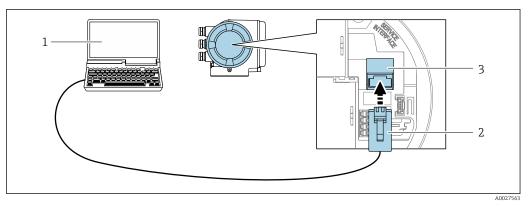


■ 27 Connection via service interface (CDI-RJ45)

- Computer with web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) to access the integrated web server or with an operating tool "FieldCare", "DeviceCare" with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 2 Standard Ethernet connecting cable with RJ45 plug
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated web server

### Via WLAN interface

The optional WLAN interface is available on the following device version:

Order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN"

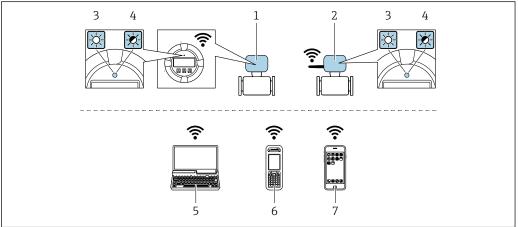

A003457

- 1 Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- 4 LED flashing: WLAN connection established between operating unit and measuring device
- 5 Computer with WLAN interface and web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device web server or with operating tool (e.g. FieldCare, DeviceCare)
- 6 Mobile handheld terminal with WLAN interface and web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device web server or operating tool (e.g. FieldCare, DeviceCare)
- 7 Smart phone or tablet (e.g. Field Xpert SMT70)

Function	WLAN: IEEE 802.11 b/g (2.4 GHz)	
Encryption	WPA2-PSK AES-128 (in accordance with IEEE 802.11i)	
Configurable WLAN channels	1 to 11	
Degree of protection	IP67	
Available antennas	<ul> <li>Internal antenna</li> <li>External antenna (optional)         In the event of poor transmission/reception conditions at the place of installation.     </li> <li>Only 1 antenna is active at any one time!</li> </ul>	

Range	<ul> <li>Internal antenna: typically 10 m (32 ft)</li> <li>External antenna: typically 50 m (164 ft)</li> </ul>
Materials (external antenna)	<ul> <li>Antenna: ASA plastic (acrylonitrile styrene acrylate) and nickel-plated brass</li> <li>Adapter: Stainless steel and nickel-plated brass</li> <li>Cable: Polyethylene</li> <li>Plug: Nickel-plated brass</li> <li>Angle bracket: Stainless steel</li> </ul>

Configuring the Internet protocol of the mobile terminal

### NOTICE

### If the WLAN connection is lost during the configuration, settings made may be lost.

▶ Make sure that the WLAN connection is not disconnected while configuring the device.

### NOTICE

### Note the following to avoid a network conflict:

- ▶ Avoid accessing the measuring device simultaneously from the same mobile terminal via the service interface (CDI-RJ45) and the WLAN interface.
- ▶ Only activate one service interface (CDI-RJ45 or WLAN interface).
- ▶ If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

► Enable WLAN on the mobile terminal.

Establishing a WLAN connection from the mobile terminal to the measuring device

- 1. In the WLAN settings of the mobile terminal:

  Select the measuring device using the SSID (e.g. EH Prosonic Flow 300 A802000).
- 2. If necessary, select the WPA2 encryption method.
- 3. Enter the password:

Serial number of the measuring device ex-works (e.g. L100A802000).

- The LED on the display module flashes. It is now possible to operate the measuring device with the web browser, FieldCare or DeviceCare.
- The serial number can be found on the nameplate.
- To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

Terminating the WLAN connection

► After configuring the device: Terminate the WLAN connection between the mobile terminal and measuring device.

### 8.5.2 FieldCare

### **Function** range

FDT-based (Field Device Technology) plant asset management tool from Endress+Hauser. It can configure all smart field units in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

#### Access is via:

- CDI-RJ45 service interface → 🖺 65
- WLAN interface → 🗎 66

#### Typical functions:


- Transmitter parameter configuration
- Loading and saving of device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook
  - Operating Instructions BA00027S Operating Instructions BA00059S
- Source for device description files  $\rightarrow \triangleq 70$

### Establishing a connection



- Operating Instructions BA00027S
- Operating Instructions BA00059S

#### User interface

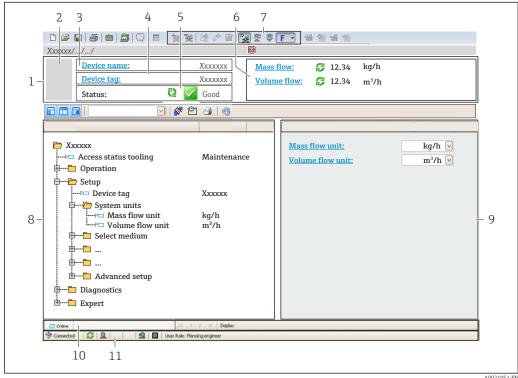

- 1 Header
- 2 Picture of device
- 3 Device name
- Device tag
- Status area with status signal → 🖺 136 5
- Display area for current measured values
- 7 Editing toolbar with additional functions such as save/load, event list and create documentation
- 8 Navigation area with operating menu structure
- Work area
- 10 Action area
- 11 Status area


68


## 8.5.3 DeviceCare

### **Function range**

Tool for connecting and configuring Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.

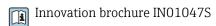

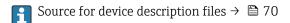

# 9 System integration

# 9.1 Overview of device description files

### 9.1.1 Current version data for the device

Firmware Version	01.02.zz	<ul> <li>On the title page of the manual</li> <li>On the transmitter nameplate</li> <li>Firmware version         Diagnostics → Device information → Firmware version     </li> </ul>
Release date of firmware version	01.2024	

## 9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via service interface (CDI) or Modbus interface	Sources for obtaining device descriptions
FieldCare	<ul> <li>www.endress.com → Downloads area</li> <li>USB stick (contact Endress+Hauser)</li> <li>DVD (contact Endress+Hauser)</li> </ul>
DeviceCare	<ul> <li>www.endress.com → Downloads area</li> <li>CD-ROM (contact Endress+Hauser)</li> <li>DVD (contact Endress+Hauser)</li> </ul>

## 9.2 Modbus RS485 information

## 9.2.1 Function codes

Function codes are used to define which read or write action is carried out via the Modbus protocol. The measuring device supports the following function codes:

Code	Name	Description	Application
03	Read holding register	Master reads one or more Modbus registers from the device. A maximum of 125 consecutive registers can be read with 1 telegram: 1 register = 2 bytes  The measuring device does not make a distinction between function codes 03 and 04; these codes therefore	Read device parameters with read and write access Example: Read volume flow
04	Read input register	yield the same result.  Master reads one or more Modbus registers from the device.  A maximum of 125 consecutive registers can be read with 1 telegram: 1 register = 2 bytes  The measuring device does not make a distinction between function codes 03 and 04; these codes therefore yield the same result.	Read device parameters with read access Example: Read totalizer value
06	Write single registers	Master writes a new value to <b>one</b> Modbus register of the measuring device.  Use function code 16 to write multiple registers with just 1 telegram.	Write only 1 device parameter Example: reset totalizer
08	Diagnostics	Master checks the communication connection to the measuring device.  The following "Diagnostics codes" are supported:  Sub-function 00 = Return query data (loopback test)  Sub-function 02 = Return diagnostics register	
16	Write multiple registers	Master writes a new value to multiple Modbus registers of the device.  A maximum of 120 consecutive registers can be written with 1 telegram.  If the required device parameters are not available as a group, yet must nevertheless be addressed with a single telegram, use Modbus data map → 1 73	Write multiple device parameters
23	Read/Write multiple registers	Master reads and writes a maximum of 118 Modbus registers of the measuring device simultaneously with 1 telegram. Write access is executed <b>before</b> read access.	Write and read multiple device parameters  Example:  Read mass flow  Reset totalizer

Broadcast messages are only allowed with function codes 06, 16 and 23.

#### 9.2.2 **Register information**



For an overview of device parameters and their corresponding Modbus register information, refer to the "Modbus RS485 register information" section in the "Description of device parameters" documentation .

## 9.2.3 Response time

Response time of the measuring device to the request telegram of the Modbus master: typically 3 to 5 ms  $\,$ 

## 9.2.4 Data types

The measuring device supports the following data types:

<b>FLOAT</b> (floating point number IEEE 754) Data length = 4 bytes (2 registers)				
Byte 3	Byte 2	Byte 1	Byte 0	
SEEEEEE	EMMMMMM	MMMMMMM	MMMMMMM	
S = sign, E = exponent, M = mantissa				

INTEGER Data length = 2 bytes (1 register)			
Byte 1	Byte 0		
Most significant byte (MSB)	Least significant byte (LSB)		

STRING  Data length = depends on the device parameter, e.g. presentation of a device parameter with a data length = 18 bytes (9 registers)				
Byte 17	Byte 16		Byte 1	Byte 0
Most significant byte (MSB)				Least significant byte (LSB)

## 9.2.5 Byte transmission sequence

Byte addressing, i.e. the transmission sequence of the bytes, is not specified in the Modbus specification. For this reason, it is important to coordinate or match the addressing method between the master and slave during commissioning. This can be configured in the measuring device using the **Byte order** parameter.

The bytes are transmitted depending on the selection in the **Byte order** parameter:

FLOAT				
	Sequence			
Options	1.	2.	3.	4.
1-0-3-2*	Byte 1 (MMMMMMMM)	Byte 0 (MMMMMMMM)	Byte 3 (SEEEEEEE)	Byte 2 (EMMMMMMM)
0 - 1 - 2 - 3	Byte 0 (MMMMMMMM)	Byte 1 (MMMMMMMM)	Byte 2 (EMMMMMMM)	Byte 3 (SEEEEEEE)
2 - 3 - 0 - 1	Byte 2 (EMMMMMMM)	Byte 3 (SEEEEEEE)	Byte 0 (MMMMMMM)	Byte 1 (MMMMMMM)
3 - 2 - 1 - 0	Byte 3 (SEEEEEEE)	Byte 2 (EMMMMMMM)	Byte 1 (MMMMMMMM)	Byte 0 (MMMMMMMM)
* = factory setting, S = sign, E = exponent, M = mantissa				

INTEGER				
	Sequence			
Options	1.	2.		

1-0-3-2*	Byte 1	Byte 0		
3-2-1-0	(MSB)	(LSB)		
0-1-2-3	Byte 0	Byte 1		
2-3-0-1	(LSB)	(MSB)		
* = factory setting, MSB = most significant byte, LSB = least significant byte				

STRING Presentation taking the example of a device parameter with a data length of 18 bytes.						
	Sequence					
Options	1.	1. 2 17. 18.				
1 - 0 - 3 - 2 *       Byte 17       Byte 16        Byte 1       Byte 0 (LSB)						
0 - 1 - 2 - 3       Byte 16       Byte 17        Byte 0       Byte 1         2 - 3 - 0 - 1       (MSB)       (LSB)						
* = factory setting, MSB = most significant byte, LSB = least significant byte						

### 9.2.6 Modbus data map

#### Function of the Modbus data map

The device offers a special memory area, the Modbus data map (for a maximum of 16 device parameters), to allow users to call up multiple device parameters via Modbus RS485 and not only individual device parameters or a group of consecutive device parameters.

Grouping of device parameters is flexible and the Modbus master can read or write to the entire data block simultaneously with a single request telegram.

#### Structure of the Modbus data map

The Modbus data map consists of two data sets:

- Scan list: Configuration area
   The device parameters to be grouped are defined in a list by entering their Modbus RS485 register addresses in the list.
- Data area

The measuring device reads out the register addresses entered in the scan list cyclically and writes the associated device data (values) to the data area.



For an overview of device parameters and their corresponding Modbus register information, refer to the "Modbus RS485 register information" section in the "Description of device parameters" documentation .

#### Scan list configuration

For configuration, the Modbus RS485 register addresses of the device parameters to be grouped must be entered in the scan list. Please note the following basic requirements of the scan list:

Max. entries	16 device parameters
Supported device parameters	Only parameters with the following characteristics are supported:  Access type: read or write access  Data type: float or integer

Configuration of the scan list via FieldCare or DeviceCare

Carried out using the operating menu of the measuring device: Expert  $\rightarrow$  Communication  $\rightarrow$  Modbus data map  $\rightarrow$  Scan list register 0 to 15

Scan list		
No.	Configuration register	
0	Scan list register 0	
15	Scan list register 15	

Configuration of the scan list via Modbus RS485

Carried out using register addresses 5001 - 5016

Scan list			
No. Modbus RS485 register Data type Configuration register			Configuration register
0	5001	Integer	Scan list register 0
		Integer	
15	5016	Integer	Scan list register 15

### Reading out data via Modbus RS485

The Modbus master accesses the data area of the Modbus data map to read out the current values of the device parameters defined in the scan list.

Master access to data area	Via register addresses 5051-5081
----------------------------	----------------------------------

Data area					
Device parameter value	Modbus RS485 register  Start register End register (Float only)		Data type*	Access**	
Value of scan list register 0	5051	5052	Integer/float	Read/write	
Value of scan list register 1	5053	5054	Integer/float	Read/write	
Value of scan list register					
Value of scan list register 15	5081	5082	Integer/float	Read/write	

 $<sup>\</sup>ensuremath{^{\star}}$  Data type depends on the device parameters entered in the scan list.

<sup>\*\*</sup> Data access depends on the device parameters entered in the scan list. If the device parameter entered supports read and write access, the parameter can also be accessed via the data area.

#### 10 Commissioning

#### 10.1 Post-mounting and post-connection check

Before commissioning the device:


- ▶ Make sure that the post-installation and post-connection checks have been performed successfully.
- Checklist for "Post-mounting" check → 🗎 28
- Checklist for "Post-connection check" → 🖺 41

#### 10.2 Switching on the measuring device

- ▶ Switch on the device upon successful completion of the post-mounting and postconnection check.
  - ► After a successful startup, the local display switches automatically from the startup display to the operational display.
- If nothing appears on the local display or if a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting"  $\rightarrow \square$  130.

#### 10.3 Setting the operating language

Factory setting: English or ordered local language

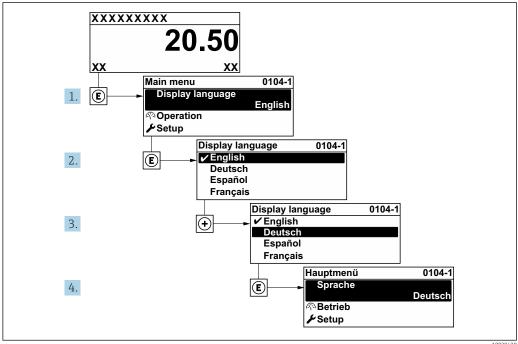


₹ 28 Taking the example of the local display

#### 10.4 Configuring the measuring device

The **Setup** menu with its quided wizards contains all the parameters needed for standard operation.

Endress+Hauser 75

A0029420

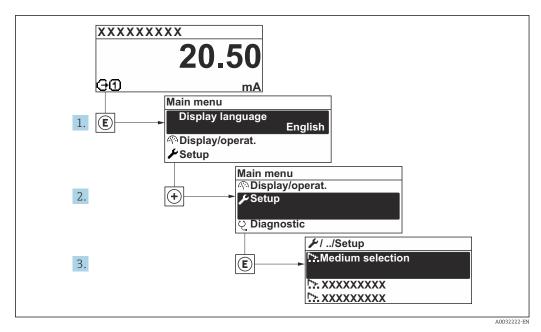


Navigation to "Setup" menu using the example of the local display

The number of submenus and parameters can vary depending on the device version. Certain submenus and parameters in these submenus are not described in the Operating Instructions. Instead a description is provided in the Special Documentation for the device ("Supplementary documentation").

#### **Navigation**


"Setup" menu

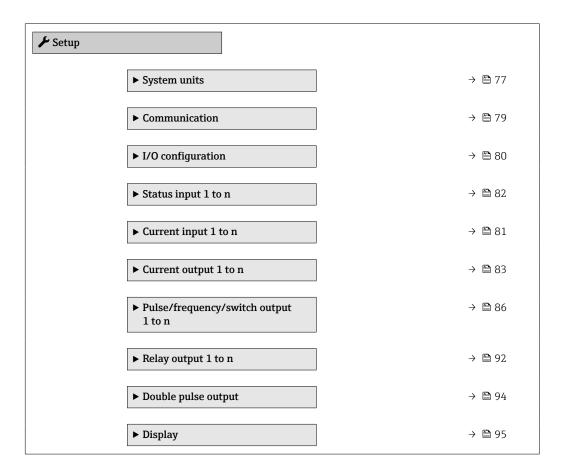

► Low flow cut off	→ 🖺 97
► Gas analysis	→ 🖺 98
► Advanced setup	→ 🖺 100

### 10.4.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

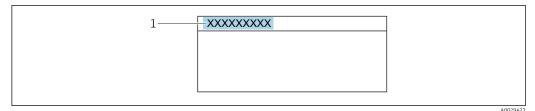

- $\blacksquare$  30 Header of the operational display with tag name
- 1 Tag name

#### Navigation

"Setup" menu → Device tag

#### Parameter overview with brief description


Parameter	Description	User entry	Factory setting
Device tag	Enter the name for the measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Promag

### 10.4.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

#### Navigation

"Setup" menu  $\rightarrow$  System units

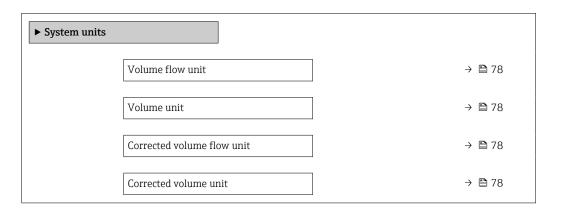

Mass flow unit	→ 🗎 78
Mass unit	→ 🖺 78
Velocity unit	→ 🖺 78
Temperature unit	→ 🖺 79
Pressure unit	→ 🖺 79
Density unit	→ 🖺 79
Energy unit	→ 🖺 79
Calorific value unit	→ 🖺 79
Energy flow unit	→ 🗎 79

Parameter	Description	Selection	Factory setting
Volume flow unit	Select volume flow unit.  Effect  The selected unit applies to:  Output  Low flow cut off Simulation process variable	Unit choose list	Depends on country:  • m³/h  • ft³/h
Volume unit	Select volume unit.	Unit choose list	Depends on country:  • m³  • ft³
Corrected volume flow unit	Select corrected volume flow unit.  Result  The selected unit applies for: Corrected volume flow	Unit choose list	Country-specific: Nm³/h Sft³/h
Corrected volume unit	Select corrected volume unit.	Unit choose list	Country-specific: Nm³ Sft³
Mass flow unit	Select mass flow unit.  Result  The selected unit applies to:  Output  Low flow cut off Simulation process variable	Unit choose list	Depends on country:  kg/h lb/h
Mass unit	Select mass unit.	Unit choose list	Country-specific:     kg     lb
Velocity unit	Select velocity unit.  Effect  The selected unit applies for:  Flow velocity  Sound velocity  Maximum value  Minimum value	Unit choose list	Country-specific:  m/s ft/s


Parameter	Description	Selection	Factory setting
Temperature unit	Select temperature unit.  Effect  The selected unit applies for:  Temperature  Maximum value  Minimum value	Unit choose list	Country-specific:
Pressure unit	Select process pressure unit.  Effect  The selected unit applies to:  Process pressure parameter (5640)	Unit choose list	Depends on country:  • bar  • psi
Density unit	Select density unit.  Effect  The selected unit applies for:  Output Simulation process variable	Unit choose list	Country-specific: • kg/m³ • lb/ft³
Energy unit	Select energy unit.	Unit choose list	Country-specific: • kWh • Btu
Calorific value unit	Select calorific value unit.  Result  The selected unit applies for:  Calorific value  Wobbe index	Unit choose list	Country-specific: • kWh/Nm³ • Btu/Sft³
Energy flow unit	Select energy flow unit.	Unit choose list	Country-specific: • kW • Btu/h

# 10.4.3 Configuring the communication interface

The **Communication** submenu guides you systematically through all the parameters that have to be configured for selecting and setting the communication interface.

### Navigation

"Setup" menu  $\rightarrow$  Communication

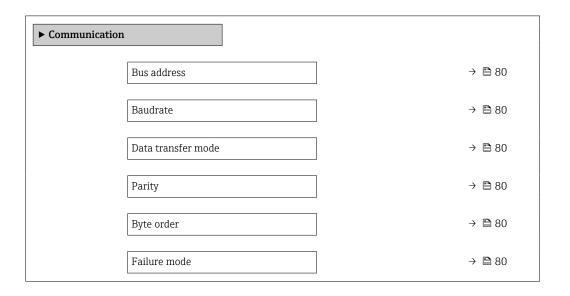

Parameter	Description	User entry / Selection	Factory setting
Bus address	Enter device address.	1 to 247	247
Baudrate	Define data transfer speed.	<ul> <li>1200 BAUD</li> <li>2400 BAUD</li> <li>4800 BAUD</li> <li>9600 BAUD</li> <li>19200 BAUD</li> <li>38400 BAUD</li> <li>57600 BAUD</li> <li>115200 BAUD</li> <li>230400 BAUD</li> </ul>	19200 BAUD
Data transfer mode	Select data transfer mode.	• ASCII • RTU	RTU
Parity	Select parity bits.	Picklist ASCII option:  • 0 = Even option  • 1 = Odd option  Picklist RTU option:  • 0 = Even option  • 1 = Odd option  • 2 = None / 1 stop bit option  • 3 = None / 2 stop bits option	Even
Byte order	Select byte transmission sequence.	■ 0-1-2-3 ■ 3-2-1-0 ■ 1-0-3-2 ■ 2-3-0-1	1-0-3-2
Failure mode	Select measured value output behavior when a diagnostic message occurs via Modbus communication.  NaN <sup>1)</sup>	NaN value     Last valid value	NaN value


#### 1) Not a Number

# 10.4.4 Displaying the I/O configuration

The **I/O configuration** submenu guides the user systematically through all the parameters in which the configuration of the I/O modules is displayed.

### Navigation

"Setup" menu  $\rightarrow$  I/O configuration

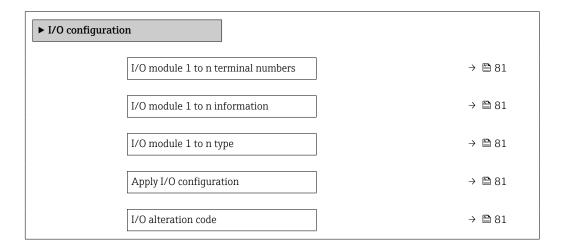

80

Parameter	Description	User interface / Selection / User entry	Factory setting
I/O module 1 to n terminal numbers	Shows the terminal numbers used by the I/O module.	<ul> <li>Not used</li> <li>26-27 (I/O 1)</li> <li>24-25 (I/O 2)</li> <li>22-23 (I/O 3)</li> </ul>	-
I/O module 1 to n information	Shows information of the plugged I/O module.	<ul><li>Not plugged</li><li>Invalid</li><li>Not configurable</li><li>Configurable</li><li>MODBUS</li></ul>	-
I/O module 1 to n type	Shows the I/O module type.	<ul> <li>Off</li> <li>Current output *</li> <li>Current input *</li> <li>Status input *</li> <li>Pulse/frequency/switch output *</li> </ul>	Off
Apply I/O configuration	Apply parameterization of the freely configurable I/O module.	■ No ■ Yes	No
I/O alteration code	Enter the code in order to change the I/O configuration.	Positive integer	0


Visibility depends on order options or device settings

# 10.4.5 Configuring the current input

The **"Current input" wizard** guides the user systematically through all the parameters that have to be set for configuring the current input.

### Navigation

"Setup" menu  $\rightarrow$  Current input

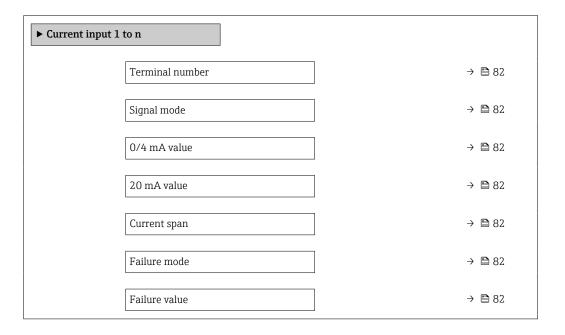


Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the current input module.	<ul><li>Not used</li><li>24-25 (I/O 2)</li><li>22-23 (I/O 3)</li></ul>	-
Signal mode	The measuring device is <b>not</b> approved for use in the hazardous area with type of protection Ex-i.	Select the signal mode for the current input.	<ul><li>Passive</li><li>Active</li></ul>	Active
0/4 mA value	-	Enter 4 mA value.	Signed floating-point number	0
20 mA value	-	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter
Current span	-	Select current range for process value output and upper/lower level for alarm signal.	<ul> <li>420 mA (420.5 mA)</li> <li>420 mA NE (3.820.5 mA)</li> <li>420 mA US (3.920.8 mA)</li> <li>020 mA (020.5 mA)</li> </ul>	Country-specific:  420 mA NE (3.820.5 mA)  420 mA US (3.920.8 mA)
Failure mode	-	Define input behavior in alarm condition.	<ul><li>Alarm</li><li>Last valid value</li><li>Defined value</li></ul>	Alarm
Failure value	In the <b>Failure mode</b> parameter, the <b>Defined value</b> option is selected.	Enter value to be used by the device if input value from external device is missing.	Signed floating-point number	0

### 10.4.6 Configuring the status input

The **Status input** submenu guides the user systematically through all the parameters that have to be set for configuring the status input.

#### Navigation

"Setup" menu  $\rightarrow$  Status input 1 to n

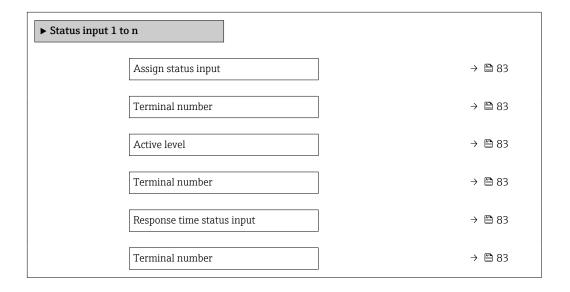


Parameter	Description	Selection / User interface / User entry	Factory setting
Assign status input	Select function for the status input.	<ul> <li>Off</li> <li>Reset totalizer 1</li> <li>Reset totalizer 2</li> <li>Reset totalizer 3</li> <li>Reset all totalizers</li> <li>Flow override</li> </ul>	Off
Terminal number	Shows the terminal numbers used by the status input module.	<ul><li>Not used</li><li>24-25 (I/O 2)</li><li>22-23 (I/O 3)</li></ul>	-
Active level	Define input signal level at which the assigned function is triggered.	■ High ■ Low	High
Response time status input	Define the minimum amount of time the input signal level must be present before the selected function is triggered.	5 to 200 ms	50 ms

### **10.4.7** Configuring the current output

The **Current output** wizard guides you systematically through all the parameters that have to be set for configuring the current output.

#### Navigation

"Setup" menu  $\rightarrow$  Current output

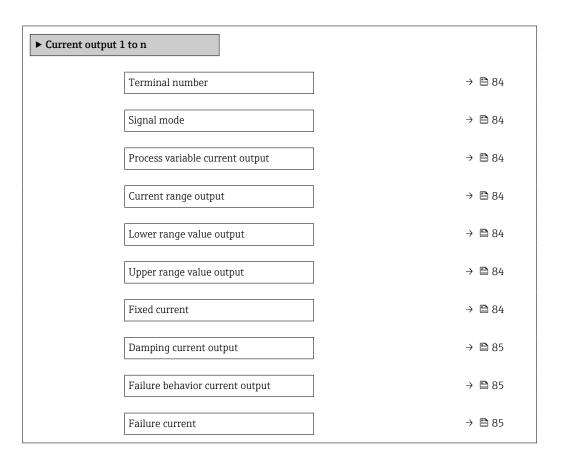

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the current output module.	<ul><li>Not used</li><li>24-25 (I/O 2)</li><li>22-23 (I/O 3)</li></ul>	-
Signal mode	-	Select the signal mode for the current output.	<ul><li>Passive</li><li>Active</li></ul>	Active
Process variable current output		Select the process variable for the current output.	■ Off * Volume flow Corrected volume flow Mass flow Flow velocity Sound velocity Temperature Pressure Methane fraction Molar mass Density Dynamic viscosity Calorific value Wobbe index* Energy flow Signal strength Signal to noise ratio Acceptance rate Turbulence Flow asymmetry Electronics temperature	Volume flow
Current range output	_	Select current range for process value output and upper/lower level for alarm signal.	<ul> <li>420 mA NE         (3.820.5 mA)</li> <li>420 mA US         (3.920.8 mA)</li> <li>420 mA (420.5 mA)</li> <li>020 mA (020.5 mA)</li> <li>Fixed value</li> </ul>	Depends on country:  420 mA NE (3.820.5 mA)  420 mA US (3.920.8 mA)
Lower range value output	In <b>Current span</b> parameter (→ ≅ 84), one of the following options is selected: ■ 420 mA NE (3.820.5 mA) ■ 420 mA US (3.920.8 mA) ■ 420 mA (420.5 mA) ■ 020 mA (020.5 mA)	Enter lower range value for the measured value range.	Signed floating-point number	Depends on country:  • m³/h  • ft³/h
Upper range value output	In <b>Current span</b> parameter (→ ≧ 84), one of the following options is selected: ■ 420 mA NE (3.820.5 mA) ■ 420 mA US (3.920.8 mA) ■ 420 mA (420.5 mA) ■ 020 mA (020.5 mA)	Enter upper range value for the measured value range.	Signed floating-point number	Depends on country and nominal diameter
Fixed current	The <b>Fixed current</b> option is selected in the <b>Current span</b> parameter (→ 🖺 84).	Defines the fixed output current.	0 to 22.5 mA	22.5 mA

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Damping current output	A process variable is selected in the <b>Assign current output</b> parameter (→ 🗎 84) and one of the following options is selected in the <b>Current span</b> parameter (→ 🖺 84):  ■ 420 mA NE (3.820.5 mA)  ■ 420 mA US (3.920.8 mA)  ■ 420 mA (420.5 mA)  ■ 020 mA (020.5 mA)	Enter time constant for output damping (PT1 element).  Damping reduces the effect of fluctuations in the measured value on the output signal.	0.0 to 999.9 s	1.0 s
Failure behavior current output	A process variable is selected in the <b>Assign current output</b> parameter (→ 🖺 84) and one of the following options is selected in the <b>Current span</b> parameter (→ 🖺 84):  420 mA NE (3.820.5 mA)  420 mA US (3.920.8 mA)  420 mA (420.5 mA)  020 mA (020.5 mA)	Select output behavior in the event of a device alarm.	<ul> <li>Min.</li> <li>Max.</li> <li>Last valid value</li> <li>Actual value</li> <li>Fixed value</li> </ul>	Max.
Failure current	The <b>Defined value</b> option is selected in the <b>Failure mode</b> parameter.	Enter current output value in alarm condition.	0 to 22.5 mA	22.5 mA

 $<sup>^{\</sup>star}$  Visibility depends on order options or device settings

### 10.4.8 Configuring the pulse/frequency/switch output

The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Pulse/frequency/switch output




#### Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Operating mode	Define the output as a pulse, frequency or switch output.	<ul><li>Pulse</li><li>Frequency</li><li>Switch</li></ul>	Pulse

#### Configuring the pulse output

#### **Navigation**

"Setup" menu → Pulse/frequency/switch output

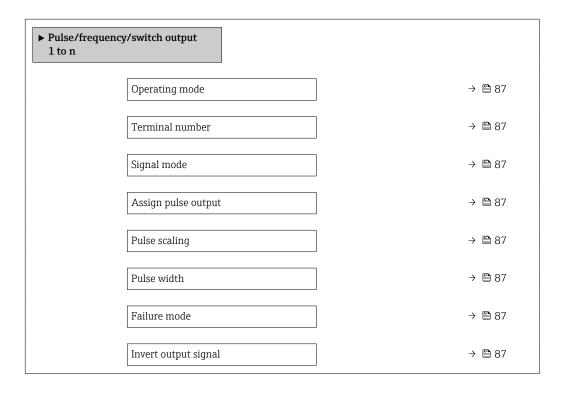

86


Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	<ul><li>Pulse</li><li>Frequency</li><li>Switch</li></ul>	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	<ul><li>Not used</li><li>24-25 (I/O 2)</li><li>22-23 (I/O 3)</li></ul>	-
Signal mode	-	Select the signal mode for the PFS output.	<ul> <li>Passive</li> <li>Active*</li> <li>Passive NE</li> </ul>	Passive
Assign pulse output	The <b>Pulse</b> option is selected in <b>Operating mode</b> parameter.	Select process variable for pulse output.	<ul> <li>Off</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Mass flow</li> <li>Energy flow</li> </ul>	Off
Pulse scaling	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter (→ 🖺 86) and a process variable is selected in the <b>Assign pulse output</b> parameter (→ 🖺 87).	Enter quantity for measured value at which a pulse is output.	Positive floating point number	Depends on country and nominal diameter
Pulse width	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter (→ 🖺 86) and a process variable is selected in the <b>Assign pulse output</b> parameter (→ 🖺 87).	Define time width of the output pulse.	0.05 to 2 000 ms	100 ms
Failure mode	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter (→ 🖺 86) and a process variable is selected in the <b>Assign pulse output</b> parameter (→ 🖺 87).	Select output behavior in the event of a device alarm.	<ul><li>Actual value</li><li>No pulses</li></ul>	No pulses
Invert output signal	-	Invert the output signal.	■ No ■ Yes	No

 $<sup>^{\</sup>star}$  Visibility depends on order options or device settings

### Configuring the frequency output

### Navigation

"Setup" menu  $\rightarrow$  Pulse/frequency/switch output

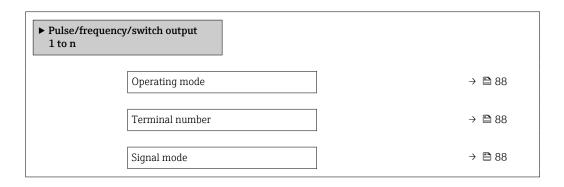

Assign frequency output	→ 🖺 88
Minimum frequency value	→ 🖺 89
Maximum frequency value	→ 🖺 89
Measuring value at minimum frequency	→ 🖺 89
Measuring value at maximum frequency	→ 🖺 89
Failure mode	→ 🖺 89
Failure frequency	→ 🖺 89
Invert output signal	→ 🖺 89

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	<ul><li>Pulse</li><li>Frequency</li><li>Switch</li></ul>	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	<ul><li>Not used</li><li>24-25 (I/O 2)</li><li>22-23 (I/O 3)</li></ul>	-
Signal mode	-	Select the signal mode for the PFS output.	<ul> <li>Passive</li> <li>Active *</li> <li>Passive NE</li> </ul>	Passive
Assign frequency output	The <b>Frequency</b> option is selected in <b>Operating mode</b> parameter (→ 🖺 86).	Select process variable for frequency output.	■ Off ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Flow velocity ■ Sound velocity ■ Temperature ■ Pressure ■ Methane fraction ■ Molar mass ■ Density ■ Dynamic viscosity ■ Calorific value ■ Wobbe index ■ Energy flow ■ Signal strength ■ Signal to noise ratio ■ Acceptance rate ■ Turbulence ■ Flow asymmetry ■ Electronics temperature	Off

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Minimum frequency value	The <b>Frequency</b> option is selected in the <b>Operating mode</b> parameter (→ 🖺 86) and a process variable is selected in the <b>Assign frequency output</b> parameter (→ 🖺 88).	Enter minimum frequency.	0.0 to 10 000.0 Hz	0.0 Hz
Maximum frequency value	The <b>Frequency</b> option is selected in the <b>Operating mode</b> parameter (→ 🖺 86) and a process variable is selected in the <b>Assign frequency output</b> parameter (→ 🖺 88).	Enter maximum frequency.	0.0 to 10 000.0 Hz	10 000.0 Hz
Measuring value at minimum frequency	The <b>Frequency</b> option is selected in the <b>Operating mode</b> parameter (→ 🖺 86) and a process variable is selected in the <b>Assign frequency output</b> parameter (→ 🖺 88).	Enter measured value for minimum frequency.	Signed floating-point number	Depends on country and nominal diameter
Measuring value at maximum frequency	The <b>Frequency</b> option is selected in the <b>Operating mode</b> parameter (→ 🖺 86) and a process variable is selected in the <b>Assign frequency output</b> parameter (→ 🖺 88).	Enter measured value for maximum frequency.	Signed floating-point number	Depends on country and nominal diameter
Failure mode	The <b>Frequency</b> option is selected in the <b>Operating mode</b> parameter (→ 🖺 86) and a process variable is selected in the <b>Assign frequency output</b> parameter (→ 🖺 88).	Select output behavior in the event of a device alarm.	<ul><li>Actual value</li><li>Defined value</li><li>0 Hz</li></ul>	0 Hz
Failure frequency	In the <b>Operating mode</b> parameter (→ 🖺 86), the <b>Frequency</b> option is selected, in the <b>Assign frequency output</b> parameter (→ 🖺 88) a process variable is selected, and in the <b>Failure mode</b> parameter, the <b>Defined value</b> option is selected.	Enter frequency output value in alarm condition.	0.0 to 12 500.0 Hz	0.0 Hz
Invert output signal	-	Invert the output signal.	■ No ■ Yes	No

<sup>\*</sup> Visibility depends on order options or device settings

## Configuring the switch output

# Navigation

"Setup" menu → Pulse/frequency/switch output

➤ Pulse/frequency/sv 1 to n	vitch output		
Ol	perating mode	-	→ 🖺 90
Te	erminal number	-	→ 🖺 90
Sie	gnal mode	-	→ 🖺 90
Sv	vitch output function	-	→ 🖺 91
As	ssign diagnostic behavior	-	→ 🖺 91
As	ssign limit	-	→ 🗎 91
As	ssign flow direction check	-	→ 🖺 91
As	ssign status	-	→ 🖺 91
Sv	vitch-on value	-	→ 🖺 91
Sv	vitch-off value	-	→ 🖺 92
Sv	vitch-on delay	-	→ 🖺 92
Sv	vitch-off delay	-	→ 🖺 92
Fa	ailure mode	-	→ 🖺 92
In	vert output signal	-	→ 🗎 92

### Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	<ul><li>Pulse</li><li>Frequency</li><li>Switch</li></ul>	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	<ul><li>Not used</li><li>24-25 (I/O 2)</li><li>22-23 (I/O 3)</li></ul>	_
Signal mode	-	Select the signal mode for the PFS output.	<ul> <li>Passive</li> <li>Active*</li> <li>Passive NE</li> </ul>	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch output function	The <b>Switch</b> option is selected in the <b>Operating mode</b> parameter.	Select function for switch output.	<ul> <li>Off</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit</li> <li>Flow direction check</li> <li>Status</li> </ul>	Off
Assign diagnostic behavior	<ul> <li>In the Operating mode parameter, the Switch option is selected.</li> <li>In the Switch output function parameter, the Diagnostic behavior option is selected.</li> </ul>	The output is switched on (closed, conductive), if there is a pending diagnostic event of the assigned behavioral category.	<ul><li>Alarm</li><li>Alarm or warning</li><li>Warning</li></ul>	Alarm
Assign limit	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Limit option is selected in the Switch output function parameter.</li> </ul>	Select the variable to monitor in case the specified limit value is exceeded. If a limit value is exceeded, the output is switched on (conductive).	Off Volume flow Corrected volume flow Mass flow Flow velocity Sound velocity Temperature Pressure Methane fraction Molar mass Density Dynamic viscosity Calorific value Wobbe index Energy flow Signal strength Signal to noise ratio Acceptance rate Turbulence Flow asymmetry Electronics temperature Totalizer 1 Totalizer 2 Totalizer 3	Volume flow
Assign flow direction check	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Flow direction check option is selected in the Switch output function parameter.</li> </ul>	Select process variable for flow direction monitoring.	<ul> <li>Off</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Mass flow</li> <li>Flow velocity</li> <li>Energy flow</li> </ul>	Volume flow
Assign status	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Status option is selected in the Switch output function parameter.</li> </ul>	Select the device function for which to report the status. If the function is triggered, the output is closed and conductive (standard configuration).	<ul> <li>Off</li> <li>Low flow cut off</li> <li>Product identification *</li> </ul>	Low flow cut off
Switch-on value	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Limit option is selected in the Switch output function parameter.</li> </ul>	Enter limit value for switch-on point (process variable > switch-on value = closed, conductive).	Signed floating-point number	Depends on country

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch-off value	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Limit option is selected in the Switch output function parameter.</li> </ul>	Enter limit value for switch-off point (process variable < switch-off value = open, nonconductive).	Signed floating-point number	Depends on country
Switch-on delay	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Limit option is selected in the Switch output function parameter.</li> </ul>	Enter a delay before the output is switched on.	0.0 to 100.0 s	0.0 s
Switch-off delay	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Limit option is selected in the Switch output function parameter.</li> </ul>	Enter a delay before the output is switched off.	0.0 to 100.0 s	0.0 s
Failure mode	-	Select output behavior in the event of a device alarm.	<ul><li>Actual status</li><li>Open</li><li>Closed</li></ul>	Open
Invert output signal	-	Invert the output signal.	■ No ■ Yes	No

Visibility depends on order options or device settings

# 10.4.9 Configuring the relay output

The **Relay output** wizard guides the user systematically through all the parameters that have to be set for configuring the relay output.

### Navigation

"Setup" menu  $\rightarrow$  Relay output 1 to n

▶ Relay output 1 to n	
Terminal number	→ 🖺 93
Relay output function	→ 🖺 93
Assign flow direction check	→ 🖺 93
Assign limit	→ 🗎 93
Assign diagnostic behavior	→ 🖺 94
Assign status	→ 🖺 94
Switch-off value	→ 🖺 94
Switch-off delay	→ 🖺 94

Switch-on value	→ 🖺 94
Switch-on delay	→ 🖺 94
Failure mode	→ 🗎 94
Switch state	→ 🖺 94
Powerless relay status	→ 🗎 94

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the relay output module.	<ul><li>Not used</li><li>24-25 (I/O 2)</li><li>22-23 (I/O 3)</li></ul>	-
Relay output function	-	Select the function for the relay output.	<ul> <li>Closed</li> <li>Open</li> <li>Diagnostic behavior</li> <li>Limit</li> <li>Flow direction check</li> <li>Status</li> </ul>	Closed
Assign flow direction check	The Flow direction check option is selected in the Relay output function parameter.	Select process variable for flow direction monitoring.	<ul> <li>Off</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Mass flow</li> <li>Flow velocity</li> <li>Energy flow</li> </ul>	Volume flow
Assign limit	The <b>Limit</b> option is selected in the <b>Relay output function</b> parameter.	Select the variable to monitor in case the specified limit value is exceeded. If a limit value is exceeded, the output is switched on (conductive).	<ul> <li>Off</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Mass flow</li> <li>Flow velocity</li> <li>Sound velocity</li> <li>Temperature*</li> <li>Pressure*</li> <li>Methane fraction*</li> <li>Molar mass*</li> <li>Density</li> <li>Dynamic viscosity*</li> <li>Calorific value*</li> <li>Wobbe index*</li> <li>Energy flow</li> <li>Signal strength*</li> <li>Signal strength*</li> <li>Signal to noise ratio*</li> <li>Acceptance rate*</li> <li>Turbulence*</li> <li>Flow asymmetry*</li> <li>Electronics temperature</li> <li>Totalizer 1</li> <li>Totalizer 3</li> </ul>	Volume flow

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Assign diagnostic behavior	In the <b>Relay output function</b> parameter, the <b>Diagnostic behavior</b> option is selected.	The output is switched on (closed, conductive), if there is a pending diagnostic event of the assigned behavioral category.	<ul><li> Alarm</li><li> Alarm or warning</li><li> Warning</li></ul>	Alarm
Assign status	In the <b>Relay output function</b> parameter, the <b>Digital Output</b> option is selected.	Select the device function for which to display the status. If the switch on point is reached, the output is switched on (closed, conductive).	<ul> <li>Off</li> <li>Low flow cut off</li> <li>Product identification *</li> </ul>	Off
Switch-off value	The <b>Limit</b> option is selected in the <b>Relay output function</b> parameter.	Enter limit value for switch-off point (process variable < switch-off value = open, nonconductive).	Signed floating-point number	0 m <sup>3</sup> /h
Switch-off delay	In the <b>Relay output function</b> parameter, the <b>Limit</b> option is selected.	Enter a delay before the output is switched off.	0.0 to 100.0 s	0.0 s
Switch-on value	The <b>Limit</b> option is selected in the <b>Relay output function</b> parameter.	Enter measured value for the switch-on point.	Signed floating-point number	0 m <sup>3</sup> /h
Switch-on delay	In the <b>Relay output function</b> parameter, the <b>Limit</b> option is selected.	Enter a delay before the output is switched on.	0.0 to 100.0 s	0.0 s
Failure mode	-	Select output behavior in the event of a device alarm.	<ul><li>Actual status</li><li>Open</li><li>Closed</li></ul>	Open
Switch state	-	Indicates the current switch state of the output.	<ul><li>Open</li><li>Closed</li></ul>	-
Powerless relay status	-	Select quiescent state for relay.	<ul><li>Open</li><li>Closed</li></ul>	Open

Visibility depends on order options or device settings

# 10.4.10 Configuring the double pulse output

The **Double pulse output** submenu guides the user systematically through all the parameters that have to be set for configuring the double pulse output.

## Navigation

"Setup" menu  $\rightarrow$  Double pulse output

► Double pulse output	
Signal mode	→ 🖺 95
Master terminal number	→ 🖺 95
Assign pulse output	→ 🖺 95
Measuring mode	→ 🖺 95
Value per pulse	→ 🖺 95

Pulse width	→ 🖺 95
Failure mode	→ 🖺 95
Invert output signal	→ 🖺 95

Parameter	Description	Selection / User interface / User entry	Factory setting
Signal mode	Select the signal mode for the double pulse output.	<ul> <li>Passive</li> <li>Active*</li> <li>Passive NE</li> </ul>	Passive
Master terminal number	Shows the terminal numbers used by the master of the double pulse output module.	<ul><li>Not used</li><li>24-25 (I/O 2)</li><li>22-23 (I/O 3)</li></ul>	-
Assign pulse output	Select process variable for pulse output.	<ul><li>Off</li><li>Volume flow</li><li>Corrected volume flow</li><li>Mass flow</li><li>Energy flow</li></ul>	Off
Measuring mode	Select measuring mode for pulse output.	<ul> <li>Forward flow</li> <li>Forward/Reverse flow</li> <li>Reverse flow</li> <li>Reverse flow compensation</li> </ul>	Forward flow
Value per pulse	Enter measured value at which a pulse is output.	Signed floating-point number	Depends on country and nominal diameter
Pulse width	Define time width of the output pulse.	0.5 to 2 000 ms	0.5 ms
Failure mode	Select output behavior in the event of a device alarm.	<ul><li>Actual value</li><li>No pulses</li></ul>	No pulses
Invert output signal	Invert the output signal.	No Yes	No


Visibility depends on order options or device settings

### 10.4.11 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can configured for configuring the local display.

#### Navigation

"Setup" menu  $\rightarrow$  Display

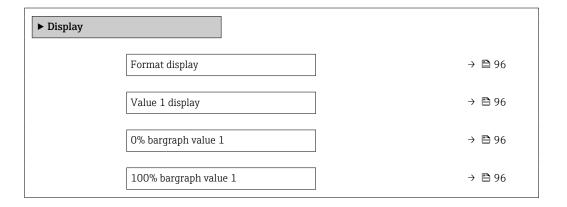

Value 2 display	→ 🖺 96
Value 3 display	→ 🖺 97
0% bargraph value 3	→ 🖺 97
100% bargraph value 3	→ 🖺 97
Value 4 display	→ 🖺 97

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul> <li>1 value, max. size</li> <li>1 bargraph + 1 value</li> <li>2 values</li> <li>1 value large + 2 values</li> <li>4 values</li> </ul>	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	Mass flow Flow velocity Sound velocity Volume flow Corrected volume flow Density Dynamic viscosity Calorific value Wobbe index Energy flow Signal strength Signal to noise ratio Acceptance rate Turbulence Flow asymmetry Electronics temperature Temperature Temperature Temperature Totalizer 1 Totalizer 2 Totalizer 3 Current output 1 Current output 3 Current output 4	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0 % value for bar graph display.	Signed floating-point number	Country-specific
100% bargraph value 1	A local display is provided.	Enter 100 % value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→   96)	None


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→ 🖺 96)	None
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0 % value for bar graph display.	Signed floating-point number	Country-specific
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100 % value for bar graph display.	Signed floating-point number	0
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see  Value 1 display  parameter (→ 🗎 96)	None
Value 5 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→ 🖺 96)	None
Value 6 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see  Value 1 display  parameter (→ 🖺 96)	None
Value 7 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→ 🖺 96)	None
Value 8 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→ 🗎 96)	None

<sup>\*</sup> Visibility depends on order options or device settings

# 10.4.12 Configuring the low flow cut off

The **Low flow cut off** wizard systematically guides the user through all the parameters that must be set to configure low flow cut off.


#### Structure of the wizard

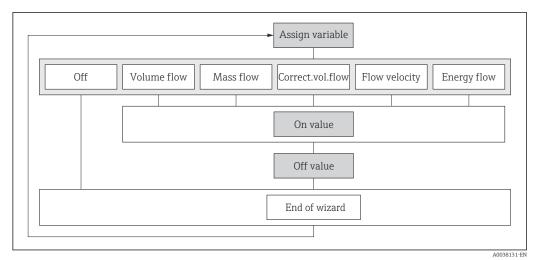

■ 31 "Low flow cutoff" wizard in the "Setup" menu

#### Navigation

"Setup" menu  $\rightarrow$  Low flow cut off

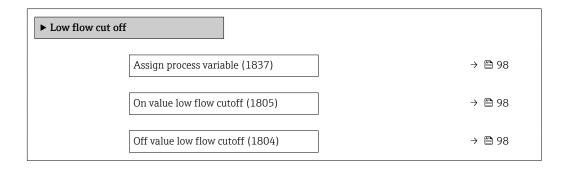

### Parameter overview with brief description


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	-	Select process variable for low flow cut off.	<ul> <li>Off</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Mass flow</li> <li>Flow velocity</li> <li>Energy flow</li> </ul>	Off
On value low flow cutoff	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \implies 98$ ).	Enter on value for low flow cut off.	Positive floating- point number	Depends on country and nominal diameter
Off value low flow cutoff	A process variable is selected in the <b>Assign process variable</b> parameter (→ 🖺 98).	Enter off value for low flow cut off.	0 to 100.0 %	50 %

# 10.4.13 Gas analysis configuration

The **"Gas analysis" wizard** guides the user systematically through all the parameters that have to be set for configuring the gas analysis.

#### **Navigation**

"Setup" menu → Gas analysis

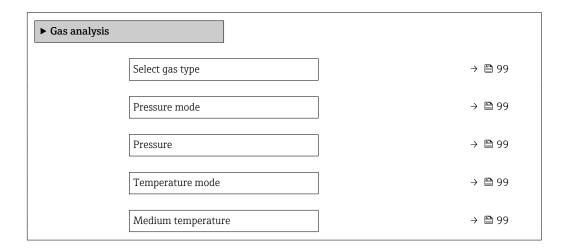

Reference density	→ 🖺 99
Calorific value	→ 🖺 99


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Select gas type	-	Select measured gas type.	<ul> <li>Single gas *</li> <li>Gas mixture *</li> <li>Coal gas/biogas *</li> <li>Natural gas - standardized calculation *</li> <li>Natural gas - using sound velocity *</li> <li>User-specific gas</li> </ul>	User-specific gas
Pressure compensation	-	Select pressure compensation type.	<ul> <li>Fixed value</li> <li>External value*</li> <li>Internal measured value*</li> <li>Current input 1*</li> <li>Current input 2*</li> <li>Current input 3*</li> </ul>	Fixed value
Fixed value	The <b>Fixed value</b> option is selected in <b>Pressure</b> compensation parameter.	Enter a fixed value for the process pressure.  The pressure is 0 bar(g) = 1.01325 bar under standard conditions.	0 to 250 bar	5 bar
Temperature compensation	The <b>Calculated value</b> option is selected in the <b>Density source</b> parameter.	Select temperature mode for temperature compensation.	<ul> <li>Fixed value</li> <li>Internal measured value*</li> <li>External value *</li> <li>Current input 1*</li> <li>Current input 2*</li> <li>Current input 3*</li> </ul>	Fixed value
Fixed value	The <b>Fixed value</b> option is selected in <b>Temperature compensation</b> parameter.	Enter a fixed value for the process temperature.	−50 to 550 °C	20℃
Reference density	-	Enter fixed value for reference density.	0.01 to 100 kg/m <sup>3</sup>	1 kg/m³
Calorific value	-	Enter gross calorific value to calculate the energy flow.	0 to 1000 MJ/Nm <sup>3</sup>	40 MJ/Nm³

 $<sup>^{\</sup>star}$  Visibility depends on order options or device settings

# 10.5 Advanced settings

The **Advanced setup** submenu with its submenus contains parameters for specific settings.

Navigation to the "Advanced setup" submenu

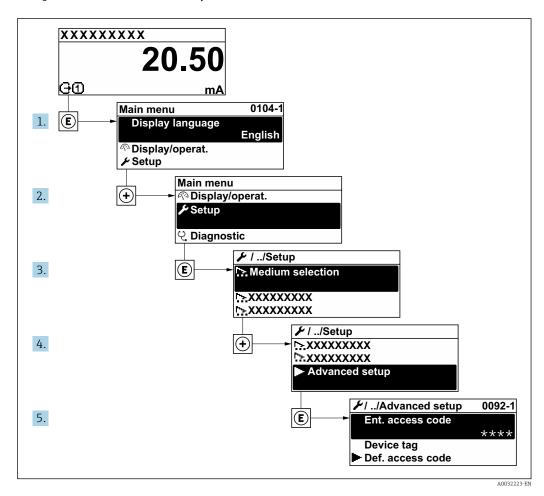

The number of submenus and parameters can vary depending on the device version. Certain submenus and parameters in these submenus are not described in the Operating Instructions. Instead a description is provided in the Special Documentation for the device ("Supplementary documentation").

#### **Navigation**

"Setup" menu → Advanced setup

► Advanced setup	
Enter access code	→ 🗎 101
► Sensor adjustment	→ 🖺 101
► Totalizer 1 to n	→ 🖺 101
► Display	→ 🖺 103

► WLAN settings	→ 🖺 106
► Configuration backup	→ 🖺 108
► Administration	→ 🖺 109

### 10.5.1 Using the parameter to enter the access code

### Navigation

"Setup" menu → Advanced setup

#### Parameter overview with brief description

Parameter	Description	User entry
Enter access code		Max. 16-digit character string comprising numbers, letters and special characters

### 10.5.2 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

#### Navigation

"Setup" menu → Advanced setup → Sensor adjustment



#### Parameter overview with brief description


Parameter	Description	Selection	Factory setting
Installation direction	Select sign of flow direction.	<ul><li>Forward flow</li><li>Reverse flow</li></ul>	Forward flow

### 10.5.3 Configuring the totalizer

In the "Totalizer 1 to n" submenu the individual totalizer can be configured.

### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Totalizer 1 to n

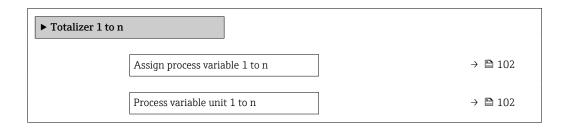

Totalizer 1 to n operation mode  $\rightarrow \ \ \, \implies \ \, 102$   $\ \, \rightarrow \ \ \, \implies \ \, 102$   $\ \, \rightarrow \ \, \implies \ \, 102$ 

## Parameter overview with brief description


Parameter	Prerequisite	Description	Selection	Factory setting
Assign process variable 1 to n	-	Select process variable for totalizer.	<ul> <li>Off</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Mass flow</li> <li>Energy flow</li> </ul>	Volume flow
Process variable unit 1 to n	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$	Select the unit for the process variable of the totalizer.	Unit choose list	Depends on country:  • m³  • ft³
Totalizer 1 to n operation mode	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \cong 102$ ) of the <b>Totalizer 1 to n</b> submenu.	Select totalizer operation mode, e.g. only totalize forward flow or only totalize reverse flow.	<ul><li>Net</li><li>Forward</li><li>Reverse</li></ul>	Net
Totalizer 1 to n failure behavior	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \cong 102$ ) of the <b>Totalizer 1 to n</b> submenu.	Select totalizer behavior in the event of a device alarm.	<ul><li>Hold</li><li>Continue</li><li>Last valid value + continue</li></ul>	Hold

# 10.5.4 Carrying out additional display configurations

In the **Display** submenu you can set all the parameters associated with the configuration of the local display.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Display

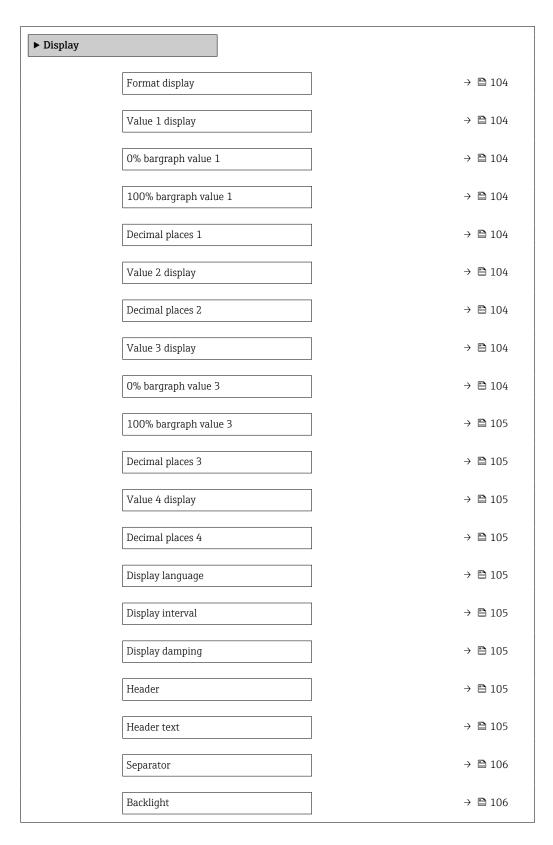

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul> <li>1 value, max. size</li> <li>1 bargraph + 1 value</li> <li>2 values</li> <li>1 value large + 2 values</li> <li>4 values</li> </ul>	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	Mass flow Flow velocity Sound velocity Volume flow Corrected volume flow Density Dynamic viscosity Calorific value Wobbe index Energy flow Signal strength Signal to noise ratio Acceptance rate Turbulence Flow asymmetry Electronics temperature Temperature Temperature Pressure Methane fraction Molar mass Totalizer 1 Totalizer 2 Totalizer 3 Current output 1 Current output 3 Current output 4	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0 % value for bar graph display.	Signed floating-point number	Country-specific
100% bargraph value 1	A local display is provided.	Enter 100 % value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the <b>Value 1 display</b> parameter.	Select the number of decimal places for the display value.	• X • X.X • X.XX • X.XXX • X.XXX	x.xx
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→ 🗎 96)	None
Decimal places 2	A measured value is specified in the <b>Value 2 display</b> parameter.	Select the number of decimal places for the display value.	X     X.X     X.XX     X.XXX     X.XXX	x.xx
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see <b>Value 1 display</b> parameter (→ 🖺 96)	None
0% bargraph value 3	A selection was made in the <b>Value 3 display</b> parameter.	Enter 0 % value for bar graph display.	Signed floating-point number	Country-specific

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
100% bargraph value 3	A selection was made in the <b>Value 3 display</b> parameter.	Enter 100 % value for bar graph display.	Signed floating-point number	0
Decimal places 3	A measured value is specified in the <b>Value 3 display</b> parameter.	Select the number of decimal places for the display value.	<ul><li>X</li><li>X.X</li><li>X.XX</li><li>X.XXX</li><li>X.XXXX</li></ul>	x.xx
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see Value 1 display parameter (→ 🗎 96)	None
Decimal places 4	A measured value is specified in the <b>Value 4 display</b> parameter.	Select the number of decimal places for the display value.	<ul><li>X</li><li>X.X</li><li>X.XX</li><li>X.XXX</li><li>X.XXXX</li></ul>	x.xx
Display language	A local display is provided.	Set display language.	<ul> <li>English</li> <li>Deutsch</li> <li>Français</li> <li>Español</li> <li>Italiano</li> <li>Nederlands</li> <li>Portuguesa</li> <li>Polski</li> <li>русский язык (Russian)</li> <li>Svenska</li> <li>Türkçe</li> <li>中文 (Chinese)</li> <li>日本語 (Japanese)</li> <li>한국어 (Korean)</li> <li>tiếng Việt (Vietnamese)</li> <li>čeština (Czech)</li> </ul>	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	A local display is provided.	Select header contents on local display.	<ul><li>Device tag</li><li>Free text</li></ul>	Device tag
Header text	The <b>Free text</b> option is selected in the <b>Header</b> parameter.	Enter display header text.	Max. 12 characters, such as letters, numbers or special characters (e.g. @, %, /)	

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	<ul><li>. (point)</li><li>, (comma)</li></ul>	. (point)
Backlight	One of the following conditions is met:  Order code for "Display; operation", option F "4-line, illum.; touch control"  Order code for "Display; operation", option G "4-line, illum.; touch control +WLAN"  Order code for "Display; operation", option O "Remote display 4-line illuminated; 10m/30ft cable; touch control"	Switch the local display backlight on and off.	■ Disable ■ Enable	Enable

<sup>\*</sup> Visibility depends on order options or device settings

# 10.5.5 WLAN configuration

The  $WLAN\ Settings$  submenu guides the user systematically through all the parameters that have to be set for the  $WLAN\ configuration$ .

#### **Navigation**

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  WLAN settings

► WLAN settings			
	WLAN	<del>)</del>	107
	WLAN mode	<del>.)</del>	107
	SSID name	<del>)</del>	₽ 107
	Network security	<del>)</del>	107
	Security identification	<del>)</del>	107
	User name	<del>)</del>	107
	WLAN password	<del>.)</del>	107
	WLAN IP address	<del>)</del>	107
	WLAN MAC address	<del>.)</del>	₽ 🗎 107
	WLAN passphrase	<del>)</del>	₽ 🖺 107
	Assign SSID name	<del>)</del>	107
	SSID name	<del>)</del>	₽ 107
	WLAN password  WLAN IP address  WLAN MAC address  WLAN passphrase  Assign SSID name	÷	107 107 107 107 107

106

Connection state	→ 🖺 108
Received signal strength	→ 🖺 108

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
WLAN	-	Switch WLAN on and off.	<ul><li>Disable</li><li>Enable</li></ul>	Enable
WLAN mode	-	Select WLAN mode.	<ul><li>WLAN access point</li><li>WLAN Client</li></ul>	WLAN access point
SSID name	The client is activated.	Enter the user-defined SSID name (max. 32 characters).	-	-
Network security	-	Select the security type of the WLAN network.	<ul> <li>Unsecured</li> <li>WPA2-PSK</li> <li>EAP-PEAP with MSCHAPv2*</li> <li>EAP-PEAP MSCHAPv2 no server authentic.*</li> <li>EAP-TLS*</li> </ul>	WPA2-PSK
Security identification	-	Select security settings and download these settings via menu Data management > Security > WLAN.	<ul><li>Trusted issuer certificate</li><li>Device certificate</li><li>Device private key</li></ul>	-
User name	-	Enter user name.	_	-
WLAN password	-	Enter WLAN password.	-	-
WLAN IP address	-	Enter IP address of the WLAN interface of the device.	4 octet: 0 to 255 (in the particular octet)	192.168.1.212
WLAN MAC address	-	Enter MAC address of the WLAN interface of the device.	Unique 12-digit character string comprising letters and numbers	Each measuring device is given an individual address.
WLAN passphrase	The <b>WPA2-PSK</b> option is selected in the <b>Security type</b> parameter.	Enter the network key (8 to 32 characters).  The network key supplied with the device should be changed during commissioning for security reasons.	8 to 32-digit character string comprising numbers, letters and special characters (without spaces)	Serial number of the measuring device (e.g. L100A802000)
Assign SSID name	-	Select which name will be used for SSID: device tag or user-defined name.	<ul><li>Device tag</li><li>User-defined</li></ul>	User-defined
SSID name	<ul> <li>The User-defined option is selected in the Assign SSID name parameter.</li> <li>The WLAN access point option is selected in the WLAN mode parameter.</li> </ul>	Enter the user-defined SSID name (max. 32 characters).  The user-defined SSID name may only be assigned once. If the SSID name is assigned more than once, the devices can interfere with one another.	Max. 32-digit character string comprising numbers, letters and special characters	EH_device designation_last 7 digits of the serial number (e.g. EH_Prosonic_Flow_3 00_A802000)

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Connection state	-	Displays the connection status.	<ul><li>Connected</li><li>Not connected</li></ul>	Not connected
Received signal strength	-	Shows the received signal strength.	<ul><li>Low</li><li>Medium</li><li>High</li></ul>	High


Visibility depends on order options or device settings

# 10.5.6 Configuration management

After commissioning, you can save the current device configurationor restore the previous device configuration. The device configuration is managed via the **Configuration management** parameter.

#### Navigation

"Setup" menu → Advanced setup → Configuration backup

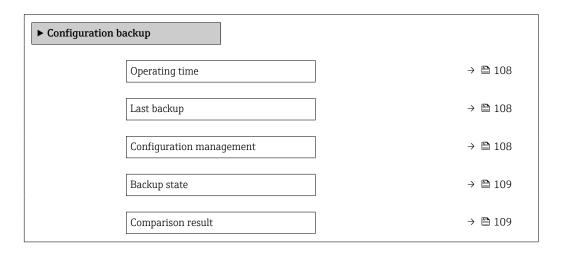

### Parameter overview with brief description

Parameter	Description	User interface / Selection	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	-
Last backup	Shows when the last data backup was saved to HistoROM backup.	Days (d), hours (h), minutes (m) and seconds (s)	-
Configuration management	Select action for managing the device data in the HistoROM backup.	<ul> <li>Cancel</li> <li>Execute backup</li> <li>Restore *</li> <li>Compare *</li> <li>Clear backup data</li> </ul>	Cancel

Parameter	Description	User interface / Selection	Factory setting
Backup state	Shows the current status of data saving or restoring.	<ul> <li>None</li> <li>Backup in progress</li> <li>Restoring in progress</li> <li>Delete in progress</li> <li>Compare in progress</li> <li>Restoring failed</li> <li>Backup failed</li> </ul>	None
Comparison result	Comparison of current device data with HistoROM backup.	<ul> <li>Settings identical</li> <li>Settings not identical</li> <li>No backup available</li> <li>Backup settings corrupt</li> <li>Check not done</li> <li>Dataset incompatible</li> </ul>	Check not done

<sup>\*</sup> Visibility depends on order options or device settings

#### Function scope of the "Configuration management" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Execute backup	A backup copy of the current device configuration is saved from the HistoROM backup to the memory of the device. The backup copy includes the transmitter data of the device.
Restore	The last backup copy of the device configuration is restored from the device memory to the device's HistoROM backup. The backup copy includes the transmitter data of the device.
Compare	The device configuration saved in the device memory is compared with the current device configuration of the HistoROM backup.
Clear backup data	The backup copy of the device configuration is deleted from the memory of the device.


- HistoROM backup
  - A HistoROM is a "non-volatile" device memory in the form of an EEPROM.
- While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

#### 10.5.7 Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Administration

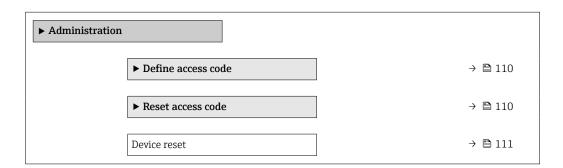


#### Using the parameter to define the access code

Complete this wizard to specify an access code for the Maintenance role.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define access code

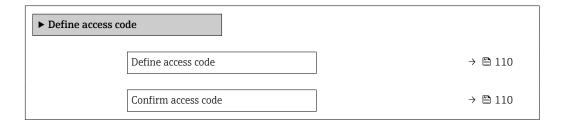


#### Parameter overview with brief description

Parameter	Description	User entry
Define access code	1 1	Max. 16-digit character string comprising numbers, letters and special characters
Confirm access code		Max. 16-digit character string comprising numbers, letters and special characters

#### Using the parameter to reset the access code

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Reset access code

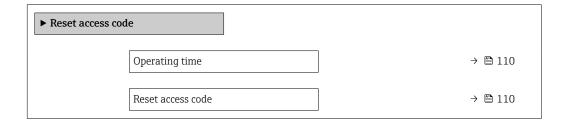

#### Parameter overview with brief description

Parameter	Description	User interface / User entry	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	-
Reset access code	Enter the code provided by Endress+Hauser Technical Support to reset the Maintenance code.  For a reset code, contact your Endress+Hauser service organization.  The reset code can only be entered via:  Web browser  DeviceCare, FieldCare (via CDI-RJ45 service interface)  Fieldbus	Character string comprising numbers, letters and special characters	0x00

#### Using the parameter to reset the device

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Administration

#### Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	<ul> <li>Cancel</li> <li>To delivery settings</li> <li>Restart device</li> <li>Restore S-DAT backup *</li> </ul>	Cancel

Visibility depends on order options or device settings

#### 10.6 Simulation

Via the **Simulation** submenu, it is possible to simulate various process variables in the process and the device alarm mode and verify downstream signal chains (switching valves or closed-control loops). The simulation can be performed without a real measurement (no flow of medium through the device).

#### Navigation

"Diagnostics" menu  $\rightarrow$  Simulation

<b>▶</b> Simulation		
	Assign simulation process variable	→ 🖺 112
	Process variable value	→ 🖺 112
	Current input 1 to n simulation	→ 🗎 113
	Value current input 1 to n	→ 🖺 113
	Status input 1 to n simulation	→ 🖺 113
	Input signal level 1 to n	→ 🖺 113
	Current output 1 to n simulation	→ 🖺 112
	Current output value	→ 🖺 112
	Frequency output 1 to n simulation	→ 🖺 112
	Frequency output 1 to n value	→ 🖺 112
	Pulse output simulation 1 to n	→ 🖺 113
	Pulse value 1 to n	→ 🖺 113

Switch output simulation 1 to n	→ 🖺 113
Switch state 1 to n	→ 🖺 113
Relay output 1 to n simulation	→ 🖺 113
Switch state 1 to n	→ 🗎 113
Pulse output simulation	→ 🖺 113
Pulse value	→ 🖺 113
Device alarm simulation	→ 🖺 113
Diagnostic event category	→ 🖺 113
Diagnostic event simulation	→ 🖺 113

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign simulation process variable	_	Select a process variable for the simulation process that is activated.	Off Volume flow Corrected volume flow Mass flow Flow velocity Sound velocity Temperature* Pressure* Methane fraction * Molar mass* Density Dynamic viscosity * Calorific value* Wobbe index* Energy flow	Off
Process variable value	A process variable is selected in the <b>Assign simulation process variable</b> parameter (→ 🖺 112).	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Current output 1 to n simulation	-	Switch the simulation of the current output on and off.	Off On	Off
Current output value	In the <b>Current output 1 to n simulation</b> parameter, the <b>On</b> option is selected.	Enter the current value for simulation.	3.59 to 22.5 mA	3.59 mA
Frequency output 1 to n simulation	In the <b>Operating mode</b> parameter, the <b>Frequency</b> option is selected.	Switch the simulation of the frequency output on and off.	• Off • On	Off
Frequency output 1 to n value	In the <b>Frequency simulation 1 to n</b> parameter, the <b>On</b> option is selected.	Enter the frequency value for the simulation.	0.0 to 12 500.0 Hz	0.0 Hz

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Pulse output simulation 1 to n	In the <b>Operating mode</b> parameter, the <b>Pulse</b> option is selected.	Set and switch off the pulse output simulation.  For Fixed value option: Pulse width parameter (→ 🖺 87) defines the pulse width of the pulses output.	<ul><li>Off</li><li>Fixed value</li><li>Down-counting value</li></ul>	Off
Pulse value 1 to n	In the <b>Pulse output simulation 1 to n</b> parameter, the <b>Down-counting value</b> option is selected.	Enter the number of pulses for simulation.	0 to 65 535	0
Switch output simulation 1 to n	In the <b>Operating mode</b> parameter, the <b>Switch</b> option is selected.	Switch the simulation of the switch output on and off.	• Off • On	Off
Switch state 1 to n	-	Select the status of the status output for the simulation.	<ul><li>Open</li><li>Closed</li></ul>	Open
Relay output 1 to n simulation	-	Switch simulation of the relay output on and off.	Off On	Off
Switch state 1 to n	The <b>On</b> option is selected in the <b>Switch output simulation 1 to n</b> parameter parameter.	Select status of the relay output for the simulation.	<ul><li>Open</li><li>Closed</li></ul>	Open
Pulse output simulation	_	Set and switch off the pulse output simulation.  For Fixed value option: Pulse width parameter defines the pulse width of the pulses output.	<ul><li>Off</li><li>Fixed value</li><li>Down-counting value</li></ul>	Off
Pulse value	In the <b>Pulse output simulation</b> parameter, the <b>Down-counting value</b> option is selected.	Set and switch off the pulse output simulation.	0 to 65 535	0
Device alarm simulation	-	Switch the device alarm on and off.	Off On	Off
Diagnostic event category	-	Select a diagnostic event category.	<ul><li>Sensor</li><li>Electronics</li><li>Configuration</li><li>Process</li></ul>	Process
Diagnostic event simulation	-	Select a diagnostic event to simulate this event.	<ul> <li>Off</li> <li>Diagnostic event picklist (depends on the category selected)</li> </ul>	Off
Current input 1 to n simulation	-	Switch simulation of the current input on and off.	Off On	Off
Value current input 1 to n	In the <b>Current input 1 to n simulation</b> parameter, the <b>On</b> option is selected.	Enter the current value for simulation.	0 to 22.5 mA	0 mA
Status input 1 to n simulation	-	Switch simulation of the status input on and off.	Off On	Off
Input signal level 1 to n	In the <b>Status input simulation</b> parameter, the <b>On</b> option is selected.	Select the signal level for the simulation of the status input.	■ High ■ Low	High

<sup>\*</sup> Visibility depends on order options or device settings

## 10.7 Protecting settings from unauthorized access

The following write protection options exist in order to protect the configuration of the measuring device from unintentional modification:

- Protect access to parameters via access code → 114

#### 10.7.1 Write protection via access code

The effects of the user-specific access code are as follows:


- Via local operation, the parameters for the measuring device configuration are writeprotected and their values can no longer be changed.
- Device access is protected via the Web browser, as are the parameters for the measuring device configuration.
- Device access is protected via FieldCare or DeviceCare (via CDI-RJ45 service interface), as are the parameters for the measuring device configuration.

#### Defining the access code via the local display

- 1. Navigate to the **Define access code** parameter ( $\Rightarrow \triangleq 110$ ).
- 2. Maximum of 16-digit character string comprising numbers, letters and special characters as the access code.
- 3. Enter the access code again in the **Confirm access code** parameter ( $\rightarrow \implies 110$ ) to confirm.
  - ► The 🗈 symbol appears in front of all write-protected parameters.
- Disabling parameter write protection via access code  $\rightarrow$   $\stackrel{\triangle}{=}$  57.
  - If the access code is lost: Resetting the access code  $\rightarrow \triangleq 115$ .
  - The user role with which the user is currently logged in is displayed in **Access** status parameter.
    - Navigation path: Operation → Access status
    - User roles and their access rights  $\rightarrow \triangleq 57$
- The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view.
- The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.

#### Parameters which can always be modified via the local display

Certain parameters that do not affect the measurement are excepted from parameter write protection via the local display. Despite the user-specific access code, they can always be modified, even if the other parameters are locked.

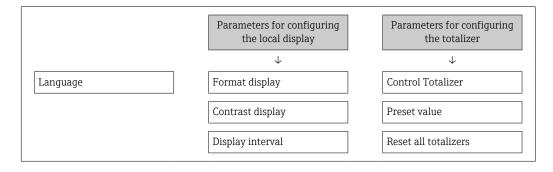

#### Defining the access code via the web browser

1. Navigate to the **Define access code** parameter ( $\rightarrow \implies 110$ ).

- 2. Define a 16-digit (max.) numeric code as the access code.
- 3. Enter the access code again in the **Confirm access code** parameter ( $\rightarrow \implies 110$ ) to confirm.
  - ► The web browser switches to the login page.
- $\blacksquare$  Disabling parameter write protection via access code  $\rightarrow$   $\blacksquare$  57.

  - The Access status parameter shows which user role the user is currently logged in with.
    - Navigation path: Operation → Access status
    - User roles and their access rights  $\rightarrow \triangleq 57$

If no action is performed for 10 minutes, the web browser automatically returns to the login page.

#### Resetting the access code

If you misplace the user-specific access code, it is possible to reset the code to the factory setting. A reset code must be entered for this purpose. The user-specific access code can then be defined again afterwards.

Via Web browser, FieldCare, DeviceCare (via CDI-RJ45 service interface), fieldbus


- You can only obtain a reset code from your local Endress+Hauser service organization. The code must be calculated explicitly for every device.
- 1. Note down the serial number of the device.
- 2. Read off the **Operating time** parameter.
- 3. Contact the local Endress+Hauser service organization and tell them the serial number and the operating time.
  - Get the calculated reset code.
- 4. Enter the reset code in the **Reset access code** parameter ( $\rightarrow \triangleq 110$ ).
  - The access code has been reset to the factory setting **0000**. It can be redefined  $\rightarrow \boxminus 114$ .
- For IT security reasons, the calculated reset code is only valid for 96 hours from the specified operating time and for the specific serial number. If you cannot return to the device within 96 hours, you should either increase the operating time you read out by a few days or switch off the device.

#### 10.7.2 Write protection via write protection switch


Unlike parameter write protection via a user-specific access code, this allows the user to lock write access to the entire operating menu - apart from the **"Contrast display"** parameter.

The parameter values are now read only and cannot be edited any more (exception "Contrast display" parameter):

- Via local display
- Via MODBUS RS485 protocol

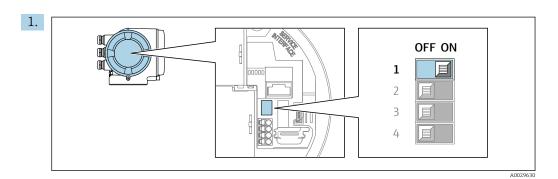

Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection.

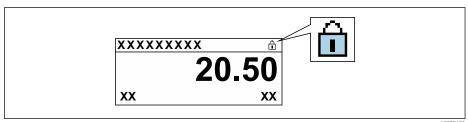

A002942

- 2. Setting the write protection (WP) switch on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.

#### 11 **Operation**

#### 11.1 Reading off the device locking status

Device active write protection: Locking status parameter

Operation → Locking status

Function scope of the "Locking status" parameter

Options	Description
None	The access authorization displayed in the <b>Access status</b> parameter applies → 🖺 57. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool) $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset, etc.). Once the internal processing has been completed, the parameters can be changed once again.

#### Adjusting the operating language 11.2



Petailed information:

- To configure the operating language → 🗎 75
- For information on the operating languages supported by the measuring device → 🖺 178

#### 11.3 Configuring the display

Detailed information:


- On the advanced settings for the local display  $\rightarrow \implies 103$

#### 11.4 Reading off measured values

With the **Measured values** submenu, it is possible to read all the measured values.

#### **Navigation**

"Diagnostics" menu → Measured values

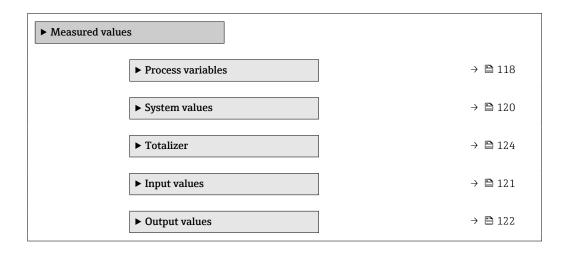


#### 11.4.1 Process variables

The **Process variables** submenu contains all the parameters needed to display the current measured values for each process variable.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Process variables

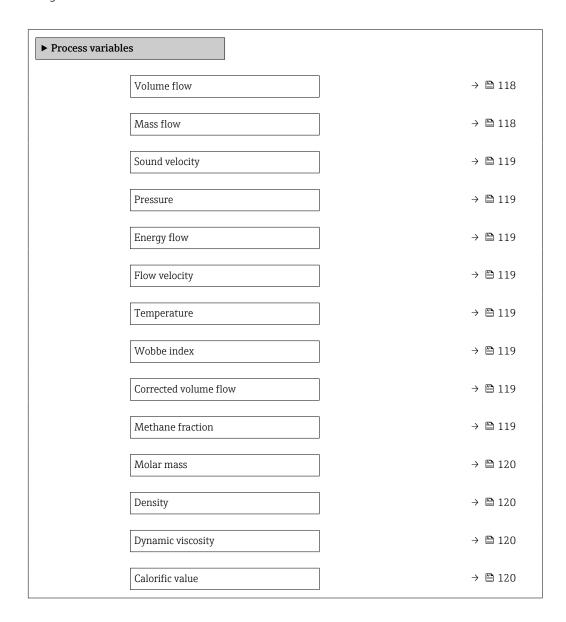

## Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Volume flow	-	Displays the volume flow that is currently measured.	Signed floating-point number
		Dependency The unit is taken from: Volume flow unit parameter (→ 🖺 78)	
Mass flow	-	Displays the mass flow that is currently calculated.	Signed floating-point number
		Dependency The unit is taken from the Mass flow unit parameter (→ 🖺 78).	

118

Parameter	Prerequisite	Description	User interface
Sound velocity	-	Displays the sound velocity that is currently measured.  Dependency The unit is taken from the Velocity unit parameter.	Signed floating-point number
Pressure	For the following order code:  "Measuring tube; Transducer; Sensor version", option AC "316L; Titanium Gr. 2; pressure + temperature measurement integrated"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the pressure that is currently measured.  Dependency The unit is taken from: Pressure unit parameter	Signed floating-point number
Energy flow	-	Displays the energy flow that is currently calculated.  Dependency The unit is taken from: Energy flow unit parameter (→ 🖺 79)	Signed floating-point number
Flow velocity	_	Displays the flow velocity that is currently measured.  Dependency The unit is taken from: Velocity unit parameter	Signed floating-point number
Temperature	For the following order codes:  "Measuring tube; Transducer; Sensor version", option AB "316L; Titanium Gr. 2; temperature measurement integrated"  "Measuring tube; Transducer; Sensor version", option AC "316L; Titanium Gr. 2; pressure + temperature measurement integrated"  The software options currently enabled are displayed in the	Displays the temperature that is currently measured.  Dependency The unit is taken from: Temperature unit parameter	Signed floating-point number
Wobbe index	Software option overview parameter.  For the following order code:	Displays the Wobbe index that is	Signed floating-point
	"Application package", option EF "Advanced gas analysis"  The software options currently enabled are displayed in the Software option overview parameter.	currently calculated.  Dependency The unit is taken from: Calorific value unit parameter (→   79)	number
Corrected volume flow	_	Displays the corrected volume flow that is currently measured.  Dependency The unit is taken from: Corrected volume flow unit parameter	Signed floating-point number
Methane fraction	For the following order code: "Application package", option EF "Advanced gas analysis"  The software options currently enabled are displayed in the Software option overview parameter.	Shows the methane fraction of the dry gas currently calculated.	Signed floating-point number


Parameter	Prerequisite	Description	User interface
Molar mass	For the following order code: "Application package", option EF "Advanced gas analysis"	Displays the molar mass in g/mol that is currently calculated.	Signed floating-point number
	The software options currently enabled are displayed in the Software option overview parameter.		
Density	-	Displays the density that is currently calculated.	Signed floating-point number
		Dependency The unit is taken from: <b>Density unit</b> parameter	
Dynamic viscosity	For the following order code:  "Application package", option EF  "Advanced gas analysis"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the dynamic viscosity that is currently calculated.  Dependency The unit is taken from the Dynamic viscosity unit parameter.	Signed floating-point number
Calorific value	For the following order code:  "Application package", option EF  "Advanced gas analysis"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the calorific value that is currently calculated.  Dependency The unit is taken from the Calorific value unit parameter.	Signed floating-point number

## 11.4.2 System values

The **System values** submenu contains all the parameters needed to display the current measured values for every system value.

## Navigation

"Diagnostics" menu → Measured values → System values

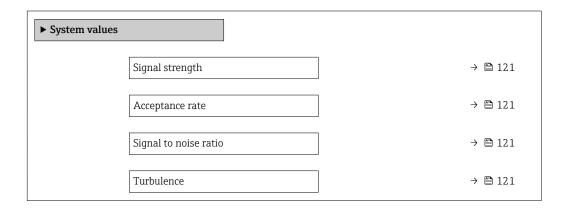

120


Parameter	Description	User interface
Signal strength	Displays the current signal strength (0 to 100 dB).  Assessment of the signal strength: <ul> <li>&lt; 10 dB: bad</li> <li>&gt; 90 dB: very good</li> </ul>	Signed floating-point number
Acceptance rate	Displays the ratio of the number of ultrasonic signals accepted for flow calculation and the total number of ultrasonic signals emitted.	0 to 100 %
Signal to noise ratio	Displays the current signal to noise ratio (0 to 100 dB).  Assessment of the signal-to-noise ratio: <ul> <li>&lt; 20 dB: bad</li> <li>&gt; 50 dB: very good</li> </ul>	Signed floating-point number
Turbulence	Displays the current turbulence.	Signed floating-point number

## 11.4.3 "Input values" submenu

The **Input values** submenu quides you systematically to the individual input values.

#### **Navigation**

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Input values

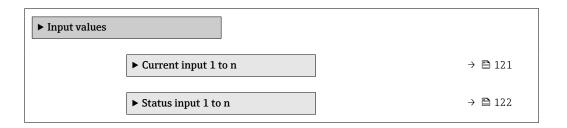


#### Input values of current input

The Current input 1 to n submenu contains all the parameters needed to display the current measured values for every current input.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Input values  $\rightarrow$  Current input 1 to n

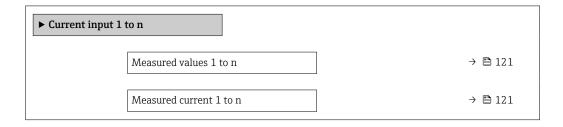

#### Parameter overview with brief description

Parameter	Description	User interface
Measured values 1 to n	Displays the current input value.	Signed floating-point number
	Dependency  The unit is taken from the <b>Pressure unit</b> parameter	
Measured current 1 to n	Displays the current value of the current input.	0 to 22.5 mA

#### Input values of status input

The **Status input 1 to n** submenu contains all the parameters needed to display the current measured values for every status input.

#### **Navigation**

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Input values  $\rightarrow$  Status input 1 to n



#### Parameter overview with brief description


Parameter	Description	User interface
Value status input	Shows the current input signal level.	■ High ■ Low

## 11.4.4 Output values

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.

#### Navigation

"Diagnostics" menu → Measured values → Output values

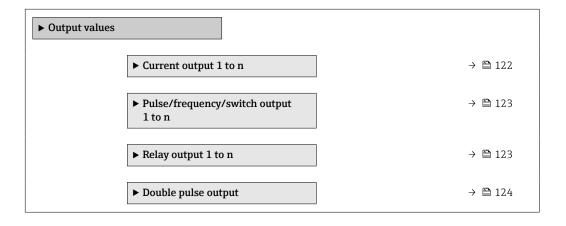


## Output values of current output

The **Value current output** submenu contains all the parameters needed to display the current measured values for every current output.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Output values  $\rightarrow$  Value current output 1 to n

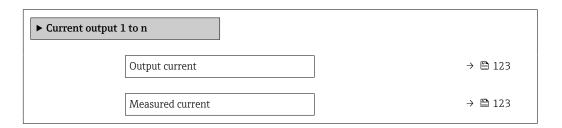

122


Parameter	Description	User interface
Output current	Displays the current value currently calculated for the current output.	3.59 to 22.5 mA
Measured current	Displays the current value currently measured for the current output.	0 to 30 mA

#### Output values for pulse/frequency/switch output

The **Pulse/frequency/switch output 1 to n** submenu contains all the parameters needed to display the current measured values for every pulse/frequency/switch output.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Output values  $\rightarrow$  Pulse/frequency/switch output 1 to n

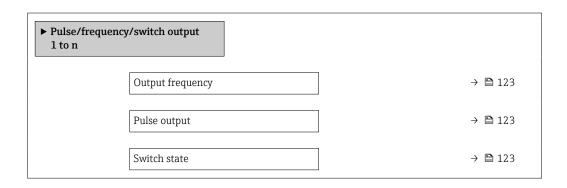

#### Parameter overview with brief description


Parameter	Prerequisite	Description	User interface
Output frequency	In the <b>Operating mode</b> parameter, the <b>Frequency</b> option is selected.	Displays the value currently measured for the frequency output.	0.0 to 12 500.0 Hz
Pulse output	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter parameter.	Displays the pulse frequency currently output.	Positive floating-point number
Switch state	The <b>Switch</b> option is selected in the <b>Operating mode</b> parameter.	Displays the current switch output status.	■ Open ■ Closed

#### Output values for relay output

The **Relay output 1 to n** submenu contains all the parameters needed to display the current measured values for every relay output.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Output values  $\rightarrow$  Relay output 1 to n

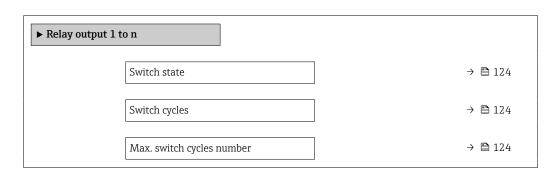

Parameter	Description	User interface
Switch state	Indicates the current switch state of the output.	<ul><li>Open</li><li>Closed</li></ul>
Switch cycles	Shows number of all performed switch cycles.	Positive integer
Max. switch cycles number	Shows the maximal number of guaranteed switch cycles.	Positive integer

#### Output values for double pulse output

The **Double pulse output** submenu contains all the parameters needed to display the current measured values for every double pulse output.

#### **Navigation**

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Output values  $\rightarrow$  Double pulse output



#### Parameter overview with brief description


Parameter	Description	User interface	
Pulse output	Shows the currently output pulse frequency.	Positive floating-point number	

#### 11.4.5 "Totalizer" submenu

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

#### **Navigation**

"Diagnostics" menu → Measured values → Totalizer

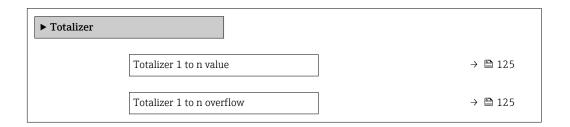

Parameter	Prerequisite	Description	User interface
Totalizer 1 to n value	One of the following options is selected in the Assign process variable parameter (→ 🖺 102) of the Totalizer 1 to n submenu:  Volume flow Corrected volume flow Mass flow Energy flow	Displays the current totalizer counter value.	Signed floating-point number
Totalizer 1 to n overflow	One of the following options is selected in the Assign process variable parameter (→ 🗎 102) of the Totalizer 1 to n submenu:  Volume flow Corrected volume flow Mass flow Energy flow	Displays the current totalizer overflow.	Integer with sign

# 11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu ( $\rightarrow$   $\stackrel{\triangle}{=}$  75)
- Advanced settings using the Advanced setup submenu (→ 🗎 100)


## 11.6 Performing a totalizer reset

The totalizers are reset in the **Operation** submenu:

- Control Totalizer
- Reset all totalizers

#### Navigation

"Operation" menu → Totalizer handling

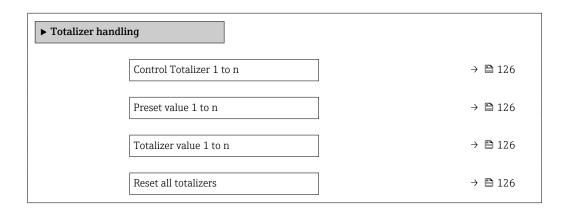

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Control Totalizer 1 to n	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \implies 102$ ) of the <b>Totalizer 1 to n</b> submenu.	Control totalizer value.	<ul> <li>Totalize</li> <li>Reset + hold</li> <li>Preset + hold</li> <li>Reset + totalize</li> <li>Preset + totalize</li> <li>Hold</li> </ul>	Totalize
Preset value 1 to n	A process variable is selected in the <b>Assign process variable</b> parameter (→ 🖺 102) of the <b>Totalizer 1 to n</b> submenu.	Specify start value for totalizer.  Dependency  The unit of the selected process variable is defined in the Unit totalizer parameter (→  102) for the totalizer.	Signed floating-point number	Depends on country:  • 0 m³  • 0 ft³
Totalizer value	One of the following options is selected in the Assign process variable parameter (→ 🖺 102) of the Totalizer 1 to n submenu:  Volume flow Corrected volume flow Mass flow Energy flow	Displays the current totalizer counter value.	Signed floating-point number	
Reset all totalizers	-	Reset all totalizers to 0 and start.	<ul><li>Cancel</li><li>Reset + totalize</li></ul>	Cancel

# 11.6.1 Function scope of "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started or continues running.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold <sup>1)</sup>	The totaling process is stopped and the totalizer is set to its defined start value from the <b>Preset value</b> parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.
Preset + totalize 1)	The totalizer is set to the defined start value in the <b>Preset value</b> parameter and the totaling process is restarted.
Hold	Totalizing is stopped.

1) Visible depending on the order options or device settings

# 11.6.2 Function range of "Reset all totalizers" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the previously aggregated flow values.

#### Displaying the measured value history 11.7


The **Extended HistoROM** application package must be enabled in the device (order option) for the Data logging submenu to appear. This contains all the parameters for the measured value history.



Pata logging is also available via:

#### Function range

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Measured value trend for each logging channel displayed in the form of a chart

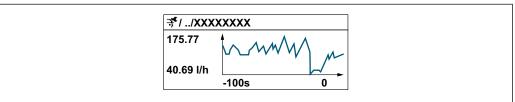

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.
- If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

"Diagnostics" menu → Data logging

▶ Data logg	ying	
	Assign channel 1	→ 🖺 128
	Assign channel 2	→ 🖺 128
	Assign channel 3	→ 🗎 128
	Assign channel 4	→ 🗎 128
	Logging interval	→ 🖺 129
	Clear logging data	→ 🖺 129
	Data logging	→ 🖺 129
	Logging delay	→ 🖺 129
	Data logging control	→ 🖺 129

Data logging status  $\rightarrow$  🗎 129

Entire logging duration  $\rightarrow$  🖺 129

## Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign channel 1	The Extended HistoROM application package is available.	Assign process variable to logging channel.	Off Volume flow Corrected volume flow Mass flow Flow velocity Sound velocity Temperature Pressure Methane fraction Molar mass Density Current output 2 Current output 3 Current output 4 Dynamic viscosity Calorific value Wobbe index Energy flow Signal strength Signal to noise ratio Acceptance rate Turbulence Flow asymmetry Electronics temperature Current output 1	Off
Assign channel 2	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see  Assign channel 1 parameter (→   128)	Off
Assign channel 3	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see Assign channel 1 parameter (→   128)	Off
Assign channel 4	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see  Assign channel 1 parameter (→   128)	Off

128

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Logging interval	The <b>Extended HistoROM</b> application package is available.	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	0.1 to 3 600.0 s	1.0 s
Clear logging data	The <b>Extended HistoROM</b> application package is available.	Clear the entire logging data.	Cancel Clear data	Cancel
Data logging	-	Select the type of data logging.	<ul><li>Overwriting</li><li>Not overwriting</li></ul>	Overwriting
Logging delay	In the <b>Data logging</b> parameter, the <b>Not overwriting</b> option is selected.	Enter the time delay for measured value logging.	0 to 999 h	0 h
Data logging control	In the <b>Data logging</b> parameter, the <b>Not overwriting</b> option is selected.	Start and stop measured value logging.	<ul><li>None</li><li>Delete + start</li><li>Stop</li></ul>	None
Data logging status	In the <b>Data logging</b> parameter, the <b>Not overwriting</b> option is selected.	Displays the measured value logging status.	<ul><li>Done</li><li>Delay active</li><li>Active</li><li>Stopped</li></ul>	Done
Entire logging duration	In the <b>Data logging</b> parameter, the <b>Not overwriting</b> option is selected.	Displays the total logging duration.	Positive floating- point number	0 s

<sup>\*</sup> Visibility depends on order options or device settings

# 12 Diagnosis and troubleshooting

# 12.1 General troubleshooting

#### For local display

Error	Possible causes	Remedial action
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display dark and no output signals	Supply voltage does not match the voltage specified on the nameplate.	Apply the correct supply voltage $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
Local display dark and no output signals	Supply voltage has incorrect polarity.	Reverse polarity of supply voltage.
Local display dark and no output signals	No contact between connecting cables and terminals.	Ensure electrical contact between the cable and the terminal.
Local display dark and no output signals	<ul> <li>Terminals are not plugged into the I/O electronics module correctly.</li> <li>Terminals are not plugged into the main electronics module correctly.</li> </ul>	Check terminals.
Local display dark and no output signals	<ul><li>I/O electronics module is defective.</li><li>Main electronics module is defective.</li></ul>	Order spare part → 🗎 152.
Local display cannot be read, but signal output is within the valid range	Display is set too bright or too dark.	■ Set the display brighter by simultaneously pressing ① + ⑥. ■ Set the display darker by simultaneously pressing ② + ⑥.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part → 🖺 152.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures → 🖺 139
Text on local display appears in a language that cannot be understood.	The selected operating language cannot be understood.	1. Press □ + ⊕ for 2 s ("home position"). 2. Press □. 3. Configure the required language in the Display language parameter (→ 🖺 105).
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	<ul> <li>Check the cable and the connector between the main electronics module and display module.</li> <li>Order spare part → ■ 152.</li> </ul>

## For output signals

Error	Possible causes	Remedial action
Signal output outside the valid range	Main electronics module is defective.	Order spare part → 🖺 152.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Parameter configuration error	Check and adjust parameter configuration.
Device measures incorrectly.	Configuration error or device is operated outside the application.	Check and correct parameter configuration.     Observe limit values specified in the "Technical Data".

#### For access


Fault	Possible causes	Remedial action
Write access to parameters is not possible.	Hardware write protection is enabled.	Set the write protection switch on the main electronics module to the <b>OFF</b> position → 🖺 115.
Write access to parameters is not possible.	Current user role has limited access authorization.	<ol> <li>Check user role → □ 57.</li> <li>Enter correct customer-specific access code → □ 57.</li> </ol>
Connection via Modbus RS485 is not possible.	Modbus RS485 bus cable is connected incorrectly.	Check the terminal assignment $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
Connection via Modbus RS485 is not possible.	Modbus RS485 cable is incorrectly terminated.	Check the terminating resistor $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
Connection via Modbus RS485 is not possible.	Settings for the communication interface are incorrect.	Check the Modbus RS485 configuration → 🖺 79.
Unable to connect to the web server.	Web server is disabled.	Using the "FieldCare" or "DeviceCare" operating tool, check whether the web server of the measuring device is enabled, and enable it if necessary → 🖺 64.
	The Ethernet interface on the PC is incorrectly configured.	<ul> <li>Check the properties of the Internet protocol (TCP/IP)→  60.</li> <li>Check the network settings with the IT manager.</li> </ul>
Unable to connect to the web server.	The IP address on the PC is incorrectly configured.	Check the IP address: 192.168.1.212 → 🖺 60
Unable to connect to the web server.	WLAN access data are incorrect.	Check WLAN network status.  Log on to the device again using WLAN access data.  Check that WLAN is enabled on the measuring device and operating unit       60.
	WLAN communication is disabled.	-
Unable to connect to web server, FieldCare or DeviceCare.	WLAN network is not available.	<ul> <li>Check if WLAN reception is present: LED on display module is lit blue.</li> <li>Check if WLAN connection is enabled: LED on display module flashes blue.</li> <li>Switch on instrument function.</li> </ul>
Network connection not present or unstable	WLAN network is weak.	<ul> <li>Operating unit outside reception range: Check network status on operating unit.</li> <li>To improve network performance, use an external WLAN antenna.</li> </ul>
	Parallel WLAN and Ethernet communication	<ul> <li>Check network settings.</li> <li>Temporarily enable only the WLAN as an interface.</li> </ul>
Web browser frozen and operation no longer possible	Data transfer is active.	Wait until data transfer or current action is finished.
	Connection lost	<ul> <li>Check cable connection and power supply.</li> <li>Refresh the web browser and restart if necessary.</li> </ul>
Display of web browser content is difficult to read or incomplete.	Web browser version used is not optimal.	<ul> <li>► Use correct web browser version → 🖹 59.</li> <li>► Empty the web browser cache.</li> <li>► Restart the web browser.</li> </ul>
	Unsuitable view settings.	Change the font size/display ratio of the web browser.
Incomplete or no display of content in the web browser	<ul><li> JavaScript is not enabled.</li><li> JavaScript cannot be enabled.</li></ul>	<ul> <li>Enable JavaScript.</li> <li>Enter http://XXX.XXX.X.X.XX/servlet/ basic.html as the IP address.</li> </ul>

Fault	Possible causes	Remedial action
Operation with FieldCare or DeviceCare via service interface CDI-RJ45 (port 8000) is not possible.	Firewall of the PC or network is blocking communication.	Depending on the settings of the firewall used on the PC or in the network, the firewall must be adapted or disabled to allow FieldCare/ DeviceCare access.
Flashing the firmware with FieldCare or DeviceCare via service interface CDI-RJ45 (port 8000 or TFTP ports) is not possible.	Firewall of the PC or network is blocking communication.	Depending on the settings of the firewall used on the PC or in the network, the firewall must be adapted or disabled to allow FieldCare/ DeviceCare access.

#### Diagnostic information via LEDs 12.2

#### 12.2.1 Transmitter

Different LEDs in the transmitter provide information on the device status.

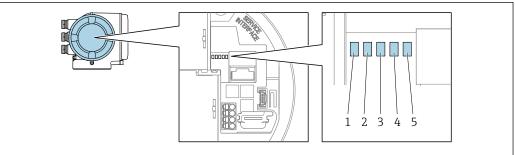


- Supply voltage Device status 2
- 3 Not used
- Communication
- Service interface (CDI) active

LED		Color	Meaning
1	Supply voltage	Off	Supply voltage is off or too low.
		Green	Supply voltage is ok.
2	Device status (normal	Off	Firmware error
	operation)	Green	Device status is ok.
		Flashing green	Device is not configured.
		Red	A diagnostic event with "Alarm" diagnostic behavior has occurred.
		Flashing red	A diagnostic event with "Warning" diagnostic behavior has occurred.
		Flashing red/green	The device restarts.
2	Device status (during	Flashes red slowly	If > 30 seconds: problem with the boot loader.
	start-up)	Flashes red quickly	If > 30 seconds: compatibility problem when reading the firmware.
3	Not used	-	-
4	Communication	Off	Communication not active.
		White	Communication active.
5	Service interface (CDI)	Off	Not connected or no connection established.
		Yellow	Connected and connection established.
		Flashing yellow	Service interface active.

## 12.3 Diagnostic information on local display

### 12.3.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

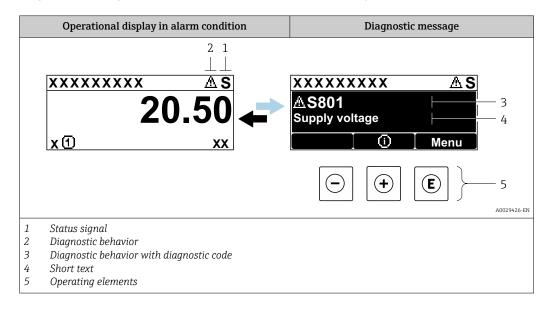


If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

- Other diagnostic events that have occurred can be displayed in the **Diagnostics** menu:
  - Via parameter → 🖺 144

#### Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

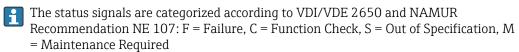


Symbol	Meaning
F	Failure A device error has occurred. The measured value is no longer valid.
С	Function check The device is in service mode (e.g. during a simulation).
S	Out of specification The device is being operated: Outside its technical specification limits (e.g. outside the process temperature range)
М	Maintenance required Maintenance is required. The measured value remains valid.

#### Diagnostic behavior

Symbol	Meaning
8	Alarm  Measurement is interrupted. Signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated.
Δ	<ul> <li>Warning</li> <li>Measurement is resumed.</li> <li>The signal outputs and totalizers are not affected.</li> <li>A diagnostic message is generated.</li> </ul>

#### Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

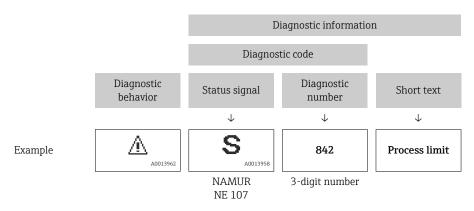

#### Operating elements

Operating key	Meaning
<b>(+)</b>	Plus key In menu, submenu Opens the message about the remedial measures.
E	Enter key In menu, submenu Opens the operating menu.

#### XXXXXXXX AS XXXXXXXX **AS801** Supply voltage x ① 1. $(\mathbf{+})$ Diagnostic list $\triangle$ S Diagnostics 1 ∆ S801 Supply voltage Diagnostics 2 **Diagnostics 3** 2. Œ Supply voltage (ID:203) △ S801 0d00h02m25s **—** 5 Increase supply voltage 3. $| \ominus | + | \oplus |$

#### 12.3.2 Calling up remedial measures

A0029431-EN

- 32 Message for remedial measures
- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time when error occurred
- 6 Remedial measures
- 1. The user is in the diagnostic message.

Press ± (① symbol).

- The **Diagnostic list** submenu opens.
- 2. Select the desired diagnostic event with  $\pm$  or  $\Box$  and press  $\Box$ .
  - ► The message about the remedial measures opens.
- 3. Press  $\Box$  +  $\pm$  simultaneously.
  - ► The message about the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or **Previous diagnostics** parameter.

- 1. Press E.
  - ► The message for the remedial measures for the selected diagnostic event opens.
- 2. Press  $\Box$  +  $\pm$  simultaneously.
  - ► The message for the remedial measures closes.

## 12.4 Diagnostic information in the web browser

#### 12.4.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

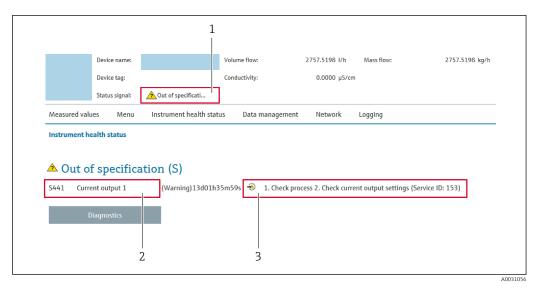

- 1 Status area with status signal
- 2 Diagnostic information
- 3 Remedial measures with service ID
- In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

  - Via submenu → 🖺 145

#### Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
8	Failure A device error has occurred. The measured value is no longer valid.
w/	Function check The device is in service mode (e.g. during a simulation).
<u>^</u> ?	Out of specification The device is being operated: Outside its technical specification limits (e.g. outside the process temperature range)
<b>&amp;</b>	Maintenance required Maintenance is required. The measured value remains valid.

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.


#### 12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

## 12.5 Diagnostic information in FieldCare or DeviceCare

#### 12.5.1 Diagnostic options


Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

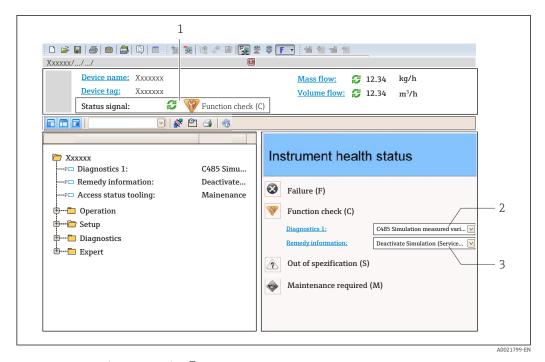

- 1 Status area with status signal → \( \bigsim 133 \)
- 2 Diagnostic information  $\rightarrow \triangleq 134$
- 3 Remedial measures with service ID
- In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:
  - Via parameter  $\rightarrow$  🗎 144
  - Via submenu → 🖺 145

#### Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

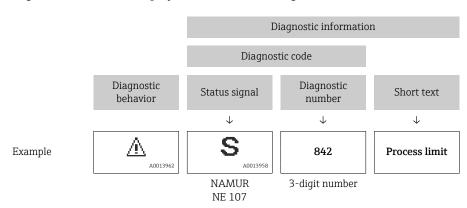

#### 12.5.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu
   Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

- 1. Call up the desired parameter.
- 2. On the right in the working area, mouse over the parameter.
  - ► A tool tip with remedy information for the diagnostic event appears.

## 12.6 Diagnostic information via communication interface

#### 12.6.1 Reading out diagnostic information

Diagnostic information can be read out via Modbus RS485 register addresses.

- Via register address **6821** (data type = string): diagnosis code, e.g. F270
- Via register address **6859** (data type = integer): diagnosis number, e.g. 270
- For an overview of diagnostic events with diagnosis number and diagnosis code

  → 

  139

### 12.6.2 Configuring error response mode

The error response mode for Modbus RS485 communication can be configured in the **Communication** submenu using 2 parameters.

#### Navigation path

Setup → Communication

Parameter overview with brief description

Parameters	Description	Selection	Factory setting
Failure mode	Select measured value output behavior when a diagnostic message occurs via Modbus communication.  The effect of this parameter depends on the option selected in the Assign diagnostic behavior parameter.	<ul> <li>NaN value</li> <li>Last valid value</li> <li>NaN = not a number</li> </ul>	NaN value

# 12.7 Adapting the diagnostic information

#### 12.7.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

Expert  $\rightarrow$  System  $\rightarrow$  Diagnostic handling  $\rightarrow$  Diagnostic behavior

You can assign the following options to the diagnostic number as the diagnostic behavior:

Options	Description
Alarm	The device stops measurement. The measured value output via Modbus RS485 and the totalizers assume the defined alarm condition. A diagnostic message is generated. The background lighting changes to red.
Warning	The device continues to measure. The measured value output via Modbus RS485 and the totalizers are not affected. A diagnostic message is generated.

Options	Description
Logbook entry only	The device continues to measure. The diagnostic message is only displayed in the <b>Event logbook</b> submenu ( <b>Event list</b> submenu) and is not displayed in alternating sequence with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

# 12.8 Overview of diagnostic information

- The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.
- In the case of some items of diagnostic information, the diagnostic behavior can be changed. Adapting the diagnostic information  $\rightarrow \implies 138$
- Not all the diagnostics information is available for the device.

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of	sensor			
019	Device initialization active	Device initialization in progress, please wait	S	Warning 1)
022	Temperature sensor defective	Replace sensor electronic module (ISEM)	F	Alarm
082	Data storage inconsistent	Check module connections	F	Alarm
083	Memory content inconsistent	Restart device     Restore S-DAT data     Replace S-DAT	F	Alarm
104	Sensor signal path 1 to n	Check process conditions     Clean or replace transducers     Replace sensor electronic module (ISEM)	F	Alarm
105	Downstream transducer path 1 to n defective	Check connection to the downstream transducer     Replace downstream transducer	F	Alarm
106	Upstream transducer path 1 defective	Check connection to the upstream transducer     Replace upstream transducer	F	Alarm
124	Relative signal strength	Check process conditions     Clean or replace transducers     Replace sensor electronic module     (ISEM)	М	Warning 1)
125	Relative sound velocity	Check process conditions     Clean or replace transducers     Replace sensor electronic module     (ISEM)	М	Warning 1)
160	Signal path switched off	Contact service	М	Warning 1)
170	Pressure cell connection defective	Check plug connections     Replace pressure cell	F	Alarm
171	Ambient temperature too low	Increase ambient temperature	S	Warning
172	Ambient temperature too high	Reduce ambient temperature	S	Warning
173	Pressure cell range exceeded	Check process conditions     Adapt process pressure	S	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
174	Pressure cell electronics defective	Replace pressure cell	F	Alarm
175	Pressure cell deactivated	Enable pressure cell	M	Warning
Diagnostic of	electronic			
201	Electronics faulty	Restart device     Replace electronics	F	Alarm
242	Firmware incompatible	Check firmware version     Flash or replace electronic module	F	Alarm
252	Module incompatible	Check electronic modules     Check if correct modules are available (e.g. NEx, Ex)     Replace electronic modules	F	Alarm
262	Module connection interrupted	Check or replace connection cable between sensor electronic module (ISEM) and main electronics     Check or replace ISEM or main electronics	F	Alarm
270	Main electronics defective	Restart device     Replace main electronic module	F	Alarm
271	Main electronics faulty	Restart device     Replace main electronic module	F	Alarm
272	Main electronics faulty	Restart device	F	Alarm
273	Main electronics defective	Pay attention to display emergency operation     Replace main electronics	F	Alarm
275	I/O module defective	Change I/O module	F	Alarm
276	I/O module faulty	Restart device     Change I/O module	F	Alarm
281	Electronic initialization active	Firmware update active, please wait!	F	Alarm
283	Memory content inconsistent	Restart device	F	Alarm
302	Device verification active	Device verification active, please wait.	С	Warning 1)
303	I/O 1 to n configuration changed	Apply I/O module configuration     (parameter "Apply I/O     configuration")     Afterwards reload device description     and check wiring	М	Warning
311	Sensor electronics (ISEM) faulty	Maintenance required! Do not reset device	M	Warning
330	Flash file invalid	Update firmware of device     Restart device	M	Warning
331	Firmware update failed	Update firmware of device     Restart device	F	Warning
332	Writing in HistoROM backup failed	Replace user interface board     Ex d/XP: replace transmitter	F	Alarm
361	I/O module 1 to n faulty	Restart device     Check electronic modules     Change I/O module or main electronics	F	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
372	Sensor electronics (ISEM) faulty	Restart device     Check if failure recurs     Replace sensor electronic module (ISEM)	F	Alarm
373	Sensor electronics (ISEM) faulty	Transfer data or reset device	F	Alarm
375	I/O- 1 to n communication failed	Restart device     Check if failure recurs     Replace module rack inclusive electronic modules	F	Alarm
378	Supply voltage ISEM faulty	If available: Check connection cable between sensor and transmitter     Replace main electronic module     Replace sensor electronic module (ISEM)	F	Alarm
382	Data storage	Insert T-DAT     Replace T-DAT	F	Alarm
383	Memory content	Reset device	F	Alarm
384	Transmitter circuit	Restart device     Check if failure recurs     Replace sensor electronic module (ISEM)	F	Alarm
385	Amplifier circuit	Restart device     Check if failure recurs     Replace sensor electronic module (ISEM)	F	Alarm
386	Time of flight	Restart device     Check if failure recurs     Replace sensor electronic module (ISEM)	F	Alarm
387	HistoROM data faulty	Contact service organization	F	Alarm
Diagnostic of	configuration		·	
410	Data transfer failed	Retry data transfer     Check connection	F	Alarm
412	Processing download	Download active, please wait	С	Warning
431	Trim 1 to n required	Carry out trim	М	Warning
437	Configuration incompatible	Update firmware     Execute factory reset	F	Alarm
438	Dataset different	Check dataset file     Check device parameterization     Download new device     parameterization	M	Warning
441	Current output 1 to n saturated	Check current output settings     Check process	S	Warning 1)
442	Frequency output 1 to n saturated	Check frequency output settings     Check process	S	Warning 1)
443	Pulse output 1 to n saturated	Check pulse output settings     Check process	S	Warning 1)
444	Current input 1 to n saturated	Check current input settings     Check connected device     Check process	S	Warning <sup>1)</sup>
452	Calculation error detected	Check device configuration     Check process conditions	S	Warning 1)

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
453	Flow override active	Deactivate flow override	С	Warning
484	Failure mode simulation active	Deactivate simulation	С	Alarm
485	Process variable simulation active	Deactivate simulation	С	Warning
486	Current input 1 to n simulation active	Deactivate simulation	С	Warning
491	Current output 1 to n simulation active	Deactivate simulation	С	Warning
492	Frequency output 1 to n simulation active	Deactivate simulation frequency output	С	Warning
493	Pulse output simulation active	Deactivate simulation pulse output	С	Warning
494	Switch output 1 to n simulation active	Deactivate simulation switch output	С	Warning
495	Diagnostic event simulation active	Deactivate simulation	С	Warning
496	Status input 1 to n simulation active	Deactivate simulation status input	С	Warning
502	CT activation/ deactivation failed	Follow the sequence of the custody transfer activation/deactivation: First authorized user login, then set the DIP switch on the main electonic module	С	Warning
520	I/O 1 to n hardware configuration invalid	Check I/O hardware configuration     Replace wrong I/O module     Plug the module of double pulse output on correct slot	F	Alarm
537	Configuration	Check IP addresses in network     Change IP address	F	Warning
538	Flow computer configuration incorrect	Check input value (pressure, temperature)	S	Warning
539	Flow computer configuration incorrect	Check input value (pressure, temperature)     Check allowed values of the medium properties	S	Alarm
540	Custody transfer mode failed	Power off device and toggle DIP switch     Deactivate custody transfer mode     Reactivate custody transfer mode     Check electronic components	F	Alarm
541	Flow computer configuration incorrect	Check entered reference value using the document Operating Instructions	S	Warning
543	Double pulse output	Check process     Check pulse output settings	S	Warning 1)
593	Double pulse output 1 simulation	Deactivate simulation pulse output	С	Warning
594	Relay output 1 to n simulation active	Deactivate simulation switch output	С	Warning
599	Custody transfer logbook full	Deactivate custody transfer mode     Clear custody transfer logbook (all 30 entries)     Activate custody transfer mode	F	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of	process			
803	Loop current 1 faulty	Check wiring     Change I/O module	F	Alarm
832	Electronics temperature too high	Reduce ambient temperature	S	Warning 1)
833	Electronics temperature too low	Increase ambient temperature	S	Warning 1)
834	Process temperature too high	Reduce process temperature	S	Warning 1)
835	Process temperature too low	Increase process temperature	S	Warning 1)
836	Process pressure above limit	Reduce process pressure	S	Alarm
837	Process pressure below limit	Increase process pressure	S	Warning 1)
841	Flow velocity too high	Reduce flow rate	S	Warning 1)
842	Process value below limit	Low flow cut off active! Check low flow cut off configuration	S	Warning 1)
870	Measuring inaccuracy increased	Check process     Increase flow volume	F	Alarm 1)
881	Signal to noise ratio too low	Check process conditions     Clean/repl. transd. (inline) / check sensor pos. and coupling (clamp on)     Replace sensor electronic module (ISEM)	F	Alarm
882	Input signal faulty	Check input signal parameterization     Check external device     Check process conditions	F	Alarm
930	Sound velocity too high	Check process conditions     Clean/repl. transd. (inline) / check sensor pos. and coupling (clamp on)     Replace sensor electronic module (ISEM)	S	Warning 1)
931	Sound velocity too low	Check process conditions     Clean/repl. transd. (inline) / check sensor pos. and coupling (clamp on)     Replace sensor electronic module (ISEM)	S	Warning <sup>1)</sup>
941	API/ASTM temperature out of specificat.	Check process temperature with selected API/ASTM commodity group     Check API/ASTM-related parameters	S	Warning 1)
942	API/ASTM density out of specification	Check process density with selected API/ASTM commodity group     Check API/ASTM-related parameters	S	Warning 1)
943	API pressure out of specification	Check process pressure with selected API commodity group     Check API related parameters	S	Warning 1)

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
953	Asymmetry noise signal too high path 1 to n	Check process conditions     Clean or replace transducers     Replace sensor electronic module     (ISEM)	M	Alarm
954	Sound velocity deviation too high	Check medium configuration     Check process conditions     Clean or replace transducers	S	Warning 1)

<sup>1)</sup> Diagnostic behavior can be changed.


## 12.9 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

- To call up the measures to rectify a diagnostic event:
  - Via local display → 135
    - Via web browser → 🗎 136
    - Via "FieldCare" operating tool → 🗎 137
    - Via "DeviceCare" operating tool → 🖺 137
- Other pending diagnostic events can be displayed in the **Diagnostic list** submenu  $\Rightarrow \stackrel{\cong}{=} 145$

#### Navigation

"Diagnostics" menu

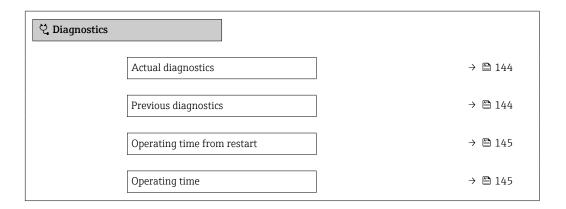

#### Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occured diagnostic event along with its diagnostic information.  If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	Symbol for diagnostic behavior, diagnostic code and short message.
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.


Parameter	Prerequisite	Description	User interface
Operating time from restart	_	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	-	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

## 12.10 Diagnostics list

Up to 5 currently pending diagnostic events can be displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

## Navigation path

Diagnostics → Diagnostic list

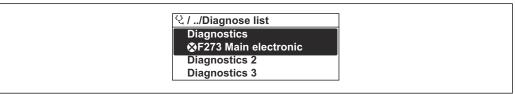

■ 33 Using the example of the local display

To call up the measures to rectify a diagnostic event:

- Via local display → 🖺 135


# 12.11 Event logbook

## 12.11.1 Reading out the event logbook

A chronological overview of the event messages that have occurred is provided in the Events list submenu.

#### Navigation path

**Diagnostics** menu → **Event logbook** submenu → Events list

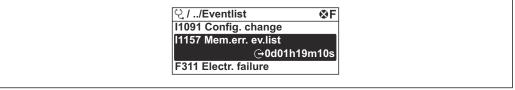

₹ 34 Using the example of the local display

- A maximum of 20 event messages can be displayed in chronological order.
- If the **Extended HistoROM** application package (order option) is enabled in the device, the event list can contain up to 100 entries.

The event history includes entries for:

- Diagnostic events  $\rightarrow$  🗎 139
- Information events  $\rightarrow$  🗎 146

In addition to the operating time when the event occurred, each event is also assigned a symbol that indicates whether the event has occurred or is finished:

- Diagnostics event
  - • : Occurrence of the event
  - 🕒: End of the event
- Information event
  - €: Occurrence of the event
- To call up the measures to rectify a diagnostic event:
  - Via local display → 

    135
    - Via web browser → 🖺 136
    - Via "FieldCare" operating tool → 🖺 137
    - Via "DeviceCare" operating tool → 🗎 137
- For filtering the displayed event messages → 🗎 146

## 12.11.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

#### Navigation path

 ${\tt Diagnostics} \rightarrow {\tt Event\ logbook} \rightarrow {\tt Filter\ options}$ 

### Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

## 12.11.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
I1000	(Device ok)
I1079	Sensor changed
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	HistoROM backup deleted
I1137	Electronics changed
I1151	History reset
I1155	Reset electronics temperature
I1156	Memory error trend
I1157	Memory error event list
I1256	Display: access status changed
I1264	Safety sequence aborted
I1278	I/O module restarted
I1327	Zero point adjust failed signal path
I1335	Firmware changed

Info number	Info name
I1361	Web server: login failed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1444	Device verification passed
I1445	Device verification failed
I1457	Measurement error verification failed
I1459	I/O module verification failed
I1461	Sensor verification failed
I1462	Sensor electronic module verific. failed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished
I1517	Custody transfer active
I1518	Custody transfer inactive
I1554	Safety sequence started
I1555	Safety sequence confirmed
I1556	Safety mode off
I1618	I/O module 2 replaced
I1619	I/O module 3 replaced
I1621	I/O module 4 replaced
I1622	Calibration changed
I1624	Reset all totalizers
I1625	Write protection activated
I1626	Write protection deactivated
I1627	Web server: login successful
I1628	Display: login successful
I1629	CDI: login successful
I1631	Web server access changed
I1632	Display: login failed
I1633	CDI: login failed
I1634	Reset to factory settings
I1635	Reset to delivery settings
I1639	Max. switch cycles number reached
I1643	Custody transfer logbook cleared
I1649	Hardware write protection activated
I1650	Hardware write protection deactivated
I1651	Custody transfer parameter changed
I1712	New flash file received
I1725	Sensor electronic module (ISEM) changed
I1726	Configuration backup failed

# 12.12 Resetting the measuring device

The entire device configuration or some of the configuration can be reset to a defined state with the **Device reset** parameter ( $\rightarrow \implies 111$ ).

## 12.12.1 Function range of "Device reset" parameter


Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to the customer-specific value. All other parameters are reset to the factory setting.
Restart device	The restart resets every parameter with data stored in volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.
Restore S-DAT backup	Restores the data that is saved on the S-DAT. Additional information: This function can be used to resolve the memory issue "083 Memory content inconsistent" or to restore the S-DAT data when a new S-DAT has been installed.  This option is displayed only in an alarm condition.

## 12.13 Device information

The **Device information** submenu contains all parameters that display different information for device identification.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Device information

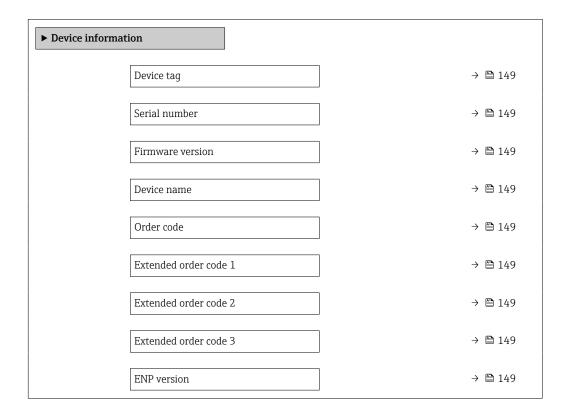

## Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Device tag	Shows name of measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Prosonic Flow
Serial number	Shows the serial number of the measuring device.	Max. 11-digit character string comprising letters and numbers.	-
Firmware version	Shows the device firmware version installed.	Character string in the format xx.yy.zz	-
Device name	Shows the name of the transmitter.  The name can be found on the nameplate of the transmitter.	Prosonic Flow 300	-
Order code	Shows the device order code.  The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks (e.g. /).	-
Extended order code 1	Shows the 1st part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
Extended order code 2	Shows the 2nd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
Extended order code 3	Shows the 3rd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
ENP version	Shows the version of the electronic nameplate (ENP).	Character string	2.02.00

# 12.14 Firmware history

Release date	Firmware Version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
01.2024	01.02.zz	Option <b>73</b>	Update	Operating instructions	BA01835D/06/EN/02.24
08.2019	01.00.zz	Option <b>76</b>	Original firmware	Operating instructions	BA01835D/06/EN/01.19

- It is possible to flash the firmware to the current version or the previous version using the service interface.
- For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.
- The manufacturer's information is available:
  - In the Download Area of the Endress+Hauser web site: www.endress.com → Downloads
  - Specify the following details:
    - Product root: e.g. 9G3B
       The product root is the first part of the order code: see the nameplate on the device.
    - Text search: Manufacturer's information
    - Media type: Documentation Technical Documentation

## 13 Maintenance

## 13.1 Maintenance tasks

No special maintenance work is required.

## 13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

## 13.2 Measuring and test equipment

Endress+Hauser offers a variety of measuring and testing equipment, such as Netilion or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment:  $\rightarrow \implies 155$ 

### 13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

# 14 Repair

## 14.1 General notes

## 14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

## 14.1.2 Notes for repair and conversion

For repair and conversion of a measuring device, observe the following notes:

- ▶ Use only original Endress+Hauser spare parts.
- ► Carry out the repair according to the Installation Instructions.
- ▶ Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ▶ Document all repairs and conversions and enter the details in Netilion Analytics.

## 14.2 Spare parts

Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

- Measuring device serial number:
  - Is located on the nameplate of the device.

#### 14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

Your Endress+Hauser Sales Center can provide detailed information on the services.

#### 14.4 Return

The requirements for safe device return can vary depending on the device type and national legislation.

- 1. Refer to the web page for information: http://www.endress.com/support/return-material
  - ► Select the region.
- 2. Return the device if repairs or a factory calibration are required, or if the wrong device was ordered or delivered.

## 14.5 Disposal



If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

## 14.5.1 Removing the measuring device

1. Switch off the device.

## **A** WARNING

## Danger to persons from process conditions!

- ▶ Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive media.
- 2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

## 14.5.2 Disposing of the measuring device

## **A** WARNING

## Danger to personnel and environment from fluids that are hazardous to health.

► Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- ▶ Observe valid federal/national regulations.
- ► Ensure proper separation and reuse of the device components.

# 15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress +Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

# 15.1 Device-specific accessories

### 15.1.1 For the transmitter

Accessories	Description
Proline 300 transmitter	Transmitter for replacement or storage. Use the order code to define the following specifications:  • Approvals • Output • Input • Display/operation • Housing • Software  • Order code: 9X3BXX  Installation Instructions EA01263D
Remote display and operating module DKX001	<ul> <li>If ordered directly with the measuring device:         Order code for "Display; operation", option O "Remote display 4-line, illuminated;         10 m (30 ft) cable; touch control"</li> <li>If ordered separately:         <ul> <li>Measuring device: order code for "Display; operation", option M "W/o, prepared for remote display"</li> <li>DKX001: Via the separate product structure DKX001</li> </ul> </li> <li>If ordered subsequently:         <ul> <li>DKX001: Via the separate product structure DKX001</li> </ul> </li> <li>Mounting bracket for DKX001</li> <li>If ordered directly: order code for "Accessory enclosed", option RA "Mounting bracket, pipe 1/2"</li> <li>If ordered subsequently: order number: 71340960</li> </ul> <li>Connecting cable (replacement cable)</li> <li>Via the separate product structure: DKX002</li> <li>Further information on display and operating module DKX001 → 178.</li>
	Special Documentation SD01763D
External WLAN antenna	External WLAN antenna with 1.5 m (59.1 in) connecting cable and two angle brackets. Order code for "Accessory enclosed", option P8 "Wireless antenna wide area".  ■ The external WLAN antenna is not suitable for use in hygienic applications.  ■ Additional information regarding the WLAN interface → 🖺 66.  ■ Order number: 71351317  ■ Installation Instructions EA01238D
Weather protection cover	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight.  Order number: 71343505
	Installation Instructions EA01160D

# 15.2 Communication-specific accessories

Accessories	Description
Fieldgate FXA42	Transmission of the measured values of connected 4 to 20 mA analog measuring devices, as well as digital measuring devices
	<ul> <li>Technical Information TI01297S</li> <li>Operating Instructions BA01778S</li> <li>Product page: www.endress.com/fxa42</li> </ul>
Field Xpert SMT50	The Field Xpert SMT50 table PC for device configuration enables mobile plant asset management. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress. This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.
	<ul> <li>Technical Information TI01555S</li> <li>Operating Instructions BA02053S</li> <li>Product page: www.endress.com/smt50</li> </ul>
Field Xpert SMT70	The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.  This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.
	<ul> <li>Technical Information TI01342S</li> <li>Operating Instructions BA01709S</li> <li>Product page: www.endress.com/smt70</li> </ul>
Field Xpert SMT77	The Field Xpert SMT77 tablet PC for device configuration enables mobile plant asset management in areas categorized as Ex Zone 1.  Technical Information TI01418S
	<ul> <li>Operating Instructions BA01923S</li> <li>Product page: www.endress.com/smt77</li> </ul>

# 15.3 Service-specific accessories

Accessories	Description	
Applicator	Software for selecting and sizing Endress+Hauser measuring devices:  Choice of measuring devices for industrial requirements  Calculation of all the necessary data for identifying the optimum flowmete e.g. nominal diameter, pressure loss, flow velocity and accuracy.  Graphic illustration of the calculation results  Determination of the partial order code, administration, documentation as access to all project-related data and parameters over the entire life cycle a project.	
	Applicator is available:  • Via the Internet: https://portal.endress.com/webapp/applicator  • As a downloadable DVD for local PC installation.	
Netilion	lloT Ecosystem: Unlock knowledge With the Netilion lloT Ecosystem, Endress+Hauser enables you to optimize your plant performance by digitizing workflows, creating knowledge and establishing new levels of collaboration. Building decades of expertise in process automation, Endress+Hauser provides the process industry with an lloT Ecosystem that allows data-driven insights. These insights can be applied to optimize processes resulting in increased plant up-time, efficiency, reliability – and ultimately, a more profitable plant. www.netilion.endress.com	

Accessories	Description
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.  Operating Instructions BA00027S and BA00059S
DeviceCare	Tool to connect and configure Endress+Hauser field devices.  Innovation brochure IN01047S

# 15.4 System components

Accessories	Description	
Memograph M graphic data manager	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.	
	<ul> <li>Technical Information TI00133R</li> <li>Operating Instructions BA00247R</li> </ul>	

# 16 Technical data

# 16.1 Application

The measuring device is intended only for the flow measurement of gases.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

# 16.2 Function and system design

Measuring principle	Proline Prosonic Flow uses a measurement method based on the transit time difference.
Measuring system	The device consists of a transmitter and a sensor.
	The device is available as a compact version: The transmitter and sensor form a mechanical unit.
	Information on the structure of the device $\rightarrow~  riangleq 14$

## **16.3** Input

### Measured variable

#### Direct measured variables

- Flow velocity
- Sound velocity
- Process temperature (optional): based on Pt1000 Class A platinum resistor
- Pressure (optional): based on pressure measuring cell for measuring absolute pressure

#### Calculated measured variables

- Volume flow
- Corrected volume flow (corrected/standard volume flow)
- Mass flow
- Energy flow
- Density

#### Optionally calculated measured variables

Order code for "Application package", option EF "Advanced gas analysis"

- Wobbe index
- Methane fraction
- Molar mass
- Dynamic viscosity
- Calorific value
  - Optionally calculated measured variables depend on the gas type.

### Measuring range

- With the specified measurement accuracy: v = 0.3 to 40 m/s (0.98 to 131.2 ft/s)
- With reduced measurement accuracy: v = 0.3 to 60 m/s (0.98 to 196.8 ft/s)

### Flow characteristic values in SI units

			Factory settings		
Nominal diameter		Recommended flow	Full scale value current output	Pulse value	Low flow cut off (v ~ 0.1 m/s)
[mm]	[in]	[m³/h]	[m³/h]	[m³/pulse]	[m³/h]
25	1	0.50 to 67	50	0.007	0.17
50	2	2.05 to 274	210	0.03	0.68
80	3	4.60 to 614	460	0.06	1.5
100	4	8 to 1064	800	0.1	2.7
150	6	18.1 to 2 414	1800	0.3	6.0
200	8	32 to 4235	3 2 0 0	0.4	11
250	10	50 to 6662	5000	0.7	17
300	12	71 to 9426	7 100	1.0	24

158

Flow characteristic values in US units

			Factory settings		
Nominal diameter		Recommended flow	Full scale value current output	Pulse value	Low flow cut off (v ~ 0.1 m/s)
[in]	[mm]	[ft³/hr]	[ft³/hr]	[ft³/pulse]	[ft³/hr]
1	25	17.7 to 2358	1800	0.2	5.9
2	50	73 to 9668	7300	1	24
3	80	163 to 21694	16000	2	54
4	100	282 to 37 579	28000	4	94
6	150	639 to 85253	64000	9	213
8	200	1 122 to 149 544	110000	16	374
10	250	1764 to 235259	180 000	25	588
12	300	2 497 to 332 890	250 000	35	832

## Recommended measuring range



Flow limit  $\rightarrow \blacksquare 173$ 

Operable flow range

133:1

#### Input signal

#### External measured values

To increase the measurement accuracy of certain measured variables or to calculate the corrected volume flow for gases, the use of the integrated pressure and temperature measurement function is recommended:

- Temperature measurement to increase measurement accuracy (order code for "Measuring tube; Transducer; Sensor version", option AB "316L; titanium gr. 2; integrated temperature measurement")
- Temperature and pressure measurement to increase measurement accuracy (order code for "Measuring tube; Transducer; Sensor version", option AC "316L; titanium gr. 2; integrated pressure + temperature measurement")

The measuring device provides optional interface that enable the transmission of externally measured variables (temperature, pressure, gas composition (gas composition can only be transmitted via Modbus)) to the measuring device:

- Analog inputs 4-20 mA
- Digital inputs (via HART input or Modbus)

Pressure values can be transmitted as absolute or gauge pressure. For gauge pressure, the atmospheric pressure must be specified by the customer.

i

#### Current input

The measured values are written from the automation system to the measuring device via the current input  $\Rightarrow \triangleq 160$ .

## Digital communication

The measured values are written by the automation system via Modbus RS485.

## Current input 0/4 to 20 mA

Current input	0/4 to 20 mA (active/passive)
Current span	<ul> <li>4 to 20 mA (active)</li> <li>0/4 to 20 mA (passive)</li> </ul>
Resolution	1 μΑ
Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)
Maximum input voltage	≤ 30 V (passive)
Open-circuit voltage	≤ 28.8 V (active)
Possible input variables	<ul><li>Pressure</li><li>Temperature</li></ul>

## Status input

Maximum input values	<ul> <li>DC -3 to 30 V</li> <li>If status input is active (ON): R<sub>i</sub> &gt;3 kΩ</li> </ul>
Response time	Configurable: 5 to 200 ms
Input signal level	<ul> <li>Low signal: DC -3 to +5 V</li> <li>High signal: DC 12 to 30 V</li> </ul>
Assignable functions	<ul> <li>Off</li> <li>Reset the individual totalizers separately</li> <li>Reset all totalizers</li> <li>Flow override</li> </ul>

# 16.4 Output

### Output signal

#### Modbus RS485

Physical interface	RS485 in accordance with EIA/TIA-485 standard
Terminating resistor	Integrated, can be activated via DIP switches

### Current output 4 to 20 mA

Signal mode	Can be set to: Active Passive
Current range	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  0 to 20 mA (only if the signal mode is active)  Fixed current
Maximum output values	22.5 mA
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	0 to 700 Ω
Resolution	0.38 μΑ
Damping	Configurable: 0 to 999.9 s
Assignable measured variables	<ul> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Mass flow</li> <li>Energy flow</li> <li>Sound velocity</li> <li>Flow velocity</li> <li>Electronics temperature</li> <li>Methane fraction 1)</li> <li>Molar mass 1)</li> <li>Density</li> <li>Dynamic viscosity 1)</li> <li>Calorific value 1)</li> <li>Wobbe index 1)</li> <li>Pressure 2)</li> <li>Temperature 3)</li> </ul>

- 1) Only for the order code for "Application package", option EF "Advanced gas analysis" and corresponding configuration
- 2) Only for the order code for "Measuring tube; Transducer; Sensor version", option AC "316L; titanium gr. 2; pressure + temperature measurement integrated"
- 3) Only for the order code for "Measuring tube; Transducer; Sensor version", option AB "316L; titanium gr. 2; temperature measurement integrated" or AC "316L; titanium gr. 2; pressure + temperature measurement integrated"

## Pulse/frequency/switch output

Function	Can be configured as pulse, frequency or switch output
Version	Open collector
	Can be set to: Active Passive
	Ex-i, passive

Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Pulse output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Pulse width	Configurable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Configurable
Assignable measured variables	<ul> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Mass flow</li> <li>Energy flow</li> </ul>
Frequency output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Configurable: end value frequency 2 to $10000Hz(f_{max} = 12500Hz)$
Damping	Configurable: 0 to 999.9 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Mass flow</li> <li>Energy flow</li> <li>Sound velocity</li> <li>Flow velocity</li> <li>Electronics temperature</li> <li>Methane fraction <sup>1)</sup></li> <li>Molar mass <sup>1)</sup></li> <li>Density</li> <li>Dynamic viscosity <sup>1)</sup></li> <li>Calorific value <sup>1)</sup></li> <li>Wobbe index <sup>1)</sup></li> <li>Pressure <sup>2)</sup></li> <li>Temperature <sup>3)</sup></li> </ul>
Switch output	
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Configurable: 0 to 100 s

162

Number of switching cycles	Unlimited
Assignable functions	<ul> <li>Disable</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Mass flow</li> <li>Energy flow</li> <li>Flow velocity</li> <li>Electronics temperature</li> <li>Sound velocity</li> <li>Methane fraction 1)</li> <li>Molar mass 1)</li> <li>Density</li> <li>Dynamic viscosity 1)</li> <li>Calorific value 1)</li> <li>Wobbe index 1)</li> <li>Pressure 2)</li> <li>Temperature 3)</li> <li>Totalizer 1-3</li> <li>Flow direction monitoring</li> <li>Status</li> <li>Low flow cut off</li> </ul>

- 1) Only for the order code for "Application package", option EF "Advanced gas analysis" and corresponding configuration
- 2) Only for the order code for "Measuring tube; Transducer; Sensor version", option AC "316L; titanium gr. 2; pressure + temperature measurement integrated"
- Only for the order code for "Measuring tube; Transducer; Sensor version", option AB "316L; titanium gr. 2; temperature measurement integrated" or AC "316L; titanium gr. 2; pressure + temperature measurement integrated"

## Double pulse output

Function	Double pulse
Version	Open collector
	Can be set to:  Active Passive Passive NAMUR
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Output frequency	Configurable: 0 to 1000 Hz
Damping	Configurable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Mass flow</li> <li>Energy flow</li> </ul>

### Relay output

Function	Switch output
Version	Relay output, galvanically isolated

Switching behavior	Can be set to:  NO (normally open), factory setting  NC (normally closed)
Maximum switching capacity (passive)	■ DC 30 V, 0.1 A ■ AC 30 V, 0.5 A
Assignable functions	■ Disable ■ On ■ Diagnostic behavior ■ Limit ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Energy flow ■ Flow velocity ■ Electronics temperature ■ Sound velocity ■ Methane fraction ¹) ■ Molar mass ¹) ■ Density ■ Dynamic viscosity ¹) ■ Calorific value ¹) ■ Wobbe index ¹) ■ Pressure ²) ■ Temperature ³) ■ Totalizer 1-3 ■ Flow direction monitoring ■ Status Low flow cut off

- 1) Only for the order code for "Application package", option EF "Advanced gas analysis" and corresponding configuration
- 2) Only for the order code for "Measuring tube; Transducer; Sensor version", option AC "316L; titanium gr. 2; pressure + temperature measurement integrated"
- Only for the order code for "Measuring tube; Transducer; Sensor version", option AB "316L; titanium gr. 2; temperature measurement integrated" or AC "316L; titanium gr. 2; pressure + temperature measurement integrated"

### User-configurable input/output

**One** specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

#### Signal on alarm

Depending on the interface, failure information is displayed as follows:

#### Modbus RS485

Failure mode	Choose from:
	NaN value instead of current value
	Last valid value

164

## Current output 0/4 to 20 mA

## 4 to 20 mA

Failure mode	Choose from:  4 to 20 mA in accordance with NAMUR recommendation NE 43  4 to 20 mA in accordance with US  Min. value: 3.59 mA  Max. value: 22.5 mA  Definable value between: 3.59 to 22.5 mA  Actual value
	■ Definable value between: 3.59 to 22.5 mA
	Last valid value

### 0 to 20 mA

Failure mode	Choose from:
	■ Maximum alarm: 22 mA
	■ Definable value between: 0 to 20.5 mA

## Pulse/frequency/switch output

Pulse output	
Fault mode	Choose from:  Actual value  No pulses
Frequency output	
Fault mode	Choose from:  Actual value  O Hz  Definable value between: 2 to 12 500 Hz
Switch output	
Fault mode	Choose from:  Current status  Open  Closed

## Relay output

Failure mode	Choose from:
	<ul> <li>Current status</li> </ul>
	■ Open
	■ Closed

## Local display

Plain text display	With information on cause and remedial measures
Backlight	Red lighting indicates a device error.

Status signal as per NAMUR recommendation NE 107

## Interface/protocol

- Via digital communication: Modbus RS485
- Via service interface
  - CDI-RJ45 service interface
  - WLAN interface

Plain text display	With information on cause and remedial measures
--------------------	---

#### Web browser

Plain text display W	Vith information on cause and remedial measures
----------------------	---

## Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes
	The following information is displayed depending on the device version:  ■ Supply voltage active  ■ Data transmission active  ■ Device alarm/error has occurred  Diagnostic information via light emitting diodes →   132

Low flow cut off

The switch points for low flow cut off are user-selectable.

Galvanic isolation

The outputs are galvanically isolated:

- from the power supply
- from one another
- from the potential equalization (PE) terminal

		1
nrotoco	l-specific	' nata

Protocol	Modbus Applications Protocol Specification V1.1
Response times	<ul> <li>Direct data access: typically 25 to 50 ms</li> <li>Auto-scan buffer (data range): typically 3 to 5 ms</li> </ul>
Device type	Slave
Slave address range	1 to 247
Broadcast address range	0
Function codes	<ul> <li>03: Read holding register</li> <li>04: Read input register</li> <li>06: Write single registers</li> <li>08: Diagnostics</li> <li>16: Write multiple registers</li> <li>23: Read/write multiple registers</li> </ul>
Broadcast messages	Supported by the following function codes:  O6: Write single registers  16: Write multiple registers  23: Read/write multiple registers
Supported baud rate	<ul> <li>1200 BAUD</li> <li>2400 BAUD</li> <li>4800 BAUD</li> <li>9600 BAUD</li> <li>19200 BAUD</li> <li>38400 BAUD</li> <li>57600 BAUD</li> <li>115200 BAUD</li> </ul>

166

Data transmission mode	ASCII RTU
Data access	Each device parameter can be accessed via Modbus RS485.  For Modbus register information
System integration	Information regarding system integration → ■ 70.  Modbus RS485 information Function codes Register information Response time Modbus data map

# 16.5 Power supply

Terminal	assignment
1 CI IIIIII ai	assignment

→ 🖺 32

Supply voltage	Order code "Power supply"	Terminal voltage	!	Frequency range
	Option I	DC 24 V	±20%	-
	Option I	AC 100 to 240 V	-15+10%	50/60 Hz

#### Power consumption

#### Transmitter

Max. 10 W (active power)

switch-on current	Max. 36 A (<5 ms) as per NAMUR Recommendation NE 21

#### Current consumption

#### Transmitter

- Max. 400 mA (24 V)
- Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)

#### Power supply failure

- Totalizers stop at the last value measured.
- Depending on the device version, the configuration is retained in the device memory or in the pluggable data memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

# Overcurrent protection element

The device must be operated with a dedicated circuit breaker, as it does not have an ON/OFF switch of its own.

- The circuit breaker must be easy to reach and labeled accordingly.
- Permitted nominal current of the circuit breaker: 2 A up to maximum 10 A.

Electrical connection

→ 🖺 33

Potential equalization

→ 🖺 36

## Terminals

Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to  $2.5\ mm^2$  (24 to 12 AWG).

#### Cable entries

- Cable gland: M20  $\times$  1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
  - NPT ½"
  - G ½" ■ M20
- Cable specification

→ 🖺 29

### Overvoltage protection

Mains voltage fluctuations	→ 🖺 167
Overvoltage category	Overvoltage category II
Short-term, temporary overvoltage	Between cable and ground up to 1200 V, for max. 5 s
Long-term, temporary overvoltage	Between cable and ground up to 500 V

## 16.6 Performance characteristics

# Reference operating conditions

- Maximum permissible error according to ISO/DIN 11631
- Calibration gas: dry air
- Accuracy information is based on accredited calibration rigs that are traced to ISO 17025.


# Maximum measurement error

o.r. = of reading; o.f.s. = of full scale value; abs. = absolute; T = medium temperature

#### Volume flow

Standard Order code for "Flow calibration", option A "1%"	■ ±1.0 % o.r. for 3 to 40 m/s (9.84 to 131.2 ft/s) ■ ±2.0 % o.r. for 0.3 to 3 m/s (0.98 to 9.84 ft/s)
Optional Order code for "Flow calibration", option C "0.50%"	■ ±0.5 % o.r. for 3 to 40 m/s (9.84 to 131.2 ft/s) ■ ±1.0 % o.r. for 0.3 to 3 m/s (0.98 to 9.84 ft/s)
Optional Order code for "Flow calibration", option D "0.50%, traceable to ISO/IEC 17025"	■ ±0.5 % o.r. for 3 to 40 m/s (9.84 to 131.2 ft/s) ■ ±1.0 % o.r. for 0.3 to 3 m/s (0.98 to 9.84 ft/s)

- The measuring device may be operated for flow velocities 40 to 60 m/s (131.2 to 196.8 ft/s), but larger measurement errors may then occur.
- The specification applies to Reynolds numbers Re  $\geq$  10 000. Larger measurement errors may occur for Reynolds numbers Re < 10 000.

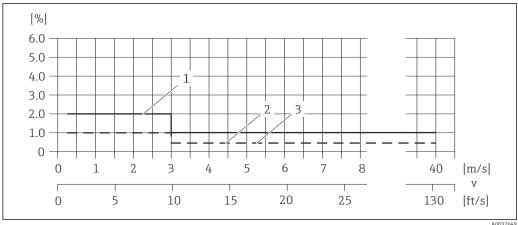

■ 35 Maximum measurement error (volume flow) in % of reading

- Standard (order code for "Flow calibration", option A "1%")
- Optional (order code for "Flow calibration", option C "0.50%")
- Optional (order code for "Flow calibration", option D "0.50%, traceable to ISO/IEC 17025"

#### Corrected volume flow

Standard Order code for "Flow calibration", option A "1%"	■ ±1.2 % o.r. for 3 to 40 m/s (9.84 to 131.2 ft/s) ■ ±2.1 % o.r. for 0.3 to 3 m/s (0.98 to 9.84 ft/s)
Optional Order code for "Flow calibration", option C "0.50%"	■ ±0.8 % o.r. for 3 to 40 m/s (9.84 to 131.2 ft/s) ■ ±1.2 % o.r. for 0.3 to 3 m/s (0.98 to 9.84 ft/s)
Optional Order code for "Flow calibration", option D "0.50%, traceable to ISO/IEC 17025"	■ ±0.8 % o.r. for 3 to 40 m/s (9.84 to 131.2 ft/s) ■ ±1.2 % o.r. for 0.3 to 3 m/s (0.98 to 9.84 ft/s)

- The specification for corrected volume flow applies to the integrated temperature and pressure measurement (order code for "Measuring tube; Transducer; Sensor version", option AC "316L; Titanium Gr. 2; integrated pressure + temperature measurement"), when the pressure measuring cell is operated in the optimum pressure measurement range.
- The measuring device may be operated for flow velocities 40 to 60 m/s (131.2 to 196.8 ft/s), but larger measurement errors may then occur.
- The specification applies to Reynolds numbers Re  $\geq$  10000. Larger measurement errors may occur for Reynolds numbers Re < 10000.

#### **Temperature**

Optional (order code for "Measuring tube; Transducer; Sensor version", option AB "316L; Titanium Gr. 2; temperature measurement integrated or AC "316L; titanium gr. 2; integrated pressure + temperature measurement")  $\pm 0.35 \,^{\circ}\text{C} \pm 0.002 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.63 \,^{\circ}\text{F} \pm 0.0011 \cdot (\text{T} - 32) \,^{\circ}\text{F})$ 

The additional measurement error caused by heat conduction is not taken into consideration here. The error caused by heat conduction can be reduced by using thermal insulation  $\rightarrow \triangle 24$ .

#### Pressure

Optional (order code for "Measuring tube; Transducer; Sensor version", option AC "316L; Titanium Gr. 2; integrated pressure + temperature measurement")

The specific measurement errors refer to the position of the measurement in the measuring pipe and do not correspond to the pressure in the pipe connection line upstream or downstream from the measuring device.

	Nominal value absolute	Pressure ranges and measurement errors	
component"	[bar (psi)]	Pressure range, absolute [bar (psi)]	Measurement error, absolute
Option B "Pressure measuring cell	2 bar (30 psi)	$0.01 (0.1) \le p \le 0.4 (5.8)$	±0.5 % of 0.4 bar (5.8 psi)
2bar/29psi abs"		$0.4 (5.8) \le p \le 2 (29)$	±0.5 % o.r.
Option C "Pressure measuring cell	4 bar (60 psi)	$0.01 (0.1) \le p \le 0.8 (11.6)$	±0.5 % of 0.8 bar (11.6 psi)
4bar/58psi abs"		$0.8 (11.6) \le p \le 4 (58)$	±0.5 % o.r.
Option D "Pressure measuring cell	10 bar (150 psi)	$0.01 (0.1) \le p \le 2 (29)$	±0.5 % of 2 bar (29 psi)
10bar/145psi abs"		2 (29) $\le p \le 10 (145)$	±0.5 % o.r.
Option E "Pressure measuring cell	40 bar (600 psi)	$0.01 (0.1) \le p \le 8 (116)$	±0.5 % of 8 bar (116 psi)
40bar/580psi abs"		8 (116) $\le p \le 40 (580)$	±0.5 % o.r.
Option F "Pressure measuring cell	100 bar (1500 psi)	$0.01 (0.1) \le p \le 20 (290)$	±0.5 % of 20 bar (290 psi)
100bar/1450psi abs"		$20 (290) \le p \le 100 (1450)$	±0.5 % o.r.

## Sound velocity

±0.2 % o.r.

### Accuracy of outputs

The outputs have the following base accuracy specifications.

Current output

Accuracy	±5 μA
	· ·

Pulse/frequency output

o.r. = of reading

Accuracy	Max. ±50 ppm o.r. (over the entire ambient temperature range)
----------	---

### Repeatability

o.r. = of reading

#### Volume flow

- ±0.2 % o.r. for 3 to 40 m/s (9.84 to 131.2 ft/s)
- ±0.4 % o.r. for 0.3 to 3 m/s (0.98 to 9.84 ft/s)

## Corrected volume flow

- ±0.25 % o.r. for 3 to 40 m/s (9.84 to 131.2 ft/s)
- ±0.45 % o.r. for 0.3 to 3 m/s (0.98 to 9.84 ft/s)

#### **Temperature**

 $\pm 0.175 \,^{\circ}\text{C} \pm 0.001 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.315 \,^{\circ}\text{F} \pm 0.00055 \cdot (\text{T} - 32) \,^{\circ}\text{F})$ 

#### Pressure

Optional (order code for "Measuring tube; Transducer; Sensor version", option AC "316L; Titanium Gr. 2; integrated pressure + temperature measurement")

Order code for "Pressure Nominal value absolute	Pressure ranges and measurement errors		
component"	[bar (psi)]	Pressure range, absolute [bar (psi)]	Measurement error, absolute
Option B "Pressure measuring cell 2bar/29psi abs"	2 bar (30 psi)	0.01 (0.1) $\leq$ p $\leq$ 0.4 (5.8) 0.4 (5.8) $\leq$ p $\leq$ 2 (29)	±0.1 % of 0.4 bar (5.8 psi) ±0.1 % o.r.
Option C "Pressure measuring cell 4bar/58psi abs"	4 bar (60 psi)	$ 0.01 (0.1) \le p \le 0.8 (11.6)  0.8 (11.6) \le p \le 4 (58) $	±0.1 % of 0.8 bar (11.6 psi) ±0.1 % o.r.
Option D "Pressure measuring cell 10bar/145psi abs"	10 bar (150 psi)	$ 0.01 (0.1) \le p \le 2 (29) $ $ 2 (29) \le p \le 10 (145) $	±0.1 % of 2 bar (29 psi) ±0.1 % o.r.
Option E "Pressure measuring cell 40bar/580psi abs"	40 bar (600 psi)	0.01 (0.1) \le p \le 8 (116) 8 (116) \le p \le 40 (580)	±0.1 % of 8 bar (116 psi) ±0.1 % o.r.
Option F "Pressure measuring cell 100bar/1450psi abs"	100 bar (1500 psi)	$0.01 (0.1) \le p \le 20 (290)$ $20 (290) \le p \le 100 (1450)$	±0.1 % of 20 bar (290 psi) ±0.1 % o.r.

### Sound velocity

±0.04 % o.r.

# Influence of ambient temperature

## **Current output**

Temperature coefficient	Max. 1 μA/°C
-------------------------	--------------

## Pulse/frequency output

t No additional effect. Included in accuracy.
---

# 16.7 Mounting

Mounting requirements

→ 🖺 21

## 16.8 Environment

# Ambient temperature range

→ 🖺 23

## Temperature tables



Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.



For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

## Storage temperature

All components except display modules:

 $-40 \text{ to } +80 \,^{\circ}\text{C} (-40 \text{ to } +176 \,^{\circ}\text{F})$ , preferably at  $+20 \,^{\circ}\text{C} (+68 \,^{\circ}\text{F})$ 

## Display modules

-40 to +80 °C (-40 to +176 °F)

Relative humidity	The device is suitable for use in outdoor and indoor areas with a relative humidity of 4 to 95%.			
Operating height	According to EN 61010-1  ■ ≤ 2 000 m (6 562 ft)  ■ > 2 000 m (6 562 ft) with additional overvoltage protection (e.g. Endress+Hauser HAW Series)			
Degree of protection	Transmitter			
	<ul> <li>IP66/67, Type 4X enclosure, suitable for pollution degree 4</li> <li>When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2</li> <li>Display module: IP20, Type 1 enclosure, suitable for pollution degree 2</li> </ul>			
	Optional			
	External WLAN antenna IP67			
Shock and vibration	Vibration sinusoidal, in accordance with IEC 60068-2-6			
resistance	■ 2 to 8.4 Hz, 3.5 mm peak ■ 8.4 to 2 000 Hz, 1 g peak			
	Vibration broad-band random, according to IEC 60068-2-64			
	<ul> <li>■ 10 to 200 Hz, 0.003 g²/Hz</li> <li>■ 200 to 2 000 Hz, 0.001 g²/Hz</li> <li>■ Total: 1.54 g rms</li> </ul>			
	Shock half-sine, according to IEC 60068-2-27			
	6 ms 30 g			
	Rough handling shocks according to IEC 60068-2-31			
Electromagnetic	As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)			
compatibility (EMC)	Details are provided in the Declaration of Conformity.			
	This unit is not intended for use in residential environments and cannot guarantee adequate protection of the radio reception in such environments.			
	16.9 Process			
Medium temperature range	Sensor  ■ Without integrated pressure measuring cell: -50 to +150 °C (-58 to +302 °F)  ■ With integrated pressure measuring cell: -50 to +100 °C (-58 to +212 °F)			
Sound velocity range	200 to 600 m/s (656 to 1969 ft/s)			
Medium pressure range	Min. medium pressure: 0.7 bar (10.2 psi) absolute			

The maximum permitted medium pressure is defined by the pressure/temperature curves (see the "Technical Information" document) and the pressure specifications of the integrated pressure measuring cell (optional; order code for "Measuring tube; transducer; sensor version", option AC "316L; Titanium Gr. 2; pressure + temperature measurement integrated").

## **WARNING**

The maximum pressure for the measuring device depends on the lowest-rated element with regard to pressure.

- ▶ Note specifications regarding the pressure range of the pressure measuring cell.
- ► The Pressure Equipment Directive (2014/68/EU) uses the abbreviation "PS". The abbreviation "PS" corresponds to the MWP (maximum working pressure) of the pressure measuring cell.
- ► The MWP for the pressure measuring cell depends on the lowest-rated element, with regard to pressure, of the selected components, i.e. the process connection must be taken into consideration in addition to the pressure measuring cell. Also take the pressure/temperature dependency into consideration.
- ► The MWP may be applied at the device for an unlimited period. The MWP is indicated on the nameplate. This value refers to a reference temperature of +20 °C (+68 °F) and may be applied to the pressure measuring cell for an unlimited time.
- ► The OPL (over pressure limit = sensor overload limit) for the measuring device depends on the lowest-rated element, with regard to pressure, of the selected components, i.e. the process connection has to be taken into consideration in addition to the pressure measuring cell. Also take the pressure/temperature dependency into consideration.
- ► The test pressure corresponds to the over pressure limit of the pressure measuring cell and may be applied only temporarily to ensure that the measurement is within the specifications and no permanent damage occurs.

Pressure measuring cell	Maximum sensor measuring range		MWP	OPL
	Lower (LRL) Upper (URL)			
	[bar (psi)]	[bar (psi)]	[bar (psi)]	[bar (psi)]
2 bar (30 psi)	0 (0)	+2 (+30)	6.7 (100.5)	10 (150)
4 bar (60 psi)	0 (0)	+4 (+60)	10.7 (160.5)	16 (240)
10 bar (150 psi)	0 (0)	+10 (+150)	25 (375)	40 (600)
40 bar (600 psi)	0 (0)	+40 (+600)	100 (1500)	160 (2400)
100 bar (1500 psi)	0 (0)	+100 (+1500)	100 (1500)	160 (2400)

Pressure-temperature ratings



For an overview of the pressure-temperature ratings for the process connections, see the Technical Information

Rupture disk

The neck of the measuring device is always fitted with a rupture disk with a triggering pressure of 10 to 15 bar (145 to 217.5 psi). The rupture disk is used for leak detection and for the controlled release of pressure in the neck of the measuring device. The measuring device with an installed rupture disk meets the dual seal requirements of ANSI/ ISA-12.27.01.

Flow limit

The diameter of the pipe and the flow rate determine the nominal diameter of the sensor.

- For an overview of the full scale values for the measuring range, see the "Measuring range" section  $\rightarrow \stackrel{\triangle}{=} 158$
- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- In most applications, 10 to 50 % of the maximum full scale value can be considered ideal.

Pressure loss

No pressure loss occurs if the sensor is installed in a pipe with the same nominal diameter.

#### Thermal insulation

For optimum measurement performance, make sure that no heat transfer (heat loss or heat supply) can take place at the sensor. This can be ensured by installing thermal insulation. The formation of condensation in the measuring device can also be limited in this way.


Thermal insulation is particularly recommended in situations in which the difference between the process temperature and ambient temperature is large. This difference leads to an error during temperature measurement that is caused by heat conduction (known as the "heat conduction error").

#### **MARNING**

#### Electronics overheating on account of thermal insulation!

- ► Recommended orientation: horizontal orientation, transmitter housing pointing downwards.
- Do not insulate the transmitter housing.
- ► Maximum permissible temperature at the lower end of the transmitter housing: 80°C (176°F)
- ▶ Thermal insulation with extended neck free: We recommend that you do not insulate the extended neck in order to ensure optimum dissipation of heat.

The thermal insulation should never cover the transmitter housing and the pressure measuring cell.

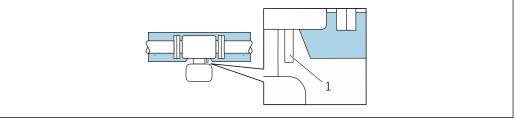

Thermal insulation with free extended neck and pressure measuring cell

Pressure measuring cell

## 16.10 Mechanical construction

## Design, dimensions



For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

#### Weight

Weight specifications (exclusive of packaging material) including transmitter as per order code for "Housing", option A "Aluminum, coated".

Different values due to different transmitter versions:

- Transmitter version for the hazardous area (Order code for "Housing", option A "Aluminum, coated"; Ex d): +2 kg (+4.4 lbs)
- Cast transmitter version. stainless (Order code for "Housing", option L "Cast, stainless"): +6 kg (+13 lbs)

174

## Weight in SI units

Nominal diameter		EN (DIN) [kg]			
		Pressure rating			
[mm]	[in]	PN 16	PN 40	PN 63	PN 100
25	1	12	12	15	15
50	2	18	18	21	24
80	3	24	24	28	32
100	4	26	29	35	42
150	6	38	45	65	79
200	8	54	74	101	131
250	10	79	117	145	208
300	12	110	164	204	300

Nominal d	liameter	ASME [kg]				
			Pressure rating			
[mm]	[in]	Class 150 RF Sch.40	Class 300 RF Sch.40	Class 300 RF Sch.80	Class 600 RF Sch.80	
25	1	12	13	13	14	
50	2	17	19	19	21	
80	3	24	27	27	31	
100	4	29	37	38	52	
150	6	42	58	58	91	
200	8	69	94	96	139	
250	10	96	136	139	225	
300	12	145	196	201	281	

## Weight in US units

Nominal d	al diameter ASME [lbs]				
		Pressure rating			
[mm]	[in]	Class 150 RF Sch.40	Class 300 RF Sch.40	Class 300 RF Sch.80	Class 600 RF Sch.80
25	1	26	29	29	31
50	2	37	42	42	46
80	3	53	60	60	68
100	4	64	82	84	115
150	6	93	128	128	201
200	8	152	207	212	306
250	10	212	300	306	496
300	12	320	432	443	620

Materials

## Transmitter housing

Order code for "Housing":


- Option A "Aluminum, coated": aluminum, AlSi10Mg, coated
- Option L "Cast, stainless": cast, stainless steel, 1.4409 (CF3M)

#### Window material

Order code for "Housing":

- Option **A** "Aluminum, coated": glass
- Option L "Cast, stainless": glass

#### Cable entries/cable glands

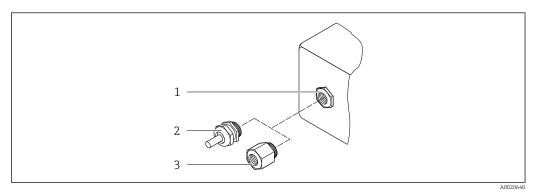

■ 37 Possible cable entries/cable glands

- 1 Female thread M20 × 1.5
- 2 Cable gland  $M20 \times 1.5$
- 3 Adapter for cable entry with female thread G ½" or NPT ½"

Order code for "Housing", option A "Aluminum, coated"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material	
Compression fitting M20 × 1.5	Non-Ex: plastic	
Compression riting Wi20 × 1.9	Z2, D2, Ex d/de: brass with plastic	
Adapter for cable entry with female thread G 1/2"	Nickel-plated brass	
Adapter for cable entry with female thread NPT 1/2"		

Order code for "Housing", option L "Cast, stainless"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Stainless steel, 1.4404 (316L)
Adapter for cable entry with female thread G 1/2"	
Adapter for cable entry with female thread NPT ½"	

#### Measuring pipe

Stainless steel: 1.4408/1.4409 (CF3M)



- If the order code for "Additional approval", option LR "NACE MR0175 / ISO 15156 (wetted parts), declaration" or LS "NACE MR0103 / ISO 17945 (wetted parts), declaration" was ordered, all the metal materials used meet the NACE MR0175 and NACE MR0103 standards.
- The seal material is tested in accordance with NACE TM0187 and NORSOK M710-B.

#### **Process connections**

Stainless steel: 1.4404 (316, 316L)



Available process connections → 🗎 177

#### Cable for transmitter neck/ultrasonic transducer

Including connections for transmitter neck and ultrasonic transducer Stainless steel: 1.4404 (316, 316L)

#### Ultrasonic transducer

Grade 2 titanium

Sensor holder: stainless steel: 1.4404 (316, 316L)

#### Seal for ultrasonic transducer

FKM material group

## **▲** DANGER

#### The ultrasonic transducer may not be leak-tight!

Toxic and/or explosive gases may escape!

- ▶ The material of the seal is not suitable for applications in pure steam.
- ► The material of the seal must not be exposed to a pressure increase at low process temperatures below -40 °C (-40 °F).

#### Temperature sensor

Stainless steel: 1.4404 (316, 316L)

#### Seal for temperature sensor

Seal-free (self-sealing NPT thread with sealant)

#### Pressure measuring cell

Stainless steel: 1.4404 (316, 316L)

#### Seal for pressure measuring cell

Seal-free (self-sealing NPT thread with sealant)

#### Accessories

Protective cover

Stainless steel, 1.4404 (316L)

#### External WLAN antenna

- Antenna: ASA plastic (acrylonitrile styrene acrylate) and nickel-plated brass
- Adapter: Stainless steel and nickel-plated brass
- Cable: Polyethylene
- Plug: Nickel-plated brass
- Angle bracket: Stainless steel

#### Process connections

#### Flanges:

- EN 1092-1-B1
- ASME B16.5

## 16.11 Display and user interface

#### Languages

Can be operated in the following languages:


- Via local operation
   English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish,
   Chinese, Japanese, Korean, Vietnamese, Czech, Swedish
- Via web browser
   English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish,
   Chinese, Japanese, Vietnamese, Czech, Swedish
- Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese

#### Local operation

#### Via display module

### Equipment:

- Order code for "Display; operation", option F "4-line, illuminated, graphic display; touch control"
- Order code for "Display; operation", option G "4-line, illuminated, graphic display; touch control + WLAN"
- 🚹 Information about WLAN interface → 🖺 66

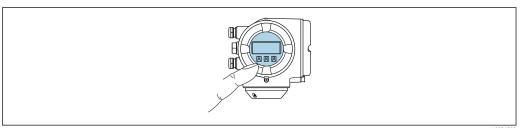

■ 38 Operation with touch control


#### Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured

### Operating elements


- External operation via touch control (3 optical keys) without opening the housing:  $\boxdot$ ,
- Operating elements also accessible in the various zones of the hazardous area

### Via remote display and operating module DKX001

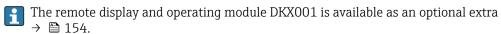

- The measuring device is always supplied with a dummy cover when the remote display and operating module DKX001 is ordered directly with the measuring device. Display or operation at the transmitter is not possible in this case.
- If ordered subsequently, the remote display and operating module DKX001 may not be connected at the same time as the existing measuring device display module.
   Only one display or operation unit may be connected to the transmitter at any one time.

178

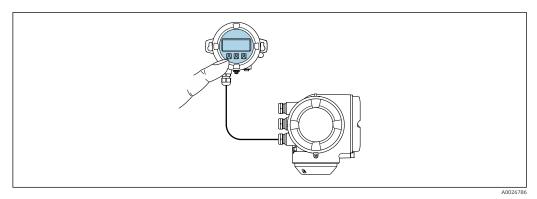

Operation via remote display and operating module DKX001

### Display and operating elements

The display and operating elements correspond to those of the display module  $\rightarrow \blacksquare 178$ .

### Housing material

The housing material of the display and operating module DKX001 depends on the choice of transmitter housing material.

Transmitter housing		Remote display and operating module		
Order code for "Housing" Material		Order code for "Housing"	Material	
Option A "Aluminum, coated"	AlSi10Mg, coated	Option C "Single compartment, aluminum, coated"	AlSi10Mg, coated	
Option L "Cast, stainless"	Cast stainless steel, 1.4409 (CF3M) similar to 316L	Option A "Single compartment; cast, stainless"	1.4409 (CF3M)	

## Cable entry

Corresponds to the choice of transmitter housing, order code for "Electrical connection".

#### Connecting cable

→ 🖺 30

#### **Dimensions**



Information about dimensions:

"Mechanical construction" section of the "Technical Information" document.

→ 🖺 65 Remote operation Service interface → 🖺 65 Supported operating tools Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with web browser	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li></ul>	Special Documentation for device
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→ 🖺 155
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→ 🖺 155
Field Xpert	SMT70/77/50	<ul><li>All Fieldbus protocols</li><li>WLAN interface</li><li>Bluetooth</li><li>CDI-RJ45 service interface</li></ul>	Operating Instructions BA01202S Device description files: Use update function of handheld terminal
SmartBlue App	Smart phone or tablet with iOs or Android	WLAN	→ 🖺 155

- Other operating tools based on FDT technology with a device driver such as DTM/ iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:
  - Field Device Manager (FDM) from Honeywell → www.process.honeywell.com
  - FieldMate from Yokogawa → www.yokogawa.com
  - PACTWare → www.pactware.com

The related device description files are available: www.endress.com → Download Area

#### Web server

With the integrated web server, the device can be operated and configured via a web browser service interface (CDI-RJ45) or WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is displayed and can be used to monitor device health. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

#### *Supported functions*

Data exchange between the operating unit (such as a notebook, for example,) and measuring device:

- Upload the configuration from the measuring device (XML format, configuration backup).
- Save the configuration to the measuring device (XML format, restore configuration).
- Export event list (.csv file)
- Export parameter settings (.csv file or PDF file, document the measuring point configuration)
- Flash firmware version for device firmware upgrade, for example
- Download driver for system integration

HistoROM data management

The measuring device features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.



When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

### Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	HistoROM backup	T-DAT	S-DAT
Available data	<ul> <li>Event logbook, e.g. diagnostic events</li> <li>Parameter data record backup</li> <li>Device firmware package</li> </ul>	<ul> <li>Measured value logging ("Extended HistoROM" order option)</li> <li>Current parameter data record (used by firmware at run time)</li> <li>Indicator (minimum/maximum values)</li> <li>Totalizer value</li> </ul>	<ul> <li>Sensor data: e.g. nominal diameter</li> <li>Serial number</li> <li>Calibration data</li> <li>Device configuration (e.g. SW options, fixed I/O or multi I/O)</li> </ul>
Storage location	Fixed on the user interface PC board in the connection compartment	Can be plugged into the user interface PC board in the connection compartment	In the sensor plug in the transmitter neck part

### Data backup

#### **Automatic**

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If exchanging the electronics module (e.g. I/O electronics module): Once the electronics module has been replaced, the software of the module is compared against the current device firmware. The module software is upgraded or downgraded where necessary. The electronics module is available for use immediately afterwards and no compatibility problems occur.

### Manual

Additional parameter data record (complete parameter settings) in the integrated device memory HistoROM backup for:

- Data backup function
   Backup and subsequent restoration of a device configuration in the device memory
   HistoROM backup
- Data comparison function
   Comparison of the current device configuration with the device configuration saved in the device memory HistoROM backup

### Data transmission

### Manual

Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)

### **Event list**

#### Automatic

- Chronological display of up to 20 event messages in the events list
- If the Extended HistoROM application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.q. DeviceCare, FieldCare or Web server

### Data logging

### Manual

If the **Extended HistoROM** application package (order option) is enabled:

- Recording of 1 to 4 channels of up to 1000 measured values (up to 250 measured values per channel)
- User configurable recording interval
- Export the measured value log via a variety of interfaces and operating tools e.g.
   FieldCare, DeviceCare or web server

# 16.12 Certificates and approvals

Current certificates and approvals for the product are available at <a href="https://www.endress.com">www.endress.com</a> on the relevant product page:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select **Downloads**.

CE mark

The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

UKCA marking

The device meets the legal requirements of the applicable UK regulations (Statutory Instruments). These are listed in the UKCA Declaration of Conformity along with the designated standards. By selecting the order option for UKCA marking, Endress+Hauser confirms a successful evaluation and testing of the device by affixing the UKCA mark.

Contact address Endress+Hauser UK:

Endress+Hauser Ltd.

Floats Road

Manchester M23 9NF

United Kingdom

www.uk.endress.com

RCM marking

The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

Ex approval

The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.

182

# Pressure Equipment Directive

- With the marking
  - a) PED/G1/x (x = category) or
  - b) PESR/G1/x (x = category)

on the sensor nameplate, Endress+Hauser confirms compliance with the "Essential Safety Requirements"

- a) specified in Annex I of the Pressure Equipment Directive 2014/68/EU or
- b) Schedule 2 of Statutory Instruments 2016 No. 1105.
- Devices not bearing this marking (without PED or PESR) are designed and manufactured according to sound engineering practice. They meet the requirements of
  - a) Art. 4 Para. 3 of the Pressure Equipment Directive 2014/68/EU or
  - b) Part 1, Para. 8 of Statutory Instruments 2016 No. 1105.

The scope of application is indicated

- a) in diagrams 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU or
- b) Schedule 3, Para. 2 of Statutory Instruments 2016 No. 1105.

### Radio approval

The measuring device has radio approval.



### Additional certification

### **CRN** approval

Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.

### Tests and certificates

- EN10204-3.1 material certificate, wetted parts and sensor housing (order code for "Test, certificate", option JA)
- Pressure test, internal process, Heartbeat Technology verification report (order code for "Test, certificate", option JB)
- Ambient temperature -50 °C (-58 °F) (order code for "Test, certificate", option JP)
- Helium leak testing, internal procedure, Heartbeat Technology verification report (order code for "Test, certificate", option KC)
- EN10204-2.1 confirmation of compliance with the order and EN10204-2.2 test report

### Testing of welds

Order code for "Test, certificate", option	Radiographic testing standard		Process connection
	ISO 10675-1 ZG1	ASME B31.3 NFS	
KE	х		RT
KI		Х	RT
K5	х		DR
K6		Х	DR
DT _ Dadic avanhis testing DD _ Digital and is graphy			

RT = Radiographic testing, DR = Digital radiography
All options with test report

# External standards and quidelines

■ EN 60529

Degrees of protection provided by enclosure (IP code)

■ EN 61010-1

Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements

■ IEC/EN 61326-2-3

Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).

■ NAMUR NE 21

Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment

NAMUR NE 32

Data retention in the event of a power failure in field and control instruments with microprocessors

NAMUR NE 43

Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.

NAMUR NE 53

Software of field devices and signal-processing devices with digital electronics

■ NAMUR NE 105

Specifications for integrating fieldbus devices in engineering tools for field devices

NAMUR NE 107

Self-monitoring and diagnosis of field devices

■ NAMUR NE 131

Requirements for field devices for standard applications

ETSI EN 300 328

Guidelines for 2.4 GHz radio components.

■ EN 301489

Electromagnetic compatibility and radio spectrum matters (ERM).

AGA Report No. 9

Measurement of gas by multipath ultrasonic meters.

■ ISO 17089

Measurement of fluid flow in closed conduits — Ultrasonic meters for gas.

# 16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.



Detailed information on the application packages:

Special Documentation  $\rightarrow \blacksquare 187$ 

### Diagnostic functionality

Order code for "Application package", option EA "Extended HistoROM"

Comprises extended functions concerning the event log and the activation of the measured value memory.

Event log:

Memory volume is extended from 20 message entries (standard version) to up to 100 entries.

Data logging (line recorder):

- Memory capacity for up to 1000 measured values is activated.
- 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user.
- Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.



For detailed information, see the Operating Instructions for the device.

Heartbeat Technology

Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

### Heartbeat Verification

Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment".

- Functional testing in the installed state without interrupting the process.
- Traceable verification results on request, including a report.
- Simple testing process via local operation or other operating interfaces.
- Clear measuring point assessment (pass/fail) with high total test coverage within the framework of manufacturer specifications.
- Extension of calibration intervals according to operator's risk evaluation.

### **Heartbeat Monitoring**

Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:

- Draw conclusions using these data and other information about the impact the measuring application has on the measuring performance over time.
- Schedule servicing in time.
- Monitor the process or product quality.



For detailed information, see the Special Documentation for the device.

### Advanced gas analysis

Order code for "Application package", option EF "Advanced gas analysis". The application package can only be ordered in combination with the order code for "Measuring tube; Transducer; Sensor version", option AC "316L; Titanium Gr. 2; pressure + temperature measurement integrated".

The application package can be used to calculate the most important gas properties (molar mass, gross calorific value, Wobbe index etc.).

The following gas types are available:

- Single gas (known gas)
- Gas mixture (known composition)
- Coal gas/biogas (measurement of methane fraction)
- Natural gas standardized calculation (with internationally recognized gas models: AGA NX-19, ISO 12213-2, ISO 12213-3, AGA 5, ISO 6976)
- Natural gas use of sound velocity (sound velocity-based model for measuring a natural gas whose composition is unknown or variable)
- User-specific gas (generic gas or gas mixture without knowledge of the composition of the gas)

### 16.14 Accessories



Overview of accessories available for order  $\rightarrow \implies 154$ 

# 16.15 Supplemental documentation



For an overview of the scope of the associated Technical Documentation, refer to the following:

- Device Viewer (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- Endress+Hauser Operations app: Enter serial number from nameplate or scan matrix code on nameplate.

# Standard documentation Brief Operating Instructions

# Brief Operating Instructions for the sensor

Measuring device	Documentation code
Proline Prosonic Flow G	KA01374D

# Brief Operating Instructions for transmitter

Measuring device	Documentation code
Proline 300	KA01376D

### **Technical Information**

Measuring device	Documentation code
Prosonic Flow G 300	TI01385D

# **Description of Device Parameters**

Measuring device	Documentation code
Prosonic Flow 300	GP01131D

Supplementary device- Safety dependent documentation Safety

**Safety Instructions** 

Safety instructions for electrical equipment for hazardous areas.

Contents	Documentation code
ATEX/IECEx Ex d / Ex de	XA01844D
ATEX/IECEx Ex ec	XA01845D
cCSAus Ex d / Ex de	XA01846D
cCSAus Ex nA	XA01847D
cCSAus XP	XA01848D
EAC Ex d / Ex de	XA02469D
EAC Ex nA	XA02470D
JPN Ex d	XA02076D
KCs Ex d	XA03192D
INMETRO Ex Ex d / Ex de	XA01995D
INMETRO Ex ec	XA01996D
NEPSI Ex Ex d / Ex de	XA02043D
NEPSI Ex nA	XA02044D
UKEX Ex Ex d / Ex de	XA02574D
UKEX Ex ec	XA02575D

# Remote display and operating module DKX001

Contents	Documentation code
ATEX/IECEx Ex i	XA01494D
ATEX/IECEx Ex ec	XA01498D

Contents	Documentation code
cCSAus IS	XA01499D
cCSAus Ex nA	XA01513D
INMETRO Ex i	XA01500D
INMETRO Ex ec	XA01501D
NEPSI Ex i	XA01502D
NEPSI Ex nA	XA01503D

# Special documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Remote display and operating module DKX001	SD01763D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
Advanced gas analysis	SD02350D
Heartbeat Technology	SD02303D
Web server	SD02310D

# **Installation Instructions**

Contents	Comment
Installation instructions for spare part sets and accessories	<ul> <li>Access the overview of all the available spare part sets via <i>Device Viewer</i> →          □ 152</li> <li>Accessories available for order with Installation Instructions →          □ 154</li> </ul>

# Index

A	D
Access authorization to parameters	Date of manufacture
Read access	Declaration of Conformity
Write access	Defining the access code
Access code	Degree of protection
Incorrect input	Design
Adapting the diagnostic behavior	Operating menu
Additional certification	Device components
Ambient conditions	Device description files
Operating height	Device locking, status
Relative humidity	Device name
Shock and vibration resistance 172	Sensor
Storage temperature	Transmitter
Ambient temperature	Device repair
Influence	Device revision
Ambient temperature range 23, 172	Device type code
Application	Device Viewer
Application packages	DeviceCare
Applicator	Device description file
Approvals	Diagnosis
Auto scan buffer	Symbols
see Modbus RS485 Modbus data map	Diagnostic behavior
	Explanation
C	Symbols
Cable entries	Diagnostic information
Technical data	Communication interface
Cable entry	Design, description
Degree of protection 41	DeviceCare
CE mark	FieldCare
Certificates	LEDs
Check	Local display
Connection	Overview
Mounting	Remedial measures
Checklist	Web browser
Post-connection check 41	Diagnostic message
Post-mounting check	Diagnostics list
Cleaning	Dimensions
Exterior cleaning	DIP switch
Commissioning	see Write protection switch
Advanced settings	Direct access
Configuring the measuring device	Disabling write protection
Configuring error response mode, Modbus RS485 138	Display
Connecting cable	see Local display
Connecting the measuring device	Display and operating module DKX001 178
Connecting the signal cables	Display area
Connecting the supply voltage cables	For operational display 46
Connection	In the navigation view 49
see Electrical connection	Display values
Connection cable	For locking status
Connection preparations	Displaying the measured value history 127
Connection tools	Disposal
Context menu	Document
Calling up	Function 6
Closing	Symbols 6
Explanation	Document function 6
Current consumption	

E	Closing
Editing view	Explanation
Input screen	HistoROM
Using operating elements 51, 52	I
Electrical connection	Identifying the measuring device
Computer with web browser (e.g. Microsoft Edge) 65	Incoming acceptance
Degree of protection	Indication
Measuring device	Current diagnostic event
Device Manager, SIMATIC PDM)	Previous diagnostic event
Operating tools	Influence
Via Modbus RS485 protocol 65	Ambient temperature
Via violated 16409 protection	Information about this document 6
Via WLAN interface	Inlet runs
Web server	Input
WLAN interface	Inspection
Electromagnetic compatibility	Received goods
Electronics module	Intended use
Enabling write protection	L
Enabling/disabling the keypad lock 58	
Endress+Hauser services	Languages, operation options
Maintenance	Local display
Repair	Navigation view
Error messages	see Diagnostic message
see Diagnostic messages	see In alarm condition
Event logbook	see Operational display
Events list	Text editor
Ex approval	Low flow cut off
Sensor	
Transmitter	M
Exterior cleaning	Main electronics module
Exterior dealing	Maintenance
F	Maintenance tasks
Field of application	Managing the device configuration
Residual risks	Manufacturer ID
FieldCare	Materials
Device description file	Measured variables
Establishing a connection 68	Calculated
Function 67	Direct
User interface	Optional
Filtering the event logbook	see Process variables
Firmware 70	Measuring and test equipment
Release date	Measuring device
Version	Configuring
Flow direction	Conversion
Flow limit	Disposal
Function codes	Mounting the sensor
Functions	Preparing for electrical connection 32
see Parameters	Preparing for mounting 26
bee I didmeters	Removing
G	Repairs
Galvanic isolation	Structure
TT	Switching on
H	Measuring principle
Hardware write protection	Measuring range recommended 173
Help text	Measuring range, recommended
Calling up	ivicusuming system

Menu	Operational display
Diagnostics	Operational safety
Setup	Order code
Menus	Orientation (vertical, horizontal) 21
For measuring device configuration	Outlet runs
For specific settings	Output signal
Modbus RS485	Output variables
Configuring error response mode 138	D.
Diagnostic information	P
Function codes	Packaging disposal
Modbus data map	Parameter
Read access	Changing
Reading out data	Entering values or text
Register addresses	Parameter settings
Register information	Administration (Submenu)
Response time	Advanced setup (Submenu)
Scan list	Communication (Submenu)
Write access	Configuration backup (Submenu)
Mounting	Current input (Wiscord) 81
Mounting conditions	Current input (Wizard)
Thermal insulation 24, 174	Current input 1 to n (Submenu)
Mounting dimensions	Current output
see Dimensions	Data logging (Submenu)
Mounting location	Define access code (Wizard)
Mounting preparations	Device information (Submenu)
Mounting requirements	Diagnostics (Menu)
Dimensions	Display (Submenu)
Inlet and outlet runs	Display (Wizard)
Mounting location	Double pulse output
Orientation	Double pulse output (Submenu)
Rupture disk	Double pulse output (Wizard)
iviounting tool	Gas analysis (Wizard)
N	I/O configuration
Nameplate	I/O configuration (Submenu) 80
Sensor	Low flow cut off (Wizard) 97
Transmitter	Process variables (Submenu)
Navigation path (navigation view) 49	Pulse/frequency/switch output 86
Navigation view	Pulse/frequency/switch output (Wizard) 86, 87, 90
In the submenu 49	Pulse/frequency/switch output 1 to n (Submenu) 123
In the wizard	Relay output
Netilion	Relay output 1 to n (Submenu) 123
Numeric editor	Relay output 1 to n (Wizard) 92
	Reset access code (Submenu) 110
0	Sensor adjustment (Submenu) 101
Onsite display	Setup (Menu)
Numeric editor	Simulation (Submenu)
Operable flow range	Status input
Operating elements	Status input 1 to n (Submenu) 122
Operating height	Status input 1 to n (Wizard) 82
Operating keys	System units (Submenu)
see Operating elements	System values (Submenu)
Operating menu	Totalizer (Submenu)
Design	Totalizer 1 to n (Submenu)
Menus, submenus	Totalizer handling (Submenu)
Submenus and user roles	Value current output 1 to n (Submenu) 122
Operating philosophy	Web server (Submenu)
Operation	WLAN settings (Wizard)
Operation options	Performance characteristics

190

Post-connection check	Operating language
Post-connection check (checklist) 41	Pulse output
Post-mounting check	Pulse/frequency/switch output 86, 87
Post-mounting check (checklist) 28	Relay output
Potential equalization	Resetting the device
Power consumption	Resetting the totalizer
Power supply failure	Sensor adjustment
Pressure Equipment Directive	Simulation
Pressure loss	Status input
Pressure-temperature ratings 173	Switch output
Process connections	System units
Product safety	Tag name
Protecting parameter settings	Totalizer
31	Totalizer reset
R	WLAN
Radio approval	Shock and vibration resistance
RCM marking	Signal on alarm
Read access	Software release
Reading off measured values	Sound velocity range
Reading out diagnostic information, Modbus RS485 138	Spare part
Recalibration	Spare parts
Reference operating conditions	Special connection instructions
Registered trademarks	Standards and quidelines
Remedial measures	Status area
Calling up	For operational display 46
Closing	In the navigation view 49
Remote operation	Status signals
Repair	Storage concept
Notes	Storage conditions
Repair of a device	Storage temperature
Repeatability	Storage temperature range
Replacement	Structure
Device components	Measuring device
Requirements for personnel	Submenu
Return	Administration
Rupture disk	Advanced setup
Safety instructions	Communication
Triggering pressure	Configuration backup
33 31	Current input 1 to n
S	Data logging
Safety	Device information
Sensor	Display
Mounting	Double pulse output
Serial number	Events list
Setting the operating language	I/O configuration
Settings	Input values
Adapting the measuring device to the process	Measured values
conditions	Output values
Administration	Overview
Advanced display configurations 103	Process variables
Communication interface 79	Pulse/frequency/switch output 1 to n
Current input	Relay output 1 to n
Current output	Reset access code
Double pulse output	Sensor adjustment
Gas analysis	Simulation
I/O configuration 80	Status input 1 to n
Local display	System units
Low flow cut off	System values
Managing the device configuration 108	Totalizer
J J	10ιαπζει

Totalizer 1 to n	
Totalizer handling	
Value current output 1 to n	
Web server	
Supply voltage	
Switch output	
Symbols	
Controlling data entries	
For communication	
For diagnostic behavior 46	
For locking	
For measured variable	
For measurement channel number 46	
For menus	
For parameters	
For status signal	
For submenu	
For wizards	
In the status area of the local display 46	
Input screen	
Operating elements 51	
System design	
Measuring system	
see Measuring device design	
System integration	
Т	
Technical data, overview	
Temperature range	
Ambient temperature range 23	
Ambient temperature range for display 178	
Medium temperature	
Storage temperature	
Terminal assignment	
Terminal assignment	
Tests and certificates	
Text editor	
Thermal insulation	
Tool	
For mounting	
Tool tip	
see Help text	
Tools	
Electrical connection	
Transportation	
Totalizer	
Configuring	
Transmitter	
Turning the display module	
Turning the housing	
Transporting the measuring device	
Troubleshooting	
General	
Turning the display module	
Turning the electronics housing	
see Turning the transmitter housing	
Turning the transmitter housing 27	

U	
UKCA marking	182
Use of measuring device	102
Borderline cases	9
Incorrect use	
see Intended use	
User roles	45
V	
Version data for the device	70
W	
Weight	
Transport (notes)	19
Wizard	17
Current input	81
Current output	
Define access code	
Display	
Double pulse output	
Gas analysis	
Low flow cut off	
Pulse/frequency/switch output	
Relay output 1 to n	
Status input 1 to n	
WLAN settings	
WLAN settings	
Workplace safety	
Write access	57
Write protection	
Via access code	
Via write protection switch	
Write protection switch	115



www.addresses.endress.com