

# Safety Instructions

## Proline Prosonic Flow P 500

Class I Zone 2  
Class I Division 2





# Proline Prosonic Flow P 500

## Table of contents

Associated documentation .....	4
Certificates and declarations .....	4
Manufacturer address .....	4
Extended order code .....	4
Safety instructions: General .....	8
Safety instructions: Installation .....	9
Temperature tables .....	10
Explosion hazards arising from gas and dust .....	12
Connection values: Signal circuits .....	13

**Associated documentation**

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): Enter serial number from nameplate.
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

To commission the device, please observe the Operating Instructions pertaining to the device:

Measuring device	Documentation code	
	HART	Modbus RS485
Prosonic Flow P 500	BA02025D	BA02026D

*Additional documentation*

Contents	Document type	Documentation code
Explosion Protection	Brochure	CP00021Z/11
Control drawing		As wanted on the nameplate.

Please note the documentation associated with the device.

**Certificates and declarations**

**Certificate number**

CSA 16.70087366

**Notified body**

CSA Group

 
**Manufacturer address**

Endress+Hauser Flowtec AG  
 Kägenstrasse 7  
 4153 Reinach BL  
 Switzerland

**Extended order code**

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

### Structure of the extended order code



\* = Placeholder  
 At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

#### Device type

The device and the device design is defined in the "Device type" section (Product root).

#### Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.


#### Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

#### Device type

Position	Order code for	Option selected	Description
1	Instrument family	9	Ultrasonic transit time flowmeter
2	Sensor	P	Sensor type
3	Transmitter	5	Transmitter type: 4-wire, remote version
4	Generation index	B	Platform generation
5, 6	Nominal diameter	DN 15...4000	Nominal diameter of sensor

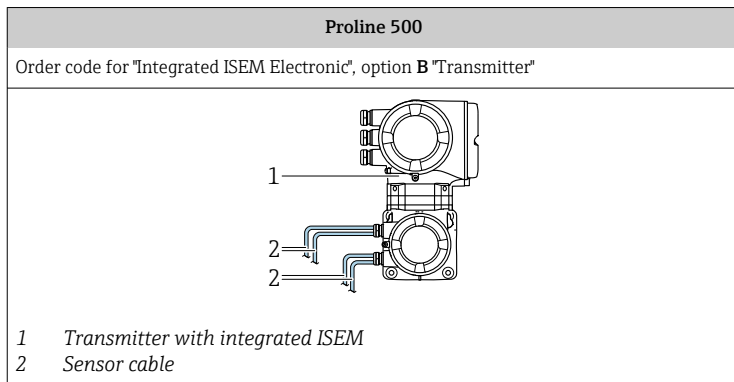

### Basic specifications

Position 1, 2 Order code for "Approval" Option selected	Position 9 Order code for "Integrated ISEM electronics" Option selected	Type of protection	
		Transmitter	Sensor
CS	B	Cl.I, Div.2, Gps. A-D T5...T4	Cl.I, Div.2, Gps. A-D T6...T1 or Cl.I, Div.2, Gps. C-D T6...T1
CZ	B	Cl.I, Zone 2, AEx/Ex ec nC ic [ic] IIC T5...T4 Gc	Cl.I, Zone 2, AEx/Ex ic IIC T6...T1 Gc or Cl.I, Zone 2, AEx/Ex ic IIB T6...T1 Gc

Position	Order code for	Option selected	Description
4, 5	Output, input 1	BA	4-20mA HART
		CA	4-20mA HART Ex-i passive
		CC	4-20mA HART Ex-i active
		MA	Modbus RS485
6	Output, input 2	A	W/o
		B	4-20mA
		C	4-20mA Ex-i passive
		D	Configurable I/O initial setting off
		E	Pulse/frequency/switch output
		F	Pulse output, phase-shifted
		G	Pulse/frequency/switch output Ex-i passive
		H	Relay
		I	4-20mA input

Position	Order code for	Option selected	Description
		J	Status input
7	Output, input 3	A	W/o
		B	4-20mA
		C	4-20mA Ex-i passive
		D	Configurable I/O initial setting off
		E	Pulse/frequency/switch output
		F	Pulse output, phase-shifted
		G	Pulse/frequency/switch output Ex-i passive
		H	Relay
		I	4-20mA input
		J	Status input
8	Display; Operation	F	4-line, illuminated; touch control
		G	4-line, illuminated; touch control + WLAN
9	Integrated ISEM Electronic	B	Transmitter
10	Transmitter Housing	A	Alu, coated
		L	Cast, stainless
12	Sensor Version	AA	C-030
		AB	C-050
		AC	C-100
		AD	C-200
		AE	C-500
		AG	CH-050
		AH	CH-100
14	Process Temperature	A	-20 to +80 °C (-4 to +176 °F)
		B	-40 to +80 °C (-40 to +176 °F)
		C	0 to +170 °C (+32 to +338 °F)
		D	-40 to +100 °C (-40 to +212 °F)
		E	-40 to +150 °C (-40 to +302 °F)
		H	+150 to +220 °C (302 to +428 °F)
		I	+210 to +370 °C (410 to +698 °F)
		J	+350 to +550 °C (+662 to +1022 °F)
19	Device Model	A2	2

## Optional specifications

ID	Order code for	Option selected	Description
Jx	Test, certificate	JN	Ambient temperature transmitter -50 °C; sensor see specification

### Safety instructions: General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations or guidelines (e.g. CEC or NEC)
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- Observe all the technical data of the device (see nameplate).
- In devices with damaged Ex d threads:
  - Use in hazardous areas is not permitted.
  - Repair of Ex d threads is not permitted.
- Avoid electrostatic charge (e.g. caused by friction, cleaning, maintenance, strong currents in the medium):  
On the attached stainless steel nameplate and on painted metallic housings that are not integrated into the local potential equalization system.

### WARNING

#### Substitution of components is not permitted.

- ▶ Substitution of components may impair suitability for Class I, Division 2.



## Safety instructions: Installation

- Continuous service temperature of the connecting cable: –40 to +80 °C (–50 to +60 °C for optional specification, ID Jx (Test, certificate) = JN); but at least according to the operating temperature range of the application plus allowance for process conditions ( $T_{a,min}$  and  $T_{a,max} + 20$  K).
- Only use certified cable glands suitable for the application. Observe selection criteria as per CEC or NEC.
- When the measuring device is connected, attention must be paid to the type of protection at the transmitter.
- In potentially explosive atmospheres:
  - Do not disconnect the electrical connection of the power supply circuit when energized.
  - Do not open the connection compartment cover when the device is energized.
- Install the transmitter circuit wiring according to Canadian Electrical Code (CEC) respective National Electrical Code (NEC) using threaded conduit or other wiring methods in accordance with articles 500 to 510.

### AEx/Ex ec type of protection

- In potentially explosive atmospheres: Do not disconnect the electrical connection of the power supply circuit when energized.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection.
- Only use certified cable entries or sealing plugs.
- Equipment in type of protection AEx/Ex ec, shall be installed using a transient protection not exceeding 140% of the peak rated voltage value at the power supply terminals and IO terminals.

### Optional external WLAN antenna

- Connect the antenna bushing H337 to the transmitter housing and tighten by hand.
- Use only external antennas supplied by Endress+Hauser.
- Connect antenna or antenna cable with plug-in connector type N (MIL-STD-348) to antenna bushing H337.

### Intrinsic safety

Observe the guidelines for interconnecting intrinsically safe circuits (e.g. , proof of intrinsic safety).

### Potential equalization

- Integrate the device into the potential equalization .
- The antenna bushing H337 of the external antenna must be integrated into the potential equalization system. This is the case if the sensor is connected in accordance with the regulations via the coupling.

## Temperature tables

### Ambient temperature

#### Minimum ambient temperature

- $T_a = -40\text{ °C}$  depending on the device version selected (see nameplate)
- *Optional specification, ID Jx (Test, Certificate) = JN*  
 $T_a = -50\text{ °C}$  depending on the selected device variant (see nameplate)

#### Maximum ambient temperature

$T_a = +80\text{ °C}$  depending on the medium temperature, sensor and temperature class.

### Proline 500 transmitter

#### Zone 2 und Class I Division 2

$T_a$ [°C]		
T6 [85 °C]	T5 [100 °C]	T4 [135 °C]
-	45	60

### Medium temperature

#### Minimum medium temperature

$T_{m, \min} = -40\text{ °C}$  depending on the sensor version.

#### Maximum medium temperature

$T_{m, \max}$  for T6...T1 depending on the maximum ambient temperature  $T_a$ .

*Maximum medium temperature with or without thermal insulation according to Endress+Hauser specifications*

For sensor type, temperature range and applicable device group, see name plate.

Sensor type	T <sub>m</sub> [°C]		T <sub>a</sub> [°C]		T <sub>m, max</sub> [°C]					
	min	max	min	max	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
C-030-A	-40	120	-50	80	80	95	120	120	120	120
C-050-A	-20	80	-20	75	80	80	80	80	80	80
				80	-	80	80	80	80	80
C-100-A	-20	80	-20	75	75	80	80	80	80	80
				80	-	80	80	80	80	80
C-100-B	-40	80	-40	70	70	80	80	80	80	80
				80	-	80	80	80	80	80
C-100-C	0	170	-40	70	70	95	130	170	170	170
				80	-	95	130	170	170	170
C-200-B	-40	80	-40	75	75	80	80	80	80	80
				80	-	80	80	80	80	80
C-200-B	-40	80	-40	75	75	95	130	170	170	170
				80	-	95	130	170	170	170
C-200-C	0	170	-40	75	75	95	130	150	150	150
				80	-	95	130	150	150	150
C-500-A	-40	150	-40	75	75	95	130	190	285	435
				80	-	95	130	190	285	435
CH-050-A	-40	435	-50	75	75	95	130	190	285	435
				80	-	95	130	190	285	435
CH-100-A	-40	435	-50	75	75	95	130	190	285	435
				80	-	95	130	190	285	435

## Explosion hazards arising from gas and dust

### Determining the temperature class and surface temperature with the temperature table

- In the case of gas: Determine the temperature class as a function of the maximum ambient temperature  $T_a$  and the maximum medium temperature  $T_m$ .
- In the case of dust: Determine the maximum surface temperature as a function of the maximum ambient temperature  $T_a$  and the maximum medium temperature  $T_m$ .

#### Example

- Measured maximum ambient temperature:  $T_{ma} = 55\text{ °C}$
- Measured maximum medium temperature:  $T_{mm} = 78\text{ °C}$

$T_a$ [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	60	80	80	80	80	80
50	-	80	80	80	80	80
60	-	55	80	80	80	80

A0031268

#### 1 Procedure for determining the temperature class and surface temperature

1. In the column for the maximum ambient temperature  $T_a$  select the temperature that is immediately greater than or equal to the maximum ambient temperature  $T_{ma}$  that is present.

↳  $T_a = 60\text{ °C}$ .

The row showing the maximum medium temperature is determined.

2. Select the maximum medium temperature  $T_m$  of this row, which is immediately greater than or equal to the maximum medium temperature  $T_{mm}$  that is present.

↳ The column with the temperature class for gas is determined:  
 $78\text{ °C} \leq 80\text{ °C} \rightarrow T4$ .

3. The maximum temperature of the temperature class determined corresponds to the maximum surface temperature for dust:  $T4 = 135\text{ °C}$ .

## Connection values: Signal circuits

The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.

### Terminal assignment

*Transmitter: supply voltage, input/outputs*

*HART*

Supply voltage		Input/output 1		Input/output 2		Input/output 3	
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)
Device-specific terminal assignment: adhesive label in terminal cover.							

*Modbus RS485*

Supply voltage		Input/output 1		Input/output 2		Input/output 3	
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)
Device-specific terminal assignment: adhesive label in terminal cover.							

### Safety-related values

Order code "Output; input 1"	Output type	Safety-related values "Output; input 1"	
		26 (+)	27 (-)
Option BA	Current output 4 to 20 mA HART	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$	
Option MA	Modbus RS485	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$	

Order code "Output; input 2"; "Output; input 3"	Output type	Safety-related values			
		Output; input 2		Output; input 3	
		24 (+)	25 (-)	22 (+)	23 (-)
Option B	Current output 4 to 20 mA	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$			
Option D	User-configurable input/output	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$			
Option E	Pulse/frequency/ switch output	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$			
Option F	Pulse output, phase- shifted	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$			

Order code "Output; input 2"; "Output; input 3"	Output type	Safety-related values			
		Output; input 2		Output; input 3	
		24 (+)	25 (-)	22 (+)	23 (-)
Option H	Relay output	$U_N = 30 V_{DC}$ $I_N = 100 mA_{DC}/500 mA_{AC}$ $U_M = 250 V_{AC}$			
Option I	Current input 4 to 20 mA	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$			
Option J	Status input	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$			

### Intrinsically safe values

Order code for "Output; input 1"	Output type	Intrinsically safe values or NIFW values "Output; input 1"	
		26 (+)	27 (-)
Option CA	Current output 4-20mA HART Ex-i passive	$U_i = 30 V$ $I_i = 100 mA$ $P_i = 1.25 W$ $L_i = 0 \mu H$ $C_i = 6 nF$	
Option CC	Current output 4-20mA HART Ex-i active	<b>Ex ic</b> <sup>1)</sup> $U_0 = 21.8 V$ $I_0 = 90 mA$ $P_0 = 491 mW$ $L_0 = 9 mH(IIC)/$ $39 mH(IIB)$ $C_0 = 600 nF(IIC)/$ $4000 nF(IIB)$	

1) Only for the order code for "Approval", option CS, CZ

Order code "Output; input 2"; "Output; input 3"	Output type	Intrinsically safe values or NIFW values			
		Output; input 2		Output; input 3	
		24 (+)	25 (-)	22 (+)	23 (-)
Option C	Current output 4 to 20 mA Ex i passive	$U_i = 30 V$ $I_i = 100 mA$ $P_i = 1.25 W$ $L_i = 0$ $C_i = 0$			
Option G	Pulse/frequency/switch output Ex-i passive	$U_i = 30 V$ $I_i = 100 mA$ $P_i = 1.25 W$ $L_i = 0$ $C_i = 0$			





71642741

[www.addresses.endress.com](http://www.addresses.endress.com)

---