
Products

Valid as of version 01.00.zz (Device firmware)

# Description of Device Parameters **Cerabar PMP71B**

Process pressure measurement HART

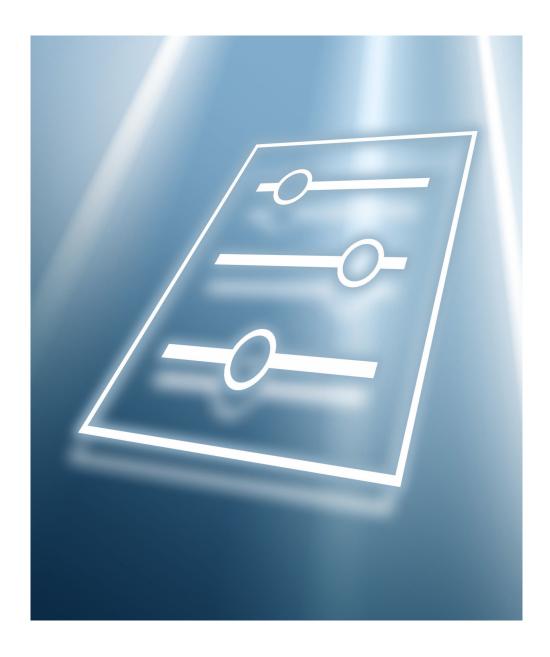





Cerabar PMP71B HART Table of contents

# Table of contents

1	About this document 4
1.1 1.2	Document function
1.3	Using this document
1.4	Symbols used
1.5	Documentation
2	Overview of the operating menu 6
3	Description of device parameters 31
<b>3</b> 3.1	<b>Description of device parameters 31</b> User navigation
3.1 3.2	-
3.1 3.2 3.3	User navigation
3.1 3.2 3.3 3.4	User navigation
3.1 3.2 3.3	User navigation

About this document Cerabar PMP71B HART

#### 1 About this document

#### 1.1 **Document function**

The document is part of the Operating Instructions and serves as a reference for parameters. The document provides a detailed explanation of each individual parameter.

Performance of tasks that require detailed knowledge of the functioning of the device:

- Commissioning measurements under difficult conditions
- Optimal adaptation of the measurement to difficult conditions
- Detailed configuration of the communication interface
- Error diagnostics in difficult cases

#### 1.2 Target group

The document is aimed at specialists who work with the device over the entire life cycle and perform specific configurations.

#### 1.3 Using this document

#### 1.3.1 Information on the document structure

This document lists the submenus and parameters that are available when the "Maintenance" option user role is enabled.



For the operating concept of the operating menus, see the Operating Instructions.

#### 1.3.2 Structure of a parameter description

The individual parts of a parameter description are described in the following section:

- Navigation: Navigation path to the parameter via the local display
- Prerequisite: The parameter is only available under these specific conditions
- Description: Description of the parameter function
- Selection: List of the individual options for the parameter
- User entry: Input range for the parameter
- User interface: Display value/data of the parameter
- Additional information:
  - On individual options
  - On display values/data
  - On the input range
  - On the factory setting
  - On the parameter function

Cerabar PMP71B HART About this document

# 1.4 Symbols used

## 1.4.1 Symbols for certain types of Information

Additional information: 🚹

Reference to documentation: 📵

Operation via local display:

Operation via operating tool:

Write-protected parameter: 🗈

## 1.5 Documentation

## 1.5.1 Standard documentation

## **Operating Instructions**

The Operating Instructions are available via the Internet: www.endress.com →
Download

## 1.5.2 Supplementary device-dependent documentation

## **Special Documentation**

The Special Documentation is available via the Internet: www.endress.com → Download

# 2 Overview of the operating menu

Guidance			→ 🖺 31
<b>▶</b> Commissioning			→ 🖺 34
	► Device identifica	tion	→ 🖺 34
		Device tag	→ 🖺 34
		Device name	→ 🖺 34
		Serial number	→ 🖺 34
		Extended order code 1	→ 🖺 35
		Extended order code 2	→ 🖺 35
		Extended order code 3	→ 🖺 35
	► Device identifica	tion	→ 🖺 36
		Locking status	→ 🖺 36
	► Device identifica	tion	→ 🖺 37
		HART short tag	→ 🖺 37
		HART date code	→ 🖺 37
		HART descriptor	→ 🖺 37
		HART message	→ 🖺 37
		HART address	→ 🖺 38
	► Measurement ad	ljustments	→ 🖺 38
		Assign PV	→ 🖺 38
		Damping	→ 🖺 38
	► Measurement ad	ljustments	→ 🖺 39
		Pressure unit	→ 🖺 39
		Temperature unit	→ 🖺 39
	► Measurement ad	ljustments	→ 🖺 40

	Pressure unit	→ 🖺 40
	Scaled variable unit	→ 🖺 40
	Free text	→ 🖺 41
	Temperature unit	→ 🖺 41
► Measurement	adjustments	→ 🖺 42
	Zero adjustment	→ 🖺 42
	Pressure	→ 🖺 43
► Output setting	js	→ 🖺 43
	Output current transfer function	→ 🖺 43
► Output setting	JS	→ 🖺 43
	Scaled variable transfer function	→ 🖺 43
► Output setting	ıjs .	→ 🖺 44
	Lower Range Limit	→ 🖺 44
	Upper Range Limit	→ 🖺 44
	Minimum span	→ 🖺 44
N Output setting		→ 🖺 45
▶ Output setting	Pressure	→ 🖺 45
	Scaled variable	→ 🖺 45
▶ Output setting	JS	→ 🖺 45
	Lower range value output	→ 🖺 45
	Upper range value output	→ 🖺 45
	Lower Range Limit	→ 🖺 46
	Upper Range Limit	→ 🖺 46
	Minimum span	→ 🖺 46
▶ Output setting	js .	→ 🖺 46

	Scaled variable transfer function	→ 🖺 46
	Pressure value 1	→ 🖺 47
	Scaled variable value 1	→ 🖺 47
	Pressure value 2	→ 🖺 47
	Scaled variable value 2	→ 🖺 47
	Lower Range Limit	→ 🖺 48
	Upper Range Limit	→ 🖺 48
	Minimum span	→ 🖺 48
► Output settings		→ 🖺 48
	Lower range value output	→ 🖺 48
	Upper range value output	→ 🖺 49
	Current range output	→ 🖺 49
	Failure behavior current output	→ 🖺 49
	Failure current	→ 🖺 49
	Loop current mode	→ 🖺 50
	Assign HART variables?	→ 🖺 50
► Output settings		→ 🖺 50
	Process variable output current	→ 🖺 50
	Current range output	→ 🖺 51
	Lower range value output	→ 🖺 51
	Upper range value output	→ 🖺 51
	Failure behavior current output	→ 🖺 51
	Failure current	→ 🖺 52

	Loop current mode	→ 🖺 52
	Assign HART variables?	→ 🖺 52
► Output setti	ngs	→ 🖺 52
	Assign PV	→ 🖺 52
	Assign SV	→ 🖺 53
	Assign TV	→ 🗎 53
	Assign QV	→ 🗎 54
	1.00g.1 Q 1	
► Heartbeat Technology		→ 🖺 114
► Heartbeat V	erification	→ 🖺 55
	► Heartbeat Configuration	→ 🖺 55
	Heartbeat Verification	→ 🖺 55
	► Mainboard module	→ 🖺 55
	System status	→ 🗎 55
	Output current	→ 🖺 55
	Software integrity	→ 🖺 56
	RAM check	→ 🖺 56
	ROM check	→ 🖺 56
	Loop diagnostics	→ 🖺 57
	► Sensor module	→ <b>章</b> 57
	Sensor integrity	→ 🖺 57
	Membrane integrity	→ 🗎 57
	Sensor/membrane integrity	→ 🖺 58
	Statistical Sensor Diagnostics	→ 🖺 58
	Analog path integrity	→ 🖺 58
	► Verification result	→ 🖺 59

		Verification result	→ 🖺 59
		Save protocol?	→ 🖺 59
	► Finish		→ 🖺 59
		Inspector	→ 🖺 59
		Location	→ 🖺 59
		Notes	→ 🖺 60
		Plant operator	→ 🖺 60
		Operating time (Verification)	→ 🖺 60
		Date/time Heartbeat Verification	→ 🖺 60
► SSD: Statistical S	ensor Diagnostics		→ 🖺 60
	► Configuration		→ 🖺 61
		Status summary	→ 🖺 61
		Status summary	→ 🗎 61
		Status summary	→ 🖺 61
		Status summary	→ 🖺 62
		Status summary	→ 🖺 62
		Status summary	→ 🖺 62
		Status summary	→ 🖺 63
		Status summary	→ 🖺 63
		Status summary	→ 🖺 63
		System status	→ 🖺 64
		Signal status	→ 🖺 64
		Signal noise status	→ 🖺 64
		Baseline build process	→ 🖺 64
		Sample rate	→ 🖺 65

	► Monitoring	→ 🖺 66
	Signal status	→ 🖺 66
	Current Baseline signal	→ 🖺 66
	Baseline Signal Upper Control Line	→ 🖺 66
	Baseline Signal Control Line	→ 🖺 66
	Baseline Signal Lower Control Line	→ 🖺 67
	Signal minimum value	→ 🖺 67
	Signal maximum value	→ 🖺 67
	<b>▶</b> Monitoring	→ 🖺 67
	Signal noise status	→ 🖺 67
	Current Baseline noise	→ 🖺 68
	Baseline Signal Noise Upper Control Line	→ 🖺 68
	Baseline Signal Noise Control Line	→ 🖺 68
	Baseline Signal Noise Lower Control Line	→ 🖺 68
	Baseline Signal Noise Minimum	→ 🖺 69
	Signal noise minimum value	→ 🖺 69
	Signal noise maximum value	→ 🖺 69
	<b>▶</b> Diagnostic settings	→ 🖺 69
	SSD Monitoring delay time	→ 🖺 69
	900 Event category	→ 🖺 69
	900 Event category	→ 🖺 69
	900 Diagnostic behavior	→ 🖺 70
	900 Diagnostic behavior	→ 🖺 70
	SSD Out of range delay time	→ 🖺 70
I.		

	906 Event category	→ 🖺 70
	906 Event category	→ 🖺 70
	► Activate/Deactivate	→ 🖺 71
	SSD: Statistical Sensor Diagnostics	→ 🖺 71
► Loop diagnostic	cs	→ 🗎 71
	► Configuration	→ 🖺 71
	I have read the warning texts.	→ 🖺 71
	► Configuration	→ 🖺 71
	Baseline status	→ 🖺 71
	Baseline build process	→ 🖺 72
	► Configuration	→ 🖺 72
	Timestamp Baseline	→ 🖺 72
	Resistance Baseline	→ 🖺 72
	Supply voltage Baseline	→ 🖺 72
	Timestamp previous Baseline	→ 🖺 73
	Resistance previous Baseline	→ 🖺 73
	Supply voltage previous Baseline	→ 🖺 73
	► Monitoring	→ 🖺 73
	Tolerated deviation +/-	→ 🗎 73
	<b>▶</b> Diagnostic settings	→ 🗎 74
	806 Event delay	→ 🖺 74
	806 Event category	→ 🖺 74
	806 Event category	→ 🖺 74

	806 Diagnostic behavior	→ 🖺 74
	806 Diagnostic behavior	→ 🖺 74
	► Activate/Deactivate	→ 🖺 75
	Loop diagnostics	→ 🖺 75
▶ Process window		→ 🖺 75
	▶ Pressure range	→ 🖺 75
	500 Process alert pressure	→ 🖺 75
	Low alert value	→ 🖺 75
	High alert value	→ 🖺 76
	Counter underruns of user limit Pmir	→ 🖺 76
	Counter overruns of user limit Pmax	→ 🖺 76
	500 Diagnostic behavior	→ 🖺 77
	500 Diagnostic behavior	→ 🖺 77
	500 Event category	→ 🖺 77
	500 Event category	→ 🖺 77
	► Pressure range	→ 🖺 77
	501 Process alert scaled variable	→ 🖺 77
	Low alert value	→ 🖺 78
	High alert value	→ 🖺 78
	501 Diagnostic behavior	→ 🖺 78
	501 Diagnostic behavior	→ 🖺 78
		→ 🖺 79
	501 Event category	
	501 Event category	→ 🖺 79
	► Temperature range	→ 🖺 79
	User temperature process alert	→ 🖺 79
<del></del>		

Low alert value	→ 🖺 79
High alert value	→ 🖺 79
Counter underruns of user limit Tmin	→ 🖺 80
Counter overruns of user limit Tmax	→ 🖺 80
502 Diagnostic behavior	→ 🖺 80
502 Diagnostic behavior	→ 🖺 80
502 Event category	→ 🖺 80
502 Event category	→ 🖺 80
► Safety mode	→ 🖺 81
► Preparation	→ 🖺 81
I have read the warning texts.	→ 🖺 81
▶ Preparation	→ 🖺 81
	→ 🖺 81
Enter safety unlocking code	
Locking status	→ 🖺 81
► Preparation	→ 🖺 83
Character test string	→ 🖺 83
Confirm	→ 🖺 83
▶ Preparation	→ 🖺 84
Device tag	→ 🖺 84
Device name	→ 🖺 84
Serial number	→ 🖺 85
Firmware version	→ 🖺 85
	<ul><li>→ 🖺 85</li><li>→ 🖺 85</li></ul>
Firmware version	

	CRC device configuration	→ 🖺 86
	Stored CRC device configuration	→ 🖺 86
	Timestamp stored CRC device config.	→ 🖺 86
	Operating time	→ 🖺 86
	Configuration counter	→ 🖺 87
► Confirmation	on	→ 🗎 87
	Zero adjustment offset	→ 🖺 87
	HP/LP swap	→ 🖺 87
	Damping	→ 🖺 88
	Sensor pressure range behavior	→ 🗎 88
	Confirm	→ 🖺 88
► Confirmation	on	→ 🖺 88
	Output current transfer function	→ 🖺 88
	Low cutoff	→ 🖺 89
	Confirm	→ 🖺 89
► Confirmation	on	→ 🖺 89
	Measuring mode current output	→ 🖺 89
	Failure behavior current output	→ 🖺 89
	Current range output	→ 🖺 90
	Lower range value output	→ 🖺 90
	Upper range value output	→ 🖺 90
	Assign PV	→ 🖺 90
	Confirm	→ 🖺 91
► Confirmation	on	→ 🗎 91

		Zero adjustment offset	→ 🖺 91
		Confirm	→ 🖺 91
	► Locking		→ 🖺 91
		Enter safety locking code	→ 🖺 91
		Locking status	→ 🖺 92
		Save protocol?	→ 🖺 92
	► Result		→ 🖺 93
		Inspector	→ 🖺 93
		Location	→ 🖺 93
		Date/time	→ 🖺 93
		Notes	→ 🖺 93
		Plant operator	→ 🖺 94
▶ Proof test			→ 🖺 94
	► Preparation Pro	of test	→ 🖺 94
		I have read the warning texts.	→ 🖺 94
	► Preparation Pro	of test	→ 🖺 95
		Visual inspection	→ 🖺 95
		Notes	→ 🖺 95
	▶ Preparation Pro	of test	→ 🖺 95
		Device tag	→ 🖺 95
		Device name	→ 🖺 96
		Serial number	→ 🖺 96
		Firmware version	→ 🖺 96
		Hardware version	→ 🗎 97

► Preparation Pro	of test	→ 🖺 97
	CRC device configuration	→ 🖺 97
	Stored CRC device configuration	→ 🖺 97
	Timestamp stored CRC device config.	→ 🖺 97
	Operating time	→ 🖺 98
	Configuration counter	→ 🖺 98
▶ Preparation Pro	of test	→ 🖺 99
	Select test procedure	→ 🖺 99
	Safety function?	→ 🖺 99
► Simulation and current	check failure	→ 🖺 99
	Failure current (high alarm)	→ 🖺 99
	Confirm	→ 🖺 100
	(High) Is safety function triggered?	→ 🖺 100
	Terminal current (high alarm)	→ 🖺 100
	Confirm	→ 🖺 100
	(Low) Is safety function triggered?	→ 🖺 101
► Proof test		→ 🖺 101
	Setpoint 1	→ 🖺 101
	Pressure 1	→ 🖺 101
	Terminal current 1	→ 🖺 101
	Current deviation 1	→ 🖺 102
	Setpoint 2	→ 🖺 102
	Pressure 2	→ 🖺 102
	<del>-</del>	

		Terminal current 2	→ 🖺 102
		Current deviation 2	→ 🖺 102
	► Finish		→ 🖺 103
		Active diagnostics	→ 🖺 103
		Summary	→ 🖺 103
		Decision of inspector	→ 🖺 103
		Inspector	→ 🖺 104
		Location	→ 🖺 104
		Date/time proof test	→ 🖺 104
		Notes	→ 🖺 104
		Plant operator	→ 🖺 105
Diagnostics			→ 🖺 106
► Active diagnost	ics		→ 🖺 106
	Active diagnostics		→ 🖺 106
	Timestamp		→ 🖺 106
	Previous diagnostic	rs —	→ 🖺 107
	Timestamp		→ 🖺 107
	Operating time from	m restart	→ 🖺 107
	Operating time		→ 🖺 108
▶ Event logbook			→ 🖺 108
	Filter options		→ 🖺 108
► Minimum/maxi	mum values		→ 🖺 109
	Pressure min		→ 🖺 109
	Counter limit under	rruns sensor Pmin	→ 🖺 109

	Minimum sensor te	emperature		→ 🖺 110
	Counter limit under	rruns sensor Tmin		→ 🖺 110
	Counter underruns	of user limit Tmin		→ 🖺 110
	Minimum terminal	voltage		→ 🖺 110
	Minimum electroni	cs temperature		→ 🖺 110
	Reset user defined	counters P and T		→ 🖺 111
	Pressure max			→ 🖺 111
	Counter limit overr	uns sensor Pmax		→ 🖺 111
	Counter overruns o	f user limit Pmax		→ 🖺 111
	Maximum sensor to	emperature		→ 🖺 111
	Counter limit overr	uns sensor Tmax		→ 🖺 112
	Counter overruns o	f user limit Tmax		→ 🖺 112
	Maximum terminal	voltage		→ 🖺 112
	Maximum electron	ics temperature		→ 🖺 112
► Simulation				→ 🖺 113
	Simulation			→ 🖺 113
	Value pressure sim	ulation		→ 🖺 113
	Value current outpu	ıt		→ 🖺 113
	Diagnostic event sin	nulation		→ 🖺 113
► Heartbeat Tech	nology			→ 🖺 114
	► Heartbeat Verif	ication		→ 🖺 114
		Date/time Heartbear	t Verification	→ 🖺 114
		Operating time (Ver	ification)	→ 🖺 114
		Verification result		→ 🖺 114
		Status		→ 🖺 115
L				

	► Loop diagnostics		→ 🖺 115	
	Rebuil	d baseline	→ 🖺 115	
	Tolera	ted deviation +/-	→ 🖺 115	
	Baseli	ne status	→ 🖺 116	
	Loop o	liagnostics	→ 🖺 116	
	Termi	nal voltage 1	→ 🖺 116	
	Clamp	ing voltage lower threshold	→ 🖺 116	
	Clamp	ing voltage upper threshold	→ 🖺 116	
	806 E	vent delay	→ 🖺 117	
	► Statistical Sensor Diagram	nostics	→ 🖺 117	
	SSD: S	tatistical Sensor Diagnostics	→ 🖺 117	
	System	n status	→ 🖺 117	
	Signal	status	→ 🗎 117	
	Signal	noise status	→ 🗎 118	
► Diagnostic sett	ings		→ 🖺 118	
	► Properties		→ 🗎 118	
	SSD O	ut of range delay time	→ 🗎 118	
	SSD M	Ionitoring delay time	→ 🖺 119	
	500 P	rocess alert pressure	→ 🖺 119	
	Low a	lert value	→ 🖺 119	
	High a	ılert value	→ 🖺 119	
	501 P	rocess alert scaled variable	→ 🖺 119	
	Low a	lert value	→ 🖺 120	
	High a	ılert value	→ 🗎 120	
	User t	emperature process alert	→ 🖺 120	

	Low alert value	→ 🖺 120
	High alert value	→ 🖺 121
	806 Diagnostic behavior	→ 🖺 121
	806 Diagnostic behavior	→ 🖺 121
	806 Event category	→ 🖺 121
	806 Event category	→ 🖺 121
	806 Event delay	→ 🖺 121
<b>▶</b> Configuration		→ 🖺 61
	► Configuration	→ 🖺 122
	500 Diagnostic behavior	→ 🖺 122
	500 Diagnostic behavior	→ 🖺 122
	500 Diagnostic behavior	→ 🖺 122
	500 Diagnostic behavior	→ 🖺 122
	500 Event category	→ 🖺 122
	500 Event category	→ 🖺 122
	500 Event category	→ 🗎 122
	500 Event category	→ 🖹 122
	501 Diagnostic behavior	→ 🖺 122
	501 Diagnostic behavior	→ 🖺 122
	501 Diagnostic behavior	→ 🖺 122
	501 Diagnostic behavior	→ 🗎 122
	501 Event category	→ 🖺 123
	501 Event category	→ 🖺 123
	501 Event category	→ 🖺 123
	501 Event category	→ 🖺 123

	502 Diagnostic behavior	→ 🖺 123
	502 Diagnostic behavior	→ 🖺 123
	502 Diagnostic behavior	→ 🖺 123
	502 Diagnostic behavior	→ 🖺 123
	502 Event category	→ 🖺 123
	502 Event category	→ 🖺 123
	502 Event category	→ 🖺 123
	502 Event category	→ 🖺 123
► Process		→ 🖺 124
	806 Diagnostic behavior	→ 🖺 124
	806 Diagnostic behavior	→ 🖺 124
	806 Diagnostic behavior	→ 🖺 124
	806 Diagnostic behavior	→ 🖺 124
	806 Diagnostic behavior	→ 🖺 124
	806 Diagnostic behavior	→ 🖺 124
	806 Event category	→ 🖺 124
	806 Event category	→ 🖺 124
	806 Event category	→ 🖺 124
	806 Event category	→ 🗎 124
	806 Event category	→ 🗎 124
	806 Event category	→ 🖺 124
	822 Diagnostic behavior	→ 🖺 124
	822 Event category	→ 🖺 125
	Sensor pressure range behavior	→ 🖺 125
	841 Event category	→ 🖺 125

		900 Event category	→ 🖺 126
		900 Event category	→ 🖺 126
		900 Event category	→ 🗎 126
		900 Event category	→ 🗎 126
		900 Diagnostic behavior	→ 🗎 126
		900 Diagnostic behavior	→ 🖺 126
		900 Diagnostic behavior	→ 🖺 126
		900 Diagnostic behavior	→ 🖺 126
		906 Diagnostic behavior	→ 🖺 126
		906 Diagnostic behavior	→ 🖺 126
		906 Diagnostic behavior	→ 🖺 126
		906 Diagnostic behavior	→ 🖺 126
		906 Event category	→ 🖺 126
		906 Event category	→ 🖺 126
		906 Event category	→ 🖺 126
		906 Event category	→ 🗎 126
Application			→ 🗎 131
► Measuring units	S		→ 🗎 131
	Pressure unit		→ 🗎 131
	Decimal places pressure		→ 🖺 131
	Temperature unit		→ 🖺 131
	Scaled variable unit		→ 🖺 132
	Free text		→ 🖺 133
	Decimal places scaled variable		→ 🖺 133

► Measured valu	les		→ 🖺 134
	Pressure		→ 🖺 134
	Scaled variable		→ 🖺 134
	Sensor temperature	е	→ 🖺 134
	Terminal voltage 1		→ 🖺 134
	Terminal current		→ 🖺 135
	Electronics temper	ature	→ 🖺 135
► Sensor			→ 🖺 135
	<b>▶</b> Basic settings		→ 🖺 135
		Output current transfer function	→ 🖺 135
		Damping	→ 🖺 136
	► Sensor calibrati	ion	→ 🖺 136
		Zero adjustment	→ 🖺 136
		Calibration offset	→ 🖺 136
		Zero adjustment offset	→ 🖺 137
		Sensor Trim Reset	→ 🖺 137
		Lower sensor trim measured value	→ 🖺 137
		Lower sensor trim	→ 🖺 138
		Upper sensor trim measured value	→ 🖺 138
		Upper sensor trim	→ 🖺 139
	► Sensor limits		→ 🖺 139
		Lower Range Limit	→ 🖺 139
		Upper Range Limit	→ 🖺 139
		Minimum span	→ 🖺 140

	Sensor temperature lower range limit	=	→ 🗎 140
	Sensor temperature upper range limit	<u> </u>	→ 🗎 140
► Scaled variable		<del>:</del>	→ 🖺 140
	Assign PV	=	→ 🗎 140
	Scaled variable unit	· 	→ 🖺 141
	Free text	' ]	→ 🖺 141
	Pressure		→ 🖺 142
	Scaled variable transfer function		→ 🖺 142
		<del>-</del>	7 ■ 142
	Lower range value output	<u>-</u>	→ 🖺 142
	Upper range value output	=	→ 🖺 142
	Activate table	-	→ 🖺 143
	Pressure value 1	<u> </u>	→ 🖺 143
	Scaled variable value 1	·	→ 🖺 143
	Pressure value 2	<u> </u>	→ 🖺 143
	Scaled variable value 2	<u> </u>	→ 🗎 143
	Pressure	<u> </u>	→ 🗎 144
	Scaled variable	- -	→ 🖺 144
► Wet calibration		· ÷	→ 🖺 144
	Zero	<u>-</u>	→ 🖺 144
	Pressure value 1	· 	→ 🖺 144
	Span	· 	→ 🖺 144
	Pressure value 2		→ 🗎 145
	Zero		→ 🖺 144
	Lower range value output	<u>-</u>	→ 🖺 145

		Span	<b>→</b> [
		Upper range value output	<b>→</b> [
► Current output		]	<b>→</b> [
> Current output			/ [
	Assign PV		→ [
	Measuring mode cu	urrent output	→ [
	Current range outp	ut	→ [
	Lower range value	output	$\rightarrow$
	Upper range value o	putput	$\rightarrow$
	Failure behavior cu	rrent output	$\rightarrow$
	Failure current		$\rightarrow$
	Output current		$\rightarrow$
	Terminal current		$\rightarrow$
► HART output			$\rightarrow$
	► Configuration		$\rightarrow$
		HART address	$\rightarrow$
		HART short tag	$\rightarrow$
		Device tag	$\rightarrow$
		No. of preambles	$\rightarrow$
		Loop current mode	<b>→</b>
	► HART output		$\rightarrow$
		Assign PV	<b>→</b>
		Primary variable (PV)	<b>→</b>
		Assign SV	<b>→</b>
		Secondary variable (SV)	$\rightarrow$
		Assign TV	$\rightarrow$

	Tertiary variable (TV)	→ 🖺 153
	Assign QV	→ 🖺 153
	Quaternary variable (QV)	→ 🖺 154
► Burst configura	ation 1	→ 🖺 154
	Burst mode 1	→ 🖺 154
	Burst command 1	→ 🗎 155
	Burst variable 0	→ 🖺 155
	Burst variable 1	→ 🖺 156
	Burst variable 2	→ 🖺 156
		→ <b>1</b> 56
	Burst variable 3	
	Burst variable 4	→ 🖺 156
	Burst variable 5	→ 🖺 157
	Burst variable 6	→ 🖺 157
	Burst variable 7	→ 🖺 157
	Burst trigger mode	→ 🖺 157
	Burst trigger level	→ 🖺 158
	Min. update period	→ 🖺 158
	Max. update period	→ 🖺 158
► Information		→ 🖺 159
	Device ID	→ 🖺 159
	Device type	→ 🖺 159
	Device revision	→ 🖺 159
	HART short tag	→ 🖺 160
	HART revision	→ 🖺 160
	HART descriptor	→ 🖺 160
	τιν πετ περεπίλισι	/ <b>=</b> 100

			HART message	]	→ 🖺 160
			TIMIT IIIessaye		/ ■ 100
			HART date code		→ 🖺 161
System					→ 🖺 162
[	► Device managen	nent			→ 🖺 162
		Device tag			→ 🖺 162
		Locking status			→ 🖺 162
		Configuration count	ter		→ 🖺 163
		Reset device			→ 🖺 163
[	► User manageme	nt			→ 🖺 164
		User role			→ 🖺 164
		Password			→ 🖺 164
		Enter access code			→ 🖺 164
		Status password en	try		→ 🖺 165
		New password			→ 🖺 165
		Confirm new passw	ord		→ 🖺 165
		Status password en	try		→ 🖺 165
		Old password			→ 🖺 165
		New password			→ 🖺 165
		Confirm new passw	ord		→ 🖺 165
		Status password en	try		→ 🖺 165
		Reset password			→ 🖺 166
		Status password en	try		→ 🖺 165
		Old password			→ 🖺 165
		Status password en	try		→ 🖺 165

► Bluetooth con	figuration	→ 🖺 166
	Bluetooth activation	→ 🖺 166
► Display		→ 🖺 166
	Language	→ 🖺 166
	Format display	→ 🖺 167
	Value 1 display	→ 🖺 167
	Value 2 display	→ 🖺 168
	Value 3 display	→ 🖺 168
	Value 4 display	→ 🖺 169
	Contrast display	→ 🖺 169
► Geolocation		→ 🖺 170
	Process Unit Tag	→ 🖺 170
	Location Description	→ 🖺 170
	Longitude	→ 🖺 170
	Latitude	→ 🖺 170
	Altitude	→ 🖺 171
	Location method	→ 🖺 171
► Information		→ 🖺 171
	Device name	→ 🖺 171
	Manufacturer	→ 🖺 172
	Serial number	→ 🖺 172
	Order code	→ 🖺 172
	Firmware version	→ 🖺 173
	Hardware version	→ 🖺 173
	Extended order code 1	→ 🖺 173

Extended order code 2	→ 🖺 173
Extended order code 3	→ 🖺 174
Checksum	→ 🖺 174
► Software configuration	→ 🖺 175
CRC device configuration	→ 🖺 175
Stored CRC device configuration	→ 🖺 175
Timestamp stored CRC device config.	→ 🗎 175
Activate SW option	→ 🗎 175
Software option overview	→ 🖺 176

## 3 Description of device parameters

In the following section, the parameters are listed according to the menu structure of the operating tool.

The operating menu is dynamic and adapts the choice of parameters to the selected options.

## 3.1 User navigation

The Guidance main menu contains functions which enable users to perform basic tasks swiftly, e.g. commissioning.

These are primarily guided wizards and cross-subject special functions.

Navigation 

Guidance

## 3.1.1 Overview of the operating menu

#### "Guidance" menu

- Commissioning (→ 🖺 34)
- Safety mode (→ 🖺 81)

## "Diagnostics" menu

- Active diagnostics ( $\rightarrow$  🖺 106)
- Event logbook ( $\rightarrow$  🖺 108)
- Minimum/maximum values (→ 🗎 109)
- Simulation ( $\rightarrow$   $\cong$  113)
- Heartbeat Technology (→ 🖺 114)
- Diagnostic settings (→ 🖺 69)

## "Application" menu

- Measuring units ( $\rightarrow \triangleq 131$ )
- Measured values (→ 🖺 134)
- Sensor (→ 🖺 135)
- Current output ( $\rightarrow = 147$ )

## "System" menu

- Device management ( $\rightarrow$  🖺 162)
- User management ( $\rightarrow \triangleq 164$ )
- Bluetooth configuration (→ 🖺 166)
- Display (→ 🖺 166)
- Geolocation ( $\rightarrow \equiv 170$ )
- Information ( $\rightarrow$  🖺 159)
- Software configuration (→ 🖺 175)

## 3.1.2 Commissioning

Run this wizard to put the device into operation. Enter the appropriate value in each parameter or select the appropriate option.

i

If the wizard is canceled before all the necessary parameters have been configured, any settings already made are saved. For this reason, the device may then be in an undefined state!

In such situations, it is advisable to reset the device to the factory default settings.

## The following parameters are configured in the Commissioning wizard:

- Device identification (→ 🖺 34)

  - Device name ( $\rightarrow$  🖺 34)
  - Serial number ( $\rightarrow \triangleq 34$ )
  - Extended order code 1 ( $\rightarrow$  🖺 35)
  - Extended order code 2 (→ 🖺 35)
  - Extended order code 3 (→ 🖺 35)
  - Locking status ( $\rightarrow$  🖺 36)

  - HART date code ( $\rightarrow$  🖺 37)

  - HART message (→ 🖺 37)
  - HART address (→ 🖺 38)
- - Assign PV (→ 🖺 38)

  - Pressure unit ( $\rightarrow \triangleq 39$ )

  - Scaled variable unit ( $\rightarrow \triangleq 40$ )

  - Pressure ( $\rightarrow$  🖺 43)
- Output settings ( $\rightarrow \triangleq 43$ )

  - Lower Range Limit ( $\rightarrow$  🖺 44)
  - Upper Range Limit (→ 🖺 44)
  - Minimum span ( $\rightarrow$  🖺 44)
  - Pressure ( $\rightarrow$  🖺 45)
  - Scaled variable ( $\rightarrow \triangle 45$ )
  - Lower range value output ( $\rightarrow$  🖺 45)
  - Upper range value output ( $\rightarrow \triangleq 45$ )
  - Scaled variable transfer function (→ 🖺 43)
  - Pressure value 1 ( $\rightarrow$  🖺 47)
  - Current range output ( $\rightarrow$  🗎 49)
  - Failure behavior current output (→ 🖺 49)
  - Failure current ( $\rightarrow$  🖺 49)
  - Loop current mode (→ 🖺 50)

  - Assign PV (→ 🖺 38)
  - Assign SV (→ 🖺 53)

  - Assign QV (→ 🖺 54)

## 3.1.3 Heartbeat Technology

Heartbeat Technology offers diagnostic functionality through continuous self-monitoring, the transmission of additional measured variables to an external Condition Monitoring system and the in-situ verification of measuring devices in the application.

Special Documentation "Heartbeat Monitoring + Verification"



SD02525P

## "Heartbeat Verification" wizard

This wizard is used to start an automatic verification of the device functionality. The results can be documented as a verification report.

## "SSD: Statistical Sensor Diagnostics" wizard

Using statistical analysis of the pressure signal, process anomalies such as plugged impulse lines can be detected. This wizard supports the settings and thresholds that should lead to a diagnostic message.

## "Loop diagnostics" wizard

Using this wizard, changes in the current-voltage loop characteristics (baseline) can be used to detect unwanted installation anomalies such as creep currents caused by terminal corrosion or a deteriorating power supply that can lead to an incorrect 4-20 mA measured value.

#### "Process window" wizard

This wizard uses user-defined limits for pressure and temperature to detect unwanted installation or application anomalies.

## Applications:

- Defective heat tracer or insulation
- Frozen process connections
- Dynamic pressure peaks etc.

## 3.1.4 Safety mode

The write protection guards the device settings against overwriting. In addition, it is recommended for safety applications to confirm the safety relevant device settings. This ensures that the correct values have been entered and downloaded to device.

This input can be used as the confirmation sequence instead of manual checklists. After the safety relevant device settings have been confirmed, the device is marked with the property Safety-locked. This indicates that the safety relevant parameter settings have been checked and evaluated as correct.

To unlock the safety locking the sequence needs to be restarted. The safety locking is deactivated when the safety unlocking code (= safety locking code) is entered.

## 3.1.5 Proof testing

The proof test will simulate the current output.

The safety function is not guaranteed during proof test. Alternative process control in manual must be taken to ensure process safety.

Note: It is only possible to perform a proof test when the device has no alarm and the hardware write protection switch is off.

User interface

## 3.2 "Guidance" menu

Navigation 

Guidance

## 3.2.1 "Commissioning" wizard

Navigation  $\square$  Guidance  $\rightarrow$  Commissioning

## "Device identification" wizard

Navigation  $\square$  Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Device ident.

Device tag		
Navigation	☐ Guidance $\rightarrow$ Commissioning $\rightarrow$ Device ident. $\rightarrow$ Device tag	
Description	Enter a unique name for the measuring point to identify the device quickly within th plant.	е
User entry	Character string comprising numbers, letters and special characters (32)	
Device name		
Navigation	☐ Guidance $\rightarrow$ Commissioning $\rightarrow$ Device ident. $\rightarrow$ Device name	
Description	Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.	
User interface	Max. 32 characters such as letters or numbers.	
Serial number		
Navigation	☐ Guidance $\rightarrow$ Commissioning $\rightarrow$ Device ident. $\rightarrow$ Serial number	
Description	Displays the serial number of the measuring device.	
	The number can be found on the nameplate of the sensor and transmitter.	

34 Endress+Hauser

Max. 11-digit character string comprising letters and numbers.

## Additional information

Description



## Uses of the serial number

- To identify the measuring device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the measuring device using the Device Viewer: www.endress.com/deviceviewer

Extended order code 1

**Navigation** Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Device ident.  $\rightarrow$  Ext. order cd. 1

**Description** The extended order code is an alphanumeric code containing all information to identify

the device and its options.

**User interface** Character string

Factory setting –

**Additional information** Description

The extended order code indicates the version of all the features of the product structure

for the measuring device and thus uniquely identifies the measuring device.

Extended order code 2

**Navigation** Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Device ident.  $\rightarrow$  Ext. order cd. 2

**Description** The extended order code is an alphanumeric code containing all information to identify

the device and its options.

The extended order code can also be found on the nameplate of the sensor and

transmitter in the "Ext. ord. cd." field.

**User interface** Character string

Factory setting –

Extended order code 3

**Navigation** Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Device ident.  $\rightarrow$  Ext. order cd. 3

**Description** The extended order code is an alphanumeric code containing all information to identify

the device and its options.

The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

transmitter in the Lat. ora. ca. ner

**User interface** Character string

## **Factory setting**

## "Device identification" wizard

Navigation Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Device ident.

## **Locking status**

**Navigation** Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Device ident.  $\rightarrow$  Locking status

Description Displays the active write protection.

User interface Hardware locked

■ Safety locked ■ Temporarily locked

## Additional information

## User interface

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.



Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

## Selection

*Function scope of the "Locking status" parameter* 

Options	Description	
None	The access status displayed in the <b>Access status display</b> parameter applies. Only appears on local display.	
Hardware locked	The DIP switch for hardware locking is activated on the main electronics module. This prevents write access to the parameters (e.g. via the local display or operating tool).	
Temporarily locked	Write access to the parameters is temporarily locked due to device-internal processing (e.g. data upload/download, reset). Once the internal processing has been completed, the parameters can be changed once again.	

#### "Device identification" wizard

*Navigation*  $\square$  Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Device ident.

HART short tag
 Navigation
 □ Guidance → Commissioning → Device ident. → HART short tag
 Description
 Defines the short tag for the measuring point.
 Maximum length: 8 characters
 Allowed characters: A-Z, 0-9, certain special characters

**User entry** Max. 8 characters: A to Z, 0 to 9 and certain special characters (e.g. punctuation marks, @, %).

HART date code

**Navigation**  $\square$  Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Device ident.  $\rightarrow$  HART date code

**Description** Date of the last configuration change

**User entry** Character string comprising numbers, letters and special characters (10)

**Additional information** Date format: YYYY-MM-DD

Make sure you adhere to this format when entering the date. Otherwise errors may occur in individual HART commands.

**Description** Description for the measuring point.

**User entry** Character string comprising numbers, letters and special characters (16)

HART message

**Navigation** Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Device ident.  $\rightarrow$  HART message

**Description** A HART message which is sent via the HART protocol when requested by the master.

**User entry** Character string comprising numbers, letters and special characters (32)

HART address **Navigation** Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Device ident.  $\rightarrow$  HART address Description Define the HART address of the device. 0 to 63 User entry Additional information ■ The measured value can only be transmitted via the current value if the address is set to "0". The current is fixed at 4.0 mA for all other addresses (Multidrop mode). • Only addresses in the range 0 to 15 are permitted for a system according to HART 5.0. • All addresses in the range 0 to 63 are permitted for a system with HART 6.0 and higher. "Measurement adjustments" wizard Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Meas. adjust. Navigation Assign PV **Navigation** Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Meas. adjust.  $\rightarrow$  Assign PV Description Use this function to select a measured variable (HART device variable) for the primary dynamic variable (PV). Selection ■ Pressure Scaled variable **Damping Navigation** Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Meas. adjust.  $\rightarrow$  Damping Description The damping is effective before the measured value is further processed, i.e., before the following processes: - Scaling - Limit value monitoring - Forwarding to display - Forwarding to Analog Input Block The Analog Input Block has its own "Damping" parameter. In the measurement chain, only one of the two attenuation parameters shall have a value other than 0. Otherwise, the signal will be attenuated several times.

38 Endress+Hauser

0 to 999.0 s

User entry

■ mmHg

## "Measurement adjustments" wizard

*Navigation*  $\square$  Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Meas. adjust.

Pressure unit **Navigation** Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Meas. adjust.  $\rightarrow$  Pressure unit Selection SI units **US** units Other units MPa ■ inH2O psi ■ kPa ■ inH2O (4°C) ■ Pa ■ mmH2O ■ bar ■ mmH2O (4°C) ■ mH2O ■ mbar ■ mH2O (4°C) torr ■ atm ■ ftH2O ■ kgf/cm² ■ inHg

Temperature unit

**Navigation**  $\square$  Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Meas. adjust.  $\rightarrow$  Temperature unit

**Description** Use this function to select the unit for the temperature.

■ qf/cm²

■ K

**Factory setting** Country-specific:

• °C • °F

**Additional information** Selection

## "Measurement adjustments" wizard

*Navigation*  $\square$  Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Meas. adjust.

Pressure unit Navigation Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Meas. adjust.  $\rightarrow$  Pressure unit Selection SI units US units Other units ■ MPa ■ inH20 psi ■ kPa ■ inH2O (4°C) ■ mmH2O ■ Pa ■ bar ■ mmH2O (4°C) ■ mbar ■ mH2O torr ■ mH2O (4°C) ■ atm • ftH2O ■ kgf/cm<sup>2</sup> ■ inHq ■ qf/cm<sup>2</sup> ■ mmHg

Scaled variable unit

# Navigation

## Description

Use "Free text", first selection, if the desired unit is not available in the selection list. It is possible to define a customer specific unit with another parameter.

#### Selection

SI units

- **•** %
- mm ■ cm
- m
- **-** 1
- hl
- m<sup>3</sup>
- **■** q
- kg
- t
- q/s
- kg/s
- kg/min
- kg/h
- t/min
- t/h
- t/d
- $\bullet$  m<sup>3</sup>/s
- m³/min
- $\mathbf{m}^3/h$
- $\mathbf{m}^3/d$
- 1/s
- l/min
- 1/h
- $\blacksquare$  Nm $^3/h$
- Nl/h
- $Sm^3/s$
- Sm³/min
- $\text{Sm}^3/\text{h}$
- Sm<sup>3</sup>/d
- Nm³/s
- $\blacksquare$  q/cm<sup>3</sup>
- kg/m³
- Nm³/min
- $Nm^3/d$

Custom-specific units

Free text

US units

- ft
- in
- ft<sup>3</sup>
- qal (us)
- bbl (us;oil)
- OZ
- lb
- STon
- lb/s
- lb/min
- lb/h
- STon/min
- STon/h
- STon/d
- $ft^3/s$
- ft³/min
- ft<sup>3</sup>/h
- $ft^3/d$
- qal/s (us)
- qal/min (us)
- qal/h (us)
- qal/d (us)
- bbl/s (us;oil)
- bbl/min (us;oil)
- bbl/h (us;oil)
- bbl/d (us;oil)
- Sft³/min
- Sft³/h
- Sft³/d

Imperial units

- gal (imp)
- qal/s (imp)
- gal/min (imp)
- qal/h (imp)

Free text

Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Meas. adjust.  $\rightarrow$  Free text

User entry

**Navigation** 

Temperature unit

41

**Navigation** 

Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Meas. adjust.  $\rightarrow$  Temperature unit

Character string comprising numbers, letters and special characters (32)

Description

Use this function to select the unit for the temperature.

■ °C ■ K

**Factory setting** Country-specific:

• °C • °F

**Additional information** Selection

## "Measurement adjustments" wizard

Navigation Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Meas. adjust.

Zero adjustment

 $\textbf{Navigation} \hspace{1cm} \blacksquare \hspace{1cm} \textbf{Guidance} \rightarrow \textbf{Commissioning} \rightarrow \textbf{Meas. adjust.} \rightarrow \textbf{Zero adjustment}$ 

**Description** Due to the mounting position of the measuring instrument, a pressure shift may occur.

The pressure shift can be corrected with the zero adjustment.

Selection ■ No

Confirm

#### Pressure

### Navigation

## "Output settings" wizard

Navigation  $\square$  Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Output settings

#### Output current transfer function

**Navigation**  $\square$  Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Output settings  $\rightarrow$  Curr. trans.func

**Description** Linear

The linear pressure signal is used for the current output. The flow must be calculated in

the evaluation unit.

Square root - differential pressure only

The root flow signal is used for the current output. The 'Flow (square root)' current signal is indicated on the on-site display with a root symbol.

**User interface** ■ Linear

Square root \*

#### "Output settings" wizard

Navigation  $\square$  Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Output settings

#### Scaled variable transfer function

 $\textbf{Navigation} \hspace{1cm} \boxminus \hspace{1cm} \textbf{Guidance} \rightarrow \textbf{Commissioning} \rightarrow \textbf{Output settings} \rightarrow \textbf{Scaled function}$ 

**Description** "Linear'

The linear pressure signal is used for the output signal. The flow must be calculated in the evaluation unit.

"Square root" (Deltabar)

The root flow signal is used for the output signal. The "Flow (square root)' output signal is indicated on the on-site display with a root symbol.

"Table'

The output is defined according to the scaled variable / pressure table entered.

<sup>\*</sup> Visibility depends on order options or device settings

Selection	<ul> <li>■ Linear</li> <li>■ Square root *</li> <li>■ Table</li> </ul>
	"Output settings" wizard  Navigation □ Guidance → Commissioning → Output settings
Lower Range Limit	
Navigation	
Description	Indicates the lower measuring limit of the sensor.
User interface	Signed floating-point number
Upper Range Limit	
Navigation	
Description	Indicates the upper measuring limit of the sensor.
User interface	Signed floating-point number
Minimum span	
Navigation	
Description	Specifies the smallest possible measuring span of the sensor.

User interface

Endress+Hauser

Signed floating-point number

<sup>\*</sup> Visibility depends on order options or device settings

## "Output settings" wizard

Navigation  $\square$  Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Output settings

 Pressure

 Navigation
 Guidance → Commissioning → Output settings → Pressure

 User entry
 Signed floating-point number

 Scaled variable
 Image: Commissioning → Output settings → Scaled variable

 Navigation
 Guidance → Commissioning → Output settings → Scaled variable

 User entry
 Signed floating-point number

"Output settings" wizard

*Navigation*  $\square$  Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Output settings

 Lower range value output

 Navigation
 Guidance → Commissioning → Output settings → Low.range outp

 Description
 Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).

 User entry
 Signed floating-point number

 Upper range value output

 Navigation
 Guidance → Commissioning → Output settings → Upp.range outp

 Description
 Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).

 User entry
 Signed floating-point number

# **Lower Range Limit Navigation** Guidance $\rightarrow$ Commissioning $\rightarrow$ Output settings $\rightarrow$ LRL Description Indicates the lower measuring limit of the sensor. User interface Signed floating-point number **Upper Range Limit** Navigation Guidance $\rightarrow$ Commissioning $\rightarrow$ Output settings $\rightarrow$ URL Description Indicates the upper measuring limit of the sensor. User interface Signed floating-point number Minimum span **Navigation** Guidance $\rightarrow$ Commissioning $\rightarrow$ Output settings $\rightarrow$ Minimum span Description Specifies the smallest possible measuring span of the sensor. User interface Signed floating-point number "Output settings" wizard Navigation Guidance → Commissioning → Output settings Scaled variable transfer function **Navigation** Guidance $\rightarrow$ Commissioning $\rightarrow$ Output settings $\rightarrow$ Scaled function Description "Linear' The linear pressure signal is used for the output signal. The flow must be calculated in the evaluation unit. "Square root" (Deltabar) The root flow signal is used for the output signal. The "Flow (square root)"

Endress+Hauser

"Table'

output signal is indicated on the on-site display with a root symbol.

The output is defined according to the scaled variable / pressure table entered.

Selection

Linear

Square root \*

■ Table

Pressure value 1

Navigation

☐ Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Output settings  $\rightarrow$  Pressure 1

**Description** Enter pres

Enter pressure for the first scaling point. "Scaled variable value 1" will be allocated to this

pressure.

User entry

Signed floating-point number

Scaled variable value 1

**Navigation**  $\square$  Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Output settings  $\rightarrow$  Scaled 1

**Description** Enter value for the first scaling point. This value is allocated to "Pressure value 1".

**User interface** Signed floating-point number

Pressure value 2

Navigation

Description

Enter pressure for the second scaling point. "Scaled variable value 2" will be allocated to

this pressure.

User entry

Signed floating-point number

Scaled variable value 2

Navigation

Description

Enter value for the second scaling point. This value is allocated to "Pressure value 2".

User entry

Signed floating-point number

Endress+Hauser

47

Visibility depends on order options or device settings

User entry

Lower Range Limit		
Navigation		
Description	Indicates the lower measuring limit of the sensor.	
User interface	Signed floating-point number	
Upper Range Limit		
Navigation		
Description	Indicates the upper measuring limit of the sensor.	
User interface	Signed floating-point number	
Minimum span		
Navigation		
Description	Specifies the smallest possible measuring span of the sensor.	
User interface	Signed floating-point number	
	"Output settings" wizard	
	$Navigation$ Guidance $\rightarrow$ Commissioning $\rightarrow$ Output settings	
Lower range value output		
Navigation	☐ Guidance → Commissioning → Output settings → Low.range outp	
Description	Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).	

Endress+Hauser

Signed floating-point number

# Upper range value output **Navigation** Guidance $\rightarrow$ Commissioning $\rightarrow$ Output settings $\rightarrow$ Upp.range outp Description Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA). User entry Signed floating-point number **Current range output Navigation** Guidance $\rightarrow$ Commissioning $\rightarrow$ Output settings $\rightarrow$ Current range Description Defines the current range used to transmit the measured or calculated value. In brackets are indicated the "low saturation value" and the "high saturation value". If Measured value ≤ "low saturation", the output current is set to "low saturation". If Measured value $\geq$ "high saturation", the output current is set to "high saturation". Currents below 3.6 mA or above 21.5 mA can be used to signal an alarm. Selection ■ 4...20 mA (4...20.5 mA) ■ 4...20 mA NE (3.8...20.5 mA) ■ 4...20 mA US (3.9...20.8 mA) Failure behavior current output **Navigation** Guidance $\rightarrow$ Commissioning $\rightarrow$ Output settings $\rightarrow$ Failure behav. Description Defines which current the output assumes in the case of an error. Min: < 3.6 mA Max: >21.5 mA Note: The hardware DIP Switch for alarm current has priority over software setting. Selection Min. Max. Failure current

Endress+Hauser 49

Enter current output value in alarm condition

Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Output settings  $\rightarrow$  Failure current

21.5 to 23 mA

**Navigation** 

Description

User entry

## Loop current mode

**Navigation** Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Output settings  $\rightarrow$  Loop curr mode

Description If Loop current mode is disabled, Multi-drop communication mode is activated. Multi-drop

is a HART digital communication mode where multiple devices may share the same pair of

wires for power and communications.

In this mode the output current is fixed.

User interface ■ Disable

■ Enable

## Assign HART variables?

Navigation Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Output settings  $\rightarrow$  Assign HART var?

Description Up to four HART variables can be transmitted via the HART protocol.

Select "Yes" to show/assign measuring variables to these HART variables.

Selection No

Yes

#### "Output settings" wizard

Navigation Guidance → Commissioning → Output settings

## Process variable output current

**Navigation** Guidance  $\rightarrow$  Commissioning  $\rightarrow$  Output settings  $\rightarrow$  Proc.var.curr.

Description Determines which process variable is transmitted via the current output.

User interface ■ Pressure

Scaled variable

Description

Current range output		
Navigation		
Description	Defines the current range used to transmit the measured or calculated value. In brackets are indicated the "low saturation value" and the "high saturation value". If Measured value $\leq$ "low saturation", the output current is set to "low saturation". If Measured value $\geq$ "high saturation", the output current is set to "high saturation".	
	Note: Currents below 3.6 mA or above 21.5 mA can be used to signal an alarm.	
Selection	■ 420 mA (420.5 mA) ■ 420 mA NE (3.820.5 mA) ■ 420 mA US (3.920.8 mA)	
Lower range value output		
Navigation	☐ Guidance $\rightarrow$ Commissioning $\rightarrow$ Output settings $\rightarrow$ Low.range outp	

User entry	Signed floating-point number
Upper range value output	
Navigation	
Description	Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).

the related lower (4 mA) and upper range values (20 mA).

Depending on which variable has been selected as "Process variable output current", define

User entry	Signed floating-point number

Navigation	Guidance $\rightarrow$ Commissioning $\rightarrow$ Output settings $\rightarrow$ Failure behav.

**Description** Defines which current the output assumes in the case of an error.

Min: < 3.6 mA Max: >21.5 mA

Note: The hardware DIP Switch for alarm current has priority over software setting.

Selection ■ Min. ■ Max.

Failure behavior current output

Failure current		
Navigation	☐ Guidance $\rightarrow$ Commissioning $\rightarrow$ Output settings $\rightarrow$ Failure current	
Description	Enter current output value in alarm condition	
User entry	21.5 to 23 mA	
Loop current mode		
Navigation	☐ Guidance $\rightarrow$ Commissioning $\rightarrow$ Output settings $\rightarrow$ Loop curr mode	
Description	If Loop current mode is disabled, Multi-drop communication mode is activated. Multi-drop is a HART digital communication mode where multiple devices may share the same pair of wires for power and communications.  In this mode the output current is fixed.	
User interface	<ul><li>Disable</li><li>Enable</li></ul>	
Assign HART variables?		
Navigation	☐ Guidance $\rightarrow$ Commissioning $\rightarrow$ Output settings $\rightarrow$ Assign HART var?	
Description	Up to four HART variables can be transmitted via the HART protocol.  Select "Yes" to show/assign measuring variables to these HART variables.	
Selection	■ No ■ Yes	
	"Output settings" wizard	
	Navigation $\square$ Guidance $\rightarrow$ Commissioning $\rightarrow$ Output settings	
Assign PV		
Navigation	☐ Guidance $\rightarrow$ Commissioning $\rightarrow$ Output settings $\rightarrow$ Assign PV	
Description	Use this function to select a measured variable (HART device variable) for the primary dynamic variable (PV).	

#### Selection

- Pressure
- Scaled variable

#### Assign SV

#### **Navigation**

☐ Guidance → Commissioning → Output settings → Assign SV

#### Description

Use this function to select a measured variable (HART device variable) for the secondary dynamic variable (SV).

#### Selection

- Pressure
- Scaled variable
- Sensor temperature
- Sensor pressure
- Electronics temperature
- Terminal current \*
- Terminal voltage \*
- Median of pressure signal \*
- Noise of pressure signal
- Signal noise detected \*
- Percent of range
- Loop current
- Not used

#### Additional information

### Selection

#### ■ **Sensor pressure** option

Sensor Pressure is the raw signal from sensor before damping and position adjustment.

■ **Terminal current** option

The terminal current is the read-back current on terminal block.

#### • Signal noise detected option

0 % - Signal noise is within the permissible range.

100 % - Signal noise is outside of the permissible range.

### ■ Loop current option

The loop current is the output current set by the applied pressure.

#### Assign TV

#### **Navigation**

□ Guidance → Commissioning → Output settings → Assign TV

#### Description

Use this function to select a measured variable (HART device variable) for the tertiary (third) dynamic variable (TV).

#### Selection

- Pressure
- Scaled variable
- Sensor temperature
- Sensor pressure
- Electronics temperature
- Terminal current \*

Endress+Hauser

53

<sup>\*</sup> Visibility depends on order options or device settings

- Terminal voltage
- Median of pressure signal
- Noise of pressure signal
- Signal noise detected \*
- Percent of range
- Loop current
- Not used

#### Additional information

#### Selection

#### • Sensor pressure option

Sensor Pressure is the raw signal from sensor before damping and position adjustment.

## ■ **Terminal current** option

The terminal current is the read-back current on terminal block.

#### • Signal noise detected option

0 % - Signal noise is within the permissible range.

100 % - Signal noise is outside of the permissible range.

#### ■ **Loop current** option

The loop current is the output current set by the applied pressure.

#### Assign OV

**a** 

#### **Navigation**

■ Guidance → Commissioning → Output settings → Assign QV

#### Description

Use this function to select a measured variable (HART device variable) for the quaternary (fourth) dynamic variable (QV).

#### Selection

- Pressure
- Scaled variable
- Sensor temperature
- Sensor pressure
- Electronics temperature
- Terminal current \*
- Terminal voltage <sup>7</sup>
- Median of pressure signal \*
- Noise of pressure signal
- Signal noise detected \*
- Percent of range
- Loop current
- Not used

## Additional information

#### Selection

#### ■ Sensor pressure option

Sensor Pressure is the raw signal from sensor before damping and position adjustment.

#### • Terminal current option

The terminal current is the read-back current on terminal block.

#### ■ Signal noise detected option

0 % - Signal noise is within the permissible range.

100 % - Signal noise is outside of the permissible range.

#### ■ **Loop current** option

The loop current is the output current set by the applied pressure.

54

<sup>\*</sup> Visibility depends on order options or device settings

# 3.2.2 "Heartbeat Technology" submenu

## "Heartbeat Verification" wizard

Navigation  $\Box$  Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Heartbeat Verif.

Heartbeat Verification	
Navigation	☐ Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Heartbeat Verif. $\rightarrow$ Heartbeat Config $\rightarrow$ Heartbeat Verif.
Selection	<ul><li>Start verification</li><li>Show results</li></ul>
	"Mainboard module" wizard
	Navigation $\blacksquare$ Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Heartbeat Verif. $\rightarrow$ Mainboard module
System status	
Navigation	
Description	Checks active measurement device errors at diagnostical behavior "alarm". If an active error is detected, then verification will be performed but the overall result will always be "Failed".
User interface	<ul> <li>Not done</li> <li>Passed</li> <li>Not done</li> <li>Failed</li> </ul>
Output current	
Navigation	
Description	Checks whether read-back current at the output matches the current set by the device.

User interface	<ul> <li>Not done</li> <li>Passed</li> <li>Not done</li> <li>Failed</li> </ul>
Software integrity	
Navigation	Guidance → Heartbeat Techn. → Heartbeat Verif. → Mainboard module → Software integ.
Description	Checks whether the function blocks of the software are executed in the correct order.
User interface	<ul> <li>Not done</li> <li>Passed</li> <li>Not done</li> <li>Failed</li> </ul>
RAM check	
Navigation	Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Heartbeat Verif. $\rightarrow$ Mainboard module $\rightarrow$ RAM check
Description	Checks the correct function of the RAM (Random Access Memory).
User interface	<ul> <li>Not done</li> <li>Passed</li> <li>Not done</li> <li>Failed</li> </ul>
ROM check	
Navigation	Guidance → Heartbeat Techn. → Heartbeat Verif. → Mainboard module → ROM check

Checks the correct function of the ROM memory (Read-Only-Memory).

## User interface

Description

- Not done
- Passed
- Not done
- Failed

## Loop diagnostics

Navigation

diagn.

Description

Checks whether the voltage/current values are within range or the voltage/current baseline defined with wizard.

"Failed" can indicate faulty power supply or grounding / wiring.

User interface

Not done

- Passed
- Not done
- Failed

#### Sensor integrity

Navigation

Description

Checks the integrity of the sensor. Scope of check depends on sensor type used.

User interface

- Not done
- Passed
- Not done
- Failed

#### Membrane integrity

Navigation

Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Heartbeat Verif.  $\rightarrow$  Sensor module  $\rightarrow$  Membrane integr.

Description

Checks the integrity of the membrane.

Notice:

Not included in the scope of testing for metallic membranes.

User interface

- Not done
- Passed
- Not done
- Failed

## Sensor/membrane integrity

Navigation

membrane

Description

Checks the integrity of the sensor and membrane.

User interface

- Not done
- Passed
- Not done
- Failed

## **Statistical Sensor Diagnostics**

Navigation

Description

Checks whether the actual values are within the defined signal noise thresholds.

User interface

- Not done
- Passed
- Not done
- Failed

## Analog path integrity

Navigation

Guidance → Heartbeat Techn. → Heartbeat Verif. → Sensor module → Path integrity

Description

Checks if the analog path of the sensor has changed from state of delivery.

User interface

- Not done
- Passed
- Not done
- Failed

Verification result		
Navigation	Guidance → Heartbeat Techn. → Heartbeat Verif. → Verific. result → Verific. result	
User interface	<ul> <li>Not done</li> <li>Passed</li> <li>Not done</li> <li>Failed</li> </ul>	
Save protocol?		
Navigation	Guidance → Heartbeat Techn. → Heartbeat Verif. → Verific. result → Save protocol?	
Description	The Report can be saved for archiving.	
Selection	• No • Yes	
Inspector		
Navigation	☐ Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Heartbeat Verif. $\rightarrow$ Finish $\rightarrow$ Inspector	
Description	The entered inspector name will be included in the report.	
User entry	Character string comprising numbers, letters and special characters (96)	
Location		
Navigation	☐ Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Heartbeat Verif. $\rightarrow$ Finish $\rightarrow$ Location	
Description	The entered value will be included in the report.	
User entry	Character string comprising numbers, letters and special characters (96)	

Notes		
Notes		
Navigation	☐ Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Heartbeat Verif. $\rightarrow$ Finish $\rightarrow$ Notes	
Description	The entered value will be included in the report.	
User entry	Character string comprising numbers, letters and special characters (255)	
Plant operator		
Navigation	☐ Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Heartbeat Verif. $\rightarrow$ Finish $\rightarrow$ Plant operator	
Description	The entered value will be included in the report.	
User entry	Character string comprising numbers, letters and special characters (96)	
Operating time (Verificat	ion)	
Navigation		
User interface	Days (d), hours (h), minutes (m), seconds (s)	
Date/time Heartbeat Ver	ification	
Navigation	Guidance → Heartbeat Techn. → Heartbeat Verif. → Finish → Date/time Heartbeat Verification	
Description	Date and time of last Heartbeat Verification.	
	This value is updated with every Heartbeat verification.	
	Note: If time information is not available, e.g. Heartbeat verification is started from display, '' is shown.	
User interface	Character string comprising numbers, letters and special characters	

Status summary		
Navigation	☐ Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Stat. Sens. Diag $\rightarrow$ Configuration $\rightarrow$ Status summary	
Description	Activate SSD.	
User interface	<ul> <li>Deactivated</li> <li>Learning phase</li> <li>Monitoring inactive</li> <li>Monitoring active</li> <li>Monitoring active with event</li> <li>No baseline</li> </ul>	
Status summary		
Navigation	☐ Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Stat. Sens. Diag $\rightarrow$ Configuration $\rightarrow$ Status summary	
Description	Please wait. Function is not ready.	
User interface	<ul> <li>Deactivated</li> <li>Learning phase</li> <li>Monitoring inactive</li> <li>Monitoring active</li> <li>Monitoring active with event</li> <li>No baseline</li> </ul>	
Status summary		
Navigation	☐ Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Stat. Sens. Diag $\rightarrow$ Configuration $\rightarrow$ Status summary	
Description	The signal noise is too small for the teach-in phase.  Note: Teach-in is only possible while the process is running.  Measures: Check valve position. If necessary, perform the teach-in procedure later while the process is running.	
User interface	<ul> <li>Deactivated</li> <li>Learning phase</li> <li>Monitoring inactive</li> <li>Monitoring active</li> <li>Monitoring active with event</li> </ul>	

Endress+Hauser 61

No baseline

Status	summary
--------	---------

### Navigation

Guidance → Heartbeat Techn. → Stat. Sens. Diag → Configuration → Status summary

#### Description

The teach-in phase is completed. Continue or terminate the configuration.

#### User interface

- Deactivated
- Learning phase
- Monitoring inactive
- Monitoring active
- Monitoring active with event
- No baseline

## **Status summary**

## Navigation

Guidance → Heartbeat Techn. → Stat. Sens. Diag → Configuration → Status summary

#### Description

The SSD is not active because the average value of the raw signal is outside the limits. The SSD is reactivated as soon as the average value is within the limits again. Adjust the limits if necessary.

#### User interface

- Deactivated
- Learning phase
- Monitoring inactive
- Monitoring active
- Monitoring active with event
- No baseline

#### Status summary

## Navigation

Guidance → Heartbeat Techn. → Stat. Sens. Diag → Configuration → Status summary

## Description

The SSD has detected an event (e.g. blocked impulse line). Check whether maintenance work is required.

## User interface

- Deactivated
- Learning phase
- Monitoring inactive
- Monitoring active
- Monitoring active with event
- No baseline

## Status summary

### Navigation

## Description

The SSD is not active because the process conditions are too dynamic for reliable operation. If necessary, teach in a new baseline or adjust the sampling rate.

The SSD is reactivated as soon as the average value of the raw signal is within the limits.

#### User interface

- Deactivated
- Learning phase
- Monitoring inactive
- Monitoring active
- Monitoring active with event
- No baseline

#### Status summary

#### **Navigation**

Guidance → Heartbeat Techn. → Stat. Sens. Diag → Configuration → Status summary

## Description

The current signal noise is too small to activate the SSD.

#### User interface

- Deactivated
- Learning phase
- Monitoring inactive
- Monitoring active
- Monitoring active with event
- No baseline

## Status summary

## Navigation

☐ Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Configuration  $\rightarrow$  Status summary

#### Description

Baseline could not be created with following reasons:

- There is not enough signal noise during building baseline phase.
- There is a process change during building baseline phase.

#### User interface

- Deactivated
- Learning phase
- Monitoring inactive
- Monitoring active
- Monitoring active with event
- No baseline

#### System status

## **Navigation**

Guidance → Heartbeat Techn. → Stat. Sens. Diag → Configuration → System status

#### User interface

- Idle
- No sufficient signal noise
- Stable
- Not stable
- Verify System Dynamics
- Process dynamic too high

#### Signal status

#### Navigation

Guidance → Heartbeat Techn. → Stat. Sens. Diag → Configuration → Signal status

### User interface

- Idle
- Building Baseline
- Verifying Baseline
- Verifying baseline failed
- Monitoring
- Out of range
- Monitoring inactive

## Signal noise status

## **Navigation**

Guidance → Heartbeat Techn. → Stat. Sens. Diag → Configuration  $\rightarrow$  Noise status

#### User interface

- Idle
- Building Baseline
- Verifying Baseline
- Verifying baseline failed
- Monitoring
- Out of range
- Monitoring inactive

## Baseline build process

## Navigation

#### User interface

0 to 100 %

Sample rate

**Navigation**  $\square$  Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Configuration  $\rightarrow$  Sample rate

**Description** Determines the sampling rate depending on the process conditions:

"Fast'

homogeneous stable process with Gauss distribution.

"Medium'

dynamic process

"Slow'

extremely dynamic variable process

Selection • Fast

■ Medium

Slow

#### **Counter Baseline creation SSD**

**Navigation** Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Configuration  $\rightarrow$  Counter

Baseline

**Description** Specifies how often the baseline has been rebuilt.

**User interface** Positive integer

Baseline is available

**Navigation**  $\square$  Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Configuration  $\rightarrow$  Baseline avail.

**Description** Indicates whether a baseline already exists.

**User interface** • Please select

■ No

Yes

# Signal status Navigation Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Stat. Sens. Diag $\rightarrow$ Monitoring $\rightarrow$ Signal status User interface Idle Building Baseline Verifying Baseline Verifying baseline failed Monitoring Out of range Monitoring inactive **Current Baseline signal** Navigation Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Stat. Sens. Diag $\rightarrow$ Monitoring $\rightarrow$ Curr. Baseline Description Current average of the raw signal. User interface Signed floating-point number

# Baseline Signal Upper Control Line

**Navigation** Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Monitoring  $\rightarrow$  Baseline S. UCL

**Description** Upper limit for the average value of the raw signal. If the average value is above this limit,

the SSD is inactive.

Note:

This parameter should not be greater than "Signal maximum value".

**User entry** Signed floating-point number

## **Baseline Signal Control Line**

**Navigation** Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Monitoring  $\rightarrow$  Baseline S. CL

**Description** Learned-in mean of the raw signal.

**User interface** Signed floating-point number

66

## Baseline Signal Lower Control Line

**Navigation**  $\square$  Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Monitoring  $\rightarrow$  Baseline S. LCL

**Description** Lower limit for the average value of the raw signal. If the average value is below this limit,

the SSD is inactive.

Note:

This parameter should not be less than "Signal minimum value".

**User entry** Signed floating-point number

#### Signal minimum value

**Navigation** Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Monitoring  $\rightarrow$  Minimum value

**Description** Minimum mean of the raw signal during the learning phase.

**User interface** Signed floating-point number

### Signal maximum value

**Navigation** Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Monitoring  $\rightarrow$  Maximum value

**Description** Maximum mean of the raw signal during the learning phase.

**User interface** Signed floating-point number

### Signal noise status

**Navigation**  $\square$  Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Monitoring  $\rightarrow$  Noise status

**User interface** ■ Idle

- Building Baseline
- Verifying Baseline
- Verifying baseline failed
- Monitoring
- Out of range
- Monitoring inactive

#### **Current Baseline noise**

**Navigation** Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Monitoring  $\rightarrow$  Current noise

**Description** Current signal noise (standard deviation) of the raw signal.

**User interface** Signed floating-point number

### **Baseline Signal Noise Upper Control Line**

**Navigation**  $\Box$  Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Monitoring  $\rightarrow$  Baseline SN. UCL

**Description** Upper limit for the noise of the raw signal. If the noise is above this limit, the SSD is

inactive.

Note:

This parameter should not be greater than "Signal noise maximum value".

**User entry** Signed floating-point number

### **Baseline Signal Noise Control Line**

**Navigation** Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Monitoring  $\rightarrow$  Baseline SN. CL

**Description** Learned-in noise of the raw signal.

**User interface** Signed floating-point number

## **Baseline Signal Noise Lower Control Line**

**Navigation**  $\square$  Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Monitoring  $\rightarrow$  Baseline SN. LCL

**Description** Lower limit for the noise of the raw signal. If the noise is below this limit, the SSD is

inactive.

Note:

This parameter should not be less than "Signal noise minimum value".

**User entry** Signed floating-point number

#### **Baseline Signal Noise Minimum**

Navigation Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Monitoring  $\rightarrow$  Baseline SN. Min

Description Minimum value of the signal noise. Below this value, the SSD cannot be activated.

User entry Signed floating-point number

## Signal noise minimum value

Navigation Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Monitoring  $\rightarrow$  Min. noise value

Description Minimum measured signal noise during the learning phase.

User interface Signed floating-point number

### Signal noise maximum value

**Navigation** Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Monitoring  $\rightarrow$  Max noise value

Description Maximum measured signal noise during the learning phase.

User interface Signed floating-point number

## SSD Monitoring delay time

**Navigation** Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag. settings  $\rightarrow$  SSD Verz. Zeit

User entry 0 to 86 400 s

#### 900 Event category

Navigation Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Diag. settings  $\rightarrow$  900Event

category

Description Select category for diagnostic message.

Selection

■ Failure (F)

■ Function check (C)

Out of specification (S)

Maintenance required (M)

■ No effect (N)

### 900 Diagnostic behavior

Navigation

behav.

Description

Select event behavior

"Logbook entry only": no digital or analog transmission of the message.

"Warning": Current output unchanged. Message is output digitally (default).

If the permissible conditions are reached again, the warning is no longer available in the

instrument.

Selection

Warning

■ Logbook entry only

## SSD Out of range delay time

Navigation

**User entry** 

0 to 604800 s

### 906 Event category

Navigation

Description

Select category for diagnostic message.

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

## SSD: Statistical Sensor Diagnostics

**Navigation** Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Stat. Sens. Diag  $\rightarrow$  Activ./Deactiv.  $\rightarrow$  Stat. Sens. Diag

**Description** Enable or disable SSD.

After selecting "Disable", no statistical sensor diagnosis takes place. No diagnostic messages

are output.

**Selection** • Disable

Enable

#### I have read the warning texts.

**Navigation** Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Loop diagn.  $\rightarrow$  Configuration  $\rightarrow$  warning texts

**Description** The characterization of the electrical loop requires intermediate generation of a current

output of 4 mA and 20 mA.

Therefore, do not use the device in an active current loop during initialization of the Signal

Loop Diagnostics.

**Selection** Yes

### Baseline status

**Navigation** Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Loop diagn.  $\rightarrow$  Configuration  $\rightarrow$  Baseline status

**Description** "Failed"

Means, baseline is not available or creation not possible.

"Success"

Baseline is available.

**User interface** ■ Failed

Success

Baseline build process		
Navigation	Guidance → Heartbeat Techn. → Loop diagn. → Configuration → Baseline process	
User interface	0 to 100 %	
Timestamp Baseline		
Navigation		
Description	Time stamp when the baseline was recorded (current-voltage curve). At this time, the upper terminal voltage (U1) was determined at 4 mA and the lower terminal voltage (U2) was determined at 20 mA.	
User interface	Character string comprising numbers, letters and special characters	
Resistance Baseline		
Navigation	Guidance → Heartbeat Techn. → Loop diagn. → Configuration → Resistance BL	
Description	Displays the resistance value of the baseline (slope of the current-voltage curve).	
User interface	Positive floating-point number	
Supply voltage Baseline		
Navigation	☐ Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Loop diagn. $\rightarrow$ Configuration $\rightarrow$ Supply volt. BL	
Description	Displays the point from which the baseline is built (voltage at the point where the current voltage curve is generated).	
User interface	0.0 to 50.0 V	

#### Timestamp previous Baseline

**Navigation**  $\square$  Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Loop diagn.  $\rightarrow$  Configuration  $\rightarrow$  Timestamp pre BL

**Description** Time stamp when the previous baseline was recorded (current-voltage curve).

At this time, the upper terminal voltage (U1) was determined at 4 mA and the lower

terminal voltage

(U2) was determined at 20 mA.

**User interface** Character string comprising numbers, letters and special characters

#### Resistance previous Baseline

**Navigation**  $\square$  Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Loop diagn.  $\rightarrow$  Configuration  $\rightarrow$  Resist. pre. BL

**Description** Displays the resistance value of the previous baseline (slope of the previous current-

voltage curve).

**User interface** Positive floating-point number

#### Supply voltage previous Baseline

**Navigation**  $\square$  Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Loop diagn.  $\rightarrow$  Configuration  $\rightarrow$  Voltage pre. BL

**Description** Displays the point from which the previous baseline is built (voltage at the point where the

previous current-voltage curve was generated).

**User interface** 0.0 to 50.0 V

Tolerated deviation +/-

**Navigation**  $\square$  Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Loop diagn.  $\rightarrow$  Monitoring  $\rightarrow$  Toler. deviation

**Description** A value should be chosen to ensure that normal voltage deviations do not lead to

unwanted messages.

Default 1.5 V DC

**User entry** 0.5 to 3.0 V

806 Event delay		<b>a</b>
Navigation	Guidance → Heartbeat Techn. → Loop diagn. → Diag. settings $\rightarrow$ 806 Event delay	
Description	Displays how long the triggering status must be present until an event message is issued Used to filter out short-term signal interference.	
User entry	0 to 60 s	
806 Event category		<b>a</b>
Navigation	☐ Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Loop diagn. $\rightarrow$ Diag. settings $\rightarrow$ 806Event categor	у
Description	Select category for diagnostic message.	
Selection	<ul> <li>Failure (F)</li> <li>Function check (C)</li> <li>Out of specification (S)</li> <li>Maintenance required (M)</li> <li>No effect (N)</li> </ul>	

806 Diagnostic behavior	
Navigation	Guidance → Heartbeat Techn. → Loop diagn. → Diag. settings → 806 Diag. behav.
Description	Select event behavior
	"Logbook entry only": no digital or analog transmission of the message.
	"Warning": Current output unchanged. Message is output digitally (default).
	If the permissible conditions are reached again, the warning is no longer available in the instrument.
Selection	<ul><li>Warning</li><li>Logbook entry only</li></ul>

74

Loop diagnostics		<b>a</b>
Navigation	☐ Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Loop diagn. $\rightarrow$ Activ./Deactiv. $\rightarrow$ Loop diagn.	
Description	Enable/disable loop diagnostics.	
	Note: If the function is disabled, there is no analysis and no event message.	
Selection	<ul><li>Disable</li><li>Enable</li></ul>	

500 Process alert pressure	
Navigation	☐ Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Process window $\rightarrow$ Pressure range $\rightarrow$ 500 Pressure
Description	Define whether user-defined pressure limits should be set. If "Off" is selected, no analysis will take place and no event message will be generated.
Selection	■ Off ■ On

Low alert value		
Navigation	Guidance → Heartbeat Techn. → Process window → Pressure range → Low alert value	
Description	Set range. If this limit value is exceeded or undercut, a diagnostic event is generated. There is no hysteresis.	
User entry	Signed floating-point number	

High alert value

value

**Description** Set range.

If this limit value is exceeded or undercut, a diagnostic event is generated. There is no

hysteresis.

**User entry** Signed floating-point number

Counter underruns of user limit Pmin

**Navigation** Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Process window  $\rightarrow$  Pressure range  $\rightarrow$  Counter < P

user

**Description** Counts how many times the value underruns the minimum values defined by the user.

User defined minimum values are shown in Diagnostic/Diagnostic settings/Properties

menu.

**User interface** 0 to 65 535

Counter overruns of user limit Pmax

**Navigation** Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Process window  $\rightarrow$  Pressure range  $\rightarrow$  Counter > P

user

**Description** Counts how many times the value overruns the maximum values defined by the user.

User defined maximum values are shown in Diagnostic/Diagnostic settings/Properties

menu.

**User interface** 0 to 65 535

#### 500 Diagnostic behavior

Navigation

behav.

**Description** Select event behavior

"Logbook entry only":

no digital or analog transmission of the message

"Warning": Current output unchanged. Message is output digitally (default).

"Alarm": Current output assumes the set alarm current.

Regardless of the setting, the message appears on the display. If the permissible conditions

are reached again, the warning is no longer available in the instrument.

Selection ■ Off

AlarmWarning

■ Logbook entry only

#### 500 Event category

Navigation

Guidance → Heartbeat Techn. → Process window → Pressure range → 500Event category

Selection

Failure (F)

Function check (C)Out of specification (S)Maintenance required (M)

■ No effect (N)

#### 501 Process alert scaled variable

**Navigation** 

Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Process window  $\rightarrow$  Pressure range  $\rightarrow$  501 Scaled var.

**Description** Define whether user-defined limits should be set.

If "Off" is selected, no analysis will take place and no event message will be generated.

Selection ■ Off

■ On

Low alert value		
Navigation	Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Process window $\rightarrow$ Pressure range $\rightarrow$ Low alert value	
Description	Set range. If this limit value is exceeded or undercut, a diagnostic event is generated. There is no hysteresis.	
User entry	Signed floating-point number	
High alert value		
Navigation		
Description	Set range. If this limit value is exceeded or undercut, a diagnostic event is generated. There is no hysteresis.	
User entry	Signed floating-point number	
501 Diagnostic behavior		
Navigation	$\  \   \   \   \   \   \   \   \   \  $	
Description	Select event behavior	
-	"Logbook entry only": no digital or analog transmission of the message	
	"Warning": Current output unchanged. Message is output digitally (default).	
	"Alarm": Current output assumes the set alarm current.	
	Regardless of the setting, the message appears on the display. If the permissible conditare reached again, the warning is no longer available in the instrument.	ions
Selection	<ul> <li>Off</li> <li>Alarm</li> <li>Warning</li> <li>Logbook entry only</li> </ul>	

501 Event category		<b>1</b>
Navigation	Guidance → Heartbeat Techn. → Process window → Pressure range → 501Event category	
Selection	<ul> <li>Failure (F)</li> <li>Function check (C)</li> <li>Out of specification (S)</li> <li>Maintenance required (M)</li> <li>No effect (N)</li> </ul>	

User temperature process alert		_
Navigation		
Description	Define whether the user-defined sensor temperature limits should be set. If "Off" no analysis and therefore no event message will take place.	
Selection	<ul><li>Off</li><li>On</li></ul>	

Low alert value	
Navigation	Guidance → Heartbeat Techn. → Process window → Temp. range → Low alert value
Description	Set range. If this limit value is exceeded or undercut, a diagnostic event is generated. There is no hysteresis.
User entry	−50 to 150 °C

High alert value	
Navigation	☐ Guidance $\rightarrow$ Heartbeat Techn. $\rightarrow$ Process window $\rightarrow$ Temp. range $\rightarrow$ High alert value
Description	Set range. If this limit value is exceeded or undercut, a diagnostic event is generated. There is no hysteresis.
User entry	−50 to 150 °C

#### Counter underruns of user limit Tmin

**Navigation** Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Process window  $\rightarrow$  Temp. range  $\rightarrow$  Counter < T user

**User interface** 0 to 65 535

#### Counter overruns of user limit Tmax

**Navigation** Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Process window  $\rightarrow$  Temp. range  $\rightarrow$  Counter > T user

**User interface** 0 to 65 535

#### 502 Diagnostic behavior

A

**Navigation** Suidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Process window  $\rightarrow$  Temp. range  $\rightarrow$  502 Diag. behav.

**Description** Select event behavior

"Logbook entry only":

no digital or analog transmission of the message

"Warning": Current output unchanged. Message is output digitally (default).

"Alarm": Current output assumes the set alarm current.

Regardless of the setting, the message appears on the display. If the permissible conditions

are reached again, the warning is no longer available in the instrument.

Selection ■ Off

- Alarm
- $\blacksquare$  Warning
- Logbook entry only

# 502 Event category

**Navigation** Guidance  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Process window  $\rightarrow$  Temp. range  $\rightarrow$  502Event category

**Selection** ■ Failure (F)

- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

# 3.2.3 "Safety mode" wizard

Navigation  $\square$  Guidance  $\rightarrow$  Safety mode

#### "Preparation" wizard

*Navigation*  $\square$  Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation

# I have read the warning texts.

**Navigation** Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation  $\rightarrow$  warning texts

**Description** - Prior to using the wizard, read the Functional Safety Manual or the WHG documentation.

- In the wizard, safety-relevant parameter settings of the device will be shown.

- The user must confirm the correctness of these settings.

- By clicking "Finish" at the end of the wizard, the device is safety locked.

- A documentation of the safety-relevant parameter settings can be generated at the end of the wizard.

- The device can be unlocked via this wizard in case the device is safety locked.

- If the wizard is aborted, the device locking status will not be changed!

**Selection** Yes

#### "Preparation" wizard

Navigation  $\square$  Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation

#### Enter safety unlocking code

**Navigation** Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation  $\rightarrow$  Safe.unlock code

**Description** The Safety locking/unlocking code can be found in the corresponding safety manual or the

WHG documentation.

**User entry** 0 to 65 535

#### Locking status

**Navigation** Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation  $\rightarrow$  Locking status

**Description** Displays the active write protection.

#### User interface

- Hardware locked
- Safety locked
- Temporarily locked

#### Additional information

#### User interface

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.



Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

#### Selection

Function scope of the "Locking status" parameter

Options	Description
None	The access status displayed in the <b>Access status display</b> parameter applies. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the main electronics module. This prevents write access to the parameters (e.g. via the local display or operating tool).
Temporarily locked	Write access to the parameters is temporarily locked due to device-internal processing (e.g. data upload/download, reset). Once the internal processing has been completed, the parameters can be changed once again.

# "Preparation" wizard

Navigation Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation

# Proof test via Bluetooth allowed?

#### **Navigation**

Guidance  $\rightarrow$  Safety lock  $\rightarrow$  Preparation  $\rightarrow$  BLE proof test

#### Description

After completion of the Safety mode wizard, the device will be write protected via software lock.

To use the proof test wizard (optional), the device does not have to be unlocked.

It must be defined, if the proof test wizard via Bluetooth is allowed.

# Selection

- No
- Yes

#### "Preparation" wizard

*Navigation*  $\square$  Guidance  $\rightarrow$  Safety lock  $\rightarrow$  Preparation

### Enter safety locking code

**Navigation** Guidance  $\rightarrow$  Safety lock  $\rightarrow$  Preparation  $\rightarrow$  Safety code

**Description** Enter the locking code to start the SIL/WHG locking sequence.

**User entry** 0 to 65 535

Additional information

Locking codes

WHG: 7450SIL: 7452

■ SIL and WHG: 7454

#### "Preparation" wizard

*Navigation*  $\square$  Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation

#### Character test string

**Navigation** Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation  $\rightarrow$  Char.test string

**Description** The following character string is displayed:

0123456789+-,..

Set the "Confirm" parameter to "Yes" if this string is rendered correctly.

Set the "Confirm" parameter to "No" if this string is not rendered correctly. Safety locking is

not possible in this case.

**User interface** Character string comprising numbers, letters and special characters

Confirm

**Navigation**  $\square$  Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation  $\rightarrow$  Confirm

**Description** The following character string is displayed:

0123456789+-,.

Set the "Confirm" parameter to "Yes" if this string is rendered correctly.

Set the "Confirm" parameter to "No" if this string is not rendered correctly. Safety locking is

not possible in this case.

#### Selection

■ No

Yes

# "Preparation" wizard

Navigation

Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation

# Device tag

Navigation

Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation  $\rightarrow$  Device tag

Description


Displays a unique name for the measuring point so it can be identified quickly within the plant. The name is displayed in the header.

User interface

Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).

#### Additional information

User interface

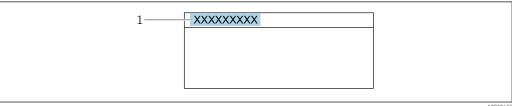

Position of the header text on the display

The number of characters displayed depends on the characters used.

#### Device name

Navigation

Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation  $\rightarrow$  Device name

Description

Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.

User interface

Max. 32 characters such as letters or numbers.

Description

Selection

 Serial number

 Navigation
 □ Guidance → Safety mode → Preparation → Serial number

 Description
 Displays the serial number of the measuring device.

 ■ The number can be found on the nameplate of the sensor and transmitter.

 User interface
 Max. 11-digit character string comprising letters and numbers.

 Additional information
 Description

 ■ To identify the measuring device quickly, e.g. when contacting Endress+Hauser.

 ■ To obtain specific information on the measuring device using the Device Viewer:

Firmware version		
Navigation	☐ Guidance $\rightarrow$ Safety mode $\rightarrow$ Preparation $\rightarrow$ Firmware version	
Description	Displays the device firmware version that is installed.	
User interface	Character string in the format xx.yy.zz	
Additional information	User interface	

www.endress.com/deviceviewer

The Firmware version is also located:

• On the transmitter nameplate

Confirm connection to the correct device.

NoYes

• On the title page of the Operating instructions

Hardware version	
Navigation	☐ Guidance $\rightarrow$ Safety mode $\rightarrow$ Preparation $\rightarrow$ Hardware version
User interface	Character string comprising numbers, letters and special characters
Confirm	
Navigation	☐ Guidance $\rightarrow$ Safety mode $\rightarrow$ Preparation $\rightarrow$ Confirm

# "Preparation" wizard

Navigation  $\square$  Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation

# CRC device configuration

**Navigation** Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation  $\rightarrow$  CRC device conf.

**Description** CRC device configuration based on current settings of safety relevant parameters.

The CRC device configuration is unique and can be used to detect changes in safety

relevant parameter settings.

**User interface** 0 to 65 535

#### Stored CRC device configuration

**Navigation** Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation  $\rightarrow$  Stored CRC conf.

**Description** Stored CRC after the last safety lock. Factory delivery is 65535 means that the device has

not yet been safety locked.

**User interface** 0 to 65 535

### Timestamp stored CRC device config.

**Navigation** Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation  $\rightarrow$  Time stored CRC

**Description** Gives the time stamp when the CRC was last stored following completion of the safety lock

wizard.

**User interface** Character string comprising numbers, letters and special characters

#### Operating time

**Navigation** Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation  $\rightarrow$  Operating time

**Description** Indicates how long the device has been in operation.

**Additional information** Maximum time: 9 999 d (≈ 27 years)

#### **Configuration counter**

# Navigation G

Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Preparation  $\rightarrow$  Config. counter

#### Description

Displays the counter for changes to the device parameters.

#### Additional information:

- If the value for a static parameter is changed when optimizing or configuring the parameter, the counter is incremented by 1. This is to enable tracking different parameter versions.
- When multiple parameters are changed simultaneously, e.g. when loading parameters into the device from an external source such as FieldCare, the counter may display a higher value. The counter cannot be reset, nor is it reset to a default value on performing a device
- Once the counter has reached the value 65535, it restarts at 0.

#### User interface

0 to 65 535

#### "Confirmation" wizard

*Navigation*  $\square$  Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Confirmation

# Zero adjustment offset

**Navigation**  $\square$  Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Confirmation  $\rightarrow$  Zero offset

**Description** Assigned value of zero adjustment due to mounting position.

**User interface** Character string comprising numbers, letters and special characters

# HP/LP swap

**Navigation** Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Confirmation  $\rightarrow$  HP/LP swap

**Description** Assigned setting high pressure / low pressure.

**User interface** ■ No

Yes

# **Damping Navigation** Guidance $\rightarrow$ Safety mode $\rightarrow$ Confirmation $\rightarrow$ Damping Description Assigned damping value. User interface Character string comprising numbers, letters and special characters Sensor pressure range behavior Navigation Guidance $\rightarrow$ Safety mode $\rightarrow$ Confirmation $\rightarrow$ P-range behavior Description Assigned event behavior in case of over/under pressure outside of measuring range. User interface Alarm Warning Remark Special Confirm **Navigation** Guidance $\rightarrow$ Safety mode $\rightarrow$ Confirmation $\rightarrow$ Confirm Guidance $\rightarrow$ Safety mode $\rightarrow$ Confirmation $\rightarrow$ Confirm Selection No Yes "Confirmation" wizard **Navigation** Guidance → Safety mode → Confirmation **Output current transfer function** Navigation Guidance $\rightarrow$ Safety mode $\rightarrow$ Confirmation $\rightarrow$ Curr. trans.func Description Assigned transfer function for current output. NOTE "Square root" is only available with differential pressure measurement.

User interface

LinearSquare root

# Low cutoff Navigation Guidance $\rightarrow$ Safety mode $\rightarrow$ Confirmation $\rightarrow$ Low cutoff User interface Character string comprising numbers, letters and special characters Confirm Navigation Guidance $\rightarrow$ Safety mode $\rightarrow$ Confirmation $\rightarrow$ Confirm Selection ■ No ■ Yes "Confirmation" wizard Guidance → Safety mode → Confirmation Navigation Measuring mode current output Navigation Guidance $\rightarrow$ Safety mode $\rightarrow$ Confirmation $\rightarrow$ Output mode Description Assigned setting of curve form of current output. User interface Standard Inverse ■ Bi-directional

#### Failure behavior current output

**Navigation**  $\square$  Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Confirmation  $\rightarrow$  Failure behav.

**Description** Assigned value of current output in case of an error.

**User interface** ■ Min.

Max.

# **Current range output**

**Navigation**  $\square$  Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Confirmation  $\rightarrow$  Current range

**Description** Assigned current range used to transmit the measured value.

**User interface** ■ 4...20 mA (4...20.5 mA)

4...20 mA NE (3.8...20.5 mA)4...20 mA US (3.9...20.8 mA)

Customer specific

#### Lower range value output

**Navigation**  $\square$  Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Confirmation  $\rightarrow$  Low.range outp

**Description** Assigned value 4 mA.

**User interface** Character string comprising numbers, letters and special characters

# Upper range value output

**Navigation** Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Confirmation  $\rightarrow$  Upp.range outp

**Description** Assigned value 20 mA.

**User interface** Character string comprising numbers, letters and special characters

# Assign PV

**Navigation** Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Confirmation  $\rightarrow$  Assign PV

**Description** Identifies the process variable linked with the primary variable. Primary variable is used in

HART as current output.

**User interface** • Pressure

Scaled variable

User entry

Confirm		
Navigation	☐ Guidance $\rightarrow$ Safety mode $\rightarrow$ Confirmation $\rightarrow$ Confirm	
Selection	■ No ■ Yes	
	"Confirmation" wizard	
	Navigation $\square$ Guidance $\rightarrow$ Safety mode $\rightarrow$ Confirmation	
Zero adjustment offset		
Navigation	Guidance → Safety mode → Confirmation → Zero offset	
Description	Assigned value of zero adjustment due to mounting position.	
User interface	Character string comprising numbers, letters and special characters	
Confirm		Â
Navigation	☐ Guidance $\rightarrow$ Safety mode $\rightarrow$ Confirmation $\rightarrow$ Confirm	
Selection	■ No ■ Yes	
	"Locking" wizard	
	Navigation $\square$ Guidance $\rightarrow$ Safety mode $\rightarrow$ Locking	
		ه
Enter safety locking code		
Navigation	☐ Guidance $\rightarrow$ Safety mode $\rightarrow$ Locking $\rightarrow$ Safety code	
Description	Enter the locking code to start the SIL/WHG locking sequence.	

Endress+Hauser 91

0 to 65 535

#### Additional information

# Locking codes

■ WHG: 7450 ■ SIL: 7452

■ SIL and WHG: 7454

#### Locking status

**Navigation** Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Locking  $\rightarrow$  Locking status

Description Displays the active write protection.

User interface ■ Hardware locked

Safety locked

■ Temporarily locked

#### Additional information

#### User interface

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.



Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

#### Selection

Function scope of the "Locking status" parameter

Options	Description
None	The access status displayed in the <b>Access status display</b> parameter applies. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the main electronics module. This prevents write access to the parameters (e.g. via the local display or operating tool).
Temporarily locked	Write access to the parameters is temporarily locked due to device-internal processing (e.g. data upload/download, reset). Once the internal processing has been completed, the parameters can be changed once again.

#### Save protocol?

Navigation Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Locking  $\rightarrow$  Save protocol?

Description The Report can be saved for archiving.

Selection ■ No

Yes

# "Finish" wizard

	Navigation		Guidance $\rightarrow$ Proof test $\rightarrow$ Finis
--	------------	--	---

Inspector	
Navigation	
	☐ Guidance $\rightarrow$ Safety mode $\rightarrow$ Result $\rightarrow$ Inspector
Description	The entered inspector name will be included in the report.
User entry	Character string comprising numbers, letters and special characters (96)
Location	
Navigation	Guidance → Proof test → Finish → Location
	☐ Guidance $\rightarrow$ Safety mode $\rightarrow$ Result $\rightarrow$ Location
Description	The entered value will be included in the report.
User entry	Character string comprising numbers, letters and special characters (96)
Date/time	
Navigation	☐ Guidance $\rightarrow$ Safety mode $\rightarrow$ Result $\rightarrow$ Date/time
User interface	Character string comprising numbers, letters and special characters
Notes	
Navigation	☐ Guidance → Proof test → Finish → Notes
Navigation	Guidance → Proof test → Finish → Notes  Guidance → Safety mode → Result → Notes
Description	The entered value will be included in the report.
User entry	Character string comprising numbers, letters and special characters (255)

# Plant operator

**Navigation**  $\Box$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Finish  $\rightarrow$  Plant operator

☐ Guidance  $\rightarrow$  Safety mode  $\rightarrow$  Result  $\rightarrow$  Plant operator

**Description** The entered value will be included in the report.

**User entry** Character string comprising numbers, letters and special characters (96)

#### 3.2.4 "Proof test" wizard

Navigation  $\square$  Guidance  $\rightarrow$  Proof test

# "Preparation Proof test" wizard

*Navigation*  $\square$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Prep. test

# I have read the warning texts.

**Navigation** Guidance  $\rightarrow$  Proof test  $\rightarrow$  Prep. test  $\rightarrow$  warning texts

**Description** Loss of Safety function of protective system using safety-related output signal 4 to 20 mA

- Read Functional safety manual or WHG documentation.

- Do not use safety-related output signal 4 to 20 mA for Safety function of protective system

- Suitable measures must be taken to guarantee process safety during the proof test

**Selection** Yes

# "Preparation Proof test" wizard

Navigation  $\Box$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Prep. test

Visual inspection

**Navigation** Guidance  $\rightarrow$  Proof test  $\rightarrow$  Prep. test  $\rightarrow$  Visual inspect.

**Description** The visual inspection may include:

Cable gland Wiring

- Terminal block

- Housing/ housing lid

- Mechanical and electrical installation

For further information refer to safety manual or WHG documentation.

**Selection** • Please select

■ Failed

■ Passed

Notes

**Navigation**  $\square$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Prep. test  $\rightarrow$  Notes

**Description** The entered value will be included in the report.

**User entry** Character string comprising numbers, letters and special characters (255)

"Preparation Proof test" wizard

*Navigation*  $\square$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Prep. test

Device tag

**Navigation**  $\square$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Prep. test  $\rightarrow$  Device tag


**Description** Displays a unique name for the measuring point so it can be identified quickly within the

plant. The name is displayed in the header.

**User interface** Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).

#### Additional information

User interface

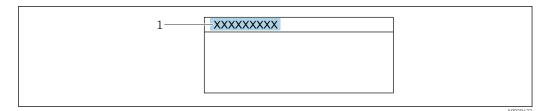

l Position of the header text on the display

The number of characters displayed depends on the characters used.

# Device name

**Navigation**  $\square$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Prep. test  $\rightarrow$  Device name

**Description** Displays the name of the transmitter. It can also be found on the nameplate of the

transmitter.

**User interface** Max. 32 characters such as letters or numbers.

#### Serial number

**Navigation** Guidance  $\rightarrow$  Proof test  $\rightarrow$  Prep. test  $\rightarrow$  Serial number

**Description** Displays the serial number of the measuring device.

The number can be found on the nameplate of the sensor and transmitter.

**User interface** Max. 11-digit character string comprising letters and numbers.

#### Additional information

#### Description

# Uses of the serial number

- $\blacksquare$  To identify the measuring device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the measuring device using the Device Viewer: www.endress.com/deviceviewer

#### Firmware version

**Navigation** Guidance  $\rightarrow$  Proof test  $\rightarrow$  Prep. test  $\rightarrow$  Firmware version

**Description** Displays the device firmware version that is installed.

**User interface** Character string in the format xx.yy.zz

### Additional information

User interface



The Firmware version is also located:

- On the title page of the Operating instructions
- On the transmitter nameplate

#### Hardware version

**Navigation**  $\square$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Prep. test  $\rightarrow$  Hardware version

**User interface** Character string comprising numbers, letters and special characters

#### "Preparation Proof test" wizard

*Navigation*  $\square$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Prep. test

#### CRC device configuration

**Navigation** Guidance  $\rightarrow$  Proof test  $\rightarrow$  Prep. test  $\rightarrow$  CRC device conf.

**Description** CRC device configuration based on current settings of safety relevant parameters.

The CRC device configuration is unique and can be used to detect changes in safety

relevant parameter settings.

**User interface** 0 to 65 535

#### Stored CRC device configuration

**Navigation** Guidance  $\rightarrow$  Proof test  $\rightarrow$  Prep. test  $\rightarrow$  Stored CRC conf.

**Description** Stored CRC after the last safety lock. Factory delivery is 65535 means that the device has

not yet been safety locked.

**User interface** 0 to 65 535

#### Timestamp stored CRC device config.

**Navigation** Guidance  $\rightarrow$  Proof test  $\rightarrow$  Prep. test  $\rightarrow$  Time stored CRC

**Description** Gives the time stamp when the CRC was last stored following completion of the safety lock

wizard.

User interface	Character string comprising numbers, letters and special characters
Operating time	
Navigation	
Description	Indicates how long the device has been in operation.
Additional information	Maximum time: 9 999 d (≈ 27 years)
Configuration counter	
Navigation	
Description	Displays the counter for changes to the device parameters.
	Additional information:  - If the value for a static parameter is changed when optimizing or configuring the parameter, the counter is incremented by 1. This is to enable tracking different parameter versions.  - When multiple parameters are changed simultaneously, e.g. when loading parameters into the device from an external source such as FieldCare, the counter may display a higher value. The counter cannot be reset, nor is it reset to a default value on performing a device reset.  - Once the counter has reached the value 65535, it restarts at 0.
User interface	0 to 65 535

# "Preparation Proof test" wizard

*Navigation*  $\square$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Prep. test

### Select test procedure

# **Navigation** $\square$ Guidance $\rightarrow$ Proof test $\rightarrow$ Prep. test $\rightarrow$ Select test proc

#### **Description** The proof test of the device can be done using the following test procedures:

Test procedure A with wizard (PTC > 90%):

- Simulate and check the min and max alarm current.
- Approach and check the lower and upper measured value.
- Confirm safety function.

Test procedure B with wizard (PTC > 50%):

- -Verify the current measured value with a plausibility check.
- Simulate and check the min and max alarm current.
- Confirm safety function.

For additional test procedures without wizard, refer to safety manual.

#### **Selection** • Please select

- Test procedure ATest procedure B
- Test procedure D

#### Safety function?

# **Navigation** Guidance $\rightarrow$ Proof test $\rightarrow$ Prep. test $\rightarrow$ Safety function?

#### **Selection** • Please select

- MAX monitoring
- MIN monitoring
- Range monitoring

#### "Simulation and check failure current" wizard

Navigation  $\Box$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Simulation

#### Failure current (high alarm)

#### **Navigation** Guidance $\rightarrow$ Proof test $\rightarrow$ Simulation $\rightarrow$ Fail. current (high alarm)

# **Description** Actually set value for high failure current.

User interface	21.5 to 23 mA
Confirm	
Navigation	
Description	Confirm that the displayed value corresponds to the set high failure current.
Selection	<ul><li>Please select</li><li>No</li><li>Yes</li></ul>
(High) Is safety funct	ion triggered?
Navigation	☐ Guidance $\rightarrow$ Proof test $\rightarrow$ Simulation $\rightarrow$ (High)Funct. trigg?
Description	Confirm that the output current triggers the required safety function.
Selection	Yes
Terminal current (hig	h alarm)
Navigation	☐ Guidance $\rightarrow$ Proof test $\rightarrow$ Simulation $\rightarrow$ Term. curr. (HA)
Description	Internally readback terminal current (high alarm).
User interface	Signed floating-point number
Confirm	
Navigation	☐ Guidance $\rightarrow$ Proof test $\rightarrow$ Simulation $\rightarrow$ Confirm
Description	Confirm that the readback terminal current corresponds to the set high failure current within tolerance +-0,32mA.
Selection	■ Please select

NoYes

# (Low) Is safety function triggered?

**Navigation**  $\square$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Simulation  $\rightarrow$  (Low)Funct. trigg?

**Description** Confirm that the output current triggers the required safety function.

**Selection** Yes

#### "Proof test" wizard

*Navigation*  $\square$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Proof test

# Setpoint 1

**Navigation**  $\square$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Proof test  $\rightarrow$  Setpoint 1

**Description** Physically apply a reference pressure for upper range.

**User entry** Signed floating-point number

# Pressure 1

**Navigation**  $\square$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Pressure 1

**Description** Pressure output

**User interface** Signed floating-point number

# Terminal current 1

**Navigation** Guidance  $\rightarrow$  Proof test  $\rightarrow$  Proof test  $\rightarrow$  Terminal curr. 1

**Description** Terminal current for upper range.

**User interface** 0 to 30 mA

Current deviation 1	
Navigation	☐ Guidance $\rightarrow$ Proof test $\rightarrow$ Curr. deviati 1
Description	Decide if the terminal current for upper range corresponding to the applied pressure is within tolerance.
Selection	<ul> <li>Please select</li> <li>Failed</li> <li>Passed</li> </ul>
Setpoint 2	
Navigation	☐ Guidance $\rightarrow$ Proof test $\rightarrow$ Proof test $\rightarrow$ Setpoint 2
Description	Physically apply a reference pressure for lower range.
User entry	Signed floating-point number
Pressure 2	
Navigation	☐ Guidance $\rightarrow$ Proof test $\rightarrow$ Pressure 2
Description	Pressure output
User interface	Signed floating-point number
Terminal current 2	
Navigation	☐ Guidance $\rightarrow$ Proof test $\rightarrow$ Proof test $\rightarrow$ Terminal curr. 2
Description	Terminal current for lower range.
User interface	0 to 30 mA
Current deviation 2	
Navigation	☐ Guidance $\rightarrow$ Proof test $\rightarrow$ Curr. deviati 2
Description	Decide if the terminal current for lower range corresponding to the applied pressure is within tolerance.

Selection

■ Please select

Failed

Passed

"Finish" wizard

*Navigation*  $\square$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Finish

Active diagnostics

**Navigation** Guidance  $\rightarrow$  Proof test  $\rightarrow$  Finish  $\rightarrow$  Active diagnos.

**Prerequisite** A diagnostic event has occurred.

**Description** Displays the current diagnostic message. If two or more messages occur simultaneously,

the message with the highest priority is shown on the display.

**User interface** Symbol for diagnostic behavior, diagnostic code and short message.

**Additional information** *User interface* 

Additional pending diagnostic messages can be viewed in the **Diagnostic list** 

submenu.

Example

For the display format:

**⊗**F271 Main electronic failure

Summary

**Navigation**  $\Box$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Finish  $\rightarrow$  Summary

**User interface** ■ Passed

■ Failed

Unknown

**Decision of inspector** 

**Navigation**  $\square$  Guidance  $\rightarrow$  Proof test  $\rightarrow$  Finish  $\rightarrow$  Decision of insp

**Description** Responsible for the evaluation of the proof test is the inspector.

The summary displayed is not a binding inspection decision.

Selection	<ul> <li>Please select</li> <li>Failed</li> <li>Passed</li> </ul>
Inspector	
Navigation	
Description	The entered inspector name will be included in the report.
User entry	Character string comprising numbers, letters and special characters (96)
Location	
Navigation	
Description	The entered value will be included in the report.
User entry	Character string comprising numbers, letters and special characters (96)
Date/time proof test	
Navigation	☐ Guidance $\rightarrow$ Proof test $\rightarrow$ Finish $\rightarrow$ Date/time
Description	This value is updated with every proof test and with inspector decision "Passed".
User interface	Character string comprising numbers, letters and special characters
Notes	
Navigation	
Description	The entered value will be included in the report.
User entry	Character string comprising numbers, letters and special characters (255)

Plant operator	
Navigation	☐ Guidance $\rightarrow$ Proof test $\rightarrow$ Finish $\rightarrow$ Plant operator
Description	The entered value will be included in the report.
User entry	Character string comprising numbers, letters and special characters (96)

# 3.3 "Diagnostics" menu

Navigation

Diagnostics

# 3.3.1 "Active diagnostics" submenu

**Navigation** 

Diagnostics  $\rightarrow$  Active diagnos.

# Active diagnostics

**Navigation**  $\blacksquare \Box$  Diagnostics  $\rightarrow$  Active diagnos.  $\rightarrow$  Active diagnos.

**Prerequisite** A diagnostic event has occurred.

**Description** Displays the current diagnostic message. If two or more messages occur simultaneously,

the message with the highest priority is shown on the display.

**User interface** Symbol for diagnostic behavior, diagnostic code and short message.

**Additional information** *User interface* 

Additional pending diagnostic messages can be viewed in the **Diagnostic list** 

submenu.

Example

For the display format:

**⊗**F271 Main electronic failure

# Timestamp

**Description** Displays the operating time when the current diagnostic message occurred.

**User interface** Days (d), hours (h), minutes (m) and seconds (s)

**Additional information** *User interface* 

The diagnostic message can be viewed via the **Actual diagnostics** parameter  $( \rightarrow \implies 103)$ .

Example

For the display format: 24d12h13m00s

#### **Previous diagnostics**

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Active diagnos.  $\rightarrow$  Prev.diagnostics

**Prerequisite** Two diagnostic events have already occurred.

**Description** Displays the diagnostic message that occurred before the current message.

**User interface** Symbol for diagnostic behavior, diagnostic code and short message.

**Additional information** User interface

Yia the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the E key.

Example

For the display format:

**⊗**F271 Main electronic failure

#### **Timestamp**

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Active diagnos.  $\rightarrow$  Timestamp

**Description** Displays the operating time when the last diagnostic message before the current message

occurred.

**User interface** Days (d), hours (h), minutes (m) and seconds (s)

**Additional information** User interface

The diagnostic message can be viewed via the **Previous diagnostics** parameter

(→ 🖺 107).

Example

For the display format: 24d12h13m00s

# Operating time from restart

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Active diagnos.  $\rightarrow$  Time fr. restart

**Description** Indicates how long the device has been in operation since the last time the device was

restarted.

**User interface** Days (d), hours (h), minutes (m), seconds (s)

#### Operating time

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Active diagnos.  $\rightarrow$  Operating time

**Description** Indicates how long the device has been in operation.

**Additional information** Maximum time: 9 999 d (≈ 27 years)

# 3.3.2 "Event logbook" submenu

Navigation  $\square$  Diagnostics  $\rightarrow$  Event logbook

#### Filter options

**Navigation**  $\square$  Diagnostics  $\rightarrow$  Event logbook  $\rightarrow$  Filter options

**Description** Use this function to select the category whose event messages are displayed in the event

list of the operating tool.

Selection • All

■ Failure (F)

■ Function check (C)

- Out of specification (S)
- Maintenance required (M)
- Information (I)
- Not categorized

# Additional information

#### Description

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:

- F = Failure
- C = Function Check
- S = Out of Specification
- M = Maintenance Required

#### Clear event list

**Navigation**  $\square$  Diagnostics  $\rightarrow$  Event logbook  $\rightarrow$  Clear event list

**Description** Use this function to process the current values in the event logbook.

Selection • Cancel

■ Clear data

### Additional information

Description

Once this function has been executed, the events list is empty and all the events are deleted.

i

The events list can be exported using an operating tool (e.g. FieldCare.

### 3.3.3 "Minimum/maximum values" submenu

*Navigation*  $\square$  Diagnostics  $\rightarrow$  Min/max val.

Pressure min

**Navigation** □ Diagnostics → Min/max val. → Pressure min

**Description** Minimum or maximum value measured by device.

**User interface** Signed floating-point number

### Counter limit underruns sensor Pmin

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Min/max val.  $\rightarrow$  Counter P < Pmin

**Description** Counts how many times the value underruns the sensor specific minimum values.

Sensor specific minimum values are shown in Application/Sensor menu.

**User interface** 0 to 65 535

### Counter underruns of user limit Pmin

**Navigation**  $\blacksquare \Box$  Diagnostics  $\rightarrow$  Min/max val.  $\rightarrow$  Counter < P user

**Description** Counts how many times the value underruns the minimum values defined by the user.

User defined minimum values are shown in Diagnostic/Diagnostic settings/Properties

menu.

**User interface** 0 to 65 535

### Minimum sensor temperature

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Min/max val.  $\rightarrow$  Min. sensor temp

**Description** Minimum or maximum value measured by device.

Users cannot reset this value.

**User interface** −273.15 to 9 726.85 °C

### Counter limit underruns sensor Tmin

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Min/max val.  $\rightarrow$  Counter T < Tmin

**Description** Counts how many times the value underruns/overruns the sensor specific minimum/

maximum values.

Sensor specific minimum/maximum values are shown in Application/Sensor menu.

**User interface** 0 to 65 535

### Counter underruns of user limit Tmin

**Navigation**  $\Box$  Diagnostics  $\rightarrow$  Min/max val.  $\rightarrow$  Counter < T user

**User interface** 0 to 65 535

### Minimum terminal voltage

**Navigation**  $\blacksquare \Box$  Diagnostics  $\rightarrow$  Min/max val.  $\rightarrow$  Min.term.volt.

**Description** Minimum or maximum measured terminal (supply) voltage.

**User interface** 0.0 to 50.0 V

### Minimum electronics temperature

**Navigation**  $\Box$  Diagnostics  $\rightarrow$  Min/max val.  $\rightarrow$  Min.electr.temp.

**Description** Minimum or maximum measured main electronics temperature.

**User interface** Signed floating-point number

### Reset user defined counters P and T

**Navigation**  $\blacksquare \blacksquare$  Diagnostics  $\rightarrow$  Min/max val.  $\rightarrow$  Reset count. P T

**Selection** • Cancel

Confirm

### Pressure max

**Navigation** □ Diagnostics → Min/max val. → Pressure max

**Description** Minimum or maximum value measured by device.

**User interface** Signed floating-point number

### Counter limit overruns sensor Pmax

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Min/max val.  $\rightarrow$  Counter P > Pmax

**Description** Counts how many times the value overruns the sensor specific maximum values.

Sensor specific maximum values are shown in Application/Sensor menu.

**User interface** 0 to 65 535

### Counter overruns of user limit Pmax

**Navigation**  $\square$  Diagnostics  $\rightarrow$  Min/max val.  $\rightarrow$  Counter > P user

**Description** Counts how many times the value overruns the maximum values defined by the user.

User defined maximum values are shown in Diagnostic/Diagnostic settings/Properties

menu.

**User interface** 0 to 65 535

### Maximum sensor temperature

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Min/max val.  $\rightarrow$  Max. sensor temp

**Description** Minimum or maximum value measured by device.

Users cannot reset this value.

**User interface** -273.15 to 9726.85 °C

### Counter limit overruns sensor Tmax

**Navigation** □ Diagnostics → Min/max val. → Counter T > Tmax

**Description** Counts how many times the value underruns/overruns the sensor specific minimum/

maximum values.

Sensor specific minimum/maximum values are shown in Application/Sensor menu.

**User interface** 0 to 65 535

### Counter overruns of user limit Tmax

**Navigation**  $\blacksquare \Box$  Diagnostics  $\rightarrow$  Min/max val.  $\rightarrow$  Counter > T user

**User interface** 0 to 65 535

### Maximum terminal voltage

**Description** Minimum or maximum measured terminal (supply) voltage.

**User interface** 0.0 to 50.0 V

### Maximum electronics temperature

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Min/max val.  $\rightarrow$  Max.electr.temp.

**Description** Minimum or maximum measured main electronics temperature.

**User interface** Signed floating-point number

### 3.3.4 "Simulation" submenu

Navigation □ Diagnostics → Simulation

Simulation

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Simulation

**Description** Simulates one or more process variables and/or events.

Warning:

Output will reflect the simulated value or event.

Selection ■ Off

Current output

Diagnostic event simulation

■ Pressure

Value pressure simulation

**Navigation**  $\square$  Diagnostics  $\rightarrow$  Simulation  $\rightarrow$  Pressure

**User entry** Signed floating-point number

Value current output

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Simulation  $\rightarrow$  Current output

**Description** Defines the value of the simulated output current.

**User entry** 3.59 to 23 mA

Diagnostic event simulation

**Description** Use this function to select a diagnostic event for the simulation process that is activated.

Selection ■ Off

• Diagnostic event picklist (depends on the category selected)

### Additional information

### Description

For the simulation, you can choose from the diagnostic events of the category selected in the **Diagnostic event category** parameter.

### 3.3.5 "Heartbeat Technology" submenu

Navigation  $\Box$  Diagnostics  $\rightarrow$  Heartbeat Techn.

### "Heartbeat Verification" submenu

*Navigation*  $\square$  Diagnostics  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Heartbeat Verif.

### Date/time Heartbeat Verification

**Navigation** □ Diagnostics → Heartbeat Techn. → Heartbeat Verif. → Date/time Heartbeat

Verification

**Description** Date and time of last Heartbeat Verification.

This value is updated with every Heartbeat verification.

Note:

If time information is not available, e.g. Heartbeat verification is started from display,

'----' is shown.

**User interface** Character string comprising numbers, letters and special characters

### **Operating time (Verification)**

**Navigation** □ Diagnostics → Heartbeat Techn. → Heartbeat Verif. → Operating time

**User interface** Days (d), hours (h), minutes (m), seconds (s)

### Verification result

**User interface** ■ Not done

- Passed
- Not done
- Failed

Status

**Description** Displays the current status of the verification.

**User interface** ■ Done

BusyFailedNot done

"Loop diagnostics" submenu

Navigation  $\square$  Diagnostics  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Loop diagn.

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Loop diagn.  $\rightarrow$  Reb. baseline

**Description** Notice

Rebuild baseline

The current output is simulated.

Bridge the PLC or take other appropriate measures to prevent an erroneous triggering of

alarm messages or changes in the control loop behavior.

The baseline should be rebuilt if planned changes have been made in the loop.

Selection ■ No

■ Yes

Tolerated deviation +/-

**Navigation**  $\blacksquare \Box$  Diagnostics  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Loop diagn.  $\rightarrow$  Toler. deviation

**Description** A value should be chosen to ensure that normal voltage deviations do not lead to

unwanted messages.

Default 1.5 V DC

**User entry** 0.5 to 3.0 V

Baseline status

**Navigation**  $\Box$  Diagnostics  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Loop diagn.  $\rightarrow$  Baseline status

**Description** "Failed"

Means, baseline is not available or creation not possible.

"Success"

Baseline is available.

**User interface** ■ Failed

Success

Loop diagnostics

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Loop diagn.  $\rightarrow$  Loop diagn.

**Description** Enable/disable loop diagnostics.

Note:

If the function is disabled, there is no analysis and no event message.

**Selection** • Disable

■ Enable

Terminal voltage 1

**Navigation**  $\blacksquare \Box$  Diagnostics  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Loop diagn.  $\rightarrow$  Terminal volt. 1

**Description** Shows the current terminal voltage that is applied at the output

**User interface** 0.0 to 50.0 V

Clamping voltage lower threshold

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  Loop diagn.  $\rightarrow$  Lower threshold

**User interface** 0.0 to 50.0 V

Clamping voltage upper threshold

 $\begin{tabular}{lll} \textbf{Navigation} & & & & & \\ \hline \blacksquare & & & \\ \hline & \\ \hline & \\$ 

**User interface** 0.0 to 50.0 V

806 Event delay

**Navigation** □ Diagnostics → Heartbeat Techn. → Loop diagn. → 806 Event delay

**Description** Displays how long the triggering status must be present until an event message is issued.

Used to filter out short-term signal interference.

**User entry** 0 to 60 s

### "Statistical Sensor Diagnostics" submenu

Navigation  $\square$  Diagnostics  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  SSD

### SSD: Statistical Sensor Diagnostics

**Navigation**  $\Box$  Diagnostics  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  SSD  $\rightarrow$  Stat. Sens. Diag

**Description** Enable or disable SSD.

After selecting "Disable", no statistical sensor diagnosis takes place. No diagnostic messages

are output.

**Selection** • Disable

■ Enable

### System status

**User interface** ■ Idle

No sufficient signal noise

■ Stable

Not stable

Verify System Dynamics

Process dynamic too high

### Signal status

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  SSD  $\rightarrow$  Signal status

**User interface** ■ Idle

Building Baseline

Verifying Baseline

- Verifying baseline failed
- Monitoring
- Out of range
- Monitoring inactive

### Signal noise status

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  SSD  $\rightarrow$  Noise status

User interface

- Idle
- Building Baseline
- Verifying Baseline
- Verifying baseline failed
- Monitoring
- Out of range
- Monitoring inactive

### **Counter Baseline creation SSD**

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Heartbeat Techn.  $\rightarrow$  SSD  $\rightarrow$  Counter Baseline

**Description** Specifies how often the baseline has been rebuilt.

**User interface** Positive integer

### 3.3.6 "Diagnostic settings" submenu

Navigation  $\square$  Diagnostics  $\rightarrow$  Diag. settings

### "Properties" submenu

Navigation  $\square$  Diagnostics  $\rightarrow$  Diag. settings  $\rightarrow$  Properties

### SSD Out of range delay time

**Navigation**  $riangleq ext{Diagnostics} o ext{Diag. settings} o ext{Properties} o ext{SSD Delay time}$ 

**User entry** 0 to 604 800 s

Description

## SSD Monitoring delay time Diagnostics $\rightarrow$ Diag. settings $\rightarrow$ Properties $\rightarrow$ SSD Verz. Zeit Navigation User entry 0 to 86 400 s 500 Process alert pressure **Navigation** Diagnostics → Diag. settings → Properties → 500 Pressure Description Define whether user-defined pressure limits should be set. If "Off" is selected, no analysis will take place and no event message will be generated. Selection Off ■ On Low alert value **Navigation** Diagnostics $\rightarrow$ Diag. settings $\rightarrow$ Properties $\rightarrow$ Low alert value Description Set range. If this limit value is exceeded or undercut, a diagnostic event is generated. There is no hysteresis. User entry Signed floating-point number High alert value **Navigation** Diagnostics $\rightarrow$ Diag. settings $\rightarrow$ Properties $\rightarrow$ High alert value Description Set range. If this limit value is exceeded or undercut, a diagnostic event is generated. There is no hysteresis. Signed floating-point number User entry 501 Process alert scaled variable **Navigation** Diagnostics $\rightarrow$ Diag. settings $\rightarrow$ Properties $\rightarrow$ 501 Scaled var.

Endress+Hauser 119

If "Off" is selected, no analysis will take place and no event message will be generated.

Define whether user-defined limits should be set.

Selection

Off

■ On

Low alert value

Navigation

Description

Set range.

If this limit value is exceeded or undercut, a diagnostic event is generated. There is no

hysteresis.

**User entry** 

Signed floating-point number

High alert value

Navigation

□ Diagnostics  $\rightarrow$  Diag. settings  $\rightarrow$  Properties  $\rightarrow$  High alert value

Description

Set range.

If this limit value is exceeded or undercut, a diagnostic event is generated. There is no

hysteresis.

**User entry** 

Signed floating-point number

User temperature process alert

£

Navigation

□ Diagnostics  $\rightarrow$  Diag. settings  $\rightarrow$  Properties  $\rightarrow$  UserTemp alert

Description

Define whether the user-defined sensor temperature limits should be set. If "Off" no

analysis and therefore no event message will take place.

Selection

Off

■ On

Low alert value

Navigation

Description

Set range.

If this limit value is exceeded or undercut, a diagnostic event is generated. There is no

hysteresis.

User entry

-50 to 150 ℃

High alert value		
Navigation	☐ Diagnostics → Diag. settings → Properties → High alert value	
Description	Set range. If this limit value is exceeded or undercut, a diagnostic event is generated. There is no hysteresis.	
User entry	−50 to 150 °C	
806 Diagnostic behavior		
Navigation		
Description	Select event behavior "Logbook entry only": no digital or analog transmission of the message. "Warning": Current output unchanged. Message is output digitally (default).  If the permissible conditions are reached again, the warning is no longer available in the instrument.	ıe
Selection	<ul><li>Warning</li><li>Logbook entry only</li></ul>	
806 Event category		
Navigation		
Description	Select category for diagnostic message.	
Selection	<ul> <li>Failure (F)</li> <li>Function check (C)</li> <li>Out of specification (S)</li> <li>Maintenance required (M)</li> <li>No effect (N)</li> </ul>	
806 Event delay		
Navigation	☐ Diagnostics → Diag. settings → Properties → 806 Event delay	
Description	Displays how long the triggering status must be present until an event message is issue Used to filter out short-term signal interference.	ed.
User entry	0 to 60 s	

### "Configuration" submenu

Navigation  $\square$  Diagnostics  $\rightarrow$  Diag. settings  $\rightarrow$  Configuration  $\rightarrow$  Configuration

### 500 Diagnostic behavior

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Diag. settings  $\rightarrow$  Configuration  $\rightarrow$  Configuration  $\rightarrow$  500 Diag. behav.

**Description** Select event behavior

"Logbook entry only":

no digital or analog transmission of the message

"Warning": Current output unchanged. Message is output digitally (default).

"Alarm": Current output assumes the set alarm current.

Regardless of the setting, the message appears on the display. If the permissible conditions

are reached again, the warning is no longer available in the instrument.

Selection ■ Off

Alarm

Warning

Logbook entry only

### 500 Event category

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Diag. settings  $\rightarrow$  Configuration  $\rightarrow$  Configuration  $\rightarrow$  500Event category

**Selection** • Failure (F)

■ Function check (C)

Out of specification (S)

Maintenance required (M)

No effect (N)

### 501 Diagnostic behavior

**Navigation**  $\blacksquare$  Diagnostics  $\rightarrow$  Diag. settings  $\rightarrow$  Configuration  $\rightarrow$  Configuration  $\rightarrow$  501 Diag. behav.

**Description** Select event behavior

"Logbook entry only":

no digital or analog transmission of the message

"Warning": Current output unchanged. Message is output digitally (default).

"Alarm": Current output assumes the set alarm current.

Regardless of the setting, the message appears on the display. If the permissible conditions

are reached again, the warning is no longer available in the instrument.

Selection

■ Off

Alarm

Warning

Logbook entry only

### 501 Event category

**Navigation** 

Diagnostics → Diag. settings → Configuration → Configuration → 501Event category

Selection

■ Failure (F)

Function check (C)

Out of specification (S)

■ Maintenance required (M)

■ No effect (N)

### 502 Diagnostic behavior

**Navigation** 

Description

Select event behavior

"Logbook entry only":

no digital or analog transmission of the message

"Warning": Current output unchanged. Message is output digitally (default).

"Alarm": Current output assumes the set alarm current.

Regardless of the setting, the message appears on the display. If the permissible conditions

are reached again, the warning is no longer available in the instrument.

Selection

Off

■ Alarm

lacktriang Warning

Logbook entry only

### 502 Event category

Navigation

Selection

■ Failure (F)

■ Function check (C)

Out of specification (S)

Maintenance required (M)

■ No effect (N)

### "Process" submenu

Navigation  $\square$  Diagnostics  $\rightarrow$  Diag. settings  $\rightarrow$  Configuration  $\rightarrow$  Process

# Navigation Diagnostics → Diag. settings → Configuration → Process → 806 Diag. behav. Description Select event behavior "Logbook entry only": no digital or analog transmission of the message.

"Warning": Current output unchanged. Message is output digitally (default).

If the permissible conditions are reached again, the warning is no longer available in the

in strument.

**Selection** • Warning

Logbook entry only

806 Event category		<u></u>
Navigation		
Description	Select category for diagnostic message.	

Selection ■ Failure (F)

Function check (C)Out of specification (S)Maintenance required (M)

■ No effect (N)

### 822 Diagnostic behavior

**Navigation** Diagnostics  $\rightarrow$  Diag. settings  $\rightarrow$  Configuration  $\rightarrow$  Process  $\rightarrow$  822 Diag. behav.

**User interface** ■ Alarm ■ Warning

Logbook entry only

# Navigation □ Diagnostics → Diag. settings → Configuration → Process → 822 Event category Selection □ Failure (F) □ Function check (C) □ Out of specification (S) □ Maintenance required (M) □ No effect (N)

### Sensor pressure range behavior

### Navigation

### **Description** Select event behavior

"Alarm":

Current output adopts the set alarm current.

"Warning":

Current output unchanged. Message is displayed digitally (factory setting).

"Logbook entry only":

No digital or analog forwarding of the message.

"Special":

- Lower sensor limit undercut: Current output < 3.6 mA.
- Upper sensor limit exceeded: Current output 21 to 23 mA, depending on the setting.

Regardless of the setting, the message appears on the display. If the permissible conditions are reached again, the warning message disappears.

### Selection

- Alarm
- Warning
- Logbook entry only
- Special

### 841 Event category

### **Navigation**

□ Diagnostics  $\rightarrow$  Diag. settings  $\rightarrow$  Configuration  $\rightarrow$  Process  $\rightarrow$  841 Event category

### Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

900 Event category		
Navigation	$ □ $ Diagnostics $\rightarrow$ Diag. settings $\rightarrow$ Configuration $\rightarrow$ Process $\rightarrow$ 900Event category	
Description	Select category for diagnostic message.	
Selection	<ul> <li>Failure (F)</li> <li>Function check (C)</li> <li>Out of specification (S)</li> <li>Maintenance required (M)</li> </ul>	

■ No effect (N)

900 Diagnostic behavior		
Navigation		
Description	Select event behavior	
	"Logbook entry only": no digital or analog transmission of the message.	
	"Warning": Current output unchanged. Message is output digitally (default).	
	If the permissible conditions are reached again, the warning is no longer available in thinstrument.	ıe
Selection	<ul><li>Warning</li><li>Logbook entry only</li></ul>	

906 Diagnostic behavior		Â
Navigation		
Description	Select event behavior	
	"Logbook entry only": no digital or analog transmission of the message.	
	"Warning": Current output unchanged. Message is output digitally (default).	
	If the permissible conditions are reached again, the warning is no longer available in the instrument.	he
Selection	<ul> <li>Off</li> <li>Warning</li> <li>Logbook entry only</li> </ul>	

906 Event category		<b>a</b>
Navigation		
Description	Select category for diagnostic message.	

Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

### "Process" submenu

Navigation  $\square$  Diagnostics  $\rightarrow$  Diag. settings  $\rightarrow$  Configuration  $\rightarrow$  Process

806 Diagnostic behavior		Â
Navigation		
Description	Select event behavior	
	"Logbook entry only": no digital or analog transmission of the message.	
	"Warning": Current output unchanged. Message is output digitally (default).	
	If the permissible conditions are reached again, the warning is no longer available in the instrument.	he
Selection	<ul><li>Warning</li><li>Logbook entry only</li></ul>	

806 Event category		
Navigation	□□ Diagnostics → Diag. settings → Configuration → Process → 806Event category	
Description	Select category for diagnostic message.	
Selection	<ul> <li>Failure (F)</li> <li>Function check (C)</li> <li>Out of specification (S)</li> <li>Maintenance required (M)</li> <li>No effect (N)</li> </ul>	

## 822 Diagnostic behavior

**Navigation** Diagnostics  $\rightarrow$  Diag. settings  $\rightarrow$  Configuration  $\rightarrow$  Process  $\rightarrow$  822 Diag. behav.

User interface • Alarm

Warning

Logbook entry only

# Navigation □ Diagnostics → Diag. settings → Configuration → Process → 822 Event category Selection □ Failure (F) □ Function check (C) □ Out of specification (S) □ Maintenance required (M) □ No effect (N)

### Sensor pressure range behavior

### **Navigation**

Diagnostics  $\rightarrow$  Diag. settings  $\rightarrow$  Configuration  $\rightarrow$  Process  $\rightarrow$  P-range behavior

### Description

Select event behavior

"Alarm":

Current output adopts the set alarm current.

"Warning":

Current output unchanged. Message is displayed digitally (factory setting).

"Logbook entry only":

No digital or analog forwarding of the message.

"Special":

- Lower sensor limit undercut: Current output < 3.6 mA.
- Upper sensor limit exceeded: Current output 21 to 23 mA, depending on the setting.

Regardless of the setting, the message appears on the display. If the permissible conditions are reached again, the warning message disappears.

### Selection

- Alarm
- Warning
- Logbook entry only
- Special

### 841 Event category

### Navigation

□ Diagnostics  $\rightarrow$  Diag. settings  $\rightarrow$  Configuration  $\rightarrow$  Process  $\rightarrow$  841 Event category

### Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- No effect (N)

900 Event category		
Navigation		
Description	Select category for diagnostic message.	
Selection	<ul> <li>Failure (F)</li> <li>Function check (C)</li> <li>Out of specification (S)</li> <li>Maintenance required (M)</li> <li>No effect (N)</li> </ul>	

900 Diagnostic behavior		
Navigation		
Description	Select event behavior	
	"Logbook entry only": no digital or analog transmission of the message.	
	"Warning": Current output unchanged. Message is output digitally (default).	
	If the permissible conditions are reached again, the warning is no longer available in the instrument.	ĵ
Selection	<ul><li>Warning</li><li>Logbook entry only</li></ul>	

906 Diagnostic behavior		
Navigation		
Description	Select event behavior	
	"Logbook entry only": no digital or analog transmission of the message.	
	"Warning": Current output unchanged. Message is output digitally (default).	
	If the permissible conditions are reached again, the warning is no longer available in the instrument.	ıe
Selection	<ul><li>Off</li><li>Warning</li><li>Logbook entry only</li></ul>	

906 Event category		
Navigation		
Description	Select category for diagnostic message.	

### Selection

- Failure (F)
- Function check (C)
- Out of specification (S)
   Maintenance required (M)
- No effect (N)

# 3.4 "Application" menu

Navigation 

Application

### 3.4.1 "Measuring units" submenu

*Navigation*  $\square$  Application  $\rightarrow$  Measuring units

Pressure unit Navigation Selection SI units US units Other units MPa psi ■ inH2O ■ kPa ■ inH2O (4°C) ■ Pa ■ mmH2O ■ bar ■ mmH2O (4°C) ■ mbar ■ mH2O ■ mH2O (4°C) torr ■ ftH2O ■ atm ■ kgf/cm² ■ inHg ■ gf/cm² ■ mmHg

Decimal places pressure		
Navigation		
Description	This selection does not affect the measurement and calculation accuracy of the device.	
Selection	<ul> <li>Automatic         The decimal place is configured automatically.         Example: Unit mbar: one decimal place. Unit bar: four decimal places         </li> <li>x</li> <li>x.x</li> <li>x.xx</li> <li>x.xxx</li> <li>x.xxx</li> <li>x.xxxx</li> <li>x.xxxx</li> </ul>	

Temperature unit		
Navigation		
Description	Use this function to select the unit for the temperature.	

Selection SI units US units ■ °C °F

**Factory setting** Country-specific:

■ °C **■** °F

**■** K

Additional information Selection

Scaled variable unit 

Navigation 

Use "Free text", first selection, if the desired unit is not available in the selection list. It is Description

possible to define a customer specific unit with another parameter.

### Selection

SI units

- **•** %
- mm
- cm
- m
- **-** 1
- hlm<sup>3</sup>
- **■** q
- 9
- kg
- t
- g/skq/s
- kg/min
- kg/h
- t/min
- t/h
- t/d
- m<sup>3</sup>/s
- m³/min
- m³/h
- $m^3/d$
- 1/s
- l/min
- l/h
- Nm³/h
- Nl/h
- Sm³/s ■ Sm³/min
- Sm³/h
- $Sm^3/d$
- Nm³/s
- q/cm<sup>3</sup>
- kg/m<sup>3</sup>
- Nm³/min
- Nm³/d

Custom-specific units

Free text

US units

- ft
- in
- ft³
- qal (us)
- bbl (us;oil)
- OZ
- lb
- STon
- lb/s
- lb/min
- lb/h
- STon/min
- STon/h
- STon/d
- $ft^3/s$
- ft³/min
- ft<sup>3</sup>/h
- $ft^3/d$
- qal/s (us)
- qal/min (us)
- gal/h (us)
- gal/d (us)
- bbl/s (us;oil)
- bbl/min (us;oil)bbl/h (us;oil)
- bbl/ii (us;oii)bbl/d (us;oil)
- Sft<sup>3</sup>/min
- Sft³/h
- Sft³/d

Imperial units

- gal (imp)
- gal/s (imp)
- gal/min (imp)
- qal/h (imp)

Free text

Navigation

**User entry** 

Character string comprising numbers, letters and special characters (32)

Decimal places scaled variable

**Navigation** 

 $\square$  Application  $\rightarrow$  Measuring units  $\rightarrow$  Decimal scaled

Description

This selection does not affect the measurement and calculation accuracy of the device.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

### 3.4.2 "Measured values" submenu

Navigation  $\square$  Application  $\rightarrow$  Measured values

Sensor pressure

**Navigation**  $\blacksquare$  Application  $\rightarrow$  Measured values  $\rightarrow$  Sensor pressure

**User interface** Signed floating-point number

**Pressure** 

**Navigation**  $\blacksquare$  Application  $\rightarrow$  Measured values  $\rightarrow$  Pressure

Scaled variable

**Navigation**  $\blacksquare$  Application  $\rightarrow$  Measured values  $\rightarrow$  Scaled variable

**User interface** Signed floating-point number

Sensor temperature

**User interface** −273.15 to 9726.85 °C

Terminal voltage 1

**Navigation**  $\blacksquare$  Application  $\rightarrow$  Measured values  $\rightarrow$  Terminal volt. 1

**Description** Shows the current terminal voltage that is applied at the output

**User interface** 0.0 to 50.0 V

**Terminal current** 

**Navigation**  $\blacksquare$  Application  $\rightarrow$  Measured values  $\rightarrow$  Terminal curr.

**Description** Shows the current value of the current output which is currently measured

**User interface** 0 to 30 mA

**Electronics temperature** 

**Navigation**  $\blacksquare$  Application  $\rightarrow$  Measured values  $\rightarrow$  Electronics temp

**Description** Displays the current temperature of the main electronics.

**User interface** Signed floating-point number

3.4.3 "Sensor" submenu

Navigation 

☐ Application → Sensor

"Basic settings" submenu

*Navigation*  $\square$  Application  $\rightarrow$  Sensor  $\rightarrow$  Basic settings

**Output current transfer function** 

**Navigation**  $\blacksquare$  Application  $\rightarrow$  Sensor  $\rightarrow$  Basic settings  $\rightarrow$  Curr. trans.func

**Description** Linear

The linear pressure signal is used for the current output. The flow must be calculated in

the evaluation unit.

Square root - differential pressure only

The root flow signal is used for the current output. The 'Flow (square root)' current signal is indicated on the on-site display with a root symbol.

### User interface

- Linear
- Square root \*

### Damping

### Navigation

### Description

The damping is effective before the measured value is further processed, i.e., before the

following processes:

- Scaling
- Limit value monitoring
- Forwarding to display
- Forwarding to Analog Input Block

### Note:

The Analog Input Block has its own "Damping" parameter. In the measurement chain, only

one of the two attenuation parameters shall have a value other than 0.

Otherwise, the signal will be attenuated several times.

### **User entry**

0 to 999.0 s

### "Sensor calibration" submenu

Navigation

 $\square$  Application  $\rightarrow$  Sensor  $\rightarrow$  Sensor cal.

### Zero adjustment

### Navigation

Description

Due to the mounting position of the measuring instrument, a pressure shift may occur.

The pressure shift can be corrected with the zero adjustment.

Selection

No

Confirm

### Calibration offset

Navigation

**Prerequisite** 

Absolute pressure sensor

136

<sup>\*</sup> Visibility depends on order options or device settings

**Description** Enter the value by which the measured value should be corrected, e.g., a position

adjustment for absolute pressure sensors.

**User entry** Signed floating-point number

Zero adjustment offset

**Navigation**  $\blacksquare$  Application  $\rightarrow$  Sensor cal.  $\rightarrow$  Zero offset

**User entry** Signed floating-point number

Sensor Trim Reset

**Navigation** riangleq Application riangleq Sensor cal. riangleq Sensor cal. riangleq Sensor cal.

Selection ■ No

Confirm

Lower sensor trim measured value

**Navigation**  $\square$  Application  $\rightarrow$  Sensor  $\rightarrow$  Sensor cal.  $\rightarrow$  LowerTrimMeasVal

**User interface** Signed floating-point number

Lower sensor trim

### **Navigation**

### Description

These two parameters allow a recalibration of the sensor, i.e., if you want to fit the sensor to the measuring range. The highest accuracy is obtained when the value for the "Lower sensor trim" is as close as possible to "LRV" (lower range value) and the value for "Upper sensor trim" as close as possible to "URV" (upper range value).

There must be a known reference pressure when setting a new lower or upper sensor characteristic curve value. The more accurate the reference pressure is during recalibration, the higher the accuracy of the pressure transmitter later. A new value is assigned to the applied pressure using "Lower sensor trim" and "Upper sensor trim" parameters.

### Note:

The value entered can be at maximum "Sensor pressure" +/- 10 % of the permitted maximum pressure (URL).

### Proceed as follows:

- Apply reference pressure for lower range value ("LRV")
- Enter the measured reference pressure at "Lower sensor trim" and confirm
- Apply reference pressure for upper range value ("URV")
- Enter the measured reference pressure at "Upper sensor trim" and confirm
- The sensor is now calibrated

User entry

Signed floating-point number

### Upper sensor trim measured value

**Navigation**  $\square$  Application  $\rightarrow$  Sensor  $\rightarrow$  Sensor cal.  $\rightarrow$  UpperTrimMeasVal

User interface

Signed floating-point number

Upper sensor trim	
Navigation	
Description	These two parameters allow a recalibration of the sensor, i.e., if you want to fit the sensor to the measuring range. The highest accuracy is obtained when the value for the "Lower sensor trim" is as close as possible to "LRV" (lower range value) and the value for "Upper sensor trim" as close as possible to "URV" (upper range value).

There must be a known reference pressure when setting a new lower or upper sensor characteristic curve value. The more accurate the reference pressure is during recalibration, the higher the accuracy of the pressure transmitter later. A new value is assigned to the applied pressure using "Lower sensor trim" and "Upper sensor trim" parameters.

Note:

The value entered can be at maximum "Sensor pressure"  $\pm$  10 % of the permitted maximum pressure (URL).

Proceed as follows:

- Apply reference pressure for lower range value ("LRV")
- Enter the measured reference pressure at "Lower sensor trim" and confirm
- Apply reference pressure for upper range value ("URV")
- Enter the measured reference pressure at "Upper sensor trim" and confirm
- The sensor is now calibrated

**User entry** Signed floating-point number

"Sensor limits" submenu

Navigation riangle Application riangle Sensor riangle Sensor limits

 Lower Range Limit

 Navigation
 Application → Sensor → Sensor limits → LRL

 Description
 Indicates the lower measuring limit of the sensor.

 User interface
 Signed floating-point number

**Upper Range Limit** 

**Navigation**  $\square$  Application  $\rightarrow$  Sensor  $\rightarrow$  Sensor limits  $\rightarrow$  URL

**Description** Indicates the upper measuring limit of the sensor.

**User interface** Signed floating-point number

Minimum span

**Navigation** riangleq Application riangleq Sensor riangleq Sensor limits riangleq Minimum span

**Description** Specifies the smallest possible measuring span of the sensor.

**User interface** Signed floating-point number

Sensor temperature lower range limit

**Navigation** Application  $\rightarrow$  Sensor  $\rightarrow$  Sensor limits  $\rightarrow$  Sens.temp.lo.lim

**User interface** −273.15 to 9726.85 °C

Sensor temperature upper range limit

**Navigation**  $\square$  Application  $\rightarrow$  Sensor  $\rightarrow$  Sensor limits  $\rightarrow$  Sens.temp.up.lim

**User interface** −273.15 to 9 726.85 °C

"Scaled variable" submenu

*Navigation*  $\square$  Application  $\rightarrow$  Sensor  $\rightarrow$  Scaled variable

Assign PV

**Navigation**  $\blacksquare$  Application  $\rightarrow$  Sensor  $\rightarrow$  Scaled variable  $\rightarrow$  Assign PV

**Description** Use this function to select a measured variable (HART device variable) for the primary

dynamic variable (PV).

**Selection** • Pressure

■ Scaled variable

### Scaled variable unit

### Navigation

Application  $\rightarrow$  Sensor  $\rightarrow$  Scaled variable  $\rightarrow$  Scaled Unit

### Description

Use "Free text", first selection, if the desired unit is not available in the selection list. It is possible to define a customer specific unit with another parameter.

### Selection

SI units

- **•** %
- mm
- cm
- m
- hl
- m<sup>3</sup>
- **■** q
- kq
- t
- q/s
- kg/s
- kg/min
- kg/h
- t/min
- t/h
- t/d
- $\mathbf{m}^3/\mathrm{s}$
- m³/min
- $m^3/h$
- $m^3/d$
- 1/s
- l/min
- l/h ■  $Nm^3/h$
- Nl/h  $- Sm^3/s$
- Sm³/min
- Sm³/h
- $Sm^3/d$
- $\blacksquare$  Nm<sup>3</sup>/s
- $\blacksquare$  q/cm<sup>3</sup>
- kq/m³ ■ Nm³/min
- Nm³/d

Custom-specific units

Free text

US units

- ft
- in
- ft<sup>3</sup>
- qal (us)
- bbl (us;oil)
- oz
- lb
- STon
- lb/s ■ lb/min
- lb/h
- STon/min
- STon/h
- STon/d
- $ft^3/s$
- ft³/min
- ft<sup>3</sup>/h
- ft³/d
- qal/s (us)
- gal/min (us)
- qal/h (us)
- qal/d (us)
- bbl/s (us;oil)
- bbl/min (us;oil)
- bbl/h (us;oil) bbl/d (us;oil)
- Sft³/min
- Sft³/h
- Sft<sup>3</sup>/d

Imperial units

- gal (imp)
- gal/s (imp)
- gal/min (imp)
- qal/h (imp)

Free text

User entry

Navigation

Character string comprising numbers, letters and special characters (32)

Endress+Hauser

141

D	
Pres	ssure

Navigation

### Scaled variable transfer function

**Navigation**  $\blacksquare \Box$  Application  $\rightarrow$  Sensor  $\rightarrow$  Scaled variable  $\rightarrow$  Scaled function

**Description** "Linear'

The linear pressure signal is used for the output signal. The flow must be calculated in the

evaluation unit.

"Square root" (Deltabar)

The root flow signal is used for the output signal. The "Flow (square root)' output signal is indicated on the on-site display with a root symbol.

"Table'

The output is defined according to the scaled variable / pressure table entered.

**Selection** • Linear

Square root \*

■ Table

### Lower range value output

**Navigation**  $\blacksquare$  Application  $\rightarrow$  Sensor  $\rightarrow$  Scaled variable  $\rightarrow$  Low.range outp

**Description** Depending on which variable has been selected as "Process variable output current", define

the related lower (4 mA) and upper range values (20 mA).

**User entry** Signed floating-point number

### Upper range value output

**Navigation**  $\blacksquare$  Application  $\rightarrow$  Sensor  $\rightarrow$  Scaled variable  $\rightarrow$  Upp.range outp

**Description** Depending on which variable has been selected as "Process variable output current", define

the related lower (4 mA) and upper range values (20 mA).

**User entry** Signed floating-point number

<sup>\*</sup> Visibility depends on order options or device settings

Activate table	<b>a</b>

**Navigation** riangleq Application riangleq Sensor riangleq Scaled variable riangleq Activate table

Selection ■ Disable ■ Enable

Pressure value 1

**Description** Enter pressure for the first scaling point. "Scaled variable value 1" will be allocated to this

pressure.

**User entry** Signed floating-point number

Scaled variable value 1

**Description** Enter value for the first scaling point. This value is allocated to "Pressure value 1".

**User interface** Signed floating-point number

Pressure value 2

**Description** Enter pressure for the second scaling point. "Scaled variable value 2" will be allocated to

this pressure.

**User entry** Signed floating-point number

Scaled variable value 2

**Description** Enter value for the second scaling point. This value is allocated to "Pressure value 2".

**User entry** Signed floating-point number

Pressure		
Navigation		
User entry	Signed floating-point number	
Scaled variable		
Navigation		
User entry	Signed floating-point number	
	"Wet calibration" submenu	
	Navigation $\square$ Application $\rightarrow$ Sensor $\rightarrow$ Wet calibration	
Zero		<b>A</b>
Navigation		
Selection	■ No ■ Confirm	
Pressure value 1		<b>1</b>
Navigation		
Description	Enter pressure for the first scaling point. "Scaled variable value 1" will be allocated to the pressure.	his
User entry	Signed floating-point number	
Span		
Navigation		
Selection	<ul><li>No</li><li>Confirm</li></ul>	

144

Pressure value 2	
Navigation	
Description	Enter pressure for the second scaling point. "Scaled variable value 2" will be allocated to this pressure.
User entry	Signed floating-point number
Lower range value output	
Navigation	
Description	Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).
User entry	Signed floating-point number
Upper range value output	<u> </u>
Navigation	
Description	Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).
User entry	Signed floating-point number
	"Wet calibration" submenu
	Navigation $\  \  \  \  \  \  \  \  \  \  \  \  \ $
Zero	<u> </u>
Navigation	
Selection	<ul><li>No</li><li>Confirm</li></ul>

Pressure value 1	
Navigation	
Description	Enter pressure for the first scaling point. "Scaled variable value 1" will be allocated to this pressure.
User entry	Signed floating-point number
Span	
Navigation	
Selection	■ No ■ Confirm
Pressure value 2	
Navigation	
Description	Enter pressure for the second scaling point. "Scaled variable value 2" will be allocated to this pressure.
User entry	Signed floating-point number
Lower range value output	<u> </u>
Navigation	
Description	Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).
User entry	Signed floating-point number
Upper range value output	
Navigation	
Description	Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA).

User entry

Signed floating-point number

#### 3.4.4 "Current output" submenu

Navigation

Assign PV

**Navigation** 

Application → Curr.output → Assign PV

Description

Use this function to select a measured variable (HART device variable) for the primary

dynamic variable (PV).

Selection

PressureScaled variable

#### Measuring mode current output

Navigation

Description

Select curve of current output.

Selection

StandardInverseBi-directional

Current range output

**Navigation** 

 $\blacksquare \square$  Application  $\rightarrow$  Curr.output  $\rightarrow$  Current range

Description

Defines the current range used to transmit the measured or calculated value. In brackets are indicated the "low saturation value" and the "high saturation value". If Measured value  $\leq$  "low saturation", the output current is set to "low saturation". If Measured value  $\geq$  "high saturation", the output current is set to "high saturation".

Note:

Currents below 3.6 mA or above 21.5 mA can be used to signal an alarm.

Selection

4...20 mA (4...20.5 mA)4...20 mA NE (3.8...20.5 mA)

■ 4...20 mA US (3.9...20.8 mA)

Description

User entry

# Lower range value output **Navigation** Description Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA). User entry Signed floating-point number Upper range value output **Navigation** Description Depending on which variable has been selected as "Process variable output current", define the related lower (4 mA) and upper range values (20 mA). User entry Signed floating-point number Failure behavior current output Navigation Description Defines which current the output assumes in the case of an error. Min: < 3.6 mA Max: >21.5 mA Note: The hardware DIP Switch for alarm current has priority over software setting. Selection ■ Min. Max. Failure current Navigation Application $\rightarrow$ Curr.output $\rightarrow$ Failure current

148

21.5 to 23 mA

Enter current output value in alarm condition

#### **Output current**

**Navigation**  $\blacksquare$  Application  $\rightarrow$  Curr.output  $\rightarrow$  Output curr.

**Description** Shows the value currently calculated for the current output

**User interface** 3.59 to 23 mA

#### **Terminal current**

**Navigation**  $\blacksquare$  Application  $\rightarrow$  Curr.output  $\rightarrow$  Terminal curr.

**Description** Shows the current value of the current output which is currently measured

**User interface** 0 to 30 mA

#### 4 mA trim value

**Navigation** Application  $\rightarrow$  Curr.output  $\rightarrow$  4 mA trim value

**Description** Enter the trim value for the 4 mA current output.

Note:

Simulation must be active.

**User entry** 3 to 5 mA

#### 20 mA trim value

**Navigation** Application  $\rightarrow$  Curr.output  $\rightarrow$  20 mA trim value

**Description** Enter the trim value for the 20 mA current output.

Note:

Simulation must be active.

**User entry** 18 to 22 mA

## 3.4.5 "HART output" submenu

*Navigation*  $\square$  Application  $\rightarrow$  HART output

#### "Configuration" submenu

*Navigation*  $\square$  Application  $\rightarrow$  HART output  $\rightarrow$  Configuration

HART address

**Navigation** Application  $\rightarrow$  HART output  $\rightarrow$  Configuration  $\rightarrow$  HART address

**Description** Define the HART address of the device.

**User entry** 0 to 63

Additional information

- The measured value can only be transmitted via the current value if the address is set to "0". The current is fixed at 4.0 mA for all other addresses (Multidrop mode).
- Only addresses in the range 0 to 15 are permitted for a system according to HART 5.0.
- All addresses in the range 0 to 63 are permitted for a system with HART 6.0 and higher.

 HART short tag

 Navigation
  $\blacksquare$  Application  $\Rightarrow$  HART output  $\Rightarrow$  Configuration  $\Rightarrow$  HART short tag

 Description
 Defines the short tag for the measuring point.

Maximum length: 8 characters

Allowed characters: A-Z, 0-9, certain special characters

**User entry** Max. 8 characters: A to Z, 0 to 9 and certain special characters (e.g. punctuation marks, @,

%).

Device tag

**Navigation**  $\blacksquare$  Application  $\rightarrow$  HART output  $\rightarrow$  Configuration  $\rightarrow$  Device tag

**Description** Enter a unique name for the measuring point to identify the device quickly within the

plant.

**User entry** Character string comprising numbers, letters and special characters (32)

150

No. of preambles

**Navigation** Application  $\rightarrow$  HART output  $\rightarrow$  Configuration  $\rightarrow$  No. of preambles

**Description** Defines the number of preambles in the HART telegram

**User entry** 5 to 20

Loop current mode

**Navigation**  $\blacksquare$  Application  $\rightarrow$  HART output  $\rightarrow$  Configuration  $\rightarrow$  Loop curr mode

**Description** If Loop current mode is disabled, Multi-drop communication mode is activated. Multi-drop

is a HART digital communication mode where multiple devices may share the same pair of  $\frac{1}{2}$ 

wires for power and communications. In this mode the output current is fixed.

**Selection** ■ Disable

■ Enable

"HART output" submenu

*Navigation*  $\square$  Application  $\rightarrow$  HART output  $\rightarrow$  HART output

Assign PV

**Navigation**  $\blacksquare$  Application  $\rightarrow$  HART output  $\rightarrow$  HART output  $\rightarrow$  Assign PV

**Description** Use this function to select a measured variable (HART device variable) for the primary

dynamic variable (PV).

**Selection** • Pressure

Scaled variable

Primary variable (PV)

**Navigation** Application  $\rightarrow$  HART output  $\rightarrow$  Primary var (PV)

**Description** Shows the first HART value (PV).

Additional information

# Assign SV

#### **Navigation** $\blacksquare \Box$ Application $\rightarrow$ HART output $\rightarrow$ HART output $\rightarrow$ Assign SV

**Description**Use this function to select a measured variable (HART device variable) for the secondary

dynamic variable (SV).

#### **Selection** • Pressure

- Scaled variable
- Sensor temperature
- Sensor pressure
- Electronics temperature
- Terminal current \*
- Terminal voltage
- Median of pressure signal
- Noise of pressure signal
- Signal noise detected \*
- Percent of range
- Loop current
- Not used

#### Additional information

#### Selection

■ Sensor pressure option

Sensor Pressure is the raw signal from sensor before damping and position adjustment.

■ **Terminal current** option

The terminal current is the read-back current on terminal block.

■ Signal noise detected option

0 % - Signal noise is within the permissible range.

100 % - Signal noise is outside of the permissible range.

■ Loop current option

The loop current is the output current set by the applied pressure.

#### Secondary variable (SV)

**Navigation** Application  $\rightarrow$  HART output  $\rightarrow$  HART output  $\rightarrow$  Second.var(SV)

**Description** Shows the second HART value (SV).

Assign TV

**Navigation**  $\blacksquare$  Application  $\rightarrow$  HART output  $\rightarrow$  HART output  $\rightarrow$  Assign TV

**Description** Use this function to select a measured variable (HART device variable) for the tertiary

(third) dynamic variable (TV).

152

<sup>\*</sup> Visibility depends on order options or device settings

#### Selection

- Pressure
- Scaled variable
- Sensor temperature
- Sensor pressure
- Electronics temperature
- Terminal current \*
- Terminal voltage
- Median of pressure signal \*
- Noise of pressure signal
- Signal noise detected
- Percent of range
- Loop current
- Not used

#### Additional information

#### Selection

■ Sensor pressure option

Sensor Pressure is the raw signal from sensor before damping and position adjustment.

■ **Terminal current** option

The terminal current is the read-back current on terminal block.

■ Signal noise detected option

0 % - Signal noise is within the permissible range.

100 % - Signal noise is outside of the permissible range.

■ Loop current option

The loop current is the output current set by the applied pressure.

#### Tertiary variable (TV)

**Navigation** 

Description

Shows the third HART value (TV).

#### Assign QV

#### **Navigation**

 $\blacksquare \blacksquare$  Application → HART output → HART output → Assign QV

Description

Use this function to select a measured variable (HART device variable) for the quaternary (fourth) dynamic variable (QV).

#### Selection

- Pressure
- Scaled variable
- Sensor temperature
- Sensor pressure
- Electronics temperature
- Terminal current \*
- Terminal voltage
- Median of pressure signal \*
- Noise of pressure signal
- Signal noise detected \*

<sup>\*</sup> Visibility depends on order options or device settings

- Percent of range
- Loop current
- Not used

#### Selection

• Sensor pressure option

Sensor Pressure is the raw signal from sensor before damping and position adjustment.

■ **Terminal current** option

The terminal current is the read-back current on terminal block.

• Signal noise detected option

0 % - Signal noise is within the permissible range.

100 % - Signal noise is outside of the permissible range.

■ **Loop current** option

The loop current is the output current set by the applied pressure.

#### Quaternary variable (QV)

**Navigation** 

Description

Shows the fourth value (QV).

#### "Burst configuration 1" submenu

**Navigation** 

 $\square$  Application  $\rightarrow$  HART output  $\rightarrow$  Burst config. 1

#### Burst mode 1

Navigation

Description

Use this function to select whether to activate the HART burst mode for burst message  $\boldsymbol{X}$ .

Selection

■ Off

The measuring device transmits data only when requested by the HART master.

On

The measuring device transmits data regularly without being requested.

#### Additional information

#### Selection

■ Off

The measuring device transmits data only when requested by the HART master.

■ On

The measuring device transmits data regularly without being requested.

#### Burst command 1

#### **Navigation**

#### Description

Use this function to select the HART command that is sent to the HART master.

#### Selection

- Primary variable (PV)
- Loop Current and Percent of Range
- Dynamic Variables
- Device variables with status
- Device variables
- Additional device status

#### Additional information

#### Selection

- Command 1
  - Read out the primary variable.
- Command 2

Read out the current and the main measured value as a percentage.

- Command 3
  - Read out the dynamic HART variables and the current.
- Command 9

Read out the dynamic HART variables including the related status.

- Command 33
  - Read out the dynamic HART variables including the related unit.
- Command 48

Read out the complete device diagnostics.

#### "Command 33" option

The HART device variables are defined via Command 107.

#### Commands



- Information about the defined details of the command: HART specifications
- The measured variables (HART device variables) are assigned to the dynamic variables in the **Output** submenu.

# Burst variable 0

#### Navigation

#### Description

For HART command 9 and 33: select the HART device variable or the process variable.

#### Selection

- Pressure
- Scaled variable
- Sensor temperature
- Sensor pressure
- Electronics temperature
- Measured current \*
- Terminal voltage 1<sup>\*</sup>
- Median of pressure signal \*
- Noise of pressure signal

<sup>\*</sup> Visibility depends on order options or device settings

- Signal noise detected \*
- Percent of range
- Measured current
- Primary variable (PV)
- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)
- Not used

Selection

If a burst message is not configured, the **Not used** option is set.

Burst variable 1		
Navigation	Burst config. 1 → Burst variable 1	
Description	For HART command 9 and 33: select the HART device variable or the process variab	le.
Selection	Please refer to the <b>Burst variable 0</b> parameter ( $\Rightarrow \triangleq 155$ ).	
Burst variable 2		
Navigation	Burst config. 1 → Burst variable 2	
Description	For HART command 9 and 33: select the HART device variable or the process variab	le.
Selection	Please refer to the <b>Burst variable 0</b> parameter ( $\rightarrow \triangleq 155$ ).	
Burst variable 3		<b>1</b>
Navigation	Burst config. 1 → Burst variable 3	
Description	For HART command 9 and 33: select the HART device variable or the process variab	le.
Selection	Please refer to the <b>Burst variable 0</b> parameter ( $\rightarrow \triangleq 155$ ).	
Burst variable 4		
Navigation	Burst config. 1 → Burst variable 4	
Description	For HART command 9: select the HART device variable or the process variable.	

<sup>\*</sup> Visibility depends on order options or device settings

156

Selection	Please refer to the <b>Burst variable 0</b> parameter ( $\rightarrow \triangleq 155$ ).	
Burst variable 5		
Navigation	Burst config. 1 → Burst variable 5	
Description	For HART command 9: select the HART device variable or the process variable.	
Selection	Please refer to the <b>Burst variable 0</b> parameter ( $\rightarrow \implies 155$ ).	
Burst variable 6		
Navigation	Burst config. 1 → Burst variable 6	
Description	For HART command 9: select the HART device variable or the process variable.	
Selection	Please refer to the <b>Burst variable 0</b> parameter ( $\rightarrow \implies 155$ ).	
Burst variable 7		
Navigation	Burst config. 1 → Burst variable 7	
Description	For HART command 9: select the HART device variable or the process variable.	
Selection	Please refer to the <b>Burst variable 0</b> parameter ( $\rightarrow \implies 155$ ).	
Burst trigger mode		
Navigation	Burst config. 1 → Trigger mode	
Description	Use this function to select the event that triggers burst message X.	
Selection	<ul> <li>Continuous</li> <li>Window*</li> <li>Rising*</li> <li>Falling*</li> <li>On change</li> </ul>	

<sup>\*</sup> Visibility depends on order options or device settings

Selection

Continuous

The message is sent continuously, at least at intervals corresponding to the time frame specified in the **Burst min period** parameter ( $\rightarrow \implies 158$ ).

Window

The message is sent if the specified measured value has changed by the value in the **Burst trigger level** parameter ( $\rightarrow \implies 158$ ).

Rising

The message is sent if the specified measured value exceeds the value in the **Burst trigger level** parameter ( $\rightarrow \implies 158$ ).

■ Falling

The message is sent if the specified measured value drops below the value in the **Burst trigger level** parameter ( $\rightarrow \implies 158$ ).

On change

The message is sent if a measured value changes in the burst message.

Burst trigger level	
Navigation	
Description	Use this function to enter the burst trigger value.
User entry	Signed floating-point number
Additional information	Description Together with the option selected in the <b>Burst trigger mode</b> parameter ( $\Rightarrow \implies 157$ ) the burst trigger value determines the time of burst message X.
Min. update period	
Navigation	
Description	Use this function to enter the minimum time span between two burst commands of burst message $\boldsymbol{X}$ .
User entry	Positive integer
Max. update period	
Navigation	
Description	Use this function to enter the maximum time span between two burst commands of burst message X.
User entry	Positive integer

158

#### "Information" submenu

Navigation  $\square$  Application  $\rightarrow$  HART output  $\rightarrow$  Information

**Device ID** 

**Navigation**  $\blacksquare$  Application  $\rightarrow$  HART output  $\rightarrow$  Information  $\rightarrow$  Device ID

**Description** Use this function to view the device ID for identifying the measuring device in a HART

network.

**User interface** 6-digit hexadecimal number

**Additional information** Description

🗻 In addition to the device type and manufacturer ID, the device ID is part of the unique

ID. Each HART device is uniquely identified by the unique device ID.

Device type

**Navigation**  $\blacksquare$  Application  $\rightarrow$  HART output  $\rightarrow$  Information  $\rightarrow$  Device type

**Description** Displays the device type with which the measuring device is registered with the HART

Communication Foundation.

**User interface** 2-digit hexadecimal number

**Factory setting** 0x54

**Factory setting** 0x5A

**Additional information** Description

The device type is specified by the manufacturer. It is needed to assign the appropriate

device description file (DD) to the device.

Device revision

**Navigation**  $\blacksquare$  Application  $\rightarrow$  HART output  $\rightarrow$  Information  $\rightarrow$  Device revision

**Description** Displays the device revision with which the device is registered with the HART

Communication Foundation.

**User interface** 2-digit hexadecimal number

Description

The device revision is needed to assign the appropriate device description file (DD) to the device.

HART short tag		A
Navigation		
Description	Defines the short tag for the measuring point.	
	Maximum length: 8 characters Allowed characters: A-Z, 0-9, certain special characters	
User entry	Max. 8 characters: A to Z, 0 to 9 and certain special characters (e.g. punctuation mark %).	xs, @,
HART revision		
Navigation		
Description	Shows the HART revision of the device.	
HART descriptor		
Navigation		
Description	Description for the measuring point.	
User entry	Character string comprising numbers, letters and special characters (16)	
HART message		<b></b>
Navigation		
Description	A HART message which is sent via the HART protocol when requested by the master.	
User entry	Character string comprising numbers, letters and special characters (32)	

HART date code

**Navigation** Application  $\rightarrow$  HART output  $\rightarrow$  Information  $\rightarrow$  HART date code

**Description** Date of the last configuration change

**User entry** Character string comprising numbers, letters and special characters (10)

**Additional information** Date format: YYYY-MM-DD

Make sure you adhere to this format when entering the date. Otherwise errors may occur in individual HART commands.

#### "System" menu 3.5

Navigation System

#### 3.5.1 "Device management" submenu

Navigation System  $\rightarrow$  Device manag.

Device tag		
Navigation	System → Device manag. → Device tag	

Description Enter a unique name for the measuring point to identify the device quickly within the plant.

**User entry** Character string comprising numbers, letters and special characters (32)

#### Locking status

Navigation 

Description Displays the active write protection.

User interface Hardware locked

> Safety locked ■ Temporarily locked

#### Additional information

User interface

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.



Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

#### Selection

Function scope of the "Locking status" parameter

Options	Description
None	The access status displayed in the <b>Access status display</b> parameter applies. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the main electronics module. This prevents write access to the parameters (e.g. via the local display or operating tool).
Temporarily locked	Write access to the parameters is temporarily locked due to device-internal processing (e.g. data upload/download, reset). Once the internal processing has been completed, the parameters can be changed once again.

#### **Configuration counter**

**Navigation** System  $\rightarrow$  Device manag.  $\rightarrow$  Config. counter

**Description** Displays the counter for changes to the device parameters.

Additional information:

- If the value for a static parameter is changed when optimizing or configuring the parameter, the counter is incremented by 1. This is to enable tracking different parameter versions.
- When multiple parameters are changed simultaneously, e.g. when loading parameters into the device from an external source such as FieldCare, the counter may display a higher value. The counter cannot be reset, nor is it reset to a default value on performing a device
- Once the counter has reached the value 65535, it restarts at 0.

**User interface** 0 to 65 535

Reset device

**Navigation** System  $\rightarrow$  Device manag.  $\rightarrow$  Reset device

**Description**Use this function to choose whether to reset the device configuration - either entirely or in

part - to a defined state.

**Selection** • Cancel

To factory defaults \*To delivery settings \*

■ Restart device

#### Additional information

#### Selection

Options	Description
Cancel	No action is executed and the user exits the parameter.
To factory defaults	Every parameter is reset to its factory setting.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.  This option is not visible if no customer-specific settings have been ordered.
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

<sup>\*</sup> Visibility depends on order options or device settings

## 3.5.2 "User management" submenu

*Navigation*  $\square$  System  $\rightarrow$  User manag.

#### User role

**Description** Displays the access authorization to the parameters via the operating tool.

**User interface** ■ Operator ■ Maintenance

Expert

#### Additional information

#### Description

Access authorization can be modified via the **Enter access code** parameter.

If additional write protection is active, this restricts the current access authorization even further.

#### User interface



Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device.

# Password Navigation □ System → User manag. → Password Description Enter the password for the "Maintenance" user role to get access to the functionality of this role. User entry Character string comprising numbers, letters and special characters (16)

Enter access code	

**Navigation** System  $\rightarrow$  User manag.  $\rightarrow$  Ent. access code

**Description** Use this function to enter the user-specific release code to remove parameter write

protection in the operating tool.

**User entry** 0 to 9 999

User entry

Status password entry	
Navigation	System → User manag. → Status pw entry
Description	Use this function to display the status of the password verification.
User interface	<ul> <li>Wrong password</li> <li>Password rule violated</li> <li>Password accepted</li> <li>Permission denied</li> </ul>

Confirm PW mismatchReset password acceptedInvalid user role

Wrong sequence of entry

New password		
Navigation	System → User manag. → New password	
Description	Define the new "Maintenance" password.  A new password is valid after it has been confirmed within the "Confirm new password parameter.  Any valid password consists of 4 to 16 characters and can contain letters and numbers	
User entry	Character string comprising numbers, letters and special characters (16)	
Confirm new password		
Navigation	System → User manag. → Confirm password	
Description	Enter the new password again to confirm.	
User entry	Character string comprising numbers, letters and special characters (16)	
Old password		
Navigation	System → User manag. → Old password	
Description	Enter the current password, to subsequently change the existing password.	

Endress+Hauser 165

Character string comprising numbers, letters and special characters (16)

**Description** Enter a code to reset the current "Maintenance" password.

The code is delivered by your local support.

**User entry** Character string comprising numbers, letters and special characters (16)

#### 3.5.3 "Bluetooth configuration" submenu

*Navigation*  $\square$  System  $\rightarrow$  Bluetooth conf.

#### Bluetooth activation

**Navigation** System  $\rightarrow$  Bluetooth conf.  $\rightarrow$  Bluetooth active

**Description** If Bluetooth is deactivated, it can only be reactivated via the display or the operating tool.

Reactivating via the SmartBlue app is not possible.

**Selection** • Disable

■ Enable

#### 3.5.4 "Display" submenu

*Navigation*  $\square$  System  $\rightarrow$  Display

#### Language

**Navigation** System  $\rightarrow$  Display  $\rightarrow$  Language

**Prerequisite** A local display is provided.

**Description** Use this function to select the configured language on the local display.

**Selection** ■ English

- Deutsch
- Français
- FrançaisEspañol
- LispanorItaliano
- Nederlands

- Portuguesa
- Polski
- русский язык (Russian)
- Svenska
- Türkçe
- 中文 (Chinese)
- 日本語 (Japanese)
- 한국어 (Korean)
- Bahasa Indonesia
- tiếng Việt (Vietnamese)
- čeština (Czech)

**Factory setting** 

English (alternatively, the ordered language is preset in the device)

#### Format display

**Navigation**  $\blacksquare$  System  $\rightarrow$  Display  $\rightarrow$  Format display

**Prerequisite** A local display is provided.

**Description** Use this function to select how the measured value is shown on the local display.

**Selection** ■ 1 value, max. size

- 1 bargraph + 1 value
- 2 values

#### Additional information

Description

The display format (size, bar graph etc.) and number of measured values displayed simultaneously (1 to 4) can be configured. This setting only applies to normal operation.



- The Value 1 display parameter (→ ☐ 167)...Value 8 display parameter Value 4 display parameter (→ ☐ 169) are used to specify which measured values are shown on the local display and in what order.
- If more measured values are specified than the display mode selected permits, then the values alternate on the device display. The display time until the next change is configured using the **Display interval** parameter.

#### Value 1 display

**Navigation** System  $\rightarrow$  Display  $\rightarrow$  Value 1 display

**Prerequisite** A local display is provided.

**Description** Use this function to select one of the measured values shown on the local display.

**Selection** • Pressure

- Scaled variable
- Current output
- Sensor temperature
- Percent of range

#### Description

If several measured values are displayed at once, the measured value selected here will be the first value to be displayed. The value is only displayed during normal operation.

The **Format display** parameter ( $\rightarrow \triangleq 167$ ) is used to specify how many measured values are displayed simultaneously and how.

#### Dependency

The unit of the displayed measured value is taken from the **System units** submenu.

# Value 2 display Navigation System → Display → Value 2 display Prerequisite A local display is provided. Description Use this function to select one of the measured values shown on the local display. Selection • None

Selection

None
Pressure
Scaled variable
Current output
Sensor temperature

Percent of range

#### Additional information

#### Description

If several measured values are displayed at once, the measured value selected here will be the second value to be displayed. The value is only displayed during normal operation.

The **Format display** parameter ( $\rightarrow \triangleq 167$ ) is used to specify how many measured values are displayed simultaneously and how.

#### Dependency

The unit of the displayed measured value is taken from the **System units** submenu.

Value 3 display		<b>A</b>
Navigation		
Prerequisite	A local display is provided.	
Description	Use this function to select one of the measured values shown on the local display.	
Selection	<ul> <li>None</li> <li>Pressure</li> <li>Scaled variable</li> <li>Current output</li> <li>Sensor temperature</li> <li>Percent of range</li> </ul>	

#### Description

If several measured values are displayed at once, the measured value selected here will be the third value to be displayed. The value is only displayed during normal operation.

The **Format display** parameter ( $\rightarrow \triangleq 167$ ) is used to specify how many measured values are displayed simultaneously and how.

#### Selection

The unit of the displayed measured value is taken from the **System units** submenu.

Value 4 display		<u> </u>
Navigation		
Prerequisite	A local display is provided.	
Description	Use this function to select one of the measured values shown on the local display.	
Selection	<ul> <li>None</li> <li>Pressure</li> <li>Scaled variable</li> <li>Current output</li> <li>Sensor temperature</li> <li>Percent of range</li> </ul>	
Additional information	Description  If several measured values are displayed at once, the measured value selected here we the fourth value to be displayed. The value is only displayed during normal operation.	

values are displayed simultaneously and how.

Select	ion
i	The unit of the displayed measured value is taken from the <b>System units</b> submenu.

The **Format display** parameter ( $\rightarrow \implies 167$ ) is used to specify how many measured

Contrast display	
Navigation	
Description	Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle)
User entry	20 to 80 %
Factory setting	Depends on the display

- Set the contrast via the push-buttons:

   Weaker: Press the and buttons simultaneously
   Stronger: Press the and buttons simultaneously

#### 3.5.5 "Geolocation" submenu

Navigation System → Geolocation

Process Unit Tag		
Navigation		
Description	Enter the process unit in which the device is installed.	
User entry	Character string comprising numbers, letters and special characters (32)	
Location Description		<b>1</b>
Navigation		
Description	Use this function to enter a description of the location so that the device can be located in the plant.	n
User entry	Character string comprising numbers, letters and special characters (32)	
Longitude		<u> </u>
Navigation		
Description	Use this function to enter the longitude coordinates that describe the device location.	
User entry	-180 to 180 °	
Latitude		<u> </u>
Navigation		
Description	Use this function to enter the latitude coordinates that describe the device location.	

**User entry** -90 to 90 °

Altitude

**Navigation** System  $\rightarrow$  Geolocation  $\rightarrow$  Altitude

**Description** Use this function to enter the altitude data that describe the device location.

**User entry** Signed floating-point number

Location method

**Navigation** System  $\rightarrow$  Geolocation  $\rightarrow$  Location method

**Description** Use this function to select the data format for specifying the geographic location. The

codes for specifying the location are based on the US National Marine Electronics

Association (NMEA) Standard NMEA 0183.

Selection ■ No fix

• GPS or Standard Positioning Service fix

■ Differential GPS fix

■ Precise positioning service (PPS) fix

■ Real Time Kinetic (RTK) fixed solution

■ Real Time Kinetic (RTK) float solution

Estimated dead reckoning

Manual input mode

Simulation Mode

#### 3.5.6 "Information" submenu

Navigation  $\square$  System  $\rightarrow$  Information

Device name

**Navigation**  $\blacksquare$  System  $\rightarrow$  Information  $\rightarrow$  Device name

**Description** Displays the name of the transmitter. It can also be found on the nameplate of the

transmitter.

**User interface** Max. 32 characters such as letters or numbers.

Manufacturer	
Navigation	
User interface	Character string comprising numbers, letters and special characters
Serial number	
Navigation	
Description	Displays the serial number of the measuring device.
	The number can be found on the nameplate of the sensor and transmitter.
User interface	Max. 11-digit character string comprising letters and numbers.
Additional information	Description
	Uses of the serial number  To identify the measuring device quickly, e.g. when contacting Endress+Hauser.  To obtain an edition on the measuring device using the Device Viewer.

www.endress.com/deviceviewer

• To obtain specific information on the measuring device using the Device Viewer:

Order code		A
Navigation		
Description	Shows the device order code.	
User interface	Character string composed of letters, numbers and certain punctuation marks (e.g. /).	
Factory setting	_	

#### Additional information

#### Description

The order code is generated from the extended order code through a process of reversible transformation. The extended order code indicates the attributes for all the device features in the product structure. The device features are not directly readable from the order code.

# Uses of the order code

- To order an identical spare device.
- To identify the device quickly and easily, e.g. when contacting Endress+Hauser.

#### Firmware version

**Navigation** System  $\rightarrow$  Information  $\rightarrow$  Firmware version

**Description** Displays the device firmware version that is installed.

**User interface** Character string in the format xx.yy.zz

**Additional information** *User interface* 

The Firmware version is also located:

• On the title page of the Operating instructions

• On the transmitter nameplate

#### Hardware version

**Navigation** System  $\rightarrow$  Information  $\rightarrow$  Hardware version

**User interface** Character string comprising numbers, letters and special characters

#### Extended order code 1

**A** 

**Navigation** System  $\rightarrow$  Information  $\rightarrow$  Ext. order cd. 1

**Description** The extended order code is an alphanumeric code containing all information to identify

the device and its options.

**User interface** Character string

Factory setting –

**Additional information** Description

The extended order code indicates the version of all the features of the product structure

for the measuring device and thus uniquely identifies the measuring device.

#### Extended order code 2

6

**Navigation**  $\square$  System  $\rightarrow$  Information  $\rightarrow$  Ext. order cd. 2

**Description** The extended order code is an alphanumeric code containing all information to identify

the device and its options.

The extended order code can also be found on the nameplate of the sensor and

transmitter in the "Ext. ord. cd." field.

**User interface** Character string

#### **Factory setting**

Extended order code 3

Navigation

System  $\rightarrow$  Information  $\rightarrow$  Ext. order cd. 3

Description

The extended order code is an alphanumeric code containing all information to identify the device and its options.

The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

User interface

Character string

**Factory setting** 

XML build number

Navigation 

User interface Positive integer

Checksum

Navigation 

Description Checksum for Firmware version.

User interface Positive integer

#### 3.5.7 "Software configuration" submenu

*Navigation*  $\square$  System  $\rightarrow$  Softw. config.

CRC device configuration

**Navigation** System  $\rightarrow$  Softw. config.  $\rightarrow$  CRC device conf.

**Description** CRC device configuration based on current settings of safety relevant parameters.

The CRC device configuration is unique and can be used to detect changes in safety

relevant parameter settings.

**User interface** 0 to 65 535

Stored CRC device configuration

**Navigation** System  $\rightarrow$  Softw. config.  $\rightarrow$  Stored CRC conf.

**Description** Stored CRC after the last safety lock. Factory delivery is 65535 means that the device has

not yet been safety locked.

**User interface** 0 to 65 535

Timestamp stored CRC device config.

**Navigation** System  $\rightarrow$  Softw. config.  $\rightarrow$  Time stored CRC

**Description** Gives the time stamp when the CRC was last stored following completion of the safety lock

wizard.

**User interface** Character string comprising numbers, letters and special characters

Activate SW option

**Navigation** System  $\rightarrow$  Softw. config.  $\rightarrow$  Activate SW opt.

**Description** Use this function to enter an activation code to enable an additional, ordered software

option.

**User entry** Max. 10-digit string of numbers.

**Factory setting** Depends on the software option ordered

#### Description

If a measuring device was ordered with an additional software option, the activation code is programmed in the device at the factory.

#### User entry



To activate a software option subsequently, please contact your Endress+Hauser sales organization.

#### NOTE!

The activation code is linked to the serial number of the measuring device and varies according to the device and software option.

If an incorrect or invalid code is entered, this results in the loss of software options that have already been activated.

- ▶ Before you enter a new activation code, make a note of the current activation code from the parameter protocol.
- ► Enter the new activation code provided by Endress+Hauser when the new software option was ordered.
- ▶ If the code entered is incorrect or invalid, enter the old activation code from the parameter protocol.
- ► Have the Endress+Hauser sales organization check the new activation code remembering to specify the serial number or ask for the code again.

Example for a software option

Order code for "Application package", option EA "Extended HistoROM"

#### Software option overview

**Navigation** 

Description

Shows all enabled software options

User interface

- SIL
- WHG
- Heartbeat Verification
- Heartbeat Monitoring

Cerabar PMP71B HART Index

# Index

Symbols	Burst mode 1 (Parameter)
(High) Is safety function triggered? (Parameter) 100	Burst trigger level (Parameter)
(Low) Is safety function triggered? (Parameter) 101	Burst trigger mode (Parameter) 157
	Burst variable 0 (Parameter)
0 9	Burst variable 1 (Parameter)
4 mA trim value (Parameter)	Burst variable 2 (Parameter)
20 mA trim value (Parameter)	Burst variable 3 (Parameter)
500 Diagnostic behavior (Parameter)	Burst variable 4 (Parameter)
500 Event category (Parameter)	Burst variable 6 (Parameter)
500 Process alert pressure (Parameter)	Burst variable 7 (Parameter)
501 Event category (Parameter) 79, 123	Buist variable / (i drameter)
501 Process alert scaled variable (Parameter) 77, 119	С
502 Diagnostic behavior (Parameter) 80, 123	Calibration offset (Parameter)
502 Event category (Parameter) 80, 123	Character test string (Parameter) 83
806 Diagnostic behavior (Parameter) 74, 121, 124, 127	Checksum (Parameter)
806 Event category (Parameter) 74, 121, 124, 127	Clamping voltage lower threshold (Parameter) 116
806 Event delay (Parameter) 74, 117, 121	Clamping voltage upper threshold (Parameter) 116
822 Diagnostic behavior (Parameter) 124, 127	Clear event list (Parameter)
822 Event category (Parameter)	Commissioning (Wizard)
841 Event category (Parameter)	Configuration (Submenu)
900 Diagnostic behavior (Parameter) 70, 126, 129	Configuration counter (Parameter) 87, 98, 163 Confirm (Parameter) 83, 85, 88, 89, 91, 100
900 Event category (Parameter)	Confirm new password (Parameter)
906 Diagnostic behavior (Parameter) 126, 129 906 Event category (Parameter) 70, 126, 129	Confirmation (Wizard)
700 Event category (1 drameter) 70, 120, 127	Contrast display (Parameter)
A	Counter Baseline creation SSD (Parameter) 65, 118
Activate SW option (Parameter)	Counter limit overruns sensor Pmax (Parameter) 111
Activate table (Parameter)	Counter limit overruns sensor Tmax (Parameter) 112
Active diagnostics (Parameter) 103, 106	Counter limit underruns sensor Pmin (Parameter) 109
Active diagnostics (Submenu)	Counter limit underruns sensor Tmin (Parameter) 110
Altitude (Parameter)	Counter overruns of user limit Pmax (Parameter)
Analog path integrity (Parameter)	
Application (Menu)	Counter overruns of user limit Tmax (Parameter)
Assign HART variables? (Parameter) 50, 52 Assign PV (Parameter) 38, 52, 90, 140, 147, 151	Counter underruns of user limit Pmin (Parameter)
Assign QV (Parameter)	
Assign SV (Parameter)	Counter underruns of user limit Tmin (Parameter)
Assign TV (Parameter)	
g · (, · · · · · · · · · · · · · · ·	CRC device configuration (Parameter) 86, 97, 175
В	Current Baseline noise (Parameter) 68
Baseline build process (Parameter) 64, 72	Current Baseline signal (Parameter) 66
Baseline is available (Parameter) 65	Current deviation 1 (Parameter) 102
Baseline Signal Control Line (Parameter)	Current deviation 2 (Parameter) 102
Baseline Signal Lower Control Line (Parameter) 67	Current output (Submenu)
Baseline Signal Noise Control Line (Parameter) 68	Current range output (Parameter) 49, 51, 90, 147
Baseline Signal Noise Lower Control Line (Parameter) 68 Baseline Signal Noise Minimum (Parameter) 69	D
Baseline Signal Noise Minimum (Parameter) 69 Baseline Signal Noise Upper Control Line (Parameter) 68	Damping (Parameter)
Baseline Signal Upper Control Line (Parameter) 66	Date/time (Parameter)
Baseline status (Parameter) 71, 116	Date/time Heartbeat Verification (Parameter) 60, 114
Basic settings (Submenu)	Date/time proof test (Parameter)
Bluetooth activation (Parameter)	Decimal places pressure (Parameter)
Bluetooth configuration (Submenu) 166	Decimal places scaled variable (Parameter) 133
Burst command 1 (Parameter)	Decision of inspector (Parameter)
Burst configuration 1 (Submenu)	Description of device parameters

Index Cerabar PMP71B HART

Device ID (Parameter)	Heartbeat Verification (Wizard)
Device name (Parameter) 34, 84, 96, 171	I
Device revision (Parameter)	I have read the warning texts. (Parameter) 71, 81, 94
Device type (Parameter)	Information (Submenu)
Diagnostic event simulation (Parameter)	Inspector (Parameter)
Diagnostic settings (Submenu)	morector (rurameter)
Diagnostics (Menu)	L
Display (Submenu)	Language (Parameter)
Document	Latitude (Parameter)
Explanation of the structure of a parameter	Location (Parameter) 59, 93, 104
description	Location Description (Parameter) 170
Function 4	Location method (Parameter) 171
Structure 4	Locking (Wizard)
Symbols used 5	Locking status (Parameter)
Target group	Longitude (Parameter)
Using the document 4	Loop current mode (Parameter) 50, 52, 151
Document function 4	Loop diagnostics (Parameter) 57, 75, 116
	Loop diagnostics (Submenu)
E	Low alert value (Parameter) 75, 78, 79, 119, 120
Electronics temperature (Parameter)	Low cutoff (Parameter)
Enter access code (Parameter) 164	Lower Range Limit (Parameter) 44, 46, 48, 139
Enter safety locking code (Parameter) 83, 91	Lower range value output (Parameter)
Enter safety unlocking code (Parameter) 81	
Event logbook (Submenu)	Lower sensor trim (Parameter)
Extended order code 1 (Parameter)	Lower sensor trim measured value (Parameter) 137
Extended order code 2 (Parameter)	M
Extended order code 3 (Parameter) 35, 174	
F	Mainboard module (Wizard)
	Max. update period (Parameter)
Failure behavior current output (Parameter)	Maximum electronics temperature (Parameter) 112
	Maximum sensor temperature (Parameter)
Failure current (high alarm) (Parameter)	Maximum terminal voltage (Parameter)
Failure current (Parameter) 49, 52, 148 Filter options (Parameter)	Measured values (Submenu)
Finish (Wizard)	Measurement adjustments (Wizard) 38, 39, 40, 42
Firmware version (Parameter)	Measuring mode current output (Parameter) 89, 147
Format display (Parameter)	Measuring units (Submenu)
Free text (Parameter)	Membrane integrity (Parameter)
Function	Menu
see Parameter	Application
See I didifferen	Diagnostics
G	Guidance
Geolocation (Submenu)	System
Guidance (Menu)	Min. update period (Parameter)
	Minimum electronics temperature (Parameter) 110
H	Minimum sensor temperature (Parameter) 110
Hardware version (Parameter) 85, 97, 173	Minimum span (Parameter) 44, 46, 48, 140
HART address (Parameter)	Minimum terminal voltage (Parameter) 110
HART date code (Parameter)	Minimum/maximum values (Submenu) 109
HART descriptor (Parameter)	NT.
HART message (Parameter)	N
HART output (Submenu)	New password (Parameter)
HART revision (Parameter)	No. of preambles (Parameter)
HART short tag (Parameter) 37, 150, 160	Notes (Parameter) 60, 93, 95, 104
Heartbeat Technology (Submenu)	0
Heartbeat Verification (Parameter)	Old password (Parameter)
Heartbeat Verification (Submenu)	Olu passwolu (Falaillelel)

Cerabar PMP71B HART Index

Operating time (Parameter)	Sensor (Submenu)
Operating time (Verification) (Parameter) 60, 114	Sensor integrity (Parameter)
Operating time from restart (Parameter)	Sensor limits (Submenu)
Output current (Parameter)	Sensor pressure (Parameter)
Output current transfer function (Parameter)	Sensor pressure (rarameter)
Output settings (Wizard) 43, 44, 45, 46, 48, 50, 52	Sensor temperature (Parameter)
Output settings (Wizaru) 43, 44, 43, 40, 40, 30, 32	Sensor temperature lower range limit (Parameter) 140
P	Sensor temperature upper range limit (Parameter) 140
Parameter	Sensor Trim Reset (Parameter)
Structure of a parameter description 4	Sensor/membrane integrity (Parameter)
Password (Parameter)	Serial number (Parameter)
Plant operator (Parameter) 60, 94, 105	Setpoint 1 (Parameter)
Preparation (Wizard) 81, 82, 83, 84, 86	Setpoint 2 (Parameter)
Preparation Proof test (Wizard) 94, 95, 97, 99	Signal maximum value (Parameter)
Pressure (Parameter) 43, 45, 134, 142, 144	Signal minimum value (Parameter) 67
Pressure 1 (Parameter)	Signal noise maximum value (Parameter)
Pressure 2 (Parameter)	Signal noise minimum value (Parameter)
Pressure max (Parameter)	Signal noise status (Parameter) 64, 67, 118
Pressure min (Parameter)	Signal status (Parameter) 64, 66, 117
Pressure unit (Parameter)	Simulation (Parameter)
Pressure value 1 (Parameter) 47, 143, 144, 146	Simulation (Submenu)
Pressure value 2 (Parameter) 47, 143, 145, 146	Simulation and check failure current (Wizard)
Previous diagnostics (Parameter) 107	Software configuration (Submenu)
Primary variable (PV) (Parameter) 151	Software integrity (Parameter)
Process (Submenu)	Software option overview (Parameter)
Process Unit Tag (Parameter)	Span (Parameter)
Process variable output current (Parameter) 50	SSD Monitoring delay time (Parameter) 69, 119
Proof test (Wizard)	SSD Out of range delay time (Parameter) 70, 118
Proof test via Bluetooth allowed? (Parameter) 82	SSD: Statistical Sensor Diagnostics (Parameter) 71, 117
Properties (Submenu)	Statistical Sensor Diagnostics (Parameter)
,	Statistical Sensor Diagnostics (Submenu)
Q	Status (Parameter)
Quaternary variable (QV) (Parameter) 154	Status password entry (Parameter)
_	Status summary (Parameter) 61, 62, 63
R	Stored CRC device configuration (Parameter) 86, 97, 175
RAM check (Parameter)	Submenu
Rebuild baseline (Parameter)	Active diagnostics
Reset device (Parameter)	Basic settings
Reset password (Parameter)	Bluetooth configuration
Reset user defined counters P and T (Parameter) 111	Burst configuration 1
Resistance Baseline (Parameter)	Configuration
Resistance previous Baseline (Parameter)	Current output
ROM check (Parameter)	Device management
S	Diagnostic settings
	Display
Safety function? (Parameter)	Event logbook
Safety mode (Wizard)	Geolocation
Sample rate (Parameter)	HART output
Save protocol? (Parameter)	Heartbeat Technology
Scaled variable (Parameter) 45, 134, 144	Heartbeat Verification
Scaled variable (Submenu)	Information
Scaled variable transfer function (Parameter)	Loop diagnostics
	Measured values
	Measuring units
Scaled variable value 1 (Parameter)	Minimum/maximum values 109
Scaled variable value 2 (Parameter)	Process
Secondary variable (SV) (Parameter)	Properties
beleet test protecture (rarafficiel)	

Index Cerabar PMP71B HART

Scaled variable       140         Sensor       135         Sensor calibration       136         Sensor limits       139         Simulation       113         Software configuration       175         Statistical Sensor Diagnostics       117         User management       164         Wet calibration       144, 145         Summary (Parameter)       103         Supply voltage Baseline (Parameter)       72         Supply voltage previous Baseline (Parameter)       73         System (Menu)       162         System status (Parameter)       55, 64, 117
T
Target group
Tolerated deviation +/- (Parameter) 73, 115
U Upper Range Limit (Parameter)
V
Value 1 display (Parameter)167Value 2 display (Parameter)168Value 3 display (Parameter)168Value 4 display (Parameter)169Value current output (Parameter)113Value pressure simulation (Parameter)113Verification result (Parameter)59, 114Visual inspection (Parameter)95
W
Wet calibration (Submenu)       144, 145         Wizard       34         Confirmation       87, 88, 89, 91         Device identification       34, 36, 37         Finish       93, 103         Heartbeat Verification       55         Locking       91

Mainboard module
Measurement adjustments 38, 39, 40, 42
Output settings 43, 44, 45, 46, 48, 50, 52
Preparation 81, 82, 83, 84, 86
Preparation Proof test 94, 95, 97, 99
Proof test
Safety mode
Simulation and check failure current 99
X XML build number (Parameter)
Z
Zero (Parameter)144, 145Zero adjustment (Parameter)42, 136Zero adjustment offset (Parameter)87, 91, 137



www.addresses.endress.com