
BA01843D/06/EN/02.20 71490487 2020-09-01

Valid as of version 01.00.zz (Device firmware)

# Operating Instructions **Proline Promass A 300 FOUNDATION Fieldbus**

Coriolis flowmeter

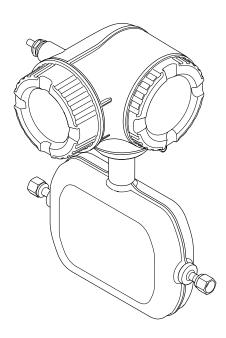





- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

# Table of contents

1	About th	nis document	6
1.1 1.2	Symbols .	function	
		afety symbols	6
		ectrical symbols	6 6
		pol symbols	
		mbols for	
		ertain types of information	
1.3		rmbols in graphics	7 8
1.2		andard documentation	8
		applementary device-dependent	U
	do	ocumentation	8
1.4	Registered	l trademarks	8
2	-		10
2.1		ents for the personnel	10
2.2 2.3	-	d use	10 11
2.5		e safety	11
2.5		fety	12
2.6		· · · · · · · · · · · · · · · · · · ·	12
2.7		ecific IT security	12
		rotecting access via hardware write	12
		cotecting access via a password	13
		ccess via Web server	13
3	Product	description	15
3.1	Product de	esign	15
4		g acceptance and product	
	identific	ation	16
4.1	Incoming	1	16
4.2		entification	16
		ransmitter nameplate	17 18
		mbols on measuring device	19
5	Storage	and transport	20
5.1	-	nditions	20
5.2		ing the product	20
		leasuring devices without lifting	
		gs	20
		leasuring devices with lifting lugs	21
5.3		ransporting with a fork lift	21 21
ر.ر	i ucitayiiiy	apposa	

6	Installation	22
6.1	Installation conditions6.1.1Mounting position6.1.2Environmental and process	22 22
6.2	requirements 6.1.3 Special mounting instructions Mounting the measuring device 6.2.1 Required tools 6.2.2 Preparing the measuring device 6.2.3 Mounting the measuring device 6.2.4 Turning the transmitter housing 6.2.5 Turning the display module	24 25 28 28 28 29 29 29 29
6.3 <b>7</b>	Post-installation check	30 <b>31</b>
-		
7.1	Connection conditions	31
	<ul><li>7.1.1 Required tools</li><li>7.1.2 Requirements for connecting cable</li></ul>	31 31
	7.1.3 Terminal assignment	34
	7.1.4 Device plugs available	34
	7.1.5 Pin assignment of device plug	34
	7.1.6 Shielding and grounding	34
	7.1.7 Preparing the measuring device	35
7.2	Connecting the measuring device	36
	7.2.1 Connecting the transmitter	36
	7.2.2 Connecting the remote display and	
7.0	operating module DKX001	39
7.3	Ensuring potential equalization	39
7.4	7.3.1 Requirements	39 40
7.4	7.4.1 Connection examples	40
7.5	Ensuring the degree of protection	43
7.6	Post-connection check	43
8	Operation options	44
8.1	Overview of operation options	44
8.2	Structure and function of the operating	45
	menu    8.2.1      Structure of the operating menu	45 45
	8.2.2 Operating philosophy	46
8.3	Access to the operating menu via the local	
	display	47
	<ul><li>8.3.1 Operational display</li><li>8.3.2 Navigation view</li></ul>	47 49
	<ul><li>8.3.2 Navigation view</li><li>8.3.3 Editing view</li></ul>	49 51
	8.3.4 Operating elements	53
	8.3.5 Opening the context menu	53
	8.3.6 Navigating and selecting from list	55
	8.3.7 Calling the parameter directly	55
	8.3.8 Calling up help text	56
	8.3.9 Changing the parameters	56
	8.3.10 User roles and related access	
	authorization	57

	8.3.11	Disabling write protection via access
	0 0 1 0	code 57
	8.3.12	Enabling and disabling the keypad
8.4	A	lock
0.4		r
	8.4.1	Function range
	8.4.2	Prerequisites
	8.4.3	Establishing a connection
	8.4.4	Logging on 62
	8.4.5	User interface 63
	8.4.6	Disabling the Web server
	8.4.7	Logging out 64
8.5		to the operating menu via the
	-	ng tool
	8.5.1	Connecting the operating tool 65
	8.5.2	Field Xpert SFX350, SFX370         67           Field Series         60
	8.5.3	FieldCare68DeviceCare69
	8.5.4 8.5.5	DeviceCare69AMS Device Manager69
	8.5.6	Field Communicator 475
	0.9.0	
9	Suctor	m integration 71
	-	5
9.1		ew of device description files
	9.1.1	Current version data for the device 71
9.2	9.1.2	Operating tools71lata transmission71
9.2	9.2.1	lata transmission71Block model71
	9.2.1	Description of the modules 72
	2.2.2	1
	9.2.3	Execution times
	9.2.3 9.2.4	Execution times         75           Methods         76
10	9.2.4	Methods 76
	9.2.4 <b>Comn</b>	Methods
10.1	9.2.4 Comn Functio	Methods       76         nissioning       77         on check       77
	9.2.4 <b>Comn</b> Functic Switchi	Methods       76         nissioning       77         on check       77         ng on the measuring device       77
10.1 10.2 10.3	9.2.4 Comm Function Switching Connect	Methods76 <b>hissioning77</b> on check77ng on the measuring device77rting via FieldCare77
10.1 10.2	9.2.4 Comm Functic Switchi Connec Setting	Methods76 <b>hissioning77</b> on check77ng on the measuring device77rting via FieldCare77
10.1 10.2 10.3 10.4	9.2.4 Comm Functic Switchi Connec Setting	Methods76 <b>nissioning77</b> on check77on the measuring device77rting via FieldCare77the operating language77
10.1 10.2 10.3 10.4	9.2.4 <b>Comm</b> Function Switching Connect Setting Configur 10.5.1 10.5.2	Methods76 <b>nissioning77</b> on check77ng on the measuring device77tring via FieldCare77the operating language77uring the measuring device78Defining the tag name79Setting the system units79
10.1 10.2 10.3 10.4	9.2.4 <b>Comm</b> Function Switching Configur 10.5.1 10.5.2 10.5.3	Methods76 <b>missioning77</b> on check77on on the measuring device77on the measuring device77on the measuring language77the operating language77uring the measuring device78Defining the tag name79Setting the system units79Selecting and setting the medium82
10.1 10.2 10.3 10.4	9.2.4 <b>Comm</b> Function Switching Configur 10.5.1 10.5.2 10.5.3 10.5.4	Methods76 <b>missioning77</b> on check77on the measuring device77tring via FieldCare77the operating language77uring the measuring device78Defining the tag name79Setting the system units79Selecting and setting the medium82Configuring the analog inputs84
10.1 10.2 10.3 10.4	9.2.4 <b>Comm</b> Function Switching Configur 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5	Methods76 <b>nissioning77</b> on check77on the measuring device77ng on the measuring device77thing via FieldCare77the operating language77the operating language77uring the measuring device78Defining the tag name79Selecting and setting the medium82Configuring the analog inputs84Displaying the I/O configuration84
10.1 10.2 10.3 10.4	9.2.4 <b>Comm</b> Function Switchin Connect Setting Configur 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6	Methods76 <b>nissioning77</b> on check77on on the measuring device77on on the measuring device77on on the measuring device77on on the measuring device77the operating language77uring the measuring device78Defining the tag name79Setting the system units79Selecting and setting the medium82Configuring the analog inputs84Displaying the I/O configuration84Configuring the current input85
10.1 10.2 10.3 10.4	9.2.4 <b>Comm</b> Function Switchin Connect Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7	Methods76 <b>missioning77</b> on check77on check77ng on the measuring device77tring via FieldCare77the operating language77the operating language78Defining the measuring device78Defining the tag name79Selecting and setting the medium82Configuring the analog inputs84Displaying the I/O configuration84Configuring the status input85
10.1 10.2 10.3 10.4	9.2.4 <b>Comm</b> Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8	Methods76 <b>missioning77</b> on check77on check77on on the measuring device77on the measuring device77on the operating language77the operating language77uring the measuring device78Defining the tag name79Selecting and setting the medium82Configuring the analog inputs84Displaying the I/O configuration84Configuring the status input85Configuring the current output86
10.1 10.2 10.3 10.4	9.2.4 <b>Comm</b> Function Switchin Connect Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7	Methods76 <b>missioning77</b> on check77on check77on on the measuring device77on the measuring device77on the measuring language77the operating language77uring the measuring device78Defining the tag name79Setting the system units79Selecting and setting the medium82Configuring the analog inputs84Displaying the I/O configuration84Configuring the status input85Configuring the current output87Configuring the pulse/frequency/
10.1 10.2 10.3 10.4	9.2.4 <b>Comm</b> Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9	Methods76 <b>missioning77</b> on check77on check77on the measuring device77tring via FieldCare77the operating language77uring the measuring device78Defining the tag name79Setting the system units79Selecting and setting the medium82Configuring the analog inputs84Displaying the I/O configuration84Configuring the status input85Configuring the current output87Configuring the pulse/frequency/90
10.1 10.2 10.3 10.4	9.2.4 <b>Comm</b> Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.10	Methods76 <b>missioning77</b> on check77on on the measuring device77on on the measuring device77on on the measuring device77on on the measuring device77on on the measuring device77the operating language77oring the measuring device78Defining the tag name79Setting the system units79Selecting and setting the medium82Configuring the analog inputs84Displaying the I/O configuration84Configuring the status input85Configuring the current output87Configuring the pulse/frequency/90Switch output90O Configuring the relay output97
10.1 10.2 10.3 10.4	9.2.4 <b>Comm</b> Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.10 10.5.10 10.5.10	Methods76 <b>missioning77</b> on check77on check77on on the measuring device77on the measuring device77thing via FieldCare77the operating language77the operating language77uring the measuring device78Defining the tag name79Selecting and setting the medium82Configuring the analog inputs84Displaying the I/O configuration84Configuring the status input85Configuring the current output87Configuring the pulse/frequency/90Switch output90D Configuring the relay output97I Configuring the local display99
10.1 10.2 10.3 10.4	9.2.4 <b>Comm</b> Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.10 10.5.11 10.5.11 10.5.12 10.5.12	Methods76 <b>nissioning77</b> on check77on check77on on the measuring device77on the measuring device77thing via FieldCare77the operating language77uring the measuring device78Defining the tag name79Selecting and setting the medium82Configuring the analog inputs84Displaying the I/O configuration84Configuring the status input85Configuring the pulse/frequency/87Switch output90O Configuring the relay output97I Configuring the local display99
10.1 10.2 10.3 10.4	9.2.4 <b>Comm</b> Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.10 10.5.11 10.5.12 10.5.12	Methods76 <b>nissioning77</b> on check77on on the measuring device77on on the measuring device77on on the measuring device77on on the measuring device77on on the measuring device77the operating language77uring the measuring device78Defining the tag name79Setting the system units79Selecting and setting the medium82Configuring the analog inputs84Displaying the I/O configuration84Configuring the current input85Configuring the status input86Configuring the current output87Configuring the relay output90D Configuring the local display992 Configuring the low flow cut off91
10.1 10.2 10.3 10.4	9.2.4 <b>Comm</b> Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.12 10.5.2 10.5.2 10.5.2 10.5.3 10.5.4 10.5.5 10.5.5 10.5.5 10.5.12 10.5.5	Methods76missioning77on check77on the measuring device77ng on the measuring device77thing via FieldCare77the operating language77uring the measuring device78Defining the tag name79Setting the system units79Selecting and setting the medium82Configuring the analog inputs84Displaying the I/O configuration84Configuring the status input85Configuring the current input87Configuring the relay output90O Configuring the relay output97I Configuring the local display992 Configuring the putial filled pipe103ced settings104
10.1 10.2 10.3 10.4 10.5	9.2.4 <b>Comm</b> Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.12 10.5.2 10.5.2 10.5.2 10.5.3 10.5.4 10.5.5 10.5.5 10.5.5 10.5.12 10.5.5	Methods76missioning77on check77ng on the measuring device77tring via FieldCare77the operating language77uring the measuring device78Defining the tag name79Setting the system units79Selecting and setting the medium82Configuring the analog inputs84Displaying the I/O configuration84Configuring the current input85Configuring the status input86Configuring the relay output90O Configuring the local display992 Configuring the low flow cut off1023 Configuring the partial filled pipe103ced settings104Using the parameter to enter the87
10.1 10.2 10.3 10.4 10.5	9.2.4 <b>Comm</b> Functic Switchi Connec Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.12	Methods76 <b>nissioning77</b> on check77on the measuring device77tring via FieldCare77the operating language77tring the measuring device78Defining the tag name79Setting the system units79Selecting and setting the medium82Configuring the analog inputs84Displaying the I/O configuration84Configuring the status input85Configuring the current input87Configuring the relay output90O Configuring the local display992 Configuring the low flow cut off1023 Configuring the partial filled pipe104Using the parameter to enter the access code105
10.1 10.2 10.3 10.4 10.5	9.2.4 <b>Comm</b> Function Switchin Connect Setting Configu 10.5.1 10.5.2 10.5.3 10.5.4 10.5.5 10.5.6 10.5.7 10.5.8 10.5.9 10.5.12 10.5.12 10.5.12 10.5.12 Advancet	Methods76missioning77on check77ng on the measuring device77tring via FieldCare77the operating language77uring the measuring device78Defining the tag name79Setting the system units79Selecting and setting the medium82Configuring the analog inputs84Displaying the I/O configuration84Configuring the current input85Configuring the status input86Configuring the relay output90O Configuring the local display992 Configuring the low flow cut off1023 Configuring the partial filled pipe103ced settings104Using the parameter to enter the87

	10.6.4 10.6.5	Configuring the totalizer Carrying out additional display	107
	10.0.9	configurations	109
	10.6.6	WLAN configuration	112
	10.6.7	Configuration management	113
	10.6.8	Using parameters for device	11)
	10.0.0	administration	114
10.7	Simulat	cion	116
10.7		ing settings from unauthorized	110
10.0			119
	10.8.1		119
	10.8.2	Write protection via write protection	117
	10.0.2	switch	120
	10.8.3	Write protection via block	120
	10.0.9	operation	121
		operation	121
11	-	tion	122
11.1	Reading	g the device locking status	122
11.2		ng the operating language	122
11.3	Configu	ring the display	122
11.4		g measured values	122
	11.4.1	"Measured variables" submenu	123
	11.4.2	"Totalizer" submenu	124
	11.4.3	"Input values" submenu	125
	11.4.4	Output values	126
11.5		ng the measuring device to the process	
	-	ons	128
11.6		ning a totalizer reset	128
	11.6.1	Function scope of the "Control	
	11.011	Totalizer" parameter	129
	11.6.2	Function scope of the "Reset all	107
	11.0.2	totalizers" parameter	129
11.7	Showin	g data logging	129
10		octics and troubloshooting	122
12	Diagn	ostics and troubleshooting	133
12.1	<b>Diagn</b> Genera	l troubleshooting	
	<b>Diagn</b> General Diagnos	l troubleshooting	133
12.1	<b>Diagn</b> General Diagnos diodes	l troubleshooting	133 135
12.1 12.2	Diagn General Diagnos diodes 12.2.1	l troubleshooting	133 135 135
12.1	Diagno General Diagnos diodes 12.2.1 Diagnos	l troubleshooting	133 135 135 136
12.1 12.2	Diagno General Diagnos diodes 12.2.1 Diagnos 12.3.1	l troubleshooting	133 135 135 136 136
12.1 12.2 12.3	Diagno General Diagnos diodes 12.2.1 Diagnos 12.3.1 12.3.2	l troubleshooting	133 135 135 136 136 138
12.1 12.2	Diagno General Diagnos diodes 12.2.1 Diagnos 12.3.1 12.3.2	l troubleshooting stic information via light emitting Transmitter stic information on local display Diagnostic message Calling up remedial measures stic information in the Web browser .	133 135 135 136 136 138 138
12.1 12.2 12.3	Diagno General Diagnos diodes 12.2.1 Diagnos 12.3.1 12.3.2	l troubleshooting	133 135 135 136 136 138
12.1 12.2 12.3	Diagno General Diagnos diodes 12.2.1 Diagnos 12.3.1 12.3.2 Diagnos	l troubleshooting stic information via light emitting Transmitter stic information on local display Diagnostic message Calling up remedial measures stic information in the Web browser .	133 135 135 136 136 138 138
12.1 12.2 12.3	<b>Diagno</b> General Diagnos 12.2.1 Diagnos 12.3.1 12.3.2 Diagnos 12.4.1 12.4.2 Diagnos	l troubleshooting stic information via light emitting Transmitter stic information on local display Diagnostic message Calling up remedial measures stic information in the Web browser . Diagnostic options Calling up remedy information stic information in FieldCare or	133 135 135 136 136 138 138 138
12.1 12.2 12.3 12.4	<b>Diagno</b> General Diagnos 12.2.1 Diagnos 12.3.1 12.3.2 Diagnos 12.4.1 12.4.2 Diagnos	l troubleshooting stic information via light emitting Transmitter stic information on local display Diagnostic message Calling up remedial measures stic information in the Web browser . Diagnostic options Calling up remedy information	133 135 135 136 136 138 138 138
12.1 12.2 12.3 12.4	<b>Diagno</b> General Diagnos 12.2.1 Diagnos 12.3.1 12.3.2 Diagnos 12.4.1 12.4.2 Diagnos	l troubleshooting stic information via light emitting Transmitter stic information on local display Diagnostic message Calling up remedial measures stic information in the Web browser . Diagnostic options Calling up remedy information stic information in FieldCare or Care	133 135 136 136 138 138 138 138
12.1 12.2 12.3 12.4	<b>Diagno</b> General Diagnos 12.2.1 Diagnos 12.3.1 12.3.2 Diagnos 12.4.1 12.4.2 Diagnos Device	l troubleshooting stic information via light emitting Transmitter stic information on local display Diagnostic message Calling up remedial measures stic information in the Web browser . Diagnostic options Calling up remedy information stic information in FieldCare or Care Diagnostic options	133 135 136 136 138 138 138 139 139
12.1 12.2 12.3 12.4	<b>Diagno</b> General Diagnos 12.2.1 Diagnos 12.3.1 12.3.2 Diagnos 12.4.1 12.4.2 Diagnos DeviceO 12.5.1 12.5.2	l troubleshooting stic information via light emitting Transmitter stic information on local display Diagnostic message Calling up remedial measures stic information in the Web browser . Diagnostic options Calling up remedy information stic information in FieldCare or Care	<ol> <li>133</li> <li>135</li> <li>136</li> <li>136</li> <li>138</li> <li>138</li> <li>139</li> <li>139</li> <li>139</li> <li>139</li> </ol>
12.1 12.2 12.3 12.4 12.5	<b>Diagno</b> General Diagnos 12.2.1 Diagnos 12.3.1 12.3.2 Diagnos 12.4.1 12.4.2 Diagnos DeviceO 12.5.1 12.5.2	l troubleshooting stic information via light emitting Transmitter stic information on local display Diagnostic message Calling up remedial measures stic information in the Web browser . Diagnostic options Calling up remedy information stic information in FieldCare or Care Diagnostic options Calling up remedy information for a content of the diagnostic information	<ol> <li>133</li> <li>135</li> <li>136</li> <li>136</li> <li>138</li> <li>138</li> <li>138</li> <li>139</li> <li>139</li> <li>139</li> <li>140</li> </ol>
12.1 12.2 12.3 12.4 12.5	<b>Diagno</b> General Diagnos 12.2.1 Diagnos 12.3.1 12.3.2 Diagnos 12.4.1 12.4.2 Diagnos 12.4.1 12.4.2 Diagnos 12.5.1 12.5.2 Adaptin	l troubleshooting stic information via light emitting Transmitter stic information on local display Diagnostic message Calling up remedial measures stic information in the Web browser . Diagnostic options Calling up remedy information stic information in FieldCare or Care Diagnostic options Calling up remedy information piagnostic options Calling up remedy information Adapting the diagnostic behavior	<ol> <li>133</li> <li>135</li> <li>136</li> <li>136</li> <li>138</li> <li>138</li> <li>138</li> <li>139</li> <li>139</li> <li>139</li> <li>140</li> <li>141</li> </ol>
12.1 12.2 12.3 12.4 12.5 12.6	Diagno General Diagnos 12.2.1 Diagnos 12.3.1 12.3.2 Diagnos 12.4.1 12.4.2 Diagnos 12.5.1 12.5.2 Adaptin 12.6.1 12.6.2	l troubleshooting stic information via light emitting Transmitter stic information on local display Diagnostic message Calling up remedial measures stic information in the Web browser . Diagnostic options Calling up remedy information stic information in FieldCare or Care Diagnostic options Calling up remedy information diagnostic options Calling up remedy information Adapting the diagnostic behavior Adapting the status signal	<ol> <li>133</li> <li>135</li> <li>136</li> <li>136</li> <li>138</li> <li>138</li> <li>139</li> <li>139</li> <li>139</li> <li>140</li> <li>141</li> <li>141</li> <li>141</li> </ol>
12.1 12.2 12.3 12.4 12.5	<b>Diagno</b> General Diagnos 12.2.1 Diagnos 12.3.1 12.3.2 Diagnos 12.4.1 12.4.2 Diagnos 12.5.1 12.5.2 Adaptin 12.6.1 12.6.2 Overvie	l troubleshooting stic information via light emitting Transmitter stic information on local display biagnostic message Calling up remedial measures stic information in the Web browser . Diagnostic options Calling up remedy information stic information in FieldCare or Care Diagnostic options Calling up remedy information fulting up remedy information Adapting the diagnostic behavior Adapting the status signal	<ol> <li>133</li> <li>135</li> <li>136</li> <li>136</li> <li>138</li> <li>138</li> <li>139</li> <li>139</li> <li>139</li> <li>140</li> <li>141</li> <li>141</li> <li>145</li> </ol>
12.1 12.2 12.3 12.4 12.5 12.6	<b>Diagn</b> General Diagnos 12.2.1 Diagnos 12.3.1 12.3.2 Diagnos 12.4.1 12.4.2 Diagnos 12.4.1 12.5.2 Adaptin 12.5.2 Adaptin 12.6.1 12.6.2 Overvie 12.7.1	l troubleshooting stic information via light emitting Transmitter stic information on local display Diagnostic message Calling up remedial measures stic information in the Web browser . Diagnostic options Calling up remedy information stic information in FieldCare or Care Diagnostic options Calling up remedy information Calling up remedy information Adapting the diagnostic behavior Adapting the status signal Diagnostic of sensor	133 135 136 136 138 138 138 139 139 139 139 140 141 141 141 145 146
12.1 12.2 12.3 12.4 12.5 12.6	Diagno General Diagnos diodes 12.2.1 Diagnos 12.3.1 12.3.2 Diagnos 12.4.1 12.4.2 Diagnos 12.4.1 12.4.2 Diagnos 12.5.1 12.5.2 Adaptin 12.6.1 12.6.2 Overvie 12.7.1 12.7.2	l troubleshooting stic information via light emitting Transmitter stic information on local display Diagnostic message Calling up remedial measures stic information in the Web browser . Diagnostic options Calling up remedy information stic information in FieldCare or Care Diagnostic options Calling up remedy information function of the diagnostic information Adapting the diagnostic behavior Adapting the status signal Diagnostic of sensor Diagnostic of electronic	133 135 136 136 138 138 138 139 139 139 139 140 141 141 141 145 146 148
12.1 12.2 12.3 12.4 12.5 12.6	Diagno diodes 1 12.2.1 Diagnos 12.3.1 12.3.2 Diagnos 12.4.1 12.4.2 Diagnos 12.4.1 12.4.2 Diagnos 12.5.1 12.5.2 Adaptin 12.6.1 12.6.2 Overviee 12.7.1 12.7.2 12.7.3	l troubleshooting stic information via light emitting Transmitter stic information on local display Diagnostic message Calling up remedial measures stic information in the Web browser . Diagnostic options Calling up remedy information stic information in FieldCare or Care Diagnostic options Calling up remedy information fultion of the diagnostic information Adapting the diagnostic behavior Adapting the status signal Diagnostic of sensor Diagnostic of electronic Diagnostic of configuration	133 135 136 136 138 138 138 139 139 139 140 141 141 141 145 146 148 154
12.1 12.2 12.3 12.4 12.5 12.6	Diagno diodes 1 12.2.1 Diagnos 12.3.1 12.3.2 Diagnos 12.4.1 12.4.2 Diagnos 12.4.1 12.4.2 Diagnos 12.5.1 12.5.2 Adaptin 12.6.1 12.6.2 Overvie 12.7.1 12.7.2 12.7.3 12.7.4	l troubleshooting stic information via light emitting Transmitter stic information on local display Diagnostic message Calling up remedial measures stic information in the Web browser . Diagnostic options Calling up remedy information stic information in FieldCare or Care Diagnostic options Calling up remedy information function of the diagnostic information Adapting the diagnostic behavior Adapting the status signal Diagnostic of sensor Diagnostic of electronic	133 135 136 136 138 138 138 139 139 139 139 140 141 141 141 145 146 148

Endress+Hauser

12.9	Diagnostic messages in the DIAGNOSTIC	1 ( 1
10 10	Transducer Block	167
	Diagnostic list	167 168
12.11	Event logbook 12.11.1 Reading out the event logbook	168
	12.11.2 Filtering the event logbook	169
	12.11.3 Overview of information events	169
12 12	Resetting the measuring device	170
12.12	12.12.1 Function scope of the "Restart"	170
	parameter	170
	12.12.2 Function scope of the "Service reset"	
	parameter	171
12.13	Device information	171
12.14	Firmware history	173
10		17/
13	Maintenance	174
13.1	Maintenance tasks	174
	13.1.1 Exterior cleaning	174
	13.1.2 Interior cleaning	174
13.2	Measuring and test equipment	174
13.3	Endress+Hauser services	174
14	Repair	175
14.1	General notes	175
17.1	14.1.1 Repair and conversion concept	175
	14.1.2 Notes for repair and conversion	175
14.2	Spare parts	175
14.3	Endress+Hauser services	175
14.4	Return	175
14.5	Disposal	176
1 1.2	14.5.1 Removing the measuring device	176
	14.5.2 Disposing of the measuring device	176
15	Accessories	177
15.1	Device-specific accessories	177
	15.1.1 For the transmitter	177
1	15.1.2 For the sensor	178
15.2	Communication-specific accessories	178 179
15.3 15.4	Service-specific accessories	179
17.4	System components	1/9
16	Technical data	180
16.1	Application	180
16.2	Function and system design	180
16.3	Input	181
16.4	Output	184
16.5	Power supply	189
16.6	Performance characteristics	191
16.7	Installation	194
16.8	Environment	194
16.9	Process	195
16.10	Mechanical construction	198
	Human interface	201
16.12	Certificates and approvals	206
16.13	Application packages	208
16.14	Accessories	209

16.15 Supplementary documentation	210
Index	212

# 1 About this document

## 1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

# 1.2 Symbols

## 1.2.1 Safety symbols

## **DANGER**

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

## A WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

## **A** CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

## NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

## 1.2.2 Electrical symbols

Symbol	Meaning
	Direct current
$\sim$	Alternating current
$\sim$	Direct current and alternating current
<u>+</u>	<b>Ground connection</b> A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	<b>Protective Earth (PE)</b> A terminal which must be connected to ground prior to establishing any other connections.
	<ul><li>The ground terminals are situated inside and outside the device:</li><li>Inner ground terminal: Connects the protectiv earth to the mains supply.</li><li>Outer ground terminal: Connects the device to the plant grounding system.</li></ul>

## 1.2.3 Communication symbols

Symbol	Meaning
((:-	Wireless Local Area Network (WLAN) Communication via a wireless, local network.
	<b>LED</b> Light emitting diode is off.

Symbol	Meaning
-X-	<b>LED</b> Light emitting diode is on.
	<b>LED</b> Light emitting diode is flashing.

# 1.2.4 Tool symbols

Symbol	Meaning
0	Flat blade screwdriver
$\bigcirc \not \sqsubseteq$	Allen key
Ń	Open-ended wrench

# 1.2.5 Symbols for certain types of information

Symbol	Meaning
	<b>Permitted</b> Procedures, processes or actions that are permitted.
	<b>Preferred</b> Procedures, processes or actions that are preferred.
×	Forbidden Procedures, processes or actions that are forbidden.
i	<b>Tip</b> Indicates additional information.
	Reference to documentation.
	Reference to page.
	Reference to graphic.
►	Notice or individual step to be observed.
1., 2., 3	Series of steps.
L.	Result of a step.
?	Help in the event of a problem.
	Visual inspection.

# **1.2.6** Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections
EX	Hazardous area

Symbol	Meaning
X	Safe area (non-hazardous area)
≈➡	Flow direction

# 1.3 Documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *W@M Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from nameplate
- *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2D matrix code (QR code) on the nameplate

Detailed list of the individual documents along with the documentation code  $\rightarrow \cong 210$ 

## 1.3.1 Standard documentation

Document type	Purpose and content of the document
Technical Information	<b>Planning aid for your device</b> The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Sensor Brief Operating Instructions	<b>Guides you quickly to the 1st measured value - Part 1</b> The Sensor Brief Operating Instructions are aimed at specialists with responsibility for installing the measuring device.
	<ul><li>Incoming acceptance and product identification</li><li>Storage and transport</li><li>Installation</li></ul>
Transmitter Brief Operating Instructions	Guides you quickly to the 1st measured value - Part 2 The Transmitter Brief Operating Instructions are aimed at specialists with responsibility for commissioning, configuring and parameterizing the measuring device (until the first measured value).
	<ul> <li>Product description</li> <li>Installation</li> <li>Electrical connection</li> <li>Operation options</li> <li>System integration</li> <li>Commissioning</li> <li>Diagnostic information</li> </ul>
Description of Device Parameters	<b>Reference for your parameters</b> The document provides a detailed explanation of each individual parameter in the Expert operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

## 1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

# 1.4 Registered trademarks

## **FOUNDATION™** Fieldbus

Registration-pending trademark of the FieldComm Group, Austin, Texas, USA

## TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA

# 2 Safety instructions

## 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- Trained, qualified specialists must have a relevant qualification for this specific function and task.
- Are authorized by the plant owner/operator.
- Are familiar with federal/national regulations.
- Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ► Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ► Follow the instructions in this manual.

# 2.2 Designated use

## Application and media

The measuring device described in this manual is intended only for the flow measurement of liquids and gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- Keep within the specified pressure and temperature range.
- Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- If the ambient temperature of the measuring device is outside the atmospheric temperature, it is absolutely essential to comply with the relevant basic conditions as specified in the device documentation → 
   8.
- Protect the measuring device permanently against corrosion from environmental influences.

## Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

## **WARNING**

## Danger of breakage due to corrosive or abrasive fluids and ambient conditions!

- ► Verify the compatibility of the process fluid with the sensor material.
- Ensure the resistance of all fluid-wetted materials in the process.
- Keep within the specified pressure and temperature range.

## NOTICE

#### Verification for borderline cases:

For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

#### **Residual risks**

#### **WARNING**

# The electronics and the medium may cause the surfaces to heat up. This presents a burn hazard!

► For elevated fluid temperatures, ensure protection against contact to prevent burns.

#### **WARNING**

#### Danger of housing breaking due to measuring tube breakage!

If a measuring tube ruptures, the pressure inside the sensor housing will rise according to the operating process pressure.

► Use a rupture disk.

#### **WARNING**

#### Danger from medium escaping!

For device versions with a rupture disk: medium escaping under pressure can cause injury or material damage.

• Take precautions to prevent injury and material damage if the rupture disk is actuated.

## 2.3 Workplace safety

For work on and with the device:

 Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

• Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

• Due to the increased risk of electric shock, gloves must be worn.

## 2.4 Operational safety

Risk of injury.

- Operate the device in proper technical condition and fail-safe condition only.
- The operator is responsible for interference-free operation of the device.

#### Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

▶ If, despite this, modifications are required, consult with Endress+Hauser.

#### Repair

To ensure continued operational safety and reliability,

- Carry out repairs on the device only if they are expressly permitted.
- ► Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

# 2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

# 2.6 IT security

Our warranty is valid only if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the device and associated data transfer, must be implemented by the operators themselves in line with their security standards.

# 2.7 Device-specific IT security

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. An overview of the most important functions is provided in the following section.

Function/interface	Factory setting	Recommendation
Write protection via hardware write protection switch $\rightarrow \square 12$	Not enabled.	On an individual basis following risk assessment.
Access code (also applies for Web server login or FieldCare connection) $\rightarrow \cong 13$	Not enabled (0000).	Assign a customized access code during commissioning.
WLAN (order option in display module)	Enabled.	On an individual basis following risk assessment.
WLAN security mode	Enabled (WPA2- PSK)	Do not change.
WLAN passphrase (password) → 🗎 13	Serial number	Assign an individual WLAN passphrase during commissioning.
WLAN mode	Access Point	On an individual basis following risk assessment.
Web server→ 🗎 13	Enabled.	On an individual basis following risk assessment.
CDI-RJ45 service interface	-	On an individual basis following risk assessment.

## 2.7.1 Protecting access via hardware write protection

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the motherboard). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered  $\rightarrow \square$  120.

## 2.7.2 Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

- User-specific access code
- Protect write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare). Access authorization is clearly regulated through the use of a user-specific access code.
- WLAN passphrase The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.
- Infrastructure mode
   When the device is operated in infrastructure mode, the WLAN passphrase corresponds to the WLAN passphrase configured on the operator side.

#### User-specific access code

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code ( $\rightarrow \cong 119$ ).

When the device is delivered, the device does not have an access code and is equivalent to 0000 (open).

#### WLAN passphrase: Operation as WLAN access point

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface ( $\Rightarrow \boxtimes 66$ ), which can be ordered as an optional extra, is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter ( $\rightarrow \cong 113$ ).

## Infrastructure mode

A connection between the device and WLAN access point is protected by means of an SSID and passphrase on the system side. Please contact the relevant system administrator for access.

#### General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning.
- Follow the general rules for generating a secure password when defining and managing the access code or network key.
- The user is responsible for the management and careful handling of the access code and network key.
- For information on configuring the access code or on what to do if you lose the password, see the "Write protection via access code" section → 
   <sup>119</sup>
   <sup>119</sup>

## 2.7.3 Access via Web server

The device can be operated and configured via a Web browser with the integrated Web server ( $\rightarrow \textcircled{3}$  58). The connection is via the service interface (CDI-RJ45) or the WLAN interface.

The Web server is enabled when the device is delivered. The Web server can be disabled if necessary (e.g. after commissioning) via the **Web server functionality** parameter.

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.


For detailed information on device parameters, see: The "Description of Device Parameters" document  $\rightarrow \cong 210$ .

# **3** Product description

The device consists of a transmitter and a sensor.

The device is available as a compact version: The transmitter and sensor form a mechanical unit.


# 3.1 Product design

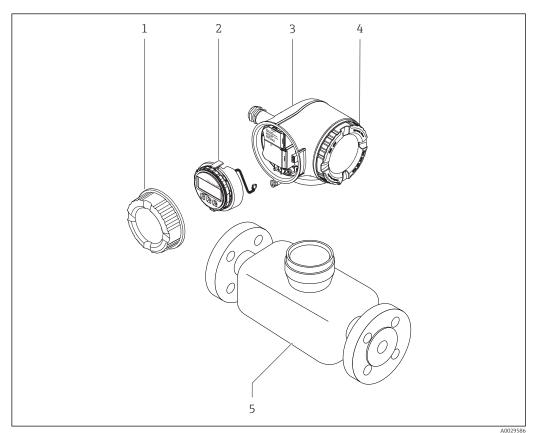

- 1 Important components of a measuring device
- 1 Connection compartment cover
- 2 Display module
- 3 Transmitter housing
- 4 Electronics compartment cover
- 5 Sensor

# 4 Incoming acceptance and product identification

# 4.1 Incoming acceptance

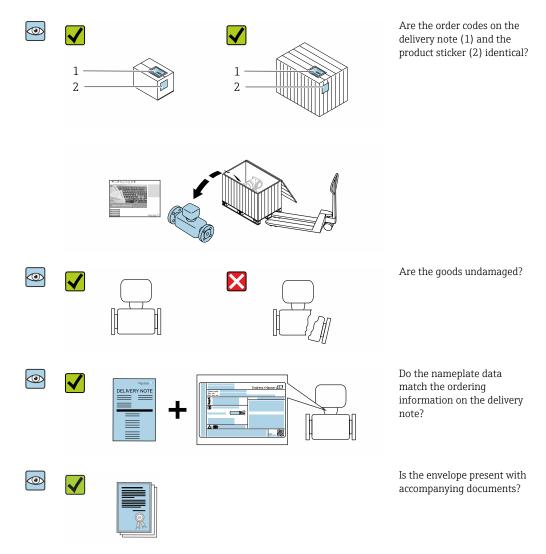

# 4.2 Product identification


The following options are available for identification of the device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in the *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the device is displayed.
- Enter the serial number from nameplates in the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate using the *Endress+Hauser Operations App*: All information about the device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The "Additional standard documentation on the device" → 
   B and "Supplementary device-dependent documentation" → 
   B sections
- The *W*@*M Device Viewer*: enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.


## 4.2.1 Transmitter nameplate

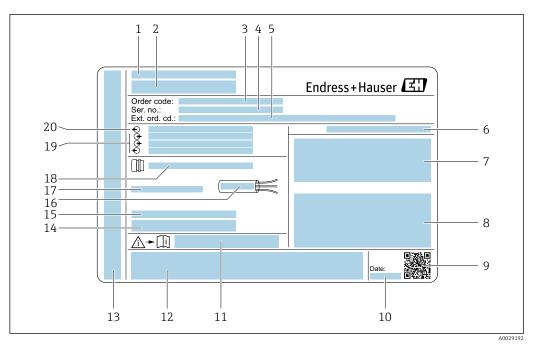

*Example of a transmitter nameplate*

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Degree of protection
- 7 Space for approvals: use in hazardous areas
- 8 Electrical connection data: available inputs and outputs
- 9 2-D matrix code
- 10 Manufacturing date: year-month
- 11 Document number of safety-related supplementary documentation
- 12 Space for approvals and certificates: e.g. CE mark, C-Tick
- 13 Space for degree of protection of connection and electronics compartment when used in hazardous areas
- 14 Firmware version (FW) and device revision (Dev.Rev.) from the factory
  - 15 Space for additional information in the case of special products
  - 16 Permitted temperature range for cable
  - 17 Permitted ambient temperature  $(T_a)$
  - 18 Information on cable gland
  - *19* Available inputs and outputs, supply voltage
  - 20 Electrical connection data: supply voltage

## 4.2.2 Sensor nameplate

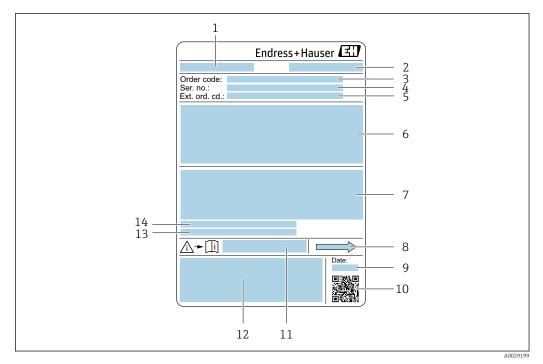

#### E 3 Example of a sensor nameplate

- 1 Name of the sensor
- 2 Manufacturing location
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Nominal diameter of the sensor; flange nominal diameter/nominal pressure; sensor test pressure; medium temperature range; material of measuring tube and manifold; sensor-specific information: e.g. pressure range of sensor housing, wide-range density specification (special density calibration)
- 7 Approval information for explosion protection, Pressure Equipment Directive and degree of protection
- 8 Flow direction
- 9 Manufacturing date: year-month
- 10 2-D matrix code
- 11 Document number of safety-related supplementary documentation
- 12 CE mark, C-Tick
- 13 Surface roughness
- 14 Permitted ambient temperature (T<sub>a</sub>)

## 📔 Order code

The measuring device is reordered using the order code.

## Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approvalrelated specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXX-ABCDE +).

# 4.2.3 Symbols on measuring device

Symbol	Meaning
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	Reference to documentation Refers to the corresponding device documentation.
	<b>Protective ground connection</b> A terminal which must be connected to ground prior to establishing any other connections.

# 5 Storage and transport

## 5.1 Storage conditions


Observe the following notes for storage:

- Store in the original packaging to ensure protection from shock.
- Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- ▶ Protect from direct sunlight to avoid unacceptably high surface temperatures.
- ► Store in a dry and dust-free place.
- ► Do not store outdoors.

Storage temperature→ 🖺 195

# 5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

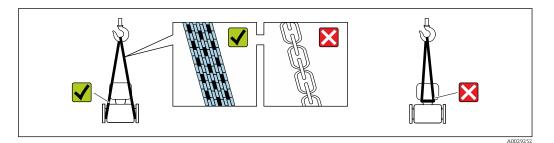

Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


## 5.2.1 Measuring devices without lifting lugs

## **WARNING**

# Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- Secure the measuring device against slipping or turning.
- Observe the weight specified on the packaging (stick-on label).

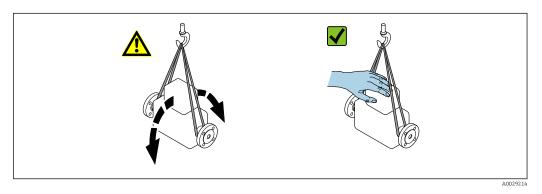

## 5.2.2 Measuring devices with lifting lugs

## **A**CAUTION

## Special transportation instructions for devices with lifting lugs

- Only use the lifting lugs fitted on the device or flanges to transport the device.
- The device must always be secured at two lifting lugs at least.

## 5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

## 5.3 Packaging disposal

All packaging materials are environmentally friendly and 100 % recyclable:


- Outer packaging of device
- Polymer stretch wrap that complies with EU Directive 2002/95/EC (RoHS)
- Packaging
  - Wooden crate treated in accordance with ISPM 15 standard, confirmed by IPPC logo
  - Cardboard box in accordance with European packaging guideline 94/62EC, recyclability confirmed by Resy symbol
- Carrying and securing materials
  - Disposable plastic pallet
  - Plastic straps
  - Plastic adhesive strips
- Filler material Paper pads

# 6 Installation

## 6.1 Installation conditions

## 6.1.1 Mounting position

## Mounting location

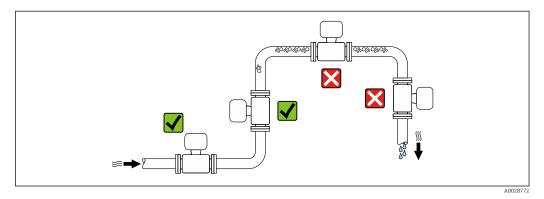


To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

## Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

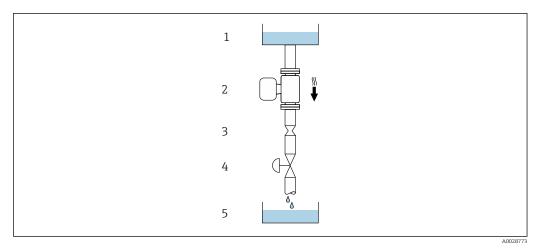

• 4 Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Batching tank

DN		Ø orifice plate,	pipe restriction
[mm]	[in]	[mm]	[in]
1	1/ <sub>24</sub>	0.8	0.03
2	1/ <sub>12</sub>	1.5	0.06
4	1/8	3.0	0.12

## Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

 
	Orientation		Recommendation
A	Vertical orientation		1)
В	Horizontal orientation, transmitter at top		<b>2</b> )
С	Horizontal orientation, transmitter at bottom	A0015590	<b>№</b> <sup>3)</sup>
D	Horizontal orientation, transmitter at side	A0015592	

- 1) This orientation is recommended to ensure self-draining.
- Applications with low process temperatures may decrease the ambient temperature. To maintain the 2) minimum ambient temperature for the transmitter, this orientation is recommended.
- 3) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.


If a sensor is installed horizontally with a curved measuring tube, match the position of the sensor to the fluid properties.

#### Inlet and outlet runs

No special precautions need to be taken for fittings which create turbulence, such as valves, elbows or T-pieces, as long as no cavitation occurs  $\rightarrow \cong 24$ .

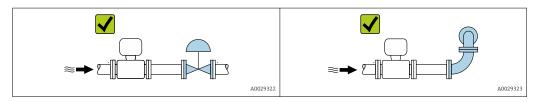

Installation dimensions

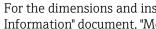 

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

## 6.1.2 Environmental and process requirements

#### Ambient temperature range

Measuring device	<ul> <li>-40 to +60 °C (-40 to +140 °F)</li> <li>Order code for "Test, certificate", option JP: -50 to +60 °C (-58 to +140 °F)</li> </ul>
Readability of the local	-20 to $+60$ °C ( $-4$ to $+140$ °F)
display	The readability of the display may be impaired at temperatures outside the temperature range.

P Dependency of ambient temperature on medium temperature → 🗎 195

► If operating outdoors:

Avoid direct sunlight, particularly in warm climatic regions.

You can order a weather protection cover from Endress+Hauser.  $\rightarrow \square$  177.

#### System pressure

 
It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas.

Cavitation is caused if the pressure drops below the vapor pressure:

- In liquids that have a low boiling point (e.g. hydrocarbons, solvents, liquefied gases)
- In suction lines
- Ensure the system pressure is sufficiently high to prevent cavitation and outgassing.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

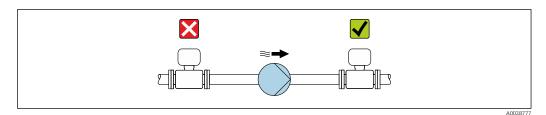


## Thermal insulation

In the case of some fluids, it is important to keep the heat radiated from the sensor to the transmitter to a low level. A wide range of materials can be used for the required insulation.

## NOTICE

#### Electronics overheating on account of thermal insulation!

- Recommended orientation: horizontal orientation, transmitter housing pointing downwards.
- Do not insulate the transmitter housing .
- Maximum permissible temperature at the lower end of the transmitter housing: 80 °C (176 °F)
- Thermal insulation with extended neck free: We recommend that you do not insulate the extended neck in order to ensure optimum dissipation of heat.

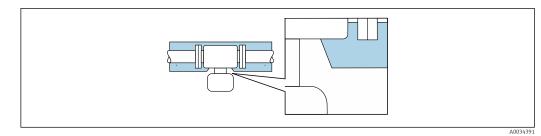

5 Thermal insulation with extended neck free

#### Heating

## NOTICE

#### Electronics can overheat due to elevated ambient temperature!

- Observe maximum permitted ambient temperature for the transmitter .
- Depending on the fluid temperature, take the device orientation requirements into account .

## NOTICE

#### Danger of overheating when heating

- ► Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F).
- Ensure that sufficient convection takes place at the transmitter neck.
- Ensure that a sufficiently large area of the transmitter neck remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.
- ► When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation. For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

## Heating options

If a fluid requires that no heat loss should occur at the sensor, users can avail of the following heating options:

- Electrical heating, e.g. with electric band heaters
- Via pipes carrying hot water or steam
- Via heating jackets

## Vibrations

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

## 6.1.3 Special mounting instructions

## Drainability

When the device is installed in a vertical position, the measuring tube can be drained completely and protected against deposit buildup if the properties of the measured liquid allow this. Furthermore, as only one measuring tube is used the flow is not impeded and the risk of product being retained in the measuring device is reduced to a minimum. The larger internal diameter of the measuring tube <sup>1)</sup> also reduces the risk of particles getting trapped in the measuring system. Due to the larger cross-section of the individual measuring tube, the tube is also generally less susceptible to clogging.

<sup>1)</sup> Compared with the double-tube design with a similar flow capacity and measuring tubes with a smaller internal diameter

#### Sanitary compatibility

- When installing in hygienic applications, please refer to the information in the "Certificates and approvals/hygienic compatibility" section → 
   <sup>(2)</sup> 206
  - In the case of measuring devices with the order code for "Housing", option B "Stainless, hygienic", to seal the connection compartment cover, screw it closed finger-tight and then tighten it by another 45° (corresponds to 15 Nm).

#### **Rupture disk**

Information that is relevant to the process:  $\rightarrow \square$  197.

#### **WARNING**

## Danger from medium escaping!

Medium escaping under pressure can cause injury or material damage.

- Take precautions to prevent danger to persons and damage if the rupture disk is actuated.
- Observe information on the rupture disk sticker.
- Make sure that the function and operation of the rupture disk is not impeded through the installation of the device.
- Do not remove or damage the rupture disk, drain connection and warning signs.


The position of the rupture disk is indicated by an affixed sticker. In versions without a drain connection (order option CU), the sticker is destroyed if the rupture disk is triggered. The disk can therefore be visually monitored.

To allow any escaping medium to drain in a controlled manner, a drain connection is available for the rupture disk integrated in the sensor: order code for "Sensor option", option CU "Drain connection for rupture disk". This connection is intended for a pipe connection with a  $\frac{1}{4}$  " NPT thread and sealed with a grip plug for protection. To guarantee the function of the rupture disk with a drain connection, the drain connection must be connected to the drain system in a hermetically tight manner.

The drain connection is firmly mounted in place by the manufacturer and may not be removed.

It is not possible to use the holder with a measuring device with a drain connection for a rupture disk: order code for "Sensor option", option CU "Drain connection for rupture disk"

It is not possible to use a heating jacket if the drain connection is used: order code for "Sensor option", option CU "Drain connection for rupture disk"

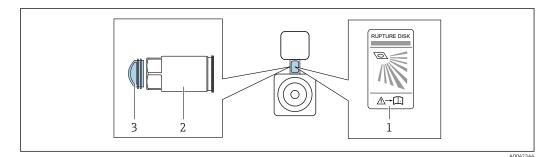


- 1 Rupture disk label
- 2 Drain connection for rupture disk with 1/4" NPT female thread and 17mm width across flats (AF): order code for "Sensor option", option CU, drain connection for rupture disk
- 3 Transportation guard

For information on the dimensions: see the "Mechanical construction" section of the "Technical Information" document

#### Sensor holder

The sensor holder is used to secure the device to a wall, tabletop or pipe (order code for "Accessory enclosed", option PR).

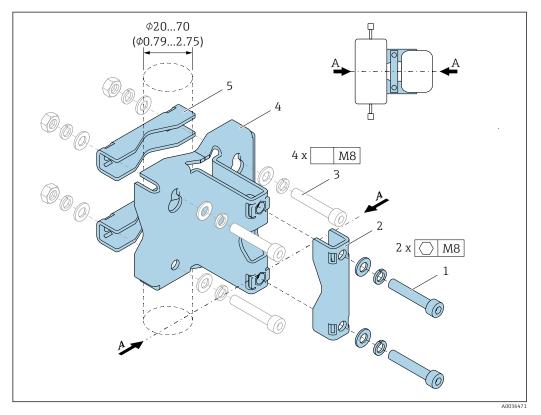

- 1 2 x Allen screw M8 x 50, washer and spring washer A4
- 2 1 x clamp (measuring device neck)
- *3 4 x securing screw for wall, tabletop or pipe mounting (not supplied)*
- 4 1 x base profile
- 5 2 x clamp (pipe mounting)
- A Measuring device central line

If the holder is used with a measuring device fitted with a rupture disk, it is important to ensure that the rupture disk in the neck is not covered over and that the cover of the rupture disk is not damaged.

Lubricate all threaded joints prior to mounting. The screws for wall, tabletop or pipe mounting are not supplied with the device and must be chosen to suit the individual installation position.

## **WARNING**

 
## Strain on pipes!

Excessive strain on an unsupported pipe can cause the pipe to break.

▶ Install the sensor in a pipe that is adequately supported.

The following mounting versions are recommended for the installation:

Use of the sensor holder.

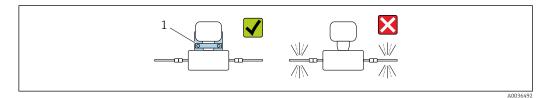

1 Sensor holder (order code for "Accessory enclosed", option PR)

#### Mounting on a wall

Screw the sensor holder to the wall with four screws. Two of the four holes to secure the holder are designed to hook into the screws.

#### Mounting on a table

Screw the sensor holder onto the tabletop with four screws.

#### Mounting on a pipe

Secure the sensor holder to the pipe with two clamps.


#### Zero point adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions  $\rightarrow \implies 191$ . Therefore, a zero point adjustment in the field is generally not required.

Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

#### Protective cover

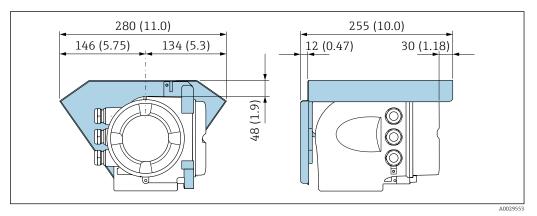

Engineering unit mm (in)

## 6.2 Mounting the measuring device

## 6.2.1 Required tools

#### For sensor

For flanges and other process connections: Corresponding mounting tools

## 6.2.2 Preparing the measuring device

1. Remove all remaining transport packaging.


- 2. Remove any protective covers or protective caps present from the sensor.
- 3. Remove stick-on label on the electronics compartment cover.

## 6.2.3 Mounting the measuring device

## **WARNING**


## Danger due to improper process sealing!

- Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- Ensure that the seals are clean and undamaged.
- Secure the seals correctly.
- **1.** Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the fluid.
- 2. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

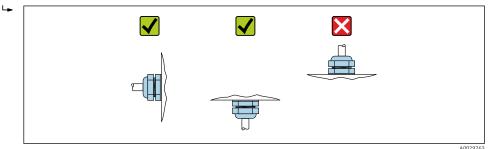

## 6.2.4 Turning the transmitter housing


To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

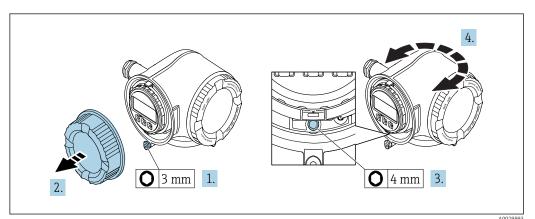

- 1. Depending on the device version: Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Release the fixing screw.
- 4. Turn the housing to the desired position.
- 5. Firmly tighten the securing screw.
- 6. Screw on the connection compartment cover.
- **7.** Depending on the device version: Attach the securing clamp of the connection compartment cover.

## 6.2.5 Turning the display module

The display module can be turned to optimize display readability and operability.

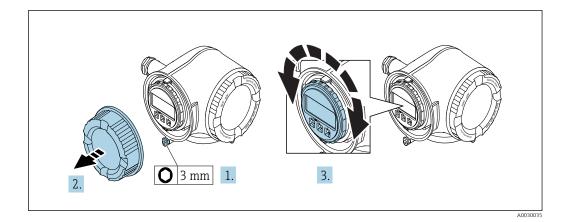

- **1.** Depending on the device version: Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- **3.** Turn the display module to the desired position: max.  $8 \times 45^{\circ}$  in each direction.
- 4. Screw on the connection compartment cover.
- **5.** Depending on the device version: Attach the securing clamp of the connection compartment cover.

# 6.3 Post-installation check

Is the device undamaged (visual inspection)?	
<ul> <li>Does the measuring device conform to the measuring point specifications?</li> <li>For example:</li> <li>Process temperature →  195</li> <li>Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document)</li> <li>Ambient temperature</li> <li>Measuring range</li> </ul>	
Has the correct orientation for the sensor been selected ? <ul> <li>According to sensor type</li> <li>According to medium temperature</li> <li>According to medium properties (outgassing, with entrained solids)</li> </ul>	
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping $\rightarrow \bigoplus 23$ ?	
Are the measuring point identification and labeling correct (visual inspection)?	
Is the device adequately protected from precipitation and direct sunlight?	
Are the securing screw and securing clamp tightened securely?	

# **Electrical connection**

## NOTICE

7

## The measuring device does not have an internal circuit breaker.

- ► For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.
- ► Although the measuring device is equipped with a fuse, additional overcurrent protection (maximum 10 A) should be integrated into the system installation.

# 7.1 Connection conditions

## 7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: Crimper for wire end ferrule
- For removing cables from terminal: Flat blade screwdriver  $\leq$  3 mm (0.12 in)

## 7.1.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

## **Electrical safety**

In accordance with applicable federal/national regulations.

## Protective ground cable

Cable  $\geq 2.08 \text{ mm}^2$  (14 AWG)

The grounding impedance must be less than  $1 \Omega$ .

## Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

## Power supply cable

Standard installation cable is sufficient.

## Signal cable

## FOUNDATION Fieldbus

Twisted, shielded two-wire cable.

For further information on planning and installing FOUNDATION Fieldbus networks see:

- Operating Instructions for "FOUNDATION Fieldbus Overview" (BA00013S)
- FOUNDATION Fieldbus Guideline
- IEC 61158-2 (MBP)

Current output 0/4 to 20 mA

Standard installation cable is sufficient.

Pulse/frequency/switch output

Standard installation cable is sufficient.

Relay output

Standard installation cable is sufficient.

*Current input 0/4 to 20 mA* 

Standard installation cable is sufficient.

Status input

Standard installation cable is sufficient.

## Cable diameter

- Cable glands supplied:
- M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
  Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to 2.5 mm<sup>2</sup> (24 to 12 AWG).

# Requirements for the connecting cable – Remote display and operating module DKX001

*Optionally available connecting cable* 

A cable is supplied depending on the order option

- Order code for measuring device: order code 030 for "Display; operation", option 0 or
- Order code for measuring device: order code 030 for "Display; operation", option M and
- Order code for DKX001: order code **040** for "Cable", option **A**, **B**, **D**, **E**

Standard cable	$2\times2\times0.34~mm^2$ (22 AWG) PVC cable with common shield (2 pairs, pair-stranded)
Flame resistance	According to DIN EN 60332-1-2
Oil-resistance	According to DIN EN 60811-2-1
Shielding	Tin-plated copper-braid, optical cover $\ge$ 85 %
Capacitance: core/shield	<200 pF/m
L/R	<24 μH/Ω
Available cable length	5 m (15 ft)/10 m (35 ft)/20 m (65 ft)/30 m (100 ft)
Operating temperature	When mounted in a fixed position: –50 to +105 $^\circ$ C (–58 to +221 $^\circ$ F); when cable can move freely: –25 to +105 $^\circ$ C (–13 to +221 $^\circ$ F)

Standard cable - customer-specific cable

No cable is supplied, and it must be provided by the customer (up to max. 300 m (1000 ft)) for the following order option: Order code for DKX001: Order code **040** for "Cable", option **1** "None, provided by customer, max 300 m"

A standard cable can be used as the connecting cable.

Standard cable	4 cores (2 pairs); pair-stranded with common shield
Shielding	Tin-plated copper-braid, optical cover $\geq$ 85 %
Capacitance: core/shield	Maximum 1000 nF for Zone 1, Class I, Division 1

L/R	Maximum 24 $\mu H/\Omega$ for Zone 1, Class I, Division 1
Cable length	Maximum 300 m (1000 ft), see the following table

Cross-section	Max. cable length for use in Non-hazardous area, Ex Zone 2, Class I, Division 2 Ex Zone 1, Class I, Division 1		
0.34 mm <sup>2</sup> (22 AWG)	80 m (270 ft)		
0.50 mm <sup>2</sup> (20 AWG)	120 m (400 ft)		
0.75 mm <sup>2</sup> (18 AWG)	180 m (600 ft)		
1.00 mm <sup>2</sup> (17 AWG)	240 m (800 ft)		
1.50 mm <sup>2</sup> (15 AWG)	300 m (1000 ft)		

## 7.1.3 Terminal assignment

## Transmitter: supply voltage, input/outputs

The terminal assignment of the inputs and outputs depends on the individual order version of the device. The device-specific terminal assignment is documented on an adhesive label in the terminal cover.

Supply voltage		Input/output 1		Input/output 2		Input/output 3	
1 (+)	2 (-)	26 (A)	27 (B)	24 (+)	25 (-)	22 (+)	23 (-)
		Device-specific terminal assignment: adhesive label in terminal cover.					

Terminal assignment of the remote display and operating module  $\rightarrow \square$  39.

## 7.1.4 Device plugs available

P Device plugs may not be used in hazardous areas!

## Order code for "Input; output 1", option SA "FOUNDATION Fieldbus"

Order code for	Cable entry/connection		
"Electrical connection"	2	3	
M, 3, 4, 5	7/8" connector	-	

## 7.1.5 Pin assignment of device plug

Pin		Assignment	Coding	Plug/socket
1	+	Signal +	А	Plug
2	-	Signal –		
3		Grounding		
4		Not assigned		

## 7.1.6 Shielding and grounding

Optimal electromagnetic compatibility (EMC) of the fieldbus system can be guaranteed only if the system components and, in particular, the lines are shielded and the shield forms as complete a cover as possible. A shield coverage of 90 % is ideal.

- **1.** To ensure optimal EMC protection, connect the shield to the reference ground as often as possible.
- 2. For reasons concerning explosion protection, it is recommended that grounding be dispensed with.

To comply with both requirements, there are basically three different types of shielding in the fieldbus system:

- Shielding at both ends
- Shielding at one end on the feed side with capacitance termination at the field device
- Shielding at one end on the feed side

Experience shows that the best results with regard to EMC are achieved in most cases in installations with one-sided shielding on the feed side (without capacitance termination at the field device). Appropriate measures with regard to input wiring must be taken to allow

unrestricted operation when EMC interference is present. These measures have been taken into account for this device. Operation in the event of disturbance variables as per NAMUR NE21 is thus guaranteed.

- 1. Observe national installation requirements and guidelines during installation.
- 2. Where there are large differences in potential between the individual grounding points,

connect only one point of the shielding directly to the reference ground.

3. In systems without potential equalization,


the cable shielding of fieldbus systems should be grounded on one side only, for example at the fieldbus supply unit or at safety barriers.

#### NOTICE

# In systems without potential matching, the multiple grounding of the cable shield causes mains frequency equalizing currents!

Damage to the bus cable shield.

- Only ground the bus cable shield to either the local ground or the protective ground at one end.
- Insulate the shield that is not connected.

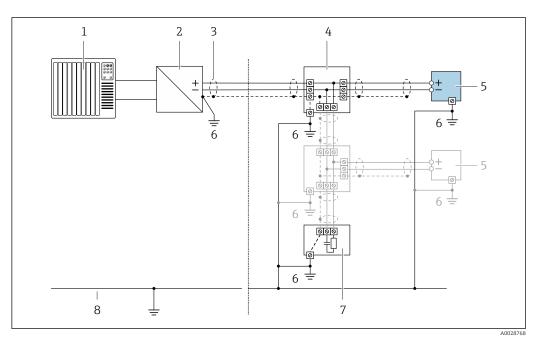

■ 7 Connection example for FOUNDATION Fieldbus

- 1 Control system (e.g. PLC)
- 2 Power conditioner (FOUNDATION Fieldbus)
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential equalization conductor

## 7.1.7 Preparing the measuring device

## NOTICE

#### Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

• Use suitable cable glands corresponding to the degree of protection.

1. Remove dummy plug if present.

- If the measuring device is supplied without cable glands:
   Provide suitable cable gland for corresponding connecting cable.
- If the measuring device is supplied with cable glands:
   Observe requirements for connecting cables → 
   <sup>(1)</sup> 31.


# 7.2 Connecting the measuring device

## NOTICE


## Limitation of electrical safety due to incorrect connection!

- ► Have electrical connection work carried out by appropriately trained specialists only.
- Observe applicable federal/national installation codes and regulations.
- Comply with local workplace safety regulations.
- ► Always connect the protective ground cable ⊕ before connecting additional cables.
- ► For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.


## 7.2.1 Connecting the transmitter

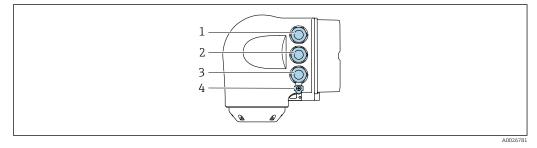


- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output or terminal connection for network connection via service interface (CDI-RJ45); optional: connection for external WLAN antenna or remote display and operating module DKX001
- 4 Protective earth (PE)

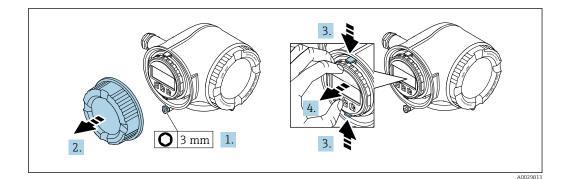

- **1.** Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Squeeze the tabs of the display module holder together.
- 4. Remove the display module holder.

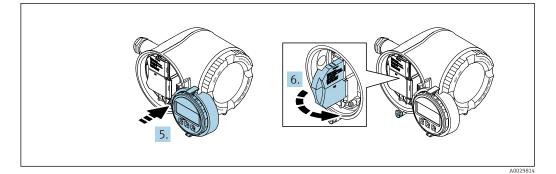


- 5. Attach the holder to the edge of the electronics compartment.
- 6. Open the terminal cover.

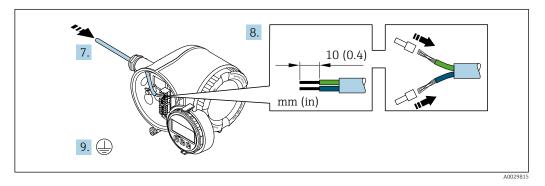

7. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.


8. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.

9. Connect the protective ground.

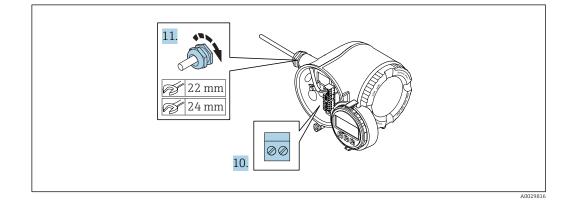

- 10. Connect the cable in accordance with the terminal assignment .
  - Signal cable terminal assignment: The device-specific terminal assignment is documented on an adhesive label in the terminal cover.
     Supply voltage terminal assignment: Adhesive label in the terminal cover or → 
     ⇒ 34.
- 11. Firmly tighten the cable glands.
  - ← This concludes the cable connection process.
- 12. Close the terminal cover.
- **13**. Fit the display module holder in the electronics compartment.
- 14. Screw on the connection compartment cover.
- **15.** Secure the securing clamp of the connection compartment cover.

#### Removing a cable

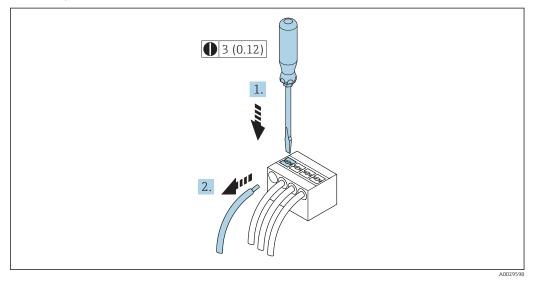

#### ■ 8 Engineering unit mm (in)


**1.** To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes

2. while simultaneously pulling the cable end out of the terminal.

#### 7.2.2 Connecting the remote display and operating module DKX001

The remote display and operating module DKX001 is available as an optional extra  $\rightarrow \cong 177$ .

- The remote display and operating module DKX001 is only available for the following housing version: order code for "Housing": option A "Aluminum, coated"
- The measuring device is always supplied with a dummy cover when the remote display and operating module DKX001 is ordered directly with the measuring device. Display or operation at the transmitter is not possible in this case.
- If ordered subsequently, the remote display and operating module DKX001 may not be connected at the same time as the existing measuring device display module. Only one display or operation unit may be connected to the transmitter at any one time.

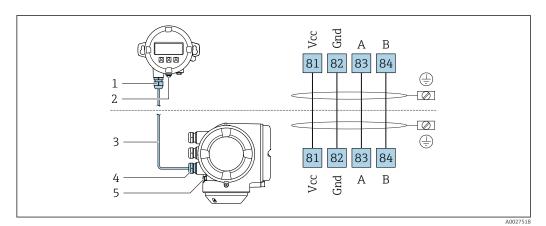

- 1 Remote display and operating module DKX001
- 2 Protective earth (PE)
- 3 Connecting cable
- 4 Measuring device
- 5 Protective earth (PE)

# 7.3 Ensuring potential equalization


### 7.3.1 Requirements

No special measures for potential equalization are required.

# 7.4 Special connection instructions

### 7.4.1 Connection examples


### **FOUNDATION Fieldbus**

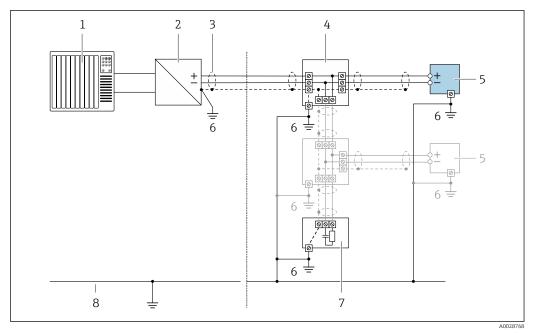

Connection example for FOUNDATION Fieldbus


- 1 Control system (e.g. PLC)
- 2 Power Conditioner (FOUNDATION Fieldbus)
- 3 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

### Current output 4-20 mA

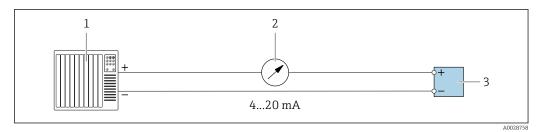


☑ 10 Connection example for 4-20 mA current output (active)

- 1 Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load
- 3 Transmitter

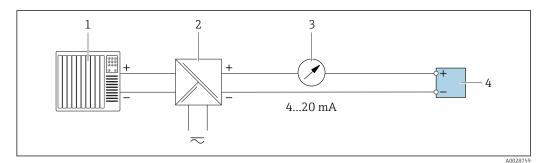

- 11 Connection example for 4-20 mA current output (passive)
- *1 Automation system with current input (e.g. PLC)*
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Analog display unit: observe maximum load
- 4 Transmitter


#### Pulse/frequency output

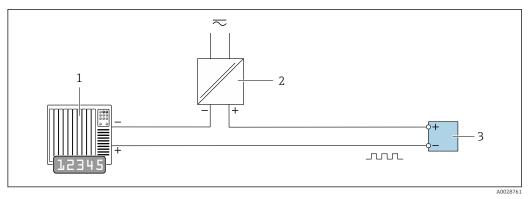

12 Connection example for pulse/frequency output (passive)


- 1 Automation system with pulse/frequency input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values  $\rightarrow \cong 185$

#### Switch output

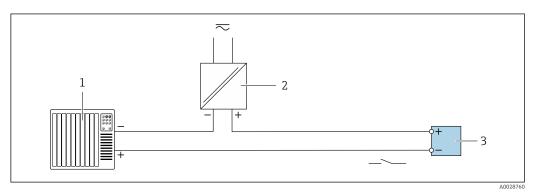

- 13 Connection example for switch output (passive)
- 1 Automation system with switch input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values  $\rightarrow \cong 185$


#### Relay output

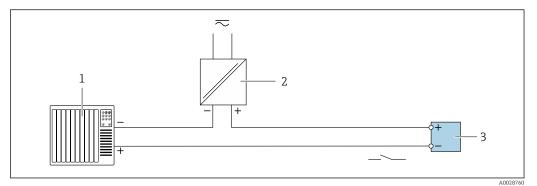

■ 14 Connection example for relay output (passive)

- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values  $\rightarrow \square 186$


#### **Current input**

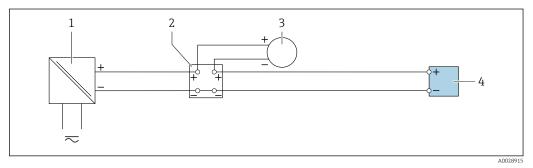

15 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 Terminal box
- 3 External measuring device (to read in pressure or temperature, for instance)
- 4 Transmitter

### Status input

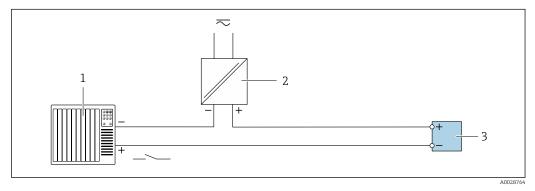

E 16 Connection example for status input

- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter


# 7.5 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

- 1. Check that the housing seals are clean and fitted correctly.
- 2. Dry, clean or replace the seals if necessary.
- 3. Tighten all housing screws and screw covers.
- 4. Firmly tighten the cable glands.

 To ensure that moisture does not enter the cable entry: Route the cable so that it loops down before the cable entry ("water trap").

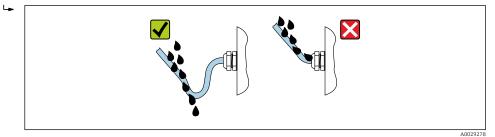


6. Insert dummy plugs into unused cable entries.

# 7.6 Post-connection check

Are cables or the device undamaged (visual inspection)?	
Do the cables used meet the requirements?	
Do the cables have adequate strain relief?	
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" $\rightarrow \bigoplus 43?$	
If supply voltage is present, do values appear on the display module?	

# 8 Operation options

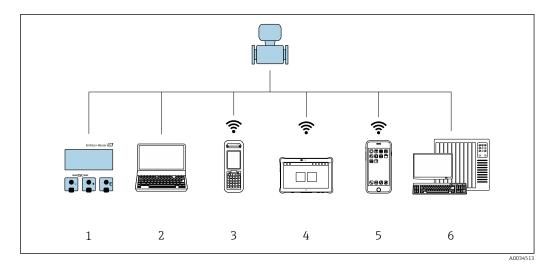

# 8.1 Overview of operation options

1 Local operation via display module

2 Computer with Web browser (e.g. Internet Explorer) or with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM)

3 Field Xpert SFX350 or SFX370

4 Field Xpert SMT70


5 Mobile handheld terminal

6 Control system (e.g. PLC)

# 8.2 Structure and function of the operating menu

### 8.2.1 Structure of the operating menu

For an overview of the operating menu for experts: "Description of Device Parameters" document supplied with the device  $\Rightarrow \cong 210$ 

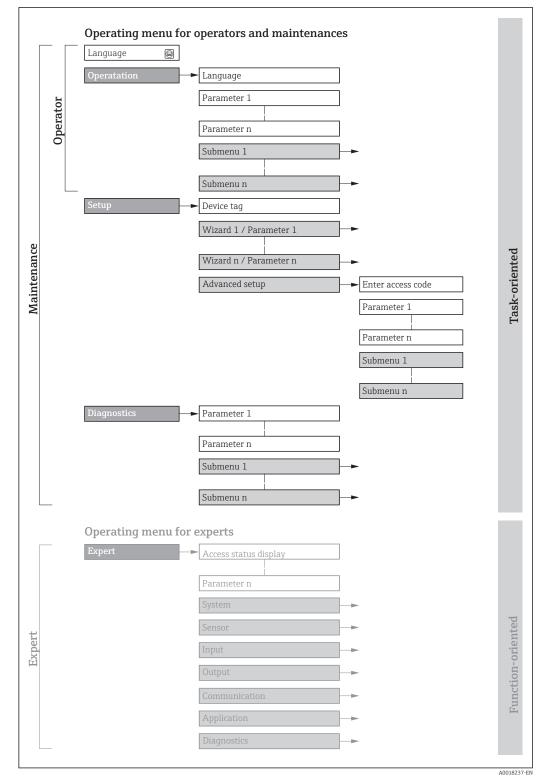

 $\blacksquare 17$  Schematic structure of the operating menu

### 8.2.2 Operating philosophy


The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

Menu	ı/parameter	User role and tasks	Content/meaning
Language	task-oriented	Role "Operator", "Maintenance" Tasks during operation: • Configuring the operational	<ul><li>Defining the operating language</li><li>Defining the Web server operating language</li><li>Resetting and controlling totalizers</li></ul>
Operation		display Reading measured values	<ul> <li>Configuring the operational display (e.g. display format, display contrast)</li> <li>Resetting and controlling totalizers</li> </ul>
Setup		<ul> <li>"Maintenance" role Commissioning:</li> <li>Configuration of the measurement</li> <li>Configuration of the inputs and outputs</li> <li>Configuration of the communication interface</li> </ul>	<ul> <li>Wizards for fast commissioning:</li> <li>Setting the system units</li> <li>Configuration of the communication interface</li> <li>Defining the medium</li> <li>Displaying the I/O/configuration</li> <li>Configuring the inputs</li> <li>Configuring the outputs</li> <li>Configuring the low flow cut off</li> <li>Configuring partial and empty pipe detection</li> <li>Advanced setup</li> <li>For more customized configuration of the measurement (adaptation to special measuring conditions)</li> <li>Configuring the WLAN settings</li> <li>Administration (define access code, reset measuring device)</li> </ul>
Diagnostics		<ul> <li>"Maintenance" role</li> <li>Fault elimination:</li> <li>Diagnostics and elimination of process and device errors</li> <li>Measured value simulation</li> </ul>	<ul> <li>Contains all parameters for error detection and analyzing process and device errors:</li> <li>Diagnostic list Contains up to 5 currently pending diagnostic messages.</li> <li>Event logbook Contains event messages that have occurred.</li> <li>Device information Contains information for identifying the device.</li> <li>Measured values Contains all current measured values.</li> <li>Data logging submenu with "Extended HistoROM" order option Storage and visualization of measured values</li> <li>Heartbeat The functionality of the device is checked on demand and the verification results are documented.</li> <li>Simulation Is used to simulate measured values or output values.</li> </ul>

Men	u/parameter	User role and tasks	Content/meaning
Expert	function-oriented	<ul> <li>Tasks that require detailed knowledge of the function of the device:</li> <li>Commissioning measurements under difficult conditions</li> <li>Optimal adaptation of the measurement to difficult conditions</li> <li>Detailed configuration of the communication interface</li> <li>Error diagnostics in difficult cases</li> </ul>	<ul> <li>Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device:</li> <li>System Contains all higher-order device parameters which do not concern the measurement or the communication interface.</li> <li>Sensor Configuration of the measurement.</li> <li>Output Configure the pulse/frequency/switch output.</li> <li>Input Configuration of the status input.</li> <li>Output Configuration of the analog current outputs as well as the pulse/frequency and switch output.</li> <li>Communication Configuration of the digital communication interface and the Web server.</li> <li>Submenus for function blocks.</li> <li>Application Configuration of the functions that go beyond the actual measurement (e.g. totalizer).</li> <li>Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.</li> </ul>

# 8.3 Access to the operating menu via the local display

### 8.3.1 Operational display

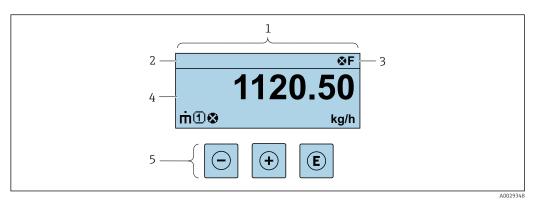

- 1 Operational display
- 2 Device tag
- 3 Status area
- 4 Display area for measured values (4-line)
- 5 Operating elements  $\rightarrow \square 53$

#### Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 🖺 136
  - F: Failure
  - C: Function check
  - S: Out of specification
  - M: Maintenance required
- Diagnostic behavior  $\rightarrow \square$  137
  - Alarm
  - M: Warning
- 🟦: Locking (the device is locked via the hardware )
- 🖘: Communication (communication via remote operation is active)

#### Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

Measured values

Symbol	Meaning
'n	Mass flow
Ú	<ul><li>Volume flow</li><li>Corrected volume flow</li></ul>
ρ	<ul><li>Density</li><li>Reference density</li></ul>
4	Temperature
Σ	Totalizer The measurement channel number indicates which of the three totalizers is displayed.
Ð	Status input

#### Measurement channel numbers


Symbol	Meaning
14	Measurement channel 1 to 4
The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. Totalizer 1 to 3).	

#### Diagnostic behavior

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable. For information on the symbols  $\rightarrow \square 137$ 


The number and display format of the measured values can be configured via the **Format display** parameter ( $\rightarrow \cong 100$ ).

### 8.3.2 Navigation view

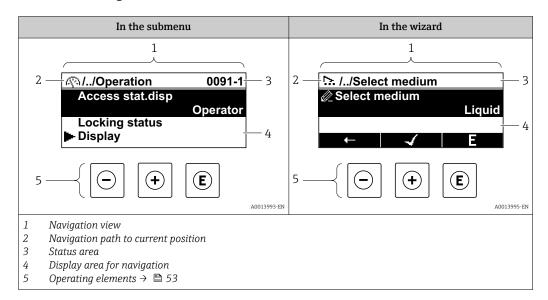

#### Navigation path

The navigation path - displayed at the top left in the navigation view - consists of the following elements:

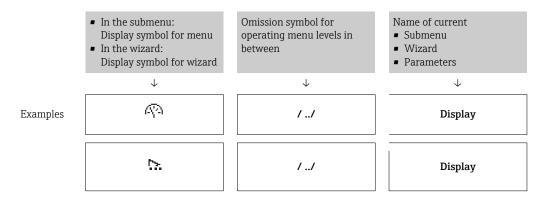


For more information about the icons in the menu, refer to the "Display area" section  $\rightarrow \cong 50$ 

#### Status area

 The following appears in the status area of the navigation view in the top right corner: • In the submenu

- The direct access code for the parameter you are navigating to (e.g. 0022-1)
- If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard
- If a diagnostic event is present, the diagnostic behavior and status signal

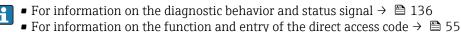

### Display area

#### Menus

Symbol	Meaning
Ŵ	Operation         Appears:         In the menu next to the "Operation" selection         At the left in the navigation path in the Operation menu
۶	Setup         Appears:         In the menu next to the "Setup" selection         At the left in the navigation path in the Setup menu
ų	Diagnostics         Appears:         In the menu next to the "Diagnostics" selection         At the left in the navigation path in the Diagnostics menu
-3 <sup>e</sup>	<ul> <li>Expert</li> <li>Appears:</li> <li>In the menu next to the "Expert" selection</li> <li>At the left in the navigation path in the Expert menu</li> </ul>

Submenus, wizards, parameters

Symbol	Meaning
•	Submenu
<u>⊳</u>	Wizard
Ø	Parameters within a wizard          Image: No display symbol exists for parameters in submenus.

#### Locking


Symbol	Meaning
ô	<ul><li>Parameter locked</li><li>When displayed in front of a parameter name, indicates that the parameter is locked.</li><li>By a user-specific access code</li><li>By the hardware write protection switch</li></ul>

### Wizard operation

Symbol	Meaning	
	Switches to the previous parameter.	
$\checkmark$	Confirms the parameter value and switches to the next parameter.	
E	Opens the editing view of the parameter.	

### 8.3.3 Editing view


#### Numeric editor

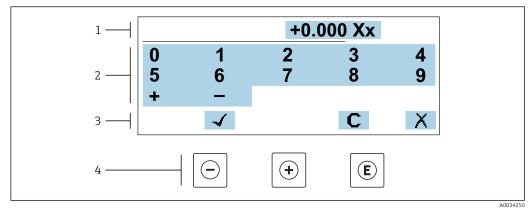

🖻 18 For entering values in parameters (e.g. limit values)

- 1 Entry display area
- 2 Input screen
- 3 Confirm, delete or reject entry
- 4 Operating elements

#### Text editor

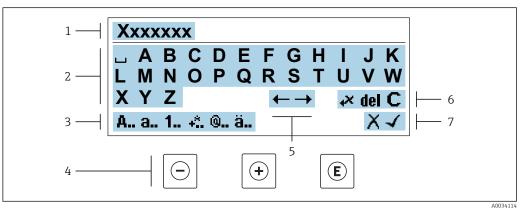

For entering text in parameters (e.g. tag name)

- 1 Entry display area
- 2 Current input screen
- 3 Change input screen
- 4 Operating elements
- 5 Move entry position
- 6 Delete entry
- 7 Reject or confirm entry

#### *Using the operating elements in the editing view*

Operating key(s)	Meaning
$\bigcirc$	Minus key Move the entry position to the left.
+	<b>Plus key</b> Move the entry position to the right.

Operating key(s)	Meaning
E	<ul><li>Enter key</li><li>Press the key briefly: confirm your selection.</li><li>Press the key for 2 s: confirm the entry.</li></ul>
-++	Escape key combination (press keys simultaneously) Close the editing view without accepting the changes.

#### Input screens

Symbol	Meaning
A	Upper case
а	Lower case
1	Numbers
+*	Punctuation marks and special characters: = + – * / <sup>2</sup> <sup>3</sup> <sup>1</sup> / <sub>4</sub> <sup>1</sup> / <sub>2</sub> <sup>3</sup> / <sub>4</sub> ( ) [ ] < > { }
0	Punctuation marks and special characters: ' "`^. , ; : ? ! % µ ° € \$ £ ¥ § @ # / \ I ~ & _
ä	Umlauts and accents

### Controlling data entries

Symbol	Meaning
←→	Move entry position
X	Reject entry
4	Confirm entry
×	Delete character immediately to the left of the entry position
del	Delete character immediately to the right of the entry position
С	Clear all the characters entered

### 8.3.4 Operating elements

Operating key(s)	Meaning
	Minus key In a menu, submenu
	Moves the selection bar upwards in a picklist.
$\Box$	With a Wizard Confirms the parameter value and goes to the previous parameter.
	With a text and numeric editor Move the entry position to the left.
	Plus key
	<i>In a menu, submenu</i> Moves the selection bar downwards in a picklist.
(+)	<i>With a Wizard</i> Confirms the parameter value and goes to the next parameter.
	With a text and numeric editor Move the entry position to the right.
	Enter key
	For operational display Pressing the key briefly opens the operating menu.
E	<ul> <li>In a menu, submenu</li> <li>Pressing the key briefly:</li> <li>Opens the selected menu, submenu or parameter.</li> <li>Starts the wizard.</li> <li>If help text is open, closes the help text of the parameter.</li> <li>Pressing the key for 2 s for parameter:</li> </ul>
	If present, opens the help text for the function of the parameter.
	With a Wizard Opens the editing view of the parameter.
	<ul><li>With a text and numeric editor</li><li>Press the key briefly: confirm your selection.</li><li>Press the key for 2 s: confirm the entry.</li></ul>
	Escape key combination (press keys simultaneously)
(□+++)	<ul> <li>In a menu, submenu</li> <li>Pressing the key briefly: <ul> <li>Exits the current menu level and takes you to the next higher level.</li> <li>If help text is open, closes the help text of the parameter.</li> </ul> </li> <li>Pressing the key for 2 s returns you to the operational display ("home position").</li> </ul>
	<i>With a Wizard</i> Exits the wizard and takes you to the next higher level.
	With a text and numeric editor Close the editing view without accepting the changes.
	Minus/Enter key combination (press the keys simultaneously)
—+E	<ul> <li>If the keypad lock is active: Press the key for 3 s: deactivate the keypad lock.</li> <li>If the keypad lock is not active: Press the key for 3 s: the context menu opens along with the option for activating the keypad lock.</li> </ul>
L	1

### 8.3.5 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Data backup
- Simulation

#### Calling up and closing the context menu

The user is in the operational display.

- **1.** Press the  $\Box$  and  $\blacksquare$  keys for longer than 3 seconds.
  - └ The context menu opens.

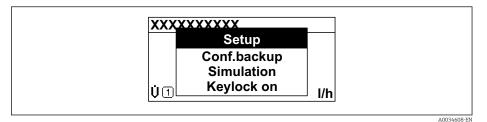

**2.** Press  $\Box$  +  $\pm$  simultaneously.

└ The context menu is closed and the operational display appears.

#### Calling up the menu via the context menu


- 1. Open the context menu.
- 2. Press  $\pm$  to navigate to the desired menu.
- 3. Press 🗉 to confirm the selection.
  - └ The selected menu opens.

### 8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

For an explanation of the navigation view with symbols and operating elements  $\rightarrow \cong 49$ 


Example: Setting the number of displayed measured values to "2 values"

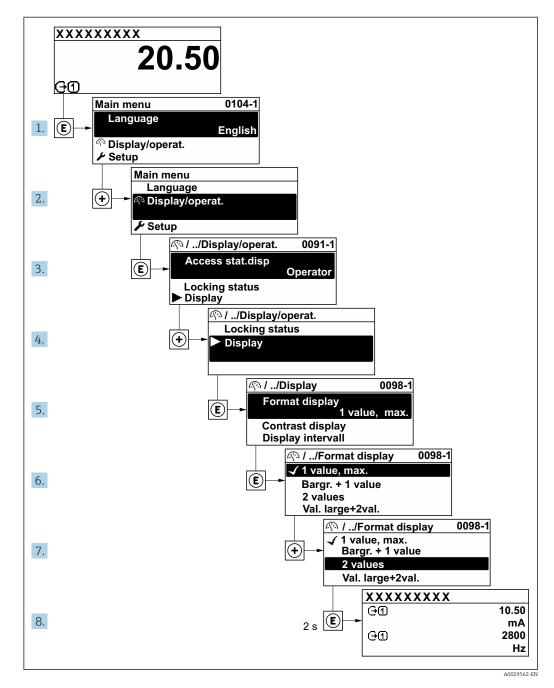

### 8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

**Navigation path** Expert  $\rightarrow$  Direct access The direct access code consists of a 5-digit number (at maximum) and the channel number, which identifies the channel of a process variable: e.g. 00914-2. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

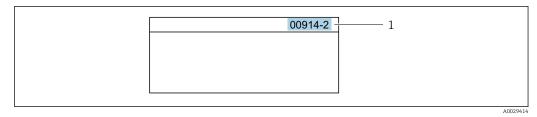

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered. Example: Enter "914" instead of "00914"
- If no channel number is entered, channel 1 is accessed automatically. Example: Enter 00914 → Assign process variable parameter
- If a different channel is accessed: Enter the direct access code with the corresponding channel number.

Example: Enter  $00914\text{-}2 \rightarrow Assign \ process \ variable \ parameter$ 

For the direct access codes of the individual parameters, see the "Description of Device Parameters" document for the device

### 8.3.8 Calling up help text

 
Help text is available for some parameters and can be called up from the navigation view. The help text provides a brief explanation of the parameter function and thereby supports swift and safe commissioning.

#### Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

1. Press E for 2 s.

← The help text for the selected parameter opens.

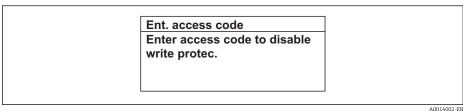

20 Example: Help text for parameter "Enter access code"

- **2.** Press + + simultaneously.
  - └ The help text is closed.

### 8.3.9 Changing the parameters

Parameters can be changed via the numeric editor or text editor.

- Numeric editor: Change values in a parameter, e.g. specifications for limit values.
- Text editor: Enter text in a parameter, e.g. tag name.

A message is displayed if the value entered is outside the permitted value range.

Ent. access code
Invalid or out of range input
value
Min:0
Max:9999

For a description of the editing view - consisting of the text editor and numeric editor - with symbols → 🗎 51, for a description of the operating elements → 🗎 53

#### 8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access  $\rightarrow \cong 119$ .

#### Defining access authorization for user roles

An access code is not yet defined when the device is delivered from the factory. Access authorization (read and write access) to the device is not restricted and corresponds to the "Maintenance" user role.

- ► Define the access code.
  - └ The "Operator" user role is redefined in addition to the "Maintenance" user role. Access authorization differs for the two user roles.

Access authorization to parameters: "Maintenance" user role

Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	V	V
After an access code has been defined.	V	✓ <sup>1)</sup>

1) The user only has write access after entering the access code.

Access authorization to parameters: "Operator" user role

Access code status	Read access	Write access	
After an access code has been defined.	~	1)	

 Despite the defined access code, certain parameters can always be modified and thus are excepted from the write protection, as they do not affect the measurement. Refer to the "Write protection via access code" section

The user role with which the user is currently logged on is indicated by the **Access status** parameter. Navigation path: Operation → Access status

### 8.3.11 Disabling write protection via access code

If the @-symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using local operation  $\Rightarrow @$  119.

Parameter write protection via local operation can be disabled by entering the user-specific access code in the **Enter access code** parameter ( $\rightarrow \square 105$ ) via the respective access option.

1. After you press E, the input prompt for the access code appears.

2. Enter the access code.

→ The @-symbol in front of the parameters disappears; all previously writeprotected parameters are now re-enabled.

### 8.3.12 Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.

#### Switching on the keypad lock

The keypad lock is switched on automatically:

- If the device has not been operated via the display for > 1 minute.
- Each time the device is restarted.

#### To activate the keylock manually:

1. The device is in the measured value display.

- Press the  $\boxdot$  and  $\blacksquare$  keys for 3 seconds.
- 2. In the context menu select the **Keylock on** option.
  - └ The keypad lock is switched on.

If the user attempts to access the operating menu while the keypad lock is active, the **Keylock on** message appears.

#### Switching off the keypad lock

- The keypad lock is switched on.
  - Press the  $\Box$  and  $\blacksquare$  keys for 3 seconds.
  - └ The keypad lock is switched off.

### 8.4 Access to the operating menu via the Web browser

#### 8.4.1 Function range

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or via a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

For additional information on the Web server, refer to the Special Documentation for the device  $\rightarrow \cong 211$ 

#### 8.4.2 Prerequisites

### Computer hardware

Hardware	Interface	
	CDI-RJ45	WLAN
Interface	The computer must have an RJ45 interface.	The operating unit must have a WLAN interface.
Connection	Standard Ethernet cable with RJ45 connector.	Connection via Wireless LAN.
Screen	Recommended size: ≥12" (depends on th	ne screen resolution)

#### Computer software

Software	Interface	
	CDI-RJ45	WLAN
Recommended operating systems	<ul> <li>Microsoft Windows 7 or higher.</li> <li>Mobile operating systems: <ul> <li>iOS</li> <li>Android</li> </ul> </li> <li>Microsoft Windows XP is supported</li> </ul>	
Web browsers supported	<ul> <li>Microsoft Internet Explorer 8 or higher</li> <li>Microsoft Edge</li> <li>Mozilla Firefox</li> <li>Google Chrome</li> <li>Safari</li> </ul>	

#### Computer settings

Settings	Interface	
	CDI-RJ45	WLAN
User rights	Appropriate user rights (e.g. administra settings are necessary (for adjusting th	ator rights) for TCP/IP and proxy server e IP address, subnet mask etc.).
Proxy server settings of the Web browser	The Web browser setting <i>Use a Proxy S</i> <b>deselected</b> .	erver for Your LAN must be
JavaScript	JavaScript must be enabled.	
	*	c.html in the address line of the Web nplified version of the operating menu er.
		version: To enable correct data display, he) of the Web browser under <b>Internet</b>
Network connections	Only the active network connections to	the measuring device should be used.
	Switch off all other network connections such as WLAN.	Switch off all other network connections.



In the event of connection problems:  $\rightarrow \square 134$ 

#### Measuring device: Via CDI-RJ45 service interface

Device	CDI-RJ45 service interface
Measuring device	The measuring device has an RJ45 interface.
Web server	<ul><li>Web server must be enabled; factory setting: ON</li><li>I For information on enabling the Web server → </li><li>64</li></ul>

#### *Measuring device: via WLAN interface*

Device	WLAN interface
Measuring device	<ul><li>The measuring device has a WLAN antenna:</li><li>Transmitter with integrated WLAN antenna</li><li>Transmitter with external WLAN antenna</li></ul>
Web server	<ul><li>Web server and WLAN must be enabled; factory setting: ON</li><li>I For information on enabling the Web server → </li><li>64</li></ul>

### 8.4.3 Establishing a connection

#### Via service interface (CDI-RJ45)

Preparing the measuring device

- Depending on the housing version: Release the securing clamp or securing screw of the housing cover.
- 2. Depending on the housing version:

Unscrew or open the housing cover.

**3.** The location of the connection socket depends on the measuring device and the communication protocol:

Connect the computer to the RJ45 connector via the standard Ethernet connecting cable .

#### Configuring the Internet protocol of the computer

The following information refers to the default Ethernet settings of the device.

IP address of the device: 192.168.1.212 (factory setting)

- 1. Switch on the measuring device.
- **2.** Connect to the computer using a cable  $\rightarrow \triangleq 65$ .
- **3.** If a 2nd network card is not used, close all the applications on the notebook.
  - ← Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.
- 4. Close any open Internet browsers.
- 5. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

IP address	192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 $\rightarrow$ e.g. 192.168.1.213
Subnet mask	255.255.255.0
Default gateway	192.168.1.212 or leave cells empty

#### Via WLAN interface

Configuring the Internet protocol of the mobile terminal

NOTICE

- If the WLAN connection is lost during the configuration, settings made may be lost.
- Make sure that the WLAN connection is not disconnected while configuring the device.

#### NOTICE

In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same mobile terminal. This could cause a network conflict.

- Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- ► If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

• Enable WLAN reception on the mobile terminal.

Establishing a connection from the mobile terminal to the measuring device

- 1. In the WLAN settings of the mobile terminal:
  - Select the measuring device using the SSID (e.g. EH\_Promass\_300\_A802000).
- 2. If necessary, select the WPA2 encryption method.
- **3.** Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).
  - LED on display module flashes: it is now possible to operate the measuring device with the Web browser, FieldCare or DeviceCare.

The serial number can be found on the nameplate.

To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

#### Disconnecting


 After configuring the device: Terminate the WLAN connection between the operating unit and measuring device.

#### Starting the Web browser

1. Start the Web browser on the computer.

# 2. Enter the IP address of the Web server in the address line of the Web browser: 192.168.1.212

└ The login page appears.

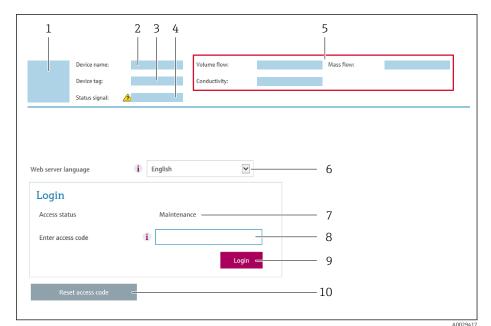

- 1 Picture of device
- 2 Device name
- 3 Device tag
- 4 Status signal
- 5 Current measured values6 Operating language
- 7 User role
- 8 Access code
- 9 Login
- 10 Reset access code ( $\rightarrow \square 115$ )

If a login page does not appear, or if the page is incomplete  $\rightarrow \square 134$ 

### 8.4.4 Logging on

**1.** Select the preferred operating language for the Web browser.

- 2. Enter the user-specific access code.
- 3. Press **OK** to confirm your entry.

Access code 0000 (factory setting); can be changed by customer
--

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

### 8.4.5 User interface



- 1 Function row
- 2 Local display language
- 3 Navigation area

#### Header

The following information appears in the header:

- Device name
- Device tag
- Device status with status signal  $\rightarrow \cong 139$
- Current measured values

#### **Function** row

Functions	Meaning	
Measured values	Displays the measured values of the measuring device	
Menu	<ul> <li>Access to the operating menu from the measuring device</li> <li>The structure of the operating menu is the same as for the local display</li> <li>For detailed information on the structure of the operating menu, see the Operating Instructions for the measuring device</li> </ul>	
Device status	Displays the diagnostic messages currently pending, listed in order of priority	
Data management	<ul> <li>Data exchange between PC and measuring device:</li> <li>Device configuration: <ul> <li>Load settings from the device</li> <li>(XML format, save configuration)</li> </ul> </li> <li>Save settings to the device</li> <li>(XML format, restore configuration)</li> </ul> <li>Logbook - Export Event logbook (.csv file)</li> <li>Documents - Export documents: <ul> <li>Export backup data record</li> <li>(.csv file, create documentation of the measuring point configuration)</li> </ul> </li> <li>Verification report <ul> <li>(PDF file, only available with the "Heartbeat Verification" application package)</li> </ul> </li> <li>File for system integration - If using fieldbuses, upload device drivers for system integration from the measuring device: <ul> <li>FOUNDATION Fieldbus: DD file</li> <li>Firmware update - Flashing a firmware version</li> </ul> </li>	
Network configuration	Configuration and checking of all the parameters required for establishing the connection to the measuring device: <ul> <li>Network settings (e.g. IP address, MAC address)</li> <li>Device information (e.g. serial number, firmware version)</li> </ul>	
Logout	End the operation and call up the login page	

#### Navigation area

If a function is selected in the function bar, the submenus of the function open in the navigation area. The user can now navigate through the menu structure.

#### Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

#### 8.4.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

#### Navigation

"Expert" menu  $\rightarrow$  Communication  $\rightarrow$  Web server

#### Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Web server functionality	Switch the Web server on and off.	<ul><li>Off</li><li>HTML Off</li><li>On</li></ul>	On

#### Function scope of the "Web server functionality" parameter

Option	Description
Off	<ul><li>The web server is completely disabled.</li><li>Port 80 is locked.</li></ul>
On	<ul> <li>The complete functionality of the web server is available.</li> <li>JavaScript is used.</li> <li>The password is transferred in an encrypted state.</li> <li>Any change to the password is also transferred in an encrypted state.</li> </ul>

#### Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via local display
- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool

### 8.4.7 Logging out

Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.

1. Select the **Logout** entry in the function row.

- ← The home page with the Login box appears.
- 2. Close the Web browser.
- **3.** If no longer needed: Reset modified properties of the Internet protocol (TCP/IP)  $\rightarrow \bigoplus 60$ .


### 8.5 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

### 8.5.1 Connecting the operating tool

#### Via FOUNDATION Fieldbus network

This communication interface is available in device versions with FOUNDATION Fieldbus.

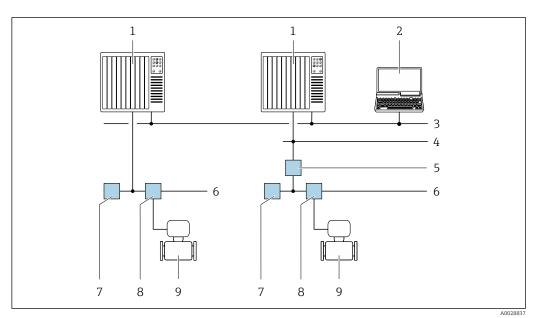

21 Options for remote operation via FOUNDATION Fieldbus network

- 1 Automation system
- 2 Computer with FOUNDATION Fieldbus network card
- 3 Industry network
- 4 High Speed Ethernet FF-HSE network
- 5 Segment coupler FF-HSE/FF-H1
- 6 FOUNDATION Fieldbus FF-H1 network
- 7 Power supply FF-H1 network
- 8 T-box
- 9 Measuring device

#### Service interface


Via service interface (CDI-RJ45)

A point-to-point connection can be established to configure the device onsite. With the housing open, the connection is established directly via the service interface (CDI-RJ45) of the device.



An adapter for RJ45 and the M12 connector is optionally available: Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 connector mounted in the cable entry. Therefore the connection to the service interface can be established via an M12 connector without opening the device.

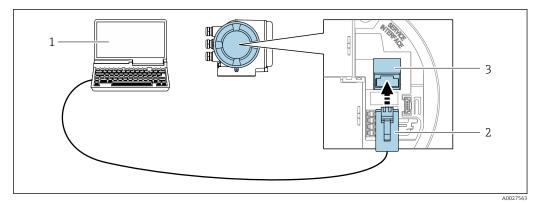


🖸 22 Connection via service interface (CDI-RJ45)

- 1 Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 2 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

#### Via WLAN interface

The optional WLAN interface is available on the following device version: Order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN"

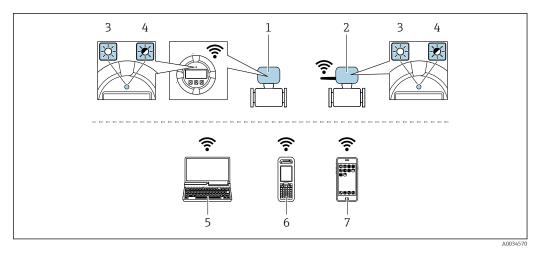

- 1 Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- LED flashing: WLAN connection established between operating unit and measuring device 4 5 Computer with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for

accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare) 6 Mobile handheld terminal with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft

- Edge) for accessing the integrated device Web server or operating tool (e.g. FieldCare, DeviceCare) 7
- Smart phone or tablet (e.g. Field Xpert SMT70)

Function	WLAN: IEEE 802.11 b/g (2.4 GHz)
Encryption	WPA2-PSK AES-128 (in accordance with IEEE 802.11i)
Configurable WLAN channels	1 to 11
Degree of protection	IP67
Available antennas	<ul> <li>Internal antenna</li> <li>External antenna (optional) In the event of poor transmission/reception conditions at the place of installation.</li> <li>Only one antenna active in each case!</li> </ul>

Range	<ul> <li>Internal antenna: typically 10 m (32 ft)</li> <li>External antenna: typically 50 m (164 ft)</li> </ul>
Materials (external antenna)	<ul> <li>Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel- plated brass</li> <li>Adapter: Stainless steel and nickel-plated brass</li> <li>Cable: Polyethylene</li> <li>Connector: Nickel-plated brass</li> <li>Angle bracket: Stainless steel</li> </ul>

Configuring the Internet protocol of the mobile terminal

### NOTICE

- If the WLAN connection is lost during the configuration, settings made may be lost.
- Make sure that the WLAN connection is not disconnected while configuring the device.

### NOTICE

In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same mobile terminal. This could cause a network conflict.

- Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- ► If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

#### Preparing the mobile terminal

• Enable WLAN reception on the mobile terminal.

Establishing a connection from the mobile terminal to the measuring device

1. In the WLAN settings of the mobile terminal:

Select the measuring device using the SSID (e.g. EH\_Promass\_300\_A802000).

- 2. If necessary, select the WPA2 encryption method.
- 3. Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).
  - └ LED on display module flashes: it is now possible to operate the measuring device with the Web browser, FieldCare or DeviceCare.

The serial number can be found on the nameplate.

To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

#### Disconnecting

 After configuring the device: Terminate the WLAN connection between the operating unit and measuring device.

### 8.5.2 Field Xpert SFX350, SFX370

#### **Function** range

Field Xpert SFX350 and Field Xpert SFX370 are mobile computers for commissioning and maintenance. They enable efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the **non-hazardous area** (SFX350, SFX370) and **hazardous area** (SFX370).

For details, see Operating Instructions BA01202S

#### Source for device description files

See information  $\rightarrow \square 71$ 

### 8.5.3 FieldCare

#### Function scope

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

#### Access is via:

- CDI-RJ45 service interface  $\rightarrow \cong 65$
- WLAN interface  $\rightarrow \cong 66$

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook

For additional information about FieldCare, see Operating Instructions BA00027S and BA00059S


#### Source for device description files

See information  $\rightarrow \square 71$ 

#### Establishing a connection

For additional information, see Operating Instructions BA00027S and BA00059S

#### User interface

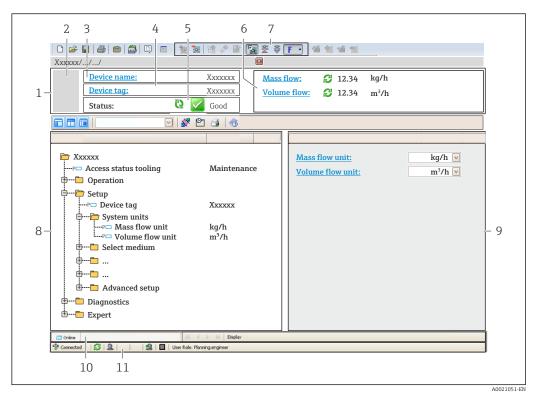

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Device tag
- 5 Status area with status signal  $\rightarrow \square$  139
- 6 Display area for current measured values
- 7 Edit toolbar with additional functions such as save/restore, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

### 8.5.4 DeviceCare

#### **Function scope**

Tool to connect and configure Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.

For details, see Innovation Brochure IN01047S

#### Source for device description files

See information  $\rightarrow \square 71$ 

### 8.5.5 AMS Device Manager

#### Function scope

Program from Emerson Process Management for operating and configuring measuring devices via FOUNDATION Fieldbus H1 protocol.

#### Source for device description files

See data  $\rightarrow \blacksquare 71$ 

### 8.5.6 Field Communicator 475

#### Function scope

Industrial handheld terminal from Emerson Process Management for remote configuration and measured value display via FOUNDATION Fieldbus H1 protocol.

### Source for device description files

See data  $\rightarrow \blacksquare 71$ 

# 9 System integration

# 9.1 Overview of device description files

### 9.1.1 Current version data for the device

Firmware version	01.00.zz	<ul> <li>On the title page of the Operating instructions</li> <li>On the transmitter nameplate</li> <li>Firmware version         Diagnostics → Device information → Firmware version     </li> </ul>
Release date of firmware version	02.2017	
Manufacturer ID	0x452B48 (hex)	Manufacturer ID Diagnostics → Device information → Manufacturer ID
Device type ID	0x103B (hex)	Device type Diagnostics $\rightarrow$ Device information $\rightarrow$ Device type
Device revision	1	<ul> <li>On the transmitter nameplate</li> <li>Device revision</li> <li>Diagnostics → Device information → Device revision</li> </ul>
DD revision	Information and files under: • www.endress.com • www.fieldbus.org	
CFF revision		

For an overview of the different firmware versions for the device  $\rightarrow \square 173$ 

## 9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via FOUNDATION Fieldbus	Sources for obtaining device descriptions
FieldCare	<ul> <li>www.endress.com → Download Area</li> <li>CD-ROM (contact Endress+Hauser)</li> <li>DVD (contact Endress+Hauser)</li> </ul>
DeviceCare	<ul> <li>www.endress.com → Download Area</li> <li>CD-ROM (contact Endress+Hauser)</li> <li>DVD (contact Endress+Hauser)</li> </ul>
<ul><li>Field Xpert SFX350</li><li>Field Xpert SFX370</li></ul>	Use update function of handheld terminal
AMS Device Manager (Emerson Process Management)	www.endress.com → Download Area
Field Communicator 475 (Emerson Process Management)	Use update function of handheld terminal

# 9.2 Cyclic data transmission

Cyclic data transmission when using the device master file (GSD).

### 9.2.1 Block model

The block model shows which input and output data the measuring device makes available for cyclic data exchange. Cyclic data exchange takes place with a FOUNDATION Fieldbus master (Class 1), e.g. a control system etc.

Display text (xxxx = serial number)	Base index	Description
RESOURCE_ xxxxxxxxx	400	Resource block
SETUP_ xxxxxxxxx	600	"Setup" Transducer block
TRDDISP_ xxxxxxxxx	800	"Display" Transducer block
TRDHROM_ xxxxxxxxx	1000	"HistoROM" Transducer block
TRDDIAG_ xxxxxxxxx	1200	"Diagnostic" Transducer block
EXPERT_CONFIG_xxxxxxxxxx	1400	"Expert configuration" Transducer block
SERVICE_SENSOR_xxxxxxxxxx	1600	"Service sensor" Transducer block
TRDTIC_xxxxxxxxx	1800	"Totalizer" Transducer block
TRDHBT_ xxxxxxxxx	2000	Transducer block "Heartbeat results"
ANALOG_INPUT_1_xxxxxxxxxx	3400	Analog Input function block 1 (AI)
ANALOG_INPUT_2_xxxxxxxxxx	3600	Analog Input function block 2 (AI)
ANALOG_INPUT_3_xxxxxxxxxx	3800	Analog Input function block 3 (AI)
ANALOG_INPUT_4_xxxxxxxxxx	4000	Analog Input function block 4 (AI)
ANALOG_INPUT_5_xxxxxxxxxx	4200	Analog Input function block 5 (AI)
ANALOG_INPUT_6_xxxxxxxxxx	4400	Analog Input function block 6 (AI)
ANALOG_INPUT_7_xxxxxxxxxx	4600	Analog Input function block 7 (AI)
ANALOG_INPUT_8_xxxxxxxxxx	4800	Analog Input function block 8 (AI)
MAO_ xxxxxxxxx	5000	Multiple Analog Output block (MAO)
DIGITAL_INPUT_1_ xxxxxxxxx	5200	Digital Input function block 1 (DI)
DIGITAL_INPUT_2_ xxxxxxxxx	5400	Digital Input function block 2 (DI)
MDO_ xxxxxxxxx	5600	Multiple Digital Output block (MDO)
PID_ xxxxxxxxx	5800	PID function block (PID)
INTEGRATOR_xxxxxxxxx	6000	Integrator function block (INTG)

### 9.2.2 Description of the modules

The input value of a module/function block is defined via the CHANNEL parameter.

### AI module (Analog Input)

Eight Analog Input blocks are available.

CHANNEL	Measured variable
0	Uninitialized (factory setting)
7	Temperature
9	Volume flow
10	Concentration <sup>1)</sup>
11	Mass flow
13	Corrected volume flow
14	Density
15	Reference density
16	Totalizer 1
17	Totalizer 2
18	Totalizer 3
33	Oscillation frequency <sup>1)</sup>

CHANNEL	Measured variable
43	Frequency fluctuation <sup>1)</sup>
51	Carrier pipe temperature <sup>1)</sup>
57	Carrier mass flow <sup>1)</sup>
58	Target mass flow <sup>1)</sup>
63	Oscillation damping <sup>1)</sup>
65	Electronic temperature
66	Tube damping fluctuation <sup>1)</sup>
68	Exciter current <sup>1)</sup>
81	HBSI <sup>1)</sup>
99	Current input 1 <sup>1)</sup>

1) Visible depending on the order options or device settings

#### MAO module (Multiple Analog Output)

Channel	Description
121	Channel_0

#### Structure

Channel_0							
Value 1	Value 2	Value 3	Value 4	Value 5	Value 6	Value 7	Value 8

Values	Measured variable
Value 1	External pressure <sup>1)</sup>
Value 2	External temperature <sup>1)</sup>
Value 3	External reference density <sup>1)</sup>
Value 4	Not assigned
Value 5	Not assigned
Value 6	Not assigned
Value 7	Not assigned
Value 8	Not assigned

1) The external measured values must be transmitted to the device in the SI basic unit

**F** The selection is made via: Expert  $\rightarrow$  Sensor  $\rightarrow$  External compensation

#### DI module (Discrete Input)

Two Discrete Input blocks are available.

CHANNEL	Device function	State
0	Uninitialized (factory setting)	-
101	Switch output state	0 = off, 1 = active
103	Low flow cut off	0 = off, 1 = active

CHANNEL	Device function	State
104	Empty pipe detection	0 = off, 1 = active
104	Empty pipe detection Verification status <sup>1)</sup>	0 = off, 1 = active Overall result of the verification Verification: 16 = Failed 32 = Passed 64 = Not performed Verification status Verification: 1 = Not performed 2 = Failed 4 = Being performed 8 = Finished Status; result 17 = Status: not performed;
		<ul> <li>17 - Status: hot performed, Result: failed</li> <li>18 = Status: failed; Result: failed</li> <li>20 = Status: being performed; Result: failed</li> <li>24 = Status: finished; Result: failed</li> <li>33 = Status: not performed; Result: passed</li> <li>34 = Status: failed;</li> </ul>
		<ul> <li>Result: passed</li> <li>36 = Status: being performed; Result: passed</li> <li>40 = Status: finished; Result: passed</li> <li>65 = Status: not performed; Result: not performed</li> <li>66 = Status: failed; Result: not performed</li> <li>68 = Status: being performed; Result: not performed</li> <li>72 = Status: finished; Result: not performed</li> </ul>

1) Only available with the Heartbeat Verification application package

## MDO module (Multiple Discrete Output)

Channel	Description
122	Channel_DO

#### Structure

Channel_DO							
Value 1	Value 2	Value 3	Value 4	Value 5	Value 6	Value 7	Value 8

Value	Device function	State
Value 1	Reset totalizer 1	0 = off, 1 = execute
Value 2	Reset totalizer 2	0 = off, 1 = execute
Value 3	Reset totalizer 3	0 = off, 1 = execute
Value 4	Flow override	0 = off, 1 = active
Value 5	Start heartbeat verification <sup>1)</sup>	0 = off, 1 = start
Value 6	Status output	0 = off, 1 = active

Value Device function		State
Value 7	Zero point adjustment	0 = off, 1 = on
Value 8 Not assigned		-

1) Only available with the Heartbeat Verification application package

# 9.2.3 Execution times

Function block	Execution time (ms)
Analog Input function block (AI)	6
Digital Input function block (DI)	4
PID function block (PID)	5
Multiple Analog Output block (MAO)	4
Multiple Digital Output block (MDO)	4
Integrator function block (INTG)	5

Method	Block	Navigation	Description
Set to "AUTO" mode	Resource block	Via menu: Expert → Communication → Resource block → Target mode	This method sets the Resource Block and all the Transducer Blocks to the AUTO (Automatic) mode.
Set to "OOS" mode	Resource block	Via menu: Expert $\rightarrow$ Communication $\rightarrow$ Resource block $\rightarrow$ Target mode	This method sets the Resource Block and all the Transducer Blocks to the OOS (Out of service) mode.
Restart	Resource block	Via menu: Expert → Communication → Resource block → Restart	This method is used to select the configuration for the <b>Restart</b> parameter in the Resource Block. This resets device parameters to a specific value.
			The following options are supported: <ul> <li>Uninitialized</li> <li>Run</li> <li>Resource</li> <li>Defaults</li> <li>Processor</li> <li>To delivery settings</li> </ul>
ENP parameter	Resource block	Via menu: Actions → Methods→ Calibrate → ENP parameter	This method is used to display and configure the parameters of the electronic nameplate (ENP).
Overview diagnostics - Remedy information	Diagnostic Transducer Block	Via link: Namur symbol	This method is used to display the diagnostic event with the highest priority that is currently active and the corresponding remedial measures.
Actual diagnostics – Remedy information	Diagnostic Transducer Block	<ul> <li>Via menu:</li> <li>Configure/Setup → Diagnostics → Actual diagnostics</li> <li>Device/Diagnostics → Diagnostics</li> </ul>	This method is used to display remedial measures for the diagnostic event with the highest priority that is currently active. This method is available only if an appropriate diagnostic event has occurred.
Previous diagnostics – Remedy information	Diagnostic Transducer Block	<ul> <li>Via menu:</li> <li>Configure/Setup → Diagnostics → Previous diagnostics</li> <li>Device/Diagnostics → Diagnostics</li> </ul>	This method is used to display remedial measures for the previous diagnostic event. Inis method is available only if an appropriate diagnostic event has occurred.

### 9.2.4 Methods

# 10 Commissioning

## **10.1** Function check

Before commissioning the measuring device:

- Make sure that the post-installation and post-connection checks have been performed.
- "Post-installation check" checklist  $\rightarrow$   $\cong$  30
- "Post-connection check" checklist  $\rightarrow \cong 43$

# **10.2** Switching on the measuring device

- After a successful function check, switch on the measuring device.
  - ← After a successful startup, the local display switches automatically from the startup display to the operational display.


If nothing appears on the local display or a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting"  $\rightarrow \square$  133.

# 10.3 Connecting via FieldCare

- For FieldCare  $\rightarrow \triangleq 65$  connection
- For connecting via FieldCare  $\rightarrow \cong 68$
- For the FieldCare  $\rightarrow \triangleq 69$  user interface

# **10.4** Setting the operating language

Factory setting: English or ordered local language

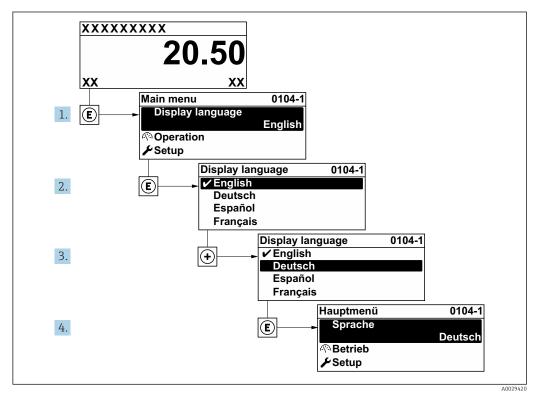


■ 23 Taking the example of the local display

Endress+Hauser

# **10.5** Configuring the measuring device

- The **Setup** menu with its guided wizards contains all the parameters needed for standard operation.
- Navigation to the Setup menu

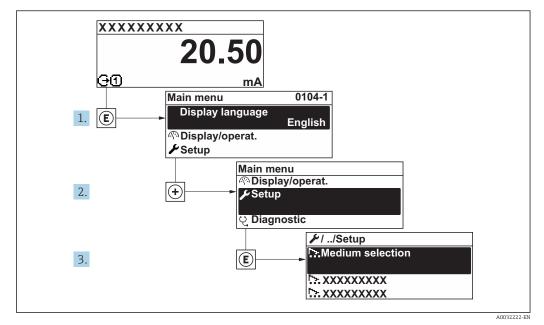

24 Taking the example of the local display


Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

🖌 Setup		
Device tag	] → 🗎 79	
► System units	] → 🗎 79	
► Medium selection	) → 🗎 82	
► Analog inputs	] → 🖹 84	
► I/O configuration	] → 🗎 84	
► Current input 1	] → 🗎 85	
► Status input 1	) → 🗎 86	
► Current output 1	] → 🗎 87	
► Pulse/frequency/switch output 1	) → 🗎 90	
► Relay output 1	) → 🗎 97	
► Display	) → 🗎 99	

► Low flow cut off	→ 🗎 102
► Partially filled pipe detection	→ 🗎 103
► Advanced setup	) → 🗎 104

### 10.5.1 Defining the tag name

 To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

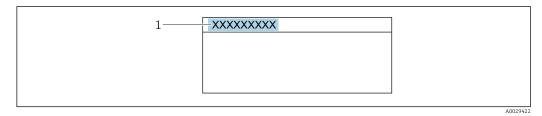

25 Header of the operational display with tag name

1 Tag name

Enter the tag name in the "FieldCare" operating tool  $\rightarrow \square 69$ 

Navigation
"Setup" menu → Device tag

#### Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device tag	Enter the name for the measuring point.	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)	Promass300/500

#### 10.5.2 Setting the system units


In the **System units** submenu the units of all the measured values can be set.

Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

#### Navigation

"Setup" menu → System units

► System units			
	Mass flow unit	]	→ 🖺 80
	Mass unit	]	→ 🖺 80
	Volume flow unit	]	→ 🖺 80

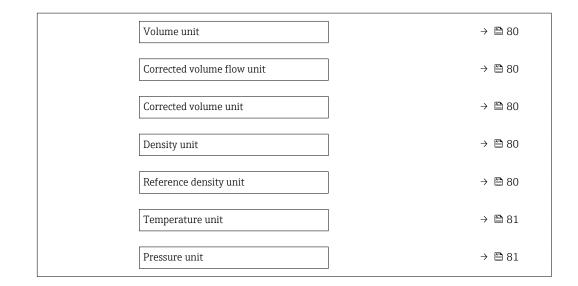

Parameter	Description	Selection	Factory setting
Mass flow unit	Select mass flow unit. Result The selected unit applies for: • Output • Low flow cut off • Simulation process variable	Unit choose list	Country-specific: • kg/h • lb/min
Mass unit	Select mass unit.	Unit choose list	Country-specific: kg lb
Volume flow unit	Select volume flow unit. Result The selected unit applies for: • Output • Low flow cut off • Simulation process variable	Unit choose list	Country-specific:
Volume unit	Select volume unit.	Unit choose list	Country-specific: l gal (us)
Corrected volume flow unit	Select corrected volume flow unit. Result The selected unit applies for: Corrected volume flow parameter $(\rightarrow \cong 123)$	Unit choose list	Country-specific: • Nl/h • Sft <sup>3</sup> /min
Corrected volume unit	Select corrected volume unit.	Unit choose list	Country-specific: • Nl • Sft <sup>3</sup>
Density unit	Select density unit. <i>Result</i> The selected unit applies for: • Output • Simulation process variable • Density adjustment ( <b>Expert</b> menu)	Unit choose list	Country-specific: • kg/l • lb/ft <sup>3</sup>
Reference density unit	Select reference density unit.	Unit choose list	Country-dependent • kg/Nl • lb/Sft <sup>3</sup>

Parameter	Description	Selection	Factory setting
Temperature unit	Select temperature unit. <i>Result</i> The selected unit applies for: • Electronic temperature parameter (6053) • Maximum value parameter (6051) • Minimum value parameter (6108) • Minimum value parameter (6109) • Maximum value parameter (6029) • Minimum value parameter (6030) • Reference temperature parameter (1816) • Temperature parameter	Unit choose list	Country-specific: • °C • °F
Pressure unit	<ul> <li>Select process pressure unit.</li> <li><i>Result</i></li> <li>The unit is taken from: <ul> <li>Pressure value parameter (→ ■ 83)</li> <li>External pressure parameter (→ ■ 83)</li> <li>Pressure value</li> </ul> </li> </ul>	Unit choose list	Country-specific: • bar a • psi a

# 10.5.3 Selecting and setting the medium

The **Select medium** wizard submenu contains parameters that must be configured in order to select and set the medium.

#### Navigation

"Setup" menu  $\rightarrow$  Select medium

► Medium selection	
Select medium	} → 🖹 83
Select gas type	→ 🖺 83
Reference sound velocity	) → 🗎 83
Temperature coefficient sound velocity	) → 🗎 83
Pressure compensation	) → 🗎 83
Pressure value	}
External pressure	) → 🗎 83

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Select medium	-	Select medium type.	<ul><li>Liquid</li><li>Gas</li></ul>	Liquid
Select gas type	The <b>Gas</b> option is selected in the <b>Select medium</b> parameter.	Select measured gas type.	<ul> <li>Air</li> <li>Ammonia NH3</li> <li>Argon Ar</li> <li>Sulfur hexafluoride SF6</li> <li>Oxygen O2</li> <li>Ozone O3</li> <li>Nitrogen oxide N2O</li> <li>Nitrogen N2</li> <li>Nitrous oxide N2O</li> <li>Methane CH4</li> <li>Hydrogen H2</li> <li>Helium He</li> <li>Hydrogen chloride HCI</li> <li>Hydrogen sulfide H2S</li> <li>Ethylene C2H4</li> <li>Carbon monoxide CO</li> <li>Chlorine Cl2</li> <li>Butane C4H10</li> <li>Propane C3H6</li> <li>Ethane C2H6</li> <li>Others</li> </ul>	Methane CH4
Reference sound velocity	In the <b>Select gas type</b> parameter, the <b>Others</b> option is selected.	Enter sound velocity of gas at 0 °C (32 °F).	1 to 99999.9999 m/ s	415.0 m/s
Temperature coefficient sound velocity	The <b>Others</b> option is selected in the <b>Select gas type</b> parameter.	Enter temperature coefficient for the gas sound velocity.	Positive floating- point number	0 (m/s)/K
Pressure compensation	-	Select pressure compensation type.	<ul> <li>Off</li> <li>Fixed value</li> <li>External value</li> <li>Current input 1<sup>*</sup></li> </ul>	Off
Pressure value	The <b>Fixed value</b> option or the <b>Current input 1n</b> option is selected in the <b>Pressure compensation</b> parameter.	Enter process pressure to be used for pressure correction.	Positive floating- point number	0 bar
External pressure	The <b>Fixed value</b> option or the <b>Current input 1n</b> option is selected in the <b>Pressure compensation</b> parameter.	Shows the external process pressure value.	Positive floating- point number	0 bar

\* Visibility depends on order options or device settings

## **10.5.4** Configuring the analog inputs

The **Analog inputs** submenu guides the user systematically to the individual **Analog input 1 to n** submenu. From here you get to the parameters of the individual analog input.

#### Navigation

"Setup" menu → Analog inputs

► Analog inputs	
► Analog input 1 to n	
Block tag	→ 🖺 84
Channel	→ 🗎 84
Process Value Filter Time	→ 🗎 84

#### Parameter overview with brief description

Parameter	Description	User entry / Selection	Factory setting
Block tag	Unique name of the measuring device.	Max. 32 characters such as letters, numbers or special characters (e. g. @, %, /).	ANALOG_INPUT_1 4_Serial number
Channel	Use this function to select the process variable.	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Target mass flow *</li> <li>Carrier mass flow *</li> <li>Density</li> <li>Reference density</li> <li>Concentration *</li> <li>Temperature</li> <li>Carrier pipe temperature *</li> <li>Electronic temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Oscillation damping fluctuation 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>HBSI *</li> <li>Totalizer 1</li> <li>Totalizer 3</li> <li>Current input 1 *</li> <li>Uninitialized</li> </ul>	Uninitialized
Process Value Filter Time	Enter the filter time specification for the filtering of the unconverted input value (PV).	Positive floating-point number	0 s

\* Visibility depends on order options or device settings

# 10.5.5 Displaying the I/O configuration

The **I/O configuration** submenu guides the user systematically through all the parameters in which the configuration of the I/O modules is displayed.

#### Navigation

"Setup" menu  $\rightarrow$  I/O configuration

► I/O configuration	
I/O module 1 to n terminal numbers	) → 🗎 85
I/O module 1 to n information	) → 🗎 85
I/O module 1 to n type	) → 🗎 85
Apply I/O configuration	→ 🗎 85
Conversion code	) → 🗎 85

#### Parameter overview with brief description

Parameter	Description	User interface / Selection / User entry	Factory setting
I/O module terminal numbers	Shows the terminal numbers used by the I/O module.	<ul> <li>Not used</li> <li>26-27 (I/O 1)</li> <li>24-25 (I/O 2)</li> </ul>	-
I/O module information	Shows information of the plugged I/O module.	<ul> <li>Not plugged</li> <li>Invalid</li> <li>Not configurable</li> <li>Configurable</li> <li>Fieldbus</li> </ul>	-
I/O module type	Shows the I/O module type.	<ul> <li>Off</li> <li>Current output *</li> <li>Current input *</li> <li>Status input *</li> <li>Pulse/frequency/switch output *</li> </ul>	Off
Apply I/O configuration	Apply parameterization of the freely configurable I/O module.	<ul><li>No</li><li>Yes</li></ul>	No
Conversion code	Enter the code in order to change the I/O configuration.	Positive integer	0

\* Visibility depends on order options or device settings

## 10.5.6 Configuring the current input

The **"Current input" wizard** guides the user systematically through all the parameters that have to be set for configuring the current input.

#### Navigation

"Setup" menu  $\rightarrow$  Current input

► Current input 1		
Terminal number		→ 🖺 86

Signal mode	] →	86
0/4 mA value	}	86
20 mA value	}	86
Current span	)	86
Failure mode	}	86
Failure value	} →	86
20 mA value Current span Failure mode	$\left  \right\rangle \rightarrow$	<ul><li>➡ 86</li><li>➡ 86</li><li>➡ 86</li></ul>

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the current input module.	<ul><li>Not used</li><li>24-25 (I/O 2)</li></ul>	-
Signal mode	The measuring device is <b>not</b> approved for use in the hazardous area with type of protection Ex-i.	Select the signal mode for the current input.	<ul><li>Passive</li><li>Active</li></ul>	Active
0/4 mA value	-	Enter 4 mA value.	Signed floating-point number	0
20 mA value	-	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter
Current span	-	Select current range for process value output and upper/lower level for alarm signal.	<ul> <li>420 mA</li> <li>420 mA NAMUR</li> <li>420 mA US</li> <li>020 mA</li> </ul>	Country-specific: • 420 mA NAMUR • 420 mA US
Failure mode	-	Define input behavior in alarm condition.	<ul><li>Alarm</li><li>Last valid value</li><li>Defined value</li></ul>	Alarm
Failure value	In the <b>Failure mode</b> parameter, the <b>Defined value</b> option is selected.	Enter value to be used by the device if input value from external device is missing.	Signed floating-point number	0

## **10.5.7** Configuring the status input

The **Status input** submenu guides the user systematically through all the parameters that have to be set for configuring the status input.

#### Navigation

"Setup" menu → Status input

► Status input 1 to n		
Assign status in	put	→ 🖺 87

Terminal number	→ 🗎 87
Active level	→ 🗎 87
Terminal number	→ 🗎 87
Response time status input	→ 🗎 87
Terminal number	→ 🗎 87

Parameter	Description	User interface / Selection / User entry	Factory setting
Terminal number	Shows the terminal numbers used by the status input module.	<ul><li>Not used</li><li>24-25 (I/O 2)</li></ul>	-
Assign status input	Select function for the status input.	<ul> <li>Off</li> <li>Reset totalizer 1</li> <li>Reset totalizer 2</li> <li>Reset totalizer 3</li> <li>Reset all totalizers</li> <li>Flow override</li> </ul>	Off
Active level	Define input signal level at which the assigned function is triggered.	<ul><li>High</li><li>Low</li></ul>	High
Response time status input	Define the minimum amount of time the input signal level must be present before the selected function is triggered.	5 to 200 ms	50 ms

### 10.5.8 Configuring the current output

The **Current output** wizard guides you systematically through all the parameters that have to be set for configuring the current output.

#### Navigation

"Setup" menu → Current output

► Current output 1	
Terminal number	) → 🗎 88
Signal mode	) → 🖺 88
Assign current output 1	) → 🗎 88
Current span	) → 🗎 88
0/4 mA value	) → 🗎 88
20 mA value	) → 🗎 88
Fixed current	→ 🗎 89

Failure mode	→ 🖺 89
Failure current	→ 🖺 89

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the current output module.	<ul> <li>Not used</li> <li>24-25 (I/O 2)</li> </ul>	-
Signal mode	-	Select the signal mode for the current output.	<ul><li>Passive</li><li>Active</li></ul>	Active
Assign current output		Select process variable for current output.	<ul> <li>Off</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Target mass flow*</li> <li>Carrier mass flow*</li> <li>Density</li> <li>Reference density</li> <li>Concentration*</li> <li>Temperature</li> <li>Carrier pipe temperature*</li> <li>Electronic temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation amplitude 0*</li> <li>Frequency fluctuation 0</li> <li>Oscillation damping 0</li> <li>Oscillation damping fluctuation 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>HBSI*</li> </ul>	Mass flow
Current span	-	Select current range for process value output and upper/lower level for alarm signal.	<ul> <li>420 mA NAMUR</li> <li>420 mA US</li> <li>420 mA</li> <li>020 mA</li> <li>Fixed current</li> </ul>	Country-specific: • 420 mA NAMUR • 420 mA US
0/4 mA value	One of the following options is selected in the <b>Current span</b> parameter (→ 🗎 88): • 420 mA NAMUR • 420 mA US • 420 mA • 020 mA	Enter 4 mA value.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
20 mA value	One of the following options is selected in the <b>Current span</b> parameter (→ 🗎 88): • 420 mA NAMUR • 420 mA US • 420 mA • 020 mA	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Fixed current	The <b>Fixed current</b> option is selected in the <b>Current span</b> parameter ( $\rightarrow \cong 88$ ).	Defines the fixed output current.	0 to 22.5 mA	22.5 mA
Damping output	A process variable is selected in the <b>Assign current output</b> parameter (→ 🗎 88) and one of the following options is selected in the <b>Current span</b> parameter (→ 🗎 88): • 420 mA NAMUR • 420 mA US • 420 mA • 020 mA	Set reaction time for output signal to fluctuations in the measured value.	0.0 to 999.9 s	1.0 s
Failure mode	A process variable is selected in the <b>Assign current output</b> parameter (→ 🗎 88) and one of the following options is selected in the <b>Current span</b> parameter (→ 🗎 88): • 420 mA NAMUR • 420 mA US • 420 mA • 020 mA	Define output behavior in alarm condition.	<ul> <li>Min.</li> <li>Max.</li> <li>Last valid value</li> <li>Actual value</li> <li>Defined value</li> </ul>	Max.
Failure current	The <b>Defined value</b> option is selected in the <b>Failure mode</b> parameter.	Enter current output value in alarm condition.	0 to 22.5 mA	22.5 mA

\* Visibility depends on order options or device settings

# 10.5.9 Configuring the pulse/frequency/switch output

The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Pulse/frequency/switch output



### Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Operating mode	Define the output as a pulse, frequency or switch output.	<ul><li>Pulse</li><li>Frequency</li><li>Switch</li></ul>	Pulse

#### Configuring the pulse output

#### Navigation

"Setup" menu  $\rightarrow$  Pulse/frequency/switch output

<ul> <li>Pulse/frequency/switch output</li> <li>1 to n</li> </ul>	
Operating mode	) → 🗎 91
Terminal number	) → 🗎 91
Signal mode	) → 🗎 91
Assign pulse output	) → 🗎 91
Value per pulse	) → 🗎 91
Pulse width	) → 🗎 91
Failure mode	] → 🗎 91
Invert output signal	) → 🗎 91

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	<ul><li>Pulse</li><li>Frequency</li><li>Switch</li></ul>	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	<ul> <li>Not used</li> <li>24-25 (I/O 2)</li> </ul>	-
Signal mode	-	Select the signal mode for the PFS output.	<ul><li>Passive</li><li>Active</li></ul>	Passive
Assign pulse output 1 to n	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter parameter.	Select process variable for pulse output.	<ul> <li>Off</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Target mass flow*</li> <li>Carrier mass flow*</li> </ul>	Off
Value per pulse	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter ( $\rightarrow \boxdot 90$ ) and a process variable is selected in the <b>Assign pulse output</b> parameter ( $\rightarrow \boxdot 91$ ).	Enter measured value at which a pulse is output.	Signed floating-point number	Depends on country and nominal diameter
Pulse width	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter ( $\rightarrow \boxdot 90$ ) and a process variable is selected in the <b>Assign pulse output</b> parameter ( $\rightarrow \boxdot 91$ ).	Define time width of the output pulse.	0.05 to 2 000 ms	100 ms
Failure mode	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter ( $\rightarrow \boxdot 90$ ) and a process variable is selected in the <b>Assign pulse output</b> parameter ( $\rightarrow \boxdot 91$ ).	Define output behavior in alarm condition.	<ul><li>Actual value</li><li>No pulses</li></ul>	No pulses
Invert output signal	-	Invert the output signal.	<ul><li>No</li><li>Yes</li></ul>	No

\* Visibility depends on order options or device settings

#### Configuring the frequency output

#### Navigation

"Setup" menu  $\rightarrow$  Pulse/frequency/switch output

ulse/frequency/switch output to n	
Operating mode	) → 🗎 92
Terminal number	) → 🗎 92
Signal mode	) → 🗎 92

Assign frequency output	→ 🗎 93
Minimum frequency value	→ 🗎 93
Maximum frequency value	→ 🗎 93
Measuring value at minimum frequency	→ 🗎 93
Measuring value at maximum frequency	→ 🗎 93
Failure mode	→ 🗎 93
Failure frequency	→ 🖺 94
Invert output signal	→ 🗎 94

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	<ul><li>Pulse</li><li>Frequency</li><li>Switch</li></ul>	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	<ul> <li>Not used</li> <li>24-25 (I/O 2)</li> </ul>	-
Signal mode	-	Select the signal mode for the PFS output.	<ul><li> Passive</li><li> Active</li></ul>	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Assign frequency output	The <b>Frequency</b> option is selected in the <b>Operating</b> <b>mode</b> parameter (→ ● 90) parameter.	Select process variable for frequency output.	<ul> <li>Off</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Corrected volume flow</li> <li>Target mass flow *</li> <li>Carrier mass flow *</li> <li>Density</li> <li>Reference density</li> <li>Concentration *</li> <li>Temperature</li> <li>Carrier pipe temperature *</li> <li>Electronic temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation amplitude 0</li> <li>Frequency fluctuation 0</li> <li>Oscillation damping 0</li> <li>Oscillation damping fluctuation 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>HBSI *</li> </ul>	Off
Minimum frequency value	The <b>Frequency</b> option is selected in the <b>Operating</b> <b>mode</b> parameter ( $\rightarrow \cong 90$ ) and a process variable is selected in the <b>Assign</b> <b>frequency output</b> parameter ( $\rightarrow \cong 93$ ).	Enter minimum frequency.	0.0 to 10000.0 Hz	0.0 Hz
Maximum frequency value	The <b>Frequency</b> option is selected in the <b>Operating</b> <b>mode</b> parameter ( $\rightarrow \boxdot 90$ ) and a process variable is selected in the <b>Assign</b> <b>frequency output</b> parameter ( $\rightarrow \boxdot 93$ ).	Enter maximum frequency.	0.0 to 10000.0 Hz	10 000.0 Hz
Measuring value at minimum frequency	The <b>Frequency</b> option is selected in the <b>Operating</b> <b>mode</b> parameter ( $\rightarrow \cong 90$ ) and a process variable is selected in the <b>Assign</b> <b>frequency output</b> parameter ( $\rightarrow \cong 93$ ).	Enter measured value for minmum frequency.	Signed floating-point number	Depends on country and nominal diameter
Measuring value at maximum frequency	The <b>Frequency</b> option is selected in the <b>Operating</b> <b>mode</b> parameter ( $\rightarrow \square 90$ ) and a process variable is selected in the <b>Assign</b> <b>frequency output</b> parameter ( $\rightarrow \square 93$ ).	Enter measured value for maximum frequency.	Signed floating-point number	Depends on country and nominal diameter
Failure mode	The <b>Frequency</b> option is selected in the <b>Operating</b> <b>mode</b> parameter ( $\rightarrow \square 90$ ) and a process variable is selected in the <b>Assign</b> <b>frequency output</b> parameter ( $\rightarrow \square 93$ ).	Define output behavior in alarm condition.	<ul> <li>Actual value</li> <li>Defined value</li> <li>0 Hz</li> </ul>	0 Hz

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Failure frequency	The <b>Frequency</b> option is selected in the <b>Operating mode</b> parameter ( $\rightarrow \square 90$ ) and a process variable is selected in the <b>Assign frequency output</b> parameter ( $\rightarrow \square 93$ ).	Enter frequency output value in alarm condition.	0.0 to 12 500.0 Hz	0.0 Hz
Invert output signal	-	Invert the output signal.	<ul><li>No</li><li>Yes</li></ul>	No

\* Visibility depends on order options or device settings

### Configuring the switch output

#### Navigation

"Setup" menu  $\rightarrow$  Pulse/frequency/switch output

<ul> <li>Pulse/frequency/switch output</li> <li>1 to n</li> </ul>	
Operating mode	) → 🗎 95
Terminal number	) → 🗎 95
Signal mode	) → 🗎 95
Switch output function	) → 🗎 96
Assign diagnostic behavior	) → 🗎 96
Assign limit	) → 🗎 96
Assign flow direction check	) → 🗎 96
Assign status	] → 🗎 96
Switch-on value	) → 🗎 96
Switch-off value	) → 🗎 96
Switch-on delay	) → 🗎 96
Switch-off delay	) → 🗎 97
Failure mode	→ 🗎 97
Invert output signal	_ ] → 🗎 97

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	<ul><li>Pulse</li><li>Frequency</li><li>Switch</li></ul>	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	<ul> <li>Not used</li> <li>24-25 (I/O 2)</li> </ul>	-
Signal mode	-	Select the signal mode for the PFS output.	<ul><li>Passive</li><li>Active</li></ul>	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch output function	The <b>Switch</b> option is selected in the <b>Operating mode</b> parameter.	Select function for switch output.	<ul> <li>Off</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit</li> <li>Flow direction check</li> <li>Status</li> </ul>	Off
Assign diagnostic behavior	<ul> <li>In the Operating mode parameter, the Switch option is selected.</li> <li>In the Switch output function parameter, the Diagnostic behavior option is selected.</li> </ul>	Select diagnostic behavior for switch output.	<ul><li>Alarm</li><li>Alarm or warning</li><li>Warning</li></ul>	Alarm
Assign limit	<ul> <li>The Switch option is selected in the Operating mode parameter parameter.</li> <li>The Limit option is selected in the Switch output function parameter parameter.</li> </ul>	Select process variable for limit function.	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Target mass flow*</li> <li>Carrier mass flow*</li> <li>Density</li> <li>Reference density</li> <li>Concentration*</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> <li>Oscillation damping</li> </ul>	Mass flow
Assign flow direction check	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Flow direction check option is selected in the Switch output function parameter.</li> </ul>	Select process variable for flow direction monitoring.	<ul> <li>Off</li> <li>Volume flow</li> <li>Mass flow</li> <li>Corrected volume flow</li> </ul>	Mass flow
Assign status	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Status option is selected in the Switch output function parameter.</li> </ul>	Select device status for switch output.	<ul> <li>Partially filled pipe detection</li> <li>Low flow cut off</li> <li>Digital output 6</li> </ul>	Partially filled pipe detection
Switch-on value	<ul> <li>In the Operating mode parameter, the Switch option is selected.</li> <li>In the Switch output function parameter, the Limit option is selected.</li> </ul>	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
Switch-off value	<ul> <li>In the Operating mode parameter, the Switch option is selected.</li> <li>In the Switch output function parameter, the Limit option is selected.</li> </ul>	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
Switch-on delay	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Limit option is selected in the Switch output function parameter.</li> </ul>	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch-off delay	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Limit option is selected in the Switch output function parameter.</li> </ul>	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Failure mode	-	Define output behavior in alarm condition.	<ul><li>Actual status</li><li>Open</li><li>Closed</li></ul>	Open
Invert output signal	-	Invert the output signal.	<ul><li>No</li><li>Yes</li></ul>	No

\* Visibility depends on order options or device settings

# **10.5.10** Configuring the relay output

The **Relay output** wizard guides the user systematically through all the parameters that have to be set for configuring the relay output.

#### Navigation

"Setup" menu  $\rightarrow$  Relay output 1 to n

► RelaisOutput 1 to n	
Switch output function	→ 🗎 98
Assign flow direction check	→ 🗎 98
Assign limit	→ 🗎 98
Assign diagnostic behavior	→ 🗎 98
Assign status	→ 🗎 98
Switch-off value	→ 🗎 98
Switch-on value	→ 🗎 98
Failure mode	→ 🗎 98

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Relay output function	-	Select the function for the relay output.	<ul> <li>Closed</li> <li>Open</li> <li>Diagnostic behavior</li> <li>Limit</li> <li>Flow direction check</li> <li>Digital Output</li> </ul>	Closed
Terminal number	-	Shows the terminal numbers used by the relay output module.	<ul> <li>Not used</li> <li>24-25 (I/O 2)</li> </ul>	-
Assign flow direction check	In the <b>Relay output function</b> parameter, the <b>Flow direction</b> <b>check</b> option is selected.	Select process variable for flow direction monitoring.	<ul> <li>Off</li> <li>Volume flow</li> <li>Mass flow</li> <li>Corrected volume flow</li> </ul>	Mass flow
Assign limit	The <b>Limit</b> option is selected in the <b>Relay output function</b> parameter parameter.	Select process variable for limit function.	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Target mass flow*</li> <li>Carrier mass flow*</li> <li>Density</li> <li>Reference density</li> <li>Concentration*</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> <li>Oscillation damping</li> </ul>	Mass flow
Assign diagnostic behavior	In the <b>Relay output function</b> parameter, the <b>Diagnostic</b> <b>behavior</b> option is selected.	Select diagnostic behavior for switch output.	<ul><li> Alarm</li><li> Alarm or warning</li><li> Warning</li></ul>	Alarm
Assign status	In the <b>Relay output function</b> parameter, the <b>Digital Output</b> option is selected.	Select device status for switch output.	<ul> <li>Partially filled pipe detection</li> <li>Low flow cut off</li> <li>Digital output 6</li> </ul>	Partially filled pipe detection
Switch-off value	In the <b>Relay output function</b> parameter, the <b>Limit</b> option is selected.	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
Switch-off delay	In the <b>Relay output function</b> parameter, the <b>Limit</b> option is selected.	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Switch-on value	In the <b>Relay output function</b> parameter, the <b>Limit</b> option is selected.	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
Switch-on delay	In the <b>Relay output function</b> parameter, the <b>Limit</b> option is selected.	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s
Failure mode	-	Define output behavior in alarm condition.	<ul><li>Actual status</li><li>Open</li><li>Closed</li></ul>	Open

\* Visibility depends on order options or device settings

# 10.5.11 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can configured for configuring the local display.

#### Navigation

"Setup" menu  $\rightarrow$  Display

► Display			
Format di	splay	]	→ 🖺 100
Value 1 di	splay	] -	→ 🖺 100
0% bargra	ph value 1	]	→ 🖺 100
100% bar	graph value 1	]	→ 🗎 100
Value 2 di	splay	]	→ 🗎 100
Value 3 di	splay	] -	→ 🗎 100
0% bargra	ph value 3	-	→ 🗎 100
100% bar	graph value 3	-	) 🗎 101
Value 4 di	splay	]	→ 🗎 101

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul> <li>1 value, max. size</li> <li>1 bargraph + 1 value</li> <li>2 values</li> <li>1 value large + 2 values</li> <li>4 values</li> </ul>	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Target mass flow*</li> <li>Carrier mass flow*</li> <li>Density</li> <li>Reference density</li> <li>Concentration*</li> <li>Temperature</li> <li>Carrier pipe temperature*</li> <li>Electronic temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation amplitude 0*</li> <li>Frequency fluctuation 0</li> <li>Oscillation damping 0</li> <li>Oscillation damping fluctuation 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>Totalizer 1</li> <li>Totalizer 3</li> <li>Current output 1</li> </ul>	Mass flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the <b>Value 1 display</b> parameter	None
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the <b>Value 1 display</b> parameter $( \rightarrow \cong 100)$	None
0% bargraph value 3	A selection was made in the <b>Value 3 display</b> parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
100% bargraph value 3	A selection was made in the <b>Value 3 display</b> parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the <b>Value 1 display</b> parameter $(\rightarrow \cong 100)$	None


\* Visibility depends on order options or device settings

# 10.5.12 Configuring the low flow cut off

The **Low flow cut off** wizard systematically guides the user through all the parameters that must be set to configure low flow cut off.

#### Navigation

"Setup" menu  $\rightarrow$  Low flow cut off

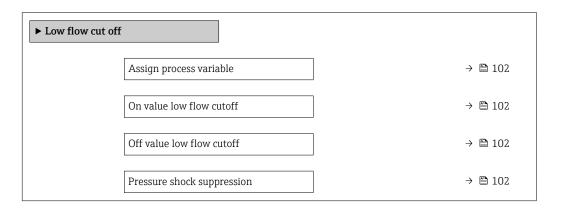


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	_	Select process variable for low flow cut off.	<ul><li>Off</li><li>Mass flow</li><li>Volume flow</li><li>Corrected volume flow</li></ul>	Mass flow
On value low flow cutoff	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \textcircled{102}$ ).	Enter on value for low flow cut off.	Positive floating- point number	Depends on country and nominal diameter
Off value low flow cutoff	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \textcircled{102}$ ).	Enter off value for low flow cut off.	0 to 100.0 %	50 %
Pressure shock suppression	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \blacksquare$ 102).	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	0 s

## 10.5.13 Configuring the partial filled pipe detection

The **Partial filled pipe detection** wizard guides you systematically through all parameters that have to be set for configuring the monitoring of the pipe filling.

#### Navigation

"Setup" menu  $\rightarrow$  Partially filled pipe detection

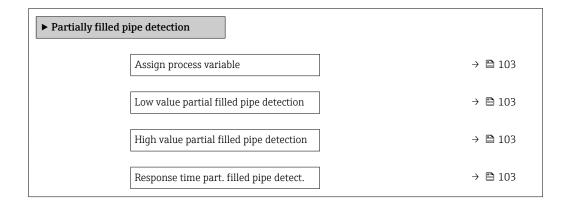


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	-	Select process variable for partially filled pipe detection.	<ul><li> Off</li><li> Density</li><li> Reference density</li></ul>	Off
Low value partial filled pipe detection	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \cong$ 103).	Enter lower limit value for deactivating partialy filled pipe detection.	Signed floating-point number	200
High value partial filled pipe detection	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \cong$ 103).	Enter upper limit value for deactivating partialy filled pipe detection.	Signed floating-point number	6 000
Response time part. filled pipe detect.	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \square$ 103).	Enter time before diagnostic message is displayed for partially filled pipe detection.	0 to 100 s	1 s

# 10.6 Advanced settings

The **Advanced setup** submenu together with its submenus contains parameters for specific settings.

Navigation to the "Advanced setup" submenu

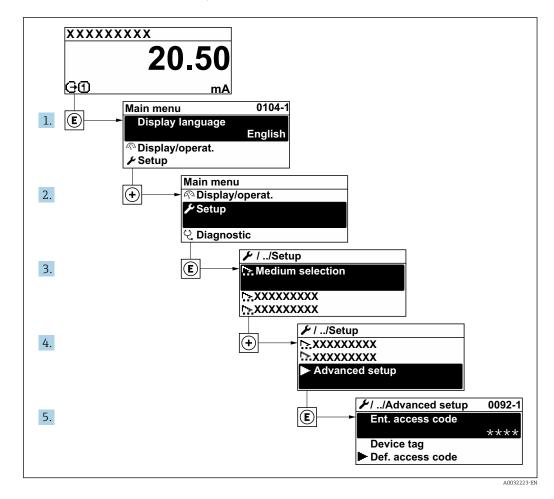


The number of submenus can vary depending on the device version. Some submenus are not dealt with in the Operating Instructions. These submenus and the parameters they contain are explained in the Special Documentation for the device.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup

► Advanced setup	
Enter access code	→ <sup>●</sup> 105
► Calculated values	→ 🗎 105
► Sensor adjustment	→ 🗎 106
► Totalizer 1 to n	→ 🗎 107
► Display	→ 🗎 109

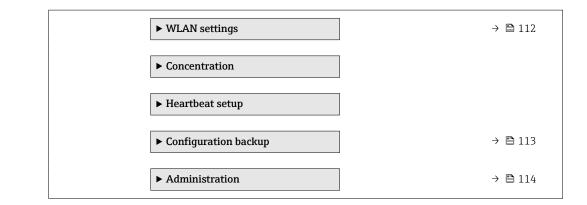

## 10.6.1 Using the parameter to enter the access code

#### Navigation

"Setup" menu → Advanced setup

#### Parameter overview with brief description

Parameter	Description	User entry
Enter access code	Enter access code to disable write protection of parameters.	0 to 9 999

### 10.6.2 Calculated values

The **Calculated values** submenu contains parameters for calculating the corrected volume flow.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Calculated values

► Calculated values	]	
► Corrected volum	ne flow calculation	
	Corrected volume flow calculation	→ 🗎 106
	External reference density	→ 🗎 106
	Fixed reference density	→ 🗎 106
	Reference temperature	→ 🗎 106
	Linear expansion coefficient	→ 🗎 106
	Square expansion coefficient	→ 🗎 106

Parameter overview with brief description
---

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Corrected volume flow calculation	-	Select reference density for calculating the corrected volume flow.	<ul> <li>Fixed reference density</li> <li>Calculated reference density</li> <li>Reference density by API table 53</li> <li>External reference density</li> <li>Current input 1 *</li> </ul>	Calculated reference density
External reference density	-	Shows external reference density.	Floating point number with sign	-
Fixed reference density	The <b>Fixed reference density</b> option is selected in the <b>Corrected volume flow</b> <b>calculation</b> parameter parameter.	Enter fixed value for reference density.	Positive floating- point number	1 kg/Nl
Reference temperature	The <b>Calculated reference</b> <b>density</b> option is selected in the <b>Corrected volume flow</b> <b>calculation</b> parameter parameter.	Enter reference temperature for calculating the reference density.	-273.15 to 99 999 °C	Country-specific: • +20 °C • +68 °F
Linear expansion coefficient	The <b>Calculated reference</b> <b>density</b> option is selected in the <b>Corrected volume flow</b> <b>calculation</b> parameter parameter.	Enter linear, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0
Square expansion coefficient	The <b>Calculated reference</b> <b>density</b> option is selected in the <b>Corrected volume flow</b> <b>calculation</b> parameter parameter.	For media with a non-linear expansion pattern: enter the quadratic, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0

\* Visibility depends on order options or device settings

# 10.6.3 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Sensor adjustment

► Sensor adjustment	]		
Installation direction	n	-	→ 🗎 107
► Zero point adjus	tment	-	→ 🗎 107

Parameter	Description	Selection	Factory setting
Installation direction	Set sign of flow direction to match the direction of the arrow on the sensor.	<ul><li>Flow in arrow direction</li><li>Flow against arrow direction</li></ul>	Flow in arrow direction

#### Zero point adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions  $\rightarrow \cong 191$ . Therefore, a zero point adjustment in the field is generally not required.

Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Sensor adjustment  $\rightarrow$  Zero point adjustment

► Zero point adjustment				
Zero point adjustment control	] → 🗎 107			
Progress	] → 🗎 107			

#### Parameter overview with brief description

Parameter	Description	Selection / User interface	Factory setting
Zero point adjustment control	Start zero point adjustment.	<ul><li>Cancel</li><li>Busy</li><li>Zero point adjust failure</li><li>Start</li></ul>	Cancel
Progress	Shows the progress of the process.	0 to 100 %	-

### 10.6.4 Configuring the totalizer

In the **"Totalizer 1 to n" submenu** the individual totalizer can be configured.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Totalizer 1 to n

► Totalizer 1 to n	
Assign process variable	→ 🗎 108
Unit totalizer 1 to n	→ <a>108</a>
Totalizer operation mode	→ <a>108</a>
Failure mode	→ 🗎 108

Parameter	Prerequisite	Description	Selection	Factory setting
Assign process variable	-	Select process variable for totalizer.	<ul> <li>Off</li> <li>Volume flow</li> <li>Mass flow</li> <li>Corrected volume flow</li> <li>Target mass flow*</li> <li>Carrier mass flow*</li> </ul>	Mass flow
Unit totalizer 1 to n	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \bowtie$ 108) of the <b>Totalizer 1 to n</b> submenu.	Select process variable totalizer unit.	Unit choose list	Country-specific: • kg • lb
Totalizer operation mode	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \bowtie$ 108) of the <b>Totalizer 1 to n</b> submenu.	Select totalizer calculation mode.	<ul><li>Net flow total</li><li>Forward flow total</li><li>Reverse flow total</li></ul>	Net flow total
Failure mode	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \bowtie$ 108) of the <b>Totalizer 1 to n</b> submenu.	Define totalizer behavior in alarm condition.	<ul><li>Stop</li><li>Actual value</li><li>Last valid value</li></ul>	Stop

\* Visibility depends on order options or device settings

#### 10.6.5 Carrying out additional display configurations

In the **Display** submenu you can set all the parameters associated with the configuration of the local display.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Display

► Display	
Format display	) → 🗎 110
Value 1 display	] → 🗎 110
0% bargraph value 1	] → 🗎 110
100% bargraph value 1	] → 🗎 110
Decimal places 1	] → 🗎 110
Value 2 display	] → 🗎 110
Decimal places 2	→ 🗎 110
Value 3 display	] → 🗎 110
0% bargraph value 3	] → 🗎 111
100% bargraph value 3	→ 🗎 111
Decimal places 3	→ 🗎 111
Value 4 display	→ 🗎 111
Decimal places 4	→ 🗎 111
Display language	] → 🗎 111
Display interval	→ 🗎 111
Display damping	→ 🗎 111
Header	→ 🗎 111
Header text	) → 🗎 111
Separator	] → 🗎 112
Backlight	→ 🗎 112

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul> <li>1 value, max. size</li> <li>1 bargraph + 1 value</li> <li>2 values</li> <li>1 value large + 2 values</li> <li>4 values</li> </ul>	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Target mass flow *</li> <li>Carrier mass flow *</li> <li>Density</li> <li>Reference density</li> <li>Concentration *</li> <li>Temperature</li> <li>Carrier pipe temperature *</li> <li>Electronic temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation amplitude 0 *</li> <li>Frequency fluctuation 0</li> <li>Oscillation damping 0</li> <li>Oscillation damping fluctuation 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>Totalizer 1</li> <li>Totalizer 3</li> <li>Current output 1</li> </ul>	Mass flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the <b>Value 1 display</b> parameter.	Select the number of decimal places for the display value.	<ul> <li>x</li> <li>x.x</li> <li>x.xx</li> <li>x.xxx</li> <li>x.xxx</li> <li>x.xxxx</li> </ul>	X.XX
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the <b>Value 1 display</b> parameter	None
Decimal places 2	A measured value is specified in the <b>Value 2 display</b> parameter.	Select the number of decimal places for the display value.	<ul> <li>x</li> <li>x.x</li> <li>x.xx</li> <li>x.xxx</li> <li>x.xxx</li> <li>x.xxxx</li> </ul>	x.xx
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the <b>Value 1 display</b> parameter $(\rightarrow \cong 100)$	None

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
0% bargraph value 3			Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
100% bargraph value 3	A selection was made in the <b>Value 3 display</b> parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 3	A measured value is specified in the <b>Value 3 display</b> parameter.	Select the number of decimal places for the display value.	<ul> <li>x</li> <li>x.x</li> <li>x.xx</li> <li>x.xxx</li> <li>x.xxx</li> <li>x.xxxx</li> </ul>	x.xx
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the <b>Value 1 display</b> parameter $(\rightarrow \cong 100)$	None
Decimal places 4	A measured value is specified in the <b>Value 4 display</b> parameter.	Select the number of decimal places for the display value.	<ul> <li>x</li> <li>x.x</li> <li>x.xx</li> <li>x.xxx</li> <li>x.xxx</li> <li>x.xxxx</li> </ul>	x.xx
Display language	A local display is provided.	Set display language.	<ul> <li>English</li> <li>Deutsch*</li> <li>Français*</li> <li>Español*</li> <li>Italiano*</li> <li>Nederlands*</li> <li>Portuguesa*</li> <li>Polski*</li> <li>pycский язык (Russian)*</li> <li>Svenska*</li> <li>Türkçe*</li> <li>中文 (Chinese)*</li> <li>日本語 (Japanese)*</li> <li>한국어 (Korean)*</li> <li>Bahasa Indonesia*</li> <li>tiếng Việt (Vietnamese)*</li> <li>čeština (Czech)*</li> </ul>	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.     1 to 10 s		5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	A local display is provided.	Select header contents on local display.	<ul><li> Device tag</li><li> Free text</li></ul>	Device tag
Header text	In the <b>Header</b> parameter, the <b>Free text</b> option is selected.	Enter display header text.	Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)	

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	<ul><li>. (point)</li><li>, (comma)</li></ul>	. (point)
Backlight	One of the following conditions is met: Order code for "Display; operation", option <b>F</b> "4-line, illum.; touch control" Order code for "Display; operation", option <b>G</b> "4-line, illum.; touch control +WLAN" Order code for "Display; operation", option <b>O</b> "Separate 4-line display, illum.; 10m/30ft cable; touch control"	Switch the local display backlight on and off.	<ul> <li>Disable</li> <li>Enable</li> </ul>	Enable

\* Visibility depends on order options or device settings

### 10.6.6 WLAN configuration

The **WLAN Settings** submenu guides the user systematically through all the parameters that have to be set for the WLAN configuration.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  WLAN Settings

► WLAN settings	
WLAN IP address	] → 🗎 112
Security type	) → 🗎 112
WLAN passphrase	) → 🗎 113
Assign SSID name	) → 🗎 113
SSID name	) → 🗎 113
Apply changes	→ 🗎 113

Parameter	Prerequisite	Description	User entry / Selection	Factory setting
WLAN IP address	-	Enter IP address of the device WLAN interface.	4 octet: 0 to 255 (in the particular octet)	192.168.1.212
Security type	-	Select the security type of the WLAN interface.	<ul><li>Unsecured</li><li>WPA2-PSK</li></ul>	WPA2-PSK

Parameter	Prerequisite	Description	User entry / Selection	Factory setting
WLAN passphrase	The <b>WPA2-PSK</b> option is selected in the <b>Security type</b> parameter.	Enter the network key (8 to 32 characters).  The network key supplied with the device should be changed during commissioning for security reasons.	8 to 32-digit character string comprising numbers, letters and special characters	Serial number of the measuring device (e.g. L100A802000)
Assign SSID name	-	Select which name will be used for SSID: device tag or user- defined name.	<ul><li>Device tag</li><li>User-defined</li></ul>	User-defined
SSID name	<ul> <li>The User-defined option is selected in the Assign SSID name parameter.</li> <li>The WLAN access point option is selected in the WLAN mode parameter.</li> </ul>	Enter the user-defined SSID name (max. 32 characters). The user-defined SSID name may only be assigned once. If the SSID name is assigned more than once, the devices can interfere with one another.	Max. 32-digit character string comprising numbers, letters and special characters	EH_device designation_last 7 digits of the serial number (e.g. EH_Promass_300_A 802000)
Apply changes	-	Use changed WLAN settings.	<ul><li>Cancel</li><li>Ok</li></ul>	Cancel

### 10.6.7 Configuration management

After commissioning, you can save the current device configurationor restore the previous device configuration.

You can do so using the **Configuration management** parameter and the related options found in the **Configuration backup** submenu.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Configuration backup

[	► Configuration backup				
	Operating time	) → 🗎 113			
	Last backup	) → 🗎 113			
	Configuration management	→ 🗎 114			
	Backup state	) → 🗎 114			
	Comparison result	→ 🗎 114			

Parameter	Description	User interface / Selection	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	-
Last backup	Shows when the last data backup was saved to embedded HistoROM.	Days (d), hours (h), minutes (m) and seconds (s)	-

Parameter	Description	User interface / Selection	Factory setting
Configuration management	Select action for managing the device data in the embedded HistoROM.	<ul> <li>Cancel</li> <li>Execute backup</li> <li>Restore</li> <li>Compare</li> <li>Clear backup data</li> </ul>	Cancel
Backup state	Shows the current status of data saving or restoring.	<ul> <li>None</li> <li>Backup in progress</li> <li>Restoring in progress</li> <li>Delete in progress</li> <li>Compare in progress</li> <li>Restoring failed</li> <li>Backup failed</li> </ul>	None
Comparison result	Comparison of current device data with embedded HistoROM.	<ul> <li>Settings identical</li> <li>Settings not identical</li> <li>No backup available</li> <li>Backup settings corrupt</li> <li>Check not done</li> <li>Dataset incompatible</li> </ul>	Check not done

#### Function scope of the "Configuration management" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Execute backup	A backup copy of the current device configuration is saved from the HistoROM backup to the memory of the device. The backup copy includes the transmitter data of the device.
Restore	The last backup copy of the device configuration is restored from the device memory to the device's HistoROM backup. The backup copy includes the transmitter data of the device.
Compare	The device configuration saved in the device memory is compared with the current device configuration of the HistoROM backup.
Clear backup data	The backup copy of the device configuration is deleted from the memory of the device.

### HistoROM backup

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

#### 10.6.8 Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

#### Navigation

 $\texttt{"Setup"} \texttt{menu} \rightarrow \texttt{Advanced setup} \rightarrow \texttt{Administration}$ 

► Administration		
	► Define access code	→ 🖺 115

► Reset access code	→ 🗎 115
Device reset	→ 🖺 116

#### Using the parameter to define the access code

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define access code

► Define access code	
Define access code	→ 🗎 115
Confirm access code	→ 🗎 115

#### Parameter overview with brief description

Parameter	Description	User entry
Define access code	Restrict write-access to parameters to protect the configuration of the device against unintentional changes.	Max. 16-digit character string comprising numbers, letters and special characters
Confirm access code	Confirm the entered access code.	Max. 16-digit character string comprising numbers, letters and special characters

#### Using the parameter to reset the access code

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Reset access code

► Reset access code	
Operating time	→ 🗎 115
Reset access code	→ 🗎 115

Parameter	Description	User interface / User entry	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	-
Reset access code	<ul> <li>Reset access code to factory settings.</li> <li>For a reset code, contact your Endress+Hauser service organization.</li> <li>The reset code can only be entered via:</li> <li>Web browser</li> <li>DeviceCare, FieldCare (via service interface CDI-RJ45)</li> <li>Fieldbus</li> </ul>	Character string comprising numbers, letters and special characters	0x00

#### Using the parameter to reset the device

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Administration

#### Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	<ul> <li>Cancel</li> <li>To delivery settings</li> <li>Restart device</li> <li>Restore S-DAT backup</li> <li>ENP restart</li> </ul>	Cancel


### 10.7 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

#### Navigation

"Diagnostics" menu → Simulation

► Simulation		
	Assign simulation process variable	→ 🗎 117
	Process variable value	→ 🖺 117
	Status input simulation	→ 🗎 117
	Input signal level	→ 🖺 117
	Current input 1 to n simulation	→ 🖺 117
	Value current input 1 to n	→ 🗎 117
	Current output 1 to n simulation	→ 🗎 117
	Value current output 1 to n	→ 🗎 117
	Frequency output simulation 1 to n	→ 🗎 117
	Frequency value 1 to n	→ 🖺 117
	Pulse output simulation 1 to n	→ 🖺 118
	Pulse value 1 to n	→ 🗎 118
	Switch output simulation 1 to n	→ 🗎 118

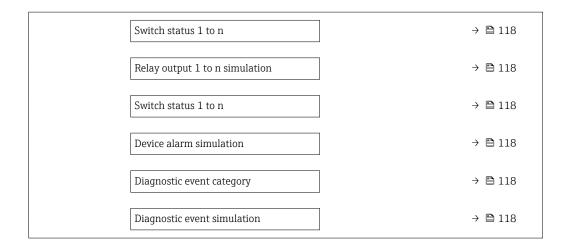

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign simulation process variable	-	Select a process variable for the simulation process that is activated.	<ul> <li>Off</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Target mass flow*</li> <li>Carrier mass flow*</li> <li>Concentration*</li> </ul>	Off
Process variable value	A process variable is selected in the <b>Assign simulation</b> <b>process variable</b> parameter $(\rightarrow \cong 117)$ .	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Status input simulation	-	Switch simulation of the status input on and off.	<ul><li>Off</li><li>On</li></ul>	Off
Input signal level	In the <b>Status input simulation</b> parameter, the <b>On</b> option is selected.	Select the signal level for the simulation of the status input.	<ul><li>High</li><li>Low</li></ul>	High
Current input simulation	-	Switch simulation of the current input on and off.	<ul><li>Off</li><li>On</li></ul>	Off
Value current input	In the <b>Current input 1 to n</b> <b>simulation</b> parameter, the <b>On</b> option is selected.	Enter the current value for simulation.	0 to 22.5 mA	0 mA
Current output simulation	-	Switch the simulation of the current output on and off.	<ul><li>Off</li><li>On</li></ul>	Off
Value current output	In the <b>Current output 1 to n</b> simulation parameter, the <b>On</b> option is selected.	Enter the current value for simulation.	3.59 to 22.5 mA	3.59 mA
Frequency output simulation	In the <b>Operating mode</b> parameter, the <b>Frequency</b> option is selected.	Switch the simulation of the frequency output on and off.	<ul><li>Off</li><li>On</li></ul>	Off
Frequency value	In the <b>Frequency output</b> <b>simulation 1 to n</b> parameter, the <b>On</b> option is selected.	Enter the frequency value for the simulation.	0.0 to 12500.0 Hz	0.0 Hz

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Pulse output simulation	In the <b>Operating mode</b> parameter, the <b>Pulse</b> option is selected.	<ul> <li>Set and switch off the pulse output simulation.</li> <li>For Fixed value option: Pulse width parameter (→</li></ul>	<ul> <li>Off</li> <li>Fixed value</li> <li>Down-counting value</li> </ul>	Off
Pulse value	In the <b>Pulse output</b> simulation 1 to n parameter, the <b>Down-counting value</b> option is selected.	Enter the number of pulses for simulation.	0 to 65 535	0
Switch output simulation	In the <b>Operating mode</b> parameter, the <b>Switch</b> option is selected.	Switch the simulation of the switch output on and off.	<ul><li>Off</li><li>On</li></ul>	Off
Switch status	-	Select the status of the status output for the simulation.	<ul><li> Open</li><li> Closed</li></ul>	Open
Relay output simulation	-	Switch simulation of the relay output on and off.	<ul><li>Off</li><li>On</li></ul>	Off
Switch status	The <b>On</b> option is selected in the <b>Switch output simulation</b> <b>1 to n</b> parameter parameter.	Select status of the relay output for the simulation.	<ul><li> Open</li><li> Closed</li></ul>	Open
Pulse output simulation	_	Set and switch off the pulse output simulation. For Fixed value option: Pulse width parameter defines the pulse width of the pulses output.	<ul> <li>Off</li> <li>Fixed value</li> <li>Down-counting value</li> </ul>	Off
Pulse value	In the <b>Pulse output</b> simulation parameter, the <b>Down-counting value</b> option is selected.	Set and switch off the pulse output simulation.	0 to 65 535	0
Device alarm simulation	-	Switch the device alarm on and off.	<ul><li>Off</li><li>On</li></ul>	Off
Diagnostic event category	-	Select a diagnostic event category.	<ul><li>Sensor</li><li>Electronics</li><li>Configuration</li><li>Process</li></ul>	Process
Diagnostic event simulation	-	Select a diagnostic event to simulate this event.	<ul> <li>Off</li> <li>Diagnostic event picklist (depends on the category selected)</li> </ul>	Off
Logging interval	-	Define the logging interval tlog for data logging. This value defines the time interval between the individual data points in the memory.	1.0 to 3 600.0 s	-

\* Visibility depends on order options or device settings

### **10.8** Protecting settings from unauthorized access

The following write protection options exist in order to protect the configuration of the measuring device from unintentional modification:

- Protect access to parameters via access code  $\rightarrow \implies 119$
- Protect access to local operation via key locking  $\rightarrow$   $\cong$  58
- Protect access to measuring device via write protection switch  $\rightarrow$   $\cong$  120
- Protect access to parameters via block operation  $\rightarrow \square$  121

#### 10.8.1 Write protection via access code

The effects of the user-specific access code are as follows:

- Via local operation, the parameters for the measuring device configuration are writeprotected and their values can no longer be changed.
- Device access is protected via the Web browser, as are the parameters for the measuring device configuration.
- Device access is protected via FieldCare or DeviceCare (via CDI-RJ45 service interface), as are the parameters for the measuring device configuration.

#### Defining the access code via local display

**1.** Navigate to the **Define access code** parameter ( $\Rightarrow \square 115$ ).


- 2. Define a max. 16-digit character string comprising numbers, letters and special characters as the access code.
- 3. Enter the access code again in the **Confirm access code** parameter (→ 🗎 115) to confirm the code.
  - ← The 🖻-symbol appears in front of all write-protected parameters.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.

- If parameter write protection is activated via an access code, it can also only be deactivated via this access code  $\rightarrow \cong 57$ .

#### Parameters which can always be modified via the local display

Certain parameters that do not affect the measurement are excepted from parameter write protection via the local display. Despite the user-specific access code, they can always be modified, even if the other parameters are locked.

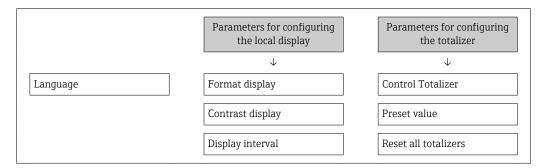

#### Defining the access code via the Web browser

**1.** Navigate to the **Define access code** parameter ( $\rightarrow \implies 115$ ).

- 2. Define a max. 16-digit numeric code as an access code.
- **3.** Enter the access code again in the **Confirm access code** parameter ( $\rightarrow \implies 115$ ) to confirm the code.
  - ← The Web browser switches to the login page.

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

- If parameter write protection is activated via an access code, it can also only be deactivated via this access code → 
   57.
  - The user role with which the user is currently logged on via Web browser is indicated by the Access status parameter. Navigation path: Operation → Access status

#### Resetting the access code

If you misplace the user-specific access code, it is possible to reset the code to the factory setting. A reset code must be entered for this purpose. The user-specific access code can then be defined again afterwards.

#### Via Web browser, FieldCare, DeviceCare (via CDI-RJ45 service interface), fieldbus

For a reset code, contact your Endress+Hauser service organization.


- **1.** Navigate to the **Reset access code** parameter ( $\Rightarrow \triangleq 115$ ).
- 2. Enter the reset code.
  - → The access code has been reset to the factory setting **0000**. It can be redefined  $\rightarrow \triangleq 119$ .

#### 10.8.2 Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows write access to the entire operating menu - except for the **"Contrast display" parameter** - to be locked.


The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via FOUNDATION Fieldbus

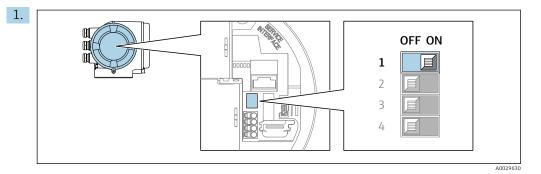

Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection.

→ In the Locking status parameter the Hardware locked option is displayed
 → ● 122. In addition, on the local display the @-symbol appears in front of the parameters in the header of the operational display and in the navigation view.

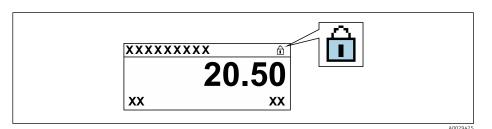

- 2. Setting the write protection (WP) switch on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.

#### 10.8.3 Write protection via block operation

Locking via block operation:

- Block: DISPLAY (TRDDISP); parameter: Define access code
- Block: EXPERT\_CONFIG (TRDEXP); parameter: Enter access code

### 11 Operation

### 11.1 Reading the device locking status

Device active write protection: Locking status parameter

Operation  $\rightarrow$  Locking status

Function scope of the "Locking status" parameter

Options	Description
None	The access status displayed in the Access status parameter applies $\Rightarrow \square 57$ . Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool) .
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

### 11.2 Adjusting the operating language

**1** Detailed information:

- To configure the operating language  $\rightarrow$   $\cong$  77
- For information on the operating languages supported by the measuring device  $\rightarrow~\textcircled{}$  201

### 11.3 Configuring the display

Detailed information:

- On the basic settings for the local display  $\rightarrow$   $\bigcirc$  99
- On the advanced settings for the local display  $\rightarrow \square$  109

### 11.4 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

#### Navigation

"Diagnostics" menu → Measured values

► Measured values	
► Measured variables	) → 🗎 123
► Input values	) → 🗎 125
► Output values	) → 🗎 126
► Totalizer	) → 🗎 124

#### 11.4.1 "Measured variables" submenu

The **Measured variables** submenu contains all the parameters needed to display the current measured values for each process variable.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Measured variables

► Measured variables	
Mass flow	) → 🗎 123
Volume flow	] → 🗎 123
Corrected volume flow	) → 🗎 123
Density	→ 🗎 123
Reference density	) → 🗎 124
Temperature	) → 🗎 124
Pressure value	) → 🗎 124
Concentration	] → 🗎 124
Target mass flow	) → 🗎 124
Carrier mass flow	) → 🗎 124

Parameter	Prerequisite	Description	User interface
Mass flow	-	Displays the mass flow currently measured.	Signed floating-point number
		Dependency The unit is taken from the <b>Mass flow</b> <b>unit</b> parameter ( $\rightarrow$ 🗎 80).	
Volume flow	-	Displays the volume flow currently calculated.	Signed floating-point number
		Dependency The unit is taken from the Volume flow unit parameter ( $\rightarrow \square 80$ ).	
Corrected volume flow	-	Displays the corrected volume flow currently calculated.	Signed floating-point number
		Dependency The unit is taken from the <b>Corrected</b> <b>volume flow unit</b> parameter $(\rightarrow \cong 80).$	
Density	-	Shows the density currently measured. <i>Dependency</i> The unit is taken from the <b>Density unit</b> parameter ( $\rightarrow \cong$ 80).	Signed floating-point number

Parameter	Prerequisite	Description	User interface
Reference density	-	Displays the reference density currently calculated. <i>Dependency</i> The unit is taken from the <b>Reference</b> <b>density unit</b> parameter ( $\rightarrow \cong 80$ ).	Signed floating-point number
Temperature	-	Shows the medium temperature currently measured. Dependency The unit is taken from the <b>Temperature unit</b> parameter $(\rightarrow \cong 81).$	Signed floating-point number
Pressure value	-	Displays either a fixed or external pressure value. Dependency The unit is taken from the <b>Pressure</b> <b>unit</b> parameter ( $\rightarrow \cong 81$ ).	Signed floating-point number
Concentration	For the following order code: Order code for "Application package", option ED "Concentration" The software options currently enabled are displayed in the Software option overview parameter.	Displays the concentration currently calculated. <i>Dependency</i> The unit is taken from the <b>Concentration unit</b> parameter.	Signed floating-point number
Target mass flow	With the following conditions: Order code for "Application package", option ED "Concentration" The software options currently enabled are displayed in the Software option overview parameter.	Displays the mass flow currently measured for the target medium. Dependency The unit is taken from the <b>Mass flow</b> <b>unit</b> parameter ( $\rightarrow \square 80$ ).	Signed floating-point number
Carrier mass flow	With the following conditions: Order code for "Application package", option <b>ED</b> "Concentration" The software options currently enabled are displayed in the <b>Software option overview</b> parameter.	Displays the mass flow currently measured for the carrier medium. Dependency The unit is taken from the <b>Mass flow unit</b> parameter ( $\rightarrow \square 80$ ).	Signed floating-point number

### 11.4.2 "Totalizer" submenu

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Totalizer

► Totalizer	
Totalizer value 1 to n	→ 🗎 125
Totalizer overflow 1 to n	→  \u00e9 125

Parameter	Prerequisite	Description	User interface
Totalizer value 1 to n	A process variable is selected in the <b>Assign process variable</b> parameter $(\rightarrow  108)$ of the <b>Totalizer 1 to n</b> submenu.	Displays the current totalizer counter value.	Signed floating-point number
Totalizer overflow 1 to n	A process variable is selected in the <b>Assign process variable</b> parameter $(\rightarrow \boxdot 108)$ of the <b>Totalizer 1 to n</b> submenu.	Displays the current totalizer overflow.	Integer with sign

#### Parameter overview with brief description

### 11.4.3 "Input values" submenu

The **Input values** submenu guides you systematically to the individual input values.

#### Navigation

"Diagnostics" menu → Measured values → Input values


► Input values	
► Current input 1 to n	→ 🗎 125
► Status input 1 to n	→ 🗎 125

#### Input values of current input

The **Current input 1 to n** submenu contains all the parameters needed to display the current measured values for every current input.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Input values  $\rightarrow$  Current input 1 to n

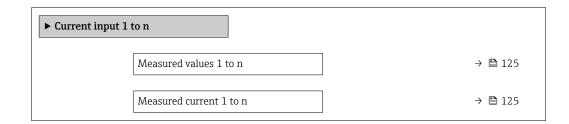

#### Parameter overview with brief description

Parameter	Description	User interface
Measured values	Displays the current input value.	Signed floating-point number
Measured current	Displays the current value of the current input.	0 to 22.5 mA

#### Input values of status input

The **Status input 1 to n** submenu contains all the parameters needed to display the current measured values for every status input.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Input values  $\rightarrow$  Status input 1 to n

► Status input 1 to n		
Value status input		→ 🗎 126

#### Parameter overview with brief description


Parameter	Description	User interface
Value status input	Shows the current input signal level.	<ul><li>High</li><li>Low</li></ul>

#### 11.4.4 Output values

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Output values

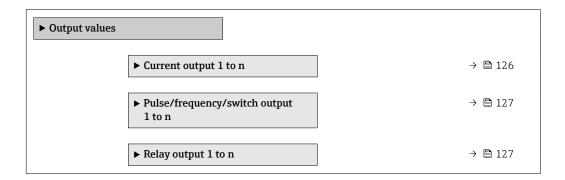


#### Output values of current output

The **Value current output** submenu contains all the parameters needed to display the current measured values for every current output.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Output values  $\rightarrow$  Value current output 1 to n

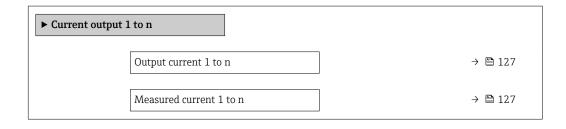

#### Parameter overview with brief description

Parameter	Description	User interface
Output current 1	Displays the current value currently calculated for the current output.	3.59 to 22.5 mA
Measured current	Displays the current value currently measured for the current output.	0 to 30 mA

#### Output values for pulse/frequency/switch output

The **Pulse/frequency/switch output 1 to n** submenu contains all the parameters needed to display the current measured values for every pulse/frequency/switch output.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Output values  $\rightarrow$  Pulse/frequency/switch output 1 to n

Pulse/frequency/switch output 1 to n	
Output frequency 1 to n	→ 🗎 127
Pulse output 1 to n	→ 🗎 127
Switch status 1 to n	→ 🗎 127

#### Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Output frequency	In the <b>Operating mode</b> parameter, the <b>Frequency</b> option is selected.	Displays the value currently measured for the frequency output.	0.0 to 12 500.0 Hz
Pulse output	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter parameter.	Displays the pulse frequency currently output.	Positive floating-point number
Switch status	The <b>Switch</b> option is selected in the <b>Operating mode</b> parameter.	Displays the current switch output status.	<ul><li> Open</li><li> Closed</li></ul>

#### Output values for relay output

The **Relay output 1 to n** submenu contains all the parameters needed to display the current measured values for every relay output.

#### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Output values  $\rightarrow$  Relay output 1 to n

► Relay output 1 to n	
Switch status	] → 🗎 128
Switch cycles	] → 🗎 128
Max. switch cycles number	] → 🗎 128

#### Parameter overview with brief description

Parameter	Description	User interface
Switch status	Shows the current relay switch status.	<ul><li> Open</li><li> Closed</li></ul>
Switch cycles	Shows number of all performed switch cycles.	Positive integer
Max. switch cycles number	Shows the maximal number of guaranteed switch cycles.	Positive integer

# 11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

• Basic settings using the Setup menu ( $\rightarrow \square 78$ )

• Advanced settings using the Advanced setup submenu ( $\rightarrow \square 104$ )


### **11.6** Performing a totalizer reset

The totalizers are reset in the **Operation** submenu:

- Control Totalizer
- Reset all totalizers

#### Navigation

"Operation" menu  $\rightarrow$  Totalizer handling

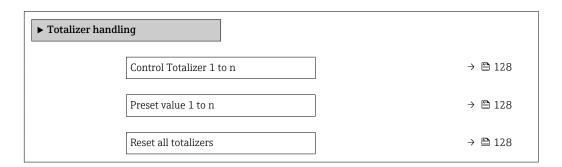

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Control Totalizer 1 to n	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \bigoplus 108$ ) of the <b>Totalizer 1 to n</b> submenu.	Control totalizer value.	<ul> <li>Totalize</li> <li>Reset + hold</li> <li>Preset + hold</li> <li>Reset + totalize</li> <li>Preset + totalize</li> <li>Hold</li> </ul>	Totalize
Preset value 1 to n	A process variable is selected in the Assign process variable parameter ( $\rightarrow \bigoplus 108$ ) of the Totalizer 1 to n submenu.	<ul> <li>Specify start value for totalizer.</li> <li>Dependency</li> <li>The unit of the selected process variable is specified for the totalizer in the Unit totalizer parameter (→          108).     </li> </ul>	Signed floating-point number	Country-specific: • 0 kg • 0 lb
Reset all totalizers	-	Reset all totalizers to 0 and start.	<ul><li>Cancel</li><li>Reset + totalize</li></ul>	Cancel

Options	Description
Totalize	The totalizer is started or continues running.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the <b>Preset value</b> parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.
Preset + totalize	The totalizer is set to the defined start value from the <b>Preset value</b> parameter and the totaling process is restarted.
Hold	Totalizing is stopped.

#### 11.6.1 Function scope of the "Control Totalizer" parameter

#### 11.6.2 Function scope of the "Reset all totalizers" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized.

### 11.7 Showing data logging

 
The **Extended HistoROM** application package must be enabled in the device (order option) for the **Data logging** submenu to appear. This contains all the parameters for the measured value history.

Data logging is also available via:

- Plant Asset Management Tool FieldCare  $\rightarrow \cong 68$ .
- Web browser

#### Function range

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Display of the measured value trend for each logging channel in the form of a chart

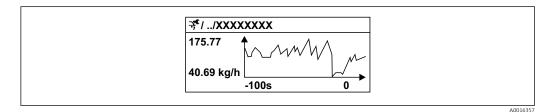

☑ 26 Chart of a measured value trend

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

Navigation "Diagnostics" menu → Data logging

► Data loggir	ıg	
	Assign channel 1	→ 🗎 131
	Assign channel 2	→  131
	Assign channel 3	→ 🗎 131
	Assign channel 4	→ 🗎 131
	Logging interval	→ 🗎 132
	Clear logging data	→ 🗎 132
	Data logging	→ 🗎 132
	Logging delay	→ 🗎 132
	Data logging control	→ 🗎 132
	Data logging status	→ 🗎 132
	Entire logging duration	→ 🗎 132
	► Display channel 1	
	► Display channel 2	
	► Display channel 3	
	► Display channel 4	

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign channel 1	The Extended HistoROM application package is available.	Assign process variable to logging channel.	<ul> <li>Off</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Target mass flow *</li> <li>Target mass flow *</li> <li>Density</li> <li>Reference density</li> <li>Concentration *</li> <li>Temperature</li> <li>Carrier pipe temperature</li> <li>Electronic temperature</li> <li>Oscillation frequency 0</li> <li>Frequency fluctuation 0</li> <li>Oscillation amplitude *</li> <li>Oscillation damping 0</li> <li>Oscillation damping fluctuation 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>Current output 1</li> <li>Current output 3 *</li> <li>Current output 4 *</li> <li>HBSI*</li> </ul>	Off
Assign channel 2	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign process variable to logging channel.	Picklist, see <b>Assign</b> <b>channel 1</b> parameter (→ 🗎 131)	Off
Assign channel 3	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign process variable to logging channel.	Picklist, see <b>Assign</b> channel 1 parameter (→ 🗎 131)	Off
Assign channel 4	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign process variable to logging channel.	Picklist, see <b>Assign</b> channel 1 parameter (→ 🗎 131)	Off

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Logging interval	The <b>Extended HistoROM</b> application package is available.	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	0.1 to 999.0 s	1.0 s
Clear logging data	The <b>Extended HistoROM</b> application package is available.	Clear the entire logging data.	<ul><li>Cancel</li><li>Clear data</li></ul>	Cancel
Data logging	-	Select the data logging method.	<ul><li> Overwriting</li><li> Not overwriting</li></ul>	Overwriting
Logging delay	In the <b>Data logging</b> parameter, the <b>Not</b> <b>overwriting</b> option is selected.	Enter the time delay for measured value logging.	0 to 999 h	0 h
Data logging control	In the <b>Data logging</b> parameter, the <b>Not</b> <b>overwriting</b> option is selected.	Start and stop measured value logging.	<ul><li>None</li><li>Delete + start</li><li>Stop</li></ul>	None
Data logging status	In the <b>Data logging</b> parameter, the <b>Not</b> <b>overwriting</b> option is selected.	Displays the measured value logging status.	<ul> <li>Done</li> <li>Delay active</li> <li>Active</li> <li>Stopped</li> </ul>	Done
Entire logging duration	In the <b>Data logging</b> parameter, the <b>Not</b> <b>overwriting</b> option is selected.	Displays the total logging duration.	Positive floating- point number	0 s

\* Visibility depends on order options or device settings

### 12 Diagnostics and troubleshooting

### 12.1 General troubleshooting

#### For local display

Error	Possible causes	Solution
Local display dark and no output signals	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage $\rightarrow \cong 36.$
Local display dark and no output signals	The polarity of the supply voltage is wrong.	Correct the polarity.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly. Terminals are not plugged into the main electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective. Main electronics module is defective.	Order spare part → 🗎 175.
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	<ul> <li>Set the display brighter by simultaneously pressing ± + E.</li> <li>Set the display darker by simultaneously pressing □ + E.</li> </ul>
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part $\rightarrow \square$ 175.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures → 🗎 145
Text on local display appears in a foreign language and cannot be understood.	Incorrect operating language is configured.	<ol> <li>Press □ +  tor 2 s ("home position").</li> <li>Press □.</li> <li>Set the desired language in the <b>Display language</b> parameter (→ □ 111).</li> </ol>
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	<ul> <li>Check the cable and the connector between the main electronics module and display module.</li> <li>Order spare part →          <sup>1</sup> 175.</li> </ul>

#### For output signals

Error	Possible causes	Solution
Signal output outside the valid range	Main electronics module is defective.	Order spare part → 🗎 175.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Configuration error	Check and correct the parameter configuration.
Device measures incorrectly.	Configuration error or device is operated outside the application.	<ol> <li>Check and correct parameter configuration.</li> <li>Observe limit values specified in the "Technical Data".</li> </ol>

#### Error Possible causes Solution No write access to parameters Hardware write protection enabled Set the write protection switch on main electronics module to the $\ensuremath{\textbf{OFF}}$ position $\rightarrow \square$ 120. No write access to parameters Current user role has limited access 1. Check user role $\rightarrow \square 57$ . authorization 2. Enter correct customer-specific access code $\rightarrow \square 57$ . No connection via FOUNDATION Device plug connected incorrectly Check the pin assignment of the Fieldbus connector . Not connecting to Web server Web server disabled Using the "FieldCare" or "DeviceCare" operating tool, check whether the Web server of the measuring device is enabled, and enable it if necessary $\rightarrow \square 64$ . Incorrect setting for the Ethernet 1. Check the properties of the interface of the computer Internet protocol (TCP/IP) $\rightarrow \square 60 \rightarrow \square 60.$ 2. Check the network settings with the IT manager. Incorrect IP address Check the IP address: Not connecting to Web server $192,168,1,212 \rightarrow \square 60 \rightarrow \square 60$ • Check WLAN network status. Not connecting to Web server Incorrect WLAN access data Log on to the device again using WLAN access data. Verify that WLAN is enabled on the measuring device and operating device $\rightarrow \square 60$ . WLAN communication disabled Not connecting to Web server, No WLAN network available Check if WLAN reception is FieldCare or DeviceCare present: LED on display module is lit blue Check if WLAN connection is enabled: LED on display module flashes blue • Switch on instrument function. Network connection not present or WLAN network is weak. Operating device is outside of unstable reception range: Check network status on operating device. To improve network performance, use an external WLAN antenna Parallel WLAN and Ethernet Check network settings. communication . Temporarily enable only the WLAN as an interface. Web browser frozen and operation Wait until data transfer or current Data transfer active no longer possible action is finished. 1. Check cable connection and Connection lost power supply. 2. Refresh the Web browser and restart if necessary. Content of Web browser 1. Use the correct Web browser Not using optimum version of Web incomplete or difficult to read server. version $\rightarrow \blacksquare 59$ . 2. Clear the Web browser cache and restart the Web browser. Unsuitable view settings. Change the font size/display ratio of the Web browser. No or incomplete display of JavaScript not enabled 1. Enable JavaScript. contents in the Web browser JavaScript cannot be enabled 2. Enter http://XXX.XXX.X.XXX/ basic.html as the IP address.


#### For access

Error	Possible causes	Solution
Operation with FieldCare or DeviceCare via CDI-RJ45 service interface (port 8000)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.
Flashing of firmware with FieldCare or DeviceCare via CDI-RJ45 service interface (via port 8000 or TFTP ports)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.

#### 12.2 Diagnostic information via light emitting diodes

#### 12.2.1 Transmitter

Different LEDs in the transmitter provide information on the device status.

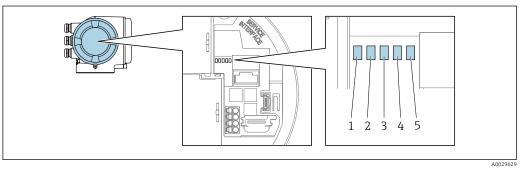


- Supply voltage Device status 1
- 2
- 3 Not used
- 4 Communication
- 5 Service interface (CDI) active

LED		Color	Meaning
1	Supply voltage	Green	Supply voltage is ok.
		Off	Supply voltage is off or too low.
2	Device status (normal	Red	Problem
	operation)	Flashing red	Warning
2	Device status (during	Flashes red slowly	If $> 30$ seconds: problem with the boot loader.
	start-up)	Flashes red quickly	If > 30 seconds: compatibility problem when reading the firmware.
3	Not used	-	-
4	Communication	White	Communication active.
5	Service interface (CDI)	Yellow	Connection established.
		Flashing yellow	Communication active.
		Off	No connection.

### 12.3 Diagnostic information on local display

#### 12.3.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

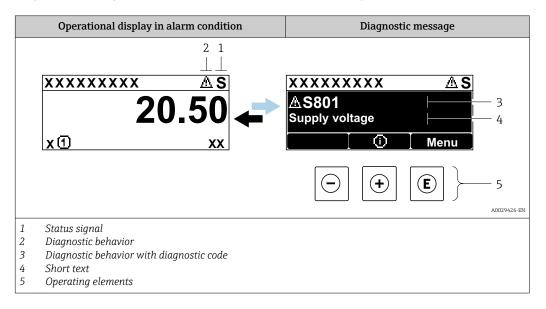

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.


Other diagnostic events that have occurred can be displayed in the **Diagnostics** menu:

- Via parameter  $\rightarrow \square 166$
- Via submenus  $\rightarrow \square 167$

#### Status signals

 •

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

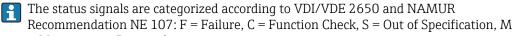

= Maintenance Required


Symbol	Meaning	
F	<b>Failure</b> A device error has occurred. The measured value is no longer valid.	
С	<b>C Function check</b> The device is in service mode (e.g. during a simulation).	
S Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature rar		
М	Maintenance required Maintenance is required. The measured value remains valid.	

#### Diagnostic behavior

Symbol	Meaning
8	<ul> <li>Alarm</li> <li>Measurement is interrupted.</li> <li>Signal outputs and totalizers assume the defined alarm condition.</li> <li>A diagnostic message is generated.</li> </ul>
Δ	Warning Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.


#### **Diagnostic information**

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

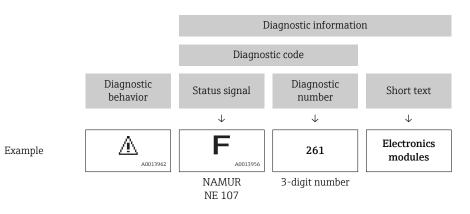


#### **Operating elements**

Key	Meaning
(+)	Plus key In a menu, submenu Opens the message about remedy information.
E	Enter key In a menu, submenu Opens the operating menu.

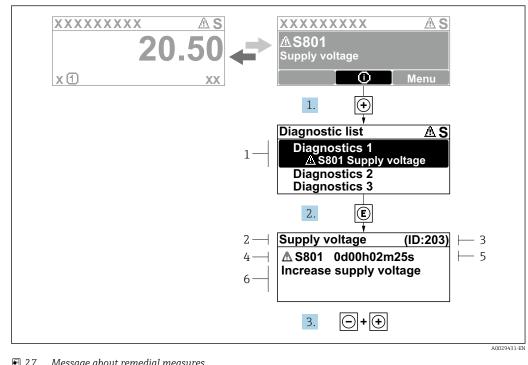

#### 12.3.2 Calling up remedial measures

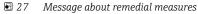 

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- Diagnostic behavior with diagnostic code 4 5
- Operation time of occurrence 6 Remedial measures
- 1. The user is in the diagnostic message.

Press 🛨 (① symbol).

- └ The **Diagnostic list** submenu opens.
- **2.** Select the desired diagnostic event with  $\pm$  or  $\Box$  and press  $\mathbb{E}$ .
  - └ The message about the remedial measures opens.
- 3. Press  $\Box$  +  $\pm$  simultaneously.
  - └ The message about the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the Diagnostic list submenu or Previous diagnostics parameter.

- 1. Press E.
  - └ The message for the remedial measures for the selected diagnostic event opens.
- **2.** Press  $\Box$  +  $\pm$  simultaneously.
  - └ The message for the remedial measures closes.

#### 12.4 Diagnostic information in the Web browser

#### 12.4.1 **Diagnostic options**

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

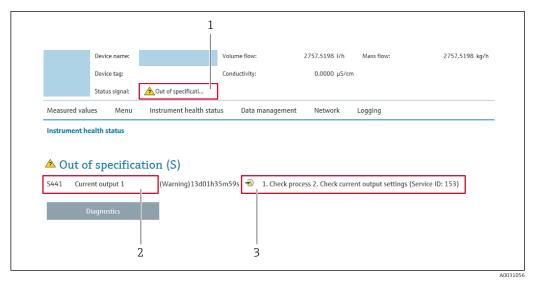

- 1 Status area with status signal
- 2 Diagnostic information
- 3 Remedy information with Service ID

In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter  $\rightarrow \square 166$
- Via submenu → 
   <sup>167</sup>
   <sup>167</sup>

#### Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
$\otimes$	<b>Failure</b> A device error has occurred. The measured value is no longer valid.
V	<b>Function check</b> The device is in service mode (e.g. during a simulation).
2	Out of specificationThe device is operated:Outside its technical specification limits (e.g. outside the process temperature range)
$\diamond$	Maintenance required Maintenance is required. The measured value is still valid.

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.


#### 12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

### 12.5 Diagnostic information in FieldCare or DeviceCare

#### 12.5.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

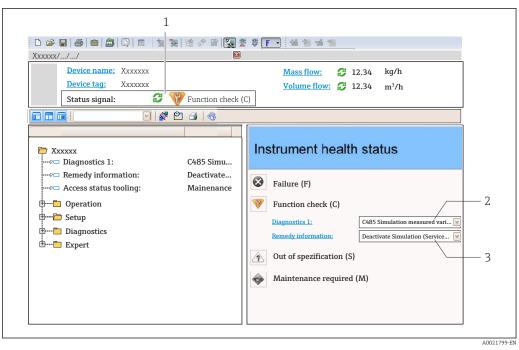


- 1 Status area with status signal  $\rightarrow \cong 136$
- 2 Diagnostic information → 🗎 137
- 3 Remedy information with Service ID

In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter  $\rightarrow \square 166$
- Via submenu → 🖺 167

#### **Diagnostic information**

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

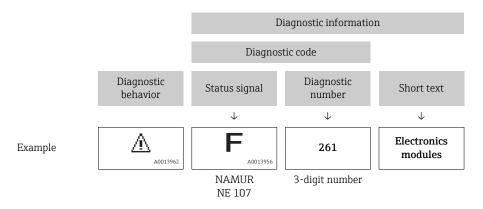

#### 12.5.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
- Remedy information is displayed in a separate field below the diagnostics information. In the **Diagnostics** menu

Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

 
- 1. Call up the desired parameter.
- 2. On the right in the working area, mouse over the parameter.
  - └ A tool tip with remedy information for the diagnostic event appears.

### 12.6 Adapting the diagnostic information

#### 12.6.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

Expert  $\rightarrow$  System  $\rightarrow$  Diagnostic handling  $\rightarrow$  Diagnostic behavior

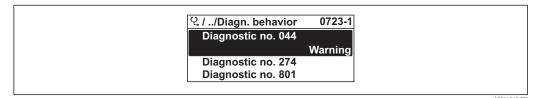

■ 28 Taking the example of the local display

You can assign the following options to the diagnostic number as the diagnostic behavior:

Options	Description
Alarm	The device stops measurement. The signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated. The background lighting changes to red.
Warning	The device continues to measure. The signal outputs and totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is displayed only in the <b>Event logbook</b> submenu ( <b>Event list</b> submenu) and is not displayed in alternation with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

#### 12.6.2 Adapting the status signal

Each item of diagnostic information is assigned a specific status signal at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic** event category submenu.

Expert  $\rightarrow$  Communication  $\rightarrow$  Diagnostic event category

#### Available status signals

Configuration as per FOUNDATION Fieldbus Specification (FF912), in accordance with NAMUR NE107.

Symbol		Meaning
F	A0013956	Failure A device error is present. The measured value is no longer valid.
С	A0013959	<b>Function check</b> The device is in service mode (e.g. during a simulation).

Symbol	Meaning				
<b>S</b> A0013958	<ul> <li>Out of specification</li> <li>The device is being operated:</li> <li>Outside its technical specification limits (e.g. outside the process temperature range)</li> <li>Outside of the configuration carried out by the user (e.g. maximum flow in parameter 20 mA value)</li> </ul>				
M	Maintenance required Maintenance is required. The measured value is still valid.				

#### Enabling the configuration of the diagnostic information according to FF912

For compatibility reasons, the configuration of the diagnostic information according to FOUNDATION Fieldbus Specification FF912 is not enabled when the device is delivered from the factory.

## Enabling the configuration of the diagnostic information according to FOUNDATION Fieldbus Specification FF912

1. Open the Resource block.

- 2. In Feature Selection parameter, select Multi-bit Alarm (Bit-Alarm) Support option.
  - ← The diagnostic information can be configured according to FOUNDATION Fieldbus Specification FF912.

#### Grouping the diagnostic information

Diagnostic information is assigned to different groups. The groups differ depending on the weighting (severity) of the diagnostic event:

- Highest weighting
- High weighting
- Low weighting

#### Assignment of the diagnostic information (factory setting)

The assignment of the diagnostic information ex-works is indicated in the following tables.

The individual ranges of the diagnostic information can be assigned to another status signal  $\rightarrow \cong 143$ .

Some diagnostic information can be assigned individually, irrespective of their range  $\rightarrow \cong 144$ .

P Overview and description of all diagnostic information  $\rightarrow$  145

Weighting	Status signal (factory setting)	Allocation Diagnostic information range	
Highest	Failure (F)	Sensor	F000 to 199
		Electronics	F200 to 399
		Configuration	F400 to 700
		Process	F800 to 999

Weighting	Status signal (factory setting)	Allocation	Diagnostic information range		
High	Function check (C)	Sensor	C000 to 199		
		Electronics	C200 to 399		

Weighting	Status signal (factory setting)	Allocation	Diagnostic information range		
		Configuration	C400 to 700		
		Process	C800 to 999		

Weighting	Status signal (factory setting)	Allocation Diagnostic information range	
Low Out of specification (S)		Sensor	S000 to 199
		Electronics	S200 to 399
		Configuration	S400 to 700
		Process	S800 to 999

Weighting	Status signal (factory setting)	Allocation Diagnostic information range	
Low Maintenance required (M)		Sensor	M000 to 199
		Electronics	M200 to 399
		Configuration	M400 to 700
		Process	M800 to 999

#### Changing the assignment of the diagnostic information

The individual ranges of the diagnostic information can be assigned to another status signal. This is done by changing the bit in the associated parameter. The bit change always applies for the entire range of the diagnostic information.

Some diagnostic information can be assigned individually, irrespective of their range  $\rightarrow \cong 144$ 

Each status signal has a parameter in the Resource Block in which it is possible to define the diagnostic event for which the status signal is transmitted:

- Failure (F): **FD\_FAIL\_MAP** parameter
- Function check (C): **FD\_CHECK\_MAP** parameter
- Out of specification (S): FD\_OFFSPEC\_MAP parameter
- Maintenance required (M): FD\_MAINT\_MAP parameter

Structure and assignment of the parameters for the status signals (factory setting)

Weighting	Allocation	Bit	FD_ FAIL_ MAP	FD_ CHECK_ MAP	FD_ OFFSPEC_ MAP	FD_ MAINT_ MAP
Highest	Sensor	31	1	0	0	0
	Electronics	30	1	0	0	0
	Configuration	29	1	0	0	0
	Process	28	1	0	0	0
High	Sensor	27	0	1	0	0
	Electronics	26	0	1	0	0
	Configuration	25	0	1	0	0
	Process	24	0	1	0	0
Low	Sensor	23	0	0	1	0
	Electronics	22	0	0	1	0
	Configuration	21	0	0	1	0

Weighting	Allocation	Bit	FD_ FAIL_ MAP	FD_ CHECK_ MAP	FD_ OFFSPEC_ MAP	FD_ MAINT_ MAP
	Process	20	0	0	1	0
Low	Sensor	19	0	0	0	1
	Electronics	18	0	0	0	1
	Configuration	17	0	0	0	1
	Process	16	0	0	0	1
Configurable range $\rightarrow \square 144$		15 to 1	0	0	0	0
Reserved (Fieldbus Foundation)		0	0	0	0	0

#### Changing the status signal for a range of diagnostic information

Example: The status signal for the diagnostic information for electronics with the "Highest" weighting is to be changed from failure (F) to function check (C).

- 1. Set the Resource Block to the **OOS** block mode.
- 2. Open the **FD\_FAIL\_MAP** parameter in the Resource Block.
- 3. Change **Bit 30** to **0** in the parameter.
- 4. Open the **FD\_CHECK\_MAP** parameter in the Resource Block.
- 5. Change **Bit 26** to **1** in the parameter.
  - If a diagnostic event occurs for electronics with the "Highest weighting", the diagnostic information to this effect is displayed with the function check (C) status signal.
- 6. Set the Resource Block to the **AUTO** block mode.

#### NOTICE

#### No status signal is assigned to an area of diagnostic information.

If a diagnostic event occurs in this area, no status signal is transmitted to the control system.

 If you are changing the parameters, make sure that a status signal is assigned to all areas.

If FieldCare is used, the status signal is enabled and disabled using the check box of the particular parameter.

#### Assigning diagnostic information individually to a status signal

Some diagnostic information can be individually assigned to a status signal, irrespective of their original range.

Assigning diagnostic information individually to a status signal via FieldCare.

- In the FieldCare navigation window: Expert → Communication → Field diagnostics
   → Alarm detection enable
- 2. Select the desired diagnostic information from one of the fields **Configurable Area Bits 1** to **Configurable Area Bits 15**.
- 3. Press Enter to confirm.
- When selecting the desired status signal (e.g. Offspec Map), also select the Configurable Area Bit 1 to Configurable Area Bit 15 that was assigned previously to the diagnostic information (step 2).
- 5. Press Enter to confirm.
  - └ The diagnostic event of the selected diagnostic information is recorded.

- 6. In the FieldCare navigation window: **Expert**  $\rightarrow$  **Communication**  $\rightarrow$  **Field diagnostics**  $\rightarrow$  Alarm broadcast enable
- 7. Select the desired diagnostic information from one of the fields **Configurable Area** Bits 1 to Configurable Area Bits 15.
- 8. Press Enter to confirm.
- 9. When selecting the desired status signal (e.g. Offspec Map), also select the Configurable Area Bit 1 to Configurable Area Bit 15 that was assigned previously to the diagnostic information (step 7).
- 10. Press Enter to confirm.
  - ← The selected diagnostic information is transmitted over the bus when a diagnostic event to this effect occurs.
  - A change in the status signal does not affect diagnostic information that already exists. The new status signal is only assigned if this error occurs again after the status signal has changed.

#### Transmitting the diagnostic information over the bus

Prioritizing diagnostic information for transmission over the bus

Diagnostic information is only transmitted over the bus if its priority is between 2 and 15. Priority 1-events are displayed but are not transmitted over the bus. Diagnostic information with priority 0 (factory setting) is ignored.

It is possible to change the priority individually for the different status signals. The following parameters of the Resource Block are used for this purpose:

- FD FAIL PRI
- FD CHECK PRI
- FD OFFSPEC PRI
- FD MAINT PRI

Suppressing certain diagnostic information

It is possible to suppress certain events during transmission over the bus using a mask. While these events are displayed they are not transmitted over the bus. This mask is in FieldCare Expert  $\rightarrow$  Communication  $\rightarrow$  Field diagnostics  $\rightarrow$  Alarm broadcast enable. The mask is a negative selection mask, i.e. if a field is selected the associated diagnostic information is not transmitted over the bus.

#### 12.7 **Overview of diagnostic information**



🛐 • The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.

• All of the measured variables affected in the entire Promass instrument family are always listed under "Measured variables affected". The measured variables available for the device in question depend on the device version. When assigning the measured variables to the device functions, for example to the individual outputs, all of the measured variables available for the device version in question are available for selection.



In the case of some items of diagnostic information, the status signal and the diagnostic behavior can be changed. Change the diagnostic information  $\rightarrow \square 141$ 

## 12.7.1 Diagnostic of sensor

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
022	Temperature sensor defective		1. Check or replace sensor	Empty pipe detection
	Measured variable status		electronic module (ISEM)• Low flow cut off2. If available: Check connection• Switch output status	
	Quality	Bad	cable between sensor and transmitter 3. Replace sensor	Pressure
	Quality substatus	Sensor failure		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables	
046	Sensor limit exceeded		1. Inspect sensor	<ul> <li>Empty pipe detection</li> </ul>	
	Measured variable status [from	the factory] <sup>1)</sup>	2. Check process condition	<ul><li>Low flow cut off</li><li>Switch output status</li><li>Pressure</li></ul>	
	Quality	Good			
	Quality substatus	Non specific			
	Status signal [from the factory] <sup>2)</sup>	S			
	Diagnostic behavior [from the factory] <sup>3)</sup>	Warning			

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

	Diagnostic information		Remedy instructions	Influenced measured variables
No.	SI	nort text		
062	Sensor connection faulty		1. Check or replace sensor	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status		variables	
	Quality	Bad		Pressure
	Quality substatus	Sensor failure		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
063	Exciter current faulty		1. Check or replace sensor electronic module (ISEM)       • Empty pipe detection         2. If available: Check connection cable between sensor and transmitter       • Low flow cut off         3. Replace sensor       • Sensor	
	Measured variable status			<ul> <li>Low flow cut off</li> </ul>
	Quality	Bad		
	Quality substatus	Sensor failure		
	Status signal [from the factory] <sup>1)</sup>	S		
	Diagnostic behavior	Alarm		

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
082	Data storage		1. Check module connections         • Empty pipe detection	
	Measured variable status		2. Contact service	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad		<ul> <li>Pressure</li> </ul>
	Quality substatus	Sensor failure		
		P		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

#### 1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
083	Memory content		1. Restart device	Empty pipe detection
	Measured variable status		2. Restore HistoROM S-DAT backup ('Device reset' parameter)	<ul><li>p • Low flow cut off</li><li>• Switch output status</li></ul>
	Quality	Bad	3. Replace HistoROM S-DAT	<ul> <li>Pressure</li> </ul>
	Quality substatus	Sensor failure	-	
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

Status signal can be changed. 1)

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
140	Sensor signal asymmetrical		1. Check or replace sensor	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status [from	the factory] <sup>1)</sup>	electronic module (ISEM) 2. If available: Check connection cable between sensor and transmitter	<ul><li>Low flow cut off</li><li>Switch output status</li><li>Pressure</li></ul>
	Quality	Good		
	Quality substatus	Non specific	3. Replace sensor	
	Status signal [from the factory] <sup>2)</sup>	S		
	Diagnostic behavior [from the factory] <sup>3)</sup>	Alarm		

Quality can be changed. This causes the overall status of the measured variable to change. Status signal can be changed. 1)

2)

Diagnostic behavior can be changed. 3)

	Diagnostic information		Remedy instructions	Influenced measured
No.	5. Short text		variables	
144	5 5		<ol> <li>Check or change sensor</li> <li>Check process conditions</li> </ol>	<ul> <li>Empty pipe detection</li> <li>Low flow cut off</li> <li>Switch output status</li> </ul>
	Measured variable status [from	ed variable status [from the factory] <sup>1)</sup> 2. Che		
	Quality	Good		Pressure
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>2)</sup>	F		
	Diagnostic behavior [from the factory] <sup>3)</sup>	Alarm		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) 3) Status signal can be changed.

Diagnostic behavior can be changed.

#### Diagnostic of electronic 12.7.2

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
201	201 Device failure Measured variable status		1. Restart device	Empty pipe detection
			Switch of the second seco	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad		Pressure
	Quality substatus	Device failure		
	Status signal [from the factory] <sup>1)</sup>	E		
		<u>I</u> .		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
242	242 Software incompatible		1. Check software	F J F F
	Measured variable status		2. Flash or change main electronics module	
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] <sup>1)</sup>	E		
		r	_	
	Diagnostic behavior	Alarm		

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
252	Modules incompatible		1. Check electronic modules	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status		2. Change electronic modules	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad		<ul> <li>Pressure</li> </ul>
	Quality substatus	Device failure		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
262	Sensor electronic connection fault	у	1. Check or replace connection	Empty pipe detection
	Measured variable status		cable between sensor electronic module (ISEM) and main - Low flow cut off Pressure	<ul><li>Low flow cut off</li><li>Pressure</li></ul>
	Quality	Bad	electronics 2. Check or replace ISEM or main electronics	
	Quality substatus	Device failure		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

### 1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured	
No.	SI	hort text		variables	
270	Main electronic failure		Change main electronic module	<ul> <li>Empty pipe detection</li> </ul>	
	Measured variable status			<ul><li>Low flow cut off</li><li>Switch output status</li></ul>	
	Quality	Bad	-	<ul> <li>Pressure</li> </ul>	
	Quality substatus	Device failure			
	Status signal [from the factory] <sup>1)</sup>	F			
	Diagnostic behavior	Alarm			

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
271			1. Restart device	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status			<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad		<ul> <li>Pressure</li> </ul>
	Quality substatus	Device failure		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
272	272 Main electronic failure		1. Restart device	<ul> <li>Empty pipe detection</li> <li>Low flow cut off</li> <li>Switch output status</li> <li>Pressure</li> </ul>
	Measured variable status		2. Contact service	
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] <sup>1)</sup>	E		
		r		
	Diagnostic behavior	Alarm		

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
273	Main electronic failure		Change electronic	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status			<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad		<ul> <li>Pressure</li> </ul>
	Quality substatus	Device failure		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
275	I/O module 1 to n defective		Change I/O module	Empty pipe detection
	Measured variable status			<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad		<ul> <li>Pressure</li> </ul>
	Quality substatus	Device failure		
	Status signal [from the factory] <sup>1)</sup>	F		
		1.	-	
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
276			1. Restart device	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status		2. Change I/O module	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Uncertain		<ul> <li>Pressure</li> </ul>
	Quality substatus	Non specific		
		-		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
276	76 I/O module 1 to n faulty		1. Restart device	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status		2. Change I/O module Ew flow cut off Switch output status	
	Quality	Bad		<ul> <li>Pressure</li> </ul>
	Quality substatus	Device failure		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
283	· · · · · · · · · · · · · · · · · · ·		1. Reset device	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status		2. Contact service	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad		<ul> <li>Pressure</li> </ul>
	Quality substatus	Device failure		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

### 1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured variables	
No.	SI	hort text		variables	
302			Device verification active, please	<ul> <li>Empty pipe detection</li> </ul>	
	Measured variable status		wait.	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>	
	Quality	Bad		<ul> <li>Pressure</li> </ul>	
	Quality substatus	Device failure			
	Status signal [from the factory] <sup>1)</sup>	С			
	Diagnostic behavior	Warning			

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
311			1. Do not reset device	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status		<ul> <li>2. Contact service</li> <li>Low flow cut off</li> <li>Switch output status</li> <li>Pressure</li> </ul>	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad		<ul> <li>Pressure</li> </ul>
	Quality substatus	Device failure		
	Status signal [from the factory] <sup>1)</sup>	M		
	Diagnostic behavior	Warning		

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
332	332 Writing in embedded HistoROM failed	ailed	Replace user interface board	<ul> <li>Empty pipe detection</li> <li>Low flow cut off</li> <li>Switch output status</li> <li>Pressure</li> </ul>
	Measured variable status		Switch output state	
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] <sup>1)</sup>	E		
	Status signal [Irom the factory]	F		
	Diagnostic behavior	Alarm		

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
361	361 I/O module 1 to n faulty		1. Restart device	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status		2. Check electronic modules       • Low flow cut off         3. Change I/O Modul or main       • Switch output status	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad	electronics	Pressure
	Quality substatus	Device failure		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
372	Sensor electronic (ISEM) faulty		1. Restart device	Empty pipe detection
	Measured variable status		2. Check if failure recurs       • Low flow cut off         3. Replace sensor electronic module       • Switch output status	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad	(ISEM)	<ul> <li>Pressure</li> </ul>
	Quality substatus	Device failure		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
373			1. Transfer data or reset device	Empty pipe detection
	Measured variable status		2. Contact service	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad		<ul> <li>Pressure</li> </ul>
	Quality substatus	Device failure		
		-		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
374	Sensor electronic (ISEM) faulty		1. Restart device	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status [from t	the factory] <sup>1)</sup>	<ol> <li>Check if failure recurs</li> <li>Replace sensor electronic module</li> </ol>	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Good	(ISEM)	<ul> <li>Pressure</li> </ul>
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>2)</sup>	5		
	Diagnostic behavior [from the factory] <sup>3)</sup>	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
375	I/O- 1 to n communication failed		1. Restart device	Empty pipe detection
	Measured variable status		<ol> <li>Check if failure recurs</li> <li>Replace module rack inclusive</li> </ol>	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad	electronic modules	<ul> <li>Pressure</li> </ul>
	Quality substatus	Device failure		
	Status signal [from the factory] <sup>1)</sup>	E		
		r	_	
	Diagnostic behavior	Alarm		

#### 1) Status signal can be changed.

No.	Diagnostic information Diagnostic text		Remedy instructions	Influenced measured variables	
382	5		1. Insert T-DAT	<ul> <li>Empty pipe detection</li> </ul>	
	Measured variable status		2. Replace T-DAT	<ul><li>Low flow cut off</li><li>Pressure</li></ul>	
	Quality	Bad	-		
	Quality substatus	Device failure			
	Status signal [from the factory] <sup>1)</sup>	F			
	Diagnostic behavior	Alarm			

#### 1) Status signal can be changed.

No.	Diagnostic information		Remedy instructions	Influenced measured variables
383	Memory content		1. Restart device	Empty pipe detection
	Measured variable status		2. Delete T-DAT via 'Reset device' parameter	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad	3. Replace T-DAT	<ul> <li>Pressure</li> </ul>
	Quality substatus	Device failure		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
387	Embedded HistoROM failed			<ul> <li>Empty pipe detection</li> <li>Low flow cut off</li> <li>Switch output status</li> <li>Pressure</li> </ul>
	Measured variable status			
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

## 12.7.3 Diagnostic of configuration

No.	Diagnostic information o. Short text		Remedy instructions	Influenced measured variables
303	I/O 1 to n configuration changed		1. Apply I/O module configuration (parameter 'Apply I/O configuration')       -         2. Afterwards reload device description and check wiring	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	M		
			-	
	Diagnostic behavior	Warning		

1) Status signal can be changed.

No.	Diagnostic information		Remedy instructions	Influenced measured variables
330			<ol> <li>Update firmware of device</li> <li>Restart device</li> </ol>	Empty pipe detection     Low flow cut off     Switch systematic dataset
	Quality	Bad		<ul><li>Switch output status</li><li>Pressure</li></ul>
	Quality substatus	Configuration error		
	Status signal [from the factory] <sup>1)</sup>	M		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic	information	Remedy instructions	Influenced measured	
No.	Short text			variables	
331	1		1. Update firmware of device	<ul> <li>Empty pipe detection</li> </ul>	
	Measured variable status		2. Restart device	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>	
	Quality	Bad		Pressure	
	Quality substatus	Configuration error			
	Status signal [from the factory] <sup>1)</sup>	F			
	Diagnostic behavior	Warning			

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
410	10 Data transfer		1. Check connection	Empty pipe detection
	Measured variable status		2. Retry data transfer	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad		<ul> <li>Pressure</li> </ul>
	Quality substatus	Configuration error		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
412	Processing download		Download active, please wait	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status			<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Uncertain		<ul> <li>Pressure</li> </ul>
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	С		
	Diagnostic behavior	Warning	-	

### 1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured variables
No.	SI	nort text		
431	Trim 1 to n		Carry out trim	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	С		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
437	Configuration incompatible		1. Restart device	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status			<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad		<ul> <li>Pressure</li> </ul>
	Quality substatus	Configuration error		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
438			1. Check data set file	Empty pipe detection
	Measured variable status		<ol> <li>Check device configuration</li> <li>Up- and download new</li> </ol>	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Uncertain	configuration	<ul> <li>Pressure</li> </ul>
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	М		
		101		
	Diagnostic behavior	Warning		

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
441	Current output 1 to n		1. Check process	-
	Measured variable status		2. Check current output settings	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	S		
	Diagnostic behavior [from the factory] <sup>2)</sup>	Warning		

1)

Status signal can be changed. Diagnostic behavior can be changed. 2)

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
442	442     Frequency output 1 to n       Measured variable status		1. Check process	-
			2. Check frequency output settings	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	S		
	Diagnostic behavior [from the factory] <sup>2)</sup>	Warning		

1)

Status signal can be changed. Diagnostic behavior can be changed. 2)

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
443	Pulse output 1 to n		1. Check process	-
	Measured variable status		2. Check pulse output settings	
	Quality	Good	-	
	Quality substatus	Non specific		
	1)			
	Status signal [from the factory] <sup>1)</sup>	S		
	Diagnostic behavior [from the factory] <sup>2)</sup>	Warning		

1)

Status signal can be changed. Diagnostic behavior can be changed. 2)

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables
444	Current input 1 to n		1. Check process	-
	Measured variable status		2. Check current input settings	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	5		
	Diagnostic behavior [from the factory] <sup>2)</sup>	Warning		

1)

Status signal can be changed. Diagnostic behavior can be changed. 2)

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
453	Flow override		Deactivate flow override	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status			<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Good		Pressure
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	С		
	Diagnostic behavior	Warning		

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
463	3 Analog input 1 to n selection invalid	1. Check module/channel	Empty pipe detection	
	Measured variable status		configuration 2. Check I/O module configuration	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad		Pressure
	Quality substatus	Configuration error		
	Status signal (from the factory) 1)	F		
	Status signal [from the factory] <sup>1)</sup>	r	-	
	Diagnostic behavior	Alarm		

	Diagnostic	information	Remedy instructions	Influenced measured
No.	Short text			variables
484	Failure mode simulation		Deactivate simulation	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status			<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad		<ul> <li>Pressure</li> </ul>
	Quality substatus	Configuration error		
	Status signal [from the factory] <sup>1)</sup>	C		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured variables
No.	Sł	nort text		variables
485	Measured variable simulation		Deactivate simulation	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status			<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Good		<ul> <li>Pressure</li> </ul>
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	С		
	Diagnostic behavior	Warning	-	

1) Status signal can be changed.

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
486	Current input 1 to n simulation		Deactivate simulation	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
			1	
	Status signal [from the factory] <sup>1)</sup>	С		
	Diagnostic behavior	Warning		

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
491	Current output 1 to n simulation		Deactivate simulation	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	С		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measured variables
No.	SI	nort text		
492	Simulation frequency output 1 to a	1	Deactivate simulation frequency	-
	Measured variable status		output	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	C		
			-	
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured variables
No.	SI	hort text		variables
493	Simulation pulse output 1 to n		Deactivate simulation pulse output	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	C		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
494	Switch output simulation 1 to n		Deactivate simulation switch output	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	С		
	Diagnostic behavior	Warning		

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
495	Diagnostic event simulation		Deactivate simulation	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	С		
	Diagnostic behavior	Warning		

	Diagnostic	information	Remedy instructions	Influenced measured	
No.	SI	hort text		variables	
496	Status input simulation		Deactivate simulation status input	-	
	Measured variable status				
	Quality	Good			
	Quality substatus	Non specific			
	Status signal [from the factory] <sup>1)</sup>	С			
	Diagnostic behavior	Warning			

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured variables
No.	SI	nort text		Variables
497	Simulation block output		Deactivate simulation	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	С		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
520	I/O 1 to n hardware configuration	invalid	1. Check I/O hardware	-
	Measured variable status		configuration 2. Replace wrong I/O module	
	Quality	Good	3. Plug the module of double pulse output on correct slot	
	Quality substatus	Non specific	output on confect slot	
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

	Diagnostic i	information	Remedy instructions	Influenced measured variables
No.	SI	hort text		variables
537	537 Configuration		1. Check IP addresses in network	-
	Measured variable status		2. Change IP address	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
594	Relay output simulation		Deactivate simulation switch output	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	С		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

## 12.7.4 Diagnostic of process

No.	Diagnostic information           No.         Short text		Remedy instructions	Influenced measured variables
803	1		1. Check wiring	-
	Measured variable status		2. Change I/O module	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measured	
No.	SI	nort text		variables	
830			Reduce ambient temp. around the	<ul> <li>Empty pipe detection</li> </ul>	
	Measured variable status [from	the factory] <sup>1)</sup>	sensor housing	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>	
	Quality	Good		<ul> <li>Pressure</li> </ul>	
	Quality substatus	Non specific			
	Status signal [from the factory] <sup>2)</sup>	S			
	Diagnostic behavior [from the factory] <sup>3)</sup>	Warning			

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

	Diagnostic information		Remedy instructions	Influenced measured	
No.	SI	nort text		variables	
831	Sensor temperature too low		Increase ambient temp. around the	Empty pipe detection	
	Measured variable status [from	the factory] <sup>1)</sup>	sensor housing	<ul><li>Low flow cut off</li><li>Switch output status</li><li>Pressure</li></ul>	
	Quality	Good			
	Quality substatus	Non specific			
	Status signal [from the factory] <sup>2)</sup>	S			
	Diagnostic behavior [from the factory] <sup>3)</sup>	Warning			

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) 3) Status signal can be changed.

Diagnostic behavior can be changed.

No.	Diagnostic information       No.     Short text		Remedy instructions	Influenced measured variables	
832	Electronic temperature too high		Reduce ambient temperature	<ul> <li>Empty pipe detection</li> </ul>	
	Measured variable status [from	the factory] <sup>1)</sup>		<ul><li>Low flow cut off</li><li>Switch output status</li></ul>	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Good		<ul> <li>Pressure</li> </ul>	
	Quality substatus	Non specific			
	Status signal [from the factory] <sup>2)</sup>	S			
	Diagnostic behavior [from the factory] <sup>3)</sup>	Warning			

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

	Diagnostic information		Remedy instructions	Influenced measured	
No.	SI	nort text		variables	
833	Electronic temperature too low		Increase ambient temperature	Empty pipe detection	
	Measured variable status [from	the factory] <sup>1)</sup>		<ul><li>Low flow cut off</li><li>Switch output status</li></ul>	
	Quality	Good		<ul> <li>Pressure</li> </ul>	
	Quality substatus	Non specific			
	Status signal [from the factory] <sup>2)</sup>	S			
	Diagnostic behavior [from the factory] <sup>3)</sup>	Warning			

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
834	Process temperature too high		Reduce process temperature	Empty pipe detection
	Measured variable status [from	the factory] <sup>1)</sup>		<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Good		<ul> <li>Pressure</li> </ul>
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>2)</sup>	S		
	Diagnostic behavior [from the factory] <sup>3)</sup>	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables	
835	Process temperature too low		Increase process temperature	<ul> <li>Empty pipe detection</li> </ul>	
	Measured variable status [from	the factory] <sup>1)</sup>		<ul><li>Low flow cut off</li><li>Switch output status</li></ul>	
	Quality	Good		<ul> <li>Pressure</li> </ul>	
	Quality substatus	Non specific			
	Status signal [from the factory] <sup>2)</sup>	5			
	Diagnostic behavior [from the factory] <sup>3)</sup>	Warning			

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

	Diagnostic information		Remedy instructions	Influenced measured	
No.	SI	nort text		variables	
842	Process limit		Low flow cut off active!	Empty pipe detection	
	Measured variable status		configuration	<ul><li>Low flow cut off</li><li>Switch output status</li><li>Pressure</li></ul>	
	Quality	Good			
	Quality substatus	Non specific			
	Status signal [from the factory] <sup>1)</sup>	S			
	Diagnostic behavior	Warning			

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
843	Process limit		Check process conditions	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status			<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Good		<ul> <li>Pressure</li> </ul>
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	S		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured variables
No.	SI	nort text		variables
862	Partly filled pipe		1. Check for gas in process	-
	Measured variable status [from the factory] <sup>1)</sup>	the factory] <sup>1)</sup>	2. Adjust detection limits	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>2)</sup>	S		
	Diagnostic behavior [from the factory] <sup>3)</sup>	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

	Diagnostic information		Remedy instructions	Influenced measured variables
No.	SI	nort text		Variableb
882	Input signal		1. Check input configuration	-
	Measured variable status		2. Check external device or process conditions	
	Quality	Bad		
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
910	Tubes not oscillating		1. Check electronic	Empty pipe detection
	Measured variable status		2. Inspect sensor	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Bad		<ul> <li>Pressure</li> </ul>
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>1)</sup>	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
912	Medium inhomogeneous		1. Check process cond.	<ul> <li>Empty pipe detection</li> </ul>
	Measured variable status [from	the factory] <sup>1)</sup>	2. Increase system pressure	<ul><li>Low flow cut off</li><li>Switch output status</li><li>Pressure</li></ul>
	Quality	Good		
	Quality substatus	Non specific		
		_		
	Status signal [from the factory] <sup>2)</sup>	S		
	Diagnostic behavior [from the factory] <sup>3)</sup>	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
913	Medium unsuitable		1. Check process conditions	Empty pipe detection
	Measured variable status [from the	the factory] <sup>1)</sup>	<ol> <li>Check electronic modules or sensor</li> </ol>	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Good		<ul> <li>Pressure</li> </ul>
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>2)</sup>	S		
	Diagnostic behavior [from the factory] <sup>3)</sup>	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

Diagnostic information		Remedy instructions	Influenced measured	
No.	SI	nort text		variables
944	Monitoring failed		Check process conditions for	Empty pipe detection
	Measured variable status [from	the factory] <sup>1)</sup>	Heartbeat Monitoring	<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Good		<ul> <li>Pressure</li> </ul>
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>2)</sup>	S		
	Diagnostic behavior [from the factory] <sup>3)</sup>	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

Diagnostic information		Remedy instructions	Influenced measured	
No.	SI	nort text		variables
948	Oscillation damping too high		Check process conditions	Empty pipe detection
	Measured variable status [from	the factory] <sup>1)</sup>		<ul><li>Low flow cut off</li><li>Switch output status</li></ul>
	Quality	Good		<ul> <li>Pressure</li> </ul>
	Quality substatus	Non specific		
	Status signal [from the factory] <sup>2)</sup>	S		
		3		
	Diagnostic behavior [from the factory] <sup>3)</sup>	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

## 12.8 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

To call up the measures to rectify a diagnostic event:

- Via local display  $\rightarrow \square 138$
- Via Web browser  $\rightarrow \square 139$
- Via "DeviceCare" operating tool  $\rightarrow \implies 140$

Other pending diagnostic events can be displayed in the **Diagnostic list** submenu  $\rightarrow \cong 167$ 

#### Navigation

"Diagnostics" menu

옃 Diagnostics	
Actual diagnostics	] → 🗎 167
Previous diagnostics	) → 🗎 167

Operating time from restart	→ 🗎 167
Operating time	→ 🗎 167

### Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occured diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
		If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	-	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	-	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

## 12.9 Diagnostic messages in the DIAGNOSTIC Transducer Block

 
- The Actual diagnostics parameter (actual diagnostics) displays the message with the highest priority.
- A list of the active alarms can be viewed via the Diagnostics 1 parameter (diagnostics\_1) to Diagnostics 5 (diagnostics 5). If more than 5 messages are pending, the messages with the highest priority are shown on the display.
- You can view the last alarm that is no longer active via the **Previous diagnostics** parameter (**previous\_diagnostics**).

### 12.10 Diagnostic list

Up to 5 currently pending diagnostic events can be displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

### Navigation path

Diagnostics  $\rightarrow$  Diagnostic list

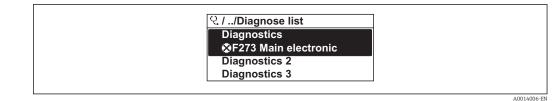

29 Taking the example of the local display

To call up the measures to rectify a diagnostic event:

- Via local display  $\rightarrow \square$  138
- Via Web browser  $\rightarrow \square$  139
- Via "DeviceCare" operating tool  $\rightarrow \cong 140$


## 12.11 Event logbook
 
### 12.11.1 Reading out the event logbook

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

### Navigation path

**Diagnostics** menu  $\rightarrow$  **Event logbook** submenu  $\rightarrow$  Event list

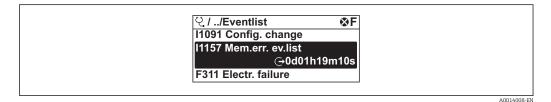

■ 30 Taking the example of the local display

- A maximum of 20 event messages can be displayed in chronological order.
- If the **Extended HistoROM** application package (order option) is enabled in the device, the event list can contain up to 100 entries .

The event history includes entries for:

- Diagnostic events  $\rightarrow \square 145$
- Information events  $\rightarrow \cong 169$

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
  - $\overline{\mathfrak{O}}$ : Occurrence of the event
  - 🕒 : End of the event
- Information event

D: Occurrence of the event

To call up the measures to rectify a diagnostic event:

- Via local display  $\rightarrow \implies 138$
- Via Web browser  $\rightarrow \square 139$
- Via "FieldCare" operating tool → 

   <sup>™</sup>
   140
- Via "DeviceCare" operating tool  $\rightarrow \implies 140$

For filtering the displayed event messages  $\rightarrow \cong 169$ 

### 12.11.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

### Navigation path

Diagnostics  $\rightarrow$  Event logbook  $\rightarrow$  Filter options

### Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

### 12.11.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
I1000	(Device ok)
I1079	Sensor changed
11089	Power on
11090	Configuration reset
I1091	Configuration changed
I1092	Embedded HistoROM deleted
I1111	Density adjust failure
I1137	Electronic changed
I1151	History reset
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1184	Display connected
11209	Density adjustment ok
I1221	Zero point adjust failure
I1222	Zero point adjustment ok
I1256	Display: access status changed
I1278	I/O module reset detected
I1335	Firmware changed
I1361	Web server login failed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1444	Device verification passed
I1445	Device verification failed
I1447	Record application reference data
I1448	Application reference data recorded
I1449	Recording application ref. data failed
I1450	Monitoring off

Info number	Info name	
I1451	Monitoring on	
I1457	Measured error verification failed	
I1459	I/O module verification failed	
I1460	HBSI verification failed	
I1461	Sensor verification failed	
I1462	Sensor electronic module verific. failed	
I1512	Download started	
I1513	Download finished	
I1514	Upload started	
I1515	Upload finished	
I1618	I/O module replaced	
I1619	I/O module replaced	
I1621	I/O module replaced	
I1622	Calibration changed	
I1624	Reset all totalizers	
I1625	Write protection activated	
I1626	Write protection deactivated	
I1627	Web server login successful	
I1628	Display login successful	
I1629	CDI login successful	
I1631	Web server access changed	
I1632	Display login failed	
I1633	CDI login failed	
I1634	Parameter factory reset	
I1635	Parameter delivery reset	
I1637	FOUNDATION Fieldbus specific reset done	
I1639	Max. switch cycles number reached	
I1649	Hardware write protection activated	
I1650	Hardware write protection deactivated	
I1712	New flash file received	
I1725	Sensor electronic module (ISEM) changed	
I1726	Configuration backup failed	

## 12.12 Resetting the measuring device

Using the **Restart** parameter it is possible to reset the entire device configuration or some of the configuration to a defined state.

### 12.12.1 Function scope of the "Restart" parameter

Options	Description	
Uninitialized	The selection has no effect on the device.	
Run	The selection has no effect on the device.	
Resource	The selection has no effect on the device.	

Options	Description
Defaults	All FOUNDATION Fieldbus blocks are reset to their factory settings. Example: Analog Input Channel to the <b>Uninitialized</b> option.
Processor	The device is restarted.
To delivery settings	Advanced FOUNDATION Fieldbus parameters (FOUNDATION Fieldbus blocks, schedule information) and device parameters for which a customer-specific default setting was ordered are reset to this customer-specific value.

## 12.12.2 Function scope of the "Service reset" parameter

Options	Description
Uninitialized	The selection has no effect on the device.
To delivery settings + MIB	Advanced FOUNDATION Fieldbus parameters (FOUNDATION Fieldbus blocks, schedule information, device tag and device address) and the device parameters for which a customer-specific default setting was ordered, are reset to this customer-specific value.
ENP restart	The parameters of the electronic name plate are reset. The device is restarted.

## 12.13 Device information

The **Device information** submenu contains all parameters that display different information for device identification.

### Navigation

 
"Diagnostics" menu  $\rightarrow$  Device information

► Device information	
Device tag	→ 🗎 172
Serial number	→ 🗎 172
Device name	) → 🗎 172
Firmware version	→ 🗎 172
Order code	→ 🗎 172
Extended order code 1	→ 🗎 172
Extended order code 2	→ 🗎 172
ENP version	→ 🗎 172

Parameter overview with brief description
---

Parameter	Description	User entry / User interface	Factory setting
Device tag	Enter the name for the measuring point.	Max. 32 characters such as letters, numbers or special characters (e. g. @, %, /)	Promass300/500
Serial number	Displays the serial number of the measuring device.	Max. 11-digit character string comprising letters and numbers.	-
Device name	Shows the name of the transmitter. The name can be found on the nameplate of the transmitter.	Promass 300/500	-
Firmware version	Shows the device firmware version installed.	Character string with the following format: xx.yy.zz	-
Order code	Shows the device order code. The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks	-
Extended order code 1	Shows the 1st part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
Extended order code 2	Shows the 2nd part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
ENP version	Shows the version of the electronic nameplate (ENP).	Character string in the format xx.yy.zz	-

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
02.2017	01.00.zz	Option 74	Original firmware	Operating Instructions	BA01843D/06/EN/01.18

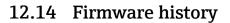

🛐 It is possible to flash the firmware to the current version or the previous version using the service interface.

For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.



The manufacturer's information is available:

- In the Download Area of the Endress+Hauser web site: www.endress.com  $\rightarrow$ Downloads
- Specify the following details:
  - Product root: e.g. 8A3B
    - The product root is the first part of the order code: see the nameplate on the device.
  - Text search: Manufacturer's information
  - Media type: Documentation Technical Documentation

# 13 Maintenance

## 13.1 Maintenance tasks

No special maintenance work is required.

## 13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

## 13.1.2 Interior cleaning

Observe the following points for CIP and SIP cleaning:

- Use only cleaning agents to which the process-wetted materials are adequately resistant.
- Observe the maximum permitted medium temperature for the measuring device  $\rightarrow \cong$  195.

## 13.2 Measuring and test equipment

 ${\it Endress+Hauser}$  offers a wide variety of measuring and test equipment, such as W@M or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment:  $\rightarrow \square 177 \rightarrow \square 179$ 

## 13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

## 14 Repair

## 14.1 General notes

### 14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

### 14.1.2 Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- ► Use only original Endress+Hauser spare parts.
- Carry out the repair according to the Installation Instructions.
- Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ► Document every repair and each conversion and enter them into the *W*@*M* life cycle management database.

## 14.2 Spare parts

W@M Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

P Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the **Serial number** parameter in the **Device information** submenu.

## 14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

Your Endress+Hauser Sales Center can provide detailed information on the services.

## 14.4 Return

The requirements for safe device return can vary depending on the device type and national legislation.

1. Refer to the website for more information: http://www.endress.com/support/return-material

2. Return the device if repairs or a factory calibration are required, or if the wrong device was ordered or delivered.

## 14.5 Disposal

## X

If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to Endress+Hauser for disposal under the applicable conditions.

### 14.5.1 Removing the measuring device

1. Switch off the device.

### **WARNING**

### Danger to persons from process conditions.

• Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.

2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

### 14.5.2 Disposing of the measuring device

### **WARNING**

### Danger to personnel and environment from fluids that are hazardous to health.

Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.

Repair

## 15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress +Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

## 15.1 Device-specific accessories

## 15.1.1 For the transmitter

Accessories	Description
Proline 300 transmitter	Transmitter for replacement or storage. Use the order code to define the following specifications: • Approvals • Output • Input • Display/operation • Housing • Software • Order code: 8X3BXX • Installation Instructions EA01200D
Remote display and operating module DKX001	<ul> <li>If ordered directly with the measuring device: Order code for "Display; operation", option O "Remote display 4-line illum.; 10 m (30 ft) Cable; touch control"</li> <li>If ordered separately: <ul> <li>Measuring device: order code for "Display; operation", option M "W/o, prepared for remote display"</li> <li>DKX001: Via the separate product structure DKX001</li> </ul> </li> <li>If ordered subsequently: DKX001: Via the separate product structure DKX001</li> <li>If ordered directly: order code for "Accessory enclosed", option RA "Mounting bracket, pipe 1/2"</li> <li>If ordered subsequently: order number: 71340960</li> </ul> <li>Connecting cable (replacement cable) Via the separate product structure: DKX002</li> <li>Further information on display and operating module DKX001 → 202.</li>
	Special Documentation SD01763D
External WLAN antenna	<ul> <li>External WLAN antenna with 1.5 m (59.1 in) connecting cable and two angle brackets. Order code for "Accessory enclosed", option P8 "Wireless antenna wide area".</li> <li>The external WLAN antenna is not suitable for use in hygienic applications.</li> <li>Further information on the WLAN interface → 🗎 66.</li> </ul>
	Order number: 71351317
Protective cover	Installation Instructions EA01238D Is used to protect the measuring device from the effects of the weather: e.g.
	rainwater, excess heating from direct sunlight.  Order number: 71343505
	Installation Instructions EA01160D

Accessories	Description
Heating jacket	Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids.
	If using oil as a heating medium, please consult with Endress+Hauser.
	<ul> <li>If ordered together with the measuring device:</li> </ul>
	order code for "Enclosed accessories"
	<ul> <li>Option RB "heating jacket, G 1/2" internal thread"</li> </ul>
	<ul> <li>Option RD "Heating jacket, NPT 1/2" internal thread"</li> </ul>
	<ul> <li>If ordered subsequently:</li> </ul>
	Use the order code with the product root DK8003.
	Special Documentation SD02173D
Sensor holder	For wall, tabletop and pipe mounting.
	Order number: 71392563

## 15.1.2 For the sensor

# 15.2 Communication-specific accessories

Accessories	Description
Fieldgate FXA42	Is used to transmit the measured values of connected 4 to 20 mA analog measuring devices, as well as digital measuring devices
	<ul> <li>Technical Information TI01297S</li> <li>Operating Instructions BA01778S</li> <li>Product page: www.endress.com/fxa42</li> </ul>
Field Xpert SMT70	The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress. This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.
	<ul> <li>Technical Information TI01342S</li> <li>Operating Instructions BA01709S</li> <li>Product page: www.endress.com/smt70</li> </ul>
Field Xpert SMT77	The Field Xpert SMT77 tablet PC for device configuration enables mobile plant asset management in areas categorized as Ex Zone 1.
	<ul> <li>Technical Information TI01418S</li> <li>Operating Instructions BA01923S</li> <li>Product page: www.endress.com/smt77</li> </ul>

Accessories	Description
Applicator	<ul> <li>Software for selecting and sizing Endress+Hauser measuring devices:</li> <li>Choice of measuring devices for industrial requirements</li> <li>Calculation of all the necessary data for identifying the optimum flowmeter: <ul> <li>e.g. nominal diameter, pressure loss, flow velocity and accuracy.</li> <li>Graphic illustration of the calculation results</li> <li>Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.</li> </ul> </li> </ul>
	<ul><li>Applicator is available:</li><li>Via the Internet: https://portal.endress.com/webapp/applicator</li><li>As a downloadable DVD for local PC installation.</li></ul>
W@M	W@M Life Cycle ManagementImproved productivity with information at your fingertips. Data relevant to aplant and its components is generated from the first stages of planning andduring the asset's complete life cycle.W@M Life Cycle Management is an open and flexible information platformwith online and on-site tools. Instant access for your staff to current, in-depthdata shortens your plant's engineering time, speeds up procurement processesand increases plant uptime.Combined with the right services, W@M Life Cycle Management boostsproductivity in every phase. For more information, visitwww.endress.com/lifecyclemanagement
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.
DeviceCare	Tool to connect and configure Endress+Hauser field devices.
Devicedare	Innovation brochure IN01047S

# 15.3 Service-specific accessories

# 15.4 System components

Accessories	Description
Memograph M graphic data manager	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.
	<ul> <li>Technical Information TI00133R</li> <li>Operating Instructions BA00247R</li> </ul>
Cerabar M	<ul> <li>The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.</li> <li>Technical Information TI00426P and TI00436P</li> <li>Operating Instructions BA00200P and BA00382P</li> </ul>
Cerabar S	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.  Technical Information TI00383P Operating Instructions BA00271P
itemp	The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature. Fields of Activity document FA00006T

# 16 Technical data

## 16.1 Application

The measuring device is intended only for the flow measurement of liquids and gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

## 16.2 Function and system design

Measuring principle	Mass flow measurement based on the Coriolis measuring principle	
Measuring system	The device consists of a transmitter and a sensor.	
	The device is available as a compact version: The transmitter and sensor form a mechanical unit.	
	For information on the structure of the device $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	

[lb/min]

0 to 0.735

0 to 3.675

0 to 16.54

#### Input 16.3

Measured variable	Direct measured variables
	<ul> <li>Mass flow</li> <li>Density</li> <li>Temperature</li> </ul>
	Calculated measured variables
	<ul><li>Volume flow</li><li>Corrected volume flow</li><li>Reference density</li></ul>
Measuring range	Measuring range for liquids

#### Measuring range full scale values $\dot{m}_{min(F)}$ to $\dot{m}_{max(F)}$ DN [mm] [in] [kg/h] 0 to 20 1 <sup>1</sup>/<sub>24</sub> 2 <sup>1</sup>/<sub>12</sub> 0 to 100

¹⁄8

#### Measuring range for gases

4

The full scale value depends on the density and the sound velocity of the gas used and can be calculated with the formula below:

0 to 450

 $\dot{m}_{max(G)} = minimum (\dot{m}_{max(F)} \cdot \rho_G : x; \rho_G \cdot c_G \cdot \pi/2 \cdot (d_i)^2 \cdot 3600)$ 

m <sub>max(G)</sub>	Maximum full scale value for gas [kg/h]
m <sub>max(F)</sub>	Maximum full scale value for liquid [kg/h]
$\dot{m}_{\max(G)} < \dot{m}_{\max(F)}$	$\dot{m}_{max(G)}$ can never be greater than $\dot{m}_{max(F)}$
PG	Gas density in [kg/m³] at operating conditions
х	Constant dependent on nominal diameter
CG	Sound velocity (gas) [m/s]
d <sub>i</sub>	Measuring tube internal diameter [m]

DN		x
[mm]	[in]	[kg/m³]
1	1/ <sub>24</sub>	32
2	1/ <sub>12</sub>	32
4	1⁄8	32

#### Calculation example for gas

Sensor: Promass A, DN 2

- Gas: Air with a density of 11.9 kg/m<sup>3</sup> (at 20 °C and 10 bar)
- Measuring range (liquid): 100 kg/h
- $x = 32 \text{ kg/m}^3$  (for Promass A DN 2)

Maximum possible full scale value:

 $\dot{m}_{max(G)} = \dot{m}_{max(F)} \cdot \rho_{G}$ : x = 100 kg/h · 11.9 kg/m<sup>3</sup> : 32 kg/m<sup>3</sup> = 37.2 kg/h

	Recommended measuring range	
	🚹 Flow limit > 🖺	197
Operable flow range	Over 1000 : 1.	
		e preset full scale value do not override the electronics unit, with the izer values are registered correctly.
Input signal	External measured	values
	flow for gases, the a the measuring devic • Operating pressur pressure measurin • Medium temperat	aracy of certain measured variables or to calculate the corrected volume automation system can continuously write different measured values to be: the to increase accuracy (Endress+Hauser recommends the use of a ang device for absolute pressure, e.g. Cerabar M or Cerabar S) cure to increase accuracy (e.g. iTEMP) for calculating the corrected volume flow for gases
	Various pressure and temperature measuring devices can be ordered from Endress +Hauser: see "Accessories" section $\rightarrow \cong 179$	
	It is recommended to flow.	o read in external measured values to calculate the corrected volume
	Current input	
	The measured values are written from the automation system to the measuring device via the current input $\rightarrow \cong 182$ .	
	Digital communication	
	The measured value FOUNDATION Field	es are written from the automation system to the measuring device via bus.
	Current input 0/4 to 20 mA	
	Current input	0/4 to 20 mA (active/passive)
	Current span	<ul> <li>4 to 20 mA (active)</li> <li>0/4 to 20 mA (passive)</li> </ul>

# Status input

Voltage drop

Maximum input voltage

Possible input variables

Open-circuit voltage

Maximum input values	<ul> <li>DC -3 to 30 V</li> <li>If status input is active (ON): R<sub>i</sub> &gt;3 kΩ</li> </ul>
Response time	Configurable: 5 to 200 ms

Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)

≤ 30 V (passive)

≤ 28.8 V (active)

Pressure Temperature Density

Input signal level	<ul> <li>Low signal: DC -3 to +5 V</li> <li>High signal: DC 12 to 30 V</li> </ul>
Assignable functions	<ul><li>Off</li><li>Reset the individual totalizers separately</li><li>Reset all totalizers</li><li>Flow override</li></ul>

# 16.4 Output

## Output signal

## FOUNDATION Fieldbus

FOUNDATION Fieldbus	H1, IEC 61158-2, galvanically isolated
Data transfer	31.25 kbit/s
Current consumption	10 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

## Current output 4 to 20 mA

Signal mode	Can be set to: • Active • Passive
Current span	Can be set to: 4 to 20 mA NAMUR 4 to 20 mA US 4 to 20 mA 0 to 20 mA (only if the signal mode is active) Fixed current
Maximum output values	22.5 mA
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	0 to 700 Ω
Resolution	0.38 μΑ
Damping	Configurable: 0 to 999.9 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>Image of options increases if the measuring device has one or more application packages.</li> </ul>

## Current output 4 to 20 mA Ex i passive

Order code	"Output; input 2" (21), "Output; input 3" (022): Option C: current output 4 to 20 mA Ex i passive
Signal mode	Passive
Current span	Can be set to: • 4 to 20 mA NAMUR • 4 to 20 mA US • 4 to 20 mA • Fixed current
Maximum output values	22.5 mA
Maximum input voltage	DC 30 V

Load	0 to 700 Ω
Resolution	0.38 μΑ
Damping	Configurable: 0 to 999 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>Image of options increases if the measuring device has one or more application packages.</li> </ul>

## Pulse/frequency/switch output

Function	Can be set to pulse, frequency or switch output
Version	Open collector Can be set to: • Active • Passive • Passive NAMUR • Ex-i, passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Pulse output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Pulse width	Configurable: 0.05 to 2 000 ms
Maximum pulse rate	10000 Impulse/s
Pulse value	Adjustable
Assignable measured variables	<ul><li>Mass flow</li><li>Volume flow</li><li>Corrected volume flow</li></ul>
Frequency output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Adjustable: end value frequency 2 to 10000 Hz (f $_{max}$ = 12500 Hz)
Damping	Configurable: 0 to 999.9 s
Pulse/pause ratio	1:1

Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>
Switch output	
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Configurable: 0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	<ul> <li>Off</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit value</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1-3</li> <li>Flow direction monitoring</li> <li>Status</li> <li>Partially filled pipe detection</li> <li>Low flow cut off</li> <li>Image of options increases if the measuring device has one or more application packages.</li> </ul>

## Relay output

Function	vitch output	
Version	elay output, galvanically isolated	
Switching behavior	Can be set to: • NO (normally open), factory setting • NC (normally closed)	

Maximum switching capacity (passive)	<ul> <li>DC 30 V, 0.1 A</li> <li>AC 30 V, 0.5 A</li> </ul>
Assignable functions	<ul> <li>Off</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit value <ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1-3</li> </ul> </li> <li>Flow direction monitoring</li> <li>Status <ul> <li>Partially filled pipe detection</li> <li>Low flow cut off</li> </ul> </li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### User-configurable input/output

**One** specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

Signal on alarm

Depending on the interface, failure information is displayed as follows:

#### FOUNDATION Fieldbus

Status and alarm messages	Diagnostics in accordance with FF-891
Failure current FDE (Fault Disconnection Electronic)	0 mA

#### Current output 0/4 to 20 mA

#### 4 to 20 mA

<ul> <li>Min. value: 3.59 mA</li> <li>Max. value: 22.5 mA</li> <li>Freely definable value between: 3.59 to 22.5 mA</li> <li>Actual value</li> <li>Last valid value</li> </ul>
---

#### 0 to 20 mA

Failure mode	Choose from:	
	<ul> <li>Maximum alarm: 22 mA</li> </ul>	
	<ul> <li>Freely definable value between: 0 to 20.5 mA</li> </ul>	

## Pulse/frequency/switch output

Pulse output		
Failure mode	Choose from: • Actual value • No pulses	
Frequency output		
Failure mode	Choose from: • Actual value • 0 Hz • Defined value (f <sub>max</sub> 2 to 12 500 Hz)	
Switch output		
Failure mode	Choose from: • Current status • Open • Closed	

#### **Relay output**

Failure mode	Choose from:
	<ul> <li>Current status</li> </ul>
	<ul> <li>Open</li> </ul>
	<ul> <li>Closed</li> </ul>

## Local display

Plain text display	With information on cause and remedial measures
Backlight	Red backlighting indicates a device error.



Status signal as per NAMUR recommendation NE 107

## Interface/protocol

- Via digital communication: FOUNDATION Fieldbus
- Via service interface
  - CDI-RJ45 service interface
  - WLAN interface

Plain text display         With information on cause and remedial measures	
--	--

### Web browser

Plain text display	With information on cause and remedial measures
--------------------	---

## Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes	
	The following information is displayed depending on the device version: <ul> <li>Supply voltage active</li> <li>Data transmission active</li> <li>Device alarm/error has occurred</li> </ul>	
	Diagnostic information via light emitting diodes $\rightarrow$ 🗎 135	

Low flow cut off	The switch points for low flow cut off are user-selectable.			
Galvanic isolation	The outputs are galvanically isolated from one another and from earth (PE).			
Protocol-specific data	Manufacturer ID	0x452B48 (hex)		
	Ident number	0x103B (hex)		
	Device revision	1		
	DD revision	Information and files under:		
	CFF revision	<ul><li>www.endress.com</li><li>www.fieldbus.org</li></ul>		
	Interoperability Test Kit (ITK)	Version 6.2.0		
	ITK Test Campaign Number	Information: • www.endress.com • www.fieldbus.org		
	Link Master capability (LAS)	Yes		
	Choice of "Link Master" and "Basic Device"	Yes Factory setting: Basic Device		
	Node address	Factory setting: 247 (0xF7)		
	Supported functions	The following methods are supported: Restart ENP Restart Diagnostic Set to OOS Set to AUTO Read trend data Read event logbook		
	Virtual Communication Relation	Virtual Communication Relationships (VCRs)		
	Number of VCRs	44		
	Number of link objects in VFD	50		
	Permanent entries	1		
	Client VCRs	0		
	Server VCRs	10		
	Source VCRs	43		
	Sink VCRs	0		
	Subscriber VCRs	43		
	Publisher VCRs	43		
	Device Link Capabilities			
	Slot time	4		
	Min. delay between PDU	8		
	Max. response delay	16		
	System integration	<ul> <li>Information regarding system integration → </li> <li>Cyclic data transmission</li> <li>Description of the modules</li> <li>Execution times</li> <li>Methods</li> </ul>		

# 16.5 Power supply

Device plugs available	→ 🖺 34				
Pin assignment, device plug	→ 🗎 34				
Supply voltage	Order code for "Power supply"		Terminal voltage		Frequency range
	Option <b>D</b>		DC 24 V	±20%	-
	Option <b>E</b>		AC 100 to 240 V	-15 to +10%	50/60 Hz
	Ontion I		DC 24 V	±20%	-
	Option I		AC 100 to 240 V	-15 to +10%	50/60 Hz
Power consumption	Transmitter				
	Max. 10 W (active p	ower)			
	switch-on current	Max. 3	36 A (<5 ms) as per	NAMUR Recomm	nendation NE 21
Power supply failure	<ul> <li>Max. 400 mA (24</li> <li>Max. 200 mA (11)</li> <li>Totalizers stop at t</li> <li>Depending on the the pluggable data</li> <li>Error messages (in</li> </ul>	0 V, 50/6 the last va device ver a memory	lue measured. rsion, the config (HistoROM DA'	uration is reta Γ).	ained in the device memoryor ir
Electrical connection	→ 🖺 36				
Potential equalization	→ 🗎 39				
Terminals	Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to $2.5 \text{ mm}^2$ (24 to 12 AWG).				
Cable entries	<ul> <li>Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)</li> <li>Thread for cable entry: <ul> <li>NPT <sup>1</sup>/<sub>2</sub>"</li> <li>G <sup>1</sup>/<sub>2</sub>"</li> <li>M20</li> </ul> </li> <li>Device plug for digital communication: M12</li> </ul>				
Cable specification	→ 🖺 31				

	16.6 Performance characteristics				
Reference operating conditions	<ul> <li>Error limits based on ISO 11631</li> <li>Water with +15 to +45 °C (+59 to +113 °F) at2 to 6 bar (29 to 87 psi)</li> <li>Specifications as per calibration protocol</li> <li>Accuracy based on accredited calibration rigs that are traced to ISO 17025.</li> </ul>				
	To obtain measured errors, use the <i>Applicator</i> sizing tool $\rightarrow \square$ 179				
Maximum measured error	o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature				
	Base accuracy				
	Design fundamentals → 🗎 194				
	Mass flow and volume flow (liquids)				
	±0.10 % o.r.				
	Mass flow (gases)				
	±0.35 % o.r.				
	Density (liquids)				
	Under reference conditions Standard density calibration <sup>1)</sup> Wide-range				

Under reference conditions	Standard density calibration <sup>1)</sup>	Wide-range Density specification <sup>2) 3)</sup>
[g/cm <sup>3</sup> ]	[g/cm³]	[g/cm <sup>3</sup> ]
±0.0005	±0.02	±0.002

1) Valid over the entire temperature and density range

Valid range for special density calibration: 0 to 2 g/cm<sup>3</sup>, +5 to +80 °C (+41 to +176 °F) Order code for "Application package", option EE "Special density" 2) 3)

## Temperature

 $\pm 0.5 \ ^{\circ}C \pm 0.005 \cdot T \ ^{\circ}C \ (\pm 0.9 \ ^{\circ}F \pm 0.003 \cdot (T - 32) \ ^{\circ}F)$ 

## Zero point stability

Standard version: order code for "Measuring tube mat., wetted surface", option BB, BF, HA, SA

DN		Zero point stability		
[mm]	[in]	[kg/h]	[lb/min]	
1	1/ <sub>24</sub>	0.0005	0.000018	
2	<sup>1</sup> / <sub>12</sub>	0.0025	0.00009	
4	1⁄8	0.0100	0.00036	

High-pressure version: order code for "Measuring tube mat., wetted surface", option HB

DN		Zero point stability		
[mm]	[in]	[kg/h]	[lb/min]	
1	1/24	0.0008	0.0000288	
2	<sup>1</sup> / <sub>12</sub>	0.0040	0.000144	
4	1/8	0.0160	0.000576	

#### Flow values

Flow values as turndown parameter depending on nominal diameter.

SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
1	20	2	1	0.4	0.2	0.04
2	100	10	5	2	1	0.2
4	450	45	22.5	9	4.5	0.9

US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
1/ <sub>24</sub>	0.735	0.074	0.037	0.015	0.007	0.001
1/12	3.675	0.368	0.184	0.074	0.037	0.007
1⁄8	16.54	1.654	0.827	0.331	0.165	0.033

## Accuracy of outputs

The outputs have the following base accuracy specifications.

*Current output* 

Accuracy	±5 μA		
----------	-------	--	--

Pulse/frequency output

o.r. = of reading

Accuracy Max. ±50 ppm o.r. (over the entire ambient temperature range)
--

Repeatability

o.r. = of reading;  $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature

## Base repeatability

Provide the set of th

Mass flow and volume flow (liquids) ±0.05 % o.r.

	Mass flow (gases) ±0.15 % o.r.		
	Density (liquids) ±0.00025 g/cm <sup>3</sup>		
	–32) °F)		
Response time	The response time depends on the configuration (damping).		
Influence of ambient temperature	Current output		
	Temperature coefficientMax. 1 µA/°C		
	Pulse/frequency output		
	Temperature coefficient         No additional effect. Included	d in accuracy.	
temperature	o.f.s. = of full scale value When there is a difference between the temperature for zero point adjustment and the process temperature, the additional measured error of the sensor is typically $\pm 0.0002$ o.f.s./°C ( $\pm 0.0001$ % o. f.s./°F). The effect is reduced if zero point adjustment is performed at process temperature. <b>Density</b> When there is a difference between the density calibration temperature and the proceed temperature, the typical measured error of the sensor is $\pm 0.00005 \text{ g/cm}^3$ /°C ( $\pm 0.000025 \text{ g/cm}^3$ /°F). Field density calibration is possible. <b>Wide-range density specification (special density calibration)</b> If the process temperature is outside the valid range ( $\rightarrow \blacksquare 191$ ) the measured error $\pm 0.00005 \text{ g/cm}^3$ /°C ( $\pm 0.000025 \text{ g/cm}^3$ /°F)		
	-50 0 50 -80 -40 0 40 80 120 16 1 Field density calibration, for example at +20 °C (+68 °F) 2 Special density calibration	100 150 200 <sup>[C]</sup> 0 200 240 280 320 360 400 <sup>[°</sup> F]	

Influence of medium pressure

A difference between the calibration pressure and process pressure does not affect accuracy.

## Design fundamentals

o.r. = of reading, o.f.s. = of full scale value

BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.

MeasValue = measured value; ZeroPoint = zero point stability


## Calculation of the maximum measured error as a function of the flow rate

Flow rate		Maximum measured error in % o.r.	
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$		± BaseAccu	021339
	A0021332		1021555
< ZeroPoint BaseAccu · 100		± ZeroPoint MeasValue · 100	
	A0021333	AO	021334

#### Calculation of the maximum repeatability as a function of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$	± BaseRepeat
A0021335	A0021340
$< \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$	$\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$
A0021336	A0021337

## Example for maximum measured error

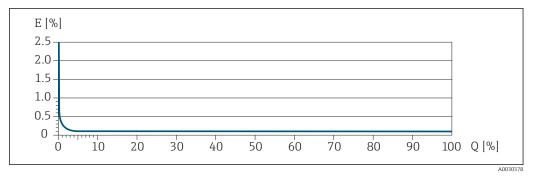

*E* Maximum measured error in % o.r. (example)

*Q* Flow rate in % of maximum full scale value

# 16.7 Installation


Installation conditions  $\rightarrow \cong 22$ 

## 16.8 Environment

Ambient temperature range	$\rightarrow \textcircled{24} 24 \rightarrow \textcircled{24}$
	Temperature tables
	Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.
	For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Storage temperature	–50 to +80 °C (–58 to +176 °F)		
Climate class	DIN EN 60068-2-38 (test Z/AD)		
Degree of protection	<ul> <li>Measuring device</li> <li>As standard: IP66/67, type 4X enclosure</li> <li>When housing is open: IP20, type 1 enclosure</li> <li>Display module: IP20, type 1 enclosure</li> <li>With the order code for "Sensor options", option CM: IP69 can also be ordered</li> </ul>		
	<b>External WLAN antenna</b> IP67		
Vibration- and shock-	Vibration sinusoidal, in accordance with IEC 60068-2-6		
resistance	<ul> <li>2 to 8.4 Hz, 3.5 mm peak</li> <li>8.4 to 2 000 Hz, 1 g peak</li> </ul>		
	Vibration broad-band random, according to IEC 60068-2-64		
	<ul> <li>10 to 200 Hz, 0.003 g<sup>2</sup>/Hz</li> <li>200 to 2 000 Hz, 0.001 g<sup>2</sup>/Hz</li> <li>Total: 1.54 g rms</li> </ul>		
	Shock half-sine, according to IEC 60068-2-27		
	6 ms 30 g		
	Rough handling shocks, according to IEC 60068-2-31		
Mechanical load	Never use the transmitter housing as a ladder or climbing aid.		
Electromagnetic compatibility (EMC)	Details are provided in the Declaration of Conformity.		
	16.9 Process		
Modium tomporaturo rango	$-50 \pm 205 \degree (-58 \pm 401 \degree E)$		

Medium temperature range -50 to +205  $^\circ C$  (–58 to +401  $^\circ F)$ 

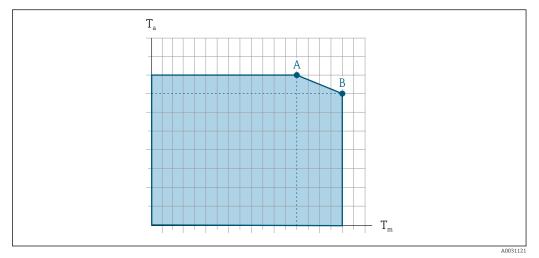

### Dependency of ambient temperature on medium temperature

*Exemplary representation, values in the table below.*

- *T<sub>a</sub>* Ambient temperature range
- $T_m$  Medium temperature
- A Maximum permitted medium temperature  $T_m$  at  $T_{a max} = 60 \degree C$  (140 °F); higher medium temperatures  $T_m$  require a reduced ambient temperature  $T_a$
- *B* Maximum permitted ambient temperature  $T_a$  for the maximum specified medium temperature  $T_m$  of the sensor

Values for devices used in the hazardous area: Separate Ex documentation (XA) for the device  $\rightarrow \cong 210$ .

Not insulated				Insulated			
А		в		А		В	
T <sub>a</sub>	T <sub>m</sub>	Ta	T <sub>m</sub>	T <sub>a</sub>	T <sub>m</sub>	T <sub>a</sub>	T <sub>m</sub>
60 °C (140 °F)	205 °C (401 °F)	-	-	60 °C (140 °F)	120 °C (248 °F)	55 °C (131 °F)	205 °C (401 °F)
Density	0 to 5	000	kg/m	<sup>3</sup> (0 to 312 lb/cf)			
Pressure-tempera ratings	ture 👔 A pi	n ove covid	erviev ed in	v of the pressure-t the "Technical Info	emperature ratings prmation" document	for the process co t	onnections is
Sensor housing	The se mecha				ry nitrogen gas and	protects the elect	ronics and
		a me uids)	asur , the	ing tube fails (e.g. fluid will initially b	due to process char be contained by the	acteristics like cor sensor housing.	rosive or abrasive
	accord burst p ruptur housin involvi	ing t press e dis ig. Th ng h	o the ure d k. Th neref igh g	operating process oes not provide an is prevents excessi ore, the use of a ru as pressures, and p	pressure level inside pressure. If the use adequate safety m vely high pressure f pture disk is strong particularly in appli- ousing burst pressu	er judges that the s argin, the device c from forming insic aly recommended i cations in which th	sensor housing an be fitted with a le the sensor n applications

High-pressure devices are always fitted with a rupture disk: order code for "Measuring tube mat., wetted surface", option HB

#### Burst pressure of the sensor housing

If the device is fitted with a rupture disk (order code for "Sensor option", option CA "Rupture disk"), the rupture disk trigger pressure is decisive .

The sensor housing burst pressure refers to a typical internal pressure which is reached prior to mechanical failure of the sensor housing and which was determined during type testing. The corresponding type test declaration can be ordered with the device (order code for "Additional approval", option LN "Sensor housing burst pressure, type test").

D	N	Sensor housing	burst pressure
[mm]	[in]	[bar]	[psi]
1	1/24	220	3190
2	1/12	140	2030
4	1/8	105	1520

For information on the dimensions: see the "Mechanical construction" section of the "Technical Information" document

Rupture disk

To increase the level of safety, a device version with a rupture disk with a trigger pressure of 10 to 15 bar (145 to 217.5 psi)can be used (order code for "Sensor option", option CA "rupture disk").

#### Drain connection for rupture disk

To allow any escaping medium to drain in a controlled manner in the event of an error, an optional drain connection can be ordered in addition to the rupture disk.



The function of the rupture disk is not compromised in any way.

Flow limit Select the nominal diameter by optimizing between the required flow range and permissible pressure loss. For an overview of the full scale values for the measuring range, see the "Measuring range" section  $\rightarrow \square 181$ • The minimum recommended full scale value is approx. 1/20 of the maximum full scale value In most applications, 20 to 50 % of the maximum full scale value can be considered ideal • A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s). • For gas measurement the following rules apply: The flow velocity in the measuring tubes should not exceed half the sound velocity (0.5 Mach). • The maximum mass flow depends on the density of the gas: formula  $\rightarrow \square 181$ To calculate the flow limit, use the *Applicator* sizing tool  $\rightarrow \implies 179$ Pressure loss To calculate the pressure loss, use the *Applicator* sizing tool  $\rightarrow \square 179$ System pressure  $\rightarrow \blacksquare 24$ 

# 16.10 Mechanical construction

Design, dimensions	For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.
Weight	All values (weight exclusive of packaging material) refer to devices with VCO couplings. Weight specifications including transmitter as per order code for "Housing", option A "Aluminum, coated".
	<ul> <li>Different values due to different transmitter versions:</li> <li>Transmitter version for the hazardous area (Order code for "Housing", option A "Aluminum, coated"; Ex d): +2 kg (+4.4 lbs)</li> <li>Transmitter version for hygienic area (Order code for "Housing", option B "Stainless, hygienic"): +0.2 kg (+0.44 lbs)</li> </ul>

### Weight in SI units

DN [mm]	Weight [kg]
1	5.35
2	6.9
4	8.75

### Weight in US units

DN [in]	Weight [lbs]
1/24	12
1/12	15
1/8	19

#### Materials

#### Transmitter housing

Order code for "Housing":

- Option **A** "Aluminum, coated": aluminum, AlSi10Mg, coated
- Option **B** "Stainless, hygienic": stainless steel, 1.4404 (316L)

## Window material

Order code for "Housing":

- Option **A** "Aluminum, coated": glass
- Option **B** "Stainless, hygienic": polycarbonate

#### Seals

Order code for "Housing": Option **B** "Stainless, hygienic": EPDM and silicone

#### Cable entries/cable glands

## Order code for "Housing", option A "Aluminum, coated"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Coupling M20 × 1.5	Non-Ex: plastic
	Z2, D2, Ex d/de: brass with plastic
Adapter for cable entry with female thread G <sup>1</sup> /2"	Nickel-plated brass
Adapter for cable entry with female thread NPT 1/2"	

### Order code for "Housing", option B "Stainless, hygienic"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Plastic
Adapter for cable entry with female thread G $\frac{1}{2}$ "	Nickel-plated brass
Adapter for cable entry with female thread NPT <sup>1</sup> / <sub>2</sub> "	

## Device plug

Electrical connection	Material
Plug M12x1	<ul> <li>Socket: Stainless steel, 1.4404 (316L)</li> <li>Contact housing: Polyamide</li> <li>Contacts: Gold-plated brass</li> </ul>

### Sensor housing

- Acid and alkali-resistant outer surface
- Stainless steel, 1.4404 (316L)

### Measuring tubes

Order code for "Measuring tube mat., wetted surface", option BB, BF, SA

Stainless steel, 1.4435 (316/316L)

Order code for "Measuring tube mat., wetted surface", option HA, HB, HC, HD

Alloy C22, 2.4602 (UNS N06022)

## Process connections

Order code for "Measuring tube mat., wetted surface", option SA

VCO coupling	Stainless steel, 1.4404 (316/316L)
G¼", G½" female thread	Stainless steel, 1.4404 (316/316L)
NPT¼", NPT½" female thread	Stainless steel, 1.4404 (316/316L)
Tri-Clamp <sup>1</sup> /2"	Stainless steel, 1.4435 (316L)
Fixed flange EN 1092-1, ASME B16.5, JIS B2220	Stainless steel, 1.4404 (316/316L)

Order code for "Measuring tube mat., wetted surface", option BB, BF

VCO coupling	Stainless steel, 1.4404 (316/316L)
Tri-Clamp <sup>1</sup> /2"	Stainless steel, 1.4435 (316L)

Order code for "Measuring tube mat., wetted surface", option HC, HD

VCO coupling	Alloy C22, 2.4602 (UNS N06022)
Tri-Clamp <sup>1</sup> /2"	Alloy C22, 2.4602 (UNS N06022)

#### Order code for "Measuring tube mat., wetted surface", option HA

VCO coupling	Alloy C22, 2.4602 (UNS N06022)
G¼", G½" female thread	Alloy C22, 2.4602 (UNS N06022)
NPT¼", NPT½" female thread	Alloy C22, 2.4602 (UNS N06022)
Fixed flange EN 1092-1, ASME B16.5, JIS B2220	Alloy C22, 2.4602 (UNS N06022)
Lap joint flange EN 1092-1, ASME B16.5, JIS B2220	Stainless steel, 1.4301 (F304), wetted parts Alloy C22, 2.4602 (UNS N06022)

Order code for "Measuring tube mat., wetted surface", option HB (high-pressure option)

VCO coupling	Alloy C22, 2.4602 (UNS N06022)
G¼", G½" female thread	Alloy C22, 2.4602 (UNS N06022)
NPT¼", NPT½" female thread	Alloy C22, 2.4602 (UNS N06022)
Fixed flange EN 1092-1, ASME B16.5, JIS B2220	Stainless steel, 1.4404 (316/316L); Alloy C22, 2.4602 (UNS N06022)

Available process connections  $\rightarrow$  🗎 201

### Seals

Welded process connections without internal seals

#### Accessories

Sensor holder

Stainless steel, 1.4404 (316L)

### Heating jacket

- Heating jacket housing: stainless steel, 1.4571 (316Ti)
- NPT adapter <sup>1</sup>/<sub>2</sub>": stainless steel, 1.4404 (316)
- G<sup>1</sup>/<sub>2</sub>" adapter: stainless steel, 1.4404

Protective cover

Stainless steel, 1.4404 (316L)

External WLAN antenna

- Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass
- Adapter: Stainless steel and nickel-plated brass
- Cable: Polyethylene
- Plug: Nickel-plated brass
- Angle bracket: Stainless steel


Process connections	Fixed flange connections:
	EN 1092-1 (DIN 2501) flange
	<ul> <li>EN 1092-1 (DIN 2512N) flange</li> </ul>
	<ul> <li>ASME B16.5 flange</li> </ul>
	IIS B2220 flange
	<ul> <li>Clamp connections:</li> </ul>
	Tri-Clamp (OD tubes), DIN 11866 series C
	VCO connections:
	4-VCO-4
	Female thread:
	<ul> <li>Cylindrical female thread BSPP (G) in accordance with ISO 228-1</li> <li>NPT</li> </ul>
	Process connection materials $\rightarrow \cong 199$

Surface roughness	All data relate to parts in contact with fluid. The following surface roughness quality can
	be ordered.
	<ul> <li>Not polished</li> </ul>

- $Ra_{max} = 0.76 \ \mu m$  (30  $\mu$ in) mechanically polished
- Ra<sub>max</sub> = 0.38 μm (15 μin) mechanically polished

# 16.11 Human interface

Languages	<ul> <li>Can be operated in the following languages:</li> <li>Via local operation English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech, Swedish</li> <li>Via Web browser English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech, Swedish</li> <li>Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese</li> </ul>
Local operation	Via display module
	<ul> <li>Equipment:</li> <li>Order code for "Display; operation", option F "4-line, illuminated, graphic display; touch control"</li> <li>Order code for "Display; operation", option G "4-line, illuminated, graphic display; touch control + WLAN"</li> </ul>
	1 Information about WLAN interface $\rightarrow \cong 66$

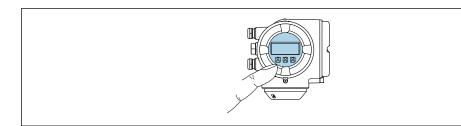

32 Operation with touch control

#### Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F) The readability of the display may be impaired at temperatures outside the temperature range.


#### Operating elements

- External operation via touch control (3 optical keys) without opening the housing:  $\boxplus$  ,  $\boxdot$  ,  $\blacksquare$
- Operating elements also accessible in the various zones of the hazardous area

#### Via remote display and operating module DKX001

The remote display and operating module DKX001 is available as an optional extra  $\rightarrow \cong 177$ .

- The remote display and operating module DKX001 is only available for the following housing version: order code for "Housing": option A "Aluminum, coated"
- The measuring device is always supplied with a dummy cover when the remote display and operating module DKX001 is ordered directly with the measuring device. Display or operation at the transmitter is not possible in this case.
- If ordered subsequently, the remote display and operating module DKX001 may not be connected at the same time as the existing measuring device display module. Only one display or operation unit may be connected to the transmitter at any one time.

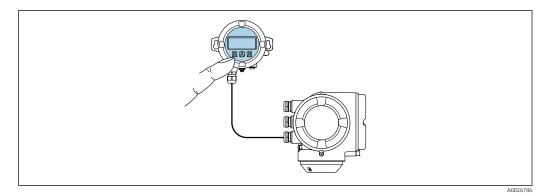

■ 33 Operation via remote display and operating module DKX001

#### Display and operating elements

The display and operating elements correspond to those of the display module  $\rightarrow \square$  201.

### Housing material

The housing material of the display and operating module DKX001 depends on the choice of transmitter housing material.

Transmitter housing	Remote display and operating module	
Order code for "Housing"	Material	Material
Option <b>A</b> "Aluminum, coated"	AlSi10Mg, coated	AlSi10Mg, coated

#### Cable entry

Corresponds to the choice of transmitter housing, order code for "Electrical connection".

#### Connecting cable

→ 🗎 32

Dimensions

Information on the dimensions:

"Mechanical construction" section of the "Technical Information" document.

	Supported operating	Operating unit	Interface	Additional information
Supported operating tools	ls Different operating tools can be used for local or remote access to the measuring de Depending on the operating tool used, access is possible with different operating ur via a variety of interfaces.			
Service interface	→ 🗎 65			
Remote operation	→ 🖺 65			

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with Web browser	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li></ul>	Special Documentation for device $\rightarrow \cong 211$
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→ 🗎 179

Supported operating tools	Operating unit	Interface	Additional information
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→
Device Xpert	Field Xpert SFX 100/350/370	HART and FOUNDATION Fieldbus fieldbus protocol	Operating Instructions BA01202S Device description files: Use update function of handheld terminal

- Other operating tools based on FDT technology with a device driver such as DTM/ iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:
  - FactoryTalk AssetCentre (FTAC) by Rockwell Automation → www.rockwellautomation.com
  - Asset Management Solutions (AMS) by Emerson → www.emersonprocess.com
  - FieldCommunicator 375/475 by Emerson → www.emersonprocess.com
  - Field Device Manager (FDM) by Honeywell → www.honeywellprocess.com
  - FieldMate by Yokogawa → www.yokogawa.com
  - PACTWare → www.pactware.com

The associated device description files are available at: www.endress.com  $\rightarrow$  Downloads

#### Web server

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or via a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

#### Supported functions

Data exchange between the operating unit (such as a notebook for example) and the measuring device:

- Upload the configuration from the measuring device (XML format, configuration backup)
- Save the configuration to the measuring device (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file or PDF file, document the measuring point configuration)
- Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)
- Flash firmware version for device firmware upgrade, for instance
- Download driver for system integration

Web server special documentation  $\rightarrow \cong 211$ 

HistoROMThe measuring device features HistoROM data management. HistoROM data managementdata managementcomprises both the storage and import/export of key device and process data, making<br/>operation and servicing far more reliable, secure and efficient.

When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

#### Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	Device memory	T-DAT	S-DAT
Available data	<ul> <li>Event logbook such as diagnostic events for example</li> <li>Parameter data record backup</li> <li>Device firmware package</li> <li>Driver for system integration for exporting via Web server, e.g: DD for FOUNDATION Fieldbus</li> </ul>	<ul> <li>Measured value logging ("Extended HistoROM" order option)</li> <li>Current parameter data record (used by firmware at run time)</li> <li>Peakhold indicator (min/max values)</li> <li>Totalizer values</li> </ul>	<ul> <li>Sensor data: nominal diameter etc.</li> <li>Serial number</li> <li>Calibration data</li> <li>Device configuration (e.g. SW options, fixed I/O or multi I/O)</li> </ul>
Storage location	Fixed on the user interface board in the connection compartment	Attachable to the user interface board in the connection compartment	In the sensor plug in the transmitter neck part

## Data backup

#### Automatic

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors
- If exchanging the electronics module (e.g. I/O electronics module): Once the electronics module has been replaced, the software of the module is compared against the current device firmware. The module software is upgraded or downgraded where necessary. The electronics module is available for use immediately afterwards and no compatibility problems occur.

#### Manual

Additional parameter data record (complete parameter settings) in the integrated device memory HistoROM backup for:

- Data backup function Backup and subsequent restoration of a device configuration in the device memory HistoROM backup
- Data comparison function Comparison of the current device configuration with the device configuration saved in the device memory HistoROM backup

### Data transfer

#### Manual

- Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)
- Transmission of the drivers for system integration via Web server, e.g.: DD for FOUNDATION Fieldbus

## Event list

## Automatic

- Chronological display of up to 20 event messages in the events list
- If the **Extended HistoROM** application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

## Data logging

## Manual

- If the **Extended HistoROM** application package (order option) is enabled:
- Record up to 1000 measured values via 1 to 4 channels
- User configurable recording interval
- Record up to 250 measured values via each of the 4 memory channels
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or web server

# 16.12 Certificates and approvals

Currently available certificates and approvals can be called up via the product configurator.

CE mark	The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.		
	Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.		
RCM-tick symbol	The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".		
Ex approval	The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.		
Sanitary compatibility	<ul> <li>3-A approval</li> <li>Only measuring devices with the order code for "Additional approval", option LP "3A" have 3-A approval.</li> <li>The 3-A approval refers to the measuring device.</li> <li>When installing the measuring device, ensure that no liquid can accumulate on the outside of the measuring device. Remote transmitters must be installed in accordance with the 3-A Standard.</li> <li>Accessories (e.g. heating jacket, weather protection cover, wall holder unit) must be installed in accordance with the 3-A Standard. Each accessory can be cleaned. Disassembly may be necessary under certain circumstances.</li> <li>FDA</li> <li>Food Contact Materials Regulation (EC) 1935/2004</li> </ul>		

Pharmaceutical compatibility	<ul> <li>FDA 21 CFR 177</li> <li>USP &lt;87&gt;</li> <li>USP &lt;88&gt; Class VI 121 °C</li> <li>TSE/BSE Certificate of Suitability</li> <li>cGMP</li> </ul>					
	derived f to the su	vith order code fo rom cGMP, decla rfaces of wetted TSE/BSE-compl	ration" are in ac parts, design, Fl	cordance with o	GMP requirem	ents relating
	A manuf	acturer's declarat	ion specific to t	he serial numbe	er is supplied wi	th the device.
FOUNDATION Fieldbus	FOUNDATIO	N Fieldbus inter	face			
certification	system meets • Certified in • Interoperab • Physical Lag • The device	<ul> <li>The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:</li> <li>Certified in accordance with FOUNDATION Fieldbus H1</li> <li>Interoperability Test Kit (ITK), revision version 6.2.0 (certificate available on request)</li> <li>Physical Layer Conformance Test</li> <li>The device can also be operated with certified devices of other manufacturers (interoperability)</li> </ul>				
Radio approval	The measuring device has radio approval.					
	For detailed information regarding radio approval, see Special Documentation $\rightarrow \cong 211$			tation		
Additional certification	<b>CRN approval</b> Some device versions have CRN approval. A CRN-approved process connection with a CSA					
	approval must be ordered for a CRN-approved device.					
	<ul> <li>Pressure tes</li> <li>PMI test (X)</li> <li>Compliance</li> <li>NACE MR0</li> </ul>	rtificates 8.1 material certi sting, internal pro- RF), internal pro- with requirement 175 / ISO 15156 103 / ISO 17945	ocedure, inspect cedure, wetted p nts derived from	tion certificate parts, test repor	t	h medium
	Testing of welded connections					
	Option	Option Test st		st standard		Process
		ISO 10675-1 AL1	ASME B31.3 NFS	ASME VIII Div.1	NORSOK M-601	
	KE	x				RT
	KI		х			RT
	KN			Х		RT
	KS				x	RT
	K5	x				DR
	К6		Х			DR
	К7			Х		DR
	K8				х	DR

RT = Radiographic testing, DR = Digital radiography All options with test report

Other standards and	■ EN 60529
Juidelines	Degrees of protection provided by enclosures (IP code)
	■ IEC/EN 60068-2-6
	Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).
	■ IEC/EN 60068-2-31
	Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices.
	■ EN 61010-1
	Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements
	■ IEC/EN 61326
	Emission in accordance with Class A requirements. Electromagnetic compatibility (EMO requirements).
	NAMUR NE 21
	Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment
	• NAMUR NE 32
	Data retention in the event of a power failure in field and control instruments with microprocessors
	<ul> <li>NAMUR NE 43 Standardization of the signal level for the breakdown information of digital transmitter</li> </ul>
	with analog output signal.
	NAMUR NE 53
	Software of field devices and signal-processing devices with digital electronics • NAMUR NE 105
	Specifications for integrating fieldbus devices in engineering tools for field devices <ul> <li>NAMUR NE 107</li> </ul>
	Self-monitoring and diagnosis of field devices
	• NAMUR NE 131
	Requirements for field devices for standard applications
	NAMUR NE 132     Control to management of the second
	Coriolis mass meter • ETSI EN 300 328
	Guidelines for 2.4 GHz radio components.
	<ul> <li>EN 301489</li> </ul>
	Electromagnetic compatibility and radio spectrum matters (ERM).
	Lectionagnetic compatibility and radio spectrum matters (Littl).

# 16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.



Detailed information on the application packages: Special Documentation for the device  $\rightarrow \cong 210$ 

Diagnostics functions	Package	Description
	Extended HistoROM	Comprises extended functions concerning the event log and the activation of the measured value memory.
		Event log: Memory volume is extended from 20 message entries (standard version) to up to 100 entries.
		<ul> <li>Data logging (line recorder):</li> <li>Memory capacity for up to 1000 measured values is activated.</li> <li>250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user.</li> <li>Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.</li> </ul>

Heartbeat Technology	Package	Description
	Heartbeat Verification +Monitoring	<ul> <li>Heartbeat Verification</li> <li>Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter</li> <li>7.6 a) "Control of monitoring and measuring equipment".</li> <li>Functional testing in the installed state without interrupting the process.</li> <li>Traceable verification results on request, including a report.</li> <li>Simple testing process via local operation or other operating interfaces.</li> <li>Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications.</li> <li>Extension of calibration intervals according to operator's risk assessment.</li> </ul>
		<ul> <li>Heartbeat Monitoring</li> <li>Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:</li> <li>Draw conclusions - using these data and other information - about the impact process influences (such as corrosion, abrasion, buildup etc.) have on the measuring performance over time.</li> <li>Schedule servicing in time.</li> <li>Monitor the process or product quality, e.g. gas pockets.</li> </ul>

Concentration	Package	Description
	Concentration	Calculation and outputting of fluid concentrations
		<ul> <li>The measured density is converted to the concentration of a substance of a binary mixture using the "Concentration" application package:</li> <li>Choice of predefined fluids (e.g. various sugar solutions, acids, alkalis, salts, ethanol etc.)</li> <li>Common or user-defined units ("Brix, "Plato, % mass, % volume, mol/l etc.) for standard applications.</li> <li>Concentration calculation from user-defined tables.</li> </ul>

Special density	Package	Description
	Special density	Many applications use density as a key measured value for monitoring quality or controlling processes. The device measures the density of the fluid as standard and makes this value available to the control system. The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.

# 16.14 Accessories

Overview of accessories available for order  $\rightarrow \ \ \square \ 177$ 

# 16.15 Supplementary documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *W@M Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from nameplate
- *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2D matrix code (QR code) on the nameplate

Standard documentation Brief Operating Instructions

Brief Operating Instructions for the sensor

Measuring device	Documentation code
Proline Promass A	KA01282D

#### Brief Operating Instructions for transmitter

Measuring device	Documentation code
Proline 300	KA01229D

#### **Technical Information**

Measuring device	Documentation code
Promass A 300	TI01374D

#### **Description of Device Parameters**

Measuring device	Documentation code
Promass 300	GP01094D

Device-dependent additional documentation

### Safety instructions

Safety instructions for electrical equipment for hazardous areas.

Remote display and operating module DKX001

Contents	Documentation code
ATEX/IECEx Ex i	XA01494D
ATEX/IECEx Ex ec	XA01498D
cCSAus IS	XA01499D
cCSAus Ex nA	XA01513D
INMETRO Ex i	XA01500D
INMETRO Ex ec	XA01501D
NEPSI Ex i	XA01502D
NEPSI Ex nA	XA01503D

## **Special Documentation**

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Remote display and operating module DKX001	SD01763D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
Web server	SD01665D
Heartbeat Technology	SD01696D
Concentration measurement	SD01706D

## Installation Instructions

Contents	Comment
Installation instructions for spare part sets and accessories	<ul> <li>Access the overview of all the available spare part sets via W@M Device Viewer →  175</li> <li>Accessories available for order with Installation Instructions →  177</li> </ul>

# Index

09
3-A approval
Α
Access authorization to parameters
Read access
Write access
Access code
Incorrect input
Accuracy
Adapting the diagnostic behavior
Adapting the status signal 141
Additional certification
Ambient temperature
Influence
AMS Device Manager
Function
Application
Application packages
Applicator
Approvals
C
Cable entries
Technical data
Cable entry
Degree of protection
CE mark
Certificates
cGMP 207
Check
Installation
Checklist
Post-connection check
Post-installation check
Cleaning
Cleaning in place (CIP)
Exterior cleaning
Interior cleaning
Sterilization in place (SIP)
Climate class
Commissioning
Advanced settings
Configuring the measuring device
Connecting cable
Connecting the measuring device
Connecting the signal cables
Connecting the supply voltage cables
Connection
see Electrical connection
Connection preparations
Connection tools
Context menu
Calling up
Closing
Explanation
L

Current consumption    19      Cyclic data transmission    7	
D	
Declaration of Conformity	2
Define access code	
Degree of protection	
Density	
Design fundamentals	
Maximum measured error	)4
Repeatability	)4
	0
Device components	.5
Device description files 7	
Device documentation	
Supplementary documentation	8
Device locking, status	
Device name	
Sensor	.8
Transmitter	.7
Device repair	'5
Device revision	'1
Device type ID	'1
DeviceCare	59
Device description file	'1
Diagnostic behavior	
Explanation	57
Symbols	7
Diagnostic information	
Design, description	0
DeviceCare	9
FieldCare	
Light emitting diodes	
Local display	
Overview	
Remedial measures	
Web browser	
Diagnostic list	
Diagnostic message	
DIAGNOSTIC Transducer Block 16	۶7
Diagnostics	
Symbols	6
DIP switches	
see Write protection switch	
Direct access	
Direct access code	
Disabling write protection	.9
Display	
see Onsite display	_
Display and operating module DKX001 20	12
Display area	
For operational display	
<b>j</b>	50
Display values	
For locking status	
Disposal	6

#### Document

Function	6
Symbols	6
Document function	6
Down pipe	22

# Ε

Editing view	1
Input screen	
Using operating elements	
EHDEG-certified	
Electrical connection	-
Degree of protection	3
Measuring device	
Operating tools	
Via FOUNDATION Fieldbus network 6	5
Via service interface (CDI-RJ45) 6	5
	6
Web server	5
WLAN interface	6
Electromagnetic compatibility	
	5
Enabling write protection	9
5 1	8
Endress+Hauser services	
Maintenance	4
Repair	5
Environment	
Mechanical load	5
Storage temperature	5
Vibration- and shock-resistance	
Error messages	
see Diagnostic messages	
Event list	8
Event logbook	8
Ex approval	6
Extended order code	
Sensor	8
Transmitter	7
Exterior cleaning	4

# F

FDA
Field Communicator
Function
Field Communicator 475
Field of application
Residual risks
Field Xpert
Function
Field Xpert SFX350
FieldCare
Device description file
Establishing a connection
Function
User interface
Filtering the event logbook
Firmware
Release date

Varian	1
Version	
Firmware history	3
Flow direction	9
Flow limit	7
Food Contact Materials Regulation	6
FOUNDATION Fieldbus certification	7
Function check	7
Function range	
Field Xpert	7
Function scope	
AMS Device Manager	9
Field Communicator 70	0
Field Communicator 475	0
Functions	
see Parameter	

## G

Galvanic isolation
--------------------

## н

11
Hardware write protection
Help text
Calling up
Closing
Explanation
HistoROM

## т

I
Identifying the measuring device 16
Incoming acceptance
Influence
Ambient temperature
Medium pressure
Medium temperature
Information on the document 6
Inlet runs
Input
Inspection
Received goods
Inspection check
Connection
Installation
Installation conditions
Down pipe
Inlet and outlet runs
Installation dimensions
Mounting location
Orientation
Rupture disk
Sensor heating 25
System pressure
Thermal insulation
Vibrations
Installation dimensions
Interior cleaning
-

# L

Languages, operation options	201
Line recorder	129

Local display	201
Navigation view	. 49
see Diagnostic message	
see In alarm condition	
see Operational display	
Low flow cut off	189

## М

101
Main electronics module
Maintenance tasks
Managing the device configuration
Manufacturer ID
Manufacturing date
Materials
Maximum measured error
Measured values
see Process variables
Measuring and test equipment
Measuring device
Configuration
Conversion
Disposal
Mounting the sensor
Preparing for electrical connection
Preparing for mounting
Removing
Repairs
Structure
Switch-on
Measuring principle
Measuring range
Calculation example for gas
5
For liquids
Measuring system
Mechanical load
Medium pressure
Influence
Medium temperature
Influence
Menu
Diagnostics
Setup
Menus
For measuring device configuration
For specific settings
Mounting dimensions
see Installation dimensions
Mounting location
Mounting preparations 28
Mounting tools
N
N
Nameplate
Sensor
Transmitter

Navigation view In the submenu	49
0	
Onsite display Numeric editor	
see Operating elements	
Operating menu	<i>.</i> –
Menus, submenus	
Structure	
Submenus and user roles	
Operating philosophy	
Operation options	
Operational display	
Operational safety	
Order code	
Orientation (vertical, horizontal)	
Outlet runs	
Output	184
Output signal	184
Р	
P Packaging disposal Parameter Changing	56
Packaging disposal	
Packaging disposal         Parameter         Changing         Entering values or text         Parameter settings         Administration (Submenu)         Advanced setup (Submenu)         Analog inputs (Submenu)         Calculated values (Submenu)         Configuration backup (Submenu)	
Packaging disposal Parameter Changing	
Packaging disposal         Parameter         Changing         Entering values or text         Parameter settings         Administration (Submenu)         Advanced setup (Submenu)         Analog inputs (Submenu)         Calculated values (Submenu)         Configuration backup (Submenu)         Current input         Current input (Wizard)	
Packaging disposal         Parameter         Changing         Entering values or text         Parameter settings         Administration (Submenu)         Advanced setup (Submenu)         Analog inputs (Submenu)         Calculated values (Submenu)         Configuration backup (Submenu)         Current input         Current input 1 to n (Submenu)         Current output	
Packaging disposal         Parameter         Changing         Entering values or text         Parameter settings         Administration (Submenu)         Advanced setup (Submenu)         Analog inputs (Submenu)         Calculated values (Submenu)         Configuration backup (Submenu)         Current input         Current input 1 to n (Submenu)         Current output         Current output	
Packaging disposal         Parameter         Changing         Entering values or text         Parameter settings         Administration (Submenu)         Advanced setup (Submenu)         Analog inputs (Submenu)         Calculated values (Submenu)         Configuration backup (Submenu)         Current input         Current input 1 to n (Submenu)         Current output         Current output         Data logging (Submenu)	
Packaging disposal         Parameter         Changing         Entering values or text         Parameter settings         Administration (Submenu)         Advanced setup (Submenu)         Analog inputs (Submenu)         Calculated values (Submenu)         Configuration backup (Submenu)         Current input         Current input 1 to n (Submenu)         Current output         Current output (Wizard)         Data logging (Submenu)         Define access code (Wizard)	
Packaging disposal	
Packaging disposal	
Packaging disposal	
Packaging disposalParameterChangingEntering values or textParameter settingsAdministration (Submenu)Advanced setup (Submenu)Analog inputs (Submenu)Calculated values (Submenu)Configuration backup (Submenu)Current inputCurrent input 1 to n (Submenu)Current output (Wizard)Current output 1 to n (Submenu)Data logging (Submenu)Define access code (Wizard)Diagnostics (Menu)Display (Submenu)Display (Wizard)	
Packaging disposalParameterChangingEntering values or textParameter settingsAdministration (Submenu)Advanced setup (Submenu)Analog inputs (Submenu)Calculated values (Submenu)Configuration backup (Submenu)Current inputCurrent input 1 to n (Submenu)Current outputCurrent output (Wizard)Data logging (Submenu)Device information (Submenu)Display (Submenu)Display (Wizard)Jioplay (Wizard)	
Packaging disposal         Parameter         Changing         Entering values or text         Parameter settings         Administration (Submenu)         Advanced setup (Submenu)         Analog inputs (Submenu)         Analog inputs (Submenu)         Calculated values (Submenu)         Configuration backup (Submenu)         Current input         Current input 1 to n (Submenu)         Current output         Current output (Wizard)         Data logging (Submenu)         Define access code (Wizard)         Device information (Submenu)         Display (Submenu)         Display (Wizard)         I/O configuration	
Packaging disposal         Parameter         Changing         Entering values or text         Parameter settings         Administration (Submenu)         Advanced setup (Submenu)         Analog inputs (Submenu)         Analog inputs (Submenu)         Calculated values (Submenu)         Configuration backup (Submenu)         Current input         Current input (Wizard)         Current output 1 to n (Submenu)         Current output (Wizard)         Data logging (Submenu)         Device information (Submenu)         Display (Submenu)         Display (Wizard)         I/O configuration         Low flow cut off (Wizard)	
Packaging disposal         Parameter         Changing         Entering values or text         Parameter settings         Administration (Submenu)         Advanced setup (Submenu)         Analog inputs (Submenu)         Analog inputs (Submenu)         Calculated values (Submenu)         Configuration backup (Submenu)         Current input         Current input 1 to n (Submenu)         Current output         Current output (Wizard)         Data logging (Submenu)         Define access code (Wizard)         Device information (Submenu)         Display (Submenu)         Display (Wizard)         I/O configuration	
Packaging disposal         Parameter         Changing         Entering values or text         Parameter settings         Administration (Submenu)         Advanced setup (Submenu)         Analog inputs (Submenu)         Analog inputs (Submenu)         Calculated values (Submenu)         Calculated values (Submenu)         Configuration backup (Submenu)         Current input         Current input 1 to n (Submenu)         Current output         Current output 1 to n (Submenu)         Data logging (Submenu)         Define access code (Wizard)         Device information (Submenu)         Display (Submenu)         Display (Wizard)         L/O configuration         Low flow cut off (Wizard)         Measured variables (Submenu)	

Pulse/frequency/switch output 1 to n (Submenu) 127

Relay output 1 to n (Submenu)	127
Relay output 1 to n (Wizard)	. 97
Reset access code (Submenu)	115
Select medium (Wizard)	82
Sensor adjustment (Submenu)	106
Setup (Menu)	79
Simulation (Submenu)	
Status input	86
Status input (Submenu)	
Status input 1 to n (Submenu)	
System units (Submenu)	79
Totalizer (Submenu)	124
Totalizer 1 to n (Submenu)	107
Totalizer handling (Submenu)	128
Value current output 1 to n (Submenu)	
Web server (Submenu)	
WLAN Settings (Submenu)	
Zero point adjustment (Submenu)	
Performance characteristics	
Pharmaceutical compatibility	
Post-connection check (checklist)	
Post-installation check	
Post-installation check (checklist)	
Potential equalization	
Power consumption	
Power supply failure	
Pressure loss	
Pressure-temperature ratings	
	201
Process variables	
Calculated	
Measured	
Product safety	
Protecting parameter settings	119

# R

Radio approval	07
RCM-tick symbol	
Read access	
Reading measured values	
Recalibration	
Reference operating conditions	
Registered trademarks	
Remedial measures	
Calling up	38
	38
	03
	75
	75
Repairs	
Notes	75
Repeatability	
Replacement	
Device components	75
Requirements for personnel	
Response time	93
	75
Rupture disk	
Safety instructions	26

Triggering pressure	7
S	
Safety	Λ
Sanitary compatibility	
Sensor	0
Mounting	q
Sensor heating	
Sensor housing	-
Serial number	
	7
Settings	
Adapting the measuring device to the process	
conditions	8
Administration	4
Advanced display configurations 10	19
Analog input	-
Current input	5
Current output	
Device reset	
	'9
I/O configuration	-
	19
Low flow	
Managing the device configuration	
Medium	
Operating language	
Partial filled pipe detection	
Pulse output	U
Villeo/trodiioneu/ewitch output 911 9	
Pulse/frequency/switch output	1
Relay output	1 7
Relay output9Resetting the totalizer12	1 7 8
Relay output9Resetting the totalizer12Restart device17	1 7 8 0
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10	1 7 8 0 6
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11	1 7 8 70 16
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8	1 7 8 70 16 16
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9	1 7 8 70 16 16
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9	17 806659 9
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9System units7	17 806665977
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9System units7Totalizer10	1780665978
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9System units7Totalizer10Totalizer reset12	178066659782
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9System units7Totalizer10Totalizer reset12WLAN11Showing data logging12Signal on alarm18	17806665978297
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9System units7Totalizer10Totalizer reset12WLAN11Showing data logging12Signal on alarm18Software release7	178066659782971
Relay output       9         Resetting the totalizer       12         Restart device       17         Sensor adjustment       10         Simulation       11         Status input       8         Switch output       9         System units       7         Totalizer reset       12         WLAN       11         Showing data logging       12         Signal on alarm       18         Software release       7         Spare part       17	1780666597829715
Relay output       9         Resetting the totalizer       12         Restart device       17         Sensor adjustment       10         Simulation       11         Status input       8         Switch output       9         System units       7         Totalizer       10         Totalizer reset       12         WLAN       11         Showing data logging       12         Signal on alarm       18         Software release       7         Spare part       17         Spare parts       17	17806665978297155
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9System units7Totalizer10Totalizer reset12WLAN11Showing data logging12Signal on alarm18Software release7Spare part17Spare parts17Special connection instructions4	1780666597829715
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9System units7Totalizer10Totalizer reset12WLAN11Showing data logging12Signal on alarm18Software release7Spare part17Spare parts17Special connection instructions4Special mounting instructions	178066659782971550
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9System units7Totalizer10Totalizer reset12WLAN11Showing data logging12Signal on alarm18Software release7Spare parts17Special connection instructions4Special mounting instructions2	178066659782971550 6
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9System units7Totalizer reset12WLAN11Showing data logging12Signal on alarm18Software release7Spare part17Spare parts17Special connection instructions4Special mounting instructions20	178066659782971550 6
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9System units7Totalizer10Totalizer reset12WLAN11Showing data logging12Signal on alarm18Software release7Spare part17Special connection instructions4Special mounting instructions20Status area20	178066659782971550 68
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9System units7Totalizer10Totalizer reset12WLAN11Showing data logging12Signal on alarm18Software release7Spare part17Spare parts17Special connection instructions4Special mounting instructions20Status areaFor operational display4	11780066659978299712550068888
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9System units7Totalizer10Totalizer reset12WLAN11Showing data logging12Signal on alarm18Software release7Spare part17Special connection instructions4Special mounting instructions20Status areaFor operational display4In the navigation view4	1 7 8 0 6 6 6 6 7 9 7 8 2 9 7 1 5 5 0 6 8 8 9 7 7 8 2 9 7 7 1 5 5 0 6 8 8 8 9 7 7 8 2 9 7 7 8 2 9 7 7 9 7 7 9 7 9 7 9 7 9 7 9 7 9 7 9
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9System units7Totalizer10Totalizer reset12WLAN11Showing data logging12Signal on alarm18Software release7Spare part17Spare parts17Special connection instructions4Special mounting instructions20Status areaFor operational display4In the navigation view4Status signals136, 13	1 7 8 0 6 6 6 6 5 9 7 8 2 9 7 1 5 5 0 6 8 8 9 9
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9System units7Totalizer10Totalizer reset12WLAN11Showing data logging12Signal on alarm18Software release7Spare part17Special connection instructions4Special mounting instructions20Status area70For operational display4In the navigation view4Status signals136, 13Storage concept20	1780666659782971550 688995
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9System units7Totalizer10Totalizer reset12WLAN11Showing data logging12Signal on alarm18Software release7Spare part17Spare parts17Special connection instructions4Special mounting instructions20Status area70For operational display4In the navigation view4Status signals136, 13Storage concept20Storage conditions2	1780666659782971550 688995
Relay output9Resetting the totalizer12Restart device17Sensor adjustment10Simulation11Status input8Switch output9System units7Totalizer10Totalizer reset12WLAN11Showing data logging12Signal on alarm18Software release7Spare part17Spare parts17Special connection instructions4Special mounting instructions20Status area7For operational display4In the navigation view4Status signals136, 13Storage concept20Storage conditions2	17806665977829771550 68999500

Structure	

Measuring device	
Operating menu	40
Submenu	
Administration	
Advanced setup	
Analog inputs	
Calculated values	
Configuration backup	
Current input 1 to n	
Data logging	
Device information	
Display	
Event list	
I/O configuration	
Input values	
Measured values	
Measured variables	
Output values	126
Overview	
Process variables	
Pulse/frequency/switch output 1 to n	
Relay output 1 to n	
Reset access code	115
Sensor adjustment	106
Simulation	116
Status input	86
Status input 1 to n	125
System units	79
Totalizer	124
Totalizer 1 to n	107
Totalizer handling	128
Value current output 1 to n	
Web server	64
WLAN Settings	112
Zero point adjustment	
Supply voltage	
Surface roughness	
Switch output	
Symbols	
Controlling data entries	52
For communication	48
For diagnostic behavior	48
For locking	48
For measured variable	48
For measurement channel number	
For menus	50
For parameters	50
For status signal	
For submenu	
For wizard	
In the status area of the local display	
Input screen	
Operating elements	
System design	
Measuring system	180
see Measuring device design	
System integration	71
System pressure	

Т	
Technical data, overview	180
Temperature range	
Ambient temperature range for display	201
Medium temperature	
Storage temperature	
Terminal assignment	. 34
Terminals	
Tests and certificates	
Text editor	51
Thermal insulation	24
Tool tip	
see Help text	
Tools	
Electrical connection	
For mounting	
Transport	. 20
Totalizer	
Configuration	107
Transmitter	20
Turning the display module	
Turning the housing	
Transporting the measuring device	20
Troubleshooting	177
General	
TSE/BSE Certificate of Suitability	
Turning the display module	. 29
Turning the electronics housing	
see Turning the transmitter housing	20
Turning the transmitter housing	29
U	
Use of the measuring device	
Borderline cases	10
Incorrect use	
see Designated use	10
User interface	
Current diagnostic event	166
Previous diagnostic event	
User roles	
USP Class VI	
V	
Version data for the device	
Vibration- and shock-resistance	
Vibrations	. 25
147	
W	
W@M 174,	
W@M Device Viewer 16,	175
Weight	100
	198
Transport (notes)	
US units	190
Current input	QL
Current output	
Define access code	
Display	
P	

Low flow cut off
Partially filled pipe detection
Pulse/frequency/switch output 90, 91, 95
Relay output 1 to n
Select medium
WLAN settings
Workplace safety 11
Write access
Write protection
Via access code
Via block operation
Via write protection switch
Write protection switch

www.addresses.endress.com

