s Services

Safety Instructions **Gammapilot M FMG60**

4-20 mA HART

Ex tb [ia Da] IIIC T80°C...T85°C Db Ex tb [ia Da] IIIC T80°C Db





Gammapilot M FMG60

4-20 mA HART

Table of contents

Associated documentation 4
Supplementary documentation
Manufacturer's certificates
Manufacturer address 4
Other standards
Extended order code
Safety instructions: General
Safety instructions: Special conditions
Safety instructions: Installation
Temperature tables
Connection data 12

Associated documentation

This document is an integral part of the following Operating Instructions:

BA00236F/00

Supplementary documentation

Explosion-protection brochure: CP00021Z/11

The Explosion-protection brochure is available:

- In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP000217.
- On the CD for devices with CD-based documentation

Manufacturer's certificates

IEC Declaration of Conformity

Certificate number: IECEx DEK 13.0071X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

IEC 60079-0: 2017IEC 60079-11: 2011IEC 60079-31: 2013

Manufacturer address

Endress+Hauser SE+Co. KG

Hauptstraße 1

79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

Other standards

Among other things, the following standards shall be observed in their current version for proper installation:

- IEC/EN 60079-14: "Explosive atmospheres Part 14: Electrical installations design, selection and erection"
- EN 1127-1: "Explosive atmospheres Explosion prevention and protection - Part 1: Basic concepts and methodology"

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

FMG60	-	*****	+	A*B*C*D*E*F*G*.
(Device		(Basic		(Optional
type)		specifications)		specifications)

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available.

The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Gammapilot M



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type FMG60

Basic specifications

Position 1 (Approval)			
Selected option		Description	
FMG60	I	IECEx Ex tb [ia Da] IIIC T80°C/T85°C Db	

Position 2 (Power Supply)		
Selected of	ption	Description
FMG60	1	90-253 VAC
	2	18-35 VDC

Position 3 (Connect. Power Supply; Connect. Output)		
Selected o	ption	Description
FMG60	F	Dust-Ex; dust-Ex
	L	Dust-Ex; Ex ia

Position 4	(Output)	
Selected option		Description
FMG60	1	4-20 mA HART

Position 5 (Scintillator; Measuring Range)			
Selected or	ption	Description	
FMG60	A-D	NaJ-Crystal	
	G-T	PVT	

Optional specifications

No options specific to hazardous locations are available.

Safety instructions: General

 Comply with the installation and safety instructions in the Operating Instructions.


- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - ullet Be trained in explosion protection
 - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Avoid electrostatic charging:
 - Of plastic surfaces (e.g. housing, sensor element, special varnishing, attached additional plates, ..)
 - Of isolated capacities (e.g. isolated metallic plates)

Safety instructions: Special conditions

In the event of additional or alternative special varnishing on the housing or other metal parts:

- Observe the danger of electrostatic charging and discharge.
- Do not rub surfaces with a dry cloth.
- Do not install in the vicinity of processes generating strong electrostatic charges.

Safety instructions: Installation

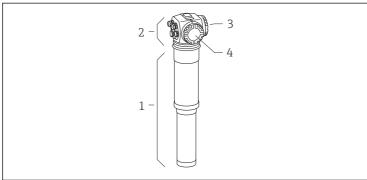


A0031753

- 1 Pipe housing
- 2 Compartment housing
- 3 Terminal compartment A
- 4 Terminal compartment B

XA01049F-C Gammapilot M FMG60

Circuit 4...20 mA/HART (active) in type of protection Intrinsic safety (Ex ia)

Basic specification, Position 3 = L

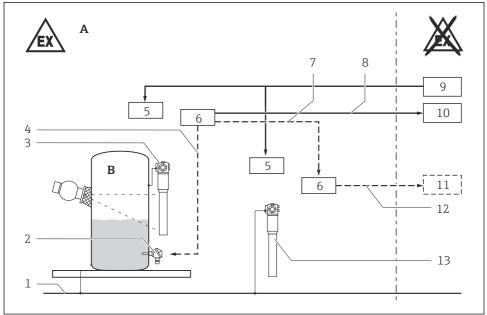


A0031789

- A Zone 21 or Zone 22
- B Zone 20, Zone 21 or Zone 22
- 1 Local potential equalization line
- 2 PT100; approved Ex ia equipment
- 3 FMG60 with NaJ crystal scintillator, PVT plastic scintillator
- 4 [Ex ia] circuit
- 5 Terminal compartment A (Ex t)
- 6 Terminal compartment B (Ex i)
- 7 [Ex ia] circuit; Cascade in, out
- 8 Communication: 4...20 mA/HART active [Ex ia]
- 9 Power supply
- 10 Certified associated apparatus
- 11 Certified associated apparatus
- 12 Communication: 4...20 mA/HART active [Ex ia]
- 13 FMG60 with NaJ crystal scintillator, PVT plastic scintillator

Circuit 4...20 mA/HART (active) in type of protection Enclosure (Ex t)

Basic specification, Position 3 = F

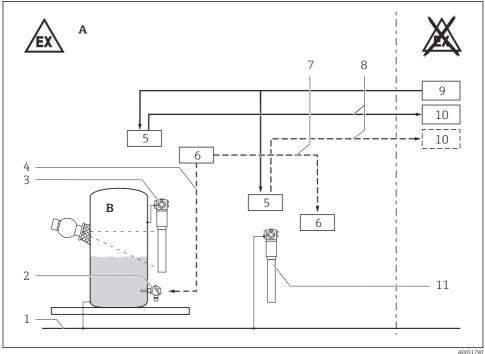

A0031790

- Α Zone 21 or Zone 22
- В Zone 20, Zone 21 or Zone 22
- 1 Local potential equalization line
- 2 PT100; approved Ex ia equipment
- 3 FMG60 with NaJ crystal scintillator, PVT plastic scintillator
- 4 [Ex ia] circuit
- Terminal compartment A (Ex t) 5
- 6 Terminal compartment B (Ex i)
- 7 [Ex ia] circuit; Cascade in, out
- 8 Communication: 4...20 mA/HART active
- 9 Power supply
- 10 E.g. transmitter
- 11 FMG60 with NaJ crystal scintillator, PVT plastic scintillator

XA01049F-C Gammapilot M FMG60

■ To maintain the ingress protection of the housing IP65/67: Install the housing cover, cable glands and blind plugs correctly.

- Cable glands as well as sealing plugs of the terminal compartment A must not be exchanged with those of the terminal compartment B.
- Do not open the terminal compartment A when energized.
- In an explosive atmosphere: Minimum waiting time before opening the terminal compartment A after switching off the power supply: 3 minutes.
- For service operations, the terminal compartment B (Ex i) may be opened under voltage for a short time. When the terminal compartment is opened make sure that no dust may deposit. After configuration screw the cover down to limit stop.
- Before operation:
 - Screw in the cover all the way.
 - Tighten the securing clamp on the cover.
- Continuous service temperature of the connecting cable: $\geq T_a + 20 \text{ K}$.
- Replace cable glands and sealing plugs only with identical parts.

The safety screws at the pipe housing must not be loosened:



A0031759

When using the water cooling

To avoid damages at the detector or at the cooling jacket if the cooling water freezes: Empty cooling jacket or protect against freezing.

Supplementary cable glands and associated seals
Only use suitable certified metallic cable glands with an ingress
protection of at least IP65.

Intrinsic safety

- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.
- The intrinsically-safe input circuits are galvanically isolated from other circuits up to a peak value of the nominal voltage of 375 V.
- \blacksquare The intrinsically safe circuits of the device are isolated from ground and have a dielectric strength of at least 500 $V_{\rm rms}.$

 When the device is connected to an intrinsically safe circuit Ex ib, the type of protection changes to Ex ib. Do not operate the temperature sensor in Zone 20 if the device is connected to an intrinsically safe circuit of Category Ex ib.

- When the device is connected to an intrinsically safe circuit Ex ic, the type of protection changes to Ex ic. Do not operate the temperature sensor in Zone 20 or Zone 21 if the device is connected to an intrinsically safe circuit of Category Ex ic.
- Do not interconnect the 4...20 mA/HART signal circuits of the devices of a cascade set.

Potential equalization

Integrate the device into the local potential equalization.

Temperature tables

Basic specification, Position 5 = A-D, G-T

Ambient temperature T _a (ambient)				
Without water cooling or water cooling out of operation.				
Devices with NaJ crystal scintillator:Devices with PVT plastic scintillator:	$-40 ^{\circ}\text{C} \le T_a \le +60 ^{\circ}\text{C}$ $-40 ^{\circ}\text{C} \le T_a \le +60 ^{\circ}\text{C}$			
With water cooling in operation.				
At the pipe housing (within the water cooling):				
Devices with NaJ crystal scintillator:Devices with PVT plastic scintillator:	$-40 ^{\circ}\text{C} \le T_a \le +60 ^{\circ}\text{C}$ $-40 ^{\circ}\text{C} \le T_a \le +60 ^{\circ}\text{C}$			
At the compartment housing:	$-40 ^{\circ}\text{C} \le T_a \le +80 ^{\circ}\text{C}$			

Max. surface temperature (T _{a,max})				
Without water cooling or water cooling out of operation.	T80 °C at $T_a = +60$ °C			
With water cooling in operation.				
At the pipe housing (within the water cooling):	T80 °C at T _a = +60 °C			
At the compartment housing:	T80 °C at $T_a = +75$ °C T85 °C at $T_a = +80$ °C			


Type of protection	
Terminal compartment A and B	Ex tb
Signal circuits in terminal compartment B	Ex ia

XA01049F-C Gammapilot M FMG60

Connection data

- Tightening torque of the terminal screws: max. 0.4 Nm.
- Strip the insulation of the connection wires with suitable length. Bare parts of the wires must not emerge from the terminal.
- Ensure that the wires are securely clamped.

Terminal compartment A

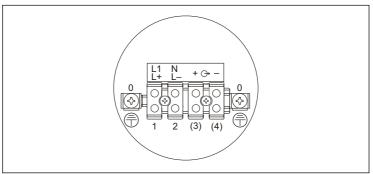


A0031763

Power supply circuit		
Basic specification, Position 2 = 1	L1 N	$U_e = 90 \text{ to } 253 \text{ V}_{AC}, 50/60 \text{ Hz}, 8.5 \text{ VA}$
Basic specification, Position 2 = 2	L+ L-	$U_e = 18 \text{ to } 35 \text{ V}_{DC}, 3.5 \text{ W}$ $U_m = 253 \text{ V}_{AC}$

Signal circuit				
Basic specification, Position 3 = L	→	not connected		
	+ -			
Basic specification, Position 3 = F	→	$\begin{array}{l} \text{420 mA/HART (active)} \\ \text{U}_{\text{m}} = 253 \text{ V}_{\text{AC}} \end{array}$		
	+ -	The detector ensures galvanic isolation up to a maximum of 253 $V_{\rm AC}$ between the signal circuit and any other circuit.		

Terminal compartment B Intrinsic safety (Ex ia)

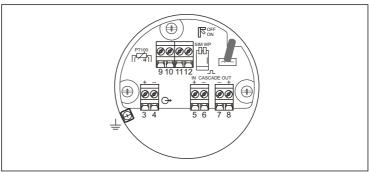

A0031764

Signal circuit			Ex ia IIIC
420 mA/ HART (active) ¹⁾	+ -	$\begin{split} &U_0=21.2\ V\\ &I_0=92\ mA\\ &P_0=479\ mW\\ &R_i=235\ \Omega\\ &C_i=13.4\ nF\\ &L_i=0\\ &Characteristic\ curve:\ linear\\ &U_i=30\ V\\ &I_i=13\ mA\\ &P_i=390\ mW \end{split}$	$C_o = 886 \text{ nF at}$ $L_o = 0.15 \text{ mH}$ $C_o = 686 \text{ nF at}$ $L_o = 1 \text{ mH}$
PT100	PT100 IT ♥∰	$\begin{split} &U_o=8.4~V\\ &I_o=8.3~mA\\ &P_o=17.5~mW\\ &R_i=1012~\Omega\\ &C_i=0\\ &L_i=0\\ &Characteristic~curve: linear \end{split}$	$C_o=6~\mu F$ at $L_o=1~mH$ $C_o=5.2~\mu F$ at $L_o=2~mH$
Cascade out ²⁾	 - +	$\begin{split} &U_{o}=8.4\ V\\ &I_{o}=19.2\ mA\\ &P_{o}=40.3\ mW\\ &R_{i}=439\ \Omega\\ &C_{i}=5.3\ nF\\ &L_{i}=67\ \mu H\\ &Characteristic\ curve:\ linear \end{split}$	$C_o = 42 \mu F$ $L_o = 199 \text{ mH}$

Signal circuit			Ex ia IIIC
Cascade in ³⁾	+ -	$\begin{split} &U_{i} = 8.4 \ V \\ &I_{i} = 19.2 \ mA \\ &P_{i} = 40.3 \ mW \\ &C_{i} = 0 \\ &L_{i} = 67 \ \mu H \end{split}$	
Connection for FHX40	(B)	$\begin{split} &U_{o}=4.7~V\\ &I_{o}=37.7~mA\\ &P_{o}=44.3~mW\\ &R_{i}=125~\Omega\\ &C_{i}=12.7~nF\\ &L_{i}=0\\ &Characteristic~curve: linear \end{split}$	Observe correct type of protection and associated Safety Instructions of FHX40.

- 1)
- 2)
- Only available at Basic specification, Position 3 = L Only for connection to FMG60 signal circuit Cascade in Only for connection to FMG60 signal circuit Cascade out 3)





www.addresses.endress.com