

Safety Instructions

Gammapilot M FMG60

PROFIBUS PA, FOUNDATION Fieldbus (Ex ia)

II 2 (1) D Ex tb [ia Da] IIIC T80°C...T85°C Db

II 2 (1) D Ex tb [ia Da] IIIC T80°C Db



Gammapilot M FMG60

PROFIBUS PA, FOUNDATION Fieldbus (Ex ia)

Table of contents

About this document 4

Associated documentation 4

Supplementary documentation 4

Manufacturer's certificates 4

Manufacturer address 5

Other standards 5

Extended order code 5

Safety instructions: General 7

Safety instructions: Special conditions 7

Safety instructions: Installation 8

Temperature tables 12

Connection data 13

About this document



This document has been translated into several languages. Legally determined is solely the English source text.

The document translated into EU languages is available:

- In the download area of the Endress+Hauser website:
www.endress.com -> Downloads -> Manuals and Datasheets ->
 Type: Ex Safety Instruction (XA) -> Text Search: ...
- In the Device Viewer: www.endress.com -> Product tools ->
 Access device specific information -> Check device features



If not yet available, the document can be ordered.

Associated documentation

This document is an integral part of the following Operating Instructions:

PROFIBUS PA
BA00329F/00

FOUNDATION Fieldbus
BA00330F/00

Supplementary documentation

Explosion-protection brochure: CP00021Z/11

The Explosion-protection brochure is available:

- In the download area of the Endress+Hauser website:
www.endress.com -> Downloads -> Brochures and Catalogs ->
 Text Search: CP00021Z
- On the CD for devices with CD-based documentation

Manufacturer's certificates

EU Declaration of Conformity

Declaration Number:
EG04017

The EU Declaration of Conformity is available:

In the download area of the Endress+Hauser website:
www.endress.com -> Downloads -> Declaration ->
 Type: EU Declaration -> Product Code: ...

EU type-examination certificate

Certificate number:
KEMA 04 ATEX 1153 X

List of applied standards: See EU Declaration of Conformity.

Manufacturer address	Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany Address of the manufacturing plant: See nameplate.
Other standards	Among other things, the following standards shall be observed in their current version for proper installation: <ul style="list-style-type: none">■ IEC/EN 60079-14: "Explosive atmospheres - Part 14: Electrical installations design, selection and erection"■ EN 1127-1: "Explosive atmospheres - Explosion prevention and protection - Part 1: Basic concepts and methodology"
Extended order code	The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

FMG60

–

+

A*B*C*D*E*F*G*..

(Device type)

(Basic specifications)

(Optional specifications)

* = Placeholder
At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications


The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Gammapilot M

-  The following specifications reproduce an extract from the product structure and are used to assign:
- This documentation to the device (using the extended order code on the nameplate).
 - The device options cited in the document.

Device type
FMG60

Basic specifications

Position 1 (Approval)		
Selected option		Description
FMG60	5	ATEX II 2(1) D Ex tb ia Da IIIC T80°C/T85°C Db
	6	ATEX II 2(1) G Ex db eb ia Ga IIC T6 Gb ATEX II 2(1) D Ex tb ia Da IIIC T80°C/T85°C Db
	7	ATEX II 2(1) G Ex db eb ia Ga IIC T6 Gb, WHG ATEX II 2(1) D Ex tb ia Da IIIC T80°C/T85°C Db
	8	ATEX II 2(1) G Ex db ia Ga IIC T6 Gb ATEX II 2(1) D Ex tb ia Da IIIC T80°C/T85°C Db
	M	ATEX II 2(1) G Ex db ia Ga IIC T6 Gb, WHG ATEX II 2(1) D Ex tb ia Da IIIC T80°C/T85°C Db

Position 2 (Power Supply)		
Selected option		Description
FMG60	1	90-253 VAC
	2	18-35 VDC

Position 3 (Connect. Power Supply; Connect. Output)		
Selected option		Description
FMG60	J	Ex eb, dust-Ex; Ex ia, dust-Ex
	K	Ex db, dust-Ex; Ex ia, dust-Ex
	L	Dust-Ex; Ex ia

Position 4 (Output)		
Selected option		Description
FMG60	2	PROFIBUS PA
	3	FOUNDATION Fieldbus

Position 5 (Scintillator; Measuring Range)		
Selected option		Description
FMG60	A-D	NaJ-Crystal
	G-T	PVT

Optional specifications

No options specific to hazardous locations are available.

Safety instructions: General



Observe also XA00332F for the device versions marked with II 2(1) G and II 2(1) D: *Basic specification, Position 1 = 6, 7, 8, M.*


- Comply with the installation and safety instructions in the Operating Instructions.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Avoid electrostatic charging:
 - Of plastic surfaces (e.g. housing, sensor element, special varnishing, attached additional plates, ..)
 - Of isolated capacities (e.g. isolated metallic plates)

Safety instructions: Special conditions

In the event of additional or alternative special varnishing on the housing or other metal parts:

- Observe the danger of electrostatic charging and discharge.
- Do not rub surfaces with a dry cloth.
- Do not install in the vicinity of processes generating strong electrostatic charges.

Safety instructions: Installation

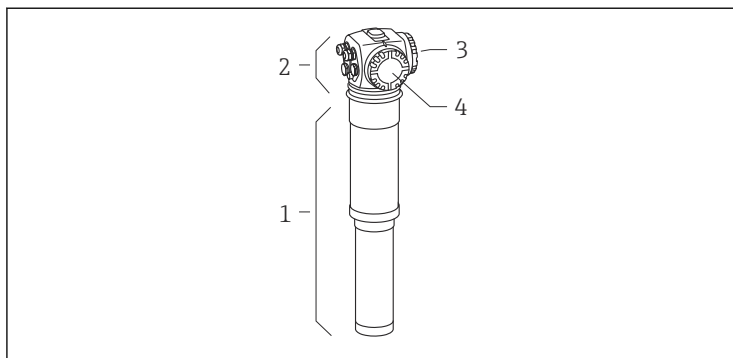


A0031753

- 1 Pipe housing
- 2 Compartment housing
- 3 Terminal compartment A
- 4 Terminal compartment B

Communication PROFIBUS PA, FOUNDATION Fieldbus in type of protection Intrinsic safety (Ex ia)

Basic specification, Position 3 = J, K, L

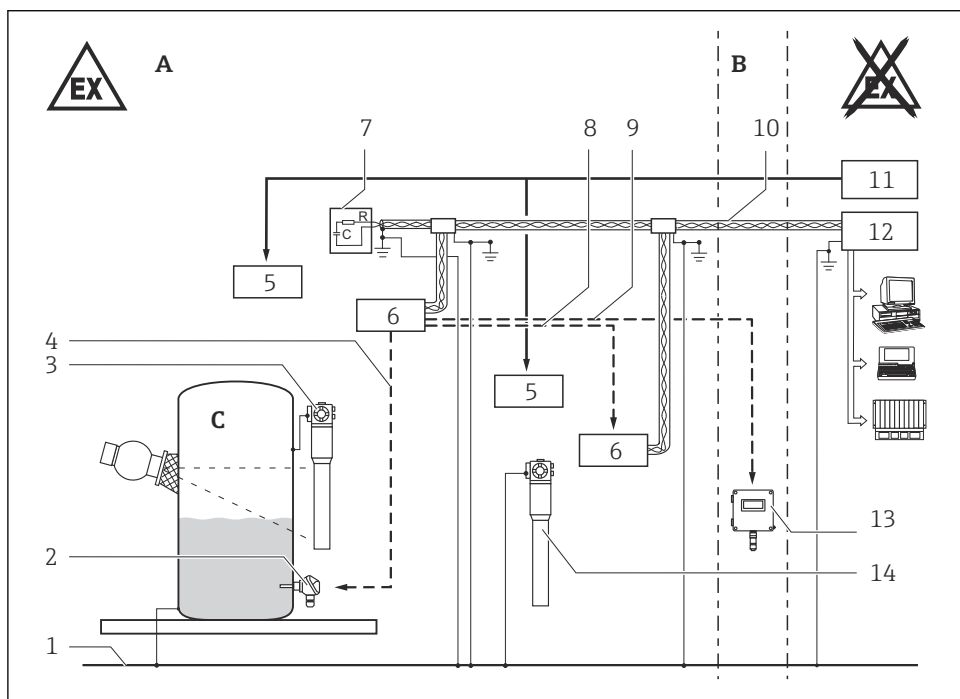


A0031791

- | | |
|----|---|
| A | Zone 21 or Zone 22 |
| B | Zone 21 or Zone 22 depending on certificate of FHX40 |
| C | Zone 20, Zone 21 or Zone 22 |
| 1 | Local potential equalization line |
| 2 | PT100; approved Ex ia equipment |
| 3 | FMG60 with NaJ crystal scintillator, PVT plastic scintillator |
| 4 | [Ex ia] circuit |
| 5 | Terminal compartment A (Ex t) |
| 6 | Terminal compartment B (Ex i) |
| 7 | Approved terminating resistor Ex ia IIC |
| 8 | [Ex ia] circuit; Cascade in, out |
| 9 | [Ex ia] circuit |
| 10 | Communication: PROFIBUS PA or FOUNDATION Fieldbus, Ex ia IIIC |
| 11 | Power supply |
| 12 | Certified associated apparatus |
| 13 | Remote display FHX40 |
| 14 | FMG60 with NaJ crystal scintillator, PVT plastic scintillator |

- To maintain the ingress protection of the housing IP65/67: Install the housing cover, cable glands and blind plugs correctly.
- Cable glands as well as sealing plugs of the terminal compartment A must not be exchanged with those of the terminal compartment B.
- Do not open the terminal compartment A when energized.
- In an explosive atmosphere: Minimum waiting time before opening the terminal compartment A after switching off the power supply: 3 minutes.
- For service operations, the terminal compartment B (Ex i) may be opened under voltage for a short time. When the terminal compartment is opened make sure that no dust may deposit. After configuration screw the cover down to limit stop.
- Before operation:
 - Screw in the cover all the way.
 - Tighten the securing clamp on the cover.
- Continuous service temperature of the connecting cable: $\geq T_a + 20\text{ K}$.
- Replace cable glands and sealing plugs only with identical parts.

The safety screws at the pipe housing must not be loosened:

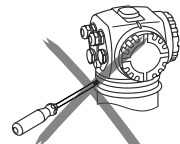

A0031759

When using the water cooling

To avoid damages at the detector or at the cooling jacket if the cooling water freezes: Empty cooling jacket or protect against freezing.

Supplementary cable glands and associated seals


Only use suitable certified metallic cable glands with an ingress protection of at least IP65.

Intrinsic safety

- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.
- The intrinsically-safe input circuits are galvanically isolated from other circuits up to a peak value of the nominal voltage of 375 V.
- The intrinsically safe circuits of the device are isolated from ground and have a dielectric strength of at least 500 V_{rms}.
- When the device is connected to an intrinsically safe circuit Ex ib, the type of protection changes to Ex ib. Do not operate the temperature sensor in Zone 20 if the device is connected to an intrinsically safe circuit of Category Ex ib.
- When the device is connected to an intrinsically safe circuit Ex ic, the type of protection changes to Ex ic. Do not operate the temperature sensor in Zone 20 or Zone 21 if the device is connected to an intrinsically safe circuit of Category Ex ic.

Potential equalization

- Integrate the device into the local potential equalization.
- Grounding the screen, see the following figure.

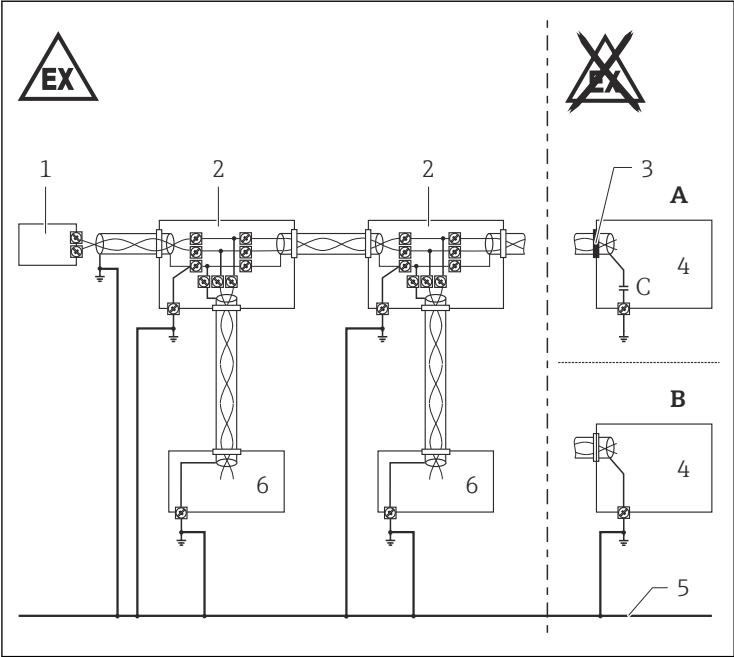

A0022352

- A Version 1: Use small capacitors (e.g. 1 nF, 1 500 V dielectric strength, ceramic). Total capacitance connected to the screen may not exceed 10 nF.
- B Version 2
- 1 Terminating resistor
- 2 Distributor/T box
- 3 Screen insulated
- 4 Supply unit/Segment coupler
- 5 Potential equalization (secured in high degree)
- 6 Field device

Temperature tables

Basic specification, Position 5 = A-D, G-T

Ambient temperature T _a (ambient)	
Without water cooling or water cooling out of operation. <ul style="list-style-type: none">■ Devices with NaJ crystal scintillator:■ Devices with PVT plastic scintillator:	$-40\text{ }^{\circ}\text{C} \leq T_a \leq +60\text{ }^{\circ}\text{C}$ $-40\text{ }^{\circ}\text{C} \leq T_a \leq +60\text{ }^{\circ}\text{C}$
With water cooling in operation. At the pipe housing (within the water cooling): <ul style="list-style-type: none">■ Devices with NaJ crystal scintillator:■ Devices with PVT plastic scintillator:	$-40\text{ }^{\circ}\text{C} \leq T_a \leq +60\text{ }^{\circ}\text{C}$ $-40\text{ }^{\circ}\text{C} \leq T_a \leq +60\text{ }^{\circ}\text{C}$
At the compartment housing:	$-40\text{ }^{\circ}\text{C} \leq T_a \leq +80\text{ }^{\circ}\text{C}$


Max. surface temperature (T _{a,max})	
Without water cooling or water cooling out of operation.	T80 °C at T _a = +60 °C
With water cooling in operation. At the pipe housing (within the water cooling): At the compartment housing:	T80 °C at T _a = +60 °C T80 °C at T _a = +75 °C T85 °C at T _a = +80 °C

Type of protection	
Terminal compartment A and B	Ex tb
Signal circuits in terminal compartment B	Ex ia

Connection data



- Tightening torque of the terminal screws: max. 0.4 Nm.
- Strip the insulation of the connection wires with suitable length. Bare parts of the wires must not emerge from the terminal.
- Ensure that the wires are securely clamped.

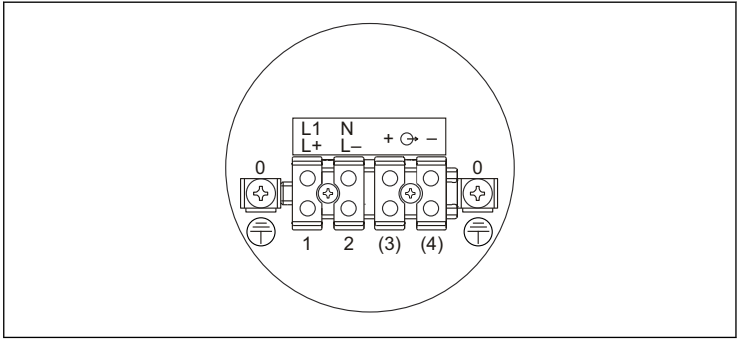Terminal compartment A



A0031763

Power supply circuit		
Basic specification, Position 2 = 1	L1 N	U _e = 90 to 253 V _{AC} , 50/60 Hz, 8.5 VA
Basic specification, Position 2 = 2	L+ L-	U _e = 18 to 35 V _{DC} , 3.5 W U _m = 253 V _{AC}

Signal circuit			Ex ia IIIC
Cascade in ³⁾	 + -	$U_i = 8.4\text{ V}$ $I_i = 19.2\text{ mA}$ $P_i = 40.3\text{ mW}$ $C_i = 0$ $L_i = 67\text{ }\mu\text{H}$	
Connection for FHX40		$U_o = 4.7\text{ V}$ $I_o = 37.7\text{ mA}$ $P_o = 44.3\text{ mW}$ $R_i = 125\text{ }\Omega$ $C_i = 12.7\text{ nF}$ $L_i = 0$ Characteristic curve: linear	For connection to the approved display FHX40 with associated cable (KEMA 02 ATEX 1203) in type of protection intrinsic safety Ex ia IIC or Ex ia IIIC. Observe associated Safety Instructions XA00193F! $C_o = 150\text{ }\mu\text{F}$ $L_o = 25\text{ mH}$

- 1) Only available at Basic specification, Position 3 = J, K, L
- 2) Only for connection to FMG60 signal circuit Cascade in
- 3) Only for connection to FMG60 signal circuit Cascade out



71523863

www.addresses.endress.com
