Safety Instructions **Proline Promag 300**

Class I Zone 2 Class I Division 2







Proline Promag 300

Table of contents

Associated documentation	4
Manufacturer's certificates	4
Manufacturer address	5
Extended order code	5
Safety instructions: General	8
Safety instructions: Installation	9
Temperature tables	1
Connection values: Signal circuits	5

Associated documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* (www.endress.com/deviceviewer): Enter serial number from nameplate.
- Endress+Hauser Operations app: Enter serial number from nameplate or scan matrix code on nameplate.

This document is an integral part of the following Operating Instructions:

Measuring device	Documentation code						
HART FOUNDATION Fieldbus				PROFIBUS DP			
Promag H 300	BA01392D	BA01477D	BA01396D	BA01865D			
Promag P 300	BA01393D	BA01478D	BA01397D	BA01853D			
Promag W 300	BA01918D	BA01938D	BA01928D	BA01940D			

Measuring device	Documentation code					
	Modbus RS485	EtherNet/IP	PROFINET			
Promag H 300	BA01394D	BA01716D	BA01718D			
Promag P 300	BA01395D	BA01717D	BA01719D			
Promag W 300	BA01939D	BA01937D	BA01941D			

Additional documentation

Contents	Document type	Documentation code
Remote display and	Special documentation	SD01763D
operating module DKX001	Safety Instructions	XA01513D
	Class I Zone 2; Class I Division 2	
Explosion Protection	Brochure	CP00021Z/11
Ethernet-APL Installation Drawing	Installation Drawing	HE_01622
Control drawing		As wanted on the nameplate.

Please note the documentation associated with the device.

Manufacturer's certificates

Certificate number CSA 16.70087366

Notified body

CSA Group

 
Manufacturer address

Endress+Hauser Flowtec AG Kägenstrasse 7 4153 Reinach BL Switzerland

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code



Device type

The device and the device design is defined in the "Device type" section (Product root).

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Device type

Position	Order code for	Option selected	Description
1	Instrument family	5	Electromagnetic flowmeter
2	Sensor	H, P, W 1)	Sensor type
3	Transmitter	3	Transmitter type: 4-wire, compact version
4	Generation index	В	Platform generation
5, 6	Nominal diameter	Examples: 02, 04, 40, 50, 1H, 1Z, T0, E4 ^{2) 3)}	Nominal diameter of sensor

- 1) For replacement transmitter only: X
- 2) For the exact specification of the nominal diameter, see nameplate
- 3) For replacement transmitter only: XX

Basic specifications

Position 1, 2 Order code for "Approval" Option selected	for "Approval"				
CS	Cl.I, Div.2, Gps. A-D T5T1	Cl.I, Div.2, Gps. A-D T5T1			
CZ	Cl.I, Zone 2, AEx/Ex ec nC ic IIC T5T1 Gc ¹⁾	Cl.I, Zone 2, AEx/Ex ec ic IIC T5T1 Gc			

1) The marking changes with order code "Output; input 1", option HA, MC, RC or TA: Cl.I, Zone 2, AEx/Ex ec nC [ic] T5...T4 Gc

Position	Order code for	Option selected	Description
4, 5	Output, input 1	BA 4-20mA HART	
		GA	PROFIBUS PA
		НА	PROFIBUS PA Ex-i
		LA	PROFIBUS DP
		MA	Modbus RS485
		МВ	Modbus TCP with Ethernet-APL
	MC Modbus TCP with I		Modbus TCP with Ethernet-APL Ex i
		NA	EtherNet/IP 2-port switch integrated
		RA	PROFINET IO 2-port switch integrated

Position	Order code for	Option selected	Description
		RB	PROFINET with Ethernet-APL
		RC	PROFINET with Ethernet-APL Ex i
		SA	FOUNDATION Fieldbus
		TA	FOUNDATION Fieldbus Ex-i
6	Output, input 2	А	W/o
		В	4-20mA
		С	4-20mA Ex-i passive
		D	Configurable I/O initial setting off
		Е	Pulse/frequency/switch output
		F	Pulse output, phase-shifted
		G	Pulse/frequency/switch output Ex-i passive
		Н	Relay
		I	4-20mA input
		J	Status input
7	Output, input 3	A	W/o
		В	4-20mA
		С	4-20mA Ex-i passive
		D	Configurable I/O initial setting off
		Е	Pulse/frequency/switch output
		F	Pulse output, phase-shifted
		G	Pulse/frequency/switch output Ex-i passive
		Н	Relay
		I	4-20mA input
		J	Status input
8	Display; Operation	A	W/o; via communication
		F	4-line, illuminated; touch control
		G	4-line, illuminated; touch control + WLAN
		M	W/o; prepared for remote display DKX001
		0	4-line, illuminated; touch control
9 Housing A		A	Alu, coated
		В	Stainless, hygienic
11	Liner	A	PFA
		В	PFA High-temperature

Position	Order code for	Option selected	Description	
		Е	PTFE	
		Н	Hard rubber	
		Q	PTFE 90°C	
		U	Polyurethane	
17, 18	Device Model	A1	1	
		A2	2	

Optional specifications

ID	Order code for	Option selected	Description
Cx	Sensor option	CG	Extended neck for insulation ¹⁾

1) Only for Promag W and Promag P available

Safety instructions: General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations or guidelines (e.g. CEC or NEC)
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- Observe all the technical data of the device (see nameplate).
- In devices with damaged Ex d threads:
 - Use in hazardous areas is not permitted.
 - Repair of Ex d threads is not permitted.
- Avoid electrostatic charge (e.g. caused by friction, cleaning, maintenance, strong currents in the medium):
 On the attached stainless steel nameplate and on painted metallic housings that are not integrated into the local potential equalization system.

MARNING

Substitution of components is not permitted.

 Substitution of components may impair suitability for Class I, Division 2.

Safety instructions: Installation

- In the case of a horizontal orientation and the order code for "Housing", option B "Stainless, hygienic": install the transmitter at the side of or below the sensor.
- The following applies for devices with order code for "Housing",
 Option B "Stainless, hygienic": Thermal insulation is not allowed.
- Continuous service temperature of the connecting cable:

 40 to +80 °C; in accordance with the range of service temperature taking into account additional influences of the process conditions (T_{a min} and T_{a max} + 20 K).
- Only use certified cable entries suitable for the application. Observe national regulations and standards.
- When the measuring device is connected, attention must be paid to explosion protection at the transmitter.
- Turning the transmitter housing
 - Loosen both hexagon socket screws until the transmitter housing can be turned.
 - Turn transmitter housing to desired position (mechanically limited); if necessary turn 270° in other direction.
 - Tighten both hexagon socket screws with a maximum of 7 Nm.
- In potentially explosive atmospheres:
 - Do not disconnect the electrical connection of the power supply circuit when energized.
 - Do not open the connection compartment cover when energized.
- Install the transmitter circuit wiring according to Canadian Electrical Code (CEC) respective National Electrical Code (NEC) using threaded conduit or other wiring methods in accordance with articles 500 to 510.

AEx/Ex ec type of protection

- In potentially explosive atmospheres: Do not disconnect the electrical connection of the power supply circuit when energized.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection.
- Only use certified cable entries or sealing plugs.
- Equipment in type of protection AEx/Ex ec, shall be installed using a transient protection not exceeding 140% of the peak rated voltage value at the power supply terminals and IO terminals.
- For measuring devices with order code "Housing", option B "Stainless, hygienic":
 - To close the connection compartment cover, first hand-tight the cover and then tighten it further 45° (corresponds to 15 Nm).
 - In combination with order code "Display; Operation", option F or G "4-line illum.": Prevent electrostatic charge. Clean only with moist cloth

Optional external WLAN antenna

- Connect the antenna bushing H337 to the transmitter housing and tighten by hand.
- Use only external antennas supplied by Endress+Hauser.
- Connect antenna or antenna cable with plug-in connector type N (MIL-STD-348) to antenna bushing H337.

Optional RFID TAG

- In the case of high electromagnetic field intensities in accordance with IEC/EN 60079-14: Use is not permitted.
- Avoid electrostatic charging.
- Ensure sufficient distance from processes generating high charges.

Intrinsic safety

Observe the guidelines for interconnecting intrinsically safe circuits (e.g. Proof of Intrinsic Safety).



- When using the remote display and operating module DKX001 the internal display and operating module must be removed.
- When using the separate approved, remote display and operating module DKX001, only use the following variants:
 Basic specification of the remote display and operating module DKX001, order code "Approval", option CS, CZ

Potential equalization

- Integrate the device into the potential equalization .
- If the ground connection has been established via the pipe as specified, it is also possible to integrate the sensor into the potential equalization system via the pipe.
- The antenna bushing H337 of the external antenna must be integrated into the potential equalization system. This is the case if the sensor is connected in accordance with the regulations via the coupling.

Temperature tables

Ambient temperature

Minimum ambient temperature

 $T_a = -40 \, ^{\circ}\text{C}$

Maximum ambient temperature

 $T_{\text{a}} = +60\,^{\circ}\text{C}$ depending on the medium temperature and temperature class.

Medium temperature

Minimum medium temperature

 $T_{\rm m}$ = -40 to 0 °C depending on the selected device version (see nameplate!)

Maximum medium temperature

 T_{m} for T5...T1 depending on the maximum ambient temperature T_{a}

Maximum medium temperature with or without thermal insulation according to Endress+Hauser specifications

Promag H

DN	T _a		T _m [°C]					
	[°C]	T6 [85 °C]	T5 [100 ℃]	T4 [135 ℃]	T3 [200 ℃]	T2 [300°C]	T1 [450 ℃]	
Without ther	mal insula	tion						
2150	50	-	95 ¹⁾	130	150	150	150	
	55 ²⁾	_	80 1)	130	150	150	150	
	60 ²⁾	-	-	100	100	100	100	

¹⁾ The maximum admissible ambient temperature changes for devices with order code for "Housing", Option B "Stainless, hygienic" in connection with temperature class T5: $T_a = T_a - 3$ K

²⁾ $T_a = 50$ °C for optional specification, ID Cx (Sensor option) = CI (Fluid Temperature Probe)

Promag P

DN	Liner	Ta	T _m [°C]						
		[°C]	T6 [85 °C]	T5 [100°C]	T4 [135 ℃]	T3 [200 °C]	T2 [300°C]	T1 [450 ℃]	
Without ther	mal insulation	n							
15600	PTFE	50	_	90	130	130	130	130	
		55	-	-	130	130	130	130	
		60	-	-	100	100	100	100	
25200	PFA	40	-	-	-	150	150	150	
		45	-	95	130	130	130	130	
		50	-	90	130	130	130	130	
		60	-	-	100	100	100	100	
Extended ned	k for insulation	on (Option	al specificati	on, ID Cx (Sen	sor Option) = 0	CG), with or wi	thout thermal	insulation	
15300	PTFE	50	-	90	130	130	130	130	
		55	-	-	130	130	130	130	
		60	-	-	100	100	100	100	
25200	PFA	40	-	-	-	150	150	150	
		45	-	95	130	130	130	130	
		50	-	90	130	130	130	130	
		60	-	-	100	100	100	100	
High-tempera	ature version	(Order cod	le for "Liner",	option B) with	out thermal ir	nsulation			
25200	PFA	45	-	95	130	180	180	180	
		50	-	90	130	160	160	160	
		60	-	-	100	100	100	100	
High-tempera	ature version	(Order cod	le for "Liner",	option B) with	ı thermal insul	ation			
25200	PFA	45	-	95	130	170	170	170	
		50	-	90	130	160	160	160	
		60	-	-	100	100	100	100	

Promag W


DN	Liner	T _a			T _m	[°C]		
		[°C]	T6 [85 °C]	T5 [100 ℃]	T4 [135 ℃]	T3 [200 ℃]	T2 [300 °C]	T1 [450 ℃]
Without ther	mal insulation							
25300	PTFE	50	-	90	90	90	90	90
		55	-	-	90	90	90	90
		60	-	-	90	90	90	90
502400	Hard rubber	50	-	80	80	80	80	80
		60	-	-	80	80	80	80
251200	PU	50	-	50	50	50	50	50
Extended ned	ck for insulation	n (Option	al specification	on, ID Cx (Sens	sor Option) = 0	CG), with or wi	thout thermal	insulation
25300	PTFE	50	-	90	90	90	90	90
		55	-	-	90	90	90	90
		60	-	-	90	90	90	90
50300	Hard rubber	50	_	80	80	80	80	80
		60	-	_	80	80	80	80
251200	PU	50	_	50	50	50	50	50

With thermal insulation without Endress+Hauser specifications $\begin{tabular}{l} \textbf{NOTICE} \end{tabular}$

The following applies for devices with order code for "Housing", Option B "Stainless, hygienic":

▶ Thermal insulation is not allowed.

The specified reference temperature T_{ref} and the maximum medium temperature $T_{m,\,max}$ for each temperature class must not be exceeded.

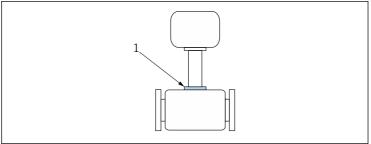

A0038947

- 1 High-temperature version or extension neck for insulation: position of reference point for temperature measurement
- 1 Reference point (T_{ref})

Reference temperature T_{ref}

T6	T5	T4	T3	T2	T1
[85 ℃]	[100 ℃]	[135 ℃]	[200 ℃]	[300 ℃]	[450 °C]
-	62.2	74,0	75.6	75.6	75.6

Connection values: Signal circuits

The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.

Terminal assignment

Transmitter: supply voltage, input/outputs

HART

Supply voltage		Input/output 1		Input/output 2		Input/output 3	
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)
		Device-s	specific term	inal assigni cov		ive label in	terminal

FOUNDATION Fieldbus

Supply	ply voltage Input/output 1		Input/output 2		Input/output 3		
1 (+)	2 (-)	26 (A)	27 (B)	24 (+)	25 (-)	22 (+)	23 (-)
		Device-s	pecific term	inal assigni cov		ive label in	terminal

PROFIBUS DP

Supply	Supply voltage Input/output 1		Input/output 2		Input/output 3		
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)
		Device-s	pecific term	inal assigni cov		ive label in	terminal

PROFIBUS PA

Supply voltage		Input/output 1		Input/output 2		Input/output 3	
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)
		Device-s	pecific term	inal assignr cov		ive label in	terminal

Modbus RS485

Supply	Supply voltage Input/output 1		Input/output 2		Input/output 3		
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)
		Device-s	pecific term	,	nent: adhes ver.	ive label in	terminal

Modbus TCP with Ethernet-APL

Supply	Supply voltage I		Input/output 1		Input/output 2		Input/output 3	
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	
		Device-s	specific term	inal assignr cov		ive label in	terminal	

PROFINET

Supply	voltage	Input/output 1	Input/o	utput 2	Input/o	utput 3
1 (+)	2 (-)	PROFINET (RJ45 connector)		•	22 (+) minal assign terminal co	


PROFINET with Ethernet-APL

Supply voltage		Input/output 1		Input/output 2		Input/output 3		
1 (+)	2 (-)	26 (+)	26 (+) 27 (-) 24 (+) 25 (-) 22 (+) 23 (-)					
		Device-s	pecific term	inal assignr cov		ive label in	terminal	

EtherNet/IP

Supply voltage		Input/output 1	Input/output 2		Input/output 3	
1 (+)	2 (-)	EtherNet/IP (RJ45 connector)		25 (-) -specific ter esive label ir		

Remote display and operating module DKX001

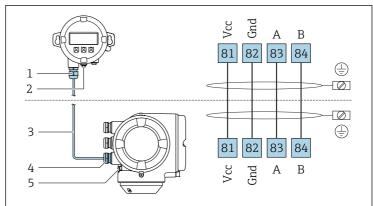

A0027518

- 1 Remote display and operating module DKX001
- 2 Protective earth (PE)
- 3 Connecting cable
- 4 Measuring device
- 5 Protective earth (PE)

Safety-related values

Order code for "Output; input 1"	Output type	Safety-related values "Output; input 1"		
		26 (+)	27 (-)	
Option BA	Current output 4 to 20 mA HART	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option GA	PROFIBUS PA	$U_{N} = 32 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option LA	PROFIBUS DP	$U_{N} = 32 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option MA	Modbus RS485	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option MB	Modbus TCP with Ethernet-APL	APL port profile SLAX SPE PoDL classes 10, 11, 12 $U_N = 30 \ V_{DC}$ $U_M = 250 \ V_{AC}$		
Option SA	FOUNDATION Fieldbus	$U_{N} = 32 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option NA	EtherNet/IP	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$		

Order code for "Output; input 1"	Output type	Safety-related values "Output; input 1"		
		26 (+)	27 (-)	
Option RA	PROFINET	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option RB	PROFINET with Ethernet-APL	APL port profile SLAX SPE PoDL classes 10, 11, 12 $U_N = 30 \ V_{DC}$ $U_M = 250 \ V_{AC}$		

Order code for	Output type	Safety-related values			
"Output; input 2"; "Output; input 3"		Output; input 2		Output;	input 3
		24 (+)	25 (-)	22 (+)	23 (-)
Option B	Current output 4 to 20 mA	$U_N = 30 \ V_{DC}$ $U_M = 250 \ V_{AC}$			
Option D	User-configurable input/output	$\begin{array}{c} U_N = 30 \ V_{DC} \\ U_M = 250 \ V_{AC} \end{array}$			
Option E	Pulse/frequency/ switch output	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$			
Option F	Double pulse output	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$			
Option H	Relay output	$\begin{array}{c} U_{N} = 30 \ V_{DC} \\ I_{N} = 100 \ mA_{DC}/500 \ mA_{AC} \\ U_{M} = 250 \ V_{AC} \end{array}$			
Option I	Current input 4 to 20 mA	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$			
Option J	Status input	$U_{\rm N} = 30 \rm V_{\rm I}$ $U_{\rm M} = 250 \rm V_{\rm I}$	JC		

Intrinsically safe values

Order code for "Output; input 1"	Output type	Intrinsically safe values or NIFW values "Output; input 1"		
		26 (+)	27 (-)	
Option HA	PROFIBUS PA Ex i (STANDARD + FISCO)	AEx ic, Ex ic, NIFW $U_i = 32 \text{ V}$ $l_i = 570 \text{ mA}$ $P_i = 8.5 \text{ W}$ $L_i = 10 \mu\text{H}$ $C_i = 5 \text{ nF}$		
Option MC	Modbus TCP with Ethernet-APL Ex i	2-WISE power load, A	APL port profile	
Option RC	PROFINET with Ethernet-APL Ex i			
Option TA	FOUNDATION Fieldbus Ex i (STANDARD + FISCO)	AEx ic, Ex ic, NIFW $U_i = 32 \text{ V}$ $I_i = 570 \text{ mA}$ $P_i = 8.5 \text{ W}$ $L_i = 10 \mu\text{H}$ $C_i = 5 \text{ nF}$		

¹⁾ For further options see Ethernet-APL Installation Drawing HE_01622 .

Order code for "Output; input 2";	Output type	Intrinsically safe values or NIFW values			
"Output; input 3"		Output;	input 2	Output; input 3	
		24 (+)	25 (-)	22 (+)	23 (-)
Option C	Current output 4 to 20 mA Ex i passive	$\begin{aligned} &U_i = 30 \text{ V} \\ &l_i = 100 \text{ m.} \\ &P_i = 1.25 \text{ V} \\ &L_i = 0 \\ &C_i = 0 \end{aligned}$			
Option G	Pulse/frequency/ switch output Ex i passive	$\begin{aligned} &U_i = 30 \text{ V} \\ &l_i = 100 \text{ m.} \\ &P_i = 1.25 \text{ V} \\ &L_i = 0 \\ &C_i = 0 \end{aligned}$			

Remote display DKX001

Basic specification, position 1, 2 Approval	Terminal assignment	Basic specification, position 8 Display; Operation Option O
Option CS, CZ	81, 82, 83, 84	$U_n = 3.3 \text{ V}$
Option C3, C2	01, 02, 03, 04	I _n = 150 mA







www.addresses.endress.com