# Installation Instructions Replacing transmitter, user interface board

Promag, Promass 300, 500, 500-digital





# Replacement of transmitter, user interface board

Promag, Promass 300, 500, 500-digital

# Table of contents

1	Overview of spare part sets	• 4
2	Intended use	5
3	Personnel authorized to carry out repairs	5
4	Safety instructions	. 6
5	Symbols used	. 7
6	Tools list	8
7	Preparatory steps for Promag, Promass 300, 500	. 8
8	Promag, Promass 300	9
9	Promag, Promass 500	. 16
10	Flashing the firmware	18
11	Preparatory steps for Promag, Promass	19
12	Promag, Promass 500-digital	20
13	Flashing the firmware	27
14	Disposal	28

# 1 Overview of spare part sets

The Installation Instructions apply to the following spare part sets:

Order structure		Device component	
Promag 300			
	HT	$1 \times$ transmitter housing, $1 \times$ user interface board, cable entries, cover, nameplate, terminals, Promag 300	
XPD0032-	HO	1 × transmitter housing, cable entries, cover, nameplate, Promag 300	
	ТО	1 × user interface board, terminals, Promag 300	
Promass 300			
	HT	$1 \times$ transmitter housing, $1 \times$ user interface board, cable entries, cover, nameplate, terminals, Promass 300	
XPD0033-	НО	1 × transmitter housing, cable entries, cover, nameplate, Promass 300	
	TO	1 × user interface board, terminals, Promass 300	
Promag 500			
	HT	$1 \times$ transmitter housing, $1 \times$ user interface board, cable entries, cover, nameplate, terminals, Promag 500	
XPD0034-	НО	1 × transmitter housing, cable entries, cover, nameplate, Promag 500	
	TO	1 × user interface board, terminals, Promag 500	
Promass 500			
	HT	$1 \times$ transmitter housing, $1 \times$ user interface board, cable entries, cover, nameplate, terminals, Promass 500	
XPD0035-	НО	1 × transmitter housing, cable entries, cover, nameplate, Promass 500	
	TO	1 × user interface board, terminals, Promass 500	

- The order number of the spare part set (on the product label on the package) can differ from the production number (on the label directly on the spare part)!
  - You can find the order number of the relevant spare part set by entering the production number of the spare part in the spare part search tool.
  - We recommend that you keep the Installation Instructions and packaging together at all times.

# 2 Intended use

- A defective unit can only be replaced with a functioning unit of the same type.
- Only use original parts from Endress+Hauser.
- Check in the W@M Device Viewer if the spare part is suitable for the existing measuring device.

A spare parts overview is located in the interior of some measuring devices. If the spare parts kit is specified on this list, no inspection is required.



# 3 Personnel authorized to carry out repairs

Authorization to carry out repairs depends on the measuring device's approval type. The table below shows the authorized group of people in each case.

Whoever carries out the repairs has full responsibility to ensure that work is carried out safely and to the required quality standard. He/she must also guarantee the safety of the device following repair.

Measuring device approval	Personnel authorized to carry out repairs <sup>1)</sup>
Without approval	2, 3
With approval (e.g. IECEx)	2, 3
For custody transfer	4

1) 1 = Qualified specialist on customer side, 2 = Service technician authorized by Endress+Hauser,

3 = Endress+Hauser (return measuring device to manufacturer)

4 = Check with local approval center if installation/alteration must be performed under supervision.

# 4 Safety instructions

- Check whether the spare part matches the identification labeling on the measuring device, as described on the cover page.
- The spare part set and the Installation Instructions are used to replace a defective unit with a functioning unit of the same type.

Only use original parts from Endress+Hauser.

- Comply with national regulations regarding mounting, electrical installation, commissioning, maintenance and repair.
- The following requirements must be met with regard to specialized technical staff for the mounting, electrical installation, commissioning, maintenance and repair of the measuring devices:
  - Specialized technical staff must be trained in instrument safety.
  - They must be familiar with the individual operating conditions of the devices.
  - In the case of Ex-certified measuring devices, they must also be trained in explosion protection.
- The measuring device is energized! Risk of fatal injury from electric shock. Open the measuring device only when the device is de-energized.
- For measuring devices intended for use in hazardous locations, please observe the guidelines in the Ex documentation (XA).
- For measuring devices in safety-related applications in accordance with IEC 61508 or IEC 61511: following repair, re-commission the device in accordance with the Operating Instructions. Document the repair.
- Before removing the device: set the process to a safe state and purge the pipe of dangerous process substances.
- Danger of burns due to heated surfaces! Before commencing work: allow the system and measuring device to cool down to a touchable temperature.
- In the case of devices in custody transfer, the custody transfer status no longer applies once the seal has been removed.
- The Operating Instructions for the device must be followed.
- Risk of damaging the electronic components! Ensure you have a working environment protected from electrostatic discharge.
- After removing the electronics compartment cover: risk of electrical shock due to missing touch protection!
  - Turn the measuring device off before removing internal covers.
- Modifications to the measuring device are not permitted.
- Only open the housing for a brief period. Avoid foreign objects, moisture or dirt entering the housing.
- Replace defective seals only with original seals from Endress+Hauser.
- If threads are defective the measuring device must be repaired.
- Threads (e.g. of the electronics compartment cover and connection compartment cover) must be lubricated if an abrasion-proof dry lubricant is not available. Use acid-free, non-hardening lubricant.

- If, during repair work, spacing is reduced or the dielectric strength of the measuring device cannot be guaranteed, perform a test on completion of the work (e.g. high-voltage test in accordance with the manufacturer's instructions).
- Service plug:
  - Do not connect in potentially explosive atmospheres.
  - Only connect to Endress+Hauser service devices.
- Observe the instructions for transporting and returning the device outlined in the Operating Instructions.

Contact Endress+Hauser Service if you have questions: www.addresses.endress.com

# 5 Symbols used

### 5.1 Safety symbols

#### **DANGER**

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

#### **WARNING**

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

#### **A**CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

#### NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

### 5.2 Symbols for certain types of information

Symbol	Meaning
	<b>Permitted</b> Procedures, processes or actions that are permitted.
×	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
1., 2., 3	Series of steps

#### 6 Tools list

$\bigcirc \not \Subset$	
3 mm, 4 mm	T20







Torque wrench
---------------

#### Preparatory steps for Promag, Promass 300, 500 7 NOTICE

Pay attention to the following points before replacing the user interface board or the transmitter with user interface board:

### ▶ SIL approval, current device configuration, software version, DIP switch

### SIL approval

If SIL approval is available for the measuring device and the customer's consent has been obtained, stop operation of the measuring device.



For detailed information on how to stop SIL operation, see the special documentation for the device.

### External backup of current device configuration

The current device configuration can be backed up externally.



Detailed information on backing up the current device configuration externally:

Step 1: "Configuration management" section of Operating Instructions for the device.

Step 2: "Manual data transmission" paragraph in "Operability" section of Operating Instructions for the device.

#### Existing software version

The existing software version must be determined and noted down.



Check the existing software version: See "Device information" section of Operating Instructions for the device.

### DIP switch

Switch off the DIP switch.



DIP switch on/off: see "Hardware settings" section of Operating Instructions for the device

# 8 Promag, Promass 300

# 8.1 Transmitter version with aluminum housing for non-hazardous areas/Zone 2

# 8.2 Removing the user interface board

### **A**CAUTION

### The measuring device is energized!

Risk of fatal injury from electric shock.

► Open the measuring device only when the device is deenergized.





► Remove the optional display if it is fitted.



#### 8.2.1 Reassembling the transmitter housing with new user interface board

Reassembly is carried out in reverse order. Note the following:

P

1

The new user interface board must be flashed before commissioning the device. For detailed information, see Section  $9 \rightarrow \bigoplus 18$ .



When installing, ensure that the seal for the user interface board is seated correctly (see graphic below).







For detailed information on the electrical connection, see the "Electrical connection" section of the Operating Instructions for the device.

For detailed information on commissioning, see the "Commissioning" section of the Operating Instructions for the device.

# 8.3 Removing the transmitter housing

The serial number and the nameplate of the old and new transmitter must match.

### **A**CAUTION

1

#### The measuring device is energized!

Risk of fatal injury from electric shock.

• Open the measuring device only when the device is deenergized.

Proceed as described in Section  $8.2 \rightarrow \square$  9 and as illustrated in the diagrams below.





 Removing the transmitter version for non-hazardous areas: turn the transmitter and lift it up.

#### 8.3.1 Reassembling the new transmitter housing

Reassembly is carried out in reverse order. Note the following:



To reassemble the transmitter version for non-hazardous areas: turn the transmitter as far as it will go and then turn it back as far as the securing screw.

When reassembling, pass the ribbon cable of the display module under the tab as illustrated in the diagram below.







For detailed information on commissioning, see the "Commissioning" section of the Operating Instructions for the device.

#### 8.4 Removing the transmitter housing with user interface board

#### The measuring device is energized!

Risk of fatal injury from electric shock.

• Open the measuring device only when the device is deenergized.

Proceed as described in Section 8.2,  $\rightarrow \cong$  9, Fig. 1-11 and as illustrated in the diagrams below.





### 8.4.1 Reassembling the new transmitter housing with new user interface board

Reassembly is as described in Section 8.3.1  $\rightarrow$  🖺 13.

The serial number and the nameplate of the old and new transmitter must match.

The new user interface board must be flashed before commissioning the device. For detailed information, see Section  $9 \rightarrow \textcircled{B}$  18.





When reassembling, pass the ribbon cable of the display module under the tab as illustrated in the diagram below.



For detailed information on the electrical connection, see the "Electrical connection" section of the Operating Instructions for the device.

For detailed information on commissioning, see the "Commissioning" section of the Operating Instructions for the device.

# 9 Promag, Promass 500

9.1 Transmitter version with aluminum housing for hazardous areas and cast housing version for hazardous areas/Zone 2

# 9.2 Removing the transmitter housing with user interface board

The serial number and the nameplate of the old and new transmitter must match.

### **A**CAUTION

#### The measuring device is energized!

Risk of fatal injury from electric shock.

• Open the measuring device only when the device is deenergized.

Remove the existing T-DAT from the existing transmitter (see Fig. 1 and 2 below) and insert the T-DAT into the new transmitter.

Proceed as described in Section 8.2,  $\rightarrow \cong$  9, Fig. 1- 9 and as illustrated in the diagrams below.



 Removing the transmitter version for hazardous areas: turn the transmitter and lift it up.

#### 9.2.1 Reassembling the new transmitter housing with new user interface board

Reassembly is carried out in reverse order. Note the following:



 To reassemble the transmitter version for hazardous areas: turn the transmitter as far as it will go and then turn it back as far as the securing screw.

The new user interface board must be flashed before commissioning the device. For detailed information, see Section  $9 \rightarrow \square 18$ .



For detailed information on the electrical connection, see the "Electrical connection" section of the Operating Instructions for the device.





H

# 10 Flashing the firmware

# 10.1 Determining the current firmware in the CER

The device firmware delivered can be determined by entering the serial number of the measuring device in the CER. The required device firmware can be downloaded or the update history of existing device firmware can be viewed in the "Device integration" tab.

# 10.2 Required components



- 1 Connection via service interface (CDI-RJ45)
- 1 Computer with "FieldCare" operating tool, "DeviceCare" with COM DTM "CDI Communication TCP/IP"
- 2 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of measuring device

For detailed information on flashing the firmware, see the "Flashing the firmware" section of the service manual for the device.

### Resolving problems with flashing

If problems occur during flashing, disconnect the T-DAT before flashing again. Once flashing has been completed successfully, plug the T-DAT back in.

#### Changing the transmitter code from 300 to 500

Following a device restart, the device responds with transmitter code 300.

The code must be changed to 500 in the device menu under

Main menu  $\rightarrow$  Expert  $\rightarrow$  System  $\rightarrow$  Administration.

#### 11 **Preparatory steps for Promag, Promass**

# NOTICE

Pay attention to the following points before replacing the user interface board or the transmitter with user interface board:

► SIL approval, current device configuration, software version, DIP switch

#### SIL approval

If SIL approval is available for the measuring device and the customer's consent has been obtained, stop operation of the measuring device.



For detailed information on how to stop SIL operation, see the special documentation for the device.

### External backup of current device configuration

The current device configuration can be backed up externally.



Detailed information on backing up the current device configuration externally:

Step 1: "Configuration management" section of Operating Instructions for the device.

Step 2: "Manual data transmission" paragraph in "Operability" section of Operating Instructions for the device.

#### Existing software version

The existing software version must be determined and noted down.



Check the existing software version: See "Device information" section of Operating Instructions for the device.

### **DIP** switch

Switch off the DIP switch.



DIP switch on/off: see "Hardware settings" section of Operating Instructions for the device.

# 12 Promag, Promass 500-digital

- 12.1 Transmitters with aluminum housing and polycarbonate housing
- 12.2 Opening the cover of the aluminum transmitter housing



12.3 Opening the cover of the polycarbonate transmitter housing



# 12.4 Removing the user interface board

Proceed as described in Section  $12.2 \rightarrow \textcircled{B} 20$  or Section  $12.3 \rightarrow \textcircled{B} 20$  and as illustrated in the diagrams below.

### **A**CAUTION

#### The measuring device is energized!

Risk of fatal injury from electric shock.

• Open the measuring device only when the device is deenergized.



Remove the existing T-DAT from the existing transmitter (see Fig. below) and insert the T-DAT into the new transmitter.



Take note of the slots for the I/O boards before removal.







#### 12.4.1 Reassembling the transmitter housing with new user interface board

Reassembly is carried out in reverse order. Note the following:

The new user interface board must be flashed before commissioning the device. For detailed information, see Section  $12 \rightarrow \bigoplus 27$ .



-



When reassembling, pass the ribbon cable of the display module under the tab as illustrated in the diagram below.



For detailed information on the electrical connection, see the "Electrical connection" section of the Operating Instructions for the device.

For detailed information on commissioning, see the "Commissioning" section of the Operating Instructions for the device.

# 12.5 Removing the transmitter housing

### **A**CAUTION

## The measuring device is energized!

Risk of fatal injury from electric shock.

• Open the measuring device only when the device is deenergized.



Proceed as described in Section 11.4  $\rightarrow$   $\cong$  21, Fig. 1 - 7.

### 12.5.1 Reassembling the new transmitter housing

Reassembly is carried out in reverse order. Note the following:

The serial number and the nameplate of the old and new transmitter must match.



When reassembling, pass the ribbon cable of the display module under the tab as illustrated in the diagram below.



- For detailed information on the electrical connection, see the "Electrical connection" section of the Operating Instructions for the device.
  - For detailed information on commissioning, see the "Commissioning" section of the Operating Instructions for the device.



Unused adhesive signs (sign sheet) must be disposed of.

# 12.6 Removing the transmitter housing with user interface board

# **A**CAUTION

### The measuring device is energized!

Risk of fatal injury from electric shock.

• Open the measuring device only when the device is deenergized.



Proceed as described in Section  $11.4 \rightarrow \square 21$ , Fig. 1 - 12.

#### 12.6.1 Reassembling the new transmitter housing with new user interface board

Reassembly is carried out in reverse order. Note the following:

The serial number and the nameplate of the old and new transmitter must match.



The new user interface board must be flashed before commissioning the device. For detailed information, see Section  $12 \rightarrow \bigoplus 27$ .



When reassembling, pass the ribbon cable of the display module under the tab as illustrated in the diagram below.





For detailed information on the electrical connection, see the "Electrical connection" section of the Operating Instructions for the device.



For detailed information on commissioning, see the "Commissioning" section of the Operating Instructions for the device.



# 13 Flashing the firmware

# 13.1 Determining the current firmware in the CER

The device firmware delivered can be determined by entering the serial number of the measuring device in the CER. The required device firmware can be downloaded or the update history of existing device firmware can be viewed in the "Device integration" tab.

# 13.2 Required components



Connection via service interface (CDI-RJ45)

- 1 Computer with "FieldCare" operating tool, "DeviceCare" with COM DTM "CDI Communication TCP/IP"
- 2 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of measuring device

For detailed information on flashing the firmware, see the "Flashing the firmware" section of the service manual for the device.



#### Resolving problems with flashing

If problems occur during flashing, disconnect the T-DAT before flashing again. Once flashing has been completed successfully, plug the T-DAT back in.

# 14 Disposal

X

If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

# Austausch Messumformer, Nutzerschnittstellenleiterplatte

Promag, Promass 300, 500, 500-digital

# Inhaltsverzeichnis

Übersicht Ersatzteilsets	30
Bestimmungsgemäße Verwendung	31
Reparaturberechtigte Personen	31
Sicherheitshinweise	32
Verwendete Symbole	. 33
Werkzeugliste	34
Vorbereitende Arbeiten Promag, Promass 300, 500	34
Promag, Promass 300	35
Promag, Promass 500	42
Flashen der Firmware	44
Vorbereitende Arbeiten Promag, Promass	46
Promag, Promass 500-digital	47
Flashen der Firmware	54
Entsorgung	55
	Ubersicht Ersatzteilsets . Bestimmungsgemäße Verwendung . Reparaturberechtigte Personen . Sicherheitshinweise . Verwendete Symbole . Werkzeugliste . Vorbereitende Arbeiten Promag, Promass 300, 500 . Promag, Promass 300 . Promag, Promass 500 . Flashen der Firmware . Vorbereitende Arbeiten Promag, Promass . Promag, Promass 500-digital . Flashen der Firmware . Entsorgung .

# 1 Übersicht Ersatzteilsets

Die Einbauanleitung ist für folgende Ersatzteilsets gültig:

Bestellstruktur		Gerätekomponente	
Promag 300			
	HT	1 × Messumformergehäuse, 1 × Nutzerschnittstellenleiterplatte, Kabeldurchführungen, Deckel, Typenschild, Anschlussklemmen, Promag 300	
XPD0032-	HO	1 × Messumformergehäuse, Kabeldurchführungen, Deckel, Typenschild, Promag 300	
	TO	1 × Nutzerschnittstellenleiterplatte, Anschlussklemmen, Promag 300	
Promass 300			
	HT	1 × Messumformergehäuse, 1 × Nutzerschnittstellenleiterplatte, Kabeldurchführungen, Deckel, Typenschild, Anschlussklemmen, , Promass 300	
XPD0033-	НО	1 × Messumformergehäuse, Kabeldurchführungen, Deckel, Typenschild, Promass 300	
	TO	1 × Nutzerschnittstellenleiterplatte, Anschlussklemmen, Promass 300	
Promag 500			
	HT	1 × Messumformergehäuse, 1 × Nutzerschnittstellenleiterplatte, Kabeldurchführungen, Deckel, Typenschild, Anschlussklemmen, Promag 500	
XPD0034-	НО	1 × Messumformergehäuse, Kabeldurchführungen, Deckel, Typenschild, Promag 500	
	TO	1 × Nutzerschnittstellenleiterplatte, Anschlussklemmen, Promag 500	
Promass 500			
	HT	1 × Messumformergehäuse, 1 × Nutzerschnittstellenleiterplatte, Kabeldurchführungen, Deckel, Typenschild, Anschlussklemmen, Promass 500	
XPD0035-	НО	1 × Messumformergehäuse, Kabeldurchführungen, Deckel, Typenschild, Promass 500	
	TO	1 × Nutzerschnittstellenleiterplatte, Anschlussklemmen, Promass 500	

- Die Bestellnummer des Ersatzteilsets (auf dem Produktaufkleber der Verpackung) kann sich von der Produktionsnummer (auf dem Aufkleber direkt auf dem Ersatzteil) unterscheiden!
  - Durch Eingabe der Produktionsnummer des Ersatzteiles im Ersatzteilfindetool kann die Bestellnummer des entsprechenden Ersatzteilsets ermittelt werden.
  - Wir empfehlen Einbauanleitung und Verpackung immer zusammen aufzubewahren.

# 2 Bestimmungsgemäße Verwendung

- Eine defekte Einheit nur gegen eine funktionierende Einheit des gleichen Typs ersetzen.
- Nur Originalteile von Endress+Hauser verwenden.
- Im W@M Device Viewer prüfen, ob das Ersatzteil zum vorliegenden Messgerät passt.

Bei einigen Messgeräten befindet sich im Inneren des Gerätes eine Ersatzteilübersicht. Ist das Ersatzteilset dort aufgelistet, entfällt die Überprüfung.



# 3 Reparaturberechtigte Personen

Die Berechtigung zur Durchführung einer Reparatur ist von der Zulassung des Messgeräts abhängig. Die Tabelle zeigt den jeweils berechtigten Personenkreis.



Die Person, die eine Reparatur vornimmt, übernimmt die Verantwortung für die Sicherheit während der Arbeiten, die Qualität der Ausführung und die Sicherheit des Geräts nach der Reparatur.

Zulassung des Messgeräts	Reparaturberechtigter Personenkreis <sup>1)</sup>
Ohne Zulassung	2, 3
Mit Zulassung (z.B. IECEx)	2, 3
Bei eichfähigem Verkehr	4

1) 1 = Ausgebildete Fachkraft des Kunden, 2 = Von Endress+Hauser autorisierter Servicetechniker,

3 = Endress+Hauser (Messgerät an Hersteller zurücksenden)

4 = Mit der lokalen Zulassungsstelle prüfen, ob ein Ein-/Umbau unter Aufsicht erfolgen muss.

# 4 Sicherheitshinweise

- Prüfen, ob das vorliegende Ersatzteil zur Kennzeichnung auf dem Messgerät passt, wie auf der Titelseite beschrieben.
- Ersatzteilset und Einbauanleitung dienen dazu, eine defekte Einheit gegen eine funktionierende Einheit des gleichen Typs zu ersetzen.
   Nur Originalteile von Endress+Hauser verwenden.
- Nationale Vorschriften bezüglich der Montage, elektrischen Installation, Inbetriebnahme, Wartung und Reparatur einhalten.
- Folgende Anforderungen an das Fachpersonal für Montage, elektrische Installation, Inbetriebnahme, Wartung und Reparatur der Messgeräte müssen erfüllt sein:
  - In Gerätesicherheit ausgebildet.
  - Mit den jeweiligen Einsatzbedingungen der Geräte vertraut.
  - Bei Ex-zertifizierten Messgeräten: zusätzlich im Explosionsschutz ausgebildet.
- Messgerät unter Spannung! Lebensgefahr durch Stromschlag. Messgerät nur im spannungslosen Zustand öffnen.
- Bei Messgeräten f
  ür den explosionsgef
  ährdeten Bereich: Hinweise in der Ex-Dokumentation (XA) beachten.
- Bei Messgeräten in sicherheitstechnischen Applikationen gemäß IEC 61508 bzw. IEC 61511: Nach Reparatur Neuinbetriebnahme gemäß Betriebsanleitung durchführen. Reparatur dokumentieren.
- Vor einem Geräteausbau: Prozess in sicheren Zustand bringen und Leitung von gefährlichen Prozessstoffen befreien.
- Verbrennungsgefahr durch heiße Oberflächen! Vor Arbeitsbeginn: Anlage und Messgerät auf berührungssichere Temperatur abkühlen.
- Bei Messgeräten im abrechnungspflichtigen Verkehr: Nach Entfernen der Plombe ist der geeichte Zustand aufgehoben.
- Die Betriebsanleitung zum Messgerät ist zu beachten.
- Beschädigungsgefahr elektronischer Bauteile! Eine ESD-geschützte Arbeitsumgebung herstellen.
- Nach Entfernen der Elektronikabdeckung: Stromschlaggefahr durch aufgehobenen Berührungsschutz!
- Messgerät ausschalten, bevor interne Abdeckungen entfernt werden.
- Änderungen am Messgerät sind nicht zulässig.
- Gehäuse nur kurzzeitig öffnen. Eindringen von Fremdkörpern, Feuchtigkeit oder Verunreinigung vermeiden.
- Defekte Dichtungen nur durch Original-Dichtungen von Endress+Hauser ersetzen.
- Defekte Gewinde erfordern eine Instandsetzung des Messgeräts.
- Gewinde (z.B. von Elektronikraum- und Anschlussraumdeckel) müssen geschmiert sein, sofern keine abriebfeste Trockenschmierung vorhanden ist. Säurefreies, nicht härtendes Fett verwenden.

- Wenn bei den Reparaturarbeiten Abstände reduziert oder die Spannungsfestigkeit des Messgeräts nicht sichergestellt werden kann: Prüfung nach Abschluss der Arbeiten durchführen (z.B. Hochspannungstest gemäß Herstellerangaben).
- Servicestecker:
  - Nicht in explosionsf\u00e4higer Atmosph\u00e4re anschlie\u00dfen.
  - Nur an Servicegeräte von Endress+Hauser anschließen.
- Die in der Betriebsanleitung aufgeführten Hinweise zum Transport und zur Rücksendung beachten.

Bei Fragen Endress+Hauser Service kontaktieren: www.addresses.endress.com

# 5 Verwendete Symbole

# 5.1 Warnhinweissymbole

#### **GEFAHR**

Dieser Hinweis macht auf eine gefährliche Situation aufmerksam, die, wenn sie nicht vermieden wird, zu Tod oder schwerer Körperverletzung führen wird.

#### **WARNUNG**

Dieser Hinweis macht auf eine gefährliche Situation aufmerksam, die, wenn sie nicht vermieden wird, zu Tod oder schwerer Körperverletzung führen kann.

#### **A** VORSICHT

Dieser Hinweis macht auf eine gefährliche Situation aufmerksam, die, wenn sie nicht vermieden wird, zu leichter oder mittelschwerer Körperverletzung führen kann.

#### HINWEIS

Dieser Hinweis enthält Informationen zu Vorgehensweisen und weiterführenden Sachverhalten, die keine Körperverletzung nach sich ziehen.

# 5.2 Symbole für Informationstypen

Symbol	Bedeutung
	<b>Erlaubt</b> Abläufe, Prozesse oder Handlungen, die erlaubt sind.
$\mathbf{X}$	Verboten Abläufe, Prozesse oder Handlungen, die verboten sind.
i	<b>Tipp</b> Kennzeichnet zusätzliche Informationen.
1., 2., 3	Handlungsschritte

6

# Werkzeugliste











Drehmomentschlüssel

# 7 Vorbereitende Arbeiten Promag, Promass 300, 500

### HINWEIS

Folgende Punkte sind vor einem Austausch der Nutzerschnittstellenleiterplatte oder des Messumformers mit Nutzerschnittstellenleiterplatte zu beachten:

► SIL-Zulassung, aktuelle Gerätekonfiguration, Software-Version, DIP-Schalter

### SIL-Zulassung

Falls eine SIL-Zulassung für das Messgerät vorhanden ist und die Zustimmung des Kunden vorliegt, den Betrieb des Messgeräts aufheben.



Detaillierte Angaben zum Aufheben des SIL-Betriebes siehe Sonderdokumentation zum Gerät.

### Externe Sicherung der aktuelle Gerätekonfiguration

Die aktuelle Gerätekonfiguration kann extern gesichert werden.



Detaillierte Angaben zur externen Sicherung der aktuelle Gerätekonfiguration:

Schritt 1: Kapitel "Konfiguration verwalten" Betriebsanleitung zum Gerät.

Schritt 2: Kapitel "Bedienbarkeit, Abschnitt "Datenübertragung manuell" Betriebsanleitung zum Gerät.

#### Vorhandene Software-Version

Die vorhandene Software-Version muss ermittelt und notiert werden.



Kontrolle der vorhandenen Software-Version: Kapitel "Geräteinformationen", Betriebsanleitung zum Gerät.

### DIP-Schalter

DIP-Schalter ausschalten.



DIP-Schalter ein/aus: Kapitel "Hardwareeinstellungen", Betriebsanleitung zum Gerät.

# 8 Promag, Promass 300

# 8.1 Messumformer Aluminiumgehäuse in nicht explosionsgeschützter Ausführung/Zone 2

# 8.2 Ausbau Nutzerschnittstellenleiterplatte

# **A**VORSICHT

### Messgerät unter Spannung!

Lebensgefahr durch Stromschlag.

• Messgerät nur im spannungslosen Zustand öffnen.

Den vorhandenen T-DAT aus dem bestehenden Messumformer herausziehen und den T-DAT in den neuen Messumformer einstecken.



• Optionale Anzeige demontieren, wenn vorhanden.



#### 8.2.1 Zusammenbau Messumformergehäuse mit neuer Nutzerschnittstellenleiterplatte

Der Zusammenbau erfolgt in umgekehrter Reihenfolge. Folgendes ist zu beachten:

Die neue Nutzerschnittstellenleiterplatte muss vor Inbetriebnahme des Geräts geflasht werden. Detaillierte Angaben Kaptitel 9 → 🗎 44.



Beim Einbau auf richtigen Sitz der Dichtung für die Nutzerschnittstellenleiterplatte achten (siehe Grafik unten).



Beim Zusammenbau das Flachbandkabel des Anzeigemoduls unter der Lasche durchführen wie im Bild unten beschrieben.





**i** 

-

Detaillierte Angaben zum elektrischen Anschluss: Kapitel "Elektrischer Anschluss", Betriebsanleitung zum Gerät.

Detaillierte Angaben zur Inbetriebnahme: Kapitel "Inbetriebnahme", Betriebsanleitung zum Gerät.

#### 8.3 Ausbau Messumformergehäuse

Die Seriennummer und das Typenschild des alten und des neuen Messumformers müssen übereinstimmen.

# **A** VORSICHT

#### Messgerät unter Spannung!

Lebensgefahr durch Stromschlag.

• Messgerät nur im spannungslosen Zustand öffnen.

Vorgehen wie in Kapitel  $8.2 \rightarrow \square 35$  und wie in den Bildern unten.



• Ausbau Messumformer in nicht explosionsgeschützter Ausführung: Messumformer drehen und hochziehen.

#### 8.3.1 Zusammenbau neues Messumformergehäuse

Der Zusammenbau erfolgt in umgekehrter Reihenfolge. Folgendes ist zu beachten:



 Zusammenbau Messumformer in nicht explosionsgeschützter Ausführung: Bis zum Anschlag drehen und dann zurück bis zur Sicherungsschraube.

Beim Zusammenbau das Flachbandkabel des Anzeigemoduls unter der Lasche durchführen wie im Bild unten beschrieben.



Detaillierte Angaben zum elektrischen Anschluss: Kapitel "Elektrischer Anschluss", Betriebsanleitung zum Gerät.

Detaillierte Angaben zur Inbetriebnahme: Kapitel "Inbetriebnahme", Betriebsanleitung zum Gerät.

# 8.4 Ausbau Messumformergehäuse mit Nutzerschnittstellenleiterplatte

### **A**VORSICHT

i

i

#### Messgerät unter Spannung!

Lebensgefahr durch Stromschlag.

▶ Messgerät nur im spannungslosen Zustand öffnen.

Vorgehen wie in Kapitel  $8.2 \rightarrow \square 35$ , Bild 1-11 und wie in den Bildern unten.



 Ausbau Messumformer in nicht explosionsgeschützter Ausführung: Messumformer drehen und hochziehen.

#### 8.4.1 Zusammenbau neues Messumformergehäuse mit neuer Nutzerschnittstellenleiterplatte

Der Zusammenbau erfolgt wie in Kapitel  $8.3.1 \rightarrow \square 39$  beschrieben.



Die neue Nutzerschnittstellenleiterplatte muss vor Inbetriebnahme des Geräts geflacht werden. Detaillierte Angaben Kaptitel  $9 \rightarrow \textcircled{B} 44$ .





Beim Zusammenbau das Flachbandkabel des Anzeigemoduls unter der Lasche durchführen wie im Bild unten beschrieben.



Detaillierte Angaben zum elektrischen Anschluss: Kapitel "Elektrischer Anschluss", Betriebsanleitung zum Gerät.

Detaillierte Angaben zur Inbetriebnahme: Kapitel "Inbetriebnahme", Betriebsanleitung zum Gerät.

# 9 Promag, Promass 500

- 9.1 Messumformer Aluminiumgehäuse in explosionsgeschützter Ausführung und Gussgehäuse in explosionsgeschützter Ausführung/Zone 2
- 9.2 Ausbau Messumformergehäuse mit Nutzerschnittstellenleiterplatte
- Die Seriennummer und das Typenschild des alten und des neuen Messumformers müssen übereinstimmen.

### **A**VORSICHT

#### Messgerät unter Spannung!

Lebensgefahr durch Stromschlag.

• Messgerät nur im spannungslosen Zustand öffnen.

Den vorhandenen T-DAT aus bestehenden Messumformer herausziehen (siehe Bild 1 und 2 unten) und den T-DAT in den neuen Messumformer einstecken.

Vorgehen wie in Kapitel 8.2  $\rightarrow \cong$  35, Bild 1 - 9 und wie in den Bildern unten.





 Ausbau Messumformer in explosionsgeschützter Ausführung: Messumformer drehen und hochziehen.

#### 9.2.1 Zusammenbau neues Messumformergehäuse mit neuer Nutzerschnittstellenleiterplatte

Der Zusammenbau erfolgt in umgekehrter Reihenfolge. Folgendes ist zu beachten:



 Zusammenbau Messumformer in explosionsgeschützter Ausführung: Bis zum Anschlag drehen und dann zurück bis zur Sicherungsschraube.





- Detaillierte Angaben zum elektrischen Anschluss: Kapitel "Elektrischer Anschluss", Betriebsanleitung zum Gerät.
- Detaillierte Angaben zur Inbetriebnahme: Kapitel "Inbetriebnahme", Betriebsanleitung zum Gerät.
- Nicht verwendete Klebeschilder (Beschilderungsbogen) sind zu entsorgen.

# 10 Flashen der Firmware

### 10.1 Ermitteln der aktuellen Firmware im CER

Durch Eingabe der Seriennummer des Messgeräts im CER kann die ausgelieferte Gerätefirmware ermittelt werden. Über den Reiter "Geräteintegration" kann die benötigte Gerätefirmware heruntergeladen oder der Updateverlauf bestehender Gerätefirmwaren eingesehen werden.

# 10.2 Benötigte Komponenten



- Image: Anschluss via Serviceschnittstelle (CDI-RJ45)
- 1 Computer mit Bedientool "FieldCare", "DeviceCare" mit COM DTM "CDI Communication TCP/IP"
- 2 Standard-Ethernet-Verbindungskabel mit RJ45-Stecker
- 3 Serviceschnittstelle (CDI-RJ45) des Messgeräts

Detaillierte Angaben zum Flashen der Firmware: Kapitel "Flashen der Firmware", Servicehandbuch zum Gerät.

#### 💽 Pi

### Probleme beim Flashen beheben

Wenn Probleme beim Flashen auftreten, vor erneutem Flashen den T-DAT abziehen. Nach erfolgreichem Flashvorgang den T-DAT wieder aufstecken.

### Editieren Messumformerkennung von 300 auf 500

Nach Geräteneustart meldet sich das Gerät mit der Messumformerkennung 300.

Die Kennung muss im Gerätemenu unter

Hauptmenu  $\rightarrow$  Expert  $\rightarrow$  System  $\rightarrow$  Administration auf 500 angepasst werden.

#### 11 Vorbereitende Arbeiten Promag, Promass

# **HINWEIS**

Folgende Punkte sind vor einem Austausch der Nutzerschnittstellenleiterplatte oder des Messumformers mit Nutzerschnittstellenleiterplatte zu beachten:

► SIL-Zulassung, aktuelle Gerätekonfiguration, Software-Version, DIP-Schalter

#### SIL-Zulassung

Falls eine SIL-Zulassung für das Messgerät vorhanden ist und die Zustimmung des Kunden vorliegt, den Betrieb des Messgeräts aufheben.

Detaillierte Angaben zum Aufheben des SIL-Betriebes siehe Sonderdokumentation zum i Gerät

#### Externe Sicherung der aktuelle Gerätekonfiguration

Die aktuelle Gerätekonfiguration kann extern gesichert werden.



Detaillierte Angaben zur externen Sicherung der aktuelle Gerätekonfiguration:

Schritt 1: Kapitel "Konfiguration verwalten" Betriebsanleitung zum Gerät.

Schritt 2: Kapitel "Bedienbarkeit, Abschnitt "Datenübertragung manuell" Betriebsanleitung zum Gerät.

#### Vorhandene Software-Version

Die vorhandene Software-Version muss ermittelt und notiert werden.



Kontrolle der vorhandenen Software-Version: Kapitel "Geräteinformationen", Betriebsanleitung zum Gerät.

### **DIP-Schalter**

DIP-Schalter ausschalten.



DIP-Schalter ein/aus: Kapitel "Hardwareeinstellungen", Betriebsanleitung zum Gerät.

- 12 Promag, Promass 500-digital
- 12.1 Messumformer Aluminiumgehäuse und Polycarbonatgehäuse
- 12.2 Öffnen Deckel Messumformergehäuse Aluminium



# 12.3 Öffnen Deckel Messumformergehäuse Polycarbonat



# 12.4 Ausbau Nutzerschnittstellenleiterplatte

Vorgehen wie in Kap. 12.2  $\rightarrow \bigoplus$  47 oder wie in Kap. 12.3  $\rightarrow \bigoplus$  47 und wie in den Bildern unten.

# **A**VORSICHT

#### Messgerät unter Spannung!

Lebensgefahr durch Stromschlag.

• Messgerät nur im spannungslosen Zustand öffnen.

Den vorhandenen T-DAT aus dem bestehenden Messumformer herausziehen (siehe Bild unten) und den T-DAT in den neuen Messumformer einstecken.

Die Steckplätze der I/O Platinen müssen vor dem Ausbau notiert werden.







### 12.4.1 Zusammenbau Messumformergehäuse mit neuer Nutzerschnittstellenleiterplatte

Der Zusammenbau erfolgt in umgekehrter Reihenfolge. Folgendes ist zu beachten:

Die neue Nutzerschnittstellenleiterplatte muss vor Inbetriebnahme des Geräts geflasht werden. Detaillierte Angaben Kapitel  $12 \rightarrow \cong 54$ .





Beim Zusammenbau das Flachbandkabel des Anzeigemoduls unter der Lasche durchführen wie im Bild unten beschrieben.



Detaillierte Angaben zum elektrischen Anschluss: Kapitel "Elektrischer Anschluss", Betriebsanleitung zum Gerät.

Detaillierte Angaben zur Inbetriebnahme: Kapitel "Inbetriebnahme", Betriebsanleitung zum Gerät.

# 12.5 Ausbau Messumformergehäuse

# **A**VORSICHT

### Messgerät unter Spannung!

Lebensgefahr durch Stromschlag.

• Messgerät nur im spannungslosen Zustand öffnen.



Weiter vorgehen wie in Kap. 11.4  $\rightarrow \oplus$  48, Bild 1 - 7.

#### 12.5.1 Zusammenbau neues Messumformergehäuse

Der Zusammenbau erfolgt in umgekehrter Reihenfolge. Folgendes ist zu beachten:



Die Seriennummer und das Typenschild des alten und des neuen Messumformers müssen übereinstimmen.

Beim Zusammenbau das Flachbandkabel des Anzeigemoduls unter der Lasche durchführen wie im Bild unten beschrieben.



Detaillierte Angaben zum elektrischen Anschluss: Kapitel "Elektrischer Anschluss", Betriebsanleitung zum Gerät.

Detaillierte Angaben zur Inbetriebnahme: Kapitel "Inbetriebnahme", Betriebsanleitung zum Gerät.

Nicht verwendete Klebeschilder (Beschilderungsbogen) sind zu entsorgen.

# 12.6 Ausbau Messumformergehäuse mit Nutzerschnittstellenleiterplatte

# **A**VORSICHT

-

### Messgerät unter Spannung!

Lebensgefahr durch Stromschlag.

• Messgerät nur im spannungslosen Zustand öffnen.



Weiter vorgehen wie in Kapitel  $11.4 \rightarrow \oplus 48$ , Bild 1 - 12.

#### 12.6.1 Zusammenbau neues Messumformergehäuse mit neuer Nutzerschnittstellenleiterplatte

Der Zusammenbau erfolgt in umgekehrter Reihenfolge. Folgendes ist zu beachten:

Die Seriennummer und das Typenschild des alten und des neuen Messumformers müssen übereinstimmen.

Die neue Nutzerschnittstellenleiterplatte muss vor Inbetriebnahme des Geräts geflasht werden. Detaillierte Angaben Kapitel  $12 \rightarrow \bigoplus 54$ .



Beim Zusammenbau das Flachbandkabel des Anzeigemoduls unter der Lasche durchführen wie im Bild unten beschrieben.



Detaillierte Angaben zum elektrischen Anschluss: Kapitel "Elektrischer Anschluss", Betriebsanleitung zum Gerät.



•

-

Detaillierte Angaben zur Inbetriebnahme: Kapitel "Inbetriebnahme", Betriebsanleitung zum Gerät.

Nicht verwendete Klebeschilder (Beschilderungsbogen) sind zu entsorgen.

# 13 Flashen der Firmware

# 13.1 Ermitteln der aktuellen Firmware im CER

Durch Eingabe der Seriennummer des Messgeräts im CER kann die ausgelieferte Gerätefirmware ermittelt werden. Über den Reiter "Geräteintegration" kann die benötigte Gerätefirmware heruntergeladen oder der Updateverlauf bestehender Gerätefirmwaren eingesehen werden.

# 13.2 Benötigte Komponenten



- Anschluss via Serviceschnittstelle (CDI-RJ45)
- 1 Computer mit Bedientool "FieldCare", "DeviceCare" mit COM DTM "CDI Communication TCP/IP"
- 2 Standard-Ethernet-Verbindungskabel mit RJ45-Stecker
- 3 Serviceschnittstelle (CDI-RJ45) des Messgeräts

Detaillierte Angaben zum Flashen der Firmware: Kapitel "Flashen der Firmware", Servicehandbuch zum Gerät.

#### Probleme beim Flashen beheben

Wenn Probleme beim Flashen auftreten, vor erneutem Flashen den T-DAT abziehen. Nach erfolgreichem Flashvorgang den T-DAT wieder aufstecken.

# 14 Entsorgung

X

Gemäß der Richtlinie 2012/19/EU über Elektro- und Elektronik-Altgeräte (WEEE) ist das Produkt mit dem abgebildeten Symbol gekennzeichnet, um die Entsorgung von WEEE als unsortierten Hausmüll zu minimieren. Gekennzeichnete Produkte nicht als unsortierter Hausmüll entsorgen, sondern zu den gültigen Bedingungen an den Hersteller zurückgeben.



71608129

# www.addresses.endress.com

