# Safety Instructions **Proline Prowirl 200**

NEPSI: Zone 2 Ex ec and Ex ic version



XA01645D/06/EN/05.23-00

71636849 2023-11-20





# **Proline Prowirl 200**

# Table of contents

Associated documentation	. 4
Certificates and declarations	. 4
Manufacturer address	. 5
Extended order code	6
Safety instructions: General	9
Safety instructions: Installation	10
Safety instructions: Zone 0	. 12
Temperature tables	12
Connection data: Signal circuits	21

## Associated documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- Device Viewer (www.endress.com/deviceviewer): Enter serial number from nameplate.
- Endress+Hauser Operations app: Enter serial number from nameplate or scan matrix code on nameplate.

To commission the device, please observe the Operating Instructions pertaining to the device:

Measuring		Documentation code	
device	HART	FOUNDATION Fieldbus	PROFIBUS PA
Prowirl D 200	BA01685D	BA01693D	BA01689D
Prowirl F 200	BA01686D	BA01694D	BA01690D
Prowirl O 200	BA01687D	BA01695D	BA01691D
Prowirl R 200	BA01688D	BA01696D	BA01692D

# Additional documentation

Contents	Document type	Documentation code
Remote display FHX50	Special documentation	SD01007F
	Safety Instructions <ul> <li>Zone 0, Zone 21; Ex ia</li> <li>Zone 2; Ex ic</li> </ul>	<ul><li>XA01076F</li><li>XA01078F</li></ul>
Overvoltage Protection (OVP)	Special documentation	SD01090F
Explosion Protection	Brochure	CP00021Z/11

Please note the documentation associated with the device.

#### Certificates and **NEPSI Declaration of Conformity** declarations

Certificate number:

GY[23.1286X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- GB/T 3836.1-2021
- GB/T 3836.3-2021
- GB/T 3836.4-2021
- GB 3836.20-2010

Manufacturer	Endress+Hauser Flowtec AG
address	Kägenstrasse 7
	4153 Reinach BL
	Switzerland

# Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

# Structure of the extended order code

* * * * * *	_ **********	+	A*B*C*D*E*F*G*
(Device type)	(Basic specifications)		(Optional specifications)
* =	Placeholder At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.		

## Device type

The device and the device design is defined in the "Device type" section (Product root).

# Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

# Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Position	Order code for	Option selected	Description
1	Instrument family	7	Vortex flowmeter
2	Sensor	D, F, O, R	Sensor type
3	Transmitter	2	Transmitter type: 2-wire, compact version Remote version

## Device type

Position	Order code for	Option selected	Description
4	Generation index	С	Platform generation
5, 6	Nominal diameter	D: DN 15 to 150 F: DN 15 to 300 O: DN 15 to 300 R: • Reducer DN 25 to 200 • Super reducer DN 40 to 250	Nominal diameter of sensor

# **Basic specifications**

Position	Order code for	Option selected	Type of protection
1, 2	Approval	ND	Ex ic [ia] IIC T1T6 Ga/Gc or Ex ic [ia] IIC T1T6 Gc or Ex ic [ia Ga] IIC T1T6 Gc
		NK	Ex ec IIC T1T6 Gc <sup>1)</sup>
		NH	Ex ic IIC T1T6 Gc <sup>2)</sup>

- The labeling changes according to whether the "Display; Operation" equals "L" or "M": Ex ec[ia Ga] IIC T1...T6 Gc. The labeling changes according to whether the "Display; Operation" equals "L" or "M": Ex ic[ia Ga] IIC T1...T6 Gc. 1)
- 2)

Position	Order code for	Selected option	Description
3	Output; Input	А	4-20mA HART
		В	4-20mA HART, Pulse/ frequency/switch output
		С	4-20mA HART + 4-20mA analog
		D	4-20mA HART, Pulse/ frequency/switch output, 4-20mA input
		E	FOUNDATION Fieldbus, Pulse/frequency/switch output
		G	PROFIBUS PA, Pulse/ frequency/switch output

Position	Order code for	Selected option	Description
4	Display; Operation	A	W/o; via communication
		С	SD02 4-line; push buttons + data backup function
		E	SD03 4-line, illum.; touch control + data backup function
		L	Prepared for display FHX50 + M12 connection <sup>1)</sup>
		М	Prepared for display FHX50 + custom connection <sup>1)</sup>
8, 9	Sensor version; DSC sensor; measuring tube Only available for sensors F, O, R with the HART communication protocol.	DA	Mass steam; 316L; 316L (integrated pressure/ temperature measurement), -200 to +400 °C (-328 to +750 °F)
		DB	Mass gas/liquid; 316L; 316L (integrated pressure/ temperature measurement), -40 to +260 °C (-40 to +500 °F)
		DC	Mass steam; Alloy 718; 316L (integrated pressure/ temperature measurement), -200 to +400 °C (-328 to +750 °F)
		DD	Mass gas/liquid; Alloy 718; 316L (integrated pressure/ temperature measurement), -40 to +100 °C (-40 to +212 °F)
11	Pressure component	A	Not used
	Only available for sensors F, O, R with the HART communication protocol.	В	Pressure measuring cell 2bar/29psi abs
	communication protocol.	С	Pressure measuring cell 4bar/58psi abs
		D	Pressure measuring cell 10bar/145psi abs
		E	Pressure measuring cell 40bar/580psi abs
		F	Pressure measuring cell 100bar/1450psi abs

Position	Order code for	Selected option	Description
		G	Pressure measuring cell 160bar/2320psi abs
16, 17	Device Model	A1	1

1) FHX50 is separately approved.

# **Optional specifications**

ID	Order code for	Option selected	Description
Jx	Test, certificate	JN	Ambient temperature transmitter –50 $^\circ \! C$
Nx	Accessory mounted	NA	Overvoltage Protection (OVP)

# Safety instructions: General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations or guidelines (e.g. GB/T 3836.15-2017)
- Install the device according to the manufacturer's instructions and the following standards:
  - GB 50257-2014 "Code for construction and acceptance of electric device for explosive atmospheres and fire hazard electrical equipment installation engineering"
  - GB/T 3836.13-2021 "Explosive atmospheres Part 13: Equipment repair, overhaul, reclamation and modification"
  - GB/T 3836.15-2017 "Explosive atmospheres Part 15: Electrical installations design, selection and erection"
  - GB/T 3836.16-2017 "Explosive atmospheres Part 16: Electrical installations inspection and maintenance"
  - GB/T 3836.18-2017 "Explosive atmospheres Part 18: Intrinsically safe electrical systems"
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- Observe all the technical data of the device (see nameplate).

## Safety instructions: Installation

- Continuous service temperature of the connecting cable: -40 to +80 °C (-50 to +80 °C for optional specifications, ID Jx (Test, Certificate) = JN); in accordance with the range of service temperature taking into account additional influences of the process
- conditions ( $T_{a,min}$  and  $T_{a,max} + 20$  K).
- Only use certified cable glands suitable for the application. Observe selection criteria as per GB/T3836.15-2017.
- When the measuring device is connected, attention must be paid to the type of protection at the transmitter.
- In potentially explosive atmospheres:
  - Do not disconnect the electrical connection of the power supply circuit when energized.
  - Do not open the connection compartment cover when energized.

Type of protection Ex ec

- In potentially explosive atmospheres: Do not disconnect the electrical connection of the power supply circuit when energized.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- Only use certified cable entries and sealing plugs. The metal cable entries, extensions and sealing plugs supplied meet this requirement.

Basic specification, position 8, 9 (sensor version; DSC sensor; measuring tube) = DA, DB, DC, DD and position 11 (pressure component) = B, C, D, E, F, G

- The maximum medium temperature is limited for device versions with a pressure component that is installed directly on the sensor F, O, R:
  - To 40 °C for T6 and T5
  - To 90 °C for T4 and T1
- In the case of T4 ... T1 and medium temperatures > 90 °C the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R.
  - The spacer tube must have a minimum length of 50 cm (1.97 in).
  - The spacer tube supplied meets this requirement.

# Intrinsic safety

- Observe the guidelines for interconnecting intrinsically safe circuits (e.g. GB/T 3836.15-2017, Proof of Intrinsic Safety).
- The intrinsically safe input power circuit of the device is isolated from ground. If the device is only equipped with one input, the dielectric strength of the input is at least 500 V<sub>rms</sub>. If the device is equipped with more than one input, the dielectric strength of each individual input to ground is at least 500 V<sub>rms</sub>, and the dielectric strength of the inputs vis-à-vis one another is also at least 500 V<sub>rms</sub>.
- The device can be connected to the Endress+Hauser FXA291 service tool: refer to the Operating Instructions.
- The device can be connected to the remote display FHX50 with Ex ia explosion protection; refer to the Special Documentation and Ex documentation.

Basic specification, position 3 (Output; input) = A, B, C, D, E, G:

When the intrinsically safe Ex ic circuits of the device are connected to certified intrinsically safe circuits of Category Ex ic for Equipment Groups IIB, the type of protection changes from Ex ic IIC to Ex ic IIB.

# Potential equalization

- Integrate the device into the potential equalization  $\rightarrow \cong 21$ .
- If the ground connection has been established via the pipe as specified, it is also possible to integrate the sensor into the potential equalization system via the pipe.

# **Overvoltage** protection

Optional specification, ID Nx (Accessory Mounted) = NA

- Minimum ambient temperature when using Overvoltage Protection (OVP): –40  $^\circ\text{C}$
- When using the internal overvoltage protection: Reduce the admissible ambient temperature at the housing by 2 K.
- For installations which require overvoltage protection to comply with national regulations or standards (e.g. GB/T 3836.15-2017), install the device using overvoltage protection (e.g. HAW56x from Endress+Hauser).
- Observe the safety instructions of the overvoltage protection.
- If an overvoltage protection according to GB/T 3836.15-2017 against atmospheric over voltages is required: no other circuits may leave the housing during normal operation without additional measures.
- The intrinsically safe input power circuit of the device is isolated from ground. If the device is only equipped with one input, the dielectric strength of the input is at least 290  $V_{rms}$ . If the device is equipped with more than one input, the dielectric strength of each individual input to ground is at least 290  $V_{rms}$ , and the dielectric strength of the inputs vis-à-vis one another is also at least 290  $V_{rms}$ .

Safety	Basic specification, position 1, 2 (Approval) = ND
instructions: Zone 0	Install the transmitter electronics in Zone 2. The intrinsically safe version of the device can, however, be used in the measuring pipe in Zone 0.

# Temperature Ambient temperature

tables

### Minimum ambient temperature

Basic specification, position 3 (Output; Input) = A, B, D in conjunction with optional specification, ID Jx (Test, Certificate) = JN  $T_a = -50 \degree C$ (Not permitted in conjunction with optional specification, ID Nx (Accessory Mounted) = NA  $\rightarrow \cong 11$ )

Basic specification, position 3 (Output; input) = A, B, C, D, E, G:

 $T_a = -40$  °C

Maximum ambient temperature:

- Compact version  $T_a = +70$  °C depending on the medium temperature and temperature class
- Transmitter remote version

 $T_{a}$  = +75  $^{\circ}\text{C}$  depending on the medium temperature and temperature class

Sensor remote version

 $T_a$  = +85  $^\circ C$  depending on the medium temperature and temperature class

## Medium temperature

The following relationship of ambient temperature to medium temperature applies when T\_m < -50 °C:

T <sub>m</sub> [°C]	-50	-100	-150	-200
T <sub>a</sub> [°C]	-50	-47	-44	-39

## **Compact version**

Basic specification, position 3 (output; input) = A

# NOTICE

# The ambient temperature changes for installations with overvoltage protection in conjunction with temperature classes T5 and T6.

The following applies for basic specification, position 1, 2 (Approval) = ND, NH:

► T<sub>a</sub> = T<sub>a</sub> - 2 K

Version	Version with max. T $_{\rm m}$ = 280 °C								
Т <sub>а</sub> [°С]	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 ℃]			
40	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-			
60	-	95 <sup>2) 1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-			
65	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-			
70	-	-	130 <sup>1)</sup>	-	-	-			

 For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

2)  $T_a = 55$  °C for device versions with pressure component option DA, DB, DC, DD.

Basic specification, position 3 (output; input) = B

# NOTICE

# The ambient temperature changes for installations with overvoltage protection in conjunction with temperature classes T5 and T6.

The following applies for basic specification, position 1, 2 (Approval) = ND, NH:

►  $T_a = T_a - 2 K$ 

Version	Version with max. $T_m = 280 \degree C$									
Т <sub>а</sub> [°С]	T6 [85 ℃]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]				
35 <sup>1)</sup>	80 <sup>2)</sup>	95 <sup>2)</sup>	130 <sup>2)</sup>	195 <sup>2)</sup>	280 <sup>2)</sup>	-				
50 <sup>3)</sup>	_	95 <sup>2)</sup>	130 <sup>2)</sup>	195 <sup>2)</sup>	280 <sup>2)</sup>	-				
60	-	-	130 <sup>2)</sup>	195 <sup>2)</sup>	280 <sup>2)</sup>	-				
65	_	-	130 <sup>2)</sup>	195 <sup>2)</sup>	280 4) 2)	-				
70	_	_	130 <sup>2)</sup>	195 <sup>5) 2)</sup>	280 <sup>5)</sup>	-				

1)  $T_a = 40$  °C for pulse/frequency/switch output  $P_i = 0.85$  W

2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ... T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

3)  $T_a = 55 \text{ °C for pulse/frequency/switch output } P_i = 0.85 \text{ W}$ 

4)  $T_a = 65 \text{ °C for pulse/frequency/switch output } P_i = 0.7 \text{ W}$ 

5)  $T_a = 70 \text{ °C}$  for pulse/frequency/switch output  $P_i = 0.7 \text{ W}$ 

Version with max. $T_m = 280 \text{ °C}$								
T <sub>a</sub> [°C]	T6 [85 ℃]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]		
40	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-		
55	-	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-		
65	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>2)1)</sup>	-		
70	-	-	130 <sup>1)</sup>	195 <sup>3) 1)</sup>	280 <sup>3)1)</sup>	-		

Basic specification, positions 1, 2 (approval) = NK

1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ... T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

2)  $T_a = 65 \text{ °C for pulse/frequency/switch output } P_i = 0.7 \text{ W}$ 

3)  $T_a = 70$  °C for pulse/frequency/switch output  $P_i = 0.7$  W

Basic specification, position 3 (output; input) = C

# NOTICE

# The ambient temperature changes for installations with overvoltage protection in conjunction with temperature classes T5 and T6.

The following applies for basic specification, position 1, 2 (Approval) = ND, NH:

►  $T_a = T_a - 2 K$ 

Version	Version with max. $T_m = 280 \degree C$								
Т <sub>а</sub> [°С]	T6 [85 ℃]	T5 [100 ℃]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]			
40	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-			
55	-	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-			
60	-	_	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-			
65	-	_	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>2)1)</sup>	_			
70	-	_	130 <sup>1)</sup>	_	-	_			

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).
- 2)  $T_a = 65 \text{ °C for pulse/frequency/switch output } P_i = 0 \text{ W}$

Basic specification, position 3 (output; input) = D

# NOTICE

# The ambient temperature changes for installations with overvoltage protection in conjunction with temperature classes T5 and T6.

The following applies for basic specification, position 1, 2 (Approval) = ND, NH:

►  $T_a = T_a - 2 K$ 

Versior	Version with max. $T_m$ = 280 °C								
Т <sub>а</sub> [°С]	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 ℃]			
35	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-			
50	-	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-			
55	-	-	-	195 <sup>1)</sup>	280 <sup>1)</sup>	-			
60	-	-	-	195 <sup>1)</sup>	-	-			

 For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ... T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

Basic specification, position 3 (output; input) = E, G

# NOTICE

# The ambient temperature changes for installations with overvoltage protection in conjunction with temperature classes T5 and T6.

The following applies for basic specification, position 1, 2 (Approval) = ND, NH:

► T<sub>a</sub> = T<sub>a</sub> - 2 K

Version	Version with max. $T_m$ = 280 °C								
Т <sub>а</sub> [°С]	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 ℃]			
40	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>1)</sup>	-			
50	-	95 <sup>1)</sup>	130 <sup>1) 2)</sup>	195 <sup>1) 2)</sup>	280 <sup>1) 2)</sup>	-			
60	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	280 1)	-			

Version with max. $T_m$ = 280 °C								
T <sub>a</sub> [°C]	T6 [85 ℃]	T5 [100 ℃]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]		
65	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	280 <sup>3)1)</sup>	-		
70	-	-	130 <sup>1)</sup>	195 <sup>4) 1)</sup>	280 4) 1)	-		

- For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).
- 2)  $T_a = 60 \text{ °C for pulse/frequency/switch output } P_i = 0 \text{ W}$
- 3)  $T_a = 65 \text{ °C}$  for pulse/frequency/switch output  $P_i = 0 \text{ W}$
- 4)  $T_a = 70 \text{ °C}$  for pulse/frequency/switch output  $P_i = 0 \text{ W}$

### High-temperature version

Basic specification, position 3 (output; input) = A

### NOTICE

# The ambient temperature changes for installations with overvoltage protection in conjunction with temperature classes T5 and T6.

The following applies for basic specification, position 1, 2 (Approval) = ND, NH:

►  $T_a = T_a - 2 K$ 

Version	Version with max. $T_m$ = 440 °C								
Т <sub>а</sub> [°С]	T6 [85 ℃]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]			
40	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>			
60	-	95 <sup>2) 1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>			
70	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>			

 For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

2)  $T_a = 55$  °C for device versions with pressure component option DA, DB, DC, DD.

Basic specification, position 3 (output; input) = B

# NOTICE

# The ambient temperature changes for installations with overvoltage protection in conjunction with temperature classes T5 and T6.

The following applies for basic specification, position 1, 2 (Approval) =  $(1 - 1)^{-1}$ ND. NH:

►  $T_a = T_a - 2 K$ 

Version	Version with max. T <sub>m</sub> = 440 °C								
Т <sub>а</sub> [°С]	T6 [85 ℃]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]			
35 <sup>1)</sup>	80 <sup>2)</sup>	95 <sup>2)</sup>	130 <sup>2)</sup>	195 <sup>2)</sup>	290 <sup>2)</sup>	440 <sup>2)</sup>			
50 <sup>3)</sup>	-	95 <sup>2)</sup>	130 <sup>2)</sup>	195 <sup>2)</sup>	290 <sup>2)</sup>	440 <sup>2)</sup>			
65	-	-	130 <sup>2)</sup>	195 <sup>2)</sup>	290 <sup>2)</sup>	440 <sup>2)</sup>			
70	-	-	130 <sup>2)</sup>	195 <sup>4) 2)</sup>	290 <sup>2)</sup>	440 <sup>4)2)</sup>			

1)  $T_a = 40$  °C for pulse/frequency/switch output  $P_i = 0.85$  W

2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ... T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

3)  $T_a = 55$  °C for pulse/frequency/switch output  $P_i = 0.85$  W

 $T_a = 70$  °C for pulse/frequency/switch output  $P_i = 0.85$  W 4)

Basic specification, positions 1, 2 (approval) = NK

Versior	Version with max. $T_m$ = 440 °C								
Т <sub>а</sub> [°С]	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 ℃]			
40	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>			
55	-	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>			
65	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>			
70	-	-	130 <sup>1)</sup>	195 <sup>2) 1)</sup>	290 <sup>2)1)</sup>	440 <sup>2)1)</sup>			

1) For device versions with a pressure component that is installed directly on the sensor F. O. R. the maximum medium temperature is limited to 40 °C for T6 ... T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

2)  $T_a = 70$  °C for pulse/frequency/switch output  $P_i = 0.85$  W

Basic specification, position 3 (output; input) = C

# NOTICE

# The ambient temperature changes for installations with overvoltage protection in conjunction with temperature classes T5 and T6.

The following applies for basic specification, position 1, 2 (Approval) = ND, NH:

►  $T_a = T_a - 2 K$ 

Version with max. $T_m$ = 440 °C							
Т <sub>а</sub> [°С]	T6 [85 ℃]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]	
40	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>	
55	-	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>	
65	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>	
70	-	-	130 <sup>1)</sup>	195 <sup>2) 1)</sup>	290 <sup>2)1)</sup>	440 <sup>2)1)</sup>	

 For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

2)  $T_a = 70$  °C for pulse/frequency/switch output  $P_i = 0$  W

Basic specification, position 3 (output; input) = D

# NOTICE

# The ambient temperature changes for installations with overvoltage protection in conjunction with temperature classes T5 and T6.

The following applies for basic specification, position 1, 2 (Approval) = ND, NH:

►  $T_a = T_a - 2 K$ 

Version with max. $T_m = 440 \degree C$								
T <sub>a</sub> [°C]	T6 [85 ℃]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]		
35	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>		
50	-	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>		
55	-	-	-	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>		
60	-	-	-	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>		
65	-	-	-	-	290 <sup>1)</sup>	-		

 For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

Basic specification, position 3 (output; input) = E, G

# NOTICE

# The ambient temperature changes for installations with overvoltage protection in conjunction with temperature classes T5 and T6.

The following applies for basic specification, position 1, 2 (Approval) = ND, NH:

►  $T_a = T_a - 2 K$ 

Version with max.	$T_{\rm m} = 440 \ ^{\circ}{\rm C}$
-------------------	-------------------------------------

iii iii							
Т <sub>а</sub> [°С]	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 ℃]	
40	80 <sup>1)</sup>	95 <sup>1)</sup>	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>	
50	-	95 <sup>1)</sup>	130 <sup>1)2)</sup>	195 <sup>1) 2)</sup>	290 <sup>1) 2)</sup>	440 <sup>1)2)</sup>	
65	-	-	130 <sup>1)</sup>	195 <sup>1)</sup>	290 <sup>1)</sup>	440 <sup>1)</sup>	
70	-	-	130 <sup>1)</sup>	195 <sup>3) 1)</sup>	290 <sup>3) 1)</sup>	440 <sup>3)1)</sup>	

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).
- 2)  $T_a = 60 \text{ °C}$  for pulse/frequency/switch output  $P_i = 0 \text{ W}$
- 3)  $T_a = 70 \text{ °C for pulse/frequency/switch output } P_i = 0 \text{ W}$

### **Remote version**

#### Transmitter

Basic specification, position 3 Output; Input	Basic specification, position 1, 2 Approval	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]
А	All	40	60	75
В	ND, NH	35 <sup>1)</sup>	50 <sup>2)</sup>	70 <sup>3)</sup>
D	NK	40	55	70 <sup>3)</sup>
С	All	40	55	70 <sup>4)</sup>

Basic specification, position 3 Output; Input	Basic specification, position 1, 2 Approval	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]
D	All	35 <sup>5)</sup>	50 <sup>5)</sup>	65
E G	All	40	55	70 <sup>4)</sup>

1)  $T_a = 40$  °C for pulse/frequency/switch output P<sub>i</sub> = 0.85 W

2)  $T_a = 60$  °C for pulse/frequency/switch output  $P_i = 0.85$  W

3)  $T_a = 75$  °C for pulse/frequency/switch output  $P_i = 0.85$  W

4)  $T_a = 75 \text{ °C for pulse/frequency/switch output } P_i = 0 \text{ W}$ 

5) The following applies for installations with overvoltage protection in conjunction with temperature class T5, T6 and basic specification, position 1, 2 (Approval) = ND, NH:  $T_a = T_a - 2 K$ 

#### Sensor

Version with max. $T_m$ = 280 °C							
Т <sub>а</sub> [°С]	T6 [85 ℃]	T5 [100 ℃]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]	
55	80 1) 2)	95 <sup>2)</sup>	130 <sup>2)</sup>	195 <sup>2)</sup>	280 <sup>2)</sup>	-	
70	-	95 <sup>2) 3)</sup>	130 <sup>2)</sup>	195 <sup>2)</sup>	280 <sup>2)</sup>	-	
85	-	-	130 <sup>2)</sup>	195 <sup>2)</sup>	280 <sup>2)</sup>	-	

1)  $T_a = 40$  °C For device versions with pressure component option DA, DB, DC, DD.

2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

Versior	Version with max. $T_m$ = 440 °C							
Т <sub>а</sub> [°С]	T6 [85 °C]	T5 [100 °C]	T4 [135 ℃]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]		
55	80 1) 2)	95 <sup>2)</sup>	130 <sup>2)</sup>	195 <sup>2)</sup>	290 <sup>2)</sup>	440 <sup>2)</sup>		
70	-	95 <sup>2) 3)</sup>	130 <sup>2)</sup>	195 <sup>2)</sup>	290 <sup>2)</sup>	440 <sup>2)</sup>		
85	-	-	130 <sup>2)</sup>	195 <sup>2)</sup>	290 <sup>2)</sup>	440 <sup>2)</sup>		

#### High-temperature version

1)  $T_a = 40 \degree C$  For device versions with pressure component option DA, DB, DC, DD.

2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the

<sup>3)</sup>  $T_a = 55$  °C for device versions with pressure component option DA, DB, DC, DD.

pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

3)  $T_a = 55$  °C for device versions with pressure component option DA, DB, DC, DD.

## Connection data: Signal circuits

The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.

## Cable specification: Connecting cable for remote version

Basic specification (approval) 1,2 = ND, NH

The sensor cable connection between the sensor and the transmitter has Ex ia type of protection.

Cable parameter:  $L/R \le 38.2 \ \mu H/\Omega$ 

The cable supplied by Endress+Hauser complies with this value.

# Cable specification for pressure measuring cell connecting cable


## Basic specification (approval) 1,2 = ND, NH

The cable connection between the transmitter and pressure component or between the sensor and pressure component has type of protection Ex ic.

Cable parameter: L/R  $\leq$  38.2  $\mu$ H/ $\Omega$ 

The cable supplied by Endress+Hauser complies with the specifications.

# Connecting the transmitter

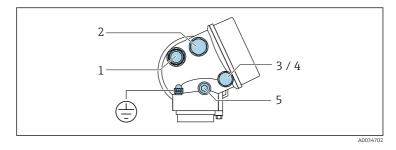

Pos	sition	Basic specification, position 1, 2: Approval	Type of protection used for cable entry	Description
1	Cable entry for output 1	NK ND, NH	Ex ec Ex ic	The following applies for devices with basic specification, position 1, 2 (Approval) = NK: In the case of device versions with a plastic transport sealing plug, this plug does not meet the explosion protection requirements and must be replaced during installation by a suitable entry that meets the approval specifications. In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the explosion protection indicated on the nameplate.
2	Cable entry for output 2	NK ND, NH	Ex ec Ex ic	The following applies for devices with basic specification, position 1, 2 (Approval) = NK: In the case of device versions with metal extensions and sealing plugs, the latter are part of the device approval and meet the requirements of the explosion protection indicated on the nameplate. In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the explosion protection indicated on the nameplate.
3	Optional order code for <sup>1)</sup> : Cable entry of the remote display and operating module FHX50	NK ND, NH	Ex ec <sup>2)</sup> Ex ic <sup>3)</sup>	The following applies for devices with basic specification, position 1, 2 (Approval) = NK: In the case of device versions with metal extensions and sealing plugs, the latter are part of the device approval and meet the requirements of the explosion protection indicated on the nameplate. In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the explosion protection indicated on the nameplate.
4	Optional order code for <sup>4</sup> ): Pressure measuring cell cable entry	NK ND, NH	Ex ec Ex ic	The following applies for devices with basic specification, position 1, 2 (Approval) = NK: In the case of device versions with metal extensions and sealing plugs, the latter are part of the device approval and meet the requirements of the type of protection indicated on the nameplate. In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the type of protection indicated on the nameplate.

Pos	sition	Description		
5	Pressure compensation plug	NOTICE Housing degree of protection voided due to insufficient sealing of the housing. ► Do not open - not a cable entry.		
۲	Potential equalization	NOTICE           Terminal for connection to potential equalization.           ▶ Pay attention to the grounding concept of the facility.		

- 1) Basic specification, position 4 (display; operation) = L, M
- 2)
- The labeling changes according to whether "Display; Operation" = "L" or "M": Ex ec[ia Ga] IIC T1...T6 Gc For NH: The labeling changes according to whether "Display; Operation" = "L" or "M": Ex ic[ia Ga] IIC T1...T6 Gc. 3)
- 4) Basic specification, position 8, 9 (sensor version; DSC sensor; measuring tube) = DA, DA, DC, DD and position 11 (pressure component) = B, C, D, E, F, G

# Terminal assignment

# Transmitter

The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code  $\rightarrow \cong 6$ .

### Connection versions

Order code for	Terminal numbers						
"Output"	Output 1 Output 2		Inp	out			
	1 (+)	2 (-)	3 (+)	4 (-)	5 (+)	6 (-)	
Option <b>A</b>		4-20mA HART (passive)		-		-	
Option <b>B</b> <sup>1)</sup>		4-20mA HART (passive) Pulse/frequency switch output (passive)		output	-		
Option <b>C</b> <sup>1)</sup>	4-20mA HART (passive)		4-20mA analog (passive)		-		
Option $\mathbf{D}^{(1)(2)}$	4-20mA HART (passive)		Pulse/frequency/ switch output (passive)		4-20mA input (p		
Option <b>E</b> <sup>1) 3)</sup>		FOUNDATION Fieldbus		Pulse/frequency/ switch output (passive)		-	
Option <b>G</b> $^{1) 4)}$	PROFII	PROFIBUS PA Pulse/frequency/ switch output (passive)		switch output			

1) Output 1 must always be used; output 2 is optional.

- 2) The integrated overvoltage protection is not used with option D: Terminals 5 and 6 (current input) are not protected against overvoltage.
- 3) FOUNDATION Fieldbus with integrated reverse polarity protection.
- 4) PROFIBUS PA with integrated reverse polarity protection.

# Intrinsically safe values

The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code  $\rightarrow \cong 6$ .

# Type of protection Ex ic

Order code for "Output"	Output type	Intrinsically safe values
Option A	4-20mA HART	$ \begin{array}{c} U_i = DC \; 35 \; V \\ I_i = n.a. \\ P_i = 1 \; W \\ L_i = 0 \; \mu H \\ C_i = 5 \; nF \end{array} $
Option B	4-20mA HART	$\begin{array}{c} U_{i} = DC \; 35 \; V \\ I_{i} = n.a. \\ P_{i} = 1 \; W \\ L_{i} = 0 \; \mu H \\ C_{i} = 5 \; nF \end{array}$
	Pulse/frequency/switch output	$\begin{array}{c} U_i = DC \ 35 \ V \\ I_i = n.a. \\ P_i = 1 \ W \\ L_i = 0 \ \mu H \\ C_i = 6 \ nF \end{array}$
Option C	4-20mA HART	U <sub>i</sub> = DC 30 V
	4-20mA analog	$ \begin{array}{l} & \prod_{i} = n.a. \\ P_i = 1 W \\ L_i = 0 \ \mu H \\ C_i = 30 \ nF \end{array} $
Option D	4-20mA HART	$\begin{array}{c} U_{i} = DC \; 35 \; V \\ I_{i} = n.a. \\ P_{i} = 1 \; W \\ L_{i} = 0 \; \mu H \\ C_{i} = 5 \; nF \end{array}$
	Pulse/frequency/switch output	$\begin{array}{l} U_{i} = DC \; 35 \; V \\ I_{i} = n.a. \\ P_{i} = 1 \; W \\ L_{i} = 0 \; \mu H \\ C_{i} = 6 \; nF \end{array}$
	4 to 20 mA current input	$ \begin{array}{c} U_i = DC \; 35 \; V \\ I_i = n.a. \\ P_i = 1 \; W \\ L_i = 0 \; \mu H \\ C_i = 5 \; nF \end{array} $
Option E	FOUNDATION Fieldbus	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$
	Pulse/frequency/switch output	$\begin{array}{c} U_{i} = 35 \ V \\ I_{i} = 300 \ mA \\ P_{i} = 1 \ W \\ L_{i} = 0 \ \mu H \\ C_{i} = 6 \ nF \end{array}$

Order code for "Output"	Output type	Intrinsically s	afe values
Option G	PROFIBUS PA	$\begin{array}{l} \text{STANDARD} \\ \text{U}_i = 32 \text{ V} \\ \text{I}_i = 300 \text{ mA} \\ \text{P}_i = n.a. \\ \text{L}_i = 10 \ \mu\text{H} \\ \text{C}_i = 5 \ n\text{F} \end{array}$	$\begin{array}{l} FISCO \\ U_i = 17.5 \ V \\ l_i = n.a. \\ P_i = n.a. \\ L_i = 10 \ \mu H \\ C_i = 5 \ nF \end{array}$
	Pulse/frequency/switch output	$\begin{array}{l} U_{i} = 35 \ V \\ l_{i} = 300 \ mA \\ P_{i} = 1 \ W \\ L_{i} = 0 \ \mu H \\ C_{i} = 6 \ nF \end{array}$	

# Safety-related values

The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code  $\rightarrow \cong 6$ .

Type of protection Ex ec

Order code for "Output"	Output type	Safety-related values	
Option A	4-20mA HART	U <sub>nom</sub> = DC 35 V U <sub>max</sub> = 250 V	
Option B	4-20mA HART	U <sub>nom</sub> = DC 35 V U <sub>max</sub> = 250 V	
	Pulse/frequency/switch output	$U_{nom} = DC 35 V$ $U_{max} = 250 V$ $P_{max} = 1 W^{1}$	
Option C	4-20mA HART	U <sub>nom</sub> = DC 30 V	
	4-20mA analog	U <sub>max</sub> = 250 V	
Option D	4-20mA HART	U <sub>nom</sub> = DC 35 V U <sub>max</sub> = 250 V	
	Pulse/frequency/switch output	$U_{nom} = DC 35 V$ $U_{max} = 250 V$ $P_{max} = 1 W^{1}$	
	4 to 20 mA current input	U <sub>nom</sub> = DC 35 V U <sub>max</sub> = 250 V	
Option E	FOUNDATION Fieldbus	$U_{nom} = DC 32 V$ $U_{max} = 250 V$ $P_{max} = 0.88 W$	
	Pulse/frequency/switch output	$U_{nom} = DC 35 V$ $U_{max} = 250 V$ $P_{max} = 1 W^{(1)}$	

Order code for "Output"	Output type	Safety-related values
Option G	PROFIBUS PA	$U_{nom} = DC 32 V$ $U_{max} = 250 V$ $P_{max} = 0.88 W$
	Pulse/frequency/switch output	$ \begin{array}{l} U_{nom} = DC \; 35 \; V \\ U_{max} = 250 \; V \\ P_{max} = 1 \; W \; ^{1)} \end{array} $

1) Internal circuit limited by  $R_i = 760.5 \Omega$ 

# Remote display FHX50

Basic specification, position 1, 2 Approval	Cable specification	Basic specification, position 4 Display; operation Option L, M
Option <b>ND, NK, NH</b>	Max. cable length: 60 m (196.85 ft)	U <sub>o</sub> = 7.3 V
		I <sub>o</sub> = 327 mA
		P <sub>o</sub> = 362 mW
		L <sub>o</sub> = 149 μH
		C <sub>o</sub> = 388 nF
		C <sub>c</sub> ≤ 125 nF
		$L_c \le 149 \ \mu H$



71636849

# www.addresses.endress.com

