




Special Documentation

Micropilot FMR10B, FMR20B, FMR30B

Free-space radar

 The following supplementary information applies in addition to the Operating Instructions. It is an integral part of the product documentation: Available in the Downloads area of the Endress+Hauser website www.endress.com/downloads.

Additional information for "Flow" operating mode

Once the **Commissioning** wizard for a flow measurement has completed, make the following settings:

Navigation:

1. Application → Sensor → Advanced settings → Adjustment:
 - ↳ **Maximum draining speed liquid** parameter
Fast < 2 m (80 in)/min option
2. Application → Sensor → Advanced settings → Adjustment:
 - ↳ **Maximum filling speed liquid** parameter
Fast < 2 m (80 in)/min option