# Technical Information Proline Promass A 500

Coriolis flowmeter



## Accurate single-tube flowmeter for lowest flow rates, as remote version with up to 4 I/Os

#### Application

- Measuring principle operates independently of physical fluid properties such as viscosity or density
- Suitable for applications with smallest flow quantities in all industries

#### Device properties

- $\blacksquare$  Nominal diameter: DN 1 to 4 ( $\frac{1}{24}$  to  $\frac{1}{8}$ ")
- Process pressure up to 430.9 bar (6250 psi)
- Medium temperature up to +205 °C (+401 °F)
- Remote version with up to 4 I/Os
- Backlit display with touch control and WLAN access
- Standard cable between sensor and transmitter

#### Your benefits

- Space-saving installation compact, lightweight sensor
- Highest product quality self-drainable measuring tube in all line sizes
- Optimum process safety resistant to corrosive ambient conditions and internal clogging
- Full access to process and diagnostic information numerous, freely combinable I/Os and Ethernet
- Reduced complexity and variety freely configurable I/O functionality
- Integrated verification Heartbeat Technology



## Table of contents

About this document		Special installation instructions	64
		Environment	68
Function and system design	5	Ambient temperature range	68
Measuring principle		Storage temperature	68
Measuring system		Climate class	68
Equipment architecture	9	Relative humidity	68
Reliability	-	Operating height	68
remaining		Degree of protection	68
		Shock and vibration resistance	
Input		Internal cleaning	
Measured variable		Mechanical load	
Measuring range		Electromagnetic compatibility (EMC)	
Operable flow range		,	
Input signal	12	Durana	٠.
		Process	
Output	14	Medium temperature range	
Output and input variants	14	Pressure/temperature ratings	
	16	Sensor housing	
Signal on alarm	22	Rupture disk	
Load		Flow limit	
	25	Pressure loss	
	26	Static pressure	74
	27	Thermal insulation	75
Protocol-specific data	27	Heating	
_			
	32	Mechanical construction	76
Terminal assignment		Dimensions in SI units	76
	34	Dimensions in US units	
Pin assignment, device plug			103
	37		104
Power consumption			107
	37		107
Trop and the second sec	37		
T	37	Diamlan and man intenface	107
	37	1 3	107
	51	Operation concept	
	51	3 - 3 - 3 - 1 - 1 - 1 - 1 - 1 - 1 - 1 -	108
	51	*	108
cable operation for the control of t	51	Remote operation	
Overvoltage protection	56	Service interface	
		Network integration	
Performance characteristics	56	Supported operating tools	
	56	HistoROM data management	118
	56		
Repeatability	58	Certificates and approvals	120
-	58	CE mark	120
	58	UKCA marking	120
Influence of medium temperature	58	RCM marking	120
	59		120
Influence of process density			123
Design fundamentals			123
<u> </u>			123
Mounting	60		123
3	60		124
Installation point		Certification PROFINET	124
	61	PROFINET with Ethernet-APL certification	124
	62	Radio approval	124
Mounting the transmitter housing	63	Additional certification	124

2

External standards and guidelines	125
Ordering information	
Application packages Diagnostic functionality Heartbeat Technology Concentration measurement Special density OPC-UA Server	126 126 127 127 127
Accessories  Device-specific accessories  Communication-specific accessories  Service-specific accessories  System components	128 129
Supplemental documentation	131
Registered trademarks	132

## About this document

#### Symbols Electrical symbols

Symbol	Meaning
===	Direct current
~	Alternating current
$\overline{\sim}$	Direct current and alternating current
=	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Potential equalization connection (PE: protective earth) Ground terminals that must be connected to ground prior to establishing any other connections.
	The ground terminals are located on the interior and exterior of the device:  Interior ground terminal: potential equalization is connected to the supply network.  Exterior ground terminal: device is connected to the plant grounding system.

#### Communication-specific symbols

Symbol	Meaning
<b>?</b>	Wireless Local Area Network (WLAN) Communication via a wireless, local network.

#### Symbols for certain types of information

Symbol	Meaning
<b>✓</b>	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
	Reference to documentation
<b>E</b>	Reference to page
	Reference to graphic
	Visual inspection

#### Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections

Symbol	Meaning
EX	Hazardous area
×	Safe area (non-hazardous area)
≋ <b>→</b>	Flow direction

### Function and system design

#### Measuring principle

The measuring principle is based on the controlled generation of Coriolis forces. These forces are always present in a system when both translational and rotational movements are superimposed.

 $F_c = 2 \cdot \Delta m (v \cdot \omega)$ 

 $F_c$  = Coriolis force

 $\Delta m = moving mass$ 


 $\omega$  = rotational velocity

v = radial velocity in rotating or oscillating system

The amplitude of the Coriolis force depends on the moving mass  $\Delta m$ , its velocity v in the system and thus on the mass flow. Instead of a constant rotational velocity  $\omega$ , the sensor uses oscillation.

In the sensor, an oscillation is produced in the measuring tube. The Coriolis forces produced at the measuring tube cause a phase shift in the tube oscillations (see illustration):

- If there is zero flow (i.e. when the fluid stands still), the oscillation measured at points A and B has the same phase (no phase difference) (1).
- Mass flow causes deceleration of the oscillation at the inlet of the tubes (2) and acceleration at the outlet (3).

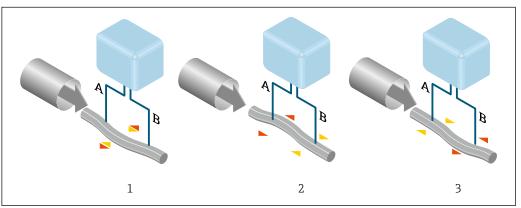

A0029932

The phase difference (A-B) increases with increasing mass flow. Electrodynamic sensors register the tube oscillations at the inlet and outlet. The measuring principle operates independently of temperature, pressure, viscosity, conductivity and flow profile.

#### Density measurement

The measuring tube is continuously excited at its resonance frequency. A change in the mass and thus the density of the oscillating system (comprising measuring tube and fluid) results in a corresponding, automatic adjustment in the oscillation frequency. The resonance frequency is thus a function of the medium density. The microprocessor utilizes this relationship to obtain a density signal.

#### Volume measurement

 
Together with the measured mass flow, this is used to calculate the volume flow.

#### Temperature measurement

The temperature of the measuring tube is determined in order to calculate the compensation factor due to temperature effects. This signal corresponds to the process temperature and is also available as an output signal.

#### Gas Fraction Handler (GFH)

The Gas Fraction Handler is a Promass software function that improves measurement stability and repeatability. The function continuously checks for the presence of disturbances in single-phase flow, i.e. gas bubbles in liquids or droplets in gas. In the presence of the second phase, flow and density become increasingly unstable. The Gas Fraction Handler function improves measurement stability with respect to the severity of the disturbances, without any effect under single-phase flow conditions.




For detailed information on the Gas Fraction Handler, see the Special Documentation for "Gas Fraction Handler" → 🖺 132

#### Measuring system

The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by connecting cables.

#### Transmitter

Two versions of the transmitter are available.

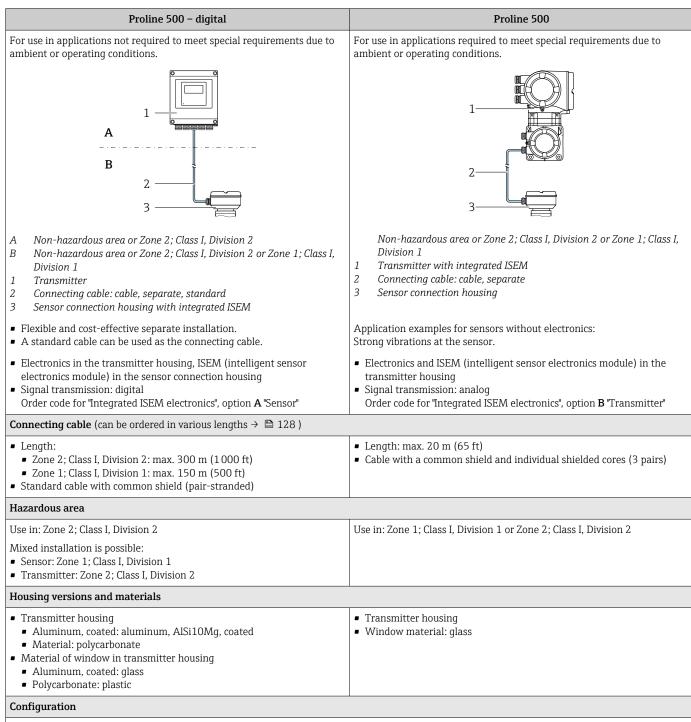


- External operation via 4-line, illuminated graphic local display (LCD) with touch control and guided menus ("Make-it-run" wizards) for application-specific commissioning.
- Via service interface or WLAN interface:
  - Operating tools (e.g. FieldCare, DeviceCare)
  - Web server (access via Web browser, e.g. Microsoft Internet Explorer, Microsoft Edge)

#### Sensor connection housing

Different versions of the connection housing are available.

Order code for "Sensor connection housing", option A, "Aluminum, coated": Aluminum, AlSi10Mg, coated  This device version is only available in conjunction with the Proline 500 – digital transmitter.
Order code for "Sensor connection housing", option B, "Stainless":  Hygienic version, stainless steel 1.4301 (304)  Optional: order code for "Sensor feature", option CC "Hygienic version, for maximum corrosion resistance": stainless steel 1.4404 (316L)
Order code for "Sensor connection housing", option C, "Ultra-compact hygienic, stainless":  Hygienic version, stainless steel 1.4301 (304)  Optional: order code for "Sensor feature", option CC "Hygienic version, for maximum corrosion resistance": stainless steel 1.4404 (316L)  This device version is only available in conjunction with the Proline 500 – digital transmitter.
Order code for "Sensor connection housing", option L, "Cast, stainless": 1.4409 (CF3M) similar to 316L


#### Sensor

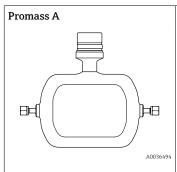

- Bent single-tube system for high-precision measurement of minimum
- Simultaneous measurement of flow, volume flow, density and temperature (multivariable)
- Immune to process influences
- Nominal diameter range: DN 1 to 4 ( $\frac{1}{24}$  to  $\frac{1}{8}$ ")
- Materials:

  - Sensor: stainless steel, 1.4404 (316/316L)
    Measuring tube: stainless steel, 1.4435 (316/316L); Alloy C22, 2.4602 (UNS N06022)
  - Process connections: stainless steel, 1.4404 (316/316L); 1.4435 (316L); Alloy C22, 2.4602 (UNS N06022)

#### **Equipment architecture**

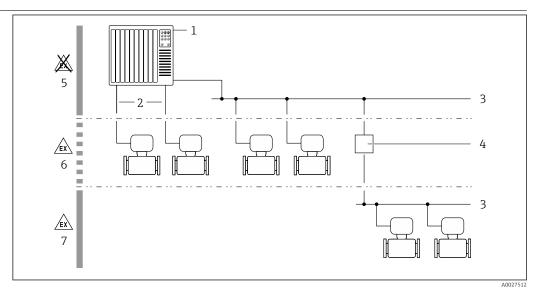

 $\blacksquare$  1 Possibilities for integrating measuring devices into a system

- 1 Control system (e.g. PLC)
- 2 Connecting cable (0/4 to 20 mA HART etc.)
- 3 Fieldbus
- 4 Coupler
- 5 Non-hazardous area
- 6 Hazardous area: Zone 2; Class I, Division 2
- Hazardous area: Zone 1; Class I, Division 1

#### Reliability

#### IT security

Our warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.

#### **Device-specific IT security**

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. The following list provides an overview of the most important functions:

Function/interface	Factory setting	Recommendation
Write protection via hardware write protection switch $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	Not enabled	On an individual basis following risk assessment
Access code (also applies to web server login or FieldCare connection) → 🖺 10	Not enabled (0000)	Assign a customized access code during commissioning
WLAN (order option in display module)	Enabled	On an individual basis following risk assessment
WLAN security mode	Enabled (WPA2- PSK)	Do not change
WLAN passphrase (Password) → 🖺 10	Serial number	Assign an individual WLAN passphrase during commissioning
WLAN mode	Access point	On an individual basis following risk assessment
Web server → 🖺 10	Enabled	On an individual basis following risk assessment
Service interface CDI-RJ45 → 🗎 11	_	On an individual basis following risk assessment

Protecting access via hardware write protection

Write access to the parameters of the device via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the main electronics module). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered.

#### Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

User-specific access code

Protect write access to the device parameters via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare). Access authorization is clearly regulated through the use of a user-specific access code.

WLAN passphrase

The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.

■ Infrastructure mode

When the device is operated in infrastructure mode, the WLAN passphrase corresponds to the WLAN passphrase configured on the operator side.

User-specific access code

Write access to the device parameters via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code.

WLAN passphrase: Operation as WLAN access point

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface, which can be ordered as an optional extra, is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter.

Infrastructure mode

A connection between the device and WLAN access point is protected by means of an SSID and passphrase on the system side. Please contact the relevant system administrator for access.

General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning for safety reasons.
- Follow the general rules for generating a secure password when defining and managing the access code and network key.
- The user is responsible for the management and careful handling of the access code and network key.

#### Access via web server

The device can be operated and configured via a web browser with the integrated web server. The connection is established via the service interface (CDI-RJ45) or the WLAN interface. For device versions with the EtherNet/IP and PROFINET communication protocols, the connection can also be established via the terminal connection for signal transmission with EtherNet/IP, PROFINET (RJ45 pluq) or PROFINET with Ethernet-APL (two-wire).

The web server is enabled when the device is delivered. The web server can be disabled via the **Web server functionality** parameter if necessary (e.g., after commissioning).

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.

Detailed information on the device parameters:

"Description of device parameters" document .

#### Access via OPC-UA

The device can communicate with OPC UA clients using the "OPC UA Server" application package.

The OPC UA server integrated in the device can be accessed via the WLAN access point using the WLAN interface - which can be ordered as an optional extra - or the service interface (CDI- RJ45) via Ethernet network. Access rights and authorization as per separate configuration.

The following Security Modes are supported as per the OPC UA Specification (IEC 62541):

- None
- Basic128Rsa15 signed
- Basic128Rsa15 signed and encrypted

Access via service interface (CDI-RJ45)

The device can be connected to a network via the service interface (CDI-RJ45). Device-specific functions quarantee the secure operation of the device in a network.

The use of relevant industrial standards and guidelines that have been defined by national and international safety committees, such as IEC/ISA62443 or the IEEE, is recommended. This includes organizational security measures such as the assignment of access authorization as well as technical measures such as network segmentation.

- Transmitters with an Ex de approval may not be connected via the service interface (CDI-RJ45)!

  Order code for "Approval transmitter + sensor", options (Ex de): BA, BB, C1, C2, GA, GB, MA, MB, NA, NB BB, C2, GB, MB, NB

## **Input**

#### Measured variable

#### Direct measured variables

- Mass flow
- Density
- Temperature

#### Calculated measured variables

- Volume flow
- Corrected volume flow
- Reference density

#### Measuring range

#### Measuring range for liquids

DN		Measuring range full scale values $\dot{m}_{min(F)}$ to $\dot{m}_{max(F)}$	
[mm]	[in]	[kg/h]	[lb/min]
1	1/24	0 to 20	0 to 0.735
2	1/12	0 to 100	0 to 3.675
4	1/8	0 to 450	0 to 16.54

#### Measuring range for gases

The full scale value depends on the density and the sound velocity of the gas used. The full scale value can be calculated with the following formulas:

$$\dot{m}_{\text{max}(G)} = (\rho_G \cdot (c_G/m) \cdot d_i^2 \cdot (\pi/4) \cdot 3600 \cdot n)$$

m <sub>max(G)</sub>	Maximum full scale value for gas [kg/h]
$\rho_{G}$	Gas density in [kg/m³] at operating conditions
$\mathbf{c}_{G}$	Sound velocity (gas) [m/s]
d <sub>i</sub>	Measuring tube internal diameter [m]
π	Pi
n = 1	Number of measuring tubes
m = 2	For all gases except pure H2 and He gas
m = 3	For pure H2 and He gas



#### Recommended measuring range



Flow limit  $\rightarrow$   $\stackrel{\triangle}{=}$  74

#### Operable flow range

Over 1000 : 1.

Flow rates above the preset full scale value do not override the electronics unit, with the result that the totalizer values are registered correctly.

#### Input signal

 
#### **Output and input variants**

→ 🖺 14

#### External measured values

To increase the measurement accuracy of certain measured variables or to calculate the corrected volume flow for gases, the automation system can continuously write different measured values to the measuring instrument:

- Operating pressure to increase measurement accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S)
- Medium temperature to increase measurement accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow for gases



It is recommended to read in external measured values to calculate the corrected volume flow.

#### HART protocol

The measured values are written from the automation system to the measuring device via the HART protocol. The pressure transmitter must support the following protocol-specific functions:

- HART protocol
- Burst mode

#### Current input

#### Digital communication

The measured values can be written by the automation system via:

- FOUNDATION Fieldbus
- PROFIBUS DP
- PROFIBUS PA
- Modbus RS485
- Modbus TCP over Ethernet-APL
- Ethernet/IP
- PROFINET
- PROFINET over Ethernet-APL

#### Current input 0/4 to 20 mA

Current input	0/4 to 20 mA (active/passive)
Current span	<ul><li>4 to 20 mA (active)</li><li>0/4 to 20 mA (passive)</li></ul>
Resolution	1 μΑ
Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)
Maximum input voltage	≤ 30 V (passive)
Open-circuit voltage	≤ 28.8 V (active)
Possible input variables	<ul><li>Pressure</li><li>Temperature</li><li>Density</li></ul>

#### Status input

Maximum input values	■ DC $-3$ to 30 V ■ If status input is active (ON): $R_i > 3 \text{ k}\Omega$
Response time	Configurable: 5 to 200 ms
Input signal level	<ul> <li>Low signal: DC -3 to +5 V</li> <li>High signal: DC 12 to 30 V</li> </ul>
Assignable functions	<ul> <li>Off</li> <li>Reset the individual totalizers separately</li> <li>Reset all totalizers</li> <li>Flow override</li> </ul>

## **Output**

#### Output and input variants

Depending on the option selected for output/input 1, different options are available for the other outputs and inputs. Only one option can be selected for each output/input 1 to 4. The following tables must be read vertically  $(\downarrow)$ .

Example: If the option BA "4-20 mA HART" was selected for output/input 1, one of the options A, B, D, E, F, H, I or J is available for output 2 and one of the options A, B, D, E, F, H, I or J is available for output 3 and 4.

#### Output/input 1 and options for output/input 2



Options for output/input 3 and 4  $\rightarrow$   $\stackrel{\triangle}{=}$  15

Order code for "Output; input 1" (020) → Possible options													
Current output 4 to 20 mA HART	BA												
Current output 4 to 20 mA HART Ex i passive	<b>1</b>	CA											
Current output 4 to 20 mA HART Ex i active		<b>4</b>	СС										
FOUNDATION Fieldbus			<b>\</b>	SA									
FOUNDATION Fieldbus Ex i				<b>4</b>	TA								
PROFIBUS DP					<b>4</b>	LA							
PROFIBUS PA						<b>\</b>	GA						
PROFIBUS PA Ex i							4	НА					
Modbus RS485								<b>\</b>	MA				
EtherNet/IP 2-port switch integrated									<b>\</b>	NA			
PROFINET 2-port switch integrated										<b>→</b>	RA		
PROFINET over Ethernet-APL											<b>\</b>	RB	
PROFINET over Ethernet-APL Ex i												1	RC
Order code for "Output; input 2" (021) →	<b>+</b>	<b>4</b>	<b>\</b>	<b>→</b>	4	4	<b>\</b>						
Not used	А	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α
Current output 4 to 20 mA	В			В		В	В		В	В	В	В	
Current output 4 to 20 mA Ex i passive		С	С		С			С					С
User-configurable input/output 1)	D			D		D	D		D	D	D	D	
Pulse/frequency/switch output	Е			Е		Е	Е		Е	E	Е	Е	
Double pulse output <sup>2)</sup>	F								F				
Pulse/frequency/switch output Ex i passive		G	G		G			G					G
Relay output	Н			Н		Н	Н		Н	Н	Н	Н	
Current input 0/4 to 20 mA	I			I		I	I		I	I	I	I	
Status input	T			J		J	J		J	J	J	J	

<sup>2)</sup> If double pulse output (F) is selected for output/input 2 (021), only the double pulse output (F) option is available for selection for output/input 3 (022).

#### Output/input 1 and options for output/input 3 and 4

Order code for "Output; input 1" (020) → Possible options													
Current output 4 to 20 mA HART	ВА												
Current output 4 to 20 mA HART Ex i passive	1	CA											
Current output 4 to 20 mA HART Ex i active		4	СС										
FOUNDATION Fieldbus			4	SA									
FOUNDATION Fieldbus Ex i				1	TA								
PROFIBUS DP					<b>4</b>	LA							
PROFIBUS PA						<b>\</b>	GA						
PROFIBUS PA Ex i							<b>\</b>	НА					
Modbus RS485								<b>\</b>	MA				
EtherNet/IP 2-port switch integrated									<b>\</b>	NA			
PROFINET 2-port switch integrated										<b>\</b>	RA		
PROFINET over Ethernet-APL/SPE, 10 Mbit/s, 2-wire											<b>\</b>	RB	
PROFINET over Ethernet-APL Ex i, 10 Mbit/s, 2-wire												4	RC
Order code for "Output; input 3" (022), "Output; input 4" (023) $^{1)}$ $\rightarrow$		<b>4</b>	<b>\</b>	4	<b>\</b>	<b>\</b>	<b>+</b>	<b>+</b>	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>
Not used	Α	Α	Α	Α	A	Α	Α	Α	Α	Α	Α	Α	Α
Current output 4 to 20 mA	В					В			В	В	В	В	
Current output 4 to 20 mA Ex i passive <sup>2)</sup>		С	С										
User-configurable input/output	D					D			D	D	D	D	
Pulse/frequency/switch output	Е					Е			Е	Е	E	E	
Double pulse output (slave) 3)	F								F				
Pulse/frequency/switch output Ex i passive 4)		G	G										
Relay output	Н					Н			Н	Н	Н	Н	
Current input 0/4 to 20 mA	I					I			I	I	I	I	
Status input	J					J			J	J	J	J	

The order code for "Output; input 4" (023) is only available for the Proline 500-digital transmitter, order code for "Integrated ISEM electronics", 1)

<sup>2)</sup> The current output 4 to 20 mA Ex i passive (C) option is not available for input/output 4.

<sup>3)</sup> 

The double pulse output (F) option is not available for input/output 4. The pulse/frequency/switch output Ex i passive (G) option is not available for input/output 4. 4)

#### Output signal

#### Current output 4 to 20 mA HART

Order code	"Output; input 1" (20): Option BA: current output 4 to 20 mA HART
Signal mode	Can be set to:  Active Passive
Current range	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  0 to 20 mA  note: The signal mode is active)  Fixed current
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	250 to 700 Ω
Resolution	0.38 μΑ
Damping	Configurable: 0 to 999.9 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### Current output 4 to 20 mA HART Ex i

Order code	"Output; input 1" (20) choose from:  Option CA: current output 4 to 20 mA HART Ex i passive  Option CC: current output 4 to 20 mA HART Ex i active
Signal mode	Depends on the selected order version.
Current range	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  0 to 20 mA  color in the signal mode is active)  Fixed current
Open-circuit voltage	DC 21.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	<ul> <li>250 to 400 Ω (active)</li> <li>250 to 700 Ω (passive)</li> </ul>
Resolution	0.38 μΑ

Damping	Configurable: 0 to 999.9 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### FOUNDATION Fieldbus

FOUNDATION Fieldbus	H1, IEC 61158-2, galvanically isolated
Data transfer	31.25 kbit/s
Current consumption	10 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

#### PROFIBUS DP

Signal encoding	NRZ code
Data transfer	9.6 kBaud12 MBaud
Terminating resistor	Integrated, can be activated via DIP switches

#### PROFIBUS PA

PROFIBUS PA	In accordance with EN 50170 Volume 2, IEC 61158-2 (MBP), galvanically isolated
Data transmission	31.25 kbit/s
Current consumption	10 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

#### Modbus RS485

Physical interface	RS485 in accordance with EIA/TIA-485 standard
Terminating resistor	Integrated, can be activated via DIP switches

#### EtherNet/IP

Standards In accordance with IEEE 802.3
---

#### PROFINET

Standards	In accordance with IEEE 802.3

#### PROFINET with Ethernet-APL

Device use	Device connection to an APL field switch  The device may only be operated according to the following APL port classifications:  ■ If used in hazardous areas: SLAA or SLAC ¹)  ■ If used in non-hazardous areas: SLAX  Connection values of APL field switch (corresponds to APL port classification SPCC or SPAA, for instance):  ■ Maximum input voltage: 15 V <sub>DC</sub> ■ Minimum output values: 0.54 W
	<ul> <li>Device connection to an SPE switch</li> <li>In non-hazardous areas, the device can be used with an appropriate SPE switch: The device can be connected to an SPE switch with a maximum voltage of 30 V<sub>DC</sub> and a minimum output power of 1.85 W connected.</li> <li>The SPE switch must support the 10BASE-T1L standard and PoDL power classes 10, 11 or 12 and have a function to disable power class detection.</li> </ul>
PROFINET	According to IEC 61158 and IEC 61784
Ethernet-APL	According to IEEE 802.3cg, APL port profile specification v1.0, galvanically isolated
Data transmission	10 Mbit/s
Current consumption	Transmitter  • Max. 400 mA(24 V)  • Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)
Permitted supply voltage	9 to 30 V
Network connection	With integrated reverse polarity protection

1) For more information on using the device in the hazardous area, see the Ex-specific Safety Instructions

#### Current output 4 to 20 mA

Order code	"Output; input 2" (21), "Output; input 3" (022) or "Output; input 4" (023): Option B: current output 4 to 20 mA
Signal mode	Can be set to:  Active Passive
Current range	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  0 to 20 mA  richting in the signal mode is active)  Fixed current
Maximum output values	22.5 mA
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	$0$ to $700\Omega$
Resolution	0.38 μΑ

Damping	Configurable: 0 to 999.9 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### Current output 4 to 20 mA Ex i passive

Order code	"Output; input 2" (21), "Output; input 3" (022): Option C: current output 4 to 20 mA Ex i passive
Signal mode	Passive
Current range	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  Fixed current
Maximum output values	22.5 mA
Maximum input voltage	DC 30 V
Load	0 to 700 $\Omega$
Resolution	0.38 μΑ
Damping	Configurable: 0 to 999 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### Pulse/frequency/switch output

Function	Can be configured as pulse, frequency or switch output
Version	Open collector  Can be set to:     Active     Passive     Passive NAMUR     Ex-i, passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V

Pulse output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Pulse width	Configurable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Configurable
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>
Frequency output	., .
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Configurable: end value frequency 2 to $10000Hz(f_{max}=12500Hz)$
Damping	Configurable: 0 to 999.9 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency 0</li> <li>Oscillation damping 0</li> <li>Signal asymmetry</li> <li>Exciter current 0</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>
Switch output	
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Configurable: 0 to 100 s

Number of switching cycles	Unlimited
Assignable functions	<ul> <li>Disable</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1-3</li> <li>Flow direction monitoring</li> <li>Status</li> <li>Partially filled pipe detection</li> <li>Low flow cut off</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### Double pulse output

Function	Double pulse
Version	Open collector
	Can be set to: Active Passive Passive NAMUR
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Output frequency	Configurable: 0 to 1000 Hz
Damping	Configurable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### Relay output

Function	Switch output
Version	Relay output, galvanically isolated
Switching behavior	Can be set to: NO (normally open), factory setting NC (normally closed)

Maximum switching capacity (passive)	■ DC 30 V, 0.1 A ■ AC 30 V, 0.5 A
Assignable functions	<ul> <li>Disable</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1-3</li> <li>Flow direction monitoring</li> <li>Status</li> <li>Partially filled pipe detection</li> <li>Low flow cut off</li> </ul>
	The range of options increases if the measuring device has one or more application packages.

#### User-configurable input/output

**One** specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

The technical values correspond to those of the inputs and outputs described in this section.

#### Signal on alarm

Depending on the interface, failure information is displayed as follows:

#### **HART** current output

Device diagnostics	Device condition can be read out via HART Command 48
--------------------	--

#### PROFIBUS PA

Status and alarm messages	Diagnostics in accordance with PROFIBUS PA Profile 3.02
Failure current FDE (Fault Disconnection Electronic)	0 mA

#### PROFIBUS DP

Status and alarm	Diagnostics in accordance with PROFIBUS PA Profile 3.02
messages	

#### EtherNet/IP

Device diagnostics	Device condition can be read out in Input Assembly
--------------------	--

#### **PROFINET**

#### PROFINET with Ethernet-APL

Device diagnostics Diagnostics according to PROFINET PA Profile 4
---

#### FOUNDATION Fieldbus

Status and alarm messages	Diagnostics in accordance with FF-891
Failure current FDE (Fault Disconnection Electronic)	0 mA

#### Modbus RS485

Failure mode	Choose from:
	■ NaN value instead of current value
	■ Last valid value

#### Modbus TCP-APL

Failure mode	Choose from:
	<ul> <li>NaN value instead of current value</li> <li>Last valid value</li> </ul>

#### Current output 0/4 to 20 mA

#### 4 to 20 mA

Choose from:  4 to 20 mA in accordance with NAMUR recommendation NE 43  4 to 20 mA in accordance with US  Min. value: 3.59 mA  Max. value: 22.5 mA  Definable value between: 3.59 to 22.5 mA  Actual value
Last valid value

#### 0 to 20 mA

Failure mode	Choose from:
	<ul> <li>Maximum alarm: 22 mA</li> <li>Definable value between: 0 to 20.5 mA</li> </ul>

#### Pulse/frequency/switch output

Pulse output	
Fault mode	Choose from:  Actual value  No pulses
Frequency output	
Fault mode	Choose from:  Actual value  O Hz  Definable value between: 2 to 12 500 Hz

Switch output	
Fault mode	Choose from:  Current status  Open  Closed

#### Relay output

Failure mode	Choose from:
	■ Current status
	■ Open
	■ Closed

#### Local display

Plain text display	With information on cause and remedial measures
Backlight	Red lighting indicates a device error.



Status signal as per NAMUR recommendation NE 107

#### Interface/protocol

- Via digital communication:
  - HART protocol
  - FOUNDATION Fieldbus
  - PROFIBUS PA
  - PROFIBUS DP
  - Modbus RS485
  - Modbus TCP with Ethernet-APL
  - EtherNet/IP
  - PROFINET
  - PROFINET with Ethernet-APL
- Via service interface
  - CDI-RJ45 service interface
  - WLAN interface

Plain text display	With information on cause and remedial measures
--------------------	---



#### Web browser

Plain text display	With information on cause and remedial measures
--------------------	---

#### Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes
	The following information is displayed depending on the device version:  Supply voltage active  Data transmission active  Device alarm/error has occurred  EtherNet/IP network available  EtherNet/IP connection established  PROFINET network available  PROFINET connection established  PROFINET blinking feature

Load

Output signal  $\rightarrow$   $\stackrel{\triangle}{=}$  16

#### Ex connection data

#### Safety-related values

Order code "Output; input 1"	Output type	Safety-rela "Output;		
		26 (+)	27 (-)	
Option <b>BA</b>	Current output 4 to 20 mA HART	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>GA</b>	PROFIBUS PA	$U_{N} = 32 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>LA</b>	PROFIBUS DP	$U_{N} = 32 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>MA</b>	Modbus RS485	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>MB</b>	Modbus TCP with Ethernet-APL	$ \begin{array}{l} \text{APL port profile SLAX} \\ \text{SPE PoDL classes 10, 11, 12} \\ U_{N} = 30 \ V_{DC} \\ U_{M} = 250 \ V_{AC} \\ \end{array} $		
Option <b>SA</b>	FOUNDATION Fieldbus	$U_{N} = 32 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>NA</b>	EtherNet/IP	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>RA</b>	PROFINET	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$	_	
Option <b>RB</b>	PROFINET with Ethernet- APL	APL port profile SLAX SPE PoDL classes 10, 11, 12 $U_N$ = 30 $V_{DC}$ $U_M$ = 250 $V_{AC}$		

Order code	Output type	Safety-related values					
"Output; input 2"; "Output; input 3" "Output; input 4"		Output; input 2		otput; input 2 Output; input 3		Output; input 4 1)	
• / •		24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
Option <b>B</b>	Current output 4 to 20 mA	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$					
Option <b>D</b>	User-configurable input/ output	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$					
Option <b>E</b>	Pulse/frequency/switch output	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$					
Option <b>F</b>	Double pulse output	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$					
Option <b>H</b>	Relay output	$U_N = 30 V_{DC}$ $I_N = 100 \text{ mA}_{DC} / 500 \text{ mA}_{AC}$ $U_M = 250 V_{AC}$					
Option <b>I</b>	Current input 4 to 20 mA	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$					
Option <b>J</b>	Status input	$ \begin{array}{c} U_N = 30 \ V_{DC} \\ U_M = 250 \ V_{AC} \end{array} $					

<sup>1)</sup> The order code "Output; input 4" is only available for the Proline 500 - digital transmitter.

#### Intrinsically safe values

Order code "Output; input 1"	Output type	Intrinsically safe values "Output; input 1"		
		26 (+)	27 (-)	
Option CA	Current output 4 to 20 mA HART Ex i passive	$\begin{split} &U_{i} = 30 \text{ V} \\ &I_{i} = 100 \text{ mA} \\ &P_{i} = 1.25 \text{ W} \\ &L_{i} = 0  \mu\text{H} \\ &C_{i} = 6 \text{ nF} \end{split}$		
Option CC	Current output 4 to 20 mA HART Ex i active	$\begin{aligned} &\textbf{Ex ia}^{\ 1)} \\ &\textbf{U}_0 = 21.8 \ \textbf{V} \\ &\textbf{I}_0 = 90 \ \textbf{mA} \\ &\textbf{P}_0 = 491 \ \textbf{mW} \\ &\textbf{L}_0 = 4.1 \ \textbf{mH (IIC)/15 mH (IIB)} \\ &\textbf{C}_0 = 160 \ \textbf{nF (IIC)/} \\ &\textbf{1 160 \ \textbf{nF (IIB)}} \end{aligned}$	Ex ic $^{2)}$ $U_0 = 21.8 \text{ V}$ $l_0 = 90 \text{ mA}$ $P_0 = 491 \text{ mW}$ $L_0 = 9 \text{ mH (IIC)/39 mH (IIB)}$ $C_0 = 600 \text{ nF (IIC)/}$ 4000  nF (IIB)	
		$\label{eq:controller} \begin{split} U_i &= 30 \text{ V} \\ l_i &= 10 \text{ mA} \\ P_i &= 0.3 \text{ W} \\ L_i &= 5  \mu\text{H} \\ C_i &= 6 \text{ nF} \end{split}$		
Option <b>HA</b>	PROFIBUS PA Ex i (FISCO Field Device)	$Ex ia^{1}$ $U_{i} = 30 V$ $l_{i} = 570 mA$ $P_{i} = 8.5 W$ $L_{i} = 10 \mu H$ $C_{i} = 5 nF$	Ex ic $^{2)}$ $U_i = 32 \text{ V}$ $l_i = 570 \text{ mA}$ $P_i = 8.5 \text{ W}$ $L_i = 10 \mu\text{H}$ $C_i = 5 \text{ nF}$	
Option TA	FOUNDATION Fieldbus Ex i	$Ex ia^{1)} \\ U_i = 30 \text{ V} \\ l_i = 570 \text{ mA} \\ P_i = 8.5 \text{ W} \\ L_i = 10  \mu\text{H} \\ C_i = 5 \text{ nF}$	Ex ic $^{2)}$ $U_i = 32 \text{ V}$ $l_i = 570 \text{ mA}$ $P_i = 8.5 \text{ W}$ $L_i = 10 \mu\text{H}$ $C_i = 5 \text{ nF}$	
Option RC	PROFINET with Ethernet- APL Ex i	Ex ia <sup>1)</sup> 2-WISE power load APL port profile SLAA	<b>Ex ic</b> <sup>2)</sup> 2-WISE power load APL port profile SLAC	

- 1)
- Only available for Proline 500 transmitter Zone 1; Class I, Division 1.
  Only available for transmitter Zone 2; Class I, Division 2 and only for Proline 500 digital transmitter 2)

Order code	Output type	Intrinsically safe values or NIFW values					S
"Output; input 2"; "Output; input 3";		Output; input 2		Output; input 2 Output; input 3		Output; input 4 1)	
"Output; input 4"		24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
Option C	Current output 4 to 20 mA Ex i passive	$\begin{aligned} &U_i = 30 \text{ V} \\ &l_i = 100 \text{ r} \\ &P_i = 1.25 \\ &L_i = 0 \\ &C_i = 0 \end{aligned}$	nA				
Option G	Pulse/frequency/switch output Ex-i passive	$\begin{aligned} &U_i = 30 \text{ V} \\ &l_i = 100 \text{ r} \\ &P_i = 1.25 \\ &L_i = 0 \\ &C_i = 0 \end{aligned}$	nA				

The order code "Output; input 4" is only available for the Proline 500- digital transmitter.

Low flow cut off

The switch points for low flow cut off are user-selectable.

#### Galvanic isolation

The outputs are galvanically isolated:
• from the power supply

- from one another
- from the potential equalization (PE) terminal

#### Protocol-specific data

#### **HART**

Manufacturer ID	0x11
Device type ID	0x3B
HART protocol revision	7
Device description files (DTM, DD)	Information and files under: www.endress.com
HART load	Min. 250 Ω
System integration	Information on system integration: Operating Instructions → 🗎 131.  • Measured variables via HART protocol  • Burst Mode functionality

#### FOUNDATION Fieldbus

Manufacturer ID	0x452B48 (hex)
Ident number	0x103B (hex)
Device revision	1
DD revision	Information and files under:
CFF revision	<ul><li>www.endress.com</li><li>www.fieldcommgroup.org</li></ul>
Interoperability Test Kit (ITK)	Version 6.2.0
ITK Test Campaign Number	Information:  www.endress.com  www.fieldcommgroup.org
Link Master capability (LAS)	Yes
Choice of "Link Master" and "Basic Device"	Yes Factory setting: Basic Device
Node address	Factory setting: 247 (0xF7)
Supported functions	The following methods are supported:  Restart  ENP Restart  Diagnostic  Set to OOS  Set to AUTO  Read trend data  Read event logbook
Virtual Communication Relation	nships (VCRs)
Number of VCRs	44
Number of link objects in VFD	50
Permanent entries	1
Client VCRs	0
Server VCRs	10
Source VCRs	43
Sink VCRs	0
Subscriber VCRs	43
Publisher VCRs	43

Device Link Capabilities		
Slot time	4	
Min. delay between PDU	8	
Max. response delay	16	
System integration	Information regarding system integration: Operating Instructions → 🗎 131.  Cyclic data transmission Description of the modules Execution times Methods	

#### PROFIBUS DP

Manufacturer ID	0x11
Ident number	0x156F
Profile version	3.02
Device description files (GSD, DTM, DD)	Information and files under:  ■ https://www.endress.com/download On the device product page: PRODUCTS → Product Finder → Links ■ https://www.profibus.com
Supported functions	Identification & Maintenance     Simplest device identification on the part of the control system and nameplate     PROFIBUS upload/download     Reading and writing parameters is up to ten times faster with PROFIBUS upload/download     Condensed status     Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur
Configuration of the device address	<ul> <li>DIP switches on the I/O electronics module</li> <li>Via operating tools (e.g. FieldCare)</li> </ul>
Compatibility with earlier model	If the device is replaced, the measuring device Promass 500 supports the compatibility of the cyclic data with previous models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promass 500 GSD file.  Previous model: Promass 83 PROFIBUS DP ■ ID No.: 1529 (hex) ■ Extended GSD file: EH3x1529.gsd ■ Standard GSD file: EH3_1529.gsd  Description of the function scope of compatibility: Operating Instructions →  131.
System integration	Information regarding system integration: Operating Instructions → 🖺 131.  Cyclic data transmission  Block model  Description of the modules

#### PROFIBUS PA

Manufacturer ID	0x11
Ident number	0x156D
Profile version	3.02
Device description files (GSD, DTM, DD)	Information and files under:  ■ https://www.endress.com/download On the device product page: PRODUCTS → Product Finder → Links ■ https://www.profibus.com

Supported functions	Identification & Maintenance     Simplest device identification on the part of the control system and nameplate     PROFIBUS upload/download     Reading and writing parameters is up to ten times faster with PROFIBUS upload/download     Condensed status     Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur
Configuration of the device address	<ul> <li>DIP switches on the I/O electronics module</li> <li>Local display</li> <li>Via operating tools (e.g. FieldCare)</li> </ul>
Compatibility with earlier model	If the device is replaced, the measuring device Promass 500 supports the compatibility of the cyclic data with previous models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promass 500 GSD file.  Earlier models:  Promass 80 PROFIBUS PA  ID No.: 1528 (hex)  Extended GSD file: EH3x1528.gsd  Standard GSD file: EH3_1528.gsd  Promass 83 PROFIBUS PA  ID No.: 152A (hex)  Extended GSD file: EH3x152A.gsd  Standard GSD file: EH3_152A.gsd  Standard GSD file: EH3_152A.gsd  Description of the function scope of compatibility: Operating Instructions →  131.
System integration	Information regarding system integration: Operating Instructions → 🖺 131.  Cyclic data transmission  Block model  Description of the modules

#### Modbus RS485

Protocol	Modbus Applications Protocol Specification V1.1				
Response times	<ul> <li>Direct data access: typically 25 to 50 ms</li> <li>Auto-scan buffer (data range): typically 3 to 5 ms</li> </ul>				
Device type	Slave				
Slave address range	1 to 247				
Broadcast address range	0				
Function codes  • 03: Read holding register • 04: Read input register • 06: Write single registers • 08: Diagnostics • 16: Write multiple registers • 23: Read/write multiple registers					
Broadcast messages	Supported by the following function codes:  O6: Write single registers  16: Write multiple registers  23: Read/write multiple registers				
Supported baud rate	<ul> <li>1200 BAUD</li> <li>2400 BAUD</li> <li>4800 BAUD</li> <li>9600 BAUD</li> <li>19200 BAUD</li> <li>38400 BAUD</li> <li>57600 BAUD</li> <li>115200 BAUD</li> </ul>				
Data transmission mode	ASCII     RTU				

Data access	Each device parameter can be accessed via Modbus RS485.  For Modbus register information						
Compatibility with earlier model	If the device is replaced, the measuring device Promass 500 supports the compatibility of the Modbus registers for the process variables and the diagnostic information with the previous model Promass 83. It is not necessary to change the engineering parameters in the automation system.  □ Description of the function scope of compatibility:  Operating Instructions → □ 131.						
System integration	Information regarding system integration: Operating Instructions → 🗎 131.  ■ Modbus RS485 information  ■ Function codes  ■ Register information  ■ Response time  ■ Modbus data map						

#### EtherNet/IP

Protocol	<ul> <li>The CIP Networks Library Volume 1: Common Industrial Protocol</li> <li>The CIP Networks Library Volume 2: EtherNet/IP Adaptation of CIP</li> </ul>				
Communication type	■ 10Base-T ■ 100Base-TX				
Device profile	Generic device (product type: 0x2B)				
Manufacturer ID	0x000049E				
Device type ID	0x103B				
Baud rates	Automatic 10/100 Mbit with half-duplex and full-duplex detection				
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs				
Supported CIP connections	Max. 3 connections				
Explicit connections	Max. 6 connections				
I/O connections	Max. 6 connections (scanner)				
Configuration options for measuring device	<ul> <li>DIP switches on the electronics module for IP addressing</li> <li>Manufacturer-specific software (FieldCare)</li> <li>Add-on Profile Level 3 for Rockwell Automation control systems</li> <li>Web browser</li> <li>Electronic Data Sheet (EDS) integrated in the measuring device</li> </ul>				
Configuration of the EtherNet interface	<ul> <li>Speed: 10 MBit, 100 MBit, auto (factory setting)</li> <li>Duplex: half-duplex, full-duplex, auto (factory setting)</li> </ul>				
Configuration of the device address	<ul> <li>DIP switches on the electronics module for IP addressing (last octet)</li> <li>DHCP</li> <li>Manufacturer-specific software (FieldCare)</li> <li>Add-on Profile Level 3 for Rockwell Automation control systems</li> <li>Web browser</li> <li>EtherNet/IP tools, e.g. RSLinx (Rockwell Automation)</li> </ul>				
Device Level Ring (DLR)	Yes				
System integration	Information regarding system integration: Operating Instructions $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $				
	<ul><li>Cyclic data transmission</li><li>Block model</li><li>Input and output groups</li></ul>				

#### PROFINET

	Application layer protocol for decentral device periphery and distributed automation, Version 2.3
Communication type	100 MBit/s

Conformance Class	Conformance Class B						
Netload Class	Netload Class 2 0 Mbps						
Baud rates	Automatic 100 Mbit/s with full-duplex detection						
Cycle times	From 8 ms						
Polarity	uto-polarity for automatic correction of crossed TxD and RxD pairs						
Media Redundancy Protocol (MRP)	/es						
System redundancy support	System redundancy S2 (2 AR with 1 NAP)						
Device profile	Application interface identifier 0xF600 Generic device						
Manufacturer ID	0x11						
Device type ID	0x843B						
Device description files (GSD, DTM, DD)	Information and files under:  ■ www.endress.com  On the product page for the device: Documents/Software → Device drivers  ■ www.profibus.com						
Supported connections	<ul> <li>2 x AR (IO Controller AR)</li> <li>1 x AR (IO-Supervisor Device AR connection allowed)</li> <li>1 x Input CR (Communication Relation)</li> <li>1 x Output CR (Communication Relation)</li> <li>1 x Alarm CR (Communication Relation)</li> </ul>						
Configuration options for measuring device	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server via Web browser and IP address</li> <li>Device master file (GSD), can be read out via the integrated Web server of the measuring device.</li> <li>Onsite operation</li> </ul>						
Configuration of the device name	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>DCP protocol</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server</li> </ul>						
Supported functions	<ul> <li>Identification &amp; Maintenance, simple device identifier via:</li> <li>Control system</li> <li>Nameplate</li> <li>Measured value status         The process variables are communicated with a measured value status     </li> <li>Blinking feature via the local display for simple device identification and assignment</li> <li>Device operation via asset management software (e.g. FieldCare, DeviceCare, SIMATIC PDM)</li> </ul>						
System integration	Information regarding system integration: Operating Instructions → 🖺 131.  Cyclic data transmission  Overview and description of the modules  Status coding  Startup configuration  Factory setting						

#### PROFINET with Ethernet-APL

Protocol	Application layer protocol for decentral device periphery and distributed automation, Version 2.43				
Communication type	Ethernet Advanced Physical Layer 10BASE-T1L				
Conformance Class	Conformance Class B (PA)				
Netload Class	PROFINET Netload Robustness Class 2 10 Mbit/s				

Baud rates	10 Mbit/s Full-duplex					
Cycle times	64 ms					
Polarity	Automatic correction of crossed "APL signal +" and "APL signal -" signal lines					
Media Redundancy Protocol (MRP)	Not possible (point-to-point connection to APL field switch)					
System redundancy support	System redundancy S2 (2 AR with 1 NAP)					
Device profile	PROFINET PA profile 4 (Application interface identifier API: 0x9700)					
Manufacturer ID	17					
Device type ID	0xA43B					
Device description files (GSD, DTM, FDI)	Information and files available at:  ■ www.endress.com → Downloads section  ■ www.profibus.com					
Supported connections	<ul> <li>2x AR (IO Controller AR)</li> <li>2x AR (IO Supervisor Device AR connection allowed)</li> </ul>					
Configuration options for measuring device	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server via Web browser and IP address</li> <li>Device master file (GSD), can be read out via the integrated Web server of the measuring device.</li> <li>Onsite operation</li> </ul>					
Configuration of the device name	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>DCP protocol</li> <li>Asset management software (FieldCare, DeviceCare, Field Xpert)</li> <li>Integrated Web server</li> </ul>					
Supported functions	<ul> <li>Identification &amp; Maintenance, simple device identifier via:</li> <li>Control system</li> <li>Nameplate</li> <li>Measured value status         The process variables are communicated with a measured value status     </li> <li>Blinking feature via the local display for simple device identification and assignment</li> <li>Device operation via asset management software (e.g. FieldCare, DeviceCare, SIMATIC PDM with FDI package)</li> </ul>					
System integration	Information regarding system integration: Operating Instructions → 🖺 131.  Cyclic data transmission  Overview and description of the modules  Status coding  Factory setting					

## Power supply

#### Terminal assignment

Transmitter: supply voltage, input/outputs

HART

Supply voltage		Input/output 1		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $						<b>1</b> 4.	

#### FOUNDATION Fieldbus

Supply voltage		upply voltage Input/output 1		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (A)	27 (B)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\rightarrow \stackrel{\square}{\cong} 14$ .							

#### PROFIBUS DP

Supply voltage		upply voltage Input/output 1		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\Rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $							<b>1</b> 14.

#### PROFIBUS PA

Supply	voltage	Input/	output L	Input/	output 2	Input/	output 3	Input/	output 4
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The t	26 (B) $\begin{vmatrix} 27 \text{ (A)} & 24 \text{ (+)} & 25 \text{ (-)} & 22 \text{ (+)} & 23 \text{ (-)} & 20 \text{ (+)} & 21 \text{ (-)} \\ \text{The terminal assignment depends on the specific device version ordered} \Rightarrow \stackrel{\text{\tiny (B)}}{\Rightarrow} 14.$				∄ 14.		

#### Modbus RS485

Supply	voltage	Input/	output I	Input/	output 2	Input/	output 3	Input/	output <del>1</del>
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The t	erminal assi	ignment der	ends on the	specific dev	rice version	ordered → [	<u>1</u> 14.

#### Modbus TCP with Ethernet-APL

Supply	voltage	Input/	output L	Input/	output 2	Input/	output 3	Input/	output <del>1</del>
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The t	The terminal assignment depends on the specific device version ordered $\Rightarrow \implies 14$ .			14.			

#### EtherNet/IP

Supply	voltage	Input/output 1	Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	EtherNet/IP	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		(RJ45 connector)			ment depends on the sp ordered → 🖺 14.		ecific device	eversion

#### PROFINET

Supply	voltage	Input/output 1	Input/	output 2	Input/	output 3	Input/	output 4
1 (+)	2 (-)	PROFINET	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		(RJ45 connector)	l l		iment depends on the sp ordered → 🖺 14.		ecific device	version

#### PROFINET with Ethernet-APL

Supply	upply voltage Input/output Input/output 1 2		Input/output 3		Input/output 4				
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The t	erminal assi	gnment dep	ends on the	specific dev	rice version	ordered → [	14. □

#### Transmitter and sensor connection housing: connecting cable

The sensor and transmitter, which are mounted in separate locations, are interconnected by a connecting cable. The cable is connected via the sensor connection housing and the transmitter housing.

Terminal assignment and connection of the connecting cable:

- Proline  $500 digital \rightarrow 237$
- Proline 500 → 🖺 38

#### Available device plugs



Device plugs may not be used in hazardous areas!

#### Device plugs for fieldbus systems:

Order code for "Input; output 1"

- Option **SA** "FOUNDATION Fieldbus" → 🖺 34
- Option **GA** "PROFIBUS PA" → 🖺 34
- Option **NA** "EtherNet/IP" → 🖺 34
- Option **RA** "PROFINET" → 🖺 35
- Option **RB** "PROFINET with Ethernet-APL" → 🖺 35

#### Device plug for connecting to the service interface:

Order code for "Accessory mounted"

Option **NB**, RJ45 M12 adapter (service interface)  $\rightarrow \triangleq 36$ 

#### Order code for "Input; output 1", option SA "FOUNDATION Fieldbus"

Order code for	Cable entry/con	nection → 🖺 38
"Electrical connection"	2	3
M, 3, 4, 5	7/8" connector	-

#### Order code for "Input; output 1", option GA "PROFIBUS PA"

Order code for	Cable entry/connection → 🗎 38				
"Electrical connection"	2	3			
L, N, P, U	Connector M12 × 1	-			

#### Order code for "Input; output 1", option NA "EtherNet/IP"

Order code for	Cable entry/connection → 🗎 38			
"Electrical connection"	2	3		
L, N, P, U	Connector M12 × 1	-		
R <sup>1) 2)</sup> , S <sup>1) 2)</sup> , T <sup>1) 2)</sup> , V <sup>1) 2)</sup>	Connector M12 × 1	Connector M12 × 1		

- Cannot be combined with an external WLAN antenna (order code for "Enclosed accessories", option P8) of an RJ45 M12 adapter for the service interface (order code for "Accessories mounted", option NB) or of the remote display and operating module DKX001
- 2) Suitable for integrating the device in a ring topology.

34

#### Order code for "Input; output 1", option RA "PROFINET"

Order code for	Cable entry/connection → 🗎 38				
"Electrical connection"	2	3			
L, N, P, U	Connector M12 × 1	-			
R <sup>1) 2)</sup> , S <sup>1) 2)</sup> , T <sup>1) 2)</sup> , V <sup>1) 2)</sup>	Connector M12 × 1	Connector M12 × 1			

- Cannot be combined with an external WLAN antenna (order code for "Enclosed accessories", option P8) of an RJ45 M12 adapter for the service interface (order code for "Accessories mounted", option NB) or of the remote display and operating module DKX001.
- 2) Suitable for integrating the device in a ring topology.

#### Order code for "Input; output 1", option RB "PROFINET with Ethernet-APL"

Order code	Cable entry/connection → 🗎 38			
"Electrical connection"	2	3		
L, N, P, U	M12 plug × 1	-		

#### Order code for "Accessory mounted", option NB "Adapter RJ45 M12 (service interface)"

Order code	Cable entry/coupling → 🗎 38	
"Accessory mounted"	Cable entry 2	Cable entry 3
NB	Plug M12 × 1	-

#### Pin assignment, device plug

#### **FOUNDATION Fieldbus**

	Pin		Assignment	Coding	Plug/socket
2 / 3	1	+	Signal +	A	Plug
1 4	2	-	Signal –		
	3		Grounding		
	4		Not assigned		


#### **PROFIBUS PA**

	Pin		Assignment	Coding	Plug/socket
2 3	1	+	PROFIBUS PA +	A	Plug
1 4	2		Grounding		
	3	-	PROFIBUS PA -		
	4		Not assigned		

## Recommended plug:

- Binder, series 713, part no. 99 1430 814 04
- Phoenix, part no. 1413934 SACC-FS-4QO SH PBPA SCO

#### **PROFINET**

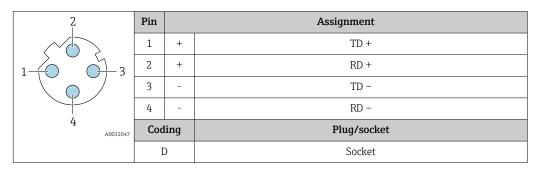

Recommended plug:
Binder, series 825, part no. 99 3729 810 04
Phoenix, part no. 1543223 SACC-M12MSD-4Q

#### PROFINET with Ethernet-APL

	Pin	Assignment	Coding	Plug/socket	
3 4	1	APL signal -	А	Socket	
2 1	2	APL signal +			
	3	Cable shield <sup>1</sup>			
	4	Not used			
	Metal plug housing	Cable shield			
	<sup>1</sup> If a cable shield is used				

Recommended plug:

■ Binder, series 713, part no. 99 1430 814 04

■ Phoenix, part no. 1413934 SACC-FS-4QO SH PBPA SCO

#### EtherNet/IP


2 1 3 A0032047	Pin		Assignment	
	1	+	Tx	
	2	+	Rx	
	3	-	Tx	
	4	-	Rx	
	Coding		Plug/socket	
	D		Socket	

Recommended plug:
Binder, series 825, part no. 99 3729 810 04

■ Phoenix, part no. 1543223 SACC-M12MSD-4Q

#### Service interface for

Order code for "Accessories mounted", option NB: Adapter RJ45 M12 (service interface)

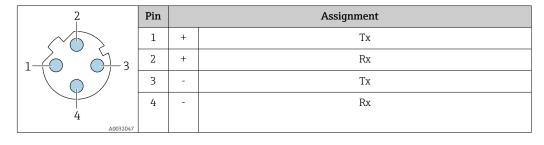

Coding	Plug/socket
D	Socket

Recommended plug:

- Binder, series 825, part no. 99 3729 810 04
- Phoenix, part no. 1543223 SACC-M12MSD-4Q

# Supply voltage

Order code "Power supply"	Terminal voltage		Frequency range
Option <b>D</b>	DC 24 V	±20%	_
Option <b>E</b>	AC 100 to 240 V	-15+10%	50/60 Hz
Option I	DC 24 V	±20%	-
Орион 1	AC 100 to 240 V	-15+10%	50/60 Hz

#### Power consumption

#### Transmitter

Max. 10 W (active power)

switch-on current	Max. 36 A (<5 ms) as per NAMUR Recommendation NE 21	
-------------------	---	--

#### **Current consumption**

#### Transmitter

- Max. 400 mA (24 V)
- Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)

#### Power supply failure

- Totalizers stop at the last value measured.
- Depending on the device version, the configuration is retained in the device memory or in the pluggable data memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.


# Overcurrent protection element

The device must be operated with a dedicated circuit breaker, as it does not have an ON/OFF switch

- The circuit breaker must be easy to reach and labeled accordingly.
- Permitted nominal current of the circuit breaker: 2 A up to maximum 10 A.

#### **Electrical connection**

#### Connection of connecting cable: Proline 500 - digital

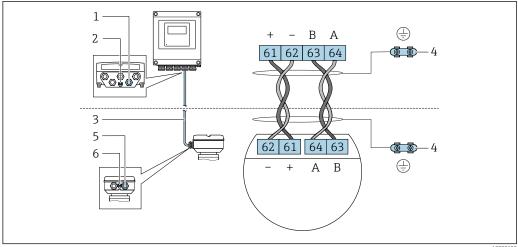

A0028198

- Cable entry for cable on transmitter housing
- 2 Terminal connection for potential equalization (PE)
- Connecting cable ISEM communication
- 4 Grounding via ground connection; in the version with a device plug, grounding is ensured through the plug itself
- 5 Cable entry for cable or connection of device plug on sensor connection housing
- 6 Terminal connection for potential equalization (PE)

Pin assignment, device plug

Device plugs are only available for device version, order code for "Housing":

Option C: ultra-compact, hygienic, stainless

For connection to sensor connection housing.


2	Pin	Color 1)		Assignment	Connection to terminal
	1	Brown	+	Supply voltage	61
3 0 0 1	2	White	А	ISEM communication	64
_5	3	Blue	В	ISEM communication	63
4	4	Black	-	Supply voltage	62
	5	-		-	_
	Coding			Plug/socket	
		A		Plug	

Cable colors of connecting cable



#### Connection of the connecting cable: Proline 500

The connecting cable is connected via terminals.

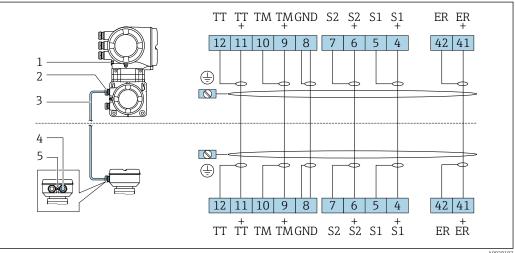


- Terminal connection for potential equalization (PE) 1
- 2 Cable entry for connecting cable on transmitter connection housing
- Connecting cable 3
- 4 Cable entry for connecting cable on sensor connection housing
- Terminal connection for potential equalization (PE)

# **Transmitter connection**

■ Terminal assignment → 🖺 32

Transmitter connection: Proline 500 - digital

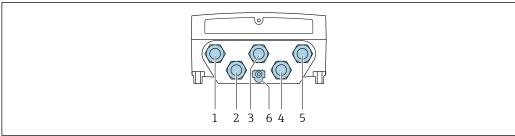


A0028200

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output
- 4 Terminal connection for connecting cable between sensor and transmitter
- 5 Terminal connection for signal transmission, input/output or terminal for network connection (DHCP client) via service interface (CDI-RJ45); optional: connection for external WLAN antenna
- 6 Terminal connection for potential equalization (PE)
- An adapter for the RJ45 to the M12 plug is optionally available:
  Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. The connection to the service interface can thus be established via an M12 plug without opening the device.

Network connection (DHCP client) via service interface (CDI-RJ45)  $\rightarrow$   $\stackrel{ riangle}{=}$  114

Connecting the transmitter: Proline 500

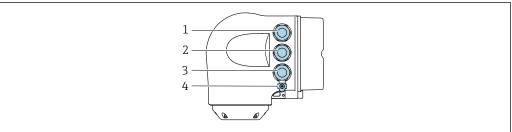

A0026781

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output or terminal for network connection (DHCP client) via service interface (CDI-RJ45); optional: connection for external WLAN antenna
- 4 Terminal connection for potential equalization (PE)
- An adapter for the RJ45 to the M12 plug is optionally available:
  Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. The connection to the service interface can thus be established via an M12 plug without opening the device.

Network connection (DHCP client) via service interface (CDI-RJ45)  $\rightarrow$  🗎 114


# Connecting in a ring topology

Device versions with EtherNet/IP and PROFINET communication protocols can be integrated into a ring topology. The device is integrated via the terminal connection for signal transmission (output 1) and the connection to the service interface (CDI-RJ45).

- Transmitters with an Ex de approval may **not** be connected via the service interface (CDI-RJ45)! Order code for "Approval transmitter + sensor", options (Ex de): BB, C2, GB, MB, NB
- Integrate the transmitter in a ring topology: ■ EtherNet/IP


  - PROFINET

Transmitter: Proline 500 - digital

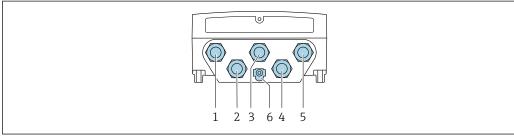

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- Terminal connection for signal transmission: PROFINET or EtherNet/IP (RJ45 plug) 2
- Terminal connection for connecting cable between sensor and transmitter
- Terminal connection to service interface (CDI-RJ45) 5
- Terminal connection for potential equalization (PE)

Transmitter: Proline 500

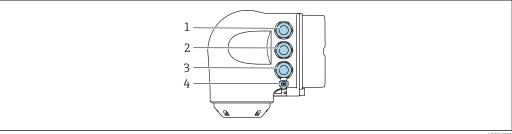


- 1 Terminal connection for supply voltage
- Terminal connection for signal transmission: PROFINET or EtherNet/IP (RJ45 plug)
- 3 *Terminal connection to service interface (CDI-RJ45)*
- Terminal connection for potential equalization (PE)
- If the device has additional inputs/outputs, these are routed in parallel via the cable entry for connection to the service interface.

40


# **Connection examples**

Current output 4 to 20 mA HART

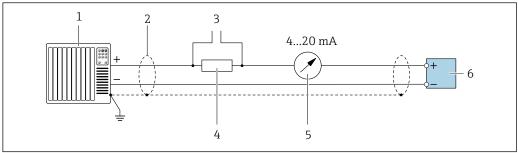

A00290


- 2 Connection example for 4 to 20 mA HART current output (active)
- 1 Automation system with current input (e.g. PLC)
- 3 Connection for HART operating devices  $\rightarrow \blacksquare 108$
- 5 Analog display unit: observe maximum load  $\rightarrow \blacksquare 16$
- 6 Transmitter

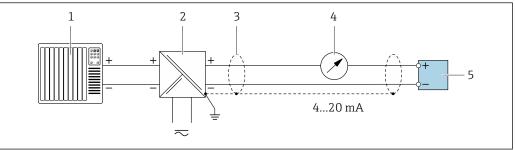

A002876

- 3 Connection example for 4 to 20 mA HART current output (passive)
- 1 Automation system with current input (e.g. PLC)
- 2 Power supply
- 3 Ground cable shield at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications  $\rightarrow \blacksquare 51$
- 4 Analog display unit: observe maximum load → 🖺 16
- 5 Transmitter

# HART input

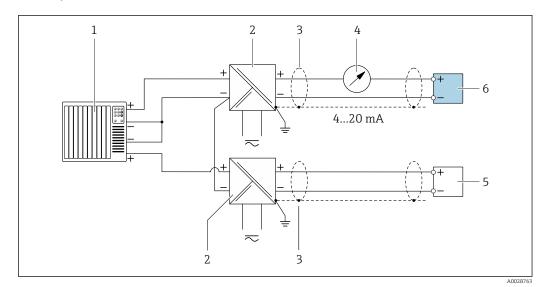


Connection example for HART input with a common negative (passive)

- 1 Automation system with HART output (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Ground cable shield at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 Analog display unit: observe maximum load  $\rightarrow \blacksquare 16$
- 5 Pressure measuring device (e.g. Cerabar M, Cerabar S): observe requirements
- 6 Transmitter

€ 4

# PROFIBUS PA

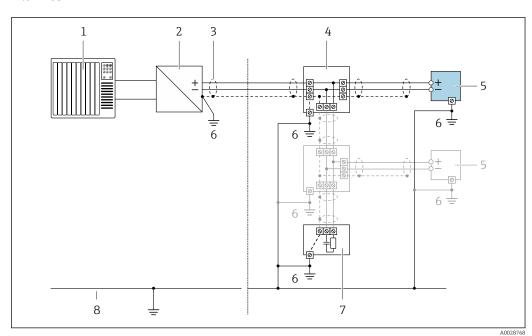


■ 5 Connection example for PROFIBUS PA

- 1 Control system (e.g. PLC)
- 2 PROFIBUS PA segment coupler
- 3 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line


42

# PROFIBUS DP

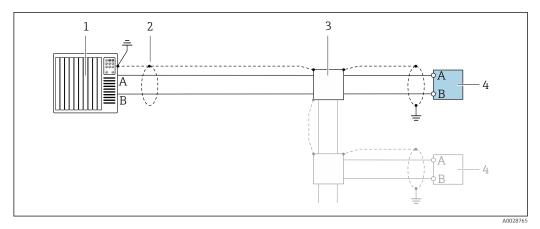

- $\blacksquare$  6 Connection example for PROFIBUS DP, non-hazardous area and Zone 2/Div. 2
- 1 Control system (e.g. PLC)
- 2 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Distribution box
- 4 Transmitter
- If baud rates > 1.5 MBaud an EMC cable entry must be used and the cable shield must continue as far as the terminal wherever possible.


# EtherNet/IP

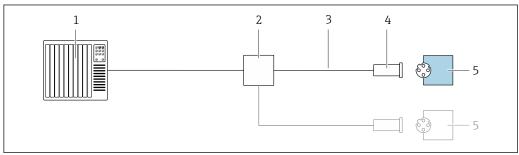

A002876


- 7 Connection example for EtherNet/IP
- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- 4 Device plug
- 5 Transmitter

# EtherNet/IP: DLR (Device Level Ring)

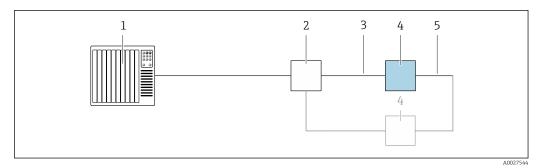

- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications →  $\bigcirc$  51
- 4 Transmitter
- 5 Connecting cable between the two transmitters


#### **PROFINET**

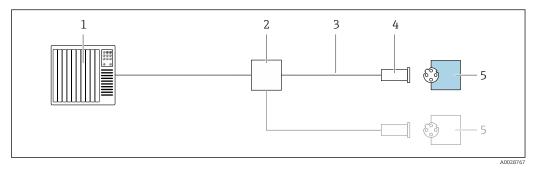

■ 8 Connection example for PROFINET


- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- 4 Device plug
- 5 Transmitter

# PROFINET with Ethernet-APL

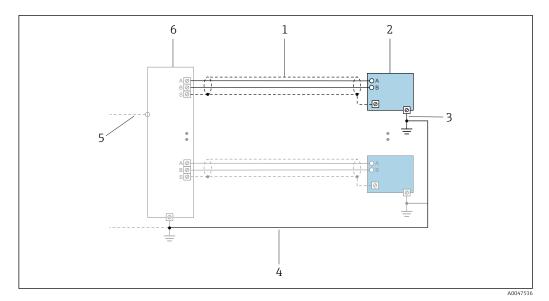

- **₽** 9  ${\it Connection example for PROFINET with Ethernet-APL}$
- 1 Cable shield
- 2 Measuring device
- 3 Local grounding
- 4 5 Potential equalization
- Trunk or TCP
- 6 Field switch


# PROFINET: MRP (Media Redundancy Protocol)

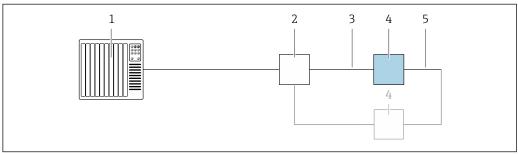

A0027544

- Control system (e.g. PLC)
- 2 Ethernet switch
- *Observe cable specifications*  $\rightarrow \implies 51$
- Transmitter
- ${\it Connecting\ cable\ between\ the\ two\ transmitters}$


# PROFINET: system redundancy S2

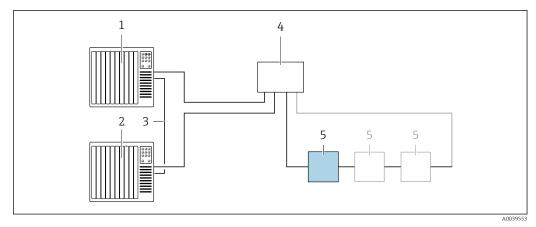

 $\blacksquare$  10 Connection example for system redundancy S2

- Control system 1 (e.g. PLC)
- Synchronization of control systems 2
- 3 Control system 2 (e.g. PLC)
- Industrial Ethernet Managed Switch 4
- Transmitter


# FOUNDATION Fieldbus

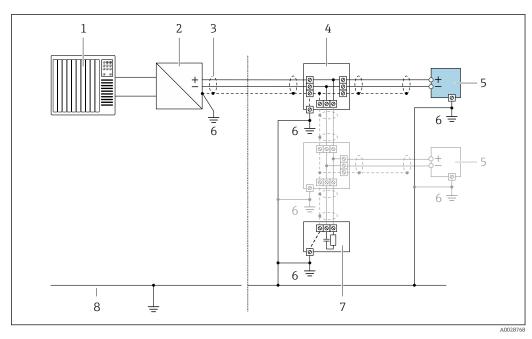

#### Connection example for FOUNDATION Fieldbus **■** 11

- 1
- Control system (e.g. PLC) Power Conditioner (FOUNDATION Fieldbus)
- 3  $\textit{Cable shield provided at one end. The cable shield must be grounded at both ends to comply with \textit{EMC} \\$ requirements; observe cable specifications
- T-box 4
- Measuring device Local grounding 5
- 6
- Bus terminator
- Potential matching line


# Modbus RS485

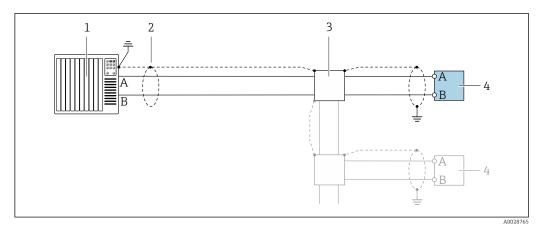

 $\blacksquare$  12 Connection example for Modbus RS485, non-hazardous area and Zone 2; Class I, Division 2

- 1 Control system (e.g. PLC)
- 2 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Distribution box
- 4 Transmitter

# Modbus with TCP-APL

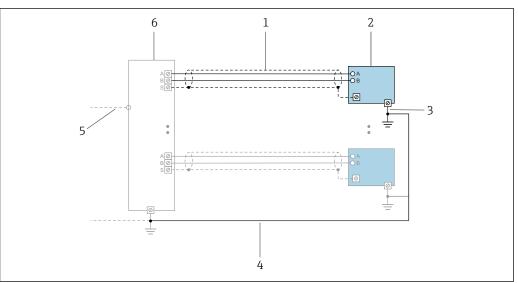


A004753

Connection example for Modbus with TCP-APL


- 1 Cable shield
- 2 Measuring device
- 3 Local grounding
- 4 Potential equalization
- 5 Trunk or TCP
- 6 Field switch

# Current output 4-20 mA

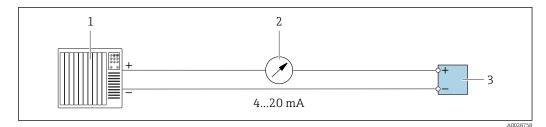

■ 14 Connection example for 4-20 mA current output (active)


- 1 Automation system with current input (e.g. PLC)
- 3 Transmitter

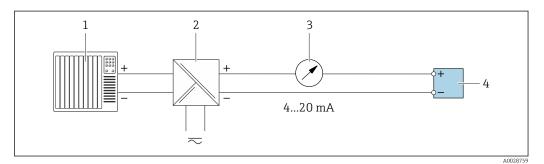

■ 15 Connection example for 4-20 mA current output (passive)

- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Analog display unit: observe maximum load  $\rightarrow \blacksquare 16$
- 4 Transmitter


# Pulse/frequency output

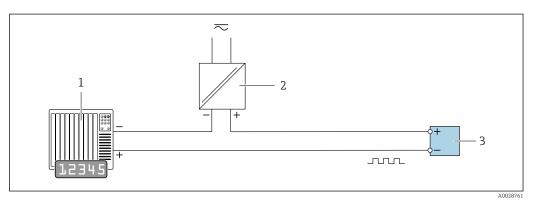

 $\blacksquare$  16 Connection example for pulse/frequency output (passive)

- Automation system with pulse/frequency input (e.g. PLC with 10 kΩ pull-up or pull-down resistor)
- 2 Power supply
- 3 Transmitter: observe input values  $\rightarrow \blacksquare 19$


# Switch output

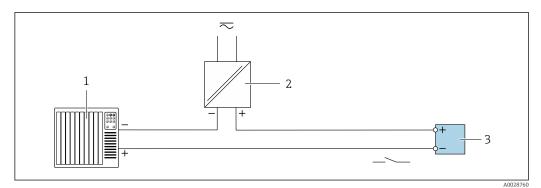


Connection example for switch output (passive)

- Automation system with switch input (e.g. PLC with a 10 k $\Omega$  pull-up or pull-down resistor)

# Double pulse output

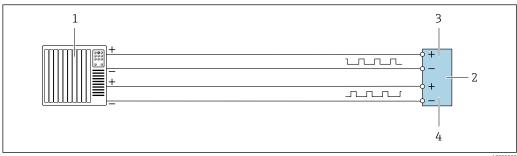


- 18 Connection example for double pulse output (active)
- Automation system with double pulse input (e.g. PLC)
- 2
- 3 Double pulse output
- Double pulse output (slave), phase-shifted

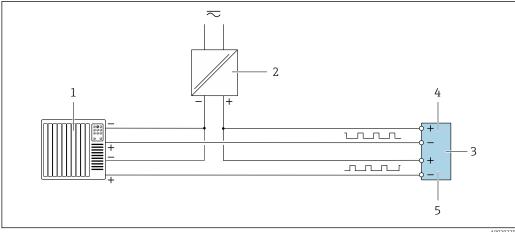

A0029279

- **■** 19 Connection example for double pulse output (passive)
- Automation system with double pulse input (e.g. PLC with a 10 k $\Omega$  pull-up or pull-down resistor)
- 2 Power supply
- 3 Transmitter: observe input values  $\rightarrow \implies 21$
- Double pulse output
- Double pulse output (slave), phase-shifted


# Relay output

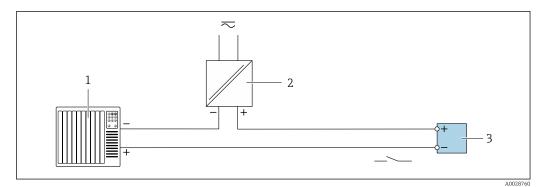

■ 20 Connection example for relay output (passive)

- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply


# Current input

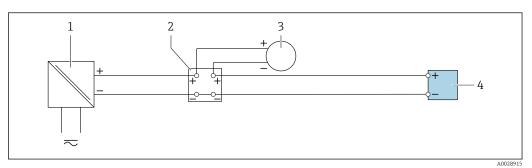

 $\blacksquare$  21 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 Terminal box
- 3 External measuring device (to read in pressure or temperature, for instance)
- 4 Transmitter

# Status input

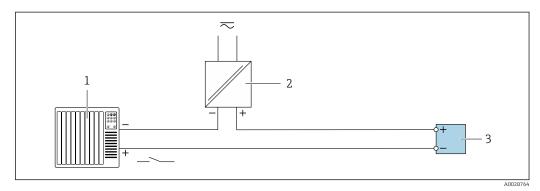

■ 22 Connection example for status input

- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter

# Potential equalization

#### Requirements

For potential equalization:

- Pay attention to in-house grounding concepts
- Take account of operating conditions, such as the pipe material and grounding
- Connect the medium, sensor and transmitter to the same electric potential
- Use a ground cable with a minimum cross-section of 6 mm<sup>2</sup> (10 AWG) and a cable lug for potential equalization connections

#### **Terminals**

Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to 2.5 mm<sup>2</sup> (24 to 12 AWG).

#### Cable entries

- Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
  - NPT 1/2"
  - G ½"
  - M20
- Device plug for digital communication: M12

#### Cable specification

#### Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

# Power supply cable (incl. conductor for the inner ground terminal)

Standard installation cable is sufficient.

#### Protective grounding cable for the outer ground terminal

Conductor cross-section < 2.1 mm<sup>2</sup> (14 AWG)

The use of a cable lug enables the connection of larger cross-sections.

The grounding impedance must be less than 2  $\Omega$ .

# Signal cable



For custody transfer, all signal lines must be shielded cables (tinned copper braiding, optical coverage  $\geq$  85 %). The cable shield must be connected on both sides.

Current output 4 to 20 mA HART

Shielded twisted-pair cable.



See https://www.fieldcommgroup.org "HART PROTOCOL SPECIFICATIONS".

#### PROFIBUS PA

Shielded twisted-pair cable. Cable type A is recommended.



See https://www.profibus.com "PROFIBUS Installation Guidelines".

#### PROFIBUS DP

Shielded twisted-pair cable. Cable type A is recommended.



See https://www.profibus.com "PROFIBUS Installation Guidelines".

#### EtherNet/IP

Twisted-pair Ethernet CAT 5 or better.



See https://www.odva.org"EtherNet/IP Media Planning & Installation Manual".

#### **PROFINET**

Only PROFINET cables.



See https://www.profibus.com "PROFINET Planning guideline".

#### Ethernet-APL

Shielded twisted-pair cable. Cable type A is recommended.



See https://www.profibus.com Ethernet-APL White Paper "

#### FOUNDATION Fieldbus

Twisted, shielded two-wire cable.



For further information on planning and installing FOUNDATION Fieldbus networks see:

- Operating Instructions for "FOUNDATION Fieldbus Overview" (BA00013S)
- FOUNDATION Fieldbus Guideline
- IEC 61158-2 (MBP)

#### Modbus RS485

Shielded twisted-pair cable.



See https://modbus.org "MODBUS over Serial Line Specification and Implementation Guide".

Current output 0 /4 to 20 mA (excluding HART)

Standard installation cable is sufficient.

Pulse /frequency /switch output

Standard installation cable is sufficient.

Relay output

Standard installation cable is sufficient.

Current input 4 to 20 mA


Standard installation cable is sufficient.

Status input

Standard installation cable is sufficient.

#### Choice of connecting cable between the transmitter and sensor

Depends on the type of transmitter and the installation zones

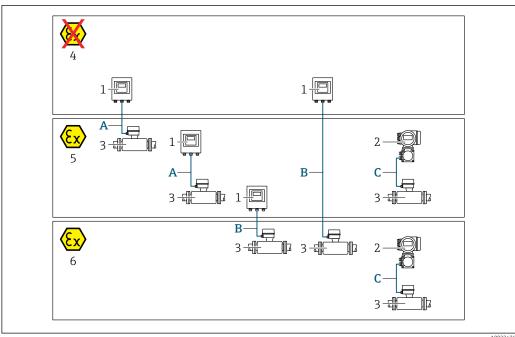

- Proline 500 digital transmitter
- Proline 500 transmitter
- 3 Sensor Promass
- Non-hazardous area
- 5 Hazardous area: Zone 2; Class I, Division 2
- 6 Hazardous area: Zone 1; Class I, Division 1
- Standard cable to 500 digital transmitter  $\rightarrow \implies 53$ Transmitter installed in the non-hazardous area or hazardous area: Zone 2; Class I, Division 2/sensor installed in the hazardous area: Zone 2; Class I, Division 2
- В Transmitter installed in the hazardous area: Zone 2; Class I, Division 2/sensor installed in the hazardous area: Zone 1; Class I, Division 1
- *Signal cable to 500 transmitter*  $\rightarrow \triangleq 56$ Transmitter and sensor installed in the hazardous area: Zone 2; Class I, Division 2 or Zone 1; Class I, Division 1

# A: Connecting cable between sensor and transmitter: Proline 500 - digital

# Standard cable

A standard cable with the following specifications can be used as the connecting cable.

Design	4 cores (2 pairs); uninsulated stranded CU wires; pair-stranded with common shield
Shield	Tin-plated copper braid, optical cover ≥ 85 %
Loop resistance	Power supply line (+, –): maximum 10 $\Omega$
Cable length	Maximum 300 m (900 ft), see the following table.
Device plug, side 1	M12 socket, 5-pin, A-coded.
Device plug, side 2	M12 plug, 5-pin, A-coded.
Pins 1+2	Connected cores as twisted pair.
Pins 3+4	Connected cores as twisted pair.

Cross-section	Cable length [max.]
0.34 mm <sup>2</sup> (AWG 22)	80 m (240 ft)
0.50 mm <sup>2</sup> (AWG 20)	120 m (360 ft)
0.75 mm <sup>2</sup> (AWG 18)	180 m (540 ft)

Cross-section	Cable length [max.]
1.00 mm <sup>2</sup> (AWG 17)	240 m (720 ft)
1.50 mm <sup>2</sup> (AWG 15)	300 m (900 ft)

# Optionally available connecting cable

Design	$2 \times 2 \times 0.34~\text{mm}^2$ (AWG 22) PVC cable $^{1)}$ with common shield (2 pairs, uninsulated stranded CU wires; pair-stranded)
Flame resistance	According to DIN EN 60332-1-2
Oil resistance	According to DIN EN 60811-2-1
Shield	Tin-plated copper braid, optical cover $\geq$ 85 %
Continuous operating temperature	When mounted in a fixed position: $-50$ to $+105$ °C ( $-58$ to $+221$ °F); when cable can move freely: $-25$ to $+105$ °C ( $-13$ to $+221$ °F)
Available cable length	Fixed: 20 m (60 ft); variable: up to maximum 50 m (150 ft)


1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

B: Connecting cable between sensor and transmitter: Proline 500-digital

# Standard cable

A standard cable with the following specifications can be used as the connecting cable.

Design	4, 6, 8 cores (2, 3, 4 pairs); uninsulated stranded CU wires; pair-stranded with common shield
Shielding	Tin-plated copper braid, optical cover ≥ 85 %
Capacitance C	Maximum 760 nF IIC, maximum 4.2 μF IIB
Inductance L	Maximum 26 μH IIC, maximum 104 μH IIB
Inductance/resistance ratio (L/R)	Maximum 8.9 $\mu H/\Omega$ IIC, maximum 35.6 $\mu H/\Omega$ IIB (e.g. according to IEC 60079-25)
Loop resistance	Power supply line (+, –): maximum 5 $\Omega$
Cable length	Maximum 150 m (450 ft), see the following table.

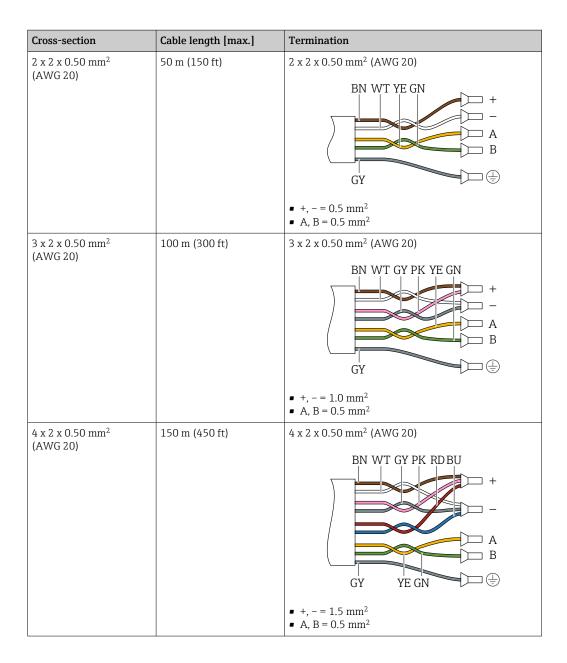

# Optionally available connecting cable

Connecting cable for	Zone 1; Class I, Division 1
Standard cable	$2\times2\times0.5~\text{mm}^2$ (AWG 20) PVC cable $^{1)}$ with common shield (2 pairs, pair-stranded)
Flame resistance	According to DIN EN 60332-1-2
Oil-resistance	According to DIN EN 60811-2-1
Shielding	Tin-plated copper braid, optical cover ≥ 85 %
Operating temperature	When mounted in a fixed position: $-50$ to $+105$ °C ( $-58$ to $+221$ °F); when cable can move freely: $-25$ to $+105$ °C ( $-13$ to $+221$ °F)
Available cable length	Fixed: 20 m (60 ft); variable: up to maximum 50 m (150 ft)

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

# C: Connecting cable between sensor and transmitter: Proline 500

Design	$6\times0.38\ mm^2$ PVC cable $^{1)}$ with individual shielded cores and common copper shield
Conductor resistance	≤ 50 Ω/km (0.015 Ω/ft)
Capacitance: core/shield	≤ 420 pF/m (128 pF/ft)
Cable length (max.)	20 m (60 ft)
Cable lengths (available for order)	5 m (15 ft), 10 m (30 ft), 20 m (60 ft)
Cable diameter	11 mm (0.43 in) ± 0.5 mm (0.02 in)
Continuous operating temperature	Max. 105 °C (221 °F)

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

 
# Overvoltage protection

Mains voltage fluctuations	→ 🖺 37
Overvoltage category	Overvoltage category II
Short-term, temporary overvoltage	Between cable and ground up to 1200 V, for max. 5 s
Long-term, temporary overvoltage	Between cable and ground up to 500 V

# Performance characteristics

# Reference operating conditions

- Error limits based on ISO 11631
- Water
  - +15 to +45 °C (+59 to +113 °F)
  - 2 to 6 bar (29 to 87 psi)
- Data as indicated in the calibration protocol
- ullet Accuracy based on accredited calibration rigs according to ISO 17025



# Maximum measurement error

o.r. = of reading;  $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature

#### Base accuracy



Design fundamentals → 🖺 59

Mass flow and volume flow (liquids)

±0.10 % o.r.

Mass flow (gases)

±0.35 % o.r.

Density (liquids)

Under reference conditions	Standard density calibration 1)	Wide-range Density specification <sup>2) 3)</sup>
[g/cm³]	[g/cm³]	[g/cm³]
±0.0005	±0.001	±0.002

- For devices with the order code "Measuring tube material, wetted surface", option HB "Alloy C22, high pressure, not polished", the standard density calibration ±0.002 g/cm<sup>3</sup>
- 2) Valid range for special density calibration: 0 to 2 g/cm³, +5 to +80  $^{\circ}$ C (+41 to +176  $^{\circ}$ F)
- 3) order code for "Application package", option EE "Special density"

# **Temperature**

 $\pm 0.5 \,^{\circ}\text{C} \pm 0.005 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.9 \,^{\circ}\text{F} \pm 0.003 \cdot (\text{T} - 32) \,^{\circ}\text{F})$ 

# Zero point stability

Standard version: order code for "Measuring tube mat., wetted surface", option BB, BF, HA, SA

DN		Zero point stability		
[mm] [in]		[kg/h]	[lb/min]	
1	1/24	0.0005	0.000018	
2	1/12	0.0025	0.00009	
4	1/8	0.0100	0.00036	

High-pressure version: order code for "Measuring tube mat., wetted surface", option HB

DN		Zero point stability		
[mm]	[in]	[kg/h]	[lb/min]	
1	1/24	0.0008	0.0000288	
2	1/12	0.0040	0.000144	
4	1/8	0.0160	0.000576	

#### Flow values

Flow values as turndown parameters depending on nominal diameter.

SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
1	20	2	1	0.4	0.2	0.04
2	100	10	5	2	1	0.2
4	450	45	22.5	9	4.5	0.9

US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
1/24	0.735	0.074	0.037	0.015	0.007	0.001
1/12	3.675	0.368	0.184	0.074	0.037	0.007
1/8	16.54	1.654	0.827	0.331	0.165	0.033

# Accuracy of outputs

The outputs have the following base accuracy specifications.

Current output

Accuracy	±5 μA
----------	-------

Pulse/frequency output

o.r. = of reading

Accuracy
----------

Max. ±50 ppm o.r. (over the entire ambient temperature range)

#### Repeatability

o.r. = of reading;  $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature

#### Base repeatability



Design fundamentals  $\rightarrow \implies 59$ 

Mass flow and volume flow (liquids)

±0.05 % o.r.

Mass flow (gases)

±0.15 % o.r.

Density (liquids)  $\pm 0.00025$  g/cm<sup>3</sup>

**Temperature** 

 $\pm 0.25 \text{ }^{\circ}\text{C} \pm 0.0025 \cdot \text{T} \text{ }^{\circ}\text{C} \ (\pm 0.45 \text{ }^{\circ}\text{F} \pm 0.0015 \cdot (\text{T}-32) \text{ }^{\circ}\text{F})$ 

#### Response time

The response time depends on the configuration (damping).

# Influence of ambient temperature

#### **Current output**

Temperature coefficient	Max. 1 μA/°C
-------------------------	--------------

# Pulse/frequency output

Temperature coefficient	No additional effect. Included in accuracy.
-------------------------	---

# Influence of medium temperature

#### Mass flow

o.f.s. = of full scale value

If there is a difference between the temperature during zero adjustment and the process temperature, the additional measurement error of the sensors is typically  $\pm 0.0002$  %o.f.s./°C ( $\pm 0.0001$  % o.f.s./°F).


The influence is reduced when the zero adjustment is performed at process temperature.

#### Density

If there is a difference between the density calibration temperature and the process temperature, the measurement error of the sensors is typically  $\pm 0.00005$  g/cm<sup>3</sup>/°C ( $\pm 0.000025$  g/cm<sup>3</sup>/°F). Field density adjustment is possible.

# Wide-range density specification (special density calibration)

If the process temperature is outside the valid range ( $\rightarrow \triangleq 56$ ) the measurement error is  $\pm 0.00005 \text{ g/cm}^3$  /°C ( $\pm 0.000025 \text{ g/cm}^3$  /°F)

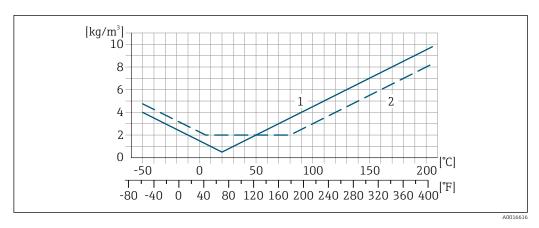

- 1 Field density adjustment, for example at +20  $^{\circ}$ C (+68  $^{\circ}$ F)
- 2 Special density calibration

# Influence of medium pressure

A difference between the calibration pressure and process pressure does not affect accuracy.

# Influence of process density

If there is a difference in density between the calibration density and the process density, the measurement error for the measured density is typically:

- $\pm 0.6\%$  for nominal diameter DN 4 ( $\frac{1}{24}$  in)
- $\pm 1.4\%$  for nominal diameter DN 2 ( $\frac{1}{12}$  in)
- $\pm 2.0\%$  for nominal diameter DN 1 ( $\frac{1}{12}$  in) and for devices with order code for "Measuring tube material, wetted surface:", option HB "Alloy C22, high pressure, not polished"



A field density adjustment is possible.

#### Design fundamentals

o.r. = of reading, o.f.s. = of full scale value

BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.

MeasValue = measured value; ZeroPoint = zero point stability


Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$	± BaseAccu
A0021332	
< ZeroPoint · 100	± ZeroPoint MeasValue · 100
A0021333	A0021334

 ${\it Calculation\ of\ the\ maximum\ repeatability\ as\ a\ function\ of\ the\ flow\ rate}$ 

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot ZeroPoint}{BaseRepeat} \cdot 100$	± BaseRepeat
A0021335	
$<\frac{\frac{1}{2} \cdot ZeroPoint}{BaseRepeat} \cdot 100$	$\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$
A0021336	A0021337

# Example of maximum measurement error

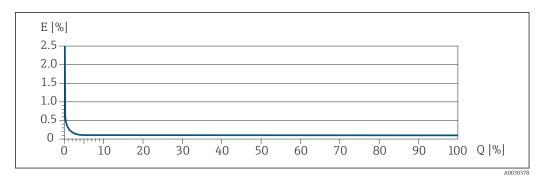


- E Maximum measurement error in % o.r. (example)
- Q Flow rate in % of maximum full scale value

# Mounting

The appropriate sensor holder must be used for all applications with increased safety or load requirements and for sensors with VCO or Clamp process connections.

The Endress+Hauser sensor holder is generally recommended for mounting for all applications. The sensor holder can be ordered with the device configuration (order code for "Accessory enclosed", option PR) or subsequently with the material number 71392563.

# **Installation point**

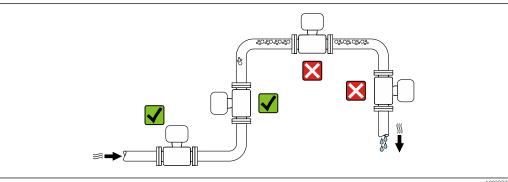


A0028772

To prevent measuring errors arising from accumulation of gas bubbles in the measuring pipe, avoid the following mounting locations in the piping:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

# Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

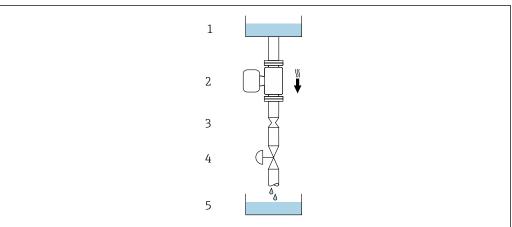

4002077

Installation in a down pipe (e.g. for batching applications)

- l Supply tank
- 2 Sensor
- *3 Orifice plate, pipe restriction*
- 4 Valve
- 5 Filling vessel

DN		Ø orifice plate, pipe restriction		
[mm]	[in]	[mm]	[in]	
1	1/24	0.8	0.03	
2	1/12	1.5	0.06	
4	1/8	3.0	0.12	

# Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

Orientation			Recommendation
A	Vertical orientation	A0015591	<b>√ √</b> 1)
В	Horizontal orientation, transmitter at top	A0015589	<b>✓</b> <sup>2)</sup>
С	Horizontal orientation, transmitter at bottom	A0015590	<b>3</b> )
D	Horizontal orientation, transmitter at side	A0015592	✓

- 1) This orientation is recommended to ensure self-draining.
- 2) Applications with low process temperatures may reduce the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 3) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

If a sensor is installed horizontally with a curved measuring tube, match the position of the sensor to the fluid properties.

Inlet and outlet runs


# Mounting the transmitter housing

# Proline 500 - digital transmitter

Pipe mounting

Required tools:

- Open-ended wrench AF 10
- Torx screwdriver TX 25

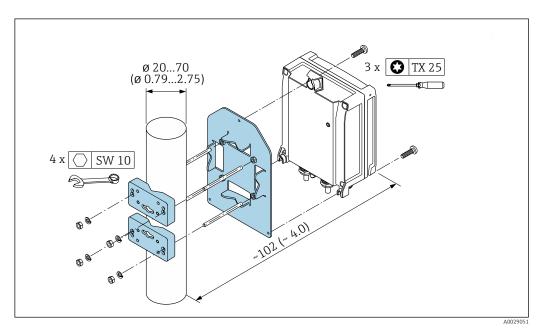


■ 24 Unit mm (in)

Wall mounting

Required tools:

Drill with drill bit Ø 6.0 mm

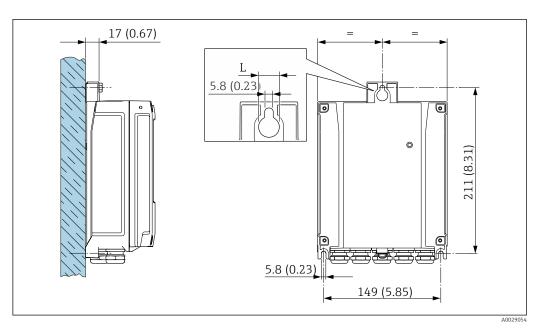

🗷 25 Engineering unit mm (in)

L Depends on order code for "Transmitter housing"


Order code for "Transmitter housing"

- Option **A**, aluminum, coated: L = 14 mm (0.55 in)
- Option **D**, polycarbonate: L = 13 mm (0.51 in)

#### Proline 500 transmitter

Pipe mounting


Required tools Open-ended wrench AF 13

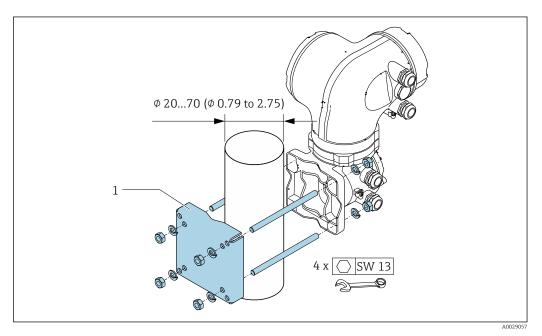

■ 26 Engineering unit mm (in)

Wall mounting

Required tools Drill with drill bit Ø 6.0 mm

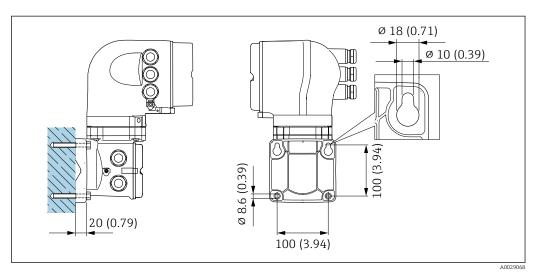

■ 27 Engineering unit mm (in)

# Special installation instructions

# Drainability

When the device is installed in a vertical position, the measuring tube can be drained completely and protected against deposit buildup if the properties of the measured liquid allow this. Furthermore, as only one measuring tube is used the flow is not impeded and the risk of product being retained in the measuring device is reduced to a minimum. The larger internal diameter of the measuring tube <sup>1)</sup>

<sup>1)</sup> Compared with the double-tube design with a similar flow capacity and measuring tubes with a smaller internal diameter

also reduces the risk of particles getting trapped in the measuring system. Due to the larger cross-section of the individual measuring tube, the tube is also generally less susceptible to clogging.

#### Hygienic compatibility

i

#### Rupture disk

Process-related information:  $\rightarrow \Box 74$ .

# **A** WARNING

# Danger from medium escaping!


Medium escaping under pressure can cause injury or material damage.

- Take precautions to prevent danger to persons and damage if the rupture disk is actuated.
- ▶ Observe the information on the rupture disk sticker.
- Make sure that the function and operation of the rupture disk is not impeded through the installation of the device.
- ▶ Do not remove or damage the rupture disk, drain connection and warning signs.

The position of the rupture disk is indicated by an affixed sticker. In versions without a drain connection (order option CU), the sticker is destroyed if the rupture disk is triggered. The disk can therefore be visually monitored.

To allow any escaping medium to drain in a controlled manner, a drain connection is available for the rupture disk integrated in the sensor: order code for "Sensor option", option CU "Drain connection for rupture disk". This connection is intended for a pipe connection with a  $\frac{1}{4}$  "NPT thread and sealed with a grip plug for protection. To guarantee the function of the rupture disk with a drain connection, the drain connection must be connected to the drain system in a hermetically tight manner.

- The drain connection is firmly mounted in place by the manufacturer and may not be removed.
- It is not possible to use the holder with a measuring device with a drain connection for a rupture disk: order code for "Sensor option", option CU "Drain connection for rupture disk"
- It is not possible to use a heating jacket if the drain connection is used: order code for "Sensor option", option CU "Drain connection for rupture disk"

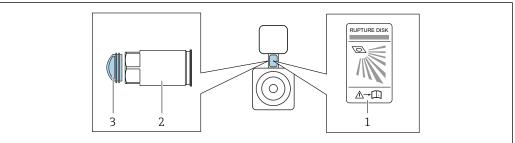

A0042344

- Rupture disk label
- 2 Drain connection for rupture disk with 1/4" NPT internal thread and 17mm width across flats (AF): order code for "Sensor option", option CU, drain connection for rupture disk
- 3 Transportation guard

For information on the dimensions, see the "Mechanical construction" section (accessories).

#### Zero verification and zero adjustment

Experience shows that zero adjustment is advisable only in special cases:


- To achieve maximum measurement accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).
- For gas applications with low pressure

For information on checking the zero point and performing a zero adjustment, see the Operating Instructions for the device.

To achieve the highest possible measurement accuracy at low flow rates, the installation must protect the sensor from mechanical stresses during operation.

#### Sensor holder

The sensor holder is used to secure the device to a wall, tabletop or pipe (order code for "Accessory enclosed", option PR).

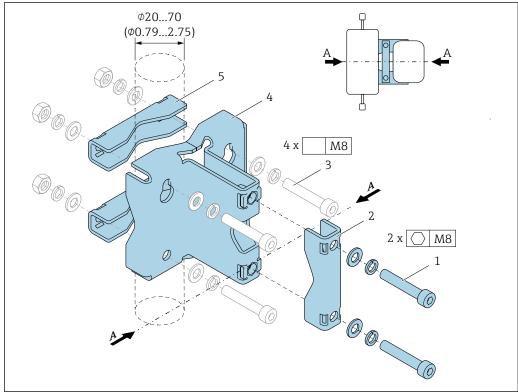

- 2 x Allen screw M8 x 50, washer and spring washer A4 1
- 1 x clamp (measuring instrument neck) 2
- 3 4 x securing screw for wall, tabletop or pipe mounting (not supplied)
- 4 1 x base profile
- 5 2 x clamp (pipe mounting)
- Measuring instrument central line


If the holder is used with a measuring instrument fitted with a rupture disk, it is important to ensure that the rupture disk in the neck is not covered over and that the cover of the rupture disk is not damaged.

#### **▲** WARNING
 
# Strain on pipes!

Excessive strain on an unsupported pipe can cause the pipe to break.

Install the sensor in a sufficiently supported pipe. In addition to the use of the sensor holder, for maximum mechanical stability the sensor can also be supported on the inlet and outlet sides onsite at the installation location with the use of pipe clamps, for example.



Sensor holder (Order code for "Accessories enclosed", option PR)

# The following mounting versions are recommended for the installation:

Lubricate all threaded joints prior to mounting. The screws for wall, tabletop or pipe mounting are not supplied with the device and must be chosen to suit the individual installation position.

#### Wall mounting

Screw the sensor holder to the wall with four screws. Two of the four holes to secure the holder are designed to hook into the screws.

#### Mounting on a table

Screw the sensor holder onto the tabletop with four screws.

#### Pipe mounting


Secure the sensor holder to the pipe with two clamps.

#### **A** WARNING


# Failure to comply with the specifications for vibration and shock resistance can damage the measuring instrument!

During operation, transportation and storage, ensure compliance with the specifications for maximum vibration and shock resistance  $\rightarrow \triangleq 68$ .

#### Weather protection cover

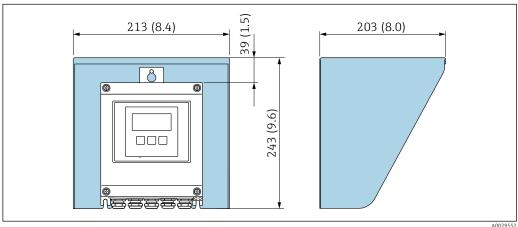

₹ 28 Weather protection cover for Proline 500 – digital; engineering unit mm (in)

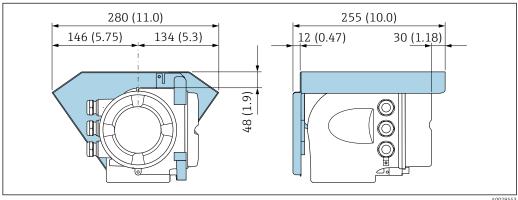

 29 Weather protection cover for Proline 500; engineering unit mm (in)

Endress+Hauser 67

A0029553

# **Environment**

#### Ambient temperature range

Measuring device	<ul> <li>-40 to +60 °C (-40 to +140 °F)</li> <li>Order code for "Test, certificate", option JP:</li> <li>-50 to +60 °C (-58 to +140 °F)</li> </ul>
Readability of the local display	-20 to $+60$ °C ( $-4$ to $+140$ °F) The readability of the display may be impaired at temperatures outside the temperature range.



Dependency of ambient temperature on medium temperature  $\rightarrow \triangleq 69$ 

▶ If operating outdoors:

Avoid direct sunlight, particularly in warm climatic regions.

# Storage temperature

Climate class	DIN EN 60068-2-38 (test Z/AD)
Relative humidity	The device is suitable for use outdoors and indoors with a relative humidity of 4 to 95 %.
Operating height	According to EN 61010-1  ■ ≤ 2 000 m (6 562 ft)  > 2 000 m (6 562 ft) with additional overvoltage protection (e.g. Endress+Hauser HAW Series)

# Degree of protection

#### **Transmitter**

- IP66/67, Type 4X enclosure, suitable for pollution degree 4
- When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2
- Display module: IP20, Type 1 enclosure, suitable for pollution degree 2

#### Sensor

- IP66/67, Type 4X enclosure, suitable for pollution degree 4
- When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2

#### Optional

Order code for "Sensor options", option CM "IP69

# External WLAN antenna

IP67

# Shock and vibration resistance

# Vibration sinusoidal, in accordance with IEC 60068-2-6

#### Sensor

- 2 to 8.4 Hz, 3.5 mm peak
- 8.4 to 2000 Hz, 1 g peak

#### Transmitter

- 2 to 8.4 Hz, 7.5 mm peak
- 8.4 to 2000 Hz, 2 g peak

# Vibration broad-band random, according to IEC 60068-2-64

#### Sensor

- 10 to 200 Hz,  $0.003 \text{ g}^2/\text{Hz}$
- $\bullet$  200 to 2000 Hz, 0.001  $g^2/Hz$
- Total: 1.54 g rms

# Transmitter

- 10 to 200 Hz, 0.01 g<sup>2</sup>/Hz
- 200 to 2000 Hz, 0.003 g<sup>2</sup>/Hz
- Total: 2.70 g rms

# Shock half-sine, according to IEC 60068-2-27

- Sensor
  - 6 ms 30 g
- Transmitter 6 ms 50 g

#### Rough handling shocks according to IEC 60068-2-31

#### Internal cleaning

- CIP cleaning
- SIP cleaning

#### **Options**

Oil- and grease-free version for wetted parts, without declaration Order code for "Service", option HA  $^{2)}$ 

#### Mechanical load

Transmitter housing and sensor connection housing:

- Protect against mechanical effects, such as shock or impact
- Do not use as a ladder or climbing aid

# Electromagnetic compatibility (EMC)

- As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)
- As per IEC/EN 61000-6-2 and IEC/EN 61000-6-4
- Device version with PROFIBUS DP: Complies with emission limits for industry as per EN 50170
   Volume 2, IEC 61784
- The following applies for PROFIBUS DP: If baud rates > 1.5 MBaud, an EMC cable entry must be used and the cable shield must continue as far as the terminal wherever possible.
- Details are provided in the Declaration of Conformity.
- This unit is not intended for use in residential environments and cannot guarantee adequate protection of the radio reception in such environments.

# **Process**

#### Medium temperature range


-50 to +205 °C (-58 to +401 °F)

# Pressure/temperature ratings


The following pressure/temperature diagrams apply to all pressure-bearing parts of the device and not just the process connection. The diagrams show the maximum permissible medium pressure depending on the specific medium temperature.

<sup>2)</sup> The cleaning refers to the measuring instrument only. Any accessories supplied are not cleaned.


# Flange connection according to EN 1092-1 (DIN 2501)

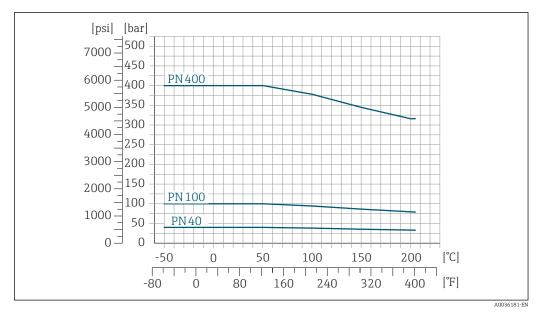

■ 30 With flange material: 1.4404 (316/316L)

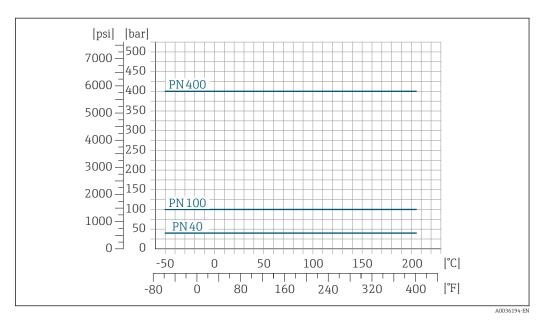


31 With flange material: Alloy C22, 2.4602 (UNS N06022)

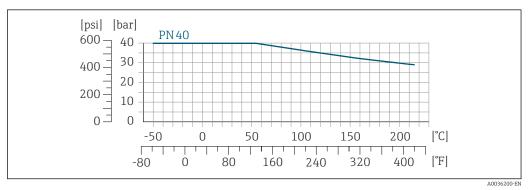


■ 32 Lap joint flange with flange material: 1.4301 (F304), wetted parts Alloy C22: 2.4602 (UNS N06022)


# Flange connection according to ASME B16.5

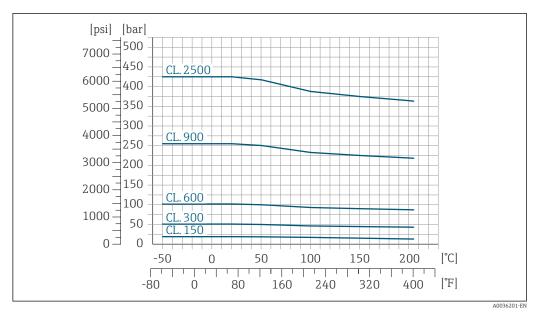

**■** 33 With flange material: 1.4404 (316/316L)

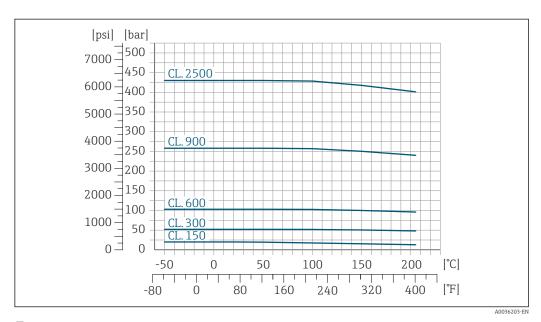


■ 34 With flange material: Alloy C22, 2.4602 (UNS N06022)

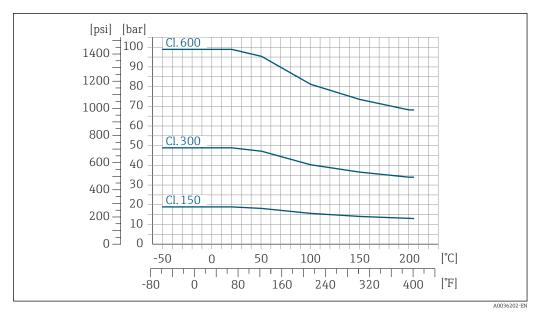


■ 35 Lap joint flange with flange material: 1.4301 (F304), wetted parts Alloy C22: 2.4602 (UNS N06022)

# Flange connection according to JIS B2220

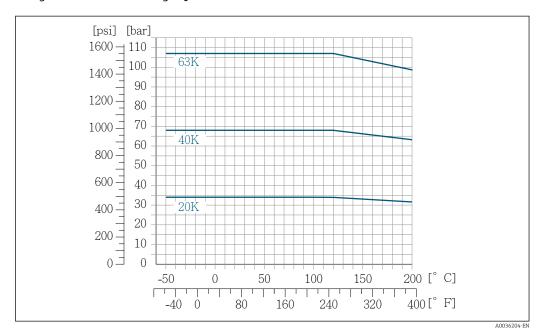

■ 36 With flange material: 1.4404 (316/316L) or Alloy C22, 2.4602 (UNS N06022)

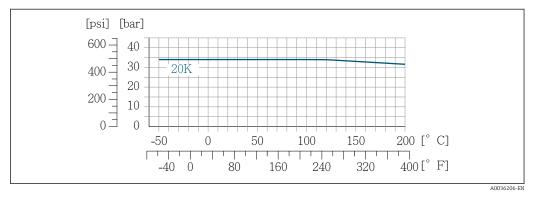


 $\blacksquare$  37 Lap joint flange with flange material: 1.4301 (F304), wetted parts Alloy C22: 2.4602 (UNS N06022)


## Tri-Clamp process connection

The clamp connections are suitable up to a maximum pressure of 40 bar (580 psi). The operating limits of the clamp and seal used must be observed, as they may be under 40 bar (580 psi). The clamp and seal are not included in the scope of supply.


## Process connection 4-VCO-4, NPT $^{1}\!\!/_{4}$ ", NTP $^{1}\!\!/_{2}$ ", G $^{1}\!\!/_{4}$ ", G $^{1}\!\!/_{2}$ "

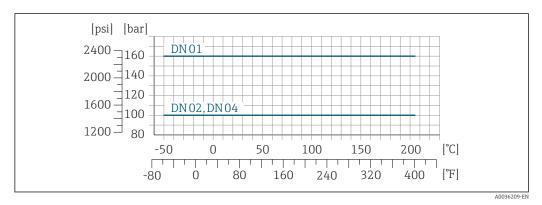

**■** 38 With flange material: 1.4404 (316/316L)

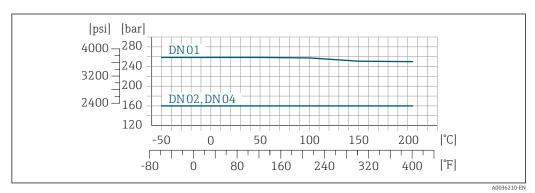

■ 39 With flange material: Alloy C22, 2.4602 (UNS N06022)

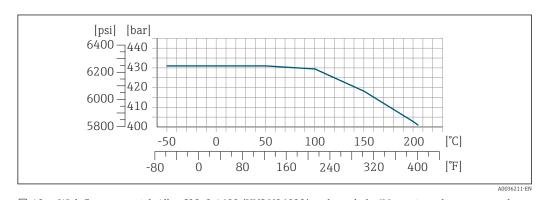

 $\blacksquare$  40 With flange material: Alloy C22, 2.4602 (UNS N06022); order code for "Measuring tube mat., wetted surface", option HB

### Sensor housing

The sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.

If a measuring tube fails (e.g. due to process characteristics like corrosive or abrasive fluids), the fluid will initially be contained by the sensor housing.

In the event of a tube failure, the pressure level inside the sensor housing will rise according to the operating process pressure. If the user judges that the sensor housing burst pressure does not provide an adequate safety margin, the device can be fitted with a rupture disk. This prevents excessively high pressure from forming inside the sensor housing. Therefore, the use of a rupture

disk is strongly recommended in applications involving high gas pressures, and particularly in applications in which the process pressure is greater than 2/3 of the sensor housing burst pressure.

High-pressure devices are always fitted with a rupture disk: order code for "Measuring tube mat., wetted surface", option HB

### Burst pressure of the sensor housing

If the device is fitted with a rupture disk (order code for "Sensor option", option CA "Rupture disk"), the rupture disk trigger pressure is decisive .

The sensor housing burst pressure refers to a typical internal pressure which is reached prior to mechanical failure of the sensor housing and which was determined during type testing. The corresponding type test declaration can be ordered with the device (order code for "Additional approval", option LN "Sensor housing burst pressure, type test").

D	N	Sensor housing burst pressure		
[mm]	[mm] [in]		[psi]	
1	1/24	220	3 190	
2	1/12	140	2 030	
4	1/8	105	1520	

## Rupture disk

To increase the level of safety, a device version with a rupture disk with a trigger pressure of 10 to 15 bar (145 to 217.5 psi)can be used (order code for "Sensor option", option CA "rupture disk").

### Drain connection for rupture disk

 
To allow any escaping medium to drain in a controlled manner in the event of an error, an optional drain connection can be ordered in addition to the rupture disk.




The function of the rupture disk is not compromised in any way.

### Flow limit

Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.



- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- $\blacksquare$  In most applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).</li>
- For gas measurement the following rules apply:
  - The flow velocity in the measuring tubes should not exceed half the sound velocity (0.5 Mach).
  - The maximum mass flow depends on the density of the gas: formula

 

### Pressure loss



 
To calculate the pressure loss, use the *Applicator* sizing tool  $\rightarrow \triangleq 130$ 

#### Static pressure

It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas. This is prevented by means of a sufficiently high static pressure.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)



A0028777

Endress+Hauser

74


#### Thermal insulation

In the case of some fluids, it is important to keep the heat radiated from the sensor to the transmitter to a low level. A wide range of materials can be used for the required insulation.

#### NOTICE

### Electronics overheating on account of thermal insulation!

- Recommended orientation: horizontal orientation, sensor connection housing pointing downwards.
- ▶ Do not insulate the sensor connection housing.
- Maximum permissible temperature at the lower end of the sensor connection housing: 80 °C (176 °F)
- ► Regarding thermal insulation with an exposed extended neck: We advise against insulating the extended neck to ensure optimal heat dissipation.

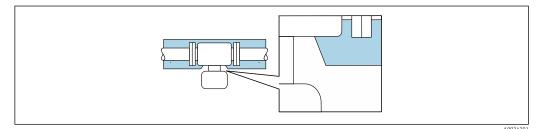


■ 41 Thermal insulation with exposed extended neck

## Heating

 Some fluids require suitable measures to avoid loss of heat at the sensor.

### Heating options

- Electrical heating, e.g. with electric band heaters<sup>3)</sup>
- Via pipes carrying hot water or steam
- Via heating jackets



#### NOTICE

## Danger of overheating when heating

- $\blacktriangleright$  Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F).
- ▶ Ensure that sufficient convection takes place at the transmitter neck.
- ► Ensure that a sufficiently large area of the transmitter neck remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.
- ▶ When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation. For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.
- Consider the "830 ambient temperature too high" and "832 electronics temperature too high" process diagnostics if overheating cannot be ruled out based on a suitable system design.

#### Vibrations


The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

# Mechanical construction

### Dimensions in SI units

Housing of Proline 500 – digital transmitter

Non-hazardous area or hazardous area: Zone 2; Class I, Division 2

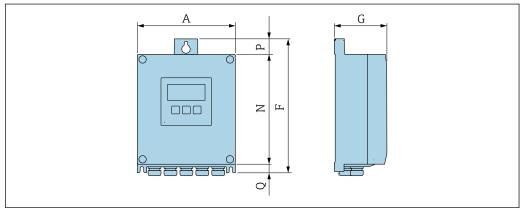

A003378

Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option A "Sensor"


A	F	G	N	P	Q
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
167	232	89	187	24	

 ${\it Order\ code\ for\ "Transmitter\ housing",\ option\ D\ "Polycarbonate"\ and\ order\ code\ for\ "Integrated\ ISEM\ electronics",\ option\ A\ "Sensor"$ 

A	F	G	N	P	Q
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
177	234	89	197	17	

## Housing of Proline 500 transmitter

Hazardous area: Zone 2; Class I, Division 2 or Zone 1; Class I, Division 1

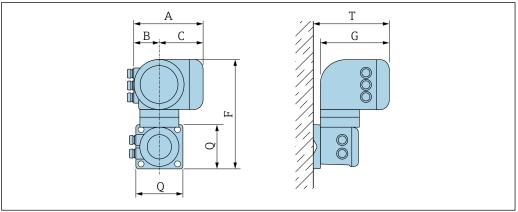


A003378

Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option B "Transmitter"

A	B	C	F	G	Q	T
[mm]						
188	85	103	318	217	130	

76

## Sensor connection housing

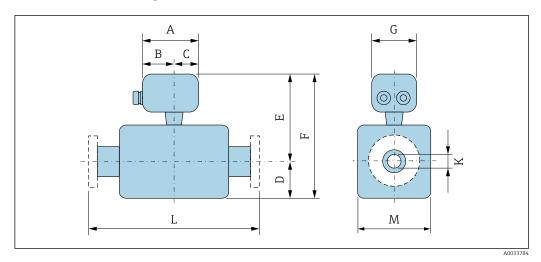

Order code for "Sensor connection housing", option A "Aluminum, coated"

DN	A 1)	B 1)	С	D	Е	F	G	K ( <sup>2)</sup> )	L	M
[mm]	[mm]	[mm]								
1	148	94	54	54	195	249	136	1.10 (0.98)	3)	34
2	148	94	54	74	217	291	136	2.50 (2.10)	3)	48
4	148	94	54	90	232	322	136	3.90 (3.16)	3)	51

- 1) Depending on the cable gland used: values up to  $\pm$  30 mm
- High-pressure version: order code for "Measuring tube mat., wetted surface", option HB
- 2) High-pressure version: order code for3) Depending on the process connection

Order code for "Sensor connection housing", option B "Stainless, hygienic"

DN	A 1)	В	С	D	Е	F	G	К	L	M
[mm]										
1	137	78	59	54	191	245	134	1.10	2)	34
2	137	78	59	74	213	287	134	2.50	2)	48
4	137	78	59	90	228	318	134	3.90	2)	51

- Depending on the cable gland used: values up to + 30 mm
- 2) Depending on the process connection

Order code for "Sensor connection housing", option C "Ultra-compact hygienic, stainless"

DN	A 1)	В	С	D	Е	F	G	К	L	М
[mm]										
1	124	68	56	54	191	245	112	1.10	2)	34
2	124	68	56	74	213	287	112	2.50	2)	48
4	124	68	56	90	228	318	112	3.90	2)	51

- 1) Depending on the cable gland used: values up to + 30 mm
- 2) Depending on the process connection


## Order code for "Sensor connection housing", option L "Cast, stainless"

DN	A 1)	В	С	D	Е	F	G	K	L	М
[mm]										
1	145	86	59	54	219	273	136	1.10	2)	34
2	145	86	59	74	241	315	136	2.50	2)	48
4	145	86	59	90	256	346	136	3.90	2)	51

- Depending on the cable gland used: values up to + 30 mm Depending on the process connection  $\,$ 1) 2)

## **Compression fittings**

## VCO coupling

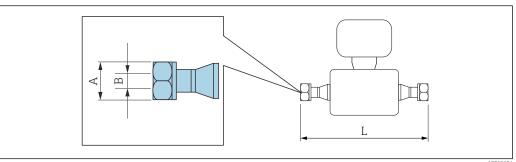

Length tolerance for dimension L in mm: +1.5/-2.0

4-VCO-4

Order code for "Process connection", option HAW


1.4435 (316/316L): order code for "Measuring tube mat., wetted surface", option BB, BF, SA

Alloy C22: order code for "Measuring tube mat., wetted surface", option HA, HC, HD

Alloy C22, high pressure: order code for "Measuring tube mat., wetted surface", option HB

DN [mm]	A [in]	_	B [mm]	
		Option BB, BF, SA, HA, HC, HD	Option HB	
1	AF <sup>11</sup> / <sub>16</sub>	1.1	1	186
2	AF <sup>11</sup> / <sub>16</sub>	2.5	2.1	263
4	AF <sup>11</sup> / <sub>16</sub>	3.9	3.2	309

### G and NPT thread

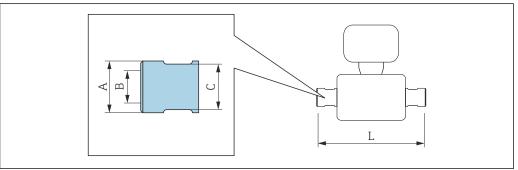

Order code for "Process connection", option G06

1.4404 (316L): order code for "Measuring tube mat., wetted surface", option SA

Alloy C22: order code for "Measuring tube mat., wetted surface", option HA Alloy C22, high pressure: order code for "Measuring tube mat., wetted surface", option HB

DN [mm]	A [mm] Option HA, SA Option HB		B [in]	C [mm]	L [mm]
1	22.5	25	G 1/4"	AF 21	257
2	22.5	25	G 1/4"	AF 21	334
4	22.5	25	G 1/4"	AF 21	380

G ½ "

Order code for "Process connection", option G15

1.4404 (316L): order code for "Measuring tube mat., wetted surface", option SA

Alloy C22: order code for "Measuring tube mat., wetted surface", option HA

Alloy C22, high pressure: order code for "Measuring tube mat., wetted surface", option HB

	DN [mm]	A [mm]		B [in]	C [mm]		L [mm]	
		Option HA, SA	Option HB		Option HA, Option HB SA		Option HA, SA	Option HB
Ī	1	22.5	25	G ½ "	AF 27	AF 30	281	280
	2	22.5	25	G ½ "	AF 27	AF 30	358	357
	4	22.5	25	G ⅓ "	AF 27	AF 30	404	403

NPT 1/4 "

Order code for "Process connection", option P06

1.4404 (316L): order code for "Measuring tube mat., wetted surface", option SA Alloy C22: order code for "Measuring tube mat., wetted surface", option HA

Alloy C22, high pressure: order code for "Measuring tube mat., wetted surface", option HB

DN [mm]	A [mm] Option HA, SA Option HB		B [in]	C [mm]	L [mm]
1	22.5	25	NPT 1/4 "	AF 19	257
2	22.5	25	NPT 1/4 "	AF 19	334
4	22.5	25	NPT 1/4 "	AF 19	380

NPT 1/2 "

Order code for "Process connection", option P15

1.4404 (316L): order code for "Measuring tube mat., wetted surface", option SA


Alloy C22: order code for "Measuring tube mat., wetted surface", option HA

Alloy C22, high pressure: order code for "Measuring tube mat., wetted surface", option HB

DN [mm]	A [mm]		B [in]	C [mm]		L [mm]	
	Option HA, SA	Option HB		Option HA, SA	Option HB	Option HA, SA	Option HB
1	22.5	25	NPT ½ "	AF 27	AF 30	281	280
2	22.5	25	NPT ½ "	AF 27	AF 30	358	357
4	22.5	25	NPT ½ "	AF 27	AF 30	404	403

## **Clamp connections**

## Tri-Clamp

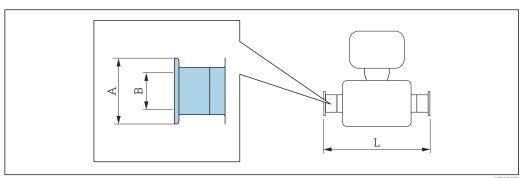

Length tolerance for dimension L in mm:  $\pm 1.5/-2.0$ 

## ½" Tri-Clamp

Order code for "Process connection", option FBW 1.4435 (316L): order code for "Measuring tube mat., wetted surface", option BB, BF, SA Alloy C22: order code for "Measuring tube mat., wetted surface", option HA, HC, HD


DN [mm]	A [mm]	B [mm]	L [mm]
1	25	9.4	192
2	25	9.4	269
4	25	9.4	315

3-A version available (Ra  $\leq 0.76~\mu m/30~\mu in,$  Ra  $\leq 0.38~\mu m/15~\mu in):$ 

 $Order\ code\ for\ "Measuring\ tube\ mat.,\ wetted\ surface",\ option\ BB,\ BF,\ HC,\ HD\ in\ conjunction\ with\ order\ code\ for\ properties of the proper$ "Additional approval" , option LP

## Flange connections

Fixed flange EN 1092-1, ASME B16.5, JIS B2220

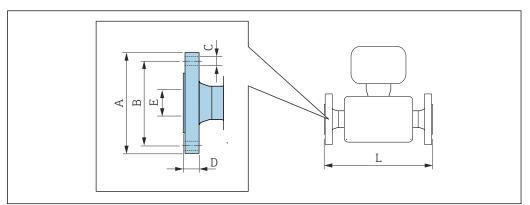

A0015621

i

Length tolerance for dimension L in mm: +1.5/-2.0

Flange similar to EN 1092-1 (DIN 2501/DIN 2512N), PN 40

1.4404 (F316/F316L): order code for "Process connection", option D2S

Alloy C22: order code for "Process connection", option D2C

Flange with groove similar to EN 1092-1 Form D (DIN 2512N), PN 40 1.4404 (F316/F316L): order code for "Process connection", option D6S Alloy C22: order code for "Process connection", option D6C

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
1	95	65	4 × Ø14	16	17.3	262
2	95	65	4 × Ø14	16	17.3	339
4	95	65	4 × Ø14	16	17.3	385

Surface roughness (flange): EN 1092-1 Form B1 (DIN 2526 Form C), Ra 3.2 to 12.5 µm

Flange similar to EN 1092-1 (DIN 2501 / DIN 2512N), PN 100

1.4404 (F316/F316L): order code for "Process connection", option D4S

Alloy C22: order code for "Process connection", option D4C

Flange with groove similar to EN 1092-1 Form D (DIN 2512N), PN 100 1.4404 (F316/F316L): order code for "Process connection", option D8S Alloy C22: order code for "Process connection", option D8C

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
1	105	75	4 × Ø14	20	17.3	292
2	105	75	4 × Ø14	20	17.3	369
4	105	75	4 × Ø14	20	17.3	415

Surface roughness (flange): EN 1092-1 Form B1 (DIN 2526 Form C), Ra 3.2 to 12.5  $\mu m$ 

Flange similar to EN 1092-1 (DIN 2501 / DIN 2512N), PN 400 1.4404 (F316/F316L): order code for "Process connection", option DNS

Alloy C22: order code for "Process connection", option DNC

Flange with groove similar to EN 1092-1 Form D (DIN 2512N), PN 400 1.4404 (F316/F316L): order code for "Process connection", option DPS Alloy C22: order code for "Process connection", option DPC

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
1	145	100	4 × Ø22	30	17.3	336
2	145	100	4 × Ø22	30	17.3	413
4	145	100	4 × Ø22	30	17.3	459

Surface roughness (flange): EN 1092-1 Form B1 (DIN 2526 Form C), Ra 3.2 to 12.5  $\mu m$ 

Flange similar to ASME B16.5, Class 150 RF, Schedule 40 1.4404 (F316/F316L): order code for "Process connection", option AAS Alloy C22: order code for "Process connection", option AAC

,			, <b>*</b>			
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
1	90	60.3	4 × Ø15.9	11.6	15.7	262
2	90	60.3	4 × Ø15.9	11.6	15.7	339
4	90	60.3	4 × Ø15.9	11.6	15.7	385

Surface roughness (flange): Ra 3.2 to  $6.3~\mu m$ 

Flange similar to ASME B16.5, Class 300 RF, Schedule 40 1.4404 (F316/F316L): order code for "Process connection", option ABS Alloy C22: order code for "Process connection", option ABC

Anoy 622. Order code for 110ccss connection, option ADC										
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]				
1	95	66.7	4 × Ø15.9	14.7	15.7	262				
2	95	66.7	4 × Ø15.9	14.7	15.7	339				
4	95	66.7	4 × Ø15.9	14.7	15.7	385				

Surface roughness (flange): Ra 3.2 to 6.3 µm

Flange similar to ASME B16.5, Class 600 RF, Schedule 80 1.4404 (F316/F316L): order code for "Process connection", option ACS Alloy C22: order code for "Process connection", option ACC

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]			
1	95	66.7	4 × Ø15.9	21.3	13.9	292			
2	95	66.7	4 × Ø15.9	21.3	13.9	369			
4	95	66.7	4 × Ø15.9	21.3	13.9	415			
Surface roughi	Surface roughness (flange): Ra 3.2 to 6.3 μm								

Flange similar to ASME B16.5, Class 900/1500 RF, Schedule 80

1.4404 (F316/F316L): order code for "Process connection", option ARS

Alloy C22: order code for "Process connection", option ARC

Flange similar to ASME B16.5, Class 900/1500 RTJ, Schedule 80 1.4404 (F316/F316L): order code for "Process connection", option ASS

Alloy C22: order code for "Process connection", option ASC

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
1	120	82.6	4 × Ø22 <sup>1)</sup>	29.3	14	324
2	120	82.6	4 × Ø22 <sup>1)</sup>	29.3	14	401
4	120	82.6	4 × Ø22 <sup>1)</sup>	29.3	14	447
	(6)	20. (0			•	•

Surface roughness (flange): Ra 3.2 to 6.3 µm

1) option ARC/ARS:  $4 \times \emptyset 22.2$ 

Flange similar to ASME B16.5, Class 2500 RF, Schedule 80

1.4404 (F316/F316L): order code for "Process connection", option ATS

Alloy C22: order code for "Process connection", option ATC

Flange similar to ASME B16.5, Class 2500 RTJ, Schedule 80

1.4404 (F316/F316L): order code for "Process connection", option AUS

Alloy C22: order code for "Process connection", option AUC

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
1	135	88.9	4 × Ø22.2	37.2	14	351
2	135	88.9	4 × Ø22.2	37.2	14	428
4	135	88.9	4 × Ø22.2	37.2	14	474

Surface roughness (flange): Ra 3.2 to 6.3 µm

Flange JIS B2220, 20K

1.4404 (F316/F316L): order code for "Process connection", option NES

Alloy C22: order code for "Process connection", option NEC

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
1	95	70	4 × Ø15	14	15	262
2	95	70	4 × Ø15	14	15	339
4	95	70	4 × Ø15	14	15	385

Surface roughness (flange): Ra 3.2 to 6.3  $\mu m$ 

Flange JIS B2220, 40K

1.4404 (F316/F316L): order code for "Process connection", option NGS

Alloy C22: order code for "Process connection", option NGC

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
1	115	80	4 × Ø19	20	15	292
2	115	80	4 × Ø19	20	15	369
4	115	80	4 × Ø19	20	15	415

Surface roughness (flange): Ra 3.2 to 6.3 µm


Flange	JIS	B2220,	63K

1.4404 (F316/F316L): order code for "Process connection", option NHS Alloy C22: order code for "Process connection", option NHC

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
1	120	85	4 × Ø19	23	12	312
2	120	85	4 × Ø19	23	12	389
4	120	85	4 × Ø19	23	12	435

Surface roughness (flange): Ra 3.2 to 6.3  $\mu m$ 

## Lap joint flange EN 1092-1, ASME B16.5, JIS B2220

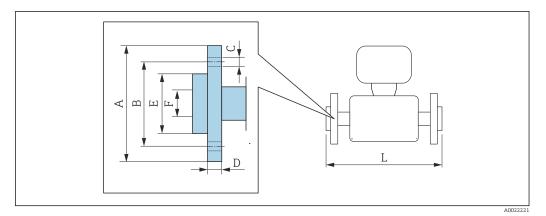

Length tolerance for dimension L in mm: +1.5 / -2.0

Lap joint flange similar to EN 1092-1 Form D: PN 40 1.4301 (F304), wetted parts Alloy C22: order code for "Process connection", option DAC								
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]	L [mm]	
1	95	65	4 × Ø14	14.5	45	17.3	262	
2	95	65	4 × Ø14	14.5	45	17.3	339	
4	95	65	4 × Ø14	14.5	45	17.3	385	
Surface roug	Surface roughness (flange): Ra 3.2 to 12.5 µm							

Lap joint flange similar to ASME B16.5: Class 150, Schedule 40 1.4301 (F304), wetted parts Alloy C22: order code for "Process connection", option ADC								
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]	L [mm]	
1	90	60.3	4 × Ø15.9	15	35.1	15.7	262	
2	90	60.3	4 × Ø15.9	15	35.1	15.7	339	
4	90	60.3	4 × Ø15.9	15	35.1	15.7	385	
Surface roug	Surface roughness (flange): Ra 3.2 to 12.5 μm							

Lap joint flange similar to ASME B16.5: Class 300, Schedule 40 1.4301 (F304), wetted parts Alloy C22: order code for "Process connection", option AEC									
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]	L [mm]	L <sub>diff</sub> 1) [mm]	
1	95	66.7	4 × Ø15.9	16.5	35.1	15.7	268	+6	
2	95	66.7	4 × Ø15.9	16.5	35.1	15.7	345	+6	
4	95	66.7	4 × Ø15.9	16.5	35.1	15.7	391	+6	
Surface rou	Surface roughness (flange): Ra 3.2 to 12.5 μm								


1) Difference to installed length of the welding neck flange (order code for "Process connection", option AAC)

L 3	Lap joint flange similar to ASME B16.5: Class 600, Schedule 80 1.4301 (F304), wetted parts Alloy C22: order code for "Process connection", option AFC								
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]	L [mm]		
1	95	66.7	4 × Ø15.9	17	35.1	13.9	292		
2	95	66.7	4 × Ø15.9	17	35.1	13.9	369		
4	95	66.7	4 × Ø15.9	17	35.1	13.9	415		
Surface roug	Surface roughness (flange): Ra 3 2 to 12 5 µm								

	Lap joint flange JIS B2220: 20K 1.4301 (F304), wetted parts Alloy C22: order code for "Process connection", option NIC									
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]	L [mm]			
1	95	70	4 × Ø15	14	51	15	262			
2	95	70	4 × Ø15	14	51	15	339			
4	95	70	4 × Ø15	14	51	15	385			
Surface roug	Surface roughness (flange): Ra 3.2 to 12.5 µm									


## Accessories

Drain connection for rupture disk

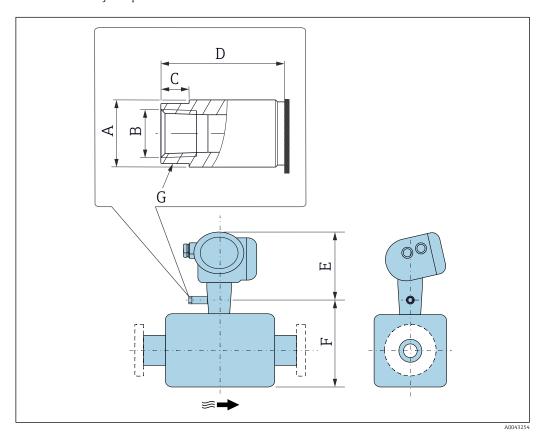

DN [mm]	A [mm]	B [in]	C [mm]	D [mm]	E [mm]	F [mm]	G [mm]
1	Ø19	NPT 1/4 "	8	35	210	123	AF 17
2	Ø19	NPT 1/4 "	8	35	210	165	AF 17
4	Ø19	NPT 1/4 "	8	35	210	196	AF 17


## Sensor holder

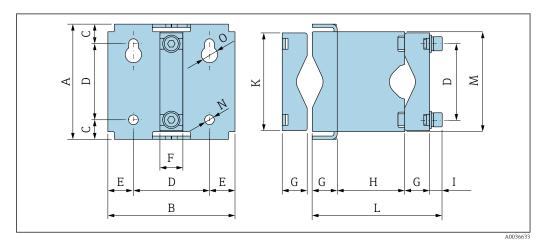


A	B	C	D	E	F	G
[mm]						
106	117	18	70	23.5	21	

H	I	K	L	M	N	O
[mm]						
62	12	90	120	92	9	

## Weather protection cover

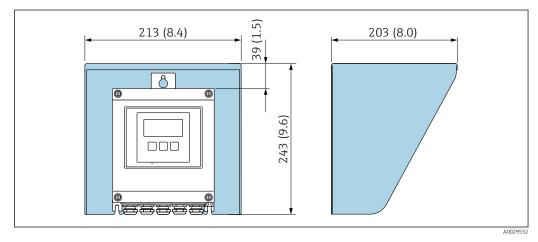

■ 42 Weather protection cover for Proline 500 – digital; engineering unit mm (in)

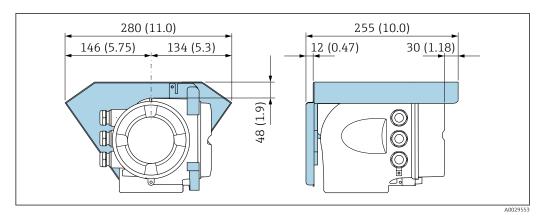


 $\blacksquare$  43 Weather protection cover for Proline 500; engineering unit mm (in)

External WLAN antenna

The external WLAN antenna is not suitable for use in hygienic applications.

Proline 500 – digital


External WLAN antenna mounted on device

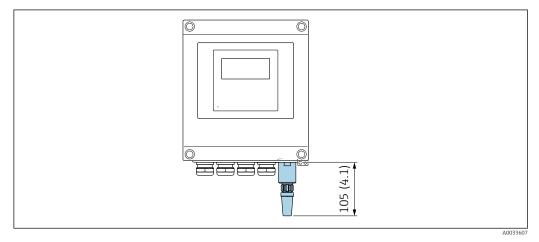

■ 44 Engineering unit mm (in)

External WLAN antenna mounted with cable


The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

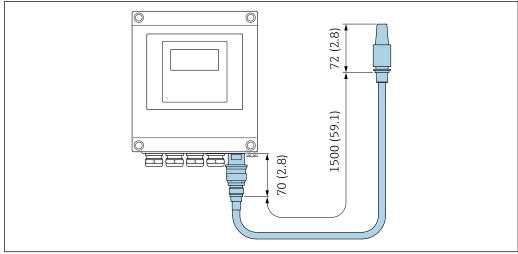

■ 45 Engineering unit mm (in)

## Proline 500


External WLAN antenna mounted on device

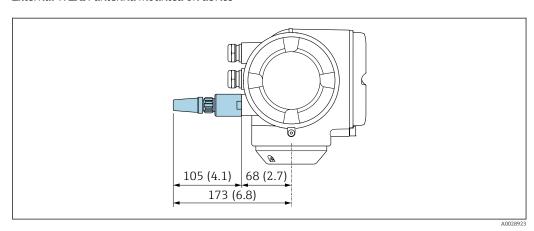

46 Engineering unit mm (in)

## External WLAN antenna mounted with cable

The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

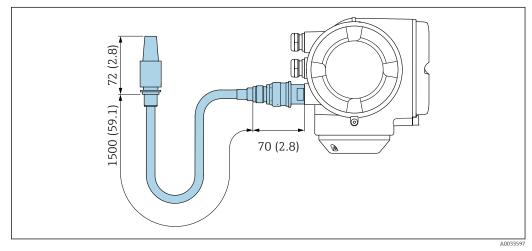

🖪 47 Engineering unit mm (in)


90 Endress+Hauser

A00336

## Dimensions in US units

## Housing of Proline 500 – digital transmitter

Non-hazardous area or hazardous area: Zone 2; Class I, Division 2

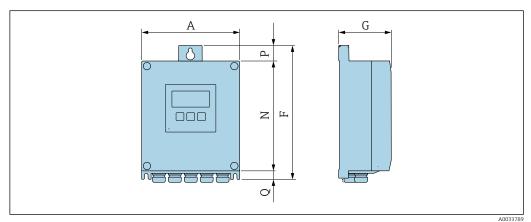

 $\label{lem:code} \textit{Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option A "Sensor"$ 


A	F	G	N	P	Q
[in]	[in]	[in]	[in]	[in]	[in]
6.57	9.13	3.50	7.36	0.94	

 $\label{lem:code_for "Transmitter housing", option D "Polycarbonate" and order code for "Integrated ISEM electronics", option A "Sensor"$ 

A	F	G	N	P	Q
[in]	[in]	[in]	[in]	[in]	[in]
6.97	9.21	3.50	7.76	0.67	

## Housing of Proline 500 transmitter

Hazardous area: Zone 2; Class I, Division 2 or Zone 1; Class I, Division  $\bf 1$ 

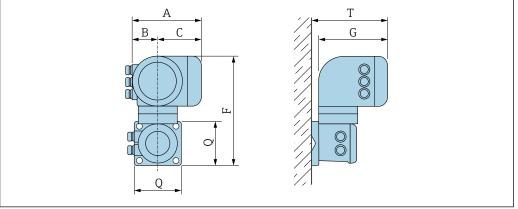

A0033788

Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option B "Transmitter"

A	B	C	F	G	Q	T
[in]						
7.40	3.35	4.06	12.5	8.54	5.12	

K (2)

[in]


L

[in]

M

[in]

## Sensor connection housing

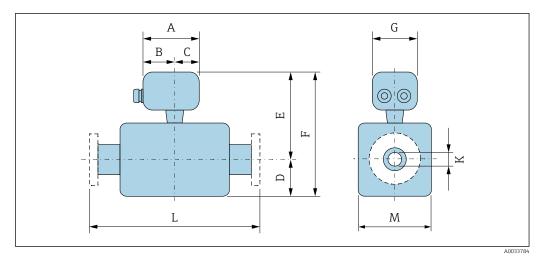

Order code for "Sensor connection housing", ontion A "Aluminum, coated"

Oraci coi	uc joi be	risor cort	ricciion n	iousing, of	711071717	ıtuntintan	i, couica	
DN	A 1)	B 1)	С	D	Е	F	G	
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	

0.04 3) 5.83 1/24 3.70 2.13 2.13 7.68 9.8 5.35 1.34 (0.04)0.10 3) 1/12 5.83 3.70 2.13 2.91 8.54 11.46 5.35 1.89 (0.08)0.15 3) 1/8 5.83 3.70 2.13 3.54 9.13 12.68 5.35 2.01 (0.12)

Depending on the cable gland used: values up to  $\pm$  1.18 in 1)

High-pressure version: order code for "Measuring tube mat., wetted surface", option HB

2) 3) Depending on the process connection

Order code for "Sensor connection housing", option B "Stainless, hygienic"

DN	A 1)	В	С	D	Е	F	G	К	L	М
[in]	[in]	[in]	[in]	[in]						
1/24	5.39	3.07	2.32	2.13	7.52	9.65	5.28	0.04	2)	1.34
1/12	5.39	3.07	2.32	2.91	8.39	11.3	5.28	0.10	2)	1.89
1/8	5.39	3.07	2.32	3.54	8.98	12.52	5.28	0.15	2)	2.01

1) Depending on the cable gland used: values up to + 1.18 in

2) Depending on the process connection

Order code for "Sensor connection housing", option C "Ultra-compact hygienic, stainless"

DN	A 1)	В	С	D	E	F	G	K	L	M
[in]	[in]	[in]	[in]	[in]						
1/24	4.88	2.68	2.20	2.13	7.52	9.65	4.41	0.04	2)	1.34
1/12	4.88	2.68	2.20	2.91	8.39	11.3	4.41	0.10	2)	1.89
1/8	4.88	2.68	2.20	3.54	8.98	12.52	4.41	0.15	2)	2.01

Depending on the cable gland used: values up to + 1.18 in 1)

2) Depending on the process connection


## ${\it Order code for "Sensor connection housing", option L "Cast, stainless"}$

DN	A 1)	В	С	D	E	F	G	К	L	М
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
1/24	5.71	3.39	2.32	2.13	8.62	10.75	4.41	0.04	2)	1.34
1/12	5.71	3.39	2.32	2.91	9.49	12.4	4.41	0.10	2)	1.89
1/8	5.71	3.39	2.32	3.54	10.08	13.62	4.41	0.15	2)	2.01

- Depending on the cable gland used: values up to + 1.18 in Depending on the process connection  $\label{eq:process} % \begin{subarray}{l} \end{subarray} % \beg$ 1) 2)

## **Compression fittings**

## VCO coupling

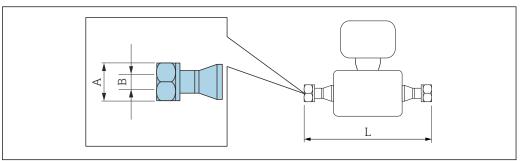


A0015624

Length tolerance for dimension L in inches: +0.06/-0.08

4-VCO-4 Order code for "Process connection", option HAW 1.4435 (316/316L): order code for "Measuring tube mat., wetted surface", option BB, BF, SA Alloy C22: order code for "Measuring tube mat., wetted surface", option HA, HC, HD Alloy C22, high pressure: order code for "Measuring tube mat., wetted surface", option HB									
DN [in]	A [in]	B L [in]							
		Option BB, BF, SA, HA, HC, HD							
1/24	AF <sup>11</sup> / <sub>16</sub>	0.04	7.32						
1/12	AF <sup>11</sup> / <sub>16</sub>	0.1	10.4						
1/8	AF <sup>11</sup> / <sub>16</sub>	0.15	0.13	12.2					

## G and NPT thread

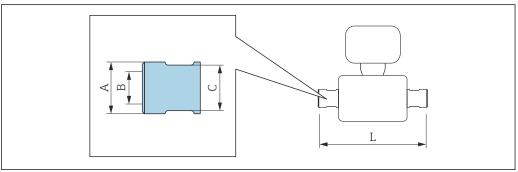

10036429

1.4404 (316L): Alloy C22: order	Order code for "Process connection", option G06 1.4404 (316L): order code for "Measuring tube mat., wetted surface", option SA Alloy C22: order code for "Measuring tube mat., wetted surface", option HA Alloy C22, high pressure: order code for "Measuring tube mat., wetted surface", option HB									
DN [in]	A [in	-	B [in]	C [in]	L [in]					
	Option HA, SA	Option HB								
1/24	0.89	0.98	G 1/4"	AF <sup>13</sup> / <sub>16</sub> "	10.12					
1/12	0.89	0.98	G 1/4"	AF <sup>13</sup> / <sub>16</sub> "	13.15					
1/8	0.89	0.98	G 1/4"	AF <sup>13</sup> / <sub>16</sub> "	14.96					

G ½ "

Order code for "Process connection", option G15

1.4404 (316L): order code for "Measuring tube mat., wetted surface", option SA

Alloy C22: order code for "Measuring tube mat., wetted surface", option HA

Alloy C22, high pressure: order code for "Measuring tube mat., wetted surface", option HB

DN [in]	A [in]		B [in]	C [in]		L [in]	
	Option HA, SA	Option HB		Option HA, Option HB SA		Option HA, SA	Option HB
1/24	0.89	0.98	G ½ "	AF 1 <sup>13</sup> / <sub>16</sub> "	AF 1 3/16 "	11.06	11.02
1/12	0.89	0.98	G ½ "	AF 1 <sup>13</sup> / <sub>16</sub> "	AF 1 3/16 "	14.09	14.06
1/8	0.89	0.98	G ½ "	AF 1 <sup>13</sup> / <sub>16</sub> "	AF 1 3/16 "	15.91	15.87

NPT 1/4 "

Order code for "Process connection", option P06

1.4404 (316L): order code for "Measuring tube mat., wetted surface", option SA Alloy C22: order code for "Measuring tube mat., wetted surface", option HA

Alloy C22, high pressure: order code for "Measuring tube mat., wetted surface", option HB

DN [in]	A [in]		B [in]	C [in]	L [in]
	Option HA, SA	Option HB			
1/24	0.89	0.98	NPT 1/4 "	AF <sup>3</sup> / <sub>4</sub> "	10.12
1/12	0.89	0.98	NPT 1/4 "	AF <sup>3</sup> / <sub>4</sub> "	13.15
1/8	0.89	0.98	NPT 1/4 "	AF <sup>3</sup> / <sub>4</sub> "	14.96

NPT ½ "

Order code for "Process connection", option P15

1.4404 (316L): order code for "Measuring tube mat., wetted surface", option SA


Alloy C22: order code for "Measuring tube mat., wetted surface", option HA

Alloy C22, high pressure: order code for "Measuring tube mat., wetted surface", option HB

DN [in]	A [in]		B [in]	C [in]		L [in]	
	Option HA, SA	Option HB		Option HA, Option HB SA		Option HA, SA	Option HB
1/24	0.89	0.98	NPT ½ "	AF 1 <sup>13</sup> / <sub>16</sub> "	AF 1 <sup>3</sup> / <sub>16</sub> "	11.06	11.02
1/12	0.89	0.98	NPT ½ "	AF 1 <sup>13</sup> / <sub>16</sub> "	AF 1 <sup>3</sup> / <sub>16</sub> "	14.09	14.06
1/8	0.89	0.98	NPT ½ "	AF 1 <sup>13</sup> / <sub>16</sub> "	AF 1 <sup>3</sup> / <sub>16</sub> "	15.91	15.87

## **Clamp connections**

## Tri-Clamp

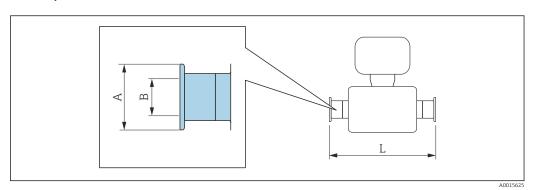

Length tolerance for dimension L in inches: +0.06/-0.08


½" Tri-Clamp Order code for "Process connection", option FBW 1.4435 (316L): order code for "Measuring tube mat., wetted surface", option BB, BF, SA Alloy C22: order code for "Measuring tube mat., wetted surface", option HA, HC, HD								
DN A B L [in] [in]								
1/24	0.98	0.37	7.56					
<sup>1</sup> / <sub>12</sub> 0.98 0.37 10.6								
1/8	0.98	0.37	12.4					

3-A version available (Ra  $\leq 0.76~\mu m/30~\mu in,$  Ra  $\leq 0.38~\mu m/15~\mu in):$ 

Order code for "Measuring tube mat., wetted surface", option BB, BF, HC, HD in conjunction with order code for "Additional approval", option LP  $^{\circ}$ 

## Flange connections

Fixed flange ASME B16.5

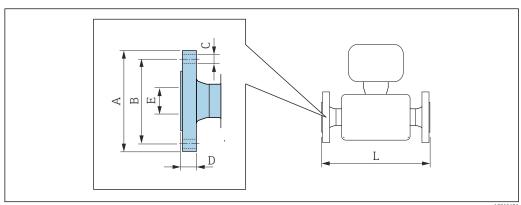

A001562

Length tolerance for dimension L in inches: +0.06/-0.08

Flange similar to ASME B16.5, Class 150 RF, Schedule 40 1.4404 (F316/F316L): order code for "Process connection", option AAS Alloy C22: order code for "Process connection", option AAC											
DN         A         B         C         D         E         L           [in]         [in]         [in]         [in]         [in]											
1/24	3.54	2.37	4 × Ø0.63	0.46	0.62	10.31					
1/12	3.54	2.37	4 × Ø0.63	0.46	0.62	13.35					
1/8	1/8 3.54 2.37 4 × Ø0.63 0.46 0.62 15.16										
Surface rough	hness (flange):	Ra 3.2 to 6.3 μ	m								

Flange similar to ASME B16.5, Class 300 RF, Schedule 40 1.4404 (F316/F316L): order code for "Process connection", option ABS Alloy C22: order code for "Process connection", option ABC							
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]	
1/24	3.74	2.63	4 × Ø0.63	0.58	0.62	10.31	
1/12	3.74	2.63	4 × Ø0.63	0.58	0.62	13.35	
1/8	3.74	2.63	4 × Ø0.63	0.58	0.62	15.16	
Surface rough	Surface roughness (flange): Ra 3.2 to 6.3 μm						

Flange similar to ASME B16.5, Class 600 RF, Schedule 80 1.4404 (F316/F316L): order code for "Process connection", option ACS Alloy C22: order code for "Process connection", option ACC						
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]
1/24	3.74	2.63	4 × Ø0.63	0.84	0.55	11.5
1/12	3.74	2.63	4 × Ø0.63	0.84	0.55	14.53
¹⁄ <sub>8</sub> 3.74 2.63 4 × Ø0.63 0.84 0.55 16.34						
Surface roug	hness (flange):	Ra 3.2 to 6.3 µ	m			

Flange similar to ASME B16.5, Class 900/1500 RF, Schedule 80 1.4404 (F316/F316L): order code for "Process connection", option ARS

Alloy C22: order code for "Process connection", option ARC

Flange similar to ASME B16.5, Class 900/1500 RTJ, Schedule 80 1.4404 (F316/F316L): order code for "Process connection", option ASS Alloy C22: order code for "Process connection", option ASC

DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]
1/24	4.72	3.25	4 × Ø0.87	1.15	0.55	12.76
1/12	4.72	3.25	4 × Ø0.87	1.15	0.55	15.79
1/8	4.72	3.25	4 × Ø0.87	1.15	0.55	17.6

Surface roughness (flange): Ra 3.2 to 6.3 µm

Flange similar to ASME B16.5, Class 2500 RF, Schedule 80

1.4404 (F316/F316L): order code for "Process connection", option ATS

Alloy C22: order code for "Process connection", option ATC

Flange similar to ASME B16.5, Class 2500 RTJ, Schedule 80


1.4404 (F316/F316L): order code for "Process connection", option AUS

Alloy C22: order code for "Process connection", option AUC

DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]
1/24	5.31	3.5	4 × Ø0.87	1.46	0.55	13.82
1/12	5.31	3.5	4 × Ø0.87	1.46	0.55	16.85
1/8	5.31	3.5	4 × Ø0.87	1.46	0.55	18.66

Surface roughness (flange): Ra 3.2 to 6.3  $\mu m$ 

## Lap joint flange ASME B16.5

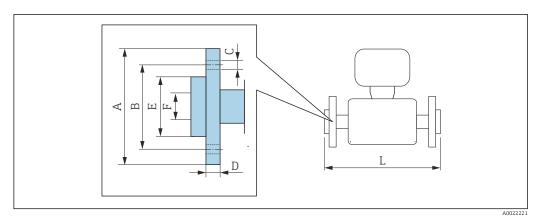

Length tolerance for dimension L in mm: +1.5 / -2.0

	Lap joint flange similar to ASME B16.5: Class 150, Schedule 40 1.4301 (F304), wetted parts Alloy C22: order code for "Process connection", option ADC						
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	F [in]	L [in]
1/24	3.54	2.37	4 × Ø0.63	0.59	1.65	0.62	10.31
1/12	3.54	2.37	4 × Ø0.63	0.59	1.65	0.62	13.35
1/8	3.54	2.37	4 × Ø0.63	0.59	1.65	0.62	15.16
Surface roug	Surface roughness (flange): Ra 3.2 to 12.5 µm						


Lap joint flange similar to ASME B16.5: Class 300, Schedule 40 1.4301 (F304), wetted parts Alloy C22: order code for "Process connection", option AEC								
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	F [in]	L [in]	L <sub>diff</sub> 1) [in]
1/24	3.74	2.63	4 × Ø0.63	0.65	1.77	0.62	10.55	0.24
1/12	3.74	2.63	4 × Ø0.63	0.65	1.77	0.62	13.58	0.24
1/8	3.74	2.63	4 × Ø0.63	0.65	1.77	0.62	15.39	0.24
Surface rou	ighness (fla	nge): Ra 3.2	to 12.5 µm		•			

1) Difference to installed length of the welding neck flange (order code for "Process connection", option AAC)

Lap joint flange similar to ASME B16.5: Class 600, Schedule 80 1.4301 (F304), wetted parts Alloy C22: order code for "Process connection", option AFC							
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	F [in]	L [in]
1/24	3.74	2.63	4 × Ø15.9	0.67	1.89	0.55	11.5
1/12	3.74	2.63	4 × Ø15.9	0.67	1.89	0.55	14.53
1/8	3.74	2.63	4 × Ø15.9	0.67	1.89	0.55	16.34
Surface roug	Surface roughness (flange): Ra 3.2 to 12.5 µm						

## Accessories


Drain connection for rupture disk

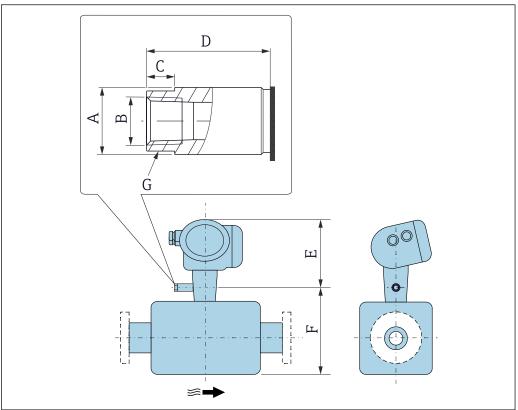

A004325

DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	F [in]	G [in]
1/24	Ø0.75	NPT 1/4 "	0.31	1.38	8.27	4.84	AF <sup>2</sup> / <sub>3</sub> "
1/12	Ø0.75	NPT 1/4 "	0.31	1.38	8.27	6.50	AF <sup>2</sup> / <sub>3</sub> "
1/8	Ø0.75	NPT <sup>1</sup> / <sub>4</sub> "	0.31	1.38	8.27	7.72	AF <sup>2</sup> / <sub>3</sub> "

## Sensor holder

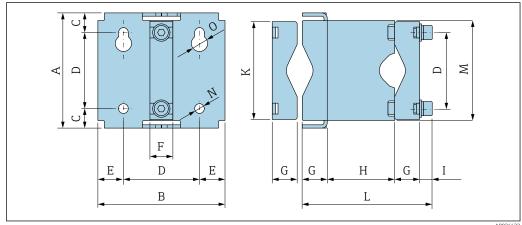


AUU3663


A	B	C	D	E	F	G
[in]						
4.17	4.61	0.71	2.76	0.93	0.83	

H	I	K	L	M	N	0
[in]						
2.44	0.47	3.54	4.72	3.62	0.35	

## Weather protection cover

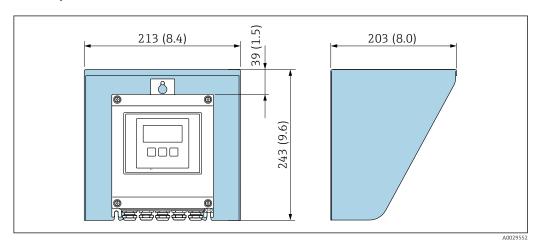

■ 48 Weather protection cover for Proline 500 – digital; engineering unit mm (in)

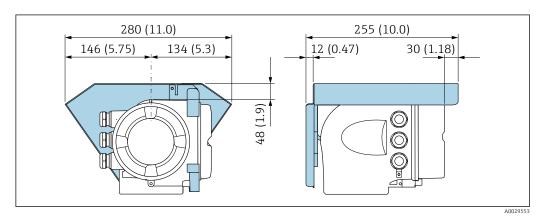


 $\blacksquare$  49 Weather protection cover for Proline 500; engineering unit mm (in)

## External WLAN antenna

The external WLAN antenna is not suitable for use in hygienic applications.

## Proline 500 – digital


## External WLAN antenna mounted on device

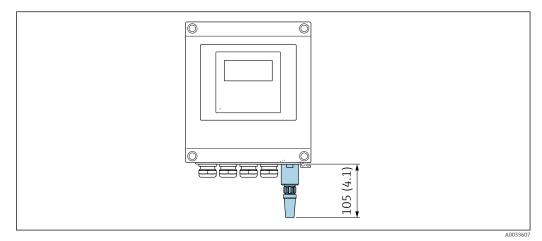

■ 50 Engineering unit mm (in)

## External WLAN antenna mounted with cable


The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

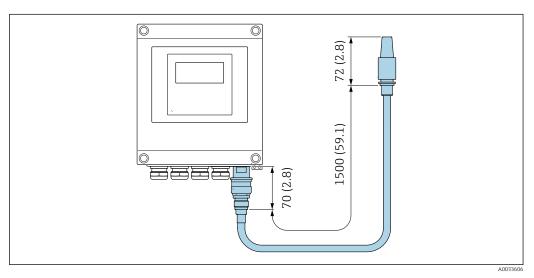

■ 51 Engineering unit mm (in)

### Proline 500


External WLAN antenna mounted on device

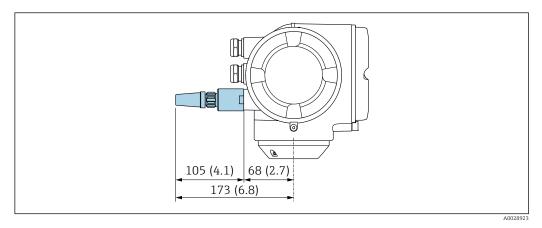

■ 52 Engineering unit mm (in)

### External WLAN antenna mounted with cable

The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

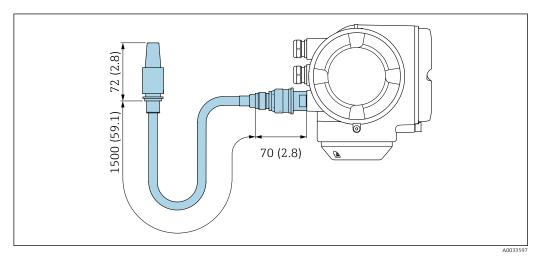

🖪 53 Engineering unit mm (in)

## Weight

All values (weight exclusive of packaging material) refer to devices with VCO couplings.

## Transmitter

- Proline 500 digital polycarbonate: 1.4 kg (3.1 lbs)
- Proline 500 digital aluminum: 2.4 kg (5.3 lbs)
- Proline 500 aluminum: 6.5 kg (14.3 lbs)
- Proline 500 cast, stainless: 15.6 kg (34.4 lbs)

#### Sensor

Sensor with aluminum connection housing version:

## Weight in SI units

DN [mm]	Weight [kg]
1	2.75
2	4.3
4	6.15

## Weight in US units

DN [in]	Weight [lbs]
1/24	6
1/12	9
1/8	14

#### Materials

## Transmitter housing

Housing of Proline 500 – digital transmitter

Order code for "Transmitter housing":

- Option A "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **D** "Polycarbonate": polycarbonate

Housing of Proline 500 transmitter

Order code for "Transmitter housing":

- Option A "Aluminum coated": aluminum, AlSi10Mq, coated
- Option L "Cast, stainless": cast, stainless steel, 1.4409 (CF3M) similar to 316L

Window material

Order code for "Transmitter housing":

- Option A "Aluminum, coated": glass
- Option **D** "Polycarbonate": plastic
- Option L "Cast, stainless": glass

Fastening components for mounting on a post

- Screws, threaded bolts, washers, nuts: stainless A2 (chrome-nickel steel)
- Metal plates: stainless steel, 1.4301 (304)

## Sensor connection housing


Order code for "Sensor connection housing":

- Option **A** "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **B** "Stainless":

Stainless steel 1.4301 (304)

- $\blacksquare$  Option  $\boldsymbol{C}$  "Ultra-compact, stainless":
  - Stainless steel 1.4301 (304)
- $\bullet$  Option L "Cast, stainless": 1.4409 (CF3M) similar to 316L

## Cable entries/cable glands

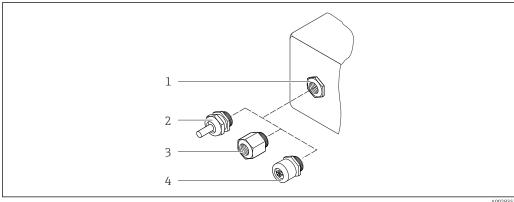

A002835

**■** 54 *Possible cable entries/cable glands* 

- 1 Female thread  $M20 \times 1.5$
- 2 Cable gland  $M20 \times 1.5$
- 3 Adapter for cable entry with female thread G  $\frac{1}{2}$ " or NPT  $\frac{1}{2}$ "
- 4 Device plug

Cable entries and adapters	Material
Cable gland M20 × 1.5	Plastic
<ul> <li>Adapter for cable entry with female thread G ½"</li> <li>Adapter for cable entry with female thread NPT ½"</li> </ul>	Nickel-plated brass
Only available for certain device versions:  Order code for "Transmitter housing":  Option A "Aluminum, coated"  Option D "Polycarbonate"  Order code for "Sensor connection housing":  Proline 500 – digital: Option A "Aluminum coated" Option B "Stainless"  Proline 500: Option B "Stainless"	
Adapter for device plug	Stainless steel, 1.4404 (316L)
<ul> <li>Device plug for digital communication:         Only available for certain device versions →          34.</li> <li>Device plug for connecting cable:         A device plug is always used for the device version, order code for "Sensor connection housing", option C (ultracompact, hygienic, stainless).</li> </ul>	

## Device plug

Electrical connection	Material
Plug M12x1	<ul> <li>Socket: Stainless steel, 1.4404 (316L)</li> <li>Contact housing: Polyamide</li> <li>Contacts: Gold-plated brass</li> </ul>

## **Connecting cables**



UV rays can impair the cable outer sheath. Protect the cable from exposure to sun as much as possible.

Connecting cable for sensor - Proline 500 - digital transmitter

PVC cable with copper shield

Connecting cable for sensor - Proline 500 transmitter

PVC cable with copper shield

## Sensor housing

- Acid and alkali-resistant outer surface
- Stainless steel, 1.4404 (316L)

## Measuring tubes

Order code for "Measuring tube mat., wetted surface", option BB, BF, SA

Stainless steel, 1.4435 (316/316L)

Order code for "Measuring tube mat., wetted surface", option HA, HB, HC, HD

Alloy C22, 2.4602 (UNS N06022)

### **Process connections**

Order code for "Measuring tube mat., wetted surface", option SA

VCO coupling	Stainless steel, 1.4404 (316/316L)
G¼", G½" female thread	Stainless steel, 1.4404 (316/316L)
NPT¼", NPT½" female thread	Stainless steel, 1.4404 (316/316L)

Tri-Clamp½"	Stainless steel, 1.4435 (316L)
Fixed flange EN 1092-1, ASME B16.5, JIS B2220	Stainless steel, 1.4404 (316/316L)

Order code for "Measuring tube mat., wetted surface", option BB, BF  $\,$ 

VCO coupling	Stainless steel, 1.4404 (316/316L)	
Tri-Clamp½"	Stainless steel, 1.4435 (316L)	

Order code for "Measuring tube mat., wetted surface", option HC, HD

VCO coupling	Alloy C22, 2.4602 (UNS N06022)
Tri-Clamp½"	Alloy C22, 2.4602 (UNS N06022)

Order code for "Measuring tube mat., wetted surface", option HA

VCO coupling	Alloy C22, 2.4602 (UNS N06022)
G¼", G½" female thread	Alloy C22, 2.4602 (UNS N06022)
NPT¼", NPT½" female thread	Alloy C22, 2.4602 (UNS N06022)
Fixed flange EN 1092-1, ASME B16.5, JIS B2220	Alloy C22, 2.4602 (UNS N06022)
Lap joint flange EN 1092-1, ASME B16.5, JIS B2220	Stainless steel, 1.4301 (F304), wetted parts Alloy C22, 2.4602 (UNS N06022)

Order code for "Measuring tube mat., wetted surface", option HB (high-pressure option)

VCO coupling	Alloy C22, 2.4602 (UNS N06022)
G¼", G½" female thread	Alloy C22, 2.4602 (UNS N06022)
NPT½", NPT½" female thread	Alloy C22, 2.4602 (UNS N06022)
Fixed flange EN 1092-1, ASME B16.5, JIS B2220	Stainless steel, 1.4404 (316/316L); Alloy C22, 2.4602 (UNS N06022)



Available process connections  $\rightarrow$   $\implies$  107

### Seals

Welded process connections without internal seals

## Accessories

Sensor holder

Stainless steel, 1.4404 (316L)

## Heating jacket

- Heating jacket housing: stainless steel, 1.4571 (316Ti)
- NPT adapter ½": stainless steel, 1.4404 (316)
- $\bullet$  G½" adapter: stainless steel, 1.4404

Protective cover

Stainless steel, 1.4404 (316L)

#### External WLAN antenna

- Antenna: ASA plastic (acrylonitrile styrene acrylate) and nickel-plated brass
- Adapter: Stainless steel and nickel-plated brass
- Cable: Polyethylene
- Plug: Nickel-plated brass
- Angle bracket: Stainless steel

### **Process connections**

- Fixed flange connections:
  - EN 1092-1 (DIN 2501) flange
  - EN 1092-1 (DIN 2512N) flange
  - ASME B16.5 flange
  - JIS B2220 flange
- Clamp connections:

Tri-Clamp (OD tubes), DIN 11866 series C

- VCO connections:
  - 4-VCO-4
- Internal thread:
  - Cylindrical internal thread BSPP (G) in accordance with ISO 228-1
  - NPT



Process connection materials  $\rightarrow \implies 105$ 

## Surface roughness

All data refer to parts in contact with the medium.

The following surface roughness categories can be ordered:

Category	Method	Option(s) order code "Measuring tube mat., wetted surface"
Not polished	_	HA, HB, SA
Ra $\leq$ 0.76 µm (30 µin) 1)	Mechanically polished <sup>2)</sup>	BB, HC
Ra $\leq$ 0.38 µm (15 µin) 1)	Mechanically polished <sup>2)</sup>	BF, HD

- 1) Ra according to ISO 21920
- 2) Except for inaccessible welds between pipe and manifold

# Display and user interface

### Operation concept

### Operator-oriented menu structure for user-specific tasks

- Commissioning
- Operation
- Diagnosis
- Expert level

## Quick and safe commissioning

- Guided menus ("Make-it-run" wizards) for applications
- Menu guidance with brief descriptions of the individual parameter functions
- Access to the device via web server
- WLAN access to the device via mobile handheld terminal, tablet or smart phone

### Reliable operation

- Operation in local language
- Uniform operating philosophy applied to device and operating tools
- If replacing electronic modules, transfer the device configuration via the integrated memory (HistoROM backup) which contains the process and measuring device data and the event logbook. No need to reconfigure.

### Efficient diagnostics increase measurement reliability

- Troubleshooting measures can be called up via the device and in the operating tools
- Diverse simulation options, logbook for events that occur and optional line recorder functions

### Languages

Can be operated in the following languages:

- Via local operation
   English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese,
   Japanese, Korean, Vietnamese, Czech, Swedish
- Via web browser
   English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese,
   Japanese, Vietnamese, Czech, Swedish
- Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese

### Onsite operation


## Via display module

#### Features:

- Order code for "Display; operation", option F "4-line, illuminated, graphic display; touch control"
- Order code for "Display; operation", option G "4-line, illuminated, graphic display; touch control + WLAN"



Information about WLAN interface → 🗎 115

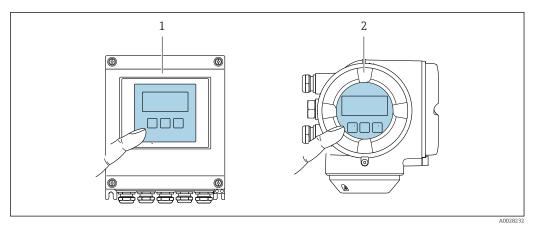

■ 55 Operation with touch control

- 1 Proline 500 digital
- 2 Proline 500

### Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured

## Operating elements


- External operation via touch control (3 optical keys) without opening the housing: 🕀, 🖃, 🗉
- Operating elements also accessible in the various zones of the hazardous area

#### Remote operation

### Via HART protocol


This communication interface is available in device versions with a HART output.

108

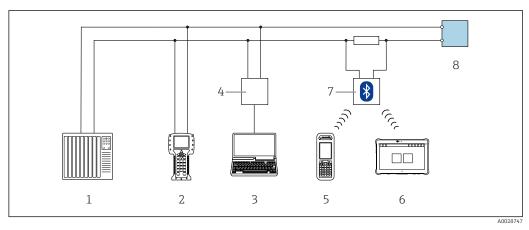

■ 56 Options for remote operation via HART protocol (active)

- 1 Control system (e.g. PLC)
- 2 Field Communicator 475
- 3 Computer with web browser (e.g. Microsoft Edge) to access the integrated device web server or computer with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 4 Commubox FXA195 (USB)
- 5 Field Xpert SFX350 or SFX370
- 6 Field Xpert SMT70
- 7 VIATOR Bluetooth modem with connecting cable
- 8 Transmitter

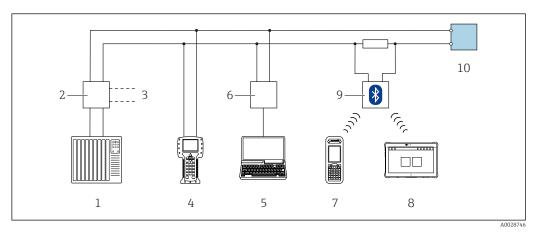


■ 57 Options for remote operation via HART protocol (passive)

- 1 Control system (e.g. PLC)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA195 and Field Communicator 475
- 4 Field Communicator 475
- 5 Computer with web browser (e.g. Microsoft Edge) to access the integrated device web server or computer with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 6 Commubox FXA195 (USB)
- 7 Field Xpert SFX350 or SFX370
- 8 Field Xpert SMT70
- 9 VIATOR Bluetooth modem with connecting cable
- 10 Transmitter

### Via FOUNDATION Fieldbus network

This communication interface is available in device versions with FOUNDATION Fieldbus.

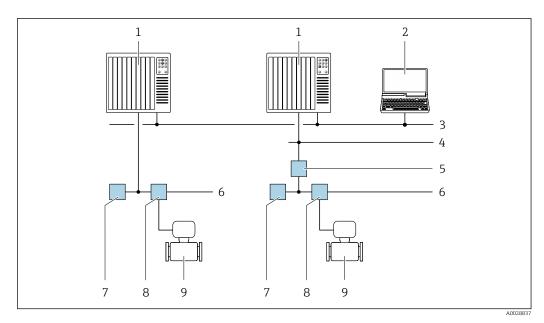


 $\blacksquare$  58 Options for remote operation via FOUNDATION Fieldbus network

- 1 Automation system
- 2 Computer with FOUNDATION Fieldbus network card
- 3 Industry network
- 4 High Speed Ethernet FF-HSE network
- 5 Segment coupler FF-HSE/FF-H1
- 6 FOUNDATION Fieldbus FF-H1 network
- 7 Power supply FF-H1 network
- 8 T-box
- 9 Measuring device

### Via PROFIBUS DP network

This communication interface is available in device versions with PROFIBUS DP.

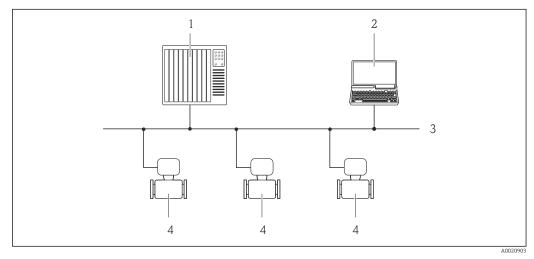


 $\blacksquare$  59 Options for remote operation via PROFIBUS DP network

- 1 Automation system
- 2 Computer with PROFIBUS network card
- 3 PROFIBUS DP network
- 4 Measuring device

# Via PROFIBUS PA network

This communication interface is available in device versions with PROFIBUS PA.

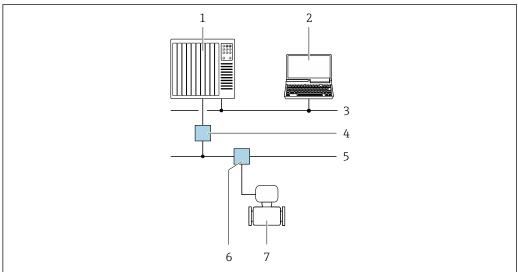


**№** 60 Options for remote operation via PROFIBUS PA network

- Automation system
- Computer with PROFIBUS network card 2
- PROFIBUS DP network
- 4 Segment coupler PROFIBUS DP/PA
- PROFIBUS PA network
- 6 T-box
- Measuring device

### Via Modbus RS485 protocol

This communication interface is available in device versions with a Modbus RS485 output.

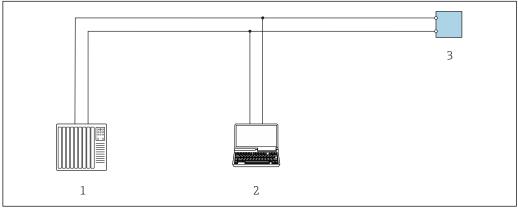


**₽** 61 Options for remote operation via Modbus RS485 protocol (active)

- Control system (e.g. PLC)
- Computer with web browser (e.g. Microsoft Edge) to access the integrated device web server or with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- Transmitter

# Via EtherNet/IP network

This communication interface is available in device versions with EtherNet/IP.

### Star topology

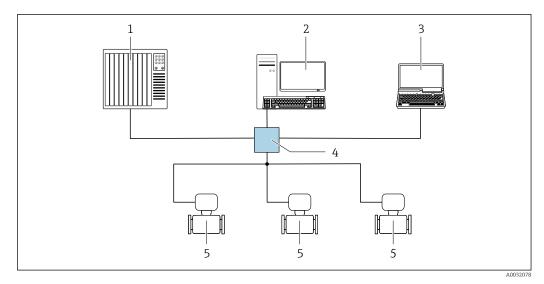


**№** 62 Options for remote operation via EtherNet/IP network: star topology

- Automation system, e.g. "RSLogix" (Rockwell Automation)
- Workstation for measuring device operation: with Custom Add-On Profile for "RSLogix 5000" (Rockwell 2 Automation) or with Electronic Data Sheet (EDS)
- Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer 3 with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP"
- Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- Measuring device

### Ring topology

The device is integrated via the terminal connection for signal transmission (output 1) and the service interface (CDI-RJ45).

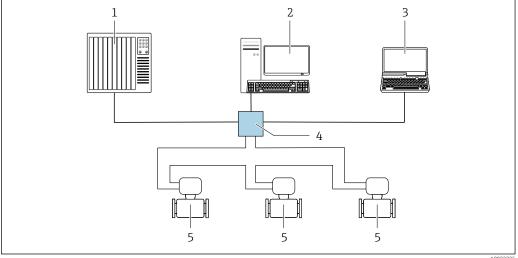


**№** 63 Options for remote operation via EtherNet/IP network: ring topology

- Automation system, e.g. "RSLogix" (Rockwell Automation)
- Workstation for measuring device operation: with Custom Add-On Profile for "RSLogix 5000" (Rockwell 2 Automation) or with Electronic Data Sheet (EDS)
- Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer 3 with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP"
- Standard Ethernet switch, e.g. Scalance X204 (Siemens) 4
- Measuring device

### Via PROFINET network

This communication interface is available in device versions with PROFINET.

### Star topology

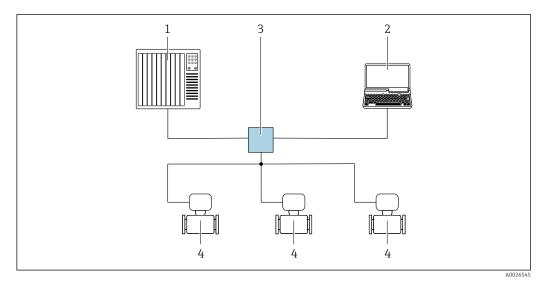


■ 64 Options for remote operation via PROFINET network: star topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

### Ring topology


The device is integrated via the terminal connection for signal transmission (output 1) and the service interface (CDI-RJ45).

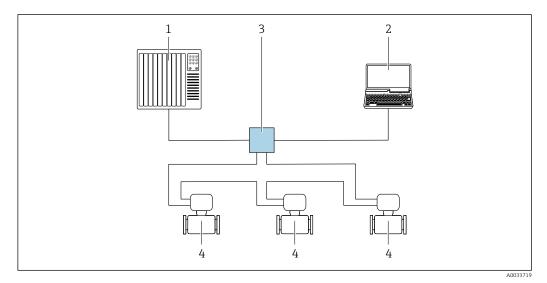

■ 65 Options for remote operation via PROFINET network: ring topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

### Via APL network

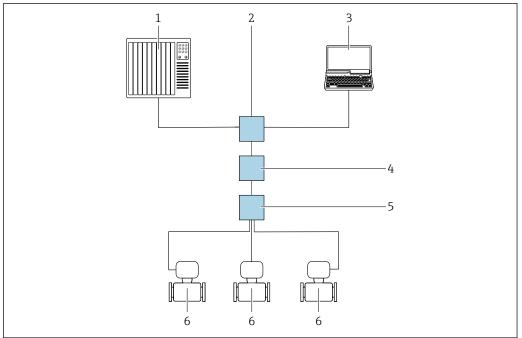

A0046117

■ 66 Options for remote operation via APL network

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Ethernet switch, e.g. Scalance X204 (Siemens)
- 3 Computer with Web browser (e.g. Internet Explorer) for access to integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare with PROFINET COM DTM or SIMATIC PDM with FDI-Package)
- 4 APL power switch (optional)
- 5 APL field switch
- 6 Measuring device

# Service interface

### Via service interface (CDI-RJ45)


A point-to-point connection can be established to configure the device onsite. With the housing open, the connection is established directly via the service interface (CDI-RJ45) of the device.



An adapter for the RJ45 to the M12 plug is optionally available for the non-hazardous area: Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. The connection to the service interface can be established via an M12 plug without opening the device.


### *Proline* 500 – digital transmitter

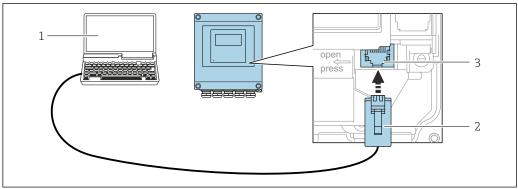

Connection via service interface (CDI-RJ45)

- Computer with web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integratedweb server or with "FieldCare" operating tool, "DeviceCare" with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- Standard Ethernet connecting cable with RJ45 plug
- Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

### Proline 500 transmitter

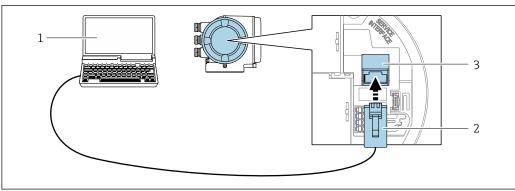


€ 68 Connection via service interface (CDI-RJ45)

- Computer with web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated web server or with "FieldCare" operating tool, "DeviceCare" with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- Standard Ethernet connecting cable with RJ45 plug
- Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

### Via WLAN interface

The optional WLAN interface is available on the following device version: Order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN"

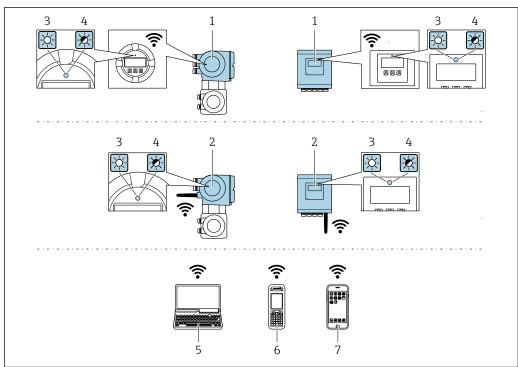

A003456

- 1 Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- 4 LED flashing: WLAN connection established between operating unit and measuring device
- 5 Computer with WLAN interface and web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device web server or with operating tool (e.g. FieldCare, DeviceCare)
- Mobile handheld terminal with WLAN interface and web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device web server or operating tool (e.g. FieldCare, DeviceCare)
- 7 Smart phone or tablet (e.g. Field Xpert SMT70)

Function	WLAN: IEEE 802.11 b/g (2.4 GHz)  • Access Point with DHCP server (factory setting)  • Network
Encryption	WPA2-PSK AES-128 (in accordance with IEEE 802.11i)
Configurable WLAN channels	1 to 11
Degree of protection	IP67
Available antennas	<ul> <li>Internal antenna</li> <li>External antenna (optional)         In the event of poor transmission/reception conditions at the place of installation.         Available as an accessory .     </li> <li>Only 1 antenna is active at any one time!</li> </ul>
Range	<ul> <li>Internal antenna: typically 10 m (32 ft)</li> <li>External antenna: typically 50 m (164 ft)</li> </ul>
Materials (external antenna)	<ul> <li>Antenna: ASA plastic (acrylonitrile styrene acrylate) and nickel-plated brass</li> <li>Adapter: Stainless steel and nickel-plated brass</li> <li>Cable: Polyethylene</li> <li>Plug: Nickel-plated brass</li> <li>Angle bracket: Stainless steel</li> </ul>

**Network integration** 


•

Network integration is only available for the HART communication protocol.

With the optional "OPC-UA Server" application package, the device can be integrated into an Ethernet network via the service interface (CDI-RJ45 and WLAN) and communicate with OPC-UA clients. If the device is used in this way, IT security must be considered.

Transmitters with an Ex de approval may **not** be connected via the service interface (CDI-RJ45)! Order code for "Approval transmitter + sensor", options (Ex de):
BB, C2, GB, MB, NB

For permanent access to device data and for device configuration via the Web server, the device is incorporated directly in a network via the service interface (CDI-RJ45). In this way, the device can be accessed any time from the control station. The measured values are processed separately via the inputs and outputs through the automation system.

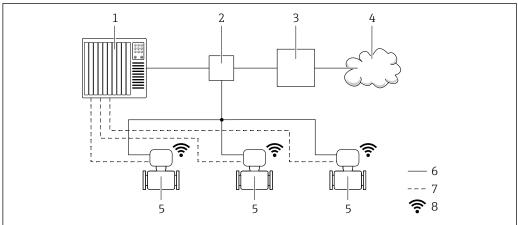

Δ0033618

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Ethernet switch
- 3 Edge Gateway
- 4 Cloud
- 5 Measuring device
- 6 Ethernet network
- 7 Measured values via inputs and outputs
- 8 Optional WLAN interface
- The optional WLAN interface is available on the following device version:

  Order code for "Display; operation", option **G** "4-line, backlit, graphic display; touch control + WLAN"

### Supported operating tools

Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with Web browser	<ul> <li>CDI-RJ45 service interface</li> <li>WLAN interface</li> <li>Ethernet-based fieldbus (EtherNet/IP, PROFINET)</li> </ul>	Special Documentation for device → 🖺 132
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→ 🖺 130
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→ 🖺 130

Supported operating tools	Operating unit	Interface	Additional information
Field Xpert	SMT70/77/50	<ul> <li>All fieldbus protocols</li> <li>WLAN interface</li> <li>Bluetooth</li> <li>CDI-RJ45 service interface</li> </ul>	Operating Instructions BA01202S Device description files: Use update function of handheld terminal
SmartBlue app	Smartphone or tablet with iOs or Android	WLAN	→ 🖺 130

- Other operating tools based on FDT technology with a device driver such as DTM/iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:
  - FactoryTalk AssetCentre (FTAC) from Rockwell Automation → www.rockwellautomation.com
  - Process Device Manager (PDM) from Siemens → www.siemens.com
  - Asset Management Solutions (AMS) from Emerson → www.emersonprocess.com
  - FieldCommunicator 375/475 from Emerson → www.emersonprocess.com
  - Field Device Manager (FDM) from Honeywell → www.process.honeywell.com
  - FieldMate from Yokogawa → www.yokogawa.com
  - PACTWare → www.pactware.com

The related device description files are available: www.endress.com → Download Area

### Web server

With the integrated web server, the device can be operated and configured via a web browser using Ethernet-APL, and via the service interface (CDI-RJ45) or WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is displayed and can be used to monitor device health. Furthermore the device data can be managed and the network parameters can be configured.

Access to the network is required for the Ethernet-APL connection.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

### Supported functions

Data exchange between the operating unit (such as a notebook, for example,) and measuring instrument:

- Upload the configuration from the measuring instrument (XML format, configuration backup)
- Save the configuration to the measuring instrument (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file or PDF file, document the measuring point configuration)
- $\ \blacksquare$  Flash firmware version for device firmware upgrade, for example
- Download driver for system integration

### HistoROM data management

The measuring device features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.

When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

### Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	HistoROM backup	T-DAT	S-DAT
Available data	<ul> <li>Event logbook, e.g. diagnostic events</li> <li>Parameter data record backup</li> <li>Device firmware package</li> <li>Driver for system integration for exporting via web server, e.g.:</li> <li>GSD for PROFIBUS DP</li> <li>GSD for PROFIBUS PA</li> <li>GSDML for PROFINET</li> <li>EDS for EtherNet/IP</li> <li>DD for FOUNDATION Fieldbus</li> </ul>	Measured value logging ("Extended HistoROM" order option)     Current parameter data record (used by firmware at run time)     Indicator (minimum/maximum values)     Totalizer value	<ul> <li>Sensor data: e.g. nominal diameter</li> <li>Serial number</li> <li>Calibration data</li> <li>Device configuration (e.g. SW options, fixed I/O or multi I/O)</li> </ul>
Storage location	Fixed on the user interface PC board in the connection compartment	Can be plugged into the user interface PC board in the connection compartment	In the sensor plug in the transmitter neck part

### Data backup

### **Automatic**

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors
- If exchanging the electronics module (e.g. I/O electronics module): Once the electronics module has been replaced, the software of the module is compared against the current device firmware. The module software is upgraded or downgraded where necessary. The electronics module is available for use immediately afterwards and no compatibility problems occur.

### Manual

Additional parameter data record (complete parameter settings) in the integrated device memory HistoROM backup for:

- Data backup function
   Backup and subsequent restoration of a device configuration in the device memory HistoROM backup
- Data comparison function
   Comparison of the current device configuration with the device configuration saved in the device memory HistoROM backup

### Data transmission

### Manual

- Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)
- Transmission of the drivers for system integration via Web server, e.g.:
  - GSD for PROFIBUS DP
  - GSD for PROFIBUS PA
  - GSDML for PROFINET
  - EDS for EtherNet/IP
  - DD for FOUNDATION Fieldbus

### Event list

### Automatic

- Chronological display of up to 20 event messages in the events list
- If the Extended HistoROM application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

# Data logging

### Manual

If the **Extended HistoROM** application package (order option) is enabled:

- Recording of 1 to 4 channels of up to 1000 measured values (up to 250 measured values per channel)
- User configurable recording interval
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or web server

# Certificates and approvals

Current certificates and approvals for the product are available at <a href="www.endress.com">www.endress.com</a> on the relevant product page:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select **Downloads**.

### **CE** mark

The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

### **UKCA** marking

The device meets the legal requirements of the applicable UK regulations (Statutory Instruments). These are listed in the UKCA Declaration of Conformity along with the designated standards. By selecting the order option for UKCA marking, Endress+Hauser confirms a successful evaluation and testing of the device by affixing the UKCA mark.

Contact address Endress+Hauser UK:

Endress+Hauser Ltd.

Floats Road

Manchester M23 9NF

United Kingdom

www.uk.endress.com

## RCM marking

The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

### Ex approval

The measuring device is certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.



The separate Ex documentation (XA) containing all the relevant explosion protection data is available from your Endress+Hauser sales center.

## Proline 500 - digital

### ATEX/IECEx

Currently, the following versions for use in hazardous areas are available:

### Ex ia

Transmitter		Sensor	
Category	regory Type of protection		Type of protection
II(1)G	[Ex ia] IIC	II1/2G	Ex ia IIC T6T1 Ga/Gb 1)
II(1)G	[Ex ia] IIC	II2G	Ex ia IIC T6T1 Gb
II3(1)G	Ex ec [ia Ga] IIC T5T4 Gc	II1/2G	Ex ia IIC T6T1 Ga/Gb 1)
II3(1)G	Ex ec [ia Ga] IIC T5T4 Gc	II2G	Ex ia IIC T6T1 Gb

1) The following applies for sensors with nominal diameter DN 01: Ex ia IIC T6...T1 Gb

### Ex tb

Transmitter			Sensor
Category	Type of protection	Category	Type of protection
II(1)D	[Ex ia] IIIC	II2D	Ex ia tb IIIC T** °C Db

# Non-Ex / Ex ec

Transmitter		Sensor	
Category	Type of protection	Category	Type of protection
Non - Ex	Non-Ex	II3G	Ex ec IIC T5T1 Gc
II3G	Ex ec IIC T5T4 Gc	II3G	Ex ec IIC T5T1 Gc

# $_{C}CSA_{US} \\$

Currently, the following versions for use in hazardous areas are available:

# IS (Ex nA, Ex i)

Transmitter	Sensor
Class I Division 2 Groups A - D	Class I, II, III Division 1 Groups A-G

# NI (Ex nA)

Transmitter	Sensor
Class I Division 2 Groups	A - D

### Ex nA / Ex i

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA [ia Ga] IIC T5T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Ga/Gb <sup>1)</sup>
Class I, Zone 2 AEx/ Ex nA [ia Ga] IIC T5T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb

1) The following applies for sensors with nominal diameter DN 01: Class I, Zone 1 AEx/ Ex ia IIC T6...T1 Gb

# Ex nA

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA IIC T5T4 Gc	Class I, Zone 2 AEx/ Ex nA IIC T5T1 Gc

### Ex tb

Transmitter	Sensor
[AEx / Ex ia ] IIIC	Zone 21 AEx/ Ex ia tb IIIC T** °C Db

# Proline 500

# ATEX/IECEx

Currently, the following versions for use in hazardous areas are available:

### Ex db eb

Transmitter		Sensor	
Category	Type of protection Category Type of protection		Type of protection
II2G	Ex db eb ia IIC T6T4 Gb	II1/2G <sup>1)</sup>	Ex ia IIC T6T1 Ga/Gb <sup>2)</sup>
II2G	Ex db eb ia IIC T6T4 Gb	II2G	Ex ia IIC T6T1 Gb

- 1) The following applies for sensors with nominal diameter DN 01: II2G
- 2) The following applies for sensors with nominal diameter DN 01: Ex ia IIC T6...T1 Gb

### Ex db

Transmitter		Sensor	
Category	y Type of protection Category Type of pr		Type of protection
II2G	Ex db ia IIC T6T4 Gb	II1/2G <sup>1)</sup>	Ex ia IIC T6T1 Ga/Gb <sup>2)</sup>
II2G	Ex db ia IIC T6T4 Gb	II2G	Ex ia IIC T6T1 Gb

- 1) The following applies for sensors with nominal diameter DN 01: II2G
- 2) The following applies for sensors with nominal diameter DN 01: Ex ia IIC T6...T1 Gb

# Ex tb

Category	Type of protection		
	Transmitter Sensor		
II2D	Ex tb IIIC T85°C Db	Ex ia tb IIIC T** °C Db	

### Ех ес

Category	Type of protection		
	Transmitter Sensor		
II3G	Ex ec IIC T5T4 Gc	Ex ec IIC T5T1 Gc	

# $_{C}CSA_{US}$

Currently, the following versions for use in hazardous areas are available:

# IS (Ex i) and XP (Ex d)

Transmitter	Sensor
Class I, II, III Division 1 G	coups A-G

# NI (Ex nA)

Transmitter	Sensor
Class I Division 2 Groups	ABCD

### Ex de

Transmitter	Sensor
Class I, Zone 1 AEx/ Ex de ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Ga/Gb <sup>1)</sup>
Class I, Zone 1 AEx/ Ex de ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb

1) The following applies for sensors with nominal diameter DN 01: Class I, Zone 1 AEx/ Ex ia IIC T6...T1 Gb

### Ex d

Transmitter	Sensor
Class I, Zone 1 AEx/ Ex d ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Ga/Gb <sup>1)</sup>
Class I, Zone 1 AEx/ Ex d ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb

1) The following applies for sensors with nominal diameter DN 01: Class I, Zone 1 AEx/ Ex ia IIC T6...T1 Gb

### Ex nA

Transmitter	Sensor	
Class I, Zone 2 AEx/ Ex nA IIC T5T4 Gc	Class I, Zone 2 AEx/ Ex nA IIC T5T1 Gc	

### Ex tb

Transmitter	Sensor	
Zone 21 AEx/ Ex tb IIIC T85°C Db	Zone 21 AEx/ Ex ia tb IIIC T** °C Db	

### Hygienic compatibility

- 3-A approval
  - Only measuring instruments with the order code for "Additional approval", option LP "3A" have 3-A approval.
  - The 3-A approval refers to the measuring instrument.
  - When installing the measuring instrument, ensure that no liquid can accumulate on the outside
    of the measuring instrument.
    - A remote display module must be installed in accordance with the 3-A Standard.
  - Accessories (e.g. heating jacket, weather protection cover, wall holder unit) must be installed in accordance with the 3-A Standard.
  - Each accessory can be cleaned. Disassembly may be necessary under certain circumstances.
- FDA
- Food Contact Materials Regulation (EC) 1935/2004
- i

Observe the special installation instructions

### **HART** certification

### **HART** interface

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified according to HART 7
- The device can also be operated with certified devices of other manufacturers (interoperability)

# FOUNDATION Fieldbus certification

### FOUNDATION Fieldbus interface

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified in accordance with FOUNDATION Fieldbus H1
- Interoperability Test Kit (ITK), revision version 6.2.0 (certificate available on request)
- Physical Layer Conformance Test
- The device can also be operated with certified devices of other manufacturers (interoperability)

# **Certification PROFIBUS**

# **PROFIBUS** interface

The measuring device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e.V./ PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to PA Profile 3.02
- The device can also be operated with certified devices of other manufacturers (interoperability)

### EtherNet/IP certification

The measuring device is certified and registered by the ODVA (Open Device Vendor Association). The measuring system meets all the requirements of the following specifications:

- Certified in accordance with the ODVA Conformance Test
- EtherNet/IP Performance Test
- EtherNet/IP PlugFest compliance
- The device can also be operated with certified devices of other manufacturers (interoperability)

### Certification PROFINET

### PROFINET interface

The measuring device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e.V. / PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to:
  - Test specification for PROFINET devices
  - PROFINET Security Level 2 Netload Class 2 0 Mbps
- The device can also be operated with certified devices of other manufacturers (interoperability)
- The device supports PROFINET S2 system redundancy.

### PROFINET with Ethernet-APL certification

### **PROFINET** interface

The measuring device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e. V./ PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to:
  - Test specification for PROFINET devices
  - PROFINET PA Profile 4
  - PROFINET netload robustness Class 2 10 Mbit/s
  - APL conformance test
- The device can also be operated with certified devices of other manufacturers (interoperability)
- The device supports PROFINET S2 system redundancy.

### Radio approval

The measuring device has radio approval.



For detailed information on the radio approval, see the Special Documentation  $\rightarrow \implies 132$ 

### Additional certification

## CRN approval

Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.

### Tests and certificates

- Radiographic testing ISO 10675-1 ZG1 (RT), process connection, weld seam, Heartbeat Technology verification report
- Radiographic testing ASME B31.3 NFS (RT), process connection, weld seam, Heartbeat Technology verification report
- Radiographic testing ASME VIII Div.1 (RT), process connection, weld seam, Heartbeat Technology verification report
- Radiographic testing NORSOK M-601 (RT), process connection, weld seam, Heartbeat Technology verification report
- Radiographic testing ISO 10675-1 ZG1 (DR), process connection, weld seam, Heartbeat Technology verification report
- Radiographic testing ASME B31.3 NFS (DR), process connection, weld seam, Heartbeat Technology verification report
- Radiographic testing ASME VIII Div.1 (DR), process connection, weld seam, Heartbeat Technology verification report
- Radiographic testing NORSOK M-601 (DR), process connection, weld seam, Heartbeat Technology verification report

### *Testing of welded connections*

Option	Test standard			Process	
	ISO 10675-1 AL1	ASME B31.3 NFS	ASME VIII Div.1	NORSOK M-601	connection
KE	х				RT
KI		х			RT
KN			х		RT
KS				х	RT
K5	х				DR
К6		х			DR
K7			Х		DR
K8				Х	DR

RT = Radiographic testing, DR = Digital radiography
All options with test report

# External standards and guidelines

■ EN 60529

Degrees of protection provided by enclosures (IP code)

■ IEC/EN 60068-2-6

Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).

■ IEC/EN 60068-2-31

Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices.

■ EN 61010-1

Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements

■ EN 61326-1/-2-3

EMC requirements for electrical equipment for measurement, control and laboratory use

■ NAMUR NE 21

Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment

NAMUR NE 32

Data retention in the event of a power failure in field and control instruments with microprocessors

■ NAMUR NE 43

Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.

■ NAMUR NE 53

Software of field devices and signal-processing devices with digital electronics

■ NAMUR NE 105

Specifications for integrating fieldbus devices in engineering tools for field devices

■ NAMUR NE 107

Self-monitoring and diagnosis of field devices

NAMUR NE 131

Requirements for field devices for standard applications

■ NAMUR NE 132

Coriolis mass meter

■ ETSI EN 300 328

Guidelines for 2.4 GHz radio components.

■ EN 301489

 $\label{thm:electromagnetic compatibility and radio spectrum\ matters\ (ERM).$ 

# Ordering information

Detailed ordering information is available from your nearest sales organization www.addresses.endress.com or in the Product Configurator at www.endress.com:

1. Select the product using the filters and search field.

2. Open the product page.

# 3. Select **Configuration**.

# Product Configurator - the tool for individual product configuration

- Up-to-the-minute configuration data
- Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- Ability to order directly in the Endress+Hauser Online Shop

### Product generation index

Release date	Product root	Documentation
01.05.2018	8A5C	TI01375D



More information is available from your Sales Center or at:

www.service.endress.com → Downloads

# Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: <a href="https://www.endress.com">www.endress.com</a>.



### Diagnostic functionality

Order code for "Application package", option EA "Extended HistoROM"

Comprises extended functions concerning the event log and the activation of the measured value memory.

Event log:

Memory volume is extended from 20 message entries (standard version) to up to 100 entries.

Data logging (line recorder):

- Memory capacity for up to 1000 measured values is activated.
- 250 measured values can be output via each of the 4 memory channels. The recording interval can
  be defined and configured by the user.
- Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.



For detailed information, see the Operating Instructions for the device.

### **Heartbeat Technology**

Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

# **Heartbeat Verification**

Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment".

- Functional testing in the installed state without interrupting the process.
- Traceable verification results on request, including a report.
- Simple testing process via local operation or other operating interfaces.
- Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications.
- Extension of calibration intervals according to operator's risk assessment.

### **Heartbeat Monitoring**

Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:

- Draw conclusions using these data and other information about the impact process influences (e.g. corrosion, abrasion, buildup etc.) have on the measuring performance over time.
- Schedule servicing in time.
- Monitor the process or product quality, e.g. gas pockets .



For detailed information, see the Special Documentation for the device.

### **Concentration measurement**

Order code for "Application package", option ED "Concentration"

Calculation and outputting of fluid concentrations.

The measured density is converted to the concentration of a substance of a binary mixture using the "Concentration" application package:

- Choice of predefined fluids (e.g. various sugar solutions, acids, alkalis, salts, ethanol etc.).
- Common or user-defined units ("Brix, "Plato, % mass, % volume, mol/l etc.) for standard applications.
- Concentration calculation from user-defined tables.



For detailed information, see the Special Documentation for the device.

### Special density

Order code for "Application package", option EE "Special density"

Many applications use density as a key measured value for monitoring quality or controlling processes. The measuring instrument measures the density of the fluid as standard and makes this value available to the control system.

The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.



For detailed information, see the Operating Instructions for the device.

# OPC-UA Server

Order code for "Application package", option EL "OPC-UA Server"

The application package provides an integrated OPC-UA server for comprehensive device services for IoT and SCADA applications.



For detailed information, see the Special Documentation for the device.

# Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: <a href="https://www.endress.com">www.endress.com</a>.

# Device-specific accessories

# For the transmitter

Accessories	Description
Transmitter Proline 500 – digital Proline 500	Transmitter for replacement or storage. Use the order code to define the following specifications:  Approvals  Output  Input  Display/operation  Housing  Software  Proline 500 – digital transmitter: Order number: 8X5BXX-*******A
	<ul> <li>Proline 500 transmitter:         Order number: 8X5BXX-*******B</li> <li>Proline 500 transmitter for replacement:         It is essential to specify the serial number of the current transmitter when</li> </ul>
	ordering. On the basis of the serial number, the device-specific data (e.g. calibration factors) of the replaced device can be used for the new transmitter.
	<ul> <li>Proline 500 – digital transmitter: Installation Instructions EA01151D</li> <li>Proline 500 transmitter: Installation Instructions EA01152D</li> </ul>
External WLAN antenna	External WLAN antenna with 1.5 m (59.1 in) connecting cable and two angle brackets. Order code for "Accessory enclosed", option P8 "Wireless antenna wide area".
	<ul> <li>The external WLAN antenna is not suitable for use in hygienic applications.</li> <li>Additional information regarding the WLAN interface →</li></ul>
	• Order number: 71351317
	Installation Instructions EA01238D
Pipe mounting set	Pipe mounting set for transmitter.
	Proline 500 – digital transmitter Order number: 71346427
	Installation Instructions EA01195D
	Proline 500 transmitter Order number: 71346428
Weather protection cover Transmitter	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight.
<ul><li>Proline 500 – digital</li><li>Proline 500</li></ul>	Proline 500 – digital transmitter Order number: 71343504 Proline 500 transmitter Order number: 71343505
	Installation Instructions EA01191D
Display guard Proline 500 – digital	Is used to protect the display against impact or scoring, for example from sand in desert areas.
	1 Order number: 71228792
	Installation Instructions EA01093D

Connecting cable Proline 500 – digital Sensor – Transmitter	The connecting cable can be ordered directly with the measuring device (order code for "Cable, sensor connection) or as an accessory (order number DK8012).  The following cable lengths are available: order code for "Cable, sensor connection"  Option B: 20 m (65 ft)  Option E: User-configurable up to max. 50 m  Option F: User-configurable up to max. 165 ft  Maximum possible cable length for a Proline 500 – digital connecting cable: 300 m (1000 ft)
Connecting cables Proline 500 Sensor – Transmitter	The connecting cable can be ordered directly with the measuring device (order code for "Cable, sensor connection") or as an accessory (order number DK8012).  The following cable lengths are available: order code for "Cable, sensor connection"  Option 1: 5 m (16 ft)  Option 2: 10 m (32 ft)  Option 3: 20 m (65 ft)  Possible cable length for a Proline 500 connecting cable: max. 20 m (65 ft)

# For the sensor

Accessories	Description
Heating jacket	Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids.
	If using oil as a heating medium, please consult with Endress+Hauser.
	If ordered together with the measuring device:
	Order code for "Accessory enclosed"
	<ul><li>Option RB "Heating jacket, G 1/2" female thread"</li></ul>
	<ul><li>Option RD "Heating jacket, NPT 1/2" female thread"</li></ul>
	If ordered subsequently:
	Use the order code with the product root DK8003.
	Special Documentation SD02173D
Sensor holder	For wall, tabletop and pipe mounting.
	Order number: 71392563

# Communication-specific accessories

Accessories	Description
Commubox FXA195 HART	For intrinsically safe HART communication with FieldCare via the USB port.  Technical Information TI00404F
HART loop converter HMX50	Is used to evaluate and convert dynamic HART process variables to analog current signals or limit values.  Technical Information TI00429F Operating Instructions BA00371F
Fieldgate FXA42	Transmission of the measured values of connected 4 to 20 mA analog measuring instruments, as well as digital measuring instruments  Technical Information TI01297S Operating Instructions BA01778S Product page: www.endress.com/fxa42
Field Xpert SMT50	The Field Xpert SMT50 tablet PC for device configuration enables mobile plant asset management in the non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.  This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.
	<ul> <li>Technical Information TI01555S</li> <li>Operating Instructions BA02053S</li> <li>Product page: www.endress.com/smt50</li> </ul>

Field Xpert SMT70	The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.  This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage the field instruments throughout their entire life cycle.
	<ul> <li>Technical Information TI01342S</li> <li>Operating Instructions BA01709S</li> <li>Product page: www.endress.com/smt70</li> </ul>
Field Xpert SMT77	The Field Xpert SMT77 tablet PC for device configuration enables mobile plant asset management in areas categorized as Ex Zone 1.
	<ul> <li>Technical Information TI01418S</li> <li>Operating Instructions BA01923S</li> <li>Product page: www.endress.com/smt77</li> </ul>

# Service-specific accessories

Accessories	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring instruments:  Choice of measuring instruments for industrial requirements  Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and measurement accuracy.  Graphic display of the calculation results  Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.
	Applicator is available:  Via the Internet: https://portal.endress.com/webapp/applicator
Netilion	lloT ecosystem: Unlock knowledge With the Netilion IIoT ecosystem,Endress+Hauser allows you to optimize your plant performance, digitize workflows, share knowledge, and enhance collaboration.  Drawing upon decades of experience in process automation, Endress+Hauser offers the process industry an IIoT ecosystem designed to effortlessly extract insights from data. These insights allow process optimization, leading to increased plant availability, efficiency, and reliability - ultimately resulting in a more profitable plant.  www.netilion.endress.com
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all intelligent field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.  Operating Instructions BA00027S and BA00059S
DeviceCare	Tool to connect and configure Endress+Hauser field devices.  Innovation brochure IN01047S

# System components

Accessories	Description
Memograph M graphic data manager	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.
	<ul><li>Technical Information TI00133R</li><li>Operating Instructions BA00247R</li></ul>
Cerabar M	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.
	<ul> <li>Technical Information TI00426P and TI00436P</li> <li>Operating Instructions BA00200P and BA00382P</li> </ul>

Accessories	Description
Cerabar S	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.
	<ul><li>Technical Information TI00383P</li><li>Operating Instructions BA00271P</li></ul>
iTEMP	The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature.
	"Fields of Activity" document FA00006T

# Supplemental documentation



For an overview of the scope of the associated Technical Documentation, refer to the following:

- Device Viewer (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- Endress+Hauser Operations app: Enter serial number from nameplate or scan matrix code on nameplate.

### Standard documentation



 $Supplementary\ information\ on\ the\ semi\mbox{-}standard\ options\ is\ available\ in\ the\ relevant\ Special$ Documentation in the TSP database.

# **Brief operating instructions**

Brief Operating Instructions for the sensor

Measuring instrument	Documentation code
Proline Promass A	KA01282D

### Brief operating instructions for transmitter

	Documentation code							
Measuring instrument	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	Ethernet/IP	PROFINET	PROFINET over Ethernet- APL
Proline 500 – digital	KA01315D	KA01233D	KA01392D	KA01390D	KA01319D	KA01346D	KA01351D	KA01521D
Proline 500	KA01314D	KA01291D	KA01391D	KA01389D	KA01318D	KA01347D	KA01350D	KA01520D

# **Operating Instructions**

Measuring	Documentation code							
instrument	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	Ethernet/IP	PROFINET	PROFINET over Ethernet- APL
Promass A 500	BA01817D	BA01883D	BA01869D	BA01870D	BA01884D	BA01885D	BA01886D	BA02121D

# **Description of parameters**

	Documentation code							
Measuring instrument	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	Ethernet/IP	PROFINET	PROFINET over Ethernet- APL
Promass 500	GP01060D	GP01096D	GP01061D	GP01137D	GP01062D	GP01120D	GP01121D	GP01173D

Supplementary devicedependent documentation

Safety instructions

Safety instructions for electrical equipment for hazardous areas.

# **Functional Safety Manual**

Contents	Documentation code
Proline Promass 500	SD01729D

## Special documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
OPC-UA server <sup>1)</sup>	SD02040D

1) This Special Documentation is only available for device versions with a HART output.

Contents	Documentation code							
	HART	FOUNDATIO N Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	PROFINET	EtherNet/IP	PROFINET with Ethernet- APL
Web server	SD01666D	SD01669D	SD01668D	SD02232D	SD01667D	SD01971D	SD01970D	SD02769D
Heartbeat Technology	SD01643D	SD01608D	SD01705D	SD02203D	SD01704D	SD01989D	SD01983D	SD02732D
Concentration measurement	SD01645D	SD01709D	SD01711D	SD02213D	SD01710D	SD02007D	SD02006D	SD02736D
Gas fraction handler	SD02584D	-	-	_	SD02584D	SD02584D	_	SD02584D

### **Installation instructions**

Contents	Note
Installation instructions for spare part sets and accessories	Documentation code: specified for each individual accessory $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $

# Registered trademarks

**HART®** 

Registered trademark of the FieldComm Group, Austin, Texas USA

### **PROFIBUS**<sup>®</sup>

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

### FOUNDATION™ Fieldbus

Registration-pending trademark of the FieldComm Group, Austin, Texas, USA

#### Modbus

Registered trademark of SCHNEIDER AUTOMATION, INC.

### EtherNet/IP™

Trademark of ODVA, Inc.

### Ethernet-APL™

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

### **PROFINET®**

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

# TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA



www.addresses.endress.com