

Operating Instructions Fieldgate FXA320

Ethernet, Modem and GSM gateway for 4 - 20 mA analog and binary devices





BA00053S/00/EN/16.15 Version 1.07.xx 71282724



Endress + Hauser

Table of Contents

	Revision Index 3 Registered Trademarks 3
1	Safety 5
1.1 1.2 1.3 1.4 1.5 1.6 1.7 1.8	Designated use5IT security5Installation, commissioning and operation5Operational safety5Technical improvement5Declaration of conformity6Writing conventions7Drawing conventions8
2	Identification
2.1 2.2 2.3 2.4	Device designation9Scope of delivery10Licensing agreement10Device documentation102.4.1W@M Device Viewer102.4.2Endress+Hauser Operations App11
3	Function and System Design 12
3.1	Function
3.2	3.1.1 Inventory Control 12 Communication interface 13 3.2.1 Ethernet 10BaseT 13 3.2.2 Telephone network 13 3.2.3 Mobile communications network (GSM) 14 3.2.4 GPRS support 14
3.3	Signal channels153.3.1Analog input channels153.3.2Binary input channels153.3.3Relay output15
3.4	Operability163.4.1Display elements163.4.2Operating elements163.4.3Service interface16
3.5	System architecture 17 3.5.1 Analog input 420 mA 17 3.5.2 Binary input 17
3.6	System requirements183.6.1Use with web browser183.6.2Use with SupplyCare18
4	Hardware Installation 19
4.1	Mounting194.1.1Location and clearance194.1.2Mounting194.1.3Accessing the DAT module/SIM card/ service interface20
4.2	4.1.4Dismounting a Fieldgate20Wiring

4.3	4.2.2Power supply and relay214.2.3Externally powered 420 mA device224.2.4Loop-powered 420 mA device224.2.5Switching device (binary input)23Network connection244.3.1Fieldgate Analog244.3.2Fieldgate Ethernet244.3.3Fieldgate GSM24
5	Commissioning 25
5.1	Establishing communication via service interface265.1.1Connect the Fieldgate265.1.2Set up a standard 9600 bps modem265.1.3Check the modem properties285.1.4Set up the dial up connection305.1.5Dialing up345.1.6Securing changes made via the service interface36
5.2	Fieldgate with Ethernet interface375.2.1Communication parameters375.2.2Set up the Fieldgate via service interface38
5.3	5.2.3Connect to Fieldgate via Ethernet
5.4	5.3.4Connect to Fieldgate42Fieldgate with GSM modem435.4.1Communication parameters435.4.2Set up the Fieldgate via service interface445.4.3Set up the dial-up connection in
	your computer
5.5	Miscellaneous server settings475.5.1Time Server Setup475.5.2Miscellaneous Server Setup48
5.6	Message Settings 49 5.6.1 Common Message Settings 49 5.6.2 Mail Setup 50 5.6.3 Field Information Server (FIS) Setup 51 5.6.4 SMS Setup 52
6	Configuring the Fieldgate 53
6.1	Logging on
6.2 6.3	User interface 54 6.2.1 Menu bar 54 6.2.2 Navigation bar 55 6.2.3 Settings pages 56 Settings menu 57
	6.3.1 Fieldgate location 57 6.3.2 User 58 6.3.3 Network and Messages 59

6.4 6.5	6.3.4 Scan 60 6.3.5 Input 61 6.3.6 Special 62 6.3.7 Info 63 Overview 64 6.4.1 Opening the setup dialogs 64 6.4.2 Analog input setup 65 6.4.3 Digital input setup 66 6.4.4 Description/Range/Limit/Alarm 67 6.4.5 Sensor error 69 Hardware lock 70 6.5.1 Activating the hardware lock 70 6.5.2 Deactivating the hardware lock 70
7	Viewing Information (User Mode) 71
7.1 7.2	Logging on 71 Overview 72 7.2.1 Device overview 72 7.2.2 Setup details 73 7.2.3 Device details 74
7.3	7.2.3 Device details 74 Settings 75 7.3.1 Location 75 7.3.2 Password 75 7.3.3 Input 75 7.3.4 Info 76
7.4	Miscellaneous Functions827.4.1Autorefresh827.4.2Refresh827.4.3Endress+Hauser82
8	Advanced Functions
8.1	XML data 83 8.1.1 Generating the XML Data 83 8.1.2 Evaluating the XML data 83

Fieldgate	FXA320
-----------	--------

8.3 8.4 8.5	 8.2.1 Calling up the historical data 8.2.2 Interpreting the historical data Wireless Application Protocol (WAP) pages 8.3.1 Connecting to the WAP homepage 8.3.2 WAP pages SupplyCare Dynamic DNS server 	. 84 . 85 . 86 . 86 . 86 . 86 . 87 . 88
9	Trouble-Shooting	90
9.1 9.2 9.3 9.4	Problems and remedies Reset Troubleshooting on no connection Firmware update	. 90 . 91 . 92 . 93
10	Accessories	94
10.1 10.2	Fieldgate FXA320 Auxiliary units	. 94 . 94
11	Technical Data	95
12	Appendix	96
12.1 12.2	Commissioning Fieldgate Ethernet via Web browser 12.1.1 Change the IP address of your computer . 12.1.2 Connect to the Fieldgate XML data elements	. 96 . 96 . 97 . 98
	Index	100

8.2

Revision Index

Product	Manual	Changes	Remarks
version			
1.00.xx	BA282F/00/en/	Original	
1.01.xx	BA282F/00/en/	Unknown	No Revision Index
1.02.xx	BA282F/00/en/08.05	Unknown	No Revision Index
1.03.xx	NA	Bug fixes	Customer-specific software update
1.04.xx	NA	Bug fixes	Customer-specific software update
1.05.xx	BA053S/04/en/09.08	Restructuring of manual	Manual not released due to pending Version 1.06.xx
1.06.xx	BA053S/04/en/01.09	Various menus	Addition of new control parameters
		Overview page	Redesign of measurement presentation
1.07.xx	BA00053S/04/en/13.11	Mail settings	New settings for Field Information Server
		Information	Update of System Log and Error Log tables
1.07.xx	BA00053S/04/en/14.11	Editorial	Introduction of ANSI warning system Correction to product code (p8) FIS URL now: secure.fis.endress.com (p50)
1.07.xx	BA00053S/04/en/14.11	Customizations	Module Fieldgate Viewer removed Chapter IT security added Note to SMTP protocol added
1.07.xx	BA00053S/00/EN/ 16.15	Customizations	Additional information in the chapters Power supply and Technical data; New chapter Device documentation

Registered Trademarks

PROFIBUS®

Registered trademark of the PROFIBUS User Organisation, Karlsruhe Germany.

FOUNDATIONTM fieldbus Trademark of the Fieldbus Foundation, Austin, TX 78759, USA

HART®

Registered trademark of the HART Communication Foundation, Houston, USA

 $Microsoft^{(B)}$, $Windows^{(B)}$, $Windows 2000^{(B)}$, $Windows XP^{(B)}$ and the Microsoft logo are registered trademarks of the Microsoft Corporation.

Acrobat Reader[®] is a registered trade mark of the Adobe Systems Incorporated.

All other brand and product names are trademarks or registered trademarks of the companies and organisations in question

1 Safety

1.1 Designated use

Fieldgate FXA320 is a gateway with integrated web server that is used for remote acquisition of data from max. two 4-20 mA analog devices. These can be either passive (loop-powered) or active (with independent power supply). A version with two 4-20 mA analog and four binary inputs is also available. The Fieldgate communicates with the host computer via Ethernet, telephone or GSM modem.

1.2 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

Endress+Hauser can be contacted to provide support in performing this task.

1.3 Installation, commissioning and operation

Fieldgate FXA320 must be installed, connected, operated and maintained according to the instructions in this manual: personnel must be authorised and suitably qualified.

1.4 Operational safety

The unit may only be operated under the permissible ambient conditions given in the technical data.

Explosion hazardous areas Fieldgate FXA320 itself may not be mounted in explosion hazardous areas. Its outputs are also not intrinsically safe, i.e. if it is used with devices operating in explosion hazardous areas, an intrinsically safe barrier must be used.

Do not open the housing of the Fieldgate FXA320. It does not contain any parts that need to be maintained or repaired by the user. In the event of a fault or defect, return the unit to the vendor. Opening the unit will void the warranty!

1.5 Technical improvement

Endress+Hauser reserves the right to make technical improvements to its hardware and software at any time and without prior notification. Where such improvements have no effect on the operation of the equipment, they are not documented. If the improvements effect operation, a new version of the operating instructions is normally issued, see Revision History.

Repair

1.6 Declaration of conformity

CE Notice Fieldgate FXA320 complies to the requirements of the EC Directive 2004/108/EG "Electromagnetic Compatibility" (EMC directive). It has been tested in accordance with the EN 61326 series of standards Emission: Class B operating equipment Immunity: EN 61326-1: as per Table 1 A Declaration of Conformity in compliance with the above standards has been made and can be inspected at Endress+Hauser Process Solutions AG on request. **Telecommunications** Fieldgate FXA320 conforms with the following telecommunication regulations: Analog version: North America FCC CFR 47, part 15 and part 68 Europe Telecoms Terminal Equipment Directive (98/13/EG) European approval TBR 21 Fieldgate GSM version North America FCC CFR 47 Part 15 and Part 24 FCC Notice This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. To ensure that the unit complies with current FCC regulations and safety requirements limiting both maximum RF output power and human exposure to radio frequency radiation, use an antenna with a maximum gain of 2dBi and a separation distance of at least 20 cm must be maintained between the unit's antenna and the body of the user and any nearby persons at all times and in all applications and uses. **Modifications** The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Endress+Hauser may void the user's authority to operate the equipment. FCC Statement FCC-ID: LCG-FG-FXA52X-32X This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1 This device may not cause harmful interference, and 2 This device must accept any interference received, including interference that may cause undesired operation. Wireless Notices In some situations or environments, the use of wireless devices may be restricted. Such restrictions may apply aboard airplanes, in vehicles, in hospitals, near explosives, in hazardous locations, etc. If you are uncertain of the policy that applies to the use of this device, please ask for authorization to use it prior to turning it on.

1.7 Writing conventions

The following writing conventions and symbols have been used to provide the user with a better overview of the contents of this manual and to highlight important information:

Text emphasis The following table provides you with a brief overview of the methods used to emphasise text in this manual.

Text emphasis	Function	Example
Bold	Keys, buttons, program icons, tabs, menus,	Start =>Programs =>Endress+Hauser
	commands	or Enter
		Select Print in the File menu.
CAPS	Details on paths and file names in the text	DOKUFMR2XX.PDF or WIN.HLP
Angle brackets	Variables	<cd-rom drive=""></cd-rom>

Safety conventions

Safety relevant information is highlighted by an icon in the margin plus the note, caution or warning text.

Icon	Meaning
A DANGER	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
NOTICE	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.

1.8 Drawing conventions

The following symbols may be found within technical drawings.

Explosion protection

-Icon	Meaning
(Ex)	Device certified for use in explosion hazardous area If the device has this symbol embossed on its name plate it can be installed in an explosion hazardous area in accordance with the specifications in the certificate or in a safe area
<u> </u>	Explosion hazardous area Symbol used in drawings to indicate explosion hazardous areas. Devices located in and wiring entering areas with the designation "explosion hazardous areas" must conform with the stated type of protection
<u>Ex</u>	Safe area (non-explosion hazardous area) Symbol used in drawings to indicate, if necessary, non-explosion hazardous areas. Devices located in safe areas still require a certificate if their outputs run into explosion hazardous areas

Electrical symbols

lcon	Meaning
	Direct voltage A terminal to which or from which a direct current or voltage may be applied or supplied
\sim	Alternating voltage A terminal to which or from which an alternating (sine-wave) current or voltage may be applied or supplied
<u> </u>	Grounded terminal A grounded terminal, which as far as the operator is concerned, is already grounded by means of an earth grounding system
	Protective grounding (earth) terminal A terminal which must be connected to earth ground prior to making any other connection to the equipment
∇	Equipotential connection (earth bonding) A connection made to the plant grounding system which may be of type e.g. neutral star or equipotential line according to national or company practice

2 Identification

2.1 Device designation

The device designation is to be found on the nameplate affixed to the lefthand side of the module.

Endress+Hauser			
	25000(660 E		CSA mark (depends on version)
L1 N Contact rating 253 V AC, 2 A, 1 2 1516 500 V A(cs $\varphi \ge 0,7$) 40 V DC, 2 A, 80 W	- () ()		
BI1 BI2 GND1 → 22 23 24 0: U_=-3V+5V → 75 27 29 1: U_=+15V30V	420 mA 7 8 9 10 CH1 11 12 13 14 CH2 → 1 605		Analog Input
BI3 BI4 GND2	$0^{\circ}C \le I_{amb} \le +60^{\circ}C$ $0^{\circ}C \le T_{amb} \le +50^{\circ}C \text{ (Anreihmont age/row mounting)}$		Environment
Barcode	SerNo.: SIL ->[1] TI 369F_ KomNo.: Jat./Insp.: Jat	Barcode	Serial number
	Endress + Hauser HELDGATE FXA320-	Implementation Implementation Implementation Interpretation Implementation	Implementation Implementation Implementation Implement

Fig. 2-1: Example nameplate of Fieldgate

The device type can be derived from the product code as follows:

Root	Des	escription							
FXA320-	Certificate								
	А	A Version for non-hazardous areas F CSA General Purpose							
	F								
	Y	Special version							
	Power Supply								
		А	85	.253 V	ΥAC,	, 50/60 Hz			
		Е	20	.60 VI	ЭС, 2	2030 VAC			
		G	Sola	ir pane	l coi	nnection 1030 VDC			
		1							
			Mo	dem I	nter	face			
			1	Ether	net				
			2	Analo	ogue	modem			
			4	GSM	mo	dem without antenna			
			9	Speci	al ve	ersion			
				DAT	Мо	dule			
				A	with	nout DAT module			
				В	with	n DAT module			
				Y	Spec	cial version			
					Inpu	ut			
					A	2 analog input			
					В	2 analog input and 4 binary inputs			
		1		1		I Contraction of the second			

2.2 Scope of delivery

Please check that the delivery is complete and free of defects before starting installation. The scope of delivery comprises the following parts:

- Device
- Installation and mounting instructions
- Accessories (depending on order)
- PC cable (service connector)

2.3 Licensing agreement

No license is required for the use of the Web server embedded in the Fieldgate FXA320.

The software required for start-up and commissioning, i.e. the Internet browser, is either freely available or is subject to the licensing conditions of its manufacturer. Installation of this software on your computer implies that you accept the terms of the corresponding licensing agreement.

2.4 Device documentation

NOTICE NOTE!

 All devices are shipped with Brief Operating Instructions. These Brief Operating Instructions do not replace the associated Operating Instructions!

Detailed information on the device can be found in the Operating Instructions and in the other documentation:

Available for all device versions via::

- Internet: www.endress.com/deviceviewer
- Smartfone/Tablet: Endress+Hauser Operations App

The information required to retrieve the documentation can be found on the nameplate of the device.

NOTICE NOTE!

 Technical documentation can also be downloaded from the Download Area of the Endress+Hauser web site: www.endress.com→ Download. However this technical documentation applies to a particular instrument family and is not assigned to a specific device.

2.4.1 W@M Device Viewer

- 1 Launch the W@M Device Viewer: www.endress.com/deviceviewer
- 2 Enter the serial number (Ser. no.) of the device: see nameplate.

 — All the associated documentation is displayed.

2.4.2 Endress+Hauser Operations App

NOTICE NOTE!

• The *Endress+Hauser Operations App* is available both for android smart phones (Google Play Store) and for iPhones and iPads (App Store).

Via the serial number:

- 1 Launch the *Endress+Hauser Operations App*.
- 2 Enter the serial number (Ser. no.) of the device: see nameplate. → All the associated documentation is displayed.

Via the 2-D matrix code (OR code):

- 1 Launch the *Endress+Hauser Operations App*.
- 2 Scan the 2-D matrix code (QR code) on the nameplate. → All the associated documentation is displayed.

3 Function and System Design

3.1 Function

Fieldgate FXA320 is designed for inventory control applications. It possess two 4...20 mA input circuits which can be switched to be passive (connected device has own power supply) or active (Fieldgate powers the connected device). An additional four binary inputs for switches or counter applications are available as an option.

3.1.1 Inventory Control

Fieldgate FXA320 allows owners, vendors and suppliers to remotely acquire the current levels of products in tanks or silos, e.g. in order to account for them in their own production planning. The Fieldgate allows level limits to be configured and, if required, automatically activates the next delivery. The options here range from a simple purchasing requisition via e-mail through to fully automatic order administration when XML data is coupled into the planning systems on both sides.



Fig. 3-1: Inventory Management using Fieldgate FXA320

Fig. 3-2 shows a typical configuration when Fieldgate FXA320/FXA520 is used with SupplyCare.



Fig. 3-2: Inventory Management using SupplyCare and an E-mail or Field Information Server

3.2 Communication interface

Fieldgate is equipped with an Ethernet 10BaseT interface, an analog modem or a GSM modem.

3.2.1 Ethernet 10BaseT

Fieldgate with 10BaseT Ethernet interface is connected to the local network via a hub or switch using a standard cable with RJ45 plug connector. As Fieldgate is constantly available in the network, it is accessed with a standard web browser. Several PCs can access Fieldgate simultaneously.



Fig. 3-3: Connecting Fieldgate to Ethernet

3.2.2 Telephone network

Fieldgate is connected to the telephone network via an RJ11 (PSTN) plug connector. This form of communication is always a point-to-point connection and only one PC can communicate with the device at any one time. In this configuration, the Fieldgate has to be selected before each access, so that it is ready for online operation. The Windows internal telecommunications network can be used for dialling. After this, the Fieldgate can be accessed with a standard web browser.

Fieldgate can also dial itself into a central server, e.g. in order to deliver periodic measured values. If Fieldgate dials into the Internet permanently via an Internet Service Provider, it is possible for several users to access the Fieldgate simultaneously. In addition the user does not require a modem as a receiver at the work place.



Fig. 3-4: Connecting Fieldgate to a public telephone network

3.2.3 Mobile communications network (GSM)

The GSM modem allows data to be transferred via a mobile communications network. It can be configured as point-to-point connections or as freely accessible via the Internet/Intranet. A SIM card from a mobile communications network operator is required for GSM operation. Communication is established via the data channel of the SIM card, which may require additional activation, depending on the GSM provider.



Fig. 3-5: Connecting Fieldgate to a mobile communications network

3.2.4 GPRS support

GPRS (General Packet Radio Services) is a mobile communications technique, which exploits the advantages of packet-oriented data transmission and channel bundling.

In contrast to normal GSM connections, no complete channel is reserved for the duration of the connection between the mobile device and the basis station, rather the data are compiled into packets, which can be sent depending on requirement and capacity. Data transmission in packets enables not only greater transmission rates but also permanent dial-in operation. The Fieldgate is thus permanently in a position to connect to the Internet, an Intranet or a mailbox, whereby data are only transferred as required, e.g. if a new e-mail is sent or a new Internet page is called up. In this case, you are only charged for the amount of data actually transmitted and not for connection time.

The GPRS mode of the Fieldgate GSM thus offers the easiest and most cost-effective option for connecting a measuring point permanently to the Internet or an Intranet. Permanent dial-in allows optimal use of Fieldgate's web page functions, providing Internet access via WAP or HTML and PC.

To use some GPRS functions, e.g. access to the Fieldgate via Internet, the GSM/GPRS provider will need to allocate a public IP address. It will be necessary to determine in each individual case, whether this additional service is offered by the respective operator.

3.3 Signal channels

Fieldgate FXA320 has two analog input channels, optionally four binary input channels and a relay output channel. More details are to be found in Chapter 3.5, System Architecture and Chapter 4, Installation.

3.3.1 Analog input channels

Two analog input channels allow the connection of two 4...20 mA devices. A switch behind the front panel allows them to be individually configured to be passive (connected device has own power supply) or active (Fieldgate powers the connected device).

3.3.2 Binary input channels

Four binary input channels, comprising two blocks of two channels with common ground, are available as an option. The inputs can be used as follows

- Inputs 1, 2, 3, 4: switching status: L-signal: -3 ... +5 V, H-signal: +15 ... +30 V
- Inputs 1, 3: event counting: measuring range 0 ...12.5 kHz
- Inputs 2, 4: frequency measurement: 4.7 Hz (±1%) ... 12.5 kHz (±4%)

The input channel is configured using the Fieldgate Web server.

3.3.3 Relay output

The relay can be used to signal an alarm or save power:

Alarm relay

The relay is configured as an alarm relay by not selecting the function "Power Down Devices between Scan Cycles" on the device set-up page. It closes on power-up and opens on power-down. The alarm circuit must be wired accordingly.

Power save

For installations where power saving is at a premium, e.g. solar stations, the device power can be wired via the relay. The function "Power Down Devices between Scan Cycles" is then selected by ticking the checkbox, see Chapter 6.3.4. When the device scan is complete, the relay is opened and the power to the devices is cut. When the next scan is due, the relay closes and after a short delay to allow the device to power-up, the scan proceeds.

3.4 Operability

Fig. 3.5 shows a the display elements of the Fieldgate FXA320 together with other operating elements that are located behind the front panel.



Fig. 3-6: Front panel of the Fieldgate FXA320

3.4.1 Display elements

Item	Light emitting diode (LED)	Meaning
1	Green LED constant	Indicates the power supply is correct
2	Red LED constant	Indicates a fault
	Red LED flashes	Indicates a warning / on-site communication via PC / hardware is unlocked / system start
3	Yellow LED	Switching status of the built-in relay
		LED off = relay de-energised
		LED on $=$ relay energised
4	Yellow LED	Indicates: connection active
5	Yellow LED	Indicates: communication / GSM version: field strength display if no connection

3.4.2 Operating elements

Item	Element	Meaning
6	Switch for Channels 1 and 2	\longrightarrow active (Fieldgate power), \longrightarrow passive (e.g. RN221N-B power)
7	Socket	Connection socket for DAT module
8	Button	Button for hardware locking and configuration reset

3.4.3 Service interface

Item	Element	Meaning
9	Socket	Connection socket for PC cable / service connector

3.5 System architecture

3.5.1 Analog input 4...20 mA

Two 4–20 mA devices can be connected to the standard version of Fieldgate FXA320. With the appropriate transmitter supply module, the devices may also be located in hazardous areas. The devices cannot be parametrized, but the outputs can be scaled and linearized in the Fieldgate Web server.



Fig. 3-7: System architecture for 4–20 mA connections

3.5.2 Binary input

Fieldgate FXA 320 can be optionally equipped with four binary inputs to connect e.g. level switches.



Fig. 3-8: System architecture for FXZ520 analog and digital input modules

3.6 System requirements

3.6.1 Use with web browser

Web browser	Service Pack / extensions
MS Internet Explorer	> 5.0 with current security updates
Netscape Navigator	> 4.7 with current security updates
Opera	> 6.0 with current security updates
Mozilla Firefox	\geq 1.0 with current security updates

3.6.2 Use with SupplyCare

Operating system	Service Pack / extensions
Windows 2000	SP 1 or higher
Windows XP	Home/Professional

Add-on	Version	Function
SupplyCare	≥ 1.00.xx	Inventory Control program

4 Hardware Installation

4.1 Mounting

4.1.1 Location and clearance

Fieldgate is intended for mounting on TS35 DIN carrier rails (EN 60715) installed in a control cabinet or protective (IP55) cabinet.

- The device is convection-cooled. It must be installed in such a way that the ventilating ducts are at the top and bottom of the unit.
- Ensure that there is a ventilation space of at least 50 mm (2") above and below the device.
- There is no need for a lateral clearance between Fieldgate units that are connected to a common power supply.
- Fieldgate units connected to an Ex-power supply and Fieldgate units connected to Non-Ex power supply must have a lateral clearance of 50 mm (2").



Fig. 4-1: Dimensions of Fieldgate FXA320

GSM version

For the GSM version, it is also important that there is good reception from the mobile communication network at the location at which the unit is mounted. It may be necessary to install a stronger aerial if reception is weak.

4.1.2 Mounting

- 1 Position the Fieldgate, then latch the lug at the rear of the Fieldgate on the top of the DIN rail.
- 2 Push down until the snap fastener latches onto the DIN rail.



Fig. 4-2: Mounting the Fieldgate

4.1.3 Accessing the DAT module/SIM card/service interface

The DAT module, SIM card receptacle for GSM devices and service interface are located behind the front panel. You require a screwdriver with a normal blade.

NOTICE NOTE!

- Switch off the Fieldgate before inserting or removing the DAT module
- Do not insert the SIM card until the Fieldgate GSM settings have been made, see Chapter 5.3
- 1 Insert the screwdriver blade in the slot provided for it and gentle prise the front panel forwards until it is detached from its fastening.
- 2 Pull the panel downwards to access the connections.
- 3 Close the panel after use.



Fig. 4-3: Opening the front panel

4.1.4 Dismounting a Fieldgate

Dismounting

- 1 Switch off the power to the Fieldgate.
- 2 Insert a screwdriver blade between the terminal block and the housing and prise the block from its socket.
 - Repeat for all terminal blocks.
- 3 Insert the screwdriver blade in snap fastener and prise downwards until the fastener releases itself from the rail, then pull the Fieldgate free.



Fig. 4-4: Dismounting Fieldgate

4.2 Wiring

4.2.1 Terminals

Table 4-1 provides an overview of the Fieldgate terminals.



Table 4-1: Fieldgate terminals

4.2.2 Power supply and relay

Wire according to Fig. 4-5.

- Use a circuit breaker to isolate Fieldgate from line voltage when, e.g. wiring up.
- For switching capacity of NC relay see Table 4-1 above
- For mains supplied FXA320 Device, the user must install an external 1 A slow-blow fuse in the power line. The fuse must be designed for min. 250 V and be approved for the application in question.
- A total voltage of relay output and power supply lower than 300 V must be granted at installation.

Power: check nameplate



Fig. 4-5: Wiring up of power supply and relay

4.2.3 Externally powered 4...20 mA device

Make sure that the switch setting and connections are as shown in Fig. 4-6.



Fig. 4-6: Wiring for externally powered 4...20 mA devices

4.2.4 Loop-powered 4...20 mA device

Make sure that the switch setting and connections are as shown in Fig. 4-7



Fig. 4-7: Wiring and switch setting for loop-powered 4...20 mA devices

4.2.5 Switching device (binary input)

The binary inputs of Fieldgate are optional. Up to four switching devices can be connected as shown in Fig. 4-8. Limiting values for the input signals (DC PNP) are:

- Low signal ("0") = -3 VDC to +5 VDC
- High signal ("1") = +15 VDC to +30 VDC



Fig. 4-8: Wiring of optional binary inputs

4.3 Network connection

4.3.1 Fieldgate Analog

Fieldgate Analog is connected to a public telephone network (PSTN) via the RJ11 socket in its front panel. A standard telephone cable for the country in which the Fieldgate is installed is used to make the connection to the telephone network socket.



Fig. 4-9: Connection of Fieldgate to public switched telephone network

4.3.2 Fieldgate Ethernet

Fieldgate Ethernet is connected to the network card of a computer via a crossed Ethernet cable with RJ45 connectors or to an Ethernet network via a switch or hub and a standard Ethernet cable with RS45 connectors. Since the transmission rate is 10 MB/s it is recommended that a switch is used in preference to a hub.



Fig. 4-10: Connection of Fieldgate to an Ethernet network

4.3.3 Fieldgate GSM

Fieldgate requires an GSM external antenna, which can be purchased from Endress+Hauser as an accessory. The antenna cable plugs into the socket on the front of Fieldgate and must be mounted outside of any control cabinet or field housing. In areas of poor GSM reception, it is advisable to first test the communication before permanently fixing the antenna.



Fig. 4-11: Connection of Fieldgate to a GSM network

5 Commissioning

This chapter describes, using the example of Windows XP, the commissioning of the Fieldgate. The commissioning with other Windows operating systems differs only in detail, but if you are not sure how to proceed, we recommend that you consult your network administrator.

Before you start the commissioning:

- Check that you have administrator rights for your computer
- Check that the Fieldgate is correctly wired and powered up

We recommend that the Fieldgate is always commissioned via the service interface.

The chapter is structured as follows:

- Chapter 5.1 describes the steps necessary to establish connection via the service interface.
- Chapters 5.2 to 5.4 describe the individual steps required to set up communication with the Ethernet, Modem and GSM versions of the Fieldgate respectively.
- Chapter 5.5. describes the setup of other communication facilities such as e-mails etc.

NOTICE NOTE!

• It is also possible to configure the Ethernet version of the Fieldgate via an Ethernet, but this entails changing the IP address of your computer, since the default IP address of the Fieldgate (IP = 192.168.252.1, Subnet = 255.255.255.0) will normally be in a different domain, see chap. 12.1.1.

5.1 Establishing communication via service interface

In order to establish communication with the Fieldgate via the service interface, a standard 9600 bit/s modem and a RTU (remote terminal unit) connection must be set up on your computer. The following describes the procedure for Windows XP: for other Windows operating systems consult your network administrator.

Once set up, the RTU connection can always be used for the service interface.

5.1.1 Connect the Fieldgate

Fieldgate is supplied with a PC service with a 9-pin sub-D female and 3-pin female connector. To connect the Fieldgate to your computer:

- 1 Plug the 9-pin connector into the COM port (RS-232C) of your computer
- 2 Plug the 3-pin connector in the service port of the Fieldgate
 - This is located behind the front panel, see chap. 4.1.3

5.1.2 Set up a standard 9600 bps modem

Now set up a standard 9600 bps modem on your computer:

1 Select Start > Settings > Control Panel> Telephone and Modem Options:



2 If no modem has been set up on the computer the **Location Information** dialog appears:



- Enter your location, city dialing code, carrier code (if required) and any number required to dial out of your facility. Then check the appropriate dialing system.
- Press **OK** to continue, the **Telephone and Modem Options** dialog appears.
- If you are not sure of your data, check with your network administrator.

- Phone and Modern Options
 ?
 X

 Dialing Rules
 Moderns
 Advanced

 Image: Second Second
- 3 Select the Modem tag in the Telephone and Modem Options dialog:

- If the Standard 9600 bps Modem is in the list, go to Chapter 5.1.3
- Otherwise press Add, see below
- 4 The Install New Modem wizard starts:



- Tick the **Don't detect modem...** checkbox and press **Next** to continue.
- 5 Now select the **Standard 9600 bps Modem** from the list and press **Next** to continue:

Install New Modem	
Select the manufacture	r and model of your modern. If your modern is not listed, or if you c, click Have Disk.
Softing AG	Standard 1200 bps Modem Standard 2400 bps Modem Standard 9000 bps Modem Standard 9000 bps Modem Standard 14400 bps Modem
This driver is digitally signed	Have Disk

 Add Hardware Wizard

 Select the port(s) you want to install the modern on.

 Var have selected the following modern:

 Standard 9000 bps Modern

 On which ports do you want to install it?

 • All ports

 • Becket ports

 COM2

 COM2

 < Back</td>

 Next>

 Cancel

6 Select the **COM port** where you want to set up the modem and press **Next** to continue:

7 $\,$ When the modem has been successfully installed, press Finish to close the wizard:

Install New Modem Modem installation i	s finished!
	Your modem has been set up successfully. If you want to change these settings, double-click the Phone and Modem Options iction in Control Panet, click the Modems tab, select this modem, and then click Properties.
	KBack Finish Cance

8 The Standard 9600 bps Modem is now in the modem list.

5.1.3 Check the modem properties

1 In the **Phone and Modem Options/Modems** dialog, select **Standard 9600 bps Modem** and press **Properties**:

ialing Rules Modems Advanced	
The following modems are installed:	
Modem // Standard 9600 bps Modem //	Attached To
AddEemo	ve <u>Properties</u>

2 In the **Properties** dialog, select the **Advanced** tab:



3 Press the Change Default Preferences button:

Call prefe	ences		
🗖 Disa	connect a call if	idle for more than	m
<u>C</u> ar	cel the call if no	t connected withi	n 🗾 si
D <u>a</u> t. Co	a Protocol: npression: w control: No	pne	- -
Ele			

- Set the Flow Control parameter to None
- 4 Select the **Advanced** tab:

- Uarde	uara Cattinga -			
Taio	Data bits:	8	-	
	Davita	None	-	
	Edity.		 	
	Stop bits:			
	Modulation:			

- Check that Data bits = 8, Parity = None and Stops bits = 1
- Press **OK** to confirm any changes made in the settings and to close the dialog.
- 5 Close the remaining dialog boxes by pressing **OK**.

5.1.4 Set up the dial up connection

Now set up the dial up connection

1 Select Start > Settings > Control Panel> Network Connections:

💕 Control Panel		
Eile Edit View Favorites Tools Help		
🕒 Back 👻 🕥 🔹 🏂 🔎 Search 👔	;Folders 🕼 🍺 🗙 🍤 💷 •	
Address 📴 Control Panel		💌 🋃 Go
Name	Comments A	
bPhone and Modem Options	Configure your telephone dialing rules and modem settings.	_
Network Connections	Connects to other computers, networks, and the Internet.	_
🔮 Regional and Language Options	Customize settings for the display of languages, numbers, times, and dates.	-

2 The **Network Connection** dialog opens:

Setwork Connections				_ 🗆 🗙
Eile Edit View Favorites Tool	s Adva <u>n</u> ced <u>H</u> elp			1
🔇 Back 🔹 🕥 - 🏂 🔎 Se	earch 😥 Folders 🛛 🔯 🎯	× 🍤 📖	•	
Address 🔕 Network Connections				💌 🄁 Go
Name	Туре	Status	Device Name	Phone # or Host Addre
LAN or High-Speed Internet				
🕹 Local Area Connection	LAN or High-Speed Inter	Enabled	3Com 3C918 Integrated	
Wizard				
New Connection Wizard	Wizard			
×				Þ

- Double-click on New Connection Wizard
- 3 The New Connection Wizard opens, press Next to continue:



4 Select the option **Connect to Internet,** press **Next** to continue



5 Select the option **Set up my connection manually**, press **Next** to continue



6 Select the option Connect using a dial-up modem, press Next to continue

How do you want to connect to the Internet	met?	4
• Connect using a <u>d</u> ial-up mode	m	
This type of connection uses a mo	em and a regular or ISDN phone li	ine.
Connect using a broadband c and password	onnection that requires a use	ar name
This is a high-speed connection usi refer to this type of connection as F	ng either a DSL or cable modem. \ PPoE.	′our ISP may
C Connect using a broadband c	onnection that is <u>a</u> lways on	
This is a high-speed connection usi connection. It is always active, and	ng either a cable modem, DSL or L doesn't require you to sign in.	AN

7 If a more than one modem is available on the computer, you will be asked to select the one to be used for the connection from the **Select a Device** dialog:

This is the device that	at will be used to make the connection.
You have more than	one dial-up device on your computer.
Select the devices to	o use in this connection:
Modem - Star	ndard 9600 bps Modem (COM1) andard 56000 bps Modem (COM2)
- Woden - Sta	indard 30000 bps modern (CDM2)

- Make sure the correct one is ticked,
- Press **Next** to continue

8 Enter the name of the connection, e.g. Fieldgate Service Adapter, press Next to continue



9 Enter "0" as phone number to dial, press **Next** to continue

What is your ISP's phone number?		í.
Type the phone number below.		_
Phone number:		
0		
You might need to include a "1"	or the area code, or both. If you are not sur	e
you need the extra numbers, dial hear a modem sound, the numbe	the phone number on your telephone. If yo r dialed is correct.	ū

10 Select the connection availability, e.g. Anyone's use, press Next to continue



11 Enter your Internet Account Information



- Enter User name = "scm", Password = "scm" and Confirm password = "scm" (scm is fixed and no other is allowed)
- Select the option **Use this account name....**
- Do not select the options Make this the default Internet Connection, Turn on Internet Connection Firewall...
- Press Next to continue
- 12 Select the option **Add a shortcut...** and press **Finish** to create the connection and close the wizard.



- An icon is added to the desktop
- The connection is added to the Network Connections folder

13 The Connect Fieldgate Service Adapter dialog appears

- Press Cancel to close the dialog.

5.1.5 Dialing up

Unfortunately, Windows XP the **Flow Control** parameter back to the default value after a new connection has been added. For this reason, before the first ever connection can be made, the properties have to be changed again.

1 In the **Network Connections** dialog, right-click on **Fieldgate Service Adapter** and select the **Properties** menu



In Fieldgate Service Adapter Properties dialog, press the Configure... button
 The Modem Configuration dialog appears

X
• •
*

- Deselect the option Enable Flow Control, press OK to close the dialog
- Press **OK** to close the Fieldgate Service Adapter Properties dialog
- 3 Now double-click on the **Fieldgate Service Adapter** icon on the desktop or in the Network Connection list, the Connect... dialog appears

nnect Field	gate Service Adapter	? :
0		
<u>U</u> ser name: <u>P</u> assword:	scm ••••	
✓ Save this ○ Me op ○ Anyor	user name and password for the folk ly ne who uses this computer	owing users:
Djal:	0	•
Dial	Cancel Properties	Help

- Press Properties
4 The **Properties** dialog opens:



5 Select the modem used with the connection, then the **Networking** tab – Now select **Internet Protocol (TCP/IP)** and press **Properties**

Tune of dialum serv	er Lam calling:	
PPP: Windows 95	/98/NT4/2000, Internet	
	Settir	ngs
This connection us	es the following items:	
🗹 🏹 Internet Pro	tocol (TCP/IP)	_
🗹 🌉 QoS Packe	t Scheduler	
🖌 📑 QoS Packe 🗆 📑 File and Prin 🗋 🖳 Client for Mi	t Scheduler nter Sharing for Microsoft Networks icrosoft Networks	
☑ 🛃 QoS Packe □ 📮 File and Prin □ 🖳 Client for Mi	t Scheduler nter Sharing for Microsoft Networks icrosoft Networks	
☑ 📮 QoS Packe □ 📮 File and Prii □ 🖳 Client for Mi I <u>n</u> stall	t Scheduler hter Sharing for Microsoft Networks icrosoft Networks Uninstall	95
V Packe	t Scheduler Her Sharing for Microsoft Networks icrosoft Networks	es
QoS Packe Rile and Prii Client for Mi Install Description	t Scheduler Her Sharing for Microsoft Networks crosoft Networks	95
QoS Packe QoS Packe QoS Packe QoS Packe QoS Packe QoS Packe Install Install Description Transmission Con wide area netwoo	t Scheduler ter Sharing for Microsoft Networks crosoft Networks Uninstall Propertie http://Protocol/Internet Protocol. The defail k protocol (hat provides communication)	es ult

6 In the **Properties** dialog that now appears press the **Advanced...** button, the dialog **Advanced Properties** opens at the **General** tab

Ivanced TCP/IP Settings	?:
General DNS WINS	
This checkbox only applies when you are connected network and a dial-up network simultaneously. Whe that cannot be sent on the local network is forwarder network.	l to a local n checked, data d to the dial-up
Use default gateway on remote network	
PPP link	
Use IP header compression	
	1K Cancel
	Lancel

- Deactivate the "Use default gateway on remote network" option, press OK
- Close all dialogs, with the exception of Connect...

- 7 In the **Connect...** dialog, see Step 3, select **Dial**
- 8 Open your Internet Browser, enter the default Fieldgate service cable address http:// 192.168.253.1 then press Enter.
- 9 The **Connect to** dialog appears:

onnect to 192.	168.253.1	<u>? ×</u>
The second	4	Nº 1
User		
User name:	🖸 super	•
Password:		
	Remember my password	
	ОК	Cancel

- Enter the User Name: super
- Enter the Password: **super**
- Press **OK** to register the entries and open the Fieldgate Web Server

10 The Fieldgate entry page appears in the browser.

- You are registered with administrator rights and can now set up the Fieldgate communication parameters, see chap. 5.2 to chap. 5.5

	F	tefresh		Endress+Hause
verview		Switch to Administrator Mode		Setting
urrent Time: 30.01.	2007 10:59:04 (UTC+1h)			XML Data
Tag	Description	Current Value dd.mm.yyyy hh:mm:ss	Status dd.mm.yyyy hhomoss	max. Range min. Range
oardTemp	Endress+Hauser internal	31.289 °C 30.01.2007 10:59:02	OK	
ank01	FMI21 Lentan VZ33	91.581 % 30.01.2007 10.59102	26.01.2007 10.29.19	
ank02	FMI21 WOERMENT EM630	0.153 %	LL.	

5.1.6 Securing changes made via the service interface

- 1 When Fieldgate has been configured:
 - Select Settings => Special to restart the system and register the changes

	System Restart	
Confirm System Restart	A	
	Send Reset	

- In the **System Restart** dialog, check the "Confirm System Restart" box and press **Send**
- The Fieldgate restarts with the changes made via the service interface permanently stored.

5.2 Fieldgate with Ethernet interface

The Ethernet connection must be set up in the Fieldgate and in the host computer. Normally, both must operate in the same IP address domain. Exactly which parameters are required depends upon the way your local area network functions. If you are unsure of what to enter, consult your network administrator.

5.2.1 Communication parameters

The table summarizes the communication parameters for the Fieldgate with Ethernet interface.

Parameter	Example	Your value	Description
Host name	MyFieldgate		Symbolic name (string) of the Fieldgate in the DHCP server – Required for BootP and DHCP server only – This must be allocated by your network administrator and be present on the DHCP server before it can be used
IP Assignment	Manual BootP-Protocol DHCP		 Way in which the IP address is assigned to the Fieldgate Manual: the Fieldgate works with a fixed address BootP: the address is assigned automatically by the host (used in older operating systems) DHCP: the address is assigned automatically by the host
IP Address	10.125.33.100		IP address of the fieldgate – Leave blank if BootP or DHCP is selected
Gateway	10.125.32.1		IP address of the gateway connecting the LAN to WWW via firewall/router - Leave blank if BootP or DHCP is selected
Netmask	255.255.252.1		IP address of the netmask – Leave blank if BootP or DHCP is selected
DNS1	10.125.32.10		IP address of Domain Name Server 1 – Leave blank if DNS address found automatically
DNS2	10.125.32.11		IP address of Domain Name Server 2 – Leave blank if DNS address found automatically

LAN parameters

If the host computer is already integrated into your local area network it is possible to check the network settings by using the IPconfig/all command in the Command Prompt:

1 Select Start => Programs => Accessories => Command Prompt

- The Command Prompt window opens
- Enter the command IPconfig/all and press Enter
- The IP settings for your network are listed (the values in the graphic have been deleted for security reasons)

Comm-	and Prompt	
C:\Docu	ments and Settings∖i2401550>IPconfig∕all	-
Windows	IP Configuration	
	Host Name	
Etherne	t adapter Local Area Connection:	
Control	Connection-specific DNS Suffix .: Description	met
	Physical Address Yes Dhop Enabled Yes Autoconfiguration Enabled Yes IP Address	

5.2.2 Set up the Fieldgate via service interface

- 1 Press "Switch to Administrator Mode"
 - Now press "Settings" followed by "Network"
 - The **Network** dialog appears:

Manual Fatry
Manual Entry
10.126.60.15
10.126.60.1
255.255.252.0
10.126.16.21
194.25.2.132

- Scroll down to Ethernet Setup and enter the parameters as appropriate (The screenshot above is an example for manual settings)
- Press Send to download the parameters to the Fieldgate
- 2 Now configure any other communication parameters, e.g. e-mails, as described in chap. 5.5.
- 3 You may now wish to configure additional Fieldgate device functions, e.g. limit values, scanning cycle, in the Fieldgate Web server as described in chap. 6.
- 4 When configuration is complete, select **Settings => Special** to restart the system and register the changes, see chap. 5.1.6
 - In the System Restart dialog, check the "Confirm System Restart" box and press Send
 - The Fieldgate restarts with the changes made via the service interface permanently stored
- 5 When the restart is complete, close the web server, unplug the service connector and switch off the Fieldgate. Close the front panel
- 6 Plug in the Ethernet connector and switch on the Fieldgate. Connect the Fieldgate via the host computer as described in chap. 5.2.3.

5.2.3 Connect to Fieldgate via Ethernet

If Fieldgate has been allocated a fixed IP address, your computer must have an IP address in the same range in order to communicate with it. If this is not the case, change the IP address of your computer as described in chap. 12.1.1 before connecting. The connection is made as follows:

- 1 Start the Web browser, e.g. Internet Explorer.
- 2 Enter the new IP address of the Fieldgate e.g. 10.125.33.100 in the address field of your browser and press the "Enter" key of your computer.
- 3 The **Connect to** dialog appears:
 - Enter the User Name: **super** (if not changed during set-up)
 - Enter the Password: **super** (if not changed during set-up)
 - Press **OK** to register the entries and open the Fieldgate Web Server

4 The Fieldgate entry page appears in the browser.

- You are registered with the rights associated with your user name.

5.3 Fieldgate with analog modem

The telephone connection must be set up in both the Fieldgate and the host computer, whereby the latter must be equipped with an analog modem. There are two basic use cases:

- The user dials into the Fieldgate and views the required information. In this case, only the modem needs to be set-up
- The Fieldgate is prompted to call back the user via an Internet Service Provider. In this case both the modem and the ISP dial-in parameters must be set up. In addition you will have to set up the mail, and if necessary, time server parameters, see chap. 5.5.

For additional information on Internet Service Providers, see chap. 12.2.

5.3.1 Communication parameters

The tables summarize the setup parameters.

Modem s	setup
---------	-------

Parameter	Your values	Description
Modem Country Selection		Select specifications that apply to the modem/network
IP Address Modem Server		IP address of the Fieldgate on dial-up (default: 192.168.254.1) – Leave default address unless router in use
IP Address Modem Peer		IP address assigned to dial-up computer (default: 192.168.254.2). – Router address if used, otherwise leave default address
Additional AT commands		For Service only: no entry required

Dial-in setup

Parameter	Example	Description
ISP Phone Number		Dial-in number of Internet Service Provider
ISP User Name		User Name provided by Internet Service Provider
ISP Password		Password provided by Internet Service Provider
ISP DNS1		IP address of the Domain Name Server provided by ISP – Leave blank, will normally be assigned
ISP DNS2		IP address of backup Domain Name Server, see above
Max Daily Dial-in Time		Limit of the daily dial-in time to the specified server – Default and max. value 1440 min (1 day)
Use Tone Dialing		Tone dialing (box checked) or pulse dialing (box unchecked)
Wait for Dial Tone		Causes Fieldgate to wait for the dialling tone before dialling – Selected: e.g. public network – Not selected: e.g. internal network
No. of Dial Retries		Number of retries if no connection to server can be made
No. of Rings		Number of rings before Fieldgate takes incoming call – 0: never answers, but calls back (check box Callback ISP) – 3: default setting, avoids spurious calls
Callback ISP		Causes Fieldgate to call back when it receives a call with less rings than the value in "No. of rings"
Dial in Permanently		Causes Fieldgate to dial permanently into the server

5.3.2 Set up the Fieldgate via service interface

1 Press Switch to Administrator Mode

Now press Settings followed by Network

Modem Country Selection	United States
IP-Addr. Modem Server	192.168.254.1
IP-Addr. Modem Peer	192.168.254.2
Additional AT Commands	

- In the Modem Setup dialog enter the parameters as appropriate, see Table 5-2 (The screenshot above is an example for US specifications, with default settings for IP addresses)
- Press Send to download the parameters to the Fieldgate
- 2 Now scroll down to the **Dial-up Setup** dialog

ISP Phone Number (*)	28707360
ISP Username (*)	arcor
ISP Password (*)	
ISP DNS1 (the Fieldgate tries to fetch DNS1/2 from ISP) ISP DNS2	
Max. Daily Dial In Time [min]	
Use Tone Dialing (otherwise Pulse)	5
Wait for Dialtone	E Contraction of the second se
Number of Dial Retries	3
Number of Rings until Off-Hook	0
Callback ISP on Phone Rings	
Dial In Permanently	F

- Enter the parameters as appropriate, see Table 5-3 (The screenshot above is an example for callback to arcor, Berlin)
- Press Send to download the parameters to the Fieldgate
- 3 Now configure any other communication parameters, e.g. e-mails, as described in chap. 5.5.
- 4 You may now wish to configure additional Fieldgate device functions, e.g. limit values, scanning cycle, in the Fieldgate Web server as described in Chapter 6.
- 5 When configuration is complete, select **Settings => Special** to restart the system and register the changes.

	System Restart	
Confirm System Restart	۲	
	Send Reset	

- 6 In the System Restart dialog, check the "Confirm System Restart" box and press Send
 - The Fieldgate restarts with the changes made via the service interface permanently stored
- 7 When the restart is complete, close the web server, unplug the service connector and switch off the Fieldgate. Close the front panel.
- 8 Plug in the telephone connector and switch on the Fieldgate. Connect the Fieldgate via the host computer as described in chap. 5.3.4.

5.3.3 Set up the dial up connection

Now set up the dial up connection for the analog modem installed on your computer:

- 1 Start the New Connection Wizard and follow the procedure in chap. 5.1.4
 - In the **Select a Device** dialog, select the analog modem
 - In the Connection Name dialog, enter e.g. Fieldgate Analog Connection
 - In the Number to Connect dialog, enter the phone number of the Fieldgate
 - All other settings are identical
- 2 In the Network Connections dialog (Start > Settings > Network Connections), rightclick on the new connection, e.g. Fieldgate Analog Connection and select Properties. The Properties dialog opens:

☑ 🎒 Modem - S ☑ 🍣 Modem - S	tandard 9600 bps Moder tandard 56000 bps Mode	m (COM1) m (COM2)
•		>
All devices call	the same numbers	Configure
Phone number		
Area code:	Phone number:	Alternates
Country/region	code;	Mitel
		*
Use dialing	rules	Dialing <u>B</u> ules

3 Select the modem used with the connection, then the **Networking** tab - Now select **Internet Protocol (TCP/IP)** and press **Properties**



4 In the **Properties** dialog that now appears press the **Advanced...** button, the dialog **Advanced Properties** opens at the **General** tab

vanced TCP/IP Settings	<u>?</u> >
General DNS WINS	
This checkbox only applies when you are connected to a local network and a dial-up network simultaneously. When checked, da that cannot be sent on the local network is forwarded to the dial-up network.	ata)
Use default gateway on remote network	
PPP link	
Use IP header compression	

- Deactivate the "Use default gateway on remote network" option, press OK
- Close all dialogs

5.3.4 Connect to Fieldgate

The connection is made as follows, for more details see chap. 5.1.5, Step 3 onwards:

- 1 In the **Network Connections** dialog, double-click on e.g. **Fieldgate Analog Connection** or click on the icon on your desktop, the Connect dialog appears.
 - Click the **Dial** button to make the connection
- 2 Open your Internet Browser, enter the default Fieldgate address http://192.168.254.1 then press Enter.
- 3 The **Connect to** dialog appears:
 - Enter the User Name: **super** (if not changed during set-up)
 - Enter the Password: **super** (if not changed during set-up)
 - Press **OK** to register the entries and open the Fieldgate Web Server
- 4 The Fieldgate entry page appears in the browser.
 - You are registered with the rights associated with your user name.

5.4 Fieldgate with GSM modem

There are two ways of setting up the device:

- Point-to-point connection to the Fieldgate via GSM: the Fieldgate modem and the host dial-in connection must be set-up
- Connection via the GPRS (General Packet Radio Service) of your GSM provider: the Fieldgate modem, the GPRS parameters and optionally the dynamic DNS parameters must be set up

When dynamic DNS is used:

- the GSM provided must allocate Fieldgate a Public IP address
- Fieldgate then is permanently available in the Internet and is addressed by a domain name.

More information on GPRS and dynamic DNS providers can be found e.g. by a targeted search in Internet for "GPRS Access Points" or "Dynamic DNS", or see chap. 8.5.

5.4.1 Communication parameters

Table 5-4 summarizes the GSM modem setup parameters. The SIM card provider, telephone number and SIM card PIN must be known before the fieldgate is setup.

Parameter	Your values	Description
SIM PIN		PIN supplied with the SIM card
Additional AT commands		For Service only: no entry required
GSM Operator		Selects GSM operating mode of Fieldgate Auto: Fieldgate automatically searches for provider Manual: Fieldgate uses provider configured in dialog
IP Address Fieldgate on Dial In		 IP address of the Fieldgate (default: 192.168.254.1) Leave default address unless your PC modem does not accept this address range
IP Address assigned to Dial In Peer		IP address of caller (default: 192.168.254.2). – Router address if used, otherwise leave default address

GPRS setup:

GSM modem setup:

Parameter	Your values	Description
GPRS Dial in permanently		When box ticked, causes Fieldgate to dial permanently into the server
Access Point Name APN		GPRS access point of SIM card provider
GPRS User Name		User name for GPRS access point
GPRS User Password		Password for GPRS access point
GPRS QoS		For Service only: no entry required
Max. Daily Traffic Limit [kByte]		 Limits the number of kbytes that can be exchanged in a day Range 0 - 99999 kByte; 0 = unlimited If a limit is exceeded Fieldgate breaks off connection If Fieldgate knows the time of day, re-connection is possible at midnight, otherwise on the next day at the time the limit was set The traffic can be viewed in Info, see chap. 6.3.7
Test Connection Server		 Server URL to which a test connection is made Fieldgate calls the URL to check that it is in then Internet, but breaks off the connection when it receives the handshake

DynDNS setup:

Parameter	Your values	Description
Get DynDNS URL		URL required to call up DNS provider
Update Cycle DynDNS		Period between connection to dynamic DNS provider

Dial-up setup

See Table 5.3 in chap. 5.3.1

5.4.2 Set up the Fieldgate via service interface

The Fieldgate must be installed and powered up. **Do not** insert the SIM card until you are instructed to do so!

1 Press Switch to Administrator Mode

Now press Settings followed by Network

	GSM Setup
SIM-Pin	
Additional AT Commands	
GSM Operator	Auto
IP-Addr. Fieldgate on Dial In	192.168.254.1
IP-Addr. assigned to Dial In Peer	192.168.254.2

- In the GSM Setup dialog enter the SIM Card PIN, e.g. 6348, see Table 5-4 (Caution: The entry is hidden – make sure that Caps Lock is not active!)
- Press Send to download the parameters to the Fieldgate
- 2 If you want to use GPRS, scroll down to the **GPRS Setup** dialog, otherwise configure Fieldgate to dial up with the **Dial-up Setup** as described in chap. 5.3.2.

	GPRS Setup
CPPS Dial In Permanently	F
Access Point Name APN	apra swisscom ch
GPRS Username (")	
GPRS Password (*)	
GPRS QoS	
Max. Daily Traffic Limit [kByte]	0
Test Connection Server	www.endress.com
	Send Reset

- Enter the parameters as appropriate, see Table 5-5 (The screenshot above is an example for Orange CH)
- Press Send to download the parameters to the Fieldgate
- Do not activate "GPRS Dial In Permanently" until you have tested the connection!
- 3 If you want to use a dynamic DNS server, scroll down to the **DynDNS Setup** dialog (for more information on Dynamic DNS servers see chap. 8.5):



- Enter the parameters as appropriate, see Table 5-6 (Example for dyndns.org is: <username>:<password>@members.dyndns.org/nic/ update?system=dyndns&hostname=<hostname>&myip= where <username>, <password> and <hostname> are allocated when you register)
- Press **Send** to download the parameters to the Fieldgate
- 4 Now configure any other communication parameters, e.g. e-mails, as described in chap. 5.5.
- 5 You may now wish to configure additional Fieldgate device functions, e.g. limit values, scanning cycle, in the Fieldgate Web server as described in chap. 6.

6 When configuration is complete, select **Settings** => **Special** to restart the system and register the changes



- In the **System Restart** dialog, check the "Confirm System Restart" box and press **Send**
- The Fieldgate restarts with the changes made via the service interface permanently stored
- 7 When the restart is complete, close the Web browser, unplug the service connector and switch off the Fieldgate
- 8 Insert the SIM card in the receptacle provided and close the front panel.
- 9 Ensure that the antenna is connected and switch on the Fieldgate. Connect the Fieldgate via the host computer as described in chap. 5.4.4 or chap. 5.4.5.

5.4.3 Set up the dial-up connection in your computer

A dial-up connection can only be set up if the PC has a modem and the GSM provider supports CSD. Before you set up the dial-up connection, make sure that the GSM parameters have been configured as described in Chapter 5.4.2.

- 1 Start the **New Connection Wizard** and follow the procedure in chap. 5.1.4
 - In the **Select a Device** dialog, select the analog or GSM modem
 - In the Connection Name dialog, enter e.g. Fieldgate GSM Connection
 - In the **Number to Connect** dialog, enter the phone number of the Fieldgate
 - All other settings are identical
- 2 In the Network Connections dialog (Start > Settings > Network Connections), rightclick on the new connection, e.g. Fieldgate Analog Connection and select Properties. The Properties dialog opens:
- 3 Select the modem used with the connection, then the **Networking** tab - Now select **Internet Protocol (TCP/IP)** and press **Properties**
- 4 In the **Properties** dialog that now appears press the **Advanced...** button, the dialog **Advanced Properties** opens at the **General** tab
 - Deactivate the "Use default gateway on remote network" option, press OK
 - Close all dialogs with **OK**.

5.4.4 Connect point-to-point to Fieldgate

The connection is made as follows, for more details see chap. 5.1.5, Step 3 onwards:

- 1 In the **Network Connections** dialog, double-click on e.g. **Fieldgate GSM Connection** or click on the icon on your desktop, the **Connect** dialog appears:
 - Click the **Dial** button to make the connection
 - If "GPRS Dial In Permanently" has been selected, the first dial-in attempt cuts the existing GPRS connection and the Fieldgate idles for 5 minutes. In this period a second attempt to dial in must be made, otherwise the Fieldgate will connect again to the GPRS.
- 2 Open your Internet Browser, enter the default Fieldgate address http://192.168.254.1 then press Enter.
- 3 The **Connect to** dialog appears:
 - Enter the User Name: **super** (if not changed during set-up)
 - Enter the Password: **super** (if not changed during set-up)
 - Press OK to register the entries and open the Fieldgate Web Server
- 4 The Fieldgate entry page appears in the browser.
 - You are registered with the rights associated with your user name.

5.4.5 Connect via GPRS to Fieldgate

In order to connect your Internet Browser to the Fieldgate via GPRS, the provider must assign it a public IP address.

- 1 Open your Internet Browser, enter the Fieldgate domain name: http://<hostname> or <IP address> then press Enter.
- 2 The **Connect to** dialog appears:
 - Enter the User Name: super (if not changed during set-up)
 - Enter the Password: **super** (if not changed during set-up)
 - Press **OK** to register the entries and open the Fieldgate Web Server
- 3 The Fieldgate entry page appears in the browser.
 - You are registered with the rights associated with your user name.

5.5 Miscellaneous server settings

The **Network** menu contains two additional server setups that can be configured as required.

5.5.1 Time Server Setup

Fieldgate can automatically synchronise its time on every new start with the aid of a time server. An Internet connection or a time server in the local network is required for this. Endress+Hauser has its own time server, IP address= 62.154.220.81, which we recommend that you use. If you have any questions, please contact your network administrator.

Procedure

1 If not already active, press Switch to Administrator Mode => Settings => Network

- Scroll down to reveal the **Time Server Setup** page.
- Enter your settings and confirm with \boldsymbol{Send}

	Time Server Setup
Time Server	62.154.220.81
Protocol	http 💌
Periodic Fetch	7d •
Timezone Setting (valid for http time service)	Berlin
Time Offset (related to UTC)	+2h 💌
Date/Time Format	dd.mm.yyyy hh:mm:ss 💌
manual Timestamp (dd.mm.yyyy hh:mm:ss)	
	Send Reset

- 2 A manual time setting can be entered as follows:
 - If Fieldgate is scanning, switch it off temporarily as described in Chapter 6.3.4
 - Set **Protocol** to the option "manual"
 - Enter the time stamp in the field provided, see also the table below
 - Confirm the setting with **Send**

Time server setup

Parameter	Description
Time Server	Enter the IP address of the time server here.
Protocol	Set the protocol used by the time server here: – manual: Manual time setting timing is restarted with settings entered in "manual Timestamp" The time server operator can tell you the protocol the server uses.
Periodic Fetch	Enter the time interval after which the internal clock is to be resynchronised with the time serverNote: every synchronization causes a data transfer of several kBytes which is debited from your SIM card or GPRS account.
Time Zone Setting	If appropriate, enter the time zone for which the http service is valid – Enter the English name of the city the Windows Time Zone list nearest your location – The list is opened by Settings => Control Panel => Time and Date => Time Zone
Time Offset	If appropriate, enter an offset from UTC time here
Date/Time format	Select the date and time format to be used in the Web pages from the drop-down menu
Manual Timestamp	If no time server is available in the LAN (Protocol = manual), set the time manually here. – Format: dd.mm.yyyy hh:mi:ss – If the Fieldgate is switched off, the manually set time is lost.

5.5.2 Miscellaneous Server Setup

This setup is required if Fieldgate accesses Internet via a proxy server.

Procedure

- If not already active, press Switch to Administrator Mode => Settings => Network
 Scroll down to reveal the Miscellaneous Server Setup page.
 - Enter your settings and confirm with **Send**.

	Miscellaneous Server Setup
Proxy Server	
Port Number Proxy Server	
Proxy Server Username	
Proxy Server Password	
Port Number Web Server	80
Port Number Pass-Through-HART	3222
	Send Reset

Miscellaneous server setup

Parameter	Description
Proxy Server	Enter IP address of proxy server
Port Number proxy Server	Enter port number of proxy server (8080 is standard = http:\\)
Proxy Server Username	If the proxy server demands authentification, enter the user name here
Proxy Server Password	If the proxy server demands authentification, enter the password here
Port Number Web Server	Enter port number of Fieldgate's embedded web server (80 is standard)
Port Number Pass-through HART	Enter the port number via which you can configure the connected devices per Telnet. - The default value = 3222 should be kept unless this is blocked by the firewall.

5.6 Message Settings

The **Message** page allows you to configure e-mails, messages for the Field Information Server and SMSs to be sent on an event or alarm.

5.6.1 Common Message Settings

- 1 If not already active, press **Switch to Administrator Mode => Settings => Message** - Scroll down to reveal the **Common Message Settings** page.
 - Enter your settings and confirm with $\boldsymbol{Send.}$

Periodic Measurement Messages	15min 💌	
Remind pre-Boot Limit Alarms	E	
Message assigned IP Address	F	
Additional Text in Limit Messages		. đ
Data Logging Email on		
- Periodic Measurement Message	E	
- Log Buffer full	E	
- Device Event	-	

Common Message Settings

Parameter	Description
Periodic Measurement	Select period for sending measurement messages from drop down menu.
Messages	
Remind pre-Boot Limit	Check this box to stop the Fieldgate sending measurement mails when it is restarted after
Alarms	being powered down.
Message assigned IP	Check this box to send the assigned IP address of the DHCP server as a information to the
Address	alarm receiver.
Additional Text in Limit	Optional text that is sent with a limit message.
Messages	
Data Logging Email on	Check the box to send an e-mail when:
(Visible only when DAT	 Periodic measurement mail.
module installed in Fieldgate)	– Log buffer full.
	– Device event.

5.6.2 Mail Setup

Configure the "Mail Setup" settings in order to send emails.

NOTICE NOTE!

- Fieldgate only supports the "Simple Mail Transfer Protocol" (SMTP) to send emails.
- The method SMTPS for secure communication in e-mail transport via SMTP over SSL/TLS is not supported by Fieldgate.
- Please consider when selecting the e-mail provider that the SMTP protocol is supported. Encryption /authentication via SMTPS (SSL/TLS) is not supported by Fieldgate.

Procedure

- 1 If not already active, press Switch to Administrator Mode => Settings => Message - Scroll down to reveal the Mail Setup page.
 - Enter your settings and confirm with **Send**.

SMTP-Gateway SMTP Username SMTP Password	
Sender Address	
Address Service Alarm Mails	
Address Limit Alarm Mails	
Address Measurement Mails	
Format Measurement Mails	None -

Mail setup

Parameter	Description
SMTP Gateway	 Enter the IP address or URL of your e-mail server here: Note: if no SMTP server is entered, Fieldgate will try to send the e-mail directly to the server used by the receiver. In this case, the e-mails are mostly classified as spam.
SMTP User Name	If authentication is required for the specified SMTP Gateway, enter the user name here: – Leave blank if no authentication is requested or no SMTP Gateway is used.
SMTP Password	If authentication is required for the specified SMTP Gateway, enter the password here: – Leave blank if no authentication is requested or no SMTP Gateway is used.
Sender Address	 Enter the sender address of the Fieldgate here, e.g. fieldgate@company.co.uk: With some providers, the e-mail address of the account holder must be specified as the sender address. No mails will be accepted from other sender addresses. Where the sender address is freely selectable, choose a serious address to avoid trouble with spam filters.
Address Service Alarm Mails	Enter the recipient of the service alarm mails here, e.g. name@company.co.uk.
Address Limit Alarm Mails	 Enter the recipient of the limit alarm mails here, e.g. name@company.co.uk: Alarm notifications are sent in accordance with the settings made in the "Message on Limit" column of the device details page, see chap. 6.4.
Address Measurement Mails	 Enter the recipient of the measurement mails here, e.g. name@company.co.uk: Measurement notifications are sent in accordance with the settings of the parameters below.
Periodic Measurement Mails	Select period for sending mails from dropdown menu.
Format Measurement Mails	 Select format for sending mails from dropdown menu: XML is required if the e-mails are to evaluated by the Fieldgate Data Access software and/or SupplyCare.

5.6.3 Field Information Server (FIS) Setup

Use the Field Information Server (FIS) to send messages via hypertext transfer protocol secure (https).

The following information can be exchanged between the FIS and Fieldgate:

- Periodic Measured Value Transmission
- at the transmission intervals set in Periodic Measurement Messages, see chap. 5.6.1.
- Device Configuration Fieldgate sends its configuration to the FIS. If required, FIS can send back a new configuration.
 Time of Day
 - is synchronized every time Fieldgate establishes contact with the FIS. The time zone can be set in Time Server Setup, see chap. 5.5.1.
- Firmware Update If required, the FIS can start a Fieldgate firmware update.

Procedure

- 1 If not already active, press Switch to Administrator Mode => Settings => Message - Scroll down to reveal the Mail Setup page.
 - Enter your settings and confirm with **Send.**



Field Information Server	Parameter	Description
(FIS) Setup	Enable FIS	Check this box to activate the FIS functionality of the Fieldgate.
	FIS URL	Enter the IP address or the URL of the FIS.
	FIS Phonenumber	 The field appears only for the GSM version of the Fieldgate: Enter the telephone number of the FIS. If the Fieldgate is contacted via this number, it immediately generates a measured value message for the FIS. The call is not answered.
	Send Alarm Messages to FIS	Check this box to send alarm messages to the FIS: – Note: the FIS can forward alarm messages to other groups of receivers. Contact your FIS administrator to set them up.
	Send Limit Messages to FIS	 Check this box to send limit messages to the FIS: Note: the FIS can forward alarm messages to other groups of receivers. Contact your FIS administrator to set them up.

5.6.4 SMS Setup

The Fieldgate with GSM modem is also able to send SMS mails on events or alarms.

Procedure

- If not already active, press Switch to Administrator Mode => Settings => Message

 Scroll down the menu to reveal the SMS Setup page.
 - Enter your settings and confirm with **Send**.



SMS setup

Parameter	Description
Enable SMS send	Check the box to enable the SMS function.
SMS Phonenumber 1	Enter the phone number of a first person to be contacted: – International telephone number are to be entered as e.g. +33
SMS Phonenumber 2	Enter the phone number of a second person to be contacted: – International telephone number are to be entered as e.g. +33

6 Configuring the Fieldgate

This chapter describes the user interface of the Fieldgate Web server as well as the setting up of ranges, alarms etc. within it.

NOTICE NOTE!

You cannot change device parameters with the Fieldgate Web Server. This requires the help of a configuration tool, e.g. FieldCare, that uses Fieldgate as a pass-through interface

6.1 Logging on

Once the IP address or domain name has been entered in your web browser and the connection made, you are prompted to enter a user name and the password.

NOTICE NOTE!

All Fieldgate FXA320 passwords are case sensitive and are limited to 8 characters without spaces

onnect to 10.1	25.35.146	?
User		
User name:	🖸 super	•
Password:	••••	
	Remember my password	
	OK Ca	ancel

Default user roles and passwords

Table 6–1 lists the user roles with passwords that are currently available in the Fieldgate. Security Setup, chap. 6.3.2, provides more information on setting up passwords etc.

Role	Default user name	Default password	Rights
Administrator	super	super	 Can access Fieldgate in both User and Administrator Mode: Can configure network settings Can set all passwords and user IDs Can change visualisation page settings Can set events, alarms, e-mail and time parameters Can set special page options Can reset Fieldgate to factory settings
User	eh	eh	Can access Fieldgate in User Mode only:Can change user passwordCan view settings, information, devices etc.

Table 6-1: Fieldgate user roles and rights

NOTICE NOTE!

• To avoid unauthorized access to the Fieldgate, we recommend that the user names and passwords are changed during commissioning.

6.1.1 Disconnecting

To exit the web browser, simply close the internet browser.

6.2 User interface

Once logged on, depending upon the devices connected, a display such the following might appear in the web browser. If you are connecting up for the first time, it is also possible that only the Navigation bar appears, see chap. 6.2.2, because the Fieldgate still needs to be set up.

FXA320-Stroh	maier - Overview			
AutoRefresh Overview	Refre	sh Switch to Administrator Mode		Endress+Hauser Settings
Current Time: 30.01.	2007 10:59:04 (UTC+1h)			XML Data
Tag	Description	Current Value dd.mm.yyyy hh:mm:ss	Status dd.mm.yyyy hhomoss	max. Range min. Range
BoardTemp	Endress+Hauser internal	31.289 °C 30.01.2007 10.59:02	OK	
Tank01	FMI21 Lentan VZ33	91.581 % 30.01.2007 10.59102	26.01 2007 10.29.19	
Tank02	FMI21 WOERMENT FM630	0.153 % 30.01.2007 10.59/02		
Current Time: 30.01.	2007 10:59:04 (UTC+1h)			XML Data

Approx. 1 second update time is required for every measured value in the overview. For a large network, this means that the build up of the overview can be slow.

The user interface consists of the following elements:

- Menu bar (belongs to the web browser installed)
- Navigation bar
- Settings pages

6.2.1 Menu bar

Example of how the menu bar is displayed in MS Internet Explorer



The IP address of the Fieldgate is entered in the address field of the Internet web browser.

NOTICE NOTE!

- The menu bar contains the standard functions of the installed web browser. More detailed information on the individual menus is provided in the documentation on the web browser.
- It is possible that additional or modified menu bars appear when Fieldgate is operating with plug-ins from other applications.

6.2.2 Navigation bar

The navigation bar offers the following functions in **User** or **Administrator** mode.

In User Mode:

AutoRefresh	<u>Refresh</u>	Endress+Hauser
Overview	Switch to Administrator Mode	Settings

Function	Description	
AutoRefresh	 Automatically updates the display every 120 sec by default Click on AutoRefresh to activate function The default value can be changed in the Address line of the Internet explorer: scan&refresh = xxx (s) Click on AutoRefresh OFF to deactivate function 	
Refresh	Click to manually update the current display	
Endress+Hauser	Click to open the Endress+Hauser website	
Overview	Displays the values you have selected for monitoring and visualisation	
Switch to Administrator Mode	 Switches the navigation to Administrator Mode You must enter user name and password if did not log on with administrator rights 	
Settings	 Displays information on Fieldgate location and hardware Location: shows Fieldgate location information User: allows you to change your password Input: allows the device web settings to be viewed Info: displays various Fieldgate logs 	

Table 6–2: Functions available in User mode

In Administrator Mode:

AutoRefresh	Refresh		Endress+Hauser
<u>Overview</u>	Switch to	<u>User Mode</u>	Settings

Function Description				
AutoRefresh	No function in Administrative Mode			
Refresh	Click to manually update the current display			
Endress+Hauser	Click to open the Endress+Hauser website			
Overview	Displays the values you have selected for monitoring and visualisation			
Switch to User Mode Switches the navigation to User Mode:				
Settings	 Displays information on Fieldgate location and hardware Location: shows Fieldgate location information User: allows you to configure user access rights Network: allows network access to be configured Mail: allows e-mails to be configured Scan: allows scanning of devices to be configured Input: allows the device web settings to be configured Info: displays various Fieldgate logs 			

Table 6-3: Functions available in Administrator Mode

6.2.3 Settings pages

Depending upon whether User or Administrator Mode is selected, clicking on Settings reveals the Fieldgate information or configuration pages. A change from one view to another is made by clicking on:

Switch to Administrator Mode/Switch to User Mode

as appropriate and when prompted, by entering the corresponding password, see chap. 6.1.

User Mode In User Mode, **Settings** provides read-only views of the Fieldgate location, input settings and information logs, which are displayed by pressing the appropriate menu. The **Password** menu allows you to change your user password, see chap. 6.3.2.



Administrator Mode

In Administrator Mode, **Settings** allows you to change the configuration of the Fieldgate and to view various information logs. A full description of the various functions are to be found in the following sections.

FXA320-Stroh	maier - Settings ·	Location					
AutoRefresh		Refre	esh Dudah er l	In an Manda			Endress+Hauser
Location	User	Network	Message	Scan	Input	Special	Info
			Fieldgate Lo	cation			
Fieldgate Identif Fieldgate Locati	ication on		FXA320-Shohmaier Strohmaier Deton Mau	lburg	2		
			Send	Reset			
Current Time: 30.01.1	2007 11:21:59 (UTC+1h)						XML Data

6.3 Settings menu

Settings contains various menus that can be used to set up the Fieldgate Web server.

6.3.1 Fieldgate location

Fieldgate location provides you with the option of entering additional information on the location and characteristics of the Fieldgate. These data are entered in the Administrator Mode but have no effect on the functionality of the Fieldgate.

- 1 If not already selected, press Switch to Administrator Mode and log in as administrator.
- 2 Press **Settings** (=> Location), the Fieldgate location screens appear:

	Fieldgate Location	
Fieldgate Identification Fieldgate Location	PX420	
	Send Reset	
urrent Time: 30.01.2007 11:21:59 (UTC+1h)		XML Data

- 3 Enter the parameters required their significance is described in Table 6-4.
- 4 Press **Send** to download the parameters to the Fieldgate.

Parameter	Description					
Fieldgate	Enter the name of the Fieldgate (e.g. FXA320): This is also displayed on the overview page, in					
Identification	the header of your browser, in the XML file and the header of the e-mail.					
	Note!					
	The following characters are permitted for the Fieldgate identification (= name of Fieldgate).					
	– Letters "a " "z " and "A " "Z " (without taking case into account)					
	– Numbers " 0 " " 9 "					
	- Special characters e.g ". " (= period) and "- " (= minus), but not as the first character					
	All other characters are not permitted. These include German umlauts, symbols such as "&" etc.					
Fieldgate Location	Enter any additional information on the location of the Fieldgate here. These data have no effect					
	on the functionality and solely serve to provide additional information.					
Send	Press to register your changes in the Fieldgate.					
Reset	Press to discard any changes made since the previous send.					

Table 6-4: Fieldgate location parameters

Fieldgate location parameters

6.3.2 User

Access rights to the Fieldgate are managed with the **User** function. As the administrator, you can create and manage up to five user accounts here.

NOTICE NOTE!

• To avoid unauthorised access to the Fieldgate setup parameters, the default passwords should always be changed from the default settings!

Procedure

- 1 If not already selected, press **Switch to Administrator Mode** and log in as administrator.
- 2 Press **Settings => User**: the **User setup** dialog appears:



- 3 Enter the parameters you require their significance is described in the table below:
- 4 Press **Send** to download the user parameters to the Fieldgate.

User Setup parameters

Parameter	Description
Username	Enter a user name – max. 8 characters, no umlauts, no special characters
Password	Enter a password for user name – max. 8 characters, no umlauts, no special characters
Allow Fieldgate Administration	Check if the user is allowed change the Fieldgate configuration – Deactivate if the user is allowed to view parameters only
Send	Press to register your changes in the Fieldgate.
Reset	Press to discard any changes made since the previous send.

Table 6-5: Significance of User Setup parameters

6.3.3 Network and Messages

Network Setup

Network and **Messages** allow you to set up the communication parameters of your Fieldgate as described in the following sections:

- Chapter 5.2: Fieldgate with Ethernet
- Chapter 5.3: Fieldgate with analog modem
- Chapter 5.4: Fieldgate with GSM modem
- Chapter 5.5: Miscellaneous communication settings
- Chapter 5.6: Mail settings

	Ethernet Setup
Host Name (")	
P Assignment (*)	Manual Entry
P Address	10.125.35.146
Sateway	10.125.32.1
Vetmask	255.255.252.0
DNS1 (")	10.125.32.10
NS2 (*)	

	Mail Setup
SMTP-Gateway	
SMTP Username	
SMTP Password	
Sender Address	
Address Service Alarm Mails	
Address Limit Alarm Mails	
Address Measurement Mails	
Format Measurement Mails	None 💌

The functions offered are tailored to the Fieldgate version. Table 6–6 gives an overview together with the exact location of the setup description:

Setup Function	Fieldgate/Ethernet	Fieldgate/Analog	Fieldgate/GSM	Chapter
Ethernet	Х			5.2, 5.2.1, 5.2.2
Modem		X		5.3, 5.3.1, 5.3.2
Dialup		X	Х	5.3, 5.3.1, 5.3.2
GSM			X	5.4, 5.4.1, 5.4.2
GRPS			X	5.4, 5.4.1, 5.4.2
Time Server	X	Х	X	5.5, 5.5.1
Dynamic DNS	X	X	Х	5.4.2
Miscellaneous	Х	X	Х	5.5.2
Server				
Message	X	Х	Х	5.6.1
SMS			X	5.6.2
Message Text	X	Х	X	5.6.3

Table 6-6: Setup pages as a function of Fieldgate communication interface

6.3.4 Scan

Scan sets up the conditions for starting a scan of the devices connected to the Fieldgate.

Device Scan Control

- 1 If not already selected, press **Switch to Administrator Mode** and log in as administrator.
- 2 Press **Settings => Scan**: the Scan Control, Device Scan Control dialog appears
 - Scroll down to the Device Scan Control parameters



3 Enter the parameters you require – their significance is described in the table below:
Press Send to download the user parameters to the Fieldgate.

Parameter	Description
Device Scan Cycle Time	Set a scan time from "continuous" to "1 day" from the drop-down menu – Settings other then "continuous" are required only by battery or solar powered Fieldgates
	 Use e-mail/log cycle if a scan is to be made on e-mail or logging events only
Device Power Up Time	Set a value determined by the slowest device between 2 s and 5 min, default 20 s, from the drop-down menu, after which a scan a stable measured value can be scanned
Power Down	Check this box if the relay is used to switch off the power to the devices between scans – If the box is not checked, the relay acts as an alarm relay for the Fieldgate FXA320

Data Logging

4 If your Fieldgate has a DAT module installed, scroll down to the Data Logging dialog



5 Enter the parameters you require – their significance is described in the table below:
Press Send to download the user parameters to the Fieldgate.

Parameter	Description				
Data Logging Cycle	Sets the cycle time for storage of data to the history log (DAT module)				
Time – None: no DAT present					
	 Use Scan Cycle: data saved on every scan 				
	- 1h to 7 d: data saved after elapse of selected time interval				
	 each hour/00:00 etc: data saved at specified time(s) 				
Log Events	Check the box to save data on a Fieldgate event - a scan is made prior to saving				

NOTICE NOTE!

• Fieldgate can log only a limited number of records, see chap. 8.2.

6.3.5 Input

Input allows you to configure the overview page, i.e. to:

- select the measured values to be displayed from the connected devices
- set warning and alarm limits on the displayed values
- scale and assign engineering units to connected 4-20 mA devices
- where appropriate, scale and assign engineering units to connected binary inputs
- assign explanatory text to connected binary devices
- set up the e-mail response to sensor errors
- 1 If not already selected, press **Switch to Administrator Mode** and log in as administrator.
- 2 Press Settings, then Input: the FXA320 Inputs and Internal Sensors dialog appears

FXA320 Inputs and Internal Sensors					
FXA320	Analog In 1 Digital In 1	<u>Analog In 2</u> Digital In 2	Board Temp Digital In 3	5V Supply Digital In 4	
arrent Time: 30.01.2007 13:36:33 (UTC+1h)					

3 The various functions are described in Chapter 6.4, Overview

6.3.6 Special

:

Special opens a series of dialogues that relate to service issues.

Get Configuration File

1 If not already selected, press **Switch to Administrator Mode** and log in as administrator.

The Get Configuration File dialog allows a configuration file to be downloaded from the Fieldgate.

2 Press Settings and then Special: the Get Configuration File dialog appears

Export User-Settings	Г
Export Sensor-Settings	

3 Select the desired file by clicking on the box

4 After a click on **Send** the corresponding configuration file is downloaded.

A direct download can be using a browser via the following addresses:

- <IP Address Fieldgate>/config.320 bzw.
- <IP Address Fieldgate>/config.520

E

A direct download always contains both user and sensor settings.

Parameter	Description
Export User Settings	Click on the check box to download all configuration data that concern the Fieldgate and have been set in the Settings menu
Export Sensor Settings	Click on the check box to download all configuration data that are to be found in the Detail view of a senosr, e.g. alarm limits, tag names, linearization table

Restore Configuration

The Restore Configuration dialog allows a configuration file to be reloaded into the Fieldgate.

R	estore Configuration
Restore Configuration from "Configuration File" (Device will reboot automatically)	Durchsuchen.
	Send Reset

 Press Browse and search for the configuration file, .cgi (Name must start with "520")
 If restore.cgi is enter red manually in the browser, the default page is uploaded (Overview Page with User Rights)

2 After a click on **Send** the corresponding configuration file is uploaded.

Scrolling down the reveals the following additional dialogs:

Dialog	Description
Miscellaneous Settings	Actives/Deactivates the hardware lock, see chap. 6.5
Firmware update	Downloads the latest firmware to the Fieldgate via Internet, see chap. 9.4
Clear Log Information	Click the box and press Send to reset the selected log
System Restart	Click the box and press Send to restart the Fieldgate – all pending parameter changes are written to the Fieldgate, which is then restarted

Other functions

6.3.7 Info

Info allows you to view the Hardware Configuration and various logs provided by the Fieldgate. A full description is to be found in chap. 7.3.4

Hardware Configuration				
General	FXA520-AA4A			
Hardware Versions	V1.00			
Firmware Version	FXA520-01.06.00-0085-20081202			
OS Version	3.19			
Software Checksum	System: 0xb51c, DD: 0xdecc			
Serial Number	950033010A0			
IMEI Number	358760010010095			
Total Uptime	6d 01h 47m 28s			
Current Uptime	04h 27m 28s			
Reboot Counter	26			
Available Memory	117410			
TCP Bytes Received [kByte]	15			
TCP Bytes Sent [kByte]	75			
Max. Daily Traffic via GPRS [kByte]	50			
WAN-IP Address				

- Modem Log: records all transactions with the modem
- System Log: records all Fieldgate events, e.g. e-mails sent, time fetched, sensor data changed
- Error Log: records all device errors

The logs can be cleared by clicking the appropriate box in the **Clear Log Information** dialog and pressing **Send**, see chap. 6.3.6, Special.

6.4 Overview

The Overview page is displayed after the user has logged into the Fieldgate or can be called by clicking on **Overview** in the navigation bar. It contains information on the devices connected to the Fieldgate and can be configured according to user specifications in Administrator mode. The configuration is made in various setup dialogs which are described in this chapter as follows:

- Chapter 6.4.1: Opening the setup dialogues
- Chapter 6.4.2: Analog input
- Chapter 6.4.3: Binary input
- Chapter 6.4.4: Description/Range/Limit/Alarm
- Chapter 6.4.5; Sensor error

NOTICE NOTE!

- You cannot change device parameters with the Fieldgate Web Server.
- Tags can be set for the digital and analog inputs in the appropriate setup and for Fieldgate "board temperature" and "5V supply" in a separate Tag Setup dialog.

6.4.1 Opening the setup dialogs

The setup dialogue can be opened by clicking on the device tag in the Overview page when in Administrator mode or through the **Settings** menu as follows:

Procedure

- 1 If not already selected, press "Switch to Administrator Mode" and log in as administrator.
- 2 Press **Settings,** then **Input**: the FXA Inputs and Internal Sensors dialog appears:
 - Analog In 1 and Analog In 2 concern the 4...20 mA channels
 - Digital In 1 to Digital In 4 concern the binary input channels
 - Board Temperature and 5V supply concern Fieldgate internal sensors

	FX	A320 Inputs and Interr	al Sensors		
FXA320	<u>Analog In 1</u> Digital In 1	<u>Analog In 2</u> Digital In 2	Board Temp Digital In 3	5V Supply Digital In 4	
Current Time: 30.01.2007 13:36:33 (UTC+1h)					

3 Now click on the device tag you wish to configure, the Device Setup dialogue appears:



- 4 Now configure the devices as described in chap. 6.4.2 to chap. 6.4.5
 - Depending upon device type several setup dialogs as well as other information dialogs may appear

6.4.2 Analog input setup

Analog inputs can be assigned a tag, engineering units and a linearization table. The significance of the parameters is described in Table 6-7.

Analog Input Setup		
Tag	Tenk01	
Scaling Unit	8	
Scaling Range 420 mA	0.000 %	
Unit after Linearization		
Linearization Table	0.100.000 [%];[] - 32 Points, e.g. 85;2800	
	×	
	Sand Reset	

Analog input setup

Parameter	Description
Tag	Enter the Device Tag that is to appear in the overview page
Scaling Unit	Enter the scaling units in plain text
Scaling Range	Enter the range end values in engineering units corresponding to the 4 mA and 20 mA signal
Units After	Enter the engineering units in plain text to be used after linearization
Linearization	
Linearization Table	Enter a linearization table with maximum 16 value pairs in the form xx.xx;yy.yy
	 The first and last values should correspond to the lower and upper range value
	- The X values must increase monotonically: if an X value occurs twice in the list, the second
	X value in the list is ignored
	- The value pairs can be entered in any order. They are sorted by the Fieldgate after sending
	- The linearized output value is shown as a secondary value for the device in the Overview page.
Send	Press to register your changes in the Fieldgate.
Reset	Press to discard any changes made since the previous send.

Table 6-7: Analog input parameters

Linearization

Fig. 6–1 shows an example for a linearization of a horizontal cylindrical tank, of diameter 1.6 m to a volume scaled to 0% to 100%. The nine linearization points are entered in the form xx.xx;yy.yy as shown in the table, pressing Enter after every line.



Fig. 6-1: Example of linearization of a horizontal cylindrical tank

6.4.3 Digital input setup

Digital inputs can be assigned a tag, be enabled in the overview window and be set up as a switch (default), pulse or frequency input. Pulse and frequency signal should be debounced to avoid incorrect counts. The significance of the parameters is described in Table 6–8.

	Digital Input Setup
Tee	
rag Factor d Generation and a	
Enabled (input in use)	M
Impulse Counter	—
Scaling Unit	
Counts per Unit	
Downcount	
Hold Time	None 💌
Restart with Start Value on Send	F
Start Value	
Start Time	
	Send Reset

Digital input setup

Parameter	Description
Tag	Enter the Device Tag that is to appear in the overview page
Enabled	Check this box if this input is to appear on the overview page
Impulse Counter	Check this box if the input is to act as a pulse counter
Scaling Unit	Enter the scaling unit code in plain text
Counts per Unit	Enter the number of counts that correspond to 1 scaling unit – Maximum resolution is 1/1000
Downcount	Check this box if the counter is to count downwards
Hold Time	Time at the start of the loop scan, in which any pulses are suppressed – Only enter a hold time if switching signals from relays have to be de-bounced
Restart with Start	Check this box then press Send to restart the counter
Value on Send	 The count starts at 0 or the start value, depending upon configuration The tick disappears after the counter has been restarted
Start Value	Enter the value in scaling units from which the downcount is started – Maximum value is 4294967296
Start Time	Read-only time stamp for start of count (with Send pressed)
Send	Press to register your changes in the Fieldgate.
Reset	Press to discard any changes made since the previous send.

Table 6-8: Digital input parameters

Pulse counter

Inputs 1 and 3 may be configured as 32-bit pulse counters with a maximum value of 4294967296, a maximum resolution of 0.001 and a maximum counting frequency of 12 kHz.

The counter automatically rolls over to zero for upwards counting when the maximum permissible value, 4 294 967 296 is reached. On down count, it resets to the start value when zero is reached.

When the counter overflows, a sensor error is sent by mail and/or SMS according to the "Alarm Mail on Sensor Error" function and the "Device Status" is set to "ERROR". The counter is then reset and starts again while the displayed value is reset to the specified start value. The "Device Status" shows "ERROR" until the counter is re-initialised by pressing "Send". Multiple overruns are not reported. This factory setting cannot be deactivated.

NOTICE NOTE!

• The current count value is periodically saved every 10 minutes in the non-volatile memory. If the system is restarted between two save periods, e.g. due to a power outage etc., totalized count values can be lost in this period.

Frequency inputInputs 2 and 4 may be configured as frequency inputs with a frequency range 4.7 Hz (\pm 1%) to12.5 kHz (\pm 4%). Input frequencies below 4.7 Hz are taken as 0 Hz.

6.4.4 Description/Range/Limit/Alarm

The Description/Range/Limit/Alarm allows setup of the analog and digital inputs. The significance of the parameters is described in Tables 6–9 and 6–10.



Limit values

Four limit values can be configured in the Web server. Fieldgate tracks the status changes "LIMIT" – the measured value moves out of limit and "RESET" – the measured value moves back into limit. Table 6–9 indicates when the status changes "LIMIT" and "RESET" occur. The Fieldgate can be configured to send an e-mail on either or both conditions.

	to LL	to L	to OK	to H	to HH
from LL	-	RESET	RESET*	LIMIT	LIMIT
from L	LIMIT	Ι	RESET	LIMIT	LIMIT
from OK	LIMIT	LIMIT	_	LIMIT	LIMIT
from H	LIMIT	LIMIT	RESET	-	LIMIT
from HH	LIMIT	LIMIT	RESET*	RESET	-
*RESET made only if H/L not used or change to OK occurs within 1 cycle					

Table 6-9: Alarm status table for e-mail messaging

Hysteresis

The hysteresis function allows a band to be placed below the HI or HI HI limit or above the LO or LO LO limit which delays the status change to RESET after a a limit has been violated. This is used to stop the limits from triggering for example, when the surface of the liquid in the tank is turbulent. Fig. 6-2 shows the effect for a hysteresis of 5% on a HI limit of 80% and a low limit of 15%



Fig. 6-2: Example of level limits and hysteresis

Overview setup parameters

Parameter	Description
Show in Overview	Check the PV box to show the value in the overview.
Description	2x 20 characters for user description of measured value.
CurrentValue	Read only parameter showing current measured value with date and time.
Limit Status	 Read only parameter showing the limit status with date and time: OK: device is operating correctly. HH, H, L, LL: value has exceeded or dropped below associated limit value. Note: The limit status applies to the limit values set in the web server. It has nothing to do with any limits set within the device itself.
min. Value max. Value	Sets min. and max. range values in the web server.
Limit settings	 Sets four limits in the web server for the parameter concerned: HH: High high limit, an alarm is set when measured value moves above the high high limit. H: High limit, an alarm is set when the measured value moves above the high limit. L: Low alarm, an alarm is set when the measured value moves below the low limit. LL: Low low alarm, an alarm is set when the measured value moves below the low low limit. The status is flagged in the Limit Status column. If no value is entered, the limit is disabled.
Hysteresis limit Gradient limit	 Sets a hysteresis band in percent of set range and a rate of change limit in absolute units: The hysteresis is set below HH and H limits and above L and LL limits. When a measured value violates a limit, an alarm is immediately set. When it returns to within limits, the alarm is reset only when the value leaves the hysteresis band. An alarm is sent when the rate of change of the measured value (in engineering units) is greater than or equal to the set value.
Mail on	 Check the box to send an e-mail: LIMIT: alarm is sent when the limit is violated. RESET: alarm is sent when the value returns within limits, see table 6-9
Show Switch	For digital inputs, sets value, below /above which the text selected from the drop-down menu is displayed: - Switch level: enter limit level, e.g. 0, 1. - Switch status: select associated text.
E-mail all Device Parameters	Check the box to send an e-mail with all device parameters, see chap. 5.6.1.
Send	Press to register your changes in the Fieldgate.
Reset	Press to discard any changes made since the previous send.

Table 6-10: Device detail parameters for overview

6 Configuring the Fieldgate

6.4.5 Sensor error

A sensor error occurs when the output signal generated by the measuring device lies outside the normal operating range of 4 mA to 20 mA for analog inputs or -3V to +5 V/15V to +30V for binary inputs. The Web server responds to this condition by displaying ERROR or WARNING as status. An e-mail is sent only when the device is in ERROR condition and the Alarm Mail box in the Sensor Error dialog has been checked, see Table 6-11.

Output signal	\leq 3.6 mA or \geq 21 mA (NAMUR limits)	3.6 mA to 3.8 mA/21.5 mA to 21 mA
Device Status	ERROR	WARNING
Response	Alarm e-mail sent if box checked	No e-mail sent

Table 6-11: Behaviour of analog device status and limit status for measured values outside range limits

The sensor error setup dialog for both analog and digital inputs is shown below. The significance of the parameters is described in Table 6-12.

	Sensor Error Setup	
Alarm Mail/SMS on Sensor Error	Ϋ́	
	Send Reset	

Sensor error setup

Parameter	Description	
Alarm mail/SMS on	Click to activate corresponding e-mail or SMS:	
sensor error	 For sensor errors, see Table 6-11 for further explanation. 	
Send	Press to register your changes in the Fieldgate.	
Reset	Press to discard any changes made since the previous send.	

Table 6-12: Sensor error parameters

6.5 Hardware lock

After Fieldgate has been commissioned, a local hardware lock can be set that prevents any modifications to Fieldgate settings via Internet, GSM or Modem.

6.5.1 Activating the hardware lock

NOTICE NOTE!

• You require local access to the Fieldgate to deactivate the lock!

Procedure

- 1 If not already selected, press "Switch to Administrator Mode" and log in as administrator.
- 2 Press Settings => Special, then scroll down to Miscellaneous Settings:



3 Check the box **Enable Configuration Hardware Lock**, then press **Send** – The hardware lock is now enabled

6.5.2 Deactivating the hardware lock

NOTICE NOTE!

- The service interface is not affected by the hardware lock and can always be used to access the Fieldgate!
- The lock cannot be deactivated when the Fieldgate is booting this causes a device reset.

The lock can be deactivated temporarily by pressing the reset button for 1 second, see chap. 9.2. This allows access for five minutes, after which the lock is enabled again. Pressing the reset button for 5 seconds enables the lock immediately.

The lock can be deactivated permanently by first temporarily unlocking it, then disabling it by unchecking the **Enable Configuration Hardware Lock** box and pressing **Send**. Alternatively this can be done via the Service Interface.
7 Viewing Information (User Mode)

The information provided by the devices and Fieldgate is viewed in User Mode.

7.1 Logging on

Procedure

1 Enter the Fieldgate IP address or domain name in your web browser – After connection has been made, you will be asked to log on



- 2 Enter your user name and the password
- 3 Fieldgate opens in User Mode and displays the Overview page

	Refr	<u>esh</u>		Endress+Hau
verview		Switch to User Mode		Settir
urrent Time: 30.01.	2007 14:50:31 (UTC+1h)			XML Data
Tag	Description	Current Value dd.mm.yyyy hh:mm:ss	Status dd.mm.yyyy hh:mm:ss	max. Range min. Range
BoardTemp	Endress+Hauser internal	31.854 °C 30.01.2007 14:50:29	OK	
ank01	FMI21 Lentan VZ33	91.504 % 30.01.2007 14:50:29	26.01.2007 10:29:19	
	EMI21	0 153 %	100	

4 You can now view the information you require by pressing the appropriate menu. Details are to be found in the chapters that follow.

7.2 Overview

7.2.1 Device overview

Press **Overview** to view the measured values, device status and limit status of the variables you selected in the setup pages. The parameters are explained in Table 7-1 below.

Tag	Description	Current Value dd.mm.yyyy hh:mm:ss	Status dd.mm.yyyy hh:mm:ss	max. Range min. Range
soardTemp	Endress+Hauser internal	31.854 °C 30.01.2007 14:50:29	OK	
Tank01	FMI21 Lentan VZ33	91.504 % 30.01.2007 14:50:29	26.01.2007 10:29:19	
Tank02	FMI21 WOERMENT FM630	0.153 % 30.01.2007 14:50:29		

Device overview

Parameter	Description		
Tag	Tag read from analog/digital input setup page		
	Press the Tag to view the setup and device details		
Description	Description read from setup page		
Current Value	Current measured value together with time stamp of scan, if the time is set		
Status	 Current device or limit status together with time stamp of last status change OK: device is operating correctly WARNING: device is operating out of range ERROR: device is operating out of range limits (Namur) HH: High High limit violation H: High limit violation L: Low limit violation LL: Low Low limit violation 		
Min Value/ Max Value	Range values read from setup pages		

Table 7-1: Parameters in Overview of Selected Devices view page

7.2.2 Setup details

Setup details are accessed by pressing the **Tag** in the device overview. Exactly which details are presented depends upon the device type.

Overview setup

This dialog shows the current setup of the overview page. See table 6–10, chap. 6.4.4 for details of the parameters.



Analog input setup

This dialog shows the settings for the selected device. See table 6–7, chap. 6.4.2 for details of the parameters.

Analog Input Setup			
Tag	Tank01		
Scaling Unit Scaling Range 420 mA	% 0.000_100.000 %		
Unit after Linearization Linearization Table	0100.000 [%]:]		

Digital input setup

This dialog shows the settings for the selected device. See table 6-8, chap. 6.4.3 for details of the parameters.

Digital Input Setup			
Tag	_Binary-1		
Impulse Counter	yes		
Scaling Unit			
Counts per Unit	1.000		
Downcount	no		
Start Value	0.000		

Sensor error setup

This dialog shows the settings for error e-mails. See table 6-12, chap. 6.4.5 for details of the parameters.



Tag setup

This dialog shows the tag set for the selected Fieldgate internal sensor.

Tag Setup			
Tag	BoardTemp		

Dynamic data/status

XML Data

7.2.3 Device details

Device details are accessed by pressing the ${\bf Tag}$ in the device overview. They are available only for analog devices

This dialog shows the dynamic data and status read from a device. Table 7-2 describes the parameters.

Dynamic Data / Status				
PV - Loop Current 18.641 mA Status I 000 0x00	PV - Percent of Range 91.504 %			

Parameter	Description				
PV - Loop Current	4 - 20 mA current value set for device				
PV - % of Range	e Measured value as a percentage of the measuring range set in device				
Status	 Simple device status according to HART specification plus 2 bytes (hex) information Error: "ERROR", Warning: "WARN", Normal function: "OK" 2 bytes hex status code plus plain text, e.g.: 0x00 0x08 – Device Status: Loop Current Fixed 				

Table 7-2: Dynamic parameters and status

XML dataPress XML Data in the footer of the line to generate an XML file of all the data on the page, see
chap. 8.2.

Time: 30.01.2007 15:14:29 (U

Endress + Hauser

7.3 Settings

Press Settings to open the menus that allow viewing of general Fieldgate parameters

7.3.1 Location

Press **Location** to view the **Fieldgate location** page. The significance of the parameters is described in table 6–4in chap. 6.3.1.

Fieldgate Location				
Fieldgate Identification Fieldgate Location	FXA320-Strohmaier Strohmaier Beton Maulburg			
Current Time: 30.01.2007 15:21:46 (UTC+1h)				

7.3.2 Password

Press Password to change your password. Table 7-3 explains the significance of the parameters

Change Password				
User name				
Old Password				
New Password				
Retype New Password				
Send Reset				
Current Time: 30.01.2007 15:23:39 (UTC+1h)				

Change password

Parameter	Description		
User Name	Enter your user name, max. 8 characters		
Password	Enter your current password, max. 8 characters		
New Password	d Enter your new password here, max. 8 characters		
Retype New	Enter your new password again to confirm the change.		
Password			
Send	Press to register your changes in the Fieldgate.		
Reset	Press to discard any changes made since the previous send.		

Table 7-3: Significance of change password parameters

7.3.3 Input

Press **Input** to view the devices connected to the Fieldgate. Press the **Tag** to view the setup and device details. A typical dialog is shown below, more details are to be found in chap. 6.4 and chap. 7.2.

FXA320 Inputs and Internal Sensors					
FXA320	Analog In 1 Digital In 1	Analog In 2 Digital In 2	Board Temp Digital In 3	5V Supply Digital in 4	
2urrent Time: 30.01.2007 15:24:58 (UTC+1h)					

7.3.4 Info

Press **Info** to show the hardware configuration of the Fieldgate as well as the various logs provided by the Web server. Depending upon Fieldgate version, various logs can be viewed.

- Modem Log: records all transactions with the modem
- System Log: records all Fieldgate events, e.g. e-mails sent, time fetched, sensor data changed
- Error Log: records all device errors

Hardware configuration Hardware configuration contains static and dynamic information about the Fieldgate. Table 7-4 explains the significance of the most important parameters.

Hardware Configuration			
General Hardware Versions Firmware Version OS Version Software Checksum Serial Number MiEl Number Total Uptime Current Uptime Reboot Counter Available Memory TCP Bytes Received	hardware Configuration ba320-AG4AB V100 0104.04-075-20061113 3.19 System 0x6d15, 0xderd 64003E010A0 5304560.10784485 9655121h 24m 25s 78d 02h 24m 25s 99 169116 1289044		
TCP Bytes Sent	7017958		

Parameter	Description
General	Fieldgate order code
Hardware Version	Fieldgate hardware version number
Firmware Version	Fieldgate firmware version number
OS Version	Version of the operating system used.
Software Checksum	Software checksum is used during a firmware download to check whether the transmission has been made without error.
Serial No.	Fieldgate serial number
IMEI number (GSM)	International Mobile station Equipment Identity – identifies Fieldgate
Total Uptime	System run time since the installation and commissioning
Current Uptime	System run time since the last restart or power up
Reboot Counter	Number of reboots to date due to starting the Fieldgate
Available Memory	Memory in bytes still available in the Fieldgate
TCP Bytes Received	Number of bytes received by Fieldgate
TCP Bytes Sent	Number of bytes sent by the Fieldgate

Table 7-4: Parameters in hardware configuration page

System Log

The system log displays all the activities since the last start, e.g. e-mail delivery, time fetch, alarms, etc. Up to 25 lines are displayed. The log is deleted when the Fieldgate is switched off. Table 7-5 explains the significance of the parameters.

System Log 21.01.2007 02:27:51: email delivered to ist recipient alarm: FX120-Strobmater: framation Low-Joudow: Tank01 / - 132 23.01.2007 02:28:07: email delivered to ind recipient alarm: FX120-Strobmater: framation Ox-Stoph: Tank01 / - 132 23.01.2007 02:28:07: email delivered to ind recipient alarm: FX120-Strobmater: Transition OX-Stoph: Tank01 / - 137 23.01.2007 12:03:03: email delivered to ind recipient alarm: FX120-Strobmater: Transition OX-Stoph: Tank01 / - 137 23.01.2007 12:03:03: email delivered to ind recipient alarm: FX120-Strobmater: Transition OX-Stoph: Tank01 / - 137 23.01.2007 12:03:03: email delivered to ind recipient alarm: FX120-Strobmater: Transition OX-Stoph: Tank01 / - 137 24.01.2007 03:03: Pythom ox 25.01.2007 10:03:59: Pythom ox 25.01.2007 10:04:39: Pythom o

System log message	Meaning
changing config page ' <page-name>' from <ip-addr></ip-addr></page-name>	A configuration page has been changed from the IP address indicated. Possible <page-name>s: loc: Fieldgate Location. user: User Setup. if: Network Setup. hart: HART Setup. special: Special. info: Information.</page-name>
changing sensor data ' <device-id>' from <ip-addr></ip-addr></device-id>	Field device data have been changed from the IP address indicated.
email delivered to < 1 st / 2nd > recipient < service alarm / limit alarm / measurement >: <subject></subject>	An e-mail was sent to the corresponding receiving group.
hardware-lock closed	The hardware lock has been closed (i.e. the configuration of the Fieldgate and the connected field devices can now no longer be remotely altered).
hardware-lock opened	The hardware lock has been opened.
service adapter connected service adapter aborted service adapter disconnected	Service adapter has been connected. Connection via service adapter has been aborted. Service adapter cable has been disconnected.
time fetched (<protocol>) internal time <seconds>s ahead</seconds> internal time <seconds>s behind</seconds> </protocol>	Time has been fetched from the Internet. The internal clock has been adjusted accordingly.
time switching to <time zone=""></time>	Automatic adjustment of the time server to a different time zone. The parameter "Time Offset (related to UTC)" under "Settings" -> "Network" -> "Time Server Setup" was automtically adjusted by the time server as a result of a change in "Timezone Setting (valid for http time service)".
User ' <user>' changed password from <ip-addr></ip-addr></user>	A user has changed his/her password from the IP address indicated.
SMS send to xxxxxx	Short SMS message has been sent to telephone number xx.
DynDNS OK	Fieldgate could register with at DynDNS with its IP address and can now be reached by its URL.
< Log> cleared from <ip-addr></ip-addr>	An Administrator has cleared a log at the IP address under ter "Settings" -> "Special" -> "Clear Log Information".
DHCP stopped	The DHCP Client was stopped since no DHCP server replied. In this case the IP address set manually under "Set-tings" -> "Network" -> "IP-Address" is used.
BOOTP failed – using manual entry	The BOOTP Client was stopped, because no server reacted. In this case the IP address set manually under "Settings" -> "Network" -> "IP-Address" is used.
received new certificate for FIS communication	Fieldgate has received a certificate for the encrypted com- munication with the FIS.
FIS registration successful: <http code="" response=""></http>	Fieldgate has succesfully registered with the FIS.
received new configuration from FIS	A new Fieldgate configuration was received from the FIS.
FIS message " <subject>" send successfully: <http code="" response=""></http></subject>	Limit or alarm message about <subject> successfully transmitted to the FIS.</subject>
time updated from FIS request	Successful time synchronisation between Fieldgate and FIS.

Table 7-5: System log messages with meaning

Error Log

The Error Log records Fieldgate error messages, e.g. failed password change etc. Up to 25 lines are displayed. The log is deleted when the Fieldgate is switched off. Table 7-6 explains the significance of the messages.

Error Log	
email ok for 2nd recipient alarm	
time service: ok	
17.11.2006 11:36:31: time service: cannot access http time service	
18.11.2006 11:36:39: time service: ok	
20.11.2006 11:37:12: time service: cannot access http time service	
21.11.2006 11:37:34: time service: cannot access http time service	
22.11.2006 11:37:47: time service: ok	
23.11.2006 11:37:14: DynDns failed: -1	
23.11.2006 11:38:11: time service: cannot access http time service	
23.11.2006 11:40:28: DynDns ok	
23.11.2006 11:40:43: time service: cannot access http time service	
23.11.2006 11:40:55: cannot deliver email to 1st recipient alarm: transmission failed. SMTP send error 550	
23.11.2006 11:45:33: email ok for 1st recipient alarm	
24.11.2006 11:41:04: time service: cannot access http time service	
25.11.2006 11:41:11: time service: ok	

Error log message	Meaning
Error log message cannot deliver email to < 1st / 2nd > recipient <service alarm / limit alarm / measurement>: SMTP open error <errorcode> cannot deliver email to < 1st / 2nd > recipient <service alarm / limit alarm / measurement>: SMTP send error <errorcode> cannot deliver email to < 1st / 2nd > recipient < service alarm / limit alarm / measurement >: SMTP close error <errorcode></errorcode></errorcode></service </errorcode></service 	 Meaning Alarm e-mail could not be sent. Error codes: 1: Invalid SMTP parameter. 2: SMTP Server domain could not be resolved. 3: Network error - target server unreachable. 211: System status, or system help reply. 214: Help message. 220: <domain> Service ready.</domain> 221: <domain> Service closing transmission channel.</domain> 250: Requested mail action okay, completed. 251: User not local; will forward to <forward-path>.</forward-path> 354: Start mail input; end with <crlf>.</crlf> 421: <domain> Service not available, closing transmission channel.</domain> 450: Requested mail action not taken: mailbox unavailable [E.g., mailbox busy]. 451: Requested action aborted: local error in processing. 452: Requested action not taken: insufficient system storage. 500: Syntax error, command unrecognized. 501: Syntax error in parameters or arguments. 502: Command not implemented. 503: Bad sequence of commands. 504: Command parameter not implemented. 550: Requested action not taken: mailbox unavailable [E.g., mailbox not found, no access]. 551: User not local; please try <forward-path>.</forward-path> 552: Requested action not taken: mailbox unavailable [E.g., mailbox not found, no access]. 551: User not local; please try <forward-path>.</forward-path> 552: Requested action not taken: mailbox name not allowed [E.g., mailbox syntax incorrect]. 554: Transaction failed.
email ok for < 1st / 2nd > recipient <service alarm="" limit<br="">alarm / measurement</service>	I his message appears only if one of the two messages above has appeared, but the e-mail was successfully sent. The mes- sage cancels its predecessor.
DHCP: cannot get IP address cannot set IP address	DHCP Server not answering. In this case the manual address under Settings -> Network -> IP-Address is used. Ethernet: IP address could not be set. Possible cause: invalid IP address structure (only the format
cannot set netmask	ditto for the netmask (cannot be set by user!)
cannot add route to gateway	The gateway could not be accepted. Check the IP domain settings, if necessary, restart Fieldgate.
DNS initialization failed	Ethernet: initialization of the DNS has failed. This indicates incorrect DNS specifications.
אוט וווונאוט וווונאוט אוט וווונאוט אוט וווונאוט אוט וווונאוט	This indicates incorrect DNS specifications.
no response from DNS server, used DNS Cache to resolve IP address ($<\!Domain\!>/<\!IP\!>$)	The DNS Server is not answering. The Fieldgate could however resolve the domain via the integrated DNS cache. The message appears when the DNS server has failed. Check the DNS server.
cannot resolve Domain via DNS: <domain></domain>	The listed domain could not be resolved. Either this domain does not exist or the DNS server has failed.

Error log message	Meaning
time service: cannot access http time service	The time cannot be called up from the http server (web
	server).
	Check connection settings.
ume service: cannot connect to server	Check server data specified.
time service: http server returned <errorcode></errorcode>	The http time server has returned an error.
time service: ill time pattern received from server	The http time server has returned an invalid answer. Select another server.
time service: illegal reply from sntp server	The sntp time server has returned an invalid answer. Select another server.
time service: incompatible protocol version on server	The sntp time server returns an incompatible protocol version. Select another time protocol or another server.
time service: remote server not synchronized	The sntp time server is not synchronized. Select another server.
time service not correctly configured	The sntp/time server has not been specified correctly.
time service: illegal reply from daytime server	A malfunction response when the time synchronization is requested via the DAYTIME protocol.
time service: ok	Message appears when an earlier "time service" error no longer exists.
User ' <username>' password change failed from <ipaddr>(<errfield>)</errfield></ipaddr></username>	A user has attempted to change his/her password. This attempt failed. This can indicate an attack on the Fieldgate.
SMS queue full	The SMS queue is full. The error message is triggered when SMSs are generated more quickly than they can be sent.
cannot send SMS to xxxx	An SMS could not be sent to telephone number xxxx. This error message can occur when the Fieldgate does not have a connection to the provider.
DynDns failed	The Fieldgate could not transmit its IP address to a dynamic domain name server. This message can occur when there are syntax errors in the Get DynDns URL entry, see chap. 8.5, or when the server malfunctions.
DynDns ok	IP address of Fieldgate successfully transmitted to DynDns. The message appears only after a previous DynDns failure.
connection to FIS failed: cannot start encryption	 Encryption could not be started (failed at partner). Fieldgate certificate not recognised by partner. In Administrator Mode open -> Settings -> Message -> FIS Setup. Delete the FIS URL and press Send. Fieldgate deletes the certificate. Reenter the FIS URL and press Send. Fieldgate asks the FIS to send a new certificate.
cannot load certificate from FIS: <http code="" response=""></http>	 Fieldgate received no FIS encryption certificate. If the FIS sends http response code: "403 Forbidden", it has already sent a certificate to Fieldgate. Before a new certificate can be issued the old one must be deleted by the FIS administrator.
FIS registration failed: < http Response Code>	Registration with the FIS has failed
connection to FIS failed: no URL	Fieldgate has no IP Adresse or URL for the FIS. – Check the FIS Setup.
connection to FIS failed: illegal port number illegal/unknown host cannot create socket no response from server unknown create	 Fieldgate cannot establish a http connection with the FIS. This may be due to the following reasons: Fieldgate is using an incorrect FIS URL. The network settings are wrong. A firewall in the network is blockiing the connection.
FIS configuration import failed	From on reception of a new Fieldgate configuration
FIS error during FIS request: <http response=""> "<subject>"</subject></http>	Message was rejected by the FIS.
	 Contact your FIS administrator.
message queue full. Deleted last message: " <subject>"</subject>	Fieldgate message buffer is full. - The last message concerning <subject> is deleted so that a new message can be stored in the buffer.</subject>

Table 7-6: Error log messages

Modem Log

The modem log can be used to check the correct function of the Fieldgate with GSM modem. Up to 25 lines are displayed. The log is deleted when the Fieldgate is switched off. Table 7-7 explains the significance of the parameters.

	Modem Log
30.11.2006 07:13:56:	assigned IP: 80.187.143.250
04.12.2006 10:23:31:	GPRS hangup caused by PPP
04.12.2006 10:23:41:	GPRS hangup
04.12.2006 10:24:28:	connecting to GPRS permanently
04.12.2006 10:24:29:	GSN Operator: "T-Nobile D", Signal: -71dBm
04.12.2006 10:24:29:	GPRS network: "internet.t-d1.de","",0,0
04.12.2006 10:24:30:	GPRS QOS: default
04.12.2006 10:24:33:	OK: CONNECT
04.12.2006 10:24:43:	assigned IP: 68.128.11.123
14.12.2006 02:56:24:	GPRS hangup caused by PPP
14.12.2006 02:56:34:	GPRS hangup
14.12.2006 02:57:23:	connecting to GPRS permanently
14.12.2006 02:57:24:	GSN Operator: "T-Nobile D", Signal: -72dBm
14.12.2006 02:57:24:	GPRS network: "internet.t-dl.de", "",0,0
14.12.2006 02:57:24:	GPRS QOS: default
14.12.2006 02:57:30:	OK: CONNECT
14.12.2006 02:57:39:	assigned IP: 80.187.58.198
25.01.2007 18:44:37:	connection to test server failed
25.01.2007 18:44:47:	GPRS hangup
25.01.2007 18:46:26:	connecting to GPRS permanently
25.01.2007 18:46:27:	GSN Operator: "T-Nobile D", Signal: -89dBm
25.01.2007 18:46:28:	GPRS network: "internet.t-d1.de", "",0,0
25.01.2007 18:46:28:	GPRS QOS: default
25.01.2007 18:46:32:	OK: CONNECT
25.01.2007 18:46:41:	assigned IP: 80.187.71.116

Modem log message	Connection	Meaning
dial in (Server)	Modem/GSM	Diagnosis messages for dial-in with Fieldgate.
carrier lost (Server)		
hangup requested by command (Server)		
hangup (Server)		
dial in disabled!	Modem/GSM	Fieldgate was called (with maximum number of
		rings) but dial-in is not allowed.
assigned IP: <ip-addr></ip-addr>	Modem/GSM	Diagnosis messages for dial-in with ISP.
carrier lost		0 0
hangup requested by command		
hangup		
connect failed		
hangup requested by SMS transmission		
hangup caused by PPP		
assigned IP: <ip-addr></ip-addr>	GSM	Diagnosis messages for dial-in with GPRS.
GPRS Network: <gprs network=""></gprs>		0 0
GPRS-QOS: <qos> connect failed</qos>		
GPRS hangup requested by ring or carrier loss		
GPRS hangup requested by command		
GPRS hangup requested by SMS transmission		
GPRS hangup caused by PPP		
GPRS hangup		
initiating call back	Modem/GSM	Call-back to ISP started due to ringing.
No Signal!	GSM	The GSM module does not have any reception
		signal.
Pin Ok	GSM	SIM Pin is OK.
User defined AT: <at-cmd></at-cmd>	Modem/GSM	User-defined AT commando output.
FAILED: timeout	Modem/GSM	Command at modem triggered a timeout.
FAILED: <modem-response></modem-response>	Modem/GSM	Command at modem returned an unexpected
		response.
OK: <modem-response></modem-response>	Modem/GSM	Command at modem returned an expected
		response.
GSM operator: <operator> signal = <signal< td=""><td>GSM</td><td>Output of current GSM operator and signal strength.</td></signal<></operator>	GSM	Output of current GSM operator and signal strength.
strength>		In order to ensure stable GSM operation the signal
		strength should be > 15 .
FAILED: no data call	GSM	Incoming call to Fieldgate without data connection
		=> vocal call.
selected GSM operator denied, GSM Engine	GSM	Manually set GSM Provider is not valid for the SIM
switched to automatic mode		card in use.
cannot connect to selected GSM operator	GSM	The GSM Modem cannot connect to the manually
connected to: <provider></provider>		entered provider. Possible reasons are a weak signal.
or:		The Fieldgate has connected to an alternative
cannot connect to selected GSM operator, GSM		provider. In this case the GPRS connections are
Engine switched to automatic mode		suppressed
Pin xxxx ist not correct-> ERROR	GSM	An attempt has been made to enter the PIN as xxxx,
		which is presumably not the correct code.
Last retry to set a correct PIN	GSM	After the next incorrect attempt to enter the PIN,
		the SIM card is locked .

Modem log message	Connection	Meaning
no PIN is set -> please set PIN under Modem Configuration	GSM	No pin number entered in GSM setup dialog, see chap. 5.4.2.
no SIM card in device	GSM	SIM card not inserted in device.
SIM card error -> <errorcode></errorcode>	GSM	Problem in logging in the GSM modem.
SIM PUK required	GSM	The SIM card is locked and can only be unlocked by entering the PUK .
connecting to GPRS permanently / connecting to GPRS	GSM	A GPRS connection is being made.
GPRS Network: <apn></apn>	GSM	Indicates APN with which the modem is connected.
GPRS-QOS: not set/use defaults	GSM	Ouality of Service parameter not set, Fieldgate takes standard parameter of SIM card.
incoming ring during connect (GPRS Client) / incoming ring during connect (Client)	GSM	Incoming call detected during current GPRS/ISP connection.
GPRS hangup requested by incoming call	GSM	The current GPRS connection is interrupted for 5 minutes for an incoming call. To build up a data call, a second call must be made, see chap. 5.4.2.
Auto detection of available GSM bands	GSM	Indicates automatically available GSM bands.
<band>MHz ok</band>	GSM	Indicates which GSM Band has been selected.
connection to test server failed or invalid test server	GSM	Connection could not be made to test server. In this case the GPRS connection is made again. Possible reasons: the GPRS connection has failed or the server settings are invalid.
dial in to ISP <phone number=""> permanently / dial in to ISP <phone number=""></phone></phone>	GSM/Modem	ISP connection is being made.
daily dial-in time of <xy>min exceeded!</xy>	GSM/Modem	The max. daily dialing time of xy min via ISP was exceeded. Next possible connection at midnight or 24 hours after message, depending upon settings.
daily traffic limit of <xy>kByte exceeded!</xy>	GSM	The max. daily traffic limit of xy Kbyte via GRS was exceeded. Next possible connection at midnight or 24 hours after message, depending upon settings.
error during modem initialization	GSM/Modem	No modem could be found.
GSM Engine: <manufacturer>, <model></model></manufacturer>	GSM	Indicates which modem was found.

Table 7-7: Modem log messages

7.4 Miscellaneous Functions

7.4.1 Autorefresh

Autorefresh causes the page display to be updated every 120 seconds.

1 Click on **AutoRefresh** to activate updating.



2 Click on AutoRefresh OFF to deactivate updating.



7.4.2 Refresh

Pressing **Refresh** causes the page display to be updated and has the same function ad the Refresh button in your Internet browser.

1 Click on "Refresh" to activate updating.

The Refresh function can also be used to automatically update the page display at set the time intervals. For example, to refresh the page every 5 minutes (= 300 s) enter the following in your browser: http://192.168.252.1/?refresh=300

7.4.3 Endress+Hauser

Press the Endress+Hauser to open the Endress+Hauser homepage (may differ from figure below).



8 Advanced Functions

8.1 XML data

The XML Data function allows the information on the complete Fieldgate configuration plus the parameters and configuration of the connected devices to be downloaded to your computer for use in Office or other applications.

8.1.1 Generating the XML Data

1 Press XML.

 The parameters are downloaded into a separate page, from where they can be copied and pasted.



2 Note the web address: this can then be accessed by your browser as a read only page (no values can be changed) without prior login to the Fieldgate

8.1.2 Evaluating the XML data

The significance of the data elements can be taken from table 12-1 in chap. 12.2

8.2 Historical data

When a 256KB DAT module is being used, Fieldgate has a data logging function for buffering measured values and events. A prerequisite for its use is that the time and date are available to the Fieldgate, either through the use of a time server or manual entry, see chap. 5.4.

The measured values of the connected sensors or the internal Fieldgate interfaces are saved in the form of data records in XML format. The logged data can be called up with by adding **/history.xml?** to the IP address or sent as an e-mail.

User ID By adding a user ID (ID=1 to ID=9) to the query, e.g. **/history.xml?ID=2**, an individual view of the historical data can be obtained. Fieldgate maintains pointers for each User ID indicating the time when the last query was made. Only data records from this time onwards are presented.

Number of records The number of historical records held by Fieldgate is dependent upon the device version.

- With digital input 70 data records per channel/interface
- Without digital input 141 data records per channel/interface

8.2.1 Calling up the historical data

- 1 Open the historical data for the Fieldgate by typing in the following access address (URL): http://<IP address or Domain Name>/history.xml Example: http://www.fieldgate.de/history.xml or http://212.227.127.81/history.xml
- 2 The web page opens



8.2.2 Interpreting the historical data

The data are in XML format – for a full description of the data elements, see table 12-1 in chap. 12.2. The log comprises a header identifying the Fieldgate, e.g.

This is followed by the data for each device, comprising device identifier, timestamp and measured value(s):

```
- <device id="110f191fc3">
        <vtime>20060604-030026</vtime>
        <vtz>120</vtz>
        <vtslvl>0</vtslvl>
        <v1>7.42</v1>
        </device>
```

8.3 Wireless Application Protocol (WAP) pages

All Fieldgate versions can deliver information to WAP-capable mobile phones. This is done in the form of specially adapted WML pages with a restricted functional scope. The WAP function can be used e.g. when:

- Ethernet Fieldgate is connected to the Internet
- Analog Fieldgate is dialled into an ISP and is therefore connected to the Internet
- GSM Fieldgate is dialled into an ISP and is therefore connected to the Internet
- GSM Fieldgate is in "Permanent Dial In" thanks to GPRS and has a public IP address
- The IP address or domain must be known, if necessary by using DynDNS, see chap. 8.5

8.3.1 Connecting to the WAP homepage

Open the WAP homepage for the Fieldgate, use your mobile phone's WAP browser. The access address (URL) is composed as follows:

http://<IP address or Domain Name>/index.wml

Example: http://www.fieldgate.de/index.wml or http://212.227.127.81/index.wml

8.3.2 WAP pages

The WAP pages comprise:

- Overview
- Device Details

Overview

Overview corresponds to the standard overview page, see chap. 7.1, and contains selected measured values of the connected devices in the form

- TAG information.
- Measured value with unit

Device details

Clicking on the device tag opens the detailed view for the device showing

- TAG information.
- Measured values with unit and time stamp.

8.4 SupplyCare

SupplyCare

SupplyCare is a operating program for coordinating the flow of material and information along the supply chain. It gives you complete transparency over inventory levels in tanks and silos, anytime, anywhere and even at remote locations.

Based on the measuring and transmission technology installed on site, the current inventories are recorded and transmitted to SupplyCare. With SupplyCare, you have a constant overview of all the current inventories. Critical levels are clearly indicated and you can also receive active information on these levels if required. Calculated prognosis gives additional security for replenishment planning.

Further information on installing and operating SupplyCare can be found in Operating Instructions BA050S/04/en (SupplyCare Hosting) and BA055S/04/en (SupplyCare Enterprise).

8.5 Dynamic DNS server

When Fieldgate dials into a GSM or Analog network, it is assigned an IP address which changes on every new connection. The dynamic Domain Name System (DNS) assigns a human-readable computer host name, e.g. www.myfieldgate.ath.cx to Fieldgate, allowing it to report its current IP address to the server.

The following procedure shows an example of how to open a dynamic DNS server account, how to set it up and how to add the information to Fieldgate. The DNS server provider is www.dyndns.org.

Procedure

1 Enter the URL of your dynamic DNS server in your Internet browser, e.g. www.dyndns.org:



2 Press the Account button

DynDNS.com - My Ac	count - Microsoft In	ternet Explorer				alai ×
Datei Bearbeten Ani	icht Favoriten Ext	nas ?				
edrama (A) https://www.	📩 💌 📢 🥕			Se 192 - 49	- 	Wecheeln zu Linka
				DynEN	S.com > Dynect > DynT	1.0 > Corporate
🔿 Dyn				User	Pages Lood Pageword? - Strady Accord	Login
	About	Services	Account	Support	News	
My Account	Login					
Create Account						
Login	-Account La	Username.		Password:	Login	
Lost Password?						
Search	-		Don' Create	:have an account? <u>one now</u> - it's fi	reel	
Search						
		@ 1999-2008 <u>Demands h</u>	Wwerk Service Inc.	Lead Notion + South	eda	
e) Fertig					🐴 🔮 Internet	*

- 3 Select the **Create Account** menu and fill out the required information:
 - Enter a <username>, <e-mail address> and <password>
 - Agree to the licence conditions
 - When complete, press the **Create Account** button at the bottom of the page
- 4 You will be sent details of your account by autoreply: (may be detected as "SPAM")
 - Confirm your account by clicking on the URL supplied in the e-mail
 - The site opens with the Account Confirmed message:

egte Ntou Deven dyndra	com/account/com/mil/gFto/with	FpPErwpSR-T_Q					Wechseln zu
🛞 Dynl	ONS			Uber		Part - Sign Lip No.	Login
	About	Services	Account	Support	News		
Ay Account	Account Co	onfirmed					
Seate Account							
ogin	The account 'Renkenstr	eler" has been conf	imed. You can now	bon and start using	your account.		
.ost Password?	wa have a curtam arrow	connects maleon is	t you may with to a	broke to , the let i	used for configu	tree of new second	charger to
	services, and important s	ystem maintenance	Istatus notifications.	To subscribe, go to i	our Mainto List Su	bxripton page. Onc	e there, you may
Search DynDNS	subscribe to the Annou	cement list by ched	ing the appropriate I	oox, and clicking the	"Save Settings" b	outton.	
Search							
	Copyright @ 1999-29	S Consent Meerle Se	nios. In Privace Pail	cs - Acceptable Line Police	· Tradenark Hotes		

- 5 Now login with your <username> and <password>
 - My Account gives an overview of My Services, Account Settings and Billing

6 Now press My Services

- Click Add Host Services in the Host Level Services section
- Click Add Dynamic DNS Host in the Add Host Services section

The Mill of the Verson Shelts	s.con/account/services/hosts/dyr	ndrojadd.html				💌 💽 Wechselin zu
🛞 Dynl	DNS					Logged In User: Reinkensmeler My Secrical - Settings - Log Col
	About	Senices	Account	Support	News	
My Account	New Dames		Milleret			
Mr Services	New Dynar	TIC DINS.	HOST			
Account Lagrades	Hostr	same:	Noickyste 365	athox		*
Malkop Outbound	IP Add	dress:	193 150 100 11	_		
SA STORES	Enable V	Wildcard;	C.			
Premier Support	Mail Exchance	er (optional):		C Beck	n.M/2	
Add Done Service My Hosts Add Host Service Crysteric Drif Static Drif Static Drif Webring My Mahring My Mahring My Mahring Silk, Certificates						Platitus: Platerrain
Account Settings						
Biling						
Search DynDNS						

- Enter a host name (e.g. fieldgatexxx) and select a domain extension (here ath.cx)
- Enter the IP address of the Fieldgate
- Press the Add Host button
- The Hostname Created dialog appears to confirm the action
- 7 On completion you have something like the following:
 - <username>, e.g. "johnsmith"
 - <password>, e.g. "myfieldgate"
 - <hostname>, e.g. fieldgate365@ath.cx
- 8 Now create the DynDNS string for your Fieldgate (one line):
 - <username>:<password>@members.dyndns.org/nic/update?system=dyndns&hostname =<hostname>&myip=

for the example above:

- johnsmith:myfieldgate@members.dyndns.org/nic/update?system=dyndns&hostname =fieldgate365.ath.cx&myip=
- 9 In the Network menu of your Fieldgate scroll down to the DynDNS Setup page and copy the string into the Get DynDNS URL parameter
 - Press Send to download.
 - The dynamic DNS server is now set up.

9 Trouble-Shooting

9.1 Problems and remedies

Problem	Cause	Remedy
Fieldgate cannot be reached via GPRS	Only Internal IP addresses 10.x, 172.x, 192.x assigned by the GSM/ GPRS provider (Check Info page)	Ask GSM/GPRS Provider to assign you a public IP Address or select another GSM Provider
Fieldgate no longer on GPRS after it has	Fieldgate is currently programmed in	Enable "GPRS always online" whenever
GSM Fieldgate: a phone call is answered but the modem does not start to synchronize (silence)	When Fieldgate receives an incoming call, it breaks off the GPRS connection for 5 minutes. In this time a point-to- point connection can be made, see chap. 5.4.4	If the option "GPRS dial-in permanently" has been selected, Fieldgate automatically established connection after 5 minutes.
Measurement emails are being sent although the checkbox is not enabled	Fieldgate is programmed this way	Delete all values for Limit Settings where no e-mail should be sent
Fieldgate receives no IP address from a DHCP Server	Fieldgate is set to support the wrong protocol, e.g. BOOTP	Change the protocol setting
Changes made via the Service Interface are not in Fieldgate after the next power up	As long as the Service Cable is connected, configuration data cannot be stored to the EEPROM	Ensure persistent storage by making a System Restart via the Special menu, see e.g. chap. 5.1.6
The password super/super or eh/eh does not operate	Pay attention to upper and lower case	Key-in the password correctly
Time is registered twice in the CSV file (i.e. 1616:54:32 not 16:54:32)	In the country settings of Windows the time format is set to hh:mm:ss	Choose as time format HH:mm:ss in the Windows control panel
SMS cannot be sent by Fieldgate (Analog/Ethernet Version	It is not possible to send an SMS directly from an analog or Ethernet Fieldgate	Find provider who, e.g. automatically sends an SMS when an e-mail arrives. (e.g. t-email.de, directbox.com, web.de etc.)
Emails cannot be sent by Fieldgate	The email provider supports only the SMTPS protocol for email transmission	Ensure that the email provider supports SMTP protocol without encryption (SSL/TLS)

Table 9-1: Trouble-shooting table for Fieldgate FXA320

9.2 Reset



The device is reset with button (7) and LED (2). If the button is pressed and held during when the Fieldgate is started up, the following functions are available in the time frame when the button is released:

Time	frame		
	1	2	3 4 5 6
Ċ)	5 10	15 20 25 t [s]
No.	Time frame	Red LED	Function - release button
1	0 5	Flashes at approx. 5 Hz	The data of the internal EEPROM is first checked, the configuration data is copied from the internal EEPROM to the DAT module
2	5 10	Off	No function when released
3	10 15	Flashes at approx. 2.5 Hz	Iz Configuration is reset to the factory settings
4	15 20	Off	No function when released
5	20 25	Flashes at approx. 1.25 H	Hz Firmware and configuration is reset to the factory settings
6	25	Off	No function when released

Table 9-1: Fieldgate reset function

The red LED flashes at approx. 10 Hz during initialization once the button has been released or a restart has taken place without pressing the button. This takes approx. 10 s. It takes approx. 30 s if a firmware update was carried out.

9.3 Troubleshooting on no connection

- 1 Is the Link LED lit on the Fieldgate?
 - Yes, proceed with point 2
 - No, check the cable or connection to Fieldgate and PC/Network
- 2 Is the Link LED of the PC network card lit?
 - Yes, proceed with point 3
 - No, check the cable or connection to Fieldgate and PC/Network
- 3 Open the DOS prompt "Start => Run => cmd "

Run	? ×	
2	Type the name of a program, folder, or document, and Windows will open it for you.	
<u>O</u> pen:	cmd 💌	
	🔽 Flun in Separate Memory Space	
	OK Cancel <u>B</u> rowse	

- 4 Enter "ping 192.168.252.1". Do you get the answer 192.168.252.1 Bytes=32...
 - Yes. The connection is OK. Check your browser settings (If a proxy server is used try to bypass the IP-address 192.168.252.1).
 - No. There is no connection to the Fieldgate.



5 Check if Fieldgate's IP and Subnet mask are in the same network as your PC: - No: Reconfigure the gateway address.

9.4 Firmware update

NOTICE NOTE!

• A firmware update is possible only with the guidance of your Endress+Hauser Service Center

Depending upon the circumstances, your Endress+Hauser Service Center may recommend:

- a firmware update via Internet
- reset to factory default parameters

as part of any remedial action. In Cases 1 and 2, you will be supplied with the appropriate Internet addresses.

Procedure

1 If not already selected, press "Switch to Administrator Mode" and log in as administrator.

2 Press Settings => Special, then scroll down to Firmware Update
 - The Firmware Update dialog appears:

Firmware Update		
Download Address Fieldgate Firmware (via http://) Download Fieldgate Firmware now Restore to Factory Defaults Reset to Bootoage Firmware	Feldgateviewer endress.com/tat/ka320/mg010404	
	Send Feest Test connection to update server (with current connection settings)	

- 3 Select the parameters you require, see Table 9-1 below, then press **Send** to start the download.
- 4 The Fieldgate is rebooted after the firmware update.

Parameter	Description	
Download Address	http address at which the firmware is stored	
Fieldgate Firmware	 The address will be supplied to you by your Endress+Hauser service center 	
Download now	Check this box to download the firmware when Send is pressed	
Restore to Factory	Check this box if the Fieldgate default parameters are to be restored	
Defaults		
Reset to Bootpage	Check this box only if you want the Fieldgate to be rebooted with the original firmware	
Firmware	supplied by the factory	
Test connection to	Click on the link to check the connection	
Update Server		
Send	Press to register your changes in the Fieldgate.	
Reset	Press to discard any changes made since the previous send.	

Table 9-1: Firmware Update parameters

Parameters

10 Accessories

10.1 Fieldgate FXA320

Product	Description	Order Code
Protective housing	 Protection class IP 66, equipped with integrated top-hat rail and closed with a transparent cover that can also be lead sealed Dimensions: 180 mm x 182 mm x 165 mm Color: Light grey RAL 7035 	52010132
DAT module	nodule For data logging function, configuration back-up and duplication of a defined configuration in several Fieldgates	
PC cable Connection cable RS-232 to Service Interface cable		52013984
Telephone cable RJ11 (analog plug, double sided, length: 5 m) 5		52014031
Triband antenna Triband flat antenna for GSM communications		52018396
Quadband antenna	Ouadband antenna Dual band station antenna for GSM communications	
Fieldgate Solutions	Special solutions including cabinet for inventory control	On request

10.2 Auxiliary units

Product	Description	Order Code
Power supply un	its	l.
RMA422	Multifunctional 1-2-channel top-hat rail device with intrinsically safe current inputs and transmitter power supply, limit value monitoring, mathematics functions and 1-2 analog outputs. RNS 221	
RNS221	Power supply unit for 2x two-wire sensors or transmitters in non-hazardous areas.	
RNS221N	Isolator with power supply for safely isolating 420 mA signal circuits	
RMA421	Multifunctional 1-channel top-hat rail device with universal input, transmitter power supply, limit value monitoring and analog output.	

11 Technical Data

Table 11–1 provides you with the most important technical data – the full technical data is to be found in Technical Information TI025S/04/en.

Property	Attribute	
Supply voltage:	AC version: 85253 VAC, 50/60 Hz DC version: 2060 VDC or 2030 VAC Solar power: 1030 VDC	
Typical current consumption:	AC version: 4.9 VA ton 8 VA, depending upon version DC version: 1.5 W to 4 W, depending upon version	
Dimensions (W x H x D):	45 mm x 108 mm x 112 mm (1.8" x 4.25" x 4.4")	
Mounting:	TS35 DIN carrier rail (EN 60715)	
Weight (approx.):	approx. 0.25 kg (approx 9 oz)	
Protection class:	II	
Degree of protection:	IP 20 Mechanical degree of protection IK06 according to IEC 62262	
Ambient temperature during	Individual mounting: -20°C +60°C (-4°F+140°F)	
operation:	Row mounting: -20°C +50°C (-4°F+122°F)	
	Protective housing: -20°C +40°C (-4°F+104°F)	
Ambient temperature for storage:	-25°C +85°C, preferably at +20°C (-13°F+185°F, preferably at 68°F)	
Climatic and mechanical application	3K3, in accordance with DIN EN 60721-3-3	
class:	3M2, in accordance with DIN EN 60721-3-3	

Table 11-1: Overview Technical Data

12 Appendix

12.1 Commissioning Fieldgate Ethernet via Web browser

NOTICE NOTE!

- The following procedure is for **Windows XP**: for other Windows operating systems, consult your network administrator
- You require administration rights for your computer
- Only one Fieldgate in delivery status may be in the network (address conflicts!)

Before starting, the Fieldgate must either:

- be installed in the network connected to a switch/hub with a straight cable or
- be connected directly to the computer with a cross-link cable.

12.1.1 Change the IP address of your computer

Procedure

1 Right-click "Start => Settings => Control Panel => Network Connections".



2 Right-click "Local Area Connection => Properties" Using the left mouse button, double-click "Internet Protocol (TCP/IP)" or click once, then click "Properties".

	egrated Fast Etherne	t Controller (3C9058-
		Configure
nis connection uses t	he following items:	
Instal	Uninstall	Pjoperties
Install Description Transmission Contro wide area network p across diverse interc	Uninstall I Protocol/Internet Pr rotocol that provides connected networks.	otocol. The default

- 3 Note the current settings, for later use, then:
 - Select Use following IP address
 - Enter e.g. 192.168.252.2 (in this example, an address 192.168.253.2 254 is valid)
 - Enter a subnet mask, e.g. 255.255.255.0
 - Click **OK** to confirm

is capability. Otherwise, you n e appropriate IP settings.	eed to ask your network administrator for
 Use the following IP address 	mancally 05
IP address:	192.168.253.2
Sybnet mask:	255 . 255 . 255 . 0
Default gateway:	2 2 2
C Ogtain DNS server addres	
Use the following DNS ser	ver addresses:
Preferred DNS server:	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
Alternate DNS server:	

12.1.2 Connect to the Fieldgate

Start the web browser, e.g. Internet Explorer. Now enter the default address of the Fieldgate "192.168.252.1" in the address field of your browser and press the "Enter" key of your computer.



2 The **Connect to** dialog appears:



- Enter the User Name: super
- Enter the Password: super
- Press **OK** to register the entries and open the Fieldgate Web Server
- 3 The Fieldgate entry page appears in the browser.
 - You are registered with administrator rights and can now set up the Fieldgate communication parameters

<u>toRefresh</u>	Refre	<u>sh</u>		Endress+Hau:
erview		Switch to Administrator Mode		Settin
urrent Time: 30.01.	2007 10:59:04 (UTC+1h)			XML Data
Tag	Description	Current Value dd.mm.yyyy hh:mm:ss	Status dd.mm.yyyy hh:mm:ss	max. Range min. Range
pardTemp	Endress+Hauser internal	31.289 °C 30.01.2007 10:59:02	OK	
<u>nk01</u>	FMI21 Lentan VZ33	91.581 % 30.01.2007 10:59:02	26.01.2007 10:29:19	
nk02	FMI21	0.153 %		

- 4 Now change the IP address of the Fieldgate as described in chap. 5.2.
 - After the information has been sent to the Fieldgate, contact will be broken off.
- 5 Change the computer IP address settings back to their original values, see chap. 12.1.1.
- 6 Reconnect to the Fieldgate by entering the new address in your Internet browser, see Step 1.

12.2 XML data elements

Table 12-1 lists the XML data elements together with the type of information they carry. The XML data is a structured document with a document header and body. The Fieldgate data is sandwiched between two identifiers <xxx> and </xxx> which indicate the start and finish of the data element. Data elements can be nested to form sections containing related information.

Element	Data Type	Description
xml version="1.0"</td <td></td> <td>Document header</td>		Document header
encoding="iso-8859-1"?>		
<fieldgate <="" ser="470009010A0" td=""><td>tag field</td><td>Header for Fieldgate data <ser>:serial number fieldgate</ser></td></fieldgate>	tag field	Header for Fieldgate data <ser>:serial number fieldgate</ser>
tag="Endress+Hauser Fieldgate"		<tag>: name fieldgate</tag>
type="full"		<type>: "full"/"partial" (short=1),</type>
devices="all">		<devices>: "all /"single" (id=, tag=)</devices>
<rev_xml></rev_xml>	string	Document Revision
<time></time>	timestamp	Current fieldgate time (UTC time)
<timezone></timezone>	unsigned16	Timezone (timeoffset to utc in minutes)
<ff_version></ff_version>	string	Hardware and software revision
<gsmp></gsmp>	string	GSM provider
<gsms></gsms>	string	Signal quality GSM Signal
<gsmti></gsmti>	timestamp	Timestamp
<os_version></os_version>	string	Operating system version
<conf></conf>	string	Hardware configuration Fieldgate
<ip></ip>	string	IP address of Fieldgate
<device <="" id="420 mA-1" td=""><td>tag field</td><td>Header for device data:</td></device>	tag field	Header for device data:
tag="Tank 1"		<id>: Unique-ID device, 420 mA-x, BINARY-x</id>
type="INTR">		<tag>: Tagname device</tag>
		<type>:"IN I RN"</type>
<vtime></vtime>	Timestamp	limestamp
<tag></tag>	string	Device tag
<hists1></hists1>	string	Limit value status of PV
<hltime1></hltime1>	Timestamp	Timestamp change of limit value status of PV
<v1></v1>	float	Process variable (PV)
<u1></u1>	float	Unit of process variable (PV)
<vstslvl></vstslvl>	integer	Device status
		0: OK
		1: Walling 2: Error
 Arrete> 	string	Despanse code & field device status (hex)
	string	Type of device (INTDNdata internal)
<type></type>	string	Device designation
<uev></uev>	string	Device designation
<iiidil></iiidil>	string	Device manufacturer
 	suing	Unique identifier of device
<pre><pre>cdob></pre></pre>	haalaan	1. Drococc veriable (DV) in everyiour
	floot	1: FIOCESS Valiable (FV) III OVEIVIEW
<	float	Output value at 4.00 IIIA Input current (internal sensor only)
<	liuat	Output value at 20.00 IIIA Input current (Internal sensor offic)
	boolean	1: Send alarm mail on optoring limits (DV)
	boolean	1: Send alarm mail on leaving limits (PV)
<0>	boolean	1: Send CMC on ontoring limits (PV)
<\$1>	boolean	1: Send SMS on leaving limits (PV)
<\$0>	boolean	1: Send Sivis on leaving limits (PV)
<tich></tich>	string	Additional text information line 1 (PV)
	string	Additional text information line 2 (PV)
<10>	noat	Low limit for process value (PV)
	float	Low low limit for process value (PV)
<ni></ni>	float	High limit for process value (PV)
<hh></hh>	float	High high limit for process value (PV)
<alt></alt>	float	Value for rate of change limit on process value (PV)
<atime></atime>	integer	Time for rate of change limit on process value (PV)
<cnho></cnho>	integer	Counter hold time = $(chno + 1)x 50 ms$

Element	Data Type	Description
<cntm></cntm>	boolean	Counter direction, $0 = up$, $1 = down$
<mode></mode>	integer	Binary input mode: $0 = $ switch, $1 = $ counter, $2 = $ frequency
<cnts></cnts>	float	Start value of counter
<cntg></cntg>	float	Counts per unit
<lt></lt>	string	Linearization table
<val></val>	float	Last value stored in memory
<max></max>	float	Max. value reached by process value during operation (PV)
<min></min>	float	Min. value reached by process value during operation (PV)
<hy></hy>	float	Hysteresis for re-entering limits (PV)
<swl></swl>	float	Switching level for switch status display
<swsts></swsts>	integer	Text used to indicate change in switching status 1 = " uncovered" / "covered" 2 = "covered" / "uncovered" 3 = "on" / "off" 4 = "off" / "on" 5 = "empty" / "full" 6 = "full" / "empty" 7 = "good" / "bad" 8 = "bad" / "good"
<_t>	string	Device name/Tag (internal sensors only)
<_h>	boolean	1: Hide device from device overview
<_u>	string	Output unit (internal analog sensor only)

Table 12-1: XML data elements

Index

Ν	u	m	e	ri	cs	
	u		U .		υ	

420 mA devices	17
Α	

A	
Accessories	94
Administration Mode	56
All Sensor Limits	62
Analog Input Setup 65,	73
Autorefresh	82

С

Change password	75
Clearing Logs	62
Commissioning	25
Configuring the web server	53

D

E

Electrical symbols	
Endress+Hauser	
Error Log 78	
Establishing communication 37, 39, 43	
Ethernet 10BaseT 13	
Explosion protection	

F

Fieldgate Analog	24
Fieldgate configuration	56
Fieldgate Ethernet	24
Fieldgate GSM	24
Fieldgate identification	57
Fieldgate location 56, 57,	75
Firmware update	93

G

Get Configuration File	62
GPRS support	14

Η

Hardware Configuration	76
Hardware installation	19
Hardware lock	70
Hardware version	76
Hysteresis	67

Ι	
Info	63
Input	75
Installation	5
Inventory Control	12

L

Limit values	67
Logging on 53,	71

М

Mail	59
Mail setup	50
Menu bar	54
Message Text	53
Messagesl	49
Miscellaneous Settings	70
Mobile communications network	14
Mounting	19

Ν

Nameplate	. 9
Navigation bar	55
Network	59
Network Setup	59
New Password 58,	75

0

Operability	16
Operating system	76
Operation	5
Overview	64, 72

P

-	
Password	53
Power supply	21

R

Refresh	82
Relay 15,	21
Reset	91
Restore Configuration	62
Retype New Password	75

S So

Safety conventions	7
Scan setup	50
Security setup	75
Sensor error	59
Sensor error setup 7	73
Service interface 16, 2	20
Settings 56, 5	57
Setup details	73
SIM card 2	20
SMS setup 5	52
Special	52
System architecture 1	17

Т

1
Tag setup 73
Technical data
Telephone network 13
Time server setup 47
Trouble-shooting

U

-	
User	. 58
User interface	. 54
User Mode	, 71
User Name 58	, 75
User roles	. 53
User Setup	. 58

V

Viewing Information		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	7	1
---------------------	--	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

W

Web Server	53 21
Web browser	97

XML	data				•														•	•		 		74
XML	expo	rt		•	•		•	•	•	•	•	•	 •	•	•	•	•	•	•	•		 		83

www.endress.com/worldwide



People for Process Automation