

Member of the FM Global Group

FM Approvals
1151 Boston Providence Turnpike
P.O. Box 9102 Norwood, MA 02062 USA
T: 781 762 4300 F: 781-762-9375 www.fmapprovals.com

CERTIFICATE OF COMPLIANCE

HAZARDOUS (CLASSIFIED) LOCATION ELECTRICAL EQUIPMENT

This certificate is issued for the following equipment:

```
PROMASS abc-defghiknop. Mass Flowmeter.
```

XP-IS-DIP / I,II,III / 1 / ABCDEFG / T*; XP-IS / I / 1 / IIC / T* - FES0048; Entity, FISCO; Type 4X

Special Conditions of Use:

1. For installation instructions and the Temperature Class (*) which applies to specific models, ambient temperatures (Ta), and process medium temperatures (Tmed), refer to Control Drawing FES0048.

```
Entity Parameters:
I/O option S and R HART Current Output or Current Output:
 V_{oc} = 21.8 \text{ V}, I_{sc} = 90 \text{ mA}, P_o = 0.49 \text{ W}, C_a = 150 \text{ nF}, L_a = 4.1 \text{ mH};
 V_{\text{Max}} = 30 V, I_{\text{Max}} = 10 mA, P_i = 0.3 W, C_i = 6 nF, L_i = 0.
I/O Option S and T Frequency Output:
 V_{Max} = 30 \text{ V}, I_{Max} = 300 \text{ mA}, P_i = 0.6 \text{ W}, C_i = 6 \text{ nF}, L_i = 0.
I/O option T and U HART Current Output or Current Output:
 V_{\text{Max}} = 30 \text{ V}, I_{\text{Max}} = 100 \text{ mA}, P_i = 1.25 \text{ W}, C_i = 6 \text{ nF}, L_i = 0.
I/O Options F and G (Entity, FISCO):
 V_{Max} = 30 \text{ V}, I_{Max} = 600 \text{ mA}, P_i = 8.5 \text{ W}, C_i = 5 \text{ nF}, L_i = 10 \mu\text{H}.
a = Type of electronic: 40, 80, 83 or 84.
b = Type of sensor: A (with <math>h = N).
b = Type of sensor: E (with h = N or O; (c=80) with h = P)
b = Type of sensor: F [(c = 08, 15, 25, 40, 50, 80, 1H, 1F, 2F) with h = N or O; (c = 80, 1H, 1F, 2F)
                          with h = P1
b = Type of sensor: I (c = 08, 15, 16, 25, 26, 40, 41, 50, 51, 80) with h = N or O; (c = 41, 50, 51,
                          80) with h = P].
b = Type of sensor: M [(c = 08, 15, 25, 40, 50, 80) with h = N or O; (c = 80) with h = P].
b = Type of sensor: H [(c = 08, 15, 25, 40, 50) with h = N or O; (c = 50) with h = P].
b = Type of sensor: P[(c = 08, 15, 25, 40, 50)] with h = N \text{ or } O; (c = 50)] with h = P].
b = Type of sensor: S [(c = 08, 15, 25, 40, 50) with h = N or O; (c = 50) with h = P].
b = Type of sensor. O [(c = 80, 1H, 1F, 2F) with h = N or O; (c = 80, 1H, 1F, 2F) with h = P]
b = Type of sensor: X. [(c = 3F) with h = N or O; (c = 3F) with h = P]
c = Size: 01, 02, 04, 08, 15, 16, 25, 26, 40, 41, 50, 51, 80, 1H, 1F, 2F, 3F, XX.
d = Material of tube/high pressure version: any single number or letter.
e = Process connection with sealing for Promass M: any triple number or letter (up to 400 bar).
f = Certifications/Treatments: any single number or letter.
```



Member of the FM Global Group

g = Calibration: any single number or letter.

h = Approvals: N or O(Div. 1, GP A, B, C, D, E, F, G) or P (Div. 1, GP C, D, E, F, G).

i = Version: A, E, F, J, K, L, M, N, U, V, W, 1, 4, 7 or 8.

k = Cable gland: B or X.

n = Version: 0, 1, 2, 3, 4, 5, 7, 8, 9, A, B, C, D, E, F, G, H, K, L, M, N, P, Q, R, S or X.

o = Software: any single number or letter.

p = I/O's: A, B, C, D, E, F, G, H, J, K, L, M, N, P, Q, R, S, T, U, V, W, X, 0, 1, 2, 3, 4, 5, 6, 7, 8 or 9.

** = Option in two digits (none, two or multiple of two digits); any combination of number or letter

+, # = Signs used as indicator for optional abbreviation of extended order code

AND

PROMASS abc-defghiknop+#**#. Mass Flowmeter.

NI-ANI/I/2/ABCD/T*; NI-ANI/2/IIC/T*; DIP/II,III/1/EFG/T*; Nonincendive Sensor Field Wires and Nonincendive Fieldbus Field Wires — FES0050; Type 4X

Nonincendive Fieldbus Field Wire Parameters:

Vmax = 35V, Ci = 5nF, Li = $10 \mu H$

Special conditions of use:

1. For installation instructions and the Temperature Class (*) which applies to specific models, ambient temperatures (Ta), and process medium temperatures (Tmed), refer to Control Drawing FES0050.

a = Type of electronic: 40, 80, 83 or 84

b = Type of sensor: A, E, F, H, I, M, P, S, O or X

c = Size: 01, 02, 04, 08, 15, 16, 25, 26, 40, 41, 50, 51, 80, 1H, 1F, 2F, 3F or XX

d = Material of tube/high pressure version: any single number or letter

e = Process connection with sealing for Promass M: any triple number or letter (up to the pressure of 400 bar)

f = Certifications/Treatments: any single number or letter

g = Calibration: any single number or letter

h = Approvals: R (Division 2)

i = Version: A, B, C, D, G, H, 1, 2, 3, 5, or 6

k = Cable gland: A, B, C, D, K, L, M, Q, R, S or X

n = Version: 0, 1, 2, 3, 4, 5, 7, 8, 9, A, B, C, D, E, F, G, H, K, L, M, N, P, Q, R, S or X

o = Software: any single number or letter

p = I/O's: A, B, C, D, E, H, I, J, K, L, M, N, P Q, V, W, X, 0, 1, 2, 3, 4, 5, 6, 7, 8 or 9

** = Option in two digits (none, two or multiple of two digits); any combination of number or letter

+, # = Signs used as indicator for optional abbreviation of extended order code

CNGmass DCI 8aFb-cdefghikno+#**#. Mass Flowmeter.

XP-IS-DIP / I,II,III / 1 / ABCDEFG / T*; XP-IS / I / 1 / IIC / T* - FES0182; Entity, FISCO; Type 4X

Special Conditions of Use:

1. For installation instructions and the Temperature Class (*) which applies to specific models, ambient temperatures (Ta), and process medium temperatures (Tmed), refer to Control Drawing FES0182.

Entity Parameters:

I/O option S and R HART Current Output or Current Output:

 $V_{oc} = 21.8 \text{ V}, I_{sc} = 90 \text{ mA}, P_o = 0.49 \text{ W}, C_a = 150 \text{ nF}, L_a = 4.1 \text{ mH};$

 V_{Max} = 30 V, I_{Max} = 10 mA, P_{i} = 0.3 W, C_{i} = 6 nF, L_{i} = 0.

I/O Option S and T Frequency Output:

 $V_{\text{Max}} = 30 \text{ V}, I_{\text{Max}} = 300 \text{ mA}, P_i = 0.6 \text{ W}, C_i = 6 \text{ nF}, L_i = 0.$

I/O option T and U HART Current Output or Current Output:

 $V_{\text{Max}} = 30 \text{ V}, I_{\text{Max}} = 100 \text{ mA}, P_i = 1.25 \text{ W}, C_i = 6 \text{ nF}, L_i = 0.$

I/O Options F and G (Entity, FISCO):

 $V_{Max} = 30 \text{ V}, I_{Max} = 600 \text{ mA}, P_i = 8.5 \text{ W}, C_i = 5 \text{ nF}, L_i = 10 \mu\text{H}.$

- a = Version: any single number or letter.
- b = Size: 08, 15, 25, XX.
- c = Material of tube/high pressure version: any single number or letter.
- d = Process connection: any triple number or letter (up to 400 bar).
- e = Certifications/Treatments: any single number or letter.
- f = Calibration: any single number or letter.
- g = Approvals: M, N or 8 (Div. 1, GP A, B, C, D, E, F, G).
- h = Version: A, E, F, J, K, L, M, N, U, V, W, 1, 4, 7 or 8.
- i = Cable gland: B or X.
- k = Version: 0, 1, 2, 3, 4, 5, 7, 8, 9, A, B, C, D, E, F, G, H, K, L, M, N, P, Q, R, S or X.
- n = Software: any single number or letter.
- o = I/O's: A, B, C, D, E, F, G, H, J, K, L, M, N, P, Q, R, S, T, U, V, W, X, 0, 1, 2, 3, 4, 5, 6, 7, 8 or 9.
- ** = Option in two digits (none, two or multiple of two digits); any combination of number or letter
- +, # = Signs used as indicator for optional abbreviation of extended order code

AND

Cubemass DCI 8Cab-cdefghiknop+#**#. Mass Flowmeter.

XP-IS-DIP / I,II,III / 1 / ABCDEFG / T*; XP-IS / I / 1 / IIC / T* - FES0183; Entity, FISCO; Type 4X

Special Conditions of Use:

1. For installation instructions and the Temperature Class (*) which applies to specific models, ambient temperatures (Ta), and process medium temperatures (Tmed), refer to Control Drawing FES0183.

Entity Parameters:

I/O option S and R HART Current Output or Current Output:

 $V_{oc} = 21.8 \text{ V}, I_{sc} = 90 \text{ mA}, P_o = 0.49 \text{ W}, C_a = 150 \text{ nF}, L_a = 4.1 \text{ mH};$

 $V_{\text{Max}} = 30 \text{ V}, I_{\text{Max}} = 10 \text{ mA}, P_i = 0.3 \text{ W}, C_i = 6 \text{ nF}, L_i = 0.$

I/O Option S and T Frequency Output:

 $V_{\text{Max}} = 30 \text{ V}, I_{\text{Max}} = 300 \text{ mA}, P_i = 0.6 \text{ W}, C_i = 6 \text{ nF}, L_i = 0.$

I/O option T and U HART Current Output or Current Output:

 V_{Max} = 30 V, I_{Max} = 100 mA, P_i = 1.25 W, C_i = 6 nF, L_i = 0.

I/O Options F and G (Entity, FISCO):

 V_{Max} = 30 V, I_{Max} = 600 mA, P_i = 8.5 W, C_i = 5 nF, L_i = 10 μ H.

- a = Version: any single number or letter.
- b = Size: 01, 02, 04, 06, XX.
- c = Approvals: C3 or 84 (Div. 1, GP A, B, C, D, E, F, G).
- d = I/O's: A, B, C, D, E, F, G, H, J, K, L, M, N, P, Q, R, S, T, U, V, W, X, 0, 1, 2, 3, 4, 5, 6, 7, 8 or 9.
- e = Version: 0, 1, 2, 3, 4, 5, 7, 8, 9, A, B, C, D, E, F, G, H, K, L, M, N, P, Q, R, S or X
- f = Display/Operation: any single number or letter
- g = Operating Language: any single number or letter.
- h = Version: A, E, F, J, K, L, M, N, U, V, W, 1, 4, 7 or 8.
- i = Cable gland: B or X.
- k = Material of tube: any single number or letter.
- n = Process connection: any single number or letter.
- o = Secoundary containment: any single number or letter.
- p = Calibration/Treatment: any single number or letter.
- ** = Option in two digits (none, two or multiple of two digits); any combination of number or letter
- +, # = Signs used as indicator for optional abbreviation of extended order code

Equipment Ratings:

Explosionproof for Class I Division 1, Group A, B, C and D and Class I, Zone 1, Group IIC; dustignitionproof for Classes II and III Division 1, Groups E, F and G hazardous (classified) outdoor (Type 4X) locations; sensor circuits and signal output circuits (p = I/O options F, G, R, S, T, U) intrinsically safe for Class I, II, III, Division 1, Groups A, B, C, D, E, F and G and Class I Zone 1 Groups IIC when installed in accordance with FM Control Drawing FES0048 (Promass) or FES00182 (CNGmass DCI) or FES0183 (Cubemass DCI)..

Nonincendive for Class I Division 2, Group A, B, C and D and Class I, Zone 2, Group IIC; dustignition of for Classes II and III Division 1, Group E, F and G hazardous (classified) outdoor (Type 4X) locations; sensor circuits nonincendive for Class I, Division 2, Groups A, B, C and D and Class I, Zone 2, Group IIC. Nonincendive field wiring for Class I Division 2, Group A, B, C and D and Classes II and III Division 1, Group E, F and G hazardous (classified) locations when installed in accordance with FM Control Drawing FES0050 (Promass)..

FM Approved for:

Endress + Hauser Flowtec AG Kaegenstrasse 7 CH-4153 Reinach, Switzerland



This certifies that the equipment described has been found to comply with the following Approval Standards and other documents:

Class 3600	1998
Class 3610	2010
Class 3611	2004
Class 3615	2006
Class 3810	2005
ANSI/NEMA 250	1991

Original Project ID: 3009083

Approval Granted: December 19, 2000

Subsequent Revision Reports / Date Approval Amended

Report Number	Date	Report Number	Date
3012866	December 28, 2001	•	
3012691	May 7, 2002		
3015235	September 4, 2002		
3016669	February 21, 2003		
3021216	August 31, 2003		
050120	February 28, 2005		
050818	September 1, 2005		9
3028484	November 20, 2006		
070130	July 25, 2007		
3030403	November 30, 2007		
070905	December 20, 2007		
071115	December 31, 2007		
3038437	June 9, 2010		
3042811	May 9, 2011		
3043873	September 21, 2011		
110930	January 27,	2011	


FM Approvals LLC

Technical Team Manager

Hazardous Locations

Class I Div. 2 Groups ABCD or Class I Zone 2 Groups IIC And Class II and III Division 1 Groups EFG

Transmitter Promass 40 / 8. alternative stainless steal housing

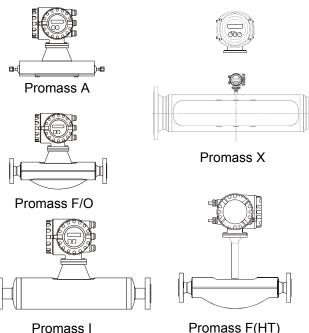

Notes:

 
- Control room equipment shall not use or generate more than 250V rms.
- 2. Caution: Use supply wires suitable for 5°C above ambient temperature, but at least for 80°C / 176°F
- 3. Class II Group G: The surface temperature of the apparatus cannot exceed 165°C / 329°F.
- Installation of Transmitter circuit wiring according to NEC using threaded conduit or other wiring methods in accordance with articles 500 to 510.
- 5. Warning: Explosion Hazard Substitution of components may impair suitablility for Class I, Division 2.
- 6. For Installation of Fieldbus communication circuits of Promass 4/8****-********** / /K+#**# see sheet 3.
- The following Sensors are Dual Seal devices in accordance with ANSI/ISA-12.27.01-2003: Promass A, F, F(HT), H, O, P, S and X. Promass E is a Dual Seal device if the optional rupture disk is present.



Promass E



Promass H/P/S



Promass M

Promass 40/80/83/84 A/E/F/H/I/M/O/P/S/X

NI / I / 2 / ABCD; DIP / II, III / 1 / EFG Class I Zone 2 GP IIC

Temperature class for the compact version is T5 – T1

Range of medium temperature:

Range of ambient temperature : -40°C ... +60°C / -40 °F ... +140 °F

Temperature table		n	nax. med	ium temp	erature	
	T6	T5	T4	Т3	T2	T1
Ta = 60 °C						
Promass A/E/F/H/I/M/O/P/S/X		100°C	135°C	200°C	200°C	200°C
Promass F(HT)	-	100°C	135°C	200°C	300°C ^{*)}	350°C ^{*)}

^{*)} Device shall be installed in such a way, that the transmitter enclosure is not located above the sensor.

Options	Control Drawing
Promass 40/80/83/84 E DN80 (optional version)	see FES 0164

Aenderungen:	Н	15.05.04/MDI	Ν	11.11.09/SCHK				
	J	28.06.05/SCHK	0	08.02.11/KLI				
	Κ	15.08.06/BDA	Р	23.05.11/SCHK	Ersatz für:			
	L	20.10.06/BDA	Q	08.08.12/BIF	Ersteller: FES / ID '	1090		
	М	05.09.07/BDA			FILE M:\ZEICHNG\FES0	050\P\FES0050Q.doc		
FM Control Drawing Class I Division 2 /						Gezeichnet	09.10.00	Bn
Class I Zone 2						Geprüft		
Compact ve	rsi	on				Ex-geprüft	08.08.12	BIF
Promass 40/80/83/84 A/E/F/H/I/M/O/P/S/X						Gesehen		




FES0050Q

1/5

Hazardous Locations

Class I Div. 2 Groups ABCD or Class I Zone 2 Groups IIC and Class II and III Division 1 Groups EFG

Transmitter enclosure Promass 40 / 8.

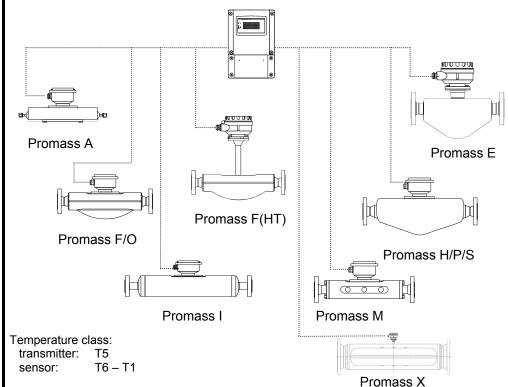

Range of medium temperature:

Promass A/F/F(HT)/H/O/P/S/X : -200°C ... +200°C / -328 °F ... +392 °F Promass I/M : -50°C ... +150°C / -58 °F ... +302 °F Promass E : -40°C ... +125°C / -40 °F ... +140 °F

Range of ambient temperature: -40°C ... +60°C / -40 °F ... +140 °F

Temperature table:

		max. medium temperature						
Ta = 60 °C	T6	T5	T4	T3	T2	T1		
Promass A/F/H/O/P/S/X	60°C	100°C	135°C	200°C	200°C	200°C		
Promass I/M	60°C	100°C	135°C	150°C	150°C	150°C		
Promass E	60°C	100°C	135°C	140°C	140°C	140°C		
Promass F(HT)	70°C	100°C	135°C	200°C	300°C	350°C		

PROMASS 40/80/83/84 A/E/F/H/I/M/O/P/S/X

NI / I / 2 / ABCD; DIP / II, III / 1 / EFG, Class I Zone 2 GP IIC

Notes:

H 15.05.04/MDI

- 1. Control room equipment shall not use or generate more than 250V rms.
- 2. Caution: Use wires suitable for 5°C above ambient temperature, but at least for 80°C / 176°F.
- 3. Class II Group G: The surface temperature of the apparatus cannot exceed 165°C / 329°F.
- Installation of circuit wiring according to NEC using threaded conduit or other wiring methods in accordance with articles 500 to 510.
- 5. Allowed cable glands for nonincendive field wiring: NPT ½". G ½" or M20x1.5
- 6. Non-incendive field circuit wiring (ANI) when installed with a cable that has the following cable parameters: L_C = 500 μ H per km and C_C = 500 nF per km. e.g. cable type 6LI9YCY-FCY 0.38 qmm or 6 Li9YFCY 0,38 qmm FCY. The maximum allowed cable length is 120 m.
- 7. Warning: Substitution of components may impair suitablility for Class I, Div.2.
- 8. On consideration of this control drawing a sensor which was connected to a transmitter of Promass 60/63/64 can also be installed with a Promass 80/83 transmitter.
- 9. For Installation of Fieldbus communication circuits of Promass 4/8****-*********** //K+#**# see sheet 3.
- The following Sensors are Dual Seal devices in accordance with ANSI/ISA-12.27.01-2003: Promass A, F, F(HT), H, O, P, S and X. Promass E is a Dual Seal device if the optional rupture disk is present.

Allocation for Sensor's to Gas Groups:


Flowtec AG, Kägenstrasse 7, CH-4153 Reinach BL1, Postfach


	ANI	for Class I Divisi	ion 2
	Groups AB	Group C	Group D
Promass A DN 1 - 4		Х	Х
Promass F DN 8 - 50	Х	Х	X
Promass F/O DN 80/100/150/250		Х	X
Promass I DN 8 - 15	Х	Х	Х
Promass I DN 25 - 80		Х	Х
Promass M DN 8 - 50	Х	Х	Х
Promass M DN 80		Х	Х
Promass H/P/S DN 8 - 40	Х	Х	Х
Promass H/P/S DN 50		Х	Х
Promass E DN 8 - 80	Х	Х	Х
Promass E DN 80		Х	Х
Promass X DN350		Х	Х

Sensors not suitable as ANI for Groups A, B may be installed in these groups, when conduit is used.

5								
	J	28.06.05/SCHK	0	08.02.11/KLI				
	Κ	15.08.06/BDA	Р	23.05.11/SCHK	Ersatz für:			
	L	20.10.06/BDA	Q	08.08.12/BIF	Ersteller: FES / ID	1090		
	М	05.09.07/BDA			FILE M:\ZEICHNG\FES0	050\P\FES0050Q.doc		
FM Control Drawing Class I Division 2 /						Gezeichnet	09.10.00	Bn
Class I Zone 2						Geprüft		
Remote version						Ex-geprüft	08.08.12	BIF
Promass 40/	Promass 40/80/83/84 A/E/F/H/I/M/O/P/S/X					Gesehen		
			FES0050)Q	2/	5		

N 11.11.09/SCHK

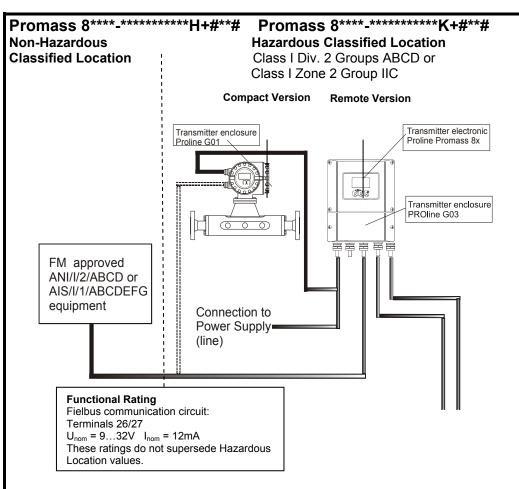

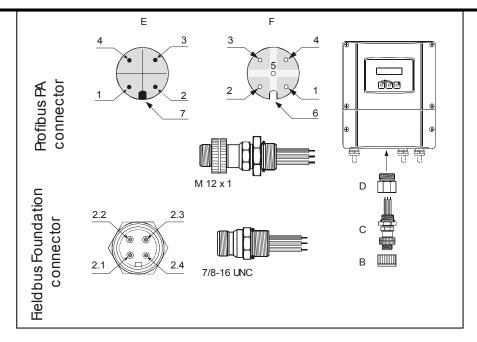

B = Protection cap for connector,

C = Fieldbus connector, F = Connector (female) D = Thread adapter

E = Connector on housing (male), Pin assignment:

Profibus PA

1 = Brown wire, PA+ (terminal 26)

2 = Not connected

3 = Blue wire, PA- (terminal 27)

4 = Black wire, ground

5 = Female connector not assigned

6 = Positioning groove

7 = Positioning key

Fieldbus Foundation

2.1 = Brown wire, FF+ (terminal 26)

2.2 = Blue wire, FF- (terminal 27)

2.3 = Grey wire, ground

2.4 = Not assigned

Notes:

- Fieldbus cable connectors are suitable for Class I, Division 2, Groups A, B, C, D if connected to associated nonincendive field wiring or associated apparatus.
- The Nonincendive Field Wiring Circuit Concept allowes interconnection
 of nonincendive field wiring apparatus with associated nonincendive
 field wiring apparatus or associated apparatus not specifically examined
 in combination as a system using any of the wiring methods permitted
 for unclassified locations, when:

 $V_{max} \ge V_{oc}$ or V_t , $C_a \ge C_i + C_{cable}$, $L_a \ge L_i + L_{cable}$

Fieldbus communication circuit Terminals 26/27 (current controlled circuit)

V_{max}	I _{max}	Ci	Li
35V	See note 3	5nF	10μH

- For this current controlled circuit, the parameter Imax is not required and need not to be aligned with parameter I_{SC} and I_t of the associated nonincendive field wiring or associated apparatus.
- 4. Fieldbus communication circuits Terminals (26/27) are suitable for connection according to Fieldbus Nonincendive Concept (FNICO) see sheet 4.

Änderungen:	Н	15.05.04/MDI	Z	11.11.09/SCHK	
	J	28.06.05/SCHK	0	08.02.11/KLI	
	Κ	15.08.06/BDA	Р	23.05.11/SCHK	Ersatz für:
	L	20.10.06/BDA	Q	08.08.12/BIF	Ersteller: FES / ID 1090
	М	05.09.07/BDA			FILE M:\ZEICHNG\FES0050\P\FE

FM Control Drawing Cl. I Div. 2 / Zone 2

Fieldbus communication circuits

Compact version / Remote version

Promass 40/80/83/84 A/E/F/H/I/M/O/P/S/X

HNG\FES00	050\P\FES0050Q.doc		
	Gezeichnet	09.10.00	Bn
HNG\FES0	Geprüft		
	Ex-geprüft	08.08.12	BIF
	Gesehen		



FES0050Q

3/5

FNICO CONCEPT

The FNICO-concept allows interconnection of nonincendive apparatus to associated apparatus not specially examined in such combination. The criteria for interconnection is that the voltage (Ui or V_{max}) which nonincendive apparatus can receive and nonincendive, must be equal or greater than the voltage (Uo, Voc or Vt) levels which can be delivered by the associated apparatus. In addition, the maximum unprotected capacitance (Ci) and inductance (Li) of each apparatus (other than the termination) connected to the fieldbus must be less than or equal to 5 nF and 10 μH respectively.

In each segment only one active device, normally the associated apparatus, is allowed to provide the necessary energy for the fieldbus system. The voltage Uo, Voc or Vt of the associated apparatus has to be limited to the range of 14V to 24V. All other equipment connected to the bus cable has to be passive, meaning that they are not allowed to provide energy to the system, except a leakage current of $50\mu A$ for each connected device. Separately powered equipment needs a galvanic isolation to assure that the nonincendive fieldbus circuit remains passive.

The cable used to interconnect the devices needs to have the parameter in the following range:

Loop Resistance R': 15...150 Ohm/km Inductance per unit length L': 0.4...1 mH/km Capacitance per unit length C': 80...200 nF/km

C' = C' line/line + 0.5 C' line/screen, if both lines are floating, or C' = C' line/line + C' line/screen, if the screen is connected to one line

Length of trunk cable: ≤ 1000 mLength of spur cable: ≤ 30 mLength of splice: ≤ 1 m


At each end of the trunk cable an approved infallible line termination with following parameters is suitable:

R = 90...100 Ohm $C = 0...2.2 \,\mu\text{F}$


One of the allowed terminations might already be integrated in the associated apparatus. The associated apparatus has to be installed within 30m from the end of the trunk cable. The number of passive apparatus connected to the bus segment is not limited due to NI reasons. If the above rules are respected, up to a total lenght of 1000 m (sum of trunk and all spur cables), the inductance and the capacitance of the cable will not impair the safety of the installation.

Notes:


- 1. FM approved apparatus with associated nonincendive field wiring apparatus or associated apparatus must be installed with manufacturers instructions.
- 2. Be aware of multiple earthing of the screen.
- 3. Caution: Use only supply wires suitable for 5°C above surrounding temperature.
- 4. The polarity for connection terminals 26 (+) and 27 (-) is of no importance due to an internal rectifier.

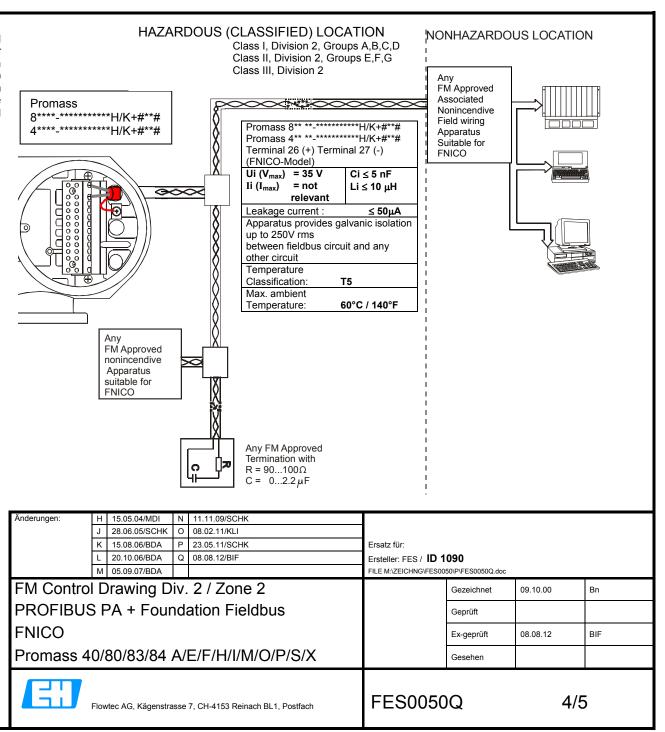

 - 1) Thread: M20x1.5, NPT ½ ", NPT¾" or G ½"
- 2) Approved / Certiffied receptacle for process wiring for Cl.I, Div. 2



 3) Listed receptacle for process wiring (general purpose)



Component ratings:

- Wire at least AWG 28
- Dielectric strength of wire insulation at least 50 V
- Current rating of components at least 1 A
- Temperature range at least -40 °C ... +70 °C

Notes:

1. Class I Division 2 Groups ABCD, Class II Division 1 Groups EFG and Class III

Flow meter with cable entry M20x1.5 thread, NPT1/2" thread, NPT 3/4" thread:

- Install all per National Electrical Code NEC and use supply wires suitable for 10 °C / 18 °F above ambient temperature.
- Class II Group G: The surface temperature of the apparatus cannot exceed 165 °C / 329°F
- 2. Class I Division 2 Groups ABCD

Flow meter with FM approved receptacles (plug-in connector) suitable for Class I, Div. 2 installation:

- Install per National Electrical Code NEC
- Install tool secured guard on the conection to render the connection normally not arcing.
- 3. Class I Division 2 Groups ABCD:

Flowmeters with listed cable glands, pig tails or receptacles (plug in connector):

- The connector must not be removed when energized. Therefore the warning "Do not separate when energized" must be readable after installation.
- Install per National Electrical Code NEC
- Non-hazardous classified areas:

All of the above described cable entries are suitable for installations in non-hazardous areas

Install per National Electrical Code NEC

Änderungen:	Н	15.05.04/MDI	Ν	11.11.09/SCHK				
	J	28.06.05/SCHK	0	08.02.11/KLI				
	K	15.08.06/BDA	Ρ	23.05.11/SCHK	Ersatz für:			
	L	20.10.06/BDA	Ø	08.08.12/BIF	Ersteller: FES / ID 1	090		
	М	05.09.07/BDA			FILE M:\ZEICHNG\FES00	50\P\FES0050Q.doc		
FM Control Drawing Div. 2 / Zone 2						Gezeichnet	09.10.00	Bn
Cable entries						Geprüft		
						Ex-geprüft	08.08.12	BIF
Promass 4	0/8	80/83/84	A/	E/F/H/I/M/O/P/S/X		Gesehen		
	Flow	vtec AG, Kägenstra	isse	7, CH-4153 Reinach BL1, Postfach	FES0050Q 5/5			