


Operating Instructions

Proline Promass E 200

PROFIBUS PA

Coriolis flowmeter

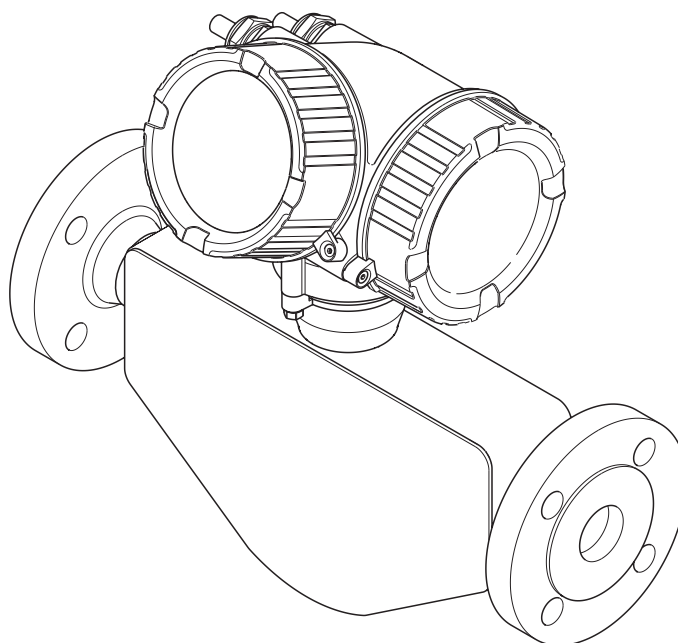

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these Instructions.

Table of contents

1	Document information	6		
1.1	Document function	6		
1.2	Symbols used	6		
1.2.1	Safety symbols	6		
1.2.2	Electrical symbols	6		
1.2.3	Tool symbols	6		
1.2.4	Symbols for certain types of information	7		
1.2.5	Symbols in graphics	7		
1.3	Documentation	7		
1.3.1	Standard documentation	8		
1.3.2	Supplementary device-dependent documentation	8		
1.4	Registered trademarks	8		
2	Basic safety instructions	9		
2.1	Requirements for the personnel	9		
2.2	Designated use	9		
2.3	Workplace safety	10		
2.4	Operational safety	10		
2.5	Product safety	10		
2.6	IT security	11		
3	Product description	12		
3.1	Product design	12		
4	Incoming acceptance and product identification	13		
4.1	Incoming acceptance	13		
4.2	Product identification	13		
4.2.1	Transmitter nameplate	14		
4.2.2	Sensor nameplate	15		
4.2.3	Symbols on measuring device	16		
5	Storage and transport	17		
5.1	Storage conditions	17		
5.2	Transporting the product	17		
5.2.1	Measuring devices without lifting lugs	17		
5.2.2	Measuring devices with lifting lugs	18		
5.2.3	Transporting with a fork lift	18		
5.3	Packaging disposal	18		
6	Installation	19		
6.1	Installation conditions	19		
6.1.1	Mounting position	19		
6.1.2	Requirements from environment and process	21		
6.1.3	Special mounting instructions	23		
6.2	Mounting the measuring device	23		
6.2.1	Required tools	23		
6.2.2	Preparing the measuring device	24		
6.2.3	Mounting the measuring device	24		
6.2.4	Turning the transmitter housing	24		
6.2.5	Turning the display module	24		
6.3	Post-installation check	25		
7	Electrical connection	26		
7.1	Connection conditions	26		
7.1.1	Required tools	26		
7.1.2	Connecting cable requirements	26		
7.1.3	Terminal assignment	29		
7.1.4	Pin assignment, device plug	29		
7.1.5	Shielding and grounding	29		
7.1.6	Requirements for the supply unit	31		
7.1.7	Preparing the measuring device	31		
7.2	Connecting the measuring device	31		
7.2.1	Connecting the transmitter	31		
7.2.2	Ensuring potential equalization	33		
7.3	Special connection instructions	34		
7.3.1	Connection examples	34		
7.4	Hardware settings	34		
7.4.1	Setting the device address	34		
7.5	Ensuring the degree of protection	35		
7.6	Post-connection check	36		
8	Operation options	37		
8.1	Overview of operation options	37		
8.2	Structure and function of the operating menu	38		
8.2.1	Structure of the operating menu	38		
8.2.2	Operating philosophy	39		
8.3	Access to the operating menu via the local display	40		
8.3.1	Operational display	40		
8.3.2	Navigation view	41		
8.3.3	Editing view	43		
8.3.4	Operating elements	45		
8.3.5	Opening the context menu	45		
8.3.6	Navigating and selecting from list	47		
8.3.7	Calling the parameter directly	47		
8.3.8	Calling up help text	48		
8.3.9	Changing the parameters	49		
8.3.10	User roles and related access authorization	50		
8.3.11	Disabling write protection via access code	50		
8.3.12	Enabling and disabling the keypad lock	50		
8.4	Access to the operating menu via the operating tool	51		
8.4.1	Connecting the operating tool	51		
8.4.2	FieldCare	53		
8.4.3	SIMATIC PDM	54		

9	System integration	55	11.7	Showing data logging	100
9.1	Overview of device description files	55	12	Diagnostics and troubleshooting	103
9.1.1	Current version data for the device	55	12.1	General troubleshooting	103
9.1.2	Operating tools	55	12.2	Diagnostic information on local display	105
9.2	Device master file (GSD)	55	12.2.1	Diagnostic message	105
9.2.1	Manufacturer-specific GSD	55	12.2.2	Calling up remedial measures	107
9.2.2	Profile GSD	56	12.3	Diagnostic information in FieldCare	107
9.3	Cyclic data transmission	56	12.3.1	Diagnostic options	107
9.3.1	Block model	56	12.3.2	Calling up remedy information	108
9.3.2	Description of the modules	57	12.4	Adapting the diagnostic information	109
10	Commissioning	62	12.4.1	Adapting the measured value and device status	109
10.1	Function check	62	12.4.2	Adapting the diagnostic behavior	110
10.2	Switching on the measuring device	62	12.5	Overview of diagnostic information	112
10.3	Configuring the device address via software	62	12.5.1	Diagnostic of sensor	113
10.3.1	PROFIBUS network	62	12.5.2	Diagnostic of electronic	114
10.4	Setting the operating language	62	12.5.3	Diagnostic of configuration	118
10.5	Configuring the measuring device	63	12.5.4	Diagnostic of process	122
10.5.1	Defining the tag name	64	12.6	Pending diagnostic events	126
10.5.2	Setting the system units	65	12.7	Diagnostic list	126
10.5.3	Selecting and setting the medium	68	12.8	Event logbook	127
10.5.4	Configuring the communication interface	69	12.8.1	Event history	127
10.5.5	Configuring the local display	69	12.8.2	Filtering the event logbook	127
10.5.6	Configuring the low flow cut off	72	12.8.3	Overview of information events	127
10.5.7	Configuring the partial filled pipe detection	74	12.9	Resetting the measuring device	129
10.5.8	Configuring the analog inputs	75	12.9.1	Function scope of the "Device reset" parameter	129
10.6	Advanced settings	76	12.10	Device information	129
10.6.1	Carrying out a sensor adjustment	77	12.11	Firmware history	131
10.6.2	Configuring the pulse/frequency/switch output	77	13	Maintenance	132
10.6.3	Configuring the totalizer	85	13.1	Maintenance tasks	132
10.6.4	Carrying out additional display configurations	87	13.1.1	Exterior cleaning	132
10.6.5	Administration configuration	89	13.1.2	Interior cleaning	132
10.7	Configuration management	90	13.2	Measuring and test equipment	132
10.7.1	Function scope of the "Configuration management" parameter	91	13.3	Endress+Hauser services	132
10.8	Simulation	91	14	Repair	133
10.9	Protecting settings from unauthorized access	93	14.1	General notes	133
10.9.1	Write protection via access code	93	14.2	Spare parts	133
10.9.2	Write protection via write protection switch	94	14.3	Endress+Hauser services	134
11	Operation	96	14.4	Return	134
11.1	Reading device locking status	96	14.5	Disposal	134
11.2	Adjusting the operating language	96	14.5.1	Removing the measuring device	134
11.3	Configuring the display	96	14.5.2	Disposing of the measuring device	135
11.4	Reading measured values	96	15	Accessories	136
11.4.1	Process variables	96	15.1	Device-specific accessories	136
11.4.2	Totalizer	97	15.1.1	For the transmitter	136
11.4.3	Output values	98	15.1.2	For the sensor	137
11.5	Adapting the measuring device to the process conditions	99	15.2	Service-specific accessories	137
11.6	Performing a totalizer reset	99	15.3	System components	137
			16	Technical data	138
			16.1	Application	138

16.2	Function and system design	138
16.3	Input	138
16.4	Output	140
16.5	Power supply	142
16.6	Performance characteristics	144
16.7	Installation	147
16.8	Environment	147
16.9	Process	148
16.10	Mechanical construction	150
16.11	Operability	153
16.12	Certificates and approvals	155
16.13	Application packages	157
16.14	Accessories	157
16.15	Documentation	157
Index		159





1 Document information

1.1 Document function







These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols used


 

1.2.1 Safety symbols

Symbol	Meaning
	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.












1.2.2 Electrical symbols

Symbol	Meaning	Symbol	Meaning
	Direct current		Alternating current
	Direct current and alternating current		Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.		Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.





1.2.3 Tool symbols

Symbol	Meaning
	Flat blade screwdriver
	Allen key
	Open-ended wrench



 1.2.4 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Series of steps
	Result of a sequence of actions
	Help in the event of a problem
	Visual inspection

1.2.5 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3, ...	Item numbers		Series of steps
A, B, C, ...	Views	A-A, B-B, C-C, ...	Sections
	Hazardous area		Safe area (non-hazardous area)
	Flow direction		

1.3 Documentation

-  For an overview of the scope of the associated Technical Documentation, refer to the following:
- The CD-ROM provided for the device (depending on the device version, the CD-ROM might not be part of the delivery!)
 - The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
 - The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.
-  For a detailed list of the individual documents along with the documentation code

1.3.1 Standard documentation

Document type	Purpose and content of the document
Technical Information	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Description of Device Parameters	Reference for your parameters The document provides a detailed explanation of each individual parameter in the operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

PROFIBUS®

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA

Applicator®, FieldCare®, Field Xpert™, HistoROM®, Heartbeat Technology™

Registered or registration-pending trademarks of the Endress+Hauser Group

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task
- ▶ Are authorized by the plant owner/operator
- ▶ Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- ▶ Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- ▶ Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- ▶ Following the instructions in these Operating Instructions

2.2 Designated use


Application and media

The measuring device described in these Instructions is intended only for flow measurement of liquids and gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or in applications where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Check the nameplate to verify if the device ordered can be put to its intended use in the approval-related area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media against which the process-wetted materials are adequately resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential: "Documentation" section →  7.
- ▶ Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

WARNING

Danger of breakage of the measuring tube due to corrosive or abrasive fluids or from environmental conditions.

Housing breakage due to mechanical overload possible!

- ▶ Verify the compatibility of the process fluid with the measuring tube material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Keep within the specified pressure and temperature range.

Verification for borderline cases:

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks



Danger of housing breaking due to measuring tube breakage!

- ▶ In the event of a measuring tube breakage for a device version without rupture disk it is possible for the pressure loading capacity of the sensor housing to be exceeded. This can lead to rupture or failure of the sensor housing.

The external surface temperature of the housing can increase by max. 20 K due to the power consumption of the electronic components. Hot process fluids passing through the measuring device will further increase the surface temperature of the housing. The surface of the sensor, in particular, can reach temperatures which are close to the fluid temperature.

Possible burn hazard due to fluid temperatures!

- ▶ For elevated fluid temperature, ensure protection against contact to prevent burns.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

- ▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

- ▶ It is recommended to wear gloves on account of the higher risk of electric shock.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EC directives listed in the device-specific EC Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

2.6 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.


3 Product description

The device consists of a transmitter and a sensor.

The device is available as a compact version:

The transmitter and sensor form a mechanical unit.

3.1 Product design

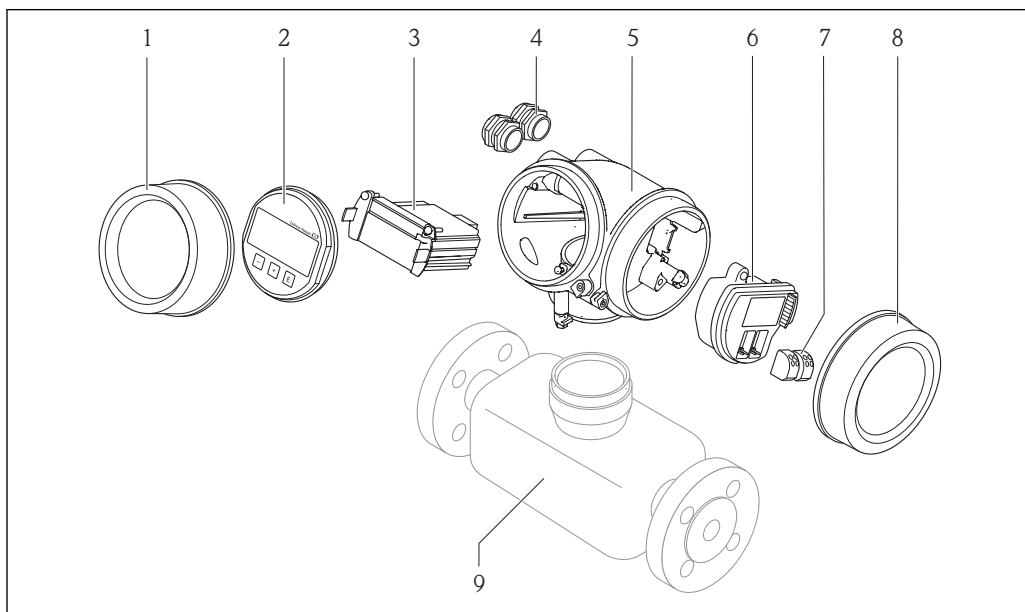














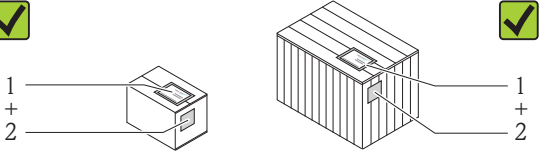



A0014056

 1 Important components of a measuring device

- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands
- 5 Transmitter housing (incl. integrated HistoROM)
- 6 I/O electronics module
- 7 Terminals (spring loaded terminals, pluggable)
- 8 Connection compartment cover
- 9 Sensor (incl. HistoROM S-DAT)

4 Incoming acceptance and product identification

4.1 Incoming acceptance

 			<p>Are the order codes on the delivery note (1) and the product sticker (2) identical?</p>
			
 			<p>Are the goods undamaged?</p>
 			<p>Do the nameplate data match the ordering information on the delivery note?</p>
 			<p>Is the CD-ROM with the Technical Documentation (depends on device version) and documents present?</p>





- If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
- Depending on the device version, the CD-ROM might not be part of the delivery! The Technical Documentation is available via the Internet or via the *Endress+Hauser Operations App*, see the "Product identification" section → 14.

4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.


For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" →  8 and "Supplementary device-dependent documentation" →  8
- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

4.2.1 Transmitter nameplate

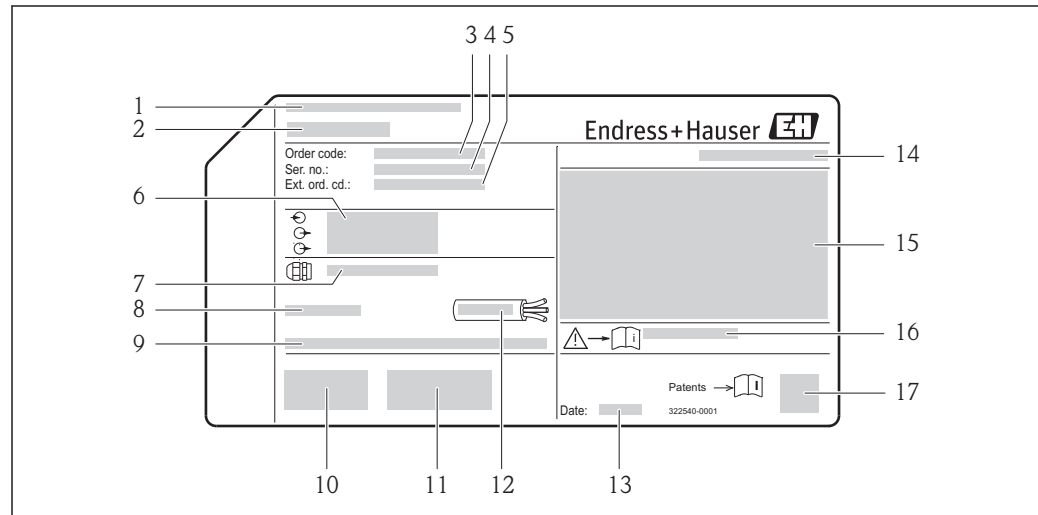


A0013906


 2 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Electrical connection data, e.g. available inputs and outputs, supply voltage
- 7 Type of cable glands
- 8 Permitted ambient temperature (T_a)
- 9 Firmware version (FW) from the factory
- 10 CE mark, C-Tick
- 11 Additional information on version: certificates, approvals
- 12 Permitted temperature range for cable
- 13 Manufacturing date: year-month
- 14 Degree of protection
- 15 Approval information for explosion protection
- 16 Document number of safety-related supplementary documentation
- 17 2-D matrix code

4.2.2 Sensor nameplate

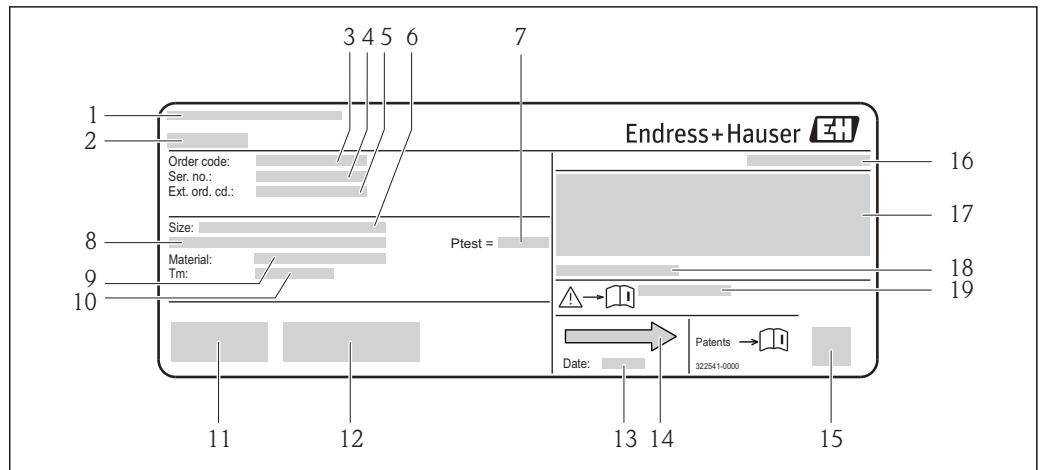

A0013907

 3 Example of a sensor nameplate

- 1 Manufacturing location
- 2 Name of the sensor
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (ext. ord. cd.)
- 6 Nominal diameter of sensor
- 7 Test pressure of the sensor
- 8 Flange nominal diameter/nominal pressure
- 9 Material of measuring tube and manifold
- 10 Medium temperature range
- 11 CE mark, C-Tick
- 12 Additional information on version: certificates, approvals
- 13 Manufacturing date: year-month
- 14 Flow direction
- 15 2-D matrix code
- 16 Degree of protection
- 17 Approval information for explosion protection and Pressure Equipment Directive
- 18 Permitted ambient temperature (T_a)
- 19 Document number of safety-related supplementary documentation




Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approval-related specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

4.2.3 Symbols on measuring device

Symbol	Meaning
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.

5 Storage and transport

5.1 Storage conditions

Observe the following notes for storage:


- Store in the original packaging to ensure protection from shock.
- Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- Protect from direct sunlight to avoid unacceptably high surface temperatures.
- Store in a dry and dust-free place.
- Do not store outdoors.

Storage temperature: -40 to $+80$ °C (-40 to $+176$ °F),

Order code for "Test, Certificate", option JM: -50 to $+60$ °C (-58 to $+140$ °F), preferably at $+20$ °C ($+68$ °F)

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

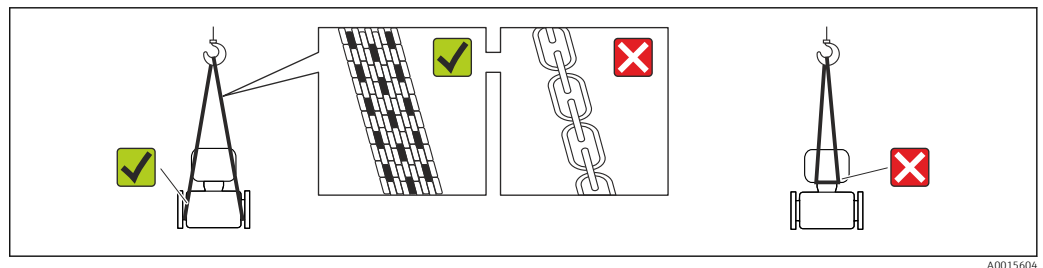

A0015604



Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

⚠ WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ▶ Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

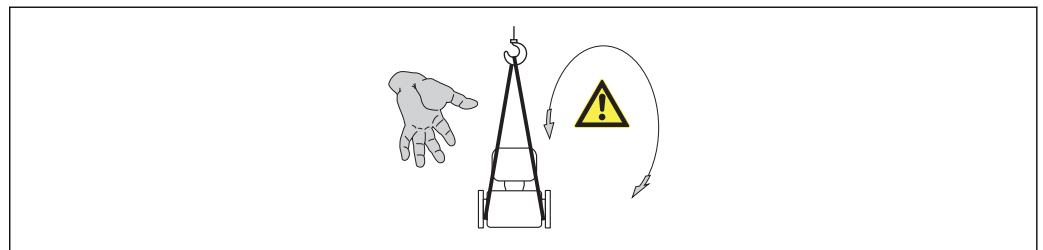

A0015606

5.2.2 Measuring devices with lifting lugs

CAUTION

Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ▶ The device must always be secured at two lifting lugs at least.

5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:

- Measuring device secondary packaging: polymer stretch film that conforms to EC Directive 2002/95/EC (RoHS).
- Packaging:
 - Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
 - or
 - Carton in accordance with European Packaging Directive 94/62EC; recyclability is confirmed by the affixed RESY symbol.
- Seaworthy packaging (optional): Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
- Carrying and mounting hardware:
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Dunnage: Paper cushion

6 Installation

6.1 Installation conditions


No special measures such as supports are necessary. External forces are absorbed by the construction of the device.

6.1.1 Mounting position

Mounting location

To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:


- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

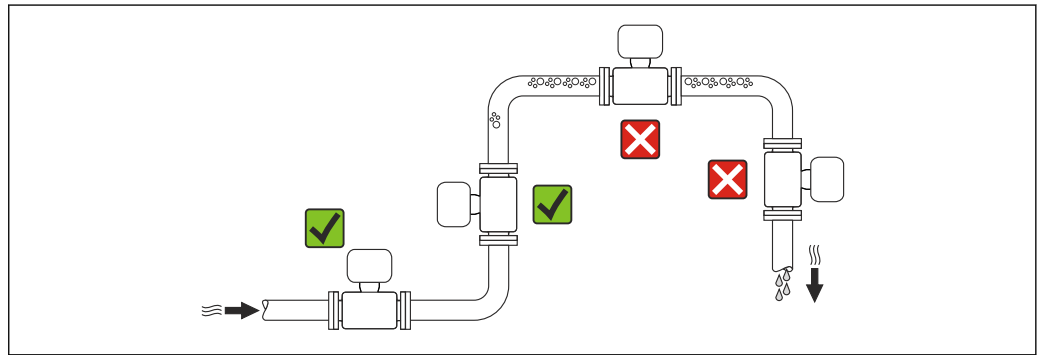

A0023344

Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

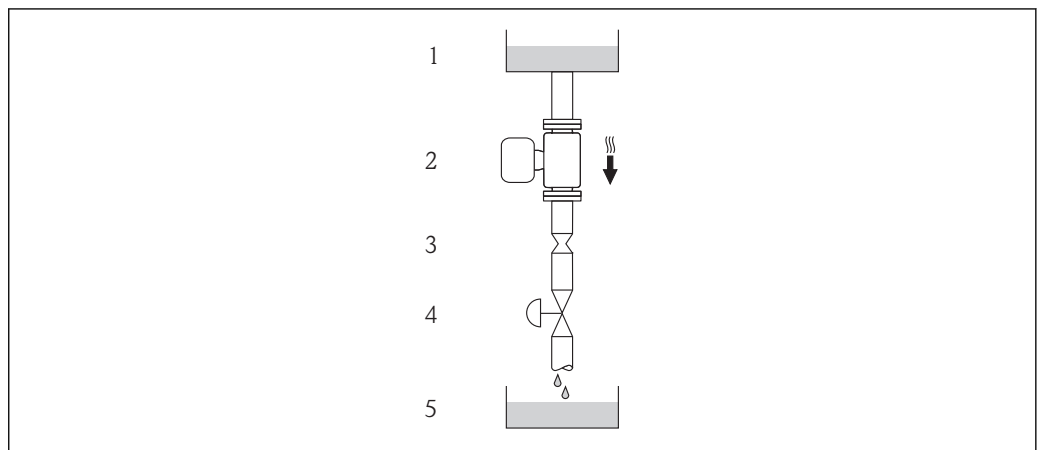

A0015596





■ 4 Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Batching tank

DN		Ø orifice plate, pipe restriction	
[mm]	[in]	[mm]	[in]
8	$\frac{3}{8}$	6	0.24
15	$\frac{1}{2}$	10	0.40
25	1	14	0.55
40	$1\frac{1}{2}$	22	0.87
50	2	28	1.10


Orientation

   The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

Orientation			Recommendation
A	Vertical orientation	 <small>A0015591</small>	✓✓
B	Horizontal orientation, transmitter head up	 <small>A0015589</small>	✓✓ ¹⁾ Exception: → 5, 20
C	Horizontal orientation, transmitter head down	 <small>A0015590</small>	✓✓ ²⁾ Exception: → 5, 20
D	Horizontal orientation, transmitter head at side	 <small>A0015592</small>	✗

- 1) Applications with low process temperatures may reduce the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 2) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

If a sensor is installed horizontally with a curved measuring tube, match the position of the sensor to the fluid properties.

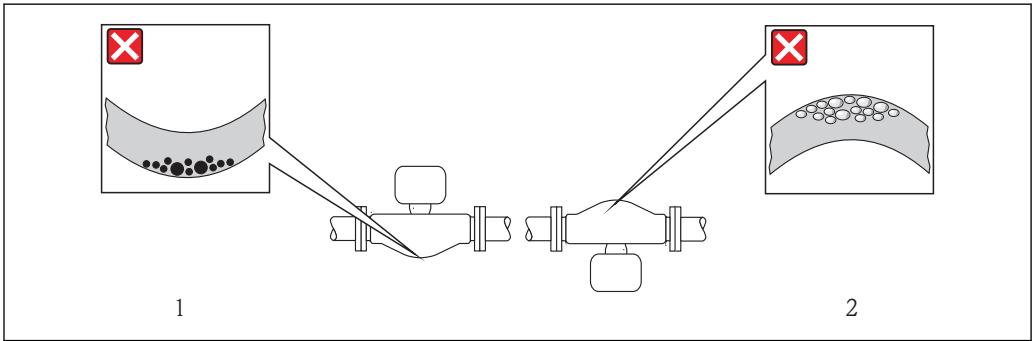

- 5 Orientation of sensor with curved measuring tube
- 1 Avoid this orientation for fluids with entrained solids: Risk of solids accumulating.
 - 2 Avoid this orientation for outgassing fluids: Risk of gas accumulating.

Inlet and outlet runs

No special precautions need to be taken for fittings which create turbulence, such as valves, elbows or T-pieces, as long as no cavitation occurs → 21.



Installation dimensions



For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

6.1.2 Requirements from environment and process

Ambient temperature range

Measuring device	-40 to +60 °C (-40 to +140 °F)
Local display	-20 to +60 °C (-4 to +140 °F) The readability of the display may be impaired at temperatures outside the temperature range.

- If operating outdoors:
Avoid direct sunlight, particularly in warm climatic regions.

System pressure


It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas.

Cavitation is caused if the pressure drops below the vapor pressure:

- In liquids that have a low boiling point (e.g. hydrocarbons, solvents, liquefied gases)
- In suction lines
- Ensure the system pressure is sufficiently high to prevent cavitation and outgassing.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

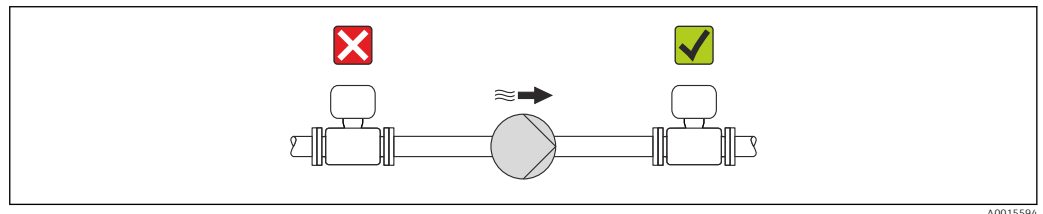


Thermal insulation

In the case of some fluids, it is important that the heat radiated from the sensor to the transmitter is kept to a minimum. A wide range of materials can be used for the required insulation.

NOTICE**Electronics overheating on account of thermal insulation!**

- Observe maximum permitted insulation height of the transmitter neck so that the transmitter head is completely free.

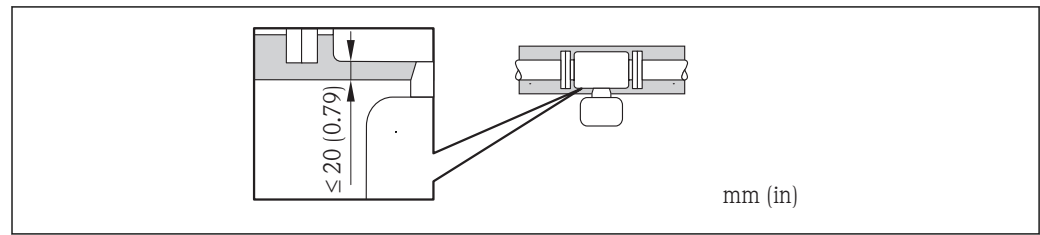

A0016749

Heating**NOTICE****Electronics can overheat due to elevated ambient temperature!**

- Observe maximum permitted ambient temperature for the transmitter → 21.
- Depending on the fluid temperature, take the device orientation requirements into account.

NOTICE**Danger of overheating when heating**

- Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F)
- Ensure that convection takes place on a sufficiently large scale at the transmitter neck.
- Ensure that a sufficiently large area of the housing support remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.

Heating options

If a fluid requires that no heat loss should occur at the sensor, users can avail of the following heating options:

- Electrical heating, e.g. with electric band heaters
- Via pipes carrying hot water or steam
- Via heating jackets

Using an electrical trace heating system

If heating is regulated via phase angle control or pulse packages, magnetic fields can affect the measured values (= for values that are greater than the values approved by the EN standard (sine 30 A/m)).

For this reason, the sensor must be magnetically shielded: the housing can be shielded with tin plates or electric sheets without a privileged direction (e.g. V330-35A).

The sheet must have the following properties:

- Relative magnetic permeability $\mu_r \geq 300$
- Plate thickness $d \geq 0.35 \text{ mm}$ ($d \geq 0.014 \text{ in}$)


Vibrations

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

6.1.3 Special mounting instructions

Rupture disk

Make sure that the function and operation of the rupture disk is not impeded through the installation of the device. The position of the rupture disk is indicated on a sticker applied over it. If the rupture disk is triggered, the sticker is destroyed. The disk can therefore be visually monitored. For additional information that is relevant to the process → 148.

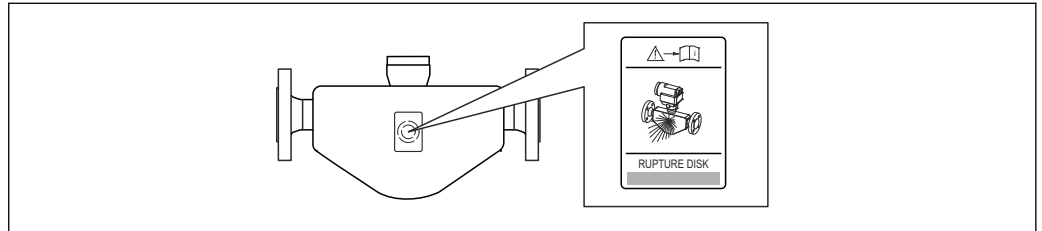

A0007823

6 Rupture disk label

- After the rupture disk is actuated, do not operate the measuring device any more.

WARNING

Limited functional reliability of the rupture disk.

Danger to persons from escaping fluids!

- Do not remove the rupture disk.
- When using a rupture disk, do not use a heating jacket.
- Make sure that the function and operation of the rupture disk is not impeded through the installation of the device.
- Take precautions to prevent damage and danger to persons if the rupture disk is actuated.
- Observe information on the rupture disk sticker.

Zero point adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions → 144. Therefore, a zero point adjustment in the field is generally not required.

Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

i Zero point adjustment is performed via the **Zero point adjustment control** parameter (→ 77).

6.2 Mounting the measuring device

6.2.1 Required tools

For transmitter

- For turning the transmitter housing: Open-ended wrench 8 mm
- For opening the securing clamps: Allen key 3 mm

For sensor

For flanges and other process connections: Corresponding mounting tools

6.2.2 Preparing the measuring device


1. Remove all remaining transport packaging.
2. Remove any protective covers or protective caps present from the sensor.
3. If present, remove transport protection of the rupture disk.
4. Remove stick-on label on the electronics compartment cover.

6.2.3 Mounting the measuring device

⚠ WARNING

Danger due to improper process sealing!


- ▶ Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
 - ▶ Ensure that the gaskets are clean and undamaged.
 - ▶ Install the gaskets correctly.
1. Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the fluid.
 2. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

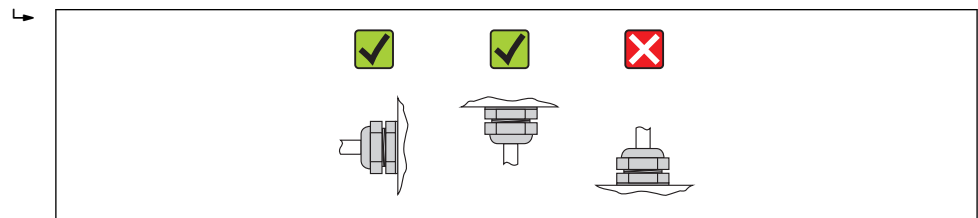

A0013964

6.2.4 Turning the transmitter housing

To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

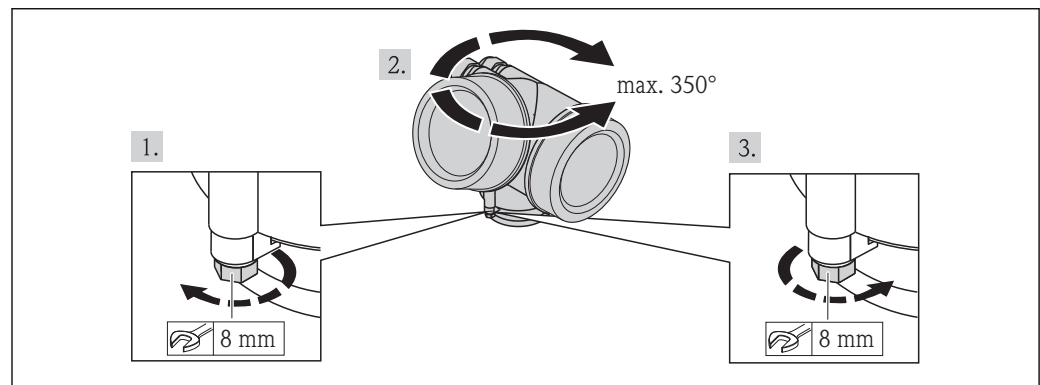


A0013713

1. Release the fixing screw.
2. Turn the housing to the desired position.
3. Firmly tighten the securing screw.

6.2.5 Turning the display module

The display module can be turned to optimize display readability and operability.

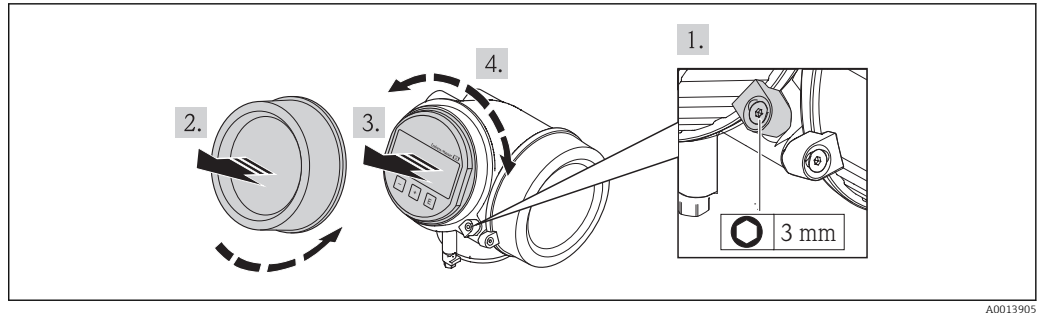


A0013905

1. Loosen the securing clamp of the electronics compartment cover using an Allen key.
2. Unscrew cover of the electronics compartment from the transmitter housing.
3. Optional: pull out the display module with a gentle rotational movement.
4. Rotate the display module into the desired position: Max. $8 \times 45^\circ$ in each direction.
5. Without display module pulled out:
Allow display module to engage at desired position.
6. With display module pulled out:
Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.
7. Reverse the removal procedure to reassemble the transmitter.

6.3 Post-installation check

Is the device undamaged (visual inspection)?	<input type="checkbox"/>
Does the measuring device conform to the measuring point specifications? For example: <ul style="list-style-type: none"> ▪ Process temperature → 148 ▪ Process pressure (refer to the chapter on "Pressure-temperature ratings" of the "Technical Information" document) ▪ Ambient temperature → 21 ▪ Measuring range 	<input type="checkbox"/>
Has the correct orientation for the sensor been selected ? <ul style="list-style-type: none"> ▪ According to sensor type ▪ According to medium temperature ▪ According to medium properties (outgassing, with entrained solids) 	<input type="checkbox"/>
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping → 20?	<input type="checkbox"/>
Are the measuring point identification and labeling correct (visual inspection)?	<input type="checkbox"/>
Is the device adequately protected from precipitation and direct sunlight?	<input type="checkbox"/>
Are the securing screw and securing clamp tightened securely?	<input type="checkbox"/>

7 Electrical connection

 The measuring device does not have an internal circuit breaker. For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.

7.1 Connection conditions

7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: crimping tool for ferrule
- For removing cables from terminal: flat blade screwdriver ≤ 3 mm (0.12 in)

7.1.2 Connecting cable requirements

The connecting cables provided by the customer must fulfill the following requirements.

Electrical safety

In accordance with applicable federal/national regulations.


Permitted temperature range

- -40 °C (-40 °F) to $+80$ °C ($+176$ °F)
- Minimum requirement: cable temperature range \geq ambient temperature $+20$ K

Signal cable

PROFIBUS PA

Twisted, shielded two-wire cable. Cable type A is recommended →  27.

 For further information on planning and installing PROFIBUS PA networks see:

- Operating Instructions "PROFIBUS DP/PA: Guidelines for planning and commissioning" (BA00034S)
- PNO Directive 2.092 "PROFIBUS PA User and Installation Guideline"
- IEC 61158-2 (MBP)

Pulse/frequency/switch output

Standard installation cable is sufficient.

Cable diameter

- Cable glands supplied:
M20 \times 1.5 with cable ϕ 6 to 12 mm (0.24 to 0.47 in)
- Plug-in spring terminals for device version without integrated overvoltage protection:
wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)
- Screw terminals for device version with integrated overvoltage protection: wire cross-sections 0.2 to 2.5 mm² (24 to 14 AWG)

Fieldbus cable specification*PROFIBUS PA**Cable type*

In accordance with IEC 61158-2 (MBP), cable type A is recommended. Cable type A has a cable shielding that guarantees adequate protection from electromagnetic interference and thus the most reliable data transfer.

The electrical data of the fieldbus cable have not been specified but determine important characteristics of the design of the fieldbus, such as distances bridged, number of users, electromagnetic compatibility, etc.

Cable type	A
Cable structure	Twisted, shielded twin-core cable
Wire cross-section	0.8 mm ² (AWG 18)
Loop resistance (direct current)	44 Ω/km
Characteristic impedance at 31.25 kHz	100 Ω ±20%
Attenuation constant at 39.0 kHz	3 dB/km
Capacitive asymmetry	2 nF/km
Envelope delay distortion (7.9 to 39 kHz)	1.7 ms/km
Shield coverage	90 %

The following are examples of suitable cable types:

Non-hazardous area:

- Siemens 6XV1 830-5BH10
- Belden 3076F
- Kerpen CEL-PE/OSCR/PVC/FRLA FB-02YS(ST)YFL

Maximum overall cable length

The maximum network expansion depends on the type of protection and the cable specifications. The overall cable length combines the length of the main cable and the length of all spurs >1 m (3.28 ft).

The maximum overall cable length for cable type A: 1 900 m (6 200 ft)

If repeaters are used, the maximum permissible cable length is doubled. A maximum of three repeaters are permitted between the user and master.

Maximum spur length

The line between the distribution box and field device is described as a spur. In the case of non-Ex applications, the max. length of a spur depends on the number of spurs >1 m (3.28 ft):

Number of spurs	Max. length per spur
1...12	120 m (400 ft)
13...14	90 m (300 ft)
15...18	60 m (200 ft)
19...24	30 m (100 ft)
25...32	1 m (3 ft)

Number of field devices

In the case of systems in accordance with the Fieldbus Intrinsically Safe Concept (FISCO) with EEx ia explosion protection, the cable length is limited to a maximum length of 1000 m (3300 ft). A maximum of 32 users per segment in non-Ex areas or a maximum of 10 users in an Ex-area (EEx ia IIC) is possible. The actual number of users must be determined during the planning stage.

Bus termination



The start and end of each fieldbus segment must always be terminated by a bus terminator. With various junction boxes (non-Ex), the bus termination can be activated via a switch. If this is not the case, a separate bus terminator must be installed. Please also note the following:

- In the case of a branched bus segment, the device furthest from the segment coupler represents the end of the bus.
- If the fieldbus is extended with a repeater then the extension must also be terminated at both ends.

7.1.3 Terminal assignment

Transmitter

Connection version for PROFIBUS PA, pulse/frequency/switch output

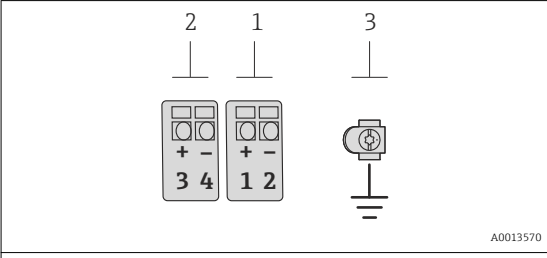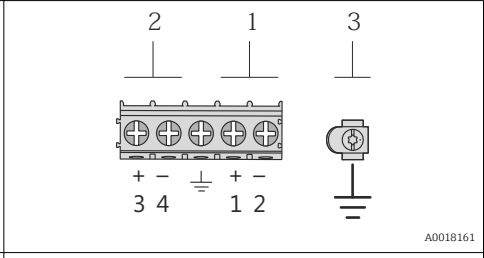	
Maximum number of terminals	Maximum number of terminals for order code for "Accessory mounted", option NA "Overvoltage protection"
<div>1 Output 1: PROFIBUS PA</div> <div>2 Output 2 (passive: pulse/frequency/switch output</div> <div>3 Ground terminal for cable shield</div>	


Order code for "Output"	Terminal numbers			
	Output 1		Output 2	
	1 (+)	2 (-)	3 (+)	4 (-)
Option G ^{1) 2)}	PROFIBUS PA		Pulse/frequency/switch output (passive)	

- 1) Output 1 must always be used; output 2 is optional.
- 2) PROFIBUS PA with integrated reverse polarity protection.

7.1.4 Pin assignment, device plug

PROFIBUS PA

Device plug for signal transmission (device side)

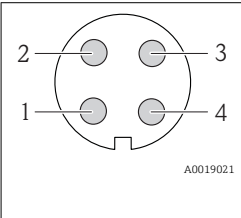	Pin	Assignment		Coding	Plug/socket
	1	+	PROFIBUS PA +	A	Plug
	2		Grounding		
	3	-	PROFIBUS PA -		
	4		Not assigned		

7.1.5 Shielding and grounding

PROFIBUS PA

Optimum electromagnetic compatibility (EMC) of the fieldbus system can only be guaranteed if the system components and, in particular, the lines are shielded and the shield forms as complete a cover as possible. A shield coverage of 90% is ideal.

- To ensure an optimum EMC protective effect, connect the shield as often as possible to the reference ground.
- For reasons of explosion protection, you should refrain from grounding however.

To comply with both requirements, the fieldbus system allows three different types of shielding:

- Shielding at both ends.
- Shielding at one end on the feed side with capacitance termination at the field device.
- Shielding at one end on the feed side.

Experience shows that the best results with regard to EMC are achieved in most cases in installations with one-sided shielding on the feed side (without capacitance termination at the field device). Appropriate measures with regard to input wiring must be taken to allow unrestricted operation when EMC interference is present. These measures have been taken into account for this device. Operation in the event of disturbance variables as per NAMUR NE21 is thus guaranteed.

Where applicable, national installation regulations and guidelines must be observed during the installation!


Where there are large differences in potential between the individual grounding points, only one point of the shielding is connected directly with the reference ground. In systems without potential equalization, therefore, cable shielding of fieldbus systems should only be grounded on one side, for example at the fieldbus supply unit or at safety barriers.

NOTICE

In systems without potential matching, the multiple grounding of the cable shield causes mains frequency equalizing currents!

Damage to the bus cable shield.

- Only ground the bus cable shield to either the local ground or the protective ground at one end. Insulate the shield that is not connected.

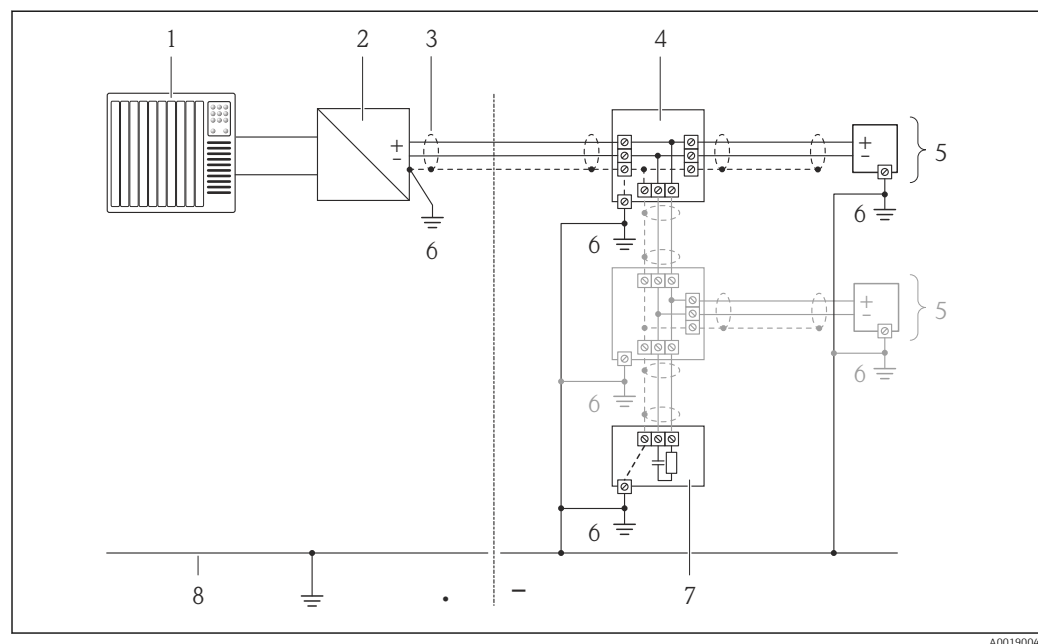

A0019004

- 1 Controller (e.g. PLC)
- 2 Segment coupler PROFIBUS DP/PA
- 3 Cable shield
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

7.1.6 Requirements for the supply unit

Supply voltage

Transmitter

An external power supply is required for each output.

The following supply voltage values apply for the outputs available:

Order code for "Output"	Minimum terminal voltage	Maximum terminal voltage
Option G: PROFIBUS PA, pulse/frequency/switch output	≥ DC 9 V	DC 32 V

7.1.7 Preparing the measuring device

1. Remove dummy plug if present.
2. **NOTICE!** Insufficient sealing of the housing! Operational reliability of the measuring device could be compromised. Use suitable cable glands corresponding to the degree of protection.
If measuring device is delivered without cable glands:
Provide suitable cable gland for corresponding connecting cable .
3. If measuring device is delivered with cable glands:
Observe cable specification .

7.2 Connecting the measuring device

NOTICE

Limitation of electrical safety due to incorrect connection!


- Have electrical connection work carried out by correspondingly trained specialists only.
- Observe applicable federal/national installation codes and regulations.
- Comply with local workplace safety regulations.
- For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.

7.2.1 Connecting the transmitter

The connection of the transmitter depends on the following order codes:

Connection version: terminals or device plug


Connection via terminals

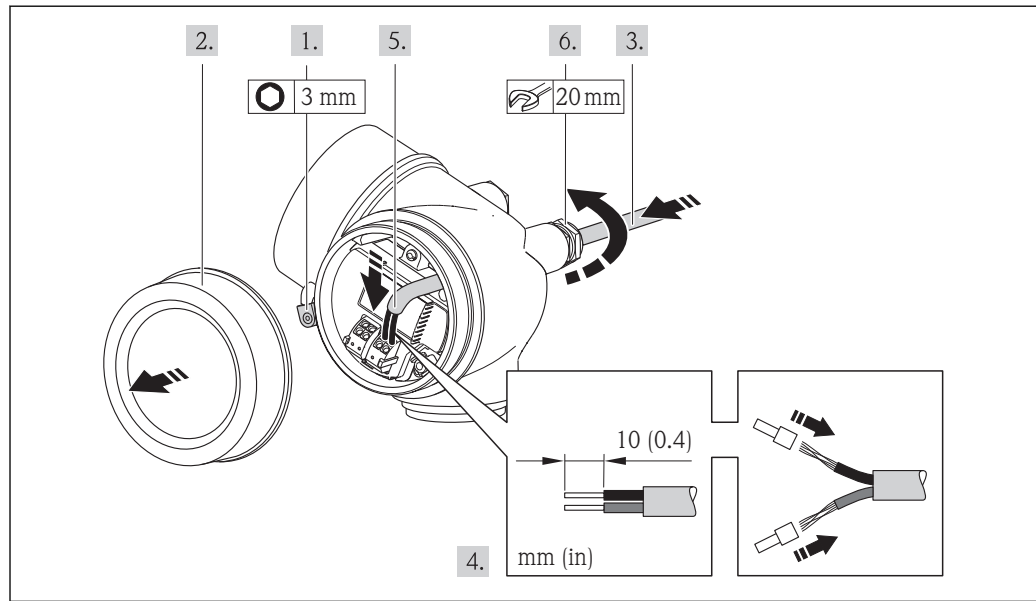

A0013836

1. Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
5. Connect the cable in accordance with the terminal assignment .
6. **WARNING!** Housing degree of protection may be voided due to insufficient sealing of the housing. Screw in the screw without using any lubricant. The threads on the cover are coated with a dry lubricant.
Reverse the removal procedure to reassemble the transmitter.


Connection via device plug

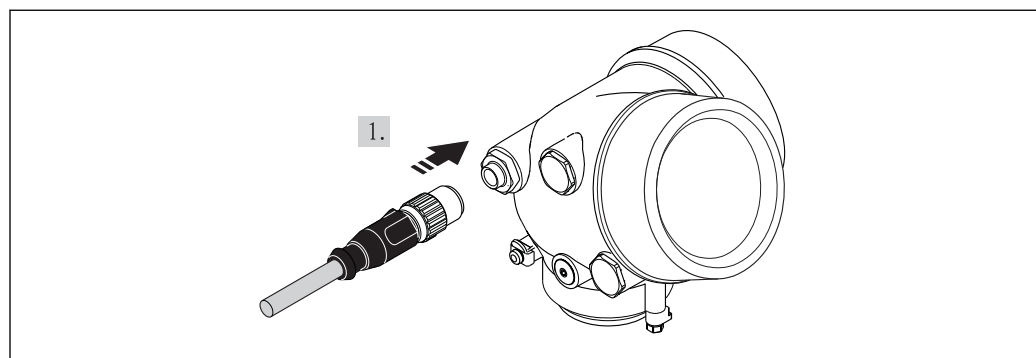

A0019147

- Plug in the device plug and tighten firmly.

Removing a cable

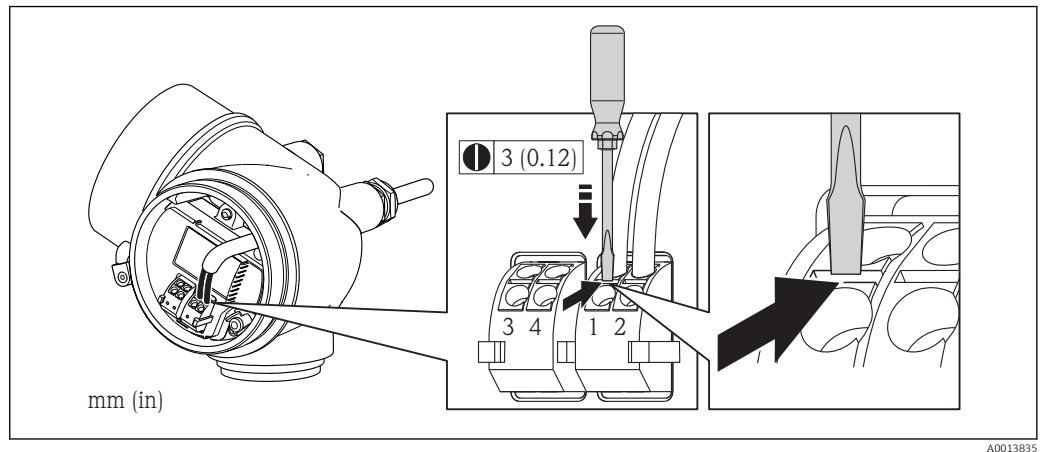

- To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes while simultaneously pulling the cable end out of the terminal.

7.2.2 Ensuring potential equalization

Requirements

No special measures for potential equalization are required.




For devices intended for use in hazardous locations, please observe the guidelines in the Ex documentation (XA).

7.3 Special connection instructions

7.3.1 Connection examples

PROFIBUS-PA

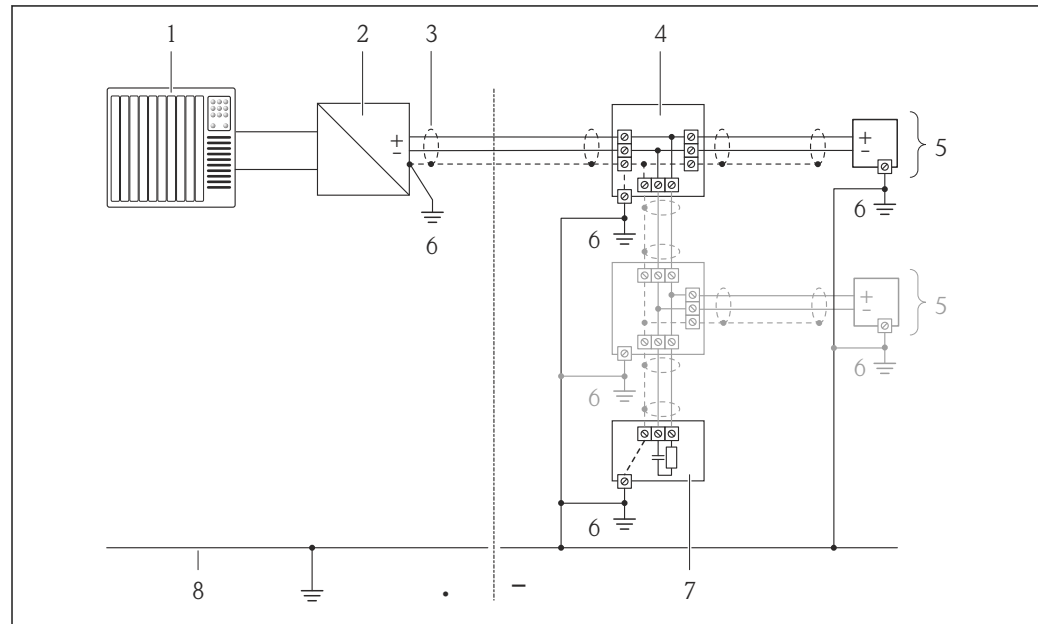

A0019004

7 Connection example for PROFIBUS-PA


- 1 Control system (e.g. PLC)
- 2 Segment coupler PROFIBUS DP/PA
- 3 Cable shield
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

7.4 Hardware settings

7.4.1 Setting the device address

PROFIBUS PA

The address must always be configured for a PROFIBUS DP/PA device. The valid address range is between 1 and 126. In a PROFIBUS DP/PA network, each address can only be assigned once. If an address is not configured correctly, the device is not recognized by the master. All measuring devices are delivered from the factory with the device address 126 and with the software addressing method.

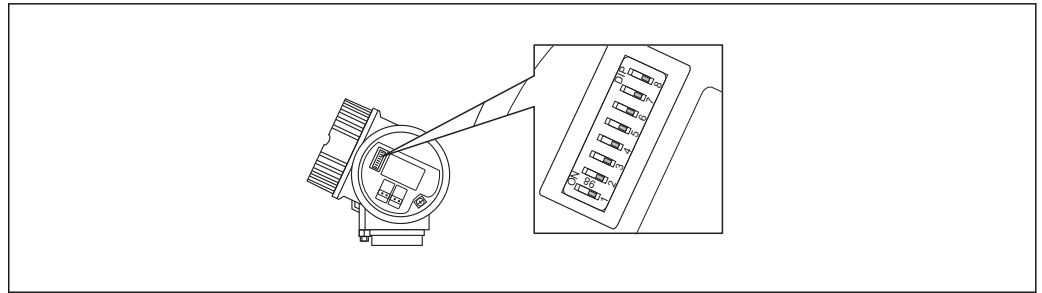

A0015686


8 Address switch in the connection compartment

Hardware addressing

1. Set switch 8 to the "OFF" position.
2. Using switches 1 to 7, set the address as indicated in the table below.

The change of address takes effect after 10 seconds. The device is restarted.

Switch	1	2	3	4	5	6	7
Value in "ON" position	1	2	4	8	16	32	64
Value in "OFF" position	0	0	0	0	0	0	0

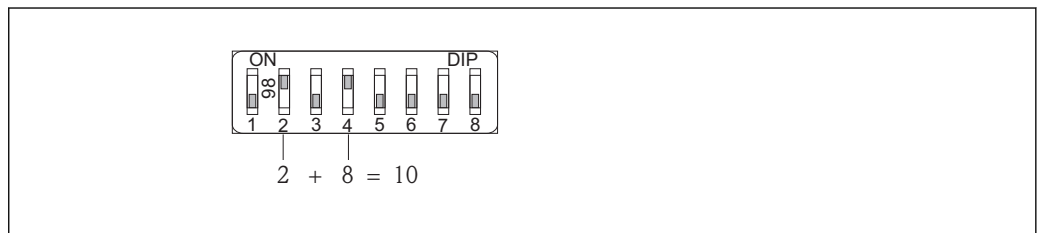


A0015902

9 Example of hardware addressing; switch 8 is set to the "OFF" position; switches 1 to 7 define the address.

Software addressing

1. Set switch 8 to "ON".
 - ↳ The device restarts automatically and reports the current address (factory setting: 126).
2. Configuring the address via the operating menu: **Setup** menu → **Communication** submenu → **Device address** parameter

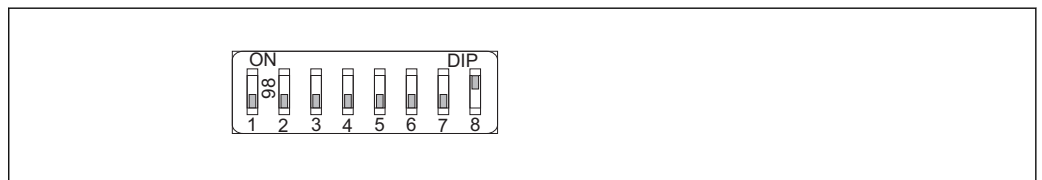

A0015903


10 Example of software addressing; switch 8 is set to the "ON" position; the address is defined in the operating menu ("Setup" menu → "Communication" submenu → "Device address" parameter).

7.5 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

1. Check that the housing seals are clean and fitted correctly. Dry, clean or replace the seals if necessary.
2. Tighten all housing screws and screw covers.
3. Firmly tighten the cable glands.
4. To ensure that moisture does not enter the cable entry, route the cable so that it loops down before the cable entry ("water trap").

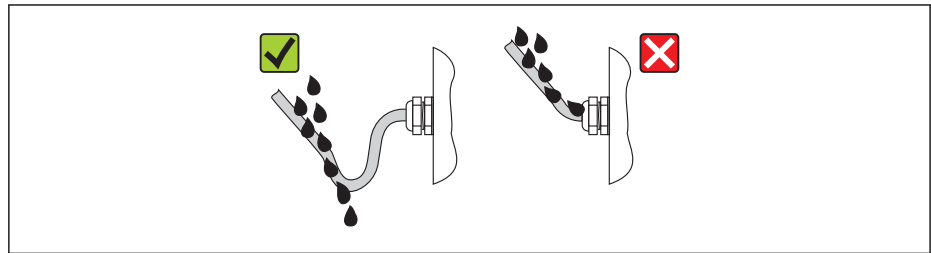

A0013960


5. Insert dummy plugs into unused cable entries.

7.6 Post-connection check

Are cables or the device undamaged (visual inspection)?	<input type="checkbox"/>
Do the cables comply with the requirements ?	<input type="checkbox"/>
Do the cables have adequate strain relief?	<input type="checkbox"/>
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" → 35 ?	<input type="checkbox"/>
Depending on the device version: are all the device plugs firmly tightened ?	<input type="checkbox"/>
Does the supply voltage match the specifications on the transmitter nameplate ?	<input type="checkbox"/>
Is the terminal assignment correct ?	<input type="checkbox"/>
Is the terminal assignment or the pin assignment of the device plug correct?	<input type="checkbox"/>
If supply voltage is present, do values appear on the display module?	<input type="checkbox"/>
Are all housing covers installed and firmly tightened?	<input type="checkbox"/>
Is the securing clamp tightened correctly?	<input type="checkbox"/>

8 Operation options


8.1 Overview of operation options

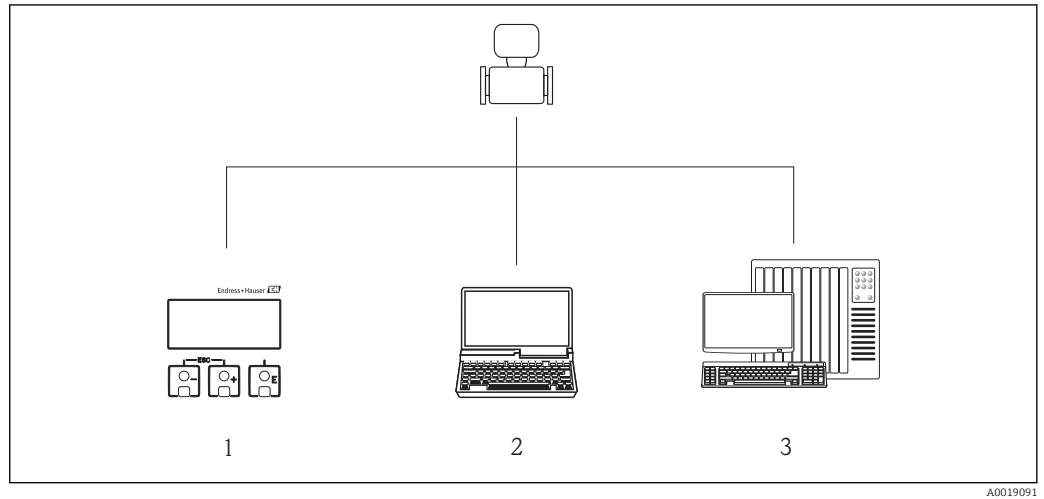



- 1 Local operation via display module
- 2 Computer with operating tool (e.g. FieldCare, SIMATIC PDM)
- 3 Control system (e.g. PLC)

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

 For an overview of the operating menu with menus and parameters

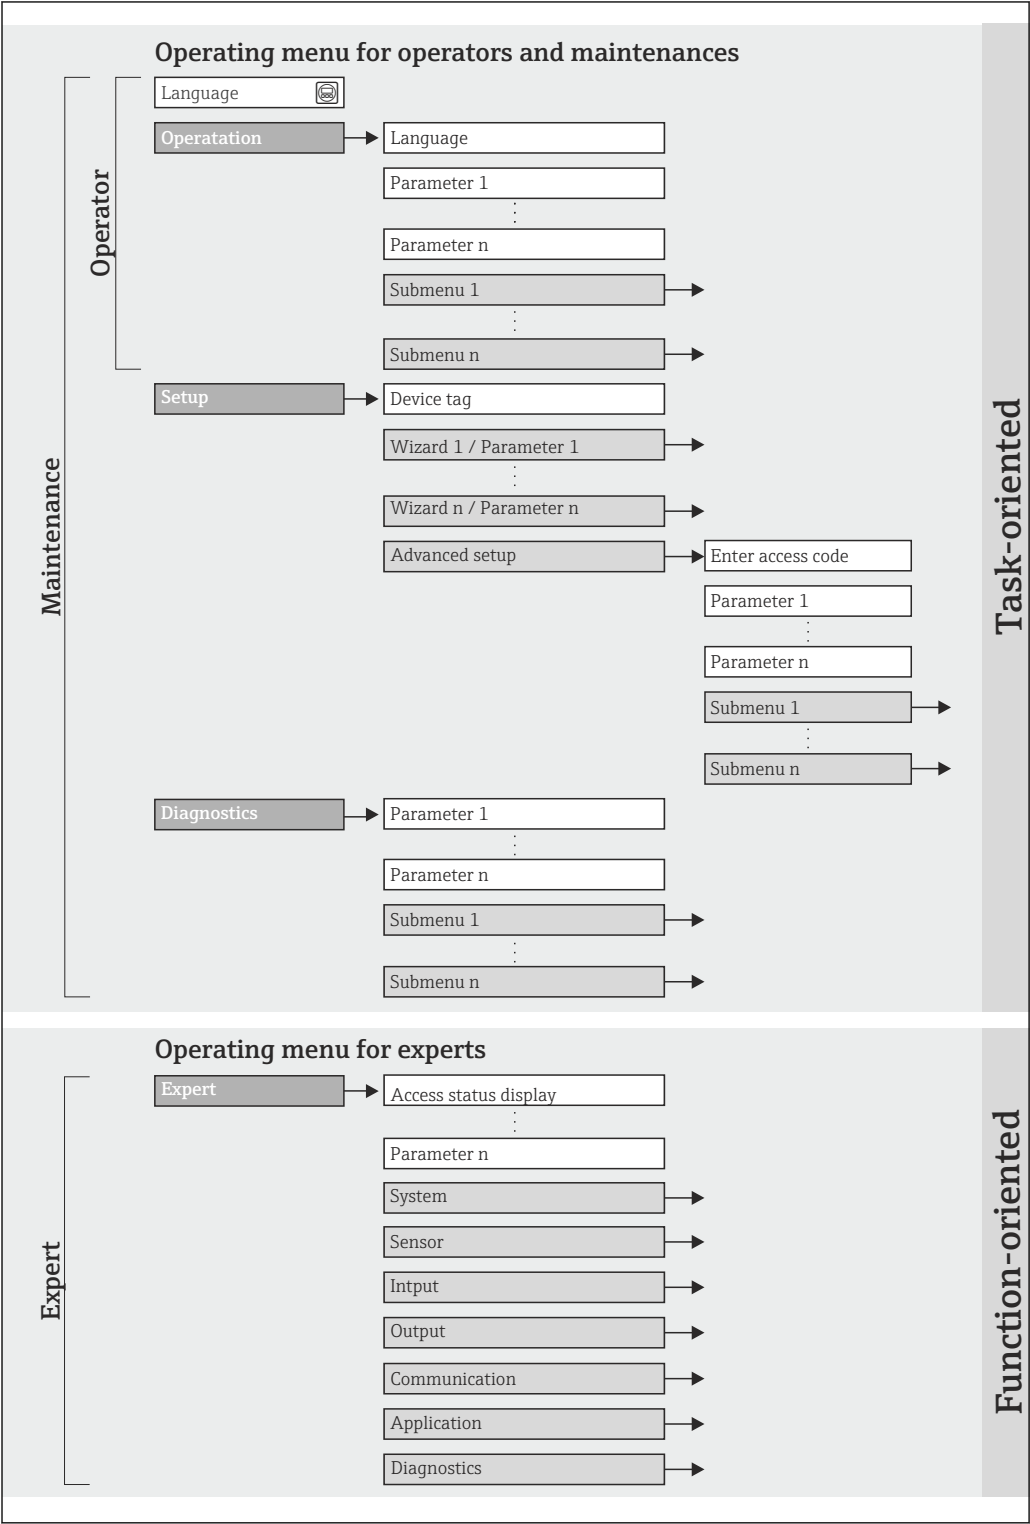

 11 Schematic structure of the operating menu

A0018237-EN


8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

Menu/parameter		User role and tasks	Content/meaning
Language	task-oriented	Role "Operator", "Maintenance" Tasks during operation: <ul style="list-style-type: none"> ■ Configuring the operational display ■ Reading measured values 	Defining the operating language
Operation			<ul style="list-style-type: none"> ■ Configuring the operational display (e.g. display format, display contrast) ■ Resetting and controlling totalizers
Setup		"Maintenance" role Commissioning: <ul style="list-style-type: none"> ■ Configuration of the measurement ■ Configuration of the inputs and outputs 	Wizards for fast commissioning: <ul style="list-style-type: none"> ■ Defining the medium ■ Configuring the outputs ■ Configuring the operational display ■ Defining the output conditioning ■ Configuring the low flow cut off ■ Configuring partial and empty pipe detection Advanced setup <ul style="list-style-type: none"> ■ For more customized configuration of the measurement (adaptation to special measuring conditions) ■ Configuration of totalizers ■ Administration (define access code, reset measuring device)
Diagnostics		"Maintenance" role Fault elimination: <ul style="list-style-type: none"> ■ Diagnostics and elimination of process and device errors ■ Measured value simulation 	Contains all parameters for error detection and analyzing process and device errors: <ul style="list-style-type: none"> ■ Diagnostic list Contains up to 5 currently pending diagnostic messages. ■ Event logbook Contains up to 20 or 100 (order option "Extended HistoROM") event messages that have occurred. ■ Device information Contains information for identifying the device. ■ Measured values Contains all current measured values. ■ Analog inputs Is used to display the analog input. ■ Data logging (Order option "Extended HistoROM") Storage and visualization of up to 1000 measured values ■ Heartbeat The functionality of the device is checked on demand and the verification results are documented. ■ Simulation Is used to simulate measured values or output values.
Expert	function-oriented	Tasks that require detailed knowledge of the function of the device: <ul style="list-style-type: none"> ■ Commissioning measurements under difficult conditions ■ Optimal adaptation of the measurement to difficult conditions ■ Detailed configuration of the communication interface ■ Error diagnostics in difficult cases 	Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: <ul style="list-style-type: none"> ■ System Contains all higher-order device parameters that do not pertain either to measurement or the measured value communication. ■ Sensor Configuration of the measurement. ■ Output Configuration of the pulse/frequency/status output. ■ Communication Configuration of the digital communication interface. ■ Submenus for function blocks (e.g. "Analog Inputs") Configuration of function blocks. ■ Application Configuration of the functions that go beyond the actual measurement (e.g. totalizer). ■ Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.

8.3 Access to the operating menu via the local display

8.3.1 Operational display

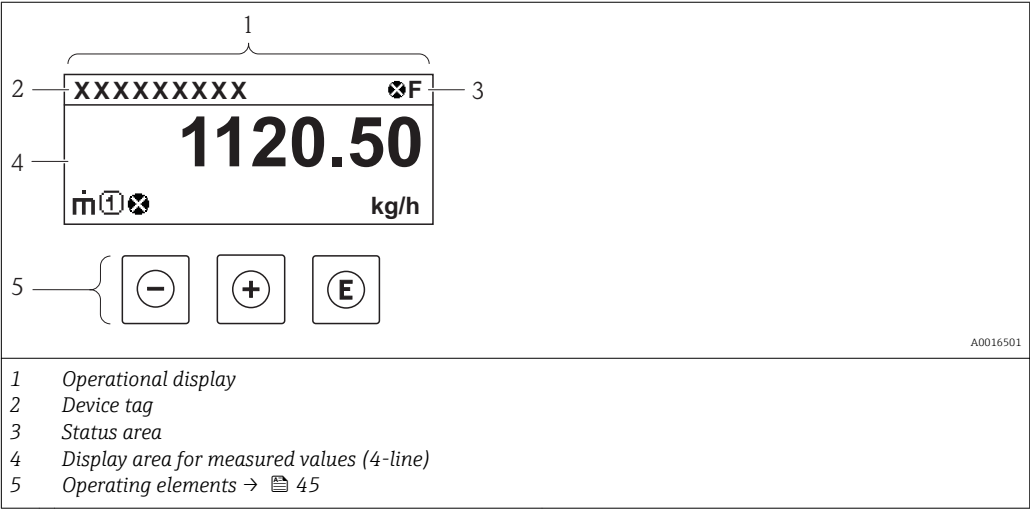


Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 105
 - F: Failure
 - C: Function check
 - S: Out of specification
 - M: Maintenance required
- Diagnostic behavior → 106
 - Alarm
 - Warning
- Locking (the device is locked via the hardware)
- Communication (communication via remote operation is active)

Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

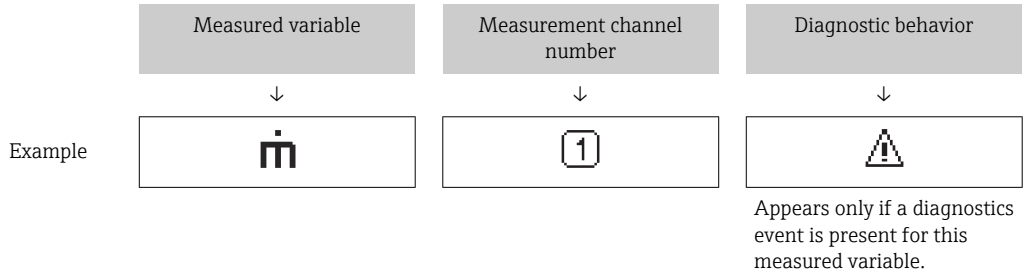

Measured variables

Symbol	Meaning
\dot{m}	Mass flow
\dot{V}	<ul style="list-style-type: none">■ Volume flow■ Corrected volume flow

	<ul style="list-style-type: none">▪ Density▪ Reference density
	Temperature
	Totalizer The measurement channel number indicates which of the three totalizers is displayed.

Measurement channel numbers

Symbol	Meaning
	Measurement channel 1 to 4
The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. totalizer 1-3).	

Diagnostic behavior

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable.
For information on the symbols → 106

The number and display format of the measured values can be configured via the **"Format display" parameter** → 69. "Operation" menu → Display → Format display


8.3.2 Navigation view



In the submenu	In the wizard
<p>1 Navigation view 2 Navigation path to current position 3 Status area 4 Display area for navigation 5 Operating elements → 45</p>	

Navigation path

The navigation path - displayed at the top left in the navigation view - consists of the following elements:

	<ul style="list-style-type: none">▪ In the submenu: Display symbol for menu▪ In the wizard: Display symbol for wizard	Omission symbol for operating menu levels in between	Name of current <ul style="list-style-type: none">▪ Submenu▪ Wizard▪ Parameter
	↓	↓	↓
Examples			




	/.../	Display
---	-------	---------

 For more information about the menu icons, refer to the "Display area" section →  42

Status area





The following appears in the status area of the navigation view in the top right corner:

- Of the submenu
 - The direct access code for the parameter you are navigating to (e.g. 0022-1)
 - If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard
 - If a diagnostic event is present, the diagnostic behavior and status signal





-  ■ For information on the diagnostic behavior and status signal →  105
- For information on the function and entry of the direct access code →  47

Display area


Menus

Symbol	Meaning
	Operation Appears: <ul style="list-style-type: none">■ In the menu next to the "Operation" selection■ At the left in the navigation path in the "Operation" menu
	Setup Appears: <ul style="list-style-type: none">■ In the menu next to the "Setup" selection■ At the left in the navigation path in the "Setup" menu
	Diagnostics Appears: <ul style="list-style-type: none">■ In the menu next to the "Diagnostics" selection■ At the left in the navigation path in the "Diagnostics" menu
	Expert Appears: <ul style="list-style-type: none">■ In the menu next to the "Expert" selection■ At the left in the navigation path in the "Expert" menu




Submenus, wizards, parameters

Symbol	Meaning
	Submenu
	Wizard
	Parameters within a wizard  No display symbol exists for parameters in submenus.



Locking

Symbol	Meaning
	Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked. <ul style="list-style-type: none">■ By a user-specific access code■ By the hardware write protection switch

Wizard operation

Symbol	Meaning
	Switches to the previous parameter.
	Confirms the parameter value and switches to the next parameter.
	Opens the editing view of the parameter.


 


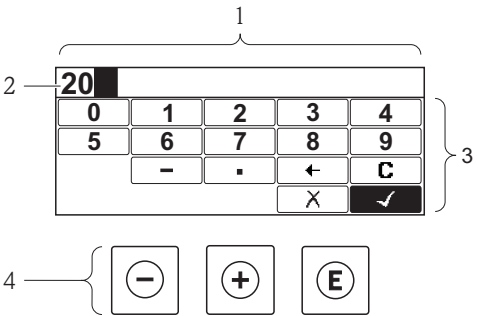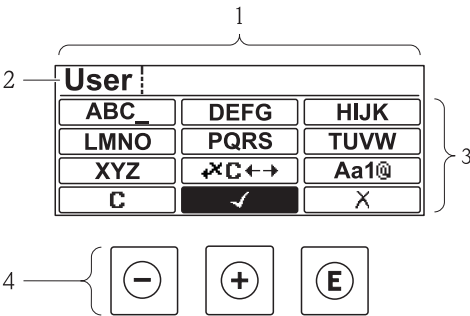
 


8.3.3 Editing view

Numeric editor	Text editor
	
<p>1 Editing view</p> <p>2 Display area of the entered values</p> <p>3 Input mask</p> <p>4 Operating elements → 45</p>	















Input mask

The following input symbols are available in the input mask of the numeric and text editor:





Numeric editor

Symbol	Meaning
 ... 	Selection of numbers from 0 to 9.
	Inserts decimal separator at the input position.
	Inserts minus sign at the input position.
	Confirms selection.
	Moves the input position one position to the left.
	Exits the input without applying the changes.
	Clears all entered characters.






 

Text editor

Symbol	Meaning
	Toggle <ul style="list-style-type: none"> Between upper-case and lower-case letters For entering numbers For entering special characters
  	Selection of letters from A to Z.
  	Selection of letters from a to z.
  	Selection of special characters.
	Confirms selection.
	Switches to the selection of the correction tools.
	Exits the input without applying the changes.
	Clears all entered characters.

Correction symbols under 

Symbol	Meaning
	Clears all entered characters.
	Moves the input position one position to the right.
	Moves the input position one position to the left.
	Deletes one character immediately to the left of the input position.

8.3.4 Operating elements

Key	Meaning
	Minus key <i>In a menu, submenu</i> Moves the selection bar upwards in a choose list. <i>With a Wizard</i> Confirms the parameter value and goes to the previous parameter. <i>With a text and numeric editor</i> In the input mask, moves the selection bar to the left (backwards).
	Plus key <i>In a menu, submenu</i> Moves the selection bar downwards in a choose list. <i>With a Wizard</i> Confirms the parameter value and goes to the next parameter. <i>With a text and numeric editor</i> Moves the selection bar to the right (forwards) in an input screen.
	Enter key <i>For operational display</i> <ul style="list-style-type: none"> Pressing the key briefly opens the operating menu. Pressing the key for 2 s opens the context menu. <i>In a menu, submenu</i> <ul style="list-style-type: none"> Pressing the key briefly: <ul style="list-style-type: none"> Opens the selected menu, submenu or parameter. Starts the wizard. If help text is open, closes the help text of the parameter. Pressing the key for 2 s for parameter: <ul style="list-style-type: none"> If present, opens the help text for the function of the parameter. <i>With a Wizard</i> Opens the editing view of the parameter. <i>With a text and numeric editor</i> <ul style="list-style-type: none"> Pressing the key briefly: <ul style="list-style-type: none"> Opens the selected group. Carries out the selected action. Pressing the key for 2 s confirms the edited parameter value.
	Escape key combination (press keys simultaneously) <i>In a menu, submenu</i> <ul style="list-style-type: none"> Pressing the key briefly: <ul style="list-style-type: none"> Exits the current menu level and takes you to the next higher level. If help text is open, closes the help text of the parameter. Pressing the key for 2 s returns you to the operational display ("home position"). <i>With a Wizard</i> Exits the wizard and takes you to the next higher level. <i>With a text and numeric editor</i> Closes the text or numeric editor without applying changes.
	Minus/Enter key combination (press the keys simultaneously) Reduces the contrast (brighter setting).
	Plus/Enter key combination (press and hold down the keys simultaneously) Increases the contrast (darker setting).
	Minus/Plus/Enter key combination (press the keys simultaneously) <i>For operational display</i> Enables or disables the keypad lock (only SD02 display module).


8.3.5 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Conf. backup disp.
- Simulation


 
Calling up and closing the context menu

The user is in the operational display.

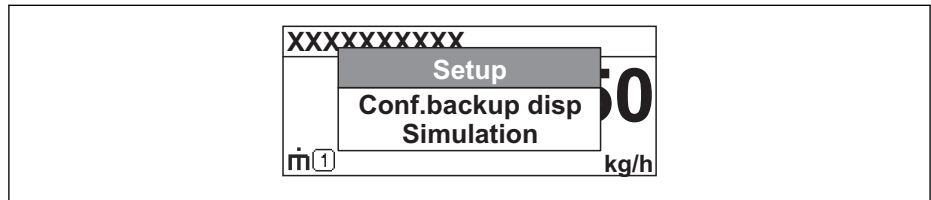

1. Press  for 2 s.
 - ↳ The context menu opens.



A0014003-EN



2. Press  +  simultaneously.
 - ↳ The context menu is closed and the operational display appears.

Calling up the menu via the context menu


1. Open the context menu.
2. Press  to navigate to the desired menu.
3. Press  to confirm the selection.
 - ↳ The selected menu opens.

8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

 For an explanation of the navigation view with symbols and operating elements
→  41

Example: Setting the number of displayed measured values to "2 values"

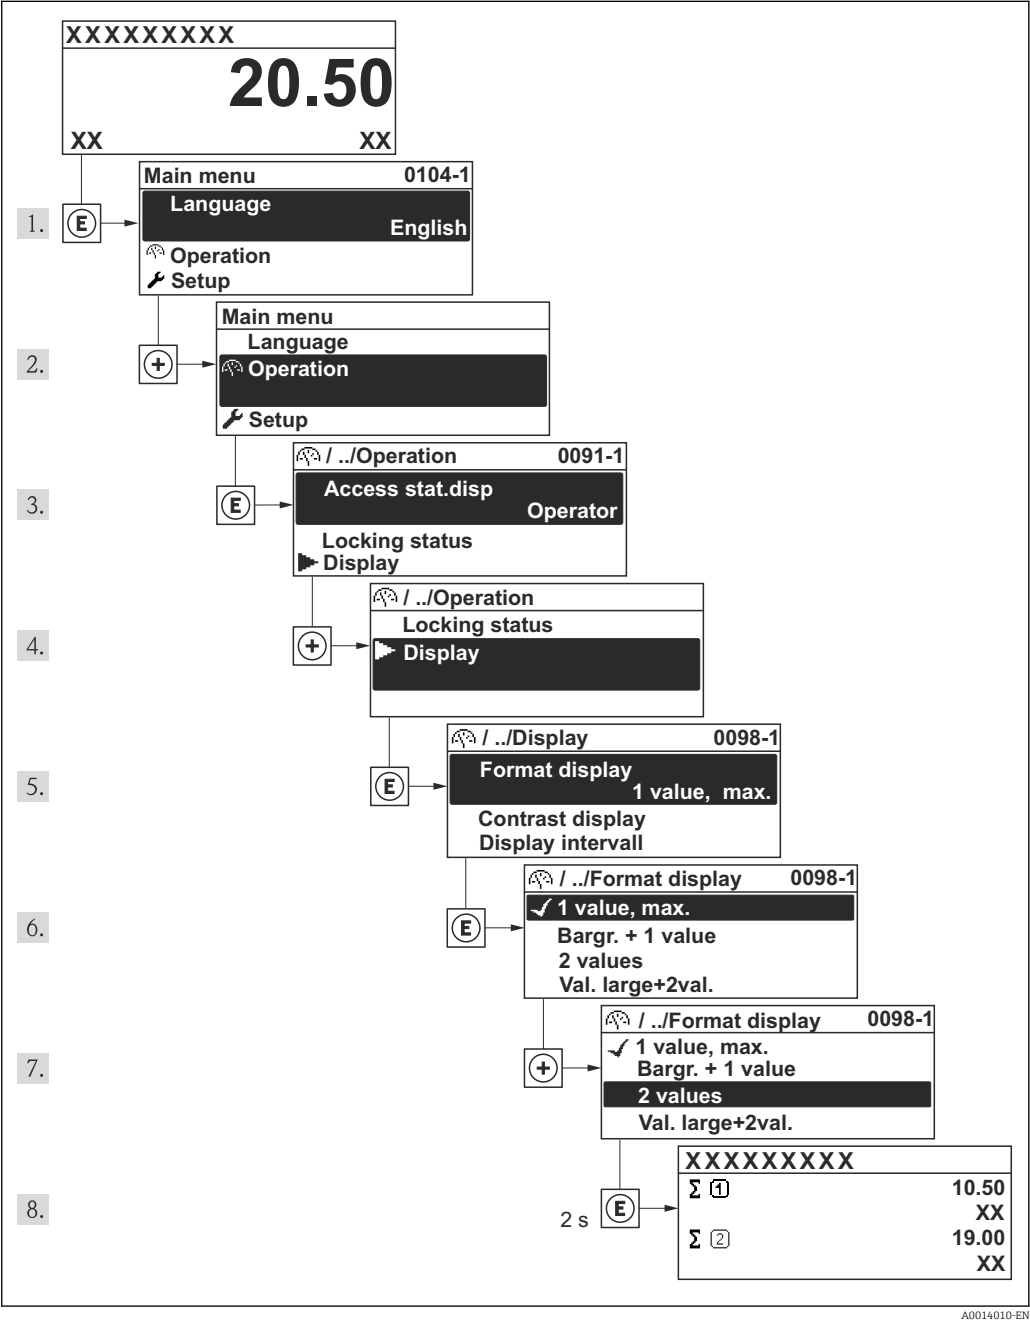

A0014010-EN


8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

Navigation path

"Expert" menu → Direct access


The direct access code consists of a 4-digit number and the channel number, which identifies the channel of a process variable: e.g. 0914-1. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

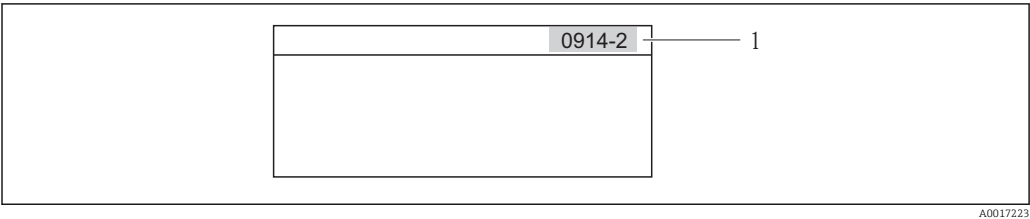

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered.
Example: Input of "914" instead of "0914"
- If no channel number is entered, channel 1 is jumped to automatically.
Example: Input of "0914" → Parameter **Totalizer 1**
- If a different channel is jumped to: Enter the direct access code with the corresponding channel number.
Example: Input of "0914-2" → Parameter **Totalizer 2**


 For the direct access codes of the individual parameters


8.3.8 Calling up help text


For some parameters, help texts exist, which the user can call up from the navigation view. These briefly describe the function of the parameter and thus support fast and reliable commissioning.


 
Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

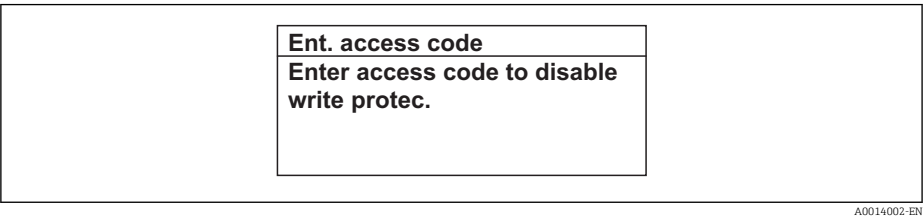

 
1. Press  for 2 s.
↳ The help text for the selected parameter opens.




 12 Example: Help text for parameter "Enter access code"

2. Press  +  simultaneously.
↳ The help text is closed.

8.3.9 Changing the parameters

 For a description of the editing display - consisting of text editor and numeric editor - with symbols →  43, for a description of the operating elements →  45

Example: Changing the tag name in the "Tag description" parameter from 001-FT-101 to 001-FT-102

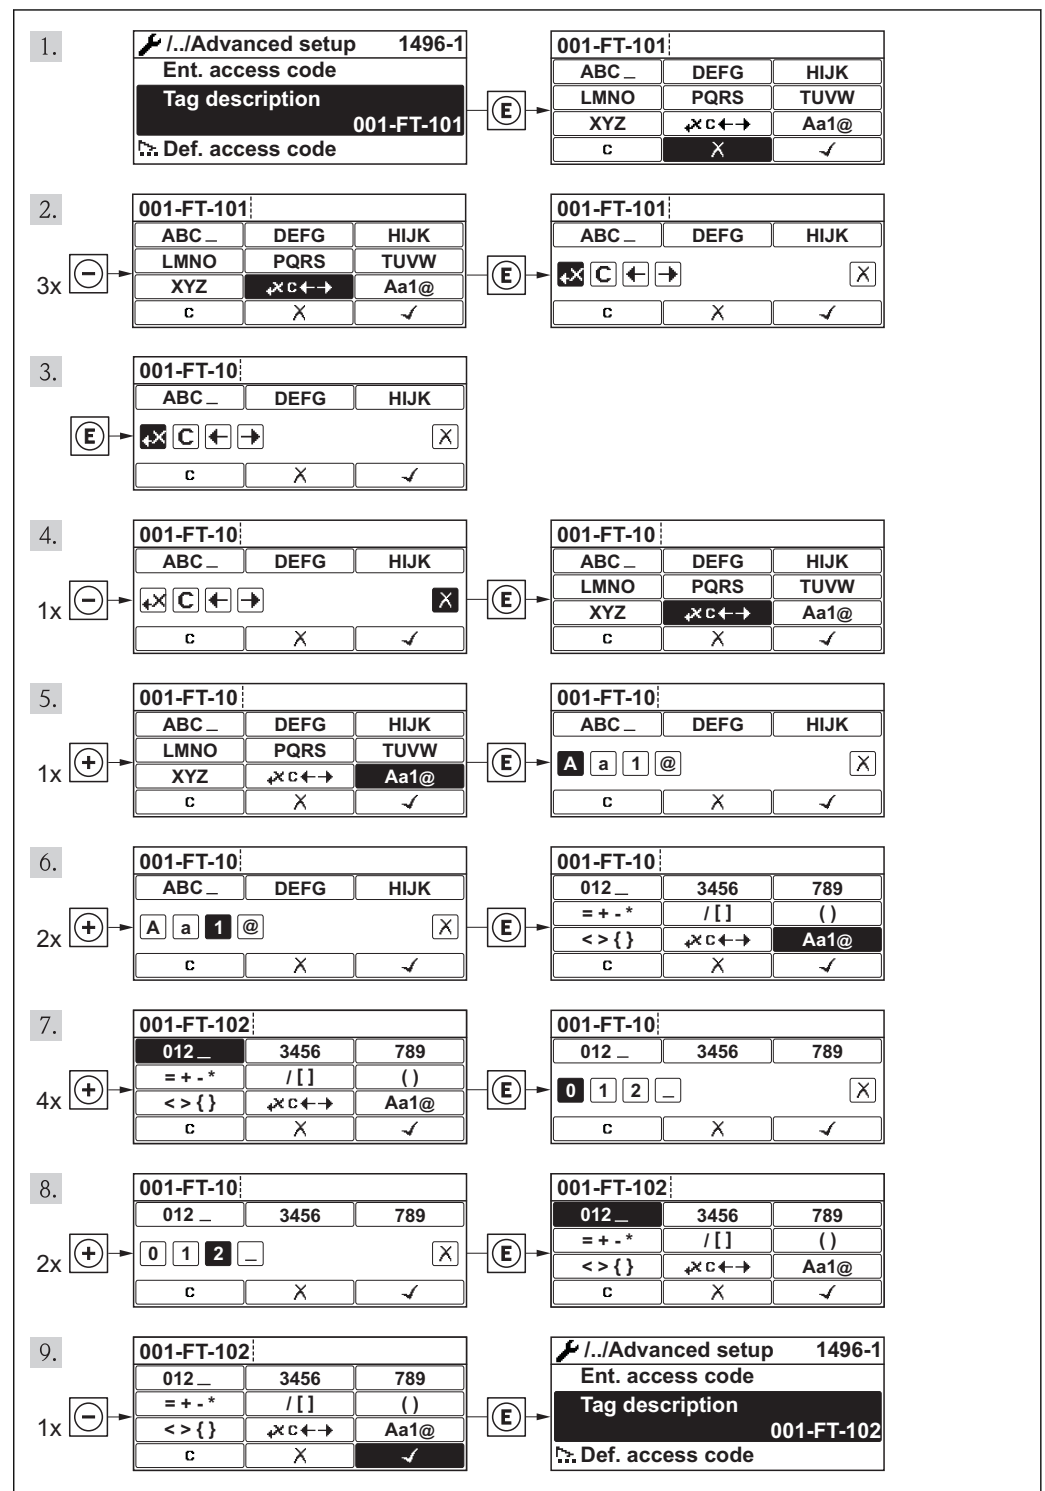

A0014020-EN

8.3.10 User roles and related access authorization


The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access.

Access authorization to parameters


User role	Read access		Write access	
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	✓	✓	✓	-- 1)
Maintenance	✓	✓	✓	✓

- 1) Despite the defined access code, certain parameters can always be modified and thus are excepted from the write protection, as they do not affect the measurement. Refer to the "Write protection via access code" section



If an incorrect access code is entered, the user obtains the access rights of the "Operator" role.

 The user role with which the user is currently logged on is indicated by the **Access status display** parameter. Navigation path: Operation → Access status display

8.3.11 Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using the local display.


The locking of the write access via local operation can be disabled by entering the customer-defined access code via the respective access option.

1. After you press , the input prompt for the access code appears.
2. Enter the access code.
 - ↳ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

8.3.12 Enabling and disabling the keypad lock

 
 
 
The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.


Local operation with mechanical push buttons (display module SD02)

 Display module SD02: order characteristic "Display; Operation", option C




The keypad lock is switched on and off in the same way:

Switching on the keypad lock


- The device is in the measured value display.
Press the  +  +  keys simultaneously.
 - ↳ The message **Keylock on** appears on the display: The keypad lock is switched on.

 If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

 Switching off the keypad lock

- ▶ The keypad lock is switched on.
Press the  +  +  keys simultaneously.
- ↳ The message **Keylock off** appears on the display: The keypad lock is switched off.

Local operation with touch control (display module SD03)

 
 Display module SD03: Order characteristic "Display; Operation", option **E**

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock


The keypad lock is switched on automatically:

- Each time the device is restarted.
- If the device has not been operated for longer than one minute in the measured value display.

1. The device is in the measured value display.
Press the  key for longer than 2 seconds.
↳ A context menu appears.
2. In the context menu, select the **Keylock on** option.
↳ The keypad lock is switched on.

 If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

 Switching off the keypad lock

1. The keypad lock is switched on.
Press the  key for longer than 2 seconds.
↳ A context menu appears.
2. In the context menu, select the **Keylock off** option.
↳ The keypad lock is switched off.


8.4 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.


8.4.1 Connecting the operating tool

Via PROFIBUS PA network

This communication interface is available in device versions with PROFIBUS PA.

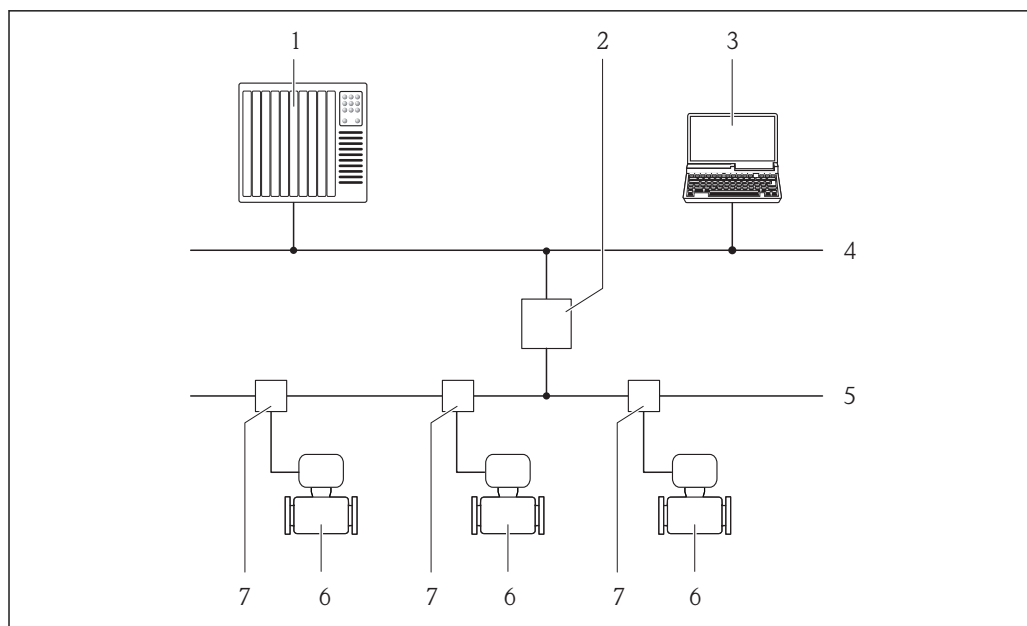


A0019013

 13 Options for remote operation via PROFIBUS PA network

- 1 Automation system
- 2 Segment coupler PROFIBUS DP/PA
- 3 Computer with PROFIBUS network card
- 4 PROFIBUS DP network
- 5 PROFIBUS PA network
- 6 Measuring device
- 7 T-box

Via service interface (CDI)

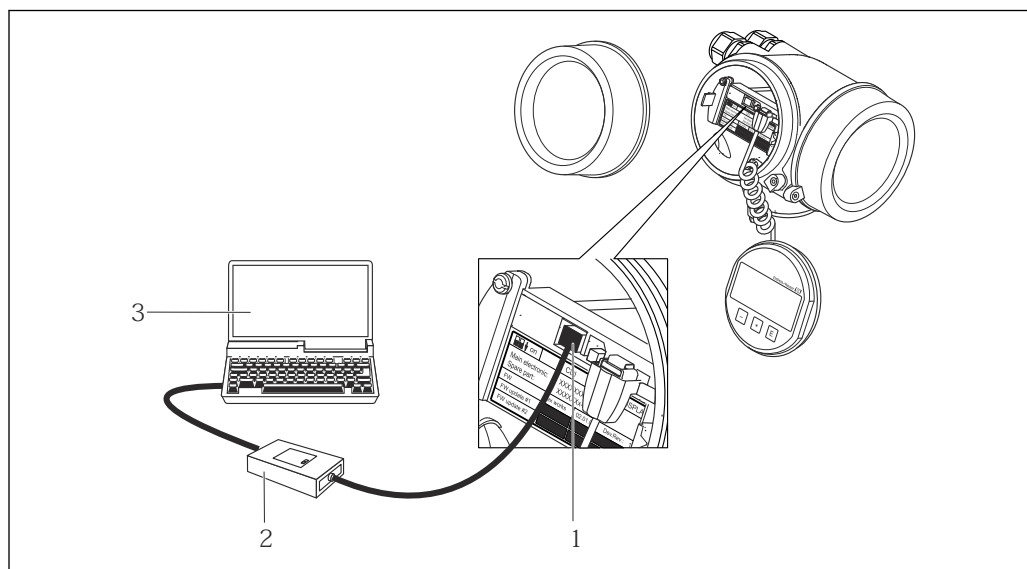

A0014019

- 1 Service interface (CDI = Endress+Hauser Common Data Interface) of the measuring device
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool with COM DTM "CDI Communication FXA291"

8.4.2 FieldCare

Function scope

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access takes place via:

- PROFIBUS PA protocol → 13, 52
- Service interface CDI → 52

Typical functions:


- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook

 For details, see Operating Instructions BA00027S and BA00059S

Source for device description files

See data → 55

User interface

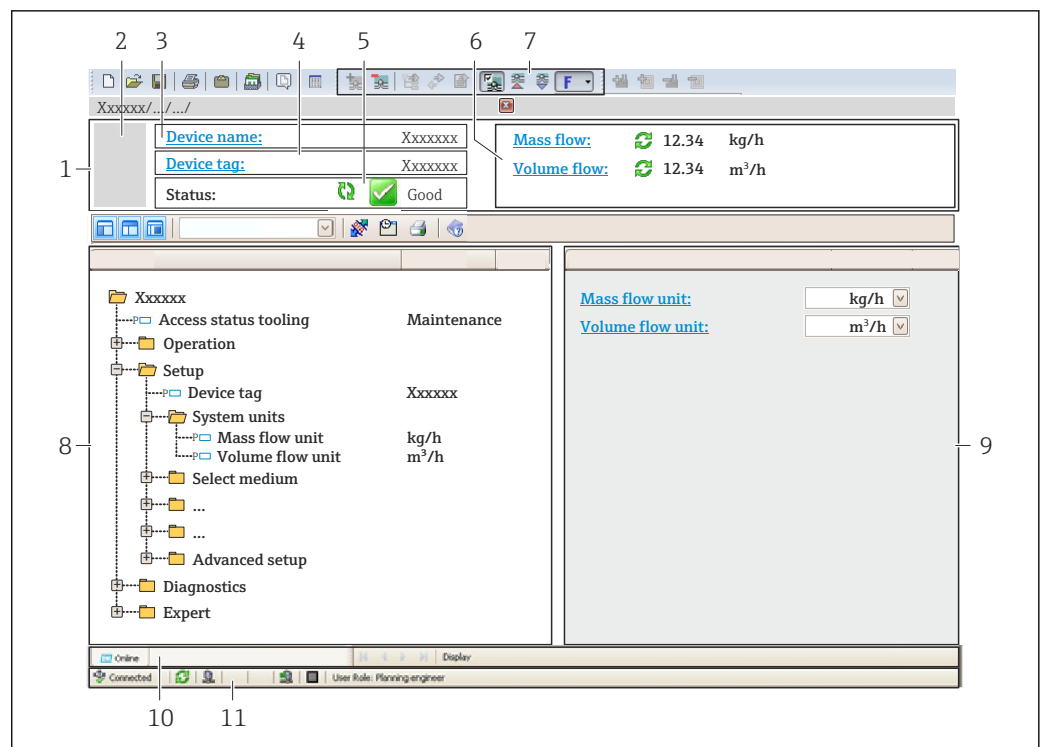


- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Device tag
- 5 Status area with status signal
- 6 Display area for current measured values
- 7 Event list with additional functions such as save/load, events list and document creation
- 8 Navigation area with operating menu structure
- 9 Operating range
- 10 Range of action
- 11 Status area

8.4.3 SIMATIC PDM

Function scope

SIMATIC PDM is a standardized, manufacturer-independent program from Siemens for the operation, configuration, maintenance and diagnosis of intelligent field devices via PROFIBUS PA protocol.

 
Source for device description files

See data →  55

9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

Firmware version	01.01.zz	<ul style="list-style-type: none"> On the title page of the Operating instructions On the transmitter nameplate →  14 Firmware version "Diagnostics" menu → Device information → Firmware version
Release date of firmware version	06.2015	---
Manufacturer ID	0x11	Manufacturer ID "Diagnostics" menu → Device information → Manufacturer ID
Device type ID	0x155F	Device type "Diagnostics" menu → Device information → Device type
Profile version	3.02	---

 For an overview of the different firmware versions for the device →  131

9.1.2 Operating tools

Operating tool via PROFIBUS protocol	Sources for obtaining device descriptions
FieldCare	<ul style="list-style-type: none"> www.endress.com → Download Area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser)
SIMATIC PDM (Siemens)	www.endress.com → Download Area


9.2 Device master file (GSD)

In order to integrate field devices into a bus system, the PROFIBUS system needs a description of the device parameters, such as output data, input data, data format, data volume and supported transmission rate.

These data are available in the device master file (GSD) which is provided to the PROFIBUS Master when the communication system is commissioned. In addition device bit maps, which appear as icons in the network structure, can also be integrated.

With the Profile 3.0 device master file (GSD) it is possible to exchange field devices made by different manufacturers without having to reconfigure.

Generally speaking two different GSD versions are possible with Profile 3.0 and higher.


-  Before configuring, the user must decide which GSD should be used to operate the system.
- The setting can be changed via a Class 2 master.

9.2.1 Manufacturer-specific GSD

This GSD guarantees the unrestricted functionality of the measuring device. Device-specific process parameters and functions are therefore available.

Manufacturer-specific GSD	ID number	File name
PROFIBUS PA	0x1564	EH3x1564.gsd

The fact that the manufacturer-specific GSD should be used is specified in the **Ident number selector** parameter by selecting the **Manufacturer** option.

 Where to acquire the manufacturer-specific GSD:
www.endress.com → Download Area

9.2.2 Profile GSD

Differs in terms of the number of Analog Input blocks (AI) and the measured values. If a system is configured with a Profile GSD, it is possible to exchange devices made by different manufacturers. However, it is essential to ensure that the order of the cyclic process values is correct.

ID number	Supported blocks	Supported channels
0x9740	<ul style="list-style-type: none">1 Analog Input1 Totalizer	<ul style="list-style-type: none">Channel Analog Input: volume flowChannel totalizer: volume flow
0x9741	<ul style="list-style-type: none">2 Analog Input1 Totalizer	<ul style="list-style-type: none">Channel Analog Input 1: volume flowChannel Analog Input 2: mass flowChannel totalizer: volume flow
0x9742	<ul style="list-style-type: none">3 Analog Input1 Totalizer	<ul style="list-style-type: none">Channel Analog Input 1: volume flowChannel Analog Input 2: mass flowChannel Analog Input 3: corrected volume flowChannel totalizer: volume flow


 
 
 
 
The Profile GSD that is to be used is specified in the **Ident number selector** parameter by selecting the **Profile 0x9740** option, **Profile 0x9741** option or **Profile 0x9742** option.

9.3 Cyclic data transmission

Cyclic data transmission when using the device master file (GSD).

9.3.1 Block model

The block model shows which input and output data the measuring device makes available for cyclic data exchange. Cyclic data exchange takes place with a PROFIBUS master (Class 1), e.g. a control system etc.

Measuring device				Control system
Transducer Block	Analog Input block 1 to 6	→  57	Output value AI	→
			Output value TOTAL	→
	Totalizer block 1 to 3	→  58	Controller SETTOT	←
			Configuration MODETOT	←
	Analog Output block 1	→  60	Input values AO	←
	Discrete Input block 1 to 2	→  60	Output values DI	→
	Discrete Output block 1 to 4	→  61	Input values DO	←
				PROFIBUS PA

Defined order of modules

The measuring device works as a modular PROFIBUS slave. In contrast to a compact slave, a modular slave has a variable design and consists of several individual modules. The device master file (GSD) contains a description of the individual modules (input and output data) along with their individual properties.

The modules are permanently assigned to the slots, i.e. when configuring the modules, the order and the arrangement of the modules must be respected.

Slot	Module	Function block
1...6	AI	Analog Input block 1 to 4
7	TOTAL or SETTOT_TOTAL or SETTOT_MODETOT_TOTAL	Totalizer block 1
8		Totalizer block 2
9		Totalizer block 3
10	AO	Analog Output block 1
11...12	DI	Discrete Input block 1 to 2
13...16	DO	Discrete Output block 1 to 3

To optimize the data throughput rate of the PROFIBUS network, it is advisable to only configure modules that are processed in the PROFIBUS master system. If this results in gaps between the configured modules, these gaps must be assigned to the EMPTY_MODULE.

9.3.2 Description of the modules



The data structure is described from the perspective of the PROFIBUS master:

- Input data: Are sent from the measuring device to the PROFIBUS master.
- Output data: Are sent from the PROFIBUS master to the measuring device.

AI module (Analog Input)

Transmit an input variable from the measuring device to the PROFIBUS master (Class 1).

The selected input variable, along with the status, is cyclically transmitted to the PROFIBUS Master (Class 1) via the AI module. The input variable is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Four Analog Input blocks are available (slot 1 to 6).

Selection: input variable

The input variable can be specified using the CHANNEL parameter.

CHANNEL	Input variable
32961	Mass flow
33122	Volume flow
33093	Corrected volume flow
32850	Density
33092	Reference density
33101	Temperature

Factory setting

Function block	Factory setting
AI 1	Volume flow
AI 2	Mass flow
AI 3	Corrected volume flow
AI 4	Density
AI 5	Reference density
AI 6	Temperature

*Data structure**Input data of Analog Input*

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

TOTAL module

Transmit a totalizer value from the measuring device to the PROFIBUS master (Class 1).

A selected totalizer value, along with the status, is cyclically transmitted to a PROFIBUS Master (Class 1) via the TOTAL module. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the totalizer value.

Three Totalizer blocks are available (slot 7 to 9).

Selection: totalizer value

The totalizer value can be specified using the CHANNEL parameter.

CHANNEL	Input variable
32961	Mass flow
33122	Volume flow
33093	Corrected volume flow

*Data structure**Input data of TOTAL*

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

SETTOT_TOTAL module

The module combination consists of the SETTOT and TOTAL functions:

- SETTOT: Control the totalizers via the PROFIBUS master.
- TOTAL: Transmit totalizer value, along with the status, to the PROFIBUS master.

Three Totalizer blocks are available (slot 7 to 9).

Selection: control totalizer

CHANNEL	Value SETTOT	Control totalizer
33310	0	Totalize
33046	1	Resetting
33308	2	Adopt totalizer initial setting

Factory setting

Function block	Factory setting: Value SETTOT (meaning)
Totalizer 1, 2 and 3	0 (totalizing)

*Data structure**Output data of SETTOT*

Byte 1
Control variable 1

Input data of TOTAL

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

SETTOT_MODETOT_TOTAL module

The module combination consists of the SETTOT, MODETOT and TOTAL functions:

- SETTOT: Control the totalizers via the PROFIBUS master.
- MODETOT: Configure the totalizers via the PROFIBUS master.
- TOTAL: Transmit totalizer value, along with the status, to the PROFIBUS master.

Three Totalizer blocks are available (slot 7 to 9).

Selection: totalizer configuration

CHANNEL	MODETOT value	Totalizer configuration
33306	0	Balancing
33028	1	Balance the positive flow
32976	2	Balance the negative flow
32928	3	Stop totalizing

Factory setting

Function block	Factory setting: Value MODETOT (meaning)
Totalizer 1, 2 and 3	0 (balancing)

*Data structure**Output data of SETTOT and MODETOT*

Byte 1	Byte 2
Control variable 1: SETTOT	Control variable 2: MODETOT

Input data of TOTAL

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

AO module (Analog Output)

Transmit a compensation value from the PROFIBUS master (Class 1) to the measuring device.

A compensation value, along with the status, is cyclically transmitted from the PROFIBUS Master (Class 1) to the measuring device via the AO module. The compensation value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the compensation value.

One Analog Output block is available (slot 10).

Assigned compensation values

A compensation value is permanently assigned to the individual Analog Output blocks.

CHANNEL	Function block	Compensation value
306	AO 1	External pressure ¹⁾

1) The compensation variables must be transmitted to the device in the SI basic unit



The selection is made via: "Expert" menu → Sensor → External compensation

*Data structure**Output data of Analog Output*

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

DI module (Discrete Input)

Transmit discrete input values from the measuring device to the PROFIBUS master (Class 1). Discrete input values are used by the measuring device to transmit the state of device functions to the PROFIBUS master (Class 1).

The DI module cyclically transmits the discrete input value, along with the status, to the PROFIBUS Master (Class 1). The discrete input value is depicted in the first byte. The second byte contains standardized status information pertaining to the input value.

Two Discrete Input blocks are available (slot 11 to 12).

Selection: device function

The device function can be specified using the CHANNEL parameter.

CHANNEL	Device function	Factory setting: Status (meaning)
893	Status switch output	<ul style="list-style-type: none"> ■ 0 (device function not active) ■ 1 (device function active)
894	Empty pipe detection	
895	Low flow cut off	
1430	Status verification ¹⁾	

1) Only available with the Heartbeat Verification application package

Factory setting

Function block	Factory setting
DI 1	Empty pipe detection
DI 2	Low flow cut off

*Data structure**Input data of Discrete Input*

Byte 1	Byte 2
Discrete	Status

DO module (Discrete Output)

Transmit discrete output values from the PROFIBUS master (Class 1) to the measuring device. Discrete output values are used by the PROFIBUS master (Class 1) to enable and disable device functions.

The DO module cyclically transmits the discrete output value, along with the status, to the measuring device. The discrete output value is depicted in the first byte. The second byte contains standardized status information pertaining to the output value.

Four Discrete Output blocks are available (slot 13 to 16).

Assigned device functions

A device function is permanently assigned to the individual Discrete Output blocks.

CHANNEL	Function block	Device function	Values: control (meaning)
891	DO 1	Flow override	<ul style="list-style-type: none"> ■ 0 (disable device function) ■ 1 (enable device function)
890	DO 2	Zero point adjustment	
253	DO 3	Pulse/freq./switch output	
1429	DO 4	Start verification ¹⁾	

1) Only available with the Heartbeat Verification application package

*Data structure**Output data of Discrete Output*

Byte 1	Byte 2
Discrete	Status

EMPTY_MODULE module

This module is used to assign empty spaces arising from modules not being used in the slots →  57.

10 Commissioning

10.1 Function check

Before commissioning the measuring device:

- ▶ Make sure that the post-installation and post-connection checks have been performed.
- "Post-installation check" checklist → 25
- "Post-connection check" checklist → 36

10.2 Switching on the measuring device

- ▶ After a successful function check, switch on the measuring device.
 - ↳ After a successful startup, the local display switches automatically from the startup display to the operational display.

If nothing appears on the local display or a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting" → 103.

10.3 Configuring the device address via software

In the **"Communication" submenu** the device address can be set.

Navigation

"Setup" menu → Communication → Device address

10.3.1 PROFIBUS network


At time of delivery, the measuring device has the following factory setting:

Device address	126
----------------	-----

If hardware addressing is active, software addressing is blocked → 34

10.4 Setting the operating language

Factory setting: English or ordered local language

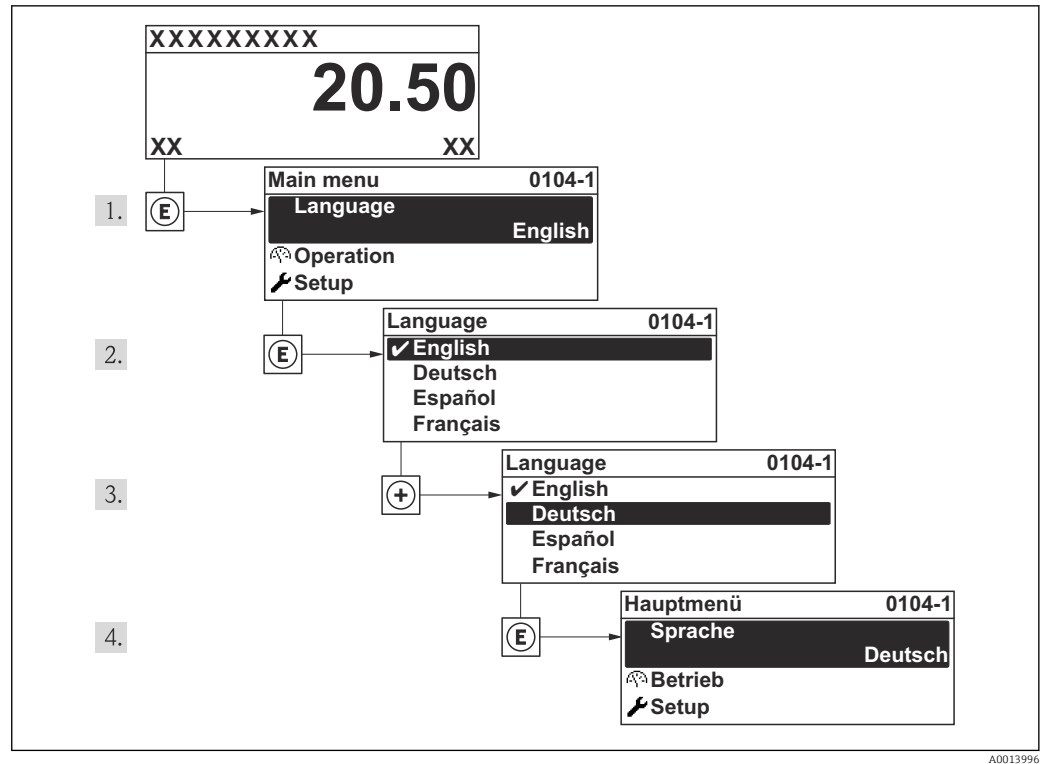


14 Taking the example of the local display

10.5 Configuring the measuring device

The **Setup** menu with its guided wizards contains all the parameters needed for standard operation.

Navigation to the **Setup** menu

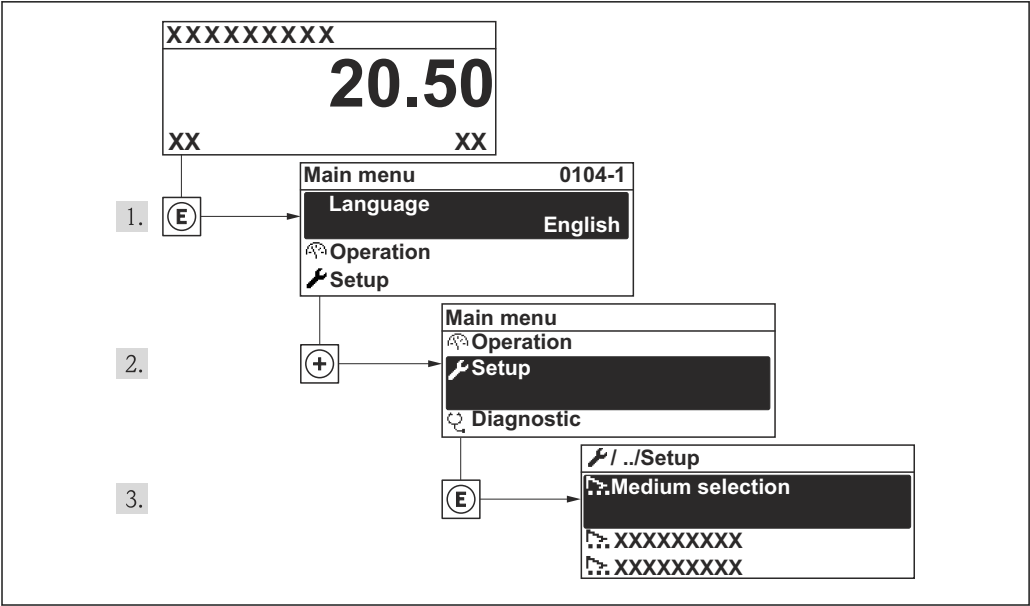

15 Illustrated using the example of the local display


A0014007-EN

Overview of the wizards in the "Setup" menu

Setup		
Device tag	→	65
▶ System units	→	65
▶ Select medium	→	68
▶ Communication	→	69
▶ Display	→	69
▶ Low flow cut off	→	72
▶ Partially filled pipe detection	→	74
▶ Analog inputs	→	75
▶ Advanced setup	→	76

10.5.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

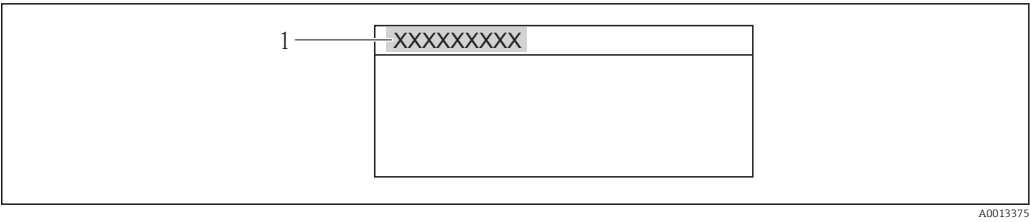

16 Header of the operational display with tag name

1 Device tag

The number of characters displayed depends on the characters used.
Entry of the tag name in the "FieldCare" operating tool → 53

Navigation
"Setup" menu → Device tag

Parameter overview with brief description


Parameter	Description	User entry	Factory setting
Device tag	Enter the name for the measuring point.	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).	Promass 200

10.5.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

Navigation
"Setup" menu → System units

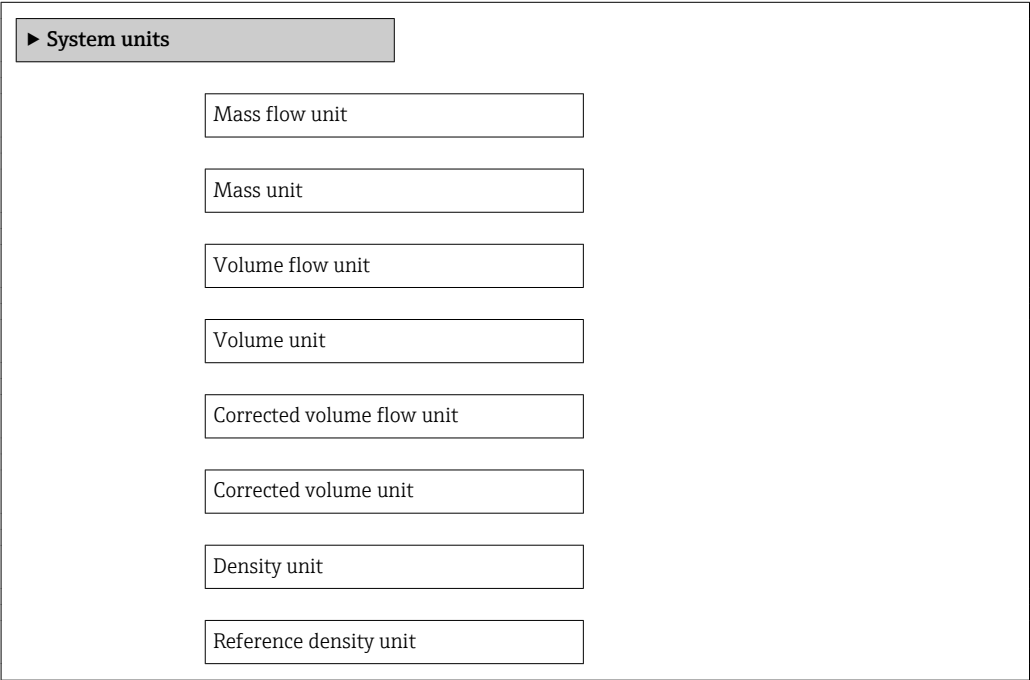

Temperature unit
Pressure unit

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Mass flow unit	Select mass flow unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Output Low flow cut off Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg/h lb/min
Mass unit	Select mass unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg lb
Volume flow unit	Select volume flow unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Output Low flow cut off Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> l/h gal/min (us)
Volume unit	Select volume unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> l gal (us)
Corrected volume flow unit	Select corrected volume flow unit. <i>Result</i> The selected unit applies for: Corrected volume flow	Unit choose list	Country-specific: <ul style="list-style-type: none"> NI/h Sft³/min
Corrected volume unit	Select corrected volume unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> NI Sft³
Density unit	Select density unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Output Simulation process variable Density adjustment (Expert menu) 	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg/l lb/ft³
Reference density unit	Select reference density unit.	Unit choose list	Country-dependent <ul style="list-style-type: none"> kg/NI lb/Sft³
Temperature unit	Select temperature unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Minimum value Maximum value Maximum value Minimum value Average value Minimum value Maximum value Minimum value Maximum value Reference temperature 	Unit choose list	Country-specific: <ul style="list-style-type: none"> °C °F

Parameter	Description	Selection	Factory setting
Length unit	Select length unit for nominal diameter.	Unit choose list	Country-specific: ■ mm ■ in
Pressure unit	Select process pressure unit. <i>Result</i> The unit is taken from: ■ Pressure value ■ External pressure ■ Failure value ■ 4 mA value ■ 20 mA value	Unit choose list	Country-specific: ■ bar a ■ psi a


10.5.3 Selecting and setting the medium

The **Medium selection** wizard guides you systematically through all the parameters that have to be configured for selecting and setting the medium.

Navigation

"Setup" menu → Select medium

Structure of the wizard

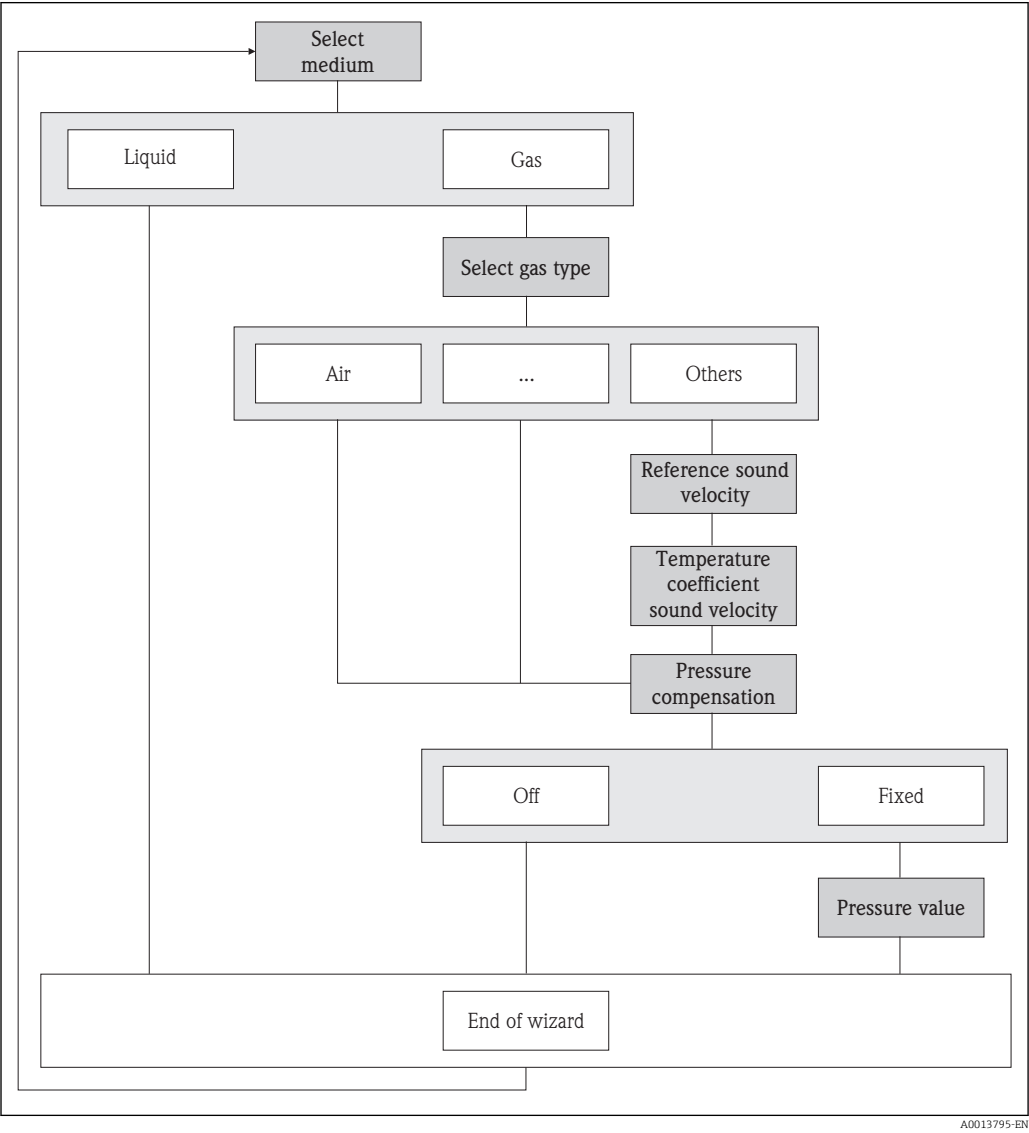

A0013795-EN

17 "Select medium" wizard in the "Setup" menu

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Select medium	–	Select medium type.	■ Liquid ■ Gas	Liquid
Select gas type	In the Select medium parameter the Gas option is selected.	Select measured gas type.	Gas type choose list	Air

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Reference sound velocity	In the Select gas type parameter the Others option is selected.	Enter sound velocity of gas at 0 °C (32 °F).	1 to 99 999.9999 m/s	331.5 m/s
Temperature coefficient sound velocity	In the Select gas type parameter the Others option is selected.	Enter temperature coefficient for the gas sound velocity.	Positive floating-point number	0.61 (m/s)/K
Pressure compensation	–	Select pressure compensation type.	<ul style="list-style-type: none"> ■ Off ■ Fixed value ■ External value 	Off
Pressure value	In the Pressure compensation parameter the Fixed value option is selected.	Enter process pressure to be used for pressure correction.	Positive floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 1.01 bar a ■ 14.7 psi a

10.5.4 Configuring the communication interface

The **Communication** submenu guides you systematically through all the parameters that have to be configured for selecting and setting the communication interface.

Navigation

"Setup" menu → Communication

► Communication

Device address

Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device address	Enter device address.	0 to 126	126


10.5.5 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can be configured for configuring the local display.

Navigation

"Setup" menu → Display

Structure of the wizard

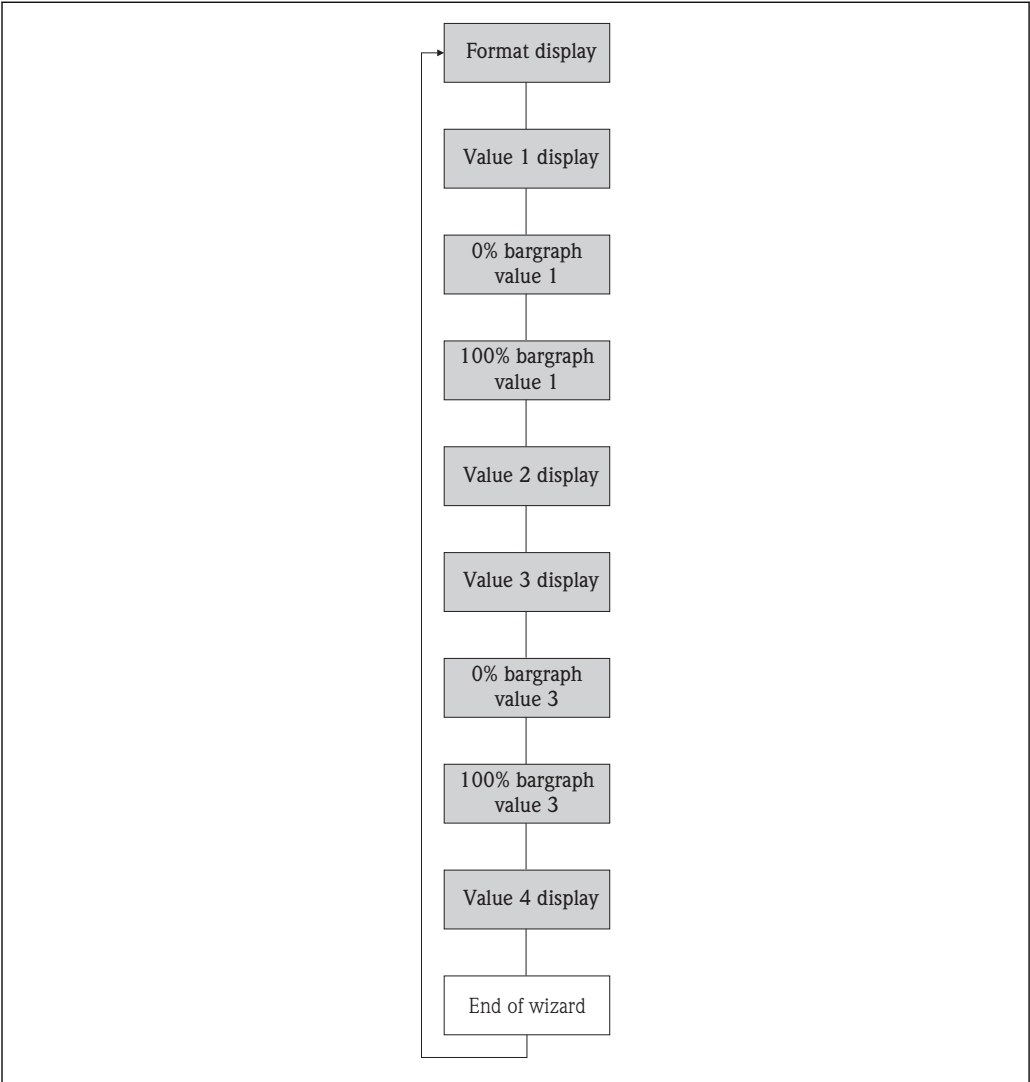

18 "Display" wizard in the "Setup" menu

A0013797-EN

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul style="list-style-type: none"> ■ 1 value, max. size ■ 1 bargraph + 1 value ■ 2 values ■ 1 value large + 2 values ■ 4 values 	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 m³/h ■ 0 ft³/h
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None
0% bargraph value 3	An option was selected in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	0
100% bargraph value 3	An option was selected in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None


10.5.6 Configuring the low flow cut off

The **Low flow cut off** wizard guides you systematically through all the parameters that have to be set for configuring the low flow cut off.

Navigation

"Setup" menu → Low flow cut off

Structure of the wizard

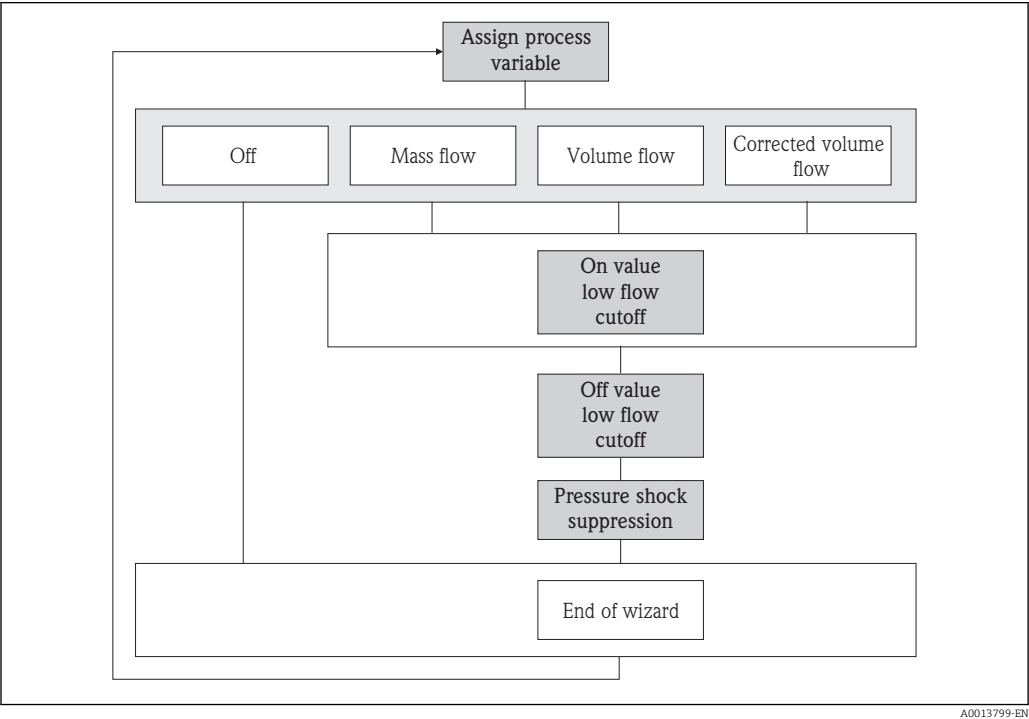



A0013799-EN

19 "Low flow cut off" wizard in the "Setup" menu

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	–	Select process variable for low flow cut off.	<ul style="list-style-type: none">OffMass flowVolume flowCorrected volume flow	Mass flow
On value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→ 72): <ul style="list-style-type: none">Mass flowVolume flowCorrected volume flow	Enter on value for low flow cut off.	Positive floating-point number	For liquids: depends on country and nominal diameter

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Off value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→  72): <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow 	Enter off value for low flow cut off.	0 to 100.0 %	50 %
Pressure shock suppression	One of the following options is selected in the Assign process variable parameter (→  72): <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow 	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	0 s


10.5.7 Configuring the partial filled pipe detection

The **Partial filled pipe detection** wizard guides you systematically through all parameters that have to be set for configuring the monitoring of the pipe filling.

Navigation

"Setup" menu → Partially filled pipe detection

Structure of the wizard

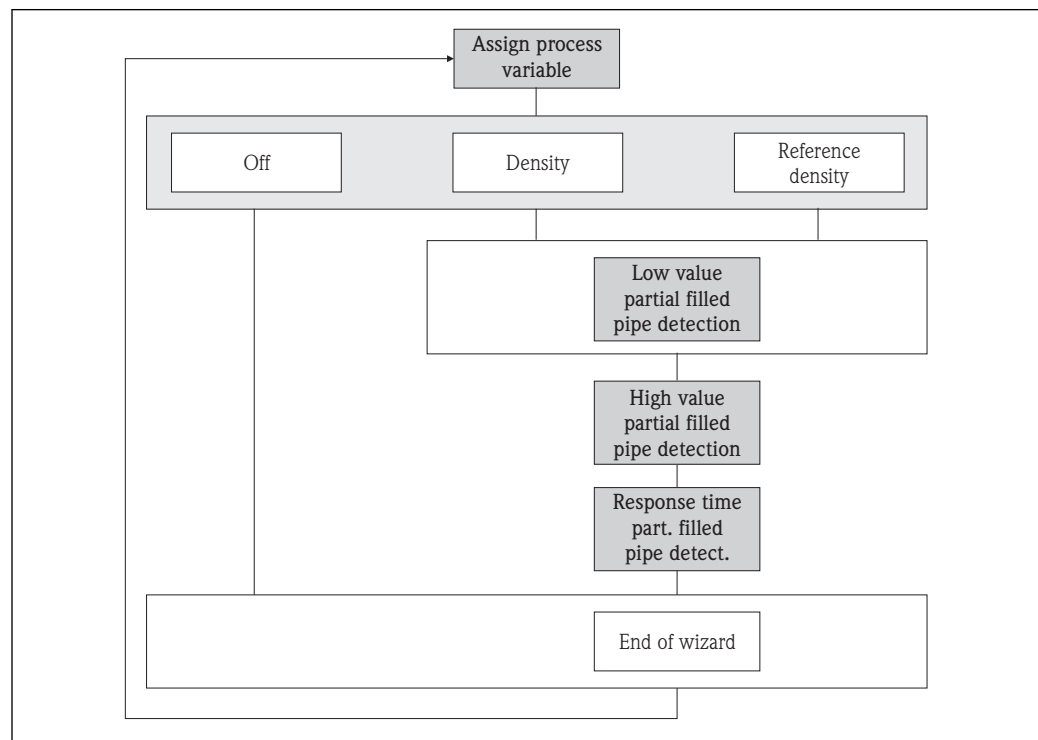

A0013801-EN

20 "Partially filled pipe detection" wizard in the "Setup" menu

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	–	Select process variable for partially filled pipe detection.	<ul style="list-style-type: none"> Off Density Reference density 	Off
Low value partial filled pipe detection	–	Enter lower limit value for deactivating partially filled pipe detection.	Signed floating-point number	Country-dependent: <ul style="list-style-type: none"> 0.2 kg/l 12.5 lb/ft³
High value partial filled pipe detection	–	Enter upper limit value for deactivating partially filled pipe detection.	Signed floating-point number	Country-dependent: <ul style="list-style-type: none"> 6 kg/l 374.6 lb/ft³
Response time part. filled pipe detect.	In the Assign process variable parameter, one of the following options is selected: <ul style="list-style-type: none"> Density Reference density 	Enter time before diagnostic message is displayed for partially filled pipe detection.	0 to 100 s	1 s

10.5.8 Configuring the analog inputs

The **Analog inputs** submenu guides you systematically to the individual **Analog input 1 to 6** submenu. From here you get to the parameters of the individual analog input.

Navigation

"Setup" menu → Analog inputs

```

graph TD
    A[▶ Analog inputs] --> B[▶ Analog input 1 to 6]
    B --> C[Channel]
    B --> D[PV filter time]
    B --> E[Fail safe type]
    B --> F[Fail safe value]
  
```


Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Channel	–	Select the process variable.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature 	Mass flow
PV filter time	–	Specify the time to suppress signal peaks. During the specified time the totalizer does not respond to an erratic increase in the process variable.	Positive floating-point number	0
Fail safe type	–	Select the failure mode.	<ul style="list-style-type: none"> ■ Fail safe value ■ Fallback value ■ Off 	Off
Fail safe value	In the Fail safe type parameter the Fail safe value option is selected.	Specify the values to be output when an error occurs.	Signed floating-point number	0

10.6 Advanced settings

The **Advanced setup** submenu with its submenus contains parameters for specific settings.

Navigation to the "Advanced setup" submenu

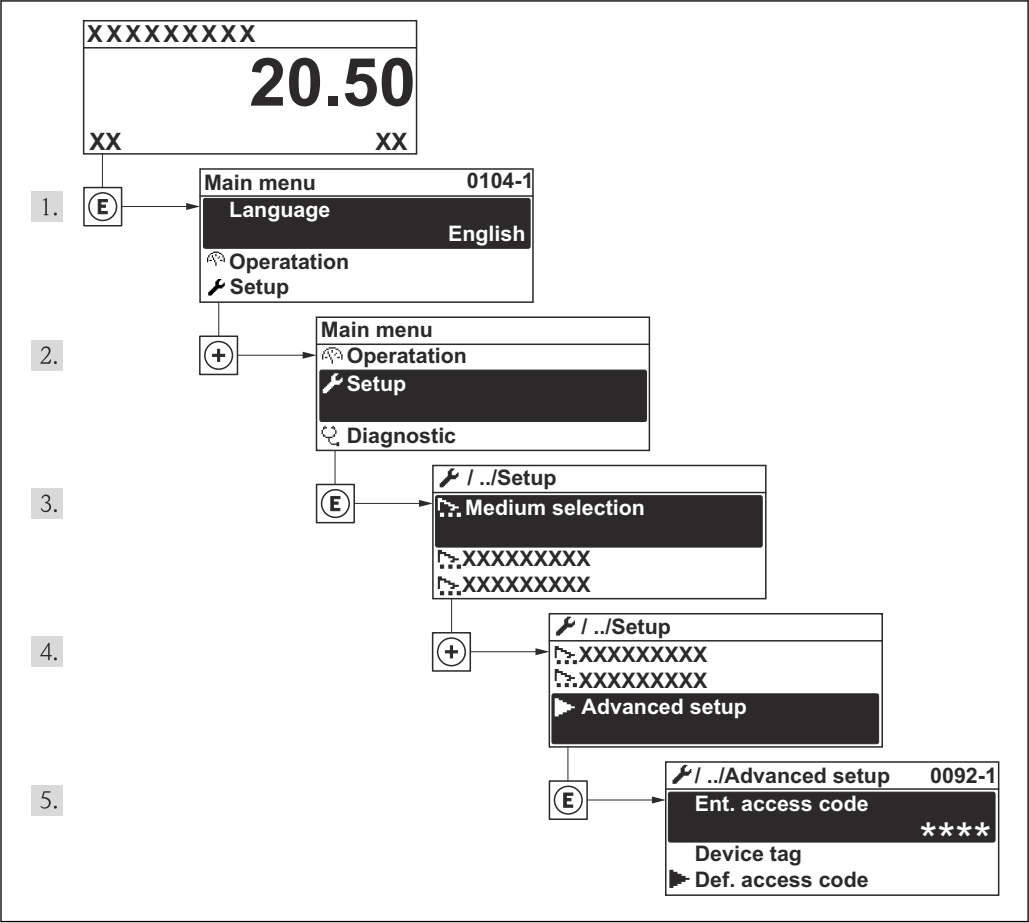

A0014009-EN

21 Taking the example of the local display

Navigation

"Setup" menu → Advanced setup

▶ Advanced setup

Enter access code

▶ Sensor adjustment → 77

▶ Pulse/frequency/switch output → 78

▶ Totalizer 1 to 3 → 85

▶ Display → 87

► Configuration backup display	→ 90
► Administration	→ 89

10.6.1 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu → Advanced setup → Sensor adjustment

► Sensor adjustment	
Installation direction	→ 77
► Zero point adjustment	
Zero point adjustment control	

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Installation direction	Set sign of flow direction to match the direction of the arrow on the sensor.	<ul style="list-style-type: none">Flow in arrow directionFlow against arrow direction	Flow in arrow direction
Zero point adjustment control	Start zero point adjustment.	<ul style="list-style-type: none">CancelBusyZero point adjust failureStart	Cancel

10.6.2 Configuring the pulse/frequency/switch output


The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

Configuring the pulse output

Navigation

"Setup" menu → Advanced setup → Pulse/frequency/switch output

Structure of the wizard for the pulse output

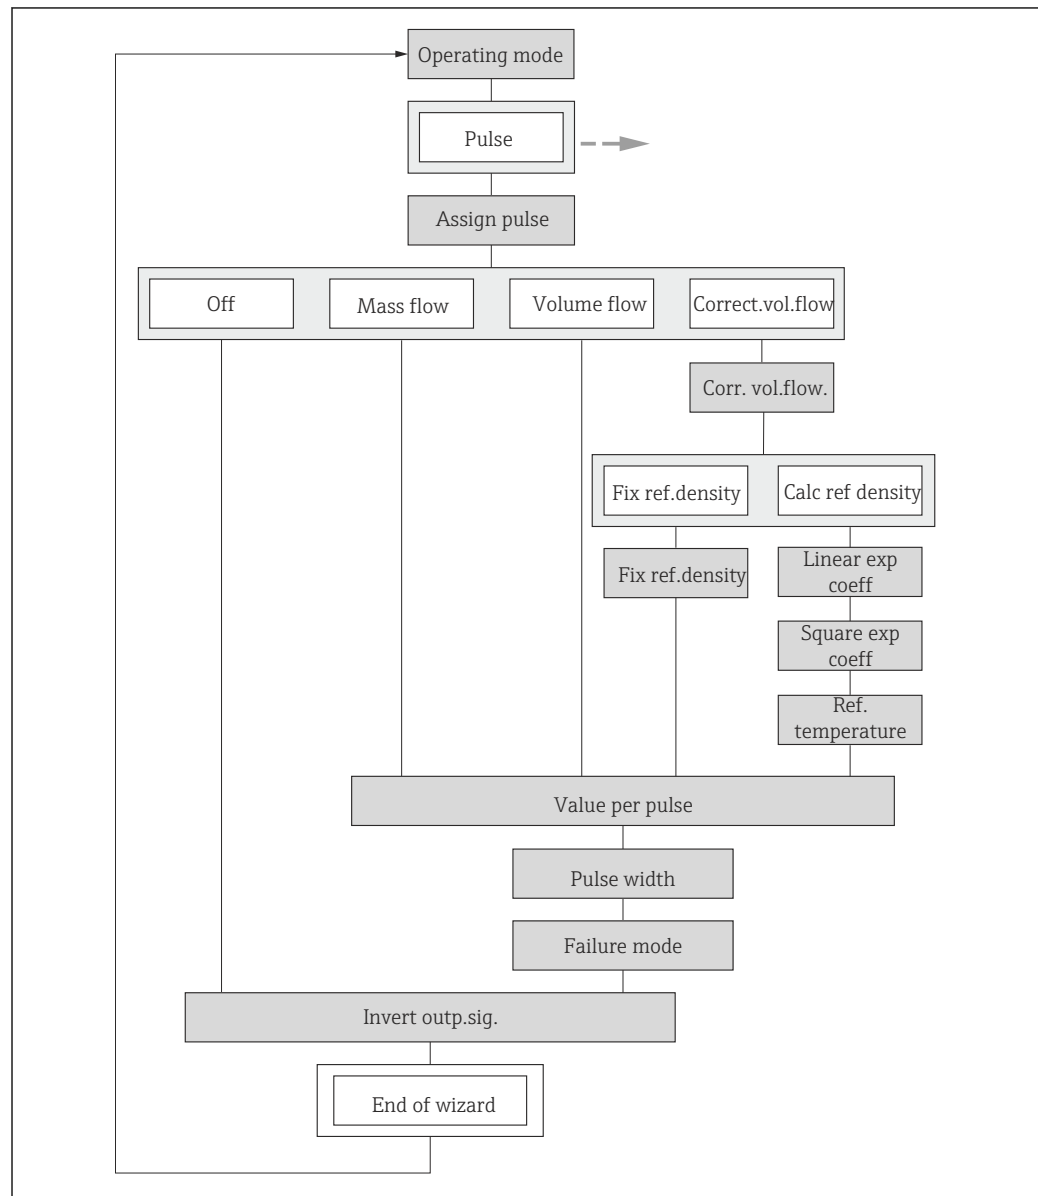

A0018173-EN

22 "Pulse/frequency/switch output" wizard in the "Advanced setup" submenu: "Operating mode" parameter "Pulse" option

Parameter overview with brief description


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	<ul style="list-style-type: none"> ■ Pulse ■ Frequency ■ Switch 	Pulse
Assign pulse output	In the Operating mode parameter the Pulse option is selected.	Select process variable for pulse output.	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow 	Off
Corrected volume flow calculation	–	Select reference density for calculating the corrected volume flow.	<ul style="list-style-type: none"> ■ Fixed reference density ■ Calculated reference density 	Calculated reference density
Fixed reference density	In the Corrected volume flow calculation parameter the Fixed reference density option is selected.	Enter fixed value for reference density.	Positive floating-point number	1 kg/Nl
Linear expansion coefficient	In the Corrected volume flow calculation parameter the Calculated reference density option is selected.	Enter linear, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0
Square expansion coefficient	–	For media with a non-linear expansion pattern: enter the quadratic, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0
Reference temperature	In the Corrected volume flow calculation parameter the Calculated reference density option is selected.	Enter reference temperature for calculating the reference density.	–273.15 to 99 999 °C	Country-specific: <ul style="list-style-type: none"> ■ +20 °C ■ +68 °F
Value per pulse	One of the following options is selected in the Assign pulse output parameter (→ 79): <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow 	Enter measured value at which a pulse is output.	Signed floating-point number	0
Pulse width	One of the following options is selected in the Assign pulse output parameter (→ 79): <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow 	Define time width of the output pulse.	5 to 2 000 ms	100 ms
Failure mode	One of the following options is selected in the Assign pulse output parameter (→ 79): <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow 	Define output behavior in alarm condition.	<ul style="list-style-type: none"> ■ Actual value ■ No pulses 	No pulses
Invert output signal	–	Invert the output signal.	<ul style="list-style-type: none"> ■ No ■ Yes 	No

Configuring the frequency output

Navigation

"Setup" menu → Advanced setup → Pulse/frequency/switch output

Structure of the wizard for the frequency output

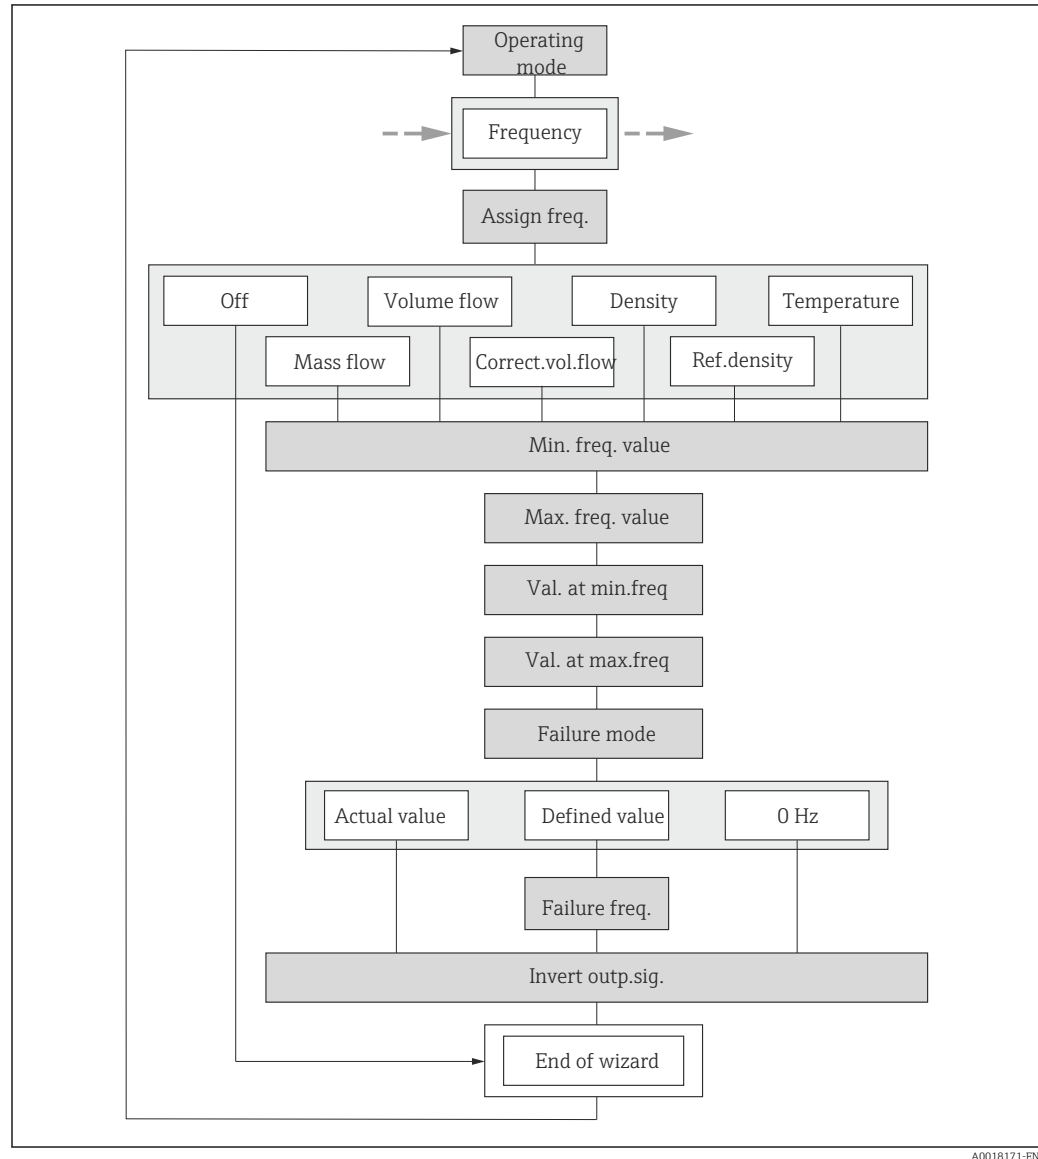

A0018171-EN

23 "Pulse/frequency/switch output" wizard in the "Advanced setup" submenu: "Operating mode" parameter "Frequency" option

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	<ul style="list-style-type: none"> ■ Pulse ■ Frequency ■ Switch 	Pulse
Assign frequency output	In the Operating mode parameter (→ 79) the Frequency option is selected.	Select process variable for frequency output.	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Carrier pipe temperature ■ Electronic temperature ■ Oscillation frequency ■ Oscillation amplitude ■ Oscillation damping ■ Signal asymmetry 	Off
Minimum frequency value	One of the following options is selected in the Assign frequency output parameter (→ 81): <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Carrier pipe temperature ■ Electronic temperature ■ Oscillation frequency ■ Oscillation amplitude ■ Oscillation damping ■ Signal asymmetry 	Enter minimum frequency.	0 to 1 000 Hz	0 Hz
Maximum frequency value	One of the following options is selected in the Assign frequency output parameter (→ 81): <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Carrier pipe temperature ■ Electronic temperature ■ Oscillation frequency ■ Oscillation amplitude ■ Oscillation damping ■ Signal asymmetry 	Enter maximum frequency.	0 to 1 000 Hz	1 000 Hz

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Measuring value at minimum frequency	One of the following options is selected in the Assign frequency output parameter (→ 81): <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Carrier pipe temperature ■ Electronic temperature ■ Oscillation frequency ■ Oscillation amplitude ■ Oscillation damping ■ Signal asymmetry 	Enter measured value for minimum frequency.	Signed floating-point number	Depends on country and nominal diameter
Measuring value at maximum frequency	One of the following options is selected in the Assign frequency output parameter (→ 81): <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Carrier pipe temperature ■ Electronic temperature ■ Oscillation frequency ■ Oscillation amplitude ■ Oscillation damping ■ Signal asymmetry 	Enter measured value for maximum frequency.	Signed floating-point number	Depends on country and nominal diameter
Failure mode	One of the following options is selected in the Assign frequency output parameter (→ 81): <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Carrier pipe temperature ■ Electronic temperature ■ Oscillation frequency ■ Oscillation amplitude ■ Oscillation damping ■ Signal asymmetry 	Define output behavior in alarm condition.	<ul style="list-style-type: none"> ■ Actual value ■ Defined value ■ 0 Hz 	0 Hz


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Failure frequency	One of the following options is selected in the Assign frequency output parameter (→ 81): <ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Carrier pipe temperature ■ Electronic temperature ■ Oscillation frequency ■ Oscillation amplitude ■ Oscillation damping ■ Signal asymmetry 	Enter frequency output value in alarm condition.	0.0 to 1250.0 Hz	0.0 Hz
Invert output signal	–	Invert the output signal.	<ul style="list-style-type: none"> ■ No ■ Yes 	No

Configuring the switch output

Navigation


"Setup" menu → Advanced setup → Pulse/frequency/switch output

Structure of the wizard for the switch output

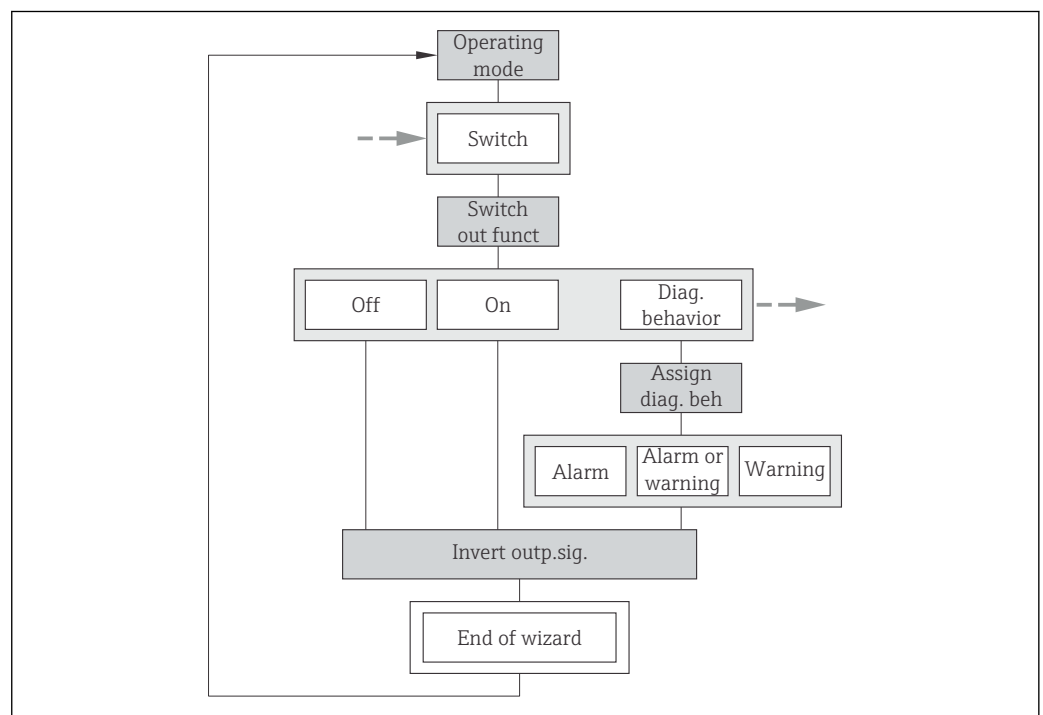

24 "Pulse/frequency/switch output" wizard in the "Advanced setup" submenu: "Operating mode" parameter "Switch" option (part 1)

A0018575-EN

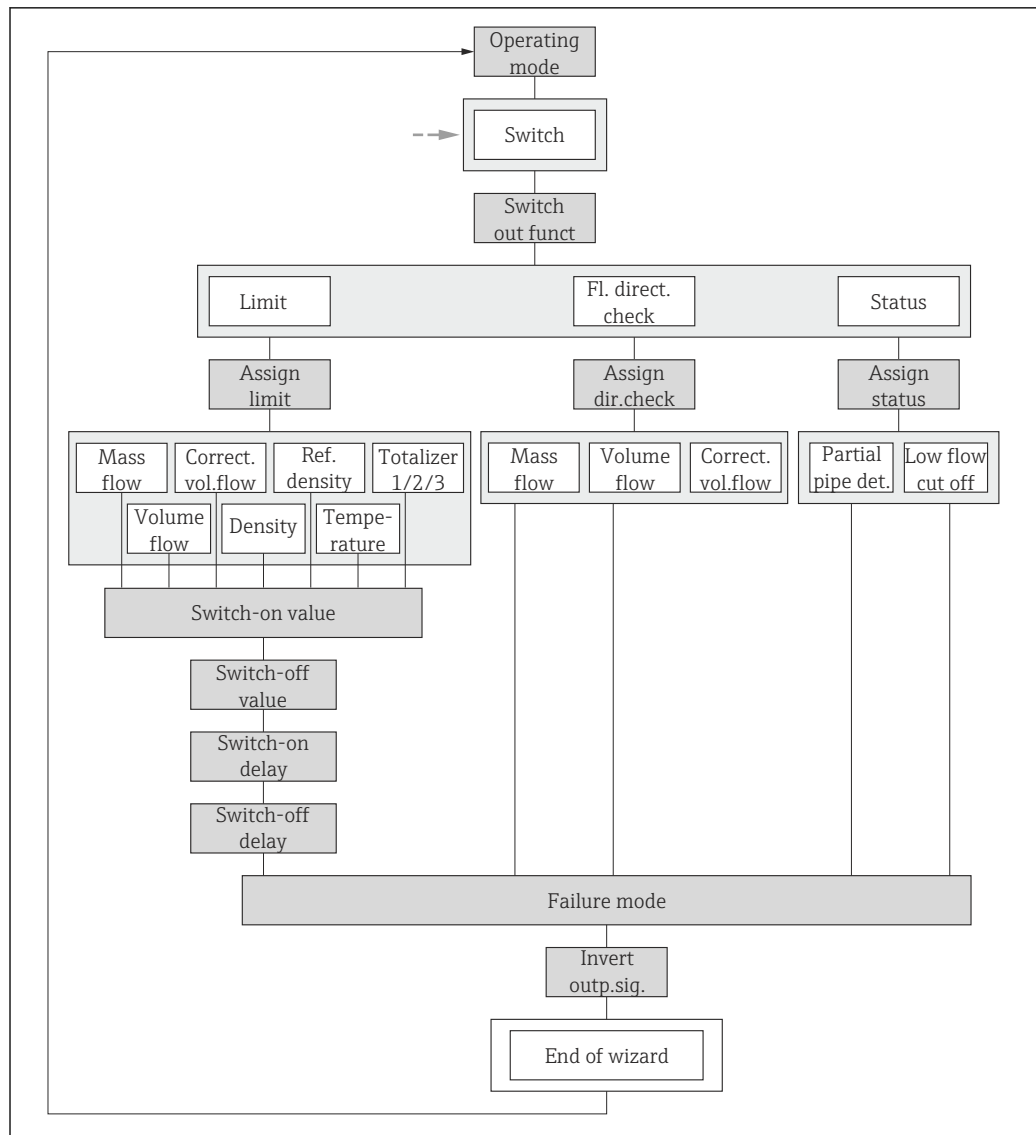

A0018172-EN

25 "Pulse/frequency/switch output" wizard in the "Advanced setup" submenu: "Operating mode" parameter "Switch" option (part 2)

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	<ul style="list-style-type: none"> ■ Pulse ■ Frequency ■ Switch 	Pulse
Switch output function	The Switch option is selected in the Operating mode parameter.	Select function for switch output.	<ul style="list-style-type: none"> ■ Off ■ On ■ Diagnostic behavior ■ Limit ■ Flow direction check ■ Status 	Off
Assign diagnostic behavior	The Diagnostic behavior option is selected in the Switch output function parameter.	Select diagnostic behavior for switch output.	<ul style="list-style-type: none"> ■ Alarm ■ Alarm or warning ■ Warning 	Alarm

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign limit	In the Switch output function parameter the Limit option is selected.	Select process variable for limit function.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 	Mass flow
Assign flow direction check	The Flow direction check option is selected in the Switch output function parameter.	Select process variable for flow direction monitoring.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow 	Mass flow
Assign status	The Status option is selected in the Switch output function parameter.	Select device status for switch output.	<ul style="list-style-type: none"> ■ Partially filled pipe detection ■ Low flow cut off ■ Digital output 3 	Partially filled pipe detection
Switch-on value	In the Switch output function parameter the Limit option is selected.	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 m³/h ■ 0 ft³/h
Switch-off value	In the Switch output function parameter the Limit option is selected.	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 m³/h ■ 0 ft³/h
Switch-on delay	The Limit option is selected in the Switch output function parameter.	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s
Switch-off delay	The Limit option is selected in the Switch output function parameter.	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Failure mode	–	Define output behavior in alarm condition.	<ul style="list-style-type: none"> ■ Actual status ■ Open ■ Closed 	Open
Invert output signal	–	Invert the output signal.	<ul style="list-style-type: none"> ■ No ■ Yes 	No

10.6.3 Configuring the totalizer

In the "**Totalizer 1 to 3**" submenu the individual totalizer can be configured.

Navigation

"Setup" menu → Advanced setup → Totalizer 1 to 3

▶ Totalizer 1 to 3

Assign process variable

Unit totalizer

Totalizer operation mode

Failure mode

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection	Factory setting
Assign process variable	–	Select process variable for totalizer.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow 	Mass flow
Unit totalizer	One of the following options is selected in the Assign process variable parameter: <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow 	Select the unit for the process variable of the totalizer.	Unit choose list	Country-specific: <ul style="list-style-type: none"> ■ kg ■ lb
Control Totalizer	One of the following options is selected in the Assign process variable parameter: <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow 	Control totalizer value.	<ul style="list-style-type: none"> ■ Totalize ■ Reset + hold ■ Preset + hold 	Totalize
Totalizer operation mode	One of the following options is selected in the Assign process variable parameter: <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow 	Select totalizer calculation mode.	<ul style="list-style-type: none"> ■ Net flow total ■ Forward flow total ■ Reverse flow total ■ Last valid value 	Net flow total
Failure mode	One of the following options is selected in the Assign process variable parameter: <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow 	Define the totalizer behavior in the event of a device alarm.	<ul style="list-style-type: none"> ■ Stop ■ Actual value ■ Last valid value 	Actual value

10.6.4 Carrying out additional display configurations

In the **Display** submenu you can set all the parameters associated with the configuration of the local display.

Navigation

"Setup" menu → Advanced setup → Display

► Display

Format display

Value 1 display

0% bargraph value 1

100% bargraph value 1

Decimal places 1

Value 2 display

Decimal places 2

Value 3 display

0% bargraph value 3

100% bargraph value 3

Decimal places 3

Value 4 display

Decimal places 4

Language

Display interval

Display damping

Header


Header text

Separator

Backlight

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul style="list-style-type: none"> ■ 1 value, max. size ■ 1 bargraph + 1 value ■ 2 values ■ 1 value large + 2 values ■ 4 values 	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 m³/h ■ 0 ft³/h
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the Value 1 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None
Decimal places 2	A measured value is specified in the Value 2 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None
0% bargraph value 3	An option was selected in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	0
100% bargraph value 3	An option was selected in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 3	A measured value is specified in the Value 3 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None
Decimal places 4	A measured value is specified in the Value 4 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Language	A local display is provided.	Set display language.	<ul style="list-style-type: none"> ■ English * ■ Deutsch * ■ Français * ■ Español * ■ Italiano * ■ Nederlands * ■ Portuguesa * ■ Polski * ■ русский язык (Russian) * ■ Svenska * ■ Türkçe * ■ 中文 (Chinese) * ■ 日本語 (Japanese) * ■ 한국어 (Korean) * ■ Bahasa Indonesia * ■ tiếng Việt (Vietnamese) * ■ čeština (Czech) * 	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	A local display is provided.	Select header contents on local display.	<ul style="list-style-type: none"> ■ Device tag ■ Free text 	Device tag
Header text	The Free text option is selected in the Header parameter.	Enter display header text.	Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)	-----
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	<ul style="list-style-type: none"> ■ . (point) ■ , (comma) 	. (point)
Backlight	–	Switch the local display backlight on and off.  Only for device version with local display SD03 (touch control)	<ul style="list-style-type: none"> ■ Disable ■ Enable 	Disable

* Visibility depends on order options or device settings

10.6.5 Administration configuration

The **Administration** submenu contains administrative parameters.

Navigation

"Setup" menu → Advanced setup → Administration

▶ Administration

Define access code

Device reset

Parameter overview with brief description

Parameter	Description	User entry / Selection	Factory setting
Define access code	Restrict write-access to parameters to protect the configuration of the device against unintentional changes via the local display.	0 to 9 999	0
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	<ul style="list-style-type: none"> ■ Cancel ■ To fieldbus defaults * ■ To factory defaults ■ To delivery settings ■ Restart device 	Cancel

* Visibility depends on communication


10.7 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration.

You can do so using the **Configuration management** parameter and the related options found in the **Configuration backup display** submenu.

Navigation

"Setup" menu → Advanced setup → Configuration backup display

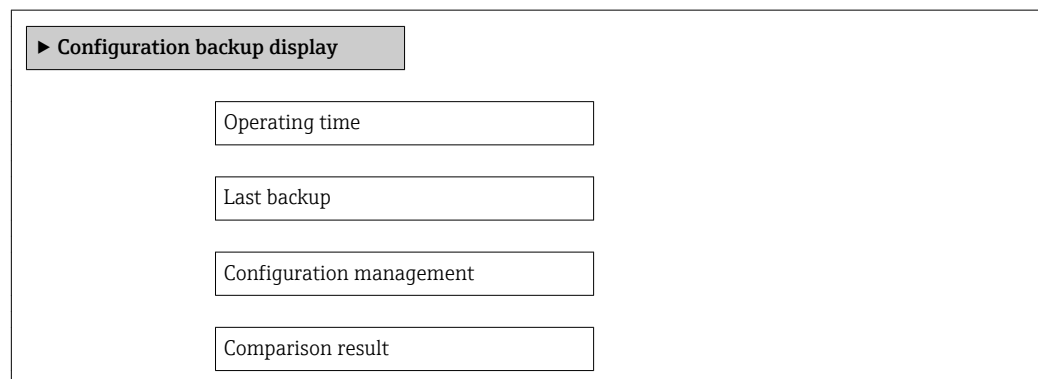

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface / Selection	Factory setting
Operating time	–	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	–
Last backup	A local display is provided.	Indicates when the last data backup was saved to the display module.	Days (d), hours (h), minutes (m) and seconds (s)	–

Parameter	Prerequisite	Description	User interface / Selection	Factory setting
Configuration management	A local display is provided.	Select action for managing the device data in the display module.	<ul style="list-style-type: none"> ■ Cancel ■ Execute backup ■ Restore ■ Duplicate ■ Compare ■ Clear backup data 	Cancel
Comparison result	A local display is provided.	Comparison between present device data and display backup.	<ul style="list-style-type: none"> ■ Settings identical ■ Settings not identical ■ No backup available ■ Backup settings corrupt ■ Check not done ■ Dataset incompatible 	Check not done

10.7.1 Function scope of the "Configuration management" parameter

Options	Description
Execute backup	The current device configuration is backed up from the integrated HistoROM to the device's display module. The backup copy includes the transmitter data of the device.
Restore	The last backup copy of the device configuration is restored from the display module to the device's integrated HistoROM. The backup copy includes the transmitter data of the device.
Duplicate	The transmitter configuration from another device is duplicated to the device using the display module.
Compare	The device configuration saved in the display module is compared with the current device configuration of the integrated HistoROM.
Clear backup data	The backup copy of the device configuration is deleted from the display module of the device.



Integrated HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.



While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

10.8 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

Navigation

"Diagnostics" menu → Simulation


▶ Simulation

Assign simulation process variable

Value process variable

Frequency simulation
Frequency value
Pulse simulation
Pulse value
Switch output simulation
Switch status
Simulation device alarm
Diagnostic event category
Simulation diagnostic event

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign simulation process variable	–	Select a process variable for the simulation process that is activated.	<ul style="list-style-type: none"> Off Mass flow Volume flow Corrected volume flow Density Reference density Temperature 	Off
Value process variable	One of the following options is selected in the Assign simulation process variable parameter (→ 92): <ul style="list-style-type: none"> Volume flow Mass flow Corrected volume flow Density Reference density Temperature 	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Frequency simulation	The Frequency option is selected in the Operating mode parameter.	Switch the simulation of the frequency output on and off.	<ul style="list-style-type: none"> Off On 	Off
Frequency value	The On option is selected in the Frequency simulation parameter.	Enter the frequency value for the simulation.	0.0 to 1 250.0 Hz	0.0 Hz
Pulse simulation	The Pulse option is selected in the Operating mode parameter.	Set and switch off the pulse output simulation.  For Fixed value option: Pulse width parameter (→ 79) defines the pulse width of the pulses output.	<ul style="list-style-type: none"> Off Fixed value Down-counting value 	Off

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Pulse value	The Down-counting value option is selected in the Pulse simulation parameter (→ 92).	Enter the number of pulses for simulation.	0 to 65535	0
Switch output simulation	The Switch option is selected in the Operating mode parameter.	Switch the simulation of the switch output on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Switch status	The On option is selected in the Switch output simulation parameter (→ 93).	Select the status of the status output for the simulation.	<ul style="list-style-type: none"> ■ Open ■ Closed 	Open
Simulation device alarm	–	Switch the device alarm on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Diagnostic event category	–	Select a diagnostic event category.	<ul style="list-style-type: none"> ■ Sensor ■ Electronics ■ Configuration ■ Process 	Process
Simulation diagnostic event	–	Select a diagnostic event to simulate this event.	<ul style="list-style-type: none"> ■ Off ■ Diagnostic event picklist (depends on the category selected) 	Off

10.9 Protecting settings from unauthorized access

The following options exist for protecting the configuration of the measuring device from unintentional modification after commissioning:

- Write protection via access code
- Write protection via write protection switch
- Write protection via keypad lock → 50

10.9.1 Write protection via access code

With the customer-specific access code, the parameters for the measuring device configuration are write-protected and their values can no longer be changed via local operation.

Navigation


"Setup" menu → Advanced setup → Administration → Define access code

▶ Define access code

Define access code

Confirm access code

Defining the access code via local display


1. Navigate to the **Enter access code** parameter.
2. Max. Define a max. 4-digit numeric code as an access code.
3. Enter the access code again to confirm the code.
 - ↳ The -symbol appears in front of all write-protected parameters.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.

- If write access is activated via access code, it can be also be deactivated only via the access code → 50.
- The user role with which the user is currently logged on via the local display → 50 is indicated by the **Access status display** parameter. Navigation path: "Operation" menu → Access status display

Parameters which can always be modified via the local display

Certain parameters that do not affect the measurement are excepted from write protection via the local display. Despite the defined access code, these parameters can always be modified even if the other parameters are locked.

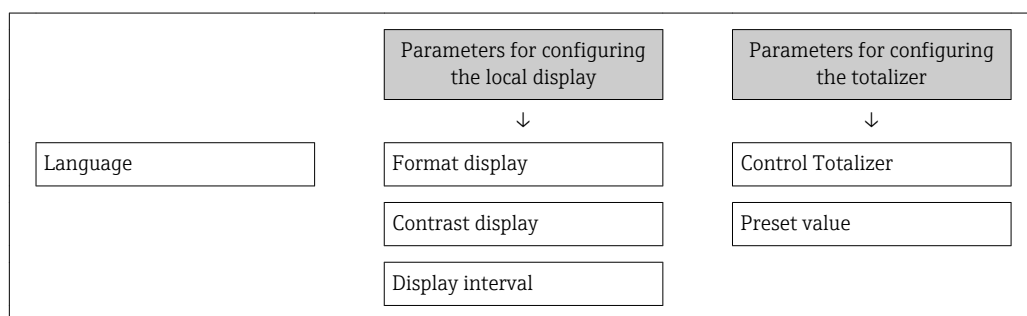


10.9.2 Write protection via write protection switch

Unlike write protection via a user-specific access code, this allows write access to the entire operating menu - other than the **"Contrast display" parameter** - to be locked.

The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via PROFIBUS PA protocol

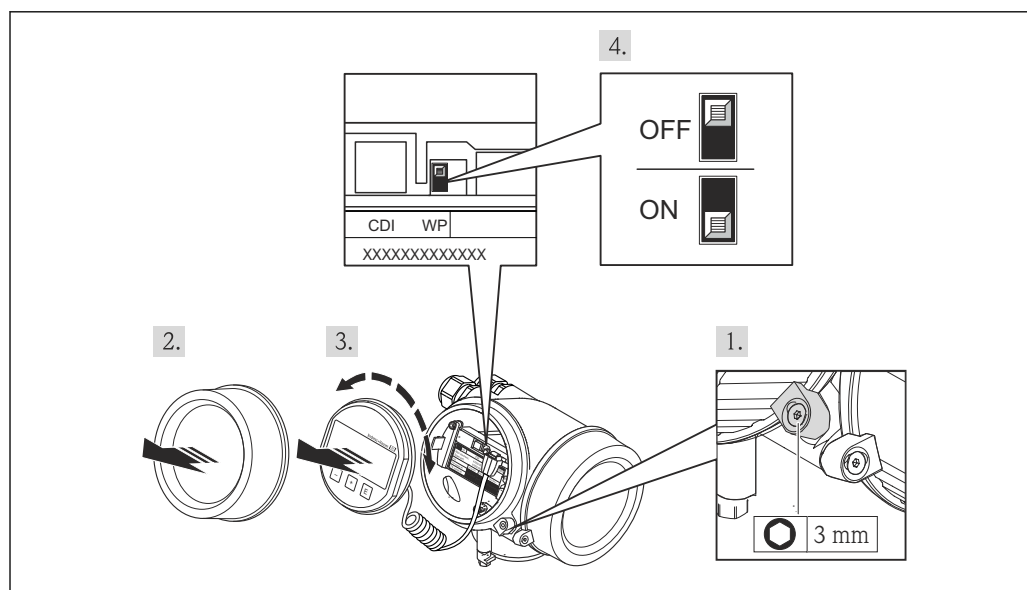


A0025794

1. Loosen the securing clamp.
2. Unscrew the electronics compartment cover.


3. Pull out the display module with a gentle rotational movement. To make it easier to access the lock switch, attach the display module to the edge of the electronics compartment.


↳ Display module is attached to the edge of the electronics compartment.

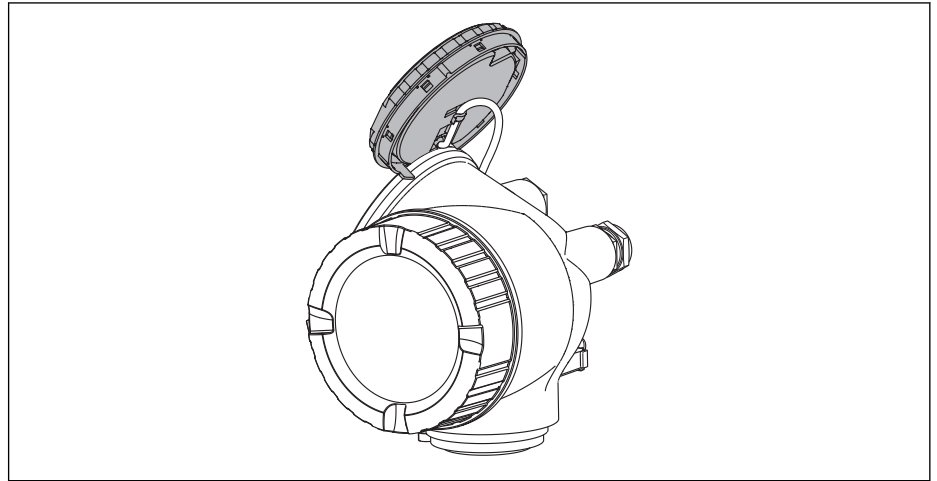


A0013909

 4. Setting the write protection switch (WP) on the main electronics module to the **ON** position enables hardware write protection. Setting the write protection switch (WP) on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.

↳ If hardware write protection is enabled, the **Locking status** parameter displays the **Hardware locked** option → 96. In addition, on the local display the -symbol appears in front of the parameters in the header of the operational display and in the navigation view.

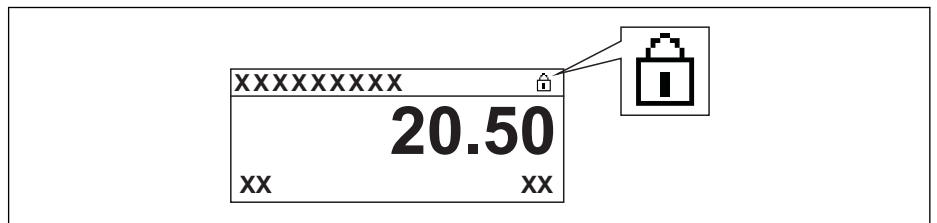

A0015870

 If hardware write protection is disabled, no option is displayed in the **Locking status** parameter → 96. On the local display, the -symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

5. Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Reverse the removal procedure to reassemble the transmitter.

11 Operation


11.1 Reading device locking status

The write protection types that are currently active can be determined using the **Locking status** parameter.

Navigation



"Operation" menu → Locking status

Function scope of "Locking status" parameter


Options	Description
None	The access status displayed in " Access status display " parameter applies →  50. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the main electronics module. This prevents write access to the parameters .
Temporarily locked	Due to internal processing in the device (e.g. up-/downloading of data, reset), write access to the parameters is blocked for a short time. Once the internal processing has been completed, the parameters can be changed once again.

11.2 Adjusting the operating language

Information →  62

 For information on the operating languages supported by the measuring device
→  155

11.3 Configuring the display

- Basic settings for local display →  69
- Advanced settings for local display →  87

11.4 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

11.4.1 Process variables

The **Process variables** submenu contains all the parameters needed to display the current measured values for every process variable.

Navigation

"Diagnostics" menu → Measured values → Process variables

► Process variables

Mass flow

Volume flow

Corrected volume flow

Density

Reference density

Temperature

Parameter overview with brief description

Parameter	Description	User interface
Mass flow	Displays the mass flow currently measured. <i>Dependency</i> The unit is taken from the Mass flow unit parameter	Signed floating-point number
Volume flow	Displays the volume flow currently measured. <i>Dependency</i> The unit is taken from the Volume flow unit parameter	Signed floating-point number
Corrected volume flow	Displays the corrected volume flow currently calculated. <i>Dependency</i> The unit is taken from the Corrected volume flow unit parameter	Signed floating-point number
Density	Displays the density or specific density currently measured. <i>Dependency</i> The unit is taken from the Density unit parameter	Positive floating-point number
Reference density	Displays the density at the reference temperature. <i>Dependency</i> The unit is taken from the Reference density unit parameter	Positive floating-point number
Temperature	Displays the temperature currently measured. <i>Dependency</i> The unit is taken from the Temperature unit parameter	Positive floating-point number

11.4.2 Totalizer

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu → Measured values → Totalizer 1 to 3

► Totalizer 1 to 3

Assign process variable

Totalizer value 1 to 3

Totalizer status 1 to 3

Totalizer status (Hex) 1 to 3

Parameter overview with brief description


Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign process variable	–	Select process variable for totalizer.	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow 	Mass flow
Totalizer value 1 to 3	In the Assign process variable parameter one of the following options is selected: <ul style="list-style-type: none"> ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Total mass flow ■ Condensate mass flow ■ Energy flow ■ Heat flow difference 	Displays the current totalizer counter value.	Signed floating-point number	0 kg
Totalizer status 1 to 3	–	Displays the current totalizer status.	<ul style="list-style-type: none"> ■ Good ■ Uncertain ■ Bad 	Good
Totalizer status (Hex) 1 to 3	–	Displays the current status value (hex) of the totalizer.	0 to 0xFF	0x80

11.4.3 Output values

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.

Navigation

"Diagnostics" menu → Measured values → Output values

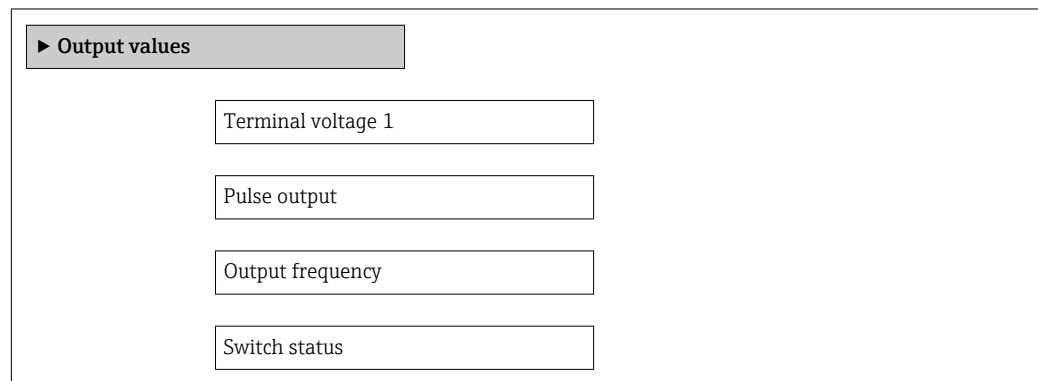

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface	Factory setting
Terminal voltage 1	–	Displays the current terminal voltage that is applied at the current output.	0.0 to 50.0 V	–
Pulse output	In the Operating mode parameter the Pulse option is selected.	Displays the pulse frequency currently output.	Positive floating-point number	0 Hz

Parameter	Prerequisite	Description	User interface	Factory setting
Output frequency	The Frequency option is selected in the Operating mode parameter.	Displays the value currently measured for the frequency output.	0 to 1250 Hz	–
Switch status	The Switch option is selected in the Operating mode parameter.	Displays the current switch output status.	<ul style="list-style-type: none"> ■ Open ■ Closed 	–

11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu
- Advanced settings using the **Advanced setup** submenu

11.6 Performing a totalizer reset

In the **Operation** submenu the totalizers are reset:
Control Totalizer

Function scope of the "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value 1 to 3 parameter.
Stop totalizing option	Totalizing is stopped.

Navigation

"Operation" menu → Operation

► Totalizer handling

Control Totalizer 1 to 3



Preset value 1 to 3

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Control Totalizer	One of the following options is selected in the Assign process variable parameter: <ul style="list-style-type: none">■ Volume flow■ Mass flow■ Corrected volume flow	Control totalizer value.	<ul style="list-style-type: none">■ Totalize■ Reset + hold■ Preset + hold	Totalize
Preset value	In the Assign process variable parameter one of the following options is selected: <ul style="list-style-type: none">■ Volume flow■ Mass flow■ Corrected volume flow■ Total mass flow■ Condensate mass flow■ Energy flow■ Heat flow difference	Specify start value for totalizer.	Signed floating-point number	0 kg
Reset all totalizers	–	Reset all totalizers to 0 and start.	<ul style="list-style-type: none">■ Cancel■ Reset + totalize	Cancel


11.7 Showing data logging


The **Extended HistoROM** application package must be enabled in the device (order option) for the **Data logging** submenu to appear. This contains all the parameters for the measured value history.

 The measured value history is also accessible via the FieldCare plant asset management tool →  53.


Function scope

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Display of the measured value trend for each logging channel in the form of a chart

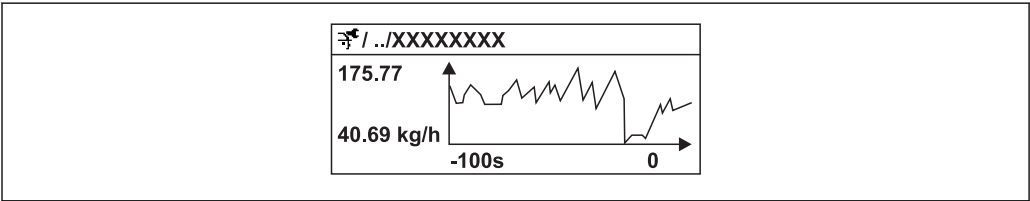

 26 Chart of a measured value trend

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

 If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

Navigation
"Diagnostics" menu → Data logging

"Data logging" submenu

► Data logging

Assign channel 1

Assign channel 2

Assign channel 3

Assign channel 4

Logging interval

Clear logging data




► Display channel 1

► Display channel 2

► Display channel 3

► Display channel 4

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign channel 1 to 4	<p>The Extended HistoROM application package is available.</p> <p> The software options currently enabled are displayed in the Software option overview parameter.</p>	Assign process variable to logging channel.	<ul style="list-style-type: none"> ■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Carrier pipe temperature ■ Electronic temperature ■ Oscillation frequency ■ Oscillation amplitude ■ Oscillation damping ■ Signal asymmetry 	Off
Logging interval	<p>The Extended HistoROM application package is available.</p> <p> The software options currently enabled are displayed in the Software option overview parameter.</p>	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	1.0 to 3 600.0 s	10.0 s
Clear logging data	<p>The Extended HistoROM application package is available.</p> <p> The software options currently enabled are displayed in the Software option overview parameter.</p>	Clear the entire logging data.	<ul style="list-style-type: none"> ■ Cancel ■ Clear data 	Cancel

12 Diagnostics and troubleshooting

12.1 General troubleshooting




For local display

Problem	Possible causes	Remedial action
Local display dark and no output signals	Supply voltage does not match that specified on the nameplate.	Apply the correct supply voltage .
Local display dark and no output signals	Supply voltage has incorrect polarity.	Reverse polarity of supply voltage.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective.	Order spare part → 133.
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	<ul style="list-style-type: none"> Set the display brighter by simultaneously pressing \boxplus + \boxminus. Set the display darker by simultaneously pressing \boxminus + \boxplus.
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part → 133.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures → 112
Text on local display appears in a foreign language and cannot be understood.	Incorrect operating language is configured.	<ol style="list-style-type: none"> Press \boxminus + \boxplus for 2 s ("home position"). Press \boxminus. Set the desired language in the Language parameter.
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	<ul style="list-style-type: none"> Check the cable and the connector between the main electronics module and display module. Order spare part → 133.

For output signals

Problem	Possible causes	Remedial action
Signal output outside the valid range	Main electronics module is defective.	Order spare part → 133.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Configuration error	Check and correct parameter configuration.
Device measures incorrectly.	Configuration error or device is operated outside the application.	<ol style="list-style-type: none"> Check and correct parameter configuration. Observe limit values specified in the "Technical Data".


For access

Problem	Possible causes	Remedial action
No write access to parameters	Hardware write protection enabled	Set the write protection switch on the main electronics module to the OFF position .
No write access to parameters	Current user role has limited access authorization	1. Check user role →  50. 2. Enter correct customer-specific access code →  50.
No connection via service interface	Incorrect configuration of USB interface on PC or driver not installed correctly.	Observe the documentation for the Commubox.  FXA291: Document "Technical Information" TI00405C

12.2 Diagnostic information on local display

12.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

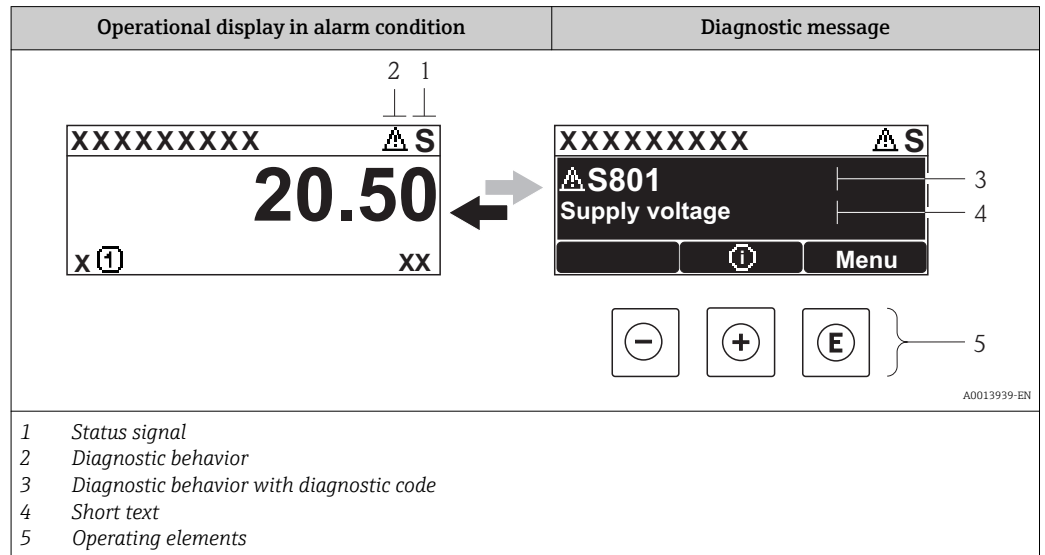

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

- i** Other diagnostic events that have occurred can be called up in the **Diagnostics** menu:
- Via parameters → 126
 - Via submenus → 126



Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

- i** The status signals are categorized according to VDI/VDE 2650 and NAMUR Recommendation NE 107: F = Failure, C = Function Check, S = Out of Specification, M = Maintenance Required


Symbol	Meaning
F A0013956	Failure A device error has occurred. The measured value is no longer valid.
C A0013959	Function check The device is in service mode (e.g. during a simulation).
S A0013958	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
M A0013957	Maintenance required Maintenance is required. The measured value remains valid.

Diagnostic behavior



Symbol	Meaning
 <small>A0013961</small>	Alarm <ul style="list-style-type: none">■ Measurement is interrupted.■ Signal outputs and totalizers assume the defined alarm condition.■ A diagnostic message is generated.■ For local display with touch control: the background lighting changes to red.
 <small>A0013962</small>	Warning <p>Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.</p>

Diagnostic information

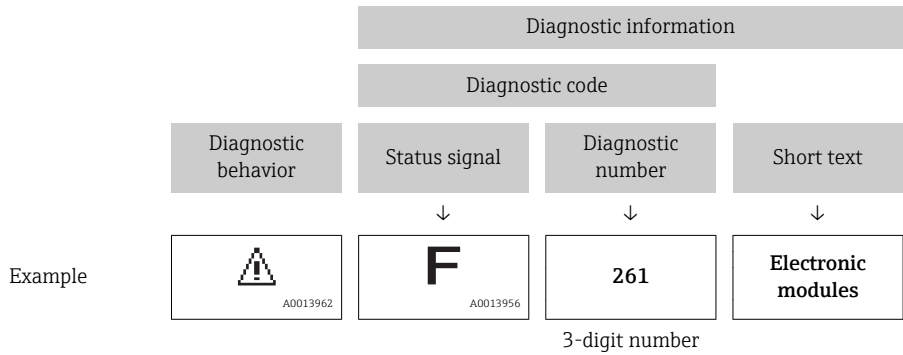
The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.



Operating elements

Key	Meaning
 <small>A0013970</small>	Plus key <p><i>In a menu, submenu</i> Opens the message about the remedial measures.</p>
 <small>A0013952</small>	Enter key <p><i>In a menu, submenu</i> Opens the operating menu.</p>

12.2.2 Calling up remedial measures

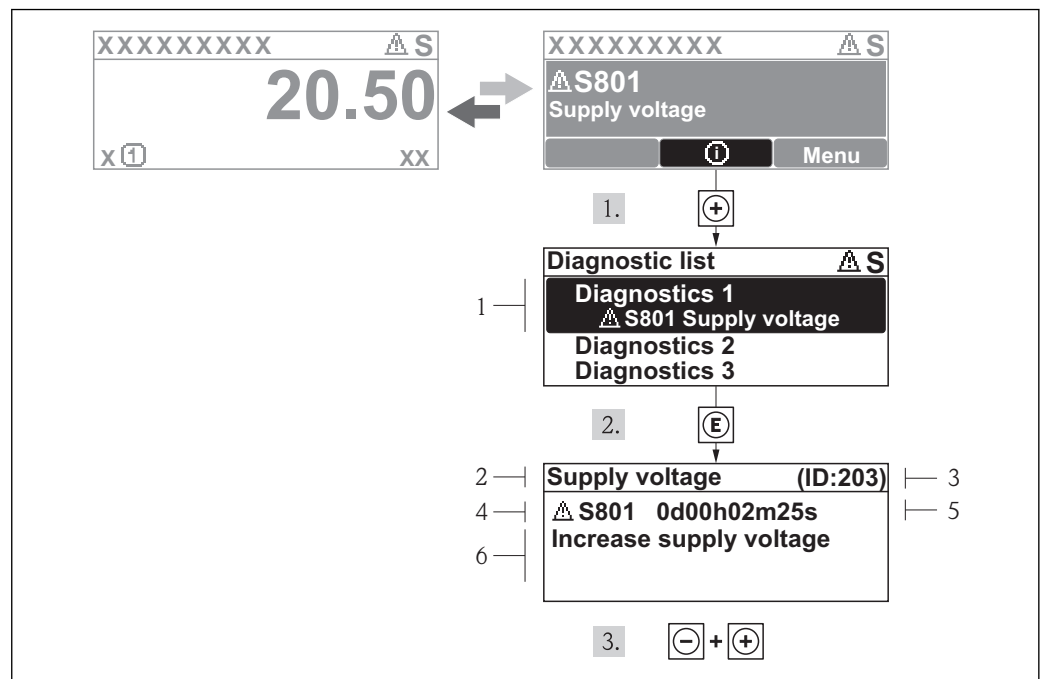

27 Message for remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

1. Press **+** (**i** symbol).
 ↳ The **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with **+** or **-** and press **E**.
 ↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press **-** + **+** simultaneously.
 ↳ The message for the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or the **Previous diagnostics** parameter.

1. Press **E**.
 ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press **-** + **+** simultaneously.
 ↳ The message for the remedial measures closes.

12.3 Diagnostic information in FieldCare

12.3.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

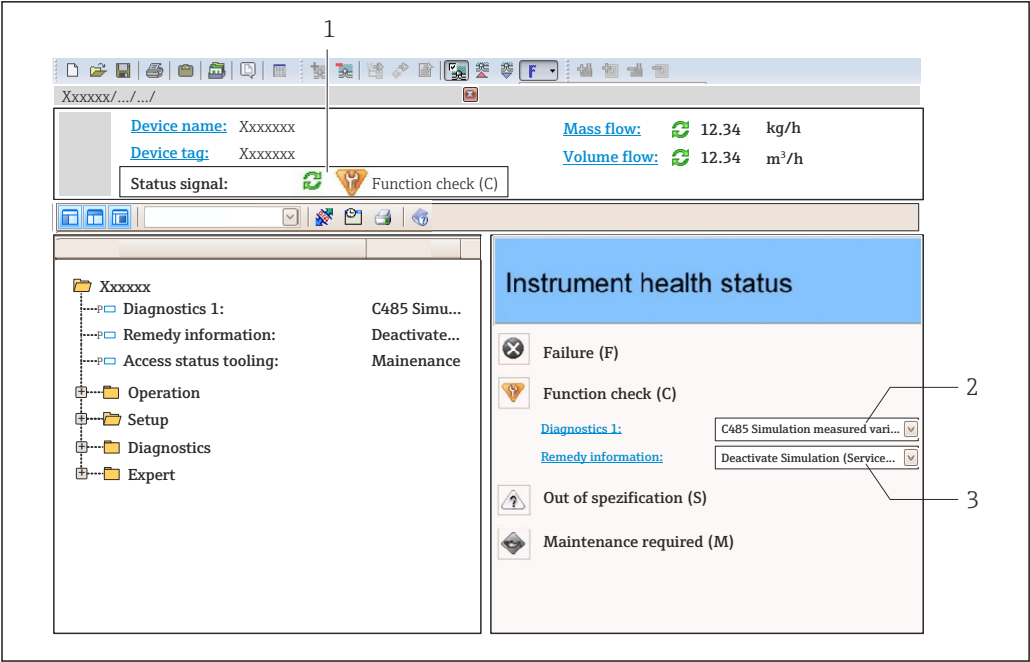


- 1 Status area with status signal → 105
- 2 Diagnostic information → 106
- 3 Remedial measures with Service ID

- i** Furthermore, diagnostic events that have occurred can be viewed in the **Diagnostics** menu:
- Via parameters → 126
 - Via submenu → 126

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

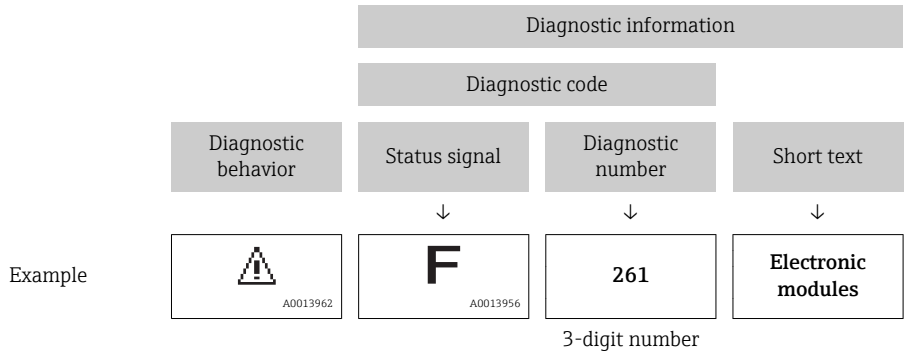

12.3.2 Calling up remedy information

- Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:
- On the home page
Remedy information is displayed in a separate field below the diagnostics information.
 - In the **Diagnostics** menu
Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

1. Call up the desired parameter.
2. On the right in the working area, mouse over the parameter.
 - ↳ A tool tip with remedy information for the diagnostic event appears.

12.4 Adapting the diagnostic information


12.4.1 Adapting the measured value and device status

Measured value status

Each diagnostic number is assigned a specific measured value status at the factory. The user can change this assignment for specific diagnostic numbers via the **Var. status xx** parameter.

Navigation path

"Expert" menu → System → Diagnostic handling → Condensed status → Assign behavior of measured value status xx

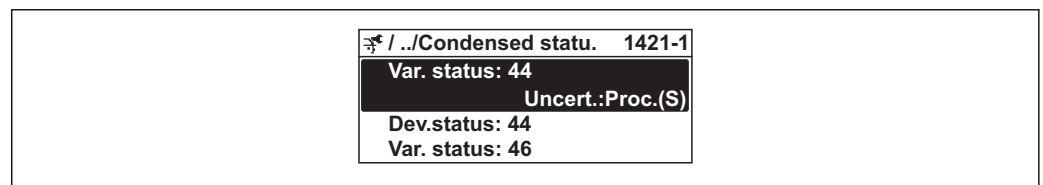

A0019175-EN


Quality	Substatus	Status (hex)	Event category	Event class
GOOD	None	0x80	–	–
GOOD	Maintenance required	0xA4	M	Warning
GOOD	Maintenance demanded	0xA8	M	Warning
GOOD	Function check	0xBC	–	–
BAD	Maintenance alarm	0x24	F	Alarm
BAD	Process related, no maintenance	0x28	F	Alarm
BAD	Function check	0x3C	C	Warning
UNCERTAIN	Maintenance demanded	0x68	M	Warning
UNCERTAIN	Process related, no maintenance	0x78	S	Warning

Device status

Each diagnostic number is assigned a specific device status at the factory. The user can change this assignment for specific diagnostic numbers via the **Dev. status xx** parameter.

Navigation path

"Expert" menu → System → Diagnostic handling → Condensed status → Assign behavior of device status xx

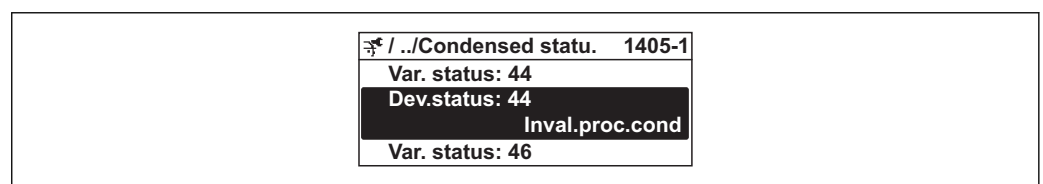

A0019186-EN


Mnemonic	Octet	Bit
Maintenance required	2	5
Maintenance alarm	3	0
Maintenance demanded	3	1
Function check	3	2
Invalid process conditions	3	3

12.4.2 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for certain diagnostic information in the **Diagnostic behavior** submenu.

 Diagnostic behavior in accordance with Specification PROFIBUS Profile 3.02, Condensed Status.

"Expert" menu → System → Diagnostic handling → Diagnostic behavior

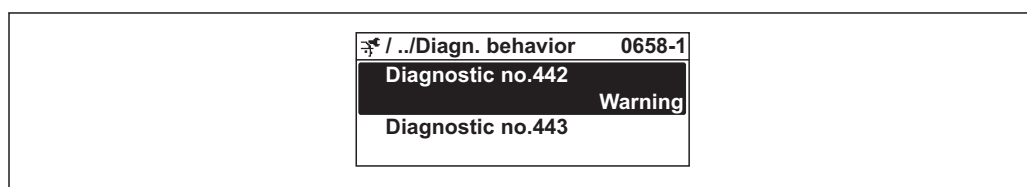

A0019179-EN


Available diagnostic behaviors

The following diagnostic behaviors can be assigned:

Diagnostic behavior	Description
Alarm	Measurement is interrupted. The totalizers assume the defined alarm condition. A diagnostic message is generated. For local display with touch control: the background lighting changes to red.
Warning	Measurement is resumed. Measured value output via PROFIBUS and totalizers are not affected. A diagnostics message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is entered in the Event logbook (events list) submenu only and is not displayed in alternation with the measured value display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

Displaying the measured value status

If the Analog Input, Digital Input and Totalizer function blocks are configured for cyclic data transmission, the device status is coded as per PROFIBUS Profile Specification 3.02 and transmitted along with the measured value to the PROFIBUS Master (Class 1) via the coding byte (byte 5). The coding byte is split into three segments: Quality, Quality Substatus and Limits.

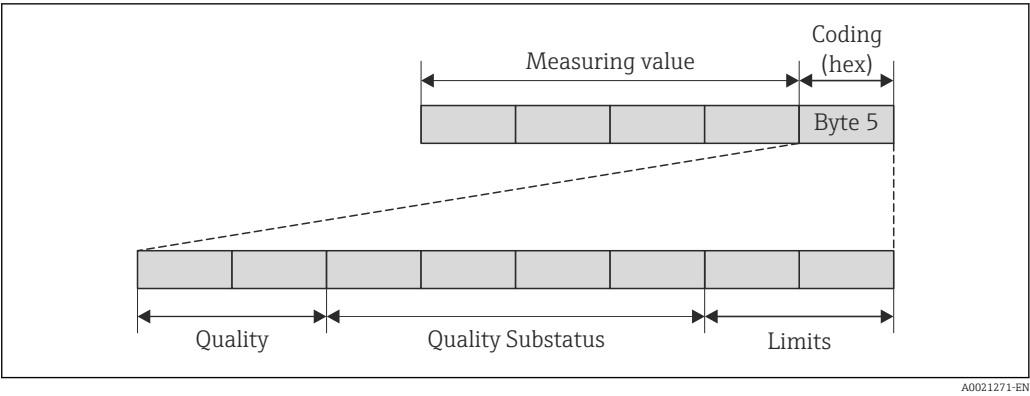

28 Structure of the coding byte

A0021271-EN

The content of the coding byte depends on the configured failsafe mode in the particular function block. Depending on which failsafe mode has been configured, status information in accordance with PROFIBUS Profile Specification 3.02 is transmitted to the PROFIBUS Master (Class 1) via the coding byte.

Determining the measured value status and device status via the diagnostic behavior

When the diagnostic behavior is assigned, this also changes the measured value status and device status for the diagnostic information. The measured value status and device status depend on the choice of diagnostic behavior and the group in which the diagnostic information is located. The measured value status and device status are firmly assigned to the particular diagnostic behavior and cannot be changed individually.

The diagnostic information is grouped as follows:

- Diagnostic information pertaining to the sensor: diagnostic number 000 to 199
→ 111
- Diagnostic information pertaining to the electronics: diagnostic number 200 to 399
→ 112
- Diagnostic information pertaining to the configuration: diagnostic number 400 to 599
→ 112
- Diagnostic information pertaining to the process: diagnostic number 800 to 999
→ 112

Depending on the group in which diagnostic information is located, the following measured value status and device status are firmly assigned to the particular diagnostic behavior:

Diagnostic information pertaining to the sensor (diagnostic no.: 000 to 199)

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Maintenance alarm	0x24 to 0x27	F (Failure)	Maintenance alarm
Warning	GOOD	Maintenance demanded	0xA8 to 0xAB	M (Maintenance)	Maintenance demanded
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

Diagnostic information pertaining to the electronics (diagnostic no.: 200 to 399)

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Maintenance alarm	0x24 to 0x27	F (Failure)	Maintenance alarm
Warning					
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					


Diagnostic information pertaining to the configuration (diagnostic no.: 400 to 599)



Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Process related	0x28 to 0x2B	F (Failure)	Invalid process condition
Warning	UNCERTAIN	Process related	0x78 to 0x7B	S (Out of specification)	Invalid process condition
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

Diagnostic information pertaining to the process (diagnostic no.: 800 to 999)

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnostics (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Process related	0x28 to 0x2B	F (Failure)	Invalid process condition
Warning	UNCERTAIN	Process related	0x78 to 0x7B	S (Out of specification)	Invalid process condition
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

12.5 Overview of diagnostic information

 The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.

 In the case of some items of diagnostic information, the diagnostic behavior can be changed. Change the diagnostic information →  109

12.5.1 Diagnostic of sensor

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
022	Sensor temperature		1. Change main electronic module 2. Change sensor	<ul style="list-style-type: none">▪ Density▪ Mass flow▪ Reference density▪ Corrected volume flow▪ Temperature▪ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
046	Sensor limit exceeded		1. Inspect sensor 2. Check process condition	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Volume flow
	Measured value status [from the factory] ¹⁾			
	Quality	UNCERTAIN		
	Quality Substatus	Process Related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S (Out of specification)		
	Diagnostic behavior	Warning		

1) Diagnostic status is changeable.

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
062	Sensor connection		1. Change main electronic module 2. Change sensor	<div><div>■</div>Mass flow</div> <div><div>■</div>Corrected volume flow</div> <div><div>■</div>Volume flow</div>
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
082	Data storage		1. Change main electronic module 2. Change sensor	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
083	Memory content		1. Restart device 2. Restore S-Dat data 3. Change sensor	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
140	Sensor signal		1. Check or change main electronics 2. Change sensor	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Temperature
	Measured value status [from the factory] ¹⁾			
	Quality	UNCERTAIN		
	Quality Substatus	Process Related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S (Out of specification)		
	Diagnostic behavior	Warning		

1) Diagnostic status is changeable.

12.5.2 Diagnostic of electronic

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
242	Software incompatible		1. Check software 2. Flash or change main electronics module	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
252	Modules incompatible		1. Check electronic modules 2. Change I/O or main electronic module	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
261	Electronic modules		1. Restart device 2. Check electronic modules 3. Change I/O Modul or main electronics	<ul style="list-style-type: none">▪ Density▪ Empty pipe detection▪ Low flow cut off▪ Mass flow▪ Switch output status▪ Reference density▪ Corrected volume flow▪ Temperature▪ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
262	Module connection		1. Check module connections 2. Change electronic modules	<ul style="list-style-type: none">▪ Density▪ Empty pipe detection▪ Low flow cut off▪ Mass flow▪ Switch output status▪ Reference density▪ Corrected volume flow▪ Temperature▪ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
270	Main electronic failure		Change main electronic module	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Status■ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
271	Main electronic failure		1. Restart device 2. Change main electronic module	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
272	Main electronic failure		1. Restart device 2. Contact service	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
273	Main electronic failure		1. Emergency operation via display 2. Change main electronics	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
274	Main electronic failure		Unstable measurement 1. Change main electronics	<div><div>■</div> Mass flow</div> <div><div>■</div> Corrected volume flow</div> <div><div>■</div> Volume flow</div>
	Measured value status [from the factory] ¹⁾			
	Quality	UNCERTAIN		
	Quality Substatus	Process Related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S (Out of specification)		
	Diagnostic behavior	Warning		

1) Diagnostic status is changeable.

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
275	I/O module failure		Change I/O module	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
276	I/O module failure		1. Restart device 2. Change I/O module	<ul style="list-style-type: none">▪ Density▪ Empty pipe detection▪ Low flow cut off▪ Mass flow▪ Switch output status▪ Reference density▪ Corrected volume flow▪ Temperature▪ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
282	Data storage		1. Restart device 2. Contact service	<ul style="list-style-type: none">▪ Density▪ Empty pipe detection▪ Low flow cut off▪ Mass flow▪ Switch output status▪ Reference density▪ Corrected volume flow▪ Temperature▪ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
283	Memory content		1. Transfer data or reset device 2. Contact service	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
302	Device verification active		Device verification active, please wait.	<ul style="list-style-type: none">▪ Density▪ Empty pipe detection▪ Low flow cut off▪ Mass flow▪ Switch output status▪ Reference density▪ Corrected volume flow▪ Temperature▪ Volume flow
	Measured value status			
	Quality	GOOD		
	Quality Substatus	Function Check		
	Coding (hex)	0xBC to 0xBF		
	Status signal	C (Check)		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
311	Electronic failure		1. Transfer data or reset device 2. Contact service	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
311	Electronic failure		Maintenance required! 1. Do not perform reset 2. Contact service	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	M (Maintenance)		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
362	Main electronic failure		1. Change main electronic module 2. Change sensor	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

12.5.3 Diagnostic of configuration

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
410	Data transfer		1. Check connection 2. Retry data transfer	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
412	Processing Download		Download active, please wait	<ul style="list-style-type: none">▪ Density▪ Empty pipe detection▪ Low flow cut off▪ Mass flow▪ Switch output status▪ Reference density▪ Corrected volume flow▪ Temperature▪ Volume flow
	Measured value status			
	Quality	UNCERTAIN		
	Quality Substatus	Initial Value		
	Coding (hex)	0x4C to 0x4F		
	Status signal	C (Check)		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
437	Configuration incompatible		1. Restart device 2. Contact service	<ul style="list-style-type: none">▪ Density▪ Empty pipe detection▪ Low flow cut off▪ Mass flow▪ Switch output status▪ Reference density▪ Corrected volume flow▪ Temperature▪ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
438	Dataset		1. Check data set file 2. Check device configuration 3. Up- and download new configuration	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	UNCERTAIN		
	Quality Substatus	Maintenance Demanded		
	Coding (hex)	0x68 to 0x6B		
	Status signal	M (Maintenance)		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
442	Frequency output		1. Check process 2. Check frequency output settings	–
	Measured value status [from the factory] ¹⁾			
	Quality	GOOD		
	Quality Substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S (Out of specification)		
	Diagnostic behavior	Warning		

1) Diagnostic status is changeable.

Diagnostic information		Remedy instructions	Measured variables concerned
No.	Short text		
443	Pulse output	1. Check process 2. Check pulse output settings	–
	Measured value status [from the factory] ¹⁾		
	Quality		
	Quality Substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic status is changeable.

Diagnostic information		Remedy instructions	Measured variables concerned
No.	Short text		
453	Flow override	Deactivate flow override	<ul style="list-style-type: none"> ■ Density ■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Reference density ■ Corrected volume flow ■ Temperature ■ Volume flow
	Measured value status		
	Quality		
	Quality Substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Measured variables concerned
No.	Short text		
482	FB not Auto/Cas	Set Block in AUTO mode	–
	Measured value status		
	Quality		
	Quality Substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Measured variables concerned
No.	Short text		
484	Simulation failure mode	Deactivate simulation	<ul style="list-style-type: none"> ■ Density ■ Empty pipe detection ■ Low flow cut off ■ Mass flow ■ Switch output status ■ Reference density ■ Corrected volume flow ■ Temperature ■ Volume flow
	Measured value status		
	Quality		
	Quality Substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
485	Simulation measured variable		Deactivate simulation	<ul style="list-style-type: none">▪ Density▪ Empty pipe detection▪ Low flow cut off▪ Mass flow▪ Switch output status▪ Reference density▪ Corrected volume flow▪ Temperature▪ Volume flow
	Measured value status			
	Quality	GOOD		
	Quality Substatus	Function Check		
	Coding (hex)	0xBC to 0xBF		
	Status signal	C (Check)		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
492	Simulation frequency output		Deactivate simulation frequency output	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	GOOD		
	Quality Substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	C (Check)		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
493	Simulation pulse output		Deactivate simulation pulse output	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	GOOD		
	Quality Substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	C (Check)		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
494	Switch output simulation		Deactivate simulation switch output	<ul style="list-style-type: none">▪ Density▪ Empty pipe detection▪ Low flow cut off▪ Mass flow▪ Switch output status▪ Reference density▪ Corrected volume flow▪ Temperature▪ Volume flow
	Measured value status			
	Quality	GOOD		
	Quality Substatus	Function Check		
	Coding (hex)	0xBC to 0xBF		
	Status signal	C (Check)		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
495	Simulation diagnostic event		Deactivate simulation	–
	Measured value status			
	Quality	GOOD		
	Quality Substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	C (Check)		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
497	Simulation block output		Deactivate simulation	–
	Measured value status			
	Quality	GOOD		
	Quality Substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	C (Check)		
	Diagnostic behavior	Warning		

12.5.4 Diagnostic of process

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
801	Supply voltage too low		Increase supply voltage	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status [from the factory] ¹⁾			
	Quality	UNCERTAIN		
	Quality Substatus	Process Related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S (Out of specification)		
	Diagnostic behavior	Warning		

1) Diagnostic status is changeable.

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
830	Sensor temperature too high		Reduce ambient temp. around the sensor housing	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Volume flow
	Measured value status [from the factory] ¹⁾			
	Quality	UNCERTAIN		
	Quality Substatus	Process Related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S (Out of specification)		
	Diagnostic behavior	Warning		

1) Diagnostic status is changeable.

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
831	Sensor temperature too low		Increase ambient temp. around the sensor housing	<div><div>■ Density</div><div>■ Mass flow</div><div>■ Reference density</div><div>■ Corrected volume flow</div><div>■ Volume flow</div></div>
	Measured value status [from the factory] ¹⁾			
	Quality	UNCERTAIN		
	Quality Substatus	Process Related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S (Out of specification)		
	Diagnostic behavior	Warning		

1) Diagnostic status is changeable.

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
832	Electronic temperature too high		Reduce ambient temperature	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status [from the factory] ¹⁾			
	Quality	UNCERTAIN		
	Quality Substatus	Process Related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S (Out of specification)		
	Diagnostic behavior	Warning		

1) Diagnostic status is changeable.

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
833	Electronic temperature too low		Increase ambient temperature	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status [from the factory] ¹⁾			
	Quality	UNCERTAIN		
	Quality Substatus	Process Related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S (Out of specification)		
	Diagnostic behavior	Warning		

1) Diagnostic status is changeable.

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
834	Process temperature too high		Reduce process temperature	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status [from the factory] ¹⁾			
	Quality	UNCERTAIN		
	Quality Substatus	Process Related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S (Out of specification)		
	Diagnostic behavior	Warning		

1) Diagnostic status is changeable.

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
835	Process temperature too low		Increase process temperature	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status [from the factory] ¹⁾			
	Quality	UNCERTAIN		
	Quality Substatus	Process Related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S (Out of specification)		
	Diagnostic behavior	Warning		

1) Diagnostic status is changeable.

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
842	Process limit		Low flow cut off active! 1. Check low flow cut off configuration	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	GOOD		
	Quality Substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S (Out of specification)		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
862	Partly filled pipe		1. Check for gas in process 2. Adjust detection limits	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status [from the factory] ¹⁾			
	Quality	UNCERTAIN		
	Quality Substatus	Process Related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S (Out of specification)		
	Diagnostic behavior	Warning		

1) Diagnostic status is changeable.

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
882	Input signal		1. Check input configuration 2. Check external device or process conditions	<ul style="list-style-type: none">■ Density■ Mass flow■ Reference density■ Corrected volume flow■ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
910	Tubes not oscillating		1. Check process conditions 2. Increase supply 3. Check main electronic or sensor	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status			
	Quality	BAD		
	Quality Substatus	Maintenance Alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F (Failure)		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
912	Medium inhomogeneous		1. Check process cond. 2. Increase system pressure	<ul style="list-style-type: none">■ Density■ Empty pipe detection■ Low flow cut off■ Mass flow■ Switch output status■ Reference density■ Corrected volume flow■ Temperature■ Volume flow
	Measured value status [from the factory] ¹⁾			
	Quality	UNCERTAIN		
	Quality Substatus	Process Related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S (Out of specification)		
	Diagnostic behavior	Warning		




1) Diagnostic status is changeable.



Diagnostic information			Remedy instructions	Measured variables concerned
No.	Short text			
913	Medium unsuitable		1. Check process conditions 2. Increase supply 3. Check main electronic or sensor	<div><div>■ Density</div><div>■ Mass flow</div><div>■ Reference density</div><div>■ Corrected volume flow</div><div>■ Volume flow</div></div>
	Measured value status [from the factory] ¹⁾			
	Quality	UNCERTAIN		
	Quality Substatus	Process Related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S (Out of specification)		
	Diagnostic behavior	Warning		

1) Diagnostic status is changeable.

12.6 Pending diagnostic events


The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

-  To call up the measures to rectify a diagnostic event:
- Via local display →  107
 - Via "FieldCare" operating tool →  108


-  Other pending diagnostic events can be displayed in the **Diagnostic list** submenu →  126

Navigation
"Diagnostics" menu

Structure of the submenu

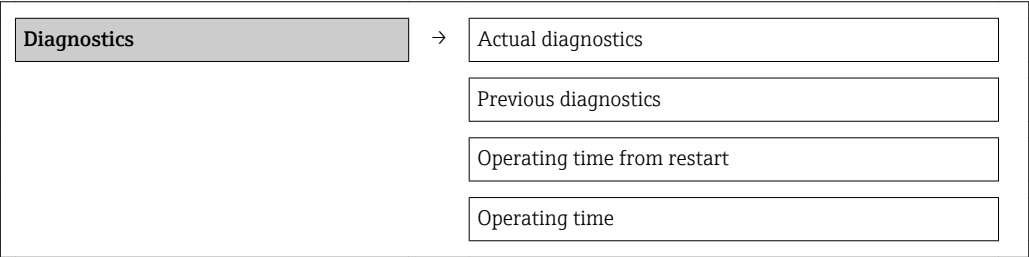


Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occurred diagnostic event along with its diagnostic information.  If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	Symbol for diagnostic behavior, diagnostic code and short message.
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	–	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	–	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

12.7 Diagnostic list

In the **Diagnostic list** submenu, up to 5 currently pending diagnostic events can be displayed along with the related diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path
Diagnostics menu → **Diagnostic list** submenu

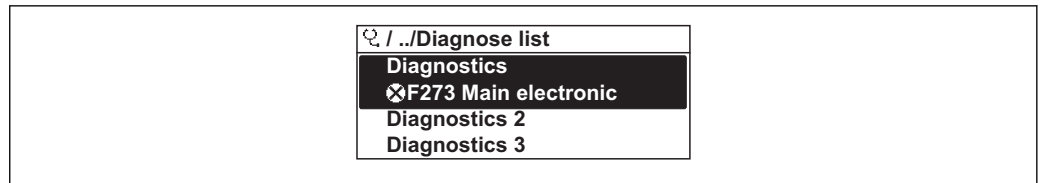


A0014006-EN

29 Illustrated using the example of the local display

- i** To call up the measures to rectify a diagnostic event:
- Via local display → 107
 - Via "FieldCare" operating tool → 108

12.8 Event logbook

12.8.1 Event history

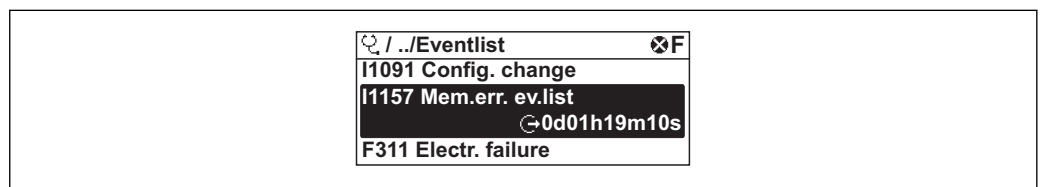

A0014008-EN

30 Illustrated using the example of the local display

- i** To call up the measures to rectify a diagnostic event:
- Via local display → 107
 - Via "FieldCare" operating tool → 108

- i** For filtering the displayed event messages → 127

12.8.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Events list** submenu.

Navigation path

"Diagnostics" menu → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.8.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
I1000	----- (Device ok)
I1079	Sensor changed
I1089	Power on

Info number	Info name
I1090	Configuration reset
I1091	Configuration changed
I1092	Trend data deleted
I1110	Write protection switch changed
I1111	Density adjust failure
I1137	Electronic changed
I1151	History reset
I1154	Reset terminal voltage min/max
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1209	Density adjustment ok
I1221	Zero point adjust failure
I1222	Zero point adjustment ok
I1227	Sensor emergency mode activated
I1228	Sensor emergency mode failed
I1256	Display: access status changed
I1264	Safety sequence aborted
I1335	Firmware changed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1440	Main electronic module changed
I1442	I/O module changed
I1444	Device verification passed
I1445	Device verification failed
I1450	Monitoring off
I1451	Monitoring on
I1459	Failed: I/O module verification
I1461	Failed: Sensor verification
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished
I1552	Failed: Main electronic verification
I1554	Safety sequence started
I1555	Safety sequence confirmed
I1556	Safety mode off

12.9 Resetting the measuring device

Using the **Device reset** parameter it is possible to reset the entire device configuration or some of the configuration to a defined state.

Navigation

"Setup" menu → Advanced setup → Administration → Device reset

► Administration

► Define access code

Define access code

Confirm access code

Device reset

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	<ul style="list-style-type: none">■ Cancel■ To fieldbus defaults *■ To factory defaults■ To delivery settings■ Restart device	Cancel

* Visibility depends on communication

12.9.1 Function scope of the "Device reset" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.
History reset	Every parameter is reset to its factory setting.

12.10 Device information

The **Device information** submenu contains all the parameters that display different information for identifying the device.

Navigation
"Diagnostics" menu → Device information

► Device information

Device tag

Serial number

Firmware version

Device name

Order code




Extended order code 1



Extended order code 2

Extended order code 3

ENP version

Parameter overview with brief description


Parameter	Description	User interface	Factory setting
Device tag	Enter the name for the measuring point.	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)	Promass
Serial number	Shows the serial number of the measuring device.	Max. 11-digit character string comprising letters and numbers.	–
Firmware version	Shows the device firmware version installed.	Character string with the following format: xx.yy.zz	01.01
Device name	Shows the name of the transmitter.  The name can be found on the nameplate of the transmitter.	Promass 200	–
Order code	Shows the device order code.  The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks (e.g. /).	–
Extended order code 1	Shows the 1st part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–


Parameter	Description	User interface	Factory setting
Extended order code 2	Shows the 2nd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
Extended order code 3	Shows the 3rd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
ENP version	Shows the version of the electronic nameplate (ENP).		2.02.00
PROFIBUS ident number	Displays the PROFIBUS identification number.	0 to FFFF	0x155F
Status PROFIBUS Master Config	Displays the status of the PROFIBUS Master configuration.	<ul style="list-style-type: none"> ■ Active ■ Not active 	Not active

12.11 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
06.2015	01.01.zz	Option 71	Device download possible if communication established.	Operating Instructions	BA01133D/06/EN/02.15
11.2012	01.00.zz	Option 77	Original firmware	Operating Instructions	BA01133D/06/EN/01.12

 Flashing the firmware to the current version or to the previous version is possible via the service interface (CDI) .

 For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.

 The manufacturer's information is available:

- In the Download Area of the Endress+Hauser Internet site: www.endress.com → Download
- Specify the following details:
 - Product root, e.g. 8E2B
 - Text search: Manufacturer's information
 - Search range: documentation

13 Maintenance

13.1 Maintenance tasks


No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

13.1.2 Interior cleaning

Observe the following points for CIP and SIP cleaning:

- Use only cleaning agents to which the process-wetted materials are adequately resistant.
- Observe the maximum permitted medium temperature for the measuring device
→  148.

13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.



Your Endress+Hauser Sales Center can provide detailed information on the services.



For a list of some of the measuring and test equipment, refer to the "Accessories" chapter of the "Technical Information" document for the device.

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.



Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repair

14.1 General notes

Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by correspondingly trained customers.
- Certified devices can be converted into other certified devices by Endress+Hauser Service or at the factory only.

Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:


- Use only original Endress+Hauser spare parts.
- Carry out the repair according to the Installation Instructions.
- Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- Document every repair and each conversion and enter them into the *W@M* life cycle management database.

14.2 Spare parts

Some interchangeable measuring device components are listed on an overview sign in the connection compartment cover.

The spare part overview sign contains the following information:

- A list of the most important spare parts for the measuring device, including their ordering information.
- The URL for the *W@M Device Viewer* (www.endress.com/deviceviewer):
All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

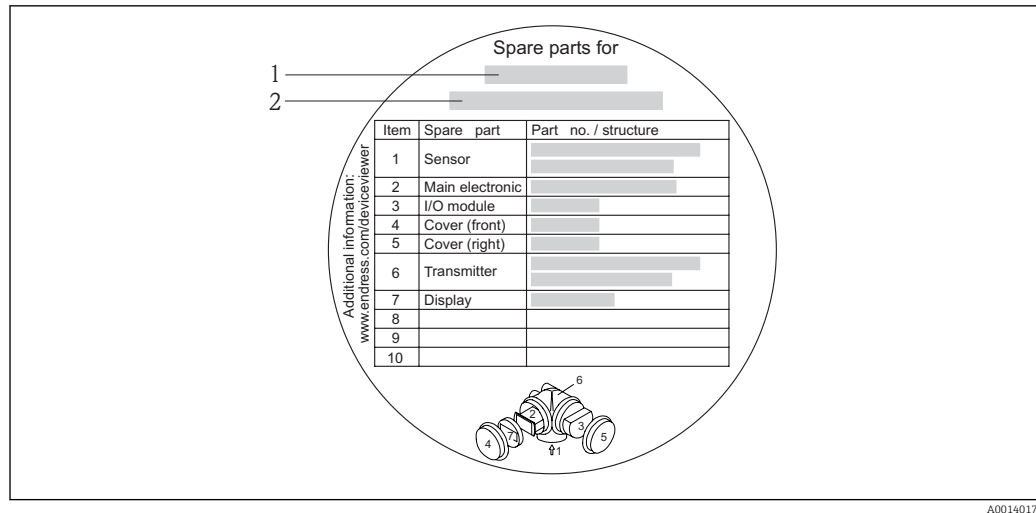

31 Example for "Spare part overview sign" in connection compartment cover

- 1 Measuring device name
- 2 Measuring device serial number

- i** Measuring device serial number:
- Is located on the device nameplate and the spare part overview sign.
 - Can be read out via the **Serial number** parameter in the **Device information** submenu → 129.

14.3 Endress+Hauser services

- i** Contact your Endress+Hauser Sales Center for information on services and spare parts.

14.4 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <http://www.endress.com/support/return-material>

14.5 Disposal

14.5.1 Removing the measuring device

1. Switch off the device.
2. **WARNING!** Danger to persons from process conditions. Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.

Carry out the mounting and connection steps from the chapters "Mounting the measuring device" and "Connecting the measuring device" in the logically reverse sequence. Observe the safety instructions.

14.5.2 Disposing of the measuring device

WARNING

Danger to personnel and environment from fluids that are hazardous to health.

- ▶ Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:






- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.

15 Accessories


Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Device-specific accessories


15.1.1 For the transmitter

Accessories	Description
Promass 200 transmitter	<p>Transmitter for replacement or storage. Use the order code to define the following specifications:</p> <ul style="list-style-type: none"> ■ Approvals ■ Output ■ Display / operation ■ Housing ■ Software <p> For details, see Installation Instructions EA00104D</p>
Remote display FHX50	<p>FHX50 housing to accommodate a display module →  154.</p> <ul style="list-style-type: none"> ■ FHX50 housing suitable for: <ul style="list-style-type: none"> – SD02 display module (push buttons) – SD03 display module (touch control) ■ Housing material: <ul style="list-style-type: none"> – Plastic PBT – Stainless steel CF-3M (316L, 1.4404) ■ Length of connecting cable: up to max. 60 m (196 ft) (cable lengths available for order: 5 m (16 ft), 10 m (32 ft), 20 m (65 ft), 30 m (98 ft)) <p>The measuring device can be ordered with the FHX50 housing and a display module. The following options must be selected in the separate order codes:</p> <ul style="list-style-type: none"> ■ Order code for measuring device, feature 030: Option L or M "Prepared for FHX50 display" ■ Order code for FHX50 housing, feature 050 (device version): Option A "Prepared for FHX50 display" ■ Order code for FHX50 housing, depends on the desired display module in feature 020 (display, operation): <ul style="list-style-type: none"> – Option C: for an SD02 display module (push buttons) – Option E: for an SD03 display module (touch control) <p>The FHX50 housing can also be ordered as a retrofit kit. The measuring device display module is used in the FHX50 housing. The following options must be selected in the order code for the FHX50 housing:</p> <ul style="list-style-type: none"> ■ Feature 050 (measuring device version): option B "Not prepared for FHX50 display" ■ Feature 020 (display, operation): option A "None, existing displayed used" <p> For details, see Special Documentation SD01007F</p>
Overvoltage protection for 2-wire devices	<p>Ideally, the overvoltage protection module should be ordered directly with the device. See product structure, characteristic 610 "Accessory mounted", option NA "Overvoltage protection". Separate order necessary only if retrofitting.</p> <ul style="list-style-type: none"> ■ OVP10: For 1-channel devices (characteristic 020, option A): ■ OVP20: For 2-channel devices (characteristic 020, options B, C, E or G) <p> For details, see Special Documentation SD01090F.</p>
Weather protection cover	<p>Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight or extreme cold in winter.</p> <p> For details, see Special Documentation SD00333F</p>




15.1.2 For the sensor

Accessories	Description
Heating jacket	<p>Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids. If using oil as a heating medium, please consult with Endress+Hauser. Heating jackets cannot be used with sensors fitted with a rupture disk.</p> <p> For details, see Operating Instructions BA00099D</p>

15.2 Service-specific accessories

Accessories	Description
Applicator	<p>Software for selecting and sizing Endress+Hauser measuring devices:</p> <ul style="list-style-type: none"> Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, accuracy or process connections. Graphic illustration of the calculation results <p>Administration, documentation and access to all project-related data and parameters throughout the entire life cycle of a project.</p> <p>Applicator is available:</p> <ul style="list-style-type: none"> Via the Internet: https://wapps.endress.com/applicator On CD-ROM for local PC installation.
W@M	<p>Life cycle management for your plant</p> <p>W@M supports you with a wide range of software applications over the entire process: from planning and procurement, to the installation, commissioning and operation of the measuring devices. All the relevant device information, such as the device status, spare parts and device-specific documentation, is available for every device over the entire life cycle.</p> <p>The application already contains the data of your Endress+Hauser device. Endress+Hauser also takes care of maintaining and updating the data records.</p> <p>W@M is available:</p> <ul style="list-style-type: none"> Via the Internet: www.endress.com/lifecyclemanagement On CD-ROM for local PC installation.
FieldCare	<p>FDT-based plant asset management tool from Endress+Hauser.</p> <p>It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.</p> <p> For details, see Operating Instructions BA00027S and BA00059S</p>

15.3 System components

Accessories	Description
Memograph M graphic display recorder	<p>The Memograph M graphic display recorder provides information on all relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.</p> <p> For details, see "Technical Information" TI00133R and Operating Instructions BA00247R</p>
Cerabar M	<p>The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.</p> <p> For details, see "Technical Information" TI00426P, TI00436P and Operating Instructions BA00200P, BA00382P</p>
Cerabar S	<p>The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.</p> <p> For details, see "Technical Information" TI00383P and Operating Instructions BA00271P</p>

16 Technical data


16.1 Application

The measuring device is suitable for flow measurement of liquids and gases only.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are adequately resistant.

16.2 Function and system design

Measuring principle	Mass flow measurement based on the Coriolis measuring principle
Measuring system	<p>The device consists of a transmitter and a sensor.</p> <p>The device is available as a compact version: The transmitter and sensor form a mechanical unit.</p> <p>For information on the structure of the device →  12</p>

16.3 Input

Measured variable	<p>Direct measured variables</p> <ul style="list-style-type: none">■ Mass flow■ Density■ Temperature <p>Calculated measured variables</p> <ul style="list-style-type: none">■ Volume flow■ Corrected volume flow■ Reference density
-------------------	---

Measuring range	Measuring ranges for liquids		
	DN		Measuring range full scale values $\dot{m}_{\min(\text{F})}$ to $\dot{m}_{\max(\text{F})}$
	[mm]	[in]	[kg/h] [lb/min]
	8	$\frac{3}{8}$	0 to 2 000 0 to 73.50
	15	$\frac{1}{2}$	0 to 6 500 0 to 238.9
	25	1	0 to 18 000 0 to 661.5
	40	$1\frac{1}{2}$	0 to 45 000 0 to 1 654
	50	2	0 to 70 000 0 to 2 573

Measuring ranges for gases

The full scale values depend on the density of the gas and can be calculated with the formula below:

$$\dot{m}_{\max(G)} = \dot{m}_{\max(F)} \cdot \rho_G : x$$

$\dot{m}_{\max(G)}$	Maximum full scale value for gas [kg/h]
$\dot{m}_{\max(F)}$	Maximum full scale value for liquid [kg/h]
$\dot{m}_{\max(G)} < \dot{m}_{\max(F)}$	$\dot{m}_{\max(G)}$ can never be greater than $\dot{m}_{\max(F)}$
ρ_G	Gas density in [kg/m ³] at operating conditions

DN		x
[mm]	[in]	[kg/m ³]
8	$\frac{3}{8}$	85
15	$\frac{1}{2}$	110
25	1	125
40	$1\frac{1}{2}$	125
50	2	125

Calculation example for gas



- Sensor: Promass E, DN 50
- Gas: Air with a density of 60.3 kg/m³ (at 20 °C and 50 bar)
- Measuring range (liquid): 70 000 kg/h
- $x = 125 \text{ kg/m}^3$ (for Promass E, DN 50)

Maximum possible full scale value:

$$\dot{m}_{\max(G)} = \dot{m}_{\max(F)} \cdot \rho_G : x = 70\,000 \text{ kg/h} \cdot 60.3 \text{ kg/m}^3 : 125 \text{ kg/m}^3 = 33\,800 \text{ kg/h}$$

Recommended measuring range

"Flow limit" section →  149

Operable flow range	Over 1000 : 1. Flow rates above the preset full scale value are not overridden by the electronics unit, with the result that the totalizer values are registered correctly.
Input signal	External measured values To increase the accuracy of certain measured variables or to calculate the corrected volume flow for gases, the automation system can continuously write the operating pressure to the measuring device. Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S.  Various pressure transmitters and temperature measuring devices can be ordered from Endress+Hauser: see "Accessories" section →  137 It is recommended to read in external measured values to calculate the following measured variables: <ul style="list-style-type: none"> ■ Mass flow ■ Corrected volume flow <i>Fieldbuses</i> The measured values are written from the automation system to the measuring device via PROFIBUS PA.

16.4 Output

Output signal

Pulse/frequency/switch output

Function	Can be set to pulse, frequency or switch output
Version	Passive, open collector
Maximum input values	<ul style="list-style-type: none"> ■ DC 35 V ■ 50 mA
Voltage drop	<ul style="list-style-type: none"> ■ For ≤ 2 mA: 2 V ■ For 10 mA: 8 V
Residual current	≤ 0.05 mA
Pulse output	
Pulse width	Adjustable: 5 to 2 000 ms
Maximum pulse rate	100 Impulse/s
Pulse value	Adjustable
Assignable measured variables	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow
Frequency output	
Output frequency	Adjustable: 0 to 1 000 Hz
Damping	Adjustable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul style="list-style-type: none"> ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature
Switch output	
Switching behavior	Binary, conductive or non-conductive
Switching delay	Adjustable: 0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	<ul style="list-style-type: none"> ■ Off ■ On ■ Diagnostic behavior ■ Limit value <ul style="list-style-type: none"> – Mass flow – Volume flow – Corrected volume flow – Density – Reference density – Temperature – Totalizer 1-3 ■ Flow direction monitoring ■ Status <ul style="list-style-type: none"> – Partially filled pipe detection – Low flow cut off

PROFIBUS PA

Signal encoding	Manchester Bus Powered (MBP)
Data transfer	31.25 KBit/s, Voltage mode

Signal on alarm

Depending on the interface, failure information is displayed as follows:

Pulse/frequency/switch output*Pulse output*

Failure mode	Choose from: <ul style="list-style-type: none"> ■ Actual value ■ No pulses
---------------------	--

Frequency output

Failure mode	Choose from: <ul style="list-style-type: none"> ■ Actual value ■ 0 Hz ■ Defined value: 0 to 1 250 Hz
---------------------	---

Switch output

Failure mode	Choose from: <ul style="list-style-type: none"> ■ Current status ■ Open ■ Closed
---------------------	---

PROFIBUS PA

Status and alarm messages	Diagnostics in accordance with PROFIBUS PA Profile 3.02
Error current FDE (Fault Disconnection Electronic)	0 mA

Local display

Plain text display	With information on cause and remedial measures
Backlight	Additionally for device version with SD03 local display: red lighting indicates a device error.



Status signal as per NAMUR recommendation NE 107

Operating tool

- Via digital communication:
PROFIBUS PA
- Via service interface

Plain text display	With information on cause and remedial measures
---------------------------	---

Low flow cut off

The switch points for low flow cut off are user-selectable.

Galvanic isolation

All outputs are galvanically isolated from one another.


Protocol-specific data

PROFIBUS PA

Manufacturer ID	0x11
Ident number	0x155F
Profile version	3.02
Device description files (GSD, DTM, DD)	Information and files under: <ul style="list-style-type: none"> ▪ www.endress.com ▪ www.profibus.org
Output values (from measuring device to automation system)	Analog input 1 to 6 <ul style="list-style-type: none"> ▪ Mass flow ▪ Volume flow ▪ Corrected volume flow ▪ Density ▪ Reference density ▪ Temperature Digital input 1 to 2 <ul style="list-style-type: none"> ▪ Empty pipe detection ▪ Low flow cut off ▪ Status switch output ▪ Status verification Totalizer 1 to 3 <ul style="list-style-type: none"> ▪ Mass flow ▪ Volume flow ▪ Corrected volume flow
Input values (from automation system to measuring device)	Analog output External pressure Digital output 1 to 4 (fixed assignment) <ul style="list-style-type: none"> ▪ Digital output 1: switch positive zero return on/off ▪ Digital output 2: switch zero point adjustment on/off ▪ Digital output 3: switch switch output on/off ▪ Digital output 4: start verification Totalizer 1 to 3 <ul style="list-style-type: none"> ▪ Totalize ▪ Reset and hold ▪ Preset and hold ▪ Operating mode configuration: <ul style="list-style-type: none"> – Net flow total – Forward flow total – Reverse flow total
Supported functions	<ul style="list-style-type: none"> ▪ Identification & Maintenance Simplest device identification on the part of the control system and nameplate ▪ PROFIBUS upload/download Reading and writing parameters is up to ten times faster with PROFIBUS upload/download ▪ Condensed status Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur
Configuration of the device address	<ul style="list-style-type: none"> ▪ DIP switches on the I/O electronics module ▪ Local display ▪ via operating tools (e.g. FieldCare)

16.5 Power supply

Terminal assignment

→  29

Pin assignment, device plug

→  29

Supply voltage

Transmitter

An external power supply is required for each output.

The following supply voltage values apply for the outputs available:

Order code for "Output"	Minimum terminal voltage	Maximum terminal voltage
Option G : PROFIBUS PA, pulse/frequency/switch output	≥ DC 9 V	DC 32 V

Power consumption

Transmitter

Order code for "Output"	Maximum power consumption
Option G : PROFIBUS PA, pulse/frequency/switch output	<ul style="list-style-type: none"> ■ Operation with output 1: 512 mW ■ Operation with output 1 and 2: 2 512 mW

Current consumption


PROFIBUS PA

16 mA

Power supply failure

- Totalizers stop at the last value measured.
- Configuration is retained in the device memory (HistoROM).
- Error messages (incl. total operated hours) are stored.

Electrical connection

→  31

Terminals

- For device version without integrated overvoltage protection: plug-in spring terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)
- For device version with integrated overvoltage protection: screw terminals for wire cross-sections 0.2 to 2.5 mm² (24 to 14 AWG)

Cable entries

- Cable gland: M20 × 1.5 with cable Ø6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
 - NPT ½"
 - G ½"

Cable specification

→  26


Overvoltage protection


The device can be ordered with integrated overvoltage protection for diverse approvals:
Order code for "Accessory mounted", option NA "Overvoltage protection"

Input voltage range	Values correspond to supply voltage specifications ¹⁾
Resistance per channel	2 · 0.5 Ω max
DC sparkover voltage	400 to 700 V
Trip surge voltage	< 800 V
Capacitance at 1 MHz	< 1.5 pF

Nominal discharge current (8/20 µs)	10 kA
Temperature range	−40 to +85 °C (−40 to +185 °F)

1) The voltage is reduced by the amount of the internal resistance $I_{min} \cdot R_i$




 Depending on the temperature class, restrictions apply to the ambient temperature for device versions with overvoltage protection .

 For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

16.6 Performance characteristics

Reference operating conditions

- Error limits based on ISO 11631
- Water with +15 to +45 °C (+59 to +113 °F) at 2 to 6 bar (29 to 87 psi)
- Specifications as per calibration protocol
- Accuracy based on accredited calibration rigs that are traced to ISO 17025.

 To obtain measured errors, use the *Applicator* sizing tool →  137 →  157

Maximum measured error

o.r. = of reading; 1 g/cm³ = 1 kg/l; T = medium temperature


Base accuracy

Mass flow and volume flow (liquids)

±0.25 % o.r.

Mass flow (gases)

±0.75 % o.r.

 Design fundamentals

Density (liquids)

- Reference conditions: ±0.0005 g/cm³
- Standard density calibration: ±0.02 g/cm³
(valid over the entire temperature range and density range)

Temperature

±0.5 °C ± 0.005 · T °C (±0.9 °F ± 0.003 · (T − 32) °F)

Zero point stability

DN		Zero point stability	
[mm]	[in]	[kg/h]	[lb/min]
8	³ / ₈	0.24	0.0088
15	¹ / ₂	0.78	0.0287
25	1	2.16	0.0794
40	1½	5.40	0.1985
50	2	8.40	0.3087

Flow values

Flow values as turndown parameter depending on nominal diameter.

SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
8	2 000	200	100	40	20	4
15	6 500	650	325	130	65	13
25	18 000	1 800	900	360	180	36
40	45 000	4 500	2 250	900	450	90
50	70 000	7 000	3 500	1 400	700	140

US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
$\frac{3}{8}$	73.50	7.350	3.675	1.470	0.735	0.147
$\frac{1}{2}$	238.9	23.89	11.95	4.778	2.389	0.478
1	661.5	66.15	33.08	13.23	6.615	1.323
1½	1 654	165.4	82.70	33.08	16.54	3.308
2	2 573	257.3	128.7	51.46	25.73	5.146

Repeatability

o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature**Base repeatability****Mass flow and volume flow (liquids)** $\pm 0.125 \%$ o.r.**Mass flow (gases)** $\pm 0.35 \%$ o.r.

Design fundamentals

Density (liquids) $\pm 0.00025 \text{ g/cm}^3$ **Temperature** $\pm 0.25 \text{ }^\circ\text{C} \pm 0.0025 \cdot T \text{ }^\circ\text{C} (\pm 0.45 \text{ }^\circ\text{F} \pm 0.0015 \cdot (T-32) \text{ }^\circ\text{F})$

Response time

- The response time depends on the configuration (damping).
- Response time in the event of erratic changes in the measured variable: after 500 ms → 95 % of the full scale value

Influence of ambient temperature

o.r. = of reading


Pulse/frequency output

Temperature coefficient	Max. $\pm 100 \text{ ppm o.r.}$
-------------------------	---------------------------------

Influence of medium temperature

Mass flow and volume flow

When there is a difference between the temperature for zero point adjustment and the process temperature, the typical measured error of the sensor is $\pm 0.0002 \%$ of the full scale value/ $^\circ\text{C}$ ($\pm 0.0001 \%$ of the full scale value/ $^\circ\text{F}$).

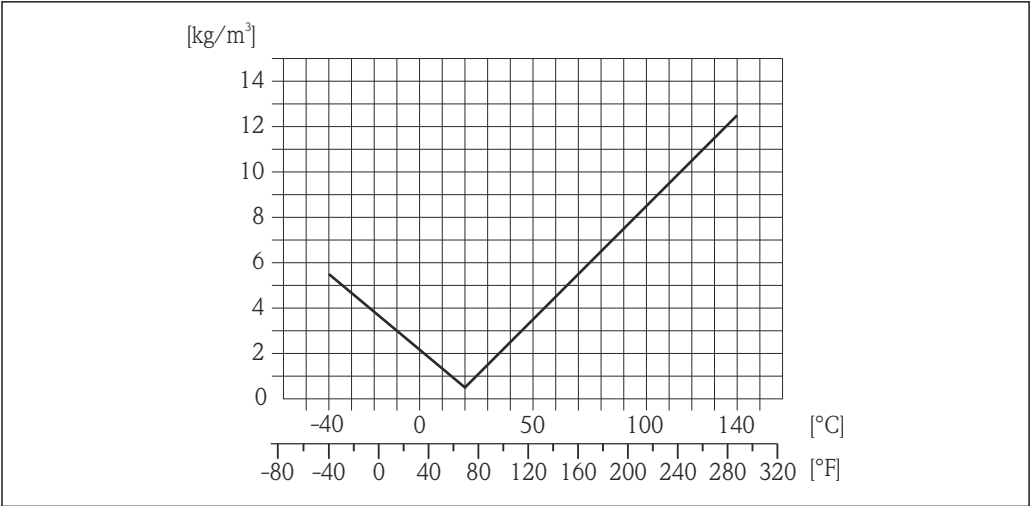

A0016609

32 Field density calibration, for example at +20 °C (+68 °F)

Temperature
 $\pm 0.005 \cdot T \text{ }^{\circ}\text{C} \ (\pm 0.005 \cdot (T - 32) \text{ }^{\circ}\text{F})$

Influence of medium pressure

The table below shows the effect on accuracy of mass flow due to a difference between calibration pressure and process pressure.

o.r. = of reading

DN		[% o.r./bar]	[% o.r./psi]
[mm]	[in]		
8	3⁄8	no influence	
15	1⁄2	no influence	
25	1	no influence	
40	1½	no influence	
50	2	-0.009	-0.0006

Design fundamentals

o.r. = of reading, o.f.s. = of full scale value
BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.
MeasValue = measured value; ZeroPoint = zero point stability


Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ <small>A0021332</small>	$\pm \text{BaseAccu}$ <small>A0021339</small>
$< \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ <small>A0021333</small>	$\pm \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$ <small>A0021334</small>

Calculation of the maximum repeatability as a function of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{{}^{4/3} \cdot \text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ <small>A0021341</small>	$\pm \frac{1}{2} \cdot \text{BaseAccu}$ <small>A0021343</small>
$< \frac{{}^{4/3} \cdot \text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ <small>A0021342</small>	$\pm \frac{2}{3} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$ <small>A0021344</small>


Example for max. measured error

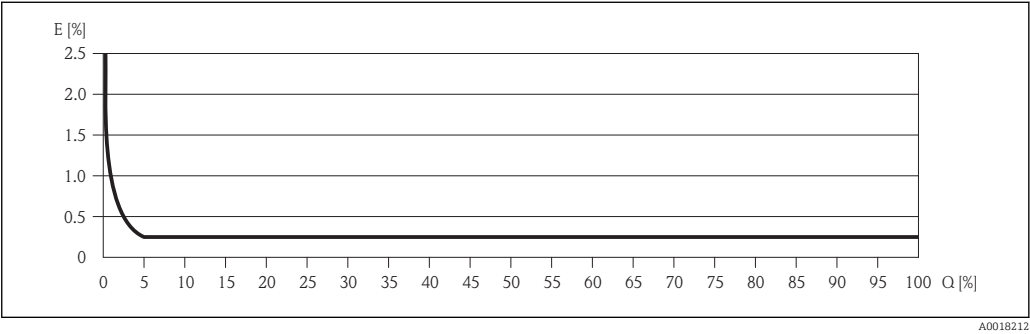

33 Maximum measured error in % o.r. (example: DN 25)

 Design fundamentals


16.7 Installation


"Mounting requirements" →  19

16.8 Environment

Ambient temperature range →  21

Temperature tables


 Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.

 For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.






Storage temperature All components apart from the display modules:
-40 to +80 °C (-40 to +176 °F), preferably at +20 °C (+68 °F)





Display modules
-40 to +80 °C (-40 to +176 °F)

Climate class DIN EN 60068-2-38 (test Z/AD)

Degree of protection	Transmitter <ul style="list-style-type: none"> ■ As standard: IP66/67, type 4X enclosure ■ When housing is open: IP20, type 1 enclosure ■ Display module: IP20, type 1 enclosure Sensor IP66/67, type 4X enclosure Connector IP67, only in screwed situation
Shock resistance	As per IEC/EN 60068-2-31
Vibration resistance	Acceleration up to 1 g, 10 to 150 Hz, based on IEC/EN 60068-2-6
Interior cleaning	<ul style="list-style-type: none"> ■ Sterilization in place (SIP) ■ Cleaning in place (CIP)
Electromagnetic compatibility (EMC)	As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)  For details, refer to the Declaration of Conformity.

16.9 Process

Medium temperature range	Sensor -40 to +140 °C (-40 to +284 °F) Seals No internal seals
Density	0 to 2 000 kg/m ³ (0 to 125 lb/cf)
Pressure-temperature ratings	 An overview of the pressure-temperature ratings for the process connections is provided in the "Technical Information" document
Secondary containment pressure rating	<p>The sensor housing is filled with dry nitrogen and protects the electronics and mechanics inside.</p> <p>The housing does not have pressure vessel classification.</p> <p>Reference value for the pressure loading capacity of the sensor housing: 16 bar (232 psi)</p>  For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section
Rupture disk	<p>To increase the level of safety, a device version with a rupture disk with a triggering pressure of 10 to 15 bar (145 to 217.5 psi) can be used (order code for "Sensor option", option CA "rupture disk"). Special mounting instructions: →  23</p> <p>Rupture disks cannot be combined with the separately available heating jacket →  136 →  136.</p>

 Flow limit	<p>Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.</p> <p> For an overview of the measuring range full scale values, see the "Measuring range" section</p> <ul style="list-style-type: none">■ The minimum recommended full scale value is approx. 1/20 of the maximum full scale value■ In the most common applications, 20 to 50 % of the maximum full scale value can be considered ideal■ A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).■ For gas measurement the following rules apply:<ul style="list-style-type: none">– The flow velocity in the measuring tubes should not exceed half the sound velocity (0.5 Mach).– The maximum mass flow depends on the density of the gas: formula
Pressure loss	<p> To calculate the pressure loss, use the <i>Applicator</i> sizing tool →  157</p>
System pressure	<p>→  21</p>

16.10 Mechanical construction

Design, dimensions



For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

Weight

Compact version

Weight in SI units

All values (weight) refer to devices with EN/DIN PN 40 flanges. Weight information in [kg].

DN [mm]	Weight [kg]	
	Order code for "Housing", option C Aluminum coated	Order code for "Housing", option B 1.4404 (316L)
8	6	8.5
15	6.5	9
25	8	10.5
40	13	15.5
50	22	24.5

Weight in US units

All values (weight) refer to devices with EN/DIN PN 40 flanges. Weight information in [lbs].


DN [in]	Weight [lbs]	
	Order code for "Housing", option C Aluminum coated	Order code for "Housing", option B 1.4404 (316L)
$\frac{3}{8}$	13.2	18.7
$\frac{1}{2}$	14.3	19.8
1	17.6	23.2
1 $\frac{1}{2}$	28.7	34.2
2	48.5	54.0

Materials

Transmitter housing

- Order code for "Housing", option **B**: stainless steel CF-3M (316L, 1.4404)
- Order code for "Housing", option **C** "Compact, aluminum coated":
Aluminum, AlSi10Mg, coated
- Window material: glass

Cable entries/cable glands

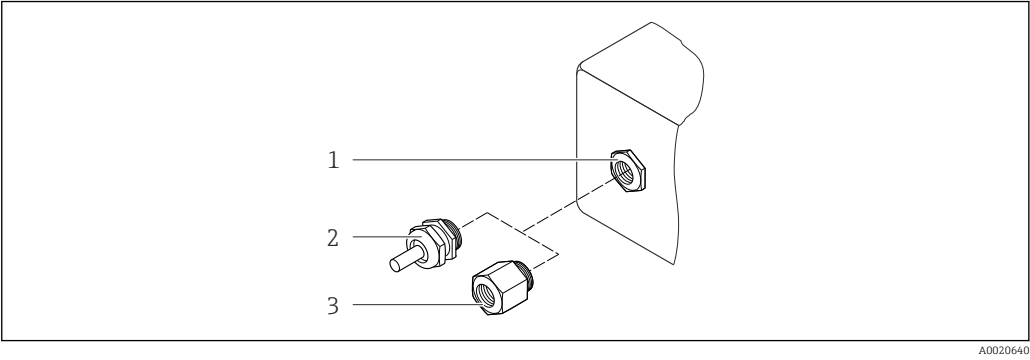

34 Possible cable entries/cable glands

- 1 Cable entry in transmitter housing with internal thread M20 x 1.5
- 2 Cable gland M20 x 1.5
- 3 Adapter for cable entry with internal thread G 1/2" or NPT 1/2"

Order code for "Housing", option B "GT18 two-chamber, 316L"

Cable entry/cable gland	Type of protection	Material
Cable gland M20 × 1.5	<ul style="list-style-type: none"> ■ Non-Ex ■ Ex ia ■ Ex ic ■ Ex nA ■ Ex tb 	Stainless steel ,1.4404
Adapter for cable entry with internal thread G 1/2"	For non-Ex and Ex (except for CSA Ex d/XP)	Stainless steel, 1.4404 (316L)
Adapter for cable entry with internal thread NPT 1/2"	For non-Ex and Ex	

Order code for "Housing", option C "GT20 two-chamber, aluminum coated"

Cable entry/cable gland	Type of protection	Material
Cable gland M20 × 1.5	<ul style="list-style-type: none"> ■ Non-Ex ■ Ex ia ■ Ex ic 	Plastic
	Adapter for cable entry with internal thread G 1/2"	Nickel-plated brass
Adapter for cable entry with internal thread NPT 1/2"	For non-Ex and Ex (except for CSA Ex d/XP)	Nickel-plated brass
Thread NPT 1/2" via adapter	For non-Ex and Ex	

Device plug

Electrical connection	Material
Plug M12x1	<ul style="list-style-type: none"> ■ Socket: stainless steel, 1.4401/316 ■ Contact housing: plastic, PUR, black ■ Contacts: metal, CuZn, gold-plated ■ Threaded connection seal: NBR

Sensor housing



- Acid and alkali-resistant outer surface
- Stainless steel 1.4301 (304)

Measuring tubes

Stainless steel, 1.4539 (904L); manifold: stainless steel, 1.4404 (316L)

Process connections

- Flanges according to EN 1092-1 (DIN2501) / according to ASME B 16.5 / as per JIS B2220:
Stainless steel, 1.4404 (F316/F316L)
- All other process connections:
Stainless steel, 1.4404 (316/316L)

 List of all available process connections →  152

Seals

Welded process connections without internal seals



Accessories

Weather protection cover

Stainless steel 1.4404 (316L)

Process connections

- Fixed flange connections:
 - EN 1092-1 (DIN 2501) flange
 - EN 1092-1 (DIN 2512N) flange
 - Namur lengths in accordance with NE 132
 - ASME B16.5 flange
 - JIS B2220 flange
 - DIN 11864-2 Form A flange, DIN11866 line A, flange with notch
- Clamp connections
Tri-Clamp (OD tubes), DIN 11866 line C
- Threaded connection:
 - DIN 11851 thread, DIN11866 line A
 - SMS 1145 thread
 - ISO 2853 thread, ISO2037
 - DIN 11864-1 Form A thread, DIN11866 line A
- VCO connections
 - 8-VCO-4
 - 12-VCO-4

 

 For information on the materials of the process connections →  152

Surface roughness

All data relate to parts in contact with fluid.

- Not polished
- $Ra_{max} = 0.8 \mu m$ (32 μin) mechanically polished
- $Ra_{max} = 0.4 \mu m$ (16 μin) mechanically polished







16.11 Operability

Local operation	Via display module	
	Order code for "Display; Operation", option C "SD02" <div data-bbox="742 365 1000 412">  </div>	Order code for "Display; Operation", option E "SD03" <div data-bbox="1029 365 1358 412">  </div>
	1 <i>Operation with pushbuttons</i>	1 <i>Operation with touch control</i>

Display elements

- 4-line display
- With order code for "Display; operation", option **E**:
White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F)
The readability of the display may be impaired at temperatures outside the temperature range.


Operating elements

- With order code for "Display; operation", option **C**:
Local operation with 3 push buttons:   
- With order code for "Display; operation", option **E**:
External operation via touch control; 3 optical keys:   
- Operating elements also accessible in various hazardous areas

Additional functionality

- Data backup function
The device configuration can be saved in the display module.
- Data comparison function
The device configuration saved in the display module can be compared to the current device configuration.
- Data transfer function
The transmitter configuration can be transmitted to another device using the display module.

Via remote display and operating module FHX50

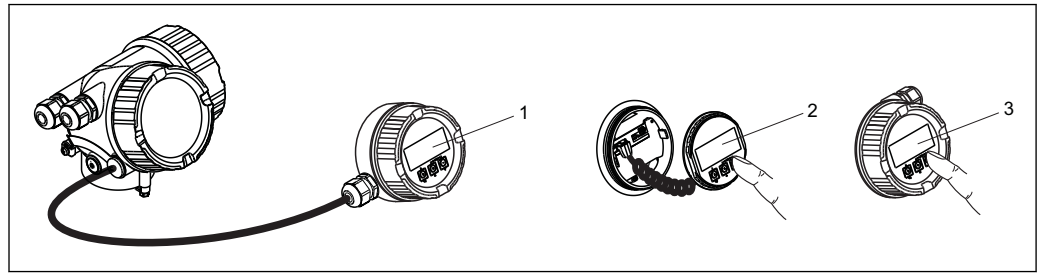

A0013137


35 Operating options via FHX50

- 1 Housing of remote display and operating module FHX50
- 2 SD02 display and operating module, push buttons: cover must be opened for operation
- 3 SD03 display and operating module, optical buttons: operation possible through cover glass

Remote operation

Via PROFIBUS PA network


This communication interface is available in device versions with PROFIBUS PA.

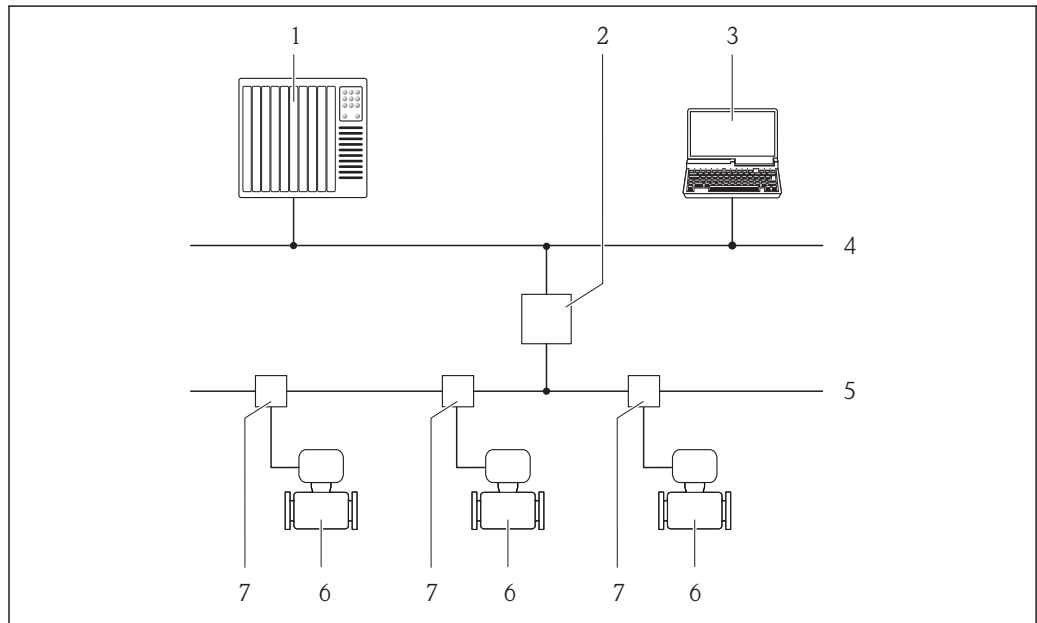

A0019013

36 Options for remote operation via PROFIBUS PA network

- 1 Automation system
- 2 Segment coupler PROFIBUS DP/PA
- 3 Computer with PROFIBUS network card
- 4 PROFIBUS DP network
- 5 PROFIBUS PA network
- 6 Measuring device
- 7 T-box

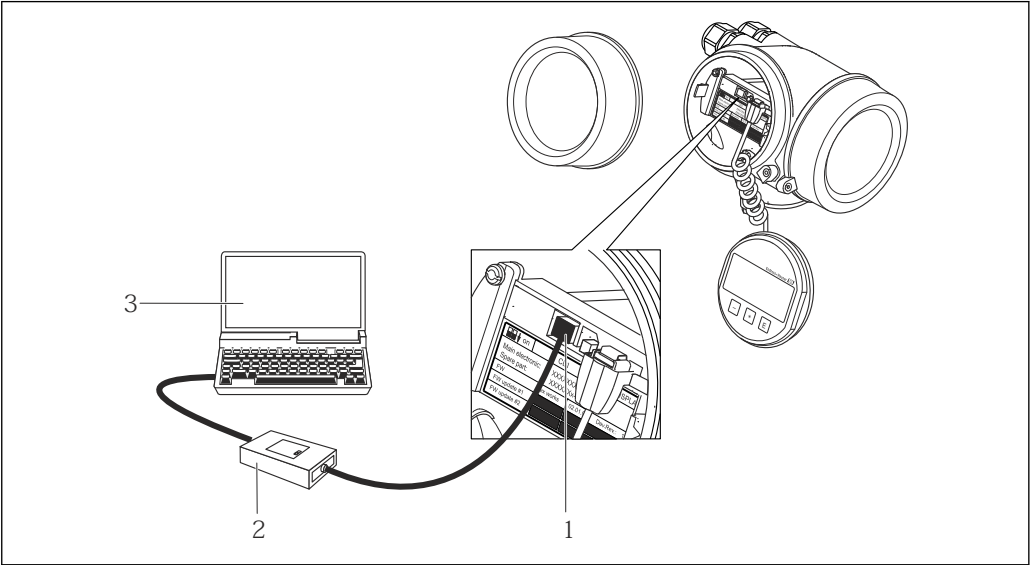Service interface	<div><div>Via service interface (CDI)</div><div><p>The diagram illustrates the connection of the measuring device's service interface (CDI) to a computer. A laptop (labeled 3) is connected via a cable to a Commubox FXA291 (labeled 2). The Commubox is then connected to the service interface (CDI) of the measuring device (labeled 1). An inset shows a close-up of the CDI interface with various ports and labels.</p></div><div><p>1 Service interface (CDI = Endress+Hauser Common Data Interface) of the measuring device</p><p>2 Commubox FXA291</p><p>3 Computer with "FieldCare" operating tool with COM DTM "CDI Communication FXA291"</p></div></div>
Languages	<p>Can be operated in the following languages:</p> <ul style="list-style-type: none">■ Via local display: English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Swedish, Turkish, Chinese, Japanese, Bahasa (Indonesian), Vietnamese, Czech■ Via "FieldCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese
<h2>16.12 Certificates and approvals</h2>	
CE mark	<p>The measuring system is in conformity with the statutory requirements of the applicable EC Directives. These are listed in the corresponding EC Declaration of Conformity along with the standards applied.</p> <p>Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.</p>
C-Tick symbol	<p>The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".</p>
Ex approval	<p>The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.</p>
Hygienic compatibility	<p>3A approval</p>

Certification PROFIBUS

PROFIBUS interface

The measuring device is certified and registered by the PROFIBUS User Organization (PNO). The measuring system meets all the requirements of the following specifications:

- Certified in accordance with PROFIBUS PA Profile 3.02
- The device can also be operated with certified devices of other manufacturers (interoperability)

Pressure Equipment Directive

- With the PED/G1/x (x = category) marking on the sensor nameplate, Endress+Hauser confirms compliance with the "Essential Safety Requirements" specified in Annex I of the Pressure Equipment Directive 97/23/EC.
- Devices not bearing this marking (PED) are designed and manufactured according to good engineering practice. They meet the requirements of Art.3 Section 3 of the Pressure Equipment Directive 97/23/EC. The range of application is indicated in tables 6 to 9 in Annex II of the Pressure Equipment Directive.



Other standards and guidelines

- EN 60529
Degrees of protection provided by enclosures (IP code)
- IEC/EN 60068-2-6
Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).
- IEC/EN 60068-2-31
Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices.
- EN 61010-1
Safety requirements for electrical equipment for measurement, control and laboratory use
- IEC/EN 61326
Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).
- IEC 61508
Functional safety of electrical/electronic/programmable electronic safety-related systems
- NAMUR NE 21
Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment
- NAMUR NE 32
Data retention in the event of a power failure in field and control instruments with microprocessors
- NAMUR NE 43
Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.
- NAMUR NE 53
Software of field devices and signal-processing devices with digital electronics
- NAMUR NE 80
The application of the pressure equipment directive to process control devices
- NAMUR NE 105
Specifications for integrating fieldbus devices in engineering tools for field devices
- NAMUR NE 107
Self-monitoring and diagnosis of field devices
- NAMUR NE 131
Requirements for field devices for standard applications
- NAMUR NE 132
Coriolis mass meter

16.13 Application packages



Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.


 Detailed information on the application packages:
Special Documentation on the device →  158

Diagnostics functions	Package	Description
	HistoROM extended function	<p>Comprises extended functions concerning the event log and the activation of the measured value memory.</p> <p>Event log: Memory volume is extended from 20 message entries (basic version) to up to 100 entries.</p> <p>Data logging (line recorder):</p> <ul style="list-style-type: none"> Memory capacity for up to 1000 measured values is activated. 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user. Data logging is visualized via the local display or FieldCare.
Heartbeat Technology	Package	Description
	Heartbeat Verification	<p>Heartbeat Verification: Makes it possible to check the device functionality on demand when the device is installed, without having to interrupt the process.</p> <ul style="list-style-type: none"> Access via local operation or other operating interfaces, such as FieldCare for instance. Documentation of device functionality within the framework of manufacturer specifications, for proof testing for instance. End-to-end, traceable documentation of the verification results, including report. Makes it possible to extend calibration intervals in accordance with operator's risk assessment.

16.14 Accessories

 Overview of accessories available for order →  136

16.15 Documentation

-  For an overview of the scope of the associated Technical Documentation, refer to the following:
- The CD-ROM provided for the device (depending on the device version, the CD-ROM might not be part of the delivery!)
 - The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
 - The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

Standard documentation

Brief Operating Instructions

Measuring device	Documentation code
Promass E 200	KA00050D

Technical Information

Measuring device	Documentation code
Promass E 200	TI01009D



Supplementary device-
dependent documentation**Safety Instructions**

Contents	Documentation code
ATEX/IECEX Ex i	XA00144D
ATEX/IECEX Ex d	XA00143D
ATEX/IECEX Ex nA	XA00145D
cCSAus IS	XA00151D
cCSAus XP	XA00152D
INMETRO Ex i	XA01300D
INMETRO Ex d	XA01305D
INMETRO Ex nA	XA01306D
NEPSI Ex i	XA00156D
NEPSI Ex d	XA00155D
NEPSI Ex nA	XA00157D

Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD00142D
Heartbeat Technology	SD01300D

Installation Instructions

Contents	Documentation code
Installation Instructions for spare part sets	 Overview of accessories available for order →  136

Index

A

Access authorization to parameters	
Read access	50
Write access	50
Access code	50
Incorrect input	50
Accuracy	144
Adapting the device status	109
Adapting the diagnostic behavior	110
Adapting the measured value status	109
Ambient temperature	
Influence	145
Ambient temperature range	21
Application	9, 138
Application packages	157
Applicator	139
Approvals	155

C

C-Tick symbol	155
Cable entries	
Technical data	143
Cable entry	
Degree of protection	35
CE mark	10, 155
Certificates	155
Certification PROFIBUS	156
Check	
Installation	25
Checklist	
Post-connection check	36
Post-installation check	25
Cleaning	
Cleaning in place (CIP)	132
Exterior cleaning	132
Interior cleaning	132
Sterilization in place (SIP)	132
Cleaning in place (CIP)	148
Climate class	147
Commissioning	62
Advanced settings	76
Configuring the measuring device	63
Compatibility with earlier model	55
Connecting cable	26
Connecting the measuring device	31
Connection	
see Electrical connection	
Connection preparations	31
Connection tools	26
Context menu	
Closing	45
Explanation	45
Opening	45
Current consumption	143
Cyclic data transmission	56

D

Declaration of Conformity	10
Define access code	93
Degree of protection	35, 148
Density	148
Design	
Measuring device	12
Design fundamentals	
Maximum measured error	146
Repeatability	146
Designated use	9
Device components	12
Device description files	55
Device documentation	
Supplementary documentation	8
Device locking, status	96
Device master file	
GSD	55
Device name	
Sensor	15
Transmitter	14
Device repair	133
Device revision	55
Device type ID	55
Diagnostic behavior	
Explanation	106
Symbols	106
Diagnostic information	
Design, description	106, 108
FieldCare	107
Local display	105
Overview	112
Remedial measures	112
Diagnostic list	126
Diagnostic message	105
Diagnostics	
Symbols	105
DIP switches	
see Write protection switch	
Direct access	47
Direct access code	42
Disabling write protection	93
Display	
Current diagnostic event	126
Previous diagnostic event	126
see Local display	
Display area	
For operational display	40
In the navigation view	42
Display values	
For locking status	96
Disposal	134
Document	
Function	6
Symbols used	6
Document function	6

Down pipe 19

E

Electrical connection
 Commubox FXA291 52, 155
 Degree of protection 35
 Measuring device 26
 Operating tools
 Via PROFIBUS PA network 51, 154
 Via service interface (CDI) 52, 155
 Electromagnetic compatibility 148
 Enabling write protection 93
 Endress+Hauser services
 Maintenance 132
 Repair 134
 Environment
 Storage temperature 147
 Error messages
 see Diagnostic messages
 Event history 127
 Events list 127
 Ex approval 155
 Extended order code
 Sensor 15
 Transmitter 14
 Exterior cleaning 132

F

Field of application
 Residual risks 10
 FieldCare 53
 Device description file 55
 Function 53
 User interface 53
 Filtering the event logbook 127
 Firmware
 Release date 55
 Version 55
 Firmware history 131
 Flow direction 20, 24
 Flow limit 149
 Function check 62
 Function scope
 SIMATIC PDM 54
 Functions
 see Parameter

G

Galvanic isolation 141

H

Hardware write protection 94
 Help text
 Calling up 48
 Close 48
 Explanation 48
 HistoROM 90
 Hygienic compatibility 155

I

I/O electronics module 12, 31
 Identifying the measuring device 13
 Incoming acceptance 13
 Influence
 Ambient temperature 145
 Medium pressure 146
 Medium temperature 145
 Information on the document 6
 Inlet runs 21
 Input 138
 Input mask 43
 Inspection
 Received goods 13
 Inspection check
 Connection 36
 Installation 19
 Installation conditions
 Down pipe 19
 Mounting location 19
 Orientation 20
 Rupture disk 23
 System pressure 21
 Thermal insulation 21
 Vibrations 22
 Installation dimensions 21
 Interior cleaning 132, 148

K

Keypad lock
 Disabling 50
 Enabling 50

L

Languages, operation options 155
 Line recorder 100
 Local display 153
 Editing view 43
 Navigation view 41
 see Diagnostic message
 see In alarm condition
 see Operational display
 Low flow cut off 141

M

Main electronics module 12
 Maintenance tasks 132
 Managing the device configuration 90
 Manufacturer ID 55
 Manufacturing date 14, 15
 Materials 150
 Maximum measured error 144
 Measured variables
 see Process variables
 Measuring and test equipment 132
 Measuring device
 Configuration 63
 Conversion 133
 Design 12

Disposal	135
Mounting the sensor	24
Preparing for electrical connection	31
Preparing for mounting	24
Removing	134
Repair	133
Switch-on	62
Measuring principle	138
Measuring range	
Calculation example for gas	139
For gases	139
For liquids	138
Measuring range, recommended	149
Measuring system	138
Media	9
Medium pressure	
Influence	146
Medium temperature	
Influence	145
Menu	
Diagnostics	126
Operation	96
Setup	64
Menus	
For measuring device configuration	63
For specific settings	76
Mounting dimensions	
see Installation dimensions	
Mounting location	19
Mounting preparations	24
Mounting requirements	
Inlet and outlet runs	21
Installation dimensions	21
Sensor heating	22
Mounting tools	23
N	
Nameplate	
Sensor	15
Transmitter	14
Navigation path (navigation view)	41
Navigation view	
In the submenu	41
In the wizard	41
Nominal pressure	
Secondary containment	148
Numeric editor	43
O	
Operable flow range	139
Operating elements	45, 106
Operating keys	
see Operating elements	
Operating menu	
Menus, submenus	38
Structure	38
Submenus and user roles	39
Operating philosophy	39
Operation	96

Operation options	37
Operational display	40
Operational safety	10
Order code	14, 15
Orientation (vertical, horizontal)	20
Outlet runs	21
Output	140
Output signal	140

P

Packaging disposal	18
Parameter	
Changing	49
Enter a value	49
Parameter settings	
Administration (Submenu)	89, 129
Analog inputs (Submenu)	75
Communication (Submenu)	69
Configuration backup display (Submenu)	90
Data logging (Submenu)	100
Device information (Submenu)	129
Diagnostics (Menu)	126
Display (Submenu)	87
Display (Wizard)	69
Low flow cut off (Wizard)	72
Operation (Submenu)	99
Output values (Submenu)	98
Partially filled pipe detection (Wizard)	74
Process variables (Submenu)	96
Pulse/frequency/switch output (Wizard)	78, 80, 83
Select medium (Submenu)	68
Sensor adjustment (Submenu)	77
Setup (Menu)	64
Simulation (Submenu)	91
System units (Submenu)	65
Totalizer 1 to 3 (Submenu)	85, 97
Performance characteristics	144
Post-connection check (checklist)	36
Post-installation check	62
Post-installation check (checklist)	25
Potential equalization	33
Power consumption	143
Power supply failure	143
Pressure Equipment Directive	156
Pressure loss	149
Pressure-temperature ratings	148
Process connections	152
Process variables	
Calculated	138
Measured	138
Product safety	10
Protecting parameter settings	93
R	
Read access	50
Reading measured values	96
Recalibration	132
Reference operating conditions	144
Registered trademarks	8

Remedial measures	
Calling up	107
Closing	107
Remote operation	154
Repair	133
Notes	133
Repair of a device	133
Repeatability	145
Replacement	
Device components	133
Requirements for personnel	9
Response time	145
Return	134
Rupture disk	
Safety instructions	23
Triggering pressure	148
S	
Safety	9
Seals	
Medium temperature range	148
Sensor	
Medium temperature range	148
Mounting	24
Sensor heating	22
Serial number	14, 15
Setting the operating language	62
Settings	
Adapting the measuring device to the process	
conditions	99
Administration	89
Advanced display configurations	87
Analog input	75
Communication interface	69
Device reset	129
Device tag	64
Local display	69
Low flow cut off	72
Managing the device configuration	90
Medium	68
Operating language	62
Partial filled pipe detection	74
Pulse output	78
Pulse/frequency/switch output	77, 80
Resetting the totalizer	99
Sensor adjustment	77
Simulation	91
Switch output	83
System units	65
Totalizer	85
Totalizer reset	99
Shock resistance	148
Showing data logging	100
Signal on alarm	141
SIMATIC PDM	54
Function	54
Software release	55
Spare part	133
Spare parts	133

Special connection instructions	34
Standards and guidelines	156
Status area	
For operational display	40
In the navigation view	42
Status signals	105
Sterilization in place (SIP)	148
Storage conditions	17
Storage temperature	17
Storage temperature range	147
Structure	
Operating menu	38
Submenu	
Administration	89, 129
Advanced setup	76
Analog inputs	75
Communication	62, 69
Configuration backup display	90
Data logging	100
Device information	129
Display	87
Events list	127
Operation	99
Output values	98
Overview	39
Process variables	96
Select medium	68
Sensor adjustment	77
Simulation	91
System units	65
Totalizer 1 to 3	85, 97
Supply unit	
Requirements	31
Supply voltage	31, 143
Surface roughness	152
Symbols	
For communication	40
For correction	43
For diagnostic behavior	40
For locking	40
For measured variable	40
For measurement channel number	40
For menus	42
For parameters	42
For status signal	40
For submenu	42
For wizard	42
In the status area of the local display	40
In the text and numeric editor	43
System design	
Measuring system	138
see Measuring device design	
System integration	55
System pressure	21
T	
Technical data, overview	138
Temperature range	
Ambient temperature range for display	153

Medium temperature	148
Storage temperature	17
Terminal assignment	29, 31
Terminals	143
Text editor	43
Thermal insulation	21
Tool tip	
see Help text	
Tools	
Electrical connection	26
Installation	23
Transport	17
Transmitter	
Connecting the signal cables	31
Turning the display module	24
Turning the housing	24
Transporting the measuring device	17
Troubleshooting	
General	103
Turning the display module	24
Turning the electronics housing	
see Turning the transmitter housing	
Turning the transmitter housing	24
U	
Use of the measuring device	
Borderline cases	9
Incorrect use	9
see Designated use	
User roles	39
V	
Version data for the device	55
Vibration resistance	148
Vibrations	22
W	
W@M	132, 133
W@M Device Viewer	13, 133
Weight	
SI units	150
Transport (notes)	17
US units	150
Wizard	
Define access code	93
Display	69
Low flow cut off	72
Partially filled pipe detection	74
Pulse/frequency/switch output	78, 80, 83
Workplace safety	10
Write access	50
Write protection	
Via access code	93
Via write protection switch	94
Write protection switch	94

www.addresses.endress.com
