
01.01.zz (Device firmware)

Products

Operating Instructions **Proline Promass X 500 FOUNDATION Fieldbus**

Coriolis flowmeter

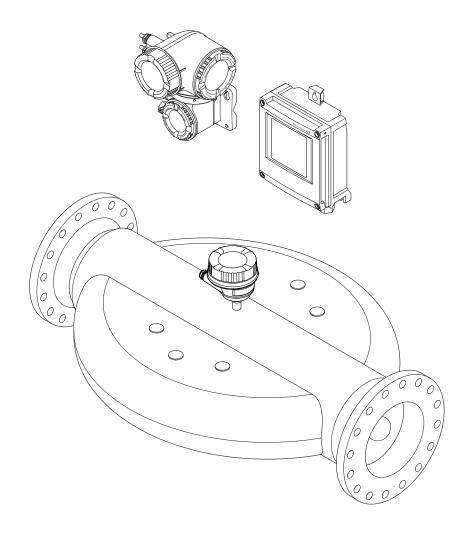





- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

Table of contents

Document information 6	6	Installation	22
Document function6Symbols used61.2.1 Safety symbols61.2.2 Electrical symbols6	6.1	Installation conditions	22 24
1.2.4 Tool symbols	6.2	Mounting the measuring device 6.2.1 Required tools	29 29
1.2.6 Symbols in graphics		6.2.2 Preparing the measuring device6.2.3 Mounting the measuring device6.2.4 Mounting the transmitter housing:	
1.3.1 Standard documentation 8 1.3.2 Supplementary device-dependent		Proline 500 – digital	
Registered trademarks		6.2.6 Turning the transmitter housing:	
Basic safety instructions 10		6.2.7 Turning the display module: Proline	
Requirements for the personnel	6.3	Post-installation check	
	7	Electrical connection	35
Product safety	7.1	Connection conditions	
IT security			
2.7.1 Protecting access via hardware write		7.1.3 Terminal assignment	38
			38 39
3 1			
2.7.4 Access via Web server	7.2	Connecting the measuring device	40 40
Product description 14		7.2.2 Connecting the signal cable and the	44
Product design	7.3		46
3.1.1 Proline 500 – digital		7.3.1 Connecting the connecting cable7.3.2 Connecting the signal cable and the	46
Incoming acceptance and product	7.4		49 51
		7.4.1 Requirements	
	7.5	Special connection instructions	
	/./	Post-connection check	ככ
4.2.3 Symbols on measuring device 20	8	Operation options	56
Storage and transport	8.1	Overview of operation options	56
_	8.2	· · · · · · · · · · · · · · · · · · ·	
			57 57
5.2.1 Measuring devices without lifting			58
lugs	8.3	Access to the operating menu via the local	- 0
5 5		display	59
1 3		8.3.1 Operational display	59
Packaging disposal		8.3.2 Navigation view	61 63
	Document function 6 Symbols used 6 1.2.1 Safety symbols 6 1.2.2 Electrical symbols 6 1.2.3 Communication symbols 6 1.2.4 Tool symbols 7 1.2.5 Symbols for certain types of information 7 1.2.6 Symbols in graphics 7 Documentation 8 1.3.1 Standard documentation 8 1.3.2 Supplementary device-dependent documentation 8 Registered trademarks 9 Basic safety instructions 10 Requirements for the personnel 10 Designated use 10 Workplace safety 11 Operational safety 11 Product safety 11 IT security 12 2.7.1 Protecting access via hardware write protection 12 2.7.2 Protecting access via a password 12 2.7.3 Access via Web server 13 Product description 14	Document function	Document function 6 6 Symbols used 6 6 Symbols used 6 6 Symbols used 6 6 1.2.1 Sefety symbols 6 6 1.2.2 Electrical symbols 6 6 1.2.3 Communication symbols 6 6 1.2.4 Tool symbols 7 1.2.5 Symbols for certain types of information 7 7 1.2.6 Symbols in graphics 7 7 1.2.5 Symbols in graphics 7 7 1.2.6 Symbols in graphics 7 8 1.3.1 Standard documentation 8 13.3.2 Supplementary device-dependent 40 cumentation 8 13.3.2 Supplementary device-dependent 40 cumentation 8 13.3 Symbols in graphics 8 10 10 10 10 10 10 10 10 10 10 10 10 10

	8.3.4	Operating elements	64		10.5.12 Configuring the low flow cut off	117
	8.3.5	Opening the context menu			10.5.13 Configuring the partial filled pipe	'
	8.3.6	Navigating and selecting from list	67		detection	118
	8.3.7	Calling the parameter directly	67	10.6	Advanced settings	119
	8.3.8	Calling up help text	68		10.6.1 Using the parameter to enter the	
	8.3.9	Changing the parameters	69		access code	120
	8.3.10	User roles and related access			10.6.2 Calculated values	
		authorization	70		10.6.3 Carrying out a sensor adjustment	
	8.3.11				10.6.4 Configuring the totalizer	122
		code	70		10.6.5 Carrying out additional display	
	8.3.12	Enabling and disabling the keypad			configurations	124
	0.5.11	lock	70		10.6.6 WLAN configuration	
3.4	Access	to the operating menu via the Web			10.6.7 Configuration management	
J. 1		r	71		10.6.8 Using parameters for device	120
	8.4.1	Function range	71		administration	129
	8.4.2	Prerequisites	71	10.7	Simulation	
	8.4.3	Establishing a connection	73	10.8	Protecting settings from unauthorized	
	8.4.4	Logging on	75	10.0	access	134
	8.4.5	User interface	76		10.8.1 Write protection via access code	134
	8.4.6	Disabling the Web server			10.8.2 Write protection via write protection	101
	8.4.7	Logging out				135
3.5		to the operating menu via the	, ,		10.8.3 Write protection via block	1))
3.2		ng tool	77		operation	137
	8.5.1	Connecting the operating tool	78		operation	1)/
	8.5.2	Field Xpert SFX350, SFX370	80		•	100
	8.5.3	FieldCare	81	11	Operation	138
	8.5.4	DeviceCare	82	11.1	Reading the device locking status	138
	8.5.5	AMS Device Manager	82	11.2	Adjusting the operating language	
	8.5.6	Field Communicator 475		11.3	Configuring the display	138
	0.5.0	riela Communicator 475	ر ل	11.4	Reading measured values	138
_			<u> </u>		11.4.1 "Measured variables" submenu	139
9	Syster	m integration	84		11.4.2 "Totalizer" submenu	140
9.1	Overvie	ew of device description files	84		11.4.3 "Input values" submenu	141
	9.1.1	Current version data for the device			11.4.4 Output values	142
	9.1.2	Operating tools	84	11.5	Adapting the measuring device to the process	
9.2	Cyclic d	lata transmission	84		conditions	144
	9.2.1	Block model	84	11.6	Performing a totalizer reset	144
	9.2.2	Description of the modules	85		11.6.1 Function scope of the "Control	
	9.2.3	Execution times	88		Totalizer" parameter	145
	9.2.4	Methods			11.6.2 Function scope of the "Reset all	
					totalizers" parameter	145
10	Comm	nissioning	an l	11.7	Showing data logging	145
					3 33 3	
10.1		on check	90	12	Diagnostics and troubleshooting	148
10.2		ng on the measuring device	90			
10.3		ting via FieldCare	90	12.1	General troubleshooting	148
10.4	_	1 3 3 3	90	12.2	Diagnostic information via light emitting	
10.5		3	91		diodes	150
		Defining the tag name	92		12.2.1 Transmitter	150
		Setting the system units	92		12.2.2 Sensor connection housing	152
		Selecting and setting the medium	95	12.3	Diagnostic information on local display	154
		Configuring the analog inputs	97		12.3.1 Diagnostic message	154
		Displaying the I/O configuration	97		12.3.2 Calling up remedial measures	156
	10.5.6	Configuring the current input	98	12.4	Diagnostic information in the Web browser .	156
		Configuring the status input	99		12.4.1 Diagnostic options	156
	10.5.8	Configuring the current output	100		12.4.2 Calling up remedy information	157
	10.5.8		100	12.5	Diagnostic information in DeviceCare or	157
	10.5.8	Configuring the current output Configuring the pulse/frequency/	100 103	12.5		157157
	10.5.8 10.5.9 10.5.10	Configuring the current output Configuring the pulse/frequency/ switch output		12.5	Diagnostic information in DeviceCare or	

12.6	Adapting the diagnostic information 12.6.1 Adapting the diagnostic behavior 12.6.2 Adapting the status signal	159 159 159
12.7	Overview of diagnostic information	163 164 166 172 179
12.8 12.9	Pending diagnostic events Diagnostic messages in the DIAGNOSTIC Transducer Block	184 185
	Diagnostic list	185 186 186 187 187
12.12	Resetting the measuring device	188 188
12.13	Device information	189
	Firmware history	190
13	Maintenance	191
13.1	Maintenance tasks	191 191
13.2	Measuring and test equipment	191
13.3	Endress+Hauser services	191
14	Repairs	192
14.1 14.2 14.3 14.4 14.5	General notes	192 192 192 192 192 193 193 193
15	Accessories	194
15.1	Device-specific accessories	194 194 195
15.2	Communication-specific accessories	195
15.3 15.4	Service-specific accessories	195 196
16	Technical data	197
16.1 16.2 16.3 16.4 16.5 16.6 16.7 16.8	Application	197 197 198 200 206 207 211 211

Index	ζ	226
16.15	Supplementary documentation	224
16.14	Accessories	224
16.13	Application packages	223
16.12	Certificates and approvals	221
16.11	Operability	217
16.10	Mechanical construction	214
16.9	Process	Z I Z

1 Document information

1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols used

1.2.1 Safety symbols

Symbol	Meaning
▲ DANGER	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
A WARNING	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
▲ CAUTION	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
NOTICE	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols

Symbol	Meaning
===	Direct current
~	Alternating current
$\overline{\sim}$	Direct current and alternating current
<u></u>	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.
♦	Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.

1.2.3 Communication symbols

Symbol	Meaning
	Wireless Local Area Network (WLAN) Communication via a wireless, local network.
*	Bluetooth Wireless data transmission between devices over a short distance.

Symbol	Meaning
•	LED Light emitting diode is off.
<u>\</u>	LED Light emitting diode is on.
×	LED Light emitting diode is flashing.

1.2.4 Tool symbols

Symbol	Meaning
O	Torx screwdriver
96	Phillips head screwdriver
Ó	Open-ended wrench

1.2.5 Symbols for certain types of information

Symbol	Meaning
✓	Permitted Procedures, processes or actions that are permitted.
✓ ✓	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
(A)	Reference to documentation
A=	Reference to page
	Reference to graphic
>	Notice or individual step to be observed
1., 2., 3	Series of steps
L _P	Result of a step
?	Help in the event of a problem
	Visual inspection

1.2.6 Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections

Symbol	Meaning
EX	Hazardous area
×	Safe area (non-hazardous area)
≋➡	Flow direction

1.3 Documentation

- For an overview of the scope of the associated Technical Documentation, refer to the following:
 - The W@M Device Viewer: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
 - The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.
- For a detailed list of the individual documents along with the documentation code $\Rightarrow \stackrel{\cong}{=} 224$

1.3.1 Standard documentation

Document type	Purpose and content of the document
Technical Information	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Sensor Brief Operating Instructions	Guides you quickly to the 1st measured value - Part 1 The Sensor Brief Operating Instructions are aimed at specialists with responsibility for installing the measuring device.
	 Incoming acceptance and product identification Storage and transport Installation
Transmitter Brief Operating Instructions	Guides you quickly to the 1st measured value - Part 2 The Transmitter Brief Operating Instructions are aimed at specialists with responsibility for commissioning, configuring and parameterizing the measuring device (until the first measured value).
	 Product description Installation Electrical connection Operation options System integration Commissioning Diagnostic information
Description of Device Parameters	Reference for your parameters The document provides a detailed explanation of each individual parameter in the Expert operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

FOUNDATIONTM Fieldbus

Registration-pending trademark of the FieldComm Group, Austin, Texas, USA

 $Applicator^{\$}, FieldCare^{\$}, DeviceCare^{\$}, Field~Xpert^{TM}, HistoROM^{\$}, Heartbeat~Technology^{TM}$

Registered or registration-pending trademarks of the Endress+Hauser Group

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ► Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ► Are authorized by the plant owner/operator.
- ► Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ► Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Designated use

Application and media

The measuring device described in these Brief Operating Instructions is intended only for flow measurement of liquids and gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ► Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential: "Documentation" section. → 🖺 8.
- ► Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

WARNING

Danger of breakage due to corrosive or abrasive fluids!

- ► Verify the compatibility of the process fluid with the sensor material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- Keep within the specified pressure and temperature range.

NOTICE

Verification for borderline cases:

► For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks

WARNING

The electronics and the medium may cause the surfaces to heat up. This presents a burn hazard!

► For elevated fluid temperatures, ensure protection against contact to prevent burns.

A WARNING

Danger of housing breaking due to measuring tube breakage!

▶ In the event of a measuring tube breakage for a device version without rupture disk it is possible for the pressure loading capacity of the sensor housing to be exceeded. This can lead to rupture or failure of the sensor housing.

2.3 Workplace safety

For work on and with the device:

► Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

▶ Due to the increased risk of electric shock, gloves must be worn.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- ► Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

2.6 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

2.7 Device-specific IT security

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater inoperation safety if used correctly. An overview of the most important functions is provided in the following section.

2.7.1 Protecting access via hardware write protection

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the motherboard). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered $\rightarrow \triangleq 135$.

2.7.2 Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

- User-specific access code
 Protect write access to the device parameters via the local display, Web browser or
 operating tool (e.g. FieldCare, DeviceCare). Is equivalent to hardware write protection in
 terms of functionality.
- WLAN passphrase The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.

User-specific access code

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code ($\rightarrow \blacksquare 134$).

When the device is delivered, the device does not have an access code and is equivalent to 0000 (open).

WLAN passphrase

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface ($\rightarrow \boxminus 79$) which can be ordered as an option is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter $(\rightarrow \blacksquare 127)$.

General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning.
- Follow the general rules for generating a secure password when defining and managing the access code or network key.
- The user is responsible for the management and careful handling of the access code and network key.
- For information on configuring the access code or on what to do if you lose the password, see the "Write protection via access code" section $\rightarrow \implies 134$

2.7.3 Access via fieldbus

When communicating via fieldbus, access to the device parameters can be restricted to "Read only" access. The option can be changed in the **Fieldbus writing access** parameter.

This does not affect cyclic measured value transmission to the higher-order system, which is always quaranteed.



For detailed information, see the "Description of Device Parameters" document pertaining to the device $\rightarrow \triangleq 225$

2.7.4 Access via Web server

The device can be operated and configured via a Web browser with the integrated Web server (). The connection is via the service interface (CDI-RJ45) or the WLAN interface.

The Web server is enabled when the device is delivered. The Web server can be disabled if necessary (e.g. after commissioning) via the **Web server functionality** parameter.

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.



For detailed information, see the "Description of Device Parameters" document pertaining to the device $\rightarrow \triangleq 225$

3 Product description

The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by one connecting cable(s).

3.1 Product design

Two versions of the transmitter are available.

3.1.1 Proline 500 – digital


Signal transmission: digital

Order code for "Integrated ISEM electronics", option A "Sensor"

For use in applications not required to meet special requirements due to ambient or operating conditions.

As the electronics are located in the sensor, the device is ideal: For simple transmitter replacement.

- A standard cable can be used as the connecting cable.
- Not sensitive to external EMC interference.

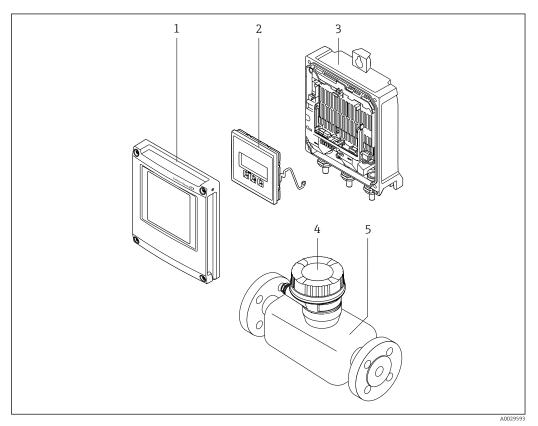

- \blacksquare 1 Important components of a measuring device
- 1 Electronics compartment cover
- 2 Display module
- 3 Transmitter housing
- 4 Sensor connection housing with integrated ISEM electronics: connecting cable connection
- 5 Sensoi

3.1.2 Proline 500


Signal transmission: analog

Order code for "Integrated ISEM electronics", option **B** "Transmitter"

For use in applications required to meet special requirements due to ambient or operating conditions.

As the electronics are located in the transmitter, the device is ideal in the event of:

- Strong vibrations at the sensor.
- Sensor operation in underground installations.
- Permanent sensor immersion in water.

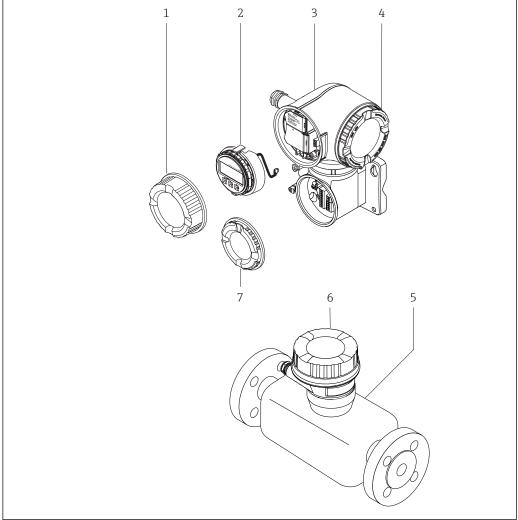


A0029589

■ 2 Important components of a measuring device

- 1 Connection compartment cover
- 2 Display module
- 3 Transmitter housing with integrated ISEM electronics
- 4 Electronics compartment cover
- 5 Sensor
- 6 Sensor connection housing: connecting cable connection
- 7 Connection compartment cover: connecting cable connection

4 Incoming acceptance and product identification

4.1 Incoming acceptance

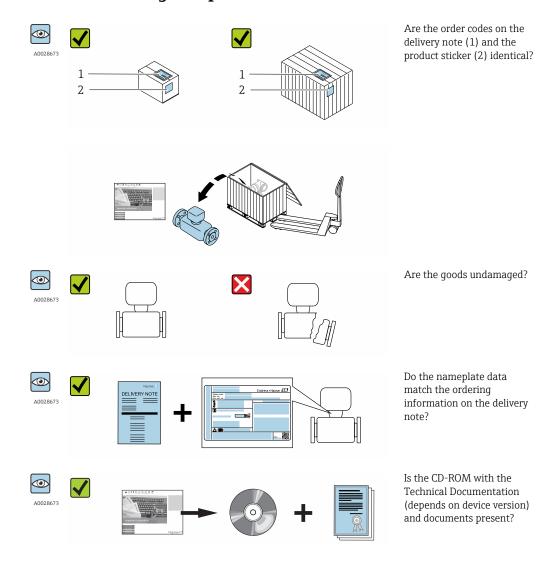

- If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
 - Depending on the device version, the CD-ROM might not be part of the delivery! The Technical Documentation is available via the Internet or via the Endress+Hauser Operations App, see the "Product identification" section → 17.

4.2 Product identification

The following options are available for identification of the measuring device:


- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" \rightarrow \blacksquare 8 and "Supplementary device-dependent documentation" \rightarrow \blacksquare 8
- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

4.2.1 Transmitter nameplate


Proline 500 - digital

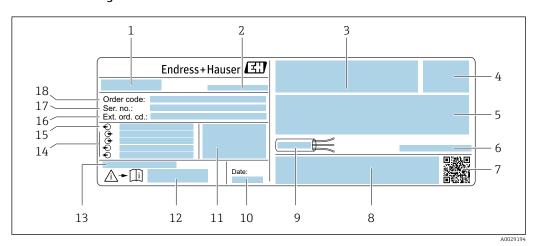

■ 3 Example of a transmitter nameplate

- 1 Name of the transmitter
- 2 Manufacturing location
- 3 Space for approvals: use in hazardous areas
- 4 Degree of protection
- 5 Electrical connection data: available inputs and outputs
- 6 Permitted ambient temperature (T_a)
- 7 2-D matrix code
- 8 Space for approvals and certificates: e.g. CE mark, C-Tick
- 9 Permitted temperature range for cable
- 10 Manufacturing date: year-month
- 11 Firmware version (FW) and device revision (Dev.Rev.) from the factory
- 12 Document number of safety-related supplementary documentation
- 13 Space for additional information in the case of special products
- 14 Available inputs and outputs, supply voltage
- 15 Electrical connection data: supply voltage
- 16 Extended order code (Ext. ord. cd.)
- 17 Serial number (ser. no.)
- 18 Order code

Proline 500

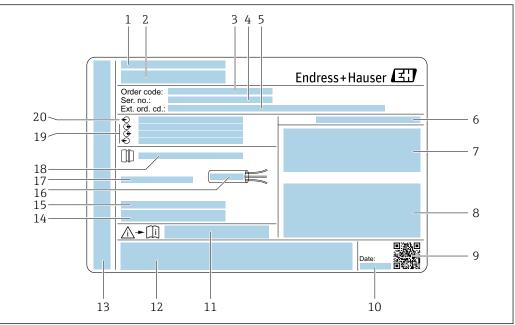


A0029192

■ 4 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Degree of protection
- 7 Space for approvals: use in hazardous areas
- 8 Electrical connection data: available inputs and outputs
- 9 2-D matrix code
- 10 Manufacturing date: year-month
- 11 Document number of safety-related supplementary documentation
- 12 Space for approvals and certificates: e.g. CE mark, C-Tick
- 13 Space for degree of protection of connection and electronics compartment when used in hazardous areas
- 14 Firmware version (FW) and device revision (Dev.Rev.) from the factory
- 15 Space for additional information in the case of special products
- 16 Permitted temperature range for cable
- 17 Permitted ambient temperature (T_a)
- 18 Information on cable gland
- 19 Available inputs and outputs, supply voltage
- 20 Electrical connection data: supply voltage

18

4.2.2 Sensor nameplate

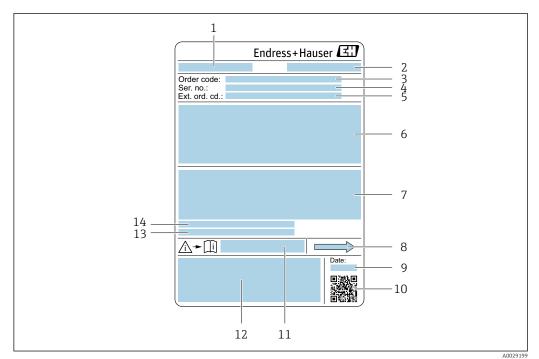

Example of a sensor nameplate

- 1 Name of the sensor
- 2 Manufacturing location
- 3 Order code

₩ 5

- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Nominal diameter of the sensor; flange nominal diameter/nominal pressure; sensor test pressure; medium temperature range; material of measuring tube and manifold; sensor-specific information: e.g. pressure range of secondary containment, wide-range density specification (special density calibration)
- 7 Approval information for explosion protection, Pressure Equipment Directive and degree of protection
- 8 Flow direction
- 9 Manufacturing date: year-month
- 10 2-D matrix code
- 11 Document number of safety-related supplementary documentation
- 12 CE mark, C-Tick
- 13 Surface roughness
- 14 Permitted ambient temperature (T_a)

Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approvalrelated specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

4.2.3 Symbols on measuring device

Symbol	Meaning
Δ	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
[]i	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.

5 Storage and transport

5.1 Storage conditions


Observe the following notes for storage:

- Store in the original packaging to ensure protection from shock.
- Do not remove protective covers or protective caps installed on process connections.
 They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- Protect from direct sunlight to avoid unacceptably high surface temperatures.
- Store in a dry and dust-free place.
- Do not store outdoors.

Storage temperature → 🗎 211

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

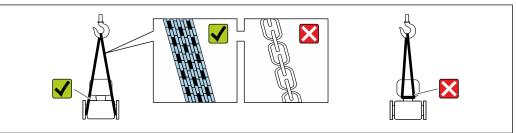

A0029252

Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

A WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ► Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

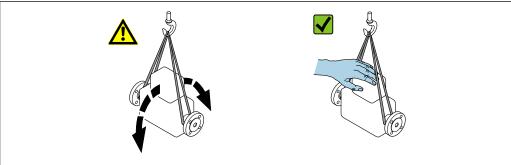

A0029214

5.2.2 Measuring devices with lifting lugs

A CAUTION

Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ► The device must always be secured at two lifting lugs at least.

5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:

- Measuring device secondary packaging: polymer stretch film that conforms to EC Directive 2002/95/EC (RoHS).
- Packaging:
 - $\,$ Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
 - Carton in accordance with European Packaging Directive 94/62EC; recyclability is confirmed by the affixed RESY symbol.
- Seaworthy packaging (optional): Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
- Carrying and mounting hardware:
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Dunnage: Paper cushion


6 Installation

6.1 Installation conditions

No special measures such as supports are necessary. External forces are absorbed by the construction of the device.

6.1.1 Mounting position

Mounting location

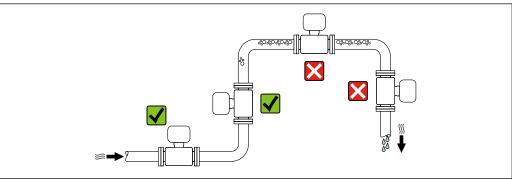

A002877


22

To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

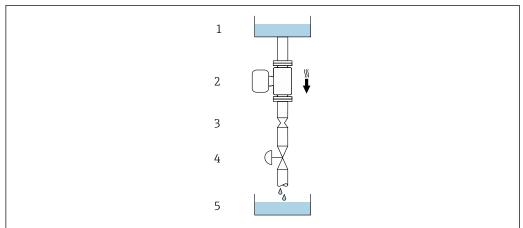

A002877

- 6 Installation in a down pipe (e.g. for batching applications)
- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Batching tank

DN		Ø orifice plate, pipe restriction	
[mm]	[in]	[mm]	[in]
300	12	210	8.27
350	14	210	8.27
400	16	210	8.27


Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

Orientation		Recommendation	
A	Vertical orientation	A0015591	
В	Horizontal orientation, transmitter at top	A0015589	✓ ✓ ¹) → • 7, • 24

Orientation		Recommendation	
С	Horizontal orientation, transmitter at bottom	A0015590	✓ ✓ ²⁾ → 2 7, 2 24
D	Horizontal orientation, transmitter at side	A0015592	⊘ → ② 7, ③ 24

- Applications with low process temperatures may decrease the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 2) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

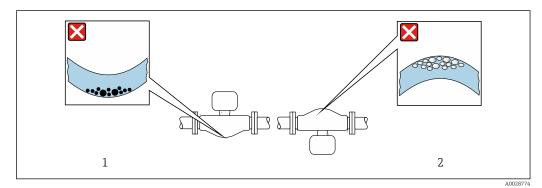

■ 7 Orientation of sensor with curved measuring tube

- 1 Avoid this orientation for fluids with entrained solids: Risk of solids accumulating.
- 2 Avoid this orientation for outgassing fluids: Risk of gas accumulating.

Inlet and outlet runs



Installation dimensions

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

6.1.2 Requirements from environment and process

Ambient temperature range

For detailed information on the ambient temperature range, see the Operating Instructions for the device.

If operating outdoors:

- Install the measuring device in a shady location.
- Avoid direct sunlight, particularly in warm climatic regions.
- Avoid direct exposure to weather conditions.

Temperature tables



For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

System pressure

 
It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas.

Cavitation is caused if the pressure drops below the vapor pressure:

- In liquids that have a low boiling point (e.g. hydrocarbons, solvents, liquefied gases)
- In suction lines
- ► Ensure the system pressure is sufficiently high to prevent cavitation and outgassing.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

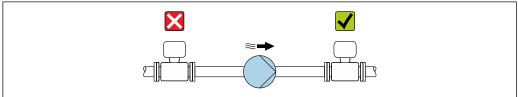

A0020777

Thermal insulation

In the case of some fluids, it is important that the heat radiated from the sensor to the transmitter is kept to a minimum. A wide range of materials can be used for the required insulation.

NOTICE

Electronics overheating on account of thermal insulation!

► Observe maximum permitted insulation height of the transmitter neck so that the transmitter head is completely free.

NOTICE

Danger of overheating with insulation


 \blacktriangleright Ensure that the temperature at the lower end of the sensor housing does not exceed 80 °C (176 °F)

NOTICE

The insulation can also be thicker than the maximum recommended insulation thickness.

Prerequisite:


- ► Ensure that convection takes place on a sufficiently large scale at the transmitter neck.
- ► Ensure that a sufficiently large area of the housing support remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.

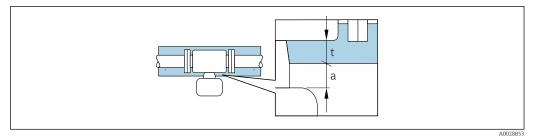

- t Maximum insulation thickness
- a Minimum distance to insulation

The minimum distance a between the sensor connection housing and the insulation is 10 mm (0.39 in). This is to ensure that the sensor connection housing remains completely exposed.

Maximum recommended insulation thickness for the extended temperature range or insulation

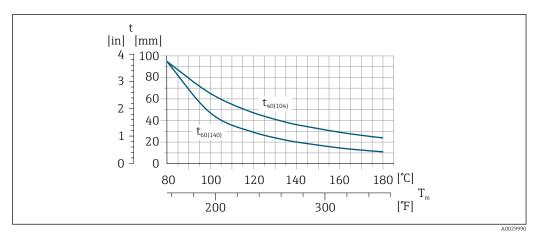

 \blacksquare 8 Maximum recommended insulation thickness (t) depending on the temperature of the medium (T) and the ambient temperature (T_a)

- t Insulation thickness
- T Medium temperature
- t40 $t_{40(104)}$ = Maximum recommended insulation thickness at T_a = 40 °C (104 °F)
- t60 $t_{60(140)}$ = Maximum recommended insulation thickness at T_a = 60 °C (140 °F)

Heating

NOTICE

Electronics can overheat due to elevated ambient temperature!

- ▶ Observe maximum permitted ambient temperature for the transmitter .
- ▶ Depending on the fluid temperature, take the device orientation requirements into account .
- Under critical climatic conditions, in particular, it is important to ensure that the temperature difference between the ambient temperature and the fluid temperature is not >100 K. Suitable measures must be taken, such as heating or insulation.

NOTICE

Danger of overheating when heating

- ▶ Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 $^{\circ}$ C (176 $^{\circ}$ F).
- ▶ Ensure that convection takes place on a sufficiently large scale at the transmitter neck.
- ► Ensure that a sufficiently large area of the housing support remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.

Heating options

If a fluid requires that no heat loss should occur at the sensor, users can avail of the following heating options:

- Electrical heating, e.g. with electric band heaters
- Via pipes carrying hot water or steam
- Via heating jackets

Using an electrical trace heating system

If heating is regulated via phase angle control or pulse packages, magnetic fields can affect the measured values (= for values that are greater than the values permitted by the EN standard (sine 30 A/m)).

For this reason, the sensor must be magnetically shielded: the housing can be shielded with tin plates or electric sheets without a privileged direction (e.g. V330-35A).

The sheet must have the following properties:

- Relative magnetic permeability $\mu r \ge 300$
- Plate thickness $d \ge 0.35$ mm ($d \ge 0.014$ in)

Vibrations

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

6.1.3 Special mounting instructions

Rupture disk

Information that is relevant to the process: $\rightarrow \Box 213$.

A WARNING

 
Limited functional reliability of the rupture disk.

Danger to persons from escaping fluids!

- ▶ Do not remove the rupture disk.
- ▶ When using a rupture disk, do not use a heating jacket.
- ► Make sure that the function and operation of the rupture disk is not impeded through the installation of the device.
- ► Take precautions to prevent damage and danger to persons if the rupture disk is actuated.
- ▶ Observe information on the rupture disk sticker.


The position of the rupture disk is indicated on a sticker beside it.

The transportation guard must be removed.

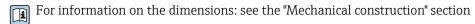

The existing connecting nozzles are not intended for the purpose of rinsing or pressure monitoring, but instead serve as the mounting location for the rupture disk.

In the event of a failure of the rupture disk, a discharge device can be screwed onto the internal thread of the rupture disk in order to drain off any escaping medium.

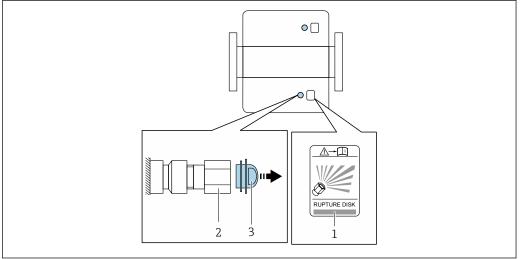

A002994

- 1 Rupture disk label
- 2 Rupture disk with 1/2" NPT internal thread with 1" width across flat
- *3 Transport protection*


Zero point adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions $\Rightarrow \triangleq 207$. Therefore, a zero point adjustment in the field is generally not required.


Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

Protective cover

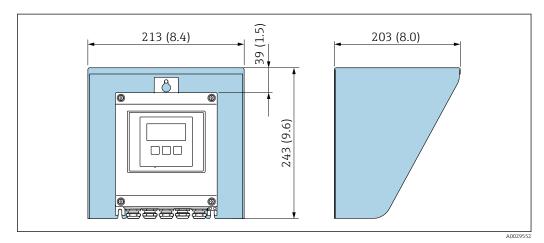

 \blacksquare 9 Weather protection cover for Proline 500 – digital

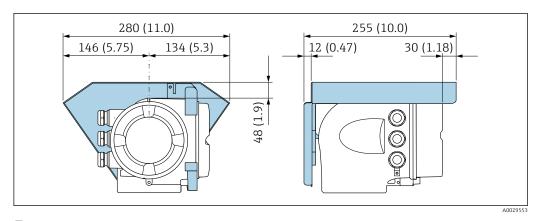

Weather protection cover for Proline 500


Cover locking: Proline 500

NOTICE

Order code "Transmitter housing", option L "Cast, stainless": The covers of the transmitter housing are provided with a borehole to lock the cover.

The cover can be locked using screws and a chain or cable provided by the customer.

- ▶ It is recommended to use stainless steel cables or chains.
- ► If a protective coating is applied, it is recommended to use a heat shrink tube to protect the housing paint.

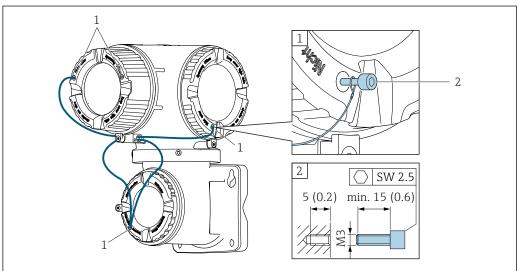

- 1 Cover borehole for the securing screw
- 2 Securing screw to lock the cover

6.2 Mounting the measuring device

6.2.1 Required tools

For transmitter

For mounting on a post:

- Proline 500 digital transmitter
 - Open-ended wrench AF 10
 - Torx screwdriver TX 25
- Proline 500 transmitter
 Open-ended wrench AF 13

Endress+Hauser 29

A002979

For wall mounting: Drill with drill bit Ø 6.0 mm

For sensor

For flanges and other process connections: Corresponding mounting tools

6.2.2 Preparing the measuring device


- 1. Remove all remaining transport packaging.
- 2. Remove any protective covers or protective caps present from the sensor.
- 3. Remove stick-on label on the electronics compartment cover.

6.2.3 Mounting the measuring device

MARNING

Danger due to improper process sealing!

- ► Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ▶ Ensure that the gaskets are clean and undamaged.
- ► Install the gaskets correctly.
- 1. Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the fluid.
- 2. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

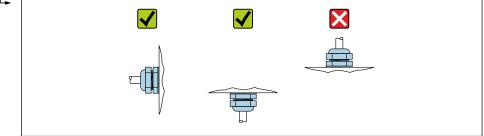

A0029263

6.2.4 Mounting the transmitter housing: Proline 500 – digital

A CAUTION

Ambient temperature too high!

Danger of electronics overheating and housing deformation.

- $\,\blacktriangleright\,\,$ Do not exceed the permitted maximum ambient temperature .
- ► If operating outdoors: Avoid direct sunlight and exposure to weathering, particularly in warm climatic regions.

A CAUTION

Excessive force can damage the housing!

► Avoid excessive mechanical stress.

The transmitter can be mounted in the following ways:

- Post mounting
- Wall mounting


Post mounting

A WARNING

Excessive tightening torque applied to the fixing screws!


Risk of damaging the plastic transmitter.

► Tighten the fixing screws as per the tightening torque: 2 Nm (1.5 lbf ft)

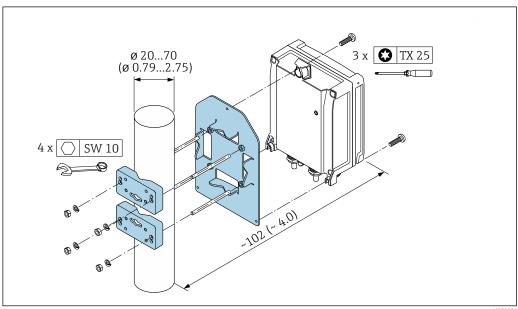

■ 11 Engineering unit mm (in)

Wall mounting

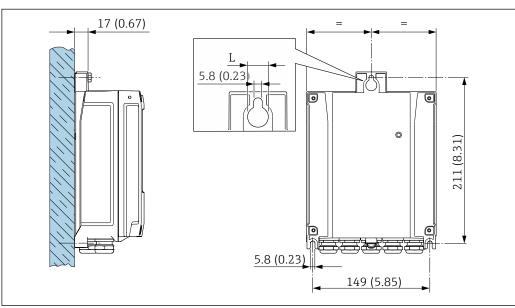

■ 12 Engineering unit mm (in)

L Depends on order code for "Transmitter housing"

Order code for "Transmitter housing"

- Option **A**, aluminum coated: L = 14 mm (0.55 in)
- Option **D**, polycarbonate: L = 13 mm (0.51 in)

1. Drill the holes.

Endress+Hauser 31

A0029051

A002905

- 2. Insert wall plugs into the drilled holes.
- 3. Screw in the securing screws slightly at first.
- 4. Fit the transmitter housing over the securing screws and mount in place.
- 5. Tighten the securing screws.

6.2.5 Mounting the transmitter housing: Proline 500

A CAUTION

Ambient temperature too high!

Danger of electronics overheating and housing deformation.

- ▶ Do not exceed the permitted maximum ambient temperature .
- ► If operating outdoors: Avoid direct sunlight and exposure to weathering, particularly in warm climatic regions.

A CAUTION


Excessive force can damage the housing!

Avoid excessive mechanical stress.

The transmitter can be mounted in the following ways:

- Post mounting
- Wall mounting

Wall mounting

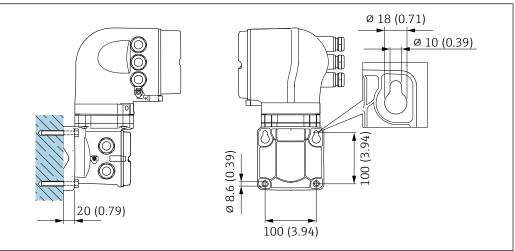

A00290

■ 13 Engineering unit mm (in)

- 1. Drill the holes.
- 2. Insert wall plugs into the drilled holes.
- 3. Screw in the securing screws slightly at first.
- 4. Fit the transmitter housing over the securing screws and mount in place.
- 5. Tighten the securing screws.

32


Post mounting

A WARNING

Order code for "Transmitter housing", option L "Cast, stainless": cast transmitters are very heavy.

They are unstable if they are not mounted on a secure, fixed post.


▶ Only mount the transmitter on a secure, fixed post on a stable surface.

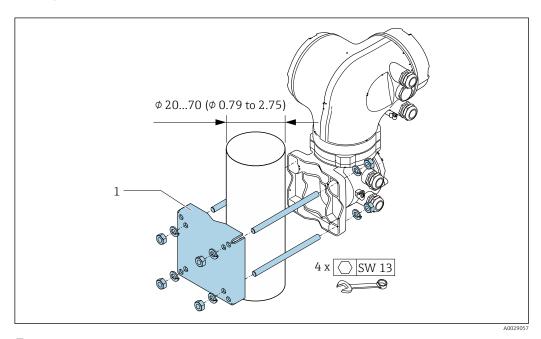

■ 14 Engineering unit mm (in)

6.2.6 Turning the transmitter housing: Proline 500


To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

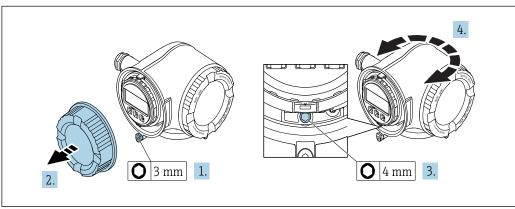

- A002999
- 1. Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Release the fixing screw.
- 4. Turn the housing to the desired position.
- 5. Firmly tighten the securing screw.
- 6. Screw on the connection compartment cover
- 7. Fit the securing clamp of the connection compartment cover.

6.2.7 Turning the display module: Proline 500

The display module can be turned to optimize display readability and operability.

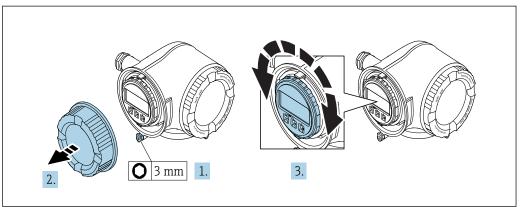

A0030035

- 1. Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Turn the display module to the desired position: max. $8 \times 45^{\circ}$ in every direction.
- 4. Screw on the connection compartment cover.
- 5. Fit the securing clamp of the connection compartment cover.

6.3 Post-installation check

Is the device undamaged (visual inspection)?	
Does the measuring device conform to the measuring point specifications? For example: Process temperature → 🖺 212 Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document) Ambient temperature Measuring range	
Has the correct orientation for the sensor been selected? According to sensor type According to medium temperature According to medium properties (outgassing, with entrained solids)	
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
Are the measuring point identification and labeling correct (visual inspection)?	
Is the device adequately protected from precipitation and direct sunlight?	
Are the securing screw and securing clamp tightened securely?	

7 Electrical connection

NOTICE

The measuring device does not have an internal circuit breaker.

- ► For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.
- ▶ Although the measuring device is equipped with a fuse, additional overcurrent protection (maximum 10 A) should be integrated into the system installation.

7.1 Connection conditions

7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: crimper for wire end ferrule
- For removing cables from terminal: Flat blade screwdriver ≤ 3 mm (0.12 in)

7.1.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

Electrical safety

In accordance with applicable federal/national regulations.

Protective ground cable

Cable: 2.1 mm² (14 AWG)

The grounding impedance must be less than 1 Ω .

Permitted temperature range

Minimum requirement: cable temperature range ≥ ambient temperature +20 K

Power supply cable

Standard installation cable is sufficient.

Signal cable

FOUNDATION Fieldbus

Twisted. shielded two-wire cable.



For further information on planning and installing FOUNDATION Fieldbus networks see $\dot{}$

- Operating Instructions for "FOUNDATION Fieldbus Overview" (BA00013S)
- FOUNDATION Fieldbus Guideline
- IEC 61158-2 (MBP)

Current output 0/4 to 20 mA

Standard installation cable is sufficient.

Pulse/frequency/switch output

Standard installation cable is sufficient.

Relay output

Standard installation cable is sufficient.

Current input 0/4 to 20 mA

Standard installation cable is sufficient.

Status input

Standard installation cable is sufficient.

Cable diameter

• Cable glands supplied:

 $M20 \times 1.5$ with cable Ø 6 to 12 mm (0.24 to 0.47 in)

Spring-loaded terminals: Suitable for strands and strands with ferrules.
 Conductor cross-section 0.2 to 2.5 mm² (24 to 12 AWG).

Connecting cable for sensor - Proline 500 - digital transmitter

Non-hazardous area, Ex Zone 2, Class I, Division 2

Standard cable

A standard cable can be used as the connecting cable.

Standard cable	4 cores (2 pairs); pair-stranded with common shield	
Shielding	ling Tin-plated copper-braid, optical cover ≥ 85 %	
Loop resistance Power supply line (+, -): maximum 10 Ω		
Cable length Maximum 300 m (1000 ft), see the following table.		

Cross-section	Cable length
0.34 mm ² (AWG 22)	80 m (270 ft)
0.50 mm ² (AWG 20)	120 m (400 ft)
0.75 mm ² (AWG 18)	180 m (600 ft)
1.00 mm ² (AWG 17)	240 m (800 ft)
1.50 mm ² (AWG 15)	300 m (1000 ft)

Optionally available connecting cable

Standard cable	$2\times2\times0.34~\text{mm}^2$ (AWG 22) PVC cable with common shield (2 pairs, pair-stranded)	
Flame resistance	According to DIN EN 60332-1-2	
Oil-resistance	According to DIN EN 60811-2-1	
Shielding	Tin-plated copper-braid, optical cover \geq 85 %	
Operating temperature	When mounted in a fixed position: -50 to $+105$ °C (-58 to $+221$ °F); when cable can move freely: -25 to $+105$ °C (-13 to $+221$ °F)	
Available cable length	Fixed: 20 m (65 ft); variable: up to maximum 50 m (165 ft)	

Hazardous area, Ex Zone 1, Class I, Division 1

Standard cable

A standard cable can be used as the connecting cable.

Standard cable	4, 6, 8 cores (2, 3, 4 pairs); pair-stranded with common shield			
Shielding	Tin-plated copper-braid, optical cover ≥ 85 %			
Capacitance C	Maximum 760 nF IIC, maximum 4.2 μF IIB			
Inductance L	Maximum 26 μH IIC, maximum 104 μH IIB			
Inductance/resistance Maximum 8.9 μH/ Ω IIC, maximum 35.6 μH/ Ω IIB (e.g. in accordance v ratio (L/R)				
Loop resistance Power supply line (+, -): maximum 5 Ω				
Cable length Maximum 150 m (500 ft), see the following table.				

Cross-section	Cable length	Termination
2 x 2 x 0.50 mm ² (AWG 22)	50 m (165 ft)	2 x 2 x 0.50 mm ² (AWG 22)
		+ - A B B
		 +, - = 0.5 mm² A, B = 0.5 mm²
3 x 2 x 0.50 mm ² (AWG 22)	100 m (330 ft)	3 x 2 x 0.50 mm ² (AWG 22)
		+ - A B
		 +, - = 1.0 mm² A, B = 0.5 mm²
4 x 2 x 0.50 mm ² (AWG 22)	150 m (500 ft)	4 x 2 x 0.50 mm ² (AWG 22)
		+ A B
		 +, - = 1.5 mm² A, B = 0.5 mm²

Optionally available connecting cable

Connecting cable for	Ex Zone 1, Class I, Division 1, IIC, IIB
Standard cable	$2\times2\times0.5~\text{mm}^2$ (AWG 20) PVC cable with common shield (2 pairs, pair-stranded)
Flame resistance	According to DIN EN 60332-1-2
Oil-resistance	According to DIN EN 60811-2-1
Shielding	Tin-plated copper-braid, optical cover ≥ 85 %

Operating temperature	When mounted in a fixed position: -50 to $+105$ °C (-58 to $+221$ °F); when cable can move freely: -25 to $+105$ °C (-13 to $+221$ °F)
Available cable length Fixed: 20 m (65 ft); variable: up to maximum 50 m (165 ft)	

Connecting cable for sensor - Proline 500 transmitter

Standard cable	$6\times0.38\ mm^2$ PVC cable with common shield and individual shielded cores
Conductor resistance $\leq 50 \Omega/\text{km} (0.015 \Omega/\text{ft})$	
Capacitance: core/shield ≤420 pF/m (128 pF/ft)	
Cable length (max.)	20 m (65 ft)
Cable lengths (available for order) 5 m (15 ft), 10 m (32 ft), 20 m (65 ft)	
Operating temperature	max. 105 °C (221 °F)

Operation in zones of severe electrical interference

Grounding is by means of the ground terminal provided for the purpose inside the connection housing. The stripped and twisted lengths of cable shield to the ground terminal must be as short as possible.

7.1.3 Terminal assignment

Transmitter: supply voltage, input/outputs

The terminal assignment of the inputs and outputs depends on the individual order version of the device. The device-specific terminal assignment is documented on an adhesive label in the terminal cover.

Supply	voltage	Input/output 1		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (A) 27 (B)		24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		Device-specific terminal assignment: adhesive label in terminal cover.							

Transmitter and sensor connection housing: connecting cable

The sensor and transmitter, which are mounted in separate locations, are interconnected by a connecting cable. The cable is connected via the sensor connection housing and the transmitter housing.

Terminal assignment and connection of the connecting cable:

- Proline 500 digital → 🖺 40
- Proline 500 → 🖺 46

7.1.4 Device plugs available

Pevice plugs may not be used in hazardous areas!

Order code for "Input; output 1", option SA "FOUNDATION Fieldbus"

Order code for	Cable entry	Cable entry
"Electrical connection"	2	3
M, 3, 4, 5	7/8" plug	

7.1.5 Pin assignment of device plug

		Pin		Assignment	Coding	Plug/socket
2 /	3	1	+	Signal +	А	Plug
1	- 4	2	-	Signal –		
7		3		Grounding		
		4		Not assigned		

7.1.6 Preparing the measuring device

Carry out the steps in the following order:

- 1. Mount the sensor and transmitter.
- 2. Connection housing, sensor: Connect connecting cable.
- 3. Transmitter: Connect connecting cable.
- 4. Transmitter: Connect signal cable and cable for supply voltage.

NOTICE

Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

- ▶ Use suitable cable glands corresponding to the degree of protection.
- 1. Remove dummy plug if present.
- 2. If the measuring device is supplied without cable glands:
 Provide suitable cable gland for corresponding connecting cable.
- 3. If the measuring device is supplied with cable glands:

 Observe requirements for connecting cables →

 35.

7.2 Connecting the measuring device

NOTICE

Limitation of electrical safety due to incorrect connection!

- ► Have electrical connection work carried out by correspondingly trained specialists only.
- ▶ Observe applicable federal/national installation codes and regulations.
- ► Comply with local workplace safety regulations.
- ▶ Always connect the protective ground cable ⊕ before connecting additional cables.
- ► For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.


7.2.1 Connecting the connecting cable

A WARNING

Risk of damaging the electronic components!

- ► Connect the sensor and transmitter to the same potential equalization.
- ▶ Only connect the sensor to a transmitter with the same serial number.
- Ground the connection housing of the sensor via the external screw terminal.

Terminal assignment

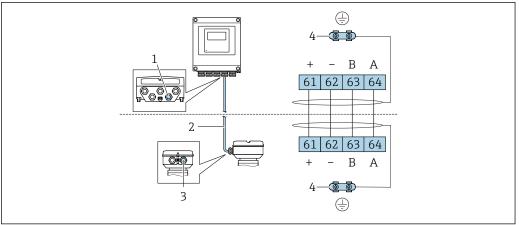

A002819

- 1 Cable entry for connecting cable on transmitter housing
- 2 Connecting cable ISEM communication
- 3 Cable entry for connecting cable or connector on sensor connection housing
- 4 Grounding via cable strain relief

Connecting the connecting cable to the sensor connection housing

Connection via terminals with order code for "Sensor connection housing": Option L "Cast, stainless" $\Rightarrow \triangleq 42$


Connection via terminals with order code	Available for sensor	
Option A "Aluminum, coated"	→ 🖺 42	Promass A, E, F, H, I, O, P, Q, SCubemassC
Option B "Stainless"		Promass A, E, F, H, I, O, P, Q, SCubemassC
Option L "Cast, stainless"	→ 🖺 42	■ Promass F, H, I, O, Q, X ■ CubemassC

Connection via connectors with order code connection housing"	Available for sensor
Option C "Ultra-compact hygienic, stainless"	Promass A, E, F, H, I, O, P, Q, SCubemassC

Connecting the connecting cable to the transmitter

Connecting the sensor connection housing via terminals

For the device version with the order code for "Sensor connection housing": Option ${\bf L}$ "Cast, stainless"

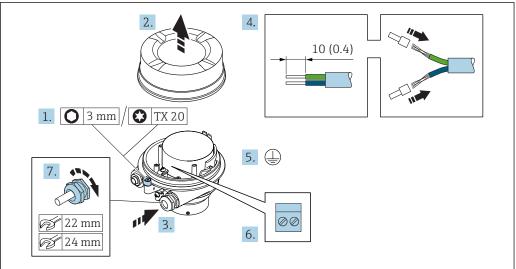

A0029616


- 1. Loosen the securing clamp of the housing cover.
- 2. Unscrew the housing cover.
- 3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
- 5. Connect the protective ground.
- 6. Connect the cable in accordance with the terminal assignment.
- 7. Firmly tighten the cable glands.
 - This concludes the process for connecting the connecting cable.

MARNING

Housing degree of protection voided due to insufficient sealing of the housing.

- ► Screw in the thread on the cover without using any lubricant. The thread on the cover is coated with a dry lubricant.
- 8. Screw on the housing cover.
- 9. Tighten the securing clamp of the housing cover.

Connecting the connecting cable to the transmitter

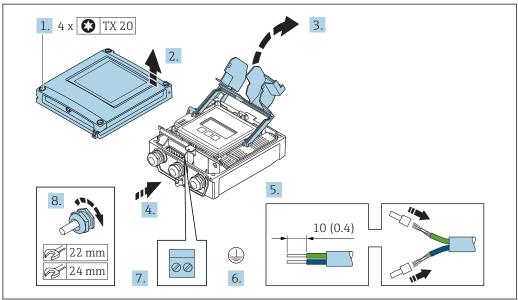


A002959

- 1. Loosen the 4 fixing screws on the housing cover.
- 2. Open the housing cover.
- 3. Fold open the terminal cover.
- 4. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 5. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
- 6. Connect the protective ground.
- 7. Connect the cable in accordance with the terminal assignment $\rightarrow \triangleq 40$.
- 8. Firmly tighten the cable glands.
 - This concludes the process for connecting the connecting cable.
- 9. Close the housing cover.
- 10. Tighten the securing screw of the housing cover.
- 11. After connecting the connecting cable:Connect the signal cable and the supply voltage cable →


 44.

7.2.2 Connecting the signal cable and the supply voltage cable

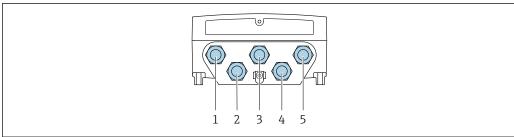

A0028200

- 1 Cable entry for supply voltage
- 2 Cable entry for cable or connection of device plug for signal transmission
- 3 Cable entry for cable or connection of device plug for signal transmission
- 4 Cable entry for sensor transmitter connecting cable
- 5 Cable entry for cable or connection of device plug for signal transmission, optional: connection of external WLAN antenna or service connector

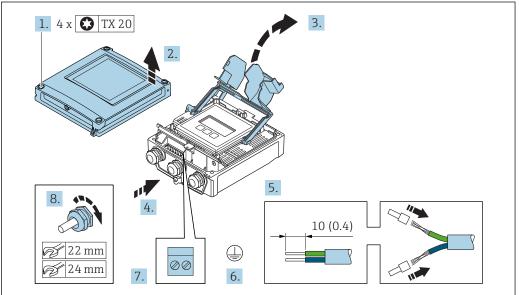

A0029597

- 1. Loosen the 4 fixing screws on the housing cover.
- 2. Open the housing cover.
- 3. Fold open the terminal cover.
- 4. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 5. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
- 6. Connect the protective ground.
- 7. Connect the cable in accordance with the terminal assignment .
 - ► **Signal cable terminal assignment:** The device-specific terminal assignment is documented on an adhesive label in the terminal cover.

Supply voltage terminal assignment: Adhesive label in the terminal cover or $\rightarrow \blacksquare 38$.

- 8. Firmly tighten the cable glands.
 - ► This concludes the cable connection process.
- 9. Close the terminal cover.
- 10. Close the housing cover.

A WARNING

Housing degree of protection may be voided due to insufficient sealing of the housing.

► Screw in the screw without using any lubricant.


A WARNING

Excessive tightening torque applied to the fixing screws!

Risk of damaging the plastic transmitter.

- ► Tighten the fixing screws as per the tightening torque: 2 Nm (1.5 lbf ft)
- 11. Tighten the 4 fixing screws on the housing cover.

Removing a cable

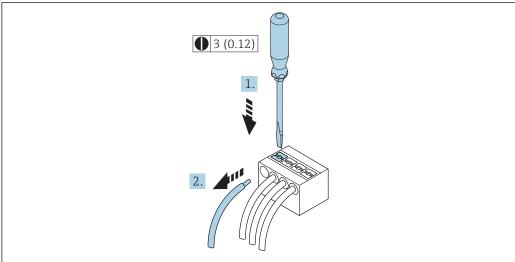

A002959

- 15 Engineering unit mm (in)
- 1. To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes
- 2. while simultaneously pulling the cable end out of the terminal.

7.3 Connecting the measuring device

NOTICE

Limitation of electrical safety due to incorrect connection!

- ► Have electrical connection work carried out by correspondingly trained specialists only.
- ▶ Observe applicable federal/national installation codes and regulations.
- ► Comply with local workplace safety regulations.
- ▶ Always connect the protective ground cable ⊕ before connecting additional cables.
- ► For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.


7.3.1 Connecting the connecting cable

A WARNING

Risk of damaging the electronic components!

- ► Connect the sensor and transmitter to the same potential equalization.
- ▶ Only connect the sensor to a transmitter with the same serial number.
- Ground the connection housing of the sensor via the external screw terminal.

Terminal assignment

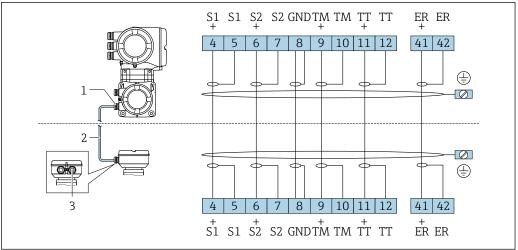

A002819

- Cable entry for connecting cable on transmitter connection housing
- 2 Connecting cable
- 3 Cable entry for connecting cable on sensor connection housing


Connecting the connecting cable to the sensor connection housing

Connecting the connecting cable to the transmitter

The cable is connected to the transmitter via terminals $\rightarrow \triangleq 48$.

Connecting the sensor connection housing via terminals

For the device version with the order code for "Housing": Option ${\bf L}$ "Cast, stainless"

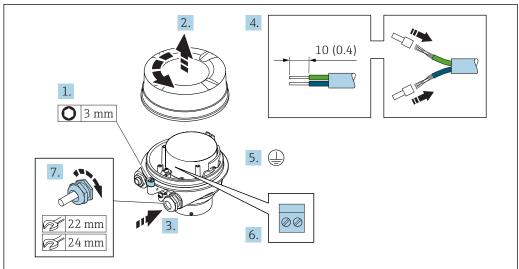

A0029612


- 1. Loosen the securing clamp of the housing cover.
- 2. Unscrew the housing cover.
- 3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
- 5. Connect the protective ground.
- 6. Connect the cable in accordance with the terminal assignment $\rightarrow \triangleq 46$.
- 7. Firmly tighten the cable glands.
 - This concludes the process for connecting the connecting cable.

A WARNING

Housing degree of protection voided due to insufficient sealing of the housing.

- ► Screw in the thread on the cover without using any lubricant. The thread on the cover is coated with a dry lubricant.
- 8. Screw on the housing cover.
- 9. Tighten the securing clamp of the housing cover.


Connecting the connecting cable to the transmitter

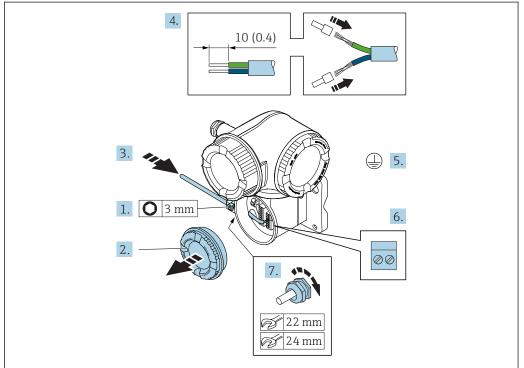

A0029592


- 1. Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 4. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
- 5. Connect the protective ground.
- 6. Connect the cable in accordance with the terminal assignment $\rightarrow \triangleq 46$.
- 7. Firmly tighten the cable glands.
 - ► This concludes the process for connecting the connecting cable.
- 8. Screw on the connection compartment cover.
- 9. Tighten the securing clamp of the connection compartment cover.
- **10.** After connecting the connecting cable: After connecting the connecting cables: Connect the signal cable and the supply voltage cable $\rightarrow \triangleq 49$.

7.3.2 Connecting the signal cable and the supply voltage cable

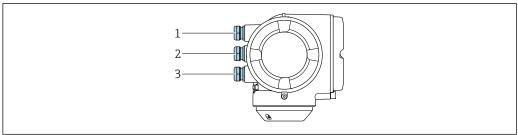


A0026781

- 1 Cable entry for supply voltage
- Cable entry for signal transmission, input/output 1 and 2
- 3 Cable entry for input/output signal transmission; Optional: connection of external WLAN antenna or service plug

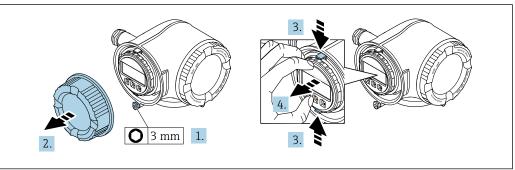


A0029813

- 1. Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Squeeze the tabs of the display module holder together.
- 4. Remove the display module holder.

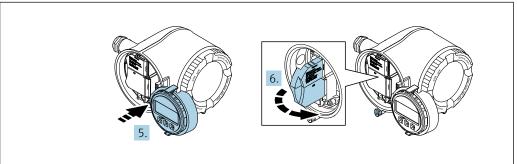


A002981

- 5. Attach the holder to the edge of the electronics compartment.
- 6. Open the terminal cover.

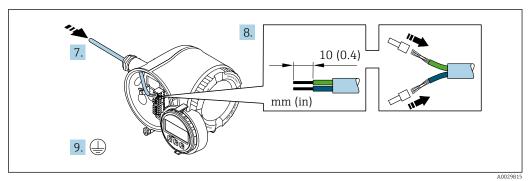

- 7. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 8. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
- 9. Connect the protective ground.

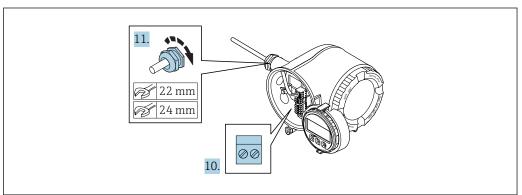


A0029816

- 10. Connect the cable in accordance with the terminal assignment.
 - Signal cable terminal assignment: The device-specific terminal assignment is documented on an adhesive label in the terminal cover.

- 11. Firmly tighten the cable glands.
 - ► This concludes the cable connection process.
- 12. Close the terminal cover.
- 13. Fit the display module holder in the electronics compartment.
- 14. Screw on the connection compartment cover.
- 15. Secure the securing clamp of the connection compartment cover.

Removing a cable

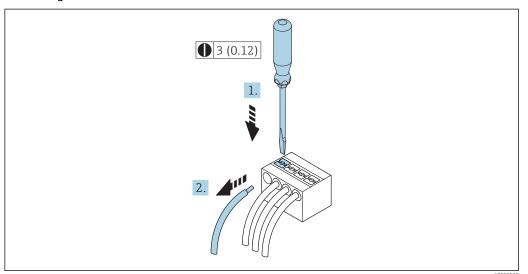

■ 16 Engineering unit mm (in)

- 1. To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes
- 2. while simultaneously pulling the cable end out of the terminal.

7.4 Ensure potential equalization


7.4.1 Requirements

No special measures for potential equalization are required.

7.5 Special connection instructions

7.5.1 Connection examples

FOUNDATION Fieldbus

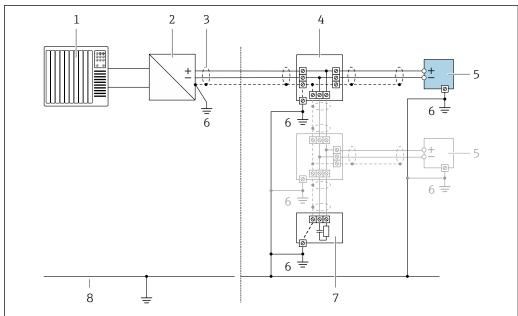


A002876

■ 17 Connection example for FOUNDATION Fieldbus


- 1 Control system (e.g. PLC)
- 2 Power Conditioner (FOUNDATION Fieldbus)
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

 Current output 4-20 mA

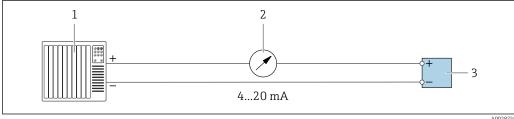

AC


- 18 Connection example for 4-20 mA current output (active)
- 1 Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load
- 3 Transmitter

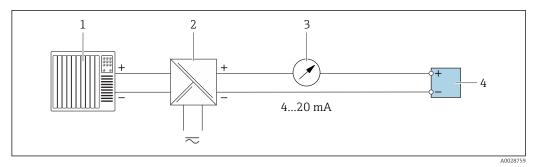

■ 19 Connection example for 4-20 mA current output (passive)

- Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- Analog display unit: observe maximum load
- Transmitter


Pulse/frequency output

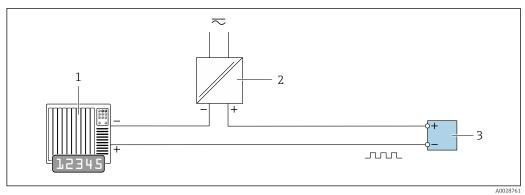

Connection example for pulse/frequency output (passive)

- Automation system with pulse/frequency input (e.g. PLC)
- Power supply 2
- *Transmitter: Observe input values* → 🖺 200


Switch output

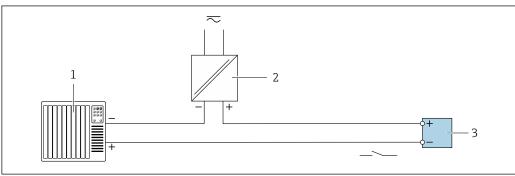

Connection example for switch output (passive)


- Automation system with switch input (e.g. PLC)
- Transmitter: Observe input values → В 200

Relay output

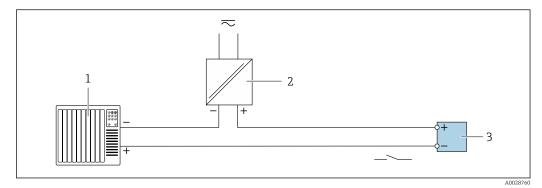

- 22 Connection example for relay output (passive)
- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 🗎 201


Current input

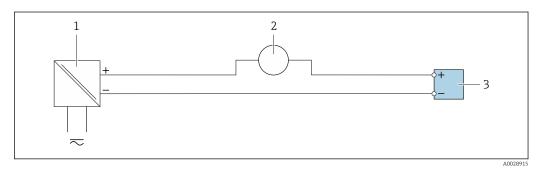

■ 23 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 External measuring device (for reading in pressure or temperature, for instance)
- 3 Transmitter: Observe input values

Status input

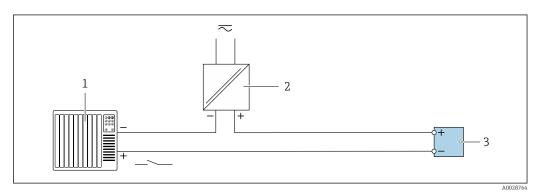

■ 24 Connection example for status input

- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values


7.6 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

- 1. Check that the housing seals are clean and fitted correctly.
- 2. Dry, clean or replace the seals if necessary.
- 3. Tighten all housing screws and screw covers.
- 4. Firmly tighten the cable glands.
- 5. To ensure that moisture does not enter the cable entry:

 Route the cable so that it loops down before the cable entry ("water trap").

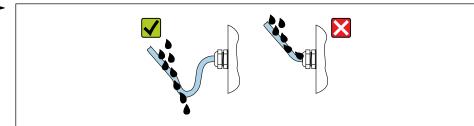

A0029278


6. Insert dummy plugs into unused cable entries.

7.7 Post-connection check

Are cables or the device undamaged (visual inspection)?	
Do the cables used meet the requirements?	
Do the cables have adequate strain relief?	
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" → 🖺 54?	

8 Operation options

8.1 Overview of operation options

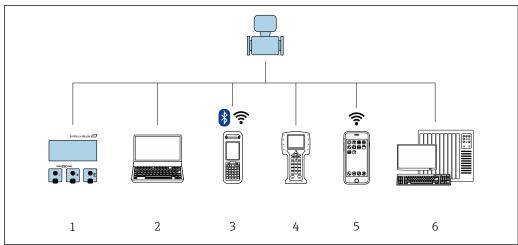

A002929


- 1 Local operation via display module
- 2 Computer with Web browser (e.g. Internet Explorer) or with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM)
- 3 Field Xpert SFX350 or SFX370
- 4 Field Communicator 475
- 5 Mobile handheld terminal
- 6 Control system (e.g. PLC)

56

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

For an overview of the operating menu for experts: "Description of Device Parameters" document supplied with the device $\rightarrow \cong 225$

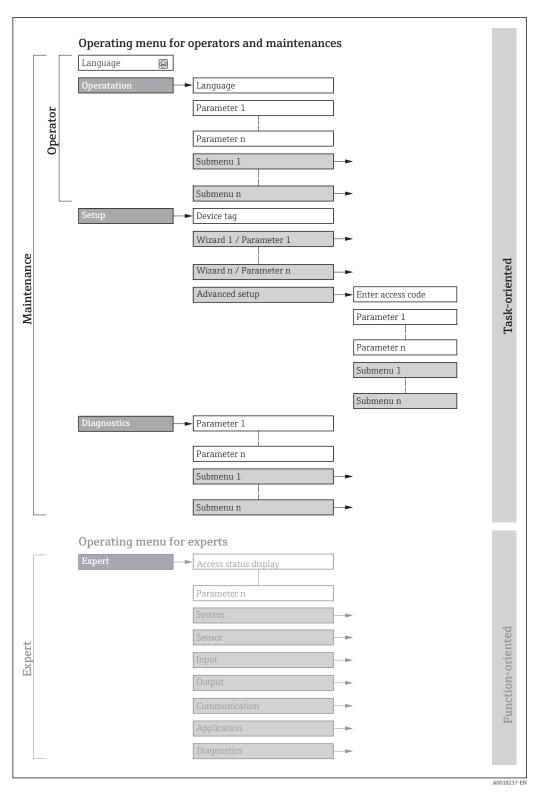

 \blacksquare 25 Schematic structure of the operating menu

8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.


For custody transfer, once the device has been put into circulation or sealed, its operation is restricted.

Menu	ı/parameter	User role and tasks	Content/meaning
Language	task-oriented	Role "Operator", "Maintenance" Tasks during operation: Configuring the operational	 Defining the operating language Defining the Web server operating language Resetting and controlling totalizers
Operation		display Reading measured values	 Configuring the operational display (e.g. display format, display contrast) Resetting and controlling totalizers
Setup		"Maintenance" role Commissioning: Configuration of the measurement Configuration of the inputs and outputs Configuration of the communication interface	Wizards for fast commissioning: Set the system units Configuration of the communication interface Define the medium Display I/O/configuration Configure the inputs Configure the outputs Configuring the operational display Define the output conditioning Set the low flow cut off Configure partial and empty pipe detection Advanced setup For more customized configuration of the measurement (adaptation to special measuring conditions) Configure the WLAN settings Administration (define access code, reset measuring device)
Diagnostics		"Maintenance" role Fault elimination: Diagnostics and elimination of process and device errors Measured value simulation	Contains all parameters for error detection and analyzing process and device errors: Diagnostic list Contains up to 5 currently pending diagnostic messages. Event logbook Contains event messages that have occurred. Device information Contains information for identifying the device. Measured values Contains all current measured values. Data logging submenu with "Extended HistoROM" order option Storage and visualization of measured values Heartbeat The functionality of the device is checked on demand and the verification results are documented. Simulation Is used to simulate measured values or output values.

Meni	u/parameter	User role and tasks	Content/meaning
Expert	function-oriented	Tasks that require detailed knowledge of the function of the device: Commissioning measurements under difficult conditions Optimal adaptation of the measurement to difficult conditions Detailed configuration of the communication interface Error diagnostics in difficult cases	Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: System Contains all higher-order device parameters which do not concern the measurement or the communication interface. Sensor Configuration of the measurement. Output Configure the pulse/frequency/switch output. Input Configuring the status input. Output Configuring of the analog current outputs as well as the pulse/frequency and switch output. Communication Configuration of the digital communication interface and the Web server. Submenus for function blocks (e.g. "Analog Inputs") Configuration of function blocks. Application Configure the functions that go beyond the actual measurement (e.g. totalizer). Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.

8.3 Access to the operating menu via the local display

8.3.1 Operational display

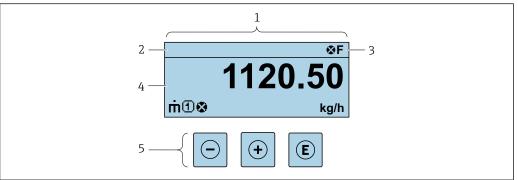

A0029348

- 1 Operational display
- 2 Device tag
- 3 Status area
- 4 Display area for measured values (4-line)
- 5 Operating elements→ 🖺 64

Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 🗎 154
 - **F**: Failure
 - C: Function check
 - **S**: Out of specification
 - **M**: Maintenance required
- Diagnostic behavior → 🗎 155
 - 🐼: Alarm
 - <u></u>∴: Warning
- 🛱: Locking (the device is locked via the hardware)
- ←: Communication (communication via remote operation is active)

Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

Measured values

Symbol	Meaning
ṁ	Mass flow
Ü	Volume flowCorrected volume flow
ρ	DensityReference density
4	Temperature
Σ	Totalizer The measurement channel number indicates which of the three totalizers is displayed.
€	Status input

Measurement channel numbers

Symbol	Meaning
14	Measurement channel 1 to 4


The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. Totalizer 1 to 3).

Diagnostic behavior

The number and display format of the measured values can be configured via the **Format display** parameter ($\rightarrow \implies 115$).


60

8.3.2 Navigation view

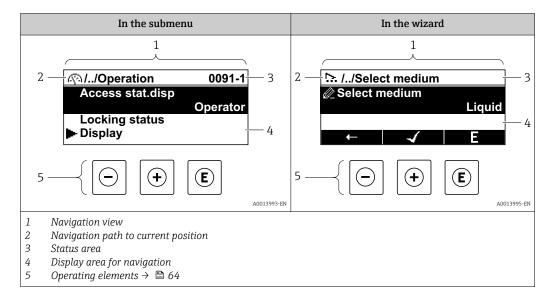

Navigation path

The navigation path - displayed at the top left in the navigation view - consists of the following elements:

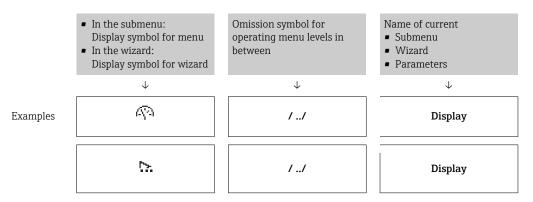

Status area

The following appears in the status area of the navigation view in the top right corner:

- In the submenu
 - The direct access code for the parameter you are navigating to (e.g. 0022-1)
 - If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard

If a diagnostic event is present, the diagnostic behavior and status signal

For information on the diagnostic behavior and status signal $\rightarrow \stackrel{\triangle}{=} 154$ For information on the function and entry of the direct access code $\rightarrow \stackrel{\triangle}{=} 67$

Display area

Menus

Symbol	Meaning
Ø.	Operation Appears: In the menu next to the "Operation" selection At the left in the navigation path in the Operation menu
۶	Setup Appears: In the menu next to the "Setup" selection At the left in the navigation path in the Setup menu
્ટ.	Diagnostics Appears: ■ In the menu next to the "Diagnostics" selection ■ At the left in the navigation path in the Diagnostics menu
3,4€	Expert Appears: In the menu next to the "Expert" selection At the left in the navigation path in the Expert menu

Submenus, wizards, parameters

Symbol	Meaning
•	Submenu
55.	Wizard
Ø.	Parameters within a wizard No display symbol exists for parameters in submenus.


Locking

Symbol	Meaning
û	Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked. ■ By a user-specific access code ■ By the hardware write protection switch

Wizard operation

Symbol	Meaning
—	Switches to the previous parameter.
4	Confirms the parameter value and switches to the next parameter.
E	Opens the editing view of the parameter.

8.3.3 Editing view

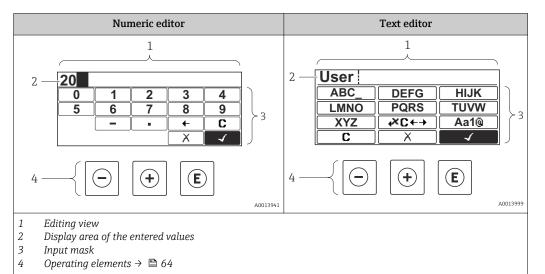

Input mask

The following input symbols are available in the input mask of the numeric and text editor:

Numeric editor

Symbol	Meaning
9	Selection of numbers from 0 to 9.
·	Inserts decimal separator at the input position.
_	Inserts minus sign at the input position.
4	Confirms selection.
+	Moves the input position one position to the left.
X	Exits the input without applying the changes.
C	Clears all entered characters.

Text editor

Symbol	Meaning
Aa1@	Toggle Between upper-case and lower-case letters For entering numbers For entering special characters
ABC_ XYZ	Selection of letters from A to Z.

abc _ xyz	Selection of letters from a to z.
""^ _ ~& _	Selection of special characters.
√	Confirms selection.
(×C←→	Switches to the selection of the correction tools.
X	Exits the input without applying the changes.
C	Clears all entered characters.

Correction symbols under**E**C←→

Symbol	Meaning
C	Clears all entered characters.
→	Moves the input position one position to the right.
€	Moves the input position one position to the left.
*	Deletes one character immediately to the left of the input position.

8.3.4 Operating elements

Key	Meaning
	Minus key
	In a menu, submenu Moves the selection bar upwards in a choose list.
	With a Wizard Confirms the parameter value and goes to the previous parameter.
	With a text and numeric editor In the input mask, moves the selection bar to the left (backwards).
	Plus key
	In a menu, submenu Moves the selection bar downwards in a choose list.
(+)	With a Wizard Confirms the parameter value and goes to the next parameter.
	With a text and numeric editor Moves the selection bar to the right (forwards) in an input screen.

Key	Meaning
	Enter key
E	 For operational display Pressing the key briefly opens the operating menu. Pressing the key for 2 s opens the context menu.
	 In a menu, submenu Pressing the key briefly: Opens the selected menu, submenu or parameter. Starts the wizard. If help text is open, closes the help text of the parameter. Pressing the key for 2 s for parameter: If present, opens the help text for the function of the parameter.
	With a Wizard Opens the editing view of the parameter.
	With a text and numeric editor Pressing the key briefly: Opens the selected group. Carries out the selected action. Pressing the key for 2 s confirms the edited parameter value.
	Escape key combination (press keys simultaneously)
<u></u> ++	In a menu, submenu Pressing the key briefly: Exits the current menu level and takes you to the next higher level. If help text is open, closes the help text of the parameter. Pressing the key for 2 s returns you to the operational display ("home position").
	With a Wizard Exits the wizard and takes you to the next higher level.
	With a text and numeric editor Closes the text or numeric editor without applying changes.
(-)+(E)	Minus/Enter key combination (press the keys simultaneously)
	Reduces the contrast (brighter setting).
+ E	Plus/Enter key combination (press and hold down the keys simultaneously) Increases the contrast (darker setting).
-+++E	Minus/Plus/Enter key combination (press the keys simultaneously)
	For operational display Enables or disables the keypad lock (only SD02 display module).

8.3.5 Opening the context menu

Using the context menu, the user can call up the following menus quickly and directly from the operational display:

 
- Setup
- Data backup
- Simulation

Calling up and closing the context menu

The user is in the operational display.

1. Press E for 2 s.

└ The context menu opens.

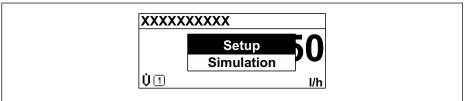

A0017421-EN

- 2. Press \Box + \pm simultaneously.
 - ► The context menu is closed and the operational display appears.

Calling up the menu via the context menu


- 1. Open the context menu.
- 2. Press 🛨 to navigate to the desired menu.
- 3. Press 🗉 to confirm the selection.
 - ► The selected menu opens.

8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

For an explanation of the navigation view with symbols and operating elements $\Rightarrow \triangleq 61$

Example: Setting the number of displayed measured values to "2 values"

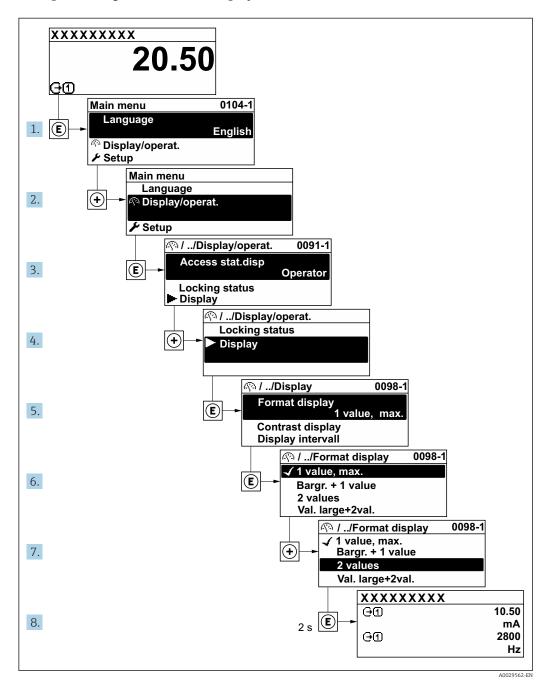


8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

Navigation path

Expert → Direct access

 The direct access code consists of a 4-digit number and the channel number, which identifies the channel of a process variable: e.g. 0914-1. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

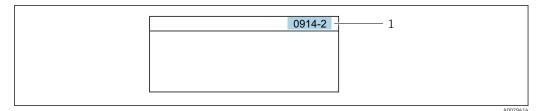

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered. Example: Input of "914" instead of "0914"
- If no channel number is entered, channel 1 is jumped to automatically. Example: Enter 0914 → Assign process variable parameter
- If a different channel is jumped to: Enter the direct access code with the corresponding channel number.

Example: Enter **0914-2** → **Assign process variable** parameter

For the direct access codes of the individual parameters, see the "Description of Device Parameters" document for the device


8.3.8 Calling up help text

Help text is available for some parameters and can be called up from the navigation view. The help text provides a brief explanation of the parameter function and thereby supports swift and safe commissioning.

Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

- 1. Press E for 2 s.
 - ► The help text for the selected parameter opens.

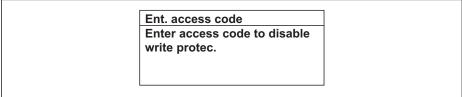


A0014002-EN

- 26 Example: Help text for parameter "Enter access code"
- 2. Press \Box + \pm simultaneously.
 - ► The help text is closed.

8.3.9 Changing the parameters

For a description of the editing display - consisting of text editor and numeric editor - with symbols $\rightarrow \triangleq 63$, for a description of the operating elements $\rightarrow \triangleq 64$

Example: Changing the tag name in the "Tag description" parameter from 001-FT-101 to 001-FT-102

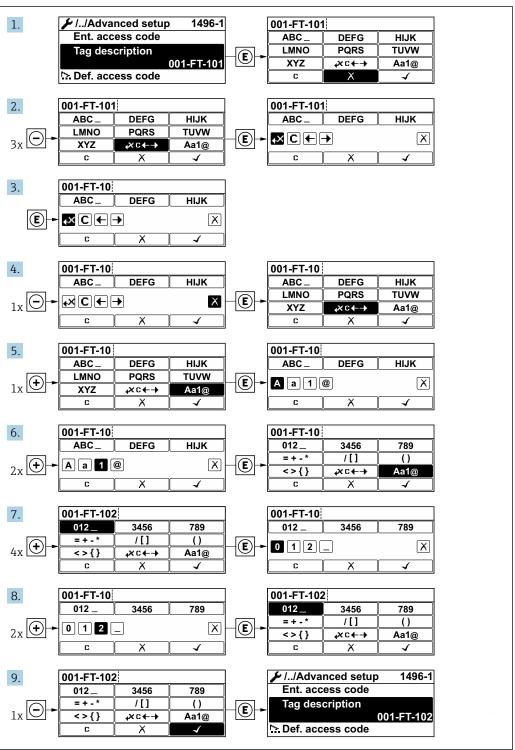

A0029563-I

A message is displayed if the value entered is outside the permitted value range.

Ent. access code
Invalid or out of range input
value
Min:0
Max:9999

A0014049-EN

8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access $\rightarrow \implies 134$.

Access authorization to parameters: "Operator" user role

Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	V	V
After an access code has been defined.	V	1)

Despite the defined access code, certain parameters can always be modified and thus are excepted from
the write protection, as they do not affect the measurement. Refer to the "Write protection via access code"
section

Access authorization to parameters: "Maintenance" user role

Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	V	V
After an access code has been defined.	V	✓ ¹⁾

- 1) If an incorrect access code is entered, the user obtains the access rights of the "Operator" user role.
- The user role with which the user is currently logged on is indicated by the **Access** status parameter. Navigation path: Operation → Access status

8.3.11 Disabling write protection via access code

If the $\widehat{\mbox{$\mbox{}\mbox{\mbox

Parameter write protection via local operation can be disabled by entering the user-specific access code in the **Enter access code** parameter ($\rightarrow \implies 120$) via the respective access option.

- 1. After you press ©, the input prompt for the access code appears.
- 2. Enter the access code.
 - ► The 🗈-symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

8.3.12 Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

Local operation with touch control

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock

The keypad lock is switched on automatically:

- Each time the device is restarted.
- If the device has not been operated for longer than one minute in the measured value display.
- 1. The device is in the measured value display. Press © for at least 2 seconds.
 - ► A context menu appears.
- 2. In the context menu, select the **Keylock on** option.
 - ► The keypad lock is switched on.
- If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

Switching off the keypad lock

 
- 1. The keypad lock is switched on. Press © for at least 2 seconds.
 - ► A context menu appears.
- 2. In the context menu, select the **Keylock off** option.
 - ► The keypad lock is switched off.

8.4 Access to the operating menu via the Web browser

8.4.1 Function range

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or via a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option $\bf G$ "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

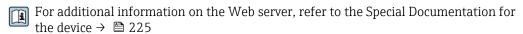

8.4.2 Prerequisites

Computer hardware

Hardware	Interface		
	CDI-RJ45	WLAN	
Interface	The computer must have an RJ45 interface.	The operating unit must have a WLAN interface.	
Connection	Standard Ethernet cable with RJ45 connector.	Connection via Wireless LAN.	
Screen	Recommended size: ≥12" (depends on the screen resolution)		

Computer software

Software	Interface	
	CDI-RJ45	WLAN
Recommended operating systems	 Microsoft Windows 7 or higher. Mobile operating systems: iOS Android Microsoft Windows XP is supported. 	
Web browsers supported	 Microsoft Internet Explorer 8 or higher Microsoft Edge Mozilla Firefox Google Chrome Safari 	

Computer settings

Settings	Interface		
	CDI-RJ45	WLAN	
User rights	Appropriate user rights (e.g. administrator rights) for TCP/IP and proxy server settings are necessary (for adjusting the IP address, subnet mask etc.).		
Proxy server settings of the Web browser	The Web browser setting <i>Use a Proxy Server for Your LAN</i> must be deselected .		
JavaScript	JavaScript must be enabled.		
	If JavaScript cannot be enabled: enter http://192.168.1.212/basic.html in the address line of browser. A fully functional but simplified version of the opera structure starts in the Web browser.		
	When installing a new firmware version: To enable correct data display, clear the temporary memory (cache) of the Web browser under Internet options .		
Network connections	Only the active network connections to the measuring device should be used.		
	Switch off all other network connections such as WLAN.	Switch off all other network connections.	

In the event of connection problems: $\rightarrow \stackrel{\triangle}{=} 149$

Measuring device

Device	Interface		
	CDI-RJ45	WLAN	
Measuring device	The measuring device has an RJ45 interface.	The measuring device has a WLAN antenna: Transmitter with integrated WLAN antenna Transmitter with external WLAN antenna	
Web server	Web server must be enabled; factory setting: ON For information on enabling the Web server → 77	Web server and WLAN must be enabled; factory setting: ON For information on enabling the Web server → ■ 77	

8.4.3 Establishing a connection

Via service interface (CDI-RJ45)

Preparing the measuring device

Proline 500 - digital

- 1. Loosen the 4 fixing screws on the housing cover.
- 2. Open the housing cover.
- 3. The location of the connection socket depends on the measuring device and the communication protocol:

Connect the computer to the RJ45 connector via the standard Ethernet connecting cable .

Proline 500

- 1. Depending on the housing version:

 Release the securing clamp or securing screw of the housing cover.
- 2. Depending on the housing version: Unscrew or open the housing cover.
- 3. The location of the connection socket depends on the measuring device and the communication protocol:

Connect the computer to the RJ45 connector via the standard Ethernet connecting cable .

Configuring the Internet protocol of the computer

The following information refers to the default Ethernet settings of the device.

IP address of the device: 192.168.1.212 (factory setting)

- 1. Switch on the measuring device.
- 2. Connect to the computer using a cable $\rightarrow \blacksquare$ 78.
- 3. If a 2nd network card is not used, close all the applications on the notebook.
 - Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.
- 4. Close any open Internet browsers.
- 5. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

IP address	192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 \rightarrow e.g. 192.168.1.213
Subnet mask	255.255.255.0
Default gateway	192.168.1.212 or leave cells empty

Via WLAN interface

Configuring the Internet protocol of the mobile terminal

NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.

▶ Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE

In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same mobile terminal. This could cause a network conflict.

- ▶ Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- ► If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

► Enable WLAN reception on the mobile terminal.

Establishing a connection from the mobile terminal to the measuring device

- 1. In the WLAN settings of the mobile terminal: Select the measuring device using the SSID (e.g. EH_Promass_500_A802000).
- 2. If necessary, select the WPA2 encryption method.
- 3. Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).
 - LED on display module flashes: it is now possible to operate the measuring device with the Web browser, FieldCare or DeviceCare.
- The serial number can be found on the nameplate.


Disconnecting

► After configuring the device: Terminate the WLAN connection between the operating unit and measuring device.

Starting the Web browser

1. Start the Web browser on the computer.

- 2. Enter the IP address of the Web server in the address line of the Web browser: 192.168.1.212
 - ► The login page appears.

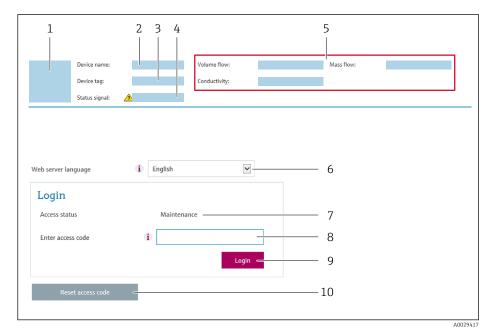

- 1 Picture of device
- 2 Device name
- 3 Device tag
- 4 Status signal
- 5 Current measured values
- 6 Operating language
- 7 User role
- 8 Access code
-) Login
- 10 Reset access code ($\rightarrow \equiv 130$)

8.4.4 Logging on

- 1. Select the preferred operating language for the Web browser.
- 2. Enter the user-specific access code.
- 3. Press **OK** to confirm your entry.

Access code 0000 (factory setting); can be changed by customer

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

8.4.5 User interface



- 1 Function row
- 2 Operating language on the local display
- 3 Navigation area

Header

The following information appears in the header:

- Device tag
- Current measured values

Function row

Functions	Meaning	
Measured values	Displays the measured values of the measuring device	
Menu	 Access to the operating menu from the measuring device The structure of the operating menu is the same as for the local display 	
Menu	For detailed information on the structure of the operating menu, see the Operating Instructions for the measuring device	
Device status	Displays the diagnostic messages currently pending, listed in order of priority	
Data management	 Data exchange between PC and measuring device: Load the configuration from the measuring device (XML format, save configuration) Save the configuration to the measuring device (XML format, restore configuration) Export the event list (.csv file) Export parameter settings (.csv file, create documentation of the measuring point configuration) Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package) If using fieldbuses, upload device drivers for system integration from the measuring device: DD file Flashing a firmware version 	
Network configuration	Configuration and checking of all the parameters required for establishing the connection to the measuring device: Network settings (e.g. IP address, MAC address) Device information (e.g. serial number, firmware version)	
Logout	End the operation and call up the login page	

Navigation area

If a function is selected in the function bar, the submenus of the function open in the navigation area. The user can now navigate through the menu structure.

Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

8.4.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

Navigation

"Expert" menu \rightarrow Communication \rightarrow Web server

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Web server functionality	Switch the Web server on and off.	■ Off	On
		■ On	

Function scope of the "Web server functionality" parameter

Option	Description
Off	The web server is completely disabled.Port 80 is locked.
On	 The complete functionality of the web server is available. JavaScript is used. The password is transferred in an encrypted state. Any change to the password is also transferred in an encrypted state.

Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via local display
- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool

8.4.7 Logging out

- Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.
- 1. Select the **Logout** entry in the function row.
 - ► The home page with the Login box appears.
- 2. Close the Web browser.
- 3. If no longer needed:

Reset modified properties of the Internet protocol (TCP/IP) $\rightarrow \blacksquare$ 73.


8.5 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

8.5.1 Connecting the operating tool

Via FOUNDATION Fieldbus network

This communication interface is available in device versions with FOUNDATION Fieldbus.

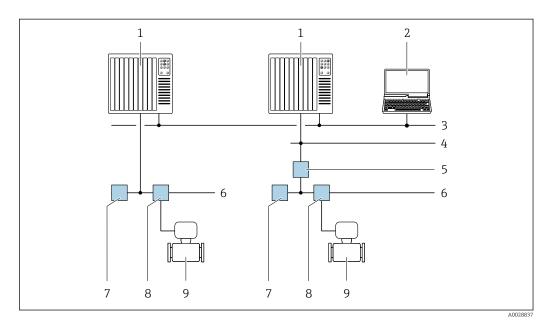


■ 27 Options for remote operation via FOUNDATION Fieldbus network

- 1 Automation system
- 2 Computer with FOUNDATION Fieldbus network card
- 3 Industry network
- 4 High Speed Ethernet FF-HSE network
- 5 Segment coupler FF-HSE/FF-H1
- 6 FOUNDATION Fieldbus FF-H1 network
- 7 Power supply FF-H1 network
- 8 T-box
- 9 Measuring device

Service interface

Via service interface (CDI-RJ45)

Proline 500 - digital transmitter

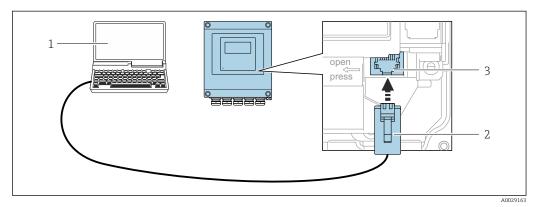


■ 28 Connection via service interface (CDI-RJ45)

- 1 Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 2 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

78

Proline 500 transmitter

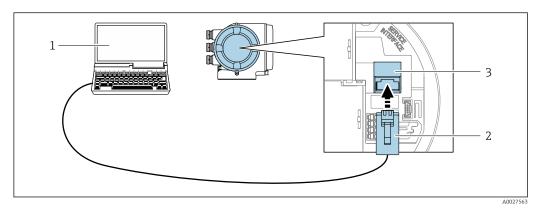


29 € Connection via service interface (CDI-RJ45)

- Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP"
- Standard Ethernet connecting cable with RJ45 connector
- Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

Via WLAN interface

The optional WLAN interface is available on the following device version: Order code for "Display; operation", option **G** "4-line, backlit, graphic display; touch control + WI.AN"

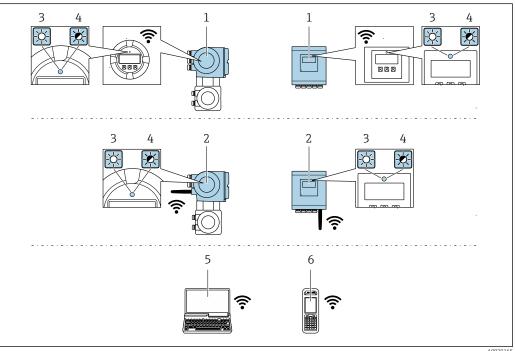

- Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- LED flashing: WLAN connection established between operating unit and measuring device
- Computer with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare)
- Mobile handheld terminal with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft *Edge*) for accessing the integrated device Web server or operating tool (e.g. FieldCare, DeviceCare)

Wireless LAN	IEEE 802.11 b/g (2.4 GHz) WLAN
Encryption	WPA2 PSK/TKIP AES-128

Configurable channels	1 to 11
Function	Access point with DHCP
Range with integrated antenna	Max. 10 m (32 ft)
Range with external antenna	Max. 50 m (164 ft)

Configuring the Internet protocol of the mobile terminal

NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.

▶ Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE

In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same mobile terminal. This could cause a network conflict.

- ▶ Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- ▶ If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

► Enable WLAN reception on the mobile terminal.

Establishing a connection from the mobile terminal to the measuring device

- 1. In the WLAN settings of the mobile terminal: Select the measuring device using the SSID (e.g. EH_Promass_500_A802000).
- 2. If necessary, select the WPA2 encryption method.
- 3. Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).
 - LED on display module flashes: it is now possible to operate the measuring device with the Web browser, FieldCare or DeviceCare.
- The serial number can be found on the nameplate.

Disconnecting

► After configuring the device: Terminate the WLAN connection between the operating unit and measuring device.

8.5.2 Field Xpert SFX350, SFX370

Function scope

Field Xpert SFX350 and Field Xpert SFX370 are mobile computers for commissioning and maintenance. They enable efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the **non-Ex area** (SFX350, SFX370) and the **Ex area** (SFX370).

For details, see Operating Instructions BA01202S

Source for device description files

See data → 🖺 84

8.5.3 **FieldCare**

Function scope

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

- CDI-RJ45 service interface → 🗎 78
- WLAN interface → 🗎 79

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook



Source for device description files


See information \rightarrow \blacksquare 84

Establishing a connection



For additional information, see Operating Instructions BA00027S and BA00059S

User interface

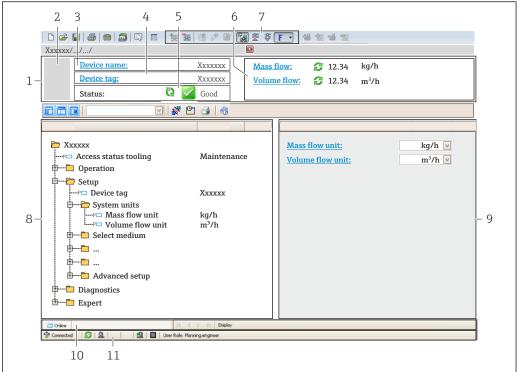

A0021051-EN

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Tag name
- 5 Status area with status signal→ 🖺 157
- 6 Display area for current measured values
- 7 Edit toolbar with additional functions such as save/restore, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

8.5.4 DeviceCare

Function scope

Tool to connect and configure Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.



For details, see Innovation Brochure INO1047S

Source for device description files

See information $\rightarrow \blacksquare 84$

8.5.5 AMS Device Manager

Function scope

Program from Emerson Process Management for operating and configuring measuring devices via FOUNDATION Fieldbus H1 protocol.

Source for device description files

See data → 🗎 84

8.5.6 Field Communicator 475

Function scope

Industrial handheld terminal from Emerson Process Management for remote configuration and measured value display via FOUNDATION Fieldbus H1 protocol.

Source for device description files

See data → 🖺 84

9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

Firmware version	01.00.zz	 On the title page of the Operating instructions On the transmitter nameplate Firmware version Diagnostics → Device information → Firmware version
Release date of firmware version	02.2017	
Manufacturer ID	0x452B48 (hex)	Manufacturer ID Diagnostics → Device information → Manufacturer ID
Device type ID	0x103B (hex)	Device type Diagnostics → Device information → Device type
Device revision	1	 On the transmitter nameplate Device revision Diagnostics → Device information → Device revision
DD revision	Information and files under: www.endress.com www.fieldbus.org	
CFF revision		

For an overview of the different firmware versions for the device $\rightarrow \triangleq 190$

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via FOUNDATION Fieldbus	Sources for obtaining device descriptions
FieldCare	 www.endress.com → Download Area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser)
DeviceCare	 www.endress.com → Download Area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser)
Field Xpert SFX350Field Xpert SFX370	Use update function of handheld terminal
AMS Device Manager (Emerson Process Management)	www.endress.com → Download Area
Field Communicator 475 (Emerson Process Management)	Use update function of handheld terminal

9.2 Cyclic data transmission

Cyclic data transmission when using the device master file (GSD).

9.2.1 Block model

The block model shows which input and output data the measuring device makes available for cyclic data exchange. Cyclic data exchange takes place with a FOUNDATION Fieldbus master (Class 1), e.g. a control system etc.

Display text (xxxx = serial number)	Base index	Description
RESOURCE_ xxxxxxxxxxx	400	Resource block
SETUP_xxxxxxxxxxx	600	"Setup" Transducer block
TRDDISP_ xxxxxxxxxx	800	"Display" Transducer block
TRDHROM_ xxxxxxxxxxx	1000	"HistoROM" Transducer block
TRDDIAG_ xxxxxxxxxx	1200	"Diagnostic" Transducer block
EXPERT_CONFIG_xxxxxxxxxxx	1400	"Expert configuration" Transducer block
SERVICE_SENSOR_xxxxxxxxxxx	1600	"Service sensor" Transducer block
TRDTIC_xxxxxxxxxx	1800	"Totalizer" Transducer block
TRDHBT_ xxxxxxxxxxx	2000	Transducer block "Heartbeat results"
ANALOG_INPUT_1_xxxxxxxxxxx	3400	Analog Input function block 1 (AI)
ANALOG_INPUT_2_xxxxxxxxxxx	3600	Analog Input function block 2 (AI)
ANALOG_INPUT_3_xxxxxxxxxxx	3800	Analog Input function block 3 (AI)
ANALOG_INPUT_4_xxxxxxxxxxx	4000	Analog Input function block 4 (AI)
ANALOG_INPUT_5_xxxxxxxxxxx	4200	Analog Input function block 5 (AI)
ANALOG_INPUT_6_xxxxxxxxxxx	4400	Analog Input function block 6 (AI)
ANALOG_INPUT_7_xxxxxxxxxxx	4600	Analog Input function block 7 (AI)
ANALOG_INPUT_8_xxxxxxxxxxx	4800	Analog Input function block 8 (AI)
MAO_ xxxxxxxxxx	5000	Multiple Analog Output block (MAO)
DIGITAL_INPUT_1_ xxxxxxxxxxx	5200	Digital Input function block 1 (DI)
DIGITAL_INPUT_2_xxxxxxxxxxx	5400	Digital Input function block 2 (DI)
MDO_xxxxxxxxxx	5600	Multiple Digital Output block (MDO)
PID_ xxxxxxxxxx	5800	PID function block (PID)
INTEGRATOR_xxxxxxxxxxx	6000	Integrator function block (INTG)

9.2.2 Description of the modules

The input value of a module/function block is defined via the CHANNEL parameter.

AI module (Analog Input)

Eight Analog Input blocks are available.

CHANNEL	Measured variable
0	Uninitialized (factory setting)
7	Temperature
9	Volume flow
10	Concentration 1)
11	Mass flow
13	Corrected volume flow
14	Density
15	Reference density
16	Totalizer 1
17	Totalizer 2
18	Totalizer 3
33	Oscillation frequency 1)

CHANNEL	Measured variable
43	Frequency fluctuation ¹⁾
51	Carrier pipe temperature ¹⁾
57	Carrier mass flow 1)
58	Target mass flow 1)
63	Oscillation damping ¹⁾
65	Electronic temperature
66	Tube damping fluctuation ¹⁾
68	Exciter current 1)
81	HBSI ¹⁾
99	Current input 1 1)

¹⁾ Visible depending on the order options or device settings

MAO module (Multiple Analog Output)

Channel	Description
121	Channel_0

Structure

Channel_0							
Value 1	Value 2	Value 3	Value 4	Value 5	Value 6	Value 7	Value 8

Values	Measured variable
Value 1	External pressure 1)
Value 2	External temperature ¹⁾
Value 3	External reference density ¹⁾
Value 4	Not assigned
Value 5	Not assigned
Value 6	Not assigned
Value 7	Not assigned
Value 8	Not assigned

- 1) The external measured values must be transmitted to the device in the SI basic unit
- The selection is made via: Expert \rightarrow Sensor \rightarrow External compensation

DI module (Discrete Input)

Two Discrete Input blocks are available.

CHANNEL	Device function	State
0	Uninitialized (factory setting)	-
101	Switch output state	0 = off, 1 = active
103	Low flow cut off	0 = off, 1 = active

CHANNEL	Device function	State
104	Empty pipe detection	0 = off, 1 = active
105	Verification status ¹⁾	Overall result of the verification Verification: • 16 = Failed • 32 = Passed • 64 = Not performed
		 Verification status Verification: 1 = Not performed 2 = Failed 4 = Being performed 8 = Finished
		Status; result 17 = Status: not performed; Result: failed 18 = Status: failed; Result: failed 20 = Status: being performed; Result: failed 24 = Status: finished; Result: failed 33 = Status: not performed; Result: passed 34 = Status: failed; Result: passed 36 = Status: being performed; Result: passed 40 = Status: finished; Result: passed 40 = Status: not performed; Result: passed 65 = Status: not performed Result: not performed 66 = Status: failed; Result: not performed 72 = Status: finished; Result: not performed

1) Only available with the Heartbeat Verification application package

MDO module (Multiple Discrete Output)

Channel	Description
122	Channel_DO

Structure

Channel_DO							
Value 1	Value 2	Value 3	Value 4	Value 5	Value 6	Value 7	Value 8

Value	Device function	State
Value 1	Reset totalizer 1	0 = off, 1 = execute
Value 2	Reset totalizer 2	0 = off, 1 = execute
Value 3	Reset totalizer 3	0 = off, 1 = execute
Value 4	Flow override	0 = off, 1 = active
Value 5	Start heartbeat verification 1)	0 = off, 1 = start
Value 6	Status output	0 = off, 1 = active

Value	Device function	State
Value 7	Zero point adjustment	0 = off, 1 = on
Value 8	Not assigned	_

1) Only available with the Heartbeat Verification application package

9.2.3 Execution times

Function block	Execution time (ms)
Analog Input function block (AI)	6
Digital Input function block (DI)	4
PID function block (PID)	5
Multiple Analog Output block (MAO)	4
Multiple Digital Output block (MDO)	4
Integrator function block (INTG)	5

9.2.4 Methods

Method	Block	Navigation	Description
Set to "AUTO" mode	Resource Block	Via menu: Expert → Communication → Resource block → Target mode	This method sets the Resource Block and all the Transducer Blocks to the AUTO (Automatic) mode.
Set to "OOS" mode	Resource Block	Via menu: Expert → Communication → Resource block → Target mode	This method sets the Resource Block and all the Transducer Blocks to the OOS (Out of service) mode.
Restart	Resource Block	Via menu: Expert → Communication → Resource block → Restart	This method is used for selecting the setting for the restart parameter in the Resource Block. This resets device parameters to a specific value. The following options are supported: Uninitialized Run Resource Defaults Processor To delivery settings
ENP parameter	Resource Block	Via menu: Actions → Methods→ Calibrate → ENP parameter	This method is used to display and configure the parameters of the electronic nameplate (ENP).
Overview diagnostics - Remedy information	Diagnostic Transducer Block	Via link: Namur symbol	This method is used to display the diagnostic event with the highest priority that is currently active and the corresponding remedial measures.
Actual diagnostics – Remedy information	Diagnostic Transducer Block	Via menu: - Configure/Setup → Diagnostics → Actual diagnostics - Device/Diagnostics → Diagnostics	This method is used to display remedial measures for the diagnostic event with the highest priority that is currently active. This method is only available if an appropriate diagnostic event has occurred.
Previous diagnostics – Remedy information	Diagnostic Transducer Block	Via menu: - Configure/Setup → Diagnostics → Previous diagnostics - Device/Diagnostics → Diagnostics	This method is used to display remedial measures for the previous diagnostic event. This method is only available if an appropriate diagnostic event has occurred.

10 Commissioning

10.1 Function check

Before commissioning the measuring device:

- ▶ Make sure that the post-installation and post-connection checks have been performed.
- "Post-installation check" checklist → 🖺 34
- "Post-connection check" checklist → 🖺 55

10.2 Switching on the measuring device


- ▶ After a successful function check, switch on the measuring device.
 - After a successful startup, the local display switches automatically from the startup display to the operational display.

10.3 Connecting via FieldCare

- For FieldCare → 🖺 78 connection
- For connecting via FieldCare $\rightarrow \blacksquare 81$
- For the FieldCare → 🖺 82 user interface

10.4 Setting the operating language


Factory setting: English or ordered local language

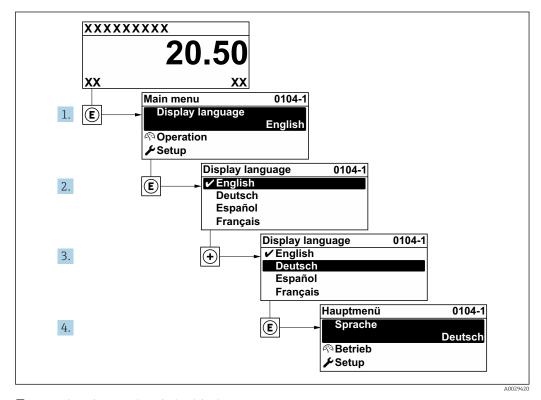

■ 30 Taking the example of the local display


10.5 Configuring the measuring device


- The **Setup** menuwith its guided wizards contains all the parameters needed for standard operation.
- Navigation to the **Setup** menu

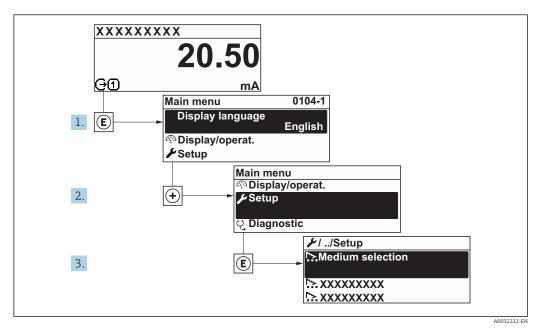

31 Taking the example of the local display


Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

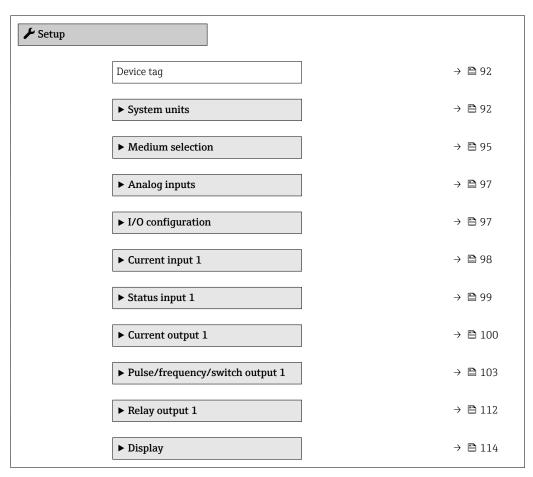

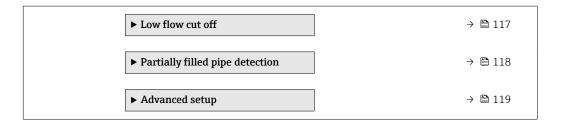

10.5.1 Defining the tag name

 To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

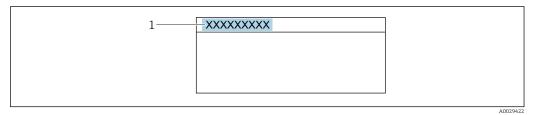

■ 32 Header of the operational display with tag name

1 Tag name

Navigation

"Setup" menu → Device tag

Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device tag	31	32 characters such as letters, numbers or special characters (e.g. @, %, /)	Promass300/500


10.5.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

Navigation

"Setup" menu → System units

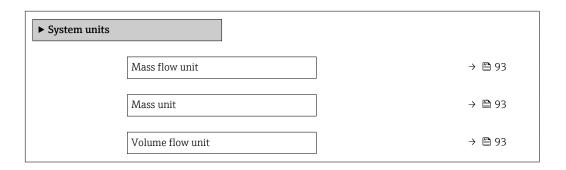

Volume unit	→ 🖺 93
Corrected volume flow unit	→ 🖺 93
Corrected volume unit	→ 🗎 93
Density unit	→ 🖺 93
Reference density unit	→ 🖺 93
Temperature unit	→ 🖺 94
Pressure unit	→ 🗎 94

Parameter	Description	Selection	Factory setting
Mass flow unit	Select mass flow unit. Result The selected unit applies for: Output Low flow cut off Simulation process variable	Unit choose list	Country-specific: kg/h lb/min
Mass unit	Select mass unit.	Unit choose list	Country-specific: kg lb
Volume flow unit	Select volume flow unit. Result The selected unit applies for: Output Low flow cut off Simulation process variable	Unit choose list	Country-specific: l/h gal/min (us)
Volume unit	Select volume unit.	Unit choose list	Country-specific: l (DN > 150 (6"): m³) gal (us)
Corrected volume flow unit	Select corrected volume flow unit. **Result** The selected unit applies for: **Corrected volume flow parameter* (→ ■ 139)	Unit choose list	Country-specific: NI/h Sft³/min
Corrected volume unit	Select corrected volume unit.	Unit choose list	Country-specific: NI Sft³
Density unit	Select density unit. Result The selected unit applies for: Output Simulation process variable Density adjustment (Expert menu)	Unit choose list	Country-specific: kg/l lb/ft ³
Reference density unit	Select reference density unit.	Unit choose list	Country-dependent • kg/Nl • lb/Sft³


Parameter	Description	Selection	Factory setting
Temperature unit	Select temperature unit. Result The selected unit applies for: • Electronic temperature parameter (6053) • Maximum value parameter (6051) • Minimum value parameter (6052) • Maximum value parameter (6108) • Minimum value parameter (6109) • Carrier pipe temperature parameter (6027) • Maximum value parameter (6029) • Minimum value parameter (6030) • Reference temperature parameter (1816) • Temperature parameter	Unit choose list	Country-specific: ■ °C ■ °F
Pressure unit	Select process pressure unit. Result The unit is taken from: Pressure value parameter (→ 🗎 96) External pressure parameter (→ 🖺 96) Pressure value	Unit choose list	Country-specific: • bar a • psi a

10.5.3 Selecting and setting the medium

The **Select medium** wizard submenu contains parameters that must be configured in order to select and set the medium.

Navigation

"Setup" menu \rightarrow Select medium

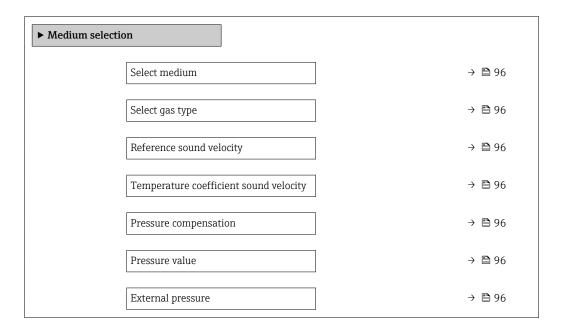

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Select medium	-	Select medium type.	LiquidGas	Liquid
Select gas type	The Gas option is selected in the Select medium parameter.	Select measured gas type.	 Air Ammonia NH3 Argon Ar Sulfur hexafluoride SF6 Oxygen O2 Ozone O3 Nitrogen oxide NOx Nitrogen N2 Nitrogen N2 Nitrous oxide N2O Methane CH4 Hydrogen H2 Helium He Hydrogen chloride HCI Hydrogen sulfide H2S Ethylene C2H4 Carbon dioxide CO2 Carbon monoxide CO Chlorine CI2 Butane C4H1O Propane C3H8 Propylene C3H6 Ethane C2H6 Others 	Methane CH4
Reference sound velocity	In the Select gas type parameter, the Others option is selected.	Enter sound velocity of gas at 0 °C (32 °F).	1 to 99 999.9999 m/s	415.0 m/s
Temperature coefficient sound velocity	The Others option is selected in the Select gas type parameter.	Enter temperature coefficient for the gas sound velocity.	Positive floating- point number	0 (m/s)/K
Pressure compensation	-	Select pressure compensation type.	 Off Fixed value External value Current input 1* 	Off
Pressure value	The Fixed value option is selected in the Pressure compensation parameter.	Enter process pressure to be used for pressure correction.	Positive floating- point number	0 bar
External pressure	The External value option is selected in the Pressure compensation parameter.	Shows the external process pressure value.	Positive floating- point number	0 bar

^{*} Visibility depends on order options or device settings


96

10.5.4 Configuring the analog inputs

The **Analog inputs** submenu guides the user systematically to the individual **Analog input 1 to n** submenu. From here you get to the parameters of the individual analog input.

Navigation

"Setup" menu \rightarrow Analog inputs

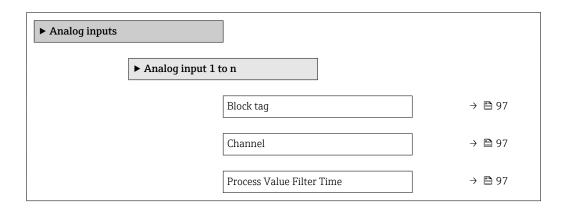

Parameter overview with brief description

Parameter	Description	User entry / Selection	Factory setting
Block tag	Unique name of the measuring device.	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).	-
Channel	Select the process variable.	Mass flow Volume flow Corrected volume flow Target mass flow Carrier mass flow Density Reference density Concentration Temperature Carrier pipe temperature Electronic temperature Oscillation frequency 0 Oscillation amplitude 0 Frequency fluctuation 0 Oscillation damping fluctuation 0 Oscillation damping fluctuation 0 Signal asymmetry Exciter current 0 HBSI* Totalizer 1 Totalizer 2 Totalizer 3 Current input 1* Uninitialized	Uninitialized
Process Value Filter Time	Enter the filter time specification for the filtering of the unconverted input value (PV).	Positive floating-point number	0 s


^{*} Visibility depends on order options or device settings

10.5.5 Displaying the I/O configuration

The **I/O configuration** submenu guides the user systematically through all the parameters in which the configuration of the I/O modules is displayed.

Navigation

"Setup" menu \rightarrow I/O configuration

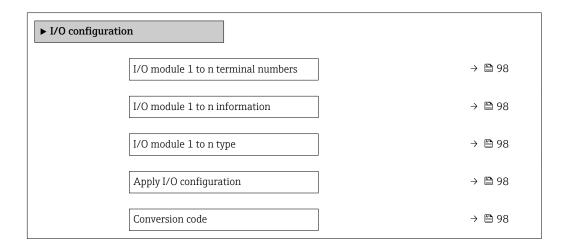

Parameter overview with brief description

Parameter	Description	User interface / Selection / User entry	Factory setting
I/O module terminal numbers	Shows the terminal numbers used by the I/O module.	 Not used 26-27 (I/O 1) 24-25 (I/O 2) 	-
I/O module information	Shows information of the plugged I/O module.	Not pluggedInvalidNot configurableConfigurableFieldbus	-
I/O module type	Shows the I/O module type.	 Off Current output* Current input* Status input* Pulse/frequency/switch output* 	Off
Apply I/O configuration	Apply parameterization of the freely configurable I/O module.	■ No ■ Yes	No
Conversion code	Enter the code in order to change the I/O configuration.	Positive integer	0

Visibility depends on order options or device settings

10.5.6 Configuring the current input

The **"Current input" wizard** guides the user systematically through all the parameters that have to be set for configuring the current input.

Navigation

"Setup" menu \rightarrow Current input



Signal mode	→ 🖺 99
0/4 mA value	→ 🖺 99
20 mA value	→ 🖺 99
Current span	→ 🖺 99
Failure mode	→ 🖺 99
Failure value	→ 🖺 99


Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the current input module.	Not used 24-25 (I/O 2)	-
Signal mode	The measuring device is not approved for use in the hazardous area with type of protection Ex-i.	Select the signal mode for the current input.	Passive Active	Passive
0/4 mA value	-	Enter 4 mA value.	Signed floating-point number	0
20 mA value	-	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter
Current span	-	Select current range for process value output and upper/lower level for alarm signal.	 420 mA 420 mA NAMUR 420 mA US 020 mA 	Country-specific: 420 mA NAMUR 420 mA US
Failure mode	-	Define input behavior in alarm condition.	AlarmLast valid valueDefined value	Alarm
Failure value	In the Failure mode parameter, the Defined value option is selected.	Enter value to be used by the device if input value from external device is missing.	Signed floating-point number	0

10.5.7 Configuring the status input

The **Status input** submenu guides the user systematically through all the parameters that have to be set for configuring the status input.

Navigation

 "Setup" menu \rightarrow Status input

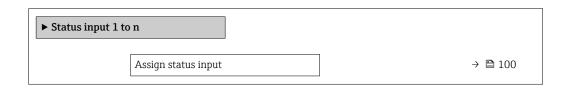

Terminal number	→ 🖺 100
Active level	→ 🖺 100
Terminal number	→ 🖺 100
Response time status input	→ 🖺 100
Terminal number	→ 🖺 100


Parameter	Description	User interface / Selection / User entry	Factory setting
Terminal number	Shows the terminal numbers used by the status input module.	Not used24-25 (I/O 2)	-
Assign status input	Select function for the status input.	 Off Reset totalizer 1 Reset totalizer 2 Reset totalizer 3 Reset all totalizers Flow override 	Off
Active level	Define input signal level at which the assigned function is triggered.	■ High ■ Low	High
Response time status input	Define the minimum amount of time the input signal level must be present before the selected function is triggered.	5 to 200 ms	50 ms

10.5.8 Configuring the current output

The **Current output** wizard guides you systematically through all the parameters that have to be set for configuring the current output.

Navigation

"Setup" menu \rightarrow Current output

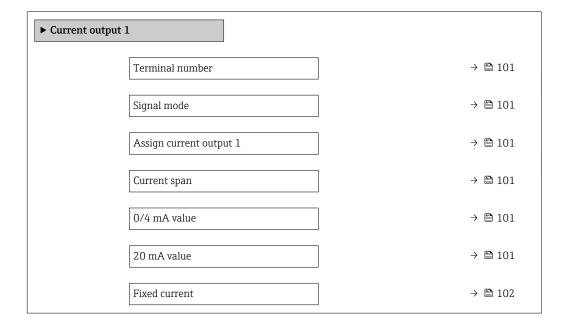

Failure mode	→ 🖺 102
Failure current	→ 🖺 102

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Assign current output		Select process variable for current output.	Mass flow Volume flow Corrected volume flow Target mass flow Density Reference density Concentration Temperature Carrier pipe temperature Electronic temperature Oscillation frequency 0 Oscillation amplitude 0 Frequency fluctuation 0 Oscillation damping 0 Oscillation damping fluctuation 0 Signal asymmetry Exciter current 0	Mass flow
Terminal number	-	Shows the terminal numbers used by the current output module.	Not used24-25 (I/O 2)	_
Current span	-	Select current range for process value output and upper/lower level for alarm signal.	 420 mA NAMUR 420 mA US 420 mA 020 mA Fixed current 	Country-specific: 420 mA NAMUR 420 mA US
Signal mode	-	Select the signal mode for the current output.	PassiveActive	Passive
0/4 mA value	One of the following options is selected in the Current span parameter (→ 🖹 101): • 420 mA NAMUR • 420 mA US • 420 mA • 020 mA	Enter 4 mA value.	Signed floating-point number	Country-specific: 0 kg/h 0 lb/min
20 mA value	One of the following options is selected in the Current span parameter (→ 🖹 101): • 420 mA NAMUR • 420 mA US • 420 mA • 020 mA	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Fixed current	In the Current span parameter $(\rightarrow \stackrel{\triangle}{=} 101)$, the Fixed current option is selected.	Defines the fixed output current.	0 to 22.5 mA	22.5 mA
Failure mode	One of the following options is selected in the Assign current output parameter (→ ■ 101): • Mass flow • Volume flow • Corrected volume flow • Target mass flow • Density • Reference density • Concentration • Temperature • Carrier pipe temperature • Carrier pipe temperature • Oscillation frequency 0 • Oscillation amplitude 0 • Frequency fluctuation 0 • Oscillation damping fluctuation 0 • Oscillation damping fluctuation 0 • Signal asymmetry • Exciter current 0 One of the following options is selected in the Current span parameter (→ ■ 101): • 420 mA NAMUR • 420 mA US • 420 mA	Define output behavior in alarm condition.	 Min. Max. Last valid value Actual value Defined value 	Max.
Failure current	In the Failure mode parameter, the Defined value option is selected.	Enter current output value in alarm condition.	0 to 22.5 mA	22.5 mA

Visibility depends on order options or device settings

 
102

10.5.9 Configuring the pulse/frequency/switch output

The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Pulse/frequency/switch output

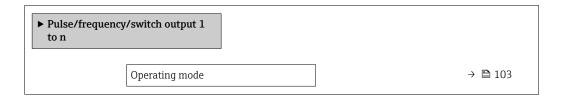


Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Operating mode	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse

Configuring the pulse output

Navigation

"Setup" menu → Pulse/frequency/switch output

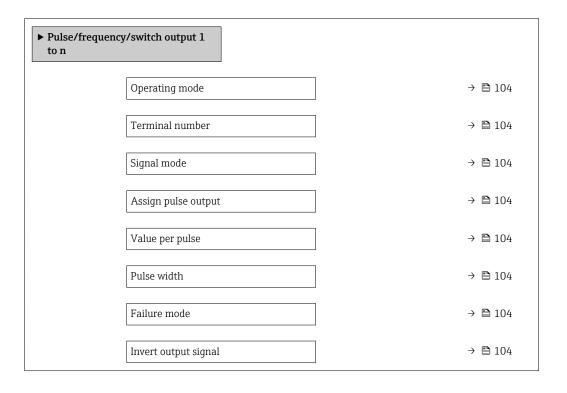

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	Not used24-25 (I/O 2)	-
Signal mode	-	Select the signal mode for the PFS output.	PassiveActive	Passive
Assign pulse output 1 to n	In the Operating mode parameter, the Pulse option is selected.	Select process variable for pulse output.	 Off Mass flow Volume flow Corrected volume flow Target mass flow * Carrier mass flow * 	Off
Value per pulse	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 🗎 104): ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow *	Enter measured value at which a pulse is output.	Signed floating-point number	Depends on country and nominal diameter
Pulse width	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 🗎 104): Mass flow Volume flow Corrected volume flow Target mass flow Carrier mass flow Carrier mass flow	Define time width of the output pulse.	0.05 to 2 000 ms	100 ms
Failure mode	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 🗎 104): ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow ■ Carrier mass flow *	Define output behavior in alarm condition.	Actual valueNo pulses	No pulses
Invert output signal	-	Invert the output signal.	■ No ■ Yes	No

^{*} Visibility depends on order options or device settings

104

Configuring the frequency output

Navigation

"Setup" menu → Pulse/frequency/switch output

► Pulse/frequency/switch output 1 to n	
Operating mode	→ 🖺 105
Terminal number	→ 🗎 105
Signal mode	→ 🖺 105
Assign frequency output	→ 🖺 106
Minimum frequency value	→ 🖺 106
Maximum frequency value	→ 🖺 107
Measuring value at minimum frequency	→ 🖺 107
Measuring value at maximum frequency	→ 🖺 108
Failure mode	→ 🖺 108
Failure frequency	→ 🖺 109
Invert output signal	→ 🖺 109

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	Not used24-25 (I/O 2)	-
Signal mode	-	Select the signal mode for the PFS output.	PassiveActive	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Assign frequency output	In the Operating mode parameter (→ 🖺 103), the Frequency option is selected.	Select process variable for frequency output.	Off Mass flow Volume flow Corrected volume flow Target mass flow* Carrier mass flow* Density Reference density Concentration* Temperature Carrier pipe temperature* Electronic temperature Oscillation frequency 0 Oscillation amplitude 0* Frequency fluctuation 0 Oscillation damping 0 Oscillation damping fluctuation 0 Signal asymmetry Exciter current 0 HBSI	Off
Minimum frequency value	In the Operating mode parameter the Frequency option is selected and in the Assign frequency output parameter (→ ■ 106) one of the following options is selected: ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow ■ Density ■ Reference density ■ Concentration ■ Temperature ■ Carrier pipe temperature ■ Carrier pipe temperature ■ Carrier pipe temperature ■ Oscillation frequency 0 ■ Frequency fluctuation 0 ■ Oscillation amplitude 0 ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 ■ Signal asymmetry ■ Exciter current 0	Enter minimum frequency.	0.0 to 10 000.0 Hz	0.0 Hz

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Maximum frequency value	In the Operating mode parameter the Frequency option is selected and in the Assign frequency output parameter (→ ■ 106) one of the following options is selected: Mass flow Volume flow Corrected volume flow Target mass flow* Carrier mass flow Density Reference density Concentration* Temperature Carrier pipe temperature Carrier pipe temperature Felectronic temperature Oscillation frequency 0 Frequency fluctuation 0 Oscillation damping 0 Oscillation damping fluctuation 0 Signal asymmetry Exciter current 0	Enter maximum frequency.	0.0 to 10000.0 Hz	10 000.0 Hz
Measuring value at minimum frequency	In the Operating mode parameter the Frequency option is selected and in the Assign frequency output parameter (→ ■ 106) one of the following options is selected: Mass flow Volume flow Corrected volume flow Target mass flow* Carrier mass flow* Density Reference density Concentration* Temperature Carrier pipe temperature Carrier pipe temperature Oscillation frequency 0 Frequency fluctuation 0 Oscillation damping 0 Oscillation damping fluctuation 0 Signal asymmetry Exciter current 0	Enter measured value for minmum frequency.	Signed floating-point number	Depends on country and nominal diameter

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Measuring value at maximum frequency	In the Operating mode parameter the Frequency option is selected and in the Assign frequency output parameter (→ ≧ 106) one of the following options is selected: Mass flow Volume flow Corrected volume flow Target mass flow* Carrier mass flow Density Reference density Concentration* Temperature Carrier pipe temperature Carrier pipe temperature Felectronic temperature Oscillation frequency 0 Frequency fluctuation 0 Oscillation amplitude 0* Oscillation damping fluctuation 0 Signal asymmetry Exciter current 0	Enter measured value for maximum frequency.	Signed floating-point number	Depends on country and nominal diameter
Failure mode	In the Operating mode parameter the Frequency option is selected and in the Assign frequency output parameter (→ 🖹 106) one of the following options is selected: • Mass flow • Volume flow • Corrected volume flow • Target mass flow * • Density • Reference density • Concentration * • Temperature • Carrier pipe temperature * • Electronic temperature • Oscillation frequency 0 • Frequency fluctuation 0 • Oscillation amplitude 0 * • Oscillation damping 0 • Oscillation damping fluctuation 0 • Signal asymmetry • Exciter current 0	Define output behavior in alarm condition.	■ Actual value ■ Defined value ■ 0 Hz	O Hz

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Failure frequency	In the Operating mode parameter the Frequency option is selected and in the Assign frequency output parameter (→ ■ 106) one of the following options is selected: Mass flow Volume flow Corrected volume flow Target mass flow* Carrier mass flow* Density Reference density Concentration* Temperature Carrier pipe temperature Carrier pipe temperature Felectronic temperature Oscillation frequency 0 Frequency fluctuation 0 Oscillation damping 0 Oscillation damping fluctuation 0 Signal asymmetry Exciter current 0	Enter frequency output value in alarm condition.	0.0 to 12 500.0 Hz	0.0 Hz
Invert output signal	-	Invert the output signal.	■ No ■ Yes	No

 $^{^{\}star}$ $\,\,$ $\,$ Visibility depends on order options or device settings

Configuring the switch output

Navigation

"Setup" menu → Pulse/frequency/switch output

➤ Pulse/frequento n	ncy/switch output 1	
	Operating mode	→ 🖺 110
	Terminal number	→ 🖺 110
	Signal mode	→ 🖺 110
	Switch output function	→ 🖺 111
	Assign diagnostic behavior	→ 🖺 111
	Assign limit	→ 🖺 111
	Assign flow direction check	→ 🗎 111
	Assign status	→ 🖺 111
	Switch-on value	→ 🖺 111
	Switch-off value	→ 🖺 111
	Switch-on delay	→ 🖺 111
	Switch-off delay	→ 🖺 112
	Failure mode	→ 🗎 112
	Invert output signal	→ 🖺 112

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	Not used24-25 (I/O 2)	_
Signal mode	-	Select the signal mode for the PFS output.	PassiveActive	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch output function	In the Operating mode parameter the Switch option is selected.	Select function for switch output.	 Off On Diagnostic behavior Limit Flow direction check Status 	Off
Assign diagnostic behavior	 In the Operating mode parameter, the Switch option is selected. In the Switch output function parameter, the Diagnostic behavior option is selected. 	Select diagnostic behavior for switch output.	AlarmAlarm or warningWarning	Alarm
Assign limit	 In the Operating mode parameter, the Switch option is selected. In the Switch output function parameter, the Limit option is selected. 	Select process variable for limit function.	Mass flow Volume flow Corrected volume flow Target mass flow Carrier mass flow Density Reference density Concentration Temperature Totalizer 1 Totalizer 2 Totalizer 3 Oscillation damping	Mass flow
Assign flow direction check	 The Switch option is selected in the Operating mode parameter. The Flow direction check option is selected in the Switch output function parameter. 	Select process variable for flow direction monitoring.	OffVolume flowMass flowCorrected volume flow	Mass flow
Assign status	 The Switch option is selected in the Operating mode parameter. The Status option is selected in the Switch output function parameter. 	Select device status for switch output.	 Partially filled pipe detection Low flow cut off Digital output 6 	Partially filled pipe detection
Switch-on value	 In the Operating mode parameter, the Switch option is selected. In the Switch output function parameter, the Limit option is selected. 	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
Switch-off value	 In the Operating mode parameter, the Switch option is selected. In the Switch output function parameter, the Limit option is selected. 	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
Switch-on delay	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch-off delay	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Failure mode	-	Define output behavior in alarm condition.	Actual statusOpenClosed	Open
Invert output signal	-	Invert the output signal.	NoYes	No

Visibility depends on order options or device settings

10.5.10 Configuring the relay output

The **Relay output** wizard guides the user systematically through all the parameters that have to be set for configuring the relay output.

Navigation

"Setup" menu \rightarrow Relay output 1 to n

lais01	utput 1 to n	
	Switch output function	→ 🖺 113
	Assign flow direction check	→ 🖺 113
	Assign limit	→ 🗎 113
	Assign diagnostic behavior	→ 🗎 113
	Assign status	→ 🗎 113
	Switch-off value	→ 🗎 113
	Switch-on value	→ 🗎 113
	Failure mode	→ 🖺 113

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Relay output function	_	Select the function for the relay output.	 Closed Open Diagnostic behavior Limit Flow direction check Digital Output 	Closed
Terminal number	-	Shows the terminal numbers used by the relay output module.	Not used24-25 (I/O 2)	-
Assign flow direction check	In the Relay output function parameter, the Flow direction check option is selected.	Select process variable for flow direction monitoring.	OffVolume flowMass flowCorrected volume flow	Mass flow
Assign limit	In the Relay output function parameter, the Limit option is selected.	Select process variable for limit function.	Mass flow Volume flow Corrected volume flow Target mass flow Carrier mass flow Density Reference density Concentration Temperature Totalizer 1 Totalizer 2 Totalizer 3 Oscillation damping	Mass flow
Assign diagnostic behavior	In the Relay output function parameter, the Diagnostic behavior option is selected.	Select diagnostic behavior for switch output.	AlarmAlarm or warningWarning	Alarm
Assign status	In the Relay output function parameter, the Digital Output option is selected.	Select device status for switch output.	Partially filled pipe detectionLow flow cut offDigital output 6	Partially filled pipe detection
Switch-off value	In the Relay output function parameter, the Limit option is selected.	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: Okg/h Olb/min
Switch-off delay	In the Relay output function parameter, the Limit option is selected.	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Switch-on value	In the Relay output function parameter, the Limit option is selected.	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: 0 kg/h 0 lb/min
Switch-on delay	In the Relay output function parameter, the Limit option is selected.	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s
Failure mode	-	Define output behavior in alarm condition.	Actual statusOpenClosed	Open


^{*} Visibility depends on order options or device settings

10.5.11 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can configured for configuring the local display.

Navigation

"Setup" menu \rightarrow Display

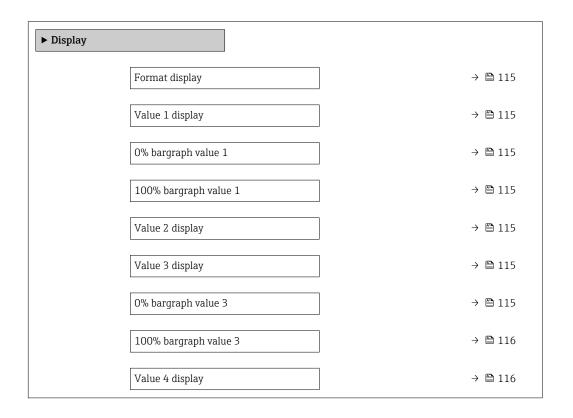

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	 1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values 	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	Mass flow Volume flow Corrected volume flow Target mass flow Target mass flow Carrier mass flow Density Reference density Concentration Temperature Carrier pipe temperature Electronic temperature Oscillation frequency 0 Oscillation amplitude 0 Frequency fluctuation 0 Oscillation damping 0 Oscillation damping fluctuation 0 Signal asymmetry Exciter current 0 Totalizer 1 Totalizer 2 Totalizer 3 Current output 1	Mass flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: Okg/h Olb/min
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter	None
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→ 🖺 115)	None
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: 0 kg/h 0 lb/min

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter ($\rightarrow \boxminus 115$)	None


^{*} Visibility depends on order options or device settings

10.5.12 Configuring the low flow cut off

The **Low flow cut off** wizard systematically guides the user through all the parameters that must be set to configure low flow cut off.

Navigation

"Setup" menu \rightarrow Low flow cut off

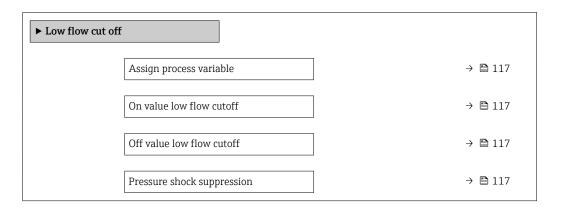

Parameter overview with brief description


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	-	Select process variable for low flow cut off.	OffMass flowVolume flowCorrected volume flow	Mass flow
On value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→ 🖺 117): Mass flow Volume flow Corrected volume flow	Enter on value for low flow cut off.	Positive floating- point number	Depends on country and nominal diameter
Off value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→ 🖺 117): Mass flow Volume flow Corrected volume flow	Enter off value for low flow cut off.	0 to 100.0 %	50 %
Pressure shock suppression	One of the following options is selected in the Assign process variable parameter (→ 🖺 117): • Mass flow • Volume flow • Corrected volume flow	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	0 s

10.5.13 Configuring the partial filled pipe detection

The **Partial filled pipe detection** wizard guides you systematically through all parameters that have to be set for configuring the monitoring of the pipe filling.

Navigation

"Setup" menu \rightarrow Partially filled pipe detection

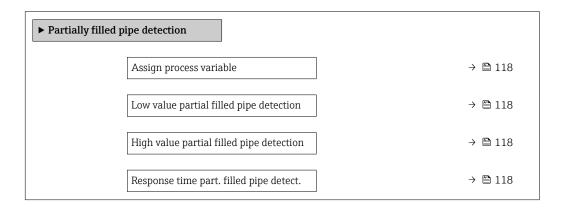


Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	-	Select process variable for partially filled pipe detection.	 Off Density Reference density	Off
Low value partial filled pipe detection	One of the following options is selected in the Assign process variable parameter (→ 🖺 118): ■ Density ■ Reference density	Enter lower limit value for deactivating partialy filled pipe detection.	Signed floating-point number	200
High value partial filled pipe detection	One of the following options is selected in the Assign process variable parameter (→ 🖺 118): ■ Density ■ Reference density	Enter upper limit value for deactivating partialy filled pipe detection.	Signed floating-point number	6000
Response time part. filled pipe detect.	One of the following options is selected in the Assign process variable parameter (→ 🖺 118): ■ Density ■ Reference density	Enter time before diagnostic message is displayed for partially filled pipe detection.	0 to 100 s	1 s

10.6 Advanced settings

The **Advanced setup** submenu together with its submenus contains parameters for specific settings.


Navigation to the "Advanced setup" submenu

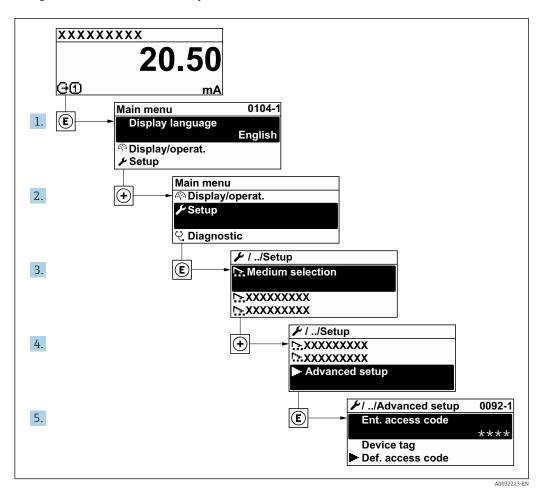


The number of submenus can vary depending on the device version. Some submenus are not dealt with in the Operating Instructions. These submenus and the parameters they contain are explained in the Special Documentation for the device.

Navigation

"Setup" menu \rightarrow Advanced setup

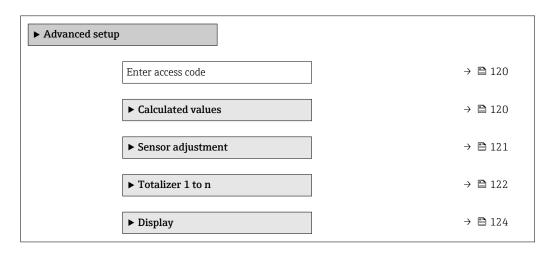

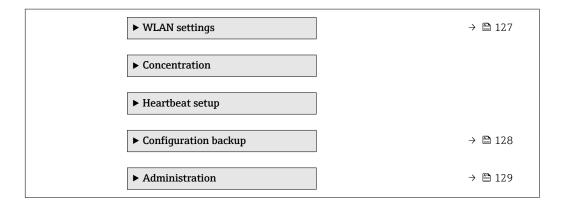

10.6.1 Using the parameter to enter the access code

Navigation

"Setup" menu → Advanced setup

Parameter overview with brief description


Parameter	Description	User entry
Enter access code	Enter access code to disable write protection of parameters.	0 to 9 999

10.6.2 Calculated values

The **Calculated values** submenu contains parameters for calculating the corrected volume flow.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Calculated values

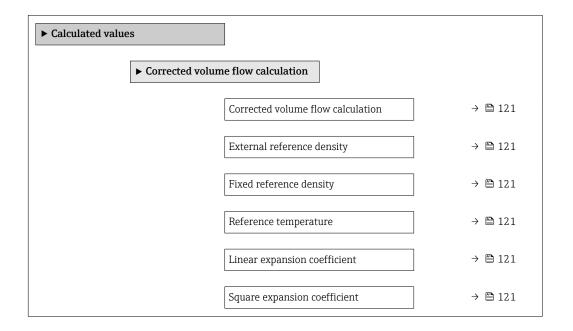

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Corrected volume flow calculation	-	Select reference density for calculating the corrected volume flow.	 Fixed reference density Calculated reference density Reference density by API table 53 External reference density Current input 1* 	Calculated reference density
External reference density	-	Shows external reference density.	Floating point number with sign	-
Fixed reference density	The Fixed reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter fixed value for reference density.	Positive floating- point number	1 kg/Nl
Reference temperature	The Calculated reference density option is selected in the Corrected volume flow calculation parameter.	Enter reference temperature for calculating the reference density.	−273.15 to 99 999 °C	Country-specific: +20 °C +68 °F
Linear expansion coefficient	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter linear, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0
Square expansion coefficient	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	For media with a non-linear expansion pattern: enter the quadratic, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0


^{*} Visibility depends on order options or device settings

10.6.3 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Sensor adjustment

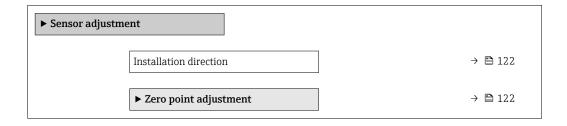

Parameter	Description	Selection	Factory setting
Installation direction	Set sign of flow direction to match the	Flow in arrow direction	Flow in arrow direction
	direction of the arrow on the sensor.	Flow against arrow direction	

Zero point adjustment


All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions $\Rightarrow \triangleq 207$. Therefore, a zero point adjustment in the field is generally not required.

Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Sensor adjustment \rightarrow Zero point adjustment

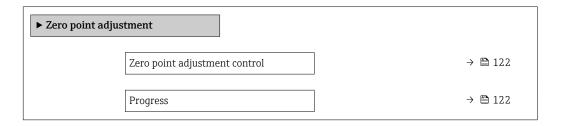

Parameter overview with brief description


Parameter	Description	Selection / User interface	Factory setting
Zero point adjustment control	Start zero point adjustment.	CancelBusyZero point adjust failureStart	Cancel
Progress	Shows the progress of the process.	0 to 100 %	_

10.6.4 Configuring the totalizer

In the **"Totalizer 1 to n" submenu** the individual totalizer can be configured.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Totalizer 1 to n

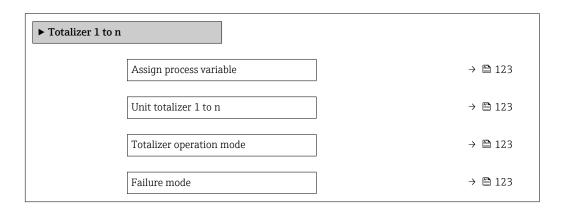

Parameter	Prerequisite	Description	Selection	Factory setting
Assign process variable	-	Select process variable for totalizer.	 Off Volume flow Mass flow Corrected volume flow Target mass flow* Carrier mass flow* 	Mass flow
Unit totalizer 1 to n	One of the following options is selected in the Assign process variable parameter (→ 🖺 123) of the Totalizer 1 to n submenu: Volume flow Mass flow Corrected volume flow Target mass flow Carrier mass flow Carrier mass flow	Select process variable totalizer unit.	Unit choose list	Country-specific: • kg • lb
Totalizer operation mode	One of the following options is selected in the Assign process variable parameter (→ 🖺 123)Totalizer 1 to n submenu: • Volume flow • Mass flow • Corrected volume flow • Target mass flow • Carrier mass flow *	Select totalizer calculation mode.	 Net flow total Forward flow total Reverse flow total 	Net flow total
Failure mode	One of the following options is selected in the Assign process variable parameter (→ 🗎 123)Totalizer 1 to n submenu: • Volume flow • Mass flow • Corrected volume flow • Target mass flow • Carrier mass flow	Define totalizer behavior in alarm condition.	StopActual valueLast valid value	Stop

^{*} Visibility depends on order options or device settings

10.6.5 Carrying out additional display configurations

In the ${f Display}$ submenu you can set all the parameters associated with the configuration of the local display.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Display

► Display			
	Format display		→ 🖺 125
	Value 1 display		→ 🖺 125
	0% bargraph value 1		→ 🖺 125
	100% bargraph value 1		→ 🖺 125
	Decimal places 1		→ 🖺 125
	Value 2 display		→ 🖺 125
	Decimal places 2		→ 🖺 125
	Value 3 display		→ 🖺 125
	0% bargraph value 3		→ 🖺 126
	100% bargraph value 3		→ 🖺 126
	Decimal places 3	· 	→ 🖺 126
	Value 4 display	· 	→ 🖺 126
	Decimal places 4	' 	→ 🖺 126
	Display language	' 	→ 🖺 126
	Display interval	' 	→ 🖺 126
	Display damping	' 	→ 🖺 126
	Header		→ 🖺 126
	Header text		→ 🖺 126
	Separator		→ 🖺 127
	Backlight	! 	→ 🖺 127
	-		

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	 1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values 	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	Mass flow Volume flow Corrected volume flow Target mass flow Density Reference density Concentration Temperature Carrier pipe temperature Electronic temperature Oscillation frequency 0 Oscillation amplitude 0 Frequency fluctuation 0 Scillation damping 0 Oscillation damping 0 Signal asymmetry Exciter current 0 Totalizer 1 Totalizer 3 Current output 1	Mass flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: Okg/h Olb/min
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the Value 1 display parameter.	Select the number of decimal places for the display value.	XX.XX.XXX.XXXX.XXXX.XXXX	x.xx
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter	None
Decimal places 2	A measured value is specified in the Value 2 display parameter.	Select the number of decimal places for the display value.	# X	x.xx
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→ 115)	None

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: Okg/h Olb/min
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 3	A measured value is specified in the Value 3 display parameter.	Select the number of decimal places for the display value.	• x • x.x • x.xx • x.xxx • x.xxx	x.xx
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→ 🖺 115)	None
Decimal places 4	A measured value is specified in the Value 4 display parameter.	Select the number of decimal places for the display value.	• X • X.X • X.XX • X.XXX • X.XXXX	x.xx
Display language	A local display is provided.	Set display language.	English Deutsch* Français* Español* Italiano* Nederlands* Portuguesa* Polski* Pycский язык (Russian)* Svenska* Türkçe* 中文 (Chinese)* 日本語 (Japanese)* 砂국어 (Korean)* Bahasa Indonesia* tiếng Việt (Vietnamese)* čeština (Czech)*	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	A local display is provided.	Select header contents on local display.	Device tagFree text	Device tag
Header text	In the Header parameter, the Free text option is selected.	Enter display header text.	Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)	

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	. (point), (comma)	. (point)
Backlight	One of the following conditions is met: Order code for "Display; operation", option F "4-line, illum.; touch control" Order code for "Display; operation", option G "4-line, illum.; touch control +WLAN"	Switch the local display backlight on and off.	DisableEnable	Enable


^{*} Visibility depends on order options or device settings

10.6.6 WLAN configuration

The **WLAN Settings** submenu guides the user systematically through all the parameters that have to be set for the WLAN configuration.

Navigation

"Setup" menu → Advanced setup → WLAN Settings

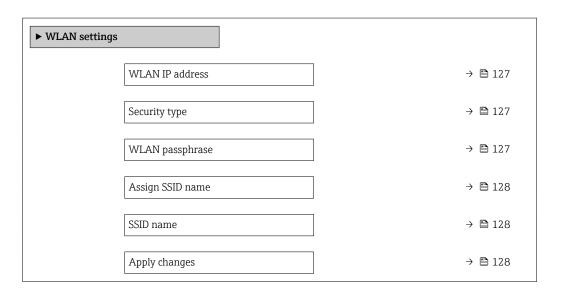

Parameter overview with brief description

Parameter	Prerequisite	Description	User entry / Selection	Factory setting
WLAN IP address	-	Enter IP address of the device WLAN interface.	4 octet: 0 to 255 (in the particular octet)	192.168.1.212
Security type	_	Select the security type of the WLAN interface.	UnsecuredWPA2-PSK	WPA2-PSK
WLAN passphrase	In the Security type parameter, the WPA2-PSK option is selected.	Enter the network key (8 to 32 characters). The network key supplied with the device should be changed during commissioning for security reasons.	8 to 32-digit character string comprising numbers, letters and special characters	Serial number of the measuring device (e.g. L100A802000)

Parameter	Prerequisite	Description	User entry / Selection	Factory setting
Assign SSID name	-	Select which name will be used for SSID: device tag or user-defined name.	Device tagUser-defined	User-defined
SSID name	In the Assign SSID name parameter, the User-defined option is selected.	Enter the user-defined SSID name (max. 32 characters). The user-defined SSID name may only be assigned once. If the SSID name is assigned more than once, the devices can interfere with one another.	Max. 32-digit character string comprising numbers, letters and special characters	EH_device designation_last 7 digits of the serial number (e.g. EH_Promass_500_A 802000)
Apply changes	-	Use changed WLAN settings.	CancelOk	Cancel


10.6.7 Configuration management

After commissioning, you can save the current device configurationor restore the previous device configuration.

You can do so using the **Configuration management** parameter and the related options found in the **Configuration backup** submenu.

Navigation

"Setup" menu → Advanced setup → Configuration backup

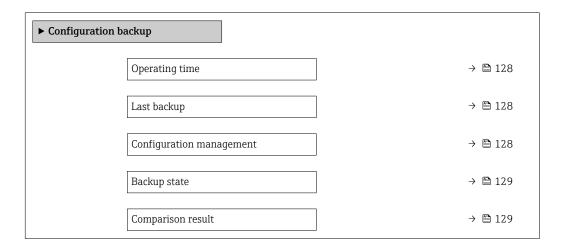

Parameter overview with brief description

Parameter	Description	User interface / Selection	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	-
Last backup	Shows when the last data backup was saved to embedded HistoROM.	Days (d), hours (h), minutes (m) and seconds (s)	_
Configuration management	Select action for managing the device data in the embedded HistoROM.	 Cancel Execute backup Restore Compare Clear backup data 	Cancel

Parameter	Description	User interface / Selection	Factory setting
Backup state	Shows the current status of data saving or restoring.	 None Backup in progress Restoring in progress Delete in progress Compare in progress Restoring failed Backup failed 	None
Comparison result	Comparison of current device data with embedded HistoROM.	 Settings identical Settings not identical No backup available Backup settings corrupt Check not done Dataset incompatible 	Check not done

Function scope of the "Configuration management" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Execute backup	A backup copy of the current device configuration is saved from the integrated HistoROM to the memory of the device. The backup copy includes the transmitter data of the device.
Restore	The last backup copy of the device configuration is restored from the device memory to the device's integrated HistoROM. The backup copy includes the transmitter data of the device.
Compare	The device configuration saved in the device memory is compared with the current device configuration of the integrated HistoROM.
Clear backup data	The backup copy of the device configuration is deleted from the memory of the device.


- Integrated HistoROM
 - A HistoROM is a "non-volatile" device memory in the form of an EEPROM.
- While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

10.6.8 Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

Navigation


"Setup" menu \rightarrow Advanced setup \rightarrow Administration

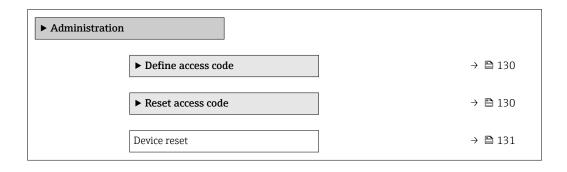

Using the parameter to define the access code

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration \rightarrow Define access code

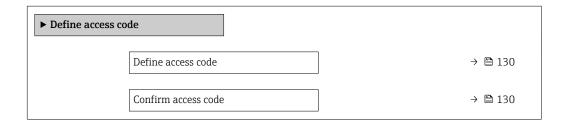


Parameter overview with brief description

Parameter	Description	User entry
Define access code	Restrict write-access to parameters to protect the configuration of the device against unintentional changes.	Max. 16-digit character string comprising numbers, letters and special characters
Confirm access code	Confirm the entered access code.	Max. 16-digit character string comprising numbers, letters and special characters

Using the parameter to reset the access code

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration \rightarrow Reset access code

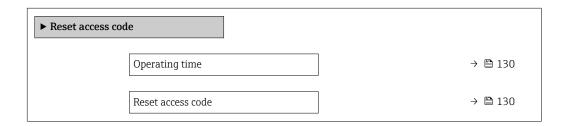

Parameter overview with brief description

Parameter	Description	User interface / User entry	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	-
Reset access code	Reset access code to factory settings. For a reset code, contact your Endress+Hauser service organization. The reset code can only be entered via: Web browser DeviceCare, FieldCare (via service interface CDI-RJ45) Fieldbus	Character string comprising numbers, letters and special characters	0x00

Using the parameter to reset the device

Navigation

"Setup" menu → Advanced setup → Administration

Parameter	Description	Selection	Factory setting
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	 Cancel To delivery settings Restart device Restore S-DAT backup ENP restart 	Cancel

10.7 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

Navigation

"Diagnostics" menu \rightarrow Simulation

► Simulation		
	Assign simulation process variable	→ 🖺 132
	Process variable value	→ 🖺 132
	Status input simulation	→ 🖺 132
	Input signal level	→ 🖺 132
	Current input 1 to n simulation	→ 🖺 132
	Value current input 1 to n	→ 🖺 132
	Current output 1 to n simulation	→ 🖺 132
	Value current output 1 to n	→ 🖺 132
	Frequency output simulation 1 to n	→ 🖺 132
	Frequency value 1 to n	→ 🖺 132
	Pulse output simulation 1 to n	→ 🖺 133
	Pulse value 1 to n	→ 🖺 133
	Switch output simulation 1 to n	→ 🗎 133
	Switch status 1 to n	→ 🗎 133
	Relay output 1 to n simulation	→ 🗎 133
	Switch status 1 to n	→ 🗎 133

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign simulation process variable	_	Select a process variable for the simulation process that is activated.	 Off Mass flow Volume flow Corrected volume flow Density Reference density Temperature Concentration Target mass flow Carrier mass flow 	Off
Process variable value	One of the following options is selected in the Assign simulation process variable parameter (→ 🗎 132): Mass flow Volume flow Corrected volume flow Density Reference density Temperature Concentration Target mass flow Carrier mass flow Carrier mass flow	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Status input simulation	-	Switch simulation of the status input on and off.	Off On	Off
Input signal level	In the Status input simulation parameter, the On option is selected.	Select the signal level for the simulation of the status input.	■ High ■ Low	High
Current input simulation	-	Switch simulation of the current input on and off.	Off On	Off
Value current input	In the Current input 1 to n simulation parameter, the On option is selected.	Enter the current value for simulation.	0 to 22.5 mA	0 mA
Current output simulation	-	Switch the simulation of the current output on and off.	Off On	Off
Value current output	In the Current output 1 to n simulation parameter, the On option is selected.	Enter the current value for simulation.	3.59 to 22.5 mA	3.59 mA
Frequency output simulation	In the Operating mode parameter, the Frequency option is selected.	Switch the simulation of the frequency output on and off.	• Off • On	Off
Frequency value	In the Frequency output simulation 1 to n parameter, the On option is selected.	Enter the frequency value for the simulation.	0.0 to 12 500.0 Hz	0.0 Hz

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Pulse output simulation	In the Operating mode parameter, the Pulse option is selected.	Set and switch off the pulse output simulation. For Fixed value option: Pulse width parameter (→ 104) defines the pulse width of the pulses output.	OffFixed valueDown-counting value	Off
Pulse value	In the Pulse output simulation 1 to n parameter, the Down-counting value option is selected.	Enter the number of pulses for simulation.	0 to 65 535	0
Switch output simulation	In the Operating mode parameter, the Switch option is selected.	Switch the simulation of the switch output on and off.	■ Off ■ On	Off
Switch status	-	Select the status of the status output for the simulation.	OpenClosed	Open
Relay output simulation	-	Switch simulation of the relay output on and off.	Off On	Off
Switch status	The On option is selected in the Switch output simulation 1 to n parameter parameter.	Select status of the relay output for the simulation.	OpenClosed	Open
Pulse output simulation	-	Set and switch off the pulse output simulation. For Fixed value option: Pulse width parameter defines the pulse width of the pulses output.	OffFixed valueDown-counting value	Off
Pulse value	In the Pulse output simulation parameter, the Down-counting value option is selected.	Set and switch off the pulse output simulation.	0 to 65 535	0
Device alarm simulation	-	Switch the device alarm on and off.	Off On	Off
Diagnostic event category	-	Select a diagnostic event category.	SensorElectronicsConfigurationProcess	Process
Diagnostic event simulation	-	Select a diagnostic event to simulate this event.	 Off Diagnostic event picklist (depends on the category selected) 	Off
Logging interval	-	Define the logging interval tlog for data logging. This value defines the time interval between the individual data points in the memory.	1.0 to 3 600.0 s	-

^{*} Visibility depends on order options or device settings

10.8 Protecting settings from unauthorized access

The following write protection options exist in order to protect the configuration of the measuring device from unintentional modification:

- Protect access to parameters via access code →

 ☐ 134

10.8.1 Write protection via access code

The effects of the user-specific access code are as follows:

- Via local operation, the parameters for the measuring device configuration are write-protected and their values can no longer be changed.
- Device access is protected via the Web browser, as are the parameters for the measuring device configuration.
- Device access is protected via FieldCare or DeviceCare (via CDI-RJ45 service interface), as are the parameters for the measuring device configuration.

Defining the access code via local display


- 1. Navigate to the **Define access code** parameter ($\rightarrow \triangleq 130$).
- 2. Define a max. 16-digit character string comprising numbers, letters and special characters as the access code.
- 3. Enter the access code again in the **Confirm access code** parameter ($\rightarrow \triangleq 130$) to confirm the code.
 - ightharpoonup The ealson-symbol appears in front of all write-protected parameters.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.

- - The user role with which the user is currently logged on via the local display is indicated by the →
 ☐ 70 Access status parameter. Navigation path: Operation → Access status

Parameters which can always be modified via the local display

Certain parameters that do not affect the measurement are excepted from parameter write protection via the local display. Despite the user-specific access code, they can always be modified, even if the other parameters are locked.

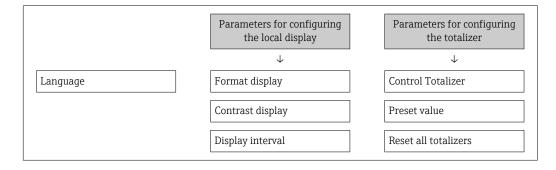

Defining the access code via the Web browser

1. Navigate to the **Define access code** parameter ($\rightarrow \triangleq 130$).

- 2. Max. Define a max. 4-digit numeric code as an access code.
- 3. Enter the access code again in the **Confirm access code** parameter ($\rightarrow \implies 130$) to confirm the code.
 - ► The Web browser switches to the login page.
- If no action is performed for 10 minutes, the Web browser automatically returns to the login page.
- If parameter write protection is activated via an access code, it can also only be deactivated via this access code → 🗎 70.
 - The user role with which the user is currently logged on via Web browser is indicated by the Access status parameter. Navigation path: Operation → Access status

Resetting the access code

If you misplace the user-specific access code, it is possible to reset the code to the factory setting. A reset code must be entered for this purpose. The user-specific access code can then be defined again afterwards.

Via Web browser, FieldCare, DeviceCare (via CDI-RJ45 service interface), fieldbus

- For a reset code, contact your Endress+Hauser service organization.
- 1. Navigate to the **Reset access code** parameter ($\rightarrow \triangleq 130$).
- 2. Enter the reset code.
 - The access code has been reset to the factory setting **0000**. It can be redefined $\rightarrow \boxminus 134$.

10.8.2 Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows write access to the entire operating menu - except for the "Contrast display" parameter - to be locked.

The parameter values are now read only and cannot be edited any more (exception "Contrast display" parameter):

- Via local display
- Via FOUNDATION Fieldbus


Proline 500 - digital

A WARNING

Excessive tightening torque applied to the fixing screws!


Risk of damaging the plastic transmitter.

▶ Tighten the fixing screws as per the tightening torque: 2 Nm (1.5 lbf ft)

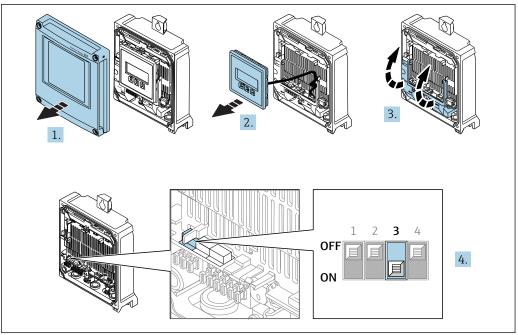


A002967

 - 1. Open the housing cover.
- 2. Remove the display module.
- 3. Fold open the terminal cover.
- 4. Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection.

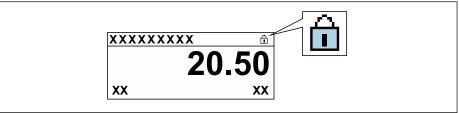


- A0029425
- 5. Setting the write protection (WP) switch on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.

Proline 500

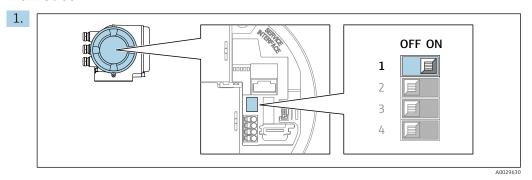

Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection.

└ In the **Locking status** parameter the **Hardware locked** option is displayed $\rightarrow \stackrel{\triangle}{=} 138$. In addition, on the local display the $\stackrel{\triangle}{=}$ -symbol appears in front of the parameters in the header of the operational display and in the navigation view.

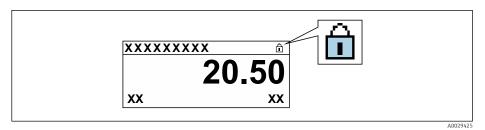

- 2. Setting the write protection (WP) switch on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.

10.8.3 Write protection via block operation

Locking via block operation:

- Block: **DISPLAY (TRDDISP)**; parameter: **Define access code**
- Block: EXPERT_CONFIG (TRDEXP); parameter: Enter access code

11 Operation

11.1 Reading the device locking status

Device active write protection: Locking status parameter

Operation → Locking status

Function scope of the "Locking status" parameter

Options	Description
None	The access status displayed in the Access status parameter applies $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
Hardware locked	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool).
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

11.2 Adjusting the operating language



Detailed information:

- For information on the operating languages supported by the measuring device \rightarrow \cong 217

11.3 Configuring the display


Detailed information:

11.4 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

Navigation

"Diagnostics" menu → Measured values

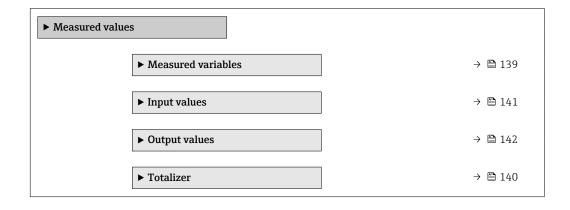


11.4.1 "Measured variables" submenu

The **Measured variables** submenu contains all the parameters needed to display the current measured values for each process variable.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Measured variables

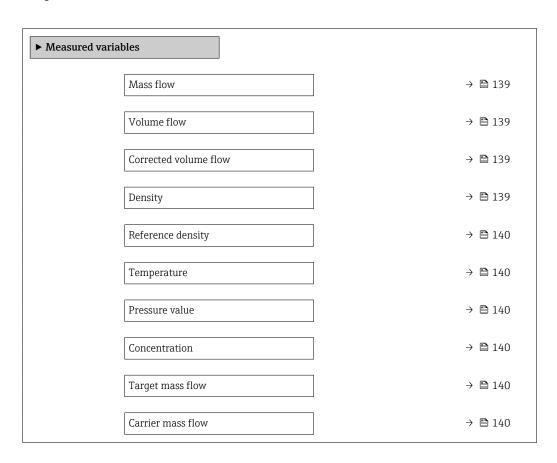

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Mass flow	-	Displays the mass flow currently measured.	Signed floating-point number
		Dependency The unit is taken from the Mass flow unit parameter (→ 🖺 93).	
Volume flow	-	Displays the volume flow currently calculated.	Signed floating-point number
		Dependency The unit is taken from the Volume flow unit parameter (→ 🖺 93).	
Corrected volume flow	-	Displays the corrected volume flow currently calculated.	Signed floating-point number
		Dependency The unit is taken from the Corrected volume flow unit parameter $(\rightarrow \stackrel{\triangle}{=} 93)$.	
Density	-	Shows the density currently measured.	Signed floating-point
		Dependency The unit is taken from the Density unit parameter (→ 🖺 93).	number


Parameter	Prerequisite	Description	User interface
Reference density	-	Displays the reference density currently calculated. Dependency The unit is taken from the Reference density unit parameter (→ 1 93).	Signed floating-point number
Temperature	-	Shows the medium temperature currently measured. Dependency The unit is taken from the Temperature unit parameter $(\rightarrow \implies 94)$.	Signed floating-point number
Pressure value	_	Displays either a fixed or external pressure value. Dependency The unit is taken from the Pressure unit parameter (→ 🖺 94).	Signed floating-point number
Concentration	For the following order code: "Application package", option ED "Concentration" The software options currently enabled are displayed in the Software option overview parameter.	Displays the concentration currently calculated. Dependency The unit is taken from the Concentration unit parameter.	Signed floating-point number
Target mass flow	With the following conditions: Order code for "Application package", option ED "Concentration" The WT-% option or the User conc. option is selected in the Concentration unit parameter. The software options currently enabled are displayed in the Software option overview parameter.	Displays the target fluid mass flow currently measured. Dependency The unit is taken from the Mass flow unit parameter (→ 93).	Signed floating-point number
Carrier mass flow	With the following conditions: Order code for "Application package", option ED "Concentration" The WT-% option or the User conc. option is selected in the Concentration unit parameter. The software options currently enabled are displayed in the Software option overview parameter.	Displays the carrier fluid mass flow currently measured. Dependency The unit is taken from the Mass flow unit parameter (→ 🖺 93).	Signed floating-point number

11.4.2 "Totalizer" submenu

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Totalizer

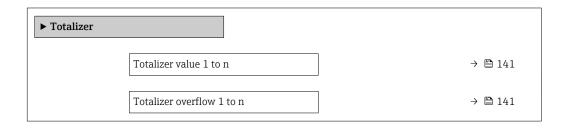


Parameter	Prerequisite	Description	User interface
Totalizer value 1 to n	A process variable is selected in the Assign process variable parameter (→ 🖺 123) of the Totalizer 1 to n submenu.	Displays the current totalizer counter value.	Signed floating-point number
Totalizer overflow 1 to n	A process variable is selected in the Assign process variable parameter (→ 🖺 123) of the Totalizer 1 to n submenu.	Displays the current totalizer overflow.	Integer with sign

11.4.3 "Input values" submenu

The **Input values** submenu guides you systematically to the individual input values.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Input values

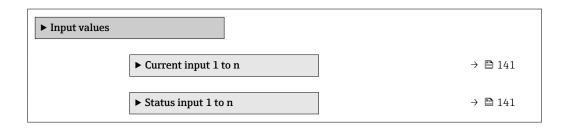


Input values of current input

The **Current input 1 to n** submenu contains all the parameters needed to display the current measured values for every current input.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Input values \rightarrow Current input 1 to n

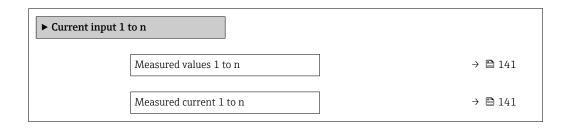

Parameter overview with brief description

Parameter	Description	User interface
Measured values	Displays the current input value.	Signed floating-point number
Measured current	Displays the current value of the current input.	0 to 22.5 mA

Input values of status input

The **Status input 1 to n** submenu contains all the parameters needed to display the current measured values for every status input.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Input values \rightarrow Status input 1 to n



Parameter overview with brief description


Parameter	Description	User interface
Value status input	Shows the current input signal level.	■ High ■ Low

11.4.4 Output values

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values

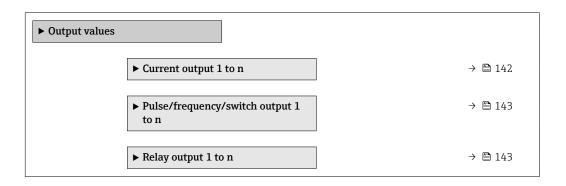


Output values of current output

The **Value current output** submenu contains all the parameters needed to display the current measured values for every current output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values \rightarrow Value current output 1 to n

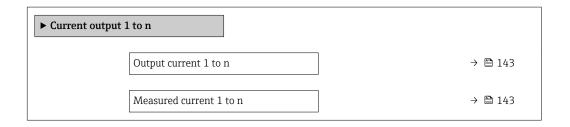


Parameter	Description	User interface
Output current 1	Displays the current value currently calculated for the current output.	3.59 to 22.5 mA
Measured current	Displays the current value currently measured for the current output.	0 to 30 mA

Output values for pulse/frequency/switch output

The **Pulse/frequency/switch output 1 to n** submenu contains all the parameters needed to display the current measured values for every pulse/frequency/switch output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values \rightarrow Pulse/frequency/switch output 1 to n

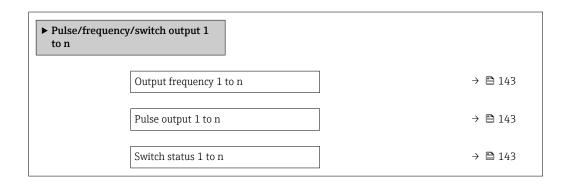

Parameter overview with brief description


Parameter	Prerequisite	Description	User interface
Output frequency	In the Operating mode parameter, the Frequency option is selected.	Displays the value currently measured for the frequency output.	0.0 to 12 500.0 Hz
Pulse output	In the Operating mode parameter, the Pulse option is selected.	Displays the pulse frequency currently output.	Positive floating-point number
Switch status	The Switch option is selected in the Operating mode parameter.	Displays the current switch output status.	■ Open ■ Closed

Output values for relay output

The **Relay output 1 to n** submenu contains all the parameters needed to display the current measured values for every relay output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values \rightarrow Relay output 1 to n

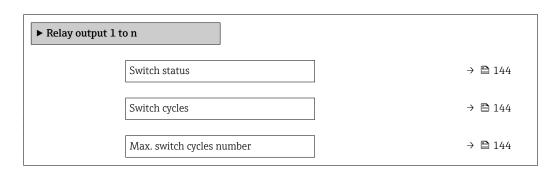

Parameter	Description	User interface
Switch status	Shows the current relay switch status.	OpenClosed
Switch cycles	Shows number of all performed switch cycles.	Positive integer
Max. switch cycles number	Shows the maximal number of guaranteed switch cycles.	Positive integer

11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu (→ 🗎 91)
- Advanced settings using the Advanced setup submenu (→ 🗎 119)


11.6 Performing a totalizer reset

The totalizers are reset in the **Operation** submenu:

- Control Totalizer
- Reset all totalizers

Navigation

"Operation" menu → Totalizer handling

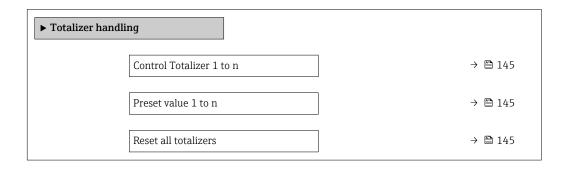

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Control Totalizer 1 to n	One of the following options is selected in the Assign process variable parameter (→ 🖹 123)Totalizer 1 to n submenu: • Volume flow • Mass flow • Corrected volume flow • Target mass flow • Carrier mass flow *	Control totalizer value.	 Totalize Reset + hold Preset + hold Reset + totalize Preset + totalize Hold 	Totalize
Preset value 1 to n	One of the following options is selected in the Assign process variable parameter (→ 🗎 123)Totalizer 1 to n submenu: • Volume flow • Mass flow • Corrected volume flow • Target mass flow • Carrier mass flow *	Specify start value for totalizer. Dependency The unit of the selected process variable is specified for the totalizer in the Unit totalizer parameter (→ 123).	Signed floating-point number	Country-specific: • 0 kg • 0 lb
Reset all totalizers	-	Reset all totalizers to 0 and start.	CancelReset + totalize	Cancel

Visibility depends on order options or device settings

Function scope of the "Control Totalizer" parameter

Options	Description	
Totalize	The totalizer is started or continues running.	
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.	
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value parameter.	
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.	
Preset + totalize	The totalizer is set to the defined start value from the Preset value parameter and the totaling process is restarted.	
Hold	Totalizing is stopped.	

Function scope of the "Reset all totalizers" parameter 11.6.2

Options	Description	
Cancel	No action is executed and the user exits the parameter.	
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized.	

11.7 Showing data logging

 
The Extended HistoROM application package must be enabled in the device (order option) for the **Data logging** submenu to appear. This contains all the parameters for the measured value history.

🚹 Data logging is also available via:

- Plant Asset Management Tool FieldCare → 🖺 81.
- Web browser

Function range

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Display of the measured value trend for each logging channel in the form of a chart

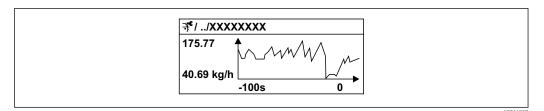

■ 33 Chart of a measured value trend

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.
- If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

Navigation

"Diagnostics" menu → Data logging

► Data logging	
Assign channel 14	→ 🖺 147
Logging interval	→ 🖺 147
Clear logging data	→ 🖺 147
Data logging	→ 🖺 147
Logging delay	→ 🖺 147
Data logging control	→ 🗎 147
Data logging status	→ 🖺 147
Entire logging duration	→ 🖺 147

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign channel 1 to n	The Extended HistoROM application package is available.	Assign process variable to logging channel.	• Off • Mass flow • Volume flow • Corrected volume flow • Target mass flow * • Carrier mass flow * • Density • Reference density • Concentration * • Temperature • Carrier pipe temperature • Carrier pipe temperature • Oscillation frequency 0 • Frequency fluctuation 0 • Oscillation amplitude * • Oscillation damping 0 • Oscillation damping fluctuation 0 • Signal asymmetry • Exciter current 0 • Current output 1 • Current output 3 • Current output 4 • HBSI	Off
Logging interval	The Extended HistoROM application package is available.	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	0.1 to 999.0 s	1.0 s
Clear logging data	The Extended HistoROM application package is available.	Clear the entire logging data.	Cancel Clear data	Cancel
Data logging	-	Select the data logging method.	OverwritingNot overwriting	Overwriting
Logging delay	In the Data logging parameter, the Not overwriting option is selected.	Enter the time delay for measured value logging.	0 to 999 h	0 h
Data logging control	In the Data logging parameter, the Not overwriting option is selected.	Start and stop measured value logging.	NoneDelete + startStop	None
Data logging status	In the Data logging parameter, the Not overwriting option is selected.	Displays the measured value logging status.	DoneDelay activeActiveStopped	Done
Entire logging duration	In the Data logging parameter, the Not overwriting option is selected.	Displays the total logging duration.	Positive floating- point number	0 s

 $^{^{\}star}$ Visibility depends on order options or device settings

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For local display

Error	Possible causes	Solution
Local display dark and no output signals	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage .
Local display dark and no output signals	The polarity of the supply voltage is wrong.	Correct the polarity.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly. Terminals are not plugged into the main electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective. Main electronics module is defective.	Order spare part → 🖺 192.
Local display dark and no output signals	The connector between the main electronics module and display module is not plugged in correctly.	Check the connection and correct if necessary.
Local display dark and no output signals	The connecting cable is not plugged in correctly.	Check the connection of the electrode cable and correct if necessary. Check the connection of the coil current cable and correct if necessary.
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	 Set the display brighter by simultaneously pressing ± + €. Set the display darker by simultaneously pressing □ + €.
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part → 🖺 192.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures
Text on local display appears in a foreign language and cannot be understood.	Incorrect operating language is configured.	1. Press □ + ₺ for 2 s ("home position"). 2. Press □. 3. Set the desired language in the Display language parameter (→ □ 126).
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	 Check the cable and the connector between the main electronics module and display module. Order spare part → 192.

For output signals

Error	Possible causes	Solution
Signal output outside the valid range	Main electronics module is defective.	Order spare part → 🖺 192.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Configuration error	Check and correct the parameter configuration.
Device measures incorrectly.	Configuration error or device is operated outside the application.	Check and correct parameter configuration. Observe limit values specified in the "Technical Data".

For access

Error Possible causes		Solution
No write access to parameters	Hardware write protection enabled	Set the write protection switch on main electronics module to the OFF position $\rightarrow \blacksquare$ 135.
No write access to parameters	No write access to parameters Current user role has limited access authorization	
No connection via FOUNDATION Fieldbus	Device plug connected incorrectly	Check the pin assignment of the connector .
Not connecting to Web server	Web server disabled	Using the "FieldCare" or "DeviceCare" operating tool, check whether the Web server of the measuring device is enabled, and enable it if necessary → 🖺 77.
	Incorrect setting for the Ethernet interface of the computer	1. Check the properties of the Internet protocol (TCP/IP) . 2. Check the network settings with the IT manager.
Not connecting to Web server	Incorrect WLAN access data	 Check WLAN network status. Log on to the device again using WLAN access data. Verify that WLAN is enabled on the measuring device and operating device .
	WLAN communication disabled	-
Not connecting to Web server, FieldCare or DeviceCare	No WLAN network available	 Check if WLAN reception is present: LED on display module is lit blue Check if WLAN connection is enabled: LED on display module flashes blue Switch on instrument function.
Network connection not present or unstable	WLAN network is weak.	 Operating device is outside of reception range: Check network status on operating device. To improve network performance, use an external WLAN antenna.
	Parallel WLAN and Ethernet communication	Check network settings.Temporarily enable only the WLAN as an interface.
Web browser frozen and operation no longer possible	Data transfer active	Wait until data transfer or current action is finished.

Error	Possible causes	Solution
	Connection lost	Check cable connection and power supply. Refresh the Web browser and restart if necessary.
Content of Web browser incomplete or difficult to read	Not using optimum version of Web server.	Use the correct Web browser version . Clear the Web browser cache and restart the Web browser.
	Unsuitable view settings.	Change the font size/display ratio of the Web browser.
No or incomplete display of contents in the Web browser	 JavaScript not enabled JavaScript cannot be enabled	Enable JavaScript. Enter http://XXX.XXX.XXXX/ basic.html as the IP address.
Operation with FieldCare or DeviceCare via CDI-RJ45 service interface (port 8000)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.
Flashing of firmware with FieldCare or DeviceCare via CDI-RJ45 service interface (via port 8000 or TFTP ports)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.


12.2 Diagnostic information via light emitting diodes

12.2.1 Transmitter

Proline 500 - digital

Different LEDs in the transmitter provide information on the device status.

150

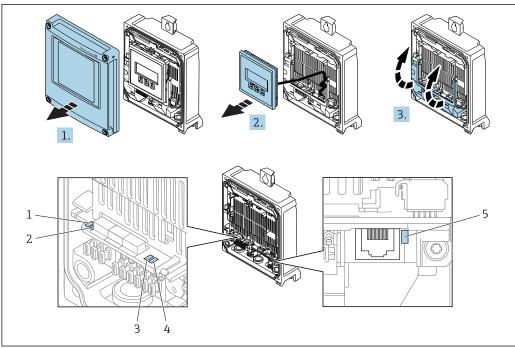


- Supply voltage Device status
- 1 2
- Not used
- Communication
- Service interface (CDI) active
- 1. Open the housing cover.
- 2. Remove the display module.
- 3. Fold open the terminal cover.

LED		Color	Meaning
1	Supply voltage	Green	Supply voltage is ok
		Off	Supply voltage is off or too low
2	Device status	Green	Device is OK
		Red	Error
		Flashing red	Warning
3	Not used	_	-
4	Communication	Flashing white	Communication active
5	Service interface (CDI)	Yellow	Connection established
		Flashing yellow	Communication active
		Off	No connection

Proline 500

Different LEDs in the transmitter provide information on the device status.

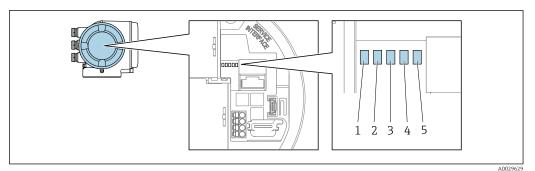


- Supply voltage Device status
- 2
- 3 Not used
- 4 Communication
- Service interface (CDI) active

LED		Color	Meaning
1	Supply voltage	Green	Supply voltage is ok
		Off	Supply voltage is off or too low
2	Device status	Red	Error
		Flashing red	Warning
3	Not used	-	-
4	Communication	White	Communication active
5	Service interface (CDI)	Yellow	Connection established
		Flashing yellow	Communication active
		Off	No connection

12.2.2 Sensor connection housing

Proline 500 - digital

Various light emitting diodes (LED) on the ISEM electronics (Intelligent Sensor Electronic Module) in the sensor connection housing provide information on the device status.

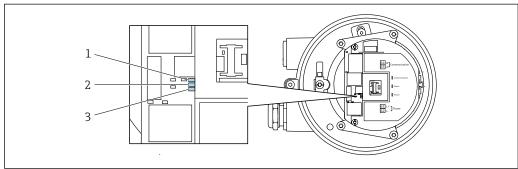

- Communication 1
- Device status
- Supply voltage


LED		Color	Meaning
1	Communication	White	Communication active
2	Device status	Red	Error
		Flashing red	Warning

LED			Color	Meaning	
3 Supply voltage		Supply voltage	Green	Supply voltage is ok	
			Off	Supply voltage is off or too low	

12.3 Diagnostic information on local display

12.3.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

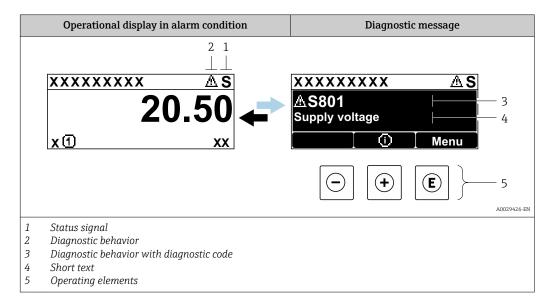

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

- Other diagnostic events that have occurred can be displayed in the **Diagnostics** menu:
 - Via parameter

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

The status signals are categorized according to VDI/VDE 2650 and NAMUR Recommendation NE 107: F = Failure, C = Function Check, S = Out of Specification, M = Maintenance Required


Symbol Meaning	
F	Failure A device error has occurred. The measured value is no longer valid.
Function check The device is in service mode (e.g. during a simulation).	
S	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
Maintenance required Maintenance is required. The measured value remains valid.	

Diagnostic behavior

Symbol	Meaning
*	 Alarm Measurement is interrupted. Signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated.
Δ	Warning Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.

Diagnostic information


The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

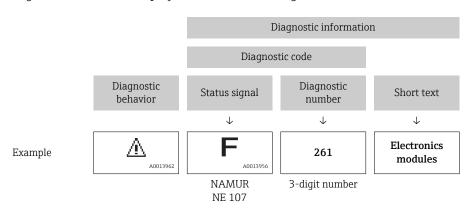

Operating elements

Key	Meaning
	Plus key
	In a menu, submenu Opens the message about remedy information.
	Enter key
E	In a menu, submenu Opens the operating menu.

12.3.2 Calling up remedial measures

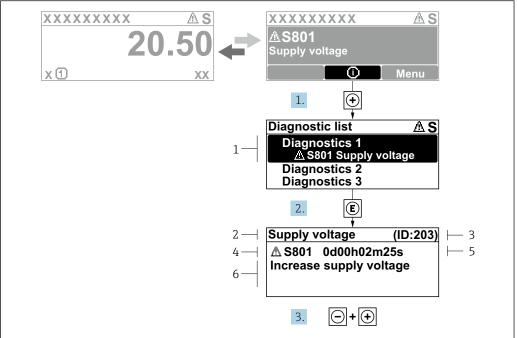

A0029431-EN

- 34 Message about remedial measures
- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures
- 1. The user is in the diagnostic message.

Press ± (① symbol).

- ► The **Diagnostic list** submenu opens.
- 2. Select the desired diagnostic event with \pm or \Box and press \Box .
 - └ The message about the remedial measures opens.
- 3. Press \Box + \pm simultaneously.
 - ► The message about the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or **Previous diagnostics** parameter.

- 1. Press E.
 - └ The message for the remedial measures for the selected diagnostic event opens.
- 2. Press \Box + \pm simultaneously.
 - ► The message for the remedial measures closes.

12.4 Diagnostic information in the Web browser

12.4.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

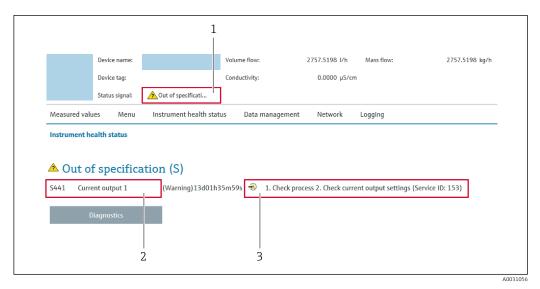

- 1 Status area with status signal
- 2 Diagnostic information→ 🖺 155
- 3 Remedy information with Service ID
- In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:
 - Via parameter
 - Via submenu → 🖺 185

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning		
8	Failure A device error has occurred. The measured value is no longer valid.		
Function check The device is in service mode (e.g. during a simulation).			
<u>^</u> ?	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)		
&	Maintenance required Maintenance is required. The measured value is still valid.		

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.


12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

12.5 Diagnostic information in DeviceCare or FieldCare

12.5.1 Diagnostic options


Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

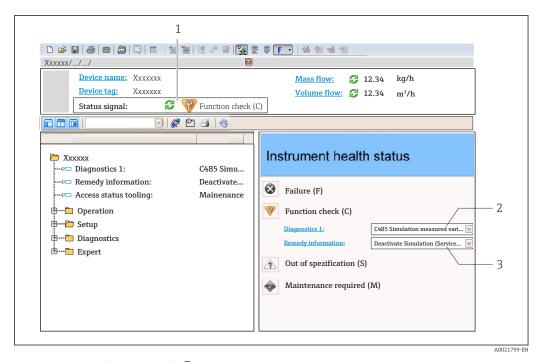

- 1 Status area with status signal→ 🖺 154
- 2 Diagnostic information → \bigcirc 155
- 3 Remedy information with Service ID
- In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:
 - Via parameter
 - Via submenu → 🖺 185

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

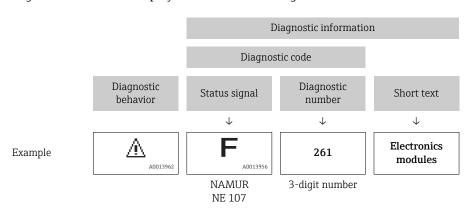

12.5.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

 
- 1. Call up the desired parameter.
- 2. On the right in the working area, mouse over the parameter.
 - ► A tool tip with remedy information for the diagnostic event appears.

12.6 Adapting the diagnostic information

12.6.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

Expert \rightarrow System \rightarrow Diagnostic handling \rightarrow Diagnostic behavior

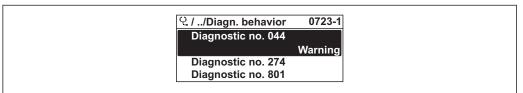

A0014048-FN

■ 35 Taking the example of the local display

You can assign the following options to the diagnostic number as the diagnostic behavior:

Options	Description	
Alarm The device stops measurement. The signal outputs and totalizers assume the dalarm condition. A diagnostic message is generated. The background lighting changes to red.		
Warning	The device continues to measure. The signal outputs and totalizers are not affected. A diagnostic message is generated.	
Logbook entry only	The device continues to measure. The diagnostic message is displayed only in the Event logbook submenu (Event list submenu) and is not displayed in alternation with the operational display.	
Off The diagnostic event is ignored, and no diagnostic message is generated or e		

12.6.2 Adapting the status signal

Each item of diagnostic information is assigned a specific status signal at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic event category** submenu.

Expert \rightarrow Communication \rightarrow Diagnostic event category

Available status signals

Configuration as per FOUNDATION Fieldbus Specification (FF912), in accordance with NAMUR NE107.

Symbol	Meaning		
A0013956	Failure A device error is present. The measured value is no longer valid.		
C	Function check The device is in service mode (e.g. during a simulation).		

Symbol	Meaning		
S	Out of specification The device is being operated: Outside its technical specification limits (e.g. outside the process temperature range) Outside of the configuration carried out by the user (e.g. maximum flow in parameter 20 mA value)		
M A0013957	Maintenance required Maintenance is required. The measured value is still valid.		

Enabling the configuration of the diagnostic information according to FF912

For compatibility reasons, the configuration of the diagnostic information according to FOUNDATION Fieldbus Specification FF912 is not enabled when the device is delivered from the factory.

Enabling the configuration of the diagnostic information according to FOUNDATION Fieldbus Specification FF912

- 1. Open the Resource block.
- 2. In **Feature Selection** parameter, select **Multi-bit Alarm (Bit-Alarm) Support** option.
 - The diagnostic information can be configured according to FOUNDATION Fieldbus Specification FF912.

Grouping the diagnostic information

Diagnostic information is assigned to different groups. The groups differ depending on the weighting (severity) of the diagnostic event:

- Highest weighting
- High weighting
- Low weighting

Assignment of the diagnostic information (factory setting)

The assignment of the diagnostic information ex-works is indicated in the following tables.

Some diagnostic information can be assigned individually, irrespective of their range $\rightarrow \implies 162$.

ho Overview and description of all diagnostic information ho ho 163

Weighting	Status signal (factory setting)	Allocation	Diagnostic information range
Highest	Failure (F)	Sensor	F000 to 199
		Electronics	F200 to 399
		Configuration	F400 to 700
		Process	F800 to 999

Weighting	Status signal (factory setting)	Allocation	Diagnostic information range
High	Function check (C)	Sensor	C000 to 199
		Electronics	C200 to 399

Weighting	Status signal (factory setting)	Allocation	Diagnostic information range
		Configuration	C400 to 700
		Process	C800 to 999

Weighting	Status signal (factory setting)	Allocation	Diagnostic information range
Low	Out of specification (S)	Sensor	S000 to 199
		Electronics	S200 to 399
		Configuration	S400 to 700
		Process	S800 to 999

Weighting	Status signal (factory setting)	Allocation	Diagnostic information range
Low	Maintenance required (M)	Sensor	M000 to 199
		Electronics	M200 to 399
		Configuration	M400 to 700
		Process	M800 to 999

Changing the assignment of the diagnostic information

The individual ranges of the diagnostic information can be assigned to another status signal. This is done by changing the bit in the associated parameter. The bit change always applies for the entire range of the diagnostic information.

Each status signal has a parameter in the Resource Block in which it is possible to define the diagnostic event for which the status signal is transmitted:

- Failure (F): **FD_FAIL_MAP** parameter
- Function check (C): **FD_CHECK_MAP** parameter
- Out of specification (S): **FD_OFFSPEC_MAP** parameter
- Maintenance required (M): **FD_MAINT_MAP** parameter

Structure and assignment of the parameters for the status signals (factory setting)

Weighting	Allocation	Bit	FD_ FAIL_ MAP	FD_ CHECK_ MAP	FD_ OFFSPEC_ MAP	FD_ MAINT_ MAP
Highest	Sensor	31	1	0	0	0
	Electronics	30	1	0	0	0
	Configuration	29	1	0	0	0
	Process	28	1	0	0	0
High	Sensor	27	0	1	0	0
	Electronics	26	0	1	0	0
	Configuration	25	0	1	0	0
	Process	24	0	1	0	0
Low	Sensor	23	0	0	1	0
	Electronics	22	0	0	1	0
	Configuration	21	0	0	1	0

Weighting	Allocation	Bit	FD_ FAIL_ MAP	FD_ CHECK_ MAP	FD_ OFFSPEC_ MAP	FD_ MAINT_ MAP
	Process	20	0	0	1	0
Low	Sensor	19	0	0	0	1
	Electronics	18	0	0	0	1
	Configuration	17	0	0	0	1
	Process	16	0	0	0	1
Configurable range → 🗎 162		15 to 1	0	0	0	0
Reserved (Fieldbus Foundat	ion)	0	0	0	0	0

Changing the status signal for a range of diagnostic information

Example: The status signal for the diagnostic information for electronics with the "Highest" weighting is to be changed from failure (F) to function check (C).

- 1. Set the Resource Block to the **OOS** block mode.
- 2. Open the **FD_FAIL_MAP** parameter in the Resource Block.
- 3. Change **Bit 30** to **0** in the parameter.
- 4. Open the **FD_CHECK_MAP** parameter in the Resource Block.
- 5. Change **Bit 26** to **1** in the parameter.
 - If a diagnostic event occurs for electronics with the "Highest weighting", the diagnostic information to this effect is displayed with the function check (C) status signal.
- 6. Set the Resource Block to the **AUTO** block mode.

NOTICE

No status signal is assigned to an area of diagnostic information.

If a diagnostic event occurs in this area, no status signal is transmitted to the control system.

- ▶ If you are changing the parameters, make sure that a status signal is assigned to all areas.
- If FieldCare is used, the status signal is enabled and disabled using the check box of the particular parameter.

Assigning diagnostic information individually to a status signal

Some diagnostic information can be individually assigned to a status signal, irrespective of their original range.

Assigning diagnostic information individually to a status signal via FieldCare.

- 1. In the FieldCare navigation window: **Expert** → **Communication** → **Field diagnostics** → **Alarm detection enable**
- 2. Select the desired diagnostic information from one of the fields **Configurable Area Bits 1** to **Configurable Area Bits 15**.
- 3. Press Enter to confirm.
- 4. When selecting the desired status signal (e.g. Offspec Map), also select the **Configurable Area Bit 1** to **Configurable Area Bit 15** that was assigned previously to the diagnostic information (step 2).
- 5. Press Enter to confirm.
 - ► The diagnostic event of the selected diagnostic information is recorded.

162

- 6. In the FieldCare navigation window: **Expert** → **Communication** → **Field diagnostics** → **Alarm broadcast enable**
- 7. Select the desired diagnostic information from one of the fields **Configurable Area Bits 1** to **Configurable Area Bits 15**.
- 8. Press Enter to confirm.
- 9. When selecting the desired status signal (e.g. Offspec Map), also select the **Configurable Area Bit 1** to **Configurable Area Bit 15** that was assigned previously to the diagnostic information (step 7).
- 10. Press Enter to confirm.
 - The selected diagnostic information is transmitted over the bus when a diagnostic event to this effect occurs.
- A change in the status signal does not affect diagnostic information that already exists. The new status signal is only assigned if this error occurs again after the status signal has changed.

Transmitting the diagnostic information over the bus

Prioritizing diagnostic information for transmission over the bus

Diagnostic information is only transmitted over the bus if its priority is between 2 and 15. Priority 1-events are displayed but are not transmitted over the bus. Diagnostic information with priority 0 (factory setting) is ignored.

It is possible to change the priority individually for the different status signals. The following parameters of the Resource Block are used for this purpose:

- FD FAIL PRI
- FD CHECK PRI
- FD OFFSPEC PRI
- FD_MAINT_PRI

Suppressing certain diagnostic information

It is possible to suppress certain events during transmission over the bus using a mask. While these events are displayed they are not transmitted over the bus. This mask is in FieldCare **Expert** \rightarrow **Communication** \rightarrow **Field diagnostics** \rightarrow **Alarm broadcast enable**. The mask is a negative selection mask, i.e. if a field is selected the associated diagnostic information is not transmitted over the bus.

12.7 Overview of diagnostic information

- The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.
- In the case of some items of diagnostic information, the status signal and the diagnostic behavior can be changed. Change the diagnostic information $\rightarrow \implies 159$

12.7.1 Diagnostic of sensor

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
022	Temperature sensor defective		1. Check or replace sensor	Empty pipe detection
	Measured variable status		electronic module (ISEM) 2. If available: Check connection	Low flow cut offSwitch output status
	Quality	Bad	cable between sensor and transmitter 3. Replace sensor	Pressure
	Quality substatus	Sensor failure		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
046	Sensor limit exceeded		1. Inspect sensor	Empty pipe detection
	Measured variable status [from	the factory] ¹⁾	2. Check process condition	Low flow cut offSwitch output statusPressure
	Quality	Good		
	Quality substatus	Non specific		
	- 2)			
	Status signal [from the factory] 2)	Š		
	Diagnostic behavior [from the factory] 3)	Warning		

- 1) Quality can be changed. This causes the overall status of the measured variable to change.
- 2) Status signal can be changed.
- 3) Diagnostic behavior can be changed.

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables
062	Sensor connection faulty		Check or replace sensor	Empty pipe detection
	Measured variable status		electronic module (ISEM) 2. If available: Check connection	Low flow cut offSwitch output status
	Quality	Bad	cable between sensor and transmitter 3. Replace sensor	Pressure
	Quality substatus	Sensor failure		
		_		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

No.	No. Diagnostic information Short text		Remedy instructions	Influenced measured variables
063	Exciter current faulty		Check or replace sensor	■ Empty pipe detection
	Measured variable status		electronic module (ISEM) 2. If available: Check connection	 Low flow cut off
	Quality	Bad	cable between sensor and transmitter 3. Replace sensor	
	Quality substatus	Sensor failure		
	Status signal [from the factory] 1)	S		
	Diagnostic behavior	Alarm		

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
082	Data storage Measured variable status		1. Check module connections	Empty pipe detectionLow flow cut offSwitch output status
			2. Contact service	
	Quality	Bad		Pressure
	Quality substatus	Sensor failure		
	. 1)			
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
083	Memory content		1. Restart device	■ Empty pipe detection
	Measured variable status		2. Restore HistoROM S-DAT backup ('Device reset' parameter)	Low flow cut offSwitch output status
	Quality	Bad	3. Replace HistoROM S-DAT	 Pressure
	Quality substatus	Sensor failure		
	. 1)			
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

Status signal can be changed. 1)

	Diagnostic i	nformation	Remedy instructions	Influenced measured	
No.	SI	nort text		variables	
140	Sensor signal asymmetrical		1. Check or replace sensor		Empty pipe detection
	Measured variable status [from	the factory] ¹⁾	electronic module (ISEM) 2. If available: Check connection	Low flow cut offSwitch output status	
	Quality	Good	cable between sensor and transmitter	 Pressure 	
	Quality substatus	Non specific	3. Replace sensor		
	Status signal [from the factory] 2)	S			
	Diagnostic behavior [from the factory] 3)	Alarm			

- Quality can be changed. This causes the overall status of the measured variable to change. Status signal can be changed. 1)
- 2)
- 3) Diagnostic behavior can be changed.

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
144	Measuring error too high		Check or change sensor	Empty pipe detection
	Measured variable status [from	the factory] 1)	2. Check process conditions	 Low flow cut off Switch output status Pressure
	Quality	Good		
	Quality substatus	Non specific		
	. 21			
	Status signal [from the factory] 2)	F		
	Diagnostic behavior [from the factory] 3)	Alarm		

- 1) Quality can be changed. This causes the overall status of the measured variable to change.
- 2) 3) Status signal can be changed.
- Diagnostic behavior can be changed.

Diagnostic of electronic 12.7.2

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
201	Device failure		1. Restart device	■ Empty pipe detection
	Measured variable status		2. Contact service	Low flow cut offSwitch output status
	Quality	Bad		Pressure
	Quality substatus	Device failure		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured variables
No.	SI	nort text		variables
242	Software incompatible		1. Check software	Empty pipe detection
	Measured variable status		Flash or change main electronics module	change main electronics Low flow cut off Switch output status
	Quality	Bad		■ Pressure
	Quality substatus	Device failure		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

Status signal can be changed. 1)

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
252	Modules incompatible		Check electronic modules	■ Empty pipe detection
	Measured variable status		2. Change electronic modules	 Low flow cut off Switch output status Pressure
	Quality	Bad		
	Quality substatus	Device failure		
	- 11			
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
262	Sensor electronic connection fault	y	1. Check or replace connection	Empty pipe detection
	Measured variable status			Low flow cut offPressure
	Quality	Bad	electronics 2. Check or replace ISEM or main electronics	
	Quality substatus	Device failure		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
270	Main electronic failure		Change main electronic module	■ Empty pipe detection
	Measured variable status		-	Low flow cut offSwitch output statusPressure
	Quality	Bad		
	Quality substatus	Device failure		
	- 11	_		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
271	Main electronic failure		Restart device	■ Empty pipe detection
	Measured variable status		2. Change main electronic module	Low flow cut offSwitch output status
	Quality	Bad		■ Pressure
	Quality substatus	Device failure		
	. 1)			
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	Short text			variables
272	Main electronic failure		1. Restart device	■ Empty pipe detection
	Measured variable status			Low flow cut offSwitch output status
	Quality	Bad		■ Pressure
	Quality substatus	Device failure		
	Status signal [from the factory] 1)	F.		
	Status signal [Hom the factory]	1.		
	Diagnostic behavior	Alarm		

	Diagnostic	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
273	Main electronic failure		Change electronic	Empty pipe detection
	Measured variable status			Low flow cut offSwitch output status
	Quality	Bad		■ Pressure
	Quality substatus	Device failure		
		_		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnosti c i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
275	I/O module 1 to n defective		Change I/O module	■ Empty pipe detection
	Measured variable status			Low flow cut offSwitch output status
	Quality	Bad		Pressure
	Quality substatus	Device failure		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
276	I/O module 1 to n faulty		1. Restart device	Empty pipe detection
	Measured variable status		2. Change I/O module	Low flow cut offSwitch output status
	Quality	Uncertain		 Pressure
	Quality substatus	Non specific		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured variables
No.	SI	nort text		
276	I/O module 1 to n faulty		1. Restart device	■ Empty pipe detection
	Measured variable status		2. Change I/O module	 Low flow cut off Switch output status
	Quality	Bad		Pressure
	Quality substatus	Device failure		
	(Charters as a second 1)	r		
	Status signal [from the factory] 1)	r .		
	Diagnostic behavior	Alarm		

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
283	Memory content		1. Reset device	■ Empty pipe detection
	Measured variable status		2. Contact service	Low flow cut offSwitch output status
	Quality	Bad		■ Pressure
	Quality substatus	Device failure		
	1)			
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
302	Device verification active		Device verification active, please	■ Empty pipe detection
	Measured variable status			Low flow cut offSwitch output status
	Quality	Bad		■ Pressure
	Quality substatus	Device failure		
	1)			
	Status signal [from the factory] 1)	C		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
311	Electronic failure		1. Do not reset device	■ Empty pipe detection
	Measured variable status		2. Contact service	Low flow cut offSwitch output status
	Quality	Bad		■ Pressure
	Quality substatus	Device failure		
	Status signal [from the factory] 1)	М		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
332		Replace user interface board	■ Empty pipe detection	
			■ Switch o	Low flow cut offSwitch output status
	Quality	Bad		■ Pressure
	Quality substatus	Device failure		
	Ctatus signal (from the factory) 1)	F		
	Status signal [from the factory] 1)	Г		
	Diagnostic behavior	Alarm		

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
361	I/O module 1 to n faulty		1. Restart device	Empty pipe detection
Measured	Measured variable status		2. Check electronic modules 3. Change I/O Modul or main • Low flow cut off • Switch output status	
	Quality	Bad	electronics	■ Pressure
	Quality substatus	Device failure		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
372	Sensor electronic (ISEM) faulty		1. Restart device	■ Empty pipe detection
	Measured variable status		2. Check if failure recurs3. Replace sensor electronic module	Low flow cut offSwitch output status
	Quality	Bad	(ISEM)	■ Pressure
	Quality substatus	Device failure		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic :	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
373	Sensor electronic (ISEM) faulty		Transfer data or reset device	■ Empty pipe detection
	Measured variable status		2. Contact service	Low flow cut offSwitch output status
	Quality	Bad		■ Pressure
	Quality substatus	Device failure		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables	
374	Sensor electronic (ISEM) faulty		Restart device Check if failure recurs	■ Empty pipe detection ■ Low flow cut off	
	Measured variable status [from	the factory] ¹⁾	3. Replace sensor electronic module	Switch output status	
	Quality	Good	(ISEM)	Pressure	
	Quality substatus	Non specific			
	2				
	Status signal [from the factory] 2)	S			
	Diagnostic behavior [from the factory] ³⁾	Warning			

- 1) Quality can be changed. This causes the overall status of the measured variable to change.
- 2) Status signal can be changed.
- 3) Diagnostic behavior can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
375	I/O- 1 to n communication failed		Restart device	■ Empty pipe detection
	Measured variable status		Check if failure recurs Replace module rack inclusive	Low flow cut offSwitch output status
	Quality	Bad	electronic modules	■ Pressure
	Quality substatus	Device failure		
	. 1)			
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

	Diagnostic i	information	Remedy instructions	Influenced measured	
No.	SI	nort text		variables	
382			1. Insert T-DAT	Empty pipe detection	
	Measured variable status		2. Replace T-DAT	Low flow cut offPressure	
	Quality	Bad			
	Quality substatus	Device failure			
	Status signal [from the factory] 1)	F			
	Diagnostic behavior	Alarm			

1) Status signal can be changed.

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
383	Memory content		1. Restart device	Empty pipe detection
	Measured variable status		2. Delete T-DAT via 'Reset device' parameter Low flow cut off Switch output status	Low flow cut offSwitch output status
	Quality	Bad	3. Replace T-DAT	 Pressure
	Quality substatus	Device failure		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
387	Embedded HistoROM failed		Contact service organization	■ Empty pipe detection
	Measured variable status			Low flow cut offSwitch output status
	Quality	Bad		■ Pressure
	Quality substatus	Device failure		
	. 1)	_		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

12.7.3 Diagnostic of configuration

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
303	I/O 1 to n configuration changed		1. Apply I/O module configuration	-
	Measured variable status		(parameter 'Apply I/O configuration') 2. Afterwards reload device description and check wiring	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] 1)	M		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	Short text			variables
330			Update firmware of device	■ Empty pipe detection
	Measured variable status		2. Restart device	Low flow cut offSwitch output status
	Quality	Bad		■ Pressure
	Quality substatus	Configuration error		
	. 1)			
	Status signal [from the factory] 1)	M		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
331	Firmware update failed		Update firmware of device	■ Empty pipe detection
	Measured variable status		2. Restart device	Low flow cut offSwitch output status
	Quality	Bad		Pressure
	Quality substatus	Configuration error		
	(Charters as a second 1)	r		
	Status signal [from the factory] 1)	r		
	Diagnostic behavior	Warning		

Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
410	10 Data transfer		1. Check connection	■ Empty pipe detection
	Measured variable status		2. Retry data transfer	Switch output status
	Quality	Bad		Pressure
	Quality substatus	Configuration error		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
412	Processing download		Download active, please wait	■ Empty pipe detection
	Measured variable status			Low flow cut offSwitch output status
	Quality	Uncertain		■ Pressure
	Quality substatus	Non specific		
	Status signal [from the factory] 1)	С		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
431	Trim 1 to n		Carry out trim	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	. 1)			
	Status signal [from the factory] 1)	С		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
437	Configuration incompatible		Restart device	■ Empty pipe detection
	Measured variable status		2. Contact service	Low flow cut offSwitch output status
	Quality	Bad		■ Pressure
	Quality substatus	Configuration error		
	- 11	_		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
438	Dataset		1. Check data set file	■ Empty pipe detection
	Measured variable status		Check device configuration Up- and download new	Low flow cut offSwitch output status
	Quality	Uncertain	configuration	■ Pressure
	Quality substatus	Non specific		
	Status signal [from the factory] 1)	M		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
441	Current output 1 to n		1. Check process	_
	Measured variable status		2. Check current output settings	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] 1)	S		
	Diagnostic behavior [from the factory] ²⁾	Warning		

- 1)
- Status signal can be changed. Diagnostic behavior can be changed. 2)

N	Diagnostic information		Remedy instructions	Influenced measured variables
No.	Si	nort text		
442	Frequency output 1 to n		1. Check process	_
	Measured variable status		2. Check frequency output settings	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] 1)	S		
	Diagnostic behavior [from the factory] ²⁾	Warning		

- 1)
- Status signal can be changed. Diagnostic behavior can be changed. 2)

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
443	Pulse output 1 to n		1. Check process	_
	Measured variable status		2. Check pulse output settings	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] 1)	S		
	Diagnostic behavior [from the factory] ²⁾	Warning		

- 1)
- Status signal can be changed. Diagnostic behavior can be changed. 2)

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
444	Current input 1 to n		1. Check process	_
	Measured variable status		2. Check current input settings	
	Quality	Good		
	Quality substatus	Non specific		
	0			
	Status signal [from the factory] 1)	S		
	Diagnostic behavior [from the factory] ²⁾	Warning		

- 1)
- Status signal can be changed. Diagnostic behavior can be changed. 2)

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
453	Flow override		Deactivate flow override	■ Empty pipe detection
	Measured variable status			Low flow cut offSwitch output status
	Quality	Good		■ Pressure
	Quality substatus	Non specific		
	Status signal [from the factory] 1)	C		
	Status signal [Hom the factory]			
	Diagnostic behavior	Warning		

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
463	Analog input 1 to n selection inva	og input 1 to n selection invalid	1. Check module/channel	Empty pipe detection
	Measured variable status		configuration 2. Check I/O module configuration	Low flow cut offSwitch output statusPressure
	Quality	Bad		
	Quality substatus	Configuration error		
	(Charters as a second 1)	r		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
484	Failure mode simulation		Deactivate simulation	■ Empty pipe detection
	Measured variable status			Low flow cut offSwitch output status
	Quality	Bad		Pressure
	Quality substatus	Configuration error		
	. 1)			
	Status signal [from the factory] 1)	C		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
485	Measured variable simulation		Deactivate simulation	■ Empty pipe detection
	Measured variable status			Low flow cut offSwitch output status
	Quality	Good		■ Pressure
	Quality substatus	Non specific		
	1)			
	Status signal [from the factory] 1)	C		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
486	Current input 1 to n simulation		Deactivate simulation	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	1)			
	Status signal [from the factory] 1)	С		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
491	Current output 1 to n simulation		Deactivate simulation	_
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	2			
	Status signal [from the factory] 1)	C		
	Diagnostic behavior	Warning		

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
492	Simulation frequency output 1 to 1	1	Deactivate simulation frequency	-
	Measured variable status		output	
	Quality	Good		
	Quality substatus	Non specific		
	1)			
	Status signal [from the factory] 1)	C		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	nort text		variables
493	Simulation pulse output 1 to n		Deactivate simulation pulse output	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	1)			
	Status signal [from the factory] 1)	C		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
494	Switch output simulation 1 to n		Deactivate simulation switch output	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] 1)	С		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic	information	Remedy instructions	Influenced measured
No.	Short text			variables
495	Diagnostic event simulation		Deactivate simulation	_
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	. 1)			
	Status signal [from the factory] 1)	С		
	Diagnostic behavior	Warning		

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	Short text			variables
496	Status input simulation		Deactivate simulation status input	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] 1)	С		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
497	Simulation block output		Deactivate simulation	_
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	C	C		
	Status signal [from the factory] 1)	C		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
520	I/O 1 to n hardware configuration	invalid	1. Check I/O hardware	-
	Measured variable status		configuration 2. Replace wrong I/O module	
	Quality	Good	3. Plug the module of double pulse output on correct slot	
	Quality substatus	Non specific		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

No.	Diagnostic information Short text		Remedy instructions	Influenced measured variables
537	537 Configuration		Check IP addresses in network	-
	Measured variable status		2. Change IP address	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured
No.	Short text			variables
594	Relay output simulation		Deactivate simulation switch output	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] 1)	С		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

12.7.4 Diagnostic of process

Diagnostic information			Remedy instructions	Influenced measured
No.	Short text			variables
803	Current loop 1 to n		Check wiring Change I/O module	-
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	2	_		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured
No.	SI	hort text		variables
830	Sensor temperature too high		sensor housing	Empty pipe detectionLow flow cut offSwitch output status
	Measured variable status [from the factory] 1)			
	Quality	Good		■ Pressure
	Quality substatus	Non specific		
	. 21			
	Status signal [from the factory] 2)	S		
	Diagnostic behavior [from the factory] 3)	Warning		

- 1) Quality can be changed. This causes the overall status of the measured variable to change.
- 2) Status signal can be changed.
- 3) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Influenced measured
No.	SI	nort text		variables
831	Sensor temperature too low		Increase ambient temp. around the	Empty pipe detection
	Measured variable status [from the factory] 1)		sensor housing	Low flow cut offSwitch output status
	Quality	Good		■ Pressure
	Quality substatus	Non specific		
	Status signal [from the factory] 2)	S		
	Diagnostic behavior [from the factory] ³⁾	Warning		

- 1) Quality can be changed. This causes the overall status of the measured variable to change.
- 2) 3) Status signal can be changed.
- Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Influenced measured	
No.	SI	nort text		variables	
832	Electronic temperature too high		Reduce ambient temperature	Empty pipe detection	
	Measured variable status [from the factory] 1)			Low flow cut offSwitch output status	
	Quality	Good		■ Pressure	
	Quality substatus	Non specific			
	Status signal [from the factory] 2)	S			
	Diagnostic behavior [from the factory] ³⁾	Warning			

- 1) Quality can be changed. This causes the overall status of the measured variable to change.
- 2) Status signal can be changed.
- 3) Diagnostic behavior can be changed.

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
833	Electronic temperature too low		Increase ambient temperature	■ Empty pipe detection
	Measured variable status [from	the factory] 1)		Low flow cut offSwitch output status
	Quality	Good		■ Pressure
	Quality substatus	Non specific		
	Status signal [from the factory] 2)	S		
	Status signar (from the factory)	3		
	Diagnostic behavior [from the factory] ³⁾	Warning		

- 1) Quality can be changed. This causes the overall status of the measured variable to change.
- 2) Status signal can be changed.
- 3) Diagnostic behavior can be changed.

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
834	Process temperature too high		Reduce process temperature	■ Empty pipe detection
	Measured variable status [from the	the factory] 1)	 Low flow cut of Switch output s Pressure 	Low flow cut offSwitch output status
	Quality	Good		 Pressure
	Quality substatus	Non specific		
	Status signal [from the factory] 2)	S		
	Diagnostic behavior [from the factory] 3)	Warning		

- 1) Quality can be changed. This causes the overall status of the measured variable to change.
- 2) Status signal can be changed.
- 3) Diagnostic behavior can be changed.

	Diagnostic information		Remedy instructions	Influenced measured variables
No.	SI	nort text		
835	Process temperature too low		Increase process temperature	■ Empty pipe detection
	Measured variable status [from t	the factory] ¹⁾		Low flow cut offSwitch output status
	Quality	Good		Pressure
	Quality substatus	Non specific		
	Status signal [from the factory] 2)	S		
	Status signal [Hom the factory]	3		
	Diagnostic behavior [from the factory] ³⁾	Warning		

- 1) Quality can be changed. This causes the overall status of the measured variable to change.
- 2) Status signal can be changed.
- 3) Diagnostic behavior can be changed.

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
842			Low flow cut off active!	■ Empty pipe detection
	Measured variable status		Check low flow cut off configuration	Low flow cut offSwitch output status
	Quality	Good		■ Pressure
	Quality substatus	Non specific		
	Status signal [from the factory] 1)	S		
	Status signal [Hom the factory]	3		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
843	Process limit		Check process conditions	■ Empty pipe detection
	Measured variable status			Low flow cut offSwitch output status
	Quality	Good		■ Pressure
	Quality substatus	Non specific		
	Status signal [from the factory] $^{1)}$	S		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	nort text		variables
862	Partly filled pipe		1. Check for gas in process	_
	Measured variable status [from the factory] 1)	the factory] 1)	2. Adjust detection limits	
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] 2)	S		
	Diagnostic behavior [from the factory] ³⁾	Warning		

- 1) Quality can be changed. This causes the overall status of the measured variable to change.
- 2) Status signal can be changed.
- 3) Diagnostic behavior can be changed.

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables
882	2 Input signal		Check input configuration	-
	Measured variable status		2. Check external device or process conditions	
	Quality	Bad		
	Quality substatus	Non specific		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables
910			Check electronic Inspect sensor	Empty pipe detection Low flow cut off Control of the
	Quality	Bad		Switch output statusPressure
	Quality substatus	Non specific		
	Status signal [from the factory] 1)	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

	Diagnostic i	nformation	Remedy instructions	Influenced measured
No.	SI	nort text		variables
912	Medium inhomogeneous		1. Check process cond.	■ Empty pipe detection
	Measured variable status [from	the factory] 1)	2. Increase system pressure	Low flow cut offSwitch output statusPressure
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] 2)	c		
	Status signal [from the factory]	3		
	Diagnostic behavior [from the factory] ³⁾	Warning		

- 1) Quality can be changed. This causes the overall status of the measured variable to change.
- 2) Status signal can be changed.
- 3) Diagnostic behavior can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured variables	
No.	SI	hort text		Variables	
913	Medium unsuitable		Check process conditions	Empty pipe detection	
	Measured variable status [from	the factory] 1)	Check electronic modules or sensor	Low flow cut offSwitch output status	
	Quality	Good		Pressure	
	Quality substatus	Non specific			
	Status signal [from the factory] ²⁾	S			
	Diagnostic behavior [from the factory] 3)	Warning			

- 1) Quality can be changed. This causes the overall status of the measured variable to change.
- 2) Status signal can be changed.
- 3) Diagnostic behavior can be changed.

	Diagnostic information		Remedy instructions	Influenced measured
No.	Short text			variables
944	Monitoring failed		Check process conditions for	Empty pipe detection
	Measured variable status [from the factory] 1)			Low flow cut offSwitch output status
	Quality	Good		Pressure
	Quality substatus	Non specific		
	(2)			
	Status signal [from the factory] 2)	5		
	Diagnostic behavior [from the factory] ³⁾	Warning		

- 1) Quality can be changed. This causes the overall status of the measured variable to change.
- 2) Status signal can be changed.
- 3) Diagnostic behavior can be changed.

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
948	Oscillation damping too high		Check process conditions	Empty pipe detection
	Measured variable status [from the factory] 1)			Low flow cut offSwitch output status
	Quality	Good		Pressure
	Quality substatus	Non specific		
	Status signal [from the factory] 2)	S		
	Diagnostic behavior [from the factory] ³⁾	Warning		

- 1) Quality can be changed. This causes the overall status of the measured variable to change.
- 2) Status signal can be changed.
- 3) Diagnostic behavior can be changed.


12.8 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

- To call up the measures to rectify a diagnostic event:
 - Via local display → 🖺 156
 - Via Web browser → 🗎 157
 - Via "FieldCare" operating tool → 🖺 158
 - Via "DeviceCare" operating tool → 🗎 158
- Other pending diagnostic events can be displayed in the **Diagnostic list** submenu $\rightarrow \stackrel{\square}{=} 185$

Navigation

"Diagnostics" menu

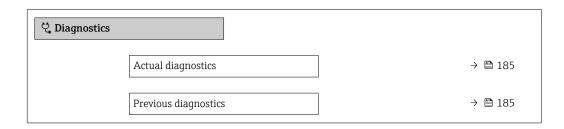

Operating time from restart	→ 🖺 185
Operating time	→ 🖺 185

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occured diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
		If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	-	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	-	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

12.9 Diagnostic messages in the DIAGNOSTIC Transducer Block

 
- The **Actual diagnostics** parameter **(actual diagnostics)** displays the message with the highest priority.
- A list of the active alarms can be viewed via the **Diagnostics 1** parameter (diagnostics_1) to Diagnostics 5 (diagnostics 5). If more than 5 messages are pending, the messages with the highest priority are shown on the display.
- You can view the last alarm that is no longer active via the **Previous diagnostics** parameter (**previous diagnostics**).

12.10 Diagnostic list

Up to 5 currently pending diagnostic events can be displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path

Diagnostics → Diagnostic list

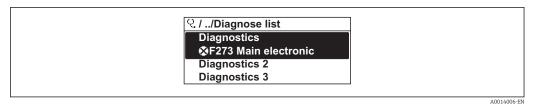

■ 36 Taking the example of the local display

To call up the measures to rectify a diagnostic event:

- Via local display \rightarrow 🗎 156
- Via Web browser → 🖺 157
- Via "FieldCare" operating tool → 🖺 158
- Via "DeviceCare" operating tool →

 158


12.11 Event logbook

12.11.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

Navigation path

Diagnostics menu → **Event logbook** submenu → Event list

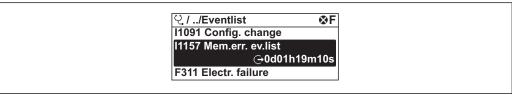

A0014008-EN

■ 37 Taking the example of the local display

- Max. 20 event messages can be displayed in chronological order.
- If the **Extended HistoROM** application package (order option) is enabled in the device, the event list can contain up to 100 entries .

The event history includes entries for:

- Diagnostic events → 🖺 163
- Information events \rightarrow 🗎 187

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
 - €: Occurrence of the event
 - ⊖: End of the event
- Information event
 - €: Occurrence of the event
- To call up the measures to rectify a diagnostic event:
 - Via local display →

 156
 - Via Web browser →

 157

 - Via "DeviceCare" operating tool →

 158
- For filtering the displayed event messages $\rightarrow \triangleq 187$

12.11.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

Navigation path

 $Diagnostics \rightarrow Event logbook \rightarrow Filter options$

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.11.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
I1000	(Device ok)
I1079	Sensor changed
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	Embedded HistoROM deleted
I1111	Density adjust failure
I1137	Electronic changed
I1151	History reset
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1184	Display connected
I1209	Density adjustment ok
I1221	Zero point adjust failure
I1222	Zero point adjustment ok
I1256	Display: access status changed
I1278	I/O module reset detected
I1335	Firmware changed
I1361	Web server login failed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1444	Device verification passed
I1445	Device verification failed
I1447	Record application reference data
I1448	Application reference data recorded
I1449	Recording application ref. data failed
I1450	Monitoring off

Info number	Info name
I1451	Monitoring on
I1457	Measured error verification failed
I1459	I/O module verification failed
I1460	HBSI verification failed
I1461	Sensor verification failed
I1462	Sensor electronic module verific. failed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished
I1618	I/O module replaced
I1619	I/O module replaced
I1621	I/O module replaced
I1622	Calibration changed
I1624	Reset all totalizers
I1625	Write protection activated
I1626	Write protection deactivated
I1627	Web server login successful
I1628	Display login successful
I1629	CDI login successful
I1631	Web server access changed
I1632	Display login failed
I1633	CDI login failed
I1634	Parameter factory reset
I1635	Parameter delivery reset
I1637	FOUNDATION Fieldbus specific reset done
I1639	Max. switch cycles number reached
I1649	Hardware write protection activated
I1650	Hardware write protection deactivated
I1712	New flash file received
I1725	Sensor electronic module (ISEM) changed
I1726	Configuration backup failed

12.12 Resetting the measuring device

Using the {\bf Restart} parameter it is possible to reset the entire device configuration or some of the configuration to a defined state.

12.12.1 Function scope of the "Restart" parameter

Options	Description
Uninitialized	The selection has no effect on the device.
Run	The selection has no effect on the device.
Resource	The selection has no effect on the device.


Options	Description
Defaults	All FOUNDATION Fieldbus blocks are reset to their factory settings. Example: Analog Input Channel to the Uninitialized option.
Processor	The device is restarted.
To delivery settings	Advanced FOUNDATION Fieldbus parameters (FOUNDATION Fieldbus blocks, schedule information) and device parameters for which a customer-specific default setting was ordered are reset to this customer-specific value.

12.13 Device information

The **Device information** submenu contains all parameters that display different information for device identification.

Navigation

"Diagnostics" menu \rightarrow Device information

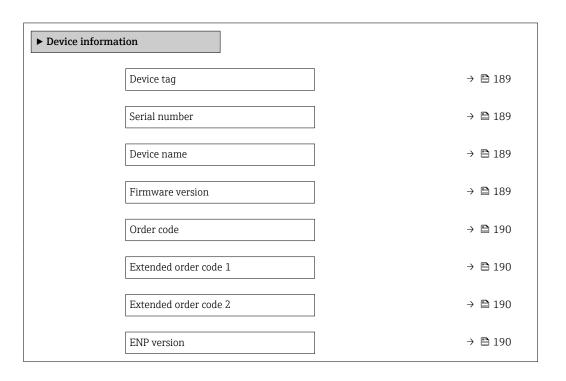

Parameter overview with brief description

Parameter	Description	User entry / User interface	Factory setting
Device tag	Enter the name for the measuring point.	32 characters such as letters, numbers or special characters (e.g. @, %, /)	Promass300/500
Serial number	Displays the serial number of the measuring device.	Max. 11-digit character string comprising letters and numbers.	-
Device name	Shows the name of the transmitter. The name can be found on the nameplate of the transmitter.	Promass300/500	-
Firmware version	Shows the device firmware version installed.	Character string with the following format: xx.yy.zz	-

Parameter	Description	User entry / User interface	Factory setting
Order code	Shows the device order code. The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks	-
Extended order code 1	Shows the 1st part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
Extended order code 2	Shows the 2nd part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
ENP version	Shows the version of the electronic nameplate (ENP).	Character string in the format xx.yy.zz	-

12.14 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware Modifications	Documentation type	Documentation
02.2017	01.00.zz	Option 74	Original firmware	Operating Instructions	BA01569D/06/EN/01.16

- It is possible to flash the firmware to the current version or the previous version using the service interface.
- For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.
- The manufacturer's information is available:
 - \bullet In the Download Area of the Endress+Hauser web site: www.endress.com \rightarrow Downloads
 - Specify the following details:
 - Product root, e.g. 8E5B
 - Text search: Manufacturer's information
 - Media type: Documentation Technical Documentation

13 Maintenance

13.1 Maintenance tasks

No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment: $\rightarrow \implies 194$

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repairs

14.1 General notes

14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

14.1.2 Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- ▶ Use only original Endress+Hauser spare parts.
- ► Carry out the repair according to the Installation Instructions.
- ▶ Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ▶ Document every repair and each conversion and enter them into the *W@M* life cycle management database.

14.2 Spare parts

W@M Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.



Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the Serial number parameter in the Device information submenu.

14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.



Your Endress+Hauser Sales Center can provide detailed information on the services.

14.4 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at http://www.endress.com/support/return-material

14.5 Disposal

14.5.1 Removing the measuring device

1. Switch off the device.

▲ WARNING

Danger to persons from process conditions.

- ► Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.
- 2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

14.5.2 Disposing of the measuring device

A WARNING

Danger to personnel and environment from fluids that are hazardous to health.

► Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- ▶ Observe valid federal/national regulations.
- ► Ensure proper separation and reuse of the device components.

15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress +Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Device-specific accessories

15.1.1 For the transmitter

Accessories	Description
Transmitter Proline 500 – digital Proline 500	Transmitter for replacement or storage. Use the order code to define the following specifications: Approvals Output Input Display / operation Housing Software Proline 500 – digital transmitter: Order number: 8X5BXX-XXXXXXXXX Proline 500 transmitter: Order number: 8X5BXX-XXXXXXXXX
	Proline 500 transmitter for replacement: When ordering, quote the serial number of the current transmitter. On the basis of the serial number, the device-specific data of the replacement device can also be used for the new transmitter. For details Proline 500 – digital transmitter: Installation Instructions EA01151 Proline 500 transmitter: Installation Instructions EA01152
WLAN antenna Wide range	External WLAN antenna for a range of up to 50 m (165 ft). Further information on the WLAN interface → 79.
Pipe mounting set	Pipe mounting set for transmitter. Proline 500 – digital transmitter Order number: 71346427 Proline 500 transmitter Order number: 71346428
Protective cover Transmitter Proline 500 – digital Proline 500	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight. Proline 500 – digital transmitter Order number: 71343504 Proline 500 transmitter Order number: 71343505 For details, see Installation Instructions EA01160
Display guard Proline 500 – digital	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight. Order number: 71228792 For details, see Installation Instructions EA01161

Connecting cable Proline 500 – digital Sensor – Transmitter	The following cable lengths are available: order code for "Cable, sensor connection" Option B: 20 m (65 ft) Option E: User configurable up to max. 50 m Option F: User configurable up to max. 165 ft Maximum possible cable length for a Proline 500 – digital connecting cable: 300 m (1000 ft)
Connecting cable Proline 500 Sensor – Transmitter	The following cable lengths are available: order code for "Cable, sensor connection" Option 1: 5 m (16 ft) Option 2: 10 m (32 ft) Option 3: 20 m (65 ft) Possible cable length for a Proline 500 connecting cable: max. 20 m (65 ft)

15.1.2 For the sensor

Accessories	Description
Heating jacket	Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids. If using oil as a heating medium, please consult with Endress+Hauser.

15.2 Communication-specific accessories

Accessories	Description
Field Xpert SFX350	Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the non-Ex area . For details, see Operating Instructions BA01202S
Field Xpert SFX370	Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the non-Ex area and the Ex area . For details, see Operating Instructions BA01202S

15.3 Service-specific accessories

Accessories	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring devices: Choice of measuring devices for industrial requirements Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy. Graphic illustration of the calculation results Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.
	Applicator is available: • Via the Internet: https://wapps.endress.com/applicator • As a downloadable DVD for local PC installation.

W@M	W@M Life Cycle Management Improved productivity with information at your fingertips. Data relevant to a plant and its components is generated from the first stages of planning and during the asset's complete life cycle. W@M Life Cycle Management is an open and flexible information platform with online and on-site tools. Instant access for your staff to current, in-depth data shortens your plant's engineering time, speeds up procurement processes and increases plant uptime. Combined with the right services, W@M Life Cycle Management boosts productivity in every phase. For more information, visit www.endress.com/lifecyclemanagement
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition. For details, see Operating Instructions BA00027S and BA00059S
DeviceCare	Tool for connecting and configuring Endress+Hauser field devices. For details, see Innovation brochure IN01047S

15.4 System components

Accessories	Description
Memograph M graphic display recorder	The Memograph M graphic display recorder provides information on all relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.
	For details, see "Technical Information" TI00133R and Operating Instructions BA00247R
Cerabar M	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.
	For details, see "Technical Information" TI00426P, TI00436P and Operating Instructions BA00200P, BA00382P
Cerabar S	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.
	For details, see "Technical Information" TI00383P and Operating Instructions BA00271P
iTEMP	The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the fluid temperature.
	For details, see "Fields of Activity", FA00006T

16 Technical data

16.1 Application

The measuring device is suitable for flow measurement of liquids and gases only.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

16.2 Function and system design

Measuring principle	Mass flow measurement based on the Coriolis measuring principle
Measuring system	The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by one connecting cable(s).
	For information on the structure of the device $\rightarrow \triangleq 14$

16.3 Input

Measured variable

Direct measured variables

- Mass flow
- Density
- Temperature

Calculated measured variables

- Volume flow
- Corrected volume flow
- Reference density

Measuring range

Measuring ranges for liquids

DN		Measuring range full scal	e values $\dot{m}_{\min(F)}$ to $\dot{m}_{\max(F)}$
[mm]	[in]	[t/h]	[tn. sh./h]
300	12	0 to 4 100	0 to 4520
350	14	0 to 4 100	0 to 4520
400	16	0 to 4 100	0 to 4520

Measuring ranges for gases

The full scale values depend on the density of the gas and can be calculated with the formula below:

$$\dot{m}_{max(G)} = \dot{m}_{max(F)} \cdot \rho_G : x$$

m _{max(G)}	Maximum full scale value for gas [kg/h]
m _{max(F)}	Maximum full scale value for liquid [kg/h]
$\dot{m}_{\max(G)} < \dot{m}_{\max(F)}$	$\dot{m}_{ max(G)}$ can never be greater than $\dot{m}_{ max(F)}$
ρ_{G}	Gas density in [kg/m³] at operating conditions
х	Constant dependent on nominal diameter

DN		х
[mm]	[in]	[kg/m³]
300	12	200
350	14	200
400	16	200

Calculation example for gas

- Sensor: Promass X, DN 350
- Gas: Air with a density of 60.3 kg/m 3 (at 20 $^{\circ}$ C and 50 bar)
- Measuring range (liquid): 70 000 kg/h
- $x = 200 \text{ kg/m}^3 \text{ (for Promass X, DN 350)}$

Maximum possible full scale value:

 $\dot{m}_{\max(G)} = \dot{m}_{\max(F)} \cdot \rho_G : x = 70\,000 \text{ kg/h} \cdot 60.3 \text{ kg/m}^3 : 200 \text{ kg/m}^3 = 21\,105 \text{ kg/h}$

Recommended measuring range

"Flow limit" section \rightarrow $\stackrel{\triangle}{=}$ 214

Operable flow range

Over 1000:1.

 
Flow rates above the preset full scale value do not override the electronics unit, with the result that the totalizer values are registered correctly.

Input signal

External measured values

To increase the accuracy of certain measured variables or to calculate the corrected volume flow for gases, the automation system can continuously write different measured values to the measuring device:

- Operating pressure to increase accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S)
- Fluid temperature to increase accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow for gases

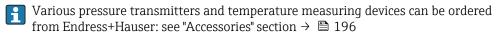

It is recommended to read in external measured values to calculate the following measured variables for gases:

- Mass flow
- Corrected volume flow

Current input

The measured values are written from the automation system to the measuring device via the current input $\Rightarrow \triangleq 199$.

Digital communication

The measured values are written from the automation system to the measuring device via FOUNDATION Fieldbus.

Current input 0/4 to 20 mA

Current input	0/4 to 20 mA (active/passive)
Current span	4 to 20 mA (active)0/4 to 20 mA (passive)
Resolution	1 μΑ
Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)
Maximum input voltage	≤ 30 V (passive)
Open-circuit voltage	≤ 28.8 V (active)
Possible input variables	PressureTemperatureDensity

Status input

Maximum input values	■ DC -3 to 30 V ■ If status input is active (ON): $R_i > 3 \text{ k}\Omega$
Response time	Adjustable: 5 to 200 ms
Input signal level	 Low signal: DC -3 to +5 V High signal: DC 12 to 30 V
Assignable functions	 Off Reset the individual totalizers separately Reset all totalizers Flow override

16.4 Output

Output Signal

FOUNDATION Fieldbus

FOUNDATION Fieldbus	H1, IEC 61158-2, galvanically isolated
Data transfer	31.25 KBit/s
Current consumption	10 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

Current output 0/4 to 20 mA

Current output	0/4 to 20 mA
Maximum output values	22.5 mA
Current span	Can be set to:
	4 to 20 mA (active)0/4 to 20 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	0 to 700Ω
Resolution	0.38 μΑ
Damping	Adjustable: 0.07 to 999 s
Assignable measured variables	 Mass flow Volume flow Corrected volume flow Density Reference density Temperature The range of options increases if the measuring device has one or more application packages.

Pulse/frequency/switch output

Function	Can be set to pulse, frequency or switch output
Version	Open collector
	Can be set to: Active Passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Pulse output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Pulse width	Adjustable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Adjustable

Assignable measured variables	 Mass flow Volume flow Corrected volume flow Density Reference density Temperature
Frequency output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Adjustable: end value frequency 2 to 10 000 Hz (f $_{ m max}$ = 12 500 Hz)
Damping	Adjustable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	 Mass flow Volume flow Corrected volume flow Density Reference density Temperature The range of options increases if the measuring device has one or more application packages.
Switch output	
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Adjustable: 0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	 Off On Diagnostic behavior Limit value Mass flow Volume flow Corrected volume flow Density Reference density Temperature Totalizer 1-3 Flow direction monitoring Status Partially filled pipe detection Low flow cut off The range of options increases if the measuring device has one or more application packages.

Relay output

Function	Switch output
Version	Relay output, galvanically isolated
Switching behavior	Can be set to: NO (normally open), factory setting NC (normally closed)

Maximum switching capacity (passive)	■ DC 30 V, 0.1 A ■ AC 30 V, 0.5 A
Assignable functions	■ Off ■ On ■ Diagnostic behavior ■ Limit value ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Totalizer 1-3 ■ Flow direction monitoring ■ Status ■ Partially filled pipe detection ■ Low flow cut off ■ The range of options increases if the measuring device has one or more
	application packages.

User configurable input/output

One specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

The technical values correspond to those of the inputs and outputs described in this section.

Signal on alarm

Depending on the interface, failure information is displayed as follows:

FOUNDATION Fieldbus

Status and alarm messages	Diagnostics in accordance with FF-891
Error current FDE (Fault Disconnection Electronic)	0 mA

Current output 0/4 to 20 mA

4 to 20 mA

Choose from: 4 to 20 mA in accordance with NAMUR recommendation NE 43 4 to 20 mA in accordance with US Min. value: 3.59 mA Max. value: 22.5 mA Freely definable value between: 3.59 to 22.5 mA Actual value Last valid value

0 to 20 mA

Failure mode	Choose from:
	■ Maximum alarm: 22 mA
	■ Freely definable value between: 0 to 20.5 mA

202

Pulse/frequency/switch output

Pulse output	Pulse output	
Failure mode	Choose from: Actual value No pulses	
Frequency output		
Failure mode	Choose from: Actual value O Hz Defined value (f max 2 to 12 500 Hz)	
Switch output		
Failure mode	Choose from: Current status Open Closed	

Relay output

Failure mode	Choose from:
	Current status
	■ Open
	■ Closed

Local display

Plain text display	With information on cause and remedial measures
Backlight	Red backlighting indicates a device error.



Status signal as per NAMUR recommendation NE 107

Interface/protocol

- Via digital communication: FOUNDATION Fieldbus
- Via service interface

Plain text display	With information on cause and remedial measures
--------------------	---

Web server

Plain text display	With information on cause and remedial measures
--------------------	---

Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes
	The following information is displayed depending on the device version: Supply voltage active Data transmission active Device alarm/error has occurred Diagnostic information via light emitting diodes

Low flow cut off

The switch points for low flow cut off are user-selectable.

Galvanic isolation

The outputs are galvanically isolated from one another and from earth (PE).

Protocol-specific data

Manufacturer ID	0x452B48 (hex)	
Ident number	0x103B (hex)	
Device revision	1	
DD revision	Information and files under:	
CFF revision	www.endress.comwww.fieldbus.org	
Interoperability Test Kit (ITK)	Version 6.2.0	
ITK Test Campaign Number	Information: www.endress.com www.fieldbus.org	
Link Master capability (LAS)	Yes	
Choice of "Link Master" and "Basic Device"	Yes Factory setting: Basic Device	
Node address	Factory setting: 247 (0xF7)	
Supported functions	The following methods are supported: Restart ENP Restart Diagnostic Set to OOS Set to AUTO Read trend data Read event logbook	
Virtual Communication Relation	onships (VCRs)	
Number of VCRs	44	
Number of link objects in VFD	50	
Permanent entries	1	
Client VCRs	0	
Server VCRs	10	
Source VCRs	43	
Sink VCRs	0	
Subscriber VCRs	43	
Publisher VCRs	43	
Device Link Capabilities		
Slot time	4	
Min. delay between PDU	8	
Max. response delay	16	

Transducer Blocks

Block	Contents	Output values
Setup Transducer Block (TRDSUP)	All parameters for standard commissioning.	No output values
Display Transducer Block (TRDDISP)	Parameters for configuring the local display.	No output values

Block	Contents	Output values
HistoROM Transducer Block (TRDHROM)	Parameters for using the HistoROM function.	No output values
Diagnostic Transducer Block (TRDDIAG)	Diagnostics information.	Process variables (AI Channel) Temperature (7) Volume flow (9) Concentration (10) Mass flow (11) Corrected volume flow (13) Density (14) Reference density (15) Carrier pipe temperature (51) Carrier mass flow (57) Target mass flow (58) Electronic temperature (65) Current input 1 (99)
Expert Configuration Transducer Block (TRDEXP)	Parameters that require the user to have indepth knowledge of the operation of the device in order to configure the parameters appropriately.	No output values
Service Sensor Transducer Block (TRDSRVS)	Parameters that can only be accessed by Endress +Hauser Service.	No output values
Total Inventory Counter Transducer Block (TRDTIC)	Parameters for configuring all the totalizers and the inventory counter.	Process variables (AI Channel) Totalizer 1 (16) Totalizer 2 (17) Totalizer 3 (18)
Heartbeat Technology Transducer Block (TRDHBT)	Parameters for the configuration and comprehensive information about the results of the verification.	No output values

Function blocks

Block	Number blocks	Execution times	Process variables (Channel)
Resource Block (RB)	1	This Block (extended functionality) contains all the data that uniquely identify the device; it is the equivalent of an electronic nameplate for the device.	_
Analog Input Block (AI)	8	6 ms	Process variables (AI Channel) Temperature (7) Volume flow (9) Concentration (10) Mass flow (11) Corrected volume flow (13) Density (14) Reference density (15) Totalizer 1 (16) Totalizer 2 (17) Totalizer 3 (18) Carrier pipe temperature (51) Carrier mass flow (57) Target mass flow (58) Electronic temperature (65) Current input 1 (99)
Discrete Input Block (DI)	2	4 ms	 Switch output state (101) Low flow cut off (103) Empty pipe detection (104) Status verification (105)
PID Block (PID)	1	5 ms	_

Block	Number blocks	Execution times	Process variables (Channel)	
Multiple Analog Output Block (MAO)	1	4 ms	Channel_0 (121) Value 1: External compensation variable, pressure Value 2: External compensation variable, temperature Value 3: External compensation variable, reference density The compensation variable variables must be transmitted to the device in the SI basic units.	
Multiple Digital Output Block (MDO)	1	4 ms	Channel_DO (122) Value 1: Reset totalizer 1 Value 2: Reset totalizer 2 Value 3: Reset totalizer 3 Value 4: Flow override Value 5: Start heartbeat verification Value 6: Status switch output Value 7: Start zero point adjustment Value 8: Not assigned	
Integrator Block (IT)	1	5 ms	-	

16.5 Power supply

Terminal assignment $\rightarrow \stackrel{ riangle}{ riangle}$ 38

Device plugs available $\rightarrow \stackrel{ riangle}{ riangle}$ 39

Pin assignment, device plug $\rightarrow \stackrel{\triangle}{=} 39$

Supply voltage

Order code for "Power supply"	terminal voltage		Frequency range
Option D	DC 24 V	±20%	_
Option E	AC100 to 240 V	-15+10%	50/60 Hz
Option I	DC 24 V	±20%	-
Орион 1	AC100 to 240 V	-15+10%	50/60 Hz

Power consumption Transmitter

Max. 10 W (active power)

Current consumption

Transmitter

- Max. 400 mA (24 V)
- Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)

Power supply failure	 Totalizers stop at the last value measured. Configuration is retained in the plug-in memory (HistoROM DAT). Error messages (incl. total operated hours) are stored.
Electrical connection	→ 🖺 40
Potential equalization	→ 🖺 51
terminals	Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to $2.5~\text{mm}^2$ (24 to $12~\text{AWG}$).
Cable entries	 Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in) Thread for cable entry: NPT ½" G ½" M20 Device plug for digital communication: M12
Cable specification	→ 1 35

16.6 Performance characteristics

reference operating conditions

- Error limits based on ISO 11631
- Water with +15 to +45 °C (+59 to +113 °F) at 2 to 6 bar (29 to 87 psi)
- Specifications as per calibration protocol
- Accuracy based on accredited calibration rigs that are traced to ISO 17025.
- To obtain measured errors, use the *Applicator* sizing tool $\rightarrow \triangle$ 195

Maximum measured error

o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature

Base accuracy

Design fundamentals $\rightarrow \stackrel{\triangle}{=} 210$

Mass flow and volume flow (liquids)

 ± 0.05 % o.r. (PremiumCal; order code for "Calibration flow", option D, for mass flow) ± 0.10 % o.r.

Mass flow (gases)

±0.35 % o.r.

Density (liquids)

Under reference operating conditions	Standard density calibration ¹⁾	Wide-range Density specification ^{2) 3)}
[g/cm³]	[g/cm³]	[g/cm³]
±0.0005	±0.01	±0.001

- 1) Valid over the entire temperature and density range
- Valid range for special density calibration: 0 to 2 g/cm³, +5 to +80 $^{\circ}$ C (+41 to +176 $^{\circ}$ F)
- 3) Order code for "Application package", option EF "Special density"

Temperature

 $\pm 0.5 \,^{\circ}\text{C} \pm 0.005 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.9 \,^{\circ}\text{F} \pm 0.003 \cdot (\text{T} - 32) \,^{\circ}\text{F})$

Zero point stability

DN		Zero poin	t stability
[mm]	[mm] [in]		[lb/min]
300	12	137	5.03
350	14	137	5.03
400	16	137	5.03

Flow values

Flow values as turndown parameter depending on nominal diameter.

SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
300	4 100 000	410 000	205 000	82 000	41000	8200
350	4 100 000	410 000	205 000	82 000	41000	8200
400	4 100 000	410 000	205 000	82 000	41000	8200

US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
12	150700	15 070	7 5 3 5	3 0 1 4	1507	301.4
14	150700	15 070	7 5 3 5	3 0 1 4	1507	301.4
16	150700	15 070	7535	3014	1507	301.4

Accuracy of outputs

The outputs have the following base accuracy specifications.

Current output

Accuracy	±5 μA
,	'

Pulse/frequency output

o.r. = of reading

Accuracy Max. ±50 ppm o.r. (across the entire ambient temperature range)

Repeatability

o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature

Base repeatability

Mass flow and volume flow (liquids)

 ± 0.025 % o.r. (PremiumCal, for mass flow) ± 0.05 % o.r.

Mass flow (gases)

±0.25 % o.r.

i

Design fundamentals → 🖺 210

Density (liquids)

 $\pm 0.00025 \text{ g/cm}^3$

Temperature

 $\pm 0.25 \,^{\circ}\text{C} \pm 0.0025 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.45 \,^{\circ}\text{F} \pm 0.0015 \cdot (\text{T}-32) \,^{\circ}\text{F})$

Response time

The response time depends on the configuration (damping).

Influence of ambient temperature

Current output

Temperature coefficient	Max. 1 μA/°C

Pulse/frequency output

Temperature coefficient	No additional effect. Included in accuracy.
-------------------------	---

Influence of medium temperature

Mass flow and volume flow

o.f.s. = of full scale value


When there is a difference between the temperature at zero point adjustment and the process temperature, the typical measured error of the sensor is ± 0.0002 % o.f.s./°C (± 0.0001 % o.f.s./°F).

Density

When there is a difference between the density calibration temperature and the process temperature, the typical measured error of the sensor is $\pm 0.00005 \text{ g/cm}^3 \text{ }^{\circ}\text{C} \text{ } (\pm 0.000025 \text{ g/cm}^3 \text{ }^{\circ}\text{F})$. Field density calibration is possible.

Wide-range density specification (special density calibration)

If the process temperature is outside the valid range ($\rightarrow \triangleq 207$) the measured error is $\pm 0.00005 \text{ g/cm}^3 \text{ /°C } (\pm 0.000025 \text{ g/cm}^3 \text{ /°F})$

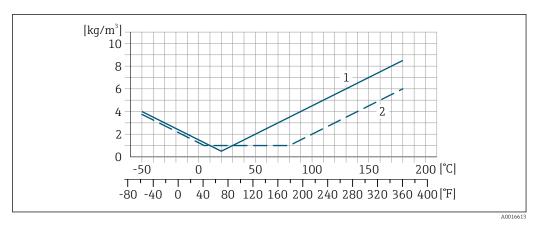

- 1 Field density calibration, for example at +20 $^{\circ}$ C (+68 $^{\circ}$ F)
- 2 Special density calibration

Temperature

 $\pm 0.005 \cdot \text{T} \, ^{\circ}\text{C} \, (\pm 0.005 \cdot (\text{T} - 32) \, ^{\circ}\text{F})$

Influence of medium pressure

The table below shows the effect on accuracy of mass flow due to a difference between calibration pressure and process pressure.

o.r. = of reading

DN		[% o.r./bar]	[% o.r./psi]		
[mm]	[in]				
300	12	-0.009	-0.0006		
350	14	-0.009	-0.0006		
400	16	-0.009	-0.0006		

Design fundamentals

o.r. = of reading, o.f.s. = of full scale value

BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.

MeasValue = measured value; ZeroPoint = zero point stability

Calculation of the maximum measured error as a function of the flow rate


Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$	± BaseAccu
A0021332	A0021337
< ZeroPoint · 100	± ZeroPoint MeasValue · 100
A0021333	A0021334

Calculation of the maximum repeatability as a function of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot ZeroPoint}{BaseRepeat} \cdot 100$	± BaseRepeat
A0021335	A0021340
< \frac{\frac{1/2}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100	$\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$
A0021336	A0021337

210

Example for max. measured error

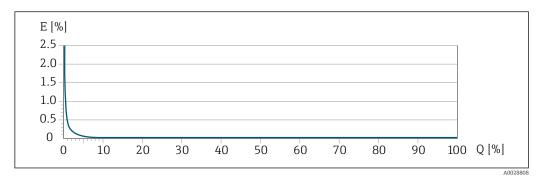

E Error: Maximum measured error as % o.r. (example using PremiumCal)

Q Flow rate as %

16.7 Installation

"Mounting requirements"

16.8 Environment

Ambient temperature
range

Temperature tables



Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.



For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Storage temperature

 $-50 \text{ to } +80 ^{\circ}\text{C} (-58 \text{ to } +176 ^{\circ}\text{F})$

Climate class

DIN EN 60068-2-38 (test Z/AD)

Degree of protection

Transmitter

- As standard: IP66/67, type 4X enclosure
- When housing is open: IP20, type 1 enclosure
- Display module: IP20, type 1 enclosure

Sensor

- As standard: IP66/67, type 4X enclosure
- With the order code for "Sensor options", option **CM**: IP69 can also be ordered

External WLAN antenna

IP67

Vibration resistance

- Vibration, sinusoidal according to IEC 60068-2-6
 - 2 to 8.4 Hz, 3.5 mm peak
 - 8.4 to 2000 Hz, 1 g peak
- Vibration broad-band random, according to IEC 60068-2-64
 - $-10 \text{ to } 200 \text{ Hz}, 0.003 \text{ g}^2/\text{Hz}$
 - -200 to 2000 Hz, 0.001 q^2 /Hz
 - Total: 1.54 g rms


Shock resistance	Shock, half-sine according to IEC 60068-2-27 6 ms 30 g
Impact resistance	Rough handling shocks according to IEC 60068-2-31
Mechanical load	Never use the transmitter housing as a ladder or climbing aid.
Electromagnetic compatibility (EMC)	As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21) For details, refer to the Declaration of Conformity.

16.9 **Process**

Medium temperature range

 $-50 \text{ to } +180 ^{\circ}\text{C} (-58 \text{ to } +356 ^{\circ}\text{F})$

Dependency of ambient temperature on medium temperature

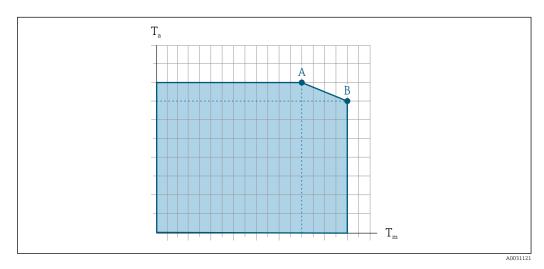

 T_a Ambient temperature range

 T_m Medium temperature

- Maximum permitted medium temperature T_m at $T_{a\,max}$ = 60 °C (140 °F); higher medium temperatures T_m require a reduced ambient temperature T_a
- Maximum permitted ambient temperature T_a for the maximum specified medium temperature T_m of the sensor

	Not insulated			Insulated				
	A		1	В А		В		
	T _a	T _m	Ta	T _m	T _a	T _m	T _a	T _m
Promass X 500 – digital	60 °C (140 °F)	180 ℃ (356 ℉)	-	-	60 °C (140 °F)	150 °C (302 °F)	55 ℃ (131 ℉)	180 °C (356 °F)

Density

0 to 5000 kg/m^3 (0 to 312 lb/cf)

Pressure-temperature ratings

An overview of the pressure-temperature ratings for the process connections is provided in the "Technical Information" document

Secondary containment

The sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.

The following secondary containment pressure ratings/burst pressures are only valid for standard devices and/or devices equipped with closed purge connections (never opened/as delivered).

If a device fitted with purge connections (order code for "Sensor option", option **CH** "Purge connection") is connected to the purge system, the maximum nominal pressure is determined by the purge system itself or by the device, depending on which component has the lower nominal pressure classification.

The secondary containment burst pressure refers to a typical internal pressure achieved prior to mechanical failure of the secondary containment as determined during type testing. The corresponding type test declaration can be ordered with the device (order code for "Additional Approval", option **LN** "Type test containment").

Pressure rating according to ASME BPVC.

D	DN		Secondary containment pressure rating (designed with a safety factor ≥ 4)		nent burst pressure
[mm]	[in]	[bar] [psi]		[bar]	[psi]
300	12	6	87	28	406
350	14	6	87	28	406
400	16	6	87	28	406

If a measuring tube fails (e.g. due to process characteristics like corrosive or abrasive fluids), the fluid will be contained by the secondary containment.

If there is a need to drain the leaking medium into a discharge device, the sensor should be fitted with a rupture disk. Connect the discharge to the additional threaded connection .

If the sensor is to be purged with gas (gas detection), it should be equipped with purge connections.

Do not open the purge connections unless the secondary containment can be filled immediately with a dry, inert gas. Use only low pressure to purge. Maximum pressure: 5 bar (72.5 psi).

In case of a tube failure, the pressure level inside the secondary containment will rise according to the operating process pressure. If the user judges that the secondary containment pressure rating/burst pressure does not provide an adequate safety margin, the device can be fitted with a rupture disk. This will prevent extensive pressure buildup inside the secondary containment and is strongly recommended in high pressure gas applications, especially where the process pressure is higher than the secondary containment burst pressure.

For information on the dimensions: see the "Mechanical construction" section of the "Technical Information" document

Rupture disk

To increase the level of safety, a device version with a rupture disk with a trigger pressure of 5.5 to 6.5 bar (80 to 94 psi) can be used (order code for "Sensor option", option **CA** "rupture disk").

Special mounting instructions: $\rightarrow \triangle 27$



For information on the dimensions: see the "Mechanical construction" section

Flow limit

Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.

- For an overview of the full scale values for the measuring range, see the "Measuring range" section $\rightarrow \blacksquare 198$
- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- In most applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).
- For gas measurement the following rules apply:
 - The flow velocity in the measuring tubes should not exceed half the sound velocity
 - The maximum mass flow depends on the density of the gas: formula $\rightarrow 2198$

Pressure loss



To calculate the pressure loss, use the Applicator sizing tool $\rightarrow = 195$

System pressure

→ 🖺 25

16.10 Mechanical construction

Design, dimensions



For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

Weight

All values (weight) refer to devices with ASME B16.5/Class 150 flanges.

Transmitter

- Proline 500 digital polycarbonate: 1.4 kg (3.1 lbs)
- Proline 500 digital aluminum: 2.4 kg (5.3 lbs)
- Proline 500 aluminum: 6.5 kg (14.3 lbs)
- Proline 500 cast, stainless: 15.6 kg (34.4 lbs)

Sensor

- Sensor with aluminum connection housing version: see the information in the following
- Cast connection housing version, stainless: +3.7 kg (+8.2 lbs)

Weight in SI units

DN [mm]	Weight [kg]
300	553
350	577
400	601

Weight in US units

DN [in]	Weight [lbs]
12	1219
14	1272
16	1325

Materials

Transmitter housing

Proline 500 – digital transmitter housing

Order code for "Transmitter housing":

- Option A "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **D** "Polycarbonate": polycarbonate

Proline 500 transmitter housing

Order code for "Transmitter housing":

Option L "Cast, stainless": cast, stainless steel, 1.4409 (CF3M) similar to 316L

Window material


Order code for "Transmitter housing":

- Option A "Aluminum, coated": glass
- Option **D** "Polycarbonate": plastic
- Option **L** "Cast, stainless": glass

Sensor connection housing

Order code for "Sensor connection housing": Option **L** "Cast, stainless": 1.4409 (CF3M) similar to 316L

Cable entries/cable glands

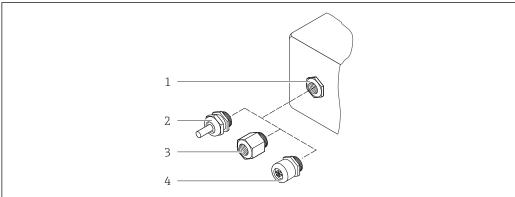

A0028352

■ 38 Possible cable entries/cable glands

- Cable entry with M20 \times 1.5 internal thread
- 2 Cable gland M20 × 1.5
- 3 Adapter for cable entry with internal thread G $\frac{1}{2}$ " or NPT $\frac{1}{2}$ "
- 4 Device plug coupling

Cable entries and adapters	Material
Cable gland M20 × 1.5	Plastic
 Adapter for cable entry with internal thread G ½" Adapter for cable entry with internal thread NPT ½" 	Nickel-plated brass
Only available for certain device versions: Order code for "Transmitter housing": Option A "Aluminum, coated" Option D "Polycarbonate" Order code for "Sensor connection housing": Option A "Aluminum coated" Proline 500 – digital: Option B "Stainless"	
 Adapter for cable entry with internal thread G ½" Adapter for cable entry with internal thread NPT ½" 	Stainless steel, 1.4404 (316L)
Only available for certain device versions: Order code for "Transmitter housing": Option L "Cast, stainless" Order code for "Sensor connection housing": Option L "Cast, stainless"	
Adapter for device plug	Stainless steel, 1.4404 (316L)
Device plug for digital communication: Only available for certain device versions .	
Device plug coupling	Plug M12 × 1 Socket: Stainless steel, 1.4404 (316L) Contact housing: Polyamide Contacts: Gold-plated brass

Device plug

Electrical connection	Material
Plug M12x1	 Socket: Stainless steel, 1.4404 (316L) Contact housing: Polyamide Contacts: Gold-plated brass

Connecting cable

Connecting cable for sensor - Proline 500 - digital transmitter

PVC cable with copper shield

Connecting cable for sensor - Proline 500 transmitter

- Standard cable: PVC cable with copper shield
- Reinforced cable: PVC cable with copper shield and additional steel wire braided jacket

Sensor housing

- Acid and alkali-resistant outer surface
- Stainless steel, 1.4404 (316L)

Measuring tubes

Stainless steel, 1.4404 (316/316L);

Manifold: stainless steel, 1.4404 (316/316L)

Process connections

Flanges in accordance with EN 1092-1 (DIN2501) / ASME B 16.5: Stainless steel, 1.4404 (F316/F316L)



List of all available process connections $\rightarrow \triangleq 217$

Seals

Welded process connections without internal seals

Accessories

Protective cover

Stainless steel, 1.4404 (316L)

External WLAN antenna

- WLAN antenna:
 - ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass
- Adapter: Stainless steel and copper

Process connections

Fixed flange connections:

- EN 1092-1 (DIN 2501) flange
- EN 1092-1 (DIN 2512N) flange
- ASME B16.5 flange



Surface roughness

All data relate to parts in contact with fluid. The following surface roughness quality can be ordered. Not polished

16.11 Operability

Languages

Can be operated in the following languages:

 
- Via local operation English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Arabic, Bahasa (Indonesian), Thai, Vietnamese, Czech, Swedish
- Via Web browser
 English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish,
 Chinese, Japanese, Korean, Arabic, Bahasa (Indonesian), Thai, Vietnamese, Czech,
- Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese


Local operation

Via display module

Two display modules are available:

- Order code for "Display; operation", option **F** "4-line, backlit, graphic display; touch control"
- Order code for "Display; operation", option **G** "4-line, backlit, graphic display; touch control + WLAN"

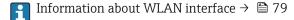

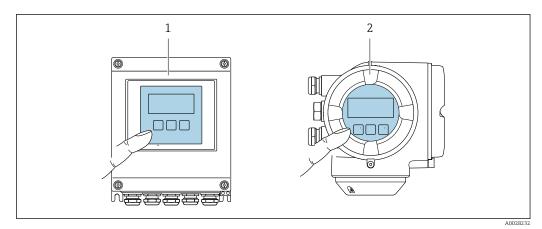

39 Operation with touch control

- 1 Proline 500 digital
- 2 Proline 500

Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F) The readability of the display may be impaired at temperatures outside the temperature range.

Operating elements

■ External operation via touch control (3 optical keys) without opening the housing: \boxdot , \boxdot ,

Endress+Hauser

• Operating elements also accessible in various hazardous areas

Remote operation	→ 🖺 78
Service interface	→ 🖺 78
Supported operating tools	Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

218

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with Web browser	CDI-RJ45 service interfaceWLAN interface	Special Documentation for the device → 🗎 225
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	CDI-RJ45 service interfaceWLAN interfaceFieldbus protocol	→ 🖺 195
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	CDI-RJ45 service interfaceWLAN interfaceFieldbus protocol	→ 🖺 195
Device Xpert	Field Xpert SFX 100/350/370	HART and FOUNDATION Fieldbus fieldbus protocol	Operating Instructions BA01202S Device description files: Use update function of handheld terminal

- Other operating tools based on FDT technology with a device driver such as DTM/iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:
 - Asset Management Solutions (AMS) by Emerson → www.emersonprocess.com
 - FieldCommunicator 375/475 by Emerson → www.emersonprocess.com
 - Field Device Manager (FDM) by Honeywell → www.honeywellprocess.com
 - FieldMate by Yokogawa → www.yokogawa.com
 - PACTWare → www.pactware.com

The associated device description files are available at: www.endress.com \rightarrow Downloads

Web server

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or via a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option $\bf G$ "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

Supported functions

Data exchange between the operating unit (such as a notebook for example) and the measuring device:

- Uploading the configuration from the measuring device (XML format, configuration backup)
- Save the configuration to the measuring device (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file, create documentation of the measuring point configuration)
- Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)
- Flash firmware version for device firmware upgrade, for instance
- Download driver for system integration

HistoROM data management

The measuring device features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.



When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	Device memory	T-DAT	S-DAT
Available data	 Event history, such as diagnostic events Parameter data record backup Device firmware package Driver for system integration e.g.: DD for FOUNDATION Fieldbus 	 Measured value memory ("Extended HistoROM" order option) Current parameter data record (used by firmware at run time) Maximum indicators (min/max values) Totalizer values 	 Sensor data: diameter etc. Serial number User-specific access code (to use the "Maintenance" user role) Calibration data Device configuration (e.g. SW options, fixed I/O or multi I/O)
Storage location	Fixed on the user interface board in the connection compartment	Can be plugged into the user interface board in the connection compartment	In the sensor plug in the transmitter neck part

Data backup

Automatic

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors

Manual

Additional parameter data record (complete parameter settings) in the integrated device memory for:

- Data backup function
 Backup and subsequent restoration of a device configuration in the device memory
- Data comparison function
 Comparison of the current device configuration with the device configuration saved in the device memory

Data transfer

Manual

Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)

Event list

Automatic

- Chronological display of up to 20 event messages in the events list
- If the **Extended HistoROM** application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

Data logging

Manual

If the **Extended HistoROM** application package (order option) is enabled:

- Record up to 1000 measured values via 1 to 4 channels
- User configurable recording interval
- Record up to 250 measured values via each of the 4 memory channels
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare. DeviceCare or Web server
- Use the recorded measured value data in the integrated device simulation function in the **Diagnostics** submenu ($\rightarrow \implies 184$).

Service logbook

Manual

- Create up to 20 user-specific events with a date and customized text in a separate logbook for documentation of the measuring point
- Use for calibration or service operations, for example, or for maintenance or revision work that has been performed

16.12 Certificates and approvals

CE mark	The measuring system is in conformity with the statutory requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.
	Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.
C-Tick symbol	The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".
Ex approval	The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.
FOUNDATION Fieldbus	FOUNDATION Fieldbus interface
certification	The measuring device is certified and registered by the FieldComm Group. The measuring

system meets all the requirements of the following specifications:

- Certified in accordance with FOUNDATION Fieldbus H1
- Interoperability Test Kit (ITK), revision version 6.2.0 (certificate available on request)
- Physical Layer Conformance Test
- The device can also be operated with certified devices of other manufacturers (interoperability)

Pressure Equipment Directive

- With the identification PED/G1/x (x = category) on the sensor nameplate, Endress +Hauser confirms conformity with the "Essential Safety Requirements" specified in Appendix I of the Pressure Equipment Directive 2014/68/EC.
- Devices not bearing this marking (PED) are designed and manufactured according to good engineering practice. They meet the requirements of Art. 4, Par. 3 of the Pressure Equipment Directive 2014/68/EU. The range of application is indicated in tables 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EC.

Radio approval

Europe:

RED 2014/53/EU

United States of America: CFR Title 47, FCC Part 15.247

Canada:

RSS-247 Issue 1

Japan:

Article 2 clause 1 item 19



Additional country-specific approvals on request.

Additional certification

CRN approval

Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.

Tests and certificates

- Pressure test, internal procedure, inspection certificate
- EN10204-3.1 Material certificate, wetted parts and secondary containment
- PMI test (XRF), internal procedure, wetted parts, test report
- EN10204-2.1 confirmation of compliance with the order and EN10204-2.2 test report

Testing of welded connections

Option	Test standard			Com	ponent	
	ISO 23277 AL2x (PT) ISO 10675-1 AL1 (RT, DR)	ASME B31.3 NFS	ASME VIII Div.1 Appx. 4+8	NORSOK M-601	Measuring tube	Process connection
CF	х				PT	RT
KK		х			PT	RT
KP			Х		PT	RT
KR				Х	VT, PT	VT, RT

PT = penetrant testing, RT = radiographic testing, VT = visual testing All options with test report

Other standards and guidelines

■ EN 60529

Degrees of protection provided by enclosures (IP code)

■ IEC/EN 60068-2-6

Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).

■ IEC/EN 60068-2-31

Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices.

■ EN 61010-1

Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements

■ IEC/EN 61326

Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).

NAMUR NE 21

Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment

■ NAMUR NE 32

Data retention in the event of a power failure in field and control instruments with microprocessors

■ NAMUR NE 43

Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.

■ NAMUR NE 53

Software of field devices and signal-processing devices with digital electronics

■ NAMUR NE 80

The application of the pressure equipment directive to process control devices

■ NAMUR NE 105

Specifications for integrating fieldbus devices in engineering tools for field devices

NAMUR NE 107

Self-monitoring and diagnosis of field devices

■ NAMUR NE 131

Requirements for field devices for standard applications

■ NAMUR NE 132

Coriolis mass meter

■ NACE MR0103

Materials resistant to sulfide stress cracking in corrosive petroleum refining environments.

■ NACE MR0175/ISO 15156-1

Materials for use in H2S-containing Environments in Oil and Gas Production.

16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.



Detailed information on the application packages: Special Documentation for the device $\rightarrow \stackrel{\triangle}{=} 225$

Diagr	ostics	funct	ione
Diaui.	IOSTICS	Tunct	IOHS

Package	Description
Extended HistoROM	Comprises extended functions concerning the event log and the activation of the measured value memory.
	Event log: Memory volume is extended from 20 message entries (standard version) to up to 100 entries.
	 Data logging (line recorder): Memory capacity for up to 1000 measured values is activated. 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user. Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.

Heartbeat Technology

Package	Description
Heartbeat Verification +Monitoring	Heartbeat Monitoring Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to: Draw conclusions - using these data and other information - about the impact process influences (such as corrosion, abrasion, buildup etc.) have on the measuring performance over time. Schedule servicing in time. Monitor the process or product quality, e.g. gas pockets.
	Heartbeat Verification Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment". Functional testing in the installed state without interrupting the process. Traceable verification results on request, including a report. Simple testing process via local operation or other operating interfaces. Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications. Extension of calibration intervals according to operator's risk assessment.


Concentration

Package	Description
Concentration measurement and special density	Calculation and outputting of fluid concentrations Many applications use density as a key measured value for monitoring quality or controlling processes. The device measures the density of the fluid as standard and makes this value available to the control system. The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.
	With the help of the "Concentration Measurement" application package, the measured density is used to calculate other process parameters: Temperature-compensated density (reference density). Percentage mass of the individual substances in a two-phase fluid. (Concentration in %). Fluid concentration is output with special units ("Brix, "Baumé, "API, etc.) for standard applications.

16.14 Accessories



 16.15 Supplementary documentation

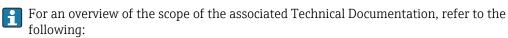

- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

Standard documentation

Brief Operating Instructions

Brief Operating Instructions for the sensor

Measuring device	Documentation code
Proline Promass X	KA01288D

Brief Operating Instructions for transmitter

Measuring device	Documentation code
Proline 500 – digital	KA01233D
Proline 500	KA01291D

Technical Information

Measuring device	Documentation code
Promass X 500	TI01289D

Description of device parameters

Measuring device	Documentation code
Promass 500	GP01096D

Supplementary devicedependent documentation

Safety Instructions

Contents	Documentation code
	Measuring device
ATEX/IECEx Ex i	XA01473D
ATEX/IECEx Ex ec	XA01474D
cCSAus IS	XA01475D
cCSAus Ex i	XA01509D
cCSAus Ex nA	XA01510D
INMETRO Ex i	XA01476D
INMETRO Ex ec	XA01477D
NEPSI Ex i	XA01478D
NEPSI Ex nA	XA01479D

Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Web server	SD01669D
Heartbeat Technology	SD01703D
Concentration measurement	SD01709D

Installation Instructions

Contents	Documentation code
Installation Instructions for spare part sets	Overview of accessories available for order → 🖺 194

. 35

Index

A	Connection tools
Access authorization to parameters	Context menu
Read access	Calling up 65
Write access	Closing
Access code	Explanation 65
Incorrect input	Current consumption
Accuracy	Cyclic data transmission 84
Adapting the diagnostic behavior 159	D
Adapting the status signal	D
Additional certification	Declaration of Conformity
Ambient temperature	Define access code
Influence	Degree of protection 54, 211
Ambient temperature range 24	Density
AMS Device Manager 82	Design fundamentals
Function	Maximum measured error 210
Application	Repeatability
Application packages	Designated use
Applicator	Device components
Approvals	Device description files
	Device documentation
C	Supplementary documentation 8
C-Tick symbol	Device locking, status
Cable entries	Device name
Technical data	Sensor
Cable entry	Transmitter
Degree of protection	Device repair
CE mark	Device revision
Certificates	Device type ID
Check	DeviceCare
Installation	Device description file
Checklist	Diagnostic behavior
Post-connection check	Explanation
Post-installation check	Symbols
Cleaning	Diagnostic information Design, description
Exterior cleaning	Design, description
Climate class	FieldCare
Commissioning	Light emitting diodes
Advanced settings	Local display
Configuring the measuring device	Overview
Connecting cable	Remedial measures
Connecting the connecting cable	Web browser
Proline 500 – digital transmitter	Diagnostic list
Proline 500 terminal assignment	Diagnostic message
Sensor connection housing, Proline 500 46	DIAGNOSTIC Transducer Block
Sensor connection housing, Proline 500 40	Diagnostics
Terminal assignment of Proline 500 - digital 40	Symbols
Connecting the measuring device	DIP switches
Proline 500	see Write protection switch
Proline 500 – digital	Direct access
Connecting the signal cable/supply voltage cable	Direct access code 61
Proline 500 – digital transmitter	Disabling write protection
Proline 500 transmitter	Display
Connection	see Local display
see Electrical connection	Display area
Connection preparations	For operational display 60

226

In the navigation view 62 Display values	Version 84 Firmware history 190
For locking status	Flow direction
Disposal	Flow limit
Document	FOUNDATION Fieldbus certification
Function 6	Function check
Symbols used 6	Function scope
Document function 6	AMS Device Manager 82
Down pipe	Field Communicator
E	Field Communicator 475
Electrical connection	Field Xpert
Degree of protection	see Parameter
Measuring device	bee I diameter
Operating tools	G
Via FOUNDATION Fieldbus network 78	Galvanic isolation
Via service interface (CDI-RJ45)	Н
Via WLAN interface	
Web server	Hardware write protection
Electromagnetic compatibility	Calling up
Electronics module	Closing
Enabling write protection	Explanation
Endress+Hauser services	HistoROM
Maintenance	I
Repair	Identifying the measuring device
Environment 212	Impact resistance
Impact resistance212Mechanical load212	Incoming acceptance
Shock resistance	Influence
Storage temperature	Ambient temperature 209
Vibration resistance	Medium pressure 210
Error messages	Medium temperature 209
see Diagnostic messages	Information on the document
Event history	Inlet runs 24 Input 198
Event list	Input mask
Ex approval	Inspection
Sensor	Received goods
Transmitter	Inspection check
Exterior cleaning	Connection
_	Installation
F	Installation conditions
Field Communicator	Down pipe
Function	Installation dimensions
Field of application	Mounting location
Residual risks	Orientation
Field Xpert	Rupture disk
Function	Sensor heating
Field Xpert SFX350	System pressure
FieldCare	Thermal insulation
Device description file	Installation dimensions
Function	
User interface	K
Filtering the event logbook	Keypad lock
Firmware	Disabling
Release date	Enabling

L	N
Languages, operation options 217	Nameplate
Line recorder	Sensor
Local display	Transmitter
Editing view 63	Navigation path (navigation view) 61
Navigation view 61	Navigation view
see Diagnostic message	In the submenu 61
see In alarm condition	In the wizard 61
see Operational display	Numeric editor 63
Low flow cut off	
	0
M	Operable flow range
Main electronics module	Operating elements
Maintenance tasks	Operating keys
Managing the device configuration 128	see Operating elements
Manufacturer ID	Operating menu
Manufacturing date	Menus, submenus 57
Materials	Structure
Maximum measured error 207	Submenus and user roles 58
Measured values	Operating philosophy
see Process variables	Operation
Measuring and test equipment	Operation options
Measuring device	Operational display
Configuration	Operational safety
Conversion	Order code
Disposal	Orientation (vertical, horizontal) 23
Mounting the sensor	Outlet runs
Preparing for electrical connection 39	Output
Preparing for mounting	Output Signal
Removing	
Repairs	P
Structure	Packaging disposal
Switch-on	Parameter settings
Measuring principle	Administration (Submenu) 130
Measuring range	Advanced setup (Submenu) 120
Calculation example for gas 198	Analog inputs (Submenu)
For gases	Calculated values (Submenu) 120
For liquids	Configuration backup (Submenu) 128
Measuring range, recommended 214	Current input
Measuring system	Current input (Wizard)
Mechanical load	Current input 1 to n (Submenu) 141
Medium pressure	Current output
Influence	Current output (Wizard)
Medium temperature	Data logging (Submenu)
Influence	Define access code (Wizard) 130
Menu	Device information (Submenu) 189
Diagnostics	Diagnostics (Menu)
Setup	Display (Submenu)
Menus	Display (Wizard)
For measuring device configuration 91	I/O configuration
For specific settings	I/O configuration (Submenu)
1 3	Low flow cut off (Wizard)
Mounting dimensions see Installation dimensions	Measured variables (Submenu)
	Partially filled pipe detection (Wizard)
Mounting location	Pulse/frequency/switch output
Mounting preparations	Pulse/frequency/switch output (Wizard) 103,
Mounting tools	105, 105,
	Pulse/frequency/switch output 1 to n (Submenu) 143
	Relay output

Relay output 1 to n (Submenu)	Replacement
Relay output 1 to n (Wizard)	Device components
Reset access code (Submenu) 130	Requirements for personnel
Select medium (Wizard)	Response time
Sensor adjustment (Submenu)	Return
Setup (Menu)	Rupture disk
Simulation (Submenu)	Safety instructions
Status input	Triggering pressure
Status input (Submenu)	ringgering pressure
Status input 1 to n (Submenu)	S
System units (Submenu)	Safety
Totalizer (Submenu)	Secondary containment
Totalizer 1 to n (Submenu)	Sensor
	Mounting
Totalizer handling (Submenu)	Sensor heating
Value current output 1 to n (Submenu) 142	Serial number
Web server (Submenu)	Setting the operating language
WLAN Settings (Submenu)	
Zero point adjustment (Submenu) 122	Settings Adapting the managing device to the process
Parameters	Adapting the measuring device to the process
Changing	conditions
Enter a value	Administration
Performance characteristics 207	Advanced display configurations
Post-connection check (checklist)	Analog input
Post-installation check	Current input
Post-installation check (checklist)	Current output
Potential equalization	Device reset
Power consumption	Device tag
Power supply failure	I/O configuration
Pressure Equipment Directive	Local display
Pressure loss	Low flow cut off
Pressure-temperature ratings	Managing the device configuration 128
Process connections	Medium
Process variables	Operating language 90
Calculated	Partial filled pipe detection
Measured	Pulse output
Product safety	Pulse/frequency/switch output 103, 105
Proline 500 – digital transmitter	Relay output
Connecting the signal cable/supply voltage cable 44	Resetting the totalizer
Proline 500 connecting cable terminal assignment	Restart device
Sensor connection housing 46	Sensor adjustment
Proline 500 transmitter	Simulation
Connecting the signal cable/supply voltage cable 49	Status input
Protecting parameter settings	Switch output
	System units
R	Totalizer
Radio approval	Totalizer reset
Read access	WLAN
Reading measured values	Shock resistance
Recalibration	Showing data logging
reference operating conditions 207	Signal on alarm
Registered trademarks	Software release
Remedial measures	Spare part
Calling up	Spare parts
Closing	Special connection instructions
Remote operation	Standards and guidelines
Repair of a device	Status area
Repairs	For operational display 60
Notes	In the navigation view 61
Repeatability	Status signals
•	,

Storage conditions	System integration
Storage temperature	System pressure 25
Storage temperature range 211	
Structure	T
Measuring device	Technical data, overview
Operating menu	Temperature range
Submenu	Ambient temperature range for display 218
Administration	Medium temperature 212
Advanced setup	Storage temperature
Analog inputs	Terminal assignment
Calculated values	Terminal assignment of connecting cable for Proline
Configuration backup	500- digital
Current input 1 to n	Sensor connection housing
Data logging	terminals
Device information	Tests and certificates
	Text editor
Display	Thermal insulation
Event list	Tool tip
I/O configuration	see Help text
Input values	Tools
Measured values	
Measured variables	Electrical connection
Output values	Installation
Overview	Transport
Process variables	Totalizer
Pulse/frequency/switch output 1 to n 143	Configuration
Relay output 1 to n	Transmitter
Reset access code	Turning the display module
Sensor adjustment	Turning the housing
Simulation	Transporting the measuring device 21
Status input	Troubleshooting
Status input 1 to n	General
System units	Turning the display module
Totalizer	Turning the electronics housing
Totalizer 1 to n	see Turning the transmitter housing
Totalizer handling	Turning the transmitter housing
Value current output 1 to n	3
Web server	U
WLAN Settings	Use of the measuring device
Zero point adjustment	Borderline cases
Supply voltage	Incorrect use
Surface roughness	see Designated use
	User interface
Switch output	Current diagnostic event
·	Previous diagnostic event
For communication	User roles
For correction	
For diagnostic behavior	V
For locking	Version data for the device
For measured variable 60	Vibration resistance
For measurement channel number 60	Vibrations
For menus	VIDIACIONS
For parameters	W
For status signal	W@M
For submenu	W@M Device Viewer
For wizard	Weight
In the status area of the local display 60	
In the text and numeric editor 63	SI units
System design	Transport (notes)
Measuring system	US units
see Measuring device design	Wizard
J J	Current input

230

Current output 10	0(
Define access code	0
Display	4
Low flow cut off	.7
Partially filled pipe detection	8.
Pulse/frequency/switch output 103, 105, 11	0
Relay output 1 to n	2
Select medium	95
WLAN settings	7
Workplace safety	1
Write access	0
Write protection	
Via access code	4
Via block operation	37
Via write protection switch	
Write protection switch	



