mypro CLM 431 / CLD 431-CD Konduktiivinen kaksijohdinlähetin johtokyky- ja vastusmittauksiin

Käyttöohje













Sisällysluettelo

Sisällysluettelo

1 1.1 1.2 1.3 1.4 1.5 2 2.1	Yleinen informaatio2Turvallisuutta koskevat kuvakkeet.2Kuljetus ja varastointi.2Pakkauksen purkaminen.2Laitteen poistaminen käytöstä, pakkaaminen ja hävittäminen.2Laitteen yleiskatsaus.3Turvallisuus5Asianmukainen käyttö.5
2.2 2.3 2.4 2.5 2.6 2.7	Yleisiä turvallisuusohjeita5Asennus, käyttöönotto, käyttö5Valvonta ja suojaus6Häiriövarmuus6Yhdenmukaisuustodistus6Asennus räjähdysvaarallisella alueella6
3 3.1 3.2 3.3 3.4 3.5 3.6	Asennus7Mittauslaite.7Mitat.8Kiinnitys.10Johtokykymittauskennojen liitäntä14Sähköinen liitäntä.17MyPro:n liitäntä Ex-alueella.19
4 4.1 4.2 4.3 4.4 4.5 4.6 4.7	Käyttö. 20 Käyttöönotto. 20 Kykentä, tehdasasetukset 20 Laitteen käyttö ja käyttöelementit 21 Näyttö. 22 Lukitus 22 Käyttötaso 1 23 Käyttötaso 2. 26
5 5.1 5.2 5.3 5.4 5.5 5.6 5.7 5.8	Toiminnan kuvaus27Main parameters27Basic functions29Calibration parameters31Alpha table32Polarisation detection33Diagnosis33Service and simulation35User info36
6 6.1 6.2	Liitynnät 37 HART [®] 37 Profibus PA 41
7 7.1 7.2	Virheiden käsittely42Error indication42Diagnostic codes (error codes)42
8 8.1 8.2	Huolto ja kunnossapito44Cleaning.44Repairs.44
9	Tarvikkeet
10	Tekniset tiedot
11	Hakusanat

1 Yleinen informaatio

Varoitus!

1.1 Turvallisuutta koskevat kuvakkeet



Tämä kuvake varoittaa vaaroista. Ohjeiden laiminlyönti voi johtaa vakaviin laitevaurioihin, henkilö- tai esinevahinkoihin.



Tiedoksi:

Tämä kuvake korostaa tärkeitä tietoja. Ohjeiden laiminlyönti voi johtaa häiriöihin.

1.2 Kuljetus ja varastointi

Kuljetusta ja varastointia varten laite on sijoitettava iskunkestävään pakkaukseen. Alkuperäispakkaus antaa parhaan mahdollisen suojan.

lämpötilavaatimuksia (ks. tekniset tiedot).

Lisäksi on noudatettava ilmoitettuja ympäristön

1.3 Pakkauksen purkaminen

Kiinnitä huomiosi ehjään pakkaukseen ja vahingoittumattomaan sisältöön! Kuljetusvahinko ilmoitettava rahdinkuljettajalle ja vaurioitunut laite säilytettävä tarkastusta varten.

Tarkista, että toimitus on täydellinen ja lähetyslistan mukainen. Myös laitteen tyyppikilven tiedot verrattava tilaustietoihin.

Toimituksen laajuus:

MyPro CLM 431:

- Lähetin MyPro CLM 431
- Kotelon kiinnitykset
- Valmis kaapeli (tyypistä riippuen)
- Käyttöohje BA 202C/07/fi
- Yhdenmukaisuustodistus (tyypistä riippuen)

MyPro CLD 431:

- Lähetin MyPro CLD 431
 mittauskenpoineen CLS
- mittauskennoineen CLS 12 Käyttöohje BA 202C/07/fi
- Yhdenmukaisuustodistus (tyypistä riippuen)

1.4 Laitteen poistaminen käytöstä, pakkaaminen ja hävittäminen

Myöhempää uudelleenkäyttöä varten laite on sijoitettava suojaavaan pakkaukseen. Paras pakkaus on laitteen alkuperäispakkaus. Mikäli laite hävitetään, on noudatettava paikallisia määräyksiä.

Säilytä alkuperäispakkaus mahdollista myöhempää kuljetusta tai varastointia varten.

Kaikissa laitetta koskevissa kysymyksissä pyydetään kääntymään Endress + Hauser Oy:n puoleen.

LM431CE1.CHP

1.5 Laitteen yleiskatsaus

Laitteen versio selviää tyyppikilvestä.



Kuva 1.1 Tyyppikilpi CLM 431





Kuva 1.2 Tyyppikilpi CLD 431



2 Turvallisuus

2.1 Asianmukainen käyttö

MyPro CLM 431 / CLD 431 on käytännöllinen ja luotettava lähetin nesteiden johtokyvyn ja konsentraation mittausta varten.

Lähetin MyPro CLM 431 / CLD 431 soveltuu erityisesti seuraaviin aloihin:

- Kemian teollisuus
- Lääketeollisuus
- Elintarviketeollisuus
- Juomaveden käsittely
- Lauhteen käsittely
- Kunnalliset jätevedenpuhdistamot
- Teollisuuden jätevedenpuhdistamot

Laitteen rakenne sallii käytön Ex-alueella (vyöhyke 1 ElexV mukaan).

2.2 Yleisiä turvallisuusohjeita

Laitteen valmistuksessa on käytetty uusinta tekniikkaa, se on käyttövarma ja siinä on otettu huomioon asiaankuuluvat määräykset ja eurooppalaiset normit (ks. tekniset tiedot). Se on konstruoitu normin EN-61010-1 mukaisesti ja toimitettu tehtaalta moitteettomassa kunnossa.

Mikäli laitetta käytetään väärin tai tarkoituksenvastaisesti, laitteeseen voi liittyä vaaratilanteita, esim. väärän liitännän vuoksi.

2.3 Asennus, käyttöönotto, käyttö

Varoitus!

- Vain asianmukaisen koulutuksen saaneet ammattihenkilöt saavat suorittaa laitteen asennuksen, sähköisen liitännän, käyttöönoton, käytön ja huollon.
- Kyseisten ammattihenkilöiden tulee lukea tämä käyttöohje ja toimittava sen mukaisesti.
- Varmistettava, että apuenergia on sama kuin tyyppikilvessä ilmoitettu arvo.
- Mikäli laite asennetaan räjähdysvaarallisella alueella, on ehdottomasti noudatettava voimassa olevia määräyksiä (ks. kohta 2.7).

- Ennen laitteen käyttöönottoa tarkistetaan vielä kerran, että litännät täsmäävät!
- Laitteen kotelo maadoitettava ennen käyttöä!
- Vaurioitunutta laitetta, joka voi olla vaaraksi ympäristölleen, ei pidä ottaa käyttöön. Se merkitään vialliseksi.
- Vain koulutetut ammattihenkilöt saavat huolehtia mittauspisteissä esiintyvien häiriöiden poistosta.
- Mikäli häiriönpoisto ei onnistu, laite poistetaan käytöstä ja huolehditaan siitä, ettei sitä käytetä erehdyksessä uudestaan.
- Laitteeseen kohdistuviin korjaustoimenpiteisiin, joita ei ole kuvattu tässä käyttöohjeessa, saa ryhtyä ainoastaan valmistajan tai Endress + Hauser Oy:n huolto.





Varoitus!

- Käyttöohjeen vastainen käyttö asettaa mittauslaitteen turvallisuuden ja toiminnan kyseenalaiseksi, minkä vuoksi sellaista käyttöä ei sallita.
- Käyttöohjeen huomautuksia ja varoituksia on tarkoin noudatettava!

2.4 Valvonta ja suojaus

Valvontajärjestelmät

Häiriön esiintyessä näytössä oleva symboli vilkkuu ja virtaliitynnän kautta saadaan määrätty vikavirta (22 +/- 0.5 mA).

Suojaus

Laitteen suojaus ulkoisia tekijoitä vastaan ovat:

- Massiivinen matallikotelo
- UV-säteilyä kestävä etulevy
- ٠ Kotelon suojausluokka IP 65



Tämä laite on tarkastettu sähkömagneettisen sietokyvynsä suhteen teollisuuskäyttöä koskevien lopullisten eurooppalaisten normien mukaisesti ja suojattu sähkömagneettisia häiriövaikutuksia vastaan (ks. tekniset tiedot, kohta 10).

2.6 Yhdenmukaisuustodistus

Lähetin MyPro CLM / CLD 431 on kehitetty ja valmistettu voimassa olevia eurooppalaisia normeja ja ohjeita noudattaen ja soveltuu käytettäväksi räjähdysvaarallisilla alueilla.

Laitteiden käyttöä räjähdysvaarallisilla alueilla koskevien harmonisoitujen eurooppalaisten normien noudattaminen on vahvistettu yhdenmukaisuustodistuksella.

2.7 Asennus räjähdysvaarallisella alueella

Lähetin MyPro CLM 431 / CLD 431 on valmistettu ja tarkastettu "räjähdysvaarallisia alueita varten tarkoitettujen sähkölaitteiden" harmonisoitujen eurooppalaisten normien (CENELEC) mukaisesti. Laite täyttää ohjeen 76/117/EEC varsinaiset vaatimukset ja soveltuu käytettäväksi räjähdysvaarallisilla alueilla.



Varoitus!

- Asennuksessa ja käytössä on noudatettava kulloinkin voimassa olevia kansallisia määräyksiä.
- Kaikki viestijohdot on suojattava VDE 0165 mukaisesti ja asennettava erillään muista ohjausjohdoista.



Tiedoksi:

Sähkölaitteiden asennusta ja käyttöä räjähdysvaarallisilla alueilla koskevaa informaatiota löytyy Endress + Hauserin julkaisusta: GI 003/11/de »Explosionsschutz von elektrischen Betriebsmitteln und Anlagen« (»Explosion protection of electric equipment and systems«). Julkaisu on tilattavissa Endress + Hauser Oy:stä.

Varoitus!

Mainittu häiriövarmuus koskee

ohjeiden mukaisesti.

ainoastaan laitteita, jotka on liitetty

tässä käyttöohjeessa annettujen



3 Asennus

3.1 Mittauslaite

Täydelliseen mittauslaitteeseen kuuluu:

- lähetin MyPro CLM 431
- konduktiivinen 2-elektrodinen mittauskenno integroitulla lämpötila-anturillla, esim. CLS 12

Lähetin MyPro CLD 431

- mittauskaapeli esim. CYK 71
- tai kompaktilaite MyPro CLD 431 johtokykymittauskennolla CLS 12.



6

0 0 0 0

0 0 0 0 0





7

LM431SY2.CDR



3.2 Mitat



3.2.1 MyPro CLM 431 (konduktiivinen)





LM431CE3.CHP



MyPro CLD 431 (konduktiivinen) 3.2.2



Mitat MyPro CLD 431 Kuva 3.4 ja CLS 12

3

3.3 **Kiinnitys**

3.3.1 MyPro CLM 431

MyPro CLM 431 voidaan kiinnittää seinään tai putkeen. Tarvittavat kiinnikkeet (tyypistä riippuen) kuuluvat toimitukseen.

MyPro:n kotelo kiinnitetään kiinnikkeeseen kahdella ruuvilla. Neljän porasreiän avulla kotelo voidaan kääntää 90°.



MOUNT2D2.CDR

Vasemmalla: Putkikiinnitys, DN 60 kiinnikesangan avulla

Oikealla: Putkikiinnitys, DN 30 ... 200 kiinnikesangan avulla Kuva 3.5 (vaakasuora asennus)

> Vasemmalla: Putkikiinnitys, DN 60 kiinnikesangan avulla

Oikealla: Putkikiinnitys, DN 30 ... 200 kiinnikesangan avulla Kuva 3.6 (pystysuora asennus)

MOUNT2D1.CDR







3.3.2 MyPro CLD 431 (konduktiivinen)

Kompaktiversio voidaan asentaa esim. väliainevirtausputkeen. Mittauskennon etäisyys putken sisäseinämästä ei vaikuta mittaustarkkuuteen.



Tiedoksi:

- Kierteen kiristysmomentti ei saa ylittää 25 Nm.
- Kiinnitä huomiota väliaine- ja ympäristölämpötilarajoihin kompaktiversiota käytettäessä (ks. tekniset tiedot, kuva 10.1).



Putkikiinnitys Kuva 3.9 MyPro CLD 431



LM431CE3.CHP



3.3.3 Laitteen kääntäminen

Kotelon kääntäminen

Kun laite on kiinnitetty seinään tai putkeen vaaka- tai pystyasentoon, se voidaan kääntää haluttuun asentoon.



Kotelon kääntäminen

Vasemmalla: MyPro CLM 431

Oikealla: Kuva 3.10 MyPro CLD 431



Tiedoksi:

Huomioi asennuksessa näppäinkentän sijainti. Siihen on oltava vapaa pääsy.

Näytön kääntäminen

Näyttö on käännettävissä ongelmatonta lukemista varten. Näyttö voidaan kääntää 90° askelin (ks. kuva)



Näytön irrotus ja kiinnitys

① Kansi irrotetaan.
 Liitoslaatta painetaan ulospäin.

② Näyttö käännetään eteenpäin ja irrotetaan.

③ Näyttö käännetään kulloinkin 90° ja työnnetään takaisin haluttuun asentoon.

 ① Näyttö lukittava
 Kuva 3.11 ohjaimeensa. Asennus

3.4 Johtokykymittauskennojen liitäntä

3.4.1 Soveltuvat mittauskennot

MyPro CLM 431 -lähetintä varten voidaan käyttää seuraavia konduktiivisia johtokykymittauskennoja:



Yleiskatsaus soveltuvista mittauskennoista Kuva 3.12 mitta-alueineen



| Tiedoksi:

Kulloinkin voimassa oleva mitta-alue riippuu käytettävien mittauskennojen sovellusalueesta.

3.4.2 Mittauskaapeliliitäntä

Johtokykymittauskennojen liitäntä tapahtuu esivalmistellun, suojatun monijohdinmittauskaapelin CYK 71 avulla. Mikäli mittauskaapelia joudutaan mahdollisesti jatkamaan, on käytettävä liitäntärasiaa VS yhdessä jatkokaapelin CYK 71 kanssa.

5

3

Mittauskaapeli CYK 71:n rakenne ja valmistelu liitäntäesimerkkeineen





Erikoismittauskaapelin CYK 71 rakenne / valmistelu

- Kuva 3.13 8 Ulompi suoja

Liitäntäesimerkit:

Vasemmalla: Mittauskennon CLS 19 liitäntä CYK 71:n avulla

Oikealla: Mittauskennon CLS 12 Kuva 3.14 liitäntä CYK 71:n avulla



Ohje mittauskaapelin liittämiseksi lähettimeen CLM 431



Mittauskaapelin Kuva 3.15 liitäntä



Liitinkappale Vasemmalla:

Mittauskaapeli CYK 71:n liitinkappale

Oikealla: Kuva 3.16 Liittimet

Asennus



3.5 Sähköinen liitäntä

Lähetin CLM 431 / CLD 431 on varustettu erillisillä liitäntätiloilla apujännitesyöttöä ja mittauskennoliitäntää varten.

Kaksijohdinkaapelien liittimet sijaitsevat laitteen oikealla puolella kierrekannen alla. Lähetin CLM 431 / CLD 431 liitetään seuraavasti:

- Lähetin MyPro CLM 431 / CLD 431 liitetään 12...30 V:n tasajännitteeseen.
- Laite maadoitetaan sen ulkoisen maadoitusliittimen avulla.
 Kakoiiahdinkaappiin augia yhdiatet
- Kaksijohdinkaapelin suoja yhdistetään liitäntätilan maadoitusliittimeen.

 Apujanniteen

 Itaus

 Kennon

 Itänitälla

 Kennon

 Itänitälla

 Kaapelisuojan

 Laitteen

 Mittaus

 Kaapelisuojan

 Kaaadoitusliten

 Kaadoitusliten





Kuva 3.18 Sähköiset liitännät



Tiedoksi:

- Suojan maadoitus on pidettävä mahdollisimman lyhyenä. Suoja kiinnitetään suoraan maadoitusliittimeen. Tämä koskee myös liitäntärasia VS:n liitäntää.
- Kiinnityksen tapahtuessa mastoon masto maadoitettava häiriönkestävyyden parantamiseksi. Johdon sijainti maston sisällä parantaa häiriösuojaa.
- Häiriönkestävyys on taattu vain suojatulla kaksijohdinkaapelilla liitetyn maadoitetun laitteen osalta.

Kuorma

Lähettimen pienin tarvittava apujännite on riippuvainen liitetyn tulostuslaitteen vastuksesta.

Alla olevasta käyrästä selviää tarvittava apujännite HART-liityntää varten sekä suurin sallittu lähettimen virtapiirin kuorma. Suurin sallittu vastus R_{max} saadaan yhtälöstä:

$$R_{max} = \frac{U_V - U_M}{I_m ax}$$

jossa U_V = lähettimen virtapiirin (DC) apujännite

U_M = lähettimen liitinjännite (12 V DC)



Lähettimen virtapiirin Kuva 3.19 sallittu vastus

3.6 MyPro:n liitäntä Ex-alueella

MyPro CLM 431-G:n liitäntä

Ohjeen 76/117/EEC mukaisesti hyväksytty laite CLM 431-G saadaan asentaa Ex-alueen vyöhykkeillä 1 tai 2. Luonnostaan vaaraton virtapiiri (ia) voidaan myös viedä vyöhykkeeseen 0, mikäli noudatetaan eurooppalaista normia IEC60079-14.

MyPro CLM 431-H:n liitäntä

Ohjeen 76/117/EEC mukaisesti hyväksytty laite CLM 431-H saadaan asentaa Ex-alueen vyöhykkeillä 1 tai 2. Luonnostaan vaaraton virtapiiri (ia) voidaan myös viedä vyöhykkeeseen 0, mikäli noudatetaan eurooppalaista normia IEC60079-14.

MyPro CLD 431-H:n liitäntä

Ohjeen 76/117/EEC mukaisesti hyväksytty laite CLD 431-H saadaan asentaa Ex-alueen vyöhykkeillä 1 tai 2.

Ex-rakenteisiin lähettimiin saa kytkeä ainoastaan luonnostaan vaarattomalla virtapiirillä varustettuja laitteita.

Varoitus!

Näytön ja liitäntätilojen kannet on oltava suljettuina käytön aikana.



Huomioi myös kohdassa 2.7 esitetyt laitteen asennusta Ex-alueella koskevat tiedot.



Lähetin ja mittauskenno Kuva 3.20 Ex-alueella



LM431CE3.CHP



4 Käyttö

4.1 Käyttöönotto



- Tutustu mittauslaitteen käyttöön ennen kuin virta kytketään ensimmäisen kerran!
- Ennen virran kytkemistä, tarkista, että kaikki liitännät on tehty oikein!
- Varmista, että mittauskenno on kosketuksessa väliaineeseen tai kalibrointiliuokseen, koska muutoin ei saada uskottavaa mitta-arvoa.

4.2 Kytkentä, tehdasasetukset



 $M\Omega cm$

MyPro CLM 431 / CLD 431 -lähettimellä ei ole "ON-kytkintä". Apujännitteen kytkennän tapahduttua laite suorittaa itsetestin ja ilmoittautuu sen jälkeen mittaustilaan viimeksi asetettuine parametreineen. Näytön tulisi olla viereisen kuvan kaltainen (näyttöarvo voi tietenkin olla erilainen). Kun kyseessä on johtokykymittaus, näyttöön ilmestyy μ S/cm tai mS/cm tai vastusmittauksen osalta M Ω cm tai k Ω cm.

Jos näyttöön ilmestyy uskottava arvo, kennovakio voidaan syöttää, jotta lähetin näyttäisi kulloiset mitta-arvot oikein. Laite on nyt mittauskunnossa.

Käytä toimintoa "LSPE" vaihtaaksesi toimintamuotoa johtokyky- ja vastusmittauksen välillä, ks. kohta 5.1.

Kalibrointia koskevat tiedot löytyvät kohdista 4.6.4 ja 5.

Kuva 4.2 Vastusmittaus

4.3 Laitteen käyttö ja käyttöelementit

Älykästä lähetintä CLM 431/ CLD 431 voidaan ohjata sekä paikallisesti neljällä näppäimellä että myös HART-liitynnän kautta (käsipääte tai Commuwin II) tai PROFIBUS-PA:n kautta.

Ko. neljä näppäintä sijaitsevat kääntökannen alla laitteen sivussa olevassa näppäinkentässä. Käyttö tapahtuu terävän esineen, esim. kuulakärkikynän avulla.

Näppäinten sijoitus selviää näppäinkentän yläpuolella koteloon kiinnitetystä tarrasta.



Käyttötaso 1

- · Aktiivisten asetusten valvonta (sivuparametrit)
- Virheenmääritys (virheenmääritysparam.)
- Virtaliitynnän asetus (laiteparametrit)
- Kalibrointi

Käyttötaso 2

Tämä taso sisältää kaikki muut asetusmahdollisuudet, kuten esim. johtokyky- ja vastusmittauksen vaihtokytkennän.





Näppäintoiminnot käyttötasossa 1:

- Sivuparametrien valinta/arvojen asetus
- Virheenmääritysparametrien valinta/ arvojen asetus
- F Laiteparametrointi
- С Anturikalibrointi

- Commuwin II HART:n kautta
- Commuwin II

PROFIBUS-PA:n kautta.

21



I M431CE4 CHE







Viereinen kuva esittää MyPro:n koko näyttöä.

Riippuen laitteen asetuksista näytössä esiintyy erilaisia symboleja.

4.5 Lukitus

Käytön lukitus tai paikalliskäytön kirjoitussuojaus tapahtuu näppäimistön tai viestintäliitynnän kautta. Näppäimistön kautta tapahtuvalla lukituksella on etusija ohjelman lukitukseen nähden, ts. paikallisesti lukittu laite ei voi vapautettavissa viestintäliitynnän kautta.



Tiedoksi:

- Lukitus säilyy myös jännitekatkoksen tai resetin jälkeen.
- · Laite toimitetaan tehtaalta lukitsemattomana.



(Käyttöyrityksessä esiintyy "Prot" (= kirjoitussuojattu)).

Vapautus / lukitus liitynnän kautta tai mittauspaikalla (käyttötaso 2):

Ks. kohta 4.7 ja 5.

4.6 Käyttötaso 1

Näyttötilan valinta

Normaalisti näytössä näytetään sillä hetkellä mitattu mitta-arvo. Neljän näppäimen avulla päästään erilaisiin näyttötiloihin, jotka selostetaan seuraavilla sivuilla.



4.6.1 Valikko sivuparametrit (lämpötila)

Valikko sivuparametrit on parametrien näyttöä varten, jotka vaikuttavat mitta-arvoon (lämpötila). Mittausarvon näyttö palautuu automaattisesti 30 sekunnin jälkeen ilman näppäinohjausta.



4.6.2 Valikko virheenmääritysparametrit

Virheenmääritysparametrit näyttävät ajankohtaisen lämpötila-offset:in (lämpötilan kalibroinnista) ja aktiiviset virheenmäärityskoodit (virheilmoitukset) alkaen korkeimmasta prioriteetistä (Prio_1).

Mittausarvon näyttö palautuu automaattisesti 30 sekunnin jälkeen ilman näppäinohjausta.



4.6.3 Valikko parametrointi

Tällä toiminnolla voidaan näyttää ja editoita tärkeät parametrit käyttöönottoa varten:

- Lämpötilakerroin (α -arvo)
- Kennovakio
- Mitta-arvo 4 mA:n virtalähdölle
- Mitta-arvo 20 mA:n virtalähdölle •

Editointitilaa osoitetaan vilkkumalla. Kun haluttu arvo on syötetty, hyväksytään se "F":llä ja otetaan seuraava parametrointiaskel.

Asetusalueet

Kennovakio C: Minimietäisyys 4/20 mA:n arvo:

Lämpötilakerroin α: 0.00 . . . 10.00 %/K 0.0025 . . . 99.99 cm⁻¹ 20 µS/cm / 200 µS/cm 2 mS/cm (riippuen mitta-alueesta)



Mitta-arvojen 4 mA ja 20 mA kohdalla on varattava vähimmäisetäisyys (ks. kohta 10) \rightarrow alituksessa esiintyy virheilmoitus.



4.6.4 Valikko kalibrointi

MyPro CLM 431 / CLD 431:n kalibrointivalikko sisältää lämpötilan ja johtokyvyn kalibroinnin. Johtokyvyn kalibrointi, ts. kennovakion määritys, voidaan suorittaa automaattisen lämpötilakompensoinnin kera tai ilman. Kalibrointiliuoksen osalta on lämpötilasta riippuvainen lämpötilakerroin tai kompensoisoimaton johtokykyarvo dokumentoitu.

Kalibrointivalikko voidaan aina keskeyttää näppäimellä **"F"**, jolloin esiintyy virheilmoitus (kalibrointikeskeytys).



4.7 Käyttötaso 2

Käyttötaso 2 sisältää kaikki MyPro 431:n / CLD 431:n käyttötoiminnot, jotka eivät sisälly käyttötasoon 1. Toiminnot on valikkomuodossa yhdistetty toimintaryhmiksi.

- Tasoon pääsee normaalista • mittauskäytöstä painamalla näppäintä "F" > 3 sekunnin ajan. Painetaan näppäintä "+" tai "–" halutun
- toimintaryhmän valitsemiseksi.
- Pääsy kulloiseen toimintaryhmään ja eteneminen ryhmässä tapahtuu "F":n avulla.
- Kun haluttu toiminto esiintyy näytössä, valittu arvo tai valinta voidaan muuttaa "+":n tai "–":n avulla.
- Paina näppäintä "F" hyväksyntää varten ja etene.
- "Asiantuntija" käyttötasosta poistutaan painamalla jälleen "F" kolme sekuntia tai automaattisesti kolmen minuutin jälkeen, jos ei mitään syöttöä suoriteta (arvoa ei tallenneta).



LM431CE5.CHP

5 Functional description

This chapter contains detailed descriptions of and information on the individual MyPro func-

tions referred to the matrix representation of the hand-held terminal or Commuwin II.

5.1 Main parameters

Function group						
MAIN PARAMETERS						
Function/display	Matrix	Description	Set	ting		
	VH'		Default	Customer		
Measured value	VH OO	Displays the currently measured conductivity or resistance value.	-			
Temperature 238 rc	VH 01	Displays the currently measured temperature value (see chapter 4.6.1). Note: This is only displayed if the temperature measurement is enabled (see VH 17: type of temperature compensation). Value range: -20.0 250.0 °C	_			
Operating state	VH 02	Output of current operating state, e.g. indicates when field calibration is currently being performed. Image: Community in the community of the community intended for operation with the community intended for operation with the community of the community intended for the hand-held HART [®] terminal. Community Meas., cal. active, parameter setting	_			
Unit of main parameter	VH 03	 Selects the unit for the parameter measured. Note: This is only relevant for the data transfer via the interface. The unit on the 4-digit field display changes automatically based on the auto range function. Depending on operating mode cond. / MΩ Value range: µS/cm, mS/cm, S/m kΩ-cm, MΩ-cm 	µS/cm or MΩ·cm			
Input damping	VH 04	This function describes the transmitter's response to the input signal. The value entered here corresponds to the number of samples used for averaging. Value range: 1 10	3			

5

Function group					
MAIN PARAMETERS					
Function/display	Matrix	Description	Set	ting	
	VH.,		Default	Customer	
Set 4 mA value	VH 05	Entry of conductivity or resistance value for a current value of 4 mA (see chapter 4.6.3).	0.0 mS/cm		
µS/cm 4mA		A specific minimum distance from the 20 mA value must be observed.			
		0 9999 mS/cm 0 9999 kΩ·cm			
		Minimum distance: Meas. value betw. 0 199,9 mS/cm: 20 mS/cm / 25 k Ω ·cm Meas. value betw. 200 1999 mS/cm: 200 mS/cm / 0,25 M Ω ·cm Meas. value betw. 2 19,99 mS/cm: 2 mS/cm / 2,5 M Ω ·cm			
Set 20 mA value	VH 06	Entry of conductivity or resistance value for a current value of 20 mA (see chapter 4.6.3).	20.00 μ S/cm		
μ\$/cm 20mA		Note: A specific minimum distance from the 4 mA value must be observed.			
		Value range: 0 9999 mS/cm 0 9999 kΩ·cm			
		$\begin{array}{llllllllllllllllllllllllllllllllllll$			
Measuring range	VH 08	Measuring range selection. Two different basic modes are available: 1.Fixed measuring ranges: Measuring and display range correspond to the selected range 2.Auto range: The instrument automatically selects the optimal meas- uring and display range based on the input signal	auto range		
		The measuring ranges depend on the current cell constant.			
		14 or "auto" See auto range under "Technical data" in chapter 10.			
Operating mode conductivity / resistance	VH 09	Sets the transmitter operating mode to conductivity or resistance measurement.	conductivity or resistance		
EYPE		Changing the operating modes resets the current output values to default.			



Functions marked this way are not available in the Profibus instrument variant.



LM431CE5.CHP

5.2 Basic functions

	Function group					
		BASIC FUNCTIONS				
Function/display	Matrix	Description	Set	ting		
	VH''		Default	Customer		
Remote calibration control	VH 10	This function controls the calibration sequence when operated via the interface (see chapter 4.6.4).	_			
		Note: The measuring system can be calibrated in the field or via the interface (hand-held HART [®] terminal or Commuwin II).				
Temperature coefficient α	VH 11	Entry of linear temperature coefficient for the process in measuring mode.	2.10 % / K			
		Value range: 0 10 % /K				
Temperature compensation	VH 13	Selection of medium temperature compensation type.	linear			
type		Value range: $\neg \Box \neg c$ = none $\downarrow \neg =$ linear $\neg \Box \neg c$ = NaCl $\Box \neg c$ = a value table $\neg \Box \neg c$ = pure water NaCl				
Reference temp.	VH 14	Reference temperature for automatic temperature compensation. Value range: -20 250 °C	25 °C			
Cell constant	VH 15	Entry of cell constant or information on cell constant determined during calibration.	1cm ⁻¹			
		Value range: 0.0025 99.99 cm ⁻¹				
Line resistance	VH 16	Entry of line resistance for conductivity measuring cell.	0			
L.Hd		Note:The line resistance does not affect the accuracy in the case of measured values below 1 mS. With measured values above 5 mS and line lengths (CYK 71) exceeding 10 m, the error is greater than 0.5% of the measuring value and therefore requires compensation.Note: The total line resistance of measuring cable CYK 71 is 0.17 Ω /m.				
		Value range: 0.00 50 ohms				



5

	Function group					
	BASIC FUNCTIONS					
Function/display	Matrix	Description	Set	ting		
	VH'		Default	Customer		
Temperature compensation type	VH 17	Switches the temperature measurement on/off and toggles between manual and automatic temperature compensation (MTC/ATC). Note: • If set to "off+MTC", the preset MTC	on + ATC			
		 temperature is used for compensation If set to "on+MTC", the temperature can be additionally measured via a temperature sensor and output via the HART[®] interface or in the field If set to "on+ATC", the value measured by the temp. sensor is used for compensation 				
		Value range:				
MTC temp.	VH 18	Entry of reference temperature for manual temperature compensation.	25.0 °C			
		Value range: -20.0 250.0 °C				
Temperature offset	VH 19	Adjustment of temperature measurement by an offset value. Entry of an offset value or of the offset determined during calibration (at operating level 1, this value can only be viewed but not edited). Note: Only exists if temperature measurement has been switched on (see VH 17, "Temperature compensation type").	0.0 °C			
		Value range: -20.0 20.0 °C				



LM431CE5.CHP

5.3 Calibration parameters

Function group						
	CALIBRATION PARAMETERS					
Function/display	Matrix	Description	Set	ting		
	VH ¹ /		Default	Customer		
Entry of calibration solution	VH 20	Conductivity of calibration solution. Note: The unit is μS/cm or mS/cm. Value range: 0.000 μS/cm to 9999 mS/cm	1000 μS/cm			
Temperature coefficient α of calibr. solution	VH 21	Temperature coefficient of calibration solution for calibration with automatic temperature compensation. Note: The α value of the solution is temperature-dependent and must be determined for the current calibration temperature. Value range: 0.00 10.00 % / K	2.10 % / K			
Temperature of calibr. solution	VH 24	Temperature calibration: Field for entry of current calibration temperature. The temperature offset is automatically computed from this and displayed in field VH 19 "Temperature offset". Note: • With ATC: Entry of actual temperature • With MTC: Entry of MTC calibration temp. Value range: -20 250 °C	_			
Automatic HOLD during calibration	VH 29	Activates or deactivates the automatic HOLD function for the current output during calibration. Note: Hold during calibration is always active for resistance measurement. Value range: Autom. HOLD during calibration off Autom. HOLD during calibration on	on			



Functions marked this way are not available in the Profibus instrument variant.



5.4 Alpha table

In order to implement a special, mediumspecific temperature compensation function, a table is stored in the MyPro CLM 431 / CLD 431. The α characteristic is entered in a table which may contain 2 to 10 elements. Each table element consists of an α value and the associated temperature.

The α table is activated via the "tab" mode in matrix position VH 12. However, the values in the α table should not be edited in the "tab" mode since changes become effective immediately (resulting in error message 150 in position VH 62).

Programming sequence for α table:

- 1. Enter number of elements (VH 60)
- 2. Select element 1 (VH 61)
- 3. Enter temperature value 1 (VH 62)
- 4. Enter α value 1 (VH 63)
- 5. Repeat steps 2 to 4 for all other elements of the table

	Function group					
	α TABLE					
Function/display	Matrix VH ¹⁾	Description	Set	ting		
Number of elements	VH 60	Entry of number of table elements. Value range: 2 10	Default 2	Customer		
Selection of element	VH 61	Programming of the selected table element starts with the selection of the element. This is followed by the entry of the temperature value and corresponding α value for the table element. Value range: 1 number of elements	1			
Temperature value	VH 62	Temperature value of current table element. Note: The temperature values must increase from one element to the next. The required minimum distance between temperature values is 10 K. Error message E150 indicates an incorrect temperature entry. Value range: -20.0 250.0 °C	0			
α value	VH 63	Temperature coefficient of current table element. Value range: 0.0 10.00 % / K	2.10 % / K			

5.5 Polarisation detection

Conductive conductivity measuring cells are characterised by a limited measuring range which mainly depends on the cell constant. However, the exact application range limits of a measuring cell also depend on other factors, such as, for example, frequency of measurement, electrode material, coating on electrode and medium to be measured, all of which complicate the determination of the application limit. The MyPro CLM 431 / CLD 431 transmitter employs a procedure permitting direct measurement of the polarisation effect. This method evaluates signals and issues an alarm whenever the cell constant has changed by more than 5% due to polarisation effects.

Function group					
		BASIC MONITORING FUNCTIONS			
Function/display	Matrix	Description	Set	ting	
	VH ¹		Default	Customer	
Polarisation monitoring	VH 70	Switches the polarisation monitoring function on or off. Note: If polarisation monitoring is on and polarisation is detected, then error message E071 "Polarisation error" is signalled (does not appear for MΩ measurement) Value range: On Off	on		

5.6 Diagnosis

	Function group					
DIAGNOSIS This function group can be used to define the error current assignments for each individual error and to disable (lock) field operation.						
Function/display		Description	Set	ting		
	VH /		Default	Customer		
Selection of diagnostic code	VH 80	Selection of a diagnostic (error) code (see chapter 7.2). Value range: E 1 E 150	1			
Error status	VH 81	Display of status for selected diagnostic code. Note: The error status can be evaluated with the hand-held HART [®] terminal or with the Commuwin II user interface. Value range: 0 = inactive 1 = active	depending on code			



Function group						
	DIAGNOSIS This function group can be used to define the error current assignments for each individual error and to disable (lock) field operation.					
Function/display	Matrix VH ¹⁾	Description	Set Default	ting Customer		
Error assignment ER55	VH 82	This function is used to define whether or not an error current of 22 mA is output for the selected error code on the current output. Image: Note: If set to "yes" (effective), an error current is output for an error set by the MyPro. A diagnostic code with the setting "no" (not effective) has no effect on the current output. Value range: Image: Image: Image and the current of the current output for an error current output.	depending on code			
Error current delay	VH 83	Sets the delay for a diagnostic code for which the error current assignment "yes" (effective) has been set. If such a diagnostic code is set by the MyPro, this error becomes effective as an error current after the delay defined here. Image: Note: This delay applies to all diagnostic codes. Value range: 0 30 s	2 s			
Unlock/Lock	VH 89	Unlock/locks field operation (see chapter 4.5). Image: Note: Field operation can be locked and unlocked with the hand-held HART [®] terminal, with the Commuwin II user interface or in the field. Locking via the keypad has precedence over software locking. Image: Note: 0097 = instrument unlocked (any other entry locks the instrument) 9999 = instrument locked in field with key combination "+" and "F" (unlocking via the HART [®] interface or via operating level 2 is not possible) Value range: 0000 9998	0097			



Functions marked this way are not available in the Profibus instrument variant.



LM431CE5.CHP

5.7 Service and simulation

Function group					
		SERVICE/SIMULATION			
Function/display	Matrix	Description	Setting		
	VH.7		Default	Customer	
Diagnostic code	VH 90	Displays the active diagnostic codes with the highest priority levels (see chapters 4.6.2 and 7.2). Value range: E 1 E 150	-		
Device address	VH 92	Entry of device address. Note: Only available for Profibus PA. Value range: 0 126	126		
Software version	VH 93	Displays the software version of the instrument.	depends on instrument version		
Hardware version	VH 94	Displays the hardware version of the instrument.	depends on instrument version		
Factory settings (set default)	VH 95	This function is used to selectively reset the data areas of the instrument to the factory settings. Value range: $n_0 = 0 = no reset$ $n_0 = 1 = instrument (data specific to instrument)$ $5c_0 = 2 = sensor (data specific to sensor)$ $u_0 = 3 = user (combination of 1+2)$	no		
Output current simulation	VH 98	This function is used to switch the output current simulation on or off. Note: Reset back to "0" (simulation off) after simulation. Value range: $o^{r-r} = 0 = off$ $o^{r-r} = 1 = on$	0		
Current value	VH 99	Entry of a current value (independent of the measurement) to be output at the current output. Value range: 4.00 22.00 mA	10 mA		



Functions marked this way are not available in the Profius variant.



5.8 User info

Function group						
	USER INFO					
Function/display	Matrix	Description	Set	ting		
	VH''		Factory	Customer		
Tag number	VH	Entry of a measuring point designation (tag number).	44 77			
	AO	Value range: Any sequence of 8 alphanumeric characters.	(8 spaces)			
		Note: This function is only available for operation via the Hart interface but not via Profibus.				

22

6 Interfaces

6.1 HART[®]

6.1.1 $HART^{(B)}$ with hand-held terminal or $HART^{(B)}$ Communicator

In addition to field operation, the MyPro CLM 431 / CLD 431 transmitter can also be accessed via the universal hand-held terminal DXR 275 or a PC with a modem using the HART[®] protocol to query or change parameter settings. This chapter contains essential information on:

- electrical connection
- operation of HART Communicator
- E+H operating matrix for HART[®]

Connection of hand-held terminal DXR 275

There are two alternatives for connecting the hand-held terminal (see fig. 6.1.):

- Direct connection to the measuring transmitter via terminals 1 and 2
- Connection via the 4 ... 20 mA analog signal line

In both cases, the measuring circuit must have a resistance of at least 250 Ω between the power source and the hand-held terminal. The max. load at the current output depends on the supply voltage. The measuring transmitter input voltage for the maximum current consumption of 22 mA must be at least 13.5 V.

Refer to the DXR 275 operating

held HART terminal.

instructions for details on the hand-

Note:



Electrical connection of Fig. 6.1 hand-held HART[®] terminal

Operation of MyPro CLM 431 / CLD 431 with the HART® Communicator

Operating the MyPro CLM 431 / CLD 431 measuring system via the hand-held terminal is quite different from field operation via the pushbuttons on the keypad. When using the HART[®] Communicator, all MyPro CLM 431 functions are selected at different menu levels (see figure 6.2) and with the aid of a special E+H operating menu (see figure 6.3).



The MyPro measuring instrument can only be controlled with a HART[®] Communicator if the proper software (DD = device description of MyPro CLM 431 / CLD 431) is installed in the Communicator. If this is not the case, the memory module may have to be replaced, or the software may have to be adapted. Contact E+H Service if you have any questions.

• All MyPro functions are described in detail in chapter 5.



Operation of hand-held Fig. 6.2 HART terminal

Procedure:

- 1. Switch on the hand-held terminal:
 - a) Measuring instrument not connected → The HART[®] main menu appears. This menu level appears for any HART[®] programming, i.e. independent of the instrument type. Refer to the "Communicator DXR 275" operating instructions for further information.
 - b) Measuring instrument is connected → The program goes directly to the "Online" menu level.

The "Online" menu level is used to display the current data measured, such as conductivity, temperature, etc., and also allows you to access the MyPro CLM 431 / CLD 431 operating matrix via the "matrix group selection" (see figure 6.2). All function groups and functions accessible through HART are displayed in this matrix in a systematic arrangement.

- The function group is selected using "matrix group selection" (e.g. basic functions), and then the desired function, e.g. remote calibration. All settings or numeric values relating to the function are immediately displayed.
- 3. Enter numeric value or change setting as required.
- Press function key "F2" to call up "SEND". Press the F2 key to transfer all the values entered/ settings changed with the hand-held terminal to the MyPro CLM 431 / CLD 431 measuring system.
- Press the HOME function key "F3" to return to the "Online" menu level. Here, you can read the current values measured by the MyPro CLM 431 / CLD 431 instrument with the new settings.



BA018E42.CDR Fig. 6.3

If the instrument has been locked in the field, the parameters cannot be changed via the hand-held terminal (see chapter 4.5)

HART[®] operating matrix for MyPro CLM 431 / CLD 431 (conductive conductivity measurement)

HART[®] operating matrix

6

6.1.2 HART[®] with Commuwin

Description

The MyPro CLM 431 / CLD 431 measuring transmitter can also be operated via its HART[®] interface using Commuwin II. Commuwin II is a graphical control program for intelligent measuring instruments and can handle various communication protocols. The program supports the following functions:

- On-line and off-line measuring transmitter parameter changes
- Loading and saving of instrument data (upload/download)

A program extension additionally supports recording of measured values on a line recorder.

Commuwin offers two alternatives for operation and parameter changes (**instrument data** menu):

- Graphical operation
- Matrix operation





instructions (BA 124F/00/en) for a detailed description.







57=

6

Commuwin II operating matrix

		H0	H1	H2	Н3	H4	H5	H6	H7	H8	H9
V0	MAIN Parameters	Meas. value	Temperature	Operating state	Unit of meas. value	Signal damping	Value for 4 mA	Value for 20 mA		Meas. range	Oper. mode cond./M Ω
V1	BASIC FUNCTIONS	Calibration (control field)	Temp. coefficient		α value of medium	Reference temperature	Cell constant	Line resistance	Temperature compens.	Entry of MTC temp.	Temperature correction
V2	CALIBR. PARAMETERS	Conductivity of solution	α value of solution			Temperature of solution					Autom. HOLD dur. calibration
V3											
V4											
V5											
V6	ALPHA TABLE	Number of elements	Selection of elements	Temperature value	Alpha value						
V7	Pol. Monitoring	Pol. alarm									
V8	DIAGNOSIS	Selection of error code	Error Status	Error assignment	Error current delay						Unlock/Lock
V 9	SERVICE/ SIMULATION	Error code			Software version	Hardware version	Factory defaults			Current output simulation	Current value
VA	USER INFO	Meas. point (tag number)									

6.2 Profibus PA

Please refer to separate operating instructions for instruments equipped with the Profibus interface.

7 Troubleshooting

7.1 Error indication

The MyPro CLM 431 / CLD 431 indicates errors by means of an alarm symbol flashing on the display. It also outputs an error current of 22 +/- 0.5 mA at the current output if configured accordingly (VH 80 – 83). The error can then be identified in the diagnostic parameters via the diagnostic code. Up to five entries are listed according to priority.

7.2 Diagnostic codes (error codes)

The following table describes the diagnostic/error codes of this instrument variant. The default error current assignment (active or not active) for each code is also listed.

Failure no.	Display	Measures	Error current assignment (default)
E1	EEPROM memory error		active
E2	Instrument not adjusted, adjustment data invalid, no user data available or user data invalid (EEPROM error)	Switch instrument off and on again, return instrument to your local Endress+Hauser sales agency or exchange instrument.	active
E7	Transmitter malfunction		active
E10	No temperature sensor connected or temperature sensor short-circuited (temperature sensor faulty)	Check temperature sensor and connections; if necessary, check instrument and measuring cable with temperature simulator.	active
E36	Measuring cell calibration range exceeded Recalibrate measuring cell; if necessary, check measuring cell and connections; check instrument and measuring		active
E37	Below measuring cell calibration range	cable with conductivity simulator.	active
E45	Calibration aborted	Repeat calibration.	active
E46	Current output parameter limits interchanged	Set value for 20 mA to a value > value for 4 mA.	active
E55	Below main parameter measuring range	Immerse sensor in conductive medium.	active
E57	Main parameter measuring range exceeded	Check measurement, process control and connections: if	active
E59	Below temperature measuring range	necessary, check instrument and measuring cable with	active
E61	Temperature measuring range exceeded	Simulator.	active
E63	Below current output range	Check configuration; if necessary, check instrument and measuring cable with simulator.	not active
E64	Current output range exceeded	Check measured value and current assignment.	not active
E71	Inaccurate measurement/polarisation	Clean measuring cell; check table; select suitable measuring cell.	active
E77	Temperature outside α value table range	Check process / table assignment.	not active

LM431CE7.CHP

7

Failure no.	Display	Measures	Error current assignment (default)
E80	Current output parameter range too small	Spread current output.	not active
E100	Current simulation active	Choose correct current output parameter.	not active
E101	Service function active	Switch off service function or switch instrument off and on again.	not active
E106	Download active	Wait for download to be finished.	not active
E116	Download error	Repeat download.	active
E150	Distance between temperature values in α value table too small or not monotonously increasing	Enter correct values in α value table (minimum distance between temperature values of 10 K required).	not active



8 Service and maintenance

8.1 Cleaning

We recommend using commercially available cleaning agents to clean the front of the instrument. The instrument front is resistant to

(DIN 42 115 test method):

- alcohol (short-term)
- diluted acids (max. 2 % HCI)
- diluted lyes (max. 3 % NaOH)
- soap-based household detergents

8.2 Repairs

Repairs may only be carried out by the manufacturer or through the Endress+Hauser service organization. An overview of the Endress+Hauser service network can be found on the back cover of these operating instructions.



Do not use concentrated mineral acids or lyes, benzyl alcohol, methylene chloride or high-pressure steam to clean the front panel.

LM431CE9.CHF



9 Accessories

The following accessories may be ordered separately:

- Transmitter power supply units
 - RN 221 power separator (non-Ex)
 - RN 221 Z power separator (Ex)
 - NX 9120 power supply (1 channel, non-Ex)
 - NX 9121 power supply unit (3 channels, Ex)
 - 1-channel transmitter power supply units with galvanically separated power output

Output voltage: typ. 24 V DC ±1 V Output current: max. 33 mA Current limiting: 38 mA ±5 mA

• Hand-held HART[®] terminal DXR 275

The hand-held terminal communicates with any HART-compatible unit via the 4 ... 20 mA line.

Refer to the E+H sales agency in your area for details and further information on programming (see back cover of these operating instructions for addresses).

• Commuwin II with Commubox

Commuwin II is a graphical, PC based operating program for intelligent measuring instruments.

Refer to the E+H-System Information SI 018F/00/en for further information on Commuwin II. A gratis update of the commuwin device description is available via internet http://www.endress.com.

The Commubox serves as the required interface between the ${\rm HART}^{\circledast}$ interface and the serial PC interface.

Refer to the E+H sales agency in your area for further information (see back cover of these operating instructions for addresses). • Extension cable CYK 71 Extension cable for conductive measuring cells for use with junction box VS.

cells for use with junction box VS. Order no. 50085333

• Junction box VS

Junction box with receptacle and 7-pin connector for extension of measuring cable connection between measuring cell and instrument. Protection type: IP 65 Order no. 50001054

10 Technical data

MyPro CLM 431 conductive

General specifications	Manufacturer		Endress+Hauser		
	Equipment designation		MyPro CLM 431 conductive		
Physical data	Dimensions (H \times W \times D)		227 × 104 × 137 mm		
	Weight		max. 1.25 kg		
	Protection type		IP 65		
	Housing material		GD-AlSi 10 Mg, plastic-coated		
	Measured value display		liquid crystal display		
Conductivity/resistance measurement	Measuring range		0 2000 mS/cm (uncompensated) 0 86 MΩ·cm		
	Measurement deviation ¹		±0.5 % of measured value ± 4 digits		
	Reproducibility ¹		±0.1 % of measured value ± 2 digits		
	Usable cell constant		$k = 0.0025 \dots 99.99 \text{ cm}^{-1}$		
	Max. sensor cable length	conductivity resistance	100 m 15 m		
	Max. resolution (in most sen	sitive measuring range)	10 nS/cm		
	Measuring frequency	conductivity resistance	299.75 1077.6 Hz 32.5 425 Hz		
Temperature measurement	Temperature sensor connec	ted	Pt 100		
	Measuring range of Pt 100		−20 +250 °C		
	Measurement deviation ¹ (en	tire measuring range)	max. 0.5 % of MR		
	Measured value resolution		0.1 °C		
	Reproducibility ¹		± 0.1 K		
	Adjustable temperature offse	et	±20 K		
Temperature compensation	Compensation types		linear, NaCl, ultrapure water, table		
	Range		−20 +250 °C		
	Reference temperature		adjustable; factory setting 25 °C		
Signal output	Current range		4 20 mA		
	Measurement deviation ¹		$\begin{array}{l} \pm (22 \text{ mA} + 0.0005 \% \cdot _{\text{real}} \cdot \Delta T \ / \ ^{\circ}\text{C}) \\ \Delta T = T_a - 25 \ ^{\circ}\text{C} \text{ for } T_a \geq 25 \ ^{\circ}\text{C} \\ \Delta T = 25 \ ^{\circ}\text{C} - T_a \text{ for } T_a < 25 \ ^{\circ}\text{C} \end{array}$		
	Load		max. 820 Ω		
	Resolution		< 6 μΑ		
Electrical data	Supply voltage		+12 +30 V DC without HART interface +13.5 +30 V DC with HART interface		
	Power consumption		max. 660 mW		
	Signal output		4 20 mA, potential separated from sensor circuit		
	Error current signal output		22 mA ± 0.02 mA		
	HART [®] transfer: load		250 750 Ω		
	HART [®] transfer: signal output	ut	0.8 1.2 mA (peak to peak)		
	Terminals, max. cable cross	section	2.5 mm ² , screen 4 mm ²		

¹ acc. to DIN IEC 746 part 1, for nominal operating conditions



LM431CEX.CHP

Conductivity measurement						
	Fixed measuring ranges					
Measuring range	Cell constant	Measuring range (uncomp.)	Display range (compens. value)	Default value 4 mA	Default value 20 mA	Min. distance
MR 1	0.0025 00.5	0 6 µS/cm	0.000 9.999 µS/cm	0.000 µS/cm	2.000 µS/cm	0.200 µS/cm
MR 2	0.0025 00.5	0 60 µS/cm	00.00 99.99 µS/cm	00.00 µS/cm	20.00 µS/cm	2.000 µS/cm
MR 3	0.0025 00.5	0 600 µS/cm	000.0 999.9 µS/cm	000.0 µS/cm	200.0 µS/cm	20.00 µS/cm
MR 1	0.05 0.5	0 60 µS/cm	00.00 99.99 µS/cm	00.00 µS/cm	20.00 µS/cm	2.000 µS/cm
MR 2	0.05 0.5	0 600 µS/cm	000.0 999.9 μS/cm	000.0 µS/cm	200.0 µS/cm	20.00 µS/cm
MR 3	0.05 0.5	0 6000 µS/cm	0000 9999 µS/cm	0000 µS/cm	2000 µS/cm	200.0 µS/cm
MR 1	0.5 5	0 600 µS/cm	000.0 999.9 μS/cm	000.0 µS/cm	200.0 µS/cm	20.00 µS/cm
MR 2	0.5 5	0 6000 µS/cm	0000 9999 μS/cm	0000 µS/cm	2000 µS/cm	200.0 µS/cm
MR 3	0.55	0 60 mS/cm	00.00 99.99 mS/cm	00.00 mS/cm	20.00 mS/cm	2.000 mS/cm
MR 1	5 99.99	0 6 mS/cm	0000 9999 µS/cm	0000 µS/cm	2000 µS/cm	200.0 µS/cm
MR 2	5 99.99	0 60 mS/cm	00.00 99.99 mS/cm	0.000 mS/cm	20.00 mS/cm	2.000 mS/cm
MR 3	5 99.99	0 600 mS/cm	000.0 999.9 mS/cm	00.00 mS/cm	200 mS/cm	20.00 mS/cm

Auto range					
Min. distance (for 4 20 mA signal), based on cell constant k = 1					
Meas. value	0 199.9 μS/cm	20 µS/cm			
Meas. value	200 1999 μS/cm	200 μS/cm			
Meas. value	2.000 19.99 mS/cm	2.000 mS/cm			

Resistance measurement						
	Fixed measuring ranges					
Measuring range	Cell constant	Measuring range (uncomp.)	Display range (compens. value)	Default value 4 mA	Default value 20 mA	Min. distance
MR 1	0.0025 0.05	0 860 kΩ·cm	0000 9999 kΩ·cm	0000 kΩ·cm	500 kΩ·cm	25 kΩ·cm
MR 2	0.0025 0.05	0 8.6 MΩ·cm	00.00 99.99 MΩ·cm	00.00 MΩ·cm	5 MΩ·cm	0.25 MΩ·cm
MR 3	0.0025 0.05	0 86 MΩ·cm	000.0 999.9 MΩ·cm	000.0 MΩ·cm	50 MΩ·cm	2.5 MΩ·cm
MR 1	0.05 0.5	0 86 kΩ·cm	000.0 999.9 kΩ·cm	000.0 kΩ·cm	50 kΩ·cm	2.5 kΩ·cm
MR 2	0.05 0.5	0 860 kΩ·cm	0000 9999 kΩ·cm	0000 kΩ·cm	500 kΩ·cm	25 kΩ·cm
MR 3	0.05 0.5	0 8.6 MΩ·cm	00.00 99.99 MΩ·cm	00.00 MΩ·cm	5 MΩ·cm	0.25 MΩ·cm
MR 1	0.5 5	0 8.6 kΩ·cm	00.00 99.99 kΩ·cm	00.00 kΩ·cm	5 kΩ·cm	0.25 k Ω ·cm
MR 2	0.5 5	0 86 kΩ·cm	000.0 999.9 kΩ·cm	000.0 kΩ·cm	50 kΩ·cm	2.5 kΩ·cm
MR 3	0.5 5	0 860 kΩ·cm	0000 9999 kΩ·cm	0000 kΩ·cm	500 kΩ·cm	25 kΩ·cm

	Auto range				
	Min. distance (for 4 20 mA signal), based on cell constant $k = 0.01$				
Meas. value	0 199.9 k Ω ⋅cm	25 kΩ·cm			
Meas. value	20 19.99 MΩ·cm	0.25 MΩ·cm			
Meas. value	20.00 999.9 MΩ·cm	2.5 MΩ·cm			



Vibration stability acc. to IEC 770

Mounting position	pipeline
Vibration frequency	10 60 Hz
Maximum amplitude	0.21 mm

Ambient conditions

Electromagnetic compatibility (EMC)	Interference emission acc. to EN 50081-1, 1992 Interference immunity acc. to EN 50082-2, 1995
Ambient temperature Ta (nominal operating conditions)	−15 +55 °C
Relative humidity (nominal operating conditions)	10 95 %, non-condensing
Ambient temperature T _a (limit operating conditions)	–20 +60 °C (Ex: –20 +55 °C)
Storage and transport temperature	−20 +70 °C

Ex version of instrument

CLM 431-G

Intrinsically safe power supply and signal circuit, protection type EEx ib IIC T4			
Max. input voltage Ui	30 V DC		
Max. input current <i>I</i> _i	100 mA		
Max. input power <i>P_i</i>	750 mW		
Max. internal inductance L _i	200 μΗ		
Max. internal capacitance C_i	≈ 0, to PE = 5.3 nF		

Intrinsically safe sensor circuit, protection type EEx ia IIC T4			
Max. output voltage Uo	± 5.4 (10.8) V DC		
Max. output current <i>l</i> o	320 mA		
Max. output power Po	200 mW		
Max. external inductance Lo	100 μΗ		
Max. external capacitance Co	100 nF		

CLM 431-H (Approval acc to dir. 94/9/EC (ATEX 100a) in preparation)

Intrinsically safe power supply and signal circuit, protection type EEx ib IIC T4		
Max. input voltage U _i	30 V DC	
Max. input current I _i	100 mA	
Max. input power P _i	750 mW	
Max. internal inductance L_i	200 μΗ	
Max. internal capacitance C _i	≈ 0, to PE = 5.3 nF	

Intrinsically safe sensor circuit, protection type EEx ia IIC T4	
Max. output voltage Uo	± 6.3 (12.6) V DC
Max. output current Io	130 mA
Max. output power Po	211 mW
Max. external inductance Lo	100 μΗ
Max. external capacitance Co	100 nF

Supplementary documentation

TI CLS 12	order no. 50059349
TI CLS 13	order no. 50059350
TI CLS 15	order no. 50065950
TI CLS 19	order no. 50065951
TI CLS 21	order no. 50059352

MyPro CLD 431 conductive

General specifications	Manufacturer	Endress+Hauser	
	Equipment designation	MyPro CLD 431 conductive	
Physical data	Length with CLS 12	321 mm	
	Process connection	G1 thread	
	Weight	approx. 2 kg	
	Protection type	IP 65	
	Housing material	GD-AISi 10 Mg, plastic-coated	
	Measured value display	liquid crystal display	
Conductivity/ resistance measurement	Measuring cell	CLS 12	
	Conductivity measuring range version CA version CB	0.04 20 μS 0.1 200 μS	
	Resistance measuring range version CA version CB	0.05 25 MΩ ·cm 0.050 10 MΩ ·cm	
	Cell constant	k = 0.01/cm in 0.04 20 μS /cm measuring range k = 0.1 /cm in 0.1 200 μS /cm measuring range	
Other data	er data Same as CLM 431 conductive		
Ex version of instrument	CLD 431-H (Approval acc. to dir. 94/9/EC (ATEX 10	00a) in preparation)	
	Intrinsically safe power supply and signal circuit, protection type EEx ib IIC T4		
	Max. input voltage Ui	30 V	
	Max. input current Ii	100 mA	
	Max. input power P _i	750 mW	
	Max. internal inductance L _i	200 µH	
	Max. internal capacitance C_i	≈ 0, to PE = 5.3 nF	
Supplementary documentation	TI CLS 12	order no. 50059349	



Subject to modifications.



11 Index

Α

D

Damage
Default values
Delivery, items included in
Diagnosis
Diagnostic code 24, 42
Diagnostic parameter 24
Dimensions
Display 13, 22
Display mode 23
Disposal

Е

Electrical connection
Electrical data
Electromagnetic compatibility
Error code
Error current
Error current assignment
Error indication
Error messages
Ex areas 19
Ex instrument version
Examples for connection
Extension cable CYK 71 14, 45

F

1, 26
20
11
27-36
21

G

General information 2	4
General safety notes	5
Ground terminal 1	7
Grounding 1	7

H

R	
Hand-held HART terminal	37-38, 45
HART Communicator	38
HART interface	37
HART operating matrix	39
Hazardous areas	6
Hazards	2

Ļ

Immunity to interference6, 17Inquiries2Installation5, 7-19Instructions for measuring cable connection 16Instrument orientation13Intended use5Interfaces21, 37-41Intrinsically safe power supply19, 48-49Intrinsically safe sensor circuit19
J Junction box VS. 14, 45

ĸ

ĸ	
Key actuation	21
Key functions	21
Keypad 13,	21
Keys	21
-	

L

Locking concept 22

Μ

Main parameters 27	7
Maintenance 44	1
Measuring cable connection 14	1
Measuring cable CYK 71 14	1
Measuring cell 14	4
Measuring range 46-47	7
Measuring system	7
Min. distance 47	7
Monitoring features	5
Mounting 10)
Mounting bracket	1
N	
Nameplate	4
0	
Operating concept 2:	1
Operating concept	1 1
Operating level 1 21 21	י 2
Operating level 2 21, 20	2
	ر

Operating options21Operation5, 20-26



INDEX-E.CHP

Р	
Packaging 2)
Parameter settings 24	ŀ
Physical data	ò
Pipe mounting, DN 30 200 10)
Pipe mounting, DN 60 10)
Polarisation detection	3
Polarisation effects	3
Post mounting 17	,
Power supply	'
Power-up 20)
Product structure 3	3
Profibus interface 41	
Protection type, Ex 48-49)
Q	

Questions .	 												2	
R Repairs Resistance	 				•				•	•	5	,	44 18	
S												E	6	

Safety5-6Safety features6Secondary parameter23Secondary parameter menu23Service35, 44

Symbols 2 T

TTechnical dataTemperature coefficient24-25Temperature compensation25, 46Temperature measurement46Temperature sensor7, 46Terminal block16Transmitter power supply units45Transport243
Transport

U

•	
Uncompensated conductivity	,
Unpacking	
Use 5	,
User info	

W

vv	
Wall mounting	
Write protection	

Europe

Austria

□ Endress+Hauser Ges.m.b.H. Wien Tel. (01) 88056-0, Fax (01) 88056-35

Belarus Belorgsintez Minsk

Tel. (0172) 263166, Fax (0172) 263111

Belgium / Luxembourg Brussels Tel. (02) 2480600, Fax (02) 2480553

Bulgaria INTERTECH-AUTOMATION Tel. (02) 65 28 09, Fax (02) 65 28 09

Croatia ☐ Endress+Hauser GmbH+Co. Zagreb Tel. (01) 660 14 18, Fax (01) 660 14 18

Cyprus I+G Electrical Services Co. Ltd. Nicosia Tel. (02) 48 47 88, Fax (02) 48 46 90

Czech Republic

Endress+Hauser GmbH+Co. Praha Tel. (026) 6784200, Fax (026) 6784179

Denmark Denmark Hauser A/S Søborg Tel. (31) 67 31 22, Fax (31) 67 30 45

Estonia Elvi-Aqua Tartu Tel. (7) 42 27 26, Fax (7) 42 27 27

Finland

□ Endress+Hauser Oy Espoo Tel. (90) 8596155, Fax (90) 8596055

France Endress+Hause Huningue Tel. 89696768, Fax 89694802

Germany □ Endress+Hauser Meßtechnik GmbH+Co. Weil am Rhein Tel. (07621) 975-01, Fax (07621) 975-555

Great Britain □ Endress+Hauser Ltd. Manchester Tel. (0161) 2865000, Fax (0161) 9981841

Greece I & G Building Services Automation S.A. Athens Tel. (01) 924 15 00, Fax (01) 922 17 14

Hungary Mile Ipari-Elektro Budapest Tel. (01) 261 55 35, Fax (01) 261 55 35

Iceland Vatnshreinsun HF Reykjavik Tel. (05) 88 96 16, Fax (05) 88 96 13

Ireland Flomeaco Company Ltd. Kildare Tel. (045) 868615, Fax (045) 868182

Italy Endress+Hauser Italia S.p.A. Cernusco s/N Milano Tel. (02) 92106421, Fax (02) 92107153

Latvia Raita Ltd. Riga Tel. (02) 254795, Fax (02) 7258933

Lithuania Agava Ltd. Kaunas Tel. (07) 2024 10, Fax (07) 2074 14

Netherlands □ Endress+Hauser B.V. Naarden Tel. (035) 6958611, Fax (035) 6958825 Norway Endress+Hauser A/S Tranby

Tel. (032) 851085, Fax (032) 851112

Poland Endress+Hauser Polska Sp. z o.o.
 Warszawy Tel. (022) 7 20 10 90, Fax (0 22) 7 20 10 85

Portugal Tecnisis - Tecnica de Sistemas Industriais Linda-a-Velha Tel. (01) 4172637, Fax (01) 4185278

Romania Romconseng SRL

Bucharest Tel. (01) 4101634, Fax (01) 4101634 Russia Endress+Hauser Moscow Office Moscow

Tel., Fax: see Endress+Hauser GmbH+Co. Instruments International

Slovak Republic Transcom Technik s.r.o.

Bratislava Tel. (7) 521 31 61, Fax (7) 521 31 81 Slovenia Endress+Hauser D.O.O. Liubliana

Tel. (061) 1 59 22 17, Fax (061) 1 59 22 98 Spain Endress+Hauser S.A Endress+Hauser S.A.
 Barcelona
 Tel. (93) 480 33 66, Fax (93) 473 38 39

Sweden Endress+Hauser AB

Sollentuna Tel. (08) 6261600, Fax (08) 6269477 Switzerland □ Endress+Hauser AG Reinach/BL1 Tel. (061) 715 7575, Fax (061) 7111650

Turkey Intek Endüstriyel Ölcü ve Kontrol Sistemleri

Istanbu Tel. (0212) 275 1355, Fax (0212) 266 2775 Ukraine Industria Ukraïna

Tel. (44) 2685213, Fax (44) 2685213

Yugoslavia Meris d.o.o. Beograd Tel. (11) 4442966, Fax (11) 430043

Africa

Egypt Anasia Heliopolis/Cairo Tel. (02) 4179007, Fax (02) 4179008 Morocco Oussama S.A. Casablanca

Tel. (02) 241338, Fax (02) 402657 Nigeria
 J F Technical Invest. Nig. Ltd.

Lagos Tel. (1) 62 23 45 46, Fax (1) 62 23 45 48 South Africa Endress+Hauser Pty. Ltd.

Sandton Tel. (011) 4 44 1386, Fax (011) 4 44 1977

Tunisia Controle, Maintenance et Regulation Tunis Tel. (01) 793077, Fax (01) 788595

America

Argentina □ Endress+Hauser Argentina S.A. Buenos Aires Tel. (01) 5238008, Fax (01) 5220546

Bolivia Tritec S.R.I

Cochabamba Tel. (042) 56993, Fax (042) 50981

Brazil Samson Endress+Hauser Ltda.
 Sao Paulo Tel. (011) 5363455, Fax (011) 5363067

Canada ☐ Endress+Hauser Ltd. Burlington, Ontario Tel. (905) 6 81 92 92, Fax (905) 6 81 94 44

Chile DIN Instrumentos Ltda. Santiago Tel. (02) 2 05 01 00, Fax (02) 2 25 81 39 Colombia Colsein Ltd

Bogota D.C. Tel. (01) 2367659, Fax (01) 6107868 Costa Rica EURO-TEC S.A.

San Jose Tel. 296 15 42, Fax 296 15 42

Ecuador Insetec Cia. Ltda. Quito Tel. (02) 25 12 42, Fax (02) 46 18 33

Guatemala ACISA Automatizacion Y Control Industrial S.A. Ciudad de Guatemala, C.A. Tel. (02) 34 59 85, Fax (02) 32 74 31

Mexico Mexico City Tel. (5) 5 68 96 58, Fax (5) 5 68 41 83

Paraguay Incoel S.R.L. Asuncion Tel. (021) 21 39 89, Fax (021) 265 83

Uruguay Circular S.A. Montevideo Tel. (02) 92 57 85, Fax (02) 92 91 51

USA □ Endress+Hauser Inc. Greenwood, Indiana Tel. (317) 535-7138, Fax (317) 535-1489

Venezuela H. Z. Instrumentos C.A. Caracas Tel. (02) 9798813, Fax (02) 9799608

Asia

China Endress+Hauser Shanghai Instrumentation Co. Ltd. Shanghai Tel. (021) 64646700, Fax (021) 64747860

Endress+Hauser Beijing Office

Beijing Tel. (010) 68344058, Fax: (010) 68344068

Hong Kong Endress+Hauser (H.K.) Ltd. Hong Kong Tel. 25283120, Fax 28654171

India ☐ Endress+Hauser India Branch Office Mumbai Tel. (022) 6045578, Fax (022) 6040211

Indonesia PT Grama Bazita Jakarta Tel. (21) 7 97 50 83, Fax (21) 7 97 50 89

Japan □ Sakura Endress Co., Ltd. Tokyo Tel. (0422) 540611, Fax (0422) 550275

Malaysia Endress+Hauser (M) Sdn. Bhd. Petaling Jaya, Selangor Darul Ehsan Tel. (03) 7 33 48 48, Fax (03) 7 33 88 00

Pakistan Speedy Automation Karachi Tel. (021) 7722953, Fax (021) 7736884

Papua New Guinea SBS Electrical Pty Limited Port Moresby Tel. 53251188, Fax 53259556 Philippines Brenton Industries Inc. Makati Metro Manila Tel. (2) 8430661-5, Fax (2) 8175739

Singapore ☐ Endress+Hauser (S.E.A.) Pte., Ltd. Singapore Tel. 4 68 82 22, Fax 4 66 68 48

South Korea Endress+Hauser (Korea) Co., Ltd. Seoul Tel. (02) 6587200, Fax (02) 6592838

Taiwan Kingjarl Corporation Taipei R.O.C. Tel. (02) 7 18 39 38, Fax (02) 7 13 41 90

Thailand Endress+Hauser Ltd. Bangkok Tel. (2) 9967811-20, Fax (2) 9967810

Vietnam Tan Viet Bao Co. Ltd. Ho Chi Minh City Tel. (08) 8335225, Fax (08) 8335227

Iran Telephone Technical Services Co. Ltd. Tehran Tel. (021) 8746750, Fax(021) 8737295

Israel Tel-Aviv Tel. (03) 6480205, Fax (03) 6471992

Jordan A.P. Parpas Engineering S.A. Amman Tel. (06) 5539283, Fax (06) 5539205

Kingdom of Saudi Arabia Anasia Jeddah Tel. (02) 671 00 14, Fax (02) 672 59 29

Kuwait Kuwait Maritime & Mercantile Co. K.S.C. Safat Tel. 2434752, Fax 244 1486

Lebanon Nabil Ibrahim Jbeil Tel. (3) 25 40 51, Fax (9) 94 40 80

Sultanate of Oman Mustafa & Jawad Science & Industry Co. L.L.C.

Ruwi Tel. 60 20 09, Fax 60 70 66 United Arab Emirates

Descon Trading EST. Dubai Tel. (04) 35 95 22, Fax (04) 35 96 17

Yemen Yemen Company for Ghee and Soap Industry Taiz Tel. (04) 23 06 64, Fax (04) 21 23 38

Australia + New Zealand

Australia GEC Alsthom LTD. Sydney Tel. (02) 96 45 07 77, Fax (02) 97 43 70 35

New Zealand EMC Industrial Instrumentation Auckland Tel. (09) 4449229, Fax (09) 4441145

All other countries

Endress+Hauser GmbH+Co. Instruments International D-Weil am Rhein Germany Tel. (07621) 975-02, Fax (07621) 975345

□ Members of the Endress+Hauser group



Endress+Hauser Unser Maßstab ist die Praxis 777