


Operating Instructions Proline Promass A 300 PROFIBUS PA

Coriolis flowmeter

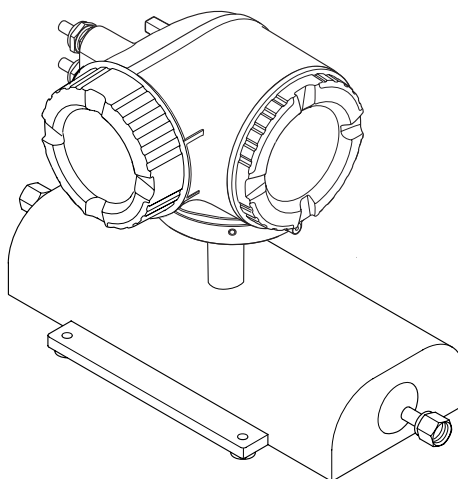

-
- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
 - To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
 - The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

Table of contents

1	Document information	6	6	Installation	22
1.1	Document function	6		6.1	Installation conditions
1.2	Symbols used	6		6.1.1	Mounting position
1.2.1	Safety symbols	6		6.1.2	Requirements from environment and process
1.2.2	Electrical symbols	6		6.1.3	Special mounting instructions
1.2.3	Communication symbols	6		6.2	Mounting the measuring device
1.2.4	Tool symbols	7		6.2.1	Required tools
1.2.5	Symbols for certain types of information	7		6.2.2	Preparing the measuring device
1.2.6	Symbols in graphics	7		6.2.3	Mounting the measuring device
1.3	Documentation	8		6.2.4	Turning the transmitter housing
1.3.1	Standard documentation	8		6.2.5	Turning the display module
1.3.2	Supplementary device-dependent documentation	8		6.3	Post-installation check
1.4	Registered trademarks	9		7	Electrical connection
2	Basic safety instructions	10		7.1	Connection conditions
2.1	Requirements for personnel	10		7.1.1	Required tools
2.2	Designated use	10		7.1.2	Requirements for connecting cable
2.3	Workplace safety	11		7.1.3	Terminal assignment
2.4	Operational safety	11		7.1.4	Device plugs available
2.5	Product safety	11		7.1.5	Pin assignment of device plug
2.6	IT security	12		7.1.6	Preparing the measuring device
2.7	Device-specific IT security	12		7.2	Connecting the measuring device
2.7.1	Protecting access via hardware write protection	12		7.2.1	Connecting the transmitter
2.7.2	Protecting access via a password	12		7.2.2	Connecting remote display and operating module DKX001
2.7.3	Access via fieldbus	13		7.3	Ensure potential equalization
2.7.4	Access via Web server	13		7.3.1	Requirements
3	Product description	14		7.4	Special connection instructions
3.1	Product design	14		7.4.1	Connection examples
4	Incoming acceptance and product identification	15		7.5	Hardware settings
4.1	Incoming acceptance	15		7.5.1	Setting the device address
4.2	Product identification	16		7.6	Ensuring the degree of protection
4.2.1	Transmitter nameplate	17		7.7	Post-connection check
4.2.2	Sensor nameplate	18		8	Operation options
4.2.3	Symbols on measuring device	19		8.1	Overview of operation options
5	Storage and transport	20		8.2	Structure and function of the operating menu
5.1	Storage conditions	20		8.2.1	Structure of the operating menu
5.2	Transporting the product	20		8.2.2	Operating philosophy
5.2.1	Measuring devices without lifting lugs	20		8.3	Access to the operating menu via the local display
5.2.2	Measuring devices with lifting lugs	21		8.3.1	Operational display
5.2.3	Transporting with a fork lift	21		8.3.2	Navigation view
5.3	Packaging disposal	21		8.3.3	Editing view
				8.3.4	Operating elements
				8.3.5	Opening the context menu
				8.3.6	Navigating and selecting from list
				8.3.7	Calling the parameter directly
				8.3.8	Calling up help text
				8.3.9	Changing the parameters
				8.3.10	User roles and related access authorization

8.3.11	Disabling write protection via access code	57	10.6.8	Configuring the status input	92
8.3.12	Enabling and disabling the keypad lock	57	10.6.9	Configuring the current output	92
8.4	Access to the operating menu via the Web browser	58	10.6.10	Configuring the pulse/frequency/switch output	95
8.4.1	Function range	58	10.6.11	Configuring the relay output	104
8.4.2	Prerequisites	58	10.6.12	Configuring the double pulse output	106
8.4.3	Establishing a connection	60	10.6.13	Configuring the local display	107
8.4.4	Logging on	61	10.6.14	Configuring the low flow cut off	110
8.4.5	User interface	61	10.6.15	Configuring the partial filled pipe detection	111
8.4.6	Disabling the Web server	62	10.7	Advanced settings	112
8.4.7	Logging out	63	10.7.1	Calculated values	113
8.5	Access to the operating menu via the operating tool	63	10.7.2	Carrying out a sensor adjustment ...	114
8.5.1	Connecting the operating tool	63	10.7.3	Configuring the totalizer	115
8.5.2	FieldCare	65	10.7.4	Carrying out additional display configurations	117
8.5.3	DeviceCare	66	10.7.5	WLAN configuration	120
8.5.4	SIMATIC PDM	67	10.7.6	Configuration management	121
9	System integration	68	10.7.7	Using parameters for device administration	122
9.1	Overview of device description files	68	10.8	Simulation	124
9.1.1	Current version data for the device ...	68	10.9	Protecting settings from unauthorized access	127
9.1.2	Operating tools	68	10.9.1	Write protection via access code ...	127
9.2	Device master file (GSD)	68	10.9.2	Write protection via write protection switch	128
9.2.1	Manufacturer-specific GSD	69	11	Operation	130
9.2.2	Profile GSD	69	11.1	Reading the device locking status	130
9.3	Compatibility with earlier model	70	11.2	Adjusting the operating language	130
9.3.1	Automatic identification (factory setting)	70	11.3	Configuring the display	130
9.3.2	Manual setting	70	11.4	Reading measured values	130
9.3.3	Replacing the measuring devices without changing the GSD file or restarting the controller	70	11.4.1	"Measured variables" submenu	131
9.4	Using the GSD modules of the previous model	71	11.4.2	Totalizer	132
9.4.1	Using the CONTROL_BLOCK module in the previous model	71	11.4.3	"Input values" submenu	133
9.5	Cyclic data transmission	73	11.4.4	Output values	134
9.5.1	Block model	73	11.5	Adapting the measuring device to the process conditions	137
9.5.2	Description of the modules	73	11.6	Performing a totalizer reset	137
10	Commissioning	80	11.7	Showing data logging	138
10.1	Function check	80	12	Diagnostics and troubleshooting ..	141
10.2	Switching on the measuring device	80	12.1	General troubleshooting	141
10.3	Connecting via FieldCare	80	12.2	Diagnostic information via light emitting diodes	144
10.4	Configuring the device address via software ..	80	12.2.1	Transmitter	144
10.4.1	PROFIBUS network	80	12.3	Diagnostic information on local display	145
10.5	Setting the operating language	80	12.3.1	Diagnostic message	145
10.6	Configuring the measuring device	81	12.3.2	Calling up remedial measures	147
10.6.1	Defining the tag name	82	12.4	Diagnostic information in the Web browser .	147
10.6.2	Setting the system units	83	12.4.1	Diagnostic options	147
10.6.3	Selecting and setting the medium ...	86	12.4.2	Calling up remedy information	148
10.6.4	Configuring communication interface	87	12.5	Diagnostic information in DeviceCare or FieldCare	148
10.6.5	Configuring the analog inputs	89	12.5.1	Diagnostic options	148
10.6.6	Displaying the I/O configuration	90	12.5.2	Calling up remedy information	149
10.6.7	Configuring the current input	91	12.6	Adapting the diagnostic information	150
			12.6.1	Adapting the diagnostic behavior ...	150

12.7	Overview of diagnostic information	152	16.14	Accessories	248
12.7.1	Diagnostic of sensor	153	16.15	Supplementary documentation	248
12.7.2	Diagnostic of electronic	161			
12.7.3	Diagnostic of configuration	183	Index	250	
12.7.4	Diagnostic of process	196			
12.8	Pending diagnostic events	209			
12.9	Diagnostic list	210			
12.10	Event logbook	211			
12.10.1	Event history	211			
12.10.2	Filtering the event logbook	212			
12.10.3	Overview of information events	212			
12.11	Resetting the measuring device	213			
12.11.1	Function scope of the "Device reset" parameter	214			
12.12	Device information	214			
12.13	Firmware history	216			
13	Maintenance	217			
13.1	Maintenance tasks	217			
13.1.1	Exterior cleaning	217			
13.1.2	Interior cleaning	217			
13.2	Measuring and test equipment	217			
13.3	Endress+Hauser services	217			
14	Repairs	218			
14.1	General notes	218			
14.1.1	Repair and conversion concept	218			
14.1.2	Notes for repair and conversion	218			
14.2	Spare parts	218			
14.3	Endress+Hauser services	218			
14.4	Return	218			
14.5	Disposal	219			
14.5.1	Removing the measuring device	219			
14.5.2	Disposing of the measuring device ..	219			
15	Accessories	220			
15.1	Device-specific accessories	220			
15.1.1	For the transmitter	220			
15.1.2	For the sensor	220			
15.2	Service-specific accessories	221			
15.3	System components	221			
16	Technical data	222			
16.1	Application	222			
16.2	Function and system design	222			
16.3	Input	223			
16.4	Output	225			
16.5	Power supply	230			
16.6	Performance characteristics	231			
16.7	Installation	235			
16.8	Environment	235			
16.9	Process	236			
16.10	Mechanical construction	238			
16.11	Operability	241			
16.12	Certificates and approvals	245			
16.13	Application packages	247			

1 Document information

1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols used

1.2.1 Safety symbols

Symbol	Meaning
	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols

Symbol	Meaning
	Direct current
	Alternating current
	Direct current and alternating current
	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.
	Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.

1.2.3 Communication symbols

Symbol	Meaning
	Wireless Local Area Network (WLAN) Communication via a wireless, local network.
	Bluetooth Wireless data transmission between devices over a short distance.

Symbol	Meaning
	LED Light emitting diode is off.
	LED Light emitting diode is on.
	LED Light emitting diode is flashing.


1.2.4 Tool symbols

Symbol	Meaning
	Flat blade screwdriver
	Allen key
	Open-ended wrench

1.2.5 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Notice or individual step to be observed
	Series of steps
	Result of a step
	Help in the event of a problem
	Visual inspection

 1.2.6 Symbols in graphics

Symbol	Meaning
	Item numbers
	Series of steps
	Views
	Sections

Symbol	Meaning
	Hazardous area
	Safe area (non-hazardous area)
	Flow direction

1.3 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

 For a detailed list of the individual documents along with the documentation code
→  248

1.3.1 Standard documentation

Document type	Purpose and content of the document
Technical Information	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Sensor Brief Operating Instructions	Guides you quickly to the 1st measured value - Part 1 The Sensor Brief Operating Instructions are aimed at specialists with responsibility for installing the measuring device. ■ Incoming acceptance and product identification ■ Storage and transport ■ Installation
Transmitter Brief Operating Instructions	Guides you quickly to the 1st measured value - Part 2 The Transmitter Brief Operating Instructions are aimed at specialists with responsibility for commissioning, configuring and parameterizing the measuring device (until the first measured value). ■ Product description ■ Installation ■ Electrical connection ■ Operation options ■ System integration ■ Commissioning ■ Diagnostic information
Description of Device Parameters	Reference for your parameters The document provides a detailed explanation of each individual parameter in the Expert operating menu. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

PROFIBUS®

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA

SWAGELOK®

Registered trademark of Swagelok & Co., Solon, USA

Applicator®, FieldCare®, DeviceCare®, Field Xpert™, HistoROM®, Heartbeat Technology™

Registered or registration-pending trademarks of the Endress+Hauser Group

2 Basic safety instructions

2.1 Requirements for personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ▶ Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Designated use

Application and media

The measuring device described in these Instructions is intended only for flow measurement of liquids and gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential: "Documentation" section. →  8.
- ▶ Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

WARNING

Danger of breakage due to corrosive or abrasive fluids!

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Keep within the specified pressure and temperature range.

NOTICE**Verification for borderline cases:**

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks**⚠ WARNING**

The electronics and the medium may cause the surfaces to heat up. This presents a burn hazard!

- ▶ For elevated fluid temperatures, ensure protection against contact to prevent burns.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

- ▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

- ▶ Due to the increased risk of electric shock, gloves must be worn.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

2.6 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

2.7 Device-specific IT security

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. An overview of the most important functions is provided in the following section.

2.7.1 Protecting access via hardware write protection

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the motherboard). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered →  128.

2.7.2 Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

- **User-specific access code**
Protect write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare). Is equivalent to hardware write protection in terms of functionality.
- **WLAN passphrase**
The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.

User-specific access code

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code (→  127).

When the device is delivered, the device does not have an access code and is equivalent to 0000 (open).

WLAN passphrase

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface (→  64) which can be ordered as an option is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter →  120.

General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning.
- Follow the general rules for generating a secure password when defining and managing the access code or network key.
- The user is responsible for the management and careful handling of the access code and network key.

2.7.3 Access via fieldbus

When communicating via fieldbus, access to the device parameters can be restricted to "Read only" access. The option can be changed in the **Fieldbus writing access** parameter.

This does not affect cyclic measured value transmission to the higher-order system, which is always guaranteed.



Additional information: "Description of Device Parameters" document pertaining to the device → 248.

2.7.4 Access via Web server

The device can be operated and configured via a Web browser with the integrated Web server (→ 58). The connection is via the service interface (CDI-RJ45) or the WLAN interface.

The Web server is enabled when the device is delivered. The Web server can be disabled if necessary (e.g. after commissioning) via the **Web server functionality** parameter.

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.



Additional information: "Description of Device Parameters" document pertaining to the device → 248.


3 Product description

The device consists of a transmitter and a sensor.

The device is available as a compact version:

The transmitter and sensor form a mechanical unit.

3.1 Product design

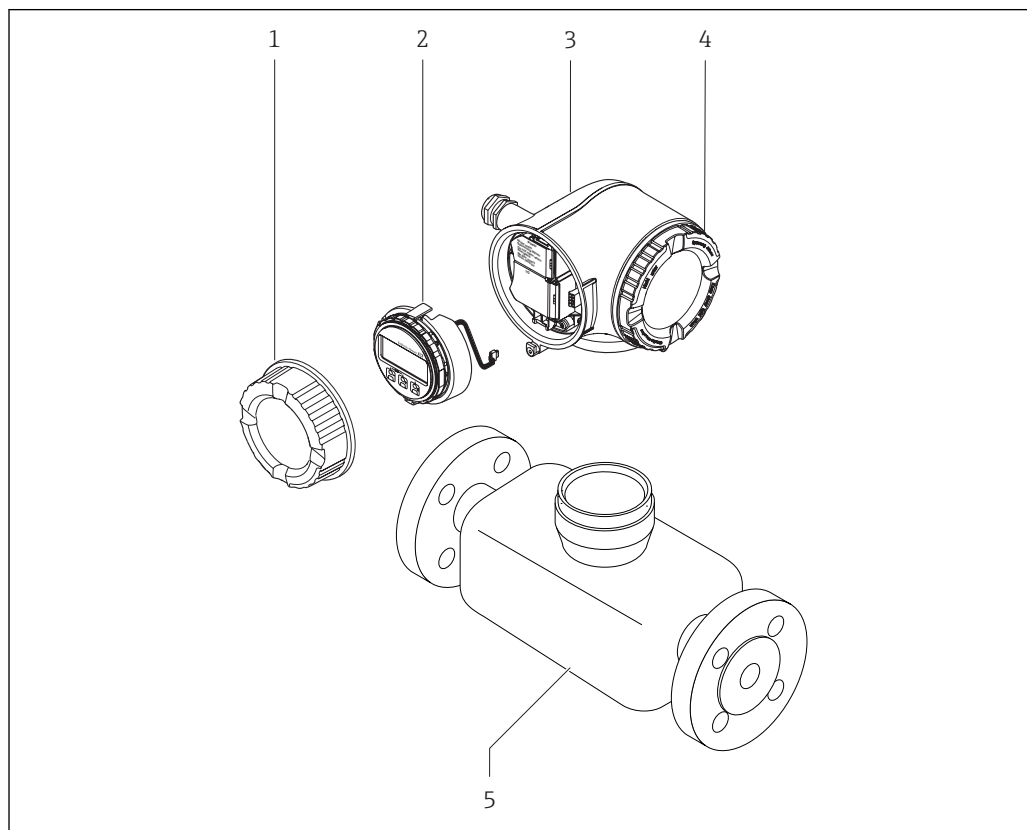



A0029586

 1 Important components of a measuring device

- 1 Connection compartment cover
- 2 Display module
- 3 Transmitter housing
- 4 Electronics compartment cover
- 5 Sensor


4 Incoming acceptance and product identification

 4.1 Incoming acceptance

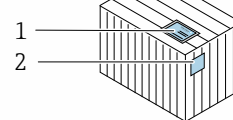



Are the order codes on the delivery note (1) and the product sticker (2) identical?

A0029314

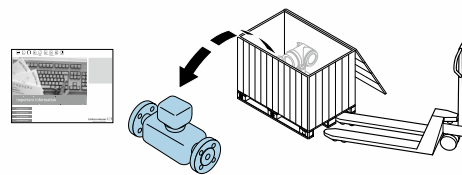


A0029315

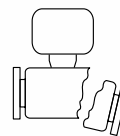 

Are the goods undamaged?

A0029316

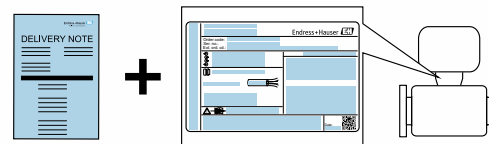

Do the nameplate data match the ordering information on the delivery note?

A0029317



Is the CD-ROM with the Technical Documentation (depends on device version) and documents present?

A0029318



- If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
- Depending on the device version, the CD-ROM might not be part of the delivery! The Technical Documentation is available via the Internet or via the *Endress+Hauser Operations App*, see the "Product identification" section → 16.

4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer*
(www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" →  8 and "Supplementary device-dependent documentation" →  8
- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

4.2.1 Transmitter nameplate

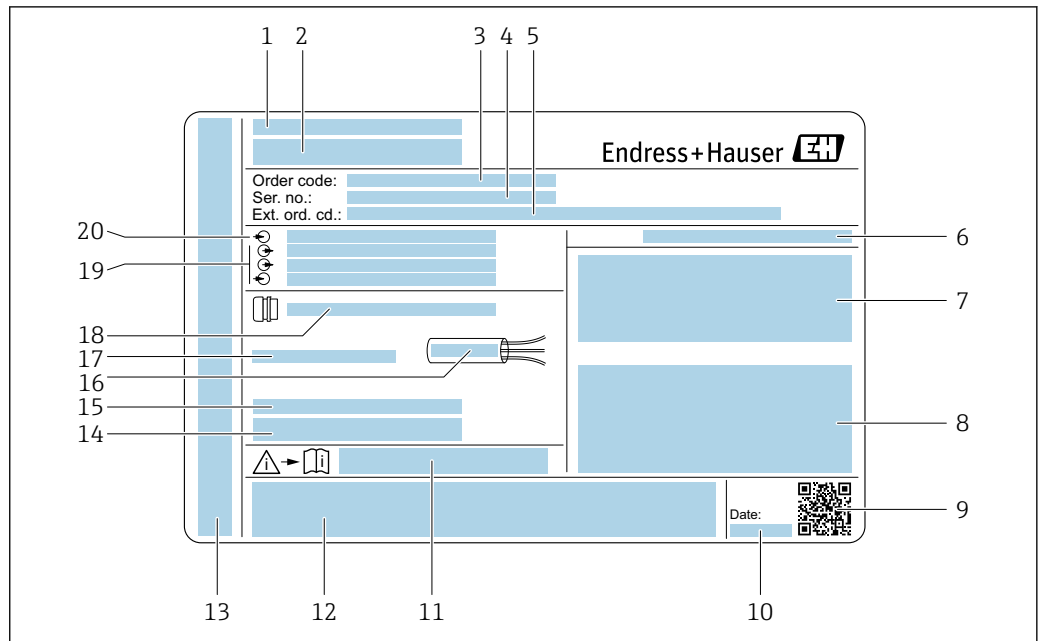


A0029192

 2 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Degree of protection
- 7 Space for approvals: use in hazardous areas
- 8 Electrical connection data: available inputs and outputs
- 9 2-D matrix code
- 10 Manufacturing date: year-month
- 11 Document number of safety-related supplementary documentation
- 12 Space for approvals and certificates: e.g. CE mark, C-Tick
- 13 Space for degree of protection of connection and electronics compartment when used in hazardous areas
- 14 Firmware version (FW) and device revision (Dev.Rev.) from the factory
- 15 Space for additional information in the case of special products
- 16 Permitted temperature range for cable
- 17 Permitted ambient temperature (T_a)
- 18 Information on cable gland
- 19 Available inputs and outputs, supply voltage
- 20 Electrical connection data: supply voltage

4.2.2 Sensor nameplate

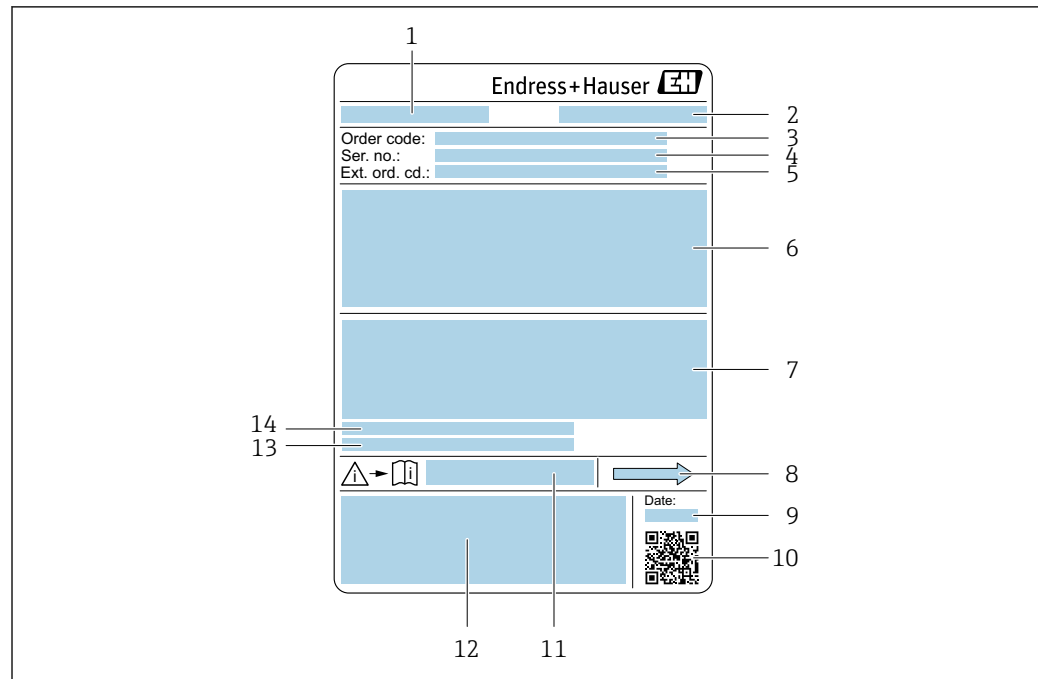

A0029199

3 Example of a sensor nameplate

- 1 Name of the sensor
- 2 Manufacturing location
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Nominal diameter of the sensor; flange nominal diameter/nominal pressure; sensor test pressure; medium temperature range; material of measuring tube and manifold; sensor-specific information: e.g. pressure range of secondary containment, wide-range density specification (special density calibration)
- 7 Approval information for explosion protection, Pressure Equipment Directive and degree of protection
- 8 Flow direction
- 9 Manufacturing date: year-month
- 10 2-D matrix code
- 11 Document number of safety-related supplementary documentation
- 12 CE mark, C-Tick
- 13 Surface roughness
- 14 Permitted ambient temperature (T_a)



Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approval-related specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

4.2.3 Symbols on measuring device

Symbol	Meaning
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.

5 Storage and transport

5.1 Storage conditions


Observe the following notes for storage:

- Store in the original packaging to ensure protection from shock.
- Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- Protect from direct sunlight to avoid unacceptably high surface temperatures.
- Store in a dry and dust-free place.
- Do not store outdoors.

Storage temperature: -50 to $+80$ °C (-58 to $+176$ °F),

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

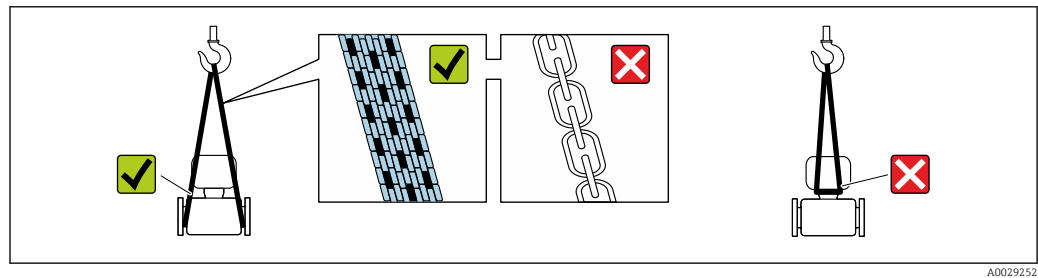

A0029252

- i** Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

⚠ WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ▶ Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

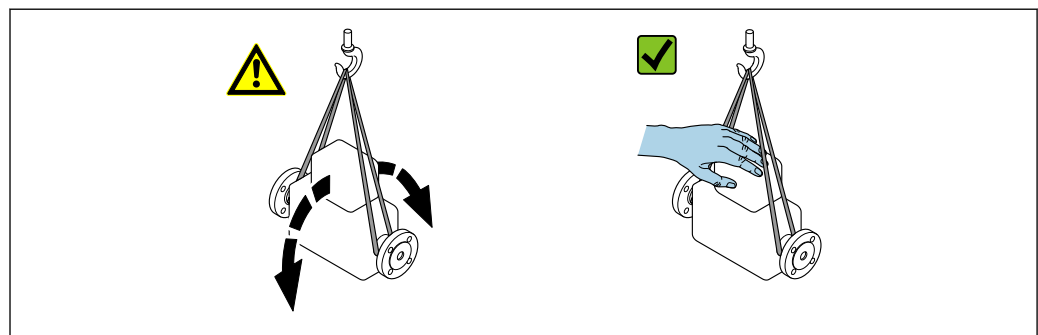

A0029214

5.2.2 Measuring devices with lifting lugs

CAUTION

Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ▶ The device must always be secured at two lifting lugs at least.

5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:

- Measuring device secondary packaging: polymer stretch film that conforms to EC Directive 2002/95/EC (RoHS).
- Packaging:
 - Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
 - or
 - Carton in accordance with European Packaging Directive 94/62EC; recyclability is confirmed by the affixed RESY symbol.
- Seaworthy packaging (optional): Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
- Carrying and mounting hardware:
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Dunnage: Paper cushion


6 Installation

6.1 Installation conditions

No special measures such as supports are necessary. External forces are absorbed by the construction of the device.

6.1.1 Mounting position

Mounting location

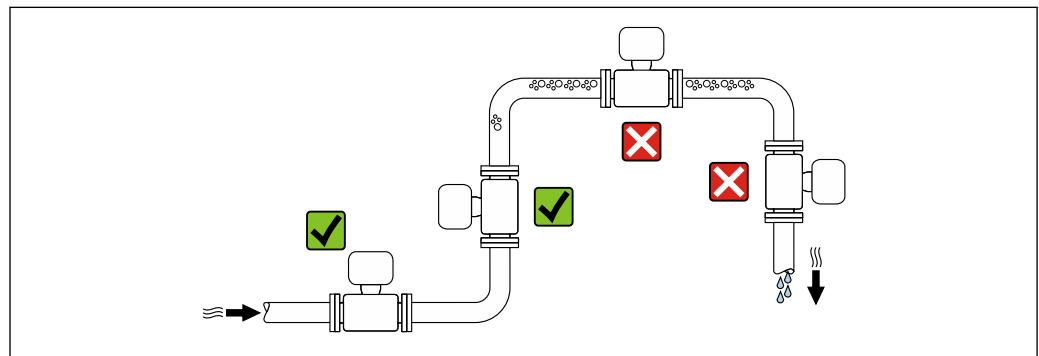


A0028772

To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

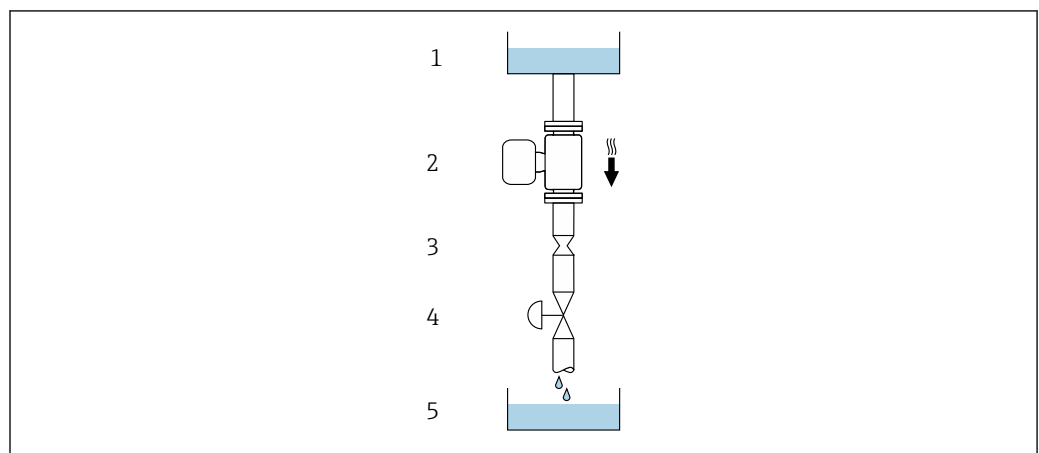

A0028773




 4 Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Batching tank

DN		Ø orifice plate, pipe restriction	
[mm]	[in]	[mm]	[in]
1	$\frac{1}{24}$	0.8	0.03
2	$\frac{1}{12}$	1.5	0.06
4	$\frac{1}{6}$	3.0	0.12

Orientation

  
The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

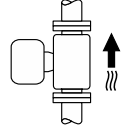Orientation			Recommendation
A	Vertical orientation	 A0015591	✓✓
B	Horizontal orientation, transmitter at top	 A0015589	✓✓ ¹⁾ Exceptions:
C	Horizontal orientation, transmitter at bottom	 A0015590	✓✓ ²⁾ Exceptions:
D	Horizontal orientation, transmitter at side	 A0015592	✗

- 1) Applications with low process temperatures may decrease the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 2) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

Inlet and outlet runs

No special precautions need to be taken for fittings which create turbulence, such as valves, elbows or T-pieces, as long as no cavitation occurs → 24.

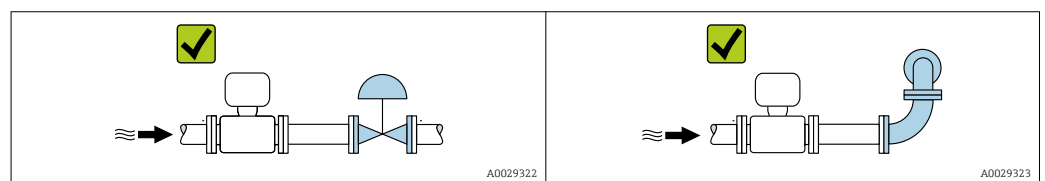

Installation dimensions

 For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

6.1.2 Requirements from environment and process

Ambient temperature range

Measuring device	Non-Ex	-40 to +60 °C (-40 to +140 °F)
	Ex ec, NI version	-40 to +60 °C (-40 to +140 °F)

	Ex ia, IS version	■ -40 to +60 °C (-40 to +140 °F) ■ Order code for "Test, certificate", option JP ■ -50 to +60 °C (-58 to +140 °F)
Readability of the local display		-20 to +60 °C (-4 to +140 °F) The readability of the display may be impaired at temperatures outside the temperature range.

- If operating outdoors:
Avoid direct sunlight, particularly in warm climatic regions.

 You can order a weather protection cover from Endress+Hauser : →  220

System pressure


It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas.

Cavitation is caused if the pressure drops below the vapor pressure:

- In liquids that have a low boiling point (e.g. hydrocarbons, solvents, liquefied gases)
- In suction lines
- Ensure the system pressure is sufficiently high to prevent cavitation and outgassing.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

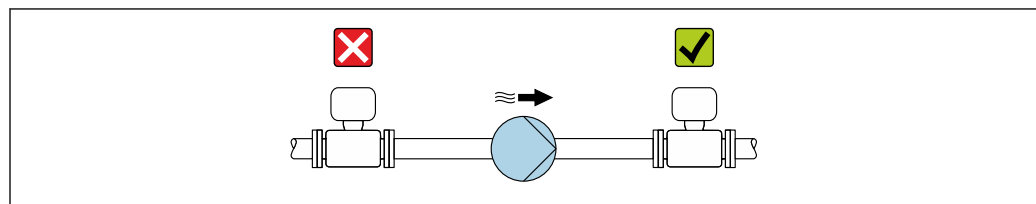

A0028777

Thermal insulation

In the case of some fluids, it is important that the heat radiated from the sensor to the transmitter is kept to a minimum. A wide range of materials can be used for the required insulation.

NOTICE

Electronics overheating on account of thermal insulation!

- Observe maximum permitted insulation height of the transmitter neck so that the transmitter head is completely free.

NOTICE

Danger of overheating with insulation


- Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F)

NOTICE

The insulation can also be thicker than the maximum recommended insulation thickness.

Prerequisite:


- Ensure that convection takes place on a sufficiently large scale at the transmitter neck.
- Ensure that a sufficiently large area of the housing support remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.

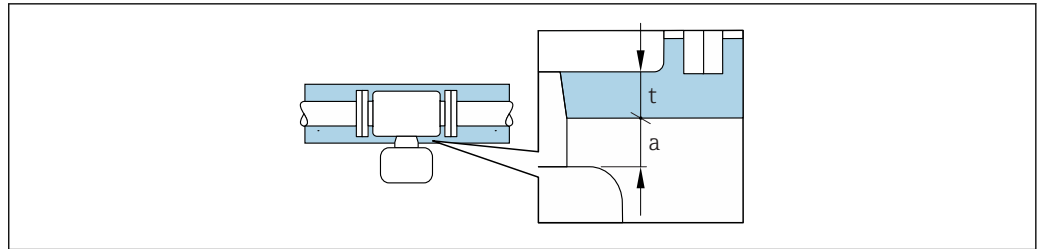

A0028853

a Minimum distance to insulation
t maximum Insulation thickness

The minimum distance *a* between the transmitter and the insulation is 10 mm (0.39 in). This is to ensure that the transmitter remains completely exposed.

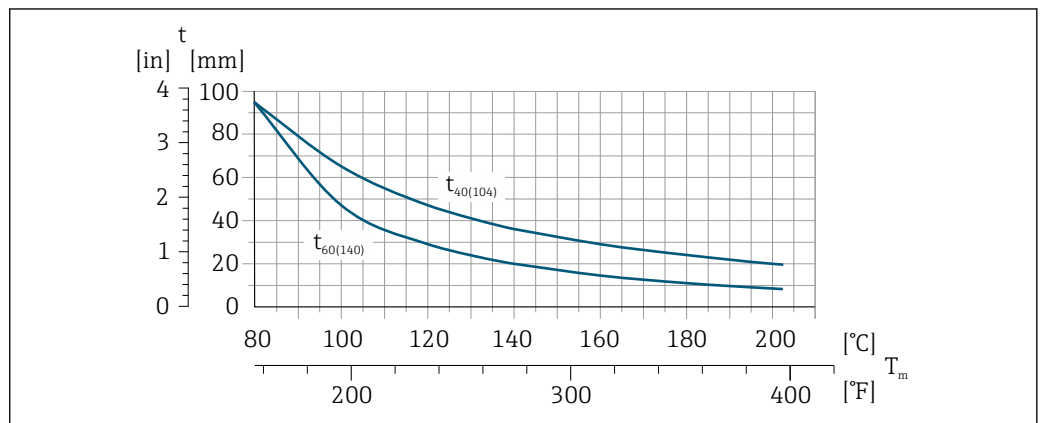

A0029921

t	Insulation thickness
T_m	Medium temperature
$t_{40(104)}$	Maximum recommended insulation thickness at an ambient temperature of $T_a = 40\text{ °C}$ (104 °F)
$t_{60(140)}$	Maximum recommended insulation thickness at an ambient temperature of $T_a = 60\text{ °C}$ (140 °F)

Heating

NOTICE

Electronics can overheat due to elevated ambient temperature!

- Observe maximum permitted ambient temperature for the transmitter .
- Depending on the fluid temperature, take the device orientation requirements into account .

NOTICE

Danger of overheating when heating

- Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F).
- Ensure that convection takes place on a sufficiently large scale at the transmitter neck.
- Ensure that a sufficiently large area of the housing support remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.

Heating options

If a fluid requires that no heat loss should occur at the sensor, users can avail of the following heating options:

- Electrical heating, e.g. with electric band heaters
- Via pipes carrying hot water or steam
- Via heating jackets

Using an electrical trace heating system

If heating is regulated via phase angle control or pulse packages, magnetic fields can affect the measured values (= for values that are greater than the values permitted by the EN standard (sine 30 A/m)).

For this reason, the sensor must be magnetically shielded: the housing can be shielded with tin plates or electric sheets without a privileged direction (e.g. V330-35A).

The sheet must have the following properties:

- Relative magnetic permeability $\mu_r \geq 300$
- Plate thickness $d \geq 0.35 \text{ mm}$ ($d \geq 0.014 \text{ in}$)

Vibrations

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

6.1.3 Special mounting instructions

Rupture disk

Make sure that the function and operation of the rupture disk is not impeded through the installation of the device. The position of the rupture disk is indicated on a sticker beside it.

The transportation guard must be removed.


Information that is relevant to the process: →  237.



For information on the dimensions: see the "Mechanical construction" section of the "Technical Information" document

The existing connecting nozzles are not intended for the purpose of rinsing or pressure monitoring, but instead serve as the mounting location for the rupture disk.

In the event of a failure of the rupture disk, a discharge device can be screwed onto the internal thread of the rupture disk in order to drain off any escaping medium.

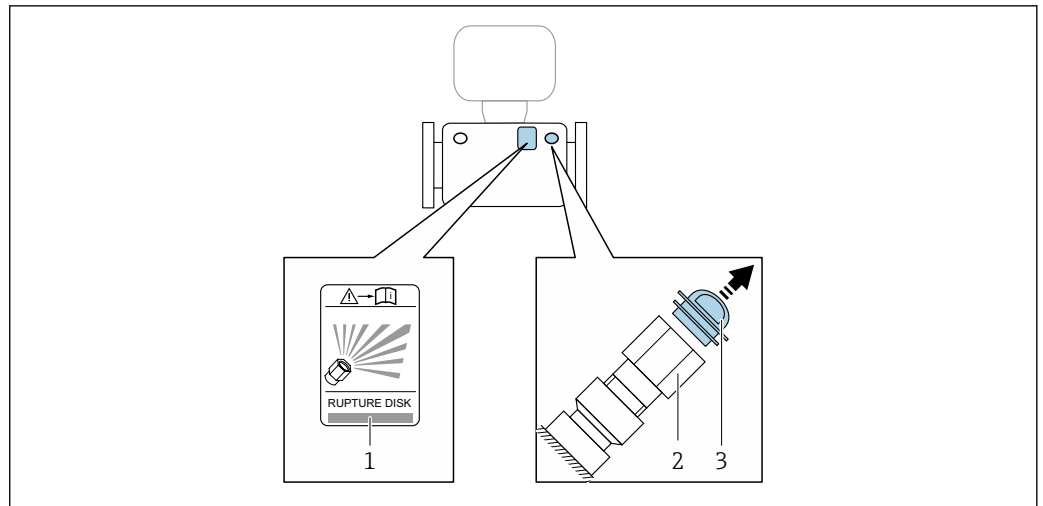

A0030346

- 1 Rupture disk label
- 2 Rupture disk with 1/2" NPT internal thread with 1" width across flat
- 3 Transport protection

⚠ WARNING

Limited functional reliability of the rupture disk.

Danger to persons from escaping fluids!

- ▶ Do not remove the rupture disk.
- ▶ When using a rupture disk, do not use a heating jacket.
- ▶ Make sure that the function and operation of the rupture disk is not impeded through the installation of the device.
- ▶ Take precautions to prevent damage and danger to persons if the rupture disk is actuated.
- ▶ Observe information on the rupture disk sticker.

Wall mounting

⚠ WARNING

Incorrect sensor mounting


Risk of injury if measuring tube breaks

- ▶ The sensor should never be installed in a pipe in a way that it is freely suspended
- ▶ Using the base plate, mount the sensor directly on the floor, wall or ceiling.
- ▶ Support the sensor on a securely mounted support base (e.g. angle bracket).

The following mounting versions are recommended for the installation.

Vertical


- Mounted directly on a wall using the base plate, or
- Device supported on an angle bracket mounted on the wall

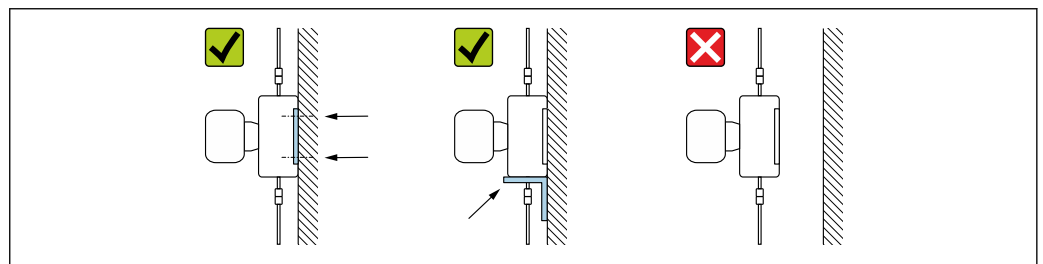

A0030286

Horizontal


Device standing on a solid support base

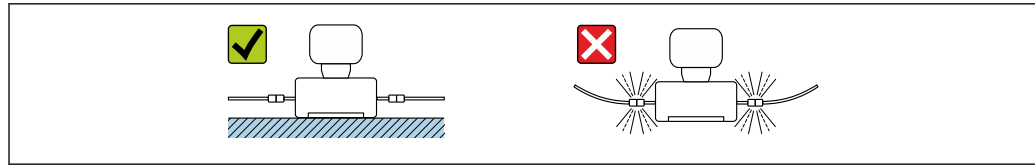

A0030287

Post retainer

The post retainer mounting kit is used to secure the device to a pipe or post (order code for "Accessories", option PR).

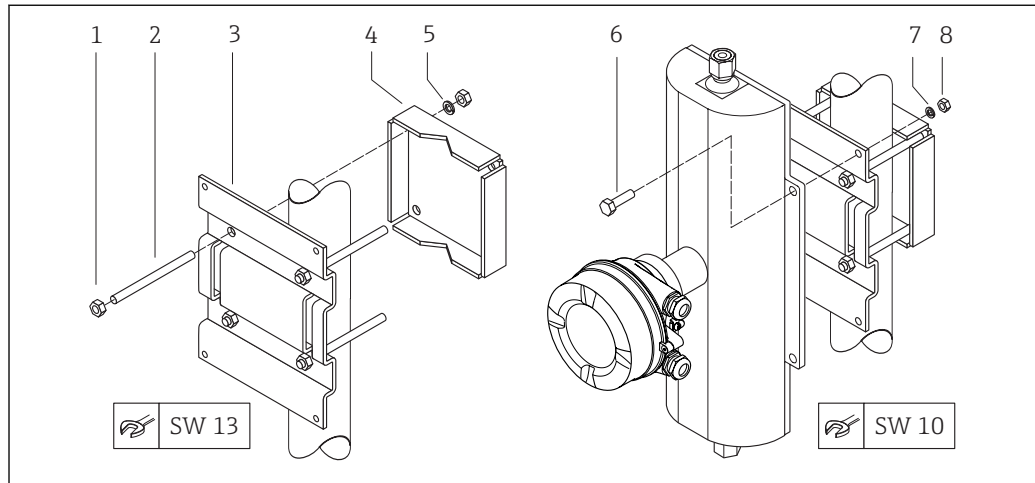

A0019746

5 Post retainer mounting kit


- 1 8 x hexagonal nut M8 × 0.8
- 2 4 x threaded bolt M8 × 150
- 3 1 x post retaining plate
- 4 1 x post securing plate
- 5 4 x spring washer for M8
- 6 4 x hexagon bolt M6 × 20
- 7 4 x spring washer for M6
- 8 4 x hexagonal nut M6 × 0.8

Zero point adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions → 231. Therefore, a zero point adjustment in the field is generally not required.

Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

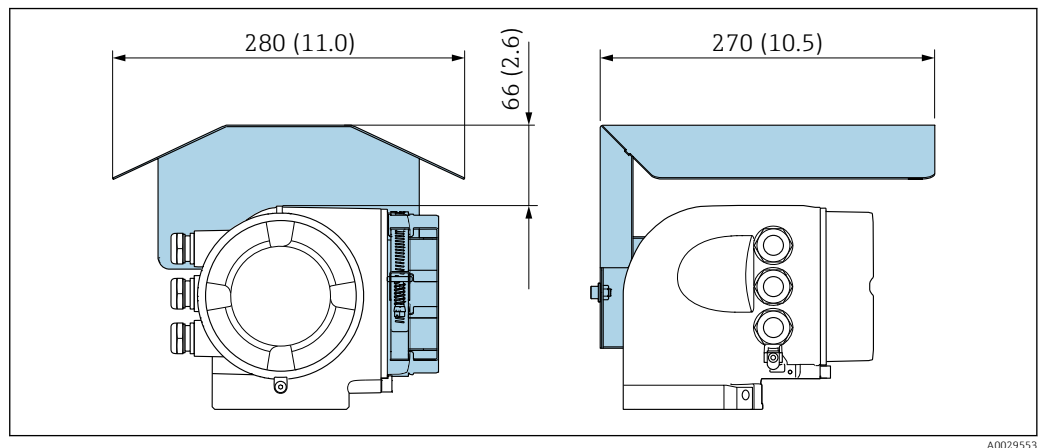Protective cover

A0029553

6.2 Mounting the measuring device**6.2.1 Required tools****For sensor**

For flanges and other process connections: Corresponding mounting tools


6.2.2 Preparing the measuring device

1. Remove all remaining transport packaging.
2. Remove any protective covers or protective caps present from the sensor.
3. Remove stick-on label on the electronics compartment cover.

6.2.3 Mounting the measuring device**⚠ WARNING****Danger due to improper process sealing!**

- ▶ Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ▶ Ensure that the gaskets are clean and undamaged.
- ▶ Install the gaskets correctly.


1. Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the fluid.
2. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

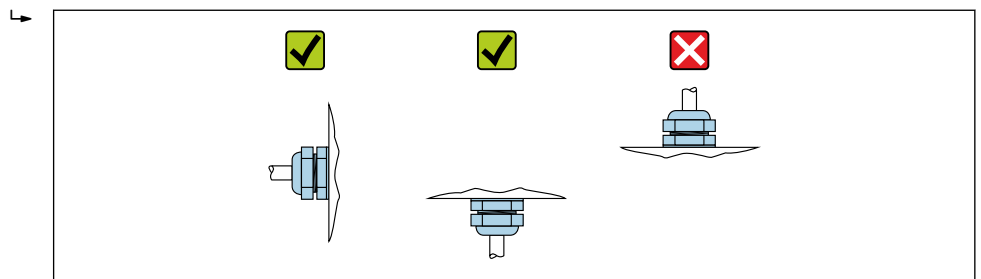

A0029263

6.2.4 Turning the transmitter housing

To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

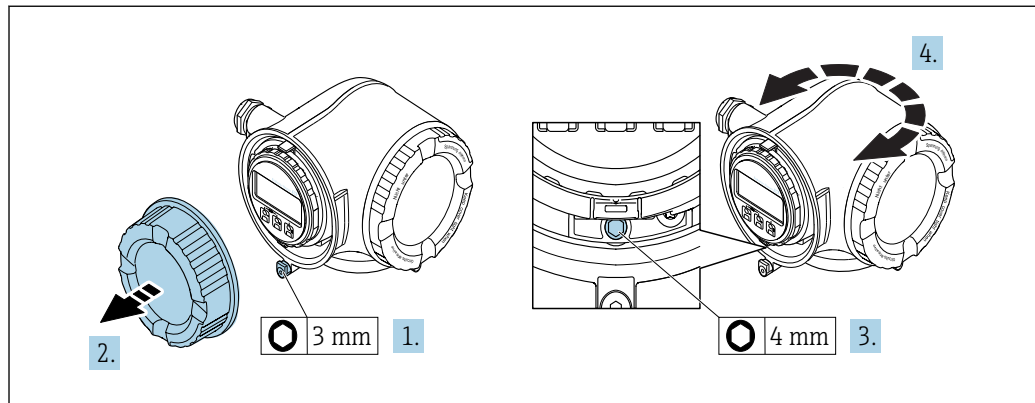


A0029993

1. Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Release the fixing screw.
4. Turn the housing to the desired position.
5. Firmly tighten the securing screw.
6. Screw on the connection compartment cover
7. Fit the securing clamp of the connection compartment cover.

6.2.5 Turning the display module

The display module can be turned to optimize display readability and operability.

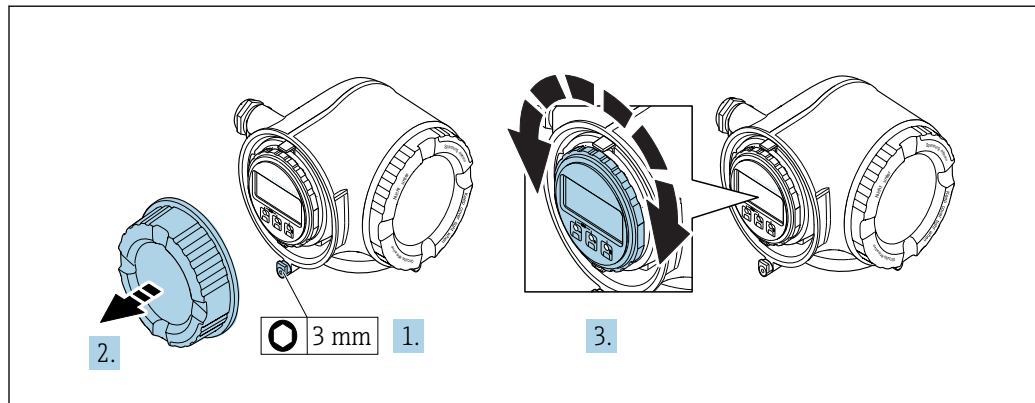

A0030035

1. Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Turn the display module to the desired position: max. $8 \times 45^\circ$ in every direction.
4. Screw on the connection compartment cover.
5. Fit the securing clamp of the connection compartment cover.

6.3 Post-installation check

Is the device undamaged (visual inspection)?	☐
Does the measuring device conform to the measuring point specifications? For example: ■ Process temperature → 236 ■ Process pressure (refer to the chapter on "Pressure-temperature ratings" of the "Technical Information" document) ■ Ambient temperature ■ Measuring range	☐
Has the correct orientation for the sensor been selected ? ■ According to sensor type ■ According to medium temperature ■ According to medium properties (outgassing, with entrained solids)	☐
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping → 23?	☐
Are the measuring point identification and labeling correct (visual inspection)?	☐
Is the device adequately protected from precipitation and direct sunlight?	☐
Are the securing screw and securing clamp tightened securely?	☐

7 Electrical connection

NOTICE

The measuring device does not have an internal circuit breaker.

- ▶ For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.
- ▶ Although the measuring device is equipped with a fuse, additional overcurrent protection (maximum 10 A) should be integrated into the system installation.

7.1 Connection conditions

7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: Crimper for wire end ferrule
- For removing cables from terminal: Flat blade screwdriver ≤ 3 mm (0.12 in)

7.1.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

Electrical safety

In accordance with applicable federal/national regulations.

Protective ground cable

Cable: 2.1 mm² (14 AWG)

The grounding impedance must be less than 1 Ω .

Permitted temperature range

Minimum requirement: cable temperature range $\geq$ ambient temperature +20 K

Power supply cable

Standard installation cable is sufficient.

Signal cable

PROFIBUS PA

Twisted, shielded two-wire cable. Cable type A is recommended .



For further information on planning and installing PROFIBUS PA networks see:

- Operating Instructions "PROFIBUS DP/PA: Guidelines for planning and commissioning" (BA00034S)
- PNO Directive 2.092 "PROFIBUS PA User and Installation Guideline"
- IEC 61158-2 (MBP)

Current output 0/4 to 20 mA

Standard installation cable is sufficient.

Pulse/frequency/switch output

Standard installation cable is sufficient.

Relay output

Standard installation cable is sufficient.

Current input 0/4 to 20 mA

Standard installation cable is sufficient.

Status input

Standard installation cable is sufficient.

Cable diameter

- Cable glands supplied:
M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Spring terminals:
Conductor cross-section 0.2 to 2.5 mm² (24 to 12 AWG)

Connecting cable for transmitter - remote display and operating module DKX001*Standard cable*

A standard cable can be used as the connecting cable.

Standard cable	4 cores (2 pairs); pair-stranded with common shield
Shielding	Tin-plated copper-braid, optical cover ≥ 85 %
Capacitance: core/shield	Maximum 1 000 nF for Zone 1, Class I, Division 1
L/R	Maximum 24 µH/Ω for Zone 1, Class I, Division 1
Cable length	Maximum 300 m (1 000 ft), see the following table

Cross-section	Cable length for use in non-hazardous area, Ex Zone 2, Class I, Division 2 Ex Zone 1, Class I, Division 1
0.34 mm ² (22 AWG)	80 m (270 ft)
0.50 mm ² (20 AWG)	120 m (400 ft)
0.75 mm ² (18 AWG)	180 m (600 ft)
1.00 mm ² (17 AWG)	240 m (800 ft)
1.50 mm ² (15 AWG)	300 m (1 000 ft)

Optionally available connecting cable

Standard cable	2 × 2 × 0.34 mm ² (22 AWG) PVC cable with common shield (2 pairs, pair-stranded)
Flame resistance	According to DIN EN 60332-1-2
Oil-resistance	According to DIN EN 60811-2-1
Shielding	Tin-plated copper-braid, optical cover ≥ 85 %
Capacitance: core/shield	≤ 200 pF/m
L/R	≤ 24 µH/Ω
Available cable length	10 m (35 ft)
Operating temperature	When mounted in a fixed position: -50 to +105 °C (-58 to +221 °F); when cable can move freely: -25 to +105 °C (-13 to +221 °F)

7.1.3 Terminal assignment

Transmitter: supply voltage, input/outputs

The terminal assignment of the inputs and outputs depends on the individual order version of the device. The device-specific terminal assignment is documented on an adhesive label in the terminal cover.

Supply voltage		Input/output 1		Input/output 2		Input/output 3	
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)
Device-specific terminal assignment: adhesive label in terminal cover.							

 Terminal assignment of the remote display and operating module: →  37


7.1.4 Device plugs available

 Device plugs may not be used in hazardous areas!

Order code for "Input; output 1", option GA "PROFIBUS PA"

Order code for "Electrical connection"	Cable entry 2	Cable entry 3
L, N, P, U	Plug M12 × 1	–

7.1.5 Pin assignment of device plug

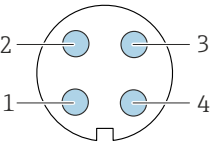	Pin	Assignment		Coding	Plug/socket
	1	+	PROFIBUS PA +	A	Plug
	2		Grounding		
	3	-	PROFIBUS PA -		
	4		Not assigned		

7.1.6 Preparing the measuring device

NOTICE

Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

► Use suitable cable glands corresponding to the degree of protection.

1. Remove dummy plug if present.
2. If the measuring device is supplied without cable glands:
Provide suitable cable gland for corresponding connecting cable.
3. If the measuring device is supplied with cable glands:
Observe requirements for connecting cables →  32.


7.2 Connecting the measuring device

NOTICE

Limitation of electrical safety due to incorrect connection!


- ▶ Have electrical connection work carried out by correspondingly trained specialists only.
- ▶ Observe applicable federal/national installation codes and regulations.
- ▶ Comply with local workplace safety regulations.
- ▶ Always connect the protective ground cable $\ominus$ before connecting additional cables.
- ▶ For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.

7.2.1 Connecting the transmitter

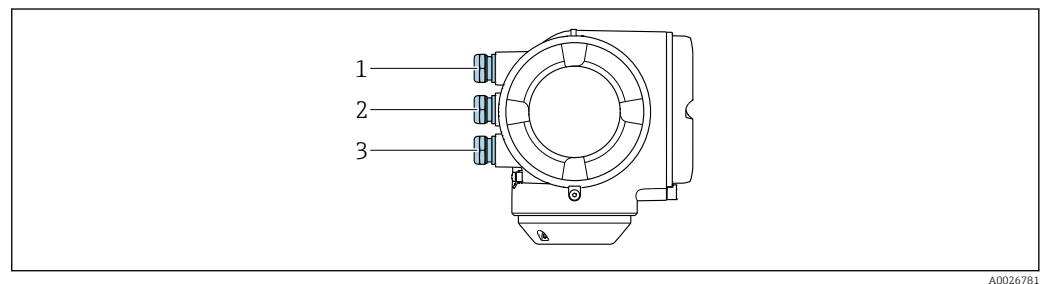


A0026781

- 1 Cable entry for supply voltage
- 2 Cable entry for signal transmission, input/output 1 and 2
- 3 Cable entry for input/output signal transmission; Optional: connection of external WLAN antenna, connection of remote display and operating module DKX001 or service plug

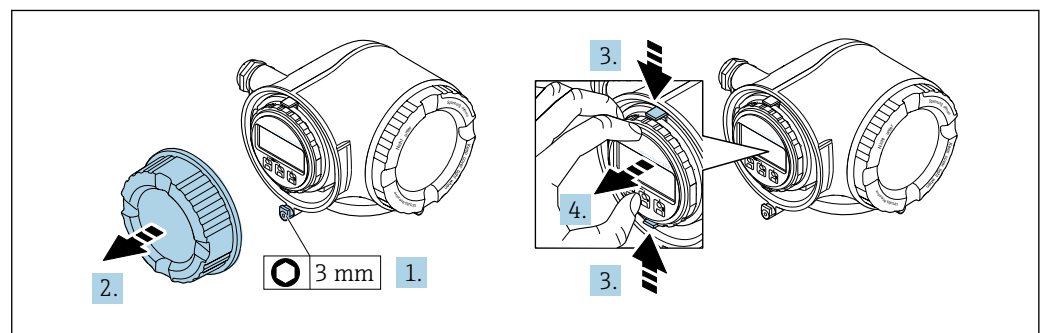


A0029813

1. Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Squeeze the tabs of the display module holder together.
4. Remove the display module holder.

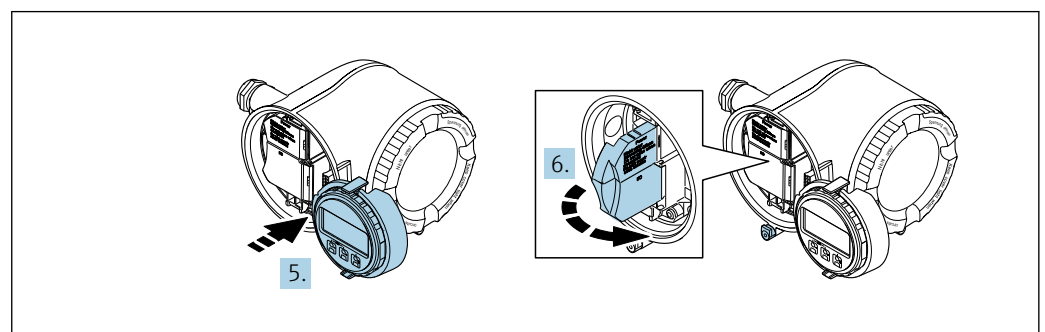


A0029814

5. Attach the holder to the edge of the electronics compartment.
6. Open the terminal cover.

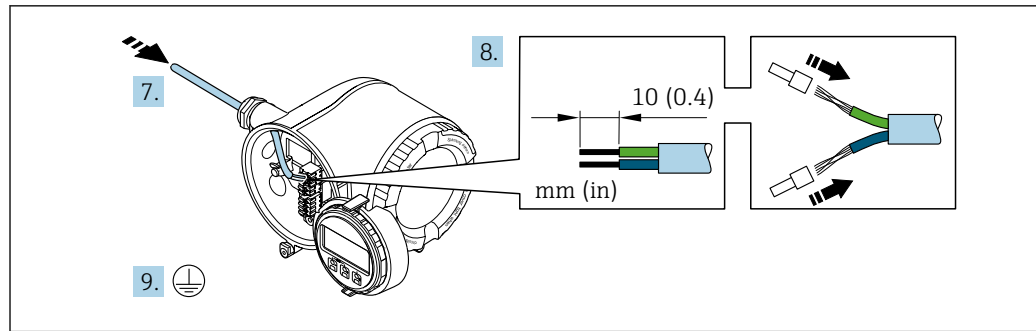

A0029815


7. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
8. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
9. Connect the protective ground.

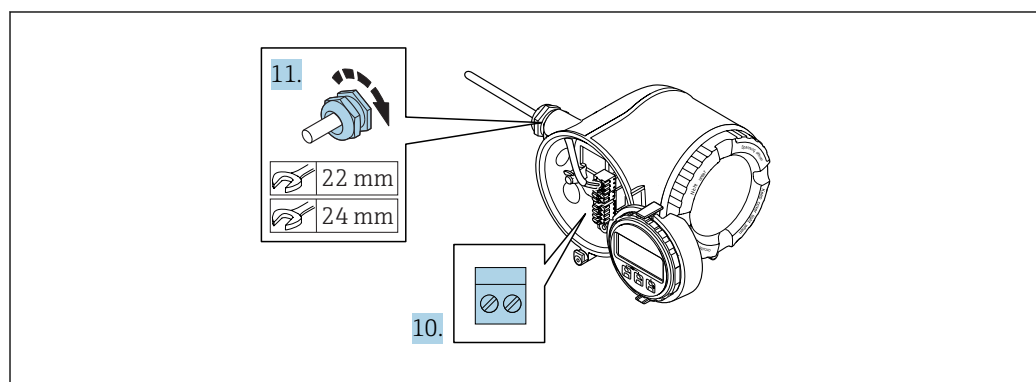

A0029816

10. Connect the cable in accordance with the terminal assignment .
 - ↳ **Signal cable terminal assignment:** The device-specific terminal assignment is documented on an adhesive label in the terminal cover.
 - Supply voltage terminal assignment:** Adhesive label in the terminal cover or → 34.
11. Firmly tighten the cable glands.
 - ↳ This concludes the cable connection process.
12. Close the terminal cover.
13. Fit the display module holder in the electronics compartment.
14. Screw on the connection compartment cover.
15. Secure the securing clamp of the connection compartment cover.

Removing a cable

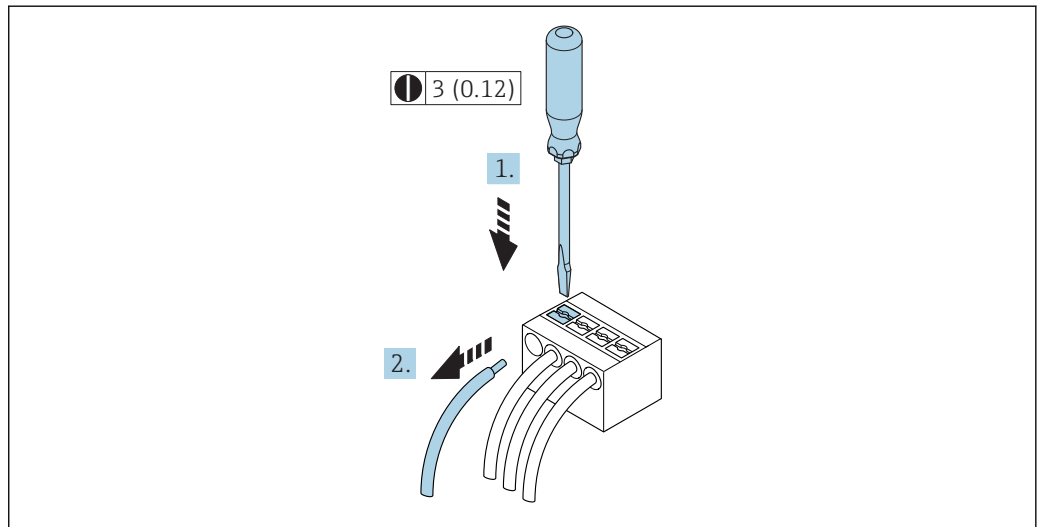

A0029598

6 Engineering unit mm (in)

1. To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes
2. while simultaneously pulling the cable end out of the terminal.


7.2.2 Connecting remote display and operating module DKX001

NOTICE

If ordered subsequently: only one display or operation unit may be connected to the transmitter at any one time.

The remote display and operating module DKX001 cannot be connected at the same time as the existing display or operation unit.

- Existing integrated display module: disconnect electrical connection.
- Connect the remote display and operating module DKX001.

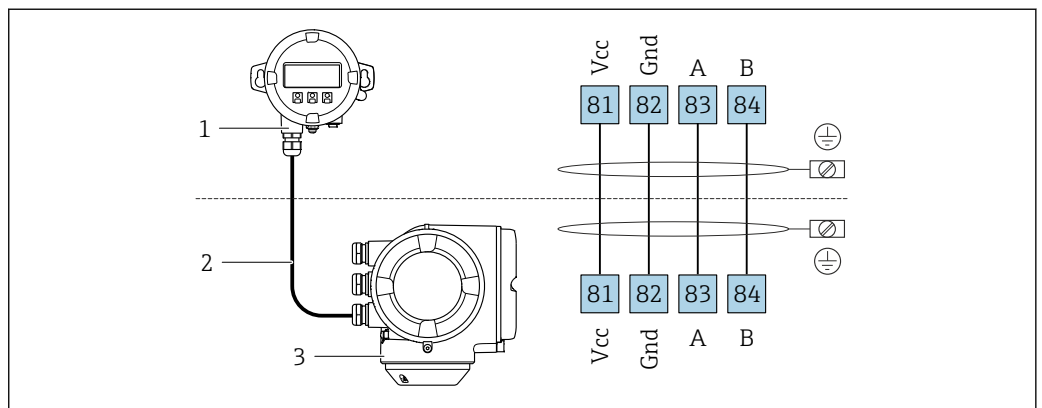

A0027518

- 1 Remote display and operating module DKX001
- 2 Connecting cable
- 3 Measuring device

i Remote display and operating module DKX001 → **220**

7.3 Ensure potential equalization


7.3.1 Requirements

No special measures for potential equalization are required.

7.4 Special connection instructions

7.4.1 Connection examples

PROFIBUS-PA

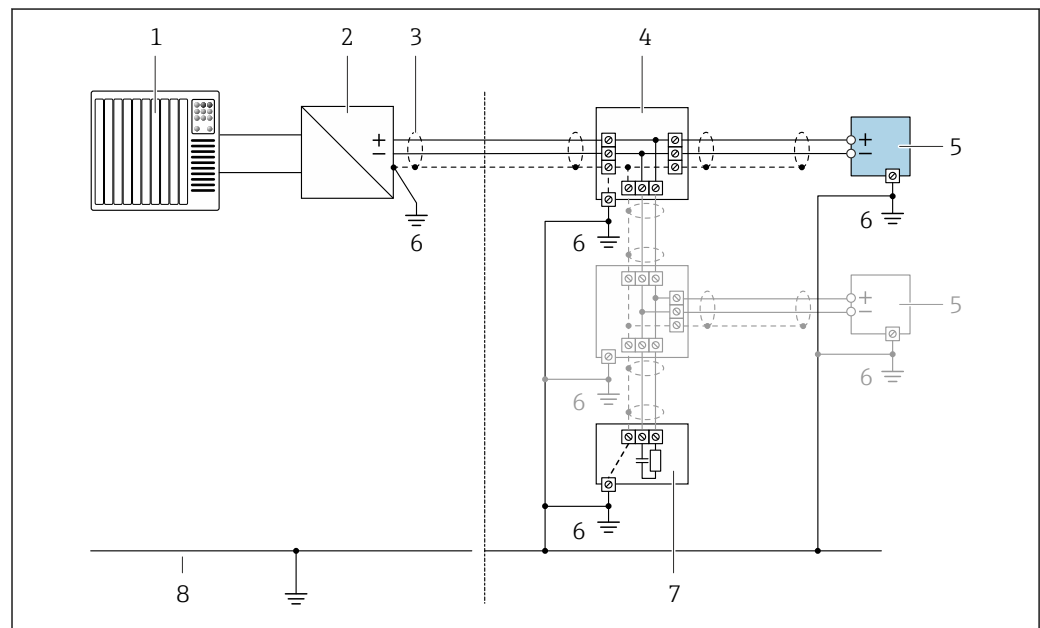


A0028768

7 Connection example for PROFIBUS-PA

- 1 Control system (e.g. PLC)
- 2 PROFIBUS PA segment coupler
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line


Current output 4-20 mA

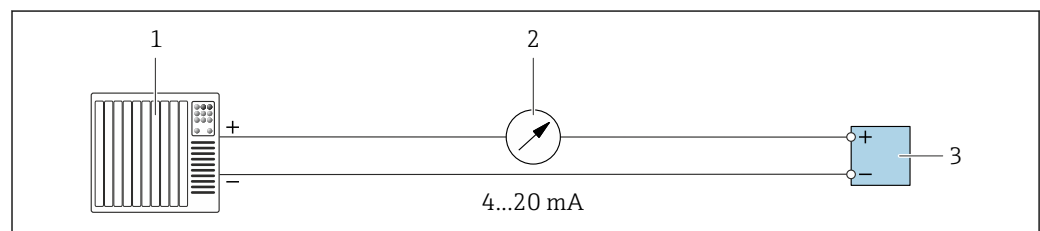

A0028758

8 Connection example for 4-20 mA current output (active)

- 1 Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load
- 3 Transmitter

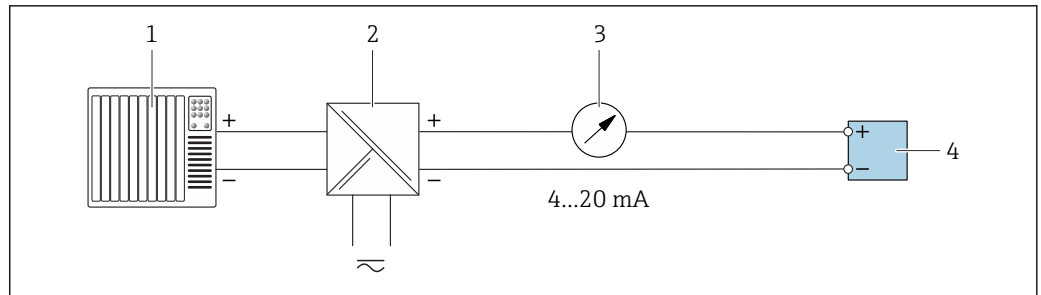


A0028759

9 Connection example for 4-20 mA current output (passive)

- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Analog display unit: observe maximum load
- 4 Transmitter

Pulse/frequency output

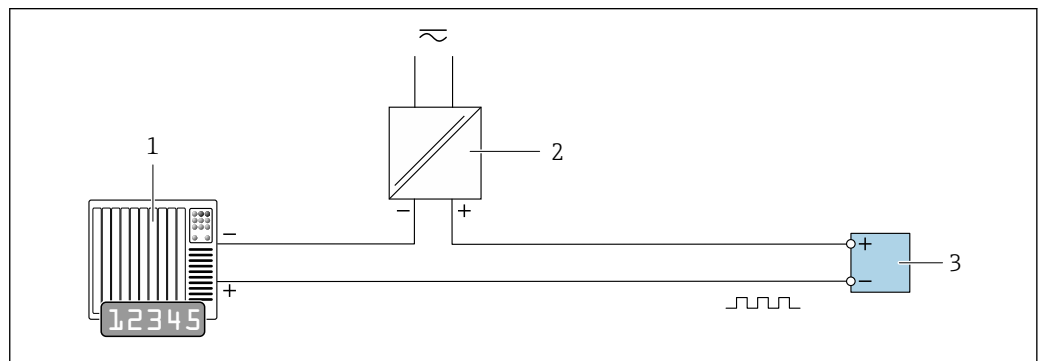


A0028761

10 Connection example for pulse/frequency output (passive)

- 1 Automation system with pulse/frequency input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 225

Switch output

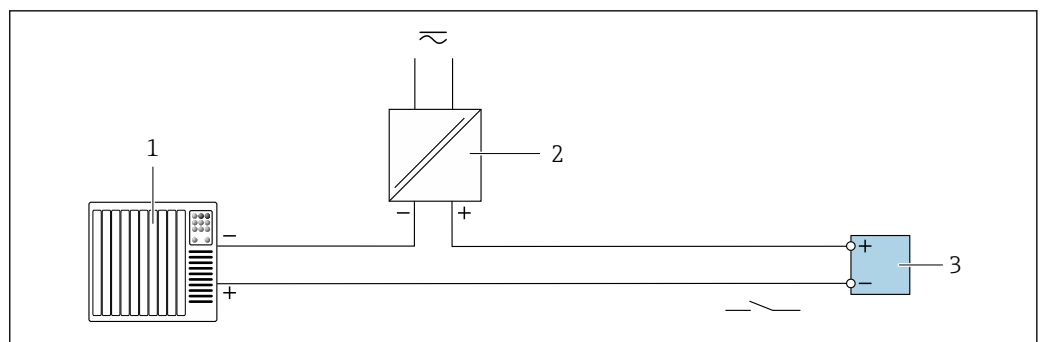


A0028760

11 Connection example for switch output (passive)

- 1 Automation system with switch input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 225

Relay output

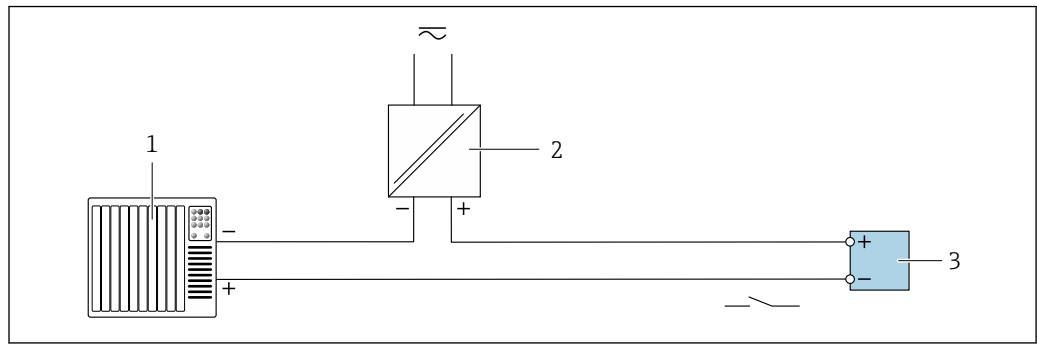


A0028760

12 Connection example for relay output (passive)

- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 226

Current input

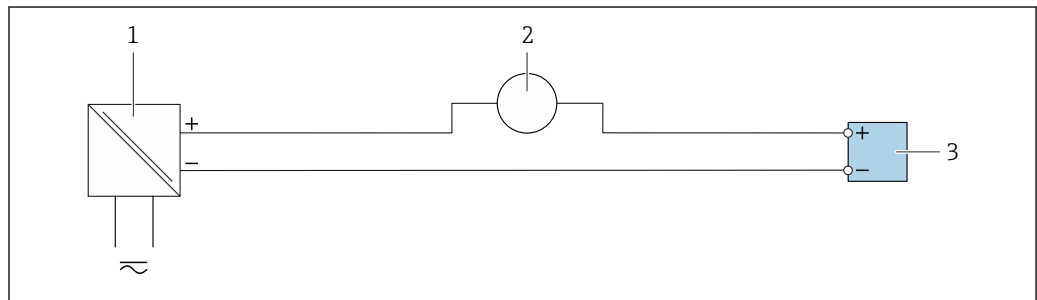


A0028915

13 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 External measuring device (for reading in pressure or temperature, for instance)
- 3 Transmitter: Observe input values

Status input

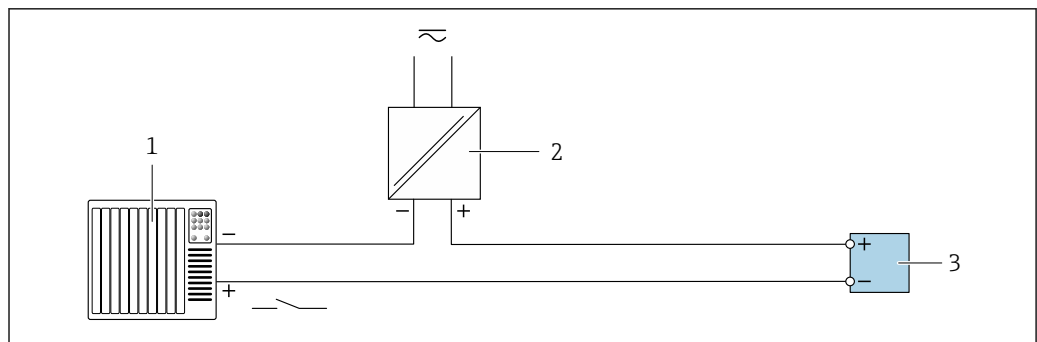

A0028764

14 Connection example for status input

- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values


7.5 Hardware settings

7.5.1 Setting the device address

The address must always be configured for a PROFIBUS DP/PA device. The valid address range is between 1 and 126. In a PROFIBUS DP/PA network, each address can only be assigned once. If an address is not configured correctly, the device is not recognized by the master. All measuring devices are delivered from the factory with the device address 126 and with the software addressing method.

Hardware addressing


1.

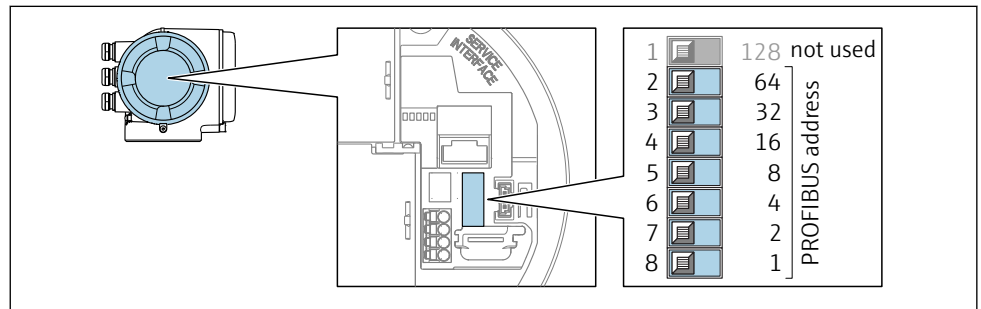

A0029637

Set the desired device address using the DIP switches in the connection compartment.

2.

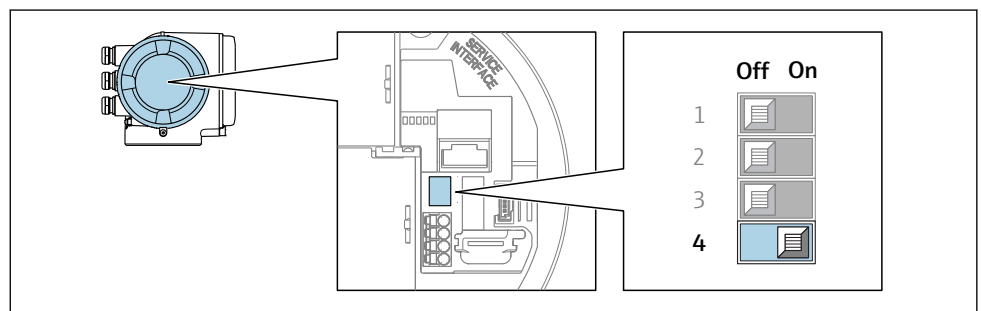

A0029633

To switch addressing from software addressing to hardware addressing: set the DIP switch to **On**.

↳ The change of device address takes effect after 10 seconds. The device is restarted.

Software addressing

► To switch addressing from hardware addressing to software addressing: set DIP switch No. 4 to **Off**.

↳ The device address configured in the **Device address** parameter (→ 88) takes effect after 10 seconds. The device is restarted.


7.6 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

1. Check that the housing seals are clean and fitted correctly.
2. Dry, clean or replace the seals if necessary.

- 3. Tighten all housing screws and screw covers.
- 4. Firmly tighten the cable glands.
- 5. To ensure that moisture does not enter the cable entry:
Route the cable so that it loops down before the cable entry ("water trap").

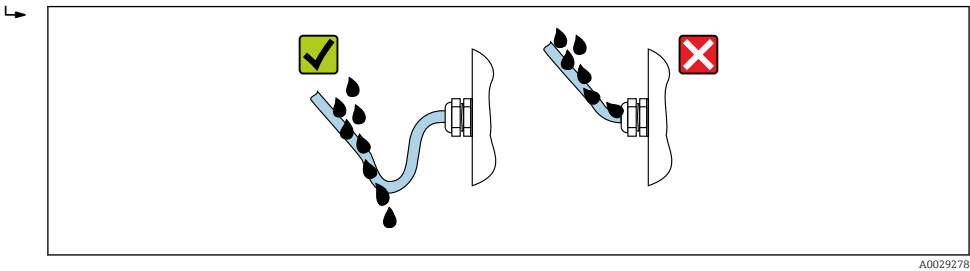

A0029278


- 6. Insert dummy plugs into unused cable entries.

7.7 Post-connection check

Are cables or the device undamaged (visual inspection)?	☐
Do the cables used meet the requirements?	☐
Do the cables have adequate strain relief?	☐
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" → 41 ?	☐
If supply voltage is present, do values appear on the display module?	☐

8 Operation options

8.1 Overview of operation options

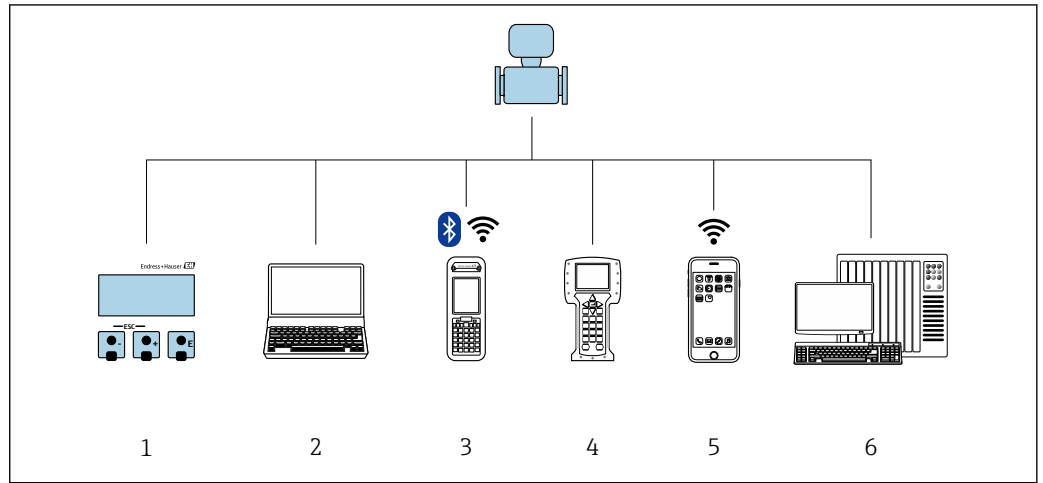


A0029295

- 1 Local operation via display module
- 2 Computer with Web browser (e.g. Internet Explorer) or with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM)
- 3 Field Xpert SFX350 or SFX370
- 4 Field Communicator 475
- 5 Mobile handheld terminal
- 6 Control system (e.g. PLC)

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

 For an overview of the operating menu for experts: "Description of Device Parameters" document supplied with the device →  248

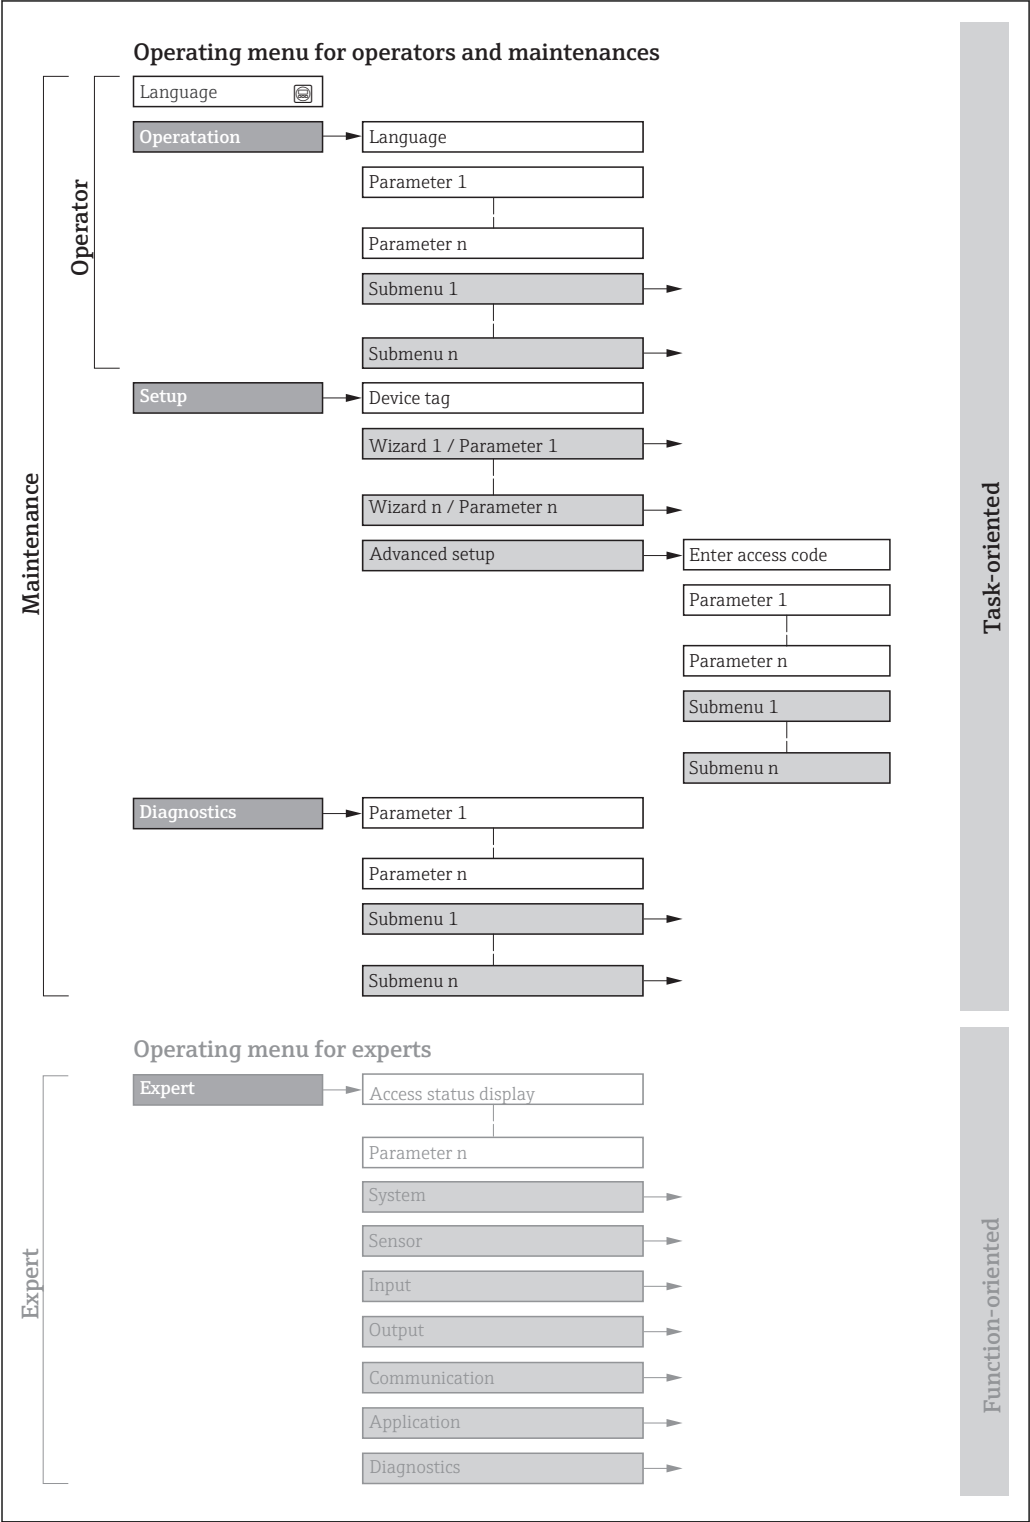

 15 Schematic structure of the operating menu

A0018237-EN

8.2.2 Operating philosophy


The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

Menu/parameter		User role and tasks	Content/meaning
Language	task-oriented	Role "Operator", "Maintenance" Tasks during operation: - Configuring the operational display - Reading measured values	- Defining the operating language - Defining the Web server operating language - Resetting and controlling totalizers
Operation			- Configuring the operational display (e.g. display format, display contrast) - Resetting and controlling totalizers
Setup		"Maintenance" role Commissioning: - Configuration of the measurement - Configuration of the inputs and outputs - Configuration of the communication interface	Wizards for fast commissioning: - Set the system units - Configuration of the communication interface - Define the medium - Display I/O/configuration - Configure the inputs - Configure the outputs - Configuring the operational display - Define the output conditioning - Set the low flow cut off - Configure partial and empty pipe detection Advanced setup - For more customized configuration of the measurement (adaptation to special measuring conditions) - Configuration of totalizers - Configure the WLAN settings - Administration (define access code, reset measuring device)
Diagnostics		"Maintenance" role Fault elimination: - Diagnostics and elimination of process and device errors - Measured value simulation	Contains all parameters for error detection and analyzing process and device errors: - Diagnostics list Contains up to 5 currently pending diagnostic messages. - Event logbook Contains event messages that have occurred. - Device information Contains information for identifying the device. - Measured values Contains all current measured values. - Analog inputs Is used to display the analog input. Data logging submenu with "Extended HistoROM" order option Storage and visualization of measured values - Heartbeat The functionality of the device is checked on demand and the verification results are documented. - Simulation Is used to simulate measured values or output values.

Menu/parameter		User role and tasks	Content/meaning
Expert	function-oriented	Tasks that require detailed knowledge of the function of the device: ▪ Commissioning measurements under difficult conditions ▪ Optimal adaptation of the measurement to difficult conditions ▪ Detailed configuration of the communication interface ▪ Error diagnostics in difficult cases	Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: ▪ System Contains all higher-order device parameters which do not concern the measurement or the communication interface. ▪ Sensor Configuration of the measurement. ▪ Output Configure the pulse/frequency/switch output. ▪ Input Configuring the status input. ▪ Output Configuring of the analog current outputs as well as the pulse/frequency and switch output. ▪ Communication Configuration of the digital communication interface and the Web server. ▪ Submenus for function blocks (e.g. "Analog Inputs") Configuration of function blocks. ▪ Application Configure the functions that go beyond the actual measurement (e.g. totalizer). ▪ Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.

8.3 Access to the operating menu via the local display

8.3.1 Operational display

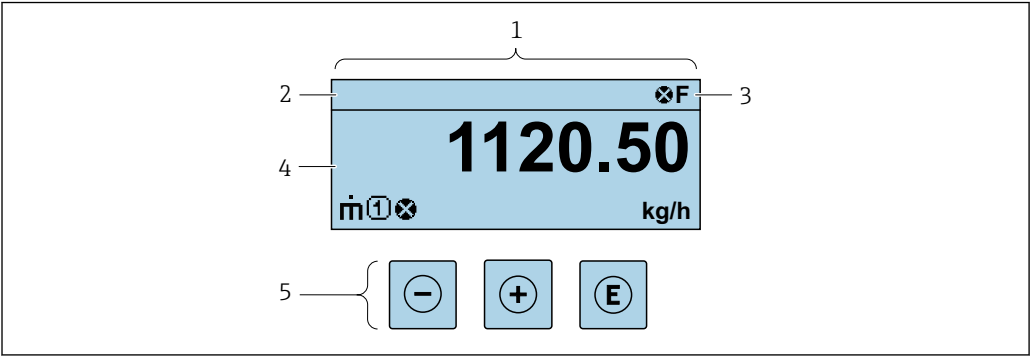

- 1 Operational display
- 2 Device tag
- 3 Status area
- 4 Display area for measured values (4-line)
- 5 Operating elements → 51

Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → ⓘ 145
 - **F**: Failure
 - **C**: Function check
 - **S**: Out of specification
 - **M**: Maintenance required
- Diagnostic behavior → ⓘ 146
 - : Alarm
 - : Warning
- : Locking (the device is locked via the hardware)
- : Communication (communication via remote operation is active)

Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

	Measured variable	Measurement channel number	Diagnostic behavior
	↓	↓	↓
Example			
			Appears only if a diagnostics event is present for this measured variable.

Measured values

Symbol	Meaning
	Mass flow
	■ Volume flow ■ Corrected volume flow
	■ Density ■ Reference density
	Temperature
	Totalizer  The measurement channel number indicates which of the three totalizers is displayed.
	Status input

Measurement channel numbers


Symbol	Meaning
 ... 	Measurement channel 1 to 4
The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. Totalizer 1 to 3).	

Diagnostic behavior

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable.
For information on the symbols → ⓘ 146

-  The number and display format of the measured values can be configured via the **"Format display" parameter** → ⓘ 107. Operation → Display → Format display

8.3.2 Navigation view

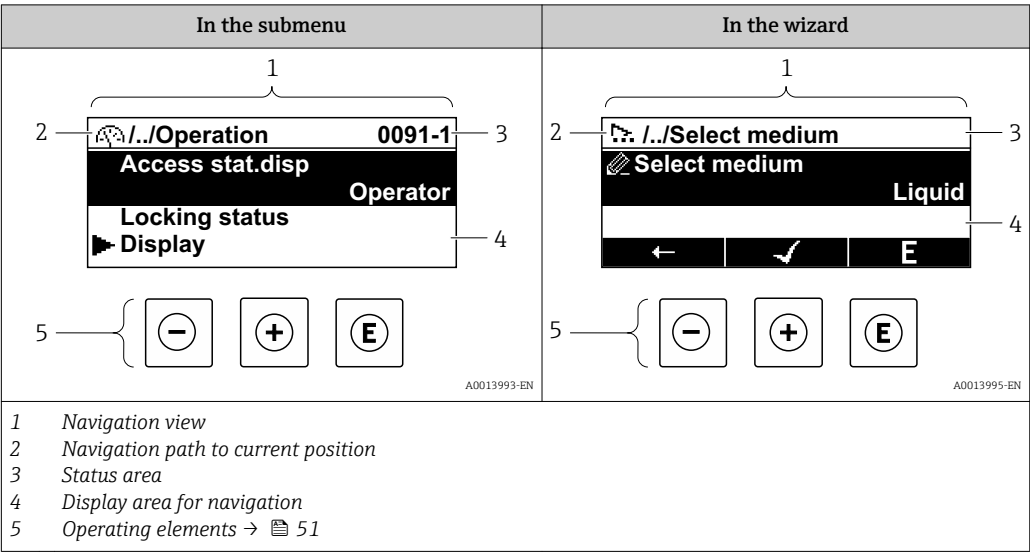

Navigation path

The navigation path - displayed at the top left in the navigation view - consists of the following elements:

	■ In the submenu: Display symbol for menu ■ In the wizard: Display symbol for wizard	Omission symbol for operating menu levels in between	Name of current ■ Submenu ■ Wizard ■ Parameters
	↓	↓	↓
Examples		/ .. / / .. /	Display Display

For more information about the icons in the menu, refer to the "Display area" section → 49

Status area

The following appears in the status area of the navigation view in the top right corner:

- In the submenu
 - The direct access code for the parameter you are navigating to (e.g. 0022-1)
 - If a diagnostic event is present, the diagnostic behavior and status signal
 - In the wizard
 - If a diagnostic event is present, the diagnostic behavior and status signal
- For information on the diagnostic behavior and status signal → 145
- For information on the function and entry of the direct access code → 54

Display area

Menus

Symbol	Meaning
	Operation Appears: - In the menu next to the "Operation" selection - At the left in the navigation path in the Operation menu
	Setup Appears: - In the menu next to the "Setup" selection - At the left in the navigation path in the Setup menu
	Diagnostics Appears: - In the menu next to the "Diagnostics" selection - At the left in the navigation path in the Diagnostics menu
	Expert Appears: - In the menu next to the "Expert" selection - At the left in the navigation path in the Expert menu

Submenus, wizards, parameters

Symbol	Meaning
	Submenu
	Wizard
	Parameters within a wizard  No display symbol exists for parameters in submenus.

Locking

Symbol	Meaning
	Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked. - By a user-specific access code - By the hardware write protection switch

Wizard operation

Symbol	Meaning
	Switches to the previous parameter.
	Confirms the parameter value and switches to the next parameter.
	Opens the editing view of the parameter.

8.3.3 Editing view

1

20

2

3

4

5

6

7

8

9

-

.

←

C

X

✓

4

-

+

E

A0013941

1

User

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310

311

312

313

314

315

316

317

318

319

320

321

322

323

324

325

326

327

328

329

330

331

332

333

334

335

336

337

338

339

340

341

342

343

344

345

346

347

348

349

350

351

352

353

354

355

356

357

358

359

360

361

362

363

364

365

366

367

368

369

370

371

372

373

374

375

376

377

378

379

380

381

382

383

384

385

386

387

388

389

390

391

392

393

394

395

396

397

398

399

400

401

402

403

404

405

406

407

408

409

410

411

412

413

414

415

416

417

418

419

420

421

422

423

424

425

426

427

428

429

430

431

432

433

434

435

436

437

438

439

440

441

442

443

444

445

446

447

448

449

450

451

452

453

454

455

456

457

458

459

460

461

462

463

464

465

466

467

468

469

470

471

472

473

474

475

476

477

478

479

480

481

482

483

484

485

486

487

488

489

490

491

492

493

494

495

496

497

498

499

500

501

502

503

504

505

506

507

508

509

510

511

512

513

514

515

516

517

518

519

520

521

522

523

524

525

526

527

528

529

530

531

532

533

534

535

536

537

538

539

540

541

542

543

544

545

546

547

548

549

550

551

552

553

554

555

556

557

558

559

560

561

562

563

564

565

566

567

568

569

570

571

572

573

574

575

576

577

578

579

580

581

582

583

584

585

586

587

588

589

590

591

592

593

594

595

596

597

598

599

600

601

602

603

604

605

606

607

608

609

610

611

612

613

614

615

616

617

618

619

620

621

622

623

624

625

626

627

628

629

630

631

632

633

634

635

636

637

638

639

640

641

642

643

644

645

646

647

648

649

650

651

652

653

654

655

656

657

658

659

660

661

662

663

664

665

666

667

668

669

670

671

672

673

674

675

676

677

678

679

680

681

682

683

684

685

686

687

688

689

690

691

692

693

694

695

696

697

698

699

700

701

702

703

704

705

706

707

708

709

710

711

712

713

714

715

716

717

718

719

720

721

722

723

724

725

726

727

728

729

730

731

732

733

734

735

736

737

738

739

740

741

742

743

744

745

746

747

748

749

750

751

752

753

754

755

756

757

758

759

760

761

762

763

764

765

766

767

768

769

770

771

772

773

774

775

776

777

778

779

780

781

782

783

784

785

786

787

788

789

790

791

792

793

794

795

796

797

798

799

800

801

802

803

804

805

806

807

808

809

810

811

812

813

814

815

816

817

818

819

820

821

822

823

824

825

826

827

828

829

830

831

832

833

834

835

836

837

838

839

840

841

842

843

844

845

846

847

848

849

850

851

852

853

854

855

856

857

858

859

860

861

862

863

864

865

866

867

868

869

870

871

872

873

874

875

876

877

878

879

880

881

882

883

884

885

886

887

888

889

890

891

892

893

894

895

896

897

898

899

900

901

902

903

904

905

906

907

908

909

910

911

912

913

914

915

916

917

918

919

920

921

922

923

924

925

926

927

928

929

930

931

932

933

934

935

936

937

938

939

940

941

942

943

944

945

946

947

948

949

950

951

952

953

954

955

956

957

958

959

960

961

962

963

964

965

966

967

968

969

970

971

972

973

974

975

976

977

978

979

980

981

982

983

984

985

986

987

988

989

990

991

992

993

994

995

996

997

998

999

1000

1001

1002

1003

1004

1005

1006

1007

1008

1009

1010

1011

1012

1013

1014

1015

1016

1017

1018

1019

1020

1021

1022

1023

1024

1025

1026

1027

1028

1029

1030

1031

1032

1033

1034

1035

1036

1037

1038

1039

1040

1041

1042

1043

1044

1045

1046

1047

1048

1049

1050

1051

1052

1053

1054

1055

1056

1057

1058

1059

1060

1061

1062

1063

1064

1065

1066

1067

1068

1069

1070

1071

1072

1073

1074

1075

1076

1077

1078

1079

1080

1081

1082

1083

1084

1085

1086

1087

1088

1089

1090

1091

1092

1093

1094

1095

1096

1097

1098

1099

1100

1101

1102

1103

1104

1105

1106

1107

1108

1109

1110

1111

1112

1113

1114

1115

1116

1117

1118

1119

1120

1121

1122

1123

1124

1125

1126

1127

1128

1129

1130

1131

1132

1133

1134

1135

1136

1137

1138

1139

1140

1141

1142

1143

1144

1145

1146

1147

1148

1149

1150

1151

1152

1153

1154

1155

1156

1157

1158

1159

1160

1161

1162

1163

1164

1165

1166

1167

1168

1169

1170

1171

1172

1173

1174

1175

1176

1177

1178

1179

1180

1181

1182

1183

1184

1185

1186

1187

1188

1189

1190

1191

1192

1193

1194

1195

1196

1197

1198

1199

1200

1201

1202

1203

1204

1205

1206

1207

1208

1209

1210

1211

1212

1213

1214

1215

1216

1217

1218

1219

1220

1221

1222

1223

1224

1225

1226

1227

1228

1229

1230

1231

1232

1233

1234

1235

1236

1237

1238

1239

1240

1241

1242

1243

1244

1245

1246

1247

1248

1249

1250

1251

1252

1253

1254

1255

1256

1257

1258

1259

1260

1261

1262

1263

1264

1265

1266

1267

1268

1269

1270

1271

1272

1273

1274

1275

1276

1277

1278

1279

1280

1281

1282

1283

1284

1285

1286

1287

1288

1289

1290

1291

1292

1293

1294

1295

1296

1297

1298

1299

1300

1301

1302

1303

1304

1305

1306

1307

1308

1309

1310

1311

1312

1313

1314

1315

1316

1317

1318

1319

1320

1321

1322

1323

1324

1325

1326

1327

1328

1329

1330

1331

1332

1333

1334

1335

1336

1337

1338

1339

1340

1341

1342

1343

1344

1345

1346

1347

1348

1349

1350

1351

1352

1353

1354

1355

1356

1357

1358

1359

1360

1361

1362

1363

1364

1365

1366

1367

1368

1369

1370

1371

1372

1373

1374

1375

1376

1377

1378

1379

1380

1381

1382

1383

1384

1385

1386

1387

1388

1389

1390

1391

1392

1393

1394

1395

1396

1397

1398

1399

1400

1401

1402

1403

1404

1405

1406

1407

1408

1409

1410

1411

1412

1413

1414

1415

1416

1417

1418

1419

1420

1421

1422

1423

1424

1425

1426

1427

1428

1429

1430

1431

1432

1433

1434

1435

1436

1437

1438

1439

1440

1441

1442

1443

1444

1445

1446

1447

1448

1449

1450

1451

1452

1453

1454

1455

1456

1457

1458

1459

1460

1461

1462

1463

1464

1465

1

 	Selection of letters from a to z.
 	Selection of special characters.
	Confirms selection.
	Switches to the selection of the correction tools.
	Exits the input without applying the changes.
	Clears all entered characters.

Correction symbols under 

Symbol	Meaning
	Clears all entered characters.
	Moves the input position one position to the right.
	Moves the input position one position to the left.
	Deletes one character immediately to the left of the input position.

8.3.4 Operating elements

Key	Meaning
	Minus key <i>In a menu, submenu</i> Moves the selection bar upwards in a choose list. <i>With a Wizard</i> Confirms the parameter value and goes to the previous parameter. <i>With a text and numeric editor</i> In the input mask, moves the selection bar to the left (backwards).
	Plus key <i>In a menu, submenu</i> Moves the selection bar downwards in a choose list. <i>With a Wizard</i> Confirms the parameter value and goes to the next parameter. <i>With a text and numeric editor</i> Moves the selection bar to the right (forwards) in an input screen.

Key	Meaning
	Enter key <i>For operational display</i> - Pressing the key briefly opens the operating menu. - Pressing the key for 2 s opens the context menu. <i>In a menu, submenu</i> - Pressing the key briefly: - Opens the selected menu, submenu or parameter. - Starts the wizard. - If help text is open, closes the help text of the parameter. - Pressing the key for 2 s for parameter: - If present, opens the help text for the function of the parameter. <i>With a Wizard</i> Opens the editing view of the parameter. <i>With a text and numeric editor</i> - Pressing the key briefly: - Opens the selected group. - Carries out the selected action. - Pressing the key for 2 s confirms the edited parameter value.
	Escape key combination (press keys simultaneously) <i>In a menu, submenu</i> - Pressing the key briefly: - Exits the current menu level and takes you to the next higher level. - If help text is open, closes the help text of the parameter. - Pressing the key for 2 s returns you to the operational display ("home position"). <i>With a Wizard</i> Exits the wizard and takes you to the next higher level. <i>With a text and numeric editor</i> Closes the text or numeric editor without applying changes.
	Minus/Enter key combination (press the keys simultaneously) Reduces the contrast (brighter setting).
	Plus/Enter key combination (press and hold down the keys simultaneously) Increases the contrast (darker setting).
	Minus/Plus/Enter key combination (press the keys simultaneously) <i>For operational display</i> Enables or disables the keypad lock (only SD02 display module).

8.3.5 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Data backup
- Simulation

Calling up and closing the context menu

The user is in the operational display.

1. Press  for 2 s.
 - ↳ The context menu opens.

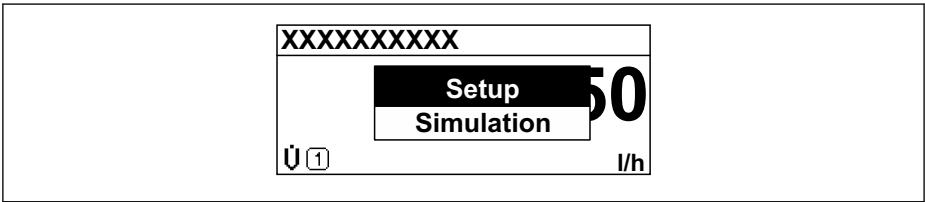

A0017421-EN

2. Press  +  simultaneously.
 - ↳ The context menu is closed and the operational display appears.

Calling up the menu via the context menu


1. Open the context menu.
2. Press  to navigate to the desired menu.
3. Press  to confirm the selection.
 - ↳ The selected menu opens.

8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

 For an explanation of the navigation view with symbols and operating elements
→  48

Example: Setting the number of displayed measured values to "2 values"

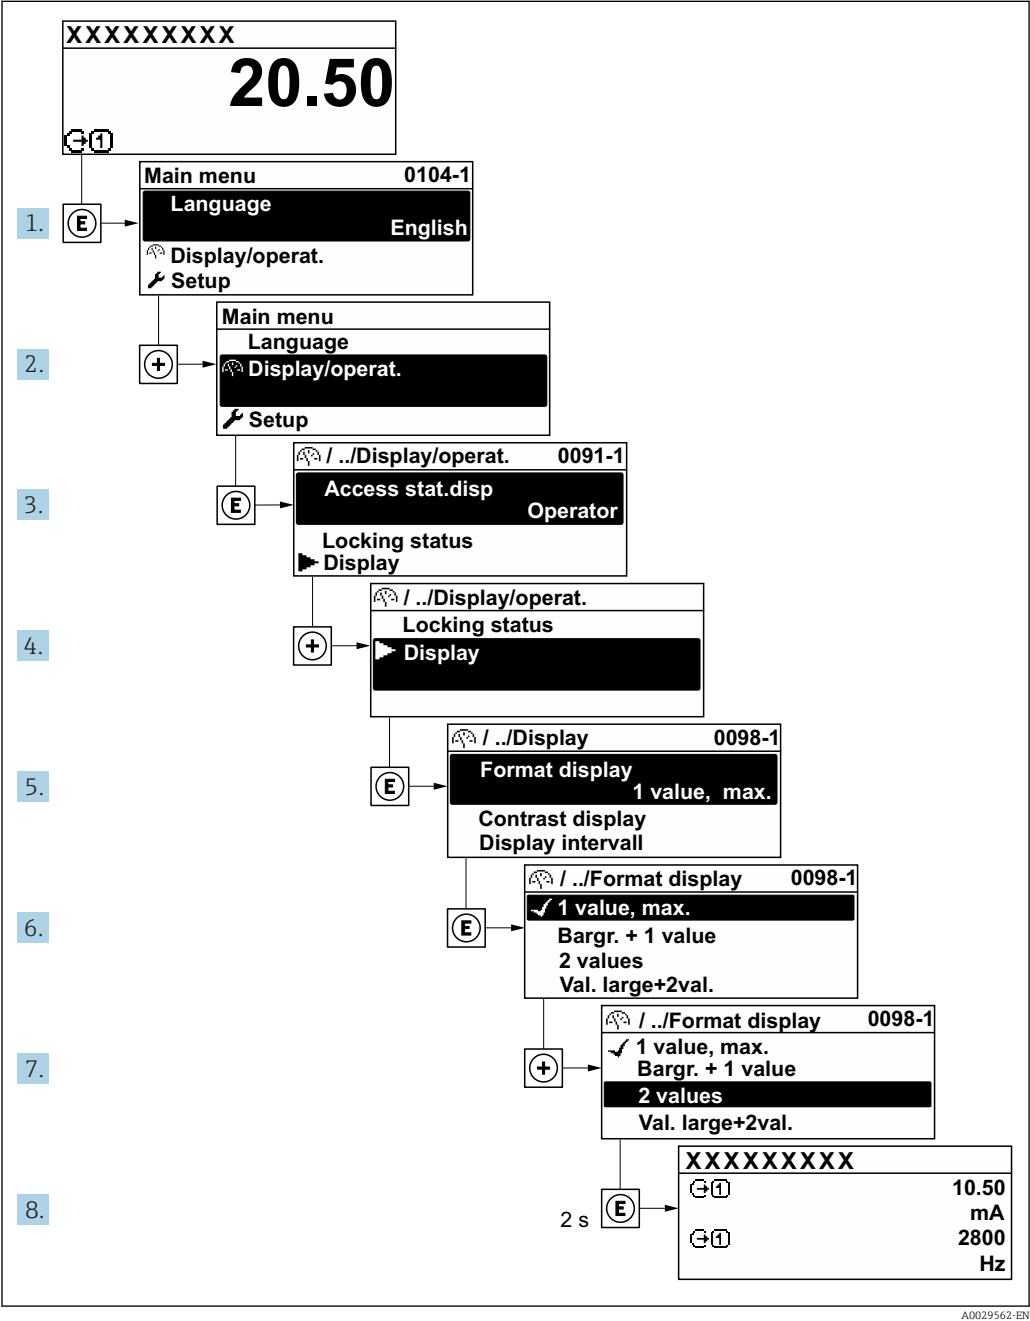


A0029562-EN

8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

Navigation path
Expert → Direct access

The direct access code consists of a 4-digit number and the channel number, which identifies the channel of a process variable: e.g. 0914-1. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

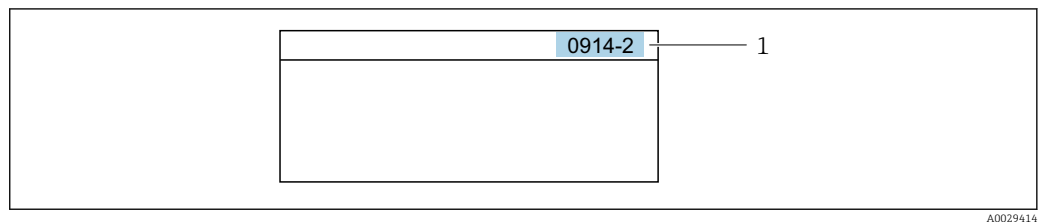

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered.
Example: Input of "914" instead of "0914"
- If no channel number is entered, channel 1 is jumped to automatically.
Example: Enter **0914** → **Assign process variable** parameter
- If a different channel is jumped to: Enter the direct access code with the corresponding channel number.
Example: Enter **0914-2** → **Assign process variable** parameter



For the direct access codes of the individual parameters, see the "Description of Device Parameters" document for the device


8.3.8 Calling up help text

Help text is available for some parameters and can be called up from the navigation view. The help text provides a brief explanation of the parameter function and thereby supports swift and safe commissioning.

Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

1. Press  for 2 s.
↳ The help text for the selected parameter opens.

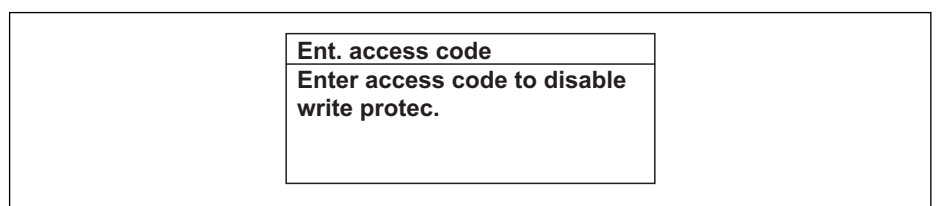


16 Example: Help text for parameter "Enter access code"

2. Press  +  simultaneously.
↳ The help text is closed.

8.3.9 Changing the parameters

i For a description of the editing display - consisting of text editor and numeric editor - with symbols → 50, for a description of the operating elements → 51

Example: Changing the tag name in the "Tag description" parameter from 001-FT-101 to 001-FT-102

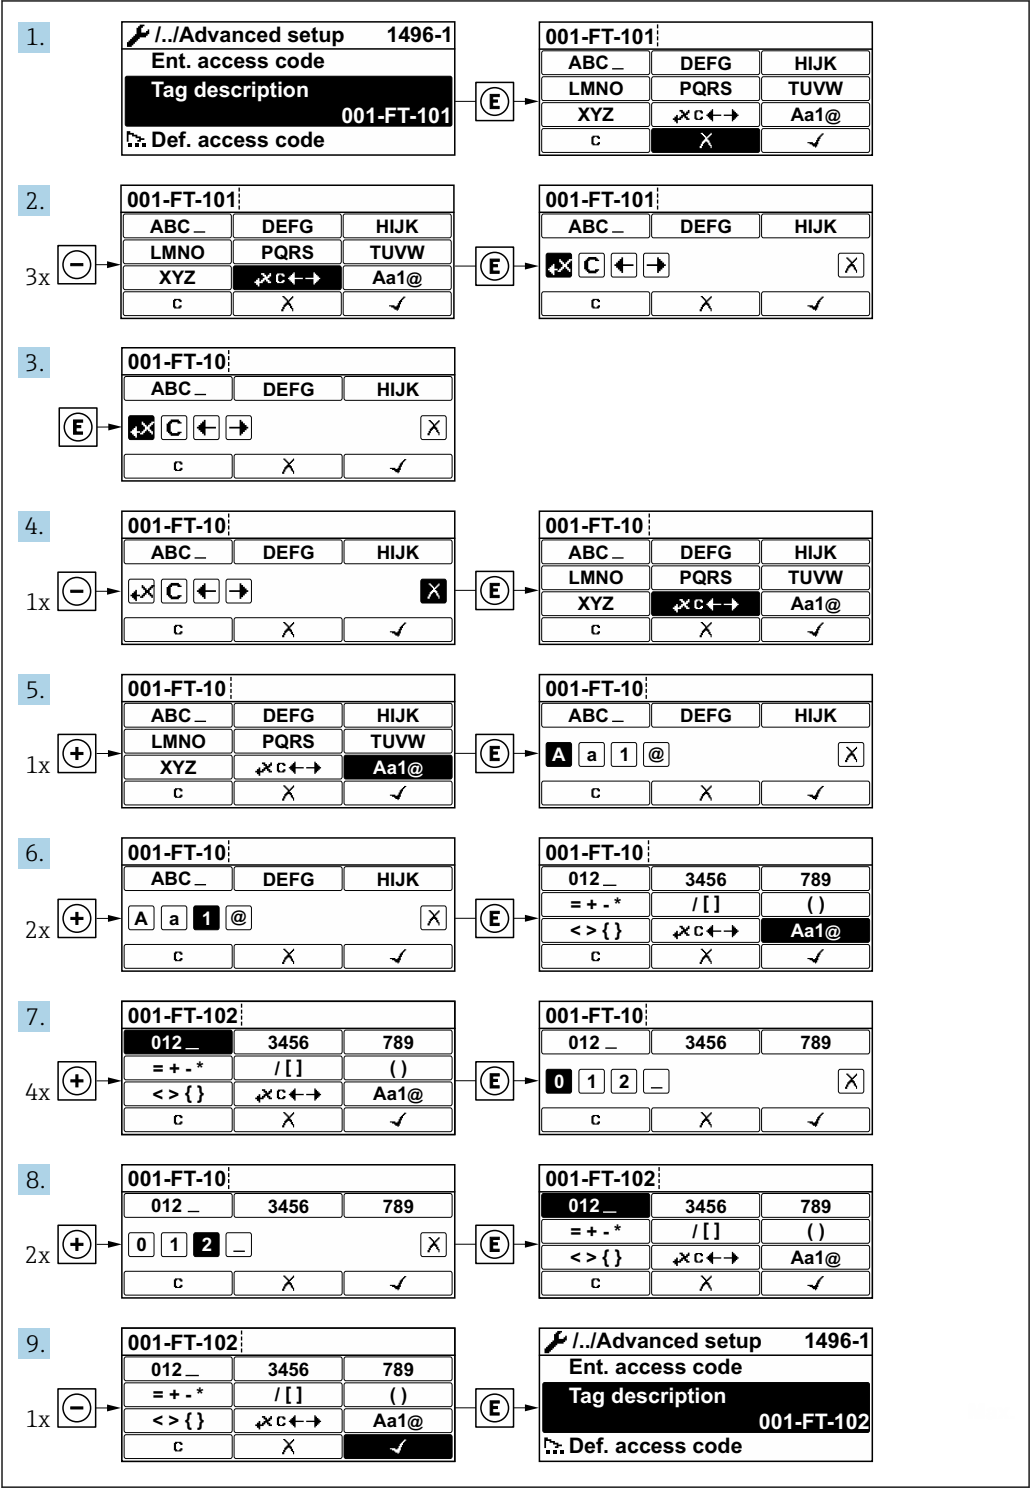

A0029563-EN

A message is displayed if the value entered is outside the permitted value range.

Ent. access code Invalid or out of range input value Min:0 Max:9999

A0014049-EN

8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access → 127.

Access authorization to parameters: "Operator" user role

Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	✓	✓
After an access code has been defined.	✓	-- ¹⁾

- 1) Despite the defined access code, certain parameters can always be modified and thus are excepted from the write protection, as they do not affect the measurement. Refer to the "Write protection via access code" section

Access authorization to parameters: "Maintenance" user role

Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	✓	✓
After an access code has been defined.	✓	✓ ¹⁾

- 1) If an incorrect access code is entered, the user obtains the access rights of the "Operator" user role.

The user role with which the user is currently logged on is indicated by the **Access status** parameter. Navigation path: Operation → Access status

8.3.11 Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using local operation → 127.

Parameter write protection via local operation can be disabled by entering the user-specific access code in the **Enter access code** parameter via the respective access option.

- After you press , the input prompt for the access code appears.
- Enter the access code.
 - The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

8.3.12 Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

Local operation with touch control

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock

The keypad lock is switched on automatically:

- Each time the device is restarted.
- If the device has not been operated for longer than one minute in the measured value display.

1. The device is in the measured value display.
Press  for at least 2 seconds.
↳ A context menu appears.
2. In the context menu, select the **Keylock on** option.
↳ The keypad lock is switched on.

 If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

Switching off the keypad lock

1. The keypad lock is switched on.
Press  for at least 2 seconds.
↳ A context menu appears.
2. In the context menu, select the **Keylock off** option.
↳ The keypad lock is switched off.

8.4 Access to the operating menu via the Web browser

8.4.1 Function range

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the measuring device data can be managed and the network parameters can be configured. The WLAN connection requires a device that acts as an access point to enable communication via a computer or mobile handheld terminal.

 For additional information on the Web server, refer to the Special Documentation for the device →  249

8.4.2 Prerequisites

Computer hardware

Hardware	Interface	
	CDI-RJ45	WLAN
Interface	The computer must have an RJ45 interface.	The operating unit must have a WLAN interface.
Connection	Standard Ethernet cable with RJ45 connector.	Connection via Wireless LAN.
Screen	Recommended size: ≥12" (depends on the screen resolution)	

Computer software

Software	Interface	
	CDI-RJ45	WLAN
Recommended operating systems	- Microsoft Windows 7 or higher. - Mobile operating systems: - iOS - Android  Microsoft Windows XP is supported.	
Web browsers supported	- Microsoft Internet Explorer 8 or higher - Microsoft Edge - Mozilla Firefox - Google Chrome - Safari	

Computer settings

Settings	Interface	
	CDI-RJ45	WLAN
User rights	Appropriate user rights (e.g. administrator rights) for TCP/IP and proxy server settings are necessary (for adjusting the IP address, subnet mask etc.).	
Proxy server settings of the Web browser	The Web browser setting <i>Use a Proxy Server for Your LAN</i> must be deselected .	
JavaScript	JavaScript must be enabled.  If JavaScript cannot be enabled: enter <code>http://192.168.1.212/basic.html</code> in the address line of the Web browser. A fully functional but simplified version of the operating menu structure starts in the Web browser.  When installing a new firmware version: To enable correct data display, clear the temporary memory (cache) of the Web browser under Internet options.	
Network connections	Only the active network connections to the measuring device should be used.	
	Switch off all other network connections such as WLAN.	Switch off all other network connections.

 In the event of connection problems: →  142

Measuring device

Device	Interface	
	CDI-RJ45	WLAN
Measuring device	The measuring device has an RJ45 interface.	The measuring device has a WLAN antenna: - Transmitter with integrated WLAN antenna - Transmitter with external WLAN antenna
Web server	Web server must be enabled; factory setting: ON  For information on enabling the Web server →  62	Web server and WLAN must be enabled; factory setting: ON  For information on enabling the Web server →  62

8.4.3 Establishing a connection

Via service interface (CDI-RJ45)

Configuring the Internet protocol of the computer

The following information refers to the default Ethernet settings of the device.

IP address of the device: 192.168.1.212 (factory setting)

1. Switch on the measuring device.
2. Connect to the computer using a cable →  64.
3. If a 2nd network card is not used, close all the applications on the notebook.
 - ↳ Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.
4. Close any open Internet browsers.
5. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

IP address	192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 → e.g. 192.168.1.213
Subnet mask	255.255.255.0
Default gateway	192.168.1.212 or leave cells empty

Via WLAN interface

Configuring the Internet protocol of the operating unit

NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.

- Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE

In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same operating unit. This could cause a network conflict.

- Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparation

- Enable WLAN reception on the operating unit.

Establishing a connection

1. Select the measuring device using the SSID (e.g. EH_Promass_300_A802000).
2. If necessary, select the WPA2 encryption method.
3. Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).
 - ↳ LED on display module flashes: it is now possible to operate the measuring device with the Web browser, FieldCare or DeviceCare.

 The serial number can be found on the nameplate.

Disconnecting

- Once the configuration is completed, disconnect the WLAN connection between the operating unit and the measuring device.

Starting the Web browser

- Start the Web browser on the computer.

 If a login page does not appear, or if the page is incomplete →  142


8.4.4 Logging on

1. Select the preferred operating language for the Web browser.
2. Enter the user-specific access code.
3. Press **OK** to confirm your entry.

Access code	0000 (factory setting); can be changed by customer
-------------	--

 If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

8.4.5 User interface

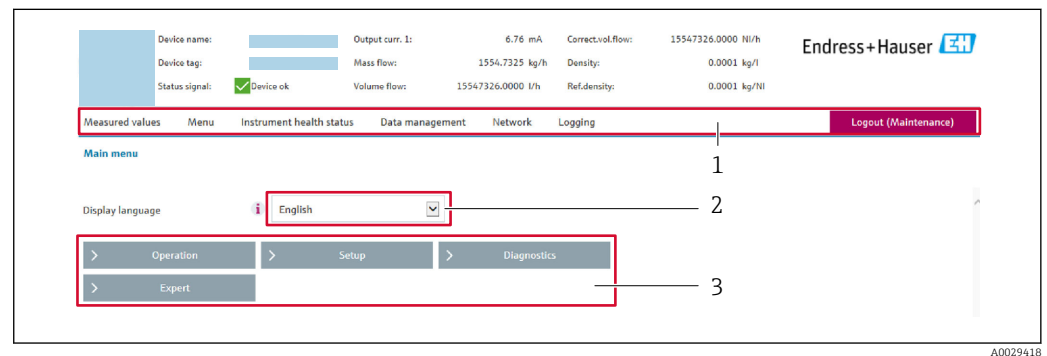

A0029418

- 1 Function row
- 2 Operating language
- 3 Navigation area

Header

The following information appears in the header:

- Device tag
- Device status with status signal →  148
- Current measured values

Function row

Functions	Meaning
Measured values	Displays the measured values of the measuring device
Menu	■ Access to the operating menu from the measuring device ■ The structure of the operating menu is the same as for the local display  For detailed information on the structure of the operating menu, see the Operating Instructions for the measuring device
Device status	Displays the diagnostic messages currently pending, listed in order of priority

Functions	Meaning
Data management	■ Data exchange between PC and measuring device: – Load the configuration from the measuring device (XML format, save configuration) – Save the configuration to the measuring device (XML format, restore configuration) – Export the event list (.csv file) – Export parameter settings (.csv file, create documentation of the measuring point configuration) – Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package) ■ If using fieldbuses, upload device drivers for system integration from the measuring device: - PROFIBUS PA: GSD file ■ Flashing a firmware version
Network configuration	Configuration and checking of all the parameters required for establishing the connection to the measuring device: ■ Network settings (e.g. IP address, MAC address) ■ Device information (e.g. serial number, firmware version)
Logout	End the operation and call up the login page

Navigation area

If a function is selected in the function bar, the submenus of the function open in the navigation area. The user can now navigate through the menu structure.

Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

8.4.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

Navigation

"Expert" menu → Communication → Web server

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Web server functionality	Switch the Web server on and off.	■ Off ■ On	On

Function scope of the "Web server functionality" parameter

Option	Description
Off	■ The web server is completely disabled. ■ Port 80 is locked.
On	■ The complete functionality of the web server is available. ■ JavaScript is used. ■ The password is transferred in an encrypted state. ■ Any change to the password is also transferred in an encrypted state.

Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via local display
- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool

8.4.7 Logging out

 Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.

1. Select the **Logout** entry in the function row.
↳ The home page with the Login box appears.
2. Close the Web browser.
3. Reset the modified properties of the Internet protocol (TCP/IP) if they are no longer needed →  60.


8.5 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

8.5.1 Connecting the operating tool

Via PROFIBUS PA network

This communication interface is available in device versions with PROFIBUS PA.

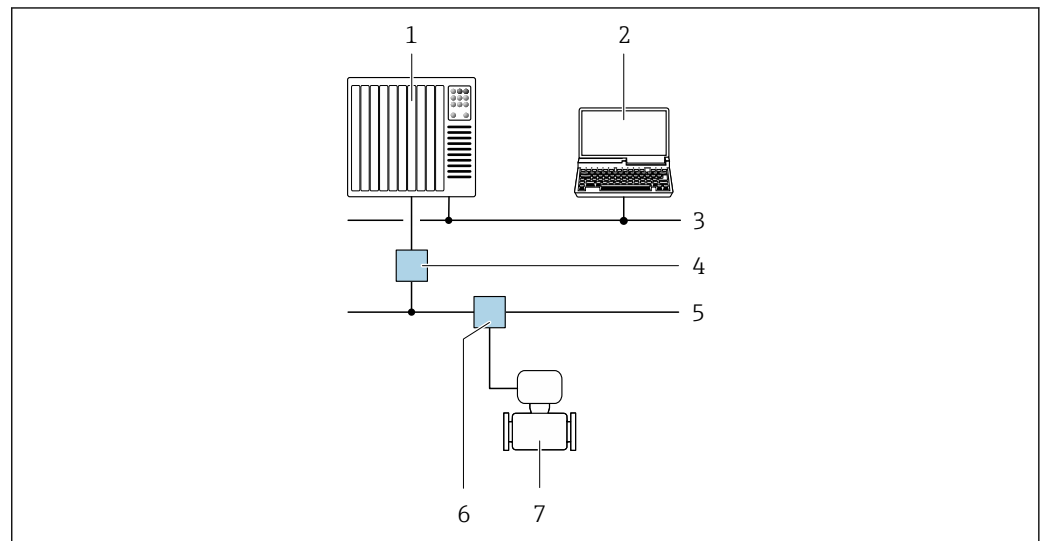


A0028838

 17 Options for remote operation via PROFIBUS PA network

- 1 Automation system
- 2 Computer with PROFIBUS network card
- 3 PROFIBUS DP network
- 4 Segment coupler PROFIBUS DP/PA
- 5 PROFIBUS PA network
- 6 T-box
- 7 Measuring device

Service interface

Via service interface (CDI-RJ45)

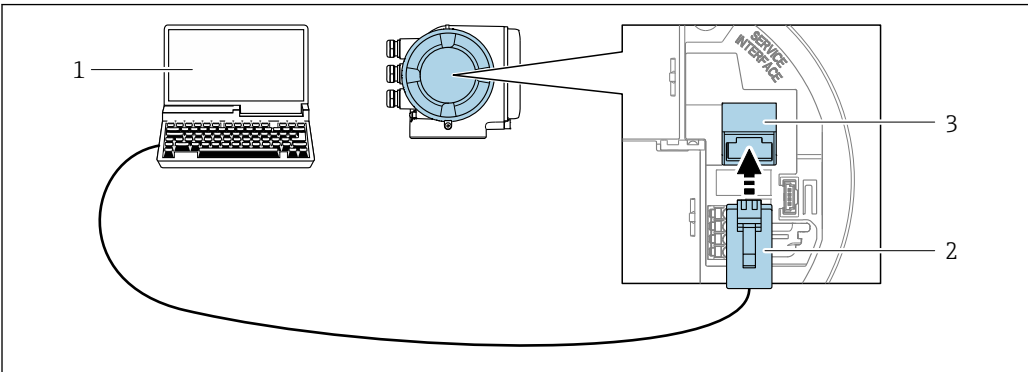


A0027563

18 Connection via service interface (CDI-RJ45)

- 1 Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 2 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

Via WLAN interface

The optional WLAN interface is available on the following device version:
Order code for "Display; operation", option G "4-line, backlit, graphic display; touch control + WLAN"

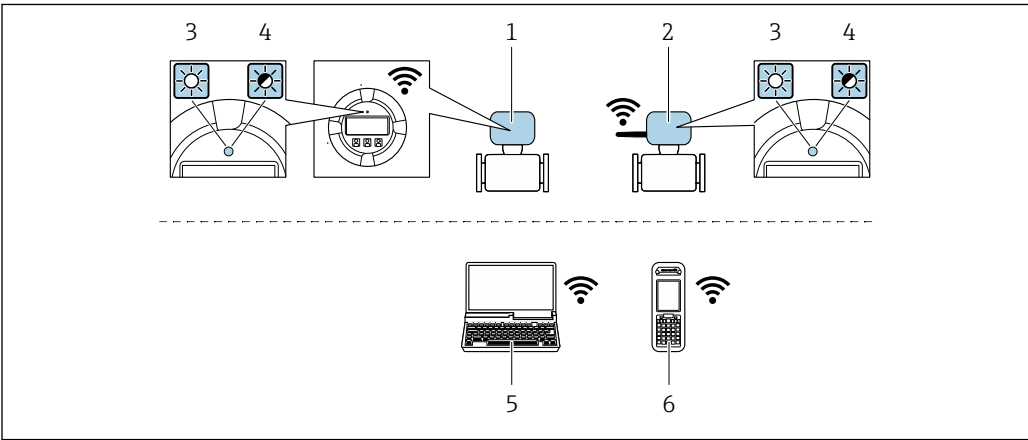

A0028839

- 1 Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- 4 LED flashing: WLAN connection established between operating unit and measuring device
- 5 Computer with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare)
- 6 Mobile handheld terminal with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or operating tool (e.g. FieldCare, DeviceCare)

Wireless LAN	IEEE 802.11 b/g (2.4 GHz) WLAN
Encryption	WPA2 PSK/TKIP AES-128
Configurable channels	1 to 11
Function	Access point with DHCP

Range with integrated antenna	Max. 10 m (32 ft)
Range with external antenna	Max. 50 m (164 ft)

Configuring the Internet protocol of the operating unit

NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.

- Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE

In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same operating unit. This could cause a network conflict.

- Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparation

- Enable WLAN reception on the operating unit.

Establishing a connection

1. Select the measuring device using the SSID (e.g. EH_Promass_300_A802000).

2. If necessary, select the WPA2 encryption method.

3. Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).

- ↳ LED on display module flashes: it is now possible to operate the measuring device with the Web browser, FieldCare or DeviceCare.



The serial number can be found on the nameplate.

Disconnecting

- Once the configuration is completed, disconnect the WLAN connection between the operating unit and the measuring device.

8.5.2 FieldCare

Function scope

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

- PROFIBUS PA protocol → 63
- CDI-RJ45 service interface → 64
- WLAN interface → 64

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook



For additional information about FieldCare, see Operating Instructions BA00027S and BA00059S


Source for device description files

See information → 68

Establishing a connection

For additional information, see Operating Instructions BA00027S and BA00059S

User interface

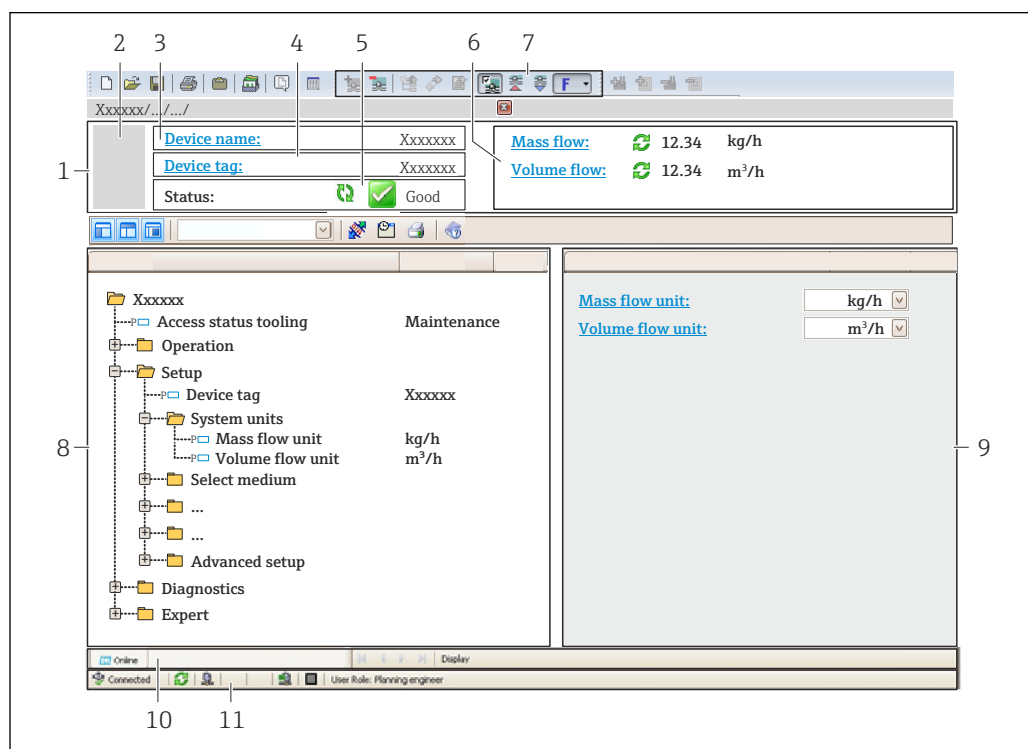

A0021051-EN

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Tag name
- 5 Status area with status signal → 148
- 6 Display area for current measured values
- 7 Edit toolbar with additional functions such as save/restore, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

8.5.3 DeviceCare

Function scope

Tool to connect and configure Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.

For details, see Innovation Brochure IN01047S

Source for device description files

See information → 68

8.5.4 SIMATIC PDM

Function scope

SIMATIC PDM is a standardized, manufacturer-independent program from Siemens for the operation, configuration, maintenance and diagnosis of intelligent field devices via PROFIBUS PA protocol.

Source for device description files

See data →  68

9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

Firmware version	01.00.zz	- On the title page of the Operating instructions - On the transmitter nameplate - Firmware version Diagnostics → Device information → Firmware version
Release date of firmware version	08.2016	---
Manufacturer ID	0x11	Manufacturer ID Diagnostics → Device information → Manufacturer ID
Device type ID	0x156D	Device type Diagnostics → Device information → Device type
Profile version	3.02	---



For an overview of the different firmware versions for the device →  216

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via PROFIBUS protocol	Sources for obtaining device descriptions
FieldCare	www.endress.com → Download Area - CD-ROM (contact Endress+Hauser) - DVD (contact Endress+Hauser)
DeviceCare	www.endress.com → Download Area - CD-ROM (contact Endress+Hauser) - DVD (contact Endress+Hauser)
SIMATIC PDM (Siemens)	www.endress.com → Download Area

9.2 Device master file (GSD)

In order to integrate field devices into a bus system, the PROFIBUS system needs a description of the device parameters, such as output data, input data, data format, data volume and supported transmission rate.

These data are available in the device master file (GSD) which is provided to the PROFIBUS Master when the communication system is commissioned. In addition device bit maps, which appear as icons in the network structure, can also be integrated.

With the Profile 3.0 device master file (GSD) it is possible to exchange field devices made by different manufacturers without having to reconfigure.

Generally speaking two different GSD versions are possible with Profile 3.0 and higher.



- Before configuring, the user must decide which GSD should be used to operate the system.
- The setting can be changed via a Class 2 master.

9.2.1 Manufacturer-specific GSD

This GSD guarantees the unrestricted functionality of the measuring device. Device-specific process parameters and functions are therefore available.

Manufacturer-specific GSD	ID number	File name
PROFIBUS PA	0x156D	EH3x156D.gsd

The fact that the manufacturer-specific GSD should be used is specified in the **Ident number selector** parameter by selecting the **Manufacturer** option.



Where to acquire the manufacturer-specific GSD:

www.endress.com → Downloads area

9.2.2 Profile GSD

Differs in terms of the number of Analog Input blocks (AI) and the measured values. If a system is configured with a Profile GSD, it is possible to exchange devices made by different manufacturers. However, it is essential to ensure that the order of the cyclic process values is correct.

ID number	Supported blocks	Supported channels
0x9740	1 Analog Input 1 Totalizer	- Channel Analog Input: volume flow - Channel totalizer: volume flow
0x9741	2 Analog Input 1 Totalizer	- Channel Analog Input 1: volume flow - Channel Analog Input 2: mass flow - Channel totalizer: volume flow
0x9742	3 Analog Input 1 Totalizer	- Channel Analog Input 1: volume flow - Channel Analog Input 2: mass flow - Channel Analog Input 3: corrected volume flow - Channel totalizer: volume flow

The Profile GSD that is to be used is specified in the **Ident number selector** parameter by selecting the **Profile 0x9740** option, **Profile 0x9741** option or **Profile 0x9742** option.

9.3 Compatibility with earlier model

If the device is replaced, the measuring device Promass 300 supports the compatibility of the cyclic data with previous models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promass 300 GSD file.

Earlier models:

- Promass 80PROFIBUS PA
 - ID No.: 1528 (hex)
 - Extended GSD file: EH3x1528.gsd
 - Standard GSD file: EH3_1528.gsd
- Promass 83PROFIBUS PA
 - ID No.: 152A (hex)
 - Extended GSD file: EH3x152A.gsd
 - Standard GSD file: EH3_152A.gsd

9.3.1 Automatic identification (factory setting)

The Promass 300 PROFIBUS PA automatically recognizes the measuring device configured in the automation system (Promass 80 PROFIBUS PA or Promass 83 PROFIBUS PA) and makes the same input and output data and measured value status information available for cyclic data exchange.

Automatic identification is set in the **Ident number selector** parameter using the **Automatic mode** option (factory setting).

9.3.2 Manual setting

The manual setting is made in the **Ident number selector** parameter via the **Promass 80 (0x1528)** option or **Promass 83 (0x152A)** option.

Afterwards the Promass 300 PROFIBUS PA makes the same input and output data and measured value status information available for cyclic data exchange.

- If the Promass 300 PROFIBUS PA is acyclically configured via an operating program (Class 2 master), access is directly via the block structure or the parameters of the measuring device.
- If parameters have been changed in the device to be replaced (Promass 80 PROFIBUS PA or Promass 83 PROFIBUS PA) (parameter setting no longer corresponds to the original factory setting), these parameters must be changed accordingly in the new replacement Promass 300 PROFIBUS PA via an operating program (Class 2 master).

Example

The setting for low flow cut off has been changed from mass flow (factory setting) to corrected volume flow in a Promass 80 PROFIBUS PA currently in operation. This device is now replaced by a Promass 300 PROFIBUS PA.

After replacing the device, the assignment for the low flow cut off must also be changed manually in the Promass 300 PROFIBUS PA, i.e. to corrected volume flow, to ensure the measuring device behaves identically.

9.3.3 Replacing the measuring devices without changing the GSD file or restarting the controller

In the procedure described below, the device can be replaced without interrupting ongoing operation or restarting the controller. However with this procedure the measuring device is not fully integrated!

1. Replace the measuring device Promass 80 PROFIBUS PA or Promass 83 PROFIBUS PA with a Promass 300 PROFIBUS PA.

2. Set the device address: The same device address that was set for the Promass 80 or Promass 83 PROFIBUS PA must be used.
3. Connect the measuring device Promass 300 PROFIBUS PA.

If the factory setting had been changed on the replaced device (Promass 80 PROFIBUS PA or Promass 83 PROFIBUS PA), the following settings may need to be changed:

1. Configuration of the application-specific parameters.
2. Choice of process variables to be transmitted via the **Channel** parameter in the Analog Input or Totalizer function block.
3. Setting of the units for the process variables.

9.4 Using the GSD modules of the previous model

In the compatibility mode, all the modules already configured in the automation system are generally supported during cyclic data transmission. However, Promass 300 does not perform further processing for the following modules, i.e. the function is not executed:

- DISPLAY_VALUE
- BATCHING_QUANTITY
- BATCHING_FIX_COMP_QUANTITY

If the device is replaced, the measuring device Promass 300 supports the compatibility of the cyclic data with previous models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promass 300 GSD file.

9.4.1 Using the CONTROL_BLOCK module in the previous model

If the CONTROL_BLOCK module is used in the previous model, the control variables are processed further if relevant functionalities can be assigned for the Promass 300.

The functions are supported as follows depending on the previous model:

Previous model: Promass 80 PROFIBUS PA

Control variable	Function	Support
0 → 2	Positive zero return: ON	Yes
0 → 3	Positive zero return: OFF	Yes
0 → 4	Zero point adjustment: START	Yes
0 → 8	Measuring mode: UNIDIRECTIONAL	No
0 → 9	Measuring mode: BIDIRECTIONAL	Cause: The Profile Transducer Block Flow is no longer supported. To continue to use the functionality: Use the Totalizer operation mode parameter in the Totalizer function block.
0 → 24	UNIT TO BUS	No Cause: Functionality is no longer required as the unit is adopted automatically.

Previous model: Promass 83 PROFIBUS PA

Control variable	Function	Support
0 → 2	Positive zero return: ON	Yes
0 → 3	Positive zero return: OFF	Yes
0 → 4	Zero point adjustment: START	Yes

Control variable	Function	Support
0 → 8	Measuring mode: UNIDIRECTIONAL	No Cause: The Profile Transducer Block Flow is no longer supported. To continue to use the functionality: Use the Totalizer operation mode parameter in the Totalizer function block.
0 → 9	Measuring mode: BIDIRECTIONAL	
0 → 24	UNIT TO BUS	No Cause: Functionality is no longer required as the unit is adopted automatically.
0 → 25	Advanced diagnostics – Warning mode: ON	No To continue to use the functionality: The functionalities are offered in the "Heartbeat Technology" application package.
0 → 26	Advanced diagnostics – Warning mode: OFF	
0 → 70 to 78	Additional functions: Advanced diagnostics	

9.5 Cyclic data transmission

Cyclic data transmission when using the device master file (GSD).

9.5.1 Block model

The block model shows which input and output data the measuring device makes available for cyclic data exchange. Cyclic data exchange takes place with a PROFIBUS master (Class 1), e.g. a control system.

Measuring device				Control system
Transducer Block	Analog Input block 1 to 8	→ 74	Output value AI	→
			Output value TOTAL	→
	Totalizer block 1 to 3	→ 75	Controller SETTOT	←
			Configuration MODETOT	←
	Analog Output block 1 to 3	→ 77	Input values AO	←
	Discrete Input block 1 to 2	→ 77	Output values DI	→
	Discrete Output block 1 to 4	→ 78	Input values DO	←
				PROFIBUS PA

Defined order of modules

The measuring device works as a modular PROFIBUS slave. In contrast to a compact slave, a modular slave has a variable design and consists of several individual modules. The device master file (GSD) contains a description of the individual modules (input and output data) along with their individual properties.

The modules are permanently assigned to the slots, i.e. when configuring the modules, the order and the arrangement of the modules must be respected.

Slot	Module	Function block
1 to 8	AI	Analog Input block 1 to 8
9	TOTAL or SETTOT_TOTAL or SETTOT_MODETOT_TOTAL	Totalizer block 1
10		Totalizer block 2
11		Totalizer block 3
12...14	AO	Analog Output block 1 to 3
15...16	DI	Discrete Input block 1 to 2
17...20	DO	Discrete Output block 1 to 4

To optimize the data throughput rate of the PROFIBUS network, it is advisable to only configure modules that are processed in the PROFIBUS master system. If this results in gaps between the configured modules, these gaps must be assigned to the EMPTY_MODULE.

9.5.2 Description of the modules

The data structure is described from the perspective of the PROFIBUS master:

- Input data: Are sent from the measuring device to the PROFIBUS master.
- Output data: Are sent from the PROFIBUS master to the measuring device.

AI module (Analog Input)

Transmit an input variable from the measuring device to the PROFIBUS master (Class 1).

The selected input variable, along with the status, is cyclically transmitted to the PROFIBUS Master (Class 1) via the AI module. The input variable is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Eight Analog Input blocks are available (slot 1 to 8).

Selection: input variable

The input variable can be specified using the CHANNEL parameter.

CHANNEL	Input variable
32961	Mass flow
33122	Volume flow
33093	Corrected volume flow
901	Target fluid mass flow ¹⁾
793	Carrier mass flow ¹⁾
32850	Density
33092	Reference density
794	Concentration ¹⁾
33101	Temperature
263	Carrier tube temperature ²⁾
1042	Electronic temperature
1066	Oscillation frequency 0
1124	Oscillation amplitude 0
1062	Frequency fluctuation 0
1117	Oscillation damping 0
1054	Tube damping fluctuation 0
1056	Excitation current 0
1125	Signal asymmetry
2285	Current output 1
2286	Current output 2
2287	Current output 3

1) Only available with the Concentration application package

2) Only available with the Heartbeat Verification application package

Factory setting

Function block	Factory setting
AI 1	Mass flow
AI 2	Volume flow
AI 3	Corrected volume flow
AI 4	Density
AI 5	Reference density
AI 6	Temperature

Function block	Factory setting
AI 7	Off
AI 8	Off

Data structure

Input data of Analog Input

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

TOTAL module

Transmit a totalizer value from the measuring device to the PROFIBUS master (Class 1).

A selected totalizer value, along with the status, is cyclically transmitted to a PROFIBUS Master (Class 1) via the TOTAL module. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the totalizer value.

Three Totalizer blocks are available (slot 9 to 11).

Selection: totalizer value

The totalizer value can be specified using the CHANNEL parameter.

CHANNEL	Input variable
32961	Mass flow
33122	Volume flow
33093	Corrected volume flow
901	Target fluid mass flow ¹⁾
793	Carrier mass flow ¹⁾

1) Only available with the "Concentration" application package

Factory setting

Function block	Factory setting: TOTAL
Totalizer 1, 2 and 3	Mass flow

Data structure

Input data of TOTAL

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

SETTOT_TOTAL module

The module combination consists of the SETTOT and TOTAL functions:

- SETTOT: Control the totalizers via the PROFIBUS master.
- TOTAL: Transmit totalizer value, along with the status, to the PROFIBUS master.

Three Totalizer blocks are available (slot 9 to 11).

Selection: control totalizer

CHANNEL	Value SETTOT	Control totalizer
33310	0	Totalize
33046	1	Resetting
33308	2	Adopt totalizer initial setting

Factory setting

Function block	Factory setting: Value SETTOT (meaning)
Totalizer 1, 2 and 3	0 (totalizing)

*Data structure**Output data of SETTOT*

Byte 1
Control variable 1

Input data of TOTAL

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

SETTOT_MODETOT_TOTAL module

The module combination consists of the SETTOT, MODETOT and TOTAL functions:

- SETTOT: Control the totalizers via the PROFIBUS master.
- MODETOT: Configure the totalizers via the PROFIBUS master.
- TOTAL: Transmit totalizer value, along with the status, to the PROFIBUS master.

Three Totalizer blocks are available (slot 9 to 11).

Selection: totalizer configuration

CHANNEL	MODETOT value	Totalizer configuration
33306	0	Balancing
33028	1	Balance the positive flow
32976	2	Balance the negative flow
32928	3	Stop totalizing

Factory setting

Function block	Factory setting: Value MODETOT (meaning)
Totalizer 1, 2 and 3	0 (balancing)

*Data structure**Output data of SETTOT and MODETOT*

Byte 1	Byte 2
Control variable 1: SETTOT	Control variable 2: MODETOT

Input data of TOTAL

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

AO module (Analog Output)

Transmit a compensation value from the PROFIBUS master (Class 1) to the measuring device.

A compensation value, along with the status, is cyclically transmitted from the PROFIBUS Master (Class 1) to the measuring device via the AO module. The compensation value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the compensation value.

Three Analog Output blocks are available (slot 12 to 14).

Assigned compensation values

A compensation value is permanently assigned to the individual Analog Output blocks.

CHANNEL	Function block	Compensation value
306	AO 1	External pressure ¹⁾
307	AO 2	External temperature ¹⁾
488	AO 3	External reference density

1) The compensation values must be transmitted to the device in the SI basic unit



The selection is made via: Expert → Sensor → External compensation

*Data structure**Output data of Analog Output*

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IEEE 754)				Status

DI module (Discrete Input)

Transmit discrete input values from the measuring device to the PROFIBUS master (Class 1). Discrete input values are used by the measuring device to transmit the state of device functions to the PROFIBUS master (Class 1).

The DI module cyclically transmits the discrete input value, along with the status, to the PROFIBUS Master (Class 1). The discrete input value is depicted in the first byte. The second byte contains standardized status information pertaining to the input value.

Two Discrete Input blocks are available (slot 15 to 16).

Selection: device function

The device function can be specified using the CHANNEL parameter.

CHANNEL	Device function	Factory setting: Status (meaning)
894	Empty pipe detection	■ 0 (device function not active) ■ 1 (device function active)
865	Low flow cut off	
1430	Status verification ¹⁾	■ Bit 0: Verification status - Check not done ■ Bit 1: Verification status - Failed ■ Bit 2: Verification status - Busy ■ Bit 3: Verification status - Ready ■ Bit 4: Verification overall result - Failed ■ Bit 5: Verification overall result - Passed ■ Bit 6: Verification overall result - Check not done ■ Bit 7: Not used

1) Only available with the Heartbeat Verification application package

Factory setting

Function block	Factory setting
DI 1	Empty pipe detection
DI 2	Low flow cut off

*Data structure**Input data of Discrete Input*

Byte 1	Byte 2
Discrete	Status

DO module (Discrete Output)

Transmit discrete output values from the PROFIBUS master (Class 1) to the measuring device. Discrete output values are used by the PROFIBUS master (Class 1) to enable and disable device functions.

The DO module cyclically transmits the discrete output value, along with the status, to the measuring device. The discrete output value is depicted in the first byte. The second byte contains standardized status information pertaining to the output value.

Three Discrete Output blocks are available (slot 17 to 19).

Assigned device functions

A device function is permanently assigned to the individual Discrete Output blocks.

CHANNEL	Function block	Device function	Values: control (meaning)
891	DO 1	Flow override	■ 0 (disable device function) ■ 1 (enable device function)
890	DO 2	Zero point adjustment	
1429	DO 3	Start verification ¹⁾	
2210	DO 4	Relay output	■ 0 (non-conductive) ■ 1 (conductive)

1) Only available with the Heartbeat Verification application package

*Data structure**Output data of Discrete Output*

Byte 1	Byte 2
Discrete	Status

EMPTY_MODULE module

This module is used to assign empty spaces arising from modules not being used in the slots .

The measuring device works as a modular PROFIBUS slave. In contrast to a compact slave, a modular PROFIBUS slave has a variable design and consists of several individual modules. The GSD file contains a description of the individual modules along with their individual properties.

The modules are permanently assigned to the slots. When configuring the modules, it is absolutely essential to observe the sequence/arrangement of the modules. Any gaps between the configured modules must be filled with the EMPTY_MODULE.

10 Commissioning

10.1 Function check

Before commissioning the measuring device:

- ▶ Make sure that the post-installation and post-connection checks have been performed.
- "Post-installation check" checklist →  31
- "Post-connection check" checklist →  42

10.2 Switching on the measuring device

- ▶ After a successful function check, switch on the measuring device.
 - ↳ After a successful startup, the local display switches automatically from the startup display to the operational display.

 If nothing appears on the local display or a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting" →  141.

10.3 Connecting via FieldCare

- For FieldCare →  64 connection
- For connecting via FieldCare →  66
- For the FieldCare →  66 user interface

10.4 Configuring the device address via software

In the "Communication" submenu the device address can be set.

Navigation

"Setup" menu → Communication → Device address

10.4.1 PROFIBUS network


At time of delivery, the measuring device has the following factory setting:

Device address	126
----------------	-----

 If hardware addressing is active, software addressing is blocked

10.5 Setting the operating language


Factory setting: English or ordered local language

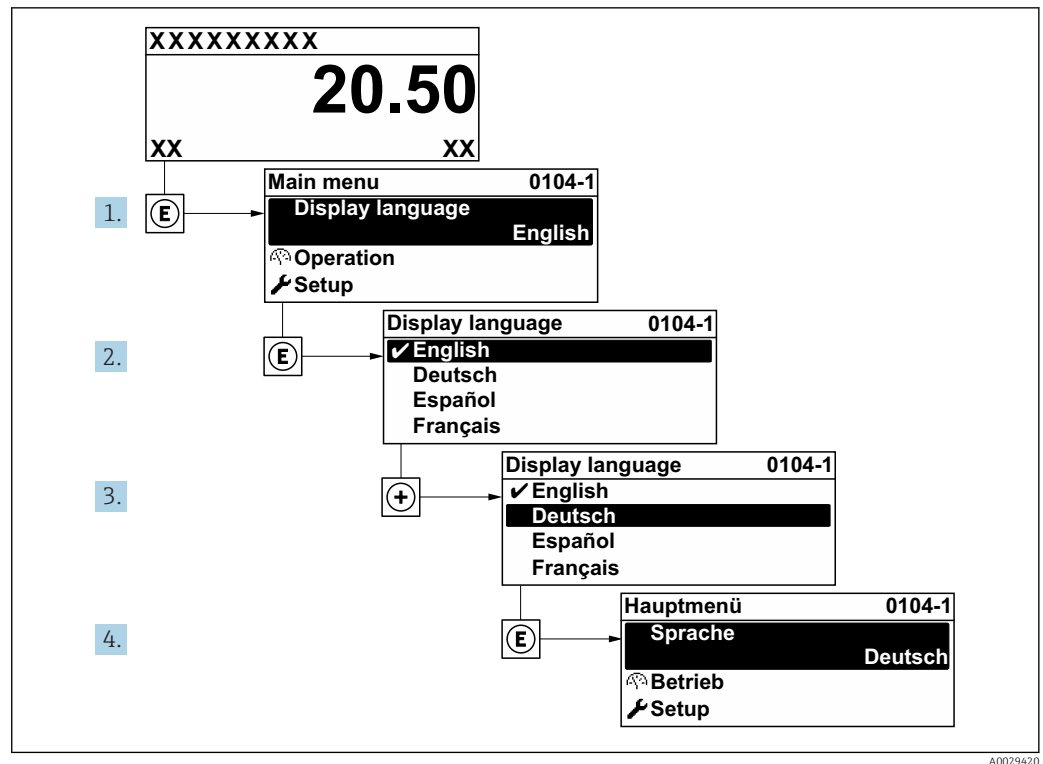

19 Taking the example of the local display

10.6 Configuring the measuring device

- The **Setup** menu with its guided wizards contains all the parameters needed for standard operation.
- Navigation to the **Setup** menu

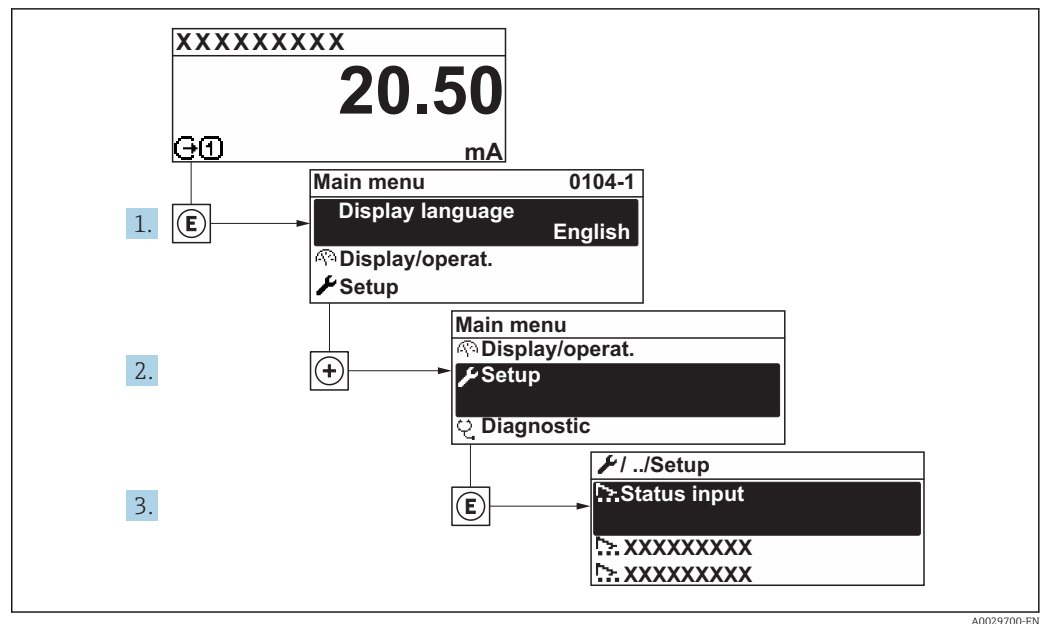

20 Taking the example of the local display


i Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

Navigation
"Setup" menu

⚙ Setup		
Device tag	→ 📖	83
▶ System units	→ 📖	83
▶ Medium selection	→ 📖	86
▶ Communication	→ 📖	87
▶ Analog inputs	→ 📖	89
▶ I/O configuration	→ 📖	90
▶ Current input 1 to n	→ 📖	91
▶ Status input 1 to n	→ 📖	92
▶ Current output 1 to n	→ 📖	92
▶ Pulse/frequency/switch output 1 to n	→ 📖	95
▶ Relay output 1 to n	→ 📖	104
▶ Display	→ 📖	107
▶ Low flow cut off	→ 📖	110
▶ Partially filled pipe detection	→ 📖	111
▶ Advanced setup	→ 📖	112

10.6.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

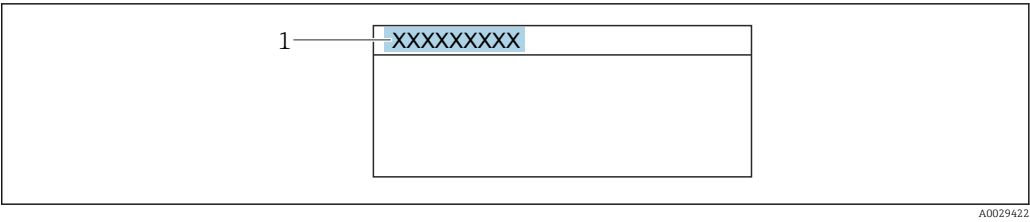

21 Header of the operational display with tag name

1 Tag name

 Enter the tag name in the "FieldCare" operating tool →  66

Navigation
"Setup" menu → Device tag

Parameter overview with brief description


Parameter	Description	User entry	Factory setting
Device tag	Enter the name for the measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Promass300/500PA

10.6.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

 Depending on the device version, not all submenus and parameters are available in every device. The selection can vary depending on the order code.

Navigation
"Setup" menu → System units

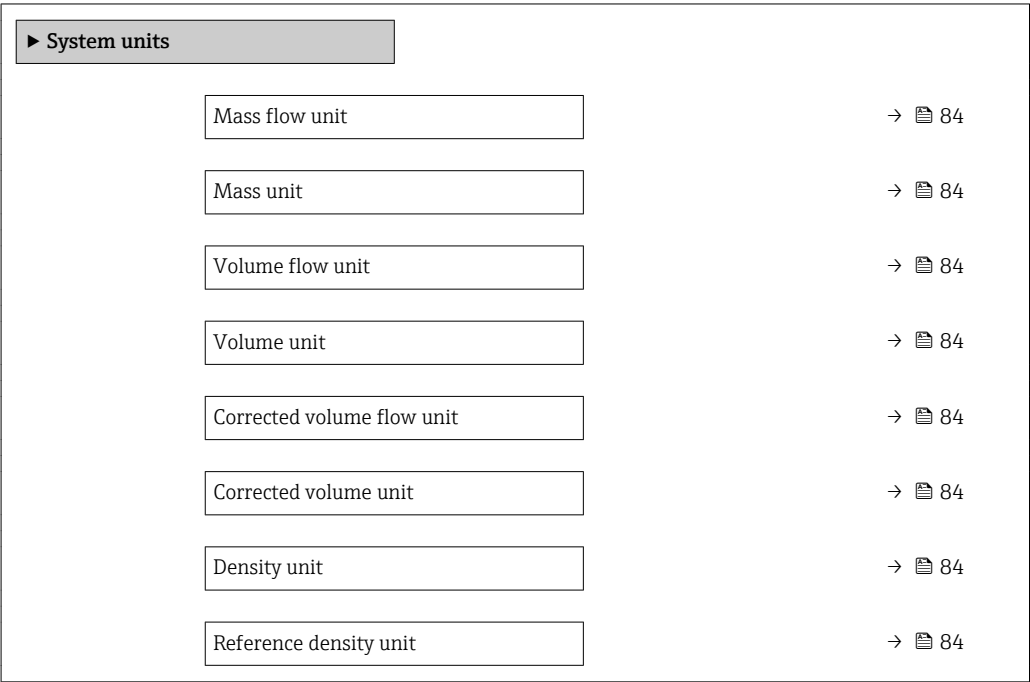

Temperature unit	→  85
Pressure unit	→  85

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Mass flow unit	Select mass flow unit. <i>Result</i> The selected unit applies for: - Output - Low flow cut off - Simulation process variable	Unit choose list	Country-specific: - kg/h (DN > 150 (6"): t/h) - lb/min
Mass unit	Select mass unit.	Unit choose list	Country-specific: - kg (DN > 150 (6"): t) - lb
Volume flow unit	Select volume flow unit. <i>Result</i> The selected unit applies for: - Output - Low flow cut off - Simulation process variable	Unit choose list	Country-specific: - l/h (DN > 150 (6"): m³/h) - gal/min (us)
Volume unit	Select volume unit.	Unit choose list	Country-specific: - l (DN > 150 (6"): m³) - gal (us)
Corrected volume flow unit	Select corrected volume flow unit. <i>Result</i> The selected unit applies for: Corrected volume flow parameter (→  131)	Unit choose list	Country-specific: - NI/h (DN > 150 (6"): Nm³/h) - Sft³/min
Corrected volume unit	Select corrected volume unit.	Unit choose list	Country-specific: - NI (DN > 150 (6"): Nm³) - Sft³
Density unit	Select density unit. <i>Result</i> The selected unit applies for: - Output - Simulation process variable - Density adjustment (Expert menu)	Unit choose list	Country-specific: - kg/l - lb/ft³
Reference density unit	Select reference density unit.	Unit choose list	Country-dependent - kg/NI - lb/Sft³

Parameter	Description	Selection	Factory setting
Temperature unit	Select temperature unit. <i>Result</i> The selected unit applies for: ▪ Electronic temperature parameter (6053) ▪ Maximum value parameter (6051) ▪ Minimum value parameter (6052) ▪ Maximum value parameter (6108) ▪ Minimum value parameter (6109) ▪ Carrier pipe temperature parameter (6027) ▪ Maximum value parameter (6029) ▪ Minimum value parameter (6030) ▪ Reference temperature parameter (1816) ▪ Temperature parameter	Unit choose list	Country-specific: ▪ °C ▪ °F
Pressure unit	Select process pressure unit. <i>Result</i> The unit is taken from: ▪ Pressure value parameter (→  87) ▪ External pressure parameter (→  87) ▪ Pressure value	Unit choose list	Country-specific: ▪ bar a ▪ psi a

10.6.3 Selecting and setting the medium

The **Select medium** wizard submenu contains parameters that must be configured in order to select and set the medium.

Navigation

"Setup" menu → Select medium

► Medium selection

Select medium

→ 87

Select gas type

→ 87

Reference sound velocity

→ 87

Temperature coefficient sound velocity

→ 87

Pressure compensation

→ 87

Pressure value

→ 87

External pressure

→ 87

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Select medium	–	Select medium type.	■ Liquid ■ Gas	Liquid
Select gas type	The Gas option is selected in the Select medium parameter.	Select measured gas type.	■ Air ■ Ammonia NH₃ ■ Argon Ar ■ Sulfur hexafluoride SF₆ ■ Oxygen O₂ ■ Ozone O₃ ■ Nitrogen oxide NO_x ■ Nitrogen N₂ ■ Nitrous oxide N₂O ■ Methane CH₄ ■ Hydrogen H₂ ■ Helium He ■ Hydrogen chloride HCl ■ Hydrogen sulfide H₂S ■ Ethylene C₂H₄ ■ Carbon dioxide CO₂ ■ Carbon monoxide CO ■ Chlorine Cl₂ ■ Butane C₄H₁₀ ■ Propane C₃H₈ ■ Propylene C₃H₆ ■ Ethane C₂H₆ ■ Others	Methane CH ₄
Reference sound velocity	In the Select gas type parameter, the Others option is selected.	Enter sound velocity of gas at 0 °C (32 °F).	1 to 99 999.9999 m/s	415.0 m/s
Temperature coefficient sound velocity	The Others option is selected in the Select gas type parameter.	Enter temperature coefficient for the gas sound velocity.	Positive floating-point number	0 (m/s)/K
Pressure compensation	–	Select pressure compensation type.	■ Off ■ Fixed value ■ External value ■ Current input 1 *	Off
Pressure value	The Fixed value option is selected in the Pressure compensation parameter.	Enter process pressure to be used for pressure correction.	Positive floating-point number	0 bar
External pressure	The External value option is selected in the Pressure compensation parameter.	Shows the external process pressure value.	Positive floating-point number	0 bar

* Visibility depends on order options or device settings

10.6.4 Configuring communication interface

The **Communication** submenu guides you systematically through all the parameters that have to be configured for selecting and setting the communication interface.

Navigation
"Setup" menu → Communication

► Communication

Device address

→ 88

Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device address	Enter device address.	0 to 126	126

10.6.5 Configuring the analog inputs

The **Analog inputs** submenu guides the user systematically to the individual **Analog input 1 to n** submenu. From here you get to the parameters of the individual analog input.

Navigation

"Setup" menu → Analog inputs

▶ Analog inputs

▶ Analog input 1 to n

Channel

→ 89

PV filter time

→ 89

Fail safe type

→ 90

Fail safe value

→ 90

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Channel	–	Select the process variable.	■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * ■ Density ■ Reference density ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Frequency fluctuation 0 ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 ■ Oscillation damping fluctuation 1 ■ Signal asymmetry ■ Exciter current 0 ■ Current input 1 *	Mass flow
PV filter time	–	Specify the time to suppress signal peaks. During the specified time the analog input does not respond to an erratic increase in the process variable.	Positive floating-point number	0

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Fail safe type	–	Select the failure mode.	■ Fail safe value ■ Fallback value ■ Off	Off
Fail safe value	In Fail safe type parameter, the Fail safe value option is selected.	Specify the values to be output when an error occurs.	Signed floating-point number	0

* Visibility depends on order options or device settings

10.6.6 Displaying the I/O configuration

The **I/O configuration** submenu guides the user systematically through all the parameters in which the configuration of the I/O modules is displayed.

Navigation

"Setup" menu → I/O configuration

► I/O configuration	
I/O module 1 to n terminal numbers	→ 90
I/O module 1 to n information	→ 90
I/O module 1 to n type	→ 90
Apply I/O configuration	→ 90
Conversion code	→ 90

Parameter overview with brief description

Parameter	Description	User interface / Selection / User entry	Factory setting
I/O module 1 to n terminal numbers	Shows the terminal numbers used by the I/O module.	■ Not used ■ 26-27 (I/O 1) ■ 24-25 (I/O 2)	–
I/O module 1 to n information	Shows information of the plugged I/O module.	■ Not plugged ■ Invalid ■ Not configurable ■ Configurable ■ Fieldbus	–
I/O module 1 to n type	Shows the I/O module type.	■ Off ■ Current output * ■ Current input * ■ Status input * ■ Pulse/frequency/switch output *	Off
Apply I/O configuration	Apply parameterization of the freely configurable I/O module.	■ No ■ Yes	No
Conversion code	Enter the code in order to change the I/O configuration.	Positive integer	0

* Visibility depends on order options or device settings

10.6.7 Configuring the current input

The "**Current input**" wizard guides the user systematically through all the parameters that have to be set for configuring the current input.

Navigation

"Setup" menu → Current input

► Current input 1 to n	
Terminal number	→ ⓘ 91
Signal mode	→ ⓘ 91
0/4 mA value	→ ⓘ 91
20 mA value	→ ⓘ 91
Current span	→ ⓘ 91
Failure mode	→ ⓘ 91
Failure value	→ ⓘ 91

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	–	Shows the terminal numbers used by the current input module.	■ Not used ■ 24-25 (I/O 2)	–
Signal mode	The measuring device is not approved for use in the hazardous area with type of protection Ex-i.	Select the signal mode for the current input.	■ Passive ■ Active	Passive
0/4 mA value	–	Enter 4 mA value.	Signed floating-point number	0
20 mA value	–	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter
Current span	–	Select current range for process value output and upper/lower level for alarm signal.	■ 4...20 mA ■ 4...20 mA NAMUR ■ 4...20 mA US ■ 0...20 mA	Country-specific: ■ 4...20 mA NAMUR ■ 4...20 mA US
Failure mode	–	Define input behavior in alarm condition.	■ Alarm ■ Last valid value ■ Defined value	Alarm
Failure value	In the Failure mode parameter, the Defined value option is selected.	Enter value to be used by the device if input value from external device is missing.	Signed floating-point number	0

10.6.8 Configuring the status input

The **Status input** submenu guides the user systematically through all the parameters that have to be set for configuring the status input.

Navigation
"Setup" menu → Status input

► Status input 1 to n

Assign status input

→ 92

Terminal number

→ 92

Active level

→ 92

Terminal number

→ 92

Response time status input

→ 92

Terminal number

→ 92

Parameter overview with brief description

Parameter	Description	User interface / Selection / User entry	Factory setting
Terminal number	Shows the terminal numbers used by the status input module.	■ Not used ■ 24-25 (I/O 2)	–
Assign status input	Select function for the status input.	■ Off ■ Reset totalizer 1 ■ Reset totalizer 2 ■ Reset totalizer 3 ■ Reset all totalizers ■ Flow override	Off
Active level	Define input signal level at which the assigned function is triggered.	■ High ■ Low	High
Response time status input	Define the minimum amount of time the input signal level must be present before the selected function is triggered.	5 to 200 ms	50 ms

10.6.9 Configuring the current output

The **Current output** wizard guides you systematically through all the parameters that have to be set for configuring the current output.

Navigation
"Setup" menu → Current output

► Current output 1 to n

Terminal number

→ 93

Signal mode	→  93
Assign current output 1 to n	→  93
Current span	→  93
0/4 mA value	→  94
20 mA value	→  94
Fixed current	→  94
Failure mode	→  94
Failure current	→  94

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Assign current output 1 to n	–	Select process variable for current output.	■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * ■ Density ■ Reference density ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Oscillation amplitude 0 * ■ Frequency fluctuation 0 ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 ■ Signal asymmetry ■ Exciter current 0	Mass flow
Terminal number	–	Shows the terminal numbers used by the current output module.	■ Not used ■ 24-25 (I/O 2)	–
Current span	–	Select current range for process value output and upper/lower level for alarm signal.	■ 4...20 mA NAMUR ■ 4...20 mA US ■ 4...20 mA ■ 0...20 mA ■ Fixed current	Country-specific: ■ 4...20 mA NAMUR ■ 4...20 mA US
Signal mode	–	Select the signal mode for the current output.	■ Passive ■ Active	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
0/4 mA value	One of the following options is selected in the Current span parameter (→ 93): 4...20 mA NAMUR 4...20 mA US 4...20 mA 0...20 mA	Enter 4 mA value.	Signed floating-point number	Country-specific: 0 kg/h 0 lb/min
20 mA value	One of the following options is selected in the Current span parameter (→ 93): 4...20 mA NAMUR 4...20 mA US 4...20 mA 0...20 mA	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter
Fixed current	In the Current span parameter (→ 93), the Fixed current option is selected.	Defines the fixed output current.	0 to 22.5 mA	22.5 mA
Failure mode	One of the following options is selected in the Assign current output parameter (→ 93): - Mass flow - Volume flow - Corrected volume flow - Target mass flow * - Carrier mass flow * - Density - Reference density - Concentration * - Temperature - Carrier pipe temperature * - Electronic temperature - Oscillation frequency 0 - Oscillation amplitude 0 * - Frequency fluctuation 0 - Oscillation damping 0 - Oscillation damping fluctuation 0 - Signal asymmetry - Exciter current 0 One of the following options is selected in the Current span parameter (→ 93): 4...20 mA NAMUR 4...20 mA US 4...20 mA 0...20 mA	Define output behavior in alarm condition.	- Min. - Max. - Last valid value - Actual value - Defined value	Max.
Failure current	In the Failure mode parameter, the Defined value option is selected.	Enter current output value in alarm condition.	0 to 22.5 mA	22.5 mA

* Visibility depends on order options or device settings

10.6.10 Configuring the pulse/frequency/switch output

The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

Navigation

"Setup" menu → Advanced setup → Pulse/frequency/switch output

► Pulse/frequency/switch output 1 to n

Operating mode

→ 95

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Operating mode	Define the output as a pulse, frequency or switch output.	■ Pulse ■ Frequency ■ Switch	Pulse

Configuring the pulse output

Navigation

"Setup" menu → Pulse/frequency/switch output

► Pulse/frequency/switch output 1 to n

Operating mode

Terminal number

Signal mode

Assign pulse output

Value per pulse

Pulse width

Failure mode

Invert output signal

→ 96

→ 96

→ 96

→ 96

→ 96

→ 96

→ 96

→ 96

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	■ Pulse ■ Frequency ■ Switch	Pulse
Terminal number	–	Shows the terminal numbers used by the PFS output module.	■ Not used ■ 24-25 (I/O 2)	–
Signal mode	–	Select the signal mode for the PFS output.	■ Passive ■ Active	Passive
Assign pulse output 1 to n	In the Operating mode parameter, the Pulse option is selected.	Select process variable for pulse output.	■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow *	Off
Value per pulse	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 96): ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow *	Enter measured value at which a pulse is output.	Signed floating-point number	Depends on country and nominal diameter
Pulse width	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 96): ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow *	Define time width of the output pulse.	0.05 to 2 000 ms	100 ms
Failure mode	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 96): ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow *	Define output behavior in alarm condition.	■ Actual value ■ No pulses	No pulses
Invert output signal	–	Invert the output signal.	■ No ■ Yes	No

* Visibility depends on order options or device settings

Configuring the frequency output

Navigation

"Setup" menu → Pulse/frequency/switch output

► Pulse/frequency/switch output 1 to n		
Operating mode	→ 	97
Terminal number	→ 	97
Signal mode	→ 	97
Assign frequency output	→ 	98
Minimum frequency value	→ 	98
Maximum frequency value	→ 	99
Measuring value at minimum frequency	→ 	99
Measuring value at maximum frequency	→ 	100
Failure mode	→ 	100
Failure frequency	→ 	101
Invert output signal	→ 	101

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	■ Pulse ■ Frequency ■ Switch	Pulse
Terminal number	–	Shows the terminal numbers used by the PFS output module.	■ Not used ■ 24-25 (I/O 2)	–
Signal mode	–	Select the signal mode for the PFS output.	■ Passive ■ Active	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Assign frequency output	In the Operating mode parameter (→ 95), the Frequency option is selected.	Select process variable for frequency output.	■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * ■ Density ■ Reference density ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Oscillation amplitude 0 * ■ Frequency fluctuation 0 ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 ■ Signal asymmetry ■ Exciter current 0 ■ HBSI	Off
Minimum frequency value	In the Operating mode parameter, the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→ 98): ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * ■ Density ■ Reference density ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Frequency fluctuation 0 ■ Oscillation amplitude 0 * ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 ■ Signal asymmetry ■ Exciter current 0	Enter minimum frequency.	0.0 to 10 000.0 Hz	0.0 Hz

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Maximum frequency value	In the Operating mode parameter, the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→  98): ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * ■ Density ■ Reference density ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Frequency fluctuation 0 ■ Oscillation amplitude 0 * ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 ■ Signal asymmetry ■ Exciter current 0	Enter maximum frequency.	0.0 to 10000.0 Hz	10000.0 Hz
Measuring value at minimum frequency	In the Operating mode parameter, the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→  98): ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * ■ Density ■ Reference density ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Frequency fluctuation 0 ■ Oscillation amplitude 0 * ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 ■ Signal asymmetry ■ Exciter current 0	Enter measured value for minimum frequency.	Signed floating-point number	Depends on country and nominal diameter

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Measuring value at maximum frequency	In the Operating mode parameter, the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→ 98): ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * ■ Density ■ Reference density ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Frequency fluctuation 0 ■ Oscillation amplitude 0 * ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 ■ Signal asymmetry ■ Exciter current 0	Enter measured value for maximum frequency.	Signed floating-point number	Depends on country and nominal diameter
Failure mode	In the Operating mode parameter, the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→ 98): ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * ■ Density ■ Reference density ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Frequency fluctuation 0 ■ Oscillation amplitude 0 * ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 ■ Signal asymmetry ■ Exciter current 0	Define output behavior in alarm condition.	■ Actual value ■ Defined value ■ 0 Hz	0 Hz

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Failure frequency	In the Operating mode parameter, the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→  98): ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * ■ Density ■ Reference density ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Frequency fluctuation 0 ■ Oscillation amplitude 0 * ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 ■ Signal asymmetry ■ Exciter current 0	Enter frequency output value in alarm condition.	0.0 to 12 500.0 Hz	0.0 Hz
Invert output signal	–	Invert the output signal.	■ No ■ Yes	No

* Visibility depends on order options or device settings

Configuring the switch output

Navigation

"Setup" menu → Pulse/frequency/switch output

► Pulse/frequency/switch output 1 to n		
Operating mode		→ 102
Terminal number		→ 102
Signal mode		→ 102
Switch output function		→ 103
Assign diagnostic behavior		→ 103
Assign limit		→ 103
Assign flow direction check		→ 103
Assign status		→ 103
Switch-on value		→ 103
Switch-off value		→ 103
Switch-on delay		→ 103
Switch-off delay		→ 104
Failure mode		→ 104
Invert output signal		→ 104

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	■ Pulse ■ Frequency ■ Switch	Pulse
Terminal number	–	Shows the terminal numbers used by the PFS output module.	■ Not used ■ 24-25 (I/O 2)	–
Signal mode	–	Select the signal mode for the PFS output.	■ Passive ■ Active	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch output function	In the Operating mode parameter the Switch option is selected.	Select function for switch output.	- Off - On - Diagnostic behavior - Limit - Flow direction check - Status	Off
Assign diagnostic behavior	- In the Operating mode parameter, the Switch option is selected. - In the Switch output function parameter, the Diagnostic behavior option is selected.	Select diagnostic behavior for switch output.	- Alarm - Alarm or warning - Warning	Alarm
Assign limit	- In the Operating mode parameter, the Switch option is selected. - In the Switch output function parameter, the Limit option is selected.	Select process variable for limit function.	- Mass flow - Volume flow - Corrected volume flow - Target mass flow * - Carrier mass flow * - Density - Reference density - Concentration * - Temperature - Oscillation damping - Totalizer 1 - Totalizer 2 - Totalizer 3	Mass flow
Assign flow direction check	- The Switch option is selected in the Operating mode parameter. - The Flow direction check option is selected in the Switch output function parameter.	Select process variable for flow direction monitoring.	- Off - Volume flow - Mass flow - Corrected volume flow	Mass flow
Assign status	- The Switch option is selected in the Operating mode parameter. - The Status option is selected in the Switch output function parameter.	Select device status for switch output.	- Partially filled pipe detection - Low flow cut off - Digital output 4	Partially filled pipe detection
Switch-on value	- In the Operating mode parameter, the Switch option is selected. - In the Switch output function parameter, the Limit option is selected.	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: 0 kg/h 0 lb/min
Switch-off value	- In the Operating mode parameter, the Switch option is selected. - In the Switch output function parameter, the Limit option is selected.	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: 0 kg/h 0 lb/min
Switch-on delay	- The Switch option is selected in the Operating mode parameter. - The Limit option is selected in the Switch output function parameter.	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch-off delay	▪ The Switch option is selected in the Operating mode parameter. ▪ The Limit option is selected in the Switch output function parameter.	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Failure mode	–	Define output behavior in alarm condition.	▪ Actual status ▪ Open ▪ Closed	Open
Invert output signal	–	Invert the output signal.	▪ No ▪ Yes	No

* Visibility depends on order options or device settings

10.6.11 Configuring the relay output

The **Relay output** wizard guides the user systematically through all the parameters that have to be set for configuring the relay output.

Navigation

"Setup" menu → Relay output 1 to n

► RelaisOutput 1 to n

Switch output function

→ 105

Assign flow direction check

→ 105

Assign limit

→ 105

Assign diagnostic behavior

→ 105

Assign status

→ 105

Switch-off value

→ 105

Switch-on value

→ 105

Failure mode

→ 105

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Relay output function	–	Select the function for the relay output.	■ Closed ■ Open ■ Diagnostic behavior ■ Limit ■ Flow direction check ■ Digital Output	Closed
Terminal number	–	Shows the terminal numbers used by the relay output module.	■ Not used ■ 24-25 (I/O 2)	–
Assign flow direction check	In the Relay output function parameter, the Flow direction check option is selected.	Select process variable for flow direction monitoring.	■ Off ■ Volume flow ■ Mass flow ■ Corrected volume flow	Mass flow
Assign limit	In the Relay output function parameter, the Limit option is selected.	Select process variable for limit function.	■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * ■ Density ■ Reference density ■ Concentration * ■ Temperature ■ Oscillation damping ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3	Mass flow
Assign diagnostic behavior	In the Relay output function parameter, the Diagnostic behavior option is selected.	Select diagnostic behavior for switch output.	■ Alarm ■ Alarm or warning ■ Warning	Alarm
Assign status	In the Relay output function parameter, the Digital Output option is selected.	Select device status for switch output.	■ Partially filled pipe detection ■ Low flow cut off ■ Digital output 4	Partially filled pipe detection
Switch-off value	In the Relay output function parameter, the Limit option is selected.	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: ■ 0 kg/h ■ 0 lb/min
Switch-off delay	In the Relay output function parameter, the Limit option is selected.	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Switch-on value	In the Relay output function parameter, the Limit option is selected.	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: ■ 0 kg/h ■ 0 lb/min
Switch-on delay	In the Relay output function parameter, the Limit option is selected.	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s
Failure mode	–	Define output behavior in alarm condition.	■ Actual status ■ Open ■ Closed	Open

* Visibility depends on order options or device settings

10.6.12 Configuring the double pulse output

The **Double pulse output** submenu guides the user systematically through all the parameters that have to be set for configuring the double pulse output.

Navigation

"Setup" menu → Double pulse output

► Double pulse output	
Master terminal number	→ ⓘ 106
Slave terminal number	→ ⓘ 106
Signal mode	→ ⓘ 106
Assign pulse output 1	→ ⓘ 106
Measuring mode	→ ⓘ 106
Value per pulse	→ ⓘ 106
Pulse width	→ ⓘ 106
Failure mode	→ ⓘ 107
Invert output signal	→ ⓘ 107

Parameter overview with brief description

Parameter	Description	Selection / User interface / User entry	Factory setting
Signal mode	Select the signal mode for the double pulse output.	- Passive - Active - Passive NAMUR	Passive
Master terminal number	Shows the terminal numbers used by the master of the double pulse output module.	- Not used 24-25 (I/O 2)	–
Slave terminal number		- Not used 24-25 (I/O 2) 22-23 (I/O 3)	–
Assign pulse output 1	Select process variable for pulse output.	- Off - Mass flow - Volume flow - Corrected volume flow - Target mass flow * - Carrier mass flow *	Off
Measuring mode	Select measuring mode for pulse output.	- Forward flow - Forward/Reverse flow - Reverse flow - Reverse flow compensation	Forward flow
Value per pulse	Enter measured value at which a pulse is output.	Signed floating-point number	Depends on country and nominal diameter
Pulse width	Define time width of the output pulse.	0.5 to 2 000 ms	0.5 ms

Parameter	Description	Selection / User interface / User entry	Factory setting
Failure mode	Define output behavior in alarm condition.	Actual value No pulses	No pulses
Invert output signal	Invert the output signal.	No Yes	No

* Visibility depends on order options or device settings

10.6.13 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can configured for configuring the local display.

Navigation

"Setup" menu → Display

► Display

Format display

→ ⓘ 108

Value 1 display

→ ⓘ 108

0% bargraph value 1

→ ⓘ 108

100% bargraph value 1

→ ⓘ 108

Value 2 display

→ ⓘ 108

Value 3 display

→ ⓘ 108

0% bargraph value 3

→ ⓘ 108

100% bargraph value 3

→ ⓘ 109

Value 4 display

→ ⓘ 109

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	■ 1 value, max. size ■ 1 bargraph + 1 value ■ 2 values ■ 1 value large + 2 values ■ 4 values	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * ■ Density ■ Reference density * ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Oscillation amplitude 0 * ■ Frequency fluctuation 0 ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 ■ Signal asymmetry ■ Exciter current 0 ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Current output 1	Mass flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: ■ 0 kg/h ■ 0 lb/min
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter	None
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→ 108)	None
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: ■ 0 kg/h ■ 0 lb/min

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→  108)	None

* Visibility depends on order options or device settings

10.6.14 Configuring the low flow cut off

The **Low flow cut off** wizard systematically guides the user through all the parameters that must be set to configure low flow cut off.

Navigation

"Setup" menu → Low flow cut off

► Low flow cut off	
Assign process variable	→  110
On value low flow cutoff	→  110
Off value low flow cutoff	→  110
Pressure shock suppression	→  110

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	–	Select process variable for low flow cut off.	- Off - Mass flow - Volume flow - Corrected volume flow	Mass flow
On value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→  110): - Mass flow - Volume flow - Corrected volume flow	Enter on value for low flow cut off.	Positive floating-point number	Depends on country and nominal diameter
Off value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→  110): - Mass flow - Volume flow - Corrected volume flow	Enter off value for low flow cut off.	0 to 100.0 %	50 %
Pressure shock suppression	One of the following options is selected in the Assign process variable parameter (→  110): - Mass flow - Volume flow - Corrected volume flow	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	0 s

10.6.15 Configuring the partial filled pipe detection

The **Partial filled pipe detection** wizard guides you systematically through all parameters that have to be set for configuring the monitoring of the pipe filling.

Navigation

"Setup" menu → Partially filled pipe detection

► Partially filled pipe detection	
Assign process variable	→  111
Low value partial filled pipe detection	→  111
High value partial filled pipe detection	→  111
Response time part. filled pipe detect.	→  111


Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	–	Select process variable for partially filled pipe detection.	■ Off ■ Density ■ Reference density	Off
Low value partial filled pipe detection	One of the following options is selected in the Assign process variable parameter (→  111): ■ Density ■ Reference density	Enter lower limit value for deactivating partially filled pipe detection.	Signed floating-point number	200
High value partial filled pipe detection	One of the following options is selected in the Assign process variable parameter (→  111): ■ Density ■ Reference density	Enter upper limit value for deactivating partially filled pipe detection.	Signed floating-point number	6 000
Response time part. filled pipe detect.	One of the following options is selected in the Assign process variable parameter (→  111): ■ Density ■ Reference density	Enter time before diagnostic message is displayed for partially filled pipe detection.	0 to 100 s	1 s

10.7 Advanced settings

The **Advanced setup** submenu together with its submenus contains parameters for specific settings.

Navigation to the "Advanced setup" submenu

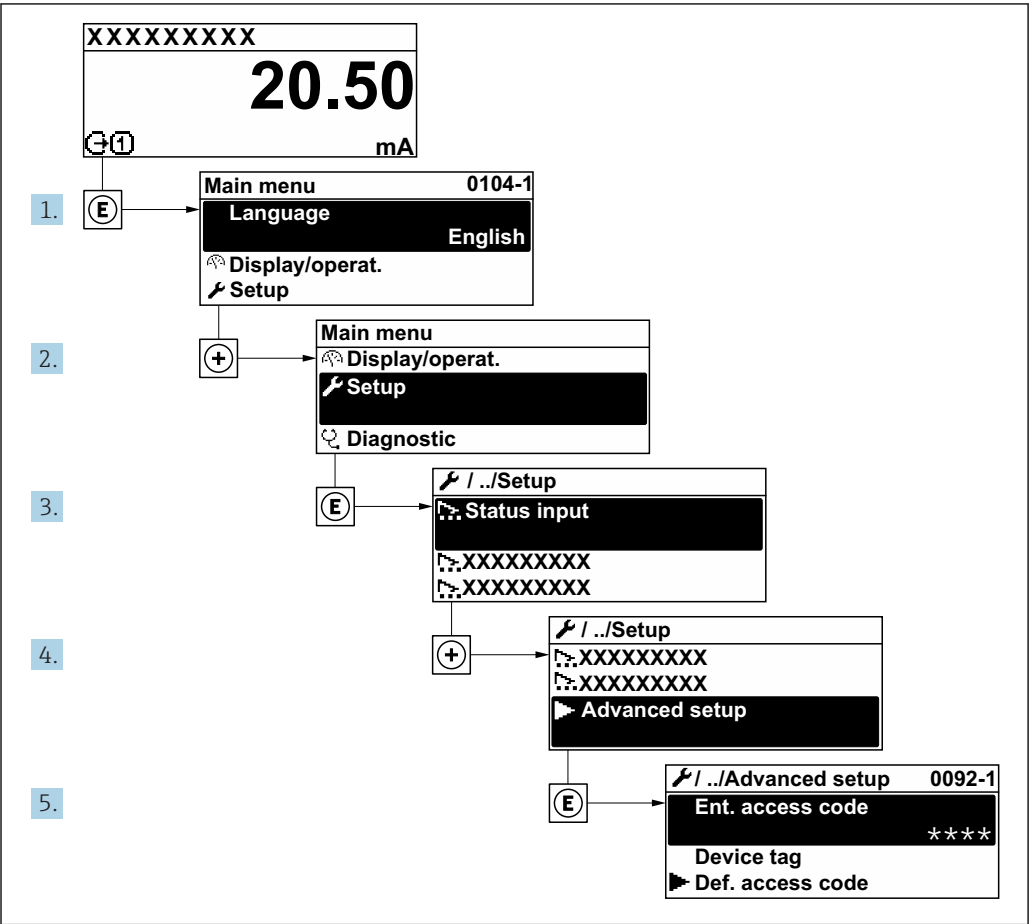


A0029564-EN

i The number of submenus can vary depending on the device version. Some submenus are not dealt with in the Operating Instructions. These submenus and the parameters they contain are explained in the Special Documentation for the device.

Navigation

"Setup" menu → Advanced setup

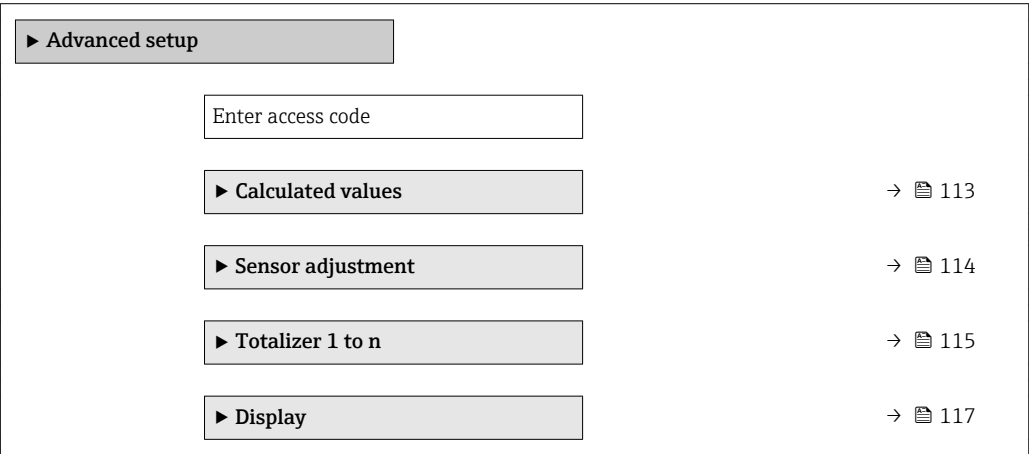

► WLAN settings	→ 120
► Concentration	
► Heartbeat setup	
► Configuration backup	→ 121
► Administration	→ 122

10.7.1 Calculated values

The **Calculated values** submenu contains parameters for calculating the corrected volume flow.

Navigation

"Setup" menu → Advanced setup → Calculated values

► Calculated values	
► Corrected volume flow calculation	
Corrected volume flow calculation	→ 113
External reference density	→ 113
Fixed reference density	→ 114
Reference temperature	→ 114
Linear expansion coefficient	→ 114
Square expansion coefficient	→ 114

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Corrected volume flow calculation	–	Select reference density for calculating the corrected volume flow.	■ Fixed reference density ■ Calculated reference density ■ Reference density by API table 53 ■ External reference density ■ Current input 1 *	Calculated reference density
External reference density	–	Shows external reference density.	Floating point number with sign	–

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Fixed reference density	The Fixed reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter fixed value for reference density.	Positive floating-point number	1 kg/Nl
Reference temperature	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter reference temperature for calculating the reference density.	-273.15 to 99 999 °C	Country-specific: ■ +20 °C ■ +68 °F
Linear expansion coefficient	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter linear, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0
Square expansion coefficient	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	For media with a non-linear expansion pattern: enter the quadratic, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0

* Visibility depends on order options or device settings

10.7.2 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu → Advanced setup → Sensor adjustment

► Sensor adjustment	
Installation direction	→ ⓘ 114
► Zero point adjustment	→ ⓘ 114

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Installation direction	Set sign of flow direction to match the direction of the arrow on the sensor.	■ Flow in arrow direction ■ Flow against arrow direction	Flow in arrow direction

Zero point adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions → ⓘ 231. Therefore, a zero point adjustment in the field is generally not required.

Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

Navigation

"Setup" menu → Advanced setup → Sensor adjustment → Zero point adjustment

► Zero point adjustment		
Zero point adjustment control		→ 115
Progress		→ 115

Parameter overview with brief description

Parameter	Description	Selection / User interface	Factory setting
Zero point adjustment control	Start zero point adjustment.	■ Cancel ■ Busy ■ Zero point adjust failure ■ Start	Cancel
Progress	Shows the progress of the process.	0 to 100 %	–

10.7.3 Configuring the totalizer

In the "**Totalizer 1 to n**" submenu the individual totalizer can be configured.

Navigation

"Setup" menu → Advanced setup → Totalizer 1 to n

► Totalizer 1 to n		
Assign process variable		→ 115
Unit totalizer		→ 115
Totalizer operation mode		→ 116
Control Totalizer 1 to n		→ 116
Failure mode		→ 116

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Assign process variable	Select process variable for totalizer.	■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow *	Mass flow
Unit totalizer	Select the unit for the process variable of the totalizer.	Unit choose list	Country-specific: ■ kg ■ lb

Parameter	Description	Selection	Factory setting
Control Totalizer 1 to n	Control totalizer value.	■ Totalize ■ Reset + hold ■ Preset + hold	Totalize
Totalizer operation mode	Select totalizer calculation mode.	■ Net flow total ■ Forward flow total ■ Reverse flow total ■ Last valid value	Net flow total
Failure mode	Define the totalizer behavior in the event of a device alarm.	■ Stop ■ Actual value ■ Last valid value	Actual value

* Visibility depends on order options or device settings

10.7.4 Carrying out additional display configurations

In the **Display** submenu you can set all the parameters associated with the configuration of the local display.

Navigation

"Setup" menu → Advanced setup → Display

► Display		
Format display	→ 	118
Value 1 display	→ 	118
0% bargraph value 1	→ 	118
100% bargraph value 1	→ 	118
Decimal places 1	→ 	118
Value 2 display	→ 	118
Decimal places 2	→ 	118
Value 3 display	→ 	118
0% bargraph value 3	→ 	119
100% bargraph value 3	→ 	119
Decimal places 3	→ 	119
Value 4 display	→ 	119
Decimal places 4	→ 	119
Display language	→ 	119
Display interval	→ 	119
Display damping	→ 	119
Header	→ 	119
Header text	→ 	119
Separator	→ 	120
Backlight	→ 	120

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	■ 1 value, max. size ■ 1 bargraph + 1 value ■ 2 values ■ 1 value large + 2 values ■ 4 values	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * ■ Density ■ Reference density * ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Oscillation amplitude 0 * ■ Frequency fluctuation 0 ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 ■ Signal asymmetry ■ Exciter current 0 ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Current output 1	Mass flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: ■ 0 kg/h ■ 0 lb/min
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the Value 1 display parameter.	Select the number of decimal places for the display value.	■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx	x.xx
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter	None
Decimal places 2	A measured value is specified in the Value 2 display parameter.	Select the number of decimal places for the display value.	■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx	x.xx
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→  108)	None

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: ■ 0 kg/h ■ 0 lb/min
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 3	A measured value is specified in the Value 3 display parameter.	Select the number of decimal places for the display value.	■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx	x.xx
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter (→ 108)	None
Decimal places 4	A measured value is specified in the Value 4 display parameter.	Select the number of decimal places for the display value.	■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx	x.xx
Display language	A local display is provided.	Set display language.	■ English ■ Deutsch * ■ Français * ■ Español * ■ Italiano * ■ Nederlands * ■ Portuguesa * ■ Polski * ■ русский язык (Russian) * ■ Svenska * ■ Türkçe * ■ 中文 (Chinese) * ■ 日本語 (Japanese) * ■ 한국어 (Korean) * ■ Bahasa Indonesia * ■ tiếng Việt (Vietnamese) * ■ čeština (Czech) *	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	A local display is provided.	Select header contents on local display.	■ Device tag ■ Free text	Device tag
Header text	In the Header parameter, the Free text option is selected.	Enter display header text.	Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)	-----

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	▪ . (point) ▪ , (comma)	. (point)
Backlight	One of the following conditions is met: ▪ Order code for "Display; operation", option F "4-line, illum.; touch control" ▪ Order code for "Display; operation", option G "4-line, illum.; touch control +WLAN" ▪ Order code for "Display; operation", option O "remote 4-line display, illum; 10m/ 30ft cable; touch control"	Switch the local display backlight on and off.	▪ Disable ▪ Enable	Enable

* Visibility depends on order options or device settings

10.7.5 WLAN configuration

The **WLAN Settings** submenu guides the user systematically through all the parameters that have to be set for the WLAN configuration.

Navigation

"Setup" menu → Advanced setup → WLAN Settings

▶ WLAN settings

WLAN IP address

→ ⓘ 120

Security type

→ ⓘ 120

WLAN passphrase

→ ⓘ 121

Assign SSID name

→ ⓘ 121

SSID name

→ ⓘ 121

Apply changes

→ ⓘ 121

Parameter overview with brief description

Parameter	Prerequisite	Description	User entry / Selection	Factory setting
WLAN IP address	–	Enter IP address of the device WLAN interface.	4 octet: 0 to 255 (in the particular octet)	192.168.1.212
Security type	–	Select the security type of the WLAN interface.	▪ Unsecured ▪ WPA2-PSK	WPA2-PSK

Parameter	Prerequisite	Description	User entry / Selection	Factory setting
WLAN passphrase	In the Security type parameter, the WPA2-PSK option is selected.	Enter the network key (8 to 32 characters).  The network key supplied with the device should be changed during commissioning for security reasons.	8 to 32-digit character string comprising numbers, letters and special characters	Serial number of the measuring device (e.g. L100A802000)
Assign SSID name	–	Select which name will be used for SSID: device tag or user-defined name.	■ Device tag ■ User-defined	User-defined
SSID name	In the Assign SSID name parameter, the User-defined option is selected.	Enter the user-defined SSID name (max. 32 characters).  The user-defined SSID name may only be assigned once. If the SSID name is assigned more than once, the devices can interfere with one another.	Max. 32-digit character string comprising numbers, letters and special characters	EH_device designation_last 7 digits of the serial number (e.g. EH_Promass_300_A 802000)
Apply changes	–	Use changed WLAN settings.	■ Cancel ■ Ok	Cancel

10.7.6 Configuration management

After commissioning, you can save the current device configuration or restore the previous device configuration.

You can do so using the **Configuration management** parameter and the related options found in the **Configuration backup** submenu.

Navigation

"Setup" menu → Advanced setup → Configuration backup

► Configuration backup

Operating time

→  121

Last backup

→  121

Configuration management

→  122

Backup state

→  122

Comparison result

→  122

Parameter overview with brief description

Parameter	Description	User interface / Selection	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	–
Last backup	Shows when the last data backup was saved to embedded HistoROM.	Days (d), hours (h), minutes (m) and seconds (s)	–

Parameter	Description	User interface / Selection	Factory setting
Configuration management	Select action for managing the device data in the embedded HistoROM.	■ Cancel ■ Execute backup ■ Restore ■ Compare ■ Clear backup data	Cancel
Backup state	Shows the current status of data saving or restoring.	■ None ■ Backup in progress ■ Restoring in progress ■ Delete in progress ■ Compare in progress ■ Restoring failed ■ Backup failed	None
Comparison result	Comparison of current device data with embedded HistoROM.	■ Settings identical ■ Settings not identical ■ No backup available ■ Backup settings corrupt ■ Check not done ■ Dataset incompatible	Check not done

Function scope of the "Configuration management" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Execute backup	A backup copy of the current device configuration is saved from the integrated HistoROM to the memory of the device. The backup copy includes the transmitter data of the device.
Restore	The last backup copy of the device configuration is restored from the device memory to the device's integrated HistoROM. The backup copy includes the transmitter data of the device.
Compare	The device configuration saved in the device memory is compared with the current device configuration of the integrated HistoROM.
Clear backup data	The backup copy of the device configuration is deleted from the memory of the device.



Integrated HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.



While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

10.7.7 Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

Navigation

"Setup" menu → Advanced setup → Administration

► Administration ► Define access code	→ 123
---	-------

► Reset access code

→ 123

Device reset

→ 124

Using the parameter to define the access code

Navigation

"Setup" menu → Advanced setup → Administration → Define access code

► Define access code

Define access code

→ 123

Confirm access code

→ 123

Parameter overview with brief description

Parameter	Description	User entry
Define access code	Restrict write-access to parameters to protect the configuration of the device against unintentional changes.	Max. 16-digit character string comprising numbers, letters and special characters
Confirm access code	Confirm the entered access code.	Max. 16-digit character string comprising numbers, letters and special characters

Using the parameter to reset the access code

Navigation

"Setup" menu → Advanced setup → Administration → Reset access code

► Reset access code

Operating time

→ 123

Reset access code

→ 123

Parameter overview with brief description

Parameter	Description	User interface / User entry	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	–
Reset access code	Reset access code to factory settings.  For a reset code, contact your Endress+Hauser service organization. The reset code can only be entered via: - Web browser - DeviceCare, FieldCare (via service interface CDI-RJ45) - Fieldbus	Character string comprising numbers, letters and special characters	0x00

Using the parameter to reset the device

Navigation

"Setup" menu → Advanced setup → Administration

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	■ Cancel ■ To delivery settings ■ Restart device ■ Restore S-DAT backup	Cancel

10.8 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

Navigation

"Diagnostics" menu → Simulation

► Simulation

Assign simulation process variable

→ 125

Process variable value

→ 125

Status input simulation

→ 125

Input signal level

→ 125

Current input 1 to n simulation

→ 125

Value current input 1 to n

→ 125

Current output 1 to n simulation

→ 125

Value current output 1 to n

→ 125

Frequency output simulation 1 to n

→ 125

Frequency value 1 to n

→ 126

Pulse output simulation 1 to n

→ 126

Pulse value 1 to n

→ 126

Switch output simulation 1 to n

→ 126

Switch status 1 to n

→ 126

Relay output 1 to n simulation	→  126
Switch status 1 to n	→  126
Device alarm simulation	→  126
Diagnostic event category	→  126
Diagnostic event simulation	→  126

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign simulation process variable	–	Select a process variable for the simulation process that is activated.	■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Concentration * ■ Target mass flow * ■ Carrier mass flow *	Off
Process variable value	One of the following options is selected in the Assign simulation process variable parameter (→  125): ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Concentration * ■ Target mass flow * ■ Carrier mass flow *	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Status input simulation	–	Switch simulation of the status input on and off.	■ Off ■ On	Off
Input signal level	In the Status input simulation parameter, the On option is selected.	Select the signal level for the simulation of the status input.	■ High ■ Low	High
Current input 1 to n simulation	–	Switch simulation of the current input on and off.	■ Off ■ On	Off
Value current input 1 to n	In the Current input 1 to n simulation parameter, the On option is selected.	Enter the current value for simulation.	0 to 22.5 mA	0 mA
Current output 1 to n simulation	–	Switch the simulation of the current output on and off.	■ Off ■ On	Off
Value current output 1 to n	In the Current output 1 to n simulation parameter, the On option is selected.	Enter the current value for simulation.	3.59 to 22.5 mA	3.59 mA
Frequency output simulation 1 to n	In the Operating mode parameter, the Frequency option is selected.	Switch the simulation of the frequency output on and off.	■ Off ■ On	Off

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Frequency value 1 to n	In the Frequency output simulation 1 to n parameter, the On option is selected.	Enter the frequency value for the simulation.	0.0 to 12 500.0 Hz	0.0 Hz
Pulse output simulation 1 to n	In the Operating mode parameter, the Pulse option is selected.	Set and switch off the pulse output simulation.  For Fixed value option: Pulse width parameter (→ 96) defines the pulse width of the pulses output.	■ Off ■ Fixed value ■ Down-counting value	Off
Pulse value 1 to n	In the Pulse output simulation 1 to n parameter, the Down-counting value option is selected.	Enter the number of pulses for simulation.	0 to 65 535	0
Switch output simulation 1 to n	In the Operating mode parameter, the Switch option is selected.	Switch the simulation of the switch output on and off.	■ Off ■ On	Off
Switch status 1 to n	–	Select the status of the status output for the simulation.	■ Open ■ Closed	Open
Relay output 1 to n simulation	–	Switch simulation of the relay output on and off.	■ Off ■ On	Off
Switch status 1 to n	In the Switch output simulation 1 to n parameter, the On option is selected.	Select status of the relay output for the simulation.	■ Open ■ Closed	Open
Pulse output simulation	–	Set and switch off the pulse output simulation.  For Fixed value option: Pulse width parameter defines the pulse width of the pulses output.	■ Off ■ Fixed value ■ Down-counting value	Off
Pulse value	In the Pulse output simulation parameter, the Down-counting value option is selected.	Set and switch off the pulse output simulation.	0 to 65 535	0
Device alarm simulation	–	Switch the device alarm on and off.	■ Off ■ On	Off
Diagnostic event category	–	Select a diagnostic event category.	■ Sensor ■ Electronics ■ Configuration ■ Process	Process
Diagnostic event simulation	–	Select a diagnostic event to simulate this event.	■ Off ■ Diagnostic event picklist (depends on the category selected)	Off
Logging interval	–	Define the logging interval tlog for data logging. This value defines the time interval between the individual data points in the memory.	1.0 to 3 600.0 s	–

* Visibility depends on order options or device settings

10.9 Protecting settings from unauthorized access

The following write protection options exist in order to protect the configuration of the measuring device from unintentional modification:

- Protect access to parameters via access code →  127
- Protect access to local operation via key locking →  57
- Protect access to measuring device via write protection switch →  128

10.9.1 Write protection via access code

The effects of the user-specific access code are as follows:

- Via local operation, the parameters for the measuring device configuration are write-protected and their values can no longer be changed.
- Device access is protected via the Web browser, as are the parameters for the measuring device configuration.
- Device access is protected via FieldCare or DeviceCare (via CDI-RJ45 service interface), as are the parameters for the measuring device configuration.

Defining the access code via local display


1. Navigate to the **Define access code** parameter (→  123).
2. Define a max. 16-digit character string comprising numbers, letters and special characters as the access code.
3. Enter the access code again in the **Confirm access code** parameter (→  123) to confirm the code.
 - ↳ The -symbol appears in front of all write-protected parameters.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.

-  ■ If parameter write protection is activated via an access code, it can also only be deactivated via this access code →  57.
- The user role with which the user is currently logged on via the local display is indicated by the →  57 **Access status** parameter. Navigation path: Operation → Access status

Parameters which can always be modified via the local display

Certain parameters that do not affect the measurement are excepted from parameter write protection via the local display. Despite the user-specific access code, they can always be modified, even if the other parameters are locked.

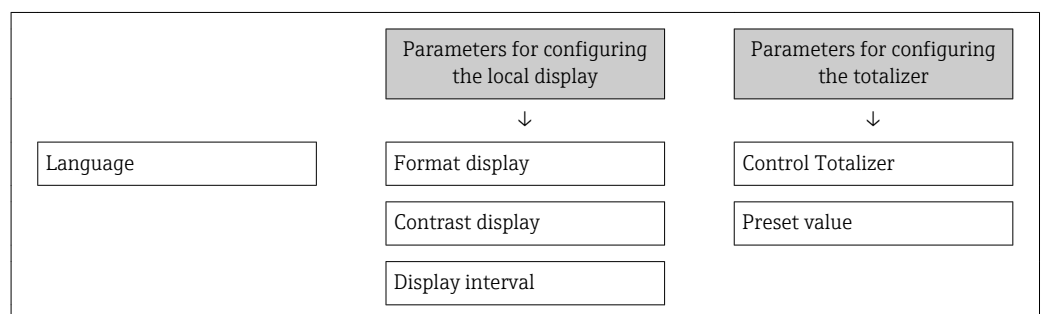

Defining the access code via the Web browser

1. Navigate to the **Define access code** parameter (→  123).
2. Max. Define a max. 4-digit numeric code as an access code.

3. Enter the access code again in the **Confirm access code** parameter (→  123) to confirm the code.
 - ↳ The Web browser switches to the login page.

 If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

-  ■ If parameter write protection is activated via an access code, it can also only be deactivated via this access code →  57.
- The user role with which the user is currently logged on via Web browser is indicated by the **Access status** parameter. Navigation path: Operation → Access status

Resetting the access code

If you misplace the user-specific access code, it is possible to reset the code to the factory setting. A reset code must be entered for this purpose. The user-specific access code can then be defined again afterwards.

Via Web browser, FieldCare, DeviceCare (via CDI-RJ45 service interface), fieldbus

 For a reset code, contact your Endress+Hauser service organization.


1. Navigate to the **Reset access code** parameter (→  123).
2. Enter the reset code.
 - ↳ The access code has been reset to the factory setting **0000**. It can be redefined →  127.

10.9.2 Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows write access to the entire operating menu - except for the **"Contrast display" parameter** - to be locked.


The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via PROFIBUS PA protocol

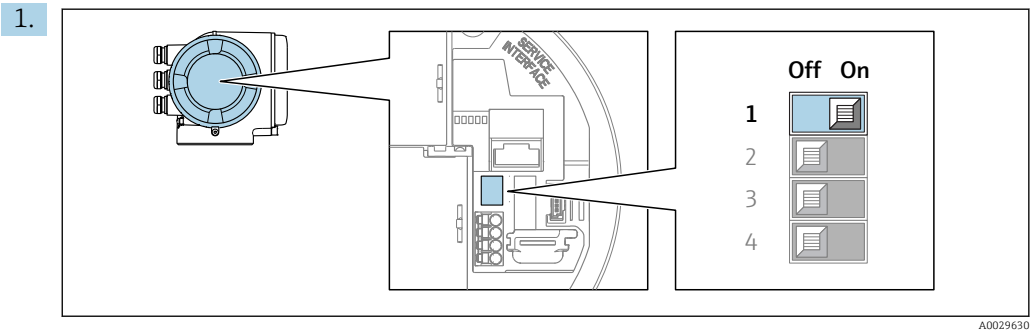

Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection.

- In the **Locking status** parameter the **Hardware locked** option is displayed → 130. In addition, on the local display the -symbol appears in front of the parameters in the header of the operational display and in the navigation view.

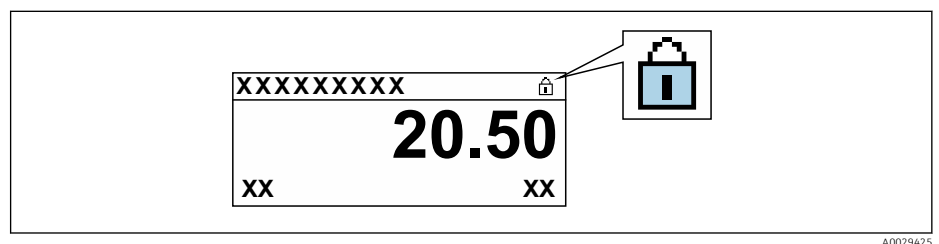

2. Setting the write protection (WP) switch on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.

- No option is displayed in the **Locking status** parameter → 130. On the local display, the -symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

11 Operation

11.1 Reading the device locking status

Device active write protection: **Locking status** parameter

Operation → Locking status

Function scope of the "Locking status" parameter

Options	Description
None	The access status displayed in the Access status parameter applies → 57. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool).
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

11.2 Adjusting the operating language

-  Detailed information:
- To configure the operating language → 80
 - For information on the operating languages supported by the measuring device → 241

11.3 Configuring the display

- Detailed information:
- On the basic settings for the local display → 107
 - On the advanced settings for the local display → 117

11.4 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

Navigation
"Diagnostics" menu → Measured values

► Measured values	
► Measured variables	→ 131
► Input values	→ 133
► Output values	→ 134
► Totalizer 1 to n	→ 132

11.4.1 "Measured variables" submenu

The **Measured variables** submenu contains all the parameters needed to display the current measured values for each process variable.

Navigation

"Diagnostics" menu → Measured values → Measured variables

► Measured variables		
Mass flow	→ 	131
Volume flow	→ 	131
Corrected volume flow	→ 	131
Density	→ 	131
Reference density	→ 	132
Temperature	→ 	132
Pressure value	→ 	132
Concentration	→ 	132
Target mass flow	→ 	132
Carrier mass flow	→ 	132

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Mass flow	–	Displays the mass flow currently measured. <i>Dependency</i> The unit is taken from the Mass flow unit parameter (→  84).	Signed floating-point number
Volume flow	–	Displays the volume flow currently calculated. <i>Dependency</i> The unit is taken from the Volume flow unit parameter (→  84).	Signed floating-point number
Corrected volume flow	–	Displays the corrected volume flow currently calculated. <i>Dependency</i> The unit is taken from the Corrected volume flow unit parameter (→  84).	Signed floating-point number
Density	–	Shows the density currently measured. <i>Dependency</i> The unit is taken from the Density unit parameter (→  84).	Signed floating-point number

Parameter	Prerequisite	Description	User interface
Reference density	–	Displays the reference density currently calculated. <i>Dependency</i> The unit is taken from the Reference density unit parameter (→  84).	Signed floating-point number
Temperature	–	Shows the medium temperature currently measured. <i>Dependency</i> The unit is taken from the Temperature unit parameter (→  85).	Signed floating-point number
Pressure value	–	Displays either a fixed or external pressure value. <i>Dependency</i> The unit is taken from the Pressure unit parameter (→  85).	Signed floating-point number
Concentration	For the following order code: "Application package", option ED "Concentration"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the concentration currently calculated. <i>Dependency</i> The unit is taken from the Concentration unit parameter.	Signed floating-point number
Target mass flow	With the following conditions: Order code for "Application package", option ED "Concentration"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the target fluid mass flow currently measured. <i>Dependency</i> The unit is taken from the Mass flow unit parameter (→  84).	Signed floating-point number
Carrier mass flow	With the following conditions: Order code for "Application package", option ED "Concentration"  The software options currently enabled are displayed in the Software option overview parameter.	Displays the carrier fluid mass flow currently measured. <i>Dependency</i> The unit is taken from the Mass flow unit parameter (→  84).	Signed floating-point number

11.4.2 Totalizer

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu → Measured values → Totalizer 1 to n

► Totalizer 1 to n	
Assign process variable	→  133
Totalizer value 1 to n	→  133
Totalizer status 1 to n	→  133
Totalizer status (Hex) 1 to n	→  133

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign process variable	–	Select process variable for totalizer.	■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow *	Mass flow
Totalizer value 1 to n	In the Assign process variable parameter one of the following options is selected: ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Total mass flow ■ Condensate mass flow ■ Energy flow ■ Heat flow difference	Displays the current totalizer counter value.	Signed floating-point number	0 kg
Totalizer status 1 to n	–	Displays the current totalizer status.	■ Good ■ Uncertain ■ Bad	–
Totalizer status (Hex) 1 to n	In Target mode parameter, the Auto option is selected.	Displays the current status value (hex) of the totalizer.	0 to 0xFF	–

* Visibility depends on order options or device settings

11.4.3 "Input values" submenu

The **Input values** submenu guides you systematically to the individual input values.

Navigation

"Diagnostics" menu → Measured values → Input values

► Input values	
► Current input 1 to n	→ ⓘ 133
► Status input 1 to n	→ ⓘ 134

Input values of current input

The **Current input 1 to n** submenu contains all the parameters needed to display the current measured values for every current input.

Navigation

"Diagnostics" menu → Measured values → Input values → Current input 1 to n

► Current input 1 to n	
Measured values 1 to n	→ ⓘ 134
Measured current 1 to n	→ ⓘ 134

Parameter overview with brief description

Parameter	Description	User interface
Measured values 1 to n	Displays the current input value.	Signed floating-point number
Measured current 1 to n	Displays the current value of the current input.	0 to 22.5 mA

Input values of status input

The **Status input 1 to n** submenu contains all the parameters needed to display the current measured values for every status input.

Navigation

"Diagnostics" menu → Measured values → Input values → Status input 1 to n

► Status input 1 to n

Value status input → 134

Parameter overview with brief description

Parameter	Description	User interface
Value status input	Shows the current input signal level.	■ High ■ Low

11.4.4 Output values

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.

Navigation

"Diagnostics" menu → Measured values → Output values

► Output values

► Current output 1 to n → 134

► Pulse/frequency/switch output 1 to n → 135

► Relay output 1 to n → 136

Output values of current output

The **Value current output** submenu contains all the parameters needed to display the current measured values for every current output.

Navigation

"Diagnostics" menu → Measured values → Output values → Value current output 1 to n

► Current output 1 to n

Output current 1 to n

→ 135

Measured current 1 to n

→ 135

Parameter overview with brief description

Parameter	Description	User interface
Output current 1	Displays the current value currently calculated for the current output.	3.59 to 22.5 mA
Measured current	Displays the current value currently measured for the current output.	0 to 30 mA

Output values for pulse/frequency/switch output

The **Pulse/frequency/switch output 1 to n** submenu contains all the parameters needed to display the current measured values for every pulse/frequency/switch output.

Navigation

"Diagnostics" menu → Measured values → Output values → Pulse/frequency/switch output 1 to n

► Pulse/frequency/switch output 1 to n

Output frequency 1 to n

→ 136

Pulse output 1 to n

Switch status 1 to n

→ 136

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface / User entry	Factory setting
Output frequency	In the Operating mode parameter, the Frequency option is selected.	Displays the value currently measured for the frequency output.	0.0 to 12 500.0 Hz	–
Value per pulse	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 96): ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow *	Enter measured value at which a pulse is output.	Signed floating-point number	Depends on country and nominal diameter
Switch status	The Switch option is selected in the Operating mode parameter.	Displays the current switch output status.	■ Open ■ Closed	–

* Visibility depends on order options or device settings

Output values for relay output

The **Relay output 1 to n** submenu contains all the parameters needed to display the current measured values for every relay output.

Navigation

"Diagnostics" menu → Measured values → Output values → Relay output 1 to n

► Relay output 1 to n	
Switch status	→ 136
Switch cycles	→ 136
Max. switch cycles number	→ 136

Parameter overview with brief description

Parameter	Description	User interface
Switch status	Shows the current relay switch status.	■ Open ■ Closed
Switch cycles	Shows number of all performed switch cycles.	Positive integer
Max. switch cycles number	Shows the maximal number of guaranteed switch cycles.	Positive integer

Output values for double pulse output

The **Double pulse output** submenu contains all the parameters needed to display the current measured values for every double pulse output.

Navigation

"Diagnostics" menu → Measured values → Output values → Double pulse output

► Double pulse output

Pulse output

→ 137

Parameter overview with brief description

Parameter	Description	User interface
Pulse output	Shows the currently output pulse frequency.	Positive floating-point number

11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu (→ 81)
- Advanced settings using the **Advanced setup** submenu (→ 112)

11.6 Performing a totalizer reset

The totalizers are reset in the **Operation** submenu:

Control Totalizer

Function scope of the "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value 1 to n parameter.

Navigation

"Operation" menu → Totalizer handling

► Totalizer handling

Control Totalizer 1 to n

→ 138

Preset value 1 to n

→ 138

Reset all totalizers

→ 138

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Control Totalizer 1 to n	–	Control totalizer value.	■ Totalize ■ Reset + hold ■ Preset + hold	Totalize
Preset value 1 to n	In the Assign process variable parameter one of the following options is selected: ■ Volume flow ■ Mass flow ■ Corrected volume flow ■ Total mass flow ■ Condensate mass flow ■ Energy flow ■ Heat flow difference	Specify start value for totalizer.	Signed floating-point number	0 kg
Reset all totalizers	–	Reset all totalizers to 0 and start.	■ Cancel ■ Reset + totalize	Cancel


11.7 Showing data logging

The **Extended HistoROM** application package must be enabled in the device (order option) for the **Data logging** submenu to appear. This contains all the parameters for the measured value history.

-  Data logging is also available via:
 - Plant Asset Management Tool FieldCare →  65.
 - Web browser →  58

Function range

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Display of the measured value trend for each logging channel in the form of a chart

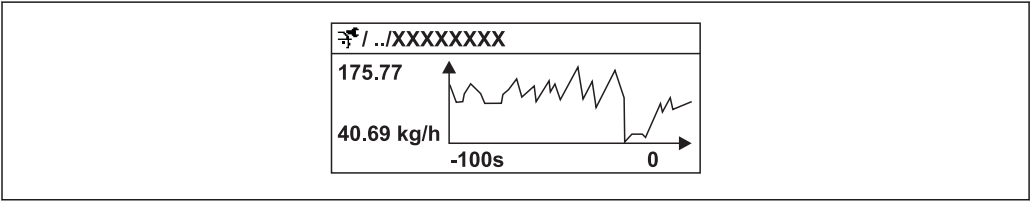

 22 Chart of a measured value trend

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

 If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

Navigation
"Diagnostics" menu → Data logging

► Data logging		
Assign channel 1...4	→	 140
Logging interval	→	 140
Clear logging data	→	 140
Data logging	→	 140
Logging delay	→	 140
Data logging control	→	 140
Data logging status	→	 140
Entire logging duration	→	 140

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign channel 1 to n	The Extended HistoROM application package is available.	Assign process variable to logging channel.	■ Off ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow * ■ Carrier mass flow * ■ Density ■ Reference density ■ Concentration * ■ Temperature ■ Carrier pipe temperature * ■ Electronic temperature ■ Oscillation frequency 0 ■ Frequency fluctuation 0 ■ Oscillation amplitude * ■ Oscillation damping 0 ■ Oscillation damping fluctuation 0 ■ Signal asymmetry ■ Exciter current 0 ■ Current output 1 ■ Current output 2 * ■ Current output 3 * ■ Current output 4 *	Off
Logging interval	The Extended HistoROM application package is available.	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	0.1 to 999.0 s	1.0 s
Clear logging data	The Extended HistoROM application package is available.	Clear the entire logging data.	■ Cancel ■ Clear data	Cancel
Data logging	–	Select the data logging method.	■ Overwriting ■ Not overwriting	Overwriting
Logging delay	In the Data logging parameter, the Not overwriting option is selected.	Enter the time delay for measured value logging.	0 to 999 h	0 h
Data logging control	In the Data logging parameter, the Not overwriting option is selected.	Start and stop measured value logging.	■ None ■ Delete + start ■ Stop	None
Data logging status	In the Data logging parameter, the Not overwriting option is selected.	Displays the measured value logging status.	■ Done ■ Delay active ■ Active ■ Stopped	Done
Entire logging duration	In the Data logging parameter, the Not overwriting option is selected.	Displays the total logging duration.	Positive floating-point number	0 s

* Visibility depends on order options or device settings

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For local display

Error	Possible causes	Solution
Local display dark and no output signals	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage → 35.
Local display dark and no output signals	The polarity of the supply voltage is wrong.	Correct the polarity.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly. Terminals are not plugged into the main electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective. Main electronics module is defective.	Order spare part → 218.
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	- Set the display brighter by simultaneously pressing $\boxed{+}$ + $\boxed{E}$. - Set the display darker by simultaneously pressing $\boxed{-}$ + $\boxed{E}$.
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part → 218.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures
Text on local display appears in a foreign language and cannot be understood.	Incorrect operating language is configured.	- Press $\boxed{-}$ + $\boxed{+}$ for 2 s ("home position"). - Press $\boxed{E}$. - Set the desired language in the Display language parameter (→ 119).
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	- Check the cable and the connector between the main electronics module and display module. - Order spare part → 218.

For output signals

Error	Possible causes	Solution
Signal output outside the valid range	Main electronics module is defective.	Order spare part → 218.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Configuration error	Check and correct the parameter configuration.
Device measures incorrectly.	Configuration error or device is operated outside the application.	- Check and correct parameter configuration. - Observe limit values specified in the "Technical Data".

For access


Error	Possible causes	Solution
No write access to parameters	Hardware write protection enabled	Set the write protection switch on main electronics module to the Off position → 128.
No write access to parameters	Current user role has limited access authorization	1. Check user role → 57. 2. Enter correct customer-specific access code → 57.
No connection via PROFIBUS PA	Device plug connected incorrectly	Check the pin assignment of the connector ..
No connection via PROFIBUS PA	PROFIBUS PA cable incorrectly terminated	Check terminating resistor .
Not connecting to Web server	Web server disabled	Using the "FieldCare" or "DeviceCare" operating tool, check whether the web server of the measuring device is enabled, and enable it if necessary → 62.
	Incorrect setting for the Ethernet interface of the computer	1. Check the properties of the Internet protocol (TCP/IP) → 60. 2. Check the network settings with the IT manager.
Not connecting to Web server	Incorrect WLAN access data	- Check WLAN network status. - Log on to the device again using WLAN access data. - Verify that WLAN is enabled on the measuring device and operating device → 60.
	WLAN communication disabled	–
Not connecting to web server, FieldCare or DeviceCare	No WLAN network available	- Check if WLAN reception is present: LED on display module is lit blue - Check if WLAN connection is enabled: LED on display module flashes blue - Switch on instrument function.
Network connection not present or unstable	WLAN network is weak.	- Operating device is outside of reception range: Check network status on operating device. - To improve network performance, use an external WLAN antenna.
	Parallel WLAN and Ethernet communication	- Check network settings. - Temporarily enable only the WLAN as an interface.
Web browser frozen and operation no longer possible	Data transfer active	Wait until data transfer or current action is finished.
	Connection lost	1. Check cable connection and power supply. 2. Refresh the Web browser and restart if necessary.
Content of Web browser incomplete or difficult to read	Not using optimum version of Web server.	1. Use the correct Web browser version . 2. Clear the Web browser cache and restart the Web browser.
	Unsuitable view settings.	Change the font size/display ratio of the Web browser.
No or incomplete display of contents in the Web browser	- JavaScript not enabled - JavaScript cannot be enabled	1. Enable JavaScript. 2. Enter http://XXX.XXX.X.XXX/basic.html as the IP address.

Error	Possible causes	Solution
Operation with FieldCare or DeviceCare via CDI-RJ45 service interface (port 8000)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.
Flashing of firmware with FieldCare or DeviceCare via CDI-RJ45 service interface (via port 8000 or TFTP ports)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/DeviceCare access.

12.2 Diagnostic information via light emitting diodes

12.2.1 Transmitter

Different LEDs in the transmitter provide information on the device status.

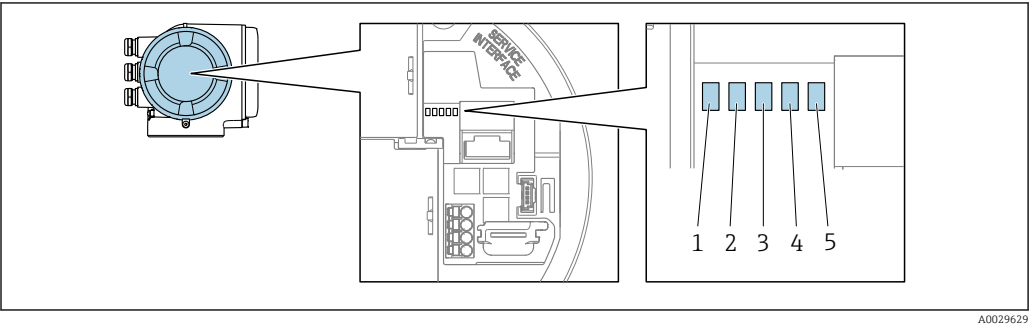


- 1 Supply voltage
- 2 Device status
- 3 Not used
- 4 Communication
- 5 Service interface (CDI) active

LED	Color	Meaning
1 Supply voltage	Green	Supply voltage is ok
	Off	Supply voltage is off or too low
2 Device status	Red	Error
	Flashing red	Warning
3 Not used	–	–
4 Communication	White	Communication active
5 Service interface (CDI)	Yellow	Connection established
	Flashing yellow	Communication active
	Off	No connection

12.3 Diagnostic information on local display

12.3.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

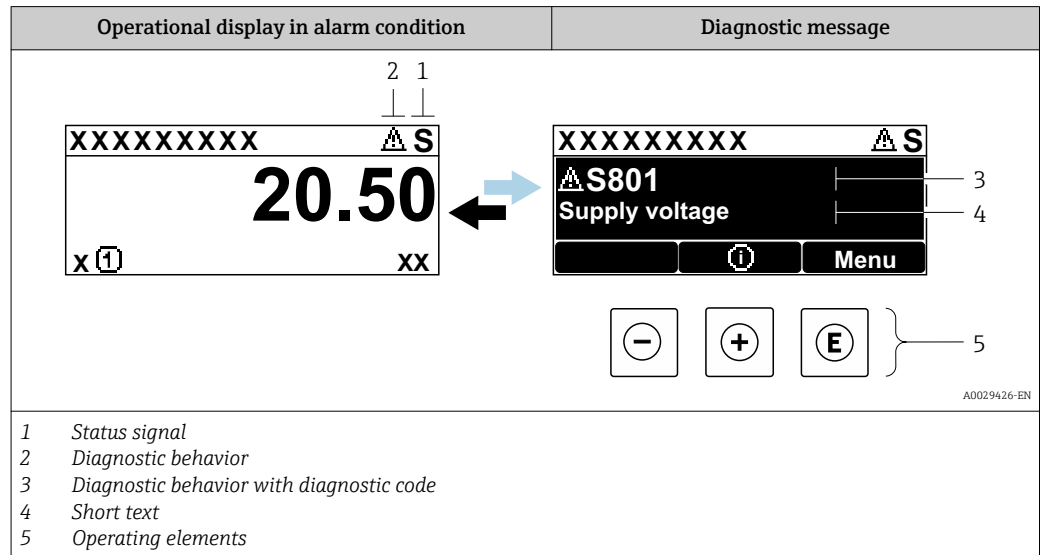

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

- i** Other diagnostic events that have occurred can be displayed in the **Diagnostics** menu:
- Via parameter
 - Via submenus → 210

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

- i** The status signals are categorized according to VDI/VDE 2650 and NAMUR Recommendation NE 107: F = Failure, C = Function Check, S = Out of Specification, M = Maintenance Required


Symbol	Meaning
F	Failure A device error has occurred. The measured value is no longer valid.
C	Function check The device is in service mode (e.g. during a simulation).
S	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
M	Maintenance required Maintenance is required. The measured value remains valid.

Diagnostic behavior

Symbol	Meaning
	Alarm ■ Measurement is interrupted. ■ Signal outputs and totalizers assume the defined alarm condition. ■ A diagnostic message is generated.
	Warning Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.

Diagnostic information


The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

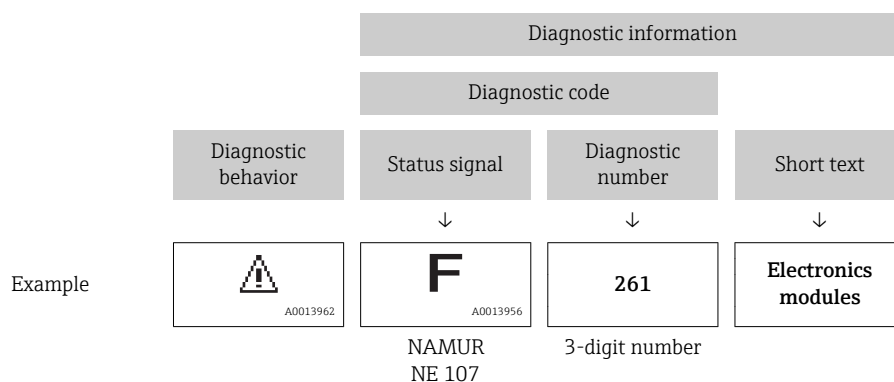

Operating elements

Key	Meaning
	Plus key <i>In a menu, submenu</i> Opens the message about remedy information.
	Enter key <i>In a menu, submenu</i> Opens the operating menu.

12.3.2 Calling up remedial measures

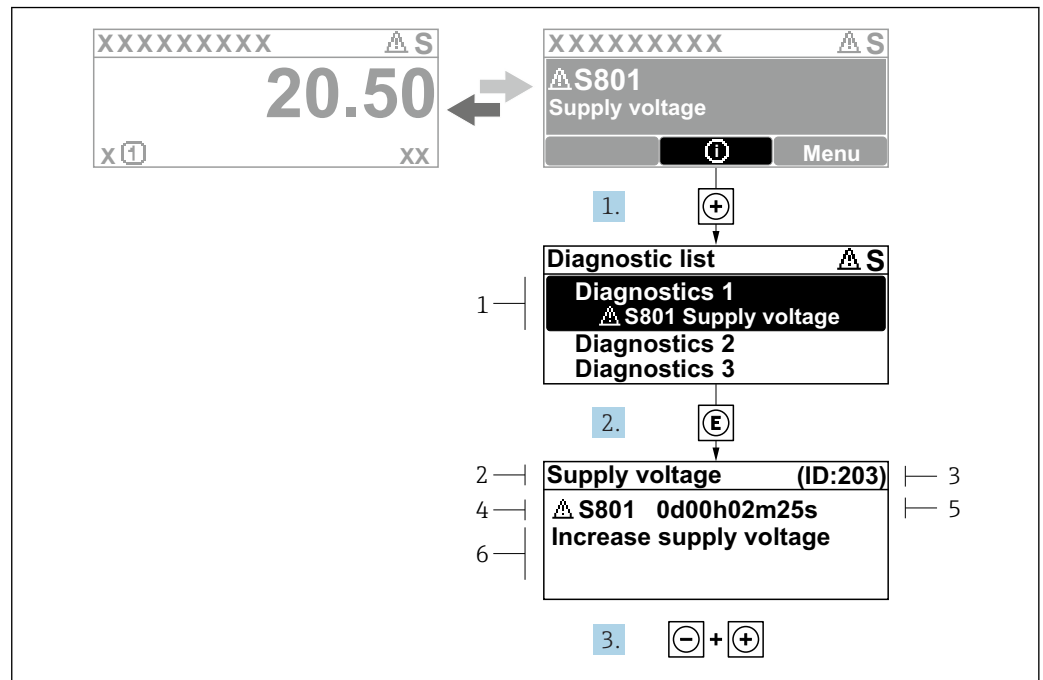

23 Message for remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

1. Press **Enter** (⏏ symbol).
 - ↳ The **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with **Up** or **Down** and press **Enter**.
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press **Back** + **Enter** simultaneously.
 - ↳ The message for the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or **Previous diagnostics** parameter.

1. Press **Enter**.
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press **Back** + **Enter** simultaneously.
 - ↳ The message for the remedial measures closes.

12.4 Diagnostic information in the Web browser

12.4.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

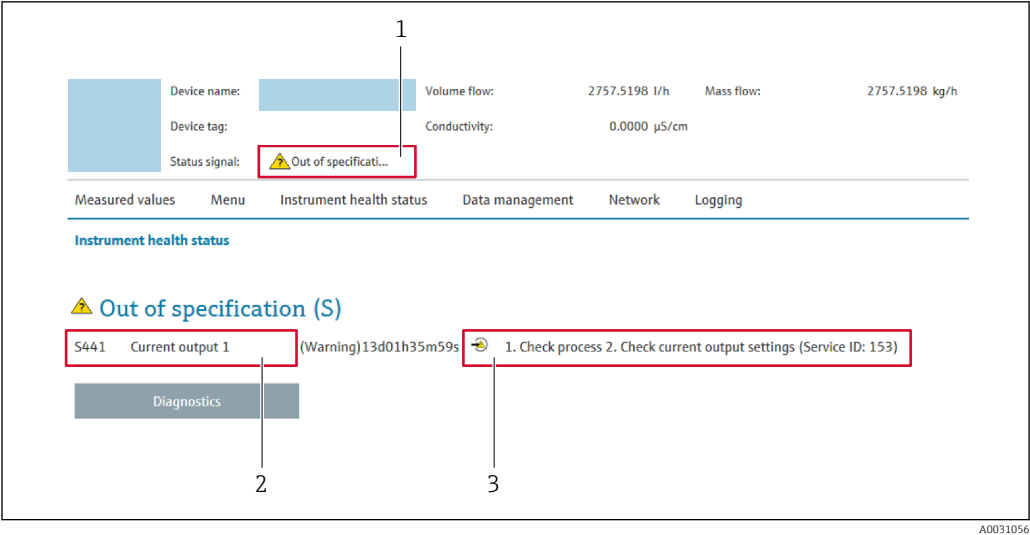

- 1 Status area with status signal
- 2 Diagnostic information → 146
- 3 Remedy information with Service ID

i In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter
- Via submenu → 210

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
	Failure A device error has occurred. The measured value is no longer valid.
	Function check The device is in service mode (e.g. during a simulation).
	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
	Maintenance required Maintenance is required. The measured value is still valid.

i The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.


12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

12.5 Diagnostic information in DeviceCare or FieldCare

12.5.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

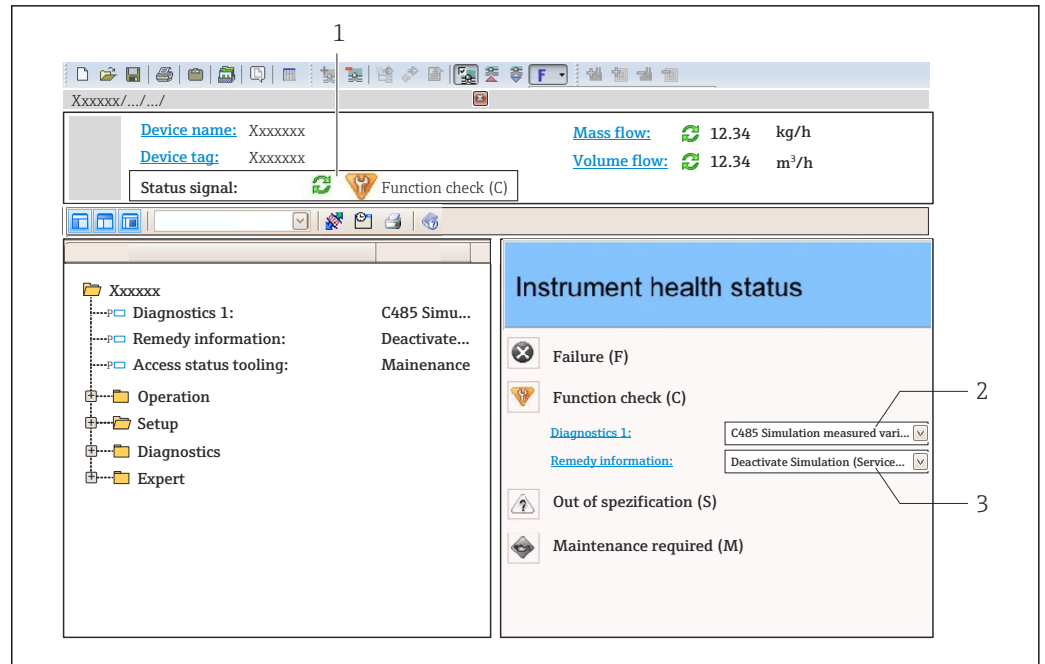

A0021799-EN


- 1 Status area with status signal → 145
- 2 Diagnostic information → 146
- 3 Remedy information with Service ID

i In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter
- Via submenu → 210

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

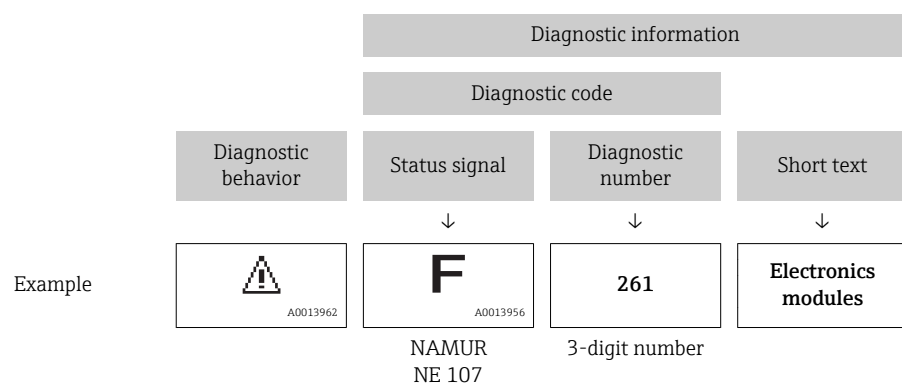

12.5.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu
Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

- 1. Call up the desired parameter.
- 2. On the right in the working area, mouse over the parameter.
 - ↳ A tool tip with remedy information for the diagnostic event appears.


12.6 Adapting the diagnostic information

12.6.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

 Diagnostic behavior in accordance with Specification PROFIBUS PA Profile 3.02, Condensed Status.

Expert → System → Diagnostic handling → Diagnostic behavior

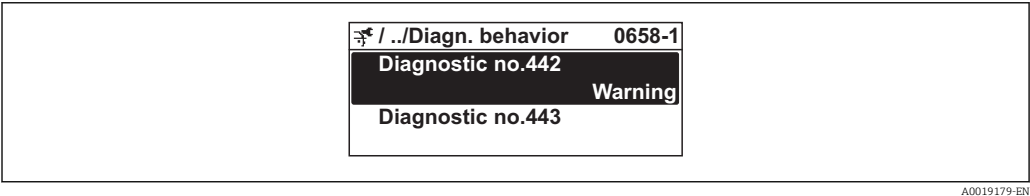

A0019179-EN


Available diagnostic behaviors

The following diagnostic behaviors can be assigned:

Diagnostic behavior	Description
Alarm	The device stops measurement. The totalizers assume the defined alarm condition. A diagnostic message is generated.
Warning	The device continues to measure. The measured value output via PROFIBUS and the totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is displayed only in the Event logbook submenu (Event list submenu) and not in alternation with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

Displaying the measured value status

If the Analog Input, Digital Input and Totalizer function blocks are configured for cyclic data transmission, the device status is coded as per PROFIBUS PA Profile 3.02 Specification and transmitted along with the measured value to the PROFIBUS Master (Class 1) via the coding byte (byte 5). The coding byte is split into three segments: Quality, Quality Substatus and Limits.

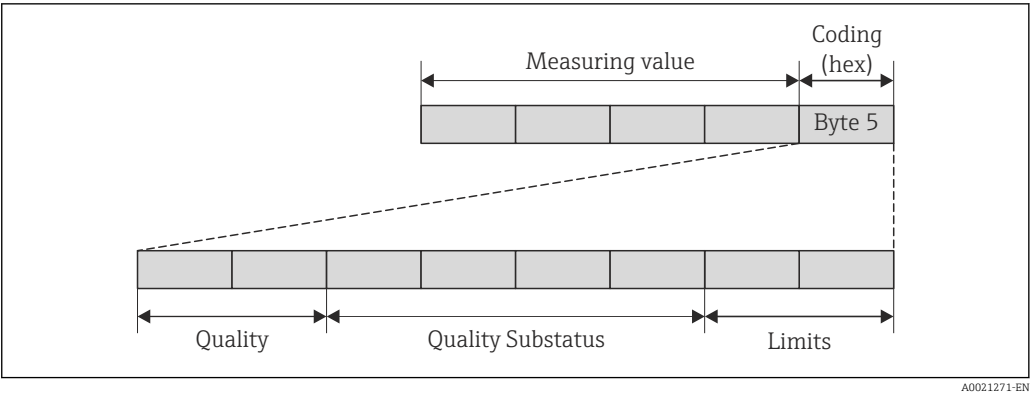

24 Structure of the coding byte

A0021271-EN

The content of the coding byte depends on the configured failsafe mode in the particular function block. Depending on which failsafe mode has been configured, status information in accordance with PROFIBUS PA Profile Specification 3.02 is transmitted to the PROFIBUS Master (Class 1) via the coding byte .

Determining the measured value status and device status via the diagnostic behavior

When the diagnostic behavior is assigned, this also changes the measured value status and device status for the diagnostic information. The measured value status and device status depend on the choice of diagnostic behavior and on the group in which the diagnostic information is located. The measured value status and device status are firmly assigned to the particular diagnostic behavior and cannot be changed individually.

The diagnostic information is grouped as follows:

- Diagnostic information pertaining to the sensor: diagnostic number 000 to 199
→ 151
- Diagnostic information pertaining to the electronics: diagnostic number 200 to 399
→ 152
- Diagnostic information pertaining to the configuration: diagnostic number 400 to 599
→ 152
- Diagnostic information pertaining to the process: diagnostic number 800 to 999
→ 152

Depending on the group in which the diagnostic information is located, the following measured value status and device status are firmly assigned to the particular diagnostic behavior:

Diagnostic information pertaining to the sensor: diagnostic number 000 to 199

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnosis (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Maintenance alarm	0x24 to 0x27	F (Failure)	Maintenance alarm
Warning	GOOD	Maintenance demanded	0xA8 to 0xAB	M (Maintenance)	Maintenance demanded
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

Diagnostic information pertaining to the electronics: diagnostic number 200 to 399

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnosis (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Maintenance alarm	0x24 to 0x27	F (Failure)	Maintenance alarm
Warning					
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

Diagnostic information pertaining to the configuration: diagnostic number 400 to 599

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnosis (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Process related	0x28 to 0x2B	F (Failure)	Invalid process condition
Warning	UNCERTAIN	Process related	0x78 to 0x7B	S (Out of specification)	Invalid process condition
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

Diagnostic information pertaining to the process: diagnostic number 800 to 999

Diagnostic behavior (configurable)	Measured value status (fixed assignment)				Device diagnosis (fixed assignment)
	Quality	Quality Substatus	Coding (hex)	Category (NE107)	
Alarm	BAD	Process related	0x28 to 0x2B	F (Failure)	Invalid process condition
Warning	UNCERTAIN	Process related	0x78 to 0x7B	S (Out of specification)	Invalid process condition
Logbook entry only	GOOD	ok	0x80 to 0x8E	–	–
Off					

12.7 Overview of diagnostic information

 The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.

 In the case of some items of diagnostic information, the diagnostic behavior can be changed. Change the diagnostic information →  150

12.7.1 Diagnostic of sensor

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
022	Temperature sensor defective		1. Check or replace sensor electronic module (ISEM) 2. If available: Check connection cable between sensor and transmitter 3. Replace sensor	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
046	Sensor limit exceeded	1. Inspect sensor 2. Check process condition	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
062	Sensor connection faulty	1. Check or replace sensor electronic module (ISEM) 2. If available: Check connection cable between sensor and transmitter 3. Replace sensor	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
063	Exciter current faulty		1. Check or replace sensor electronic module (ISEM) 2. If available: Check connection cable between sensor and transmitter 3. Replace sensor	▪ Oscillation amplitude @1 ▪ Oscillation amplitude @1 ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Concentration ▪ Oscillation damping @1 ▪ Oscillation damping @1 ▪ Density ▪ Dynamic viscosity ▪ Sensor electronic temperature (ISEM) ▪ Empty pipe detection ▪ Kinematic viscosity ▪ Low flow cut off ▪ Mass flow ▪ HBSI ▪ Exciter current @1 ▪ Exciter current @1 ▪ Oscillation frequency @1 ▪ Oscillation frequency @1 ▪ Status
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	S		
	Diagnostic behavior	Alarm		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
082	Data storage	1. Check module connections 2. Contact service	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
083	Memory content	1. Restart device 2. Restore HistoROM S-DAT backup ('Device reset' parameter) 3. Replace HistoROM S-DAT	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
140	Sensor signal asymmetrical	1. Check or replace sensor electronic module (ISEM) 2. If available: Check connection cable between sensor and transmitter 3. Replace sensor	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
144	Measuring error too high	1. Check or change sensor 2. Check process conditions	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.7.2 Diagnostic of electronic

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
201	Device failure		1. Restart device 2. Contact service	▪ Oscillation amplitude @1 ▪ Oscillation amplitude @1 ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Concentration ▪ Measured values @1 ▪ Measured values @1 ▪ Measured values @1 ▪ Oscillation damping @1 ▪ Oscillation damping @1 ▪ Density ▪ Dynamic viscosity ▪ Sensor electronic temperature (ISEM) ▪ Empty pipe detection ▪ Kinematic viscosity ▪ Low flow cut off ▪ Mass flow ▪ HBSI ▪ Pressure ▪ Exciter current @1 ▪ Exciter current @1 ▪ Oscillation frequency @1 ▪ Oscillation frequency @1 ▪ Reference density ▪ Corrected volume flow ▪ Oscillation damping fluctuation @1 ▪ Oscillation damping fluctuation @1 ▪ Frequency fluctuation @1 ▪ Frequency fluctuation @1 ▪ Target mass flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Status ▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
242	Software incompatible		1. Check software 2. Flash or change main electronics module ■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
252	Modules incompatible		1. Check electronic modules 2. Change electronic modules ■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
262	Sensor electronic connection faulty	1. Check or replace connection cable between sensor electronic module (ISEM) and main electronics 2. Check or replace ISEM or main electronics	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables	
No.	Short text			
270	Main electronic failure		Change main electronic module	▪ Oscillation amplitude @1 ▪ Oscillation amplitude @1 ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Concentration ▪ Measured values @1 ▪ Measured values @1 ▪ Measured values @1 ▪ Oscillation damping @1 ▪ Oscillation damping @1 ▪ Density ▪ Dynamic viscosity ▪ Sensor electronic temperature (ISEM) ▪ Empty pipe detection ▪ Kinematic viscosity ▪ Low flow cut off ▪ Mass flow ▪ HBSI ▪ Pressure ▪ Exciter current @1 ▪ Exciter current @1 ▪ Oscillation frequency @1 ▪ Oscillation frequency @1 ▪ Reference density ▪ Corrected volume flow ▪ Oscillation damping fluctuation @1 ▪ Oscillation damping fluctuation @1 ▪ Frequency fluctuation @1 ▪ Frequency fluctuation @1 ▪ Target mass flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Status ▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
271	Main electronic failure		1. Restart device 2. Change main electronic module ■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
272	Main electronic failure		1. Restart device 2. Contact service <

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
273	Main electronic failure		Change electronic ■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
275	I/O module 1 to n defective		Change I/O module	▪ Oscillation amplitude @1 ▪ Oscillation amplitude @1 ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Concentration ▪ Measured values @1 ▪ Measured values @1 ▪ Measured values @1 ▪ Oscillation damping @1 ▪ Oscillation damping @1 ▪ Density ▪ Dynamic viscosity ▪ Sensor electronic temperature (ISEM) ▪ Empty pipe detection ▪ Kinematic viscosity ▪ Low flow cut off ▪ Mass flow ▪ HBSI ▪ Pressure ▪ Exciter current @1 ▪ Exciter current @1 ▪ Oscillation frequency @1 ▪ Oscillation frequency @1 ▪ Reference density ▪ Corrected volume flow ▪ Oscillation damping fluctuation @1 ▪ Oscillation damping fluctuation @1 ▪ Frequency fluctuation @1 ▪ Frequency fluctuation @1 ▪ Target mass flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Status ▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
276	I/O module 1 to n faulty		1. Restart device 2. Change I/O module	▪ Oscillation amplitude @1 ▪ Oscillation amplitude @1 ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Concentration ▪ Measured values @1 ▪ Measured values @1 ▪ Measured values @1 ▪ Oscillation damping @1 ▪ Oscillation damping @1 ▪ Density ▪ Dynamic viscosity ▪ Sensor electronic temperature (ISEM) ▪ Empty pipe detection ▪ Kinematic viscosity ▪ Low flow cut off ▪ Mass flow ▪ HBSI ▪ Pressure ▪ Exciter current @1 ▪ Exciter current @1 ▪ Oscillation frequency @1 ▪ Oscillation frequency @1 ▪ Reference density ▪ Corrected volume flow ▪ Oscillation damping fluctuation @1 ▪ Oscillation damping fluctuation @1 ▪ Frequency fluctuation @1 ▪ Frequency fluctuation @1 ▪ Target mass flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Status ▪ Volume flow
	Measured variable status			
	Quality	Uncertain		
	Quality substatus	Initial value		
	Coding (hex)	0x4C to 0x4F		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
276	I/O module 1 to n faulty		1. Restart device 2. Change I/O module	▪ Oscillation amplitude @1 ▪ Oscillation amplitude @1 ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Concentration ▪ Measured values @1 ▪ Measured values @1 ▪ Measured values @1 ▪ Oscillation damping @1 ▪ Oscillation damping @1 ▪ Density ▪ Dynamic viscosity ▪ Sensor electronic temperature (ISEM) ▪ Empty pipe detection ▪ Kinematic viscosity ▪ Low flow cut off ▪ Mass flow ▪ HBSI ▪ Pressure ▪ Exciter current @1 ▪ Exciter current @1 ▪ Oscillation frequency @1 ▪ Oscillation frequency @1 ▪ Reference density ▪ Corrected volume flow ▪ Oscillation damping fluctuation @1 ▪ Oscillation damping fluctuation @1 ▪ Frequency fluctuation @1 ▪ Frequency fluctuation @1 ▪ Target mass flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Status ▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
283	Memory content	1. Reset device 2. Contact service	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
302	Device verification active		Device verification active, please wait. ▪ Oscillation amplitude @1 ▪ Oscillation amplitude @1 ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Concentration ▪ Measured values @1 ▪ Measured values @1 ▪ Measured values @1 ▪ Oscillation damping @1 ▪ Oscillation damping @1 ▪ Density ▪ Dynamic viscosity ▪ Sensor electronic temperature (ISEM) ▪ Empty pipe detection ▪ Kinematic viscosity ▪ Low flow cut off ▪ Mass flow ▪ HBSI ▪ Pressure ▪ Exciter current @1 ▪ Exciter current @1 ▪ Oscillation frequency @1 ▪ Oscillation frequency @1 ▪ Reference density ▪ Corrected volume flow ▪ Oscillation damping fluctuation @1 ▪ Oscillation damping fluctuation @1 ▪ Frequency fluctuation @1 ▪ Frequency fluctuation @1 ▪ Target mass flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Status ▪ Volume flow
	Measured variable status		
	Quality	Good	
	Quality substatus	Function check	
	Coding (hex)	0xBC to 0xBF	
	Status signal	C	
	Diagnostic behavior	Warning	

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
311	Electronic failure		1. Do not reset device 2. Contact service ■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	M	
	Diagnostic behavior	Warning	

Diagnostic information		Remedy instructions	Influenced measured variables	
No.	Short text			
332	Writing in embedded HistoROM failed		Replace user interface board Ex d/XP: replace transmitter	▪ Oscillation amplitude @1 ▪ Oscillation amplitude @1 ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Concentration ▪ Measured values @1 ▪ Measured values @1 ▪ Measured values @1 ▪ Oscillation damping @1 ▪ Oscillation damping @1 ▪ Density ▪ Dynamic viscosity ▪ Sensor electronic temperature (ISEM) ▪ Empty pipe detection ▪ Kinematic viscosity ▪ Low flow cut off ▪ Mass flow ▪ HBSI ▪ Pressure ▪ Exciter current @1 ▪ Exciter current @1 ▪ Oscillation frequency @1 ▪ Oscillation frequency @1 ▪ Reference density ▪ Corrected volume flow ▪ Oscillation damping fluctuation @1 ▪ Oscillation damping fluctuation @1 ▪ Frequency fluctuation @1 ▪ Frequency fluctuation @1 ▪ Target mass flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Status ▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
361	I/O module 1 to n faulty		1. Restart device 2. Check electronic modules 3. Change I/O Modul or main electronics	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
372	Sensor electronic (ISEM) faulty	1. Restart device 2. Check if failure recurs 3. Replace sensor electronic module (ISEM)	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
373	Sensor electronic (ISEM) faulty		1. Transfer data or reset device 2. Contact service ■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
374	Sensor electronic (ISEM) faulty	1. Restart device 2. Check if failure recurs 3. Replace sensor electronic module (ISEM)	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
375	I/O- 1 to n communication failed		1. Restart device 2. Check if failure recurs 3. Replace module rack inclusive electronic modules ■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
382	Data storage	1. Insert T-DAT 2. Replace T-DAT	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
383	Memory content	1. Restart device 2. Delete T-DAT via 'Reset device' parameter 3. Replace T-DAT	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		
	Bad		
	Maintenance alarm		
	0x24 to 0x27		
	F		
	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
387	Embedded HistoROM failed		Contact service organization	▪ Oscillation amplitude @1 ▪ Oscillation amplitude @1 ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Concentration ▪ Measured values @1 ▪ Measured values @1 ▪ Measured values @1 ▪ Oscillation damping @1 ▪ Oscillation damping @1 ▪ Density ▪ Dynamic viscosity ▪ Sensor electronic temperature (ISEM) ▪ Empty pipe detection ▪ Kinematic viscosity ▪ Low flow cut off ▪ Mass flow ▪ Pressure ▪ Exciter current @1 ▪ Exciter current @1 ▪ Oscillation frequency @1 ▪ Oscillation frequency @1 ▪ Reference density ▪ Corrected volume flow ▪ Oscillation damping fluctuation @1 ▪ Oscillation damping fluctuation @1 ▪ Frequency fluctuation @1 ▪ Frequency fluctuation @1 ▪ Target mass flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Status ▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

12.7.3 Diagnostic of configuration

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
303	I/O 1 to n configuration changed		1. Apply I/O module configuration (parameter 'Apply I/O configuration') 2. Afterwards reload device description and check wiring	–
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	M		
	Diagnostic behavior	Warning		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
330	Flash file invalid		1. Update firmware of device 2. Restart device ■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	M	
	Diagnostic behavior	Warning	

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
331	Firmware update failed		1. Update firmware of device 2. Restart device ■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Warning	

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
410	Data transfer	1. Check connection 2. Retry data transfer	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables	
No.	Short text			
412	Processing download		Download active, please wait	▪ Oscillation amplitude @1 ▪ Oscillation amplitude @1 ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Concentration ▪ Measured values @1 ▪ Measured values @1 ▪ Measured values @1 ▪ Oscillation damping @1 ▪ Oscillation damping @1 ▪ Density ▪ Dynamic viscosity ▪ Sensor electronic temperature (ISEM) ▪ Empty pipe detection ▪ Kinematic viscosity ▪ Low flow cut off ▪ Mass flow ▪ HBSI ▪ Pressure ▪ Exciter current @1 ▪ Exciter current @1 ▪ Oscillation frequency @1 ▪ Oscillation frequency @1 ▪ Reference density ▪ Corrected volume flow ▪ Oscillation damping fluctuation @1 ▪ Oscillation damping fluctuation @1 ▪ Frequency fluctuation @1 ▪ Frequency fluctuation @1 ▪ Target mass flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Status ▪ Volume flow
	Measured variable status			
	Quality	Uncertain		
	Quality substatus	Initial value		
	Coding (hex)	0x4C to 0x4F		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
431	Trim 1 to n		Carry out trim	–
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
437	Configuration incompatible		1. Restart device 2. Contact service ■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	F	
	Diagnostic behavior	Alarm	

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
438	Dataset	1. Check data set file 2. Check device configuration 3. Up- and download new configuration	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
441	Current output 1 to n	1. Check process 2. Check current output settings	–
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
442	Frequency output 1 to n		1. Check process 2. Check frequency output settings	–
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
443	Pulse output 1 to n		1. Check process 2. Check pulse output settings	–
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
444	Current input 1 to n		1. Check process 2. Check current input settings	■ Measured values @1 ■ Measured values @1 ■ Measured values @1
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Function check		
	Coding (hex)	0xBC to 0xBF		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
453	Flow override		Deactivate flow override	▪ Oscillation amplitude @1 ▪ Oscillation amplitude @1 ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Concentration ▪ Oscillation damping @1 ▪ Oscillation damping @1 ▪ Density ▪ Dynamic viscosity ▪ Sensor electronic temperature (ISEM) ▪ Empty pipe detection ▪ Kinematic viscosity ▪ Low flow cut off ▪ Mass flow ▪ HBSI ▪ Pressure ▪ Exciter current @1 ▪ Exciter current @1 ▪ Oscillation frequency @1 ▪ Oscillation frequency @1 ▪ Reference density ▪ Corrected volume flow ▪ Oscillation damping fluctuation @1 ▪ Oscillation damping fluctuation @1 ▪ Frequency fluctuation @1 ▪ Frequency fluctuation @1 ▪ Target mass flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Status ▪ Volume flow
	Measured variable status			
	Quality	Good		
	Quality substatus	Function check		
	Coding (hex)	0xBC to 0xBF		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
463	Analog input 1 to n selection invalid		1. Check module/channel configuration 2. Check I/O module configuration	■ Measured values @1 ■ Measured values @1 ■ Measured values @1
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
482	FB not Auto/Cas		Set Block in AUTO mode	–
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
484	Failure mode simulation		Deactivate simulation	▪ Oscillation amplitude @1 ▪ Oscillation amplitude @1 ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Concentration ▪ Oscillation damping @1 ▪ Oscillation damping @1 ▪ Density ▪ Dynamic viscosity ▪ Sensor electronic temperature (ISEM) ▪ Empty pipe detection ▪ Kinematic viscosity ▪ Low flow cut off ▪ Mass flow ▪ HBSI ▪ Pressure ▪ Exciter current @1 ▪ Exciter current @1 ▪ Oscillation frequency @1 ▪ Oscillation frequency @1 ▪ Reference density ▪ Corrected volume flow ▪ Oscillation damping fluctuation @1 ▪ Oscillation damping fluctuation @1 ▪ Frequency fluctuation @1 ▪ Frequency fluctuation @1 ▪ Target mass flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Status ▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Function check		
	Coding (hex)	0x3C to 0x3F		
	Status signal	C		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
485	Measured variable simulation		Deactivate simulation	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status			
	Quality	Good		
	Quality substatus	Function check		
	Coding (hex)	0xBC to 0xBF		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
486	Current input 1 to n simulation		Deactivate simulation	■ Measured values @1 ■ Measured values @1 ■ Measured values @1
	Measured variable status			
	Quality	Good		
	Quality substatus	Function check		
	Coding (hex)	0xBC to 0xBF		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
491	Current output 1 to n simulation	Deactivate simulation	–
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
492	Simulation frequency output 1 to n	Deactivate simulation frequency output	–
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
493	Simulation pulse output 1 to n	Deactivate simulation pulse output	–
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
494	Switch output simulation 1 to n	Deactivate simulation switch output	–
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
495	Diagnostic event simulation		Deactivate simulation	–
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
496	Status input simulation		Deactivate simulation status input	–
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
497	Simulation block output		Deactivate simulation	–
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	C		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
520	I/O 1 to n hardware configuration invalid		1. Check I/O hardware configuration 2. Replace wrong I/O module 3. Plug the module of double pulse output on correct slot	–
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
537	Configuration		1. Check IP addresses in network 2. Change IP address	–
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	F		
	Diagnostic behavior	Warning		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
594	Relay output simulation		Deactivate simulation switch output	–
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	C		
	Diagnostic behavior	Warning		

12.7.4 Diagnostic of process

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
803	Current loop 1 to n		1. Check wiring 2. Change I/O module	–
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
830	Sensor temperature too high	Reduce ambient temp. around the sensor housing	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
831	Sensor temperature too low	Increase ambient temp. around the sensor housing	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		
	Bad		
	Maintenance alarm		
	0x24 to 0x27		
	S		
	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables	
No.	Short text			
832	Electronic temperature too high		Reduce ambient temperature	▪ Oscillation amplitude @1 ▪ Oscillation amplitude @1 ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Concentration ▪ Measured values @1 ▪ Measured values @1 ▪ Measured values @1 ▪ Oscillation damping @1 ▪ Oscillation damping @1 ▪ Density ▪ Dynamic viscosity ▪ Sensor electronic temperature (ISEM) ▪ Empty pipe detection ▪ Kinematic viscosity ▪ Low flow cut off ▪ Mass flow ▪ HBSI ▪ Pressure ▪ Exciter current @1 ▪ Exciter current @1 ▪ Oscillation frequency @1 ▪ Oscillation frequency @1 ▪ Reference density ▪ Corrected volume flow ▪ Oscillation damping fluctuation @1 ▪ Oscillation damping fluctuation @1 ▪ Frequency fluctuation @1 ▪ Frequency fluctuation @1 ▪ Target mass flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Status ▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
833	Electronic temperature too low		■ Increase ambient temperature ■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Measured values @1 ■ Measured values @1 ■ Measured values @1 ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	S	
	Diagnostic behavior	Warning	

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
834	Process temperature too high		Reduce process temperature	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
835	Process temperature too low		Increase process temperature ▪ Oscillation amplitude @1 ▪ Oscillation amplitude @1 ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Concentration ▪ Oscillation damping @1 ▪ Oscillation damping @1 ▪ Density ▪ Dynamic viscosity ▪ Sensor electronic temperature (ISEM) ▪ Empty pipe detection ▪ Kinematic viscosity ▪ Low flow cut off ▪ Mass flow ▪ HBSI ▪ Pressure ▪ Exciter current @1 ▪ Exciter current @1 ▪ Oscillation frequency @1 ▪ Oscillation frequency @1 ▪ Reference density ▪ Corrected volume flow ▪ Oscillation damping fluctuation @1 ▪ Oscillation damping fluctuation @1 ▪ Frequency fluctuation @1 ▪ Frequency fluctuation @1 ▪ Target mass flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Status ▪ Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	S	
	Diagnostic behavior	Warning	

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
842	Process limit	Low flow cut off active! 1. Check low flow cut off configuration	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
843	Process limit	Check process conditions	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
862	Partly filled pipe	1. Check for gas in process 2. Adjust detection limits	■ Carrier mass flow ■ Concentration ■ Density ■ Dynamic viscosity ■ Kinematic viscosity ■ Mass flow ■ HBSI ■ Reference density ■ Corrected volume flow ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
882	Input signal		1. Check input configuration 2. Check external device or process conditions	▪ Carrier mass flow ▪ Measured values @1 ▪ Measured values @1 ▪ Measured values @1 ▪ Density ▪ Mass flow ▪ Reference density ▪ Corrected volume flow ▪ Status ▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
910	Tubes not oscillating		1. Check electronic 2. Inspect sensor	▪ Oscillation amplitude @1 ▪ Oscillation amplitude @1 ▪ Signal asymmetry ▪ Carrier mass flow ▪ Carrier pipe temperature ▪ Concentration ▪ Oscillation damping @1 ▪ Oscillation damping @1 ▪ Density ▪ Dynamic viscosity ▪ Sensor electronic temperature (ISEM) ▪ Empty pipe detection ▪ Kinematic viscosity ▪ Low flow cut off ▪ Mass flow ▪ HBSI ▪ Pressure ▪ Exciter current @1 ▪ Exciter current @1 ▪ Oscillation frequency @1 ▪ Oscillation frequency @1 ▪ Reference density ▪ Corrected volume flow ▪ Oscillation damping fluctuation @1 ▪ Oscillation damping fluctuation @1 ▪ Frequency fluctuation @1 ▪ Frequency fluctuation @1 ▪ Target mass flow ▪ Temp. compensated dynamic viscosity ▪ Temp. compensated kinematic viscosity ▪ Temperature ▪ Status ▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
912	Medium inhomogeneous	1. Check process cond. 2. Increase system pressure	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
913	Medium unsuitable	1. Check process conditions 2. Check electronic modules or sensor	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
944	Monitoring failed		Check process conditions for Heartbeat Monitoring ■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality	Bad	
	Quality substatus	Maintenance alarm	
	Coding (hex)	0x24 to 0x27	
	Status signal	S	
	Diagnostic behavior	Warning	

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
948	Oscillation damping too high	Check process conditions	■ Oscillation amplitude @1 ■ Oscillation amplitude @1 ■ Signal asymmetry ■ Carrier mass flow ■ Carrier pipe temperature ■ Concentration ■ Oscillation damping @1 ■ Oscillation damping @1 ■ Density ■ Dynamic viscosity ■ Sensor electronic temperature (ISEM) ■ Empty pipe detection ■ Kinematic viscosity ■ Low flow cut off ■ Mass flow ■ HBSI ■ Pressure ■ Exciter current @1 ■ Exciter current @1 ■ Oscillation frequency @1 ■ Oscillation frequency @1 ■ Reference density ■ Corrected volume flow ■ Oscillation damping fluctuation @1 ■ Oscillation damping fluctuation @1 ■ Frequency fluctuation @1 ■ Frequency fluctuation @1 ■ Target mass flow ■ Temp. compensated dynamic viscosity ■ Temp. compensated kinematic viscosity ■ Temperature ■ Status ■ Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Coding (hex)		
	Status signal		
	Diagnostic behavior		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.8 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.




To call up the measures to rectify a diagnostic event:

- Via local display → 147
- Via Web browser → 148
- Via "FieldCare" operating tool → 149
- Via "DeviceCare" operating tool → 149



Other pending diagnostic events can be displayed in the **Diagnostic list** submenu
→ 210

Navigation
"Diagnostics" menu

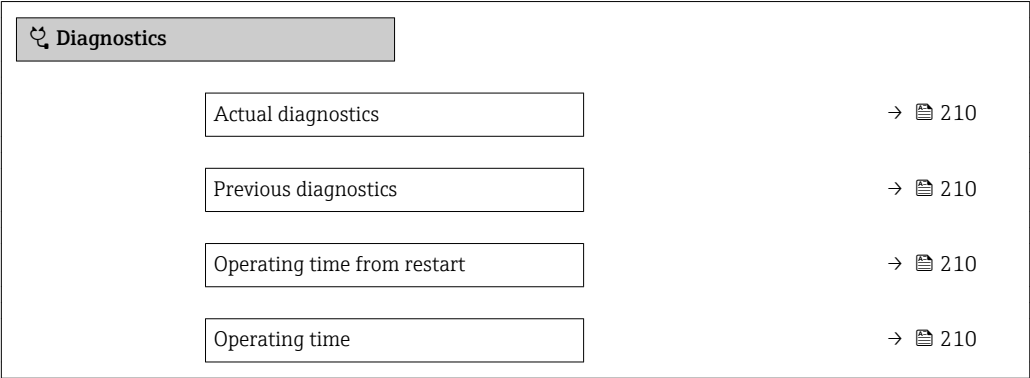


Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occurred diagnostic event along with its diagnostic information.  If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	Symbol for diagnostic behavior, diagnostic code and short message.
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	–	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	–	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

12.9 Diagnostic list

Up to 5 currently pending diagnostic events can be displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path
Diagnostics → Diagnostic list

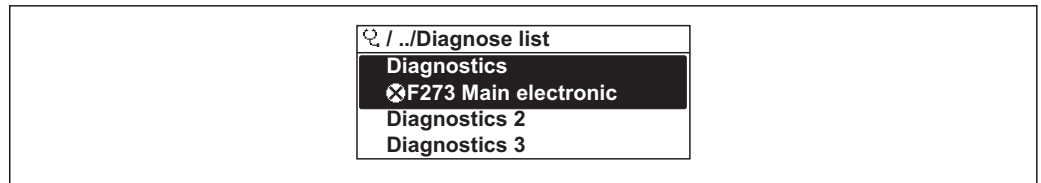

A0014006-EN

25 Taking the example of the local display

i To call up the measures to rectify a diagnostic event:

- Via local display → 147
- Via Web browser → 148
- Via "FieldCare" operating tool → 149
- Via "DeviceCare" operating tool → 149


12.10 Event logbook

12.10.1 Event history

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

Navigation path

Diagnostics menu → **Event logbook** submenu → Event list

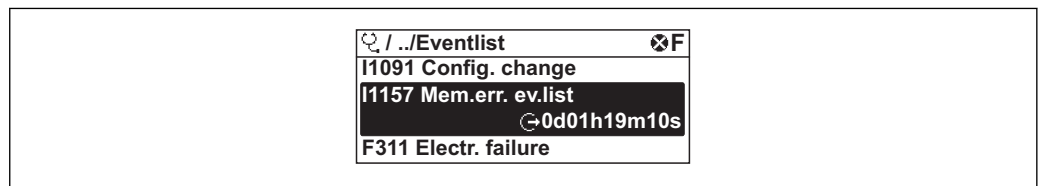

A0014008-EN

26 Taking the example of the local display

- Max. 20 event messages can be displayed in chronological order.
- If the **Extended HistoROM** application package (order option) is enabled in the device, the event list can contain up to 100 entries.

The event history includes entries for:

- Diagnostic events → 152
- Information events → 212

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
 - ☺: Occurrence of the event
 - ☹: End of the event
- Information event
 - ☺: Occurrence of the event

i To call up the measures to rectify a diagnostic event:

- Via local display → 147
- Via Web browser → 148
- Via "FieldCare" operating tool → 149
- Via "DeviceCare" operating tool → 149

i For filtering the displayed event messages → 212

12.10.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

Navigation path

Diagnostics → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.10.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
I1000	----- (Device ok)
I1079	Sensor changed
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	Embedded HistoROM deleted
I1111	Density adjust failure
I1137	Electronic changed
I1151	History reset
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1184	Display connected
I1209	Density adjustment ok
I1221	Zero point adjust failure
I1222	Zero point adjustment ok
I1256	Display: access status changed
I1278	I/O module reset detected
I1335	Firmware changed
I1361	Web server login failed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1444	Device verification passed
I1445	Device verification failed
I1447	Record application reference data
I1448	Application reference data recorded
I1449	Recording application ref. data failed
I1450	Monitoring off

Info number	Info name
I1451	Monitoring on
I1457	Measured error verification failed
I1459	I/O module verification failed
I1460	HBSI verification failed
I1461	Sensor verification failed
I1462	Sensor electronic module verific. failed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished
I1618	I/O module replaced
I1619	I/O module replaced
I1621	I/O module replaced
I1622	Calibration changed
I1624	Reset all totalizers
I1625	Write protection activated
I1626	Write protection deactivated
I1627	Web server login successful
I1628	Display login successful
I1629	CDI login successful
I1631	Web server access changed
I1632	Display login failed
I1633	CDI login failed
I1634	Parameter factory reset
I1635	Parameter delivery reset
I1636	Fieldbus address reset
I1639	Max. switch cycles number reached
I1649	Hardware write protection activated
I1650	Hardware write protection deactivated
I1712	New flash file received
I1725	Sensor electronic module (ISEM) changed
I1726	Configuration backup failed

12.11 Resetting the measuring device

Using the **Device reset** parameter (→  124) it is possible to reset the entire device configuration or some of the configuration to a defined state.

12.11.1 Function scope of the "Device reset" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.
Restore S-DAT backup	Restore the data that are saved on the S-DAT. The data record is restored from the electronics memory to the S-DAT.

12.12 Device information

The **Device information** submenu contains all parameters that display different information for device identification.

Navigation

"Diagnostics" menu → Device information

► Device information

Device tag

Serial number

Firmware version

Device name

Order code

Extended order code 1

Extended order code 2

Extended order code 3

ENP version

PROFIBUS ident number

Status PROFIBUS Master Config

→ ⓘ 215

→ ⓘ 215

→ ⓘ 215

→ ⓘ 215

→ ⓘ 215

→ ⓘ 215

→ ⓘ 215

→ ⓘ 215

→ ⓘ 215

→ ⓘ 215

→ ⓘ 215

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Device tag	Shows name of measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Promass300/500PA
Serial number	Shows the serial number of the measuring device.	A maximum of 11-digit character string comprising letters and numbers.	–
Firmware version	Shows the device firmware version installed.	Character string in the format xx.yy.zz	–
Device name	Shows the name of the transmitter.  The name can be found on the nameplate of the transmitter.	Promass300/500	–
Order code	Shows the device order code.  The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks (e.g. /).	–
Extended order code 1	Shows the 1st part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
Extended order code 2	Shows the 2nd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
Extended order code 3	Shows the 3rd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	–
ENP version	Shows the version of the electronic nameplate (ENP).	Character string	2.02.00
PROFIBUS ident number	Displays the PROFIBUS identification number.	0 to FFFF	0x156D
Status PROFIBUS Master Config	Displays the status of the PROFIBUS Master configuration.	■ Active ■ Not active	Not active

12.13 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
08.2016	01.00.zz	Option 72	Original firmware	Operating Instructions	BA01504D/06/EN/01.16

 It is possible to flash the firmware to the current version or the previous version using the service interface.

 For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.

 The manufacturer's information is available:

- In the Download Area of the Endress+Hauser web site: www.endress.com → Downloads
- Specify the following details:
 - Product root, e.g. 8E3B
 - Text search: Manufacturer's information
 - Media type: Documentation – Technical Documentation

13 Maintenance

13.1 Maintenance tasks

No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

13.1.2 Interior cleaning

Observe the following points for CIP and SIP cleaning:

- Use only cleaning agents to which the process-wetted materials are adequately resistant.
- Observe the maximum permitted medium temperature for the measuring device
→  236.

13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment: →  220

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

 Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repairs

14.1 General notes

14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

14.1.2 Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- ▶ Use only original Endress+Hauser spare parts.
- ▶ Carry out the repair according to the Installation Instructions.
- ▶ Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ▶ Document every repair and each conversion and enter them into the *W@M* life cycle management database.

14.2 Spare parts

W@M Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.



Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the **Serial number** parameter (→ 215) in the **Device information** submenu.

14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.



Your Endress+Hauser Sales Center can provide detailed information on the services.

14.4 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at

<http://www.endress.com/support/return-material>

14.5 Disposal

14.5.1 Removing the measuring device

1. Switch off the device.

WARNING

Danger to persons from process conditions.

- ▶ Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.
2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

14.5.2 Disposing of the measuring device

WARNING

Danger to personnel and environment from fluids that are hazardous to health.

- ▶ Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- ▶ Observe valid federal/national regulations.
- ▶ Ensure proper separation and reuse of the device components.

15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Device-specific accessories

15.1.1 For the transmitter

Accessories	Description
Promass 300 transmitter	Transmitter for replacement or storage. Use the order code to define the following specifications: ▪ Approvals ▪ Output ▪ Input ▪ Display / operation ▪ Housing ▪ Software  For details, see Installation Instructions EA01150
Remote display and operating module DKX001	The remote display and operating module DKX001 is available as an optional extra: Order code for "Display; operation", option O "Separate backlit, 4-line display; 10 m (30 ft) Cable; touch control" The remote display and operating module DKX001 can also be ordered separately and subsequently as an accessory without a measuring device .  Further information on display and operating module DKX001 →  242.  For details, see Special Documentation SD01763D
WLAN antenna Wide range	External WLAN antenna for a range of up to 50 m (165 ft).  Further information on the WLAN interface →  64.
Protective cover	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight.  For details, see Installation Instructions EA01160

15.1.2 For the sensor

Accessories	Description
Heating jacket	Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids. If using oil as a heating medium, please consult with Endress+Hauser. Heating jackets cannot be used with sensors fitted with a rupture disk.  For details, see Operating Instructions BA00099D

15.2 Service-specific accessories

Accessories	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring devices: - Choice of measuring devices for industrial requirements - Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy. - Graphic illustration of the calculation results - Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project. Applicator is available: - Via the Internet: https://wapps.endress.com/applicator - As a downloadable DVD for local PC installation.
W@M	W@M Life Cycle Management Improved productivity with information at your fingertips. Data relevant to a plant and its components is generated from the first stages of planning and during the asset's complete life cycle. W@M Life Cycle Management is an open and flexible information platform with online and on-site tools. Instant access for your staff to current, in-depth data shortens your plant's engineering time, speeds up procurement processes and increases plant uptime. Combined with the right services, W@M Life Cycle Management boosts productivity in every phase. For more information, visit www.endress.com/lifecyclemanagement
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.  For details, see Operating Instructions BA00027S and BA00059S
DeviceCare	Tool for connecting and configuring Endress+Hauser field devices.  For details, see Innovation brochure IN01047S

15.3 System components

Accessories	Description
Memograph M graphic display recorder	The Memograph M graphic display recorder provides information on all relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.  For details, see "Technical Information" TI00133R and Operating Instructions BA00247R
Cerabar M	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.  For details, see "Technical Information" TI00426P, TI00436P and Operating Instructions BA00200P, BA00382P
Cerabar S	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.  For details, see "Technical Information" TI00383P and Operating Instructions BA00271P
iTEMP	The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the fluid temperature.  For details, see "Fields of Activity", FA00006T

16 Technical data

16.1 Application

The measuring device is suitable for flow measurement of liquids and gases only.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

16.2 Function and system design

Measuring principle	Mass flow measurement based on the Coriolis measuring principle
Measuring system	The device consists of a transmitter and a sensor. The device is available as a compact version: The transmitter and sensor form a mechanical unit. For information on the structure of the device →  14

16.3 Input

Measured variable

Direct measured variables

- Mass flow
- Density
- Temperature

Calculated measured variables

- Volume flow
- Corrected volume flow
- Reference density

Measuring range

Measuring ranges for liquids

DN		Measuring range full scale values $\dot{m}_{\min(F)}$ to $\dot{m}_{\max(F)}$	
[mm]	[in]	[kg/h]	[lb/min]
1	$\frac{1}{24}$	0 to 20	0 to 0.735
2	$\frac{1}{12}$	0 to 100	0 to 3.675
4	$\frac{1}{6}$	0 to 450	0 to 16.54

Measuring ranges for gases

The full scale values depend on the density of the gas and can be calculated with the formula below:

$$\dot{m}_{\max(G)} = \dot{m}_{\max(F)} \cdot \rho_G : x$$

$\dot{m}_{\max(G)}$	Maximum full scale value for gas [kg/h]
$\dot{m}_{\max(F)}$	Maximum full scale value for liquid [kg/h]
$\dot{m}_{\max(G)} < \dot{m}_{\max(F)}$	$\dot{m}_{\max(G)}$ can never be greater than $\dot{m}_{\max(F)}$
ρ_G	Gas density in [kg/m ³] at operating conditions
x	Constant dependent on nominal diameter

DN		x
[mm]	[in]	[kg/m ³]
1	$\frac{1}{24}$	32
2	$\frac{1}{12}$	32
4	$\frac{1}{6}$	32

Calculation example for gas

- Sensor: Promass A, DN 2
- Gas: Air with a density of 11.9 kg/m³ (at 20 °C and 10 bar)
- Measuring range (liquid): 100 kg/h
- x = 32 kg/m³ (for Promass A DN 2)

Maximum possible full scale value:

$$\dot{m}_{\max(G)} = \dot{m}_{\max(F)} \cdot \rho_G : x = 100 \text{ kg/h} \cdot 11.9 \text{ kg/m}^3 : 32 \text{ kg/m}^3 = 37.2 \text{ kg/h}$$

Recommended measuring range

"Flow limit" section →  237

Operable flow range

Over 1000 : 1.

Flow rates above the preset full scale value do not override the electronics unit, with the result that the totalizer values are registered correctly.

Input signal

External measured values

To increase the accuracy of certain measured variables or to calculate the corrected volume flow for gases, the automation system can continuously write different measured values to the measuring device:

- Operating pressure to increase accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S)
- Fluid temperature to increase accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow for gases



Various pressure transmitters and temperature measuring devices can be ordered from Endress+Hauser: see "Accessories" section → 221

It is recommended to read in external measured values to calculate the following measured variables for gases:

- Mass flow
- Corrected volume flow

Current input

The measured values are written from the automation system to the measuring device via the current input → 224.

Digital communication

The measured values are written from the automation system to the measuring device via PROFIBUS PA.

Current input 0/4 to 20 mA

Current input	0/4 to 20 mA (active/passive)
Current span	■ 4 to 20 mA (active) ■ 0/4 to 20 mA (passive)
Resolution	1 µA
Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)
Maximum input voltage	≤ 30 V (passive)
Open-circuit voltage	≤ 28.8 V (active)
Possible input variables	■ Pressure ■ Temperature ■ Density

Status input

Maximum input values	■ DC -3 to 30 V ■ If status input is active (ON): $R_i > 3 \text{ k}\Omega$
Response time	Adjustable: 5 to 200 ms
Input signal level	■ Low signal: DC -3 to +5 V ■ High signal: DC 12 to 30 V
Assignable functions	■ Off ■ Reset the individual totalizers separately ■ Reset all totalizers ■ Flow override

16.4 Output

Output signal

PROFIBUS PA

PROFIBUS PA	In accordance with EN 50170 Volume 2, IEC 61158-2 (MBP), galvanically isolated
Data transfer	31.25 KBit/s
Current consumption	10 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

Current output 0/4 to 20 mA

Current output	0/4 to 20 mA
Maximum output values	22.5 mA
Current span	Can be set to: ■ 4 to 20 mA (active) ■ 0/4 to 20 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	0 to 700 Ω
Resolution	0.38 µA
Damping	Adjustable: 0.07 to 999 s
Assignable measured variables	■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature  The range of options increases if the measuring device has one or more application packages.

Pulse/frequency/switch output

Function	Can be set to pulse, frequency or switch output
Version	Open collector Can be set to: ■ Active ■ Passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Pulse output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Pulse width	Adjustable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Adjustable

Assignable measured variables	■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature
Frequency output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Adjustable: end value frequency 2 to 10 000 Hz ($f_{\max} = 12\,500$ Hz)
Damping	Adjustable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature  The range of options increases if the measuring device has one or more application packages.
Switch output	
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Adjustable: 0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	■ Off ■ On ■ Diagnostic behavior ■ Limit value – Mass flow – Volume flow – Corrected volume flow – Density – Reference density – Temperature – Totalizer 1-3 ■ Flow direction monitoring ■ Status – Partially filled pipe detection – Low flow cut off  The range of options increases if the measuring device has one or more application packages.

Relay output

Function	Switch output
Version	Relay output, galvanically isolated
Switching behavior	Can be set to: ■ NO (normally open), factory setting ■ NC (normally closed)

Maximum switching capacity (passive)	■ DC 30 V, 0.1 A ■ AC 30 V, 0.5 A
Assignable functions	■ Off ■ On ■ Diagnostic behavior ■ Limit value – Mass flow – Volume flow – Corrected volume flow – Density – Reference density – Temperature – Totalizer 1-3 ■ Flow direction monitoring ■ Status – Partially filled pipe detection – Low flow cut off  The range of options increases if the measuring device has one or more application packages.

User configurable input/output

One specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

The technical values correspond to those of the inputs and outputs described in this section.

Signal on alarm

Depending on the interface, failure information is displayed as follows:

PROFIBUS PA

Status and alarm messages	Diagnostics in accordance with PROFIBUS PA Profile 3.02
Error current FDE (Fault Disconnection Electronic)	0 mA

Current output 0/4 to 20 mA

4 to 20 mA

Failure mode	Choose from: ■ 4 to 20 mA in accordance with NAMUR recommendation NE 43 ■ 4 to 20 mA in accordance with US ■ Min. value: 3.59 mA ■ Max. value: 22.5 mA ■ Freely definable value between: 3.59 to 22.5 mA ■ Actual value ■ Last valid value
---------------------	--

0 to 20 mA

Failure mode	Choose from: ■ Maximum alarm: 22 mA ■ Freely definable value between: 0 to 20.5 mA
---------------------	---

Pulse/frequency/switch output

Pulse output	
Failure mode	Choose from: - Actual value - No pulses
Frequency output	
Failure mode	Choose from: - Actual value 0 Hz - Defined value ($f_{\max}$ 2 to 12 500 Hz)
Switch output	
Failure mode	Choose from: - Current status - Open - Closed

Relay output

Failure mode	Choose from: - Current status - Open - Closed
--------------	---

Local display

Plain text display	With information on cause and remedial measures
Backlight	Red backlighting indicates a device error.



Status signal as per NAMUR recommendation NE 107

Interface/protocol

- Via digital communication:
PROFIBUS PA
- Via service interface

Plain text display	With information on cause and remedial measures
--------------------	---

Web server

Plain text display	With information on cause and remedial measures
--------------------	---

Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes The following information is displayed depending on the device version: - Supply voltage active - Data transmission active - Device alarm/error has occurred Diagnostic information via light emitting diodes
--------------------	---

Low flow cut off The switch points for low flow cut off are user-selectable.

Galvanic isolation The outputs are galvanically isolated from one another and from earth (PE).

Protocol-specific data	Manufacturer ID	0x11
	Ident number	0x156D
	Profile version	3.02
	Device description files (GSD, DTM, DD)	Information and files under: ▪ www.endress.com ▪ www.profibus.org
	Output values (from measuring device to automation system)	Analog input 1 to 8 ▪ Mass flow ▪ Volume flow ▪ Corrected volume flow ▪ Carrier mass flow ▪ Target mass flow ▪ Density ▪ Reference density ▪ Concentration ▪ Temperature ▪ Carrier pipe temperature ▪ Electronic temperature ▪ Current input  The range of options increases if the measuring device has one or more application packages. Heartbeat Technology Application Package Additional measured variables are available with the Heartbeat Technology application package: ▪ Oscillation frequency 0 ▪ Frequency fluctuation 0 ▪ Oscillation amplitude 0 ▪ Oscillation damping 0 ▪ Oscillation damping fluctuation 0 ▪ Exciter current 0  Heartbeat Technology Special Documentation →  249 Digital input 1 to 2 ▪ Empty pipe detection ▪ Low flow cut off ▪ Status verification Totalizer 1 to 3 ▪ Mass flow ▪ Volume flow ▪ Corrected volume flow ▪ Target mass flow ▪ Carrier mass flow

Input values (from automation system to measuring device)	Analog output 1 to 3 (fixed assignment) ■ Analog output 1: external pressure ■ Analog output 2: external temperature ■ Analog output 3: external reference density Digital output 1 to 4: (fixed assignment) ■ Digital output 1: switch positive zero return on/off ■ Digital output 2: switch zero point adjustment on/off ■ Digital output 3: start verification ■ Digital output 4: relay output non-conductive/conductive Totalizer 1 to 3 ■ Totalize ■ Reset and hold ■ Preset and hold ■ Operating mode configuration: – Net flow total – Forward flow total – Reverse flow total – Last valid value
Supported functions	■ Identification & Maintenance Simplest device identification on the part of the control system and nameplate ■ PROFIBUS upload/download Reading and writing parameters is up to ten times faster with PROFIBUS upload/download ■ Condensed status Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur
Configuration of the device address	■ DIP switches on the I/O electronics module ■ Local display ■ Via operating tools (e.g. FieldCare)
Compatibility with earlier model	If the device is replaced, the Promass 300 measuring device supports the compatibility of the cyclic data with earlier models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promass 300 GSD file. Earlier models: ■ Promass 80 PROFIBUS PA – ID No.: 1528 (hex) – Extended GSD file: EH3x1528.gsd – Standard GSD file: EH3_1528.gsd ■ Promass 83 PROFIBUS PA – ID No.: 152A (hex) – Extended GSD file: EH3x152A.gsd – Standard GSD file: EH3_152A.gsd

16.5 Power supply

Terminal assignment	→  34
Device plugs available	→  34
Pin assignment, device plug	→  34

Supply voltage	Order code for "Power supply"	terminal voltage		Frequency range
	Option D	DC 24 V	±20%	–
	Option E	AC100 to 240 V	–15...+10%	50/60 Hz

Order code for "Power supply"	terminal voltage		Frequency range
Option I	DC 24 V	±20%	–
	AC100 to 240 V	–15...+10%	50/60 Hz

Power consumption

Transmitter

Max. 10 W (active power)

Current consumption

Transmitter

- Max. 400 mA (24 V)
- Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)

Power supply failure

- Totalizers stop at the last value measured.
- Configuration is retained in the plug-in memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

Electrical connection

→  35

Potential equalization

→  38

Terminals

TransmitterSpring terminals for conductor cross-section 0.2 to 2.5 mm² (24 to 12 AWG)

Cable entries

- Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
 - NPT ½"
 - G ½"
 - M20
- Device plug for digital communication: M12

Cable specification

→  32

16.6 Performance characteristics

reference operating conditions

- Error limits based on ISO 11631
- Water with +15 to +45 °C (+59 to +113 °F) at 2 to 6 bar (29 to 87 psi)
- Specifications as per calibration protocol
- Accuracy based on accredited calibration rigs that are traced to ISO 17025.

To obtain measured errors, use the *Applicator* sizing tool →  221

Maximum measured error

o.r. = of reading; 1 g/cm³ = 1 kg/l; T = medium temperature**Base accuracy**Design fundamentals →  234

Mass flow and volume flow (liquids)

±0.10 % o.r.

Mass flow (gases)

±0.50 % o.r.

Density (liquids)

Under reference operating conditions [g/cm ³]	Standard density calibration ¹⁾ [g/cm ³]	Wide-range Density specification ^{2) 3)} [g/cm ³]
±0.0005	±0.02	±0.002

1) Valid over the entire temperature and density range

2) Valid range for special density calibration: 0 to 2 g/cm³, +5 to +80 °C (+41 to +176 °F)

3) Order code for "Application package", option EF "Special density"

Temperature

±0.5 °C ± 0.005 · T °C (±0.9 °F ± 0.003 · (T – 32) °F)

Zero point stability

DN		Zero point stability	
[mm]	[in]	[kg/h]	[lb/min]
1	1/24	0.0010	0.000036
2	1/12	0.0050	0.00018
4	1/8	0.0225	0.0008

Flow values

Flow values as turndown parameter depending on nominal diameter.

SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
1	20	2	1	0.4	0.2	0.04
2	100	10	5	2	1	0.2
4	450	45	22.5	9	4.5	0.9

US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
1/24	0.735	0.074	0.037	0.015	0.007	0.001
1/12	3.675	0.368	0.184	0.074	0.037	0.007
1/8	16.54	1.654	0.827	0.331	0.165	0.033

Accuracy of outputs

The outputs have the following base accuracy specifications.

Current output

Accuracy	$\pm 5 \mu\text{A}$
-----------------	---------------------

Pulse/frequency output

o.r. = of reading

Accuracy	Max. $\pm 50 \text{ ppm o.r.}$ (across the entire ambient temperature range)
-----------------	--

Repeatability

o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature

Base repeatability**Mass flow and volume flow (liquids)**

$\pm 0.05 \% \text{ o.r.}$

Mass flow (gases)

$\pm 0.25 \% \text{ o.r.}$

 Design fundamentals →  234

Density (liquids)

$\pm 0.00025 \text{ g/cm}^3$

Temperature

$\pm 0.25 ^\circ\text{C} \pm 0.0025 \cdot T ^\circ\text{C}$ ($\pm 0.45 ^\circ\text{F} \pm 0.0015 \cdot (T-32) ^\circ\text{F}$)

Response time

The response time depends on the configuration (damping).

Influence of ambient temperature

Current output

o.r. = of reading

Temperature coefficient	Max. $1 \mu\text{A}/^\circ\text{C}$
--------------------------------	-------------------------------------

Pulse/frequency output

Temperature coefficient	No additional effect. Included in accuracy.
--------------------------------	---

Influence of medium temperature

Mass flow and volume flow


When there is a difference between the temperature for zero point adjustment and the process temperature, the typical measured error of the sensor is $\pm 0.0002 \%$ of the full scale value/ $^\circ\text{C}$ ($\pm 0.0001 \%$ of the full scale value/ $^\circ\text{F}$).

Density

When there is a difference between the density calibration temperature and the process temperature, the typical measured error of the sensor is $\pm 0.00005 \text{ g/cm}^3 / ^\circ\text{C}$ ($\pm 0.000025 \text{ g/cm}^3 / ^\circ\text{F}$). Field density calibration is possible.

Wide-range density specification (special density calibration)

If the process temperature is outside the valid range (→  231) the measured error is $\pm 0.00005 \text{ g/cm}^3 / ^\circ\text{C}$ ($\pm 0.000025 \text{ g/cm}^3 / ^\circ\text{F}$)

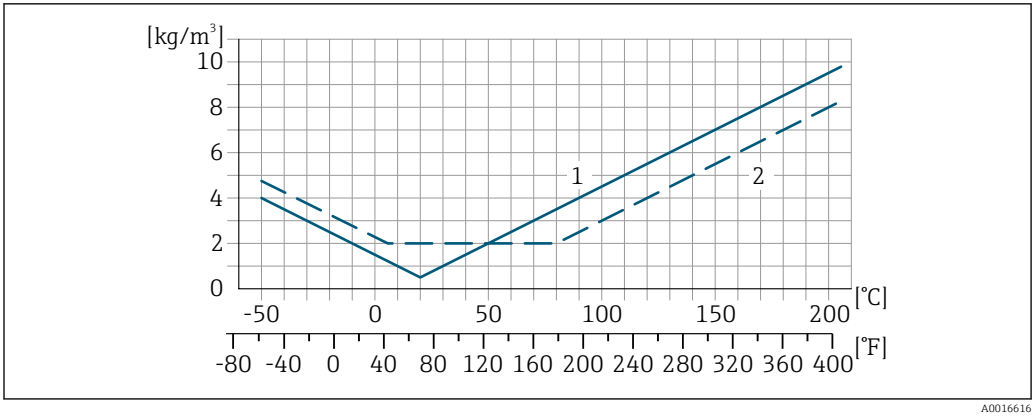

- 1 Field density calibration, for example at +20 °C (+68 °F)
- 2 Special density calibration

Temperature
 $\pm 0.005 \cdot T\text{ }^{\circ}\text{C}$ ($\pm 0.005 \cdot (T - 32)\text{ }^{\circ}\text{F}$)

Influence of medium pressure
A difference between the calibration pressure and process pressure does not affect accuracy.


Design fundamentals
o.r. = of reading, o.f.s. = of full scale value
BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.
MeasValue = measured value; ZeroPoint = zero point stability
Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ A0021332	$\pm \text{BaseAccu}$ A0021339
$< \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ A0021333	$\pm \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$ A0021334

Calculation of the maximum repeatability as a function of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$ A0021335	$\pm \text{BaseRepeat}$ A0021340
$< \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$ A0021336	$\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$ A0021337

Example for max. measured error

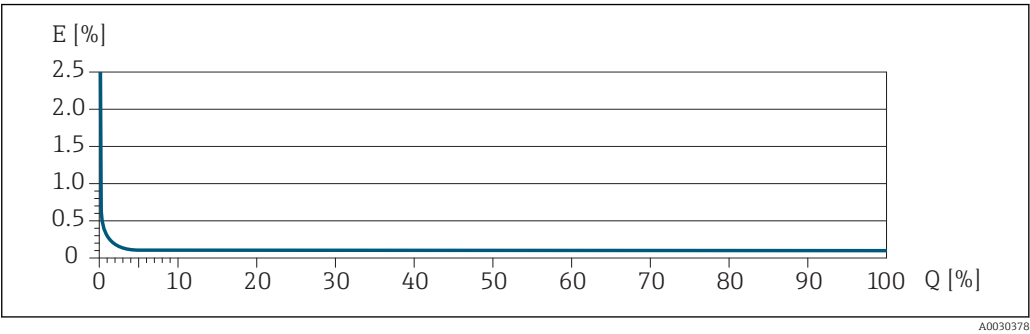

E Error: Maximum measured error as % o.r. (example)
 Q Flow rate as %

16.7 Installation

"Mounting requirements" → 22

16.8 Environment

Ambient temperature range → 23

Temperature tables

- Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.
- For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Storage temperature −50 to +80 °C (−58 to +176 °F)

Climate class DIN EN 60068-2-38 (test Z/AD)

Degree of protection **Transmitter and sensor**

- As standard: IP66/67, type 4X enclosure
- When housing is open: IP20, type 1 enclosure
- Display module: IP20, type 1 enclosure

External WLAN antenna
IP67

Vibration resistance

- Vibration, sinusoidal according to IEC 60068-2-6
 - 2 to 8.4 Hz, 3.5 mm peak
 - 8.4 to 2 000 Hz, 1 g peak
- Vibration broad-band random, according to IEC 60068-2-64
 - 10 to 200 Hz, 0.003 g²/Hz
 - 200 to 2 000 Hz, 0.001 g²/Hz
 - Total: 1.54 g rms

Shock resistance Shock, half-sine according to IEC 60068-2-27
6 ms 30 g

Impact resistance


Rough handling shocks according to IEC 60068-2-31

Electromagnetic compatibility (EMC)

As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)
 For details, refer to the Declaration of Conformity.

16.9 Process

Medium temperature range

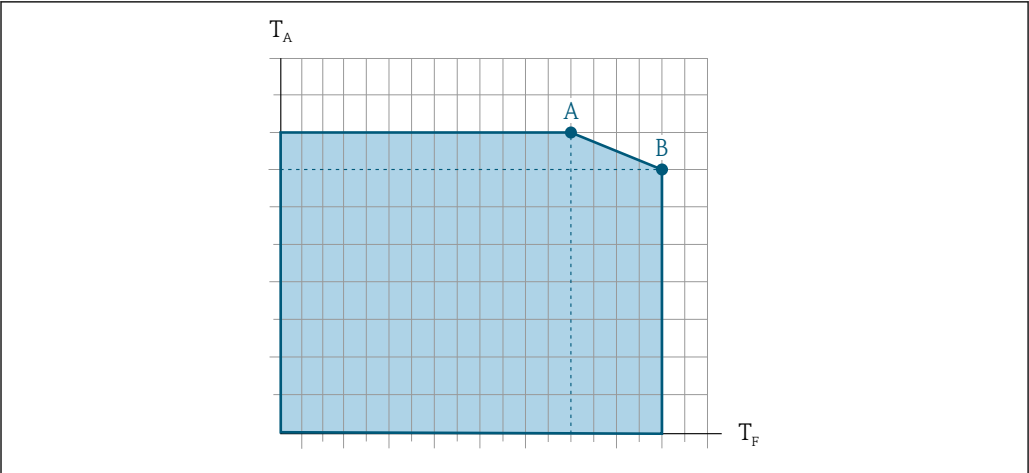

T_A Ambient temperature
 T_F Medium temperature
A Maximum permitted medium temperature at $T_{A\,max} = 60\text{ °C (140 °F)}$; higher medium temperatures require a reduction in the ambient temperature T_F (derating)
B Maximum permitted ambient temperature at the maximum specified medium temperature of the sensor

Sensor	Noninsulated				Insulated			
	A		B		A		B	
	T_A	T_F	T_A	T_F	T_A	T_F	T_A	T_F
Promass A 300	60 °C (140 °F)	205 °C (401 °F)	–	–	60 °C (140 °F)	120 °C (248 °F)	55 °C (131 °F)	205 °C (401 °F)

- Seals
- No internal seals
 - For mounting sets with screwed-on connections:
 - Viton: –15 to +200 °C (–5 to +392 °F)
 - EPDM: –40 to +160 °C (–40 to +320 °F)
 - Silicon: –60 to +200 °C (–76 to +392 °F)
 - Kalrez: –20 to +275 °C (–4 to +527 °F)

Density

0 to 5 000 kg/m³ (0 to 312 lb/cf)

Pressure-temperature ratings

 An overview of the pressure-temperature ratings for the process connections is provided in the "Technical Information" document

Secondary containment pressure rating

The sensor housing is filled with dry inert gas and protects the electronics and mechanics inside.

The following secondary containment pressure rating is only valid for a fully welded sensor housing and/or a device equipped with closed purge connections (never opened/as delivered).

DN		Secondary containment pressure rating (designed with a safety factor ≥ 4)		Secondary containment burst pressure	
[mm]	[in]	[bar]	[psi]	[bar]	[psi]
1	$\frac{1}{24}$	25	362	175	2 538
2	$\frac{1}{12}$	25	362	155	2 248
4	$\frac{1}{8}$	25	362	130	1 885



If there is a risk of the measuring tube breaking due to process characteristics, e.g. in the case of corrosive fluids, we recommend the use of sensors whose secondary containment is equipped with special "pressure monitoring connections" (order code for "Sensor option", option **CH** "purge connection").

With the help of these connections, the fluid collected in the secondary containment can be bled off in the event of tube failure. This is especially important in high-pressure gas applications. These connections can also be used for gas purging (gas detection).

Do not open the purge connections unless the containment can be filled immediately with a dry, inert gas. Use only low gauge pressure to purge. Maximum pressure: 5 bar (72.5 psi).

If a device fitted with purge connections is connected to the purge system, the maximum nominal pressure is determined by the purge system itself or by the device, depending on which component has the lower nominal pressure.

If, on the other hand, the device is fitted with a rupture disk, the rupture disk is decisive for the maximum nominal pressure → 237.



For information on the dimensions: see the "Mechanical construction" section of the "Technical Information" document

Rupture disk

To increase the level of safety, a device version with a rupture disk with a trigger pressure of 10 to 15 bar (145 to 217.5 psi) can be used (order code for "Sensor option", option **CA** "rupture disk").

Rupture disks cannot be combined with the separately available heating jacket .

Special mounting instructions: → 26



For information on the dimensions: see the "Mechanical construction" section of the "Technical Information" document

Flow limit

Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.



For an overview of the full scale values for the measuring range, see the "Measuring range" section

- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- In most applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).
- For gas measurement the following rules apply:
 - The flow velocity in the measuring tubes should not exceed half the sound velocity (0.5 Mach).
 - The maximum mass flow depends on the density of the gas: formula →  223

Pressure loss

To calculate the pressure loss, use the *Applicator* sizing tool →  221

System pressure

→  24

16.10 Mechanical construction

Design, dimensions



For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

Weight

Transmitter version for the hazardous area: +2 kg (+4.4 lbs)

All values (weight) refer to devices with EN/DIN PN 40 flanges.

Weight in SI units

DN [mm]	Weight [kg]
1	8
2	9
4	13

Weight in US units

DN [in]	Weight [lbs]
1/24	18
1/12	20
1/8	29

Materials

Transmitter housing

Order code for "Housing":


Option **A** "Aluminum, coated": aluminum, AlSi10Mg, coated

Window material

Order code for "Housing":

Option **A** "Aluminum, coated": glass

Cable entries/cable glands

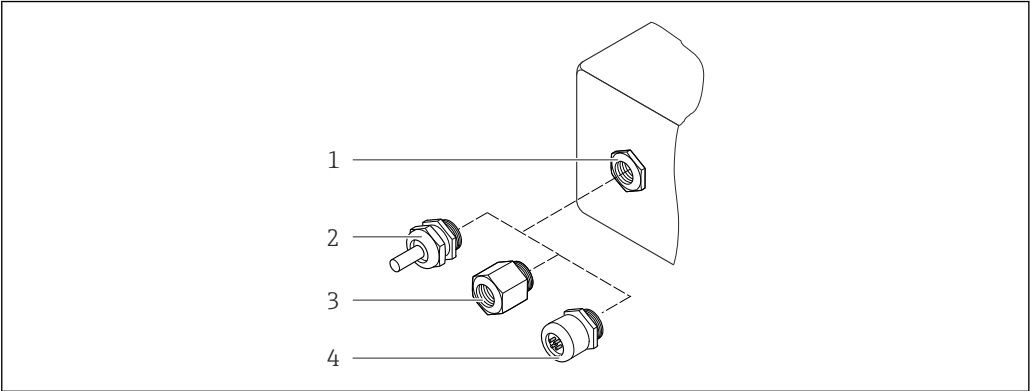

A0028352

27 Possible cable entries/cable glands

- 1 Cable entry with M20 × 1.5 internal thread
- 2 Cable gland M20 × 1.5
- 3 Adapter for cable entry with internal thread G ½" or NPT ½"
- 4 Device plug coupling

Order code for "Housing", option A "Aluminum, coated"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Plastic/nickel-plated brass
Adapter for cable entry with internal thread G ½"	Nickel-plated brass
Adapter for cable entry with internal thread NPT ½"	
Device plug coupling	Plug M12 × 1 ■ Socket: Stainless steel, 1.4404 (316L) ■ Contact housing: Polyamide ■ Contacts: Gold-plated brass

Device plug

Electrical connection	Material
Plug M12x1	■ Socket: Stainless steel, 1.4404 (316L) ■ Contact housing: Polyamide ■ Contacts: Gold-plated brass

Sensor housing

- Acid and alkali-resistant outer surface
- Stainless steel 1.4301 (304)

Measuring tubes

Stainless steel, 1.4539 (904L); Alloy C22, 2.4602 (UNS N06022)

Process connections

VCO coupling
 Stainless steel, 1.4404 (316/316L)

Tri-Clamp
 Stainless steel, 1.4539 (904L)

Adapter, flanges as per EN 1092-1 (DIN 2501), ASME B16.5, JIS B2220
Stainless steel, 1.4539 (904L)

Adapter, lap joint flanges as per EN 1092-1 (DIN 2501), ASME B16.5, JIS B2220
Stainless steel, 1.4404 (316/316L)

SWAGELOK adapter
Stainless steel, 1.4539 (904L)

Adapter, NPTF
Stainless steel, 1.4539 (904L)

 List of all available process connections →  240

Seals

Welded process connections without internal seals

Seals for mounting kit

- Viton
- EPDM
- Silicone
- Kalrez

Accessories

Protective cover

Stainless steel, 1.4404 (316L)

External WLAN antenna

- WLAN antenna:
ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass
- Adapter:
Stainless steel and copper

Process connections

- Fixed flange connections:
 - EN 1092-1 (DIN 2501) flange
 - EN 1092-1 (DIN 2512N) flange
 - ASME B16.5 flange
 - JIS B2220 flange
- Clamp connections
Tri-Clamp (OD tubes), DIN 11866 series C
- VCO connections
4-VCO-4
- Adapter for VCO connections
 - Flange EN 1092-1 (DIN 2501)
 - Flange ASME B16.5
 - Flange JIS B2220
 - SWAGELOK
 - NPTF

 For information on the different materials used in the process connections →  239

Surface roughness

All data relate to parts in contact with fluid.

- Not polished
- $Ra_{max} = 0.8 \mu m$ (32 μin)
- $Ra_{max} = 0.4 \mu m$ (16 μin)

16.11 Operability

Languages

Can be operated in the following languages:

- Via local operation
English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Arabic, Bahasa (Indonesian), Thai, Vietnamese, Czech, Swedish
- Via Web browser
English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Arabic, Bahasa (Indonesian), Thai, Vietnamese, Czech, Swedish
- Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese

Local operation


Via display module

Two display modules are available:

- Order code for "Display; operation", option **F** "4-line, backlit, graphic display; touch control"
- Order code for "Display; operation", option **G** "4-line, backlit, graphic display; touch control + WLAN"



Information about WLAN interface → 64

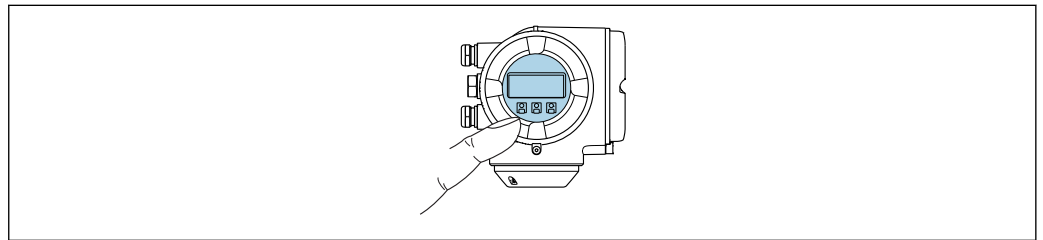

A0026785

28 Operation with touch control

Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to $+60$ °C (-4 to $+140$ °F)
The readability of the display may be impaired at temperatures outside the temperature range.


Operating elements

- External operation via touch control (3 optical keys) without opening the housing: $\oplus$, $\square$, $\boxplus$
- Operating elements also accessible in various hazardous areas

Via remote display and operating module DKX001

The remote display and operating module DKX001 is available as an optional extra:
Order code for "Display; operation", option **O** "Separate backlit, 4-line display; 10 m (30 ft) Cable; touch control"

-  Another device version, e.g. other housing material, other cable length etc., can be ordered via the separate product structure DKX001. The measuring device is ordered with:
Order code for "Display; operation", option **M** "None, prepared for remote display"

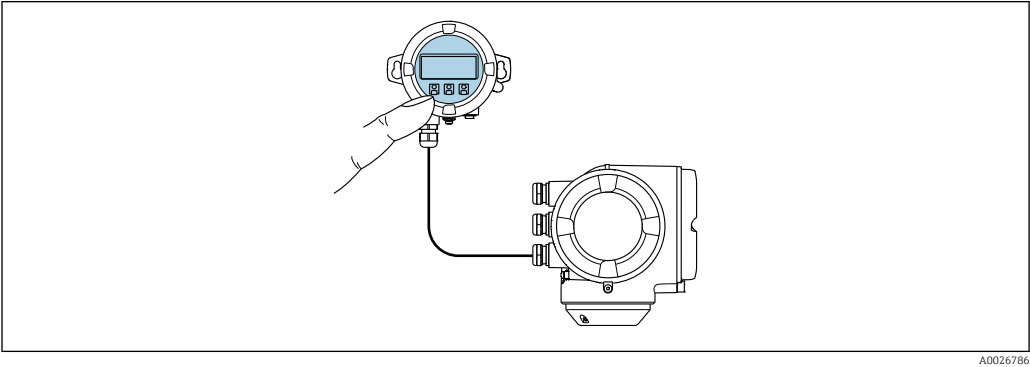

29 Operation via remote display and operating module DKX001

Display and operating elements

The display and operating elements correspond to those of the display module → 241.

- 
 - The measuring device is always supplied with a dummy cover when the remote display and operating module DKX001 is used. Display or operation at the transmitter is not possible in this case.
 - The remote display and operating module DKX001 can also be ordered separately and subsequently as an accessory without a measuring device → 220.
 - If ordered subsequently: The remote display and operating module DKX001 cannot be connected at the same time as the existing display or operation unit. Only one display or operation unit may be connected to the transmitter at any one time.

Material

The housing material of the display and operating module DKX001 depends on the choice of transmitter housing material.

Transmitter housing		Remote display and operating module
Order code for "Housing"	Material	Material
Option A "Aluminum, coated"	AlSi10Mg, coated	AlSi10Mg, coated

Cable entry

Corresponds to the choice of transmitter housing, order code for "Electrical connection".

Connecting cable

→ 33

Dimensions

-  For the dimensions, see the "Technical Information" document, "Mechanical construction" section.

Service interface →  64

Supported operating tools Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with Web browser	■ CDI-RJ45 service interface ■ WLAN interface	Special Documentation for the device →  249
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	■ CDI-RJ45 service interface ■ WLAN interface ■ Fieldbus protocol	→  221
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	■ CDI-RJ45 service interface ■ WLAN interface ■ Fieldbus protocol	→  221



Other operating tools based on FDT technology with a device driver such as DTM/iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:

- Process Device Manager (PDM) by Siemens → www.siemens.com
- Field Device Manager (FDM) by Honeywell → www.honeywellprocess.com
- FieldMate by Yokogawa → www.yokogawa.com
- PACTWare → www.pactware.com

The associated device description files are available at: www.endress.com → Downloads

Web server

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the measuring device data can be managed and the network parameters can be configured. The WLAN connection requires a device that acts as an access point to enable communication via a computer or mobile handheld terminal.

Supported functions

Data exchange between the operating unit (such as a notebook for example) and the measuring device:

- Uploading the configuration from the measuring device (XML format, configuration backup)
- Save the configuration to the measuring device (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file, create documentation of the measuring point configuration)
- Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)
- Flash firmware version for device firmware upgrade, for instance

HistoROM data management

The measuring device features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.

 When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	Device memory	T-DAT	S-DAT
Available data	- Event history, such as diagnostic events - Parameter data record backup - Device firmware package - Driver for system integration e.g.: GSD for PROFIBUS PA	- Measured value memory ("Extended HistoROM" order option) - Current parameter data record (used by firmware at run time) - Maximum indicators (min/max values) - Totalizer values	- Sensor data: diameter etc. - Serial number - User-specific access code (to use the "Maintenance" user role) - Calibration data - Device configuration (e.g. SW options, fixed I/O or multi I/O)
Storage location	Fixed on the user interface board in the connection compartment	Can be plugged into the user interface board in the connection compartment	In the sensor plug in the transmitter neck part

Data backup

Automatic

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors

Manual

Additional parameter data record (complete parameter settings) in the integrated device memory for:

- Data backup function
Backup and subsequent restoration of a device configuration in the device memory
- Data comparison function
Comparison of the current device configuration with the device configuration saved in the device memory

Data transfer

Manual

Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)

Event list

Automatic

- Chronological display of up to 20 event messages in the events list
- If the **Extended HistoROM** application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

Data logging**Manual**

If the **Extended HistoROM** application package (order option) is enabled:

- Record up to 1 000 measured values via 1 to 4 channels
- User configurable recording interval
- Record up to 250 measured values via each of the 4 memory channels
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or Web server
- Use the recorded measured value data in the integrated device simulation function in the **Diagnostics** submenu (→  209).

Service logbook**Manual**

- Create up to 20 user-specific events with a date and customized text in a separate logbook for documentation of the measuring point
- Use for calibration or service operations, for example, or for maintenance or revision work that has been performed

16.12 Certificates and approvals

CE mark	The measuring system is in conformity with the statutory requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied. Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.
C-Tick symbol	The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".
Ex approval	The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.
Sanitary compatibility	■ 3-A approval ■ EHEDG-tested
Certification PROFIBUS	PROFIBUS interface The measuring device is certified and registered by the PROFIBUS User Organization (PNO). The measuring system meets all the requirements of the following specifications: ■ Certified in accordance with PROFIBUS PA Profile 3.02 ■ The device can also be operated with certified devices of other manufacturers (interoperability)
Radio approval	Europe: RED 2014/53/EU United States of America: CFR Title 47, FCC Part 15.247 Canada: RSS-247 Issue 1

Japan:
Article 2 clause 1 item 19



Additional country-specific approvals on request.

Additional certification

CRN approval

Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.

Tests and certificates

- Pressure test, internal procedure, inspection certificate
- 3.1 Material certificate, wetted parts and secondary containment, EN10204-3.1 inspection certificate
- PMI test (XRF), internal procedure, wetted parts, EN10204-3.1 inspection certificate
- EN10204-2.1 confirmation of compliance with the order and EN10204-2.2 test report

Other standards and guidelines

- EN 60529
Degrees of protection provided by enclosures (IP code)
- IEC/EN 60068-2-6
Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).
- IEC/EN 60068-2-31
Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices.
- EN 61010-1
Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements
- IEC/EN 61326
Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).
- NAMUR NE 21
Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment
- NAMUR NE 32
Data retention in the event of a power failure in field and control instruments with microprocessors
- NAMUR NE 43
Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.
- NAMUR NE 53
Software of field devices and signal-processing devices with digital electronics
- NAMUR NE 105
Specifications for integrating fieldbus devices in engineering tools for field devices
- NAMUR NE 107
Self-monitoring and diagnosis of field devices
- NAMUR NE 131
Requirements for field devices for standard applications
- NAMUR NE 132
Coriolis mass meter
- ETSI EN 300 328
Guidelines for 2.4 GHz radio components.
- EN 301489
Electromagnetic compatibility and radio spectrum matters (ERM).

16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.



Detailed information on the application packages:
Special Documentation for the device

Diagnostics functions	Package	Description
	Extended HistoROM	Comprises extended functions concerning the event log and the activation of the measured value memory. Event log: Memory volume is extended from 20 message entries (standard version) to up to 100 entries. Data logging (line recorder): - Memory capacity for up to 1000 measured values is activated. 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user. - Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.
Heartbeat Technology	Package	Description
	Heartbeat Verification +Monitoring	Heartbeat Monitoring Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to: - Draw conclusions - using these data and other information - about the impact process influences (such as corrosion, abrasion, buildup etc.) have on the measuring performance over time. - Schedule servicing in time. - Monitor the process or product quality, e.g. gas pockets. Heartbeat Verification Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment". - Functional testing in the installed state without interrupting the process. - Traceable verification results on request, including a report. - Simple testing process via local operation or other operating interfaces. - Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications. - Extension of calibration intervals according to operator's risk assessment.

Concentration

Package	Description
Concentration measurement and special density	Calculation and outputting of fluid concentrations Many applications use density as a key measured value for monitoring quality or controlling processes. The device measures the density of the fluid as standard and makes this value available to the control system. The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions. With the help of the "Concentration Measurement" application package, the measured density is used to calculate other process parameters: ■ Temperature-compensated density (reference density). ■ Percentage mass of the individual substances in a two-phase fluid. (Concentration in %). ■ Fluid concentration is output with special units (°Brix, °Baumé, °API, etc.) for standard applications.

16.14 Accessories

 Overview of accessories available for order →  220

16.15 Supplementary documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

Standard documentation

Brief Operating Instructions

Part 1 of 2: Sensor

Measuring device	Documentation code
Proline Promass	KA01212D

Part 2 of 2: Transmitter

Measuring device	Documentation code
Proline 300	KA01227D

Technical Information

Measuring device	Documentation code
Promass A 300	TI01270D

Description of device parameters

Measuring device	Documentation code
Promass 300	GP01058D

Supplementary device-
dependent documentation

Safety Instructions

Contents	Documentation code
ATEX/IECEX Ex d/Ex de	XA01405D
ATEX/IECEX Ex ec	XA01439D
cCSAus XP	XA01373D
cCSAus Ex d/ Ex de	XA01372D
cCSAus Ex nA	XA01507D
INMETRO Ex d/Ex de	XA01468D
INMETRO Ex ec	XA01470D
NEPSI Ex d/Ex de	XA01469D
NEPSI Ex nA	XA01471D

Remote display and operating module DKX001

Contents	Documentation code
ATEX/IECEX Ex i	XA01494D
ATEX/IECEX Ex ec	XA01498D
cCSAus IS	XA01499D
cCSAus Ex nA	XA01513D
INMETRO Ex i	XA01500D
INMETRO Ex ec	XA01501D
NEPSI Ex i	XA01502D
NEPSI Ex nA	XA01503D

Special documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Remote display and operating module DKX001	SD01763D
Web server	SD01664D
Heartbeat Technology	SD01698D
Concentration measurement	SD01708D

Installation Instructions

Contents	Documentation code
Installation Instructions for spare part sets	 Overview of accessories available for order →  220

Index

A

- Access authorization to parameters
 - Read access 57
 - Write access 57
- Access code 57
 - Incorrect input 57
- Accuracy 231
- Adapting the diagnostic behavior 150
- Additional certification 246
- Ambient temperature range
 - Influence 233
- Analog Input module 74
- Analog Output module 77
- Application 222
- Application packages 247
- Applicator 223
- Approvals 245

C

- C-Tick symbol 245
- Cable entries
 - Technical data 231
- Cable entry
 - Degree of protection 41
- CE mark 11, 245
- Certificates 245
- Certification PROFIBUS 245
- Check
 - Installation 31
- Checklist
 - Post-connection check 42
 - Post-installation check 31
- Cleaning
 - Cleaning in place (CIP) 217
 - Exterior cleaning 217
 - Interior cleaning 217
 - Sterilization in place (SIP) 217
- Climate class 235
- Commissioning 80
 - Advanced settings 112
 - Configuring the measuring device 81
- Compatibility with earlier model 68
- Connecting cable 32
- Connecting the measuring device 35
- Connecting the signal cables 35
- Connecting the supply voltage cables 35
- Connection
 - see Electrical connection
- Connection preparations 34
- Connection tools 32
- Context menu
 - Calling up 52
 - Closing 52
 - Explanation 52
- Current consumption 231
- Cyclic data transmission 73

D

- Declaration of Conformity 11
- Define access code 127
- Degree of protection 41, 235
- Density 236
- Design fundamentals
 - Maximum measured error 234
 - Repeatability 234
- Designated use 10
- Device components 14
- Device description files 68
- Device documentation
 - Supplementary documentation 8
- Device locking, status 130
- Device master file
 - GSD 68
- Device name
 - Sensor 18
 - Transmitter 17
- Device repair 218
- Device type ID 68
- DeviceCare 66
 - Device description file 68
- Diagnostic behavior
 - Explanation 146
 - Symbols 146
- Diagnostic information
 - Design, description 146, 149
 - DeviceCare 148
 - FieldCare 148
 - Light emitting diodes 144
 - Local display 145
 - Overview 152
 - Remedial measures 152
 - Web browser 147
- Diagnostic list 210
- Diagnostic message 145
- Diagnostics
 - Symbols 145
- DIP switches
 - see Write protection switch
- Direct access 54
- Direct access code 48
- Disabling write protection 127
- Discrete Input module 77
- Discrete Output module 78
- Display
 - see Local display
- Display and operating module DKX001 242
- Display area
 - For operational display 47
 - In the navigation view 49
- Display values
 - For locking status 130
- Disposal 219

- Document
 Function 6
 Symbols used 6
Document function 6
Down pipe 22
- E**
Electrical connection
 Degree of protection 41
 Measuring device 32
 Operating tools
 Via PROFIBUS PA network 63
 Via service interface (CDI-RJ45) 64
 Via WLAN interface 64
 Web server 64
 WLAN interface 64
Electromagnetic compatibility 236
Electronics module 14
EMPTY_MODULE module 79
Enabling write protection 127
Endress+Hauser services
 Maintenance 217
 Repair 218
Environment
 Impact resistance 236
 Shock resistance 235
 Storage temperature 235
 Vibration resistance 235
Error messages
 see Diagnostic messages
Event history 211
Event list 211
Ex approval 245
Extended order code
 Sensor 18
 Transmitter 17
Exterior cleaning 217
- F**
Field of application
 Residual risks 11
FieldCare 65
 Device description file 68
 Establishing a connection 66
 Function 65
 User interface 66
Filtering the event logbook 212
Firmware
 Release date 68
 Version 68
Firmware history 216
Flow direction 23, 29
Flow limit 237
Function check 80
Function scope
 SIMATIC PDM 67
Functions 80
- G**
Galvanic isolation 229
- H**
Hardware write protection 128
Help text
 Calling up 55
 Closing 55
 Explanation 55
HistoROM 121
- I**
Identifying the measuring device 16
Impact resistance 236
Incoming acceptance 15
Influence
 Ambient temperature range 233
 Medium pressure 234
 Medium temperature 233
Information on the document 6
Inlet runs 23
Input 223
Input mask 50
Inspection
 Received goods 15
Inspection check
 Connection 42
Installation 22
Installation conditions
 Down pipe 22
 Inlet and outlet runs 23
 Mounting location 22
 Orientation 23
 Rupture disk 26
 Sensor heating 25
 System pressure 24
 Thermal insulation 24
 Vibrations 26
Installation dimensions 23
Interior cleaning 217
- K**
Keypad lock
 Disabling 57
 Enabling 57
- L**
Languages, operation options 241
Line recorder 138
Local display 241
 Editing view 50
 Navigation view 48
 see Diagnostic message
 see In alarm condition
 see Operational display
Low flow cut off 229
- M**
Main electronics module 14

Maintenance tasks	217
Managing the device configuration	121
Manufacturer ID	68
Manufacturing date	17, 18
Materials	238
Maximum measured error	231
Measured values	
see Process variables	
Measuring and test equipment	217
Measuring device	
Configuration	81
Conversion	218
Disposal	219
Mounting the sensor	29
Preparing for electrical connection	34
Preparing for mounting	29
Removing	219
Repairs	218
Structure	14
Switch-on	80
Measuring principle	222
Measuring range	
Calculation example for gas	223
For gases	223
For liquids	223
Measuring range, recommended	237
Measuring system	222
Medium pressure	
Influence	234
Medium temperature	
Influence	233
Menu	
Diagnostics	209
Setup	81, 82
Menus	
For measuring device configuration	81
For specific settings	112
Module	
Analog input	74
Analog output	77
Discrete Input	77
Discrete Output	78
EMPTY_MODULE	79
Totalizer	
SETTOT_MODETOT_TOTAL	76
SETTOT_TOTAL	75
TOTAL	75
Mounting dimensions	
see Installation dimensions	
Mounting location	22
Mounting preparations	29
Mounting requirements	
Installation dimensions	23
Mounting tools	29
N	
Nameplate	
Sensor	18
Transmitter	17

Navigation path (navigation view)	48
Navigation view	
In the submenu	48
In the wizard	48
Nominal pressure	
Secondary containment	236
Numeric editor	50
O	
Operable flow range	224
Operating elements	51, 146
Operating keys	
see Operating elements	
Operating menu	
Menus, submenus	44
Structure	44
Submenus and user roles	45
Operating philosophy	45
Operation	130
Operation options	43
Operational display	46
Operational safety	11
Order code	17, 18
Orientation (vertical, horizontal)	23
Outlet runs	23
Output	225
Output signal	225
P	
Packaging disposal	21
Parameter settings	
Administration (Submenu)	124
Analog inputs (Submenu)	89
Calculated values (Submenu)	113
Communication (Submenu)	87
Configuration backup (Submenu)	121
Current input	91
Current input (Wizard)	91
Current input 1 to n (Submenu)	133
Current output	92
Current output (Wizard)	92
Data logging (Submenu)	138
Define access code (Wizard)	123
Device information (Submenu)	214
Diagnostics (Menu)	209
Display (Submenu)	117
Display (Wizard)	107
Double pulse output	106
Double pulse output (Submenu)	106, 136
I/O configuration	90
I/O configuration (Submenu)	90
Low flow cut off (Wizard)	110
Measured variables (Submenu)	131
Partially filled pipe detection (Wizard)	111
Pulse/frequency/switch output	95
Pulse/frequency/switch output (Wizard)	95, 97, 102
Pulse/frequency/switch output 1 to n (Submenu)	135
Relay output	104
Relay output 1 to n (Submenu)	136

Relay output 1 to n (Wizard)	104
Reset access code (Submenu)	123
Select medium (Wizard)	86
Sensor adjustment (Submenu)	114
Setup (Menu)	82
Simulation (Submenu)	124
Status input	92
Status input (Submenu)	92
Status input 1 to n (Submenu)	134
System units (Submenu)	83
Totalizer 1 to n (Submenu)	115, 132
Totalizer handling (Submenu)	137
Value current output 1 to n (Submenu)	134
Web server (Submenu)	62
WLAN Settings (Submenu)	120
Zero point adjustment (Submenu)	114
Parameters	
Changing	56
Enter a value	56
Performance characteristics	231
Post-connection check (checklist)	42
Post-installation check	80
Post-installation check (checklist)	31
Potential equalization	38
Power consumption	231
Power supply failure	231
Pressure loss	238
Pressure-temperature ratings	236
Process connections	240
Process variables	
Calculated	223
Measured	223
Product safety	11
Profile version	68
Protecting parameter settings	127
R	
Radio approval	245
Read access	57
Reading measured values	130
Recalibration	217
reference operating conditions	231
Registered trademarks	9
Remedial measures	
Calling up	147
Closing	147
Remote operation	242
Repair of a device	218
Repairs	218
Notes	218
Repeatability	233
Replacement	
Device components	218
Requirements for personnel	10
Response time	233
Return	218
Rupture disk	
Safety instructions	26
Triggering pressure	237

S

Safety	10
Sanitary compatibility	245
Seals	
Medium temperature range	236
Sensor	
Mounting	29
Sensor heating	25
Serial number	17, 18
Setting the operating language	80
Settings	
Adapting the measuring device to the process	
conditions	137
Administration	122
Advanced display configurations	117
Analog input	89
Communication interface	87
Current input	91
Current output	92
Device reset	213
Device tag	82
Double pulse output	106
I/O configuration	90
Local display	107
Low flow cut off	110
Managing the device configuration	121
Medium	86
Operating language	80
Partial filled pipe detection	111
Pulse output	95
Pulse/frequency/switch output	95, 97
Relay output	104
Resetting the totalizer	137
Sensor adjustment	114
Simulation	124
Status input	92
Switch output	102
System units	83
Totalizer	115
Totalizer reset	137
WLAN	120
SETTOT_MODETOT_TOTAL module	76
SETTOT_TOTAL module	75
Shock resistance	235
Showing data logging	138
Signal on alarm	227
SIMATIC PDM	67
Function	67
Spare part	218
Spare parts	218
Special connection instructions	38
Standards and guidelines	246
Status area	
For operational display	47
In the navigation view	48
Status signals	145, 148
Storage conditions	20
Storage temperature	20
Storage temperature range	235

Structure

- Measuring device 14
- Operating menu 44

Submenu

- Administration 122, 124
- Advanced setup 112
- Analog inputs 89
- Calculated values 113
- Communication 80, 87
- Configuration backup 121
- Current input 1 to n 133
- Data logging 138
- Device information 214
- Display 117
- Double pulse output 106, 136
- Event list 211
- I/O configuration 90
- Input values 133
- Measured values 130
- Measured variables 131
- Output values 134
- Overview 45
- Process variables 113
- Pulse/frequency/switch output 1 to n 135
- Relay output 1 to n 136
- Reset access code 123
- Sensor adjustment 114
- Simulation 124
- Status input 92
- Status input 1 to n 134
- System units 83
- Totalizer 1 to n 115, 132
- Totalizer handling 137
- Value current output 1 to n 134
- Web server 62
- WLAN Settings 120
- Zero point adjustment 114

Supply voltage 230

Surface roughness 240

Switch output 226

Symbols

- For communication 47
- For correction 50
- For diagnostic behavior 47
- For locking 47
- For measured variable 47
- For measurement channel number 47
- For menus 49
- For parameters 49
- For status signal 47
- For submenu 49
- For wizard 49
- In the status area of the local display 47
- In the text and numeric editor 50

System design

- Measuring system 222
- see Measuring device design

System integration 68

System pressure 24

T

Technical data, overview 222

Temperature range

- Ambient temperature range for display 241
- Medium temperature 236
- Storage temperature 20

Terminal assignment 34

terminals 231

Tests and certificates 246

Text editor 50

Thermal insulation 24

Tool tip

see Help text

Tools

- Electrical connection 32
- Installation 29
- Transport 20

TOTAL module 75

Totalizer

- Assign process variable 132
- Configuration 115
- Operation 137
- Reset 137

Transmitter

- Turning the display module 30
- Turning the housing 30

Transporting the measuring device 20

Troubleshooting

General 141

Turning the display module 30

Turning the electronics housing

see Turning the transmitter housing

Turning the transmitter housing 30

U

Use of the measuring device

- Borderline cases 10
- Incorrect use 10
- see Designated use

User interface

- Current diagnostic event 209
- Previous diagnostic event 209

User roles 45

V

Vibration resistance 235

Vibrations 26

W

W@M 217, 218

W@M Device Viewer 16, 218

Weight

- SI units 238
- Transport (notes) 20
- US units 238

Wizard

- Current input 91
- Current output 92
- Define access code 123

Display	107
Low flow cut off	110
Partially filled pipe detection	111
Pulse/frequency/switch output	95, 97, 102
Relay output 1 to n	104
Select medium	86
WLAN settings	120
Workplace safety	11
Write access	57
Write protection	
Via access code	127
Via write protection switch	128
Write protection switch	128

www.addresses.endress.com
