


Operating Instructions

Proline Prowirl F 200

FOUNDATION Fieldbus

Vortex flowmeter

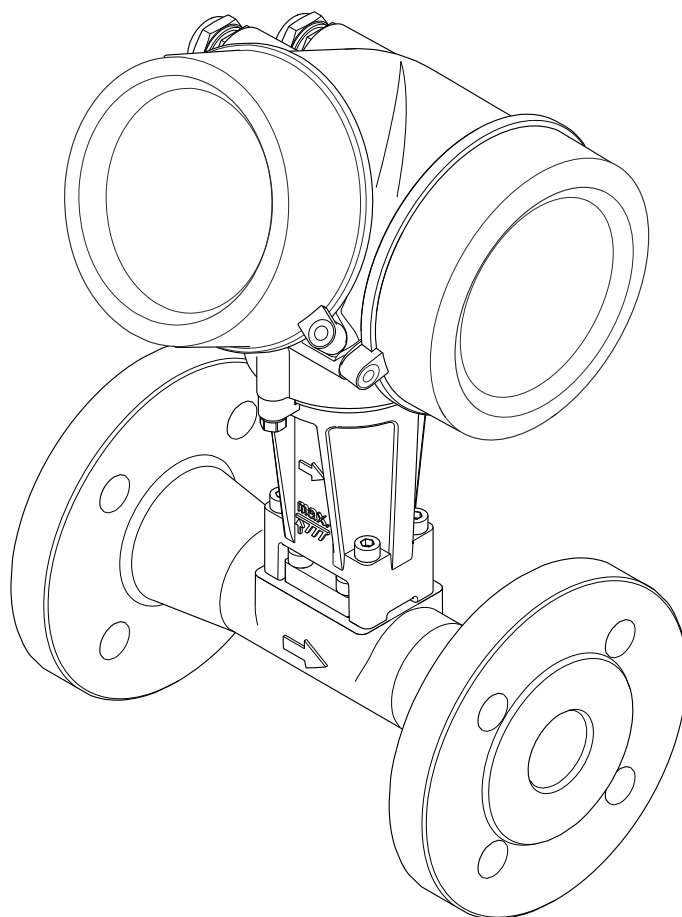

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

Table of contents

1	Document information	6		
1.1	Document function	6		
1.2	Symbols used	6		
1.2.1	Safety symbols	6		
1.2.2	Electrical symbols	6		
1.2.3	Tool symbols	6		
1.2.4	Symbols for certain types of information	7		
1.2.5	Symbols in graphics	7		
1.3	Documentation	7		
1.3.1	Standard documentation	8		
1.3.2	Supplementary device-dependent documentation	8		
1.4	Registered trademarks	8		
2	Basic safety instructions	9		
2.1	Requirements for the personnel	9		
2.2	Designated use	9		
2.3	Workplace safety	10		
2.4	Operational safety	10		
2.5	Product safety	10		
2.6	IT security	10		
3	Product description	11		
3.1	Product design	11		
4	Incoming acceptance and product identification	12		
4.1	Incoming acceptance	12		
4.2	Product identification	12		
4.2.1	Transmitter nameplate	13		
4.2.2	Sensor nameplate	14		
4.2.3	Symbols on measuring device	16		
5	Storage and transport	17		
5.1	Storage conditions	17		
5.2	Transporting the product	17		
5.2.1	Measuring devices without lifting lugs	17		
5.2.2	Measuring devices with lifting lugs	18		
5.2.3	Transporting with a fork lift	18		
5.3	Packaging disposal	18		
6	Installation	19		
6.1	Installation conditions	19		
6.1.1	Mounting position	19		
6.1.2	Requirements from environment and process	23		
6.1.3	Special mounting instructions	24		
6.2	Mounting the measuring device	25		
6.2.1	Required tools	25		
6.2.2	Preparing the measuring device	25		
6.2.3	Mounting the sensor	25		
6.2.4	Mounting the transmitter of the remote version	26		
6.2.5	Turning the transmitter housing	27		
6.2.6	Turning the display module	27		
6.3	Post-installation check	28		
7	Electrical connection	29		
7.1	Connection conditions	29		
7.1.1	Required tools	29		
7.1.2	Connecting cable requirements	29		
7.1.3	Terminal assignment	31		
7.1.4	Pin assignment, device plug	32		
7.1.5	Shielding and grounding	32		
7.1.6	Requirements for the supply unit	33		
7.1.7	Preparing the measuring device	34		
7.2	Connecting the measuring device	34		
7.2.1	Connecting the remote version	34		
7.2.2	Connecting the transmitter	38		
7.2.3	Ensuring potential equalization	40		
7.3	Special connection instructions	40		
7.3.1	Connection examples	40		
7.4	Ensuring the degree of protection	41		
7.5	Post-connection check	42		
8	Operation options	43		
8.1	Overview of operating options	43		
8.2	Structure and function of the operating menu	44		
8.2.1	Structure of the operating menu	44		
8.2.2	Operating philosophy	45		
8.3	Access to the operating menu via the local display	45		
8.3.1	Operational display	45		
8.3.2	Navigation view	46		
8.3.3	Editing view	48		
8.3.4	Operating elements	49		
8.3.5	Opening the context menu	50		
8.3.6	Navigating and selecting from list	52		
8.3.7	Calling the parameter directly	52		
8.3.8	Calling up help text	53		
8.3.9	Changing the parameters	54		
8.3.10	User roles and related access authorization	55		
8.3.11	Disabling write protection via access code	55		
8.3.12	Enabling and disabling the keypad lock	55		
8.4	Access to the operating menu via the operating tool	56		
8.4.1	Connecting the operating tool	56		
8.4.2	Field Xpert SFX350, SFX370	58		
8.4.3	FieldCare	58		

8.4.4	AMS Device Manager	59	11.4	Reading measured values	121
8.4.5	Field Communicator 475	59	11.4.1	Process variables	121
9	System integration	60	11.4.2	Totalizer	123
9.1	Overview of device description files	60	11.4.3	Output values	124
9.1.1	Current version data for the device ...	60	11.5	Adapting the measuring device to the process conditions	125
9.1.2	Operating tools	60	11.6	Performing a totalizer reset	125
9.2	Integration into a FOUNDATION Fieldbus network	61	11.7	Showing data logging	126
9.2.1	Block model	61	12	Diagnostics and troubleshooting ..	129
9.2.2	Assignment of the measured values in the function blocks	61	12.1	General troubleshooting	129
9.2.3	Index tables of Endress+Hauser parameters	63	12.2	Diagnostic information on local display	131
9.2.4	Methods	63	12.2.1	Diagnostic message	131
10	Commissioning	65	12.2.2	Calling up remedial measures	132
10.1	Function check	65	12.3	Diagnostic information in FieldCare	133
10.2	Switching on the measuring device	65	12.3.1	Diagnostic options	133
10.3	Setting the operating language	65	12.3.2	Calling up remedy information	134
10.4	Configuring the measuring device	66	12.4	Adapting the diagnostic information	134
10.4.1	Defining the tag name	66	12.4.1	Adapting the diagnostic behavior ...	134
10.4.2	Setting the system units	67	12.4.2	Adapting the status signal	134
10.4.3	Selecting and setting the medium ...	71	12.5	Overview of diagnostic information	138
10.4.4	Configuring the analog inputs	73	12.5.1	Diagnostic of sensor	138
10.4.5	Configuring the local display	73	12.5.2	Diagnostic of electronic	141
10.4.6	Configuring the low flow cut off	75	12.5.3	Diagnostic of configuration	148
10.5	Advanced settings	77	12.5.4	Diagnostic of process	154
10.5.1	Setting the medium properties	78	12.6	Pending diagnostic events	162
10.5.2	Performing external compensation ..	92	12.7	Diagnostic messages in the DIAGNOSTIC Transducer Block	162
10.5.3	Carrying out a sensor adjustment	94	12.8	Diagnostic list	163
10.5.4	Configuring the pulse/frequency/switch output	95	12.9	Event logbook	163
10.5.5	Configuring the totalizer	107	12.9.1	Event history	163
10.5.6	Carrying out additional display configurations	109	12.9.2	Filtering the event logbook	163
10.6	Configuration management	111	12.9.3	Overview of information events	164
10.6.1	Function scope of the "Configuration management" parameter	112	12.10	Resetting the measuring device	164
10.7	Simulation	113	12.10.1	Function scope of the "Restart" parameter	165
10.8	Protecting settings from unauthorized access	115	12.11	Device information	166
10.8.1	Write protection via access code ...	115	12.12	Firmware history	167
10.8.2	Write protection via write protection switch	116	13	Maintenance	168
10.8.3	Write protection via block operation	117	13.1	Maintenance tasks	168
10.9	Configuring the measuring device via FOUNDATION Fieldbus	118	13.1.1	Exterior cleaning	168
10.9.1	Block configuration	118	13.1.2	Interior cleaning	168
10.9.2	Scaling the measured value in the Analog Input Block	119	13.1.3	Replacing seals	168
11	Operation	121	13.2	Measuring and test equipment	168
11.1	Reading the device locking status	121	13.3	Endress+Hauser services	168
11.2	Adjusting the operating language	121	14	Repair	169
11.3	Configuring the display	121	14.1	General notes	169
			14.2	Spare parts	169
			14.3	Endress+Hauser services	170
			14.4	Return	170
			14.5	Disposal	170
			14.5.1	Removing the measuring device	170
			14.5.2	Disposing of the measuring device ..	171

15	Accessories	172
15.1	Device-specific accessories	172
15.1.1	For the transmitter	172
15.1.2	For the sensor	173
15.2	Communication-specific accessories	173
15.3	Service-specific accessories	173
15.4	System components	174
16	Technical data	175
16.1	Application	175
16.2	Function and system design	175
16.3	Input	175
16.4	Output	181
16.5	Power supply	186
16.6	Performance characteristics	188
16.7	Installation	191
16.8	Environment	191
16.9	Process	192
16.10	Mechanical construction	193
16.11	Operability	200
16.12	Certificates and approvals	202
16.13	Application packages	203
16.14	Accessories	204
16.15	Supplementary documentation	204
Index		206





1 Document information

1.1 Document function




 


These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols used


 

1.2.1 Safety symbols

Symbol	Meaning
 DANGER	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
 WARNING	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
 CAUTION	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
 NOTICE	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.












1.2.2 Electrical symbols

Symbol	Meaning	Symbol	Meaning
	Direct current		Alternating current
	Direct current and alternating current		Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.		Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.





1.2.3 Tool symbols

Symbol	Meaning
	Flat blade screwdriver
	Allen key
	Open-ended wrench


1.2.4 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Series of steps
	Result of a step
	Help in the event of a problem
	Visual inspection

 1.2.5 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3, ...	Item numbers		Series of steps
A, B, C, ...	Views	A-A, B-B, C-C, ...	Sections
	Hazardous area		Safe area (non-hazardous area)
	Flow direction		

1.3 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

 For a detailed list of the individual documents along with the documentation code

1.3.1 Standard documentation

Document type	Purpose and content of the document
Technical Information	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

FOUNDATION™ Fieldbus

Registration-pending trademark of the Fieldbus Foundation, Austin, Texas, USA

KALREZ®, VITON®

Registered trademarks of DuPont Performance Elastomers L.L.C., Wilmington, DE USA

GYLON®

Registered trademark of Garlock Sealing Technologies, Palmyra, NY, USA

Applicator®, FieldCare®, DeviceCare®, Field Xpert™, HistoROM®, Heartbeat Technology™

Registered or registration-pending trademarks of the Endress+Hauser Group

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task
- ▶ Are authorized by the plant owner/operator
- ▶ Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- ▶ Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- ▶ Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- ▶ Following the instructions in these Operating Instructions


2.2 Designated use

Application and media

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or in applications where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Check the nameplate to verify if the device ordered can be put to its intended use in the approval-related area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media against which the process-wetted materials are adequately resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential: "Documentation" section →  7.
- ▶ Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

WARNING

Danger of breakage of the sensor due to corrosive or abrasive fluids or from environmental conditions!

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Keep within the specified pressure and temperature range.

Verification for borderline cases:

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any

warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks

Possible burn hazard due to fluid temperatures!

- ▶ For elevated fluid temperature, ensure protection against contact to prevent burns.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

- ▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

- ▶ It is recommended to wear gloves on account of the higher risk of electric shock.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EC directives listed in the device-specific EC Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

2.6 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.


3 Product description

The device consists of a transmitter and a sensor.

Two device versions are available:

- Compact version – transmitter and sensor form a mechanical unit.
- Remote version - transmitter and sensor are mounted in separate locations.

3.1 Product design

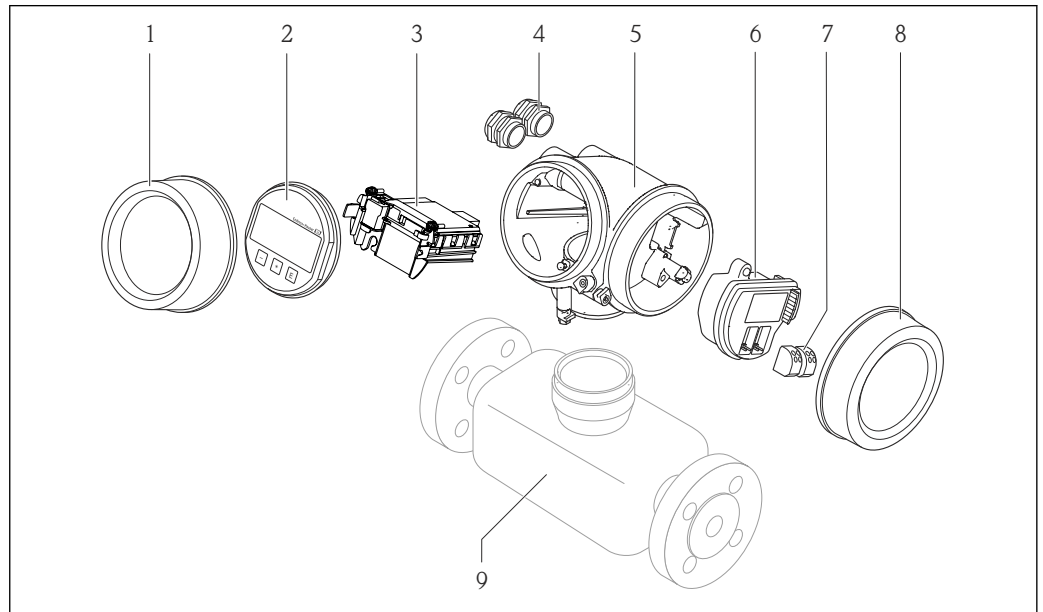










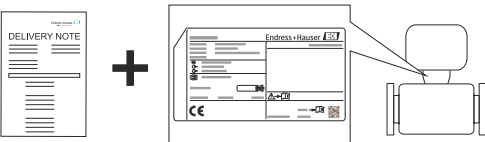



A0020649

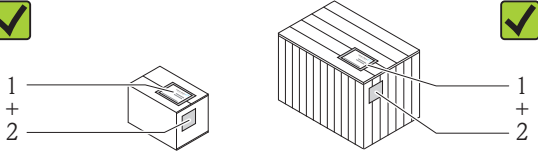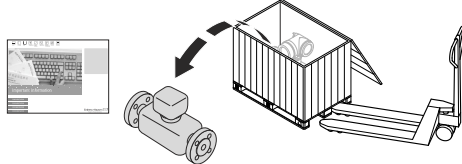

1 Important components of a measuring device

- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands
- 5 Transmitter housing (incl. HistoROM)
- 6 I/O electronics module
- 7 Terminals (pluggable spring terminals)
- 8 Connection compartment cover
- 9 Sensor

 4 Incoming acceptance and product identification

4.1 Incoming acceptance

 		<p>Are the order codes on the delivery note (1) and the product sticker (2) identical?</p>
		
 		<p>Are the goods undamaged?</p>
 		<p>Do the nameplate data match the ordering information on the delivery note?</p>
 		<p>Is the CD-ROM with the Technical Documentation (depends on device version) and documents present?</p>



-  ■ If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
- Depending on the device version, the CD-ROM might not be part of the delivery! The Technical Documentation is available via the Internet or via the *Endress+Hauser Operations App*, see the "Product identification" section →  13.

4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.


For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" →  8 and "Supplementary device-dependent documentation" →  8
- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

4.2.1 Transmitter nameplate

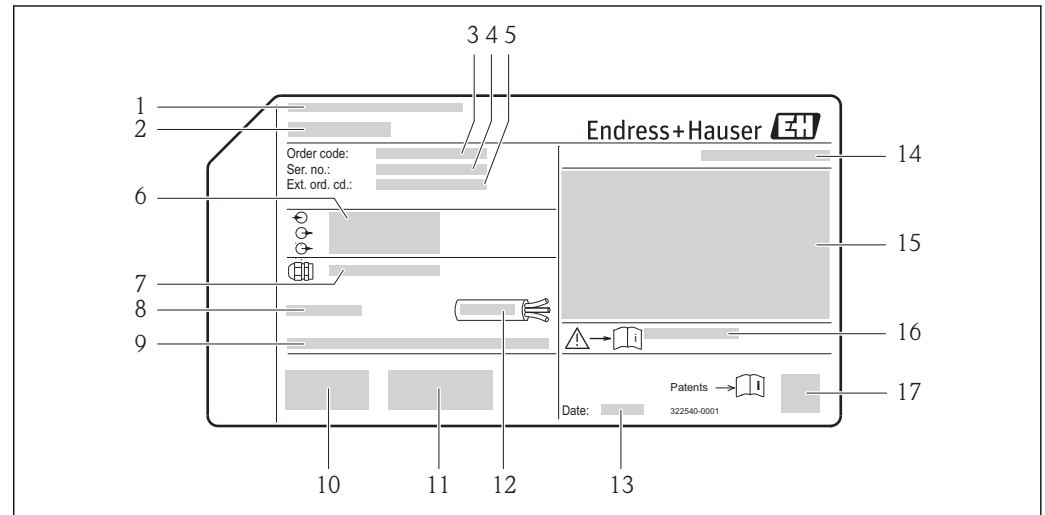


A0013906

 2 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Electrical connection data, e.g. available inputs and outputs, supply voltage
- 7 Type of cable glands
- 8 Permitted ambient temperature (T_a)
- 9 Firmware version (FW) from the factory
- 10 CE mark, C-Tick
- 11 Additional information on version: certificates, approvals
- 12 Permitted temperature range for cable
- 13 Manufacturing date: year-month
- 14 Degree of protection
- 15 Approval information for explosion protection
- 16 Document number of safety-related supplementary documentation
- 17 2-D matrix code

4.2.2 Sensor nameplate

Order code for "Housing" option B "GT18 two-chamber, 316L" and option K "GT18 two-chamber, remote, 316L"

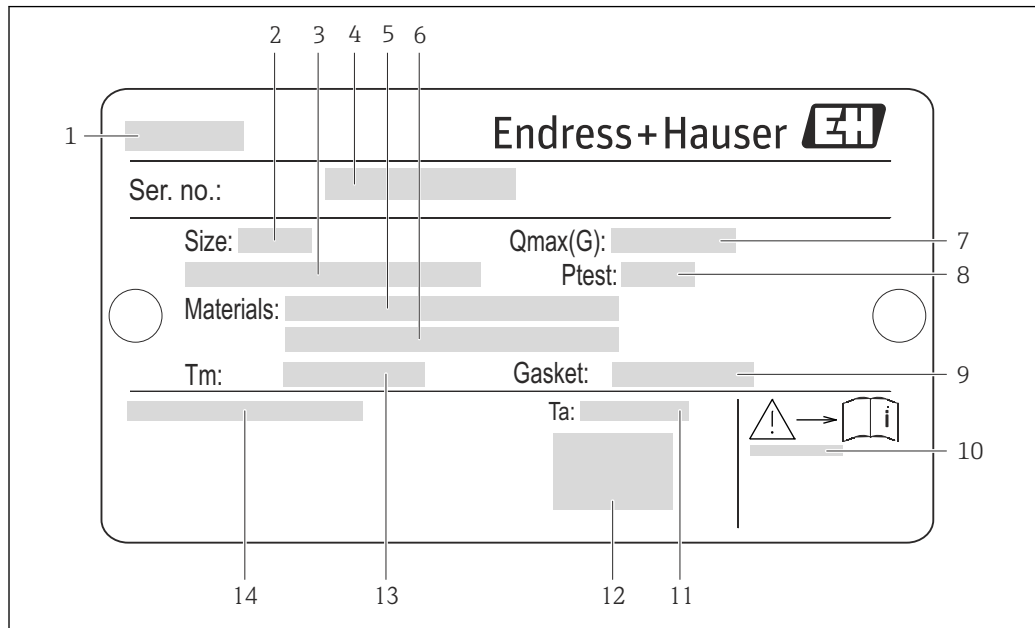

A0020760

3 Example of a sensor nameplate

- 1 Name of the sensor
- 2 Nominal diameter of the sensor
- 3 Flange nominal diameter/nominal pressure
- 4 Serial number (Ser. no.)
- 5 Measuring tube material
- 6 Measuring tube material
- 7 Maximal permitted volume flow (gas/steam)
- 8 Test pressure of the sensor
- 9 Seal material
- 10 Document number of safety-related supplementary documentation → 204
- 11 Ambient temperature range
- 12 CE mark
- 13 Medium temperature range
- 14 Degree of protection

Order code for "Housing" option C "GT20 two-chamber, aluminum coated"

Diagram illustrating the layout of a sensor nameplate with 13 numbered fields:


- 1: Nominal diameter of the sensor
- 2: Flange nominal diameter/nominal pressure
- 3: Measuring tube material
- 4: Measuring tube material
- 5: Serial number (Ser. no.)
- 6: Maximal permitted volume flow (gas/steam)
- 7: Test pressure of the sensor
- 8: Degree of protection
- 9: Approval information for explosion protection and Pressure Equipment Directive
- 10: CE mark
- 11: Seal material
- 12: Medium temperature range
- 13: Ambient temperature range

A0020758

4 Example of a sensor nameplate

- 1 Nominal diameter of the sensor
- 2 Flange nominal diameter/nominal pressure
- 3 Measuring tube material
- 4 Measuring tube material
- 5 Serial number (Ser. no.)
- 6 Maximal permitted volume flow (gas/steam)
- 7 Test pressure of the sensor
- 8 Degree of protection
- 9 Approval information for explosion protection and Pressure Equipment Directive
- 10 CE mark
- 11 Seal material
- 12 Medium temperature range
- 13 Ambient temperature range

Order code for "Housing" option J "GT20 two-chamber, remote, aluminum coated"

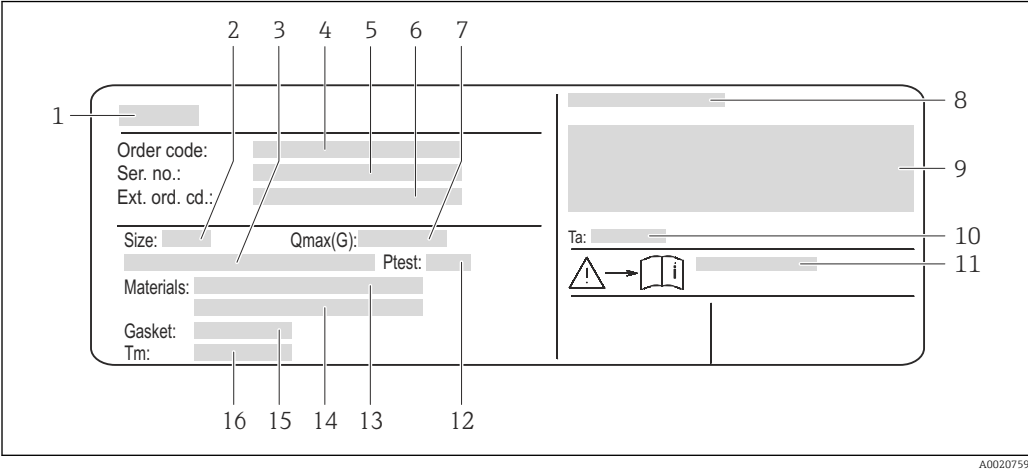

5 Example of a sensor nameplate

- 1 Name of the sensor
- 2 Nominal diameter of the sensor
- 3 Flange nominal diameter/nominal pressure
- 4 Order code
- 5 Serial number (Ser. no.)
- 6 Extended order code (Ext. ord. cd.)
- 7 Maximal permitted volume flow (gas/steam)
- 8 Degree of protection
- 9 Approval information for explosion protection and Pressure Equipment Directive
- 10 Ambient temperature range
- 11 Document number of safety-related supplementary documentation → 204
- 12 Test pressure of the sensor
- 13 Measuring tube material
- 14 Measuring tube material
- 15 Seal material
- 16 Medium temperature range

i Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approval-related specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE+).

4.2.3 Symbols on measuring device

Symbol	Meaning
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.

5 Storage and transport

5.1 Storage conditions

Observe the following notes for storage:


- Store in the original packaging to ensure protection from shock.
- Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- Protect from direct sunlight to avoid unacceptably high surface temperatures.
- Store in a dry and dust-free place.
- Do not store outdoors.

Storage temperature:

- All components apart from the display modules: -50 to $+80$ °C (-58 to $+176$ °F)
- Display modules: -40 to $+80$ °C (-40 to $+176$ °F)

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

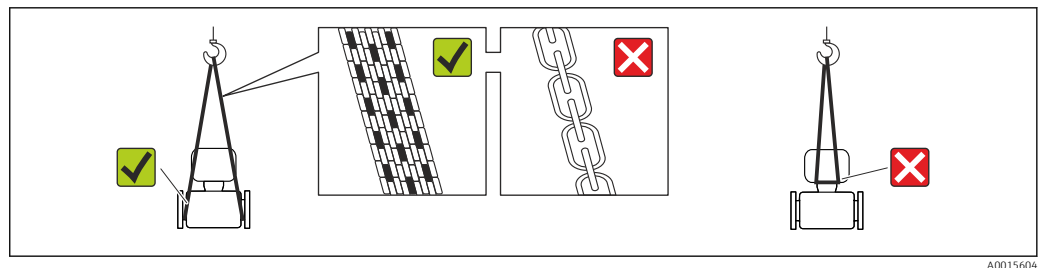

A0015604



Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

⚠ WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ▶ Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

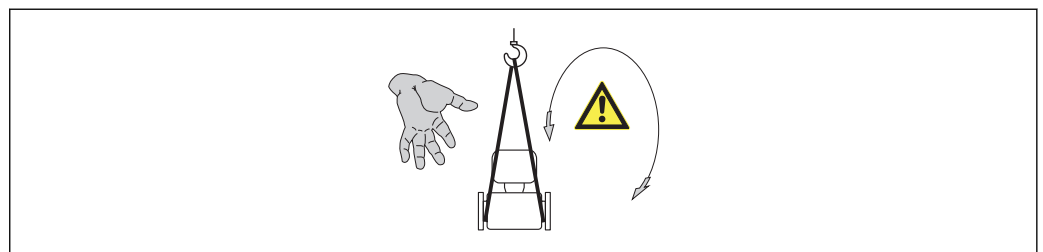

A0015606

5.2.2 Measuring devices with lifting lugs

CAUTION

Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ▶ The device must always be secured at two lifting lugs at least.

5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:


- Measuring device secondary packaging: polymer stretch film that conforms to EC Directive 2002/95/EC (RoHS).
- Packaging:
 - Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
 - or
 - Carton in accordance with European Packaging Directive 94/62EC; recyclability is confirmed by the affixed RESY symbol.
- Seaworthy packaging (optional): Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
- Carrying and mounting hardware:
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Dunnage: Paper cushion

6 Installation

6.1 Installation conditions

6.1.1 Mounting position

Mounting location



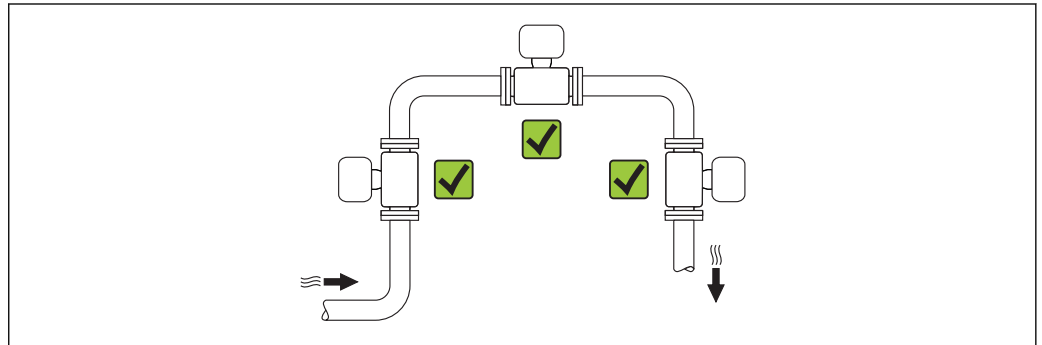



A0015543


Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

   Vortex meters require a fully developed flow profile as a prerequisite for correct volume flow measurement. Therefore, please note the following:

Orientation			Compact version	Remote version
A	Vertical orientation	 A0015545	✓✓ ¹⁾	✓✓
B	Horizontal orientation, transmitter head up	 A0015589	✓✓ ^{2) 3)}	✓✓
C	Horizontal orientation, transmitter head down	 A0015590	✓✓ ^{4) 5)}	✓✓
D	Horizontal orientation, transmitter head at side	 A0015592	✓✓ ⁴⁾	✓✓

- 1) In the case of liquids, there should be upward flow in vertical pipes to avoid partial pipe filling (Fig. A). Disruption in flow measurement! In the case of vertical orientation and downward flowing liquid, the pipe always needs to be completely filled to ensure correct liquid flow measurement.
- 2) Danger of electronics overheating! If the fluid temperature is $\geq 200\text{ °C}$ (392 °F) orientation B is not permitted for the wafer version (Prowirl D) with nominal diameters DN 100 (4") and DN 150 (6").
- 3) In the case of hot media (e.g. steam or fluid temperature (TM) $\geq 200\text{ °C}$ (392 °F)): orientation C or D
- 4) In the case of very cold media (e.g. liquid nitrogen): orientation B or D
- 5) For "wet steam detection/measurement" option: orientation C

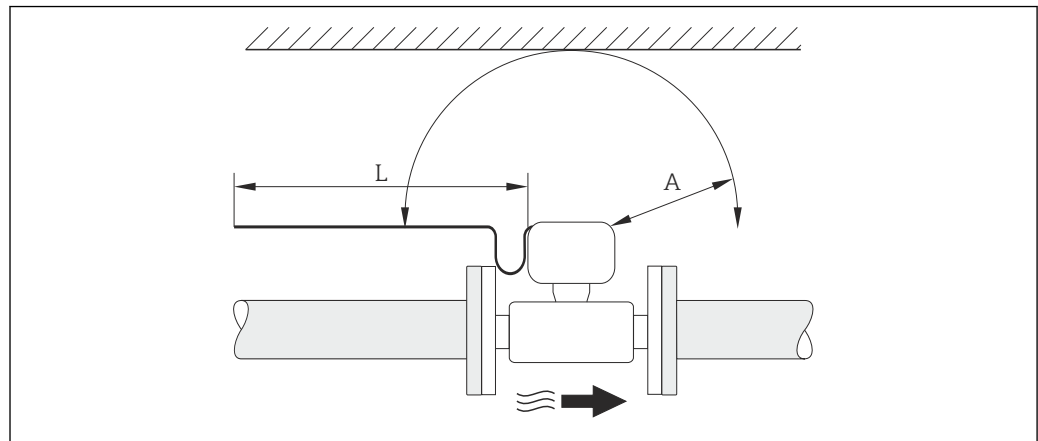Minimum spacing and cable length

A0019211

A Minimum spacing in all directions
L Required cable length

The following dimensions must be observed to guarantee problem-free access to the device for service purposes:


- $A = 100 \text{ mm}$ (3.94 in)
- $L = L + 150 \text{ mm}$ (5.91 in)

Rotating the electronics housing and the display

The electronics housing can be rotated continuously by 360° on the housing support. The display unit can be rotated in 45° stages. This means you can read the display comfortably from all directions.

Inlet and outlet runs

To attain the specified level of accuracy of the measuring device, the inlet and outlet runs mentioned below must be maintained at the very minimum.

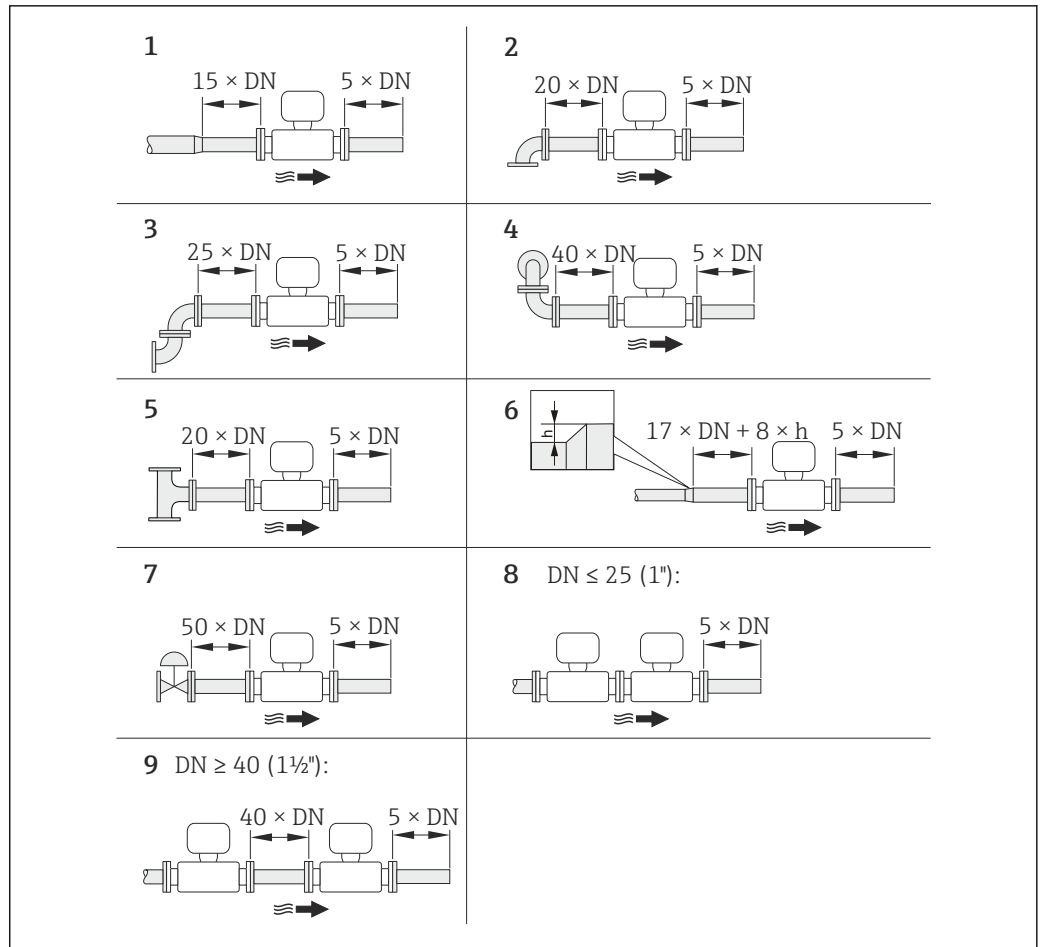

6 Minimum inlet and outlet runs with various flow obstructions

h Difference in expansion

1 Reduction by one nominal diameter size

2 Single elbow (90° elbow)

3 Double elbow (2 × 90° elbows, opposite)

4 Double elbow 3D (2 × 90° elbows, opposite, not on one plane)

5 T-piece

6 Expansion

7 Control valve

8 Two measuring devices in a row where $DN \leq 25$ (1"): directly flange on flange

9 Two measuring devices in a row where $DN \geq 40$ (1½"): for spacing, see graphic

i ■ If there are several flow disturbances present, the longest specified inlet run must be maintained.

■ If the required inlet runs cannot be observed, it is possible to install a specially designed flow conditioner → 24.

i The **inlet run correction** function:


■ Makes it possible to shorten the inlet run to a minimum length of $10 \times DN$ in the event of flow obstructions 1 to 4. An additional measuring uncertainty of $\pm 0.5\%$ o.r. occurs here.

■ Cannot be combined with the **wet steam detection/measurement** application package. If wet steam detection/measurement is used, the corresponding inlet runs must be taken into consideration. It is not possible to use a flow conditioner for wet steam.

Flow conditioner

If the required inlet runs cannot be observed, it is possible to install a specially designed flow conditioner which can be ordered from Endress+Hauser. The flow conditioner is fitted

between two pipe flanges and centered by the mounting bolts. Generally this reduces the inlet run needed to $10 \times \text{DN}$ with full accuracy.

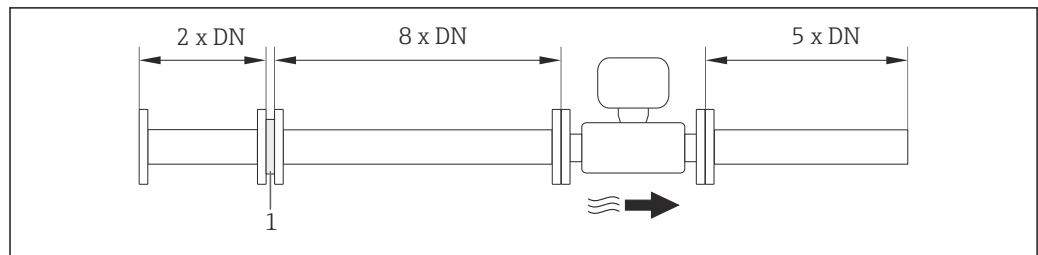

A0019208

1 Flow conditioner

The pressure loss for flow conditioners is calculated as follows: $\Delta p [\text{mbar}] = 0.0085 \cdot \rho [\text{kg/m}^3] \cdot v^2 [\text{m/s}]$

Example for steam

$p = 10 \text{ bar abs.}$

$t = 240^\circ\text{C} \rightarrow \rho = 4.39 \text{ kg/m}^3$

$v = 40 \text{ m/s}$

$\Delta p = 0.0085 \cdot 4.39 \cdot 40^2 = 59.7 \text{ mbar}$

Example for H_2O condensate (80°C)

$\rho = 965 \text{ kg/m}^3$

$v = 2.5 \text{ m/s}$

$\Delta p = 0.0085 \cdot 965 \cdot 2.5^2 = 51.3 \text{ mbar}$

ρ : density of the process medium

v : average flow velocity


abs. = absolute



For the dimensions of the flow conditioner, see the "Technical Information" document, "Mechanical construction" section

Outlet runs when installing external devices

If installing an external device, observe the specified distance.

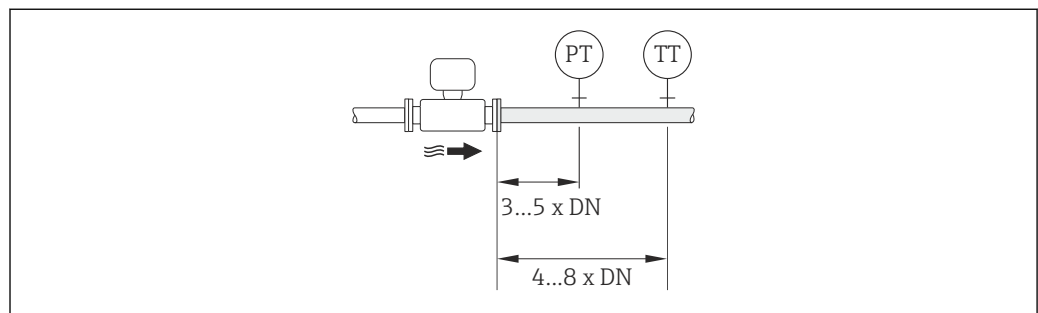

A0019205

PT Pressure transmitter

TT Temperature transmitter

Installation dimensions



For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

6.1.2 Requirements from environment and process

Ambient temperature range

Compact version

Measuring device	Non-Ex:	-40 to +80 °C (-40 to +176 °F) ¹⁾
	Ex i:	-40 to +70 °C (-40 to +158 °F) ¹⁾
	EEx d/XP version:	-40 to +60 °C (-40 to +140 °F) ¹⁾
	ATEX II1/2G Ex d, Ex ia:	-40 to +60 °C (-40 to +140 °F) ¹⁾
Local display		-20 to +70 °C (-4 to +158 °F) ¹⁾

1) Additionally available as order code for "Test, certificate", option JN "Transmitter ambient temperature -50 °C (-58 °F)".

Remote version

Transmitter	Non-Ex:	-40 to +80 °C (-40 to +176 °F) ¹⁾
	Ex i:	-40 to +80 °C (-40 to +176 °F) ¹⁾
	Ex d:	-40 to +60 °C (-40 to +140 °F) ¹⁾
	ATEX II1/2G Ex d, Ex ia:	-40 to +60 °C (-40 to +140 °F) ¹⁾
Sensor	Non-Ex:	-40 to +85 °C (-40 to +185 °F) ¹⁾
	Ex i:	-40 to +85 °C (-40 to +185 °F) ¹⁾
	Ex d:	-40 to +85 °C (-40 to +185 °F) ¹⁾
	ATEX II1/2G Ex d, Ex ia:	-40 to +85 °C (-40 to +185 °F) ¹⁾
Local display		-20 to +70 °C (-4 to +158 °F) ¹⁾

1) Additionally available as order code for "Test, certificate", option JN "Transmitter ambient temperature -50 °C (-58 °F)".

- If operating outdoors:
Avoid direct sunlight, particularly in warm climatic regions.


Thermal insulation

For optimum temperature measurement and mass calculation, heat transfer at the sensor must be avoided for some fluids. This can be ensured by installing thermal insulation. A wide range of materials can be used for the required insulation.

This applies for:

- Compact version
- Remote sensor version

The maximum insulation height permitted is illustrated in the diagram:

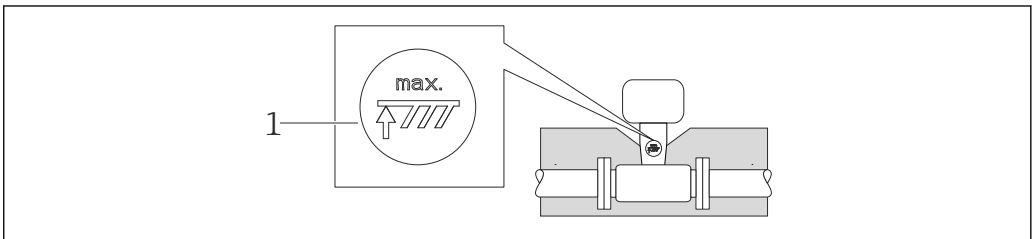

1 Maximum insulation height

A0019212

- ▶ When insulating, ensure that a sufficiently large area of the housing support remains exposed.

The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.

NOTICE

Electronics overheating on account of thermal insulation!

- ▶ Observe the maximum permitted insulation height of the transmitter neck so that the transmitter head and/or the connection housing of the remote version is completely free.
- ▶ Observe information on the permissible temperature ranges .
- ▶ Note that a certain orientation might be required, depending on the fluid temperature
→ ☞ 19.

Vibrations

The correct operation of the measuring system is not affected by plant vibrations up to 1 g, 10 to 500 Hz. Therefore no special measures are needed to secure the sensors.


6.1.3 Special mounting instructions

Installation for delta heat measurements

Order code for "Sensor version", option 3 "Mass flow (integrated temperature measurement)"

The second temperature measurement is taken using a separate temperature sensor. The measuring device reads in this value via a communication interface.

- In the case of saturated steam delta heat measurements, the Prowirl 200 must be installed on the steam side.
- In the case of water delta heat measurements, the Prowirl 200 can be installed on the cold or warm side.

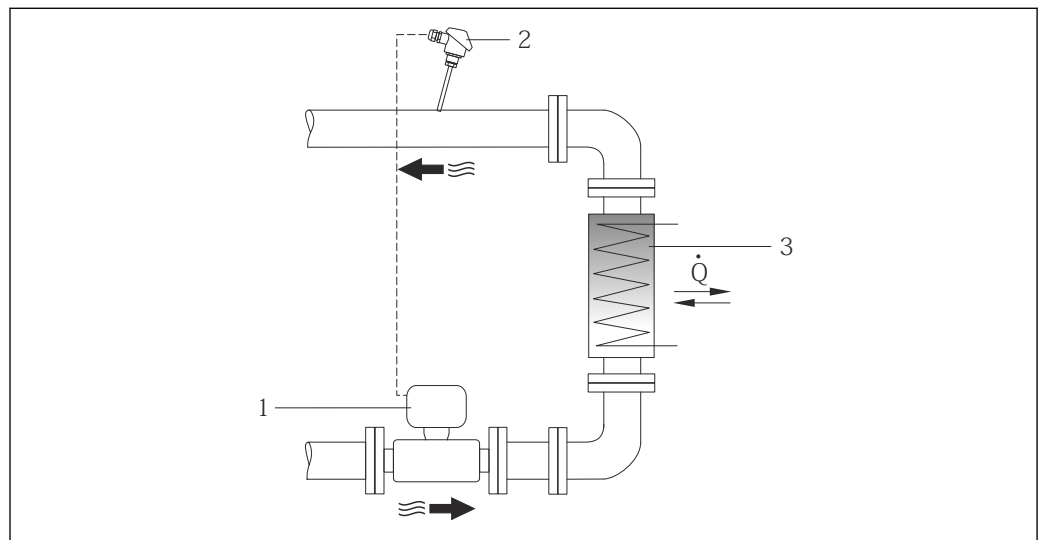

A0019209

☞ 7 Layout for delta heat measurement of saturated steam and water

- 1 Prowirl
- 2 Temperature sensor
- 3 Heat exchanger
- Q Heat flow

Weather protection cover

Observe the following minimum head clearance: 222 mm (8.74 in)



For information on the weather protection cover, see → 172

6.2 Mounting the measuring device

6.2.1 Required tools

For transmitter

- For turning the transmitter housing: Open-ended wrench 8 mm
- For opening the securing clamps: Allen key 3 mm

For sensor

For flanges and other process connections: Corresponding mounting tools

6.2.2 Preparing the measuring device

1. Remove all remaining transport packaging.
2. Remove any protective covers or protective caps present from the sensor.
3. Remove stick-on label on the electronics compartment cover.


6.2.3 Mounting the sensor

⚠ WARNING

Danger due to improper process sealing!

- ▶ Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ▶ Ensure that the gaskets are clean and undamaged.
- ▶ Install the gaskets correctly.

1. Ensure that the direction of the arrow on the sensor matches the flow direction of the medium.
2. To ensure compliance with device specifications, install the measuring device between the pipe flanges in a way that it is centered in the measurement section.
3. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

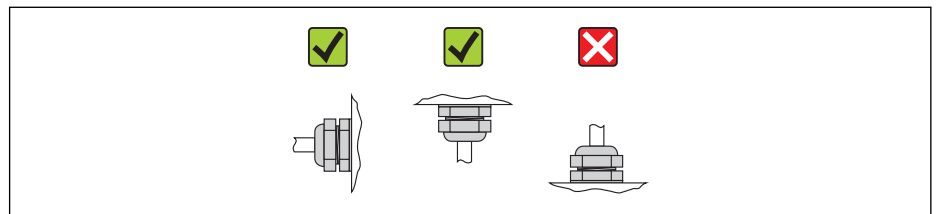

A0013964

6.2.4 Mounting the transmitter of the remote version

⚠ CAUTION

Ambient temperature too high!

Danger of electronics overheating and housing deformation.

- ▶ Do not exceed the permitted maximum ambient temperature .
- ▶ If operating outdoors: Avoid direct sunlight and exposure to weathering, particularly in warm climatic regions.

⚠ CAUTION


Excessive force can damage the housing!

- ▶ Avoid excessive mechanical stress.

The transmitter of the remote version can be mounted in the following ways:

- Wall mounting
- Pipe mounting


Wall mounting

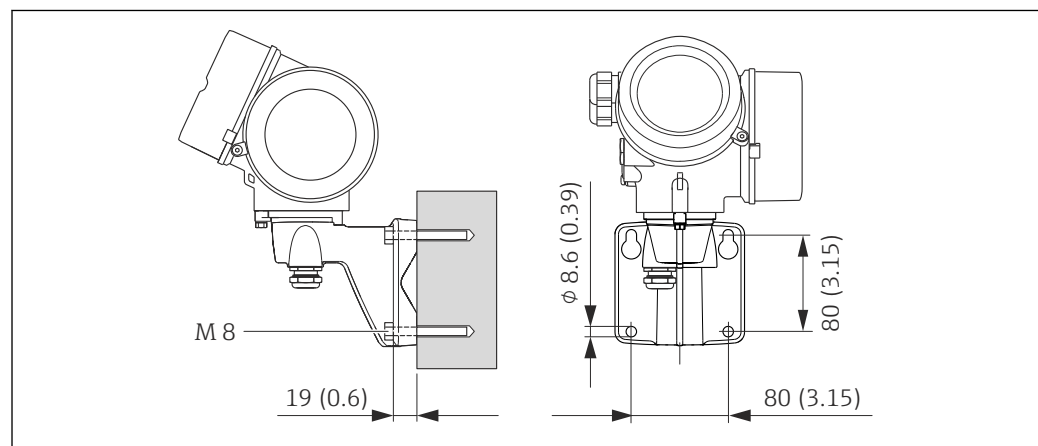

8 Engineering unit mm (in)

1. Drill the holes.
2. Insert wall plugs into the drilled holes.
3. Screw in the securing screws slightly at first.
4. Fit the transmitter housing over the securing screws and mount in place.
5. Tighten the securing screws.

Post mounting

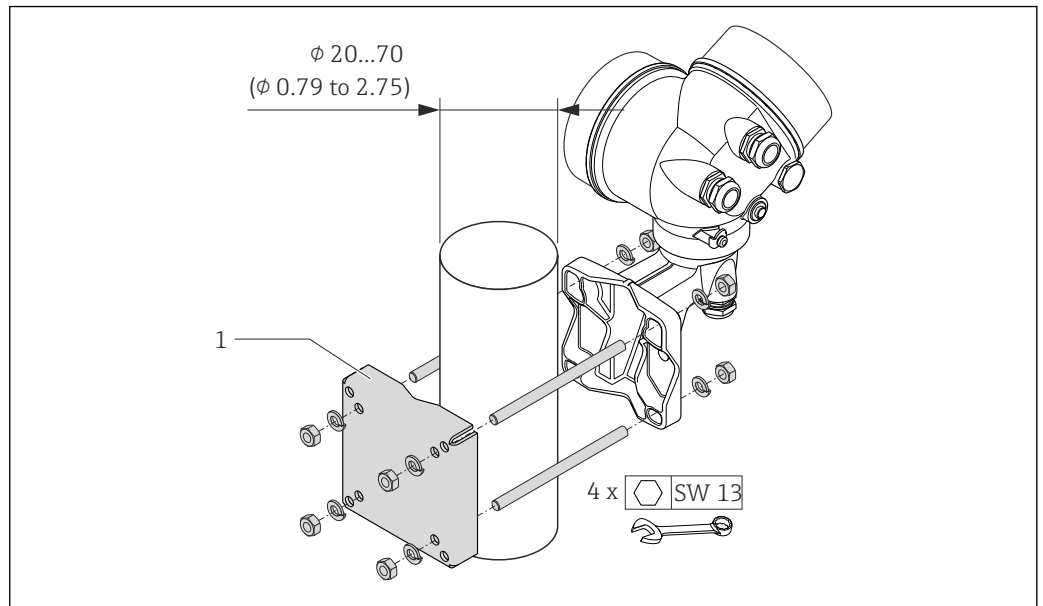


A0019862

9 Engineering unit mm (in)

1 Post retainer kit for post mounting

6.2.5 Turning the transmitter housing

To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

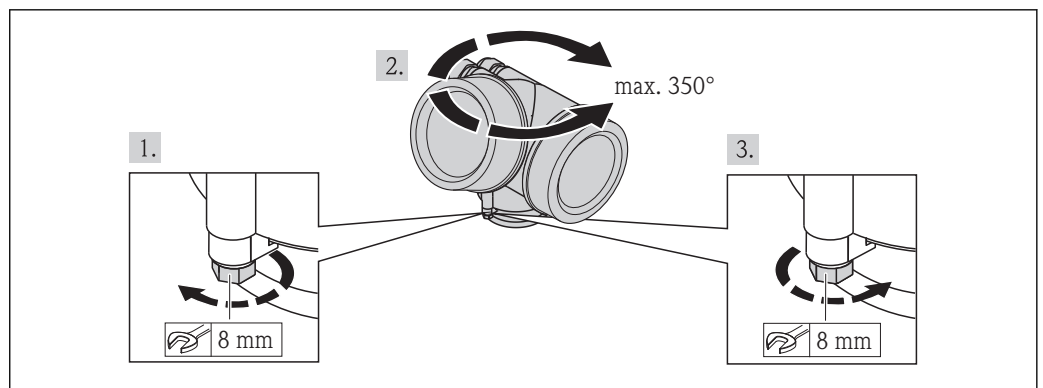


A0013713

1. Release the fixing screw.
2. Turn the housing to the desired position.
3. Firmly tighten the securing screw.

6.2.6 Turning the display module

The display module can be turned to optimize display readability and operability.

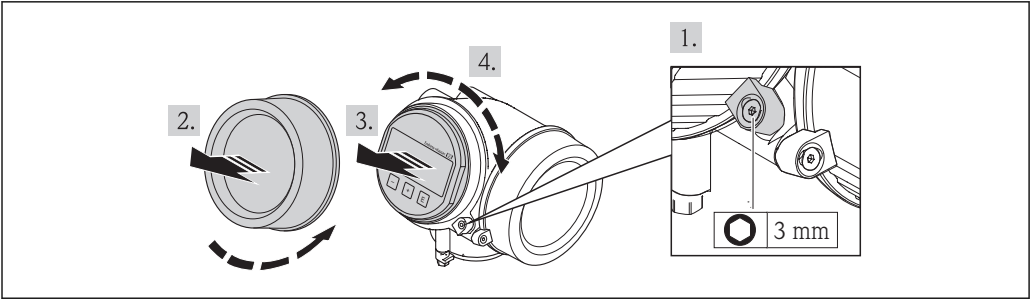


1. Loosen the securing clamp of the electronics compartment cover using an Allen key.
2. Unscrew cover of the electronics compartment from the transmitter housing.
3. Optional: pull out the display module with a gentle rotational movement.
4. Rotate the display module into the desired position: Max. 8 × 45° in each direction.
5. Without display module pulled out:
Allow display module to engage at desired position.
6. With display module pulled out:
Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.
7. Reverse the removal procedure to reassemble the transmitter.

6.3 Post-installation check

Is the device undamaged (visual inspection)?	<input type="checkbox"/>
Does the measuring device conform to the measuring point specifications? For example: <ul style="list-style-type: none"> ▪ Process temperature ▪ Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document) ▪ Ambient temperature ▪ Measuring range → 179 	<input type="checkbox"/>
Has the correct orientation for the sensor been selected → 19? <ul style="list-style-type: none"> ▪ According to sensor type ▪ According to medium temperature ▪ According to medium properties (outgassing, with entrained solids) 	<input type="checkbox"/>
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping → 19?	<input type="checkbox"/>
Are the measuring point identification and labeling correct (visual inspection)?	<input type="checkbox"/>
Is the device adequately protected from precipitation and direct sunlight?	<input type="checkbox"/>
Are the securing screw and securing clamp tightened securely?	<input type="checkbox"/>

7 Electrical connection

 The measuring device does not have an internal circuit breaker. For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.

7.1 Connection conditions

7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: crimping tool for ferrule
- For removing cables from terminal: flat blade screwdriver ≤ 3 mm (0.12 in)

7.1.2 Connecting cable requirements

The connecting cables provided by the customer must fulfill the following requirements.

Electrical safety

In accordance with applicable federal/national regulations.


Permitted temperature range

- -40°C (-40°F) to $+80^{\circ}\text{C}$ ($+176^{\circ}\text{F}$)
- Minimum requirement: cable temperature range \geq ambient temperature $+20$ K

Signal cable

FOUNDATION Fieldbus

Twisted, shielded two-wire cable.

 For further information on planning and installing FOUNDATION Fieldbus networks see:

- Operating Instructions for "FOUNDATION Fieldbus Overview" (BA00013S)
- FOUNDATION Fieldbus Guideline
- IEC 61158-2 (MBP)

Pulse/frequency/switch output

Standard installation cable is sufficient.

Connecting cable for remote version

Connecting cable (standard)

Standard cable	$2 \times 2 \times 0.34 \text{ mm}^2$ (22 AWG) PVC cable with common shield (2 pairs, pair-stranded)
Flame resistance	According to DIN EN 60332-1-2
Oil-resistance	According to DIN EN 60811-2-1
Shielding	Galvanized copper-braid, opt. density approx. 85%
Cable length	5 m (16 ft), 10 m (32 ft), 20 m (65 ft), 30 m (98 ft)
Operating temperature	When mounted in a fixed position: -50 to $+105^{\circ}\text{C}$ (-58 to $+221^{\circ}\text{F}$); when cable can move freely: -25 to $+105^{\circ}\text{C}$ (-13 to $+221^{\circ}\text{F}$)

Connecting cable (reinforced)

Cable, reinforced	2 × 2 × 0.34 mm ² (22 AWG) PVC cable with common shield (2 pairs, pair-stranded) and additional steel-wire braided sheath
Flame resistance	According to DIN EN 60332-1-2
Oil-resistance	According to DIN EN 60811-2-1
Shielding	Galvanized copper-braid, opt. density approx. 85%
Strain relief and reinforcement	Steel-wire braid, galvanized
Cable length	5 m (16 ft), 10 m (32 ft), 20 m (65 ft), 30 m (98 ft)
Operating temperature	When mounted in a fixed position: -50 to +105 °C (-58 to +221 °F); when cable can move freely: -25 to +105 °C (-13 to +221 °F)

Cable diameter

- Cable glands supplied:
M20 × 1.5 with cable \varnothing 6 to 12 mm (0.24 to 0.47 in)
- Plug-in spring terminals for device version without integrated overvoltage protection:
wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)
- Screw terminals for device version with integrated overvoltage protection: wire cross-sections 0.2 to 2.5 mm² (24 to 14 AWG)

7.1.3 Terminal assignment

Transmitter

Connection version for FOUNDATION Fieldbus, pulse/frequency/switch output

<p style="text-align: right;">A0013570</p>	<p style="text-align: right;">A0018161</p>
Maximum number of terminals	Maximum number of terminals for order code for "Accessory mounted", option NA "Overvoltage protection"
<p>1 Output 1: FOUNDATION Fieldbus</p> <p>2 Output 2 (passive: pulse/frequency/switch output</p> <p>3 Ground terminal for cable shield</p>	

Order code for "Output"	Terminal numbers			
	Output 1		Output 2	
	1 (+)	2 (-)	3 (+)	4 (-)
Option E ^{1) 2)}	FOUNDATION Fieldbus		Pulse/frequency/switch output (passive)	

1) Output 1 must always be used; output 2 is optional.

2) FOUNDATION Fieldbus with integrated reverse polarity protection.

Remote version

In the case of the remote version, the sensor and transmitter are mounted separately from one another and connected by a connecting cable. The sensor is connected via the connection housing while the transmitter is connected via the connection compartment of the wall holder unit.



The way the transmitter wall holder is connected depends on the measuring device approval and the version of the connecting cable used.


Connection is only possible via terminals:

- For approvals Ex n, Ex tb and cCSAus Div. 1
- If a reinforced connecting cable is used

The connection is via an M12 connector:

- For all other approvals
- If the standard connecting cable is used

Connection to the connection housing of the sensor is always via the terminals (tightening torque for terminals: 1.2 to 1.7 Nm).

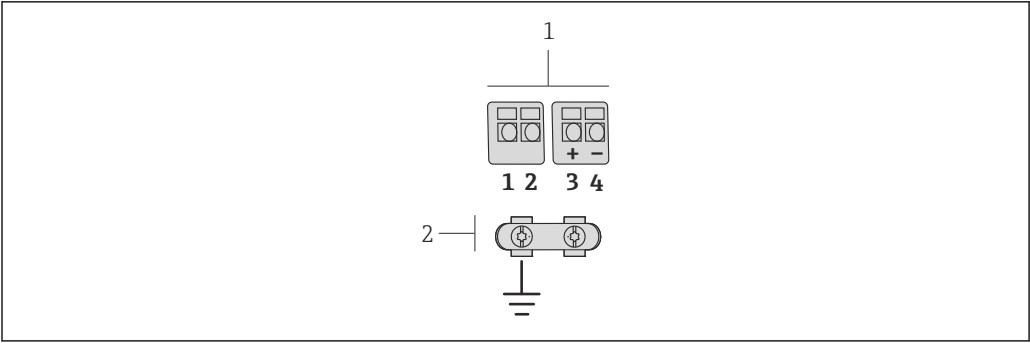

10 Terminals for connection compartment in the transmitter wall holder and the sensor connection housing

1 Terminals for connecting cable


2 Grounding via the cable strain relief

Terminal number	Assignment	Cable color Connecting cable
1	Supply voltage	Brown
2	Grounding	White
3	RS485 (+)	Yellow
4	RS485 (-)	Green

7.1.4 Pin assignment, device plug

FOUNDATION Fieldbus

Device plug for signal transmission (device side)

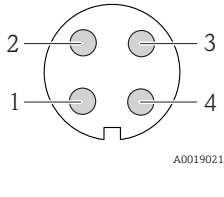	Pin	Assignment		Coding	Plug/socket
	1	+	Signal +	A	Plug
	2	-	Signal -		
	3		Not assigned		
	4		Grounding		

7.1.5 Shielding and grounding

FOUNDATION Fieldbus

Optimum electromagnetic compatibility (EMC) of the fieldbus system can only be guaranteed if the system components and, in particular, the lines are shielded and the shield forms as complete a cover as possible. A shield coverage of 90% is ideal.

- To ensure an optimum EMC protective effect, connect the shield as often as possible to the reference ground.
- For reasons of explosion protection, you should refrain from grounding however.

To comply with both requirements, the fieldbus system allows three different types of shielding:

- Shielding at both ends.
- Shielding at one end on the feed side with capacitance termination at the field device.
- Shielding at one end on the feed side.

Experience shows that the best results with regard to EMC are achieved in most cases in installations with one-sided shielding on the feed side (without capacitance termination at the field device). Appropriate measures with regard to input wiring must be taken to allow unrestricted operation when EMC interference is present. These measures have been

taken into account for this device. Operation in the event of disturbance variables as per NAMUR NE21 is thus guaranteed.

Where applicable, national installation regulations and guidelines must be observed during the installation!


Where there are large differences in potential between the individual grounding points, only one point of the shielding is connected directly with the reference ground. In systems without potential equalization, therefore, cable shielding of fieldbus systems should only be grounded on one side, for example at the fieldbus supply unit or at safety barriers.

NOTICE

In systems without potential matching, the multiple grounding of the cable shield causes mains frequency equalizing currents!

Damage to the bus cable shield.

- Only ground the bus cable shield to either the local ground or the protective ground at one end. Insulate the shield that is not connected.

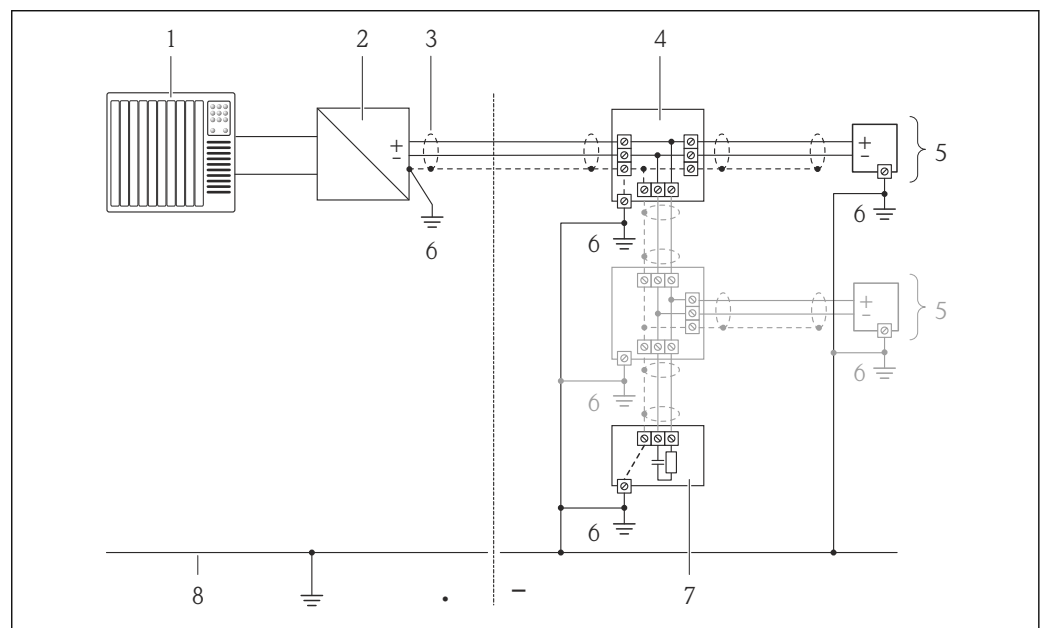

- 1 Controller (e.g. PLC)
- 2 Power Conditioner (FOUNDATION Fieldbus)
- 3 Cable shield
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

7.1.6 Requirements for the supply unit

Supply voltage

Transmitter

An external power supply is required for each output.

The following supply voltage values apply for the outputs available:

Supply voltage for a compact version without a local display ¹⁾

Order code for "Output"	Minimum terminal voltage ²⁾	Maximum terminal voltage
Option E : FOUNDATION Fieldbus, pulse/frequency/switch output	≥ DC 9 V	DC 32 V

1) In event of external supply voltage of the power conditioner

2) The minimum terminal voltage increases if local operation is used: see the following table

Increase in minimum terminal voltage

Local operation	Increase in minimum terminal voltage
Order code for "Display; Operation", option C : Local operation SD02	+ DC 1 V
Order code for "Display; Operation", option E : Local operation SD03 with lighting (backlighting not used)	+ DC 1 V
Order code for "Display; Operation", option E : Local operation SD03 with lighting (backlighting used)	+ DC 3 V

7.1.7 Preparing the measuring device

1. Remove dummy plug if present.

2. NOTICE**Insufficient sealing of the housing!**

Operational reliability of the measuring device could be compromised.

- Use suitable cable glands corresponding to the degree of protection.

If measuring device is delivered without cable glands:

Provide suitable cable gland for corresponding connecting cable .

3. If measuring device is delivered with cable glands:
Observe cable specification .

7.2 Connecting the measuring device**NOTICE****Limitation of electrical safety due to incorrect connection!**

- Have electrical connection work carried out by correspondingly trained specialists only.
- Observe applicable federal/national installation codes and regulations.
- Comply with local workplace safety regulations.
- For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.

7.2.1 Connecting the remote version**⚠ WARNING****Risk of damaging the electronic components!**

- Ground the remote version and in doing so connect the sensor and transmitter to the same potential equalization.
- Only connect the sensor to a transmitter with the same serial number.

The following procedure (in the action sequence given) is recommended for the remote version:

1. Mount the transmitter and sensor.
2. Connect the connecting cable.
3. Connect the transmitter.

i The way the transmitter wall holder is connected depends on the measuring device approval and the version of the connecting cable used.

Connection is only possible via terminals:


- For approvals Ex n, Ex tb and cCSAus Div. 1
- If a reinforced connecting cable is used

The connection is via an M12 connector:


- For all other approvals
- If the standard connecting cable is used

Connection to the connection housing of the sensor is always via the terminals (tightening torque for terminals: 1.2 to 1.7 Nm).

Connecting the sensor connection housing

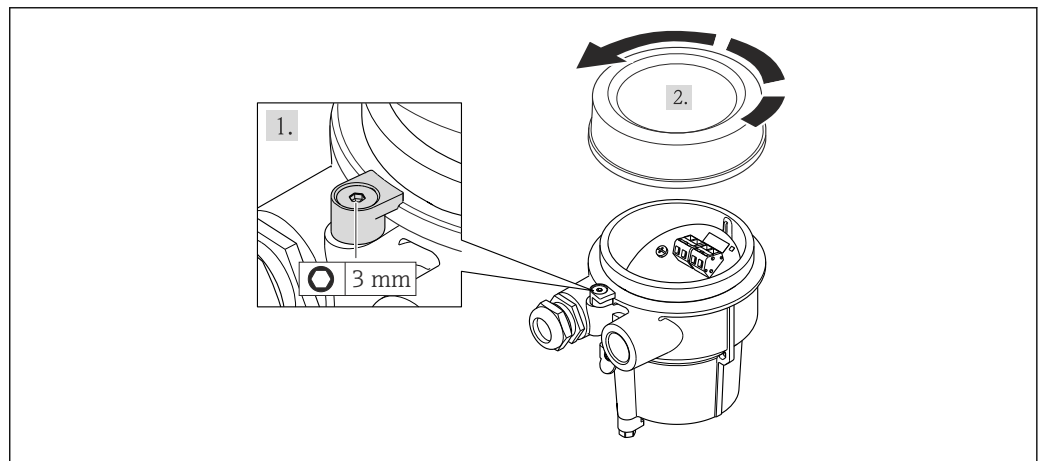

A0020410

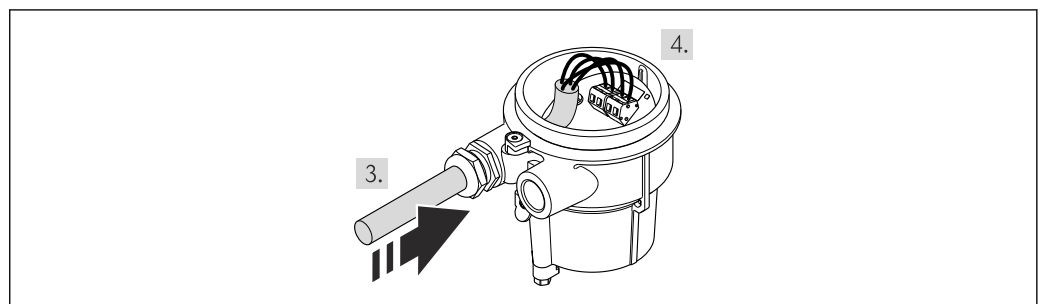

A0020411

1. Loosen the securing clamp.
2. Unscrew the housing cover.
3. Guide the connecting cable through the cable entry and into the connection housing (if using a connecting cable without an M12 device plug, use the shorter stripped end of the connecting cable).

4. NOTICE**Terminals tightened with an incorrect tightening torque.**

Incorrect connection or damaged terminal.

- Tighten the terminals with a tightening torque in the 1.2 to 1.7 Nm range.

Wire the connecting cable:


- ↳ Terminal 1 = brown cable
- Terminal 2 = white cable
- Terminal 3 = yellow cable
- Terminal 4 = green cable

- 5. Connect the cable shield via the cable strain relief.

- 6. Reverse the removal procedure to reassemble the transmitter.

Connection to the wall holder of the transmitter


Connecting the transmitter via plug

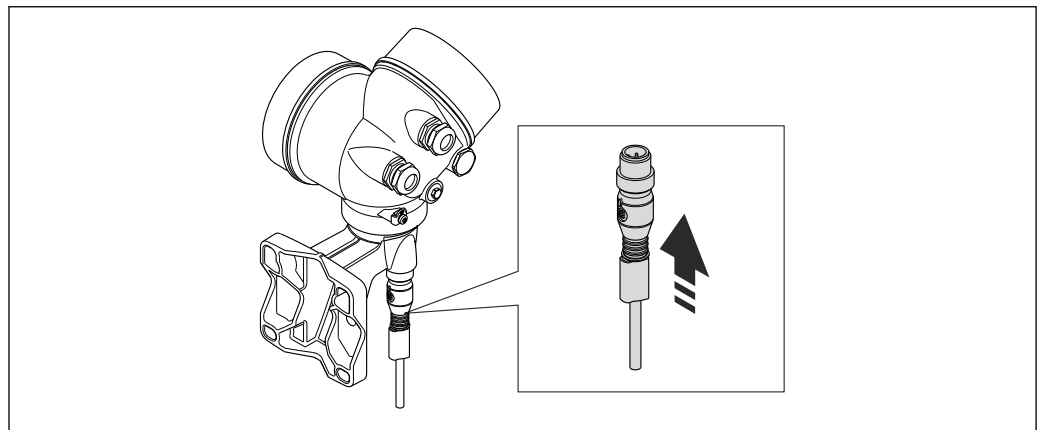


A0020412

- Connect the plug.


Connecting the transmitter via terminals

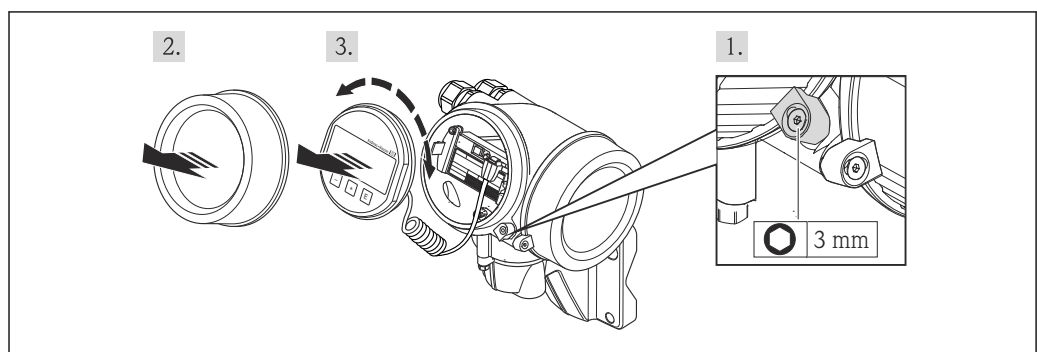


A0020404

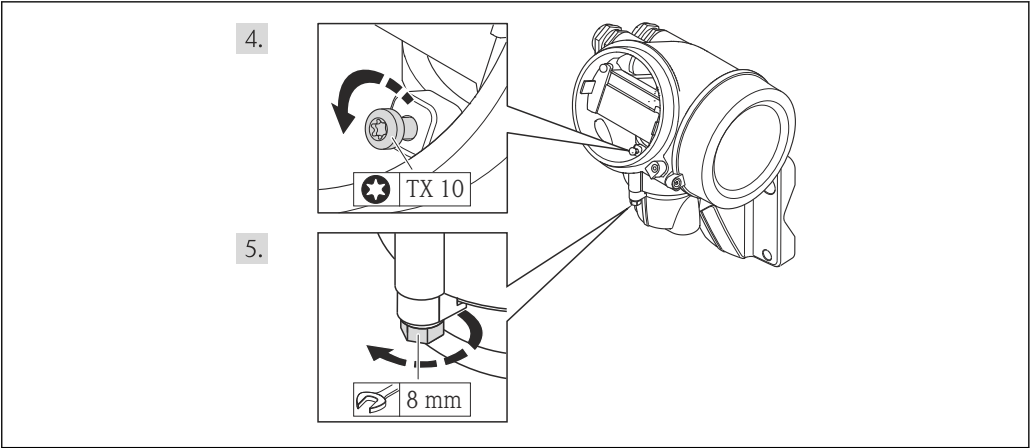


A0020405

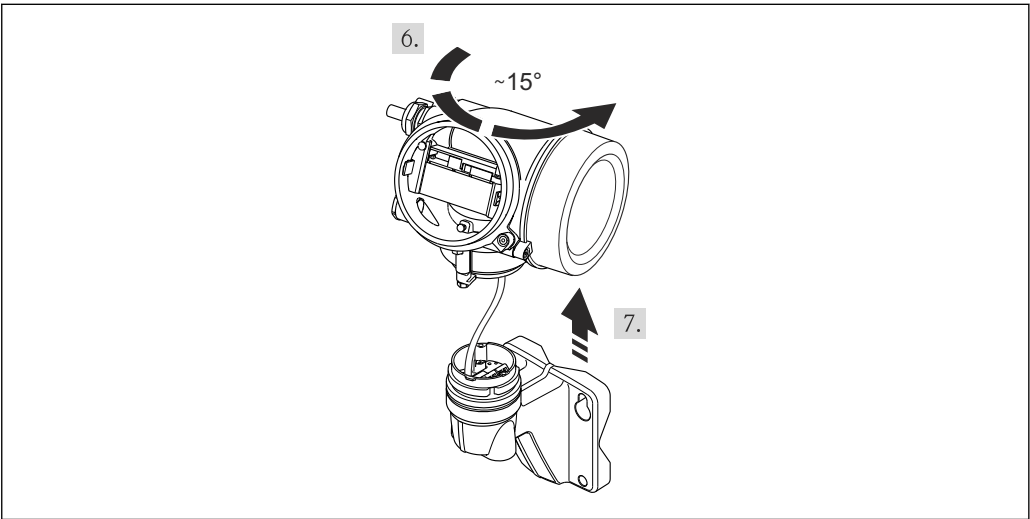

A0020406

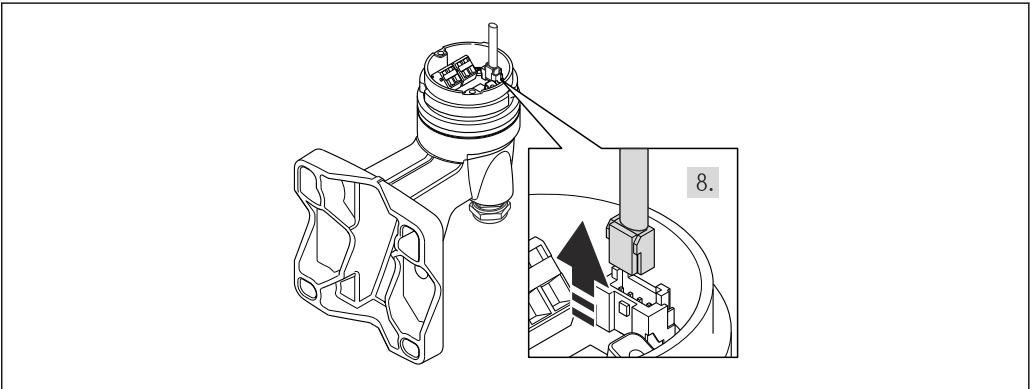

A0020407

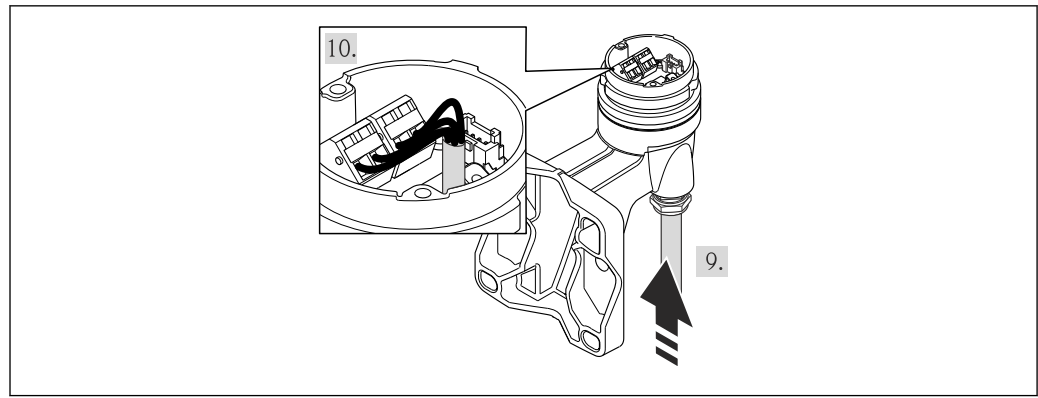


A0020409

1. Loosen the securing clamp of the transmitter housing.
2. Loosen the securing clamp of the electronics compartment cover.
3. Unscrew the electronics compartment cover.
4. Pull out the display module with a gentle rotational movement. To make it easier to access the lock switch, attach the display module to the edge of the electronics compartment.
5. Loosen the locking screw of the transmitter housing.
6. Turn the transmitter housing to the right until the mark and lift it up. The connection board of the wall housing is connected to the electronics board of the transmitter via a signal cable. Pay attention to the signal cable when lifting the transmitter housing!
7. Disconnect the signal cable from the connection board of the wall housing by pressing in the locking clip on the connector.
8. Remove the transmitter housing.
9. Guide the connecting cable through the cable entry and into the connection housing (if using a connecting cable without an M12 device plug, use the shorter stripped end of the connecting cable).
10. Wire the connecting cable:
 - ↳ Terminal 1 = brown cable
 - Terminal 2 = white cable
 - Terminal 3 = yellow cable
 - Terminal 4 = green cable
11. Connect the cable shield via the cable strain relief.
12. Reverse the removal procedure to reassemble the transmitter.

7.2.2 Connecting the transmitter

Connection via terminals

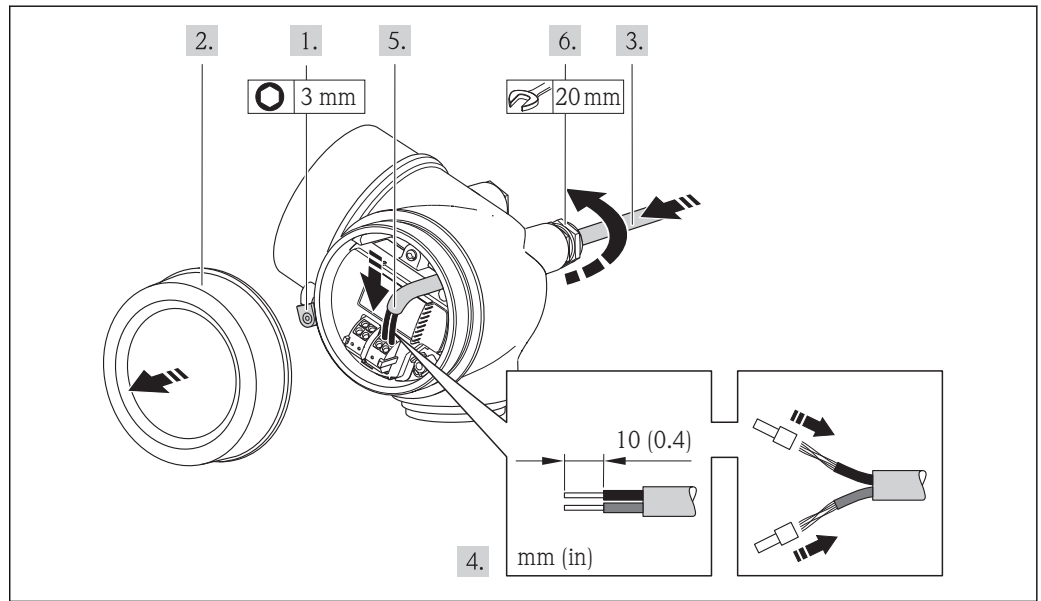

A0013836


1. Loosen the securing clamp of the connection compartment cover.
2. Unscrew the connection compartment cover.
3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
4. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
5. **⚠ WARNING**

Housing degree of protection may be voided due to insufficient sealing of the housing.

- Screw in the screw without using any lubricant. The threads on the cover are coated with a dry lubricant.

Reverse the removal procedure to reassemble the transmitter.

Removing a cable

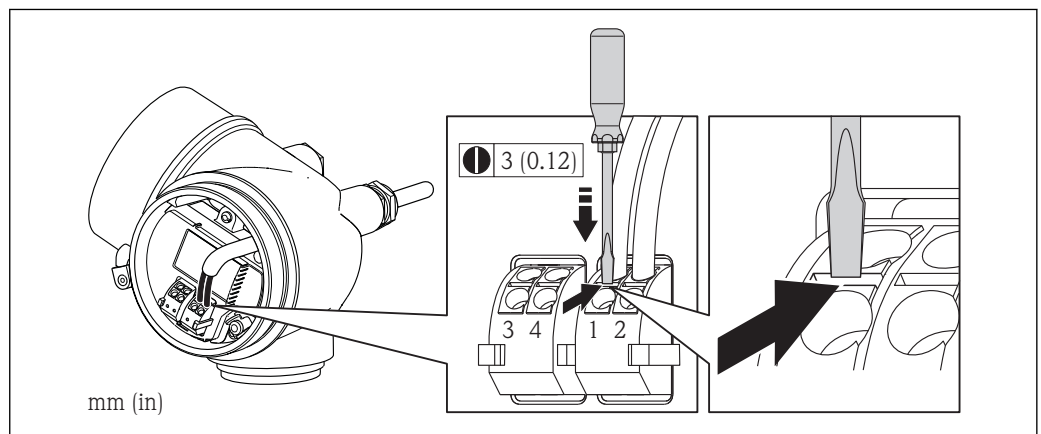

A0013835

- To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes while simultaneously pulling the cable end out of the terminal.

7.2.3 Ensuring potential equalization

Requirements

Please consider the following to ensure correct measurement:

- Same electrical potential for the fluid and sensor
- Remote version: same electrical potential for the sensor and transmitter
- Company-internal grounding concepts
- Pipe material and grounding




For devices intended for use in hazardous locations, please observe the guidelines in the Ex documentation (XA).

7.3 Special connection instructions

7.3.1 Connection examples

Pulse/frequency output

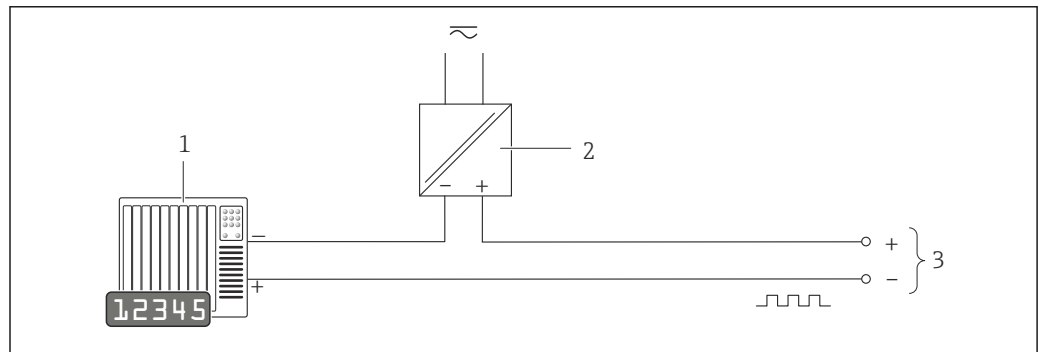


A0016801

11 Connection example for pulse/frequency output (passive)

1 Automation system with pulse/frequency input (e.g. PLC)

2 Power supply

3 Transmitter: observe input values → 181

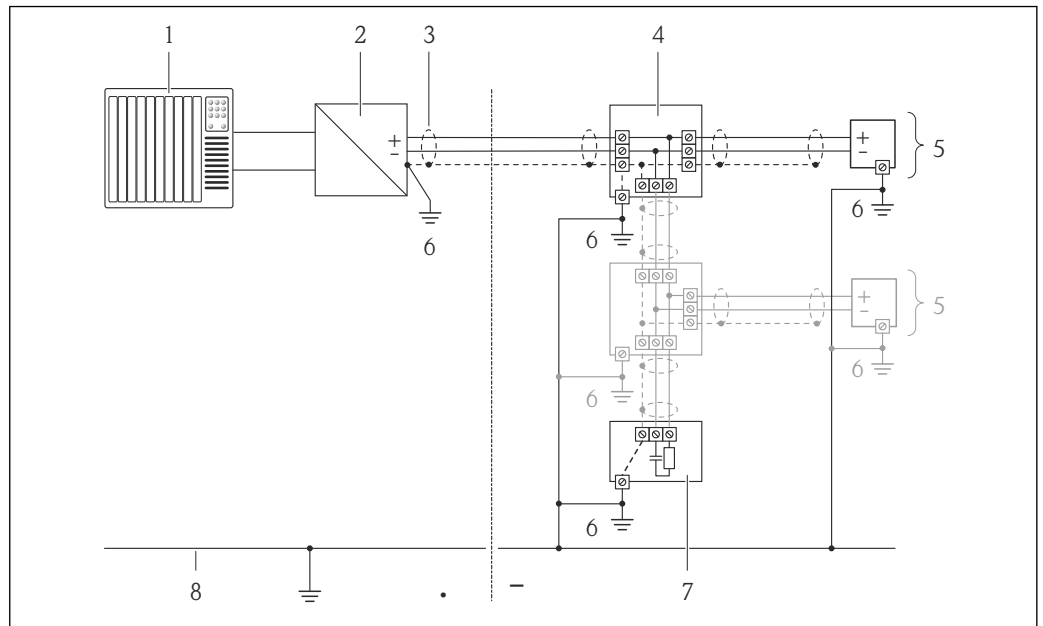FOUNDATION Fieldbus

A0019004

12 Connection example for FOUNDATION Fieldbus


- 1 Control system (e.g. PLC)
- 2 Power Conditioner (FOUNDATION Fieldbus)
- 3 Cable shield
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

7.4 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:


1. Check that the housing seals are clean and fitted correctly. Dry, clean or replace the seals if necessary.
2. Tighten all housing screws and screw covers.
3. Firmly tighten the cable glands.
4. To ensure that moisture does not enter the cable entry, route the cable so that it loops down before the cable entry ("water trap").

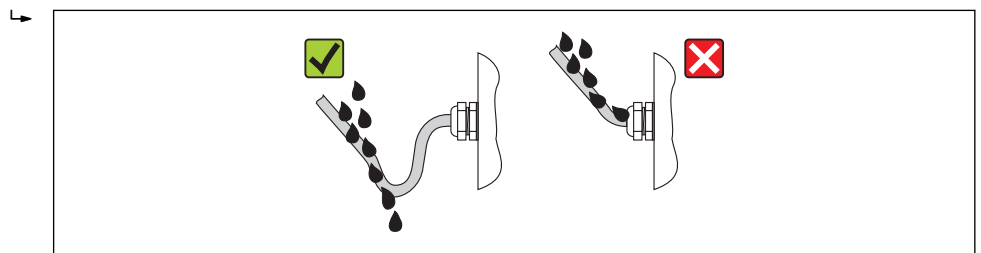

A0013960


5. Insert dummy plugs into unused cable entries.

7.5 Post-connection check

Are cables or the device undamaged (visual inspection)?	<input type="checkbox"/>
Do the cables comply with the requirements ?	<input type="checkbox"/>
Do the cables have adequate strain relief?	<input type="checkbox"/>
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" →  41 ?	<input type="checkbox"/>
Depending on the device version: are all the device plugs firmly tightened ?	<input type="checkbox"/>
Does the supply voltage match the specifications on the transmitter nameplate ?	<input type="checkbox"/>
Is the terminal assignment correct ?	<input type="checkbox"/>
If supply voltage is present, do values appear on the display module?	<input type="checkbox"/>
Are all housing covers installed and firmly tightened?	<input type="checkbox"/>
Is the securing clamp tightened correctly?	<input type="checkbox"/>

8 Operation options

8.1 Overview of operating options

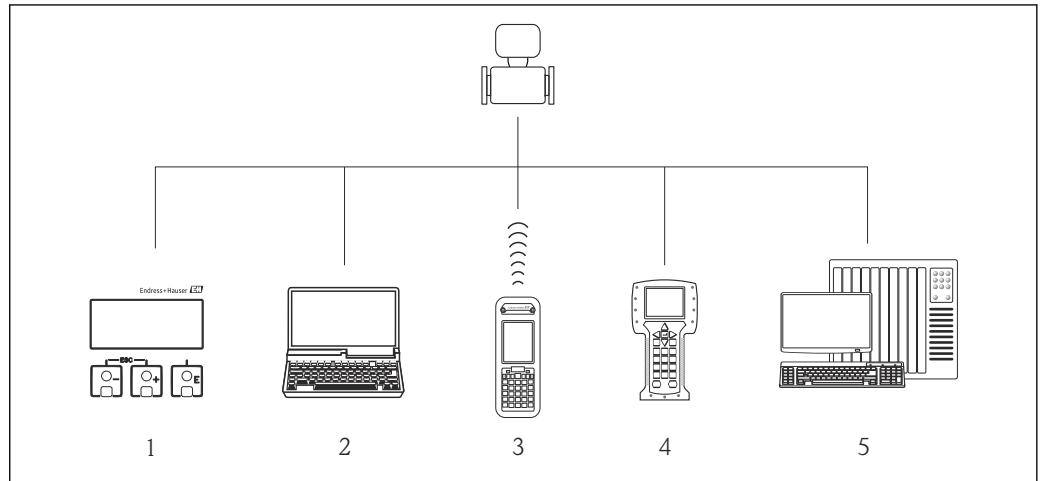


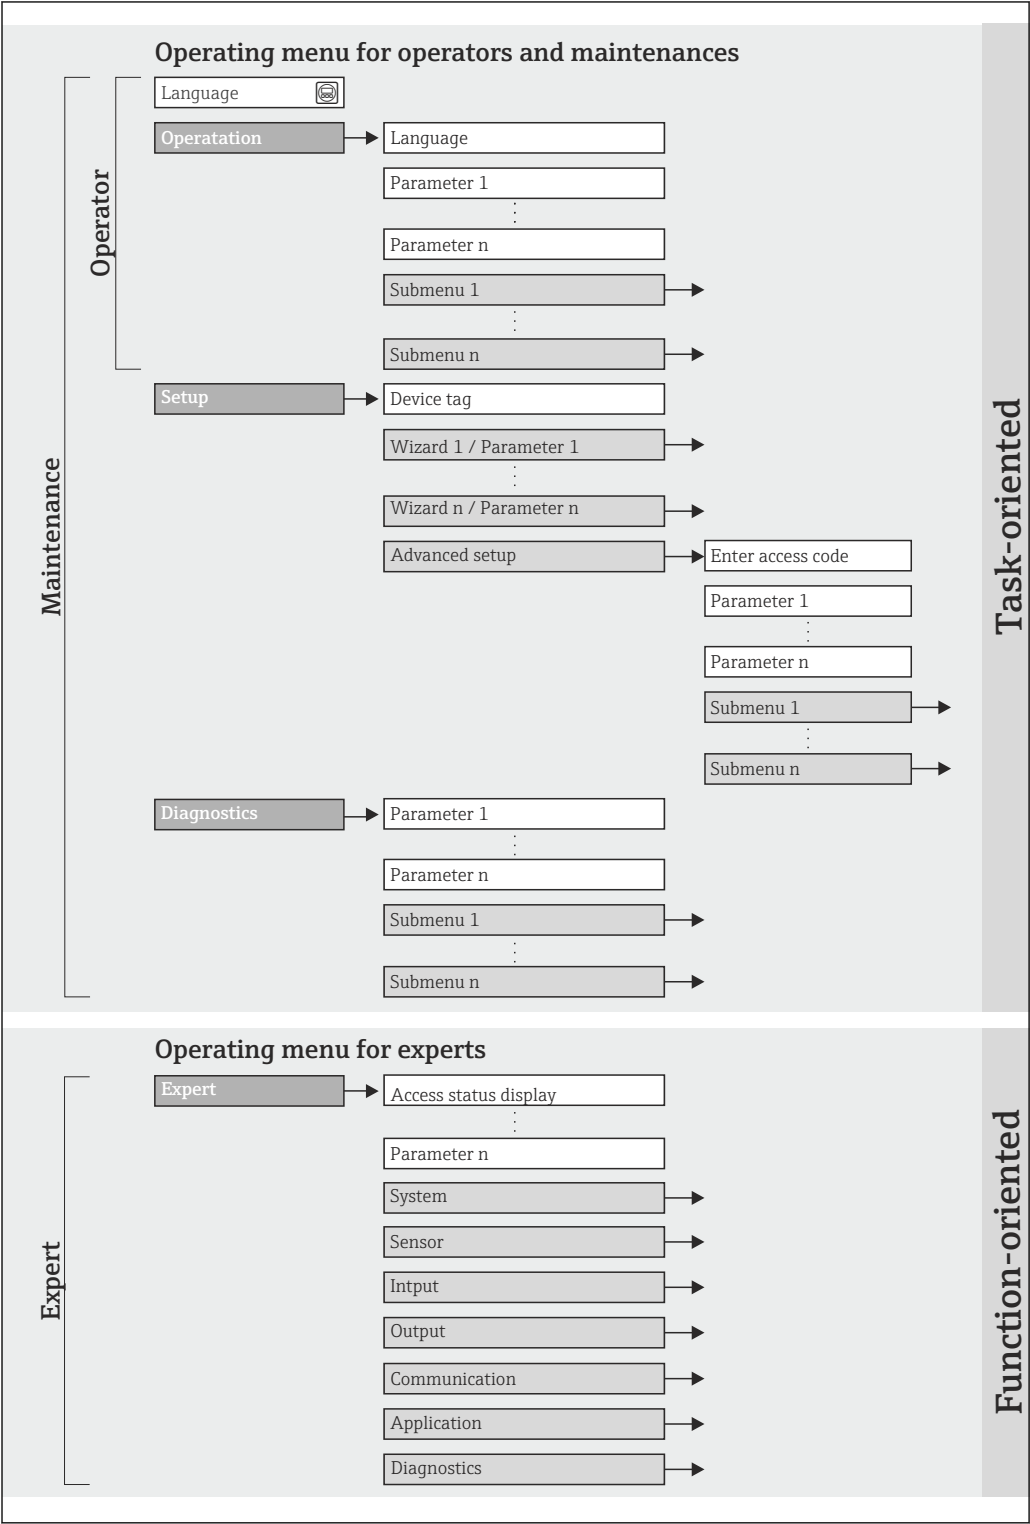
A0015607


- 1 Local operation via display module
- 2 Computer with operating tool (e.g. FieldCare, AMS Device Manager)
- 3 Field Xpert SFX350 or SFX370
- 4 Field Communicator 475
- 5 Automation system (e.g. PLC)

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

 For an overview of the operating menu with menus and parameters



 13 Schematic structure of the operating menu


A0018237-EN

8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

8.3 Access to the operating menu via the local display

8.3.1 Operational display

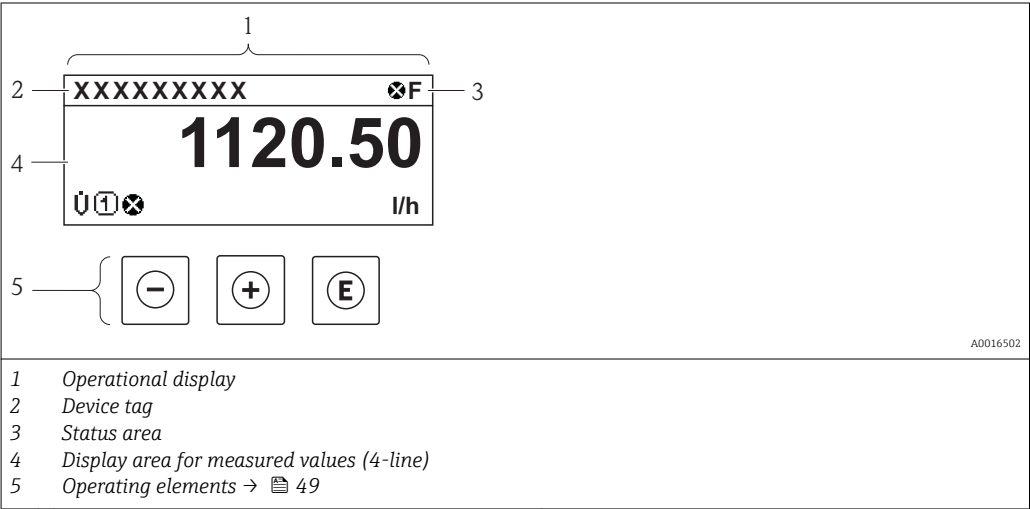

Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 131
 - F: Failure
 - C: Function check
 - S: Out of specification
 - M: Maintenance required
- Diagnostic behavior → 132
 - ⊗: Alarm
 - ⚠: Warning
- ⚡: Locking (the device is locked via the hardware)
- ↔: Communication (communication via remote operation is active)

Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

Measured variables


Symbol	Meaning
U	Volume flow
Σ	Totalizer i The measurement channel number indicates which of the three totalizers is displayed.

Measurement channel numbers



Symbol	Meaning
<div>1 ... 4</div>	Measurement channel 1 to 4
The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. totalizer 1-3).	

Diagnostic behavior

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable. For information on the symbols → 132



 The number and display format of the measured values can be configured via the **"Format display" parameter** → 73. "Operation" menu → Display → Format display

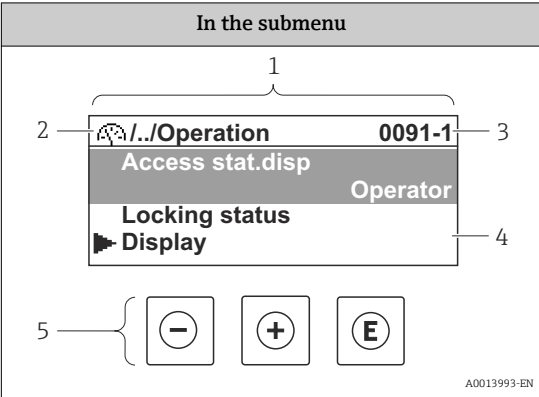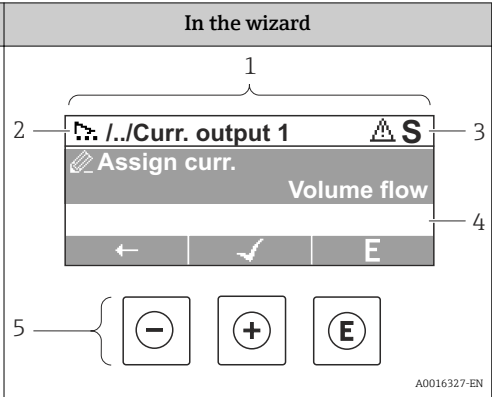
8.3.2 Navigation view

In the submenu	In the wizard
<div></div> <div>A0013993-EN</div>	<div></div> <div>A0016327-EN</div>
<div>1 Navigation view</div> <div>2 Navigation path to current position</div> <div>3 Status area</div> <div>4 Display area for navigation</div> <div>5 Operating elements → 49</div>	

Navigation path

The navigation path - displayed at the top left in the navigation view - consists of the following elements:

	<div>■ In the submenu: Display symbol for menu</div> <div>■ In the wizard: Display symbol for wizard</div>	<div>Omission symbol for operating menu levels in between</div>	<div>Name of current</div> <div>■ Submenu</div> <div>■ Wizard</div> <div>■ Parameter</div>
	↓	↓	↓
Examples	<div></div>	<div>/ ./</div>	<div>Display</div>
	<div></div>	<div>/ ./</div>	<div>Display</div>

 For more information about the menu icons, refer to the "Display area" section → 47

Status area

The following appears in the status area of the navigation view in the top right corner:

- Of the submenu
 - The direct access code for the parameter you are navigating to (e.g. 0022-1)
 - If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard
 - If a diagnostic event is present, the diagnostic behavior and status signal



- For information on the diagnostic behavior and status signal → 131
- For information on the function and entry of the direct access code → 52

Display area

Menus

Symbol	Meaning
	Operation Appears: <ul style="list-style-type: none"> ■ In the menu next to the "Operation" selection ■ At the left in the navigation path in the "Operation" menu
	Setup Appears: <ul style="list-style-type: none"> ■ In the menu next to the "Setup" selection ■ At the left in the navigation path in the "Setup" menu
	Diagnostics Appears: <ul style="list-style-type: none"> ■ In the menu next to the "Diagnostics" selection ■ At the left in the navigation path in the "Diagnostics" menu
	Expert Appears: <ul style="list-style-type: none"> ■ In the menu next to the "Expert" selection ■ At the left in the navigation path in the "Expert" menu

Submenus, wizards, parameters

Symbol	Meaning
	Submenu
	Wizard
	Parameters within a wizard No display symbol exists for parameters in submenus.

Locking

Symbol	Meaning
	Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked. <ul style="list-style-type: none"> ■ By a user-specific access code ■ By the hardware write protection switch

Wizard operation

Symbol	Meaning
	Switches to the previous parameter.
	Confirms the parameter value and switches to the next parameter.
	Opens the editing view of the parameter.

8.3.3 Editing view

1

20

2

3

4

5

6

7

8

9

-

.

←

C

X

✓

4

-

+

E

A0013941

1

User

2

3

4

5

6

7

8

9

ABC

DEFG

HIJK

LMNO

PQRS

TUVW

XYZ

↔C↔

Aa1@

C

✓

X

4

-

+

E

A0013999

1 Editing view

2 Display area of the entered values

3 Input mask

4 Operating elements → 49

Input mask

The following input symbols are available in the input mask of the numeric and text editor:

Numeric editor









Symbol	Meaning
<div>0 ... 9</div>	Selection of numbers from 0 to 9.
<div>.</div>	Inserts decimal separator at the input position.
<div>-</div>	Inserts minus sign at the input position.
<div>✓</div>	Confirms selection.
<div>←</div>	Moves the input position one position to the left.
<div>X</div>	Exits the input without applying the changes.
<div>C</div>	Clears all entered characters.


Text editor





Symbol	Meaning
<div>Aa1@ ... XYZ</div>	<div>Toggle<ul style="list-style-type: none">Between upper-case and lower-case lettersFor entering numbersFor entering special characters</div>
<div>ABC_ ... XYZ</div>	Selection of letters from A to Z.

48



Endress+Hauser






 ... 	Selection of letters from a to z.
 ... 	Selection of special characters.
	Confirms selection.
	Switches to the selection of the correction tools.
	Exits the input without applying the changes.
	Clears all entered characters.

Correction symbols under

Symbol	Meaning
	Clears all entered characters.
	Moves the input position one position to the right.
	Moves the input position one position to the left.
	Deletes one character immediately to the left of the input position.

8.3.4 Operating elements

Key	Meaning
	Minus key <i>In a menu, submenu</i> Moves the selection bar upwards in a choose list. <i>With a Wizard</i> Confirms the parameter value and goes to the previous parameter. <i>With a text and numeric editor</i> In the input mask, moves the selection bar to the left (backwards).
	Plus key <i>In a menu, submenu</i> Moves the selection bar downwards in a choose list. <i>With a Wizard</i> Confirms the parameter value and goes to the next parameter. <i>With a text and numeric editor</i> Moves the selection bar to the right (forwards) in an input screen.

Key	Meaning
	<p>Enter key</p> <p><i>For operational display</i></p> <ul style="list-style-type: none">Pressing the key briefly opens the operating menu.Pressing the key for 2 s opens the context menu. <p><i>In a menu, submenu</i></p> <ul style="list-style-type: none">Pressing the key briefly:<ul style="list-style-type: none">Opens the selected menu, submenu or parameter.Starts the wizard.If help text is open, closes the help text of the parameter.Pressing the key for 2 s for parameter:<ul style="list-style-type: none">If present, opens the help text for the function of the parameter. <p><i>With a Wizard</i></p> <p>Opens the editing view of the parameter.</p> <p><i>With a text and numeric editor</i></p> <ul style="list-style-type: none">Pressing the key briefly:<ul style="list-style-type: none">Opens the selected group.Carries out the selected action.Pressing the key for 2 s confirms the edited parameter value.
	<p>Escape key combination (press keys simultaneously)</p> <p><i>In a menu, submenu</i></p> <ul style="list-style-type: none">Pressing the key briefly:<ul style="list-style-type: none">Exits the current menu level and takes you to the next higher level.If help text is open, closes the help text of the parameter.Pressing the key for 2 s returns you to the operational display ("home position"). <p><i>With a Wizard</i></p> <p>Exits the wizard and takes you to the next higher level.</p> <p><i>With a text and numeric editor</i></p> <p>Closes the text or numeric editor without applying changes.</p>
	<p>Minus/Enter key combination (press the keys simultaneously)</p> <p>Reduces the contrast (brighter setting).</p>
	<p>Plus/Enter key combination (press and hold down the keys simultaneously)</p> <p>Increases the contrast (darker setting).</p>
	<p>Minus/Plus/Enter key combination (press the keys simultaneously)</p> <p><i>For operational display</i></p> <p>Enables or disables the keypad lock (only SD02 display module).</p>

 
8.3.5 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Conf. backup disp.
- Simulation



Calling up and closing the context menu

The user is in the operational display.

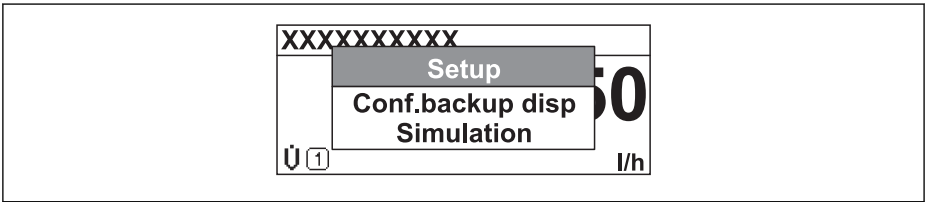

1. Press  for 2 s.
 - ↳ The context menu opens.



A0016326-EN

2. Press  +  simultaneously.
 - ↳ The context menu is closed and the operational display appears.

Calling up the menu via the context menu


1. Open the context menu.
2. Press  to navigate to the desired menu.
3. Press  to confirm the selection.
 - ↳ The selected menu opens.

8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

 For an explanation of the navigation view with symbols and operating elements
→  46

Example: Setting the number of displayed measured values to "2 values"

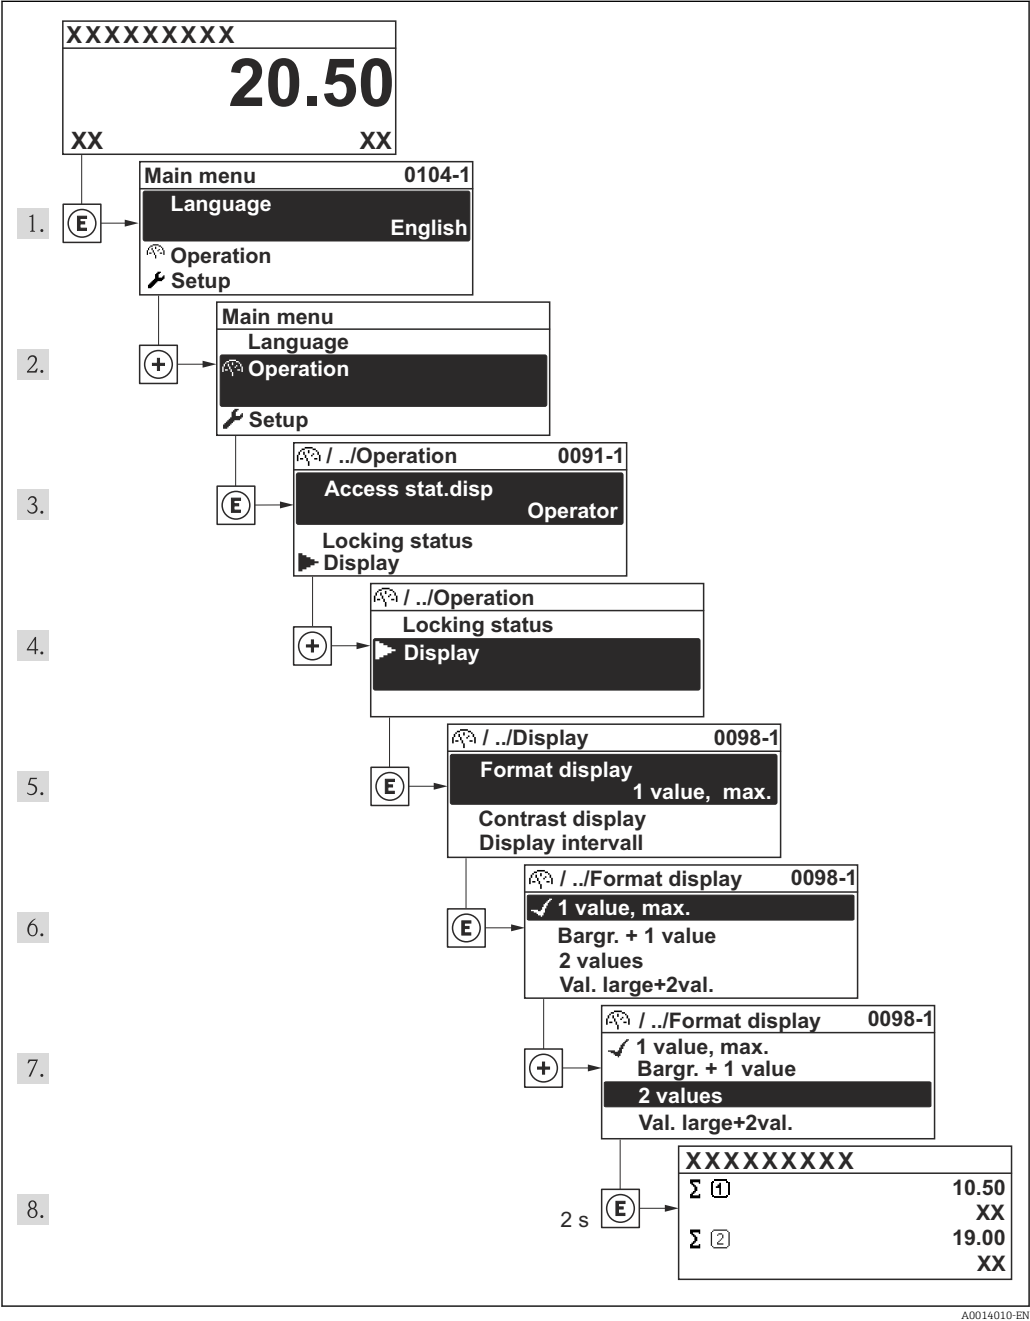


A0014010-EN

8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

Navigation path
"Expert" menu → Direct access

The direct access code consists of a 4-digit number and the channel number, which identifies the channel of a process variable: e.g. 0914-1. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

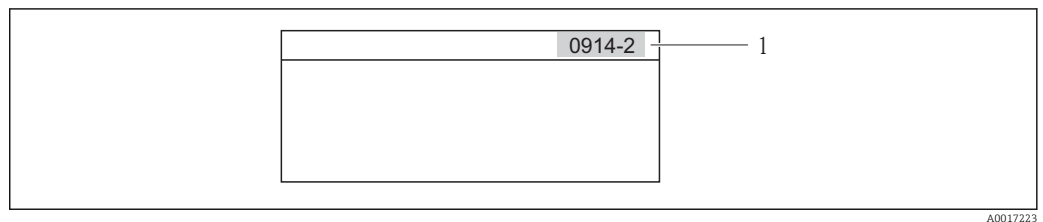

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered.
Example: Input of "914" instead of "0914"
- If no channel number is entered, channel 1 is jumped to automatically.
Example: Input of "0914" → Parameter **Totalizer 1**
- If a different channel is jumped to: Enter the direct access code with the corresponding channel number.
Example: Input of "0914-2" → Parameter **Totalizer 2**



For the direct access codes of the individual parameters

8.3.8 Calling up help text


For some parameters, help texts exist, which the user can call up from the navigation view. These briefly describe the function of the parameter and thus support fast and reliable commissioning.


Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

1. Press  for 2 s.

↳ The help text for the selected parameter opens.

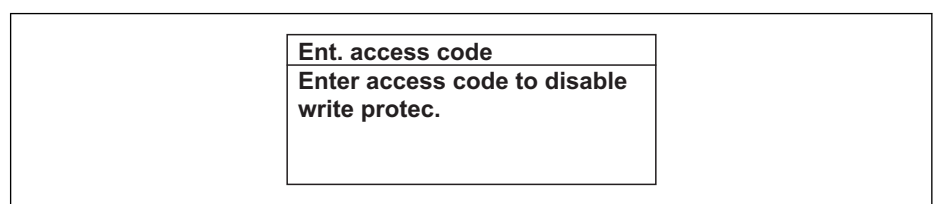

 14 Example: Help text for parameter "Enter access code"


2. Press  +  simultaneously.

↳ The help text is closed.

8.3.9 Changing the parameters

i For a description of the editing display - consisting of text editor and numeric editor - with symbols → 48, for a description of the operating elements → 49

Example: Changing the tag name in the "Tag description" parameter from 001-FT-101 to 001-FT-102

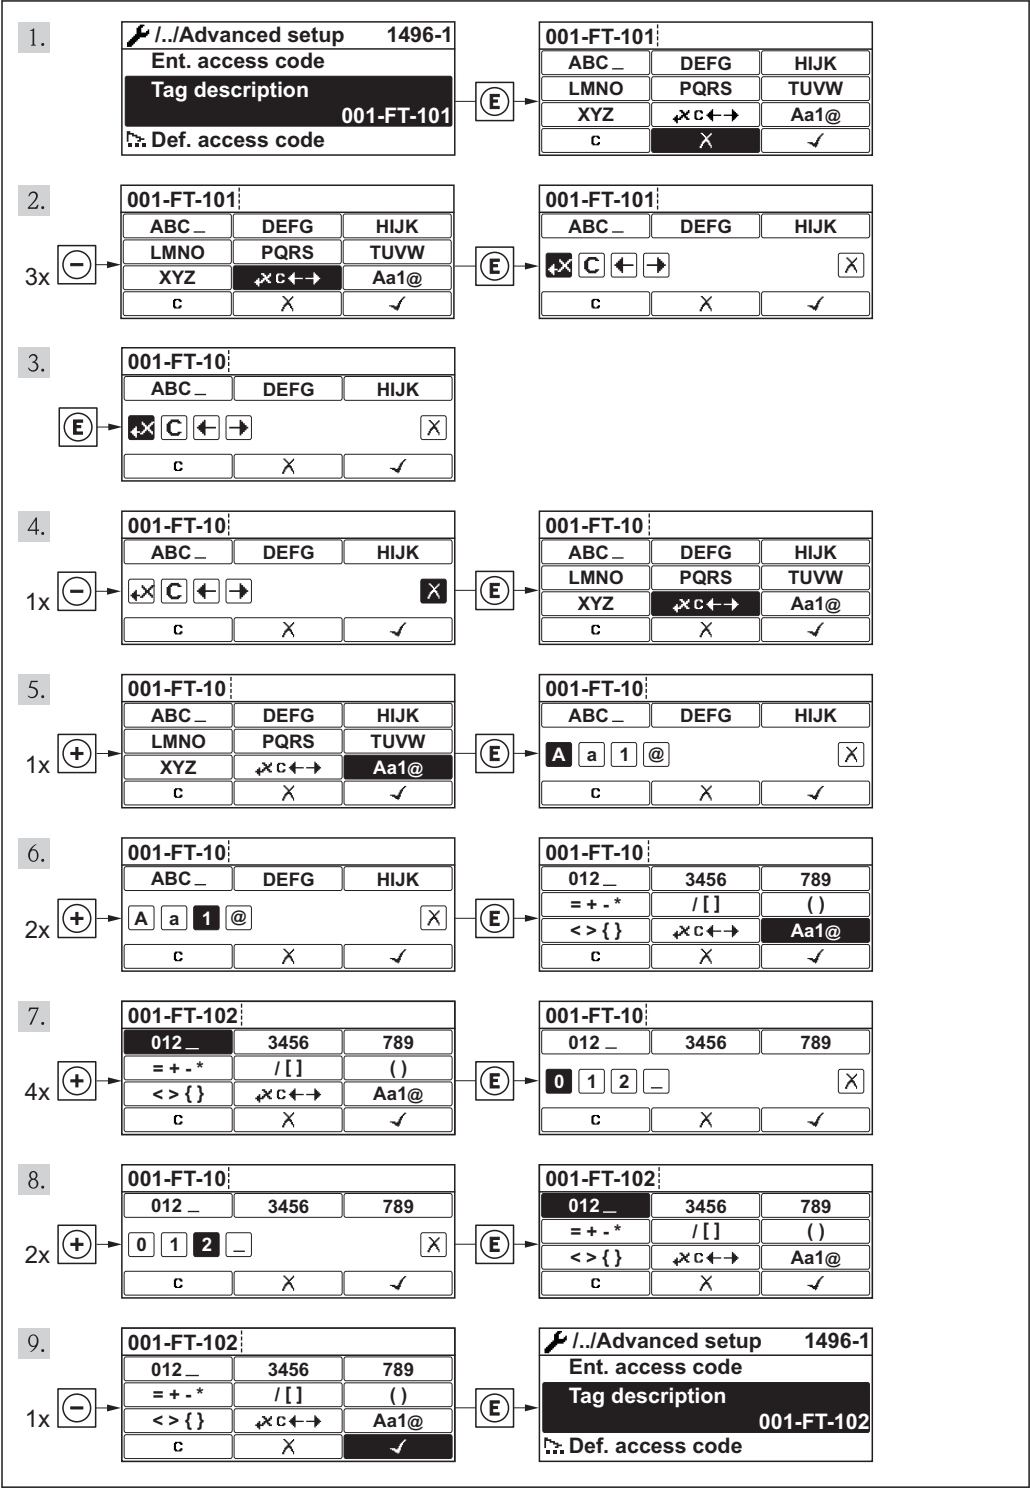

A0014020-EN

8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access.

Access authorization to parameters


User role	Read access		Write access	
	Without access code (from the factory)	With access code	Without access code (from the factory)	With access code
Operator	✓	✓	✓	-- 1)
Maintenance	✓	✓	✓	✓

- 1) Despite the defined access code, certain parameters can always be modified and thus are excepted from the write protection, as they do not affect the measurement. Refer to the "Write protection via access code" section



If an incorrect access code is entered, the user obtains the access rights of the "Operator" role.

 The user role with which the user is currently logged on is indicated by the **Access status display** parameter. Navigation path: Operation → Access status display

8.3.11 Disabling write protection via access code

If the -symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using the local display.

The locking of the write access via local operation can be disabled by entering the customer-defined access code via the respective access option.

1. After you press , the input prompt for the access code appears.
2. Enter the access code.
 - ↳ The -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

8.3.12 Enabling and disabling the keypad lock


 
 
The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

Local operation with mechanical push buttons (display module SD02)

 Display module SD02: order characteristic "Display; Operation", option C


 
 
The keypad lock is switched on and off in the same way:

Switching on the keypad lock

- ▶ The device is in the measured value display.
Press the  +  +  keys simultaneously.
↳ The message **Keylock on** appears on the display: The keypad lock is switched on.

 If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

Switching off the keypad lock

- ▶ The keypad lock is switched on.
Press the  +  +  keys simultaneously.
 - ↳ The message **Keylock off** appears on the display: The keypad lock is switched off.

Local operation with touch control (display module SD03)

 
Display module SD03: Order characteristic "Display; Operation", option **E**

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock

The keypad lock is switched on automatically:


- Each time the device is restarted.
- If the device has not been operated for longer than one minute in the measured value display.

1. The device is in the measured value display.
Press the  key for longer than 2 seconds.
 - ↳ A context menu appears.
2. In the context menu, select the **Keylock on** option.
 - ↳ The keypad lock is switched on.



If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

 Switching off the keypad lock

1. The keypad lock is switched on.
Press the  key for longer than 2 seconds.
 - ↳ A context menu appears.
2. In the context menu, select the **Keylock off** option.
 - ↳ The keypad lock is switched off.


8.4 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

8.4.1 Connecting the operating tool

Via FOUNDATION Fieldbus network

This communication interface is available in device versions with FOUNDATION Fieldbus.

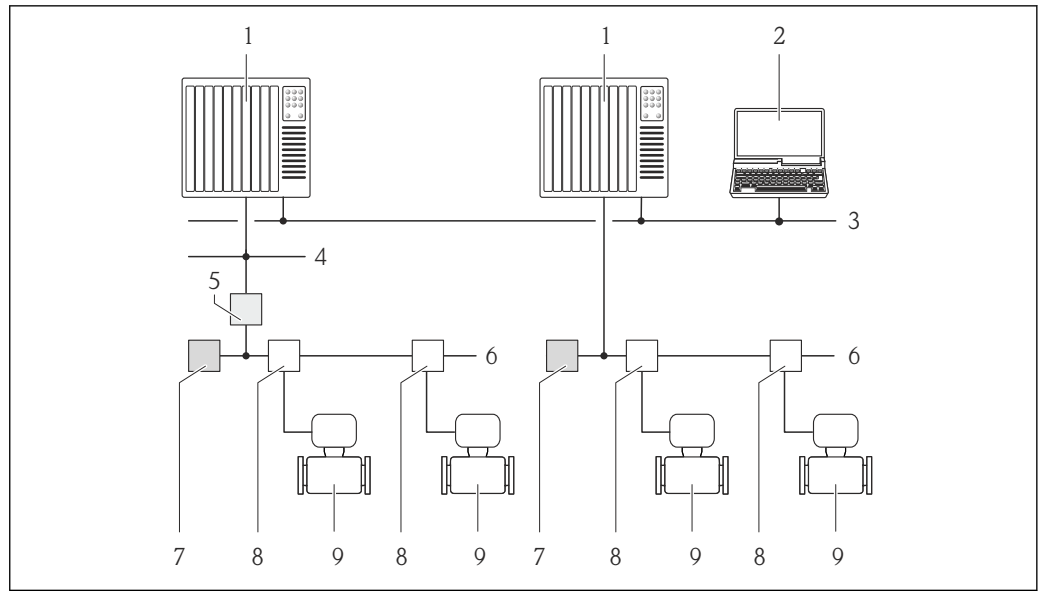


A0023460

15 Options for remote operation via FOUNDATION Fieldbus network

- 1 Automation system
- 2 Computer with FOUNDATION Fieldbus network card
- 3 Industry network
- 4 High Speed Ethernet FF-HSE network
- 5 Segment coupler FF-HSE/FF-H1
- 6 FOUNDATION Fieldbus FF-H1 network
- 7 Power supply FF-H1 network
- 8 T-box
- 9 Measuring device

Via service interface (CDI)

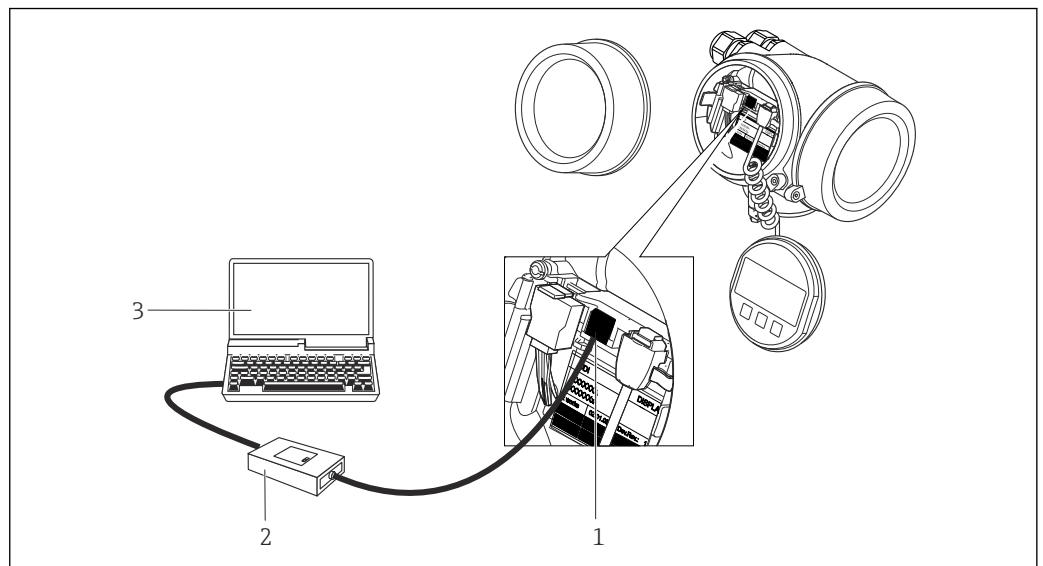

A0020545

- 1 Service interface (CDI = Endress+Hauser Common Data Interface) of the measuring device
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool with COM DTM "CDI Communication FXA291"

8.4.2 Field Xpert SFX350, SFX370


Function scope

Field Xpert SFX350 and Field Xpert SFX370 are mobile computers for commissioning and maintenance. They enable efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the **non-Ex area** (SFX350, SFX370) and the **Ex area** (SFX370).



For details, see Operating Instructions BA01202S

Source for device description files

See data →  60

8.4.3 FieldCare

Function scope

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook



For additional information about FieldCare, see Operating Instructions BA00027S and BA00059S

Source for device description files


See information →  60

Establishing a connection



For additional information, see Operating Instructions BA00027S and BA00059S

User interface

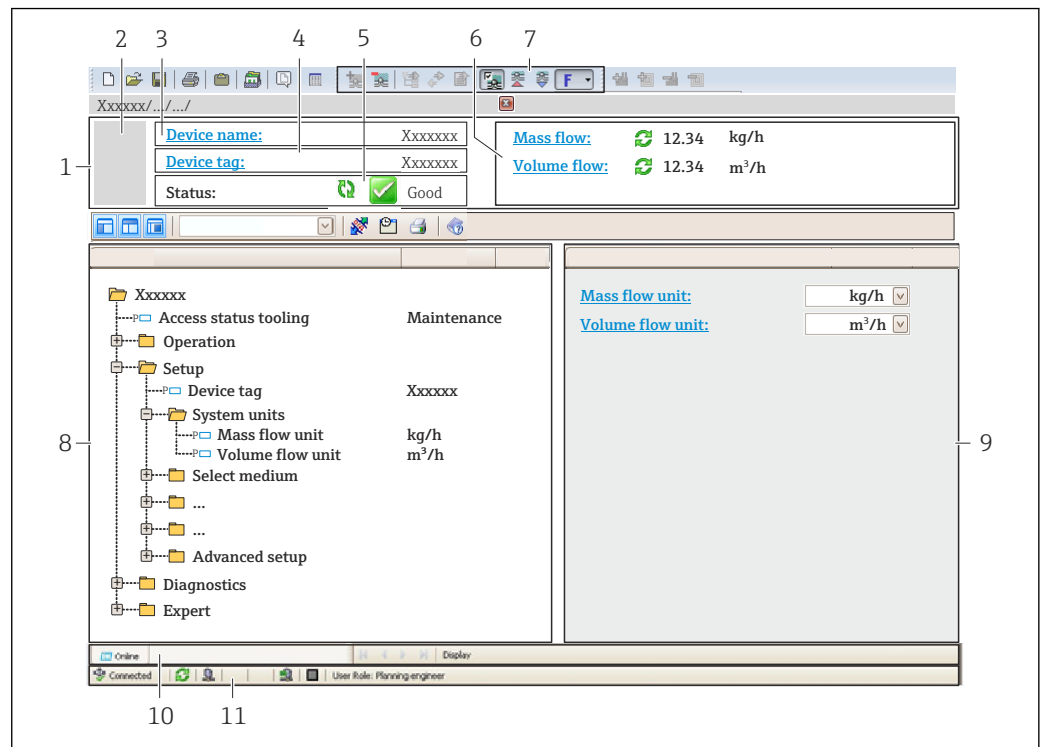

A0021051-EN

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Tag name
- 5 Status area with status signal
- 6 Display area for current measured values
- 7 Edit toolbar with additional functions such as save/restore, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

8.4.4 AMS Device Manager

Function scope

Program from Emerson Process Management for operating and configuring measuring devices via FOUNDATION Fieldbus H1 protocol.

Source for device description files

See data → 60

8.4.5 Field Communicator 475

Function scope

Industrial handheld terminal from Emerson Process Management for remote configuration and measured value display via FOUNDATION Fieldbus H1 protocol.

Source for device description files

See data → 60

9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

Firmware version	01.00.zz	<ul style="list-style-type: none"> On the title page of the Operating instructions On transmitter nameplate Firmware version parameter "Diagnostics" menu → Device information → Firmware version
Release date of firmware version	06.2015	---
Manufacturer ID	452B48 hex	Manufacturer ID parameter "Diagnostics" menu → Device information → Manufacturer ID
Device type code	0x1038	Device type parameter "Diagnostics" menu → Device information → Device type
Device revision	1	<ul style="list-style-type: none"> On transmitter nameplate → 13 Device revision parameter "Diagnostics" menu → Device information → Device revision
DD revision	Information and files at: <ul style="list-style-type: none"> www.endress.com www.fieldbus.org 	
CFF revision		



For an overview of the different firmware versions for the device → 167

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via FOUNDATION Fieldbus	Sources for obtaining device descriptions
<ul style="list-style-type: none"> Field Xpert SFX350 Field Xpert SFX370 	Use update function of handheld terminal
FieldCare	<ul style="list-style-type: none"> www.endress.com → Download Area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser)
AMS Device Manager (Emerson Process Management)	www.endress.com → Download Area
Field Communicator 475 (Emerson Process Management)	Use update function of handheld terminal

9.2 Integration into a FOUNDATION Fieldbus network

9.2.1 Block model

- Resource Block
- Transducer Blocks
 - Setup Transducer Block
 - Advanced Setup Transducer Block
 - Display Transducer Block
 - HistoROM Transducer Block
 - Diagnostic Transducer Block
 - Expert Configuration Transducer Block
 - Expert Information Transducer Block
 - Total Inventory Counter Transducer Block
 - Service Sensor Transducer Block
 - Service Info Transducer Block
 - Heartbeat Technology Transducer Block
 - Heartbeat Results 1 Transducer Block
 - Heartbeat Results 2 Transducer Block
 - Heartbeat Results 3 Transducer Block
 - Heartbeat Results 4 Transducer Block
- Function blocks
 - Analog Input Block
 - Discrete Input Block
 - PID Block
 - Multiple Analog Output Block
 - Multiple Digital Output Block
 - Integrator Block



Technical values for the individual blocks (Verweisziel existiert nicht, aber @y.link.required=true)

9.2.2 Assignment of the measured values in the function blocks

The input value of a function block is defined via the CHANNEL parameter.

Analog Input (AI)

Channel	Measured variable
7	Temperature
9	Volume flow
11	Mass flow
13	Corrected volume flow
16	Totalizer 1
17	Totalizer 2
18	Totalizer 3
37	Flow velocity
38	Energy flow
45	Calculated saturated steam pressure
46	Total mass flow
47	Condensate mass flow
48	Steam quality

Channel	Measured variable
49	Heat flow difference
50	Reynolds number

Digital Input (DI)

Channel	Signal
101	Status switch output
103	Low flow cut off
105	Status verification

Multiple Analog Output Block (MAO)

Structure

Channel_0							
Value 1	Value 2	Value 3	Value 4	Value 5	Value 6	Value 7	Value 8

Channel	Measured variable	
121	Channel_0	
	Value 1:	External compensation variables: pressure, gage pressure, density, temperature or second temperature ¹⁾ Not assigned
	Value 2:	
	Value 3:	
	Value 4:	
	Value 5:	
	Value 6:	
	Value 7:	
	Value 8:	

1) The compensation variables must be transmitted to the device in the SI basic unit.



The measured variable is accessed via "Setup" menu → Advanced setup → External compensation.

Multiple Digital Output Block (MDO)

Structure

Channel_DO							
Value 1	Value 2	Value 3	Value 4	Value 5	Value 6	Value 7	Value 8





Channel	Measured variable	
122	Channel_DO	
	Value 1:	Reset totalizer 1
	Value 2:	Reset totalizer 2
	Value 3:	Reset totalizer 3
	Value 4:	Flow override

Channel	Measured variable	
	Value 5:	Start heartbeat verification
	Value 6:	Status switch output
	Value 7:	Not assigned
	Value 8:	Not assigned

9.2.3 Index tables of Endress+Hauser parameters

9.2.4 Methods

Method	Block / accessibility via menu	Description
Set to "AUTO" mode	Block: – Accessibility via menu: Configure/Setup → Expert → Block Mode → Resource & Transducer Blocks	This method sets the Resource Block and all the Transducer Blocks to the AUTO (Automatic) mode.
Set to "OOS" mode	Block: – Accessibility via menu: Configure/Setup → Expert → Block Mode → Resource & Transducer Blocks	This method sets the Resource Block and all the Transducer Blocks to the OOS (Out of service) mode.
Restart	Block: Resource Block Accessibility via menu: Actions → Methods → Calibrate → Restart	This method is used for selecting the setting for the restart parameter in the Resource Block. This resets device parameters to a specific value. The following options are supported: <ul style="list-style-type: none"> ■ Uninitialized ■ Run ■ Resource ■ Defaults ■ Processor ■ To factory defaults ■ To delivery settings ■ ENP restart ■ To transducer defaults ■ Factory default blocks
ENP parameter	Block: Resource Block Accessibility via menu: Actions → Methods → Calibrate → ENP parameter	This method is used to display and configure the parameters of the electronic nameplate (ENP).
Overview diagnostics - Remedy information	Block: Diagnostic Transducer Block Accessibility via link: Namur symbol	This method is used to display the diagnostic event with the highest priority that is currently active and the corresponding remedial measures.
Actual diagnostics - Remedy information	Block: Diagnostic Transducer Block Accessibility via menu: Configure/Setup → Diagnostics → Actual diagnostics Alternatively accessible via menu: Device/Diagnostics → Diagnostics	This method is used to display remedial measures for the diagnostic event with the highest priority that is currently active.  This method is only available if an appropriate diagnostic event has occurred.
Previous diagnostics - Remedy information	Block: Diagnostic Transducer Block Accessibility via menu: Configure/Setup → Diagnostics → Previous diagnostics Alternatively accessible via menu: Device/Diagnostics → Diagnostics	This method is used to display remedial measures for the previous diagnostic event.  This method is only available if an appropriate diagnostic event has occurred.
Diagnostics 1 - Remedy information	Block: Diagnostic Transducer Block Accessibility via menu: Configure/Setup → Diagnostics → Diagnostic list → Diagnostics 1 Alternatively accessible via menu: <ul style="list-style-type: none"> ■ Device/Diagnostics → Diagnostics list ■ Instrument health status → Diagnostic list 	This method is used to display remedial measures for the diagnostic event with the highest priority that is currently active.  This method is only available if an appropriate diagnostic event has occurred.

Method	Block / accessibility via menu	Description
Diagnostics 2 – Remedy information	Block: Diagnostic Transducer Block Accessibility via menu: Configure/Setup → Diagnostics → Diagnostic list → Diagnostics 2 Alternatively accessible via menu: <ul style="list-style-type: none"> ■ Device/Diagnostics → Diagnostics list ■ Instrument health status → Diagnostic list 	This method is used to display remedial measures for an additional active diagnostic event.  This method is only available if an appropriate diagnostic event has occurred.
Diagnostics 3 – Remedy information	Block: Diagnostic Transducer Block Accessibility via menu: Configure/Setup → Diagnostics → Diagnostic list → Diagnostics 3 Alternatively accessible via menu: <ul style="list-style-type: none"> ■ Device/Diagnostics → Diagnostics list ■ Instrument health status → Diagnostic list 	This method is used to display remedial measures for an additional active diagnostic event.  This method is only available if an appropriate diagnostic event is present.
Diagnostics 4 – Remedy information	Block: Diagnostic Transducer Block Accessibility via menu: Configure/Setup → Diagnostics → Diagnostic list → Diagnostics 4 Alternatively accessible via menu: <ul style="list-style-type: none"> ■ Device/Diagnostics → Diagnostics list ■ Instrument health status → Diagnostic list 	This method is used to display remedial measures for an additional active diagnostic event.  This method is only available if an appropriate diagnostic event has occurred.
Diagnostics 5 – Remedy information	Block: Diagnostic Transducer Block Accessibility via menu: Configure/Setup → Diagnostics → Diagnostic list → Diagnostics 5 Alternatively accessible via menu: <ul style="list-style-type: none"> ■ Device/Diagnostics → Diagnostics list ■ Instrument health status → Diagnostic list 	This method is used to display remedial measures for an additional active diagnostic event.  This method is only available if an appropriate diagnostic event has occurred.
Diagnostic list	Block: Diagnostic Transducer Block Accessibility via menu: Configure/Setup → Diagnostics → Alarm indication (polling) Alternatively accessible via menu: <ul style="list-style-type: none"> ■ Device/Diagnostics → Alarm indication (Polling) ■ Instrument health status → Diagnostic list 	This method is used to display up to five pending diagnostic events and the related remedial measures.

10 Commissioning

10.1 Function check

Before commissioning the measuring device:

- ▶ Make sure that the post-installation and post-connection checks have been performed.
- "Post-installation check" checklist → 28
- "Post-connection check" checklist → 42


10.2 Switching on the measuring device

- ▶ After a successful function check, switch on the measuring device.
 - ↳ After a successful startup, the local display switches automatically from the startup display to the operational display.

If nothing appears on the local display or a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting" → 129.

10.3 Setting the operating language

Factory setting: English or ordered local language

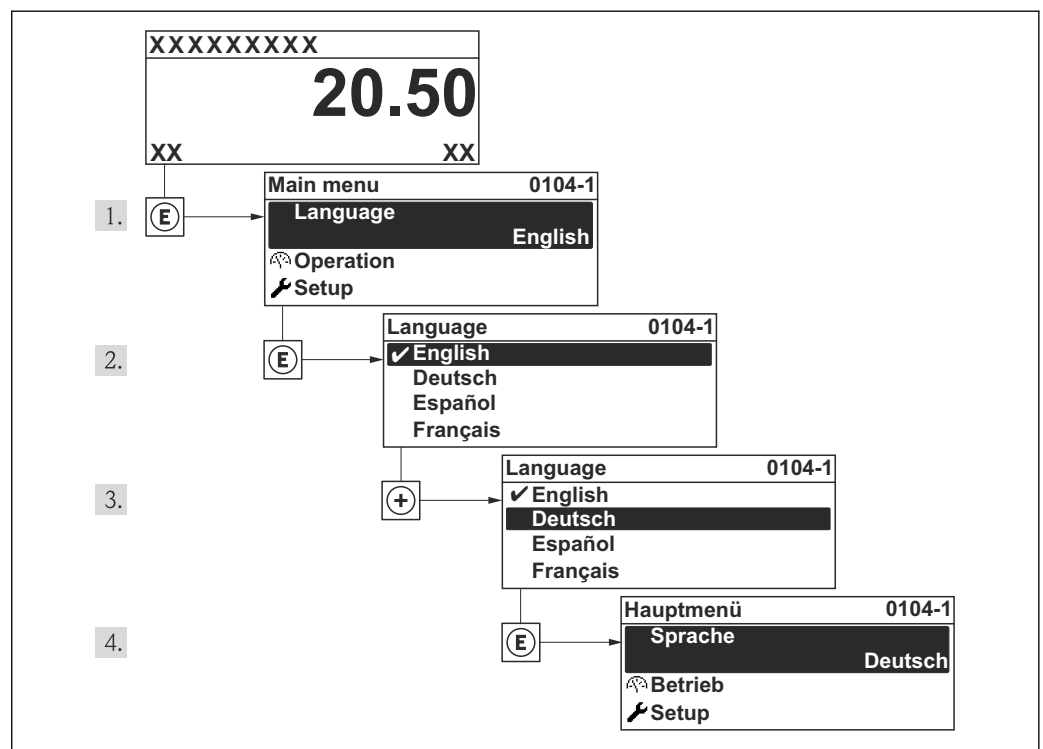


16 Taking the example of the local display

A0013996

10.4 Configuring the measuring device

- The **Setup** menu with its guided wizards contains all the parameters needed for standard operation.
- Navigation to the **Setup** menu

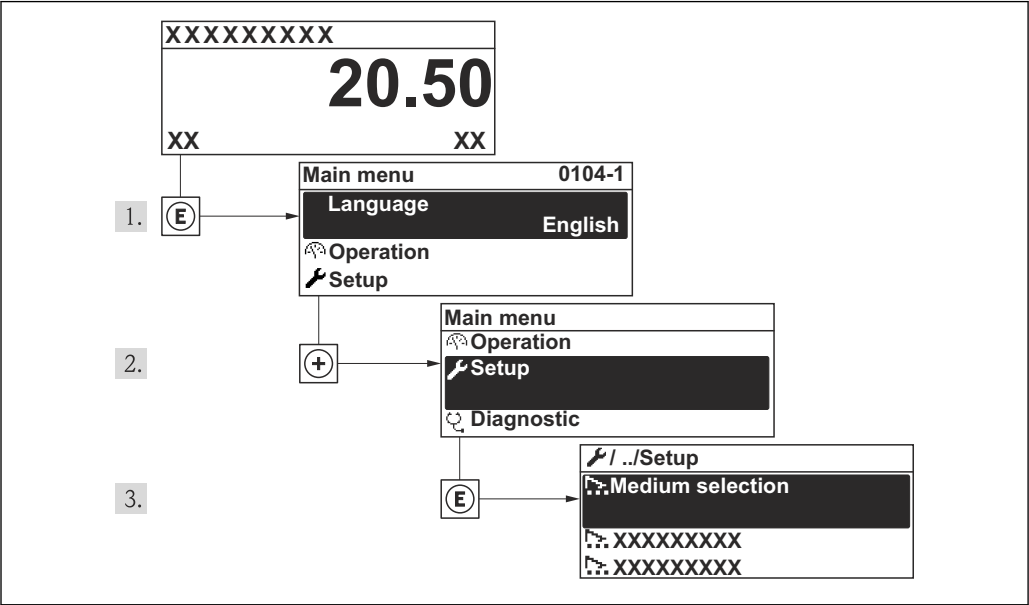

17 Taking the example of the local display


A0014007-EN

Overview of the wizards in the "Setup" menu


Setup		
Device tag	→	67
▶ System units	→	67
▶ Medium selection	→	71
▶ Analog inputs	→	73
▶ Display	→	73
▶ Low flow cut off	→	75
▶ Advanced setup	→	77

10.4.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

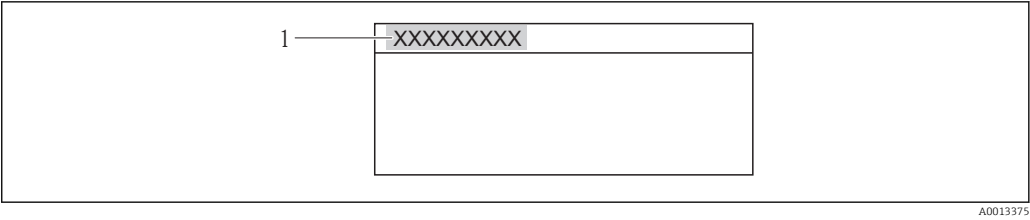

A0013375

 18 Header of the operational display with tag name

1 Device tag

-  The number of characters displayed depends on the characters used.
- Enter the tag name in the "FieldCare" operating tool →  59

Navigation

"Setup" menu → Device tag

Parameter overview with brief description


Parameter	Description	User entry	Factory setting
Device tag	Enter the name for the measuring point.	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)	Prowirl 200

10.4.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

Navigation

"Setup" menu → System units

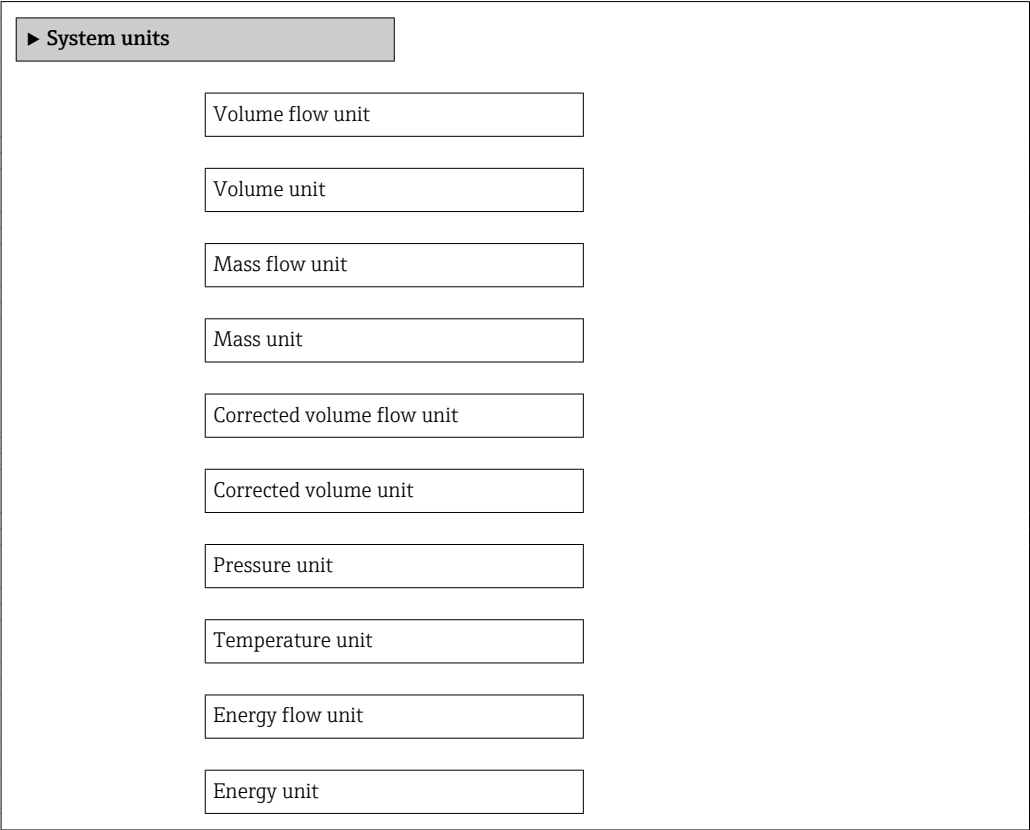

Calorific value unit
Calorific value unit
Velocity unit
Density unit
Dynamic viscosity unit
Length unit

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection	Factory setting
Volume flow unit	–	Select volume flow unit. <i>Effect</i> The selected unit applies for: <ul style="list-style-type: none"> Output Low flow cut off Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> m³/h ft³/min
Volume unit	–	Select volume unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> m³ ft³
Mass flow unit	–	Select mass flow unit. <i>Effect</i> The selected unit applies for: <ul style="list-style-type: none"> Output Low flow cut off Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg/h lb/min
Mass unit	–	Select mass unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg lb
Corrected volume flow unit	–	Select corrected volume flow unit. <i>Effect</i> The selected unit applies for: Corrected volume flow	Unit choose list	Country-specific: <ul style="list-style-type: none"> Nm³/h Sft³/h
Corrected volume unit	–	Select corrected volume unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> Nm³ Sft³
Pressure unit	For the following order code: "Sensor version", option "Mass flow"	Select process pressure unit. <i>Effect</i> The unit is taken from the: <ul style="list-style-type: none"> Calculated saturated steam pressure Atmospheric pressure Maximum value Fixed process pressure Pressure Reference pressure 	Unit choose list	Country-specific: <ul style="list-style-type: none"> bar psi

Parameter	Prerequisite	Description	Selection	Factory setting
Temperature unit	–	Select temperature unit. <i>Effect</i> The selected unit applies for: <ul style="list-style-type: none"> Temperature Maximum value Minimum value Average value Maximum value Minimum value Maximum value Minimum value 2nd temperature delta heat Fixed temperature Reference combustion temperature Reference temperature Saturation temperature 	Unit choose list	Country-specific: <ul style="list-style-type: none"> °C °F
Energy flow unit	For the following order code: "Sensor version", option "Mass flow"	Select energy flow unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Outputs Low flow cut off 	Unit choose list	Country-specific: <ul style="list-style-type: none"> kW Btu/h
Energy unit	For the following order code: "Sensor version", option "Mass flow"	Select energy unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> kWh Btu
Calorific value unit	The following conditions are met: <ul style="list-style-type: none"> Order code for "Sensor version", option "Mass flow" The Gross calorific value volume option or the Net calorific value volume option is selected in the Calorific value type parameter. 	Select calorific value unit. <i>Result</i> The selected unit applies for: Reference gross calorific value	Unit choose list	Country-specific: <ul style="list-style-type: none"> kJ/Nm³ Btu/Sft³
Calorific value unit (Mass)	The following conditions are met: <ul style="list-style-type: none"> Order code for "Sensor version", option "Mass flow" The Gross calorific value mass option or the Net calorific value mass option is selected in the Calorific value type parameter. 	Select calorific value unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> kJ/kg Btu/lb
Velocity unit	–	Select velocity unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Flow velocity Maximum value 	Unit choose list	Country-specific: <ul style="list-style-type: none"> m/s ft/s
Density unit	–	Select density unit. <i>Effect</i> The selected unit applies for: <ul style="list-style-type: none"> Output Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg/m³ lb/ft³

Parameter	Prerequisite	Description	Selection	Factory setting
Dynamic viscosity unit	–	<p>Select dynamic viscosity unit.</p> <p><i>Result</i></p> <p>The selected unit applies for:</p> <ul style="list-style-type: none"> ▪ Dynamic viscosity parameter (gases) ▪ Dynamic viscosity parameter (liquids) 	Unit choose list	Pa s
Length unit	–	<p>Select length unit for nominal diameter.</p> <p><i>Effect</i></p> <p>The selected unit applies for:</p> <ul style="list-style-type: none"> ▪ Inlet run ▪ Mating pipe diameter 	Unit choose list	<p>Country-specific:</p> <ul style="list-style-type: none"> ▪ mm ▪ in


10.4.3 Selecting and setting the medium

The **Medium selection** wizard guides you systematically through all the parameters that have to be configured for selecting and setting the medium.

Navigation

"Setup" menu → Medium selection

Structure of the wizard

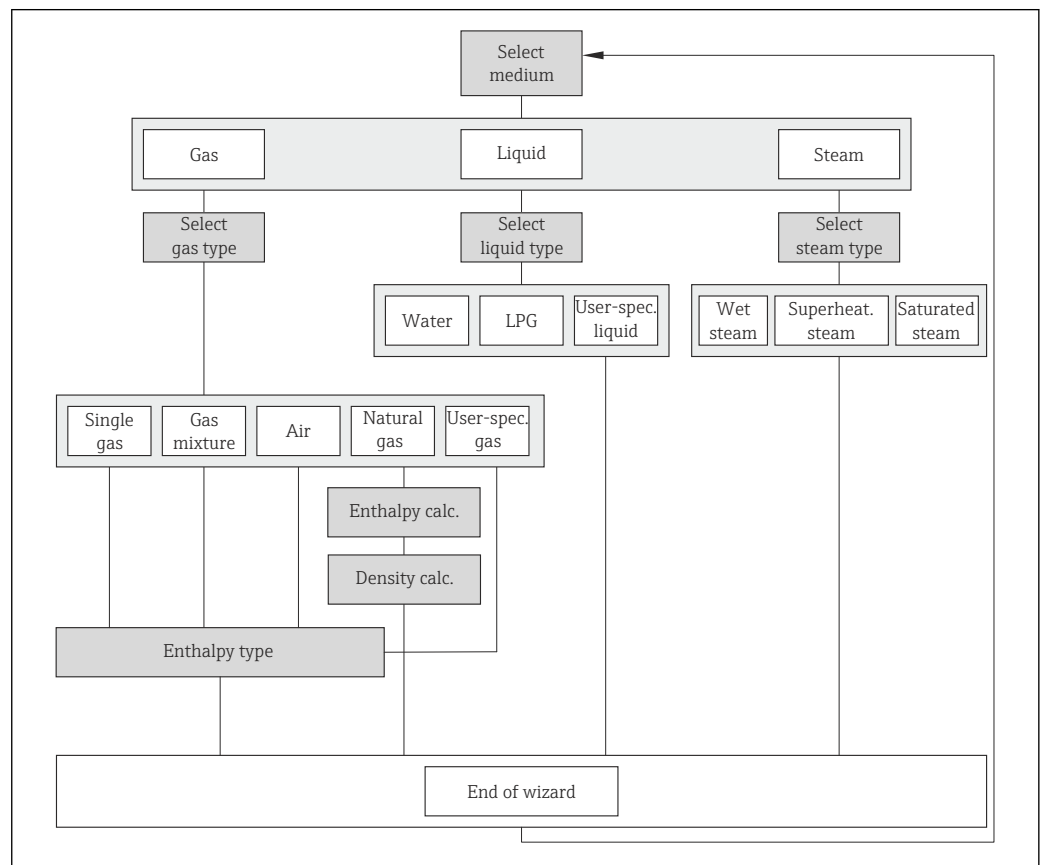

A0020776-EN

19 "Medium selection" wizard in the "Setup" menu

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection	Factory setting
Select medium	–	Select medium type.	<ul style="list-style-type: none"> ■ Gas ■ Liquid ■ Steam 	Steam
Select gas type	The following conditions are met: <ul style="list-style-type: none"> ■ Order code <ul style="list-style-type: none"> – "Sensor version", option "Mass flow" – "Application package", option "Air + Industrial gases" or option "Natural gas" ■ The Gas option is selected in the Select medium parameter. 	Select measured gas type.	<ul style="list-style-type: none"> ■ Single gas ■ Gas mixture ■ Air ■ Natural gas ■ User-specific gas 	User-specific gas

Parameter	Prerequisite	Description	Selection	Factory setting
Select liquid type	The following conditions are met: <ul style="list-style-type: none"> Order code for "Sensor version", option "Mass flow" The Liquid option is selected in the Select medium parameter. 	Select measured liquid type.	<ul style="list-style-type: none"> Water LPG ((liquefied petroleum gas)) User-specific liquid 	Water
Select steam type	The following conditions are met: <ul style="list-style-type: none"> Order code for "Sensor version", option "Mass flow (integrated temperature measurement)" In the Select medium parameter, the Steam option is selected. 	Select measured steam type.	<ul style="list-style-type: none"> Wet steam Superheated steam Saturated steam 	Saturated steam
Enthalpy calculation	The following conditions are met: <ul style="list-style-type: none"> Order code <ul style="list-style-type: none"> "Sensor version", option "Mass flow (integrated temperature measurement)" "Application package", option "Natural gas" In the Select medium parameter, the Gas option is selected and in the Select gas type parameter, the Natural gas option is selected. 	Select the norm the enthalpy calculation is based on.	<ul style="list-style-type: none"> AGA5 ISO 6976 	AGA5
Density calculation	The following conditions are met: <ul style="list-style-type: none"> In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Natural gas option is selected. 	Select the norm the density calculation is based on.	<ul style="list-style-type: none"> AGA Nx19 ISO 12213- 2 ISO 12213- 3 	AGA Nx19
Enthalpy type	The following conditions are met: <ul style="list-style-type: none"> In the Select gas type parameter, the User-specific gas option is selected. Or <ul style="list-style-type: none"> In the Select liquid type parameter, the User-specific liquid option is selected. 	Define which kind of enthalpy is used.	<ul style="list-style-type: none"> Heat Calorific value 	Heat

10.4.4 Configuring the analog inputs

The **Analog inputs** submenu guides you systematically to the individual **Analog input 1 to 4** submenu. From here you get to the parameters of the individual analog input.

Navigation

"Setup" menu → Analog inputs

► Analog inputs

► Analog input 1 to 4

Block tag

Channel

Process Value Filter Time

Parameter overview with brief description

Parameter	Description	User entry / Selection	Factory setting
Block tag	Unique name of the measuring device.	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).	–
Channel	Select the process variable.	<ul style="list-style-type: none"> ■ Uninitialized ■ Mass flow ■ Flow velocity ■ Volume flow ■ Corrected volume flow ■ Temperature ■ Calculated saturated steam pressure[*] ■ Steam quality[*] ■ Total mass flow[*] ■ Condensate mass flow[*] ■ Energy flow[*] ■ Heat flow difference[*] ■ Reynolds number[*] ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 	Uninitialized
Process Value Filter Time	Enter the filter time specification for the filtering of the unconverted input value (PV).	Positive floating-point number	0 s

* Visibility depends on order options or device settings


10.4.5 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can be configured for configuring the local display.

Navigation

"Setup" menu → Display

Structure of the wizard

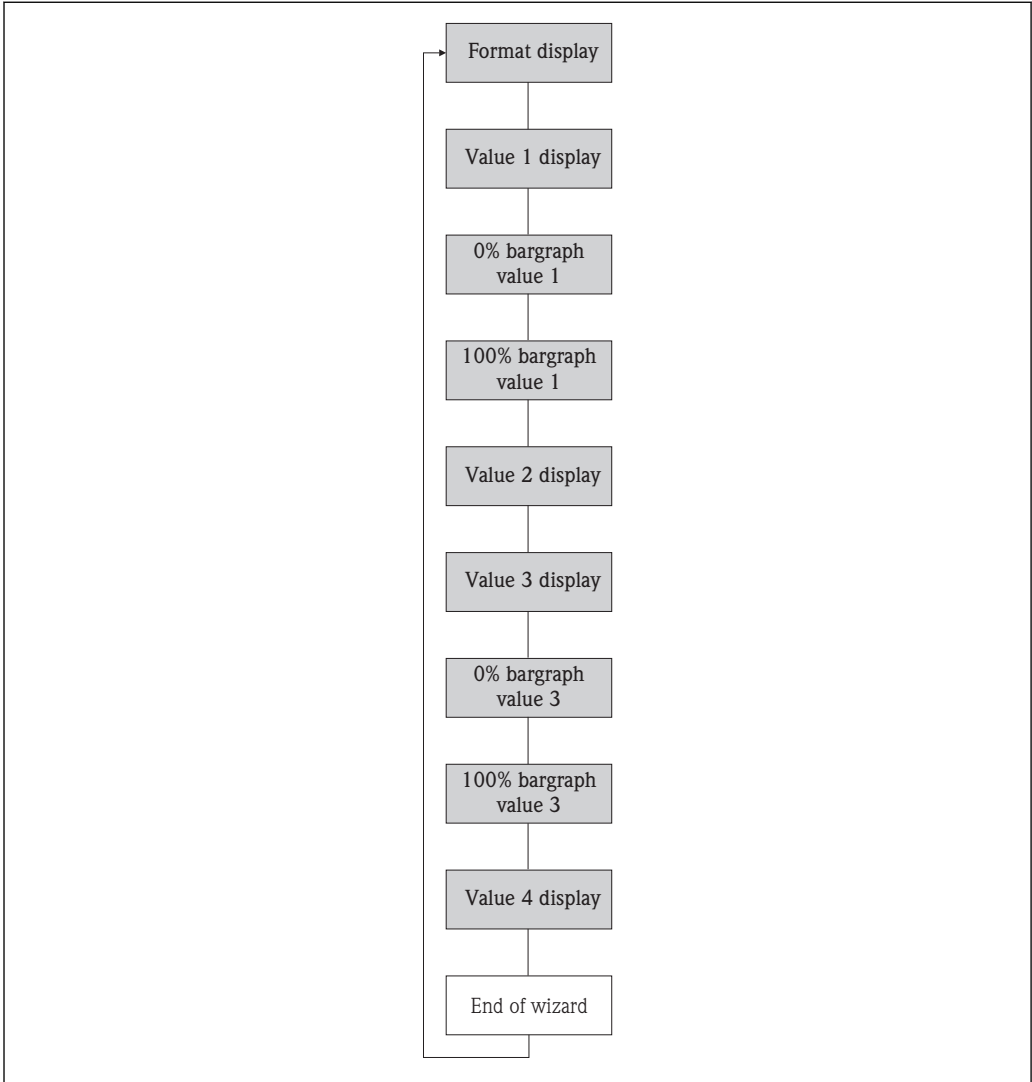

20 "Display" wizard in the "Setup" menu

A0013797-EN

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul style="list-style-type: none"> ■ 1 value, max. size ■ 1 bargraph + 1 value ■ 2 values ■ 1 value large + 2 values ■ 4 values 	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	<ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Flow velocity ■ Temperature ■ Calculated saturated steam pressure * ■ Steam quality * ■ Total mass flow * ■ Condensate mass flow * ■ Energy flow * ■ Heat flow difference * ■ Reynolds number * ■ Density * ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 m³/h ■ 0 ft³/h
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist, see Value 1 display parameter	None
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist, see Value 1 display parameter	None
0% bargraph value 3	A selection has been made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 m³/h ■ 0 ft³/h
100% bargraph value 3	An option has been selected in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist, see Value 1 display parameter	None

* Visibility depends on order options or device settings


10.4.6 Configuring the low flow cut off

The **Low flow cut off** wizard guides you systematically through all the parameters that have to be set for configuring the low flow cut off.

Navigation

"Setup" menu → Low flow cut off

Structure of the wizard

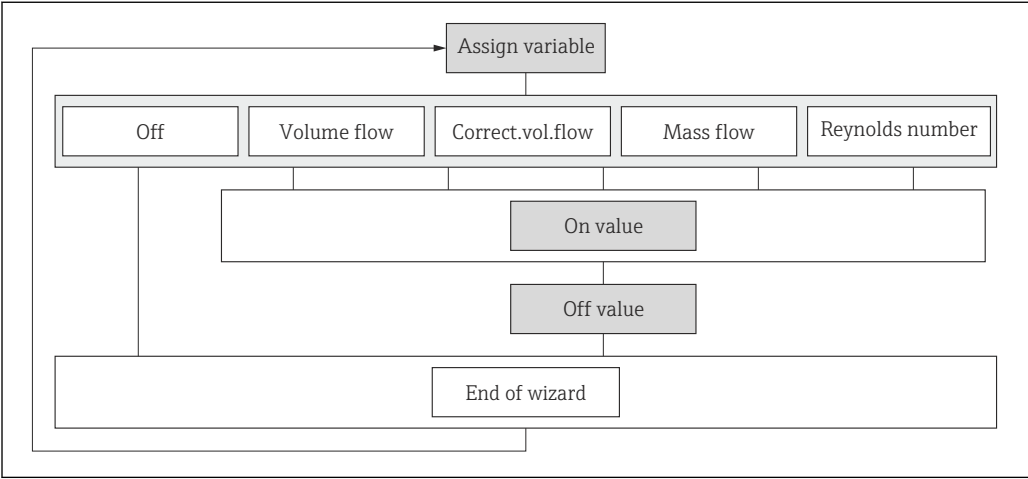

A0020775-EN

21 "Low flow cut off" wizard in the "Setup" menu

Parameter overview with brief description


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	–	Select process variable for low flow cut off.	<ul style="list-style-type: none">OffVolume flowCorrected volume flowMass flowReynolds number *	Off
On value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→ 76): <ul style="list-style-type: none">Volume flowCorrected volume flowMass flowReynolds number *	Enter on value for low flow cut off.	Positive floating-point number	0
Off value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→ 76): <ul style="list-style-type: none">Volume flowCorrected volume flowMass flowReynolds number *	Enter off value for low flow cut off.	0 to 100.0 %	50 %

* Visibility depends on order options or device settings

10.5 Advanced settings

The **Advanced setup** submenu together with its submenus contains parameters for specific settings.

Navigation to the "Advanced setup" submenu

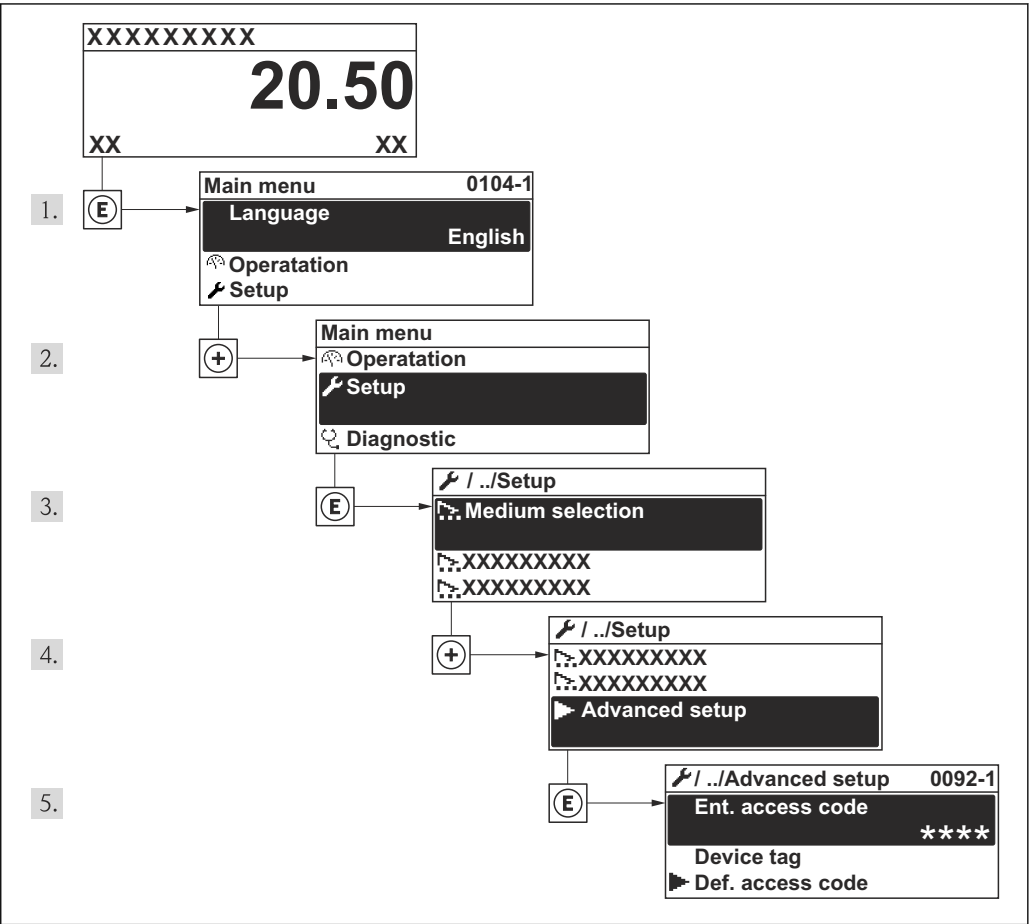

A0014009-EN

22 Taking the example of the local display

i The number of submenus can vary depending on the device version. Some submenus are not dealt with in the Operating Instructions. These submenus and the parameters they contain are explained in the Special Documentation for the device.

Navigation

"Setup" menu → Advanced setup

► Advanced setup		
Enter access code		
► Medium properties		→ 78
► External compensation		→ 92
► Sensor adjustment		→ 94

► Pulse/frequency/switch output	→ 99
► Totalizer 1 to 3	→ 107
► Display	→ 109
► Heartbeat setup	
► Configuration backup display	→ 111
► Administration	→ 164

10.5.1 Setting the medium properties

In the **Medium properties** submenu the reference values for the measuring application can be set.

Navigation

"Setup" menu → Advanced setup → Medium properties

► Medium properties

Enthalpy type

Calorific value type

Reference combustion temperature

Reference density

Reference gross calorific value

Reference pressure

Reference temperature

Reference Z-factor

Linear expansion coefficient

Relative density

Specific heat capacity

Calorific value

Z-factor

Dynamic viscosity

Dynamic viscosity
► Gas composition

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Enthalpy type	The following conditions are met: <ul style="list-style-type: none"> In the Select gas type parameter, the User-specific gas option is selected. Or In the Select liquid type parameter, the User-specific liquid option is selected. 	Define which kind of enthalpy is used.	<ul style="list-style-type: none"> Heat Calorific value 	Heat
Calorific value type	The Calorific value type parameter is visible.	Select calculation based on gross calorific value or net calorific value.	<ul style="list-style-type: none"> Gross calorific value volume Net calorific value volume Gross calorific value mass Net calorific value mass 	Gross calorific value mass
Reference combustion temperature	The Reference combustion temperature parameter is visible.	Enter reference combustion temperature to calculate the natural gas energy value. <i>Dependency</i> The unit is taken from the Temperature unit parameter	-200 to 450 °C	20 °C
Reference density	The following conditions are met: <ul style="list-style-type: none"> In the Select gas type parameter, the User-specific gas option is selected. Or In the Select liquid type parameter, the Water option or User-specific liquid option is selected. 	Enter fixed value for reference density. <i>Dependency</i> The unit is taken from the Density unit parameter	0.01 to 15 000 kg/m ³	1 000 kg/m ³
Reference gross calorific value	The following conditions are met: <ul style="list-style-type: none"> In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Natural gas option is selected. In the Density calculation parameter, the ISO 12213-3 option is selected. 	Enter reference gross calorific value of the natural gas. <i>Dependency</i> The unit is taken from the Calorific value unit parameter	Positive floating-point number	50 000 kJ/Nm ³

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Reference pressure	The following conditions are met: <ul style="list-style-type: none"> Order code for "Sensor version", option "Mass flow (integrated temperature measurement)" The Gas option is selected in the Select medium parameter. 	Enter reference pressure for the calculation of the reference density. <i>Dependency</i> The unit is taken from the Pressure unit parameter	0 to 250 bar	1.01325 bar
Reference temperature	The following conditions are met: <ul style="list-style-type: none"> The Gas option is selected in the Select medium parameter. Or The Liquid option is selected in the Select medium parameter. 	Enter reference temperature for calculating the reference density. <i>Dependency</i> The unit is taken from the Temperature unit parameter	-200 to 450 °C	20 °C
Reference Z-factor	In the Select gas type parameter, the User-specific gas option is selected.	Enter real gas constant Z for gas under reference conditions.	0.1 to 2	1
Linear expansion coefficient	The following conditions are met: <ul style="list-style-type: none"> The Liquid option is selected in the Select medium parameter. The User-specific liquid option is selected in the Select liquid type parameter. 	Enter linear, medium-specific expansion coefficient for calculating the reference density.	1.0^{-6} to 2.0^{-3}	2.06^{-4}
Relative density	The following conditions are met: <ul style="list-style-type: none"> In the Select medium parameter, the Gas option is selected. In the Select gas type parameter, the Natural gas option is selected. In the Density calculation parameter, the ISO 12213-3 option is selected. 	Enter a relative density of the natural gas.	0.55 to 0.9	0.664
Specific heat capacity	The following conditions are met: <ul style="list-style-type: none"> Selected medium: <ul style="list-style-type: none"> In the Select gas type parameter, the User-specific gas option is selected. Or In the Select liquid type parameter, the User-specific liquid option is selected. In the Enthalpy type parameter, the Heat option is selected. 	Enter the specific heat capacity of the medium. <i>Dependency</i> The unit is taken from the Specific heat capacity unit parameter	0 to 50 kJ/(kgK)	4.187 kJ/(kgK)

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Calorific value	<p>The following conditions are met:</p> <ul style="list-style-type: none"> ■ Selected medium: <ul style="list-style-type: none"> – In the Select gas type parameter, the User-specific gas option is selected. Or – In the Select liquid type parameter, the User-specific liquid option is selected. ■ In the Enthalpy type parameter, the Calorific value option is selected. ■ In the Calorific value type parameter, the Gross calorific value volume option or Gross calorific value mass option is selected. 	Enter gross calorific value to calculate the energy flow.	Positive floating-point number	50 000 kJ/kg
Z-factor	In the Select gas type parameter, the User-specific gas option is selected.	Enter real gas constant Z for gas under operation conditions.	0.1 to 2.0	1
Dynamic viscosity (Gases)	<p>The following conditions are met:</p> <ul style="list-style-type: none"> ■ Order code for "Sensor version", option "Volume flow" ■ The Gas option or the Steam option is selected in the Select medium parameter. Or ■ The User-specific gas option is selected in the Select gas type parameter. 	<p>Enter fixed value for dynamic viscosity for a gas/steam.</p> <p><i>Dependency</i> The unit is taken from the Dynamic viscosity unit parameter.</p>	Positive floating-point number	0.015 cP
Dynamic viscosity (Liquids)	<p>The following conditions are met:</p> <ul style="list-style-type: none"> ■ Order code for "Sensor version", option "Volume flow" ■ The Liquid option is selected in the Select medium parameter. Or ■ The User-specific liquid option is selected in the Select liquid type parameter. 	<p>Enter fixed value for dynamic viscosity for a liquid.</p> <p><i>Dependency</i> The unit is taken from the Dynamic viscosity unit parameter.</p>	Positive floating-point number	1 cP

Configuring the gas composition

In the **Gas composition** submenu the gas composition for the measuring application can be set.

Navigation

"Setup" menu → Advanced setup → Medium properties → Gas composition

► Gas composition

Gas type

Gas mixture

Mol% Ar

Mol% C2H3Cl

Mol% C2H4

Mol% C2H6

Mol% C3H8

Mol% CH4

Mol% Cl2

Mol% CO

Mol% CO2

Mol% H2

Mol% H2O

Mol% H2S

Mol% HCl

Mol% He

Mol% i-C4H10

Mol% i-C5H12

Mol% Kr

Mol% N2

Mol% n-C10H22

Mol% n-C4H10

Mol% n-C5H12
Mol% n-C6H14
Mol% n-C7H16
Mol% n-C8H18
Mol% n-C9H20
Mol% Ne
Mol% NH3
Mol% O2
Mol% SO2
Mol% Xe
Mol% other gas
Relative humidity

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Gas type	<p>The following conditions are met:</p> <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Single gas option is selected. 	Select measured gas type.	<ul style="list-style-type: none"> ▪ Hydrogen H₂ ▪ Helium He ▪ Neon Ne ▪ Argon Ar ▪ Krypton Kr ▪ Xenon Xe ▪ Nitrogen N₂ ▪ Oxygen O₂ ▪ Chlorine Cl₂ ▪ Ammonia NH₃ ▪ Carbon monoxide CO ▪ Carbon dioxide CO₂ ▪ Sulfur dioxide SO₂ ▪ Hydrogen sulfide H₂S ▪ Hydrogen chloride HCl ▪ Methane CH₄ ▪ Ethane C₂H₆ ▪ Propane C₃H₈ ▪ Butane C₄H₁₀ ▪ Ethylene C₂H₄ ▪ Vinyl Chloride C₂H₃Cl 	Methane CH ₄
Gas mixture	<p>The following conditions are met:</p> <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Gas mixture option is selected. 	Select measured gas mixture.	<ul style="list-style-type: none"> ▪ Hydrogen H₂ ▪ Helium He ▪ Neon Ne ▪ Argon Ar ▪ Krypton Kr ▪ Xenon Xe ▪ Nitrogen N₂ ▪ Oxygen O₂ ▪ Chlorine Cl₂ ▪ Ammonia NH₃ ▪ Carbon monoxide CO ▪ Carbon dioxide CO₂ ▪ Sulfur dioxide SO₂ ▪ Hydrogen sulfide H₂S ▪ Hydrogen chloride HCl ▪ Methane CH₄ ▪ Ethane C₂H₆ ▪ Propane C₃H₈ ▪ Butane C₄H₁₀ ▪ Ethylene C₂H₄ ▪ Vinyl Chloride C₂H₃Cl ▪ Others 	Methane CH ₄

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Mol% Ar	<p>The following conditions are met: In the Select medium parameter, the Gas option is selected.</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Argon Ar option is selected. <p>Or</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the ISO 12213-2 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% C2H3Cl	<p>The following conditions are met:</p> <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Gas mixture option is selected. ▪ In the Gas mixture parameter, the Vinyl Chloride C2H3Cl option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% C2H4	<p>The following conditions are met:</p> <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Gas mixture option is selected. ▪ In the Gas mixture parameter, the Ethylene C2H4 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% C2H6	<p>The following conditions are met: In the Select medium parameter, the Gas option is selected.</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Ethane C2H6 option is selected. <p>Or</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the ISO 12213-2 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Mol% C3H8	<p>The following conditions are met: In the Select medium parameter, the Gas option is selected.</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Propane C3H8 option is selected. <p>Or</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the ISO 12213-2 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% CH4	<p>The following conditions are met: In the Select medium parameter, the Gas option is selected.</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Methane CH4 option is selected. <p>Or</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Natural gas option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	100 %
Mol% Cl2	<p>The following conditions are met:</p> <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Gas mixture option is selected. ▪ In the Gas mixture parameter, the Chlorine Cl2 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% CO	<p>The following conditions are met: In the Select medium parameter, the Gas option is selected.</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Carbon monoxide CO option is selected. <p>Or</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the ISO 12213-2 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Mol% CO ₂	<p>The following conditions are met: In the Select medium parameter, the Gas option is selected.</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Carbon dioxide CO₂ option is selected. <p>Or</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Natural gas option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% H ₂	<p>The following conditions are met: In the Select medium parameter, the Gas option is selected.</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Hydrogen H₂ option is selected. <p>Or</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the AGA Nx19 option is not selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% H ₂ O	<p>The following conditions are met:</p> <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Natural gas option is selected. ▪ In the Density calculation parameter, the ISO 12213-2 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% H ₂ S	<p>The following conditions are met: In the Select medium parameter, the Gas option is selected.</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Hydrogen sulfide H₂S option is selected. <p>Or</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the ISO 12213-2 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Mol% HCl	The following conditions are met: <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Gas mixture option is selected. ▪ In the Gas mixture parameter, the Hydrogen chloride HCl option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% He	The following conditions are met: In the Select medium parameter, the Gas option is selected. – In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Helium He option is selected. Or – In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the ISO 12213-2 option is selected.	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% i-C ₄ H ₁₀	The following conditions are met: <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Natural gas option is selected. ▪ In the Density calculation parameter, the ISO 12213-2 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% i-C ₅ H ₁₂	The following conditions are met: <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Natural gas option is selected. ▪ In the Density calculation parameter, the ISO 12213-2 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% Kr	The following conditions are met: <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Gas mixture option is selected. ▪ In the Gas mixture parameter, the Krypton Kr option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Mol% N2	<p>The following conditions are met: In the Select medium parameter, the Gas option is selected.</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Nitrogen N2 option is selected. <p>Or</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the AGA Nx19 option or the ISO 12213- 2 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% n-C10H22	<p>The following conditions are met:</p> <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Natural gas option is selected. ▪ In the Density calculation parameter, the ISO 12213- 2 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% n-C4H10	<p>The following conditions are met:</p> <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. – In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Butane C4H10 option is selected. <p>Or</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the ISO 12213- 2 option is selected. <ul style="list-style-type: none"> ▪ Or In the Select medium parameter, the Liquid option is selected and in the Select liquid type parameter, the LPG option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Mol% n-C5H12	The following conditions are met: <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Natural gas option is selected. ▪ In the Density calculation parameter, the ISO 12213-2 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% n-C6H14	The following conditions are met: <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Natural gas option is selected. ▪ In the Density calculation parameter, the ISO 12213-2 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% n-C7H16	The following conditions are met: <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Natural gas option is selected. ▪ In the Density calculation parameter, the ISO 12213-2 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% n-C8H18	The following conditions are met: <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Natural gas option is selected. ▪ In the Density calculation parameter, the ISO 12213-2 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% n-C9H20	The following conditions are met: <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Natural gas option is selected. ▪ In the Density calculation parameter, the ISO 12213-2 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Mol% Ne	<p>The following conditions are met:</p> <ul style="list-style-type: none"> ■ In the Select medium parameter, the Gas option is selected. ■ In the Select gas type parameter, the Gas mixture option is selected. ■ In the Gas mixture parameter, the Neon Ne option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% NH ₃	<p>The following conditions are met:</p> <ul style="list-style-type: none"> ■ In the Select medium parameter, the Gas option is selected. ■ In the Select gas type parameter, the Gas mixture option is selected. ■ In the Gas mixture parameter, the Ammonia NH₃ option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% O ₂	<p>The following conditions are met:</p> <p>In the Select medium parameter, the Gas option is selected.</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Gas mixture option is selected and in the Gas mixture parameter, the Oxygen O₂ option is selected. <p>Or</p> <ul style="list-style-type: none"> – In the Select gas type parameter, the Natural gas option is selected and in the Density calculation parameter, the ISO 12213-2 option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% SO ₂	<p>The following conditions are met:</p> <ul style="list-style-type: none"> ■ In the Select medium parameter, the Gas option is selected. ■ In the Select gas type parameter, the Gas mixture option is selected. ■ In the Gas mixture parameter, the Sulfur dioxide SO₂ option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Mol% Xe	<p>The following conditions are met:</p> <ul style="list-style-type: none"> ■ In the Select medium parameter, the Gas option is selected. ■ In the Select gas type parameter, the Gas mixture option is selected. ■ In the Gas mixture parameter, the Xenon Xe option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Mol% other gas	The following conditions are met: <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Gas mixture option is selected. ▪ In the Gas mixture parameter, the Others option is selected. 	Enter amount of substance for the gas mixture.	0 to 100 %	0 %
Relative humidity	The following conditions are met: <ul style="list-style-type: none"> ▪ In the Select medium parameter, the Gas option is selected. ▪ In the Select gas type parameter, the Air option is selected. 	Enter humidity content of air in %.	0 to 100 %	0 %

10.5.2 Performing external compensation

The **External compensation** submenu contains parameters which can be used to enter external or fixed values. These values are used for internal calculations.

Navigation

"Setup" menu → Advanced setup → External compensation

► External compensation

External value

Atmospheric pressure

Delta heat calculation

Fixed density

Fixed temperature


 
2nd temperature delta heat






Fixed process pressure

Steam quality

Steam quality value

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
External value	For the following order code: "Sensor version", option "Mass flow"	Assign variable from external device to process variable.  For detailed information on the calculation of the measured variables with steam:  For detailed information on setting the parameter in steam applications, see the Special Documentation for the Wet Steam Detection and Wet Steam Measurement →  205 application package.	<ul style="list-style-type: none"> ■ Off ■ Pressure ■ Relative pressure ■ Density ■ Temperature ■ 2nd temperature delta heat 	Off
Atmospheric pressure	In the External value parameter, the Relative pressure option is selected.	Enter atmospheric pressure value to be used for pressure correction. <i>Dependency</i> The unit is taken from the Pressure unit parameter	0 to 250 bar	1.01325 bar
Delta heat calculation	The Delta heat calculation parameter is visible.	Calculates the transferred heat of a heat exchanger (= delta heat).	<ul style="list-style-type: none"> ■ Off ■ Device on cold side ■ Device on warm side 	Device on warm side
Fixed density	For the following order code: "Sensor version", option "Volume flow"	Enter fixed value for medium density. <i>Dependency</i> The unit is taken from the Density unit parameter.	0.01 to 15 000 kg/m ³	1 000 kg/m ³
Fixed temperature	–	Enter a fixed value for process temperature. <i>Dependency</i> The unit is taken from the Temperature unit parameter	–200 to 450 °C	20 °C
2nd temperature delta heat	The 2nd temperature delta heat parameter is visible.	Enter 2nd temperature value to calculate the delta heat. <i>Dependency</i> The unit is taken from the Temperature unit parameter	–200 to 450 °C	20 °C

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Fixed process pressure	<p>The following conditions are met:</p> <ul style="list-style-type: none"> Order code for "Sensor version", option "Mass flow (integrated temperature measurement)" In the External value parameter (→ 93), the Pressure option is not selected. 	<p>Enter fixed value for process pressure.</p> <p><i>Dependency</i> The unit is taken from the Pressure unit parameter</p> <p> For detailed information on the calculation of the measured variables with steam:</p> <p> For detailed information on setting the parameter in steam applications, see the Special Documentation for the Wet Steam Detection and Wet Steam Measurement → 205 application package.</p>	0 to 250 bar abs.	0 bar abs.
Steam quality	<p>The following conditions are met:</p> <ul style="list-style-type: none"> Order code for "Application package": <ul style="list-style-type: none"> Option ES "Wet steam detection" Option EU "Wet steam measurement" In the Select medium parameter, the Steam option is selected. <p> The software options currently enabled are displayed in the Software option overview parameter.</p>	<p>Select compensation mode for steam quality.</p> <p> For detailed information on setting the parameter in steam applications, see the Special Documentation for the Wet Steam Detection and Wet Steam Measurement → 205 application package.</p>	<ul style="list-style-type: none"> Fixed value Calculated value 	Fixed value
Steam quality value	<p>The following conditions are met:</p> <ul style="list-style-type: none"> In the Select medium parameter, the Steam option is selected. In the Steam quality parameter, the Fixed value option is selected. 	<p>Enter fixed value for steam quality.</p> <p> For detailed information on setting the parameter in steam applications, see the Special Documentation for the Wet Steam Detection and Wet Steam Measurement → 205 application package.</p>	0 to 100 %	100 %

10.5.3 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation


"Setup" menu → Advanced setup → Sensor adjustment

► Sensor adjustment

Inlet configuration

Inlet run
Mating pipe diameter
Installation factor

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Inlet configuration	The inlet run correction feature: <ul style="list-style-type: none"> Is a standard feature and can only be used in Prowirl F 200. Can be used for the following pressure ratings and nominal diameters: DN 15 to 150 (1 to 6") <ul style="list-style-type: none"> EN (DIN) ASME B16.5, Sch. 40/80 	Select inlet configuration.	<ul style="list-style-type: none"> Off Single elbow Double elbow Double elbow 3D Reduction 	Off
Inlet run	The inlet run correction feature: <ul style="list-style-type: none"> Is a standard feature and can only be used in Prowirl F 200. Can be used for the following pressure ratings and nominal diameters: DN 15 to 150 (1 to 6") <ul style="list-style-type: none"> EN (DIN) ASME B16.5, Sch. 40/80 	Define length of the straight inlet run. <i>Dependency</i> The unit is taken from the Length unit parameter	0 to 20 m	0 m
Mating pipe diameter	–	Enter diameter of mating pipe to enable diameter mismatch correction. Detailed information on diameter mismatch correction: →  190 <i>Dependency</i> The unit is taken from the Length unit parameter.	0 to 1 m (0 to 3 ft) Input value = 0: Diameter mismatch correction is disabled.	Country-specific: <ul style="list-style-type: none"> 0 m 0 ft
Installation factor	–	Enter factor to adjust for installation conditions.	Positive floating-point number	1.0

10.5.4 Configuring the pulse/frequency/switch output


The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

Configuring the pulse output

Navigation

"Setup" menu → Advanced setup → Pulse/frequency/switch output

Structure of the wizard for the pulse output

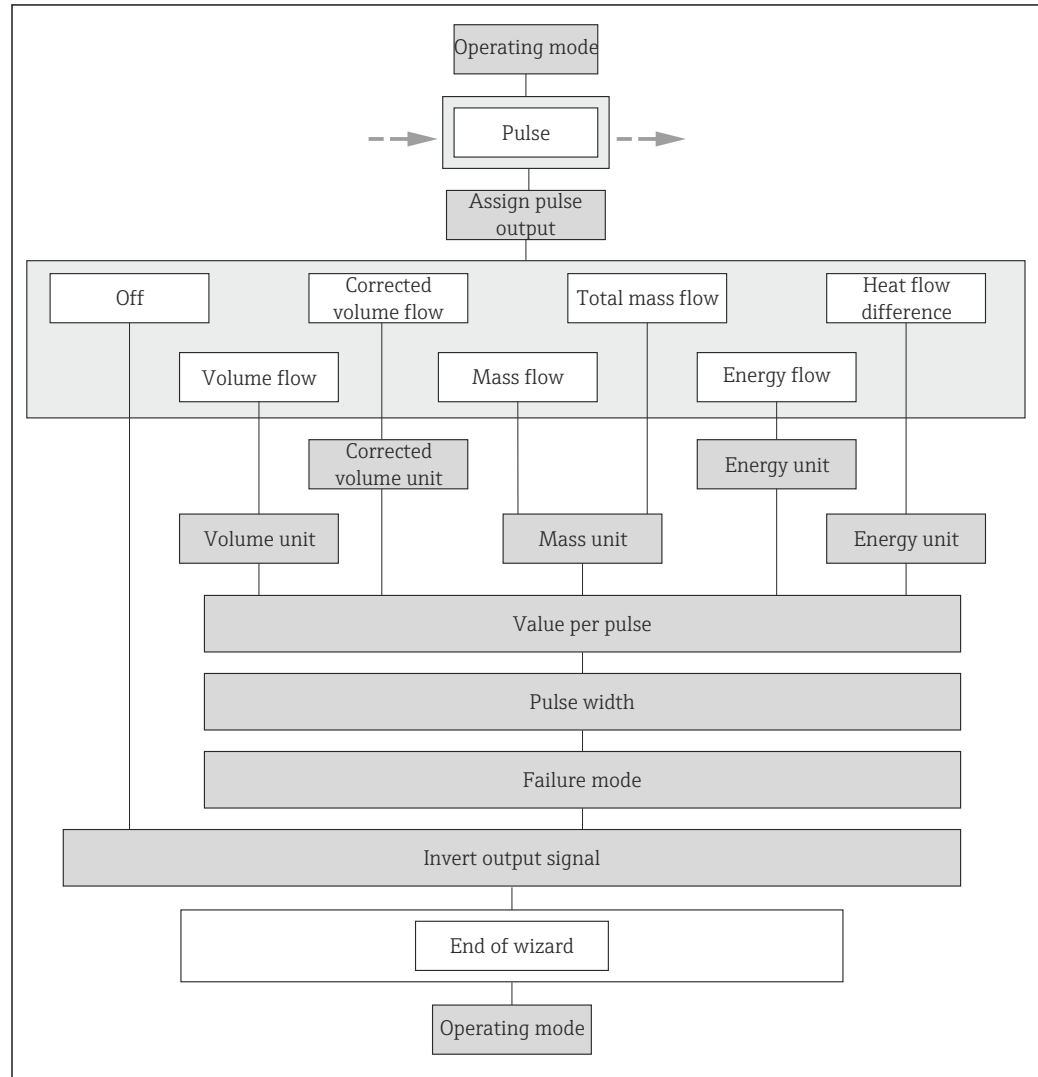

A0020792-EN

23 "Pulse/frequency/switch output" wizard in the "Advanced setup" submenu: "Operating mode" parameter "Pulse" option

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	<ul style="list-style-type: none"> ■ Pulse ■ Frequency ■ Switch 	Pulse
Assign pulse output	The Pulse option is selected in the Operating mode parameter.	Select process variable for pulse output.	<ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Total mass flow * ■ Energy flow * ■ Heat flow difference * 	Volume flow
Mass unit	–	Select mass unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> ■ kg ■ lb
Volume unit	–	Select volume unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> ■ m³ ■ ft³
Corrected volume unit	–	Select corrected volume unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> ■ Nm³ ■ Sft³
Energy unit	For the following order code: "Sensor version", option "Mass flow"	Select energy unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> ■ kWh ■ Btu
Value per pulse	The Pulse option is selected in the Operating mode parameter, and one of the following options is selected in the Assign pulse output parameter (→ 97): <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Total mass flow * ■ Energy flow * ■ Heat flow difference * 	Enter measured value at which a pulse is output.	Positive floating-point number	Depends on country and nominal diameter
Pulse width	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 97): <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Total mass flow * ■ Energy flow * ■ Heat flow difference * 	Define time width of the output pulse.	5 to 2 000 ms	100 ms

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Failure mode	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 97): <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Total mass flow * ■ Energy flow * ■ Heat flow difference * 	Define output behavior in alarm condition.	<ul style="list-style-type: none"> ■ Actual value ■ No pulses 	No pulses
Invert output signal	–	Invert the output signal.	<ul style="list-style-type: none"> ■ No ■ Yes 	No


* Visibility depends on order options or device settings

Configuring the frequency output

Navigation

"Setup" menu → Advanced setup → Pulse/frequency/switch output

Structure of the wizard for the frequency output

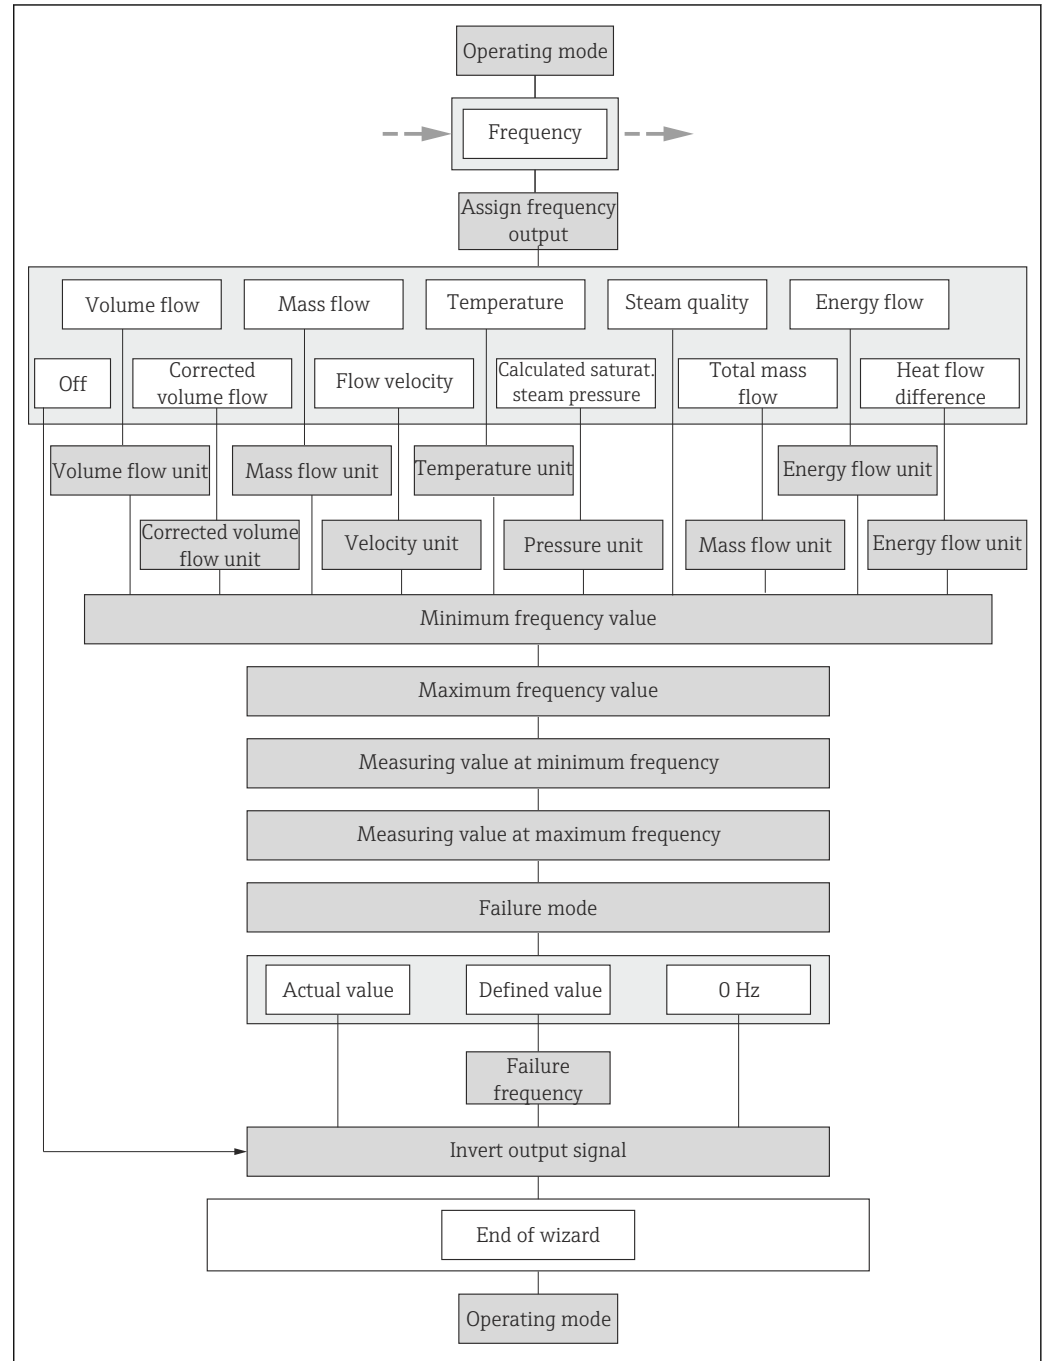



A0020789-EN

24 "Pulse/frequency/switch output" wizard in the "Advanced setup" submenu: "Operating mode" parameter "Frequency" option

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	<ul style="list-style-type: none"> ■ Pulse ■ Frequency ■ Switch 	Pulse
Assign frequency output	The Frequency option is selected in the Operating mode parameter (→ 97).	Select process variable for frequency output.	<ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Flow velocity ■ Temperature ■ Calculated saturated steam pressure[*] ■ Steam quality[*] ■ Total mass flow[*] ■ Energy flow[*] ■ Heat flow difference[*] 	Off
Mass flow unit	–	Select mass flow unit. <i>Effect</i> The selected unit applies for: <ul style="list-style-type: none"> ■ Output ■ Low flow cut off ■ Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> ■ kg/h ■ lb/min
Volume flow unit	–	Select volume flow unit. <i>Effect</i> The selected unit applies for: <ul style="list-style-type: none"> ■ Output ■ Low flow cut off ■ Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> ■ m³/h ■ ft³/min
Corrected volume flow unit	–	Select corrected volume flow unit. <i>Effect</i> The selected unit applies for: Corrected volume flow	Unit choose list	Country-specific: <ul style="list-style-type: none"> ■ Nm³/h ■ Sft³/h
Energy flow unit	For the following order code: "Sensor version", option "Mass flow"	Select energy flow unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> ■ Outputs ■ Low flow cut off 	Unit choose list	Country-specific: <ul style="list-style-type: none"> ■ kW ■ Btu/h
Pressure unit	For the following order code: "Sensor version", option "Mass flow"	Select process pressure unit. <i>Effect</i> The unit is taken from the: <ul style="list-style-type: none"> ■ Calculated saturated steam pressure ■ Atmospheric pressure ■ Maximum value ■ Fixed process pressure ■ Pressure ■ Reference pressure 	Unit choose list	Country-specific: <ul style="list-style-type: none"> ■ bar ■ psi
Velocity unit	–	Select velocity unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> ■ Flow velocity ■ Maximum value 	Unit choose list	Country-specific: <ul style="list-style-type: none"> ■ m/s ■ ft/s

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Temperature unit	–	<p>Select temperature unit.</p> <p><i>Effect</i></p> <p>The selected unit applies for:</p> <ul style="list-style-type: none"> ■ Temperature ■ Maximum value ■ Minimum value ■ Average value ■ Maximum value ■ Minimum value ■ Maximum value ■ Minimum value ■ 2nd temperature delta heat ■ Fixed temperature ■ Reference combustion temperature ■ Reference temperature ■ Saturation temperature 	Unit choose list	<p>Country-specific:</p> <ul style="list-style-type: none"> ■ °C ■ °F
Minimum frequency value	<p>The Frequency option is selected in the Operating mode parameter, and one of the following options is selected in the Assign frequency output parameter (→  100):</p> <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Flow velocity ■ Temperature ■ Calculated saturated steam pressure * ■ Steam quality * ■ Total mass flow * ■ Energy flow * ■ Heat flow difference * 	Enter minimum frequency.	0 to 1 000 Hz	0 Hz
Maximum frequency value	<p>The Frequency option is selected in the Operating mode parameter, and one of the following options is selected in the Assign frequency output parameter (→  100):</p> <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Flow velocity ■ Temperature ■ Calculated saturated steam pressure * ■ Steam quality * ■ Total mass flow * ■ Energy flow * ■ Heat flow difference * 	Enter maximum frequency.	0 to 1 000 Hz	1 000 Hz

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Measuring value at minimum frequency	<p>The Frequency option is selected in the Operating mode parameter, and one of the following options is selected in the Assign frequency output parameter (→ 100):</p> <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Flow velocity ■ Temperature ■ Calculated saturated steam pressure * ■ Steam quality * ■ Total mass flow * ■ Energy flow * ■ Heat flow difference * 	Enter measured value for minimum frequency.	Signed floating-point number	Depends on country and nominal diameter
Measuring value at maximum frequency	<p>The Frequency option is selected in the Operating mode parameter, and one of the following options is selected in the Assign frequency output parameter (→ 100):</p> <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Flow velocity ■ Temperature ■ Calculated saturated steam pressure * ■ Steam quality * ■ Total mass flow * ■ Energy flow * ■ Heat flow difference * 	Enter measured value for maximum frequency.	Signed floating-point number	Depends on country and nominal diameter
Failure mode	<p>The Frequency option is selected in the Operating mode parameter (→ 97), and one of the following options is selected in the Assign frequency output parameter (→ 100):</p> <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Flow velocity ■ Temperature ■ Calculated saturated steam pressure * ■ Steam quality * ■ Total mass flow * ■ Energy flow * ■ Heat flow difference * 	Define output behavior in alarm condition.	<ul style="list-style-type: none"> ■ Actual value ■ Defined value ■ 0 Hz 	0 Hz

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Failure frequency	The Frequency option is selected in the Operating mode parameter (→ 97), and one of the following options is selected in the Assign frequency output parameter (→ 100): <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Flow velocity ■ Temperature ■ Calculated saturated steam pressure * ■ Steam quality * ■ Total mass flow * ■ Energy flow * ■ Heat flow difference * 	Enter frequency output value in alarm condition.	0.0 to 1250.0 Hz	0.0 Hz
Invert output signal	–	Invert the output signal.	<ul style="list-style-type: none"> ■ No ■ Yes 	No


* Visibility depends on order options or device settings

Configuring the switch output

Navigation


"Setup" menu → Advanced setup → Pulse/frequency/switch output

Structure of the wizard for the switch output

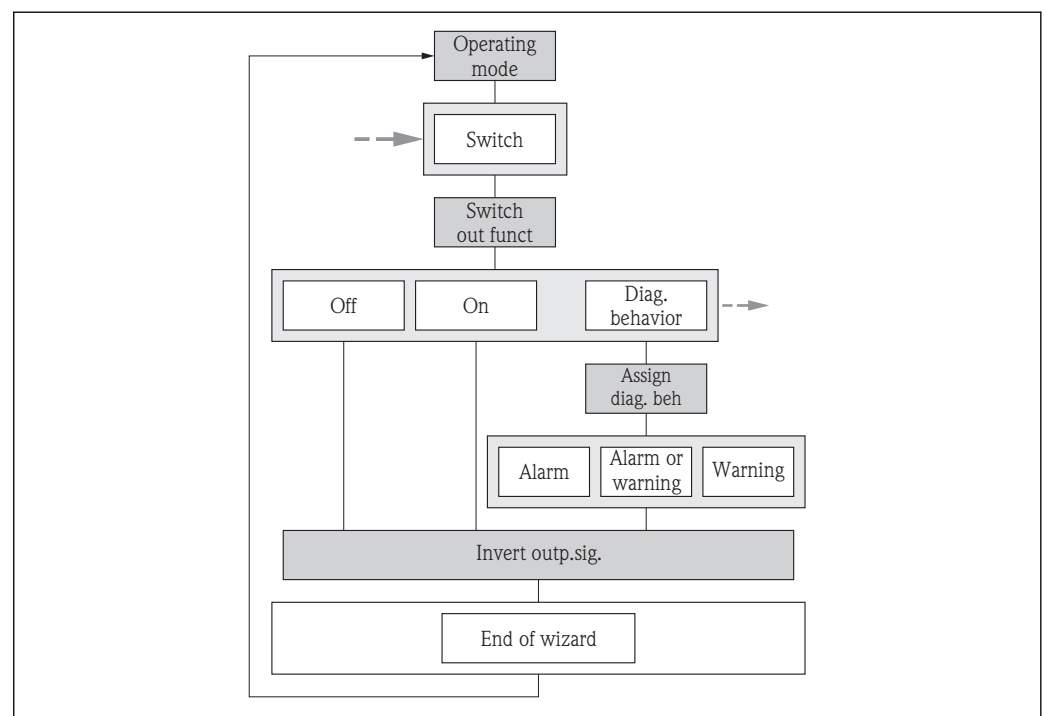

A0017439-EN

25 "Pulse/frequency/switch output" wizard in the "Advanced setup" submenu: "Operating mode" parameter "Switch" option (part 1)

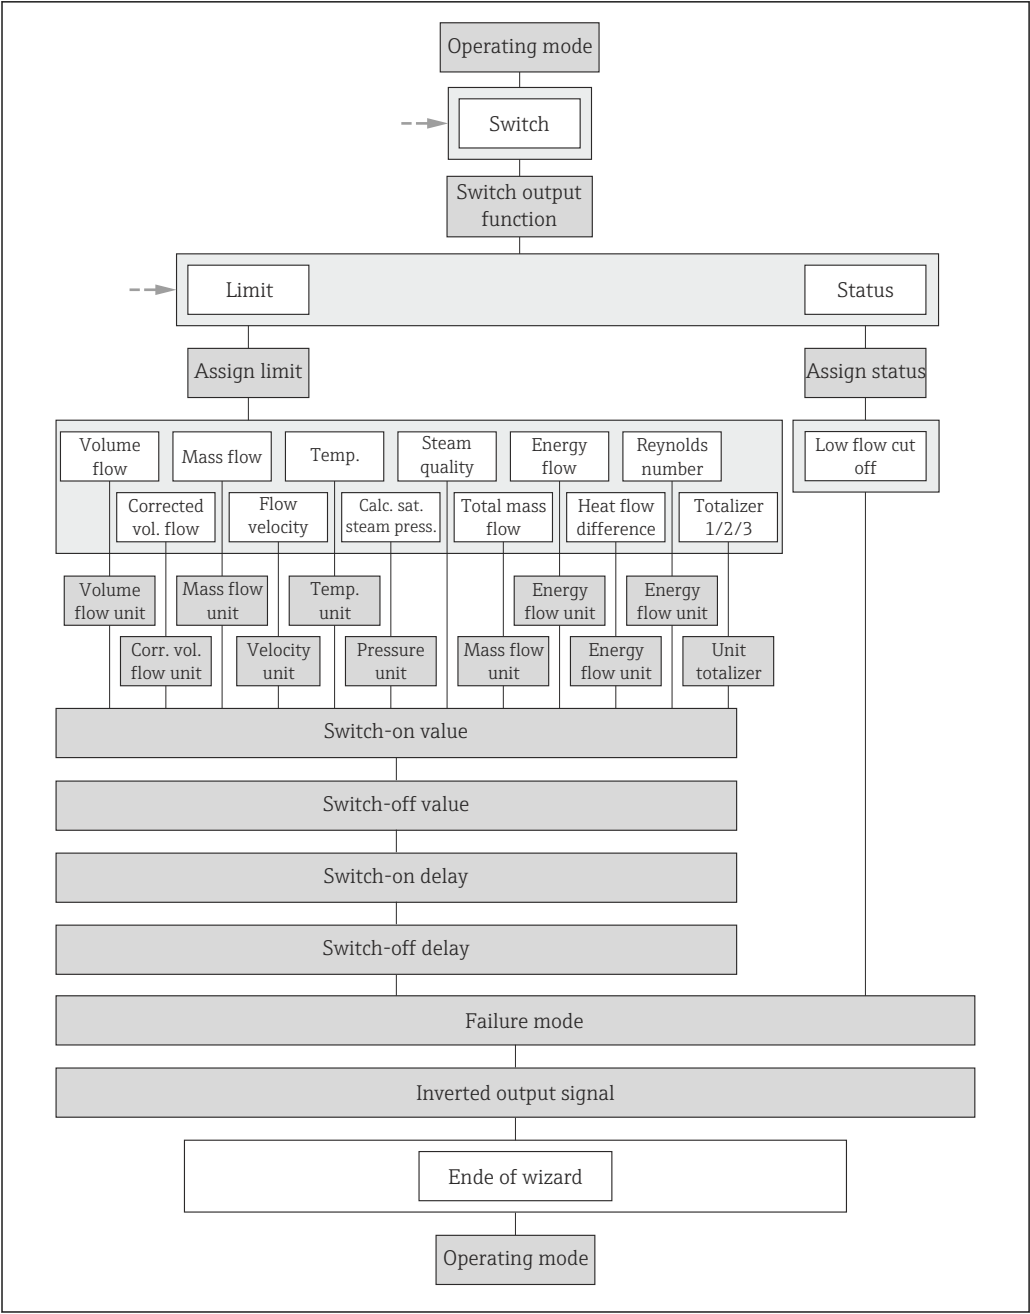

A0020794-EN

26 "Pulse/frequency/switch output" wizard in the "Advanced setup" submenu: "Operating mode" parameter "Switch" option (part 2)

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Operating mode	–	Define the output as a pulse, frequency or switch output.	<ul style="list-style-type: none">■ Pulse■ Frequency■ Switch	Pulse
Switch output function	The Switch option is selected in the Operating mode parameter.	Select function for switch output.	<ul style="list-style-type: none">■ Off■ On■ Diagnostic behavior■ Limit■ Status	Off

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign diagnostic behavior	<ul style="list-style-type: none"> The Switch option is selected in the Operating mode parameter. The Diagnostic behavior option is selected in the Switch output function parameter. 	Select diagnostic behavior for switch output.	<ul style="list-style-type: none"> Alarm Alarm or warning Warning 	Alarm
Assign limit	<ul style="list-style-type: none"> The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Select process variable for limit function.	<ul style="list-style-type: none"> Volume flow Corrected volume flow Mass flow Flow velocity Temperature Calculated saturated steam pressure[*] Steam quality[*] Total mass flow[*] Energy flow[*] Heat flow difference[*] Reynolds number[*] Totalizer 1 Totalizer 2 Totalizer 3 	Volume flow
Assign flow direction check	<ul style="list-style-type: none"> The Switch option is selected in the Operating mode parameter. The Flow direction check option is selected in the Switch output function parameter. 	Select process variable for flow direction monitoring.	<ul style="list-style-type: none"> Off Volume flow Mass flow Corrected volume flow 	Volume flow
Assign status	<ul style="list-style-type: none"> The Switch option is selected in the Operating mode parameter. The Status option is selected in the Switch output function parameter. 	Select device status for switch output.	<ul style="list-style-type: none"> Low flow cut off Digital output 6 	Low flow cut off
Mass flow unit	–	Select mass flow unit. <i>Effect</i> The selected unit applies for: <ul style="list-style-type: none"> Output Low flow cut off Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> kg/h lb/min
Volume flow unit	–	Select volume flow unit. <i>Effect</i> The selected unit applies for: <ul style="list-style-type: none"> Output Low flow cut off Simulation process variable 	Unit choose list	Country-specific: <ul style="list-style-type: none"> m³/h ft³/min
Corrected volume flow unit	–	Select corrected volume flow unit. <i>Effect</i> The selected unit applies for: Corrected volume flow	Unit choose list	Country-specific: <ul style="list-style-type: none"> Nm³/h Sft³/h
Energy flow unit	For the following order code: "Sensor version", option "Mass flow"	Select energy flow unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Outputs Low flow cut off 	Unit choose list	Country-specific: <ul style="list-style-type: none"> kW Btu/h

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Pressure unit	For the following order code: "Sensor version", option "Mass flow"	Select process pressure unit. <i>Effect</i> The unit is taken from the: <ul style="list-style-type: none"> Calculated saturated steam pressure Atmospheric pressure Maximum value Fixed process pressure Pressure Reference pressure 	Unit choose list	Country-specific: <ul style="list-style-type: none"> bar psi
Velocity unit	–	Select velocity unit. <i>Result</i> The selected unit applies for: <ul style="list-style-type: none"> Flow velocity Maximum value 	Unit choose list	Country-specific: <ul style="list-style-type: none"> m/s ft/s
Unit totalizer	One of the following options is selected in the Assign process variable parameter (→ 107) of the Totalizer 1 to 3 submenu: <ul style="list-style-type: none"> Volume flow Corrected volume flow Mass flow Total mass flow * Condensate mass flow * Energy flow * Heat flow difference * 	Select process variable totalizer unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> m³ ft³
Temperature unit	–	Select temperature unit. <i>Effect</i> The selected unit applies for: <ul style="list-style-type: none"> Temperature Maximum value Minimum value Average value Maximum value Minimum value Maximum value Minimum value 2nd temperature delta heat Fixed temperature Reference combustion temperature Reference temperature Saturation temperature 	Unit choose list	Country-specific: <ul style="list-style-type: none"> °C °F
Switch-on value	<ul style="list-style-type: none"> The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> 0 m³/h 0 ft³/h
Switch-off value	<ul style="list-style-type: none"> The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> 0 m³/h 0 ft³/h
Switch-on delay	<ul style="list-style-type: none"> The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Switch-off delay	<ul style="list-style-type: none"> The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Failure mode	–	Define output behavior in alarm condition.	<ul style="list-style-type: none"> Actual status Open Closed 	Open
Invert output signal	–	Invert the output signal.	<ul style="list-style-type: none"> No Yes 	No

* Visibility depends on order options or device settings

10.5.5 Configuring the totalizer

In the "**Totalizer 1 to 3**" submenu the individual totalizer can be configured.

Navigation

"Setup" menu → Advanced setup → Totalizer 1 to 3

► Totalizer 1 to 3


Assign process variable

Unit totalizer

Failure mode

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection	Factory setting
Assign process variable	–	Select process variable for totalizer.	<ul style="list-style-type: none"> Off Volume flow Corrected volume flow Mass flow Total mass flow * Condensate mass flow * Energy flow * Heat flow difference * 	Volume flow
Unit totalizer	One of the following options is selected in the Assign process variable parameter (→ 107) of the Totalizer 1 to 3 submenu: <ul style="list-style-type: none"> Volume flow Corrected volume flow Mass flow Total mass flow * Condensate mass flow * Energy flow * Heat flow difference * 	Select process variable totalizer unit.	Unit choose list	Country-specific: <ul style="list-style-type: none"> m³ ft³

Parameter	Prerequisite	Description	Selection	Factory setting
Totalizer operation mode	–	Select totalizer calculation mode.	<ul style="list-style-type: none"> ■ Net flow total ■ Forward flow total ■ Reverse flow total 	Net flow total
Failure mode	One of the following options is selected in the Assign process variable parameter (→  107) of the Totalizer 1 to 3 submenu: <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Total mass flow * ■ Condensate mass flow * ■ Energy flow * ■ Heat flow difference * 	Define totalizer behavior in alarm condition.	<ul style="list-style-type: none"> ■ Stop ■ Actual value ■ Last valid value 	Stop

* Visibility depends on order options or device settings

10.5.6 Carrying out additional display configurations

In the **Display** submenu you can set all the parameters associated with the configuration of the local display.

Navigation

"Setup" menu → Advanced setup → Display

► Display

Format display

Value 1 display

0% bargraph value 1

100% bargraph value 1

Decimal places 1

Value 2 display

Decimal places 2

Value 3 display

0% bargraph value 3

100% bargraph value 3

Decimal places 3

Value 4 display

Decimal places 4

Language

Display interval

Display damping

Header


Header text

Separator

Backlight

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul style="list-style-type: none"> ■ 1 value, max. size ■ 1 bargraph + 1 value ■ 2 values ■ 1 value large + 2 values ■ 4 values 	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	<ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Flow velocity ■ Temperature ■ Calculated saturated steam pressure * ■ Steam quality * ■ Total mass flow * ■ Condensate mass flow * ■ Energy flow * ■ Heat flow difference * ■ Reynolds number * ■ Density * ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 m³/h ■ 0 ft³/h
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the Value 1 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist, see Value 1 display parameter	None
Decimal places 2	A measured value is specified in the Value 2 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist, see Value 1 display parameter	None
0% bargraph value 3	A selection has been made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: <ul style="list-style-type: none"> ■ 0 m³/h ■ 0 ft³/h
100% bargraph value 3	An option has been selected in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 3	A measured value is specified in the Value 3 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist, see Value 1 display parameter	None
Decimal places 4	A measured value is specified in the Value 4 display parameter.	Select the number of decimal places for the display value.	<ul style="list-style-type: none"> ■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx 	x.xx
Language	A local display is provided.	Set display language.	<ul style="list-style-type: none"> ■ English ■ Deutsch * ■ Français * ■ Español * ■ Italiano * ■ Nederlands * ■ Portuguesa * ■ Polski * ■ русский язык (Russian) * ■ Svenska * ■ Türkçe * ■ 中文 (Chinese) * ■ 日本語 (Japanese) * ■ 한국어 (Korean) * ■ Bahasa Indonesia * ■ tiếng Việt (Vietnamese) * ■ čeština (Czech) * 	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	5.0 s
Header	A local display is provided.	Select header contents on local display.	<ul style="list-style-type: none"> ■ Device tag ■ Free text 	Device tag
Header text	The Free text option is selected in the Header parameter.	Enter display header text.	Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)	-----
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	<ul style="list-style-type: none"> ■ . (point) ■ , (comma) 	. (point)
Backlight	–	Switch the local display backlight on and off.  Only for device version with local display SD03 (touch control)	<ul style="list-style-type: none"> ■ Disable ■ Enable 	Disable

* Visibility depends on order options or device settings

10.6 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration.

You can do so using the **Configuration management** parameter and the related options found in the **Configuration backup display** submenu.

Navigation

"Setup" menu → Advanced setup → Configuration backup display

▶ Configuration backup display

Operating time

Last backup

Configuration management

Comparison result

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface / Selection	Factory setting
Operating time	–	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	–
Last backup	A local display is provided.	Indicates when the last data backup was saved to the display module.	Days (d), hours (h), minutes (m) and seconds (s)	–
Configuration management	A local display is provided.	Select action for managing the device data in the display module.	<ul style="list-style-type: none"> ■ Cancel ■ Execute backup ■ Restore ■ Duplicate ■ Compare ■ Clear backup data ■ Display incompatible 	Cancel
Comparison result	A local display is provided.	Comparison between present device data and display backup.	<ul style="list-style-type: none"> ■ Settings identical ■ Settings not identical ■ No backup available ■ Backup settings corrupt ■ Check not done ■ Dataset incompatible 	Check not done

10.6.1 Function scope of the "Configuration management" parameter

Options	Description
Execute backup	The current device configuration is backed up from the integrated HistoROM to the device's display module. The backup copy includes the transmitter data of the device.
Restore	The last backup copy of the device configuration is restored from the display module to the device's integrated HistoROM. The backup copy includes the transmitter data of the device.
Duplicate	The transmitter configuration from another device is duplicated to the device using the display module.

Options	Description
Compare	The device configuration saved in the display module is compared with the current device configuration of the integrated HistoROM.
Clear backup data	The backup copy of the device configuration is deleted from the display module of the device.



Integrated HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.



While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

10.7 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

Navigation

"Diagnostics" menu → Simulation

► Simulation

Assign simulation process variable

Value process variable

Frequency simulation

Frequency value

Pulse simulation

Pulse value

Switch output simulation


Switch status

Simulation device alarm

Diagnostic event category

Simulation diagnostic event

Parameter overview with brief description



Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign simulation process variable	–	Select a process variable for the simulation process that is activated.	<ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Flow velocity ■ Temperature ■ Calculated saturated steam pressure[*] ■ Steam quality[*] ■ Total mass flow[*] ■ Condensate mass flow[*] ■ Energy flow ■ Heat flow difference[*] ■ Reynolds number 	Off
Value process variable	One of the following options is selected in the Assign simulation process variable parameter (→ 114): <ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Flow velocity ■ Temperature[*] ■ Calculated saturated steam pressure[*] ■ Steam quality[*] ■ Total mass flow[*] ■ Condensate mass flow[*] ■ Energy flow[*] ■ Heat flow difference[*] ■ Reynolds number[*] 	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Frequency simulation	The Frequency option is selected in the Operating mode parameter.	Switch the simulation of the frequency output on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Frequency value	The On option is selected in the Frequency simulation parameter.	Enter the frequency value for the simulation.	0.0 to 1250.0 Hz	0.0 Hz
Pulse simulation	The Pulse option is selected in the Operating mode parameter.	Set and switch off the pulse output simulation.  For Fixed value option: Pulse width parameter (→ 97) defines the pulse width of the pulses output.	<ul style="list-style-type: none"> ■ Off ■ Fixed value ■ Down-counting value 	Off
Pulse value	In the Pulse simulation parameter (→ 114), the Down-counting value option is selected.	Enter the number of pulses for simulation.	0 to 65 535	0
Switch output simulation	The Switch option is selected in the Operating mode parameter.	Switch the simulation of the switch output on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off
Switch status	The On option is selected in the Switch output simulation parameter (→ 114).	Select the status of the status output for the simulation.	<ul style="list-style-type: none"> ■ Open ■ Closed 	Open
Simulation device alarm	–	Switch the device alarm on and off.	<ul style="list-style-type: none"> ■ Off ■ On 	Off

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Diagnostic event category	–	Select a diagnostic event category.	<ul style="list-style-type: none"> ■ Sensor ■ Electronics ■ Configuration ■ Process 	Sensor
Simulation diagnostic event	–		<ul style="list-style-type: none"> ■ Off ■ Diagnostic event picklist (depends on the category selected) 	Off

* Visibility depends on order options or device settings

10.8 Protecting settings from unauthorized access

The following options exist for protecting the configuration of the measuring device from unintentional modification after commissioning:

- Write protection via access code
- Write protection via write protection switch
- Write protection via keypad lock →  55
- FOUNDATION Fieldbus: write protection via block operation →  117

10.8.1 Write protection via access code


With the customer-specific access code, the parameters for the measuring device configuration are write-protected and their values can no longer be changed via local operation.

Navigation




"Setup" menu → Advanced setup → Administration → Define access code

▶ Define access code

Defining the access code via local display

1. Navigate to the **Enter access code** parameter.
2. Define a max. 4-digit numeric code as an access code.
3. Enter the access code again to confirm the code.
 - ↳ The -symbol appears in front of all write-protected parameters.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.

-  ■ If write access is activated via access code, it can be also be deactivated only via the access code →  55.
- The user role with which the user is currently logged on via the local display →  55 is indicated by the **Access status display** parameter. Navigation path: "Operation" menu → Access status display

Parameters which can always be modified via the local display


Certain parameters that do not affect the measurement are excepted from write protection via the local display. Despite the defined access code, these parameters can always be modified even if the other parameters are locked.

10.8.2 Write protection via write protection switch

Unlike write protection via a user-specific access code, this allows write access to the entire operating menu - other than the **"Contrast display" parameter** - to be locked.


The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via FOUNDATION Fieldbus

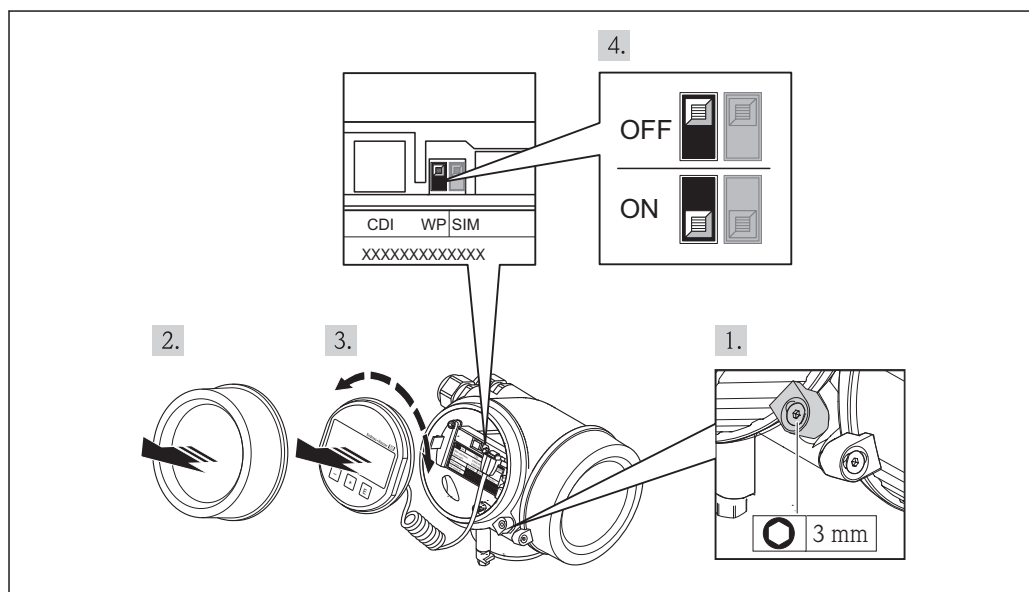


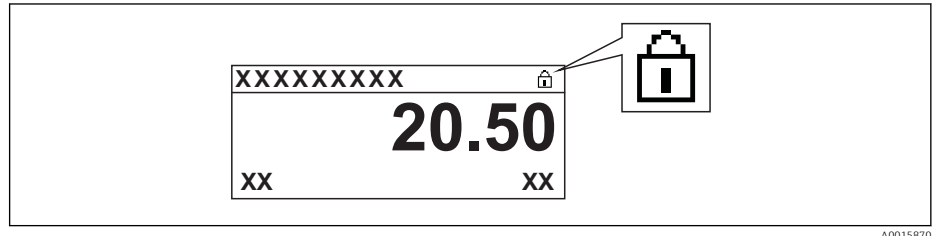
A0013768

1. Loosen the securing clamp.
2. Unscrew the electronics compartment cover.
3. Pull out the display module with a gentle rotational movement. To make it easier to access the write protection switch, attach the display module to the edge of the electronics compartment.
 - ↳ Display module is attached to the edge of the electronics compartment.

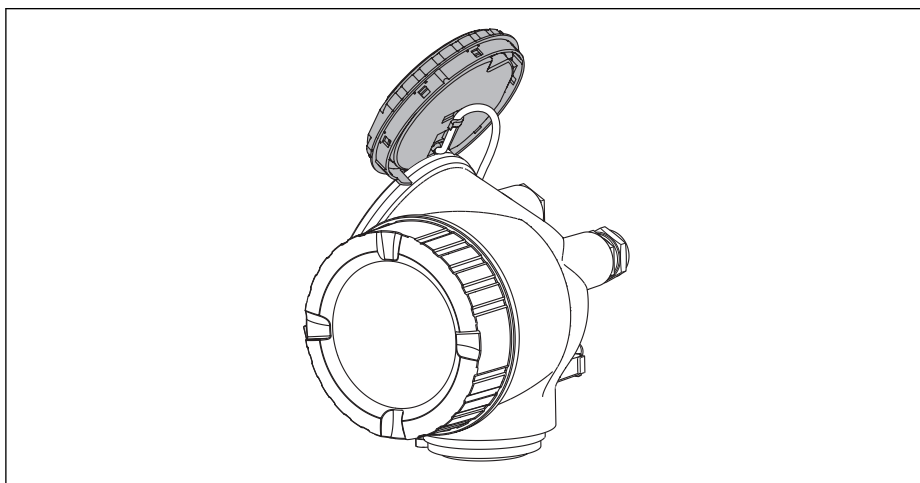


A0013909

4. Setting the write protection switch (WP) on the main electronics module to the **ON** position enables hardware write protection. Setting the write protection switch (WP) on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.
 - ↳ If hardware write protection is enabled, the **Locking status** parameter displays the **Hardware locked** option. In addition, on the local display the -symbol appears in front of the parameters in the header of the operational display and in the navigation view.



A0015870

If hardware write protection is disabled, no option is displayed in the **Locking status** parameter. On the local display, the -symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

5. Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
6. Reverse the removal procedure to reassemble the transmitter.

10.8.3 Write protection via block operation


Locking via block operation:

- Block: **DISPLAY (TRDDISP)**; parameter: **Define access code**
- Block: **EXPERT_CONFIG (TRDEXP)**; parameter: **Enter access code**

10.9 Configuring the measuring device via FOUNDATION Fieldbus

10.9.1 Block configuration

Preparation

 The correct Cff and device description files are needed for preparatory purposes.

1. Switch on the device.
2. Make a note of the **DEVICE_ID**.
3. Open the configuration program.
4. Load Cff and device description files into the host system or the configuration program.
5. Identify the device using the **DEVICE_ID**.
6. Assign the desired tag name to the device via the **Pd-tag/FF_PD_TAG** parameter.

Configuring the Resource Block


1. Open the Resource Block.
2. Disable the lock for device operation.
3. Change the block name (optional). Factory setting: RS-xxxxxxxxxxx (RB2)
4. Assign a description to the block via the **Description of the identification tag/TAG_DESC** parameter.
5. Change other parameters as required.

Configuring the Transducer Blocks

The measurement and the display module are configured via the Transducer Blocks.

The basic procedure is the same for all Transducer Blocks.

1. Open the specific Transducer Block.
2. Change the block name (optional).
3. Set the block mode to **OOS** via the **Block mode/MODE_BLK** parameter, **TARGET** element.
4. Configure the device in accordance with the measuring task
5. Set the block mode to **Auto** via the **Block mode/MODE_BLK** parameter, **TARGET** element.

 The block mode must be set to **Auto** to ensure the smooth operation of the device.

Configuring the Analog Input Blocks

1. Open the Analog Input Block.
2. Change the block name (optional).
3. Set the block mode to **OOS** via the **Block mode/MODE_BLK** parameter, **TARGET** element.
4. Via the **Channel/CHANNEL** parameter, select the process variable which should be used as the input value for the Analog Input Block.


5. Via the **Transducer scale/XD_SCALE** parameter, select the desired unit and the block input range for the process variable. The selected unit must suit the selected process variable. If the process variable does not suit the unit, the **Block error/BLOCK_ERR** parameter reports *Block Configuration Error* and the block mode cannot be set to **Auto**.
6. Via the **Linearization type/L_TYPE** parameter, select the type of linearization for the input variable (factory setting: **Direct**). In the **Direct** linearization mode, the settings for the **Transducer scale/XD_SCALE** and **Output scale/OUT_SCALE** parameters must be identical. If the values do not suit the units, the **Block error/BLOCK_ERR** parameter reports *Block Configuration Error* and the block mode cannot be set to **Auto**.
7. Enter the alarms and critical alarm messages via the **High alarm limit/ HI_HI_LIM**, **High early warning limit/HI_LIM**, **Low alarm limit/ LO_LO_LIM** and **Low early warning limit/LO_LIM** parameters. The limit values entered must be within the value range specified for the **Output scale/OUT_SCALE** parameter.
8. Specify the alarm priorities via the **Priority for high limit value alarm/HI_HI_PRI**, **Priority for high early warning/HI_PRI**, **Priority for low limit value alarm/LO_LO_PRI** and **Priority for low limit value early warning/LO_PRI** parameters. Reporting to the field host system only takes place with alarms with a priority greater than 2.
9. Set the block mode to **Auto** via the **Block mode/MODE_BLK** parameter, **TARGET** element. For this purpose, the Resource Block must also be set to the **Auto** block mode.

Additional configuration

1. Link the function blocks and output blocks.
2. After specifying the active LAS, download all the data and parameters to the field device.

10.9.2 Scaling the measured value in the Analog Input Block

The measured value can be scaled if the **L_TYPE = Indirect** linearization type has been selected in the Analog Input Block. **XD_SCALE** defines the input range with the **EU_0** and **EU_100** elements. This is mapped linearly to the output range, defined by **OUT_SCALE** also with the elements **EU_0** and **EU_100**.

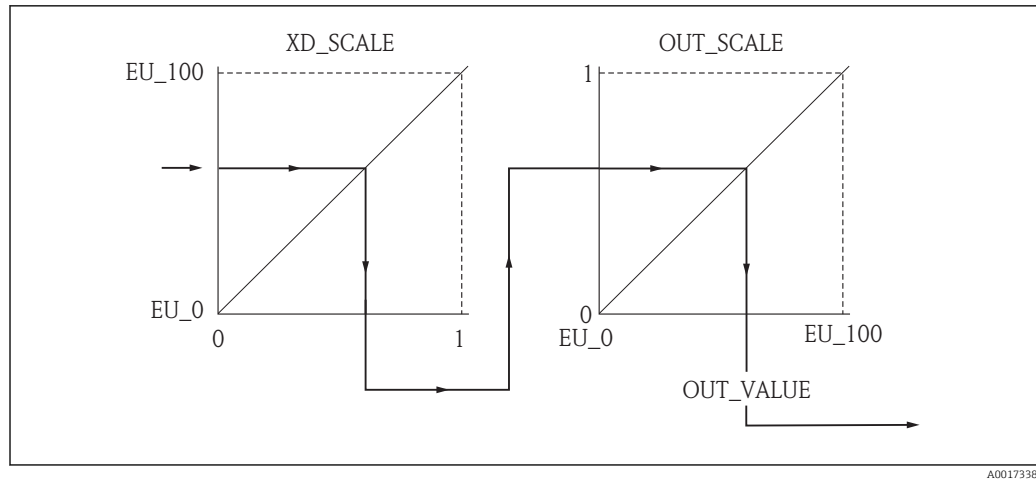

27 Scaling the measured value in the Analog Input Block



- If you have selected the **Direct** mode in the **L_TYPE** parameter, you cannot change the values and units for **XD_SCALE** and **OUT_SCALE**.
- The **L_TYPE**, **XD_SCALE** and **OUT_SCALE** parameters can only be changed in the **OOS** block mode.

11 Operation


11.1 Reading the device locking status

Device active write protection: **Locking status** parameter

Navigation

"Operation" menu → Locking status


Function scope of the "Locking status" parameter

Options	Description
None	The access status displayed in " Access status display " parameter applies →  55. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the main electronics module. This prevents write access to the parameters .
Temporarily locked	Write access to the parameters is temporarily lock due to device-internal processing (e.g. data upload/download, reset). Once the internal processing has been completed, the parameters can be changed once again.



11.2 Adjusting the operating language

Information →  65



For information on the operating languages supported by the measuring device
→  202

11.3 Configuring the display

- Basic settings for the local display →  73
- Advanced settings for the local display →  109

11.4 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

11.4.1 Process variables

The **Process variables** submenu contains all the parameters needed to display the current measured values for every process variable.

Navigation

"Diagnostics" menu → Measured values → Process variables

► Process variables

Volume flow

Corrected volume flow

Mass flow

Flow velocity
Temperature
Calculated saturated steam pressure
Steam quality
Total mass flow
Condensate mass flow
Energy flow
Heat flow difference
Reynolds number
Density
Pressure
Compressibility factor

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Volume flow	–	Displays the volume flow currently measured. <i>Dependency</i> The unit is taken from the Volume flow unit parameter	Signed floating-point number
Corrected volume flow	–	Displays the corrected volume flow currently calculated. <i>Dependency</i> The unit is taken from: Corrected volume flow unit parameter	Signed floating-point number
Mass flow	–	Displays the mass flow currently calculated. <i>Dependency</i> The unit is taken from the Mass flow unit parameter	Signed floating-point number
Flow velocity	–	Displays the flow velocity currently calculated. <i>Dependency</i> The unit is taken from the Velocity unit parameter	Signed floating-point number
Temperature	–	Displays the temperature currently measured. <i>Dependency</i> The unit is taken from the Temperature unit parameter	Signed floating-point number


Parameter	Prerequisite	Description	User interface
Calculated saturated steam pressure	The following conditions are met: <ul style="list-style-type: none"> Order code for "Sensor version", option "Mass flow" The Steam option is selected in the Select medium parameter. 	Displays the saturated steam pressure currently calculated. <i>Dependency</i> The unit is taken from the Pressure unit parameter	Signed floating-point number
Steam quality	The following conditions are met: <ul style="list-style-type: none"> Order code for "Sensor version", option "Mass flow" The Steam option is selected in the Select medium parameter. 	Displays the current steam quality. Depends on the compensation mode of the steam quality (Steam quality parameter (7605)).	Signed floating-point number
Total mass flow	The following conditions are met: <ul style="list-style-type: none"> Order code for "Application package", option EU "Wet steam measurement" The Steam option is selected in the Select medium parameter. 	Displays the total mass flow currently calculated (steam and condensate). <i>Dependency</i> The unit is taken from the Mass flow unit parameter	Signed floating-point number
Condensate mass flow	The following conditions are met: <ul style="list-style-type: none"> Order code for "Application package", option EU "Wet steam measurement" The Steam option is selected in the Select medium parameter. 	Displays the condensate mass flow currently calculated. <i>Dependency</i> The unit is taken from the Mass flow unit parameter	Signed floating-point number
Energy flow	For the following order code: "Sensor version", option "Mass flow"	Displays the energy flow currently calculated. <i>Dependency</i> The unit is taken from the Energy flow unit parameter	Signed floating-point number
Heat flow difference	The following conditions are met: <ul style="list-style-type: none"> Order code for "Sensor version", option "Mass flow" In the Select gas type parameter, one of the following options is selected: <ul style="list-style-type: none"> Single gas Gas mixture Natural gas User-specific gas 	Displays the heat flow difference currently calculated. <i>Dependency</i> The unit is taken from the Energy flow unit parameter	Signed floating-point number
Reynolds number	For the following order code: "Sensor version", option "Mass flow"	Displays the Reynolds number currently calculated.	Signed floating-point number
Density	For the following order code: "Sensor version", option "Mass flow"	Displays the density currently measured. <i>Dependency</i> The unit is taken from the Density unit parameter	Positive floating-point number
Pressure	For the following order code: <ul style="list-style-type: none"> "Sensor version", option "Mass flow" In the External value parameter, the Pressure option is selected. 	Displays the current process pressure. <i>Dependency</i> The unit is taken from the Pressure unit parameter	0 to 250 bar
Compressibility factor	The following conditions are met: <ul style="list-style-type: none"> Order code for "Sensor version", option "Mass flow" In the Select medium parameter, the Gas option or Steam option is selected.	Displays the compressibility factor currently calculated.	0 to 2

11.4.2 Totalizer

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu → Measured values → Totalizer

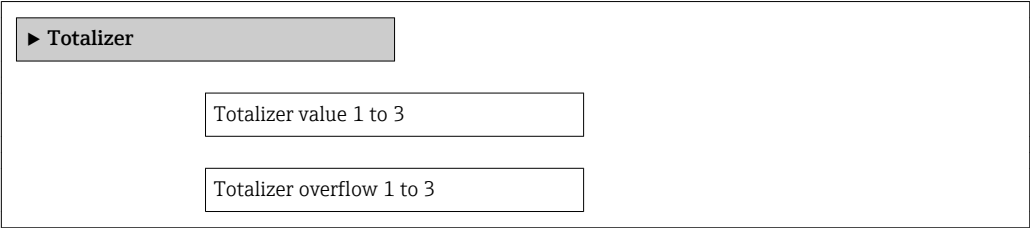

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Totalizer value 1 to 3	One of the following options is selected in the Assign process variable parameter (→ ⓘ 107) of the Totalizer 1 to 3 submenu: <ul style="list-style-type: none">■ Volume flow■ Corrected volume flow■ Mass flow■ Total mass flow *■ Condensate mass flow *■ Energy flow *■ Heat flow difference *	Displays the current totalizer counter value.	Signed floating-point number
Totalizer overflow 1 to 3	One of the following options is selected in the Assign process variable parameter (→ ⓘ 107) of the Totalizer 1 to 3 submenu: <ul style="list-style-type: none">■ Volume flow■ Corrected volume flow■ Mass flow■ Total mass flow *■ Condensate mass flow *■ Energy flow *■ Heat flow difference *	Displays the current totalizer overflow.	Integer with sign


* Visibility depends on order options or device settings

11.4.3 Output values

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.

Navigation

"Diagnostics" menu → Measured values → Output values

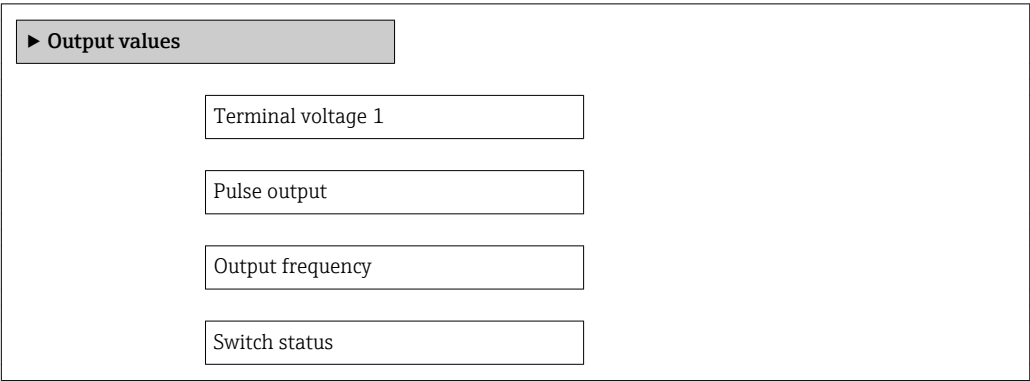

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Terminal voltage 1	–	Displays the current terminal voltage that is applied at the current output.	0.0 to 50.0 V
Pulse output	The Pulse option is selected in the Operating mode parameter.	Displays the pulse frequency currently output.	Positive floating-point number
Output frequency	In the Operating mode parameter, the Frequency option is selected.	Displays the value currently measured for the frequency output.	0 to 1250 Hz
Switch status	In the Operating mode parameter, the Switch option is selected.	Displays the current switch output status.	<ul style="list-style-type: none"> ■ Open ■ Closed

11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu →  66
- Advanced settings using the **Advanced setup** submenu →  77

11.6 Performing a totalizer reset

The totalizers are reset in the **Operation** submenu:

- Control Totalizer
- Reset all totalizers

Function scope of the "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.
Preset + totalize	The totalizer is set to the defined start value from the Preset value parameter and the totaling process is restarted.
Hold	Totalizing is stopped.

Function scope of the "Reset all totalizers" parameter

Options	Description
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized.

Navigation


"Operation" menu → Totalizer handling

<div>► Totalizer handling</div> <div>Control Totalizer 1 to 3</div>

Preset value 1 to 3

Reset all totalizers


Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Control Totalizer	One of the following options is selected in the Assign process variable parameter (→ ⓘ 107) of the Totalizer 1 to 3 submenu: <ul style="list-style-type: none">■ Volume flow■ Corrected volume flow■ Mass flow■ Total mass flow *■ Condensate mass flow *■ Energy flow *■ Heat flow difference *	Control totalizer value.	<ul style="list-style-type: none">■ Totalize■ Reset + hold■ Preset + hold■ Reset + totalize■ Preset + totalize	Totalize
Preset value	One of the following options is selected in the Assign process variable parameter (→ ⓘ 107) of the Totalizer 1 to 3 submenu: <ul style="list-style-type: none">■ Volume flow■ Corrected volume flow■ Mass flow■ Total mass flow *■ Condensate mass flow *■ Energy flow *■ Heat flow difference *	Specify start value for totalizer. <i>Dependency</i>  The unit of the selected process variable is specified for the totalizer in the Unit totalizer parameter (→ ⓘ 106).	Signed floating-point number	Country-specific: <ul style="list-style-type: none">■ 0 m³■ 0 ft³
Reset all totalizers	–	Reset all totalizers to 0 and start.	<ul style="list-style-type: none">■ Cancel■ Reset + totalize	Cancel

* Visibility depends on order options or device settings


11.7 Showing data logging

The **Extended HistoROM** application package must be enabled in the device (order option) for the **Data logging** submenu to appear. This contains all the parameters for the measured value history.

 The measured value history is also available via the FieldCare plant asset management tool → ⓘ 58.

Function scope


- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Display of the measured value trend for each logging channel in the form of a chart

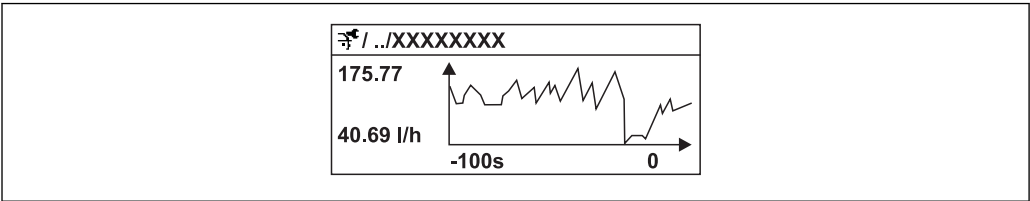

A0016222

28 Chart of a measured value trend


- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

 If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

Navigation

"Diagnostics" menu → Data logging

"Data logging" submenu

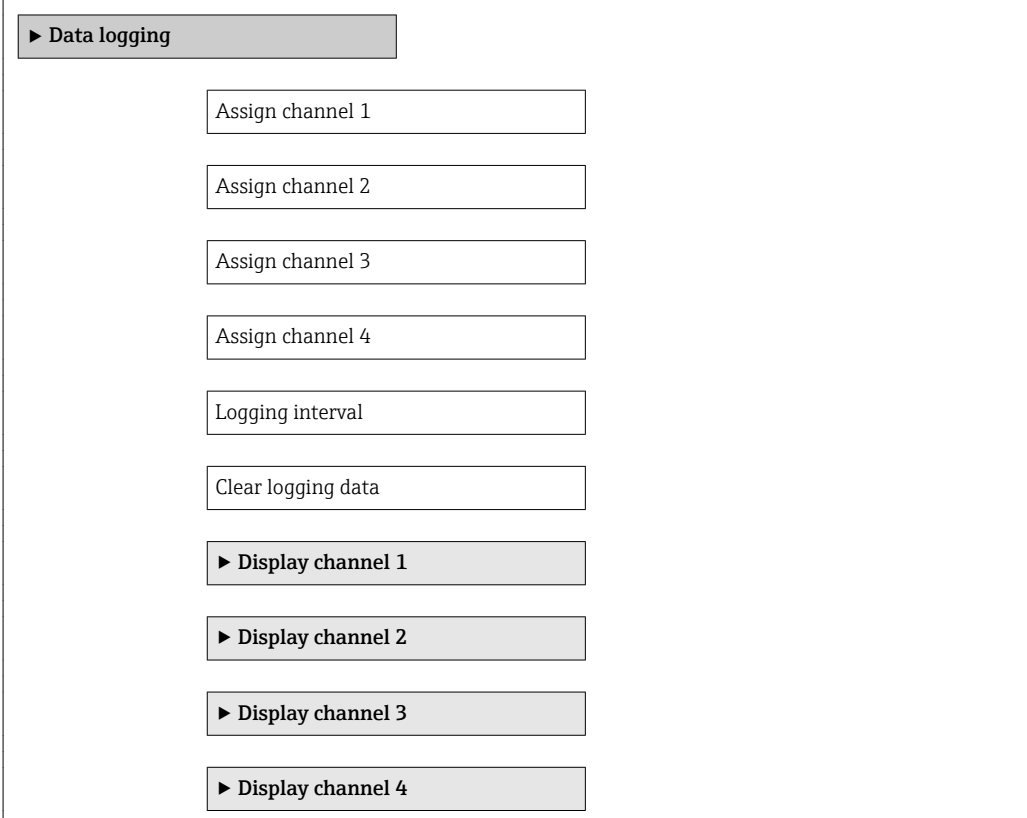

► Data logging

Assign channel 1

Assign channel 2

Assign channel 3

Assign channel 4

Logging interval

Clear logging data




► Display channel 1

► Display channel 2

► Display channel 3

► Display channel 4

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign channel 1 to 4	<p>The Extended HistoROM application package is available.</p> <p> The software options currently enabled are displayed in the Software option overview parameter.</p>	Assign process variable to logging channel.	<ul style="list-style-type: none"> ■ Off ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Flow velocity ■ Temperature ■ Calculated saturated steam pressure ■ Steam quality ■ Total mass flow ■ Condensate mass flow ■ Energy flow ■ Heat flow difference ■ Reynolds number ■ Density ■ Vortex frequency ■ Electronic temperature 	Off
Logging interval	<p>The Extended HistoROM application package is available.</p> <p> The software options currently enabled are displayed in the Software option overview parameter.</p>	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	1.0 to 3 600.0 s	10.0 s
Clear logging data	<p>The Extended HistoROM application package is available.</p> <p> The software options currently enabled are displayed in the Software option overview parameter.</p>	Clear the entire logging data.	<ul style="list-style-type: none"> ■ Cancel ■ Clear data 	Cancel

12 Diagnostics and troubleshooting

12.1 General troubleshooting




For local display

Problem	Possible causes	Remedy
Local display dark and no output signals	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage .
Local display dark and no output signals	The polarity of the supply voltage is wrong.	Correct the polarity.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective.	Order spare part → 169.
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	<ul style="list-style-type: none"> Set the display brighter by simultaneously pressing + . Set the display darker by simultaneously pressing + .
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part → 169.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures → 138
Text on local display appears in a foreign language and cannot be understood.	Incorrect operating language is configured.	<ol style="list-style-type: none"> Press + for 2 s ("home position"). Press . Set the desired language in the Language parameter.
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	<ul style="list-style-type: none"> Check the cable and the connector between the main electronics module and display module. Order spare part → 169.

For output signals

Problem	Possible causes	Remedy
Signal output outside the valid range	Main electronics module is defective.	Order spare part → 169.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Configuration error	Check and correct the parameter configuration.
Device measures incorrectly.	Configuration error or device is operated outside the application.	<ol style="list-style-type: none"> Check and correct parameter configuration. Observe limit values specified in the "Technical Data".


For access

Problem	Possible causes	Remedy
No write access to parameters	Hardware write protection enabled	Set the write protection switch on the main electronics module to the OFF position .
No write access to parameters	Current user role has limited access authorization	1. Check user role →  55. 2. Enter correct customer-specific access code →  55.
No connection via service interface	Incorrect configuration of USB interface on PC or driver not installed correctly.	Observe the documentation for the Commubox.  FXA291: Document "Technical Information" TI00405C

12.2 Diagnostic information on local display

12.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

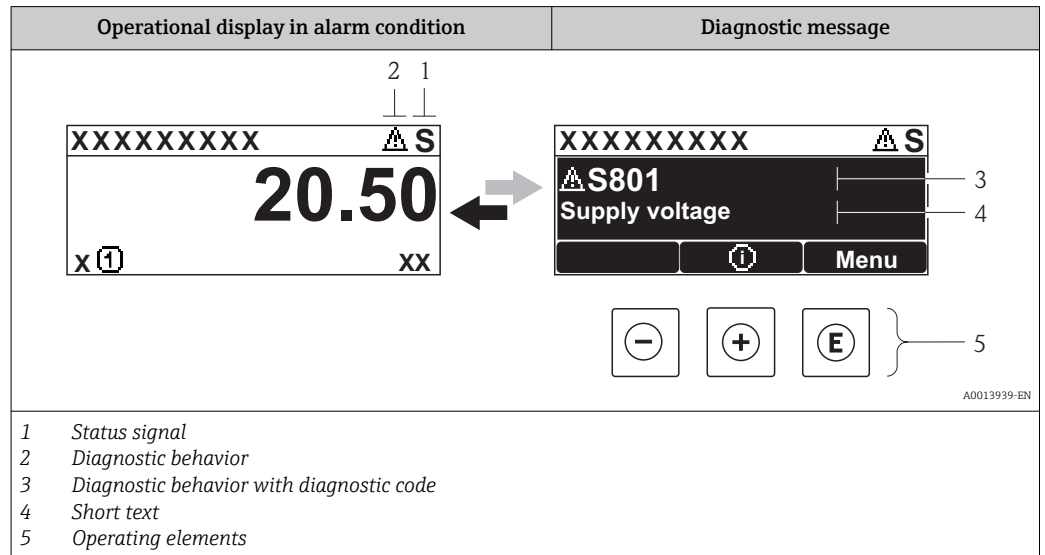

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

- i** Other diagnostic events that have occurred can be called up in the **Diagnostics** menu:
- Via parameters → 162
 - Via submenus → 163



Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

- i** The status signals are categorized according to VDI/VDE 2650 and NAMUR Recommendation NE 107: F = Failure, C = Function Check, S = Out of Specification, M = Maintenance Required

Symbol	Meaning
F A0013956	Failure A device error has occurred. The measured value is no longer valid.
C A0013959	Function check The device is in service mode (e.g. during a simulation).
S A0013958	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
M A0013957	Maintenance required Maintenance is required. The measured value remains valid.



Diagnostic behavior

Symbol	Meaning
 A0013961	Alarm <ul style="list-style-type: none">■ Measurement is interrupted.■ Signal outputs and totalizers assume the defined alarm condition.■ A diagnostic message is generated.■ For local display with touch control: the background lighting changes to red.
 A0013962	Warning <p>Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.</p>


Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

Operating elements

Key	Meaning
 A0013970	Plus key <p><i>In a menu, submenu</i> Opens the message about remedy information.</p>
 A0013952	Enter key <p><i>In a menu, submenu</i> Opens the operating menu.</p>

12.2.2 Calling up remedial measures

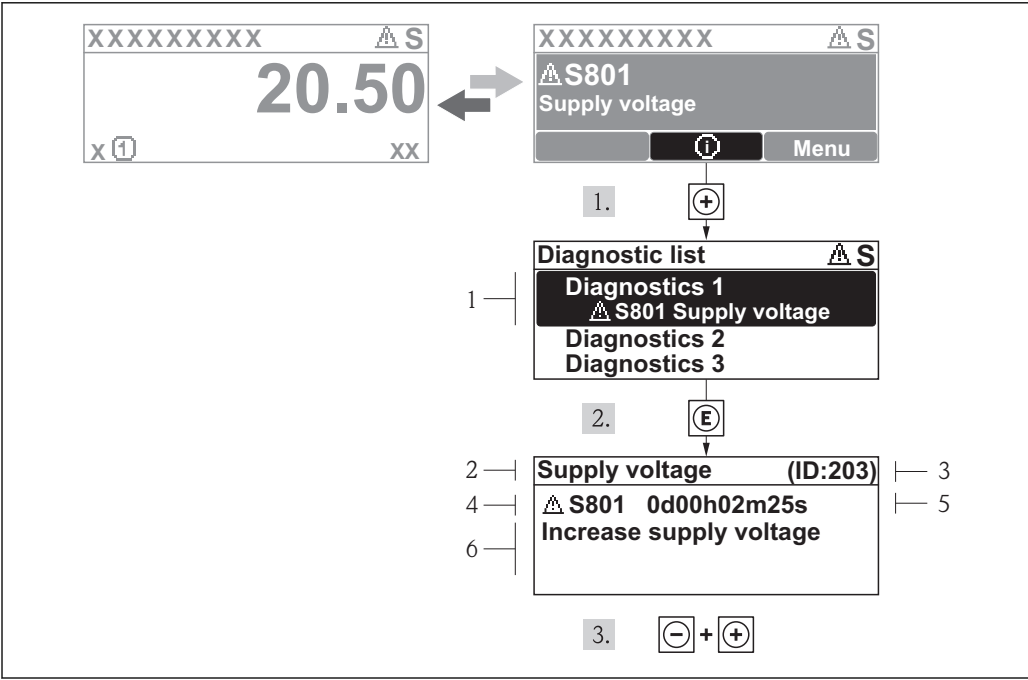

29 Message for remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

1. Press (F1 symbol).
 - ↳ The **Diagnostic list** submenu opens.
2. Select the desired diagnostic event with or and press .
 - ↳ The message for the remedial measures for the selected diagnostic event opens.
3. Press + simultaneously.
 - ↳ The message for the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or the **Previous diagnostics** parameter.

1. Press .
- ↳ The message for the remedial measures for the selected diagnostic event opens.
2. Press + simultaneously.
 - ↳ The message for the remedial measures closes.

12.3 Diagnostic information in FieldCare

12.3.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

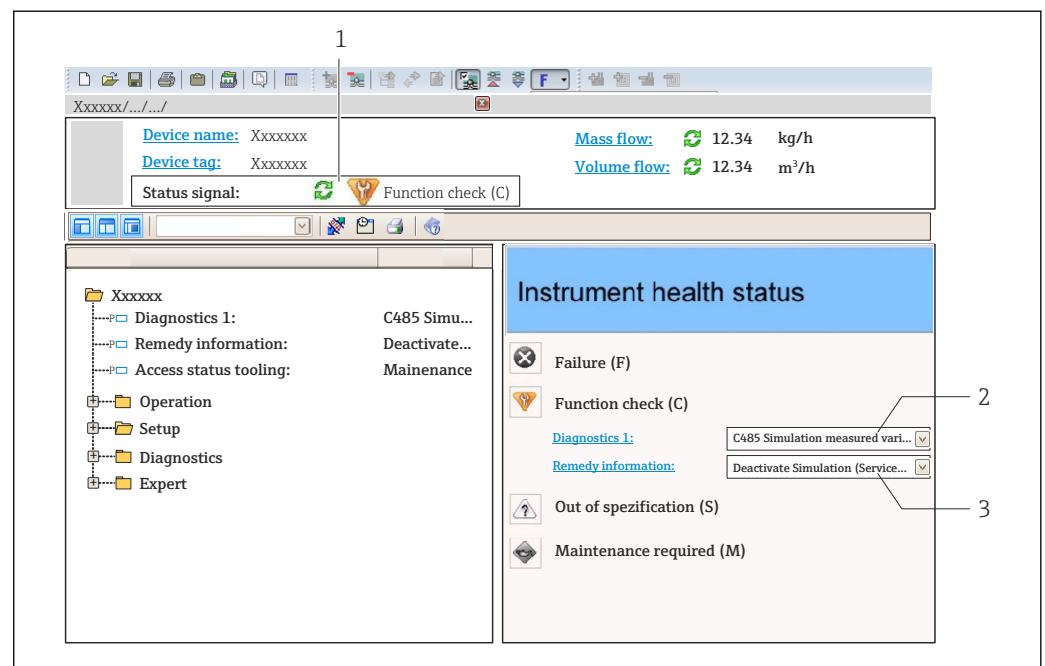

- 1 Status area with status signal → 131
- 2 Diagnostic information → 132
- 3 Remedy information with Service ID

Furthermore, diagnostic events that have occurred can be viewed in the **Diagnostics** menu:

- Via parameter → 162
- Via submenu → 163

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

12.3.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu
Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

1. Call up the desired parameter.
2. On the right in the working area, mouse over the parameter.
↳ A tool tip with remedy information for the diagnostic event appears.

12.4 Adapting the diagnostic information

12.4.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for certain diagnostic information in the **Diagnostic behavior** submenu.

"Expert" menu → System → Diagnostic handling → Diagnostic behavior

12.4.2 Adapting the status signal

Each item of diagnostic information is assigned a specific status signal at the factory. The user can change this assignment for certain diagnostic information in the **Diagnostic event category** submenu.

"Expert" menu → Communication → Diagnostic event category

Available status signals

Configuration as per FOUNDATION Fieldbus Specification (FF912), in accordance with NAMUR NE107.

Symbol	Meaning
F <small>A0013956</small>	Failure A device error has occurred. The measured value is no longer valid.
C <small>A0013959</small>	Function check The device is in service mode (e.g. during a simulation).
S <small>A0013958</small>	Out of specification The device is operated: <ul style="list-style-type: none"> ■ Outside its technical specification limits (e.g. outside the process temperature range) ■ Outside of the configuration carried out by the user (e.g. maximum flow in parameter 20 mA value)
M <small>A0013957</small>	Maintenance required Maintenance is required. The measured value remains valid.

Enabling the configuration of the diagnostic information according to FF912

For compatibility reasons, the configuration of the diagnostic information according to FOUNDATION Fieldbus Specification FF912 is not enabled when the device is delivered from the factory.

Enabling the configuration of the diagnostic information according to FOUNDATION Fieldbus Specification FF912

1. Open the Resource Block.
2. In the **FEATURE_SEL** parameter select the **Multi-bit Alarm Support** option.
 - ↳ The diagnostic information can be configured according to FOUNDATION Fieldbus Specification FF912.


Grouping the diagnostic information

Diagnostic information is assigned to different groups. The groups differ depending on the weighting (severity) of the diagnostic event:



- Highest weighting
- High weighting
- Low weighting

Assignment of the diagnostic information (default value)

The assignment of the diagnostic information ex-works is indicated in the following tables.

The individual ranges of the diagnostic information can be assigned to another status signal →  136.

Some diagnostic information can be assigned individually, irrespective of their range →  137

 Overview and description of all diagnostic information →  138

Weighting	Status signal (factory setting)	Allocation	Diagnostic information range
Highest weighting	Failure (F)	Sensor	F000 to 199
		Electronics	F200 to 399
		Configuration	F400 to 700
		Process	F800 to 999



Weighting	Status signal (factory setting)	Allocation	Diagnostic information range
High weighting	Function check (C)	Sensor	C000 to 199
		Electronics	C200 to 399
		Configuration	C400 to 700
		Process	C800 to 999

Weighting	Status signal (factory setting)	Allocation	Diagnostic information range
Low weighting	Out of specification (S)	Sensor	S000 to 199
		Electronics	S200 to 399
		Configuration	S400 to 700
		Process	S800 to 999

Weighting	Status signal (factory setting)	Allocation	Diagnostic information range
Low weighting	Maintenance required (M)	Sensor	M000 to 199
		Electronics	M200 to 399
		Configuration	M400 to 700
		Process	M800 to 999

Changing the assignment of the diagnostic information

 
The individual ranges of the diagnostic information can be assigned to another status signal. This is done by changing the bit in the associated parameter. The bit change always applies for the entire range of the diagnostic information.

 Some diagnostic information can be assigned individually, irrespective of their range
→  137

Each status signal has a parameter in the Resource Block in which it is possible to define the diagnostic event for which the status signal is transmitted:

- Failure (F): **FD_FAIL_MAP** parameter
- Function check (C): **FD_CHECK_MAP** parameter
- Out of specification (S): **FD_OFFSPEC_MAP** parameter
- Maintenance required (M): **FD_MAINT_MAP** parameter

Structure and assignment of the parameters for the status signals (factory setting)

Weighting	Allocation	Bit	FD_FAIL_MAP	FD_CHECK_MAP	FD_OFFSPEC_MAP	FD_MAINT_MAP
Highest weighting	Sensor	31	1	0	0	0
	Electronics	30	1	0	0	0
	Configuration	29	1	0	0	0
	Process	28	1	0	0	0
High weighting	Sensor	27	0	1	0	0
	Electronics	26	0	1	0	0
	Configuration	25	0	1	0	0
	Process	24	0	1	0	0
Low weighting	Sensor	23	0	0	1	0
	Electronics	22	0	0	1	0
	Configuration	21	0	0	1	0
	Process	20	0	0	1	0
Low weighting	Sensor	19	0	0	0	1
	Electronics	18	0	0	0	1
	Configuration	17	0	0	0	1
	Process	16	0	0	0	1
Configurable range →  137		15 to 1	0	0	0	0
Reserved (Fieldbus Foundation)		0	0	0	0	0

Changing the status signal for a range of diagnostic information

Example: The status signal for the diagnostic information for electronics with the "Highest weighting" is to be changed from failure (F) to function check (C).


1. Set the Resource Block to the **OOS** block mode.
2. Open the **FD_FAIL_MAP** parameter in the Resource Block.
3. Change **Bit 30** to **0** in the parameter.
4. Open the **FD_CHECK_MAP** parameter in the Resource Block.
5. Change **Bit 26** to **1** in the parameter.
 - ↳ If a diagnostic event occurs for electronics with the "Highest weighting", the diagnostic information to this effect is displayed with the function check (C) status signal.
6. Set the Resource Block to the **AUTO** block mode.

NOTICE

No status signal is assigned to an area of diagnostic information.

If a diagnostic event occurs in this area, no status signal is transmitted to the control system.

- ▶ If you are changing the parameters, make sure that a status signal is assigned to all areas.


 If FieldCare is used, the status signal is enabled/disabled using the check box of the particular parameter.

Assigning diagnostic information individually to a status signal

Some diagnostic information can be individually assigned to a status signal, irrespective of their original range.

Assigning diagnostic information individually to a status signal via FieldCare

1. In the FieldCare navigation window: **Expert** → **Communication** → **Field diagnostics** → **Alarm detection enable**
2. Select the desired diagnostic information from one of the fields **Configurable Area Bits 1** to **Configurable Area Bits 15**.
3. Press Enter to confirm.
4. When selecting the desired status signal (e.g. Offspec Map), also select the **Configurable Area Bit 1** to **Configurable Area Bit 15** that was assigned previously to the diagnostic information (step 2).
5. Press Enter to confirm.
 - ↳ The diagnostic event of the selected diagnostic information is recorded.
6. In the FieldCare navigation window: **Expert** → **Communication** → **Field diagnostics** → **Alarm broadcast enable**
7. Select the desired diagnostic information from one of the fields **Configurable Area Bits 1** to **Configurable Area Bits 15**.
8. Press Enter to confirm.
9. When selecting the desired status signal (e.g. Offspec Map), also select the **Configurable Area Bit 1** to **Configurable Area Bit 15** that was assigned previously to the diagnostic information (step 7).
10. Press Enter to confirm.
 - ↳ The selected diagnostic information is transmitted over the bus when a diagnostic event to this effect occurs.

 A status signal change does not affect diagnostic information that already exists. The new status signal is only assigned if this error occurs again after the change has been made.

Transmitting the diagnostic information over the bus

Prioritizing diagnostic information for transmission over the bus

Diagnostic information is only transmitted over the bus if its priority is between 2 and 15. Priority 1-events are displayed but are not transmitted over the bus. Diagnostic information with priority 0 (default value) is ignored.


It is possible to change the priority individually for the different status signals. The following parameters of the Resource Block are used for this purpose:


- FD_FAIL_PRI
- FD_CHECK_PRI
- FD_OFFSPEC_PRI
- FD_MAINT_PRI

Suppressing certain diagnostic information

It is possible to suppress certain events during transmission over the bus using a mask. While these events are displayed they are not transmitted over the bus. This mask is in FieldCare **Expert** → **Communication** → **Field diagnostics** → **Alarm broadcast enable**. The mask is a negative selection mask, i.e. if a field is selected the associated diagnostic information is not transmitted over the bus.

12.5 Overview of diagnostic information

 The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.

-  Operating conditions for displaying the following diagnostics information:
- Diagnostics information 871: The process temperature is less than 2K from the saturated steam line.
 - Diagnostics information 872: The measured steam quality has dropped below the configured limit value for the steam quality (limit value: "Expert" menu → System → Diagnostic handling → Diagnostic limits → Steam quality limit).
 - Diagnostics information 873: The process temperature is $\leq 0^{\circ}\text{C}$.

12.5.1 Diagnostic of sensor

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
004	Sensor defective		1. Check plug connections 2. Change pre-amplifier 3. Change DSC sensor	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Sensor failure		
	Status signal [from the factory] ¹⁾	F		
Diagnostic behavior	Alarm			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
022	Temperature sensor defective		1. Check plug connections 2. Change pre-amplifier 3. Change DSC sensor	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Heat flow difference■ Mass flow■ Condensate mass flow■ Total mass flow■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature
	Measured variable status [from the factory] ¹⁾			
	Quality	Bad		
	Quality substatus	Sensor failure		
	Status signal [from the factory] ²⁾	F		
Diagnostic behavior [from the factory] ³⁾	Alarm			

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
046	Sensor limit exceeded		1. Check plug connections 2. Change pre-amplifier 3. Change DSC sensor	<ul style="list-style-type: none">▪ Calculated saturated steam pressure▪ Energy flow▪ Flow velocity▪ Heat flow difference▪ Low flow cut off▪ Mass flow▪ Condensate mass flow▪ Total mass flow▪ Switch output status▪ Reynolds number▪ Corrected volume flow▪ Steam quality▪ Volume flow
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	S		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
062	Sensor connection defective		1. Check plug connections 2. Change pre-amplifier 3. Change DSC sensor	<ul style="list-style-type: none">▪ Calculated saturated steam pressure▪ Energy flow▪ Flow velocity▪ Heat flow difference▪ Low flow cut off▪ Mass flow▪ Condensate mass flow▪ Total mass flow▪ Switch output status▪ Reynolds number▪ Corrected volume flow▪ Steam quality▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Sensor failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
082	Data storage		1. Change main electronic module 2. Change sensor	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Sensor failure		
	Status signal [from the factory] ¹⁾	F		
Diagnostic behavior	Alarm			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
083	Memory content		1. Restart device 2. Restore S-Dat data 3. Change sensor	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Sensor failure		
	Status signal [from the factory] ¹⁾	F		
Diagnostic behavior	Alarm			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
114	Sensor leaky		Change DSC sensor	<ul style="list-style-type: none">▪ Calculated saturated steam pressure▪ Energy flow▪ Flow velocity▪ Heat flow difference▪ Low flow cut off▪ Mass flow▪ Condensate mass flow▪ Total mass flow▪ Switch output status▪ Reynolds number▪ Corrected volume flow▪ Steam quality▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Sensor failure		
	Status signal [from the factory] ¹⁾	F		
Diagnostic behavior	Alarm			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
122	Temperature sensor defective		1. Check plug connections 2. Change pre-amplifier 3. Change DSC sensor	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Heat flow difference■ Mass flow■ Condensate mass flow■ Total mass flow■ Corrected volume flow■ Steam quality■ Temperature
	Measured variable status [from the factory] ¹⁾			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	M		
	Diagnostic behavior [from the factory] ³⁾	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

12.5.2 Diagnostic of electronic

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
242	Software incompatible		1. Check software 2. Flash or change main electronics module	<ul style="list-style-type: none">▪ Calculated saturated steam pressure▪ Energy flow▪ Flow velocity▪ Heat flow difference▪ Low flow cut off▪ Mass flow▪ Condensate mass flow▪ Total mass flow▪ Switch output status▪ Reynolds number▪ Corrected volume flow▪ Steam quality▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
252	Modules incompatible		1. Check electronic modules 2. Change I/O or main electronic module	<ul style="list-style-type: none">▪ Calculated saturated steam pressure▪ Energy flow▪ Flow velocity▪ Heat flow difference▪ Low flow cut off▪ Mass flow▪ Condensate mass flow▪ Total mass flow▪ Switch output status▪ Reynolds number▪ Corrected volume flow▪ Steam quality▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
261	Electronic modules		1. Restart device 2. Check electronic modules 3. Change I/O Modul or main electronics	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
Diagnostic behavior	Alarm			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
262	Module connection		1. Check module connections 2. Change electronic modules	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
Diagnostic behavior	Alarm			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
270	Main electronic failure		Change main electronic module	<ul style="list-style-type: none">▪ Calculated saturated steam pressure▪ Energy flow▪ Flow velocity▪ Heat flow difference▪ Low flow cut off▪ Mass flow▪ Condensate mass flow▪ Total mass flow▪ Switch output status▪ Reynolds number▪ Corrected volume flow▪ Steam quality▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
271	Main electronic failure		1. Restart device 2. Change main electronic module	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
Diagnostic behavior	Alarm			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
272	Main electronic failure		1. Restart device 2. Contact service	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
Diagnostic behavior	Alarm			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
273	Main electronic failure		1. Emergency operation via display 2. Change main electronics	<ul style="list-style-type: none">▪ Calculated saturated steam pressure▪ Energy flow▪ Flow velocity▪ Heat flow difference▪ Low flow cut off▪ Mass flow▪ Condensate mass flow▪ Total mass flow▪ Switch output status▪ Reynolds number▪ Corrected volume flow▪ Steam quality▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
Diagnostic behavior	Alarm			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
275	I/O module failure		Change I/O module	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
276	I/O module failure		1. Restart device 2. Change I/O module	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
277	Electronics defective		1. Change pre-amplifier 2. Change main electronic module	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
282	Data storage		1. Restart device 2. Contact service	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
Diagnostic behavior	Alarm			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
283	Memory content		1. Transfer data or reset device 2. Contact service	<ul style="list-style-type: none">▪ Calculated saturated steam pressure▪ Energy flow▪ Flow velocity▪ Heat flow difference▪ Low flow cut off▪ Mass flow▪ Condensate mass flow▪ Total mass flow▪ Switch output status▪ Reynolds number▪ Corrected volume flow▪ Steam quality▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
302	Device verification active		Device verification active, please wait.	<ul style="list-style-type: none">▪ Calculated saturated steam pressure▪ Energy flow▪ Flow velocity▪ Heat flow difference▪ Low flow cut off▪ Mass flow▪ Condensate mass flow▪ Total mass flow▪ Switch output status▪ Corrected volume flow▪ Steam quality▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	C		
Diagnostic behavior	Warning			

1) Status signal can be changed.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
311	Electronic failure	1. Transfer data or reset device 2. Contact service	<ul style="list-style-type: none"> Calculated saturated steam pressure Energy flow Flow velocity Heat flow difference Low flow cut off Mass flow Condensate mass flow Total mass flow Switch output status Reynolds number Corrected volume flow Steam quality Temperature Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Status signal [from the factory] ¹⁾		
	Diagnostic behavior		
	Bad		
	Device failure		
	F		
	Alarm		

1) Status signal can be changed.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
311	Electronic failure	Maintenance required! 1. Do not perform reset 2. Contact service	<ul style="list-style-type: none"> Calculated saturated steam pressure Energy flow Flow velocity Heat flow difference Low flow cut off Mass flow Condensate mass flow Total mass flow Switch output status Reynolds number Corrected volume flow Steam quality Temperature Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Status signal [from the factory] ¹⁾		
	Diagnostic behavior		
	Bad		
	Device failure		
	M		
	Warning		

1) Status signal can be changed.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
350	Pre-amplifier defective	Change pre-amplifier	<ul style="list-style-type: none"> Calculated saturated steam pressure Energy flow Flow velocity Heat flow difference Low flow cut off Mass flow Condensate mass flow Total mass flow Switch output status Reynolds number Corrected volume flow Steam quality Temperature Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Status signal [from the factory] ²⁾		
	Diagnostic behavior [from the factory] ³⁾		
	Bad		
	Device failure		
	F		
	Alarm		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
351	Pre-amplifier defective		Change pre-amplifier	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
Diagnostic behavior	Alarm			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
370	Pre-amplifier defective		1. Check plug connections 2. Check cabel connection of remote version 3. Change pre-amplifier or main electronic module	<ul style="list-style-type: none">▪ Calculated saturated steam pressure▪ Energy flow▪ Flow velocity▪ Heat flow difference▪ Low flow cut off▪ Mass flow▪ Condensate mass flow▪ Total mass flow▪ Switch output status▪ Reynolds number▪ Corrected volume flow▪ Steam quality▪ Temperature▪ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ¹⁾	F		
Diagnostic behavior	Alarm			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
371	Temperature sensor defective		1. Check plug connections 2. Change pre-amplifier 3. Change DSC sensor	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Bad		
	Quality substatus	Device failure		
	Status signal [from the factory] ²⁾	M		
Diagnostic behavior [from the factory] ³⁾	Warning			

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

12.5.3 Diagnostic of configuration

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
410	Data transfer		1. Check connection 2. Retry data transfer	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Configuration error		
	Status signal [from the factory] ¹⁾	F		
Diagnostic behavior	Alarm			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
412	Processing Download		Download active, please wait	–
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	C		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
437	Configuration incompatible		1. Restart device 2. Contact service	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Configuration error		
	Status signal [from the factory] ¹⁾	F		
Diagnostic behavior	Alarm			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
438	Dataset		1. Check data set file 2. Check device configuration 3. Up- and download new configuration	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Uncertain		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	M		
Diagnostic behavior	Warning			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
442	Frequency output		1. Check process 2. Check frequency output settings	–
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	S		
Diagnostic behavior [from the factory] ²⁾	Warning			

1) Status signal can be changed.

2) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
443	Pulse output		1. Check process 2. Check pulse output settings	–
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	S		
Diagnostic behavior [from the factory] ²⁾	Warning			

1) Status signal can be changed.

2) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
453	Flow override		Deactivate flow override	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	C		
Diagnostic behavior	Warning			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
482	Block in OOS		Set Block in AUTO mode	–
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
484	Simulation failure mode		Deactivate simulation	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Configuration error		
	Status signal [from the factory] ¹⁾	C		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
485	Simulation measured variable		Deactivate simulation	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	C		
Diagnostic behavior	Warning			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
492	Simulation frequency output		Deactivate simulation frequency output	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	C		
Diagnostic behavior	Warning			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
493	Simulation pulse output		Deactivate simulation pulse output	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Good		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	C		
Diagnostic behavior	Warning			

1) Status signal can be changed.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
494	Switch output simulation	Deactivate simulation switch output	<ul style="list-style-type: none"> ■ Calculated saturated steam pressure ■ Energy flow ■ Flow velocity ■ Heat flow difference ■ Low flow cut off ■ Mass flow ■ Condensate mass flow ■ Total mass flow ■ Switch output status ■ Corrected volume flow ■ Steam quality ■ Temperature ■ Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Status signal [from the factory] ¹⁾		
	Diagnostic behavior		

1) Status signal can be changed.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
495	Simulation diagnostic event	Deactivate simulation	–
	Measured variable status		
	Quality		
	Quality substatus		
	Status signal [from the factory] ¹⁾		
	Diagnostic behavior		

1) Status signal can be changed.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
497	Simulation block output	Deactivate simulation	–
	Measured variable status		
	Quality		
	Quality substatus		
	Status signal [from the factory] ¹⁾		
	Diagnostic behavior		

1) Status signal can be changed.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
538	Flow computer configuration incorrect	Check input value (pressure, temperature)	<ul style="list-style-type: none"> Calculated saturated steam pressure Energy flow Heat flow difference Low flow cut off Mass flow Condensate mass flow Total mass flow Switch output status Corrected volume flow Steam quality
	Measured variable status		
	Quality		
	Quality substatus		
	Status signal [from the factory] ¹⁾		
	Diagnostic behavior		

1) Status signal can be changed.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
539	Flow computer configuration incorrect	1. Check input value (pressure, temperature) 2. Check allowed values of the medium properties	<ul style="list-style-type: none"> Calculated saturated steam pressure Energy flow Flow velocity Heat flow difference Low flow cut off Mass flow Condensate mass flow Total mass flow Switch output status Reynolds number Corrected volume flow Steam quality Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Status signal [from the factory] ¹⁾		
	Diagnostic behavior		

1) Status signal can be changed.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
540	Flow computer configuration incorrect	Check entered reference value using the document Operating Instructions	<ul style="list-style-type: none"> Calculated saturated steam pressure Energy flow Heat flow difference Low flow cut off Mass flow Condensate mass flow Total mass flow Switch output status Corrected volume flow Steam quality
	Measured variable status		
	Quality		
	Quality substatus		
	Status signal [from the factory] ¹⁾		
	Diagnostic behavior		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
570	Inverted delta heat		Check configuration of mounting location (parameter Installation direction)	Heat flow difference
	Measured variable status			
	Quality	Bad		
	Quality substatus	Configuration error		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

12.5.4 Diagnostic of process

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
801	Supply voltage too low		Increase supply voltage	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Uncertain		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	S		
Diagnostic behavior	Warning			

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
825	Operating temperature		1. Check ambient temperature 2. Check process temperature	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
828	Ambient temperature too low		Increase ambient temperature of pre-amplifier	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Uncertain		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	S		
Diagnostic behavior [from the factory] ³⁾	Warning			

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
829	Ambient temperature too high		Reduce ambient temperature of pre-amplifier	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Uncertain		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	S		
Diagnostic behavior [from the factory] ³⁾	Warning			

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
832	Electronic temperature too high		Reduce ambient temperature	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Uncertain		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	S		
	Diagnostic behavior [from the factory] ³⁾	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
833	Electronic temperature too low		Increase ambient temperature	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Uncertain		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	S		
	Diagnostic behavior [from the factory] ³⁾	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
834	Process temperature too high		Reduce process temperature	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Uncertain		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	S		
Diagnostic behavior [from the factory] ³⁾	Warning			

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
835	Process temperature too low		Increase process temperature	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Uncertain		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	S		
Diagnostic behavior [from the factory] ³⁾	Warning			

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
841	Flow velocity too high		Reduce flow velocity	<ul style="list-style-type: none">▪ Calculated saturated steam pressure▪ Energy flow▪ Flow velocity▪ Heat flow difference▪ Low flow cut off▪ Mass flow▪ Condensate mass flow▪ Total mass flow▪ Switch output status▪ Reynolds number▪ Corrected volume flow▪ Steam quality▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Uncertain		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	S		
Diagnostic behavior [from the factory] ³⁾	Warning			

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
842	Process limit	Low flow cut off active! 1. Check low flow cut off configuration	<ul style="list-style-type: none"> Calculated saturated steam pressure Energy flow Flow velocity Heat flow difference Low flow cut off Mass flow Condensate mass flow Total mass flow Switch output status Reynolds number Corrected volume flow Steam quality Temperature Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Status signal [from the factory] ¹⁾		
	Diagnostic behavior		

1) Status signal can be changed.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
844	Sensor range exceeded	Reduce flow velocity	<ul style="list-style-type: none"> Calculated saturated steam pressure Energy flow Flow velocity Heat flow difference Low flow cut off Mass flow Condensate mass flow Total mass flow Switch output status Reynolds number Corrected volume flow Steam quality Volume flow
	Measured variable status [from the factory] ¹⁾		
	Quality		
	Quality substatus		
	Status signal [from the factory] ²⁾		
	Diagnostic behavior [from the factory] ³⁾		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

Diagnostic information		Remedy instructions	Influenced measured variables
No.	Short text		
862	Partly filled pipe	1. Check for gas in process 2. Adjust detection limits	<ul style="list-style-type: none"> Calculated saturated steam pressure Energy flow Flow velocity Heat flow difference Low flow cut off Mass flow Condensate mass flow Total mass flow Switch output status Corrected volume flow Steam quality Temperature Volume flow
	Measured variable status		
	Quality		
	Quality substatus		
	Status signal [from the factory] ¹⁾		
	Diagnostic behavior		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
870	Measuring inaccuracy increased		1. Check process 2. Increase flow volume	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Uncertain		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	S		
	Diagnostic behavior [from the factory] ³⁾	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
871	Near steam saturation limit		Check process conditions	<ul style="list-style-type: none">▪ Calculated saturated steam pressure▪ Energy flow▪ Heat flow difference▪ Low flow cut off▪ Mass flow▪ Condensate mass flow▪ Total mass flow▪ Switch output status▪ Corrected volume flow▪ Steam quality
	Measured variable status [from the factory] ¹⁾			
	Quality	Uncertain		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	S		
	Diagnostic behavior [from the factory] ³⁾	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
872	Wet steam detected		1. Check process 2. Check plant	<ul style="list-style-type: none">▪ Energy flow▪ Heat flow difference▪ Low flow cut off▪ Condensate mass flow▪ Total mass flow▪ Switch output status▪ Corrected volume flow▪ Steam quality
	Measured variable status [from the factory] ¹⁾			
	Quality	Uncertain		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	S		
	Diagnostic behavior [from the factory] ³⁾	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
873	No steam detected		Check process (water in piping)	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Corrected volume flow■ Steam quality
	Measured variable status [from the factory] ¹⁾			
	Quality	Uncertain		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	S		
	Diagnostic behavior [from the factory] ³⁾	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
874	Wet steam detection uncertain		1. Check pressure, temperature 2. Check flow velocity 3. Check for flow fluctuation	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Corrected volume flow■ Steam quality
	Measured variable status			
	Quality	Uncertain		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	S		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
882	Input signal		1. Check input configuration 2. Check external device or process conditions	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Temperature■ Volume flow
	Measured variable status			
	Quality	Bad		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	F		
	Diagnostic behavior	Alarm		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
945	Sensor range exceeded		Check immediately process conditions (pressure-temperature rating)	<ul style="list-style-type: none">■ Calculated saturated steam pressure■ Energy flow■ Flow velocity■ Heat flow difference■ Low flow cut off■ Mass flow■ Condensate mass flow■ Total mass flow■ Switch output status■ Reynolds number■ Corrected volume flow■ Steam quality■ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Uncertain		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	S		
	Diagnostic behavior [from the factory] ³⁾	Warning		

1) Quality can be changed. This causes the overall status of the measured variable to change.

2) Status signal can be changed.

3) Diagnostic behavior can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
946	Vibration detected		Check installation	<ul style="list-style-type: none">▪ Calculated saturated steam pressure▪ Energy flow▪ Flow velocity▪ Heat flow difference▪ Low flow cut off▪ Mass flow▪ Condensate mass flow▪ Total mass flow▪ Switch output status▪ Reynolds number▪ Corrected volume flow▪ Steam quality▪ Volume flow
	Measured variable status			
	Quality	Uncertain		
	Quality substatus	Non specific		
	Status signal [from the factory] ¹⁾	S		
	Diagnostic behavior	Warning		

1) Status signal can be changed.

Diagnostic information			Remedy instructions	Influenced measured variables
No.	Short text			
947	Vibration exceeded		Check installation	<ul style="list-style-type: none">▪ Calculated saturated steam pressure▪ Energy flow▪ Flow velocity▪ Heat flow difference▪ Low flow cut off▪ Mass flow▪ Condensate mass flow▪ Total mass flow▪ Switch output status▪ Reynolds number▪ Corrected volume flow▪ Steam quality▪ Volume flow
	Measured variable status [from the factory] ¹⁾			
	Quality	Bad		
	Quality substatus	Non specific		
	Status signal [from the factory] ²⁾	S		
	Diagnostic behavior [from the factory] ³⁾	Alarm		




1) Quality can be changed. This causes the overall status of the measured variable to change.



2) Status signal can be changed.

3) Diagnostic behavior can be changed.

12.6 Pending diagnostic events


The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

-  To call up the measures to rectify a diagnostic event:
- Via local display →  132
 - Via "FieldCare" operating tool →  134


-  Other pending diagnostic events can be displayed in the **Diagnostic list** submenu →  163

Navigation
"Diagnostics" menu

Structure of the submenu

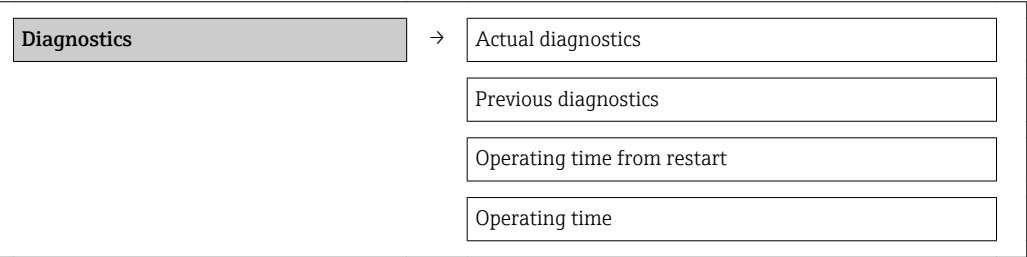

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occurred diagnostic event along with its diagnostic information.  If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	Symbol for diagnostic behavior, diagnostic code and short message.
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	–	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	–	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

12.7 Diagnostic messages in the DIAGNOSTIC Transducer Block


- The **Actual Diagnostics** parameter shows the message with the highest priority.
- You can view a list of the active alarms via the **Diagnostics 1** to **Diagnostics 5** parameters. If more than 5 messages are pending, the messages with the highest priority are shown on the display.
- You can view the last alarm that is no longer active via the **Previous Diagnostics** parameter.

12.8 Diagnostic list

In the **Diagnostic list** submenu, up to 5 currently pending diagnostic events can be displayed along with the related diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path

Diagnostics menu → **Diagnostic list** submenu

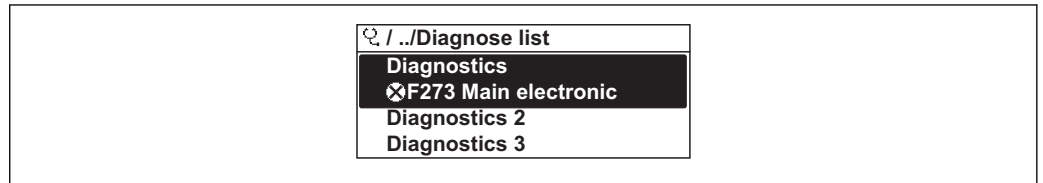

A0014006-EN

30 Taking the example of the local display




To call up the measures to rectify a diagnostic event:

- Via local display → 132
- Via "FieldCare" operating tool → 134

12.9 Event logbook

12.9.1 Event history

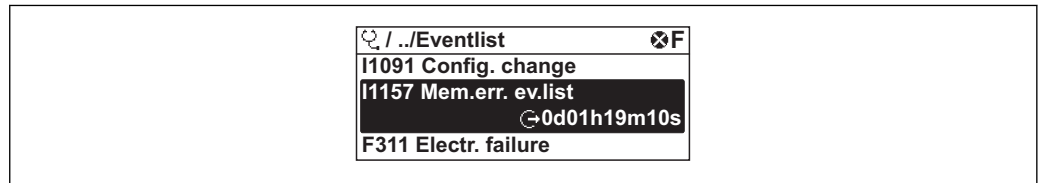

A0014008-EN

31 Taking the example of the local display



To call up the measures to rectify a diagnostic event:

- Via local display → 132
- Via "FieldCare" operating tool → 134



For filtering the displayed event messages → 163

12.9.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Events list** submenu.

Navigation path

"Diagnostics" menu → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.9.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
I1000	----- (Device ok)
I1079	Sensor changed
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	Trend data deleted
I1110	Write protection switch changed
I1137	Electronic changed
I1151	History reset
I1154	Reset terminal voltage min/max
I1155	Reset electronic temperature
I1156	Memory error trend
I1157	Memory error event list
I1185	Display backup done
I1186	Restore via display done
I1187	Settings downloaded with display
I1188	Display data cleared
I1189	Backup compared
I1227	Sensor emergency mode activated
I1228	Sensor emergency mode failed
I1256	Display: access status changed
I1264	Safety sequence aborted
I1335	Firmware changed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished

12.10 Resetting the measuring device

Using the **Restart** parameter it is possible to reset the entire device configuration or some of the configuration to a defined state.

Navigation

"Setup" menu → Advanced setup → Administration → Restart

```

graph TD
    Admin[Administration] --> Define[Define access code]
    Define --> DefineBox[Define access code]
    DefineBox --> ConfirmBox[Confirm access code]
    ConfirmBox --> Restart[Restart]
  
```

The diagram shows a hierarchical menu structure. At the top is a box labeled "► Administration". Below it, indented, is a box labeled "► Define access code". Below that, further indented, are two boxes: "Define access code" and "Confirm access code". At the bottom, at the same level as "Define access code", is a box labeled "Restart".

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Restart	Restart or reset device manually.	<ul style="list-style-type: none"> ■ Uninitialized ■ Run ■ Resource ■ Defaults ■ Processor ■ To factory defaults ■ To delivery settings ■ ENP restart ■ To transducer defaults ■ Factory Default Blocks 	Uninitialized

12.10.1 Function scope of the "Restart" parameter

Options	Description
Uninitialized	Has no effect on the device.
Run	Has no effect on the device.
Resource	Has no effect on the device.
Defaults	All FOUNDATION Fieldbus blocks are reset to their default values. Example: AI channel to the value "Uninitialized".
Processor	The device is restarted.
To factory defaults	The extended FOUNDATION Fieldbus parameters (FOUNDATION Fieldbus blocks, schedule information) and the device parameters are reset to the factory settings.
To delivery settings	The extended FOUNDATION Fieldbus parameters (FOUNDATION Fieldbus blocks, schedule information) and the device parameters are reset to the as-delivered settings.
ENP restart	The parameters of the electronic name plate are reset. The device is restarted.
To transducer defaults	Certain device parameters are reset. The parameters of the FOUNDATION Fieldbus blocks remain unchanged.
Factory Default Blocks	The extended FOUNDATION Fieldbus parameters (FOUNDATION Fieldbus blocks, schedule information) are reset to the default settings.

12.11 Device information

The **Device information** submenu contains all the parameters that display different information for identifying the device.

Navigation

"Diagnostics" menu → Device information

► Device information

Device tag

Serial number

Firmware version

Extended order code

Extended order code 1

Extended order code 2

Device type

Device Revision

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Serial number		A maximum of 11-digit character string comprising letters and numbers.	–
Firmware version		Character string in the format xx.yy	01.00
Device name		Prowirl	–
Order code		Character string composed of letters, numbers and certain punctuation marks (e.g. /).	–
Extended order code 1		Character string	–
Extended order code 2		Character string	–
Extended order code 3		Character string	–
ENP version		Character string	2.02.00

12.12 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
07.2014	01.00.zz	Option 74	Original firmware	Operating Instructions	BA01217D/06/EN/01.14



Flashing the firmware to the current version or to the previous version is possible via the service interface (CDI) .



For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.



The manufacturer's information is available:

- In the Downloads area of the Endress+Hauser web site: www.endress.com → Downloads
- Specify the following details:
 - Text search: Manufacturer's information
 - Media type: Documentation – Technical Documentation

13 Maintenance

13.1 Maintenance tasks

No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

13.1.2 Interior cleaning

NOTICE

The use of unsuitable equipment or cleaning liquids can damage the transducer.

- ▶ Do not use pigs to clean the pipe.

13.1.3 Replacing seals

Replacing sensor seals

NOTICE

Under normal circumstances, wetted seals must not be replaced.

Replacement is necessary only in special circumstances, for example if aggressive or corrosive fluids are incompatible with the seal material.

- ▶ The time span between the individual replacement procedures depends on the fluid properties.
- ▶ Only Endress+Hauser sensor seals may be used: replacement seals

Replacing housing seals

The housing seals must be clean and undamaged when inserted into their grooves. Dry, clean or replace the seals if necessary.

NOTICE

When the measuring device is used in a dusty atmosphere:

- ▶ only use the associated Endress+Hauser housing seals.

13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.



Your Endress+Hauser Sales Center can provide detailed information on the services.



For a list of some of the measuring and test equipment, refer to the "Accessories" chapter of the "Technical Information" document for the device.

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.



Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repair

14.1 General notes

Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by correspondingly trained customers.
- Certified devices can be converted into other certified devices by Endress+Hauser Service or at the factory only.

Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:


- Use only original Endress+Hauser spare parts.
- Carry out the repair according to the Installation Instructions.
- Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- Document every repair and each conversion and enter them into the *W@M* life cycle management database.

14.2 Spare parts

Some interchangeable measuring device components are listed on an overview sign in the connection compartment cover.

The spare part overview sign contains the following information:

- A list of the most important spare parts for the measuring device, including their ordering information.
- The URL for the *W@M Device Viewer* (www.endress.com/deviceviewer):
All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

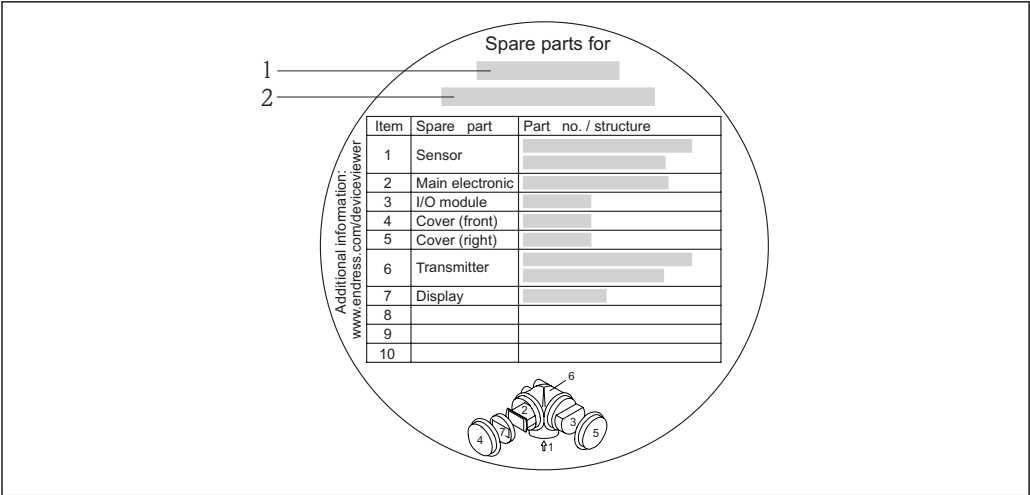

32 Example for "Spare part overview sign" in connection compartment cover

- 1 Measuring device name
- 2 Measuring device serial number

- Measuring device serial number:
 - Is located on the device nameplate and the spare part overview sign.
 - Can be read out via the **Serial number** parameter in the **Device information** submenu .

14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

- Your Endress+Hauser Sales Center can provide detailed information on the services.

14.4 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <http://www.endress.com/support/return-material>

14.5 Disposal

14.5.1 Removing the measuring device

- 1. Switch off the device.
- 2. **⚠ WARNING**
Danger to persons from process conditions.
 - Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.

Carry out the mounting and connection steps from the chapters "Mounting the measuring device" and "Connecting the measuring device" in the logically reverse sequence. Observe the safety instructions.

14.5.2 Disposing of the measuring device

WARNING

Danger to personnel and environment from fluids that are hazardous to health.

- ▶ Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:


 


- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.




15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Device-specific accessories

15.1.1 For the transmitter




Accessories	Description
Prowirl 200 transmitter	<p>Transmitter for replacement or storage. Use the order code to define the following specifications:</p> <ul style="list-style-type: none"> ■ Approvals ■ Output ■ Display / operation ■ Housing ■ Software <p> For details, see Installation Instructions EA01056D</p>
Remote display FHX50	<p>FHX50 housing for accommodating a display module →  201.</p> <ul style="list-style-type: none"> ■ FHX50 housing suitable for: <ul style="list-style-type: none"> – SD02 display module (push buttons) – SD03 display module (touch control) ■ Housing material: <ul style="list-style-type: none"> – Plastic PBT – Stainless steel CF-3M (316L, 1.4404) ■ Length of connecting cable: up to max. 60 m (196 ft) (cable lengths available for order: 5 m (16 ft), 10 m (32 ft), 20 m (65 ft), 30 m (98 ft)) <p>The measuring device can be ordered with the FHX50 housing and a display module. The following options must be selected in the separate order codes:</p> <ul style="list-style-type: none"> ■ Order code for measuring device, feature 030: Option L or M "Prepared for FHX50 display" ■ Order code for FHX50 housing, feature 050 (device version): Option A "Prepared for FHX50 display" ■ Order code for FHX50 housing, depends on the desired display module in feature 020 (display, operation): <ul style="list-style-type: none"> – Option C: for an SD02 display module (push buttons) – Option E: for an SD03 display module (touch control) <p>The FHX50 housing can also be ordered as a retrofit kit. The measuring device display module is used in the FHX50 housing. The following options must be selected in the order code for the FHX50 housing:</p> <ul style="list-style-type: none"> ■ Feature 050 (measuring device version): option B "Not prepared for FHX50 display" ■ Feature 020 (display, operation): option A "None, existing displayed used" <p> For details, see Special Documentation SD01007F</p> <p>(Order number: FHX50)</p>
Overvoltage protection for 2-wire devices	<p>Ideally, the overvoltage protection module should be ordered directly with the device. See product structure, characteristic 610 "Accessory mounted", option NA "Overvoltage protection". Separate order necessary only if retrofitting.</p> <ul style="list-style-type: none"> ■ OVP10: For 1-channel devices (characteristic 020, option A): ■ OVP20: For 2-channel devices (characteristic 020, options B, C, E or G) <p> For details, see Special Documentation SD01090F.</p>

Weather protection cover	<p>Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight or extreme cold in winter.</p> <p> For details, see Special Documentation SD00333F</p>
Connecting cable for remote version	<ul style="list-style-type: none"> Connecting cable available in various lengths: <ul style="list-style-type: none"> – 5 m (16 ft) – 10 m (32 ft) – 20 m (65 ft) – 30 m (98 ft) Reinforced cables available on request. <p> Standard length: 5 m (16 ft) Is always supplied if no other cable length has been ordered.</p>
Post mounting kit	<p>Post mounting kit for transmitter.</p> <p> The post mounting kit can only be ordered together with a transmitter.</p> <p>(Order number: DK8WM-B)</p>

15.1.2 For the sensor



Accessories	Description
Flow conditioner	<p>Is used to shorten the necessary inlet run.</p> <p>(Order number: DK7ST)</p>

15.2 Communication-specific accessories




Accessories	Description
Commubox FXA291	<p>Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop.</p> <p> For details, see the "Technical Information" document TI405C/07</p>
Field Xpert SFX350	<p>Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the non-Ex area.</p> <p> For details, see Operating Instructions BA01202S</p>
Field Xpert SFX370	<p>Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the non-Ex area and the Ex area.</p> <p> For details, see Operating Instructions BA01202S</p>

15.3 Service-specific accessories

Accessories	Description
Applicator	<p>Software for selecting and sizing Endress+Hauser measuring devices:</p> <ul style="list-style-type: none"> Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, accuracy or process connections. Graphic illustration of the calculation results <p>Administration, documentation and access to all project-related data and parameters throughout the entire life cycle of a project.</p> <p>Applicator is available:</p> <ul style="list-style-type: none"> Via the Internet: https://wapps.endress.com/applicator On CD-ROM for local PC installation.

W@M	<p>Life cycle management for your plant</p> <p>W@M supports you with a wide range of software applications over the entire process: from planning and procurement, to the installation, commissioning and operation of the measuring devices. All the relevant device information, such as the device status, spare parts and device-specific documentation, is available for every device over the entire life cycle.</p> <p>The application already contains the data of your Endress+Hauser device. Endress+Hauser also takes care of maintaining and updating the data records.</p> <p>W@M is available:</p> <ul style="list-style-type: none"> ■ Via the Internet: www.endress.com/lifecyclemanagement ■ On CD-ROM for local PC installation.
FieldCare	<p>FDT-based plant asset management tool from Endress+Hauser.</p> <p>It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.</p> <p> For details, see Operating Instructions BA00027S and BA00059S</p>
DeviceCare	<p>Tool for connecting and configuring Endress+Hauser field devices.</p> <p> For details, see Innovation brochure IN01047S</p>

15.4 System components

Accessories	Description
Memograph M graphic display recorder	<p>The Memograph M graphic display recorder provides information on all relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.</p> <p> For details, see "Technical Information" TI00133R and Operating Instructions BA00247R</p>
Cerabar M	<p>The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.</p> <p> For details, see "Technical Information" TI00426P, TI00436P and Operating Instructions BA00200P, BA00382P</p>
Cerabar S	<p>The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.</p> <p> For details, see "Technical Information" TI00383P and Operating Instructions BA00271P</p>


16 Technical data

16.1 Application

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are adequately resistant.

16.2 Function and system design

Measuring principle	Vortex meters work on the principle of the <i>Karman vortex street</i> .
Measuring system	<p>The device consists of a transmitter and a sensor.</p> <p>Two device versions are available:</p> <ul style="list-style-type: none"> ■ Compact version – transmitter and sensor form a mechanical unit. ■ Remote version - transmitter and sensor are mounted in separate locations. <p>For information on the structure of the device →  11</p>

16.3 Input

Measured variable	<p>Direct measured variables</p> <p>Order code for "Sensor version":</p> <ul style="list-style-type: none"> ■ Option 1 "Volume flow, basis" and ■ Option 2 "Volume flow, high-temperature/low temperature": Volume flow <p>Order code for "Sensor version":</p> <p>Option 3 "Mass flow (integrated temperature measurement)":</p> <ul style="list-style-type: none"> – Volume flow – Temperature <p>Calculated measured variables</p> <p>Order code for "Sensor version":</p> <ul style="list-style-type: none"> ■ Option 1 "Volume flow, basis" and ■ Option 2 "Volume flow, high-temperature/low temperature": <ul style="list-style-type: none"> – In the case of constant process conditions: Mass flow ¹⁾ or Corrected volume flow – The totalized values for Volume flow, Mass flow ¹⁾, or Corrected volume flow <p>Order code for "Sensor version":</p> <p>Option 3 "Mass flow (integrated temperature measurement)":</p> <ul style="list-style-type: none"> – Corrected volume flow – Mass flow – Calculated saturated steam pressure – Energy flow – Heat flow difference
-------------------	--

1) A fixed density must be entered for calculating the mass flow (Setup menu → Advanced setup submenu → External compensation submenu → Fixed density parameter).

Order code for "Sensor version", option "Mass flow (integrated temperature measurement)" combined with order code "Application package", EU "Wet steam measurement".

- Steam quality
- Total mass flow
- Condensate mass flow

Calculation of the measured variables

The meter electronics system of the Prowirl 200 unit with the order code "Sensor version", option 3 "Mass flow (integrated temperature measurement)" has a flow computer. This computer can calculate the following secondary measured variables directly from the primary measured variables recorded using the pressure value (entered or external) and/or temperature value (measured or entered).

Mass flow and corrected volume flow

Medium	Fluid	Standards	Explanation
Steam ¹⁾	Superheated steam ²⁾	IAPWS-IF97/ ASME	If integrated temperature measurement is provided and the pressure is constant, or if the pressure is read in via FOUNDATION Fieldbus
	Saturated steam		Possible with integrated temperature measurement
	Wet steam ³⁾		Steam with a steam quality of < 100 %
Gas	Single gas	NEL40	If the pressure is constant or if the pressure is read in via FOUNDATION Fieldbus
	Gas mixture	NEL40	
	Air	NEL40	
	Natural gas	ISO 12213-2	Contains AGA8-DC92 If the pressure is constant or if the pressure is read in via FOUNDATION Fieldbus
		AGA NX-19	If the pressure is constant or if the pressure is read in via FOUNDATION Fieldbus
		ISO 12213-3	Contains SGERG-88, AGA8 Gross Method 1 If the pressure is constant or if the pressure is read in via FOUNDATION Fieldbus
	Other gases	Linear equation	Ideal gases If the pressure is constant or if the pressure is read in via FOUNDATION Fieldbus
Liquids	Water	IAPWS-IF97/ ASME	
	Liquefied gas	Tables	Propane and butane mixture
	Other liquid	Linear equation	Ideal liquids

- 1) The calculated values (mass flow, corrected volume flow) refer to the specific steam states for which the measuring device has been programmed (superheated steam, saturated steam or wet steam).
- 2) If the steam state approaches the saturation curve, a warning is displayed (2K; diagnostic number 871).
- 3) If the quality of the steam drops below 80%, a warning is displayed (diagnostic number 872).

Mass flow calculation

Volume flow × operating density

- Operating density for saturated steam, water and other liquids: depends on the temperature
- Operating density for superheated steam and all other gases: depends on the temperature and pressure

Corrected volume flow calculation

(Volume flow × operating density)/reference density

- Operating density for water and other liquids: depends on the temperature
- Operating density for all other gases: depends on the temperature and pressure


Energy flow

Medium	Fluid	Standards	Explanation	Heat/energy option
Steam ¹⁾	Superheated steam ²⁾	IAPWS-IF97/ASME	If the pressure is constant or if the pressure is read in via FOUNDATION Fieldbus	Heat Gross calorific value ³⁾ in relation to mass Net calorific value ⁴⁾ in relation to mass Gross calorific value ³⁾ in relation to corrected volume Net calorific value ⁴⁾ in relation to corrected volume
	Saturated steam			
	Wet steam ⁵⁾			
Gas	Single gas	ISO 6976	Contains GPA 2172 If the pressure is constant or if the pressure is read in via FOUNDATION Fieldbus	
	Gas mixture	ISO 6976	Contains GPA 2172 If the pressure is constant or if the pressure is read in via FOUNDATION Fieldbus	
	Air	NEL40	If the pressure is constant or if the pressure is read in via FOUNDATION Fieldbus	
	Natural gas	ISO 6976	Contains GPA 2172 If the pressure is constant or if the pressure is read in via FOUNDATION Fieldbus	
		AGA 5		
Liquids	Water	IAPWS-IF97/ASME		
	Liquefied gas	ISO 6976	Contains GPA 2172	
	Other liquid	Linear equation		



 
- 1) The calculated values (mass flow, corrected volume flow) refer to the specific steam states for which the measuring device has been programmed (superheated steam, saturated steam or wet steam).
- 2) If the steam state approaches the saturation curve, a warning is displayed (2K; diagnostic number 871).
- 3) Gross calorific value: combustion energy + condensation energy of the flue gas (gross calorific value > net calorific value)
- 4) Net calorific value: only combustion energy
- 5) If the quality of the steam drops below 80%, a warning is displayed (diagnostic number 872).

*Mass flow and energy flow calculation***NOTICE**

The process pressure (p) in the process pipe is required to calculate the process variables and the limit values of the measuring range.

- In the case of the FOUNDATION Fieldbus device, the process pressure can be read in from an external transmitter (e.g. Cerabar-M) via the MAO block or entered as a fixed value in the **External compensation** submenu (→  92).

The calculation is performed based on the following factors:

- Assuming superheated steam conditions the measuring device calculates until the saturation point is reached. The diagnostic message **△S871 Near steam saturation limit** is triggered at 2K above saturation →  138. This warning can be redefined as an alarm or switched off →  134.
- If the temperature drops further, the measuring device continues to calculate as far as a temperature of 0 °C (+32 °F) assuming saturated steam conditions. If the pressure is the preferred measured variable, the **Saturated steam** option must be selected in the **Select steam type** parameter (→  72) and the **Pressure** option must be selected in the **Saturated steam calculation mode** parameter (**Expert** menu → **Sensor** submenu → **Measurement mode** submenu → **Saturated steam calculation mode** parameter).



For detailed information about external compensation: →  92

Calculated value

The unit calculates the mass flow, heat flow, energy flow, density and specific enthalpy from the measured volume flow and the measured temperature and/or the pressure based on international standard IAPWS-IF97 (ASME steam data).

Formulae for calculation:

- Mass flow: $m = q \cdot \rho(T, p)$
- Heat quantity: $E = q \cdot \rho(T, p) \cdot h_D(T, p)$

m = Mass flow

E = Heat quantity

q = Volume flow (measured)

h_D = Specific enthalpy

T = Operating temperature (measured)

p = Process pressure

ρ = Density ²⁾

Pre-programmed gases

The following gases are pre-programmed in the flow computer:

Hydrogen ¹⁾	Helium 4	Neon	Argon
Krypton	Xenon	Nitrogen	Oxygen
Chlorine	Ammonia	Carbon monoxide ¹⁾	Carbon dioxide
Sulfur dioxide	Hydrogen sulfide ¹⁾	Hydrogen chloride	Methane ¹⁾
Ethane ¹⁾	Propane ¹⁾	Butane ¹⁾	Ethylene (ethene) ¹⁾
Vinyl chloride	Mixtures of up to 8 components of these gases ¹⁾		

- 1) The energy flow is calculated as per ISO 6976 (contains GPA 2172) or AGA5 - in relation to the net calorific value or gross calorific value .


Energy flow calculation

Volume flow × operating density × specific enthalpy

- Operating density for saturated steam and water: depends on the temperature
- Operating density for superheated steam, natural gas ISO 6976 (contains GPA 2172), natural gas AGA5: depends on the temperature and pressure

2) From steam data as per IAPWS-IF97 (ASME), for the measured temperature and the specified pressure

Heat flow difference

- Between saturated steam upstream from a heat exchanger and condensate downstream from the heat exchanger (second temperature read in via FOUNDATION Fieldbus) in accordance with IAPWS-IF97/ASME →  24.
- Between warm and cold water (second temperature read in via FOUNDATION Fieldbus) in accordance with IAPWS-IF97/ASME.

Vapor pressure and steam temperature

The measuring device can perform the following in saturated steam measurements between the feed line and return line of any heating liquid (second temperature read in via FOUNDATION Fieldbus and Cp value entered):

- Calculate the saturation pressure of the steam from the measured temperature and output the value in accordance with IAPWS-IF97/ASME.
- Calculate the saturation temperature of the steam from the specified pressure and output the value in accordance with IAPWS-IF97/ASME.

Saturated steam alarm


In applications involving the measurement of superheated steam, the measuring device can trigger a saturated steam alarm when the value approaches the saturation curve.

Total mass flow and condensate mass flow

- Using the steam quality entered, the measuring device can calculate the total mass flow and output it in the form of the proportion of gas and liquid.
- Using the steam quality entered, the measuring device can calculate the condensate mass flow and output it in the form of the proportion of liquid.



Measuring range

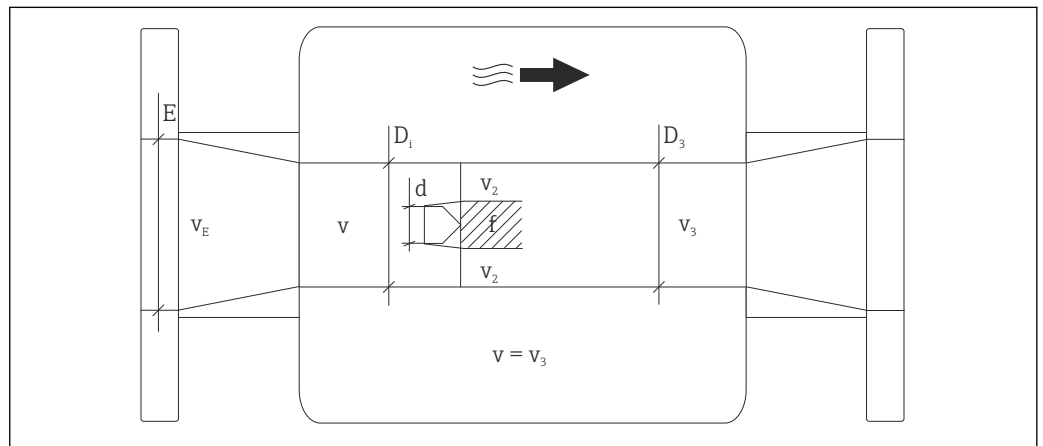The measuring range depends on the fluid and nominal diameter.

Flow velocity

A0027507

- E* DN diameter
v_E Velocity in process pipe
v Bluff body approaching flow velocity (*Re* is based on this)
v₂ Maximum velocity (applies only to oxygen) $v_2 = v_{max}$
v₃ Velocity when leaving the measuring device
D_i Internal diameter $D_i = D_3$
D₃ Internal diameter $D_3 = D_i$
d Width of bluff body
f Vortex shedding frequency

 The Applicator can be used for calculation purposes. →  173

Maximum volume flow	Strouhal number	Reynolds number
$Q_{\max(G)} = v_{\max} \cdot \frac{\pi}{4} D_i^2$ <small>A0027504</small>	$Sr = \frac{f \cdot d}{v}$ <small>A0027505</small>	$Re = \frac{\rho \cdot v \cdot D_i}{\mu}$ <small>A0027506</small>

Lower range value

Depends on the density of the medium and the Reynolds number ($Re_{\min} = 5\,000$, $Re_{\text{linear}} = 20\,000$). The Reynolds number is dimensionless and indicates the ratio of the inertia force of a fluid to its viscous force. It is used to characterize the flow. The Reynolds number is calculated as follows:

$$Re = \frac{4 \cdot Q \text{ [m}^3\text{/s]} \cdot \rho \text{ [kg/m}^3\text{]}}{\pi \cdot di \text{ [m]} \cdot \mu \text{ [Pa}\cdot\text{s]}} \quad Re = \frac{4 \cdot Q \text{ [ft}^3\text{/s]} \cdot \rho \text{ [lb/ft}^3\text{]}}{\pi \cdot di \text{ [ft]} \cdot \mu \text{ [0.001 cP]}}$$

A0003794

Re = Reynolds number; Q = flow; di = internal diameter; μ = dynamic viscosity, ρ = density

$$\begin{aligned} \text{DN 15...300} &\rightarrow v_{\min.} = \frac{6}{\sqrt{\rho \text{ [kg/m}^3\text{]}}} \text{ [m/s]} \\ \text{DN } \frac{1}{2}\text{...12"} &\rightarrow v_{\min.} = \frac{4.92}{\sqrt{\rho \text{ [lb/ft}^3\text{]}}} \text{ [ft/s]} \end{aligned}$$

A0003239

Upper range value

Liquids:

The upper range value must be calculated as follows:

$$v_{\max} = 9 \text{ m/s (30 ft/s)} \text{ and } v_{\max} = 350/\sqrt{\rho} \text{ m/s (130}/\sqrt{\rho} \text{ ft/s)}$$

► Use the lower value.

Gas/steam:

Nominal diameter	v_{\max}
Standard device: DN 15 (½")	46 m/s (151 ft/s) and $350/\sqrt{\rho}$ m/s ($130/\sqrt{\rho}$ ft/s) (Use the lower value.)
Standard device: DN 25 (1"), DN 40 (1½")	75 m/s (246 ft/s) and $350/\sqrt{\rho}$ m/s ($130/\sqrt{\rho}$ ft/s) (Use the lower value.)
Standard device: DN 50 to 300 (2 to 12")	120 m/s (394 ft/s) and $350/\sqrt{\rho}$ m/s ($130/\sqrt{\rho}$ ft/s) (Use the lower value.) Calibrated range: up to 75 m/s (246 ft/s)



For information on the Applicator → 173

Operable flow range

Up to 45: 1 (ratio between lower and upper range value)

Input signal

External measured values

To increase the accuracy of certain measured variables or to calculate the corrected volume flow, the automation system can continuously write different measured values to the measuring device:

- Operating pressure to increase accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S)
- Medium temperature to increase accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow



■ Various pressure transmitters can be ordered from Endress+Hauser: see "Accessories" section → 174

■ Please comply with the special mounting instructions when using pressure transmitters → 24

It is recommended to read in external measured values to calculate the following measured variables:

- Energy flow
- Mass flow
- Corrected volume flow

Fieldbuses

The measured values are written from the automation system to the measuring device via FOUNDATION Fieldbus.

16.4 Output

Output signal

Pulse/frequency/switch output

Function	Can be set to pulse, frequency or switch output
Version	Passive, open collector
Maximum input values	<ul style="list-style-type: none"> ■ DC 35 V ■ 50 mA
Voltage drop	<ul style="list-style-type: none"> ■ For ≤ 2 mA: 2 V ■ For 10 mA: 8 V
Residual current	≤ 0.05 mA
Pulse output	
Pulse width	Adjustable: 5 to 2 000 ms
Maximum pulse rate	100 Impulse/s
Pulse value	Adjustable
Assignable measured variables	<ul style="list-style-type: none"> ■ Total volume flow ■ Total corrected volume flow ■ Total mass flow ■ Total energy flow ■ Total heat flow difference
Frequency output	
Output frequency	Adjustable: 0 to 1 000 Hz
Damping	Adjustable: 0 to 999 s
Pulse/pause ratio	1:1

Assignable measured variables	<ul style="list-style-type: none"> ■ Volume flow ■ Corrected volume flow ■ Mass flow ■ Flow velocity ■ Temperature ■ Calculated saturated steam pressure ■ Steam quality ■ Total mass flow ■ Energy flow ■ Heat flow difference
Switch output	
Switching behavior	Binary, conductive or non-conductive
Switching delay	Adjustable: 0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	<ul style="list-style-type: none"> ■ Off ■ On ■ Diagnostic behavior ■ Limit value <ul style="list-style-type: none"> – Volume flow – Corrected volume flow – Mass flow – Flow velocity – Temperature – Calculated saturated steam pressure – Steam quality – Total mass flow – Energy flow – Heat flow difference – Reynolds number – Totalizer 1-3 ■ Status ■ Status of low flow cut off

FOUNDATION Fieldbus

Signal encoding	Manchester Bus Powered (MBP)
Data transfer	31.25 KBit/s, Voltage mode

Signal on alarm

Depending on the interface, failure information is displayed as follows:

Pulse/frequency/switch output

Pulse output	
Failure mode	No pulses
Frequency output	
Failure mode	Choose from: <ul style="list-style-type: none"> ■ Actual value ■ 0 Hz ■ Defined value: 0 to 1250 Hz
Switch output	
Failure mode	Choose from: <ul style="list-style-type: none"> ■ Current status ■ Open ■ Closed

FOUNDATION Fieldbus

Status and alarm messages	Diagnostics in accordance with FF-891
Error current FDE (Fault Disconnection Electronic)	0 mA

Local display

Plain text display	With information on cause and remedial measures
Backlight	Additionally for device version with SD03 local display: red lighting indicates a device error.



Status signal as per NAMUR recommendation NE 107

Operating tool

- Via digital communication:
FOUNDATION Fieldbus
- Via service interface

Plain text display	With information on cause and remedial measures
---------------------------	---

Low flow cut off	The switch points for low flow cut off are user-selectable.
------------------	---

Galvanic isolation	All outputs are galvanically isolated from one another.
--------------------	---

Protocol-specific data**FOUNDATION Fieldbus**

Manufacturer ID	0x452B48
Ident number	0x1038
Device revision	1
DD revision	Information and files under: <ul style="list-style-type: none"> ■ www.endress.com ■ www.fieldbus.org
CFF revision	
Device Tester Version (ITK version)	6.1.1
ITK Test Campaign Number	IT094200
Link Master capability (LAS)	Yes
Choice of "Link Master" and "Basic Device"	Yes Factory setting: Basic Device
Node address	Factory setting: 247 (0xF7)
Supported functions	The following methods are supported: <ul style="list-style-type: none"> ■ Restart ■ ENP Restart ■ Diagnostic
Virtual Communication Relationships (VCRs)	
Number of VCRs	44
Number of link objects in VFD	50
Permanent entries	1

Client VCRs	0
Server VCRs	10
Source VCRs	43
Sink VCRs	0
Subscriber VCRs	43
Publisher VCRs	43
Device Link Capabilities	
Slot time	4
Min. delay between PDU	8
Max. response delay	Min. 5


Transducer Blocks

Block	Contents	Output values
Setup Transducer Block (TRDSUP)	All parameters for standard commissioning.	No output values
Advanced Setup Transducer Block (TRDASUP)	All parameters for more accurate measurement configuration.	No output values
Display Transducer Block (TRDDISP)	Parameters for configuring the local display.	No output values
HistoROM Transducer Block (TRDHROM)	Parameters for using the HistoROM function.	No output values
Diagnostic Transducer Block (TRDDIAG)	Diagnostics information.	Process variables (AI Channel) <ul style="list-style-type: none"> ■ Temperature (7) ■ Volume flow (9) ■ Mass flow (11) ■ Corrected volume flow (13) ■ Flow velocity (37) ■ Energy flow (38) ■ Calculated saturated steam pressure (45) ■ Total mass flow (46) ■ Condensate mass flow (47) ■ Steam quality (48) ■ Heat flow difference (49) ■ Reynolds number (50)
Expert Configuration Transducer Block (TRDEXP)	Parameters that require the user to have in-depth knowledge of the operation of the device in order to configure the parameters appropriately.	No output values
Expert Information Transducer Block (TRDEXPIN)	Parameters that provide information about the state of the device.	No output values
Service Sensor Transducer Block (TRDSRVS)	Parameters that can only be accessed by Endress+Hauser Service.	No output values
Service Information Transducer Block (TRDSRVIF)	Parameters that provide Endress+Hauser Service with information about the state of the device.	No output values
Total Inventory Counter Transducer Block (TRDTIC)	Parameters for configuring all the totalizers and the inventory counter.	Process variables (AI Channel) <ul style="list-style-type: none"> ■ Totalizer 1 (16) ■ Totalizer 2 (17) ■ Totalizer 3 (18)

Block	Contents	Output values
Heartbeat Technology Transducer Block (TRDHBT)	Parameters for the configuration and comprehensive information about the results of the verification.	No output values
Heartbeat Results 1 Transducer Block (TRDHBTR1)	Information about the results of the verification.	No output values
Heartbeat Results 2 Transducer Block (TRDHBTR2)	Information about the results of the verification.	No output values
Heartbeat Results 3 Transducer Block (TRDHBTR3)	Information about the results of the verification.	No output values
Heartbeat Results 4 Transducer Block (TRDHBTR4)	Information about the results of the verification.	No output values

Function blocks

Block	Number of blocks	Contents	Process variables (Channel)
Resource Block (RB)	1	This Block (extended functionality) contains all the data that uniquely identify the device; it is the equivalent of an electronic nameplate for the device.	–
Analog Input Block (AI)	4	This Block (extended functionality) receives the measurement data provided by the Sensor Block (can be selected via a channel number) and makes the data available for other blocks at the output. Execution time: 13 ms	<ul style="list-style-type: none"> ■ Temperature (7) ■ Mass flow (11) ■ Volume flow (9) ■ Corrected volume flow (13) ■ Flow velocity (37) ■ Energy flow (38) ■ Calculated saturated steam pressure (45) ■ Total mass flow (46) ■ Condensate mass flow (47) ■ Steam quality (48) ■ Heat flow difference (49) ■ Reynolds number (50)
Discrete Input Block (DI)	2	This Block (standard functionality) receives a discrete value (e.g. indicator that measuring range has been exceeded) and makes the value available for other blocks at the output. Execution time: 12 ms	<ul style="list-style-type: none"> ■ Switch output state (101) ■ Low flow cut off (103) ■ Status verification (105)
PID Block (PID)	1	This Block (standard functionality) acts as a proportional-integral-differential controller and can be used universally for control in the field. It enables cascading and feedforward control. Execution time: 13 ms	–

Block	Number of blocks	Contents	Process variables (Channel)
Multiple Analog Output Block (MAO)	1	<p>This Block (standard functionality) receives several analog values and makes them available for other blocks at the output.</p> <p>Execution time: 11 ms</p>	<p>Channel_0 (121)</p> <ul style="list-style-type: none"> Value 1: External compensation variable, pressure Value 2: External compensation variable, relative pressure Value 3: External compensation variable, density Value 4: External compensation variable, temperature Value 5: External compensation variable, second temperature heat difference Value 6 to 8: Not assigned <p> The compensation variables must be transmitted to the device in the SI basic unit.</p>
Multiple Digital Output Block (MDO)	1	<p>This Block (standard functionality) receives several discrete values and makes them available for other blocks at the output.</p> <p>Execution time: 14 ms</p>	<p>Channel_DO (122)</p> <ul style="list-style-type: none"> Value 1: Reset totalizer 1 Value 2: Reset totalizer 2 Value 3: Reset totalizer 3 Value 4: Flow override Value 5: Start heartbeat verification Value 6: Status switch output Value 7: Not assigned Value 8: Not assigned
Integrator Block (IT)	1	<p>This Block (standard functionality) integrates a measured variable over time or totalizes the pulses from a Pulse Input Block. The Block can be used as a totalizer that totalizes until a reset, or as a batch totalizer whereby the integrated value is compared against a target value generated before or during the control routine and generates a binary signal when the target value is reached.</p> <p>Execution time: 16 ms</p>	–

16.5 Power supply

Terminal assignment →  31

Pin assignment, device plug →  32

Supply voltage

Transmitter

An external power supply is required for each output.

The following supply voltage values apply for the outputs available:

Supply voltage for a compact version without a local display¹⁾

Order code for "Output"	Minimum terminal voltage ²⁾	Maximum terminal voltage
Option E : FOUNDATION Fieldbus, pulse/frequency/switch output	≥ DC 9 V	DC 32 V

1) In event of external supply voltage of the power conditioner

2) The minimum terminal voltage increases if local operation is used: see the following table

Increase in minimum terminal voltage

Local operation	Increase in minimum terminal voltage
Order code for "Display; Operation", option C : Local operation SD02	+ DC 1 V
Order code for "Display; Operation", option E : Local operation SD03 with lighting (backlighting not used)	+ DC 1 V
Order code for "Display; Operation", option E : Local operation SD03 with lighting (backlighting used)	+ DC 3 V

Power consumption

Transmitter

Order code for "Output"	Maximum power consumption
Option E : FOUNDATION Fieldbus, pulse/frequency/switch output	<ul style="list-style-type: none"> ■ Operation with output 1: 512 mW ■ Operation with output 1 and 2: 2 512 mW

Current consumption

FOUNDATION Fieldbus

15 mA

Power supply failure

- Totalizers stop at the last value measured.
- Configuration is retained in the device memory (HistoROM).
- Error messages (incl. total operated hours) are stored.

Electrical connection

→  34

Terminals

- For device version without integrated overvoltage protection: plug-in spring terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)
- For device version with integrated overvoltage protection: screw terminals for wire cross-sections 0.2 to 2.5 mm² (24 to 14 AWG)

Cable entries

- Cable gland: M20 × 1.5 with cable Ø6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
 - NPT ½"
 - G ½"

Cable specification



→  29

Overvoltage protection

The device can be ordered with integrated overvoltage protection for diverse approvals:
Order code for "Accessory mounted", option NA "Overvoltage protection"

Input voltage range	Values correspond to supply voltage specifications ¹⁾
Resistance per channel	2 · 0.5 Ω max
DC sparkover voltage	400 to 700 V
Trip surge voltage	< 800 V
Capacitance at 1 MHz	< 1.5 pF
Nominal discharge current (8/20 µs)	10 kA
Temperature range	−40 to +85 °C (−40 to +185 °F)




1) The voltage is reduced by the amount of the internal resistance $I_{min} \cdot R_i$

-  Depending on the temperature class, restrictions apply to the ambient temperature for device versions with overvoltage protection .
-  For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

16.6 Performance characteristics


Reference operating conditions

- Error limits following ISO/DIN 11631
- +20 to +30 °C (+68 to +86 °F)
- 2 to 4 bar (29 to 58 psi)
- Calibration system traceable to national standards
- Calibration with the process connection corresponding to the particular standard

 To obtain measured errors, use the *Applicator* sizing tool →  173 →  204

Maximum measured error

Base accuracy
o.r. = of reading, Re = Reynolds number
Volume flow
The measured error for the volume flow is as follows depending on the Reynolds number and the compressibility of the medium under measurement:

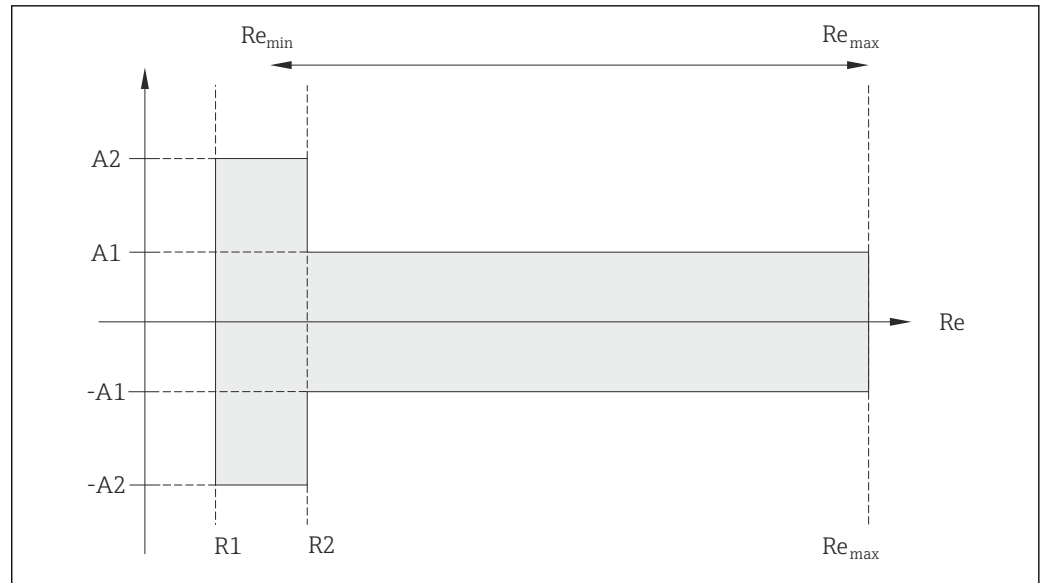

A0019703

Deviation of volume flow value (absolute) from the reading			
Medium type		Incompressible	Compressible ¹⁾
Re range	Measured value deviation	Standard	Standard
R1 to R2	A2	< 10 %	< 10 %
R2 to Re _{max}	A1	< 0.75 %	< 1.0 %

1) Accuracy specifications valid up to 75 m/s (246 ft/s)

Reynolds numbers	Incompressible	Compressible
	Standard	Standard
R1	5 000	
R2	20 000	


Temperature

- Saturated steam and liquids at room temperature if $T > 100\text{ °C}$ (212 °F) applies: < 1 °C (1.8 °F)
- Gas: < 1 % o.r. [K]
- Volume flow: > 70 m/s (230 ft/s): 2% o.r.

Rise time 50 % (stirred under water, following IEC 60751): 8 s

Mass flow (saturated steam)

- Flow velocities 20 to 50 m/s (66 to 164 ft/s), $T > 150\text{ °C}$ (302 °F) or (423 K)
 - $Re > 20\,000$: < 1.7 % o.r.
 - Re between 5 000 to 20 000: < 10 % o.r.
- Flow velocities 10 to 70 m/s (33 to 210 ft/s), $T > 140\text{ °C}$ (284 °F) or (413 K)
 - $Re > 20\,000$: < 2 % o.r.
 - Re between 5 000 to 20 000: < 10 % o.r.
- Flow velocities < 10 m/s (33 ft/s): $Re > 5000$: 5%

 The use of a Cerabar S is required for the measured errors listed in the following section. The measured error used to calculate the error in the measured pressure is 0.15%.

Mass flow of superheated steam and gas (single gas, gas mixture, air: NEL40; natural gas: ISO 12213-2 contains AGA8-DC92, AGA NX-19, ISO 12213-3 contains SGERG-88 and AGA8 Gross Method 1)

- Re > 20 000 and process pressure < 40 bar abs. (580 psi abs.): 1.7 % o.r.
- Re between 5 000 to 20 000 and process pressure < 40 bar abs. (580 psi abs.): 10 % o.r.
- Re > 20 000 and process pressure < 120 bar abs. (1 740 psi abs.): 2.6 % o.r.
- Re between 5 000 to 20 000 and process pressure < 120 bar abs. (1 740 psi abs.): 10 % o.r.

abs. = absolute

Mass flow (water)

- Re 20 000: < 0.85 % o.r.
- Re between 5 000 to 20 000: < 10 % o.r.

Mass flow (user-defined liquids)

To specify the system accuracy, Endress+Hauser requires information about the type of liquid and its operating temperature or information in table form about the dependency between the liquid density and the temperature.

Example

- Acetone is to be measured at fluid temperatures from +70 to +90 °C (+158 to +194 °F).
- For this purpose, the **Reference temperature** parameter (7703) (here 80 °C (176 °F)), **Reference density** parameter (7700) (here 720.00 kg/m³) and **Linear expansion coefficient** parameter (7621) (here $18.0298 \times 10^{-4} \text{ 1/°C}$) must be entered in the transmitter.
- The overall system uncertainty, which is less than 0.9 % for the example above, is comprised of the following measurement uncertainties: uncertainty of volume flow measurement, uncertainty of temperature measurement, uncertainty of the density-temperature correlation used (incl. the resulting uncertainty of density).

Mass flow (other media)

Depends on the selected fluid and the pressure value, which is specified in the parameters. Individual error analysis must be performed.

Diameter mismatch correction

Prowirl 200 can correct shifts in the calibration factor which are caused, for example, by diameter mismatch between the device flange (e.g. ASME B16.5/Sch. 80, DN 50 (2")) and the mating pipe (e.g. ASME B16.5/Sch. 40, DN 50 (2")). Only apply diameter mismatch correction within the following limit values (listed below) for which test measurements have also been performed.

Flange connection:

- DN 15 (½"): ±20 % of the internal diameter
- DN 25 (1"): ±15 % of the internal diameter
- DN 40 (1½"): ±12 % of the internal diameter
- DN ≥ 50 (2"): ±10 % of the internal diameter

If the standard internal diameter of the ordered process connection differs from the internal diameter of the mating pipe, an additional measuring uncertainty of approx. 2 % o.r. must be expected.

Example

Influence of the diameter mismatch without using the correction function:

- Mating pipe DN 100 (4"), schedule 80
- Device flange DN 100 (4"), schedule 40
- This installation position results in a diameter mismatch of 5 mm (0.2 in). If the correction function is not used, an additional measuring uncertainty of approx. 2 % o.r. must be expected.

Accuracy of outputs

The outputs have the following base accuracy specifications.

Pulse/frequency output

o.r. = of reading

Accuracy	Max. ± 100 ppm o.r.
-----------------	-------------------------

Repeatability o.r. = of reading
 ± 0.2 % o.r.

Response time If all the configurable functions for filter times (flow damping, display damping, current output time constant, frequency output time constant, status output time constant) are set to 0, in the event of vortex frequencies of 10 Hz and higher a response time of $\max(T_v, 100 \text{ ms})$ can be expected.

In the event of measuring frequencies $< 10 \text{ Hz}$, the response time is $> 100 \text{ ms}$ and can be up to 10 s. T_v is the average vortex period duration of the flowing fluid.

Influence of ambient temperature **Pulse/frequency output**
o.r. = of reading

Temperature coefficient	Max. ± 100 ppm o.r.
--------------------------------	-------------------------

16.7 Installation

"Mounting requirements" →  19

16.8 Environment

Ambient temperature range

Temperature tables

Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.



For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Storage temperature All components apart from the display modules:
 -50 to $+80$ °C (-58 to $+176$ °F)

Remote display and operating module DKX001

-50 to $+80$ °C (-58 to $+176$ °F)

Climate class DIN EN 60068-2-38 (test Z/AD)

Degree of protection


Transmitter

- As standard: IP66/67, type 4X enclosure
- When housing is open: IP20, type 1 enclosure
- Display module: IP20, type 1 enclosure

Sensor


IP66/67, type 4X enclosure

Vibration resistance	<ul style="list-style-type: none"> ■ For compact/remote version made of coated aluminum and remote version made of stainless steel: Acceleration up to 2 g (if gain set to factory setting), 10 to 500 Hz, following IEC 60068-2-6 ■ For the compact version made of stainless steel: Acceleration up to 1 g (if gain set to factory setting), 10 to 500 Hz, following IEC 60068-2-6
----------------------	--

Electromagnetic compatibility (EMC)	<p>As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)</p> <p> For details, refer to the Declaration of Conformity.</p>
-------------------------------------	--


16.9 Process

Medium temperature range	<p>DSC sensor³⁾</p> <p><i>Order code for "Sensor version":</i></p> <ul style="list-style-type: none"> ■ <i>Option 1 "Volume flow, basis":</i> -40 to +260 °C (-40 to +500 °F), stainless steel ■ <i>Option 2 "Volume flow, high-temperature/low-temperature":</i> -200 to +400 °C (-328 to +752 °F), stainless steel ■ <i>Option 3 "Mass flow (integrated temperature measurement)":</i> -200 to +400 °C (-328 to +752 °F), stainless steel <p><i>Order code for "Sensor option":</i></p> <ul style="list-style-type: none"> ■ <i>Option CD "Harsh environment"⁴⁾, DSC sensor components Alloy C22":</i> -200 to +400 °C (-328 to +752 °F), DSC sensor Alloy C22 ■ <i>Option CE "Harsh process"⁵⁾, wetted parts Alloy C22, (including option CD)":</i> -40 to +260 °C (-40 to +500 °F), sensor and DSC sensor Alloy C22 <p>Seals</p> <ul style="list-style-type: none"> ■ -200 to +400 °C (-328 to +752 °F) for graphite (standard) ■ -15 to +175 °C (+5 to +347 °F) for Viton ■ -20 to +275 °C (-4 to +527 °F) for Kalrez ■ -200 to +260 °C (-328 to +500 °F) for Gylon
--------------------------	--

Pressure-temperature ratings	<p> An overview of the pressure-temperature ratings for the process connections is provided in the "Technical Information" document</p>
------------------------------	--

Secondary containment pressure rating	The following overpressure resistance values apply to the sensor shaft in the event of a membrane rupture:
---------------------------------------	--

Sensor version	Overpressure, sensor shaft in [bar a]
Volume flow, basis	200
Volume flow, high-temperature/low-temperature	200
Mass flow (integrated temperature measurement)	200

Pressure loss	For a precise calculation, use the Applicator→  173.
---------------	---

3) Capacitance sensor
4) Aggressive atmosphere (salts or chloride in the air)
5) Aggressive medium (risk of corrosion due to chloride, for example)

16.10 Mechanical construction

Design, dimensions



For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

Weight

Compact version

Weight data:

- Including the transmitter:
 - Order code for "Housing", option C: 1.8 kg (4.0 lb)
 - Order code for "Housing", option B: 4.5 kg (9.9 lb)
- Excluding packaging material

Weight in SI units

All values (weight) refer to devices with EN (DIN), PN 40 flanges. Weight information in [kg].

DN [mm]	Weight [kg]	
	Order code for "Housing", option C Aluminum, AlSi10Mg, coated ¹⁾	Order code for "Housing", option B Stainless steel, 1.4404 (316L) ¹⁾
15	5.1	7.8
25	7.1	9.8
40	9.1	11.8
50	11.1	13.8
80	16.1	18.8
100	21.1	23.8
150	37.1	39.8
200	72.1	74.8
250	111.1	113.8
300	158.1	160.8

1) For high-temperature/low-temperature version: values + 0.2 kg

Weight in US units

All values (weight) refer to devices with ASME B16.5, Class 300/Sch. 40 flanges. Weight information in [lbs].

DN [in]	Weight [lbs]	
	Order code for "Housing", option C Aluminum, AlSi10Mg, coated ¹⁾	Order code for "Housing", option B Stainless steel, 1.4404 (316L) ¹⁾
½	11.3	17.3
1	15.7	21.7
1½	22.4	28.3
2	26.8	32.7
3	42.2	48.1
4	66.5	72.4
6	110.5	116.5
8	167.9	173.8

DN [in]	Weight [lbs]	
	Order code for "Housing", option C Aluminum, AlSi10Mg, coated ¹⁾	Order code for "Housing", option B Stainless steel, 1.4404 (316L) ¹⁾
10	240.6	246.6
12	357.5	363.4

1) For high-temperature/low-temperature version: values + 0.4 lbs

Transmitter remote version

Wall-mount housing

Depends on the material of the wall-mount housing:

- Aluminum, AlSi10Mg, coated: 2.4 kg (5.2 lb)
- Stainless steel, 1.4404 (316L): 6.0 kg (13.2 lb)

Sensor remote version

Weight data:

- Including the connection housing:
 - Aluminum, AlSi10Mg, coated: 0.8 kg (1.8 lb)
 - Stainless cast steel, 1.4408 (CF3M): 2.0 kg (4.4 lb)
- Excluding the connecting cable
- Excluding packaging material

Weight in SI units

All values (weight) refer to devices with EN (DIN), PN 40 flanges. Weight information in [kg].

DN [mm]	Weight [kg]	
	Connection housing Aluminum, AlSi10Mg, coated ¹⁾	Connection housing Stainless cast steel, 1.4408 (CF3M) ¹⁾
15	4.1	5.3
25	6.1	7.3
40	8.1	9.3
50	10.1	11.3
80	15.1	16.3
100	20.1	21.3
150	36.1	37.3
200	71.1	72.3
250	110.1	111.3
300	157.1	158.3

1) For high-temperature/low-temperature version: values + 0.2 kg

Weight in US units

All values (weight) refer to devices with ASME B16.5, Class 300/Sch. 40 flanges. Weight information in [lbs].

DN [in]	Weight [lbs]	
	Connection housing Aluminum, AlSi10Mg, coated ¹⁾	Connection housing Stainless cast steel, 1.4408 (CF3M) ¹⁾
½	8.9	11.7
1	13.4	16.1
1½	20.0	22.7
2	24.4	27.2
3	39.8	42.6
4	64.1	66.8
6	108.2	110.9
8	165.5	168.3
10	238.2	241.0
12	355.1	357.8

1) For high-temperature/low-temperature version: values + 0.4 lbs

Accessories*Flow conditioner**Weight in SI units*

DN ¹⁾ [mm]	Pressure rating	Weight [kg]
15	PN 10 to 40	0.04
25	PN 10 to 40	0.1
40	PN 10 to 40	0.3
50	PN 10 to 40	0.5
80	PN 10 to 40	1.4
100	PN 10 to 40	2.4
150	PN 10/16 PN 25/40	6.3 7.8
200	PN 10 PN 16/25 PN 40	11.5 12.3 15.9
250	PN 10 to 25 PN 40	25.7 27.5
300	PN 10 to 25 PN 40	36.4 44.7

1) EN (DIN)

DN ¹⁾ [mm]	Pressure rating	Weight [kg]
15	Class 150 Class 300	0.03 0.04
25	Class 150 Class 300	0.1

DN ¹⁾ [mm]	Pressure rating	Weight [kg]
40	Class 150 Class 300	0.3
50	Class 150 Class 300	0.5
80	Class 150 Class 300	1.2 1.4
100	Class 150 Class 300	2.7
150	Class 150 Class 300	6.3 7.8
200	Class 150 Class 300	12.3 15.8
250	Class 150 Class 300	25.7 27.5
300	Class 150 Class 300	36.4 44.6

1) ASME

DN ¹⁾ [mm]	Pressure rating	Weight [kg]
15	20K	0.06
25	20K	0.1
40	20K	0.3
50	10K 20K	0.5
80	10K 20K	1.1
100	10K 20K	1.80
150	10K 20K	4.5 5.5
200	10K 20K	9.2
250	10K 20K	15.8 19.1
300	10K 20K	26.5

1) JIS

Weight in US units

DN ¹⁾ [in]	Pressure rating	Weight [lbs]
½	Class 150 Class 300	0.07 0.09
1	Class 150 Class 300	0.3
1½	Class 150 Class 300	0.7

DN ¹⁾ [in]	Pressure rating	Weight [lbs]
2	Class 150 Class 300	1.1
3	Class 150 Class 300	2.6 3.1
4	Class 150 Class 300	6.0
6	Class 150 Class 300	14.0 16.0
8	Class 150 Class 300	27.0 35.0
10	Class 150 Class 300	57.0 61.0
12	Class 150 Class 300	80.0 98.0

1) ASME

Materials

Transmitter housing


Compact version

- Order code for "Housing", option **B** "Compact, stainless":
Stainless steel CF-3M (316L, 1.4404)
- Order code for "Housing", option **C** "Compact, aluminum coated":
Aluminum, AlSi10Mg, coated
- Window material: glass

Remote version

- Order code for "Housing", option **J** "Remote, aluminum coated":
Aluminum, AlSi10Mg, coated
- Order code for "Housing", option **K** "Remote, stainless":
For maximum corrosion resistance: stainless steel 1.4404 (316L)
- Window material: glass

Cable entries/cable glands

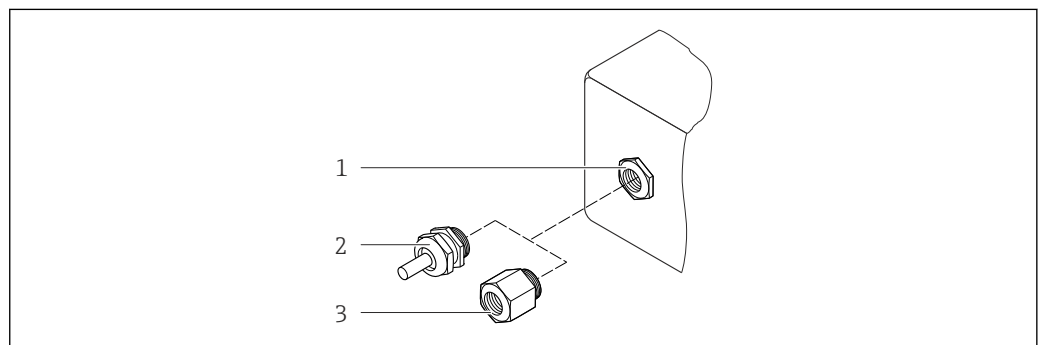

A0020640

33 Possible cable entries/cable glands

- 1 Cable entry in transmitter housing, wall-mount housing or connection housing with internal thread M20 x 1.5
- 2 Cable gland M20 x 1.5
- 3 Adapter for cable entry with internal thread G ½" or NPT ½"

Order code for "Housing", option B "Compact, stainless", option K "Remote, stainless"

Cable entry/cable gland	Type of protection	Material
Cable gland M20 × 1.5	<ul style="list-style-type: none"> ■ Non-Ex ■ Ex ia ■ Ex ic ■ Ex nA ■ Ex tb 	Stainless steel ,1.4404
Adapter for cable entry with internal thread G ½"	For non-Ex and Ex (except for CSA Ex d/XP)	Stainless steel, 1.4404 (316L)
Adapter for cable entry with internal thread NPT ½"	For non-Ex and Ex	

Order code for "Housing": option C "Compact, aluminum coated", option J "Remote, aluminum coated"

Cable entry/cable gland	Type of protection	Material
Cable gland M20 × 1.5	<ul style="list-style-type: none"> ■ Non-Ex ■ Ex ia ■ Ex ic 	Plastic
	Adapter for cable entry with internal thread G ½"	Nickel-plated brass
Adapter for cable entry with internal thread NPT ½"	For non-Ex and Ex (except for CSA Ex d/XP)	Nickel-plated brass
Thread NPT ½" via adapter	For non-Ex and Ex	

Connecting cable for remote version

- Standard cable: PVC cable with copper shield
- Reinforced cable: PVC cable with copper shield and additional steel wire braided jacket

Sensor connection housing

- Coated aluminum AlSi10Mg
- Stainless cast steel, 1.4408 (CF3M), in compliance with NACE MR0175-2003 and MR0103-2003

Measuring tubes

Pressure ratings up to PN 40, Class 150/300, and JIS 10K/20K:

- Stainless cast steel, 1.4408 (CF3M), in compliance with AD2000 (for AD2000 the temperature range is limited to -10 to +400 °C (+14 to +752 °F)) and in compliance with NACE MR0175-2003 and MR0103-2003
- Order code for "Sensor option", option CE "Harsh process⁶⁾, wetted parts, Alloy C22, (including option CD)":
Cast alloy CX2MW similar to Alloy C22/2.4602, in compliance with NACE MR0175-2003 and MR0103-2003

DSC sensor

Pressure ratings up to PN 40, Class 150/300, and JIS 10K/20K:

6) Aggressive medium (risk of corrosion due to chloride, for example)

Parts in contact with medium (marked as "wet" on the DSC sensor flange):

- Stainless steel, 1.4435 (316, 316L), in compliance with NACE MR0175-2003 and MR0103-2003
- Order code for "Sensor option", option CE "Harsh process ⁶⁾", wetted parts, Alloy C22, (including option CD):
UNS N06022 similar to Alloy C22/2.4602, in compliance with NACE MR0175-2003 and MR0103-2003

Parts not in contact with medium:

- Stainless steel 1.4301 (304)
- Order code for "Sensor option", option CD "Harsh environment ⁷⁾", DSC sensor sensor components Alloy C22":
Alloy C22 sensor: UNS N06022 similar to Alloy C22/2.4602, in compliance with NACE MR0175-2003 and MR0103-2003

Process connections

Pressure ratings up to PN 40, Class 150/300, and JIS 10K/20K:

Welding neck flanges DN 15 to 150 (½ to 6"), in compliance with NACE MR0175-2003 and MR0103-2003

The following materials are available depending on the pressure rating:

- Stainless steel, multiple certifications, 1.4404 (F316, F316L)
- Cast alloy CX2MW similar to Alloy C22/2.4602

DN 200 to 300 (8 to 12"):

Stainless cast steel, 1.4408 (CF3M)



List of all available process connections → 200

Seals

- Graphite (standard)
Sigraflex Hochdruck™ with smooth sheet metal insert made of stainless steel, 316/316L (BAM-certified for oxygen applications, "high quality in terms of TA Luft" (German Clean Air Act))
- FPM (Viton)
- Kalrez 6375
- Gylon 3504 (BAM-certified for oxygen applications, "high quality in terms of TA Luft" (German Clean Air Act))

Housing support

Stainless steel, 1.4408 (CF3M)

Accessories

Weather protection cover

Stainless steel 1.4404 (316L)



Flow conditioner

Stainless steel, multiple certifications, 1.4404 (316, 316L), in compliance with NACE MR0175-2003 and MR0103-2003

⁷⁾ Aggressive atmosphere (salts or chloride in the air)


Process connections	<div><div><div>■</div><div>EN 1092-1 (DIN 2501)</div></div><div><div>■</div><div>ASME B16.5</div></div><div><div>■</div><div>JIS B2220</div></div></div> <div><div><div>i</div></div>For information on the different materials used in the process connections → 199</div>
---------------------	--

16.11 Operability

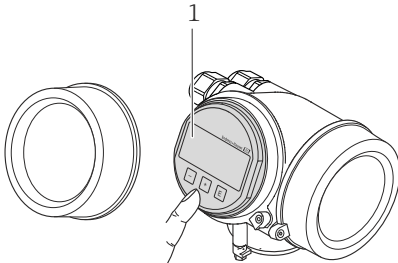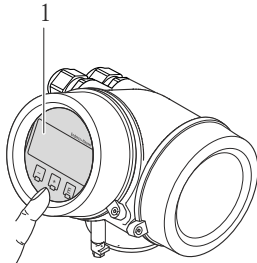Local operation	Via display module
<div><div><div>Order code for "Display; Operation", option C "SD02"</div><div><div>A0015544</div></div><div>1 Operation with pushbuttons</div></div></div>	<div><div><div>Order code for "Display; Operation", option E "SD03"</div><div><div>A0015546</div></div><div>1 Operation with touch control</div></div></div>

- Display elements**
 - 4-line display
 - With order code for "Display; operation", option **E**:
White background lighting; switches to red in event of device errors
 - Format for displaying measured variables and status variables can be individually configured
 - Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F)
The readability of the display may be impaired at temperatures outside the temperature range.
- Operating elements**
 - With order code for "Display; operation", option **C**:
Local operation with 3 push buttons:
 - With order code for "Display; operation", option **E**:
External operation via touch control; 3 optical keys:
 - Operating elements also accessible in various hazardous areas
- Additional functionality**
 - Data backup function
The device configuration can be saved in the display module.
 - Data comparison function
The device configuration saved in the display module can be compared to the current device configuration.
 - Data transfer function
The transmitter configuration can be transmitted to another device using the display module.

Via remote display and operating module FHX50

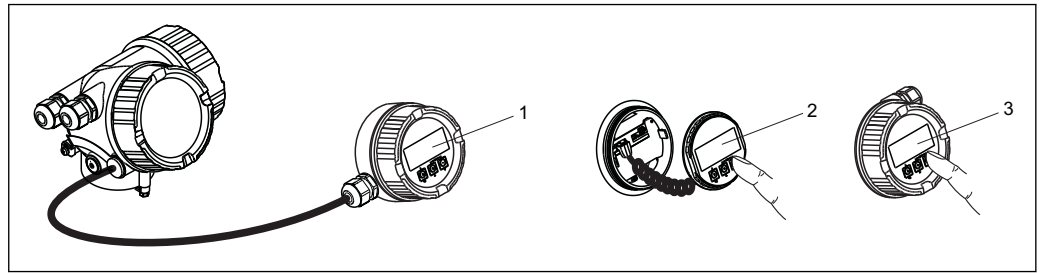

A0013137


34 Operating options via FHX50

- 1 Housing of remote display and operating module FHX50
- 2 SD02 display and operating module, push buttons: cover must be opened for operation
- 3 SD03 display and operating module, optical buttons: operation possible through cover glass

Remote operation

Via FOUNDATION Fieldbus network

This communication interface is available in device versions with FOUNDATION Fieldbus.

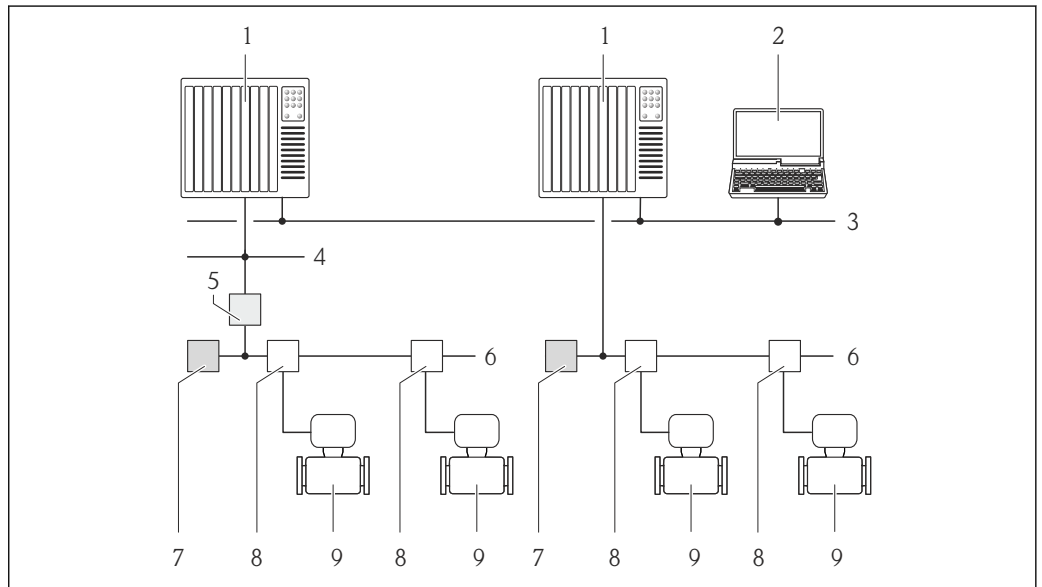


A0023460

35 Options for remote operation via FOUNDATION Fieldbus network

- 1 Automation system
- 2 Computer with FOUNDATION Fieldbus network card
- 3 Industry network
- 4 High Speed Ethernet FF-HSE network
- 5 Segment coupler FF-HSE/FF-H1
- 6 FOUNDATION Fieldbus FF-H1 network
- 7 Power supply FF-H1 network
- 8 T-box
- 9 Measuring device

Service interface

Via service interface (CDI)

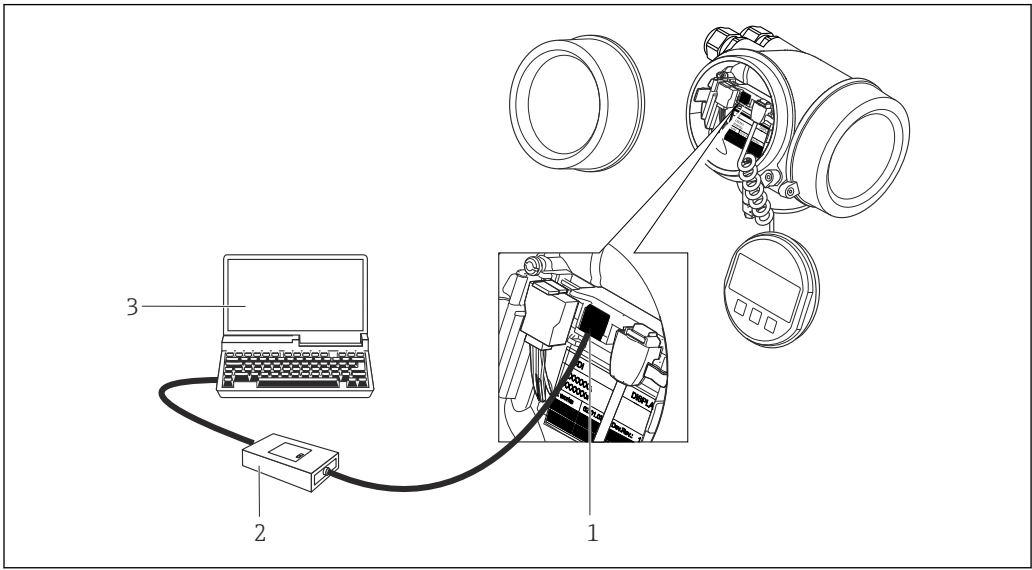

- 1
- Service interface (CDI = Endress+Hauser Common Data Interface) of the measuring device
- 2
- Commubox FXA291
- 3
- Computer with "FieldCare" operating tool with COM DTM "CDI Communication FXA291"

Languages

Can be operated in the following languages:

- Via local display:
English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Swedish, Turkish, Chinese, Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech
- Via "FieldCare" operating tool:
English, German, French, Spanish, Italian, Chinese, Japanese

16.12 Certificates and approvals

CE mark

The measuring system is in conformity with the statutory requirements of the applicable EC Directives. These are listed in the corresponding EC Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

C-Tick symbol

The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

Ex approval

The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.

FOUNDATION Fieldbus certification

FOUNDATION Fieldbus interface

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified in accordance with FOUNDATION Fieldbus H1
- Interoperability Test Kit (ITK), revision version 6.1.1 (certificate available on request)
- Physical Layer Conformance Test
- The device can also be operated with certified devices of other manufacturers (interoperability)

Pressure Equipment Directive	<ul style="list-style-type: none"> ■ With the PED/G1/x (x = category) marking on the sensor nameplate, Endress+Hauser confirms compliance with the "Essential Safety Requirements" specified in Annex I of the Pressure Equipment Directive 97/23/EC. ■ Devices not bearing this marking (PED) are designed and manufactured according to good engineering practice. They meet the requirements of Art.3 Section 3 of the Pressure Equipment Directive 97/23/EC. The range of application is indicated in tables 6 to 9 in Annex II of the Pressure Equipment Directive.
Experience	The Prowirl 200 measuring system is the official successor to Prowirl 72 and Prowirl 73.
Other standards and guidelines	<ul style="list-style-type: none"> ■ EN 60529 Degrees of protection provided by enclosures (IP code) ■ DIN ISO 13359 Measurement of conductive liquid flow in closed conduits - Flanged-type electromagnetic flowmeters - Overall length ■ EN 61010-1 Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements ■ IEC/EN 61326 Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements). ■ NAMUR NE 21 Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment ■ NAMUR NE 32 Data retention in the event of a power failure in field and control instruments with microprocessors ■ NAMUR NE 43 Standardization of the signal level for the breakdown information of digital transmitters with analog output signal. ■ NAMUR NE 53 Software of field devices and signal-processing devices with digital electronics ■ NAMUR NE 105 Specifications for integrating fieldbus devices in engineering tools for field devices ■ NAMUR NE 107 Self-monitoring and diagnosis of field devices ■ NAMUR NE 131 Requirements for field devices for standard applications ■ ASME BPVC Section VIII, Division 1 Rules for Construction of Pressure Vessels

16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.



The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.




Detailed information on the application packages:

- Special Documentation for the device → 205
- Special Documentation for the device

16.14 Accessories

 Overview of accessories available for order →  172

16.15 Supplementary documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

Standard documentation

Brief Operating Instructions

Measuring device	Documentation code
Prowirl F 200	KA01136D

Technical Information

Measuring device	Documentation code
Prowirl F 200	TI01084D

Description of device parameters

Measuring device	Documentation code
Prowirl 200	GP01024D

Supplementary device-dependent documentation



Safety Instructions

Contents	Documentation code
ATEX/IECEX Ex d, Ex tb	XA01148D
ATEX/IECEX Ex ia, Ex tb	XA01151D
ATEX/IECEX Ex ic, Ex nA	XA01152D
cCSA _{US} XP	XA01153D
cCSA _{US} IS	XA01154D
NEPSI Ex d	XA01238D
NEPSI Ex i	XA01239D
NEPSI Ex ic, Ex nA	XA01240D
INMETRO Ex d	XA01250D
INMETRO Ex i	XA01042D
INMETRO Ex nA	XA01043D

Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01163D
Heartbeat Technology	SD01204D
Natural gas	SD01194D
Air + Industrial Gases (Single Gas + Gas Mixtures)	SD01195D
Wet steam detection	SD01193D
Inlet run correction	SD01226D

Installation Instructions

Contents	Documentation code
Installation Instructions for spare part sets	 Overview of accessories available for order →  172

Index

A

Access authorization to parameters	
Read access	55
Write access	55
Access code	55
Incorrect input	55
Adapting the diagnostic behavior	134
Adapting the status signal	134
Ambient temperature	
Influence	191
Ambient temperature range	23
AMS Device Manager	59
Function	59
Application	9, 175
Applicator	179
Approvals	202

C

C-Tick symbol	202
Cable entries	
Technical data	187
Cable entry	
Degree of protection	41
CE mark	10, 202
Certificates	202
CFF revision	60
Check	
Installation	28
Checklist	
Post-connection check	42
Post-installation check	28
Cleaning	
Exterior cleaning	168
Interior cleaning	168
Replacing housing seals	168
Replacing seals	168
Replacing sensor seals	168
Climate class	191
Commissioning	65
Advanced settings	77
Configuring the measuring device	66
Connecting cable	29
Connecting the measuring device	34
Connection	
see Electrical connection	
Connection preparations	34
Connection tools	29
Context menu	
Closing	50
Explanation	50
Opening	50
Current consumption	187

D

DD revision	60
Declaration of Conformity	10

Define access code	115
Degree of protection	41, 191
Designated use	9
Device components	11
Device description files	60
Device documentation	
Supplementary documentation	8
Device locking, status	121
Device name	
Sensor	14
Transmitter	13
Device repair	169
Device revision	60
Device type code	60
Diagnostic behavior	
Explanation	132
Symbols	132
Diagnostic information	
Design, description	132, 134
FieldCare	133
Local display	131
Overview	138
Remedy information	138
Diagnostic list	163
Diagnostic message	131
DIAGNOSTIC Transducer Block	162
Diagnostics	
Symbols	131
DIP switches	
see Write protection switch	
Direct access	52
Direct access code	47
Disabling write protection	115
Display	
see Local display	
Display area	
For operational display	45
In the navigation view	47
Display values	
For locking status	121
Disposal	170
Document	
Function	6
Symbols used	6
Document function	6

E

Electrical connection	
Commubox FXA291	57, 202
Degree of protection	41
Measuring device	29
Operating tools	
Via FOUNDATION Fieldbus network	56, 201
Via service interface (CDI)	57, 202
Electromagnetic compatibility	192
Enabling write protection	115

Endress+Hauser services
 Maintenance 168
 Repair 170
 Environment
 Ambient temperature range 23
 Storage temperature 191
 Vibration resistance 192
 Error messages
 see Diagnostic messages
 Event history 163
 Events list 163
 Ex approval 202
 Experience 203
 Extended order code
 Sensor 14
 Transmitter 13
 Exterior cleaning 168

F
 Field Communicator
 Function 59
 Field Communicator 475 59
 Field of application
 Residual risks 10
 Field Xpert
 Function 58
 Field Xpert SFX350 58
 FieldCare 58
 Device description file 60
 Establishing a connection 58
 Function 58
 User interface 59
 Filtering the event logbook 163
 Firmware
 Release date 60
 Version 60
 Firmware history 167
 Flow direction 19
 FOUNDATION Fieldbus block structure 61, 118
 FOUNDATION Fieldbus certification 202
 Function check 65
 Function scope
 AMS Device Manager 59
 Field Communicator 59
 Field Communicator 475 59
 Field Xpert 58
 Functions
 see Parameter

G
 Galvanic isolation 183

H
 Hardware write protection 116
 Help text
 Calling up 53
 Close 53
 Explanation 53
 HistoROM 111

I
 I/O electronics module 11, 38
 Identifying the measuring device 12
 Incoming acceptance 12
 Influence
 Ambient temperature 191
 Information on the document 6
 Inlet runs 20
 Input 175
 Input mask 48
 Inspection
 Received goods 12
 Inspection check
 Connection 42
 Installation 19
 Installation conditions
 Inlet and outlet runs 20
 Mounting location 19
 Orientation 19
 Thermal insulation 23
 Vibrations 24
 Installation dimensions 22
 Interior cleaning 168

K
 Keypad lock
 Disabling 55
 Enabling 55

L
 Languages, operation options 202
 Line recorder 126
 Local display 200
 Editing view 48
 Navigation view 46
 see Diagnostic message
 see In alarm condition
 see Operational display
 Low flow cut off 183

M
 Main electronics module 11
 Maintenance tasks 168
 Managing the device configuration 111
 Manufacturer ID 60
 Manufacturing date 13, 14
 Materials 197
 Maximum measured error 188
 Measured values
 Calculated 175
 see Process variables
 Measured variables
 Measured 175
 Measuring and test equipment 168
 Measuring device
 Configuration 66
 Conversion 169
 Disposal 171
 Mounting the sensor 25

Preparing for electrical connection	34
Preparing for mounting	25
Removing	170
Repair	169
Structure	11
Switch-on	65
Measuring principle	175
Measuring range	179
Measuring system	175
Media	9
Medium temperature range	192
Menu	
Diagnostics	162
Operation	121
Setup	66
Menus	
For measuring device configuration	66
For specific settings	77
Mounting dimensions	
see Installation dimensions	
Mounting location	19
Mounting preparations	25
Mounting requirements	
Installation dimensions	22
Mounting tools	25
N	
Nameplate	
Sensor	14
Transmitter	13
Navigation path (navigation view)	46
Navigation view	
In the submenu	46
In the wizard	46
Nominal pressure	
Secondary containment	192
Numeric editor	48
O	
Operable flow range	180
Operating elements	49, 132
Operating keys	
see Operating elements	
Operating menu	
Menus, submenus	44
Structure	44
Submenus and user roles	45
Operating options	43
Operating philosophy	45
Operation	121
Operation options	43
Operational display	45
Operational safety	10
Order code	12, 13, 14
Orientation (vertical, horizontal)	19
Outlet runs	20
Output	181
Output signal	181

P

Packaging disposal	18
Parameter	
Changing	54
Enter a value	54
Parameter settings	
Administration (Submenu)	164
Analog inputs (Submenu)	73
Configuration backup display (Submenu)	111
Data logging (Submenu)	126
Device information (Submenu)	166
Diagnostics (Menu)	162
Display (Submenu)	109
Display (Wizard)	73
External compensation (Submenu)	92
Gas composition (Submenu)	81
Low flow cut off (Wizard)	75
Medium properties (Submenu)	78
Medium selection (Wizard)	71
Output values (Submenu)	124
Process variables (Submenu)	121
Pulse/frequency/switch output (Wizard)	96, 99, 103
Sensor adjustment (Submenu)	94
Setup (Menu)	66
Simulation (Submenu)	113
System units (Submenu)	67
Totalizer (Submenu)	123
Totalizer 1 to 3 (Submenu)	107
Totalizer handling (Submenu)	125
Performance characteristics	188
Post-connection check (checklist)	42
Post-installation check	65
Post-installation check (checklist)	28
Potential equalization	40
Power consumption	187
Power supply failure	187
Pressure Equipment Directive	203
Pressure loss	192
Pressure-temperature ratings	192
Process	
Pressure loss	192
Process conditions	
Medium temperature	192
Process connections	200
Product safety	10
Protecting parameter settings	115
R	
Read access	55
Reading measured values	121
Recalibration	168
Reference operating conditions	188
Registered trademarks	8
Remedial measures	
Calling up	132
Closing	132
Remote operation	201
Remote version	
Connecting the connecting cable	34

- Repair 169
 - Notes 169
- Repair of a device 169
- Repeatability 191
- Replacement
 - Device components 169
- Replacing seals 168
- Requirements for personnel 9
- Response time 191
- Return 170
- S**
- Safety 9
- Sensor
 - Mounting 25
- Serial number 13, 14
- Setting the operating language 65
- Settings
 - Adapting the measuring device to the process conditions 125
 - Advanced display configurations 109
 - Analog input 73
 - Device reset 164
 - Device tag 66
 - External compensation 92
 - Gas composition 81
 - Local display 73
 - Low flow cut off 75
 - Managing the device configuration 111
 - Medium 71
 - Medium properties 78
 - Operating language 65
 - Pulse output 96
 - Pulse/frequency/switch output 95, 99
 - Resetting the totalizer 125
 - Restart device 164
 - Sensor adjustment 94
 - Simulation 113
 - Switch output 103
 - System units 67
 - Totalizer 107
 - Totalizer reset 125
- Showing data logging 126
- Signal on alarm 182
- Spare part 169
- Spare parts 169
- Special connection instructions 40
- Standards and guidelines 203
- Status area
 - For operational display 45
 - In the navigation view 47
- Status signals 131
- Storage conditions 17
- Storage temperature 17
- Storage temperature range 191
- Structure
 - Measuring device 11
 - Operating menu 44
- Submenu
 - Administration 164
 - Advanced setup 77
 - Analog inputs 73
 - Configuration backup display 111
 - Data logging 126
 - Device information 166
 - Display 109
 - Events list 163
 - External compensation 92
 - Gas composition 81
 - Medium properties 78
 - Output values 124
 - Overview 45
 - Process variables 121
 - Sensor adjustment 94
 - Simulation 113
 - System units 67
 - Totalizer 123
 - Totalizer 1 to 3 107
 - Totalizer handling 125
- Supplementary documentation 204
- Supply unit
 - Requirements 33
- Supply voltage 33, 186
- Symbols
 - For communication 45
 - For correction 48
 - For diagnostic behavior 45
 - For locking 45
 - For measured variable 45
 - For measurement channel number 45
 - For menus 47
 - For parameters 47
 - For status signal 45
 - For submenu 47
 - For wizard 47
 - In the status area of the local display 45
 - In the text and numeric editor 48
- System design
 - Measuring system 175
 - see Measuring device design
- System integration 60
- T**
- Technical data, overview 175
- Temperature range
 - Ambient temperature range for display 200
 - Storage temperature 17
- Terminal assignment 31, 38
- Terminals 187
- Text editor 48
- Thermal insulation 23
- Tool tip
 - see Help text
- Tools
 - Electrical connection 29
 - Installation 25
 - Transport 17

Transmitter	
Connecting the signal cables	38
Turning the display module	27
Turning the housing	27
Transporting the measuring device	17
Troubleshooting	
General	129
Turning the display module	27
Turning the electronics housing	
see Turning the transmitter housing	
Turning the transmitter housing	27
U	
Use of the measuring device	
Borderline cases	9
Incorrect use	9
see Designated use	
User interface	
Current diagnostic event	162
Previous diagnostic event	162
User roles	45
V	
Version data for the device	60
Vibration resistance	192
Vibrations	24
W	
W@M	168, 169
W@M Device Viewer	12, 169
Weight	
Compact version	
SI units	193
US units	193
Flow conditioner	195
Sensor remote version	
SI units	194
US units	195
Transport (notes)	17
Wizard	
Define access code	115
Display	73
Low flow cut off	75
Medium selection	71
Pulse/frequency/switch output	96, 99, 103
Workplace safety	10
Write access	55
Write protection	
Via access code	115
Via block operation	117
Via write protection switch	116
Write protection switch	116

www.addresses.endress.com
